


2023.12.20/v0.1 Sanam Shakya

KR260 to AWS IoT Greengrass Architecture



This diagram shows the software and hardware architecture used in this tutorial. Kria KR260 board consists of PL Fabric(FPGA) hardware overlay for interfacing LED, switch and I2C sensor. Further it runs AWS Greengrass Core Device Application which publish and subscribe message topics for actuating LED and monitoring sensors and switches. From AWS IoT MQTT Test Client KR260 LED will be controlled through subscribed topic and also publish Switch pressed event to AWS IoT cloud.

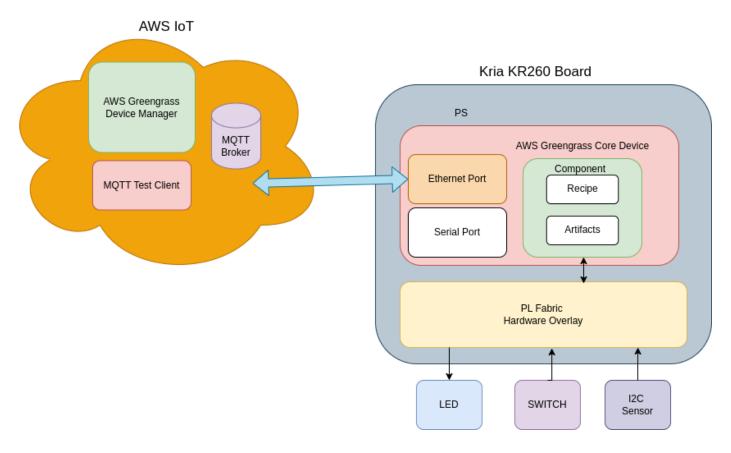

Preparing Ubuntu 22.04 OS for KRIA KR260 board

Download the Ubuntu 22.04 image from the download link

Ubuntu Desktop 22.04 LTS

The version of Ubuntu with up to 10 years of long term support, until April 2032.

Works on:

- Please check the AMD Kria™ Wiki for the platform's latest boot firmware, technical documentation, and the Ubuntu for AMD-Xilinx Devices Wiki for known issues and limitations.

Download 22.04 LTS

Kria™ KR260 Getting Started Guide for Ubuntu 22.04

Kria™ KV260 Getting Started Guide for Ubuntu 22.04

Next, prepare the SD card with the above downloaded Ubuntu image using burning tools like Balena Etcher.

Now boot the KR260 with the SD card with Ethernet and USB to Serial cable connected to board. We will be using Serial console for initial access and debugging and Ethernet network for accessing through SSH and KR260 connected to the internet.

For initial login here are the Login Details:

Username: ubuntu Password: ubuntu

This will ask to change the password. So update the password and login the system.

After successful login, one can access the KR260 device console.

Installing hardware overlay

Get the KR260 firmware folder. It contains:

- kr260 i2c.bit.bin
- kr260 i2c.dtbo
- shell.json

Copy these file to the KR260 board. For firmware to be loaded using xmutil (FPGA manager), one has to copy these file at "/lib/firmware/xilinx".

For this create the folder at "kr260-i2c" at "/lib/firmware/xilinx" and copy the files in "kr260-i2c" folder.

```
cd /lib/firmware/xilinx
sudo mkdir kr260-i2c
sudo cp <kr260-firmware directory>/krc260_i2c* ./
sudo cp <kr260-firmware directory>/shell.json ./
```

Next, check the available fpga firmware using `xmutil listapps` command. `kr260-i2c` will be available in the list.

```
ubuntu@kria:~$ sudo xmutil
sudo] password for ubuntu
                                                                                                                           Base type
                                                                                                                                                                             Active slot
                   k26-starter-kits
                                                                                        k26-starter-kits
ıbuntu@kria:~$ ■
```

Next load the `kr260-i2c` firmware, which contains necessary hardwares(gpio) and interfaces. In our Greengrass Demo we will be using these gpio to trigger the publishing data to AWS Greengrass IoT cloud server and also actuate GPIO on the message received from AWS cloud.

```
sudo xmutil unloadapp
sudo xmutil loadapp kr260-i2c
ubuntu@kria:~$ sudo xmutil unloadapp
emove from slot 0 returns: 0 (0k)
ıbuntu@kria:~$ sudo xmutil loadapp kr260-i2c
 1035.828900] OF: overlay: WARNING: memory
                                              leak will occur if overlay removed, property: /fpga-full/firmware-name
 1035.839040] OF: overlay: WARNING: memory
1035.848277] OF: overlay: WARNING: memory
                                               leak will occur if overlay removed, property: /fpga-full/pid
                                              leak will occur if overlay removed,
                                                                                     property: /fpga-full/resets
 1035.857771] OF: overlay:
                             WARNING: memory
                                               leak will occur if overlay removed, property:
                                                                                                /fpga-full/uid
 1035.867399] OF: overlay:
                             WARNING: memory
                                              leak will occur if overlay removed, property:
                                                                                                   symbols
                                                                                                            /overlay0
                                                                                                   symbols
 1035.877241] OF: overlay: WARNING: memory
                                               leak will occur if overlay removed, property:
                                                                                                             /overlay1
 1035.887085] OF: overlay:
                             WARNING: memory
                                               leak will occur if overlay removed, property:
                                                                                                   symbols__/afi0
                             WARNING: memory
                                                                if overlay
 1035.896579] OF:
                   overlay:
                                               leak will occur
                                                                                                             /clocking0
                                                                           removed,
                                                                                     property:
                                                                                                   symbols
                                                                                                   symbols__/clocking1
 1035.906509] OF: overlay:
                             WARNING: memory
                                               leak will occur if overlay removed, property:
 1035.916438] OF: overlay:
                             WARNING: memory
                                                                                                   symbols
                                                                                    property:
                                                                                                             /overlav2
 1035.926280] OF: overlay: WARNING: memory
                                                                                                   symbols
                                                                                                             /axi_gpio_0
                                               leak will occur
                                                                                    property:
                             WARNING: memory
 1035.936329] OF: overlay:
                                              leak will occur if overlay removed, property:
                                                                                                   symbols__/misc_clk_0
 1035.946346] OF:
                             WARNING: memory
                                              leak will occur
                                                               if overlay removed, property:
                                                                                                   symbols
                                                                                                             /axi_iic_0
                                                                                                   symbols__/misc_clk_1
 1035.956281] OF: overlay: WARNING: memory
                                              leak will occur if overlay removed, property:
 1035.966299] OF: overlay: WARNING: memory leak will occur if overlay removed, property: 1035.976227] OF: overlay: WARNING: memory leak will occur if overlay removed, property:
                                                                                                   symbols__/axi_iic_1
                                                                                                            /axi intc 0
                                                                                                   symbols_
 1035.986243] OF: overlay: WARNING: memory leak will occur if overlay removed, property:
                                                                                                   symbols /axi intc 1
 1036.067970] xiic-i2c 80020000.i2c: IRQ index 0 not found
 r260-i2c: loaded to slot 0
buntu@kria:~$ [ 1036.203709] zocl-drm axi:zyxclmm_drm: IRQ index 32 not found
```

Now to access GPIO in user application, we will be using 'gpiod' library.

Installing gpiod packages

GPIOD packages are required to access the GPIO channels. It also provides python binding for accessing GPIO in python programming. Install the package using apt-get:

```
sudo apt-get install gpiod python3-libgpiod
```

Now we can check the available gpio using gpiod applications:

Using 'gpiodetect' to get availabe gpio:


```
ubuntu@kria:~$ sudo gpiodetect
\gpiochip0 [firmware:zynqmp-firmware:gpio] (4 lines)
gpiochip1 [zynqmp gpio] (174 lines)
gpiochip2 [slg7xl45106] (8 lines)
gpiochip3 [80010000.gpio] (6 lines)
1ubuntu@kria:~$
```

Here `gpiochip3` is the device corresponding to gpio in FPGA and it consists of 6 lines. Further these gpio lines are connected to PMOD 1 such that:

PMOD1-> 1 - gpiochip3 line 0

PMOD1-> 3 - gpiochip3 line 1

PMOD1-> 5 - gpiochip3 line 2

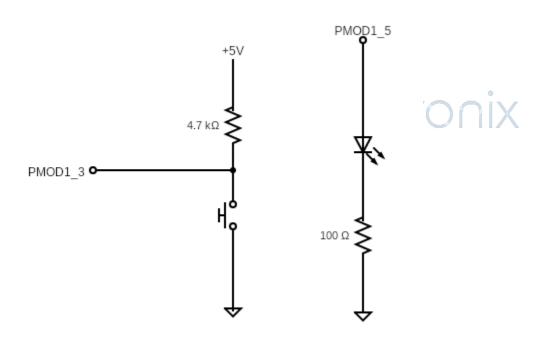

Schematic for LED and Switch Connection


]	11	9	7	5	3	1	PMOD UPPER
	12	10	8	6	4	2	PMOD LOWER
	Vcc	GND	I/O	I/O	I/O	I/O	

PMOD port numbering

AWS IoT user creation


For and non human access to AWS services one has to create a user with required permissions.

- Login to AWS console
- Next go to `Security credentials` link available at root user drop down at top right corner of the AWS console

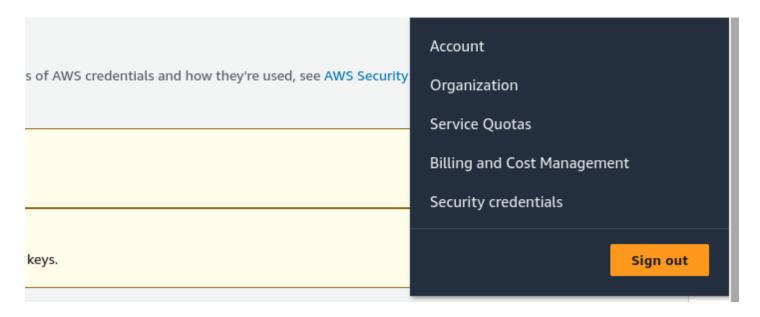

- Next Go to User management page by clicking at the User link at IAM sidebar. This will list the available users.



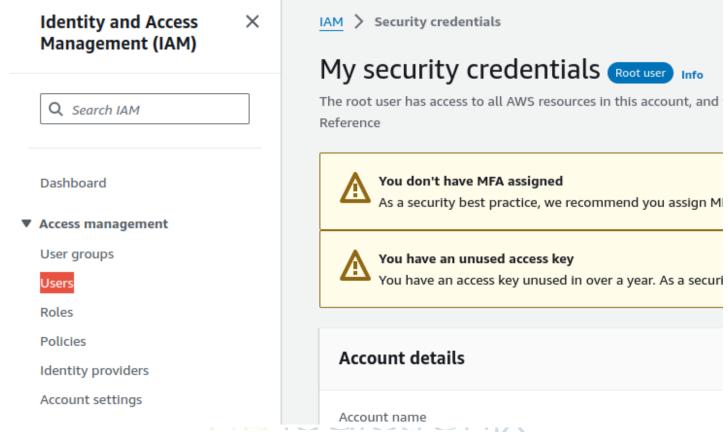

- Now create a new user for KR260 device by clicking the "Create User" button.




This will lead to step wise User creation forms. So fill the User details,

This will lead to step wise User creation forms.


So fill the User details, leave the console access unchecked as user does not have to access the AWS console through web.



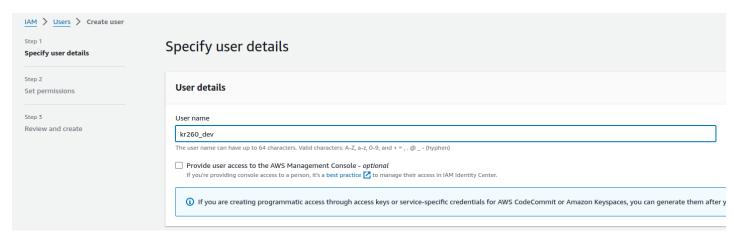


Next, update the Permissions options by attaching following policies:

- AWSGreengrassFullAccess
- IAMFullAccess
- AWSIoTFullAccess
- AmazonS3FullAccess

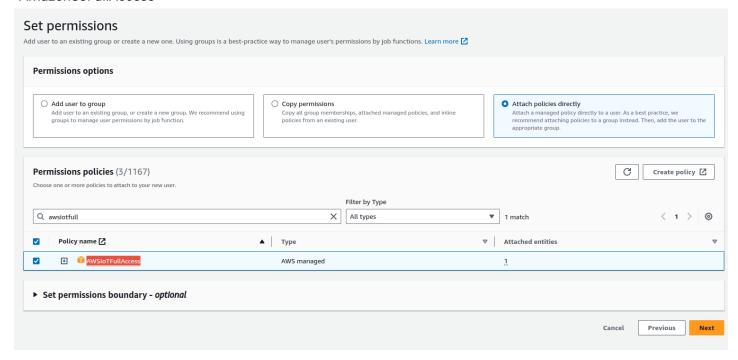


After finishing the above steps click "Create User" to finish the user creation.



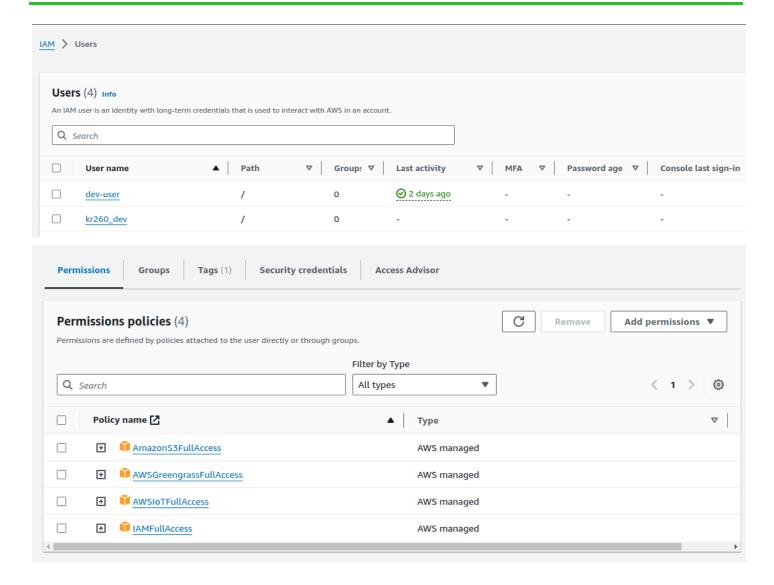


Next get the access token and access key for the user. For this open the user details by clicking on the user link in the above table.

And go to "Security credentials" for creating the Access Key for the user.

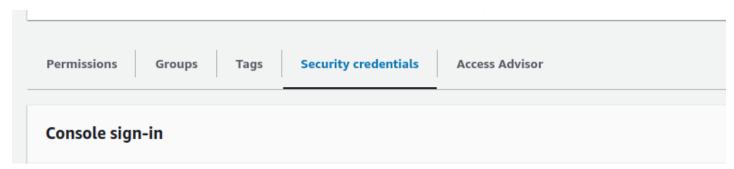


Select access key for command line based access control for user.

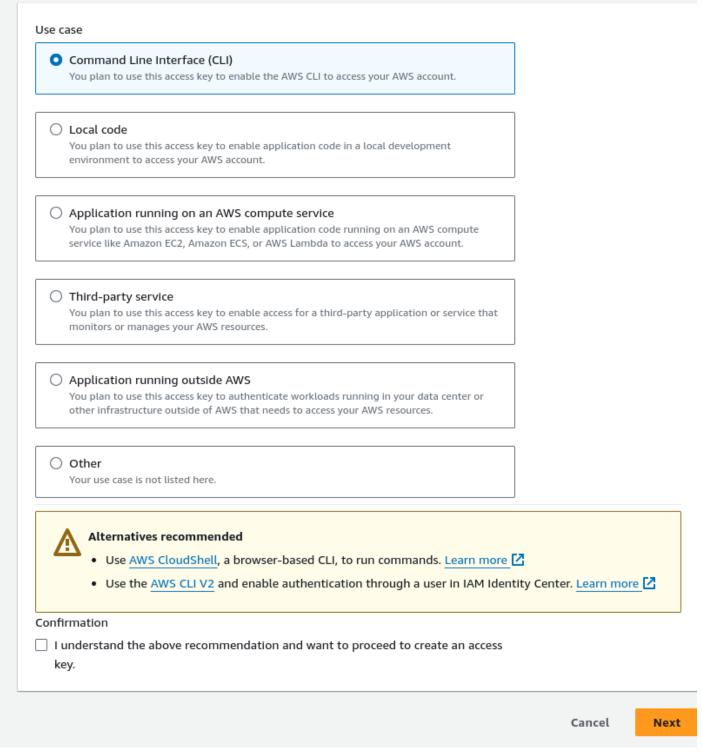


Next save the "Access Key" and "Secreat Access Key". We will need this later while using greengrass CLI in KR260 console or downloading the csv file.

Installing Greengrass CLI

Steps and scripts for installing greengrass device is provided by AWS Greengrass dashboard in AWS web console. So first access the AWS Greengrass IoT page, go to AWS Services -> Internet of Things -> IoT Greengrass link

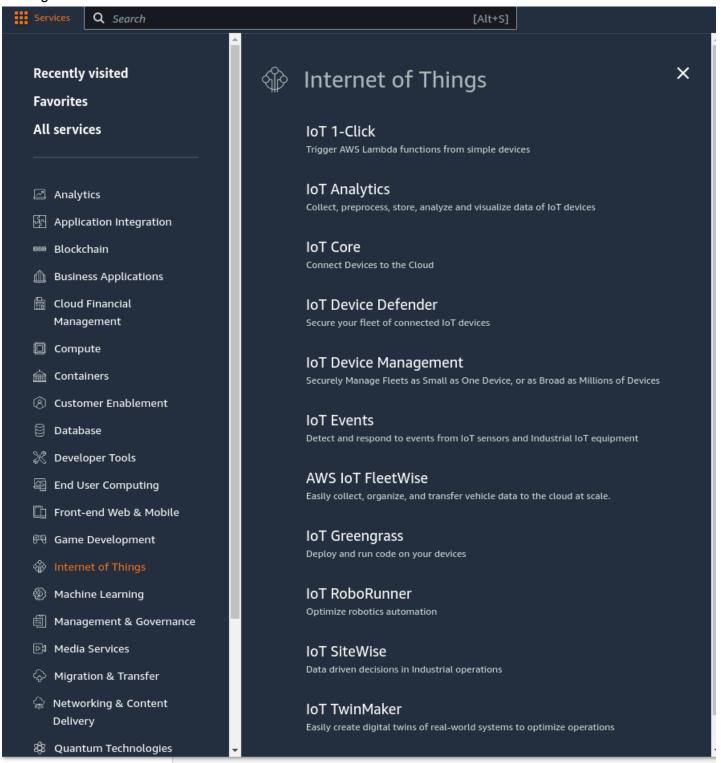




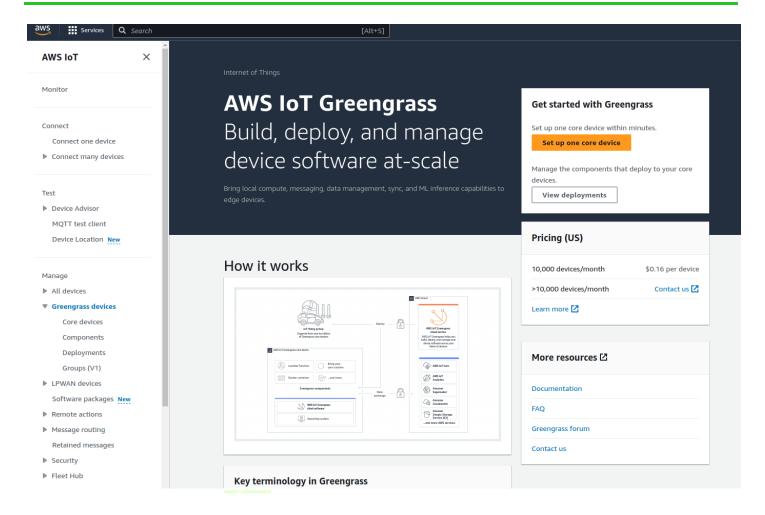

Now click on "Set up one core device" button This will open the Greengrass core device setup page: Here you change the Core device name like 'kr260-dev"



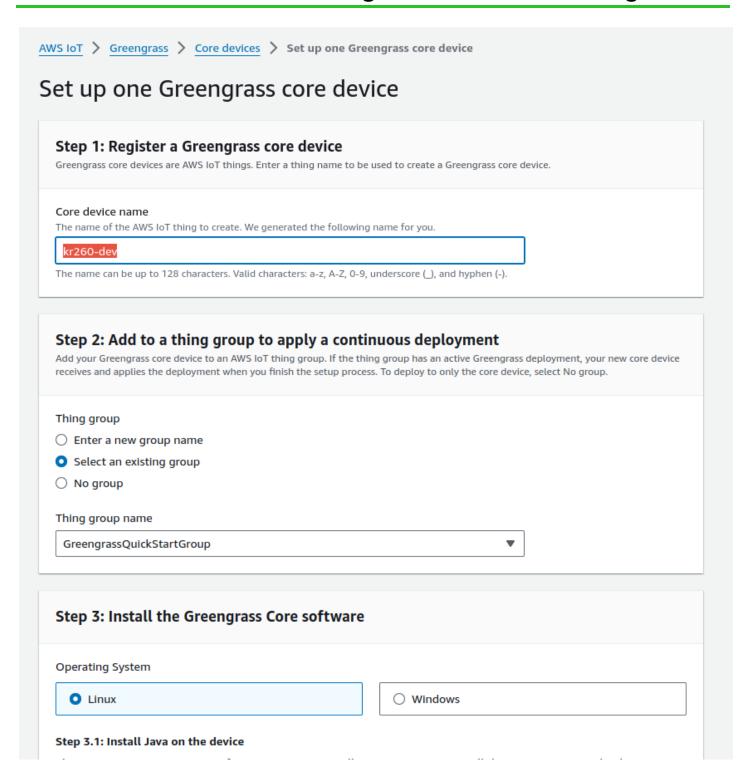

Now in KR260 terminal console run following commands and scripts:

export AWS_ACCESS_KEY_ID=<AWS_ACCESS_KEY_ID> export AWS_SECRET_ACCESS_KEY=<AWS_SECRET_ACCESS_KEY>



Greengrass CLI depends on Java. So to install the dependency run the following:

```
sudo apt install default-jre
sudo apt install default-jdk
```

Download and install Greengrass core software.

```
curl -s https://d2s8p88vqu9w66.cloudfront.net/releases/greengrass-nucleus-latest.zip >
greengrass-nucleus-latest.zip && unzip greengrass-nucleus-latest.zip -d
GreengrassInstaller
```

Next install the Greengrass core device:

```
sudo -E java -Droot="/greengrass/v2" -Dlog.store=FILE -jar
./GreengrassInstaller/lib/Greengrass.jar --aws-region us-east-1 --thing-name kr260-dev
--thing-group-name GreengrassQuickStartGroup --component-default-user ggc_user:ggc_group
--provision true --setup-system-service true --deploy-dev-tools true
```

Here is the console log after running above command:

```
ovisioning AWS IoT resources for the device with IoT Thing Name: [kr260-dev]...

und IoT policy "GreengrassVZIoTThingPolicy", reusing it

eating keys and certificate...

taching policy to certificate...

eating IoT Thing "kr260-dev"...

taching certificate to IoT thing...

ccessfully provisioned AWS IoT resources for the device with IoT Thing Name: [kr260-dev]!

ding IoT Thing [kr260-dev] into Thing Group: [GreengrassQuickStartGroup]...

Thing Group "GreengrassQuickStartGroup" already existed, reusing it

ccessfully added Thing into Thing Group: [GreengrassQuickStartGroup]

tting up resources for aws.greengrass.TokenExchangeService ...

taching TES role policy to IoT thing...

managed IAM policy found, looking for user defined policy...

M policy named "GreengrassVZTokenExchangeRoleAccess" already exists. Please attach it to the IAM role if not already


nfiguring Nucleus with provisioned resource details...

wloading Root CA from "https://www.amazontrust.com/repository/AmazonRootCA1.pem"

eated device configuration
                                                                                           Root CA Trom Interprince (in the configuration of t
```

Now in Greengrass set up page, one can view the Greengrass core devices and find above 'kr260-dev' in the list.



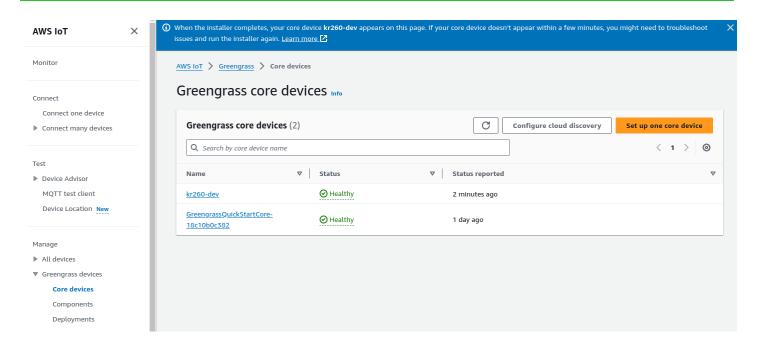

In KR260 terminal one can get the device components by using `greengrass-cli`:

```
ate: FINISHED

nfiguration: {"awsRegion":"us-east-1","componentStoreMaxSizeBytes":"100000000000","deploymentPollingFrequencySeconds":"15","envStage":"prod","fipsMode":"false","fleetStatus":{"periodicStblishIntervalSeconds":"15","sotCredEndpoint":"cluwyavs4wpxxg.credentials.iot.us-east-1.amazonaws.cottDataEndpoint":"a9jc3obcutf8v-ats.iot.us-east-1.amazonaws.com","iotRoleAlias":"GreengrassV2TokenExchangeRoleAlias","jvmOptions":"-Dlog.store=FILE","logging":{},"mqtt":{"spooler":{}},"nent Name: FleetStatusService
rsion: 0.0.0

ate: RUNNING
rfiguration: null
int Name: UpdateSystemPolicyService
sion: 0.0.0

te: RUNNING
figuration: null
int Name: UpdateSystemPolicyService
sion: 0.0.0
sudo /greengrass/v2/bin/greengrass-cli component list
                e: RUNNING
iguration: null
it Name: aws.greengrass.Cli
ion: 2.12.0
e: RUNNING
iguration: {"AuthorizedPosixGroups":null,"AuthorizedWindowsGroups":null}
it Name: TelemetryAgent
ion: 6.0
e: RUNNING
ion: 6.00
e: RUNNING
                 iguration: null
t Name: DeploymentService
ion: 0.0.0
```

We will be adding component to publish and subscribe the topic to the AWS cloud Broker.

Installing the component

Get the `components` folder and copy in the KR260 home directory.

It contains:

artifacts

- com.example.mqtt
 - 1.0.0
 - mqtt.py (This python code published the data on button press and actuates gpio on receiving the data in subscribed topic)

recipe

com.example.mqtt-1.0.0.json

To install the above component run the following in the KR260 terminal:

```
sudo /greengrass/v2/bin/greengrass-cli deployment create \
--recipeDir ~/components/recipe \
--artifactDir ~/components/artifacts \
--merge "com.example.mqtt=1.0.0"
```


```
ubuntu@kria:~$ sudo /greengrass/v2/bin/greengrass-cli deployment create \
--recipeDir ~/components/recipe \
--artifactDir ~/components/artifacts \
--merge "com.example.mqtt=1.0.0"
Local deployment submitted! Deployment Id: 9e8f1be6-63b2-4189-aecc-607197755d22
ubuntu@kria:~$
```

Now check the installed component is in "running state"

```
State: RUNNING
CONFiguration: {"accessControl":{"aws.greengrass.lpc.mqttproxy":{"com.example.mqtt:mqttproxy:1":{"operations":["aws.greengrass#PublishToIoTCore","aws.greengrass#SubscribeToIoTCore"],"policyDescription":"Allocore to mypi/mqtt.","resources":["kr260/mqtt","kr260/button"]}}},"message":"hello"]
Onent Name: TelemetryAgent
Version: 0.6.9
State: RUNNING
Configuration: null
Onent Name: DeploymentService
Version: 0.6.9
State: RUNNING
Configuration: null
Onent Name: DeploymentService
Version: 0.6.9
State: RUNNING
Configuration: null
Onent Name: UpdateSystemPolicyService
Version: 0.6.9
State: RUNNING
Configuration: null
Onent Name: UpdateSystemPolicyService
Version: 0.6.9
State: RUNNING
State: RUNNING
                  ration: null
ame: FleetStatusService
                   kunninu
-ation: {"AuthorizedPosixGroups":null,"AuthorizedWindowsGroups":null}
ume: aws.greengrass.LocalDebugConsole
                                     {"bindHostname":"localhost","httpsEnabled":"true","port":"1441","websocketPort":"1442"
```

Now in aws IoT console, open "MQTT test client" and subscribe to "#"




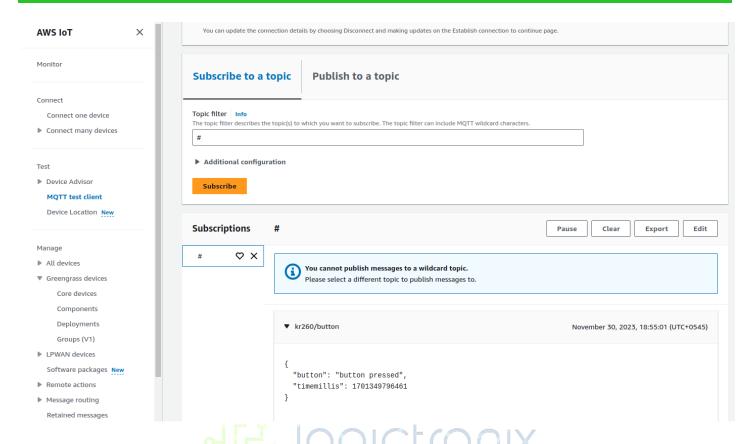

You can see the "button pressed" message once the button is pressed.

Now to control the LED, publish the message to "kr260/mgtt" topic. Here is the screenshot of the message which switch on the LED.



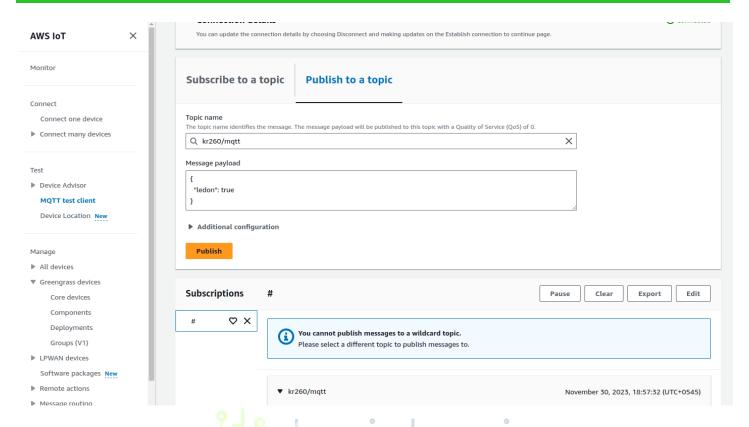

Now to switch off the LED send "false" message in the "kr260/mqtt" topic.

