



SCUTTLE Robot Wiring Guide

[Beagle] Revision 2021.10.26

Copyright SCUTTLE Robot Project 2021 www.SCUTTLErobot.org

SCUTTLE Supports various CPUs

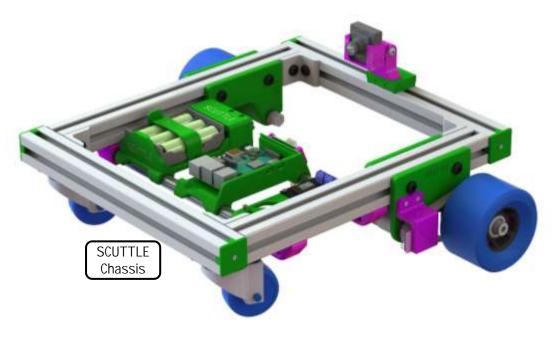

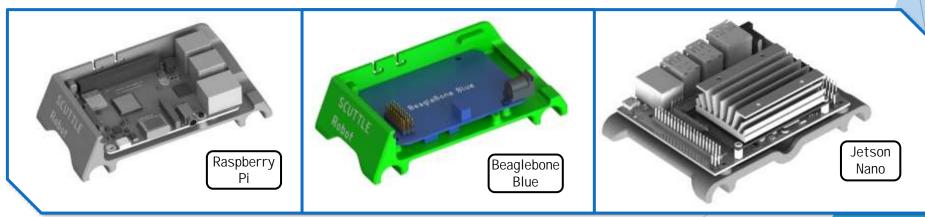



Before You Begin:

Important Info:


To match the beaglebone pins to the pin numbers on the diagram: The tiny white circle on the silkscreen at each connector indicates "pin1"

images of this style are copied directly from the beaglebone schematic

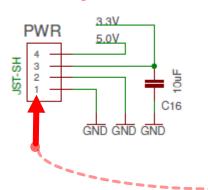


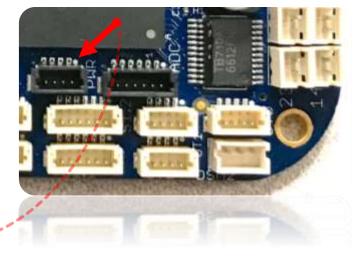



Validated Sensors & Actuators

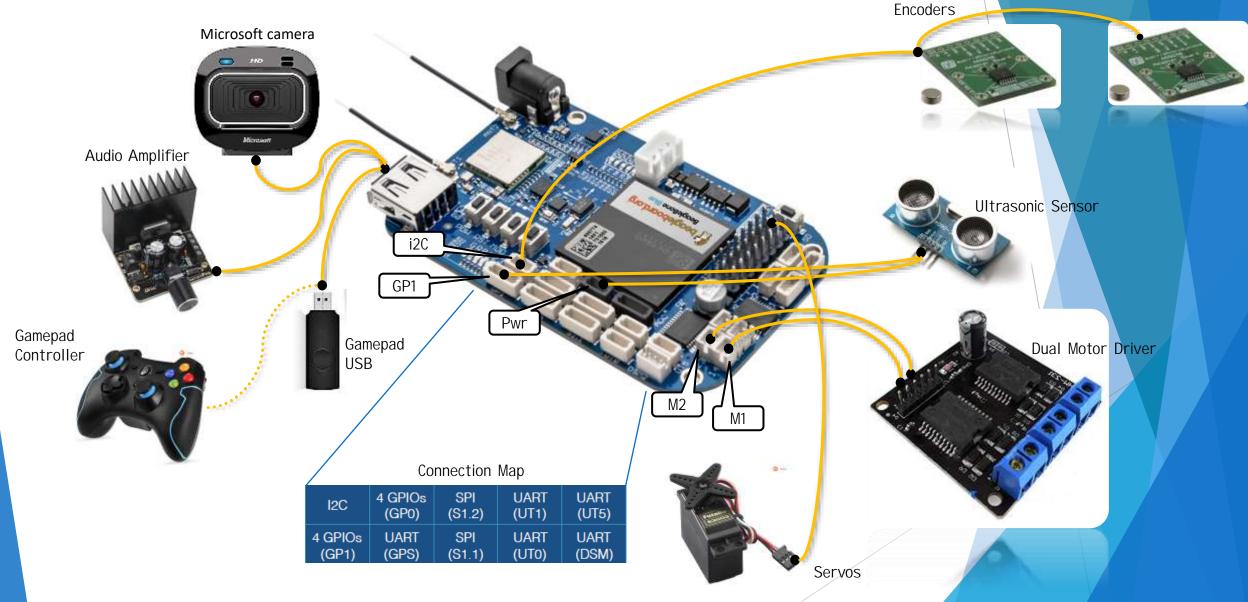

Motor Driver Signal Cables

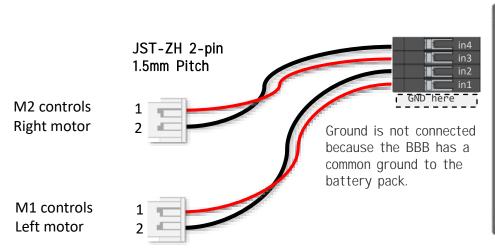

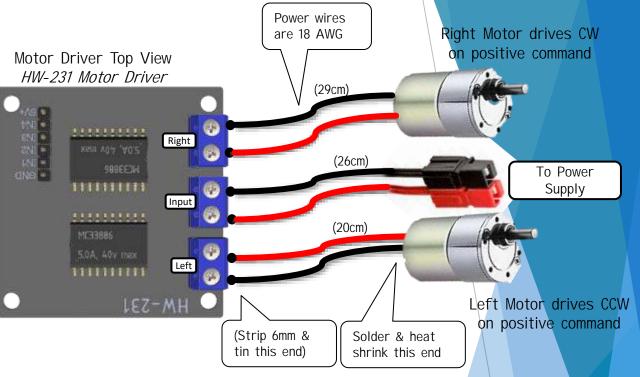

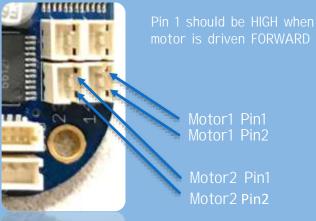

<u>Hardware design convention:</u>
Pin 1 uses the square solder pad




Connector vector image reserved.



H-Bridge L298N (optional)

A versatile and cheap device for delivering variable voltage to low-powered DC actuators.

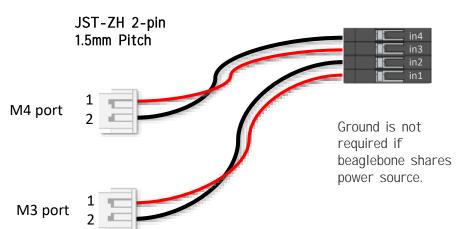


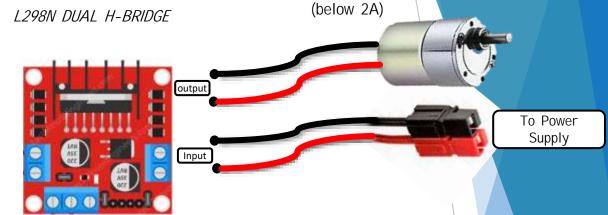


Image (and more great info!) found at LastMinutEngineers.com


Connect any actuator




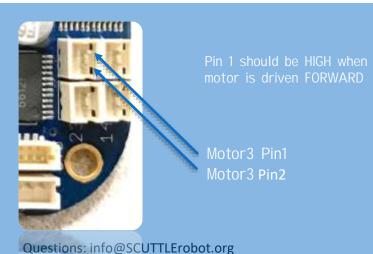


More information about the 5v regulator Found on the datasheet (L78M05)

Ultrasonic Distance Sensor (GPIO)

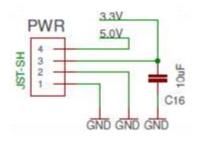

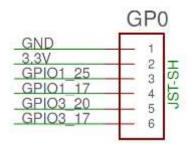


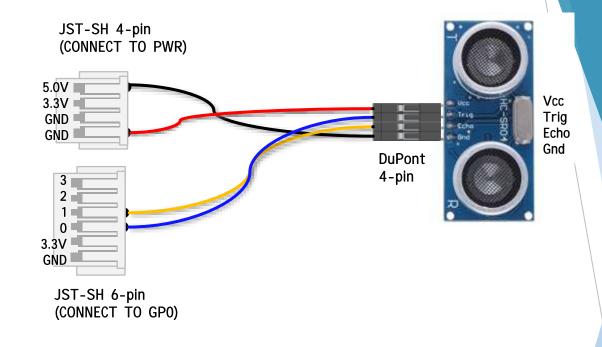

NOTE: For JST connectors out-of-box, the colors are not in the correct order. You need to rearrange them.




Beaglebone to I2C bus cable

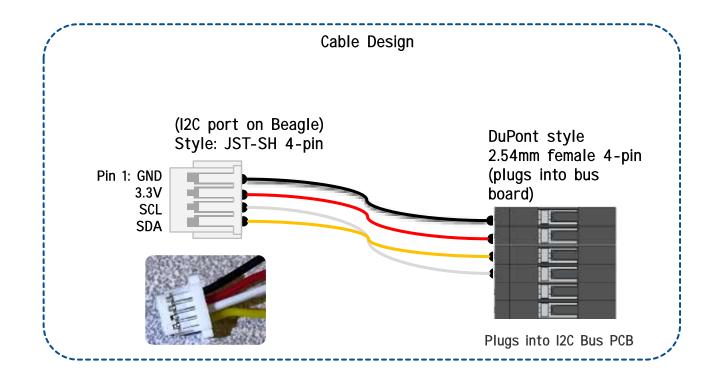

Compass CMPS or CMPS2 (I2C)

Plugs into I2C Bus Board

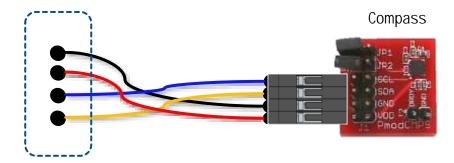

This compass is not necessary since you can access the compass on the beaglebone blue. Be sure to calibrate the compass on the blue since it lies within close proximity of magnetic hardware on the robot.





12C Bus Board

Option A: solder a perfboard / breadboard

The board is made from a breadboard and soldered manually. The board can be cut between rows J & K.


The solder bridges all pins from left to right.

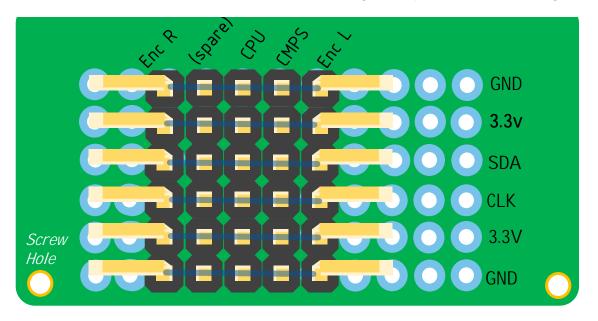

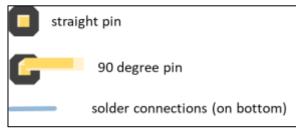


Option B: Order the custom PCB

You can order the custom PCB from JLCPCB.com or any other service. We have posted the design files on our github under <u>electronics hardware</u>.

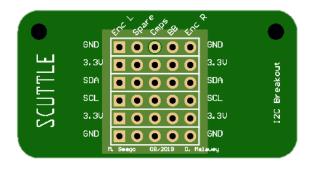


Encoder AMS AS5048 (I2C)

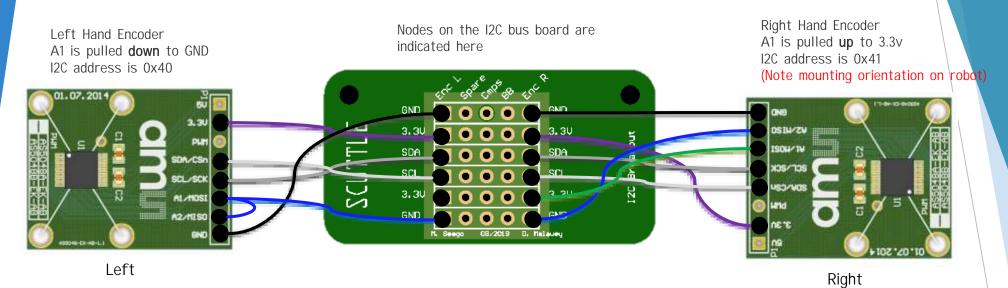


PIN	Left	Right
A1	0 (low)	1 (high)
A2	0 (low)	0 (low)
i2C Address	0x40	0x41


On the Left Hand Encoder PCB, bridge the pins A1 and A2 using solder, to each other.

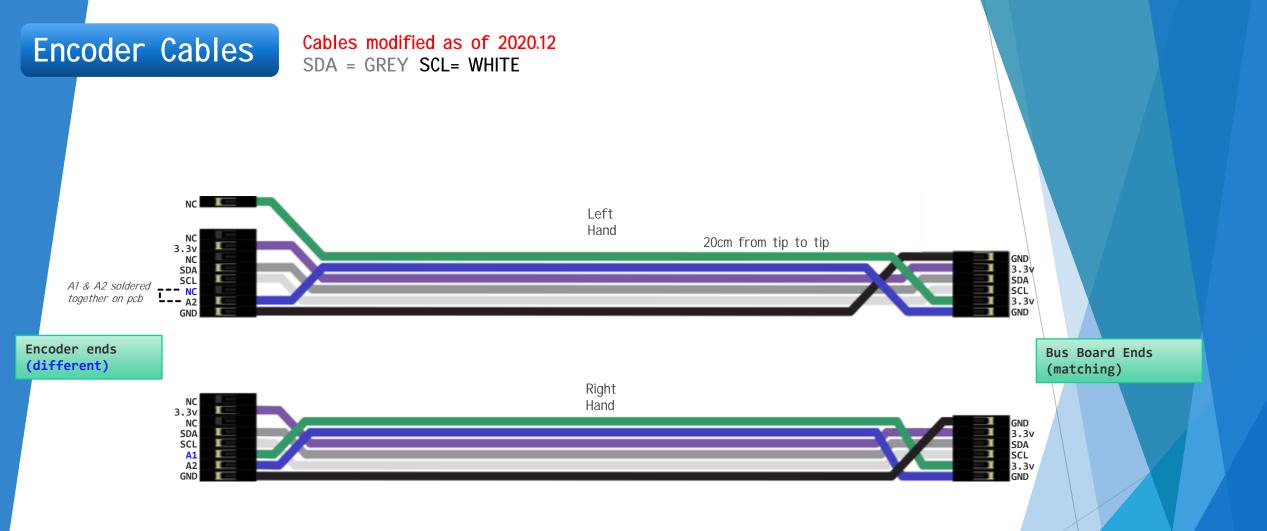

Battery

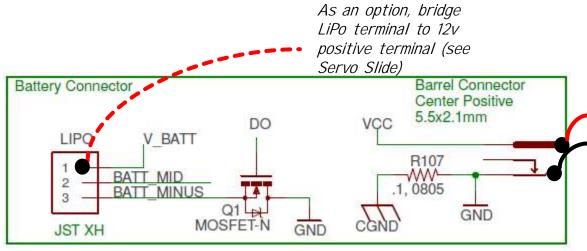




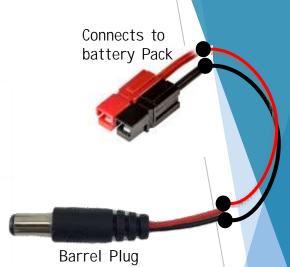

13

Battery Pack (version1 configuration)

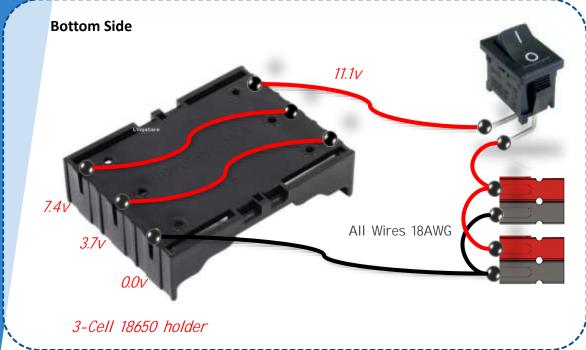

Switch PN:SRB22A2FBBNN Carries 10A max

Two pairs of Anderson connectors are attached here.


This battery pack was used through 2020.09. The wires are appropriate for the CAD designs posted prior to version 2.1.

You may build a battery pack without a Battery Management System (BMS) as shown here, or copy our latest design which includes BMS. See next slide.

Pack version 1 BMS: does not fit Model on GrabCAD



Pack version 2 BMS: optional Model on GrabCAD

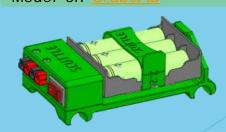

Battery Pack (v2, enhanced with BMS)

The BMS adds several functions to the battery pack. Look out for a Youtube video covering the SCUTTLE BMS soon (-DM 2020.11)

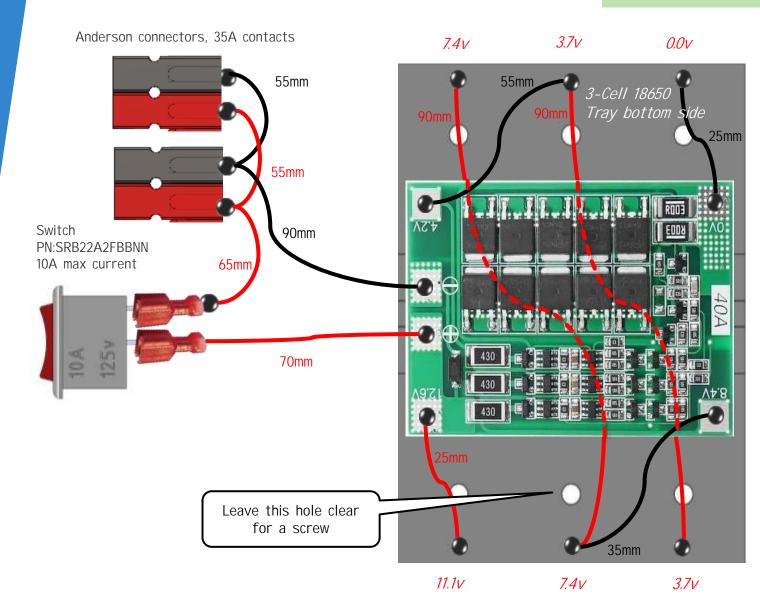



Table of wires to cut (11 total)

to cut (II total)	
Length (mm)	
25, 25	
35, 35	
55 , 55	
65	
70	
90, 90, 90	

Battery Pack Styles


Pack version 1

- BMS: does not fit
- Model on <u>GrabCAD</u>
- Access CAD model from within SCUTTLE assembly

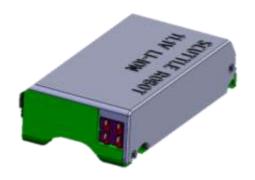


Pack version 2


- BMS: optional
- Model on <u>GrabCAD</u>
- Access the model as a standalone assembly

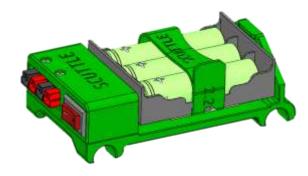

LIDAR



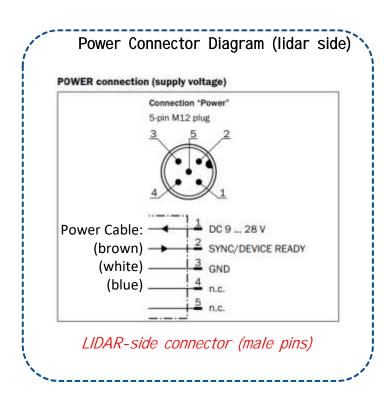

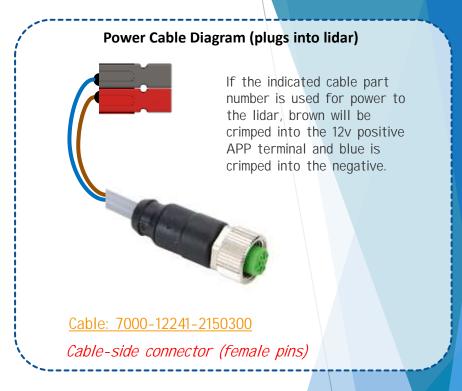

Typical Lidar power consumption: 2.1w

GamePad




Button Behavior:

- not pressed: 0
- Pressed: 1


Axis behavior:

- Right returns positive values
- down returns positive values
- Outputs:
- Analog axes return values between -1 and 1
- These axes reach their limits before the hard-stop.
- To discover the behavior graphically, visit the html graphical test page <u>here</u>


Servos

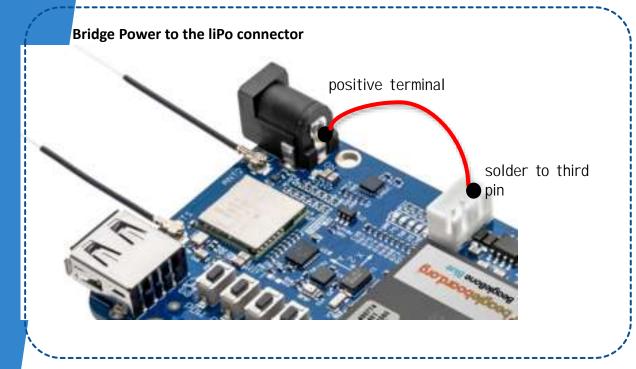


Without a power source available at the positive (third pin) input of the liPo connector, the board has insufficient current available to the servos to drive servos at full torque or to drive multiple servos. A safe fix is to solder the positive terminal of the DC jack to the third pin of the connector shown. When a battery is connected, the pins correspond to 0.0v, 3.7v, and 7.2v terminals of a 2-cell lipo.

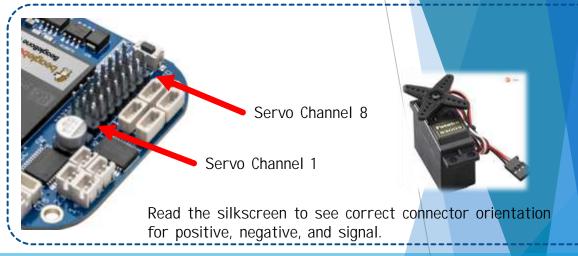

RFID reader

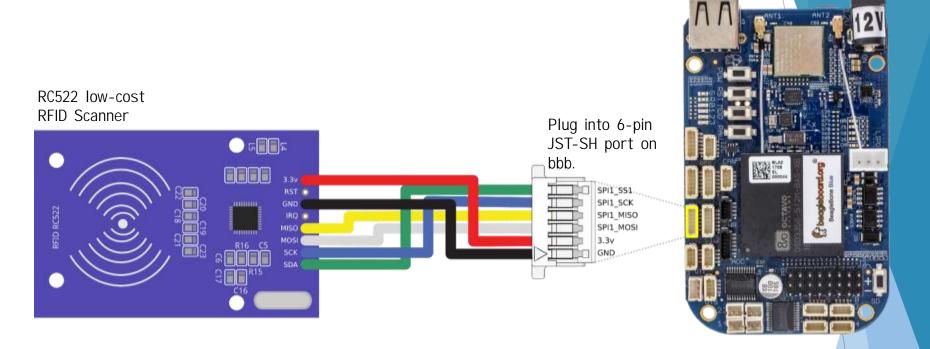

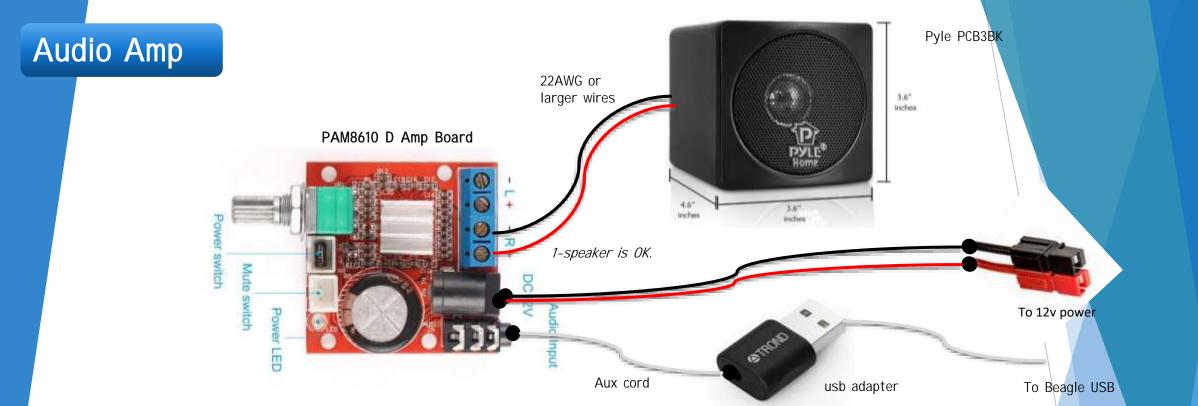


Alternative:

The above setup will support at least 10 watts (this is actually quite loud — easy to hear in a crowded room).

It is also possible to find a speaker which receives BOTH power AND signal over USB. These will be more compact but less powerful. (The speaker shown is 3w max)



GPIO Connections

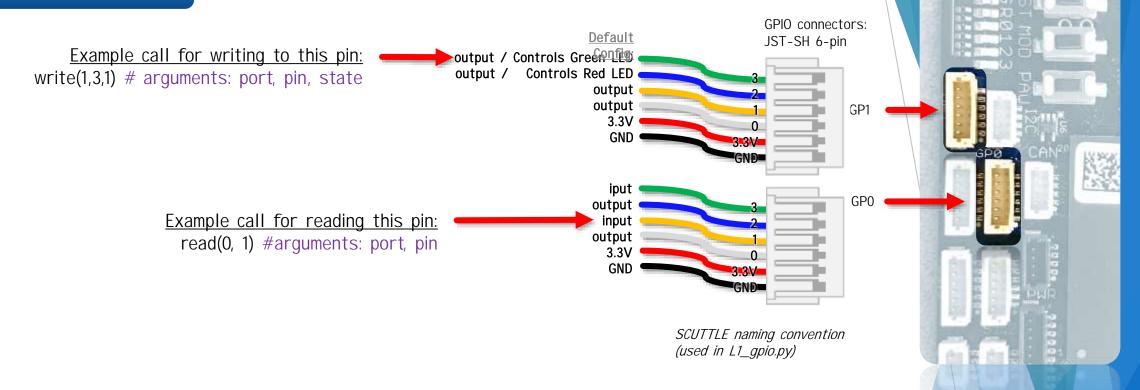


Connector vector image preserved for later use.



Note: JST wires don't come with the proper color sequence. They must be rearranged.

GPIO Example - Relay

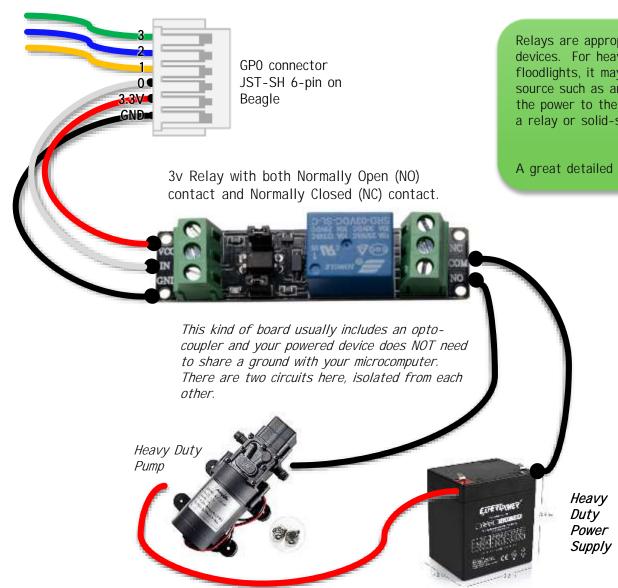

Relays are appropriate for switching of high powered devices. For heavy pumps, motors, fans, or floodlights, it may be best to add a dedicated power source such as an ancilliary battery. Then, control the power to the device using logic-level signals and a relay or solid-state relay.

A great detailed writeup is here.

Twin Relays (tested)

Successfully tested setup 2020.10.10

- · Jumper pin is removed from Vcc pins
- · Send GND and 5v to the device from Beaglebone PWR
- In our test, the 3.3v from Beagle was insufficient to drive the relays
- · Our device was found to be active low although advertised as active high

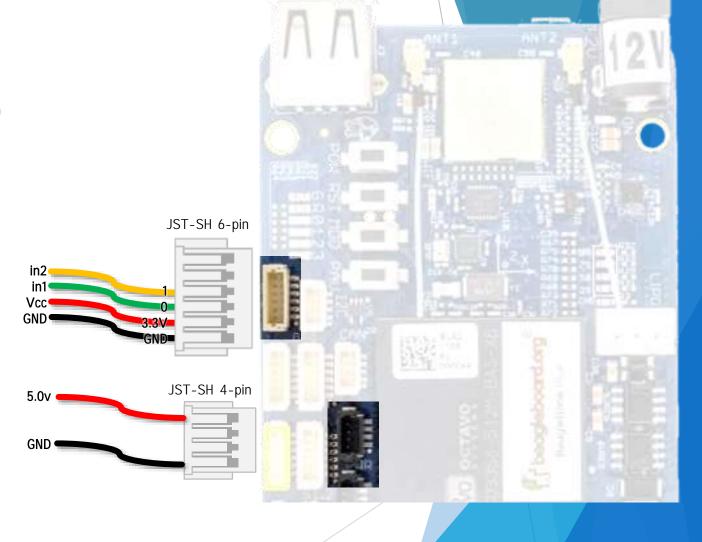


Image credit: Last Minute Engineers (visit)

The problem with active-low relays:


If you have an actuator which must not be actuated until the right moment, (such as a car horn we tested indoors) an active-low device may cause you trouble.

Unless the coil power is provided at the exact moment that the signal pin is driven high, there will be an actuation during startup. Consider this when you shop for a relay.



Wifi Antenna

Users can replace the small onboard antenna with their own selected antenna.

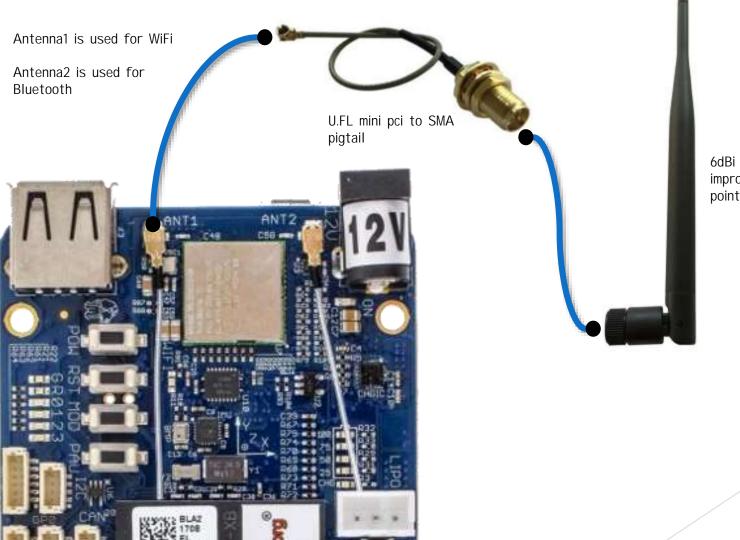

6dBi antenna offers improved RSSI if pointed properly.

