

Service Manual


PACKAGED AIR CONDITIONER
MINI CASSETTE TYPE

■HEAT PUMP MODEL

CS-40U32JP(CU-40C52HP) CS- 80U32JP(CU- 80C52XP)
CS-50U32JP(CU-50C52HP) CS-112U32JP(CU-112C52XP)
CS-71U32JP(CU-71C52HP) CS-140U32JP(CU-140C52XP)
CS-71U32JP(CU-71C52XP) CS-160U32JP(CU-160C52XP)
CS-80U32JP(CU-80C52HP)

■COOLING ONLY MODEL

CS-40U32JP(CU-40C02HP) CS- 80U32JP(CU- 80C02XP)
CS-50U32JP(CU-50C02HP) CS-112U32JP(CU-112C02XP)
CS-71U32JP(CU-71C02HP) CS-140U32JP(CU-140C02XP)
CS-71U32JP(CU-71C02XP) CS-160U32JP(CU-160C02XP)
CS-80U32JP(CU-80C02HP)

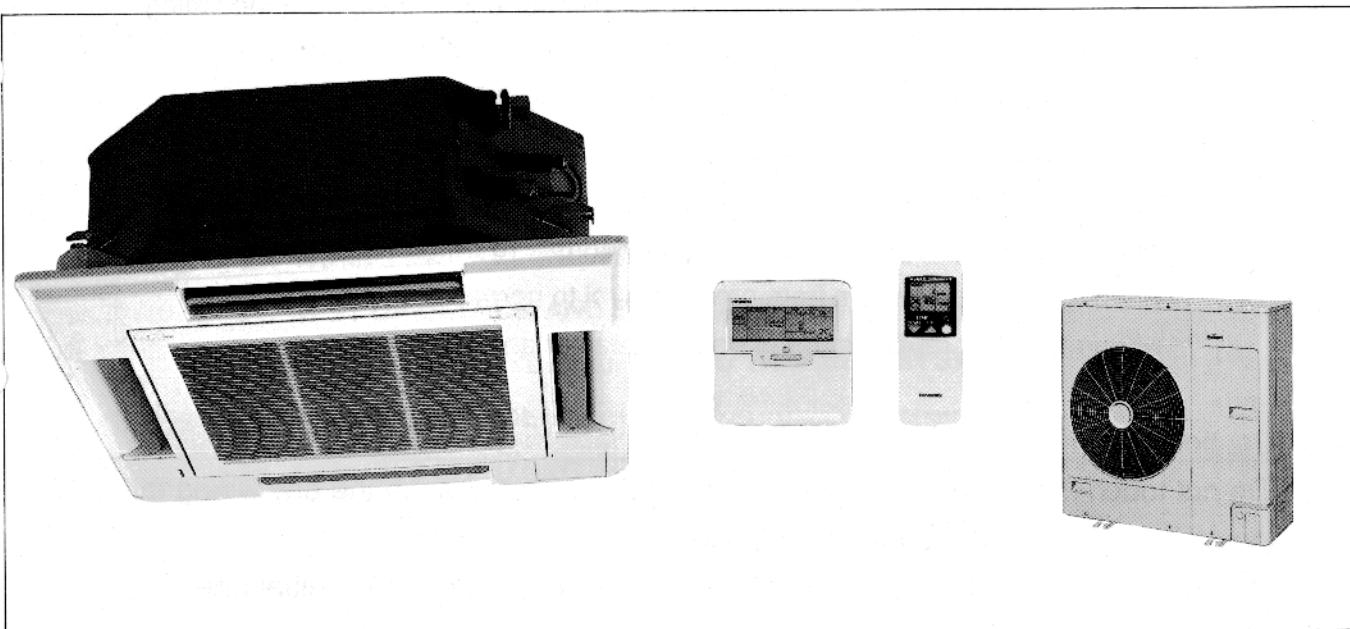

Panasonic

© 1999 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying and
distribution is a violation of law.

■SERVICE INFORMATION

Notice of Address setting for '98 NEW Cassette / NEW Outdoor Unit.

The '98 new Cassette / new Outdoor models is possible to have address setting for twin /triple control or group control by automatically when main power supply switch on.

(Manual address setting is also possible by using Dip switch on Indoor unit P.C.board.)
However, this address setting is only possible when made proper wiring connection and also Indoor unit should be original virgin unit.

[Example of trouble at test operation.]

If found out as following phenomenon at test operation on site, it may have possibility of wrong address setting.

So, please make sure the address setting.

1. LCD display of wired remote controller had not illuminate even if main power supply switch 'on'.
2. LCD display had indicated as normal illumination when power supply switch on, however outdoor unit can not have any operation.
(But, it is necessary to take 3 to 5 minutes for outdoor unit starting from the timing of remote controller on/off switch 'on'.)
3. P.C.board had memorized wrong setting information.
 - ① If main power supply switch on with wrong connection.
 - ② when change the connection or combination of units due to re-installation etc.
 - when change the system from twin to triple(triple to twin).
 - when change the system from group control to normal one to one system.
 - when made the replacement of units as master and slave etc.

[Caution of test operation]

Do not touch the remote controller switch and also not change the any wiring for one minutes from main power supply switch 'on'.

(Because of the unit having automatic address setting during this initial one minutes.)

[Caution during automatic address setting]

When main power supply switched had took 'on', P.C.board had automatically memorized the connected system.


Consequently, when took initial power supply 'on', it will become no interchangeability of units even same type, same capacity unit.

So, it will not be able to connect the unit to other system.

CONTENTS

1. FEATURES	2
2. SPECIFICATIONS (HEAT PUMP TYPE)	7
3. SPECIFICATIONS (COOLING ONLY TYPE)	16
4. TECHNICAL DRAWING	25
5. CIRCUIT DIAGRAM	35
6. OPERATION INSTRUCTION	62
7. REFRIGERATION CYCLE	65
8. OPERATION RANGE	69
9. PIPE LENGTH	71
10. OPERATING CHARACTERISTICS	72
11. FAN PERFORMANCE	73
12. SAFETY DEVICE	76
13. COMPONENT SPECIFICATION	77
14. CAPACITY AND POWER CONSUMPTION	78
15. DISCHARGE AND SUCTION PRESSURE	80
16. POSITION OF THE CENTER GRAVITY	80
17. REACHING DISTANCE	81
18. SOUND DATA	84
19. TWIN AND TRIPLE	90
20. WIRING MISTAKE PREVENTION	98
21. TEST OPERATION AND SELF DIAGNOSIS	99
22. SETTING OF SAVE ENERGY AND THERMISTOR SWITCH	103
23. GROUP CONTROL	104
24. TROUBLE SHOOTING	105
25. EMERGENCY OPERATION	112
26. CONTROL	113
27. ACCESSORY PARTS	126
28. WIRED REMOTE CONTROL UNIT INSTALLAION MANUAL	135
29. WIRELESS REMOTE CONTROL UNIT INSTALLATION MANUAL.....	144
30. INSTALLATION <INDOOR UNIT>	153
31. INSTALLATION <OUTDOOR UNIT>	164
32. REPLACEMENT PARTS	175
33. COOLING CAPACITY PERFORMANCE DATA	207

Variety of excellent features

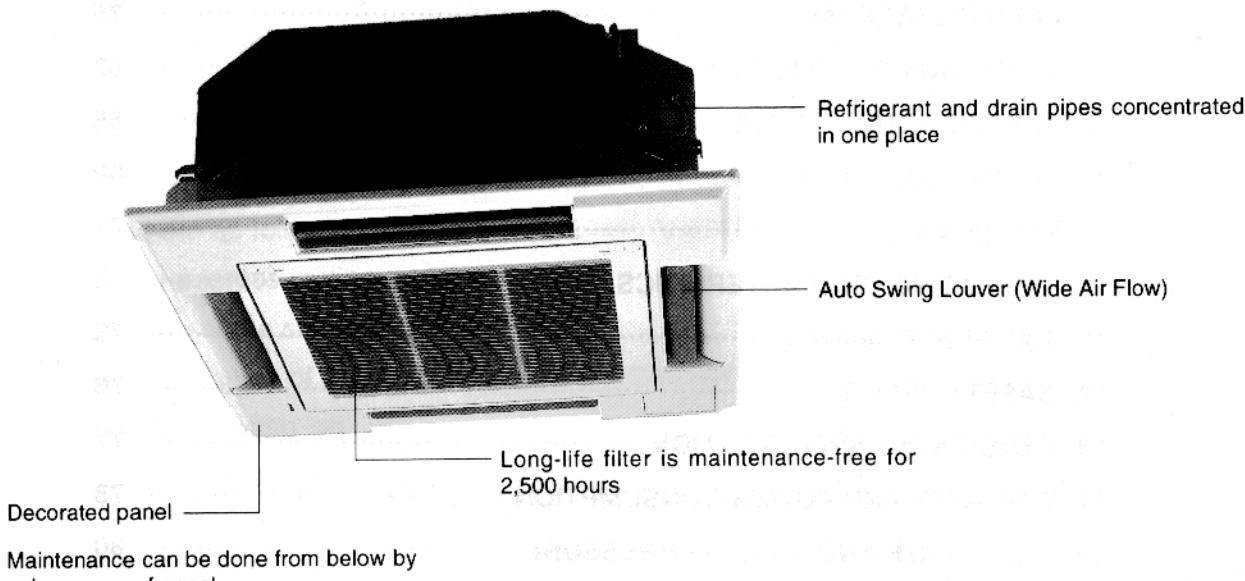

Compact design

Compact design 296 mm height, 710 mm wide and 710 mm depth. (3HP unit body)

Automatic restart function

When the electric power comes back after a power failure, the unit itself automatically restarts the operation in the pre-failure mode.

Auto fan mode (indoor unit)

Auto fan mode is added besides Hi, Me and Lo. It automatically adjusts the fan speed according to the indoor temperature.

Dry mode function

Dry mode can make a comfortable indoor environment at the wet season.

Quiet operation

The sound level is 41dB (A) for 80U model during High Fan speed and suitable for offices, shops, homes etc, where quiet operation is essential.

Auto Swing Louver

The air flow angle can be changed automatically (or manually) to an angle between 10° to 70° using the remote control unit. (The louver is fixed in the up direction during hot starting.)

Low ambient cooling operation.

Cooling is possible to temperatures as low as -5°C.

Automatic changeover function (heat pump models)


The unit automatically switches between cooling and heating in accordance with operating load in order to maintain a comfortable indoor temperature.

Hot start system (heat pump models)

Pipes and drainage

Built-in upward draining mechanism.

New low-noise outdoor units open up a new age - 46 dB for the 80C model!

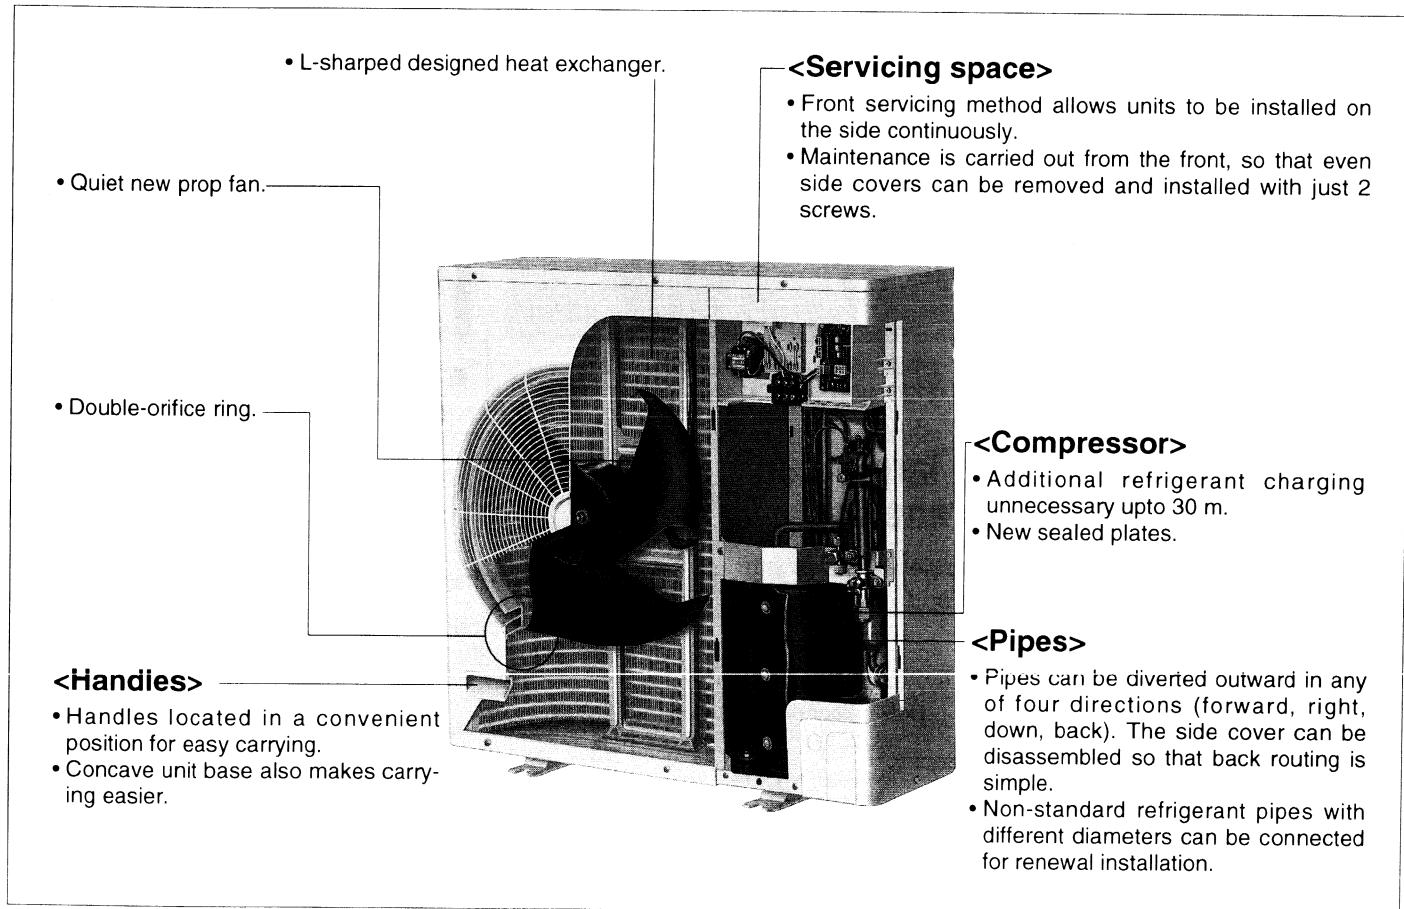


[Product features]


Low-noise design improves comfort in surrounding areas

All models are quieter by 5 - 8 dB (compared to current models).

- (1) The noise-suppressing winglet fan is a result of new research into vane design theory. The unique curved shape suppresses the generation of vortexes, thus reducing air flow noise.
- (2) The adoption of double-orifice rings reduces air passage resistance.
- (3) Strengthening of the noise insulation materials in the compressor and the sealing-in of mechanical noise allows vibration noise to be greatly enclosed and suppressed.
- (4) The heat exchanger has an L-shaped design to allow air to flow more smoothly.
- (5) Noise is automatically reduced further during nighttime operation with lower outdoor air temperatures.

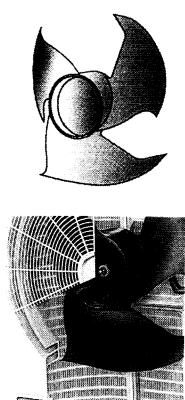

■Noise data (Outdoor Unit)

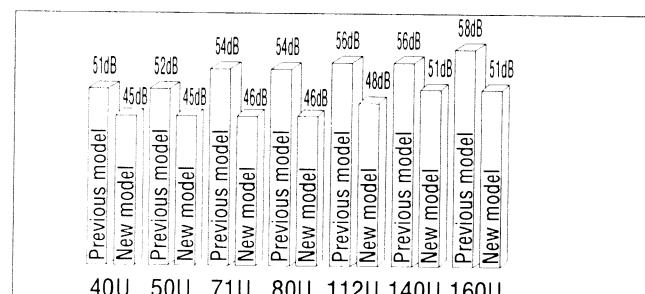


■ High efficiency design

The EER had improved by 4% from previous (3HP) model

Greatly improved workability increases system renewal capability

- Can be installed on the side continuously (Depth 320)
(40C,50C model only: Depth 300)

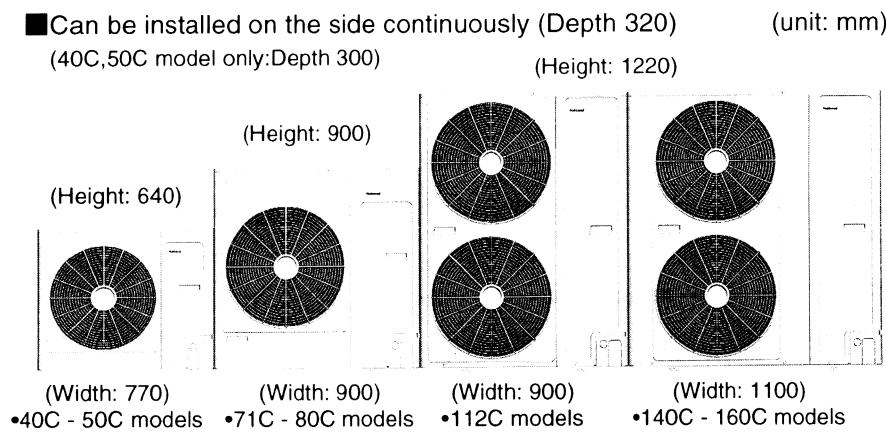

Save space design allows units to be installed on the side continuously


- Servicing after installation can be carried out by removing the front covers.

Long pipe design for refrigerant pipes

- The height difference and equivalent pipe length for 40C and 50C models have been increased by 1.5 times (compared to current models). This allows greater standardization during installation.

Allowable refrigerant pipe lengths (units: m)

	Allowable refrigerant pipe length (m)	40C	50C	71C ~160C
Height difference/ equivalent pipe length comparison	New models	30/30	30/40	30/50
	Previous models	13/20	20/35	30/50

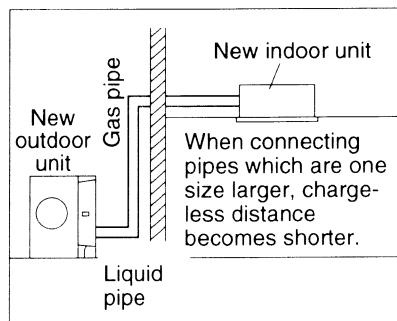

Pipes that are one size larger can also be connected for renewal.

- If renewing the system, existing refrigerant pipes can be utilized so that only the indoor and outdoor units need to be replaced.
 - For example, liquid and gas pipes from 10 years ago can be connected to current pipes with the same size or one size larger. Effective utilization of materials reduces working time and trouble.
- (Adapter sockets are not supplied.)

Internal pipe connection


- Pipes are connected inside the units (inside the side covers), making the final appearance more attractive.
- Pipes can be diverted outward in any of four directions (forward, right, down, back).
- The liquid pipe diameters for 140C to 160C models have been made one size smaller, making installation work much easier.

Liquid-side pipe diameters (mm)

	140C, 160C
New models	9.52
Previous models	12.7

Centralized draining method

- Even when multiple outdoor units are installed to a wall, the drain outlets can be concentrated into a single drain pipe. This makes installation easier and also improves appearances.

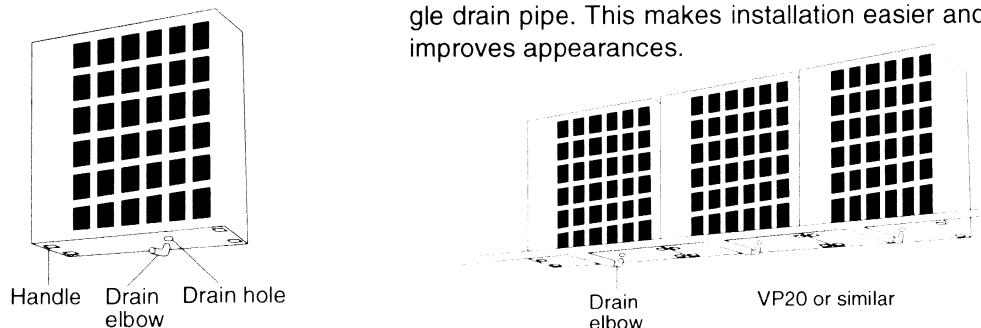


Additional refrigerant charging unnecessary for 30 m

- All models do not require any additional charging of refrigerant for 30 m of pipe length. This makes installation much easier.

Drain water dripping-prevention structure

- The base of the outdoor unit is provided with a single drain hole in order to prevent drain water from leaking out of the unit. By connecting a drain elbow and a discharge pipe, water leakages can be prevented even when the unit is installed to a wall.

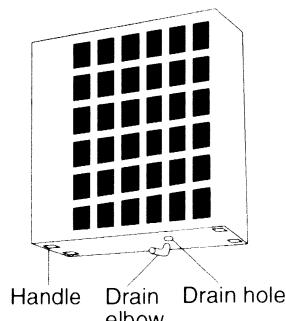


A brand-new control method using the latest in technology

■ Power supply wiring is also easier

Power supply wiring and other wiring tasks can also be carried out much more easily.

- Twin non-polar wires used to connect indoor and outdoor units.
- Adoption of connection error prevention circuits for drive wires and signal wires. If a connection error is made, the relay does not operate and current does not flow to the circuit boards.

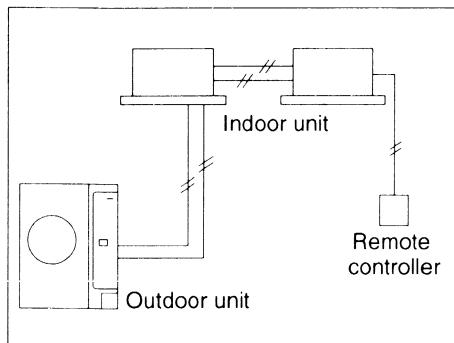

Combinations different models and horsepowers

■ Twin and Triple operation

- Simultaneous air conditioning of wide spaces and corners is possible. Indoor units with different horsepowers can even be used in combination.
- Master units and slave-units can be set automatically in twin and triple systems. No address setting is necessary.
- Multiple indoor units can be operated simultaneously with a single remote control unit. Note that individual operation is not possible.

■ Separate indoor/outdoor unit power supplies

The power supply can be connected to (1) just the outdoor units, or (2) to both the indoor and outdoor units.

■ Easy test operation

Test operation can be carried out for both indoor and outdoor units.


■ Common design for Indoor unit and Remote Controller.

The indoor unit and the wired remote controller are designed as a common specification between Cooling only and Heat Pump models.

■ Automatic setting initialization function

(Remote controller and Indoor unit)

In accordance with the indoor and outdoor units connected and the connection methods, conditions such as the connection configuration (twin or triple format) and remote-control functions such as automatic louver operation and cooling or heating mode are automatically detected and set instantly.

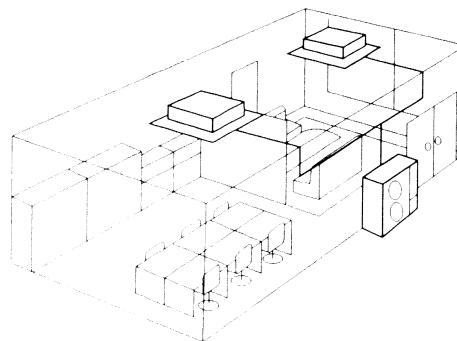

■ Twin and Triple combination table (Capacity ratio)


: Outdoor unit capacity

: Indoor unit capacity

(Figures indicate capacity ratios in combination.)

Outdoor unit	Simultaneous twin operation		Simultaneous triple operation	
	Standard	Horsepower difference	Standard	Horsepower difference
80C				
112C				
140C				
160C				


Wired Remote Controller

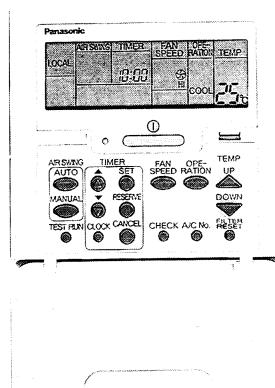

CZ-10RT32P

- The new design includes an easily-visible red pilot lamp. The power can be turned on and off at a single touch, without opening the cover.
- Has a built-in thermistor, allowing indoor temperature detection in accordance with indoor conditions by switching with main unit thermistor.
- Twin non-polar wires make installation work easy. (10 m cable supplied as accessory.)

Wireless Remote Controller

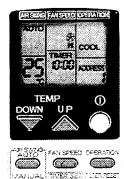

Panasonic

- New design with compact size. (Operation range within approximately 8 m.)

- Built-in timer with ON/OFF time setting (within 24 hours)

	Wired	Wireless
Cooling	CZ-10RT32P	CZ-10RW01P
Heat pump	CZ-10RT32P	CZ-10RW51P

♦ Both above remote controller is packed separately from Indoor unit.

GROUP CONTROL EQUIPMENT.

Wired remote controller control	Group control by one remote controller <ul style="list-style-type: none"> ● All air conditioner units are controlled as a whole by remote control. ● All indoor units operate in the same mode. ● A maximum of 16 units can be connected together (sequential starting) 	<p>Remote-side remote controller Indoor units</p>	[Remote side] ● Optional wired remote controller CZ-10RT32P [Local side] Not needed				
	Twin remote controller separate control <ul style="list-style-type: none"> ● Each indoor unit can be operated by either of the two remote controller. ● Apart from timer setting time, displays for two remote controller are identical. ● Last button pressed has priority (main or slave is set at remote control unit). 	<p>Remote-side remote controller Local-side remote controller Indoor units</p>	[Remote side] ● Optional wired remote controller CZ-10RT32P [Local side] ● Optional wired remote controller CZ-10RT32P				
Common wireless control	Common control/group <ul style="list-style-type: none"> ● Operation is possible using either wired or wireless remote control unit. ● Last button pressed has priority. 	<p>Receptor unit</p> <p>Wired remote controller Wireless remote controller</p>	● Optional wired remote controller and wireless remote controller <table border="1"> <tr> <td>Wired</td> <td>CZ-10RT32P</td> </tr> <tr> <td>Wireless</td> <td>Cooling CZ-10RW01P Heat pump CZ-10RW51P</td> </tr> </table>	Wired	CZ-10RT32P	Wireless	Cooling CZ-10RW01P Heat pump CZ-10RW51P
Wired	CZ-10RT32P						
Wireless	Cooling CZ-10RW01P Heat pump CZ-10RW51P						

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit	
			Main body	CS-40U32JP			CU-40C52HP
			Panel	CZ-02KPU01P			
			Remote Controller	CZ-10RT32P(wired) CZ-10RW51P(wireless)			
(1) Cooling Capacity			kW kcal/h BTU/h	4.00 3,440 13,760			
(2) Cooling Capacity			kW kcal/h BTU/h	4.10 3,530 14,120			
(3) Heating Capacity			kW kcal/h BTU/h	4.50 3,870 15,480			
Refrigerant Charge-less			m	30			
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 13 459	Me 12 424	Lo 10 353	Hi 32 1130
Outside Static Pressure			mmAq in.W.G.	0 0			—
Air Inlet				Lower sided Suction			Back sided Suction
Air Outlet				Lower sided blow-out			Front blow-out
Duct Connection				*1 Available			—
Outside Dimension(H×W×D)			mm inch	(266+28)×750×750 (10-15/32+1-3/32)×29-17/32×29-17/32			640×790×300 25-3/16×31-3/32×11-13/16
Net Weight			kg lbs	21.5(17.0+4.5) 47(37+10)			49 108
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 12.7(1/2) Flared type O.D φ 6.35(1/4) Flared type			
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)			ID 20×1
Compressor	Type, number of set			—			Hermetic (Rotary), 1
	Starting Method			—			Direct on-line starting
	Capacity Control		%	—			0.100
	Motor	Type		—			2-pole signal phase induction motor
	Input	kW		—			Cool/Heat 1.45/1.34
	Rated Output	kW		—			1.2
Fan	Type, number of set		unit	Turbo fan-1			Prop fan-1
	Air Volume Control			Three-Step and Auto mode(Remote Controller)			—
	Motor	Type		6-pole single phase induction motor			6-pole single phase induction motor
	Input	kW		0.09			0.07
	Rated Output	kW		0.035			0.035
Air-heat exchanger				Louver-fin type			Louver-fin type
Refrigerant Control				Capillary tube			Capillary tube
Refrigeration oil(Charged)			ℓ	—			ATMOS M60(0.65)
Refrigerant(Charged)			kg lbs	—			R-22(2.0) (4.4)
Running Adjustment	Control Switch			Wireless or Wired Remote Controller			—
	Room Temperature			Thermostat(Main Body)			—
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)
Safety Devices				Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans			
External Finish				ABS resin(Decorative panel)			Powder coating
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)			—
Noise level			dB(A)	Hi 38	Me 36	Lo 34	Hi 45

(1) Cooling capacities are based on indoor temp. 27°C D.B.(80.6°F D.B.), 19.0°C W.B.(66.2°F W.B.), and outdoor air temp.

35°C CD.B.(95°F FD.B.), 24°C CW.B.(75.2°F FW.B.)

(2) Cooling capacities are based on indoor temp. 27°C CD.B.(80.6°F FD.B.), 19.0°C CW.B.(66.2°F FW.B.) and outdoor air temp.

32°C CD.B.(89.5°F FD.B.), 24°C CW.B.(75.2°F FW.B.)

(3) Heating capacities are based on indoor temp. 20°C CD.B.(68.0°F FD.B.) and outdoor air temp. 7°C CD.B.(44.6°F FD.B.), 6°C CW.B.(42.8°F FW.B.)

(4)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(5) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS-40U32JP, CU-40C52HP		
			Condition by JIS B 8616		
Volts	V		220	230	240
Phase			Single	Single	Single
Power Consumption	kW	Cool	1.50	1.50	1.50
		Heat	1.40	1.40	1.40
Running Current	A	Cool	7.4	7.2	7.0
		Heat	7.0	6.8	6.6
Starting Current	A		22.9	23.9	24.8
		Cool	92.6	90.9	89.4
Power Factor	%	Cool	90.9	89.3	88.0
		Heat			

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC. 1~220V, 230V, 240V 50Hz

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL	Indoor unit			Outdoor unit	
		Main body	CS-50U32JP		CU-50C52HP	
		Panel	CZ-02KPU01P			
(1) Cooling Capacity		kW kcal/h BTU/h	5.20 4,500 18,000			
(2) Cooling Capacity		kW kcal/h BTU/h	5.35 4,620 18,480			
(3) Heating Capacity		kW kcal/h BTU/h	5.55 4,800 19,200			
Refrigerant Charge-less		m	30			
Standard Air Volume for High. Medium and Low Speed		m³/min cfm	Hi 13 459	Me 12 424	Lo 10 353	
Outside Static Pressure		mmAq in W.G.	0 0		—	
Air Inlet			Lower sided Suction		Back sided Suction	
Air Outlet			Lower sided blow-out		Front blow-out	
Duct Connection			*1 Available			
Outside Dimension(H×W×D)		mm inch	(266+28)×750+750 (10-15/32+1-3/32)×29-17/32×29-17/32		640×790×300 25-3/16×31-3/32×11-13/16	
Net Weight		kg lbs	21.5(17.0+4.5) 47(37+10)		52 115	
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 12.7(1/2) Flared type O.D φ 6.35(1/4) Flared type		
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)	ID 20×1	
Compressor	Type, number of set			—	Hermetic (Rotary), 1	
	Starting Method			—	Direct on-line starting	
	Capacity Control	%		—	0.100	
	Motor	Type		—	2-pole signal phase induction motor	
		Input	kW	—	Cool/Heat 1.71/1.66	
		Rated Output	kW	—	1.5	
Fan	Type, number of set	unit	Turbo fan-1		Prop fan-1	
	Air Volume Control		Three-Step and Auto mode(Remote Controller)		—	
	Motor	Type	6-pole single phase induction motor		6-pole single phase induction motor	
		Input	kW	0.09	0.07	
		Rated Output	kW	0.035	0.035	
Air-heat exchanger			Louver-fin type		Louver-fin type	
Refrigerant Control			Capillary tube		Capillary tube	
Refrigeration oil(Charged)		ℓ	—		ATMOS M60(0.67)	
Refrigerant(Charged)		kg lbs	—		R-22(2.2) (4.9)	
Running Adjustment	Control Switch		Wireless or Wired Remote Controller		—	
	Room Temperature		Thermostat(Main Body)		—	
Anti-vibration and Anti-sound Materials			Cabinet(urethane fram attached)		Compressor(Anti-vibration rubber)	
Safety Devices			Internal protector for compressor, Internal thermostat F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans			
External Finish			ABS resin(Decorative panel)		Powder coating	
Air Filter(Factory set)			Polypropylene regin Honeycomb(Washable)		—	
Noise level	dB(A)		Hi 39	Me 37	Lo 35	
					Hi 45	

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3) Heating capacities are based on indoor temp.20° CD.B.(68.0° FD.B.) and outdoor air temp.7° CD.B.(44.6° FD.B.), 6° CW.B.(42.8° FW.B.)

(4)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(5) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL	CS-50U32JP, CU-50C52HP		
		Condition by JIS B 8616		
Volts	V	220	230	240
Phase		Single	Single	Single
Power Consumption	kW	Cool	1.87	1.87
		Heat	1.82	1.82
Running Current	A	Cool	8.8	8.5
		Heat	8.6	8.3
Starting Current	A		45.5	47.6
Power Factor	%	Cool	96.5	95.7
		Heat	96.2	95.3

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 1~220V,230V,240V 50Hz

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit			
			Main body	CS-71U32JP		CU-71C52HP			
			Panel	CZ-02KPU01P					
			Remote Controller	CZ-10RT32P(wired) CZ-10RW51P(wireless)					
(1) Cooling Capacity			kW kcal/h BTU/h	6.50 5,600 22,400					
(2) Cooling Capacity			kW kcal/h BTU/h	6.70 5,800 23,200					
(3) Heating Capacity			kW kcal/h BTU/h	6.95 6,000 24,000					
Refrigerant Charge-less			m	30					
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 17 600	Me 15 530	Lo 13 459	Hi 50 1766		
Outside Static Pressure			mmAq in W.G.	0 0		—			
Air Inlet				Lower sided Suction		Back sided Suction			
Air Outlet				Lower sided blow-out		Front blow-out			
Duct Connection				*1 Available		—			
Outside Dimension(H×W×D)			mm inch	(296+28)X750+750 (10-21/32+1-3/32)X32-9/32X32-9/32		900X900X320 35-7/16X35-7/16X12-19/32			
Net Weight			kg lbs	24(19.5+4.5) 53(43+10)		71 156			
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D.Φ15.88(5/8) Flared type O.D.Φ6.35(1/4) Flared type					
	Drain		mm	O.D.Φ32(Accessory drain hose: I.D.Φ32)		ID 20X1			
Compressor	Type, number of set			—		Hermetic (Rotary), 1			
	Starting Method			—		Direct on-line starting			
	Capacity Control		%	—		0.100			
	Motor	Type		—		2-pole single phase induction motor			
		Input	kW	—		Cool/Heat 2.3/2.17			
Fan	Rated Output		kW	—		1.9			
	Type, number of set		unit	Turbo fan-1		Prop fan-1			
	Air Volume Control			Three-Step and Auto mode(Remote Controller)		—			
	Motor	Type		6-pole single phase induction motor		6-pole single phase induction motor			
		Input	kW	0.09		0.11			
	Rated Output		kW	0.035		0.050			
	Air-heat exchanger			Louver-fin type		Louver-fin type			
	Refrigerant Control			Capillary tube		Capillary tube			
	Refrigeration oil(Charged)		ℓ	—		DIAMOND MS32(N-1) (1.3)			
	Refrigerant(Charged)		kg lbs	—		R-22(2.7) (6.0)			
Running Adjustment	Control Switch			Wireless or Wired Remote Controller		—			
	Room Temperature			Thermostat(Main Body)		—			
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)		Compressor(Anti-vibration rubber)			
Safety Devices				Internal protector for compressor, Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish				ABS resin(Decorative panel)		Powder coating			
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)		—			
Noise level			dB(A)	Hi 41	Me 39	Lo 37	Hi 46		

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3) Heating capacities are based on indoor temp.20° CD.B.(68.0° FD.B.) and outdoor air temp.7° CD.B.(44.6° FD.B.), 6° CW.B.(42.8° FW.B.)

(4)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(5) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS-71U32JP, CU-71C52HP		
			Condition by JIS B 8616		
Volts	V		220	230	240
Phase			Single	Single	Single
Power Consumption	kW	Cool	2.50	2.50	2.50
		Heat	2.37	2.37	2.37
Running Current	A	Cool	12.7	12.2	11.7
		Heat	12.2	11.7	11.2
Starting Current	A		63	63	63
Power Factor	%	Cool	89.5	89.1	89.0
		Heat	88.3	88.1	88.2

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 1~220V, 230V, 240V 50Hz

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit			
			Main body	CS-71U32JP			CU-71C52XP		
			Panel	CZ-02KPU01P					
	Remote Controller		CZ-10RT32P(wired) CZ-10RW51P(wireless)						
(1) Cooling Capacity	kW kcal/h BTU/h			6.50 5,600 22,400					
(2) Cooling Capacity	kW kcal/h BTU/h			6.70 5,800 23,200					
(3) Heating Capacity	kW kcal/h BTU/h			6.95 6,000 24,000					
Refrigerant Charge-less	m			30					
Standard Air Volume for High, Medium and Low Speed	m³/min cfm	Hi 17 600	Me 15 530	Lo 13 459	Hi 50 1766				
Outside Static Pressure	mmAq in.W.G.	0 0			—				
Air Inlet				Lower sided Suction			Back sided Suction		
Air Outlet				Lower sided blow-out			Front blow-out		
Duct Connection				*1 Available			—		
Outside Dimension(H×W×D)	mm inch	(296+28)×750×750 (11-21/32+1-3/32)×32-9/32×32-9/32			900×900×320 35-7/16×35-7/16×12-19/32				
Net Weight	kg lbs	24(19.5+4.5) 53(43+10)			71 156				
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D.Φ 15.88(5/8) Flared type O.D.Φ 6.35(1/4) Flared type					
	Drain	mm			O.D.Φ 32(Accessory drain hose: I.D.Φ 32)		ID 20×1		
Compressor	Type, number of set				—				
	Starting Method				—				
	Capacity Control	% Motor			— —				
	Type				—				
	Input	kW			—				
Fan	Rated Output	kW			—				
	Type, number of set	unit			Turbo fan-1				
	Air Volume Control				Three-Step and Auto mode(Remote Controller)				
	Motor	Type				2-pole 3-phase induction motor			
		Input	kW			Cool/Heat 2.28/2.15			
Air-heat exchanger	Rated Output	kW			—				
	Type				—				
	Motor	Input	0.09			0.11			
		Rated Output	0.035			0.050			
	Type				Louver-fin type				
Refrigerant Control	Air Volume Control				Capillary tube				
	Refrigeration oil(Charged)	unit			—				
		kg lbs			—				
	Refrigerant(Charged)				DIAMOND MS32(N-1) (1.3)				
	Type				R-22(2.7) (6.6)				
Running Adjustment	Control Switch				Operation Switch (Remote Controller)				
	Room Temperature				Thermostat(Main Body)				
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)		
Safety Devices				Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish				ABS resin(Decorative panel)			Powder coating		
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)			—		
Noise level		dB(A)	Hi 41	Me 39	Lo 37	Hi 46			

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3) Heating capacities are based on indoor temp.20° CD.B.(68.0° FD.B.)and outdoor air temp.7° CD.B.(44.6° FD.B.),6° CW.B.(42.8° FD.B.)

(4)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(5) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS 71U32JP, CU 71C52XP			
			Condition by JIS B 8616			
Volts	V		380	400	415	
Phase			3N	3N	3N	
Power Consumption	kW	Cool	2.50	2.50	2.50	
		Heat	2.37	2.37	2.37	
Running Current	A	Cool	4.70	4.50	4.20	
		Heat	4.20	4.10	4.00	
Starting Current	A		22	22	22	
Power Factor	%	Cool	80.8	80.7	82.8	
		Heat	85.7	83.4	82.4	

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor

Panasonic Power source AC. 3N~380V,400V,415V 50Hz

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL	Indoor unit			Outdoor unit			
		Main body	CS-80U32JP					
		Panel	CZ-04KPU01P					
		Remote Controller	CZ-10RT32P(wired) CZ-10RW51P(wireless)					
(1) Cooling Capacity		kW kcal/h BTU/h		7.30 6,300 25,200				
(2) Cooling Capacity		kW kcal/h BTU/h		7.60 6,550 26,200				
(3) Heating Capacity		kW kcal/h BTU/h		7.75 6,700 26,800				
Refrigerant Charge-less		m		30				
Standard Air Volume for High, Medium and Low Speed		m³/min cfm	Hi 19 671	Me 17 600	Lo 15 529			
Outside Static Pressure		mmAq in W.G.		0 0	—			
Air Inlet				Lower sided Suction				
Air Outlet				Lower sided blow-out				
Duct Connection				*1 Available				
Outside Dimension(H×W×D)		mm inch	(296+28)×820+820 (11-21/32+1-3/32)×32-9/32×32-9/32					
Net Weight		kg lbs	30.5(25+5.5) 67(55+12)					
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 15.88(5/8) Flared type O.D φ 9.52(3/8) Flared type				
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)	ID 20×1			
Compressor	Type, number of set			—	Hermetic (Rotary), 1			
	Starting Method			—	Direct on-line starting			
	Capacity Control	%		—	0.100			
	Motor	Type		—	2-pole single phase induction motor			
		Input	kW	—	Cool/Heat 2.73/2.49			
		Rated Output	kW	—	2.0			
Fan	Type, number of set	unit	Turbo fan-1					
	Air Volume Control		Three-Step and Auto mode(Remote Controller)					
	Motor	Type	6-pole single phase induction motor					
		Input	kW	0.09/0.09	0.11			
		Rated Output	kW	0.035	0.05			
Air-heat exchanger			Louver-fin type					
Refrigerant Control			Capillary tube					
Refrigeration oil(Charged)		ℓ	—					
Refrigerant(Charged)		kg lbs	—					
Running Adjustment	Control Switch		Operation Switch (Remote Controller)					
	Room Temperature		Thermostat(Main Body)					
Anti-vibration and Anti-sound Materials			Cabinet(urethane fram attached)					
Safety Devices			Internal protector for compressor, Internal thermostat F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish			ABS resin(Decorative panel)					
Air Filter(Factory set)			Polypropylene regin Honeycomb(Washable)					
Noise level		dB(A)	Hi 41	Me 39	Lo 37			
			—					
(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)								
(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)								
(3) Heating capacities are based on indoor temp.20° CD.B.(68.0° FD.B.) and outdoor air temp.7° CD.B.(44.6° FD.B.), 6° CW.B.(42.8° FW.B.)								
(4)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.								
(5) Net weight for indoor unit indicate main body and decorative panel.								

ELECTRICAL DATA(50Hz)

ITEM	MODEL	CS-80U32JP, CU-80C52HP		
		Condition by JIS B 8616		
Volts	V	220	230	240
Phase		Single	Single	Single
Power Consumption	kW	Cool	2.73	2.73
		Heat	2.49	2.49
Running Current	A	Cool	13.4	12.9
		Heat	12.5	12.0
Starting Current	A		70	70
Power Factor	%	Cool	92.6	92.0
		Heat	90.5	90.2

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC. 1~220V,230V,240V 50Hz

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL		Indoor unit		Outdoor unit
			Main body	CS-80U32JP	CU-80C52XP
			Panel	CZ-04KPU01P	
			Remote Controller	CZ-10RT32P(wired) CZ-10RW51P(wireless)	
(1) Cooling Capacity			kW kcal/h BTU/h	7.30 6,300 25,200	
(2) Cooling Capacity			kW kcal/h BTU/h	7.60 6,550 26,200	
(3) Heating Capacity			kW kcal/h BTU/h	7.75 6,700 26,800	
Refrigerant Charge-less			m	30	
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 19 671 Me 17 600 Lo 15 529	Hi 50 1766
Outside Static Pressure			mmAq in W.G.	0 0	—
Air Inlet				Lower sided Suction	Back sided Suction
Air Outlet				Lower sided blow-out	Front blow-out
Duct Connection				*1 Available	—
Outside Dimension(H×W×D)			mm inch	(296+28)×820×820 (11-21/32+1-3/32)×32-9/32×32-9/32	900×900×320 35-7/16×35-7/16×12-19/32
Net Weight			kg lbs	30.5(25+5.5) 67(55+12)	73 161
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 15.88(5/8) Flared type O.D φ 9.52(3/8) Flared type	
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)	ID 20×1
Compressor	Type, number of set			—	Hermetic (Rotary), 1
	Starting Method			—	Direct on-line starting
	Capacity Control	%		—	0.100
	Motor	Type		—	2-pole 3-phase induction motor
		Input	kW	—	Cool/Heat 2.53/2.29
		Rated Output	kW	—	2.0
Fan	Type, number of set		unit	Turbo fan-1	Prop fan-1
	Air Volume Control			Three-Step and Auto mode(Remote Controller)	—
	Motor	Type		6-pole single phase induction motor	6-pole single phase induction motor
		Input	kW	0.09	0.11
		Rated Output	kW	0.035	0.050
Air-heat exchanger				Louver-fin type	Louver-fin type
Refrigerant Control				Capillary tube	Capillary tube
Refrigeration oil(Charged)			ℓ	—	DIAMOND MS32(N-1) (1.3)
Refrigerant(Charged)			kg lbs	—	R-22(3.8) (8.4)
Running Adjustment	Control Switch			Operation Switch (Remote Controller)	—
	Room Temperature			Thermostat(Main Body)	—
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)	Compressor(Anti-vibration rubber)
Safety Devices				Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans	
External Finish				ABS resin(Decorative panel)	Powder coating
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)	—
Noise level			dB(A)	Hi 41 Me 39 Lo 37	Hi 46

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3) Heating capacities are based on indoor temp.20° CD.B.(68.0° FD.B.) and outdoor air temp.7° CD.B.(44.6° FD.B.), 6° CW.B.(42.8° FW.B.)

(4)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(5) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS-80U32JP, CU-80C52XP		
			Condition by JIS B 8616		
Volts	V		380	400	415
Phase			3N	3N	3N
Power Consumption	kW	Cool	2.73	2.73	2.73
		Heat	2.49	2.49	2.49
Running Current	A	Cool	5.0	4.9	4.8
		Heat	4.6	4.4	4.2
Starting Current	A		26	26	26
Power Factor	%	Cool	83.0	80.4	82.5
		Heat	82.2	81.7	83.5

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 3N~380V,400V,415V 50Hz

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL	Indoor unit			Outdoor unit	
		Main body	CS-112U32JP			CU-112C52XP
		Panel	CZ-04KPU01P			
		Remote Controller	CZ-10RT32P(wired) CZ-10RW51P(wireless)			
(1) Cooling Capacity		kW kcal/h BTU/h			10.45 9,000 36,000	
(2) Cooling Capacity		kW kcal/h BTU/h			10.90 9,400 37,600	
(3) Heating Capacity		kW kcal/h BTU/h			11.15 9,600 38,400	
Refrigerant Charge-less		m			30	
Standard Air Volume for High, Medium and Low Speed		m³/min cfm	Hi 24 847	Me 21 741	Lo 18 635	Hi 75 2647
Outside Static Pressure		mmHg in W.G.			0 0	—
Air Inlet			Lower sided Suction		Back sided Suction	
Air Outlet			Lower sided blow-out		Front blow-out	
Duct Connection			*1 Available		—	
Outside Dimension(H×W×D)		mm inch	(296+28)×820+820 (11-21/32+1-3/32)×32-9/32×32-9/32		1220×900×320 48-1/32×35-7/16×12-19/32	
Net Weight		kg lbs	33.5(28+5.5) 74(62+12)		98 216	
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D.Φ 19.05(3/4) Flared type O.D.Φ 9.52(3/8) Flared type		
	Drain	mm	O.D.Φ 32(Accessory drain hose: I.D.Φ 32)		ID 20×1	
Compressor	Type, number of set		—		Hermetic (Rotary), 1	
	Starting Method		—		Direct on-line starting	
	Capacity Control	%	—		0.100	
	Motor	Type	—		2-pole 3-phase induction motor	
	Input	kW	—		Cool/Heat 3.07/3.07	
	Rated Output	kW	—		2.80	
Fan	Type, number of set	unit	Turbo fan-1		Prop fan-2	
	Air Volume Control		Three-Step and Auto mode(Remote Controller)		—	
	Motor	Type	6-pole single phase induction motor		6-pole single phase induction motor	
	Input	kW	0.09/0.09		0.11×2	
	Rated Output	kW	0.045		0.05×2	
Air-heat exchanger			Louver-fin type		Louver-fin type	
Refrigerant Control			Capillary tube		Capillary tube	
Refrigeration oil(Charged)		ℓ	—		SONTEX 200LT(1.24)	
Refrigerant(Charged)		kg lbs	—		R-22(4.7) (10.4)	
Running Adjustment	Control Switch		Wireless or Wired Remote Controller		—	
	Room Temperature		Thermostat(Main Body)		—	
Anti-vibration and Anti-sound Materials			Cabinet(urethane fram attached)		Compressor(Anti-vibration rubber)	
Safety Devices			Internal protector for compressor, Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans			
External Finish			ABS resin(Decorative panel)		Powder coating	
Air Filter(Factory set)			Polypropylene regin Honeycomb(Washable)		—	
Noise level		dB(A)	Hi 44	Me 41	Lo 38	48

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3) Heating capacities are based on indoor temp.20° CD.B.(68.0° FD.B.) and outdoor air temp.7° CD.B.(44.6° FD.B.), 6° CW.B.(42.8° FW.B.)

(4)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(5) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL	CS-112U32JP, CU-112C52XP			
		Condition by JIS B 8616			
Volts	V	380	400	415	
Phase		3N	3N	3N	
Power Consumption	kW	Cool	3.40	3.40	3.40
		Heat	3.40	3.40	3.40
Running Current	A	Cool	6.40	6.10	5.90
		Heat	6.40	6.10	5.90
Starting Current	A		40	40	40
Power Factor	%	Cool	80.7	80.5	80.2
		Heat	80.7	80.5	80.2

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 3N~380V,400V,415V 50Hz

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit						
			Main body	CS-140U32JP		CU-140C53XP						
			Panel	CZ-06KPU01P								
	Remote Controller		CZ-10RT32P(wired) CZ-10RW51P(wireless)									
(1) Cooling Capacity	kW kcal/h BTU/h			13.00 11,200 44,800								
(2) Cooling Capacity	kW kcal/h BTU/h			13.40 11,550 46,200								
(3) Heating Capacity	kW kcal/h BTU/h			14.15 12,200 48,800								
Refrigerant Charge-less	m			30								
Standard Air Voiume for High. Medium and Low Speed	m³/min cfm			Hi 30 1059	Me 25 883	Lo 20 706	Hi 80 2825					
Outside Static Pressure	mmAq in W.G.			0 0								
Air Inlet				Lower sided Suction								
Air Outlet				Lower sided blow-out								
Duct Connection				*1 Available								
Outside Dimension(H×W×D)	mm inch			(296+28)×930×930 (11-21/32+1-3/32)×36-5/8×36 5/8								
Net Weight	kg lbs			40(33+7) 88(73+15)								
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 19.05(3/4) Flared type O.D φ 9.52(3/8) Flared type								
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)								
Compressor	Type, number of set			—								
	Starting Method			—								
	Capacity Control	%		—								
	Motor	Type		—								
		Input	kW	—								
Fan	Motor	Rated Output	kW	—								
		Type, number of set	unit	Turbo fan-1								
		Air Volume Control		Three Step and Auto mode(Remote Controller)								
		Type		6-pole single phase induction motor								
		Input	kW	0.20								
		Rated Output	kW	0.08								
Air-heat exchanger			Louver-fin type									
Refrigerant Control			Capillary tube									
Refrigeration oil(Charged)			—									
Refrigerant(Charged)			—									
Running Adjustment	Control Switch			Wireless or Wired Remote Controller								
	Room Temperature			Thermostat(Main Body)								
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)								
Safety Devices				Internal protector for compressor, Internal thermostat for F.M. High pressure switch Drain over-flow switch, crankcase heater, Current Trans								
External Finish				ABS resin(Decorative panel)								
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)								
Noise level		dB(A)	Hi 44	Me 40	Lo 37	Hi 51						

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3) Heating capacities are based on indoor temp.20° CD.B.(68.0° FD.B.) and outdoor air temp.7° CD.B.(44.6° FD.B.), 6° CW.B.(42.8° FW.B.)

(4)*1 Supply duct is connectable. Supply duct requires the special parts.

(5) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS-140U32JP, CU-140C53XP			
			Condition by JIS B 8616			
Volts	V		380	400	415	
Phase			3N	3N	3N	
Power Consumption	kW	Cool	4.59	4.59	4.59	
		Heat	4.10	4.10	4.10	
Running Current	A	Cool	7.90	8.00	8.10	
		Heat	7.30	7.40	7.50	
Starting Current	A		62	62	62	
Power Factor	%	Cool	88.3	82.8	78.8	
		Heat	85.3	80.0	76.1	

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 3N~380V,400V,415V 50Hz

2. SPECIFICATIONS (HEAT PUMP TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit						
			Main body	CS-160U32JP		CU-160C53XP						
			Panel	CZ-06KPU01P								
	Remote Controller		CZ-10RT32P(wired) CZ-10RW51P(wireless)									
(1) Cooling Capacity	kW kcal/h BTU/h		14.50 12,500 50,000									
(2) Cooling Capacity	kW kcal/h BTU/h		15.10 13,000 52,000									
(3) Heating Capacity	kW kcal/h BTU/h		15.70 13,500 54,000									
Refrigerant Charge-less	m		30									
Standard Air Volume for High, Medium and Low Speed	m³/min cfm		Hi 34 1201	Me 29 1024	Lo 24 848	Hi 95 3355						
Outside Static Pressure	mmHg in W.G.		0 0		—							
Air Inlet			Lower sided Suction		Back sided Suction							
Air Outlet			Lower sided blow-out		Front blow-out							
Duct Connection			*1 Available		—							
Outside Dimension(H×W×D)	mm inch		(296+28)×930×930 (11-21/32+1-3/32)×36-5/8×36-5/8		1220×1100×320 48-1/32×43-5/16×12-19/32							
Net Weight	kg lbs		40(33+7) 88(73+15)		118 260							
Piping Connections	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D. φ 19.05(3/4) Flared type O.D. φ 9.52(3/8) Flared type								
	Drain		mm	O.D. φ 32(Accessory drain hose: I.D. φ 32)								
Compressor	Type, number of set		—		Hermetic (Rotary), 1							
	Starting Method		—		Direct on-line starting							
	Capacity Control		%	—		0.100						
	Motor	Type		—		2-pole 3-phase induction motor						
		Input	kW	—		Cool/Heat 4.47/4.39						
		Rated Output	kW	—		4.5						
Fan	Type, number of set		unit	Turbo fan-1		Prop fan-2						
	Air Volume Control			Three-Step and Auto mode(Remote Controller)		—						
	Motor	Type		6-pole single phase induction motor		6-pole single phase induction motor						
		Input	kW	0.22		0.12×2						
		Rated Output	kW	0.08		0.055×2						
Air-heat exchanger				Louver-fin type		Louver-fin type						
Refrigerant Control				Capillary tube		Capillary tube						
Refrigeration oil(Charged)			ℓ	—		SUNISO 4GSDID-K(1.6)						
Refrigerant(Charged)			kg lbs	—		R-22(5.4) (11.9)						
Running Adjustment	Control Switch			Wireless or Wired Remote Controller		—						
	Room Temperature			Thermostat(Main Body)		—						
Anti-vibration and Anti-sound Materials				Cabinet(urethane foam attached)		Compressor(Anti-vibration rubber)						
Safety Devices				Internal protector for compressor, Internal thermostat F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans								
External Finish				ABS resin(Decorative panel)		Powder coating						
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)		—						
Noise level			dB(A)	Hi 46	Me 43	Lo 39	Hi 51					

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3) Heating capacities are based on indoor temp.20° CD.B.(68.0° FD.B.)and outdoor air temp.7° CD.B.(44.6° FD.B.),6° CW.B.(42.8° FD.B.)

(4)*1 Supply duct is connectable. Supply duct requires the special parts.

(5) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS-160U32JP, CU-160C53XP			
			Condition by JIS B 8616			
Volts	V		380	400	415	
Phase			3N	3N	3N	
Power Consumption	kW	Cool	4.93	4.93	4.93	
		Heat	4.85	4.85	4.85	
Running Current	A	Cool	8.40	8.20	8.10	
		Heat	8.30	8.10	8.00	
Starting Current	A		61	61	61	
Power Factor	%	Cool	89.2	86.8	84.7	
		Heat	88.8	86.4	84.3	

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 3N~380V,400V, 415V

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit			
			CS-40U32JP			CU-40C02HP			
			Panel	CZ-02KPU01P					
			Remote Controller	CZ-10RT32P(wired) CZ-10RW01P(wireless)					
(1) Cooling Capacity			kW kcal/h BTU/h	4.00 3,440 13,760					
(2) Cooling Capacity			kW kcal/h BTU/h	4.10 3,530 14,120					
Refrigerant Charge-less			m	30					
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 13 459	Me 12 424	Lo 10 353	Hi 32 1130		
Outside Static Pressure			mmAq in.W.G.	0 0			—		
Air Inlet				Lower sided Suction			Back sided Suction		
Air Outlet				Lower sided blow-out			Front blow-out		
Duct Connection				*1 Available			—		
Outside Dimension(H×W×D)			mm inch	(266+28)×750×750 (10-15/32+1-3/32)×29-17/32×29-17/32			640×790×300 25-3/16×31-3/32×11-13/16		
Net Weight			kg lbs	21.5(17.0+4.5) 47(37+10)			47 104		
Piping Connection	Refrigerant	Gas,Liquid	mm(inch) mm(inch)	O.D φ 12.7(1/2) Flared type O.D φ 6.35(1/4) Flared type					
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)			ID 20×1		
Compressor	Type, number of set			—			Hermetic (Rotary), 1		
	Starting Method			—			Direct on-line starting		
	Capacity Control		%	—			0.100		
	Motor	Type		—			2-pole signal phase induction motor		
		Input	kW	—			Cool/ 1.45		
	Rated Output		kW	—			1.2		
Fan	Type, number of set		unit	Turbo fan-1			Prop fan-1		
	Air Volume Control			Three-Step and Auto mode(Remote Controller)			—		
	Motor	Type		6-pole single phase induction motor			6-pole single phase induction motor		
		Input	kW	0.09			0.07		
	Rated Output		kW	0.035			0.035		
Air-heat exchanger				Louver-fin type			Louver-fin type		
Refrigerant Control				Capillary tube			—		
Refrigeration oil(Charged)			ℓ	—			ATMOS M60(0.65)		
Refrigerant(Charged)			kg lbs	—			R-22(2.0) (4.4)		
Running Adjustment	Control Switch			Wireless or Wired Remote Controller			—		
	Room Temperature			Thermostat(Main Body)			—		
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)		
Safety Devices				Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish				ABS resin(Decorative panel)			Powder coating		
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)			—		
Noise level		dB(A)	Hi 38	Me 36	Lo 34		Hi 45		

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.), and outdoor air temp. 35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(4) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS 40U32JP, CU-40C02HP		
			Condition by JIS B 8616		
Volts	V		220	230	240
Phase			Single	Single	Single
Power Consumption	kW	Cool	1.50	1.50	1.50
Running Current	A	Cool	7.4	7.2	7.0
Starting Current	A		22.9	23.9	24.8
Power Factor	%	Cool	92.6	90.9	89.4

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 1~220V,230V,240V 50Hz

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit			
			Main body	CS-50U32JP			CU-50C02HP		
			Panel	CZ-02KPU01P					
	Remote Controller		CZ-10RT32P(wired) CZ-10RW01P(wireless)						
(1) Cooling Capacity			kW kcal/h BTU/h	5.20 4,500 18,000					
(2) Cooling Capacity			kW kcal/h BTU/h	5.35 4,620 18,480					
Refrigerant Charge-less			m	30					
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 13 459	Me 12 424	Lo 10 353	Hi 32 1130		
Outside Static Pressure			mmAq in W.G.	0 0			—		
Air Inlet				Lower sided Suction			Back sided Suction		
Air Outlet				Lower sided blow-out			Front blow-out		
Duct Connection				*1 Available			—		
Outside Dimension(H×W×D)			mm inch	(266+28)×750+750 (10-15/32+1-3/32)×29-17/32×29-17/32			640×790×300 25-3/16×31-3/32×11-13/16		
Net Weight			kg lbs	21.5(17.0+4.5) 47(37+10)			50 110		
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 12.7(1/2) Flared type O.D φ 6.35(1/4) Flared type					
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)			ID 20×1		
Compressor	Type, number of set			—			Hermetic (Rotary), 1		
	Starting Method			—			Direct on-line starting		
	Capacity Control		%	—			0.100		
	Motor	Type		—			2-pole signal phase induction motor		
		Input	kW	—			Cool/ 1.71		
		Rated Output	kW	—			1.5		
Fan	Type, number of set		unit	Turbo fan-1			Prop fan-1		
	Air Volume Control			Three-Step and Auto mode(Remote Controller)			—		
	Motor	Type		6-pole single phase induction motor			6-pole single phase induction motor		
		Input	kW	0.09			0.07		
		Rated Output	kW	0.035			0.035		
Air-heat exchanger				Louver-fin type			Louver-fin type		
Refrigerant Control				Capillary tube			—		
Refrigeration oil(Charged)				ℓ	—				
Refrigerant(Charged)				kg lbs	—				
Running Adjustment	Control Switch			Wireless or Wired Remote Controller			—		
	Room Temperature			Thermostat(Main Body)			—		
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)		
Safety Devices				Internal protector for compressor, Internal thermostat F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish				ABS resin(Decorative panel)			Powder coating		
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)			—		
Noise level		dB(A)	Hi 39	Me 37	Lo 35		Hi 45		

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(4) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS 50U32JP, CU-50C02HP		
			Condition by JIS B 8616		
Volts	V		220	230	240
Phase			Single	Single	Single
Power Consumption	kW	Cool	1.87	1.87	1.87
Running Current	A	Cool	8.8	8.5	8.2
Starting Current	A		45.5	47.6	49.5
Power Factor	%	Cool	96.5	95.7	95.0

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 1~220V,230V,240V 50Hz

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit			
			CS-71U32JP			CU-71C02HP			
			Panel	CZ-02KPU01P					
			Remote Controller	CZ-10RT32P(wired) CZ-10RW01P(wireless)					
(1) Cooling Capacity			kW kcal/h BTU/h	6.50 5,600 22,400					
(2) Cooling Capacity			kW kcal/h BTU/h	6.70 5,800 23,200					
Refrigerant Charge-less			m	30					
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 17 600	Me 15 530	Lo 13 459	Hi 50 1766		
Outside Static Pressure			mmAq in.W.G.	0 0			—		
Air Inlet				Lower sided Suction			Back sided Suction		
Air Outlet				Lower sided blow-out			Front blow-out		
Duct Connection				*1 Available			—		
Outside Dimension(H×W×D)			mm inch	(296+28)×750+750 (10-21/32+1-3/32)×32-9/32×32-9/32			900×900×320 35-7/16×35-7/16×12-19/32		
Net Weight			kg lbs	24(19.5+4.5) 53(43+10)			68 150		
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 15.88(5/8) Flared type O.D φ 6.35(1/4) Flared type					
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)			ID 20×1		
Compressor	Type, number of set			—			Hermetic (Rotary), 1		
	Starting Method			—			Direct on-line starting		
	Capacity Control		%	—			0.100		
	Motor	Type		—			2-pole single phase induction motor		
		Input	kW	—			Cool/ 2.3		
		Rated Output	kW	—			1.9		
Fan	Type, number of set		unit	Turbo fan-1			Prop fan-1		
	Air Volume Control			Three-Step and Auto mode(Remote Controller)			—		
	Motor	Type		6-pole single phase induction motor			6-pole single phase induction motor		
		Input	kW	0.09			0.11		
		Rated Output	kW	0.035			0.050		
Air-heat exchanger				Louver-fin type			Louver-fin type		
Refrigerant Control				Capillary tube			—		
Refrigeration oil(Charged)			ℓ	—			DIAMOND MS32(N-1) (1.3)		
Refrigerant(Charged)			kg lbs	—			R-22(2.7) (6.0)		
Running Adjustment	Control Switch			Wireless or Wired Remote Controller			—		
	Room Temperature			Thermostat(Main Body)			—		
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)		
Safety Devices				Internal protector for compressor, Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish				ABS resin(Decorative panel)			Powder coating		
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)			—		
Noise level			dB(A)	Hi 41	Me 39	Lo 37	Hi 46		

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(4) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS-71U32JP, CU-71C02HP		
			Condition by JIS B 8616		
Volts	V		220	230	240
Phase			Single	Single	Single
Power Consumption	kW	Cool	2.50	2.50	2.50
Running Current	A	Cool	12.7	12.2	11.7
Starting Current	A		63	63	63
Power Factor	%	Cool	89.5	89.1	89.0

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC. 1~220V.230V.240V 50Hz

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit			
			Main body	CS-71U32JP			CU-71C02XP		
			Panel	CZ-02KPU01P					
			Remote Controller	CZ-10RT32P(wired) CZ-10RW01P(wireless)					
(1) Cooling Capacity			kW kcal/h BTU/h	6.50 5,600 22,400					
(2) Cooling Capacity			kW kcal/h BTU/h	6.70 5,800 23,200					
Refrigerant Charge-less			m	30					
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 17 600	Me 15 530	Lo 13 459	Hi 50 1766		
Outside Static Pressure			mmAq in W.G.	0 0			—		
Air Inlet				Lower sided Suction			Back sided Suction		
Air Outlet				Lower sided blow-out			Front blow-out		
Duct Connection				*1 Available			—		
Outside Dimension(H×W×D)			mm inch	(296+28)×750×750 (11-21/32+1-3/32)×32-9/32×32-9/32			900×900×320 35-7/16×35-7/16×12-19/32		
Net Weight			kg lbs	24(19.5+4.5) 53(43+10)			68 150		
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 15.88(5/8) Flared type O.D φ 6.35(1/4) Flared type					
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)			ID 20×1		
Compressor	Type, number of set			—			Hermetic (Rotary), 1		
	Starting Method			—			Direct on-line starting		
	Capacity Control			—			0.100		
	Motor	Type		—			2-pole 3-phase induction motor		
		Input	kW	—			Cool/ 2.28		
		Rated Output	kW	—			1.9		
Fan	Type, number of set			Turbo fan-1			Prop fan-1		
	Air Volume Control			Three-Step and Auto mode(Remote Controller)			—		
	Motor	Type		6-pole single phase induction motor			6-pole single phase induction motor		
		Input	kW	0.09			0.11		
		Rated Output	kW	0.035			0.050		
Air-heat exchanger				Louver-fin type			Louver-fin type		
Refrigerant Control				Capillary tube			—		
Refrigeration oil(Charged)				ℓ	—				
Refrigerant(Charged)				kg lbs	—				
Running Adjustment	Control Switch			Operation Switch (Remote Controller)			—		
	Room Temperature			Thermostat(Main Body)			—		
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)		
Safety Devices				Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish				ABS resin(Decorative panel)			Powder coating		
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)			—		
Noise level	dB(A)		Hi 41	Me 39	Lo 37	Hi 46			

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(4) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS-71U32JP, CU-71C02XP			
			Condition by JIS B 8616			
Volts	V		380	400	415	
Phase			3N	3N	3N	
Power Consumption	kW	Cool	2.50	2.50	2.50	
Running Current	A	Cool	4.70	4.50	4.20	
Starting Current	A		22	22	22	
Power Factor	%	Cool	80.8	80.7	82.8	

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC. 3N~380V, 400V, 415V 50Hz

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit			
			Main body	CS-80U32JP			CU-80C02HP		
			Panel	CZ-04KPU01P					
			Remote Controller	CZ-10RT32P(wired) CZ-10RW01P(wireless)					
(1) Cooling Capacity			kW kcal/h BTU/h	7.30 6,300 25,200					
(2) Cooling Capacity			kW kcal/h BTU/h	7.60 6,550 26,200					
Refrigerant Charge-less			m	30					
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 19 671	Me 17 600	Lo 15 529	Hi50 1765		
Outside Static Pressure			mmAq in W.G.	0 0			—		
Air Inlet				Lower sided Suction			Back sided Suction		
Air Outlet				Lower sided blow-out			Front blow-out		
Duct Connection				*1 Available			—		
Outside Dimension(H×W×D)			mm inch	(296+28)×820+820 (11-21/32+1-3/32)×32-9/32×32-9/32			900×900×320 35-7/16×35-7/16×12-19/13		
Net Weight			kg lbs	30.5(25+5.5) 67(55+12)			70 154		
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D.Φ 15.88(5/8) Flared type O.D.Φ 9.52(3/8) Flared type					
	Drain		mm	O.D.Φ 32(Accessory drain hose: I.D.Φ 32)			ID 20×1		
Compressor	Type, number of set			—			Hermetic (Rotary), 1		
	Starting Method			—			Direct on-line starting		
	Capacity Control		%	—			0.100		
	Motor	Type		—			2-pole single phase induction motor		
	Input	kW		—			Cool/ 2.73		
	Rated Output	kW		—			2.0		
Fan	Type, number of set		unit	Turbo fan-1			Prop fan-1		
	Air Volume Control			Three-Step and Auto mode(Remote Controller)			—		
	Motor	Type		6-pole single phase induction motor			6-pole single phase induction motor		
		Input	kW	0.09			0.11		
	Rated Output		kW	0.035			0.05		
Air-heat exchanger				Louver-fin type			Louver-fin type		
Refrigerant Control				Capillary tube			—		
Refrigeration oil(Charged)			ℓ	—			DIAMOND MS32(N-1) (1.3)		
Refrigerant(Charged)			kg lbs	—			R-22(3.8) (8.4)		
Running Adjustment	Control Switch			Operation Switch (Remote Controller)			—		
	Room Temperature			Thermostat(Main Body)			—		
Anti-vibration and Anti-sound Materials				Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)		
Safety Devices				Internal protector for compressor, Internal thermostat F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish				ABS resin(Decorative panel)			Powder coating		
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)			—		
Noise level			dB(A)	Hi 41	Me 39	Lo 37	Hi 46		

(1) Cooling capacities are based on indoor temp. 27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

35° C.D.B.(95° F.D.B.), 24° C.W.B.(75.2° F.W.B.)

(2) Cooling capacities are based on indoor temp. 27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp.

32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(4) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS 80U32JP, CU 80C02HP		
			Condition by JIS B 8616		
Volts	V		220	230	240
Phase			Single	Single	Single
Power Consumption	kW	Cool	2.73	2.73	2.73
Running Current	A	Cool	13.4	12.9	12.4
Starting Current	A		70	70	70
Power Factor	%	Cool	92.6	92.0	91.7

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor

Panasonic Power source AC. 1~220V, 230V, 240V 50Hz

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM		MODEL	Indoor unit			Outdoor unit			
			Main body	CS-80U32JP			CU-80C02XP		
			Panel	CZ-04KPU01P					
Anti-vibration and Anti-sound Materials			Remote Controller	CZ-10RT32P(wired) CZ-10RW01P(wireless)					
(1) Cooling Capacity			kW	7.30					
			kcal/h	6,300					
			BTU/h	25,200					
(2) Cooling Capacity			kW	7.60					
			kcal/h	6,550					
			BTU/h	26,200					
Refrigerant Charge-less			m	30					
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 19 671	Me 17 600	Lo 15 529	Hi 50 1766		
Outside Static Pressure			mmAq in W.G.	0 0			—		
Air Inlet				Lower sided Suction			Back sided Suction		
Air Outlet				Lower sided blow-out			Front blow-out		
Duct Connection				*1 Available			—		
Outside Dimension(H×W×D)			mm inch	(296+28)×820×820 (11-21/32+1-3/32)×32-9/32×32-9/32			900×900×320 35-7/16×35-7/16×12-19/32		
Net Weight			kg lbs	30.5(25+5.5) 67(55+12)			70 154		
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 15.88(5/8) Flared type O.D φ 9.52(3/8) Flared type					
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)			ID 20×1		
Compressor	Type, number of set			—			Hermetic (Rotary), 1		
	Starting Method			—			Direct on-line starting		
	Capacity Control		%	—			0.100		
	Motor	Type		—			2-pole 3-phase induction motor		
		Input	kW	—			Cool/ 2.53		
		Rated Output	kW	—			2.0		
Fan	Type, number of set		unit	Turbo fan-1			Prop fan-1		
	Air Volume Control			Three-Step and Auto mode(Remote Controller)			—		
	Motor	Type		6-pole single phase induction motor			6-pole single phase induction motor		
		Input	kW	0.09			0.11		
		Rated Output	kW	0.035			0.050		
Air-heat exchanger				Louver-fin type			Louver-fin type		
Refrigerant Control				Capillary tube			—		
Refrigeration oil(Charged)			ℓ	—			DIAMOND MS32(N-1) (1.3)		
Refrigerant(Charged)			kg lbs	—			R-22(3.8) (8.4)		
Running Adjustment	Control Switch			Operation Switch (Remote Controller)			—		
	Room Temperature			Thermostat(Main Body)			—		
Safety Devices				Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans					
External Finish				ABS resin(Decorative panel)			Powder coating		
Air Filter(Factory set)				Polypropylene regin Honeycomb(Washable)			—		
Noise level			dB(A)	Hi 41	Me 39	Lo 37	Hi 46		

(1) Cooling capacities are based on indoor temp. 27° CD.B.(80.6° FD.B), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 35° CD.B.(95° FD.B), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp. 27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(4)Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS-80U32JP, CU 80C02XP		
	Condition by JIS B 8616				
Volts	V		380	400	415
Phase			3N	3N	3N
Power Consumption	kW	Cool	2.73	2.73	2.73
Running Current	A	Cool	5.0	4.9	4.8
Starting Current	A		26	26	26
Power Factor	%	Cool	83.0	80.4	82.5

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 3N~380V,400V ,415V 50Hz

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit			
			Main body	CS-112U32JP			CU-112C02XP		
			Panel	CZ-04KPU01P					
	Remote Controller		CZ-10RT32P(wired) CZ-10RW01P(wireless)						
(1) Cooling Capacity	kW kcal/h BTU/h			10.45 9,000 36,000					
(2) Cooling Capacity	kW kcal/h BTU/h			10.90 9,400 37,600					
Refrigerant Charge-less	m			30					
Standard Air Volume for High, Medium and Low Speed	nl/min cfm	Hi 24 847	Me 21 741	Lo 18 635		Hi 75 2647			
Outside Static Pressure	mmAq in W.G.		0 0			—			
Air Inlet			Lower sided Suction			Back sided Suction			
Air Outlet			Lower sided blow-out			Front blow-out			
Duct Connection			*1 Available			—			
Outside Dimension(H×W×D)	mm inch	(296+28)×820+820 (11-21/32+1-3/32)×32-9/32×32-9/32			1220×900×320 48-1/32×35-7/16×12-19/32				
Net Weight	kg lbs	33.5(28+5.5) 74(62+12)			95 209				
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 19.05(3/4) Flared type O.D φ 9.52(3/8) Flared type					
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)		ID 20×1			
Compressor	Type, number of set			—		Hermetic (Rotary), 1			
	Starting Method			—		Direct on-line starting			
	Capacity Control	%		—		0.100			
	Motor	Type		—		2-pole 3-phase induction motor			
		Input	kW	—		Cool/ 3.07			
		Rated Output	kW	—		2.80			
Fan	Type, number of set	unit	Turbo fan-1			Prop fan-2			
	Air Volume Control		Three-Step and Auto mode(Remote Controller)			—			
	Motor	Type		6-pole single phase induction motor			6-pole single phase induction motor		
		Input	kW	0.11			0.11×2		
		Rated Output	kW	0.045			0.05×2		
Air-heat exchanger			Louver-fin type			Louver-fin type			
Refrigerant Control			Capillary tube			—			
Refrigeration oil(Charged)			ℓ	—			SONTEX 200LT(1.24)		
Refrigerant(Charged)			kg lbs	—			R-22(4.7) (10.4)		
Running Adjustment	Control Switch		Wireless or Wired Remote Controller			—			
	Room Temperature		Thermostat(Main Body)			—			
Anti-vibration and Anti-sound Materials			Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)			
Safety Devices			Internal protector for compressor, Internal thermostat for F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans						
External Finish			ABS resin(Decorative panel)			Powder coating			
Air Filter(Factory set)			Polypropylene regin Honeycomb(Washable)			—			
Noise level	dB(A)	Hi 44	Me 41	Lo 38		Hi 48			

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct and fresh air duct are connectable. Supply duct requires the special parts.

(4) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS 112U32JP, CU 112C02XP			
			Condition by JIS B 8616			
Volts	V		380	400	415	
Phase			3N	3N	3N	
Power Consumption	kW	Cool	3.40	3.40	3.40	
Running Current	A	Cool	6.40	6.10	5.90	
Starting Current	A		40	40	40	
Power Factor	%	Cool	80.7	80.5	80.2	

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC. 3N~380V, 400V, 415V 50Hz

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM		MODEL		Indoor unit			Outdoor unit						
		Main body		CS-140U32JP			CU-140C03XP						
		Panel		CZ-06KPU01P									
		Remote Controller		CZ-10RT32P(wired) CZ-10RW01P(wireless)									
(1) Cooling Capacity		kW kcal/h BTU/h			13.00 11,200 44,800								
(2) Cooling Capacity		kW kcal/h BTU/h			13.40 11,550 46,200								
Refrigerant Charge-less		m			30								
Standard Air Volume for High, Medium and Low Speed		m/min cfm	Hi 30 1059	Me 25 883	Lo 20 706	Hi 80 2825							
Outside Static Pressure		mmAq in W.G.	0 0			—							
Air Inlet		Lower sided Suction			Back sided Suction								
Air Outlet		Lower sided blow-out			Front blow-out								
Duct Connection		*1 Available			—								
Outside Dimension(H×W×D)		mm inch	(296+28)×930×930 (11-21/32+1-3/32)×36-5/8×36-5/8			1220×1100×320 48-1/32×43-5/16×12-19/32							
Net Weight		kg lbs	40(33+7) 88(73+15)			110 242							
Piping Connection	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 19.05(3/4) Flared type O.D φ 9.52(3/8) Flared type									
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)			ID 20×1						
Compressor	Type, number of set		—			Hermetic (Rotary), 1							
	Starting Method		—			Direct on-line starting							
	Capacity Control		%	—			0.100						
	Motor	Type	—			2-pole 3-phase induction motor							
		Input	kW	—			Cool/4.17						
		Rated Output	kW	—			3.75						
Fan	Type, number of set		unit	Turbo fan-1			Prop fan-2						
	Air Volume Control		Three Step and Auto mode(Remote Controller)			—							
	Motor	Type	6-pole single phase induction motor			6-pole single phase induction motor							
		Input	kW	0.20			0.11×2						
		Rated Output	kW	0.08			0.05×2						
Air-heat exchanger		Louver-fin type			Louver-fin type								
Refrigerant Control		Capillary tube			—								
Refrigeration oil(Charged)		ℓ	—			SUNISO 4GSDI-HT(1.8)							
Refrigerant(Charged)		kg lbs	—			R-22(5.7) (12.6)							
Running Adjustment	Control Switch		Wireless or Wired Remote Controller			—							
	Room Temperature		Thermostat(Main Body)			—							
Anti-vibration and Anti-sound Materials		Cabinet(urethane fram attached)			Compressor(Anti-vibration rubber)								
Safety Devices		Internal protector for compressor, Internal thermostat for F.M. High pressure switch Drain over-flow switch, crankcase heater, Current Trans											
External Finish		ABS resin(Decorative panel)			Powder coating								
Air Filter(Factory set)		Polypropylene regin Honeycomb(Washable)			—								
Noise level		dB(A)	Hi 44	Me 40	Lo 37	Hi 51							

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct is connectable. Supply duct requires the special parts.

(4) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM		MODEL		CS-140U32JP, CU-140C03XP		
		Condition by JIS B 8616				
Volts	V	380		400		415
Phase		3N		3N		3N
Power Consumption	kW	Cool	4.59	4.59		4.59
Running Current	A	Cool	7.90	8.00		8.00
Starting Current	A		62	62		62
Power Factor	%	Cool	88.3	82.8		78.8

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor.

Panasonic Power source AC, 3N~380V,400V,415V 50Hz

3. SPECIFICATIONS (COOLING ONLY TYPE)

ITEM	MODEL		Indoor unit			Outdoor unit					
			Main body	CS-160U32JP			CU-160C03XP				
			Panel	CZ-06KPU01P							
			Remote Controller	CZ-10RT32P(wired) CZ-10RW01P(wireless)							
(1) Cooling Capacity			kW kcal/h BTU/h	14.50 12,500 50,000							
(2) Cooling Capacity			kW kcal/h BTU/h	15.10 13,000 52,000							
Refrigerant Charge-less			m	30							
Standard Air Volume for High, Medium and Low Speed			m³/min cfm	Hi 34 1201	Me 29 1024	Lo 24 848	Hi 95 3355				
Outside Static Pressure			mmAq in W.G.	0 0		—					
Air Inlet			Lower sided Suction		Back sided Suction						
Air Outlet			Lower sided blow-out		Front blow-out						
Duct Connection			*1 Available		—						
Outside Dimension(H×W×D)			mm inch	(296+28)×930×930 (11-21/32+1-3/32)×36-5/8×36-5/8		1220×1100×320 48-1/32×43-5/16×12-19/32					
Net Weight			kg lbs	40(33+7) 88(73+15)		115 253					
Piping Connectiong	Refrigerant	Gas Liquid	mm(inch) mm(inch)	O.D φ 19.05(3/4) Flared type O.D φ 9.52(3/8) Flared type							
	Drain		mm	O.D φ 32(Accessory drain hose: I.D φ 32)		ID 20×1					
Compressor	Type, number of set		—		Hermetic-1(Scroll),1						
	Starting Method		—		Direct on-line starting						
	Capacity Control		%	—		0.100					
	Motor	Type	—		2-pole 3-phase induction motor						
		Input	kW	—		Cool/4.47					
Fan	Rated Output		kW	—		4.5					
	Type, number of set		unit	Turbo fan-1		Prop fan-2					
	Air Volume Control		Three-Step and Auto mode(Remote Controller)		—						
	Motor	Type	6-pole single phase induction motor		6-pole single phase induction motor						
		Input	kW	0.22		0.12×2					
	Rated Output		kW	0.08		0.055×2					
	Air-heat exchanger		Louver-fin type		Louver-fin type						
	Refrigerant Control		Capillary tube		—						
	Refrigeration oil(Charged)		ℓ	—		SUNISO 4GSDID-K(1.6)					
	Refrigerant(Charged)		kg lbs	—		R-22(5.4) (11.9)					
Running Adjustment	Control Switch		Wireless or Wired Remote Controller		—						
	Room Temperature		Thermostat(Main Body)		—						
Anti-vibration and Anti-sound Materials			Cabinet(urethane fram attached)		Compressor(Anti-vibration rubber)						
Safety Devices			Internal protector for compressor, Internal thermostat F.M, Crankcase heater Drain over-flow switch, High pressure switch, Current Trans, Low pressure switch								
External Finish			ABS resin(Decorative panel)		Powder coating						
Air Filter(Factory set)			Polypropylene regin Honeycomb(Washable)		—						
Noise level		dB(A)	Hi 46	Me 43	Lo 39	Hi 51					

(1) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 35° CD.B.(95° FD.B.), 24° CW.B.(75.2° FW.B.)

(2) Cooling capacities are based on indoor temp.27° CD.B.(80.6° FD.B.), 19.0° CW.B.(66.2° FW.B.) and outdoor air temp. 32° CD.B.(89.5° FD.B.), 24° CW.B.(75.2° FW.B.)

(3)*1 Supply duct and are connectable. Supply duct requires the special parts.

(4) Net weight for indoor unit indicate main body and decorative panel.

ELECTRICAL DATA(50Hz)

ITEM	MODEL		CS 160U32JP, CU-160C03XP		
			Condition by JIS B 8616		
Volts	V		380	400	415
Phase			3N	3N	3N
Power Consumption	kW	Cool	4.93	4.93	4.93
Running Current	A	Cool	8.40	8.20	8.10
Starting Current	A		61	61	61
Power Factor	%	Cool	89.2	88.8	84.7

*Power Factor means total figure of compressor, indoor fan motor and outdoor fan motor

Panasonic

Power source


AC, 3N~380V, 400V, 415V

4. TECHNICAL DRAWING

CS-40U32JP, CS-50U32JP

No.	Description	PC Dimension
14	Louver motor	1 Attached panel
13	Evaporator	1
12	Drain up motor	1
11	Turbo fan	1
10	Fan motor	1
9	Hanger	4
8	Air Filter	1
7	Air inlet grill	1
6	Air outlet grill	4
5	Decorative panel	1 CZ-02X801P
4	Control box	1
3	Drain pipe connection	1 OD432
2	Load pipe connection	1 OD6.35 Flared
1	Gas pipe connection	1 OD4.12 Flared
No.	Description	PC Dimension

[Note] Please open more than 10mm between indoor unit top face and ceiling

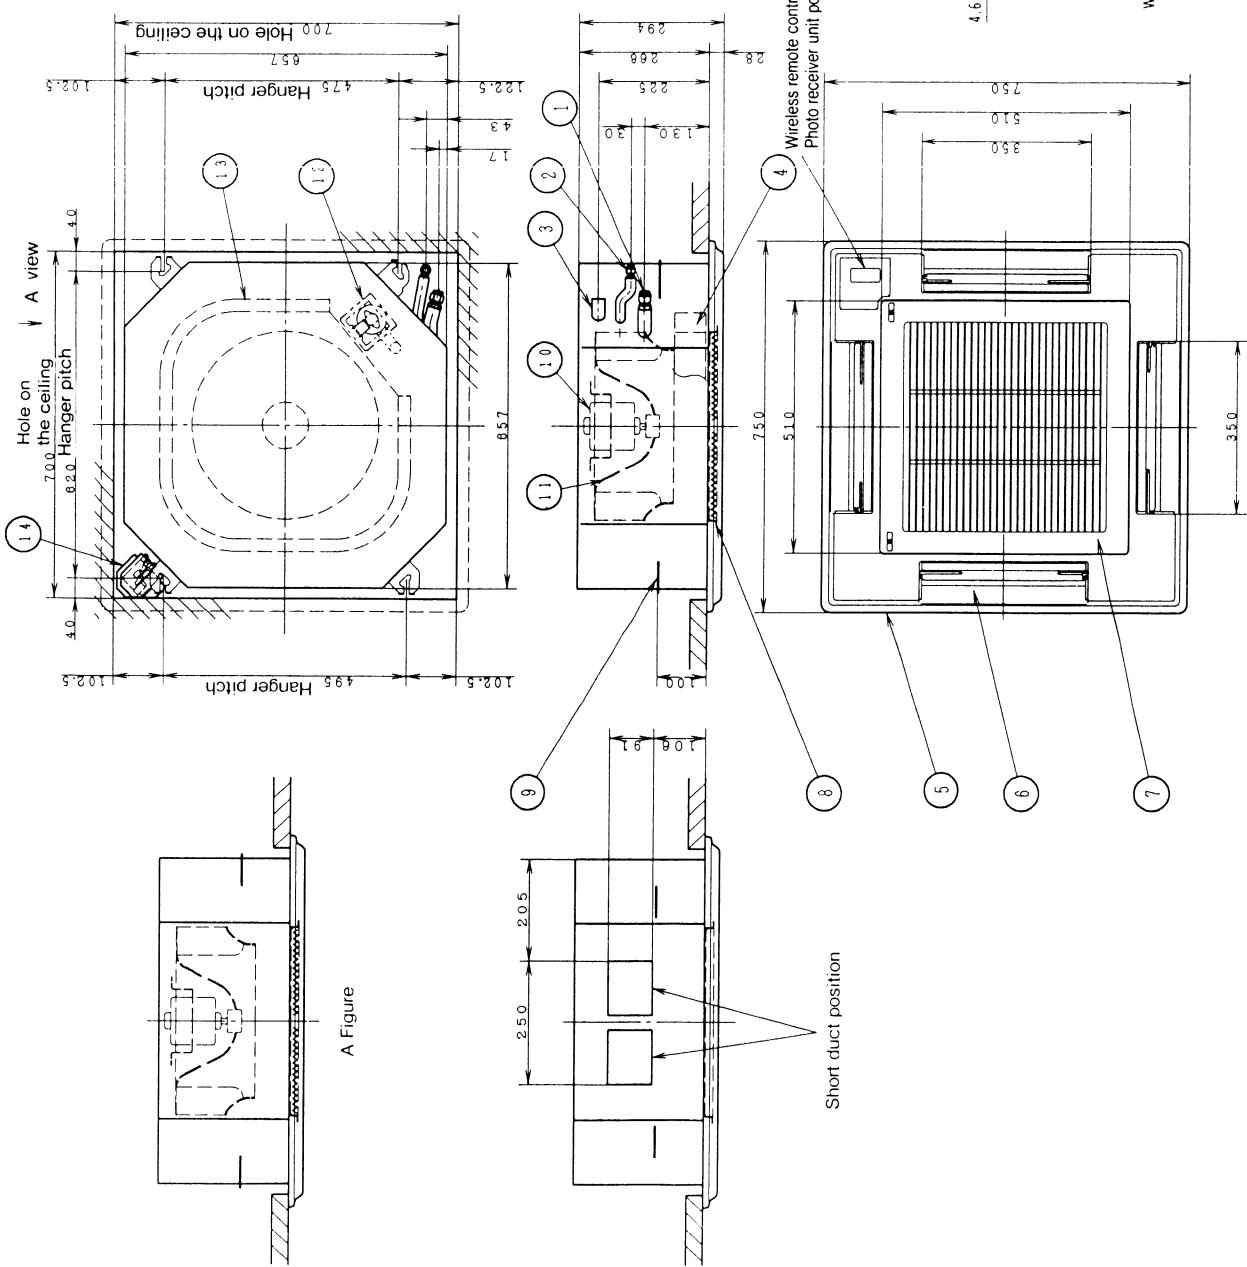


4. TECHNICAL DRAWING

CS-71U32JP

14	Louver motor	1	Attached panel
13	Evaporator	1	
12	Drain up motor	1	
11	Turbo fan	1	
10	Fan motor	1	
9	Hanger	4	
8	Air Filter	1	
7	Air inlet grill	1	
6	Air outlet grill	4	CZ-02W/P01P
5	Decorative panel	1	
4	Control box	1	
3	Char pipe connection	1	0.D32
2	Load pipe connection	1	0.D06.35 Faced
1	Gas pipe connection	1	0.D15.38 Faced
No.	Description	PC	Dimension


[Note] Please open more than 10mm between indoor unit top face and ceiling

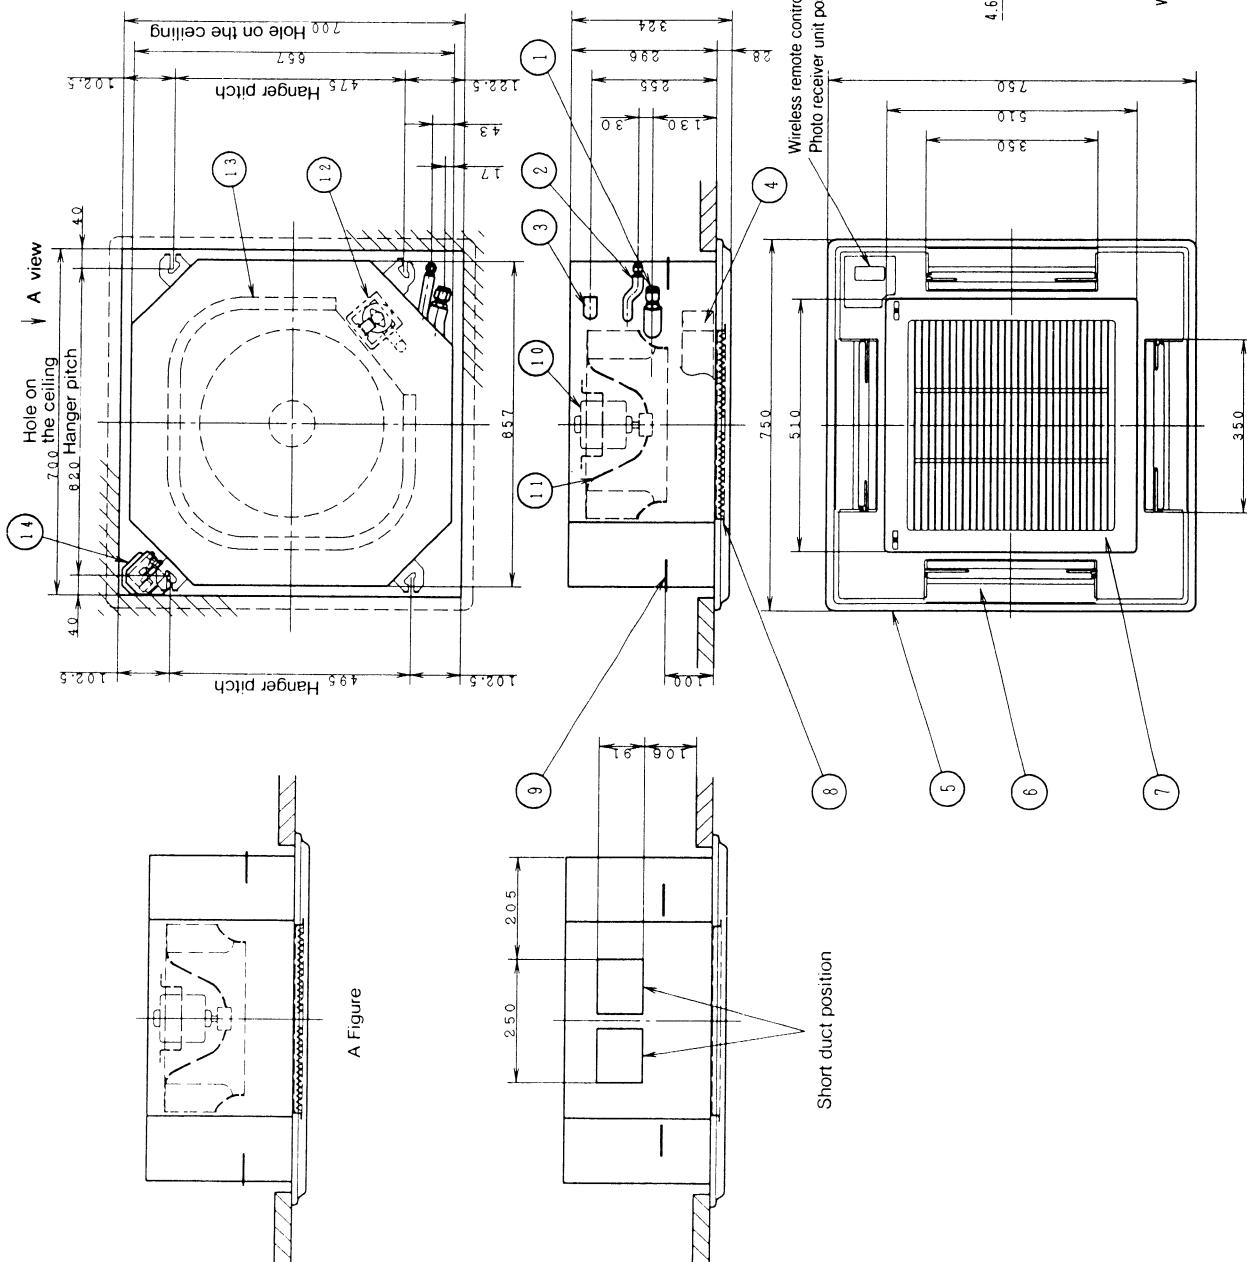

A Figure

4. TECHNICAL DRAWING

CS-80U32JP

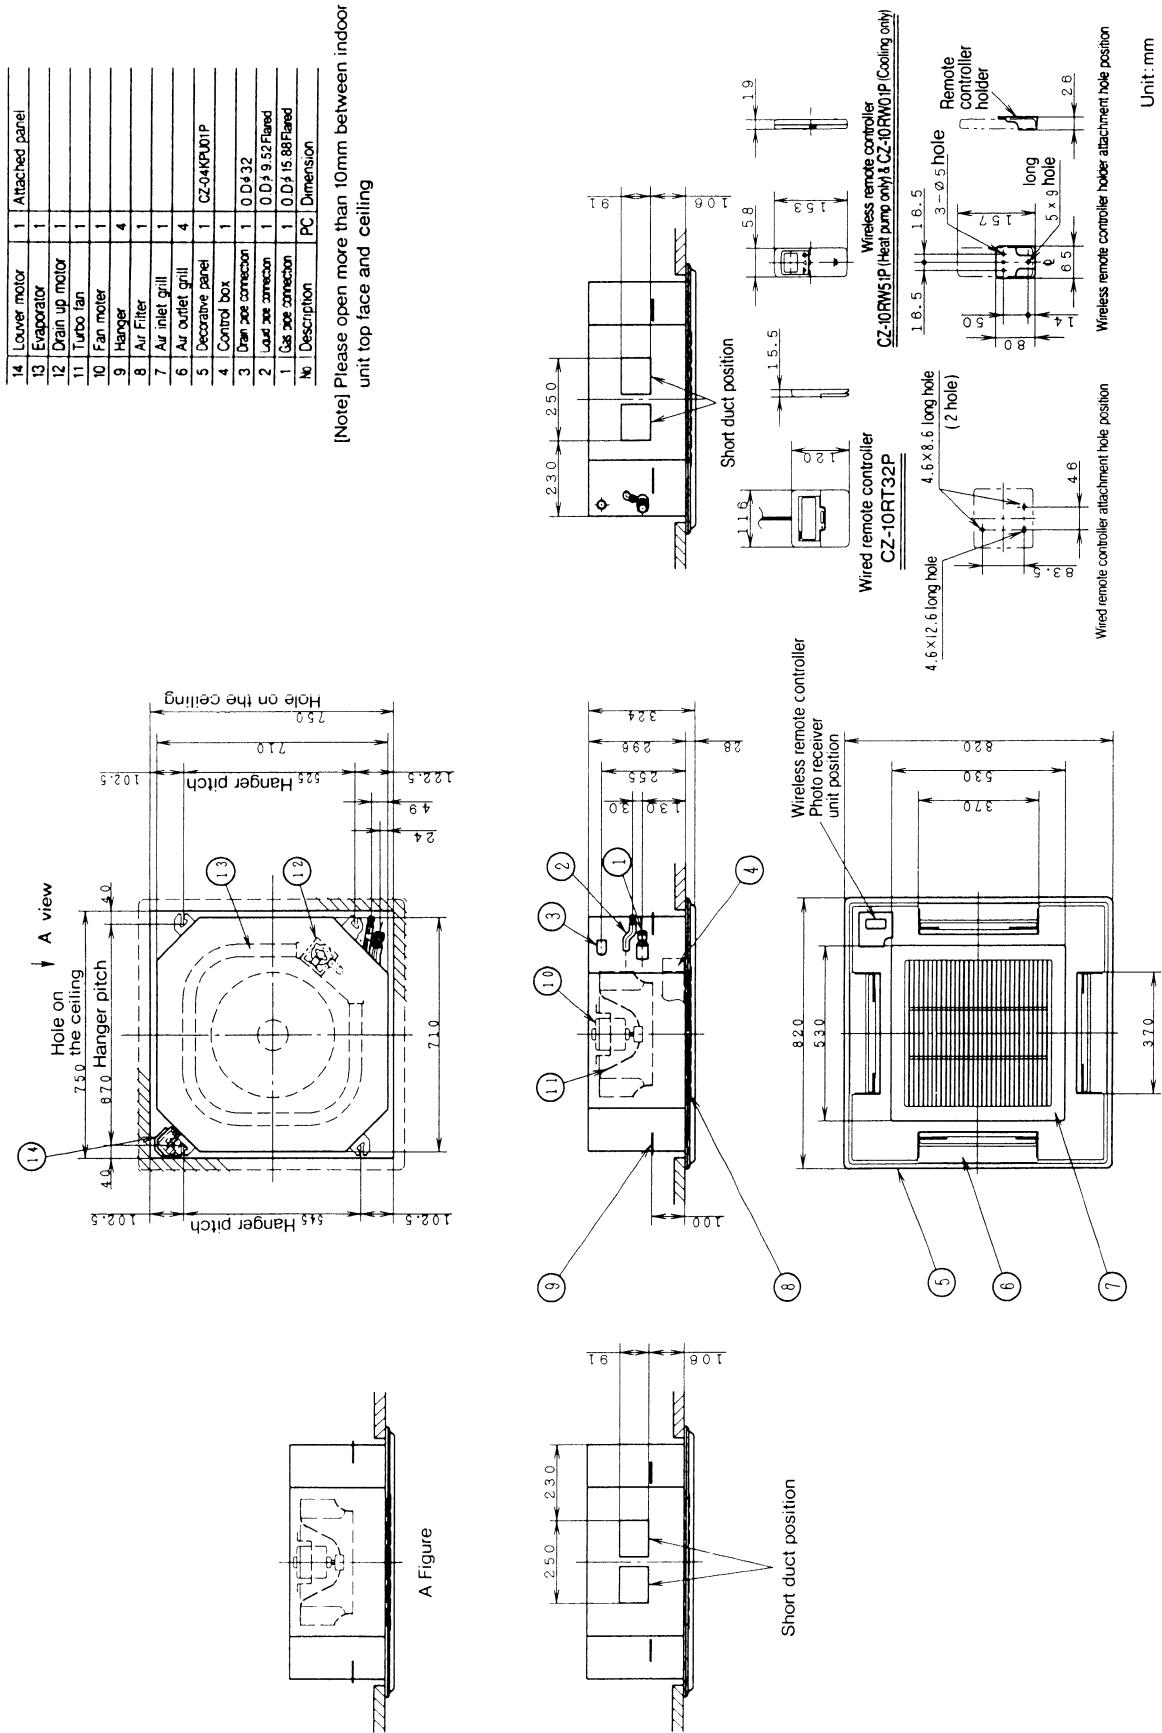


4. TECHNICAL DRAWING


CS-112U32JP

14	Louver motor	1	Attached panel
13	Evaporator	1	
12	Drain up motor	1	
11	Turbo fan	1	
10	Fan motor	1	
9	Hanger	4	
8	Air filter	1	
7	Air inlet grill	1	
6	Air outlet grill	4	CZ-24KXP01P
5	Decorative panel	1	
4	Control box	1	
3	Danper connection	1	0 D432
2	Wired remote connection	1	0 D3.52Pared
1	Wireless remote connection	1	0 D3.905Pared
	KC : Description		PC : Dimension

[Note] Please open more than 10mm between indoor unit top face and ceiling

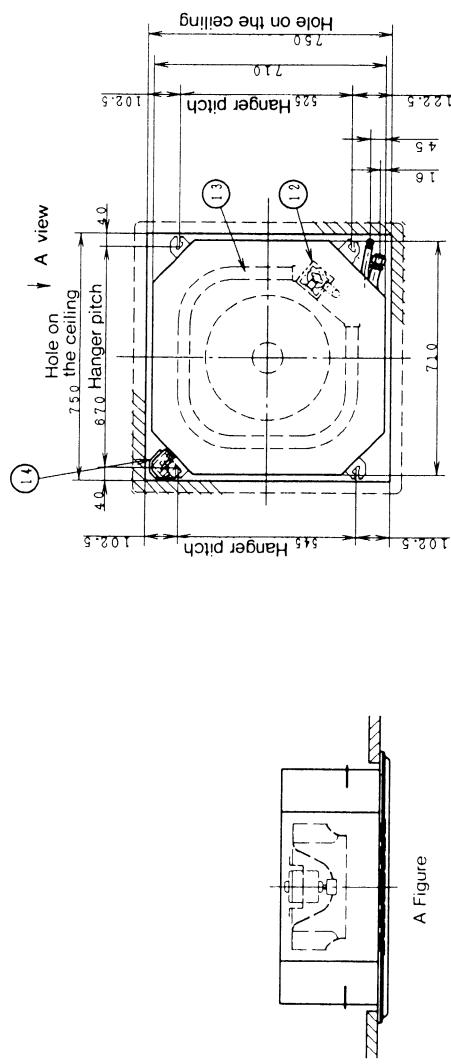


A Figure

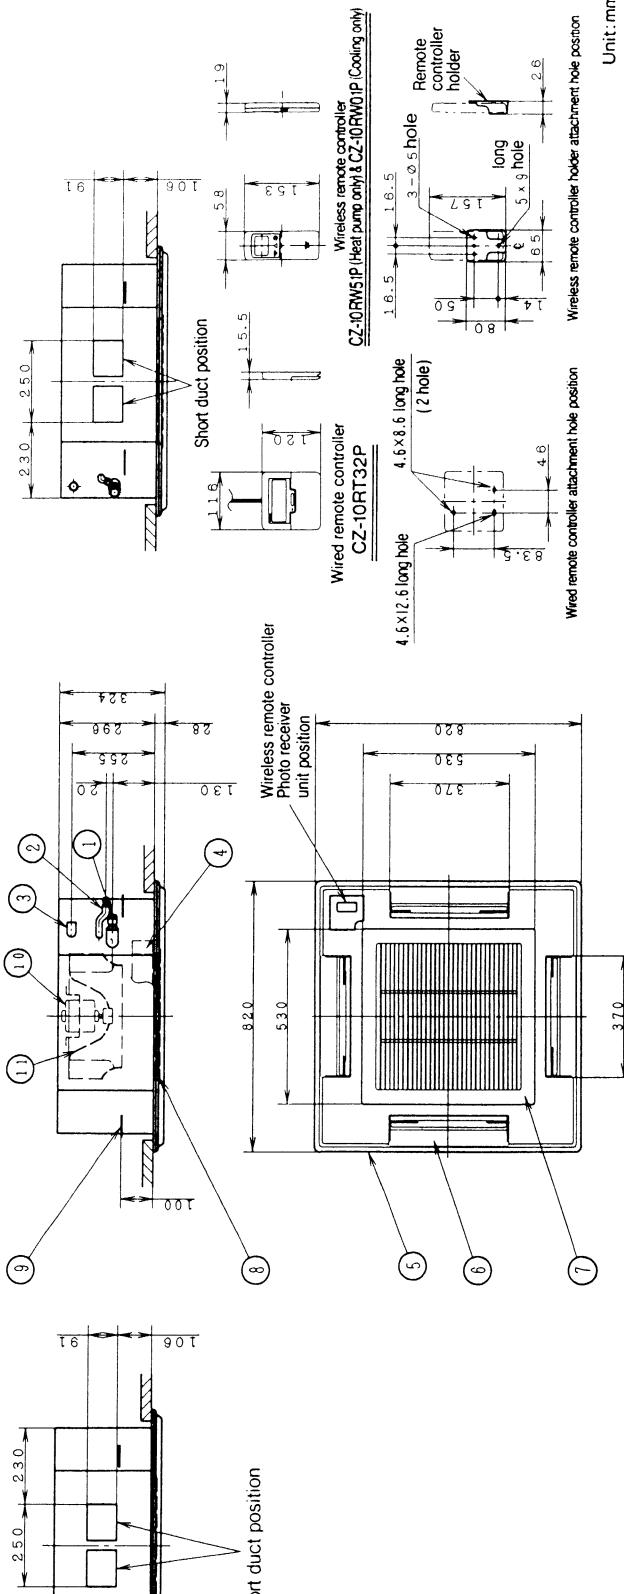

Unit:mm


4. TECHNICAL DRAWING

CS-140U32JP, CS-160U32JP

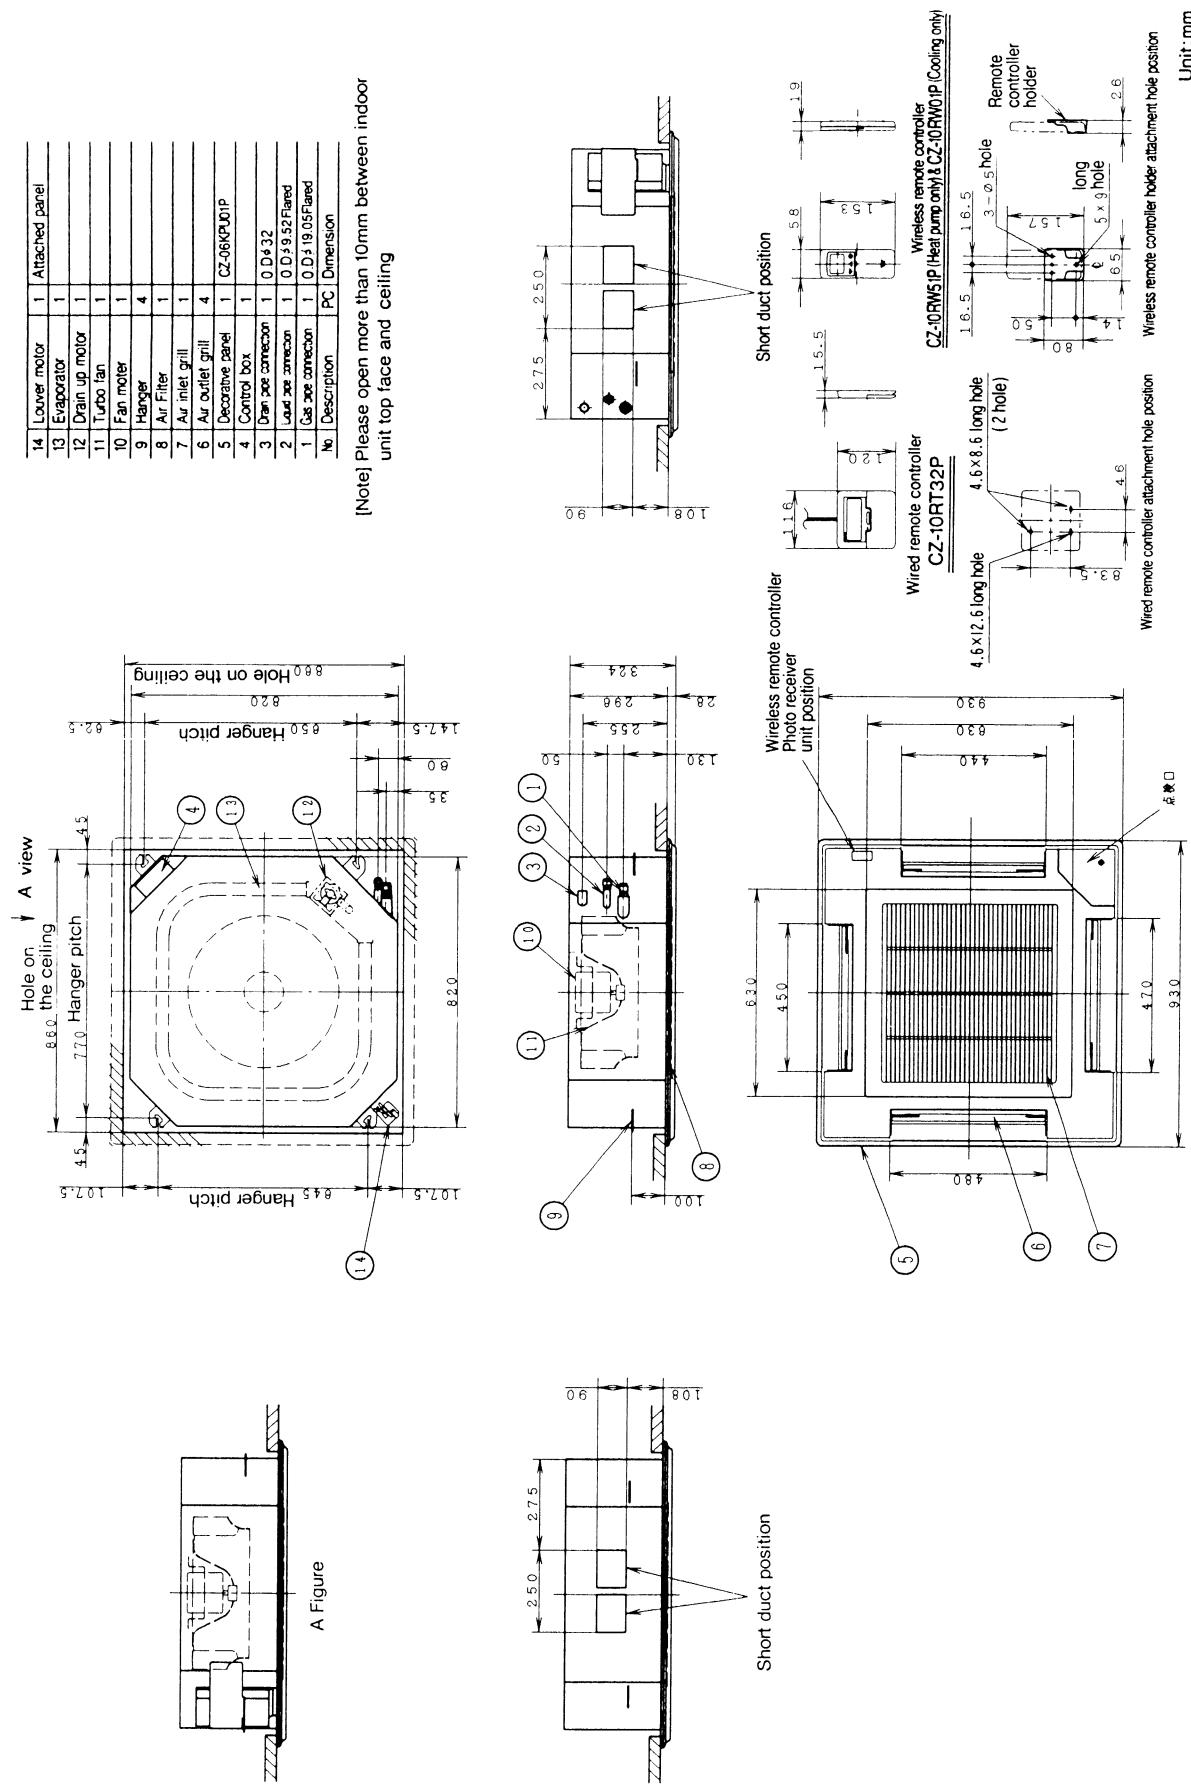

4. TECHNICAL DRAWING







CU-40C52HP, CU-50C52HP, CU-40C02HP, CU-50C02HP

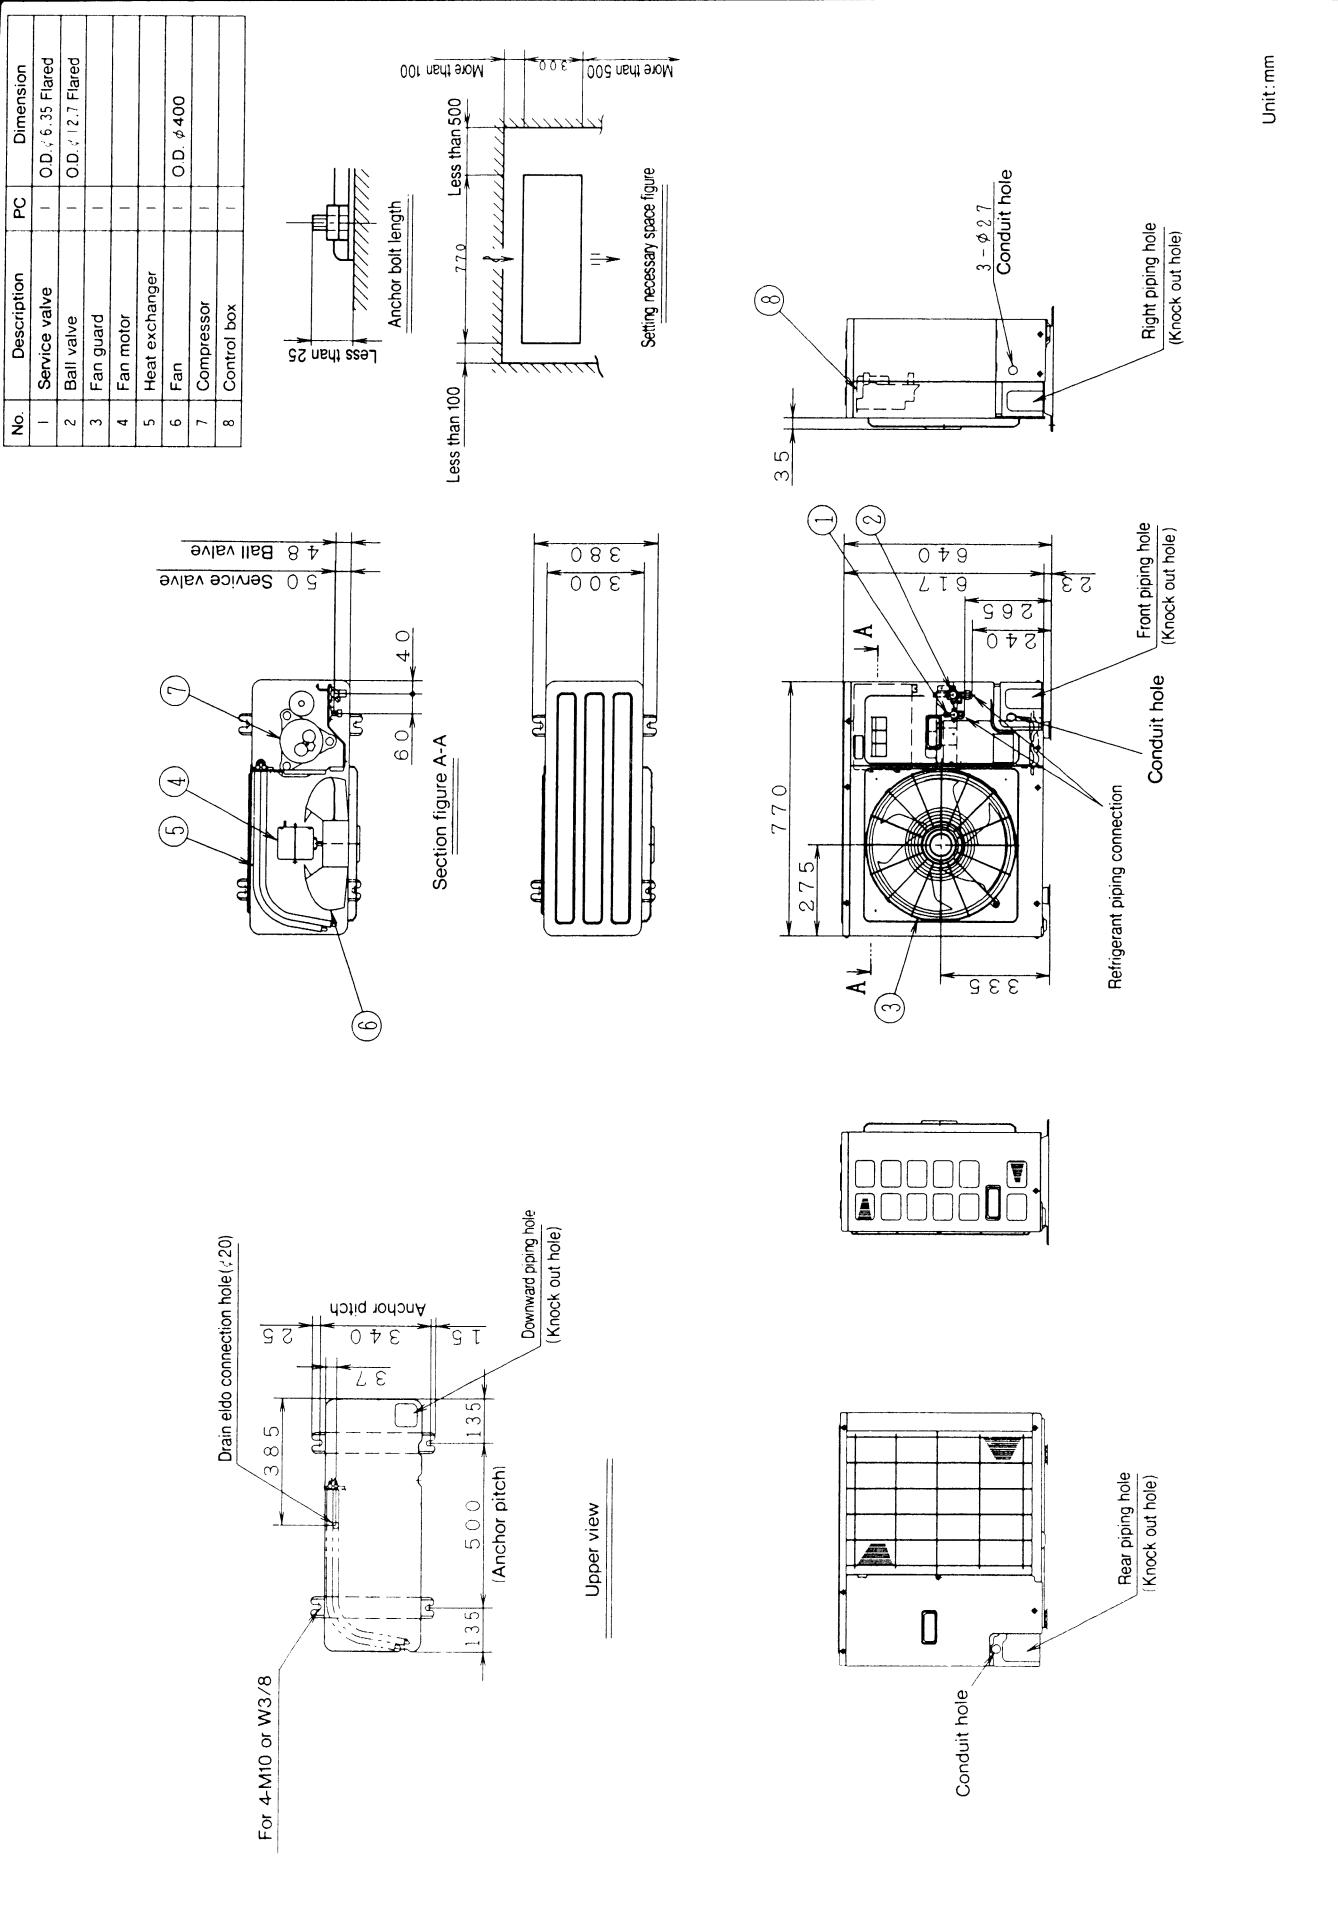

4. TECHNICAL DRAWING

CU-71C52HP, CU-71C52XP, CU-71C02HP, CU-71C02XP

No.	Description	PC	Dimension
1	Service valve	I	O.D.φ 6.35 Flared
2	Ball valve	I	O.D.φ 15.88 Flared
3	Fan guard	I	
4	Fan motor	I	
5	Heat exchanger	I	
6	Fan	I	O.D.φ 430
7	Compressor	I	
8	Control box	I	


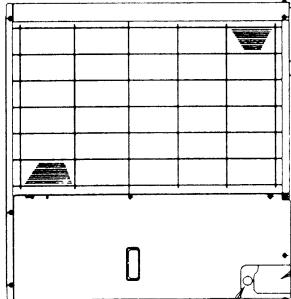
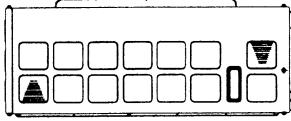
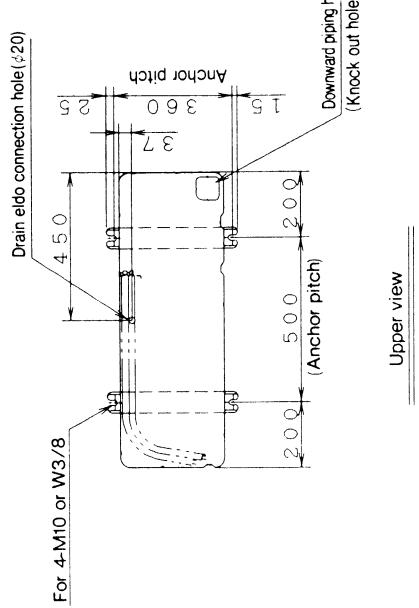
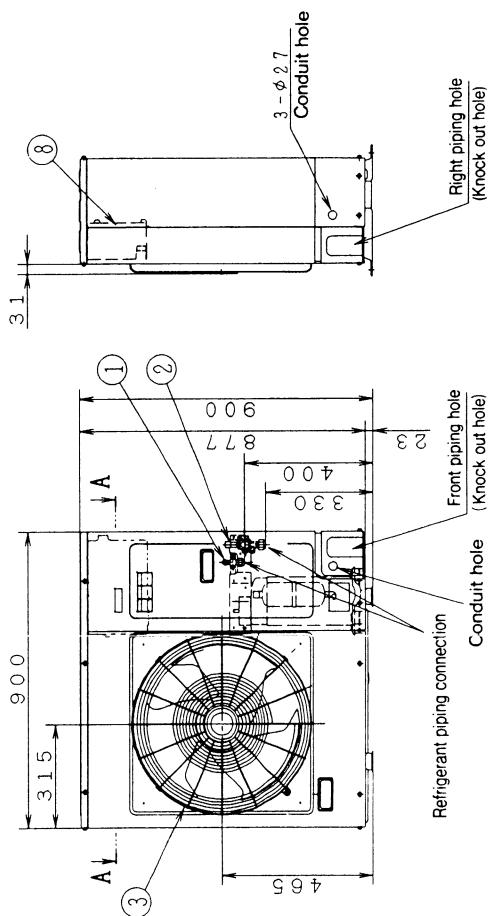
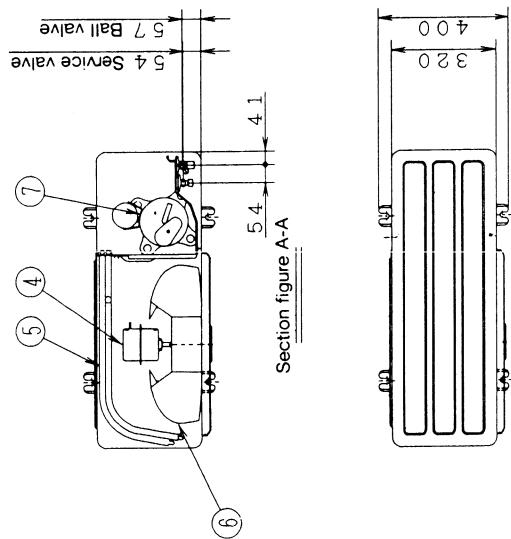
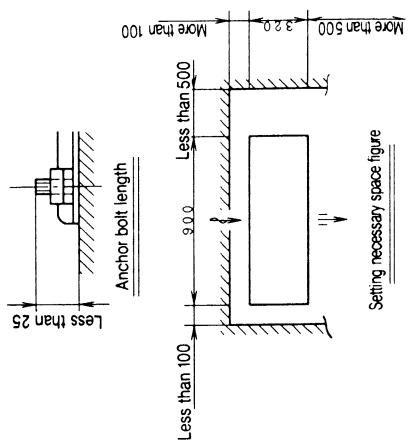


Unit:mm

4. TECHNICAL DRAWING


CU-80C52HP, CU-80C52XP, CU-80C02HP, CU-80C02XP

No.	Description	PC	Dimension
1	Service valve	-	O.D. ϕ 9.52 Flared
2	Ball valve	-	O.D. ϕ 15.85 Flared
3	Fan guard	-	
4	Fan motor	-	
5	Heat exchanger	-	
6	Fan	-	O.D. ϕ 480
7	Compressor	-	
8	Control box	-	

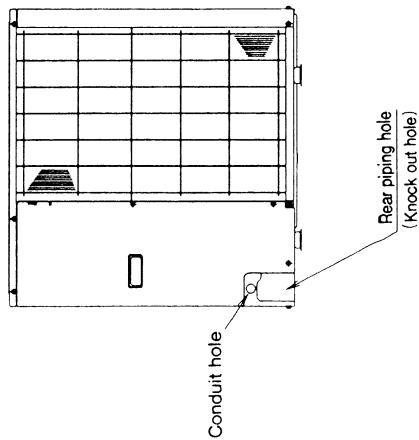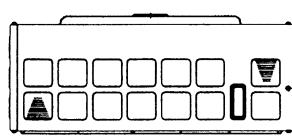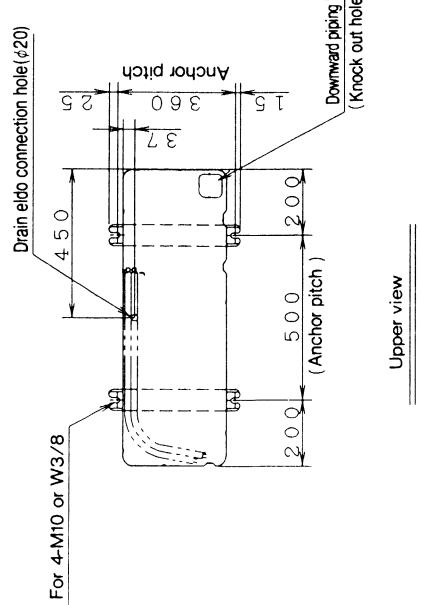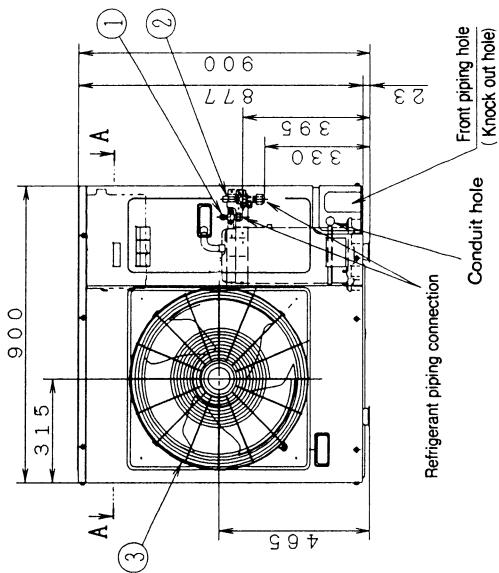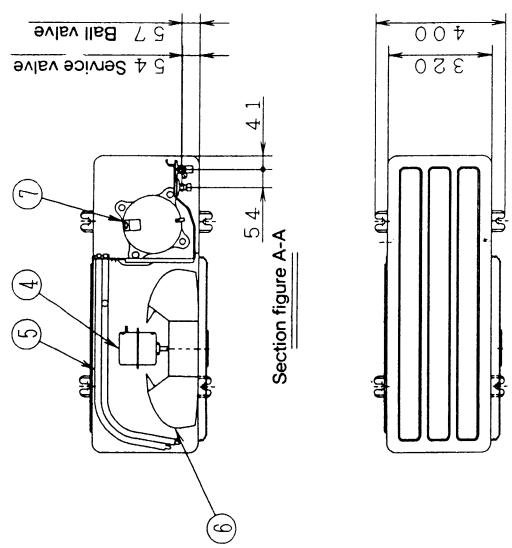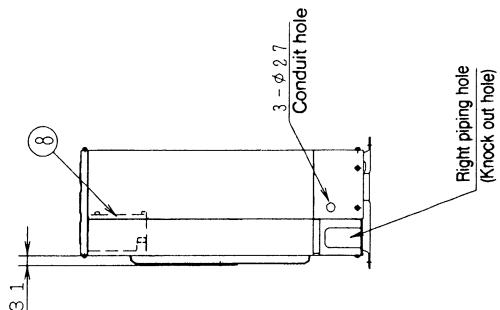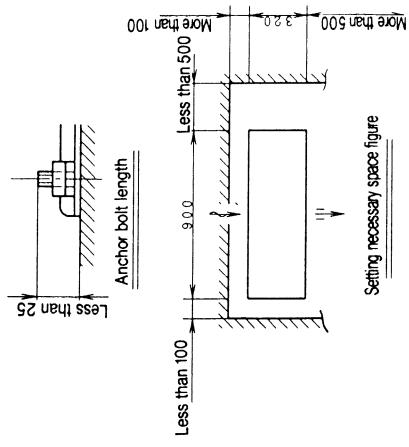

4. TECHNICAL DRAWING








CU-112C52XP, CU-112C02XP

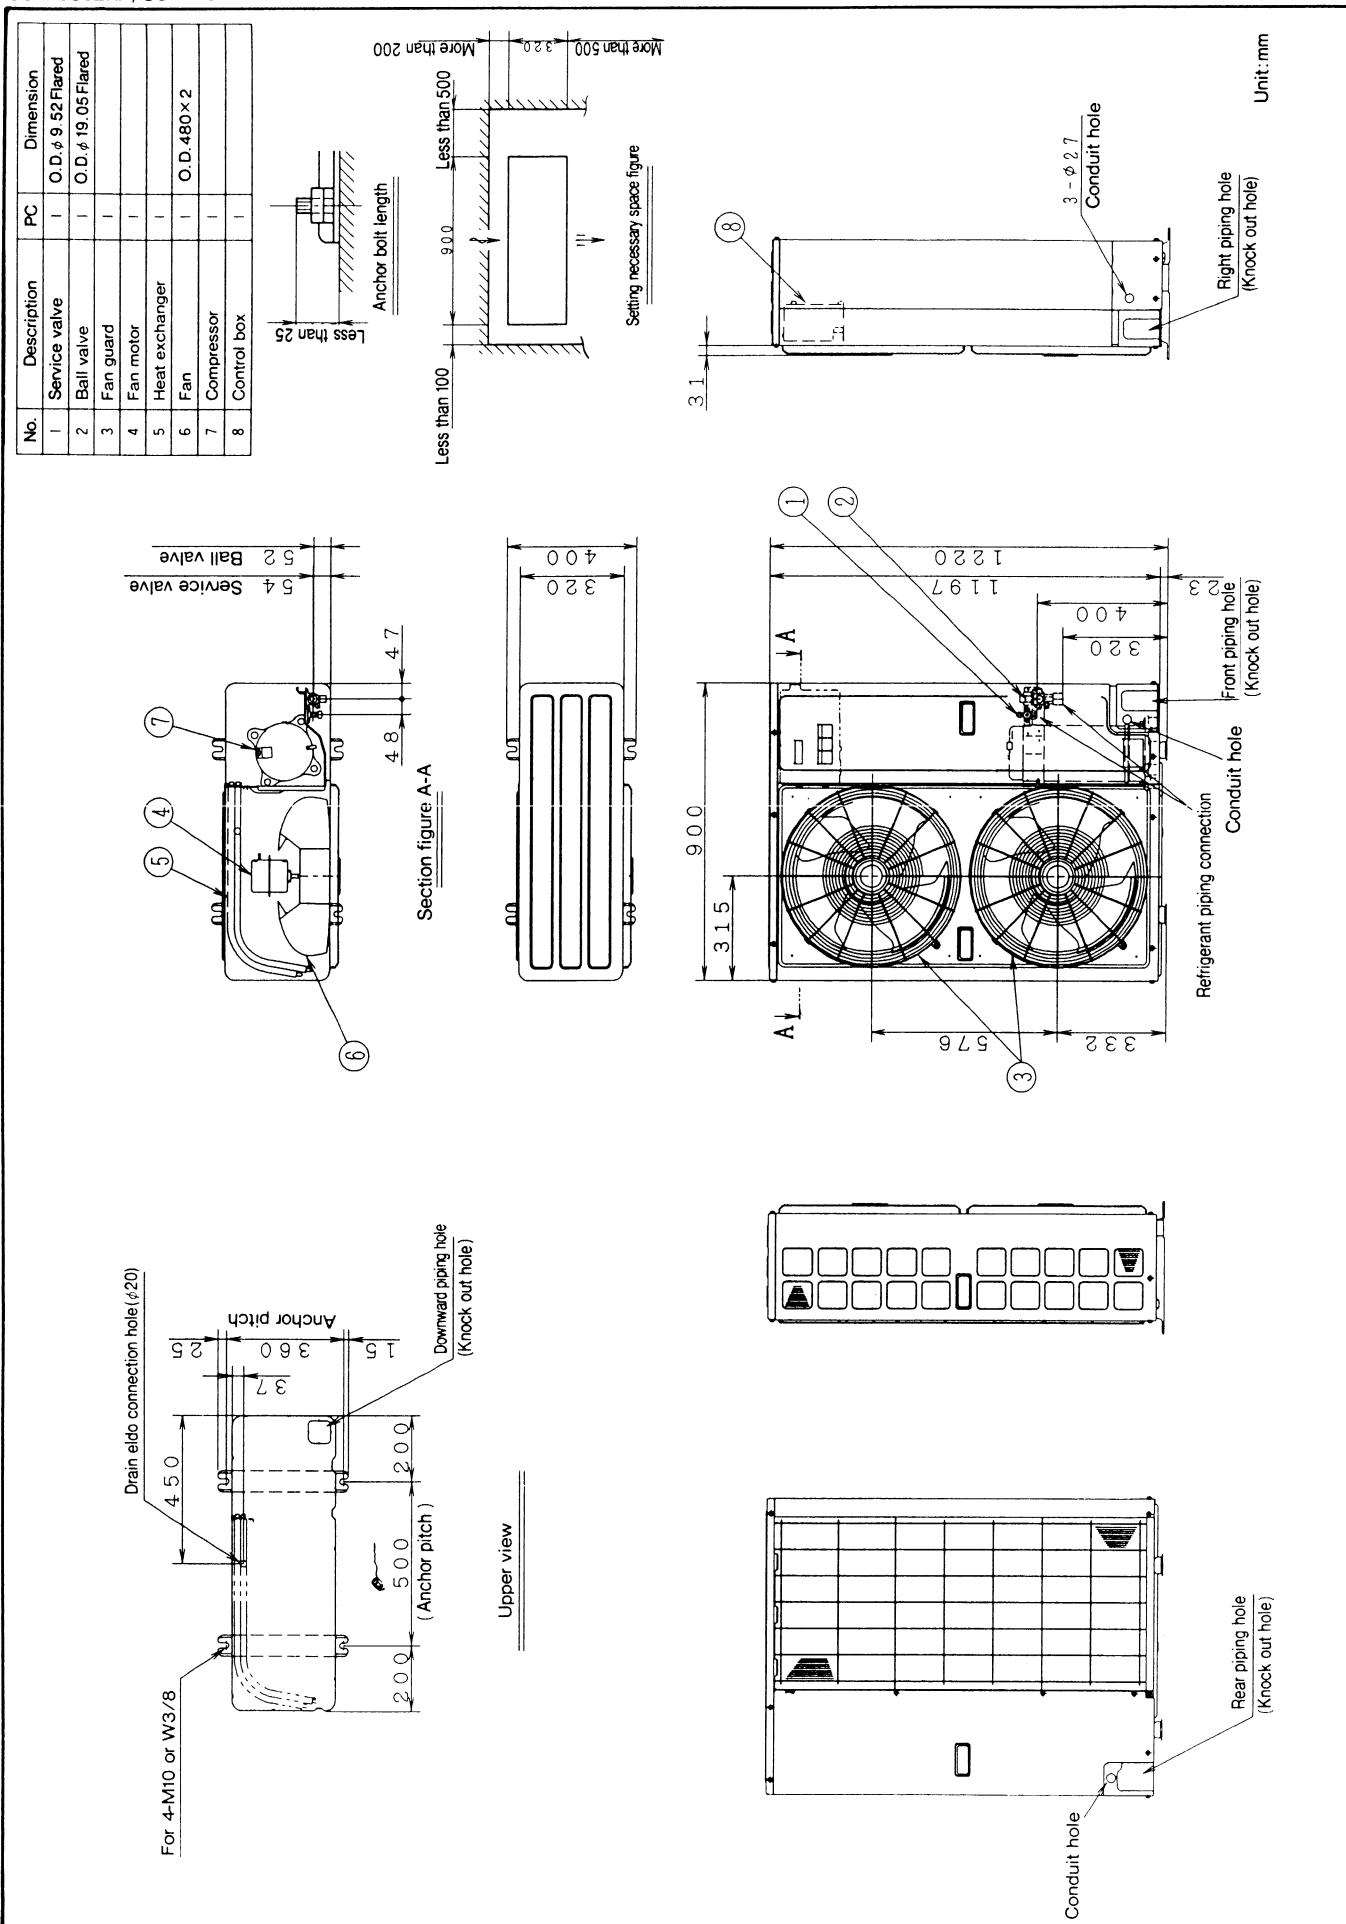


4. TECHNICAL DRAWING

CU-140C53XP, CU-140C03XP, CU-160C53XP, CU-160C03XP

No.	Description	PC	Dimension
1	Service valve	I	O.D. ϕ 9.52 Flared
2	Ball valve	I	O.D. ϕ 19.05 Flared
3	Fan guard	I	
4	Fan motor	I	
5	Heat exchanger	I	
6	Fan	I	O.D. 480 x 2
7	Compressor	I	
8	Control box	I	

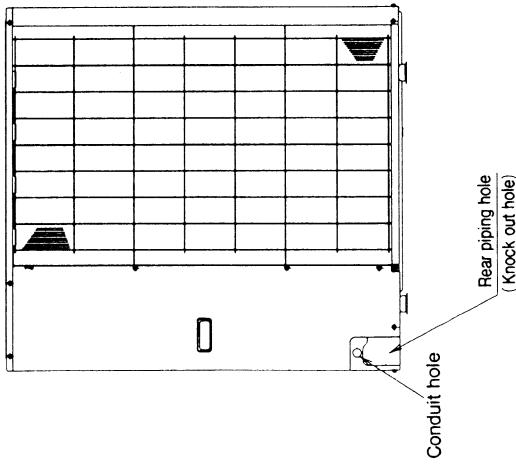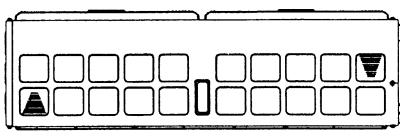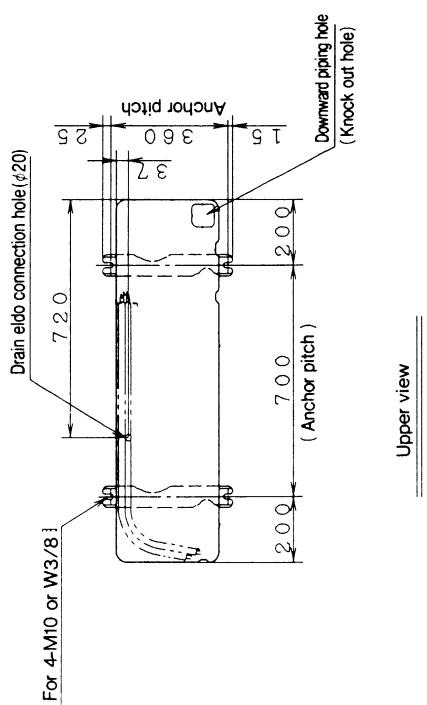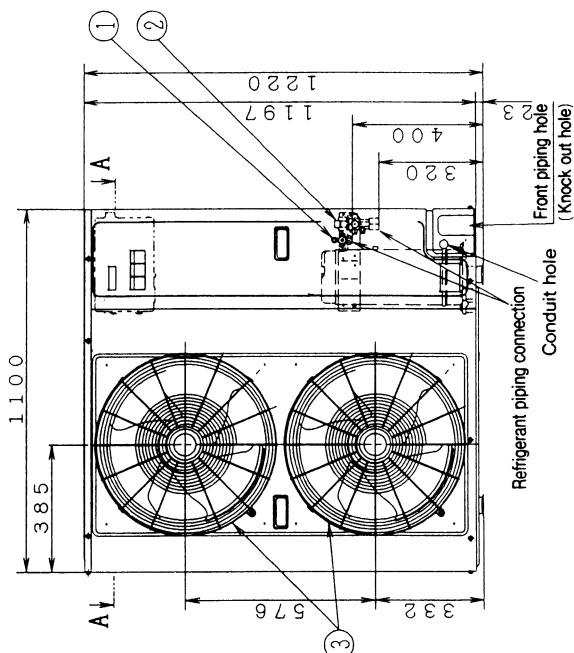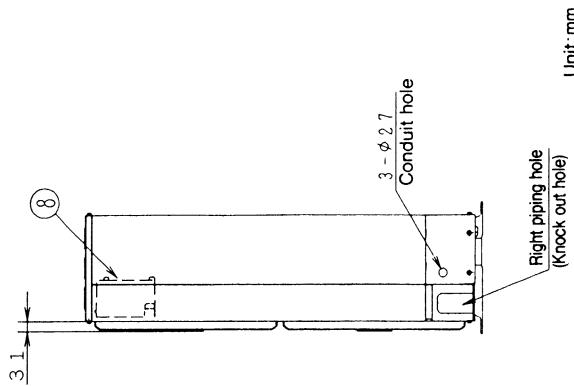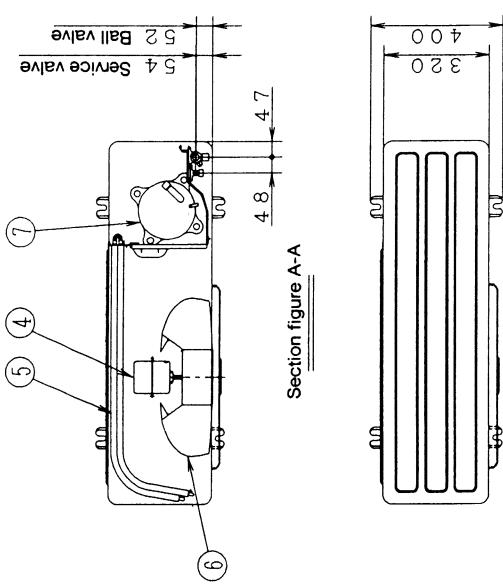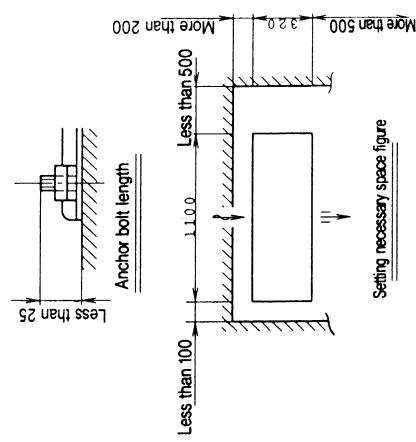

CS-40U32JP, CS-50U32JP, CS-71U32JP

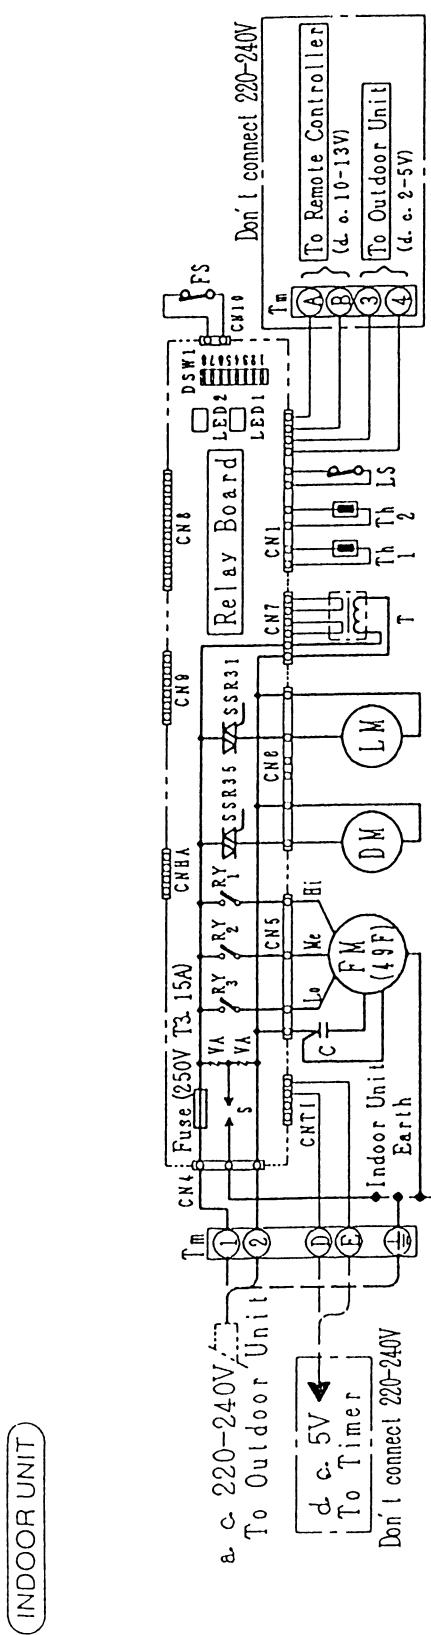
CONNECTION DIAGRAM (Indoor Unit)

FM	Fan Motor	T	Transformer
DM	Drain Motor	LS	Louver Switch
FS	Float Switch		
C	Capacitor for FM		
49F	Internal Thermostat for FM		
Th1	Thermistor for Indoor Temperature		
Th2	Thermistor for Indoor Piping		
Tm	Terminal Board for Control Circuit		
LM	Louver Motor		

5. CIRCUIT DIAGRAM

CS-80U32JP, CS-112U32JP


CONNECTION DIAGRAM (Indoor Unit)

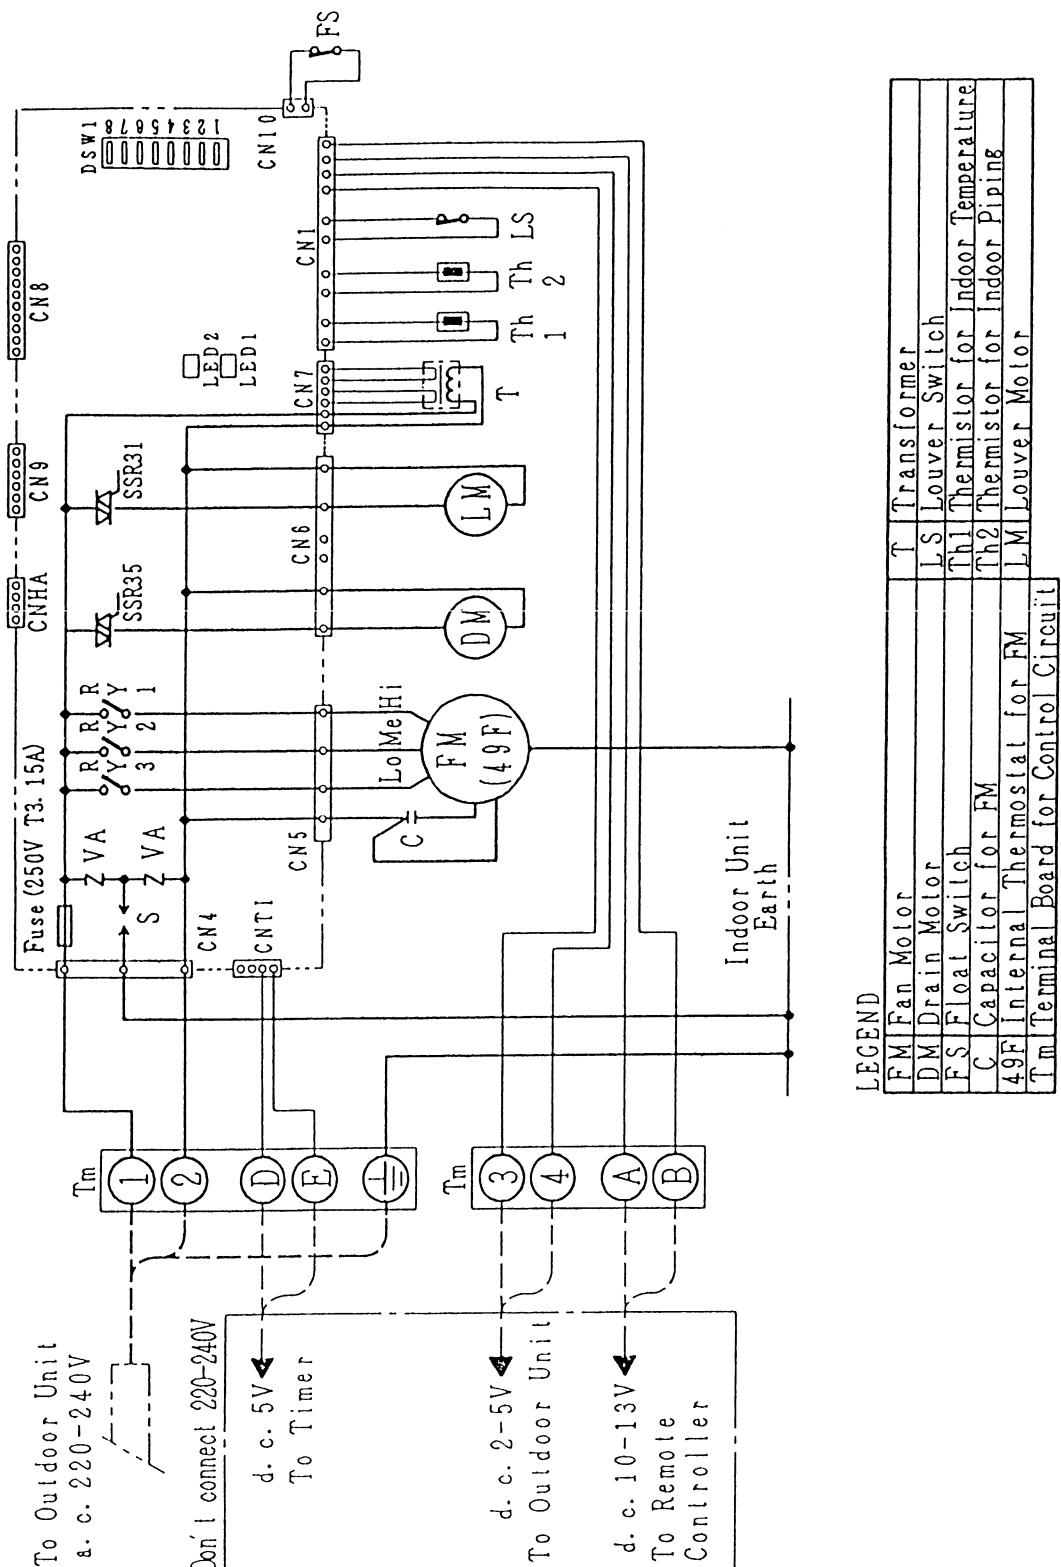

5. CIRCUIT DIAGRAM


CS-140U32JP, CS-160U32JP

CONNECTION DIAGRAM (Indoor Unit)

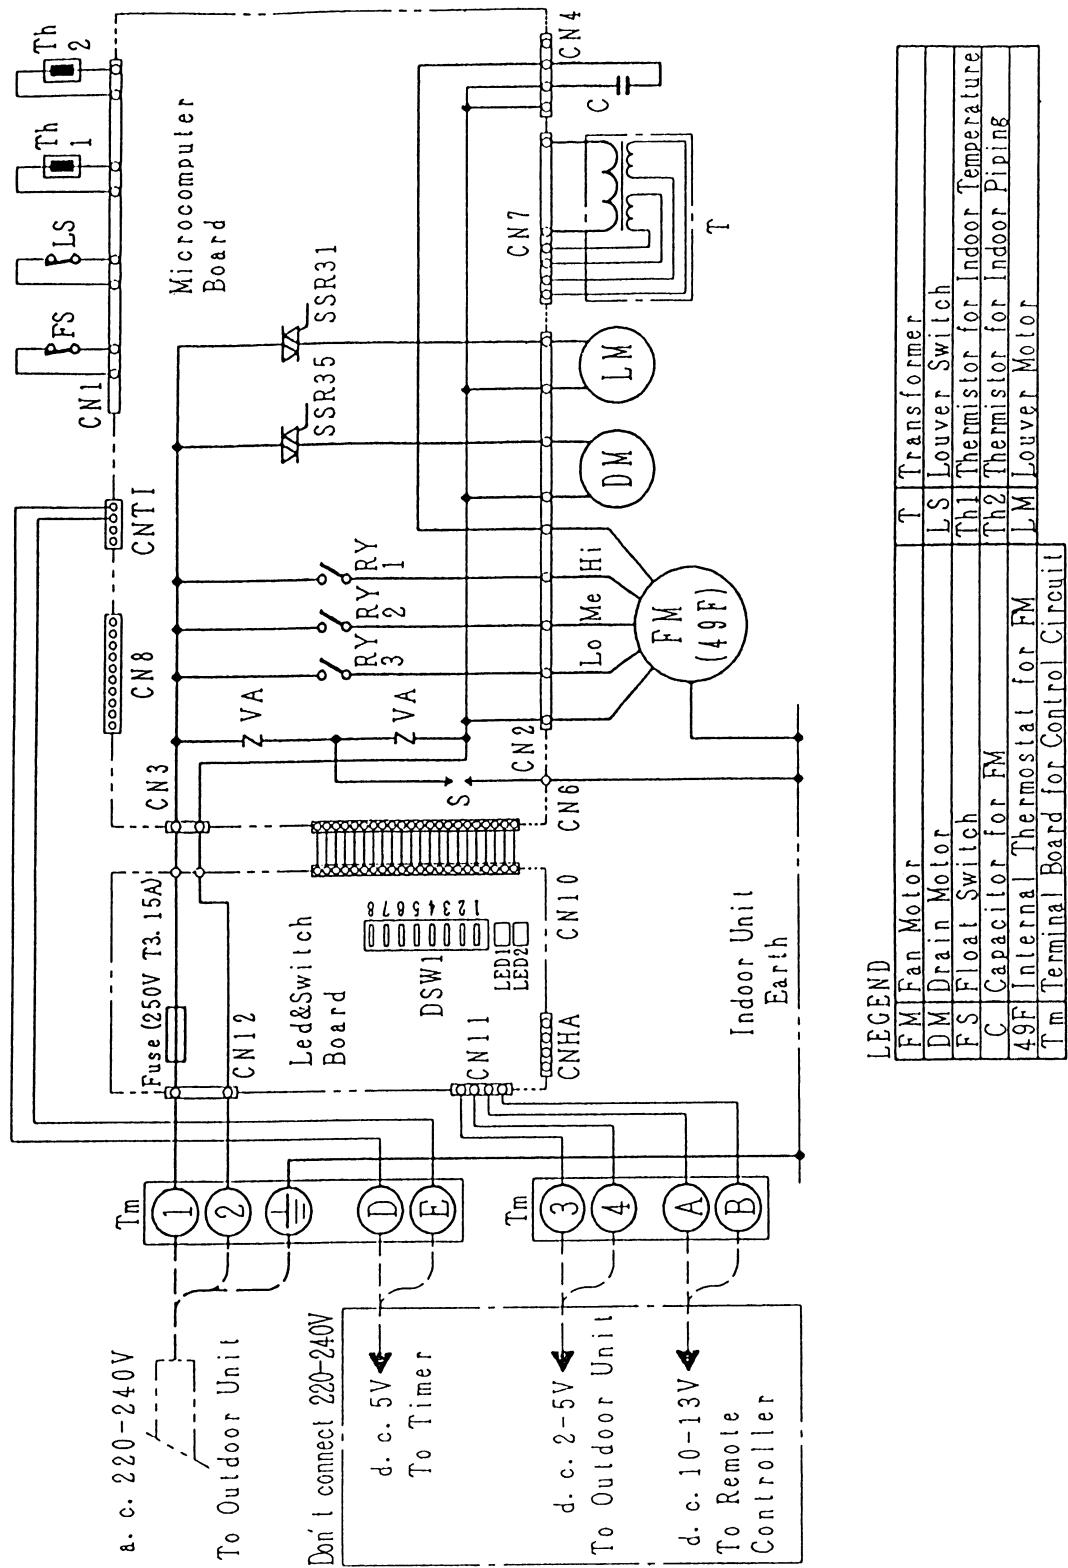


5. CIRCUIT DIAGRAM(HEAT PUMP TYPE)

CU-40C52HP, CU-50C52HP

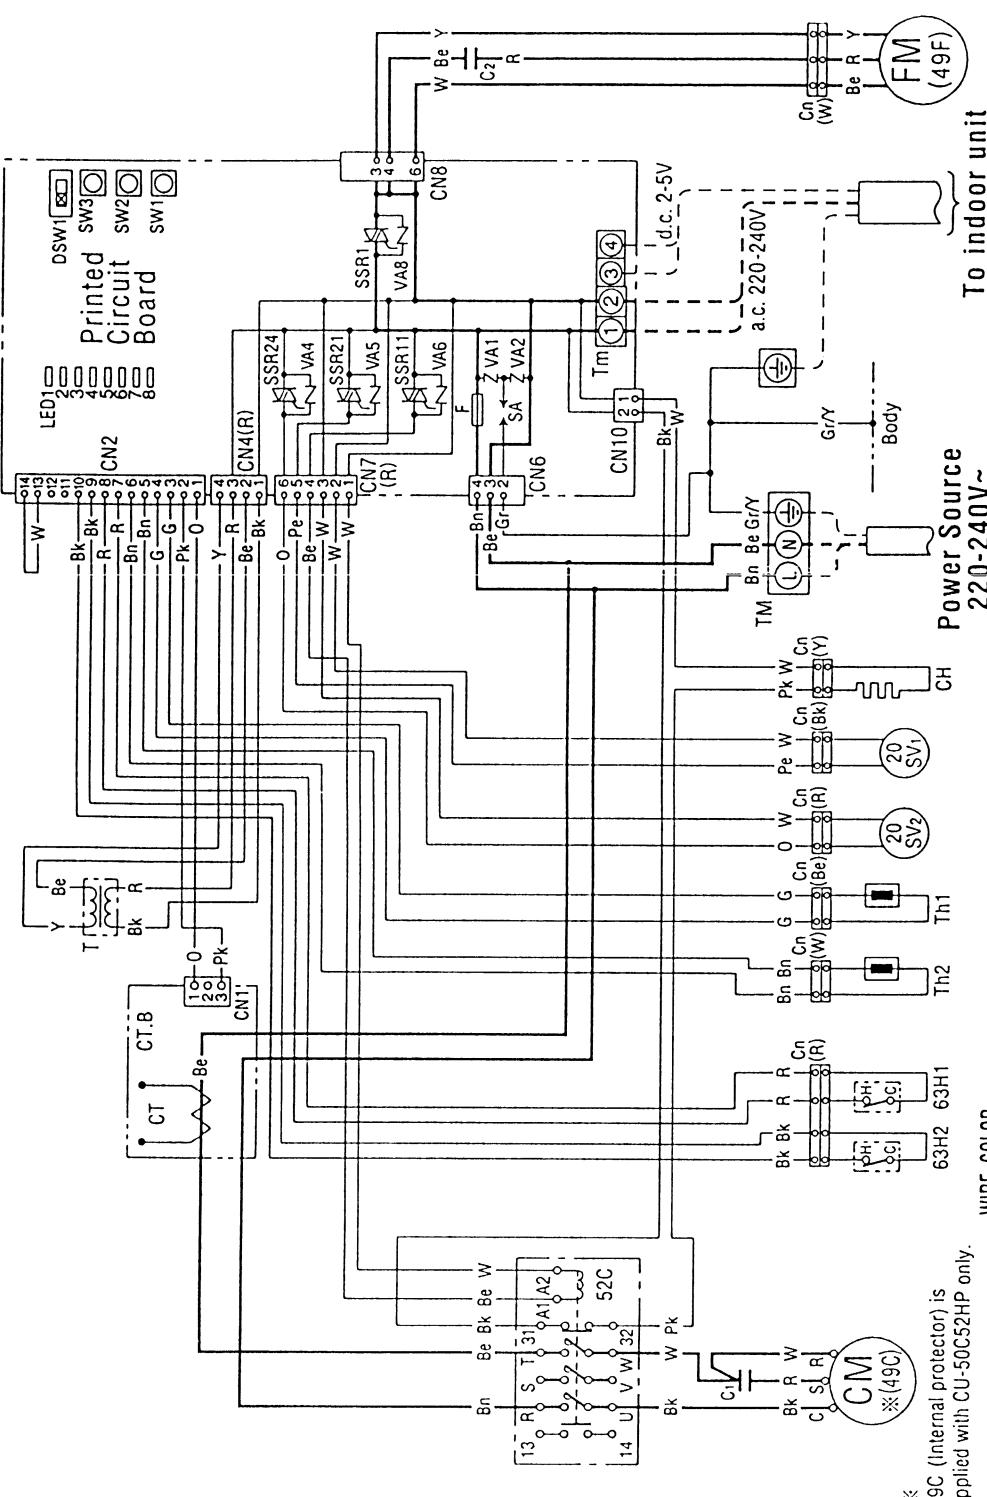


LEGEND		Printed Circuit Board	
R	Red	CM	Compressor Motor
Y	Yellow	20SV ₁	Reversing Valve
Be	Blue	20SV ₂	Bypass Magnetic Valve
O	Orange	49C	Internal Protector for CM
W	White	FM	Fan Motor (Outdoor Unit)
Bn	Brown	49F	Internal Protector for FM
Pk	Pink	52C	Magnetic Contactor for CM
Gr	Gray	C ₁	Capacitor for CM
Bl	Black	C ₂	Capacitor for FM
Pe	Purple	CH	Crankcase Heater for CM
Gr	Green	63H ₁	High Pressure Switch
		63H ₂	High Pressure Switch on Heat-pump

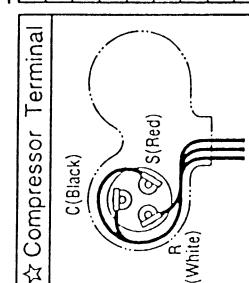


5. CIRCUIT DIAGRAM(HEAT PUMP TYPE)

CU-71C52HP, CU-80C52HP

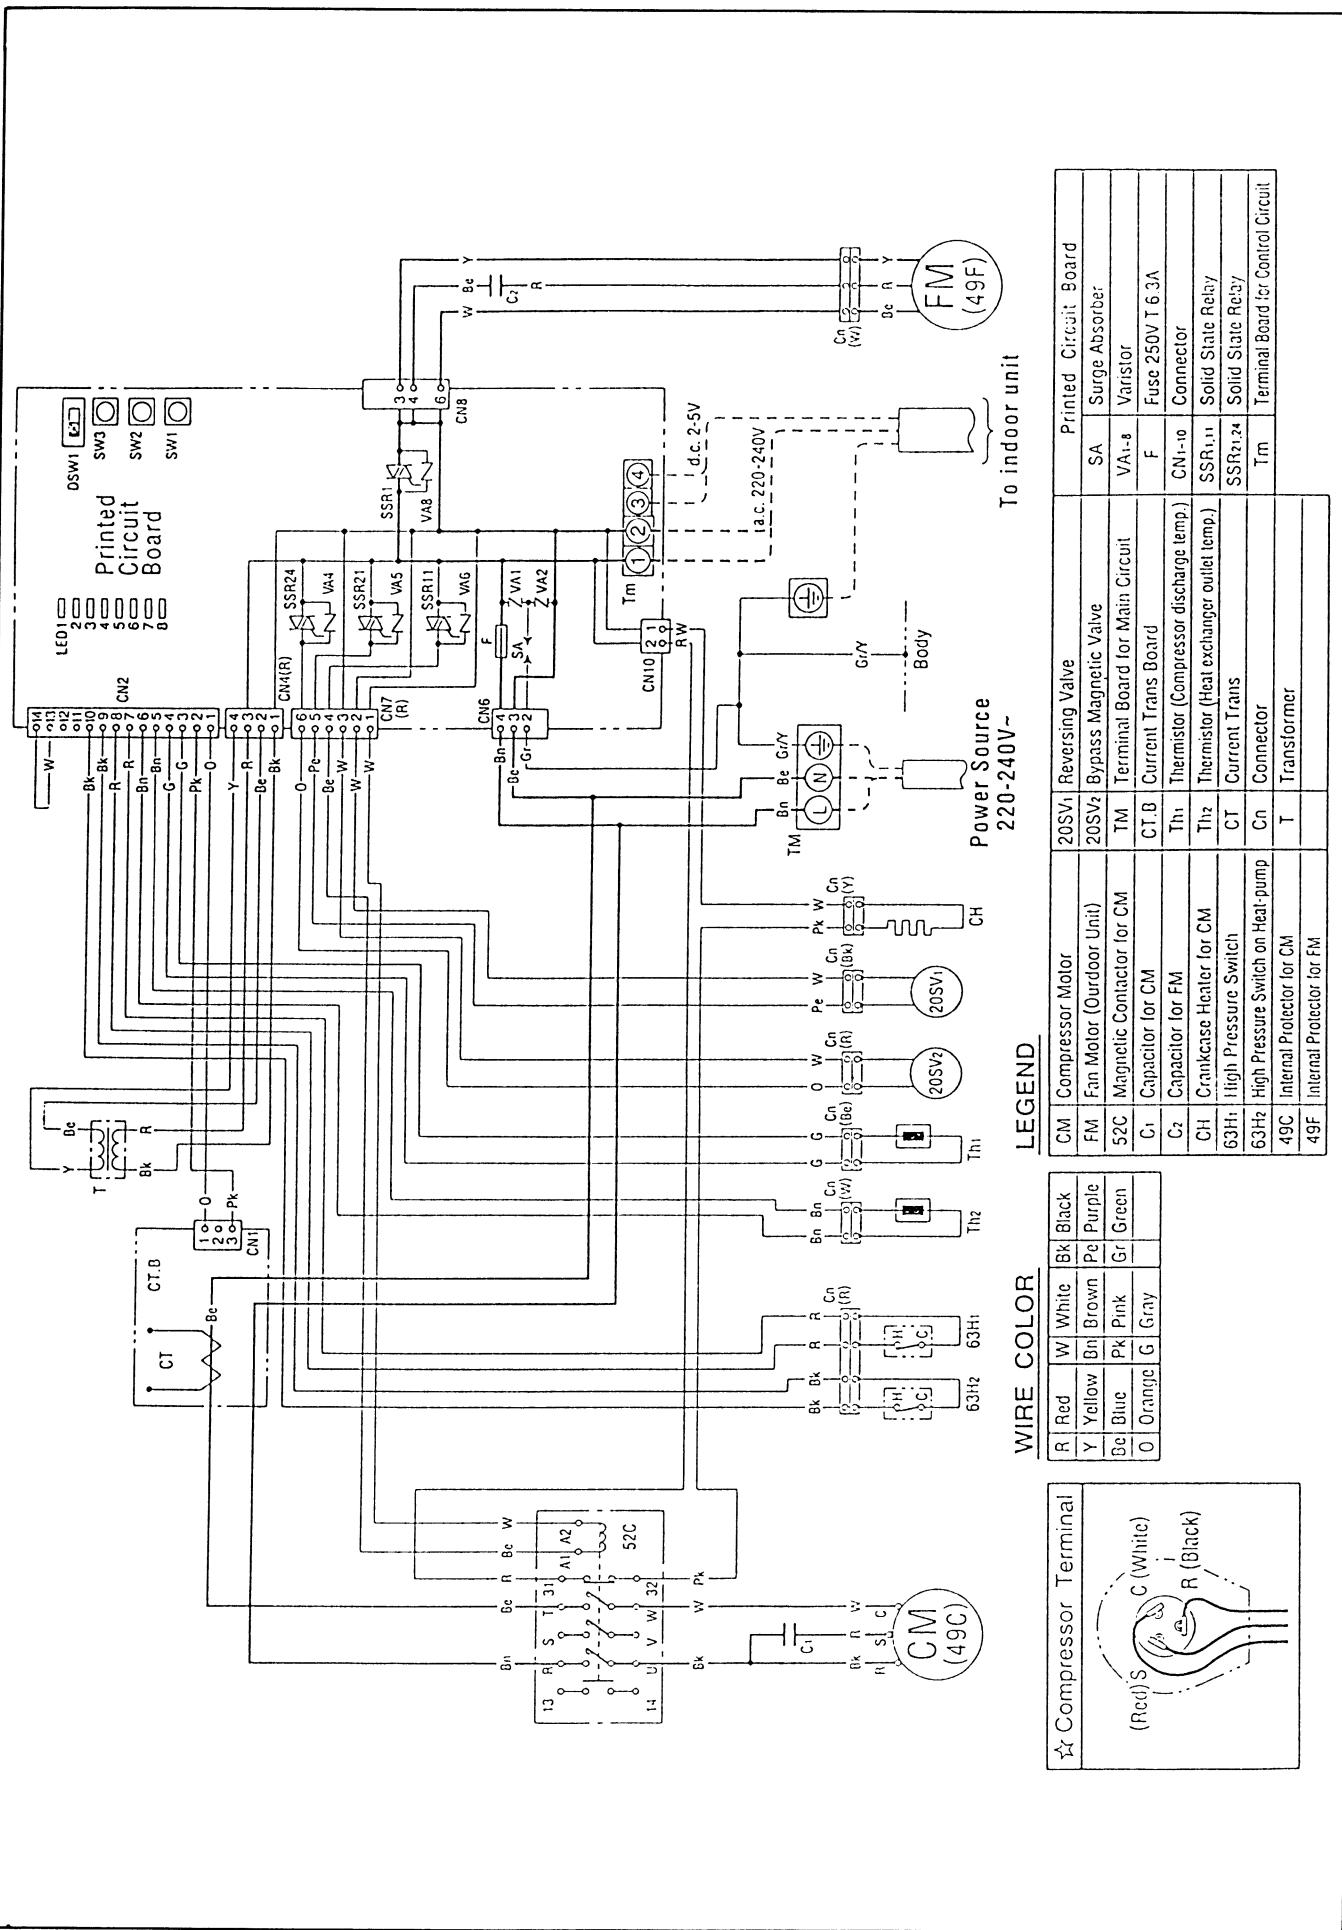


5. CIRCUIT DIAGRAM(HEAT PUMP TYPE)

CU-71C52XP, CU-80C52XP

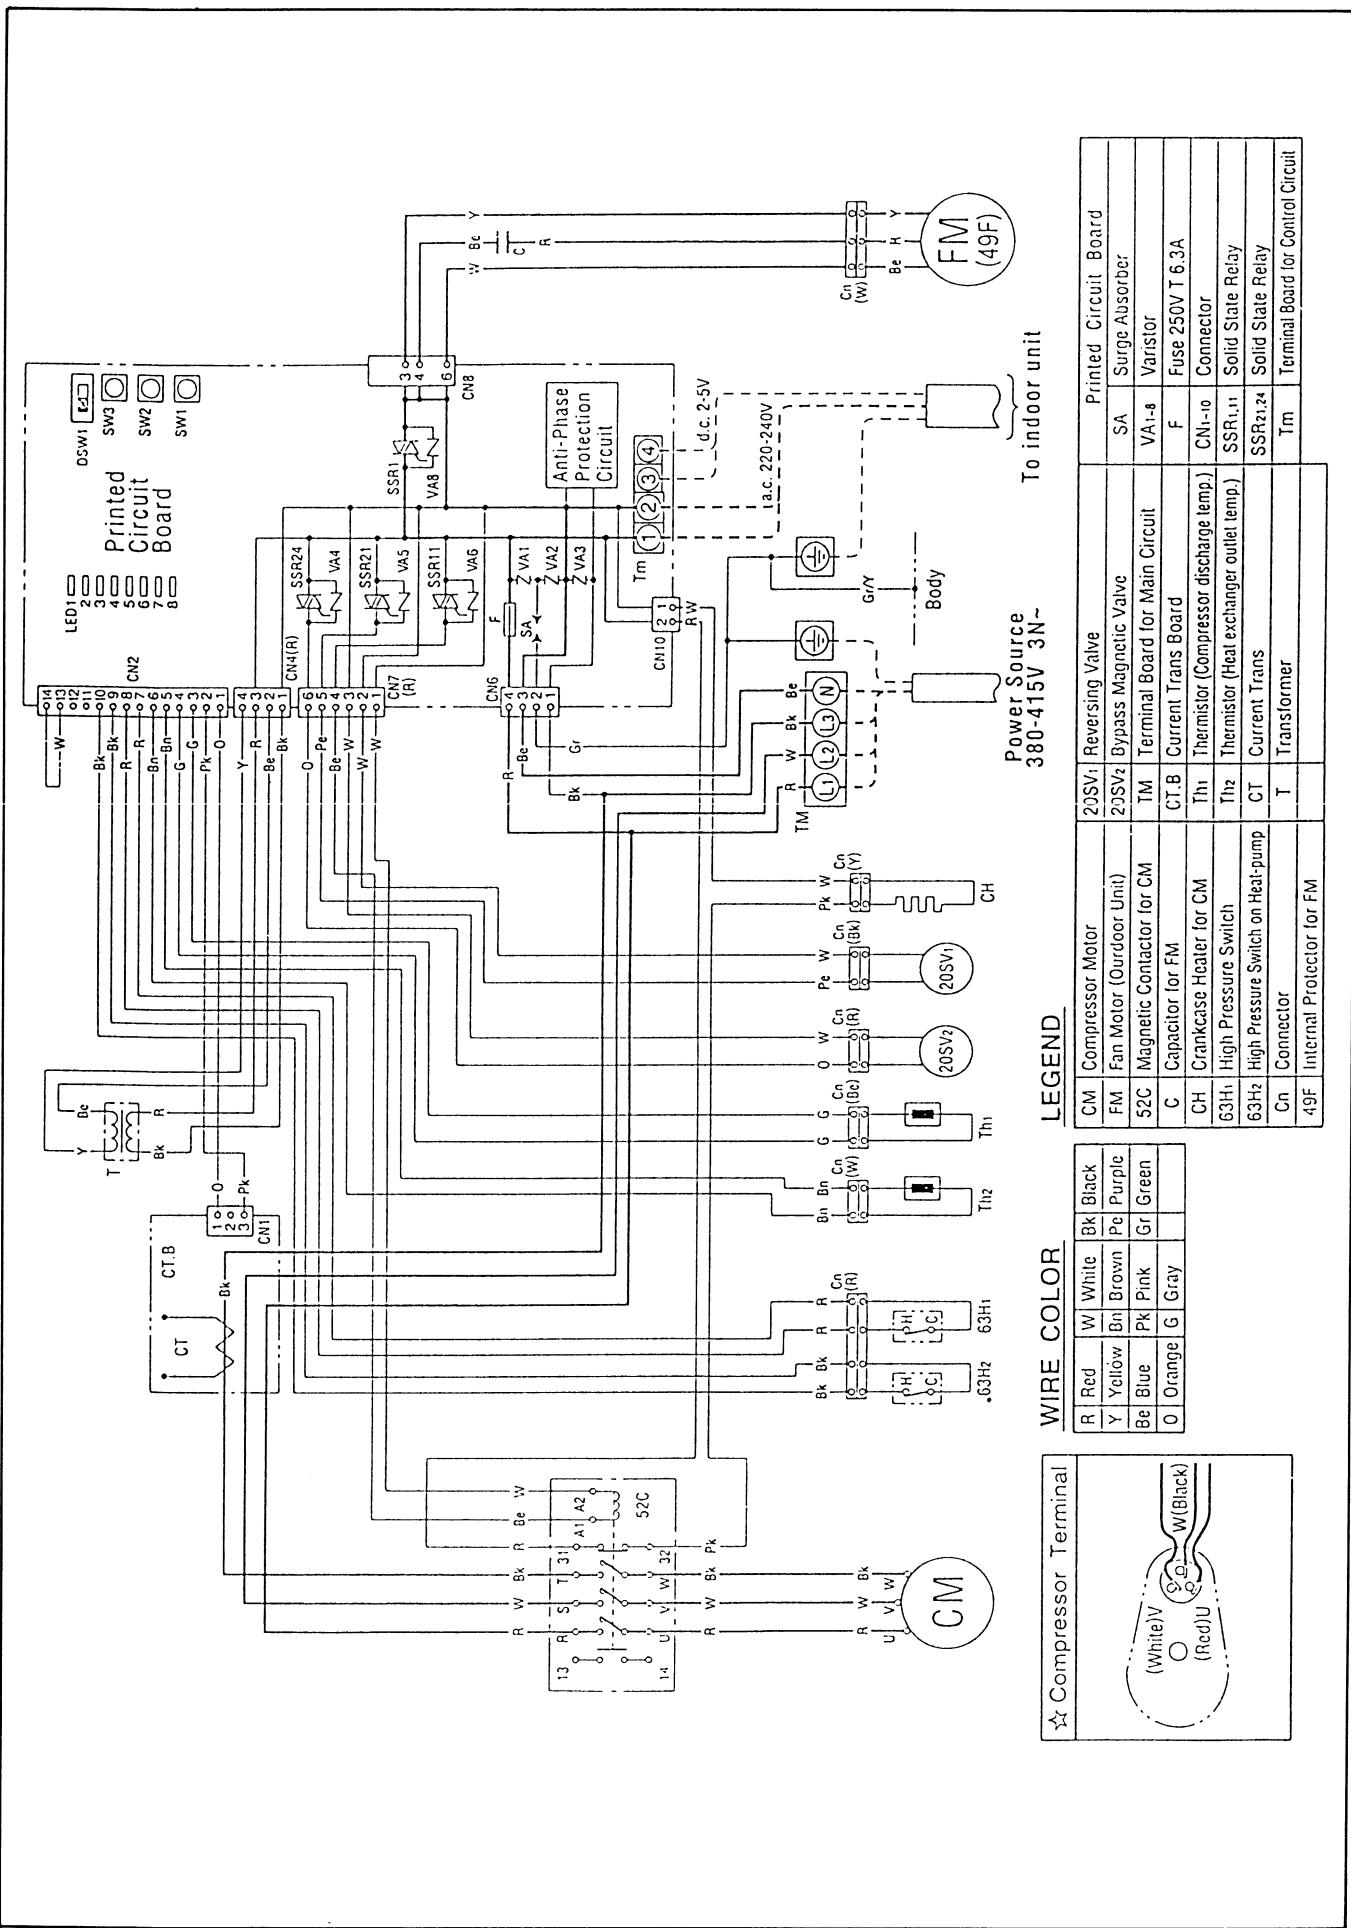


5. CIRCUIT DIAGRAM(HEAT PUMP TYPE)

CU-112C52XP

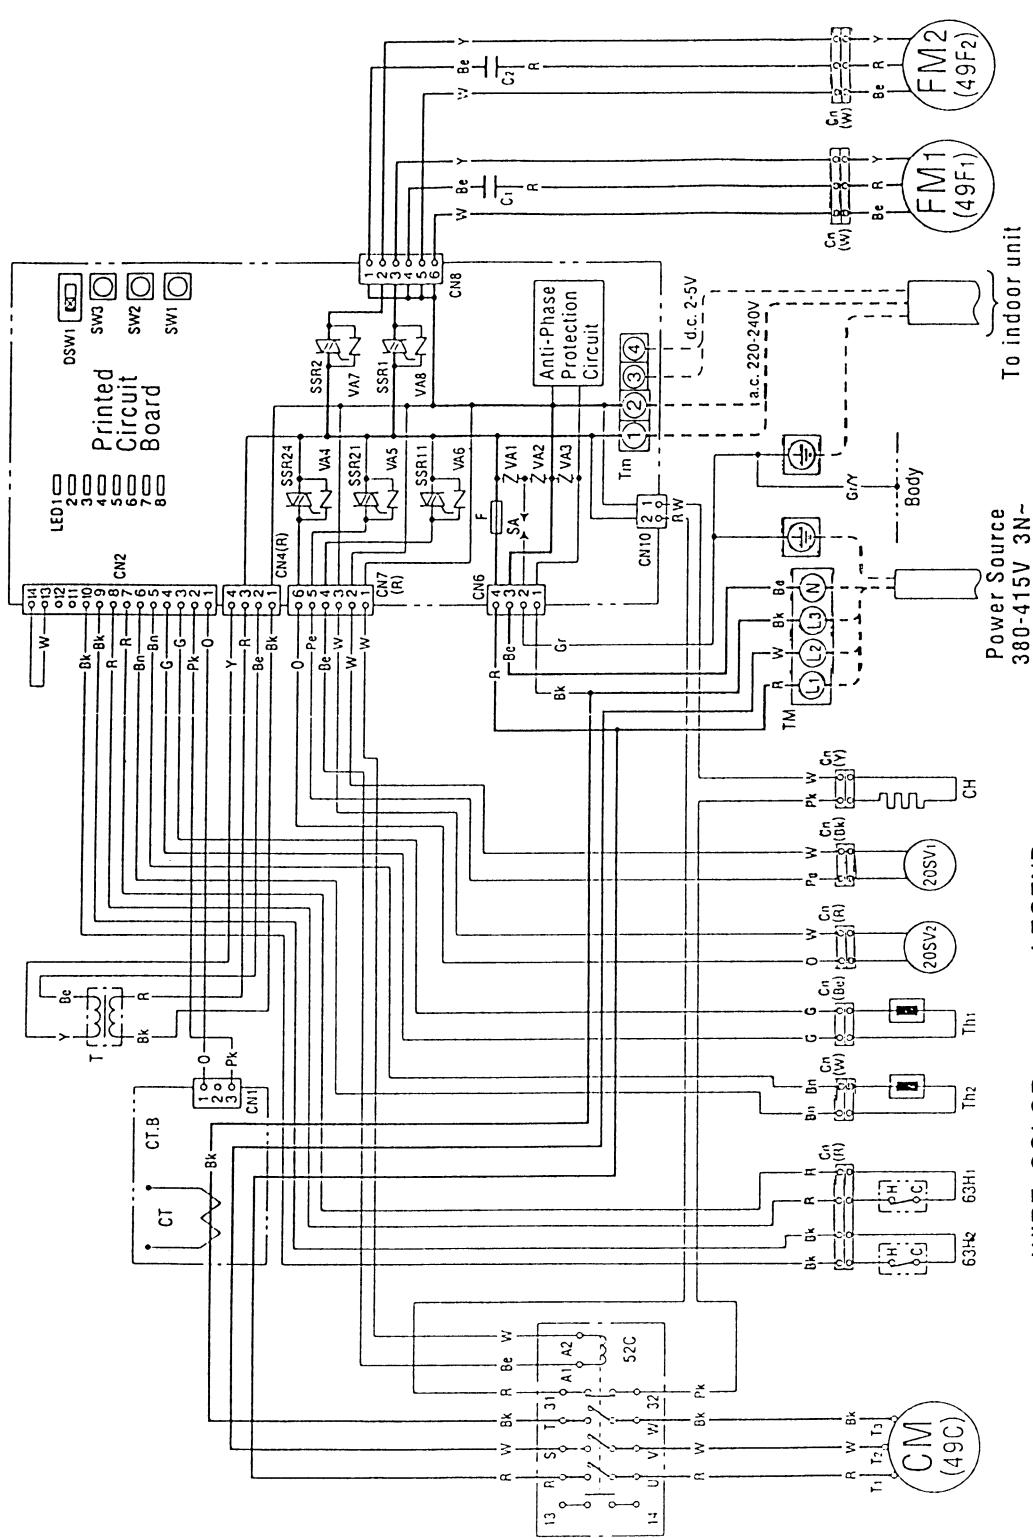

Printed Circuit Board	
SA	Surge Absorber
VA1-6	Varistor
F	Fuse 250V T 6.3A
CN1-10	Connector
SSR12.11	Solid State Relay
SSR12.24	Solid State Relay
Tm	Terminal Board for Control Circuit


WIRE COLOR	
R Red	W White
Y Yellow	Bk Black
Be Brown	Pc Purple
Blue	Pk Pink
Orange	Gr Green
Green	G Gray

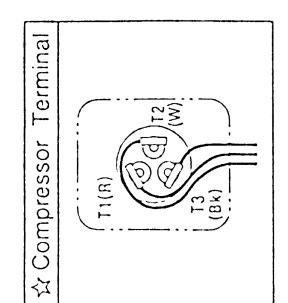

5.CIRCUIT DIAGRAM(HEAT PUMP TYPE)

CU-140C53XP

Control Box

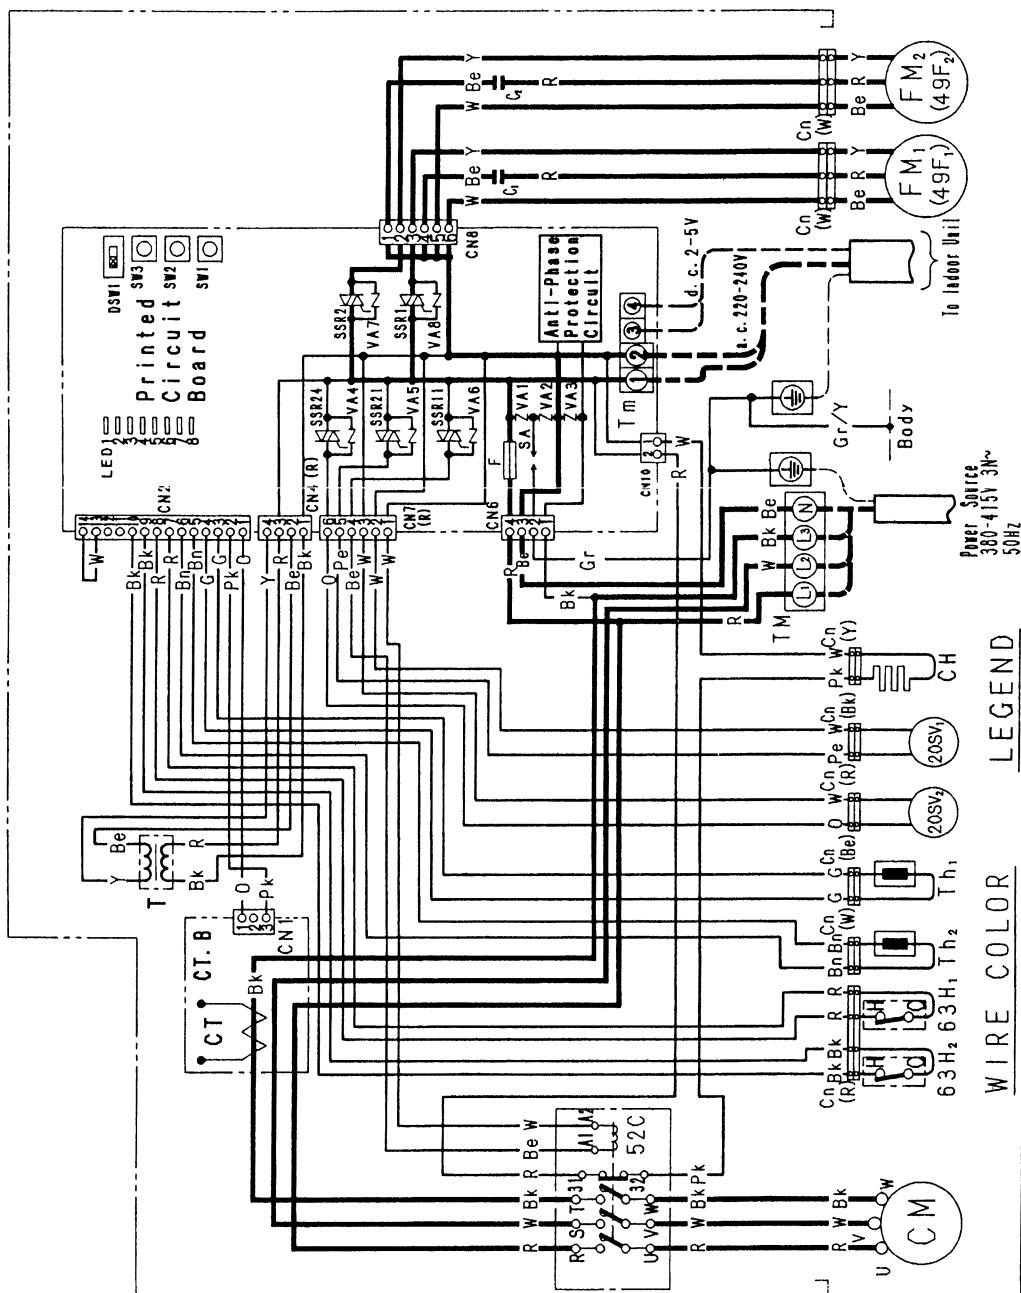

WIRE COLOR

R	Red	W	White	BK	Black
Y	Yellow	Bk	Brown	Purple	Blue
Be	Blue	Pk	Pink	Gr	Green
O	Orange	G	Gray		

LEGEND

Reversing Valve	20SV	Reversing Valve	Printed Circuit Board
Bronze Magnetic Valve	20SV	Bronze Magnetic Valve	Surge Absorber
Terminal Board for Main Circuit	CN1	Terminal Board for Main Circuit	Varistor
Current Trans Board	C1.B	Current Trans Board	Fuse 250V T 6.3A
Connector	CN1	Connector	Connector
Terminator (compressor distance limit)	CN2	Terminator (compressor distance limit)	CN2
High Pressure Switch	63H ₁	High Pressure Switch	Solid State Relay
High Pressure Switch on Reversing	63H ₂	High Pressure Switch on Reversing	Solid State Relay
Connector	Cn	Connector	Terminal Board for Control Circuit
Transformer	T	Transformer	T


Compressor Terminal

CN	Compressor Motor	20SV	Reversing Valve
FM ₁	Fan Motor (Outdoor Unit)	20SV	Bronze Magnetic Valve
52C	Magnetic Contactor for CM	CN1	Terminal Board for Main Circuit
C ₁	Capacitor for FM ₂	C1.B	Current Trans Board
CH	Crankcase Heater for CH	63H ₁	Terminator (compressor distance limit)
63H ₁	High Pressure Switch	63H ₂	Solid State Relay
63H ₂	High Pressure Switch on Reversing	Cn	Solid State Relay
Cn	Connector	63F ₁	Terminal Board for Control Circuit
T	Transformer	T	T




CU-160C53XP

Control Box

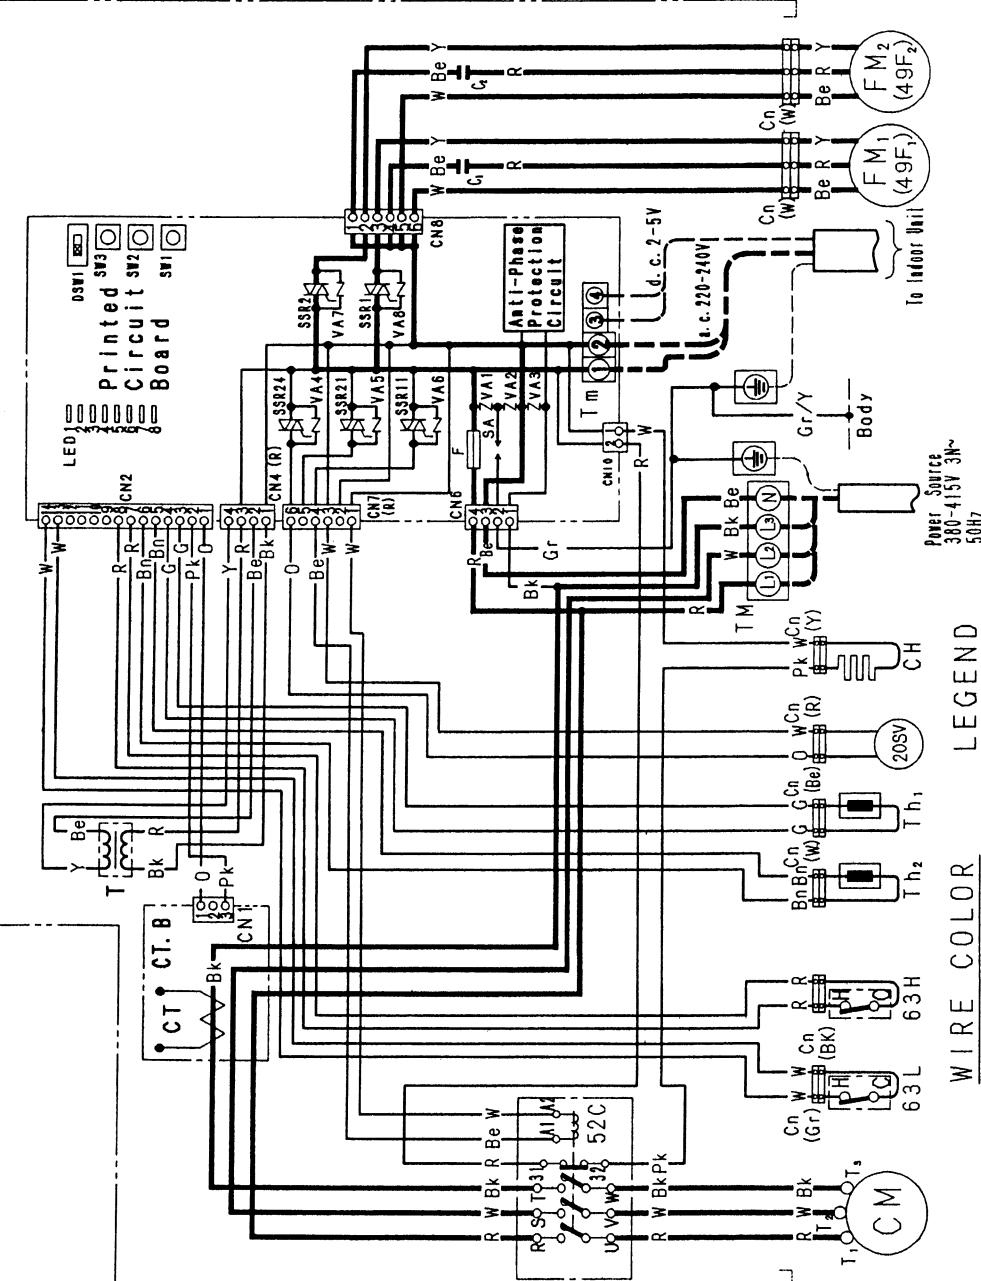

Compressor Terminal RY

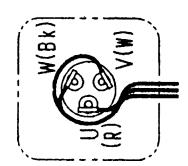

WIRE COLOR LEG

R	Red	W	White	Bk	Black
Y	Yellow	Bn	Brown	Pt	Purple
B	Blue	Pk	Pink	Gr	Green
O	Orange	G	Gray		


LEGEND

20SV	Bypass Magnetic Valve	Printed Circuit Board
TM	Terminal Board for Main Circuit	Surge Absorber
CT	Current Trans Board	Varistor
Th.	Transistor (amplifier/discriminator)	Fuse 250V T & JA
(for CM	Transistor (heat exchanger control)	Connector
lch	CT	SSR, IAI
lch	Current Trans	Solid State Relay
lch	4GF ₁₂	Internal Protector for FM
lch		SSR, IAI
		Solid State Relay
		Terminal Board for Control Circuit

5. CIRCUIT DIAGRAM(COOLING ONLY TYPE)

CU-40C02HP, CU-50C02HP

Control Box

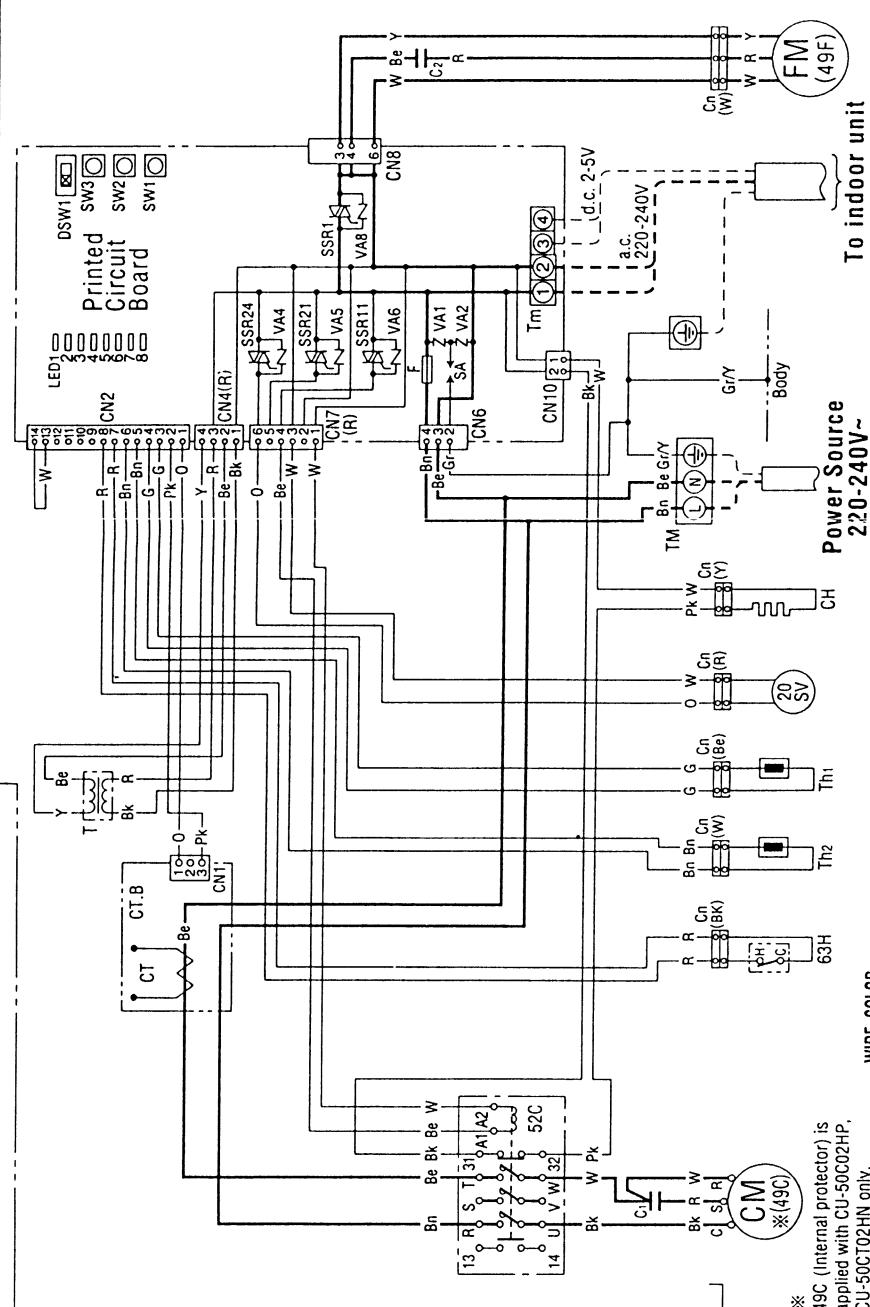


* 49C (internal protector) is applied with CU-50C02HP, CU-50C102HN only.

WIRE COLOR


LEGEND

Compressor Terminal	Wire Color	Component	Description
R Red	Red	CM	Compressor Motor
Y Yellow	Yellow	49C	Internal Protector for CM
Be Blue	Blue	49C	Internal Protector for CM
O Orange	Orange	FM	Fan Motor (Outdoor Unit)
W White	White	49F	Internal Protector for FM
Bn Brown	Brown	52C	Magnetic Contactor for CM
Pk Pink	Pink	C1	Capacitor for CM
G Gray	Gray	C2	Capacitor for FM
Bk Black	Black	CH	Crankcase Heater for CM
Pe Purple	Purple	63H	High Pressure Switch
Gr Green	Green	20SV	Bypass Magnetic Valve

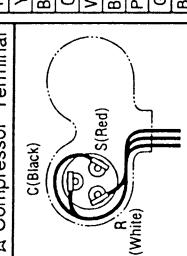

5. CIRCUIT DIAGRAM(COOLING ONLY TYPE)


CU-40C02HP, CU-50C02HP

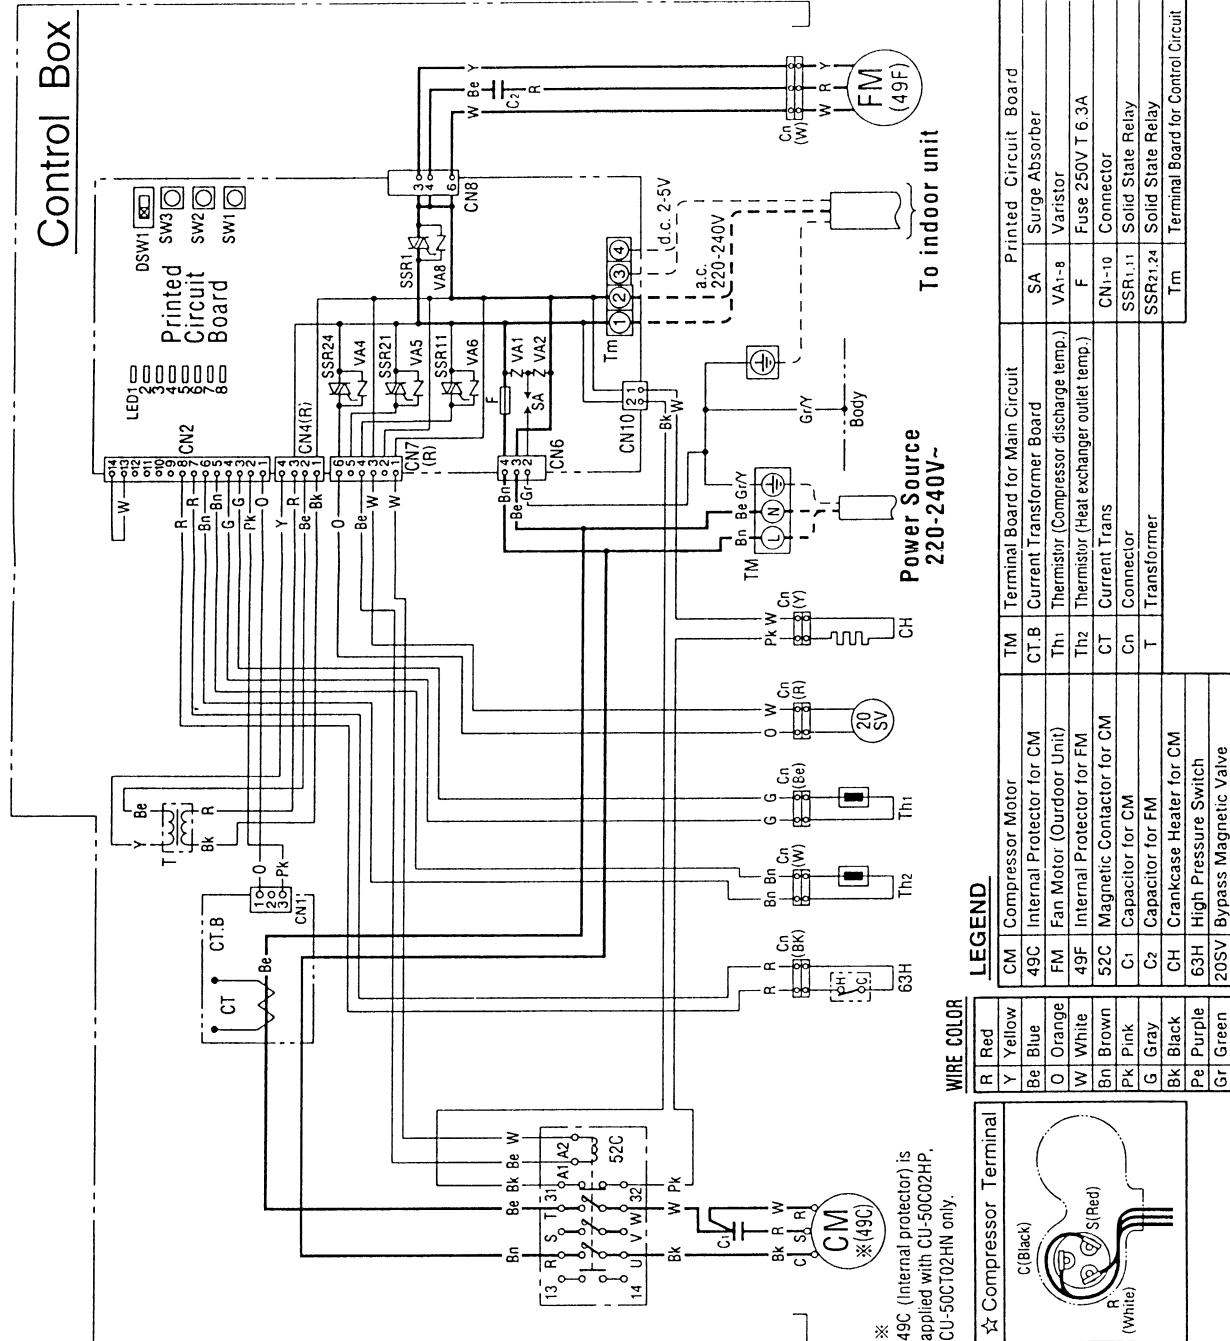

5. CIRCUIT DIAGRAM(COOLING ONLY TYPE)


CU-71C02XP, CU-80C02XP

Control Box

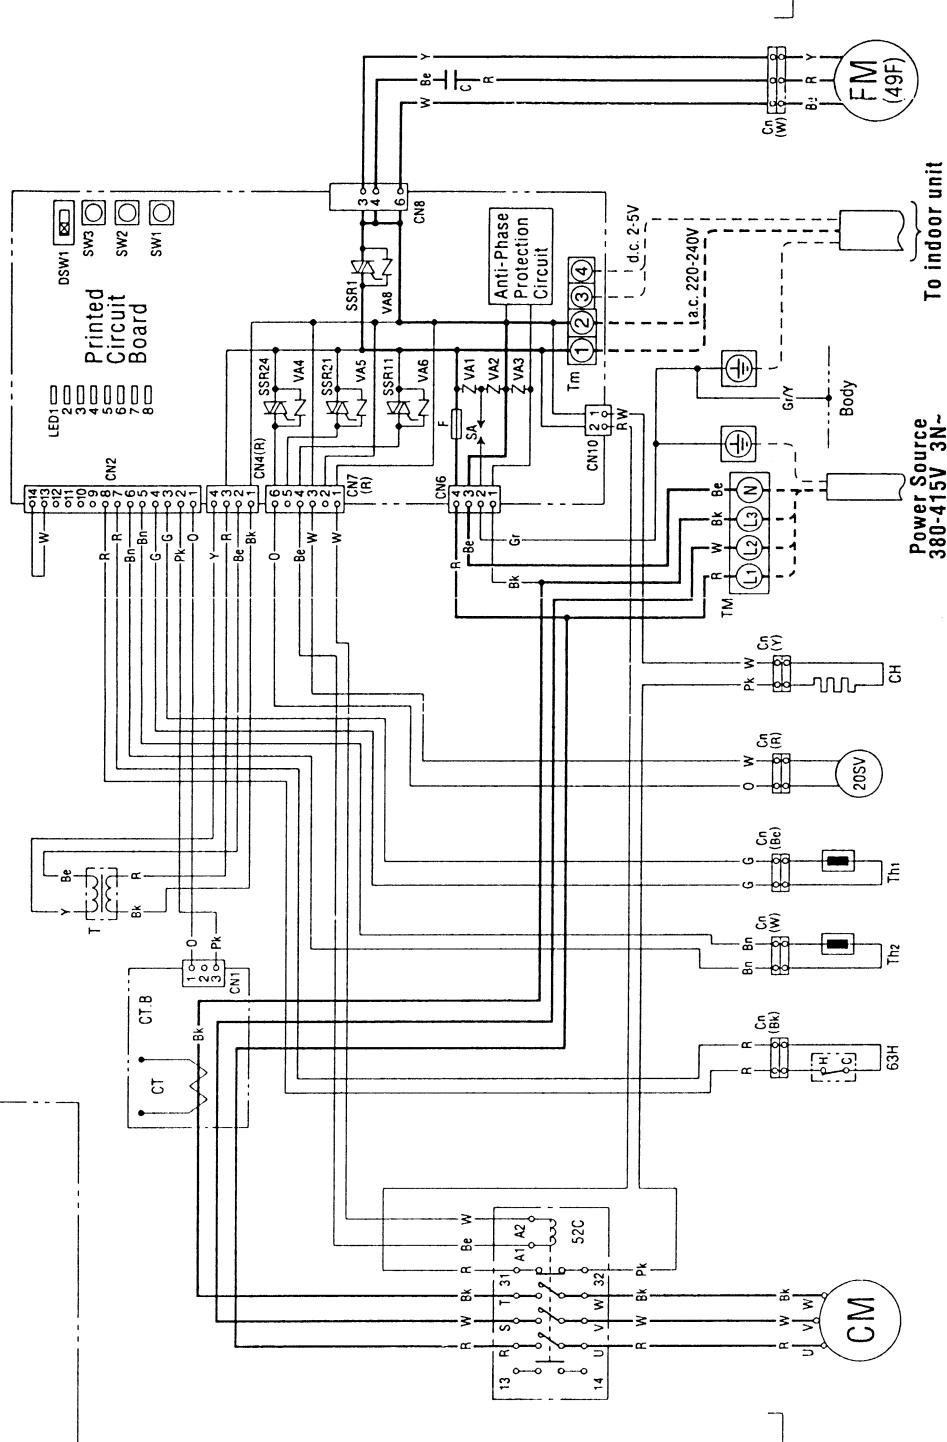

	20SV	Bypass Magnetic Valve	20SV	Surge Absorber	Printed Circuit Board
CM	Compressor Motor	20SV	Terminal Board for Main Circuit	SA	Printed Circuit Board
FM	Fan Motor (Indoor Unit)	20SV	CT.B Current Trans Board	V(A)-s	Surge Absorber
SCC	Magnetic Contactor for CM	20SV	Th1 Thermistor (Compressor discharge temp.)	F	Varistor
C	Capacitor for FM	20SV	Th2 Thermistor (Heat exchanger outlet temp.)	250V T 6.3A	Connector
CH	Crankcase Heater for CM	20SV	CT Current Trans	SSR1.11 Solid State Relay	
63H	High Pressure Switch	20SV	T Transformer	SSR1.12 Solid State Relay	
Cn	Connector	20SV	49F Internal Protector for FM	TM Terminal Board for Control Circuit	


☆ Compressor Terminal

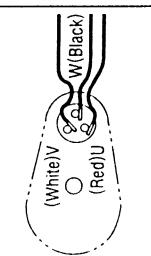

5. CIRCUIT DIAGRAM(COOLING ONLY TYPE)

CU-112C02XP


Control Box

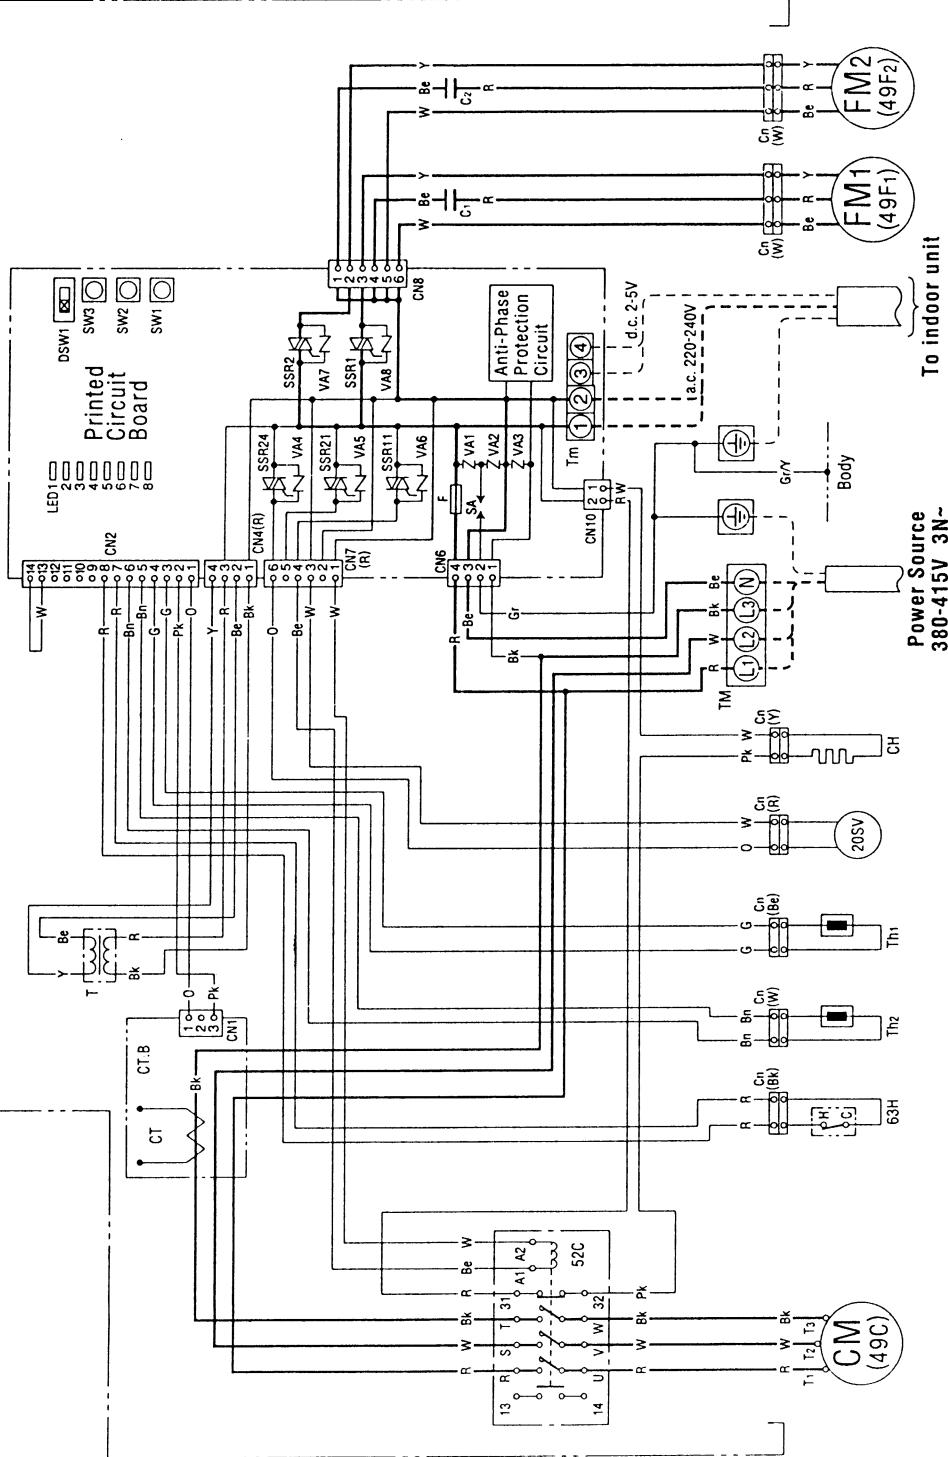

LEGEND

WIRE COLOR		Printed Circuit Board	
R	Red	Bk	Bypass Magnetic Valve
Y	Yellow	White	20SV
Be	Blue	Bn	Terminal Board for Main Circuit
O	Orange	Pk	SA
		Gr	Surge Absorber
		Green	Varistor
		Gray	Fuse 250V T 6.3A
			Current Trans
			Thermistor (Compressor discharge temp.)
			Th (Heat exchanger outlet temp.)
			Th1
			Th2
			Th3
			Transformer
			CM (49C)
			FM1 (49F1)
			FM2 (49F2)
			To indoor unit
			Body
			Power Source 380-415V 3N~


☆ Compressor Terminal

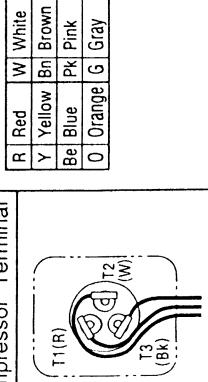

5.CIRCUIT DIAGRAM(COOLING ONLY TYPE)


CU-140C03XP

Control Box

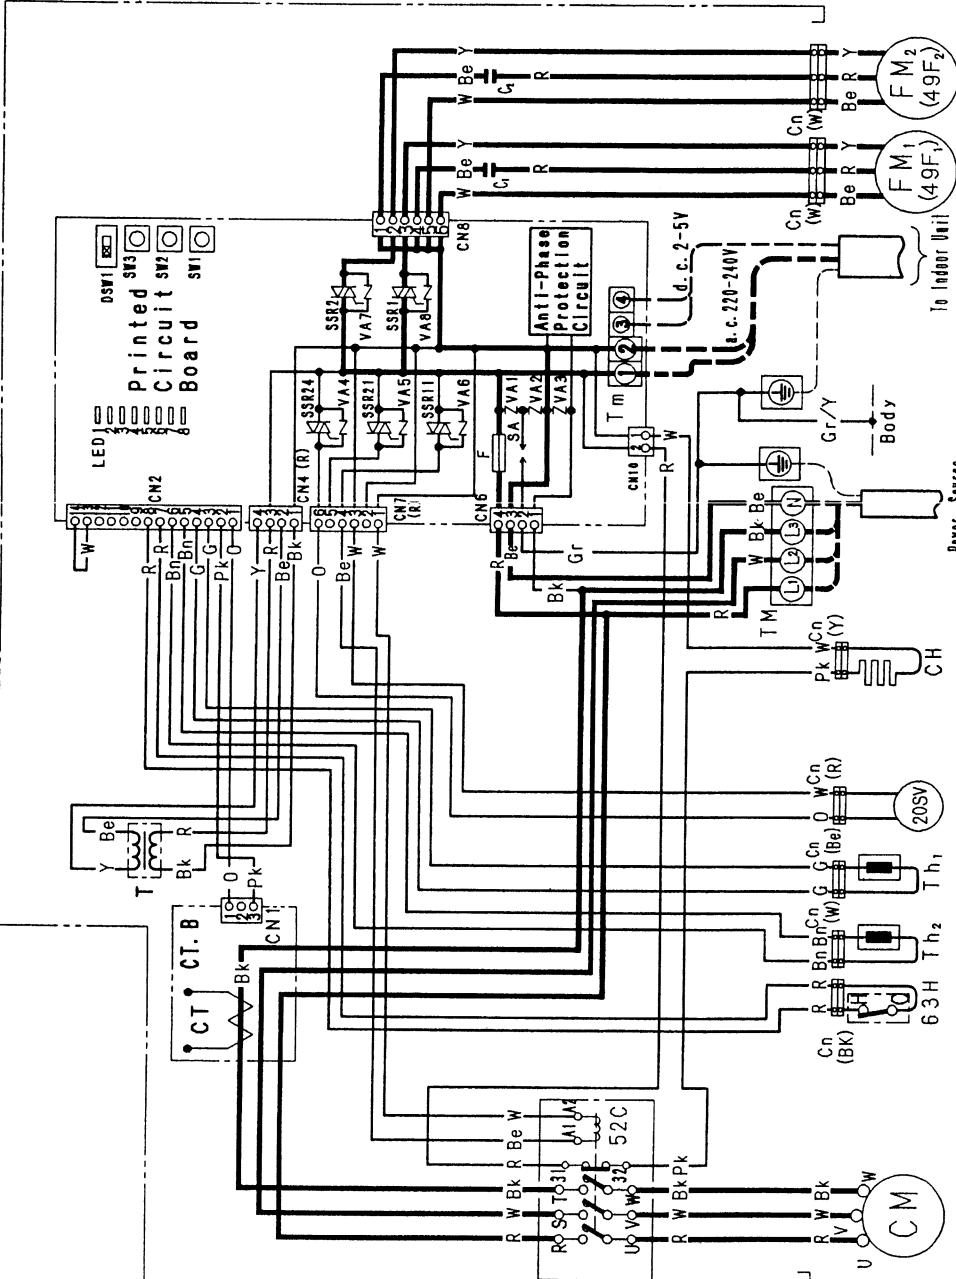


WIRE COLOR

Compressor Terminal	R	Red	W	White	Bk	Black
Y Yellow	Y	Yellow	Bn Brown	Pe Purple	Bk	Black
Be Blue	Be	Blue	Pk Pink	Gr Green		
O Orange	O	Orange	G Gray			

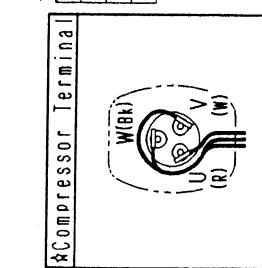

Printed Circuit Board	PCB
Terminal Board for Main Circuit	TN
Terminal Board for Main Circuit	TN
Current Trans Board	CT.B
Magnetic Conactor for CM	Th
Thermistor (compressor distanece)	Th
Thermistor (heat exchanger distanece)	Th
Capacitor for FM _{1,2}	C _{1,2}
Crankcase Heater for CM	CH
Current Trans	CT
Fuse 250V T & 3A	F
Connector	CT ₄
High Pressure Switch	H3H
Internal Protector for FM _{1,2}	49F _{1,2}
Connector	Cn
Transformer	T
Bypass Magnetic Valve	20SV

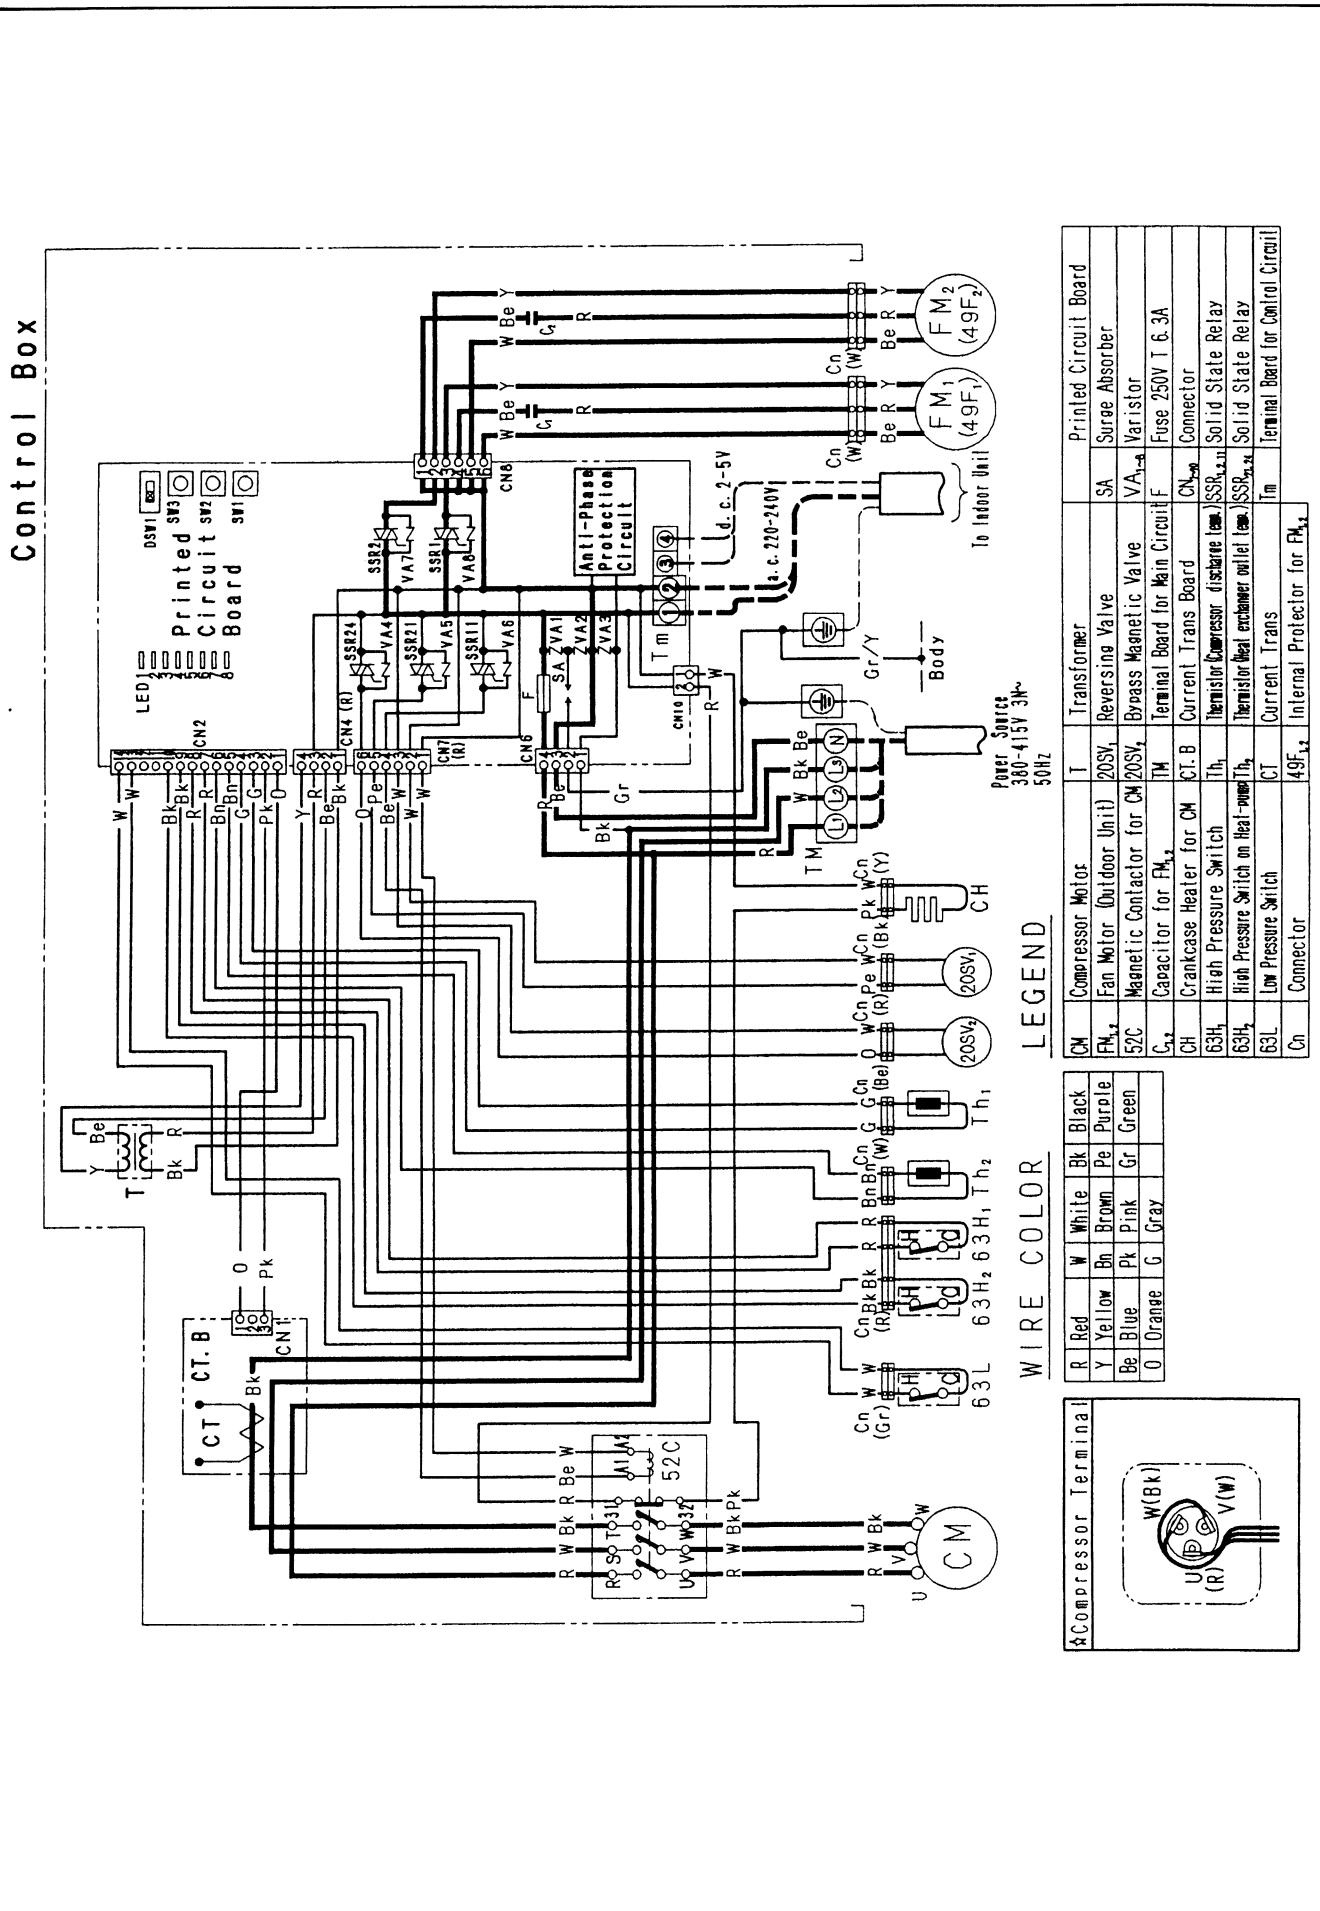

5. CIRCUIT DIAGRAM

■APPLICABLE MODEL
CS-40U32JP, CS-50U32JP, CS-71U32JP, CS-80U32JP, CS-112U32JP

●INDOOR UNIT

PRINTED CIRCUIT BOARD

S PHASE	4
SURGE ABSORBER	3
	2
R PHASE	1

CN4

INDOOR FAN L	4
INDOOR FAN M	3
INDOOR FAN H	2
COM (S PH)	1

CN5

LOUVER MOTOR	6
HEATER	5
DRAIN PUMP	4
COM (S PH)	3
COM (S PH)	2
COM (S PH)	1


CN6

TRANSFORMER 1ST (R PH)	6
TRANSFORMER 2ND	5
TRANSFORMER 2ND	4
TRANSFORMER 1ST (S PH)	3
TRANSFORMER 2ND	2
TRANSFORMER 2ND	1

CN7

ROOM THERMISTOR	12
ROOM THERMISTOR	11
PIPE THERMISTOR	10
PIPE THERMISTOR	9
	8
	7
LOUVER SW	6
LOUVER SW	5
COMMUNICATION WITH OUTDOOR UNIT	4
COMMUNICATION WITH OUTDOOR UNIT	3
WIRED REMOTE CONTROLLER	2
WIRED REMOTE CONTROLLER	1

CN1

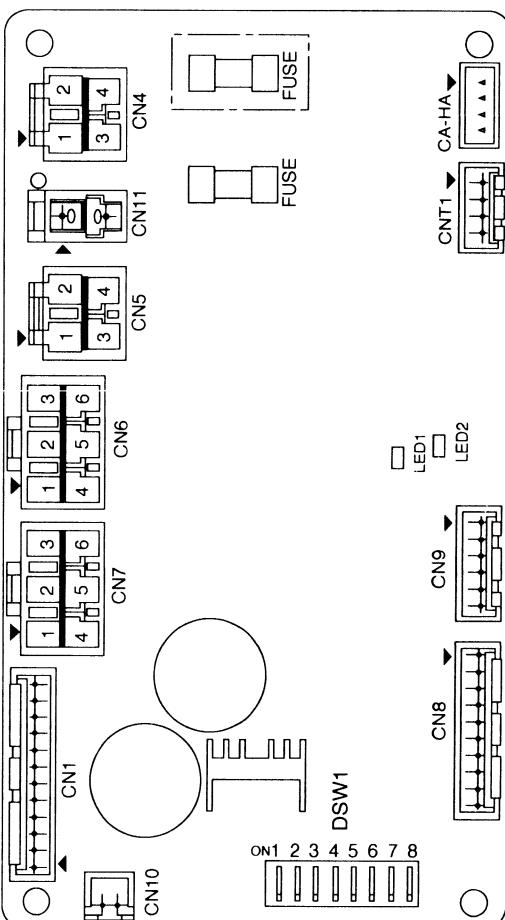

CENTRAL CONNECTION
BOARD
CENTRAL CONTROL
CN8

2	1
FLOAT	FLOAT
SW	SW

5. CIRCUIT DIAGRAM

■APPLICABLE MODEL
CS-140U32JP, CS-160U32JP


●INDOOR UNIT
PRINTED CIRCUIT BOARD(A)

3	S PHASE
2	_____
1	R PHASE

8	TRNSFORMER 2ND
7	TRNSFORMER 2ND
6	TRNSFORMER 2ND
5	TRNSFORMER 2ND
4	_____
3	TRNSFORMER 1st
2	_____
1	TRNSFORMER 1st

8	FLOAT SW
7	LOUVER SW
6	PIPE THEMISTOR
5	ROOM THEMISTOR
4	FLOAT SW
3	LOUVER SW
2	PIPE THERMISTOR
1	ROOM THERMISTOR


_____	6
_____	5
CONDENSER	4
_____	3
COM	2
COM	1

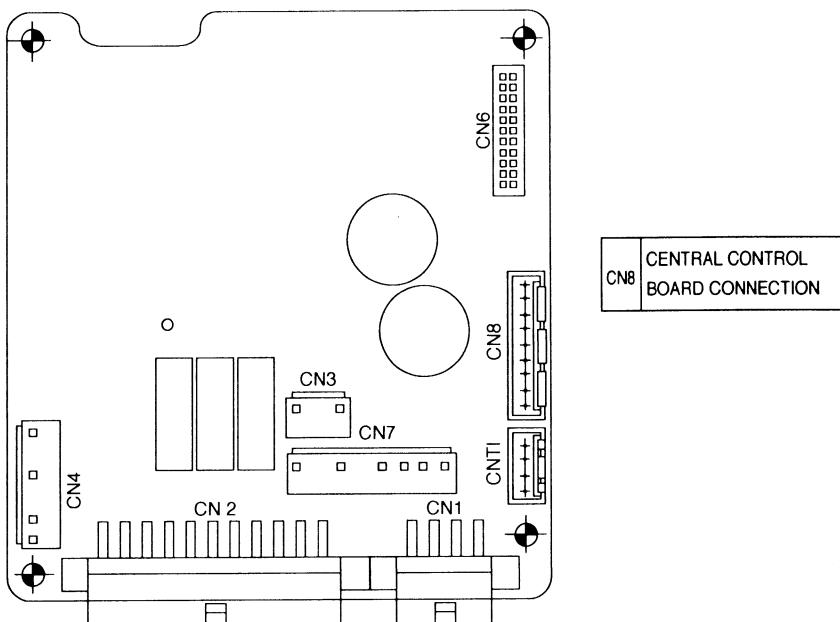

TO 4P OF CN4	22	_____	11
_____	21	LOUVER	10
DRAIN PUMP	20	_____	9
_____	19	_____	8
FAN L	18	_____	7
_____	17	COM(S PHASE)	6
FAN M	16	_____	5
_____	15	_____	4
FAN H	14	_____	3
_____	13	COM(S PHASE)	2
COM(S PHASE)	12	COM(S PHASE)	1

CN2

PRINTED CIRCUIT BOARD(B)

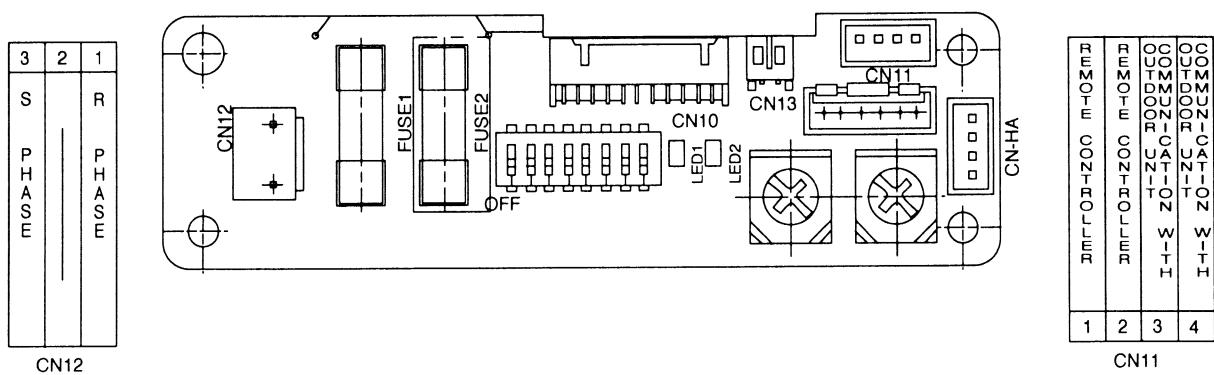

5. CIRCUIT DIAGRAM

■APPLICABLE MODEL

ALL MODEL

●OUTDOOR UNIT

PRINTED CIRCUIT BOARD


*1 : Heat pump model only

*2 : CU-112C52XP, CU-112C02XP

CU-140C52XP, CU-140C02XP

CU-160C52XP, CU-160C02XP model only

CN2
14 GND
13 LOW PRESSURE SW
12 GND
11 DEMAND INPUT
10 GND
9 HEATING PRESSURE SW
8 GND
7 HIGH PRESSURE SW
6 GND
5 PIPE TEMP SENSOR
4 GND
3 DISCHARGE TEMP SENSOR
2 GND
1 CT

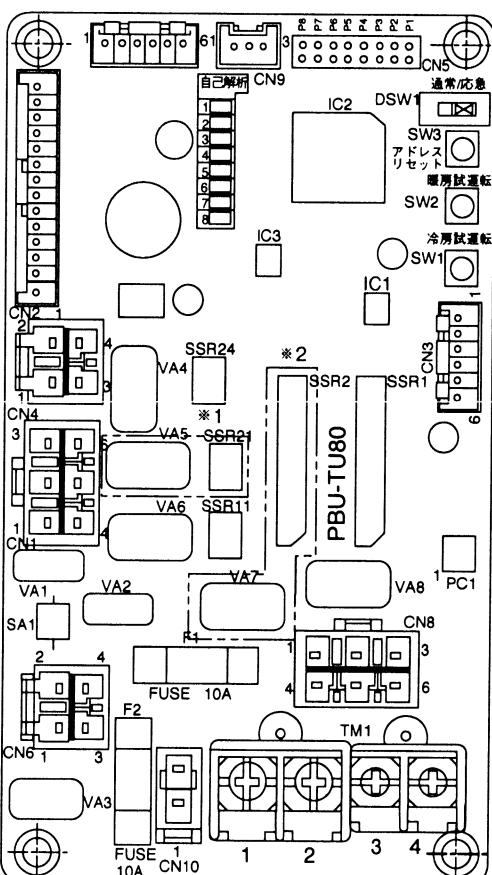

TM1
4 COMMUNICATION WITH INDOOR UNIT
3 COMMUNICATION WITH INDOOR UNIT
2 S Phase
1 R Phase

CN8
1 S Phase
2 Fan2(R)
3 Fan1(R)
4 S Phase
5 S Phase
6 S Phase

CN10
1 CRANKCASE HEATER(S)
2 CRANKCASE HEATER(R)

CN4
4 TRANSFER 2ND(S)
3 TRANSFER 1ST(R)
2 TRANSFER 2ND(R)
1 TRANSFER 1ST(S)


CN7
6 LIQUID BYPASS valve(R)
5 REVERSING valve(R)
4 COMPRESSOR relay(R)
3 LIQUID BYPASS valve(S)
2 REVERSING valve(S)
1 COMPRESSOR relay(S)

CN6
4 R Phase
3 S Phase
2 Earth
1 T Phase


5. CIRCUIT DIAGRAM

■APPLICABLE MODEL

CS-40U32JP, CS-50U32JP, CS-71U32JP, CS-80U32JP, CS-112U32JP

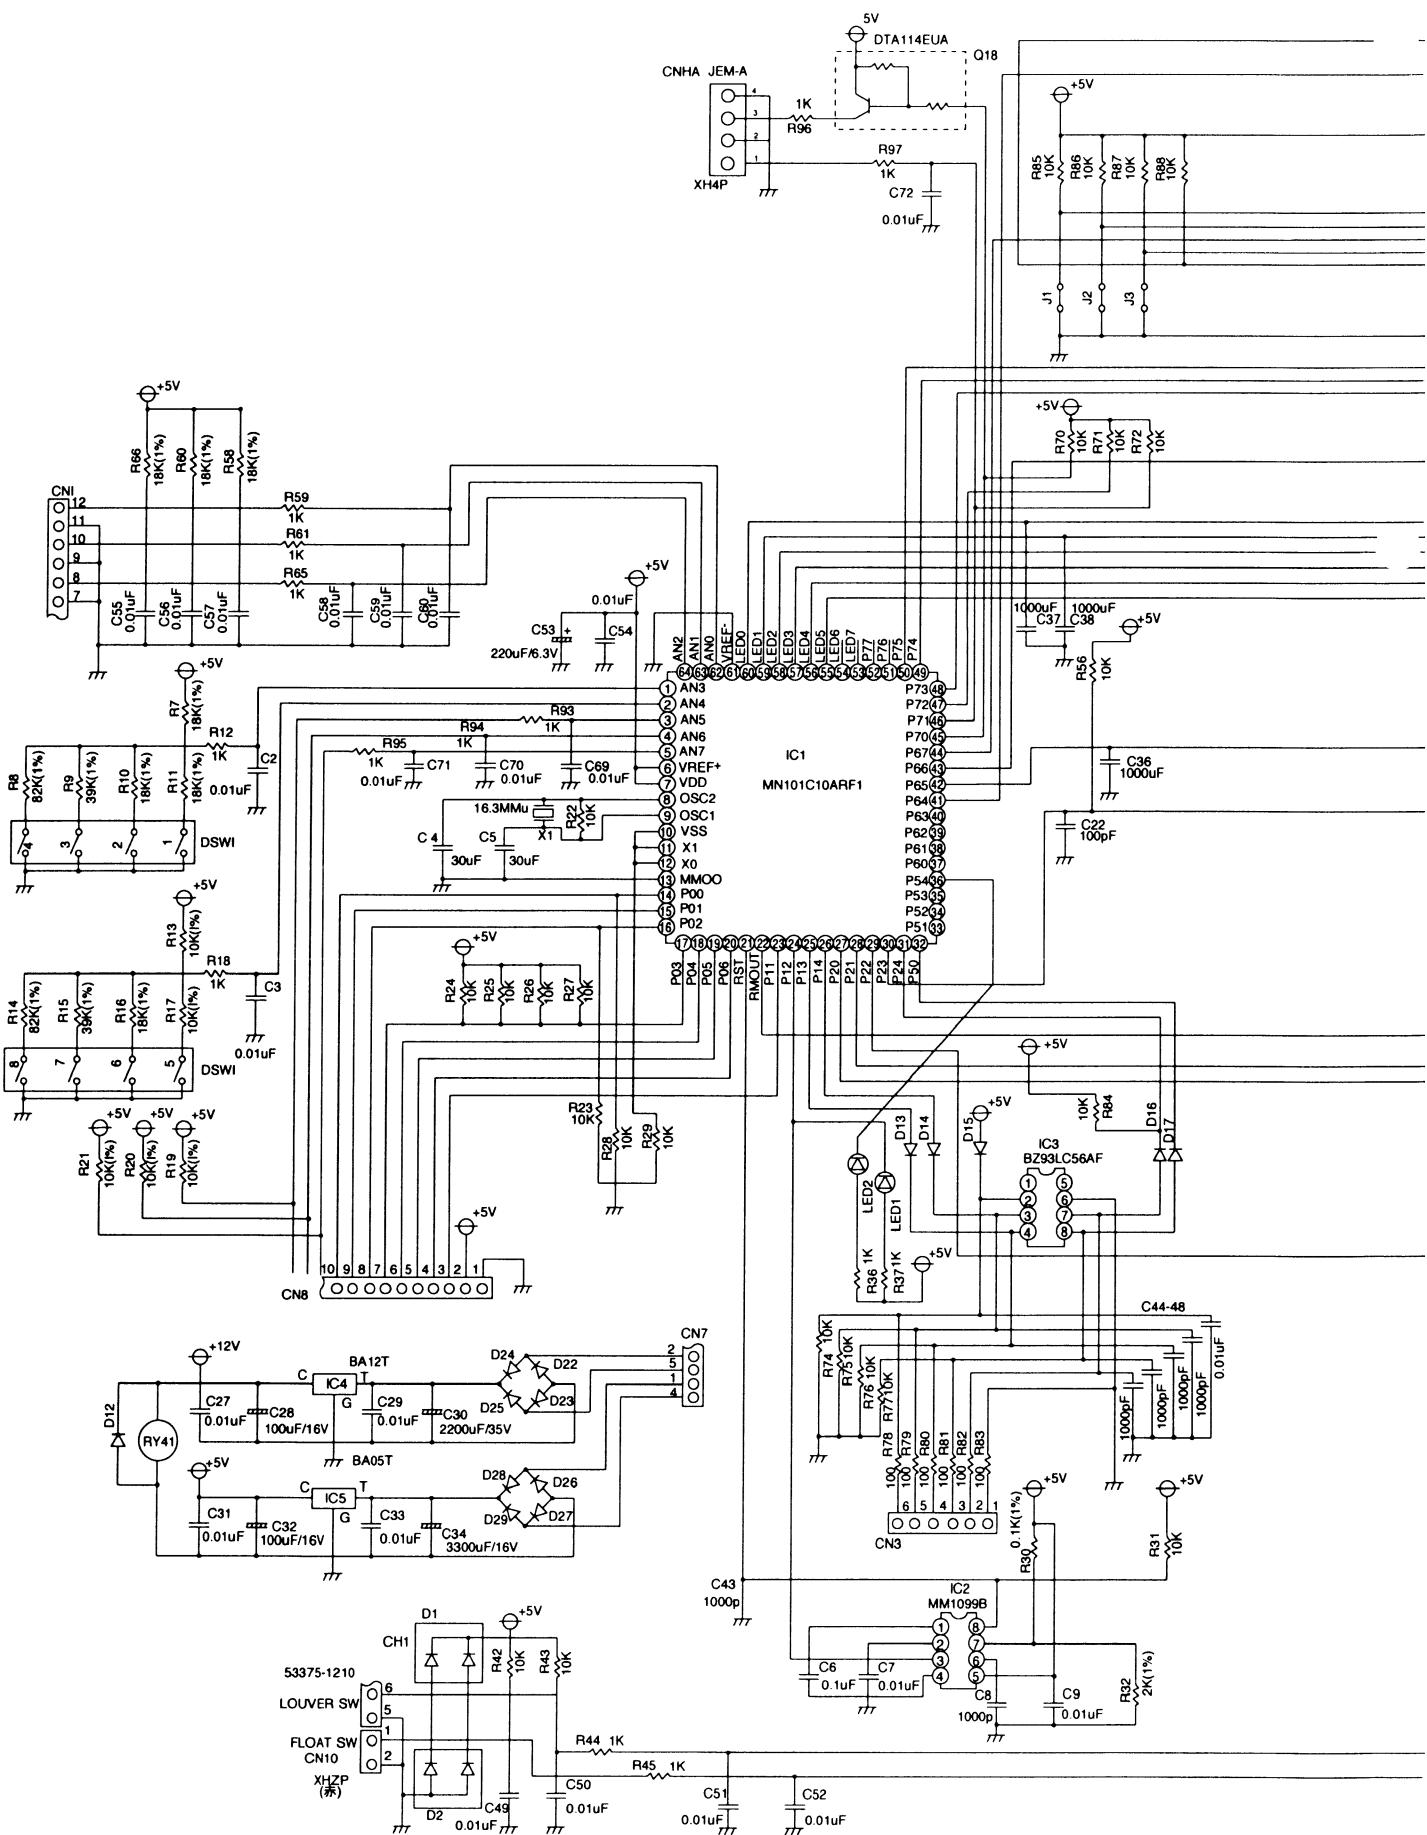


5. CIRCUIT DIAGRAM

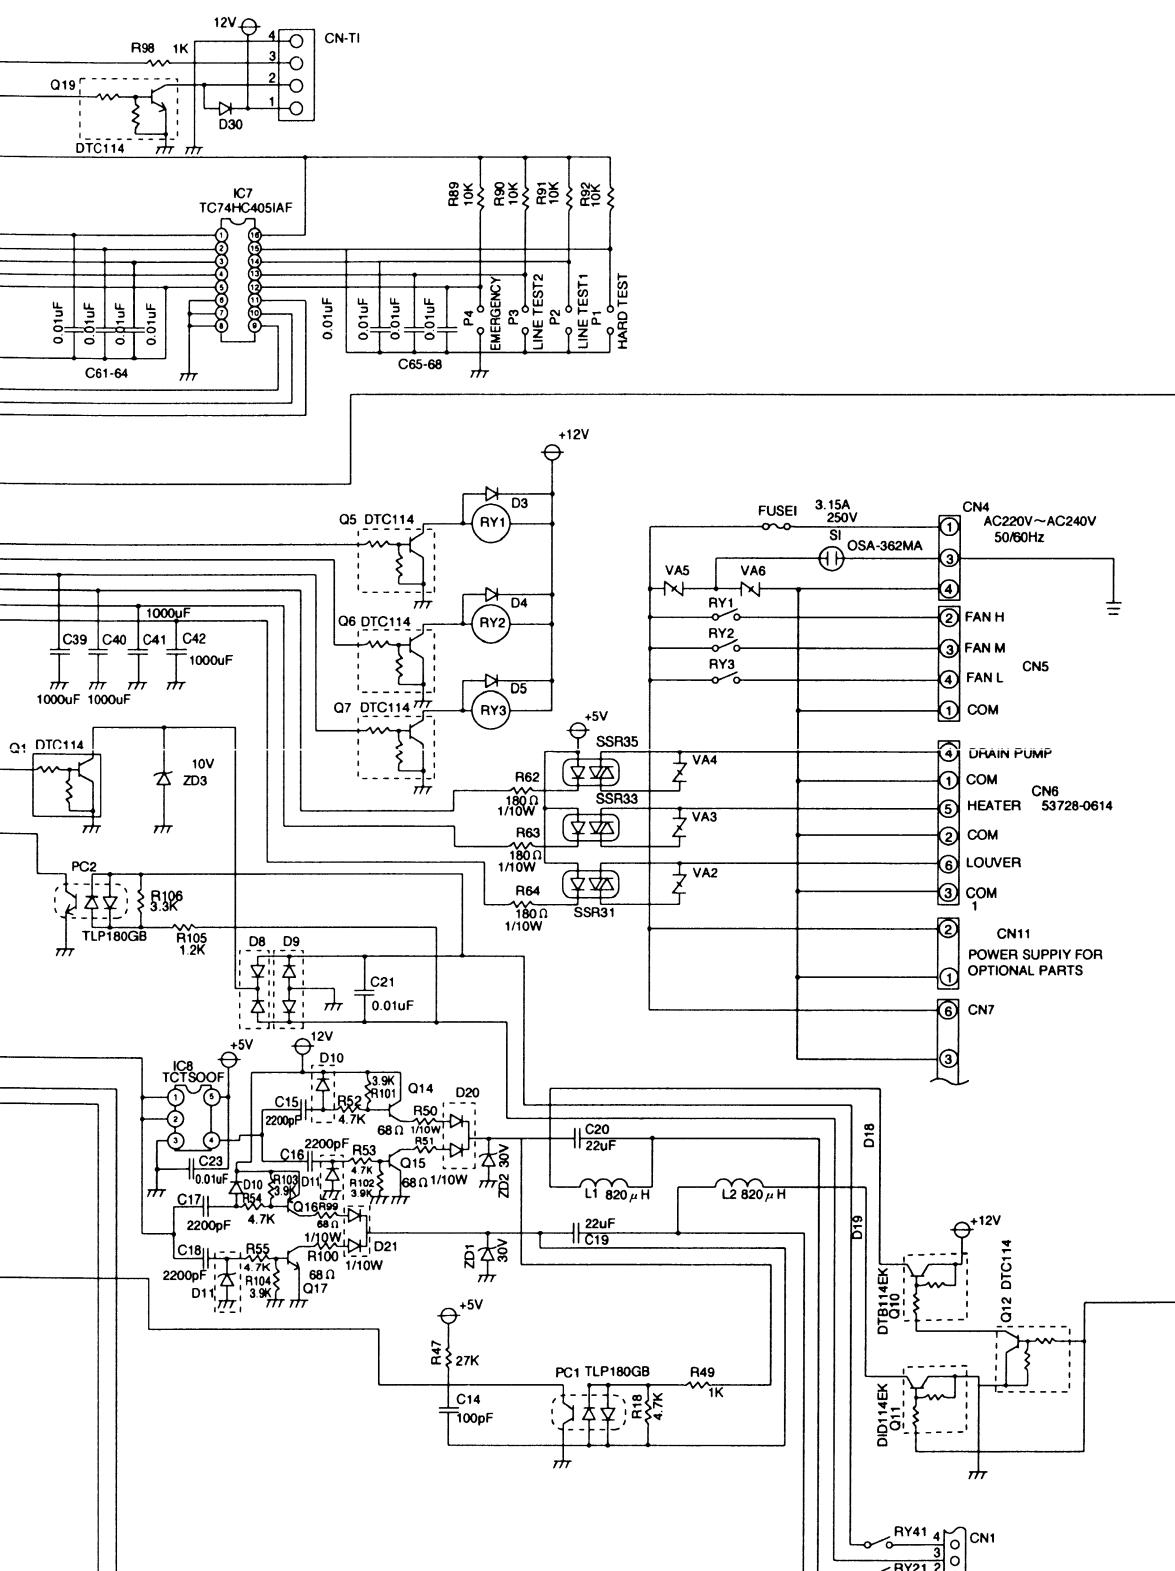


■APPLICABLE MODEL
CS-140U32JP,CS-160U32JP

**●INDOOR UNIT
PRINTED CIRCUIT BOARD
(SCHEMATIC DIAGRAM)**

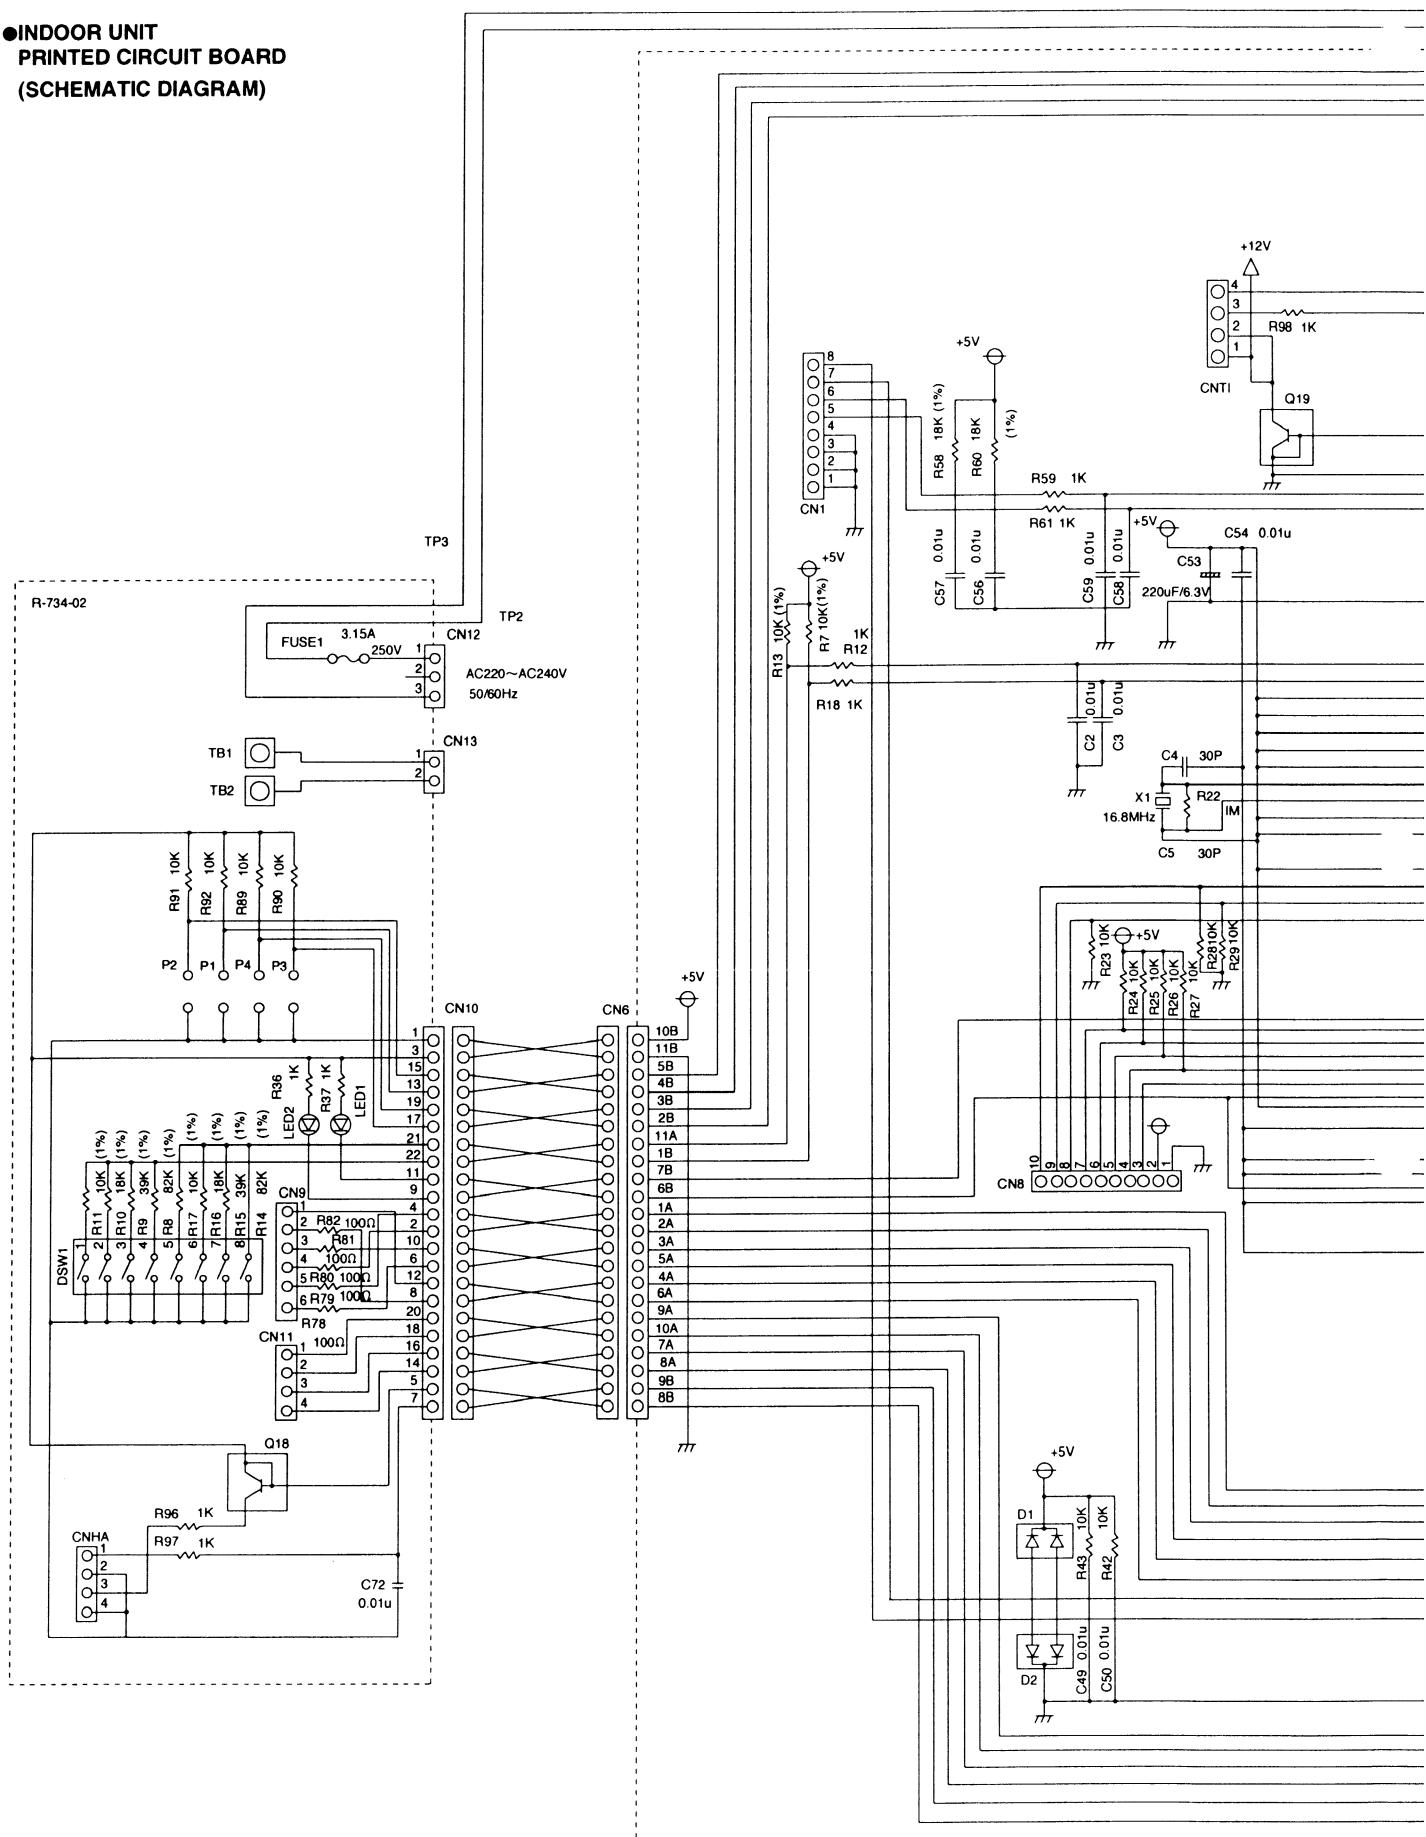


5. CIRCUIT DIAGRAM

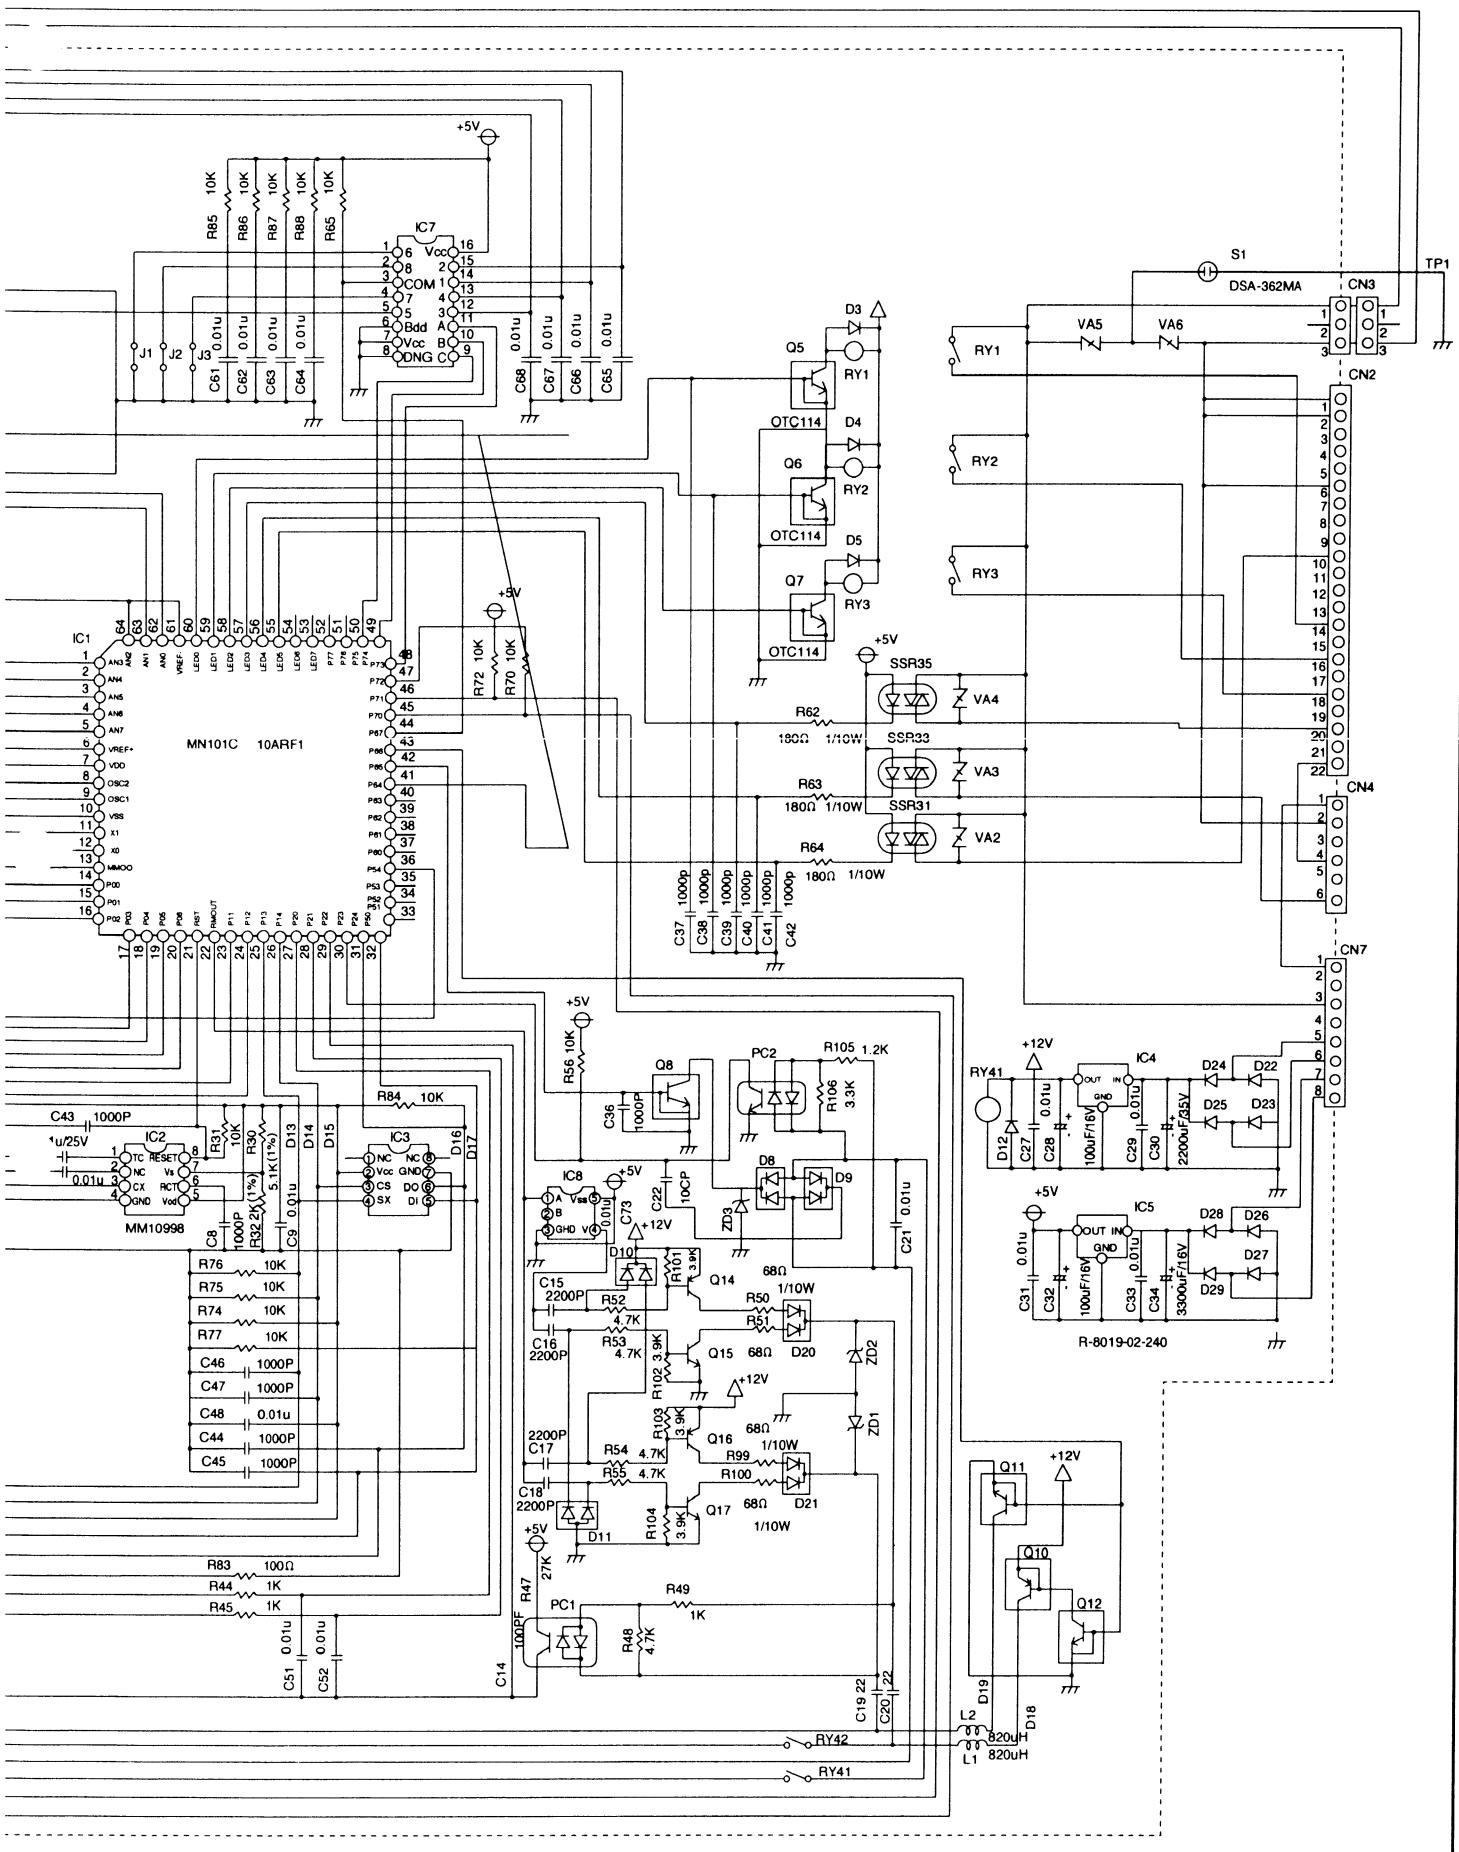


■APPLICABLE MODEL
ALL MODEL

**●OUTDOOR UNIT
PRINTED CIRCUIT BOARD
(SCHEMATIC DIAGRAM)**

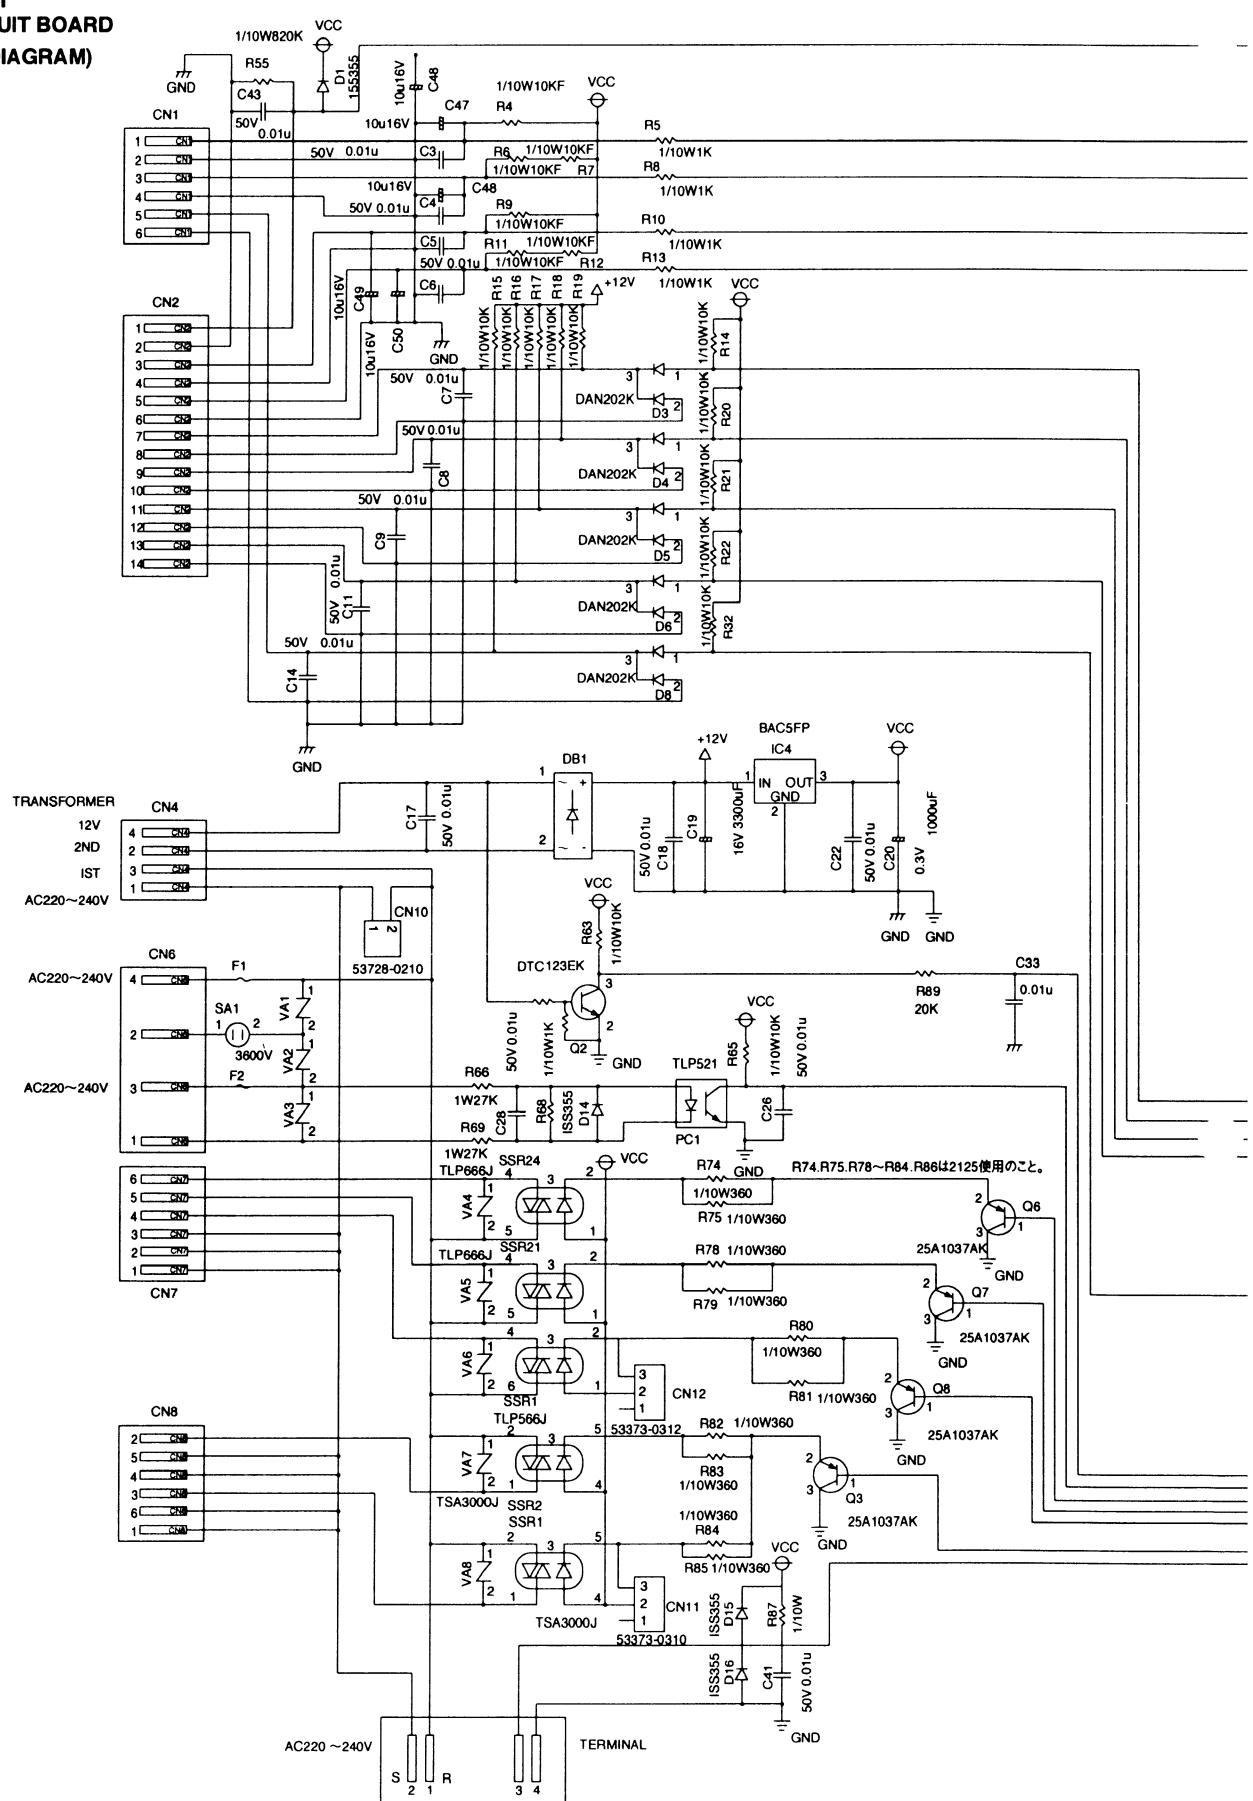


5. CIRCUIT DIAGRAM

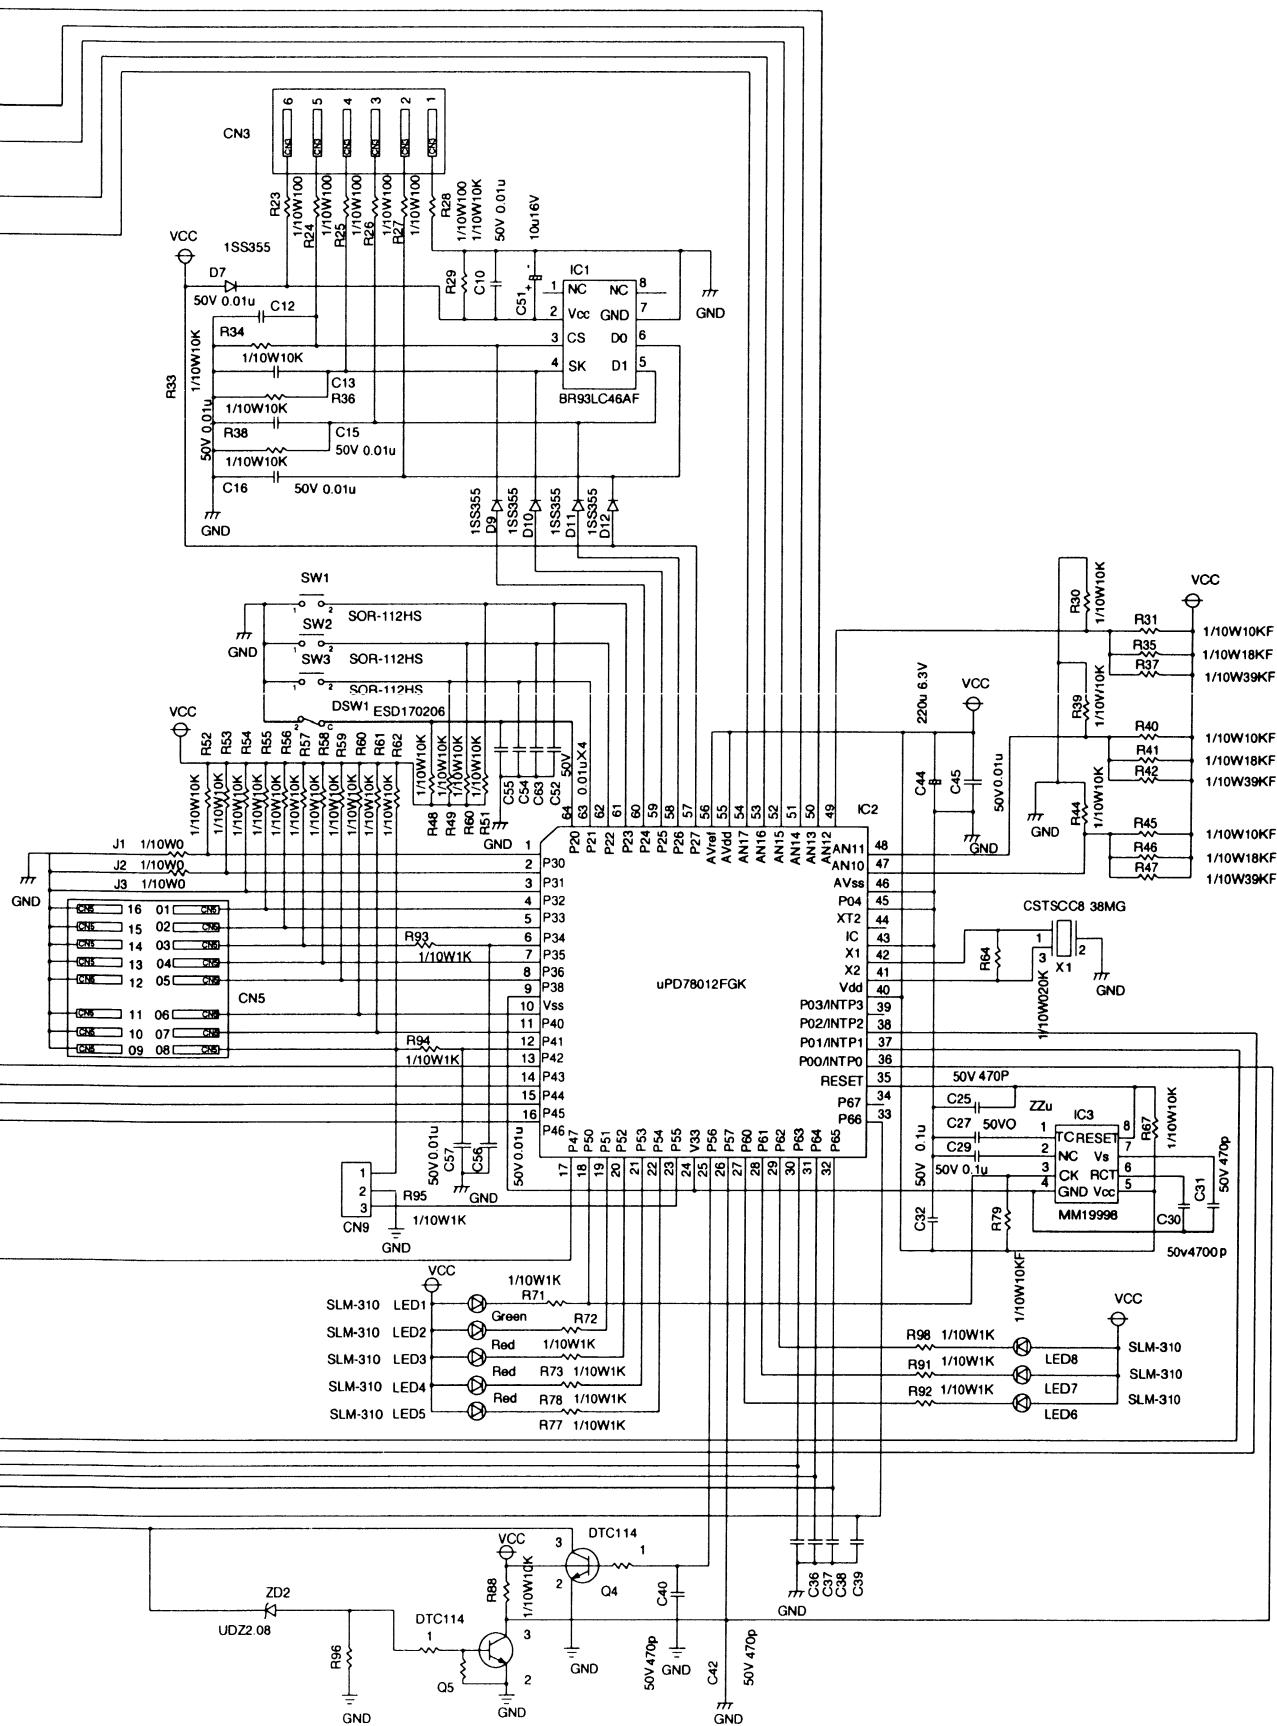


■APPLICABLE MODEL

CS-40U32JP, CS-50U32JP, CS-71U32JP, CS-80U32JP, CS-112U32JP

●WIRED REMOTE CONTROLLER
PRINTED CIRCUIT BOARD (SCHEMATIC DIAGRAM)

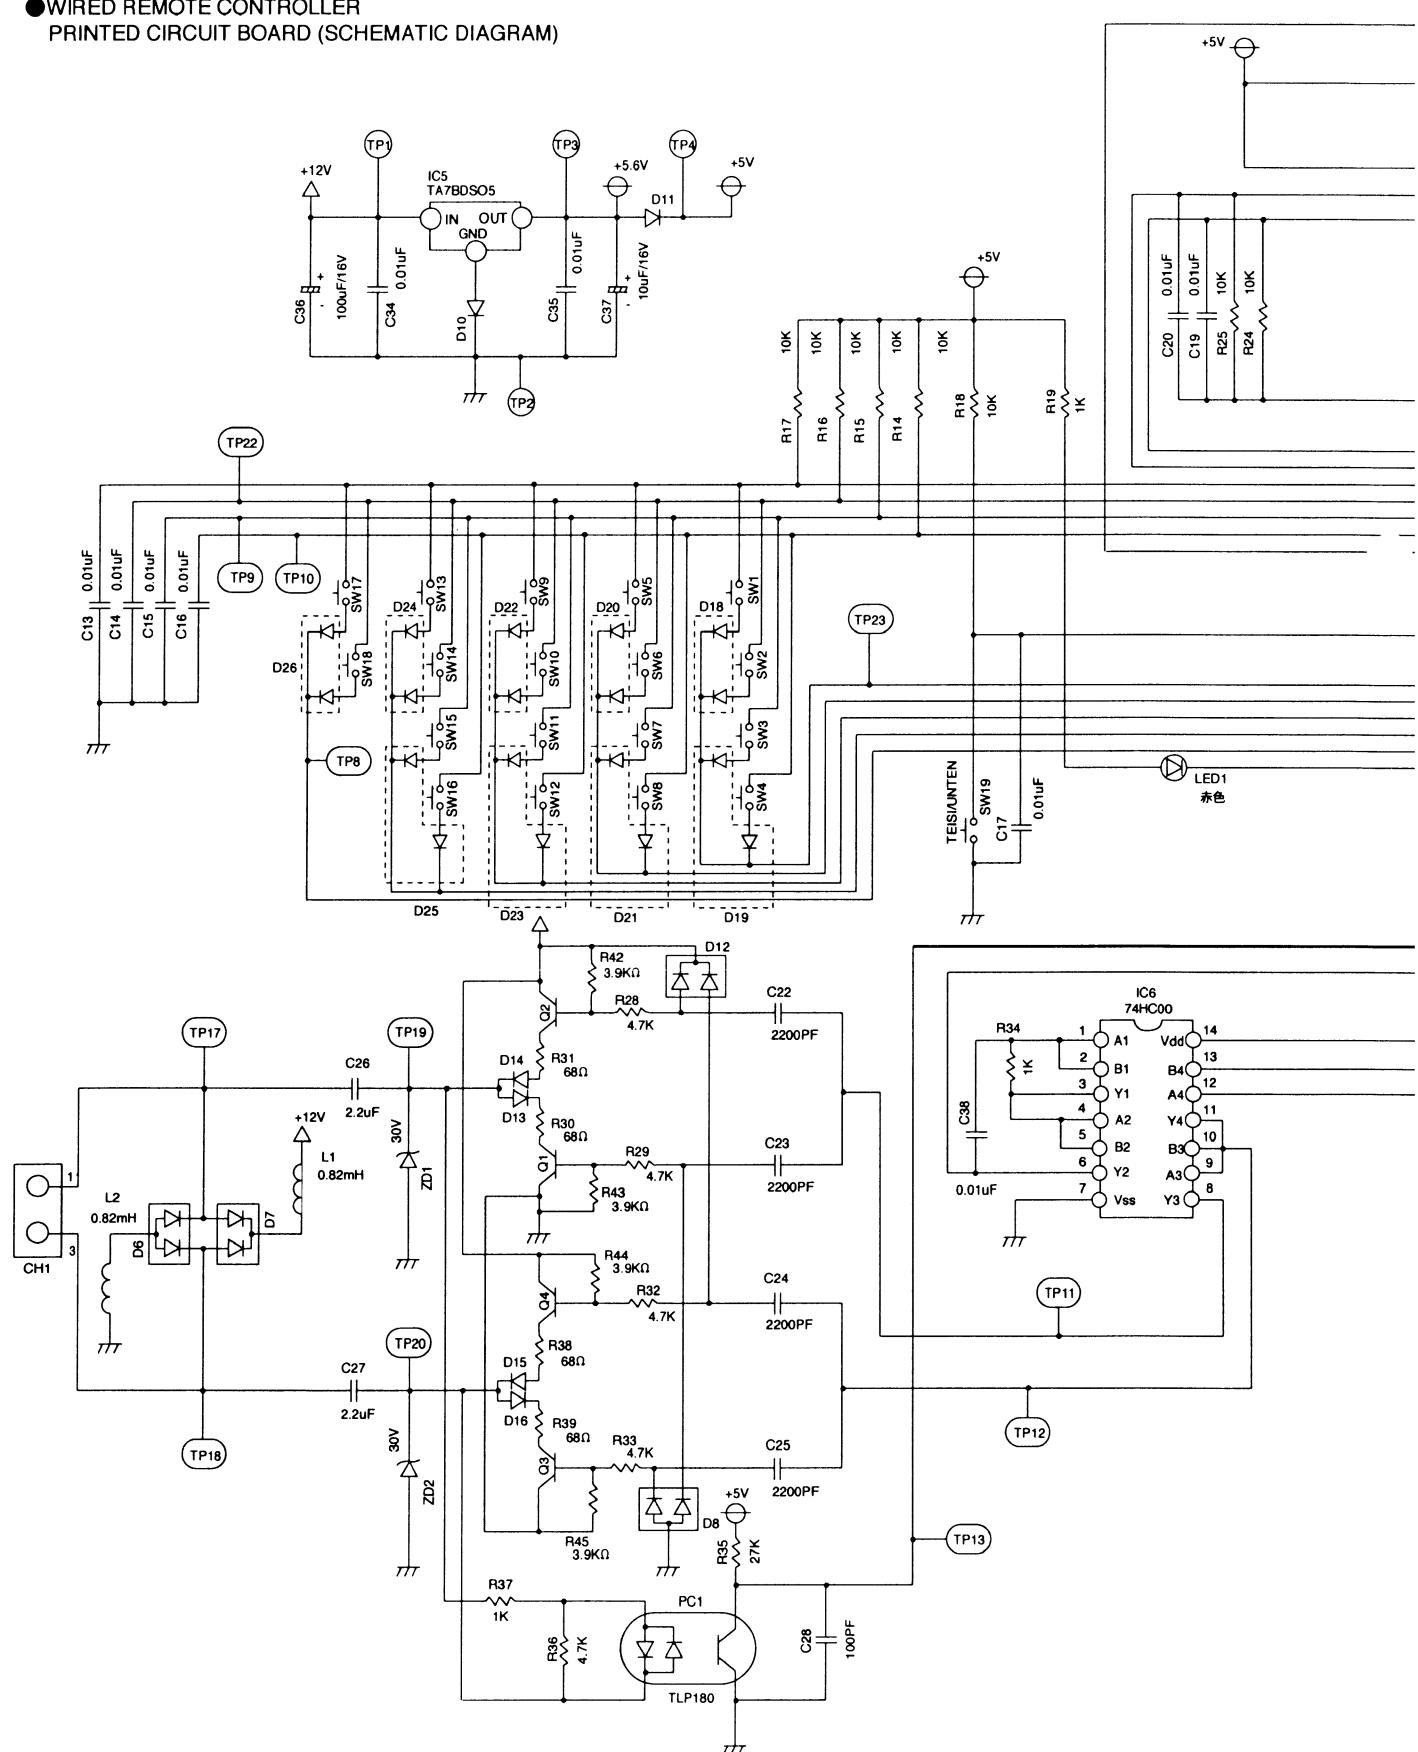


5. CIRCUIT DIAGRAM

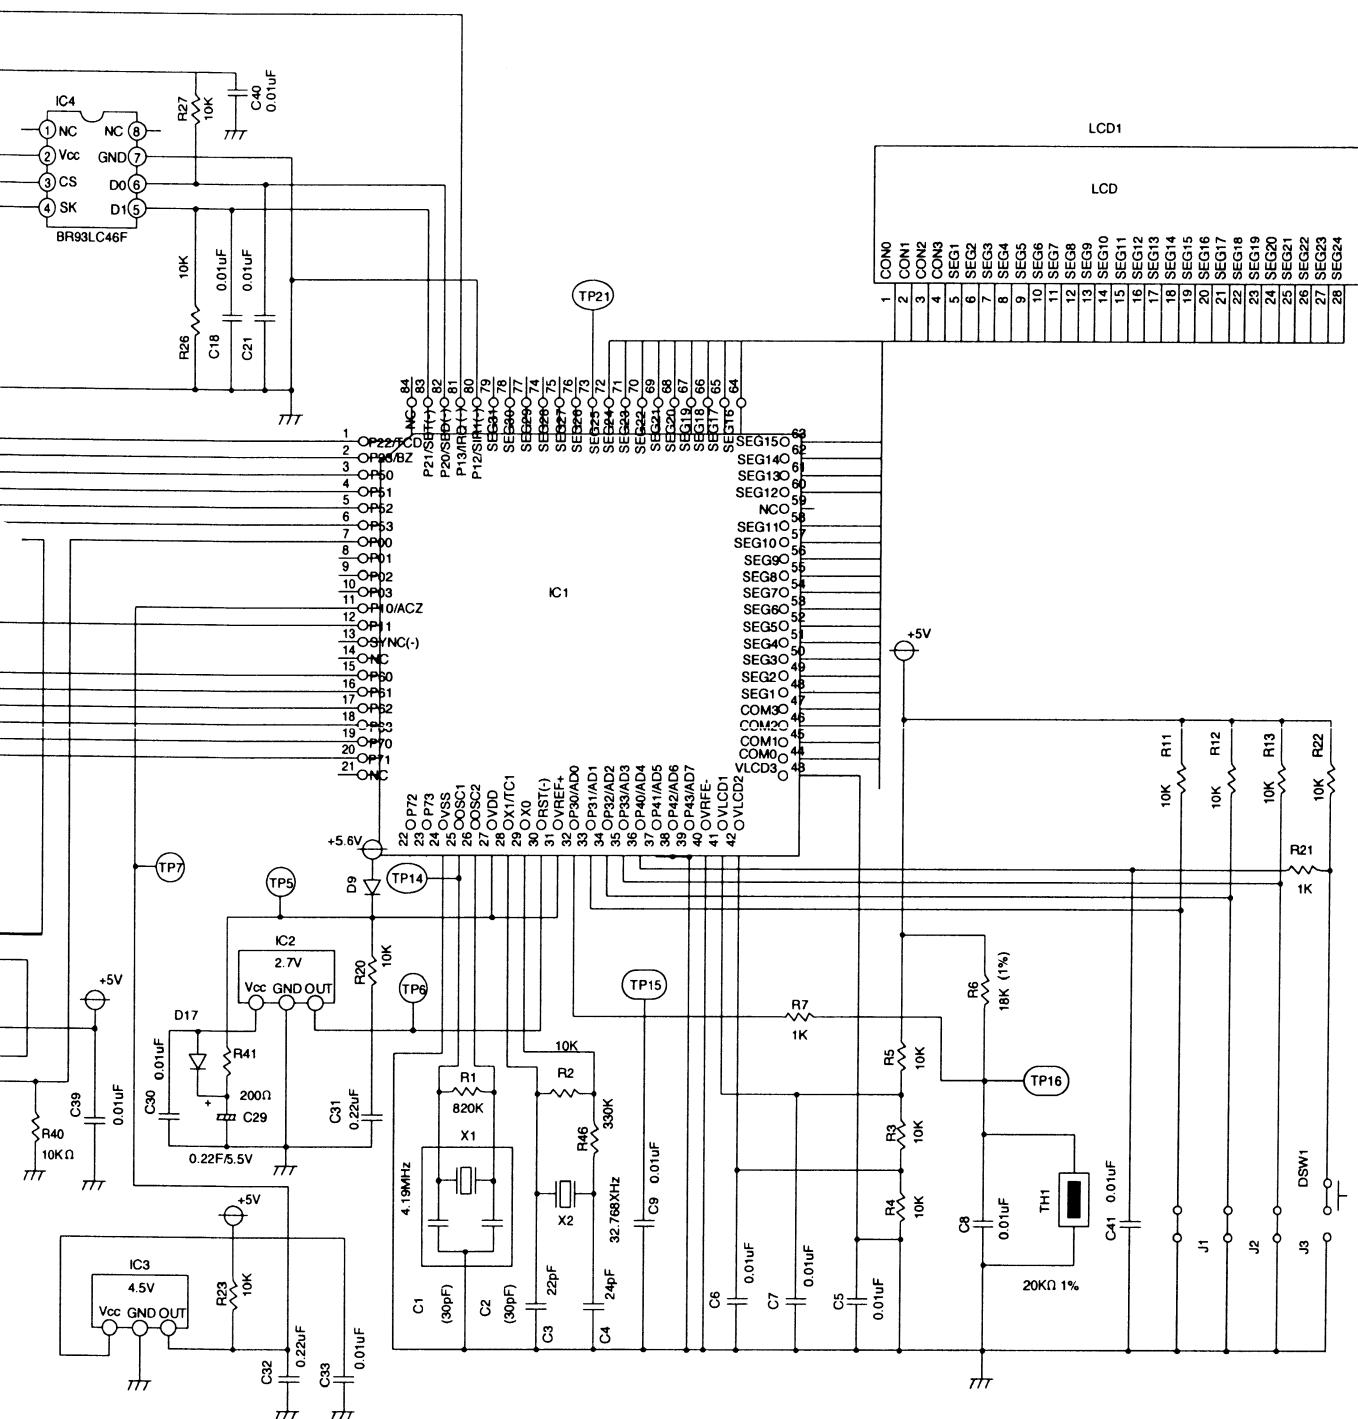

J1		J3	
J2		DSW1	TWIN·TRIPPLE SETTING (ON:SAVE, OFF:MAIN)
1	FAN SPEED	11	CANCEL
2	—	12	CLOCK
3	CHECK	13	SET TEMPERATURE UP
4	AIR SWING MANUAL	14	SET TEMPERATURE DOWN
5	OPERATION	15	FILTER RESET
6	—	16	TEST RUN
7	AIR CONDITIONER NO.	17	▲ (TO SET A LATER TIME)
8	AIR SWING AUTO	18	▼ (TO SET AN EARLIER TIME)
9	TIMER SET (ON/OFF)	19	RUN SWITCH (ON/OFF)
10	RESERVE	20	—

■APPLICABLE MODEL

● WIRELESS REMOTE CONTROLLER
PRINTED CIRCUIT BOARD (SCHEMATIC DIAGRAM)

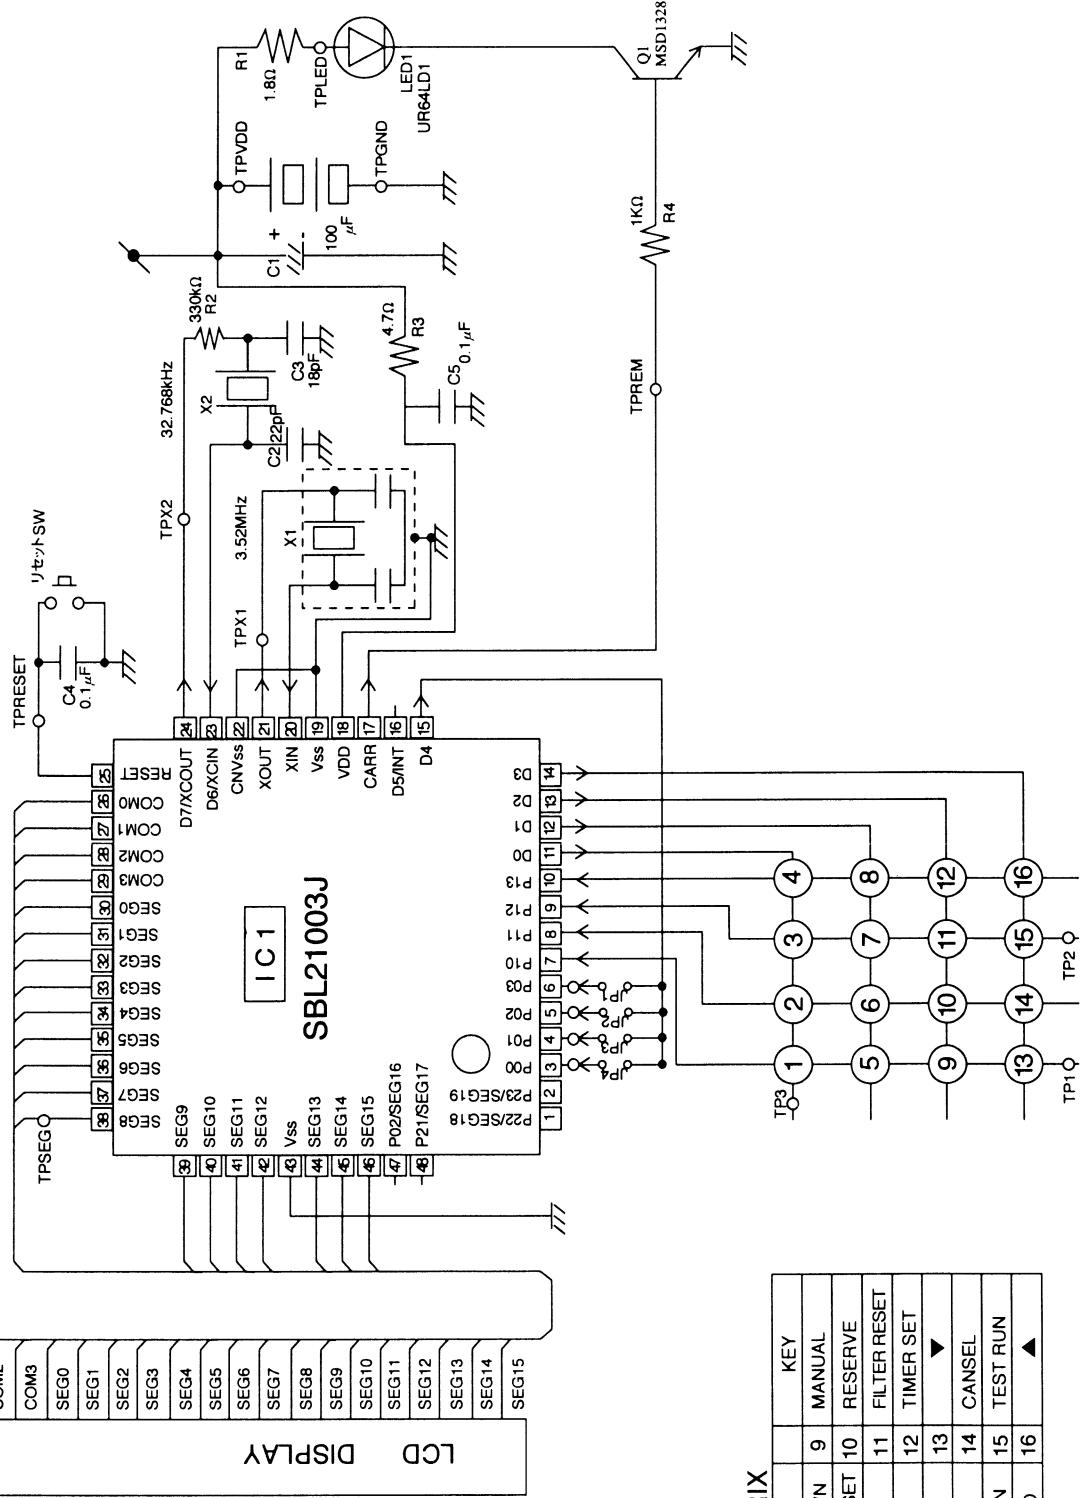


KEY MATRIX

KEY	KEY	KEY	KEY
1	TEMP DOWN	9	MANUAL
2	ADDRESS SET	10	RESERVE
3	ON/OFF	11	FILTER RESET
4	TEMP UP	12	TIMER SET
5	AUTO	13	▼
6	CLOCK	14	CANCEL
7	OPERATION	15	TEST RUN
8	FAN SPEED	16	▲


■Wired Remote Controller CZ-10RT32P(Optional Parts)

Name and function of each part

Display panel

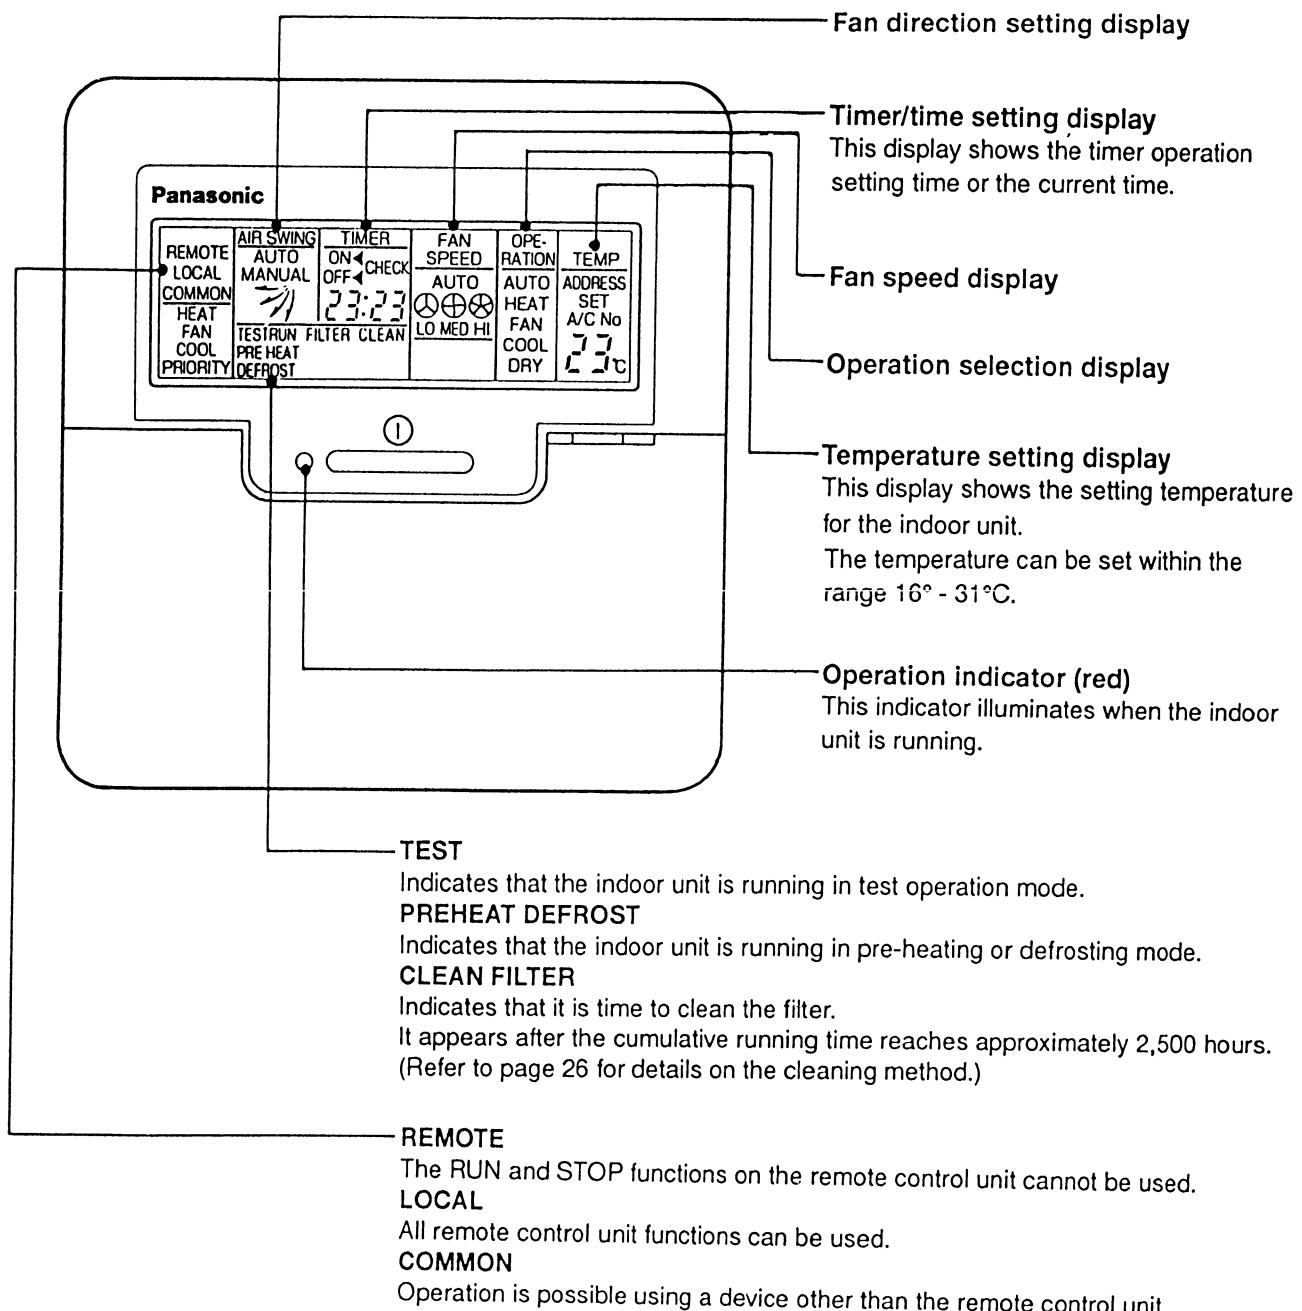

Operating panel

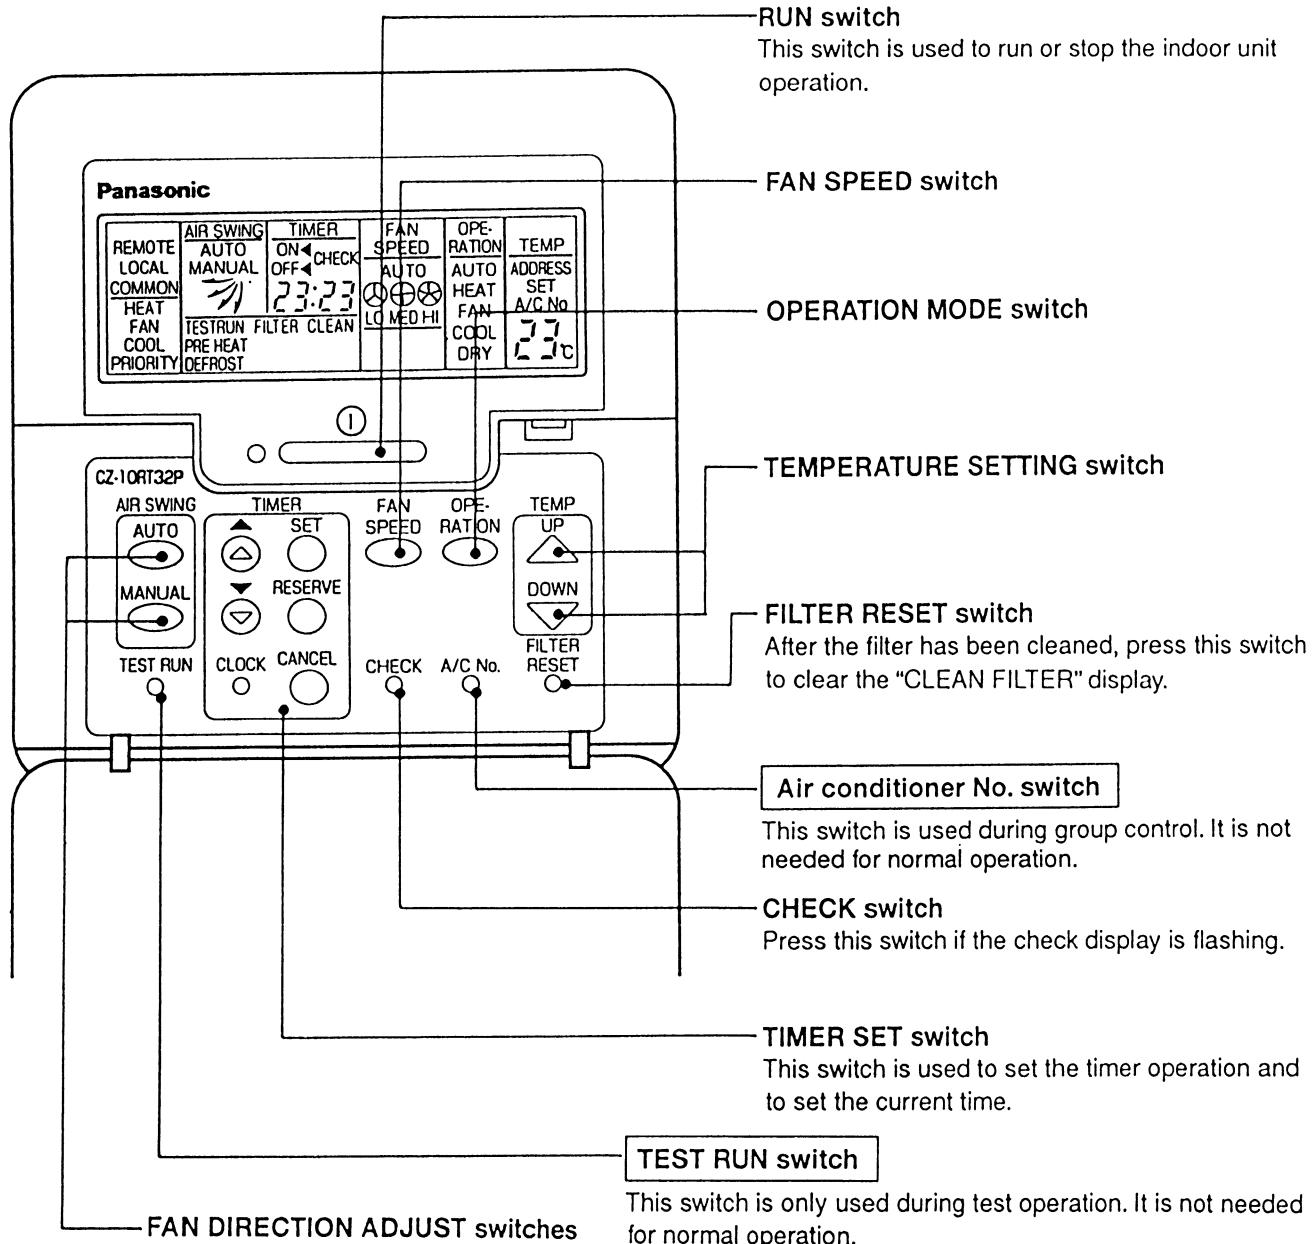


● Wireless Remote Controller.(Optional Parts)

HEAT PUMP TYPE………CZ-10RW51P


COOLING ONLY TYPE………CZ-10RW01P

Name and function of each part

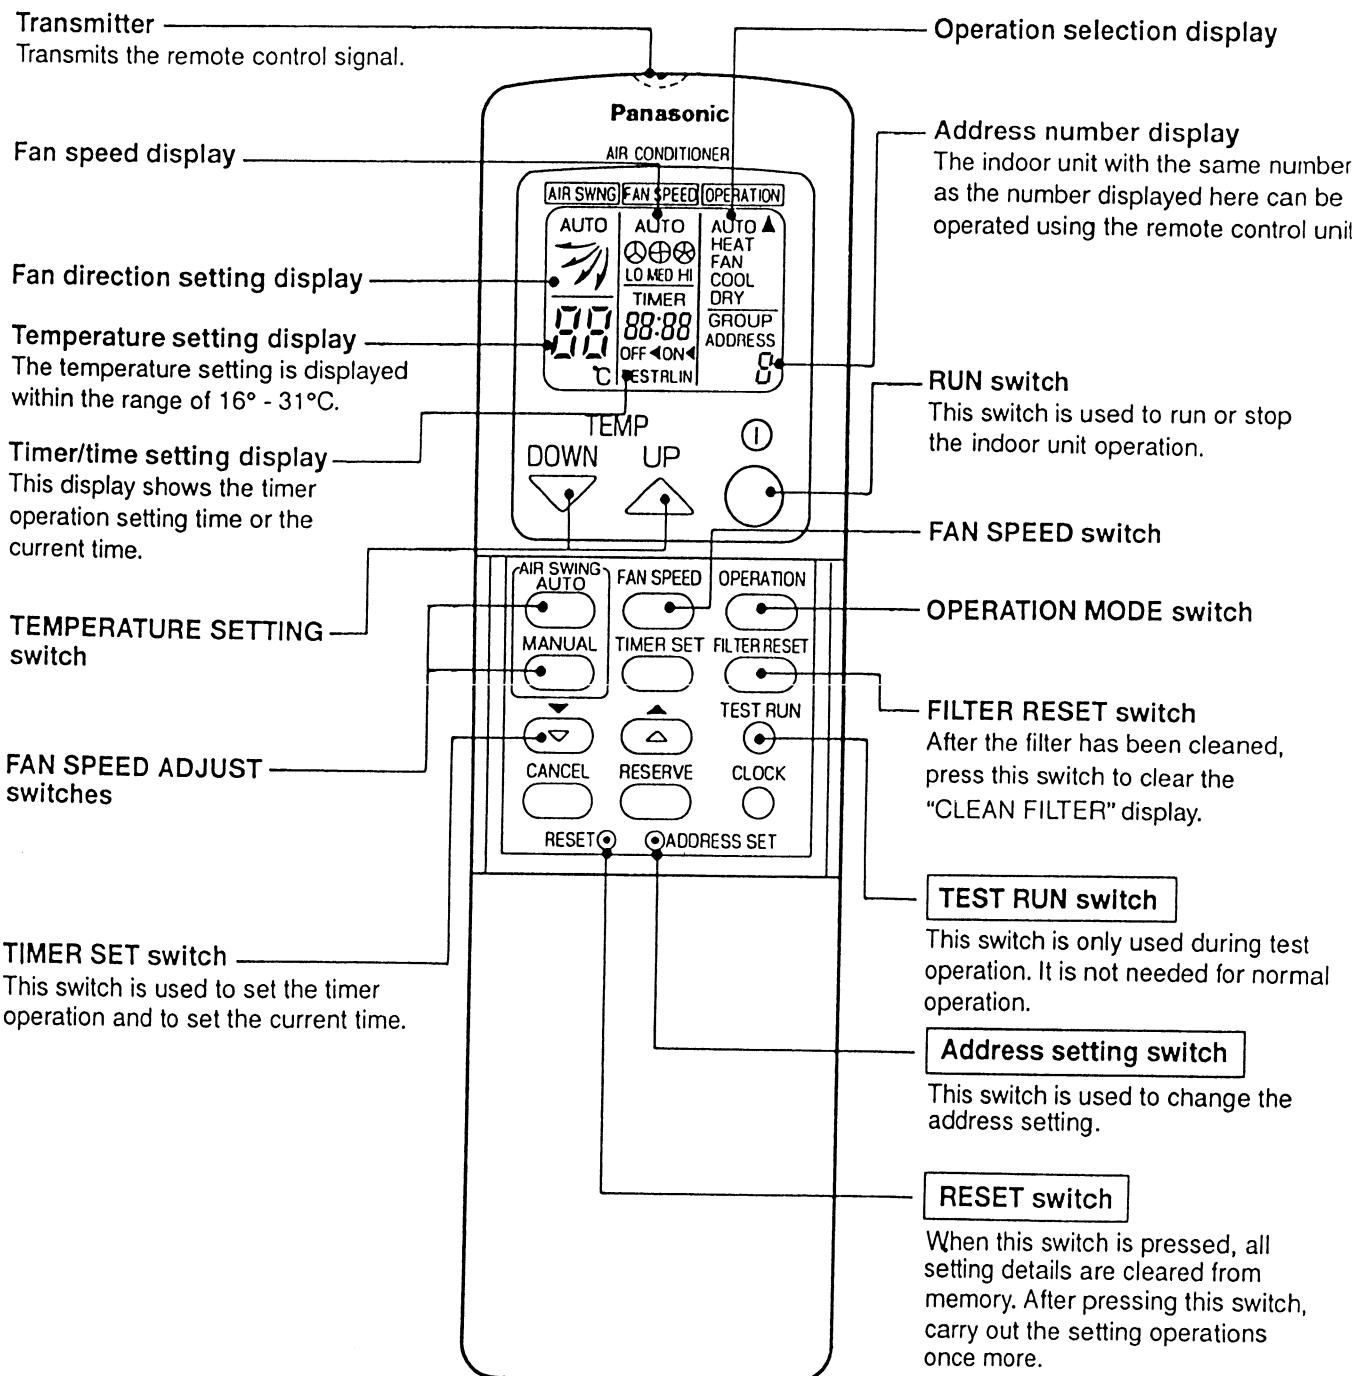


7. REFRIGERATION CYCLE(HEAT PUMP TYPE)

CS-40U32JP/CU-40C52HP
CS-50U32JP/CU-50C52HP

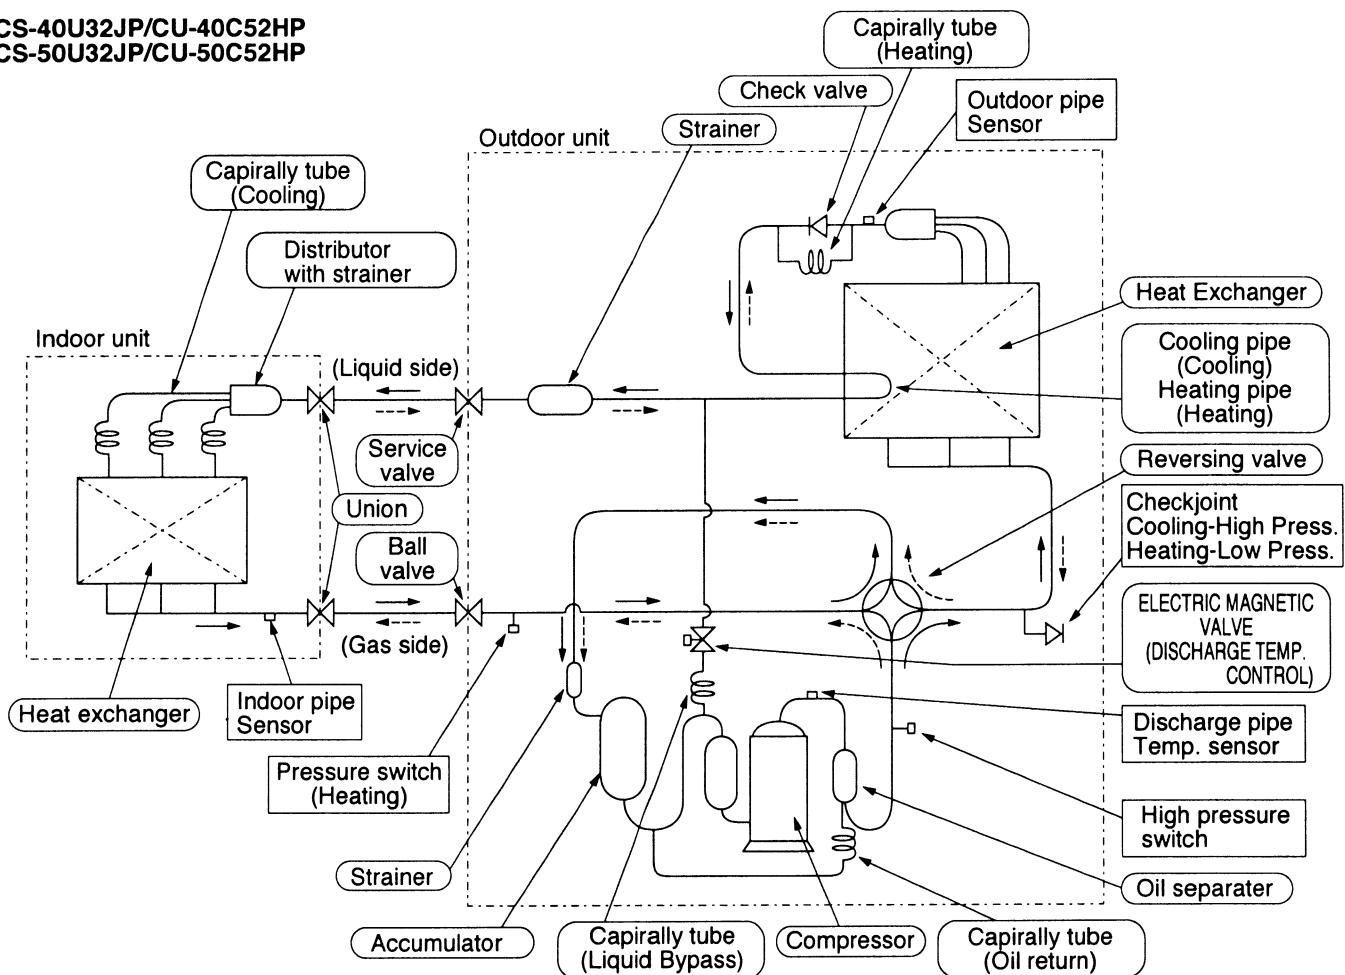


CS-71U32JP/CU-71C52HP
CS-71U32JP/CU-71C52XP

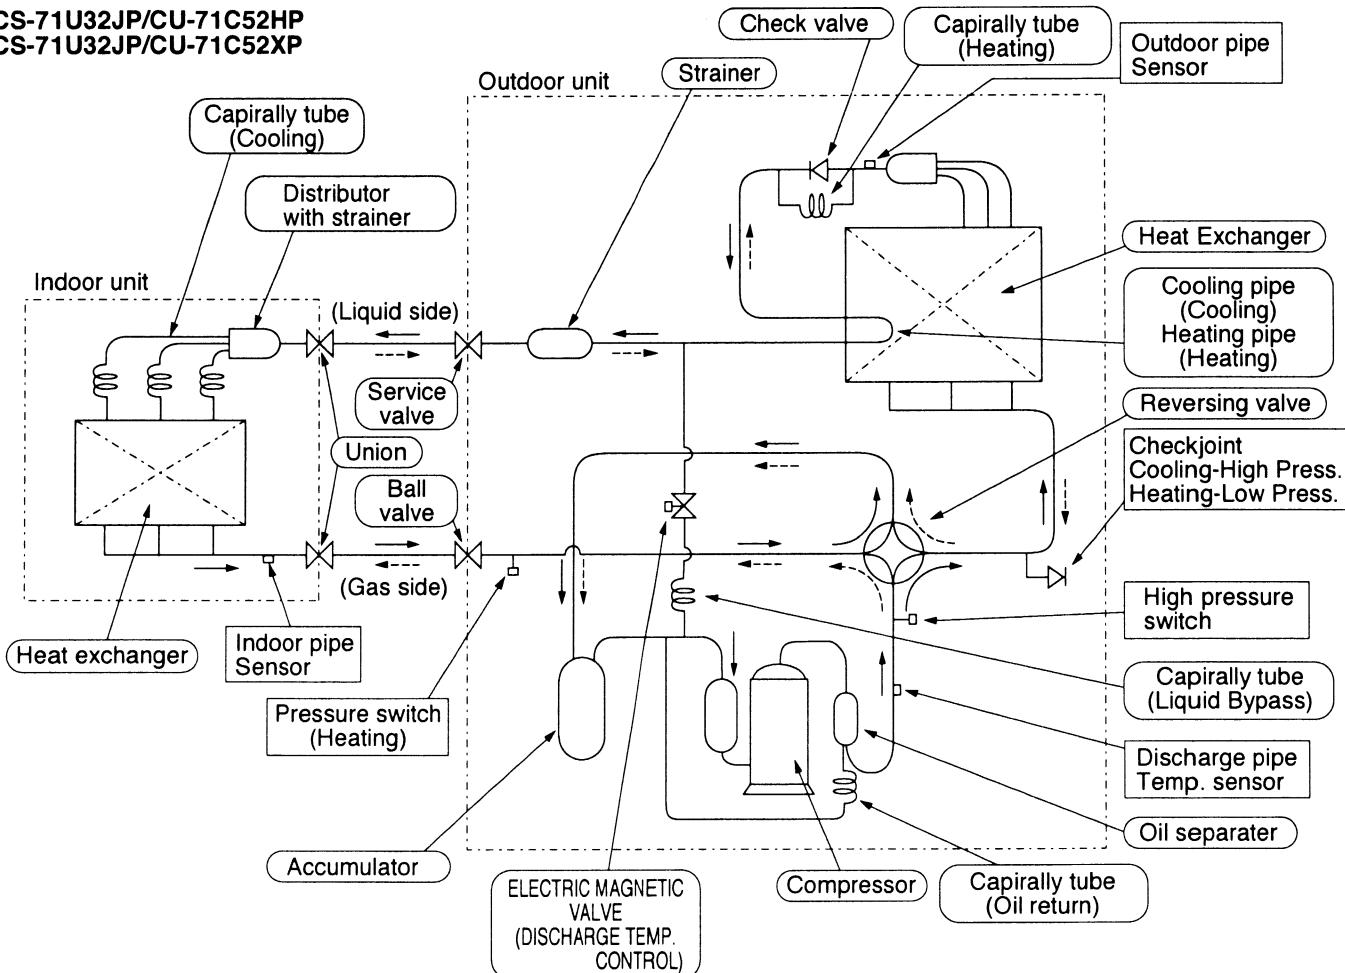


7. REFRIGERATION CYCLE(HEAT PUMP TYPE)

CS-80U32JP/CU-80C52HP
 CS-80U32JP/CU-80C52XP
 CS-112U32JP/CU-112C52XP
 CS-140U32JP/CU-140C53XP

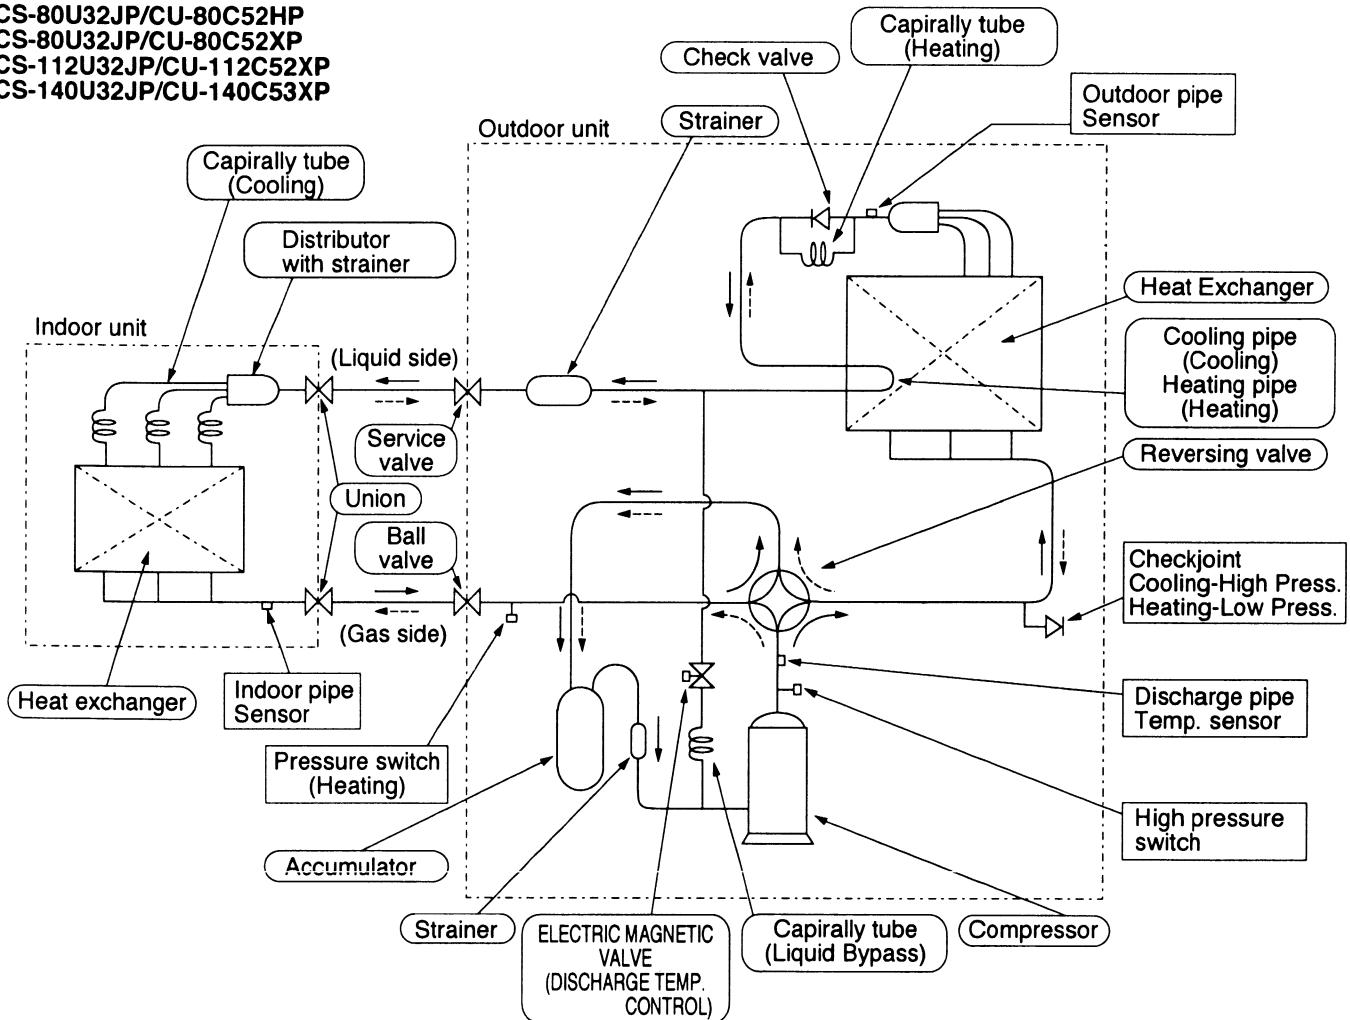


CS-160U32JP/CU-160C53XP

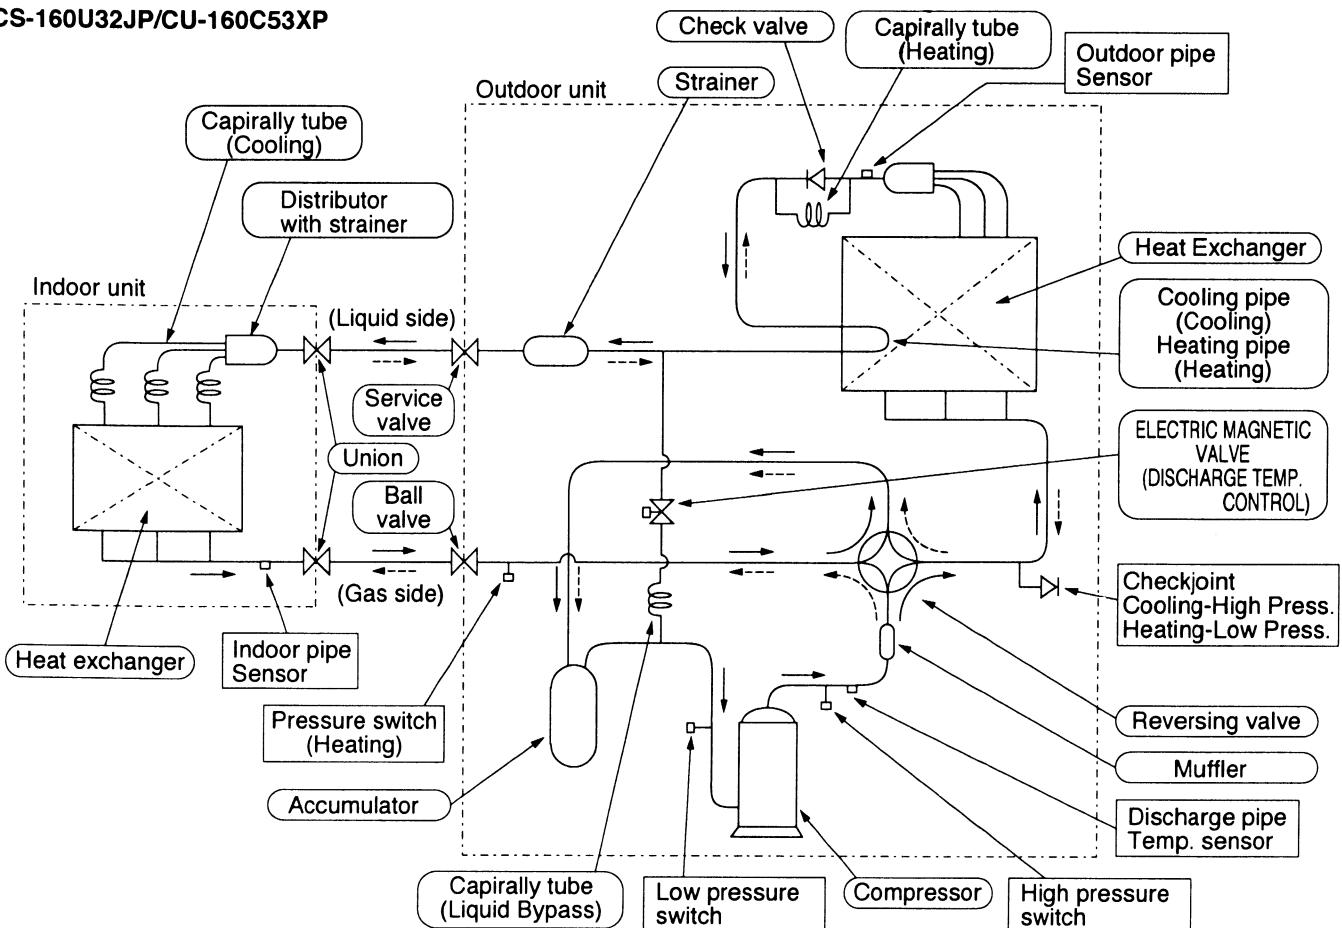


7. REFRIGERATION CYCLE(COOLING ONLY TYPE)

CS-40U32JP/CU-40C02HP
CS-50U32JP/CU-50C02HP

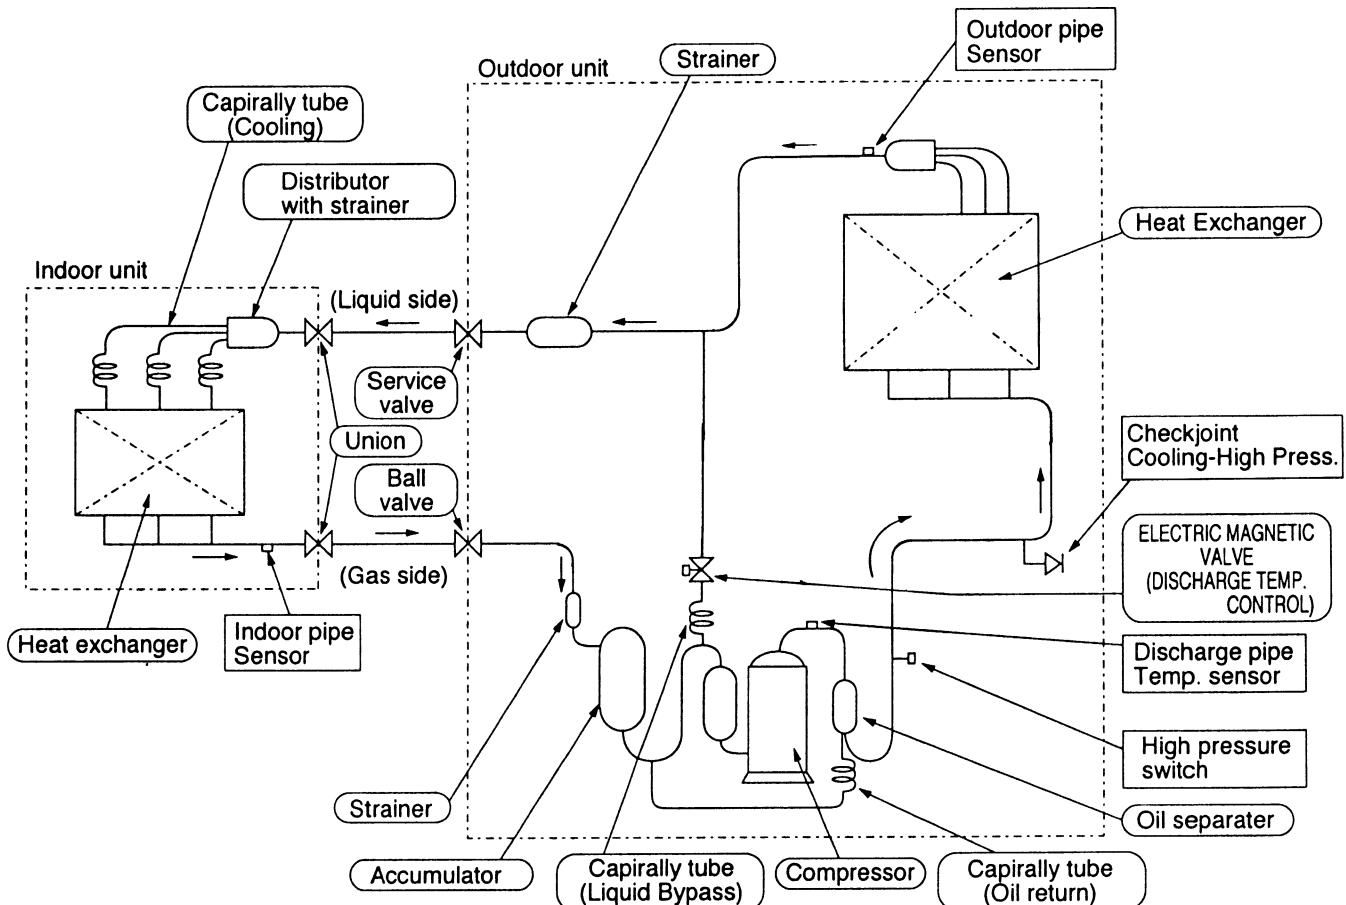


CS-71U32JP/CU-71C02HP
CS-71U32JP/CU-71C02XP

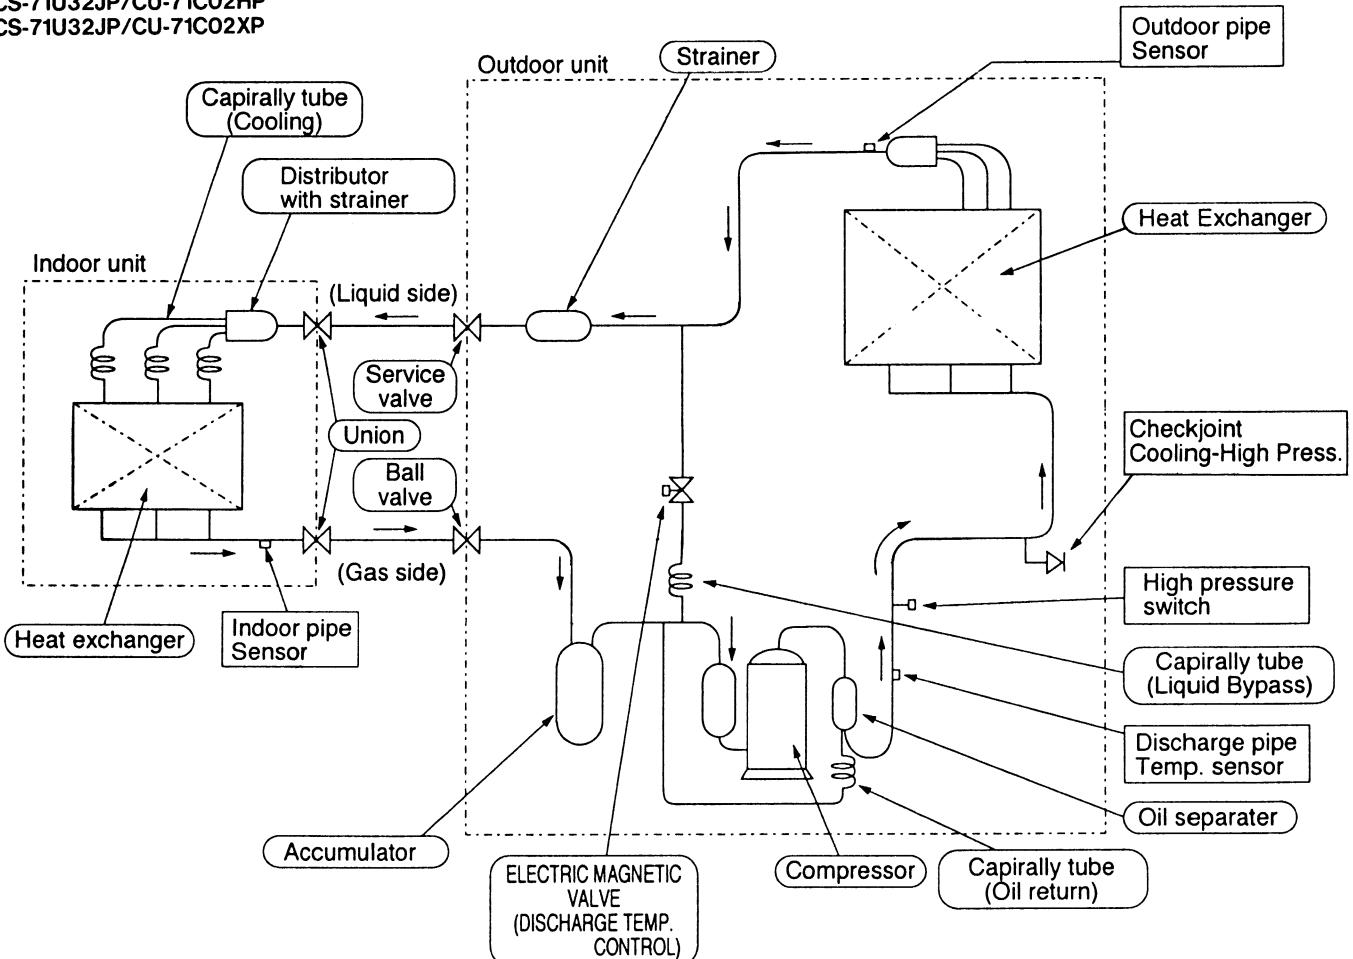


7. REFRIGERATION CYCLE (COOLING ONLY TYPE)

CS-80U32JP/CU-80C02HP
 CS-80U32JP/CU-80C02XP
 CS-112U32JP/CU-112C02XP
 CS-140U32JP/CU-140C03XP

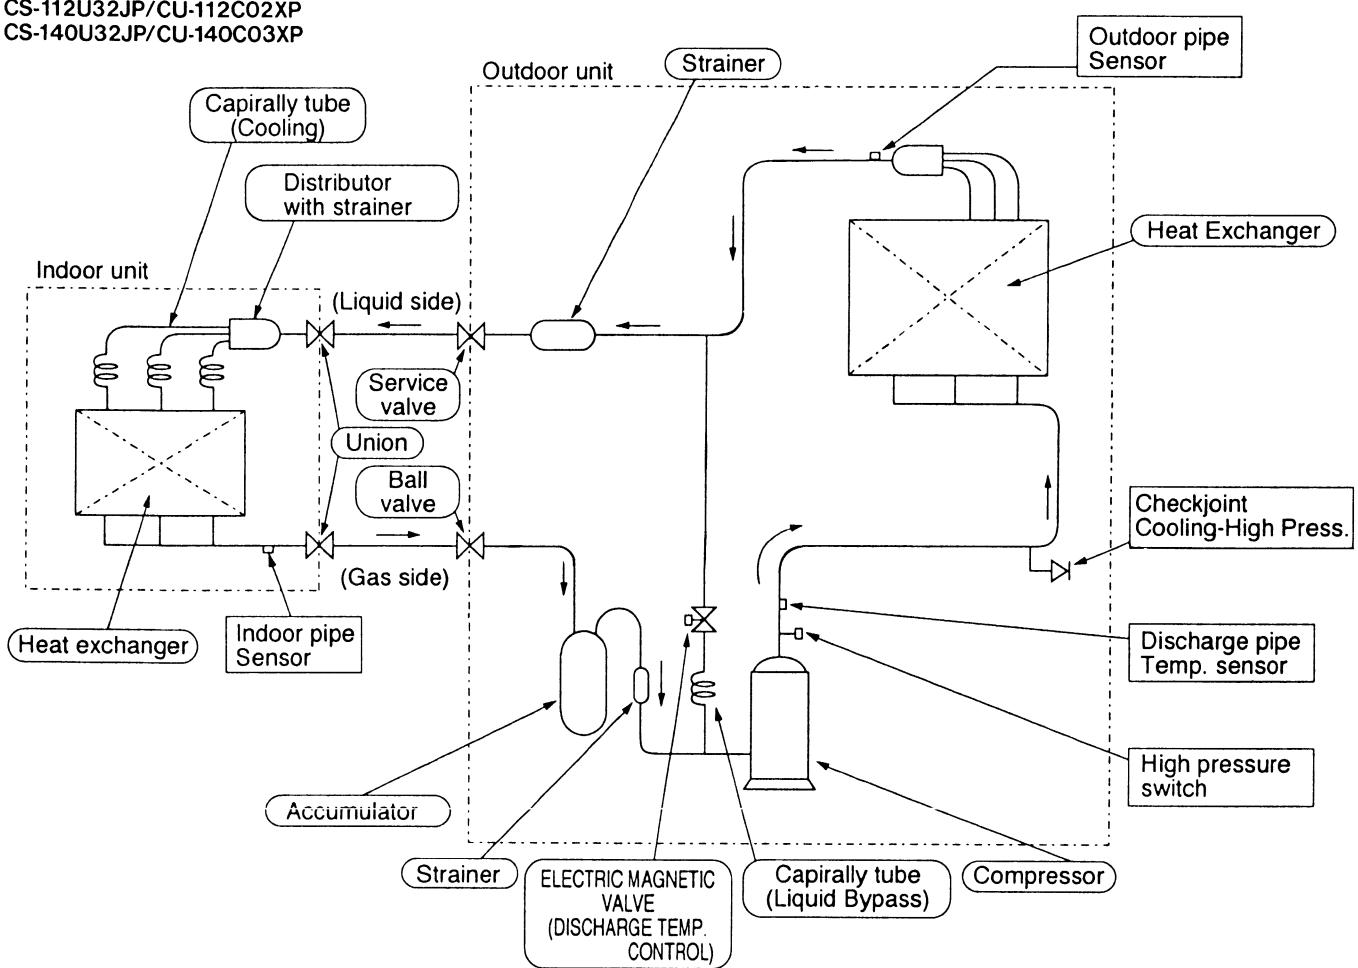

CS-160U32JP/CU-160C03HP

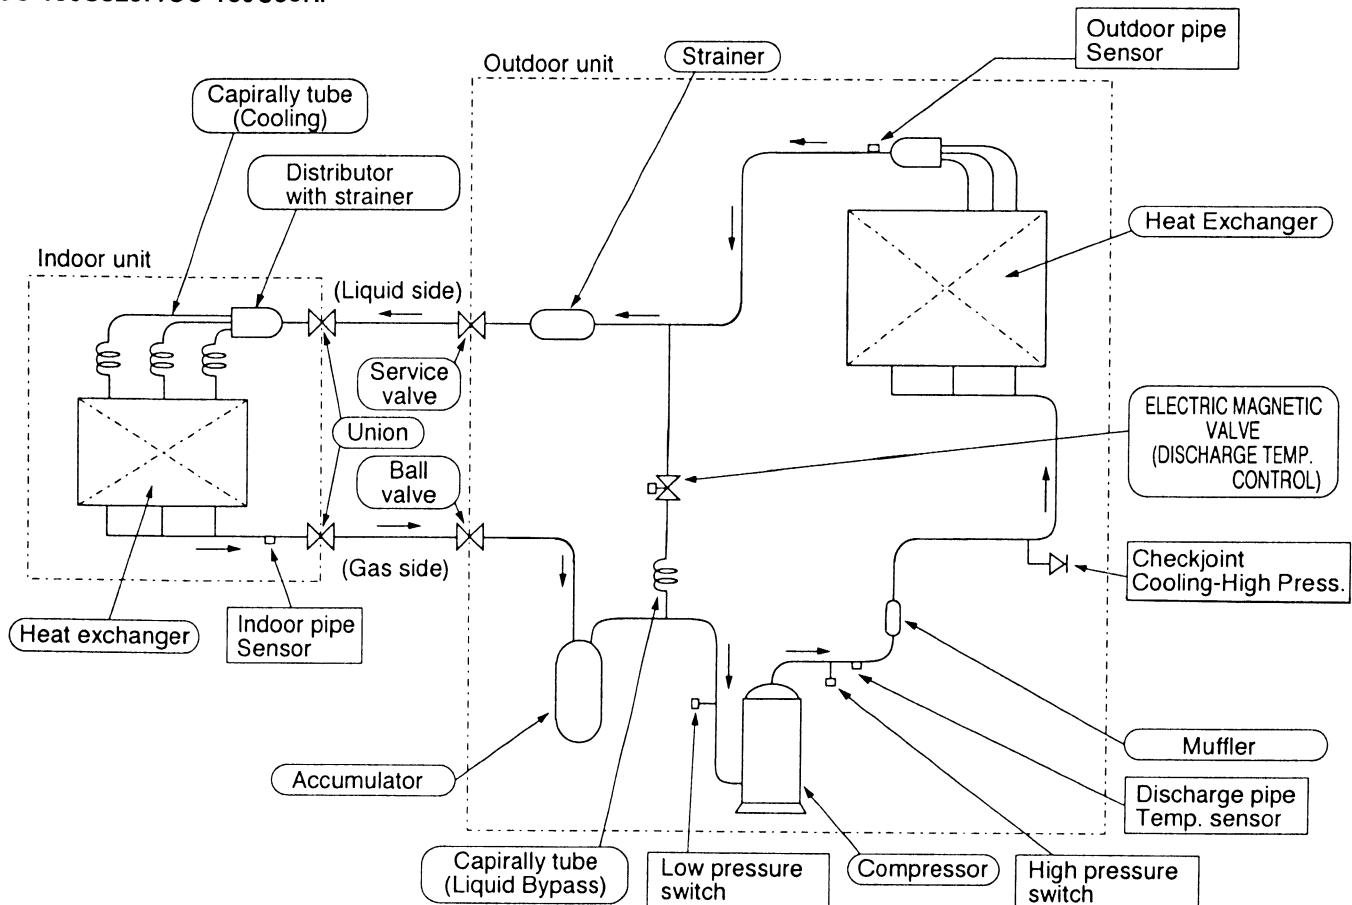

8. OPERATION RANGE

Power Supply

The applicable voltage range for each unit is given in "the following table". The working voltage among the three phases must be balanced within a 3% deviation from each voltage at the compressor terminals. The starting voltage must be higher than 85% of the rated voltage.

Power Supply

Model CU-	Unit Main Power		Applicable Voltage		Model CU-	Unit Main Power		Applicable Voltage	
	Phase, Volts	Hz	Maximum	Minimum		Phase, Volts	Hz	Maximum	Minimum
40C52HP	1~220	50	242	198	71C52XP	3N~380	50	418	342
50C52HP					80C52XP	3N~400	50	440	360
71C52HP	1~230	50	253	207	112C52XP	3N~415	50	440	374
80C52HP					140C52XP				
40C02HP	1~240	50	254	216	160C52XP				
50C02HP					71C02XP				
71C02HP					80C02XP				
80C02HP					112C02XP				

Indoor and Outdoor Temperature

All Models

Operating	Hz	Indoor Temp. (D.B./W.B.) (°C)		Outdoor Temp. (D.B./W.B.) (°C)	
		Maximum	Minimum	Maximum	Minimum
Cooling	50	32/22.5	21/15.5	43/-	-5/-
Heating	50	28/-	16/-	21/15.5	-15/-

3. Piping installation by existing piping

CU-C52, CU-C02 series changes the liquid pipe size of the previous series. It is possible to use the existing piping by adjusting the refrigerant gas volume.

Please do correct piping installation referring to the table below.

Heat pump type	Cooling only type	Standard piping specification				Existing piping specification(Larger piping)			
		Liquid piping (φ mm)	Gas piping (φ mm)	Gas charge-less length (m)	Additional gas volume (g/m)	Liquid piping (φ mm)	Gas piping (φ mm)	Gas charge-less length (m)	Additional gas volume (g/m)
CU-40C52HP	CU-40C02HP	6.35	12.7	30	—	9.52	12.7	13	50
CU-50C52HP	CU-50C02HP	6.35	12.7	30	20	9.52	12.7	13	50
CU-71C52HP, XP	CU-71C02HP, XP	6.35	15.88	30	20	9.52	15.88	13	50
CU-80C52HP, XP	CU-80C02HP, XP	9.52	15.88	30	50	12.7	15.88	17	100
CU-112C52XP	CU-112C02XP	9.52	19.05	30	50	12.7	19.05	17	100
CU-140C53XP	CU-140C03XP	9.52	19.05	30	50	12.7	19.05	17	100
CU-160C53XP	CU-160C03XP	9.52	19.05	30	50	12.7	19.05	17	100

Attention


- Please never decrease the gas piping size.(It causes the breakdown of the compressor)
- The equivalent piping length and the cooling and heating capacity change rate are same as the standard piping specification.

■ CORRECTION OF COOLING AND HEATING CAPACITIES


Correction of cooling and heating capacities according to the connecting pipe length.

The data of cooling capacities (marked on the name plate) are based on 5 meters connecting pipe and horizontal installation.

(Cooling)

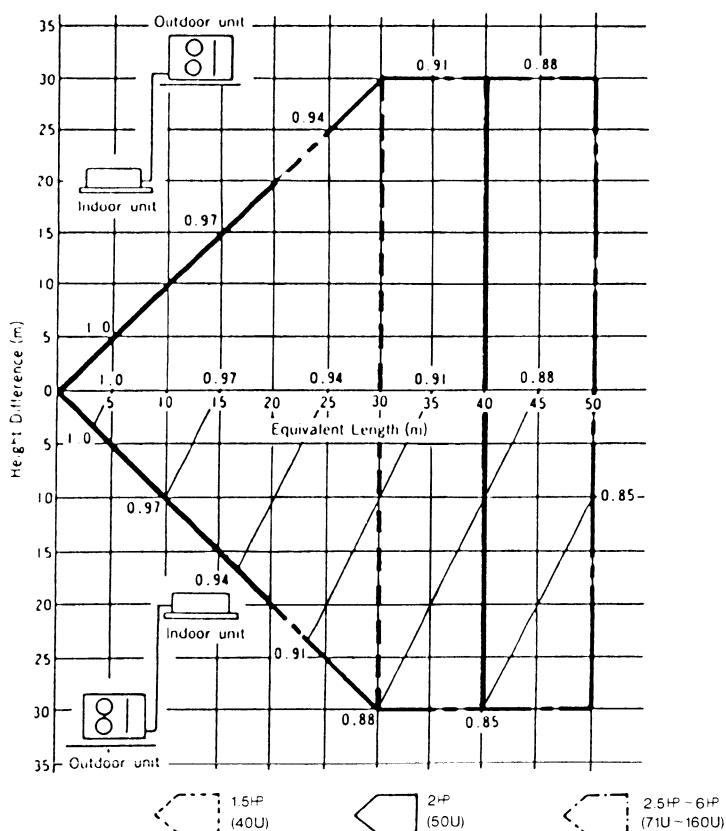

(Heating)

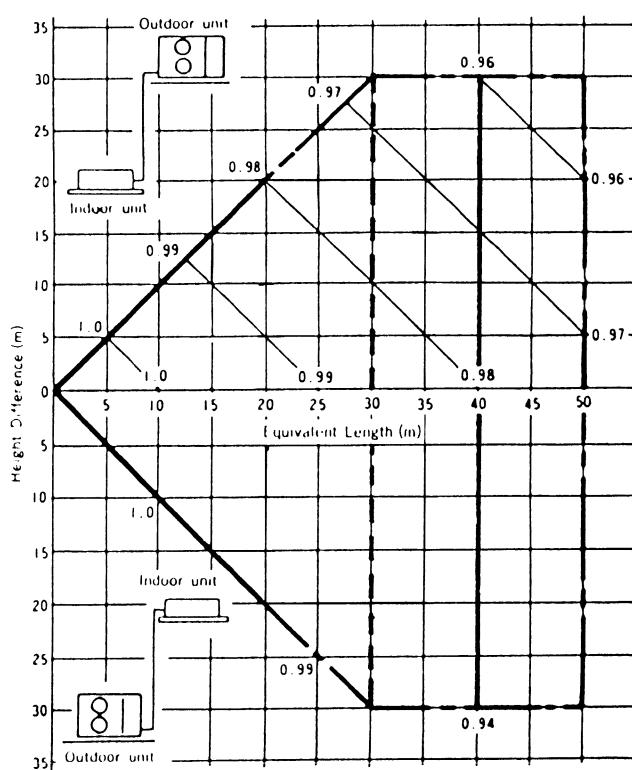

Equivalent Length = actual pipe length +
number of elbow x ELE + number of oil
trap x ELO

ELE: equivalent length of elbow.

ELO: equivalent length of oil trap.

Outer diameter of gas side pipe mm (inch)	ELE
9.52	0.18
12.7 (1/2)	0.20
15.88 (5/8)	0.25
19.05 (3/4)	0.35

Model	Ref. Charge
1.5 ~ 2.5HP	20g per 1m
3 ~ 6HP	50g per 1m

Example: CS-71U32JP

Before shipment, this air conditioner is filled with the rated amount of refrigerant subject to 30m piping length. (The rated amount of refrigerant is indicated on the name plate.) But when the piping length exceeds 30m, additional charge is required according to the following table.

In case of 30 m long pipe (one-way), the amount of refrigerant to be replenished is: $(30-30) \times 20 = 0\text{g}$

CS-140U32JP

In case of 50m long pipe (one-way), the amount of refrigerant to be replenished is: $(50-30) \times 50 = 2,000\text{g}$

10. OPERATING CHARACTERISTICS

Model	Main Power Source		Compressor Motor			Evaporator Fan Motor		Condenser Fan Motor	
	Voltage (V)	Frequency (Hz)	S.C. (A)	R.C.(A) COOL/HEAT	IPT(kw) COOL/HEAT	R.C. (A)	IPT (kw)	R.C. (A)	IPT (kw)
	220	50	28.5	6.61/6.21	1.45/1.34	0.47	0.09	0.32	0.07
H E A T	CS-40U32JP CU-40C52HP	230	50	28.5	6.41/6.01	1.45/1.34	0.47	0.09	0.32
		240	50	28.5	6.21/5.81	1.45/1.87	0.47	0.09	0.32
	CS-50U32JP CU-50C52HP	220	50	33.7	8.01/7.81	1.71/1.66	0.47	0.09	0.32
		230	50	33.7	7.71/7.51	1.71/1.66	0.47	0.09	0.32
		240	50	33.7	7.41/7.21	1.71/1.66	0.47	0.09	0.32
	CS-71U32JP CU-71C52HP	220	50	60.0	11.73/11.23	2.3/2.17	0.47	0.09	0.50
		230	50	60.0	11.23/10.73	2.3/2.17	0.47	0.09	0.50
		240	50	60.0	10.73/10.23	2.3/2.17	0.47	0.09	0.50
	CS-80U32JP CU-80C52HP	220	50	56.0	12.43/11.53	2.53/2.29	0.47	0.09	0.50
P U M P		230	50	56.0	11.93/11.03	2.53/2.29	0.47	0.09	0.50
		240	50	56.0	11.43/10.53	2.53/2.29	0.47	0.09	0.50
	CS-71U32JP CU-71C52XP	380	50	27.0	4.38/3.88	2.3/2.17	0.47	0.09	0.50
		400	50	27.0	4.18/3.78	2.3/2.17	0.47	0.09	0.50
		415	50	27.0	3.88/3.68	2.3/2.17	0.47	0.09	0.50
	CS-80U32JP CU-80C52XP	380	50	26.0	4.68/4.28	2.53/2.29	0.47	0.09	0.50
		400	50	26.0	4.58/4.08	2.53/2.29	0.47	0.09	0.50
		415	50	26.0	4.48/3.88	2.53/2.29	0.47	0.09	0.50
	CS-112U32JP CU-112C52XP	380	50	48.0	5.87/5.87	3.07/3.07	0.58	0.11	1.01
M O D E L		400	50	48.0	5.57/5.57	3.07/3.07	0.58	0.11	1.01
		415	50	48.0	5.37/5.37	3.07/3.07	0.58	0.11	1.01
	CS-140U32JP CU-140C53XP	380	50	62.0	7.27/6.67	4.17/3.68	0.94	0.20	0.96
		400	50	62.0	7.38/6.77	4.17/3.68	0.90	0.20	0.96
		415	50	62.0	7.49/6.87	4.17/3.68	0.86	0.20	0.96
	CS-160U32JP CU-160C53XP	380	50	61.0	7.67/7.57	4.47/4.39	1.10	0.22	1.08
		400	50	61.0	7.49/7.39	4.47/4.39	1.05	0.22	1.08
		415	50	61.0	7.40/7.30	4.47/4.39	1.01	0.22	1.08
	CS-40U32JP CU-40C02HP	220	50	28.5	6.61	1.45	0.47	0.09	0.32
C O L I N G O N L Y M O D E L		230	50	28.5	6.41	1.45	0.47	0.09	0.32
		240	50	28.5	6.21	1.45	0.47	0.09	0.32
	CS-50U32JP CU-50C02HP	220	50	33.7	8.01	1.71	0.47	0.09	0.32
		230	50	33.7	7.71	1.71	0.47	0.09	0.32
		240	50	33.7	7.41	1.71	0.47	0.09	0.32
	CS-71U32JP CU-71C02HP	220	50	60.0	11.73	2.3	0.47	0.09	0.5
		230	50	60.0	11.23	2.3	0.47	0.09	0.5
		240	50	60.0	10.73	2.3	0.47	0.09	0.5
	CS-80U32JP CU-80C02HP	220	50	56.0	12.43	2.53	0.47	0.09	0.5
O N L Y M O D E L		230	50	56.0	11.93	2.53	0.47	0.09	0.5
		240	50	56.0	11.43	2.53	0.47	0.09	0.5
	CS-71U32JP CU-71C02XP	380	50	27.0	4.38	2.3	0.47	0.09	0.5
		400	50	27.0	4.18	2.3	0.47	0.09	0.5
		415	50	27.0	3.88	2.3	0.47	0.09	0.5
	CS-80U32JP CU-80C02XP	380	50	26.0	4.68	2.53	0.47	0.09	0.5
		400	50	26.0	4.58	2.53	0.47	0.09	0.5
		415	50	26.0	4.48	2.53	0.47	0.09	0.5
	CS-112U32JP CU-112C02XP	380	50	48.0	5.87	3.07	0.58	0.11	1.01
L		400	50	48.0	5.57	3.07	0.58	0.11	1.01
		415	50	48.0	5.37	3.07	0.58	0.11	1.01
	CS-140U32JP CU-140C53XP	380	50	62.0	7.27	4.17	0.94	0.20	0.96
		400	50	62.0	7.38	4.17	0.90	0.20	0.96
		415	50	62.0	7.49	4.17	0.86	0.20	0.96
	CS-160U32JP CU-160C53XP	380	50	61.0	7.27	4.47	1.10	0.22	1.08
		400	50	61.0	7.49	4.47	1.05	0.22	1.08
		415	50	61.0	7.40	4.47	1.01	0.22	1.08

Legend : S.C. : Starting Current

R.C. : Running Current

IPT : Power Consumption

11. FAN PERFORMANCE

• FAN PERFORMANCE


- CS-40U32JP, CS-50U32JP

ITEM	Model	Indoor Unit			Outdoor Unit
		CS-40U32JP, CS-50U32JP			CU-40C52HP, CU-50C52HP
Mode		Hi	Me	Lo	Hi
Air Volume	m ³ /min	13	12	10	32
Running Current	A	0.47	0.42	0.32	0.32
Power Consumption	kW	0.09	0.08	0.06	0.07
Fan Speed	r/min	530	490	440	900


Bypass factor And Coefficient For Correcting Capacity

according to Air volume change


Bypass factor. (B.F.)

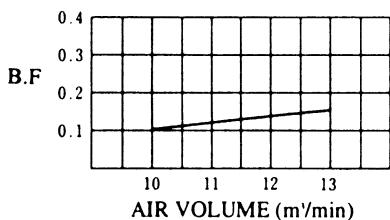

Coefficient For Correcting Cooling Capacity

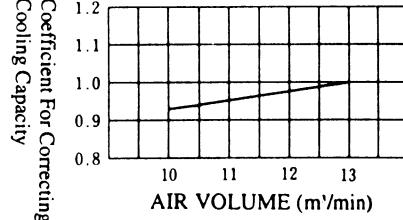

Coefficient For Correcting Heating Capacity

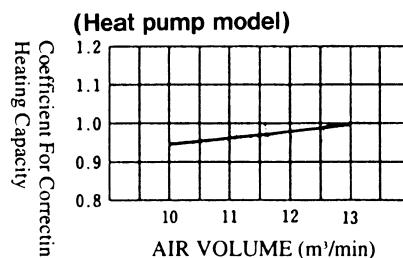


- CS-71U32JP


ITEM	Model	Indoor Unit			Outdoor Unit
		CS-71U32JP			CU-71C52HP, CU-71C52XP
Mode		Hi	Me	Lo	Hi
Air Volume	m ³ /min	17	15	13	50
Running Current	A	0.47	0.42	0.32	0.50
Power Consumption	kW	0.09	0.08	0.06	0.11
Fan Speed	r/min	600	550	510	900

Bypass factor And Coefficient For Correcting Capacity according to Air volume change


Bypass factor. (B.F.)

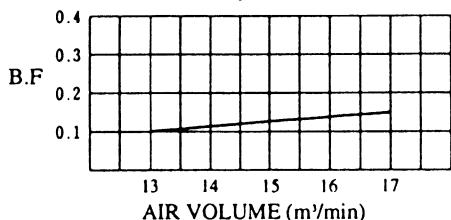

Coefficient For Correcting Cooling Capacity

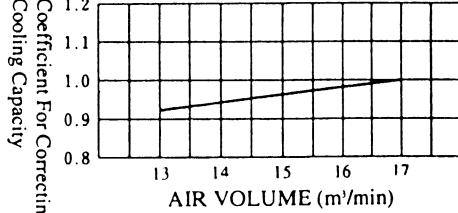

Coefficient For Correcting Heating Capacity

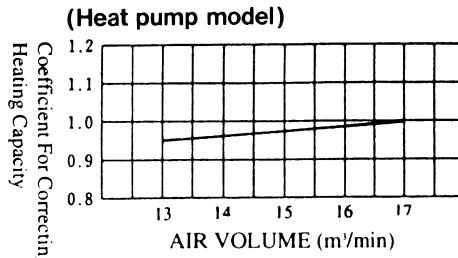

11. FAN PERFORMANCE


• FAN PERFORMANCE

• CS-80U32JP


ITEM	Model	Indoor Unit			Outdoor Unit
		CS-80U32JP			CU-80C52HP, CU-80C52XP
Mode		Hi	Me	Lo	Hi
Air Volume	m ³ /min	19	17	15	50
Running Current	A	0.47	0.42	0.37	0.50
Power Consumption	kW	0.09	0.08	0.07	0.11
Fan Speed	r/min	660	620	580	900

Bypass factor And Coefficient For Correcting Capacity according to Air volume change


Bypass factor. (B.F.)

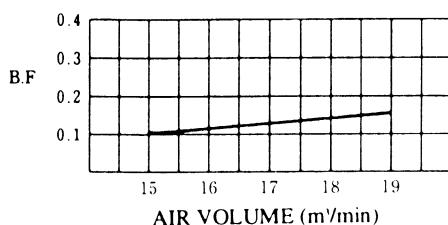

Coefficient For Correcting Cooling Capacity

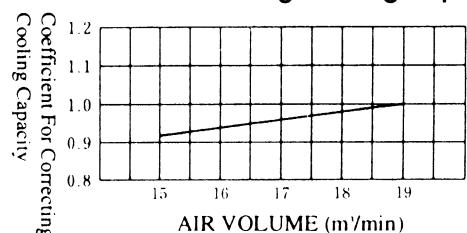

Coefficient For Correcting Heating Capacity (Heat pump model)

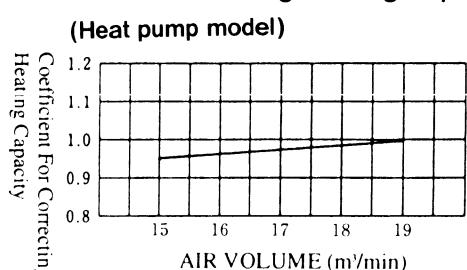


• CS-112U32JP


ITEM	Model	Indoor Unit			Outdoor Unit
		CS-112U32JP			CU-112C52XP
Mode		Hi	Me	Lo	Hi
Air Volume	m ³ /min	24	21	18	75
Running Current	A	0.58	0.47	0.37	1.01
Power Consumption	kW	0.11	0.09	0.07	0.22
Fan Speed	r/min	710	650	580	800

Bypass factor And Coefficient For Correcting Capacity according to Air volume change


Bypass factor. (B.F.)

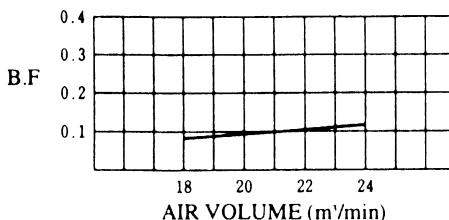

Coefficient For Correcting Cooling Capacity

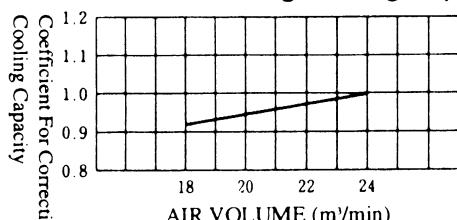

Coefficient For Correcting Heating Capacity (Heat pump model)

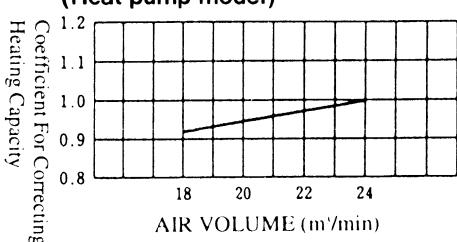

11. FAN PERFORMANCE

• FAN PERFORMANCE


- CS-140U32JP

ITEM \ Model	Indoor Unit			Outdoor Unit	
	CS-140U32JP			CU-140C53XP	
Mode	Hi	Me	Lo	Hi	
Air Volume	m ³ /min	30	25	20	80
Power Consumption	kW	0.20	0.16	0.14	0.22
Fan Speed	r/min	610	540	500	810
Running Current	A	0.90	0.77	0.68	0.96


Bypass factor And Coefficient For Correcting

Capacity according to Air volume change


Bypass factor. (B.F.)

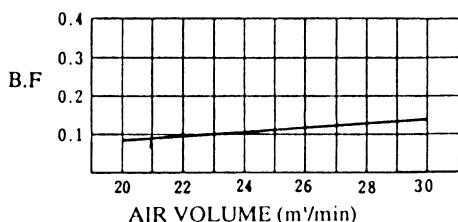

Coefficient For Correcting Cooling Capacity

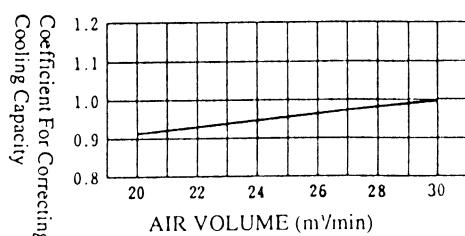

Coefficient For Correcting Heating Capacity

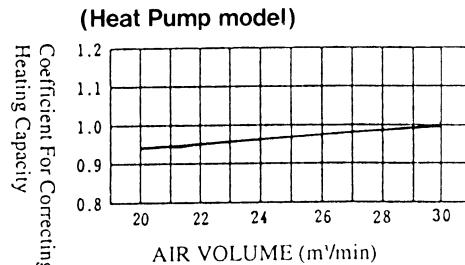


- CS-160U32JP

ITEM \ Model	Indoor Unit			Outdoor Unit	
	CS-160U32JP			CU-160C53XP	
Mode	Hi	Me	Lo	Hi	
Air Volume	m ³ /min	34	29	24	95
Power Consumption	kW	0.22	0.17	0.15	0.24
Fan Speed	r/min	690	620	570	880
Running Current	A	1.05	0.90	0.80	1.08


Bypass factor And Coefficient For Correcting

Capacity according to Air volume change


Bypass factor. (B.F.)

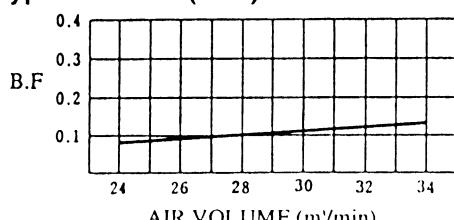

Coefficient For Correcting Cooling Capacity

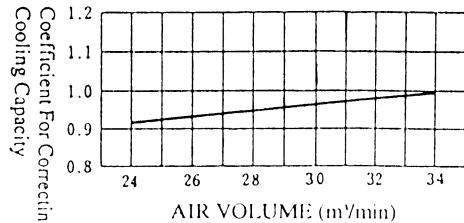

Coefficient For Correcting Heating Capacity

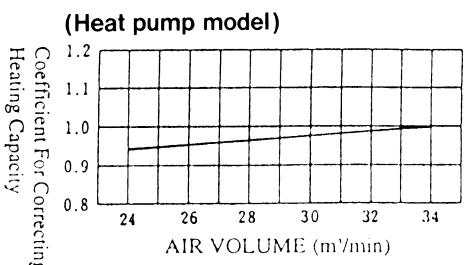

12. SAFETY DEVICE

● INDOOR UNIT

Indoor unit		Model	CS-40U32JP	CS-50U32JP	CS-71U32JP	CS-71U32JP	CS-80U32JP	CS-80U32JP	CS-112U32JP	CS-140U32JP	CS-160U32JP
For fan motor protection											
Internal protector(49F)	OFF	°C	135	135	135	135	135	135	135	135	135
	ON	°C	86	86	88	88	86	86	86	86	86
For control protection											
Fuse	CUT	A	3	3	3	3	3	3	3	3	3

● OUTDOOR UNIT

Outdoor unit	Heat pump model		Model	CU-40C52HP	CU-50C52HP	CU-71C52HP	CU-71C52XP	CU-80C52HP	CU-80C52XP	CU-112C52XP	CU-140C52HP	CU-160C52HP
	Cooling only model			CU-40C02HP	CU-50C02HP	CU-71C02HP	CU-71C02XP	CU-80C02HP	CU-80C02XP	CU-112C02XP	CU-140C03XP	CU-160C03XP
For refrigerant cycle												
High pressure switch(63H1)	OFF	*MPa	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
	ON	*MPa	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
For refrigerant cycle												
low pressure switch(63L)	OFF	*MPa	—	—	—	—	—	—	—	—	—	0
	ON	*MPa	—	—	—	—	—	—	—	—	—	0.7
For compressor												
Over current protector(CT)	OFF	A	12	13	19	9	20	9	10	11	13	
	RESET	—	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic	Automatic	
Discharge temp. protection												
Discharge temperature thermistor(Th1)	Compressor OFF	°C	115	115	115	115	115	115	120	120	120	
	Discharge temp. control											
Discharge temperature thermistor(Th1)	Magnetic valve ON	°C	100	100	100	100	100	100	100	100	100	
	Magnetic valve OFF	°C	70	70	70	70	70	70	70	70	70	
Liquid compress protection												
Crankcase heater	—	W	25	25	37	37	37	37	37	41	41	
Internal protector												
wind temperature	OFF	°C	—	160	170	—	165	—	135	—	—	
	ON	°C	—	90	110	—	102	—	61	—	—	
Trip time				5~15sec(38A)			10~20sec(50A)		3~10sec(40A)	—	—	
For fan motor protection												
Internal protector(49F)	OFF	°C	135	135	135	135	135	135	135	135	135	
	ON	°C	86	86	86	86	86	86	86	86	86	
Heating control (Heat pump model only)												
Pressure switch (Fan speed)(63H2)	OFF	*MPa	2.35	2.35	2.35	2.35	2.35	2.35	2.35	2.35	2.35	
	ON	*MPa	1.96	1.96	1.96	1.96	1.96	1.96	1.96	1.96	1.96	
Cooling control												
Heat exchanger outlet temp thermistor(Th2)	Control method		Th ≥ 30 °C — High speed Th < 30 °C — 5 speed step control									
For control protection												
Fuse	CUT	A	10	10	10	10	10	10	10	10	10	

*1MPa = 10.2kg/cm²

13.COMPONENT SPECIFICATION

COMPONENT SPECIFICATION


Unit Model	(Heat pump model)	CS-40U32JP	CS-50U32JP	CS-71U32JP	CS-71U32JP	CS-80U32JP	CS-80U32JP	CS-112U32JP	CS-140U32JP	CS-160U32JP
	(Cooling only model)	CU-40C02HP	CU-50C02HP	CU-71C02HP	CU-71C02XP	CU-80C02HP	CU-80C02XP	CU-112C02XP	CU-140C03XP	CU-160C03XP
Compressor Model		2KS25D5BA0.2	2K32C225A1B	NH-41VND	NH-41YDA	NH-44VND	NH-44YDA	ZR-45KC-TFD	NM-S0502HU5	JT170BC-YE
Compressor Type				ROTARY					SCROLL	
No. of Cylinders		1	1	1	1	1	1	1	1	1
Revolution	50Hz	rpm	2,850	2,850	2,900	2,900	2,900	2,900	2,900	2,900
Piston Displacement	50Hz	m³/h	4.31	5.37	7.27	7.27	7.73	7.73	10.73	13.95
Motor Type										
Starting Method										
Rated Output		kW	1.2	1.5	1.9	1.9	2.0	2.0	2.8	3.75
Poles			2	2	2	2	2	2	2	2
Insulation Class			E	E	E	E	E	E	E	E
Oil Type			ATMOS	M60		DIAMOND	M.S32 (N-1)		SONTEX 200LT	SUNISO 4GSDI-HT
Charge	*		0.65	0.67	1.3	1.3	1.3	1.3	1.24	1.8
Evaporator										1.6

Models		CS-40U32JP	CS-50U32JP	CS-71U32JP	CS-71U32JP	CS-80U32JP	CS-80U32JP	CS-112U32JP	CS-140U32JP	CS-160U32JP	
Tube Material		Copper tube									
Outer Diameter		mm	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	
Thickness		mm	0.27	0.27	0.27	0.27	0.27	0.27	0.25	0.25	
Row			2	2	2	2	2	3	3	3	
No. of Tubes/Row			10	10	12	12	12	12	12	12	
Fin Material		Aluminium									
Thickness		mm	0.11	0.11	0.11	0.11	0.11	0.11	0.11	0.11	
Fin Pitch		No./inch	21	17	17	17	17	17	17	19	
Fin Surface			Z Slit fin	Z Slit fin	Z Slit fin	Z Slit fin	Z Slit fin	Z Slit fin	Z Slit fin	Z Slit fin	
Total Face Area		m²	0.281	0.298	0.298	0.298	0.393	0.393	0.381	0.477	
Fan Type			Turbo Fan								
No./Unit			1	1	1	1	1	1	1	1	
Fan Motor			Direct On-Line Starting								
Starting Method											
Rated Output		kW	0.035	0.035	0.035	0.035	0.035	0.035	0.045	0.08	0.08
Poles			6	6	6	6	6	6	6	6	
Phase			Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase	
Insulation Class			E	E	E	E	E	E	E	E	
Condenser											


Models		(Heat pump model)	CU-40C52HP	CU-50C52HP	CU-71C52HP	CU-71C52XP	CU-80C52HP	CU-80C52XP	CU-112C52XP	CU-140C52XP	CU-160C52XP
		(Cooling only model)	CU-40C02HP	CU-50C02HP	CU-71C02HP	CU-71C02XP	CU-80C02HP	CU-80C02XP	CU-112C02XP	CU-140C03XP	CU-160C03XP
Tube Material			Copper tube								
Outer Diameter		mm	9.5	9.5	9.52	9.52	9.52	9.52	9.52	9.52	9.52
Thickness		mm	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3	0.3
Row			2	2	2	2	2	2	2	2	2
No. of Tubes/Row			24	24	34	34	34	34	46	46	46
Fin Material			Aluminium								
Thickness		mm	0.105	0.105	0.105	0.105	0.105	0.105	0.105	0.105	0.105
Fin Pitch		No./inch	14	14	12	12	12	12	14	14	14
Fin Surface			AX-Louver fin	AX-Louver fin	AX-Louver fin	AX-Louver fin	AX-Louver fin	AX-Louver fin	X-Louver fin	X-Louver fin	X-Louver fin
Total Face Area		m²	0.393	0.393	0.635	0.635	0.635	0.635	0.859	1.092	1.092
Fan Type			Prop Fan								
No./Unit			1	1	1	1	1	1	2	2	2
Fan Motor			Direct On-Line Starting								
Starting Method											
Rated Output		kW	0.035	0.035	0.05	0.05	0.05	0.05	0.05 X 2	0.05 X 2	0.055 X 2
Poles			6	6	6	6	6	6	6	6	6
Phase			Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase	Single-Phase
Insulation Class			E	E	E	E	E	E	E	E	E

■ COOLING CAPACITY CURVE, COOLING POWER CONSUMPTION CURVE

• COOLING CAPACITY CURVE

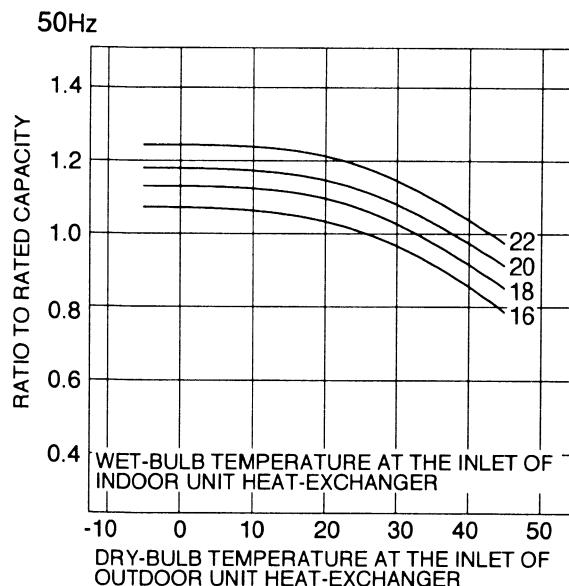

• COOLING POWER CONSUMPTION CURVE

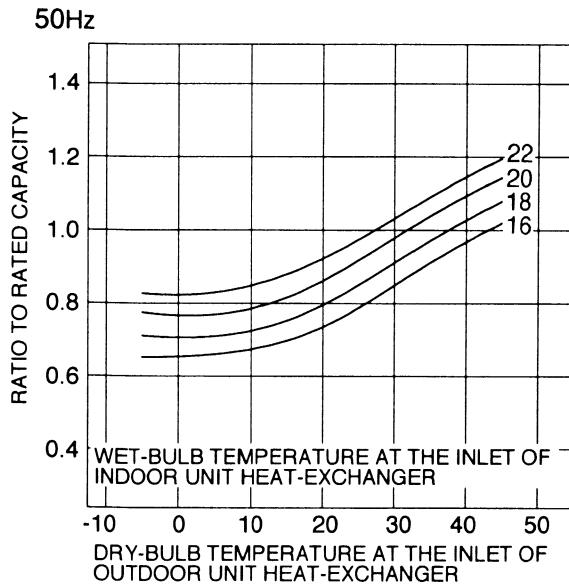

● RATED COOLING CAPACITY, RATED COOLING POWER CONSUMPTION

MODEL	RATED COOLING STANDARD	
	CAPACITY(kW)	POWER CONSUMPTION(kW)
CS-40U32JP/CU-40C52HP	3.60	1.61
CS-50U32JP/CU-50C52HP	5.20	1.87
CS-71U32JP/CU-71C52HP	6.50	2.50
CS-71U32JP/CU-71C52XP	6.50	2.50
CS-80U32JP/CU-80C52HP	7.30	2.73
CS-80U32JP/CU-80C52XP	7.30	2.73
CS-112U32JP/CU-112C52XP	10.45	3.40
CS-140U32JP/CU-140C53XP	13.00	4.59
CS-160U32JP/CU-160C53XP	14.50	4.93
CS-40U32JP/CU-40C02HP	3.60	1.61
CS-50U32JP/CU-50C02HP	5.20	1.87
CS-71U32JP/CU-71C02HP	6.50	2.50
CS-71U32JP/CU-71C02XP	6.50	2.50
CS-80U32JP/CU-80C02HP	7.30	2.73
CS-80U32JP/CU-80C02XP	7.30	2.73
CS-112U32JP/CU-112C02XP	10.45	3.40
CS-140U32JP/CU-140C03XP	13.00	4.59
CS-160U32JP/CU-160C03XP	14.50	4.93

• Calculation of actual cooling capacity and power consumption

Example

CS-80U32JP/CU-80C52XP

- Calculation of the actual cooling capacity and power consumption for the following cooling conditions: Indoor temperature of 18°C (wet-bulb temperature) and outdoor temperature of 40°C (dry-bulb temperature).

Calculation method

- Find the cooling capacity ratio and power consumption ratio from the cooling capacity graph and power consumption graph for model CS-80U32JP/CU-80C52XP

① The cooling capacity ratio indicated at the intersection between an outdoor unit heat exchanger inlet air temperature of 40°C on the horizontal axis and an indoor unit heat exchanger inlet temperature of 18°C is 0.90.

② The cooling power consumption ratio from the same intersection on the power consumption graph is 1.04.


- Thus,

$$\begin{aligned} \text{Actual cooling capacity} &= \text{cooling capacity ratio} \times \text{rated cooling capacity} \\ &= 0.90 \times 7.30 = 6.57(\text{kW}) \end{aligned}$$


$$\begin{aligned} \text{Actual cooling power consumption} &= \text{cooling power consumption ratio} \times \\ &\quad \text{rated power consumption} \\ &= 1.04 \times 2.73 = 2.84(\text{kW}) \end{aligned}$$

■ HEATING CAPACITY CURVE, HEATING POWER CONSUMPTION CURVE (HEAT PUMP MODEL ONLY)

• HEATING CAPACITY CURVE

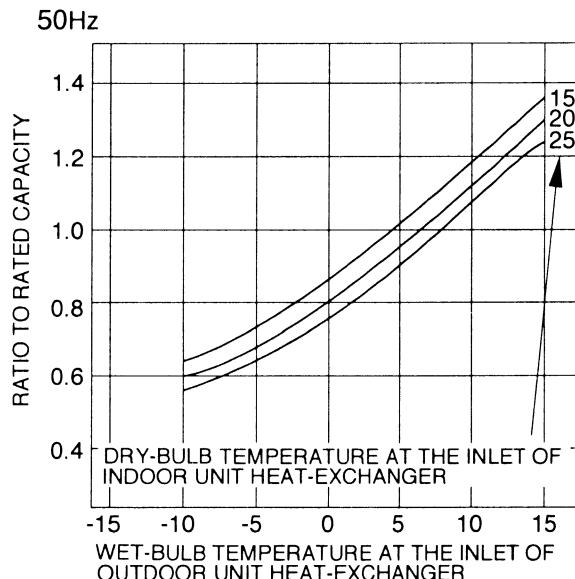

• HEATING POWER CONSUMPTION CURVE

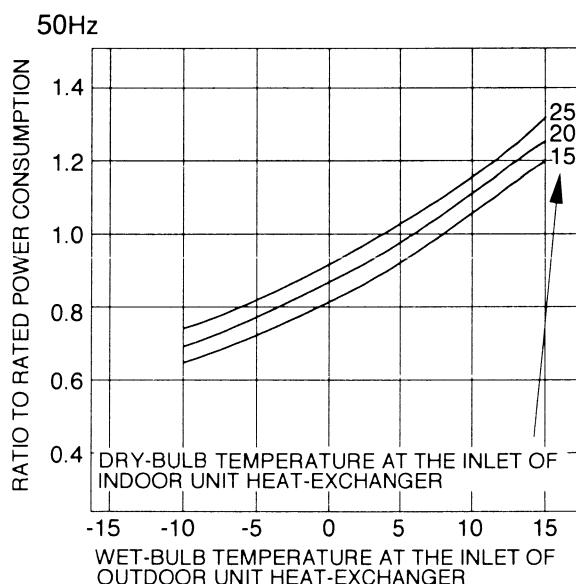

● RATED HEATING CAPACITY, RATED HEATING POWER CONSUMPTION

MODEL	RATED HEATING STANDARD	
	CAPACITY(kW)	POWER CONSUMPTION(kW)
CS-40U32JP/CU-40C52HP	4.05	1.50
CS-50U32JP/CU-50C52HP	5.55	1.82
CS-71U32JP/CU-71C52HP	6.95	2.37
CS-71U32JP/CU-71C52XP	6.95	2.37
CS-80U32JP/CU-80C52HP	7.75	2.49
CS-80U32JP/CU-80C52XP	7.75	2.49
CS-112U32JP/CU-112C52XP	11.15	3.40
CS-140U32JP/CU-140C53XP	14.15	4.10
CS-160U32JP/CU-160C53XP	15.70	4.85


<Precautions on using capacity and electrical characteristics curves>

- Heating capacity when the unit is frosted over or while being defrosted will vary depending on outdoor temperature ('CWB) and the amount of frost. Heating capacity performance must be compensated because it does not take into account the capacity drop incurred when the unit is frosted over and while it is being defrosted. Therefore, to obtain the integral heating capacity in consideration of overfrosting and defrost operations, heating capacity must be multiplied by the compensation coefficient below.

- Heating capacity compensation coefficient for heating in frosted situations

Wet-bulb temperature at inlet of outdoor unit heat exchanger ('CWB)	-10	-8	-6	-4	-2	0	1	2	4	6
Heating capacity compensation coefficient	0.93	0.93	0.92	0.89	0.87	0.86	0.87	0.89	0.95	1.0


* 1
Integral heating capacity = (Heating capacity by heating capacity performance) × (Heating capacity compensation coefficient) <kW>

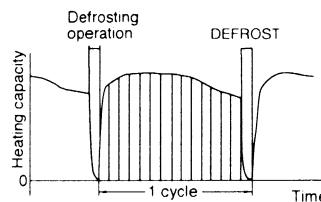

* 1
Integral heating capacity is obtained by integrating the capacity consumed in 1 defrost cycle into the normal heating capacity, and calculating this value as an hourly figure. One defrost cycle is determined as the time from when a defrost operation stops (heating starts) until the next heating operation starts (see figure on left).


■ SATURATION TEMPERATURE OF DISCHARGE AND SUCTION PRESSURE

- Commonness TO THE ALL MODEL
- SATURATION TEMPERATURE OF DISCHARGE AND SUCTION PRESSURE

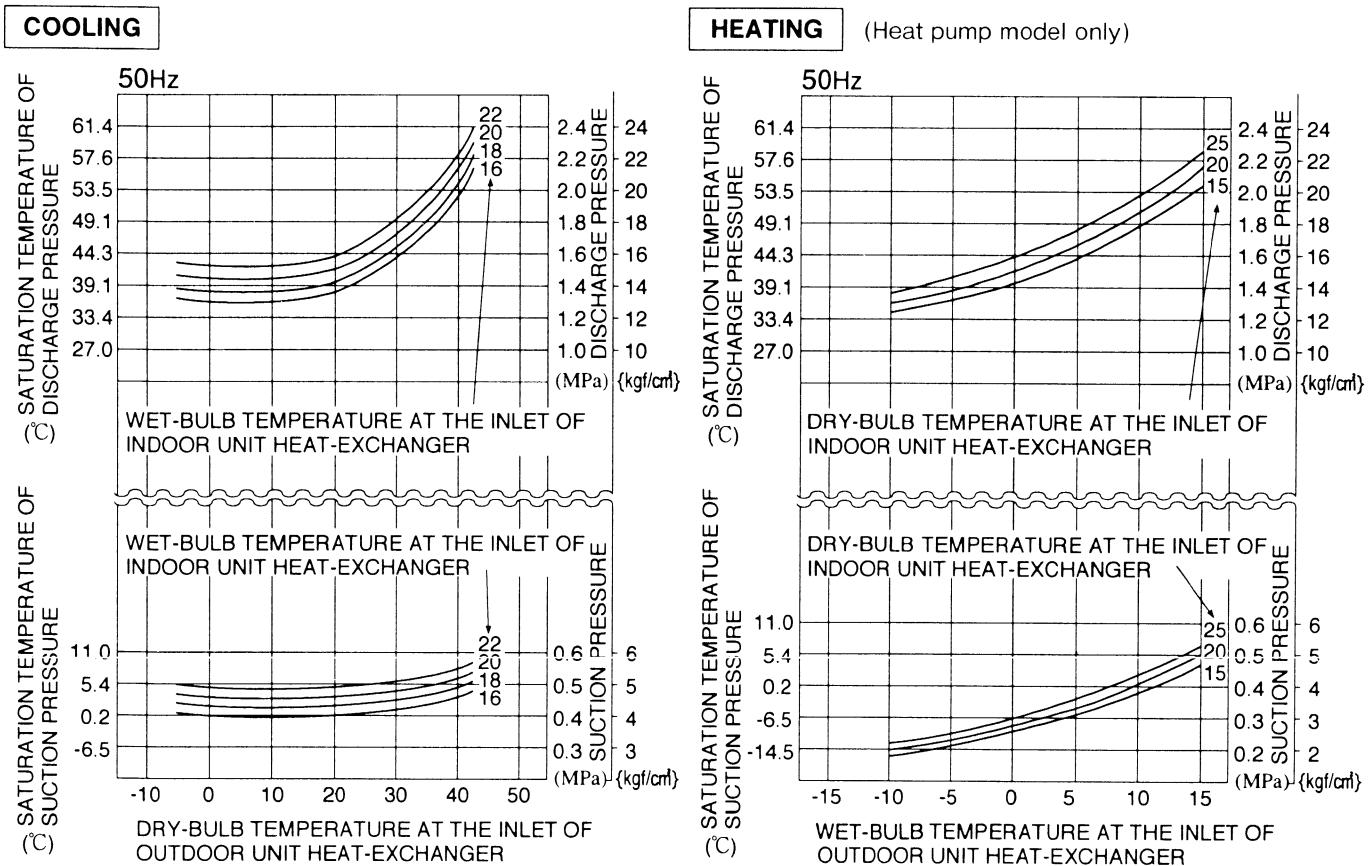


16. POSITION OF THE CENTER GRAVITY

40C ~ 80C

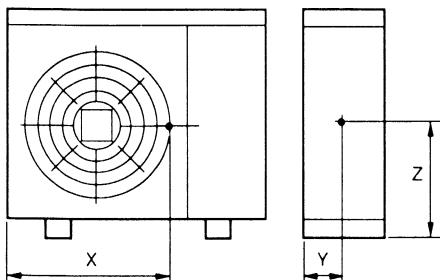

112C ~ 160C

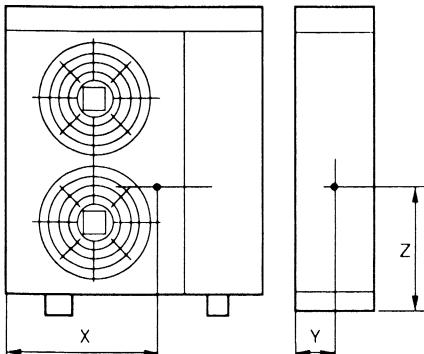

MODEL NAME	OUTSIDE DIMENSIONS			NET WEIGHT kg	CENTER OF GRAVITY		
	WIDTH	DEPTH	HEIGHT		X	Y	Z
CU-40C52HP	770	300	640	49	540	160	270
CU-50C52HP	770	300	640	52	540	160	270
CU-71C52HP	900	320	900	71	560	160	360
CU-71C52XP	900	320	900	71	560	160	360
CU-80C52HP	900	320	900	73	580	160	340
CU-80C52XP	900	320	900	73	580	160	340
CU-112C52XP	900	320	1220	98	590	160	460
CU-140C53XP	1100	320	1220	112	720	160	460
CU-160C53XP	1100	320	1220	118	720	160	460
CU-40C02HP	770	300	640	47	540	160	270
CU-50C02HP	770	300	640	50	540	160	270
CU-71C02HP	900	320	900	68	560	160	360
CU-71C02XP	900	320	900	68	560	160	360
CU-80C02HP	900	320	900	70	580	160	340
CU-80C02XP	900	320	900	70	580	160	340
CU-112C02XP	900	320	1220	95	590	160	460
CU-140C03XP	1100	320	1220	109	720	160	460
CU-160C03XP	1100	320	1220	115	720	160	460

17. REACHING DISTANCE


REACHING DISTANCE

- CS-40U32JP, CS-50U32J


>1.0m/s >0.5m/s >0.3m/s

<COOLING> (ANGLE AT OUTLET 10° • AIR TEMPERATURE AT OUTLET 13°)


(HIGH SPEED)
(VELOCITY AT OUTLET 4.2m/S)

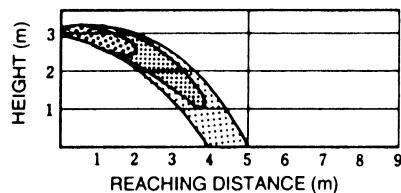

(MIDDLE SPEED)
(VELOCITY AT OUTLET 3.9m/S)

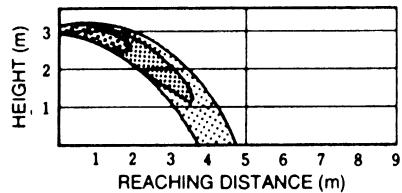


(LOW SPEED)
(VELOCITY AT OUTLET 3.2m/S)

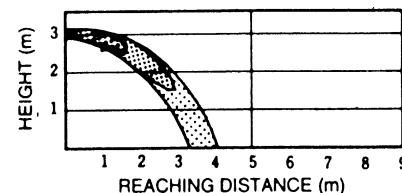


<HEATING> (ANGLE AT OUTLET 70° • AIR TEMPERATURE AT OUTLET 40°) [HEAT PUMP MODEL]


(HIGH SPEED)
(VELOCITY AT OUTLET 4.2m/S)

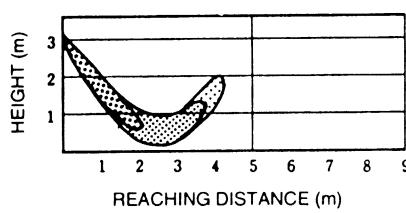

(MIDDLE SPEED)
(VELOCITY AT OUTLET 3.9m/S)

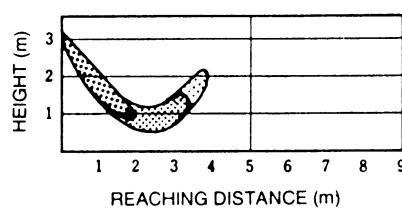


(LOW SPEED)
(VELOCITY AT OUTLET 3.3m/S)

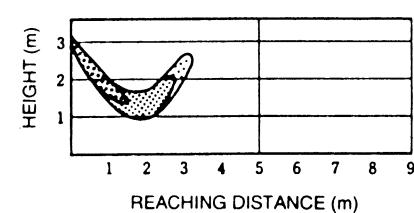


- CS-71U32JP

<COOLING> (ANGLE AT OUTLET 10° • AIR TEMPERATURE AT OUTLET 13°)


(HIGH SPEED)
(VELOCITY AT OUTLET 5.5m/S)

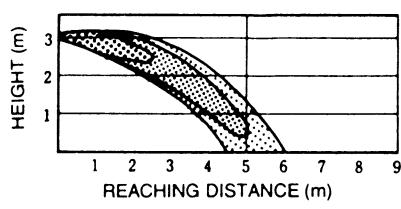

(MIDDLE SPEED)
(VELOCITY AT OUTLET 4.9m/S)

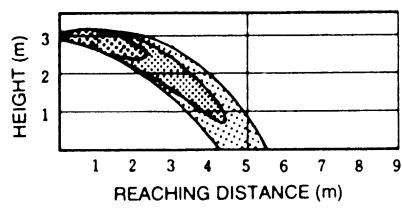


(LOW SPEED)
(VELOCITY AT OUTLET 4.2m/S)

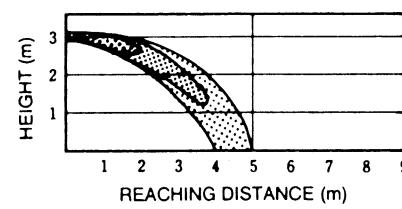


<HEATING> (ANGLE AT OUTLET 70° • AIR TEMPERATURE AT OUTLET 40°) [HEAT PUMP MODEL]


(HIGH SPEED)
(VELOCITY AT OUTLET 5.5m/S)

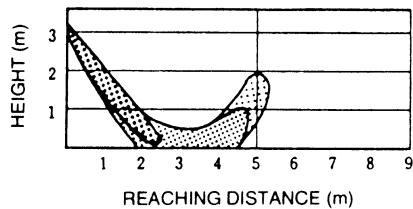

(MIDDLE SPEED)
(VELOCITY AT OUTLET 4.9m/S)

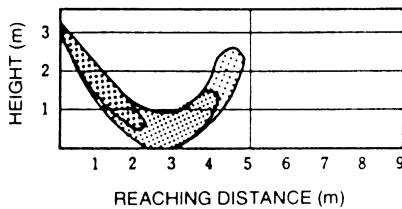

(LOW SPEED)
(VELOCITY AT OUTLET 4.2m/S)

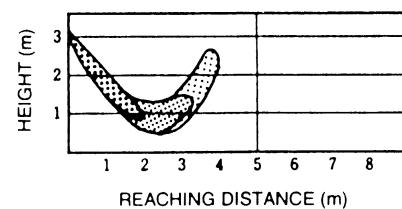

17. REACHING DISTANCE

● CS-80U32JP

<COOLING> (ANGLE AT OUTLET 10° • AIR TEMPERATURE AT OUTLET 13°)

(HIGH SPEED)




(VELOCITY AT OUTLET 5.7m/S)

(MIDDLE SPEED)

(VELOCITY AT OUTLET 5.4m/S)

(LOW SPEED)

(VELOCITY AT OUTLET 4.7m/S)

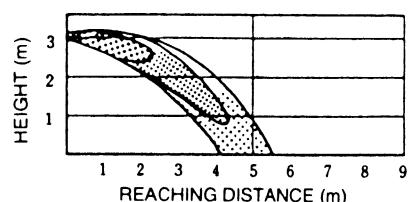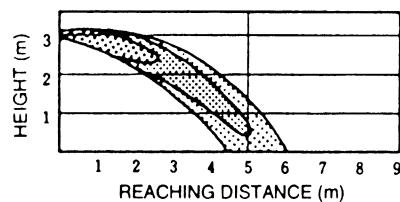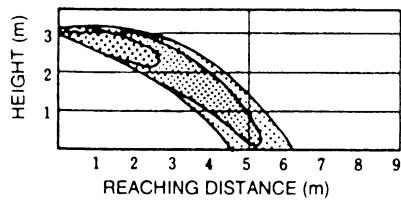

<HEATING> (ANGLE AT OUTLET 70° • AIR TEMPERATURE AT OUTLET 40°) [HEAT PUMP MODEL]

(HIGH SPEED)




(VELOCITY AT OUTLET 5.7m/S)

(MIDDLE SPEED)

(VELOCITY AT OUTLET 5.4m/S)

(LOW SPEED)

(VELOCITY AT OUTLET 4.7m/S)

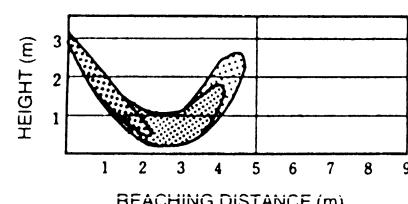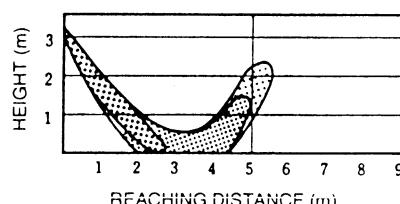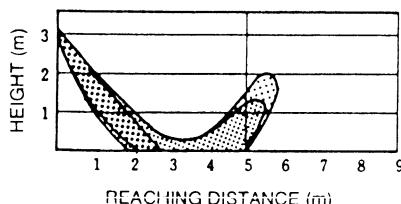

● CS-112U32JP

<COOLING> (ANGLE AT OUTLET 10° • AIR TEMPERATURE AT OUTLET 13°)

(HIGH SPEED)




(VELOCITY AT OUTLET 5.9m/S)

(MIDDLE SPEED)

(VELOCITY AT OUTLET 5.4m/S)

(LOW SPEED)

(VELOCITY AT OUTLET 4.9m/S)

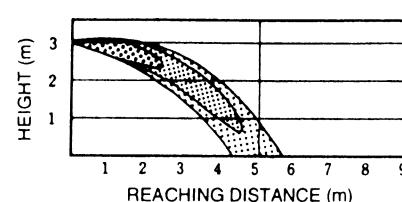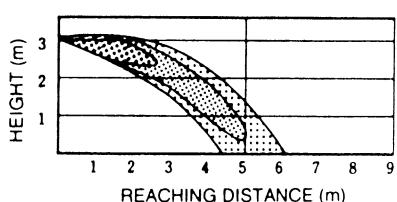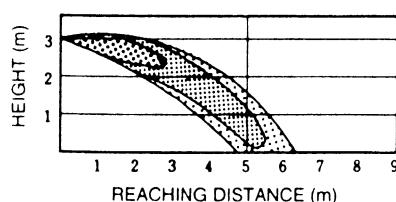

<HEATING> (ANGLE AT OUTLET 70° • AIR TEMPERATURE AT OUTLET 40°) [HEAT PUMP MODEL]

(HIGH SPEED)




(VELOCITY AT OUTLET 5.9m/S)

(MIDDLE SPEED)

(VELOCITY AT OUTLET 5.4m/S)

(LOW SPEED)

(VELOCITY AT OUTLET 4.9m/S)

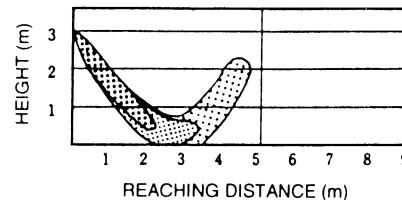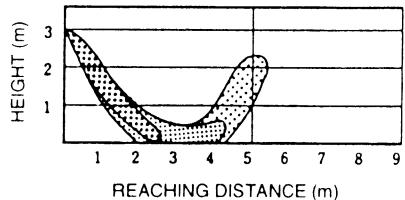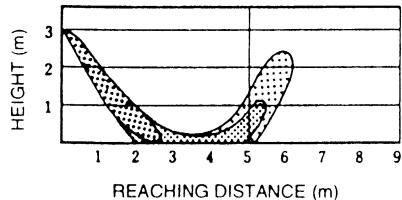

17. REACHING DISTANCE

● CS-80U32JP

<COOLING> (ANGLE AT OUTLET 10° • AIR TEMPERATURE AT OUTLET 13°)

(HIGH SPEED)




(VELOCITY AT OUTLET 5.7m/S)

(MIDDLE SPEED)

(VELOCITY AT OUTLET 5.4m/S)

(LOW SPEED)

(VELOCITY AT OUTLET 4.7m/S)

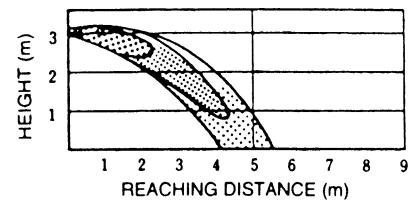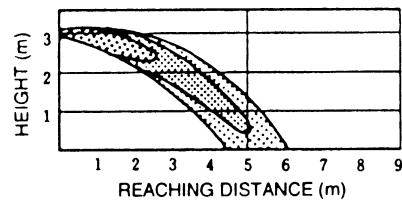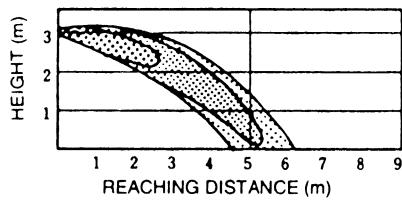

<HEATING> (ANGLE AT OUTLET 70° • AIR TEMPERATURE AT OUTLET 40°) [HEAT PUMP MODEL]

(HIGH SPEED)




(VELOCITY AT OUTLET 5.7m/S)

(MIDDLE SPEED)

(VELOCITY AT OUTLET 5.4m/S)

(LOW SPEED)

(VELOCITY AT OUTLET 4.7m/S)

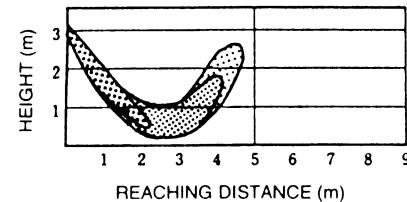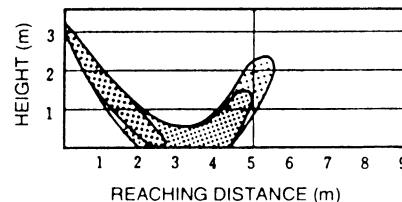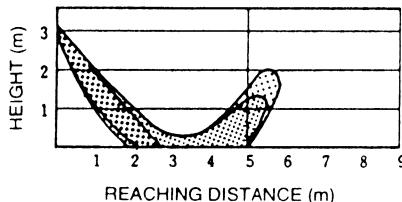

● CS-112U32JP

<COOLING> (ANGLE AT OUTLET 10° • AIR TEMPERATURE AT OUTLET 13°)

(HIGH SPEED)




(VELOCITY AT OUTLET 5.9m/S)

(MIDDLE SPEED)

(VELOCITY AT OUTLET 5.4m/S)

(LOW SPEED)

(VELOCITY AT OUTLET 4.9m/S)

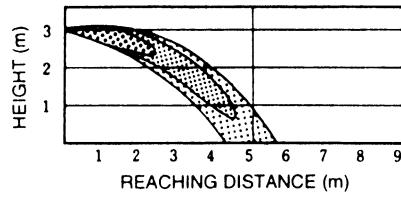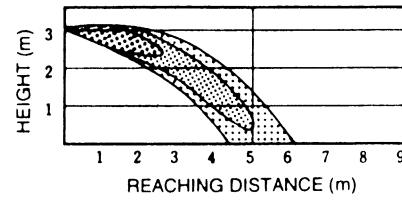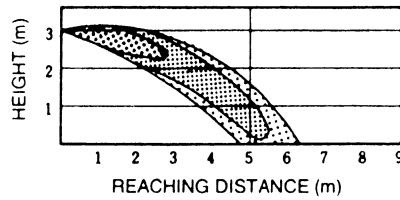

<HEATING> (ANGLE AT OUTLET 70° • AIR TEMPERATURE AT OUTLET 40°) [HEAT PUMP MODEL]

(HIGH SPEED)




(VELOCITY AT OUTLET 5.9m/S)

(MIDDLE SPEED)

(VELOCITY AT OUTLET 5.4m/S)


(LOW SPEED)

(VELOCITY AT OUTLET 4.9m/S)

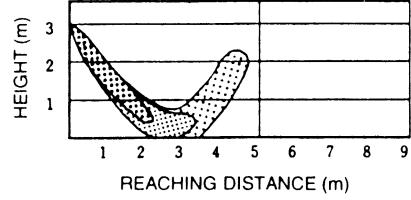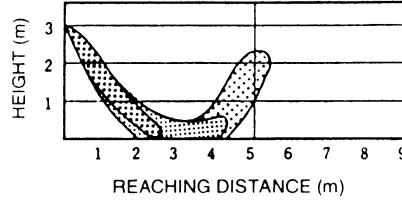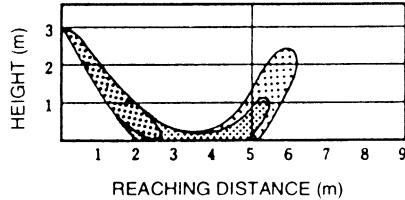


18. SOUND DATA


CS-40U32JP
(Hi speed)

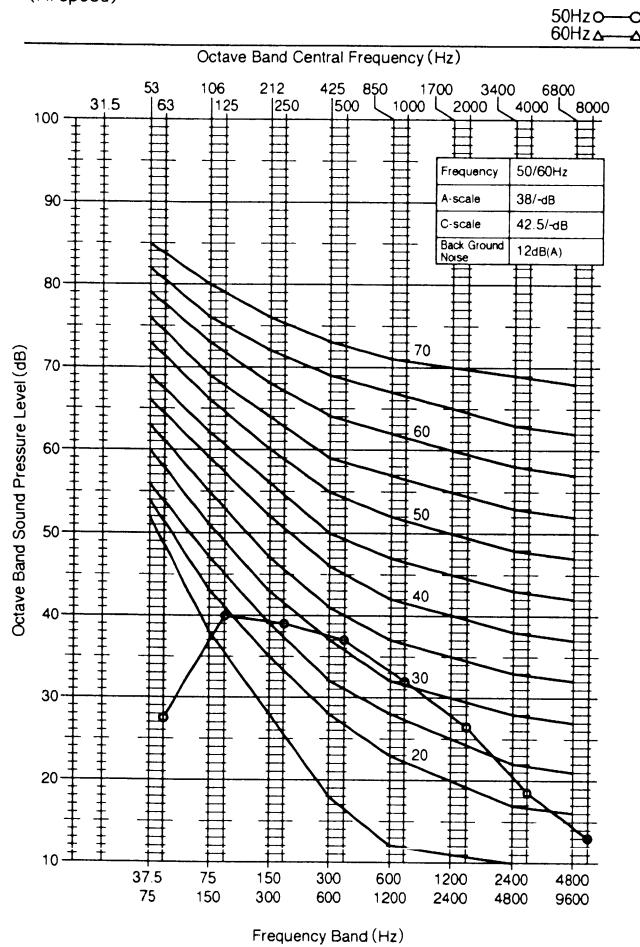


CS-50U32JP
(Hi speed)

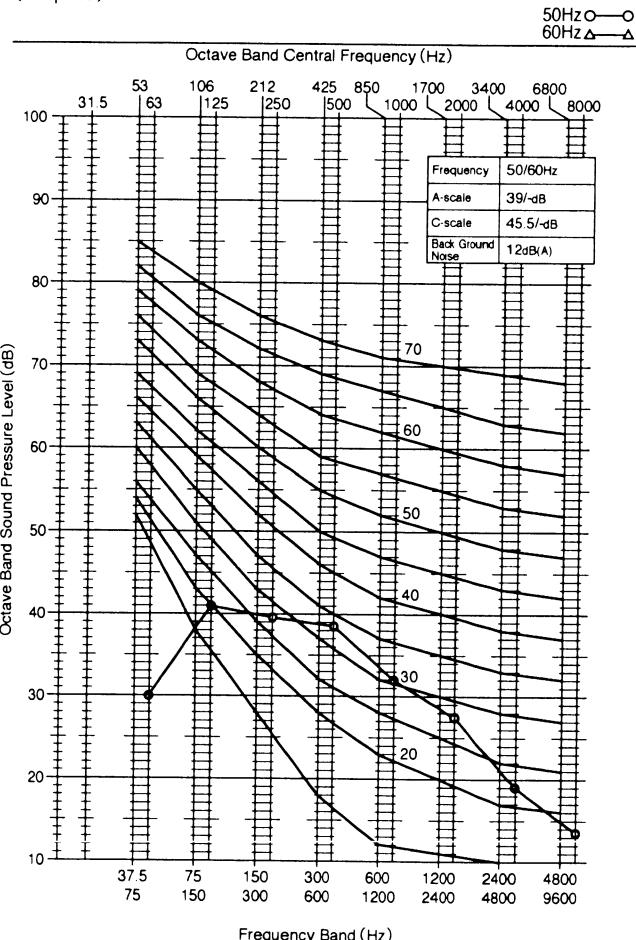

CS-40U32JP
(Low speed)

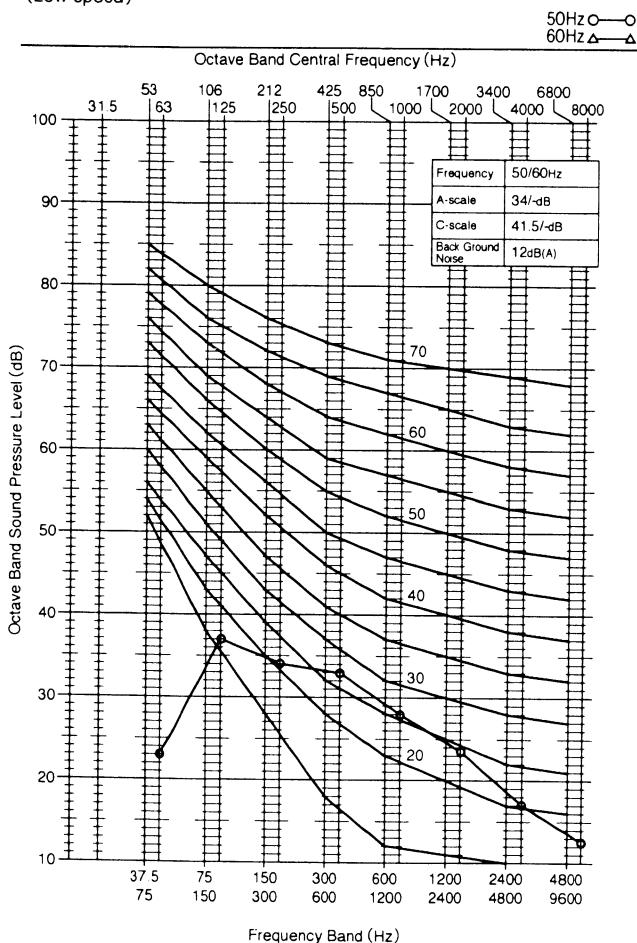


CS-50U32JP
(Low speed)

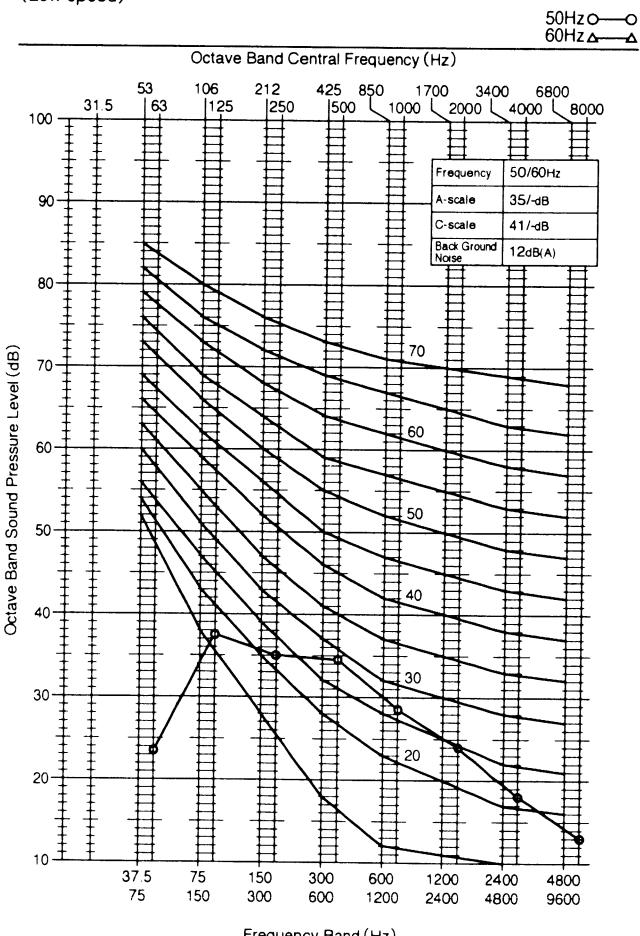


18. SOUND DATA


CS-71U32JP, CS-80U32JP
(Hi speed)

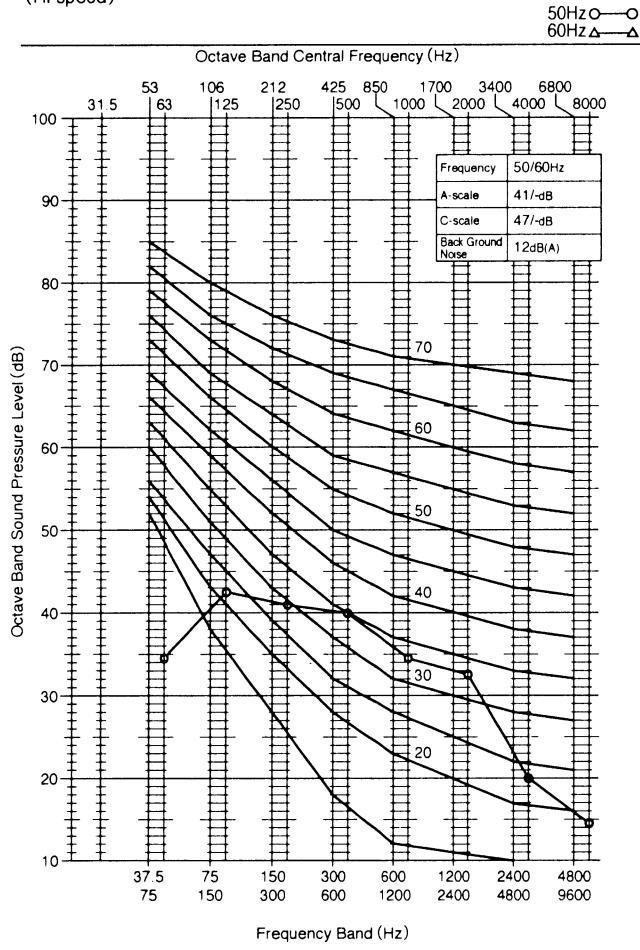


CS-112U32JP
(Hi speed)

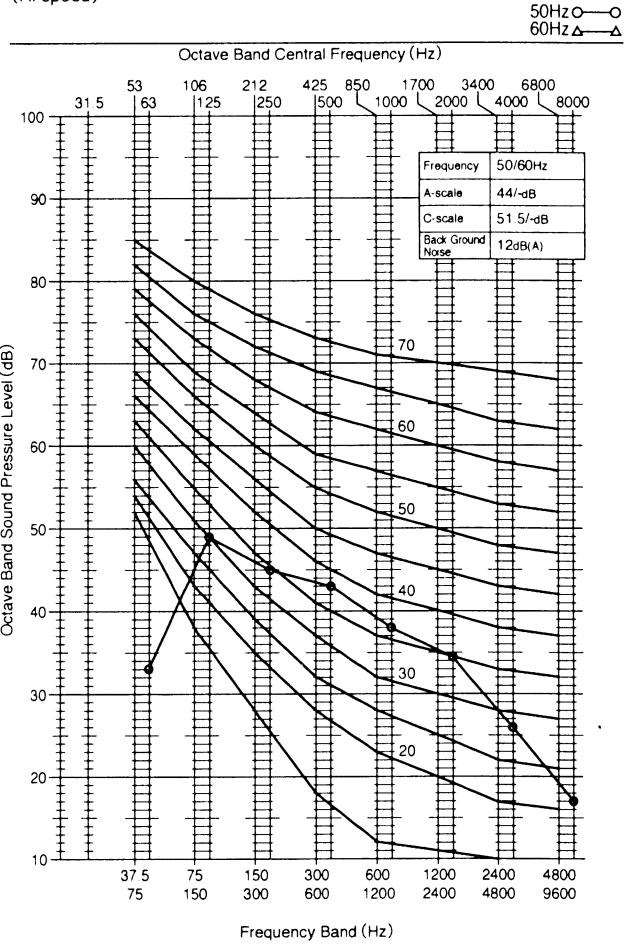

CS-71U32JP, CS-80U32JP
(Low speed)

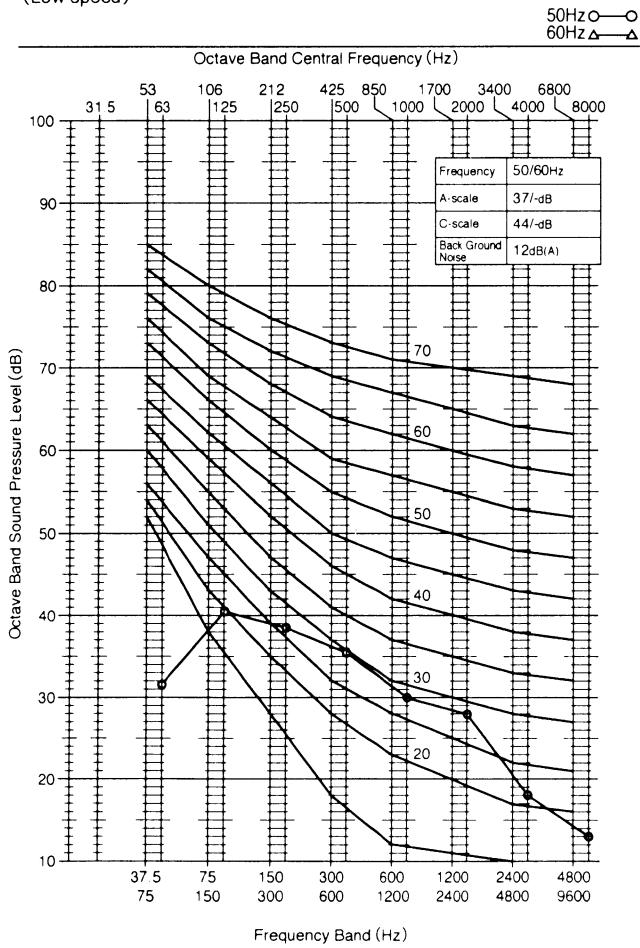


CS-112U32JP
(Low speed)

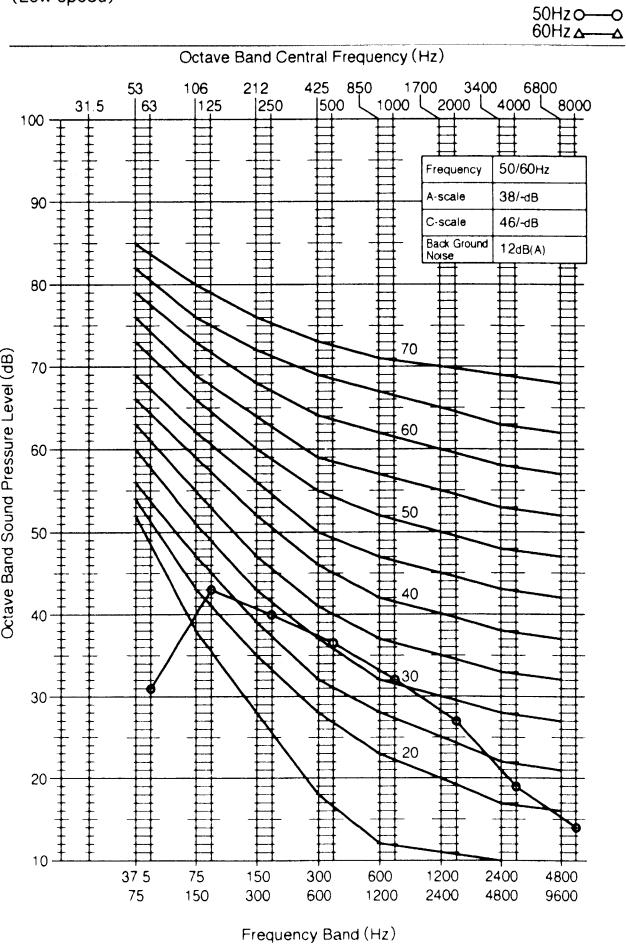


18. SOUND DATA


CS-140U32JP
(Hi speed)

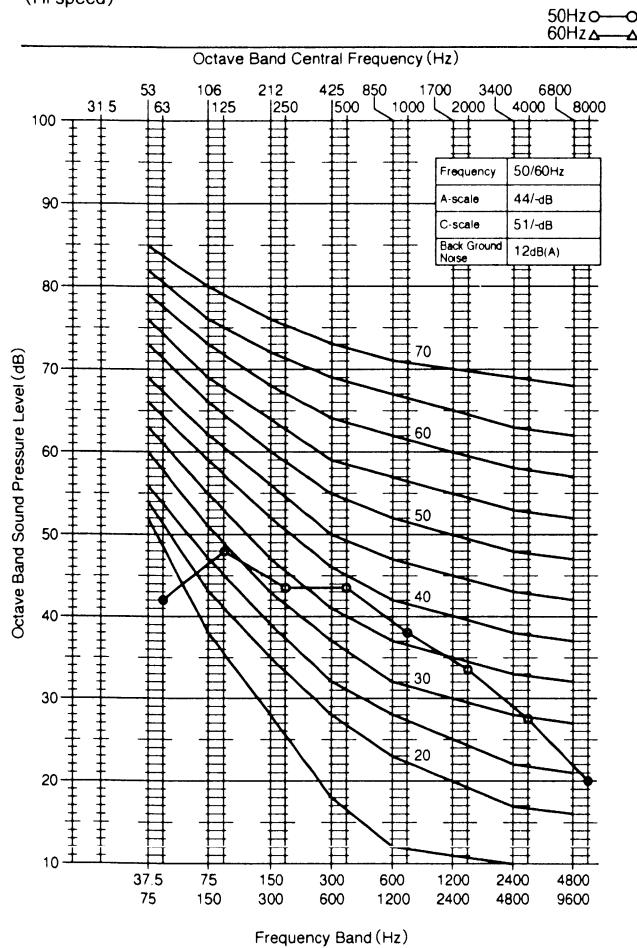


CS-160U32JP
(Hi speed)

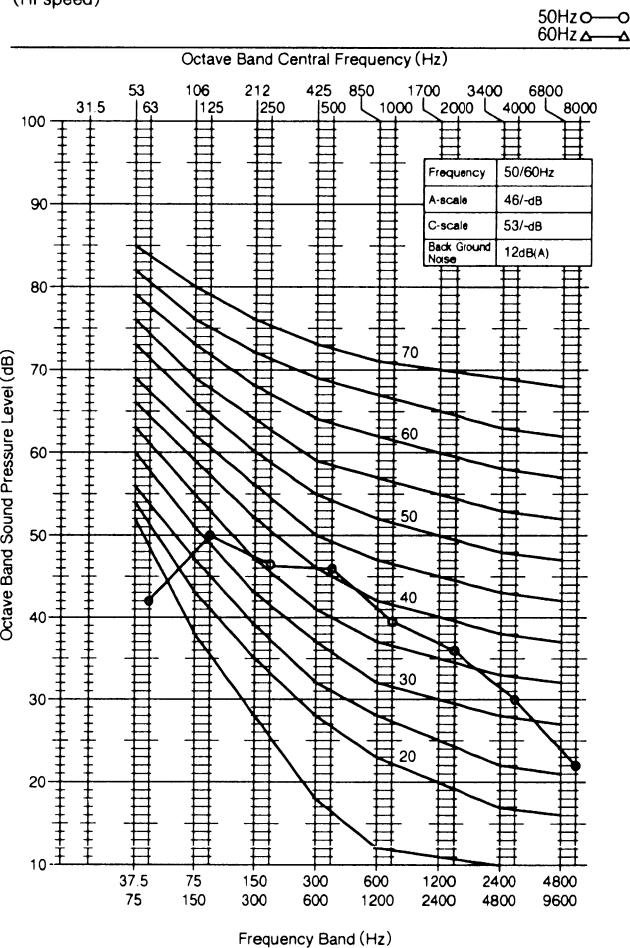

CS-140U32JP
(Low speed)

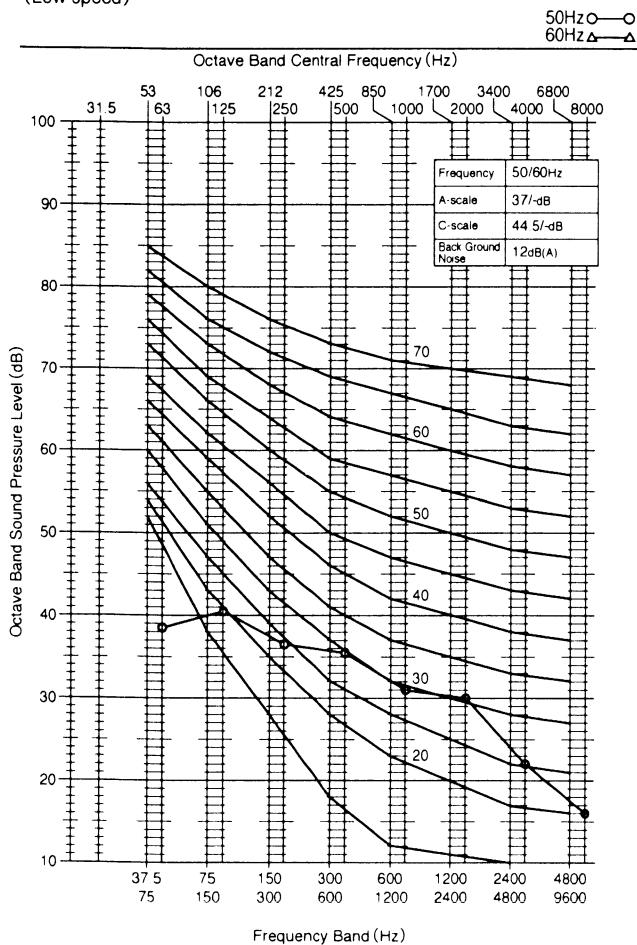


CS-160U32JP
(Low speed)

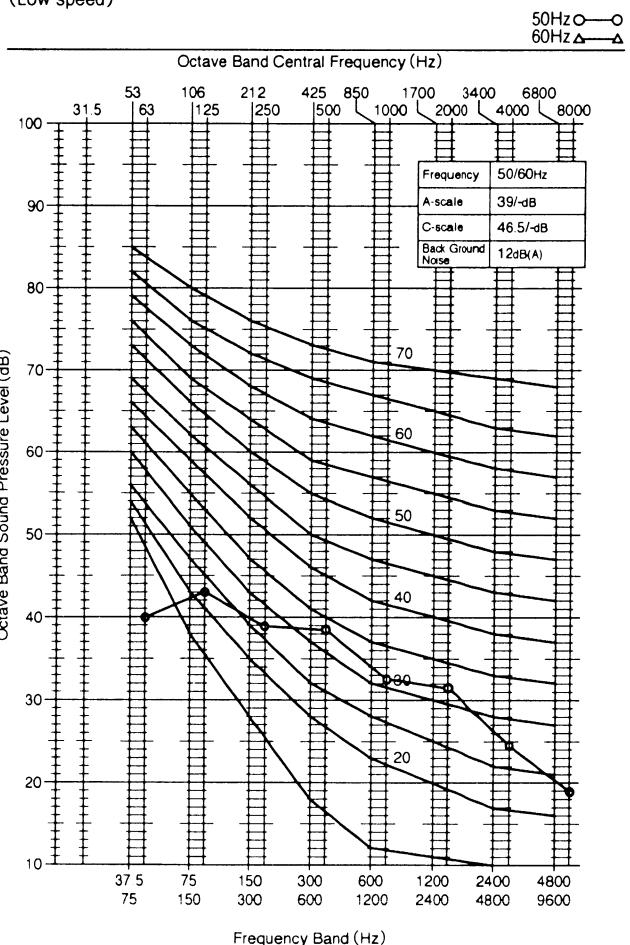


18. SOUND DATA


CU-40C52HP, CU-40C02HP
(Hi speed)

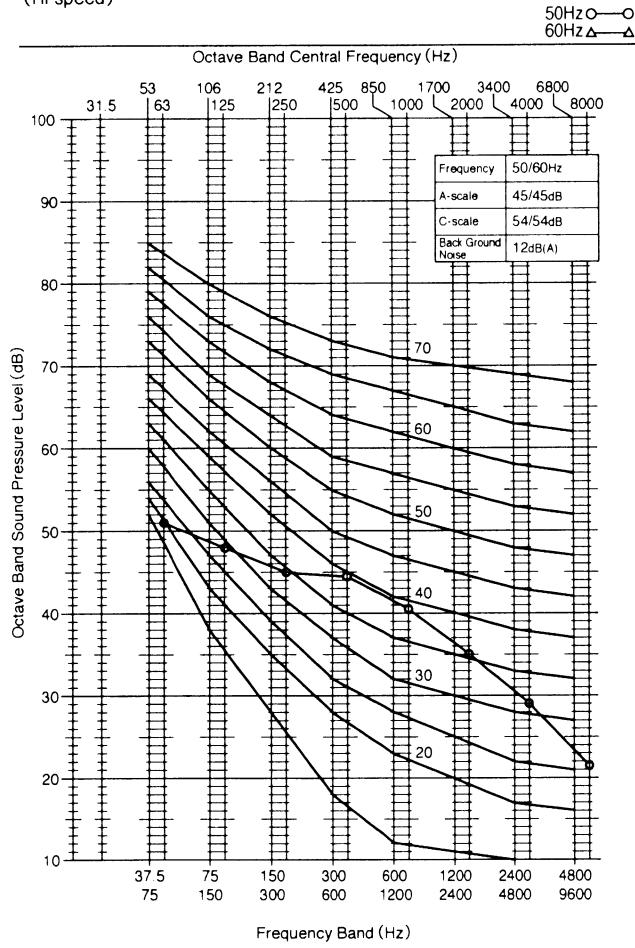


CU-50C52HP, CU-50C02HP
(Hi speed)

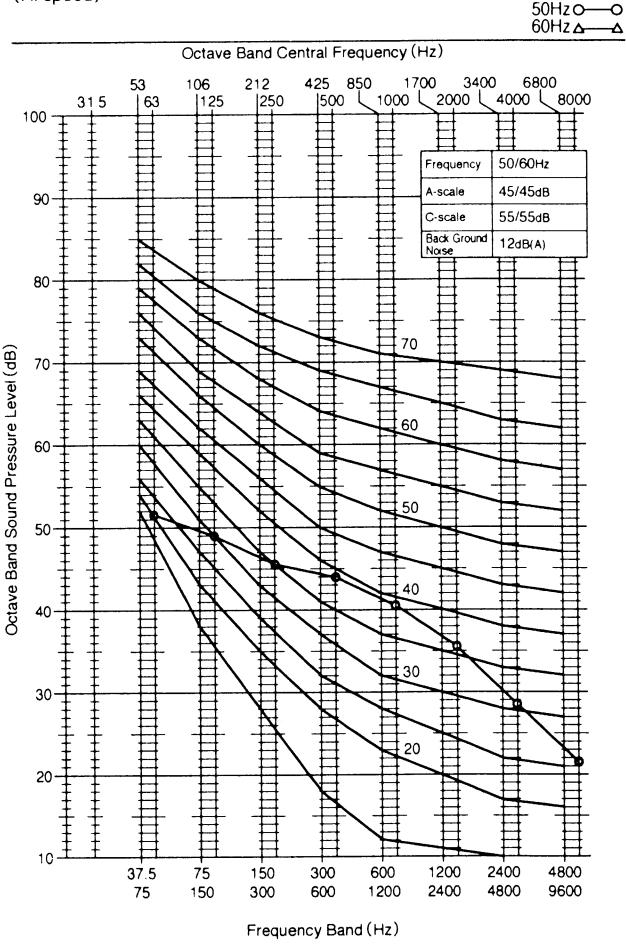

CU-71C52HP, CU-71C52XP, CU-71C02HP, CU-71C02XP
(Hi speed)

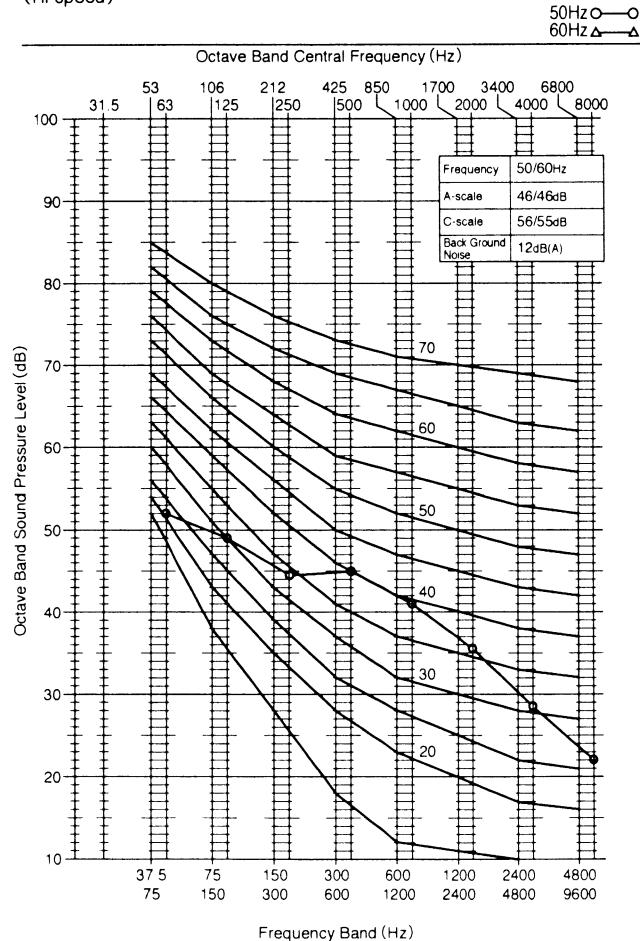


CU-80C52HP, CU-80C52XP, CU-80C02HP, CU-80C02XP
(Hi speed)

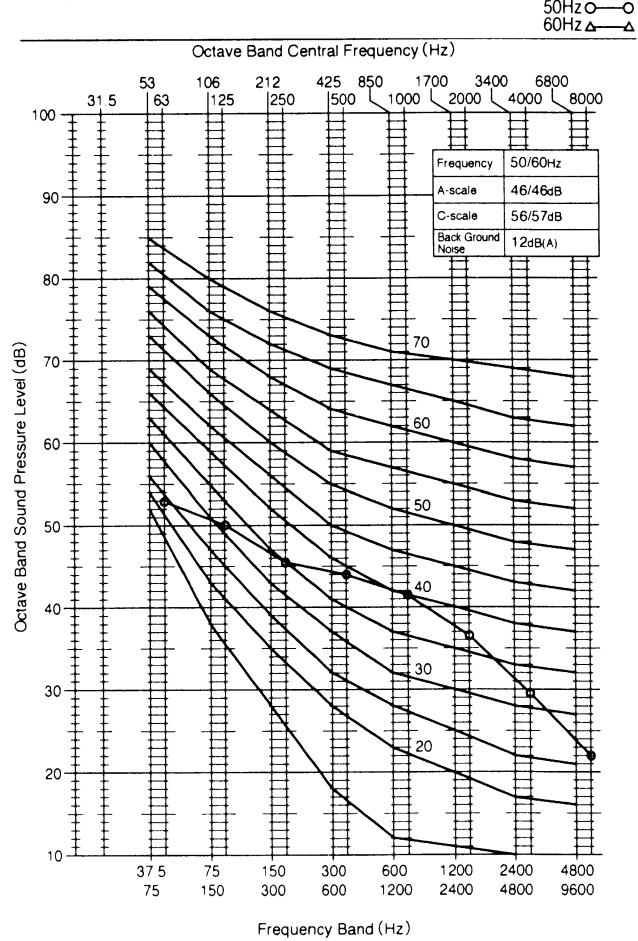


18. SOUND DATA


CU-112C52XP, CU-112C02XP
(Hi speed)

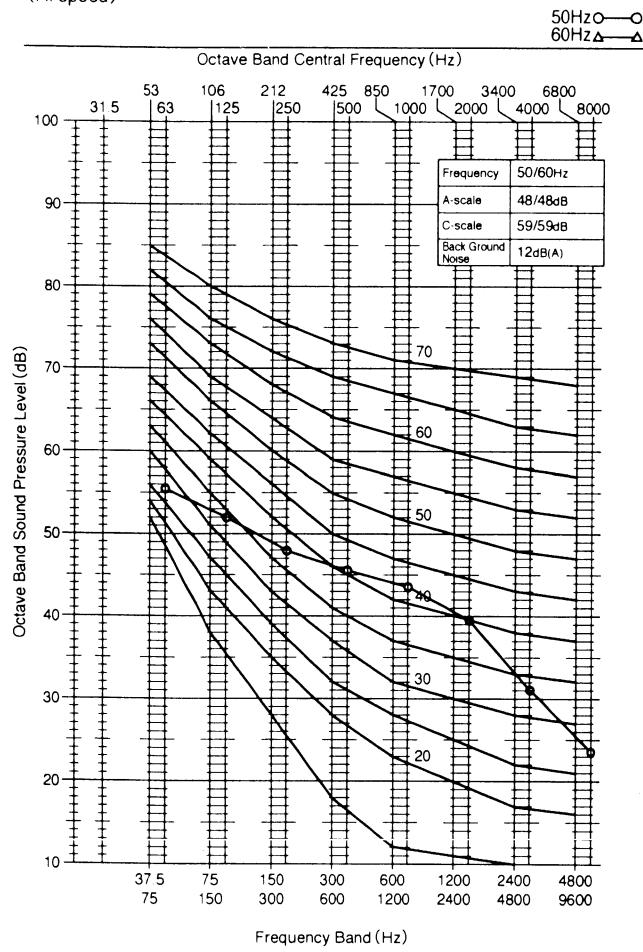

CU-140C53XP, CU-140C03XP
(Hi speed)

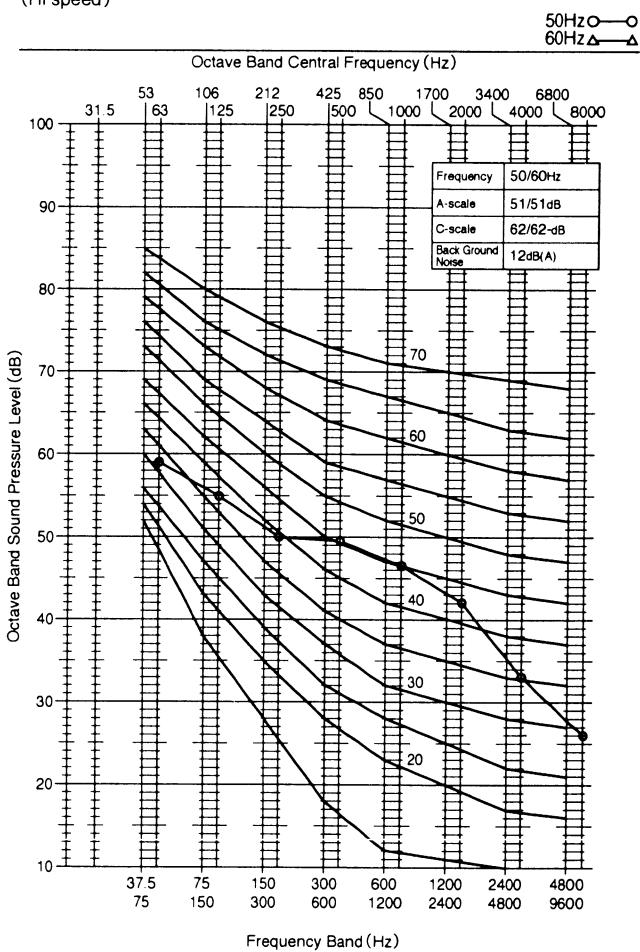


CU-160C53XP, CU-160C03XP
(Hi speed)

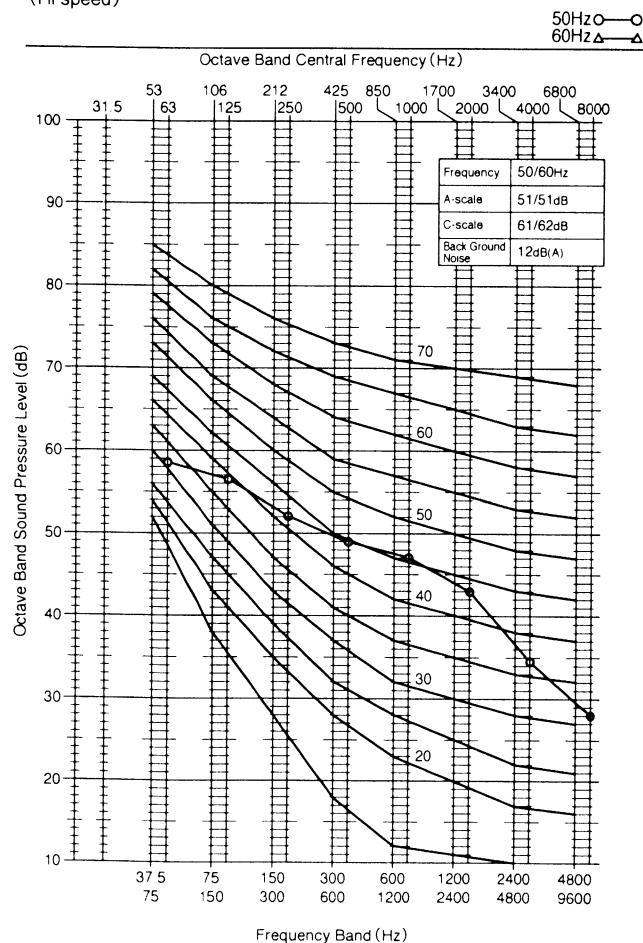

Twin and Triple 1 operation

- Simultaneous air conditioning of wide spaces and corners is possible. Indoor units with different horsepowers can even be used in combination.
- Master units and slave-units can be set automatically in twin and triple systems. No address setting is necessary.
- Multiple indoor units can be operated simultaneously with a single remote control unit. Note that individual operation is not possible.

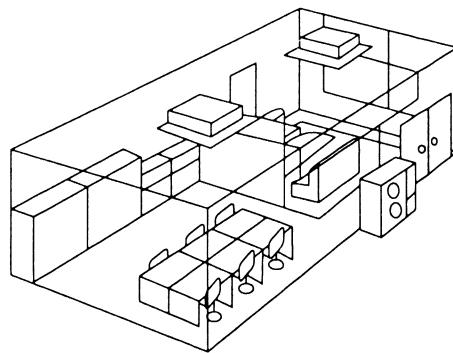

■ Twin and Triple combination table (Capacity ratio)

: Outdoor unit capacity

: Indoor unit capacity

(Figures indicate capacity ratios in combination.)


Outdoor unit	Simultaneous twin operation		Simultaneous triple operation	
	Standard	Capacity difference	Standard	Capacity difference
80C	 40U 40U			
112C	 50U 50U	 40U 71U		
140C	 71U 71U	 50U 80U		
160C	 80U 80U	 60U 112U	 50U 50U 50U	 40U 40U 80U

(Twin and triple operation setting)

- The master units and slave units are set automatically when the power is turned on. At this time, the indoor unit which is connected to the remote control unit becomes the master unit.
(If automatic setting is not possible, carry out the settings manually.)
- No distinction is made between master units and slave units (slave unit 1 and slave unit 2) at the indoor unit or remote controller.
- Install the remote control unit to the master unit. (It cannot be connected to slave units.)
If indoor unit models with louvers and models without louvers have been connected together, use an indoor unit with louvers as the master unit.
- The remote control thermostat can also be set.
- Optional circuit boards can only be installed to the master unit.
- Setting the master unit and slave units can also be carried out manually by using DIP switches. However, manual settings will always take priority. If you have made manual settings but would like to return to using automatic settings, set all slave unit DIP switches (refer to the table below) to the OFF position, and then press the ADDRESS RESET switch on the outdoor unit (SW3 on the outdoor unit printed circuit board).
(Do not mix manual settings and automatic settings.)

Manual setting	Master unit	Slave unit (slave unit 1 when connecting a triple system)	Slave unit 2 when connecting a triple system
		ON OFF	ON OFF Set No. 1 and No. 8 to ON. (No. 7 is already set to ON at the time of shipment.)
	※ It is not necessary to operate any switches on the master unit. The unit connected to the remote controller will become the master unit.	Set No. 8 to ON. All other switches can be ignored. (No. 7 is already set to ON at the time of shipment.)	

If any settings other than those for slave unit 1 and slave unit 2 are used, the system will not operate correctly.

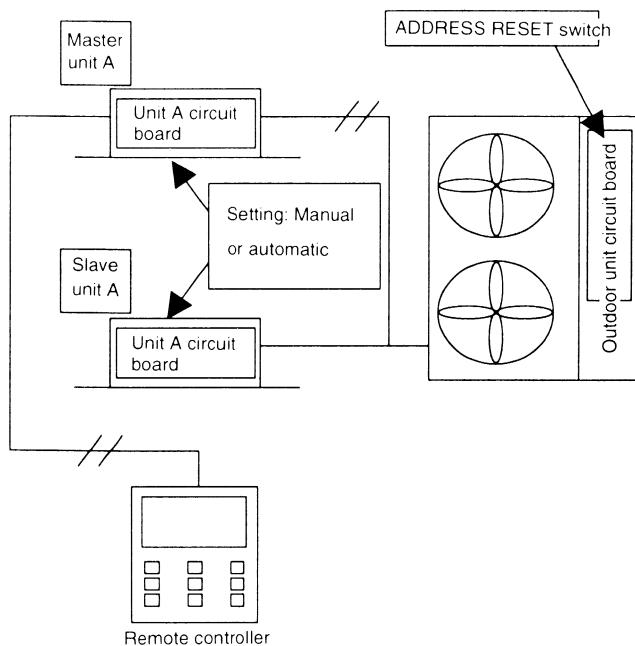

Master and slave unit setting should basically be carried out automatically.

- Setting occurs when the power is turned on.
(When power for indoor and outdoor units is turned on.)
- Remote controller is connected to the master unit.
- Self-diagnosis displays are possible for slave units.
- If setting errors occur because of procedural mistakes or power supply quality problems, the ADDRESS RESET switch function can be used.

Automatic address setting for twin and triple systems

Procedure: Turn on the power supply for the indoor and outdoor units.

Operation: Automatic address setting will start 10 to 30 seconds after the power supply is turned on, and will be completed after about 1 minute.

If the power supplies for the indoor unit and outdoor unit cannot be turned on at the same time, turn on the power supply for the outdoor unit, the indoor unit which is connected to the remote controller, and then the other indoor units in that order.

If the order of turning on the power supply is incorrect, the master unit setting may overlap. In such a case, turn on the power supplies for all units in the correct order as given above, or carry out a twin/triple automatic address reset (press dip switch 3 on the outdoor unit continuously for 4 seconds or longer).

- The indoor unit which is connected to the remote control unit (receptor) will have priority for becoming the master unit.
- The master unit thermostat will be used as the indoor temperature thermostat. If the master unit thermostat is turned on, the slave unit thermostats cannot be adjusted even if they happen to be on.
- DIP switch settings take priority in the setting of twin and triple addresses.
- If address setting using the DIP switches is carried out after automatic address setting has been carried out, use DIP switch No. 3 on the outdoor unit to carry out automatic address resetting.
- If you would like to designate a particular indoor unit as the master unit because no master unit has been set, use the DIP switches on the slave units to make the setting.

If automatic address setting is carried out once and then the slave unit addresses are set, the addresses will then be stored inside the EEPROM. Thus it is not necessary to repeat automatic address setting if the power is turned off and back on again.

DIP switch settings for twin/triple slave unit addresses

Procedure: Turn off the power supply, and then set DIP switch 1-8 to ON.

The unit will become slave unit 1.

(Set DIP switches 1-1 and 1-8 both to ON.

The unit will become slave unit 2.)

Turn on the power supply.

Operation: The unit will operate as slave unit 1. Automatic address setting is not carried out at this time.

If the setting can be made while the power is still turned on, it is easier to mis-combine the setting with group settings. So, the setting be made better while the power is turned off.

- Only slave unit addresses can be set in this way. Master unit setting is not possible.
- If you make the DIP switch settings after the power has been turned back on, carry out twin/triple automatic address resetting.
- Be sure to set DIP switch 1-8 to ON when setting twin/triple addresses. If DIP switch 1-1 is set to ON without setting 1-8 to ON also, group addresses will be set instead, and the remote controller open circuit error code (F26) will be displayed.

Automatic address resetting for twin/triple systems

Function

- This clears the current twin/triple addresses which have been set automatically, and causes automatic twin/triple address setting to be carried out once more.

Procedure: Press the ADDRESS RESET switch SW3 (pushbutton switch) on the outdoor unit circuit board continuously until LEDs 2 to 8 on the outdoor unit circuit board are all illuminated (takes approx. 3.5 seconds).

Operation: The outdoor unit will reset the addresses for the indoor units which it is connected to, and will send an instruction to carry out automatic address setting again. If the indoor unit DIP switches have not been manually set for twin/triple address setting, the indoor units receive this command and they then clear their existing settings and carry out automatic address setting.

If an indoor unit has had its address set by the DIP switch (DIP switch 1-8 is ON), or if the remote control unit is connected to one of the indoor units, then the addresses for those indoor units cannot be reset.

- The indoor units will not run for approximately 1 minute while automatic twin/triple address resetting is being carried out.
- Do not turn off the power supply for at least 1 minute after automatic twin/triple address resetting has been carried out.

2 Piping connections

- The following table shows the pipe diameters for a twin-type system.
(The CZ-06BKDA branch pipe [sold separately] will be needed.)

Outdoor unit main pipe diameter (mm)		Indoor unit combinations			
80C Liquid side: ϕ 9.52 Gas side: ϕ 15.88	Indoor unit capacity	40U	40U		
	Branch pipe diameter	ϕ 6.35	ϕ 6.35		
	Liquid side	ϕ 12.7	ϕ 12.7		
112C Liquid side: ϕ 9.52 Gas side: ϕ 19.05	Indoor unit capacity	50U	50U	40U	71U
	Branch pipe diameter	ϕ 6.35	ϕ 6.35	ϕ 6.35	ϕ 6.35
	Liquid side	ϕ 12.7	ϕ 12.7	ϕ 12.7	ϕ 15.88
140C Liquid side: ϕ 9.52 Gas side: ϕ 19.05	Indoor unit capacity	71U	71U	50U	80U
	Branch pipe diameter	ϕ 6.35	ϕ 6.35	ϕ 6.35	ϕ 9.52
	Liquid side	ϕ 15.88	ϕ 15.88	ϕ 12.7	ϕ 15.88
160C Liquid side: ϕ 9.52 Gas side: ϕ 19.05	Indoor unit capacity	80U	80U	50U	112U
	Branch pipe diameter	ϕ 9.52	ϕ 9.52	ϕ 6.35	ϕ 9.52
	Liquid side	ϕ 15.88	ϕ 15.88	ϕ 12.7	ϕ 19.05

- The following table shows the pipe diameters for a triple-type system.
(The CZ-06BKTA branch pipe [sold separately] will be needed.)



Outdoor unit main pipe diameter (mm)		Indoor unit combinations					
160C Liquid side: ϕ 9.52 Gas side: ϕ 19.05	Indoor unit capacity	50U	50U	50U	40U	40U	80U
	Branch pipe diameter	ϕ 6.35	ϕ 6.35	ϕ 6.35	ϕ 6.35	ϕ 6.35	ϕ 9.52
	Liquid side	ϕ 12.7	ϕ 12.7	ϕ 12.7	ϕ 12.7	ϕ 12.7	ϕ 15.88

- The following table shows the equivalent pipe lengths and height differences for twin- and triple-type systems.

Equivalent length	$L + la + lb + (lc)$		Within 50 m	
Branch pipe diameter	$la, lb, (lc)$		Within 15 m	
Branch pipe difference	$la - lb, lb - (lc), la - (lc)$		Within 10 m	
Height difference	H1	Within 30 m	Height difference between indoor units H2	Within 1 m

NOTE:


- Use the main pipe to gain any rise or fall required for the pipes.
- The number of bends should be 8 or less in a single system ($L + la$, $L + lb$, $L + lc$), and 15 or less overall.
- Branch pipes should be positioned horizontally.

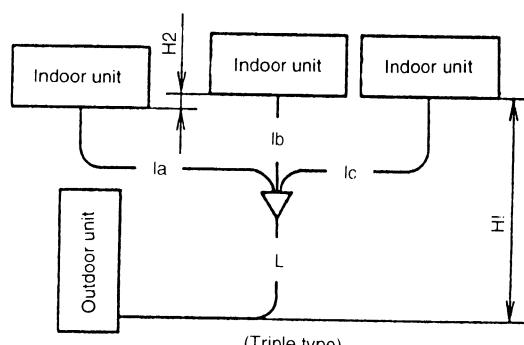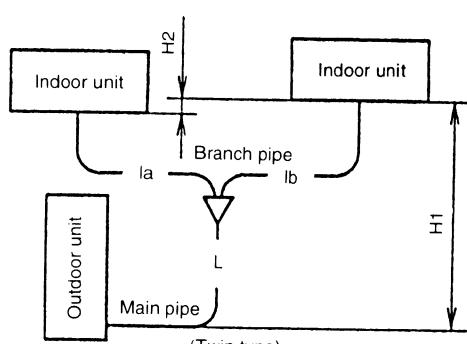

*The branch pipe should be horizontal to or perpendicular to the indoor unit.


NOTE:

1. Use the main pipe to gain any rise or fall required for the pipes.
2. The number of bends should be 8 or less in a single system (L + la, L + lb, L + lc), and 15 or less overall.
3. Branch pipes should be positioned horizontally.

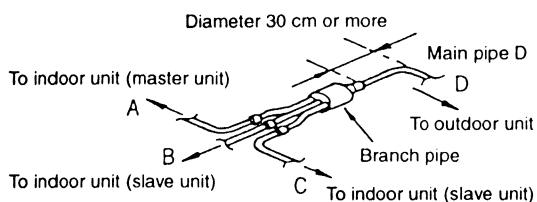


Horizontal connection

• The branch pipe should be horizontal to or perpendicular to the indoor unit.

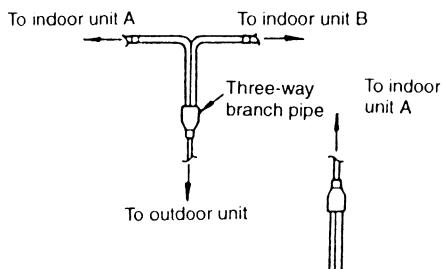

Vertical installation

*A, B and C should be horizontal.

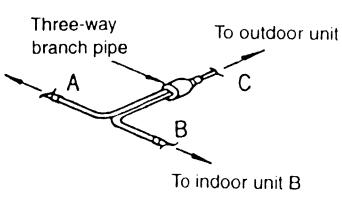

Horizontal installation

*A, B and C should be horizontal.

● Installing branch pipes


● Table of parts (option)

Kit name	Gas-side branch pipe	Liquid-side branch pipe	Insulator (gas side)	Insulator (liquid side)
CZ-06BKDA Twin type (J80-J160 models)			Ivory (Polyethylene foam) x 1	White (Styrene foam) x 1
CZ-06BKTA Triple type (J160 model)			Ivory (Polyethylene foam) x 1	White (Styrene foam) x 1

1. Check the dimensions of the branch pipe (inner diameter) in the pipe compatibility table below in accordance with the outdoor unit-side and indoor unit-side pipe diameters (outer diameters).

If "Cut" is given, use a pipe cutter to cut the pipe as shown in the illustration at right.

2. Connect the branch pipe to the other pipes and check the soldering all around the connections to make sure that no refrigerant is leaking.

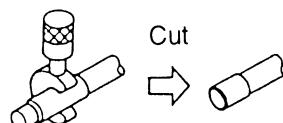

● Cut using a pipe cutter.


● Branch pipe diameter compatibility table

Part No.		Outdoor unit side (outer diameter)	Branch pipe (inner diameter)	Indoor unit side (outer diameter)
CZ-06BKDA	Gas side	φ 15.88	φ 15.88 φ 19.05 Adapter socket (Check all of the soldering before use)	φ 12.7
		φ 19.05	Cut φ 15.88 φ 12.7 φ 19.05	φ 15.88 Cut
	Liquid side	φ 9.52	φ 9.52 φ 6.35	φ 6.35
				φ 9.52 Cut
CZ-06BKTA	Gas side	φ 19.05	φ 19.05 φ 12.7 Adapter socket φ 15.88 φ 12.7	φ 12.7 Adapter socket
			φ 15.88 φ 12.7 φ 15.88	φ 15.88
	Liquid side	φ 9.52	φ 9.52 φ 6.35 Adapter socket φ 9.52 φ 6.35	φ 6.35
				φ 9.52 Adapter socket


● BRANCH PIPE K2T FOR TWIN TYPE CZ-06BKDA

APPLICABLE MODEL · · · CU-80C52HP, CU-8052XP, CU-112C52XP
 CU-140C53XP, CU-160C53XP

■ GAS PIPE

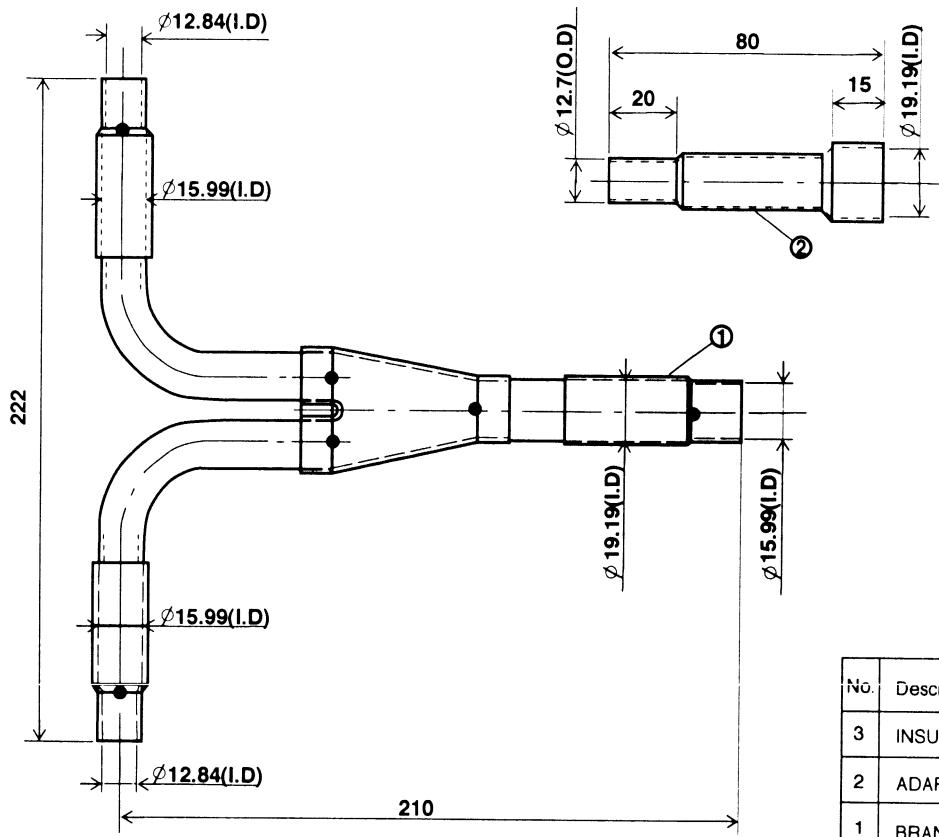




■ Liquid pipe

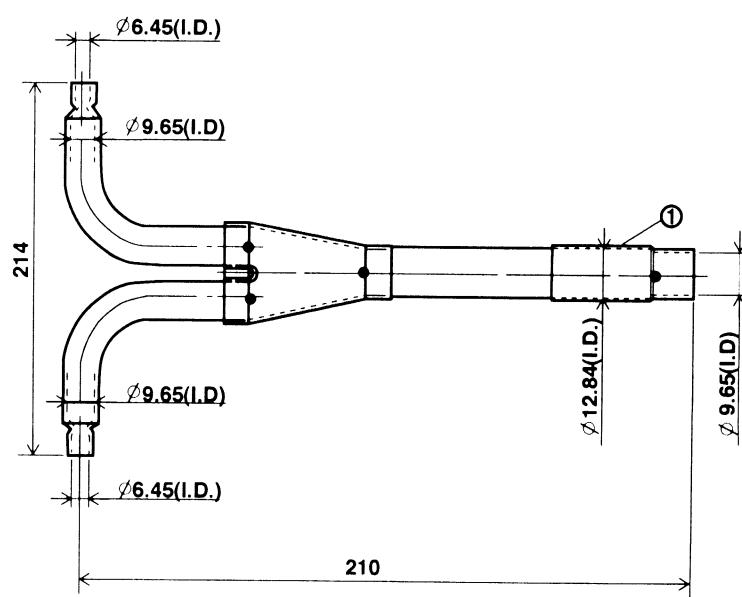

● BRANCH PIPE KIT FOR TRIPPLE TYPE CZ-06BKTA


APPLICABLE MODEL ··· CU-160C53XP

■ GAS PIPE

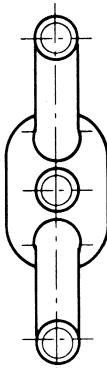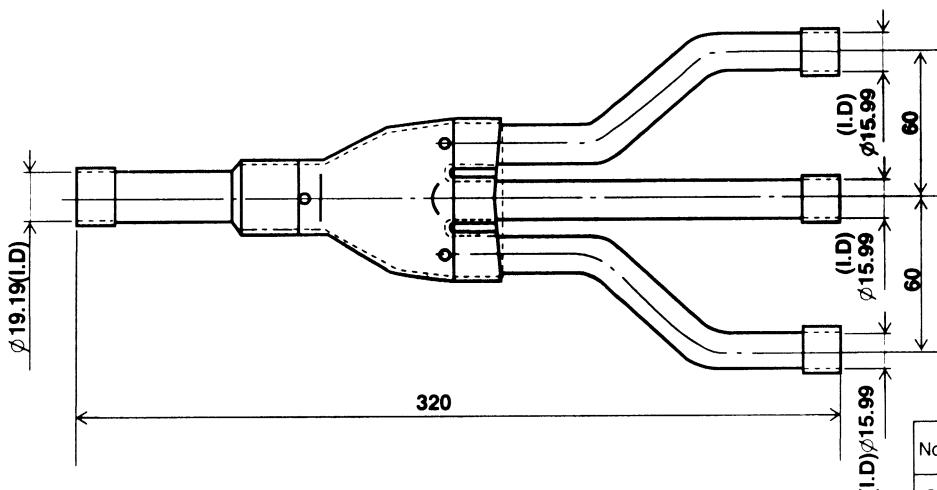
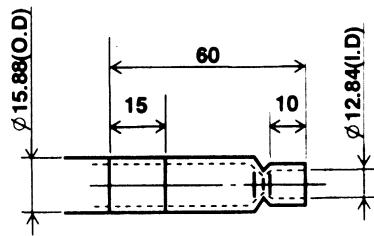


No.	Description	Q'ty
3	INSULATION MATERIAL	1
2	ADAPTOR (5/8→4/8)	3
1	BRANCH PIPE (GAS)	1

■ LIQUID PIPE

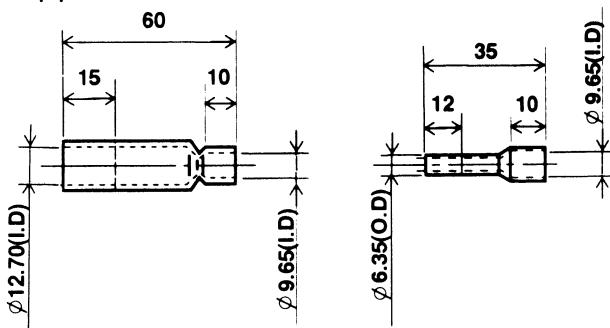

No.	Description	Q'ty
4	INSULATION MATERIAL	1
3	ADAPTOR (3/8→2/8)	1
2	ADAPTOR (3/8→4/8)	1
1	BRANCH PIPE (LIQUID)	1
No.	Description	Q'ty

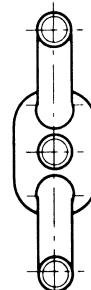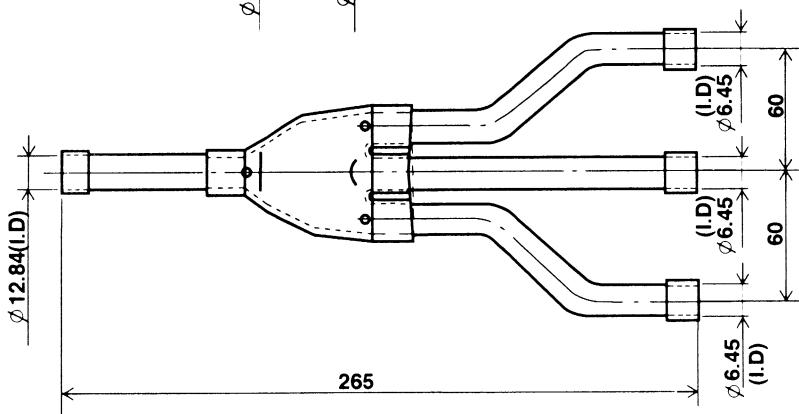


3 Refrigerant charging

- For twin- and triple-type systems

The pipe length is the total of the branch pipe (L) and the junction pipes (la → lb → lc in order from the thickest diameter). At the point where the pipe length exceeds 30 m, determine the amount of refrigerant for the remaining liquid-side pipe diameters and pipe lengths from the following table in order to charge the system.


Liquid-side pipe diameter	$\phi 6.35$	$\phi 9.52$
Additional charging amount (kg/m)	0.02	0.05

Example 1: For 160C outdoor unit with an equivalent pipe length of 50 m

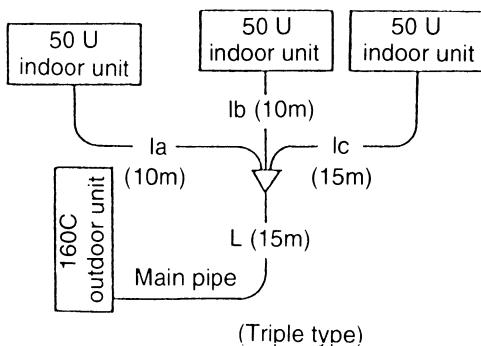

		Liquid pipe diameter	Equivalent length	Additional charging amount for each pipe (kg)
Main pipe (L)		$\phi 9.52$	15m	Not needed if within 30 m
Main pipe	(la)	$\phi 6.35$	10m	Not needed if within 30 m
	(lb)	$\phi 6.35$	10m	If exceeds 30 m, $5 \text{ m} \times 0.02 = 0.1$
	(lc)	$\phi 6.35$	15m	$15 \text{ m} \times 0.02 = 0.3$
		50m	Total 0.4 kg	


Example 2: For 160C outdoor unit with an equivalent pipe length of 40 m

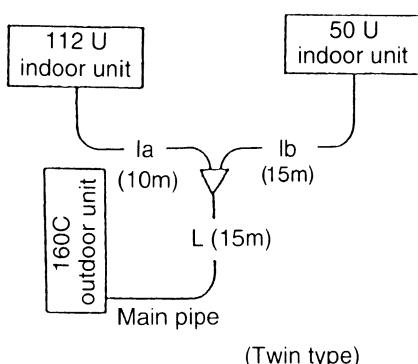


		Liquid pipe diameter	Equivalent length	Additional charging amount for each pipe (kg)
Main pipe (L)		$\phi 9.52$	15m	Not needed if within 30 m
Main pipe	(la)	$\phi 9.52$	10m	Not needed if within 30 m
	(lb)	$\phi 6.35$	15m	If exceeds 30 m, $10 \text{ m} \times 0.02 = 0.2$
		40m	Total 0.2 kg	

4 Wiring

When both indoor and outdoor unit draw power
(Example: 3 Phase power supply model)

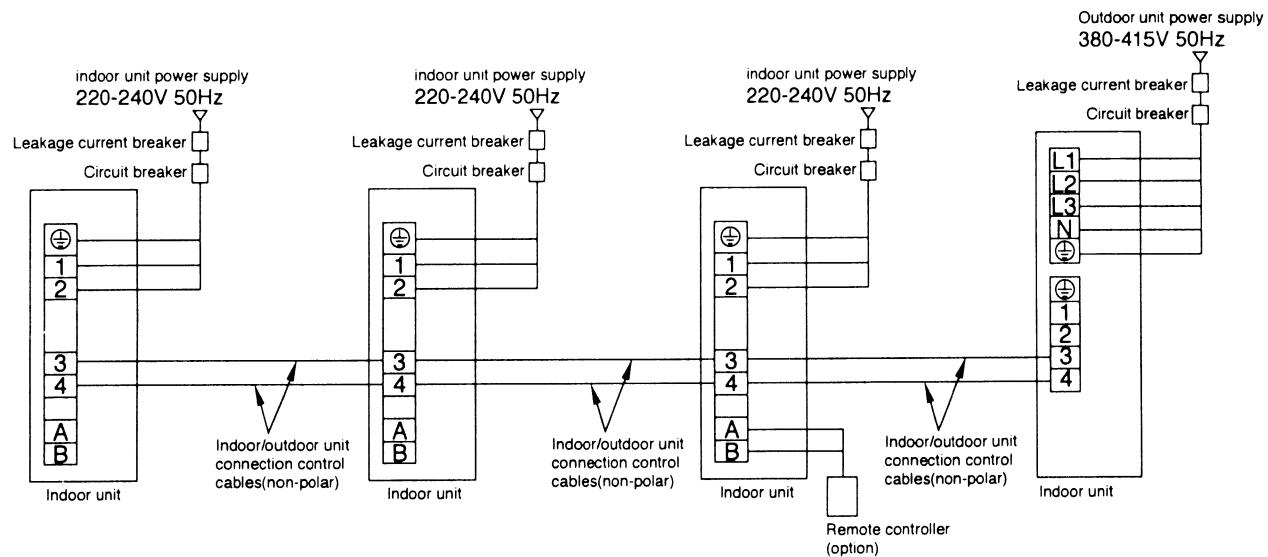


When only the outdoor unit draws power

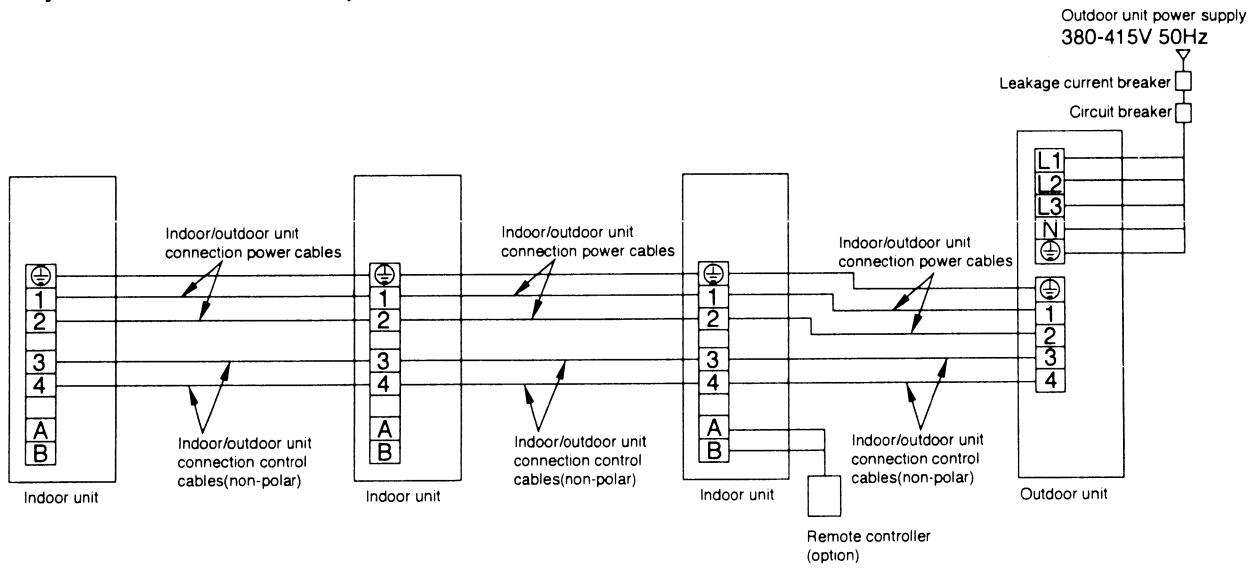


Improved quality of installation work through adoption of an “Connection error prevention” circuit which prevents wiring mistakes

<Correct wiring>

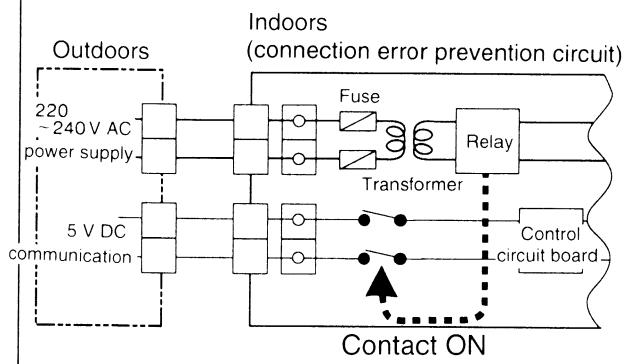

<Incorrect wiring>

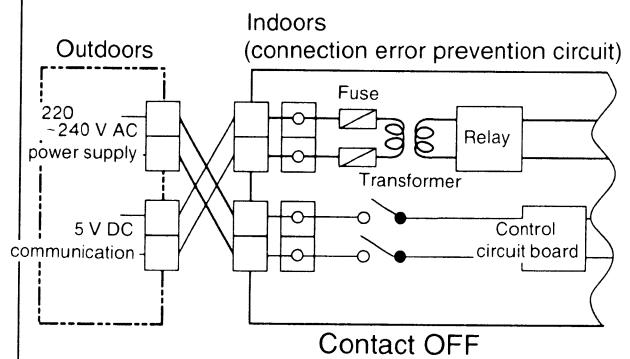


Connection errors with the control wires and the power supply wires will not only contribute to burning-out of the control circuit board, but can also cause large-scale working losses and affect reliability. If a circuit board with an “Connection error prevention” circuit is used, the relay will not operate if the wires have been connected incorrectly, so that current will not flow to the control circuit board. This is designed principally to eliminate human error at the installation site.


Prevention of connecting errors

These units are equipped with connection error prevention circuits. If the units do not operate, it is possible that the connection error prevention circuits have operated. In such cases, check that the power supply wires (connected to terminals [1] and [2]) and the control wires (connected to terminals [3] and [4]) are connected correctly. If they are connected incorrectly, connect them correctly. Normal operation should then commence.

(CORRECT)

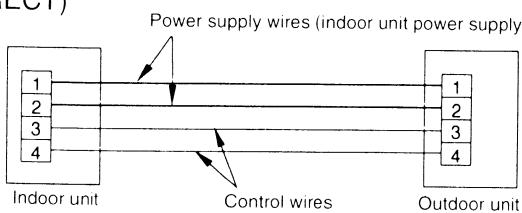

(INCORRECT)

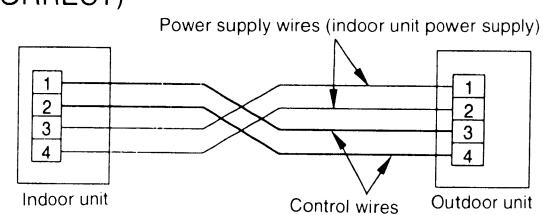

- Do not short the remote controller wires to each other. (The protection circuit will be activated and the units will not operate.) Once the cause of the short is eliminated, normal operation will then be possible.

NOTE:

- Wait one minute after turning on the indoor unit power supply before operating the remote controller
- If nothing at all appears in the remote controller LCD, check the power supply for the indoor unit.
Refer to “TROUBLE SHOOTING” at Page 101~ 107

NOTE:

Never do any of the following, as doing so may damage the printed circuit board.

- Do not connect anything except a relay to the timer input or fan speed output (connector CNT1 on printed circuit board).
- Do not connect U-NET transmission wires to terminals 3 and 4 of the indoor and outdoor units. (※1)
- Do not connect U-NET transmission wires to terminals A and B of the remote controller
(※1) U-NET transmission wires are the communication wires used for the central controller


Test operation and self-diagnosis

■ Test operation

- Always be sure to use a properly-insulated tool to operate the switch on the circuit board. (Do not use your finger or a metallic object.)
- Never turn on the power supply until all installation work has been completed.
- Turn on the circuit breaker before test operation extends past 6 hours.
(The crankcase heater will become energized, which will warm the compressor and prevent liquid compression.)
- For three-phase models, check that the phase is not reversed.
(If the phase is reversed, the LED on the printed circuit board will flash.)
- Check that the voltage is 198 V or higher when starting the unit. (The unit will not operate if the voltage is less than 198 V.)
- Carry out test operation for 5 minutes or more using the remote controller or the switch on the outdoor unit printed circuit board.
- Always carry out cooling first during test operation, even during the warm season.
(If heating is carried out first, problems with operation of the compressor will result.)

● Test operation from the outdoor unit

(Outdoor unit printed circuit board)

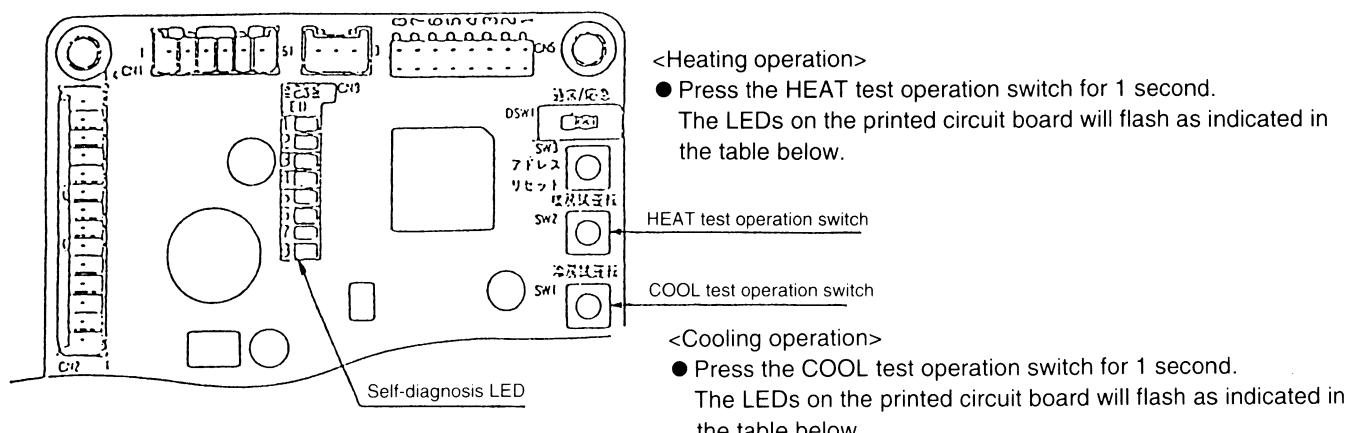

During outdoor unit emergency operation or test operation, the LEDs on the printed circuit board will flash.


	LEDs on outdoor unit printed circuit board						
	LED2	LED3	LED4	LED5	LED6	LED7	LED8
Emergency operation display	+	-	+	+	+	-	
Cooling test operation from outdoor unit	+	+	+	-	-	-	-
Heating test operation from outdoor unit	-	-	-	-	+	+	+

To cancel test operation, press the TEST or RUN switch once more while test operation is being carried out.

(Test operation will stop automatically after 30 minutes have passed.)

NOTE:1

These units are equipped with connection error prevention circuits. If the units do not operate, it is possible that the connection error prevention circuits have operated. In such cases, check that the drive wires (connected to terminals [1] and [2]) and the control wires (connected to terminals [3] and [4]) are connected correctly. If they are connected incorrectly, connect them correctly. Normal operation should then commence.

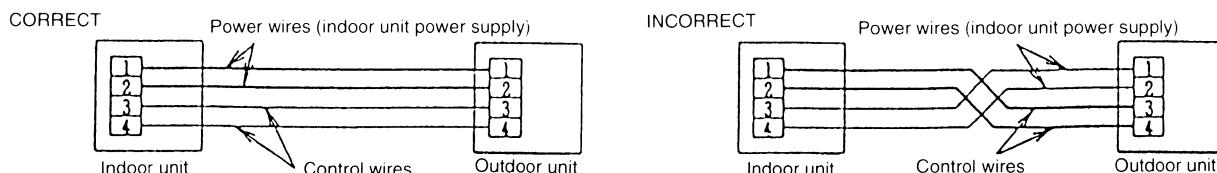


NOTE:2

Do not short the remote control unit wires to each other. (The protection circuit will be activated and the units will not operate.)


Once the cause of the short is eliminated, normal operation will then be possible.

● Test operation using the wired remote controller

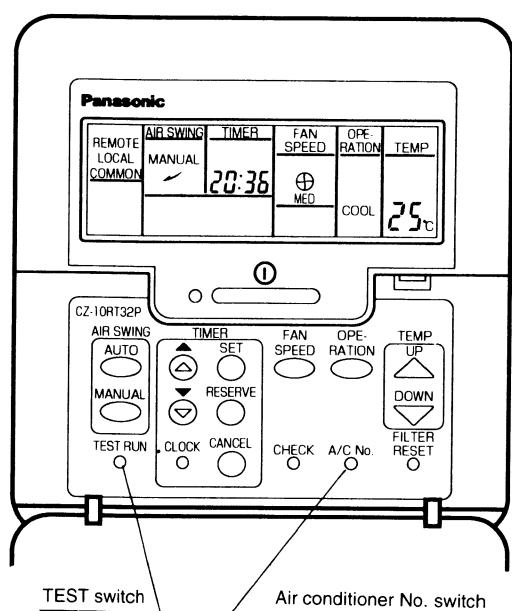


1. Check that "COOL" is displayed on the operation mode display, and then press the RUN switch to start test operation.
2. Within 1 minute of pressing the RUN switch, press the TEST RUN switch.
3. The pipe temperature (gas pipe) will then be displayed in the temperature setting display of the remote controller

(Example)

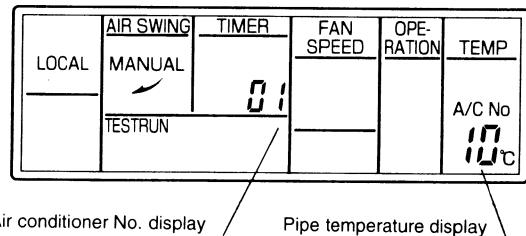

- During group control, the number appearing in the timer display will change each time the air conditioner No. switch is pressed, and the pipe temperature for the indoor unit corresponding to the number displayed will appear in the temperature setting display.
- 4. Check that the temperature in the pipe temperature display starts dropping after operation has been continuing for some time.
(The temperature will increase during heating operation.)

● Test operation using the wireless remote controller

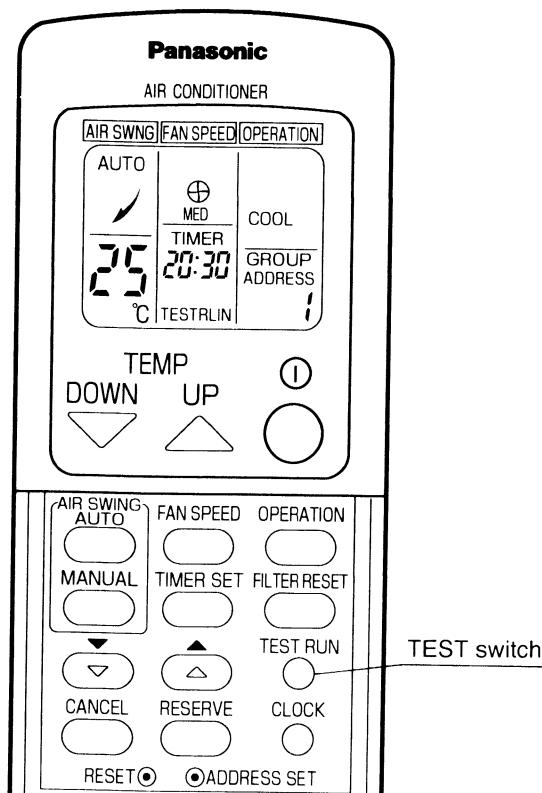


1. Within 1 minute of pressing the RUN switch, switch to cooling operation and then press the TEST switch.
 - If more than 1 minute passes, test operation cannot be started. In this case, press the RUN switch once more to repeat the operation.
 - Use the OPERATION MODE switch to change the operation. The current operation mode will appear in the operation mode display.
2. When test operation starts, "TEST" will appear in the timer display of the LCD., and operation will be carried out in accordance with the operation mode display (COOL or HEAT) appearing at that time.
However, the number in the temperature setting display will not change.

(Canceling test operation)

- Press the RUN switch, the TEMPERATURE SETTING Δ or ∇ switches, the OPERATION MODE switch, the FAN SPEED ADJUST switch or the TEST RUN switch to cancel test operation.

■ Self-diagnosis function

- The wired remote controller display and the self-diagnosis LEDs (red) on the outdoor unit printed circuit board indicate where the abnormality has occurred.
- Recalling the error display

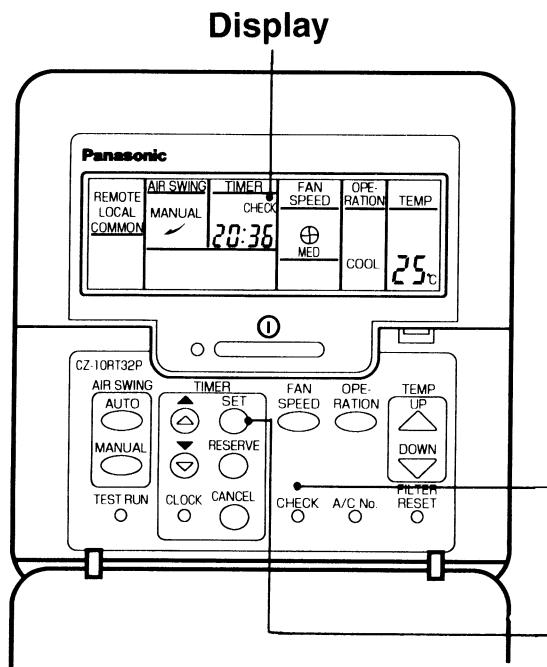

<Air conditioner No. >

- The air conditioner No. "01" appears during normal installation and use. When using group control, a different number may appear. The air conditioner No. can be displayed by pressing the air conditioner No. switch.

(Example)

LOCAL	AIR SWING	TIMER	FAN SPEED	OPERATION	TEMP
	MANUAL	CHECK 20:36	MED		COOL 25°C

When an abnormality occurs at this unit, "CHECK" flashes in the display.

Press the CHECK switch while the display is flashing.

(Example)

LOCAL	AIR SWING	TIMER	FAN SPEED	OPERATION	TEMP
		CHECK F 15			A/C No 01

The timer display will change and an error code from F15 to F49 will appear in place of the time. (The temperature setting display will also change to show the air conditioner No.)

Press the TIMER ON/OFF switch while the error is displayed.

(Example)

LOCAL	AIR SWING	TIMER	FAN SPEED	OPERATION	TEMP
		CHECK - 01			A/C No 01

The F15 - F49 display will change to the detail display.

- After checking the error display and the detail display, refer to the self-diagnosis error code table on the following page and check the location of the problem.
- If the problem is repaired and operation returns to normal, the CHECK display on the remote controller will put out, but the self-diagnosis LED will remain illuminated until operation starts again.

How to display the past error message

If the "CHECK" display on the wired remote controller is not flashing, press the CHECK button continuously for 5 seconds or more to display the problem details for the last problem or the problem before that. You can then switch between the displays for the previous problem and the problem before that by pressing the TIMER, FORWARD or BACK buttons.

(Last problem display: 1F15 - 1F49

Second-last problem display: 2F15 - 2F49)

(Example of last problem display)

LOCAL	AIR SWING	TIMER	FAN SPEED	OPERATION	TEMP
		CHECK 1F 15			A/C No 01

An error code from 1F15 to 1F49 will be displayed.

(The temperature setting display will also change to show the air conditioner No.)

(Example)

LOCAL	AIR SWING	TIMER	FAN SPEED	OPERATION	TEMP
		CHECK - 01			A/C No 01

If the TIMER ON/OFF switch is pressed while the error code from 1F15 to 1F49 is being displayed, the display screen will change to show the details of the last problem display.

(If 2F15 to 2F49 is being displayed, the details of the second-last problem display will appear.)

Press the CHECK button once more to return to the normal display.

● Self-diagnosis error code table

: Flashing : Illuminated : Blank: Off

Remote controller display			Printed circuit board self-diagnosis LED (red)								(Check location)		Error display	
Wired	Wireless	Indoor unit	Outdoor unit											
Error display	Detail display	Run LED	LED2	LED2	LED3	LED4	LED5	LED6	LED7	LED8				
F15	-01								(※2)	(※2)	Drain level float switch problem			
											Drain pump and drain pipe, indoor unit connectors CN6 & CN10, or relay connector			
F16	-01								(※2)	(※2)	Louver switch problem			
											Louver motor, veneer panel connection terminal, or indoor unit connectors CN1 & CN6			
F17	-01								(※2)	(※2)	Option problem			
											Option connection terminals			
F20	-01									(※2)	Indoor temperature thermistor problem			
	-02									(※2)	Indoor temperature thermistor lead wire or indoor unit connector CN1			
F21	-01									(※2)	Remote control thermistor problem			
											Remote control thermistor			
F25	-01									(※2)	Pipe temperature thermistor problem (indoor unit side)			
											Pipe temperature thermistor lead wire or indoor unit connector CN1			
											Centralised control address overlap problem			
											Check settings for optional centralised control circuit board address switch			
F26	-01									(※2)	Remote control transmission wire open circuit problem			
	-02									(※2)	Remote control unit cable and connection terminals			
F27	-01										Remote control transmission problem			
	-02										Check the transmission wave pattern			
F29	-01									(※2)	Indoor/outdoor unit transmission wire open circuit problem			
	-02								(※2)	(※2)	Indoor/outdoor unit connection cable and connection terminals, or indoor unit and outdoor unit power supplies			
	-12									(※2)	Indoor/outdoor unit transmission problem			
F30	-02										Check the transmission wave pattern.			
	-06										Negative or open phase power supply			
	-07										Check the main power supply terminal board connections, and switch the main power supply phase.			
F31	-02										Poor power supply connection, or distorted voltage wave pattern			
F33	-01										Check the main power supply terminal board connections, and check the power supply wave pattern.			
	-02										Poor power supply connection			
F40	-41										Check the main power supply terminal board connections.			
	-61										High-pressure cut-off			
F41	-02										Refrigeration system, Obstructing of the heat radiation from outdoor unit			
	-03										Compressor overcurrent protection			
F42	-01										Open phase or lock in compressor, or blown main power supply fuse			
F49	-01										Insufficient gas			
	-02										Compressor discharge temperature thermistor problem			
F40	-41										Discharge temperature thermistor lead wire, outdoor unit connector CN2, or relay connector			
	-61										Heat exchanger outlet temperature thermistor problem (Outdoor unit)			
F41	-02										Heat exchanger outlet temperature thermistor lead wire, outdoor unit connector CN2, or relay connector			
	-03										High-pressure switch open circuit problem			
F42	-01										High-pressure switch lead wire, outdoor unit connector CN2, or relay connector			
	-03										Heating pressure switch open circuit problem			
F49	-01										Heating pressure switch lead wire, outdoor unit connector CN2, or relay connector			
	-02										Current detector open circuit or compressor current problem			
F49	-01										Outdoor unit connector CN2, compressor internal protection system activated, or blown main power supply fuse			
	-02										Outdoor unit setting problem			
F49	-01										Abnormal setting of the outdoor p.c.board			
	-02										Outdoor unit setting problem			
F49	-01										Abnormal setting of the outdoor p.c.board			
	-02										Abnormal setting of the outdoor p.c.board			


If more than one error occurs between the indoor and outdoor units, the problem display on the remote controller may not match the LED display on the outdoor unit printed circuit board. In such cases, check both locations and remove the causes of the problems.

LED7	LED8	Unit display for twin/triple system
		Master unit error
		Slave unit 1 error
		Slave unit 2 error

- The LED1 (green) illuminates to indicate that the microprocessor on the microprocessor circuit board is operating normally. If the LED is switched off or is flashing irregularly, check the power supply, and turn it off and then back on again.

● Energy save setting

- Upper and lower limits can be set for the setting temperature during cooling and heating operation. (The factory shipment setting has an upper limit of 31°C and a lower limit of 16°C.)

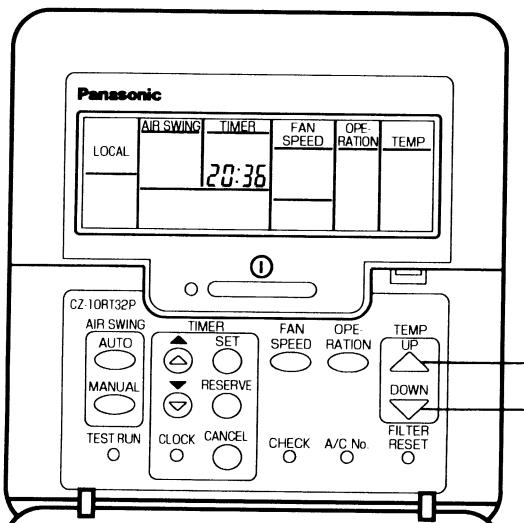

2 To set an upper limit

Press the OPERATION MODE switch until HEAT is displayed.



Press the UP or DOWN switch to set the temperature.




Press the RESERVE switch to complete the upper limit setting.

Example: If the heating display is set to 28°C, setting the temperature to higher than 28°C will not be possible.


*Upper and lower limits cannot be set at the same time.

● Switching to the remote controller thermistor

- The temperature detection thermistor used for detecting the indoor temperature can be switched between the thermistor at the indoor unit and the thermistor at the remote control unit. (The factory shipment setting is at the indoor unit side.)

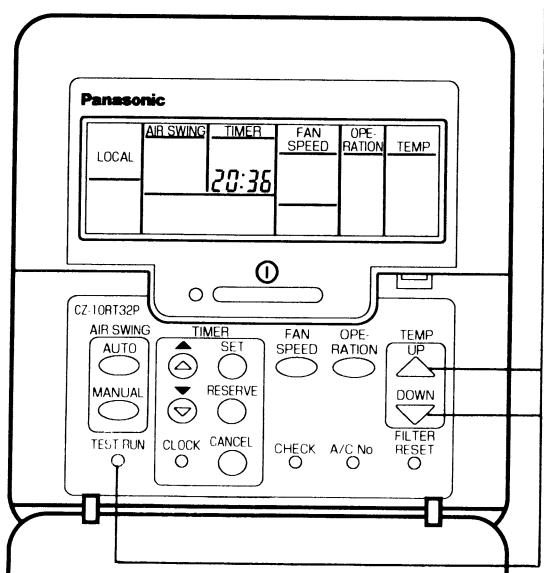


1 While operation is stopped, press the UP and DOWN switches simultaneously.

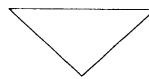

The display will change.

(Example)

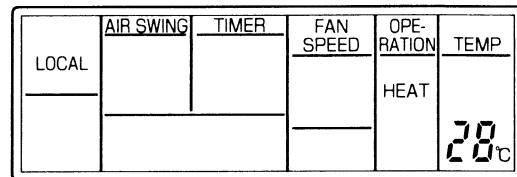

3 To set a lower limit

Press the OPERATION MODE switch until COOL is displayed.



Press the UP or DOWN switch to set the temperature.



Press the RESERVE switch to complete the lower limit setting.

Example: If the cooling display is set to 22°C, setting the temperature to lower than 22°C will not be possible.


•Press the CLEAR switch to cancel the setting

1 While operation is stopped, press and hold the TEST RUN switch, UP switch and DOWN switches simultaneously.



The time display on the timer display panel will change.

(Example)

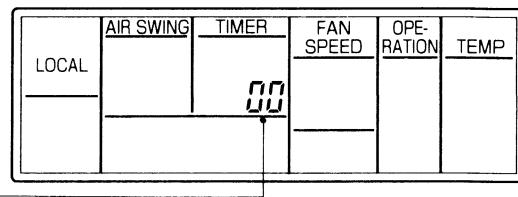

"00" ... Indoor unit thermostat detection setting

"01" ... Remote controller thermostat detection setting

Press the FORWARD or BACK timer switches to change the detection setting.

2 Press the RESERVE switch to complete the setting.

To change the setting, repeat the above operation.

(1 Setting group control for 1 remote control unit)

- When using a remote-controlled thermostat, the thermostat setting is used for all indoor units in the group.
- During group control, up to a maximum of 16 indoor units can be connected. (Do not mix heat pump units and cooling-only units.)
- Do not mix manual settings and automatic settings. (manual settings take priority.)
- The master unit and slave units can all be centrally controlled during group control.

(Automatic setting for group control)

- If the power supplies for indoor units which are connected are turned on simultaneously, the indoor unit numbers will be determined automatically after approximately 1 minute. (DIP switch settings are not necessary.)

NOTE:

- Correct wiring connections are a basic requirement for automatic setting. If the wires are connected incorrectly when the power is turned on, the settings will not be made correctly and operation will not be possible.
- When address numbers are set automatically, you will not know which address number corresponds to which indoor unit.
- Do not turn off the power supply for at least 1 minute during automatic address setting, otherwise the settings will not be made correctly.

(Manual setting for group control)


	Indoor unit No.	1	2	3	4	5	6	7	8
Manual setting	DIP switch (DSW1) setting on indoor unit printed circuit board	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1
	Air conditioner No. setting	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2
	No operation necessary	1 is ON	2 is ON	1 and 2 are ON	3 is ON	1 and 3 are ON	2 and 3 are ON	1, 2 and 3 are ON	
	Indoor unit No.	9	10	11	12	13	14	15	16
	DIP switch (DSW1) setting on indoor unit printed circuit board	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1
	Air conditioner No. setting	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2
	4 is ON	1 and 4 are ON	2 and 4 are ON	1, 2 and 4 are ON	3 and 4 are ON	1, 3 and 4 are ON	2, 3 and 4 are ON	1, 2, 3 and 4 are ON	
	Indoor unit No.	9	10	11	12	13	14	15	16
	DIP switch (DSW1) setting on indoor unit printed circuit board	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1	OFF 1
	Air conditioner No. setting	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2	ON 2
	4 is ON	1 and 4 are ON	2 and 4 are ON	1, 2 and 4 are ON	3 and 4 are ON	1, 3 and 4 are ON	2, 3 and 4 are ON	1, 2, 3 and 4 are ON	

<Automatic address resetting for group control>

After setting DIP switches 1 to 4 to OFF and stop operation. Then press the 'AIR SWING AUTO' 'OPERATION MODE' and 'Air conditioner No.' switches simultaneously. The addresses will be momentarily reset, and then automatic address setting will be carried out once more.

• Note with regard to the Mini-cassette

When carrying out group control of a Mini-cassette system using a single remote control unit, be sure to disconnect the connectors for all receptor circuit boards except the one for indoor unit No. 1 before turning on the power. (The same action as for the slave units in twin and triple systems is necessary.)

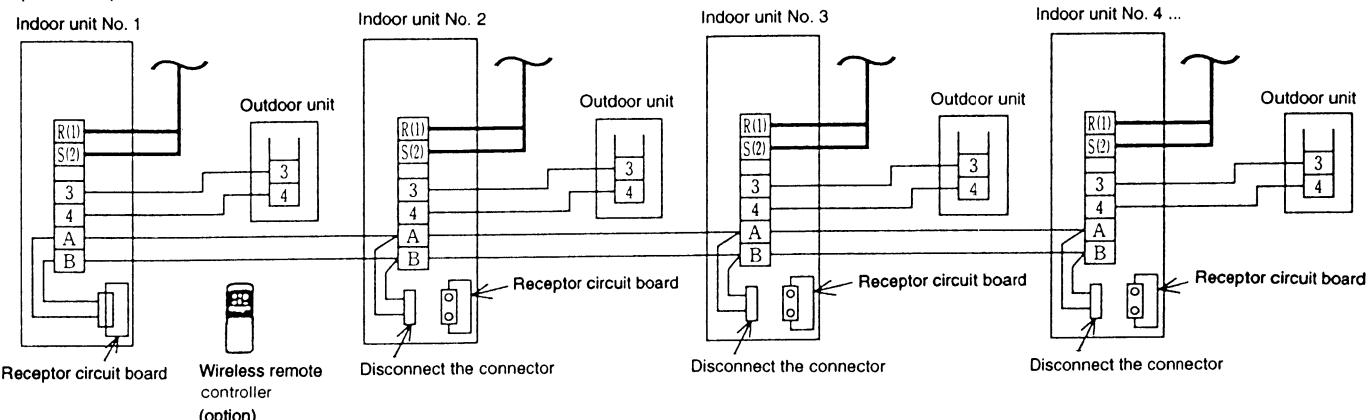

■If test operation does not proceed correctly


Carry out test operation after approximately 6 hours have passed since the power was turned on (crankcase heater is energized).

If operation is started by using the remote controller within 1 minute of turning on the power, the outdoor unit settings will not be made correctly and correct operation will not be possible.

If the following symptoms occur after turning on the power, check the wiring connections once more.


●For standard installation

(System example)

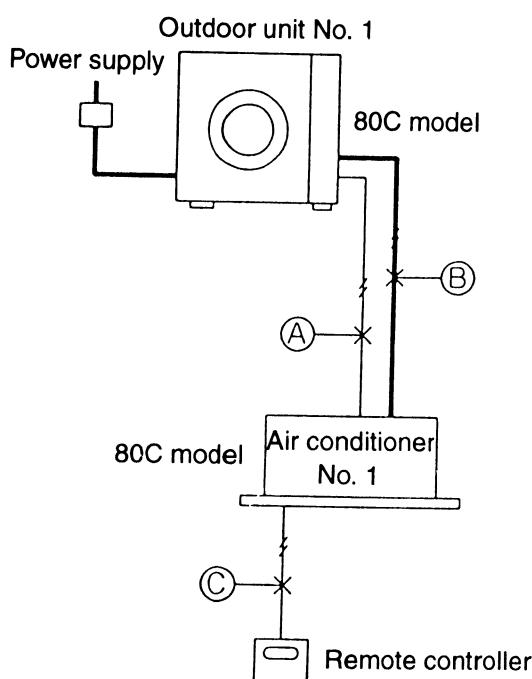


(When remote controller display shows "Power supply")

1. The main power is turned on while the indoor-outdoor transmission wires are not connected (open circuit at section A)
Symptom: Remote control unit . . . "CHECK" flashes
NOTE: Indoor unit . . . LED2 on printed circuit board flashes
Outdoor unit . . . LED 3 and LED 7 on printed circuit board flash
2. The main power is turned on while the indoor-outdoor power supply wires are not connected (open circuit at section B)
Symptom: Remote control unit . . . Display of "No power supply"
NOTE: Indoor unit . . . No display
Outdoor unit . . . LED 3 and LED 7 on printed circuit board flash
3. The main power is turned on while the remote control unit connection cord is not connected (open circuit at section C)
Symptom: Remote control unit . . . Display of "No power supply"
NOTE: Indoor unit . . . LED1 on printed circuit board stays illuminated
Outdoor unit . . . LED1 on printed circuit board stays illuminated

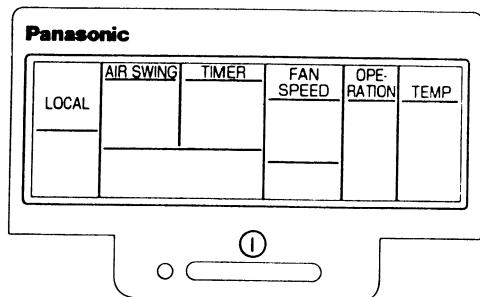

(When remote controller display shows "No power supply")

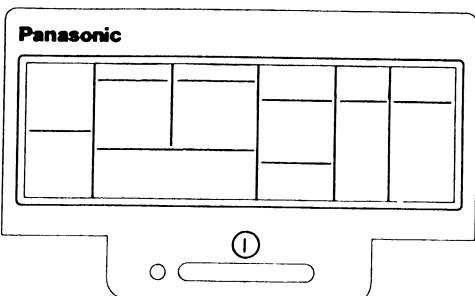


Remedy

1. Turn off the main power.
↓
2. Connect the disconnected wires correctly.
↓
3. Turn the main power back on.
↓
4. After 1 minute, start operation using the remote controller.
(Indoor unit . . . Operation will start according to the remote controller setting.)
(Outdoor unit . . . Operation will start after 3-5 minutes.)

NOTE: The "CHECK" display on the remote controller and the flashing of LEDs on the printed circuit boards will not occur immediately. They will appear 3-6 minutes after the main power is turned on.

● During twin/triple operation

(System example)

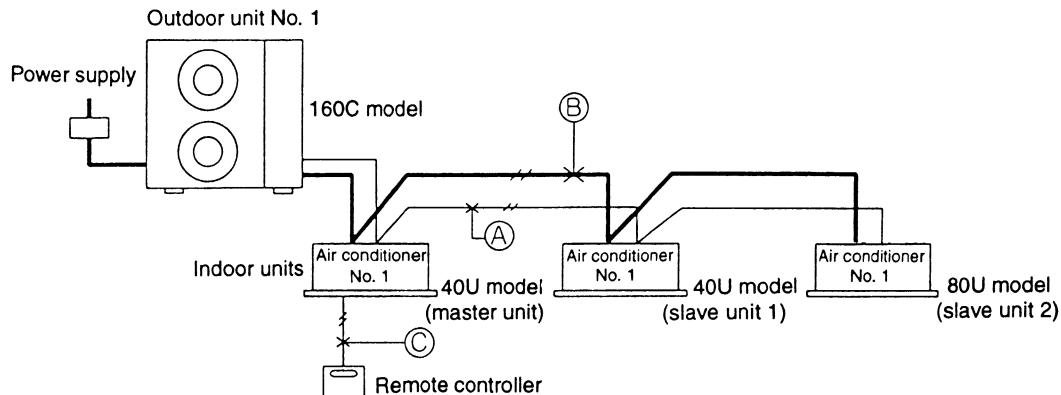

1. The main power is turned on while the transmission wires between the indoor unit(s) are not connected (open circuit at section A)

Symptom: Nothing abnormal appears on the remote controller display. If operation is then started in this condition, the combination of the 160C outdoor unit and the 40U indoor unit (master unit) will cause abnormal operation to occur.



If operation continues, an abnormality will occur on the refrigeration cycle and operation will stop.

- Remote controller "CHECK" flashes
- Indoor unit (master) . . . The LEDs on the printed circuit board flash and operation stops
- Indoor unit (slave) LED1 on the printed circuit board illuminates and the unit does not operate at all
- Outdoor unit The LEDs on the printed circuit board flash and operation stops

2. The main power is turned on while the power supply wires between the indoor unit(s) are not connected (open circuit at section B)

Symptom: Same as above. If operation continues, an abnormality will occur on the refrigeration cycle and operation will stop.



- Remote controller "CHECK" flashes
- Indoor unit (master) . . . The LEDs on the printed circuit board flash
- Indoor unit (slave) The LEDs on the printed circuit board do not illuminate and the unit does not operate at all
- Outdoor unit The LEDs on the printed circuit board flash and operation stops

3. The main power is turned on while the remote controller connection cord is not connected (open circuit at section C)

Symptom: • Remote control unit . . . Display of "No power supply"

- Indoor unit (master) . . . LED1 on the printed circuit board stays illuminated and the unit does not operate
- Indoor unit (slave) LED1 on the printed circuit board stays illuminated and the unit does not operate
- Outdoor unit LED1 on the printed circuit board stays illuminated and the unit does not operate

Remedy

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Turn off the main power. | <p style="text-align: center;">↓</p> <ol style="list-style-type: none"> 4. After 1 minute, start operation using the remote controller.
(Indoor units Operation will start according to the remote controller setting.) |
| <ol style="list-style-type: none"> 2. Connect the disconnected wires correctly. | <p style="text-align: center;">↓</p> <ol style="list-style-type: none"> 3. Turn the main power back on. |


If slave units do not operate even after the wiring has been corrected (automatic addressing is not possible)

1. Check that DIP switches 1 to 4 and DIP switch 8 are all set to OFF, and then stop operation.
- ↓
2. Press the ADDRESS RESET switch (SW3) at the outdoor unit for approximately 4 seconds
(The self-diagnosis LEDs 2 to 8 will illuminate in order, and the system is reset once they are all illuminated.)

The above procedure cannot be used to carry out automatic address resetting during group control.

24. TROUBLE SHOOTING

- During group control operation
(System example)

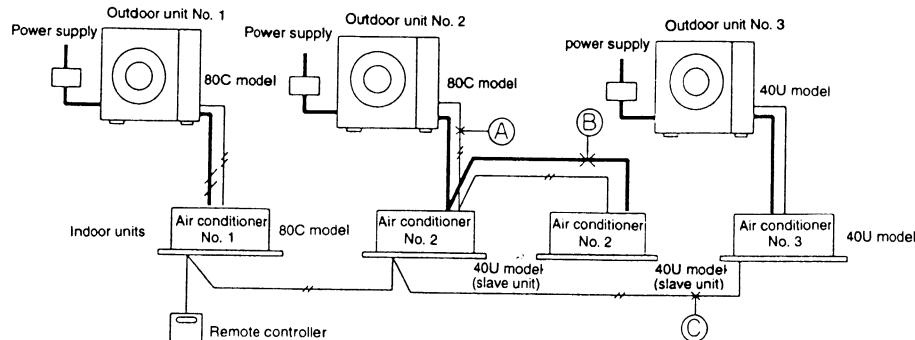

1. The main power is turned on while the transmission wires between the indoor unit and the outdoor unit are not connected (open circuit at section A)

Symptom: Operation of indoor unit No. 1 and indoor unit No. 3 is possible.

However, "CHECK" flashes in the remote control unit display for 3-5 minutes after the main power is turned on.

- Remote controller "CHECK" flashes
- Indoor unit No. 2 LED2 on the printed circuit board flashes (both master and slave units)
- Outdoor unit No. 2 LED3 and LED7 on the printed circuit board flash

2. The main power is turned on while the power supply wires between the indoor units are not connected (open circuit at section B)

Symptom: Operation of indoor unit No. 1 and indoor unit No. 3 is possible

However, if operation is then started in this condition, the combination of the 80C outdoor unit and the 40U indoor unit (master unit) will cause abnormal operation of indoor unit No. 2 to occur

If operation continues, an abnormality will occur on the refrigeration cycle and operation will stop.

- Remote controller "CHECK" flashes (indoor unit No. 2 abnormality)
- Indoor unit No. 2 LED2 on the printed circuit board flashes (both master and slave units)
- Outdoor unit No. 2 The LEDs on the printed circuit board flash

3. The main power is turned on while the remote controller connection cord is not connected (open circuit at section C)

Symptom: Nothing abnormal appears on the remote controller display, and operation of indoor unit No. 1 and indoor unit No. 2 is possible.

However, indoor unit No. 3 cannot be operated.

Remedy

- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Turn off the main power. 2. Connect the disconnected wires correctly. 3. Turn the main power back on. | <p>↓</p> <ol style="list-style-type: none"> 4. After 1 minute, start operation using the remote controller.
(Indoor units . . . Operation will start according to the remote controller setting.)
(Outdoor unit . . . Operation will start after 3-5 minutes.) |
|--|---|

If slave units do not operate even after the wiring has been corrected (automatic addressing is not possible)

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Check that DIP switches 1 to 4 and DIP switch 8 are all set to OFF, and then stop operation. 2. Press the 'AIRSWING AUTO', 'OPERATION' and 'A/C No.' switches simultaneously.
The addresses will be momentarily reset, and then automatic address setting will be carried out once more. | |
|--|--|


The above procedure cannot be used to carry out automatic address resetting of twin/triple control.

(Note on automatic address setting)

The printed circuit boards automatically store the connected system configuration when power is supplied. As a result, once the power has been turned on for these printed circuit boards, the units can not be changed about within the system, even if the units are of the same model and have the same capacity.

ADDRESS SETTING FOR TWIN/TRIPLE SYSTEM


(Example)

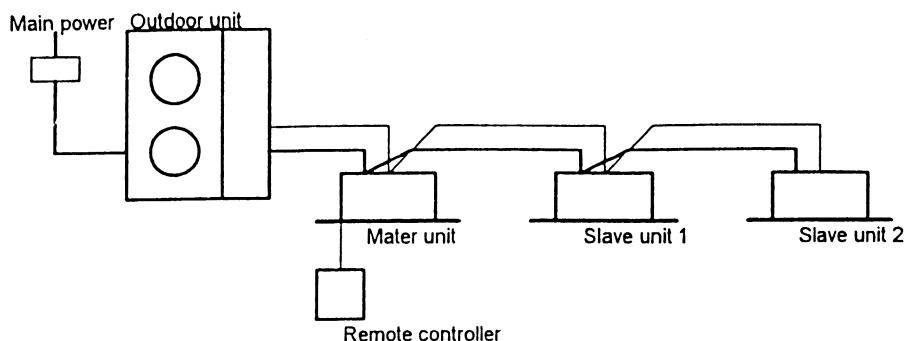

1. Automatic address setting (no need to have dip-switch set)

If the wiring connected properly as above example, the address is set automatically by the main power supply. A indoor unit with remote controller will be set as the master. If the power source is installed to indoor units and outdoor separately, turn on the switch as the following procedure: outdoor unit, indoor unit with controller, and other indoor units.

When the slave units do not operate (when address cannot be set)

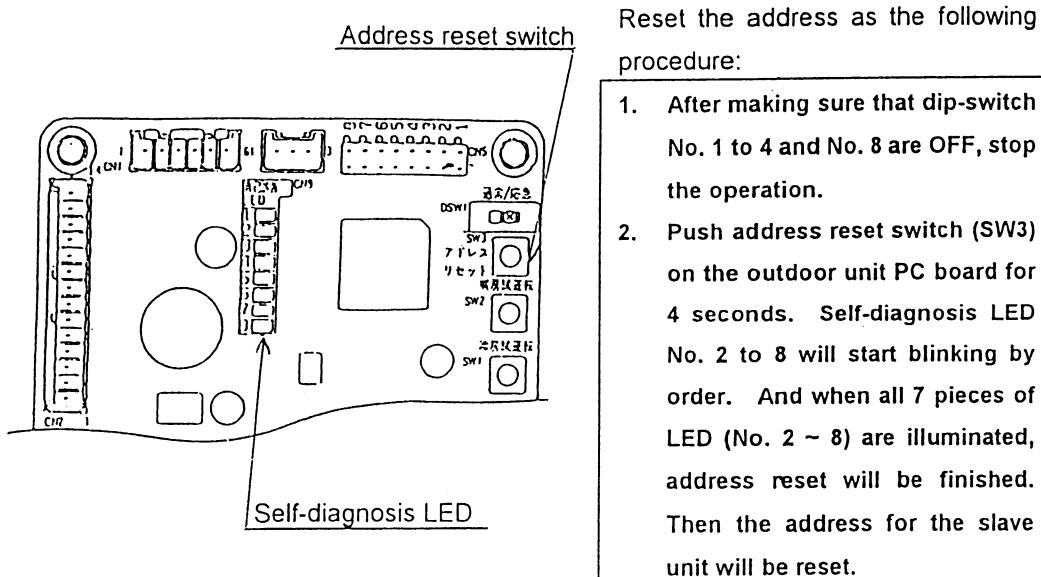

Important: The address for the group control cannot be reset, using the above mentioned procedure.


Manual address setting (by dip-switch DSW1)

When you set the address manually, set the dip-switch of the PC board in the indoor unit as follow:

Master unit	Slave unit (Slave No. 1 of Triple)	Slave unit (Slave No. 2 of Triple)
No need to set address for the RC of the master unit	DSW1 ON OFF 	DSW1 ON OFF
The address for the master unit will be set in the unit with RC	No. 8 ON, The others no change	No. 1 and 8 ON, The others no change

ADDRESS SETTING FOR GROUP CONTROL SYSTEM

(Example)

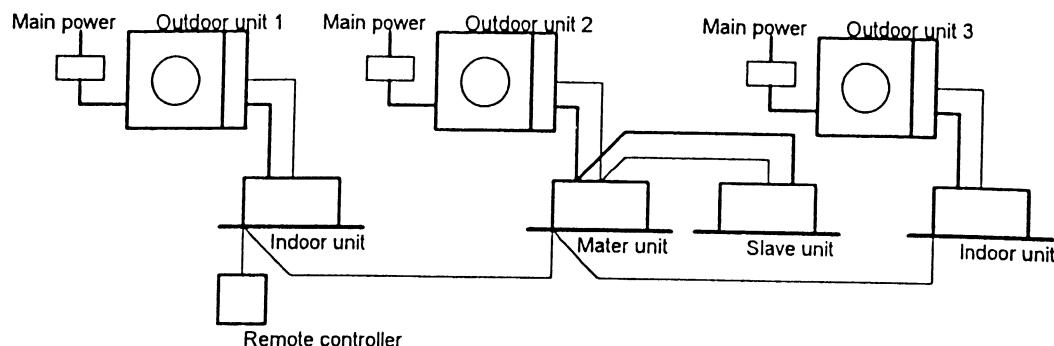


1. Automatic address setting (no need to have dip-switch set)

If the wiring connected properly as above example, the AC numbers are set automatically by the main power supply. A indoor unit with remote controller will be set as the master.

If the power source is installed to indoor units and outdoor separately, turn on the switch as the following procedure: outdoor unit, indoor unit with controller, and other indoor units. The AC number will be set at random.

When the slave units do not operate (when address cannot be set)

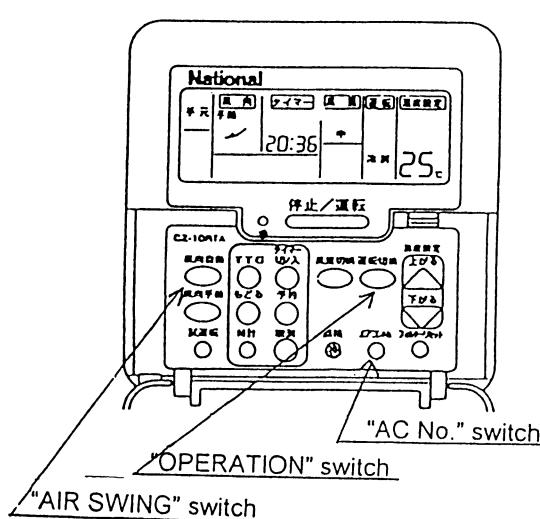

Reset the address as the following procedure:

1. After making sure that dip-switch No. 1 to 4 and No. 8 are OFF, stop the operation.
2. Push simultaneously the following switches: "AIR SWING", "OPERATION", and "AC No.". The address will be reset and new address will be set.

Important: The address for the Twin/Triple control cannot be reset, using the above mentioned procedure.

















Manual address setting (by dip-switch DSW1)

When you set the address manually, set the dip-switch of the PC board in the indoor unit as follow:

Master unit	Slave unit (Slave No. 1 of Triple)	Slave unit (Slave No. 2 of Triple)
No need to set address for the RC of the master unit The address for the master unit will be set in the unit with RC	DSW1 ON OFF 1 2 3 4 5 6 7 8 No. 8 ON, The others no change	DSW1 ON OFF 1 2 3 4 5 6 7 8 No. 1 and 8 ON, The others no change

Manual address setting (by dip-switch DSW1)

When you set the address manually, set the dip-switch of the PC board in the indoor unit as follow:

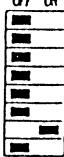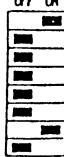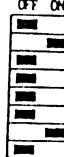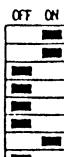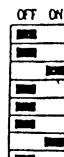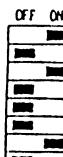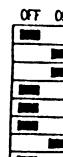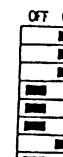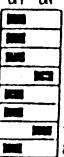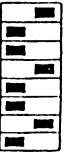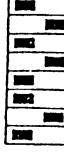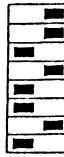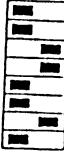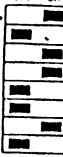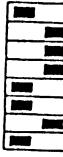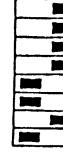Indoor unit No.	1	2	3	4	5	6	7	8
Dip-switch on the PCB of the indoor unit (DSW1)								
	No change	No.1 ON	No.2 ON	No.1, 2 ON	No.3 ON	No.1, 3 ON	No.2, 3 ON	No.1,2,3 ON
Indoor unit No.	9	10	11	12	13	14	15	16
Dip-switch on the PCB of the indoor unit (DSW1)								
	No.4 ON	No.1, 4 ON	No.2, 4 ON	No.1,2,4 ON	No.3, 4 ON	No.1,3,4 ON	No.2,3,4 ON	No.1,2,3,4 ON

Procedure for delete of memory at twin / triple control system.

1. Set the 'off' position for main power supply switch .
2. Set the 'on' position for No.8 pin of dip switch (DSW1) on indoor unit P.C.board.
3. Take main power supply switch 'on' for one minutes, and then main power supply switch off.
4. Set the 'off' position for No.8 pin of dip switch(DSW1).

Procedure for delete of memory at group control system.


1. Set the 'off' position for main power supply switch .
2. Set the 'on' position for No.1 pin to No.4 pin of dip switch (DSW1) on indoor unit P.C.board.
(No.8 pin of dip switch (DSW1) should be 'off' position)
3. Take main power supply switch 'on' for one minutes, and then main power supply switch off.
4. Set the 'off' position for No.1 ,No.2, No.3 and No.4 pin of dip switch(DSW1).

(Important notice)

Above procedure is for delete of memory on indoor unit P.C. board. And it is not for Address reset .

Indoor unit P.C.board layout.

Below drawing has showing the location of dip switch 1(DSW1) on the indoor unit P.C. board.

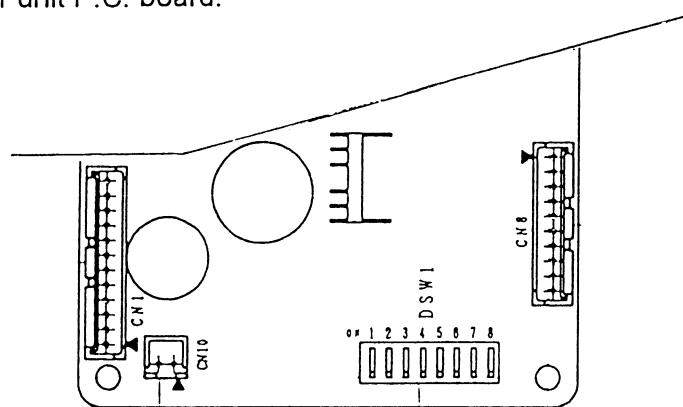

Dip switch1(DSW1). [to use for manual setting]

■Emergency operation

●Emergency operation of outdoor unit

Emergency operation can be carried out by setting the DSW1 switch on the printed circuit board inside the outdoor unit to the EMERGENCY position. However, emergency operation is only carried out when an abnormality is detected by the indoor/outdoor temperature thermistors.

The resistance values of each thermistor are measured as shown in the table below to determine if there is an abnormality.


<Thermistor resistance table>

Temperature	Resistance value (kΩ) ±5%	
	Room temperature thermistor	Pipe temperature thermistor
-20°C	205.8	197.8
-10°C	114.6	111.9
-5°C	87.3	85.4
0°C	67.0	65.8
5°C	51.8	51.0
10°C	40.4	39.9
15°C	31.7	30.7
20°C	25.1	25.0
25°C	20.0	20.0
30°C	16.1	16.0
40°C	10.4	10.6
50°C	6.9	7.1
60°C	4.7	4.9
70°C	—	3.5
80°C	—	2.5
90°C	—	1.8
100°C	—	1.4

The pipe temperature thermistor resistance values are the same for the indoor and outdoor units.

<When a thermistor abnormality is judged to have occurred>

- Set only the thermistor which shows an abnormality to the condition shown in the table below to carry out emergency operation.

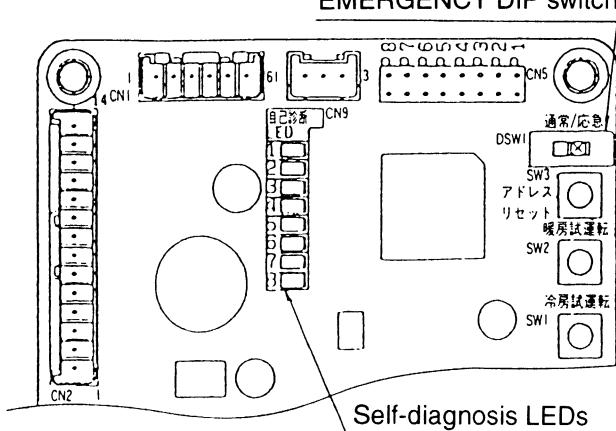

	Thermistor	Cooling mode	Heating mode
Indoor unit	Room temperature	Fixed at 25°C	
	Room temperature	Shorted	Open

	Thermistor	Cooling mode	Heating mode
Outdoor unit	Discharge temperature	Open	Shorted
	Heat exchanger outlet temperature	Shorted	Open


- Refer to the circuit diagram for the connection locations for each thermistor.

- If there is an abnormality in the room temperature thermistor, the temperature will be fixed at 25°C regardless of the remote control unit display.

- NOTE:**
- Any abnormalities detected by the temperature thermistors are ignored during emergency operation, so that long-term operation in this mode should be avoided.
 - After emergency mode operation has been completed and normal operation is to be resumed, turn the power supplies for the indoor and outdoor units off and return the DIP switch to the NORMAL position.
 - Self-diagnosis LEDs 4 to 6 will flash during emergency operation.

■ Description of basic Functions

1 Cooling mode operation time chart

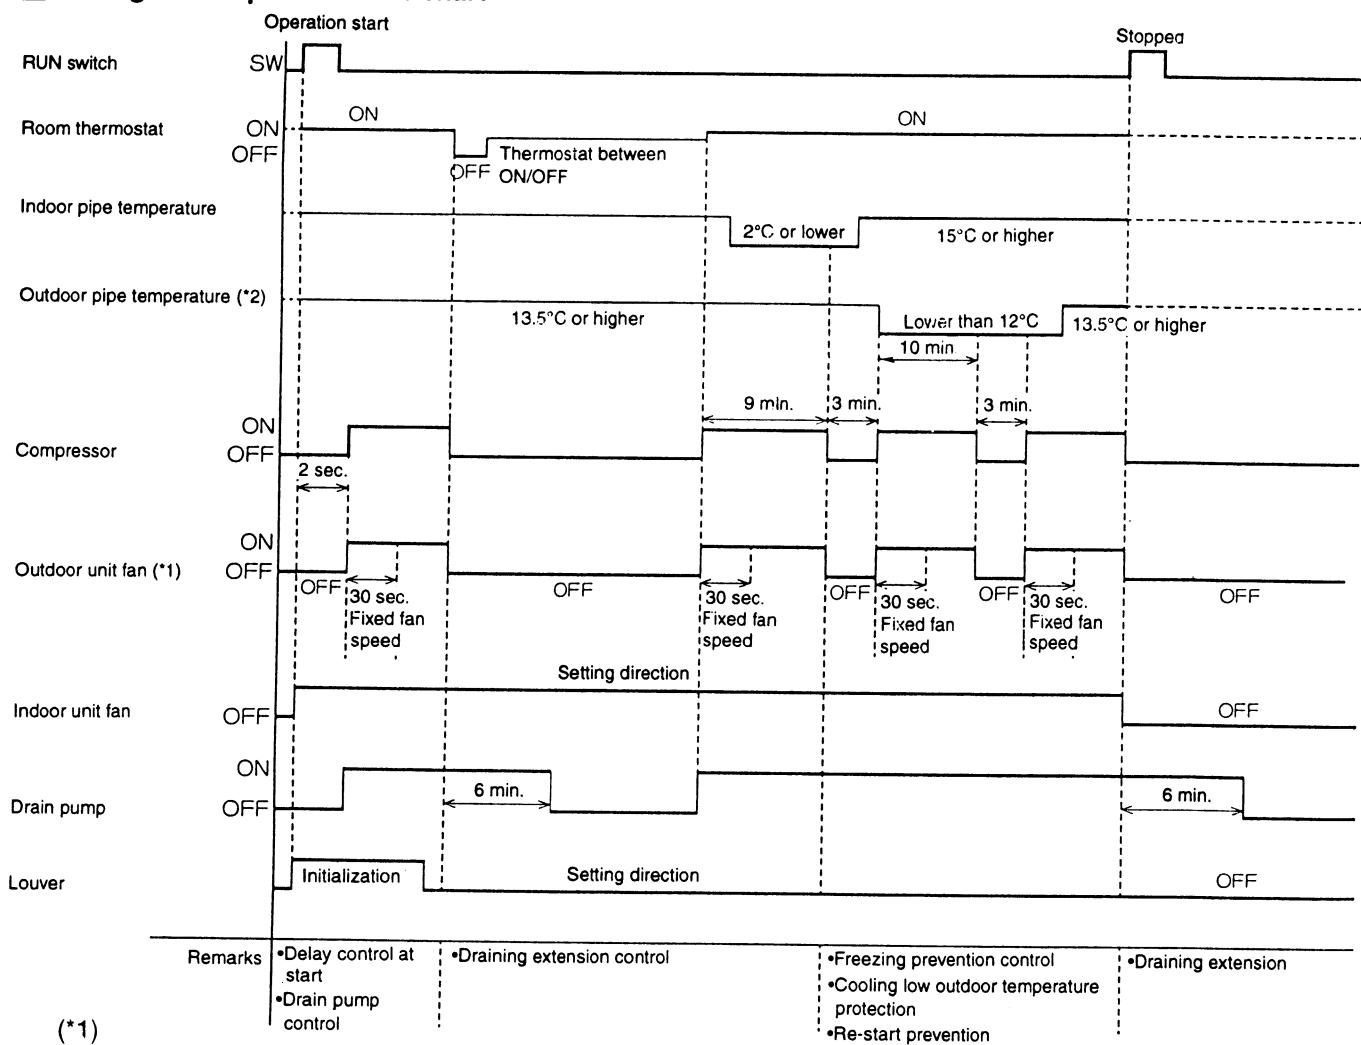

Outdoor unit fan start control during cooling

At the start of cooling mode and drying mode operation, the outdoor unit heat exchanger outlet temperature is detected in order to set the fan speed.

Operation is carried out at the fan speed detected for 30 seconds.

Heat exchanger outlet temperature detected (T)	Outdoor unit fan start speed
$T < 0^{\circ}\text{C}$	SUPER LOW
$0^{\circ}\text{C} \leq T < 10^{\circ}\text{C}$	LOW
$10^{\circ}\text{C} \leq T < 20^{\circ}\text{C}$	MEDIUM
$20^{\circ}\text{C} \leq T < 25^{\circ}\text{C}$	HIGH
$25^{\circ}\text{C} \leq T$	SUPER HIGH

After 30 seconds, the heat exchanger outlet temperature is detected and the outdoor unit fan speed is changed automatically.

(*2)

Cooling low outdoor temperature protection

When the heat exchanger outlet temperature drops to less than 12°C for a continuous period of 10 minutes, the outdoor unit stops running.

This is canceled after 3 minutes (re-start prevention)


- Remote controller displays and indoor unit operation continue during this time.
 - The 10-minute countdown is cleared if the compressor stops or if the temperature at the outdoor unit outlet rises to 13.5°C or higher.

② Drain pump control


1. Basic operation

During cooling mode, dry mode or defrost mode operation, the drain pump turns on when the compressor turns on.(The drain pump turns on during freezing prevention control.)

- When the thermostat turns off and the compressor then turns off, the drain pump continues operating for 6 minutes and then stops.

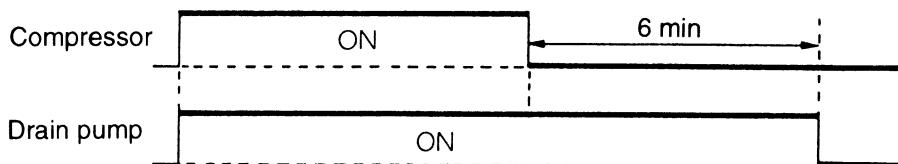

- If the drain pump is running when operation stops or when the operating mode is changed, the drain pump continues operating for 6 minutes and then stops.

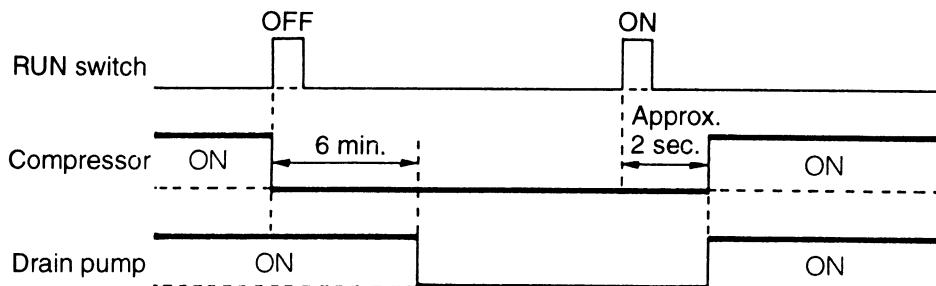

2. Drain water problems

① Starting

If it is detected that the float switch is off, the drain pump turns on for 5 minutes. If the float switch is still found to be off after these 5 minutes have passed, or if the float switch is found to turn off twice during a 30-minute period, a drain water error is generated.


② Normal operation

After extension control (louver initialization and pre-heating cancel), the indoor units and outdoor units stop running. LED2 on the indoor unit self-diagnosis LED panel will flash, and "CHECK" will appear on the wired remote controller display.

The error code (F15-01) can be displayed by pressing the CHECK switch.

When the wireless remote controller is being used, the RUN indicator on the receptor will flash.

<If the float switch does not operate again after turning off>

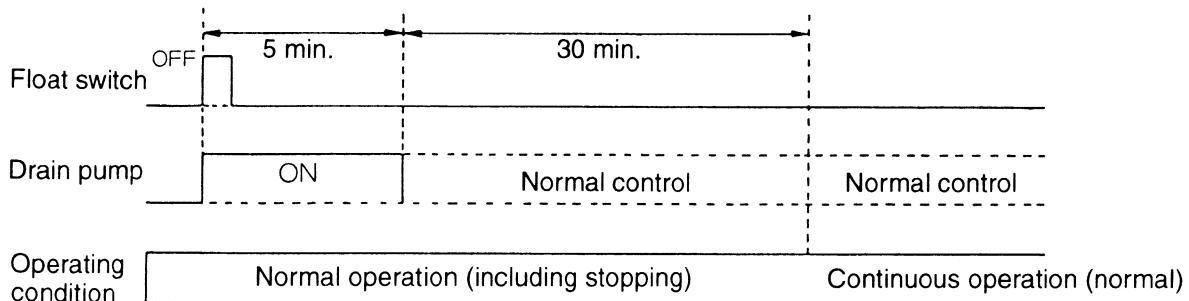


② Drain pump control


1. Basic operation

During cooling mode, dry mode or defrost mode operation, the drain pump turns on when the compressor turns on.(The drain pump turns on during freezing prevention control.)

- When the thermostat turns off and the compressor then turns off, the drain pump continues operating for 6 minutes and then stops.

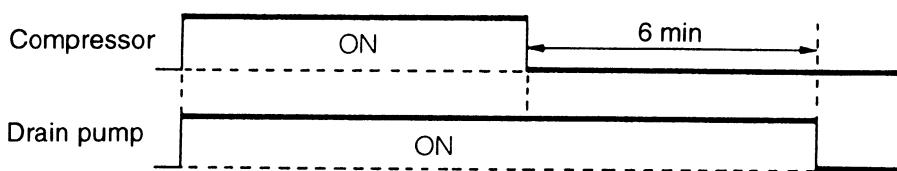

- If the drain pump is running when operation stops or when the operating mode is changed, the drain pump continues operating for 6 minutes and then stops.

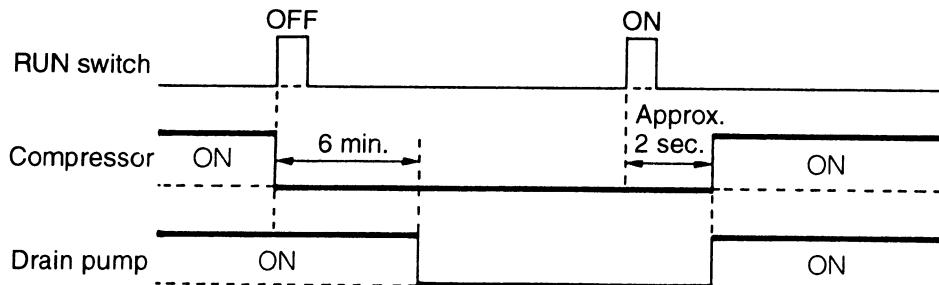

2. Drain water problems

① Starting

If it is detected that the float switch is off, the drain pump turns on for 5 minutes. If the float switch is still found to be off after these 5 minutes have passed, or if the float switch is found to turn off twice during a 30-minute period, a drain water error is generated.


② Normal operation

After extension control (louver initialization and pre-heating cancel), the indoor units and outdoor units stop running. LED2 on the indoor unit self-diagnosis LED panel will flash, and "CHECK" will appear on the wired remote controller display.


The error code (F15-01) can be displayed by pressing the CHECK switch.

When the wireless remote controller is being used, the RUN indicator on the receptor will flash.

<If the float switch does not operate again after turning off>

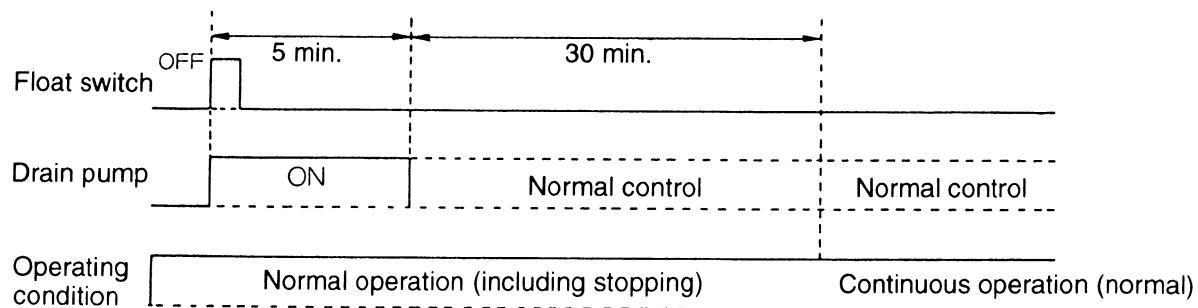

④ Heating mode operation time chart

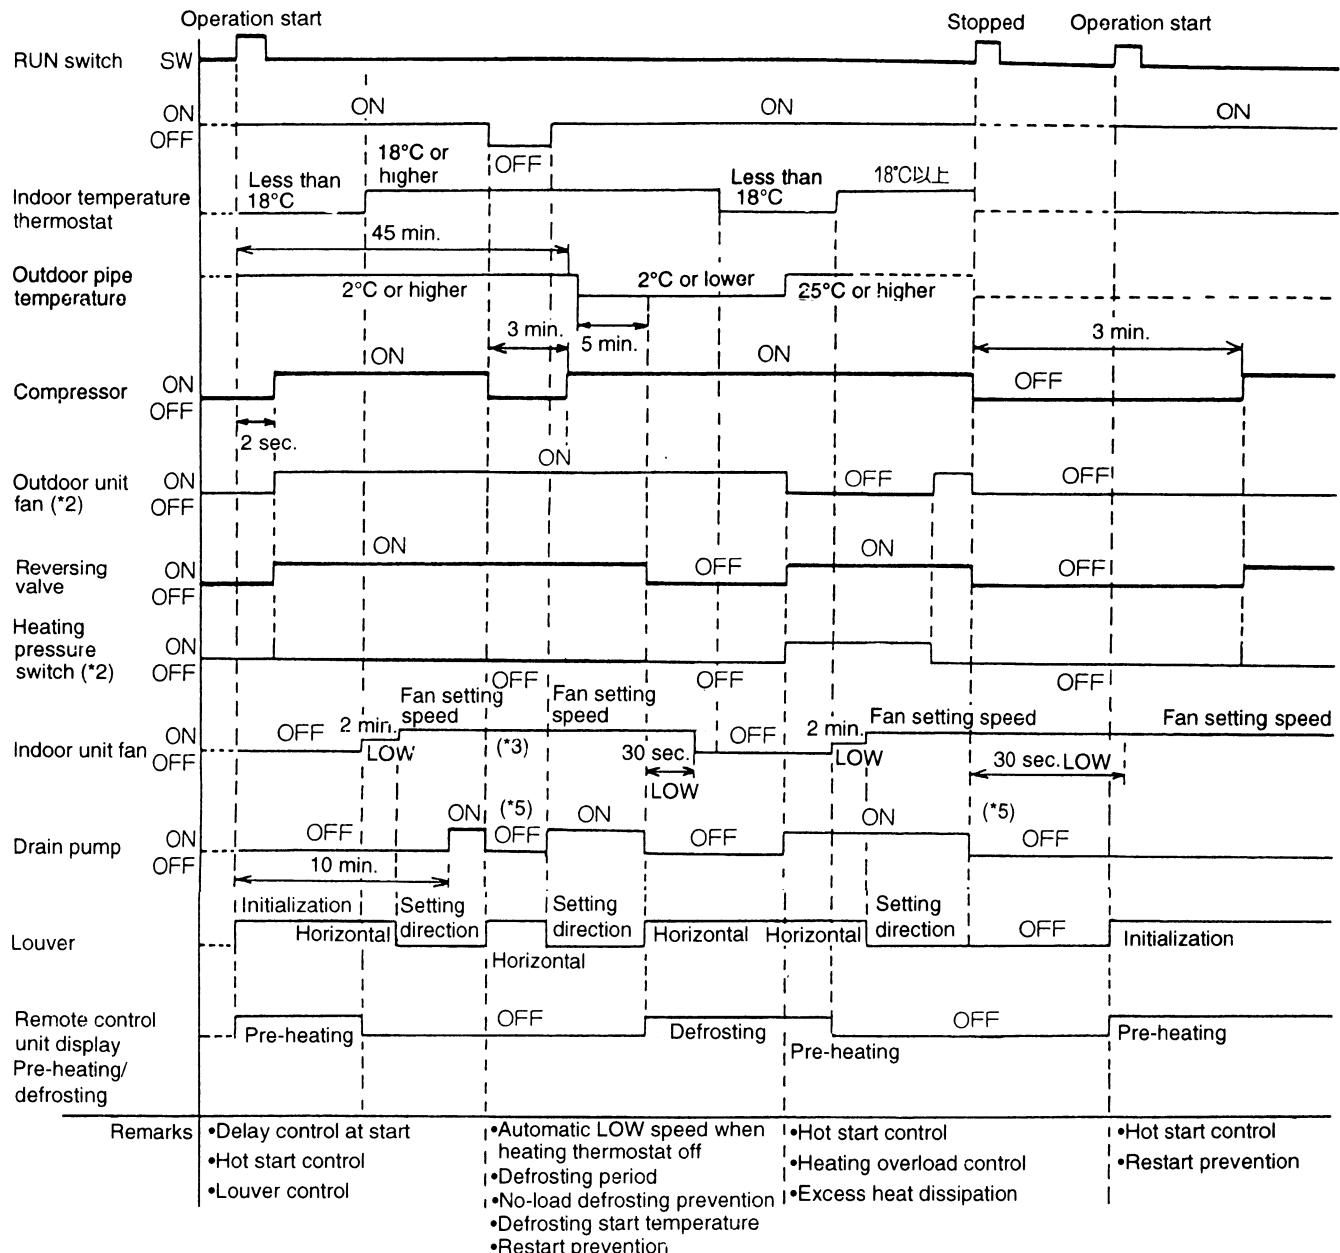

(*) Refer to "[6] Indoor unit fan control when thermostat is off during heating mode operation"

(*4) Refer to "9 Indoor thermostat characteristics


(*5) Refer to "[2] Drain pump control"

(*2)

Outdoor unit fan control during heating mode operation

Under conditions when the compressor is on during heating mode operation (except during defrosting and when the liquid bypass valve is on), the outdoor unit fan is controlled by means of input (CN2) indicating whether the contact of the heating pressure switch on the outdoor unit circuit board is open or closed.
(At the start of heating mode operation, the fan operates at HI speed.)

Heating pressure switch contact	Outdoor unit fan operation
ON (open) - OFF (closed)	One step down from fan speed before stopping
ON (open)	Stopped

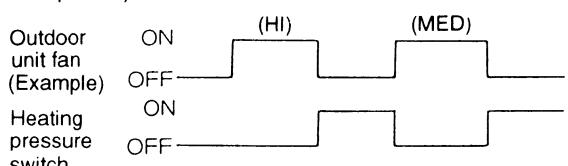

The heating pressure switch turns on at 2.35 MPa and off at 1.96 MPa.

⑤Hot starting

1. When heating mode operation starts

①Start

Hot start control commences when heating mode operation starts.

②Operation

"PREHEAT" appears on the remote controller display. (Other displays remain unchanged.)

At the indoor unit, the indoor unit fan stops. In addition, during hot starting, the louver stays at the horizontal position (angle 0°).


③Cancellation

After 1 minute has passed since heating mode operation started, or if the compressor has turned on, hot starting is canceled when the temperature detected by the indoor unit pipe temperature sensor is 18°C or higher.


After cancellation, the "PREHEAT" display on the remote controller disappears and the louver operation returns to the previous setting.

(However, for 2 minutes after cancellation, the indoor unit fan operates at LOW speed, and then returns to the previous setting.)

<When hot start operation is canceled by temperature>

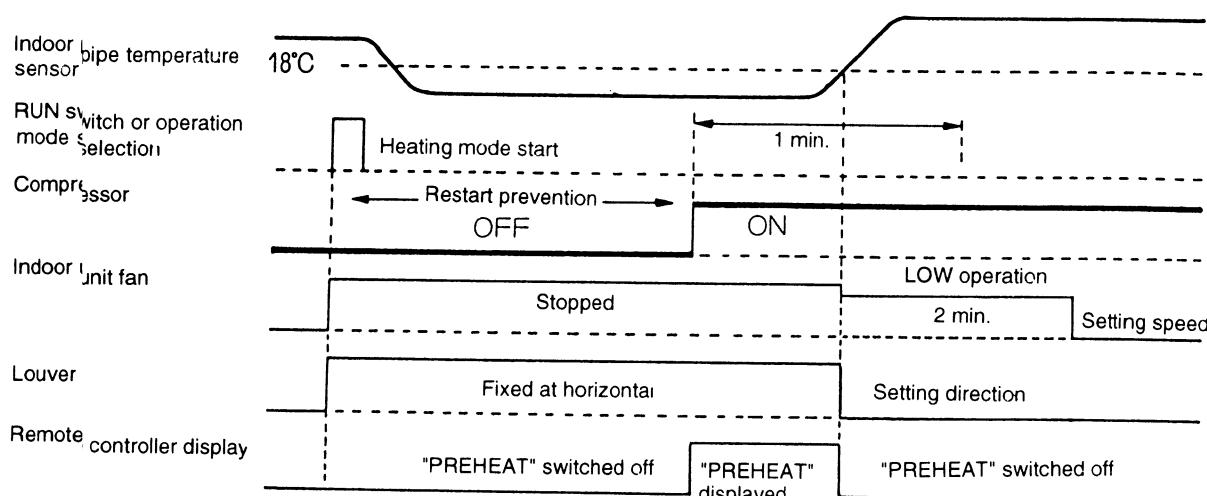

<When hot start operation is canceled by time>

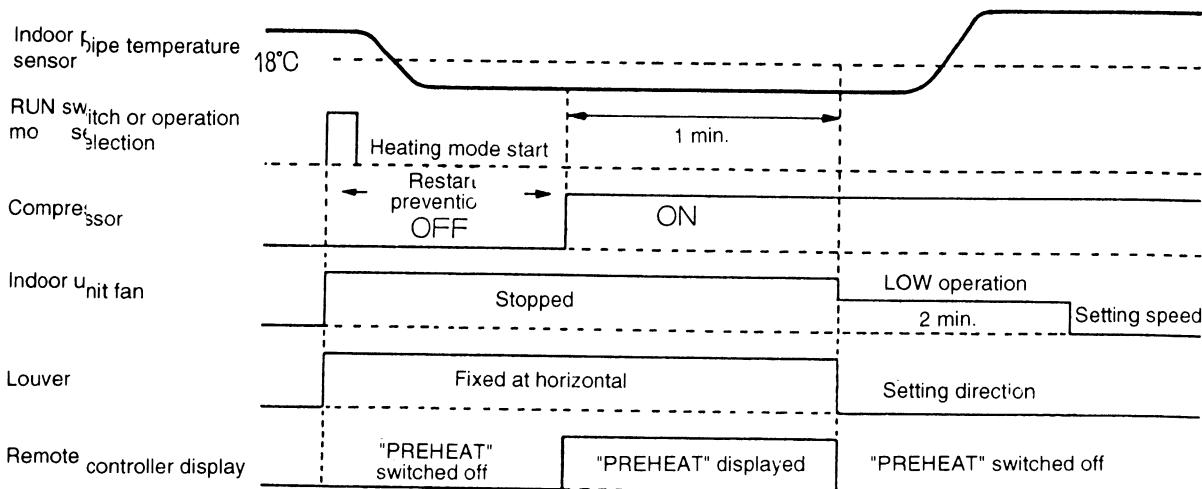

2. When defrosting is complete

①Start

Hot start control commences when defrosting is complete.

②Operation

"PREHEAT" appears on the remote controller display. (Other displays remain unchanged.)

At the indoor unit, the indoor unit fan stops. In addition, during hot starting, the louver stays at the horizontal position (angle 0°).


③Canceling

Hot starting is canceled when the temperature detected by the indoor unit pipe temperature sensor is 18°C or higher, or after a maximum 1 minute has passed since defrosting was completed.


After cancellation, the "PREHEAT" display on the remote controller disappears and the louver operation returns to the previous setting.

(However, the indoor unit fan operates at LOW speed for 2 minutes after cancellation, and then returns to the previous setting.)

<When hot start operation is canceled by temperature>

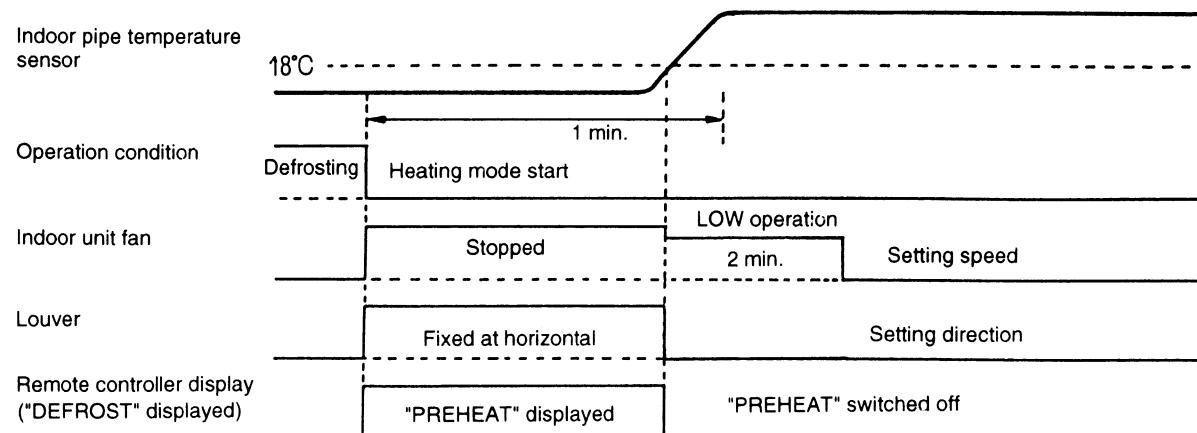


<When hot start operation is canceled by time>

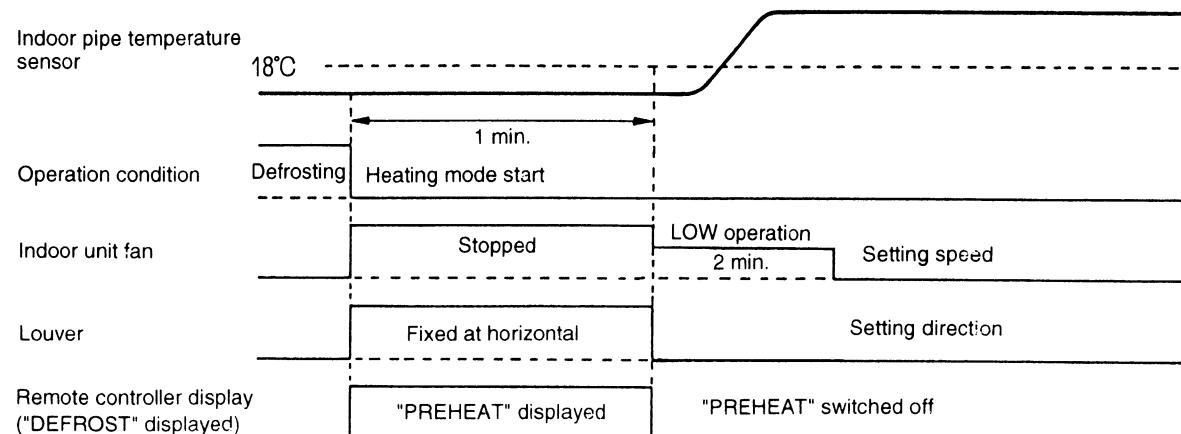

[6] Indoor unit fan control when thermostat is off during heating mode operation

< >

When the thermostat of the indoor unit turns off during heating mode operation, the indoor unit fan operates for 2 minutes at LOW and then stops. In addition, 5 minutes after the thermostat of the indoor unit turns off, the indoor unit fan again runs at LOW for 10 seconds, and at 3-minute intervals after that it switches back to LOW operation for 10 seconds.

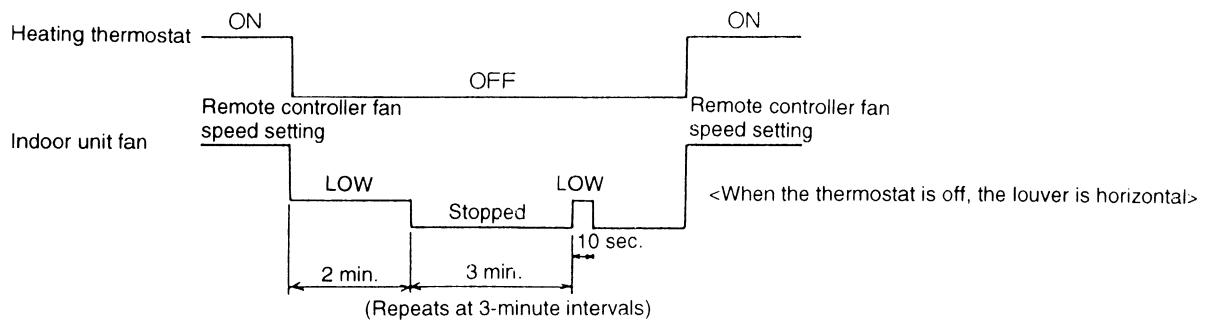


[7] Excess heat dissipation for indoor unit

The indoor unit fan continues operating for 30 seconds after heating mode operation turns off in order to dissipate excess heat.

- ① When heating mode operation has stopped
(LOW operation for 30 seconds)
- ② When operation is set to a mode other than heating by means of the OPERATION MODE switch
- ③ If operation starts again during the 30 seconds mentioned in (1) above
(The fan operates at LOW speed for the remainder of the 30 seconds in (1), and then hot start commences.)

⑧ Defrost mode operation time chart

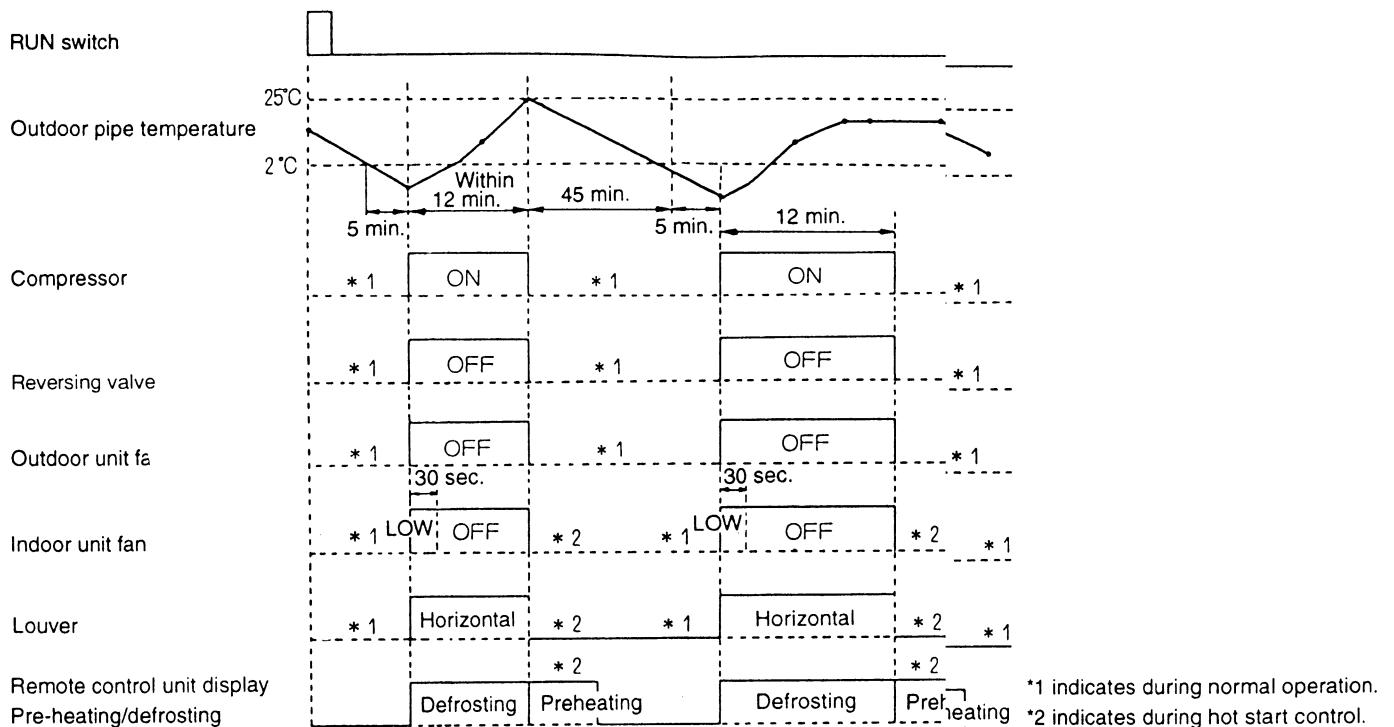

1. Start and completion of defrosting

① Start

During heating mode operation (including automatic heating), after the 45-minute defrosting cycle time has passed, defrosting starts if the temperature detected by the outdoor unit heat exchanger outlet sensor is 2°C or lower for a continuous 5-minute period.

However, if the outdoor unit fan is stopped, the start of defrosting will be delayed by 5 minutes.

The defrosting cycle is 50 minutes from the start of heating mode operation.

② Completion

Defrosting mode operation stops 12 minutes after it starts, or if the temperature detected by the outdoor unit heat exchanger outlet sensor is 25°C or higher.

After defrosting is complete, hot starting commences.

③ Forced defrosting

If P8 on the outdoor unit circuit board is shorted while the compressor is on during heating mode operation and the temperature detected by the outdoor unit heat exchanger outlet sensor is 25°C or lower, defrosting is carried out regardless of the current starting conditions.

2. Operation

① During defrosting, the outdoor unit turns on the compressor and turns off the outdoor unit fan and the reversing valve.

② The indoor unit fan operates at LOW for 30 seconds after defrosting starts. After this, the indoor unit fan turns off until defrosting is complete.

(During defrosting, the louver of the indoor unit stays at the horizontal.)


⑨ Indoor thermostat characteristics

1. Thermostat characteristics during cooling and heating modes


Operation mode	Setting temperature (To)	Room temperature (°C)		
		Operation	Differential	
			2.0K	4.0K
Cooling	16	O N	18.0	_____
		O F F	16.0	_____
	31	O N	33.0	_____
		O F F	31.0	_____
Heating *1	16	O N	18.0	20.0
		O F F	20.0	22.0
	29~31 *1(27~31)	O N	31.0	31.0
		O F F	33.0	33.0

*1 If jumper wire J3 on the indoor unit circuit board is disconnected, the thermostat characteristics during heating become 2 K or higher.

Thermostat characteristics during cooling and heating modes

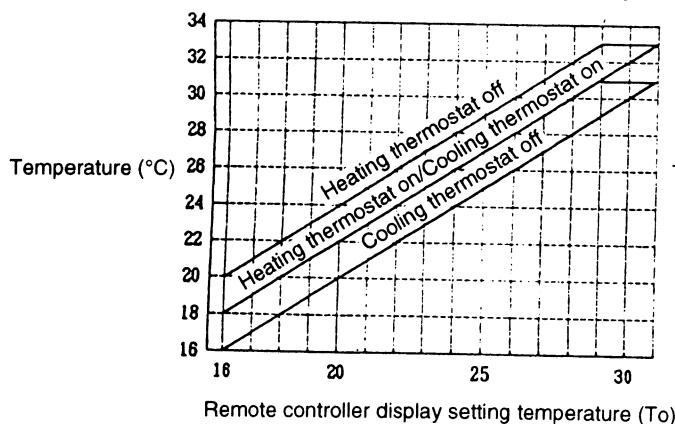

Thermostat characteristics during heating mode (when jumper wire J3 is disconnected)

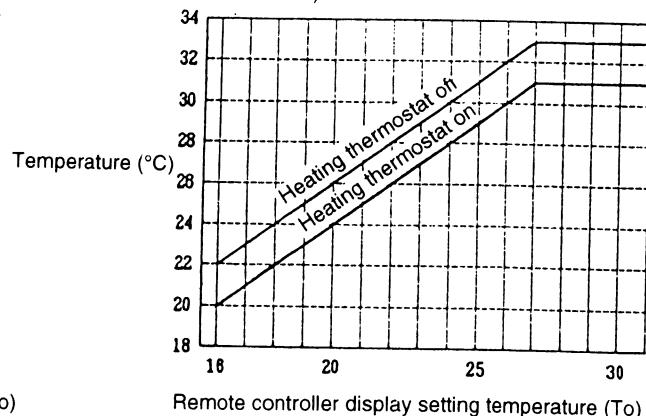

NOTE: If the remote control unit display setting temperature (To) is 29°C or higher, the heating thermostat turns on when the room temperature is 31°C.

2.Thermostat characteristics during dry mode

During dry mode operation, cooling mode operation is carried out in accordance with the indoor temperature as shown in the table below.

Mode	Indoor Temperature (°C) T	Operation details	
①	$T \geq 28$	Cooling thermostat on	LO, Louver horizontal
*②	$28 > T \geq 25$	Cooling thermostat on 10 min./fan 5 min., alternate operation	LO, Louver horizontal
*③	$25 > T \geq 21$	Cooling thermostat on 5 min./fan 10 min., alternate operation	LO, Louver horizontal
④	$21 \geq T$	Cooling thermostat off	LO, Louver horizontal

(Differential is 1.5 K)

*When modes ② and ③ are active, dry mode operation starts when the cooling thermostat turns on.

When modes ② and ③ have been stopped, the 10 min./5 min. times have no relevance. However, if the indoor temperature is less than or equal to the remote control unit setting temperature, mode ④ is forcibly activated.

3.Thermostat characteristics during automatic changeover operation

①Settings at the start of automatic changeover operation

When operation starts, or when operation changes from some other mode to automatic changeover mode, it starts at the temperature characteristics given in the table below.

Indoor temperature (T) °C	Initial setting
$T < \text{remote controller display temperature} - 2$ (°C)	Heating mode operation, thermostat on
Remote controller display temperature $\geq T$	Heating mode operation, thermostat off (fan mode operation)
Remote controller display temperature $\leq T$	Cooling mode operation, thermostat off (fan mode operation)
Remote controller display temperature $+ 2$ (°C) $< T$	Cooling mode operation, thermostat on

2 (°C): Thermostat differential

②Thermostat characteristics when switching between cooling and heating mode operation

Switching between cooling mode and heating mode operation is carried out as shown in the table below.

However, during automatic operation, the operation does not change again until 10 minutes after the thermostat has switched off in either cooling mode or heating mode.

(The 10-minute timer is canceled when operation is changed to another mode or when operation stops and the thermostat turns on.)



Indoor temperature (T) °C	Operation switching
$T \geq \text{Remote controller display temperature} + 3$ (°C)	Heating mode → Cooling mode
$T \leq \text{Remote controller display temperature} - 3$ (°C)	Cooling mode → Heating mode

③ Thermostat characteristics during cooling mode and heating mode operation

The thermostat on/off characteristics in both operation modes are given in the table below.

Operation mode	Indoor temperature (T) °C	Operation
Cooling mode	$T > \text{Remote control unit display temperature} + 2$ (°C)	Cooling thermostat on
	$T \leq \text{Remote control unit display temperature}$	Cooling thermostat off
Heating mode	$T < \text{Remote control unit display temperature} - 2$ (°C)	Heating thermostat on
	$T \geq \text{Remote control unit display temperature}$	Heating thermostat off

Indoor temperature thermostat characteristics during automatic changeover operation

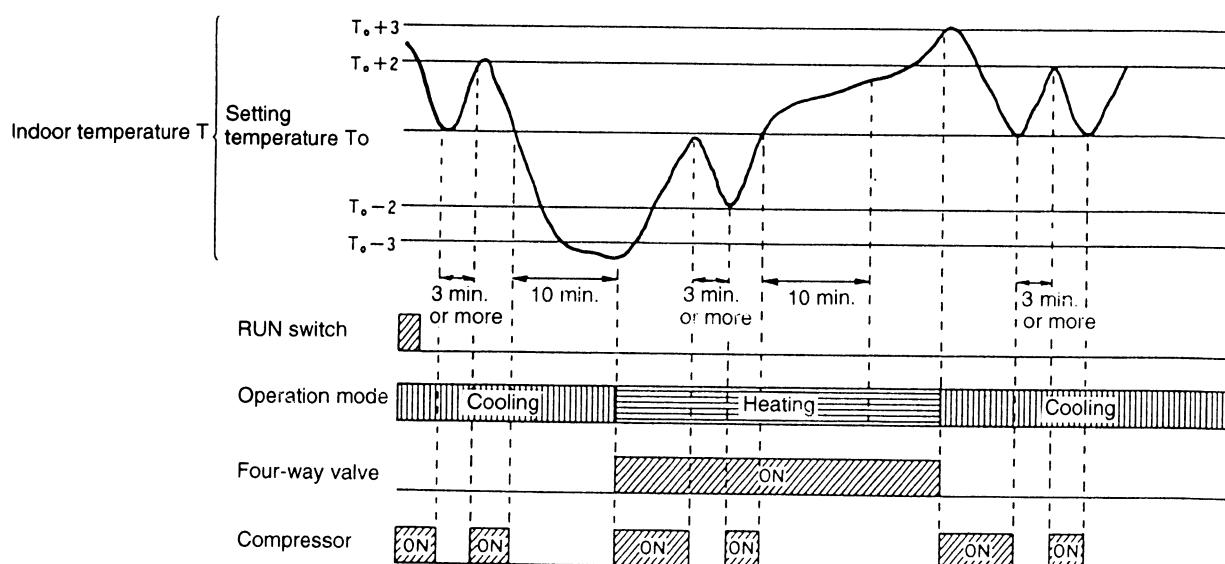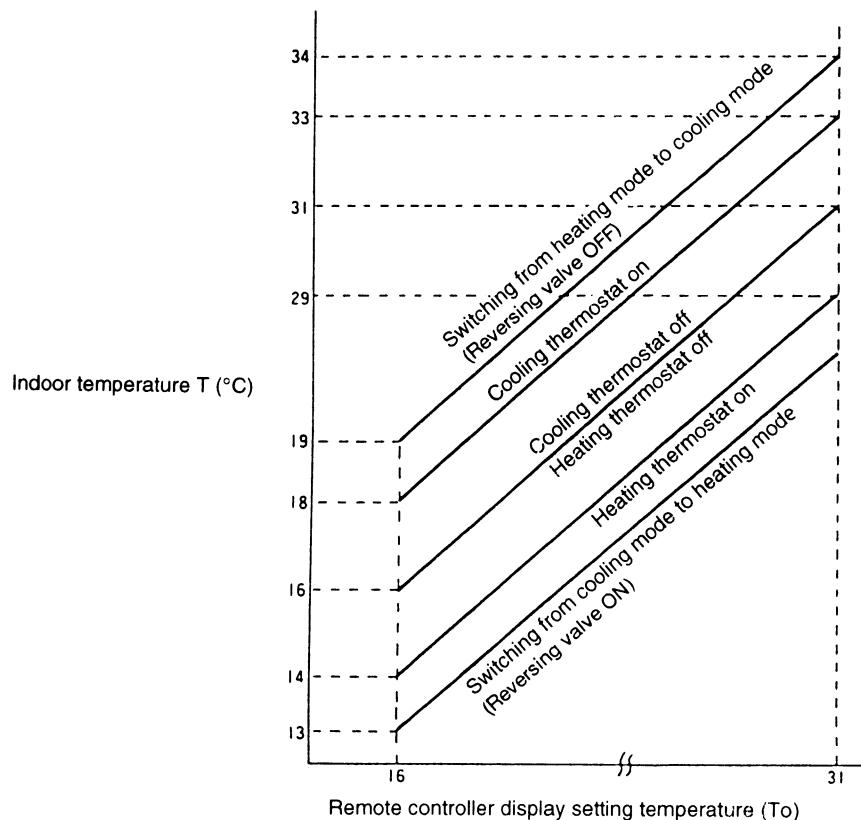

Automatic cooling/heating mode operation time chart

10 Indoor unit fan control

- Fixing at LO, MED or HI

When LO, MED or HI is set, the relay switches and operation is carried out at that setting.

- Automatic fan speed

When set to AUTO, the indoor unit fan operation changes as shown in the table below.


(Indoor temperature) – (Setting temperature) (Units: K)

	HI	MED	LO
Cooling mode	+ 3 or higher	+ 1.5 ~ 3	Less than + 1.5
Heating mode	- 3 or lower	- 1.6 ~ - 3	More than - 1.5
Fan mode	MED irrespective of temperature		

11 Forced operation during restart


The compressor will not stop operating for 3 minutes after cooling mode or heating mode operation starts, even if the indoor unit thermostat turns off.

(However, the compressor will stop operating during this time if the indoor unit air intake temperature exceeds 33°C during heating mode operation or if the indoor unit air intake temperature drops below 16°C during cooling mode operation.)

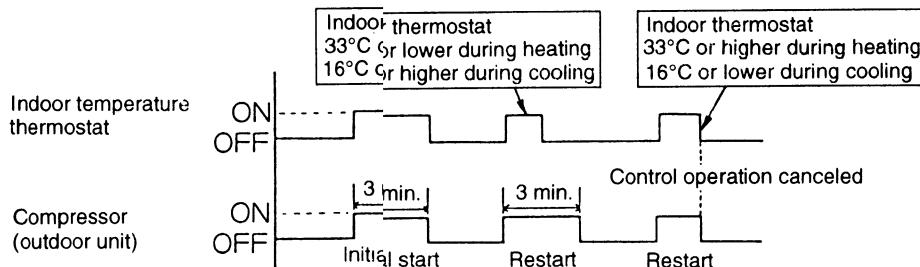**12 Louver control (models with louver)**

- When main power is turned on

When the power is turned on, indoor unit louver position detection is carried out twice and then the indoor unit louver stops.

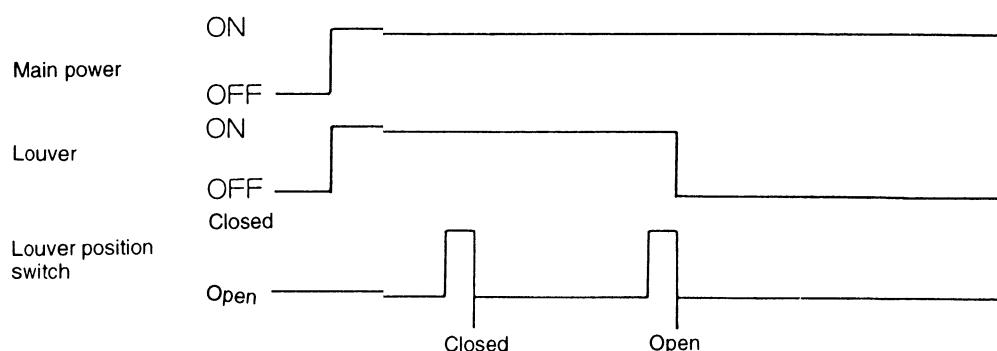

- At start of operation

When the RUN switch is pressed to start operation, the louver moves through one full cycle, and then it swings automatically (if AUTO has been set using the remote controller) or moves to the setting angle (if MANUAL has been set using the remote controller).

- When operation stops

When the RUN switch is pressed to stop operation, the louver moves through one full cycle, and then stops in the down position, regardless of the remote controller setting.

- When thermostat is off

When operation is stopped by the indoor thermostat, the louver moves through one full cycle, and then stops in the horizontal position, regardless of the remote control unit setting.

[13]Outdoor unit fan excess heat dissipation control**①Start**

Carried out when the compressor switches from on to off (when the remote control unit is used to stop operation)

②Operation

The outdoor unit fan runs at SUPER HI speed for approximately 60 seconds and then stops.

[14]Discharge temperature control**①Operation**

When the discharge temperature sensor detects a temperature of 100°C or higher during cooling mode operation, the liquid bypass valve is turned on.

②Canceling

When the discharge temperature sensor detects a temperature of 70°C or lower, the liquid bypass valve is turned off.

[15]Emergency operation

When the emergency operation switch (DSW1) on the outdoor unit printed circuit board is set to the emergency setting, then emergency operation is enabled. This allows normal operation to continue, with all abnormalities other than a discharge temperature abnormality, high pressure abnormality or overcurrent abnormality being ignored.

[16]DIP switch settings**• Indoor unit printed circuit board (DSW1)**

No.	Setting type	Factory shipment	Remarks
1		OFF	
2	Group address setting	OFF	
3	(twin/triple address setting)	OFF	When group operation is being carried out using the remote controller, this address is set in order to control the order of starting for the indoor units.
4		OFF	(If No. 8 is ON, twin/triple address setting is carried out.)
5	Automatic restart	ON	When set to ON, operation after a power outage resumes at the settings which were in effect before the outage. (The backup time is semipermanent.)
6	Filter sign time	ON	When set to ON, the filter sign times can be set to 2,500 times.
7	Louver control	*ON	When set to OFF, louver control is disabled.
8	Twin/triple slave unit setting	OFF	When set to ON, the unit is designated as a slave unit.


■Short duct specification (Air outlet)

● Applicable models.....ALL MODEL



The air conditioner body is provided with air outlet knock-outs for duct connection. However, the connection of a short duct is possible on only one side, either left or right.

● Reasons for using a short duct

- 1.The use of a short duct will improve airflow distribution if there is an obstruction (such as a lighting fixture) or in a long, narrow room or an L-shaped room.

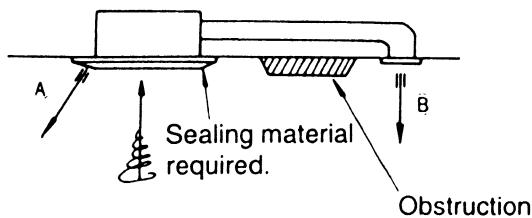


- 2.For air conditioning of two rooms simultaneously.
(In this type of installation, a return duct and other parts are also required.)

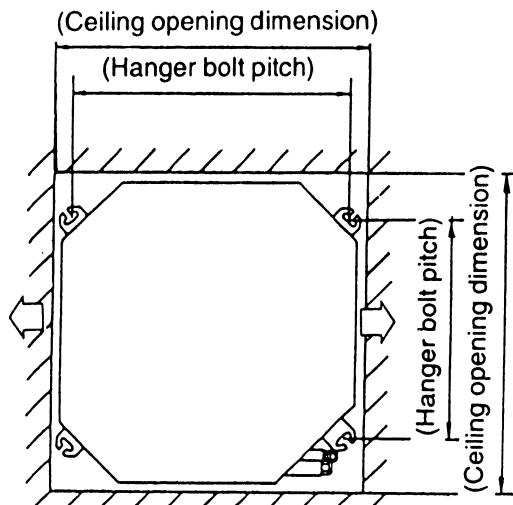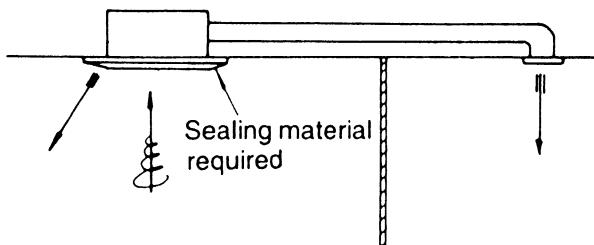


(A short duct can only be connected in one of the directions indicated by the arrows.)

● Possible opening dimensions for duct connection (1)

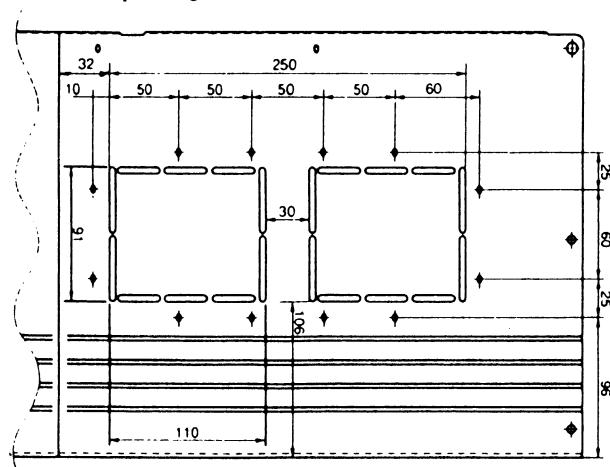

- CS-40U32JP, CS-50U32JP
- CS-71U32JP

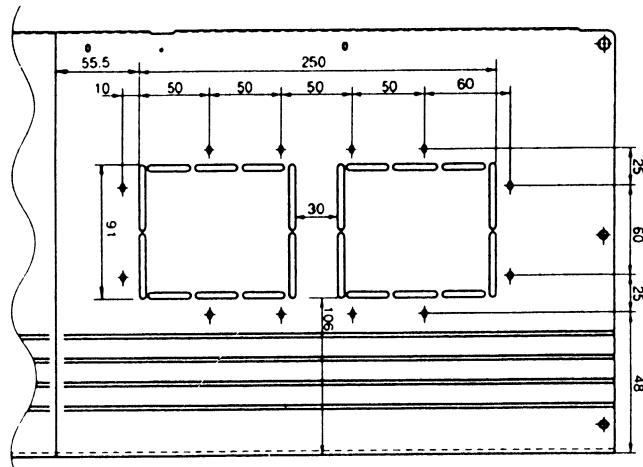

- CS-80U32JP
- CS-112U32JP

<Caution>

1. Refer to the blower specifications table when designing the duct.
2. Avoid using a short duct on which the air outlet grille can be completely closed, because freezing of the evaporator could occur if the grille is completely closed.
3. In order to prevent condensation from forming, when installing the short duct, be sure that there is sufficient thermal insulation and no leakage of cold air.

● INDOOR FAN PERFORMANCE CURVE (1)

<ONE WAY DUCT STYLE OF AIR BLOW SIDE>



((NOTE)THE BELOW PERFORMANCE CURVES SHOW THE PERFORMANCE OF ONE WAY AIR BLOW)

● CS-40U32JP, CS-50U32JP

NORMAL AIR VOLUME 13m³/min

● CS-71U32JP

NORMAL AIR VOLUME 17m³/min

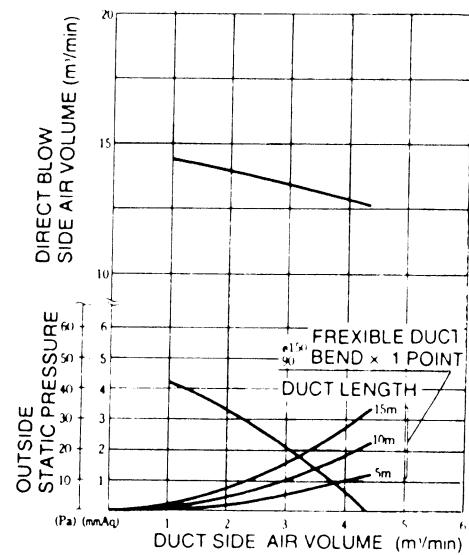
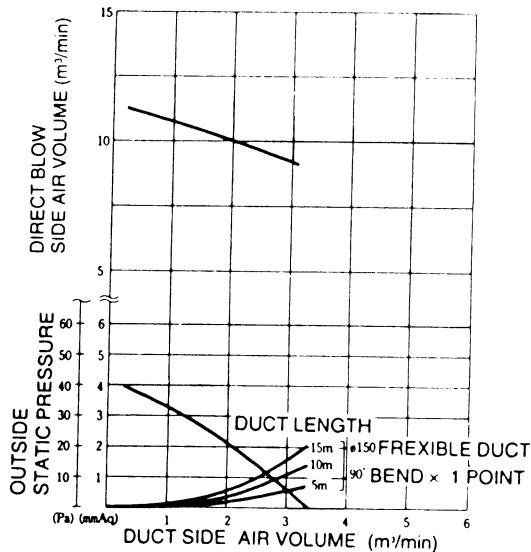


● CS-80U32JP


NORMAL AIR VOLUME 19m³/min

● CS-112U32JP

NORMAL AIR VOLUME 24m³/min

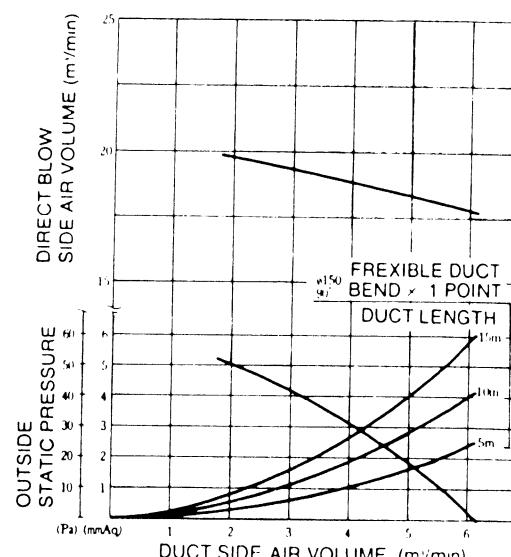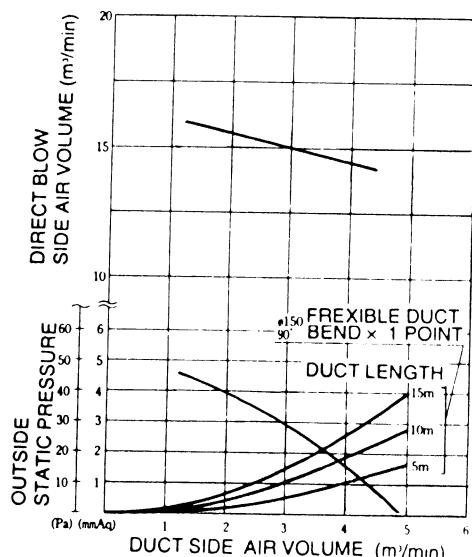

● Possible opening dimensions for duct connection (2)

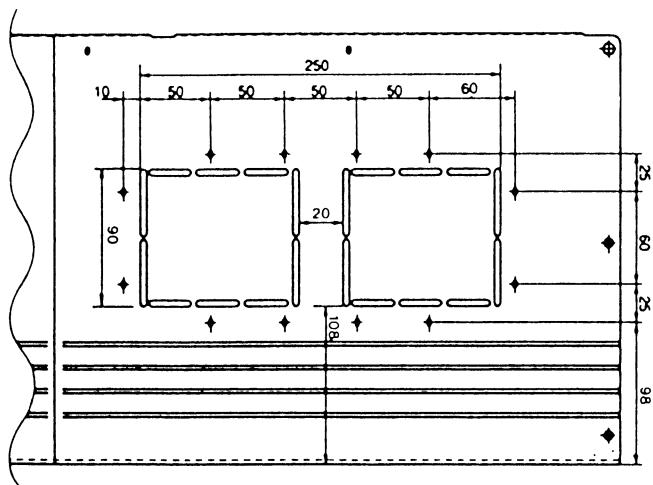

CS-140U32JP
CS-160U32JP



<Caution>

1. Refer to the blower specifications table when designing the duct.
2. Avoid using a short duct on which the air outlet grille can be completely closed, because freezing of the evaporator could occur if the grille is completely closed.
3. In order to prevent condensation from forming, when installing the short duct, be sure that there is sufficient thermal insulation and no leakage of cold air.

● INDOOR FAN PERFORMANCE CURVE (2)

● CS-140U32JP
NORMAL AIR VOLUME 30m³/min

● CS-160U32JP
NORMAL AIR VOLUME 34m³/min

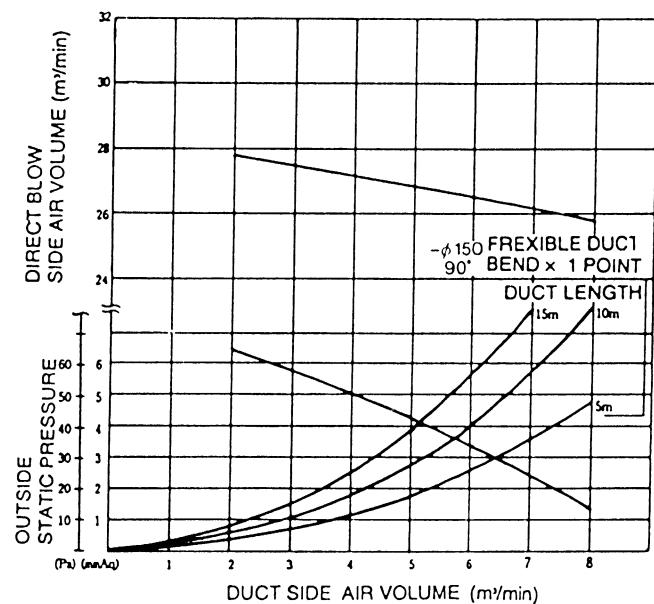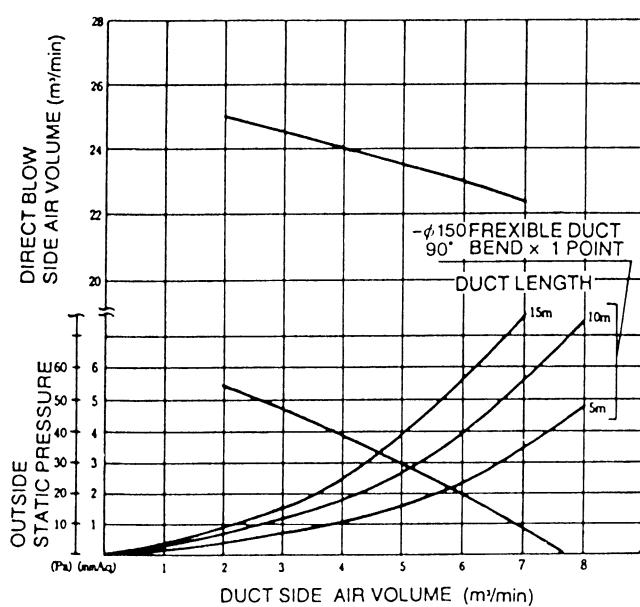

■ Fresh air intake hole

• Applicable models

CS-40U32JP, CS-50U32JP, CS-71U32JP, CS-80U32JP, CS-112U32JP


• Installation

1. Make a hole in the cabinet side to the position as shown below.
2. Make a hole in the relay box to the position as shown below.
3. Connect a fresh air duct with the cabinet side hole.

⟨Caution⟩


Keep the introduction of fresh air to within 20% of the total airflow.

Also provide a chamber section and use a booster fan.

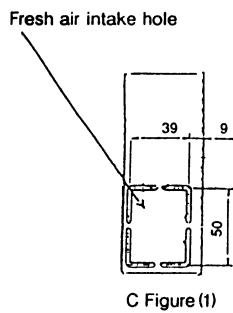


● Applicable model (1)

CS-40U32JP
CS-50U32JP
CS-71U32JP

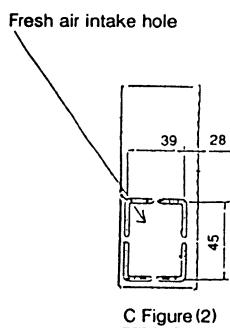


● Applicable model (2)

CS-80U32JP
CS-112U32JP

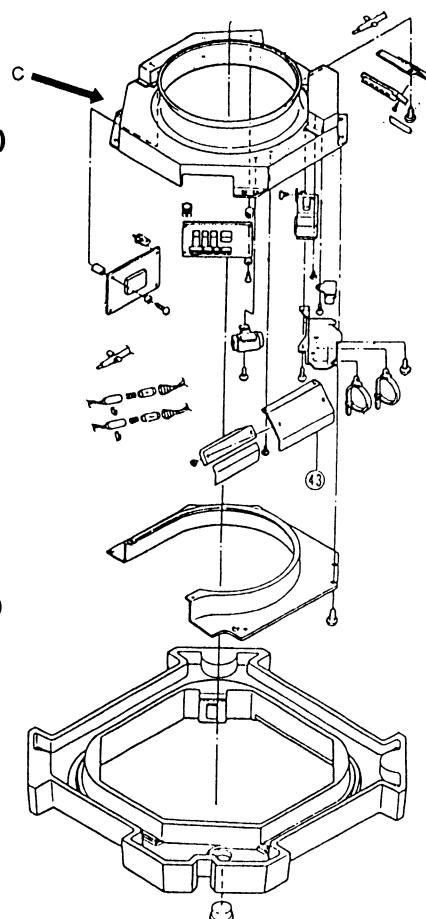

OUTSIDE DIMENSIONS (Example: CS-112U32JP)

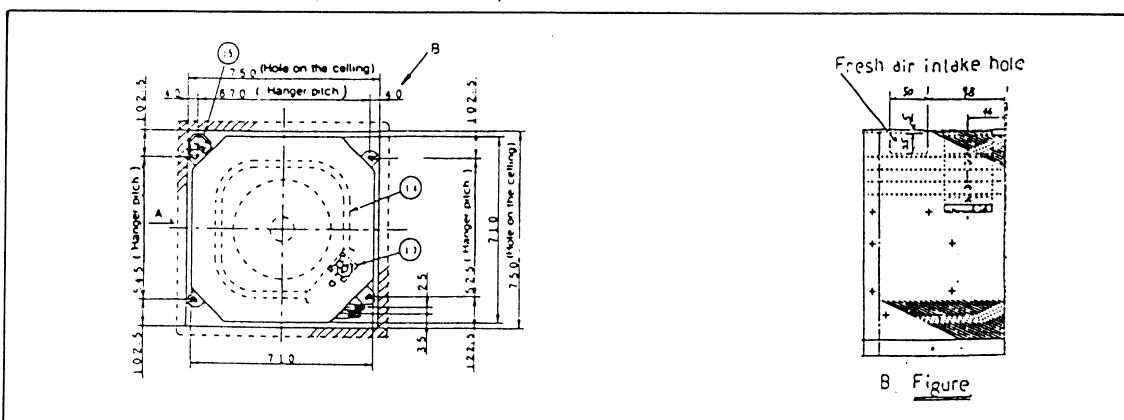


Installation instruction of the Spacer for fresh air

Before the installation, please read this instruction and install the Spacer correctly.

Specification

For four-way cassette type


●Figure 1

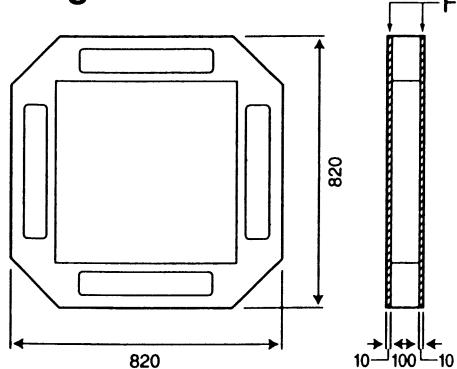

Model number of the Spacer	Applicable models
AD-CSSP01R	CS-140, 160U


Attached components

	Name of the components	Quantity
①	Spacer (Figure 1)	1
②	Fixing plates for the spacer	2
③	Screws to fix the spacer	Screws : 2
④	Screws to fix the decorative panel	Screws : 4 Washer : 4 Spring washer : 4

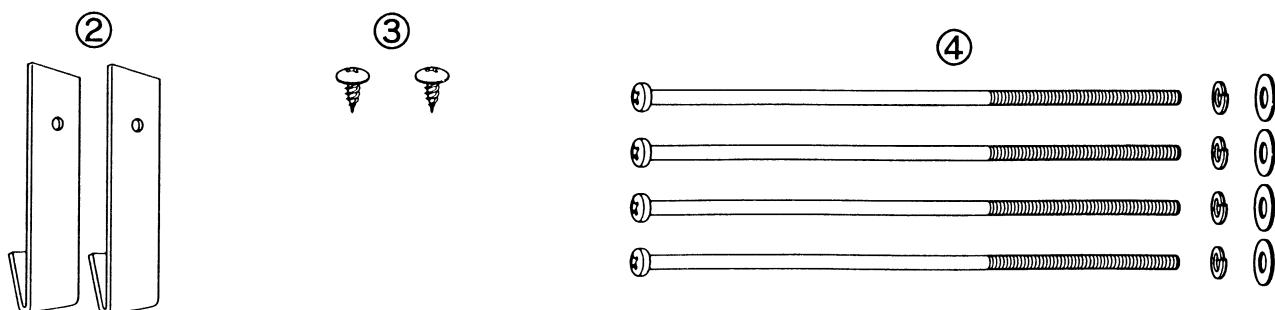

How to fix the spacer to the main body


● Figure 2

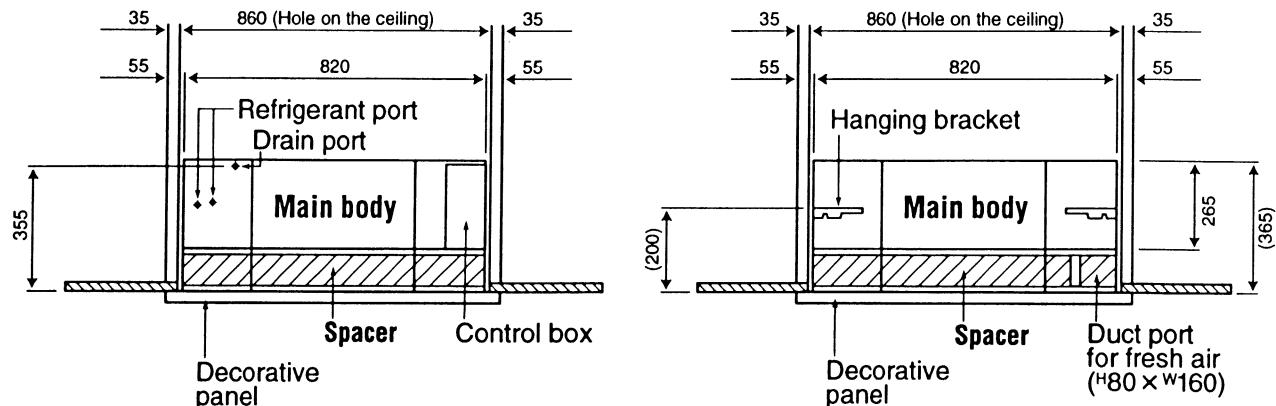


Hang the main body on the ceiling first, and then fix the spacer to the main body. Because the spacer is relatively fragile comparing with the main body.

1. Fix the spacer to the main body, using the 2 pieces of the fixing plate for the spacer (See No. 2 of the attached components). Watch the direction of the spacer. A label to instruct the direction is stacked on the spacer. There is a hole in each plate. Removing the screws fixed in the main body, fix the plates with the attached screws mentioned in the No. 3 of the same table, hooking the U part of the plate on the flame of the spacer (see the figure 3).
2. Fix the decorative panel to the spacer, using the attached screws mentioned in the No. 4 of the attached components. When the decorative panel is fixed, the cord of the louver motor should be put inside of the spacer. Adjust the torque of the screws not to make gap between the spacer and the main body, and between the spacer and decorative panel. If the screws are fixed too strongly, it is possible that the decorative panel is broken.
3. This is the end of the installation of the spacer. Check again whether there is not any gap between the main body, decorative panel, and spacer (above all, in the path of the air). If there are any, in the path of the air, it makes condensation water.
4. Connect the cord of the louver motor to the main body.
5. Fixing of adapter for fresh air duct. Adhere foam on the surface of the adapter which touches the spacer in order to seal well. Fix the adapter using four pieces of screw (the adapter, foam, and four pieces of screw are supplied locally).

● Figure 3

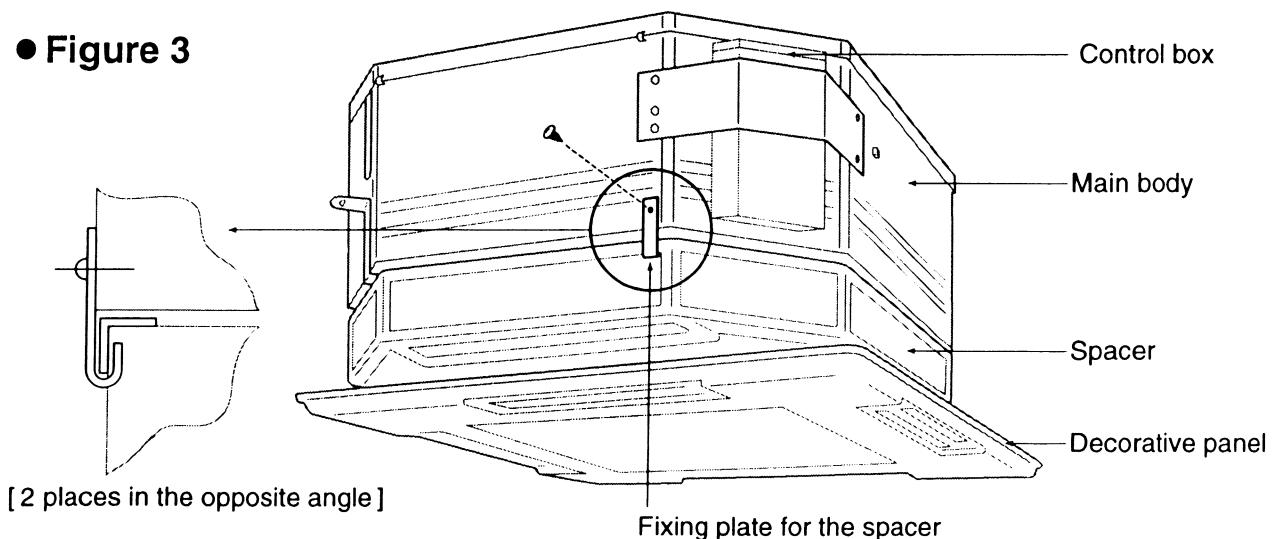

Exclusive Deodorizing Filter

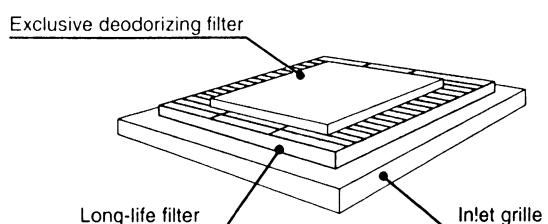


Product name	Applicable models
CZ-03FDUB01	CS-40U CS-50U CS-71U CS-80U CS-112U
CZ-06FDUB01	CS-140U CS-160U

Features

- Installs easily to existing Packaged Air Conditioners and has both deodorizing and disinfectant properties.
- Breaks down disagreeable tobacco odors at their sources, and enhances the deodorizing effectiveness from ultra-violet light.

Deodorizing Effectiveness

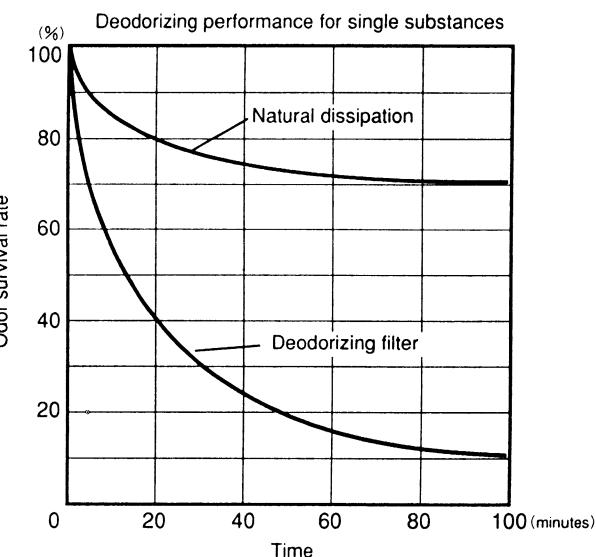

Deodorizing Effectiveness of Deodorizing Filter

Toilet Bodyodor Tabacco	Main odorizing substance	Odor	National/ Panasonic	General activated carbon
● ●	Ammonia	Irritating odor	◎	×
●	Hydrogen sulfide	Rotten eggs	◎	○
●	Methyl mercaptan	Rotten onions	◎	○
●	Isovaleric acid	Sweaty socks	◎	○
●	Normal valeric acid	Sweaty socks	◎	○
● ●	Acetaldehyde	Grassy odor	◎	△
● ●	Pyridine	Irritating odor	◎	○

Effectiveness: ◎:Large ○:Medium △:Small ×:None

[Odorizing substance: Ammonia]

Initial concentration: 100 ppm

Measurement temperature: 35°C

Reactor volume: 5 liters (sealed)

Filter paper sample: 100 mm x 100 mm

Specifications


Production name	CZ-03FDUB01		CZ-06FDUB01
Size	mm	W300 x D200 x H8	W300 x D300 x H8
Weight	g	76	117
Materials	Photocatalytic titanium oxide, ceramic fibers, pulp		
Applicable models	CS-40U32JP, CS-50U32JP, CS-71U32JP CS-80U32JP, CS-112U32JP		CS-140U32JP, CS-160U32JP

Precations on handling


1. Avoid using in locations where the air is humid or extremely smoky (such as kitchens, machinery plants, and game parlors). If particles such as oil adhere to the filter surface, the filter's effective life will be greatly reduced.
2. This filter uses paper as the filtering medium, and so it should never be cleaned with water. Use a vacuum cleaner to remove any dust that may accumulate.
3. To prolong the filter's deodorizing effectiveness, it is recommended that the filter be exposed to natural sunlight or fluorescent light for approximately one hour. The ultra-violet light will help to restore the deodorizing effectiveness.

■ Air guide

In order to avoid hindering the dissipation of heat, if the distance between the front of the outdoor unit and an obstruction is A dimension but there is no obstruction to the right, left, or above the outdoor unit, use this air guide to provide a smooth flow of the exhaust air.

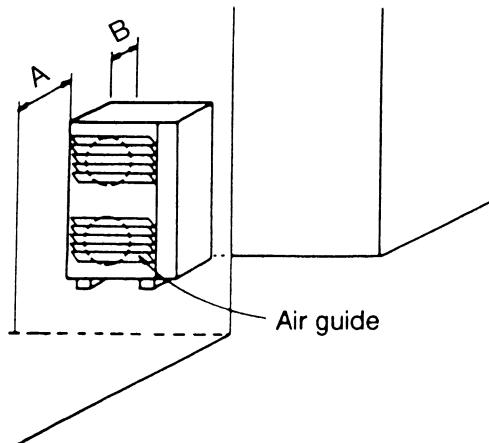

- The airflow can be changed to any direction by changing the direction in which the air guide is mounted.

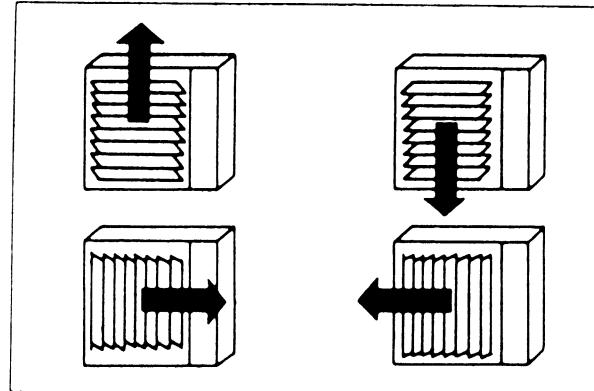

Air guider for outdoor units


Model Name		Part Number	A dimension	B dimension
CU-40C52HP	CU-40C02HP	CZ-02AGA	50cm	10cm
CU-50C52HP	CU-50C02HP			
CU-71C52HP	CU-71C02HP	CZ-03AGA	50cm	10cm
CU-71C52XP	CU-71C02XP			
CU-80C52HP	CU-80C02HP			
CU-80C52XP	CU-80C02XP			
CU-112C52XP	CU-112C02XP	CZ-05AGA	100cm	20cm
CU-140C52XP	CU-140C02XP			
CU-160C52XP	CU-160C02XP			

NOTE When installing the air guider

- 1) If directing the air upward, there should be no obstacles above the outdoor unit
 - 2) If directing the air to the left or right, there should be no obstacles at the left or right of the outdoor unit.
 - 3) Never use the air guider in locations which are subject to snowfall. If snow get inside the air guider, it could cause the fan to freeze up.
 - 4) If connecting outdoor units in series, direct the air flow upward.


CZ-02AGA

OUTSIDE DIMENSIONS

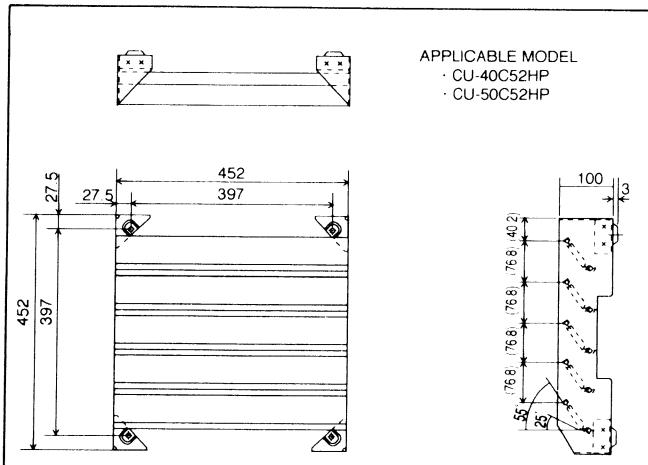

CZ-03AGA,CZ-06AGA

OUTSIDE DIMENSIONS

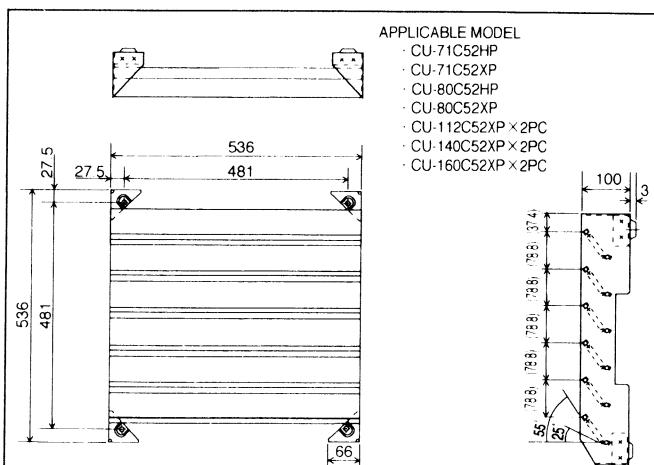

■ Sealing material(CZ-02FSU7, CZ-04FSU7 and CZ-06FSU7)

CZ-02FSU7… CS-40U32JP, CS-50U32JP, CS-71U32JP
 CZ-04FSU7… CS-80U32JP, CS-112U32JP
 CZ-06FSU7… CS-140U32JP, CS-160U32JP

The sealing material cannot be used on models equipped with an electric heater.

● Package contents

Item	Remarks	Appearance	Quantity
Sealing material	Flame-retardant soft urethane foam		1
Instructions	—		1



Mounting on the air conditioner

It is only possible to seal one of the four air outlets.
 (Sealing two or more of the air outlets could cause a malfunction.)

- The air outlet can be sealed by removing the decorative panel and inserting the sealing material into the air outlet on the air conditioner body.
- The sealing material is the same length as the longer air outlets. If it is desired to seal one of the shorter air outlets, cut the sealing material to shorten it by about 10 cm.

Cautions

- When inserting the sealing material, push it in about 1 cm beyond the edge of the air outlet so that it does not touch the airflow direction louver.
- When doing this, be careful not to push the sealing material in any farther than about 1 cm.

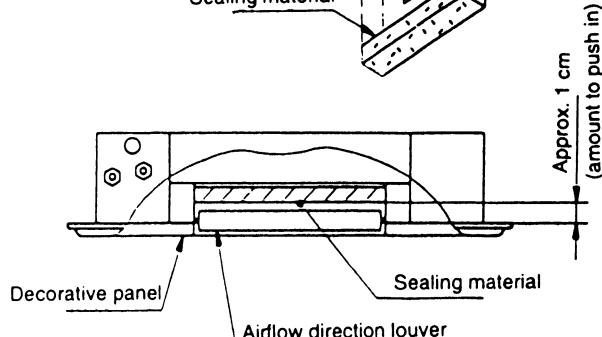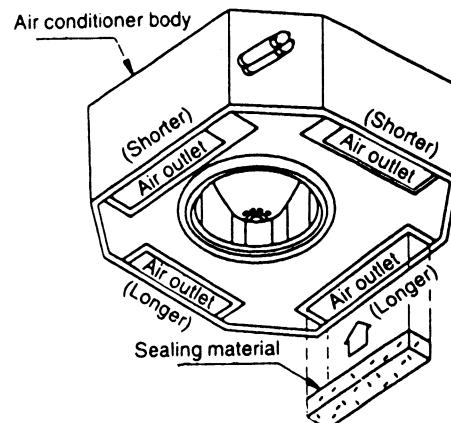

Wired Remote Control Unit Installation Manual


- Before installing the wired remote control unit, be sure to thoroughly read the "Notes with regard to safety" section of the Installation manual provided with the indoor unit.
- After installing the wired remote control unit, carry out a test operation to check that the remote control unit functions properly, and also explain the operation and cleaning procedures to the customer in accordance with the details in the instruction manual. Furthermore, ask the customer to keep this installation manual and the instruction manual in a safe place for later reference.

1. Accessories supplied with wired remote control unit

Name	Qty	Diagram	Use	Name	Qty	Diagram	Use
Remote control unit	1		Operating the indoor units	4 mm screw	3		Installing the remote control unit to a wall
Remote control cord				M4 screw	3		Installing the remote control unit to an outlet box
			Connecting the indoor unit and remote control unit (cord length 10 m)	Round terminal	2		Connecting to indoor unit terminal block

2. Notes regarding wired remote control unit setting-up location

- Select a place where the remote control unit can be operated easily (after obtaining approval from the building's owner).
 - Install in a place which is away from direct sunlight and as free from humidity as possible.
 - Install in a place which is as flat as possible to avoid warping of the remote control unit. (If installed to a wall with an uneven surface, damage to the LCD case or operation problems may result.)
 - Install in a place where the LCD can be seen easily. If the remote control unit is installed somewhere which is too low or too high, it may be difficult to read the LCD. (Standard height from the floor is 1.2 to 1.5 meters.)
 - Avoid installing the remote control cord near refrigerant pipes or drain pipes.
 - Install the remote control cord at least 5 cm away from other electric wires (including stereo and TV cables) to avoid mis-operation (electromagnetic noise).
 - If passing the remote control cord through a wall, be sure to install a water trap above the cord.
 - For twin and triple types, only the main unit can be connected to the remote control unit. (The indoor unit connected to the remote control unit becomes the main unit, and connection is not possible to the sub units.)
 - Allow sufficient space around the remote control unit as shown in the illustration at right.
- Secure the remote control unit lower case to the wall or to an outlet.

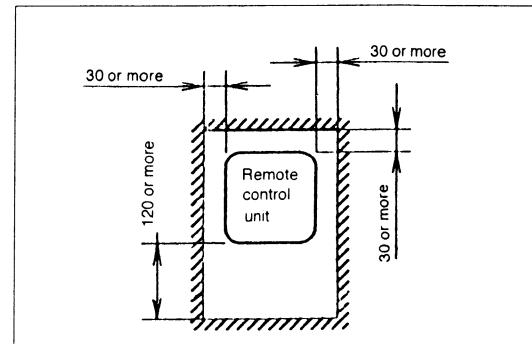


3. Remote control unit installation

- Be sure to turn off the main power before installing and connecting the remote control unit.
(If the remote control unit is connected while the power is still turned on, the remote control unit displays may not appear.)
If no displays appear on the remote control unit, check while referring to "If no remote control unit displays appear" in "5. Test operation".
- The remote control cable is live during use, so take care not to short it.

Remote control unit wiring

- Connect the indoor unit and the remote control unit as shown in the illustration below.
- The remote control unit cord is non-polar.
- At the time of shipment from the factory, the connector cable used to connect the terminal block and connector CN1 is disconnected. When connecting the remote control unit wiring and installing the remote control unit, be sure to connect the cord to connector CN1.

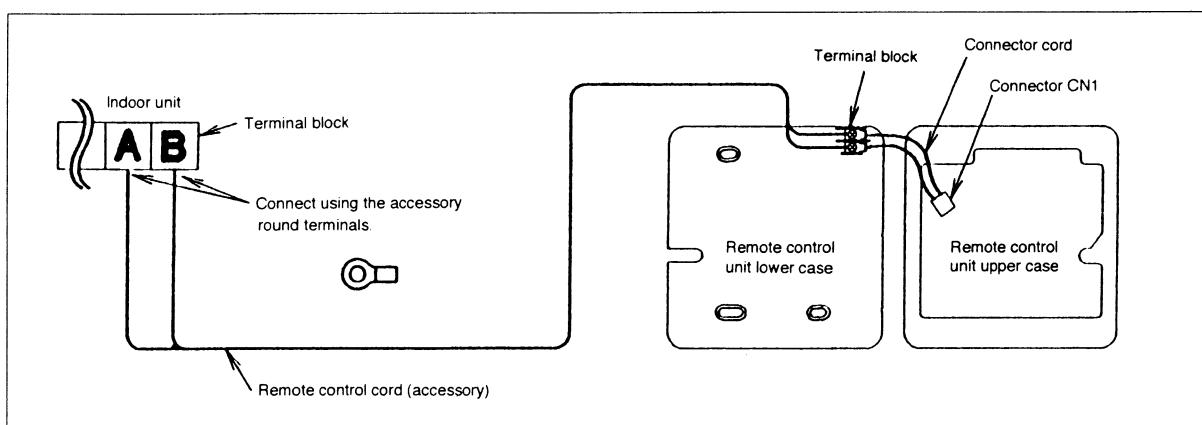

Extending the remote control cord


- Solder a sheathed PVC cord or cable (0.5 - 2.0 mm²) with specifications among those given below to the remote control unit end of the accessory remote control cord (10 m).
 - PVC round cabtire cord
 - PVC-insulated PVC sheathed cable for control use
 - PVC-insulated PVC sheathed cable for control use
 - 600 V PVC-insulated PVC sheathed round cable
 - 600 V PVC-insulated PVC sheathed flat cable
 - 600 V PVC-insulated PVC cabtire cable

NOTE

The maximum possible length for the remote control cord is 200 meters.


Remote control unit installation procedure

- Remove the remote control unit lower case.
(Insert a flat-tipped screwdriver or similar 2 to 3 mm into one of the gaps at the bottom of the case, and then twist the screwdriver to open. [Refer to the illustration at right.]
Be careful not to damage the lower case.)
- Secure the lower case to the wall or outlet box.
(Refer to the illustration at right for the embedded and exposed positions for the remote control cord.)

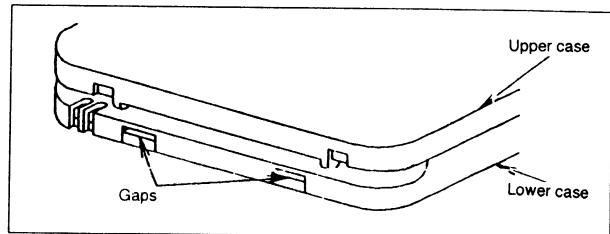


NOTE


- ★ Be sure to use only the accessory screws.
- ★ Do not bend the lower case when tightening the screws. (If the screws are overtightened, damage may result.)
- ★ Do not remove the protective tape which is affixed to the upper case circuit board.

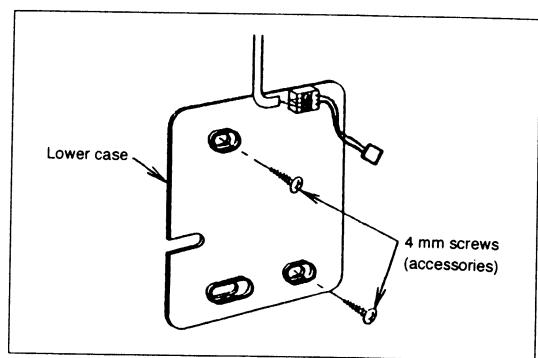

- If installing the remote control unit with the remote control unit cord exposed, use pliers to cut a notch into the upper case. (The feeding-out direction can be either up or to the left or right.)
- Strip the end of the remote control cord which is to be connected to the remote control unit. (Refer to the illustration at right.)

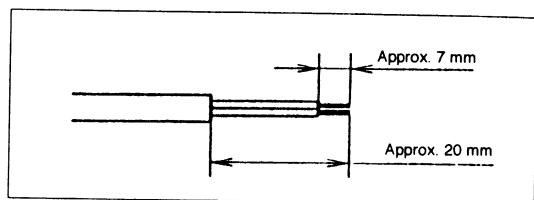


- Route the remote control cord inside the lower case in accordance with the intended feeding-out direction. (Refer to the illustration below.)
- Securely connect connector CN1. (If it is not connected, the remote control unit will not operate.)

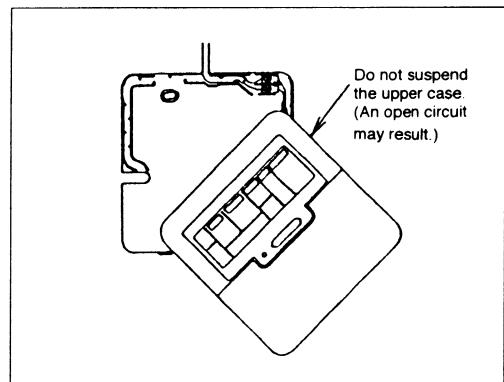




NOTE

***After connecting the connector, do not suspend the upper case by its own weight, otherwise the connector cord may break.**

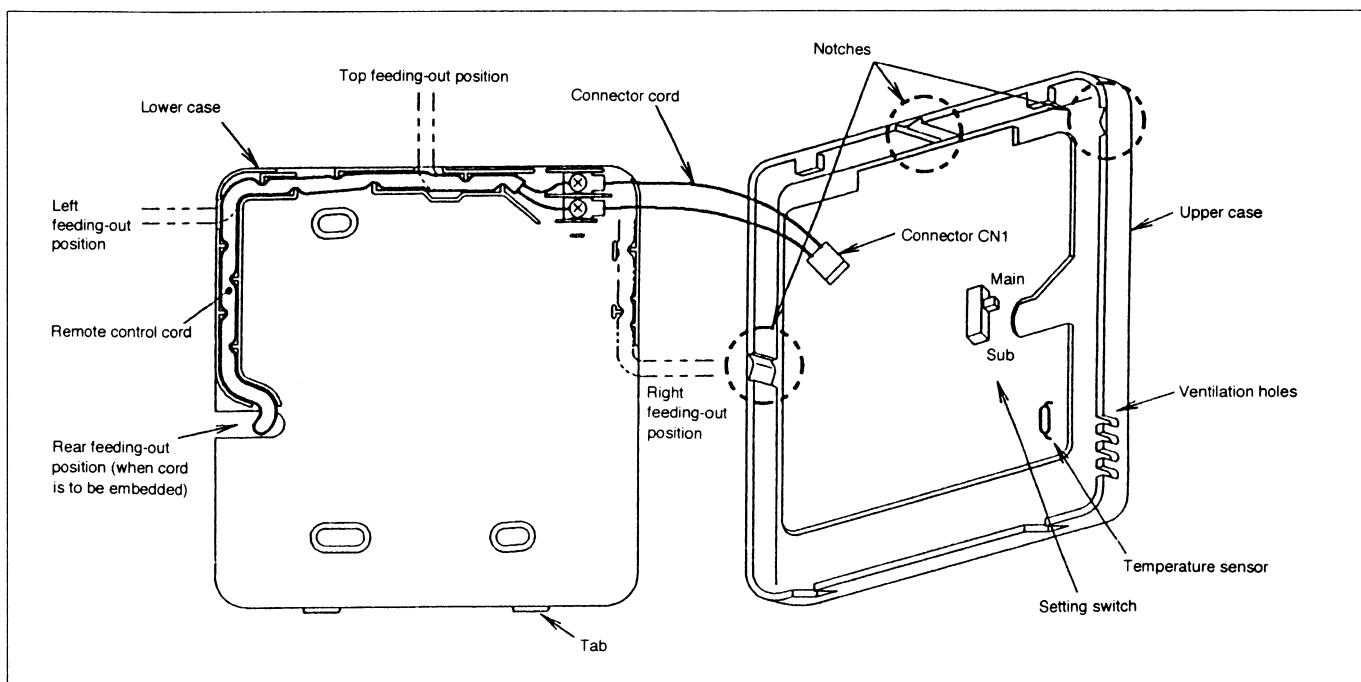

- If controlling using two remote control units, refer to "Control using two remote control units" in "4. Settings".
- Secure the upper case to the lower case.
(Hook the upper tab of the upper case into the lower case, and then push the upper case until it snaps shut onto the lower case tab, while being careful not to clamp the remote control cord and the connector cord.)

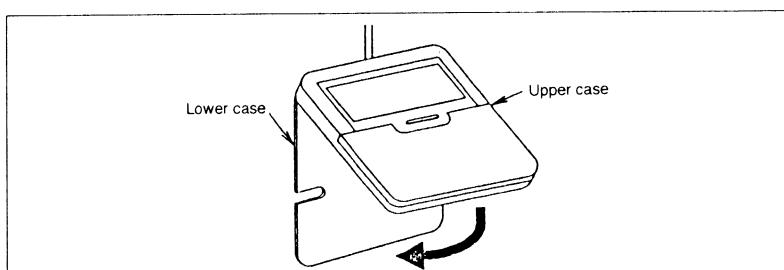

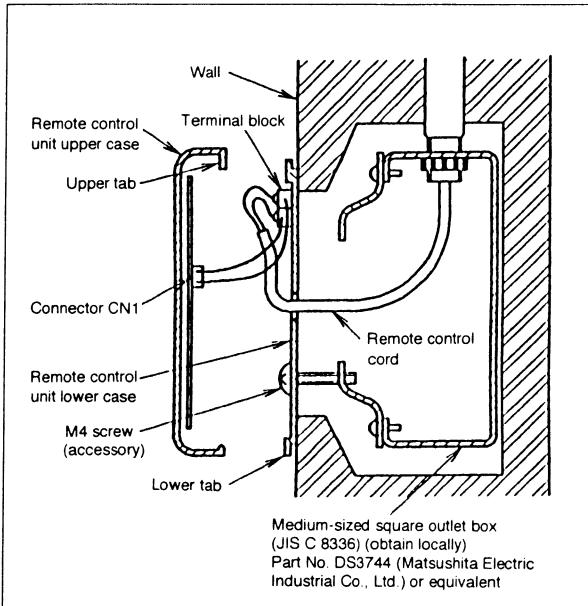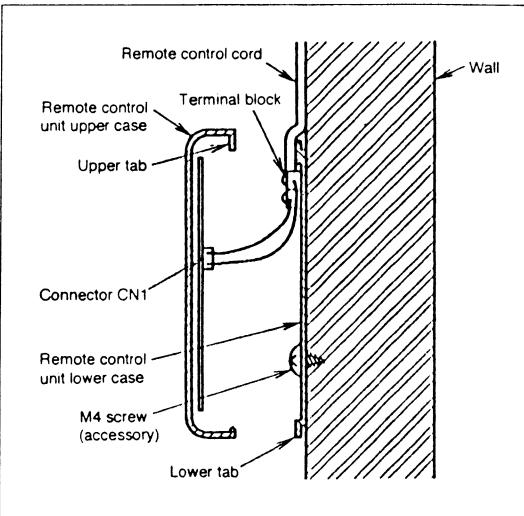If remote control cord is embedded	If installing with the remote control cord exposed
<p>1. Embed an outlet box (JIS C 8336) into the wall, and then secure the remote control unit base plate to the outlet box with the two accessory M4 screws. Make sure that the base plate is flat against the wall at this time, with no bending (looseness).</p> <p>2. Pass the remote control cord into the box and then install the remote control unit.</p> 	<p>1. Secure the remote control unit base plate to the wall with the two accessory 4 mm screws.</p> <p>2. The feeding-out direction for the remote control unit cord can be either up or to the left or right. (Refer to the illustration above.) After determining the feeding-out direction, use pliers to make a notch in the cover.</p> <p>3. Route the remote control cord as shown in the illustration above. Pull the cord firmly around the outside of the base plate at this time.</p> 

4. Settings

2 Control using two remote control units


- Up to two remote control units can be installed for a single indoor unit, and either remote control unit can be used to operate the indoor unit.
- The indoor unit can be operated with the last switch pressed having priority.

(1) Decide which is to be the main and which is to be the sub remote control unit.

The main or sub status of the remote control unit is set automatically. The MAIN/SUB setting switch can also be used to make the setting manually, however if a manual setting is made, that manual setting has priority. Be sure to turn off the main power before making a manual setting.

(2) Connect the remote control units.

Connect both remote control units to terminals (A) and (B) on the indoor unit terminal block (non-polar).

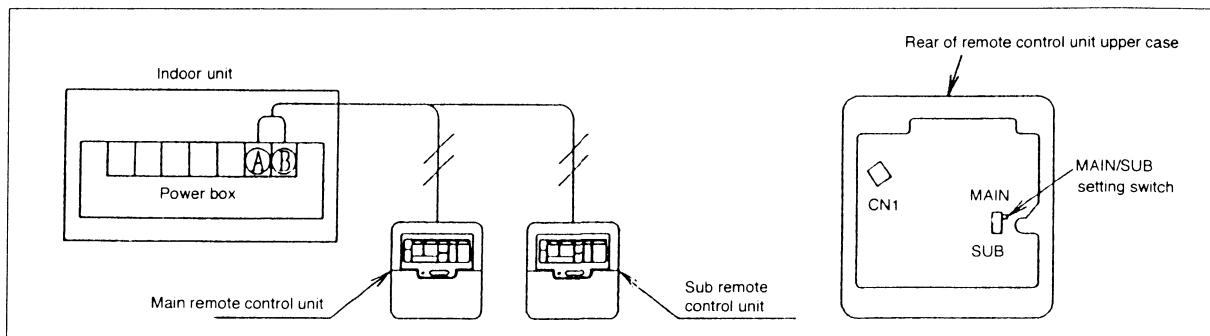

Group control

- When using a remote-controlled thermostat, the thermostat setting is used for all indoor units in the group.
- During group control, up to a maximum of 16 indoor units can be connected. (Do not mix heat pump units and cooling-only units.)
- During group control, the indoor unit address numbers are set automatically. However, you will not know at this time which address number corresponds to which indoor unit. Setting of address numbers can also be carried out manually using the DIP switches. Manual settings have priority, so after making a manual setting, so that if you then want automatic setting to be carried out, set indoor unit No. 1 of the indoor units to be controlled as a group using manual setting, and then carry out the procedure in "Automatic address resetting for group control".

Manual setting

Indoor unit No.	1	2	3	4	5	6	7	8
DIP switch (DSW1) setting on indoor unit printed circuit board								
Air conditioner No. setting	No operation necessary	1 is ON	2 is ON	1 and 2 are ON	3 is ON	1 and 3 are ON	2 and 3 are ON	1, 2 and 3 are ON
Indoor unit No.	9	10	11	12	13	14	15	16
DIP switch (DSW1) setting on indoor unit printed circuit board								
Air conditioner No. setting	4 is ON	1 and 4 are ON	2 and 4 are ON	1, 2 and 4 are ON	3 and 4 are ON	1, 3 and 4 are ON	2, 3 and 4 are ON	1, 2, 3 and 4 are ON

NOTE

- The ON/OFF setting position for DIP switch No. 7 (louver on/off) will vary depending on the unit model.

Automatic address resetting for group control

- The address settings for group control (air conditioner Nos. 1 to 16) can be reset automatically.
- (1) While operation is stopped, press the AUTO FAN SPEED ADJUST switch, AIR CONDITIONER NO. and OPERATION MODE switches simultaneously.

Switching the thermistor

- The temperature detection thermistor used for detecting the air temperature and changing between COOL and HEAT operation can be switched between the thermistor at the indoor unit and the thermistor at the remote control unit box. However, do not switch to the remote control unit thermistor if using two remote control units.
- (1) While operation is stopped, press and hold the STOP/RUN switch, and then press the UP and DOWN switches together.
- (2) "00" or "01" will appear in the time display.
- (3) Press the FORWARD or BACK timer switches to switch the display between "00" and "01".
 "00" ... Indoor unit setting (factory default)
 "01" ... Remote control unit setting
- (4) Press the RESERVE switch. (Be sure to press the RESERVE switch so that normal operation mode can be resumed.)
- Repeat the procedure in steps (1) to (4) to change the setting again.


Energy save setting

- Upper and lower limits can be set for the setting temperature during cooling and heating operation (Energy save setting)
 - (1) While operation is stopped, press the UP and DOWN switches simultaneously.
 - (2) To set an upper limit (Setting a temperature above the energy save temperature will not be possible.)
Press the OPERATION MODE switch until HEAT is displayed.
Press the UP or DOWN switch to set the temperature.
Press the RESERVE switch.
Example:If the heating display is set to 28°C, setting the temperature to higher than 28°C will not be possible.
 - (3) To set a lower limit (Setting a temperature below the energy save temperature will not be possible.)
Press the OPERATION MODE switch until COOL is displayed.
Press the UP or DOWN switch to set the temperature.
Press the RESERVE switch.
Example:If the cooling display is set to 22°C, setting the temperature to lower than 22°C will not be possible.
 - (4) If the CLEAR switch is pressed during steps (2) or (3) above, the energy save setting will be cleared.

★Press the RESERVE switch or the CLEAR switch to return to normal operation mode after making an energy save setting in steps (2) to (4).

5. Test operation

- Turn on the main power.
 - After 3 minutes have passed since the power was turned on, press the STOP/RUN switch on the remote control unit. (No operation occurs within 3 minutes after the power was turned on.)
 - Press the TEST RUN switch within 1 minute of pressing the STOP/RUN switch.
 - Next, select the operation mode. (Be sure to select cooling mode first, and run the unit in this mode for 5 minutes or more.)
 - Press the STOP/RUN switch or the TEST RUN switch to cancel test operation.
- ★Test operation will be canceled automatically after 30 minutes.

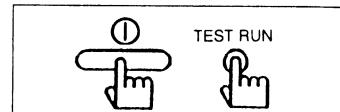**If no remote control unit displays appear**

- Check whether LED1 (green) on the indoor unit printed circuit board is illuminated or switched off. If it is switched off, check the circuits on the indoor unit printed circuit board.
- Check once more that the remote control cord is securely connected. (Check for loose terminals, poor contacts, connection positions on terminal block, etc.)
- If the above checks show that nothing is wrong but nothing appears on the remote control unit display, it is possible that the remote control unit was connected while the main power was still turned on. If such is the case, carry out the following.
- ★Set DIP switch (DSW1) Nos. 1 to 4 to the ON position, and then turn the power back on. If the display appears after about 30 seconds, turn DIP switches 1 to 4 back to OFF.

6. Self-diagnosis function

The LED1 (green) indicators on the indoor unit and outdoor unit microprocessor circuit boards illuminate to indicate that the microprocessors are operating normally. If the LEDs are switched off or are flashing irregularly, check the power supply, and turn it off and then back on again.

If "CHECK" is flashing on the timer

- If the "CHECK" display on the wired remote control unit is flashing, the details of the problem(s) are displayed on the timer display screen each time the CHECK button is pressed.
- Further details of the problem can be displayed by pressing the TIMER ON/OFF button while the general problem details are being displayed.

Example of current problem display

- Press the CHECK button
- Continue pressing the TIMER ON/OFF switch while the problem details are being displayed.

Timer	Fan speed	Operation	Temperature setting
CHECK			Air conditioner No. 01
F26			

Timer	Fan speed	Operation	Temperature setting
CHECK			Air conditioner No. 01
-01			

If "CHECK" is not flashing on the timer display

- If the "CHECK" display on the wired remote control unit is not flashing, press the CHECK button continuously for 5 seconds or more to display the problem details for the last problem or the problem before that.
- You can then switch between the displays for the previous problem and the problem before that by pressing the timer FORWARD or BACK buttons.
- Press the CHECK button once more to return to the normal display.

Example of previous problem display

- Press the CHECK switch for 5 seconds or
- Continue pressing the TIMER ON/OFF switch while the problem details are being displayed.

Timer	Fan speed	Operation	Temperature setting
CHECK			Air conditioner No. 01
1F26			

Timer	Fan speed	Operation	Temperature setting
CHECK			Air conditioner No. 01
1-01			

Example of abnormality display before previous display

- While the previous display still appears, → press the FORWARD timer switch.
- Continue pressing the TIMER ON/OFF switch while the problem details are being displayed.

Timer	Fan speed	Operation	Temperature setting
CHECK			Air conditioner No. 01
Problem display → 2F26			

Timer	Fan speed	Operation	Temperature setting
CHECK			Air conditioner No. 01
Detail display → 2-01			

- The display can be switched between the previous problem and the one before that by pressing the FORWARD and BACK timer switches.
- After eliminating the cause of the problem, press the CHECK switch once more to return to the normal display.
- If the problem disappears and operation returns to normal, the CHECK display on the remote control unit will switch off, but the self-diagnosis LED will remain illuminated until operation is resumed.

SELF-DIAGNOSES FUNCTION


Wired remote control unit display		Location of problem	Check location
Abnormal display	Detail display		
F15	- 01	Drain level float switch problem	Drain pump and drain pipe, indoor unit connectors CN6 & CN10, or relay connector
F16	- 01	Louver switch problem	Louver motor, veneer panel connection terminal, or indoor unit connectors CN1 & CN6
F17	- 01	Option problem	Option connection terminals
F20	- 01	Indoor temperature thermistor problem	Indoor temperature thermistor lead wire or indoor unit connector CN1
	- 02	Remote control thermistor problem	Remote control thermistor
F21	- 01	Pipe temperature thermistor problem (indoor unit side)	Pipe temperature thermistor lead wire or indoor unit connector CN1
F25	- 01	Centralized control address overlap problem	Check settings for optional centralized control circuit board address switch
F26	- 01	Remote control transmission wire open circuit problem	Remote control unit cable and connection terminals
	- 02	Remote control transmission problem	Check the transmission wave pattern
F27	- 01	Indoor/outdoor unit transmission wire open circuit problem	Indoor/outdoor unit connection cable and connection terminals, or indoor unit and outdoor unit power supplies
	- 02	Indoor/outdoor unit transmission problem	Check the transmission wave pattern
F29	- ○○	Setting problem	Contact the place of purchase.
F30~F49	- ○○	Outdoor unit problem	Refer to the section on outdoor unit self-diagnosis.

Wireless Remote Control Unit Installation Manual

- Before installing the wireless remote control unit, be sure to thoroughly read the "Notes with regard to safety" section of the Installation manual provided with the indoor unit.
- After installing the wireless remote control unit, carry out a test operation to check that the remote control unit functions properly, and also explain the operation and cleaning procedures to the customer in accordance with the details in the instruction manual. Furthermore, ask the customer to keep this installation manual and the instruction manual in a safe place for later reference.


1. Accessories supplied with wireless remote control unit

Part No.	Name	Qty.
①	Wireless remote-control unit	1
②	AAA battery	2
③	Holder (for securing remote control unit)	1
④	Holder fixing screw	2
⑤	Receptor unit	1
⑥	Receptor unit fixing screw	2
⑦	Joint cord	1
⑧	Cord clamp	8
⑨	Plastic tie	3
⑩	Installation manual (this manual)	1

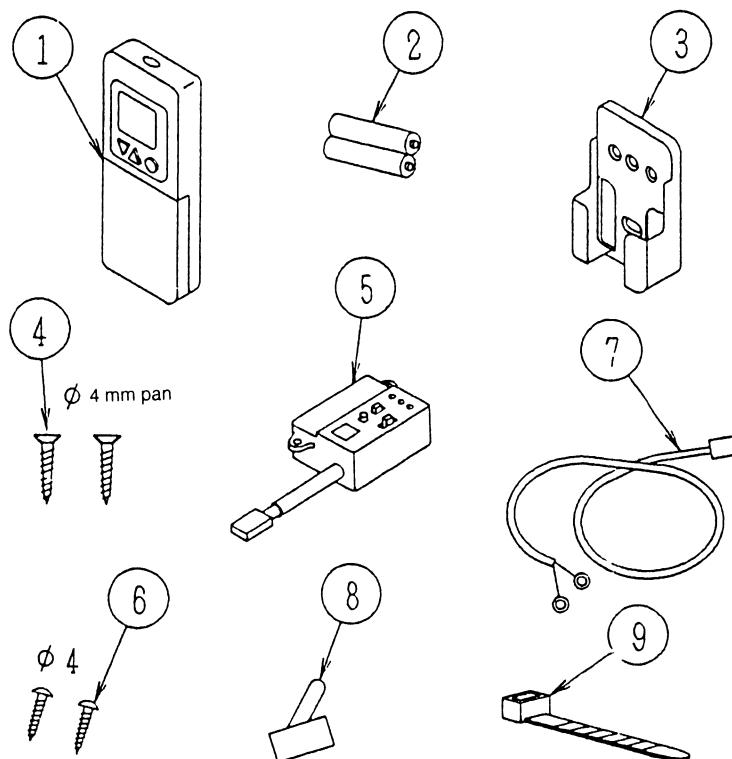

2. Points and notes regarding wireless remote control unit setting-up location


- The wireless remote control unit can be used to operate indoor units at a maximum range of 8 meters from directly in front of the indoor unit.
- If the remote control unit is at an angle to the receptor, the operating range may become shortened.
- The accessory receptor unit must be attached to the veneer panel.
- The receptor unit for the wireless remote control unit should be in a place where it will not be affected by direct light from fluorescent lights. (Refer to the illustration below.)
(If using an inverter-type fluorescent light, keep the receptor unit at least 1 meter away from the light, otherwise remote control operation may not work properly.)

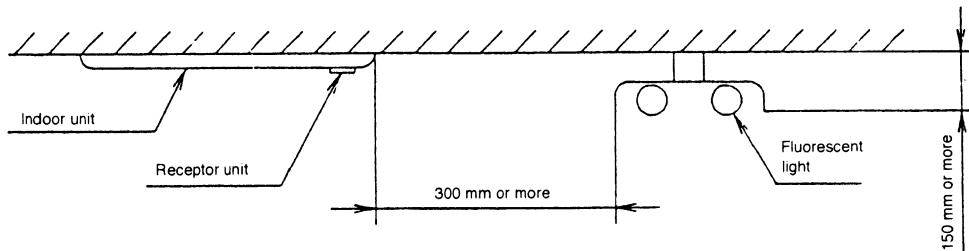

- If installing in a place where a power supply is generating electromagnetic noise, take measures such as installing a noise filter.
- Install at least 3 meters away from any noise sources, and shield the electric cables using an iron conduit
- Install at least 1 meter away from equipment such as TVs and radios. (Otherwise picture distortion or static may occur.)

Wireless remote control installation procedure

- Installing the wireless remote control unit to a wall (for remote control unit storage)

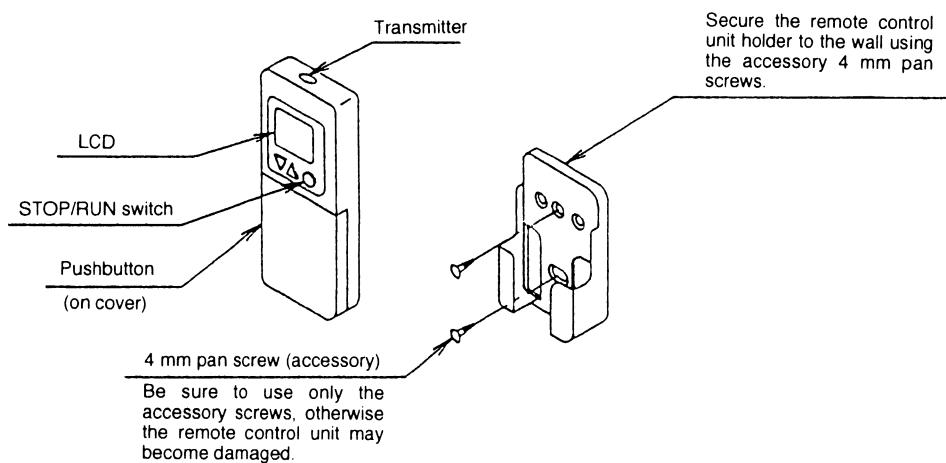


- If using a single remote control unit to operate several air conditioners, address setting will be required. (Refer to later in this manual.)
- For twin and triple types, install to the main unit only.
(Accordingly, the installation and wiring operations described later in this manual are for the main unit only.)

Inserting the batteries

- Remove the battery compartment cover of the wireless remote control unit, and then insert the two accessory AAA-size batteries. (Be sure not to make a mistake with the polarities.)

NOTE

The accessory batteries are to be used when checking operation. They should be replaced with new batteries as soon as possible. (Estimated battery life is approximately 1 year.)

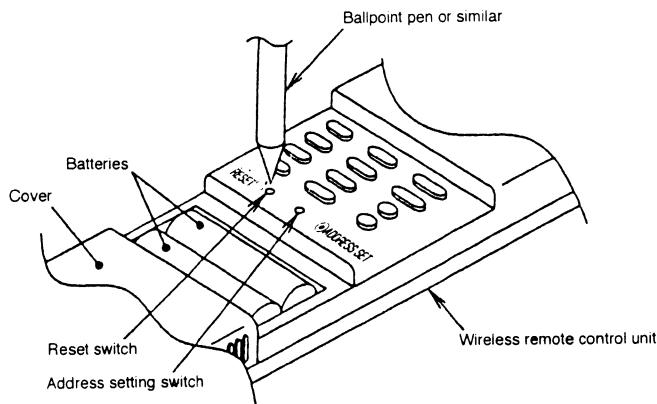**NOTE**

- When inserting the batteries for the first time, or when replacing the batteries, the remote control unit may stop working. In such cases, use a ballpoint pen or similar object to push the reset switch. The remote control unit should then start working normally.
- Replace the batteries with two new batteries of the same kind.
- Rechargeable (Ni-Cd) batteries differ in aspects such as shape and performance, and thus cannot be used.


3. Installing the receptor unit**1**

Install the receptor unit to the veneer panel of the indoor unit as shown in the illustration below.

1. Remove the stopper cover which is installed at the time of shipment from the factory.

(The stopper cover is not needed.)


2. Install the receptor unit with the accessory screws.

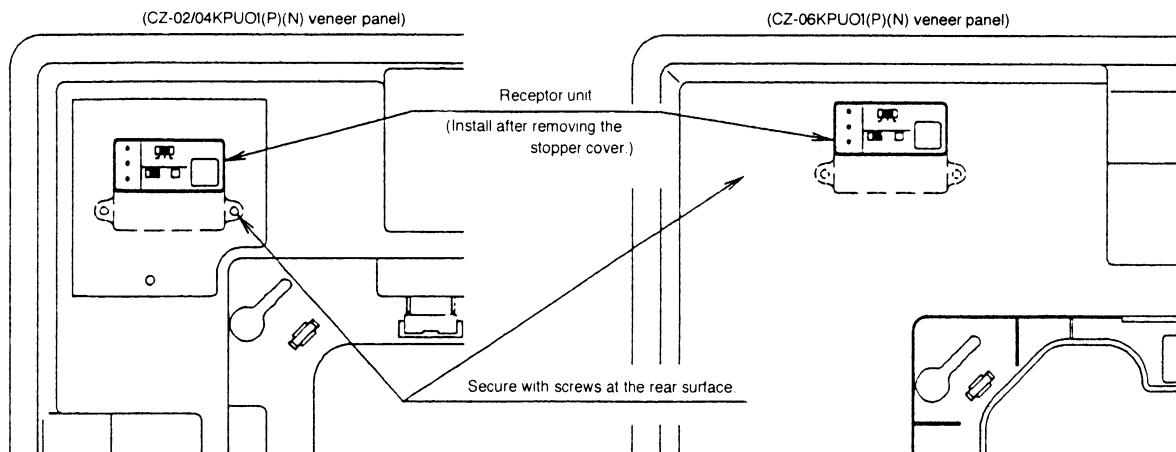


2 Run the joint cable around the edge, and then connect it to terminals (A) and (B) (non-polar) on the terminal block in the indoor unit power box.

[For CZ-02/04KPUO1(P)(N) veneer panel]

1. Run the cord as shown in the illustration below (around rear of veneer panel).

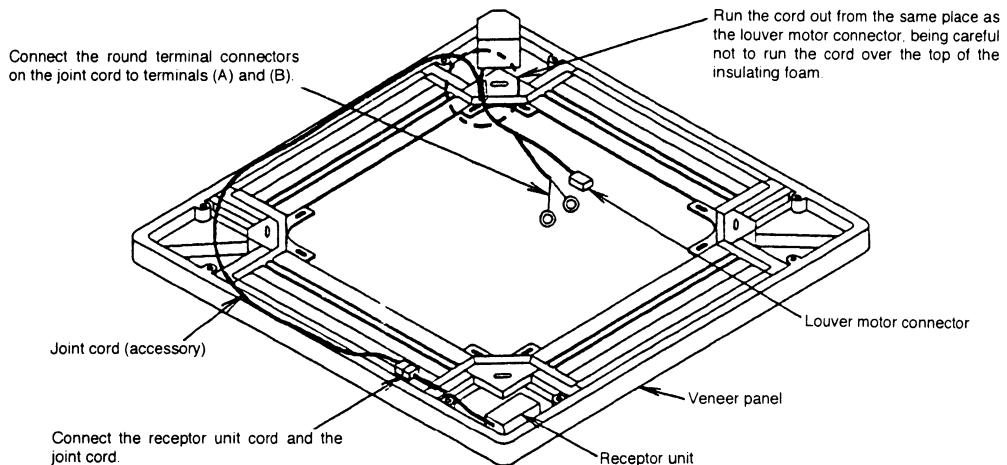


2. Connect to terminals (A) and (B) (non-polar) on the terminal block in the indoor unit power box.

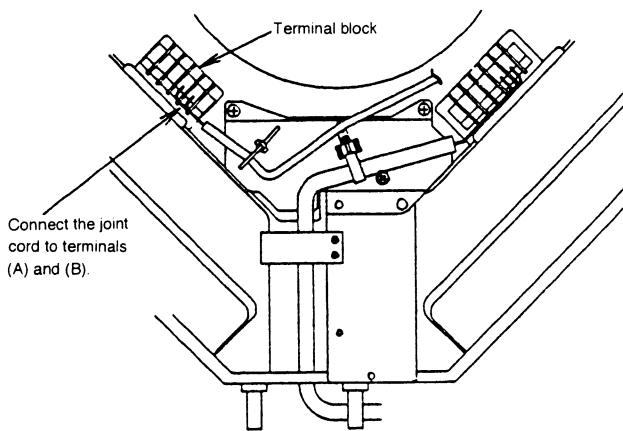


NOTE

When attaching the veneer panel to the main unit, run the joint cord up into the ceiling to avoid clamping the joint cord with the veneer panel.

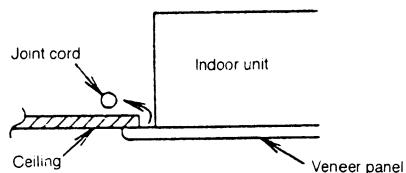


[For CZ-06KPUO1(P)(N) veneer panel]


1. Run the cord as shown in the illustration below (around rear of veneer panel).

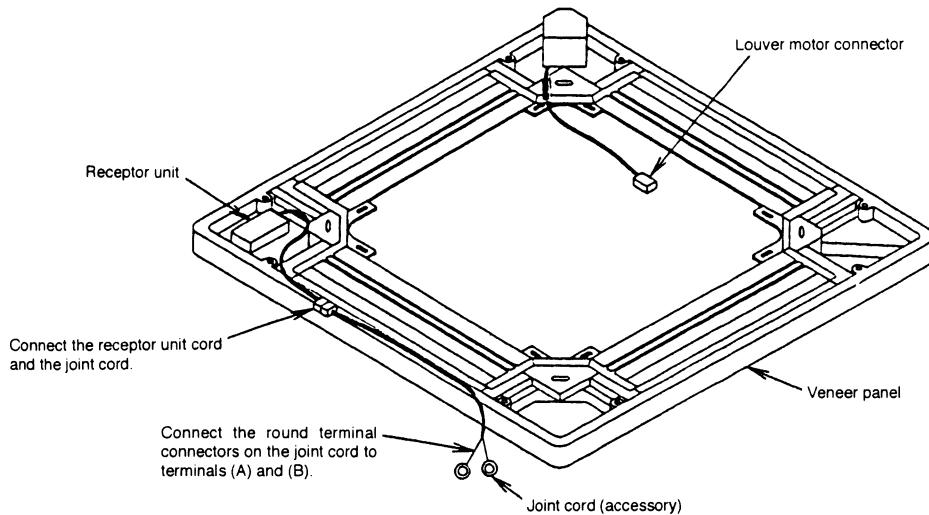

2. Connect the joint cord to terminals (A) and (B) (non-polar) on the terminal block in the indoor unit power box.

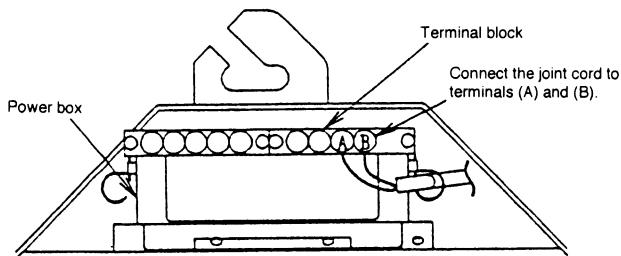**NOTE**

When attaching the veneer panel to the main unit, run the joint cord up into the ceiling to avoid clamping the joint cord with the veneer panel.

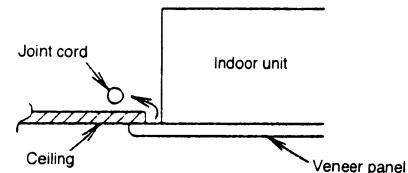


4. Receptor unit wiring

- Connect the indoor unit and the receptor unit as shown in the illustration below.

- If the indoor unit does not operate even when the wireless remote control unit is used to turn it on, check the indoor unit power supply.

If LED1 (green) on the indoor unit printed circuit board is illuminated to show that the power supply is normal, turn on the EMERGENCY switch of the receptor unit. If the indoor unit still does not operate, even when the EMERGENCY switch is turned on, turn off the indoor unit power supply, check that all of the DIP switches 1 to 4 (DSW1) on the indoor unit printed circuit board are set to ON, and then turn the power back on.

- ★ If the optional wired remote control unit has been connected, check the remote control unit display, and set all of the DIP switches 1 to 4 (DSW1) to OFF while the power is still turned on.


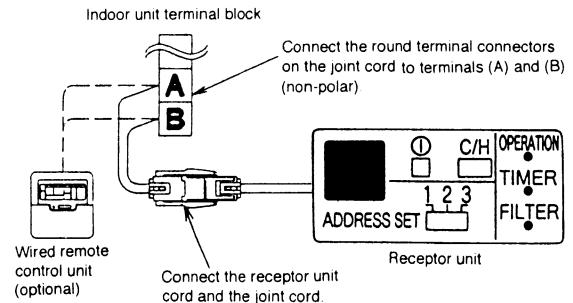


Address setting for wireless remote control unit and receptor unit (only when using more than one indoor unit)


- Only the air conditioner units whose receptor unit address numbers match the remote control unit address number can be operated.
- At the time of shipment from the factory, the address numbers for both the wireless remote control unit and the receptor unit are set to "1". (When using only one indoor unit, the indoor unit can be used without changing the factory default settings.)

Press the address setting switch with a ballpoint pen or similar object to change the address setting.

The address number displayed on the LCD changes in the order [ADDRESS 1] [ADDRESS 2] [ADDRESS 3] [GROUP] [ADDRESS 1] each time this switch is pressed.

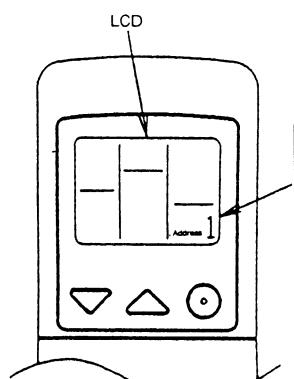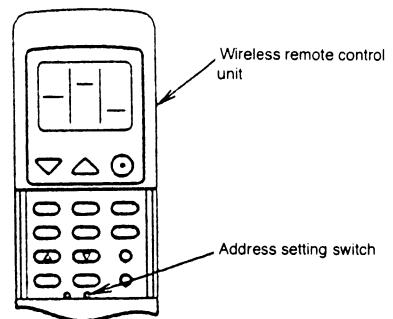

Only the air conditioner units whose address numbers match the address number on the LCD can be operated.

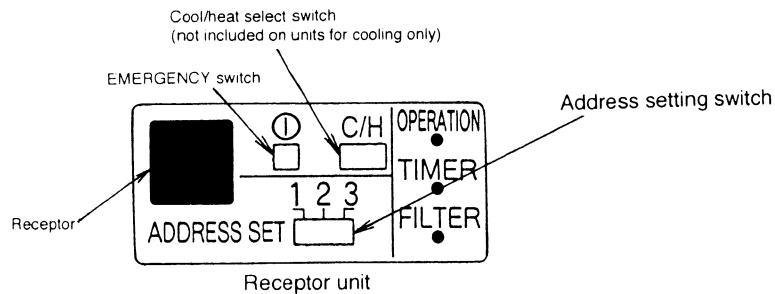


NOTE

- If the batteries are replaced or the remote control unit is reset, the address setting will return to ADDRESS 1, so you will need to repeat the address setting.
All setting details which are stored in memory will be cleared, so you will need to repeat the settings.
- If the address is set to GROUP, more than one indoor unit can be operated at the same time.
(The indoor units can be operated by a single remote control unit regardless of the address number settings on the receptor units.)

Receptor unit address setting		
Address setting switch	1 2 3	ADDRESS 1
	1 2 3	ADDRESS 2
	1 2 3	ADDRESS 3


Example: If the address numbers for all indoor units are changed, other indoor units may operate accidentally due to signal interference.

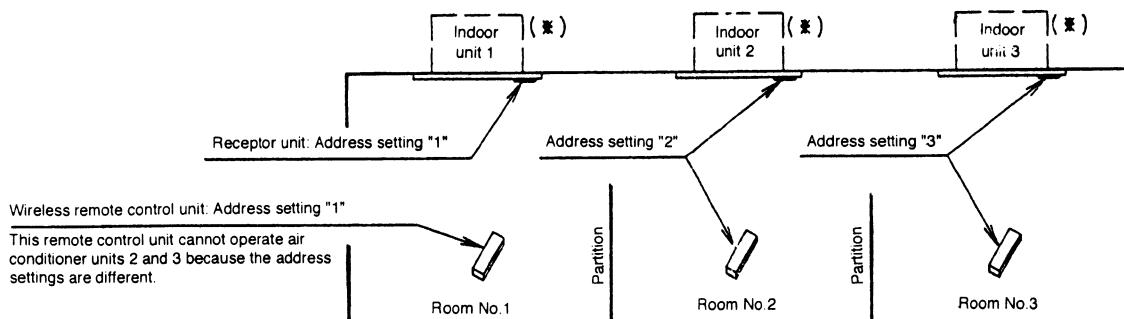**Control using two remote control units**

- If both the wireless remote control unit and the optional wired remote control unit are being used together, either remote control unit can be used to operate the indoor units.
- The optional wired remote control unit can be connected to only one other indoor unit besides the one with the receptor unit.
- Two wireless remote control units cannot be connected at the same time.
- When using the wireless remote control unit and the optional wired remote control unit, the SUB/MAIN setting is not needed.

Group control

- When using group control, be sure to install the receptor unit to indoor unit No. 1.
(Refer to the illustration below.)

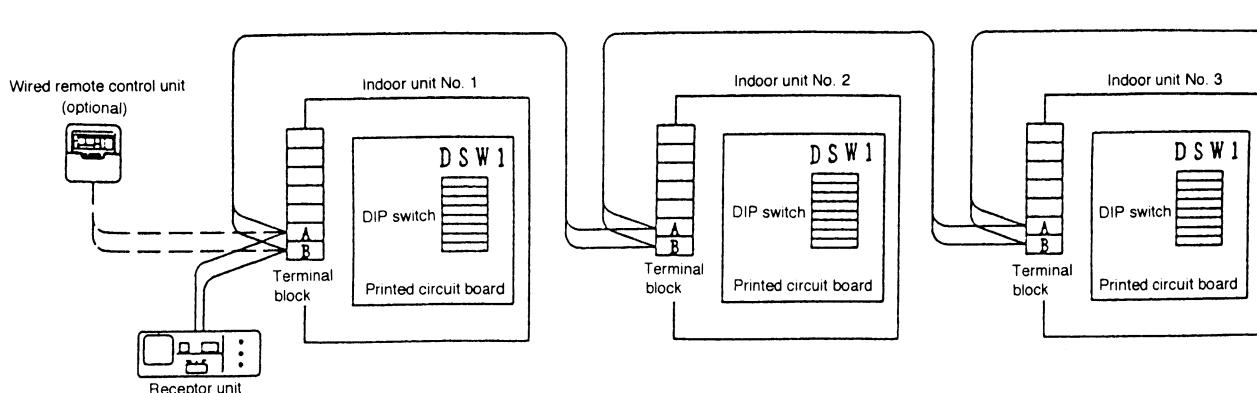

- During group control, up to a maximum of 16 indoor units can be connected.
(Do not mix heat pump units and cooling-only units.)
- During group control, the indoor unit address numbers can be set automatically. However, you will not know at this time which address number corresponds to which indoor unit.
- Setting of address numbers can be carried out manually using the DIP switches. Manual settings have priority. (Do not combine both manual settings and automatic settings.)

Manual setting

Indoor unit No.	1	2	3	4	5	6	7	8
DIP switch (DSW1) setting cir indoor unit printed cuit board	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8
All conditioner No. setting	No operation necessary	1 is ON	2 is ON	1 and 2 are ON	3 is ON	1 and 3 are ON	2 and 3 are ON	1, 2 and 3 are ON
Indoor unit No.	9	10	11	12	13	14	15	16
DIP switch (DSW1) setting cir indoor unit printed cuit board	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8	OFF 1 ON 2 OFF 3 ON 4 OFF 5 ON 6 OFF 7 ON 8
All conditioner No. setting	4 is ON	1 and 4 are ON	2 and 4 are ON	1, 2 and 4 are ON	3 and 4 are ON	1, 3 and 4 are ON	2, 3 and 4 are ON	1, 2, 3 and 4 are ON

NOTE

The ON/OFF setting position for DIP switch No. 7 (louver on/off) will vary depending on the unit model.

5. Test mode operation


★ Press the TEST RUN switch within 1 minute of pressing the STOP/RUN button.

● If more than 1 minute passes, test operation will not commence, and so you will need to press the RUN/STOP button once more and repeat the operation.

● Use the OPERATION MODE switch to select the operation mode. The mode selected will appear on the operation mode display.)

★ When the test operation starts, "TEST" will appear in the timer display of the LCD. The indoor unit will run in the operation mode indicated at this time (COOL or HEAT).

● Test mode can be cancelled by pressing the RUN/STOP switch, the TEMPERATURE SETTING Δ or ∇ switches, the OPERATION MODE switch, the FAN SPEED switch or the RESET switch.

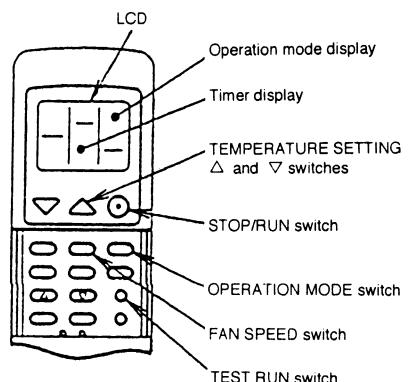


NOTE

- NOTE 1 During test operation, be sure to run the units in cooling mode first. If heating mode is selected first, it may cause problems with operation of the compressor.
- NOTE 2 Test operation should be carried out for a minimum of 5 minutes. (Test operation will be cancelled automatically after 30 minutes.)
- NOTE 3 If using the wireless remote control unit to carry out test operation, use the wireless remote control unit to cancel test operation also.

6.Emergency operation

- If you do not have the wireless remote control unit (because the batteries are spent, or some other reason prevents the wireless remote control unit from being used), emergency operation can be carried out at the receptor unit.

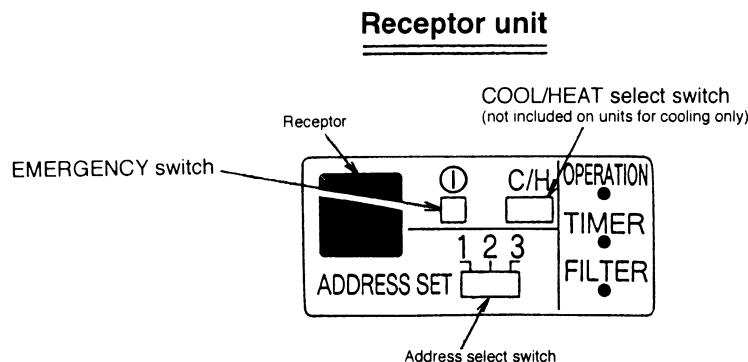

- After setting the COOL/HEAT select switch on the receptor unit to either COOL or HEAT, press the EMERGENCY switch to start emergency operation.
Press the EMERGENCY switch once more to stop emergency operation.
- The setting temperature, fan speed and louver control will be fixed at the settings shown in the table at right.
- While the indoor unit is running, the run indicator on the receptor unit will illuminate, and it will switch off when the indoor unit stops.
- Heating operation is not available for indoor units which are for cooling only. (If set to HEAT, the setting will change to FAN instead.) ... (for mini wall models (KB series) only)

COOL / HEAT switch	Operation mode	Setting temperature	Fan speed	Louver
COOL	Cooling	22°C	MED	Automatic
HEAT	Heating	28°C	MED	Automatic

7.Other

- The indoor units cannot be operated using the wireless remote control operation when REMOTE control is being carried out using the centralized controller. (REMOTE operation has priority at this time.)
- The timer display illuminates when REMOTE control is being carried out using the centralized controller.
- If the wireless remote control unit is operated while the timer display is illuminated during REMOTE control, the timer display will flash for a few seconds.

PACKAGED AIR CONDITIONER**CASSETTE TYPE
INSTALLATION MANUAL**

MODEL	DECORATIVE PANEL	MODEL	DECORATIVE PANEL
CS-40U32JP CS-50U32JP CS-71U32JP	CZ-02KPU01P	CS-140U32JP CS-160U32JP	CZ-06KPU01P
CS-80U32JP CS-112U32JP	CZ-04KPU01P		

Precautions in terms of safety

Carry out the installation work with reliability after throughout reading of this "Precautions in terms of safety".

- Precautions shown here are differentiated between **△Warnings** and **△Cautions**, those that have much chance for leading to significant result such as fatality or serious injury if wrong installation should be carried out are listed compiling them especially into the column of **△Warnings**.

However, even in the case of items which are listed in the column of **△Cautions**, such items also a chance for leading to significant result depending on the situations.

In either case, important descriptions regarding the safety are listed, then observe them without fail.

- As to indications with illustration

	This mark means "Caution" or "Warning".
	This mark means "Prohibition".
	This mark means "Compulsion".

- After installation work has been completed, not only make sure that the unit is free from any abnormal condition through the execution of dry run but also explain how to use and how to perform maintenance of this unit to the customer according to the instruction manual.

In addition, request the customer to keep this manual for installation work together with instruction manual.

Warnings	Warnings
▲ As to installation, request the distributor or vendor to perform it. Imperfection in installation caused by that having been carried out by the customer himself leads to water leakage, electric shock, fire, etc.	▲ If refrigerant gas escapes during installation, ventilate the affected area. If the refrigerant gas comes into contact with sparks or naked flames, it will cause toxic gases to be generated.
▲ Carry out the installation work with reliability according to this manual for installation work. Imperfection in installation leads to water leakage, electric shock, fire, etc.	▲ Once installation work is complete, check that there are no refrigerant gas leaks. If refrigerant gas leaks into the room and comes into contact with sparks or flames from a fan heater, stove or kitchen range, it will cause toxic gases to be generated.
▲ Carry out the installation with reliability on the place that bears the weight of this unit sufficiently. Insufficient strength leads to injury due to falling of the unit.	
▲ Carry out predetermined installation work in preparation for strong wind such as typhoon, earthquake. Imperfection in installation work may lead to accident arisen from overturn, etc.	▲ Carry out ground work. Do not connect the ground return to the gas pipe, water line pipe, lightening rod, ground return of the telephone. Imperfection in ground return may lead to electric shock.
▲ Electric work shall be carried out by the person qualified as an electric worker according to "Technical standards regarding electric installation", and manual for installation work, and use exclusive circuit without fail. Presence of insufficient capacity in power circuit or imperfection in execution leads to electric shock, fire, etc.	▲ Do not install the unit at the place where the possibility of inflammable gas leakage exists. If such gas leakage should arise and the gas builds up around the unit, such situation may lead to ignition.
▲ Wiring shall be connected securely using specified cables and fix them securely so that external force of the cables may not transfer to the terminal connection section. Imperfect connection and fixing leads to fire, etc.	▲ Mounting of the earth leakage breaker is required. Omission in mounting of the earth leakage breaker may lead to electric shock.
▲ If installing inside a small room, measures should be taken to prevent refrigerant levels from building up to critical concentrations in the event of a refrigerant leak occurring. Please discuss with the place of purchase for advice on what measures may be necessary to prevent critical concentrations being exceeded. If the refrigerant leaks and reaches critical concentration levels, there is the danger that death from suffocation may result.	▲ Drain piping should be made to ensure secure drainage according to the manual for installation work and carry out the thermal insulation to prevent the occurrence of condensation. Imperfection in piping work leads to water leakage and may cause the house and property, etc. to become wet.
▲ Securely attach the protective covers for the outdoor unit connection cable and power cord so that they do not lift up after installation. If the covers are not properly attached and installed, the terminal connections may overheat, and fire or electric shock may result.	▲ Position the indoor units, outdoor units, power cords and indoor/outdoor unit connection cables so that they are at least 1 meter away from televisions and radios. This is to avoid problems such as interference with picture and/or sound. (However, note that depending on the electromagnetic wave conditions, interference may still occur even if the separation distance is more than 1 meter.)


1. ACCESSORIES PACKED IN THE INDOOR UNIT CONTAINER

Name	Q'ty	Appearance	Purpose
Drain hose with a clip	1		For drain piping
Heat insulator	1		For installation refrigerant pipe joint
Band	2		For fastening the heat insulator
Electric circuit diagram	1		(contained with the operation manual) CS-140U32JP CS-160U32JP
Terminal	9		For wiring (on the control box cover) CS-140U32JP CS-160U32JP
Flat washer for M10	8		For fixing the hanging bolts
Paper model for installation	1		For ceiling drilling
Set screw of paper template	4		Screw M5

2. SELECTING THE LOCATION OF THE INDOOR UNIT

Provide a check port on the piping side ceiling for repair and maintenance.

- Install the indoor unit the following conditions are satisfied, after receiving customers' approval.
1. The indoor unit must be free from any obstacles in path of the air inlet and outlet, and must allow spreading of air throughout the room. (Near the center of the room)
 2. The indoor unit must place assuring space shown in the figure from the wall and obstacles.

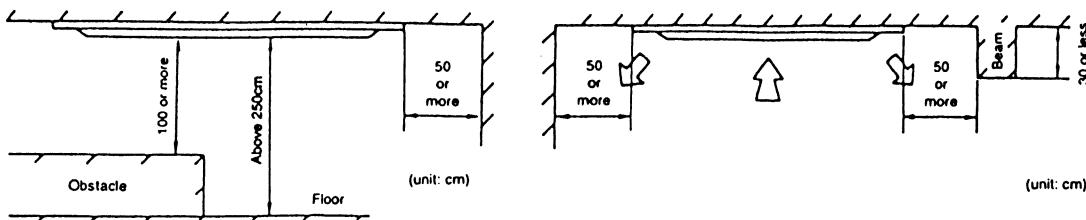

※ If the height from floor to ceiling exceeds three meters, air flow distribution deteriorates and the effect is decreased.

- ⚠ 3. The installation place must be able to support a load four times the indoor unit weight and avoid amplifying noise and vibration.
4. The installation place (hanging ceiling surface) must be assuring levelness.
5. Place assuring the height in the ceiling shown in the right figure or more.
6. The indoor unit must be away from heat and steam sources. (Avoid installing it near an entrance.)
7. Prepare a power outlet for the indoor unit nearby.
8. The indoor unit must allow easy draining.
9. The indoor unit must allow easy connection to the outdoor unit.
10. The indoor unit must be at least 3m away from any noise generating equipment. The electrical wiring must be shielded with a steal conduit.
11. If the power supply is subject to noise generation, add a noise filter.


MODEL NAME	Hi in the ceiling
CS-40U32JP	28cm or more
CS-50U32JP	
CS-71U32JP	
CS-80U32JP	
CS-112U32JP	
CS-140U32JP	31cm or more
CS-160U32JP	

NOTE ● Thoroughly study the following installation locations:

1. In such places as restaurants and kitchens, considerable amount of oil steam and flour are adhered to the turbo fan, the fin of the heat exchanger and the drain pump, resulting in the cause of heat exchange reduction, spraying, dispersing of water drops, drain pump malfunction, etc.

In these cases, take the following actions:


- Make sure that the ventilation fan for smoke-collecting hood on a cooking table has sufficient capacity so that it draws oily steam which should not flow into the suction of air conditioner.
- Take enough distance from cooking room to install the air conditioner in such place where it may not suction oily steam.
- 2. Avoid installing air conditioner in such circumstances where mist of cutting oil or cut iron powder is hanging over in factories, etc.
- 3. Avoid places where inflammable gas is generated, flowed-in, contaminated, or leaked.
- 4. Avoid places where sulfurous acid gas or corrosive gas is generated.
- 5. Avoid places where there are machines that generate high-frequency.

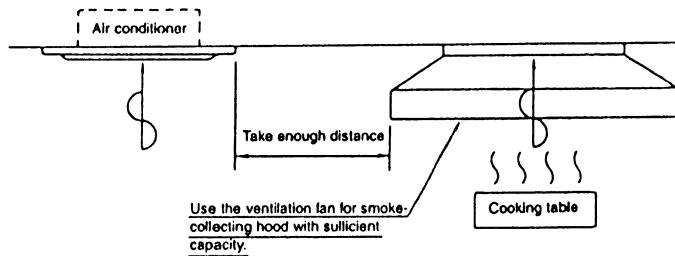

3. INSTALLATION OF INDOOR UNIT

⚠ This air conditioner uses a drain up motor. Horizontally install the unit using a level gauge.

CEILING OPENING DIMENSIONS AND HANGING BOLT LOCATIONS


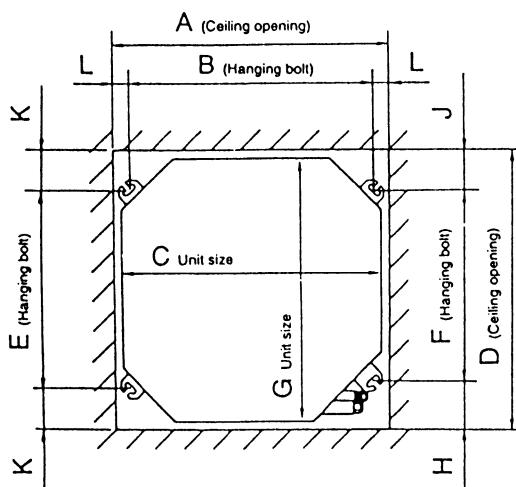


The paper model for installation is extended according to temperature and humidity. Check on dimensions in using.
The dimensions of the paper model for installing are the same as those of the ceiling opening dimensions. When ceiling laminating work is not completed, be sure to fit the installation pattern paper to the air conditioner main unit.

※ Be sure to discuss the ceiling drilling work with the workers concerned.

Model name	A	B	C	D	E	F	G	H	J	K	L
CS-40U32JP	700	620	657	700	495	475	657	122.5	102.5	102.5	40
CS-50U32JP	750	670	710	750	545	525	710	122.5	102.5	102.5	40
CS-71U32JP	860	770	820	860	645	650	820	147.5	62.5	107.5	45
CS-80U32JP											
CS-112U32JP											
CS-140U32JP											
CS-160U32JP											

HANGING THE AIR CONDITIONER BODY

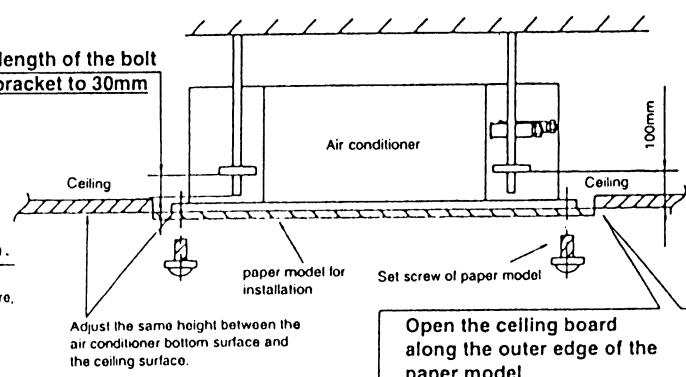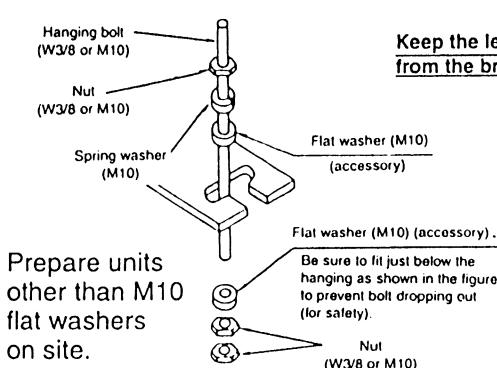


⚠ Tighten the nut and bolt to prevent unit falling.

4. INSTALLATION OF DECORATIVE PANEL

⚠ NOTE


Install certainly the decorative panel
Cool air leakage causes sweating. → Water drops fall.

Before installing the decorative panel, always remove the paper model.

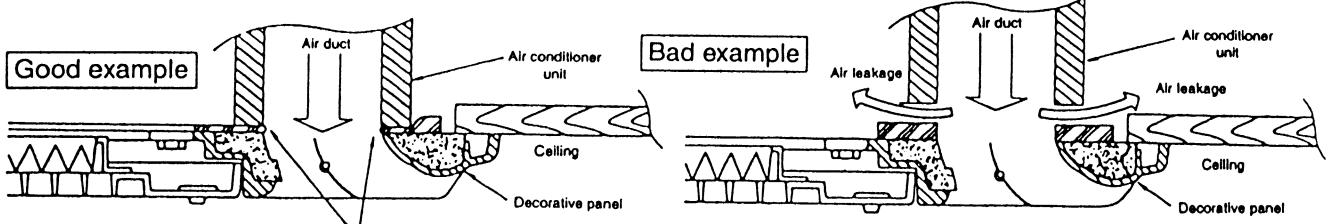


Fit the insulator (this part) and be careful for cool air leakage

1. Temporarily fix the two screws for fixing the decorative panel. (hexagon M5 screws) attached to the decorative panel to the air conditioner unit. (Tighten by about 10mm in length.)
 2. Remove the air inlet grill from the decorative panel. (Remove the hook for the air inlet grill cord.)
 3. Hook the decorative panel key holes (☞) on the screws fixed in step above, and slide the panel so that the screws reach the key hole edge.
 4. Retighten completely two temporarily fixed screws and the left two screws. (total 4 screws)
 5. After tightening these screws, install the air inlet grill. (including the filter)
- ⚠ Be sure to hook the air inlet grill cord, to prevent grill falling and injury from it.**

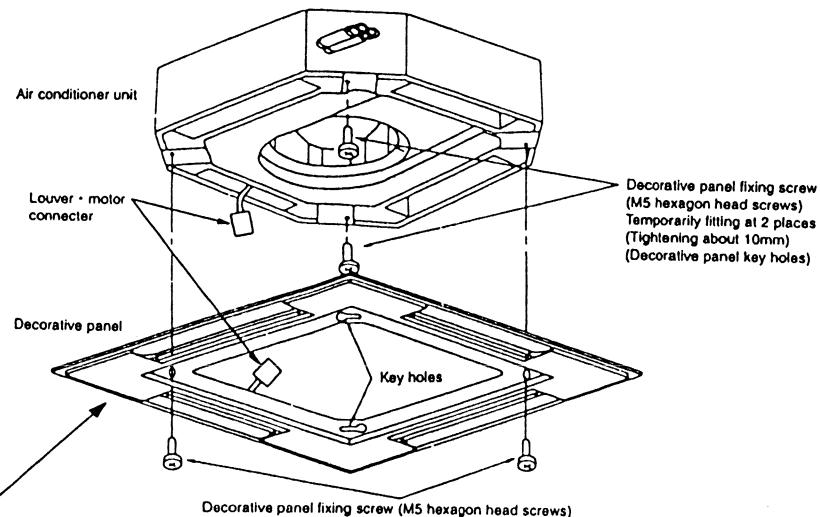

⚠ Make sure that the panel is installed so that it faces the correct way. The arrow (→) should point to the side where the pipes are.

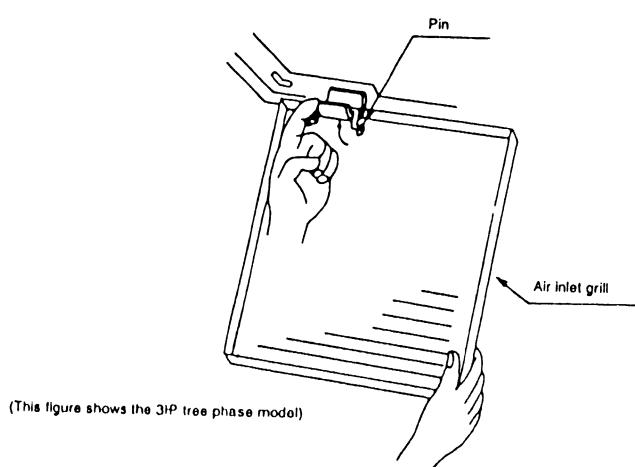


5. PIPING CONNECTION

1. Form the piping according to its routing. Avoid bending and bending back the same piping point more than three times. (This will result in hardening the pipe.)
2. After deforming the piping, align centers of the union fitting of the indoor unit and the piping, and tighten them firmly with wrenches.
3. Connect pipe to the service valve or ball valve which is located below the outdoor unit.
4. After completed the piping connection, be sure to check if there is gas leakage in indoor and outdoor connection.

! Vacuum drying

After completing the piping connection, execute vacuum drying for the connecting piping and the indoor unit. The vacuum drying must be carried out using the service ports of both the liquid and gas side valves.


Model name	Liquid side piping	Gas side piping
CS-40U32JP CS-50U32JP	φ6.35mm	φ12.7mm
CS-71U32JP	φ6.35mm	φ15.88mm
CS-80U32JP CS-80U32JP	φ9.52mm	φ15.88mm
CS-112U32JP CS-140U32JP CS-160U32JP	φ9.52mm	φ19.05mm

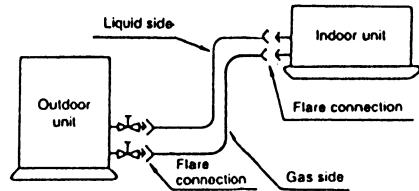

CAUTION

Use two wrenches and tighten with regular torque.

TIGHT TORQUE FOR FLARE NUT (N · m)			
2/8"	18	5/8"	65
3/8"	42	6/8"	100
4/8"	55		

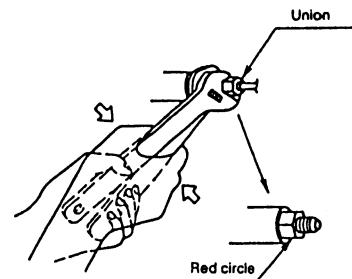


- o After connecting the pipes, be sure to check that the red circle on the union (thin end) is facing downward.

6. ELECTRICAL WIRING


- Route the indoor/outdoor control wires and remote control cord apart from the other power cables to prevent the incorrect operation (noise is generated)

Connecting the wires to the junction box cover

- Remove the six mounting screws, remove the junction box cover, and then connect the wires by following the procedure given in the illustration at right.

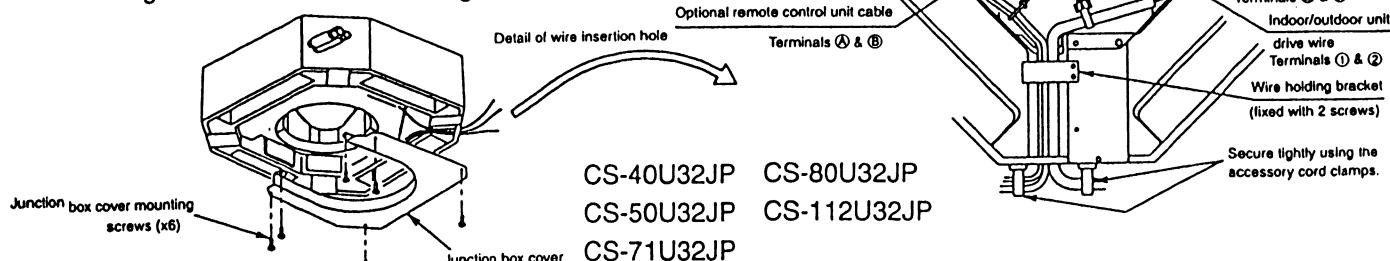


- Remove the two mounting screws and then remove the junction box cover. Next, remove the two mounting screws, remove the junction box, and then connect the wires by following the procedure given in the illustration below.

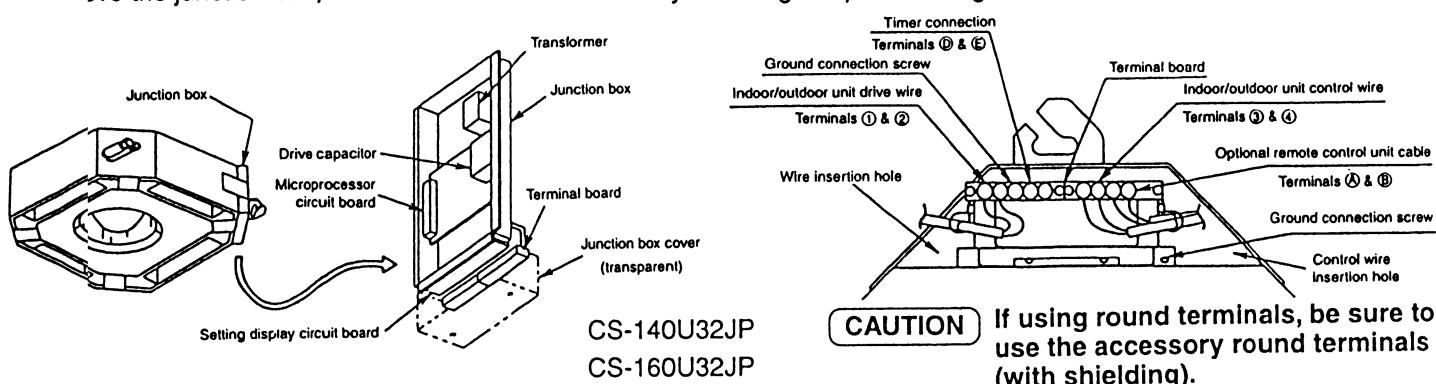

Notes on connecting the looper motor

- The looper motor connector (8-pin connector (white)) is inside the power supply box.
- Remove the power supply box cover and make the connection inside the box.
- Be extremely careful not to damage the printed circuit board when connecting the connector.
- After connecting the connector, close the power supply box while being careful not to clamp the cord with the cover.

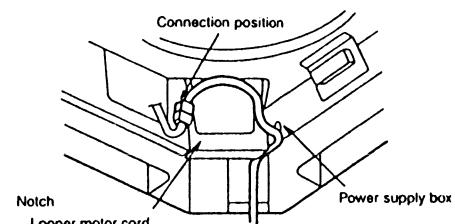


CS-40U32JP CS-71U32JP CS-112U32JP
CS-50U32JP CS-80U32JP

CAUTION IN WIRING AND MAINTENANCE


The Control box is possible to detach from maintenance cover of decorative panel.

- Allow a 30~40cm slack in the power wires.
- Allow a 30~40cm slack in the control wires and remote controller wires. (For easy detach of control box.)
- There is a polarity for ③, ④ of the control wires. Don't misplace.
- There is a polarity for A, B of the remote controller wires. Don't misplace.
- Missconnection may result in breakage of printed circuit boards.
- During the wiring, care must be taken not to damage printed circuit boards with a screwdriver, etc.
- After the wiring, remove the fixing tape for wires.

CS-140U32JP CS-160U32JP

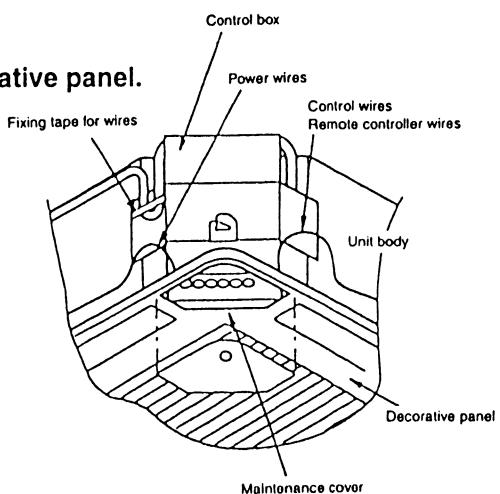

1. All wiring must comply with LOCAL REGULATIONS.
2. Select a power source that is capable of supplying the current required by the air conditioner.
3. Feed the power source to the unit via a distribution switchboard designed for this purpose.
4. Install a leakage breaker if the electrical wiring is subject to excessive moisture.
5. The terminal screws inside the control box may be loose due to vibration during transport.
Check the screws for loose connection. (Running the air conditioner with loose connection can overload and damage electrical components.)
6. Check that the cable size, overcurrent devices, and switch specifications comply with those given in the table.
 - The wire diameters in the table indicate values compatible with a metal or resin conduit that can pass up to three such wires.
 - The overall length in the table indicates a value when the main power cord is subject to a voltage drop of 1%.
7. Always ground the air conditioner with a grounding wire and screw to meet the LOCAL REGULATIONS.
8. Be sure to connect the wires correctly to terminal block with connecting the crimp type ring terminal to the wires.

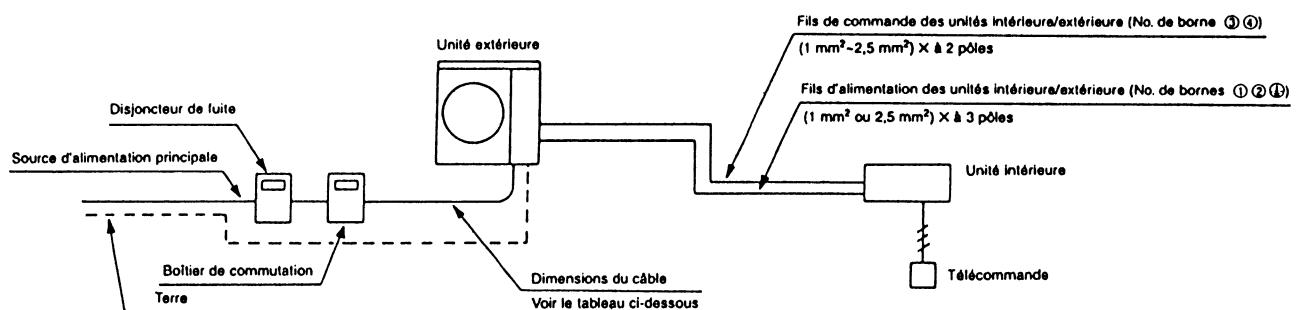

Model	Circuit breaker (A)	Switch box	Minimum power source cable size (mm ²)
CS-40U32JP	220-240V	30	30
CS-50U32JP	220-240V	30	30
CS-71U32JP	220-240V	40	60
CS-80U32JP	220-240V	40	60
CS-112U32JP	220-240V	30	30
CS-140U32JP	220-240V	30	30
CS-160U32JP	220-240V	40	40

* Cable size based on overall length 20m

Cautions


- 🚫 ● Where ground work (earth) is carried out, do not connect the ground return to the gas pipe, water line pipe, grounded circuit of the telephone and lightning rod, or ground circuit of other product in which earth leakage breaker is incorporated. (Such action is prohibited by statute, etc.)
- ⚠ ● In order to prevent malfunction (noise generation) of the equipment, carry out the wiring of the control cable for indoor and outdoor units (signal cable) isolating it from other power cable with separate cable.
- Use a standard power cord for Europe (such as H05RN-F or H07RN-F which conforms to CENELEC (HAR) rating specifications.)

7. DRAIN PIPING WORK

INDOOR UNIT DRAIN PIPING

- Drain piping must have down-slope (1/50 to 1/100); be sure not to provide up-and-down slope to prevent reversal flow.
- During drain piping connection, be careful not to exert extra force on the drain port at indoor unit.
- The outside diameter of the drain connection at the indoor unit is 32mm.

Piping material: Polyvinyl chloride pipe and pipe fittings

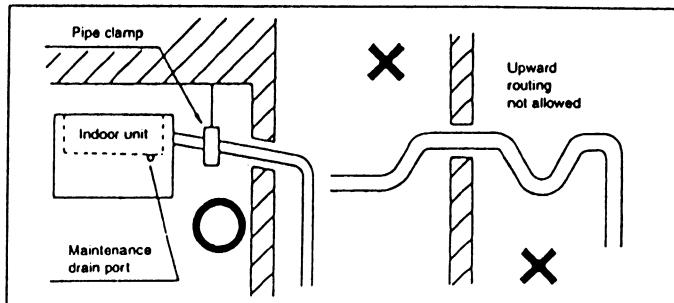


- !** ● Be sure to execute heat insulation on the drain piping.

Heat insulation material: Polyethylene foam with thickness more than 8mm

Drain test

The air conditioner uses a drain up motor to drain water.


Use the following procedure to test the drain up motor operation:

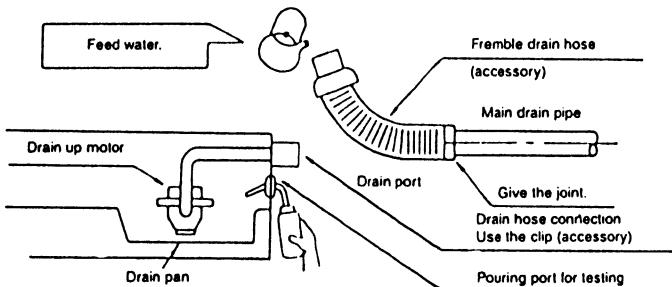

- Connect the main drain pipe to exterior and leave it provisionally until the test comes to an end.
- Feed water to the flexible drain hose and check the piping for leakage.
- Be sure to check the drain up motor for normal operating and noise when electric wiring is complete.
- Upon completion of the final adjustment, pour water into the drain pan and make sure that it flows smoothly.
- When the test is complete, connect the flexible drain hose to the drain port on the indoor unit.

8. HEAT INSULATION


- !**
1. For the refrigerant and drain pipings, execute referencing the piping procedure label packed with the unit body.
 2. Use the heat insulation material for the refrigerant piping which has an excellent heat-resistance (over 120 degree C).

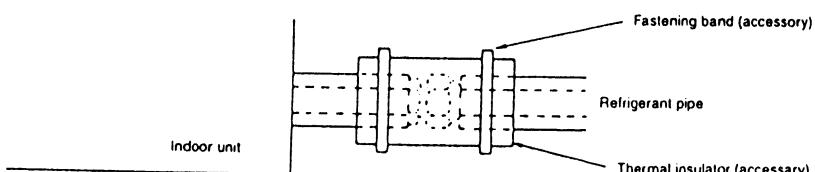

3. Precautions in high humidity circumstance:

This air conditioner has been tested according to the "JIS Standard Conditions with Mist" and confirmed that there is not any fault. However, if it is operated for a long time in high humid atmosphere (dew point temperature: more than 23 degree C), water drops are liable to fall. In this case, add heat insulation material according to the following procedure:

- Heat insulation material to be prepared... Adiabatic glass wool with thickness 10 to 20mm
- Stick glass wool on all air conditioners that are located in ceiling atmosphere.
- In addition to the normal heat insulation (thickness: more than 8mm) for refrigerant piping (gas piping: thick piping) and drain piping, add further 10mm to 30mm thickness material.

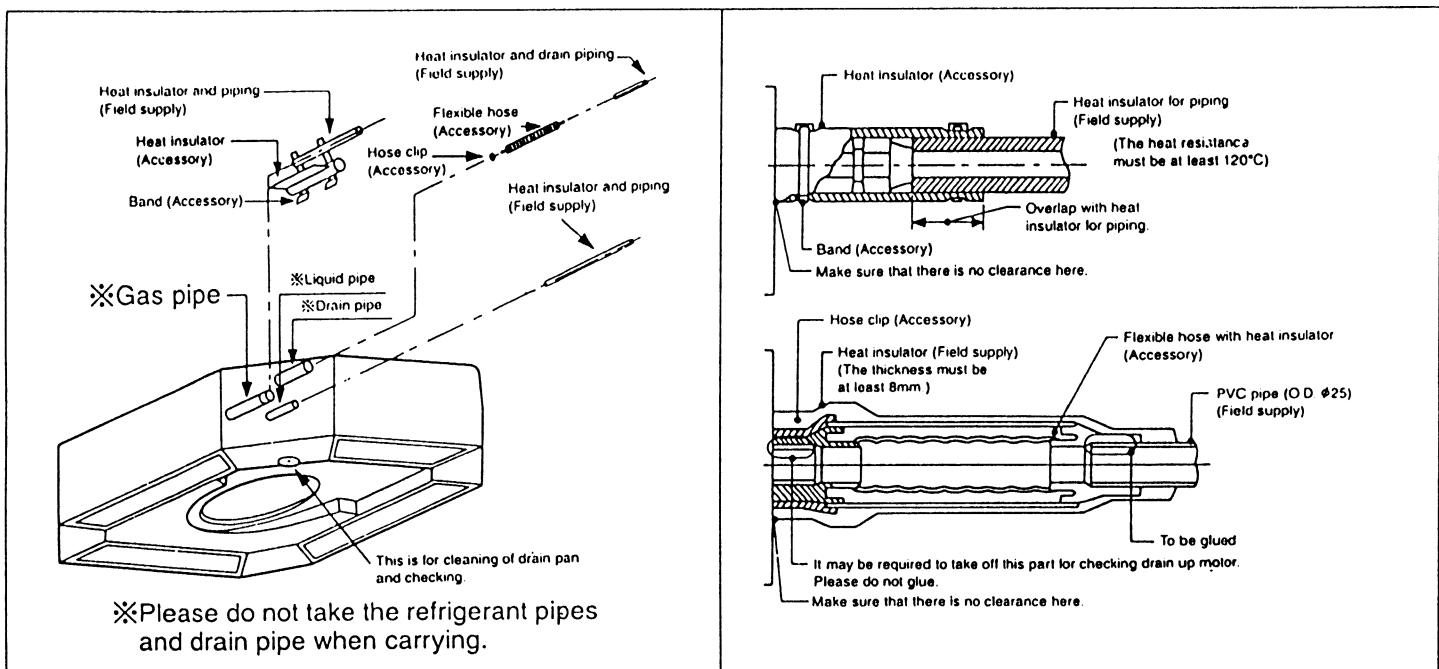

9. SELF-DIAGNOSES FUNCTION


SELF-DIAGNOSIS FUNCTION

- The LED1 (green) illuminates to indicate that the microprocessor on the microprocessor circuit board is operating normally. If the LED is switched off or is flashing irregularly, check the power supply, and turn it off and then back on again.
- The display screen on the wired remote control unit and the self-diagnosis LEDs (red) on the printed circuit board in the indoor unit can be used to indicate where the location of a problem is. Refer to the table below to remove the cause of the problem, and then re-start the air conditioner unit.
- If the "CHECK" display on the wired remote control unit is flashing, the details of the problem(s) are displayed on the timer display screen each time the CHECK button is pressed. Further details of the problem can be displayed by pressing the TIMER ON/OFF button while the general problem details are being displayed.
- If the "CHECK" display on the wired remote control unit is not flashing, press the CHECK button continuously for 5 seconds or more to display the problem details for the last problem or the problem before that. You can then switch between the displays for the previous problem and the problem before that by pressing the TIMER, FORWARD or BACK buttons. Press the CHECK button once more to return to the normal display.
- If the problem disappears and operation returns to normal, the CHECK display on the remote control unit will switch off, but the self-diagnosis LED will remain illuminated until operation is resumed.

Wired remote control unit display	Wireless receiver [RUN] LED	Indoor unit circuit board LED 2	Outdoor unit circuit board LED	Location of problem	Check location
Abnormal display	Detail display				
F15	- 01	○ Flashing	○	For further details, refer to the section on outdoor unit self-diagnosis.	Drain level float switch problem
F16	- 01	○	○		Louver switch problem
F17	- 01	○	○		Option problem
F20	- 01	○	○		Indoor temperature thermistor problem
	- 02	○	○		Remote control thermistor problem
F21	- 01	○	○		Pipe temperature thermistor problem (indoor unit side)
F25	- 01	○	○		Centralized control address overlap problem
F26	- 01	○	○		Remote control transmission wire open circuit problem
	- 02	○	○		Remote control transmission problem
F27	- 01	○	○		Indoor/outdoor unit transmission wire open circuit problem
	- 02	○	○		Indoor/outdoor unit transmission problem
F29	- OO	○	○		Setting problem
F30-F49	- OC	○	○		Outdoor unit problem

10. USE OF TIMER (LOCAL ARRANGEMENTS)

Connect the contactor of the timer to "TM," ④ and ⑤.

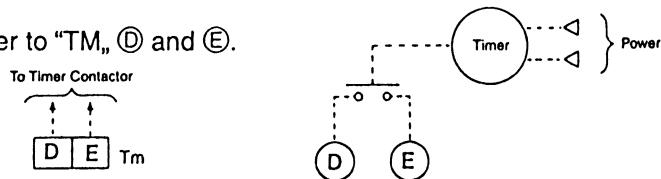


11. TEST OPERATION

- Test operation can be carried out using the remote control unit or at the outdoor unit. (If carrying out test operation at the outdoor unit, refer to "Test Operation" in the outdoor unit installation manual.)
- If using the remote control unit to carry out test operation, follow the procedure given below.



- First, press the RUN button.
- Then press the TEST button within 1 minute of pressing the RUN button.
- Next, select the operation modes. (When carrying out test operation, be sure to select cooling mode first, and run the units in this mode for 5 minutes or more.)
- The temperature of the indoor unit pipes will be shown on the temperature setting display. (At the start of test operation, it may take up to 1 minute for air conditioner number, switching time and other displays to appear.)
- After operation modes have been selected, momentarily stop the compressor.
- Press the RUN button or the TEST button once more to cancel test operation mode.

NOTE 1 These units are equipped with connection error prevention circuits. If the units do not operate, it is possible that the connection error prevention circuits have operated. In such cases, check that the drive wires (connected to terminals [1] and [2]) and the control wires (connected to terminals [3] and [4]) are connected correctly. If they are connected incorrectly, connect them correctly. Normal operation should then commence.

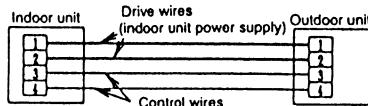

NOTE 2 Do not short the remote control unit wires to each other. (The protection circuit will be activated and the units will not operate.) Once the cause of the short is eliminated, normal operation will then be possible.

NOTE 3 When running the units in heating mode during test operation, be sure to run the units in cooling mode first before selecting this mode. If heating mode is selected first, it may cause problems with operation of the compressor.

NOTE 4 Test operation should be carried out for a minimum of 5 minutes. (Test operation will be canceled automatically after 30 minutes.)

NOTE 5 Test operation mode should always be canceled once test operation itself has been completed.

12. CHECK THE FOLLOWING ITEMS WHEN INSTALLATION IS COMPLETE

- After completing work, be sure to measure and record trial run properties, and store measuring data, etc.
- Measuring items are room temperature • outside temperature • suction temperature • blow out temperature • wind speed • wind amount • voltage • current • abnormal vibration • abnormal noise • running pressure • pipe temperature • withstand pressure and air tight pressure.
- As for structure and appearance, check on the below items.

Is circulation of air adequate?

Is remote controller switch operated?

Is draining smooth?

Are there any faulty wiring?

Is heat insulation complete?
(refrigerant and drain piping)

Are not terminal screws loosened?

Is there any leakage of refrigerant?

Tightening torque (N · cm {kgf · cm})
M4...118 {12}, M5...196 {20}

M6...245 {25}, M8...588 {61}

13. DELIVERY TO OUR CUSTOMERS

- Teach the customer the operation and maintenance procedures, using the operation manual (air filter cleaning, temperature control, etc.)

As for work specifications of the outdoor unit, read the WORK INSTRUCTION attached to the outdoor unit.

PACKAGED AIR CONDITIONERS

INSTALLATION MANUAL

For outdoor unit

As to instructions for installation work of the indoor side unit, see the work manual come with indoor unit.

MODEL NAME

CU-C5***
CU-**C0***
CU-**CT0*****

Precautions in terms of safety

Carry out the installation work with reliability after throughout reading of this "Precautions in terms of safety".

- Precautions shown here are differentiated between **Warnings** and **Cautions**, those that have much chance for leading to significant result such as fatality or serious injury if wrong installation should be carried out are listed compiling them especially into the column of **Warnings**. However, even in the case of items which are listed in the column of **Cautions**, such items also a chance for leading to significant result depending on the situations.

In either case, important descriptions regarding the safety are listed, then observe them without fail.

- As to indications with illustration

	This mark means "Caution" or "Warning".
	This mark means "Prohibition".
	This mark means "Compulsion".

- After installation work has been completed, not only make sure that the unit is free from any abnormal condition through the execution of dry run but also explain how to use and how to perform maintenance of this unit to the customer according to the instruction manual.

In addition, request the customer to keep this manual for installation work together with instruction manual.

Warnings	Warnings
<p>▲ As to installation, request the distributor or vendor to perform it. Imperfection in installation caused by that having been carried out by the customer himself leads to water leakage, electric shock, fire, etc.</p> <p>▲ Carry out the installation work with reliability according to this manual for installation work. Imperfection in installation leads to water leakage, electric shock, fire, etc.</p> <p>▲ Carry out the installation with reliability on the place that bears the weight of this unit sufficiently. Insufficient strength leads to injury due to falling of the unit.</p> <p>▲ Carry out predetermined installation work in preparation for strong wind such as typhoon, earthquake. Imperfection in installation work may lead to accident arisen from overturn, etc.</p> <p>▲ Electric work shall be carried out by the person qualified as an electric worker according to "Technical standards regarding electric installation", and manual for installation work, and use exclusive circuit without fail. Presence of insufficient capacity in power circuit or imperfection in execution leads to electric shock, fire, etc.</p> <p>▲ Wiring shall be connected securely using specified cables and fix them securely so that external force of the cables may not transfer to the terminal connection section. Imperfect connection and fixing leads to fire, etc.</p> <p>▲ Securely attach the protective covers for the outdoor unit connection cable and power cord so that they do not lift up after installation. If the covers are not properly attached and installed, the terminal connections may overheat, and fire or electric shock may result.</p> <p>▲ When connecting the piping, do not use let any air or other substances into the refrigeration cycle (pipes) except for the specified refrigerant (R22). If air or other substances should get into the refrigeration cycle, it will cause a drop in system performance; it may also cause abnormally high pressure to build up within the refrigeration cycle, and breakages could thus result.</p>	<p>▲ If refrigerant gas escapes during installation, ventilate the affected area. If the refrigerant gas comes into contact with sparks or naked flames, it will cause toxic gases to be generated.</p> <p>▲ Once installation work is complete, check that no refrigerant gas escapes. If it escapes in the room and comes into contact with sparks or flames from a fan heater, stove or kitchen range, it will cause toxic gases to be generated.</p>
	<p> Cautions</p> <p>▲ Carry out ground work. Do not connect the ground return to the gas pipe, water line pipe, lightening rod, ground return of the telephone. Imperfection in ground return may lead to electric shock.</p> <p>▲ Do not install the unit at the place where the possibility of inflammable gas leakage exists. If such gas leakage should arise and the gas builds up around the unit, such situation may lead to ignition.</p> <p>▲ Mounting of the earth leakage breaker is required. Omission in mounting of the earth leakage breaker may lead to electric shock.</p> <p>▲ Drain piping should be made to ensure secure drainage according to the manual for installation work and carry out the thermal insulation to prevent the occurrence of condensation. Imperfection in piping work leads to water leakage and may cause the house and property, etc. to become wet.</p> <p>▲ Position the indoor units, outdoor units, power cords and indoor/outdoor unit connection cables so that they are at least 1 meter away from televisions and radios. This is to avoid problems such as interference with picture and/or sound.(However,note that depending on the electromagnetic wave conditions, interference may still occur even if the separation distance is more than 1 meter.)</p>

1. Accessories supplied with outdoor unit

Part name	Qty.	Diagram	Application
Protective bushing	2		For protecting electrical wires
Binding strap	3		For tying electrical wires together


- The following parts are supplied as accessories with each outdoor unit. Check that all accessory parts are present before installing the outdoor unit.

Heat pump-types only			
Part name	Qty.	Diagram	Application
Drain elbow (with Ring seat)	1		For connecting the drain pipe


2. Selecting the outdoor unit installation location

- Select a location which satisfies the following condition, and then confirm with the customer that such a place is satisfactory before installing the outdoor unit.


- There should be sufficient ventilation.
- The outdoor unit should be sheltered as much as possible from rain and direct sunlight, and the air should be able to move around so that hot and cold air do not build up.
- There should be no animals or plants near the air outlet which could be adversely affected by hot or cold air coming out of the unit.
- The outlet air and operating noise should not be a nuisance to other occupants nearby.
- The location should be able to withstand the full weight and vibration of the outdoor unit, and it should also be level and safe for the unit to be installed.
- The intake and outlet should not be covered.
- There should be no danger of flammable gas or corrosive gas leaks.
- There should be as little back-ventilation (air blowing directly onto the fan) as possible.
(If strong wind blows directly onto the fan, it may cause problems with normal operation.)
- If you know which direction the prevailing wind comes from during the operating season, set the outdoor unit at a right-angle to this wind direction, or so that the air outlet faces toward a wall or fence.
- If there are no obstructions near the outdoor unit and the wind direction is not constant, install an optional air guider.
- Do not allow any obstacles near the outdoor unit which will interfere with air flow around the air intake and air outlet.
- If installing in a location which is prone to snowfall, place the installation base as high as possible, and be sure to install a roof or enclosure which does not allow snow to accumulate.
- Avoid installing the unit in places where petroleum products (such as machine oil), salinity, sulfurous gases or high-frequency noise are present.
- Be sure to leave enough space around the outdoor unit to maintain proper performance and to allow access for routine maintenance.
- Allow enough space from any obstacles as shown in Fig. 1.2 below in order to prevent short-circuits from occurring.
(If installing more than one outdoor unit, make the necessary space available as outlined in 14.)
However, there should be at least 1 meter of free space above the unit.
- The height of any obstacles at the air intake and outlet sides should not be greater than the height of the outdoor unit.

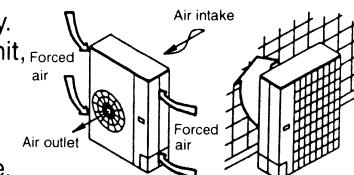


● When facing the air intake side toward a wall

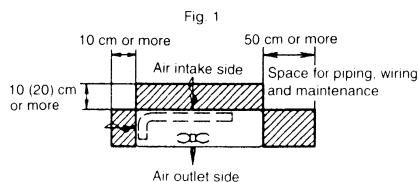

● When facing the air outlet side toward a wall

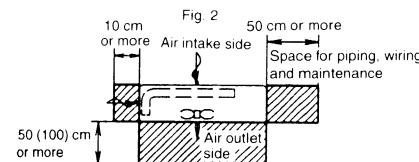

● When using an optional air guider for outdoor units

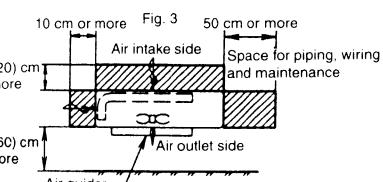

※ Maintain sufficient space above the unit.

- If it is not possible to leave 50 (100) cm at the air intake side as shown in Fig. 2, the installation method shown in Fig. 3 can be used if an optional air guider for outdoor units is installed. Install according to the instructions given in the separate instruction manual.

Air guider for outdoor units


MODEL NAME	PART NUMBER
CU-40C5*** CU-40C0*** CU-50C5*** CU-50C0*** CU-50CT0***	CZ-02AGA
CU-71C5*** CU-71C0*** CU-71CT0*** CU-80C5*** CU-80C0*** CU-80CT0***	CZ-03AGA
CU-100C0*** CU-100CT0*** CU-112C5*** CU-112C0*** CU-112CT0*** CU-140C5*** CU-140C0*** CU-140CT0*** CU-160C5*** CU-160C0*** CU-160CT0***	CZ-06AGA

NOTE When installing the air guider


- If directing the air upward, there should be no obstacles above the outdoor unit.
- If directing the air to the left or right, there should be no obstacles at the left or right of the outdoor unit.
- Never use the air guider in locations which are subject to snowfall. If snow gets inside the air guider, it could cause the fan to freeze up.
- If connecting outdoor units in series, direct the air flow upward.

14. If installing more than one outdoor unit, allow enough space around each unit as shown below.

● When installing units side by side

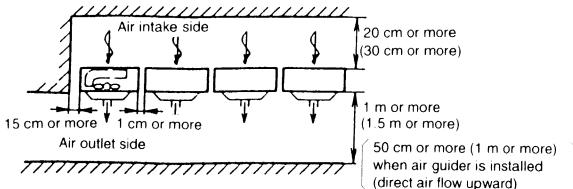

● When installing units facing each other

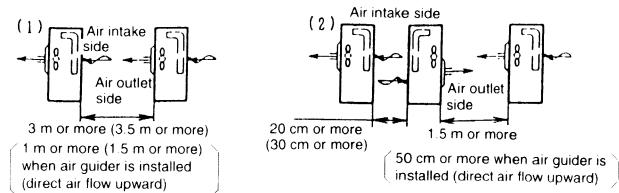

※ Maintain sufficient space above the units.

Values inside brackets indicate distances when installing the CU-112/140/160C5 *** or CU-100/112/140/160C0 ***

- The distances given are above are the minimum distances required in order to maintain proper performance. Allow as much space as possible in order to get the best performance from the units.

3. Transporting and installing the outdoor unit

● Transporting

- The outdoor unit should be transported in its original packaging as close to the installation location as possible.
- If suspending the outdoor unit, use a rope or belt, and use cloth or wood as padding in order to avoid damaging the unit.
- Use the handles at left and right to transport the unit, and be careful not to touch your hands or other objects against the fin.

● Installation

- Read the "Selecting the outdoor unit installation location" section thoroughly before installing the outdoor unit.
- If installing the unit to a concrete base or other solid base, use M10 or W 3/8 bolts and nuts to secure the unit, and ensure that the unit is fully upright and level.

(The anchor bolt positions are shown in the diagram at right.)

In particular, install the unit at a distance from the neighbouring building which conforms to regulations specified by local noise emission regulation standards.

- Do not install the outdoor unit to the building's roof.
- If there is a possibility that vibration may be transmitted to the rooms of the building, place rubber insulation between the unit and the installation surface.
- Drain water will be discharged from the outdoor unit when operating the system in heating or defrosting modes. Select an installation location which will allow the water to drain away properly, or provide a drainage channel so that the water can drain away.

(If this is not done, the drain water may freeze during winter, or the water may spill down to areas underneath the installation location.)

- If a drain pipe needs to be installed, insert the accessory drain elbow into the mounting hole at the bottom of the outdoor unit, and connect a hose with an inside diameter of 15 mm to this drain elbow. (The hose is not supplied.)



※ If using the drain elbow, install the outdoor unit on a base which is at least 5 cm high.

NOTE

In cold regions (where the outdoor air temperature can drop to 0°C or below continuously for 2 - 3 days), the drain water may freeze, and this may prevent the fan from operating. Do not use the drain elbow in such cases.


CAUTION

- Be sure to remove the compressor fixing brackets. (Some models are not equipped with compressor fixing brackets.)
- To remove, first remove the mounting screws, loosen the compressor mounting nuts and then pull sideways.
- After removing, be sure to tighten the compressor mounting nuts again.

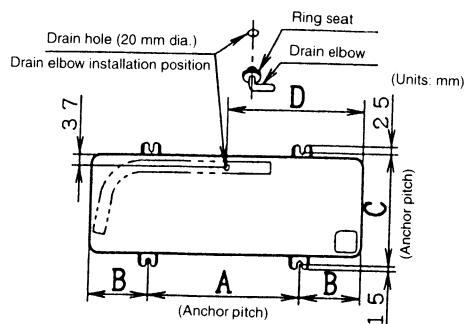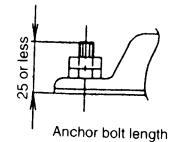

Anchor bolt positions

MODEL NAME	Amm	Bmm	Cmm	Dmm
CU-40C5*** CU-40C0*** CU-50C5*** CU-50C0*** CU-50CT0***	500	135	340	385
CU-71C5*** CU-71C0*** CU-71CT0*** CU-80C5*** CU-80C0*** CU-80CT0*** CU-100C0*** CU-100CT0*** CU-112C5*** CU-112C0*** CU-112CT0***	500	200	360	450
CU-140C5*** CU-140C0*** CU-140CT0*** CU-160C5*** CU-160C0*** CU-160CT0***	700	200	360	720

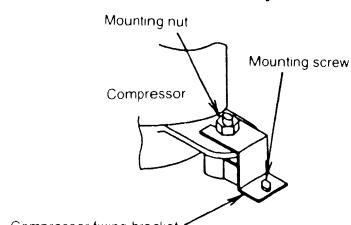

4. Connecting the pipes

- The refrigerant pipes are of particular importance. The installation work for refrigeration cycles in separate-type air conditioners must be carried out perfectly.

1. Refer to the table below for the pipe diameters, equivalent lengths and indoor/outdoor unit difference of elevation.


Model name	Pipe diameter (mm)		Equivalent length (m)	Difference of elevation (m)	Model name	Pipe diameter (mm)		Equivalent length (m)	Difference of elevation (m)
	Liquid-side pipes	Gas-side pipes				Liquid-side pipes	Gas-side pipes		
CU-40C5 *** CU-40C0 ***	φ 6.35	φ 12.7	30	30	CU-80C5 *** CU-80C0 *** CU-80CT0 *** CU-100C0 *** CU-100CT0 ***	φ 9.52	φ 15.88	50	30
CU-50C5 *** CU-50C0 *** CU-50CT0 ***	φ 6.35	φ 12.7	40	30	CU-112C5 *** CU-112C0 *** CU-112CT0 *** CU-140C5 *** CU-140C0 *** CU-140CT0 *** CU-160C5 *** CU-160C0 *** CU-160CT0 ***	φ 9.52	φ 19.05	50	30
CU-71C5 *** CU-71C0 *** CU-71CT0 ***	φ 6.35	φ 15.88	50	30					

2. Local pipes can project in any of four directions.

- Make holes in the pipe panels for the pipes to pass through.
- Be sure to install the pipe panels to prevent rain from getting inside the outdoor unit.

[Removing the service panel]

- Remove the two mounting screws.
- Slide the service panel downward to release the pawls.
After this, pull the service panel toward you to remove it.

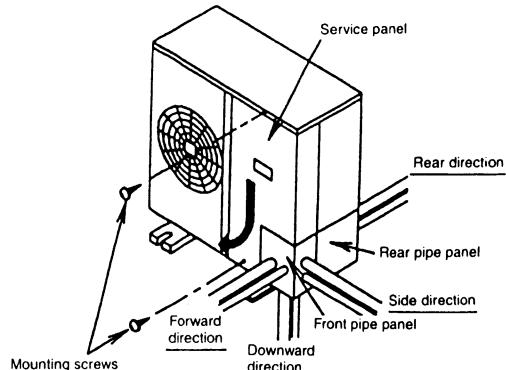


3. Notes when connecting the refrigeration pipes

- Use clean copper pipes with no water or dust on the insides.
- Use phosphorus-free, unjointed copper pipes for the refrigerant pipes.
- If it is necessary to cut the refrigerant pipes, be sure to use a pipe cutter, and use compressed nitrogen or an air blower to clean out any foreign particles from inside the pipe.
- Be careful not to let any dust, foreign materials or water get inside the pipes during connection.
- If bending the pipes, allow as large a bending radius as possible. Do not flex the pipes any more than necessary.
- If joining pipe ends, do so before tightening the flare nut.
- Always blow the pipe end with nitrogen while joining pipe ends.
(This will prevent any oxide scaling from occurring inside the pipe.)
- If using long pipe lengths with several joined pipe ends, insert strainers inside the pipes.
(Strainers are not supplied.)
- When tightening the flare nuts, coat the flares (both inside surfaces) with a small amount of refrigerator oil, and screw in about 3 - 4 turns at first by hand.
- Refer to the following table for the tightening torques. Be sure to use two spanners to tighten. (If the nuts are over-tightened, it may cause the flares to break or leak.)

Flare nut tightening torque		N • m {kgf • cm}	
φ 6.35mm	18 {180}	φ 15.88mm	65 {650}
φ 9.52mm	42 {420}	φ 19.05mm	100 {1000}
φ 12.7mm	55 {550}		

4. After piping connection has been completed, make sure that terminal areas of the indoor and outdoor units are free from gas leakage by the use of nitrogen, etc.

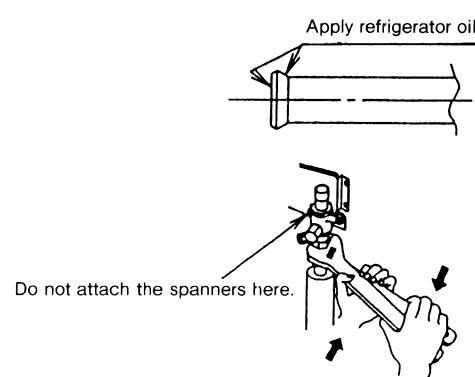

5. Air purge within connection piping shall be carried out by evacuation.

5. Heat insulation


Caution

Use a material with good heat-resistant properties as the heat insulation for the pipes. Be sure to insulate both the gas-side and liquid-side pipes. If the pipes are not adequately insulated, condensation or water leakages may occur.


Liquid-side pipes	Material that can withstand 120°C or higher
Gas-side pipes	

6. Charging with refrigerant

◎ At the time of shipment from the factory, this unit is charged with enough refrigerant for an equivalent pipe length of 30 m or 20 m. (Refer to the following table)

Additional Charging amount For standard type

Model Name	Equivalent Piping Length		MAX Equivalent Length
	30m or less	30m or more	
CU-40C5***	CU-40C0***	Not required	30m
CU-50C5***	CU-50C0***	Not required	40m
CU-71C5***	CU-71C0***	Not required	50m
CU-80C5***	CU-80C0*** CU-100C0***		
CU-112C5***	CU-112C0***	Not required	0.02kg/m
CU-140C5***	CU-140C0***		0.05kg/m
CU-160C5***	CU-160C0***		50m

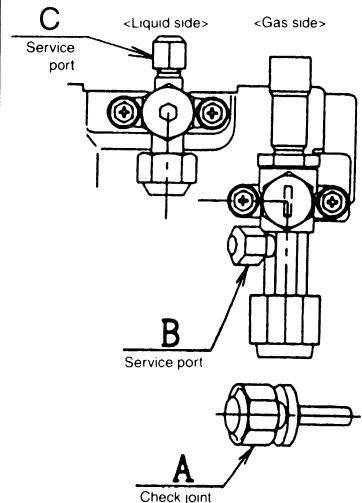

Additional Charging amount For CT0* type

Model Name	Equivalent Piping Length		MAX Equivalent Length
	20m or less	20m or more	
CU-50CT0***	Not required	0.02kg/m	40m
CU-71CT0***	Not required	0.02kg/m	50m
CU-80CT0*** CU-100CT0*** CU-112CT0*** CU-140CT0*** CU-160CT0***	Not required	0.05kg/m	50m

Checking the pressure

Check the pressure at the service port on the valve and the check joint where the pipe ends have been joined according to the table at right.

Heat pump model

	A	B
During cooling operation	High pressure	Low pressure
During heating operation	Low pressure	High pressure

Cooling only model

	C	B
During cooling operation	High pressure	Low pressure

7. Electrical wiring


WARNING	All electrical work must be carried out only by a qualified technician according to proper technical standards for electrical work and according to instructions given in the installation manual, and only the proper specified circuits must be used. If circuits with insufficient capacity are used, or if electrical work is not carried out properly, electric shocks or fire may result.
----------------	---

Caution	Be sure to install a leakage current breaker or circuit breaker to the main power supply, otherwise electric shocks may result.
----------------	---

Caution	Be sure to connect the unit to a secure earth connection. Use the special earthing screw to connect the unit to earth (with a earth resistance of $100\ \Omega$ or less) with a earthing wire as specified in the table below. If the earthing work is not carried out properly, electric shocks may result.
----------------	--

- ◎ Connect the power supply wiring and indoor/outdoor unit connection wiring according to the electrical circuit diagram instructions.
- ◎ Clamp the wires securely to the terminal connections using cord clamps so that no undue force is placed on the wires.
- ◎ Once all wiring work has been completed, tie the wires and cords together with the binding strap so that they do not touch other parts such as the compressor and pipes.

1. Connect the power supply line to a 3-phase/380~415V, or 220V(or single-phase 220~240V) power supply.
If the phase is reversed, the self-diagnosis function will be activated and the unit will not operate. In such cases, switch over any two of the power supply wires (L1(R), L2(S), L3(T)) (3-phase models only)
(Never operate the unit by pressing the electromagnetic switch.)
2. The binding screws inside the power supply box may become loosened due to vibration during transportation, so check that they are tightened securely.
3. Tighten the binding screws to the specified torque while referring to the table below.
4. If connecting two separate wires to a single crimped terminal, place the two crimped terminal wires together as shown in Fig. A.
(If the arrangement shown in Fig. B is used, poor contacts or contact damage may result.)
5. If momentarily turning on the power supply for both the indoor and outdoor units, do not turn the power off again until at least 1 minute has passed (except when a reversed phase has been detected).

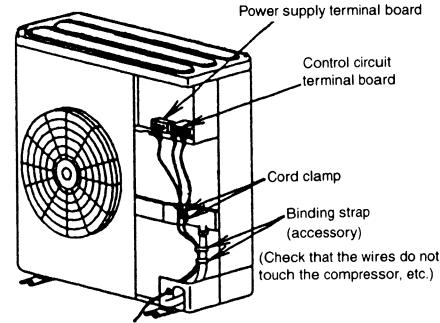


WARNING	Use only the specified cables for wiring connections. Connect the cables securely, and secure them properly so that no undue force will be applied to the terminal connections. If the terminals are loose or if the wires are not connected securely, fire may result.
----------------	--

Nominal screw radius	Tightening torque N·cm (kgfcm)
M 3	68~98 {7~10}
M 4	157~196 {16~20}
M 5	196~245 {20~25}


Refer to the following diagrams for details on how to connect the power supply cables and indoor/outdoor unit connection cables.

Outdoor unit/3-phase model

(When both indoor and outdoor unit draw power)

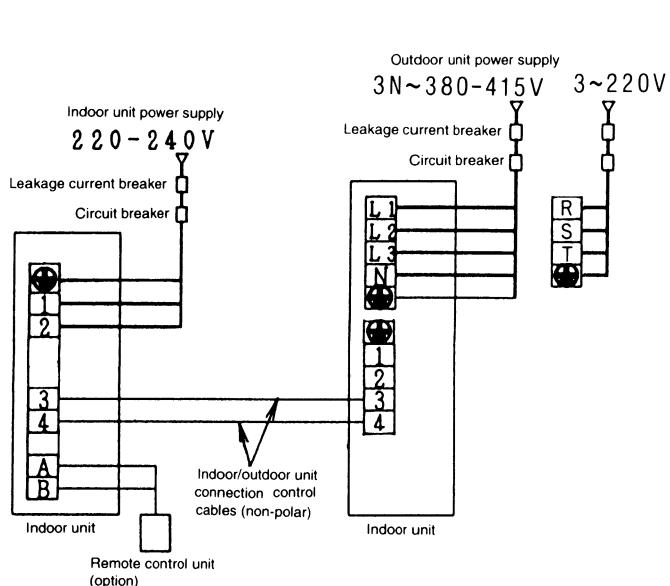


(When only the outdoor unit draws power)

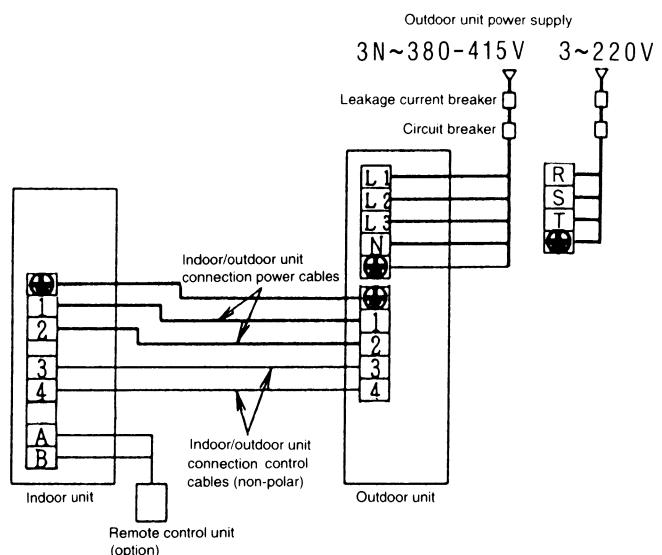


Outdoor unit/single-phase model

(When both indoor and outdoor unit draw power)

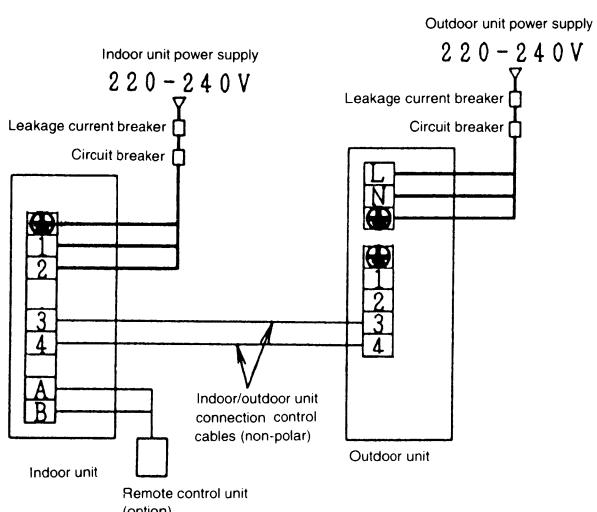

(When only the outdoor unit draws power)

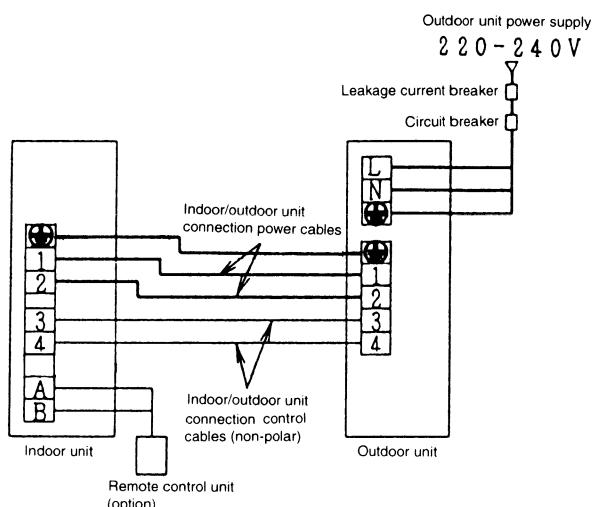

◎ Power supply specifications

Model		Leakage breaker (A)	Circuit breaker		Minimum power source cable size *1		Earthing cable size	Indoor/outdoor unit connection power cables terminals (1)-(2)	Indoor/outdoor unit connection power cables terminals (3)-(4)
			Switch(A)	Fuse(A)	(mm)	(mm ²)			
40C(1.5HP)	Single phase	220~240V	30	30	20	2.0	3.5		
50C(2HP)	Single phase	220~240V	30	30	30	2.6	5.5		
71C(2.5HP)	Single phase	220~240V	40	60	40	2.6	5.5	2.0mm ² (Ø1.6mm) or more	0.5~2.0 mm ² ×2
	Three phase	220V	20	30	20	2.0	3.5		
		380~415V	15	15	15	1.6	2.0		
80C(3HP)	Single phase	220~240V	40	60	40	2.6	5.5		
	Three phase	220V	30	30	30	2.6	5.5		
		380~415V	20	30	20	2.0	3.5		
100C(3.5HP)	Single phase	220~240V	40	60	60	3.2	8.0	3.5mm ² (Ø2.0mm) or more	0.5~2.0 mm ² ×2
	Three phase	220V	40	60	40	2.6	5.5		
		380~415V	30	30	20	2.0	3.5		
112C(4HP)	Three phase	220V	40	60	40	2.6	5.5		
		380~415V	30	30	20	2.0	3.5		
	Three phase	220V	50	60	50	3.2	8.0		
		380~410V	30	30	30	2.6	5.5		
140C(5HP)	Three phase	220V	60	60	60	3.2	8.0		
		380~415V	40	40	40	2.6	5.5		
160C(6HP)	Three phase	220V	40	40	40	2.6	5.5		
		380~415V							


*1 Cable size is based on overall length 20m.

Note

- 🚫 1. Where ground work (earth) is carried out, do not connect the ground return to the gas pipe, water line pipe, grounded circuit of the telephone and lightning rod, or ground circuit of other product in which earth leakage breaker is incorporated. (Such action is prohibited by statute, etc.)
- ⚠ 2. In order to prevent malfunction (noise generation) of the equipment, carry out the wiring of the control cable for indoor and outdoor units (signal cable) isolating it from other power cable with separate cable.
- 3. Select the particular size of electrical wire for power supply wiring in accordance with the standards of the given nation and region.

Connecting power supply cables

- If reversed phase is detected and the self-diagnosis function is activated after connecting the power supply cables, carry out the following operation.
Switch over any two of the power supply wires which are connected to the power supply terminal board.
Turn off the main power supply before correcting the phase.

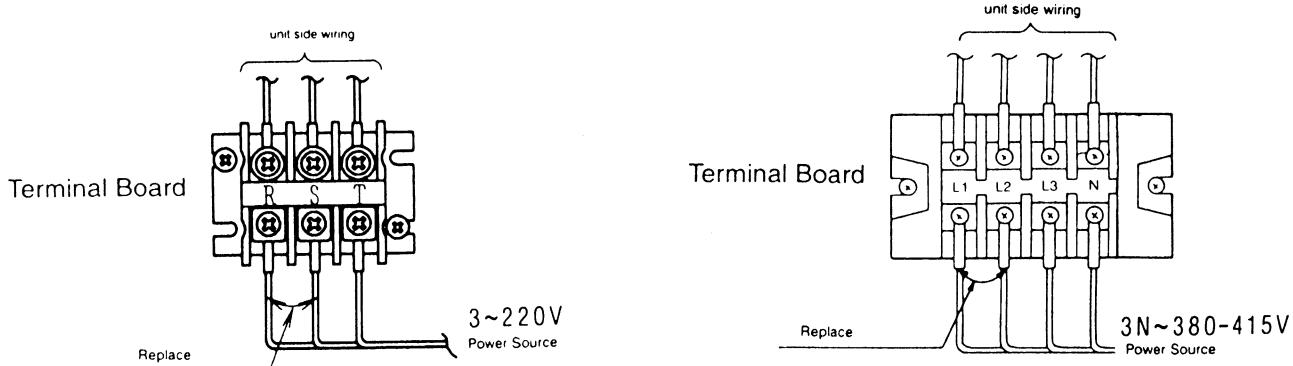

Caution


- Never operate the unit by pressing the electromagnetic switch.
- Never correct the phase by switching over any of the wires inside the unit.

8. Precautions with regard to test operation

Caution


- Always be sure to use a properly-insulated tool to operate the switch on the circuit board. (Do not use your finger or a metallic object.)
 - Never turn on the power supply until all installation work has been completed.
 - Open the circuit breaker before test operation extends past 6 hours. (The crankcase heater will then be energized.)
 - For three-phase models, check that the phase is not reversed.
(If the phase is reversed, the LED on the printed circuit board will flash.)
 - Check that the voltage is 198 V or higher when starting the unit. (The unit will not operate if the voltage is less than 198 V.)
 - Test operation can be carried out using the remote control unit or by using the switch on the printed circuit board inside the outdoor unit.
If carrying out test operation at the printed circuit board of the outdoor unit, follow the procedure given below.
(If using the remote control unit to carry out test operation, refer to the installation manual which is supplied with the indoor unit.)
 - Press the COOL or HEAT switch for 1 second or more.
The LEDs will operate as follows during test operation.
(be sure to select cooling mode first, and run the units in this mode for 5 minutes or more.)
- ※ The compressor will stop momentarily when the operation mode is changed.

Test operation mode	LEDs on printed circuit board
Cooling test mode	LEDs 2 - 4 flash, LEDs 5 - 8 switch off
Heating test mode	LEDs 2 - 5 switch off, LEDs 6 - 8 flash

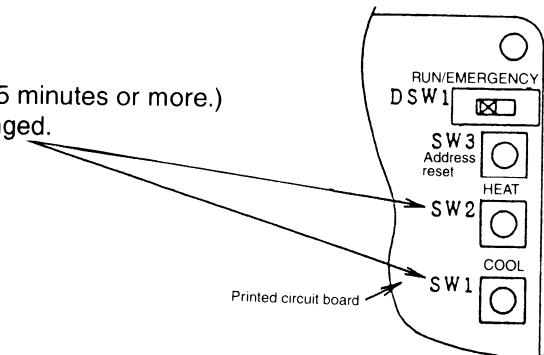

- Press the TEST button once more to cancel test operation mode.

NOTE 1 These units are equipped with connection error prevention circuits. If the units do not operate, it is possible that the connection error prevention circuits have operated. In such cases, check that the drive wires (connected to terminals [1] and [2]) and the control wires (connected to terminals [3] and [4]) are connected correctly. If they are connected incorrectly, connect them correctly. Normal operation should then commence.

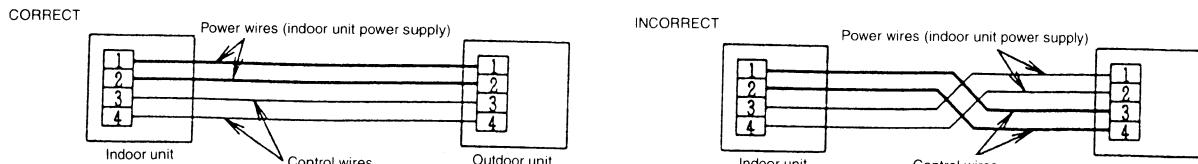

NOTE 2 Do not short the remote control unit wires to each other. (The protection circuit will be activated and the units will not operate.)

Once the cause of the short is eliminated, normal operation will then be possible.

NOTE 3 When running the units in heating mode during test operation, be sure to run the units in cooling mode first before selecting this mode. If heating mode is selected first, it may cause problems with operation of the compressor.

NOTE 4 Test operation should be carried out for a minimum of 5 minutes. (Test operation will be cancelled automatically after 30 minutes.)

NOTE 5 Test operation mode should always be cancelled once test operation itself has been completed.

NOTE 6 If the self-diagnosis function reports a problem but more than one problem has developed at the indoor and/or outdoor units, the problem display on the remote control unit may not match the LED display on the outdoor unit printed circuit board. In such cases, check both locations and remove the causes of the problems.

Emergency operation

Emergency operation can be carried out by setting the DSW1 switch on the printed circuit board inside the outdoor unit to the EMERGENCY position.

During emergency operation, any abnormalities detected by the temperature thermistors are ignored while the outdoor unit is operating, so that long-term operation in this mode should be avoided. After emergency mode operation has been completed and normal operation is to be resumed, turn the power supplies for the indoor and outdoor units off and then back on again.

- Set the abnormal temperature thermistor only to the setting in the table below when carrying out emergency operation.

	Thermistor	Cooling operation	Heating operation
Indoor unit side	Room temperature detection	Fixed at 25°C	
	Pipe temperature detection	Shorted	Open

	Thermistor	Cooling operation	Heating operation
Indoor unit side	Discharge thermistor detection	Open	Open
	Heat exchanger outlet temperature detection	Shorted	Open

※ Refer to the electrical circuit diagrams for details on wiring for each thermistor.

Self-diagnosis function

- The display screen on the wired remote control unit and the self-diagnosis LEDs (red) on the outdoor unit printed circuit board in the outdoor unit can be used to indicate where the location of a problem is. Refer to the table below to remove the cause of the problem, and then re-start the air conditioner system.

○……flashing, Blank……off

- The LED1 (green) illuminates to indicate that the microprocessor on the microprocessor circuit board is operating normally. If the LED is switched off or is flashing irregularly, check the power supply, and turn it off and then back on again.

Wired remote control unit display	Outdoor unit printed circuit board LED							Location of problem	Check location	
Abnormal display	Detail display	LED2	LED3	LED4	LED5	LED6	LED7	LED8		
F15	-01	○				○			Drain level float switch problem	Drain pump and drain pipe, indoor unit connectors CN6 & CN10, or relay connector
F16	-01		○			○			Louver switch problem	Louver motor, decorative panel connection terminal, or indoor unit connectors CN1 & CN6
F17	-01	○	○			○			Option problem	Option connection terminals
	-01	○			○				Indoor temperature thermistor problem	Indoor temperature thermistor lead wire or indoor unit connector CN1
F20	-02	○		○	○				Remote control thermistor problem	Remote control thermistor
F21	-01	○		○					Pipe temperature thermistor problem (indoor unit side)	Pipe temperature thermistor lead wire or indoor unit connector CN1
F25	-01		○						Centralised control address overlap problem	Check settings for optional centralised control circuit board address switch
F26	-01	○							Remote control transmission wire open circuit problem	Remote control unit cable and connection terminals
	-02	○							Remote control transmission problem	Check the transmission wave pattern
F27	-01	○				○			Indoor/outdoor unit transmission wire open circuit problem	Indoor/outdoor unit connection cable and connection terminals, or indoor unit and outdoor unit power supplies
	-02	○				○			Indoor/outdoor unit transmission problem	Check the transmission wave pattern.
F29	-01	○		○	○				Indoor unit setting problem	Contact the place of purchase.
	-02	○		○	○				Indoor unit setting problem	Contact the place of purchase.
	-12	○		○	○				Remote control unit setting problem	Contact the place of purchase.
F30	-02	○	○		○	○			Open phase, or reversed phase of power supply	Check the main power supply terminal board connections, or switch over any two of the power supply wires.
	-06	○	○		○	○			Poor power supply connection, or distorted voltage wave pattern	Check the main power supply terminal board connections, and check the power supply wave pattern.
	-07	○	○	○	○	○			Poor power supply connection	Check the main power supply terminal board connections.
F31	-01		○		○	○			Intake pressure protection	Insufficient gas
	-02	○			○	○			High-pressure cut-off	Refrigeration system
F33	-01	○			○	○			Compressor overcurrent protection	Open phase or lock in compressor, or blown main power supply fuse
	-02	○	○		○	○			Compressor discharge temperature protection	Insufficient gas
	-41	○		○	○				Compressor discharge temperature thermistor problem	Discharge temperature thermistor lead wire, outdoor unit connector CN2, or relay connector
F40	-61	○		○	○				Heat exchanger outlet temperature thermistor problem	Heat exchanger outlet temperature thermistor lead wire, outdoor unit connector CN2, or relay connector
	-02	○	○	○	○				High-pressure switch open circuit problem	High-pressure switch lead wire, outdoor unit connector CN2, or relay connector
F41	-03	○	○	○	○				Heating pressure switch open circuit problem	Heating pressure switch lead wire, outdoor unit connector CN2, or relay connector
	-12	○	○	○	○				Low-pressure switch open circuit problem	Low-pressure switch lead wire, outdoor unit connector CN2, or relay connector
F42	-01	○	○		○				Current detector open circuit or compressor current problem	Outdoor unit connector CN2, compressor internal protection system activated, or blown main power supply fuse
F49	-01	○		○	○	○			Outdoor unit setting problem	Contact the place of purchase.
	-02	○		○	○	○			Outdoor unit setting problem	Contact the place of purchase.

- If the problem disappears and operation returns to normal, the CHECK display on the remote control unit will switch off, but the self-diagnosis LED will remain illuminated until operation is resumed.

- If the outdoor unit is being run in emergency operation mode or test operation mode, the outdoor unit LEDs will flash, but this does not indicate the presence of an abnormality.

Outdoor unit printed circuit board LED							
LED2	LED3	LED4	LED5	LED6	LED7	LED8	
		○	○	○			Display during emergency operation
○	○	○			○	○	From outdoor unit during cooling test operation

9. As to making the inspection after completion of work fully understood

- At the time when the work has been completed, measure and record the characteristics of test run without fail and keep the measuring data, etc.
 - Carry out the measurement regarding room temperature, outside air temperature, suction and air discharge temperatures, wind velocity, wind volume, voltage, current, presence of abnormal vibration, operating pressure, piping temperature, compressive pressure, airtight pressure as items to be measured.
 - As to the structure and appearance, check following items.
- | | |
|--|---|
| <input type="checkbox"/> Short circuit of the blowout air. | <input type="checkbox"/> Mistake in wiring |
| <input type="checkbox"/> Smooth flow of the drain | <input type="checkbox"/> Reliable connection of the grand wire |
| <input type="checkbox"/> Reliable thermal insulation | <input type="checkbox"/> Looseness in terminal screw, fastening torque
M4...157~196N·cm {16~20kgf·cm}
M5...196~245·cm {20~25kgf·cm} |
| <input type="checkbox"/> Leakage of refrigerant | |

10. As to delivery to the customer

- Request the customer to operate this air conditioner viewing instruction manual come with indoor unit in practice and explain how to operate.
- Deliver the instruction manual to the customer without fail.


As to parts to be sold separately

We are preparing air guider for outdoor unit and parts to be sold separately for indoor unit, etc., however, as to details of mounting method, etc., observe respective instruction manual.

32. REPLACEMENT PARTS

■ INDOOR UNIT


CS-40U32JP, CS-50U32JP, CS-71U32JP, CS-80U32JP, CS-112U32JP

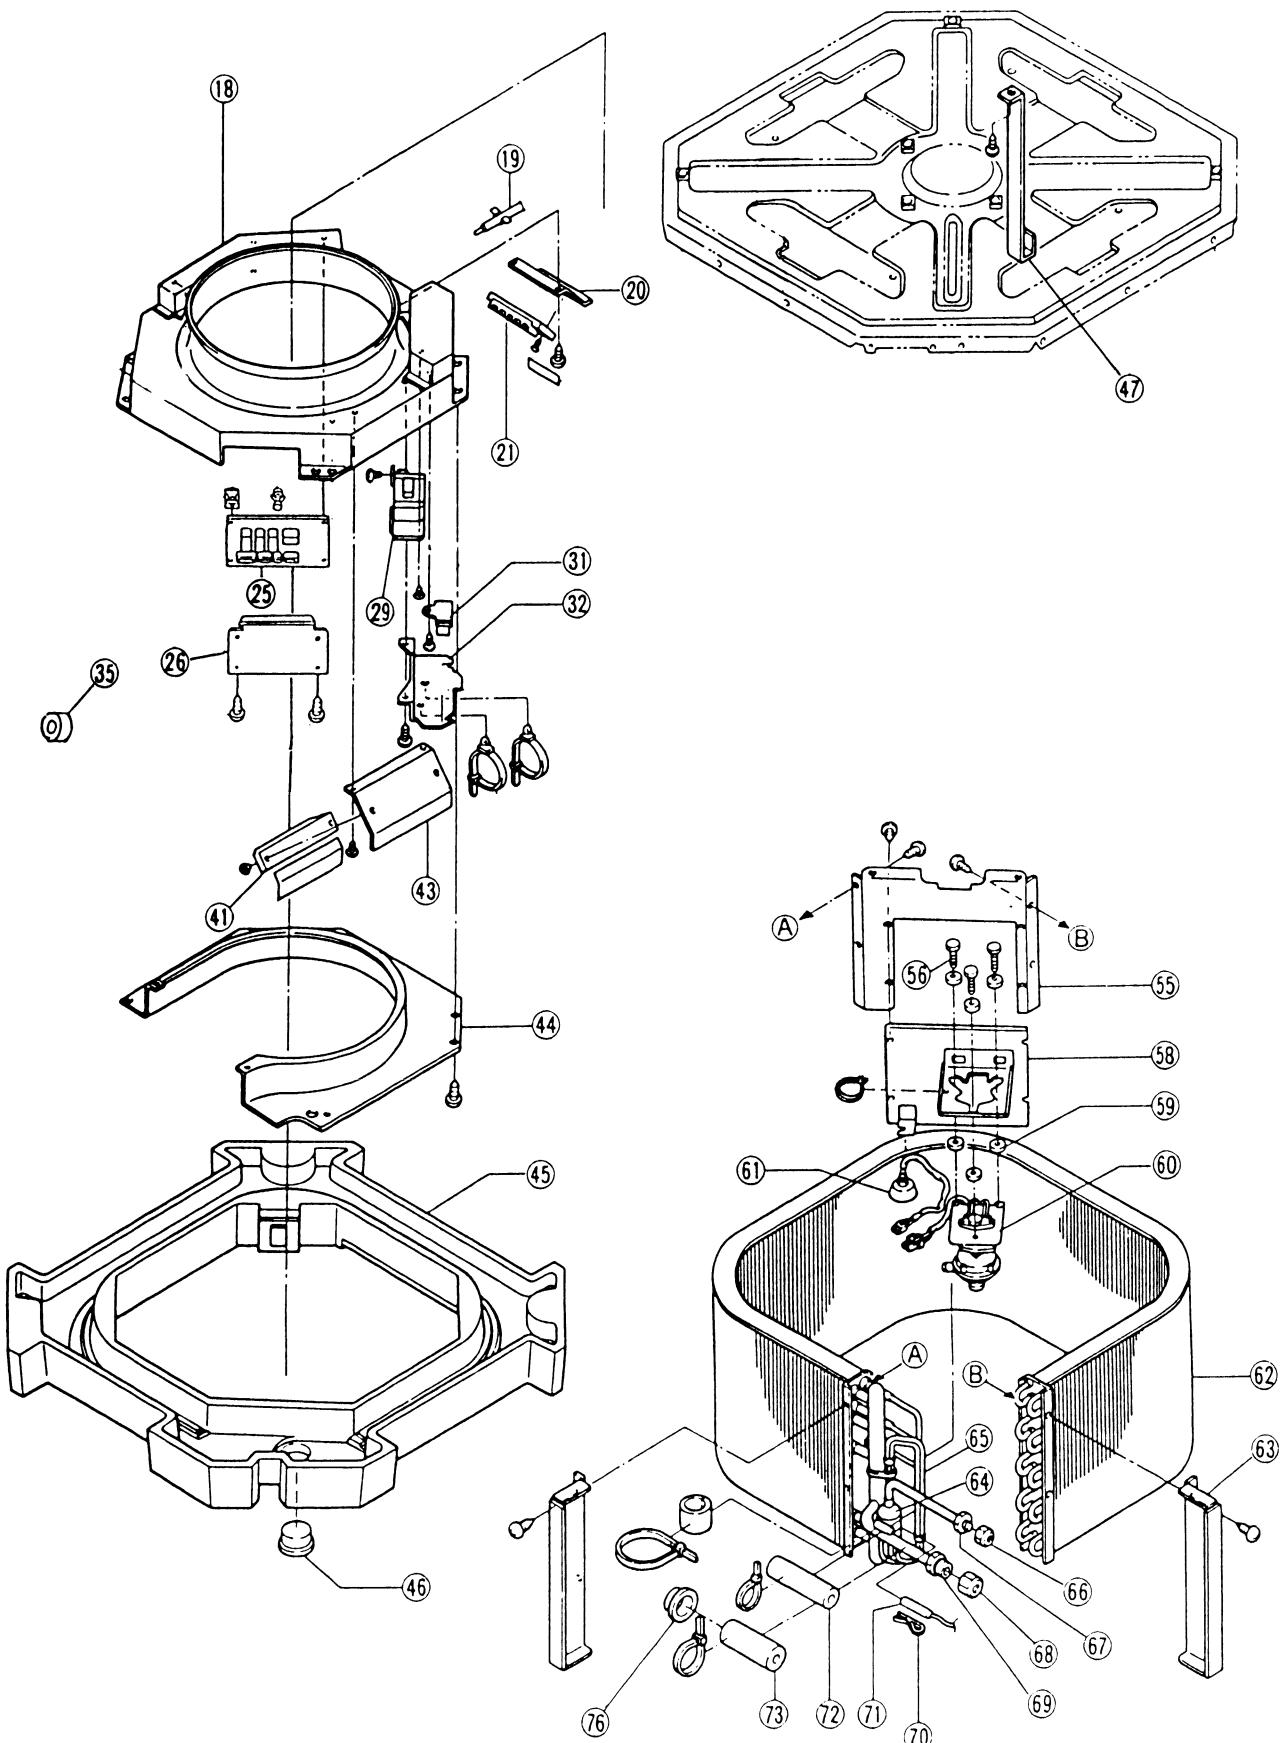

32. REPLACEMENT PARTS

■ INDOOR UNIT

CS-40U32JP, CS-50U32JP, CS-71U32JP, CS-80U32JP, CS-112U32JP

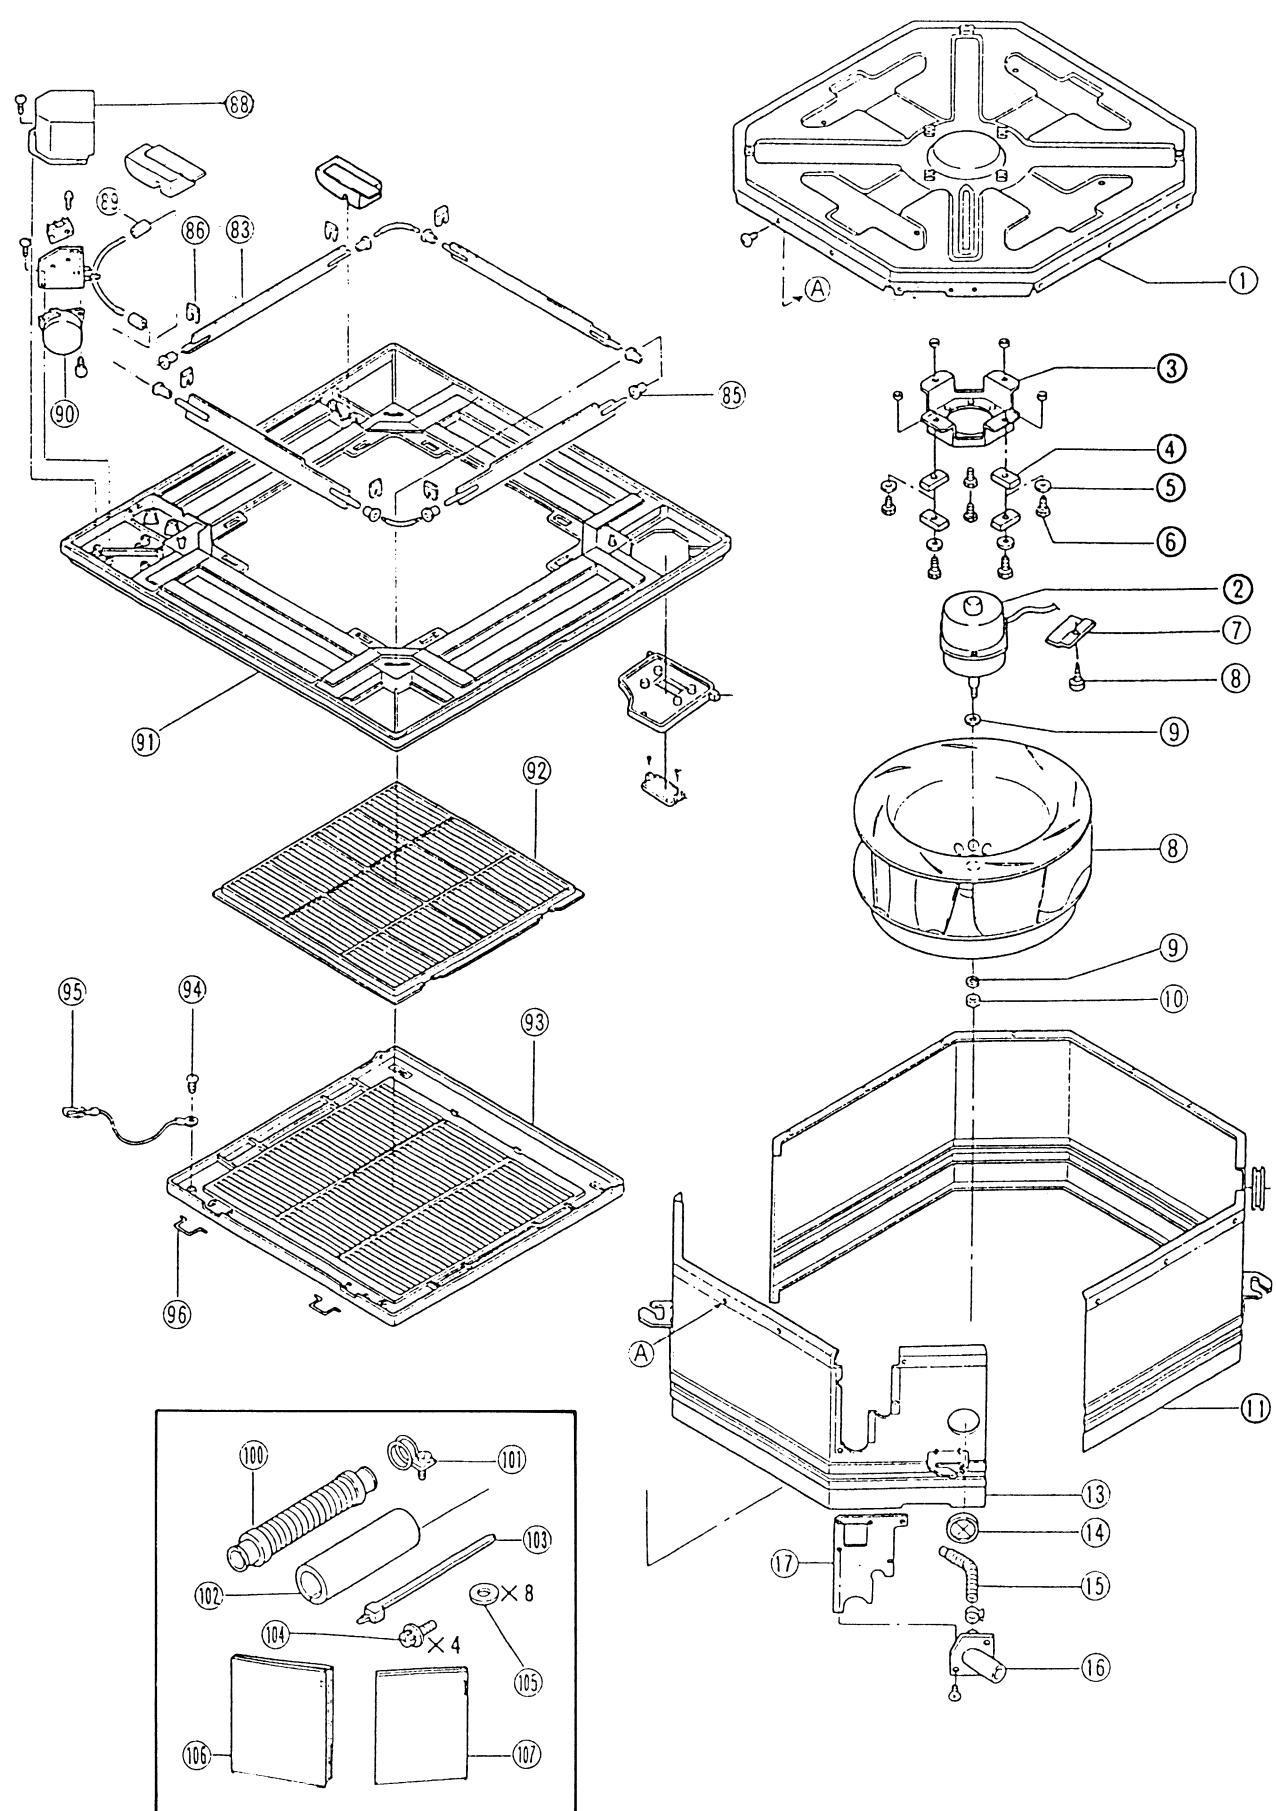

32. REPLACEMENT PARTS

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT					※REC PARTS
			40U32JP	50U32JP	71U32JP	80U32JP	112U32JP	
1	Cabinet As	42-571840	1	1	1	-	-	
		42-572040	-	-	-	1	-	
		42-571850	-	-	-	-	1	
2	Fan motor	06-855820	1	1	-	-	-	※
		06-854040	-	-	1	1	-	※
		06-854050	-	-	-	-	1	※
3	Fan motor base	06-816310	1	1	1	1	-	
		06-817660	-	-	-	-	1	
4	Fan motor mount	06-817950	4	4	4	4	4	
5	6 washer	38-490120	4	4	4	4	4	
6	Nut 5TS27	38-193610	4	4	4	4	4	
7	Washer	05-803630	1	1	1	1	1	
8	Turbo Fan	05-851210	1	1	1	1	1	
9	8 spring washer	38-427080	1	1	1	1	1	
10	8 nut	38-817010	1	1	1	1	1	
11	Cabinet side As(B)	42-562720	1	1	-	-	-	
		42-562200	-	-	1	-	-	
		42-562950	-	-	-	1	1	
12	Cabinet side As(F)	42-562710	1	1	-	-	-	
		42-562190	-	-	1	-	-	
		42-562940	-	-	-	1	1	
13	Square rubber	06-847100	1	1	1	1	1	
14	Rubber bush	39-251090	1	1	1	1	1	
15	Drain tube	02-869170	1	1	-	-	-	
		02-869010	-	-	1	1	1	
		02-868160	-	-	1	1	1	
16	Lead Pipe drain	06-845510	1	1	1	1	1	
		02-869080	1	1	-	-	-	
		02-868160	-	-	1	1	1	
18	Relay Box As	46-936400	1	1	-	-	-	
		46-936430	-	-	1	-	-	
		46-936610	-	-	-	1	1	
19	Thermister As	06-853650	1	1	1	1	1	※
20	Terminal Stay (A)	06-846450	1	1	1	-	-	
		06-847220	-	-	-	1	1	
		06-839680	1	1	1	1	1	
25	Printed circuit board	46-936310	1	1	1	1	1	※
26	P.C.Bord Stay	06-853950	1	1	1	-	-	
		06-854230	-	-	-	1	1	
29	Transformer As	06-855610	1	1	1	1	1	※
31	Capacitor (Fan motor)	06-855660	1	1	-	-	-	※
		06-835440	-	-	1	-	-	※
		06-833610	-	-	-	1	-	※
		06-835340	-	-	-	-	1	※
32	Transformer cover As	06-845530	1	1	1	-	-	
		06-847210	-	-	-	1	1	
35	EMI core	06-841970	1	1	1	1	1	
41	Terminal As(4P)	06-838530	1	1	1	1	1	
43	Terminal Stay (B)	06-846460	1	1	1	-	-	
		06-847230	-	-	-	1	1	
44	Cover Relay Box	06-846530	1	1	1	-	-	
		06-846970	-	-	-	1	1	
45	Drain Pan As	45-590960	1	1	-	-	-	
		45-590350	-	-	1	-	-	
		45-591410	-	-	-	1	1	

32. REPLACEMENT PARTS

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT					REC PARTS
			40U32JP	50U32JP	71U32JP	80U32JP	112U32JP	
46	Drain seal cap	05-811470	1	1	1	1	1	
47	Evaporator holder	05-852020	1	1	-	-	-	
		05-851170	-	-	1	1	-	
		05-852730	-	-	-	-	1	
55	Eva.center plate	05-851970	1	1	-	-	-	
		05-851140	-	-	1	-	-	
		05-852690	-	-	-	1	1	
56	Bolt 5TS 27	38-193610	3	3	3	3	3	
58	Panel drain pump As	46-861190	1	1	1	1	1	
59	Mount	06-487720	3	3	3	3	3	
60	Drain pump As	06-851140	1	1	1	1	1	*
61	Float Switch As	46-928590	1	1	1	1	1	*
62	Evaporater&Distributer	45-907140	1	-	-	-	-	
		45-907150	-	1	-	-	-	
		45-907220	-	-	1	-	-	
		45-907230	-	-	-	1	-	
		45-907240	-	-	-	-	1	
63	Seal Plate eva.	05-851990	1	1	-	-	-	
		05-851120	-	-	1	-	-	
		05-852720	-	-	-	1	1	
64	Distributer As	45-591520	1	-	-	-	-	
		45-591800	-	1	-	-	-	
		45-907270	-	-	1	-	-	
		45-591390	-	-	-	1	-	
		45-592080	-	-	-	-	1	
65	Capillary tube	05-852910	3	-	-	-	-	
		05-852170	-	3	-	-	-	
		05-829460	-	-	3	-	-	
		05-865440	-	-	2	-	-	
		05-832740	-	-	-	3	-	
		05-848630	-	-	-	2	-	
		05-851060	-	-	-	-	8	
65	Distributer	05-978710	1	1	-	-	-	
		05-851110	-	-	1	1	-	
		05-852660	-	-	-	-	1	
66	Flare nut(2/8) Flare nut(3/8)	38-890070	1	1	1	-	-	
		38-890080	-	-	-	1	1	
67	Union(2/8) Union(3/8)	05-974740	1	1	1	-	-	
		05-399710	-	-	-	1	1	
68	Flare nut(4/8) Flare nut(5/8) Flare nut(6/8)	38-890090	1	1	-	-	-	
		38-890100	-	-	1	1	-	
		38-890110	-	-	-	-	1	
69	Union(4/8) Union(5/8) Union(6/8)	05-962170	1	1	-	-	-	
		05-399720	-	-	1	1	-	
		05-950050	-	-	-	-	1	
70	Sensor spring	05-840710	1	1	1	1	1	
71	Coil sensor	06-826390	1	1	1	1	1	*
72	Heat insulation tube(6) Heat insulation tube(10)	05-974990	1	1	1	-	-	
		05-974240	-	-	-	1	1	
73	Heat insulation tube(13) Heat insulation tube(16) Heat insulation tube(16)	05-852900	1	1	-	-	-	
		05-968630	-	-	1	-	-	
		05-960830	-	-	-	1	1	

32. REPLACEMENT PARTS

Attached parts

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT					※REC PARTS
			40U32JP	50U32JP	71U32JP	80U32JP	112U32JP	
100	Drain horse	05-809090	1	1	1	1	1	
101	Crip Drain	05-955910	1	1	1	1	1	
102	Heat insulation tube (26)	05-975080	1	1	-	-	-	
102	Heat insulation tube (34)	05-975740	-	-	1	1	-	
102	Heat insulation tube (43)	05-975680	-	-	-	-	1	
104	Screw	38-791590	4	4	4	4	4	
105	10 washer	38-490450	8	8	8	8	8	
106	Operation Instruction	07-966420	1	1	1	1	1	
107	Installation manual	07-966480	1	1	1	1	1	

OPTIONAL ACCESSORY PARTS


REF.NO.	PARTS NAME	PARTS NUMBER CNR	CZ-02KPU01P					CZ-04KPU01P	※REC PARTS
			40U32JP	50U32JP	71U32JP	80U32JP	112U32JP		
83	Louver As	43-519090	4	4	4	-	-	-	-
		43-519110	-	-	-	4	4		
84	Flexible shaft	03-422010	2	2	2	-	-	2	2
		03-422020	-	-	-	2	2		
85	Wing supporter	03-422000	8	8	8	8	8	8	
86	Louver holder	03-421390	8	8	8	8	8	8	
87	Cover panel	03-422630	1	1	1	1	1	1	
88	Louver motor cover	06-826360	1	1	1	1	1	1	
89	Shaft tube	03-422030	2	2	2	-	-	2	2
		03-422040	-	-	-	2	2		
90	Louver motor As	46-832530	1	1	1	1	1	1	*
91	Grill outer	03-419320	1	1	1	-	-	1	1
		03-419160	-	-	-	1	1		
92	long life filter	03-419410	1	1	1	-	-	1	1
		03-419240	-	-	-	1	1		
93	Inlet grill	03-419400	1	1	1	-	-	1	1
		03-419230	-	-	-	1	1		
95	Wire As	47-502100	2	2	2	2	2	2	
96	Hinge wire	03-419430	2	2	2	2	2	2	

WIRED REMOTE CONTROLLER			CZ-10RT32P					※REC PARTS	
REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT						
			40U32JP	50U32JP	71U32JP	80U32JP	112U32JP		
110	Wired remote controller	06-855930	1	1	1	1	1		
111	Code	06-855500	1	1	1	1	1		
112	Installation manual	07-966690	1	1	1	1	1		

WIRELESS REMOTE CONTROLLER			CZ-10RW51P					※REC PARTS	
REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT						
			40U32JP	50U32JP	71U32JP	80U32JP	112U32JP		
120	Wireless remote controller	06-855850	1	1	1	1	1		
121	Holder	06-852910	1	1	1	1	1		
122	Dry battery (1 set)	47-598450	1	1	1	1	1		
123	Photo receiver unit As	46-936730	1	1	1	1	1		
124	Installation manual	07-966730	1	1	1	1	1		

32. REPLACEMENT PARTS


■INDOOR UNIT
CS-140U32JP, CS-160U32JP

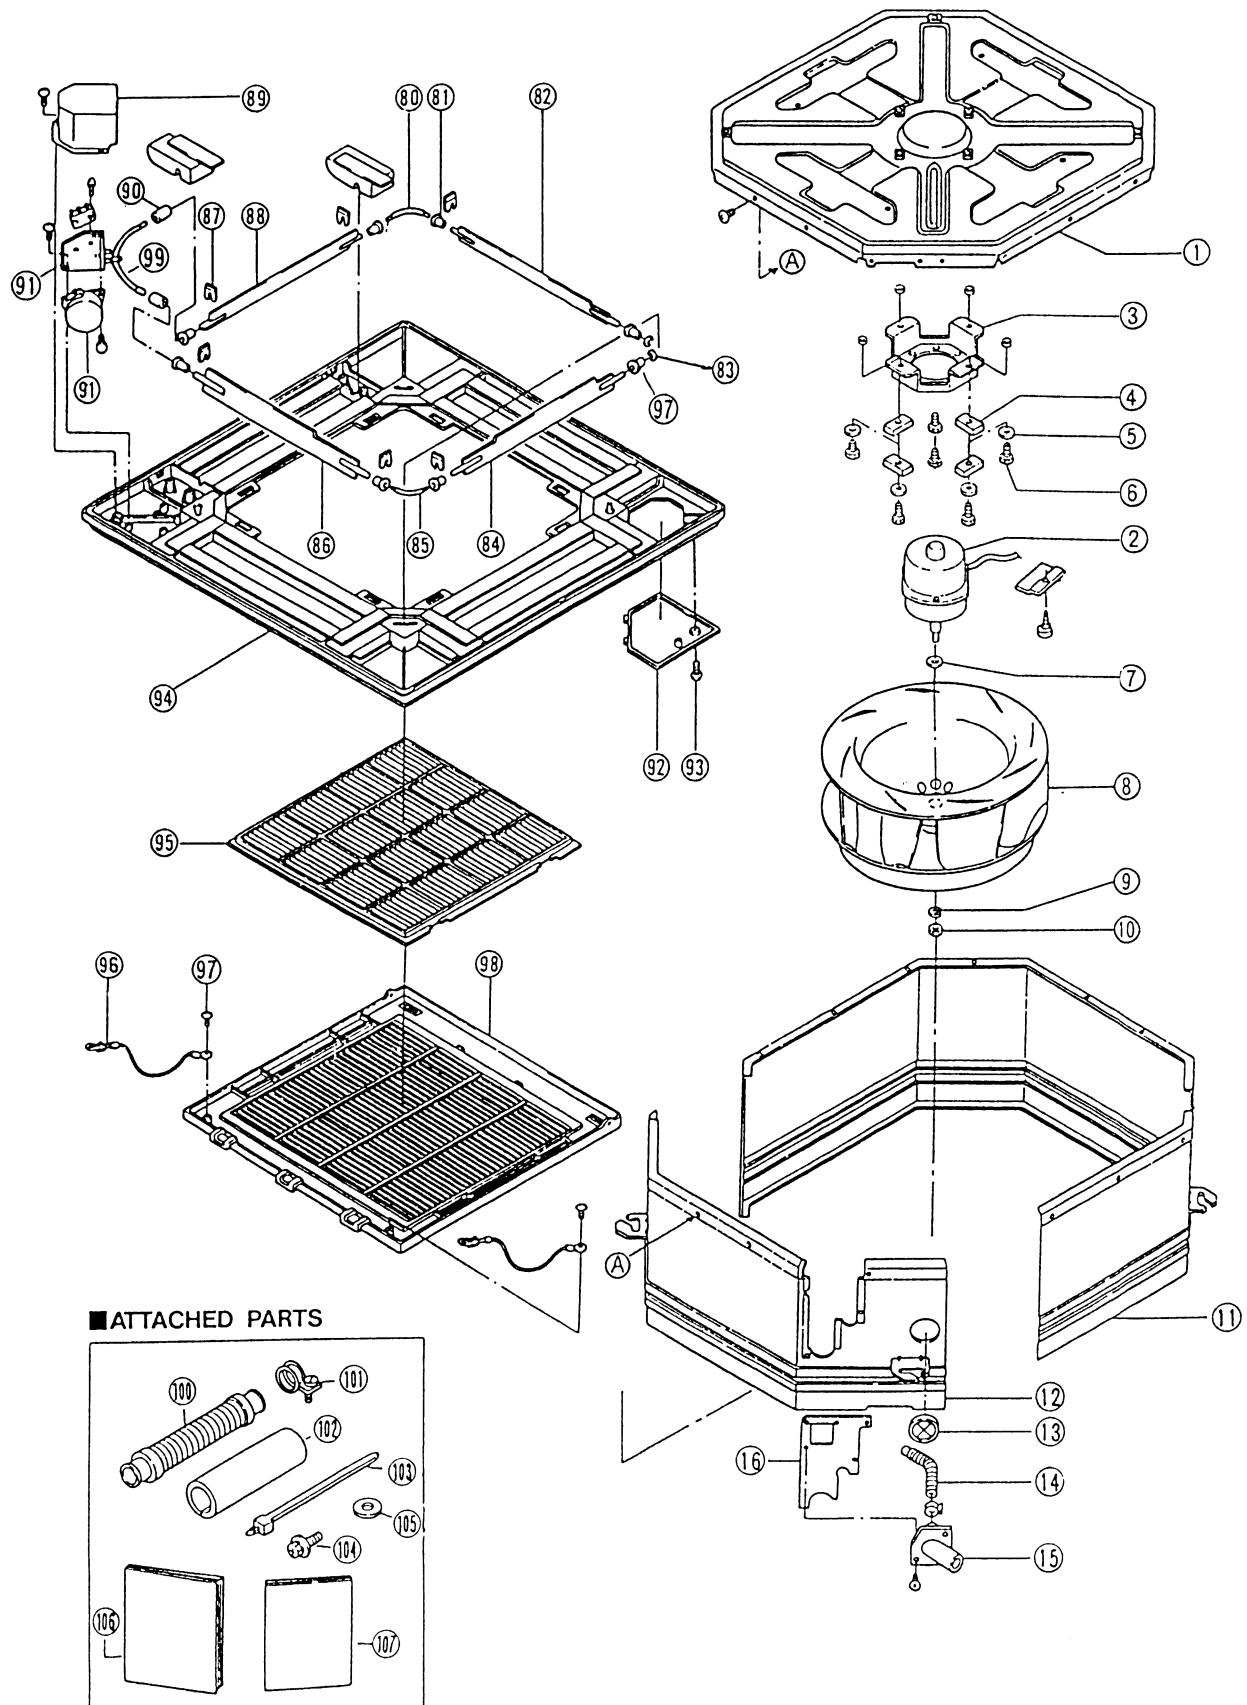



32. REPLACEMENT PARTS

■ INDOOR UNIT

CS-140U32JP, CS-160U32JP

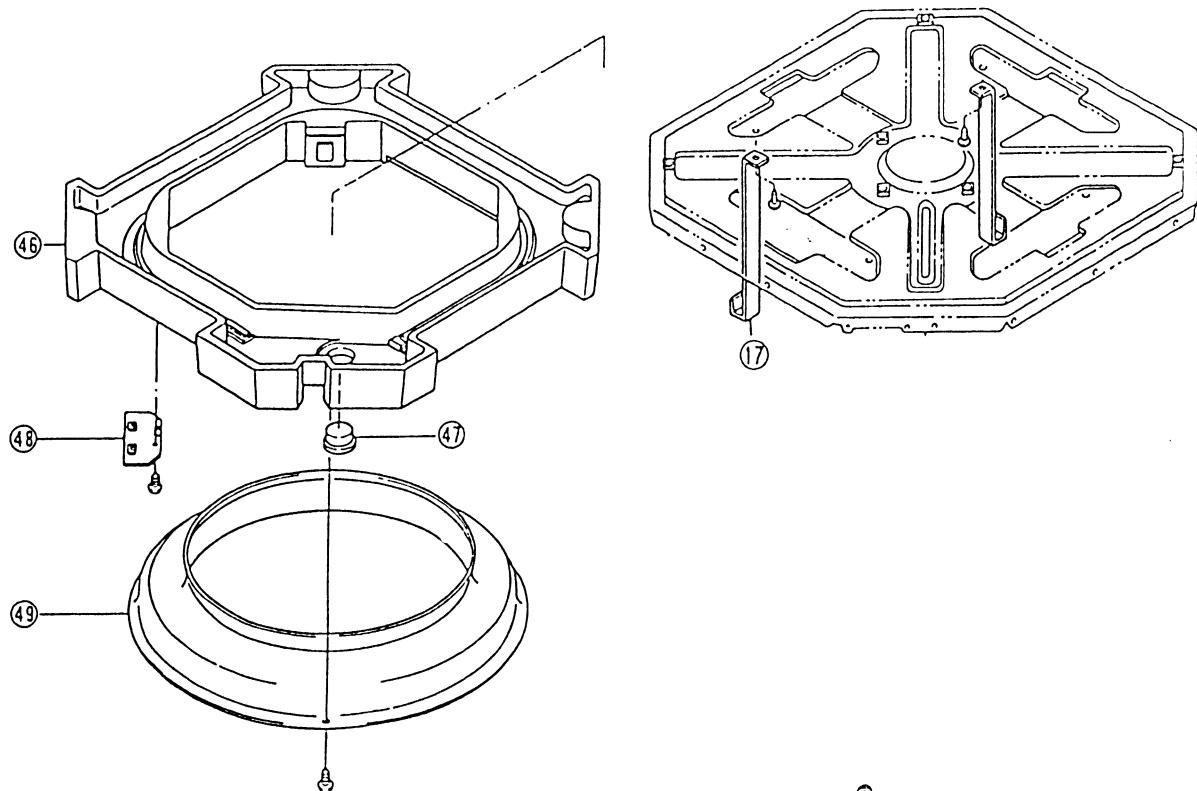

■ RELAY BOX

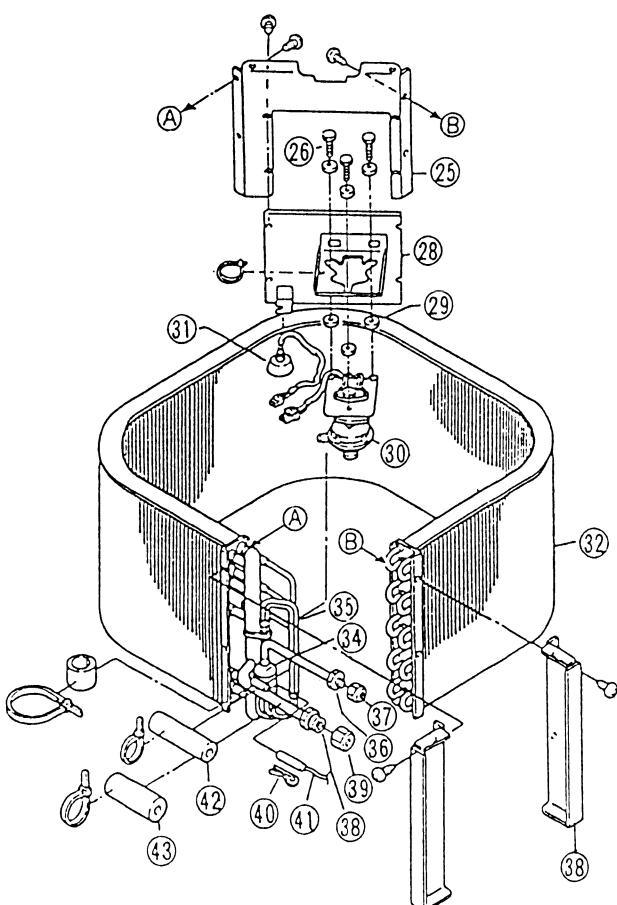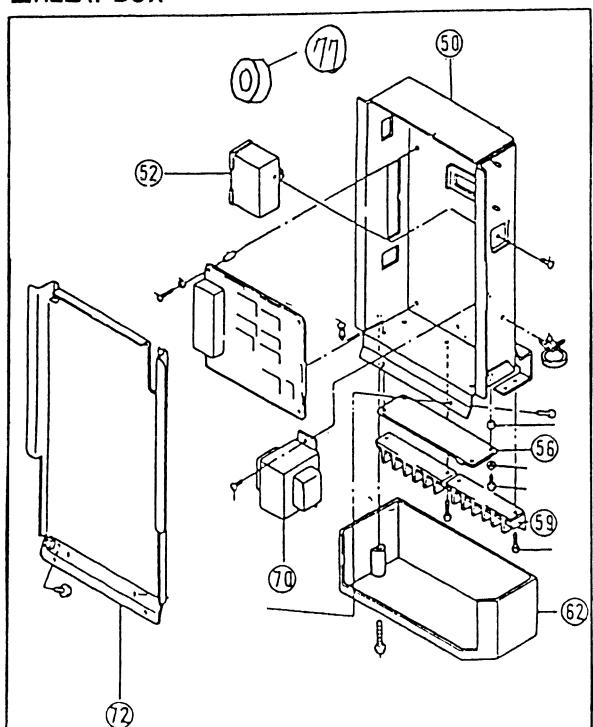

32. REPLACEMENT PARTS

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT		※REC PARTS
			140U32JP	160U32JP	
1	Cabinet As	42-572100	1	1	
2	Fan motor	06-851190	1	1	
3	Fan motor base	06-848730	1	1	*
4	Fan motor mount	06-830250	3	3	
5	6 washer	38-490120	3	3	
6	Nut 5TS27	38-193610	3	3	
7	Washer	08-406060	1	1	
8	Turbo Fan	45-598170	1	1	
9	8 spring washer	38-427080	1	1	
10	8 nut	38-817010	1	1	
11	Cabinet side As(F)	42-570160	1	1	
12	Cabinet side As(B)	42-570170	1	1	
13	Rubber bush	39-251090	1	1	
14	Drain tube	02-869010	1	1	
15	Lead Pipe drain	06-845510	1	1	
16	Pipe cover	02-868160	1	1	
17	Evaporator holder	05-852730	2	2	
25	Eva.center plate	05-855950	1	1	
26	Bolt 5TS 27	38-193610	3	3	
28	Panel drain pump As	46-921550	1	1	
29	Mount	06-487720	3	3	
30	Drain pump As	06-846350	1	1	
31	Float Switch As	46-848140	1	1	*
32	Evaporater As	45-907290	1	1	*
33	Seal Plate eva.	05-855970	1	1	
34	Distributer As	45-907460	1	1	
35	Capillary tube	05-855930	6	6	
35	Distributer	05-855920	1	1	
36	Union(3/8)	05-399710	1	1	
37	Flare nut(3/8)	38-890080	1	1	
38	Union(6/8)	05-950050	1	1	
39	Flare nut(6/8)	38-890110	1	1	
40	Sensor spring	05-840710	1	1	
41	Coil sensor	06-833080	1	1	
42	Heat insulation tube(10)	05-974240	1	1	*
43	Heat insulation tube(16)	05-844380	1	1	
46	Drain Pan As	45-594620	1	1	
47	Drain seal cap	05-811470	1	1	
48	Drain pan code holder	05-858070	1	1	
49	Orifice ring	05-856010	1	1	
50	Relay Box As	46-936470	1	1	
52	Capacitor (Fan motor)	06-833100	1	-	
		06-837170	-	1	*
56	Printed circuit board	06-855780	1	1	*
59	Terminal As(5P)	06-849260	2	2	*
62	Cover Relay Box	06-848790	1	1	
67	Relay board	46-936480	1	1	
70	Transformer As	06-855670	1	1	*
72	Relay box support stay	46-922980	1	1	*
76	Thermister As	06-849580	1	1	
	EMI core	06-841970	3	3	*

32. REPLACEMENT PARTS

Attached parts

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT		※REC PARTS
			140U32JP	160U32JP	
100	Drain horse	05-809090	1	1	
101	Crip Drain	05-955910	1	1	
102	Heat insulation tube (43)	05-957680	1	1	
104	Screw	38-791590	4	4	
105	10 washer	38-490450	8	8	
106	Operation Instruction	07-966420	1	1	
107	Installation manual	07-966480	1	1	

OPTIONAL ACCESSORY PARTS


REF.NO.	PARTS NAME	PARTS NUMBER CNR	CZ-06KPU01P		※REC PARTS
			140U32JP	160U32JP	
80	Flexible shaft S	03-421360	1	1	
81	Wing supporter	03-421350	6	6	
82	Louver L A As	43-518920	1	1	
83	E ring	39-030020	2	2	
84	Louver S A As	43-518940	1	1	
85	Flexible shaft L	03-421370	1	1	
86	Louver M A As	43-518980	1	1	
87	Louver holder	03-421390	6	6	
88	Louver LL A As	43-518990	1	1	
89	Louver motor cover	06-826360	1	1	
90	Shaft tube	03-421380	2	2	
91	Louver motor As	46-832530	1	1	*
92	Cover panel	03-421650	1	1	
93	Rolet screw	08-405940	1	1	
94	Grill outer	03-421260	1	1	
95	long life filter	03-421560	1	1	
96	Wire As	47-502100	2	2	
97	Collar louver	03-421640	2	2	
98	Inlet grill	03-421550	1	1	
99	Crank arm As	43-518970	1	1	

WIRED REMOTE CONTROLLER			CZ-10RT32P		※REC PARTS	
REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT			
			140U32JP	160U32JP		
110	Wired remote controller	06-855930	1	1		
111	Code	06-855500	1	1		
112	Installation manual	07-966690	1	1		

WIRELESS REMOTE CONTROLLER			CZ-10RW51P		※REC PARTS	
REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT			
			140U32JP	160U32JP		
120	Wireless remote controller	06-855850	1	1		
121	Holder	06-852910	1	1		
122	Dry battery (1 set)	47-598450	1	1		
123	Photo receiver unit As	46-936730	1	1		
124	Installation manual	07-966730	1	1		


32. REPLACEMENT PARTS

CU-40C52HP, CU-50C52HP, CU-40C02HP, CU-50C02HP

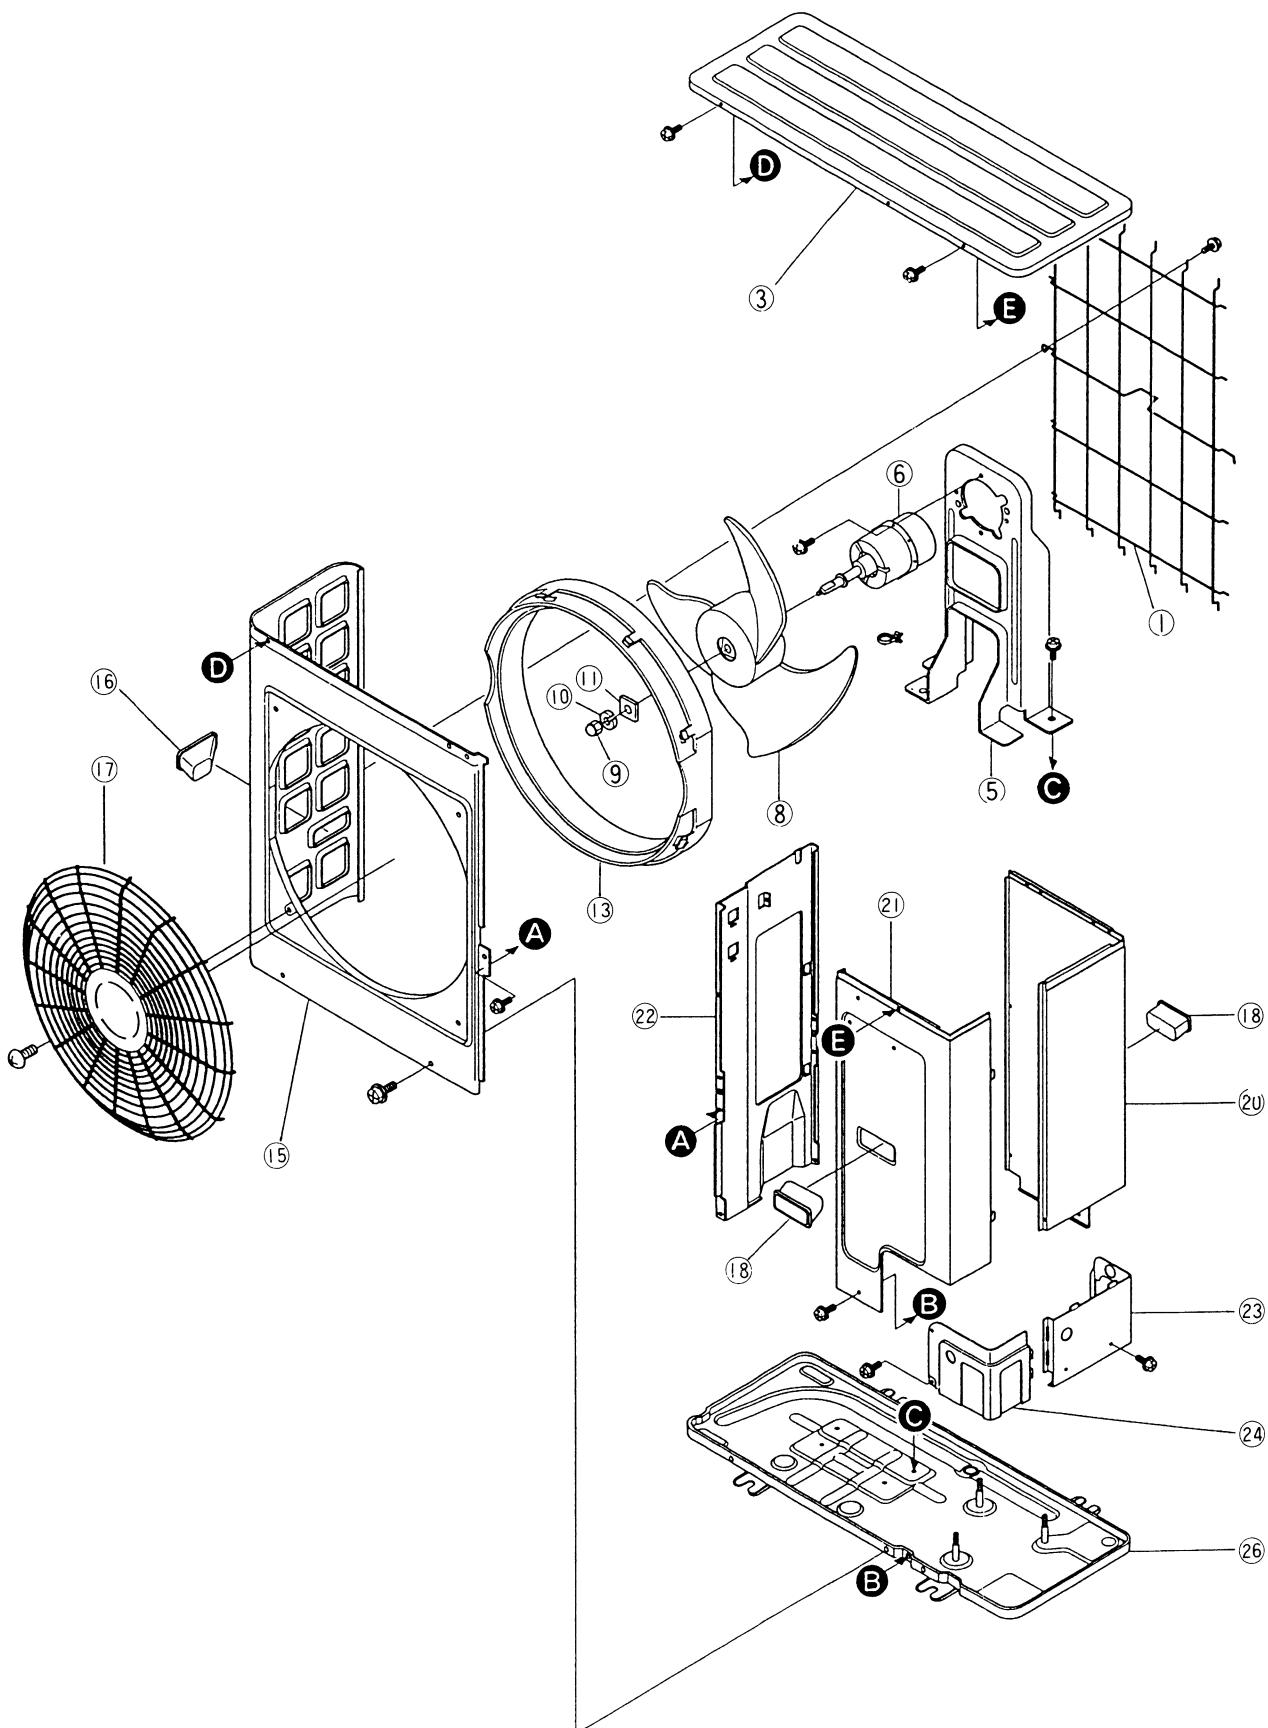


32. REPLACEMENT PARTS

CU-40C52HP, CU-50C52HP, CU-50C02HP, CU-50C02HP

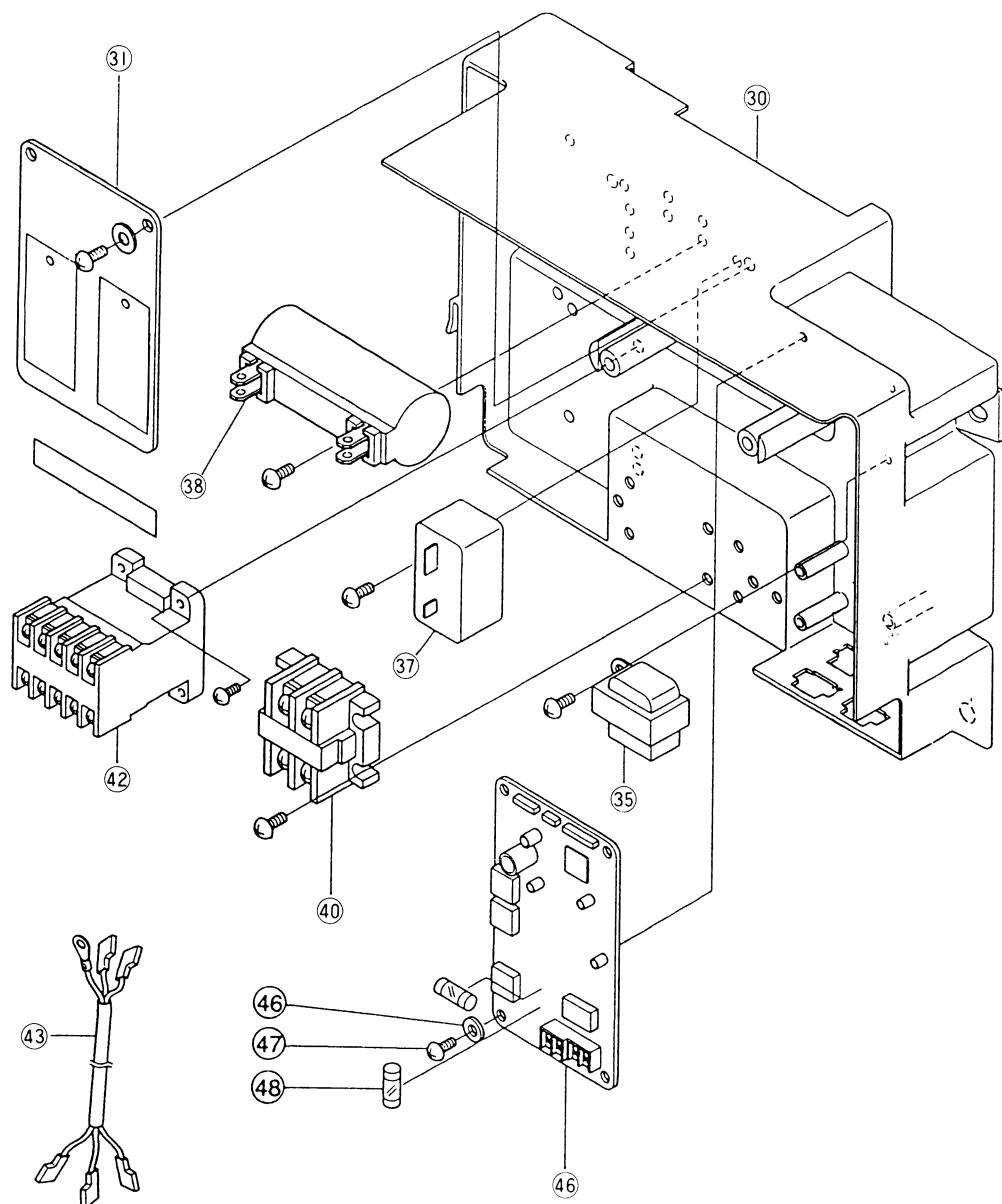


32. REPLACEMENT PARTS

CU-40C52HP, CU-50C52HP, (Heat pump model)

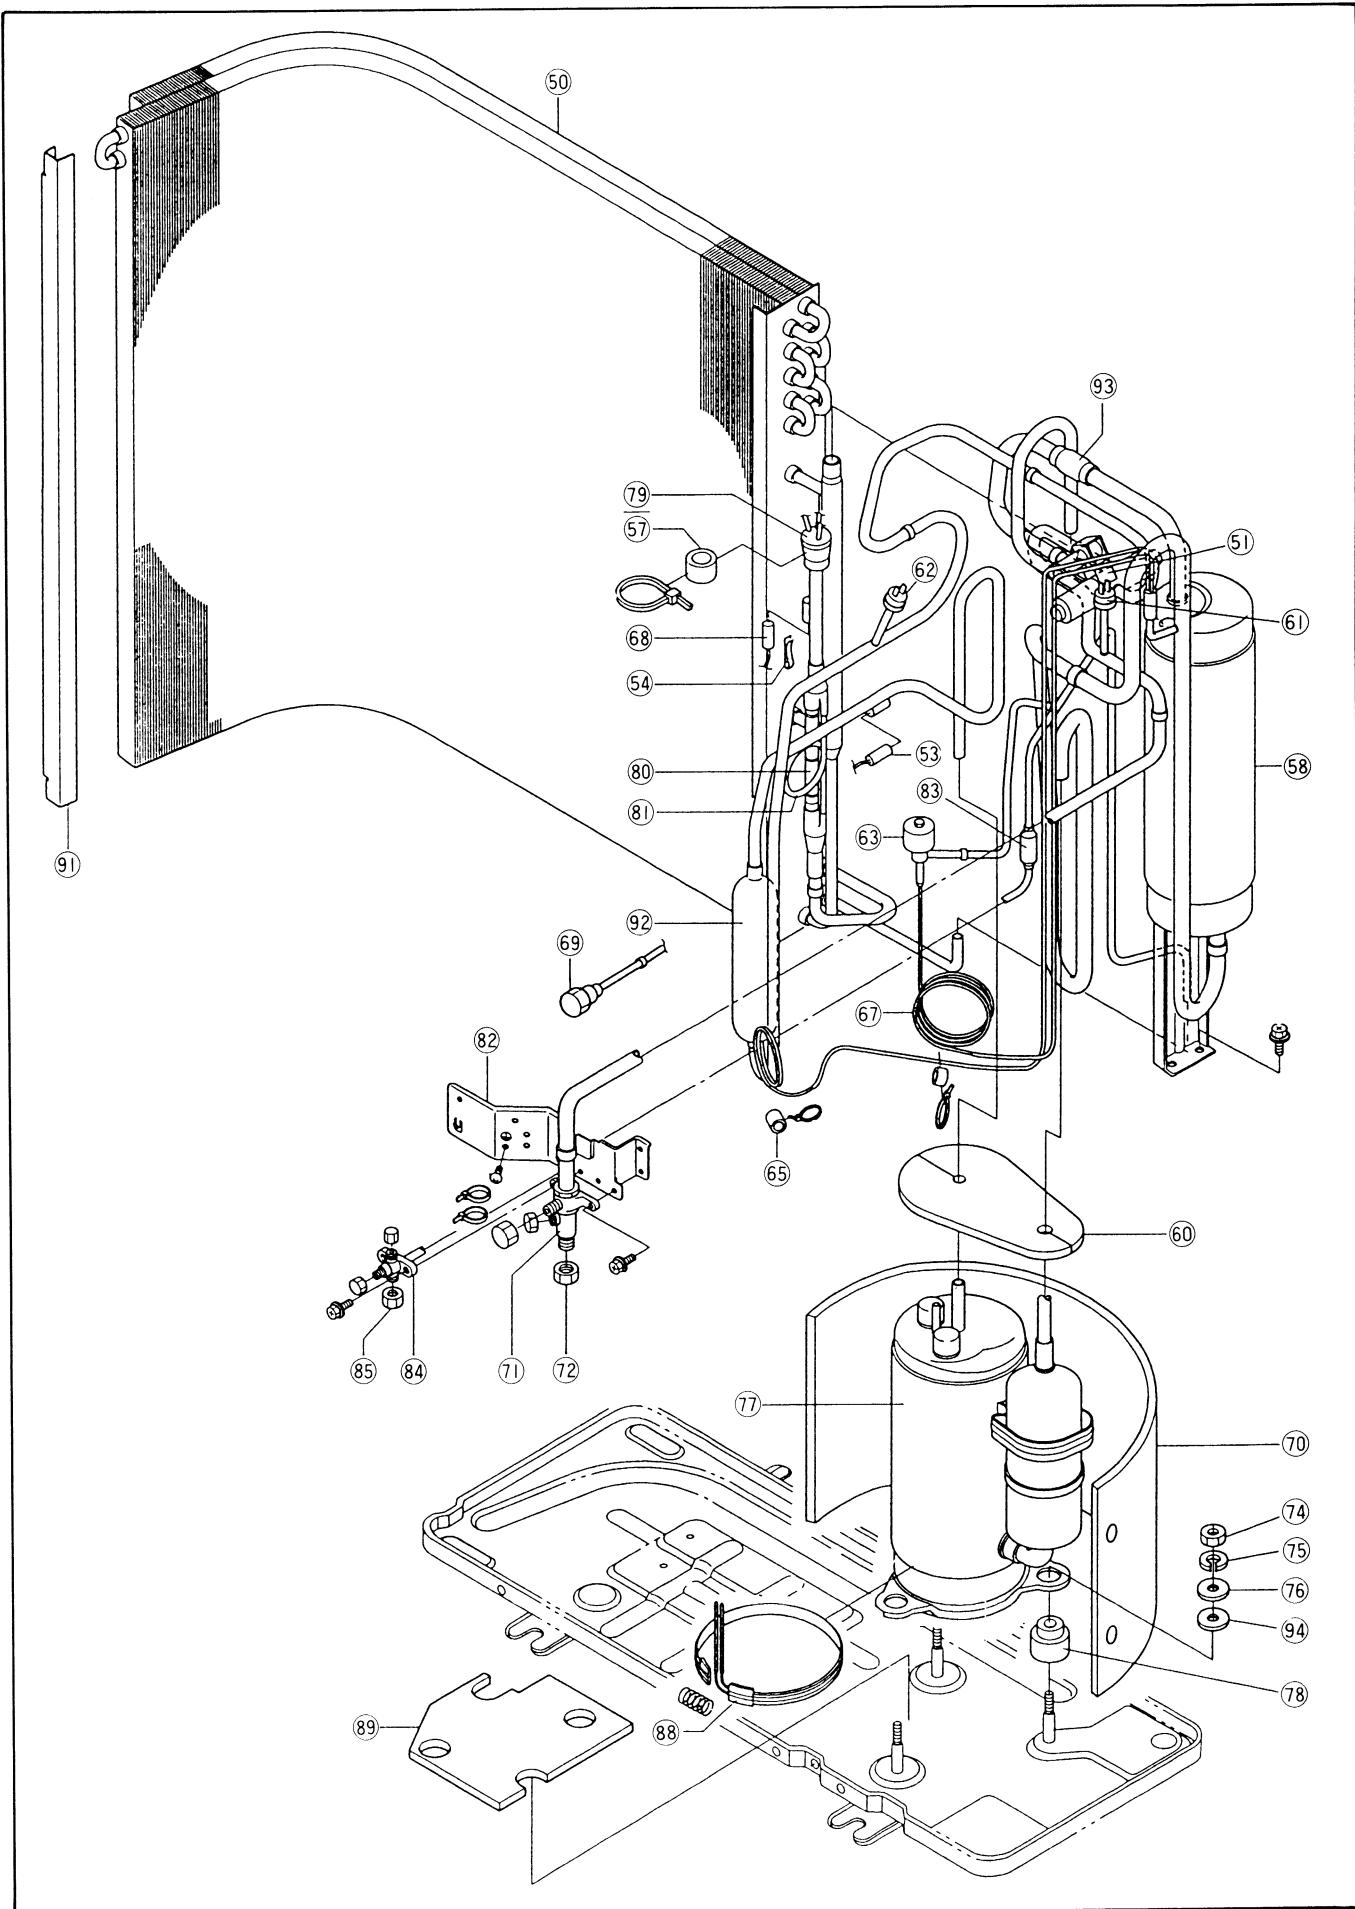

32. REPLACEMENT PARTS

CU-40C02HP, CU-50C02HP (Cooling only model)

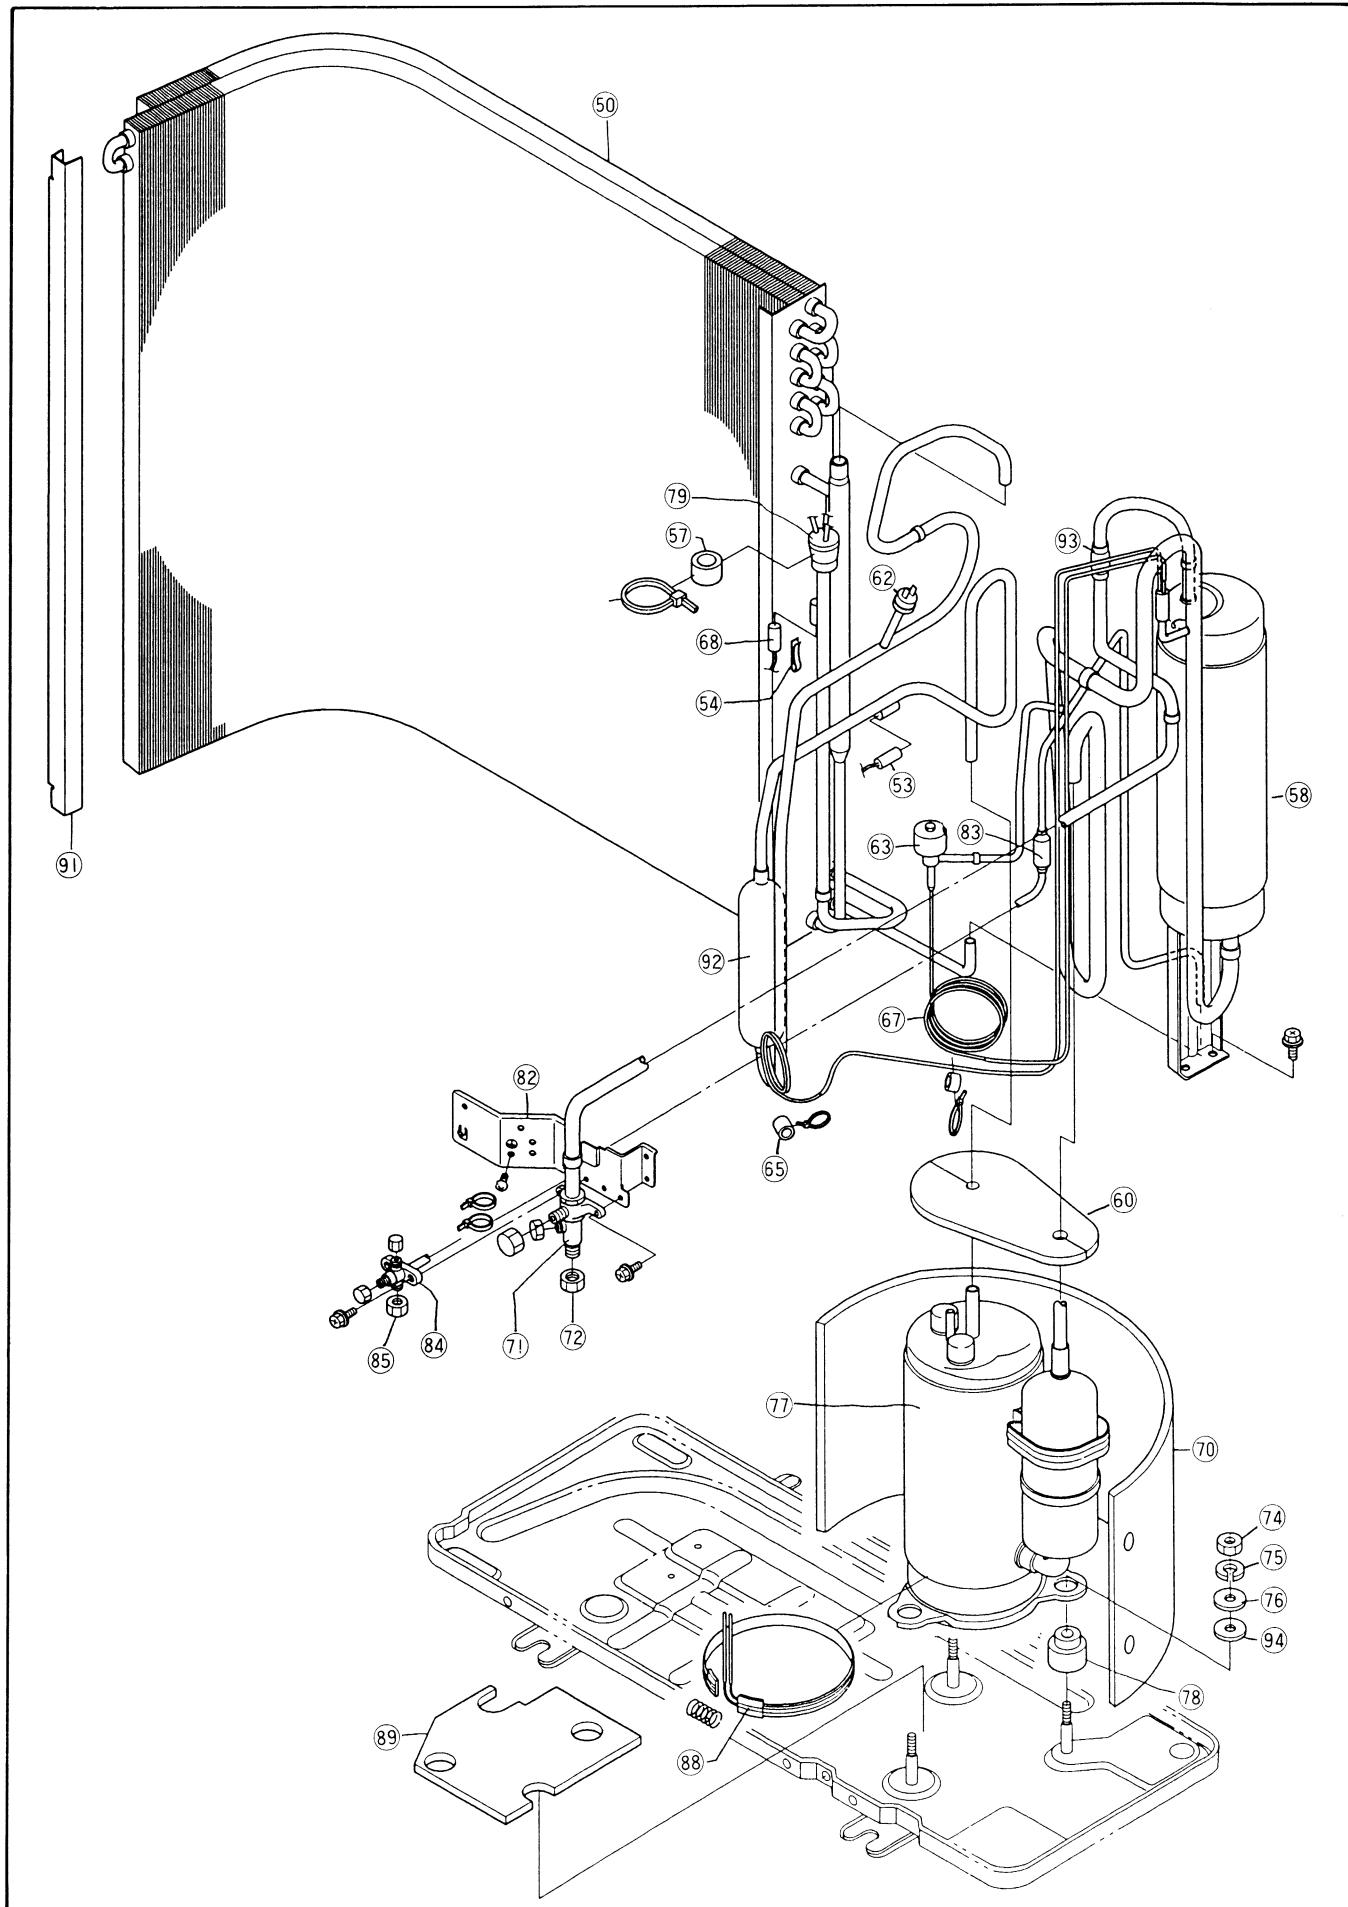

	32. REPLACEMENT PARTS	
--	-----------------------	--

■HEAT PUMP MODEL

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT		※REC PARTS
			40C52HP	50C52HP	
1	Condenser guard	02-880230	1	1	
3	Top plate As	02-880240	1	1	
5	Motor stay	02-880170	1	1	
6	Fan motor	06-855810	1	1	*
8	Prop fan	05-866200	1	1	
9	10 Nut	08-405150	1	1	
10	10 Sp washer	08-405160	1	1	
11	Washer for fan	05-962730	1	1	
13	Orifice ring	02-880210	1	1	
15	Orifice plate	02-880200	1	1	
16	Hanger shell(B)	02-879430	1	1	
17	Fan guard	42-574220	1	1	
18	Hanger shell(A)	02-879420	2	2	
20	Side panel	02-880250	1	1	
21	Front panel	02-880280	1	1	
22	Seal plate	02-880180	1	1	
23	Pipe cover B	02-880270	1	1	
24	Pipe cover F	02-879360	1	1	
26	Unit base As	42-573730	1	1	
30	Control box	06-854680	1	1	
31	CT board	06-855400	1	1	*
35	Transformer	06-855430	1	1	*
37	Electric capacity for fan motor	06-832990	1	1	*
38	Electric capacity for compressor	06-834470	1	-	*
		06-856000	-	1	*
40	Terminal(3P)	06-803020	1	1	
42	Compressor relay	06-846910	1	-	*
		06-845730	-	1	*
43	Compressor cord As	46-934800	1	-	
		46-934800	-	1	
46	Printed circuit board	46-936850	1	-	*
		46-936860	-	1	*
50	Condenser&Distributer	45-908320	1	-	
		45-908330	-	1	
51	Reversing valve	05-401290	1	1	*
51	Reversing valve coil	06-855890	1	1	*
53	Piping thermistor(Discharge)	46-930790	1	1	*
54	Spring for sensor	05-840710	2	2	
57	Pipe holder rubber	05-867200	2	2	
58	Accumulator As	45-908570	1	1	
60	Compressor cover top	02-881600	1	1	
		02-881610	1	1	
61	Pressure switch(Heating)	06-826230	1	1	*
62	High pressure switch	06-830840	1	1	*
63	Electric magnetic valve coil	06-855910	1	1	*
64	Electric magnetic valve	05-809320	1	1	*
65	Pipe clamp rubber	05-964890	1	1	
67	Capillary tube for valve	05-866920	1	1	

32. REPLACEMENT PARTS

■ HEAT PUMP MODEL

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT		※REC PARTS
			40C52HP	50C52HP	
68	Piping thermistor(Coil)	46-930800	1	1	*
69	Check joint	05-822330	1	1	
70	Compressor cover	02-862710	1	-	
		02-868880	-	1	
71	Ball valve(4/8)	05-822430	1	1	
72	Flare nut(4/8)	38-890090	1	1	
74	8 Nut	38-817010	3	3	
75	Spring washer	38-427080	3	3	
76	8 washer	38-490740	3	3	
77	Compressor	05-868040	1	-	*
		05-868030	-	1	*
78	Mount rubber	05-838620	3	3	
79	Distributor	05-866550	1	1	
79	Capillary tube	05-866570	3	3	
80	Check valve	05-478500	1	1	
81	Heating capillary tube	05-866890	1	-	
		05-866560	-	1	
82	Valve stay	02-880190	1	1	
83	Strainer	05-984840	1	1	
84	Service valve (2/8)	05-864470	1	1	
85	Flare nut(2/8)	38-890070	1	1	
88	Crankcase heater	06-855990	1	1	*
89	Base compressor cover	02-880500	1	1	
90	Drain elbo As	47-598250	1	1	
91	Coil seal plate	02-880160	1	1	
92	Oil separuter	05-821760	1	1	
93	Strainer	05-822310	1	1	
94	Mount rubber cap	05-839500	3	3	

32. REPLACEMENT PARTS

Cooling only model

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT		※REC PARTS
			40C02HP	50C02HP	
1	Condenser guard	02-880230	1	1	
3	Top plate As	02-880240	1	1	
5	Motor stay	02-880170	1	1	
6	Fan motor	06-855810	1	1	*
8	Prop fan	05-866200	1	1	
9	10 Nut	08-405150	1	1	
10	10 Sp washer	08-405160	1	1	
11	Washer for fan	05-962730	1	1	
13	Orifice ring	02-880210	1	1	
15	Orifice plate	02-880200	1	1	
16	Hanger shell(B)	02-879430	1	1	
17	Fan guard	42-574220	1	1	
18	Hanger shell(A)	02-879420	2	2	
20	Side panel	02-880250	1	1	
21	Front panel	02-880280	1	1	
22	Seal plate	02-880180	1	1	
23	Pipe cover B	02-880270	1	1	
24	Pipe cover F	02-879360	1	1	
26	Unit base As	42-573730	1	1	
30	Control box	06-854680	1	1	
31	CT board	06-855400	1	1	*
35	Transformer	06-855430	1	1	*
37	Electric capacity for fan motor	06-832990	1	1	*
38	Electric capacity for compressor	06-834470	1	-	*
		06-856000	-	1	*
40	Terminal(3P)	06-803020	1	1	
42	Compressor relay	06-845730	1	1	*
43	Compressor cord As	46-934800	1	-	
		46-934800	-	1	
46	Printed circuit board	46-937500	1	-	*
		46-937510	-	1	*
50	Condenser&Distributer	45-908800	1	-	
		45-908810	-	1	
53	Piping thermistor(Discharge)	46-930790	1	1	*
54	Spring for sensor	05-840710	2	2	
57	Pipe holder rubber	05-867200	1	1	
58	Accumulator As	45-908570	1	1	
60	Compressor cover top	02-881600	1	1	
		02-881610	1	1	
62	High pressure switch	06-830840	1	1	*
63	Electric magnetic valve coil	06-855910	1	1	*
64	Electric magnetic valve	05-809320	1	1	*
65	Pipe clamp rubber	05-952140	1	1	
67	Capillary tube for valve	05-866920	1	1	


32. REPLACEMENT PARTS

Cooling only model

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT		※REC PARTS
			40C02HP	50C02HP	
68	Piping thermistor(Coil)	46-930800	1	1	
70	Compressor cover	02-862710	1	-	*
		02-868880	-	1	
71	Ball valve(4/8)	05-822430	1	1	
72	Flare nut(4/8)	38-890090	1	1	
74	8 Nut	38-817010	3	3	
75	Spring washer	38-427080	3	3	
76	8 washer	38-490740	3	3	
77	Compressor	05-868040	1	-	*
		05-868030	-	1	*
78	Mount rubber	05-838620	3	3	
79	Distributor	05-866550	1	1	
79	Capillary tube	05-866570	3	3	
82	Valve stay	02-880190	1	1	
83	Strainer	05-984840	1	1	
84	Service valve (2/8)	05-864470	1	1	
85	Flare nut(2/8)	38-890070	1	1	
88	Crankcase heater	06-855990	1	1	*
89	Base compressor cover	02-880500	1	1	
91	Coil seal plate	02-880160	1	1	
92	Oil separuter	05-821760	1	1	
93	Strainer	05-822310	1	1	
94	Mount rubber cap	05-839500	3	3	


32. REPLACEMENT PARTS

CU-71C52HP, CU-71C52XP, CU-80C52HP, CU-80C52XP

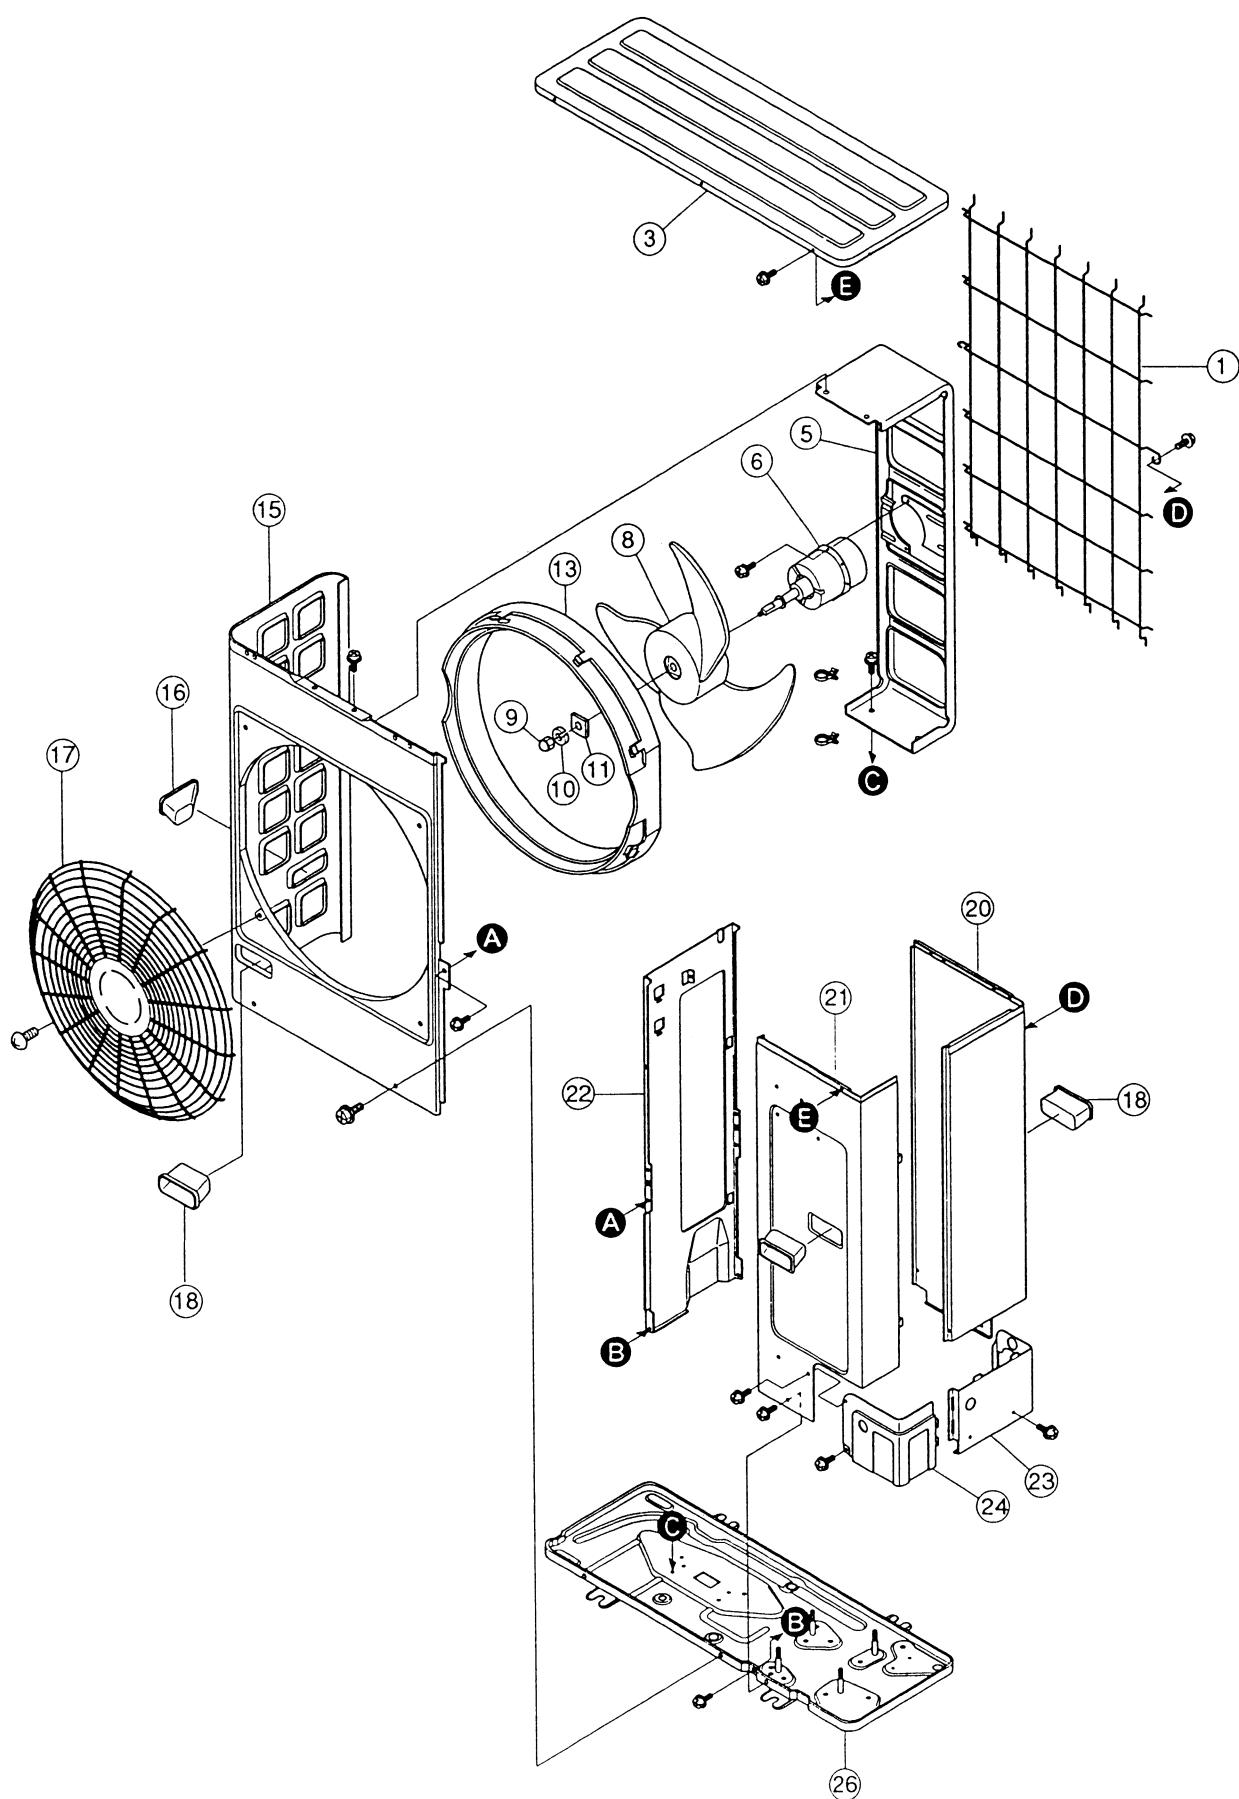


32. REPLACEMENT PARTS

CU-71C52HP, CU-71C52XP, CU-80C52HP, CU-80C52XP

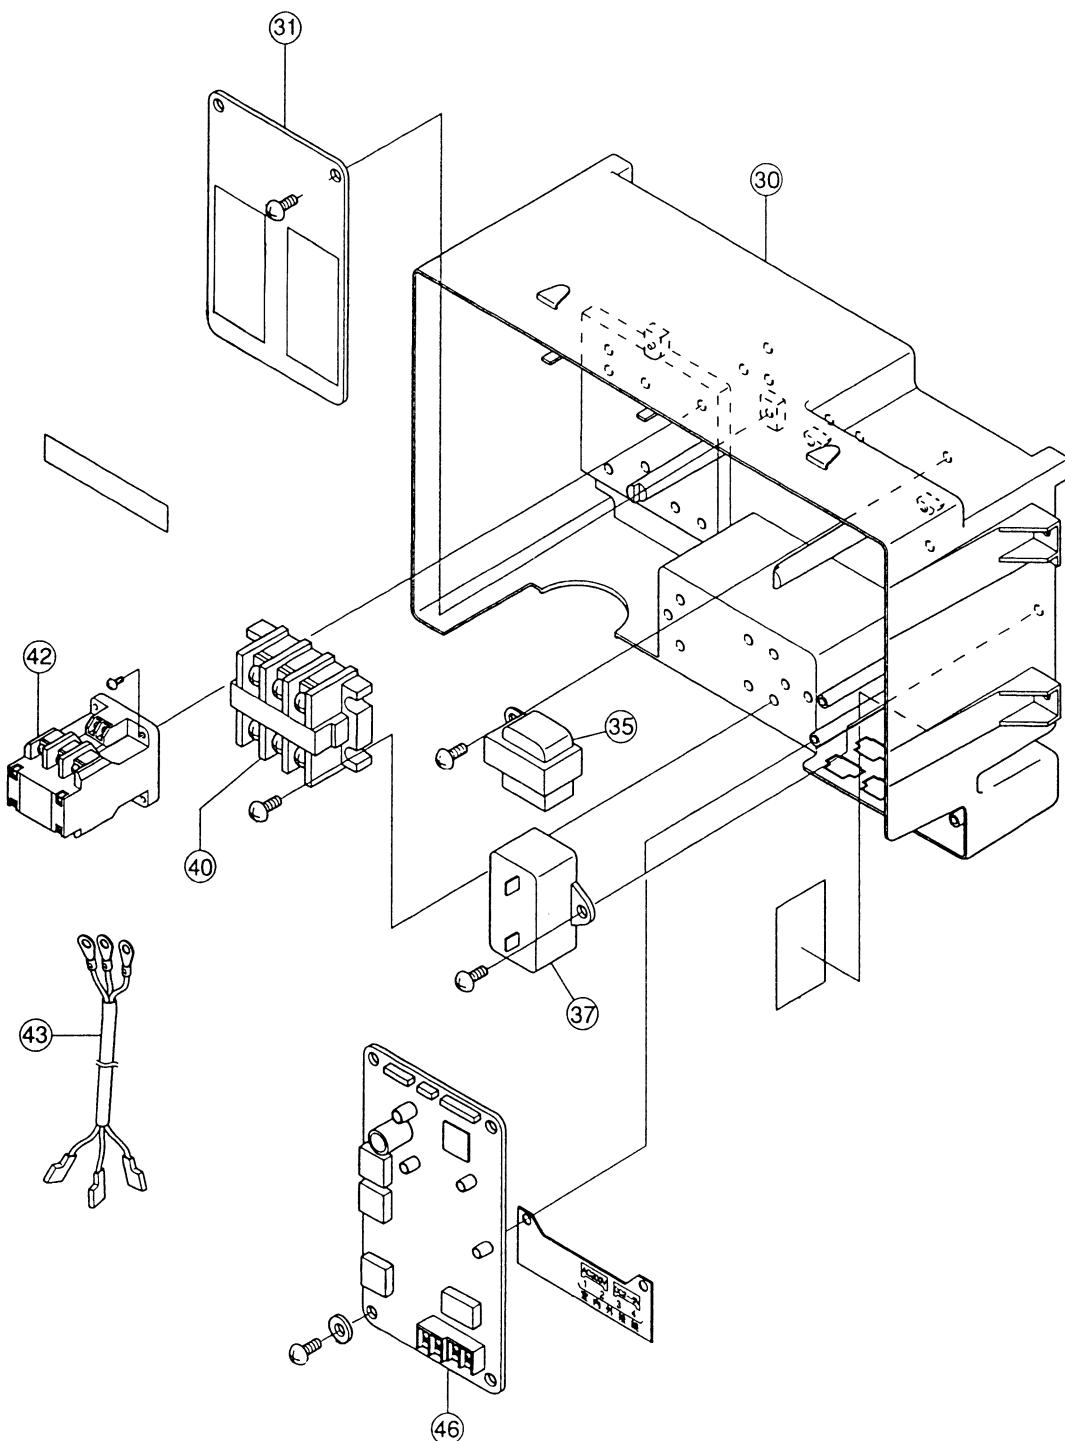


32. REPLACEMENT PARTS

CU-71C52HP, CU-71C52XP, CU-80C52HP, CU-80C52XP (Heat pump model)

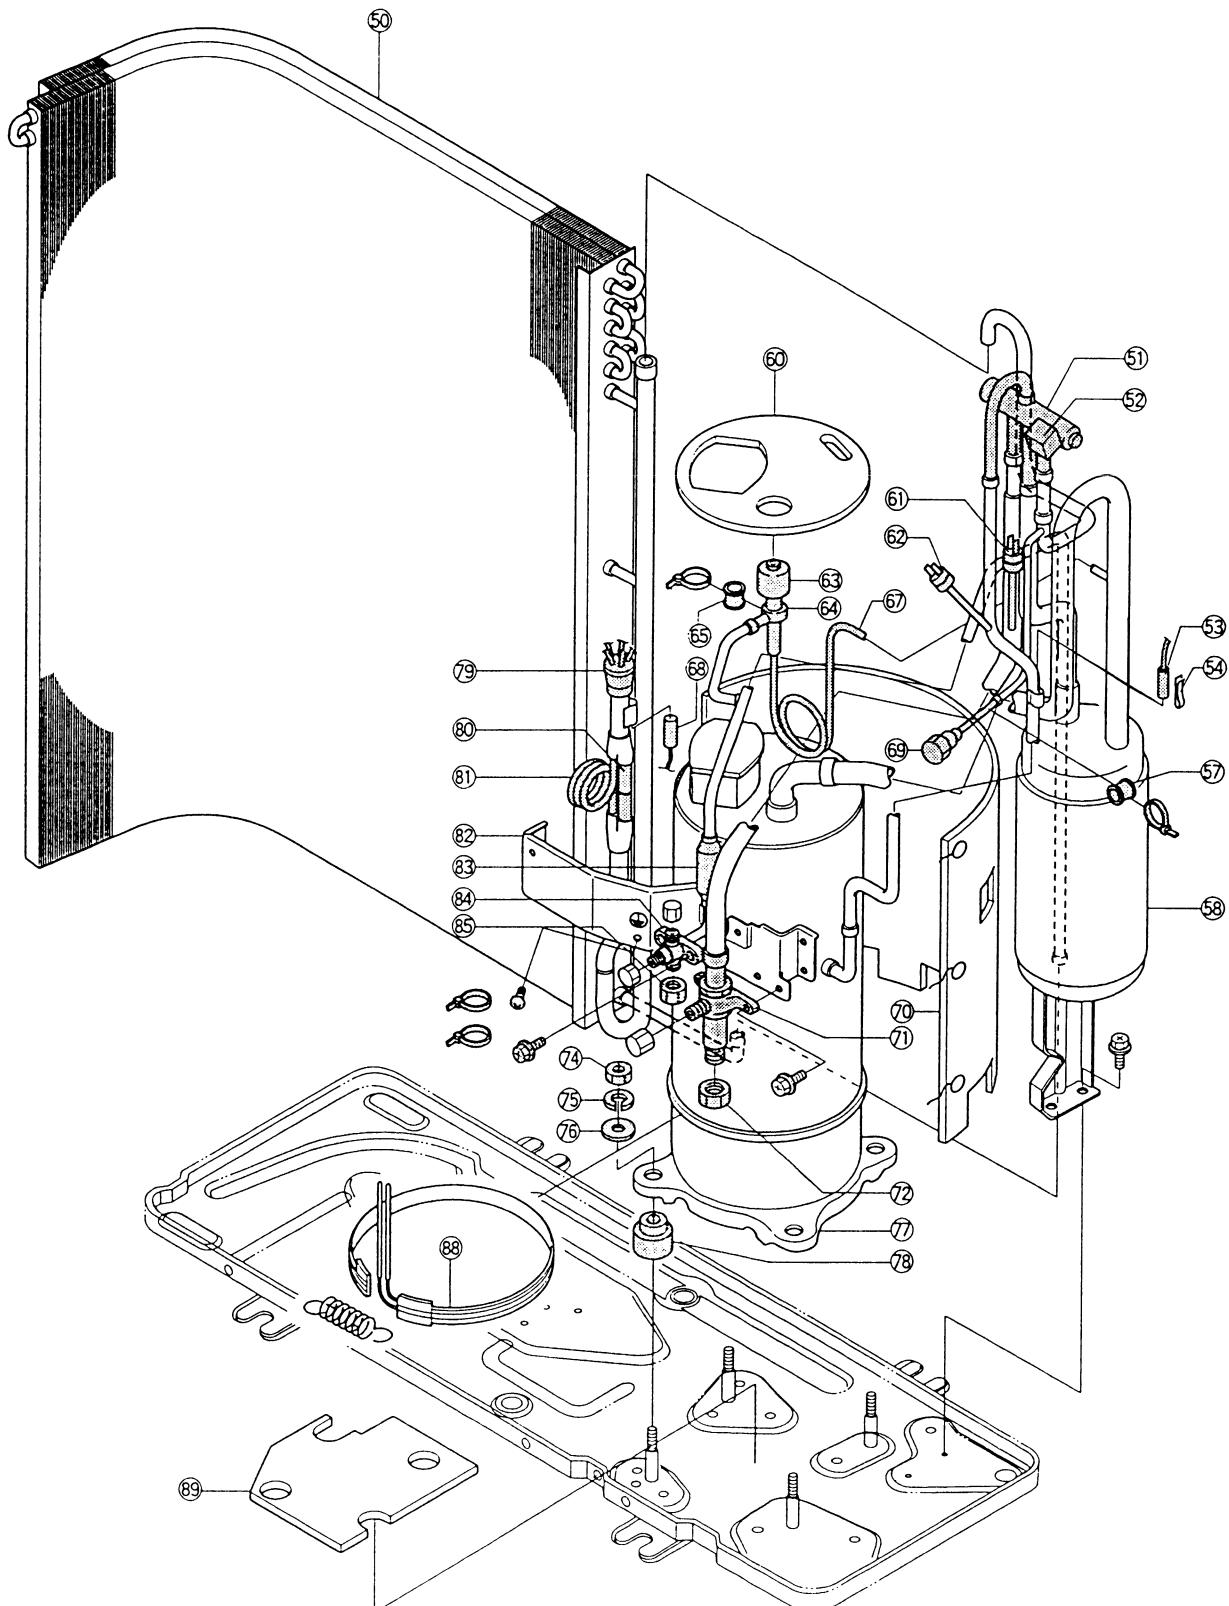

32. REPLACEMENT PARTS

CU-71C02HP, CU-71C02XP, CU-80C02HP, CU-80C02XP (Cooling only model)

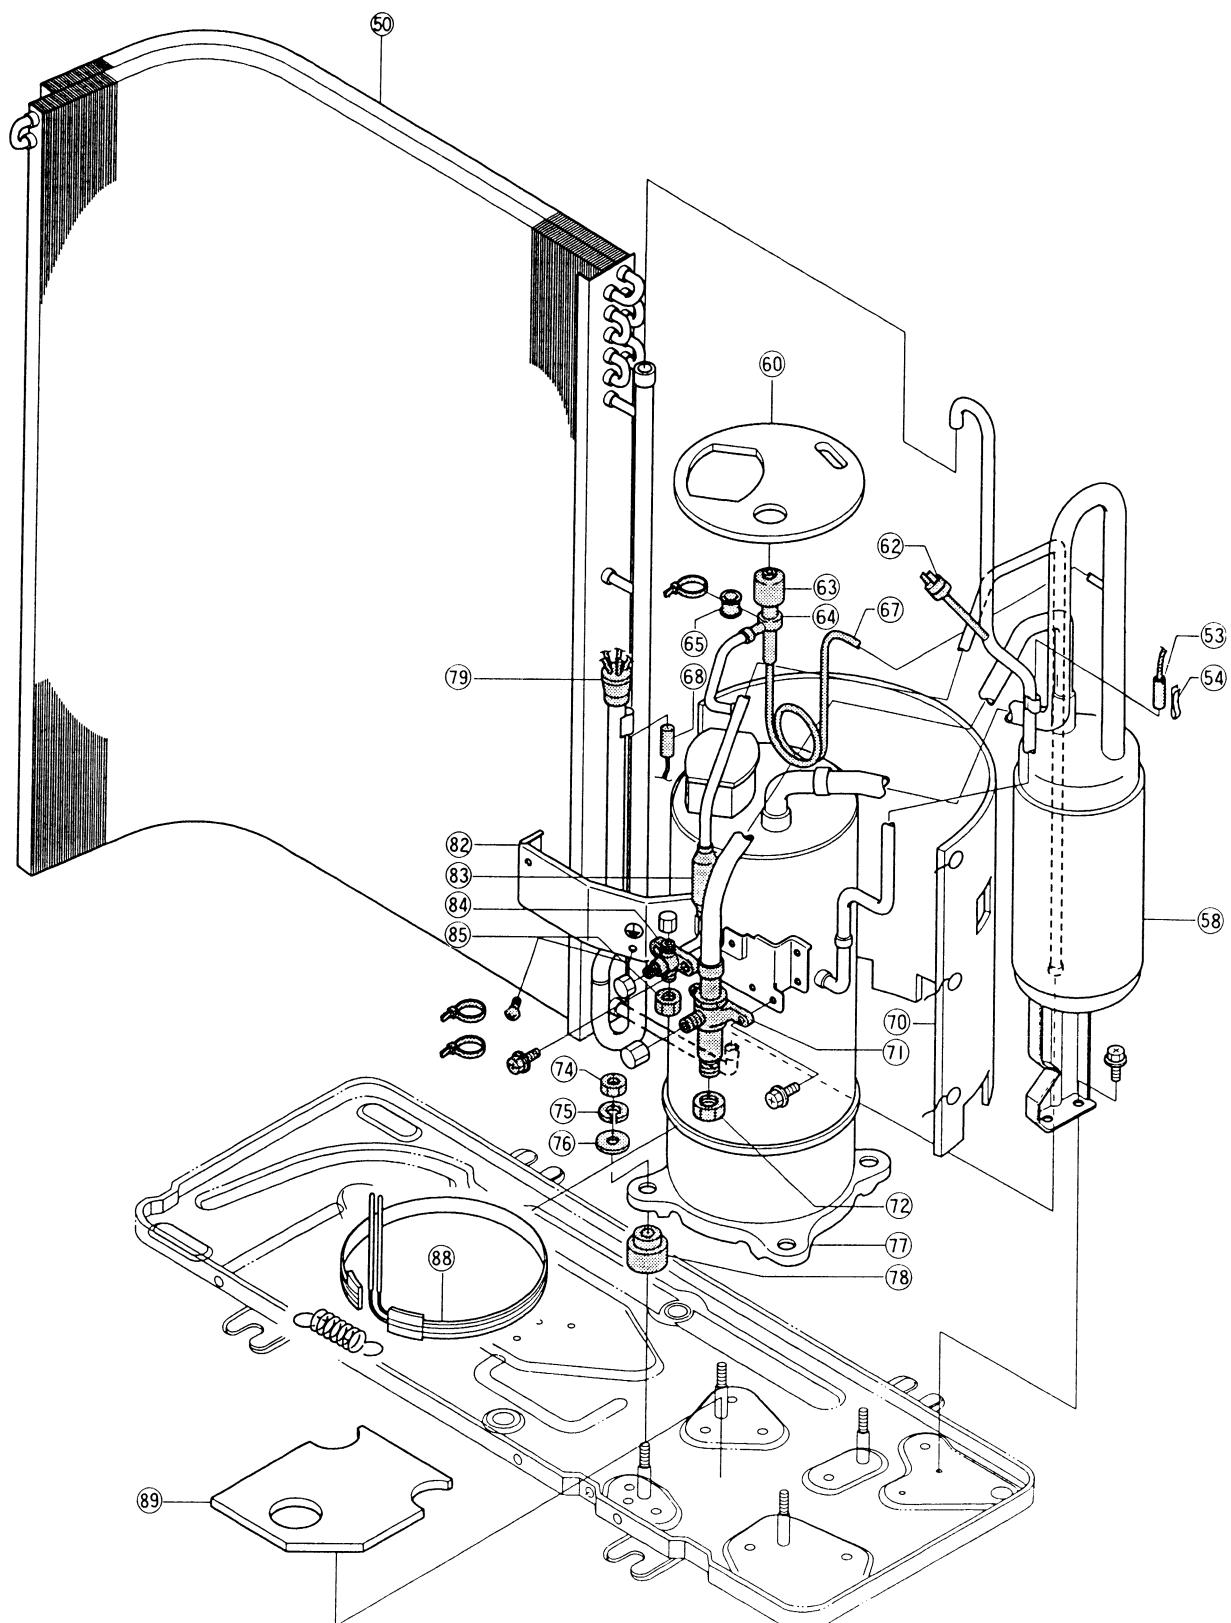

	32. REPLACEMENT PARTS	
--	------------------------------	--

Heat pump model

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT				※ REC PARTS
			71C52HP	71C52XP	80C52HP	80C52XP	
1	Condenser guard	02-879330	1	1	1	1	
3	Top plate As	02-879340	1	1	1	1	
5	Motor stay	02-879300	1	1	1	1	
6	Fan motor	06-855620	1	1	1	1	*
8	Prop fan	05-864390	1	1	1	1	
9	10 Nut	08-405150	1	1	1	1	
10	10 Sp washer	08-405160	1	1	1	1	
11	Washer for fan	05-962730	1	1	1	1	
13	Orifice ring	02-879410	1	1	1	1	
15	Orifice plate	02-879320	1	1	1	1	
16	Hanger shell(B)	02-879430	1	1	1	1	
17	Fan guard	42-574190	1	1	1	1	
18	Hanger shell(A)	02-879420	3	3	3	3	
20	Side panel	02-879350	1	1	1	1	
21	Front panel	02-879380	1	1	1	1	
22	Seal plate	02-879310	1	1	1	1	
23	Pipe cover B	02-879370	1	1	1	1	
24	Pipe cover F	02-879360	1	1	1	1	
26	Unit base As	42-573150	1	1	1	1	
30	Control box	06-852690	1	1	1	1	
31	CT board	06-855400	-	1	-	1	*
		06-854280	1	-	1	-	
35	Transformer	06-855430	1	1	1	1	*
37	Electric capacity for fan motor	06-833100	1	1	1	1	*
37	Electric capacity for compressor	06-855440	1	-	-	-	*
		06-855450	-	-	1	-	*
40	Terminal(3P)	06-803020	1	-	1	-	
40	Terminal	06-855360	-	1	-	1	
42	Compressor relay	06-844690	1	-	1	-	*
		06-845730	-	1	-	1	*
43	Compressor cord As	46-936440	1	-	1	-	
		46-931300	-	1	-	1	
46	Printed circuit board	46-935860	1	-	-	-	*
		46-935870	-	1	-	-	*
		46-935880	-	-	1	-	*
		46-935890	-	-	-	1	*
50	Condenser&Distributer	45-905630	1	1	-	-	
		45-905640	-	-	1	1	
51	Reversing valve	05-401290	1	1	1	1	*
52	Reversing valve coil	06-855890	1	1	1	1	*
53	Piping thermistor(Discharge)	46-930790	1	1	1	1	*
54	Spring for sensor	05-840710	2	2	2	2	
57	Pipe clamp rubber(5/8)	05-867200	1	1	1	1	
58	Accumulator As	45-905670	1	1	-	-	
		45-905950	-	-	1	1	
60	Compressor cover top	05-867370	1	1	1	1	
61	Pressure switch(Heating)	06-826230	1	1	1	1	*
62	High pressure switch	06-830840	1	1	1	1	*
63	Electric magnetic valve coil	06-855910	1	1	1	1	*
64	Electric magnetic valve	05-809320	1	1	1	1	*
65	Pipe clamp rubber	05-493370	1	1	-	-	
		05-867130	1	1	-	-	
		05-867140	-	-	1	1	

32. REPLACEMENT PARTS

Heat pump model

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT				※ REC PARTS
			71C52HP	71C52XP	80C52HP	80C52XP	
67	Capillary tube for valve	05-864480 05-864490	1 -	1 -	- 1	- 1	
68	Piping thermistor(Coil)	46-930800	1	1	1	1	
69	Check joint	05-822330	1	1	1	1	*
70	Compressor cover	05-867350	1	1	1	1	
71	Ball valve(5/8)	05-820630	1	1	1	1	
72	Flare nut(5/8)	38-890100	1	1	1	1	
74	8 Nut	38-817010	3	3	3	3	
75	8SP Washer	38-427080	3	3	3	3	
76	8 Washer	38-490740	3	3	3	3	
77	Compressor	05-983920	1	-	-	-	*
		05-983790	-	1	-	-	*
		05-802470	-	-	1	-	*
		05-978160	-	-	-	1	*
78	Mount rubber	05-867570	4	4	4	4	
79	Distributor	05-864120	1	1	1	1	
79	Capillary tube	05-463000	5	5	5	5	
80	Check valve	05-478500	1	1	1	1	
81	Heating capillary tube	05-864180	1	1	-	-	
		05-864190	-	-	1	1	
82	Valve stay	02-881200	1	1	1	1	
83	Strainer	05-984840	1	1	-	-	
		05-815080	-	-	1	1	
84	Service valve (2/8)	05-864470	1	1	-	-	
	Service valve (3/8)	05-864350	-	-	1	1	
85	Flare nut(2/8)	38-890070	1	1	-	-	
	Flare nut(3/8)	38-890080	-	-	1	1	
88	Crankcase heater	06-855410	1	1	1	1	
89	Base compressor cover	02-880780	1	1	1	1	*
90	Drain elbo As	47-598250	1	1	1	1	

32. REPLACEMENT PARTS

Cooling only model

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT				※REC PARTS
			71C02HP	71C02XP	80C02HP	80C02XP	
1	Condenser guard	02-879330	1	1	1	1	
3	Top plate As	02-879340	1	1	1	1	
5	Motor stay	02-879300	1	1	1	1	
6	Fan motor	06-855620	1	1	1	1	*
8	Prop fan	05-864390	1	1	1	1	
9	10 Nut	08-405150	1	1	1	1	
10	10 Sp washer	08-405160	1	1	1	1	
11	Washer for fan	05-962730	1	1	1	1	
13	Orifice ring	02-879410	1	1	1	1	
15	Orifice plate	02-879320	1	1	1	1	
16	Hanger shell(B)	02-879430	1	1	1	1	
17	Fan guard	42-574190	1	1	1	1	
18	Hanger shell(A)	02-879420	3	3	3	3	
20	Side panel	02-879350	1	1	1	1	
21	Front panel	02-879380	1	1	1	1	
22	Seal plate	02-879310	1	1	1	1	
23	Pipe cover B	02-879370	1	1	1	1	
24	Pipe cover F	02-879360	1	1	1	1	
26	Unit base As	42-573150	1	1	1	1	
30	Control box	06-852690	1	1	1	1	
31	CT board	06-855400	-	1	-	1	*
		06-854280	1	-	1	-	
35	Transformer	06-855430	1	1	1	1	*
37	Electric capacity for fan motor	06-833100	1	1	1	1	*
37	Electric capacity for compressor	06-855440	1	-	-	-	*
		06-855450	-	-	1	-	*
40	Terminal(3P)	06-803020	1	-	1	-	
40	Terminal	06-855360	-	1	-	1	
42	Compressor relay	06-844690	1	-	1	-	*
		06-845730	-	1	-	1	*
43	Compressor cord As	46-936440	1	-	1	-	
		46-931300	-	1	-	1	
46	Printed circuit board	46-937120	1	-	-	-	*
		46-937130	-	1	-	-	*
		46-937140	-	-	1	-	*
		46-937150	-	-	-	1	*
50	Condenser&Distributer	45-905730	1	1	-	-	
		45-905740	-	-	1	1	
53	Piping thermistor(Discharge)	46-930790	1	1	1	1	*
54	Spring for sensor	05-840710	2	2	2	2	
57	Pipe clamp rubber(5/8)	05-867200	1	1	1	1	
58	Accumulator As	45-905670	1	1	-	-	
		45-905950	-	-	1	1	
60	Compressor cover top	05-867370	1	1	1	1	
62	High pressure switch	06-830840	1	1	1	1	*
63	Electric magnetic valve coil	06-855910	1	1	1	1	*
64	Electric magnetic valve	05-809320	1	1	1	1	*
65	Pipe clamp rubber	05-493370	1	1	-	-	
		05-867130	1	1	-	-	
		05-867140	-	-	1	1	


32. REPLACEMENT PARTS

Cooling only model

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT				※REC PARTS
			71C02HP	71C02XP	80C02HP	80C02XP	
67	Capillary tube for valve	05-864480	1	1	-	-	
		05-864490	-	-	1	1	
68	Piping thermistor(Coil)	46-930800	1	1	1	1	※
70	Compressor cover	05-867350	1	1	1	1	
71	Ball valve(5/8)	05-820630	1	1	1	1	
72	Flare nut(5/8)	38-890100	1	1	1	1	
74	8 Nut	38-817010	3	3	3	3	
75	8SP Washer	38-427080	3	3	3	3	
76	8 Washer	38-490740	3	3	3	3	
77	Compressor	05-983920	1	-	-	-	※
		05-983790	-	1	-	-	※
		05-802470	-	-	1	-	※
		05-978160	-	-	-	1	※
78	Mount rubber	05-867570	4	4	4	4	
79	Distributor	05-864120	1	1	1	1	
79	Capillary tube	05-463000	5	5	5	5	
82	Valve stay	02-881200	1	1	1	1	
83	Strainer	05-984840	1	1	-	-	
		05-815080	-	-	1	1	
84	Service valve (2/8)	05-864470	1	1	-	-	
		05-864350	-	-	1	1	
85	Flare nut(2/8)	38-890070	1	1	-	-	
	Flare nut(3/8)	38-890080	-	-	1	1	
88	Crankcase heater	06-855410	1	1	1	1	※
89	Base compressor cover	02-880780	1	1	1	1	


32. REPLACEMENT PARTS

CU-112C52XP, CU-140C53XP, CU-160C53XP

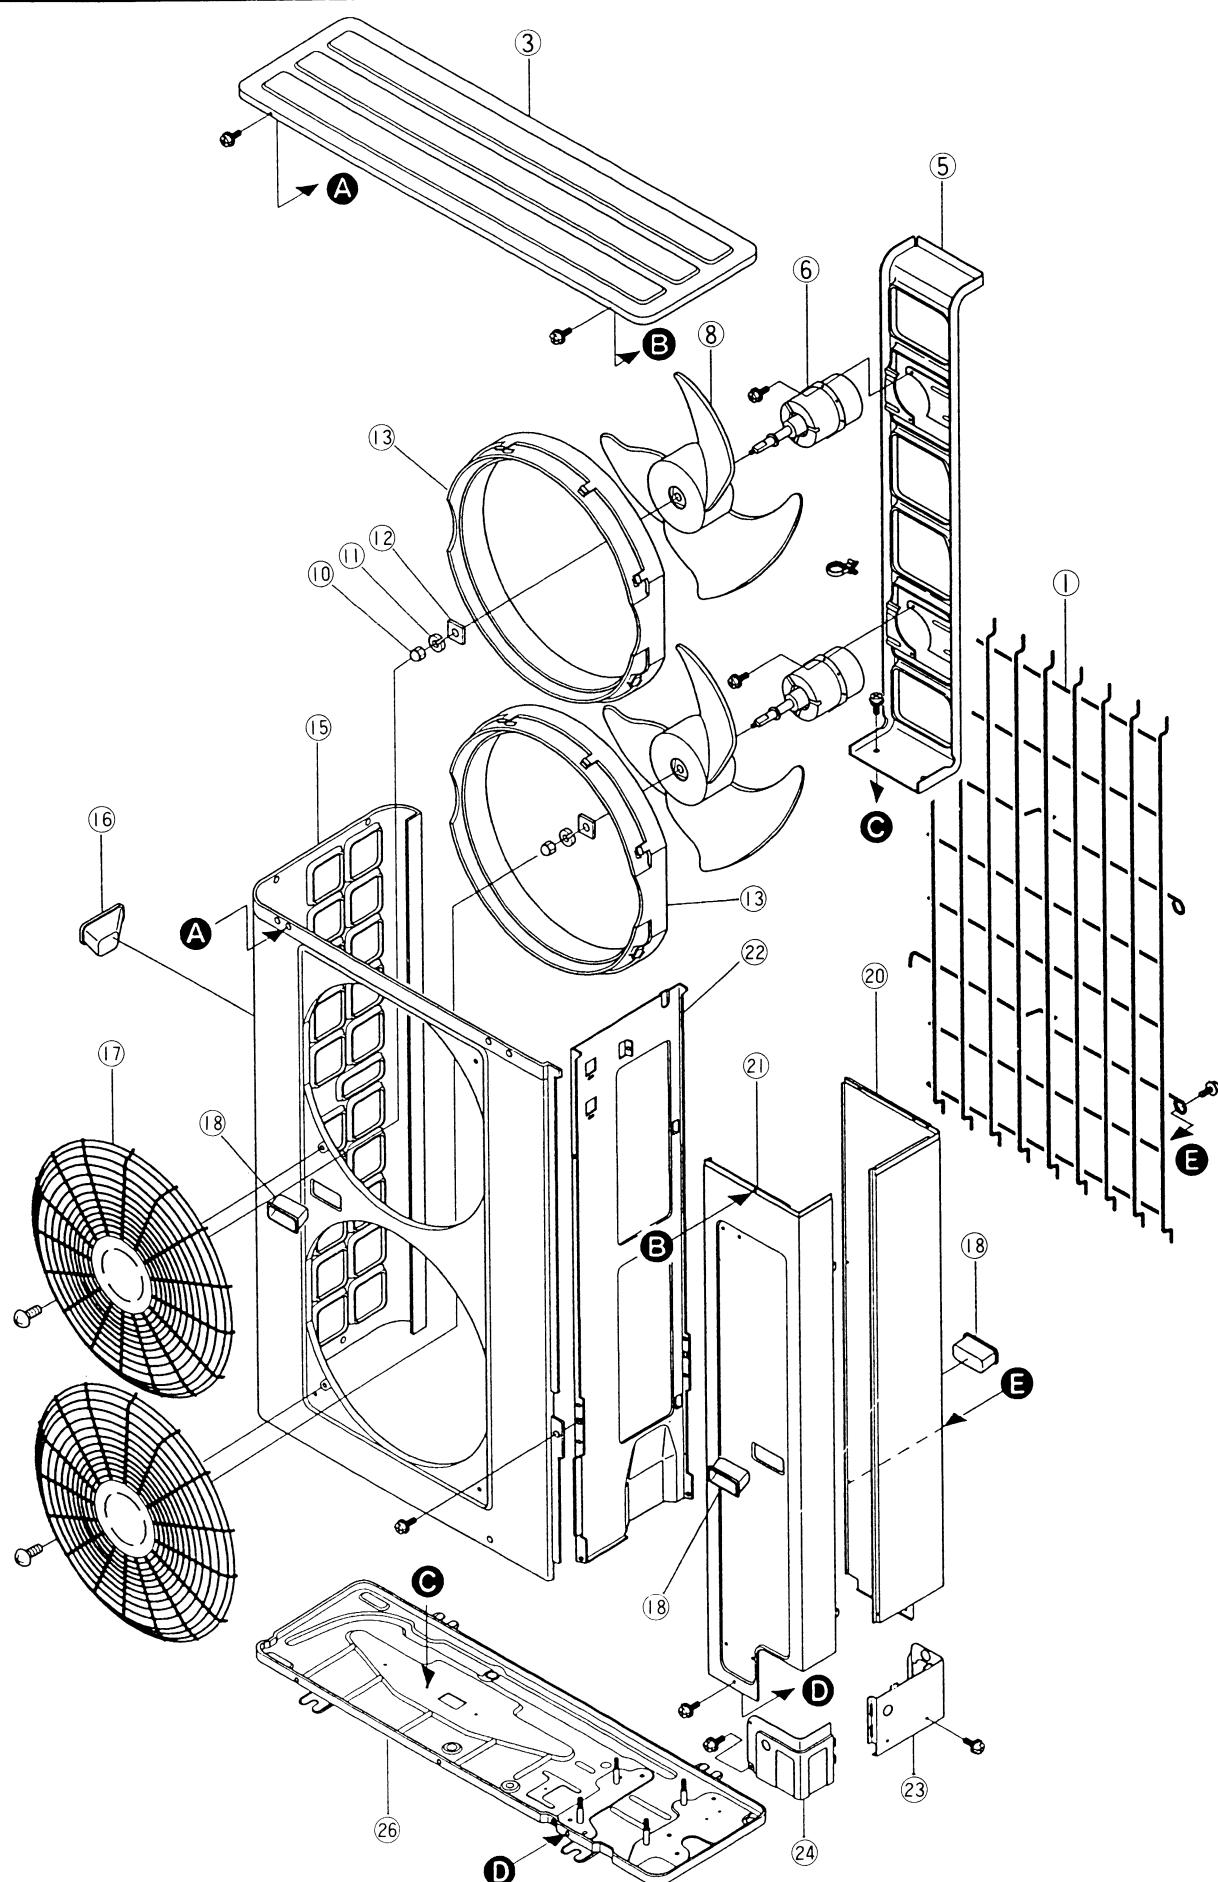


32. REPLACEMENT PARTS

CU-112C52XP, CU-140C53XP, CU-160C53XP

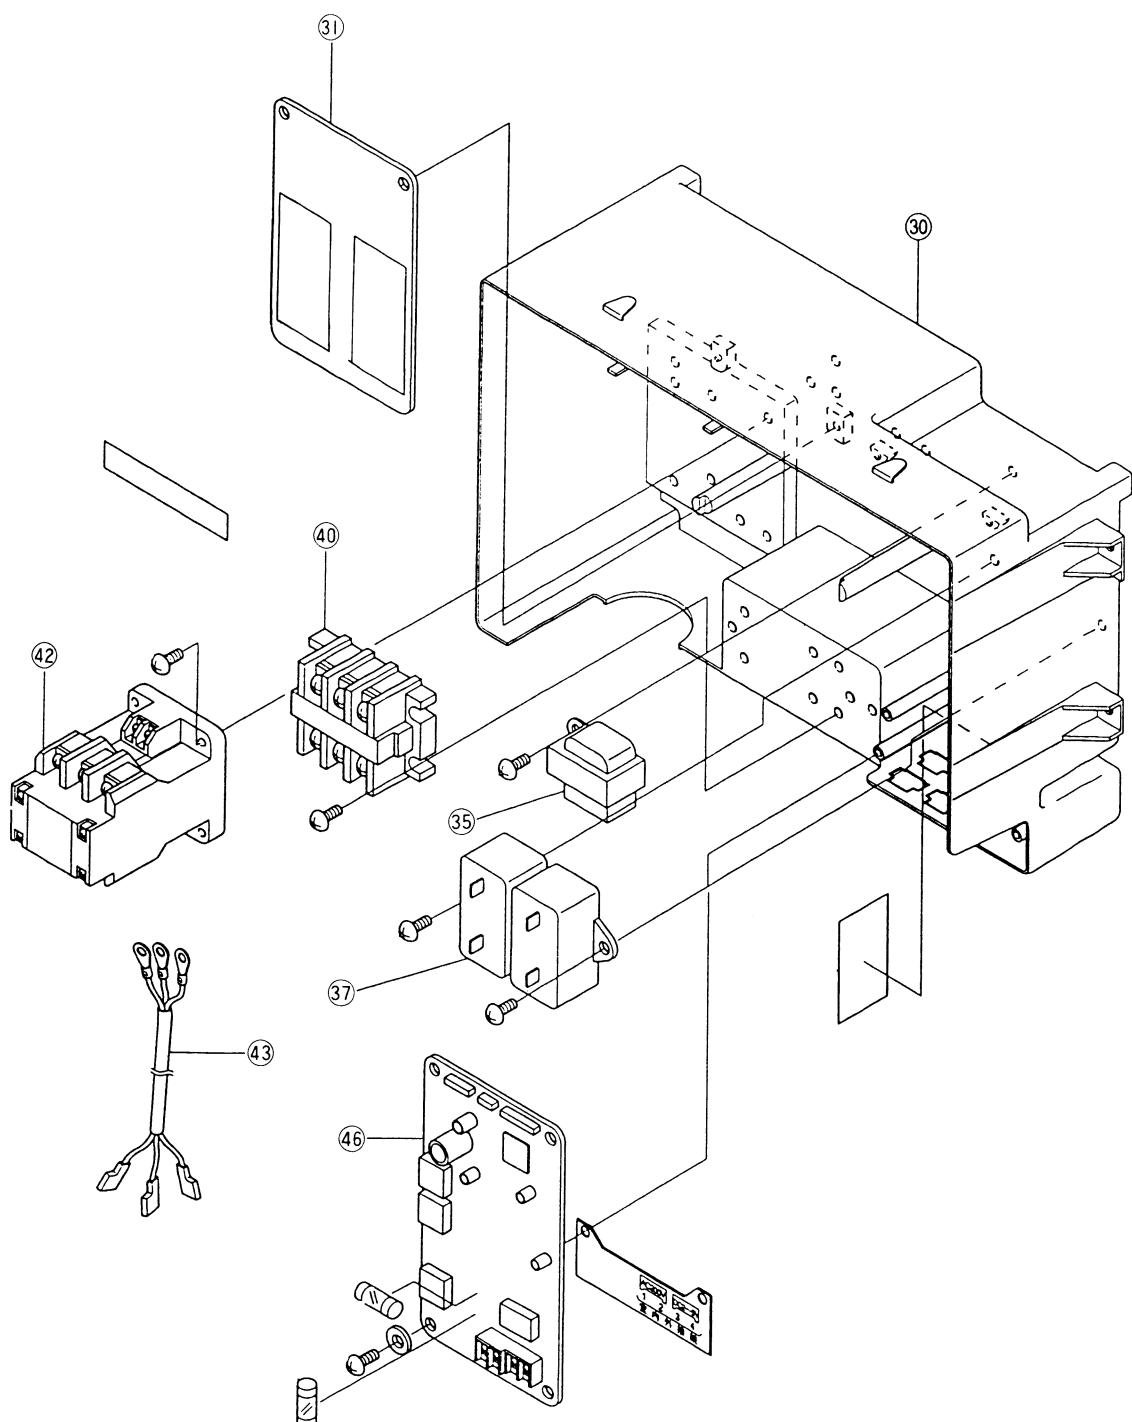


32. REPLACEMENT PARTS

CU-112C52XP, CU-140C53XP, CU-160C53XP(Heat pump model)

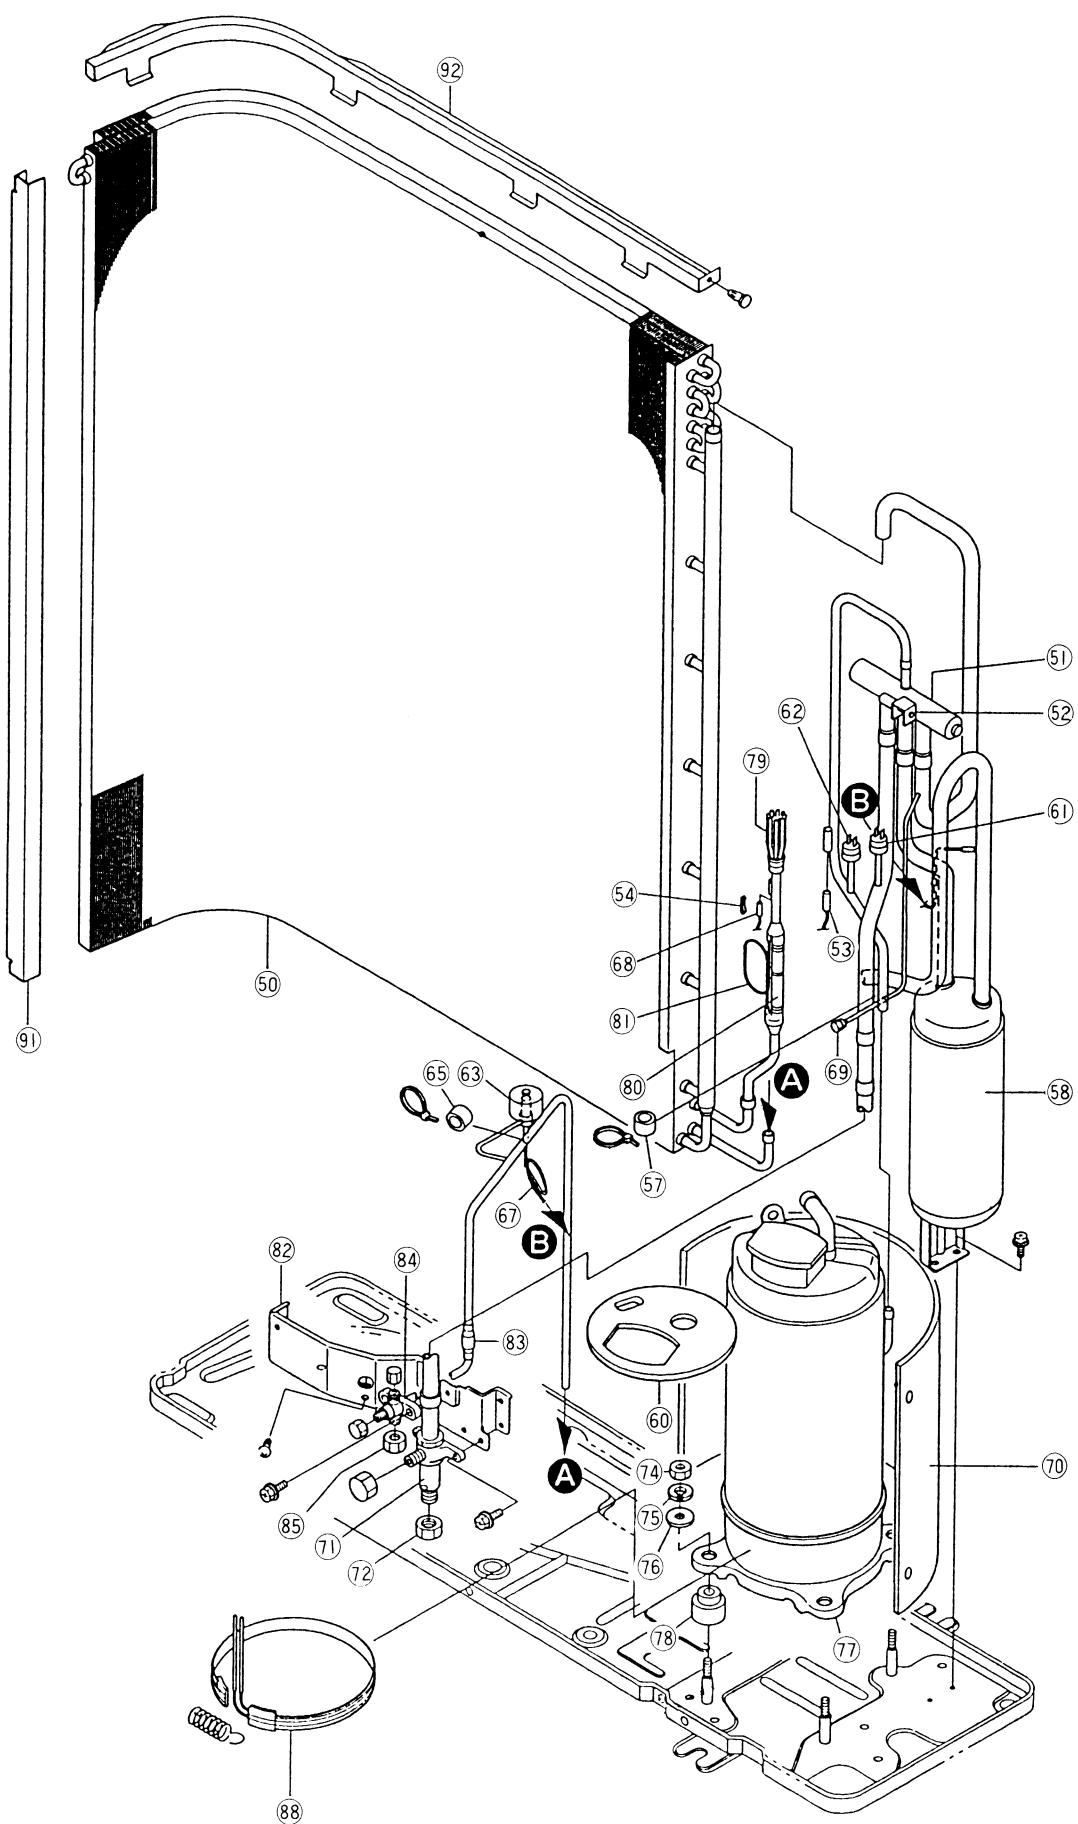

32. REPLACEMENT PARTS

CU-112C02XP, CU-140C03XP, CU-160C03XP(Cooling only model)

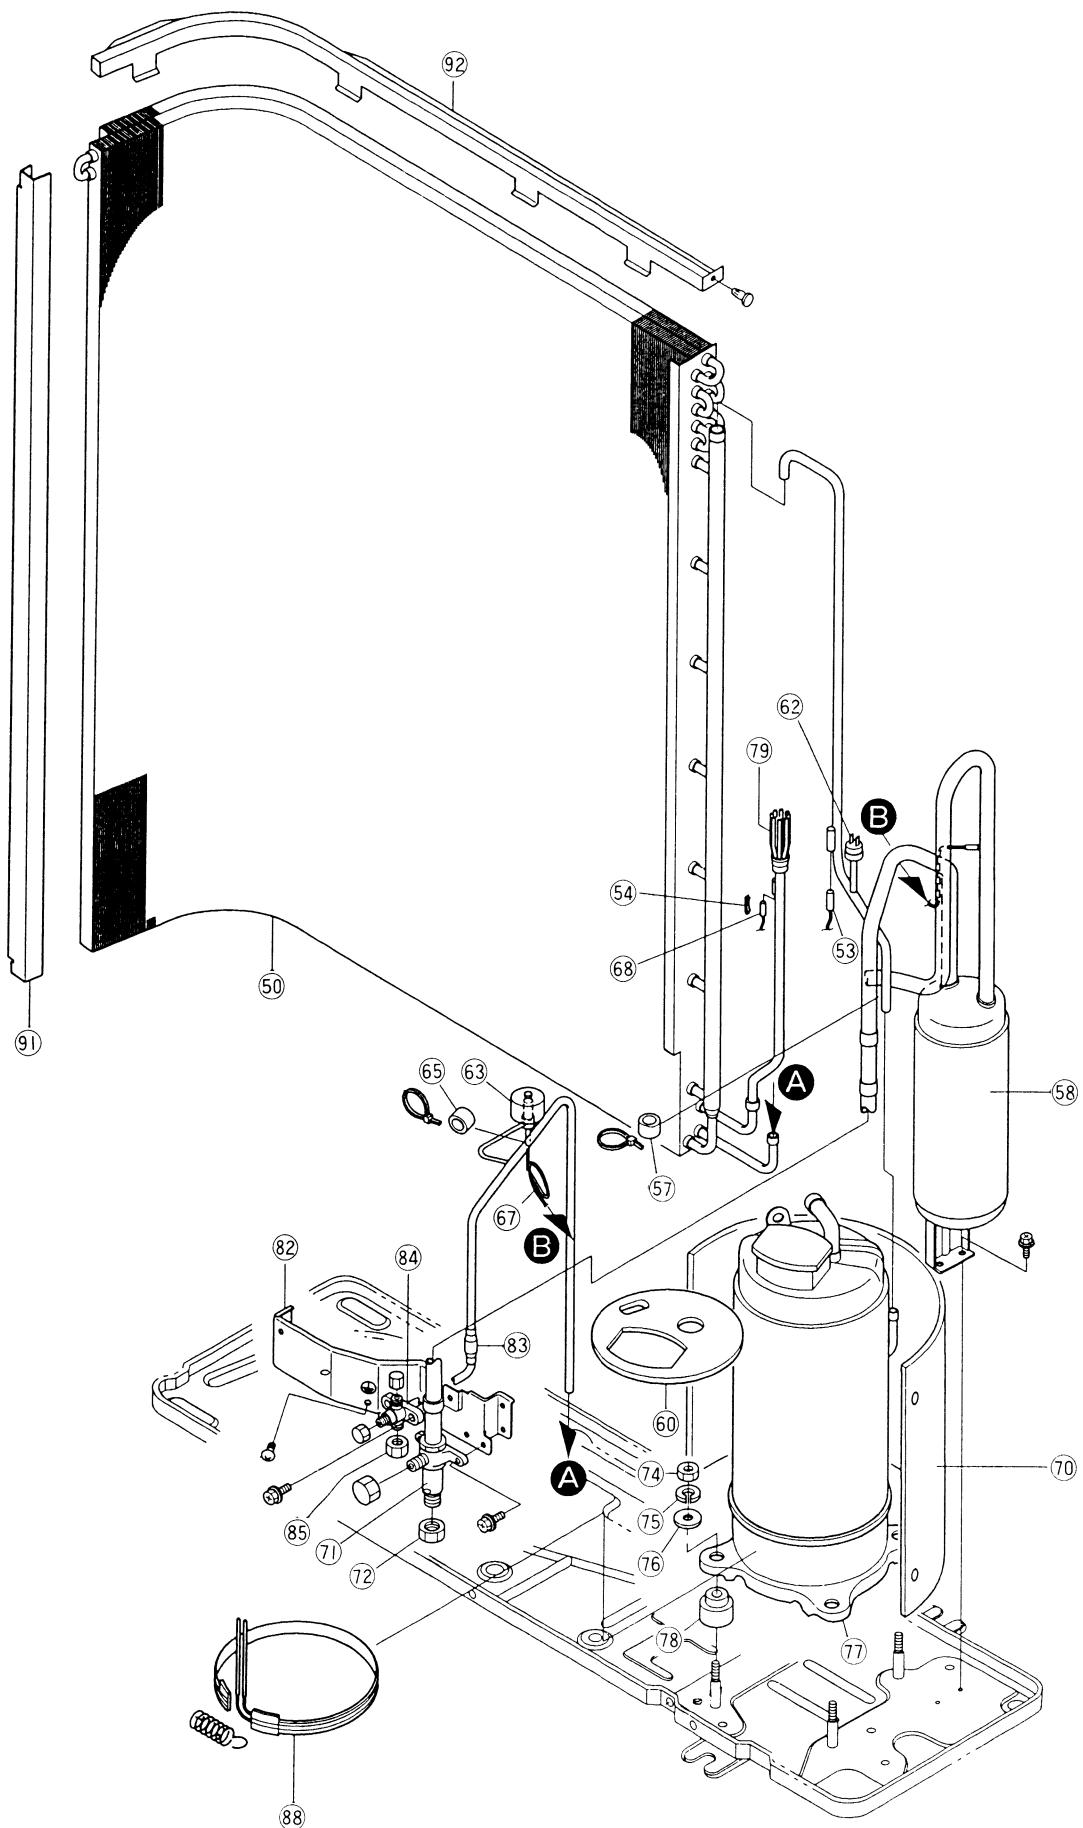

32. REPLACEMENT PARTS

Heat pump model

REF.NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT		※ REC PARTS
			140C53XP	160C53XP	
1	Condenser guard	02-879900	1	1	
3	Top plate As	02-879910	1	1	
5	Motor stay	02-879490	1	1	
6	Fan motor	06-855620	2	—	※
		06-855630	—	2	
8	Prop fan	05-864390	2	2	※
9	10 Nut	08-405150	2	2	
10	10 Sp washer	08-405160	2	2	
11	Washer for fan	05-962730	2	2	
13	Orifice ring	02-879410	2	2	
15	Orifice plate	02-879890	1	1	
16	Hanger shell(B)	02-879430	1	1	
17	Fan guard	42-574190	1	1	
18	Hanger shell(A)	02-879420	3	3	
20	Side panel	02-879480	1	1	
21	Front panel	02-879520	1	1	
22	Seal plate	02-881180	1	—	
		02-879870	—	1	
23	Pipe cover B	02-879370	1	1	
24	Pipe cover F	02-879360	1	1	
26	Unit base As	42-573470	—	1	
		42-573460	1	—	
30	Control box	06-852690	1	1	
31	CT board	06-855400	1	1	※
35	Transformer	06-855430	1	1	※
37	Electric capacity for fan motor	06-833100	2	2	※
40	Terminal	06-855360	1	1	
42	Compressor relay	06-856400	1	1	※
43	Compressor cord As	46-931370	1	—	
		46-939060	—	1	
46	Printed circuit board	46-935920	1	1	※
50	Condenser&Distibuter	45-907490	1	—	※
		45-907750	—	1	
51	Reversing valve	05-814560	1	1	※
52	Reversing valve coil	06-855900	1	1	※
53	Piping thermistor(Discharge)	46-931350	1	1	※
54	Spring for sensor	05-840710	2	2	
57	Pipe holder rubber	05-867620	1	1	
58	Accumulator As	45-907430	1	—	
		45-907580	—	1	
60	Compressor cover top	05-866300	—	1	
		05-864540	1	—	
61	Pressure switch(Heating)	06-826230	1	1	※
62	High pressure switch	06-830840	1	1	※
63	Electric magnetic valve coil	05-855920	1	1	※
64	Electric magnetic valve	05-809320	1	1	※
65	Pipe holder rubber	05-867140	1	1	
67	Capillary tube for valve	05-866020	1	—	
		05-866030	—	1	
68	Piping thermistor(Coil)	46-931360	1	1	※
69	Check joint	05-822330	1	1	
70	Compressor cover	05-865060	1	1	
71	Ball valve(6/8)	05-865070	1	1	
72	Flare nut(6/8)	38-890110	1	1	
74	8Nutwithwasher	38-817010	3	3	
77	Compressor	91-959010	1	—	※
		05-869190	—	1	
78	Mount rubber	05-864550	4	—	
		05-867180	—	3	
79	Distributor	05-865740	1	1	
		05-864830	8	8	
80	Check valve	05-465490	1	1	
81	Heating capillary tube	05-865990	1	—	
		05-866000	—	1	
82	Valve stay	32-879400	1	1	
83	Strainer	05-815080	1	1	
84	Service valve(3/8)	05-864350	1	1	
85	Flare nut(3/8)	38-890080	1	1	※
88	Crankcase heater	06-855420	1	—	
		06-855690	—	1	
90	Drain elbo As	47-598250	1	1	
91	Coil seal plate	02-879460	1	1	
92	Coil spacer	02-879860	1	1	
94	Bonnet(3/8)	05-403050	1	1	
95	Bonnet(3/4)	05-412690	1	1	

32. REPLACEMENT PARTS

Cooling only model

REF NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT			※REC PARTS
			112C0XP	140C03XP	160C03XP	
1	Condenser guard	02-879510	1	—	—	
		02-879900	—	1	1	
3	Top plate As	02-879340	1	—	—	
		02-879910	—	1	1	
5	Motor stay	02-879490	1	1	1	
6	Fan motor	06-855620	2	2	—	
		06-855630	—	—	2	※
8	Prop fan	05-864390	2	2	2	※
9	10 Nut	08-405150	2	2	2	
10	10 Sp washer	08-405160	2	2	2	
11	Washer for fan	06-962730	2	2	2	
13	Orifice ring	02-879410	2	2	2	
15	Orifice plate	02-879500	1	—	—	
		02-879890	—	1	1	
16	Hanger shell(B)	02-879430	1	1	1	
17	Fan guard	42-574190	1	1	1	
18	Hanger shell(A)	02-879420	3	3	3	
20	Side panel	02-879450	1	1	1	
21	Front panel	02-879620	1	1	1	
22	Seal plate	02-881180	1	1	—	
		42-573500	—	—	1	
23	Pipe cover B	02-879370	1	—	1	
24	Pipe cover F	02-879360	1	1	1	
26	Unit base As	42-573470	—	—	1	
		42-573460	—	1	—	
		42-574050	1	—	—	
		42-574130	—	—	—	
30	Control box	06-852690	1	1	—	
31	CT board	06-855400	1	1	1	※
35	Transformer	06-855430	1	1	1	※
37	Electric capacity for fan motor	06-833100	2	2	2	※
40	Terminal	06-855360	1	1	1	
42	Compressor relay	06-844690	1	—	—	※
		06-856400	—	1	1	※
43	Compressor cord As	46-931370	—	1	—	
		46-936330	1	—	—	
		46-939060	—	—	1	
46	Printed circuit board	46-937260	1	—	—	※
		49-937410	—	—	—	
		46-937420	—	1	—	※
		46-937760	—	—	1	※
50	Condenser & Distributer	45-906410	1	—	—	
		45-907750	—	1	1	
53	Piping thermistor(Discharge)	46-931350	1	1	1	※
54	Spring for sensor	05-840710	2	2	2	
57	Pipe holder rubber	05-867620	1	1	1	
58	Accumulator As	45-907430	—	1	—	
		45-907580	—	—	1	
		45-909310	1	—	—	
		45-909440	—	—	—	
		45-909450	—	—	—	
60	Compressor cover top	05-864540	—	1	—	
		05-866360	—	—	1	
		05-867920	1	—	—	
		05-867940	—	—	—	
62	High pressure switch	06-830840	1	1	1	※
63	Electric magnetic valve coil	06-855920	1	1	1	※
65	Pipe holder rubber	06-867140	1	1	1	
67	Capillary tube for valve	05-864490	1	—	—	
		05-866020	—	1	—	
		05-866030	—	—	1	
68	Piping thermistor Coil	46-931360	1	1	1	※
70	Compressor cover	05-865060	—	1	—	
		05-866260	—	—	1	
		05-867910	1	—	—	
		05-867930	—	—	—	
71	Ball valve(6/8)	05-865070	1	1	1	
72	Flare nut(6/8)	38-890110	1	1	1	
74	8 Nut with washer	38-817010	—	3	3	
		08-405360	3	—	—	

Cooling only model

REF NO.	PARTS NAME	PARTS NUMBER CNR	QUANTITY PER 1 UNIT			※REC PARTS
			112C0XP	140C03XP	160C03XP	
77	Compressor	05-959010	—	1	—	
		05-869190	—	—	1	
		05-867360	1	—	—	
		05-867410	—	—	—	
		05-863010	—	—	—	
78	Mount rubber	05-849460	4	—	—	
		05-864550	—	4	—	
		05-867180	—	—	3	
79	Distributor	05-864820	6	—	—	
		05-865740	—	1	1	
79	Capillary tube	05-864830	1	—	—	
		05-864830	—	8	8	
82	Valve stay	02-879400	—	1	1	
82	Valve stay	02-881170	1	—	—	
83	Strainer	05-815080	1	1	1	
84	Service valve(3/8)	05-864350	1	1	1	
		05-868750	1	—	—	
85	Flare nut(3/8)	38-890080	1	1	1	
88	Crankcase heater	06-855420	1	1	1	
		06-855690	—	—	1	
91	Coil seal plate	02-879460	1	1	1	
92	Coil spacer	02-879530	1	—	—	
		02-879860	—	1	1	
93	Electric noise killer	06-814710	1	1	1	
94	Low pressure switch	06-845860	—	—	1	
95	Bonnet(3/8)	05-403050	—	—	1	
96	Bonnet(3/4)	05-412690	—	—	1	

33.COOLING CAPACITY PERFORMANCE DATA

Model	Power Source	EVAP.AIR		Temperature Air Entering Condenser (°C.D.B.)														
		Air Volume (m3/min)	Entering Wet-Bulb Temp (°C)	25			30			35			40					
				TC (kW)	SHC (kW)	Input (kW)	TC (kW)	SHC (kW)	Input (kW)	TC (kW)	SHC (kW)	Input (kW)	TC (kW)	SHC (kW)	Input (kW)			
CS-40U32JP CU-40C52HP 40C02HP	Single phase	10 (Lo) 19 0.1	17 3.4 2.8	3.4 3.6 3.9	2.8 2.3 1.8	1.11 1.27 1.32	3.3 3.5 3.8	2.7 2.2 1.8	1.19 1.27 1.39	3.1 3.6 3.6	2.6 2.4 1.8	1.28 1.43 1.49	2.9 3.1 3.4	2.5 2.1 1.7	1.38 1.46 1.58	2.5 2.7 3.1	2.3 1.9 1.6	1.52 1.6 1.73
		12 (Me) 19 0.14	17 3.9 2.2	3.9 4.2 4.5	3.3 2.7 2.1	1.19 1.27 1.4	3.8 4 4.3	3.2 2.6 2.1	1.27 1.35 1.48	3.5 3.9 4.1	3.1 2.6 2.1	1.37 1.48 1.59	3.3 3.5 3.8	2.9 2.4 2	1.47 1.56 1.69	2.9 3.1 3.5	2.7 2.2 1.9	1.62 1.71 1.84
		13 (Hi) 19 0.15	17 4.2 2.2	4.2 4.4 4.8	3.5 2.9 2.2	1.22 1.31 1.45	4 4.2 4.6	3.5 2.8 2.3	1.31 1.4 1.53	3.8 4 4.4	3.4 2.8 2.2	1.41 1.5 1.64	3.5 3.7 4.1	3.2 2.6 2.2	1.52 1.61 1.74	3.1 3.3 3.7	2.9 2.4 1.9	1.67 1.76 1.9
		10 (Lo) 19 0.1	17 4.4 5.1	4.4 4.7 5.1	3.6 2.9 2.3	1.39 1.49 1.64	4.3 4.5 4.9	3.6 2.9 2.3	1.48 1.58 1.74	4 4.7 4.7	3.4 3.1 2.3	1.6 1.78 1.85	3.7 4 4.4	3.3 2.7 2.2	1.72 1.82 1.97	3.3 3.5 <br;> </br;>		
		12 (Me) 19 0.14	17 5.1 5.4	4.2 3.5	4.2 3.5	1.48 1.59	4.9 5.2	4.2 3.4	1.58 1.69	4.6 5	4.1 3.4	1.7 1.84	4.2 4.5	3.8 3.2	1.83 1.94	3.8 4	3.5 2.9	2.02 2.13 2.29
		13 (Hi) 19 0.15	17 5.4 5.7	4.6 3.7	4.6 3.7	1.52 1.64	5.2 5.5	4.5 3.7	1.63 1.74	4.9 5.2	4.4 3.6	1.76 1.87	4.5 4.8	4.1 3.4	1.89 2	4	3.8 3.1	2.09 2.2 2.37
		13 (Lo) 19 0.1.	17 5.6 5.9	4.5 3.7	4.5 2.5	2.36 2.5	5.4 5.7	4.4 3.6	2.27 2.41	5 5.9	4.3 3.9	2.13 2.38	4.7 5	4.1 3.4	1.98 2.11	4.1 4.4	3.7 3	1.75 1.86 2.09
		15 (Me) 19 0.13	17 6.1 6.5	5.1 4.1	5.1 4.1	2.48 2.62	5.9 6.2	5 4.1	2.38 2.53	5.6 6.2	4.9 4.2	2.24 2.44	5.1 5.5	4.6 3.8	2.07 2.22	4.5 4.8	4.1 3.4	1.84 1.95 2.19
		17 (Hi) 19 0.15	17 7.2 7.7	5.7 3.6	5.7 3.6	2.04 2.41	6.5 7.5	5.6 3.7	2.18 2.55	6.1 7.1	5.5 3.6	2.35 2.73	5.7 6.6	5.2 3.5	2.53 2.9	5 6	4.7 3.3	2.79 3.1 3.16
CS-71U32JP CU-71C52HP 71C02HP	Single phase	13 (Lo) 19 0.1.	17 5.6 5.9	4.5 3.7	4.5 2.5	2.36 2.7	5.4 6.2	4.4 2.9	2.27 2.61	5 5.9	4.3 2.8	2.13 2.47	4.7 5.5	4.1 2.8	1.98 2.32	4.1 5	3.7 2.6	1.75 1.86 2.09
		15 (Me) 19 0.13	17 6.1 6.5	5.1 4.1	5.1 4.1	2.48 2.62	5.9 6.2	5 4.1	2.38 2.53	5.6 6.2	4.9 4.2	2.24 2.44	5.1 5.5	4.6 3.8	2.07 2.22	4.5 4.8	4.1 3.4	1.84 1.95 2.19
		17 (Hi) 19 0.15	17 7.2 7.7	5.7 3.6	5.7 3.6	2.04 2.41	6.5 7.5	5.6 3.7	2.18 2.55	6.1 7.1	5.5 3.6	2.35 2.73	5.7 6.6	5.2 3.5	2.53 2.9	5 6	4.7 3.3	2.79 3.1 3.16
		13 (Lo) 19 0.1	17 5.6 5.9	4.5 3.7	4.5 2.5	2.36 2.7	5.4 6.2	4.4 2.9	2.27 2.61	5 5.9	4.3 2.8	2.13 2.47	4.7 5.5	4.1 2.8	1.98 2.32	4.1 5	3.7 2.6	1.75 1.86 2.09
		15 (Me) 19 0.13	17 6.1 6.5	5.1 4.1	5.1 4.1	2.48 2.62	5.9 6.2	5 4.1	2.38 2.53	5.6 6.2	4.9 4.2	2.24 2.44	5.1 5.5	4.6 3.8	2.07 2.22	4.5 4.8	4.1 3.4	1.84 1.95 2.19
		17 (Hi) 19 0.15	17 7.2 7.7	5.7 3.6	5.7 3.6	2.04 2.41	6.5 7.5	5.6 3.7	2.18 2.55	6.1 7.1	5.5 3.6	2.35 2.73	5.7 6.6	5.2 3.5	2.53 2.9	5 6	4.7 3.3	2.79 3.1 3.16
		13 (Lo) 19 0.1	17 6.4 6.8	5.2 4.2	5.2 2.76	2.61 6.5	6.2 4.2	5.1 2.66	2.5 6.7	5.8 4.4	5 4.4	2.35 2.62	5.4 5.7	4.7 3.9	2.18 2.33	4.8 5	4.3 3.5	1.93 2.05 2.09
		15 (Me) 19 0.13	17 7.4 8	5.8 4.7	5.8 4.7	2.72 2.88	6.7 7.1	5.7 4.7	2.62 2.77	6.3 7	5.5 4.7	2.46 2.67	5.8 6.2	5.2 4.3	2.28 2.43	5.2 5.5	4 4	2.01 2.15 2.41
		19 (Hi) 19 0.16	17 8 8.7	6.4 4.1	2.22 2.63	7.3 8.4	6.3 4.1	2.38 2.78	6.9 8	6.2 4.1	2.57 2.98	6.4 7.4	5.8 3.9	2.76 2.98	5.6 7.4	5.3 3.9	3.04 3.21 3.45	
CS-80U32JP CU-80C52HP 80C02HP	Single phase	15 (Lo) 19 0.1	17 6.4 6.8	5.2 4.2	5.2 2.76	2.61 6.5	6.2 4.2	5.1 2.66	2.5 6.7	5.8 4.4	5 4.4	2.35 2.62	5.4 5.7	4.7 3.9	2.18 2.33	4.8 5	4.3 3.5	1.93 2.05 2.3
		17 (Me) 19 0.13	17 7.4 8	5.8 4.7	5.8 4.7	2.72 2.88	6.7 7.1	5.7 4.7	2.62 2.77	6.3 7	5.5 4.7	2.46 2.67	5.8 6.2	5.2 4.3	2.28 2.43	5.2 5.5	4 4	2.01 2.15 2.41
		19 (Hi) 19 0.16	17 8 8.7	6.4 4.1	2.22 2.63	7.3 8.4	6.3 4.1	2.38 2.78	6.9 8	6.2 4.1	2.57 2.98	6.4 7.4	5.8 3.9	2.76 2.98	5.6 7.4	5.3 3.9	3.04 3.21 3.45	
		15 (Lo) 19 0.1	17 6.4 6.8	5.2 4.2	5.2 2.76	2.61 6.5	6.2 4.2	5.1 2.66	2.5 6.7	5.8 4.4	5 4.4	2.35 2.62	5.4 5.7	4.7 3.9	2.18 2.33	4.8 5	4.3 3.5	1.93 2.05 2.3
		17 (Me) 19 0.13	17 7.4 8	5.8 4.7	5.8 4.7	2.72 2.88	6.7 7.1	5.7 4.7	2.62 2.77	6.3 7	5.5 4.7	2.46 2.67	5.8 6.2	5.2 4.3	2.28 2.43	5.2 5.5	4 4	2.01 2.15 2.41
		19 (Hi) 19 0.16	17 8 8.7	6.4 4.1	2.22 2.63	7.3 8.4	6.3 4.1	2.38 2.78	6.9 8	6.2 4.1	2.57 2.98	6.4 7.4	5.8 3.9	2.76 2.98	5.6 7.4	5.3 3.9	3.04 3.21 3.45	
		15 (Lo) 19 0.1	17 6.4 6.8	5.2 4.2	5.2 2.76	2.61 6.5	6.2 4.2	5.1 2.66	2.5 6.7	5.8 4.4	5 4.4	2.35 2.62	5.4 5.7	4.7 3.9	2.18 2.33	4.8 5	4.3 3.5	1.93 2.05 2.3
		17 (Me) 19 0.13	17 7.4 8	5.8 4.7	5.8 4.7	2.72 2.88	6.7 7.1	5.7 4.7	2.62 2.77	6.3 7	5.5 4.7	2.46 2.67	5.8 6.2	5.2 4.3	2.28 2.43	5.2 5.5	4 4	2.01 2.15 2.41
		19 (Hi) 19 0.16	17 8 8.7	6.4 4.1	2.22 2.63	7.3 8.4	6.3 4.1	2.38 2.78	6.9 8	6.2 4.1	2.57 2.98	6.4 7.4	5.8 3.9	2.76 2.98	5.6 7.4	5.3 3.9	3.04 3.21 3.45	
CS-80U32JP CU-80C52XP 80C02XP	3N phase	15 (Lo) 19 0.1	17 7.3 7.3	5.2 3.3	5.2 2.98	2.61 7.1	6.2 3.3	5.1 2.88	2.5 6.7	5.8 3.3	5 2.73	2.35 2.73	5.4 6.2	4.7 3.2	2.18 2.56	4.8 5.6	4.3 3	1.93 2.05 2.3
		17 (Me) 19 0.13	17 7.4 8	5.8 3.7	5.8 3.11	2.72 7.7	6.7 3.7	5.7 3.01	2.62 7.3	6.3 3.6	5.5 2.85	2.46 2.85	5.8 6.9	5.2 3.6	2.28 2.67	5.2 6.2	4.8 3.3	2.01 2.15 2.41
		19 (Hi) 19 0.16	17 8 8.7	6.4 4.1	2.22 2.63	7.3 8.4	6.3 4.1	2.38 2.78	6.9 8	6.2 4.1	2.57 2.98	6.4 7.4	5.8 3.9	2.76 2.98	5.6 7.4	5.3 3.9	3.04 3.21 3.45	
		15 (Lo) 19 0.1	17 7.3 7.3	5.2 3.3	5.2 2.98	2.61 7.1	6.2 3.3	5.1 2.88	2.5 6.7	5.8 3.3	5 2.73	2.35 2.73	5.4 6.2	4.7 3.2	2.18 2.56	4.8 5.6	4.3 3	1.93 2.05 2.3
		17 (Me) 19 0.13	17 7.4 8	5.8 3.7	5.8 3.11	2.72 7.7	6.7 3.7	5.7 3.01	2.62 7.3	6.3 3.6	5.5 2.85	2.46 2.85	5.8 6.9	5.2 3.6	2.28 2.67	5.2 6.2	4.8 3.3	2.01 2.15 2.41
		19 (Hi) 19 0.16	17 8 8.7	6.4 4.1	2.22 2.63	7.3 8.4	6.3 4.1	2.38 2.78	6.9 8	6.2 4.1	2.57 2.98	6.4 7.4	5.8 3.9	2.76 2.98	5.6 7.4	5.3 3.9	3.04 3.21 3.45	
		15 (Lo) 19 0.1	17 7.3 7.3	5.2 3.3	5.2 2.98	2.61 7.1	6.2 3.3	5.1 2.88	2.5 6.7	5.8 3.3	5 2.73	2.35 2.73	5.4 6.2	4.7 3.2	2.18 2.56	4.8 5.6	4.3 3	1.93 2.05 2.3
		17 (Me) 19 0.13	17 7.4 8	5.8 3.7	5.8 3.11	2.72 7.7	6.7 3.7	5.7 3.01	2.62 7.3	6.3 3.6	5.5 2.85	2.46 2.85	5.8 6.9	5.2 3.6	2.28 2.67	5.2 6.2	4.8 3.3	2.01 2.15 2.41
		19 (Hi) 19 0.16	17 8 8.7	6.4 4.1	2.22 2.63	7.3 8.4	6.3 4.1	2.38 2.78	6.9 8	6.2 4.1	2.57 2.98	6.4 7.4	5.8 3.9	2.76 2.98	5.6 7.4	5.3 3.9	3.04 3.21 3.45	

