



PROFESSIONAL USER MANUAL

Dante Config Editor

Complete guide - 2026.10 edition

Prepare, review, and transform Dante configurations offline: devices, channels, audio and network settings, subscriptions, preset merging, template banks, and technical deliverables.

Review

Scan latency, sample rate, audio format, network, IP, clock, and alerts at a glance.

Edit without losing patching

Rename devices and channels while recognized subscriptions are updated.

Build offline

Merge XML presets, add templates, and prepare the network before devices are available.

Permanent license: EUR 29 including French VAT, one-time payment.

No reminder for 30 days. DCE then remains fully usable; the license removes the startup reminder. Secure payment through Stripe Managed Payments.

Unofficial third-party tool, independent from Audinate. DCE does not control the live network. Keep the original and review the final XML in Dante Controller.

Windows 10/11 x64 | macOS Apple Silicon et Intel
github.com/Mamat79/Dante-Config-Editor

SiLeMI/O

By Mamat

-----[]--





Interactive contents

Select a chapter to open it. PDF viewer bookmarks use the same structure, and every page provides a direct link back to these contents.

How to use this guide	4
1. Start safely	5
Shared StageFlow project	6
2. Project and general settings	7
Screen map	8
Choose the right workflow	9
Adapt the workspace	10
The essentials on one screen	11
General settings, alerts, and profiles	12
Quick profiles and global actions	13
3. Per-device settings and channels	14
Edit a device without leaving the workflow	15
IP and audio formats	16
Rename Rx and Tx channels quickly	17
Extend a numbered or stereo series like a spreadsheet	18
Channels and patching principles	19
4. Patch: inspect and correct a subscription precisely	20
Easy patch: visual and immediate patching	21
Easy patch: click, drag, range, and PATCH 1:1	22
Trace a connection directly in the matrix	23
Add XML to project	24



5. Build a project: add another XML file	25
Understand the device bank	26
Manage device banks	27
Create, share, and reuse a device bank	28
Machine bank and generic roles	29
Create a new offline project	30
6. Label Import / Export	31
Exchange labels without an external template	32
Choose the correct format	32
Workflow	32
Build and export a synoptic	33
Validation, comparison, and Import / Export	34
7. Review, save, and recover	35
Save and final validation	36
Automatic recovery	37
8. Atomic Bomb: prepare an exercise	38
Atomic Bomb: create an exercise	39
Regression tests	40
Known limitations	40
Help and information	40
License and trial	40
DCE license	41

This guide follows a practical workflow: open or create, review, edit devices, patch, compose the project, export, and validate.



How to use this guide

The guide now follows the normal offline workflow. Each chapter identifies the screen to open, the action to perform, and the checks to complete before moving on.

Step	Topic	Expected result
1	Startup	Install, open, or create a project without altering the original.
2	General settings	Review the project, target devices, and apply profiles.
3	Per-device settings	Edit identity, network, audio, and Rx/Tx labels.
4	Patch	Inspect, create, trace, or remove subscriptions.
5	Project composition	Merge XML, duplicate devices, and use banks.
6	Import / Export	Exchange labels, reports, patchbooks, and synoptics.
7	Validation	Compare, save, recover, and review the XML.
8	Atomic Bomb	Create an offline exercise and access help.

Screenshots use an anonymized synthetic preset. Numbers and markers added to images are for guidance only.



1. Start safely

Important: this is a third-party tool, not an official Audinate product. It edits XML files offline without connecting to a Dante network or using an Audinate API. Keep the original and validate the generated file in Dante Controller before production use.

The Windows x64 installer includes the application and the required .NET 8 runtime. A separate .NET installation is normally not required.

- The default location is Program Files, with Start menu and desktop shortcuts.
- Installation uses a stable AppId, Program Files location, shortcuts, and local DCE profile so upgrades preserve settings and previously activated licenses.
- The 79 unique templates are clearly divided between DCE Community (77 devices) and DCE Generic (2 generic roles). My bank remains reserved for the user's own templates.
- Self-contained macOS installers support Apple Silicon and Intel. The macOS version has been validated by the author on real Mac hardware and follows the same main workflows as Windows.
- All four French and English PDFs are installed and remain available from the application.
- At startup, DCE quietly checks GitHub Releases. When an update is available, it offers the matching installer, verifies its SHA-256, and launches it only after confirmation. The same check is available under Help > Check for updates.

Safety principles

- Work on a copy of the exported XML and use Save as.
- The guard tracks devices by stable technical identity, blocks unknown paths, and protects Dante IDs, mediaType, and instance_id.
- Safe saving: DCE validates a temporary file first. The source and any existing destination receive a copy in DanteConfigEditor_Backups before replacement.
- A successful import into Dante Controller is the final validation before operation.

Open or create a project

On first launch, a guided welcome offers four starting points: open XML, create a project, browse device banks, or read the full guide. Close it to enter DCE; it will not open automatically again and remains available from Help > Discover DCE. The first launch uses the light theme; the last selected theme and language are then restored automatically.

Click Open XML, choose the file, then review device, TX/RX channel, and active subscription counts. XML files with a default namespace are supported.



Shared StageFlow project

DCE creates, opens, and saves .stageflow projects on its own. StageFlow is free and optional. Dante XML remains the file exported to Dante Controller.

.stageflow project
One shared directory, isolated domains

StageFlow
coordination

SMT
technical

Dante Config Editor
dante/dante.json

StageMark / CAD
drawings

Item	DCE behavior
dante/dante.json	The only domain owned and replaced by DCE.
patch.json	Groups, inheritance, and UUIDs are read; DCE can preview their names against an RX range.
cad/, smt/, stagemark/	Never rewritten or removed by DCE.
Concurrency	Domain lock, base hash, debounced watcher, and atomic replacement.
StageFlow LIVE	Validated V1 lease; only Rx channels linked by UUID and a saved rule can follow the patch.
Windows console	Single instance, current-user pipe, nonce and UUID checks; local choice before switching.

Shared project: open an empty .stageflow project. The immediate Start from scratch choice opens the first-device wizard; Open Dante XML uses an existing configuration. Save then updates only the Dante domain. Save as can export XML for Dante Controller or create another project. Other domains remain byte-for-byte unchanged.

Patch to RX: from Project or Import / Export > Labels, map a StageFlow group to an RX device and range. Choose Source, Microphone, Source + microphone, or StageFlow label. Preview shows Before / After; nothing changes before Apply.

LIVE and console: LIVE changes affect only UUID-linked Rx channels. On Windows, StageFlow can open Patch, validation, or save Dante through a current-user pipe that verifies nonce, project, and session. Unsaved work prompts Save / Discard / Cancel before switching. Without a valid lease, behavior is manual. DCE never controls the real Dante network.



2. Project and general settings

Windows and macOS organize work by intent: Project, Overview, Devices, Patch, Import / Export, Validation center, History, and Advanced tools. The bank is available directly from Devices.

- The top bar keeps the active file, Save as, Undo, and Redo available.
- The right inspector follows the last device selected in Devices, Patch, or Easy patch and keeps that context when changing pages.
- Navigation, settings, and inspector start expanded; one persistent arrow hides or reopens each area.
- Matrix, Easy patch, Rx-to-Tx list, and Synoptic share stable identities and one session.
- The Validation Center separates internal DCE checks from manual Dante Controller validation.
- Dante XML remains the official exchange file; a .dceproj additionally stores DCE layout, notes, assets, and history.

Every screenshot in this guide uses the current interface, an anonymized synthetic preset, and the sanitized public bank. No production XML is used.



Screen map

The top bar opens, merges, saves, undoes, and restores the project. The Project column stays visible for counters, alerts, and search.

Screen	Main purpose
Overview	Counters, audio formats, network, clock, alerts, and latest changes.
Devices	Selected device, channels, quick lists, global actions, and device table.
Patch > Matrix	Rx/Tx grid, link navigation, detached window, drag, 1:1, zoom, and rename.
Patch > Easy patch	Selection and 1:1 range tools with immediate apply and optional replacement warning.
Patch > Rx-to-Tx list	Tabular subscription review and editing with filters and detailed state.
Import / Export > Labels	JSON/CSV, DMT XLSX/ODS, A&H,, and Yamaha exchange with an import report.
Import / Export > Reports	TXT/PDF reports, TXT/CSV patchbooks, and a simple text topology.
Import / Export > Synoptic	Locations, order, visibility, zoom, reset, and SVG/PDF exports.
Validation center	Errors, warnings, information, XML paths, navigation, and report export.
History	Changes, XML comparison, user guides, logs, and diagnostics.
Atomic Bomb	Configurable, undoable, offline troubleshooting exercises.



Choose the right workflow

DCE keeps the open XML as the working baseline. Choose the command that matches your goal; the workflows below separate Dante roles, bank templates, and physical devices.

Goal	Start	Recommended workflow
Review or correct a preset	Project > Open Dante XML	Overview > Devices or Patch > Validation center > Save as.
Merge two installations	Open the main XML	Add XML to project > resolve conflicts > review references > Save as.
Reuse a device type	Device in the project	Save to device bank > make labels generic > Add from bank in another project.
Create a copy in this project	Device in the project	Duplicate > choose a unique name > retain only the required properties.
Prepare an offline project	Project > New project	Choose an initial role > add bank roles > patch > validate > save.

Role, template, and physical device


- A Dante role is a position in a preset. Dante Controller can assign it to the original device or to another compatible device.
- A bank template is a sanitized reusable role: it contains no hardware device_id, IP address, or reference to the source project.
- Duplicating a role or renaming an identity conflict creates a generic offline role; DCE never invents a fake hardware identifier.
- DCE validation protects XML structure. Final role assignment and hardware checks take place in Dante Controller.

Recommendation: keep the XML exported by Dante Controller unchanged, work on a copy, and use Save as for every significant scenario.



Adapt the workspace

Navigation, settings, device list, and inspector panes start expanded. Their arrows remain visible when collapsed so every pane can be reopened immediately.

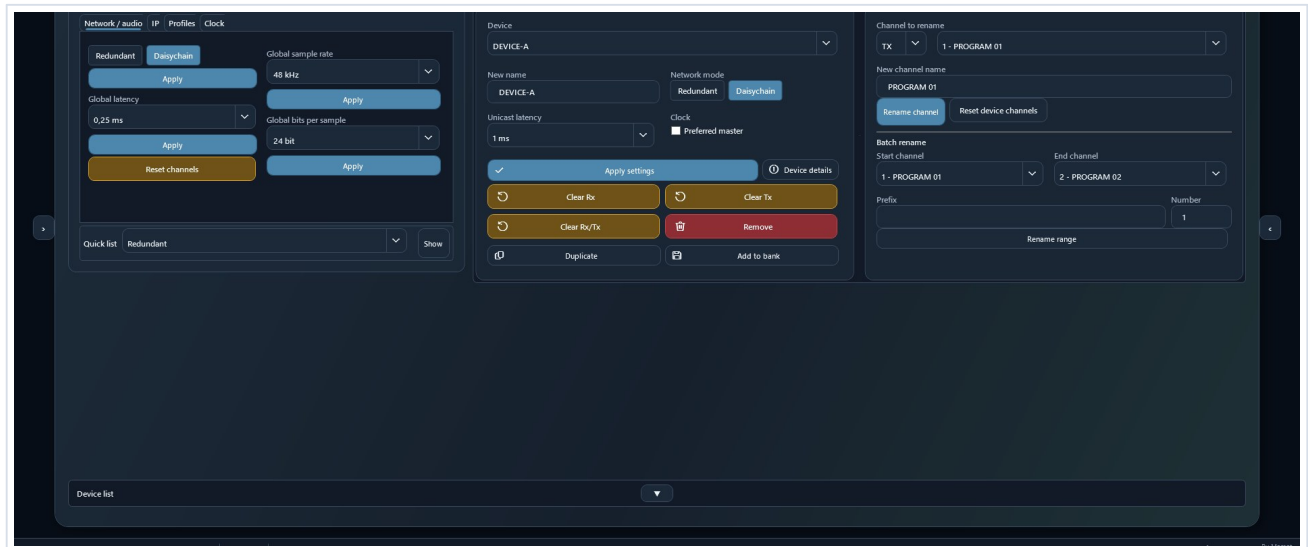


Example with both side panes collapsed: the central workspace grows while the reopen controls remain available.



The essentials on one screen

The Overview page addresses the software's original need: review an entire preset quickly without opening each Dante Controller page in turn.

Spot issues Colored rows and the side banner highlight important discrepancies.	Target safely Filters, multiple selection, and locks define exactly which devices are affected.	Review Before / after lets you inspect every change before saving.
--	--	---

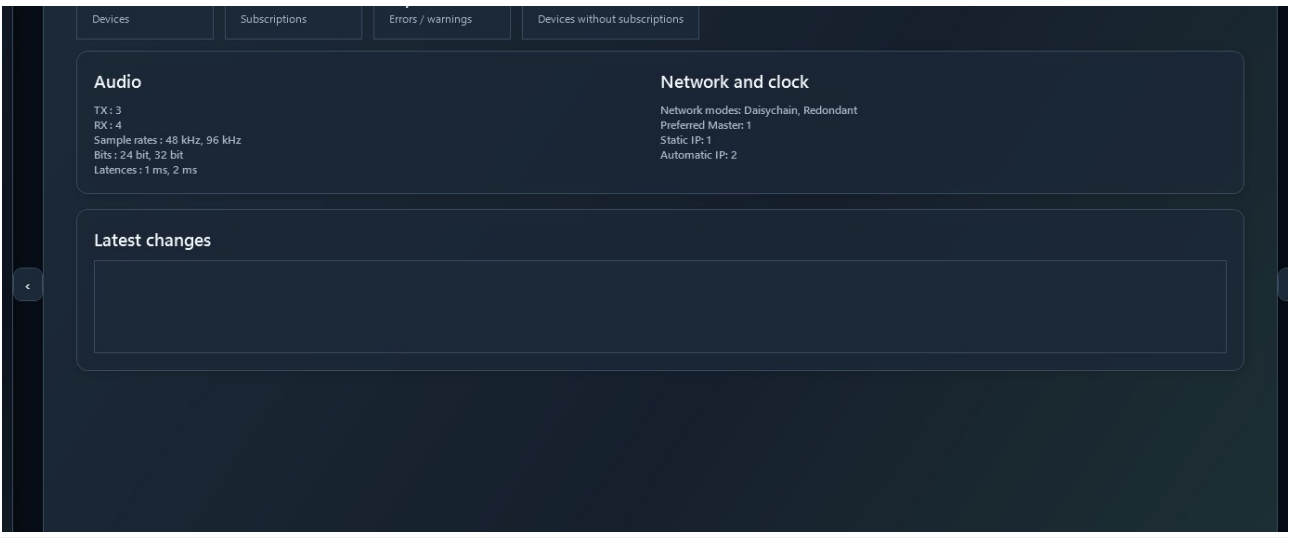

Overview: counters, audio formats, network, clock, and latest changes on one screen.



General settings, alerts, and profiles

The Items to check banner reports mixed redundant/daisychain modes, static IPs, multiple sample rates, and multiple bit depths.

- Click Show devices, choose an alert, then review the filtered devices.
- After correcting an item, verify that the alert disappears and review the Validation center.

Quick profiles


Profile	Applied settings
48 kHz / 24 bit / 1 ms	Automatic IP
48 kHz / 24 bit / 2 ms	Automatic IP
96 kHz / 24 bit / 1 ms	Automatic IP
96 kHz / 24 bit / 2 ms	Automatic IP
48 kHz / 24 bit / 1 ms / Redundant	Redundant mode and automatic IP
48 kHz / 24 bit / 1 ms / Daisychain	Daisychain mode and automatic IP

Verify that every device supports the requested sample rate, bit depth, latency, and network mode.



Quick profiles and global actions

A global action affects only the displayed target: all unlocked devices, the unlocked selection, or the current filter. Always review the target before confirming.

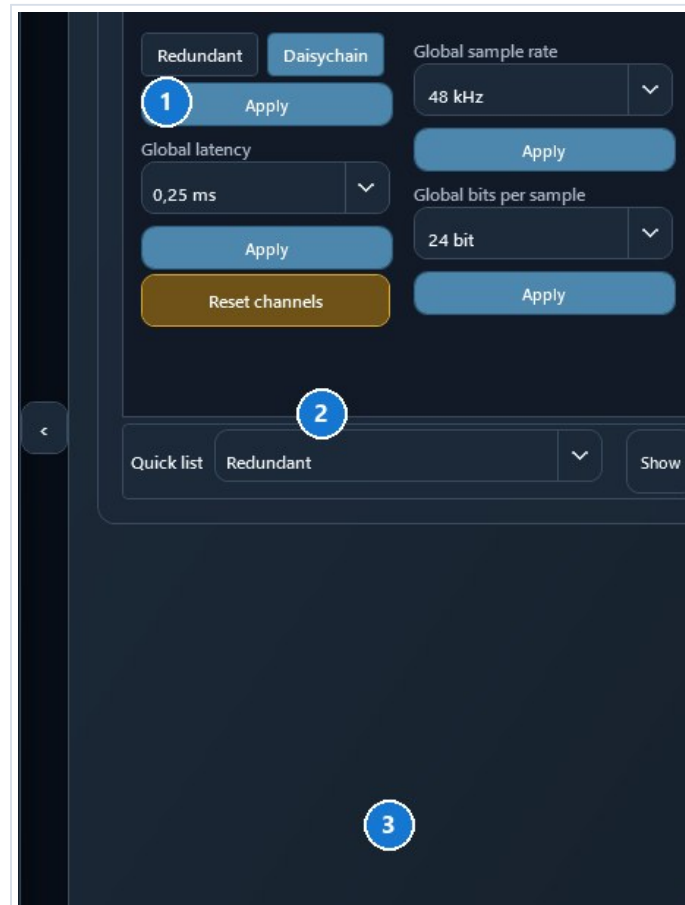

1 Network/audio, IP, Profiles, and Clock tabs; 2 compact Quick list bar; 3 target and locking controls.

Apply a profile

- Open Global actions > Profiles, choose a profile, then select Apply profile.
- Before / after reviews the initial and resulting states for every device that was actually affected.
- Profiles set sample rate, bit depth, latency, and automatic IP; the last two also set Redundant or Daisy-chain.
- A locked device is always excluded. Undo restores the previous state as one operation.

A profile cannot verify physical hardware capabilities. Check the supported rates, latencies, and network modes.



3. Per-device settings and channels

The Devices page combines the template bank, quick lists, global actions, the selected device, its channels, and the complete device table.

Selected device

- Apply the name, network mode, latency, and Preferred Master state together with Apply settings.
- Double-click a row or use Device details to edit IP settings, sample rate, bits per sample, TX/RX names, and subscriptions for its Rx inputs.
- A technical setting is available only when its element already exists in that Dante role. Hovering a disabled command explains why; DCE does not invent a missing capability.
- A complete Device details change is grouped into one model rebuild.
- Clear actions can disconnect Rx inputs, remove subscriptions using Tx channels, or do both.
- Deleting a device also removes subscription points that reference it.

Device table

- Multiple selection defines the Selected unlocked target. The Lock column protects devices from global actions.
- The complete list starts collapsed behind the Device list bar. Its persistent arrow expands it; fallback scrolling remains available on small displays.
- Preferred Master can be toggled directly in the expanded list.
- Add from bank and Manage banks directly open all 79 unique templates with their source. The filter exposes only My bank, DCE Community, and DCE Generic.

Search, filters, and global actions

- Search finds devices, channels, and subscription references after at least two characters.
- The compact Quick list bar below Global actions displays network modes, latencies, sample rates, bits, static IPs, or Preferred Masters without occupying several rows of buttons.
- Tooltips wrap onto multiple lines: keep the pointer still over a command to read the full explanation, including when the command is disabled.
- Modified only shows changed devices; Before / after lists every difference.
- Choose all unlocked, selected unlocked, or visible unlocked devices. The target remains visible before application.




Edit a device without leaving the workflow

Device details combines the essential settings and lets you move directly to another device from the top menu.

Identity
Device name, network mode, and Preferred Master.

Audio
Latency, sample rate, and bits per sample.

Network
Automatic or static primary IP without changing secondary interfaces.

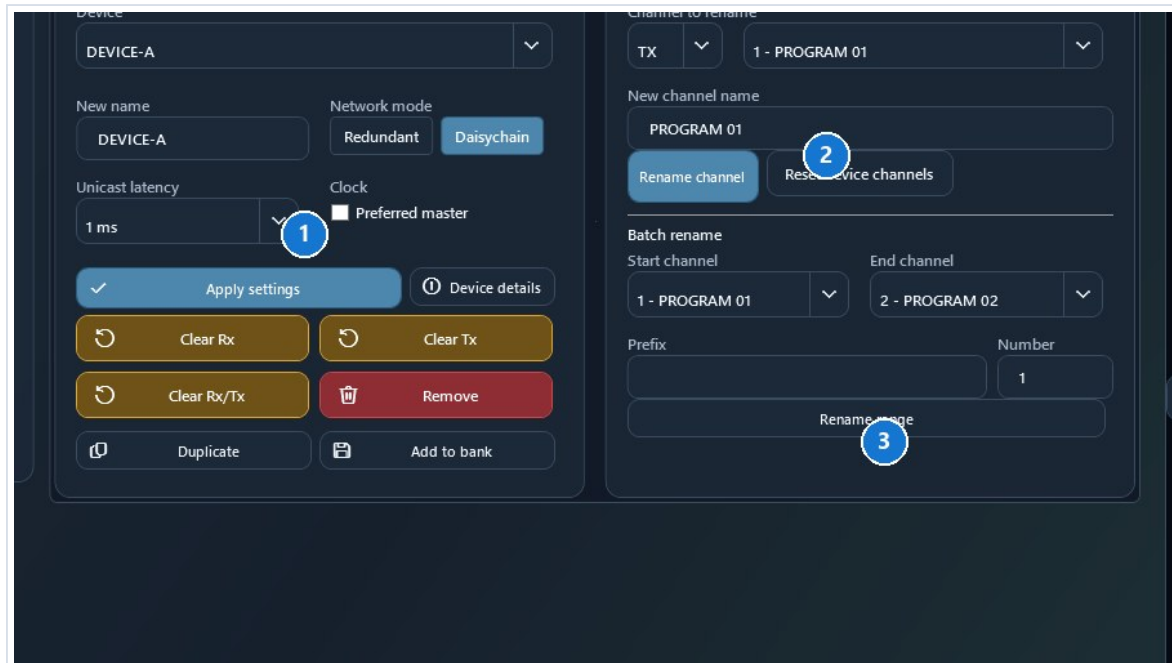

1 device settings; 2 selected Tx/Rx channel; 3 range rename.

- The RX then TX tabs rename individual channels.
- Rx patch reviews or disconnects subscriptions received by the device.
- Apply validates the complete edit as one grouped operation; Cancel leaves the XML unchanged.



IP and audio formats


- Automatic or static IP is editable per device or through a global action.
- Only the primary IPv4 interface, network=0 when available, is targeted. A secondary interface is not changed.
- DNS is not rewritten implicitly. Gateway changes only when the action provides a value.
- Sample rate and bits per sample are editable per device, globally, or through a profile.
- Global actions skip devices without the compatible element and report how many devices were excluded.

Incorrect settings can make a device unreachable or incompatible. Verify actual hardware capabilities.



Rename Rx and Tx channels quickly

Direct rename works in Configuration, Device details, Patch, and Easy patch. For a Tx channel, DCE also updates every recognized subscription that uses the old name.

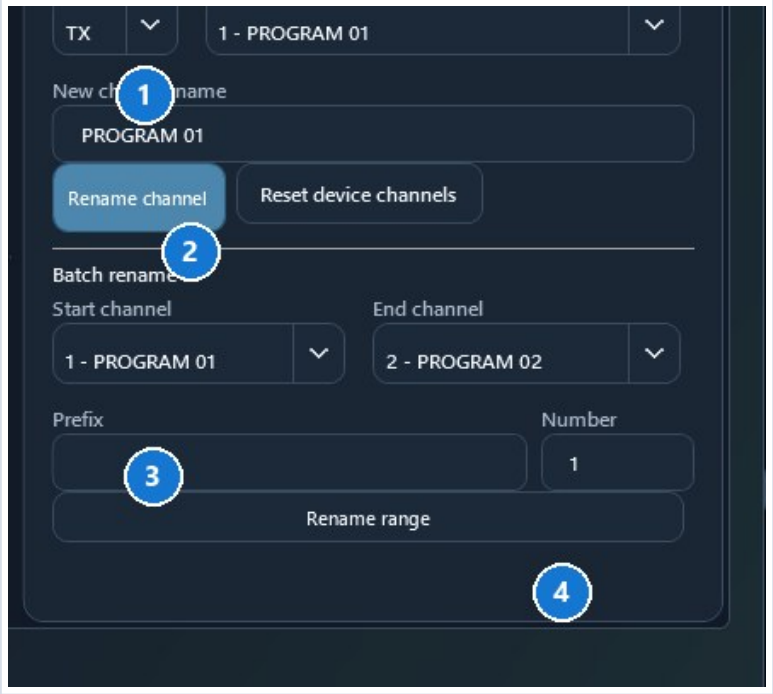

1 choose Rx or Tx and a channel; 2 enter the name; 3 choose the range; 4 set prefix and starting number.

Editing shortcuts

Key	Action
Enter	Validate the name without leaving the current cell.
Tab	Validate and open the next channel.
Shift + Tab	Validate and open the previous channel.
Escape	Cancel the current edit or fill operation.
Ctrl / Shift	Extend a channel selection in Easy patch.
Mouse wheel	Scroll; use the dedicated zoom controls in the matrix and synoptic.



Extend a numbered or stereo series like a spreadsheet

The fill handle appears only when the label ends with a number, or a number followed by L/R. Drag it to the last required channel; a preview displays the resulting series before release.

Starting name	Handle	Result
Mic 4	Visible	Mic 5, Mic 6, Mic 7...
Mic 04	Visible	Mic 05, Mic 06, Mic 07...
FX-01L	Visible	FX-01R, FX-02L, FX-02R...
Wireless 12	Visible	Wireless 13, Wireless 14...
Mic	Hidden	No trailing number found
Mic 4 main	Hidden	The name does not end with a number

- All text before the final number is preserved exactly.
- The number may contain several digits and leading zeroes are retained.
- With an L/R suffix, DCE alternates sides before moving to the next number: 1L, 1R, 2L, 2R.
- Fill works in Rx/Tx lists and in the Easy patch matrix.
- Escape cancels the preview. No label changes until the handle is dropped on a valid target.
- One Undo operation restores the complete series.

Important: the trailing number belongs to the label. DCE never rennumbers technical Dante IDs.



Channels and patching principles


- TX/RX channels can be renamed individually or by range with {00}, {000}, {n}, and {device}.
- Renaming a Tx channel updates every recognized subscription alias in the project.
- In Rx/Tx lists, click the name, then press Enter to validate, Tab to validate and move forward, Shift+Tab to move backward, or Escape to cancel the edit.
- In the Easy patch matrix, click a vertical Tx label to rename it. Enter, Tab, Shift+Tab, and Escape behave exactly as they do in the lists.
- The fill handle appears only when the name ends with a number, or a number followed by L/R. Mic 4, Mic 04, and FX-01L can be extended; Mic, Mic left, and Mic 4 main cannot.
- Fill preserves text and leading zeroes: Mic 04 becomes Mic 05, Mic 06; FX-01L becomes FX-01R, FX-02L, FX-02R. Cancelling the drag changes no channel.
- Dante IDs are not renumbered. The local subscribed_device="." marker is preserved.
- The Easy patch tab shows Rx channels on the left and Tx channels on the right. Menus and arrows switch devices quickly.
- Select equal Tx and Rx counts for one-to-one mapping, or one Tx to feed several Rx channels.
- Several Tx channels to one Rx and unequal multiple selections are blocked.
- Range patching requires a first Tx, first Rx, and exact count; an incomplete range is blocked as a whole.
- A click or drag immediately applies the affected crosspoints.
- Clicks and drags update only the affected cells: the entire matrix is no longer rebuilt after every action.
- Selections, ranges, and PATCH 1:1 are also applied immediately.
- Warn me when the Rx channel is already patched is selected by default. Clear it only to replace a subscription without that warning.
- In the compact matrix, Rx channels are rows and Tx channels are columns. Click for one assignment, drag vertically to feed one Tx into several Rx channels, or diagonally for a 1:1 sequence.
- Each immediate operation remains reversible with Undo.
- In Device details, the top menu switches devices and protects unapplied changes.

Starting name	Handle	Result
Mic 4 [drag]	Visible	Mic 5, Mic 6, Mic 7...
Mic 04 [drag]	Visible	Mic 05, Mic 06, Mic 07...
FX-01L [drag]	Visible	FX-01R, FX-02L, FX-02R...
Mic left	Hidden	No fill action offered



4. Patch: inspect and correct a subscription precisely

Every row represents one Rx channel and its Tx source. Patch is the most precise view for filtering, reviewing local or external sources, replacing a subscription, or removing it.

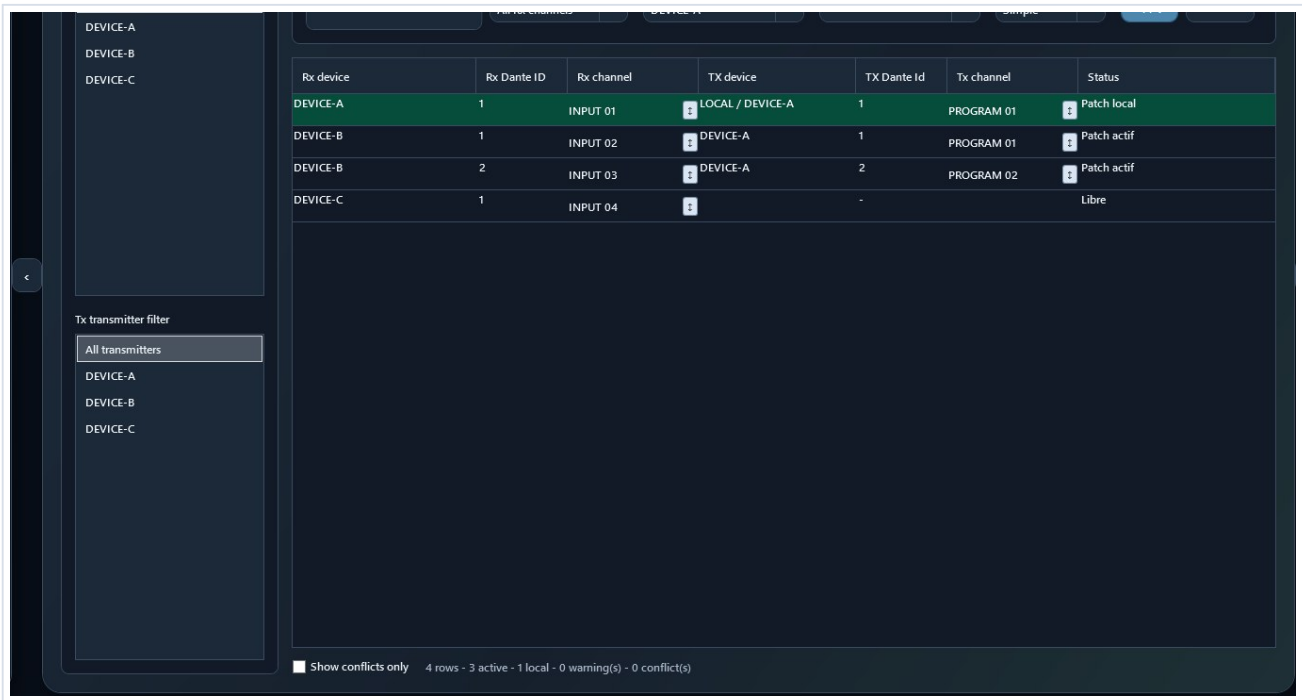

Rx/Tx filters on the left, source selection at the top, and the complete Rx-to-Tx result in the table.


Simple Shows Rx device/ID/channel, Tx device/ID/channel, and state.	Expert Adds raw source, resolved source, type, active, modified, and complete source.	Local The "." source means the Rx device itself and is preserved.
--	--	--

- Rx receiver and Tx transmitter filters reduce the table without changing XML.
- Select an Rx row, choose its Tx device and channel, then select Apply.
- Remove disconnects only the selected Rx row.
- A source device missing from a partial preset may be intentional: understand the warning before replacing it.
- Direct Rx and Tx column rename supports Enter, Tab, Shift+Tab, and series fill.



Easy patch: visual and immediate patching

Easy patch always shows Rx channels for the receiving device on the left and Tx channels for the transmitting device on the right. Menus and arrows move quickly between devices.

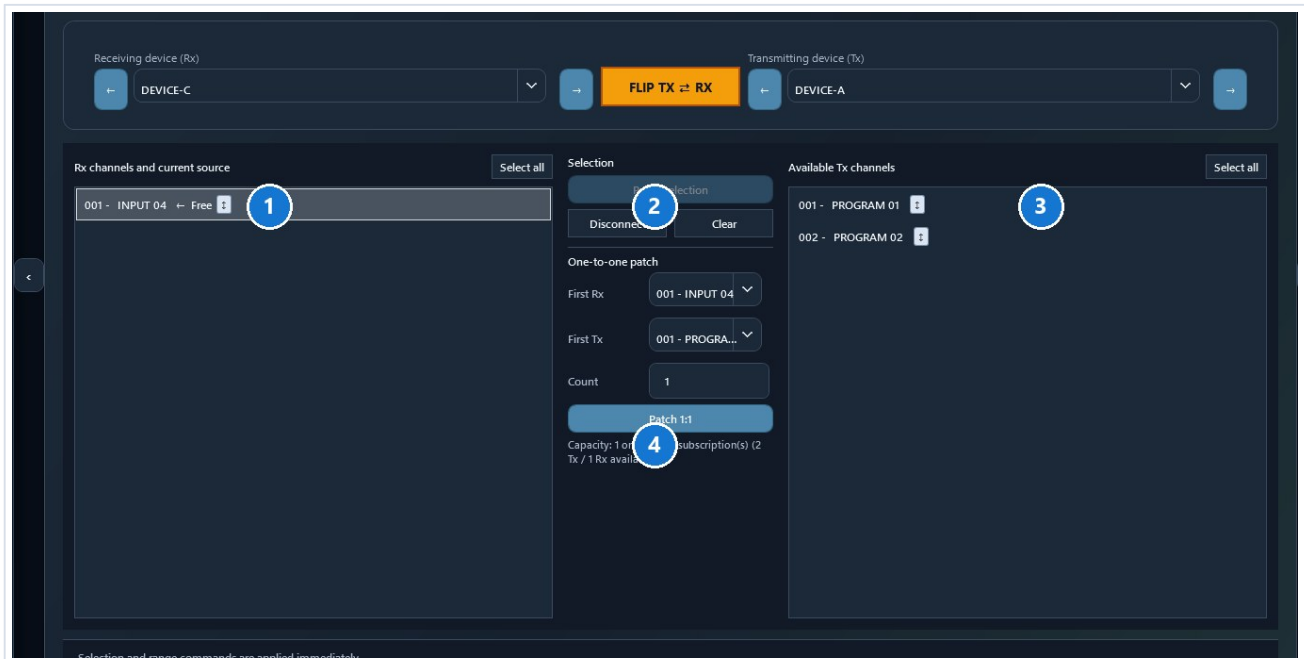


1 Rx device; 2 FLIP exchanges only the displayed roles; 3 Tx device; 4 selection, range, and Patch 1:1.

FLIP does not reverse subscriptions. It only exchanges the two selected devices so you can inspect or create subscriptions in the opposite direction.



Easy patch: click, drag, range, and PATCH 1:1

Gesture	Result
Click one cell	Immediately applies that Tx source to that Rx channel.
Drag vertically	Feeds several consecutive Rx channels from one Tx source.
Drag diagonally	Creates Tx1>Rx1, Tx2>Rx2, and so on.
Rx/Tx selection	Equal counts: one-to-one. One Tx: distribution to several Rx channels.
PATCH 1:1	Click the first intersection, select the count, then apply the series.

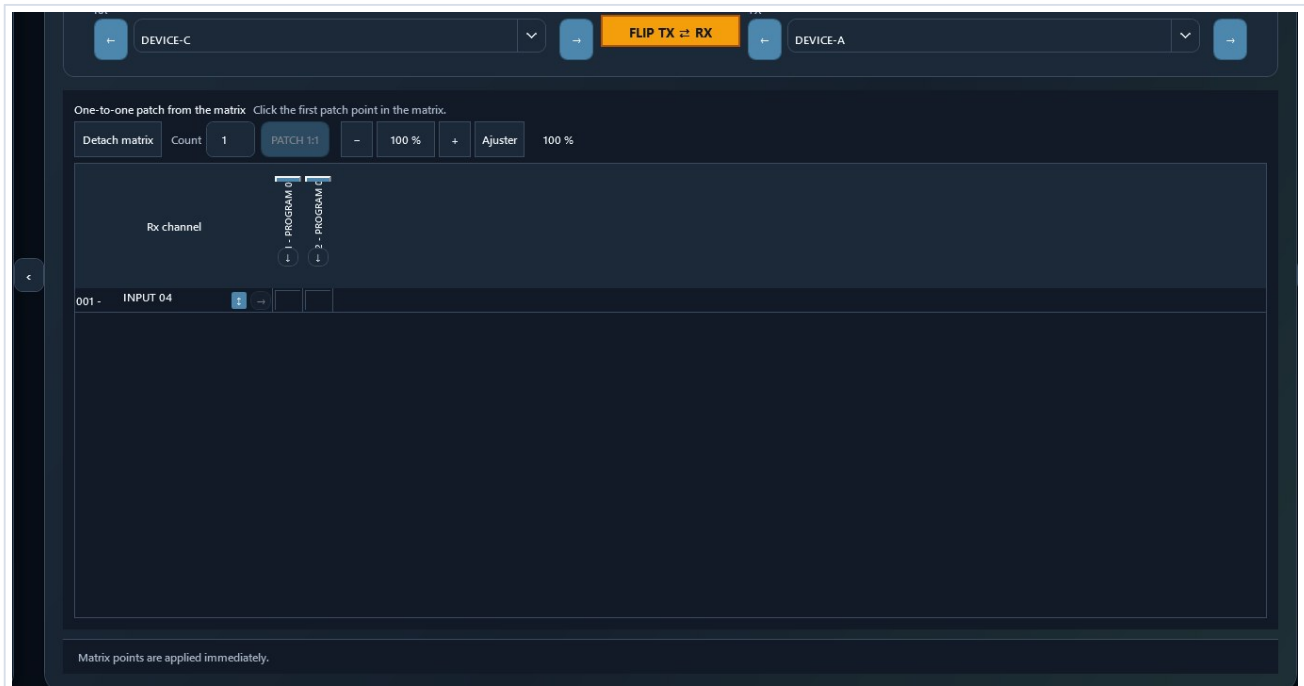


Compact matrix: Rx channels are rows, Tx channels are columns, and every click or drag is applied immediately.

- Every click or drag changes the project immediately and remains available in the undo history.
- Warn me when the Rx channel is already patched is enabled by default. Clear it only when you accept replacement without confirmation.
- A selection containing several Tx and Rx channels must contain equal counts.
- Several Tx channels into one Rx or unequal multiple selections are rejected.
- Rx and Tx labels are directly editable. Tab, Shift+Tab, Escape, and the series handle remain available.
- The button on an Rx row locates its Tx source, selects the transmitting device, and highlights the intersection.
- The button below a Tx header lists every Rx destination. Select one to display and highlight its intersection.
- Detach matrix opens a large window that retains the Rx/Tx selectors, FLIP, PATCH 1:1, and zoom.
- The wheel and -, 100%, +, and Fit controls adjust matrix zoom.
- Undo restores the last immediate operation.



Trace a connection directly in the matrix

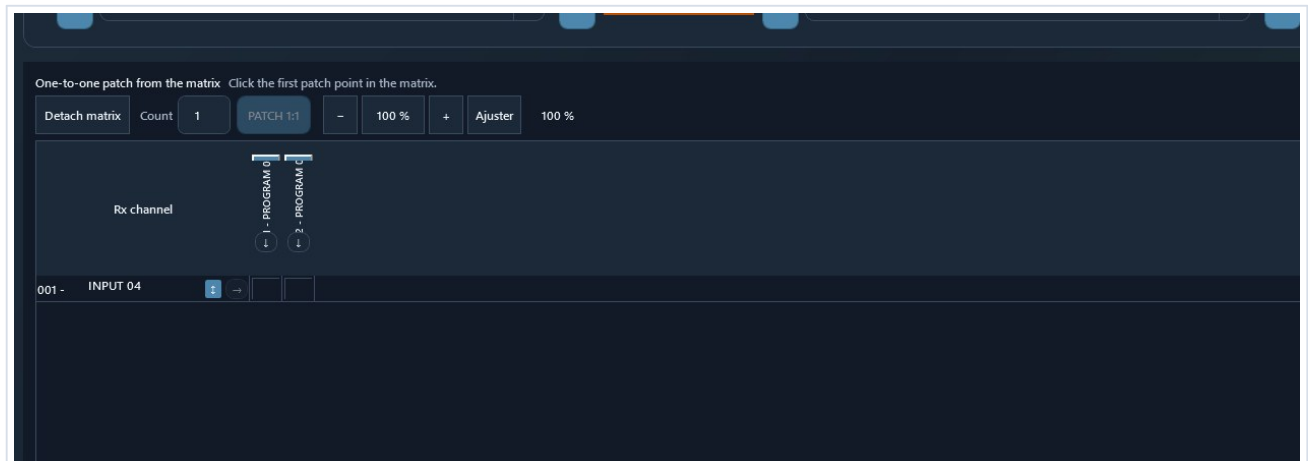

Fill handles stay next to labels. Targeting arrows border the grid: an Rx arrow finds its Tx source, while a Tx arrow lists its Rx destinations.

- On an Rx row, use the arrow immediately before the grid to display the source Tx device and highlight the crosspoint.
- Below a Tx label, use the arrow immediately above the grid to choose an Rx destination.
- The small fill handle remains next to the label when it ends with a number, or a number followed by L/R.



Add XML to project

- DCE compares names and technical identities before changing the open project.
- Import unique only retains the existing role when it represents the same identity and redirects imported subscriptions to it.
- Automatic or manual rename retains a second role but makes it generic: its hardware instance_id/device_id is not copied.
- Imported subscriptions follow the final selected name or the reused existing role.



5. Build a project: add another XML file

This command merges roles described by a second preset. It differs from adding from the bank: the second XML retains its compatible role structure and internal subscriptions, while DCE protects hardware identities that cannot be duplicated.

Step	What DCE does
1. Open the main project	This XML remains the session and save baseline.
2. Add XML to project	DCE loads and validates the second file without modifying its original.
3. Verify format	Preset version and namespace must match.
4. Detect conflicts	DCE reports a used name or the same device_id/process_id pair, even when names differ.
5. Choose the result	Reuse the existing role, or rename to create a second independent generic role.
6. Adapt references	Imported subscriptions follow the reused role or the selected new name.
7. Review	The result separates added, reused, renamed, and skipped roles.

Import unique only: when the same technical identity already exists, DCE keeps the current role and redirects second-XML subscriptions to its name. Rename: DCE imports a generic role without copying instance_id/device_id, network interfaces, multicast flows, or Preferred Master.

- DCE does not generate fake EUI-64 values. A new hardware identity belongs to the physical device to which Dante Controller assigns the role.
- The generic role retains compatible structure, labels, role settings, and subscriptions that can be resolved in the merged project.
- The automatic suffix is customizable and normalized without parentheses.
- Invalid XML, a different preset version, or a different namespace blocks the complete merge.
- A final name that is already used blocks the operation instead of producing an ambiguous duplicate.
- The merge can be undone. Review the Validation center and Before / after before Save as.

This follows the Dante preset model: a saved role can be assigned in Dante Controller to its original device or another compatible device. Audinate documentation:
dev.audinate.com/GA/dante-controller/userguide/webhelp/content/applying_presets.htm



Understand the device bank

A bank contains reusable offline role templates. It is not a live network inventory and does not contain deployable Dante hardware identities.

Action	Source	Result
Duplicate	Device in the open project	Independent new device in the same project.
Save to device bank	Device in the open project	Sanitized, versioned, reusable template.
Add from device bank	Bank template	Independent new instance in the open project.
Add XML to project	Second XML preset	Compatible devices and references added to the open project.
New project	Minimal structure and bank	3.0.0 XML to review before operation.

Removed from a template

- instance_id, device_id, and other hardware identities from the source instance;
- network addresses and interfaces from the source project;
- subscriptions, patches, and flows tied to other devices;
- Preferred Master and project-specific values not explicitly selected.

Retained when appropriate

- manufacturer, model, category, description, tags, and image;
- compatible role structure and Tx/Rx channel counts;
- generic Tx/Rx labels that remain editable before insertion.



Manage device banks

Device bank

Bundled sanitized demonstration bank

Update banks

GitHub banks

Change bank

Open folder

Displayed banks

All banks · 59 unique templates

Bundled duplicate templates use the official bank. Your bank only shows truly personal templates.

Search

Manufacturer

Category

Min. Tx

Min. Rx

Bank	Bank template	Manufacturer	Hardware model	TX	RX	Category
DCE Community Devices 2(Dante 64x64		Allen & Heath	Dante 64x64	64	64	Audio network card
DCE Community Devices 2(Dante 128x128 V3		Allen & Heath	Dante128-V3	128	128	Audio network card
DCE Community Devices 2(SQ Dante 32x32		Allen & Heath	SQ Dante 32x32	32	32	Audio network card
DCE Community Devices 2(SQ Dante 64x64		Allen & Heath	SQ Dante 64x64	64	64	Audio network card
DCE Community Devices 2(Dante AVIO Analog Input 2x0		Audinate	AVIO-DAL2	2	0	Adapter
DCE Community Devices 2(Dante AVIO Analog Output 0x2		Audinate	AVIO-DAO2	0	2	Adapter
DCE Community Devices 2(Dante AVIO USB 2x2		Audinate	AVIO-US8	2	2	Adapter
DCE Community Devices 2(Dante AVIO Bluetooth		Audinate	Dante AVIO Bluetooth	2	1	Adapter
DCE Community Devices 2(Dante Virtual Soundcard 64x64		Audinate	Dante Virtual Soundcard	64	64	Software interface
DCE Community Devices 2(Arcadia Central Station		Clear-Com	Clear-Com Arcadia	64	64	Intercom
DCE Community Devices 2(DS10 Audio Network Bridge		d&b audiotechnik	DS10 Audio Network Bri	4	16	Audio network brid
DCE Generic Roles 2026.1 DCE Generic 32x32		DCE	Generic 32x32	32	32	Générique / Forma
DCE Generic Roles 2026.1 DCE Generic 8x8		DCE	Generic 8x8	8	8	Générique / Forma
DCE Community Devices 2(DMI-DANTE 64@96		DiGiCo	DMI-DANTE 64@96	64	64	Audio network card
DCE Community Devices 2(DI4.1000		Fohhn	DI-AMP DAN	0	4	Amplifier
DCE Community Devices 2(AOIP22		GlenSound	AOIP22	2	2	Audio interface
DCE Community Devices 2(Beatrice D8		GlenSound	Beatrice D8	32	32	Intercom
DCE Community Devices 2(Beatrice D8+		GlenSound	Beatrice D8+	32	32	Intercom
DCE Community Devices 2(Beatrice R16		GlenSound	Beatrice R16	32	32	Intercom
DCE Community Devices 2(Bella 4		GlenSound	Bella4	0	4	Audio interface
DCE Community Devices 2(Divine		GlenSound	Divine	4	4	Monitor
DCE Community Devices 2(Paradiso		GlenSound	Paradiso	32	32	Commentary
DCE Community Devices 2(Virgil 1		GlenSound	Virgil 1	0	2	Audio interface
DCE Community Devices 2(D 80:4L		Lab Gruppen	D 80:4L	8	8	Amplifier
DCE Community Devices 2(PLM 20K44		Lab Gruppen	PLM 20K44	0	8	Amplifier
DCE Community Devices 2(LM 44		Lab Gruppen	LM 44	8	4	Processor

Add to project

Edit

Duplicate template

Move to Community bank

Delete

Import template

Export template

Export bank

Import bank

Close

Dante 64x64

Allen & Heath · Dante 64x64 · Audio network card

64 TX / 64 RX · preset 3.0.0

Sanitized offline role for Dante 64x64, 64 Tx / 64 Rx. Hardware identifiers, network settings, flows and subscriptions are never reused.

Tags: dLive, Avantis, Dante, 64x64

Label preview

TX

001 TX 01

002 TX 02

003 TX 03

004 TX 04

Search and filters on the left, template and label preview on the right, add and exchange actions at the bottom.



Create, share, and reuse a device bank

Need	Procedure
Create a template	Select the device > Save to device bank > replace project-specific labels with generic labels > enter metadata > Save.
Add an image	Choose PNG, JPEG, or WebP. The image is copied into the template folder, so the source file can later be moved.
Browse banks	Devices > Manage banks opens 79 unique templates. The Displayed banks filter isolates My bank, DCE Community, or DCE Generic, while the Bank column shows its source.
Share the bank	Export bank creates a verified *.dce-bank.zip archive.
Contribute a template	Prepare contribution creates a sanitized *.dce-contribution.zip with a manifest, verification level, and SHA-256, without hardware identity, IP address, subscriptions, or project XML.
Install a bank	Import bank and choose a new or empty folder. DCE never silently replaces an existing bank.
Add to project	Select the template > Add to project > choose the first name, quantity (1 by default), and labels > check the preview > confirm. For a batch, DCE creates Name, Name-2, Name-3, and so on, validates everything before insertion, and keeps the bank open.

- Editing an inserted device never changes its bank template.
- Editing the template never changes devices already inserted into projects.
- Version, checksum, namespace, channel counts, and preset version are checked before insertion.
- The Verification column and Quality and provenance panel distinguish generic roles, community review, structural validation, and hardware testing. In DCE Community, 57 templates were tested on real hardware by the maintainer and 20 additional profiles were structurally validated from official specifications; the 2 DCE Generic roles remain explicitly generic.
- The 79 bundled GitHub templates are sanitized and installed with the application; a personal bank is never replaced.

After insertion or project creation, reopen the XML, review the Validation center, and import a copy into Dante Controller. A generic role without hardware identity must be reviewed before operation.



Machine bank and generic roles

These functions edit offline preset roles, not real devices. DCE removes hardware identifiers from the source instance and does not claim to create a Dante device identity.

Duplicate a device

- Select a device, choose Duplicate, and provide a unique role name.
- TX/RX labels may be retained. Network data, settings, flows, Preferred Master, and subscriptions are disabled by default.
- The source is unchanged. The copy is added as one undoable operation and receives a DCE session identity that is never serialized.

Save and share a template

- Choose Save to machine bank and enter manufacturer, model, category, description, tags, and generic labels.
- An optional PNG, JPEG, or WebP image is copied into the model folder; no fragile external path is kept.
- The default bank is Documents/Dante Config Editor/Machine Bank. You may choose, open, copy, or place it in a synchronized folder.
- Official banks updated by DCE are stored separately under Documents/Dante Config Editor/Included Machine Banks. They take priority over the fallback copies bundled with the application.
- The window presents 79 unique templates: 77 in DCE Community and 2 roles in DCE Generic. The selector isolates My bank, DCE Community, or DCE Generic, while the Bank column identifies the source.
- Export bank creates a verified *.dce-bank.zip archive. Import bank requires a new or empty folder and never replaces existing data.
- Update banks checks the GitHub catalog, verifies SHA-256, prepares the bank in a temporary folder, and backs up the previous official copy before replacement. GitHub banks opens the public page. The 79 bundled templates contain no hardware identity, network data, flow, or subscription.
- Administration supports search, filters, edit, duplicate, confirmed delete, and model ZIP import/export.

Add a template to the project

- Choose Add from bank, then configure the new name, labels, and only the options you explicitly need.
- The inserted instance is independent from the template. Editing either one never changes the other.
- DCE checks model version, checksum, channel counts, namespace, and preset version before a transactional insertion.

New offline project

- Inside an empty StageFlow project, New project initializes Dante with a custom or bank device. With no open project, it creates a new .stageflow folder.
- DCE writes only its Dante domain and never silently overwrites an existing project.
- Review the Validation center, export XML, then test the import in Dante Controller.



Create a new offline project

Experimental new project

The 3.0.0 structure follows custom roles from the official Dante Preset Creator, but still requires a real Dante Controller import before production use.

Project

XML file to create

Browse

Project name

Description

First device

Source

Custom device

▼

Manage

59 reusable template(s) found across 7 bank(s), including installed templates.

Device name

TX

2

RX

2

Sample rate

48000

▼

Encoding

24

▼

Latency

1000

▼

Create projectCancel


Choose the destination, project name, and a first custom role or bank template.

Project creation remains an offline workflow. Reopen the XML, review the Validation center, then verify its import in Dante Controller.



6. Label Import / Export

The Labels tab centralizes generic, DMT, Allen & Heath, and Yamaha exchange. Native files are created from bundled templates; DCE does not ask for an external template file.

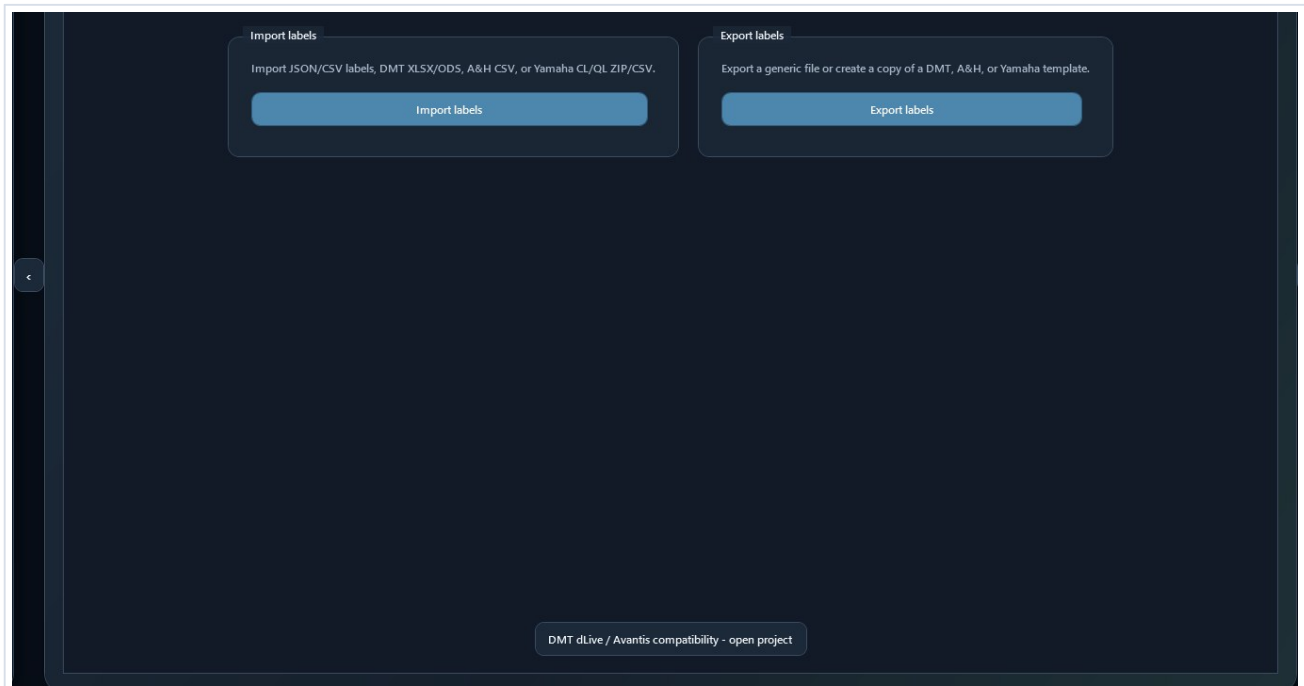

Import is on the left and export on the right. The DMT button opens the associated dLive MIDI Tools project.

- Import: choose the file, review the detection report, associate source lists with devices, and apply only valid changes.
- Export: choose Rx/Tx, devices, range, format, and any required name adaptation, then provide the new output name.
- DMT uses XLSX/ODS or JSON/CSV; dLive and Avantis use their native CSV; CL/QL use the complete native ZIP.
- A second identical import does not enable Apply because labels already match.



Exchange labels without an external template

dLive, Avantis, Yamaha CL/QL, and DMT templates are bundled with Dante Config Editor. Native export only asks for the new file name and folder.

Choose the correct format

Format	Destination	Content
StageFlow patch	Dante RX channels	Group and naming mode; Before / After preview before applying.
Generic JSON / CSV	DCE or third-party tool	Full Unicode. Do not import into dLive Director.
DMT XLSX/ODS dLive / Avantis	dLive MIDI Tools	Direct DMT workbook; rows outside the selection are disabled.
Native A&H; CSV dLive	dLive Director	dLive [Version]/[Channels] structure and Input names.
Native A&H; CSV Avantis	Avantis Director	Avantis [Version]/[Channels] structure and Input names.
Native Yamaha ZIP CL / QL	CL/QL Editor	Complete nine-CSV package; only InName.csv receives labels.

Workflow

- With a .stageflow project open, choose Map the StageFlow patch to RX channels. Select the group, Source, Microphone, Source + microphone, or StageFlow label mode, then the device, first patch channel, first Dante RX, and channel count.
- DCE resolves common pairs, group overrides, and hidden pairs. Empty rows remain visible in Preview but are ignored; Apply changes only populated RX channels.
- Under Import / Export > Labels, choose Export labels.
- Choose TX or RX, devices, first channel, and count. A device with RX but no TX automatically switches to RX.
- Choose the native format matching the real model. Devices without channels in the selected direction cannot be checked.
- Review the preview. Enable ASCII/eight-character adaptation only when required, then choose Export.
- DCE opens Save as directly. Output is validated in a temporary file before the destination is replaced, so a failed export does not destroy an existing file.

During import, DCE reports the detected format, source version, lists, devices, channels, ignored rows, empty labels, duplicates, and warnings. Apply requires at least one error-free change. After loading the same labels again, the button intentionally remains disabled and DCE states that the labels already match.


DMT 2.14.0-RC1 JSON/CSV exports are checked with fixtures generated by the DMT exporters at commit 3c34052. XLSX/ODS support continues to target the Channels sheet from observed DMT workbooks.

Before use, always open the generated file in DMT, dLive Director, Avantis Director, or Yamaha CL/QL Editor and verify labels and the selected model.

Bundled DMT workbooks come from Tobias Grupe's MIT-licensed dLive MIDI Tools project. DMT_LICENSE.txt is included with the application.



Build and export a synoptic

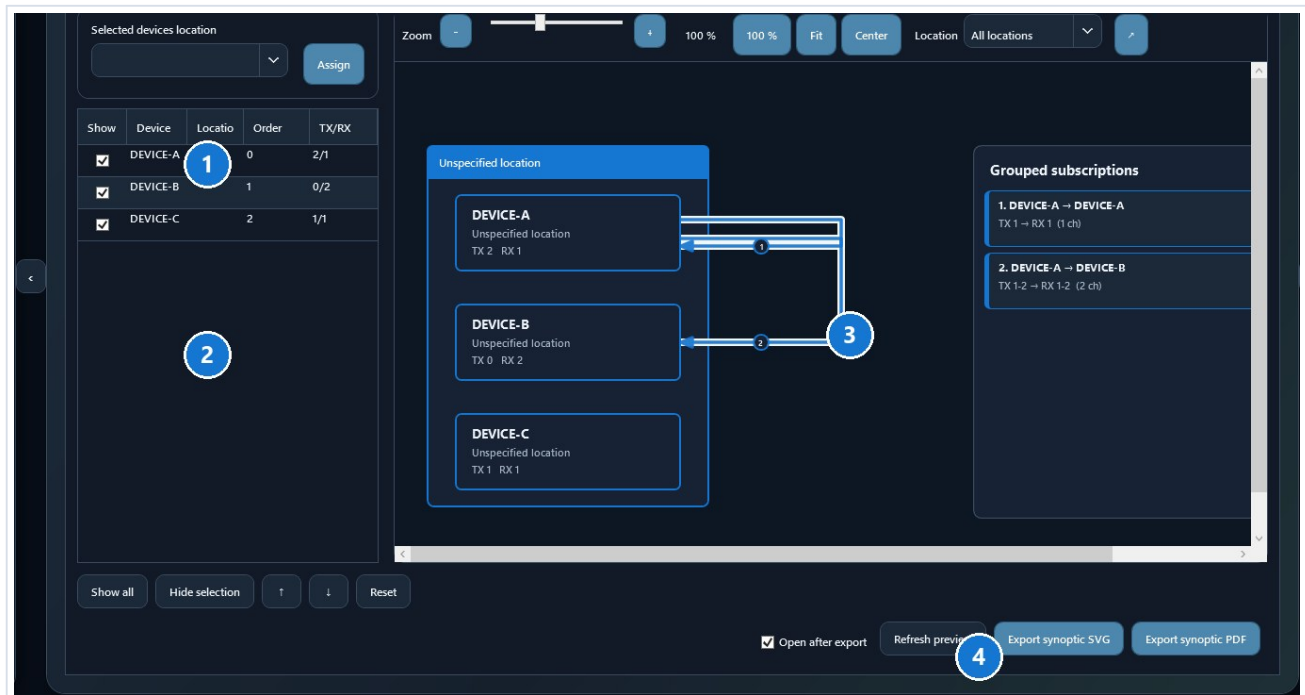

1 location; 2 order and visibility; 3 zoomable preview; 4 reset and SVG/PDF exports.

- Select one or more devices, enter or choose a location, then select Assign.
- Within one location, the smallest order number places the device higher.
- Clear Show to hide a device without removing it from the project.
- In the visual editor, drag a device or drag a location's coloured header; all of its devices and cables follow. The same interaction is available in the separate preview window.
- The Devices and locations button frees diagram space and reopens the location, order, and visibility list when needed. Reset rebuilds a clean automatic layout and distributes large locations across several columns.
- Consecutive subscriptions are grouped on one range-labelled cable. A link in both directions uses one line with an arrow at each end.
- Zoom, Fit, and the separate preview window help with large projects.
- SVG and PDF are presentation exports. Locations and positions are stored next to the project and never modify Dante XML.



Validation, comparison, and Import / Export

- The Validation center combines statistics, errors, warnings, free/local subscriptions, and compatibility checks.
- XML comparison displays differences in a table.
- TXT/PDF exports include the application version and the By Mamat et ses agents signature.
- Import / Export opens Synoptic first, followed by Labels and Reports and patchbook. The synoptic remembers locations, shows or hides devices, moves one device or a complete location together with its cables, provides a separate proportion-preserving preview, and exports SVG or PDF; its local layout sidecar never changes Dante XML.



7. Review, save, and recover

The Validation center separates blocking errors, warnings, and information. Read the complete row: it identifies the category, affected item, cause, and XML path. Save as reruns these checks in a dedicated assistant: errors block writing, while warnings must be reviewed and acknowledged before continuing.

0 blocking error(s) 8 warning(s) 5 information item(s)				
DCE internal validation: offline XML structure and consistency. Hardware and live-network behavior must still be reviewed in Dante Controller.				
Level	Category	Affected item	Message	XML path
Warning	Audio format	Synthetic demonstration preset	Multiple sample rates are present in the preset: 48000, 96000.	
Warning	Audio format	Synthetic demonstration preset	Multiple bit depths are present in the preset: 24, 32.	
Warning	Device	DEVICE-B	DEVICE-B has no TX channel.	/preset/device[friendly_name='DEVICE-B']
Warning	Network	Synthetic demonstration preset	WARNING: the file mixes 1 redundant device(s) and 2 daisy-chain device(s). Check that this i	
Warning	Network	Synthetic demonstration preset	Static IP detected on 1 device(s): DEVICE-B (192.168.50.20).	
Warning	Network	Synthetic demonstration preset	WARNING: multiple sample rates are present in the preset: 48 kHz (48000), 96 kHz (96000)	
Warning	Network	Synthetic demonstration preset	WARNING: multiple bit depths are present in the preset: 24 bit, 32 bit.	
Warning	Network	Synthetic demonstration preset	Multiple latencies are present in the preset: 1000, 2000.	
Information	External review	Synthetic demonstration preset	DCE automatic validation is complete. Hardware behavior, firmware and the live network are /preset	
Information	Subscription	DEVICE-C / RX1 - INPUT 04	DEVICE-C / INPUT 04 is unassigned.	/preset/device[friendly_name='DEVICE-C']/rxch
Information	Subscription	DEVICE-A / RX1 - INPUT 01	DEVICE-A / INPUT 01 uses the local source '.	/preset/device[friendly_name='DEVICE-A']/rxch
Information	Save safety	Synthetic demonstration preset	XML compatibility: no prohibited change detected.	/preset
Information	XML profile	Synthetic demonstration preset	The file matches DCE's complete received XML profile.	/preset
Warning - Audio format Multiple sample rates are present in the preset: 48000, 96000. No safe automatic correction is proposed.				
				Open item Export report

Anonymized example: mixed audio formats, mixed network mode, static IP, local subscription, and free Rx.

Validation center Errors, warnings, audio formats, static IPs, local subscriptions, and XML paths.	History Changes, XML comparison, logs, diagnostics, and user guides.	Atomic Bomb Configurable categories and a key, cover, ARM, LOCK, FIRE panel.
---	---	---

- An error blocks saving; a warning requires review but may describe an intentional condition.
- Items to check > Show devices applies a filter to find affected devices quickly.
- Modified only followed by Before / after reviews the exact scope of the changes.
- History combines changes, XML comparison, logs, diagnostics, and user guides.
- Tools > Create support package produces a ZIP with version, platform, validation counts, and sanitized logs. It excludes project XML and license codes and displays its SHA-256.



Save and final validation

Use Save as. The temporary XML is reloaded, protected changes are checked, and DCE then replaces the destination. A failure before that replacement leaves the previous destination intact.

Check	Recommended action
Items to check	Open affected devices and explain or correct every unexpected difference.
Modified only	Verify that only the intended devices appear.
Before / after	Review every changed setting, channel, and subscription.
Dante Controller	Import the file into a working copy before any field operation.




Automatic recovery

After a change, the application waits briefly and writes recovery data in the background without blocking the interface or replacing the source XML.

- When reopening the same XML, choose whether to restore or discard the previous session.
- After Save as, the new file becomes the reference for later edits and recovery data.
- The copy is deleted after saving or reverting; copies older than 30 days are cleaned automatically.



8. Atomic Bomb: prepare an exercise

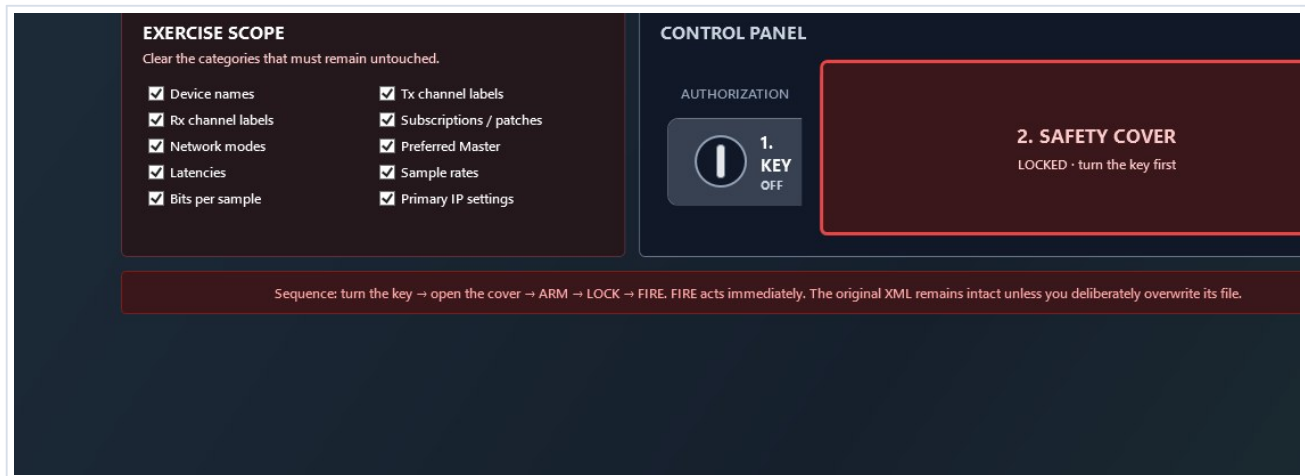

Clear categories that must be preserved. Turn the key to unlock the cover, click the cover to open it, then press ARM, LOCK, and FIRE. FIRE immediately changes the in-memory copy.

- Categories cover names, labels, subscriptions, network modes, Preferred Master, latencies, sample rates, bit depth, and primary IP.
- Technical identifiers, namespaces, DNS, gateways, and secondary interfaces remain protected.
- The complete operation is one Undo step.
- The source XML is never overwritten. Use Save as to create the exercise file.

Atomic Bomb does not communicate with any device. The exercise file must still be reviewed in Dante Controller before distribution to trainees.



Atomic Bomb: create an exercise

- Open Atomic Bomb. Clear the categories you want to spare; all are selected by default. Turn the key to unlock the cover, click the cover to open it, then press ARM, LOCK, and FIRE in order. FIRE applies the exercise immediately.
- The in-memory copy receives unique mythological, audio-themed, or playful names plus a mixture of subscriptions, network modes, Preferred Master states, latencies, sample rates, encodings, and primary IP settings.
- Technical identifiers, namespaces, DNS, gateways, and secondary interfaces remain protected.
- The summary displays the scenario seed. The entire operation is one undo step and the source file is never overwritten.
- Use Save as to provide the trainee preset, then verify its import in the appropriate official Dante tool.

This mode is only for offline training. It does not alter any device or communicate with the Dante network.



Regression tests

The 2026.10 suite runs the Core/Windows tests and the headless Mac tests. Coverage includes XML guards, rejection of missing technical elements, save and recovery, IPv4 interfaces, subscriptions, large presets, merge reuse and generic-role handling, duplication, the device bank, project creation, .dceproj packages, XML profiles, commands, DMT formats, StageFlow-to-RX association, import reports, synoptic export, Atomic Bomb, Easy patch, verified updates, signed licenses, and translation consistency.

Known limitations

- No real-time Dante control and no communication with devices.
- No Audinate SDK/API and no proprietary protocol bypass.
- Compatibility depends on the XML structure; only an official import confirms the final file.
- Undo keeps at most 30 states to limit memory use.
- The matrix displays only the two selected devices to preserve performance on large presets.
- Mac DMGs are ad hoc signed but not notarized; first launch may require right-clicking the application and choosing Open.
- Windows and macOS expose the same main workflows, although some controls retain a slightly different native rendering.
- Duplicate Tx names are ambiguous in Dante subscriptions and must be renamed before using Easy patch.
- Native workbooks match observed DMT 2.13.0 templates and the supplied dLive, Avantis, CL5, and QL5 examples; DMT 2.14.0-RC1 JSON/CSV is tested separately.
- Generic roles duplicated or added from the bank carry no hardware instance_id/device_id. Only an actual Dante Controller import can confirm their use with a given version.
- New project writes a minimal 3.0.0 structure. Always review the final file in Dante Controller before operation.

Help and information

Quick start, Full guide, and SiLeMI/O suite guide automatically open the local French or English PDF for the active language. Public project: github.com/Mamat79/Dante-Config-Editor - Brand: SiLeMI/O - By Mamat.

License and trial

Dante Config Editor includes a 30-day trial. Every feature remains available afterwards; only a startup reminder appears.

- Help > DCE license shows the trial status and accepts a license code.
- A permanent EUR 29 license including French VAT, or a complimentary license from the author, removes the reminder. The code is verified locally and offline.
- Buy opens Stripe Managed Payments in the browser; DCE receives no banking data, and a sales-service outage cannot deactivate a code already received.
- Continue with DCE hides the reminder for the current session; it returns at the next launch until a valid code is activated.
- An activated license remains valid when DCE is updated on the same computer.



DCE license

Dante Config Editor license

After the 30-day trial, DCE remains fully usable. A license simply removes the startup reminder.

Free trial: 30 day(s) remaining.

License code

Paste the code received after purchase or a complimentary code from the author.

Buy a license

Activate code

Continue with DCE

After the trial, every feature remains accessible. Buy opens secure Stripe checkout; Activate code permanently removes the reminder on this computer.