CSE_411 Real-Time and Embedded Systems Design

POWER WINDOW CONTROL SYSTEM USING TIVA C RUNNING FREE RTOS

Mario Remon Guirguis

GitHub: https://github.com/MarioRemon/Real-Time-Embedded-System-CarWindow-Project.git

Short Video:

https://drive.google.com/file/d/1n2miBNicCTzd_dc_X1njDECevYE3PqOu/view?usp=drivesdk

Project Description

The objective of this project is to design and implement a power window system for the front passenger door of a car. The system should allow both the driver and passenger to control the window, with basic features including manual open/close, one-touch auto open/close, window lock, and jam protection. The system should also include two limit switches to prevent the window motor from exceeding the top and bottom limits of the window. The implementation of FreeRTOS is required to ensure real-time performance and reliable operation.

In our system, we implemented the four basic features:

1. Manual open/close function

To implement the manual function, we used 4 push buttons. For both the driver and passenger, there is a push button to move the window up and another one to move it down. If the button is pressed, the window should be moving up or down depending on which button is pressed, stop only either if the limit switch is pressed (the window hit the limit), or when the button is not pressed, the window should stop.

2. One touch auto open/close function

To implement the auto function, we used 4 push buttons and 2 limit switches similar to the manual function both the driver and passenger have one button to move the window up and the other button to move it down. Once the key is pressed, the window moves and stop only if the limit switch is pressed (the window hit the limit).

3. Window lock function

The lock function is implemented with an ON/OFF switch. If the lock is set to OFF (locked/ pin reads 1), only the driver can move the window and the passenger can't. If it is set to ON (not locked/ pin reads 0), both the driver and the passenger can move the window.

4. Jam protection function

In jam function, we implemented it using a push button. If this button is pressed at any time while the program is running, it should go immediately to the jam function as it has higher priority than all tasks. in the jam protection function, the direction of the motor is reversed for 500ms then it stops.

Ports Used

Input Buttons

Port D – pin 0: passenger window up automatic

pin 1: passenger window down automatic

pin 2: passenger window up automatic at Driver Side

pin 3: passenger window down automatic at Driver Side

pin 6: Jam Button

pin 7: ON/OFF Switch

Port A – pin 2: passenger window up manual

pin 3: passenger window down manual

pin 4: passenger window up manual at Driver Side

pin 5: passenger window down manual at Driver Side


Motor & Limit switches

Port B – pin 0: motor direction up

pin 1: motor direction down


pin 3: limit switch top

pin 4: limit switch bottom

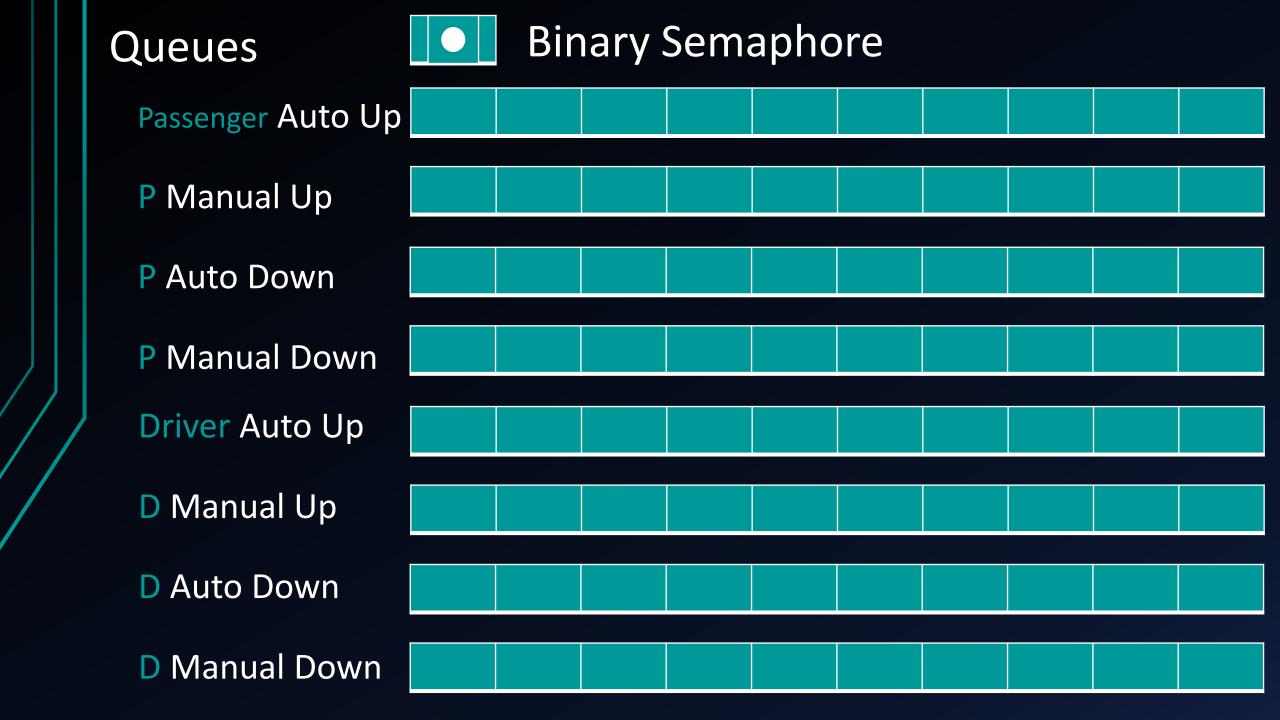


Tasks


- Car Handler priority 1
- Passenger Auto Up priority 2
- P Manual Up priority 2
- P Auto Down priority 2
- P Manual Down priority 2
- Jam Protection priority 3
- Driver Auto Up priority 4
- Manual Up priority 4
- D Auto Down priority 4
- Manual Down priority 4

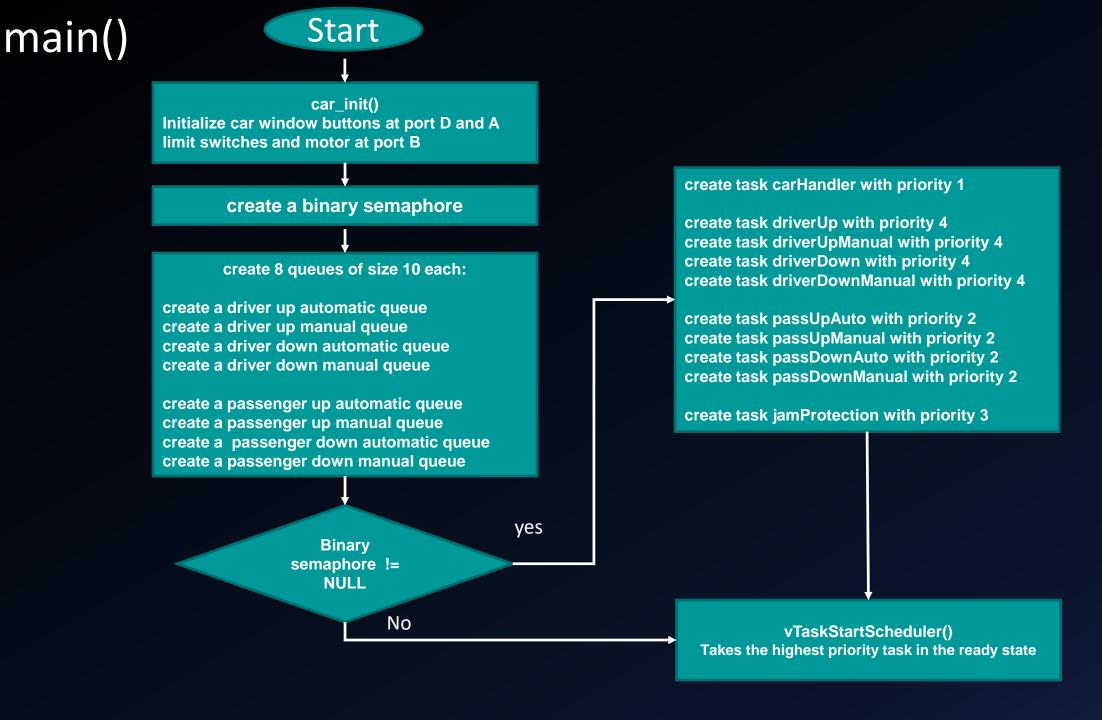


Driver Up Auto

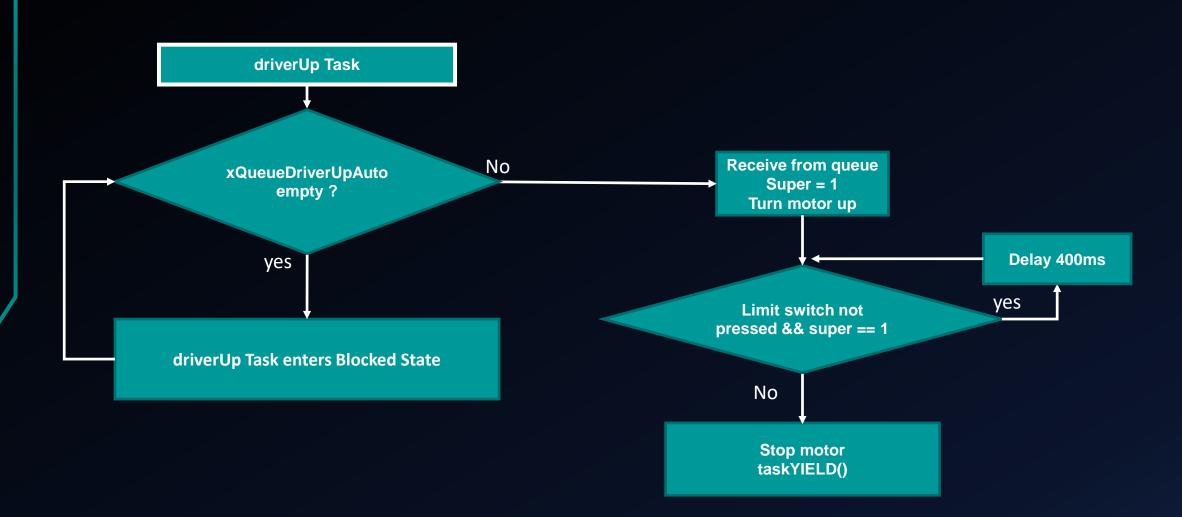


Driver Down Auto

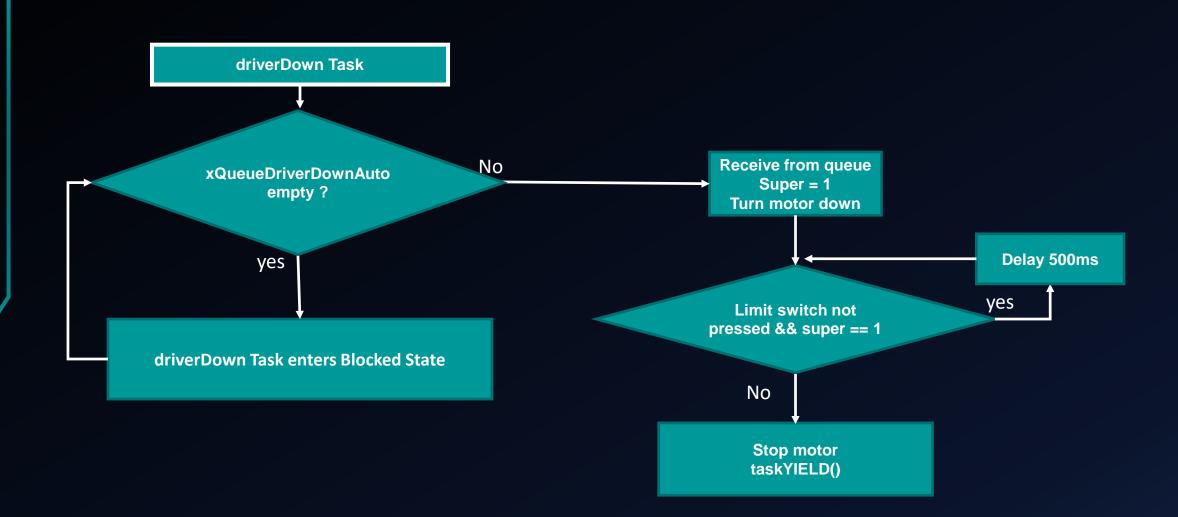


Passenger Up Auto

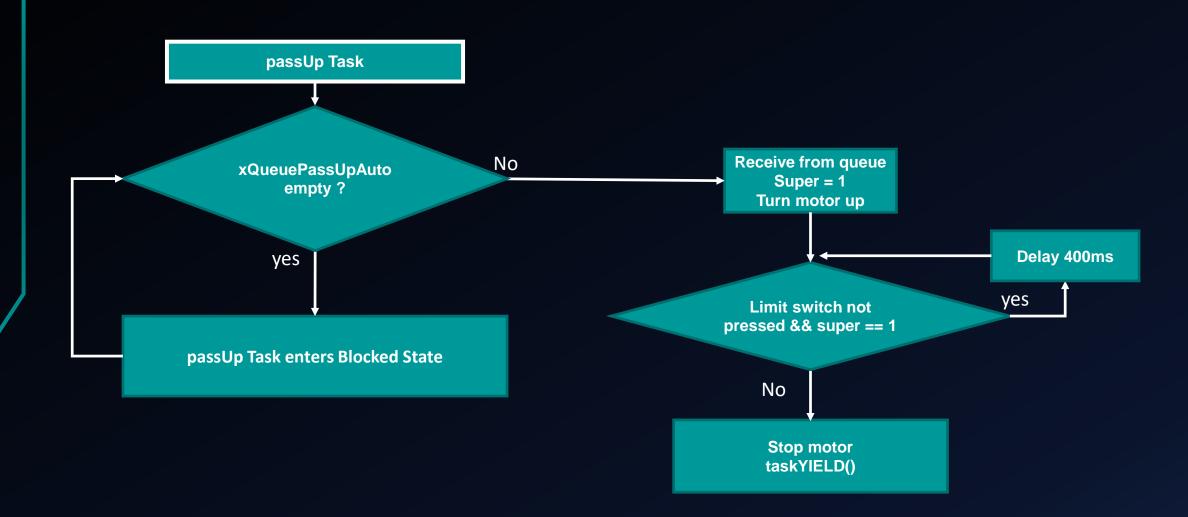


Passenger Down Auto

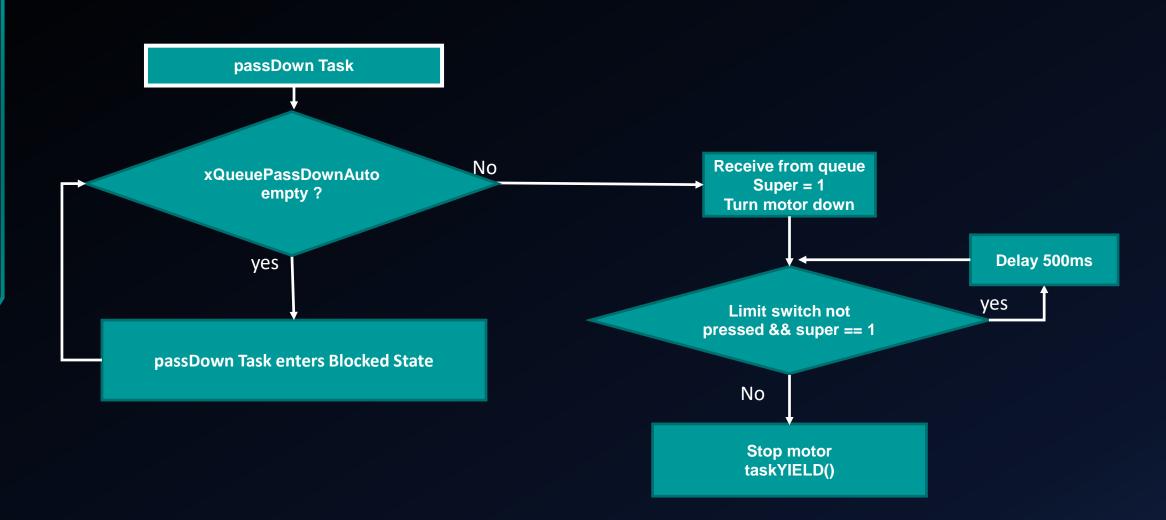


Driver Up Manual

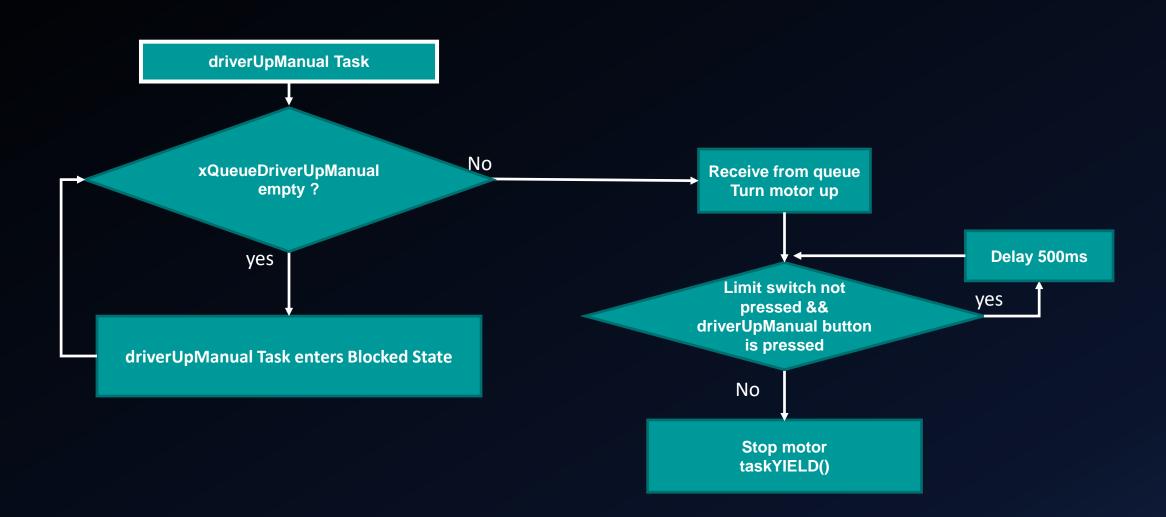


Driver Down Manual

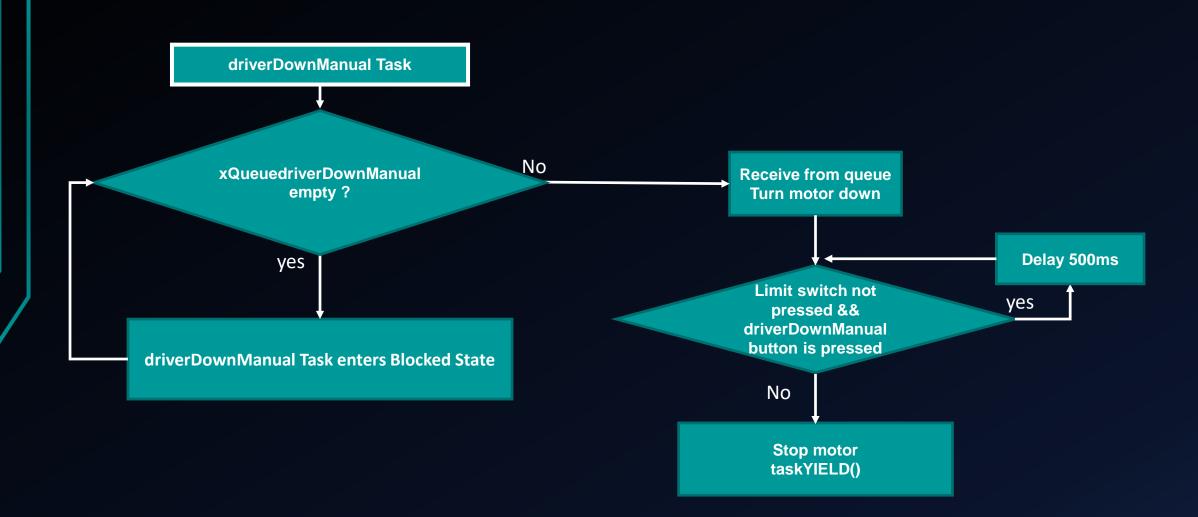

Passenger Up Manual

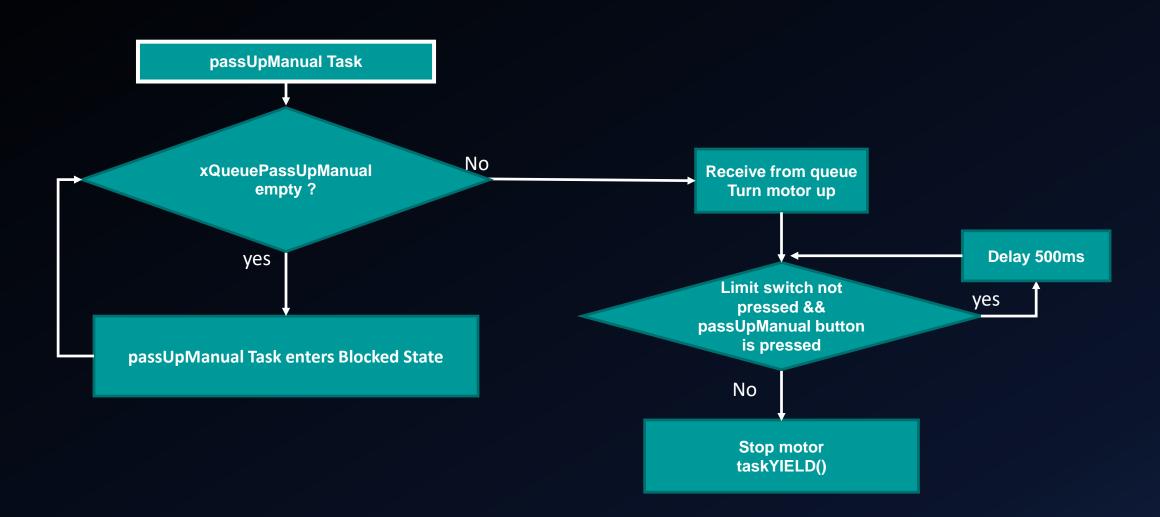

Passenger Down Manual

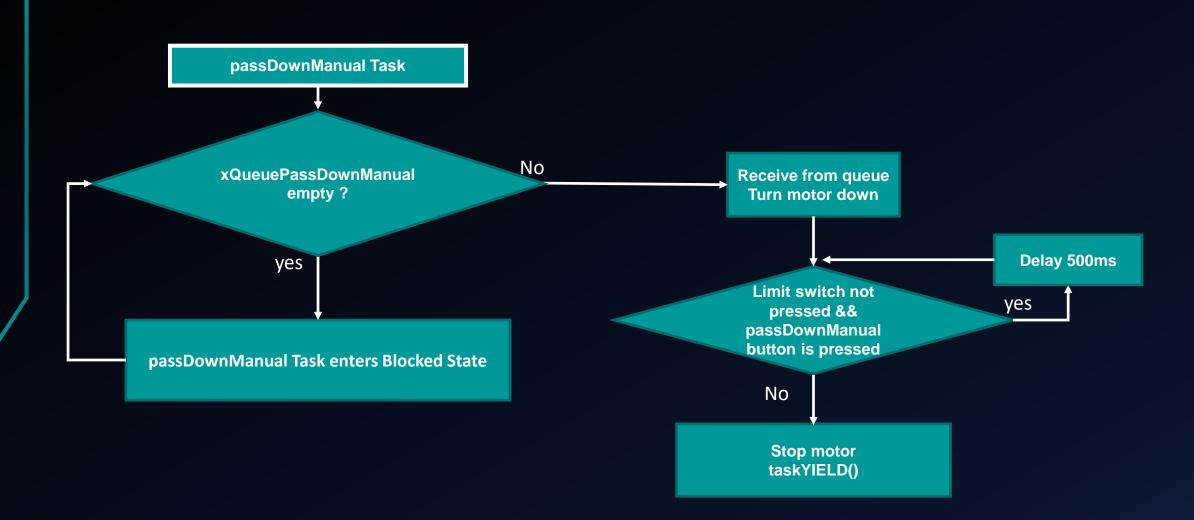

Jam Protection

jamProtection Task

Take semaphore stop the motor from going up turn the motor down for 0.5 seconds stop the motor taskYIELD()

Car Handler



Circuit Topology:

1. Push Button:


One side for VCC and the other side is for the output which is connected to a pin in the Tiva-c


Automatic – Port D

- (Passenger side) Passenger window up automatic pin D0
- (Passenger side) Passenger window down automatic pin D1
- (Driver side) Passenger window up automatic pin D2
- (Driver side) Passenger window down automatic pin D3
- The jam flag, if the window finds an obstacle while it is going up. pin D6

Manual – Port A

- (Passenger side) Passenger window up Manual pin A2
- (Passenger side) Passenger window down Manual pin A3
- (Driver side) Passenger window up Manual pin A4
- (Driver side) Passenger window down Manual pin A5

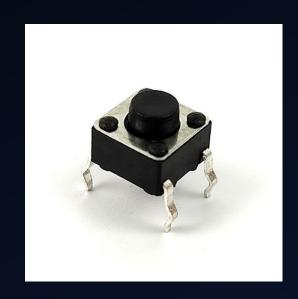

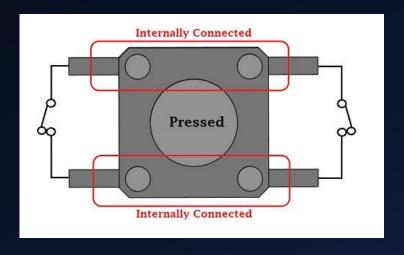


2. Limit Switch

- The small pin down is connected to VCC
- The upper pin, output (when pressed, it sends 1)
- The most upper pin, output (when pressed, it sends 0)
- Limit switch at the top the window pin B3
- Limit switch at the bottom of the window pin B4




3. Motor Driver:

- We connected the Motor Driver to a 12-v adapter in (Vin) and ground
- We put 5v regulator jumper
- Enable
- M1(output) and connected M1(3,4) to B0,B4

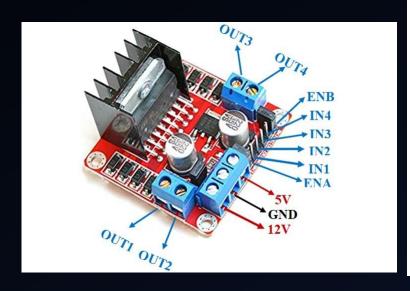



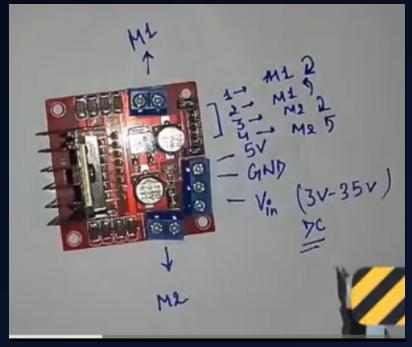

4. Motor


- If we want to motor to go up, we send zero to B1, and we send one to B0
- If we want to motor to go down, we send zero to B0, and we send one to B1





5. ON/OFF Switch

- The middle pin VCC
- The left one output
- ON/OFF switch, if it is closed the passenger side doesn't work, while the driver is not affected by this button Pin D7

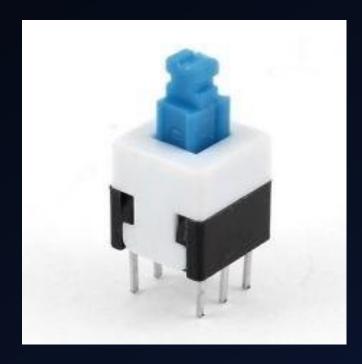

TEST CASES:

When ON/OFF switch is off:

- 1- press passenger automatic upwait....press limit switch up>>>> **Motor stops**
- 2- press passenger automatic downwait....press limit switch down>>>> **Motor stops**
- 3- press driver automatic upwait....press limit switch up>>>> **Motor stops**
- 4- press driver automatic upwait....press limit switch up>>>> **Motor stops**
- 5- press passenger manual up, **Motor stops** when press limit switch up
- 6- press passenger manual down, Motor stops when press limit switch down
- 7- press driver manual up, **Motor stops** when press limit switch up
- 8- press driver manual up, **Motor stops** when press limit switch up

When ON/OFF switch is on

- 9- press passenger automatic up >>>> Nothing changes, Motor stay still
- 10- press passenger automatic down>>>> **Nothing changes, Motor stay still**
- 11- press passenger manual up >>>> Nothing changes, Motor stay still
- 12- press passenger manual down >>>> Nothing changes, Motor stay still

- 13- press driver automatic upwait....press limit switch up>>>> **Motor stops**
- 14- press driver automatic upwait....press limit switch up>>>> **Motor stops**
- 15-press driver manual up, **Motor stops** when press limit switch up
- 16- press driver manual up, Motor stops when press limit switch up

When Limit switch is pressed:

- 17- press passenger automatic up >>>> Nothing changes, Motor stay still
- 18- press passenger automatic down>>>> Nothing changes, Motor stay still
- 19- press passenger manual up >>>> Nothing changes, Motor stay still
- 20- press passenger manual down >>>> Nothing changes, Motor stay still

- 21- press driver automatic up >>>> Nothing changes, Motor stay still
- 22- press driver automatic up >>>> Nothing changes, Motor stay still
- 23-press driver manual up >>>> **Nothing changes, Motor stay still**
- 24- press driver manual up >>>> **Nothing changes, Motor stay still**

Priority list

- Passenger up auto
- Passenger up manual
- Passenger down auto
- Passenger down manual
- Driver up auto
- Driver up manual
- Driver down auto
- Driver down manual
- Jam

Corner Cases

- 25- Press Passenger up auto, motor will go up, then press Passenger down auto, wait, motor will go down
- 26- Press Passenger down auto, motor will go down, then press Passenger up auto, wait, motor will go up
- 27- Press Passenger up manual, motor will go up, then press Passenger down manual, motor will go down
- 28- Press Passenger down manual, motor will go down, then press Passenger up manual, motor will go up
- 29- Press Passenger up auto, motor will go up, then press Driver down auto, wait, motor will go down
- 30- Press Passenger down auto, motor will go down, then press Driver up auto, wait, motor will go up

Corner Cases

- 31- Press Passenger up manual, motor will go up, then press Driver down manual, motor will go down
- 32- Press Passenger down manual, motor will go down, then press Driver up manual, motor will go up
- 33- Press Driver up auto, motor will go up, then press Driver down auto, wait, motor will go down
- 35- Press Driver down auto, motor will go down, then press Driver up auto, wait, motor will go up
- 36- Press Driver up manual, motor will go up, then press Driver down manual, motor will go down
- 37- Press Driver down manual, motor will go down, then press Driver up manual, motor will go up

Thank you