



Quench Velocity-Based Approach in ANSYS APDL

Michał Wilczek

mailto:michal.wilczek@cern.ch

Abstract

This report presents the workflow of the quench velocity-based approach implemented in Python and ANSYS APDL. The method was developed to simulate the longitudinal and the turn-to-turn quench propagation in high-order corrector magnets. As illustrated in Fig. 1, there are four steps necessary for conducting the multi-strand analysis of a high-order corrector with the quench velocity-based approach. It is required to conduct a set of magnetic analyses, and a set of 1D quench simulations on simplified numerical models to predict both the quench velocity and the minimum propagation zone in the superconducting coil. When all three initial steps are completed, the quench simulation of the high-order corrector can be performed including the magnet discharge.

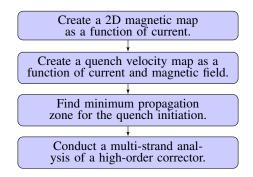


Figure 1: Analysis workflow for the quench analysis of a high-order corrector.

Moreover, the report describes how the ANSYS APDL simulations should be launched on the CERN cluster. The possible software development for the quench velocity-based approach is discussed as well.

Contents

I	Installation Prerequisites	3
	1.1 General software requirements	
	1.2 Requirements for the exemplary ANSYS of simulations	. 3
2	Magnetic 2D Analysis	4
	2.1 Creating the geometry in ANSYS Workbench	. 4
	2.2 Magnetic Analysis in ANSYS APDL	. 6
	2.3 Results from ANSYS APDL	
3	Quench Velocity Map Analysis	10
_	3.1 Input json File	
	3.2 Running ANSYS APDL in Python	
	3.3 Results from ANSYS APDL	
4	Minimum Propagation Zone Analysis	14
	4.1 Input json File	. 14
	4.2 Running ANSYS APDL in Python	. 14
	4.3 Results from ANSYS APDL	. 15
5	Quench Analysis of Skew Quadrupole	16
	5.1 Input Files	. 16
	5.2 Input json File	. 16
	5.3 Running ANSYS APDL in Python	. 17
	5.4 Results from ANSYS APDL	. 17
6	HPC Cluster Implementation	19
	6.1 Further information about the cluster at CERN	
	6.2 Simulation Prerequisites	
	6.3 Submitting the ANSYS script to the cluster	
	6.4 Recommendation for the future code development	
7	General Comments on the Developed Simulation Tool	21
	7.1 Choice of the simulation tool from the ANSYS package	. 21
	7.2 Possible future development	. 22
Aŗ	pendices	24
A	Description of Input File Parameters	25
_		

Installation Prerequisites

In this chapter, the installation prerequisites are discussed to:

- 1. run the ANSYS simulations with the quench velocity-based approach;
- 2. rerun the set of exemplary ANSYS simulations illustration the developed tool.

1.1 General software requirements

In order to perform the ANSYS simulations with the quench velocity-based approach on a personal computer, the user should follow the given steps:

- 1. install ANSYS software (version 2019 R1);
- 2. install Python (version 3.6);
- 3. download the Python package for the quench velocity-based approach given under the following link https://gitlab.cern.ch/steam/steam-ansys-modelling;
- 4. import external libraries used in the Python package for the quench velocity-based approach.

There are two tools used from the ANSYS package: (i) ANSYS APDL, (ii) Design Modeler from ANSYS Workbench. ANSYS APDL is necessary to run the simulation with the quench velocity-based approach. Design Modeler is an additional tool required for the magnetic part described in Chapter 2. The Python code was developed in PyCharm (version 2018.3.4), being the proprietary integrated development environment (IDE). The user is not obliged to use this tool. Nevertheless, another tool able to interpret the Python language must be installed in such a case.

1.2 Requirements for the exemplary ANSYS of simulations

The exemplary simulations are stored in two following repositories:

- 1. \cern.ch\dfs\Workspaces\a\ANSYS_Modelling\1_quench_velocity_modelling\documentation\Test_Simulation_Workflow;
- 2. https://cernbox.cern.ch/index.php/s/ViJX5rH5eLnKP0t/download.

The first path presents an internal directory for the project to which the access is restricted. The second path is public. In case of any problem with accessing this link, please, contact Michał Maciejewski (mailto: michal.maciejewski@cern.ch).

It is assumed in this manual that the files are used as if they were stored in the first repository. Therefore, all the paths, which are specified in the following chapters, relate to the first directory. This is usually not the case for the individual use of the programme. In such a case it is required to specify the directory where the files are stored on a personal computer.

Magnetic 2D Analysis

The 2D magnetic field analysis serves for obtaining the map of the magnetic field strength in the coil for different values of operating current. Two tools are used within the studies: ANSYS Workbench and ANSYS APDL. The former serves for creating the 2D geometry, and the latter is used to perform the magnetic field simulations. For more information about conducting magnetic field analyses in ANSYS APDL for this particular case, please refer to [1, p. 77-81].

The files required to rerun the simulations are stored in \cern.ch\dfs\Workspaces\a\ANSYS_ Modelling\1_quench_velocity_modelling\documentation\Test_Simulation_Workflow\1_analysis_magnetic

2.1 Creating the geometry in ANSYS Workbench

ANSYS Workbench is used because the iron yoke, being a part of the skew quadrupole geometry, was received as an external step file. It is not possible to open a step file in ANSYS APDL. Therefore, the geometry was created in Design Modeller of ANSYS Workbench and exported to ANSYS APDL. The geometry creation steps in ANSYS Workbench are as follows:

- 1. Import the step file with the iron yoke geometry to Design Modeller. The step file with the iron yoke can be found in \input\skew_quad_iron_yoke.stp.
- 2. Create the remaining part of the 2D high-order corrector geometry in Design Modeller. Figure 2.1 presents the final one-eighth of the skew quadrupole geometry. The geometry is reduced due to available three planes of symmetry in the geometry. It is recommended to mesh the geometry in ANSYS APDL after the exporting procedure. For more explanations why the meshing step is performed in ANSYS APDL rather than in ANSYS Workbench, please, read the private communication with ANSYS support presented in \additional_help.

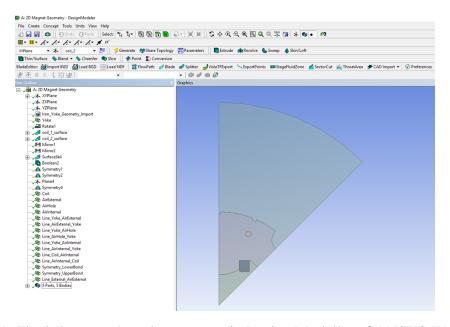


Figure 2.1: Final skew quadrupole geometry in Design Modeller of ANSYS Workbench.

3. As soon as the geometry is prepared in Design Modeller, the user should add the additional module in GUI of ANSYS Workbench, called Mechanical APDL as illustrated in Fig. 2.2. By clicking, "Edit in Mechanical APDL", the geometry is easily exported to ANSYS APDL, and the ANSYS APDL window should open at this moment.

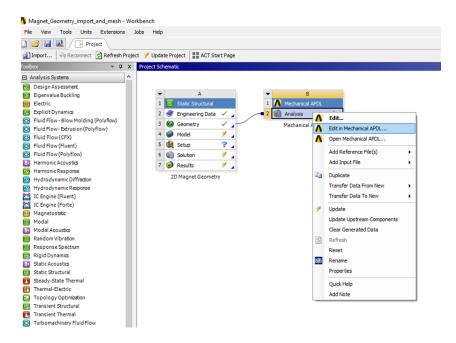


Figure 2.2: Exporting procedure of Workbench geometry to ANSYS APDL.

4. In order to verify whether the geometry is properly exported, the user should type "LPLOT" command in the command window of ANSYS APDL as shown in Fig. 2.3. If the geometry contour lines appear after typing the command, it means that the Design Modeler geometry is properly exported to ANSYS APDL.

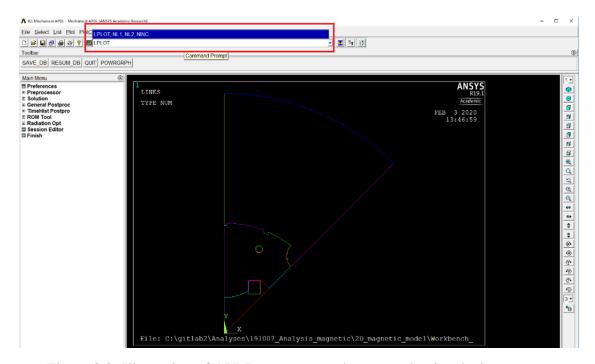


Figure 2.3: Illustration of APDL geometry and command to invoke its contour.

5. In the last step, the geometry should be saved in ANSYS APDL as a .db file, being a typical extension for the ANSYS APDL project as illustrated in Fig. 2.4. The project should be named as Skew_Quad.db.

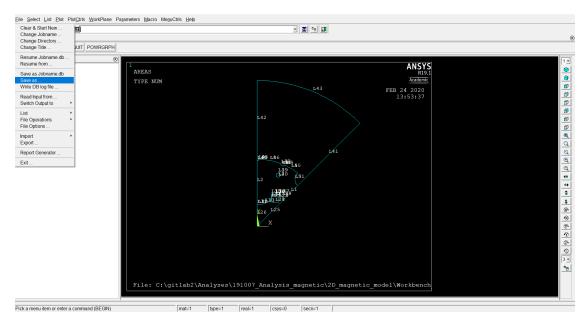


Figure 2.4: Saving procedure in ANSYS APDL.

2.2 Magnetic Analysis in ANSYS APDL

Depending on the step, from which the user is willing to rerun the magnetic analysis, there are four input files given in the folder \input:

- 1. skew_quad_iron_yoke.stp, being the imported step file to Design Modeller;
- 2. Workbench_geometry_skew_quad.wbpz, representing the entire skew quadrupole geometry prepared in ANSYS Workbench;
- 3. Skew_Quad.db, corresponding to the skew quadrupole geometry saved in ANSYS APDL;
- 4. 2D_MAGNETIC_ANALYSIS.inp, being the ANSYS APDL script prepared to execute the magnetic analysis.

In order to conduct the magnetic analysis in ANSYS APDL, two last files from the list above are only required. Both are copied to the folder \output. The user can modify the parameters in the file 2D_MAGNETIC_ANALYSIS.inp as presented in Fig. 2.5. It is recommended to run the simulations with current_init, current_max, and current_step being integer values.

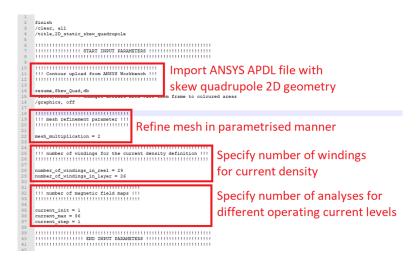


Figure 2.5: Input parameters to specify by the user in ANSYS APDL input script for the magnetic analysis.

ANSYS Workbench assigns the area numbers randomly to the created geometry in ANSYS APDL. Therefore, the user should verify the area numbers manually in ANSYS APDL and name them with the following pattern: area_yoke (iron yoke), area_coil (coil cross-section), area_airinternal (aperture side of the magnet), area_airhole (all holes in the magnet cross-section), area_airexternal (zone outside of the iron yoke). The area

numbers assigned in ANSYS APDL as well as the APDL script, in which the user should name the components, respectively, are presented in Fig. 2.6.

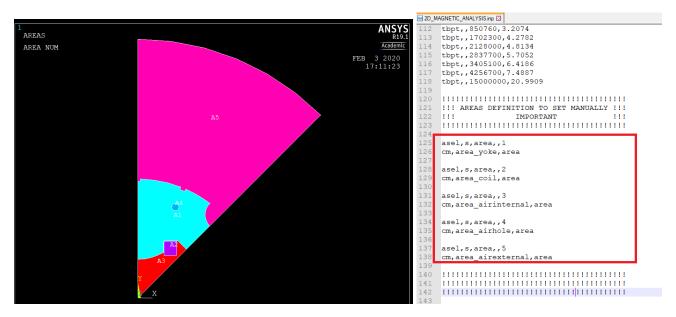


Figure 2.6: Left: areas assigned to the ANSYS APDL geometry, right: ANSYS APDL script in which the areas are assigned to the component names.

In order to run the magnetic analysis, the user should:

- close the file Skew_Quad.db;
- 2. reopen the ANSYS APDL project with Product Launcher. The simulation should be named 2D_magnetic as shown in Fig. 2.7;

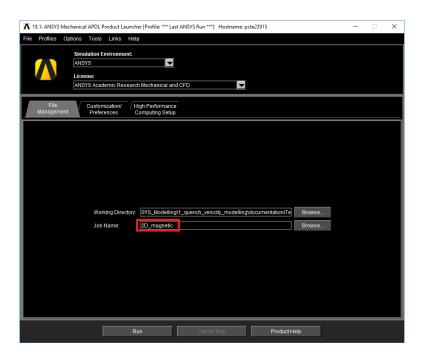


Figure 2.7: Starting the ANSYS APDL from Product Launcher.

3. run the simulation from the APDL script as presented in Fig. 2.8.

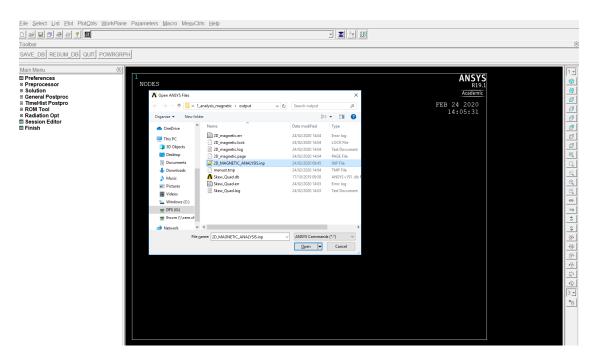


Figure 2.8: Launching the simulation from an external script in ANSYS APDL.

2.3 Results from ANSYS APDL

To run the magnetic simulation, the file <code>2D_MAGNETIC_ANALYSIS.inp</code> is launched in ANSYS APDL. There are seven output files from the analyses:

- 1. magnetic_field_current_iteration.txt
- 2. peak_field_coil_current_iteration.png
- 3. peak_field_coil_vector_current_iteration.png
- 4. peak_field_yoke_coil_current_iteration.png
- 5. peak_field_yoke_coil_vector_current_iteration.png
- 6. peak_field_yoke_current_iteration.png
- 7. peak_field_yoke_vector_current_iteration.png

The output files 2-7 only aim to visualise the simulation. The files of type 1 are important for the quench velocity-based approach, because they contain the data required to create the magnetic map as a function of current and magnetic field strength. Figure 2.9 presents the exemplary magnetic_field_current_iteration.txt file for the given value of current. In Fig. 2.9, the first two top lines of the red rectangle describe how the mesh is discretised in area_coil from Fig. 2.6 (number of mesh divisions in x- and y-direction. The third line specifies the applied current value. The red rectangle on the right side corresponds to the magnetic field strength in the Cartesian (x,y,z)-coordinate system presented in the blue rectangle.

```
Coil number of elements, x-direction = 40
Coil number of elements, y-direction = 40
Current, [A] = 1.
1 X [MM]
2 Y [MM]
3 Z [MM]
4 BX [TESLA]
5 BY [TESLA]
6 B [TESLA]
                   2.7300000E-02
                                    0.0000000E+00
                                                    2.9725280E-04 -7.7515328E-04
                                                                                      8.3019385E-04
  2.4460000E-02
                  2.7300000E-02
                                   0.0000000E+00
                                                    9.1531786E-05 5.3775984E-03
                                                                                      5.3783773E-03
  6.1150000E-04
                   2.7300000E-02
                                                    8.2173522E-05 -8.6432278E-04
                                                                                      8.6822022E-04
                                   0.0000000E+00
  1.2230000E-03
                   2.7300000E-02
                                   0.0000000E+00
                                                    3.3097816E-05 -9.2592648E-04
                                                                                      9.2651784E-04
                   2.7300000E-02
                                                   1.2008511E-05 -9.6490051E-04
                                                                                      9.6497523E-04
  1.8345000E-03
                                   0.0000000E+00
                                                   -4.9338231E-06 -9.8053839E-04
-1.6842474E-05 -9.8613424E-04
  2.4460000E-03
                  2.7300000E-02
                                   0.0000000E+00
                                                                                      9.8055080E-04
  3.0575000E-03
                  2.7300000E-02
                                   0.0000000E+00
                                                                                      9.8627806E-04
                                                   -2.5684484E-05
  3.6690000E-03
                  2.7300000E-02
                                   0.0000000E+00
                                                                    -9.7896667E-04
                                                                                      9.7930355E-04
                   2.7300000E-02
  4.2805000E-03
                                   0.0000000E+00
                                                   -3.5586139E-05
                                                                    -9.6128160E-04
                                                                                      9.6194007E-04
                                                   -4.6432184E-05
  4.8920000E-03
                  2.7300000E-02
                                   0.0000000E+00
                                                                    -9.3318446E-04
                                                                                      9.3433890E-04
  5.5035000E-03
                   2.7300000E-02
                                   0.0000000E+00
                                                   -5.5840084E-05
                                                                    -8.9390056E-04
                                                                                      8.9564297E-04
  6.1150000E-03
                   2.7300000E-02
                                   0.0000000E+00
                                                   -6.3299669E-05
                                                                    -8.4257412E-04
                                                                                      8.4494852E-04
  6.7265000E-03
                   2.7300000E-02
                                   0.0000000E+00
                                                   -7.6956655E-05
                                                                    -7.8847766E-04
                                                                                      7.9222431E-04
  7.3380000E-03
                  2.7300000E-02
                                   0.0000000E+00
                                                   -8.6785564E-05
                                                                   -7.1034589E-04
                                                                                      7.1562771E-04
  7.9495000E-03
                  2.7300000E-02
                                   0.0000000E+00
                                                   -9.7445121E-05
                                                                   -6.2754490E-04
                                                                                      6.3506547E-04
  8.5610000E-03
                  2.7300000E-02
                                   0.0000000E+00
                                                   -1.1247076E-04
                                                                    -5.3118556E-04
                                                                                      5.4296203E-04
  9.1725000E-03
                   2.7300000E-02
                                   0.0000000E+00
                                                   -1.1888564E-04
                                                                    -4.2191241E-04
                                                                                      4.3834219E-04
  9.7840000E-03
                   2.7300000E-02
                                                   -1.3272720E-04
                                   0.0000000E+00
                                                                    -3.0161737E-04
                                                                                      3.2952929E-04
                                   0.0000000E+00 -1.4682133E-04 -1.6827338E-04
0.0000000E+00 -1.5665156E-04 -1.7372971E-05
  1.0395500E-02
                  2.7300000E-02
                                                                                      2.2332137E-04
  1.1007000E-02
                  2.7300000E-02
                                                                                     1.5761196E-04
```

Figure 2.9: The output file from the magnetic simulation with specified data for the quench velocity-based approach.

The files magnetic_field_current_iteration.txt should be ordered from the lowest to the highest value of current, i.e. from magnetic_field_current_current_init.txt to magnetic_field_current_current_max.txt. This is carried out by default if integer values of the parameters related to operating current levels are specified (see Fig. 2.5). The files order is important for the right uploading procedure of the magnetic field strength in Python required in the following steps of the quench velocity-based approach.

Quench Velocity Map Analysis

In the studies related to the quench velocity map, a set of 1D numerical analyses is conducted in ANSYS APDL with or without an additional insulation layer. The analysis is performed in ANSYS APDL with the external Python script. For more details about using the Python script in ANSYS APDL simulations, please, refer to [1, p. 51-69]. The files required to rerun the simulations are stored in: \cern.ch\dfs\Workspaces\a\ANSYS_Modelling\1_quench_velocity_modelling\documentation\Test_Simulation_Workflow\2_analysis_v_quench_map.

3.1 Input json File

First of all, the user should fill the input json file to run the ANSYS APDL simulation. The default json file is placed in the folder \input. As presented in Fig. 3.1, the user specifies the analysis_output_directory corresponding to the directory in which ANSYS APDL is running during the simulation. In this chapter, ANSYS executes standard simulations without the quench velocity-based approach. Therefore, the user specifies the analysis_type.type as "standard". All parameters required to fill up the input json file are described in Appendix A.

Figure 3.1: Input json file with specified analysis_output_directory and analysis_type.type marked in blue and red, respectively.

In the next step, the user specifies the data related to the current and the magnetic field strength as illustrated in Fig. 3.2. It is recommended to keep the value of B_initially_quenched_winding equal to B_constant.

```
"magnetic_field_settings": {
    "type": "constant",
    "input": {"B_constant": 0.0}
},

"circuit_settings": {
    "electric ansys elements": false,
    "build electric circuit": false,
    "transient_electric_analysis": false,
    "transient_electric_analysis_input": {}
},

"temperature_settings": {
    "type": "gaussian",
    "input": {
        "T_bath": 4.3,
        "T_max": 20.0,
        "B_initially_quenched_winding": 0.0
        "png_temperature_output": true}
},
```

Figure 3.2: Input json file with specified values related to the magnetic field strength and the current.

3.2 Running ANSYS APDL in Python

The user should launch ANSYS APDL in the Product Launcher. In order to run ANSYS APDL with Python, the given steps must be followed:

1. The ANSYS directory must correspond to the folder \output, as illustrated in Fig. 3.3.

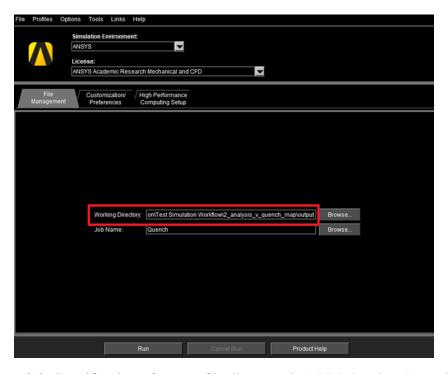


Figure 3.3: Specification of output file directory in APDL Product Launcher.

2. The additional parameter must be specified in the Product Launcher, called "-aas" as shown in Fig. 3.4. At this point, ANSYS APDL is launched by clicking the "Run" button in the Product Launcher window.

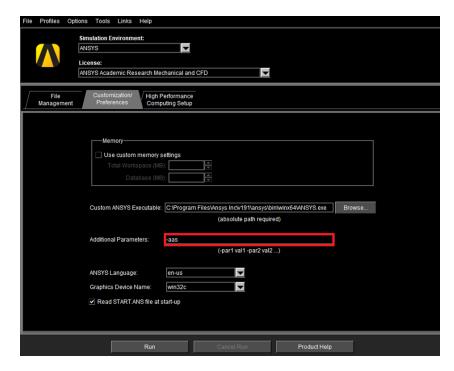


Figure 3.4: Specification of the –aas mode in APDL Product Launcher.

3. In the execution_script module of the Python script, the input_file_directory with the json filename must be specified as illustrated in Fig. 3.5.

Figure 3.5: Specification of input file directory in the execution_script module of the Python script.

4. After starting ANSYS APDL, the Python script is initialised by clicking 'Run execution_script' in PyCharm as shown in Fig. 3.6. From this point, the analysis is running until the total simulation time is computed.

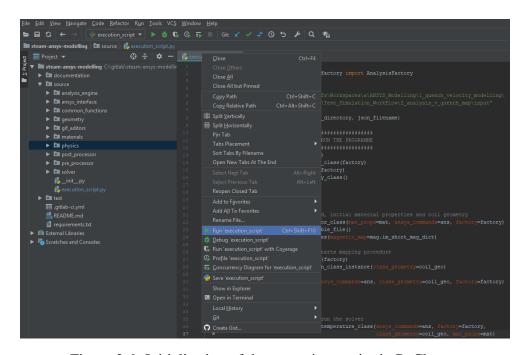


Figure 3.6: Initialisation of the execution_script in PyCharm.

3.3 Results from ANSYS APDL

The results output consists of a set of folders as shown in Fig. 3.7. The files in each of the folders are presented in Table 3.1.

geometry_output	26/12/2019 00:04	File folder
input_copy	26/12/2019 00:04	File folder
magnetic_field	24/12/2019 23:09	File folder
material_properties	26/12/2019 00:04	File folder
quench_state_output	26/12/2019 00:08	File folder
resistive_voltage_output	26/12/2019 00:04	File folder
temperature_profile_output	26/12/2019 00:04	File folder

Figure 3.7: Folders in output directory created during the analysis.

Folder	File name	Description		
geometry_output	im_coil_length.txt	imaginary nodes vs. coil length		
input_copy	input.json	input json file (copy)		
magnetic_field	-	-		
material_properties	item_property.txt	property vs. temperature		
materiai_properties	item_property.png	property vs. temperature		
quench_state_output	quench_velocity.txt	quench length, quench velocity vs. time		
	quench_state_iteration.txt	quench state vs. coil length		
	quench_state_iteration.png	quench state vs. coil length		
resistive_voltage_output	resistance_voltage.txt	resistance, resistive voltage vs. time		
resistive_voltage_output	v_res_ansys.png	resistive voltage vs. time		
	initial_energy_deposition_in_strand.txt	initial energy in the strand		
temperature_profile_output	temperature_profile_iteration.txt	temperature vs. coil length		
	temperature_profile_iteration.png	temperature vs. coil length		

Table 3.1: Description of output files from the simulation.

The file im_coil_length.txt represents a set of nodal positions in the longitudinal direction of the analysed cable. In the material_properties folder the following data are given:

- 1. heat capacity, thermal conductivity, thermal diffusivity of copper, Nb-Ti, and G10 and composite strand;
- 2. resistivity of copper and composite strand;
- 3. Joule heating power density profile.

The quench velocity value is stored in the quench_velocity.txt file in the folder quench_state_output. This value is important for the quench velocity-based approach in further steps of the analysis. Another type of the file obtained from the simulations is Coil-Nodal-Temp_iteration.png in which the coil top view from ANSYS APDL is presented with the temperature distribution at the given iteration. The remaining files in the \output directory are not used for the post-processing.

Minimum Propagation Zone Analysis

In the minimum propagation zone (MPZ) studies, a set of 1D numerical analyses is conducted to predict how much of initial energy is required to initialise the quench inside of a coil. For more information about the MPZ simulations, please, refer to [1, p. 85-87]. Similarly to the previous chapter, the analysis is performed in ANSYS APDL by means of the Python script. The files needed to rerun the simulations are stored in \centscript. ch\dfs\Workspaces\a\ANSYS_Modelling\1_quench_velocity_modelling\documentation\Test_Simulation_Workflow\3_analysis_mpz.

4.1 Input json File

The input file for the analysis is stored in the folder \input. In analogy to the case discussed in the previous chapter, analysis_output_directory corresponds to the directory in which ANSYS APDL is running during the simulations. As shown in Fig. 4.1, the parameter L_quench_init imposes the initial quench length in the coil. If the simulation is conducted with a symmetry condition, the value of this parameter is halved.

Figure 4.1: Input json file with specified analysis_output_directory and L_quench marked in blue and red, respectively.

Figure 4.2 presents the input parameters corresponding to the initial temperature profile. All parameters required to fill up the input json file are described in Appendix A.

```
"temperature_settings": {
    "type": "gaussian",
    "input": {
        "T_bath": 4.3,
        "T_max": 20.0,
        "B_initially_quenched_winding": 0.0,
        "png_temperature_output": true}
},
```

Figure 4.2: Input json file with specified values related to the initial temperature profile.

4.2 Running ANSYS APDL in Python

The case corresponds to that, presented in Section 3.2.

4.3 Results from ANSYS APDL

The case corresponds to that, presented in Section 3.3

Quench Analysis of Skew Quadrupole

This chapter an exemplary analysis of the skew quadrupole with the quench velocity-based approach. The analysis can be used for the quench simulation of any high-order corrector geometry. For further information concerning the quench analysis of the skew quadrupole, please, refer to [1, p. 70-97]. The files required to rerun the exemplary simulation are stored in the following directory: \cern.ch\dfs\Workspaces\a\ANSYS_ Modelling\1_quench_velocity_modelling\documentation\Test_Simulation_Workflow\4_analysis_high_order_corrector_test_model. The test simulation does not contain physically valid parameters for the skew quadrupole. The input json file which stores physically valid parameters for the skew quadrupole can be found in \cern.ch\dfs\Workspaces\a\ANSYS_Modelling\1_quench_velocity_modelling\documentation\Test_Simulation_Workflow\4_analysis_high_order_corrector_skew_quad.

5.1 Input Files

As presented in Fig. 5.1, in order to run the simulation, the Python script requires a set of input files such as inductance.txt, quench_velocity_map.txt, and input.json. The file inductance.txt represents the evolution of the magnet inductance as a function of current. The file quench_velocity_map.txt is based on the simulations discussed in Chapter 3. The input.json file is a text file with a set of simulation parameters similarly to the analyses discussed in the previous chapters. The folder \magnetic_field_map stores a set of magnetic field maps for a varying value of the operating current. The files are obtained from the magnetic simulations discussed in Chapter 2.




Figure 5.1: Input files required to run the simulation.

5.2 Input json File

Apart from the data discussed in the previous chapters, the quench velocity-based approach requires additional information concerning the quench velocity map as a function of current and magnetic field strength. The input.json file contains the data in the analysis_type part of the text file as illustrated in Fig. 5.2. All parameters required to fill up the input json file are described in Appendix A.

Figure 5.3 depicts the analysis settings corresponding to the magnetic field strength as well as the circuit. The parameters used for the discharge of the skew quadrupole are explained in [1, p.70-76 and 91].

The high-order corrector geometry parameters are specified in the input json file as well. They are shown in Fig. 5.4 and further described in Appendix A. The geometrical meaning of the parameters is discussed in [1, p.81-83 and 87-88].

```
"analysis_type": {
    "type": "v_quench_based_approach",
    "input": {
        "v_quench_model": "numerical",
        "v_quench_map_filename": "quench_velocity_map.txt",
        "png_quench_state_output": true,
        "png_resistive_voltage_output": true}
},
```

Figure 5.2: Input json file with specified values related to the quench velocity-based approach.

```
"magnetic_field_settings": {
    "type": "2D_static",
    "input": {
        "B_map_foldername": "magnetic_field_map"}
},

"circuit_settings": {
    "electric_ansys_elements": true,
    "electric_ansys_element_input": {"I_init": 86.0},

    "build_electric_circuit": true,
    "transient_electric_analysis": true,
    "transient_electric_analysis_input": {
        "R_dump": 2.0,
        "L_diff_filename": "inductance.txt",
        "V_th": 0.05,
        "t_delay": 0.005,
        "I_discharge_criterion": 80.0}
    },
```

Figure 5.3: Input json file with specified values related to the circuit settings and the magnetic field mapping procedure.

5.3 Running ANSYS APDL in Python

The case corresponds to that, presented in Section 3.2.

5.4 Results from ANSYS APDL

The files obtained from the analysis with the quench velocity-based approach are similar to that presented in Section 3.3. The difference is based on two file types described in Table 5.1. The files marked in red represent those that are not included in the output folders with respect to the case described in Section 3.3. First of all, the file magnetic_map.png is obtained from the simulation that is a graphical representation of the magnetic field strength assigned to each winding of the simulated coil. Second of all, the file quench_velocity.txt is not included in the results due to the fact that the quench velocity is an input parameter in the quench velocity-based approach.

Table 5.1: Description of additional output files from the simulation.

Folder	File name	Description				
magnetic_field magnetic_map.png		magnetic field strength vs. winding position across the coil				
quench_state_output	quench_velocity.txt	quench length, quench velocity vs. time				

In addition, there are the following output files in the directory output:

- 1. Coil-Nodal-Temp_iteration.png with the coil top view from ANSYS APDL showing the temperature distribution at the given iteration;
- 2. Coil-Nodal-Volt_iteration.png with the coil top view from ANSYS APDL showing the voltage distribution at the given iteration;
- 3. sol_dump_resistor.inp with the values of current, voltage and power in the resistor at the given time step;

```
"geometry settings": {
   "dimensionality": "multiple 1D",
   "type": "high_order_corrector",
    "type input": {
        "d strand": 0.7,
        "d ins": 0.84,
        "a strand": 0.941,
        "u ins": 1.0,
        "u resin": 0.5,
        "e_coil": 387.3,
        "d coil": 82.9,
        "rad coil": 9.15,
        "n_windings": 9,
        "n_layers": 3,
        "n_turns_in_layer": 3,
        "which_layer_first_in_analysis": 1,
        "which_turn_first_in_analysis": 1,
        "type_insulation_settings": {
            "insulation_analysis": true,
            "insulation_analysis_input": {"n_divisions_ins": 2}
        "type_mesh_settings": {
            "n_divisions_e_coil": 26,
            "n_divisions_d_coil": 6,
            "n_divisions_rad": 2
```

Figure 5.4: Input json file with specified values related to the geometry of the high-order corrector.

4. sol_inductor.inp the values of current, voltage and power in the inductor at the given time step.

HPC Cluster Implementation

During the last month of the project (February 2020), an effort was made to run the ANSYS simulations on the CERN cluster. This chapter presents how the standard ANSYS simulation without the external Python script runs on the cluster. The simulations with the quench velocity-based approach were finally not launched due to the lack of time. The following sections describe the preliminary steps required to start the standard ANSYS simulation on the cluster. In addition, some recommendations to future software developers on how to include the quench velocity-based approach in the cluster are mentioned. The files required to rerun the exemplary simulation on the cluster are stored in the given directory: \\cern.ch\\dfs\\workspaces\a\ANSYS_Modelling\\1_quench_velocity_modelling\\documentation\\Test_Simulation_Workflow\\5_hpc_normal_ansys_analysis.

6.1 Further information about the cluster at CERN

It is recommended to launch the ANSYS APDL simulations on the HTCondor cluster. For more information, please refer to the CERN documentation presented in https://cern.service-now.com/service-portal/article.do?n=KB0006080. A set of lectures is additionally dedicated to the cluster users at CERN accessible under the following link: https://indico.cern.ch/event/811481/.

6.2 Simulation Prerequisites

Before running the simulation, the user should follow the given steps:

- 1. install PuTTY software from CERN Computer Framework (CMF);
- 2. create a folder for the cluster analyses on the personal CERNBox account;
- 3. create the AFS repository.

The AFS repository serves for submitting the APDL and htcondor files to run the ANSYS simulation on the cluster. The AFS configuration is performed as follows:

- go to the CERN Resource Portal at https://resources.web.cern.ch/resources/Manage/ ListServices.aspx;
- 2. click on "List Services";
- 3. click on "LXPLUS and Linux" in the "Operating Systems" section;
- 4. click on the "Computing Groups" blue tab on the left;
- 5. click on the "Computing Groups" blue tab on the left;
- 6. click on the "Subscribe to AFS" blue button in the "Manage your AFS subscription" section and the home directory will be created (note that it may take a few 2 hours);
- 7. contact the CERN service desk for the public key configuration given in https://cern.service-now.com/service-portal/article.do?n=KB0006086.

6.3 Submitting the ANSYS script to the cluster

The simulation is submitted from AFS by typing a set of commands in PuTTY as described in https://cern.service-now.com/service-portal/article.do?n=KB0006082. Based on the files stored in \cluster_files, the user should follow the given steps:

- copy the files my_htcondor.sub, my_script.sh, and test_simulation.txt to the CERN-Box;
- 2. move the files my_htcondor.sub and my_script.sh to AFS (mv command in PuTTY);
- 3. create three directories in AFS: output, error, log (*mkdir* command);
- 4. submit the file my_htcondor.sub in PuTTY (condor_submit command).

The user should make sure that my_script.sh has the correct Linux/Unix text format because new lines in Windows text files are implemented in a different manner (dos2unix command). After the correct simulation submission to the cluster, the analysis is computed and the results from the simulation are sent back to the user's personal CERNBox. The output files from the simulation performed on the cluster should correspond to those stored in the folder \output.

6.4 Recommendation for the future code development

The analysis with the quench velocity-based approach could not be launched because it is not possible to run the ANSYS Product Launcher on the cluster as in case of a personal computer usage presented in Section 3.2. For future cluster applications, it is recommended to extend the Python code with the script able launch the ANSYS APDL script without the Product Launcher. In such a case, an additional information would be required in the input json file about the directory in which the ANSYS software is stored on the personal computer or the cluster. Moreover, the Python package given in https://gitlab.cern.ch/steam/steam-ansys-modelling would have to be imported to the cluster.

Before implementing those steps (which are only a recommendation), the CERN service desk should be contacted.

General Comments on the Developed Simulation Tool

The development of the quench simulation tool lasted one year and there are still many options to improve its performance. In two following sections, the process of choosing ANSYS APDL as the simulation tool, as well as the proposals for the future software development are presented.

7.1 Choice of the simulation tool from the ANSYS package

ANSYS package consists of multiple tools able to solve thermal problems including ANSYS APDL, ANSYS Thermal, ANSYS CFX, or ANSYS Fluent. ANSYS APDL is a separate module able to solve multi-physics problems related to, among others, mechanical, thermal, or magnetic studies. The remaining ANSYS tools correspond to the separate GUI modules in ANSYS Workbench. Table 7.1 presents the advantages and disadvantages of implementing the quench velocity-based approach in ANSYS APDL or in any module of ANSYS Workbench. The main reason for choosing ANSYS APDL was the possibility of connecting it to an external code in which the quench velocity-based approach was implemented. The solution to this problem was not found in case of ANSYS Workbench.

Table 7.1: Advantages and disadvantages of the proposed tools.

Simulation tool	+ Advantages	- Disadvantages
ANSYS APDL	 It is possible to connect an external Python script able to co-simulate an external routine with the numerical ANSYS solver. ANSYS Parametric Design Language (APDL) is used to define and run the simulation. APDL scripts are independent of new ANSYS versions which allows for an easy archiving process of the project. APDL scripting allows to parameterise the simulation (no "clicking" in GUI). 	 Python implementation in ANSYS APDL tool is based on an external library ansys_corba which is not supported by the provider of ANSYS software. Therefore, a part of the Python code responsible for communicating with ANSYS APDL is version-dependent. Advanced knowledge of APDL is required (large documentation is provided by ANSYS). ANSYS support in APDL scripting is limited due to the time-consuming bug-fixing process.
ANSYS Workbench	 Basic/no knowledge of APDL is required. ANSYS support is much more responsive because the bugs occurring in Workbench are less customised. Simplified procedure to use a cluster based on the RSM module in ANSYS. 	Implementation of additional scripts responsible for the co-simulation of an externally developed routine remains a difficult task (a cus- tomised problem in ANSYS Work- bench leads to the limited ANSYS support)

7.2 Possible future development

Figure 7.1 illustrates the possible future code code development as a function of the computation time with respect to the necessary workload. The proposals are numbered in the order of the recommended implementation.

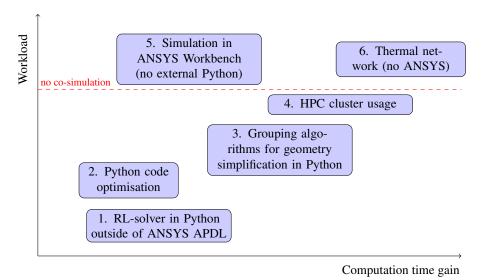


Figure 7.1: Possible project development directions as a function of the workload with respect to the gain in the computation time.

Based on the numbering order shown in Fig. 7.1, each of the proposed code development is further explained below:

- 1. At this moment, ANSYS APDL solves both the thermal coil domain and the electric discharge of an RL-circuit (please, refer to [1, p. 76]). The strong coupling is implemented between the thermal coil domain and the RL-circuit, being the only available option in ANSYS APDL. Since the RL-circuit requires a lower time step to reach the desired precision, the quench velocity-based approach related to the thermal coil domain with less strict time step requirements is slowed down. The solution to this problem would be the preparation of an electrical numerical solver in Python simulating the RL-circuit discharge. The circuit would be connected to ANSYS APDL in which only the coil would be solved. The solvers in ANSYS APDL and Python could be connected in form of a weak coupling.
- 2. It is recommended to verify the Python code in view of its computation efficiency. The code can be optimised in order to reduce the number of operations required to achieve the goals of the quench velocity-based approach explained in [1].
- 3. The grouping algorithms would aim to reduce the number of windings modelled in the geometry by assuming that a set of windings quenches at the same time. As presented in Fig. 7.2, each red rectangle is modelled as one winding which allows for reducing the number of degrees of freedom required to discretise the coil.

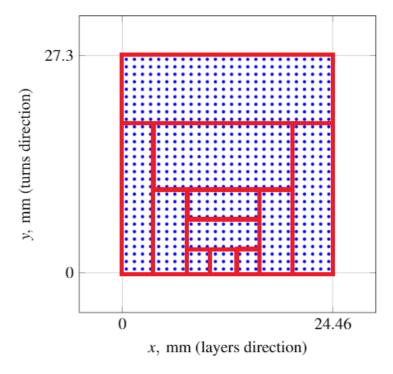


Figure 7.2: Schematic of the grouping algorithm in the coil geometry (based on the skew quadrupole).

- 4. As discussed in Chapter 6, the CERN cluster usage is recommended to shorten the computation time of the quench simulations with the quench velocity-based approach.
- 5. The implementation of the entire quench velocity-based approach in the ANSYS tool would allow for shortening the computation time by excluding the data exchange between ANSYS and the Python script.
- 6. Similarly to the previous case, the preparation of the thermal solver outside of ANSYS would allow shortening the computation time related to the data exchange between ANSYS and the Python script. Moreover, the customised numerical solver could possibly be faster than the commercial ANSYS tool.



Appendix A

Description of Input File Parameters

Table A.1: Parameters description for the input json file.

Parameter	Type	Unit	Description		
analysis_output_directory	string	unit	Directory in which ANSYS APDL is started in Product Launcher		
analysis_settings					
x_quench_init	float	m	Position of the centre of the initial temperature profile		
L_quench_init	float	m	Length of the initially quenched zone		
t_simulation	float	s	Total simulation time; valid only if I_discharge_criterion is not specified		
t_com	float	s	Time step at which Python exchanges data with ANSYS		
t_com_after_all_coil_quenched	float	S	Time step at which Python exchanges data with ANSYS after the entire coil quenches (to update the inductance with current drop)		
t_step_range_min	float	ms	Minimum automatic time step in ANSYS APDL		
t_step_range_max	float	ms	Maximum automatic time step in ANSYS APDL		
analysis_type		•			
type	string	-	Analysis type (standard / v_quench_based_approach)		
v_quench_model	string	-	Type of the quench velocity model (numerical / constant); only if type = "v_quench_based_approach"		
quench_velocity_value	float	m/s	Quench velocity value; only if v_quench_model = "constant")		
v_quench_map_filename	string	-	Filename of the quench velocity map; only if v_quench_model = "numerical")		
png_quench_state_output	boolean	-	Specifies whether the quench state profile is plotted as the simulation continues		
png_resistive_voltage_output	boolean	-	Specifies whether the resistive voltage is plotted as the simulation continues		
materials_settings		•			
type	string	-	Repository type (nonlinear)		
J_c_formula str r_nc_sc flo		-	Name of the critical current density formula		
		-	Normal conductor-to-superconductor ratio		
RRR	float	-	Residual resistivity ratio		
T_min_materials	float	K	Minimum temperature for the material properties		

T_max_materials	float	K	Maximum temperature for the material properties		
sc_name	string	-	Superconductor name		
nc_name	string	-	Normal conductor name		
ins_name	string	1	Insulation (and resin) name		
txt_material_output	boolean	-	Specifies whether the material properties are given in the output directory in form of text files (for specified values of the magnetic field strength)		
png_material_output	boolean	-	Specifies whether the material properties are given in the output in form of png files (for specified values of the magnetic field strength)		
materials_output_for_B_list	list	T	List of magnetic field strength values for the plotting purposes		
magnetic_field_settings					
type	string	-	Magnetic field settings type (constant / 2D_static)		
B_constant	float	Т	Constant value of the magnetic field strength during the analysis; only if type = "constant"		
B_map_foldername	string	-	Folder with the magnetic field strength maps (see Fig. 5.1) only if type = "2D_static"		
circuit_settings					
electric_ansys_elements	boolean	-	Specifies whether LINK68 elements are used to model the composite strand (default for quench velocity-based approach)		
I_init	float	A	Initial current in the analysis		
build_electric_circuit	boolean	-	Specifies whether the independent current source, dump re sistor, and inductor are built in ANSYS APDL		
transient_electric_analysis	boolean	-	Specifies whether the magnet discharge is simulated		
R_dump	float	Ω	Dump resistor value added to the circuit; only i {electric_ansys_elements, build_electric_circuit, tran sient_electric_analysis} = true		
L_diff_filename	string	-	Filename of the differential inductance as a function of current (see Fig. 5.1); only if {electric_ansys_elements build_electric_circuit, transient_electric_analysis} = true		
V_th	float	V	Threshold voltage value at which the quench is detected only if {electric_ansys_elements, build_electric_circuit transient_electric_analysis} = true		
t_delay	float	s	Time after which the current source is disconnected from the circuit after reaching the threshold voltage; only if {electric_ansys_elements, build_electric_circuit, tran sient_electric_analysis} = true		
I_discharge_criterion	float	A	Current value at which the simulation ends during the discharge; only if {electric_ansys_elements build_electric_circuit, transient_electric_analysis} = true		
temperature_settings					
type	string	-	Type of the temperature profile (gaussian / uniform)		
T_bath	float	K	Initial bath temperature		
T_max	float	K	Peak temperature in the initial profile		

B_initially_quenched_winding	float	Т	Magnetic field which serves for calculating the critical temperature to estimate the initial temperature Gaussian			
	1 1		profile; only if type = "gaussian" Specifies whether the output temperature profile is plotted			
png_temperature_output	boolean	-	as the simulation continues			
geometry_settings	_					
dimensionality	string	-	Geometry dimensionality (multiple_1D)			
type	string	-	Geometry type (slab / high_order_corrector)			
d_strand	float	mm	Diameter of the composite strand			
d_ins	float	mm	Diameter of the composite strand with insulation			
a_strand	float	mm	Side of the square resin area assigned to one composite strand			
u_ins	float	-	Coefficient of the insulation element area			
u_resin	float	-	Resin packing coefficient			
e_coil	float	mm	Length of the coil long side; only if type = "high_order_corrector"			
d_coil	float	mm	Length of the coil short side; only if type = "high_order_corrector"			
rad_coil	float	mm	Initial radius of the coil between its long and short side; only if type = "high_order_corrector"			
L_strand	float	m	Length of the modelled strand; only if type = "slab"			
n_windings	int	-	Total number of analysed windings			
n_windings_in_layer	int	-	Total number of analysed layers; only if type = "slab"			
n_layers	int	-	Number of layers in the coil; only if type = "high_order_corrector"			
n_turns_in_layer	int	-	Number of layers in the coil; only if type = "high_order_corrector"			
which_layer_first_in_analysis	int	-	Layer number from which the geometry is created; only if type = "high_order_corrector"			
which_turn_first_in_analysis	int	-	Turn number from which the geometry is created; only if type = "high_order_corrector"			
insulation_analysis	boolean	-	Specifies whether the insulation layer is modelled			
n_divisions_ins	int	-	Number of mesh divisions across the insulation elements			
n_divisions_strand	int	-	Number of mesh divisions along the strand; only if type = "slab"			
n_divisions_e_coil	int	-	Number of mesh divisions along the long side of the coil; only if type = "high_order_corrector"			
n_divisions_d_coil	int	-	Number of mesh divisions along the short side of the coil; only if type = "high_order_corrector"			
n_divisions_rad	int	-	Number of mesh divisions along the each of curvatures of the coil; only if type = "high_order_corrector"			

Bibliography

[1]	M. Wilczek, "Finite element analysis of magneto-therma	l transient	effects i	in superconducting	g accelerator
	magnets," Master's thesis, Lodz University of Technolog	y, January	2020.		