

2015/01/09

Rear Wheel Bearing - Adjust (REN8303-13)

SMCS - 4201

i06039735

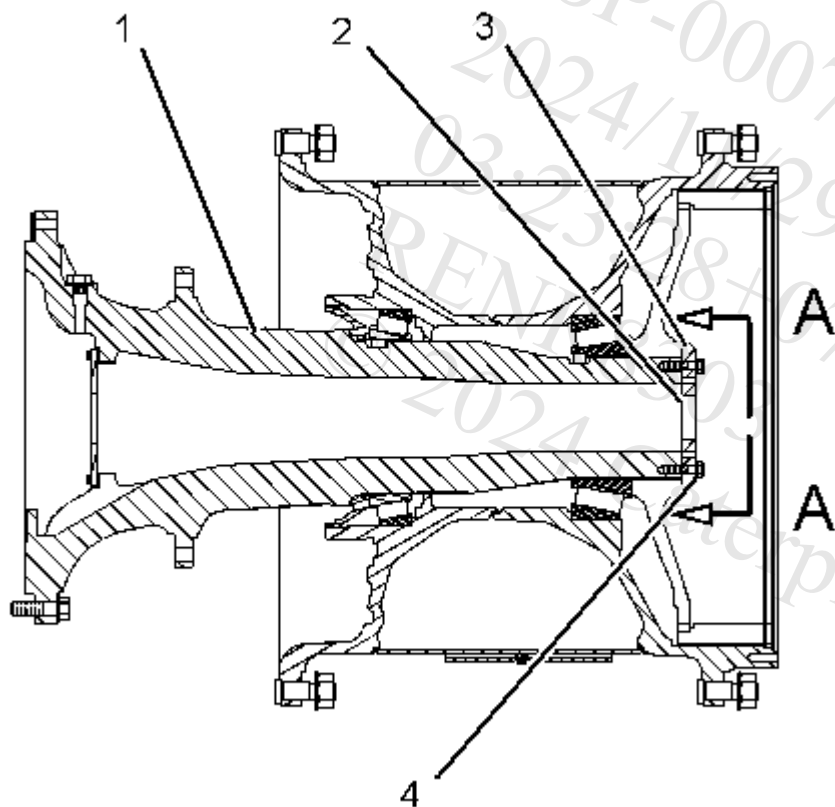


Illustration 1

g01631603

- (1) Spindle
- (2) Shims
- (3) Retainer plate
- (4) Bolts

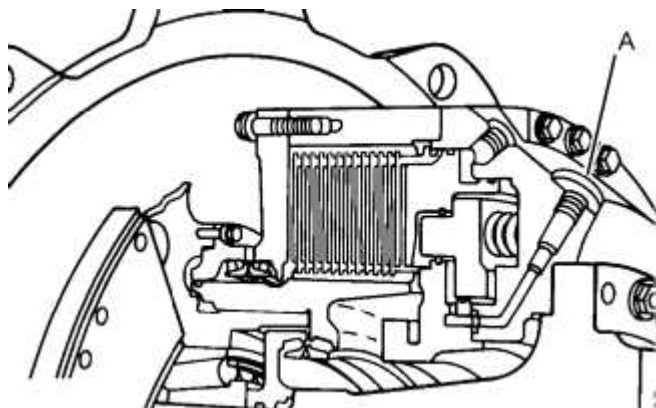


Illustration 2

g01631604

Typical example
Location of the purge valve for the parking brakes

Note: Before performing this adjustment, you will need to release the brakes. In order to release the parking brake, remove the purge valve from opening (A). This opening is marked with a "P". Then, connect a manual hydraulic pump or an electric hydraulic pump to opening (A). Continue to operate the pump until the brake is fully released. To learn more about releasing the brakes, refer to the information about towing that is located in the Air System and Brakes Systems Operation and Testing and Adjusting.

NOTICE

If it becomes necessary to use an outside hydraulic source to release the parking brake, do not exceed the relief pressure of the parking and secondary brake control valve. Exceeding the relief pressure can damage seals and other parts in the circuit.

Adjustment Procedure

Reference: Refer to Tool Operating Manual, [NEHS0910](#), "193-4121 Rear Wheel Bearing Preload Adjuster for 777 through 777G Off-Highway Trucks".

1. Thoroughly, clean all of the tapped holes in the end of spindle (1).
2. Install retainer plate (3) with six new bolts (4) to spindle (1). Install bolts (4) so that each bolt is equally spaced around retainer plate (3).

Note: Do not use any shims (2) at this time.

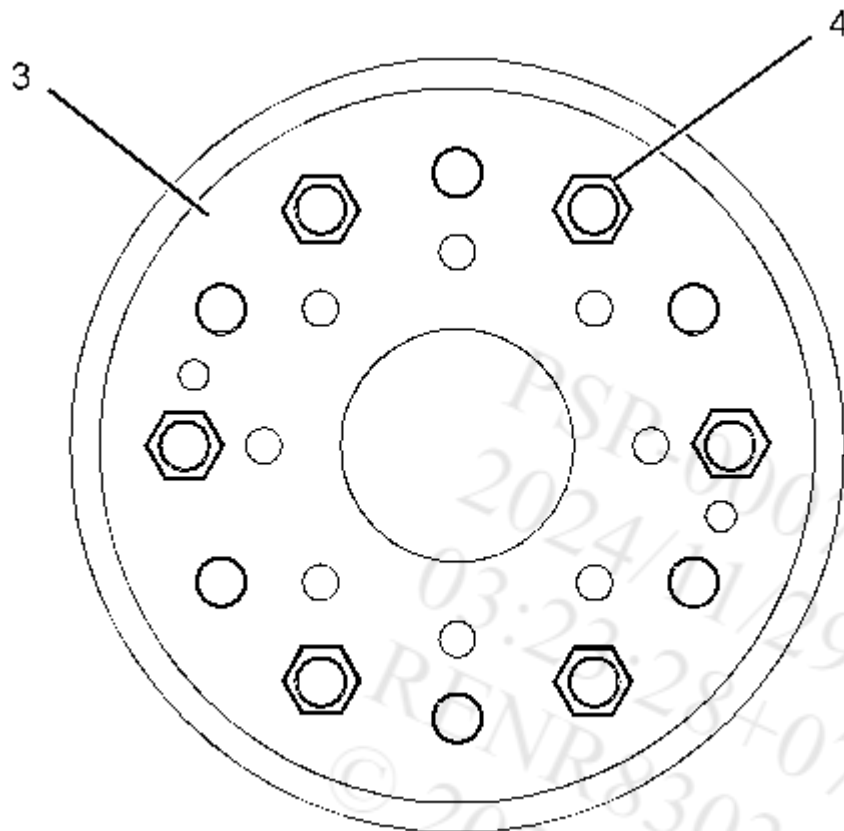


Illustration 3

g01631606

View A-A

(3) Retainer plate

(4) Bolts

3. Tighten bolts (4) to a torque of 140 N·m (103 lb ft). Turn the wheel for two complete revolutions.
4. Tighten bolts (4) to 140 N·m (103 lb ft). Turn the wheel for two complete revolutions.
5. Loosen bolts (4) by 120 degrees. Turn the wheel for two complete revolutions.
6. Tighten bolts (4) to a torque of 110 N·m (81 lb ft). Turn the wheel for two complete revolutions.
7. Tighten bolts (4) to a torque of 110 N·m (81 lb ft). Turn the wheel for two complete revolutions.
8. Use a depth micrometer to determine the distance from the outside face of retainer plate (3) to the end of spindle (1). Measure the depth of the two holes that are opposite to each other on retainer plate (3). Calculate an average depth from these two measurements.
9. Use an outside micrometer to determine the thickness of retainer plate (3) at the bolt holes. Measure the thickness of retainer plate (3) at the same locations that were used in Step 8. Calculate an average thickness from these two measurements.
10. Find the gap between the end of spindle (1) and the inside face of retainer plate (3). To find this gap, subtract the dimension that was found in Step 9 from the dimension that was found

in Step 8.

11. Calculate the shim pack thickness. Add 0.381 mm (0.0150 inch) to the distance that was found in Step 10.
12. Assemble shim pack (2) so that the shim pack thickness is the value that was found in Step 11. Remove bolts (4) and retainer plate (3).
13. Install shim pack (2).
14. Install retainer plate (3) over shim pack (2). Install ten new bolts (4).
Note: Apply **9S-3263** Thread Lock Compound on the threads of ten new bolts (4).
15. Evenly torque opposite bolts (4) to 250 ± 15 N·m (185 ± 10 lb ft).
16. Repeat Step 15 until no further movement of bolts (4) occurs.

PSP-0007BF75

2024/11/29

03:23:09+07:00

i01215127

© 2024 Caterpillar Inc.

PSP-0007BF75
2024/11/29
03:23:28+07:00
REN8303
© 2024