

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)


[openstudio.net](http://openstudio.net)

## Introduction

### Notes

The basic workflow for OpenStudio starts in the SketchUp Plug-in creating the building envelope and assigning space attributes.

Next, the model is loaded in the OpenStudio application, shown on this page. You can step through the tabs from top to bottom. For a basic workflow the resource tabs and many others are not necessary. A minimum workflow is shown in the box to the right.

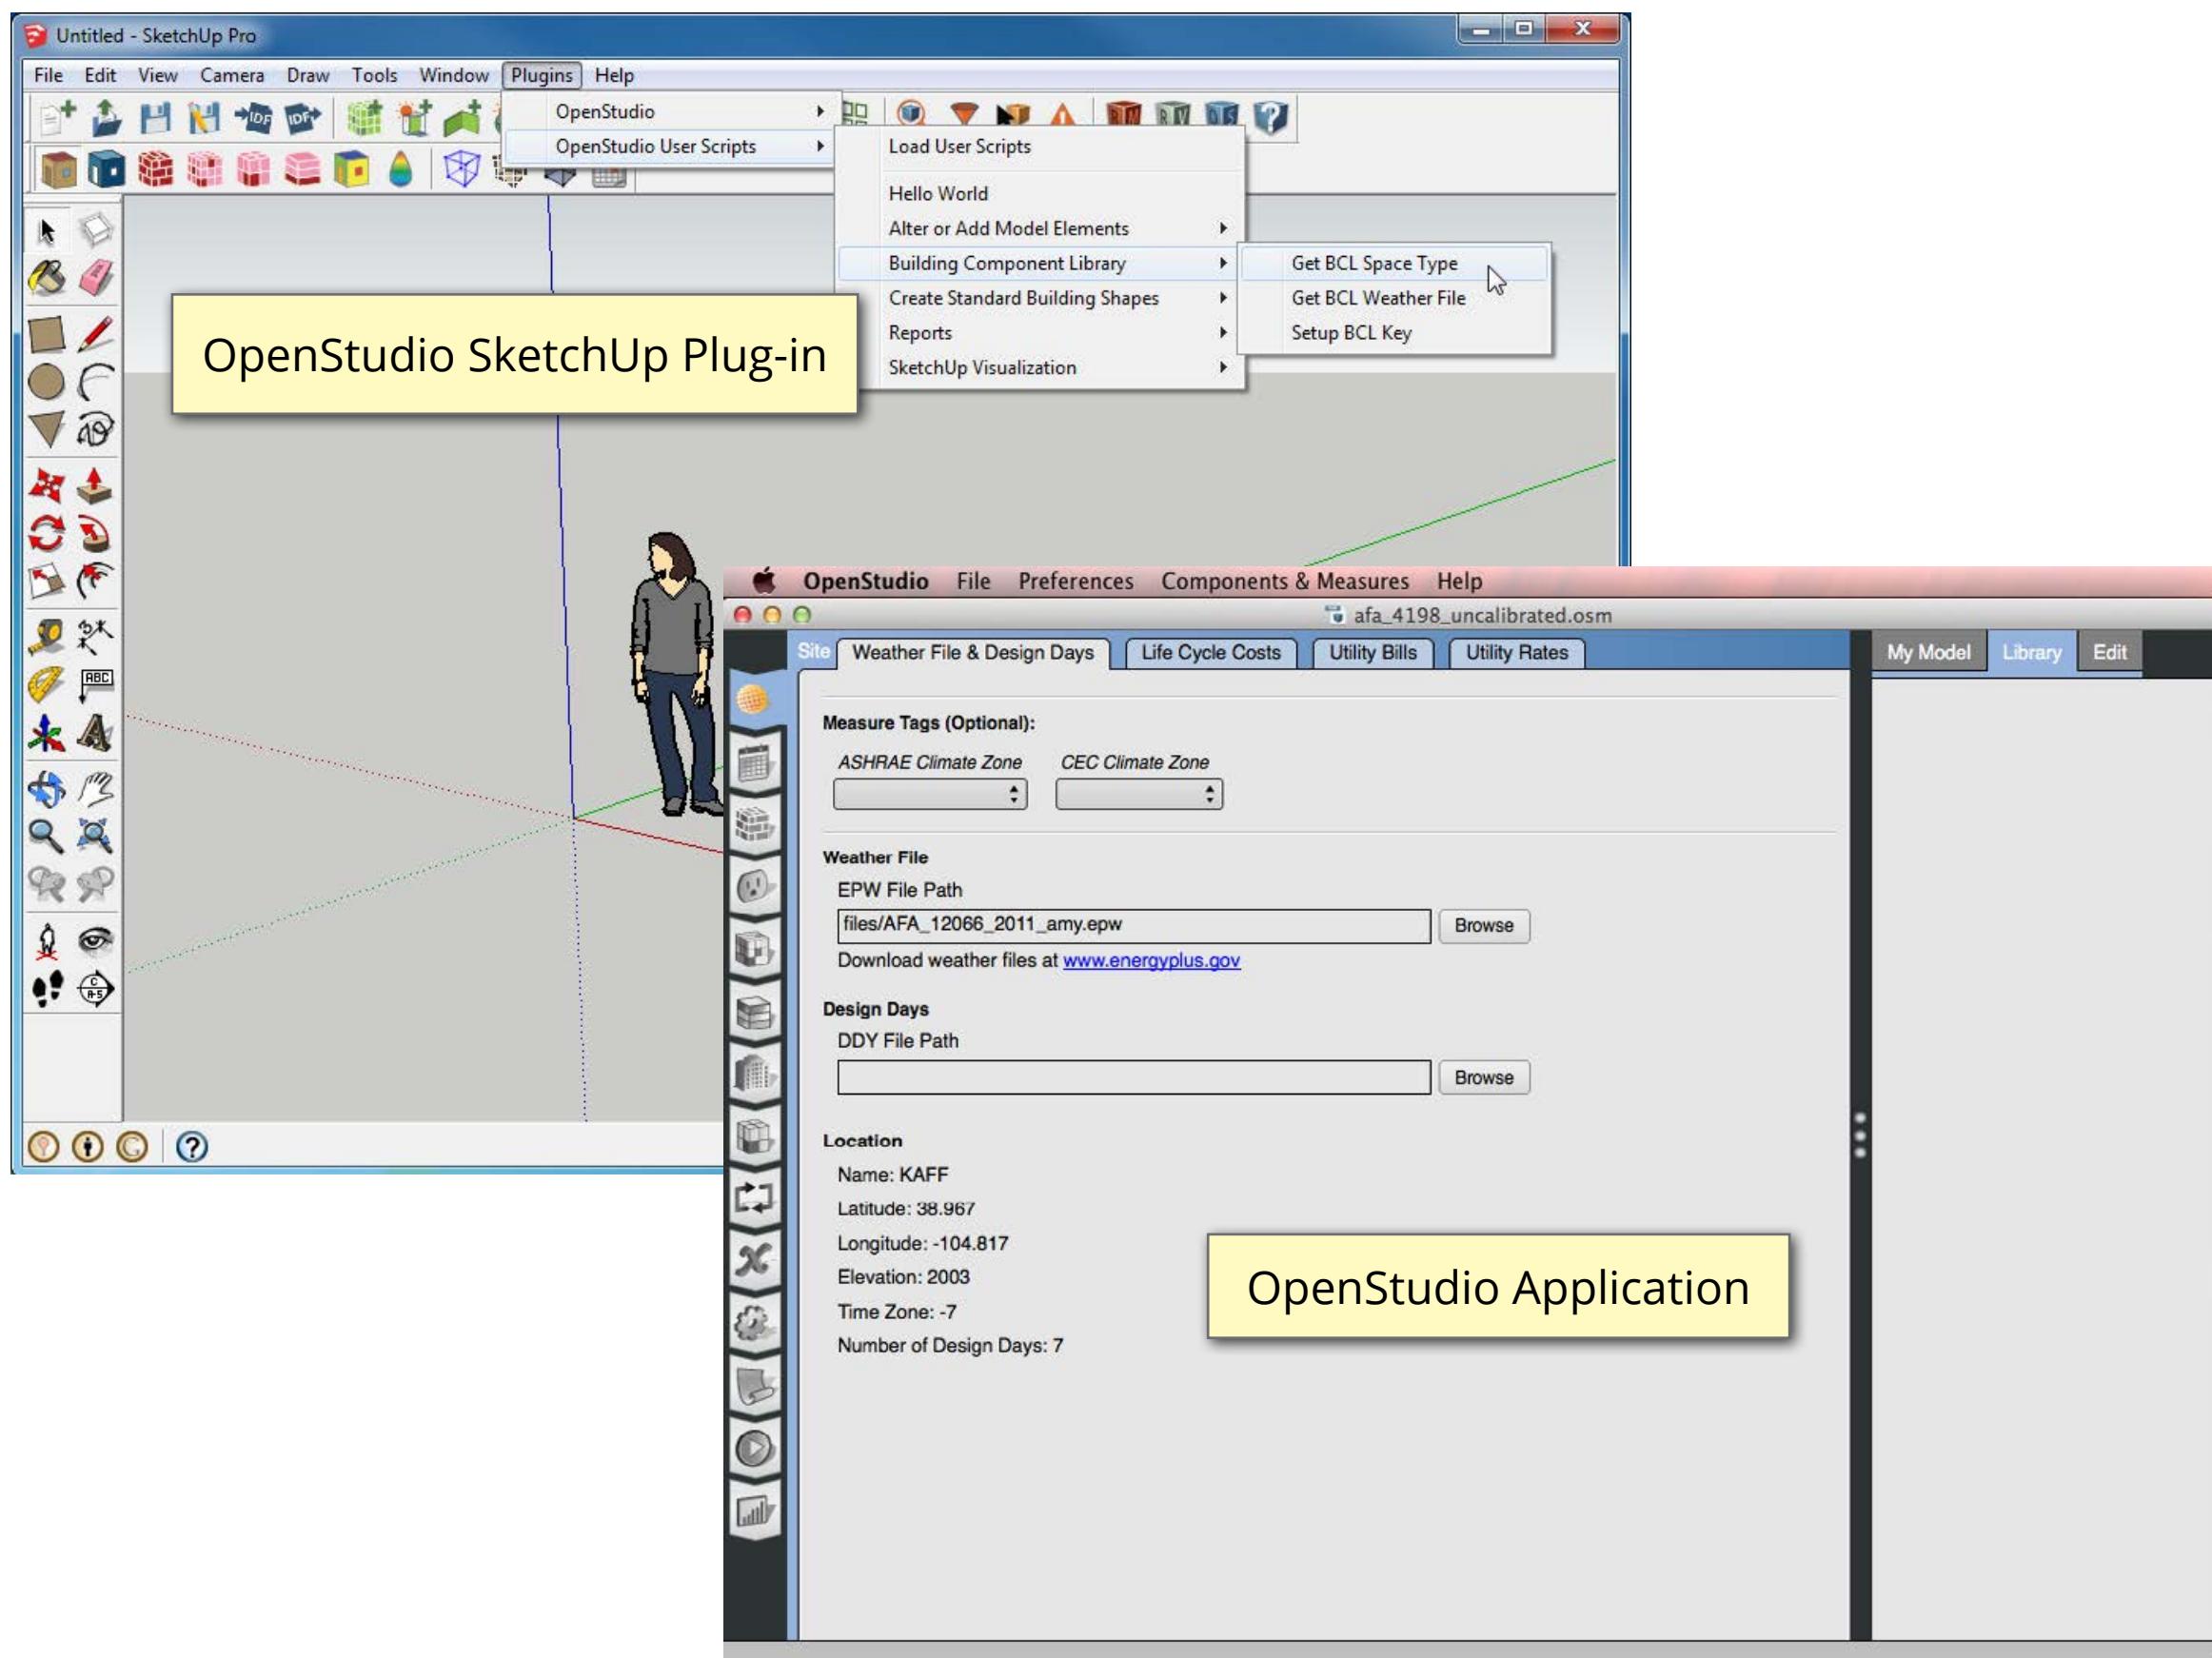

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)

## How to Use this Guide

### Notes

This PDF is an interactive guide. Click on the SketchUp Plug-in icons below or the major tab icons at the right to jump to the appropriate pages. Sub-tabs menu items, and pink labels can also be clicked to jump to another view.

You can also navigate by using the PDF bookmarks.

### Minimal Workflow Through OpenStudio Application

Site

Interactive

Thermal Zones

HVAC Systems

Run Simulation


Results Summary

### Key SketchUp Plug-in Tools

Choose Template



Click icons at left for SketchUp Plug-in Pages

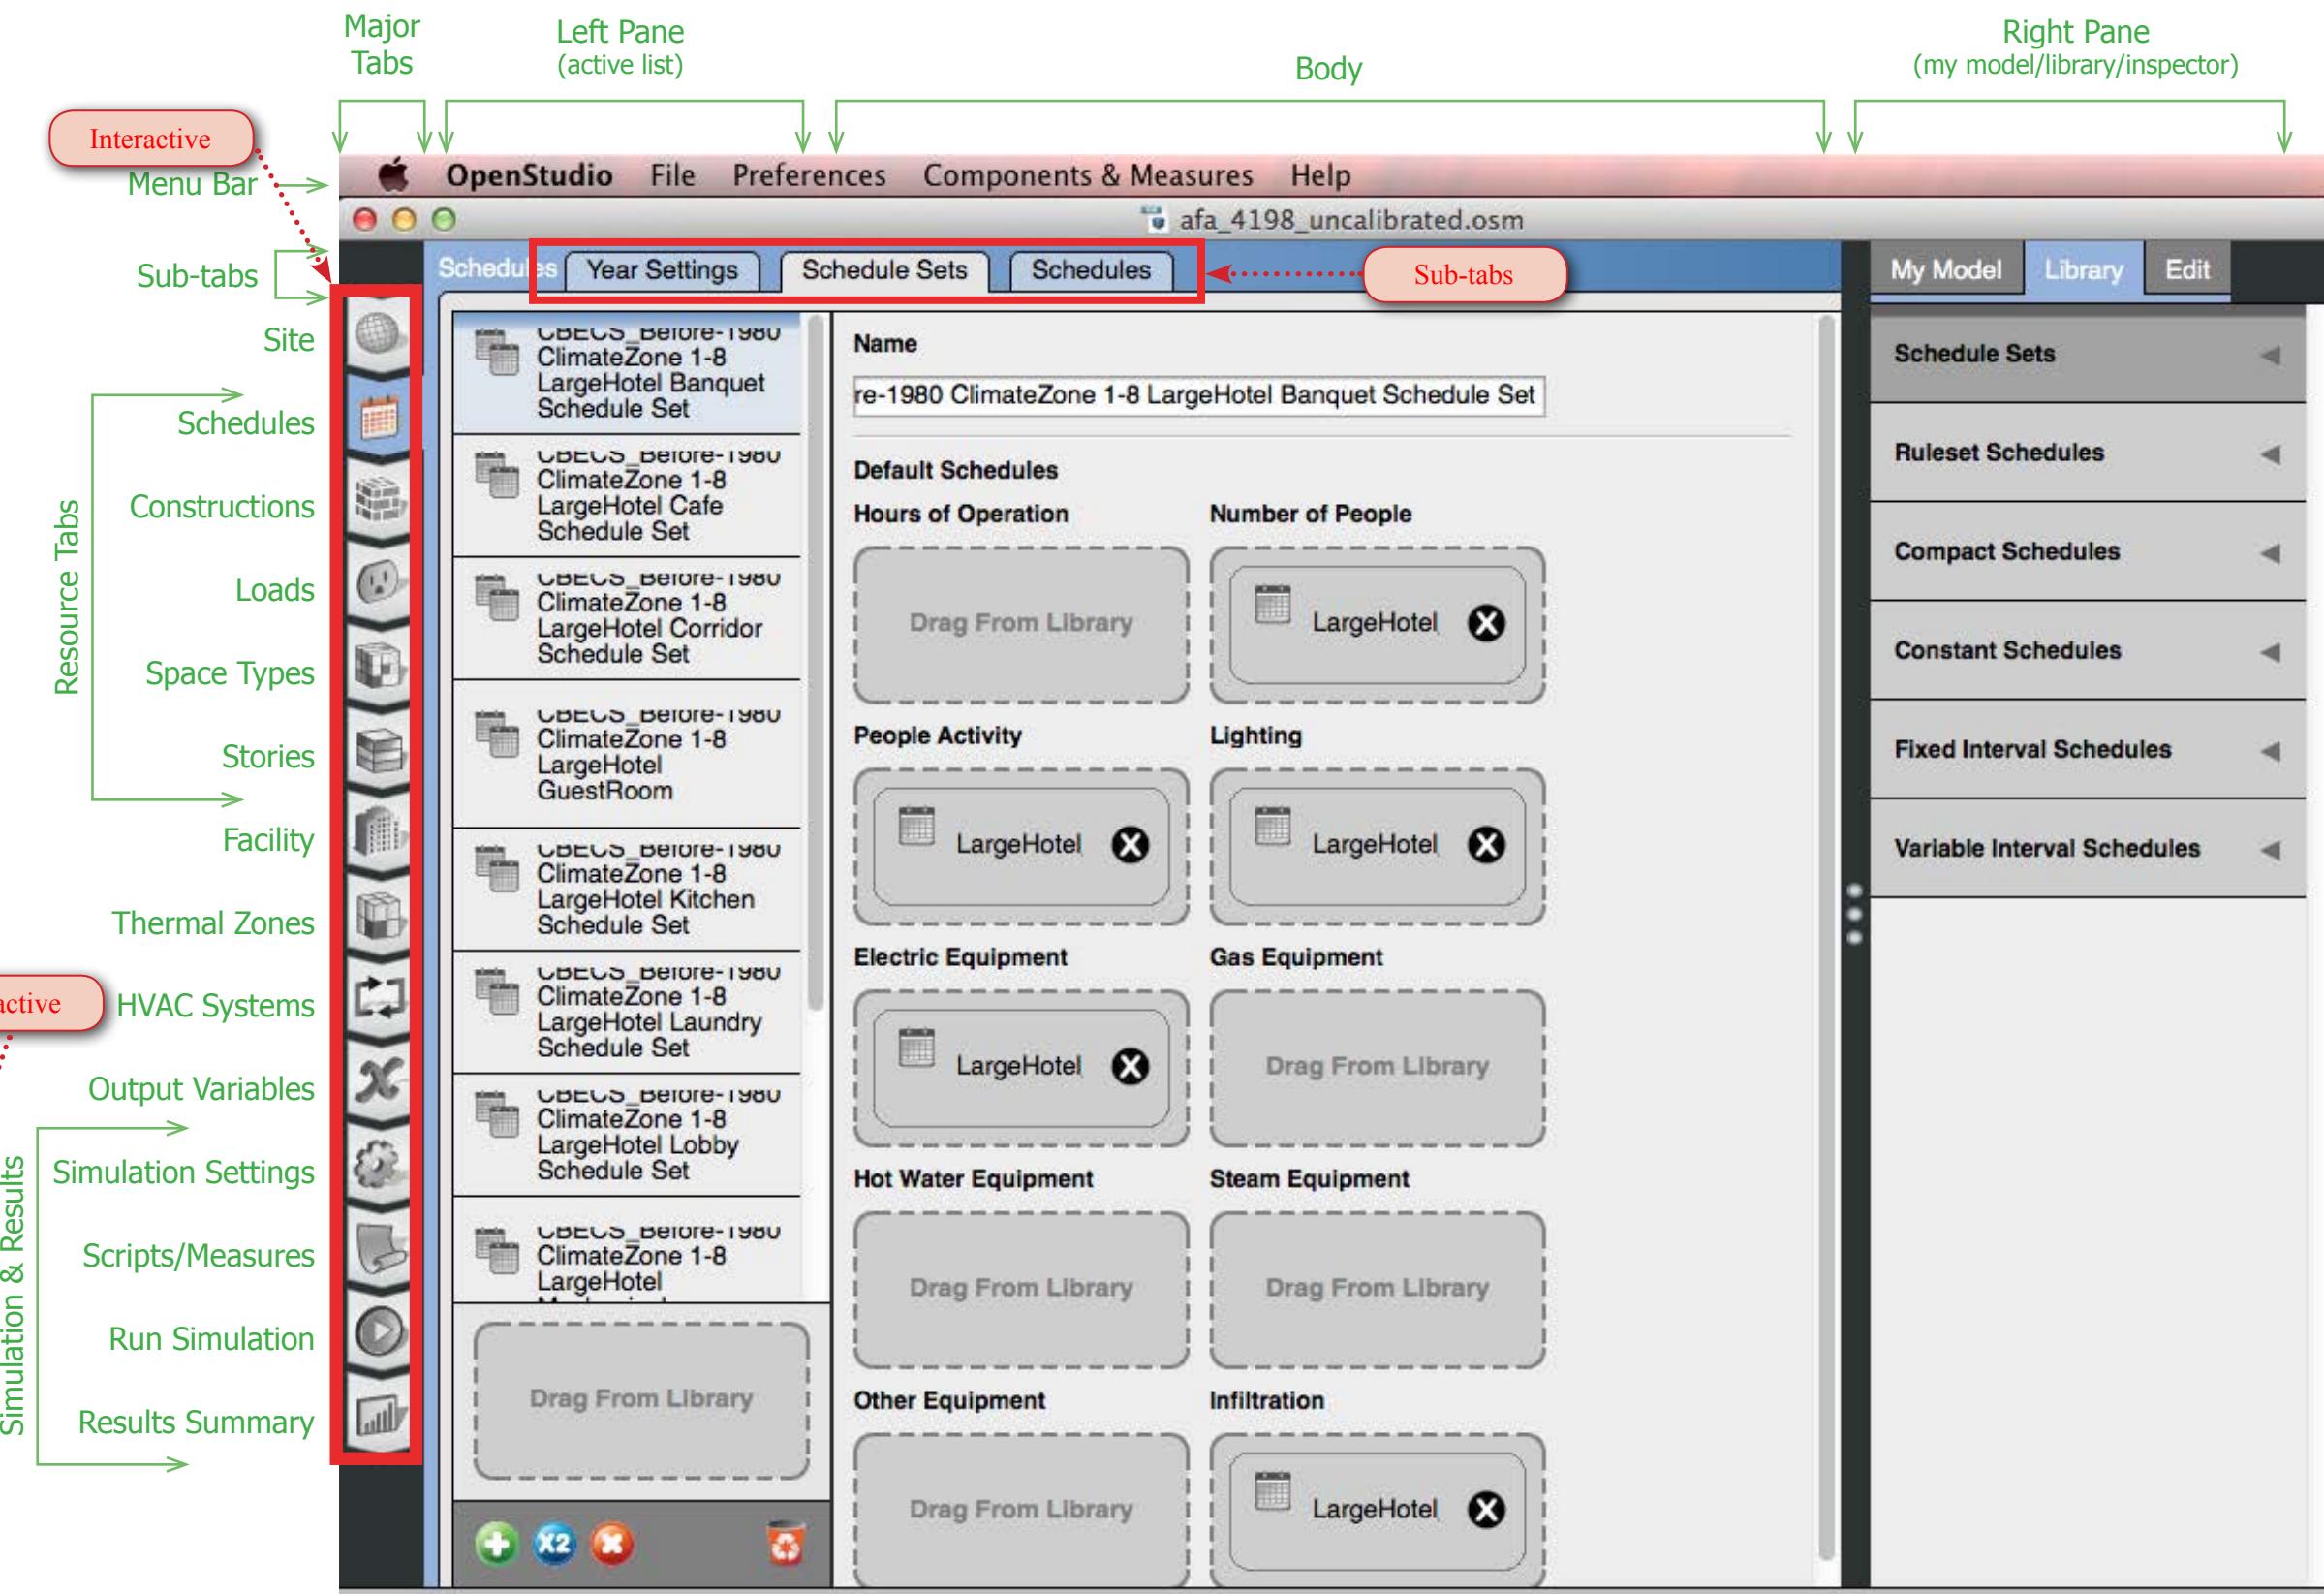

# OpenStudio 1.7.0 Basic Workflow Guide

[openstudio.net](http://openstudio.net)

## SketchUp - Choose Template

### Notes

Templates contain data for constructions, loads, and schedules for 6 vintages across all U.S. climate zones. Templates do not contain any geometry. Load templates by using the menu under "Extensions/OpenStudio User Scripts/On-Demand Template Generators/Space Type and Construction Set Wizard". Then select your type of building, vintage, and climate zone from the dialog. You can also get standard space types for that template by choosing "true" on the dialog. Space types can define internal loads, schedule sets, and construction sets. It can take a few minutes to load.

Each of these building type-specific templates are loaded with construction, schedule, and internal load data for various vintages and for all U.S. climate zones.

### Note

The first time you request a specific combination of inputs it will take some time to download the component. The components are saved to your local database; they don't have to be downloaded next time you make the same request.

### Key SketchUp Plug-in Tools

Choose Template





Building Envelope



Surface & Space Attributes



Click Icons at left  
for SketchUp  
Plug-in Pages

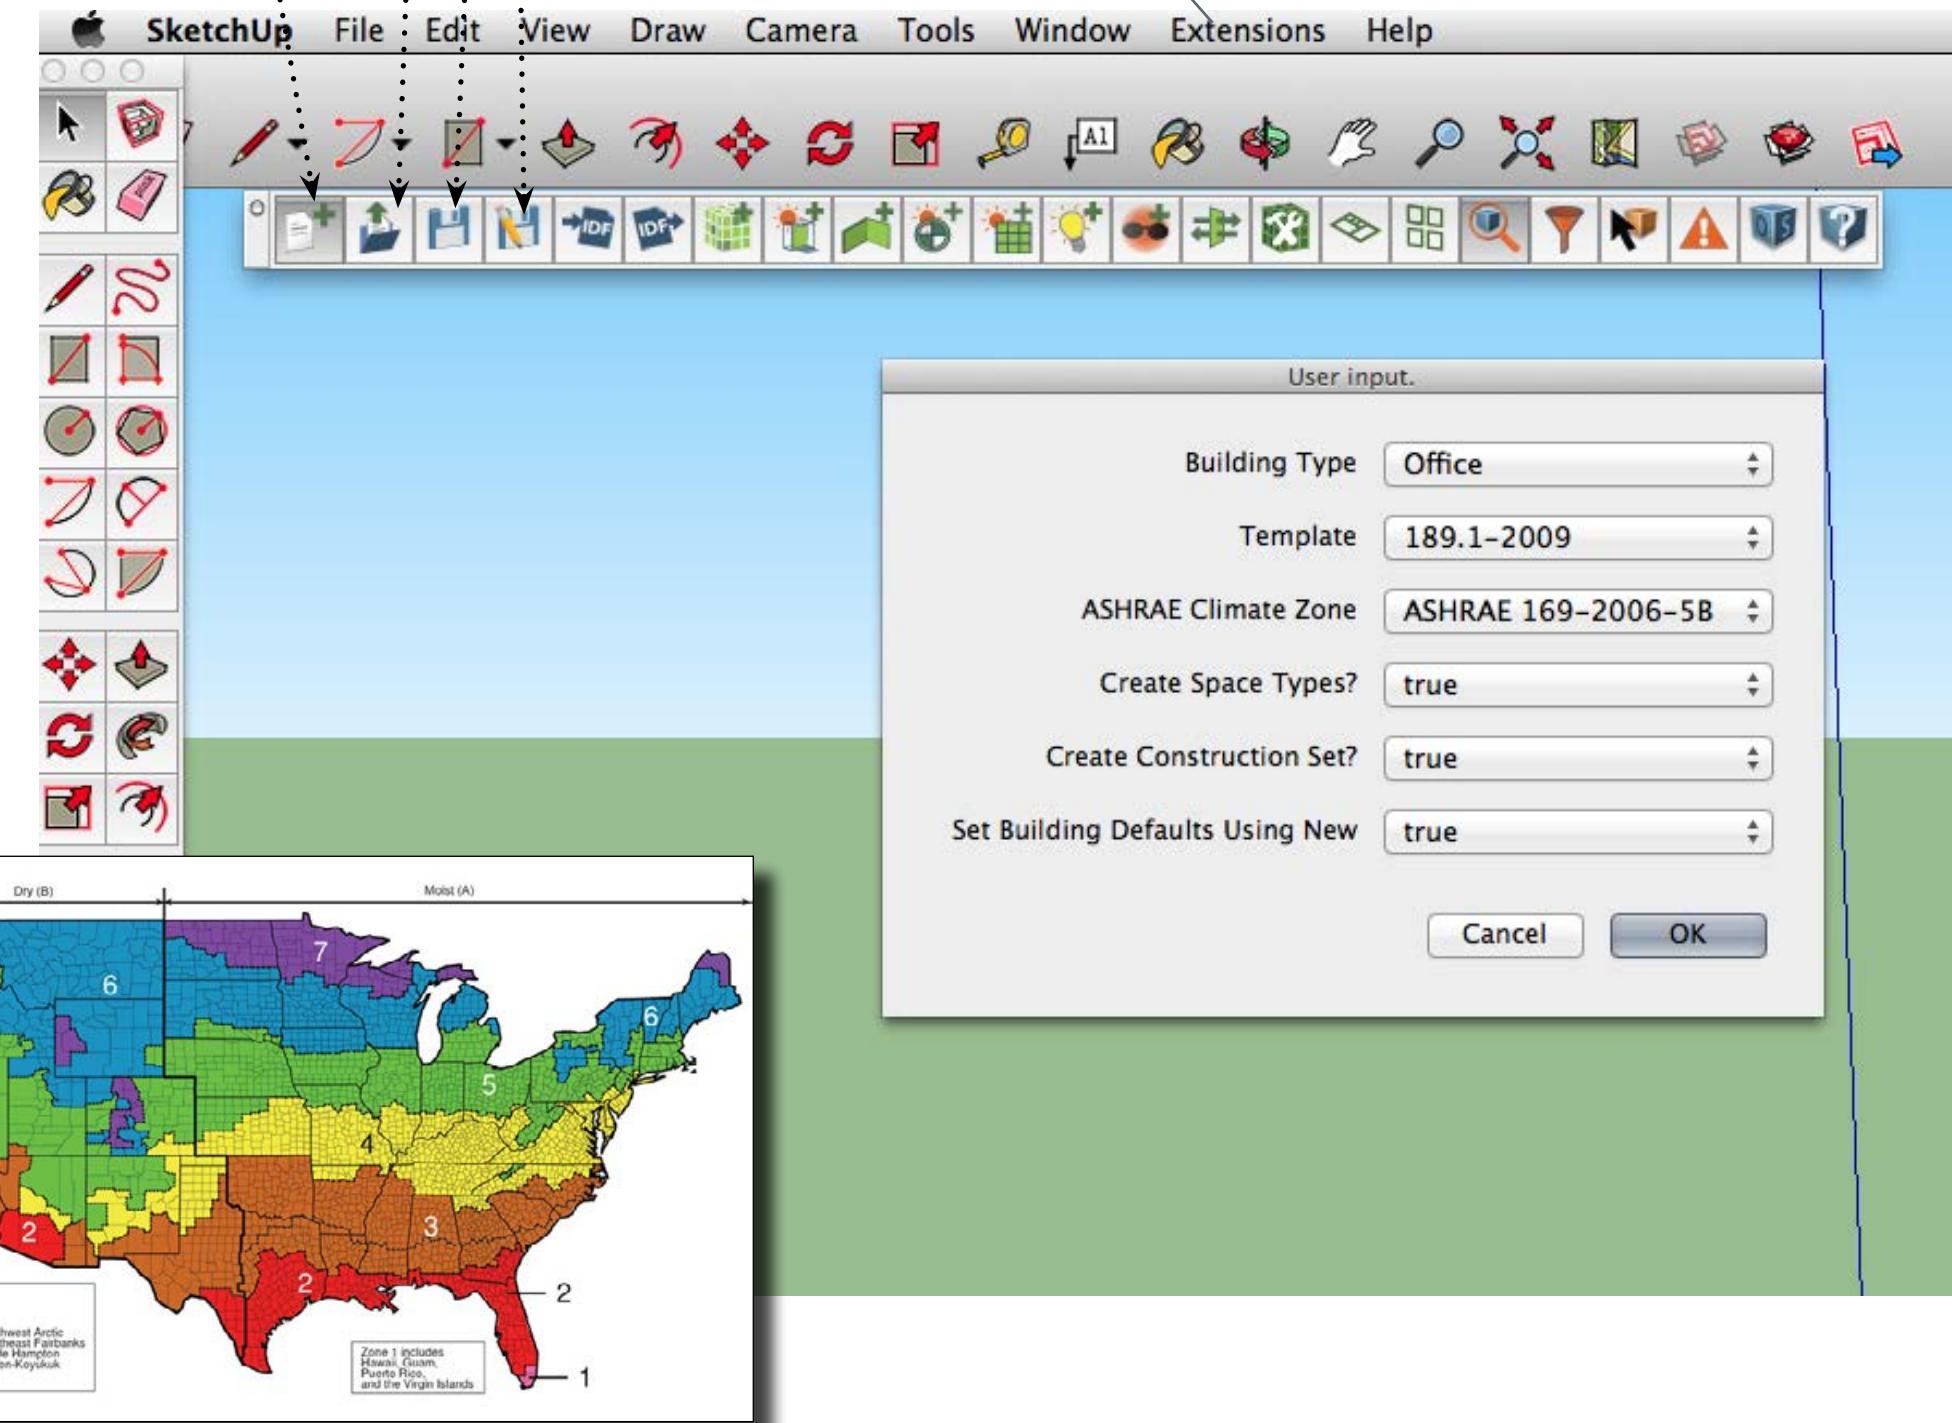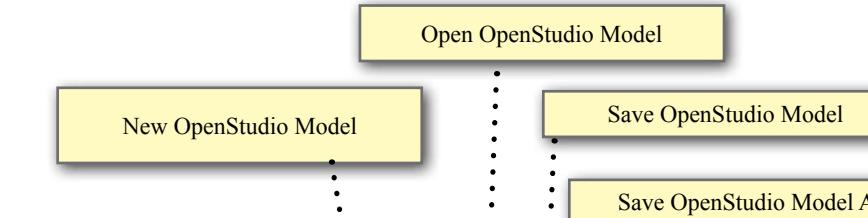

# OpenStudio 1.7.0 Basic Workflow Guide (June 2015)

openstudio.net

## SketchUp - Surface & Space Attributes



### Notes

After defining the building envelope, you use the Surface Matching tool to set the boundary conditions. These will allow thermal connections between spaces and will inform OpenStudio about what construction to apply.

Then you can use the Space Attributes tool to assign various attributes to a space. There is a matching render mode for each space attribute. To apply space attributes, select one or more spaces, and then click the Space Attributes tool.

The image to the right shows a composite of the same model viewed in different render modes. In practice your entire model will render in a single mode at a given time. This example is just to demonstrate the render modes side by side.

To run your simulation click the OpenStudio button to Launch your model in OpenStudio and [then go to the Run tab](#).

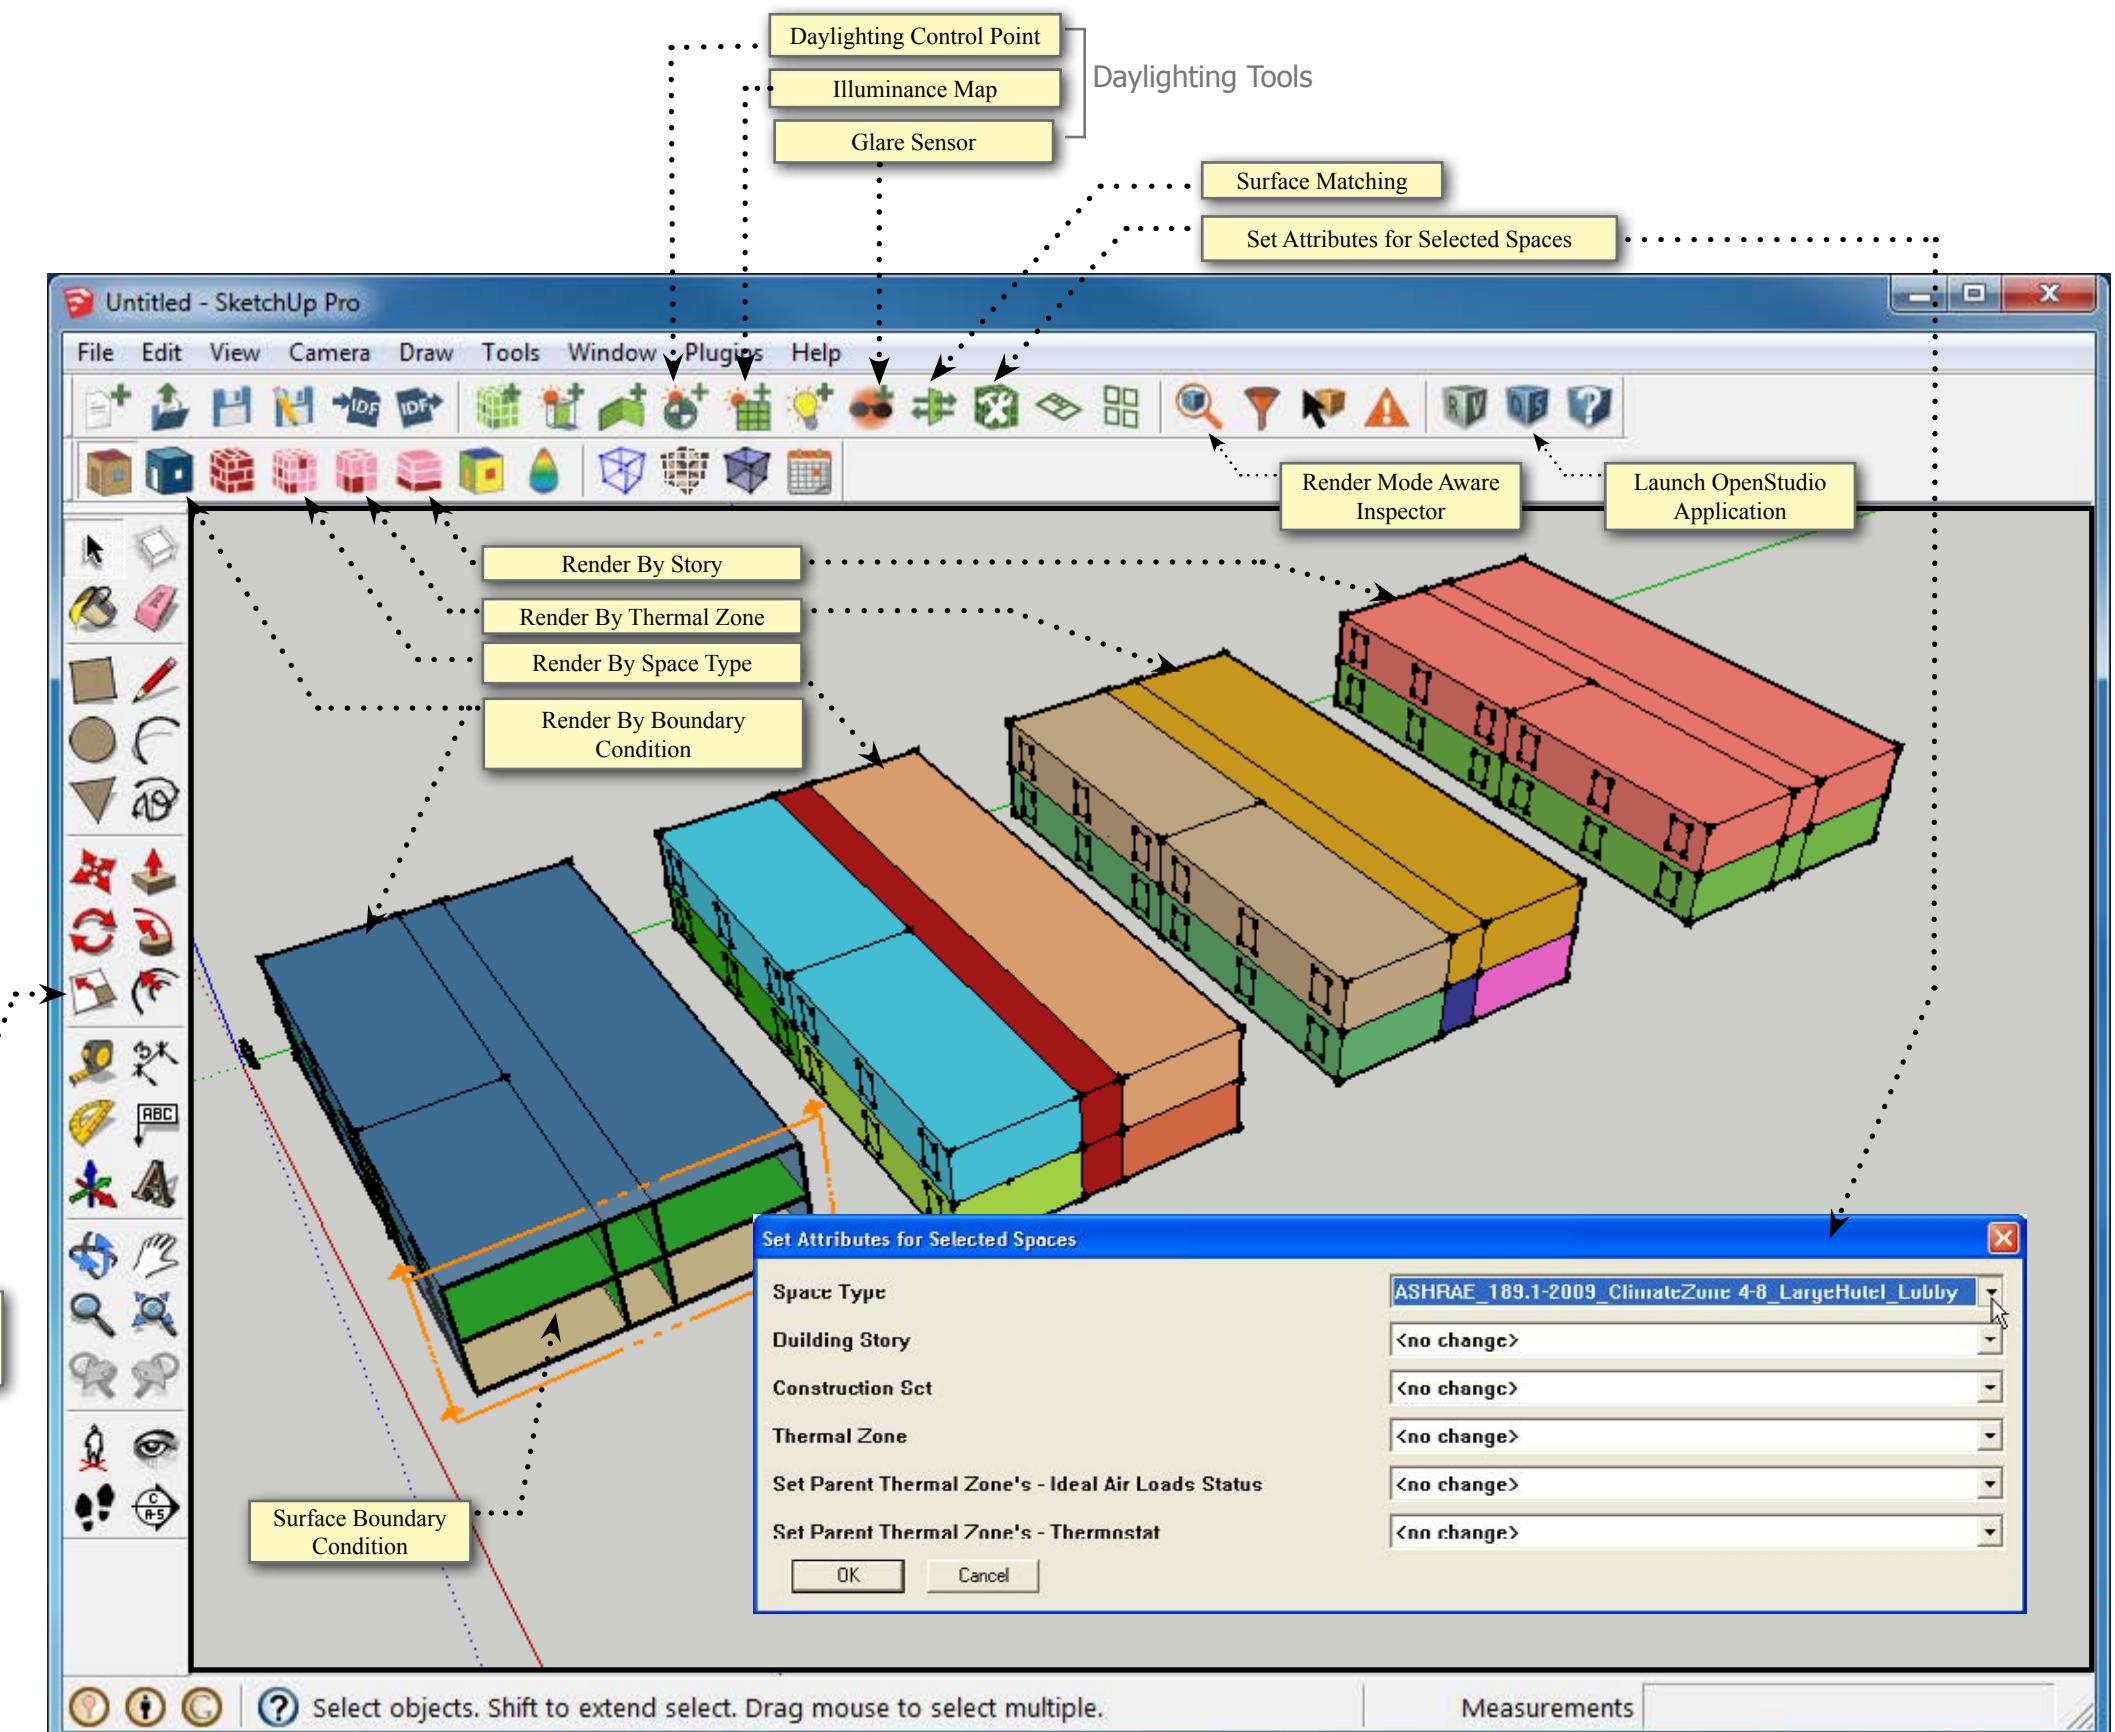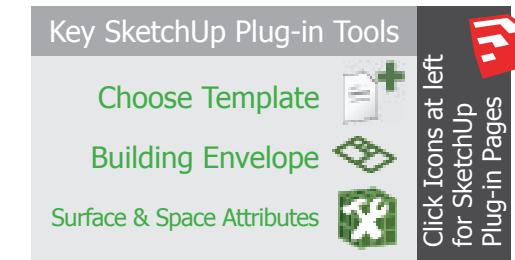

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)


[openstudio.net](http://openstudio.net)

## OpenStudio and Help Menu

### Notes

The OpenStudio menu contains the about OpenStudio information to check version numbers.

The help menu can take you to the OpenStudio website or you can search for topics.

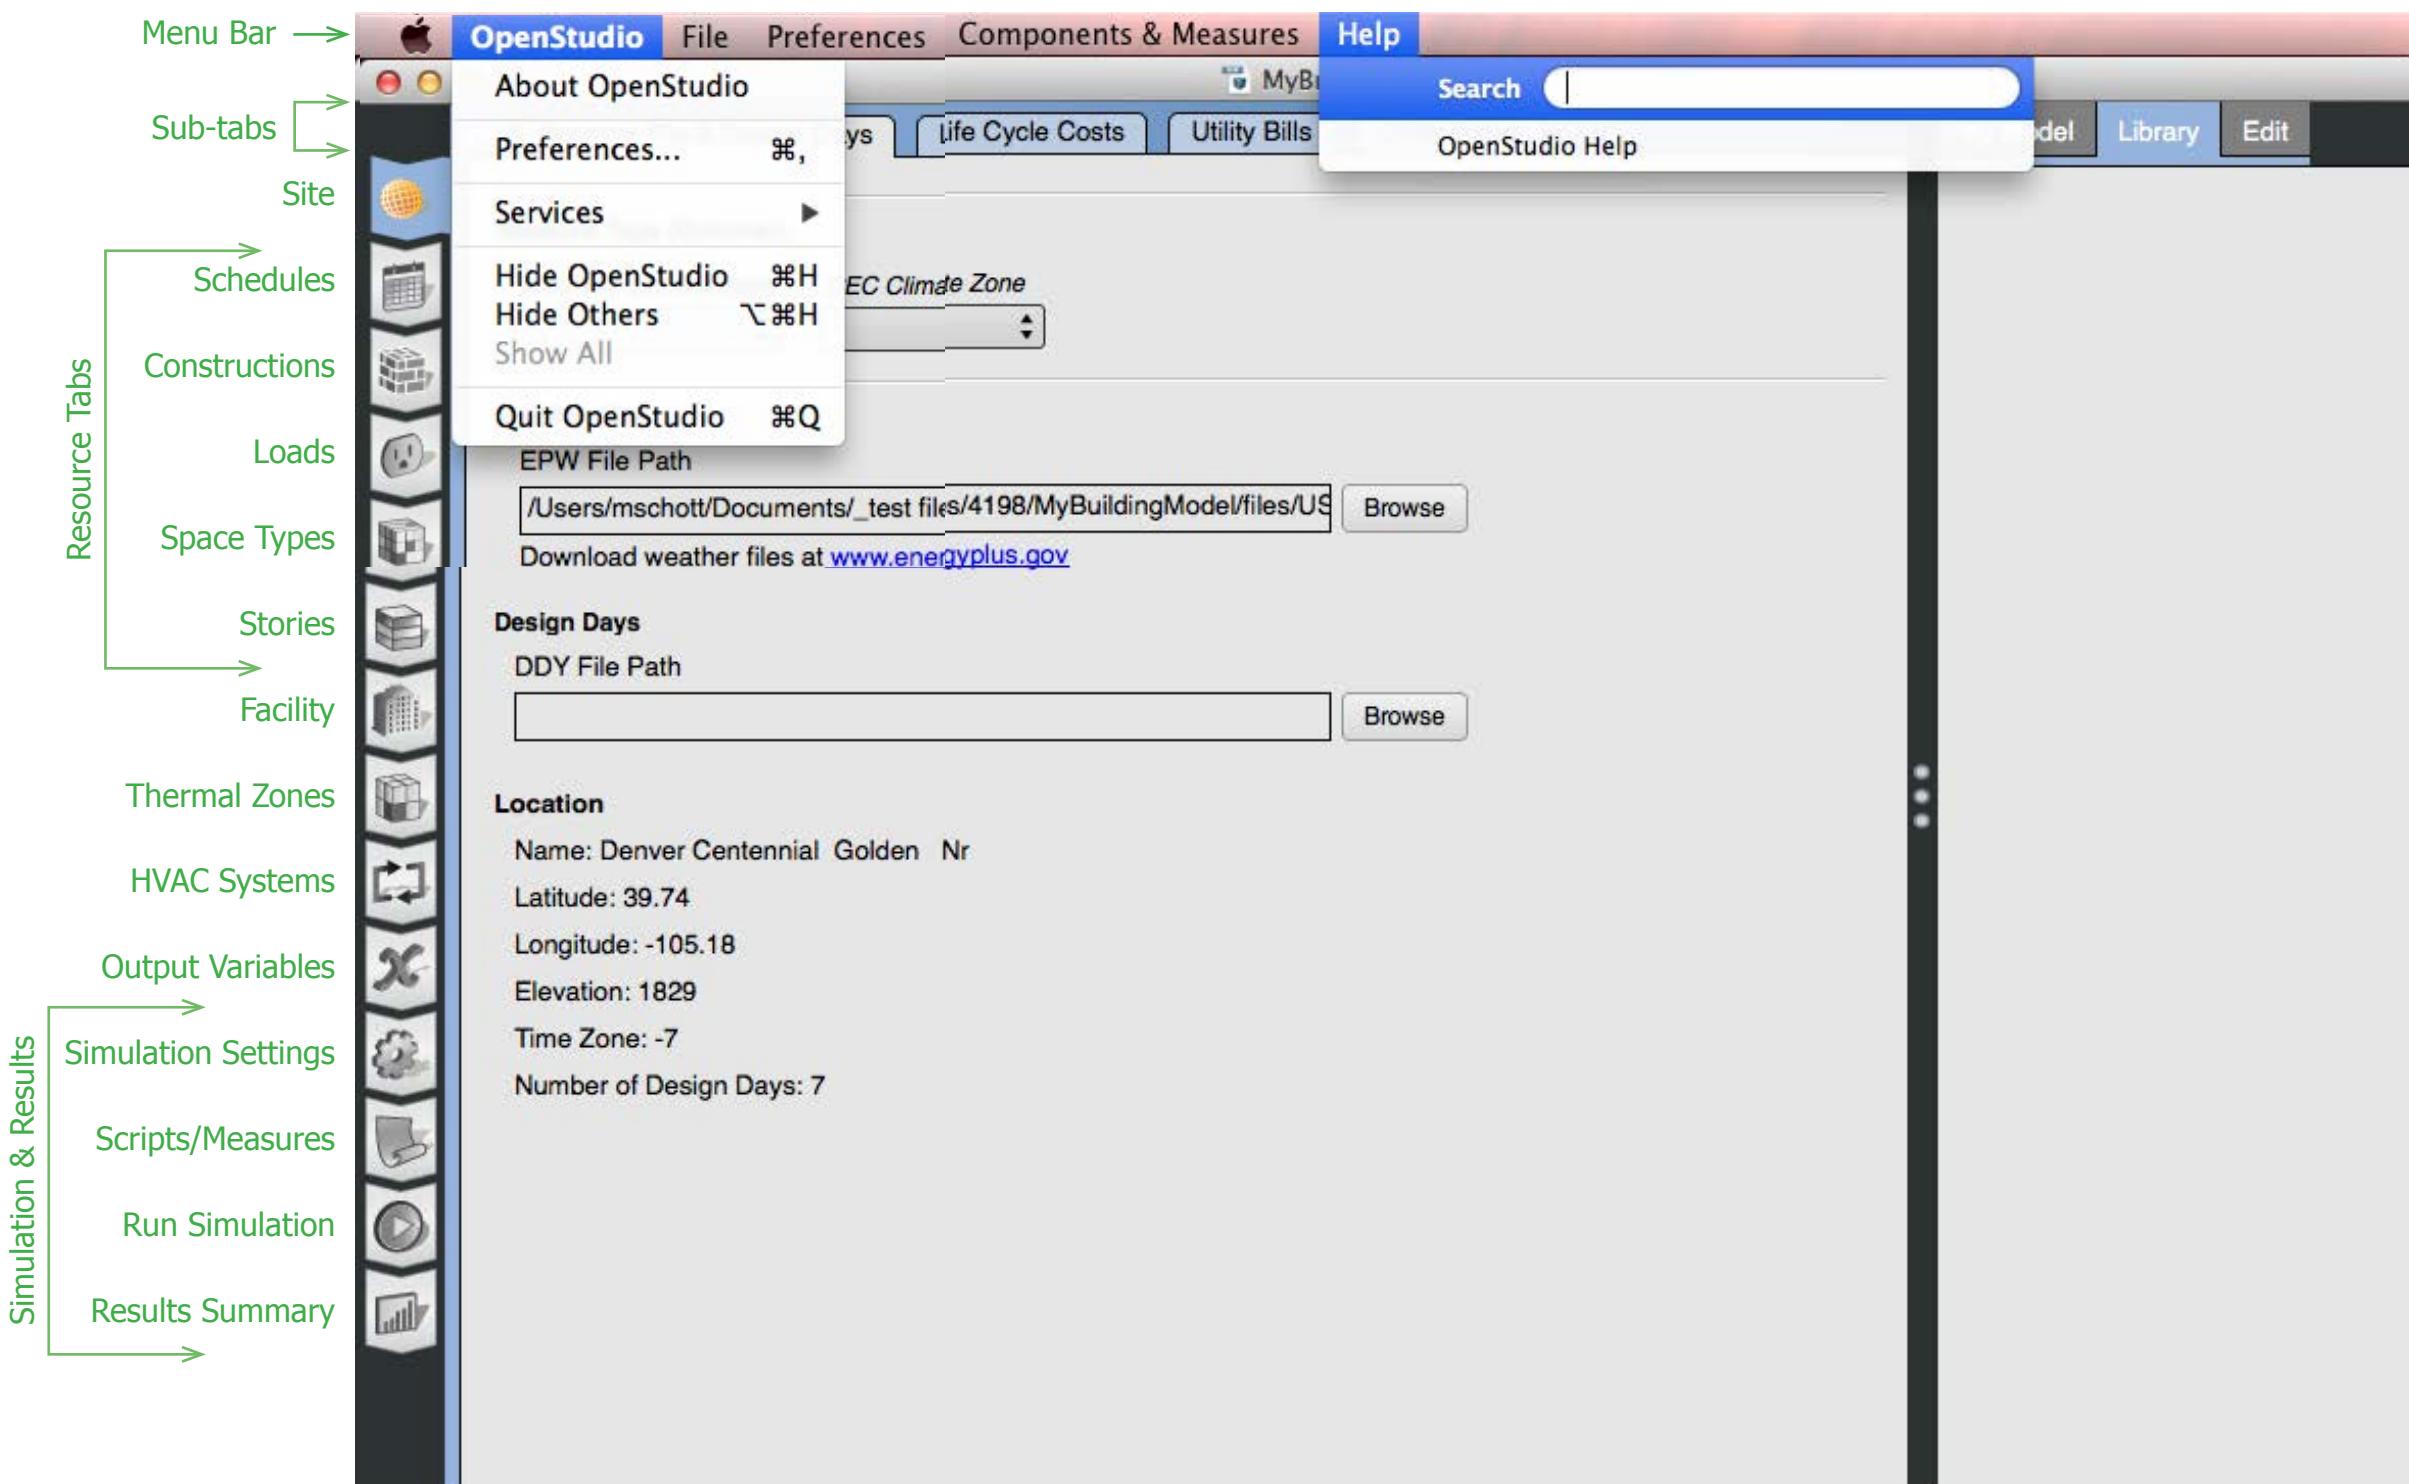

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)

## OpenStudio Application File


### Menu — File

#### Notes

If you launch the OpenStudio application from the SketchUp Plug-in, your open file will automatically open in the application. But to save the file or open a new file, select file open from the menu.

When you save an OSM model in the OpenStudio Application or the SketchUp Plug-in a folder is saved next to the OSM file. This folder contains external resources such as the weather file, scripts, and simulation results.

Load Library is also a very important feature. This allows you to load building component libraries for specific building types. These libraries are the same as those used in the SketchUp Plug-in templates.

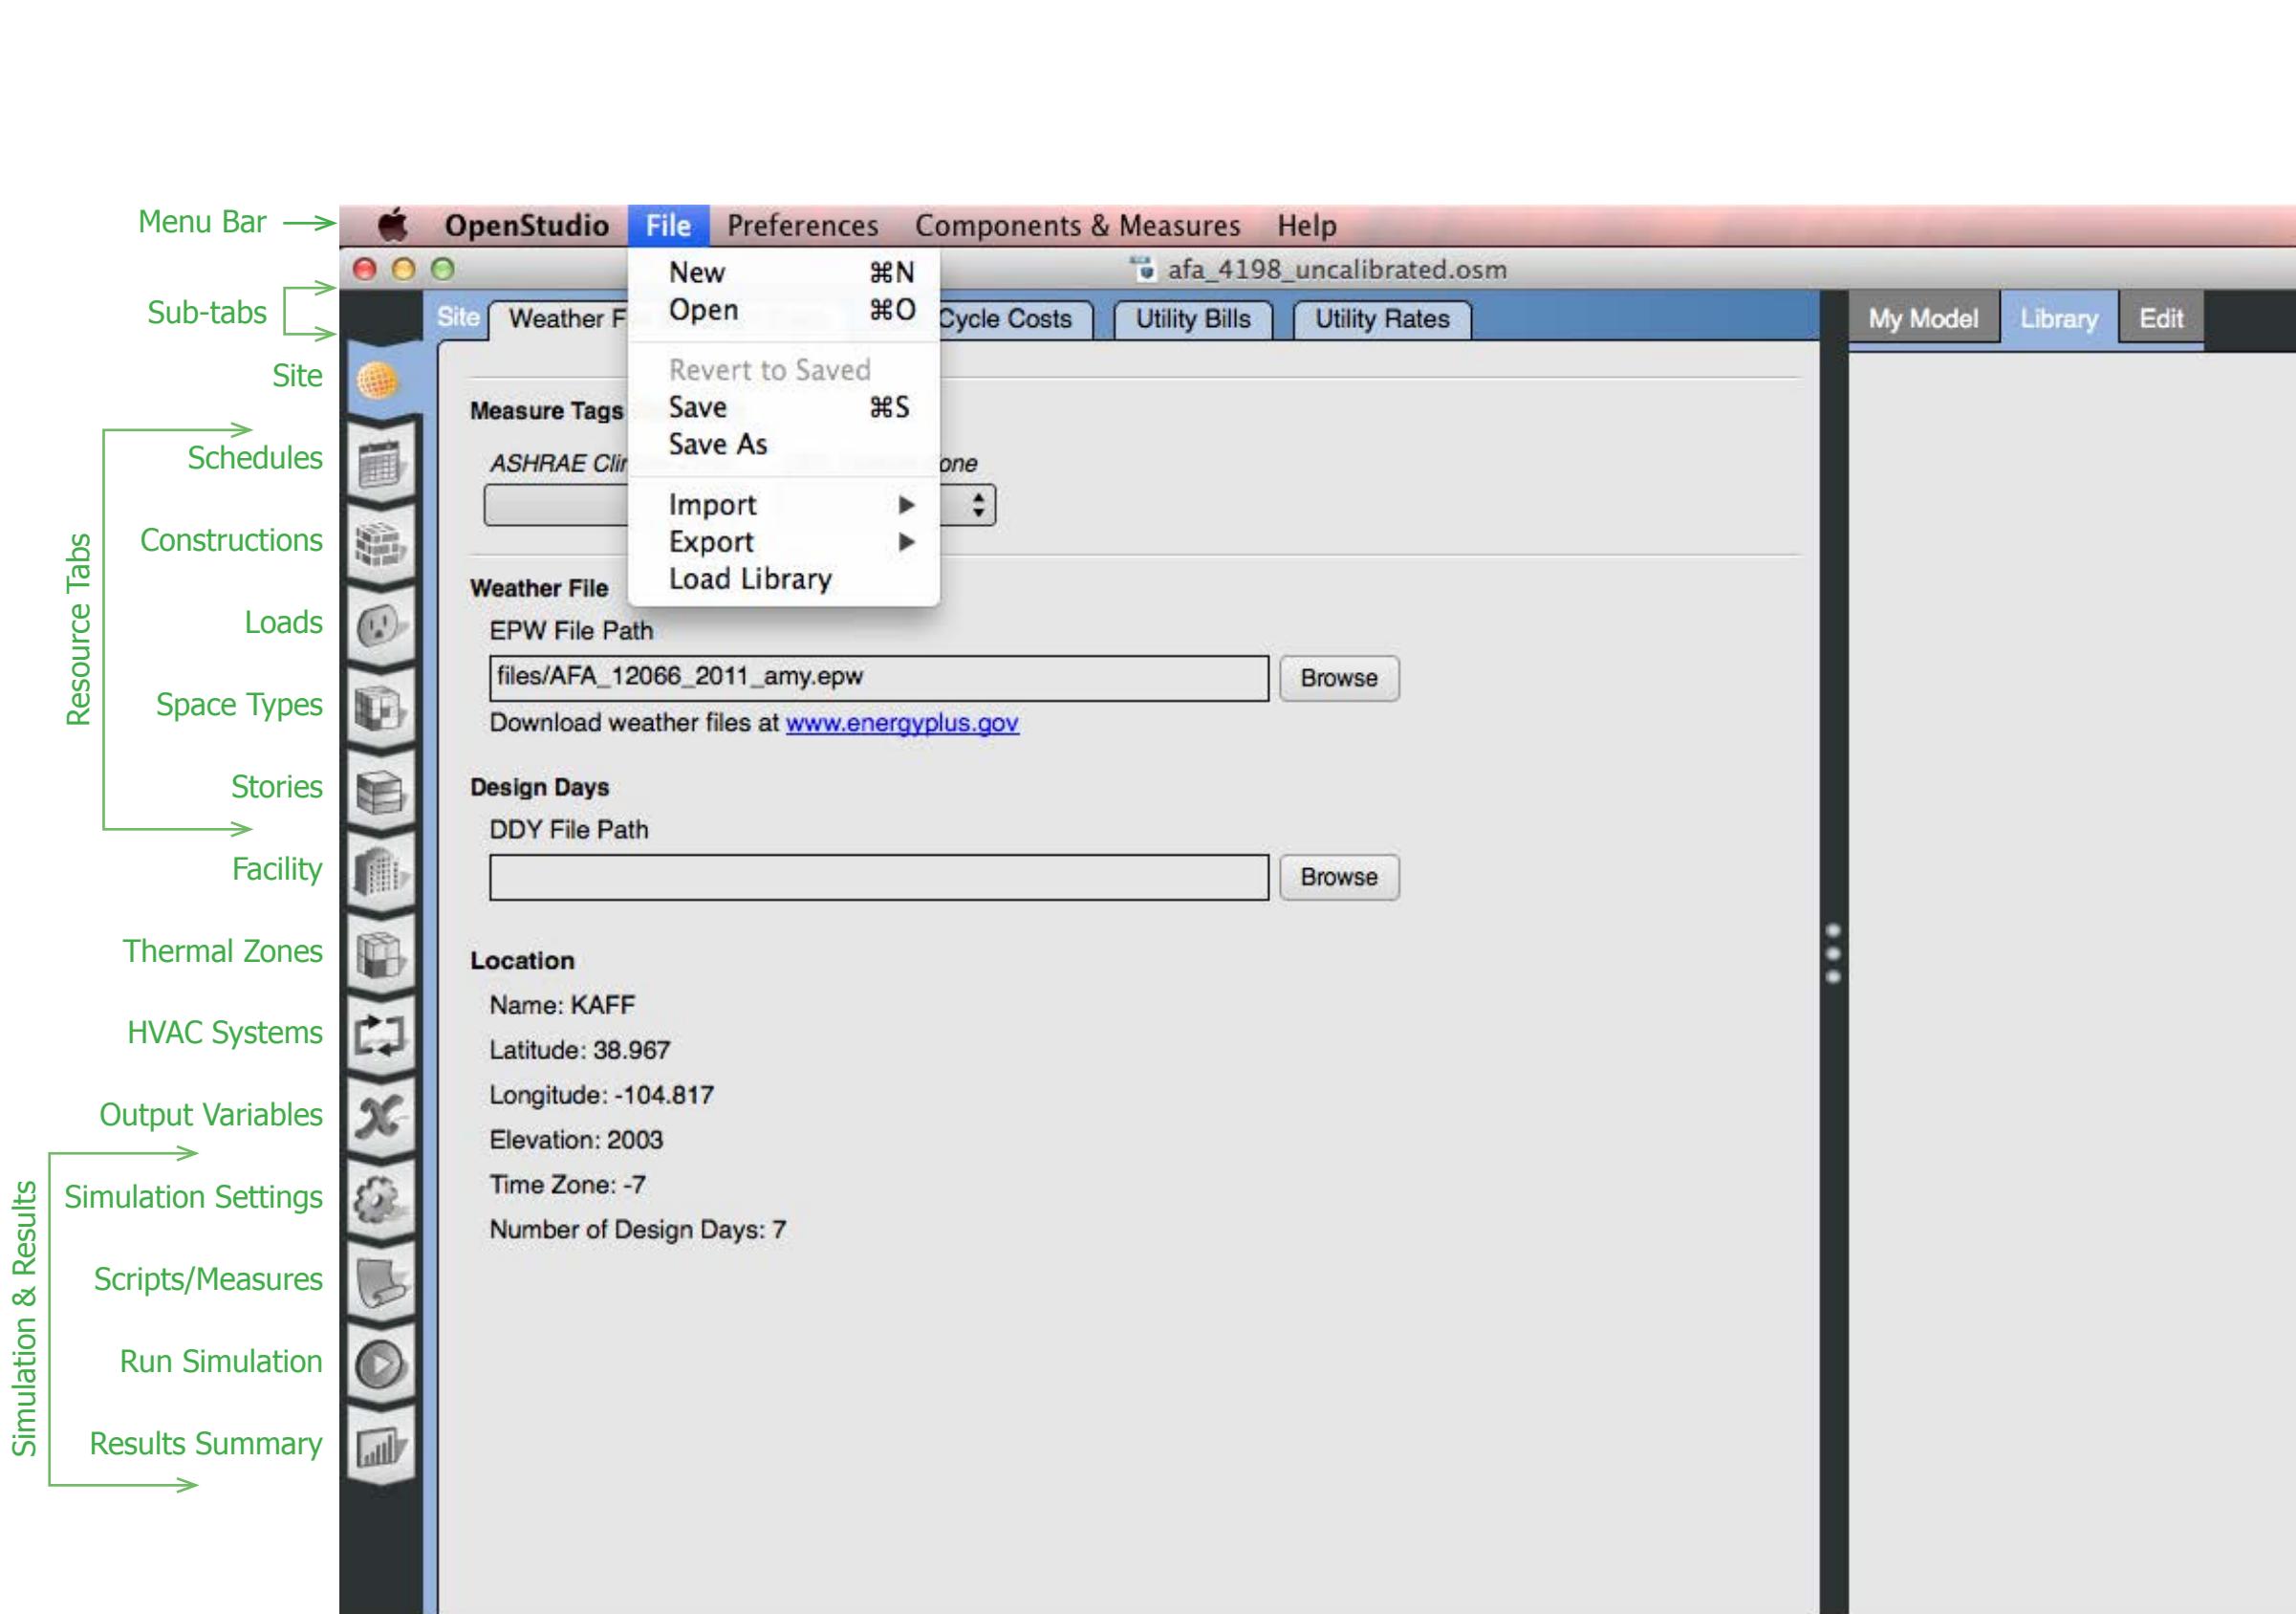

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)


## Preferences Menu

### Notes

The Units menu lets you switch between SI and IP units. This affects both input fields and output data on the results tab. It does not currently affect standard EnergyPlus output files.

The SketchUp Plug-in has access to this as well under "Plugins/OpenStudio/Preferences".

Scan for Tools will look for Radiance, Ruby, and EnergyPlus installations. If you install those applications Prior to installing OpenStudio this shouldn't be necessary.

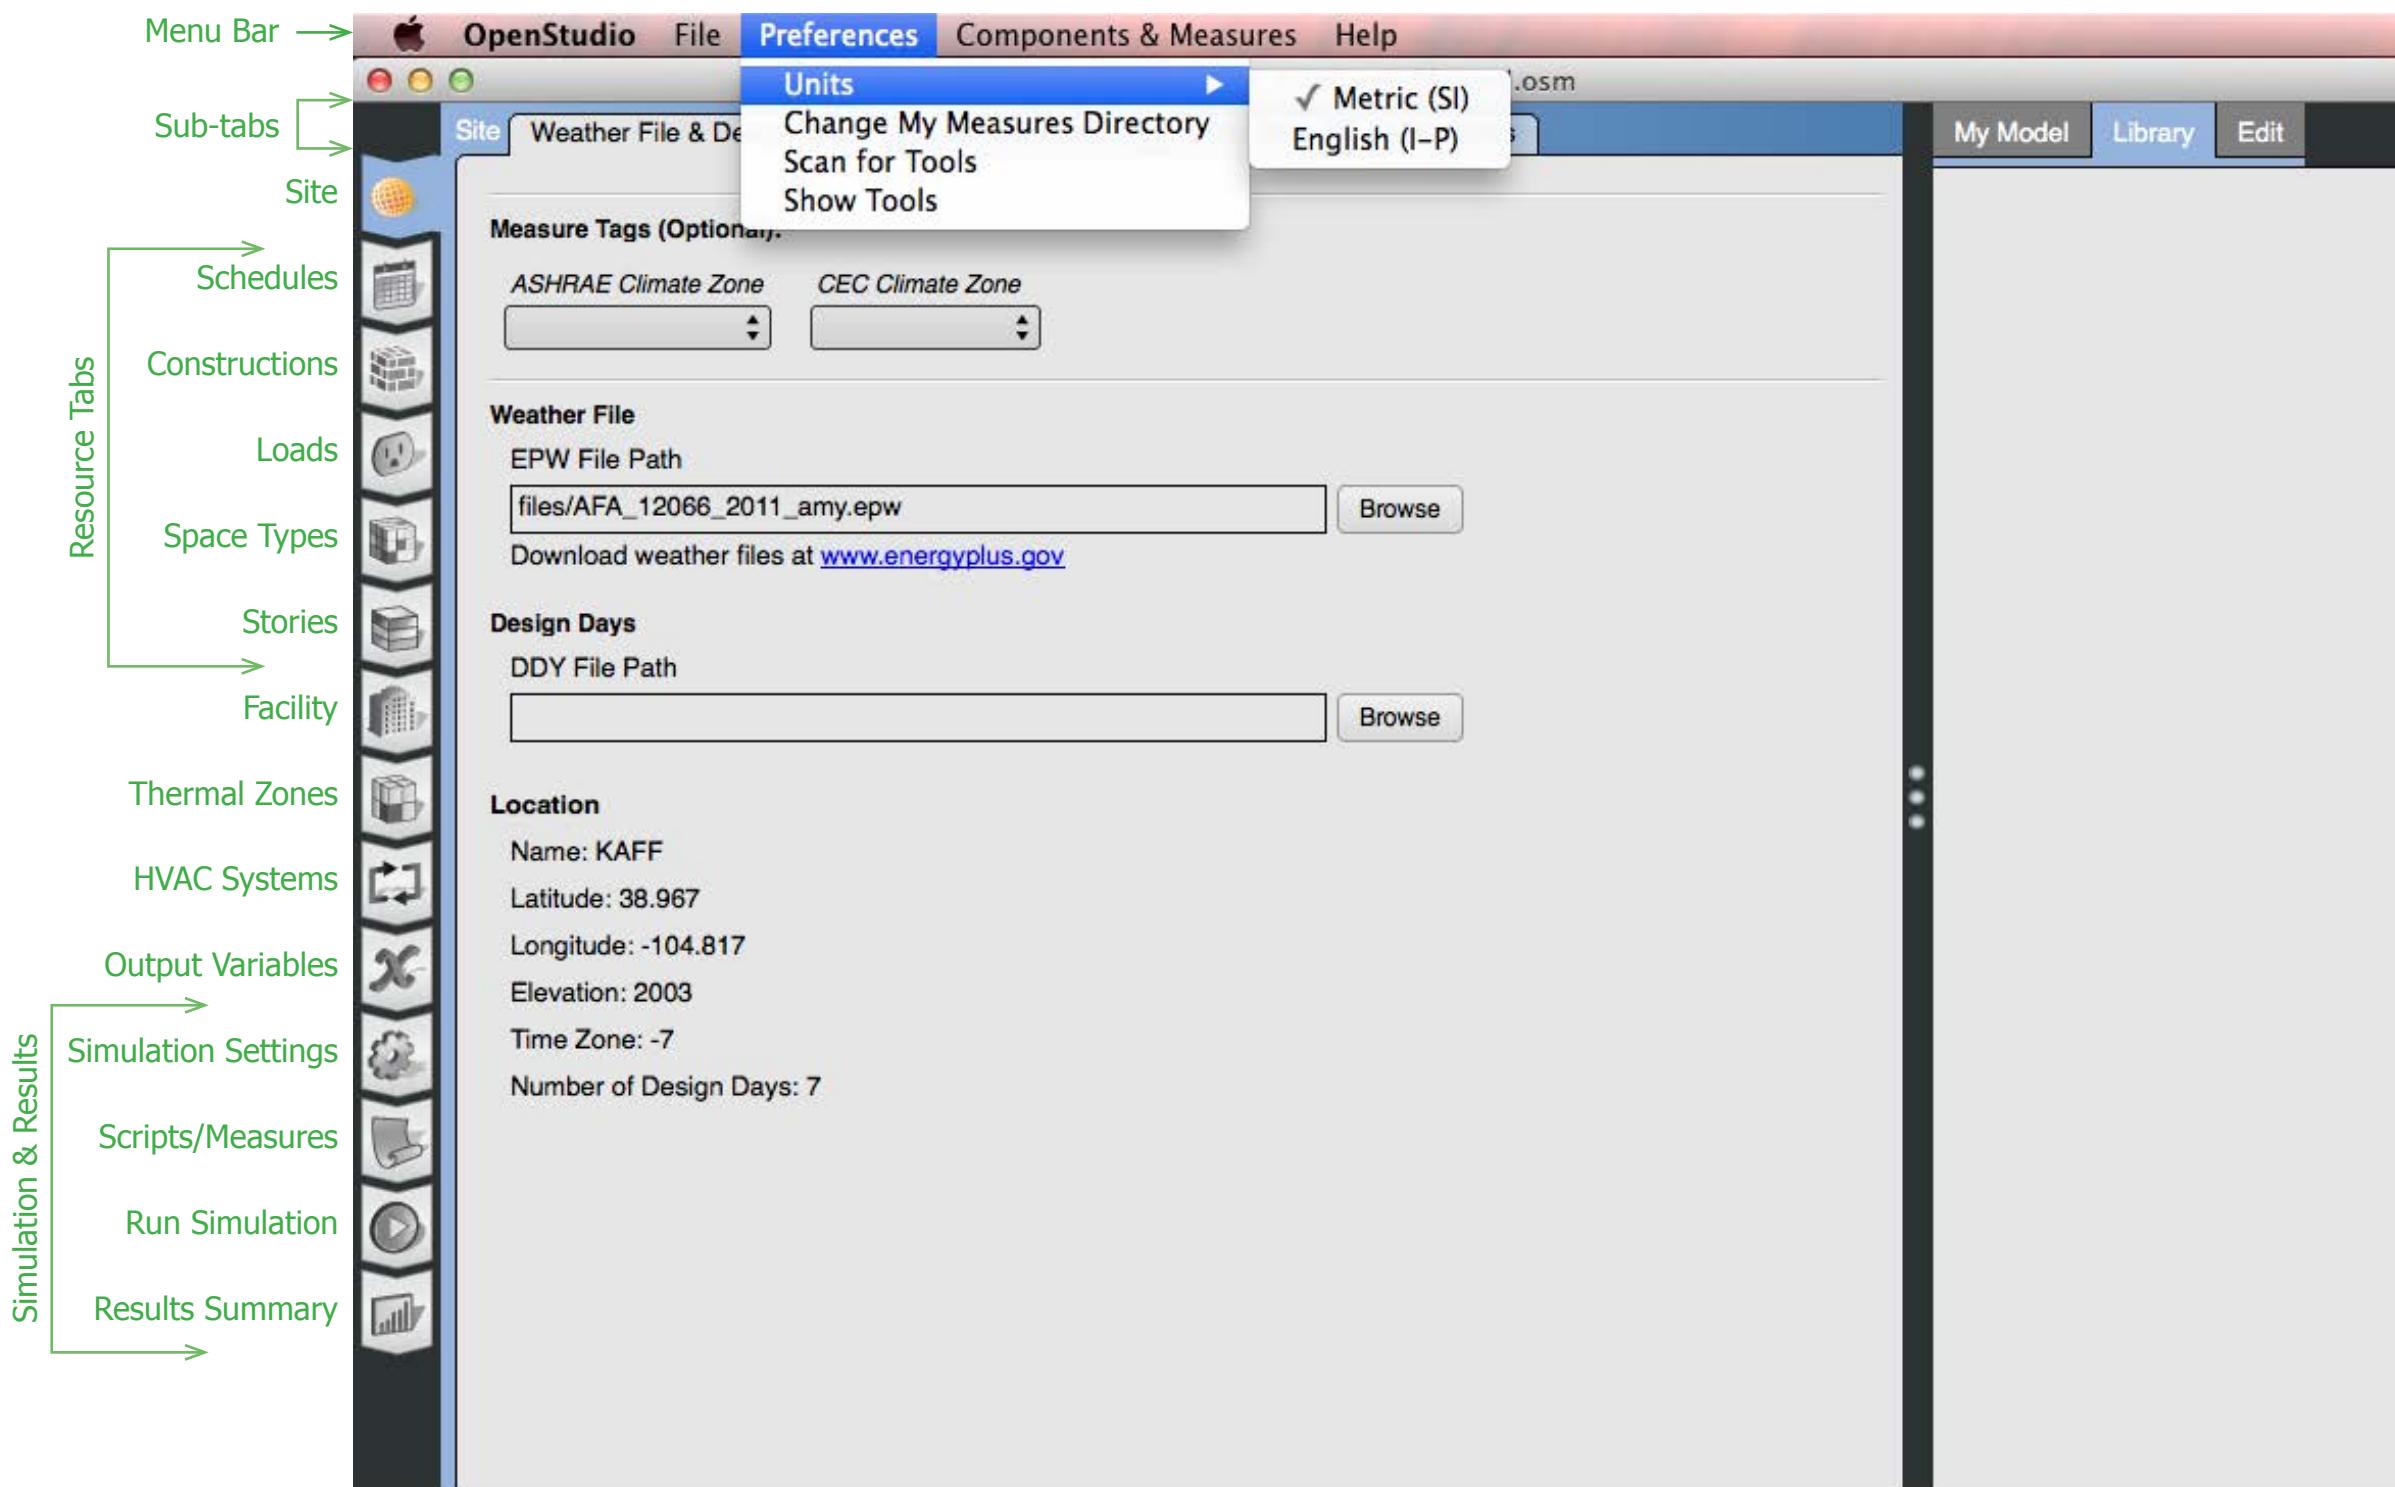

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## Components & Measures

### Menu: Apply Measure Now


#### — Select a Measure

##### Notes

You can apply measures to your model at any time by going to the "Components and Measures" menu and selecting the "Apply Measures Now" option.

This will open a dialog that allows you to choose a measure from the library to apply, go to BCL to find a measure to apply, or even write your own measure and test it.

Once you select a measure you may edit the measure inputs on the right side of the dialog. Hit apply measure to start.

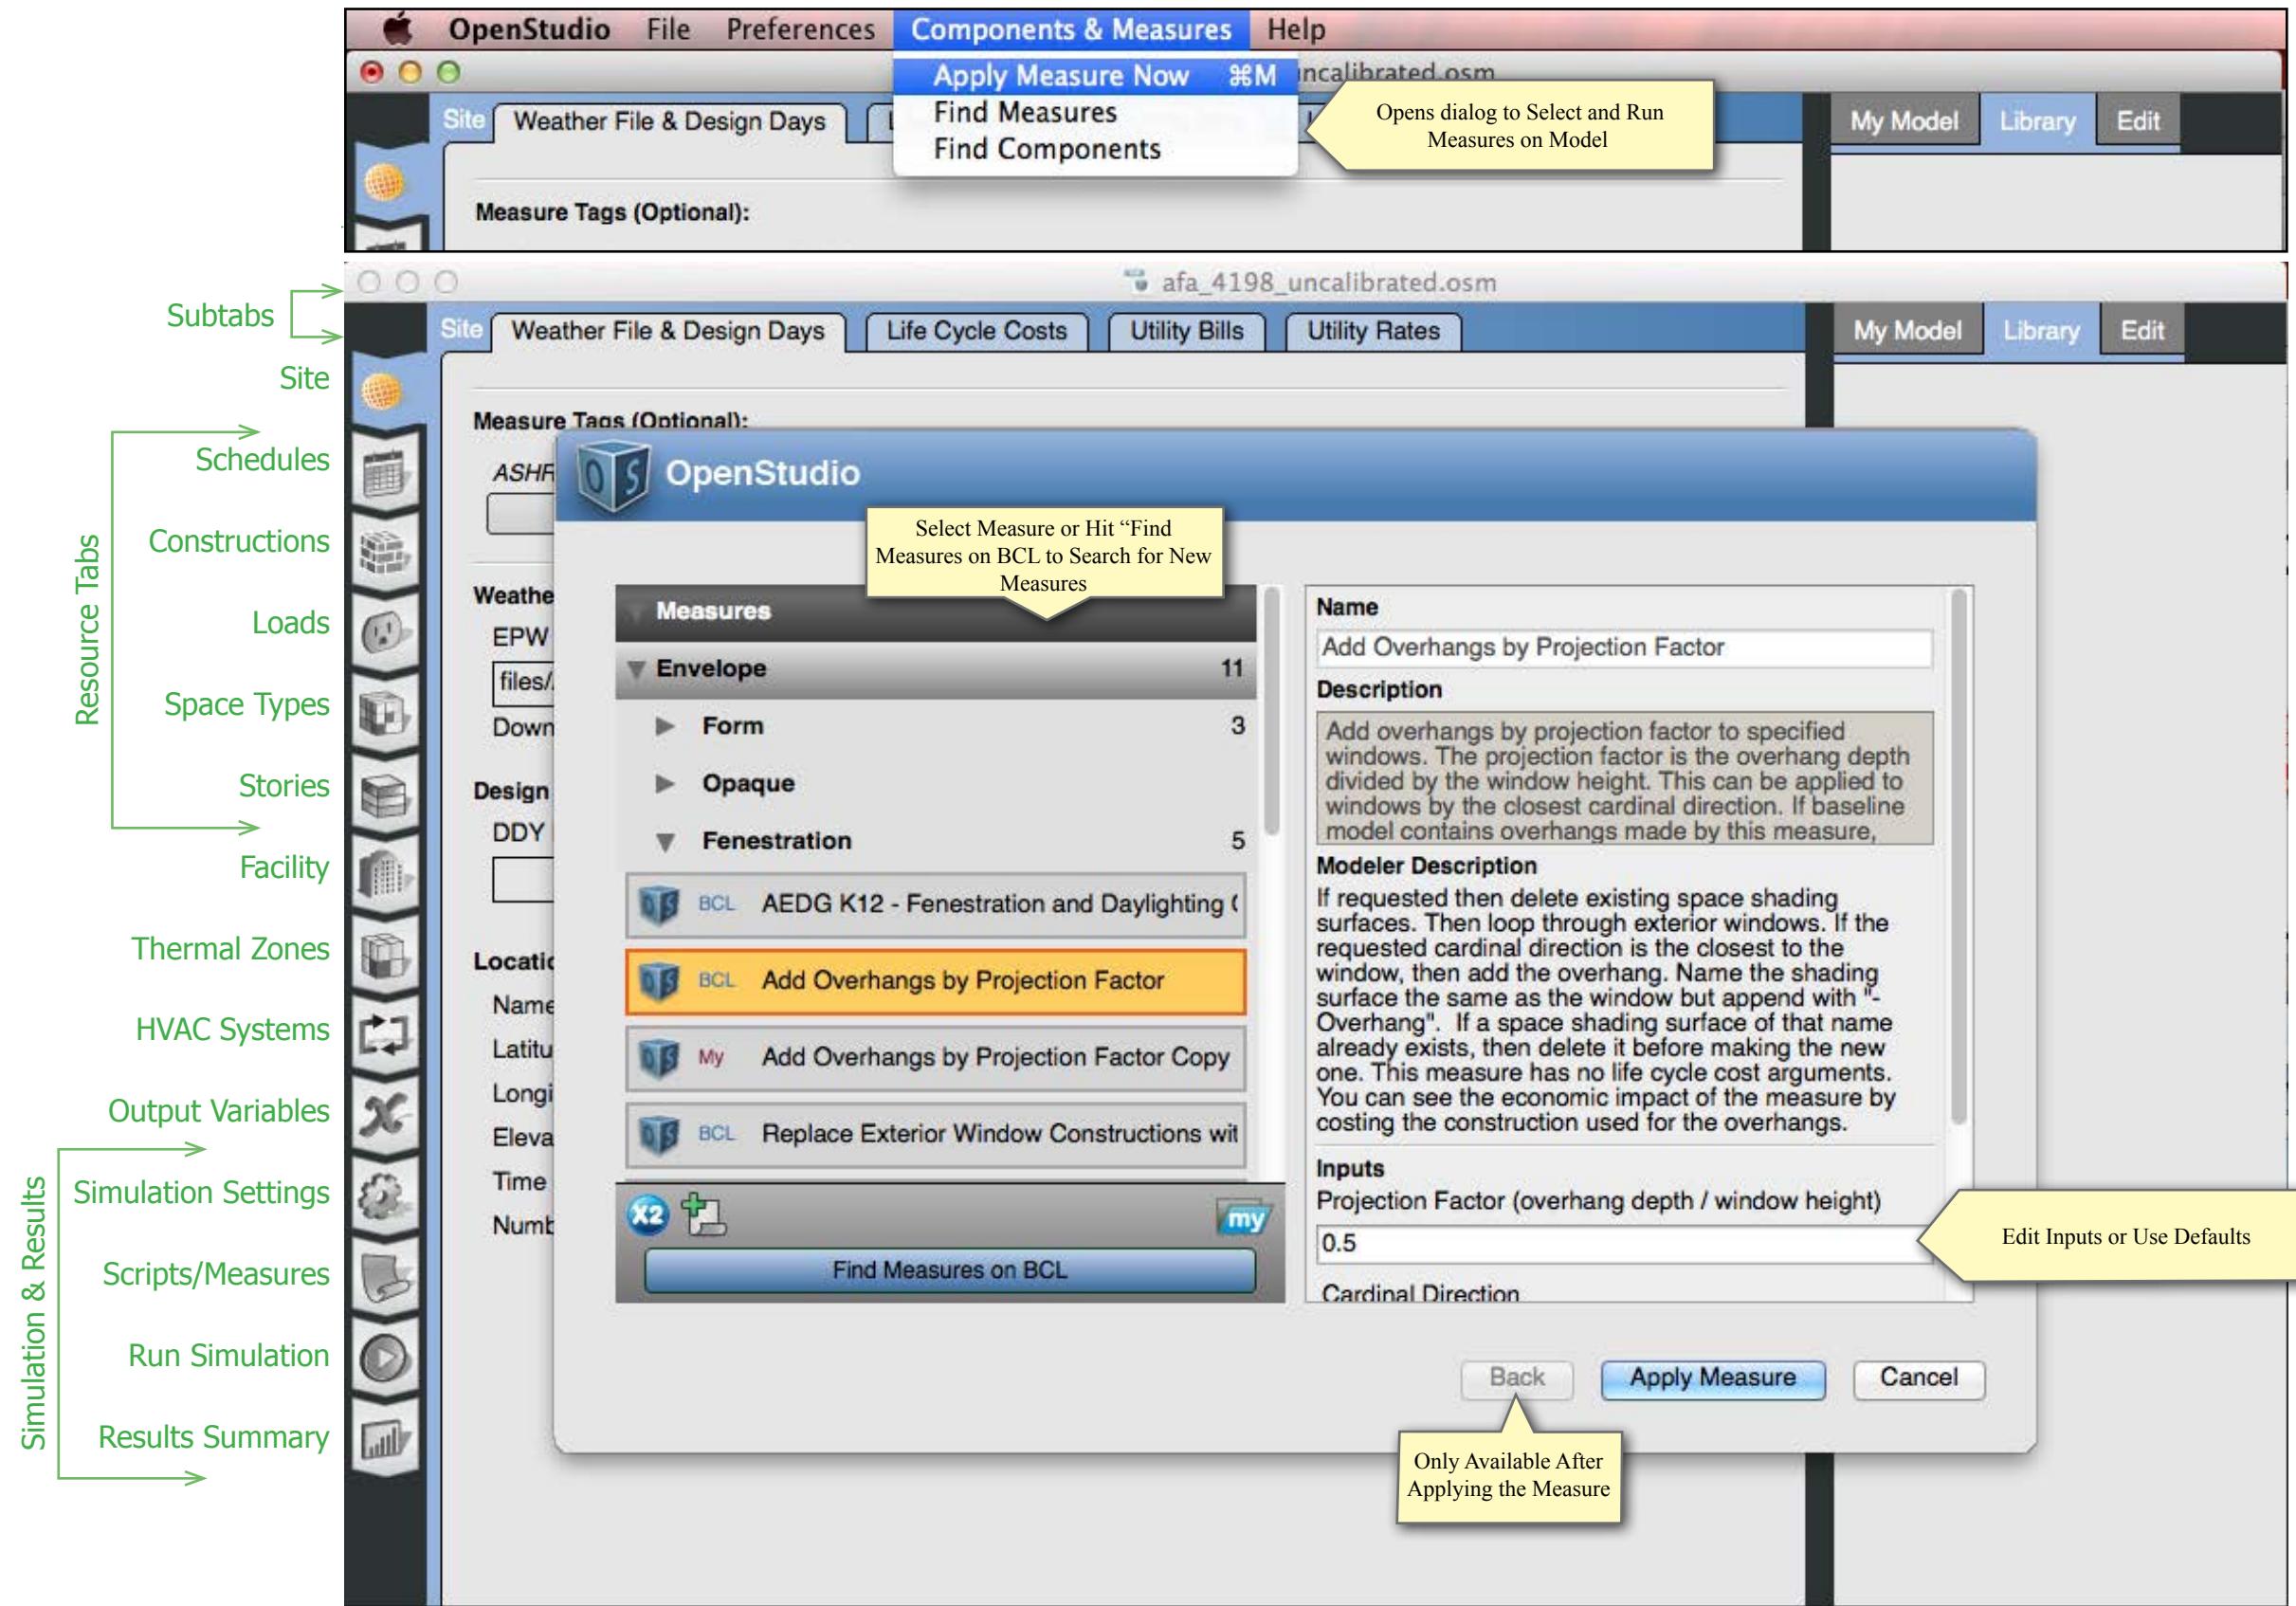

# OpenStudio 1.7.0 Basic Workflow Guide (June 2015)

[openstudio.net](http://openstudio.net)

## Components & Measures

### Menu: Apply Measure Now

#### — Accept Changes


##### Notes

Once the measure is applied the dialog provides you with information on the changes made to the model.

You can choose to cancel or accept the changes to the model. If you choose to accept the model will be saved and reloaded into the application.

If the measure fails you will see an error log on the dialog.

Advanced output provides additional details.

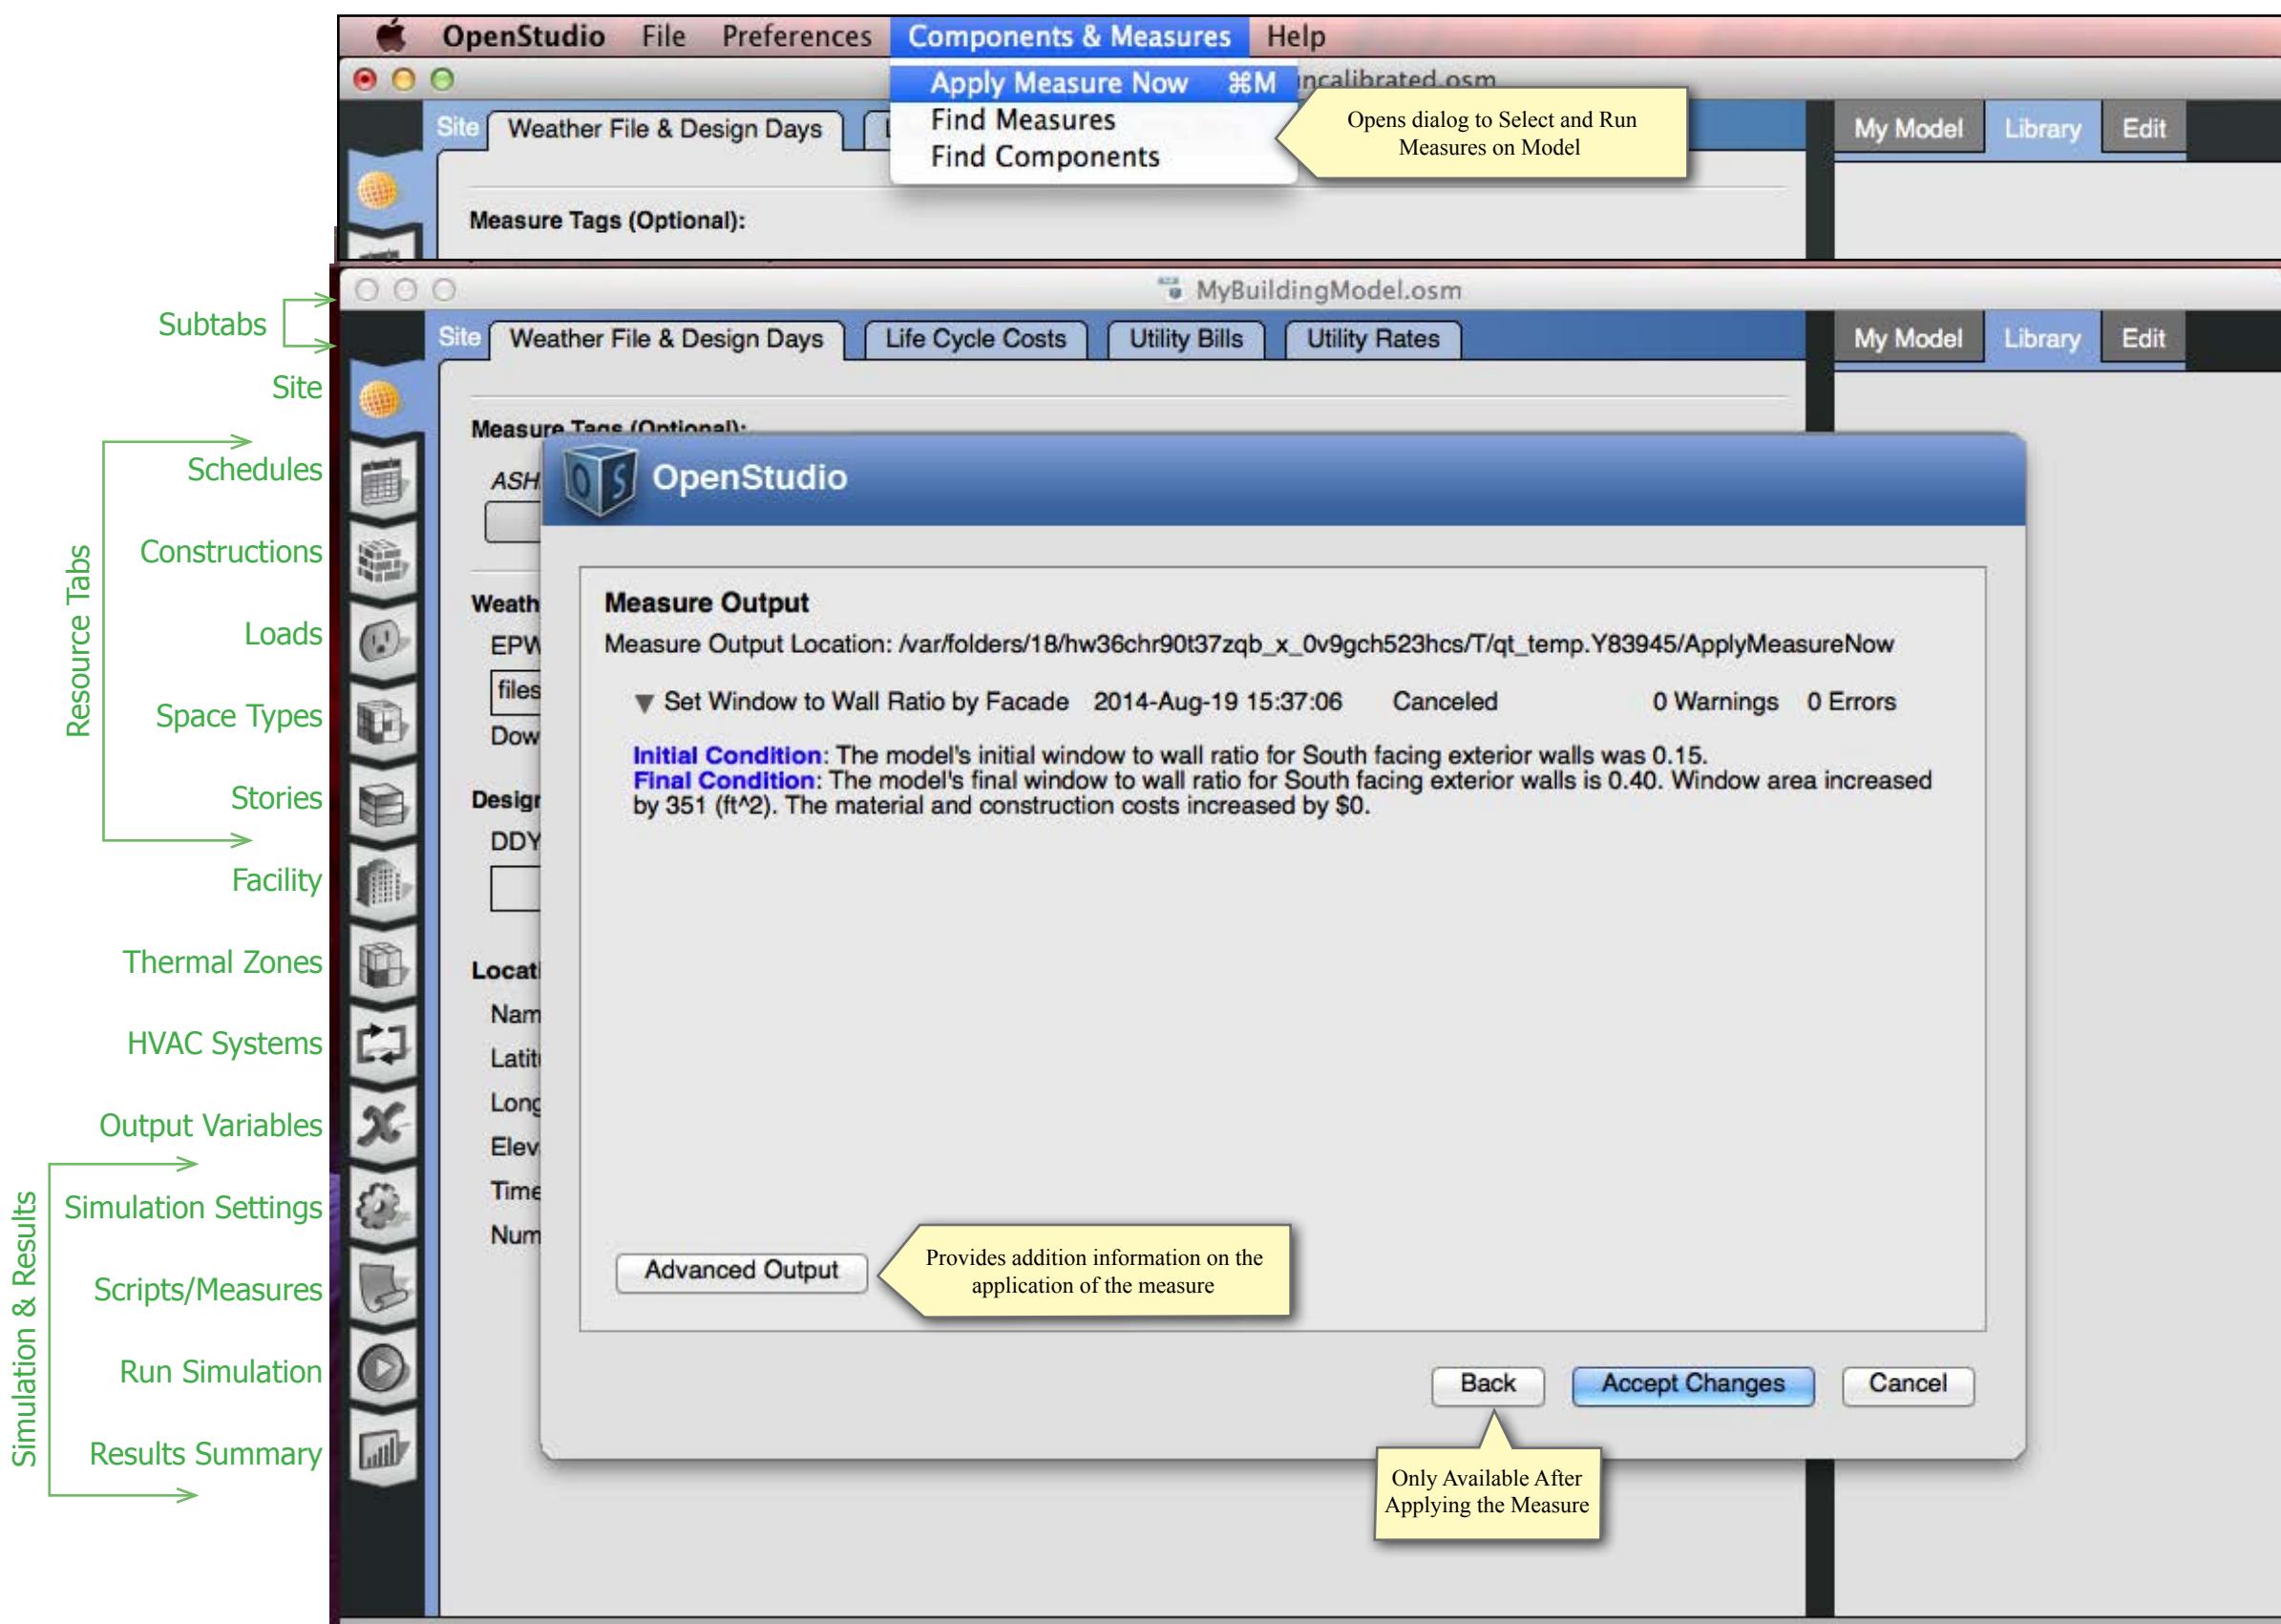

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## Components & Measures

Menu: Find Measures or Components


### Notes

The BCL window gives you access to an online repository of building energy modeling data called the Building Component Library. Although you can access the [BCL website](#) on its own, OpenStudio has integrated access to the BCL from within the application. You can access this through the "Window" menu.

The first time you open this window you will be prompted for an API key, unless you have already used BCL functionality in the SketchUp Plug-in.

The Online BCL window currently exposes construction and material objects. You can choose a category and you can also search for a text string. Next you can check and download one or more of the resulting components. The pane on the right shows attributes for the currently selected component. Once downloaded, these components are stored in a local database on your computer.

Within OpenStudio, components downloaded from the BCL have visual tags to indicate their origins.

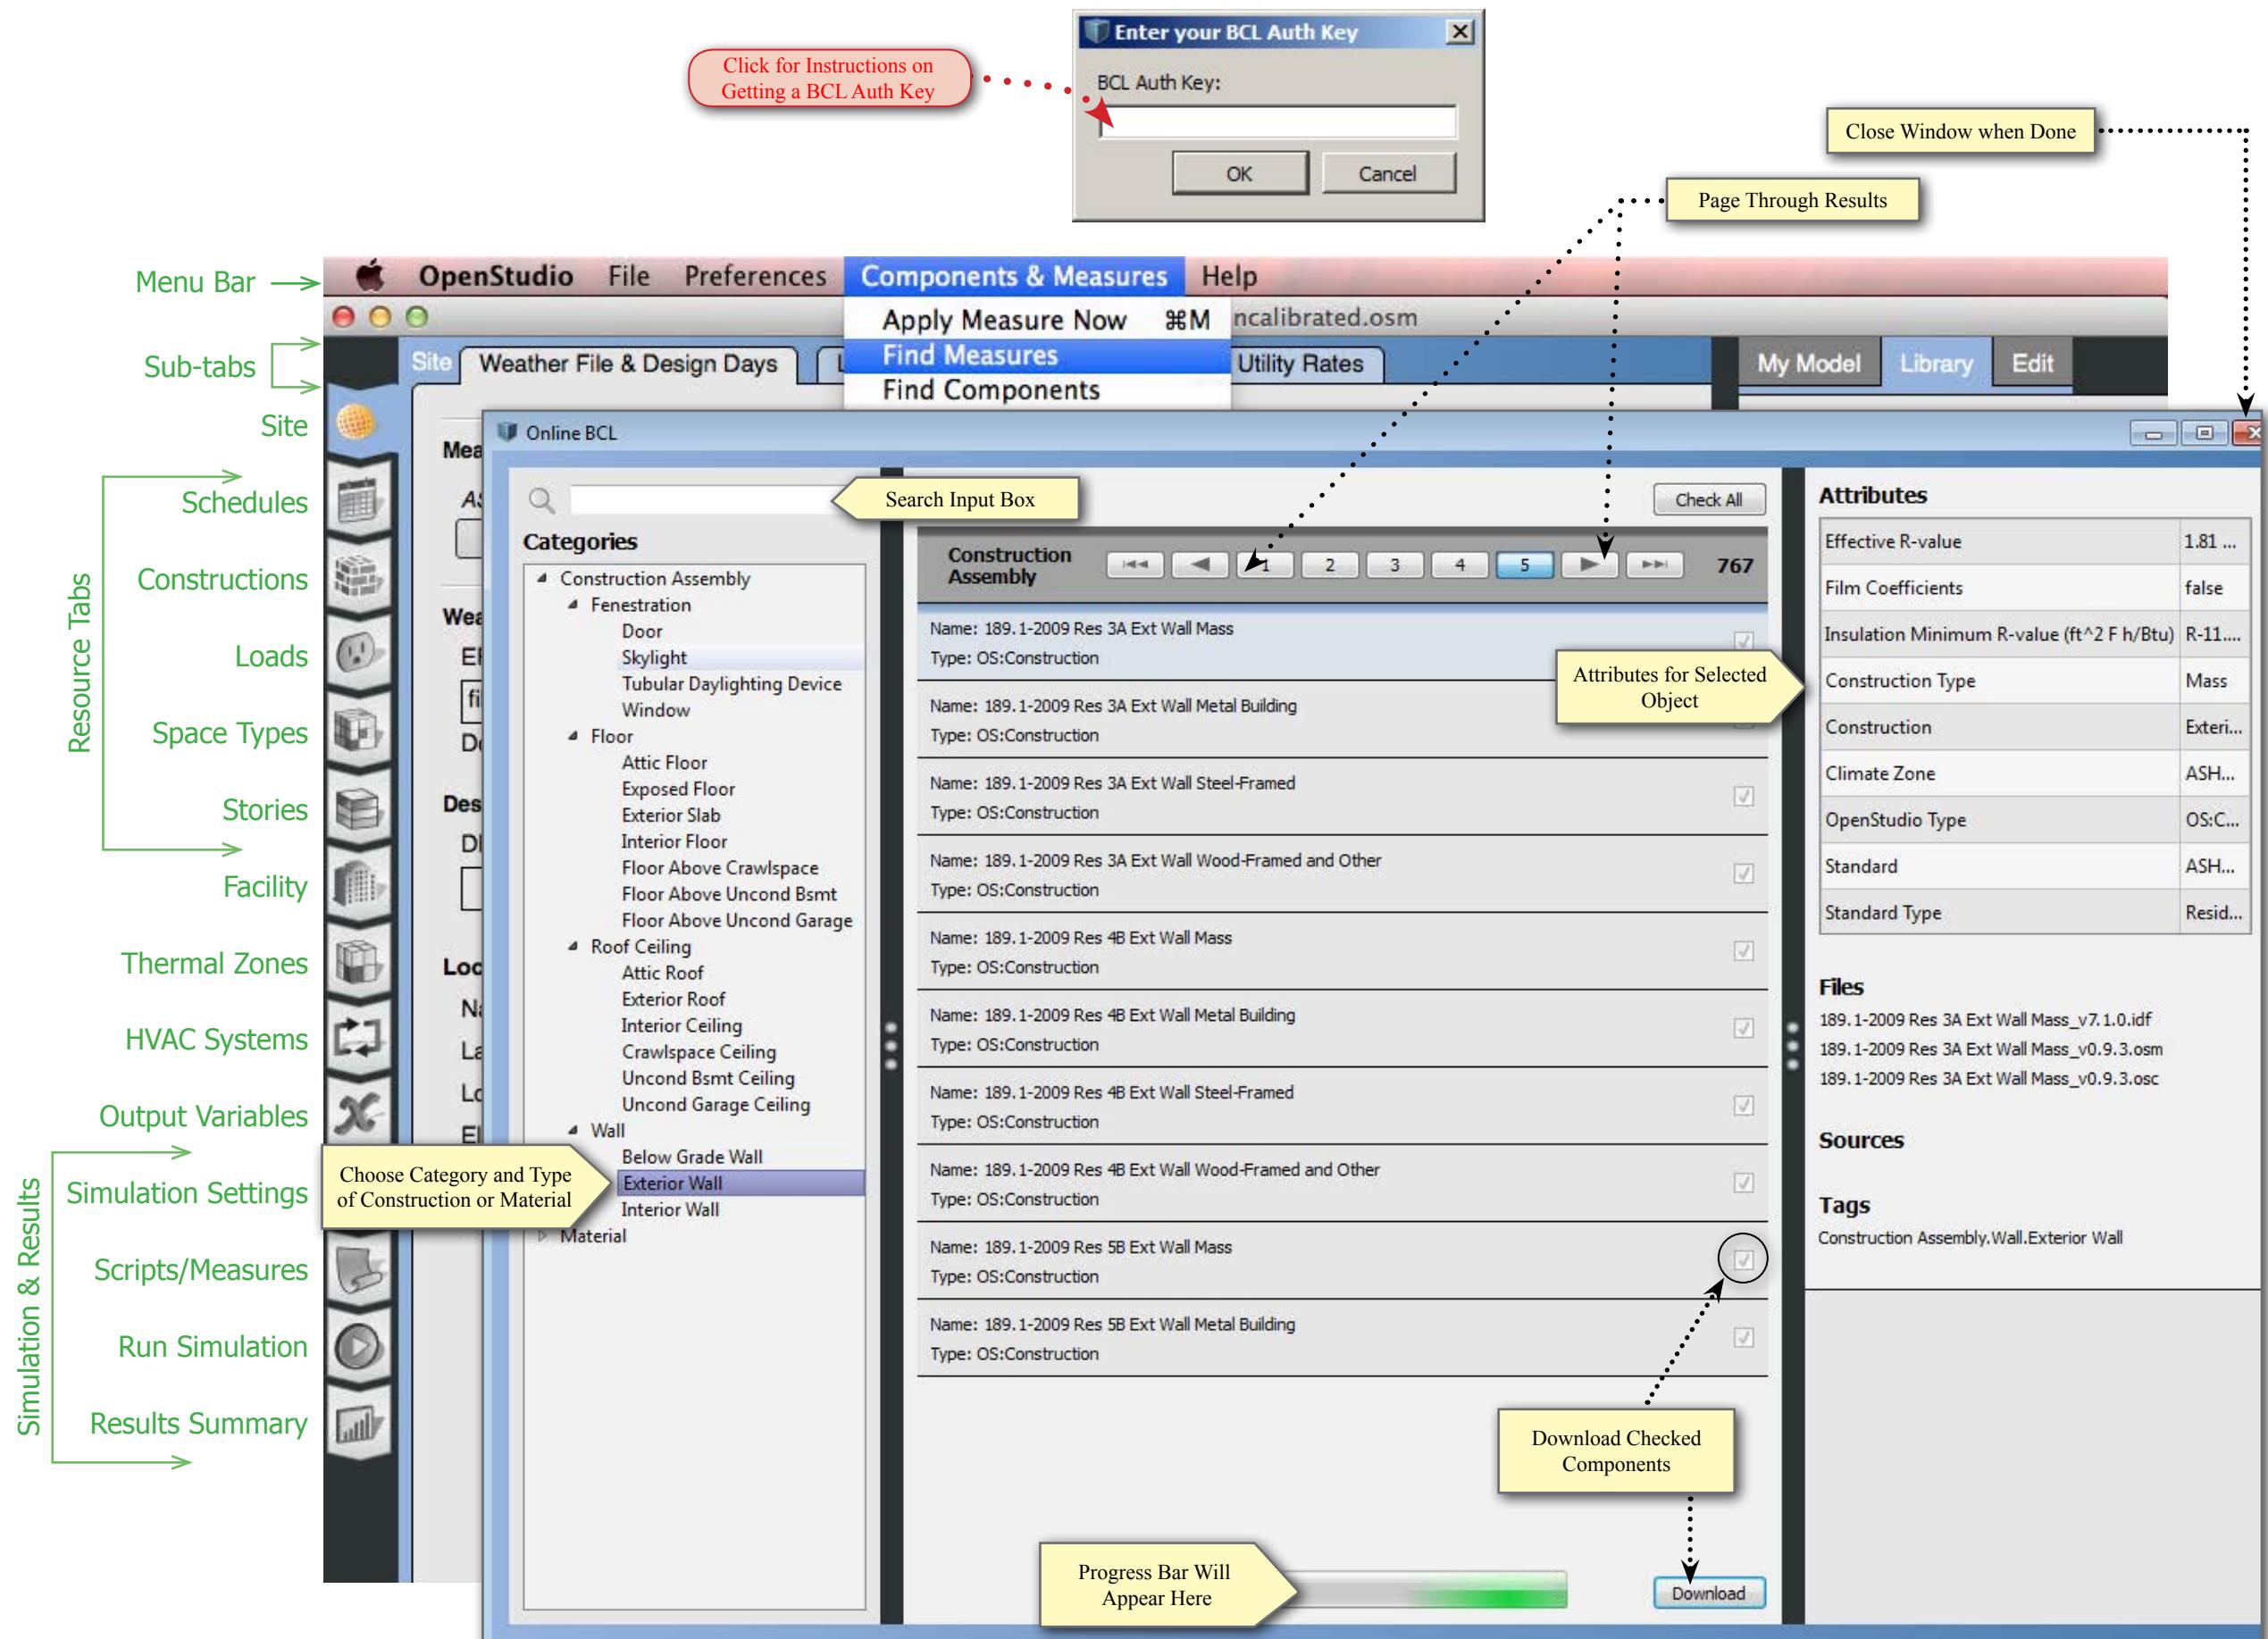

# OpenStudio 1.7.0 Basic Workflow Guide (June 2015)

[openstudio.net](http://openstudio.net)


## BCL Account Page [bcl.nrel.gov](https://bcl.nrel.gov)

### Notes

To use the BCL features in OpenStudio, you need to register on the Building Component Library website and setup an "API Key." This is a separate site from the OpenStudio website. The steps to setup an account and obtain a key follow.

1. Go to <https://bcl.nrel.gov/user/register> and follow the registration instructions.
2. Check your email for the confirmation to activate your account, then login.
3. Click "My Dashboard"
4. Select and copy the Key.
5. Return to OpenStudio and paste the key into the input box.

Your key will be remembered when you Upgrade OpenStudio so you should only have to do this once, unless you get a new computer, then you will have to go through steps 3-6 to retrieve your key.

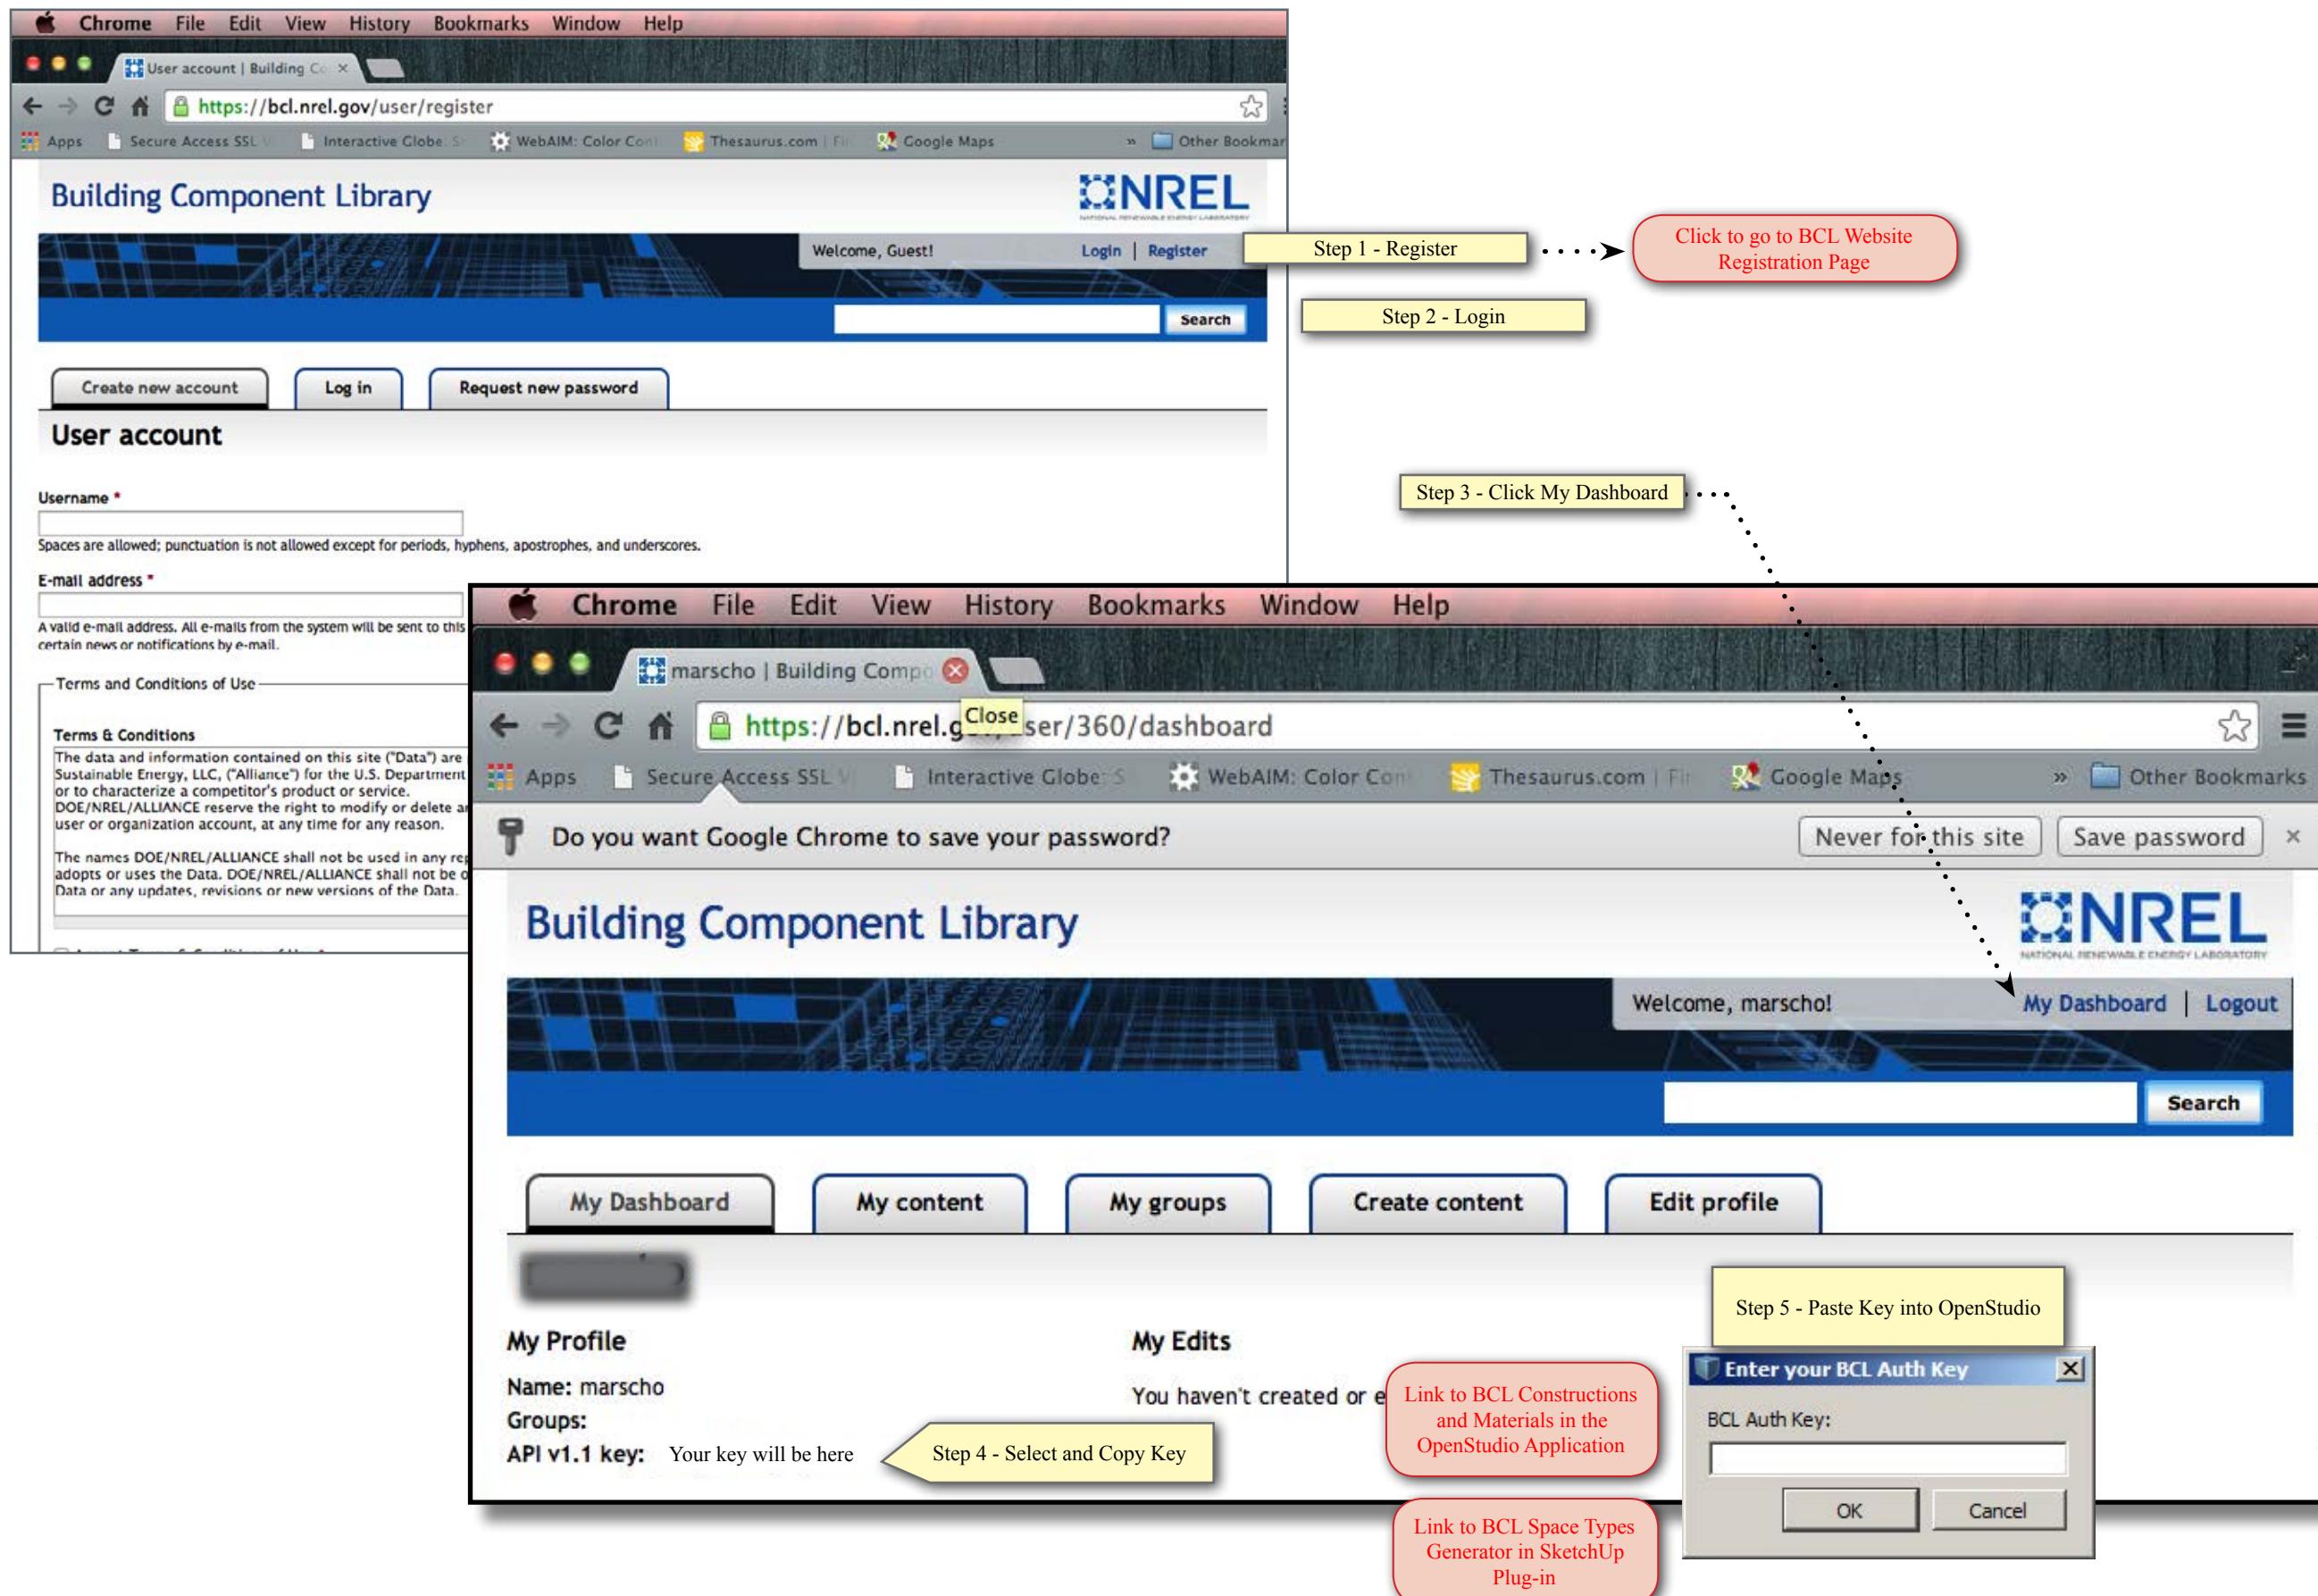

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net


## Site - Weather File & Design Days

### Notes

The Site tab allows you to set the path of the EPW weather file that you want to use for your simulation and for loading design day files.

The weather file is stored in the OSM file as a path. When you reopen a model you will still see that path displayed. Design days are a little different. They are loaded into your model. The path they were loaded from is not saved, so when you reopen your model you will not see a path in the DDY file path box.

The Utility Rates sub-tab is not yet functional. For this release you can use the "ImportImfSection.rb" script in the Scripts tab to load these.

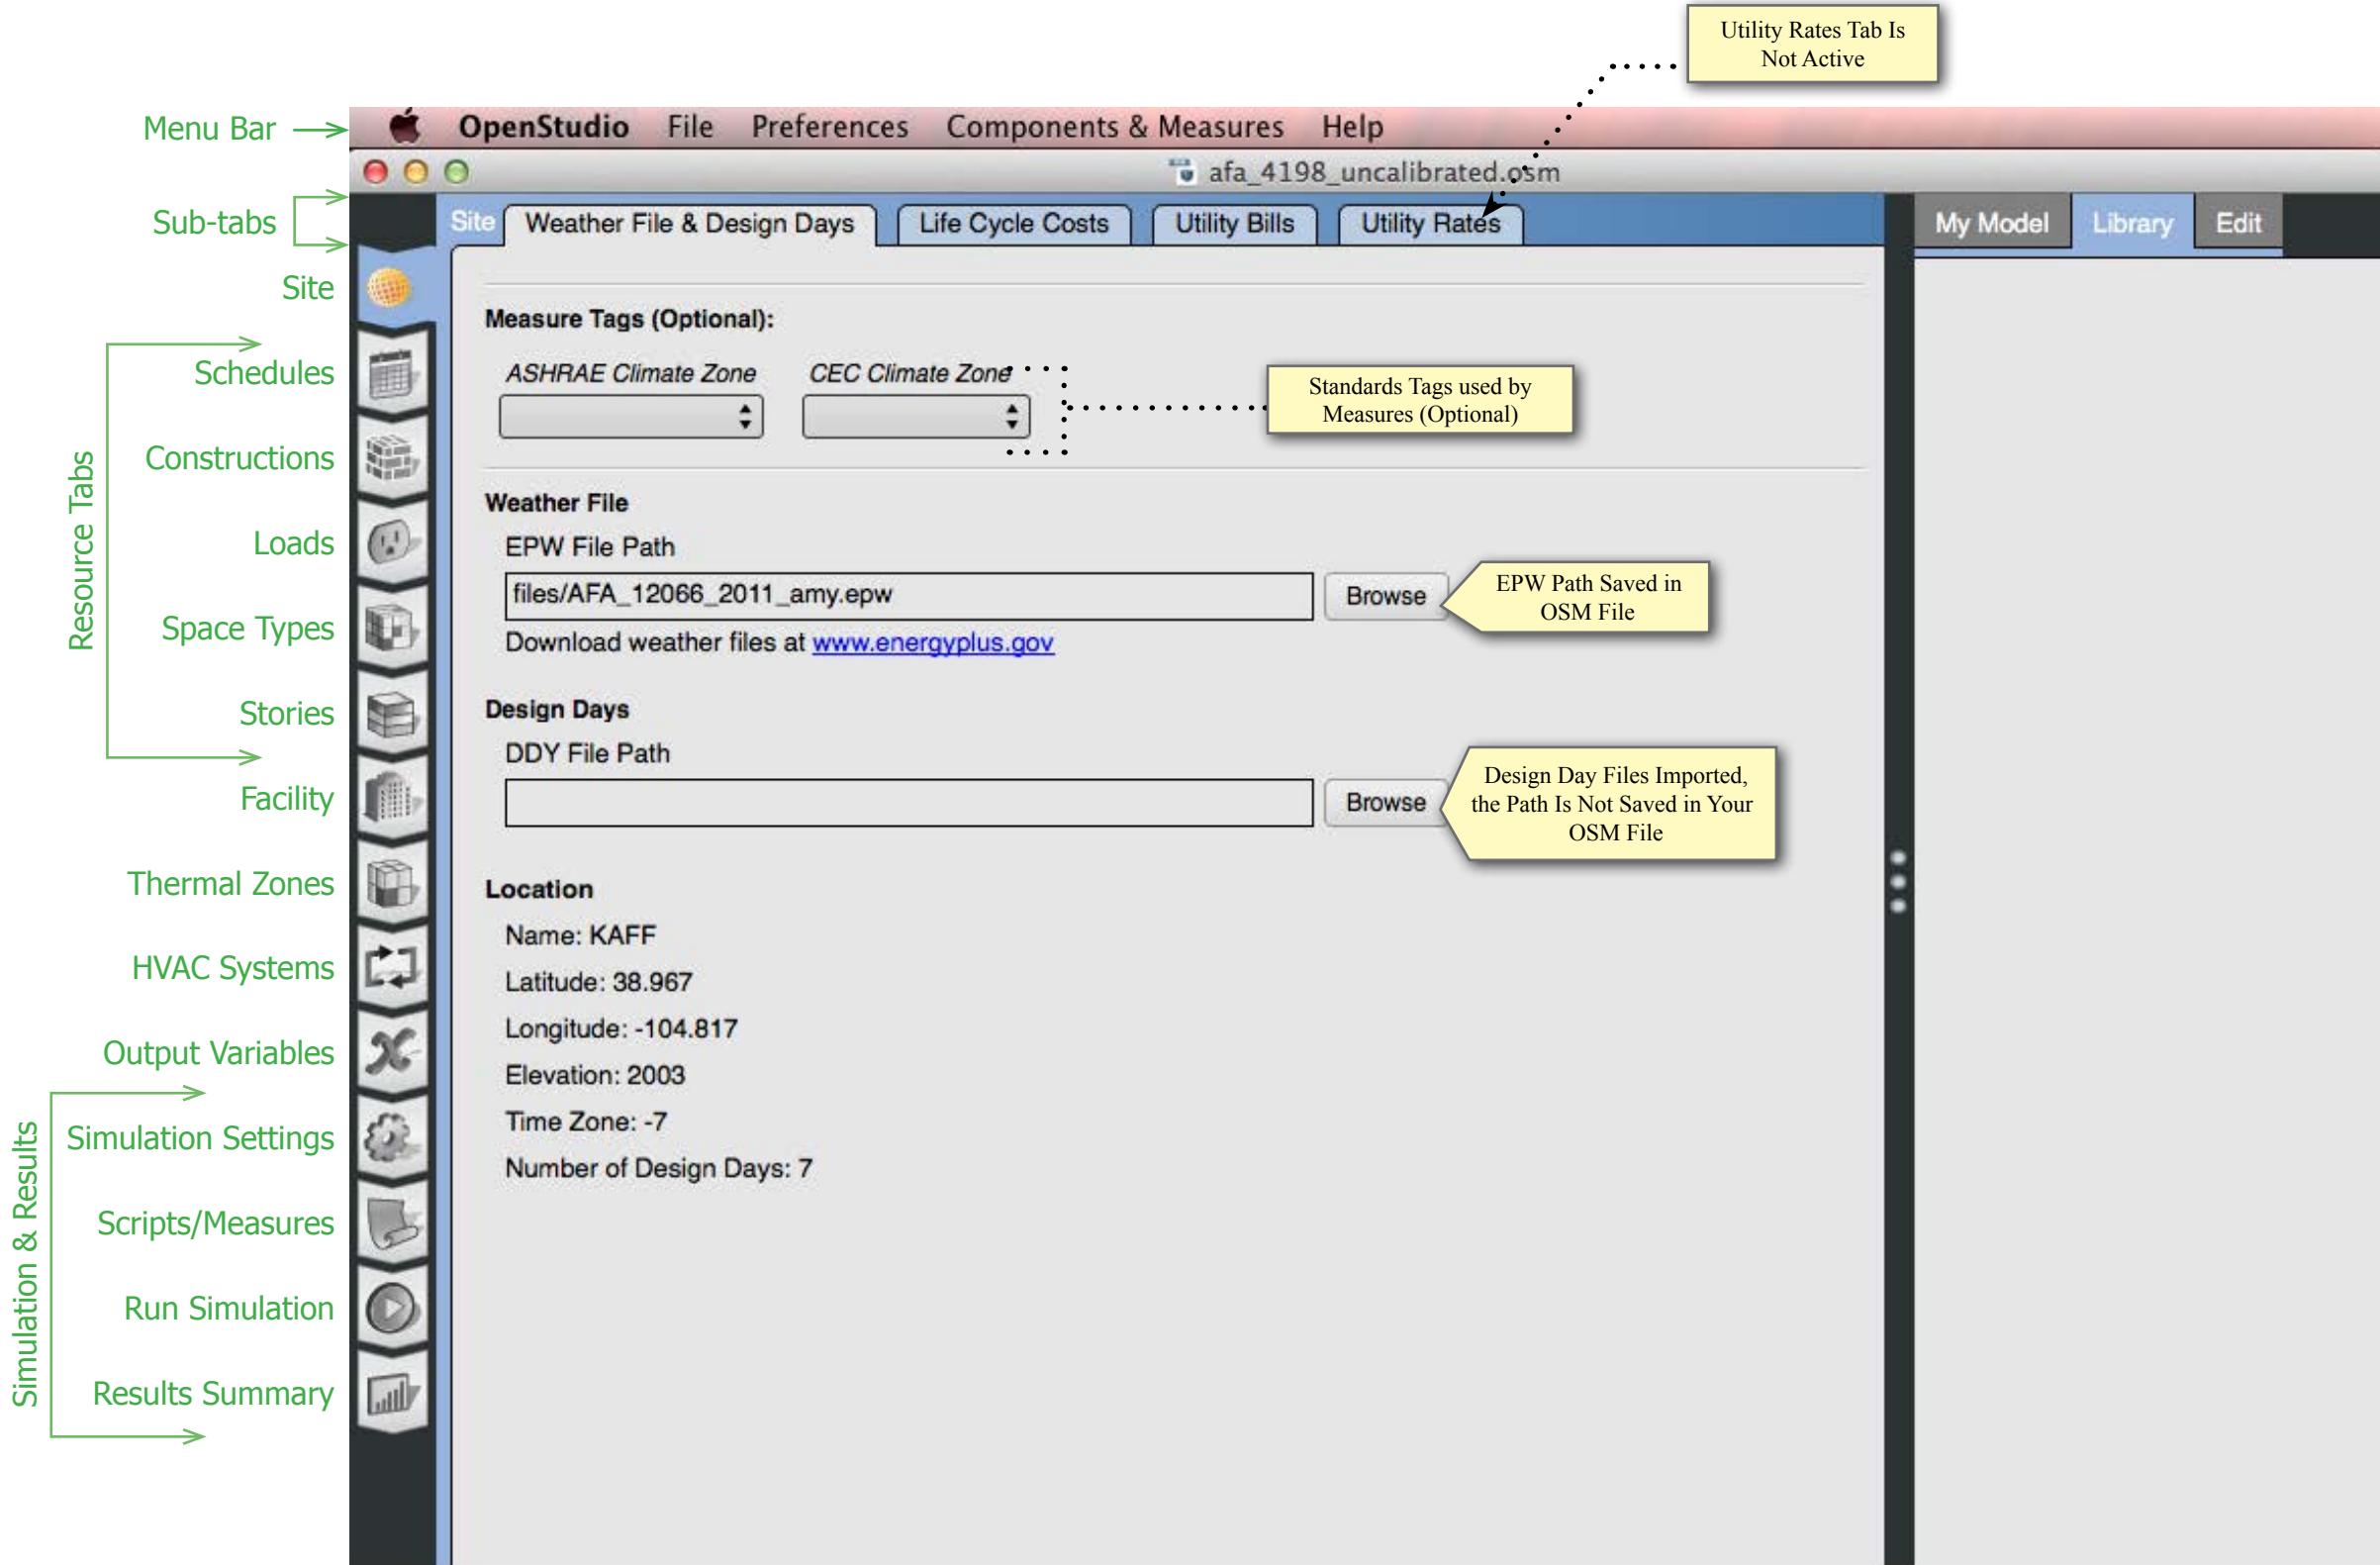

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net


## Life Cycle Cost

### Notes

The most basic parameters needed for a life cycle cost analysis are the analysis period length and the discount rate. A longer analysis period accumulates more energy cost savings than a shorter period; giving energy conservation measures a better pay back relative to their initial costs. A higher discount rate devalues future energy cost savings relative to money spent on capital improvements in the present; giving energy conservation measures a lower pay back relative to their initial costs. This tab allows users to set these parameters on their baseline model.

In the ParametricAnalysisTool measures, downloaded from BCL, can be used to calculate life cycle costs for different design alternatives.

OpenStudio Life Cycle Costing Examples are available at <http://openstudio.nrel.gov/openstudio-life-cycle-examples>

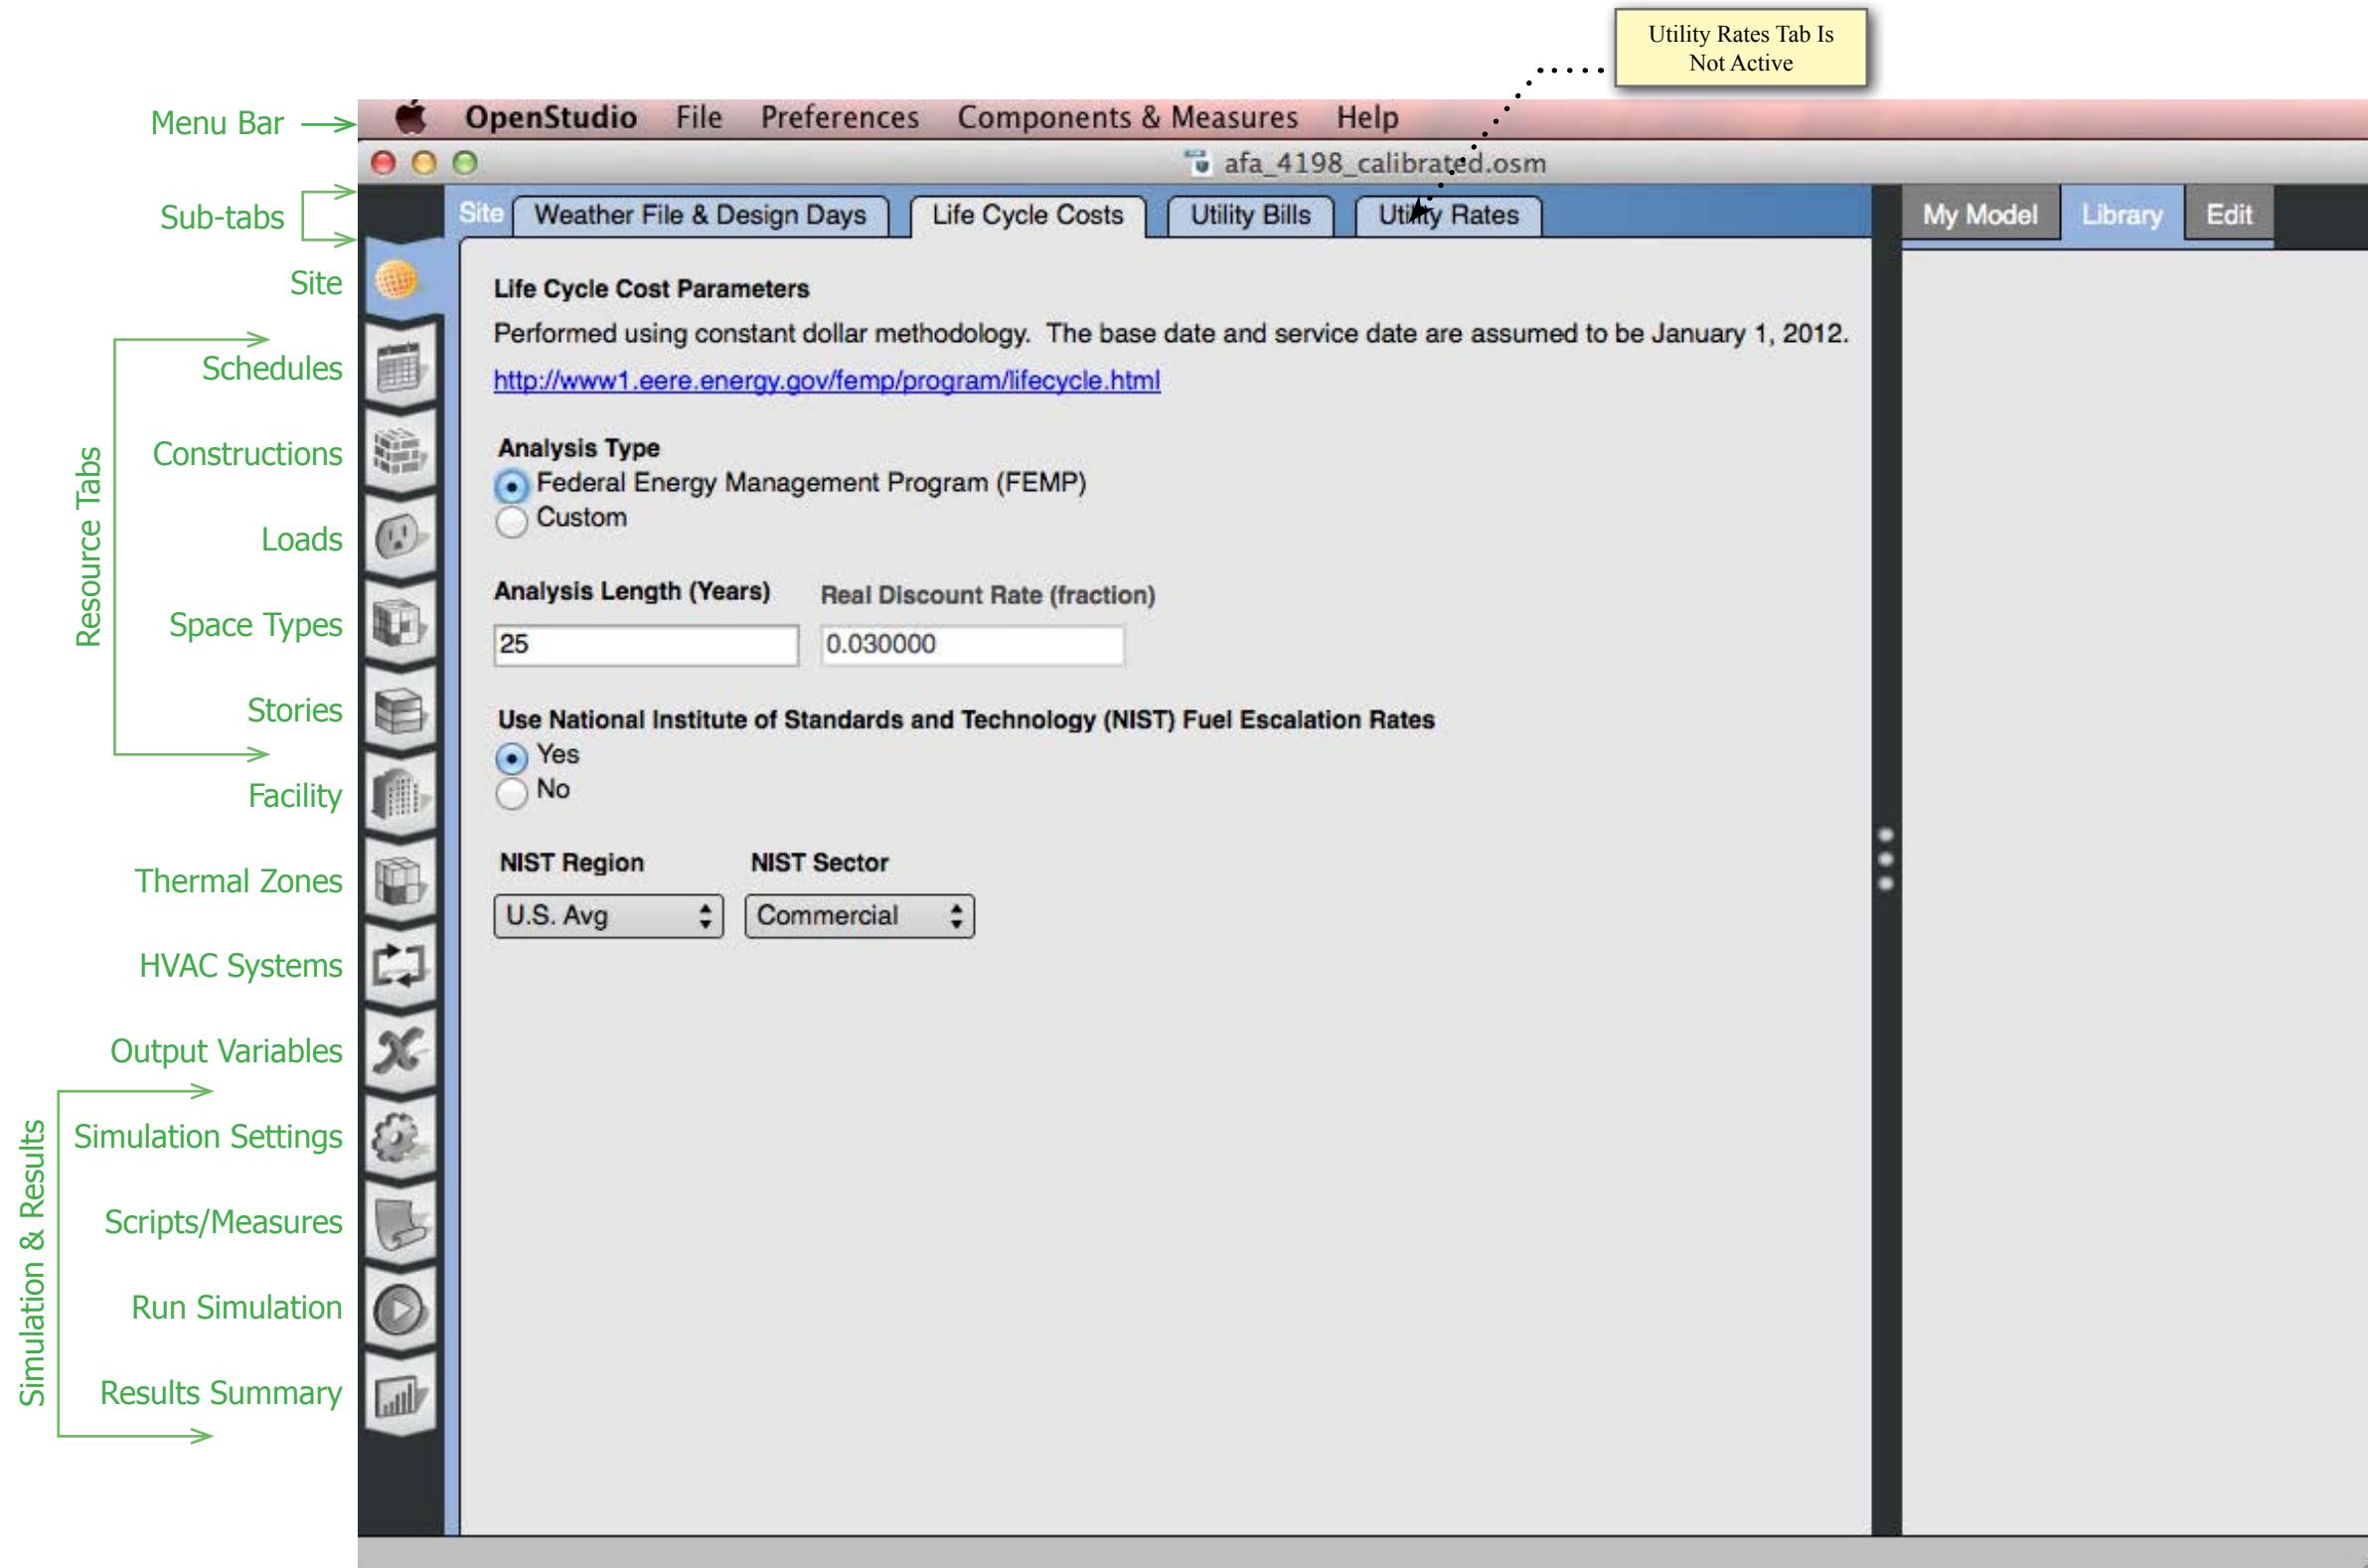

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)

## Site — Utility Bills

### Notes

Add utility bills for calibration on the Utility Bills Tab under Site.

You must select a weather file and go to the schedules tab under year and select the year for the rates.


Step 1- select the type of utility on the left.

Step 2- hit the plus button to add bills.

Step 3- name the Bill and complete the units fields.

Step 4- select the billing period inputs and hit the plus sign to add a bill.

To calibrate to the ASHRAE 14-2002 or FEMP standard the file must contain all utility data for one year and real weather data. Check the guidelines for additional requirements.

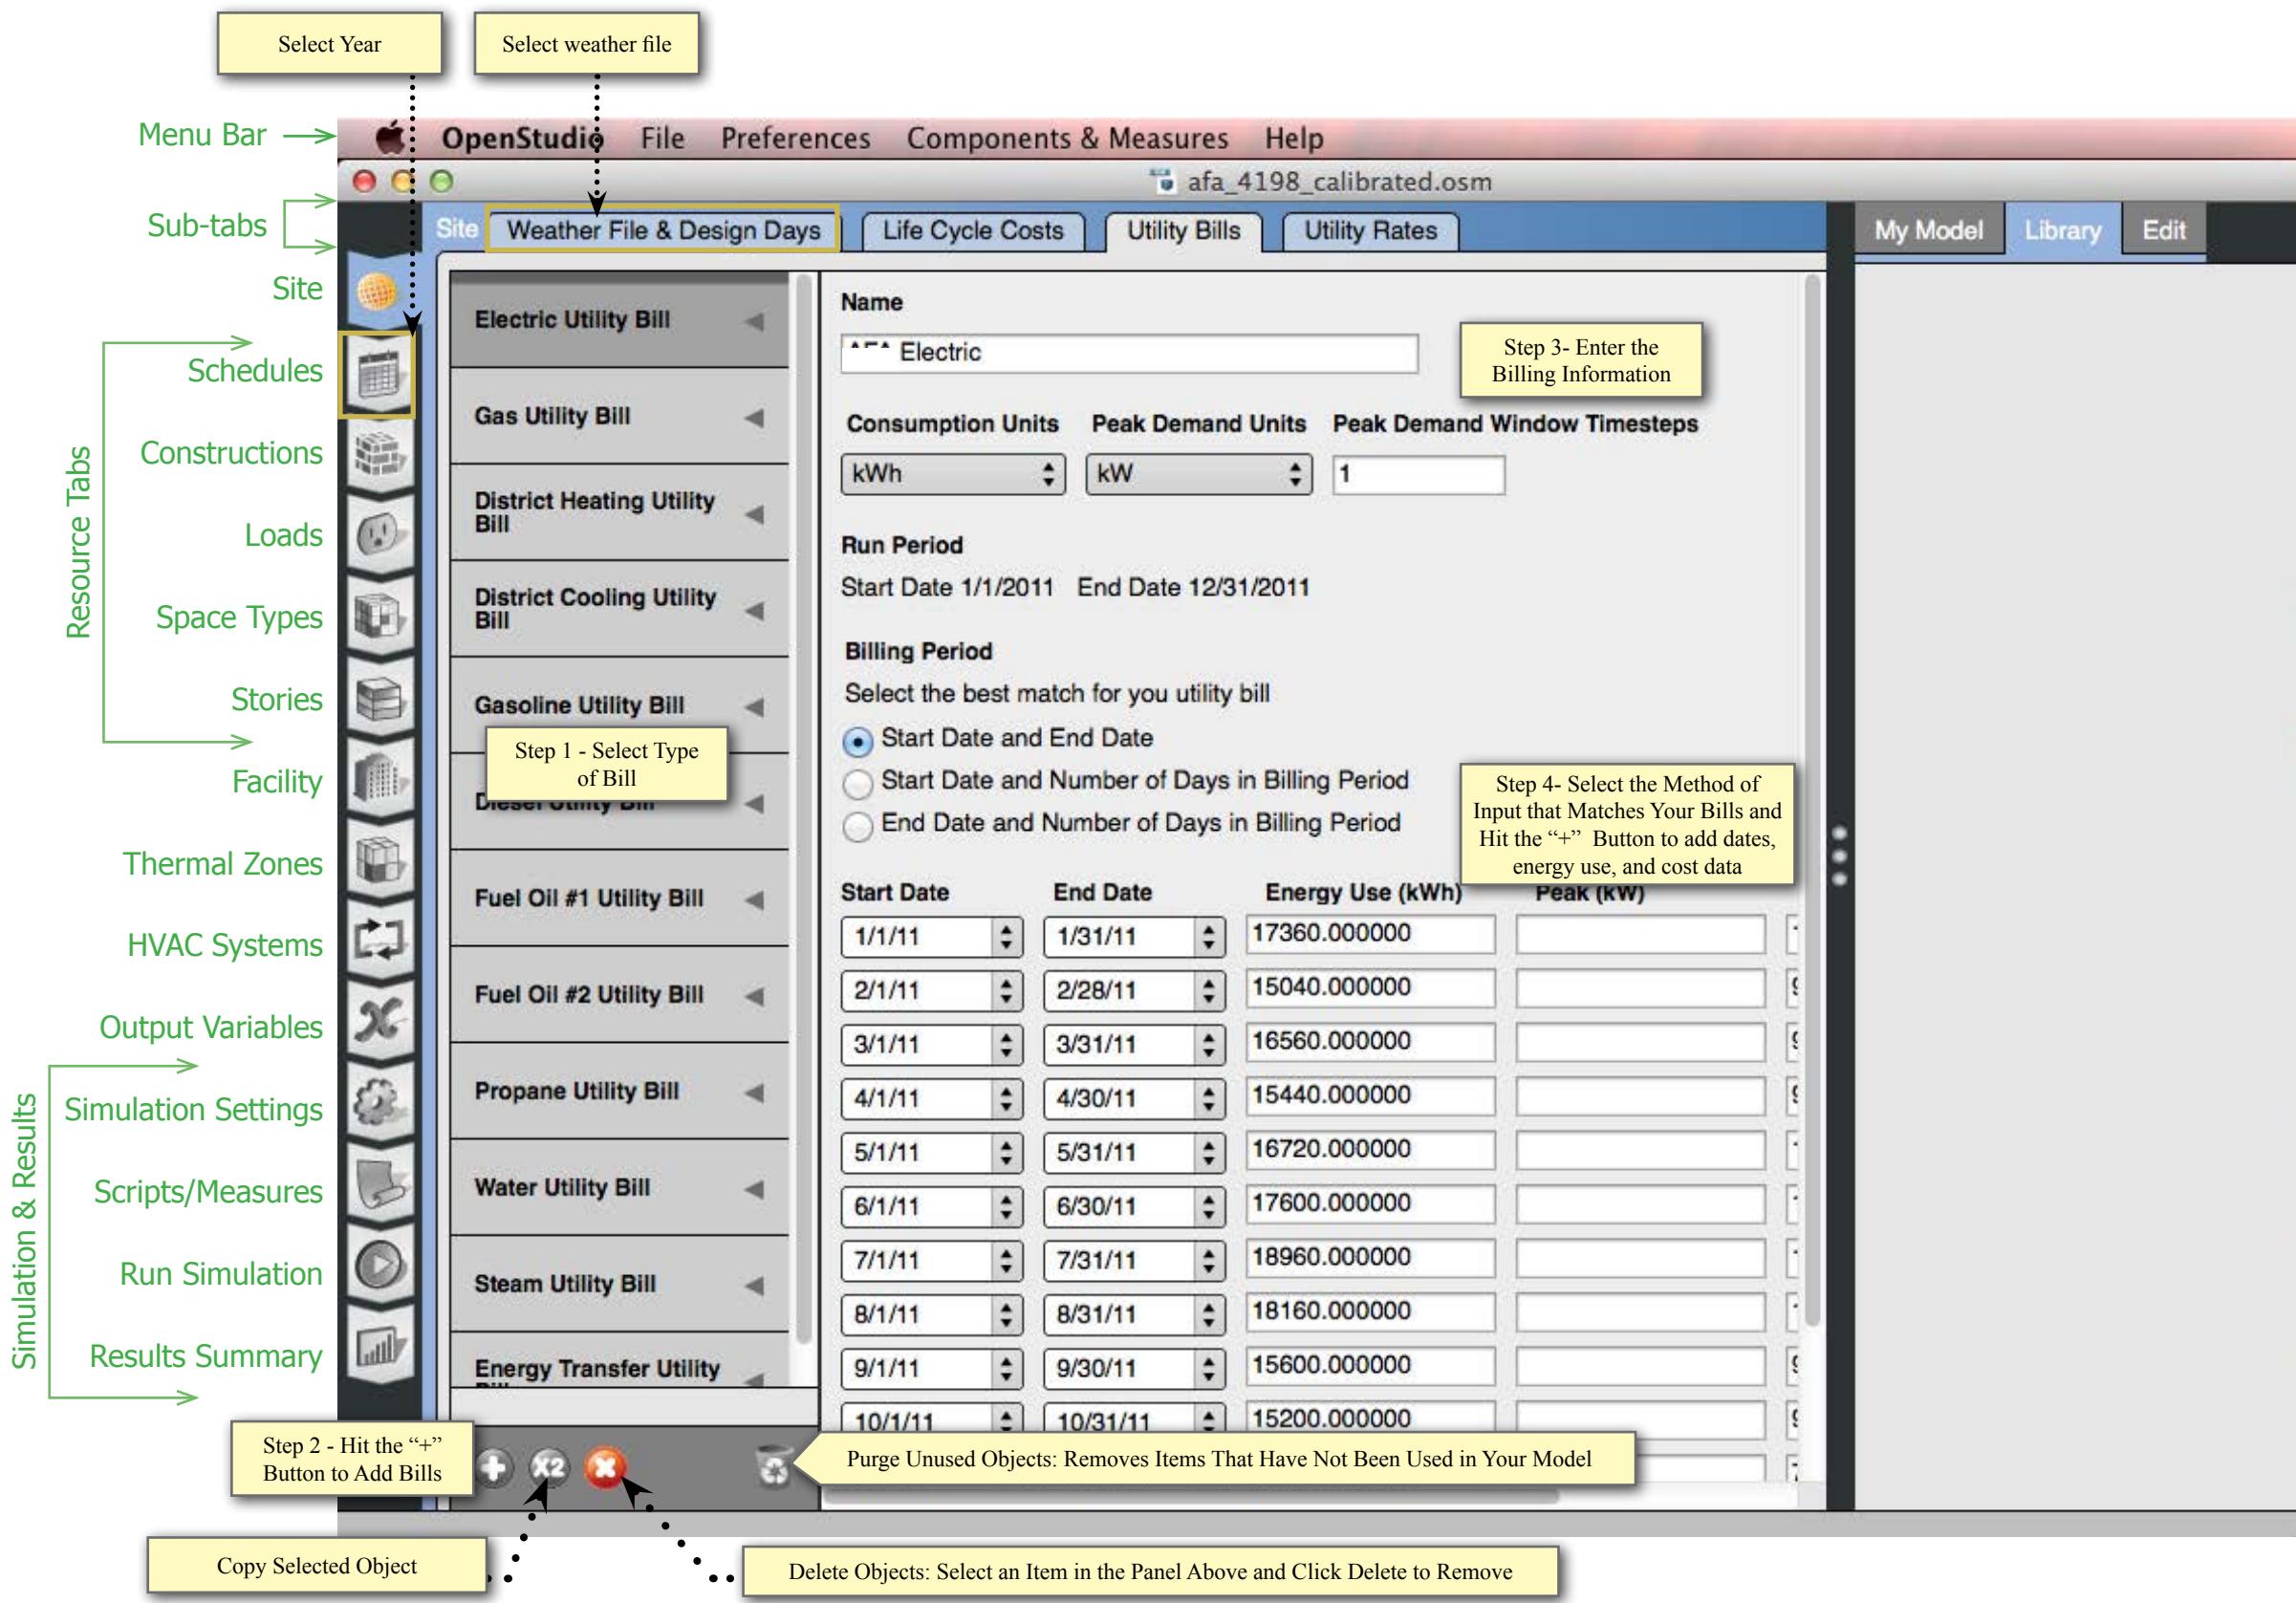

# OpenStudio 1.7.0 Basic Workflow Guide


[openstudio.net](http://openstudio.net)

## Schedules - Year Settings

### Notes

The Year Settings sub-tab lets you set the day of the week the simulation should start. Define using Calendar Year or First Day Of Year buttons and pull-downs.

The tab can also be used to configure and turn Daylight Savings Time on and off.

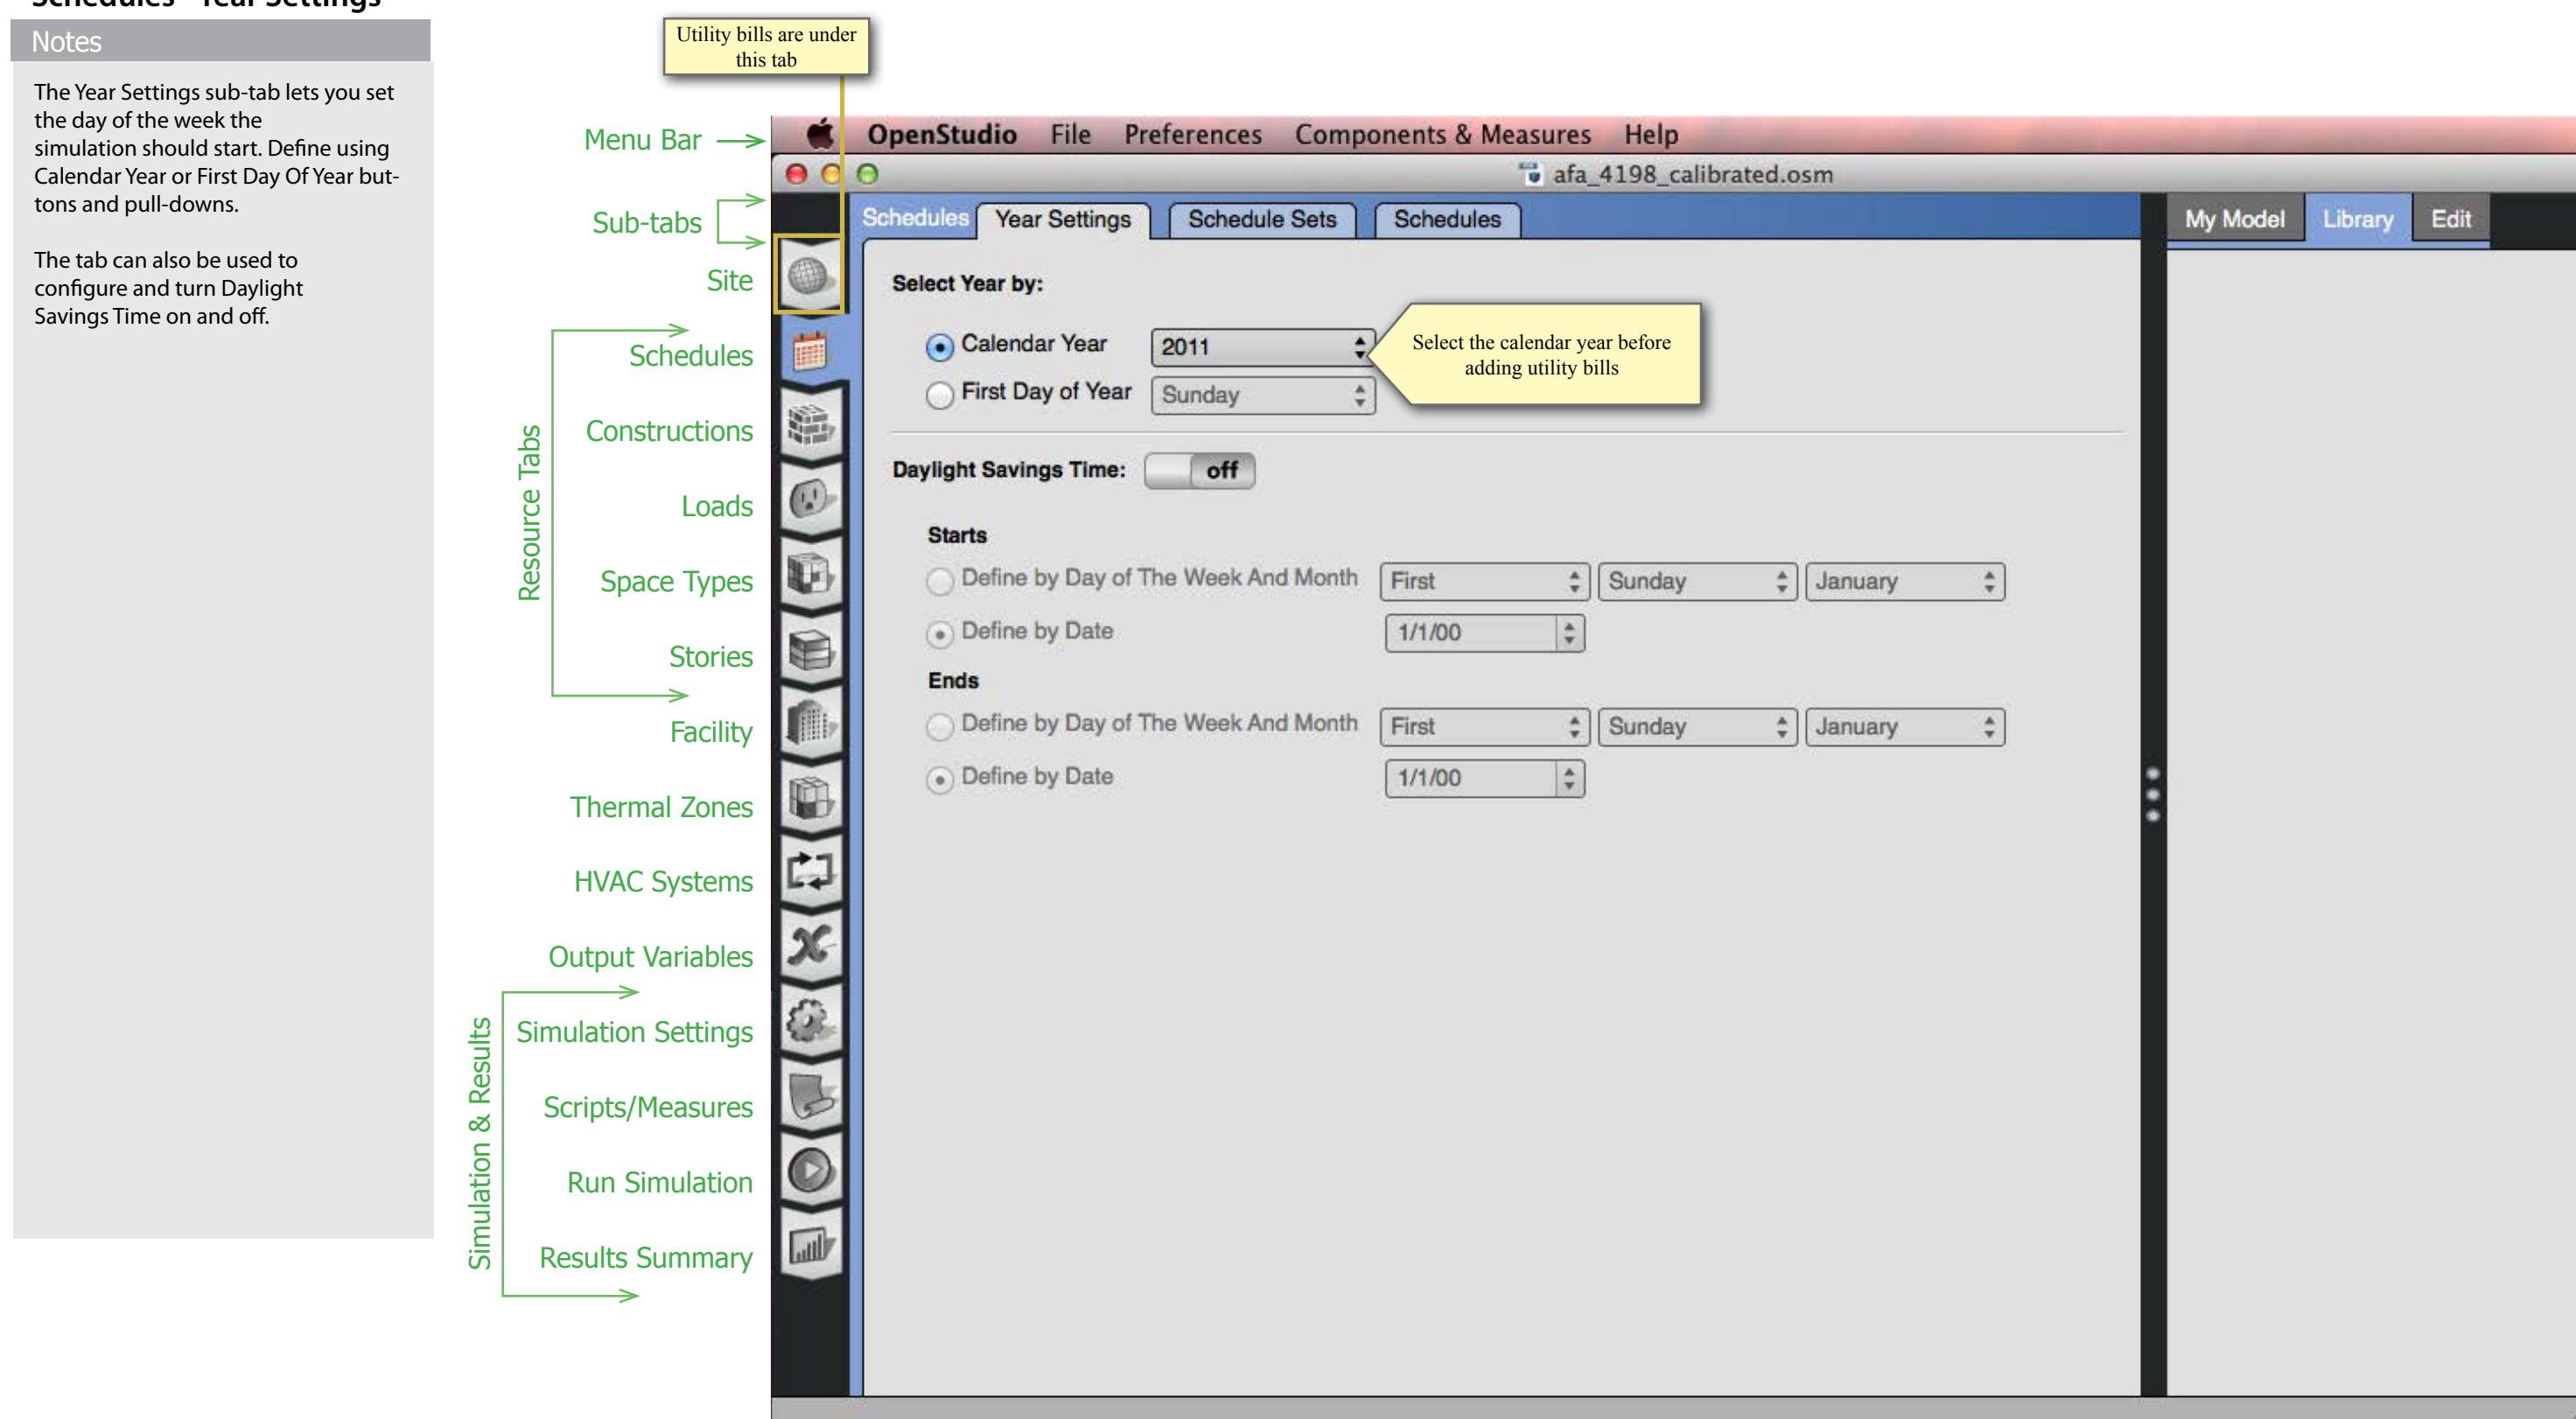

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)


## Schedules - Schedule Sets

### Notes

A Schedule Set is a collection of schedules for building activities or elements.

A schedule set can be applied to an entire building, a story, a space type, or an individual space.

This sub-tab has two kinds of drop zones. You can drop schedule sets from My Model or Library into the bottom of the left pane, or you can drop individual schedules into the drop zones in the main body.

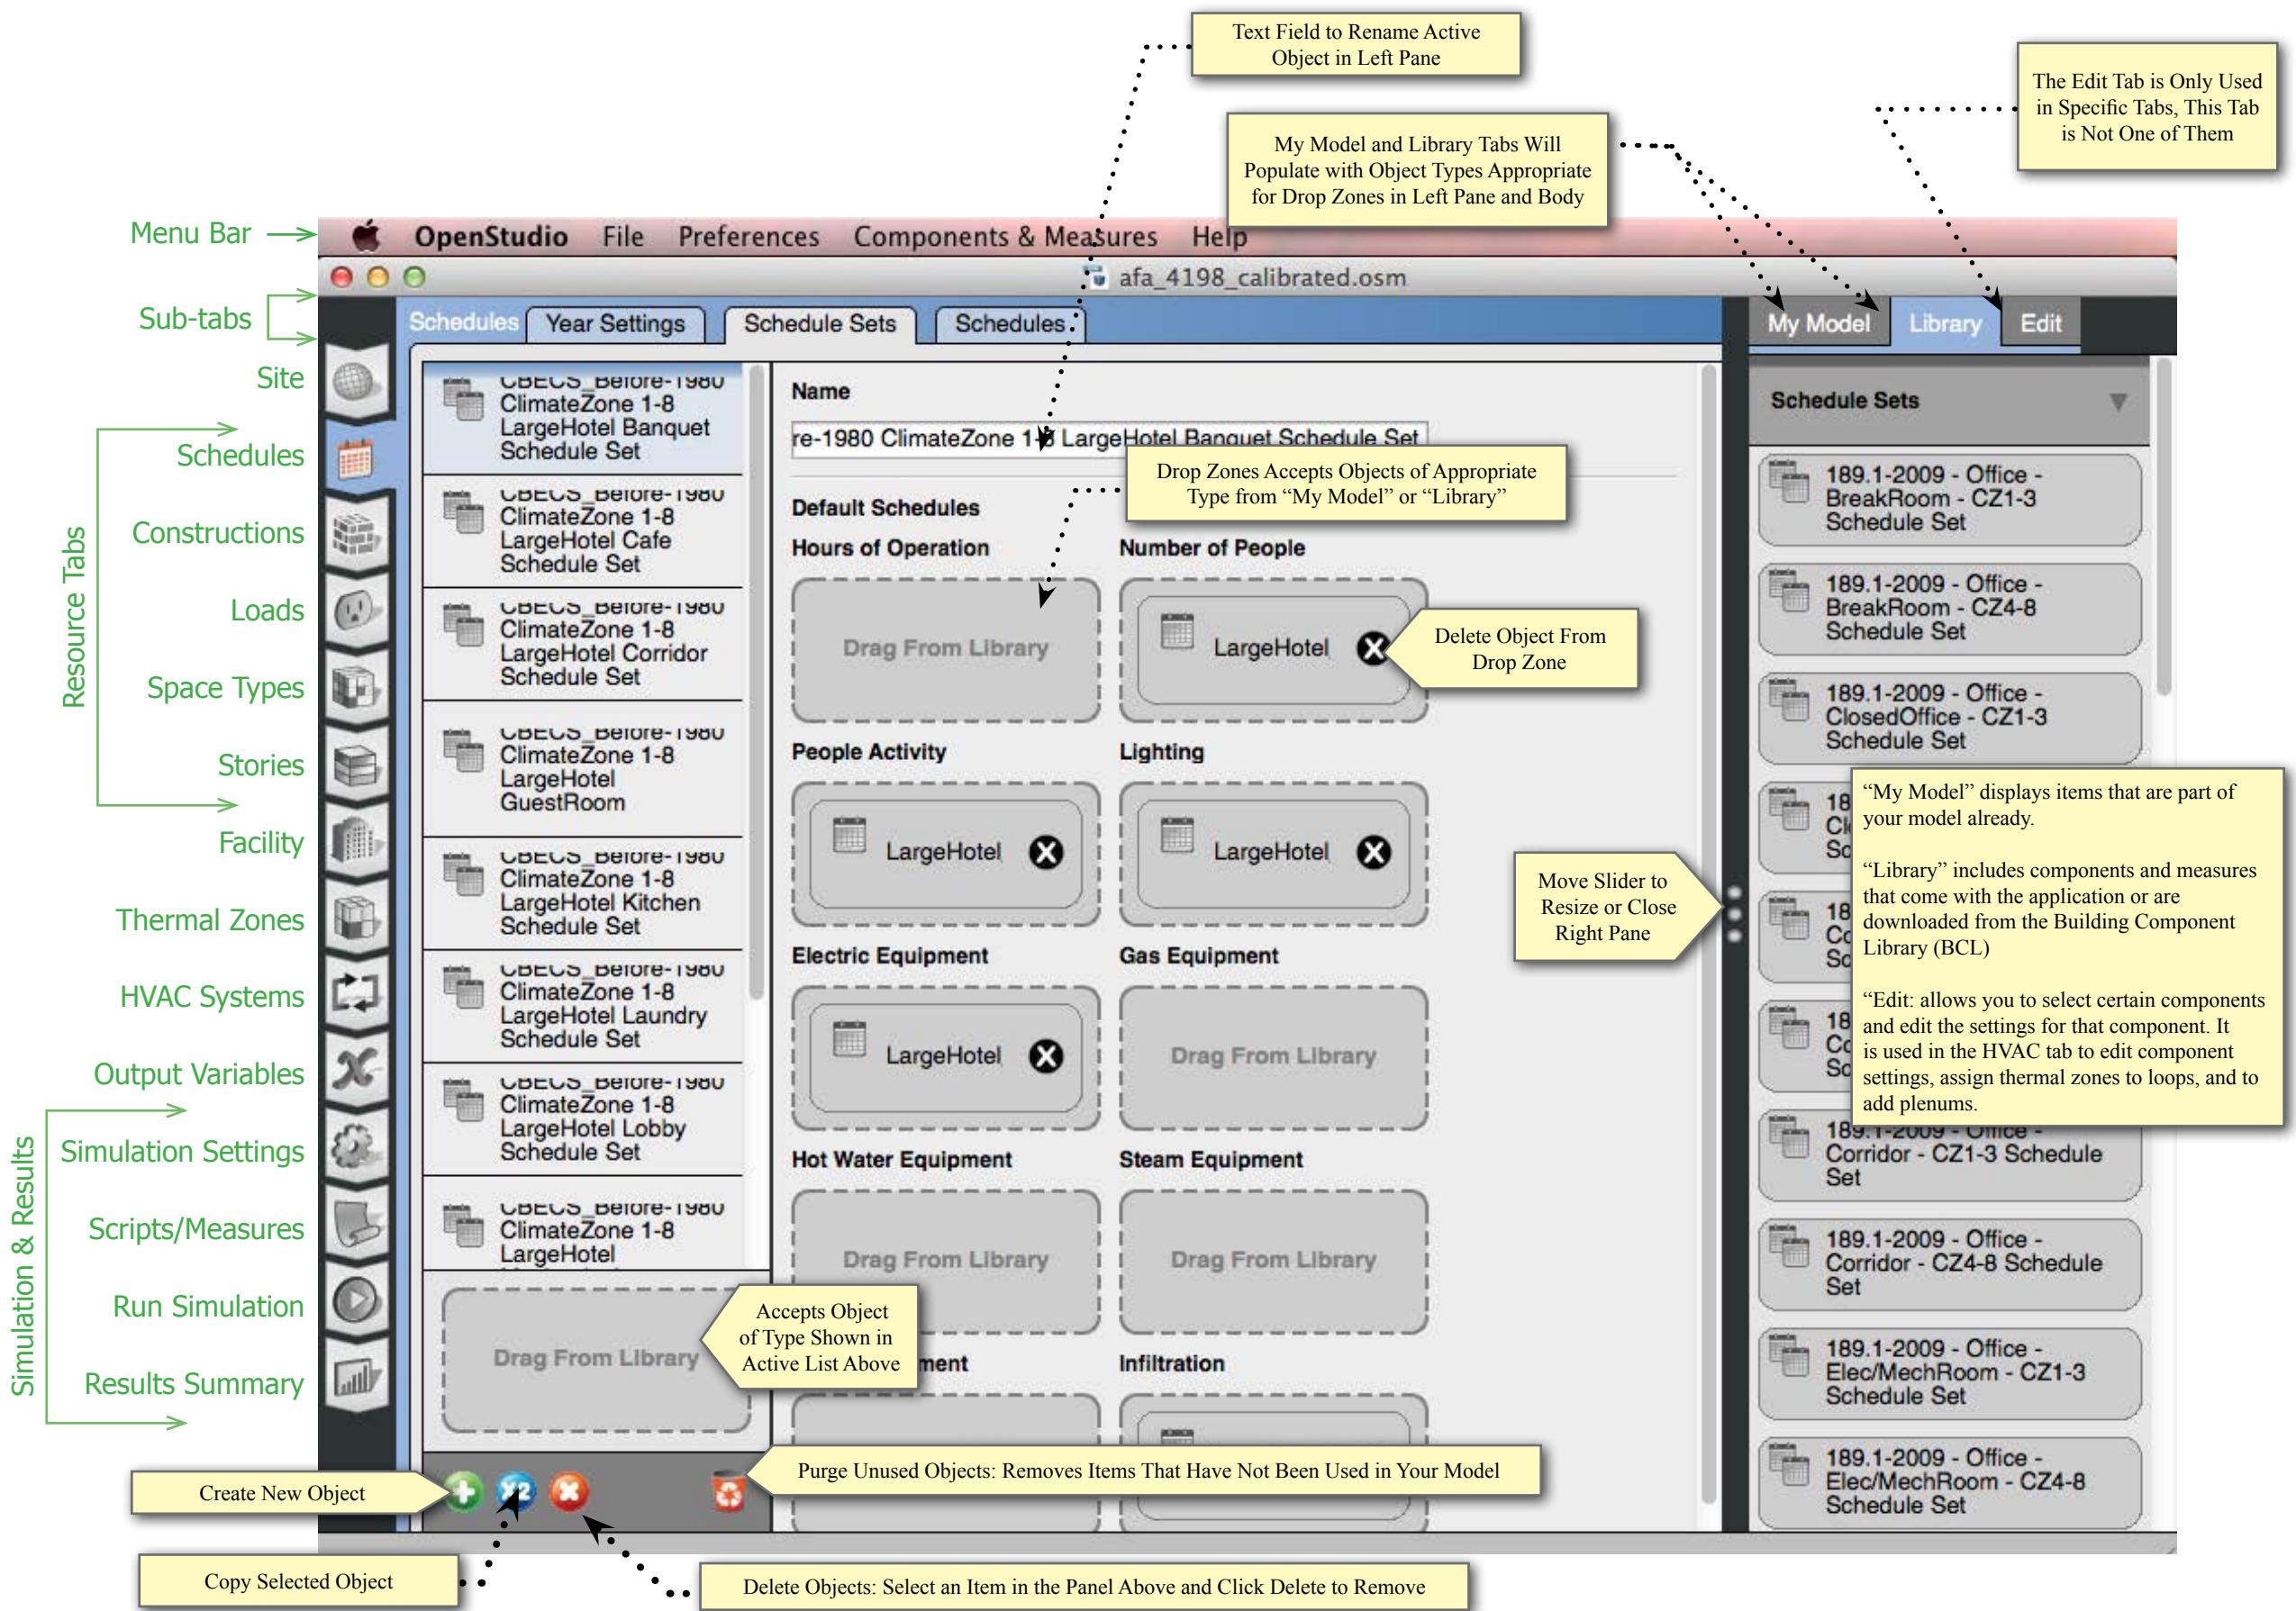

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)

## Schedules - Schedules

### Notes


This tab is a visual editor for Ruleset Schedules. As the name implies, a schedule consists of a series of rules. Each rule or profile can be applied for a specific date range and for specific days of the week.

If two rules appear on the same day, the one with a higher priority is used. You can use the rule colors to visually scan the entire year in the calendar on the right of the body to see what rule is applied for a specific day.

A new profile starts as a flat line. Double click to split the profile and then drag one segment up or down. Vertical sections can also be dragged left or right. Click Set Limits to change the vertical limits of your profile. To type precise values for a profile, mouse over the profile and enter a value with your keyboard.

Although you can use Compact and other schedule types in your model, you can visualize and edit only Ruleset Schedules in the OpenStudio application.

The lower profile view is a navigation for when you are zoomed to 15-minute or 1-minute time steps.

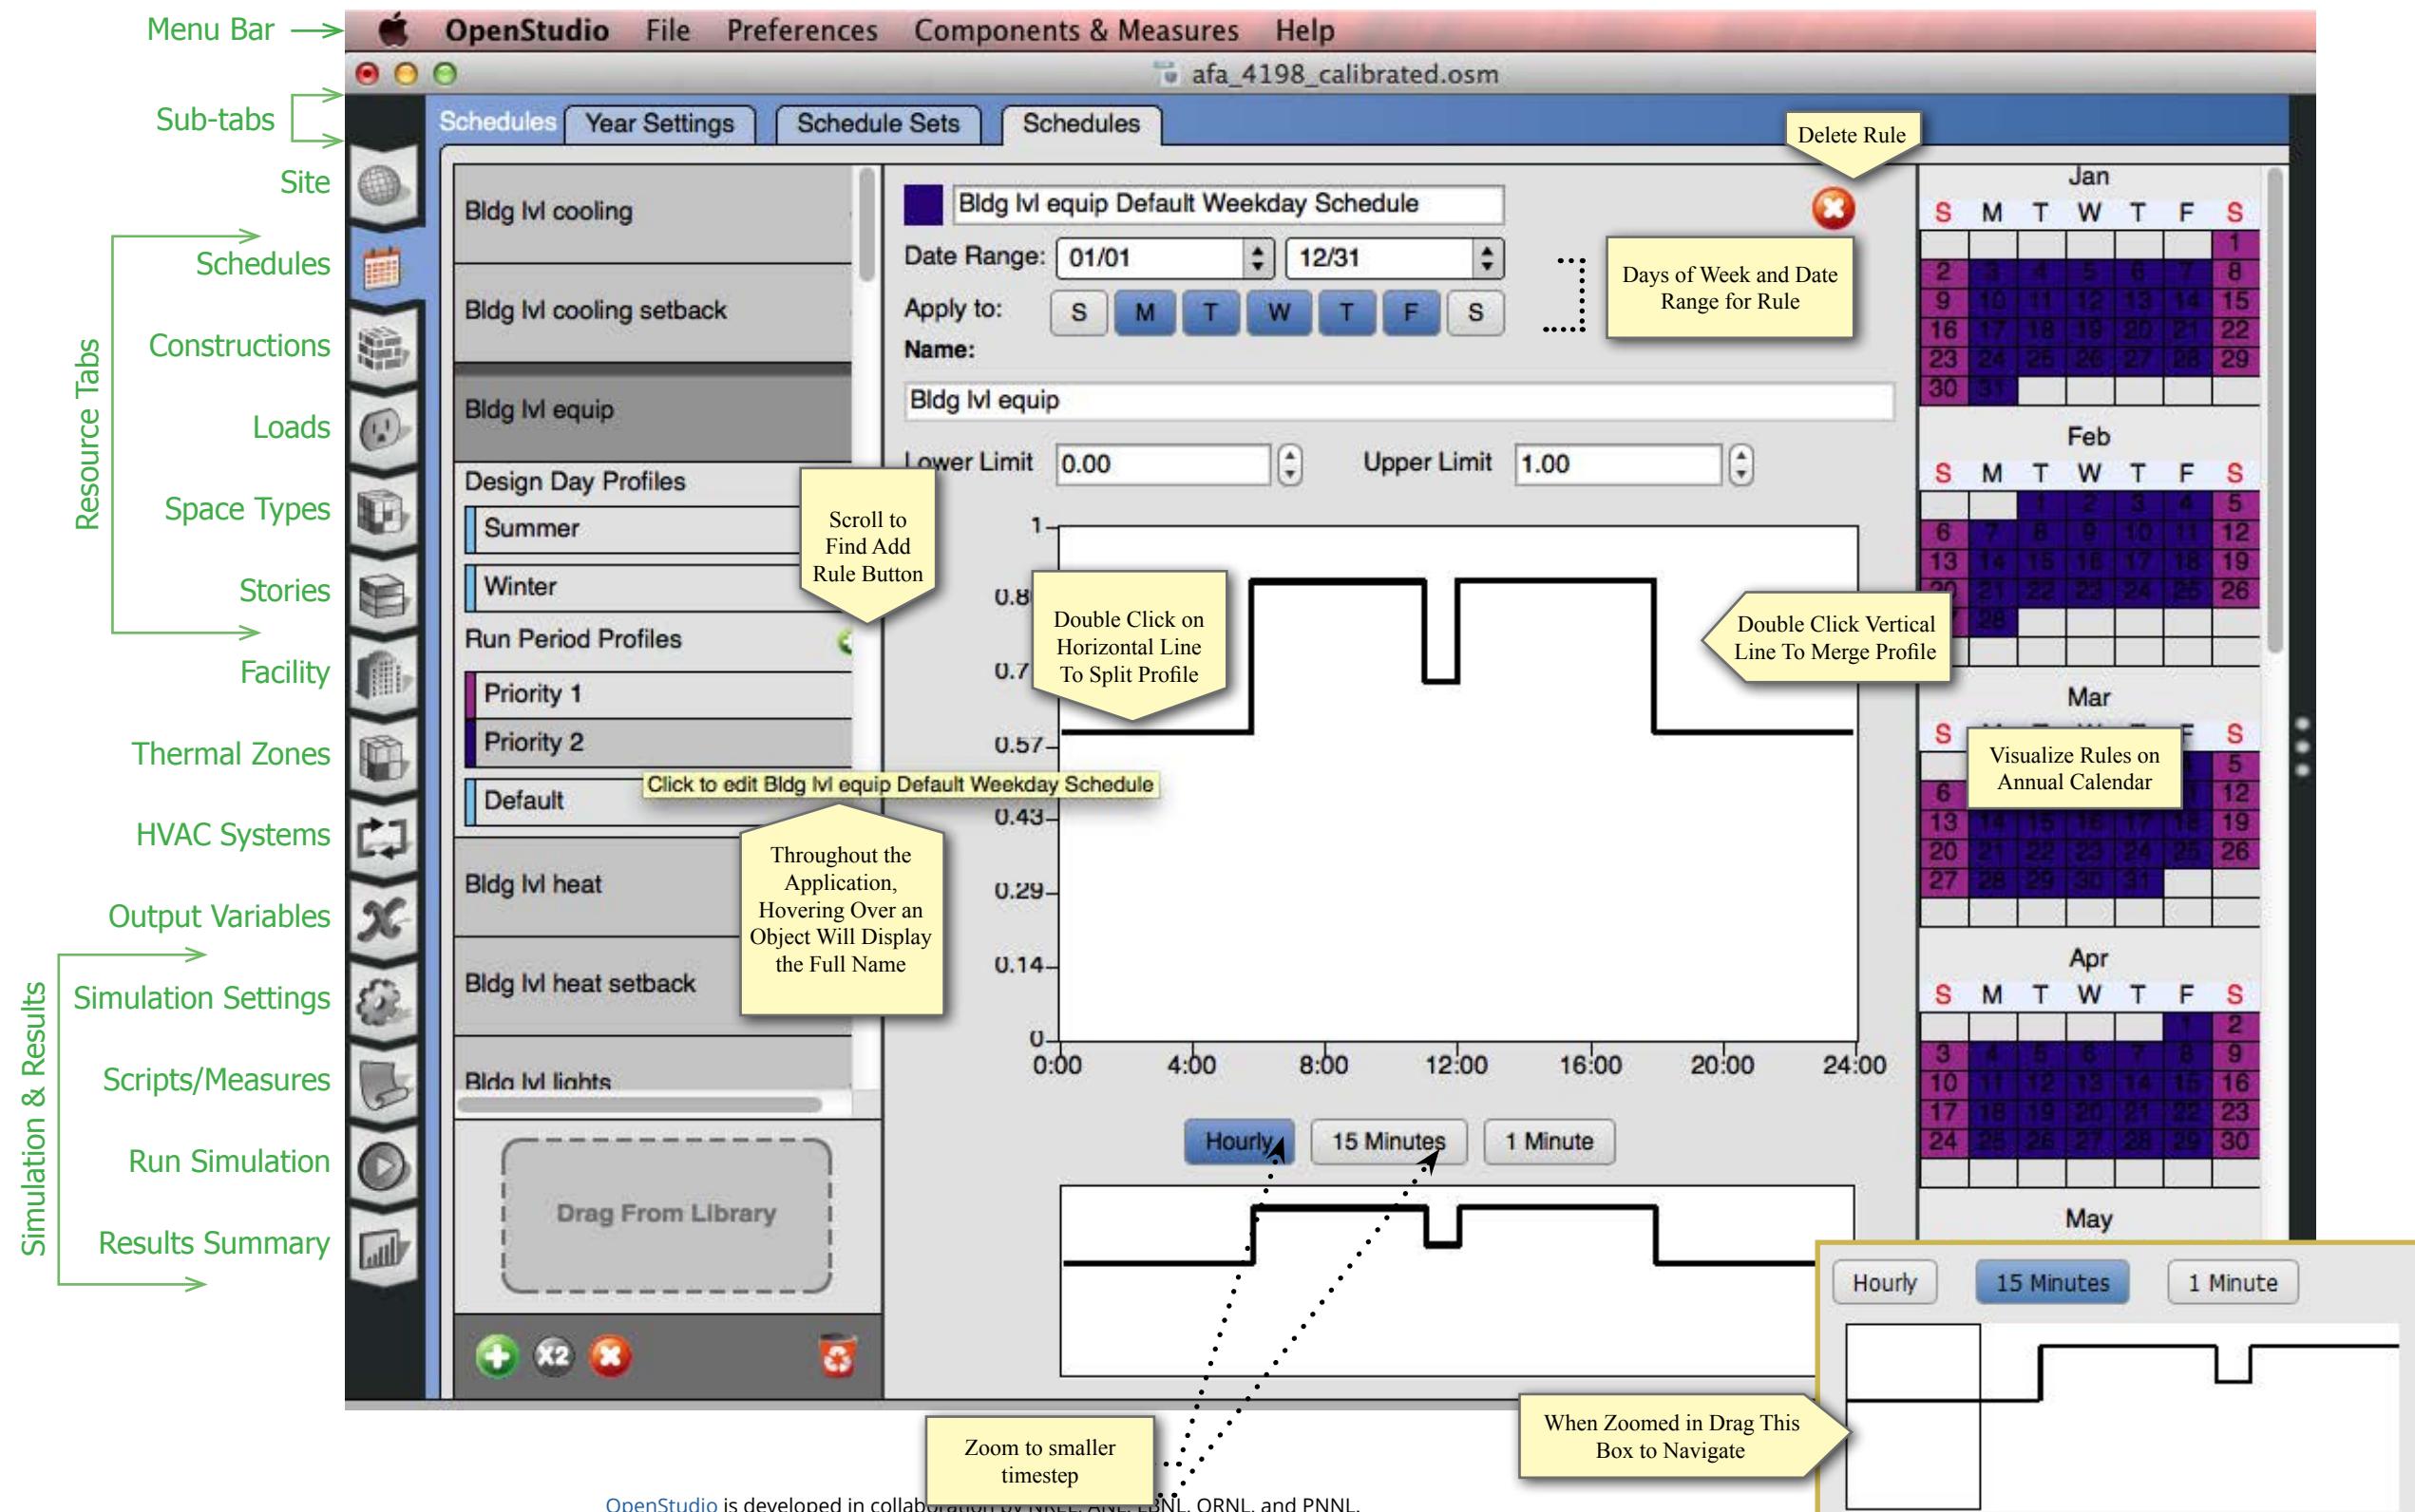

# OpenStudio 1.7.0 Basic Workflow Guide

[openstudio.net](http://openstudio.net)


## Constructions — Construction Sets

### Notes

A Construction Set object is structured very much like the Schedule Set. It can contain constructions for different surface types and boundary conditions.

A construction set can be applied to an entire building, a story, a space type, or an individual space.

Construction sets do not have to be complete sets. For example, you can have a construction set assigned to a story that has only an exterior wall. For the rest of the surface types, constructions will be inherited from the building object.

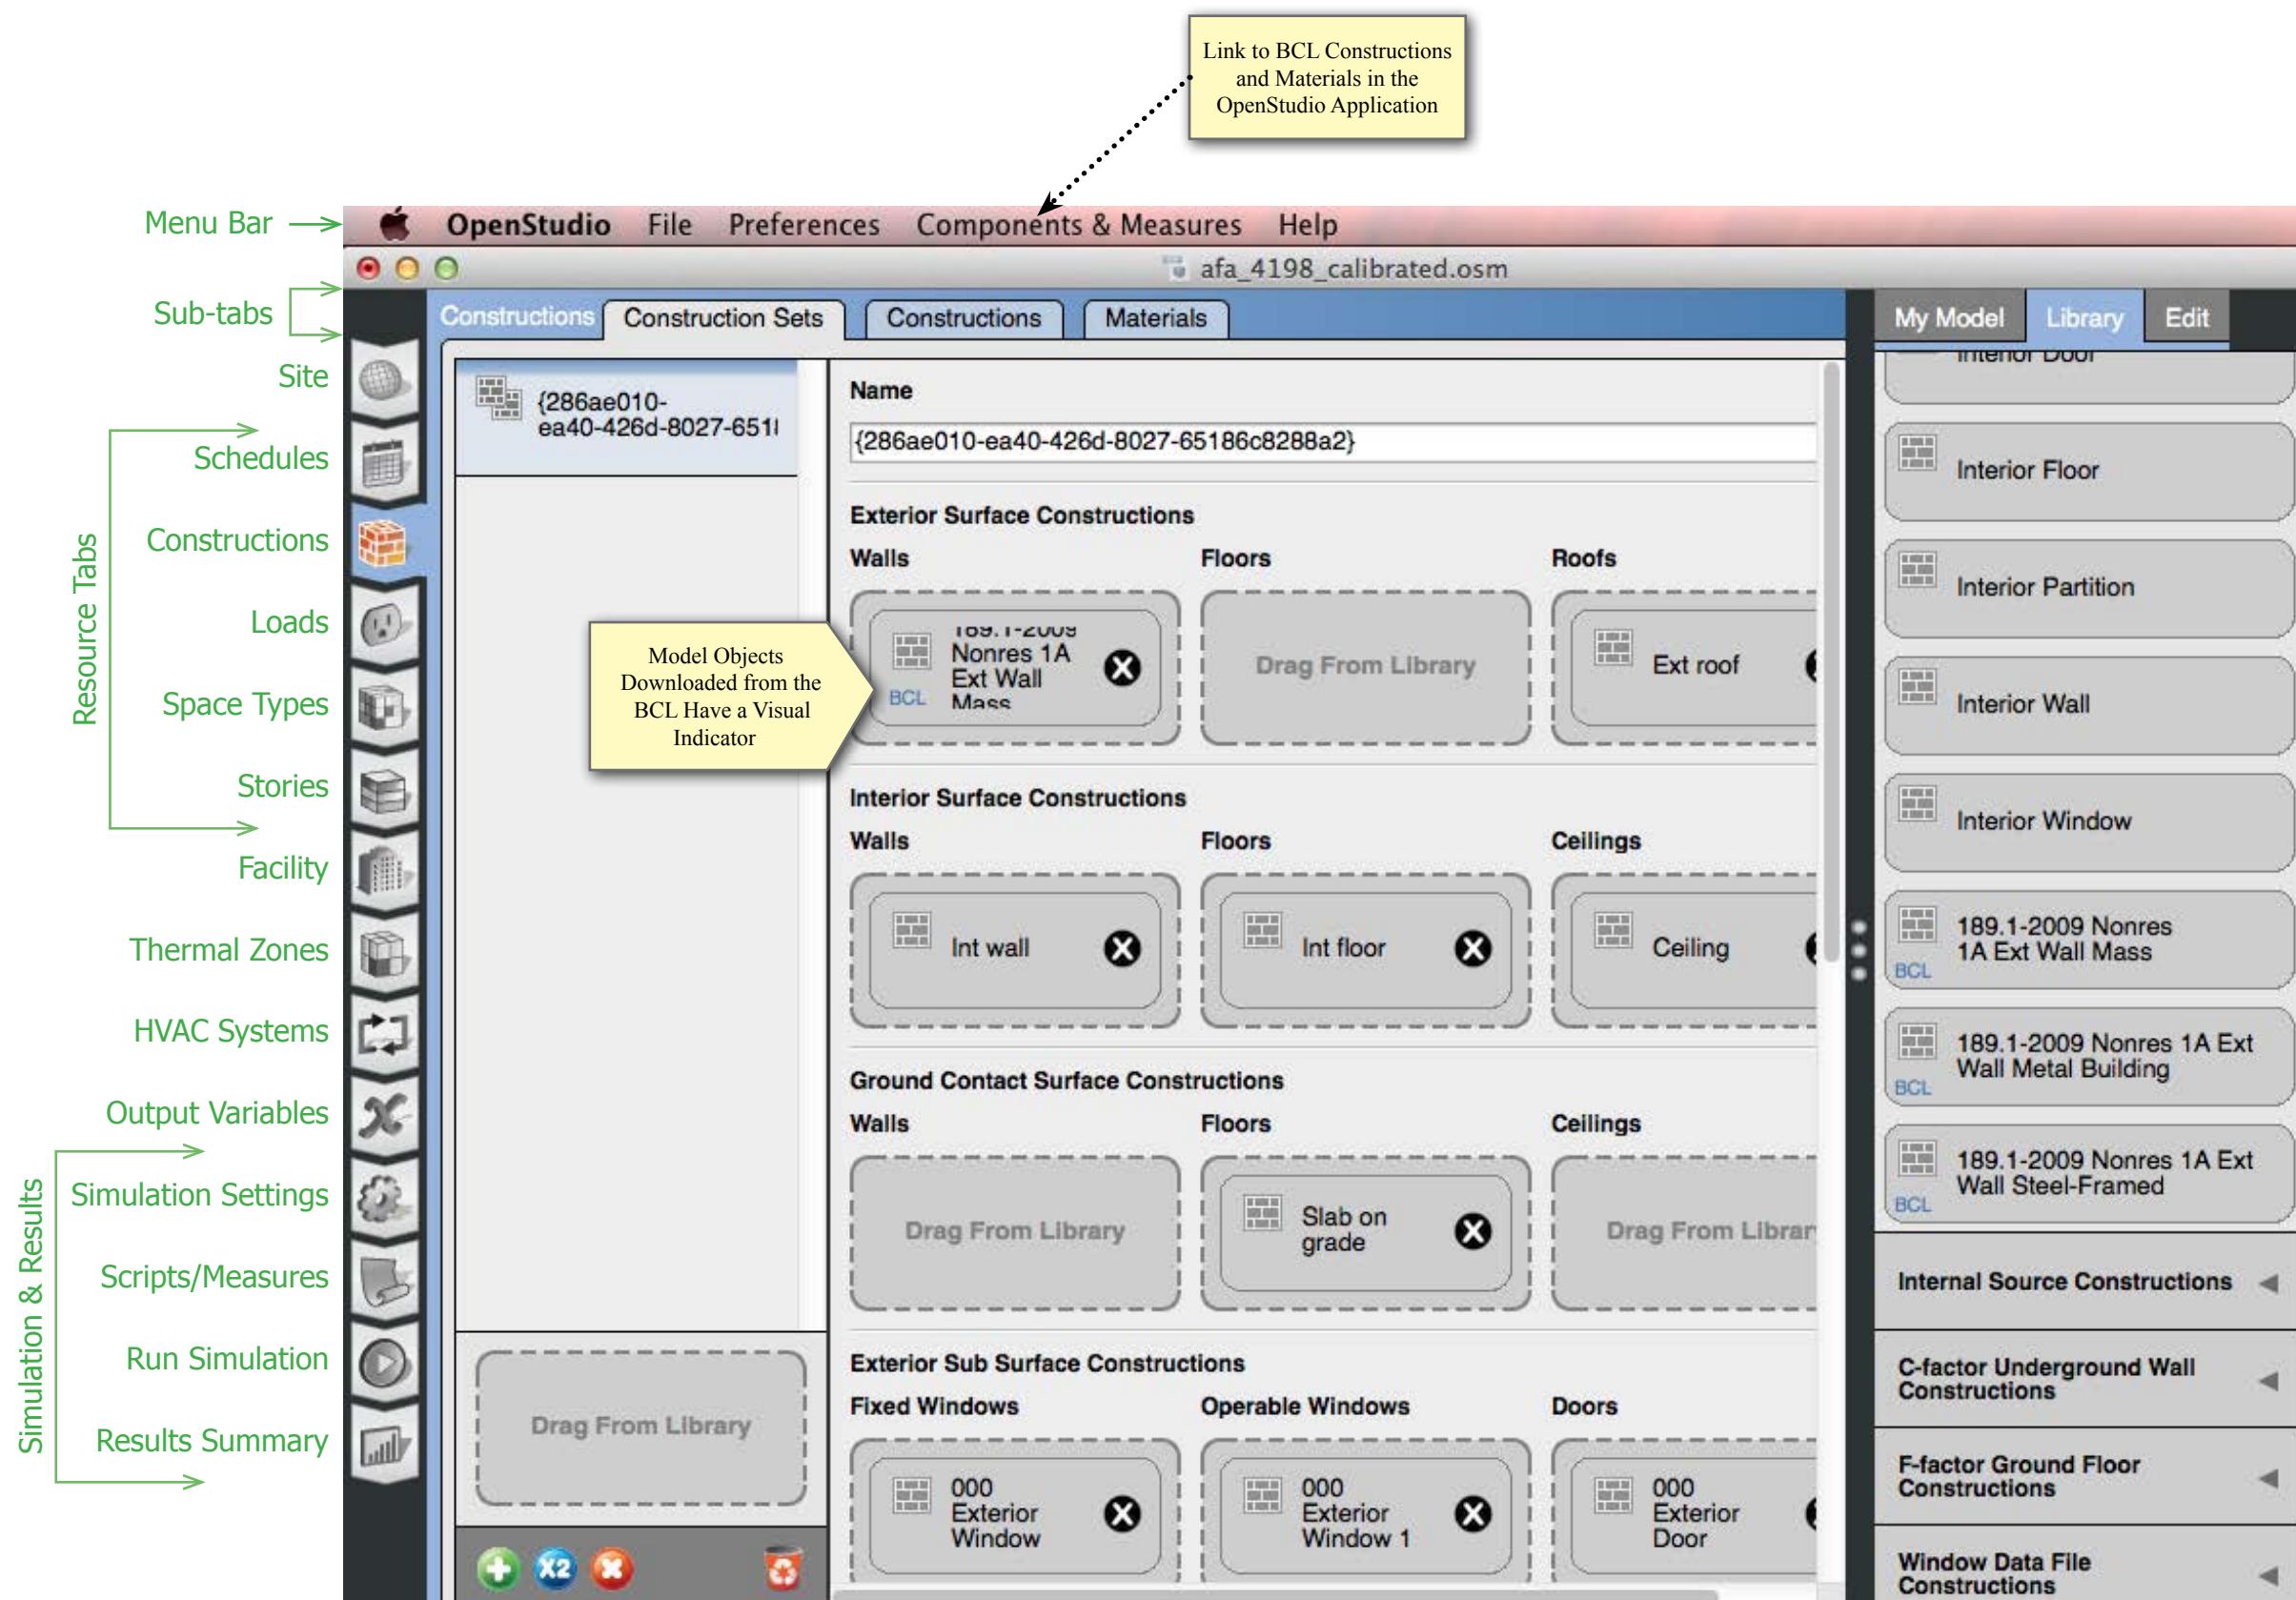

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)


[openstudio.net](http://openstudio.net)

## Constructions — Constructions

### Notes

The Constructions sub-tab lists construction objects that are in your model. You can drag additional constructions here from the library. Constructions download using the Online BCL window will appear in the library with a "BCL" flag.

A construction consists of one or more material layers. You can add materials by dragging them from My Model or the Library to the drop zone. You can only add new materials to the bottom which represents the inside of the wall. You can delete any material by clicking the "x" next to the name.

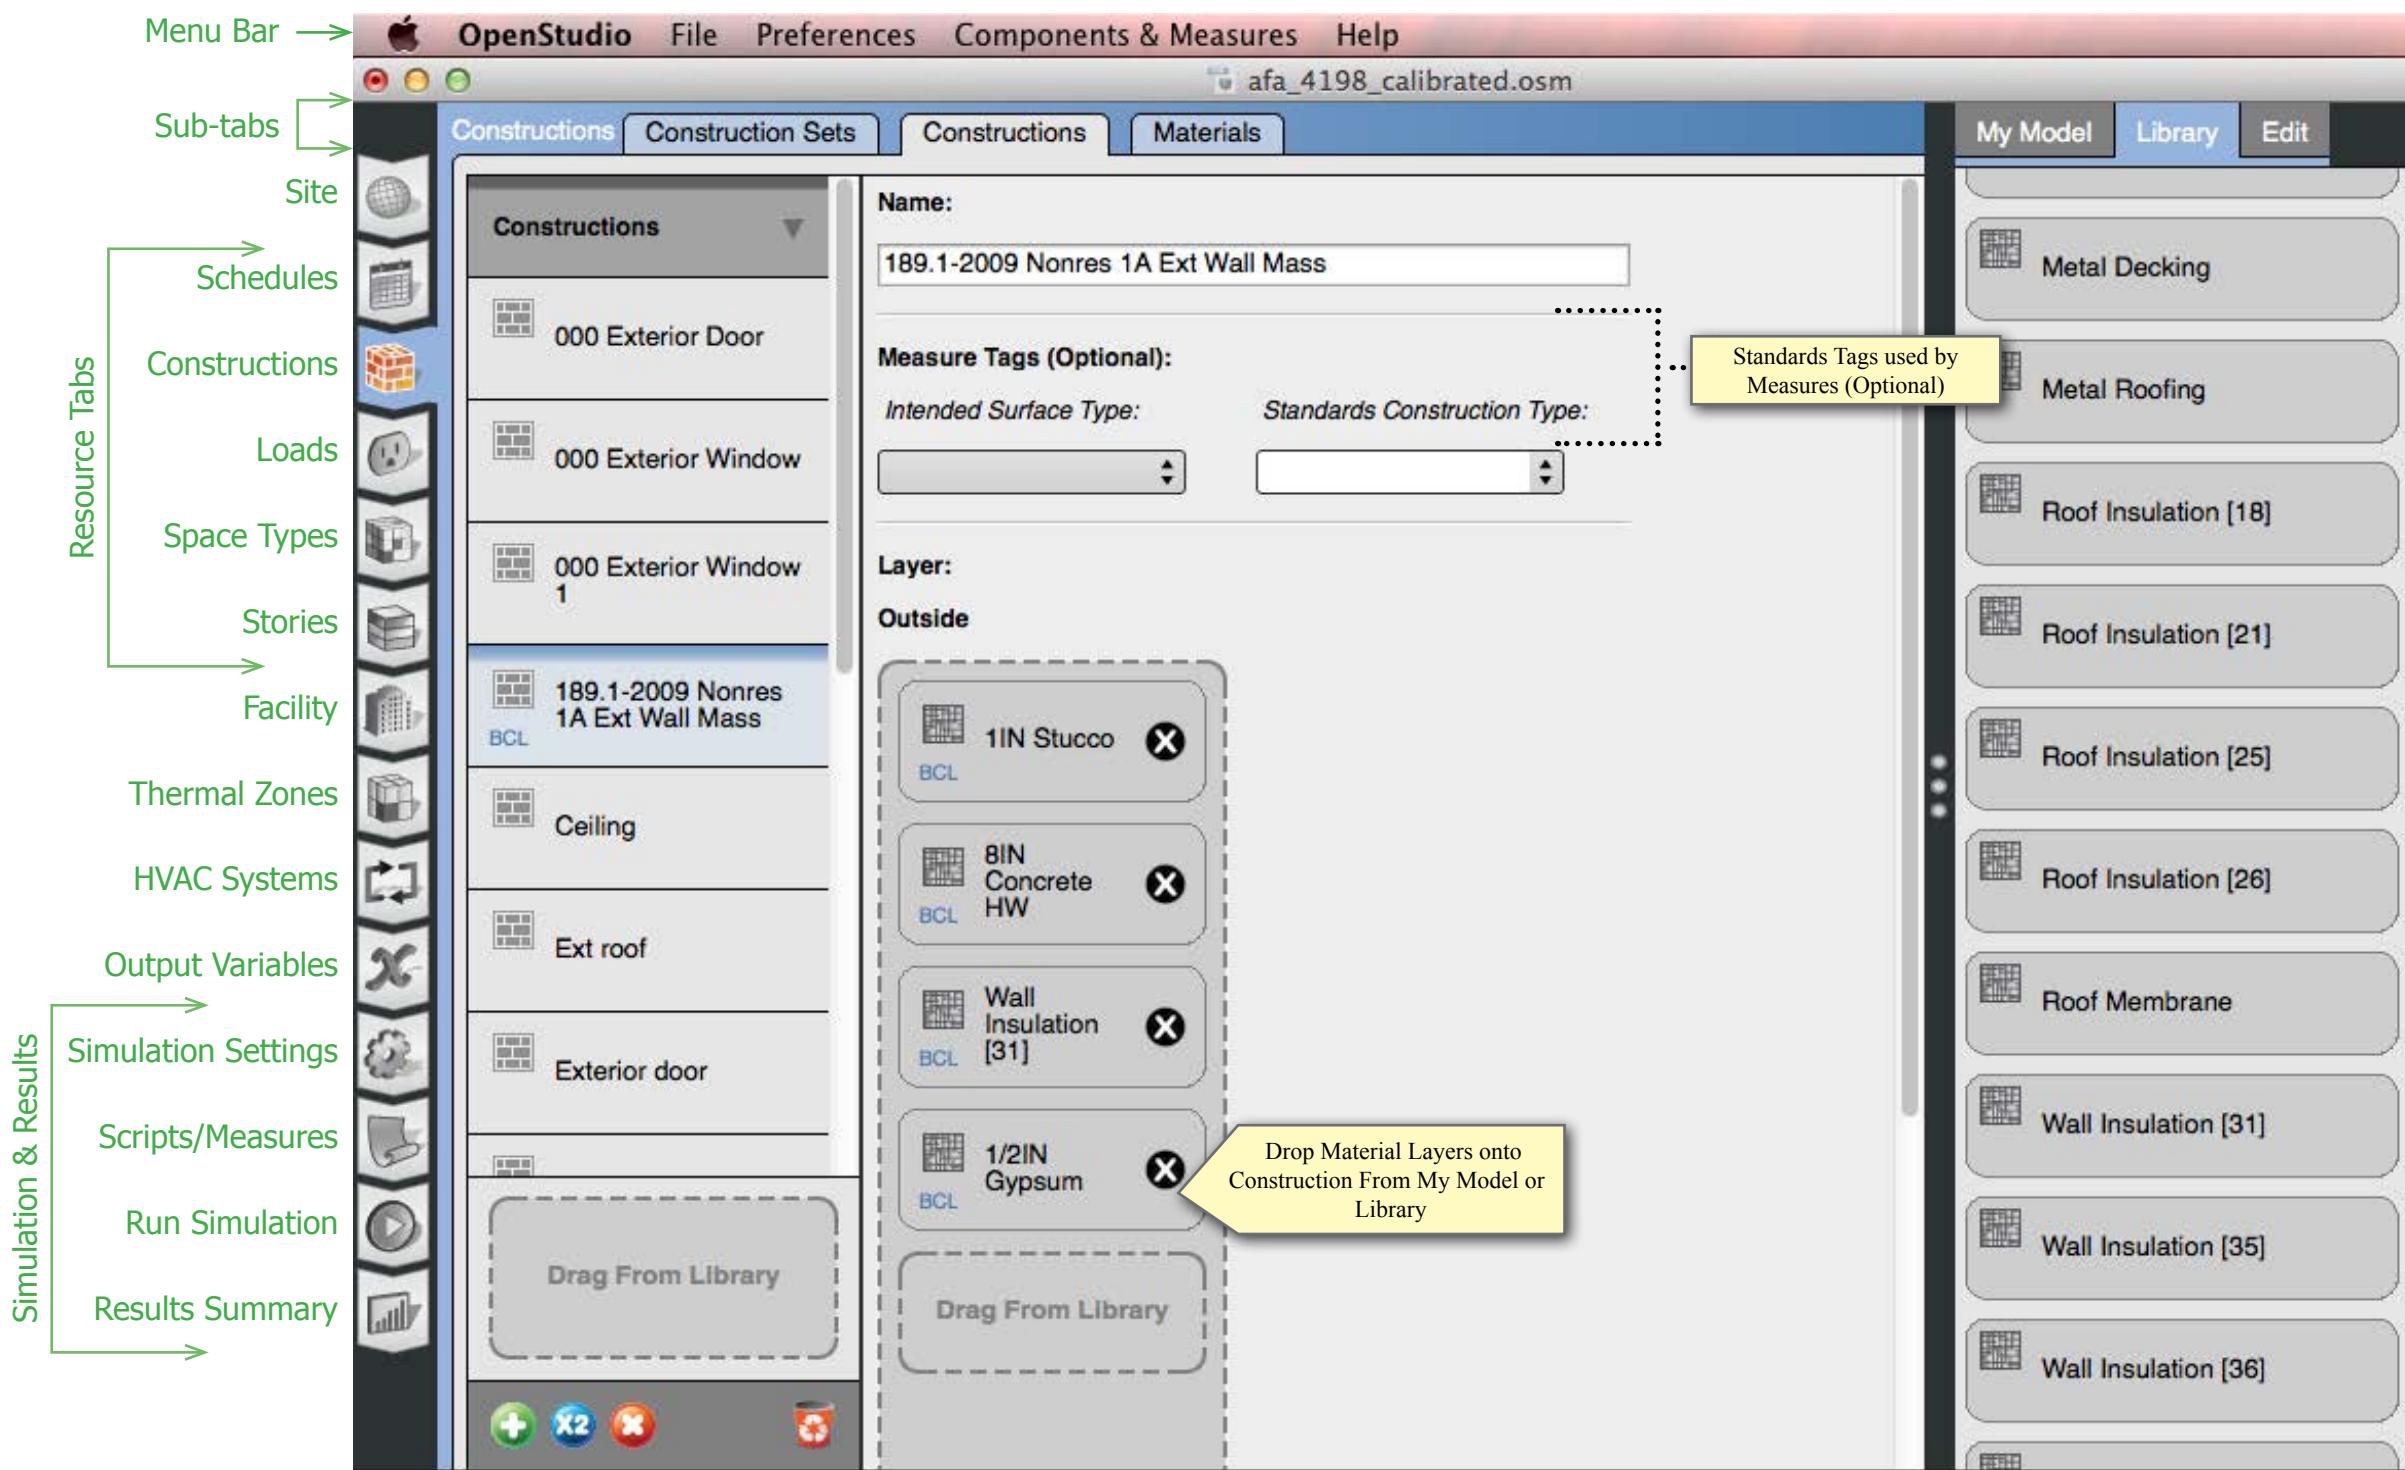

# OpenStudio 1.7.0 Basic Workflow Guide

[openstudio.net](http://openstudio.net)


## Constructions — Materials

### Notes

Constructions are made of one or more layers of materials. The Materials sub-tab lets you inspect and edit those materials.

There are various classes of material objects. When you add a new material, first select the heading for the type of material you want to add and then click the "+" icon at the bottom of the left pane.

Different types of material will have different data fields available.

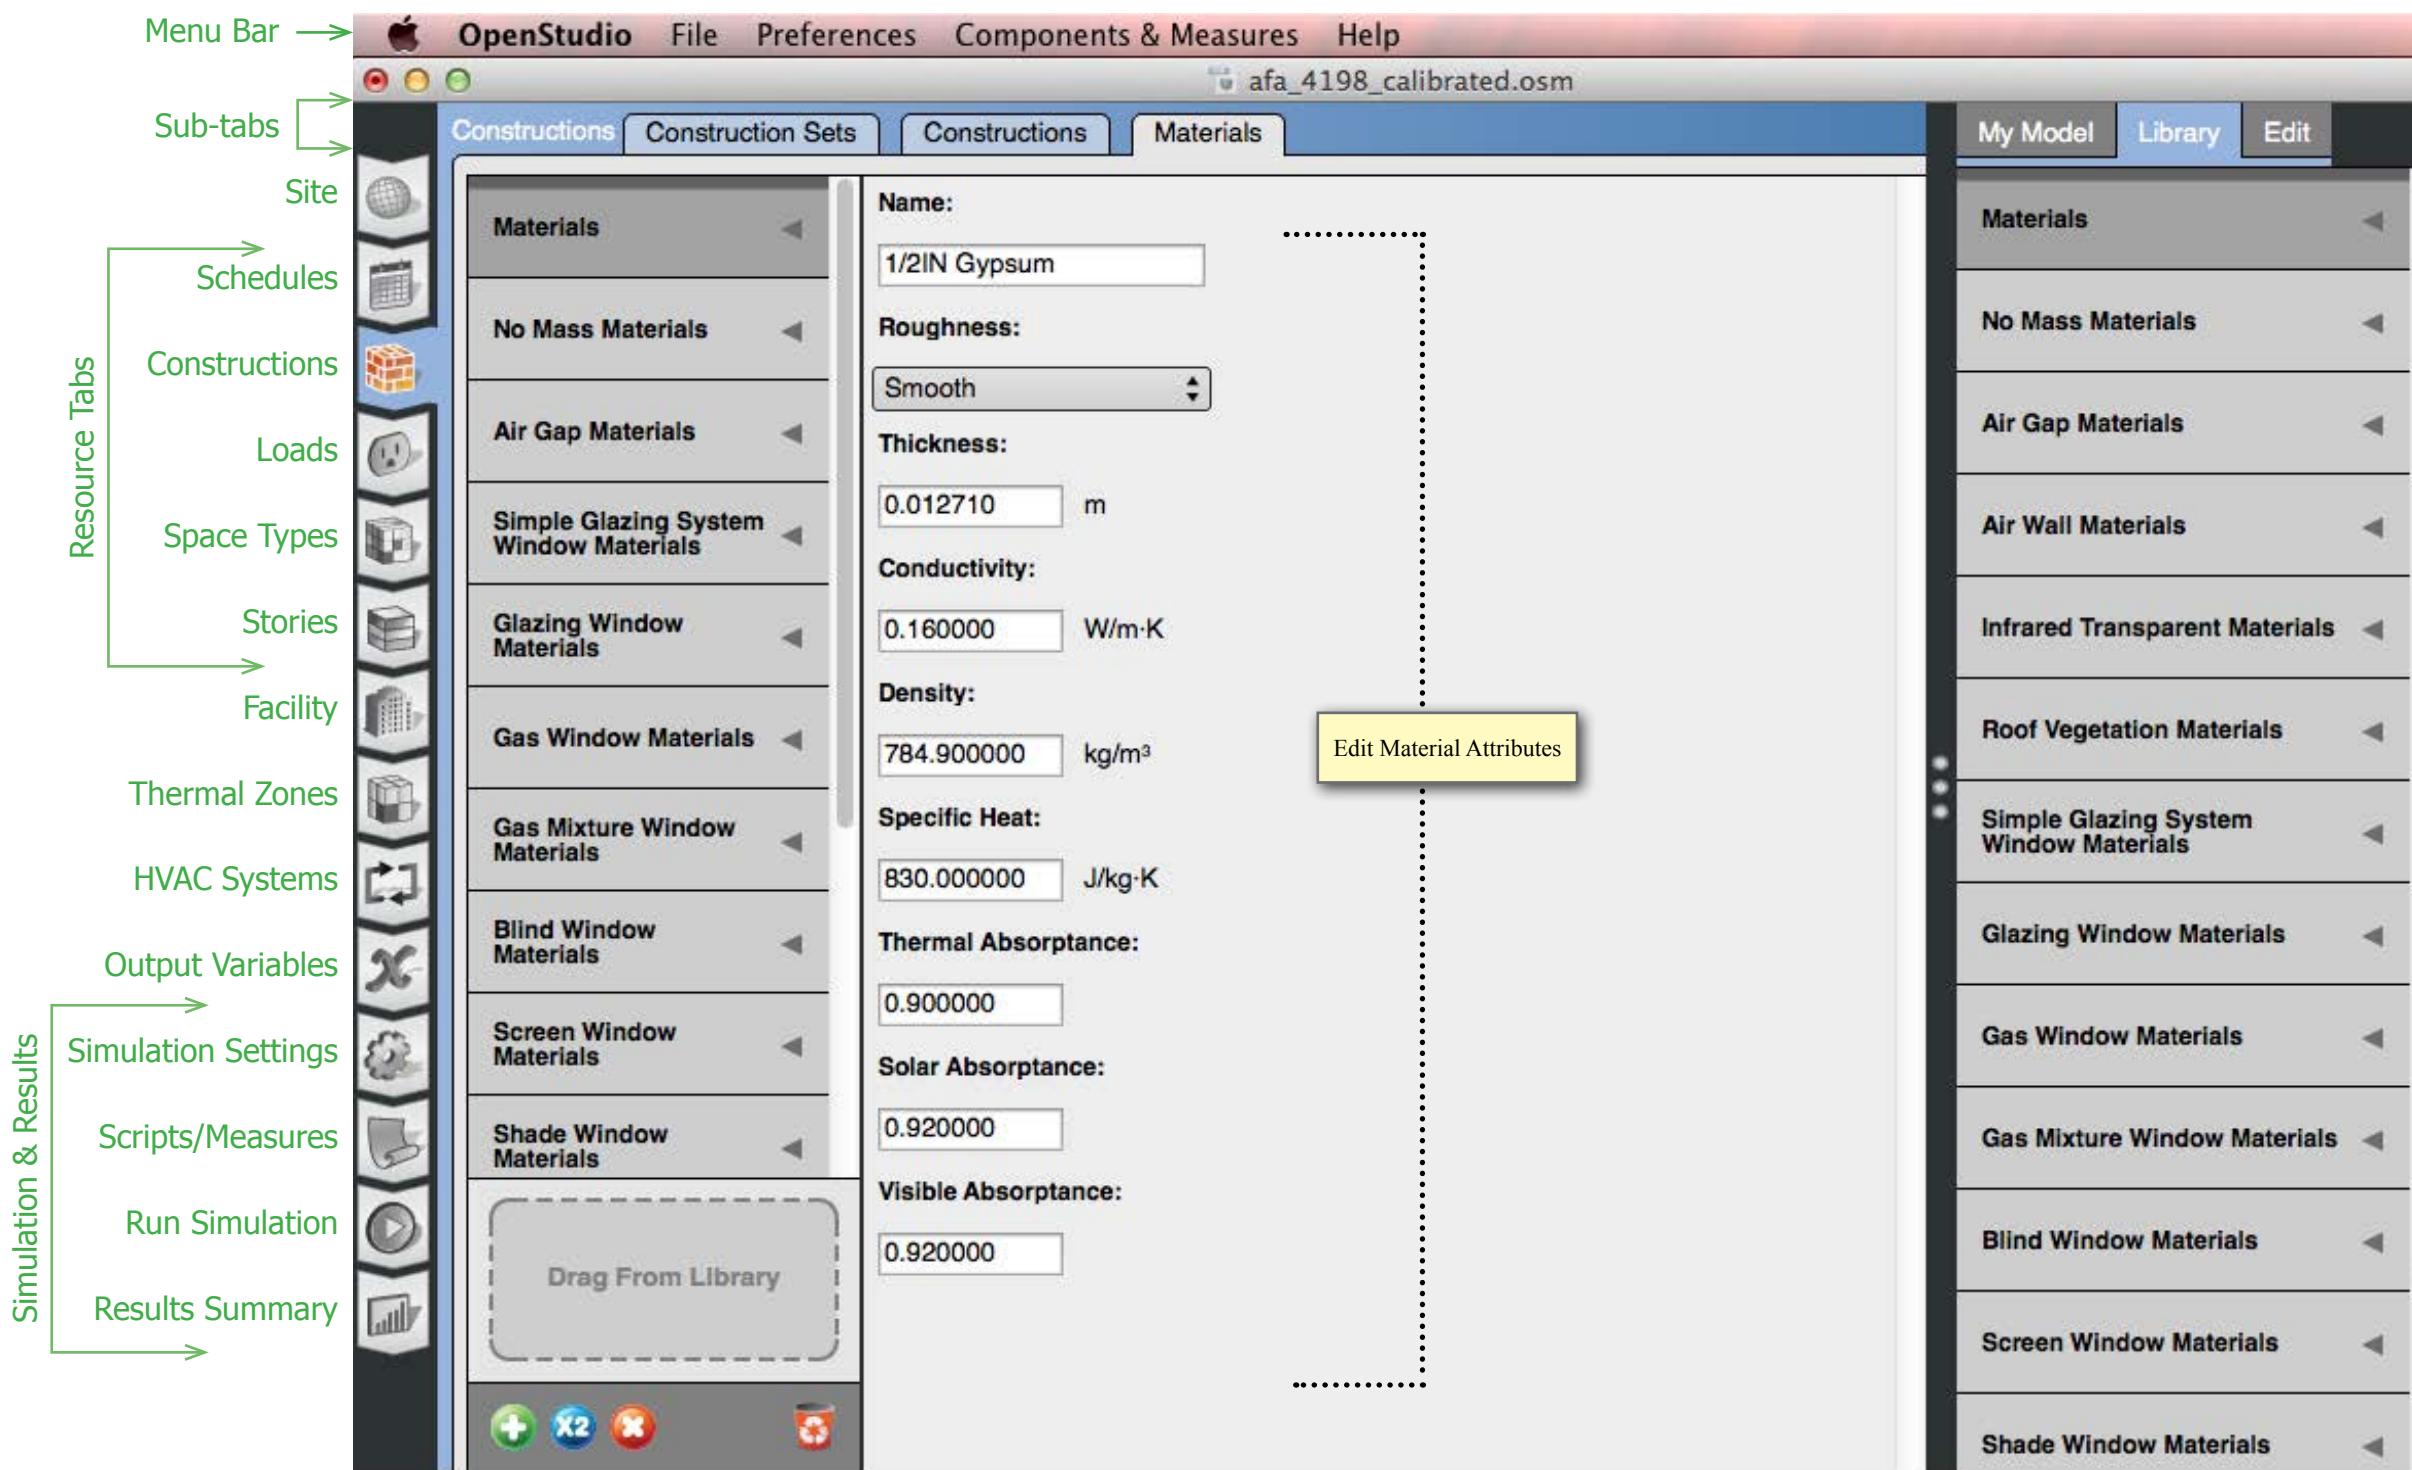

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)

## Loads

### Notes

The Loads tab contains internal load objects. The fields in the body will change appropriately when you pick a different type of load.


You can assign loads to a space type or directly to a space, except for Water Use Equipment.

The types of loads that can be added in this tab follow.

- People
- Lights
- Luminaires
- Electric Equipment
- Gas Equipment
- Steam Equipment
- Other Equipment
- Internal Mass
- Water Use Equipment

Internal mass is different than the other loads in that it does not use fuel; rather, it stores heat and then dissipates the heat over time. The inputs require a surface area assigned to a construction object.

Water Use Equipment is also unique in that it takes schedules, and is not part of a space type. Water Use Equipment is applied in the HVAC Systems Tab.

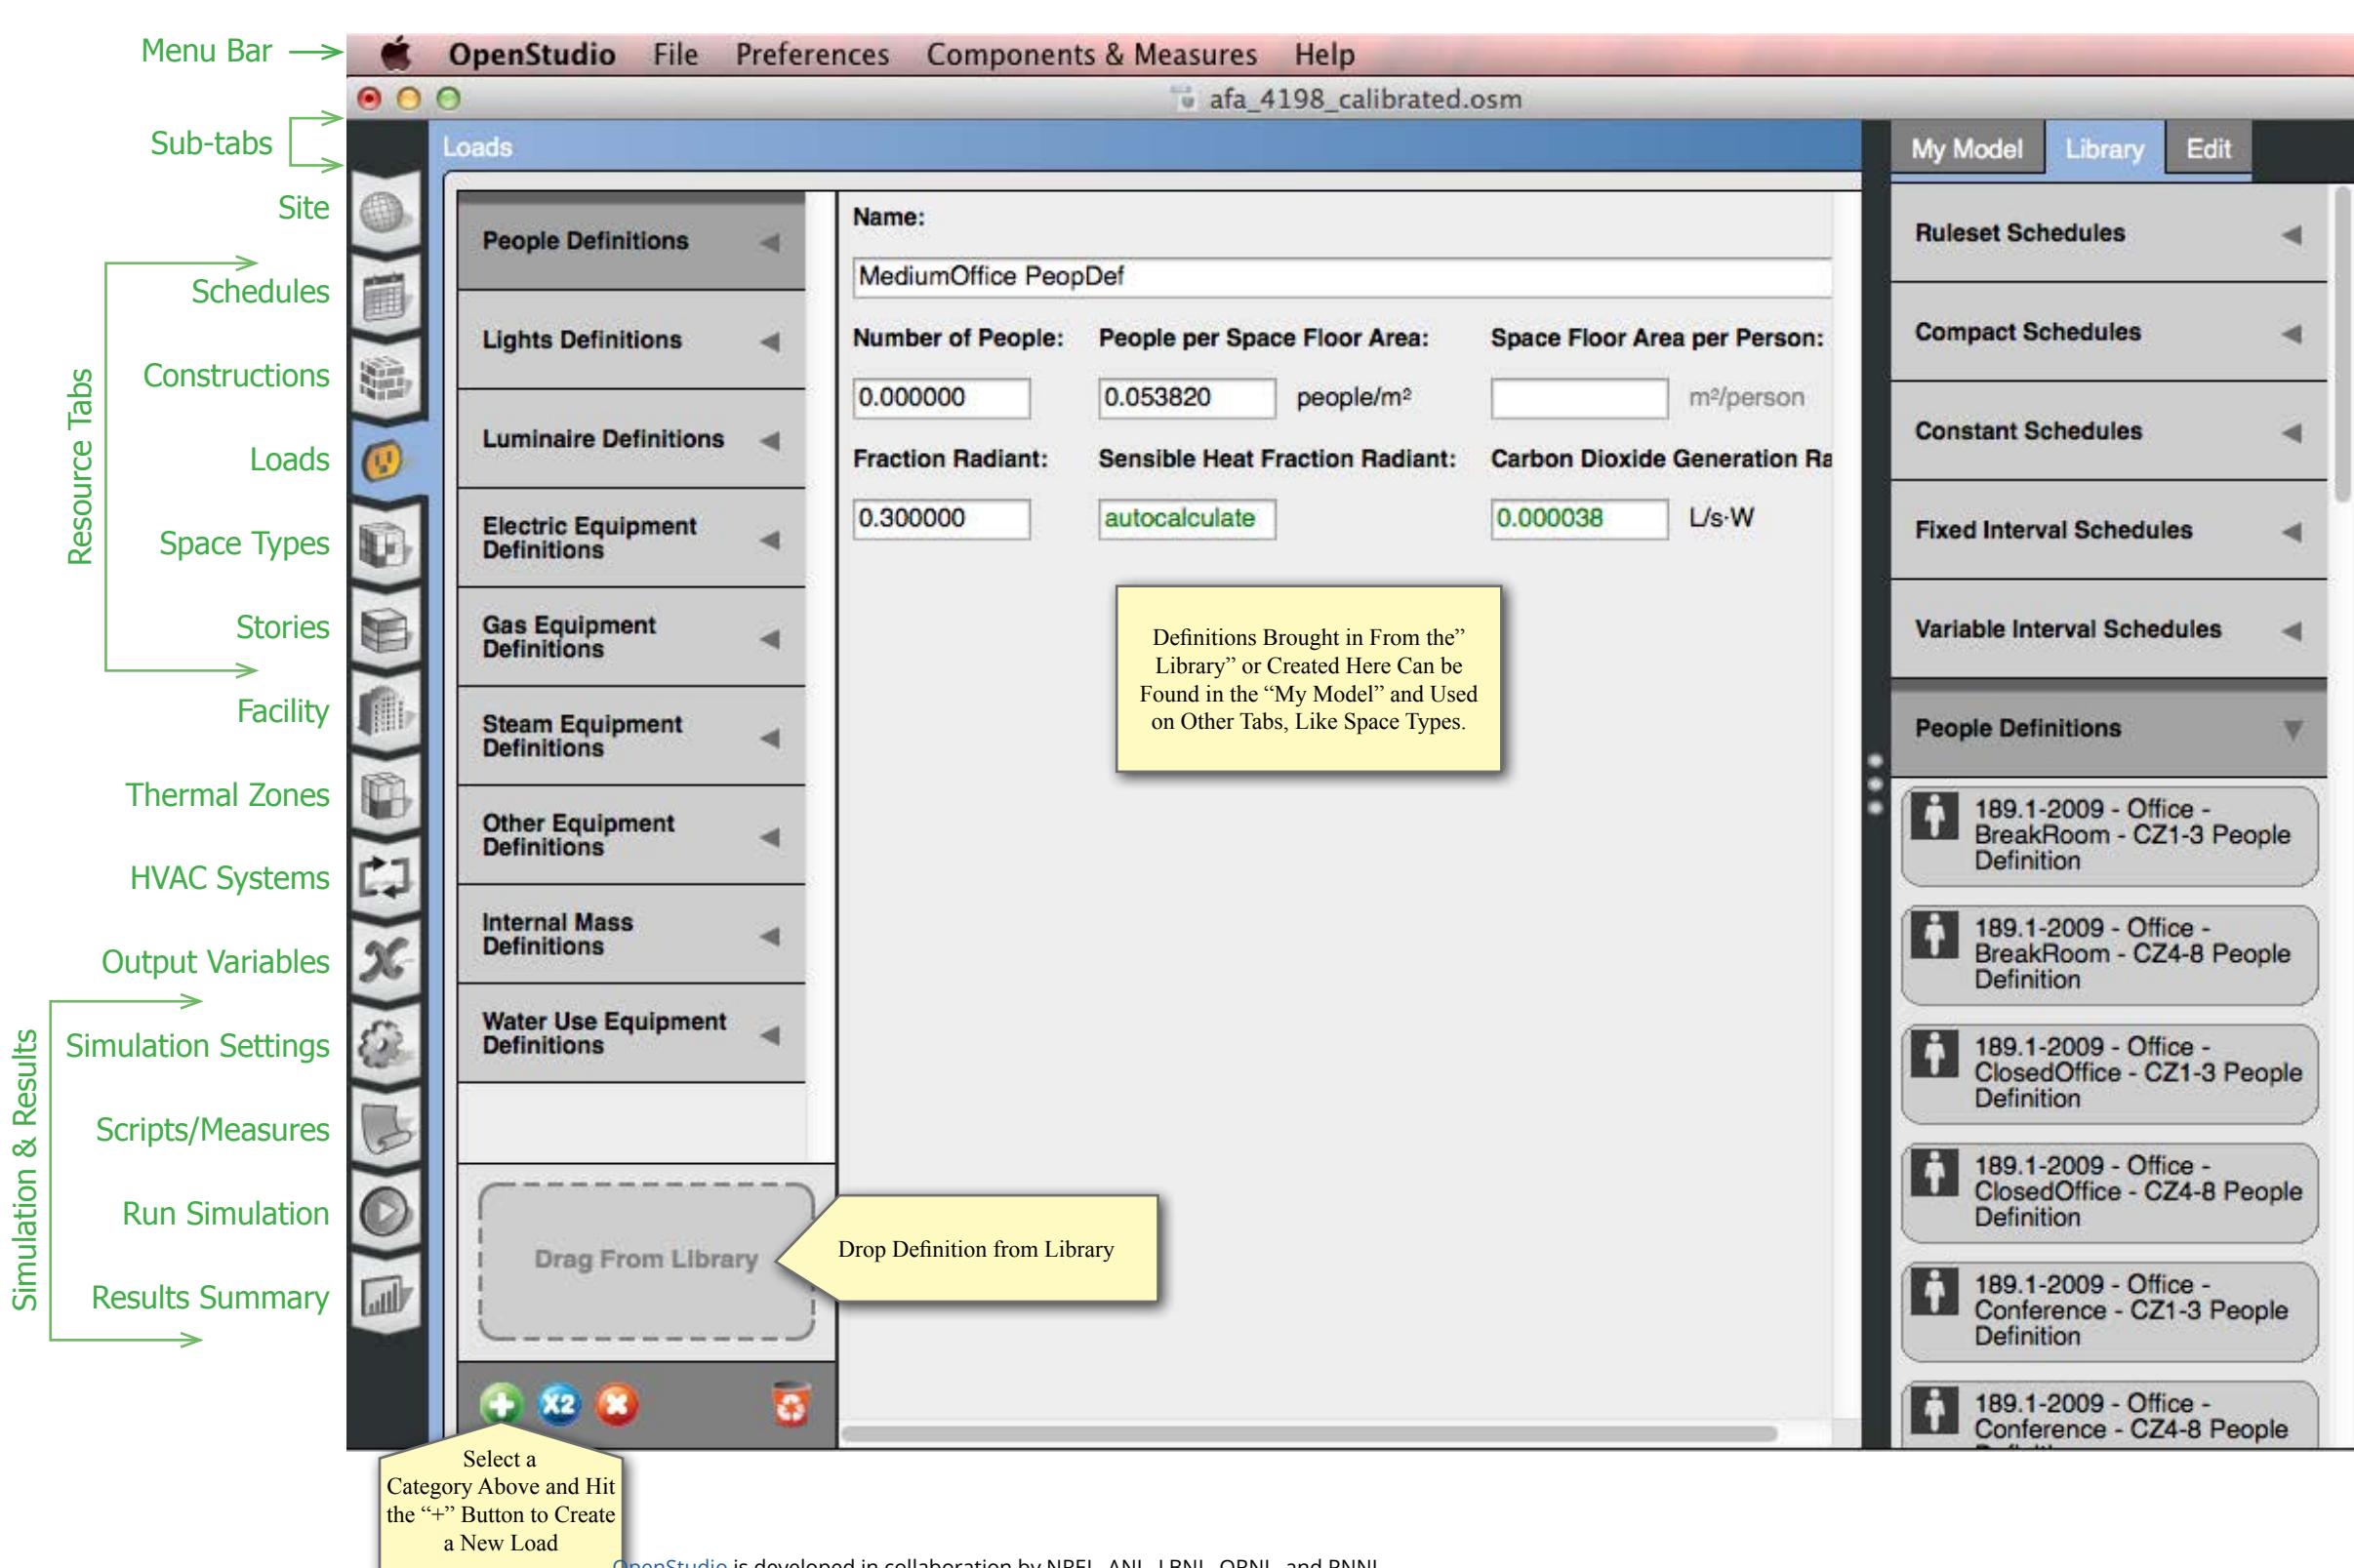

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## Space Types — General

### Notes


Space types are the work horses of the resources in OpenStudio. Space types can define internal loads, schedule sets, and construction sets. Space types define specific spaces or groups of specific spaces in your model. The spaces inherit all objects of the space type. If you redefine a space type, or an underlying object, it will affect all spaces using that space type.

The space types tab in the OpenStudio application is organized into a grid view. You can look through all your space types and edit the settings.

The steps for using multi-edit for applying an item to multiple space types are below:

1. After dragging in an item from the library, select it and edit any features you need to in the "Edit" panel on the right.
2. Check the rows you would like to add this same component to. Note that when you check the rows the yellow highlight disappears on the component you edited in step 1.
3. After selecting the rows you would like to apply the component to, then click the text of the item you would like to duplicate. It should turn yellow again.
4. Hit the "Apply to Selected" button at the top of the column containing that component and the yellow highlighted component will be copied to the checked rows.

You can duplicate and delete multiple rows by checking the rows and using the buttons on the bottom left.

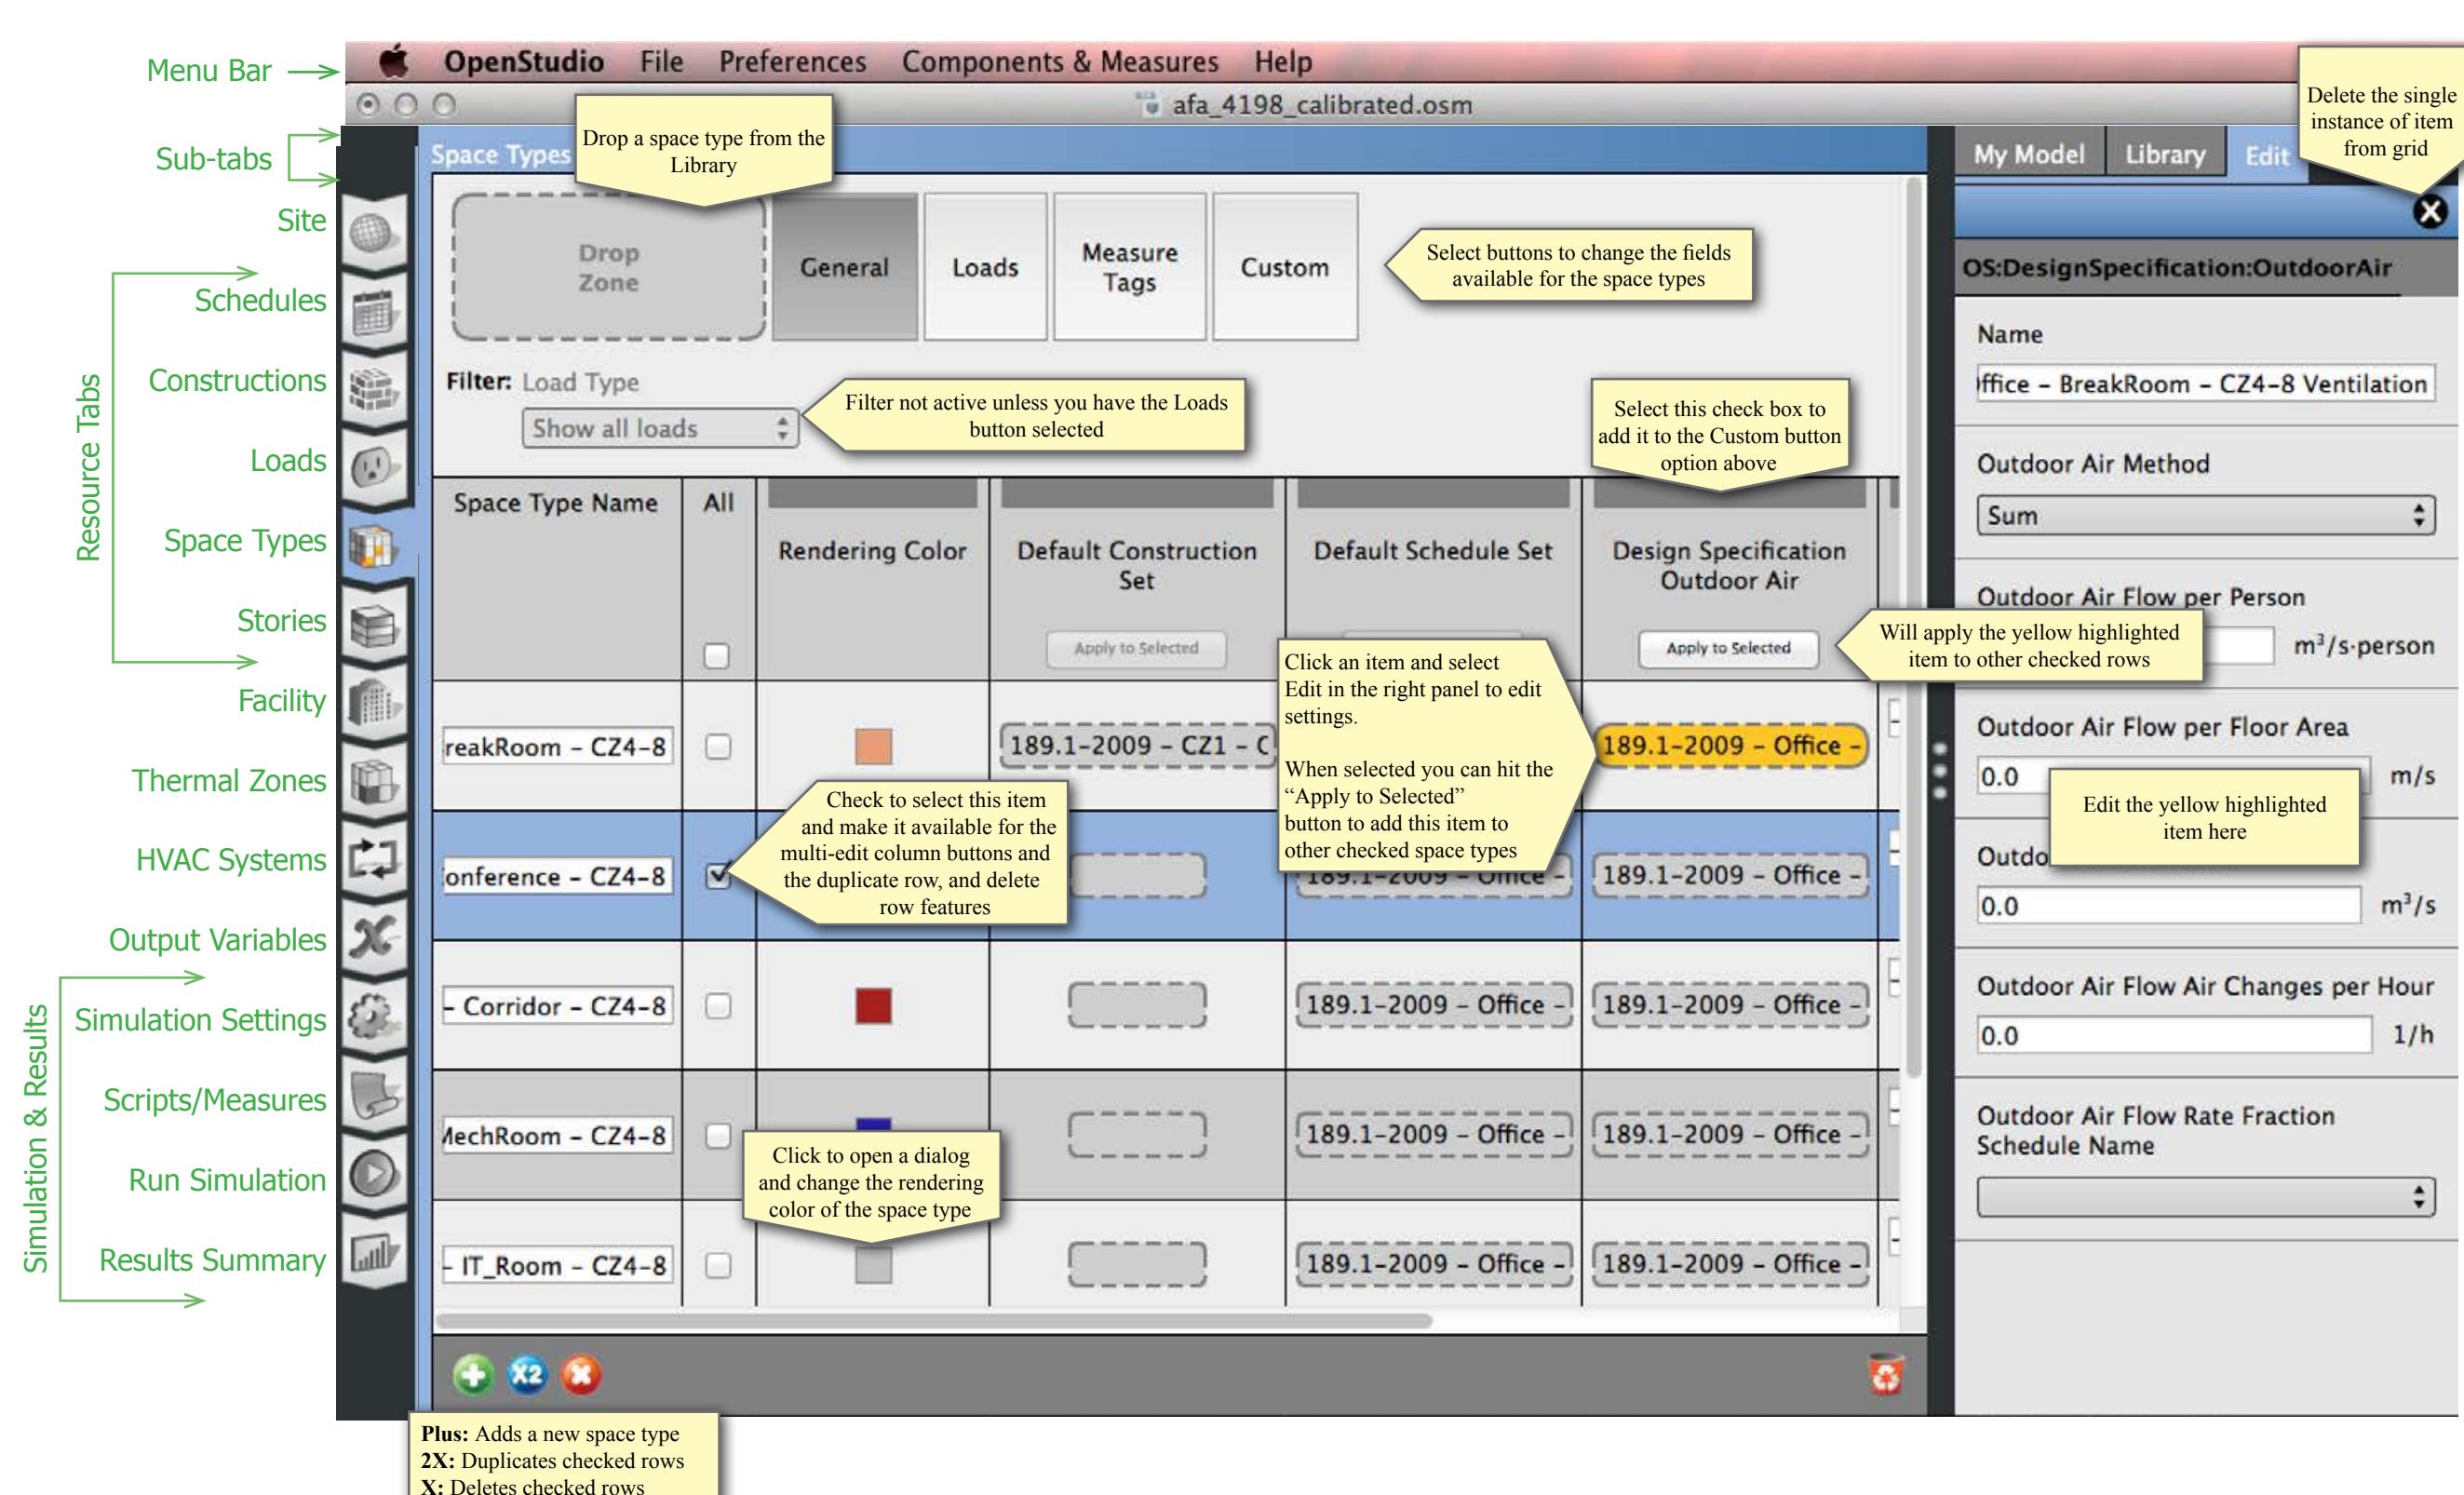

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## Space Types — Loads

### Notes


If you select the "Loads" button in the Space Type tab, you will see a drop zone to create new loads. You can have multiple loads of the same type.

The space types define loads such as lighting or electric equipment as simple area weighted power densities (e.g., W/ft<sup>2</sup>). However, you can add loads in several possible ways. For example, a space type could contain multiple types of lighting. You might define one lighting load for general lighting using a W/ft<sup>2</sup> and then add another lighting load for decorative lighting using another W/ft<sup>2</sup>.

You can filter the type of loads to show all or only certain types of loads like people.

You can also select an item in the grid and apply it to other spaces. Check the spaces you want to add that item to and then select the item by clicking on the text (the item should be highlighted in yellow) and hit the "Apply to Selected" for that column.

You can duplicate and delete multiple rows by checking the rows and using the buttons on the bottom left.

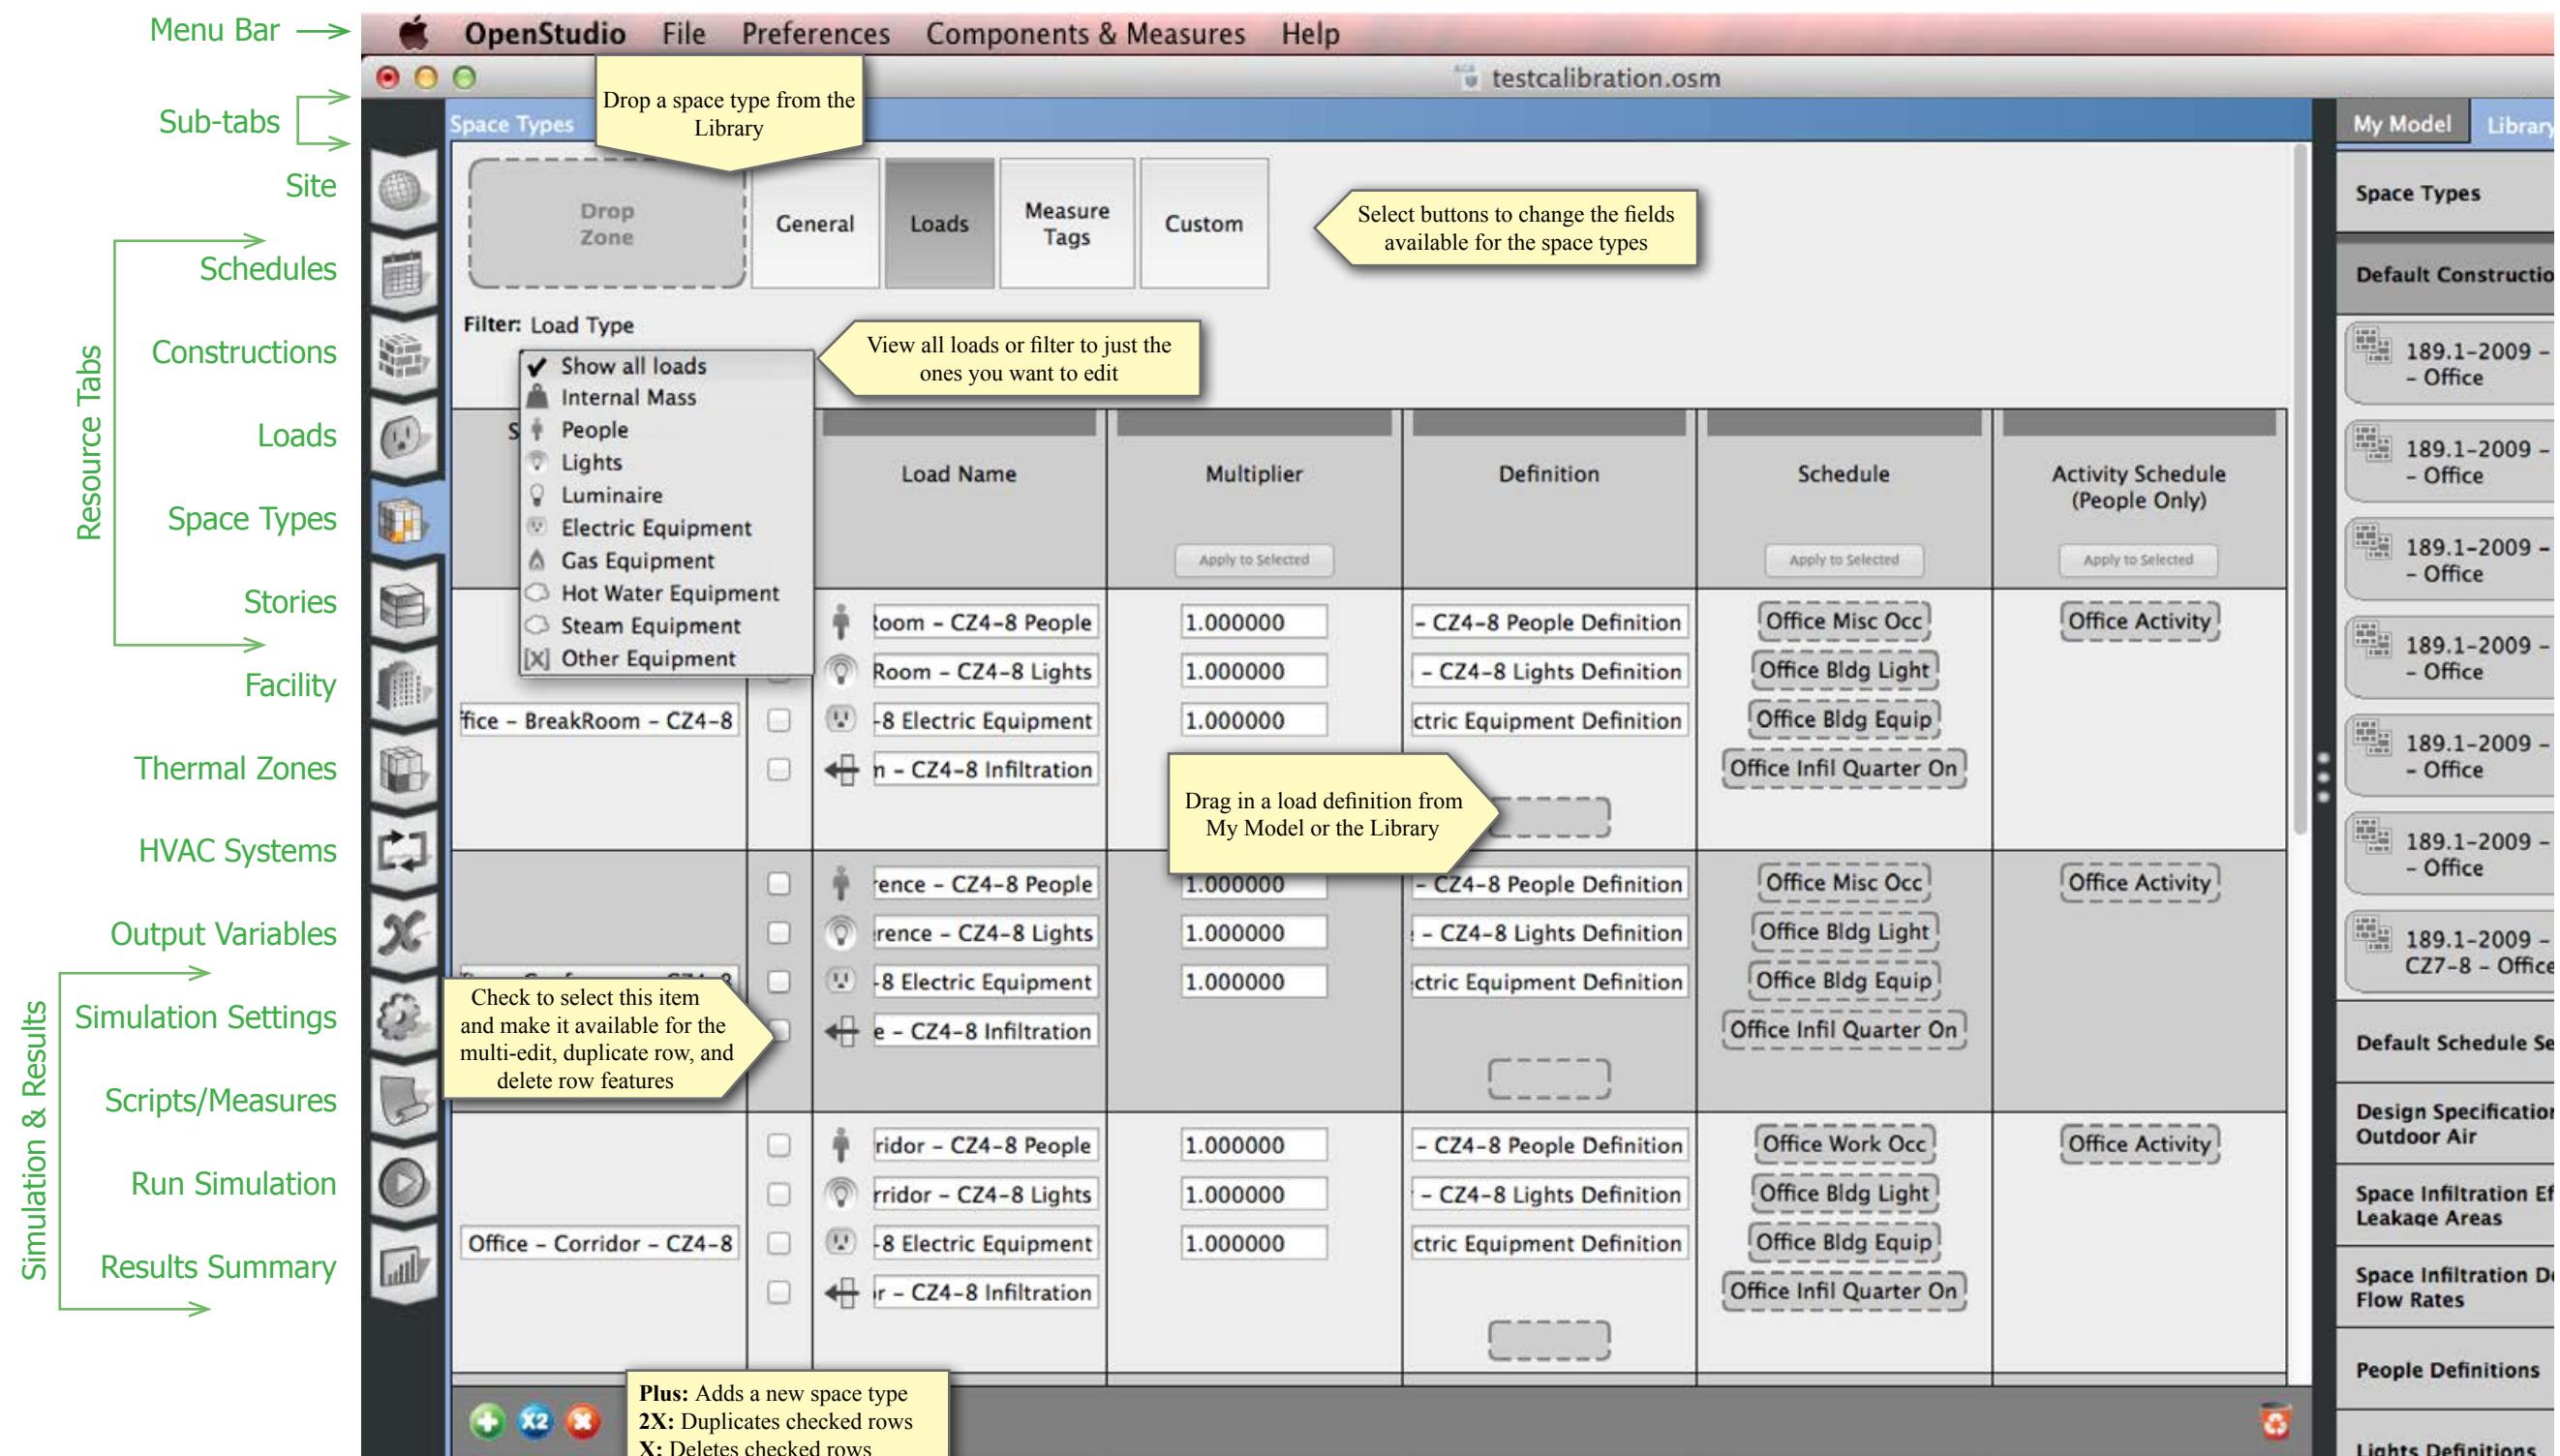

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)


## Building Stories

### Notes

A Building Story is a container that can hold a collection of space objects. This can be used to change constructions or schedules based on the building story.

You can also use the story assignments to generate reports that summarize data by story.

The "Rendering Color" can be changed by clicking on the "Select Color" button. Then using the SketchUp Plug-in the model can be rendered.

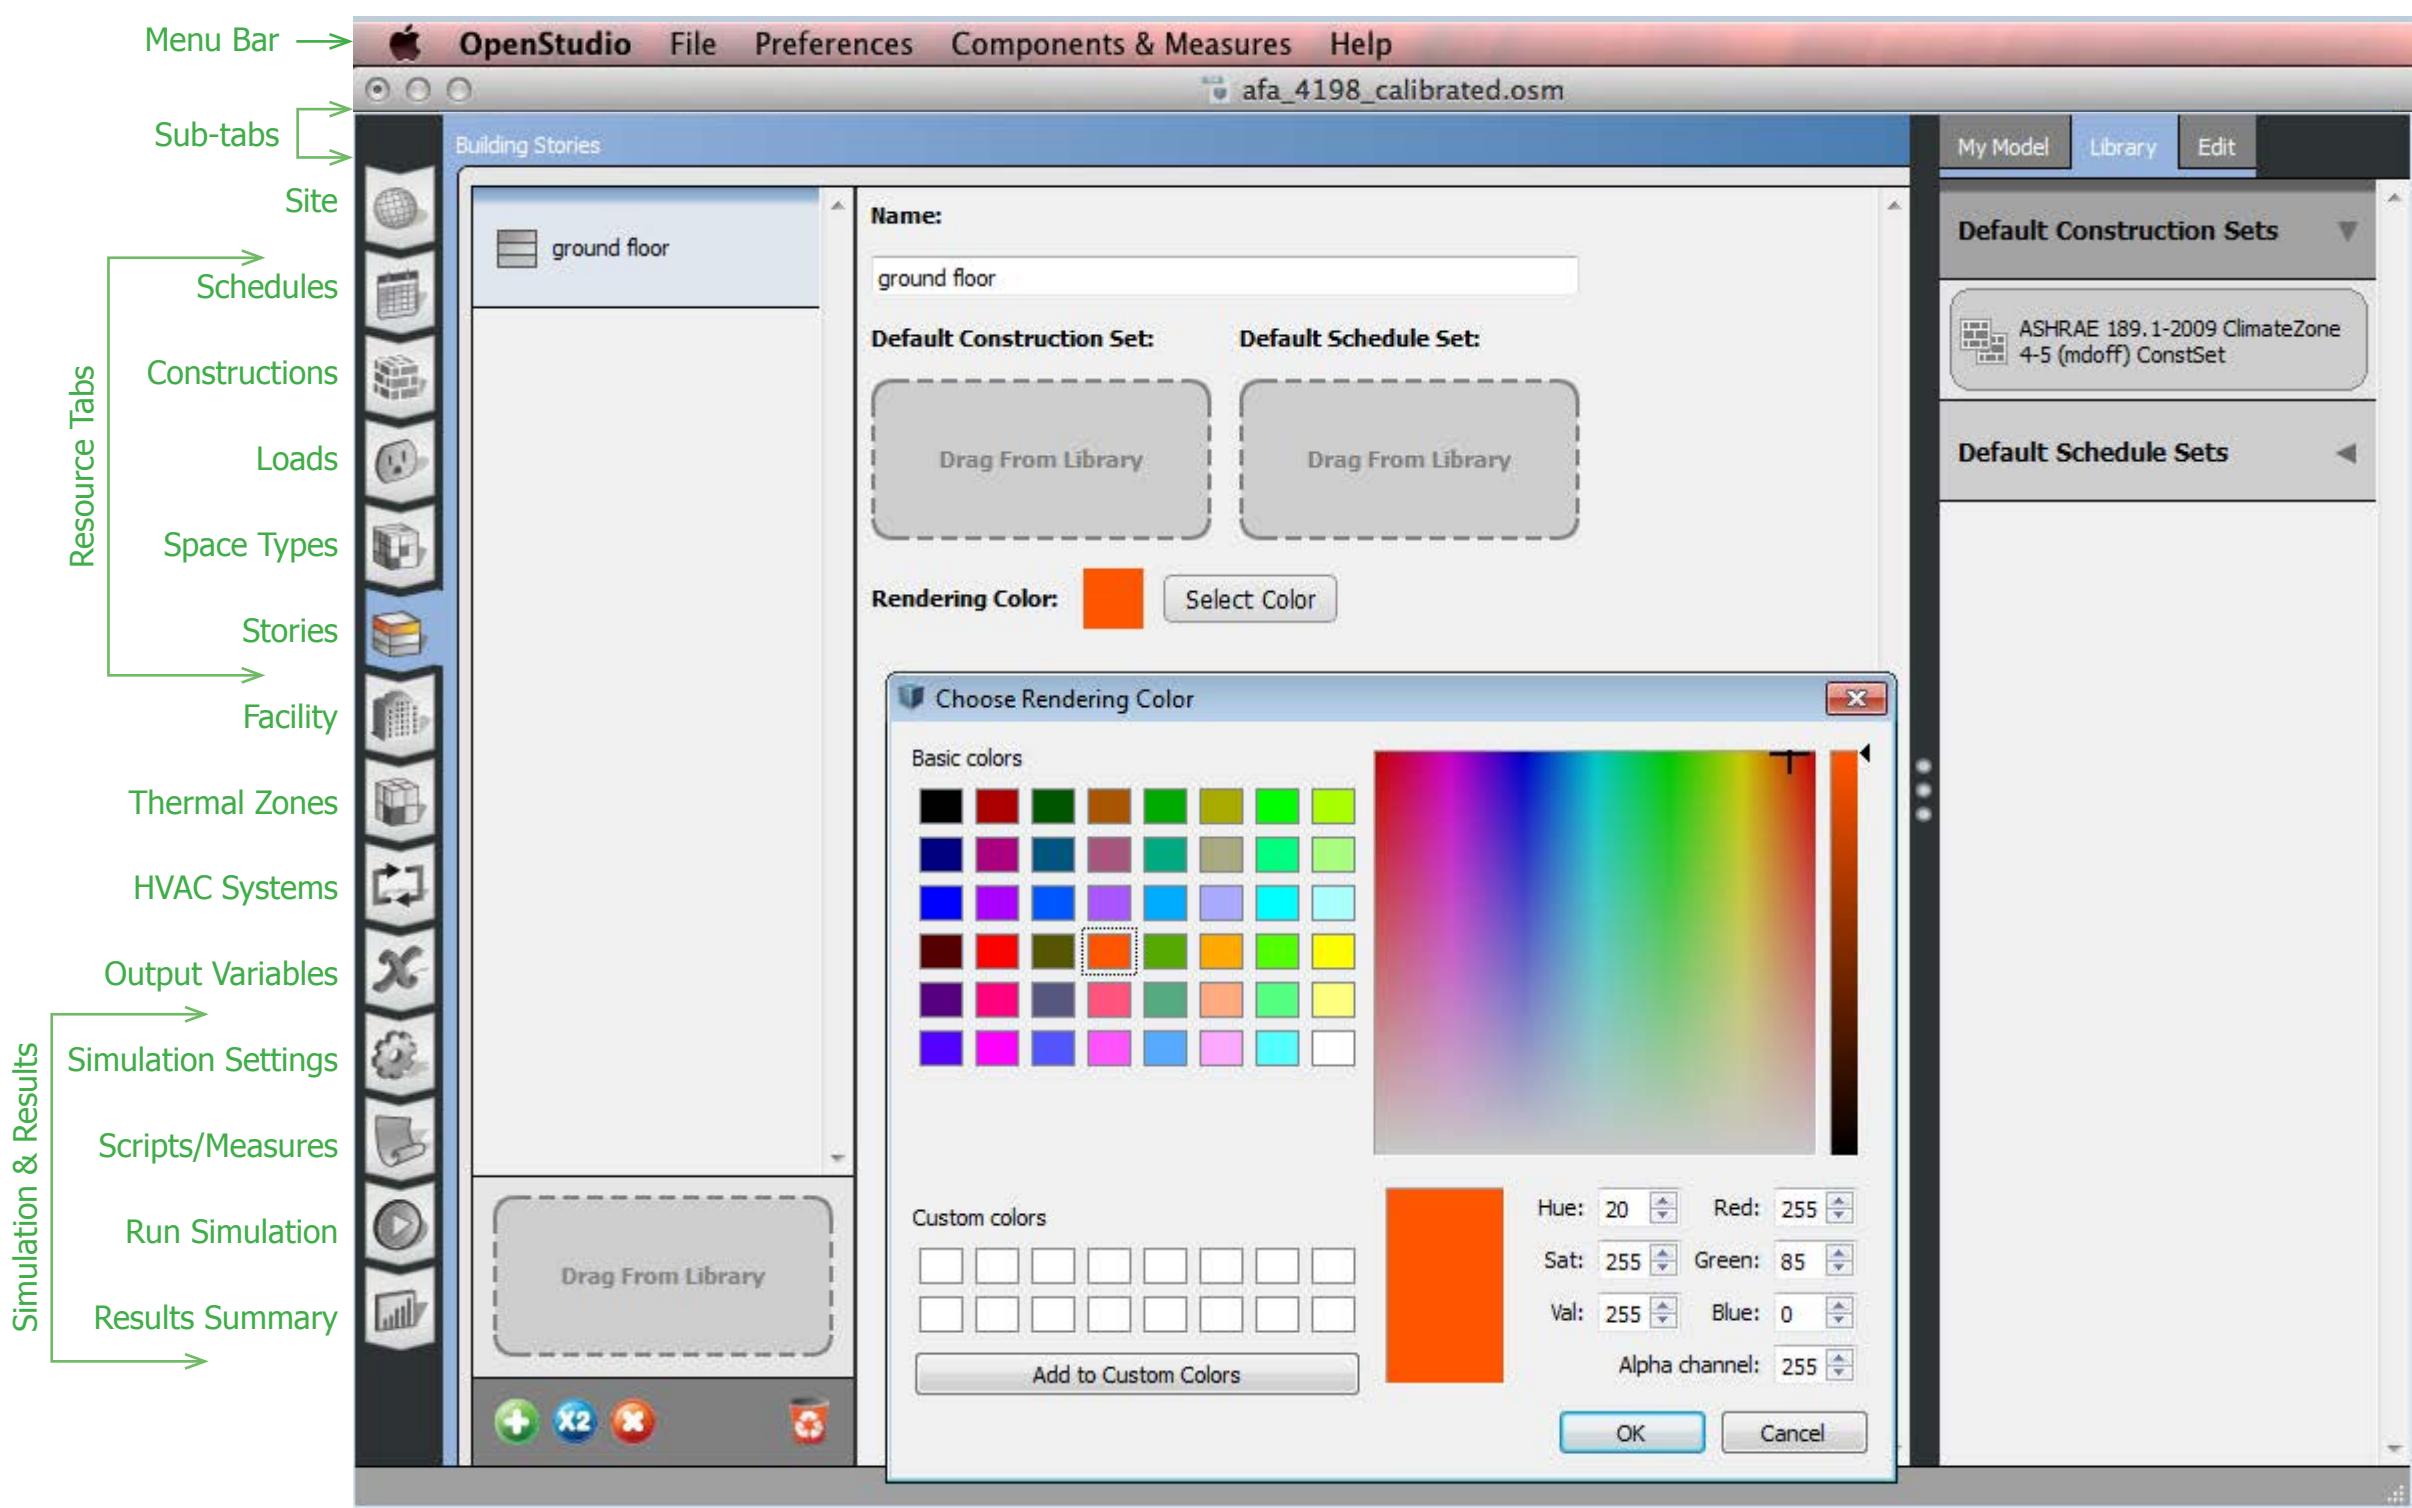

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)

## Facility — Space Type

### Notes

The Facility tab serves a number of functions. First, it allows you to see a hierarchical tree of your model. This tree can be organized by building story, thermal zone, or as shown here, space type.


If you are viewing the tree by space type, and a space does not have a space type assigned, it would appear under Unassigned Space Type. A similar pattern is followed for Thermal Zone and Story.

The Facility tab is also where you can select spaces and assign a building story, thermal zone, and space type. This is also where you can add loads to a space. These loads would be on top of loads inherited from the space type.

You can also drill down to inspect individual surfaces or subsurfaces.

Lastly, it lets you pick the Building object. This contains top level construction, schedule, or space type assignments, and sets the rotation for the building.

The Facility tab is in transition and will be evolving in the future into a design that provides more filtering and grid views of the surfaces and sub-surfaces.

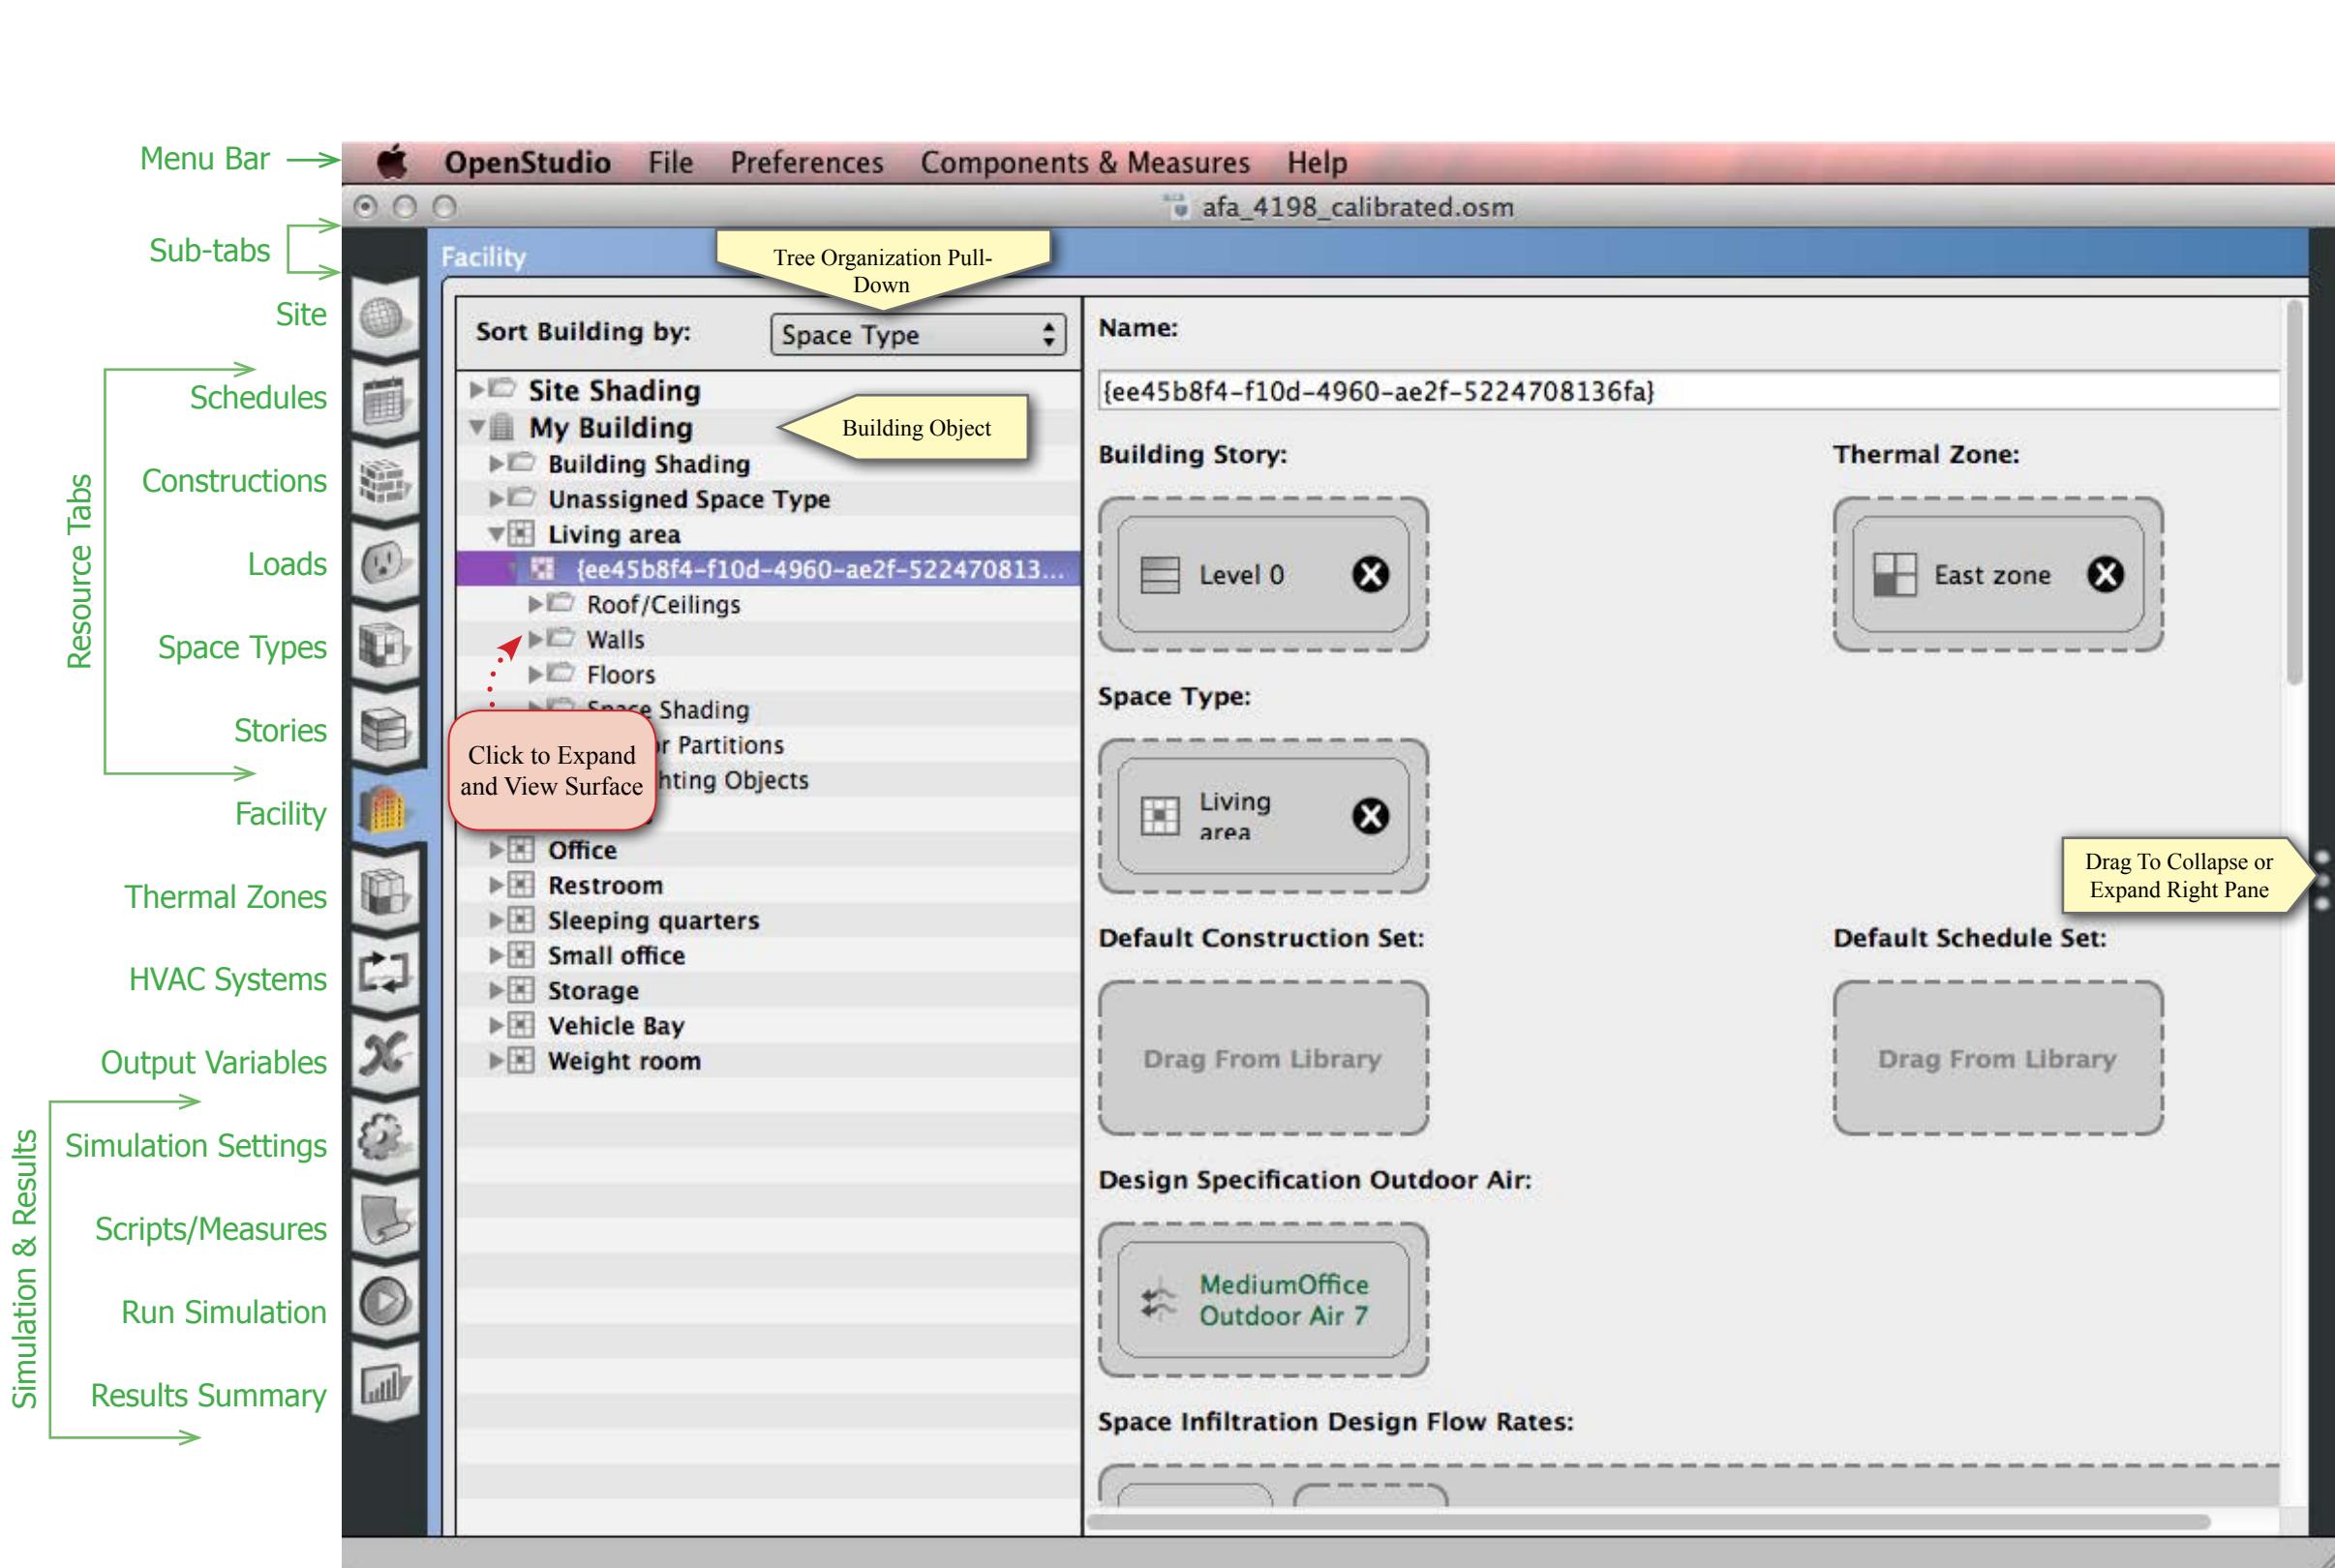

# OpenStudio 1.7.0 Basic Workflow Guide

[openstudio.net](http://openstudio.net)


## Facility — Surface & Subsurface

### Notes

This screenshot of the Facility tab shows a surface selected.

Although you will generally work with the SketchUp Plug-in to define the building envelope, having a surface or subsurface selected in the Facility tab will allow you inspect and edit most attributes. Only the vertices are locked down.

Spaces and surfaces cannot be deleted or created. You need to use the SketchUp Plug-in to do that.

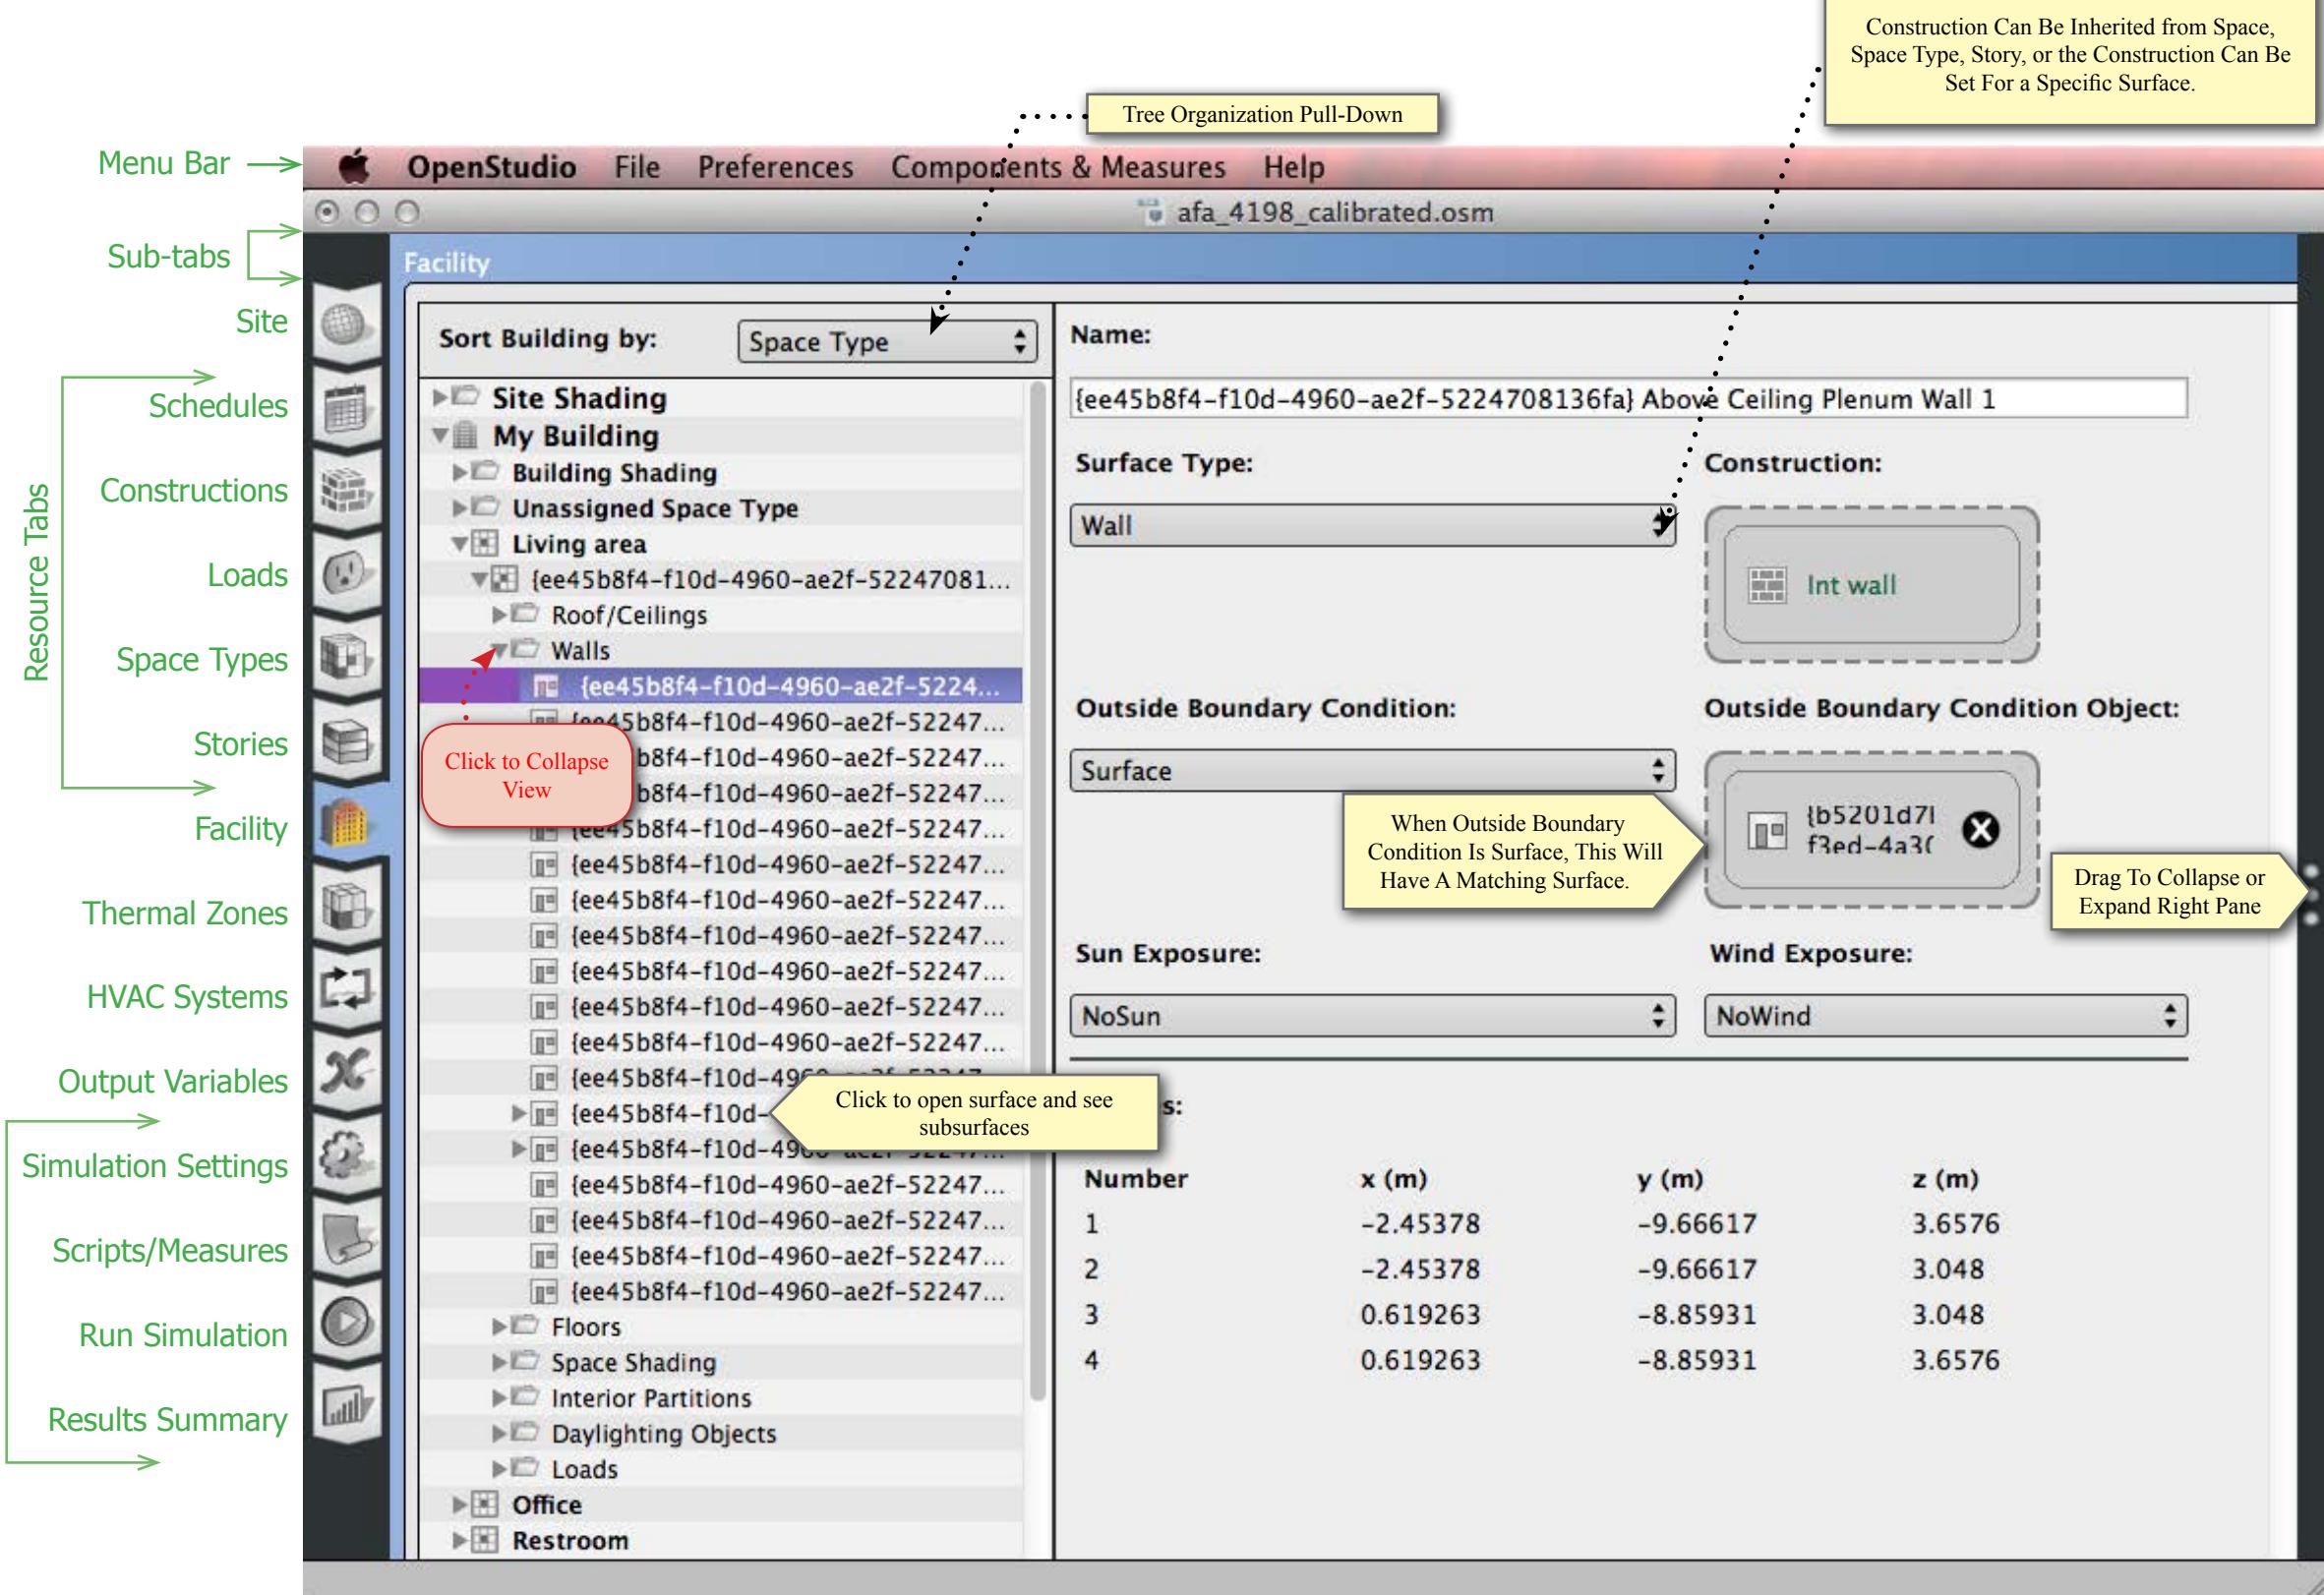

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)

## Thermal Zones

### Notes

The Thermal Zones tab has four main functions.

1. Turn ideal air loads on and off. This is a basic way to get heating and cooling load set points without having to define a detailed HVAC system.
2. Attach zone equipment to your zone, for example a Packaged Terminal Air Conditioner.
3. Assign thermostats to your thermal zone.
4. Set Sizing Parameters

The steps for using multi-edit for adding a copy of an item to other thermal zones are below:


1. After dragging in an item from the library, select it and edit any features you need to in the "Edit" panel on the right.
2. Check the rows you would like to add this same component to. Note that when you check the rows the yellow highlight disappears on the component you edited in step 1.
3. After selecting the rows you would like to apply the component to, then click the text of the item you would like to duplicate. It should turn yellow again.
4. Hit the "Apply to Selected" button at the top of the column containing that component and the yellow highlighted component will be copied to the checked rows.

You can duplicate and delete multiple rows by checking the rows and using the buttons on the bottom left.

### Tip

A Thermal Zone can't have ideal air loads on and have an Air Loop or Zone Equipment at the same time. If you try to use both, the previously selected system will be disabled.

[Online Training: Exhaust, VRF, and Refrigeration](#)

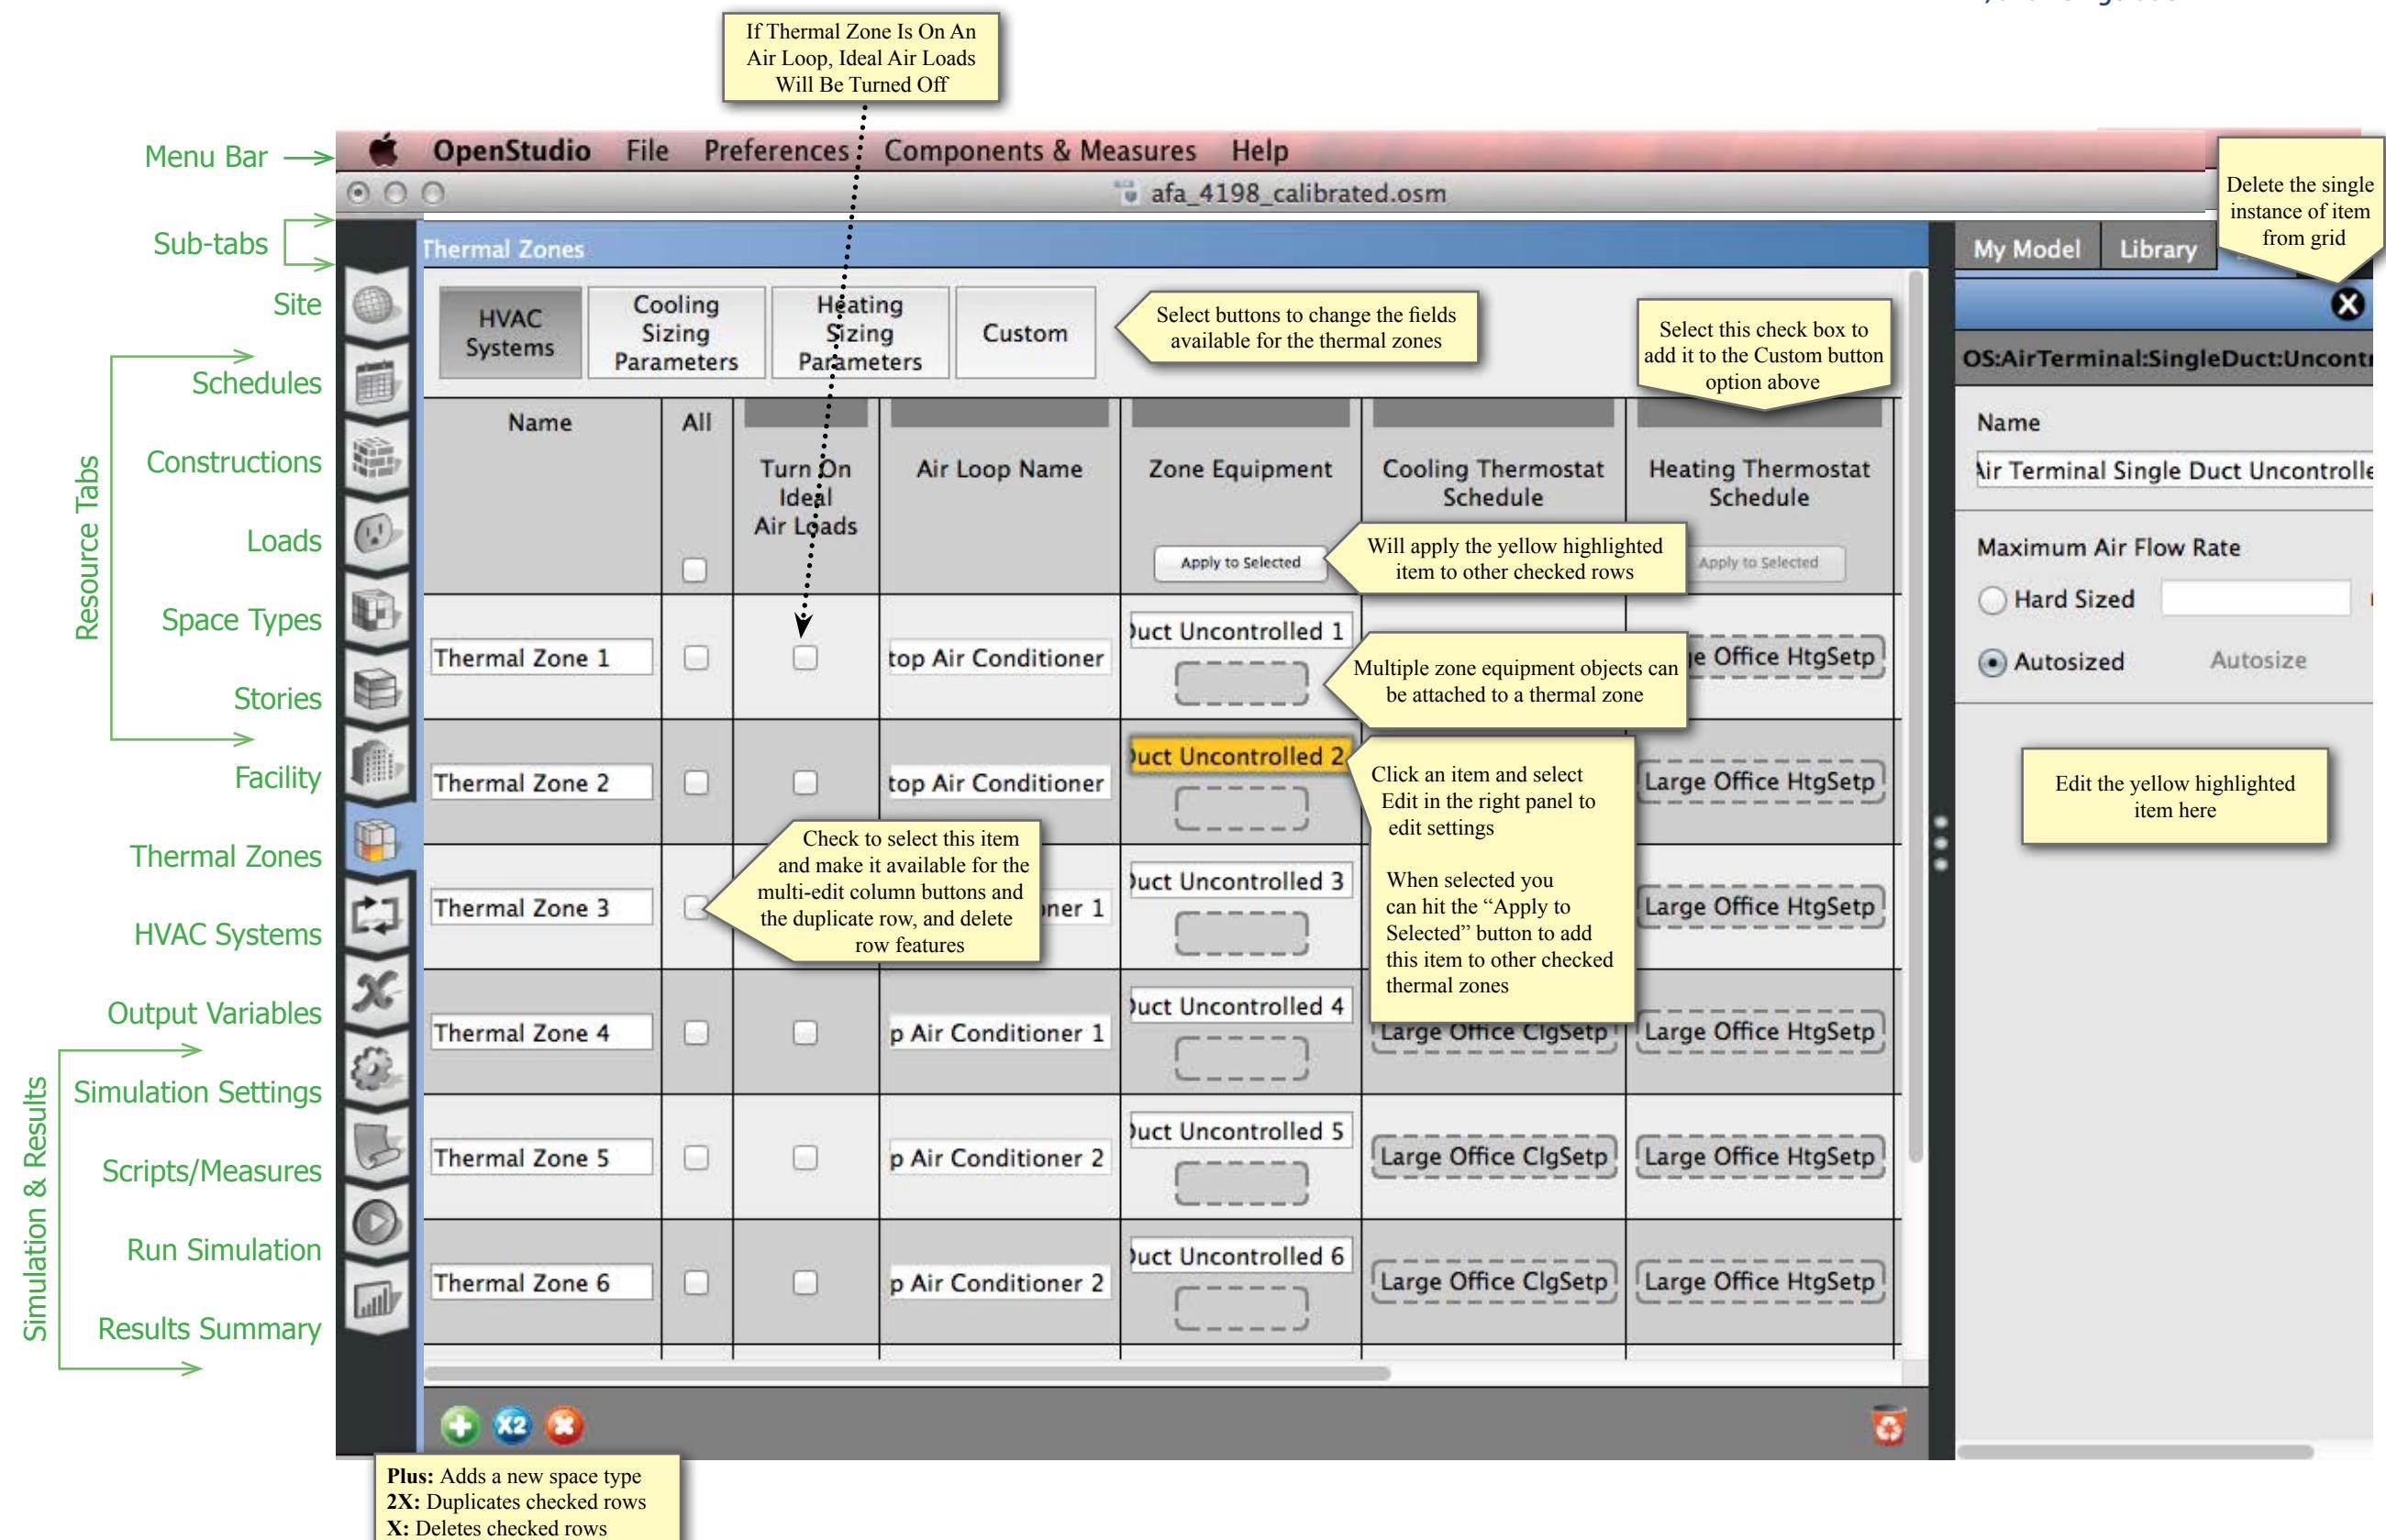

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net


## HVAC Systems - Air Loop

### Notes

The HVAC Systems tab is used to create, inspect, and edit air and plant loops. The green "+" at the top left is used to add template or empty loops, and the "x" next to it will delete them. The pull-down at the top right of the body is to select which loop or system to display.

The top half of the loop is for supply-side objects, the bottom half is for demand. Thermal Zones and other objects can be dragged onto drop zones or nodes. Optionally you can select the splitter or mixer to bring up a list of Thermal Zones, checking the ones you want included in the loop.

When adding a template loop, there are four images within the icon. From left to right they represent the type of cooling, heating, fan, and terminal unit, in the template. The example below has cold and hot water, a variable speed fan, and a hot water reheat terminal unit.

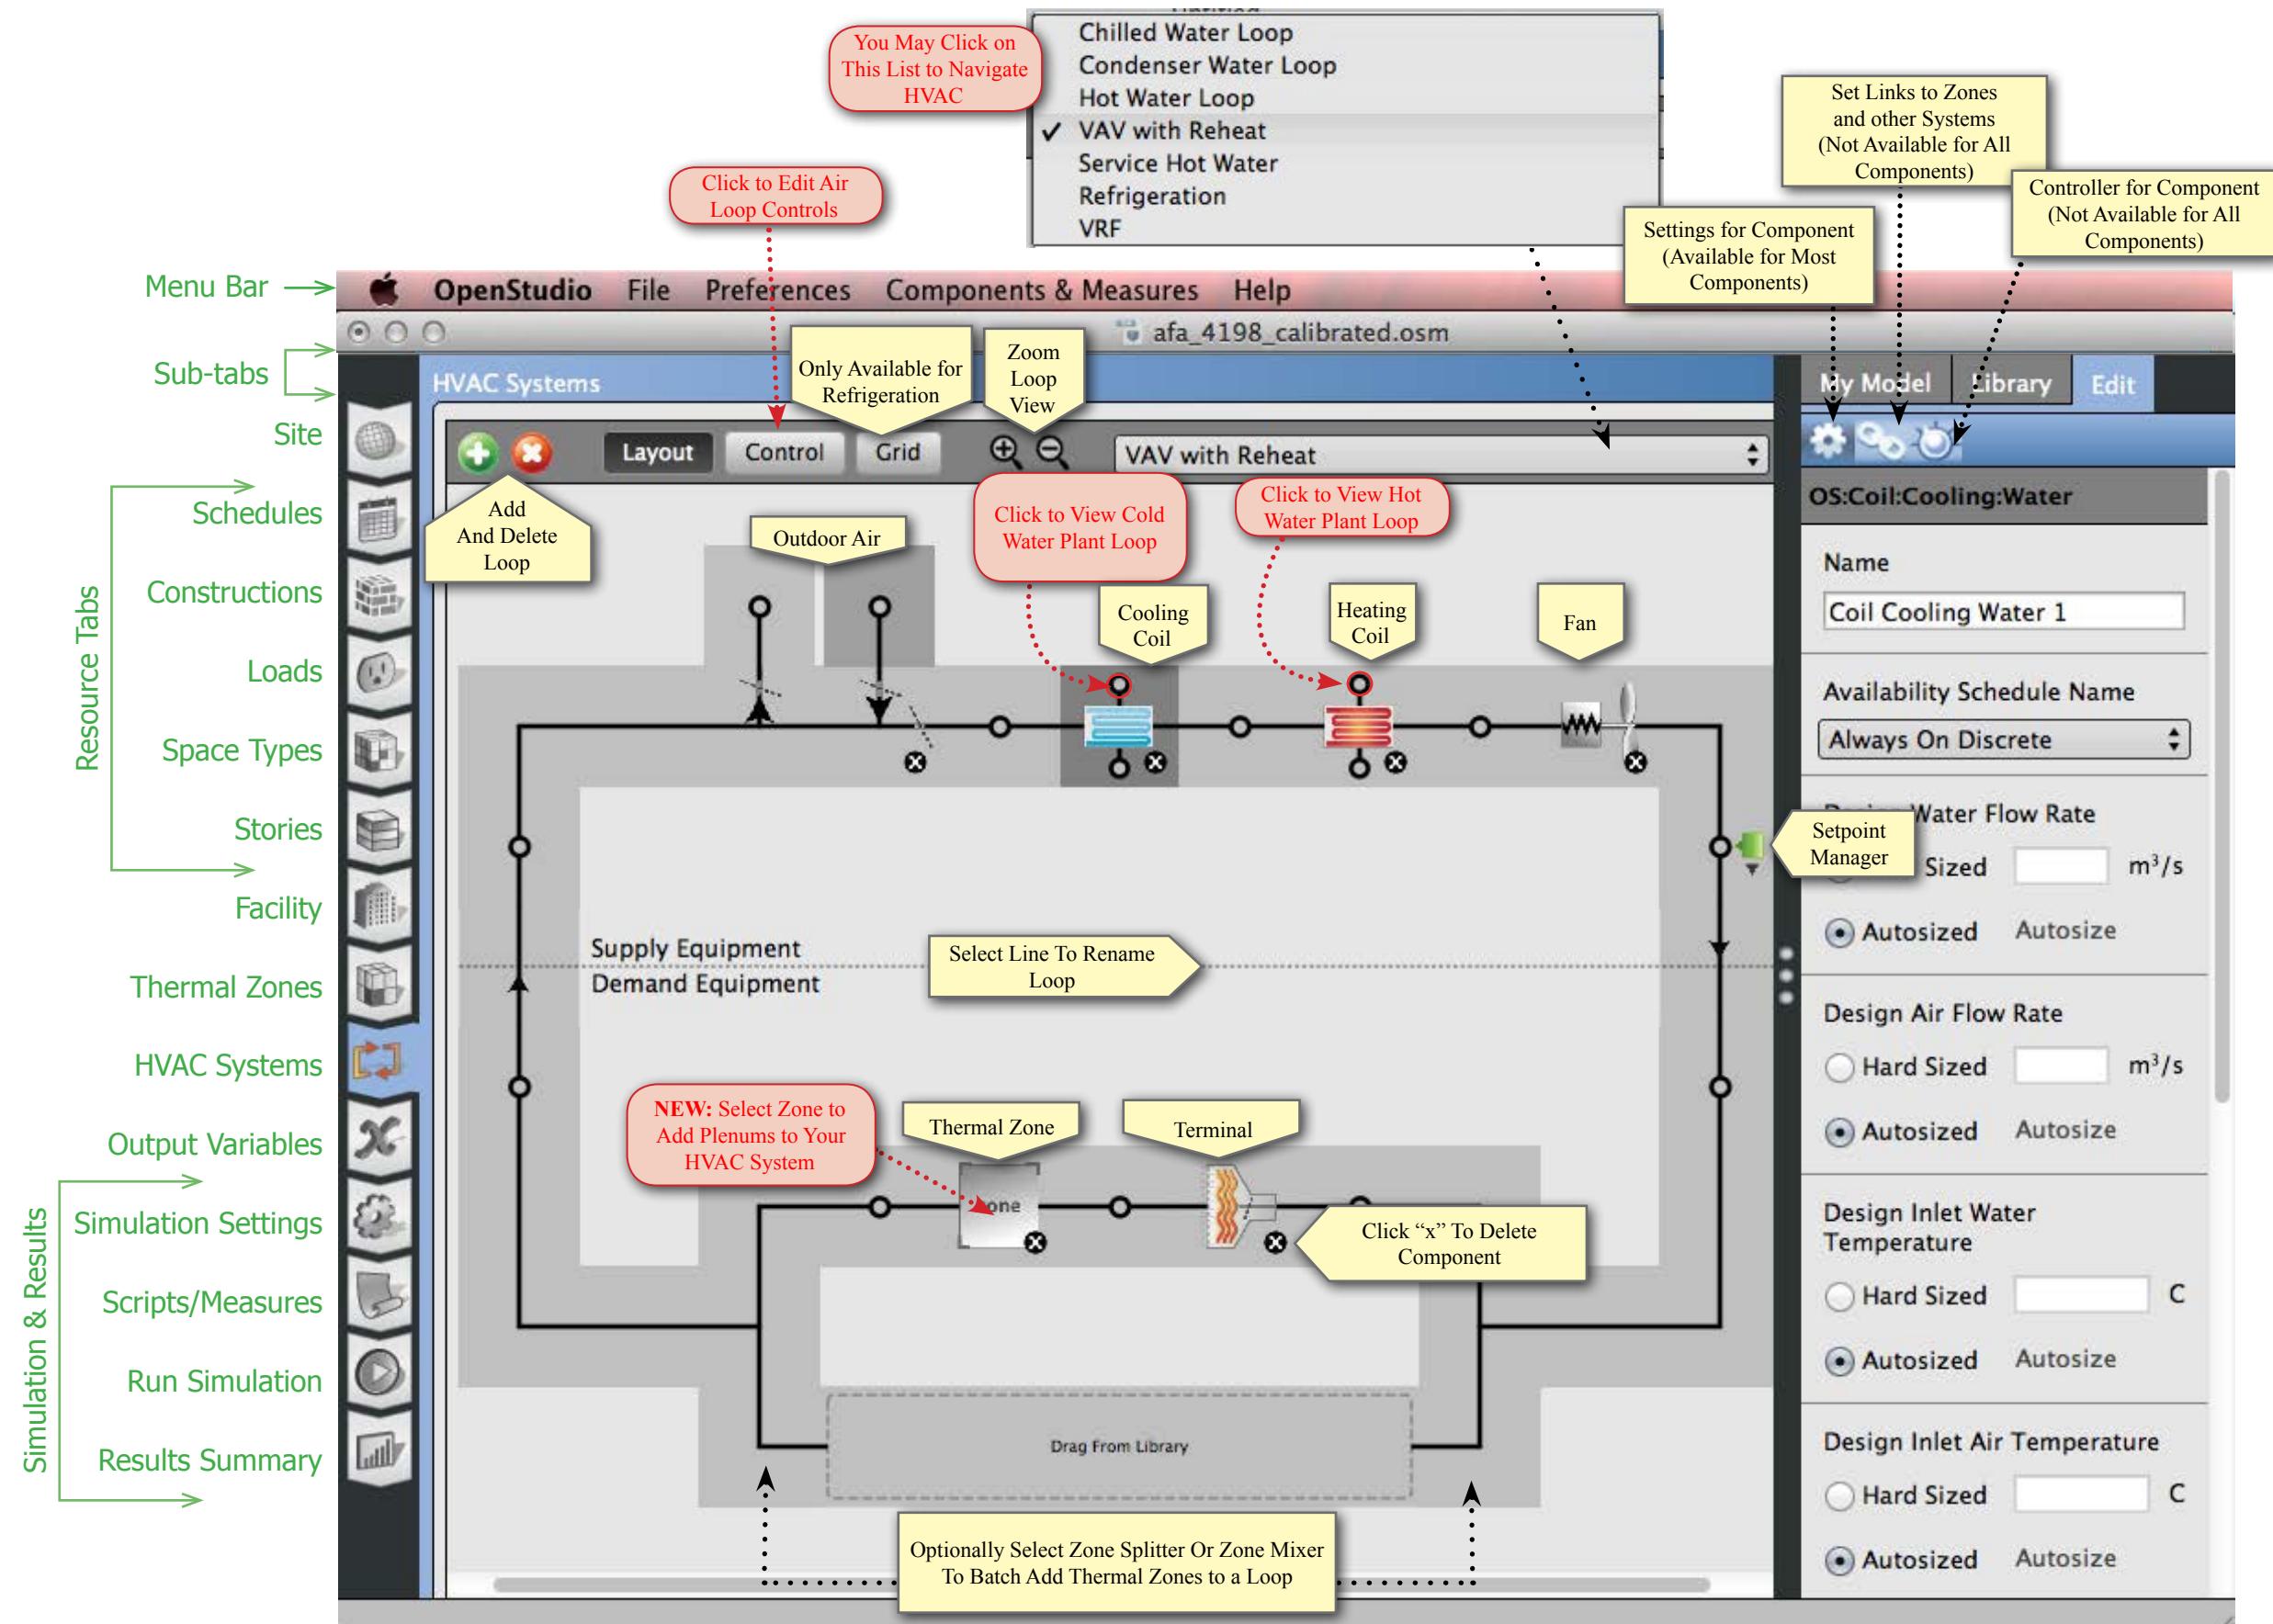

# OpenStudio 1.7.0 Basic Workflow Guide


openstudio.net

## HVAC Systems — Controls View

### Notes

The controls view is only available for the air loops. With an air loop selected in "Layout" view you can switch to "Control" view.

In this view you can edit the time of operation, night cycle, supply air temperature, and mechanical ventilation.

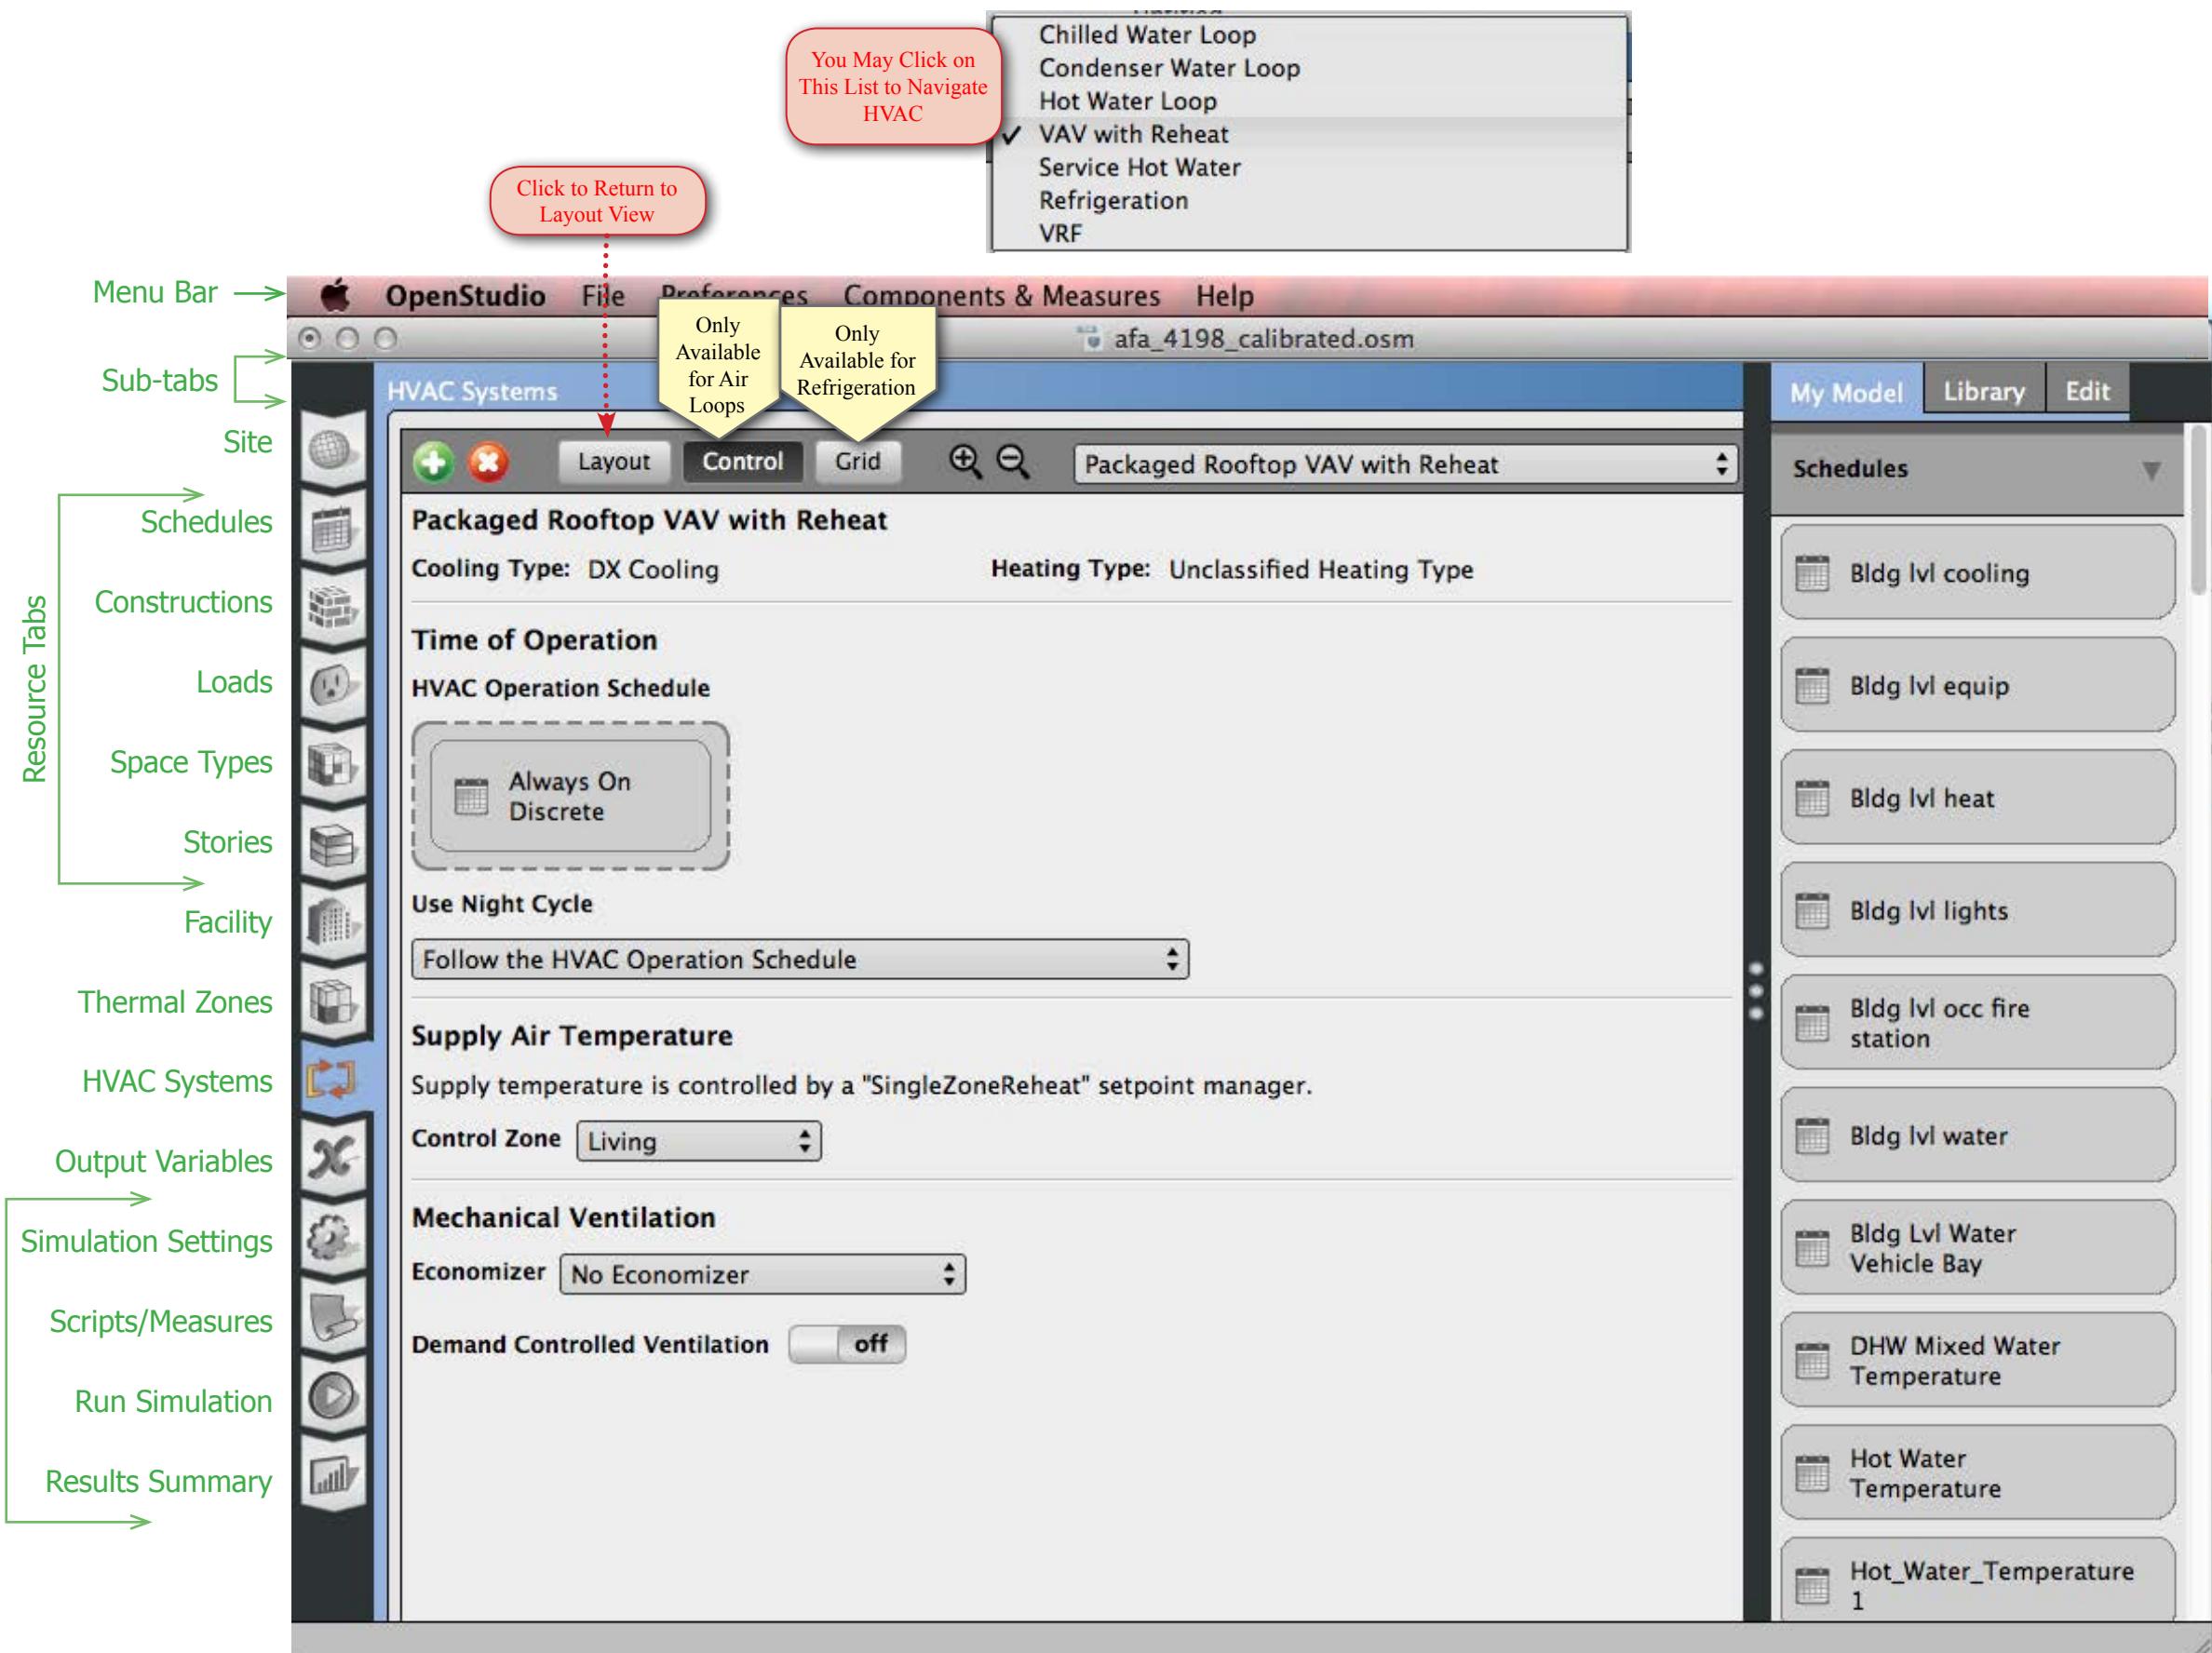

# OpenStudio 1.7.0 Basic Workflow Guide (June 2015)

openstudio.net

## HVAC Systems — Cold Water Loop

### Notes

In the cold water loop the cooling coil that had been a supply side object on the air loop is now a demand object.

The supply side has a pump and a water cooled chiller. The adiabatic pipes are a necessary part of the loop. There are no attributes to set for the pipes.

You can click on the chiller to drill down further to the condenser loop. Or you can click on the cooling coil to go back to the air loop.



Menu Bar → OpenStudio File Preferences Components & Measures Help

Sub-tabs → Site Schedules Constructions Loads Space Types Stories Facility Thermal Zones HVAC Systems Output Variables

Resource Tabs → Simulation Settings Scripts/Measures Run Simulation Results Summary

Only Available for Air Loops

Only Available for Refrigeration

Chilled Water Loop

Click to View Condenser Loop

Pump

Adiabatic Pipe

Drag From Library

Select Line To Rename Loop

Chilled Water Loop

Cooling Coil

You May Click on This List to Navigate HVAC

✓ Chilled Water Loop  
Condenser Water Loop  
Hot Water Loop  
VAV with Reheat  
Service Hot Water  
Refrigeration  
VRF

Changing the Plant Name in the “Edit” panel will Change the Default Name in the Dropdown

OS:PlantLoop

Name: Chilled Water Loop

Fluid Type: Water

User Defined Fluid Type: Most Loop Components Can Be Edited

Loop Temperature Setpoint Node Name: Node 28

Maximum Loop Temperature: 100.0 C

Minimum Loop Temperature: 0.0 C

Maximum Loop Flow Rate: Hard Sized m<sup>3</sup>/s

Autosized Autosize

Minimum Loop Flow Rate: 0.0 m<sup>3</sup>/s

Setpoint Manager

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net


## HVAC Systems — Condenser Loop

### Notes

In the condenser loop the chiller that had been a supply side object on the cold water loop is now a demand object.

The supply side has a pump and a cooling tower. As with the cold water loop the adiabatic pipes are a necessary part of the loop.

You can click on the chiller to drill to go back to the cold water loop.

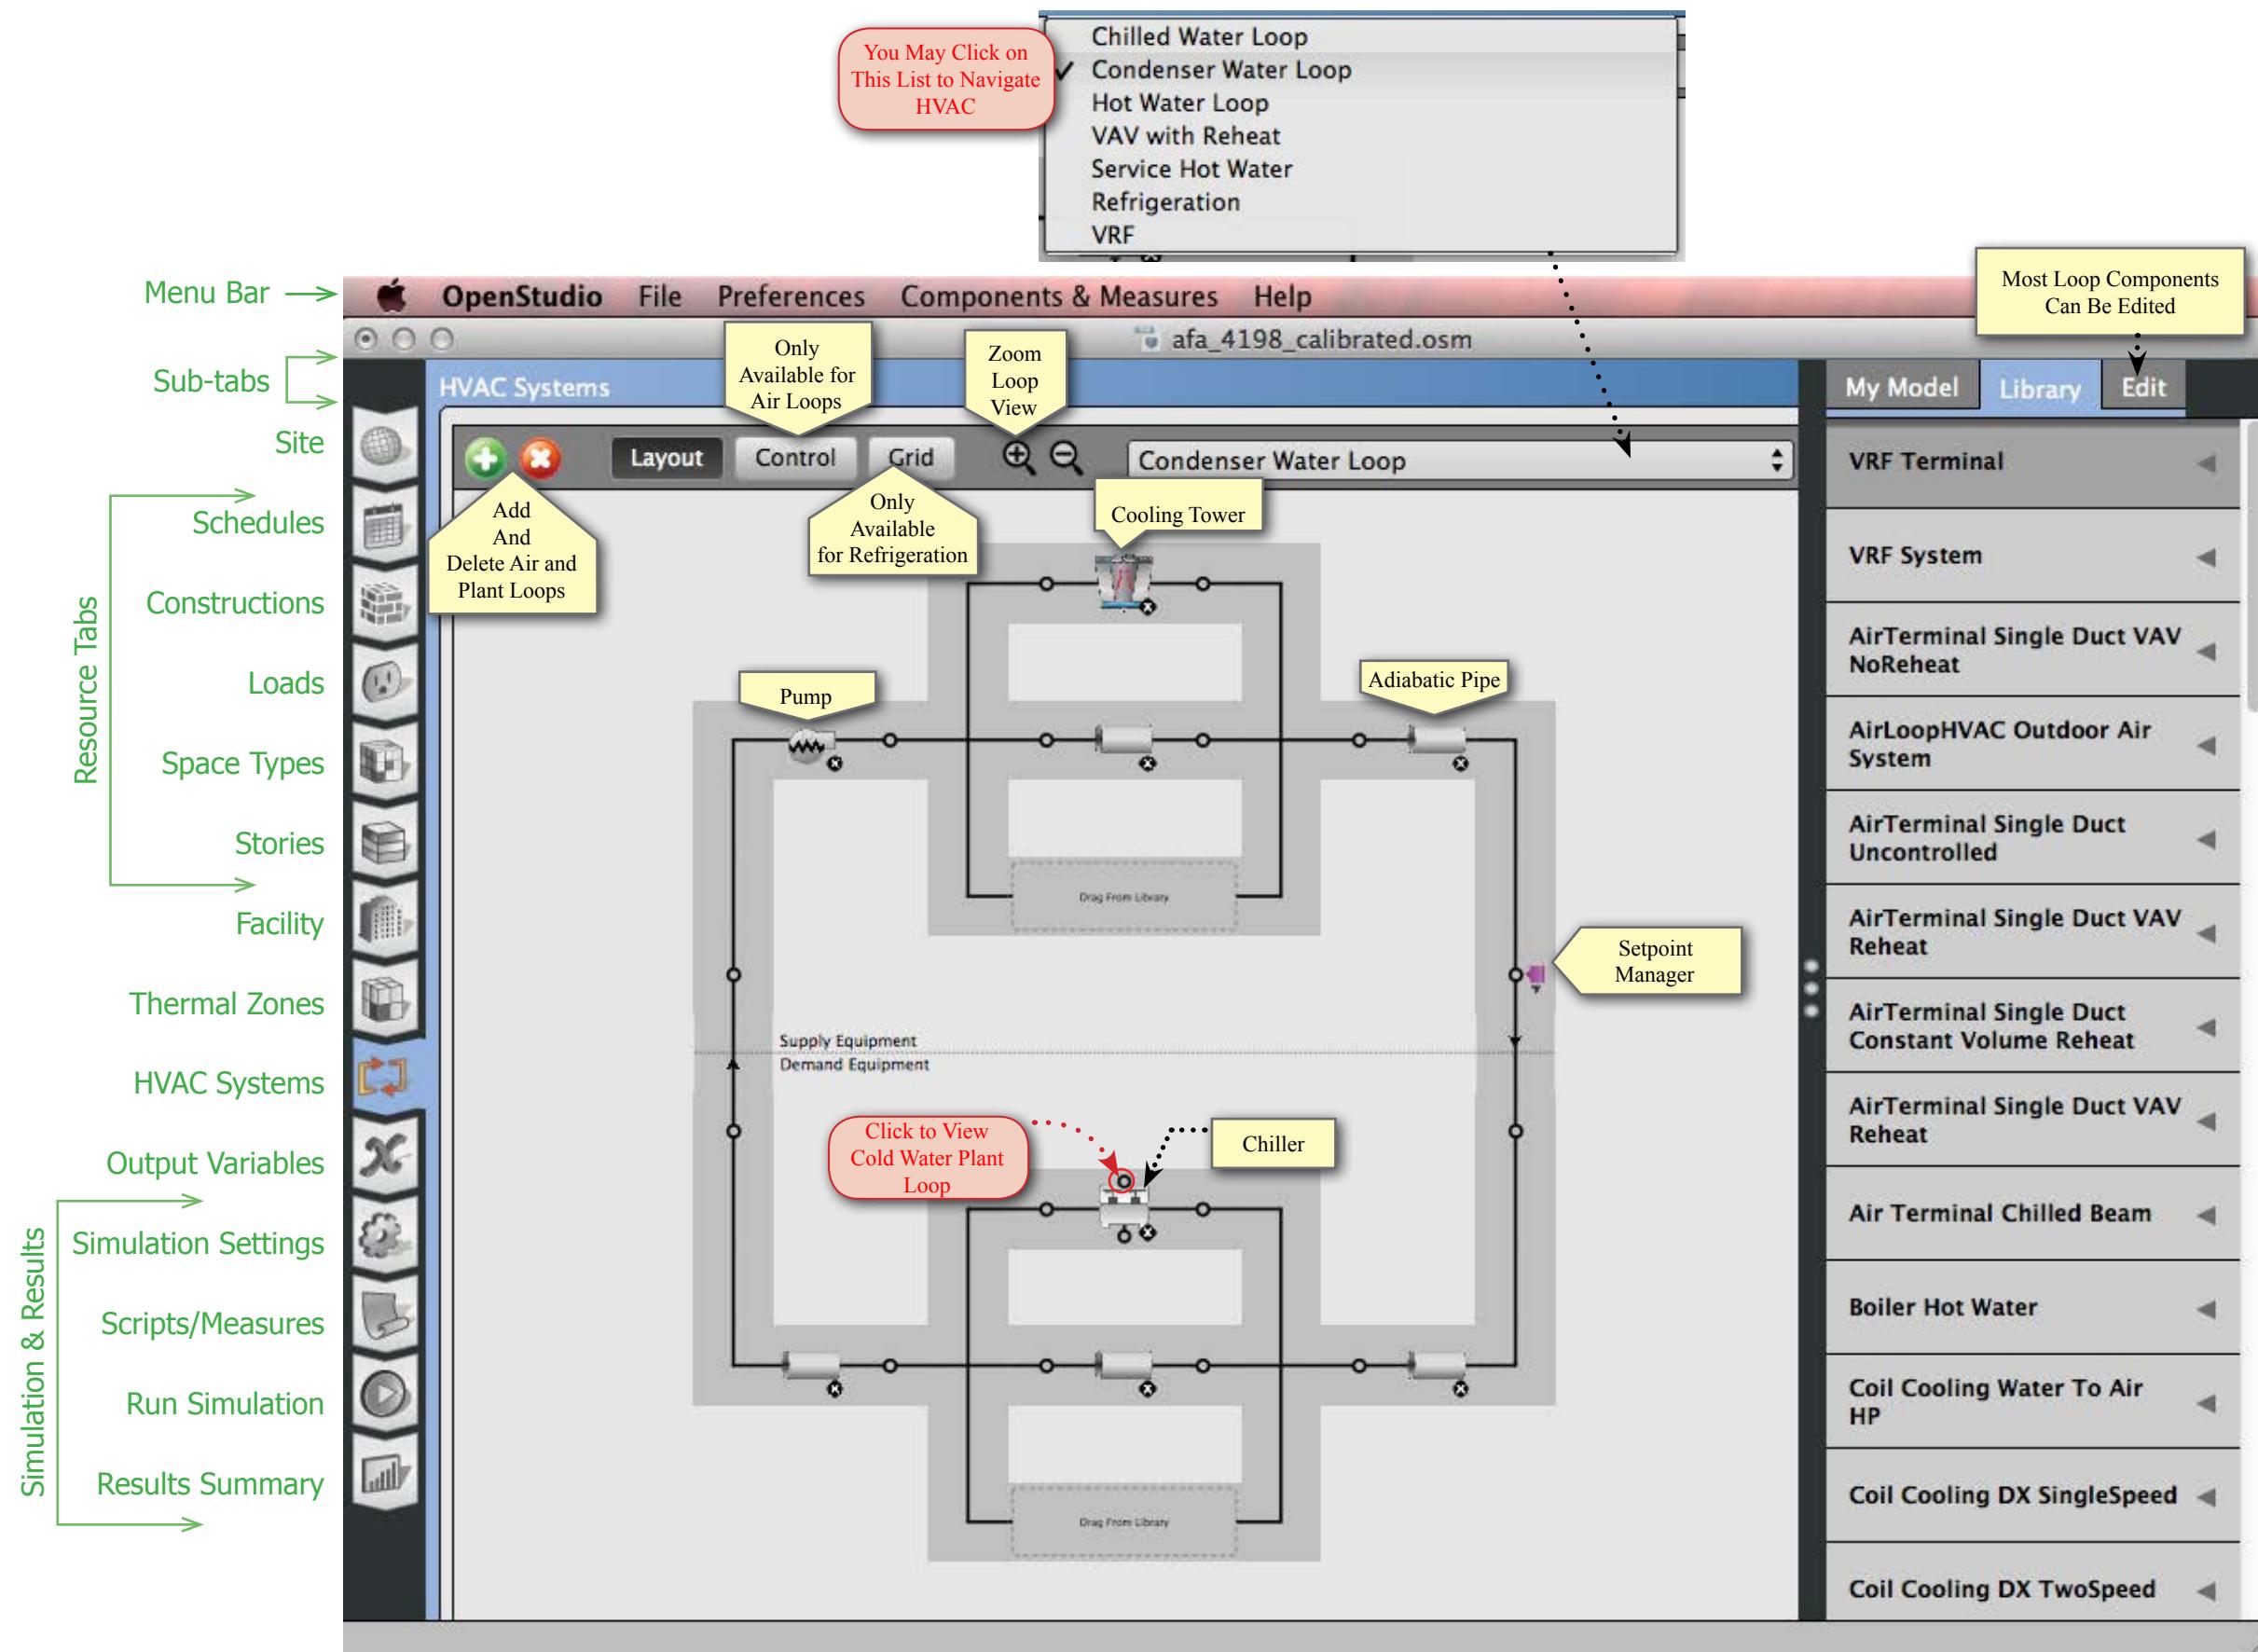

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## HVAC Systems — Hot Water Loop


### Notes

In the hot water loop the heating coil that had been a supply side object on the air loop is now a demand object.

The supply side has a pump and a boiler. The boiler can use a variety of fuels. The adiabatic pipes are a necessary part of the loop. There are no attributes to set for the pipes.

You can click on the heating coil to go back to the air loop.

The heating coils without links represent the reheat terminals for each connected thermal zone.

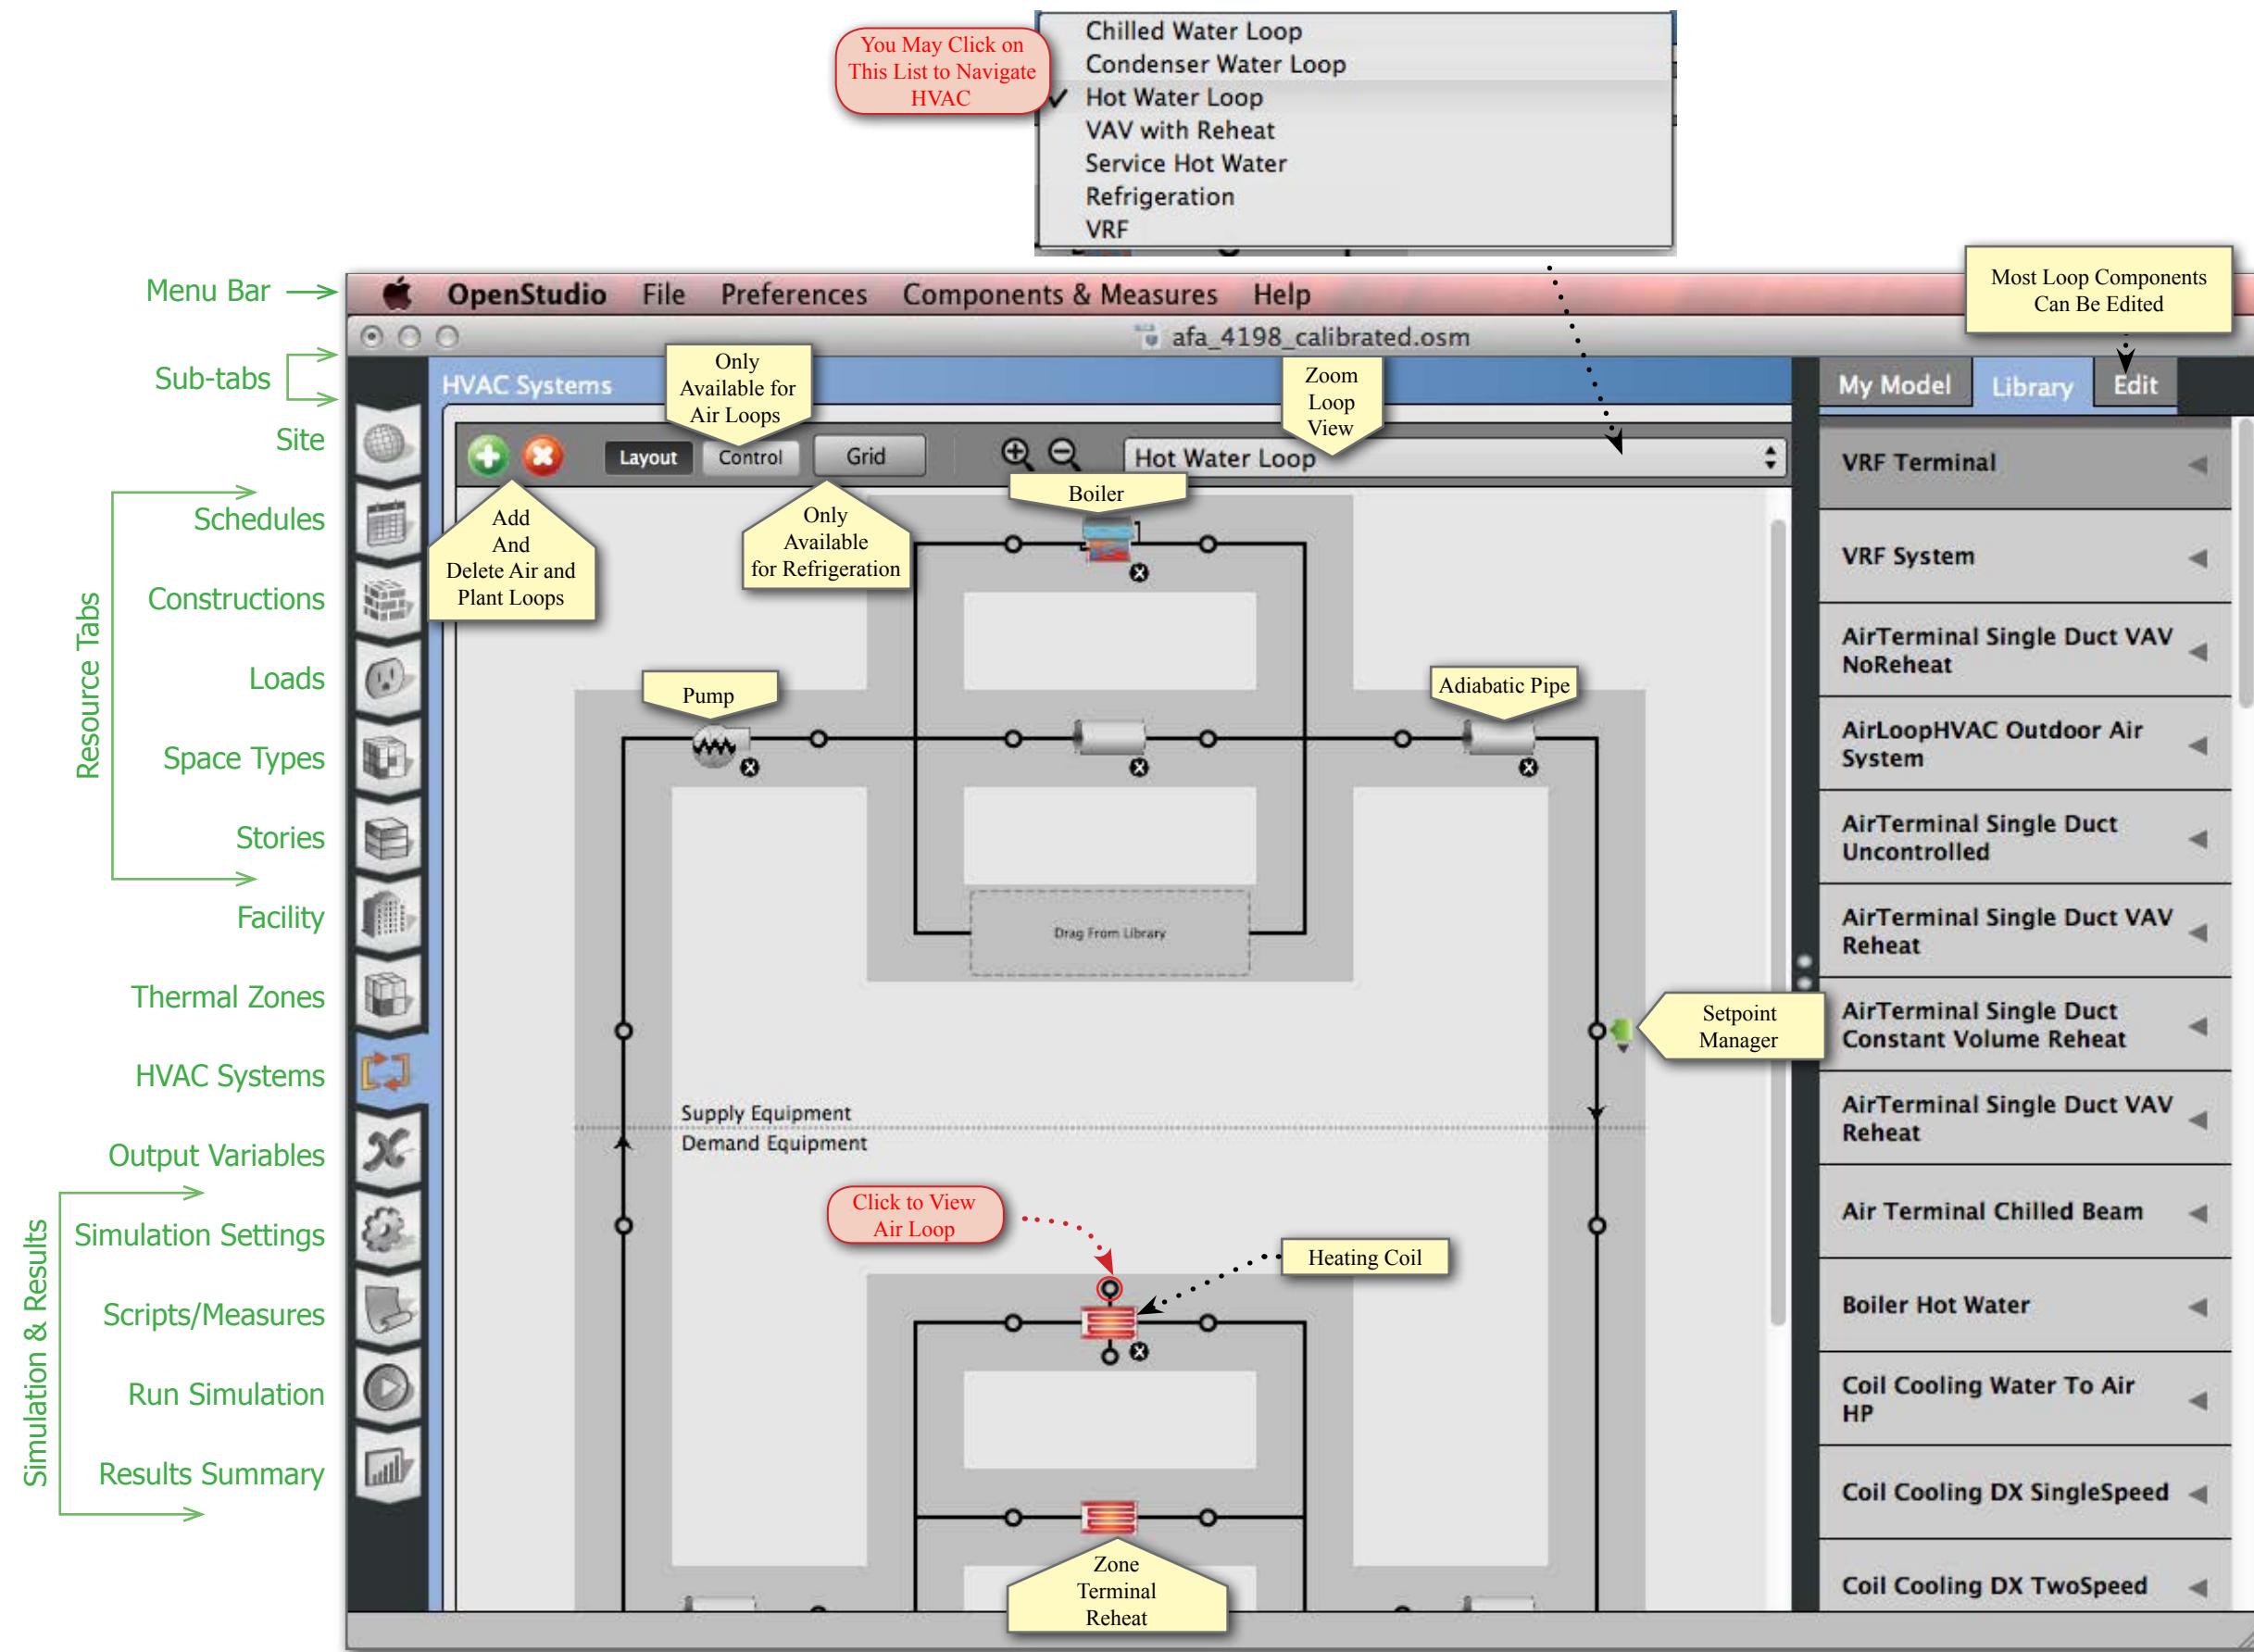

# OpenStudio 1.7.0 Basic Workflow Guide (June 2015)

openstudio.net


## HVAC Systems — Plenums

### Notes

To add supply and return plenum zones:

1. To access the plenum editor, select the zone on the layout view.
2. Select the Edit tab on the right panel and click on the plenum icon on the blue bar.
3. Choose a plenum from the drop down list or create a new plenum zone but selecting the green add button. The zones available to be plenums will be selectable in a dialog. Create new zones for plenums in the Thermal Zones tab on the left.

Shared plenums will be colored the same and will match the color selected for the plenum zone on the Thermal Zones tab.

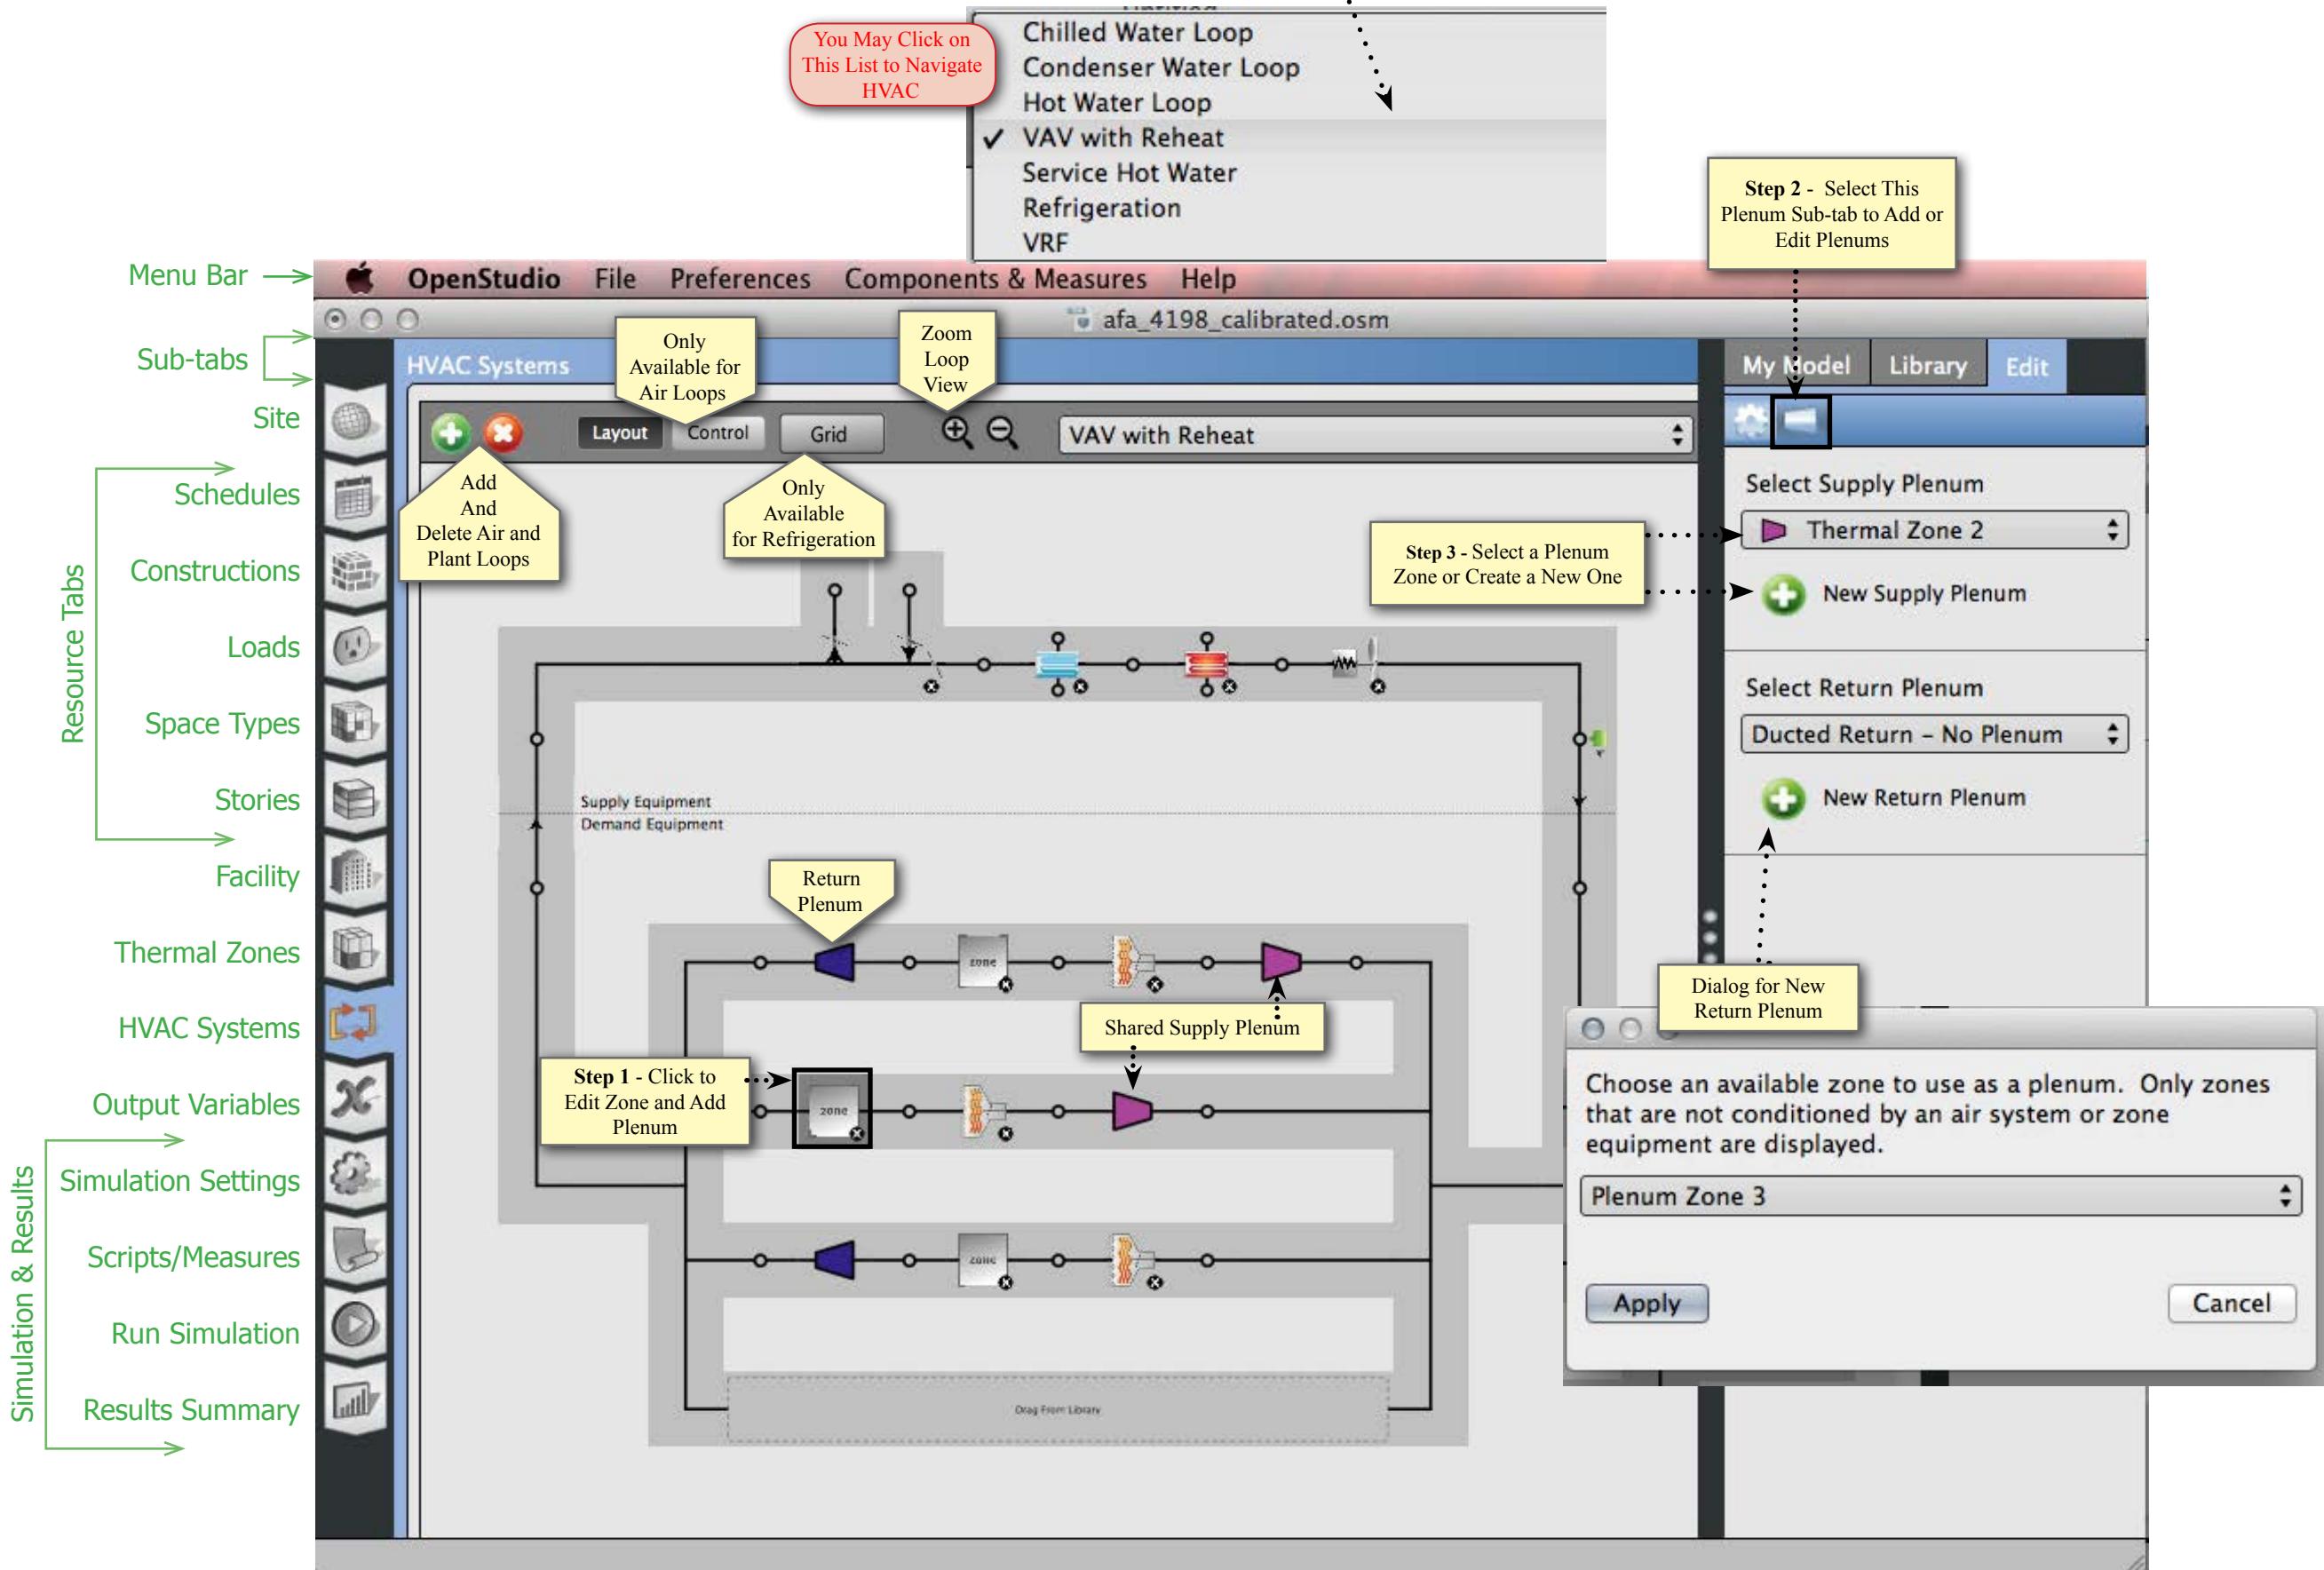

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net


## HVAC Systems —Water Mains Editor

### Notes

New to OpenStudio 0.9.0 are tools to model service hot water. The first view into the HVAC tab will be the water mains editor, which shows as "Service Water" on loops pulldown list.

Water enters the system at the right and leave at the Sewer on the left. One or more water use connections can be added in the middle.

Clicking a water use connection will take you to a model window where you can add water use equipment.

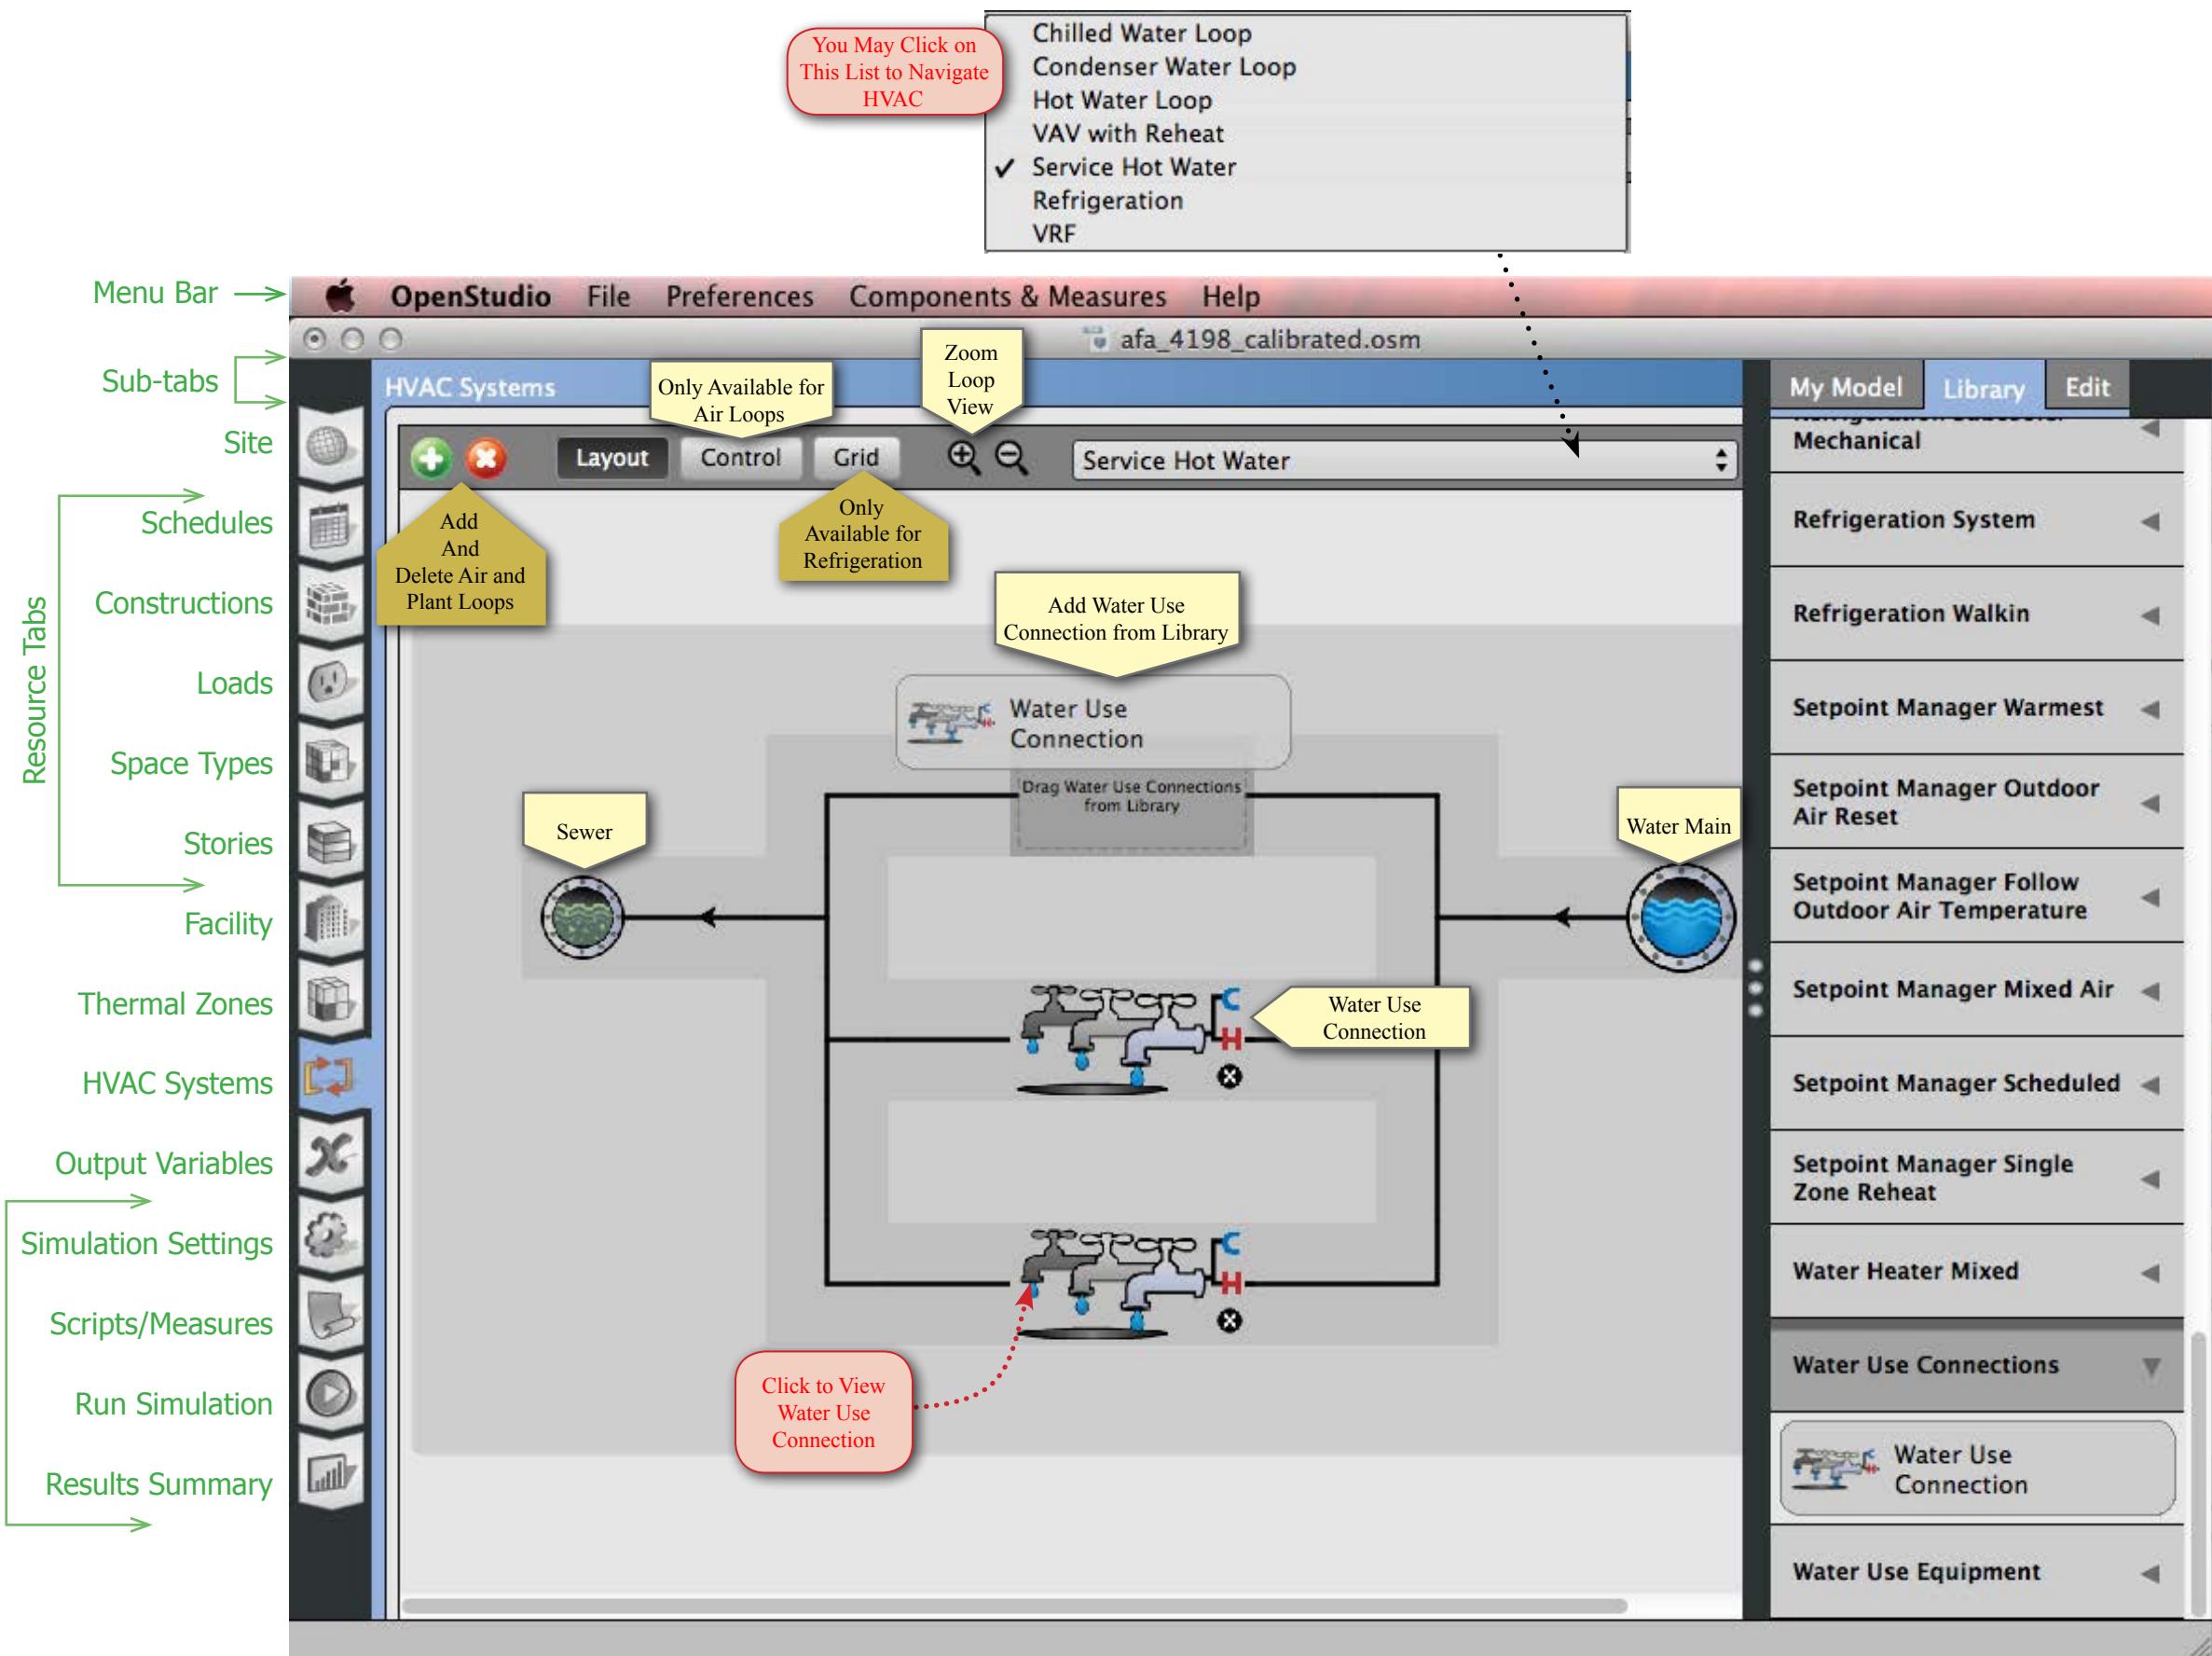

# OpenStudio 1.7.0 Basic Workflow Guide (June 2015)

[openstudio.net](http://openstudio.net)

## HVAC Systems — Water Use Connection


### Notes

Dragging a water use equipment object into the water use connection will create an instance of that definition. Much like lights, people and other loads, there is a fractional schedule to define usage patterns.

Optionally you can associate the equipment with a space. There is no direct energy use to the space, but heat from the equipment will be added to the space.

The equipment can be anything that uses water, hot or cold. The definition contains a peak flow rate and a target temperature schedule. Hot and cold water will mix to reach the target temperature at the fixture.

Click the water main, sewer, or makeup water to go back to the water mains editor. If you have a plant loop associated with the water use connection the "Loop" button will take you to the loop.

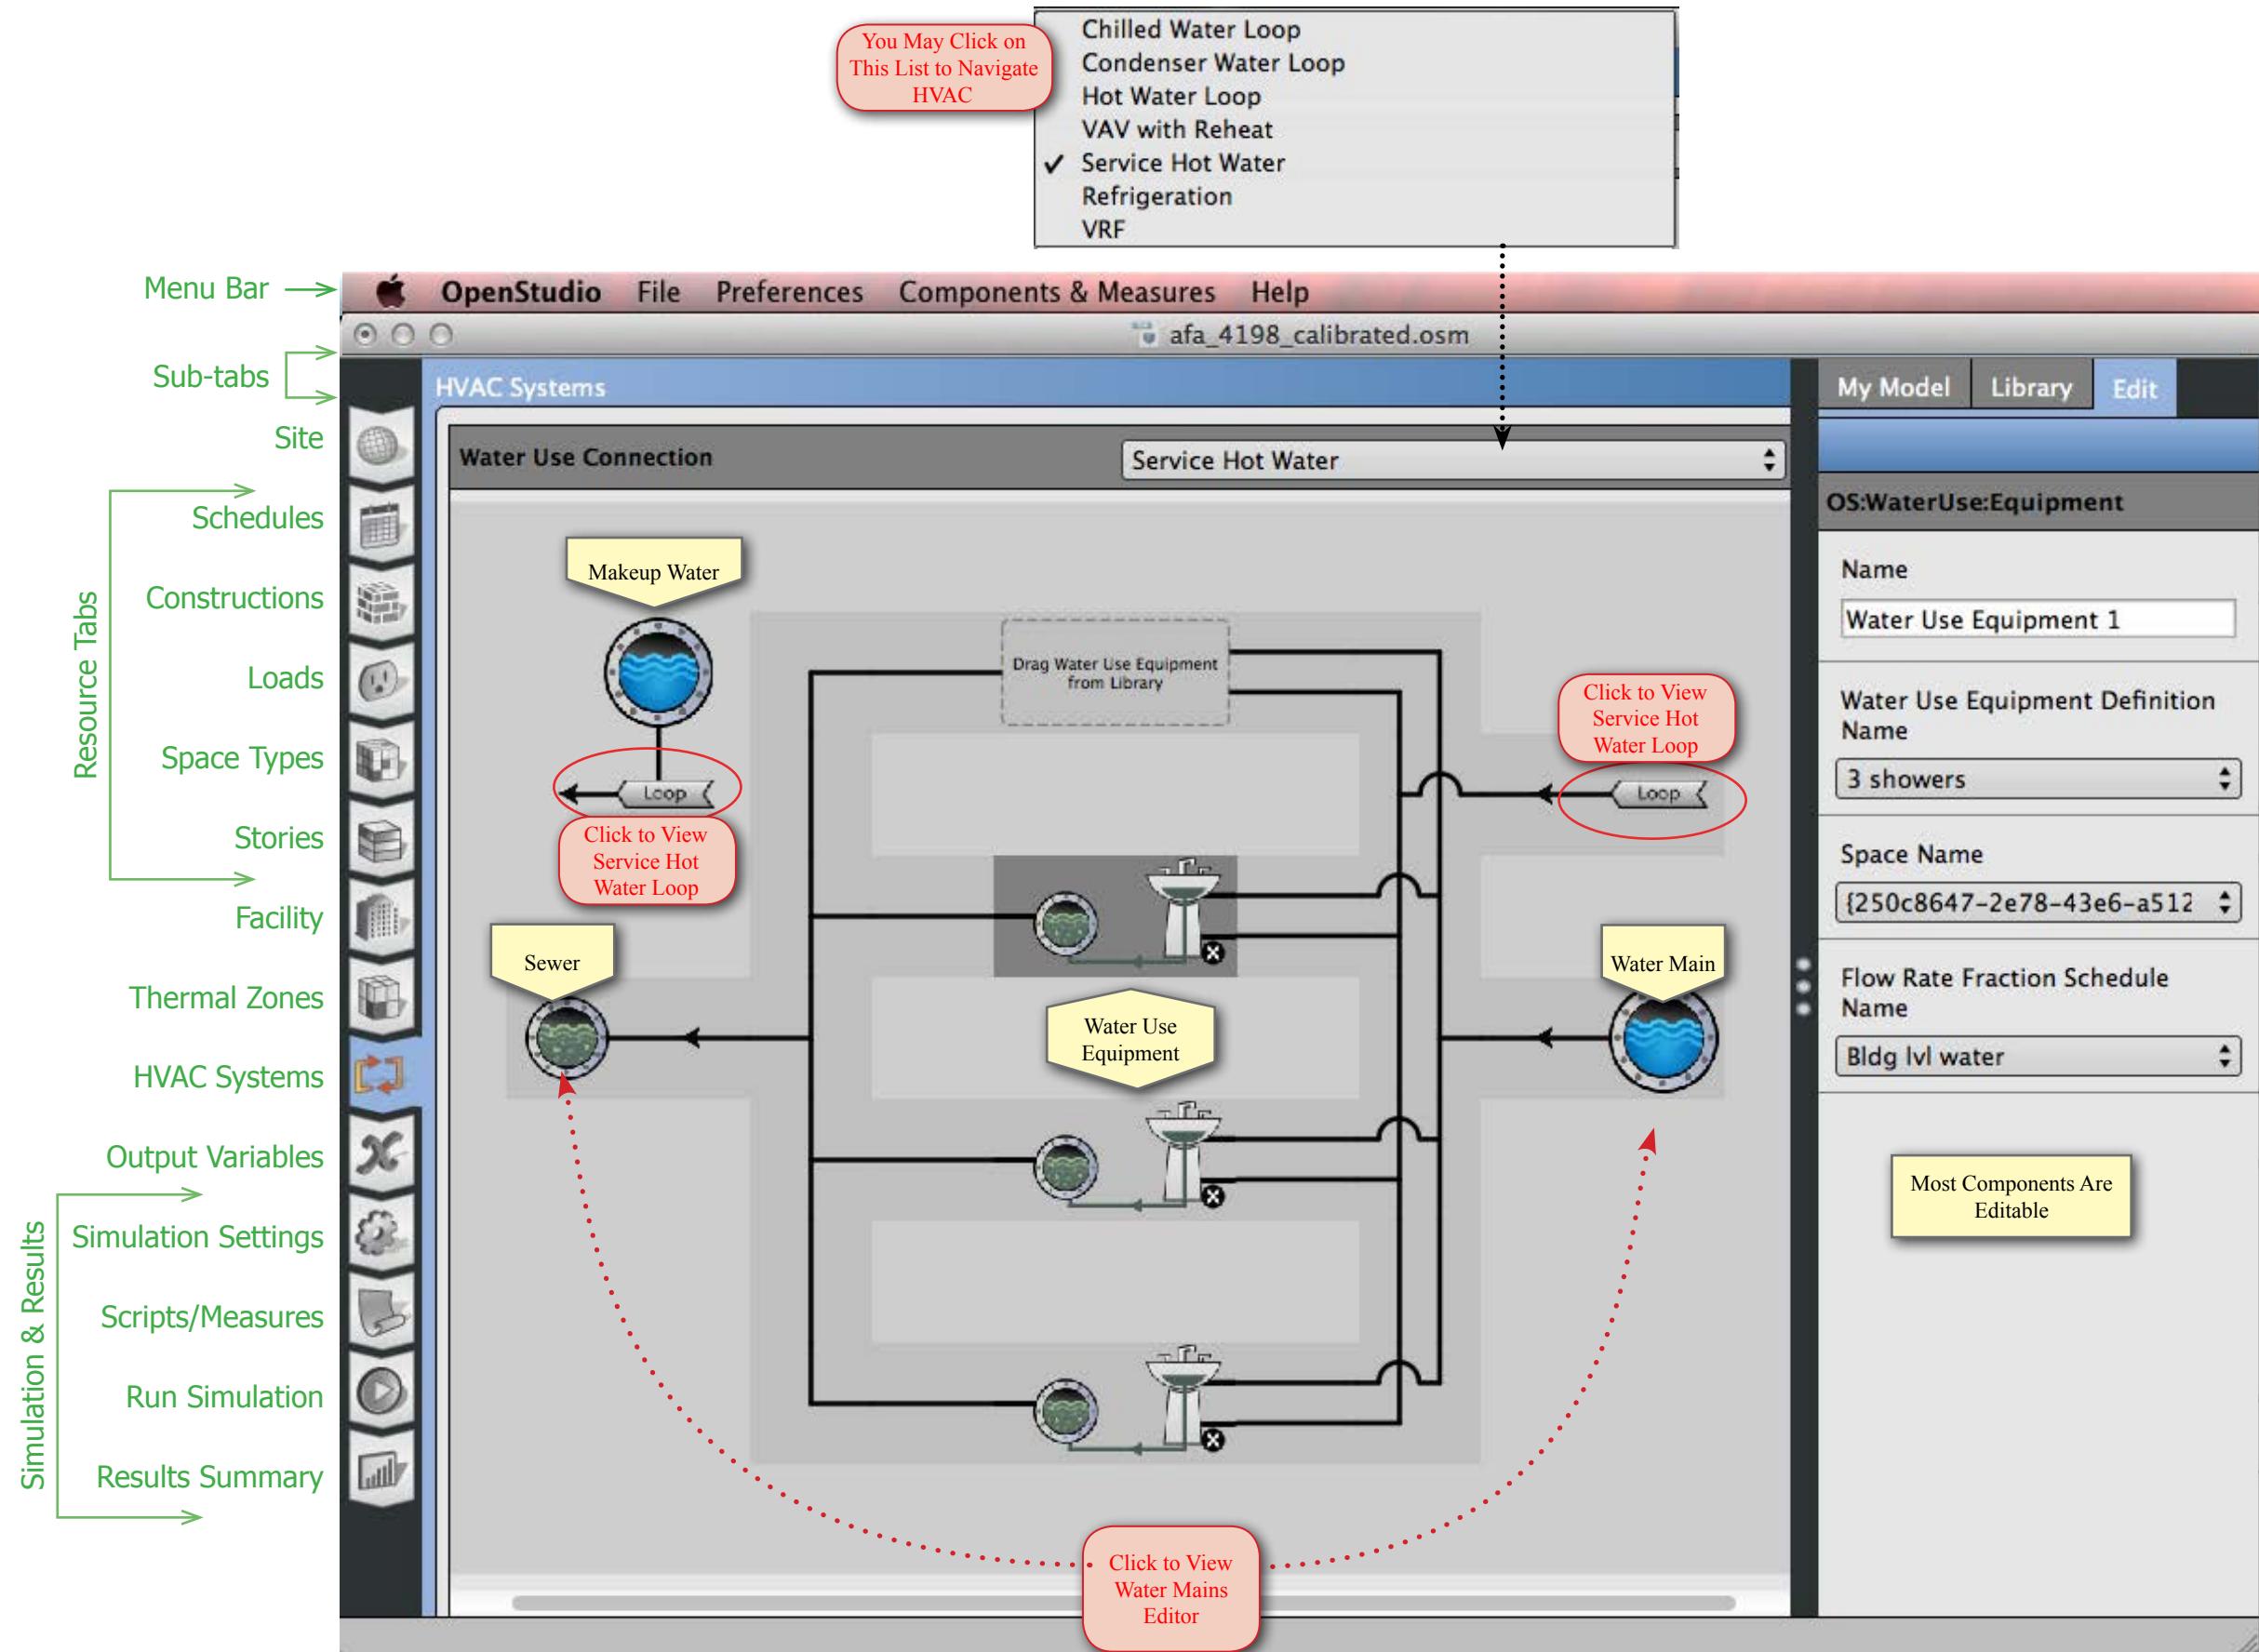

# OpenStudio 1.7.0 Basic Workflow Guide (June 2015)

[openstudio.net](http://openstudio.net)


## HVAC — Service Water Heater Loop

### Notes

The service water heater loop starts off just like any other plant loop, but unlike the ones serving an air loop, this plant loop has water use connections on the demand side, and a hot water heater, vs. a boiler on the supply side. A pump and setpoint manager are also necessary.

Both the hot water heater and the setpoint manager require a temperature schedule. Generally these should use the same schedule, which should have a temperature high enough to meet the setpoints at the water use equipment objects.

The energy that goes into the hot water heater will show up in the results page as "Water Systems". The pump is not included in this. The results page does not show water usage, but you can look at the Annual Building Utility Performance Summary (ABUPS) report in ResultsViewer to see water usage.

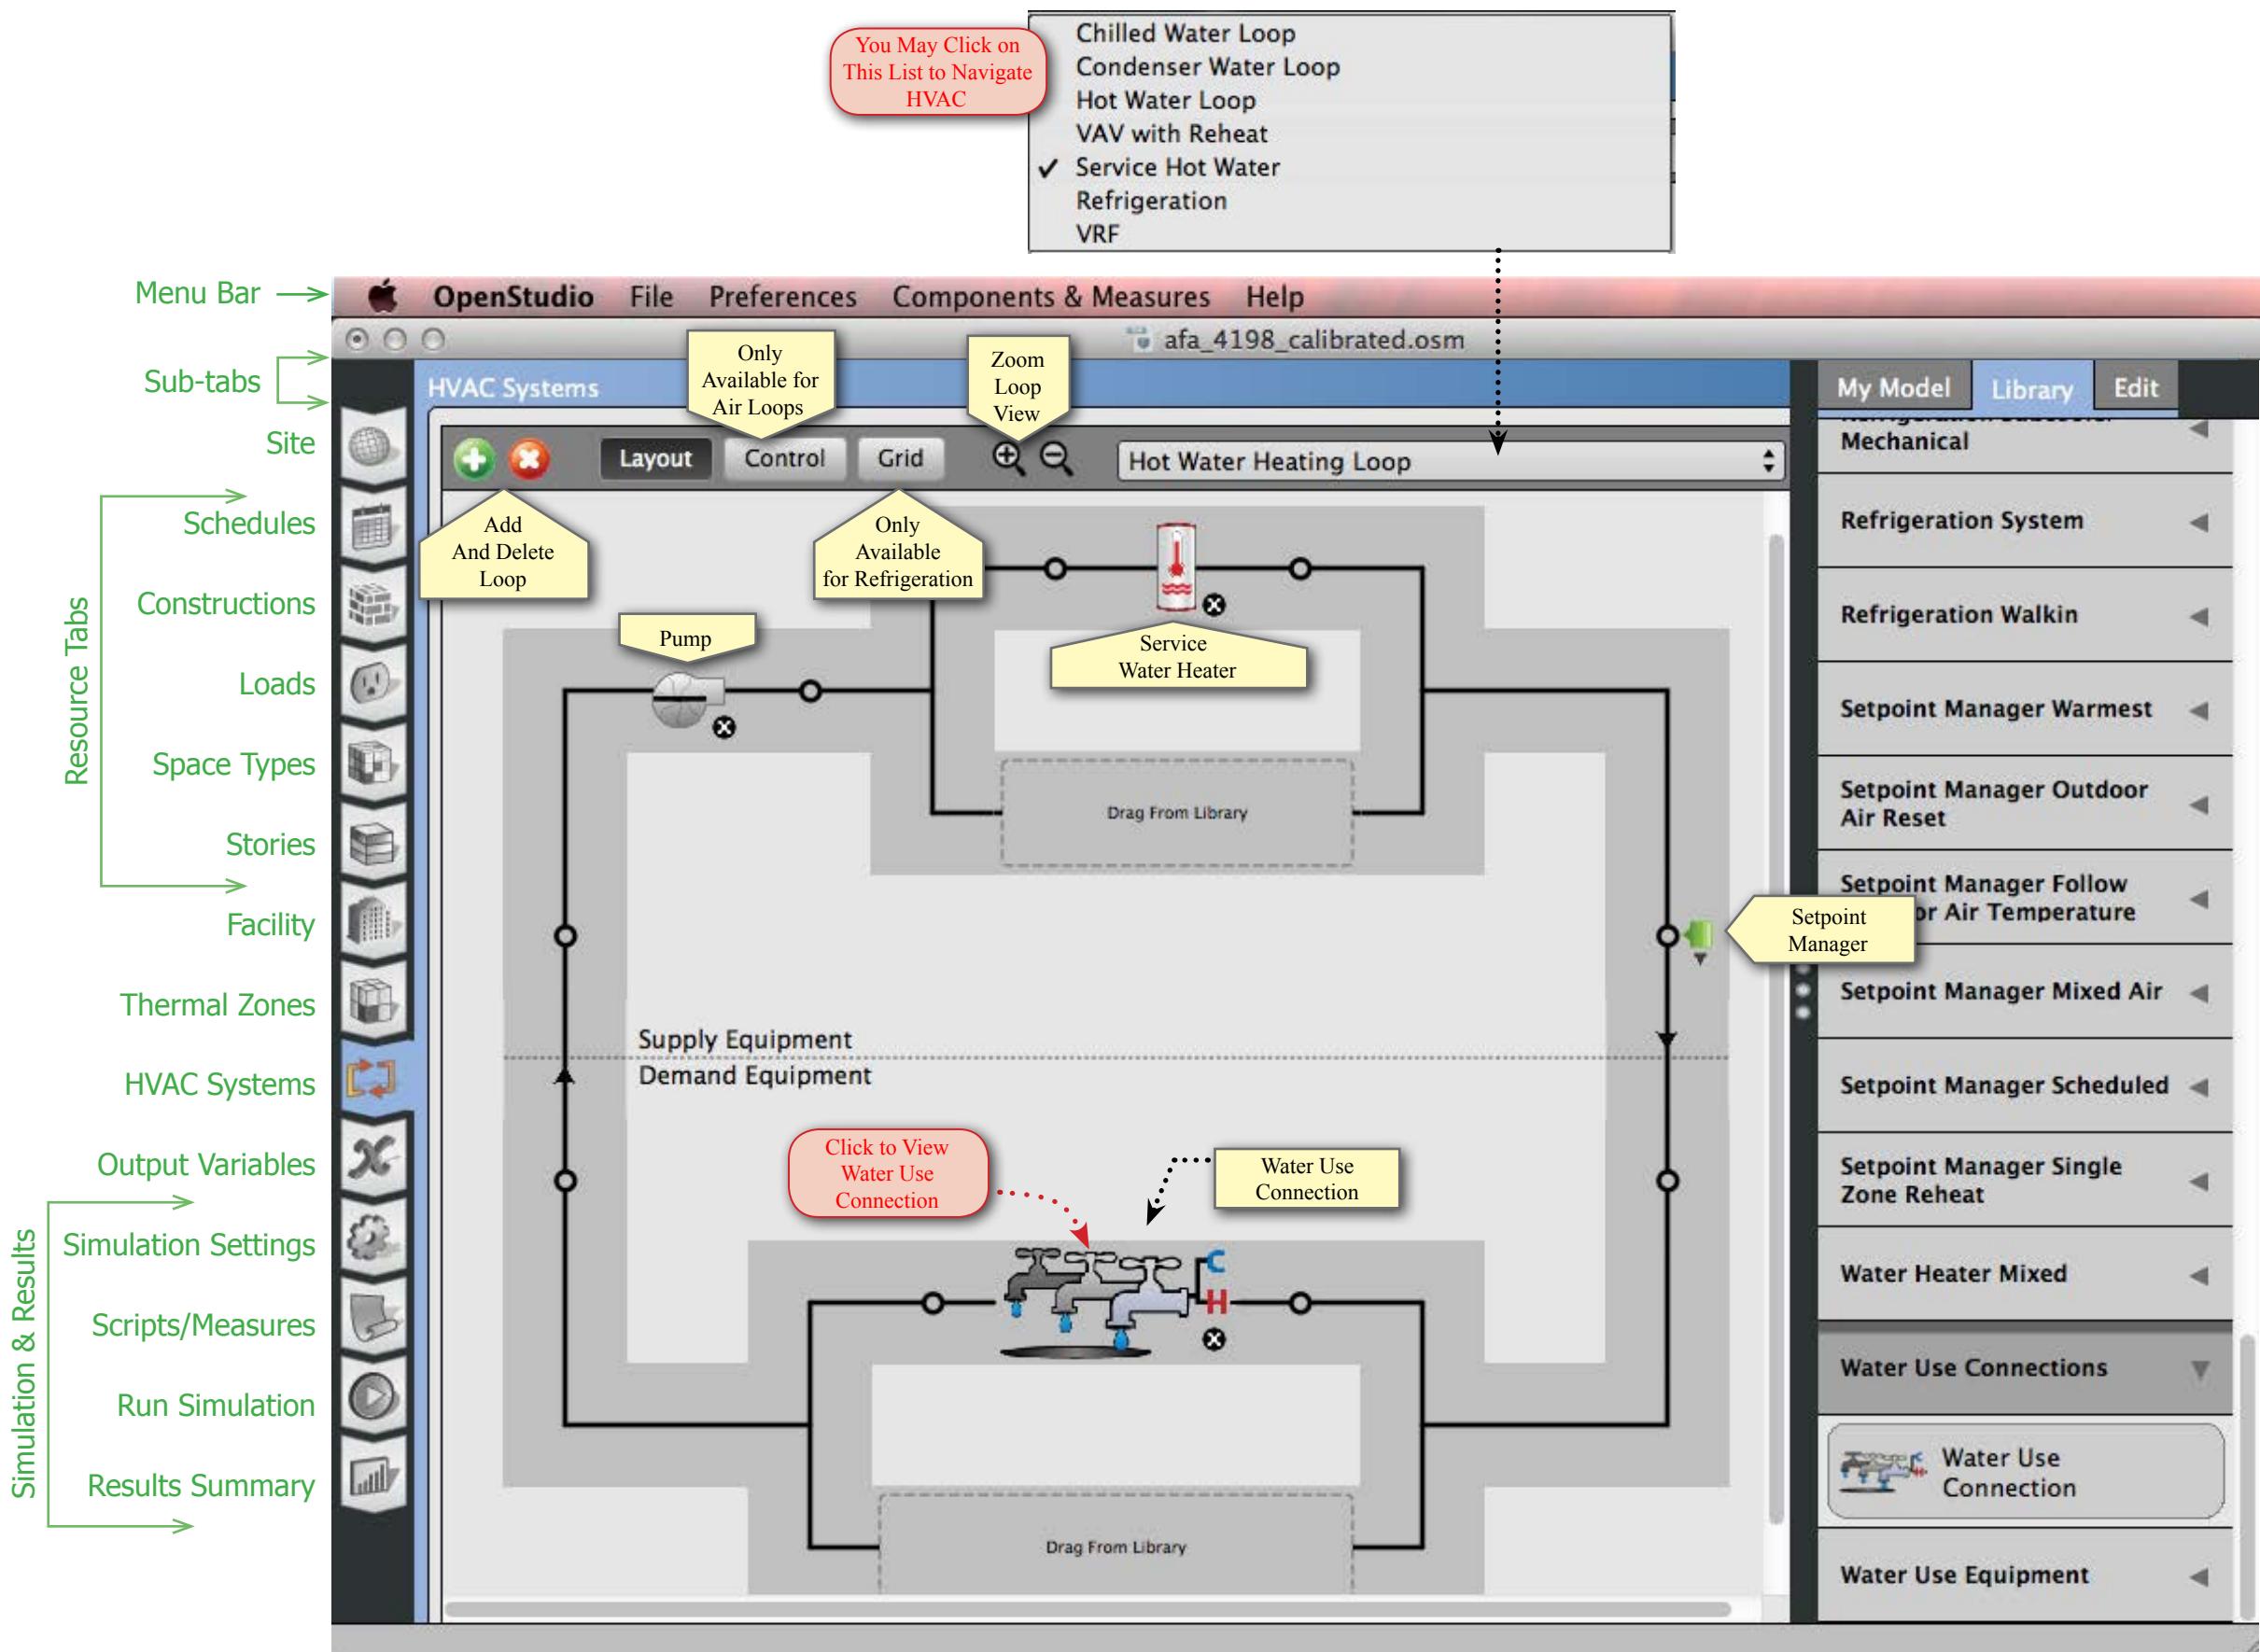

# OpenStudio 1.7.0 Basic Workflow Guide

[openstudio.net](http://openstudio.net)


## HVAC — Add Refrigeration System

### Notes

The refrigeration system interface can be accessed by selecting refrigeration from the drop down menu.

To add a refrigeration system select one from the library and add drag it to the drop zone.

Click on the zoom button by the name of the refrigeration system to go to a view of that system, add components from the library.

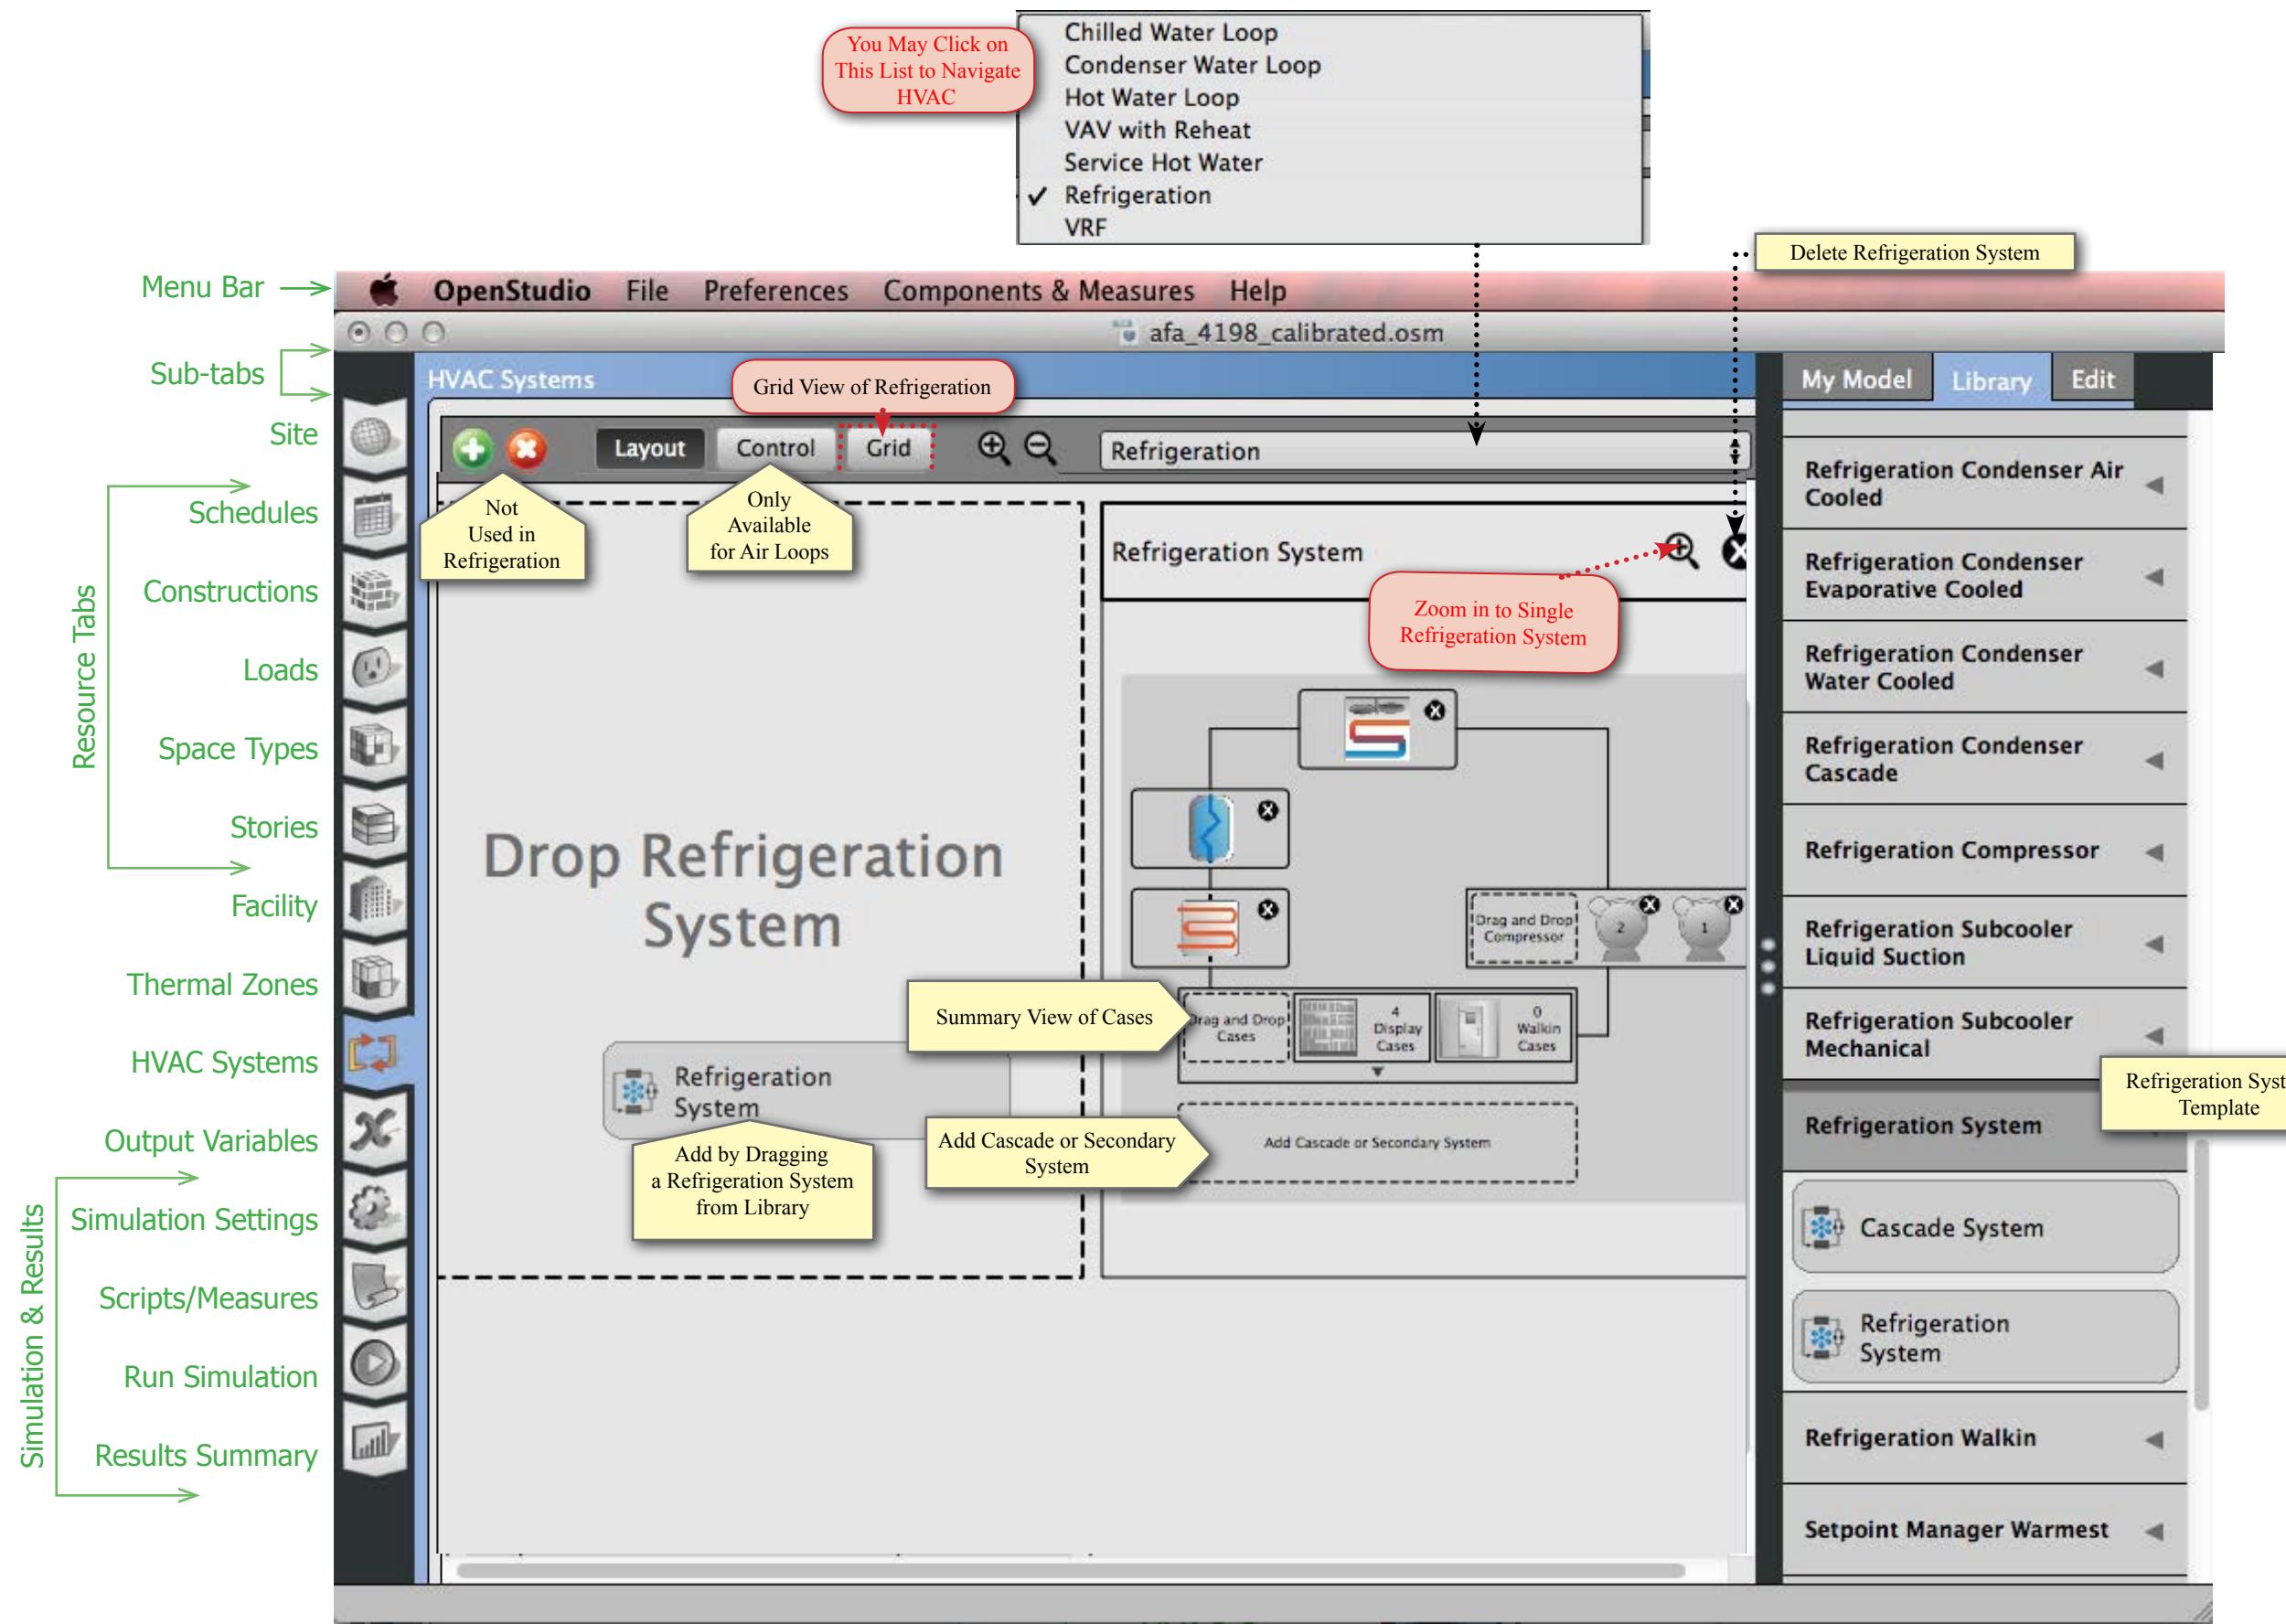

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## HVAC — Edit Refrigeration System in Layout View

### Notes

This zoomed in view provides the layout view of one refrigeration rack. You may add cases by dragging them on to the "Drag and Drop Cases" drop zone.

Drop zones are provided to accommodate systems with a mechanical subcooler and a Suction Line Heat Exchanger (SLHX).


The small arrow at the bottom of the refrigeration case summary will open an expanded view of cases. Each case can be selected and edited in the Edit panel on the right.

Cascade systems can be added by dragging the from "My Model" or the "Library."

An alternate view of the refrigeration systems is provided by the grid view.

You May Click on  
This List to Navigate  
HVAC

Chilled Water Loop  
Condenser Water Loop  
Hot Water Loop  
VAV with Reheat  
Service Hot Water  
✓ Refrigeration  
VRF

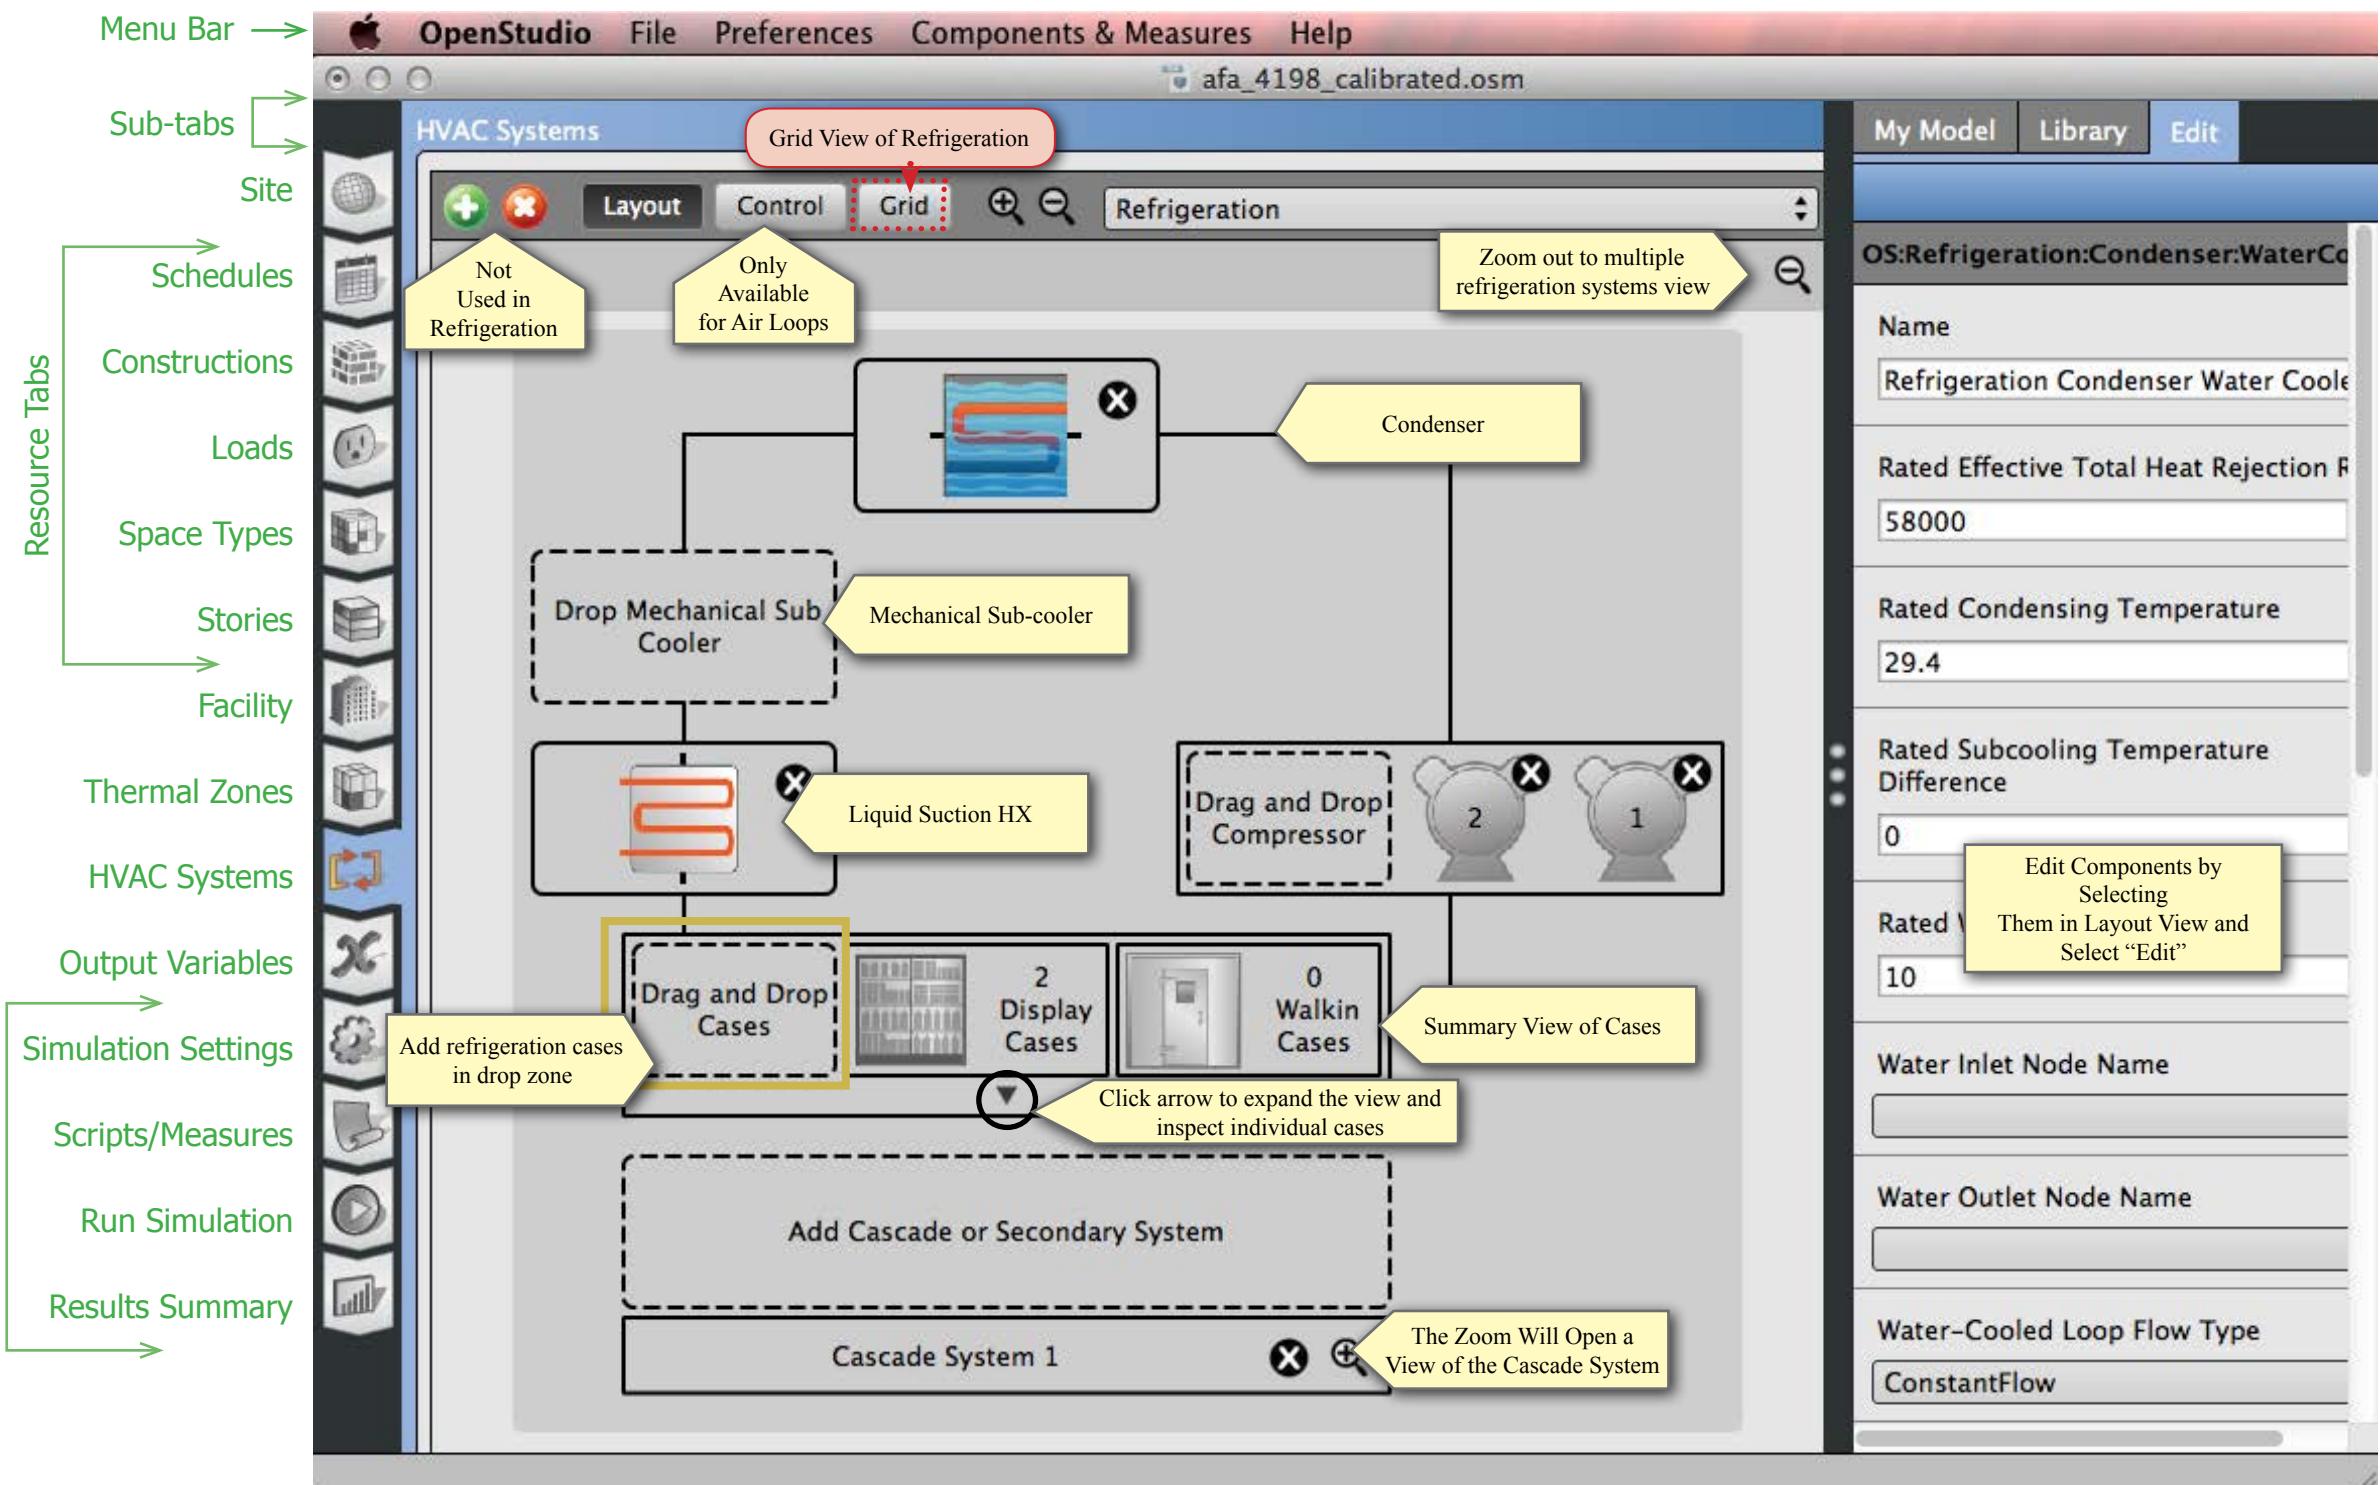

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## HVAC — Edit Refrigeration Systems in Grid View

### Notes

The refrigeration grid view provides a method for entering case settings in a spreadsheet style. Cases can be added, assigned to racks, and edited in this view.

There are two major divisions, one for Display Cases and another for Walk-ins. Under each division a drop box is available to add new cases. There are also buttons to move through the case settings and enter the data on each case.


Create your own custom view of this information by checking the box on the right of the column header. Checked columns will show up under the Custom button.

In this version you have to delete cases in the layout view.

### Tips

User-selected, custom fields will be saved when the application is closed, and will automatically load when the application is next started.

In the initial release of the grid view, no provision was made to delete a case or walk in; they must be assigned to a rack, and deleted from the layout view. This functionality omission will be corrected in the next OpenStudio release.

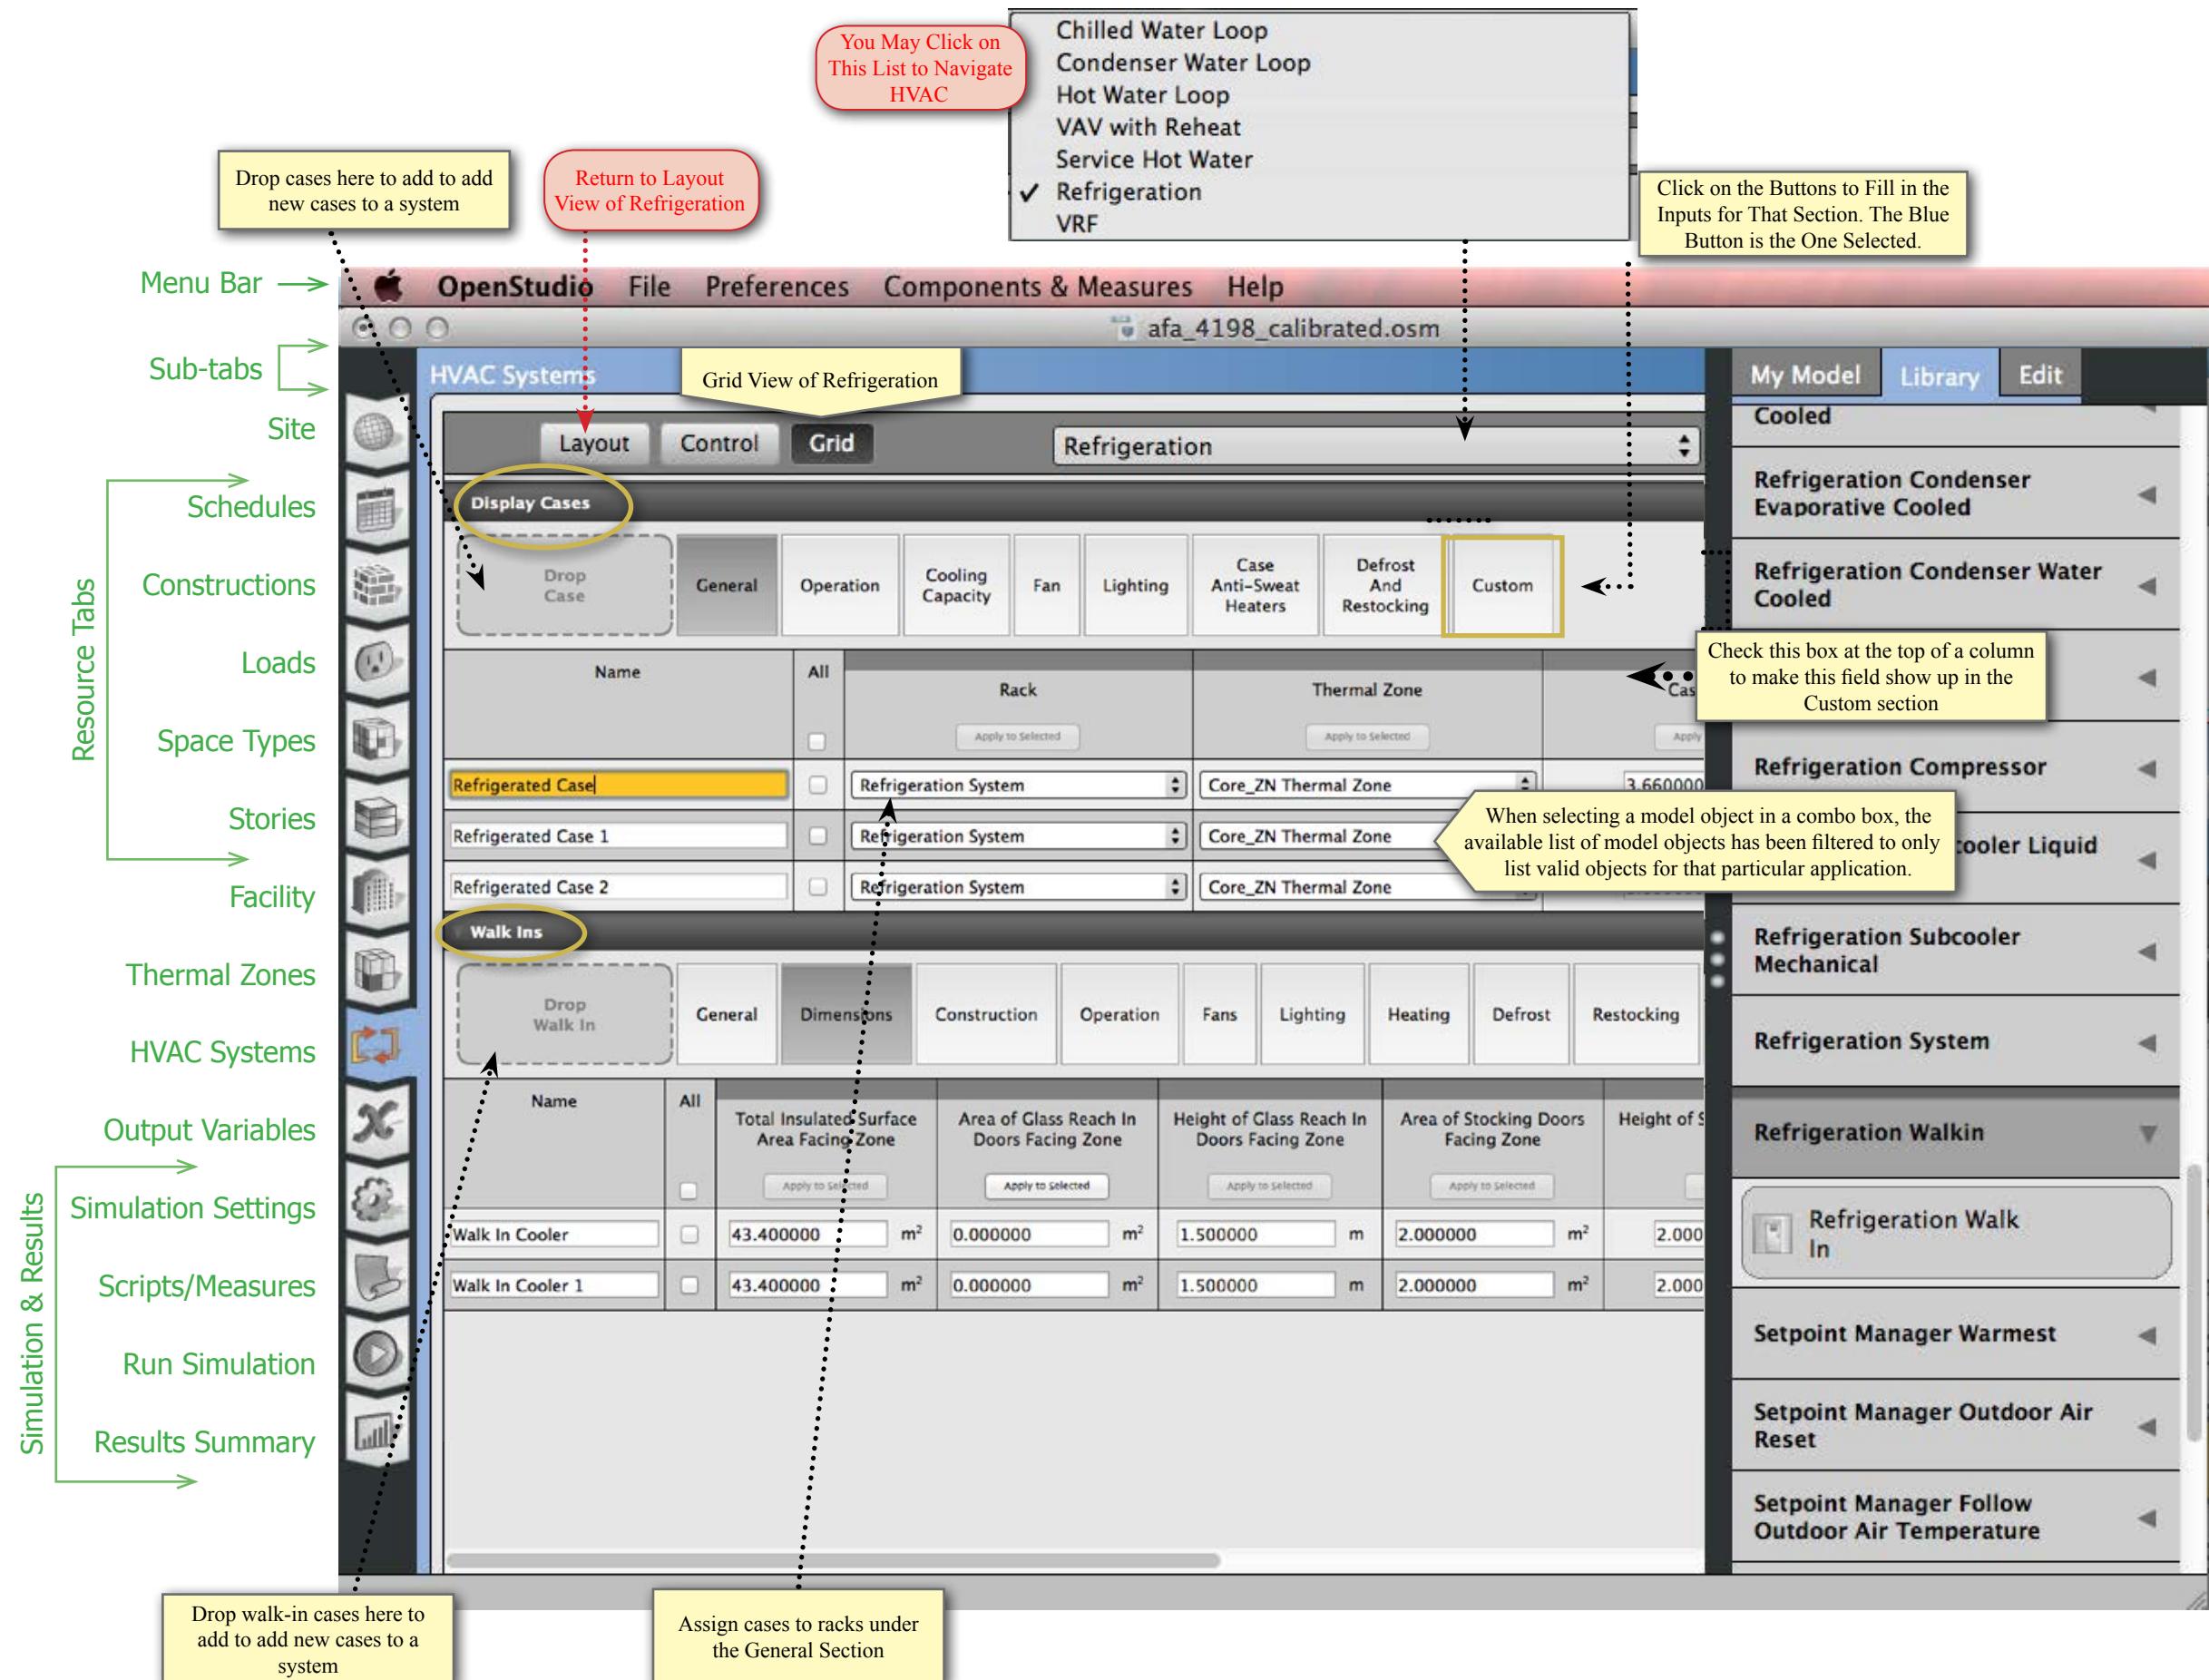

# OpenStudio 1.7.0 Basic Workflow Guide


openstudio.net

## HVAC - Add Variable Refrigerant Flow (VRF) System

### Notes

Variable refrigerant flow (VRF) systems can be added by dragging them onto the large drop zone from the library.

This view provides a view of all the VRF systems in the model. The zoom icon by the name of the system will open a detailed view of that system. This single system view is shown on the next page.

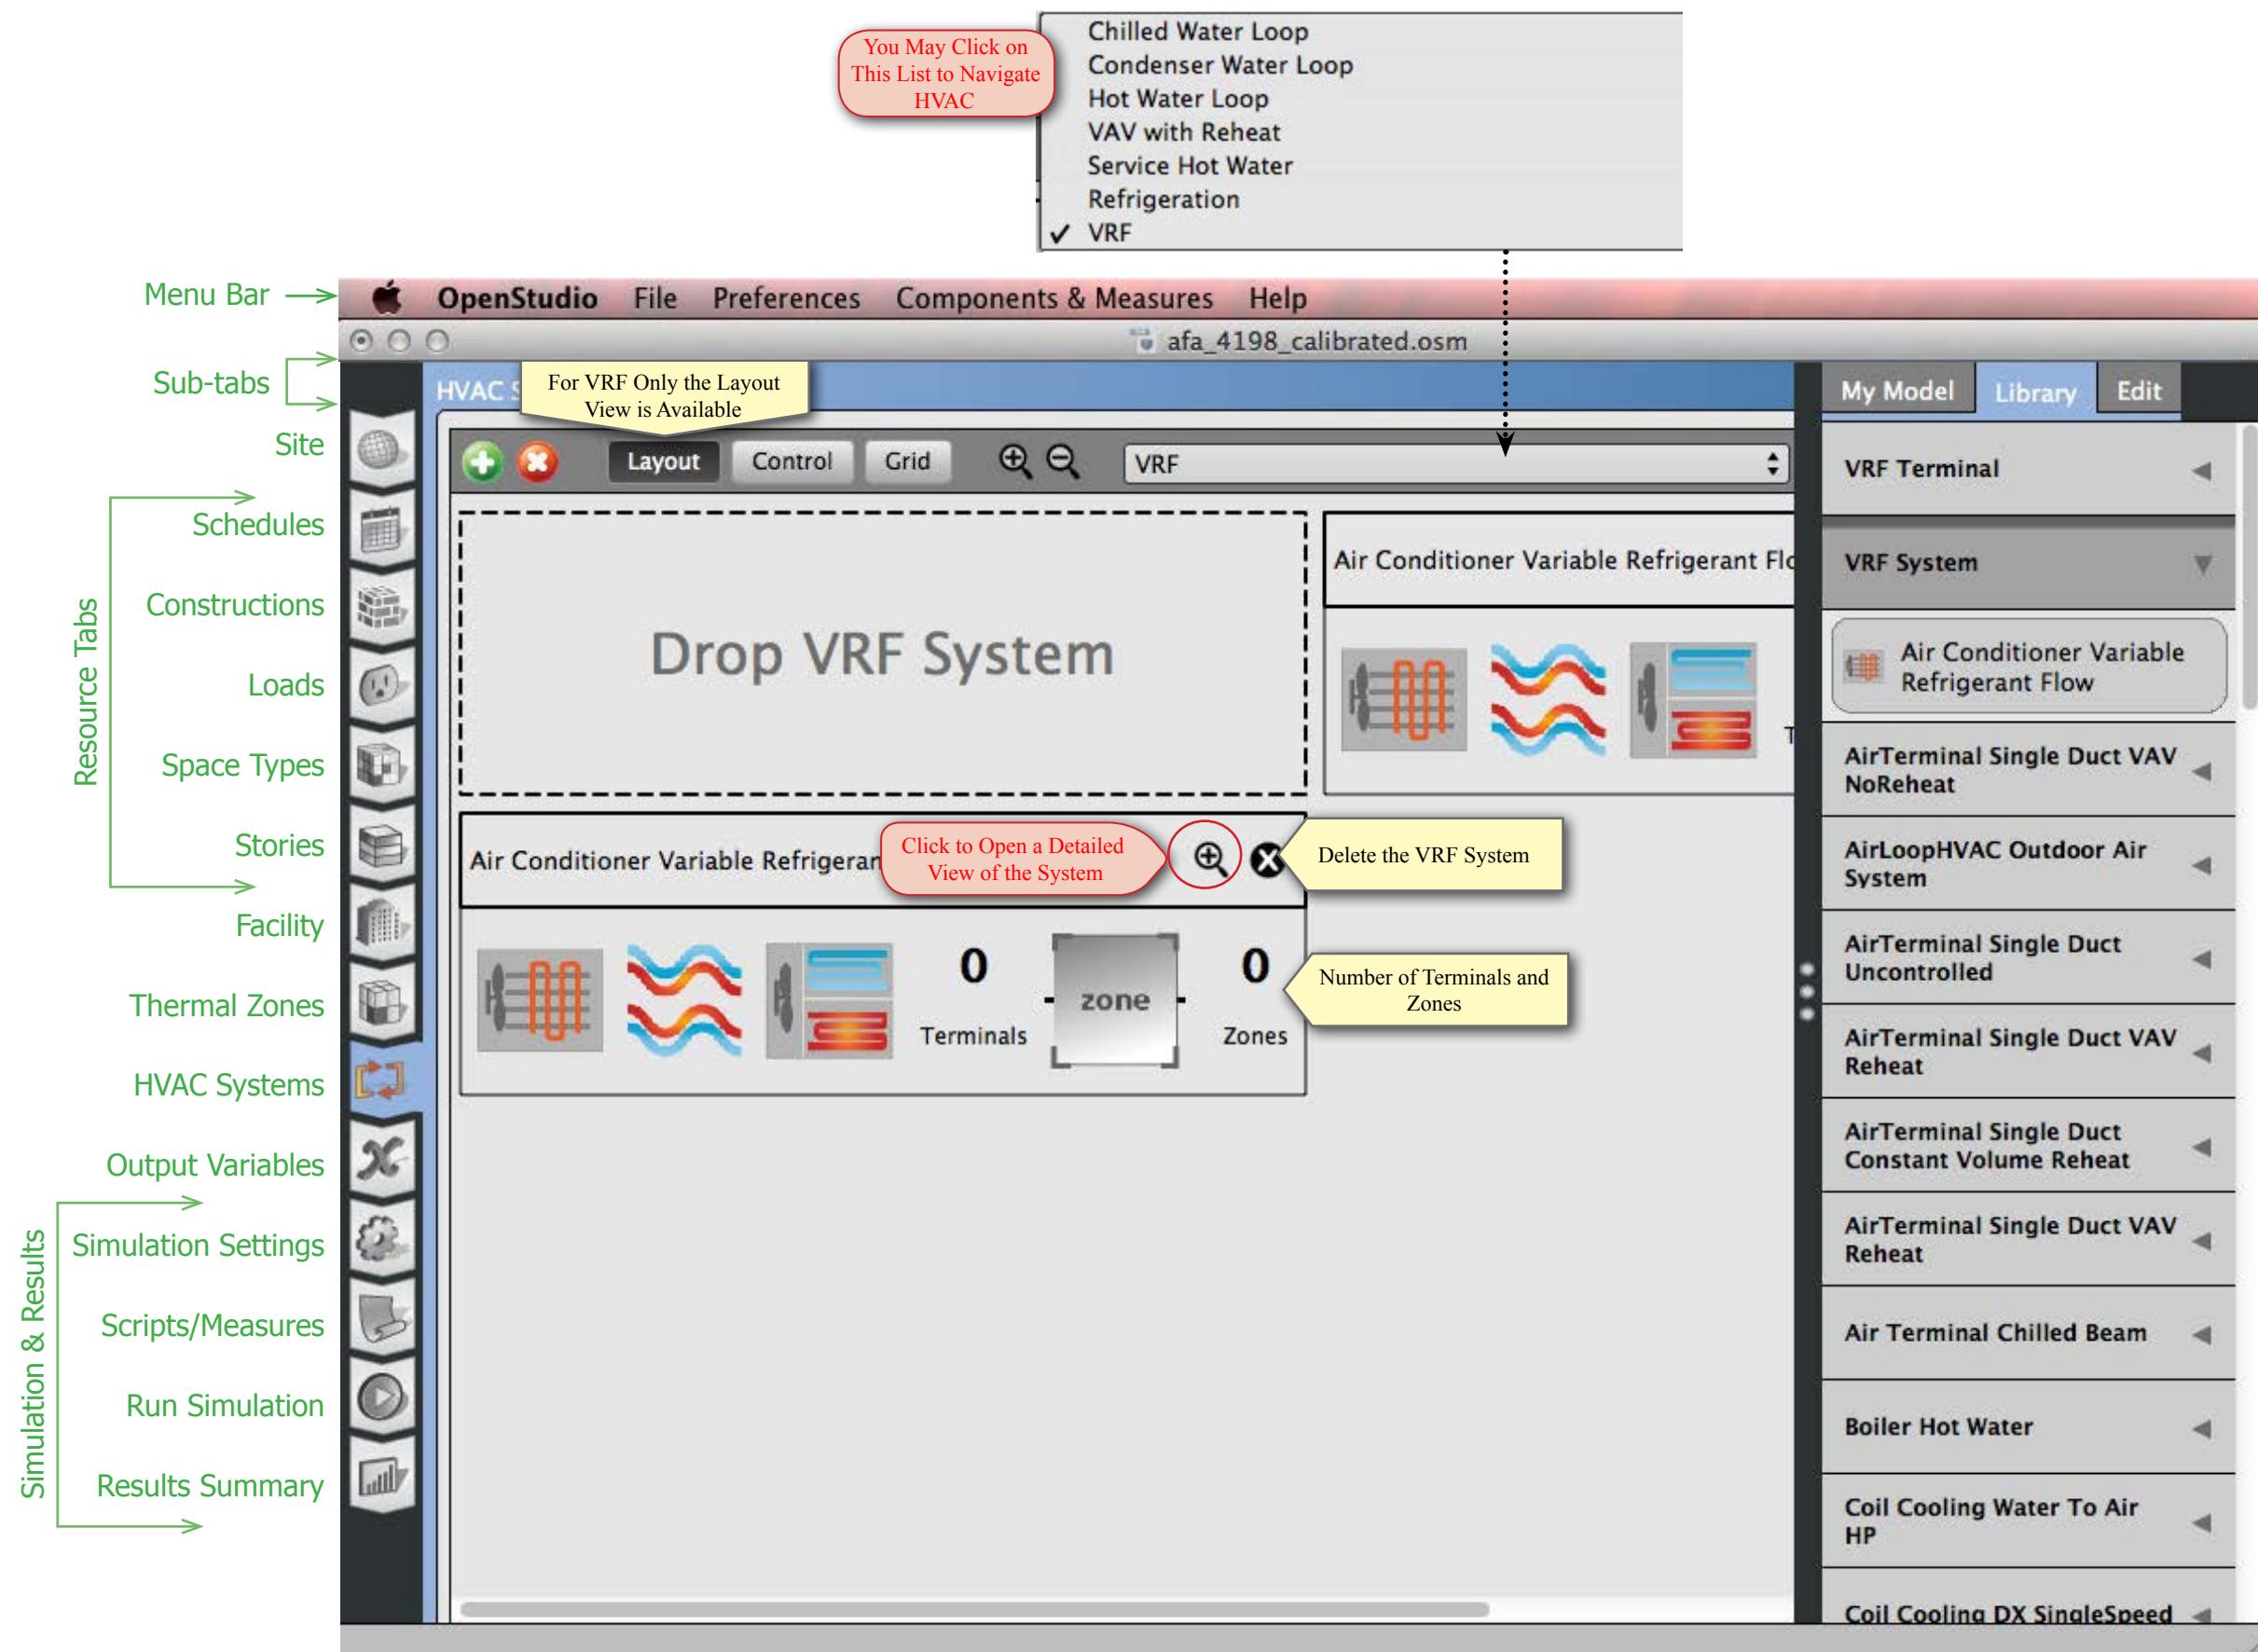

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## HVAC - Edit Variable Refrigerant Flow (VRF)

### Notes


To create your VRF system, start by dropping a terminal from the "Library" onto the drop zone. Then add thermal zones from "My Model." When a thermal zone is added a new VRF terminal will automatically be created.

Set the terminal settings by selecting the terminal and editing in the "Edit" tab on the right.

More than one terminal can connect with the same zone. Just drag the zone to the drop area again to add another connection.

### Tip

Add one thermal zone and edit the settings in the "Edit" tab and when you add a new zone to the system, the settings from that terminal will be applied to the new one.

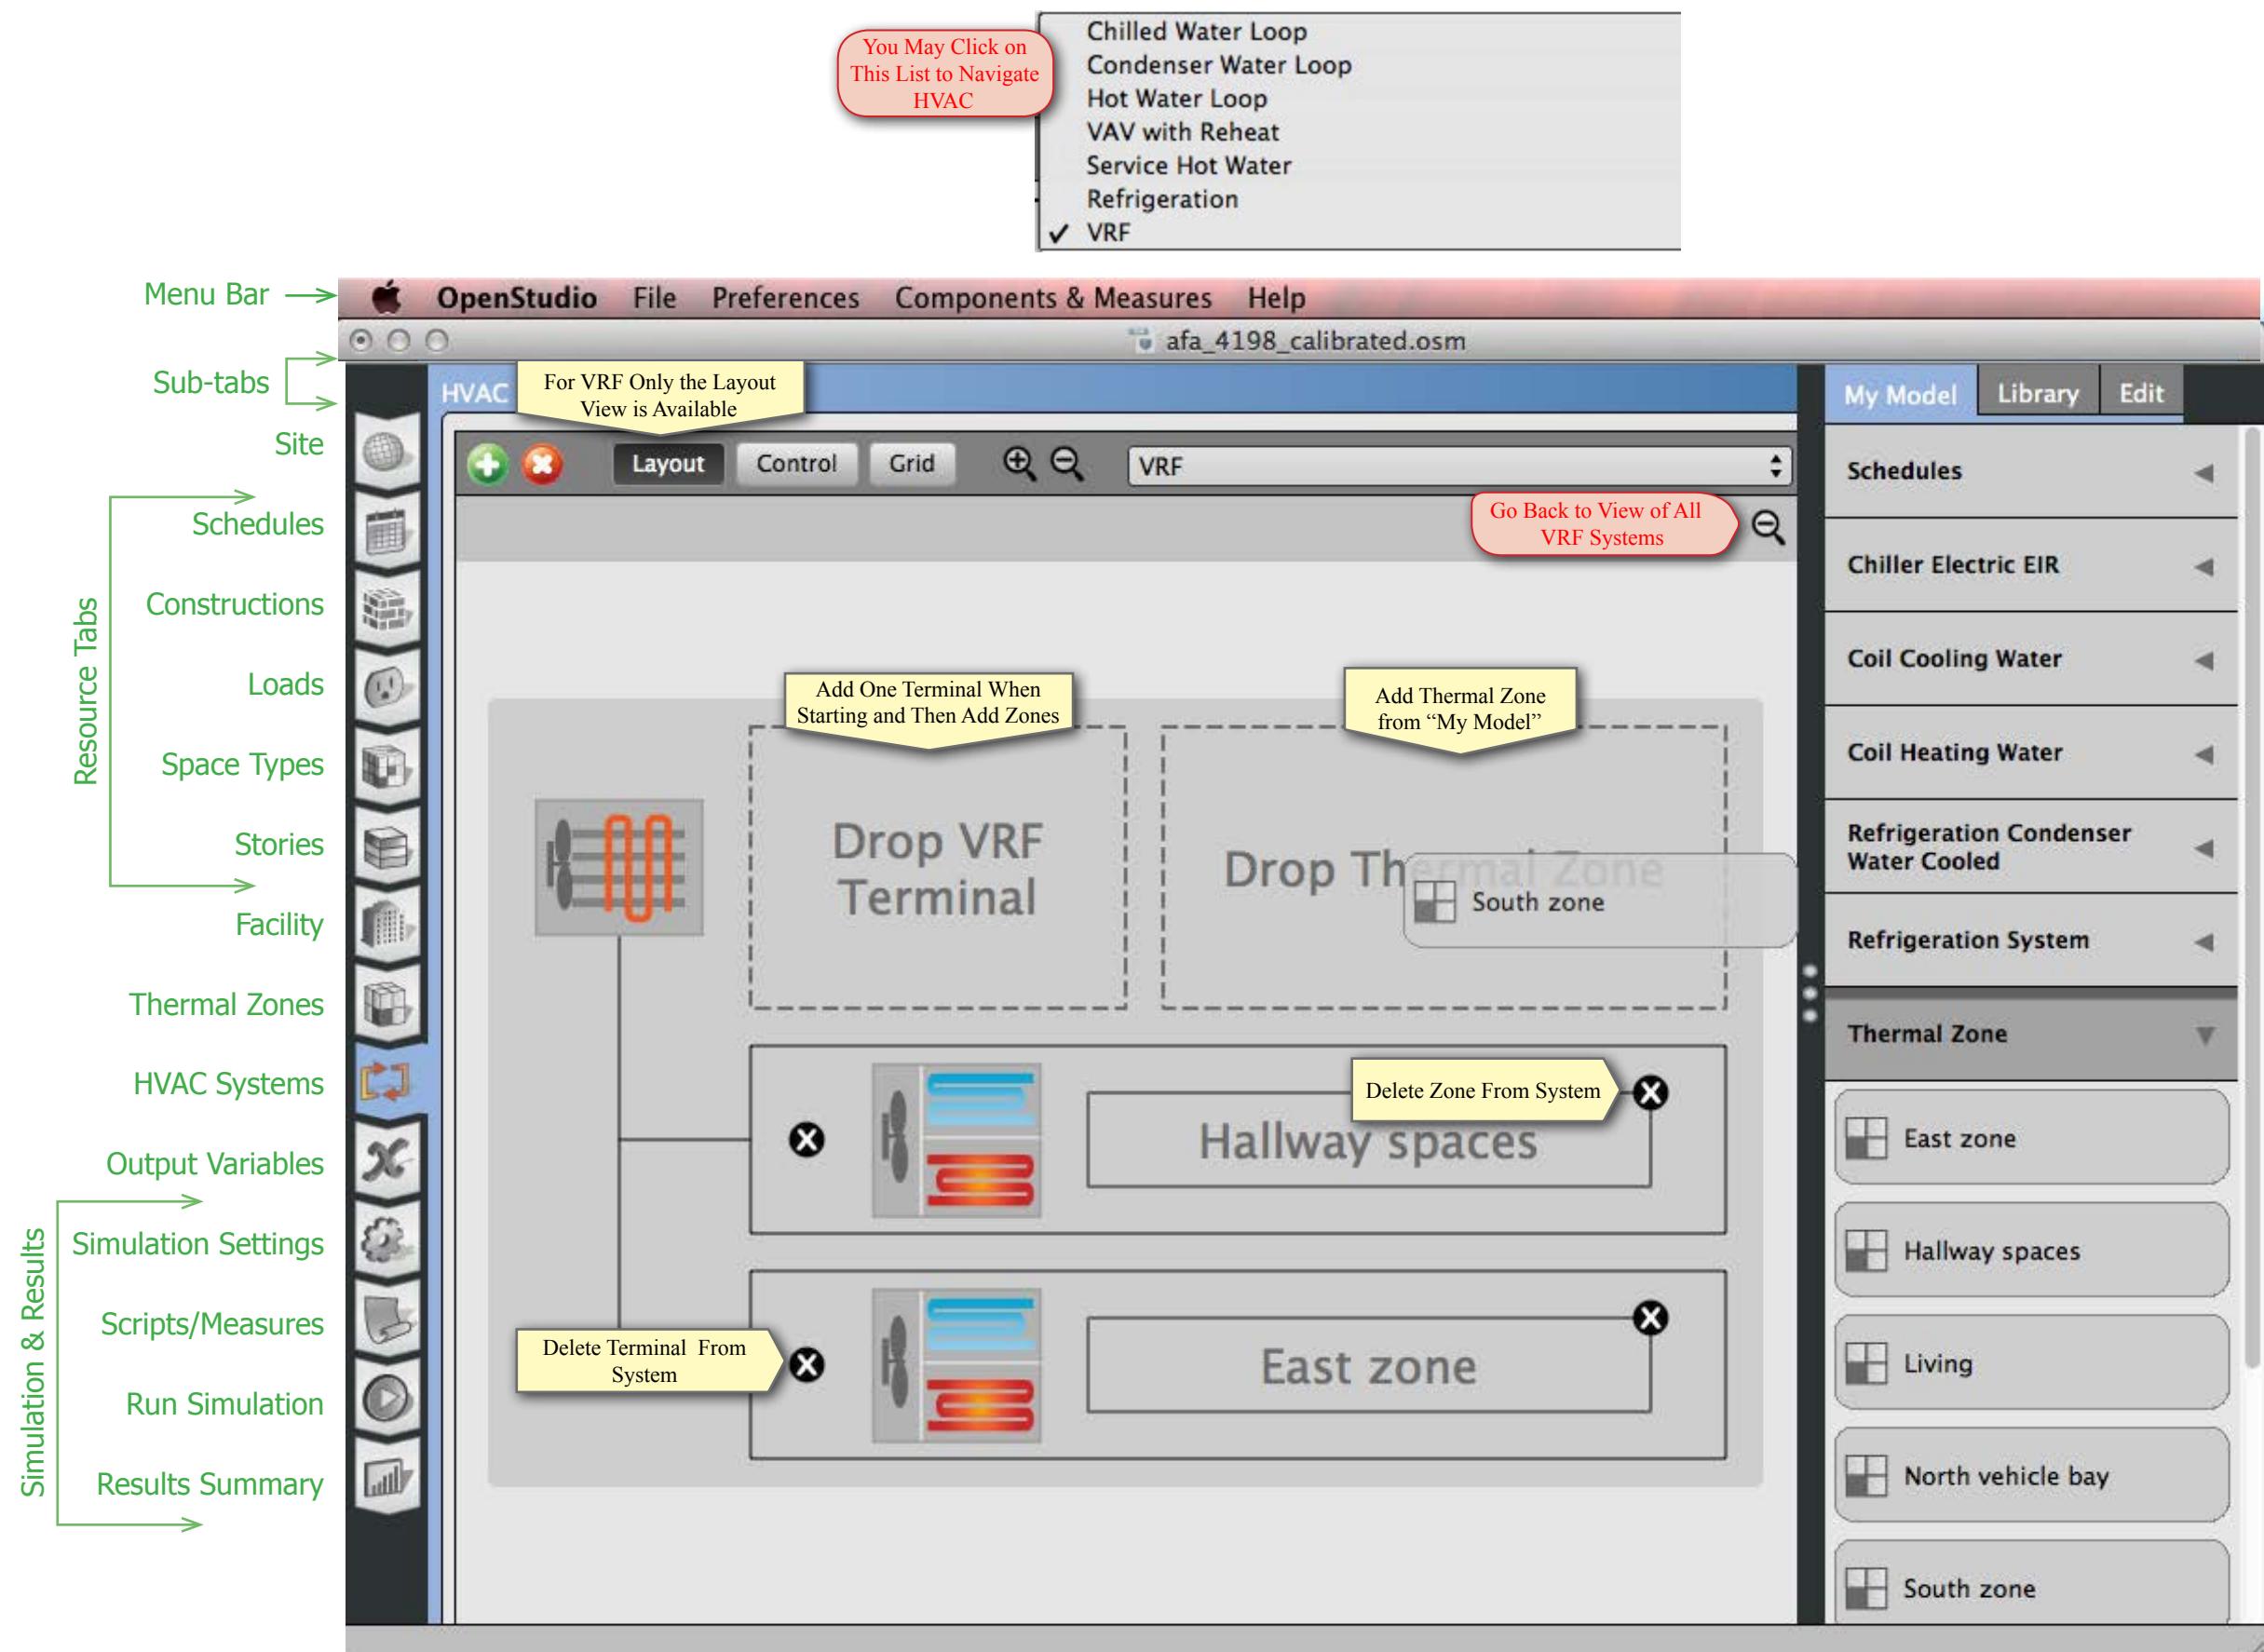


## Output Variables

### Notes

The Output Variables tab creates a list of variables based on the type of objects you have in your model. You can then turn them on or off and set the frequency of reporting.

These variables populate the SQL file generated by EnergyPlus with annual time series results data. You can view them in ResultsViewer. The Results Summary tab in this application is not affected by the variable requests.

It will not offer a comprehensive list of variables. If you want to add a variable that is not here or name a specific object to report, you can accomplish this by injecting raw IDF text in the Scripts tab.

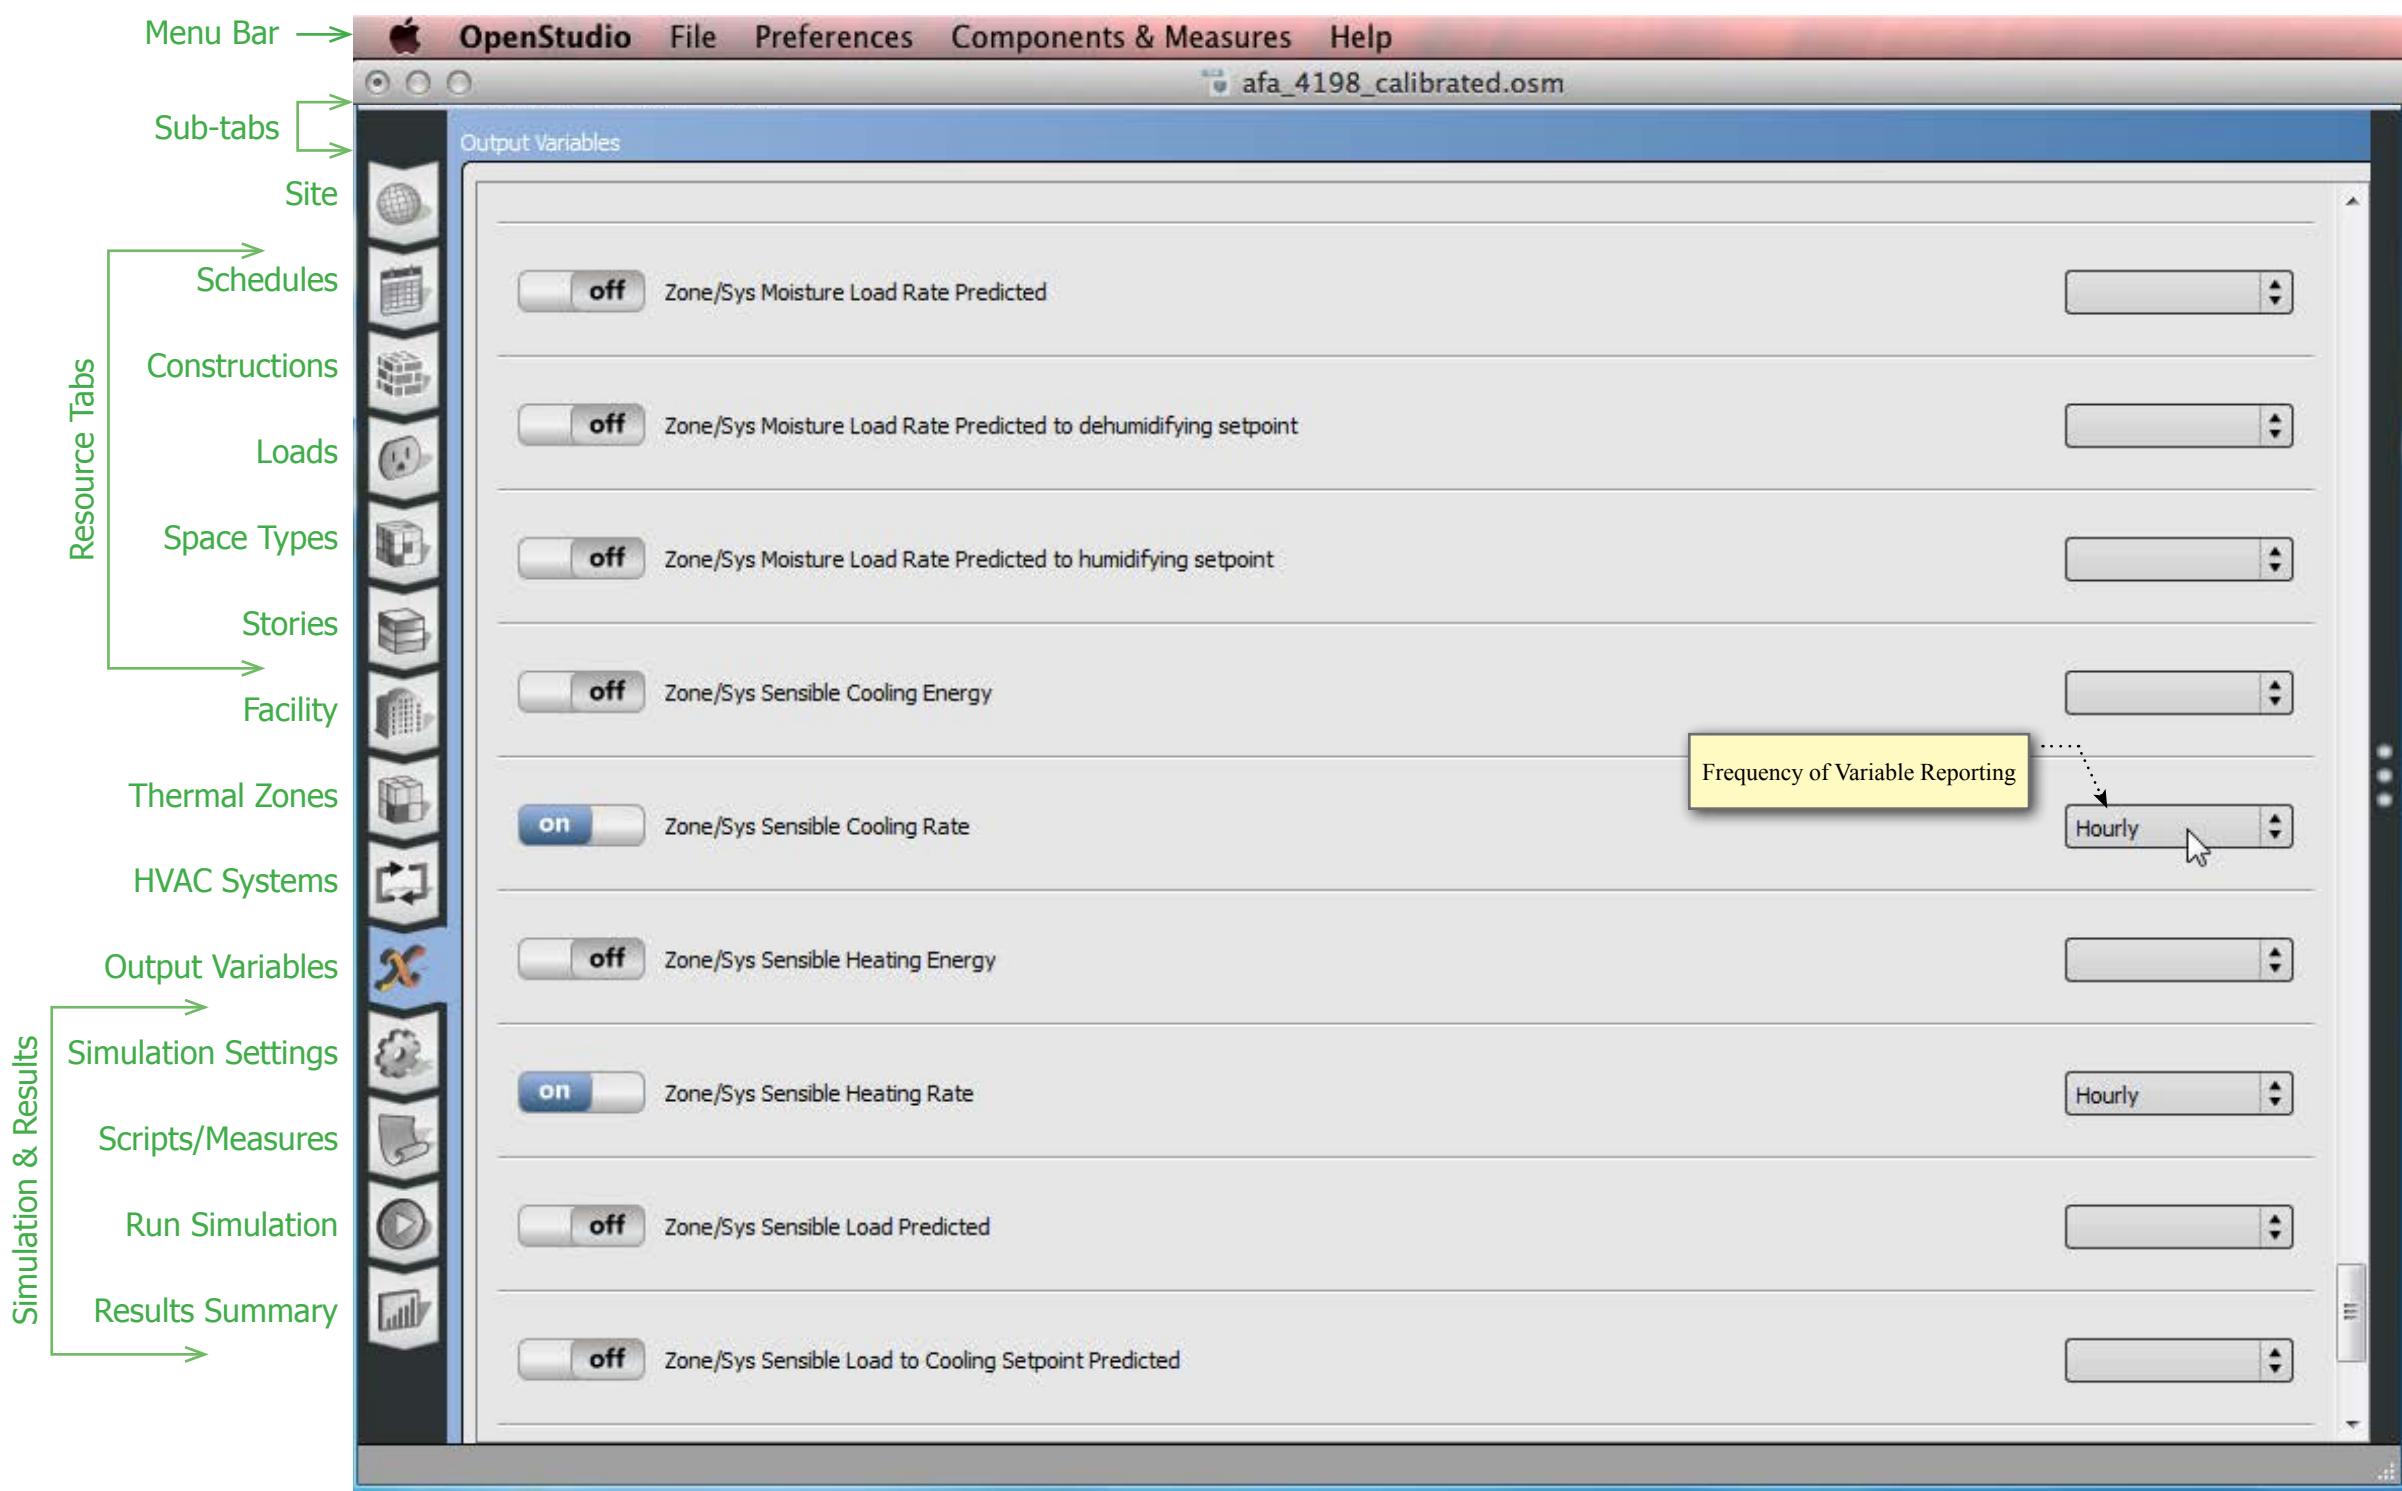

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)


[openstudio.net](http://openstudio.net)

## Simulation Settings

### Notes

The Simulation Settings tab lets you inspect and customize many of the simulation settings used by Energy-Plus. Soon Radiance configuration settings will also be added. Below is a list of settings included in OpenStudio 0.10.0.

- RunPeriod
- SimulationControl
- SizingParameters
- ProgramControl
- Timestep
- OutputControlReportingTolerances
- ConvergenceLimits
- ShadowCalculation
- SurfaceConvectionAlgorithmInside
- SurfaceConvectionAlgorithmOutside
- HeatBalanceAlgorithm
- ZoneAirHeatBalanceAlgorithm
- ZoneAirContaminantBalance
- ZoneCapacitanceMultipleResearchSpecial

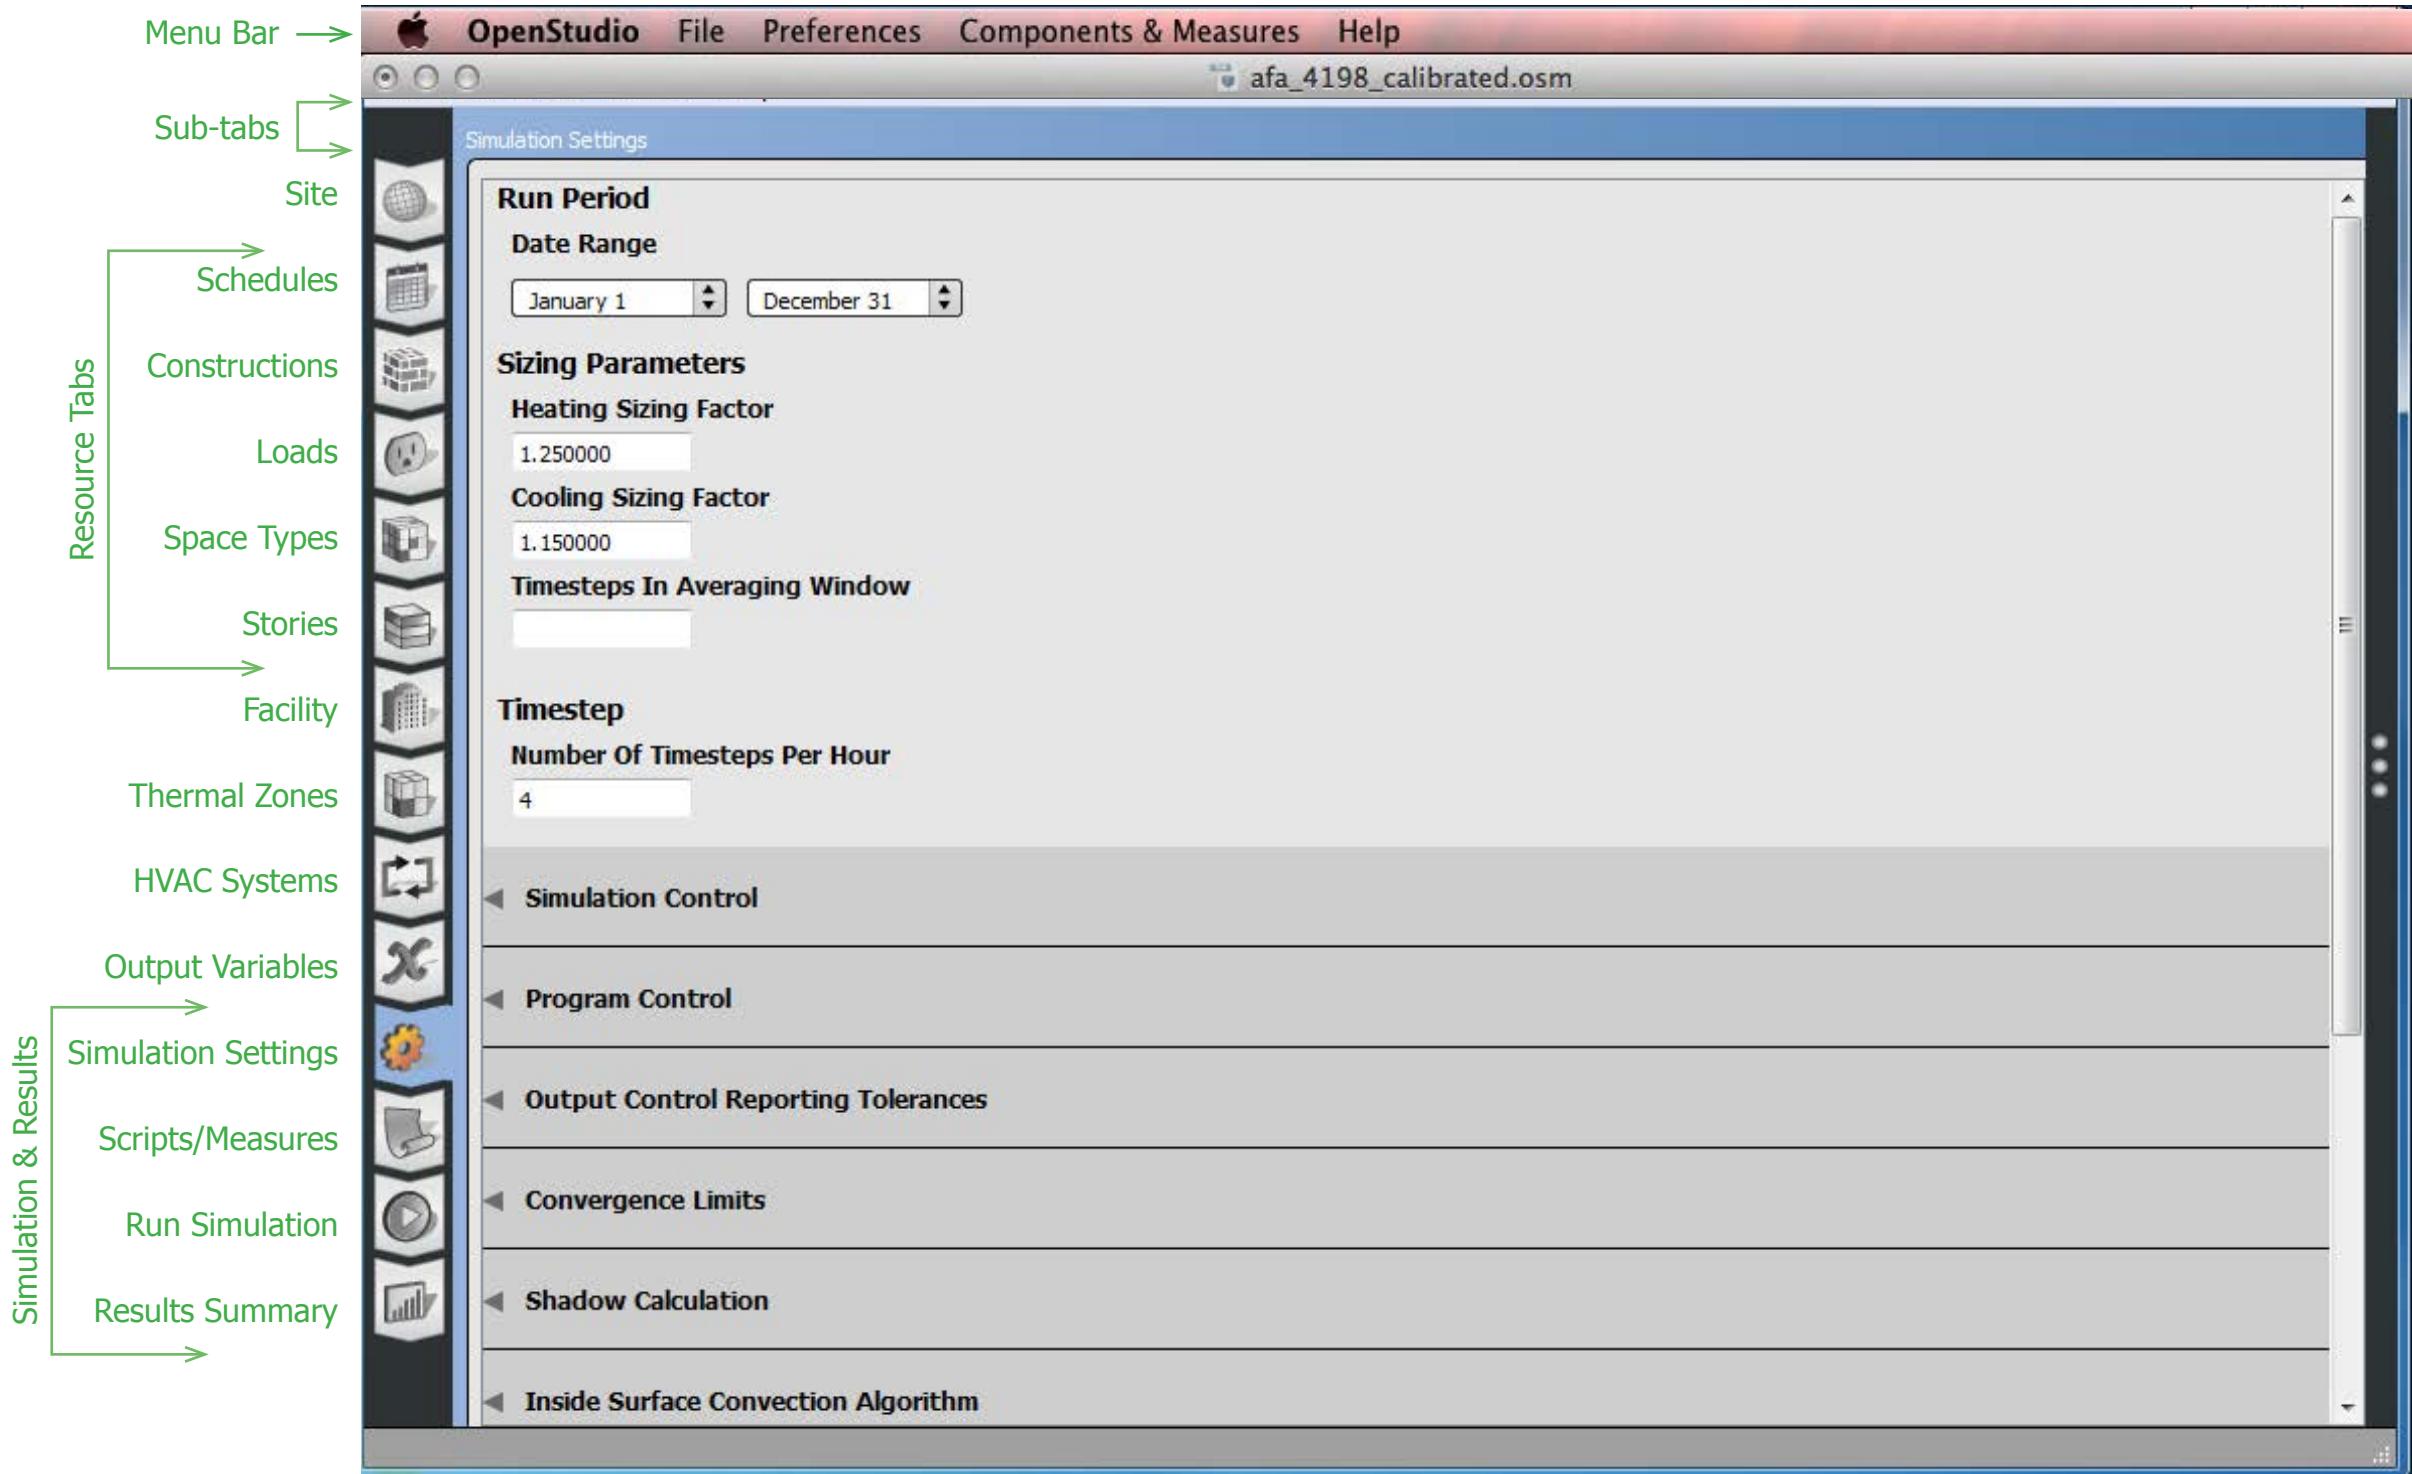

# OpenStudio 1.7.0 Basic Workflow Guide

[openstudio.net](http://openstudio.net)

## Measures or Scripts


### Notes

Download measures from The [Building Component Library \(BCL\)](#). Drag measures from the library to the central panel.

There are three types of measures:

- **OpenStudio Measures** are run on the OSM model before it is converted to an IDF.
- **EnergyPlus Measures** can be run on the IDF file before it is handed to EnergyPlus.
- **Reporting measures** produce reports to chart results, provide quality assurance, and quality control on models.

By selecting the measure and selecting the right "Edit" tab, inputs for the measure can be entered and adjusted.

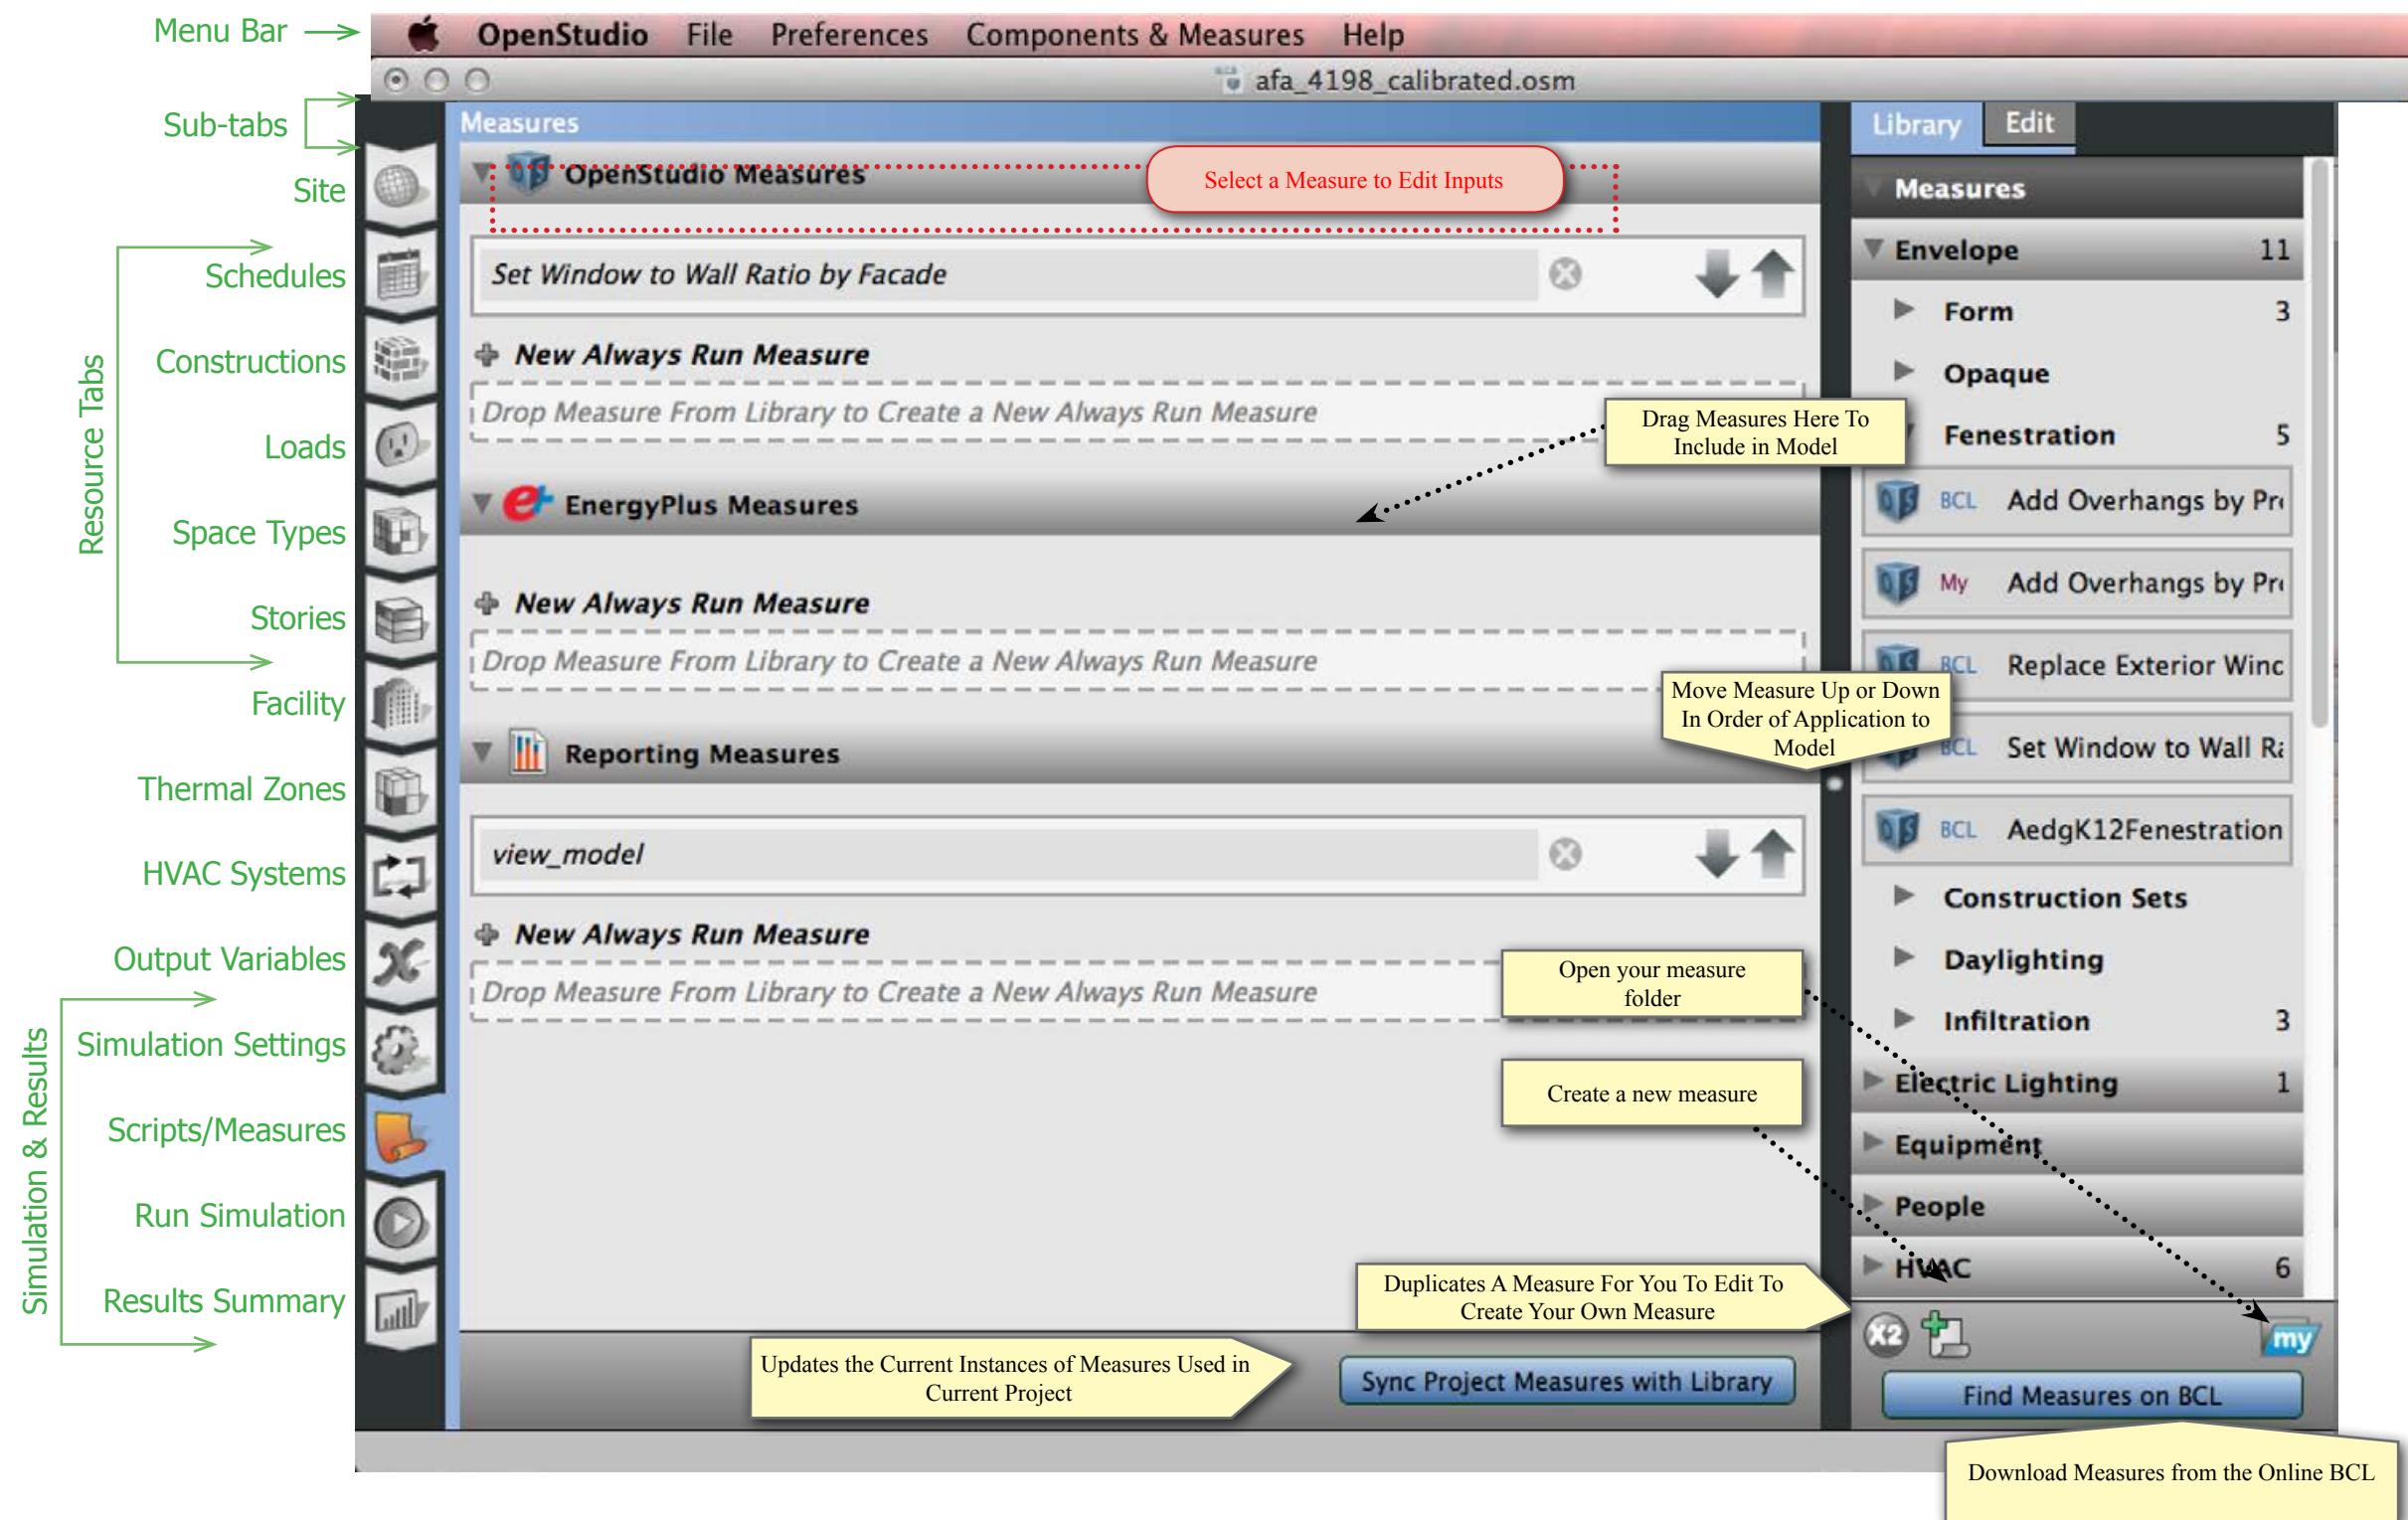

# OpenStudio 1.7.0 Basic Workflow Guide


[openstudio.net](http://openstudio.net)

## Add Measures or Scripts to Run With Simulation

### Notes

By selecting the measure and selecting the right "Edit" tab, inputs for the measure can be entered and adjusted.

Write your own measures by studying the guide on the OpenStudio site at: [http://nrel.github.io/OpenStudio-user-documentation/measures/measure\\_writing\\_guide/](http://nrel.github.io/OpenStudio-user-documentation/measures/measure_writing_guide/).

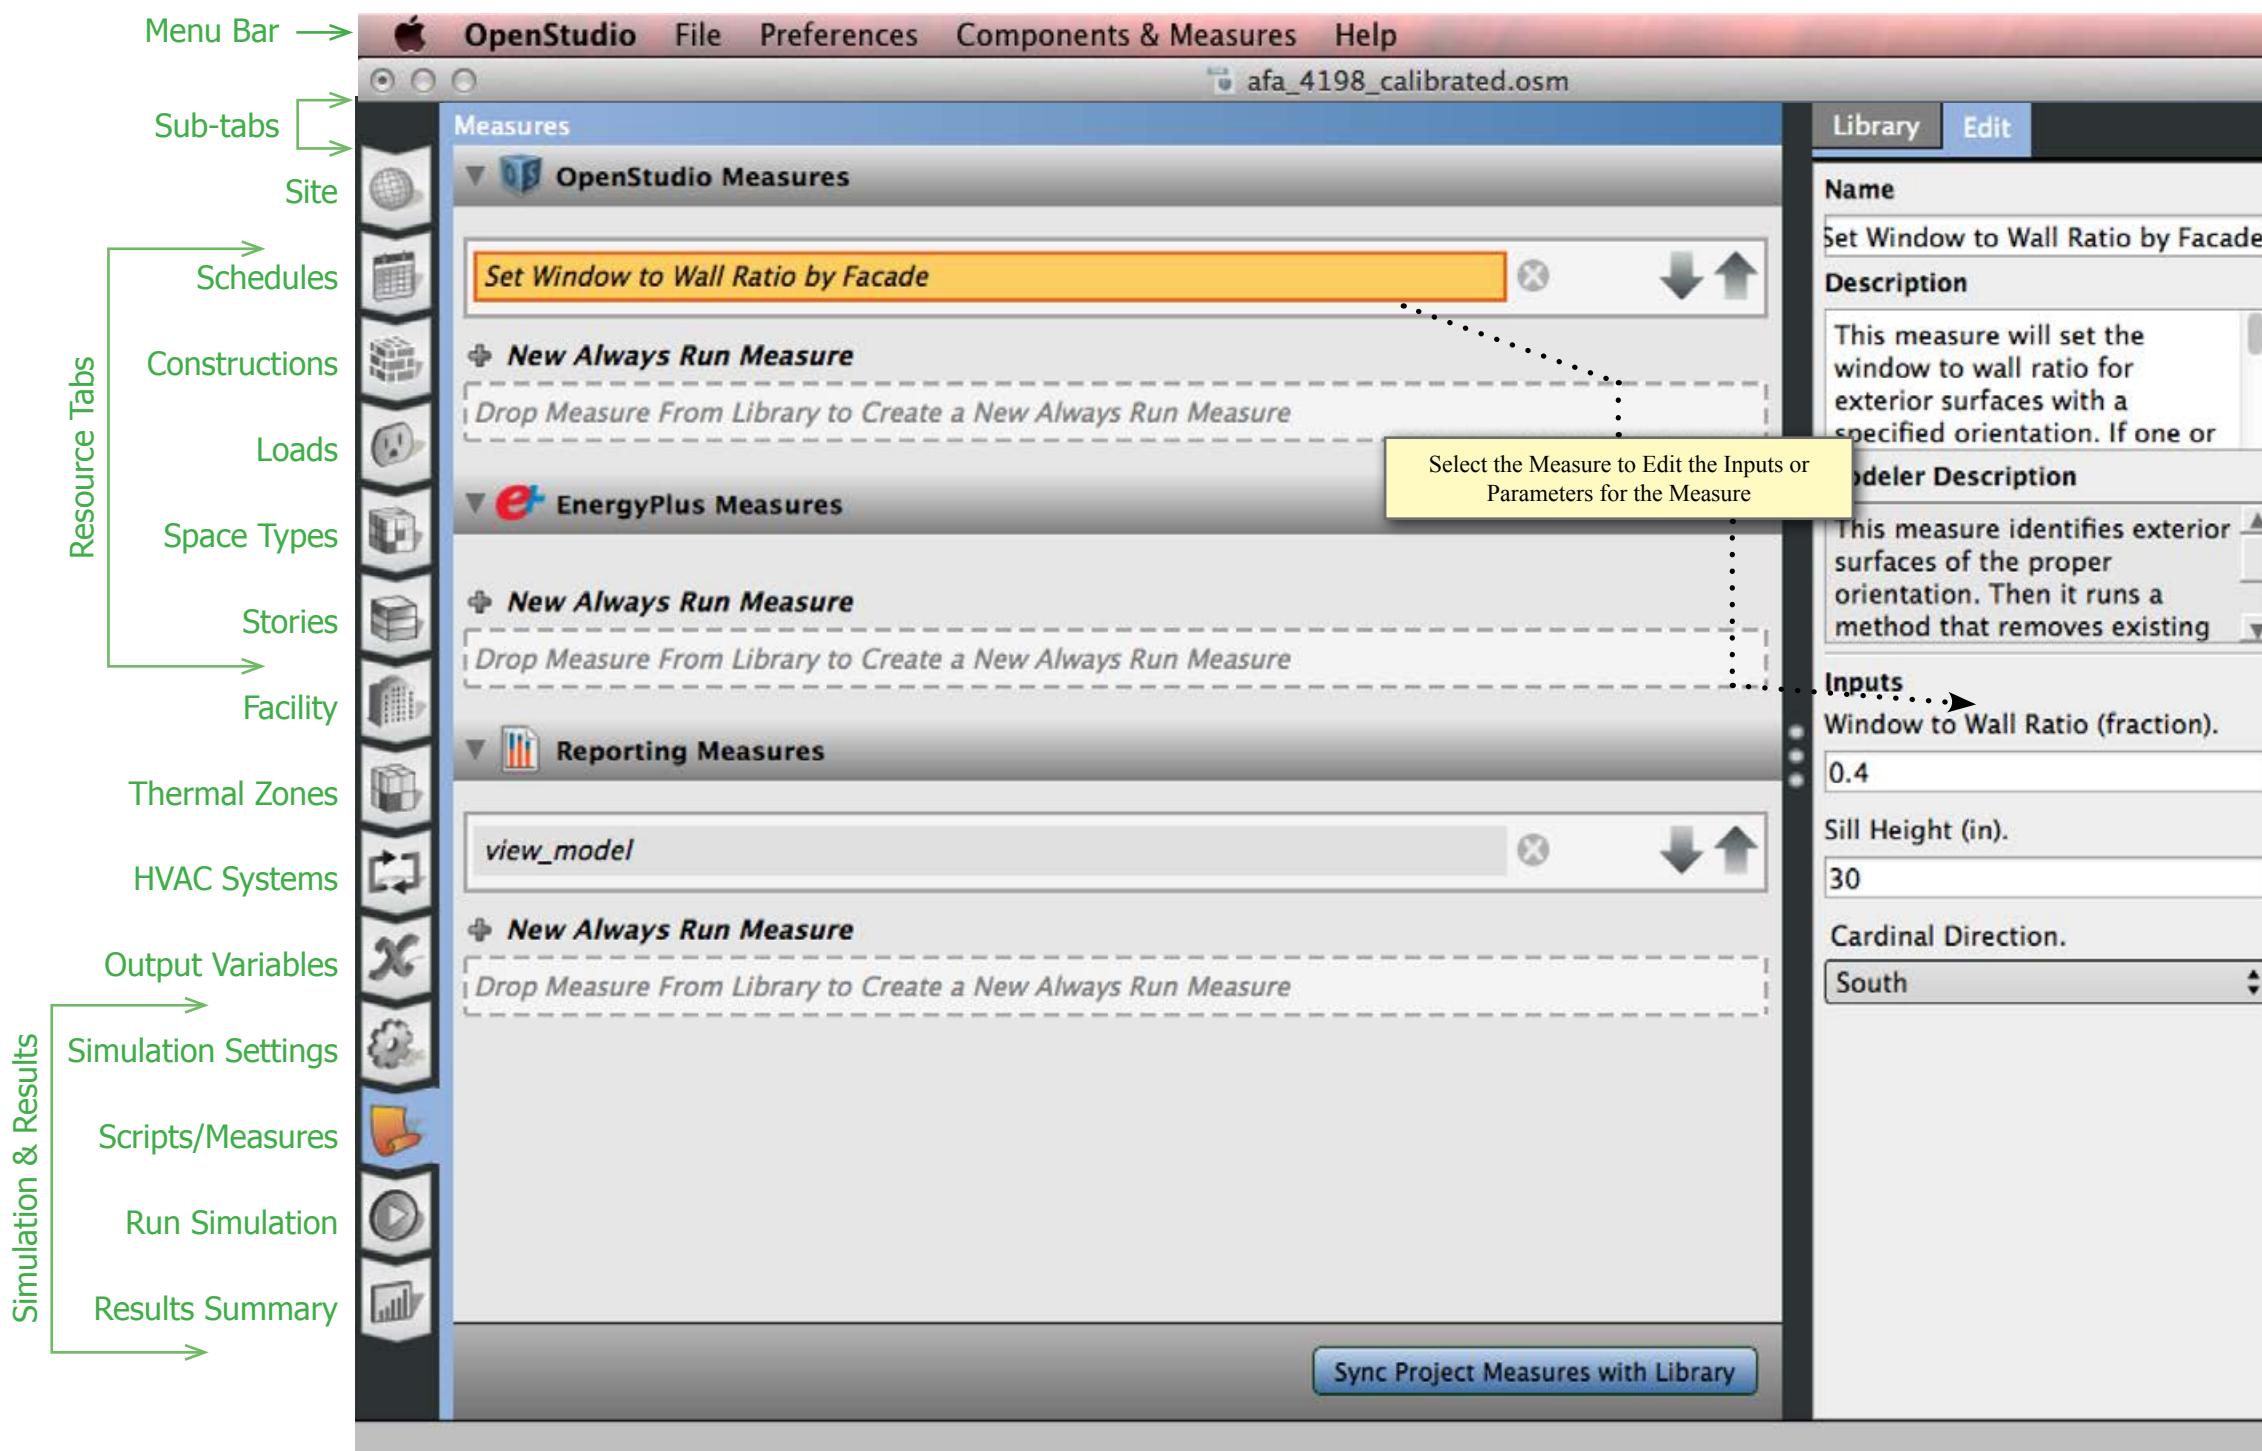

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)

## Run Simulation — Output

### Notes


The Run Simulation tab is used to run a simulation. Clicking the green arrow starts the simulation. When the progress bar reaches 100% it is done.

New to OpenStudio 0.9.0 is a check box to use Radiance for daylighting calculations. Check out the Radiance tutorial demonstrating the workflow under the Tutorials section of the [Openstudio.net](http://openstudio.net) user documentation.

The output window shows standard output that you can look at to follow the simulation's progress.

If you want to run multiple jobs at once, there is a button to launch the standalone RunManager application.

Click the Tree sub-tab in the screenshot to the right to see the RunManager job workflow and to see how to access results files.

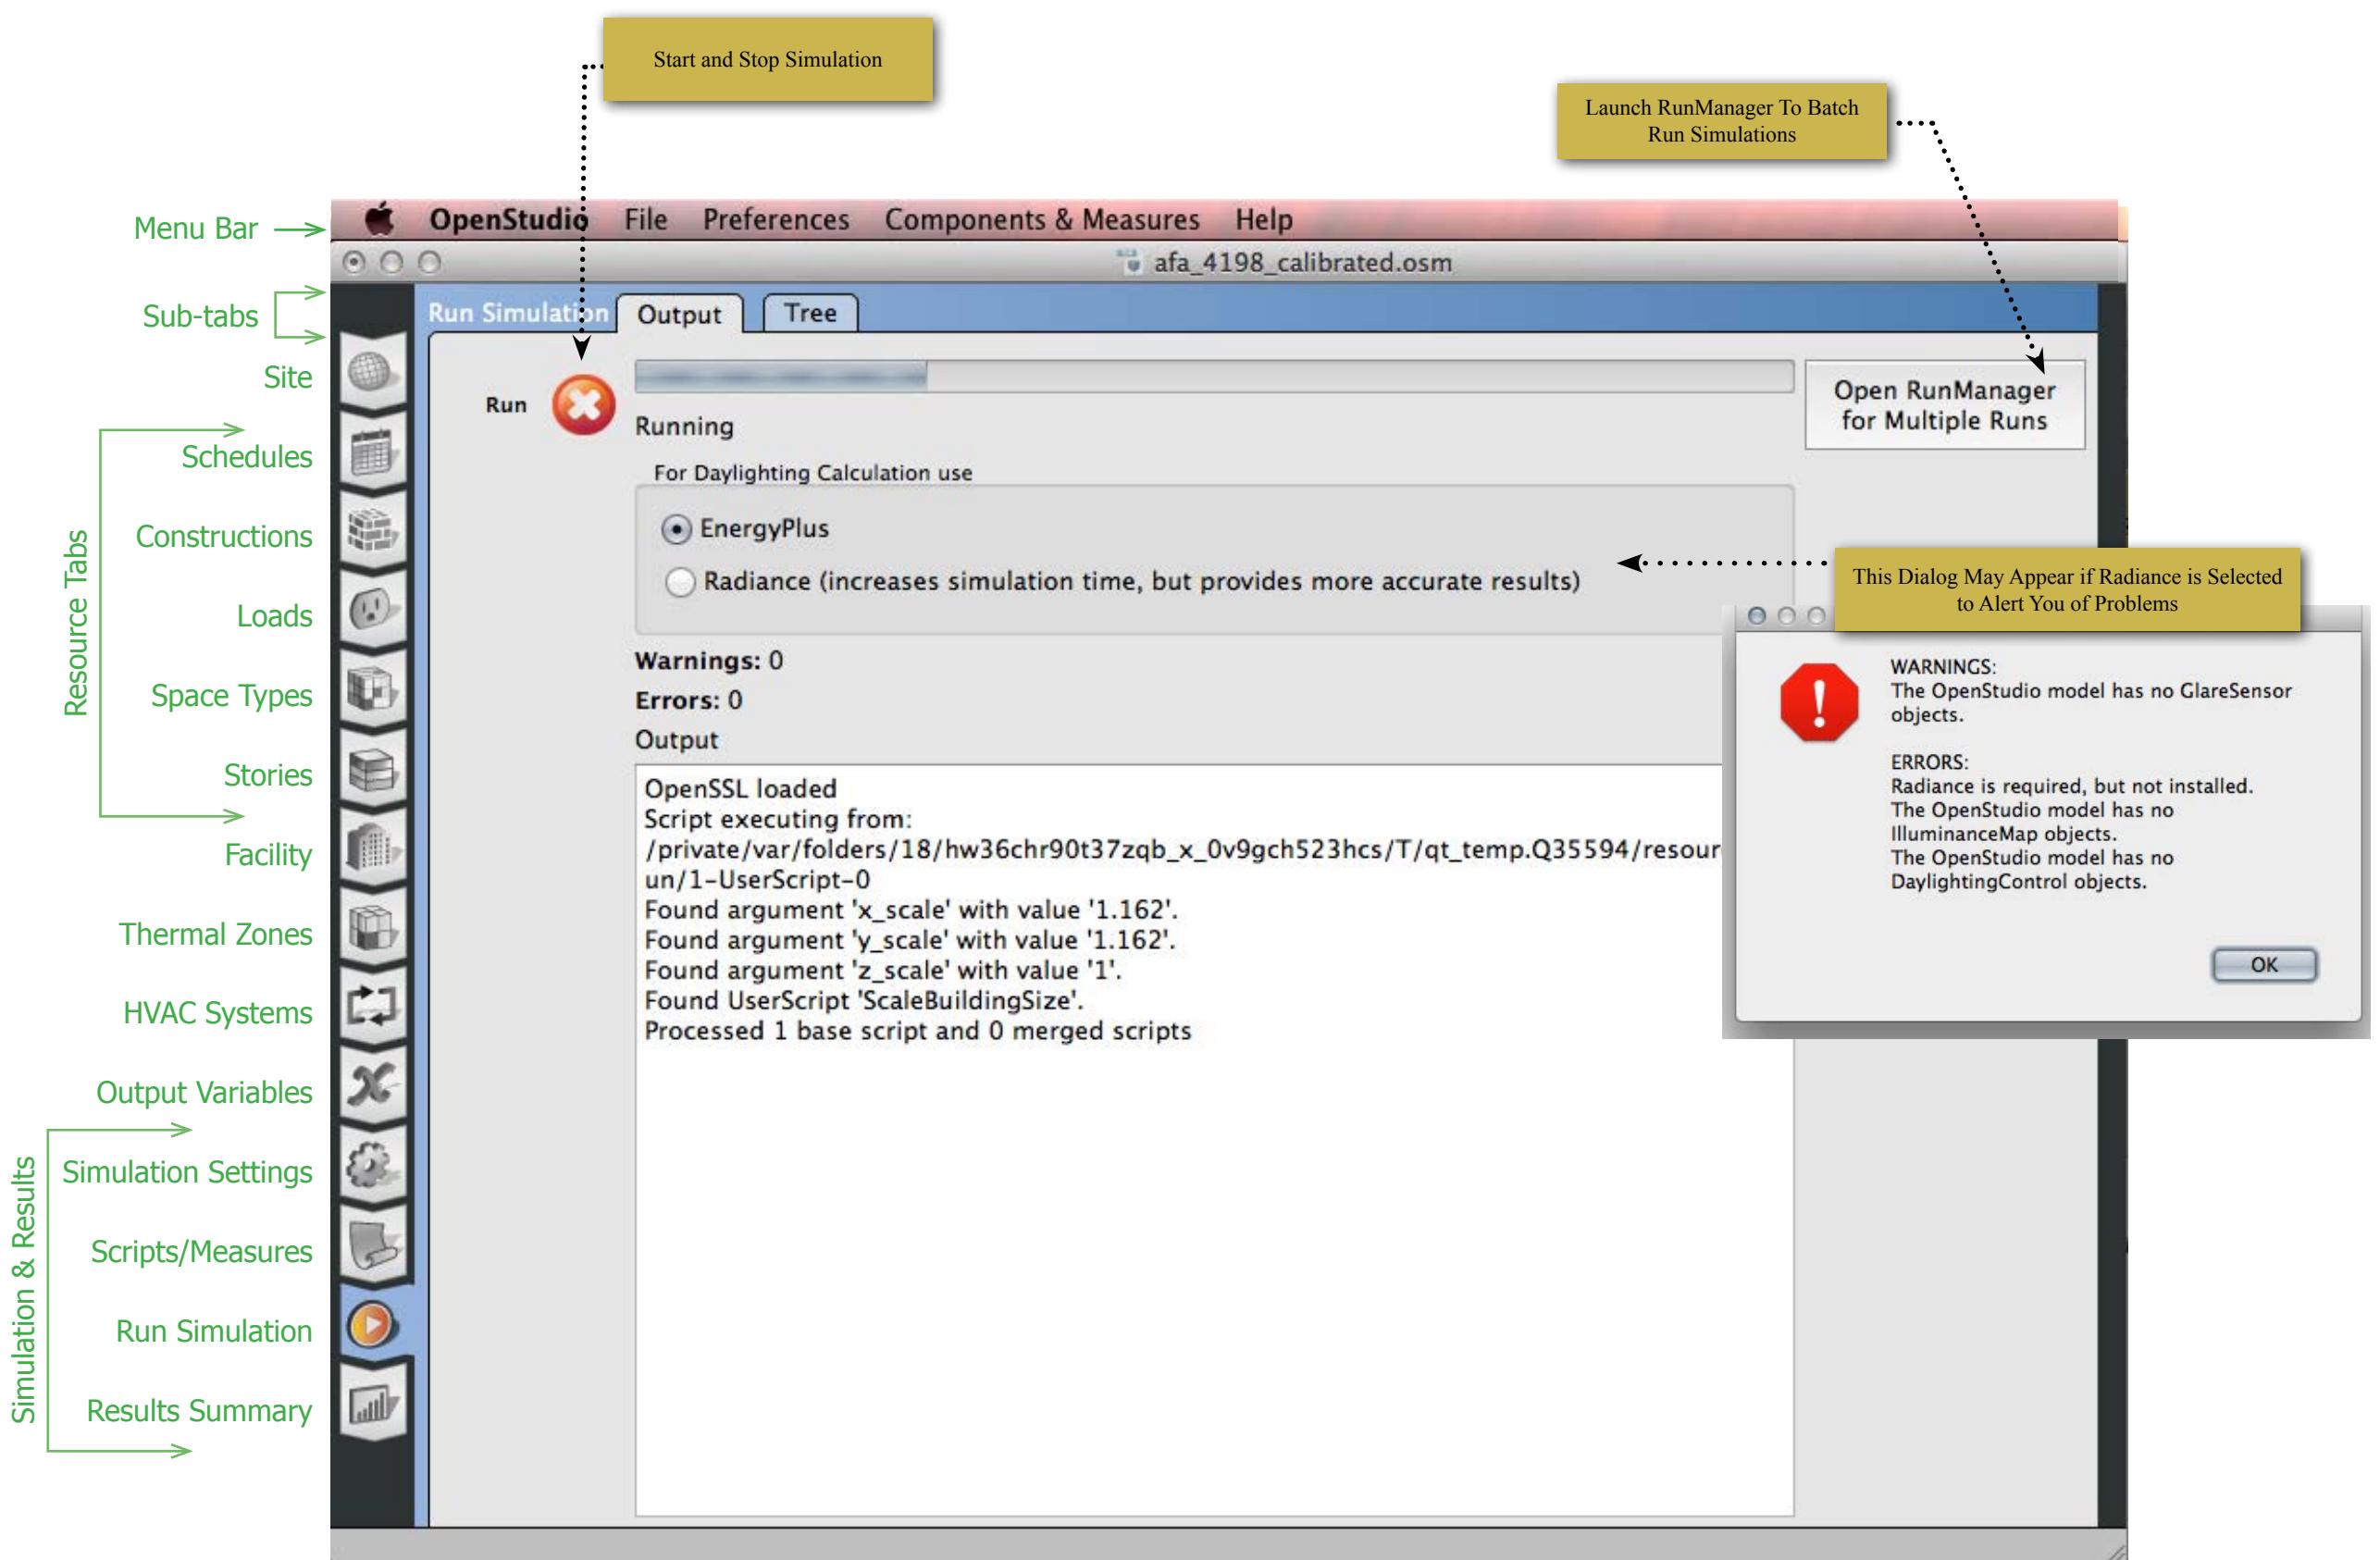

# OpenStudio 1.7.0 Basic Workflow Guide (June 2015)

[openstudio.net](http://openstudio.net)


## Run Simulation — Tree

### Notes

The top right table in the screenshot shows the jobs that ran as part of the simulation run.

If you have any measure scripts setup in the Scripts/Measures tab, they will show on this tree. At the end are a few EnergyPlus jobs, the last of which generated the output files.

You can right click on the EnergyPlus job to open the directory containing the output files.

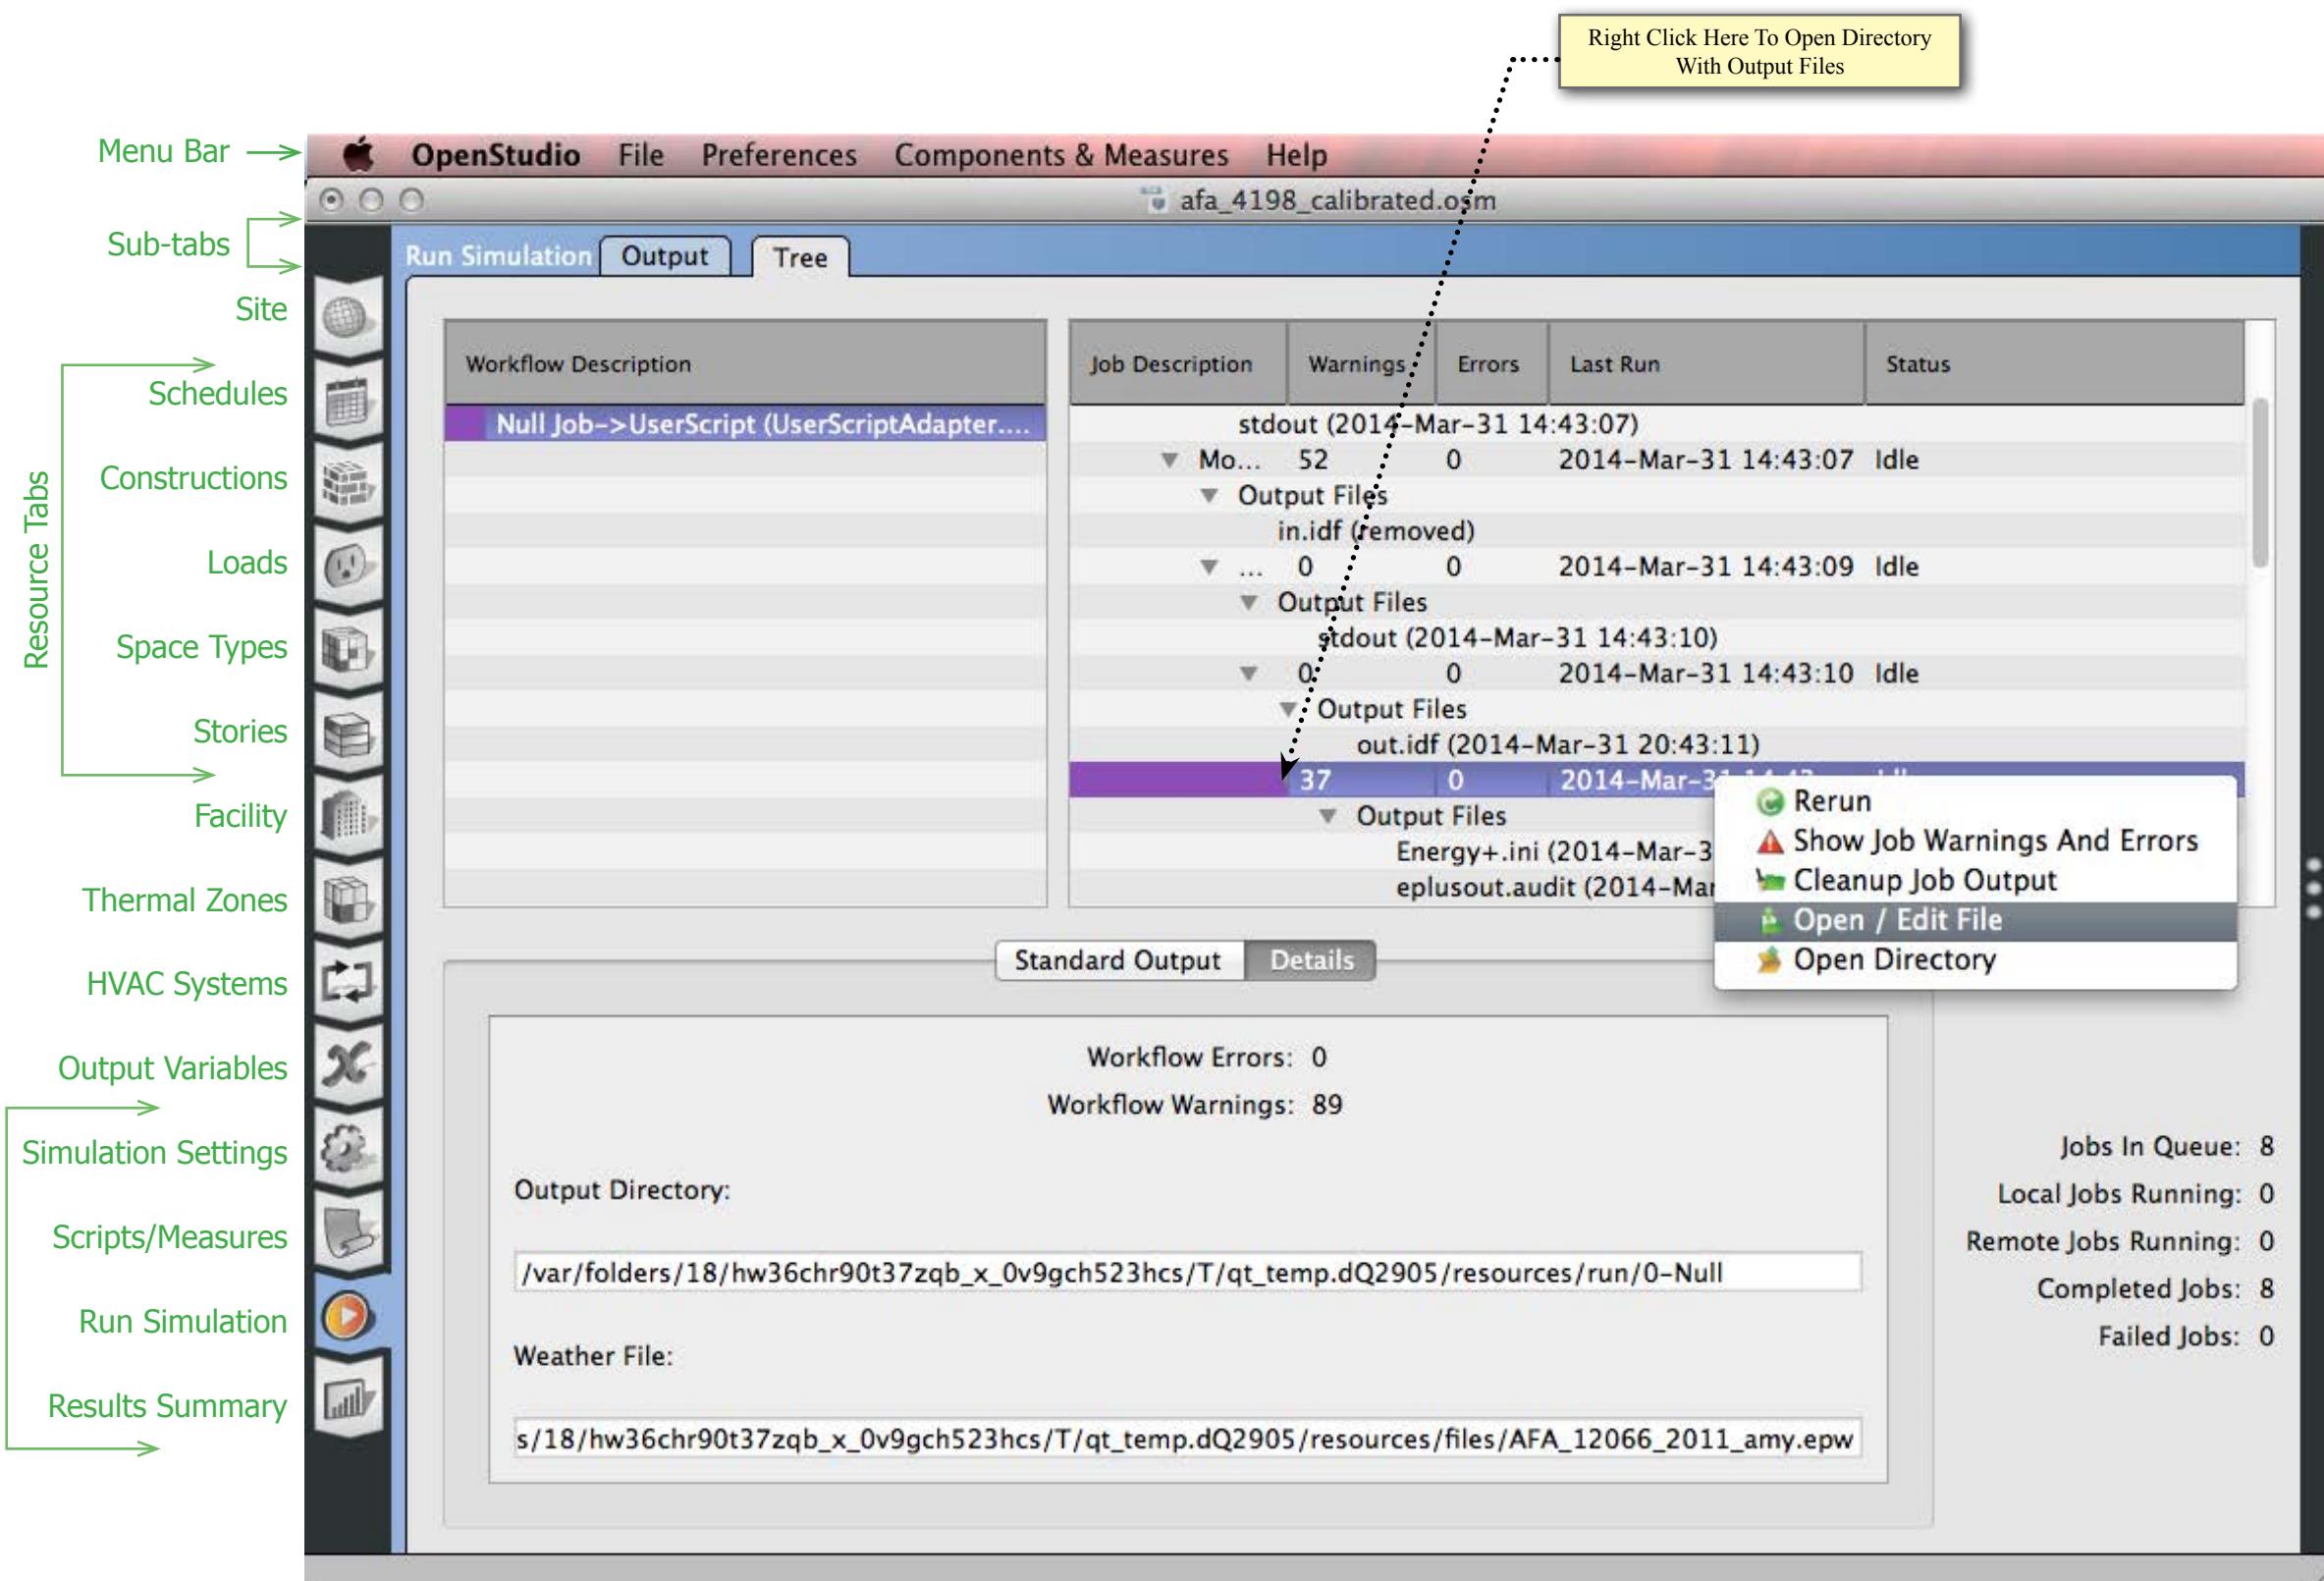

# OpenStudio 1.7.0 Basic Workflow Guide

openstudio.net

## Results Summary

### Notes

The Results Summary tab is populated with data after you run a simulation. The standard reports available are:


- Results | OpenStudio
- Calibration | OpenStudio
- EnergyPlus Results

You can create custom reporting measures. Check out the measure writing guide at [http://nrel.github.io/OpenStudio-user-documentation/measures/measure\\_writing\\_guide/](http://nrel.github.io/OpenStudio-user-documentation/measures/measure_writing_guide/).

The “Results | OpenStudio” displays monthly and annual end use summary data for electricity and natural gas. It also shows in table form district heating and cooling, which you would use if you ran your model with ideal air loads.

The button at the top right corner of the interface will load the SQL file in the OpenStudio ResultsViewer application. ResultsViewer allows you to create time series line and flood plots for variables that you requested in the Output Variables tab.

When you reopen a previously run simulation, it will populate this tab with previous results.

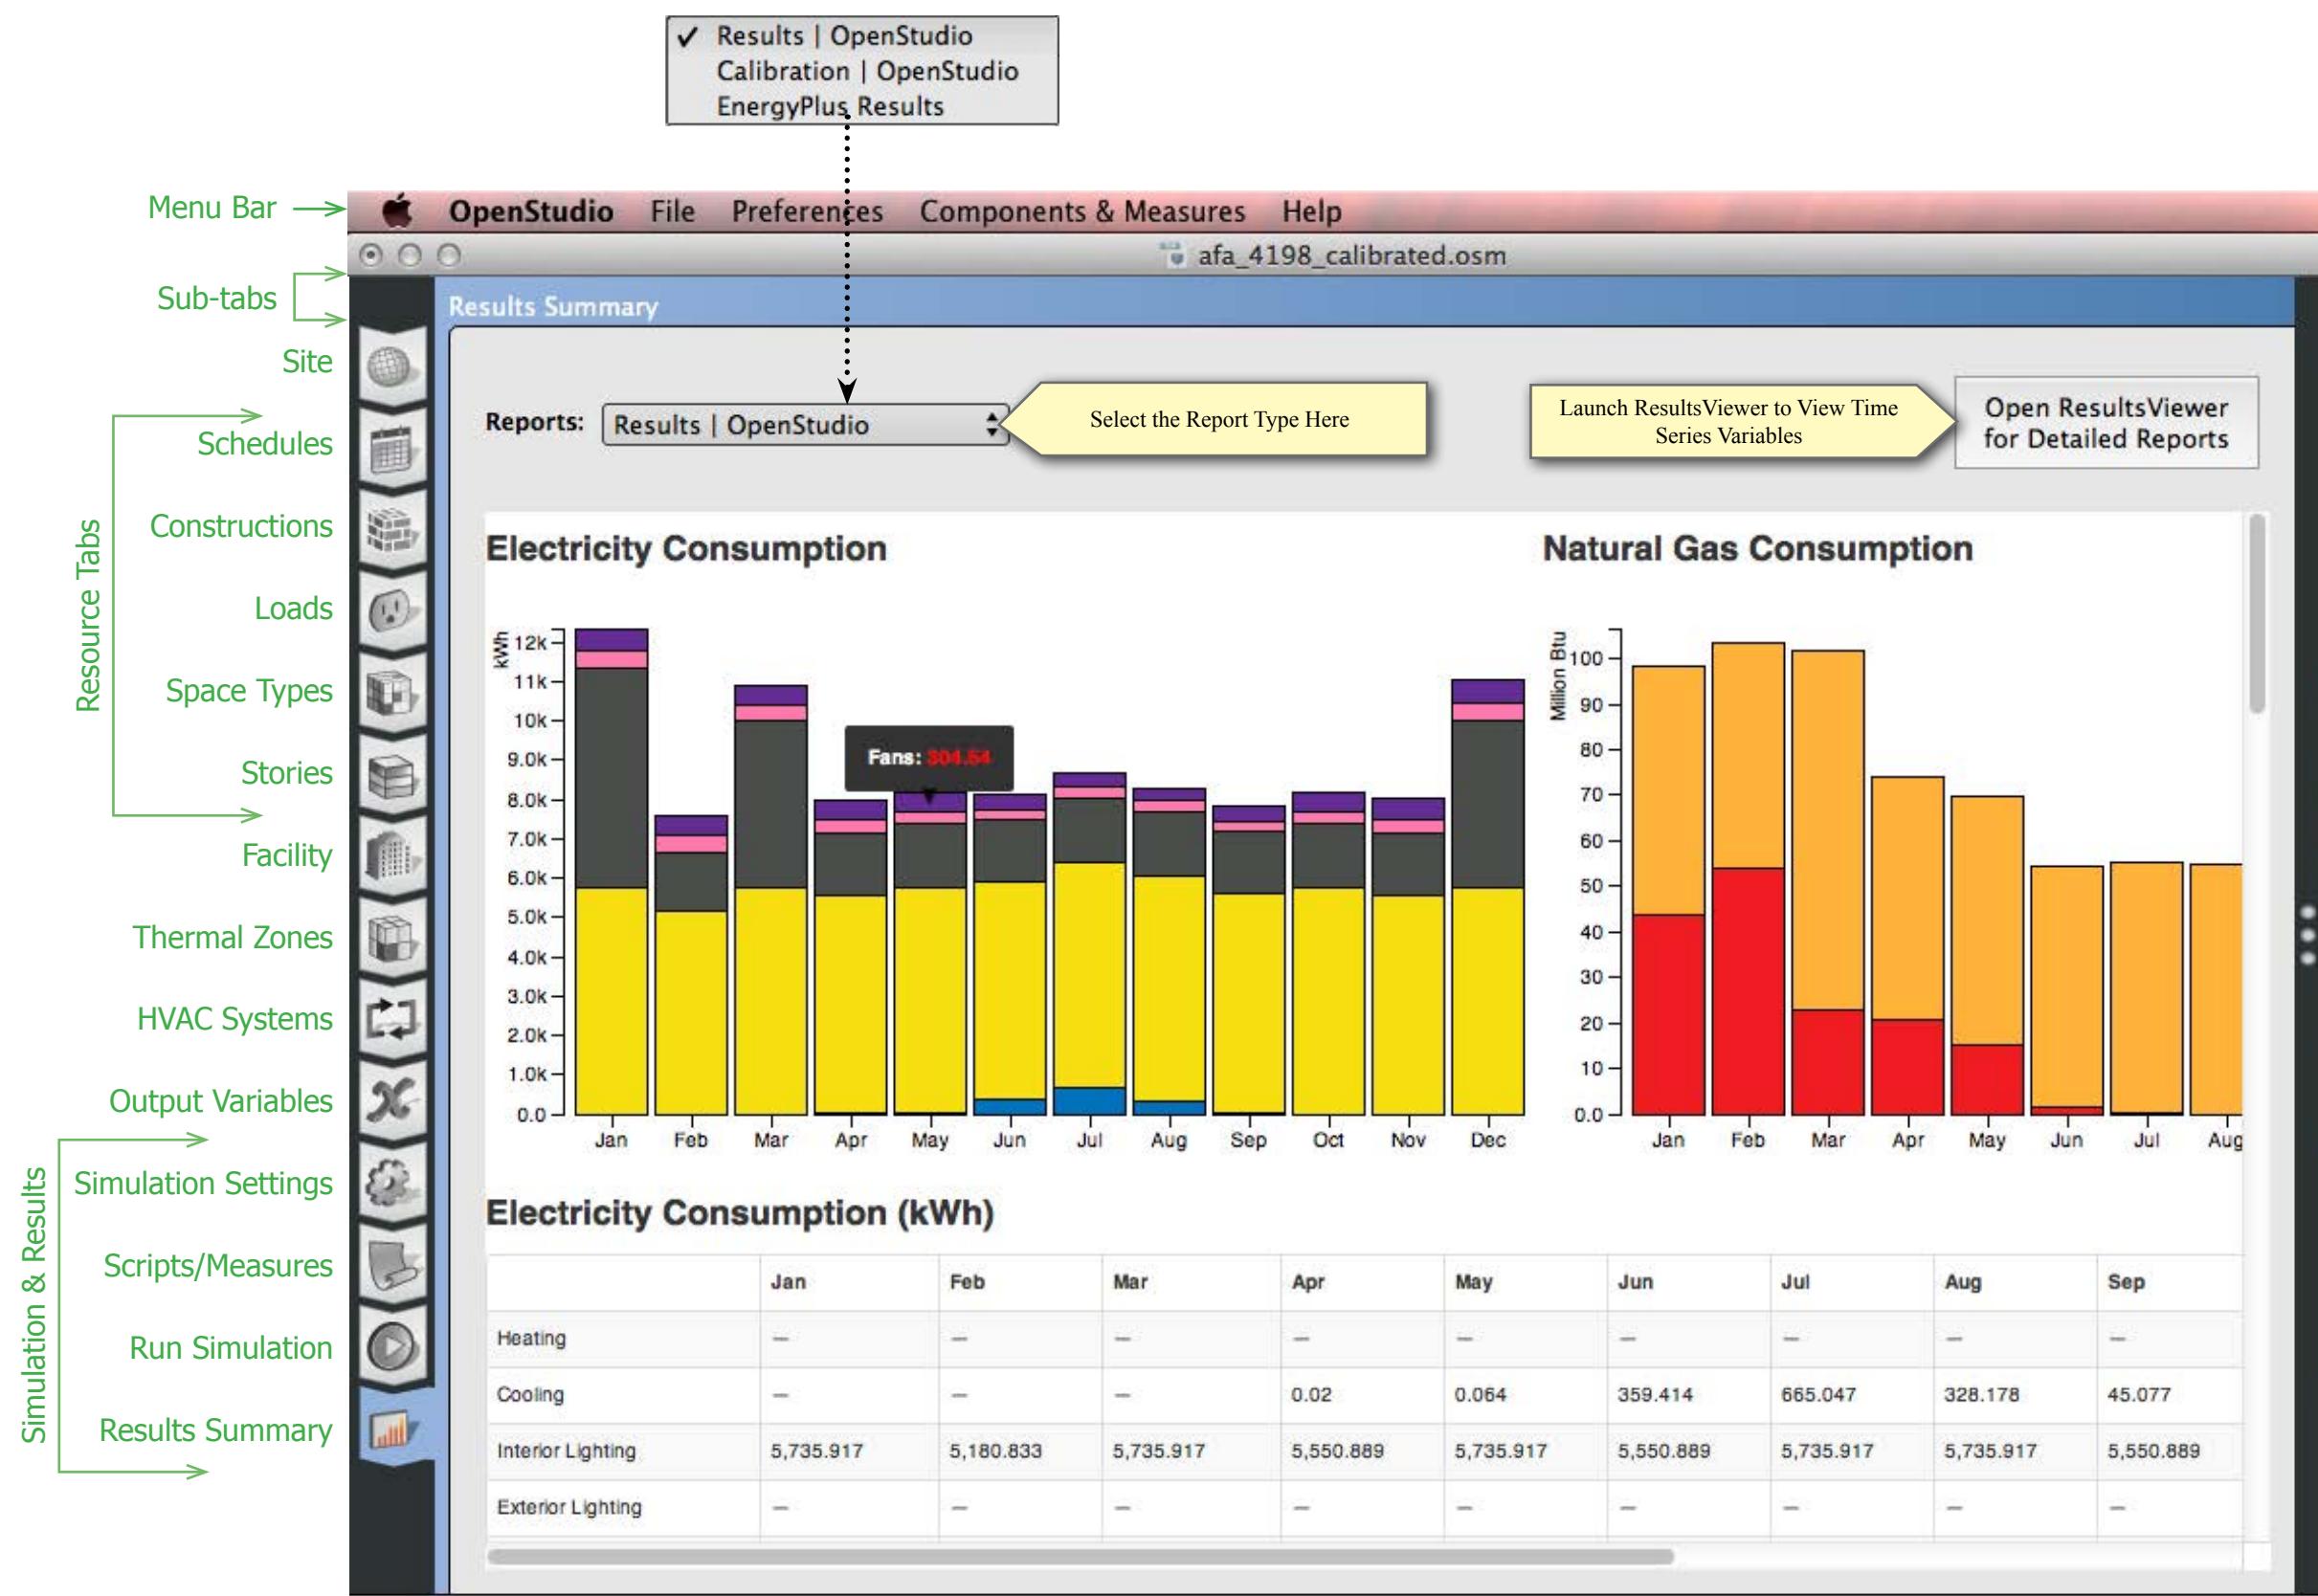

# OpenStudio 1.7.0 Basic Workflow Guide

(June 2015)

[openstudio.net](http://openstudio.net)


## Results Summary: Calibration

### Notes

To calibrate to the ASHRAE 14-2002 or FEMP standard the file must contain all utility data for one year and real weather data. Check the guidelines for additional requirements.

By selecting the "Calibration | OpenStudio" report you can compare the model and actual utility bills.

The report provides ASHRAE 14-2002 calibration standard and the FEMP calibration standard options.

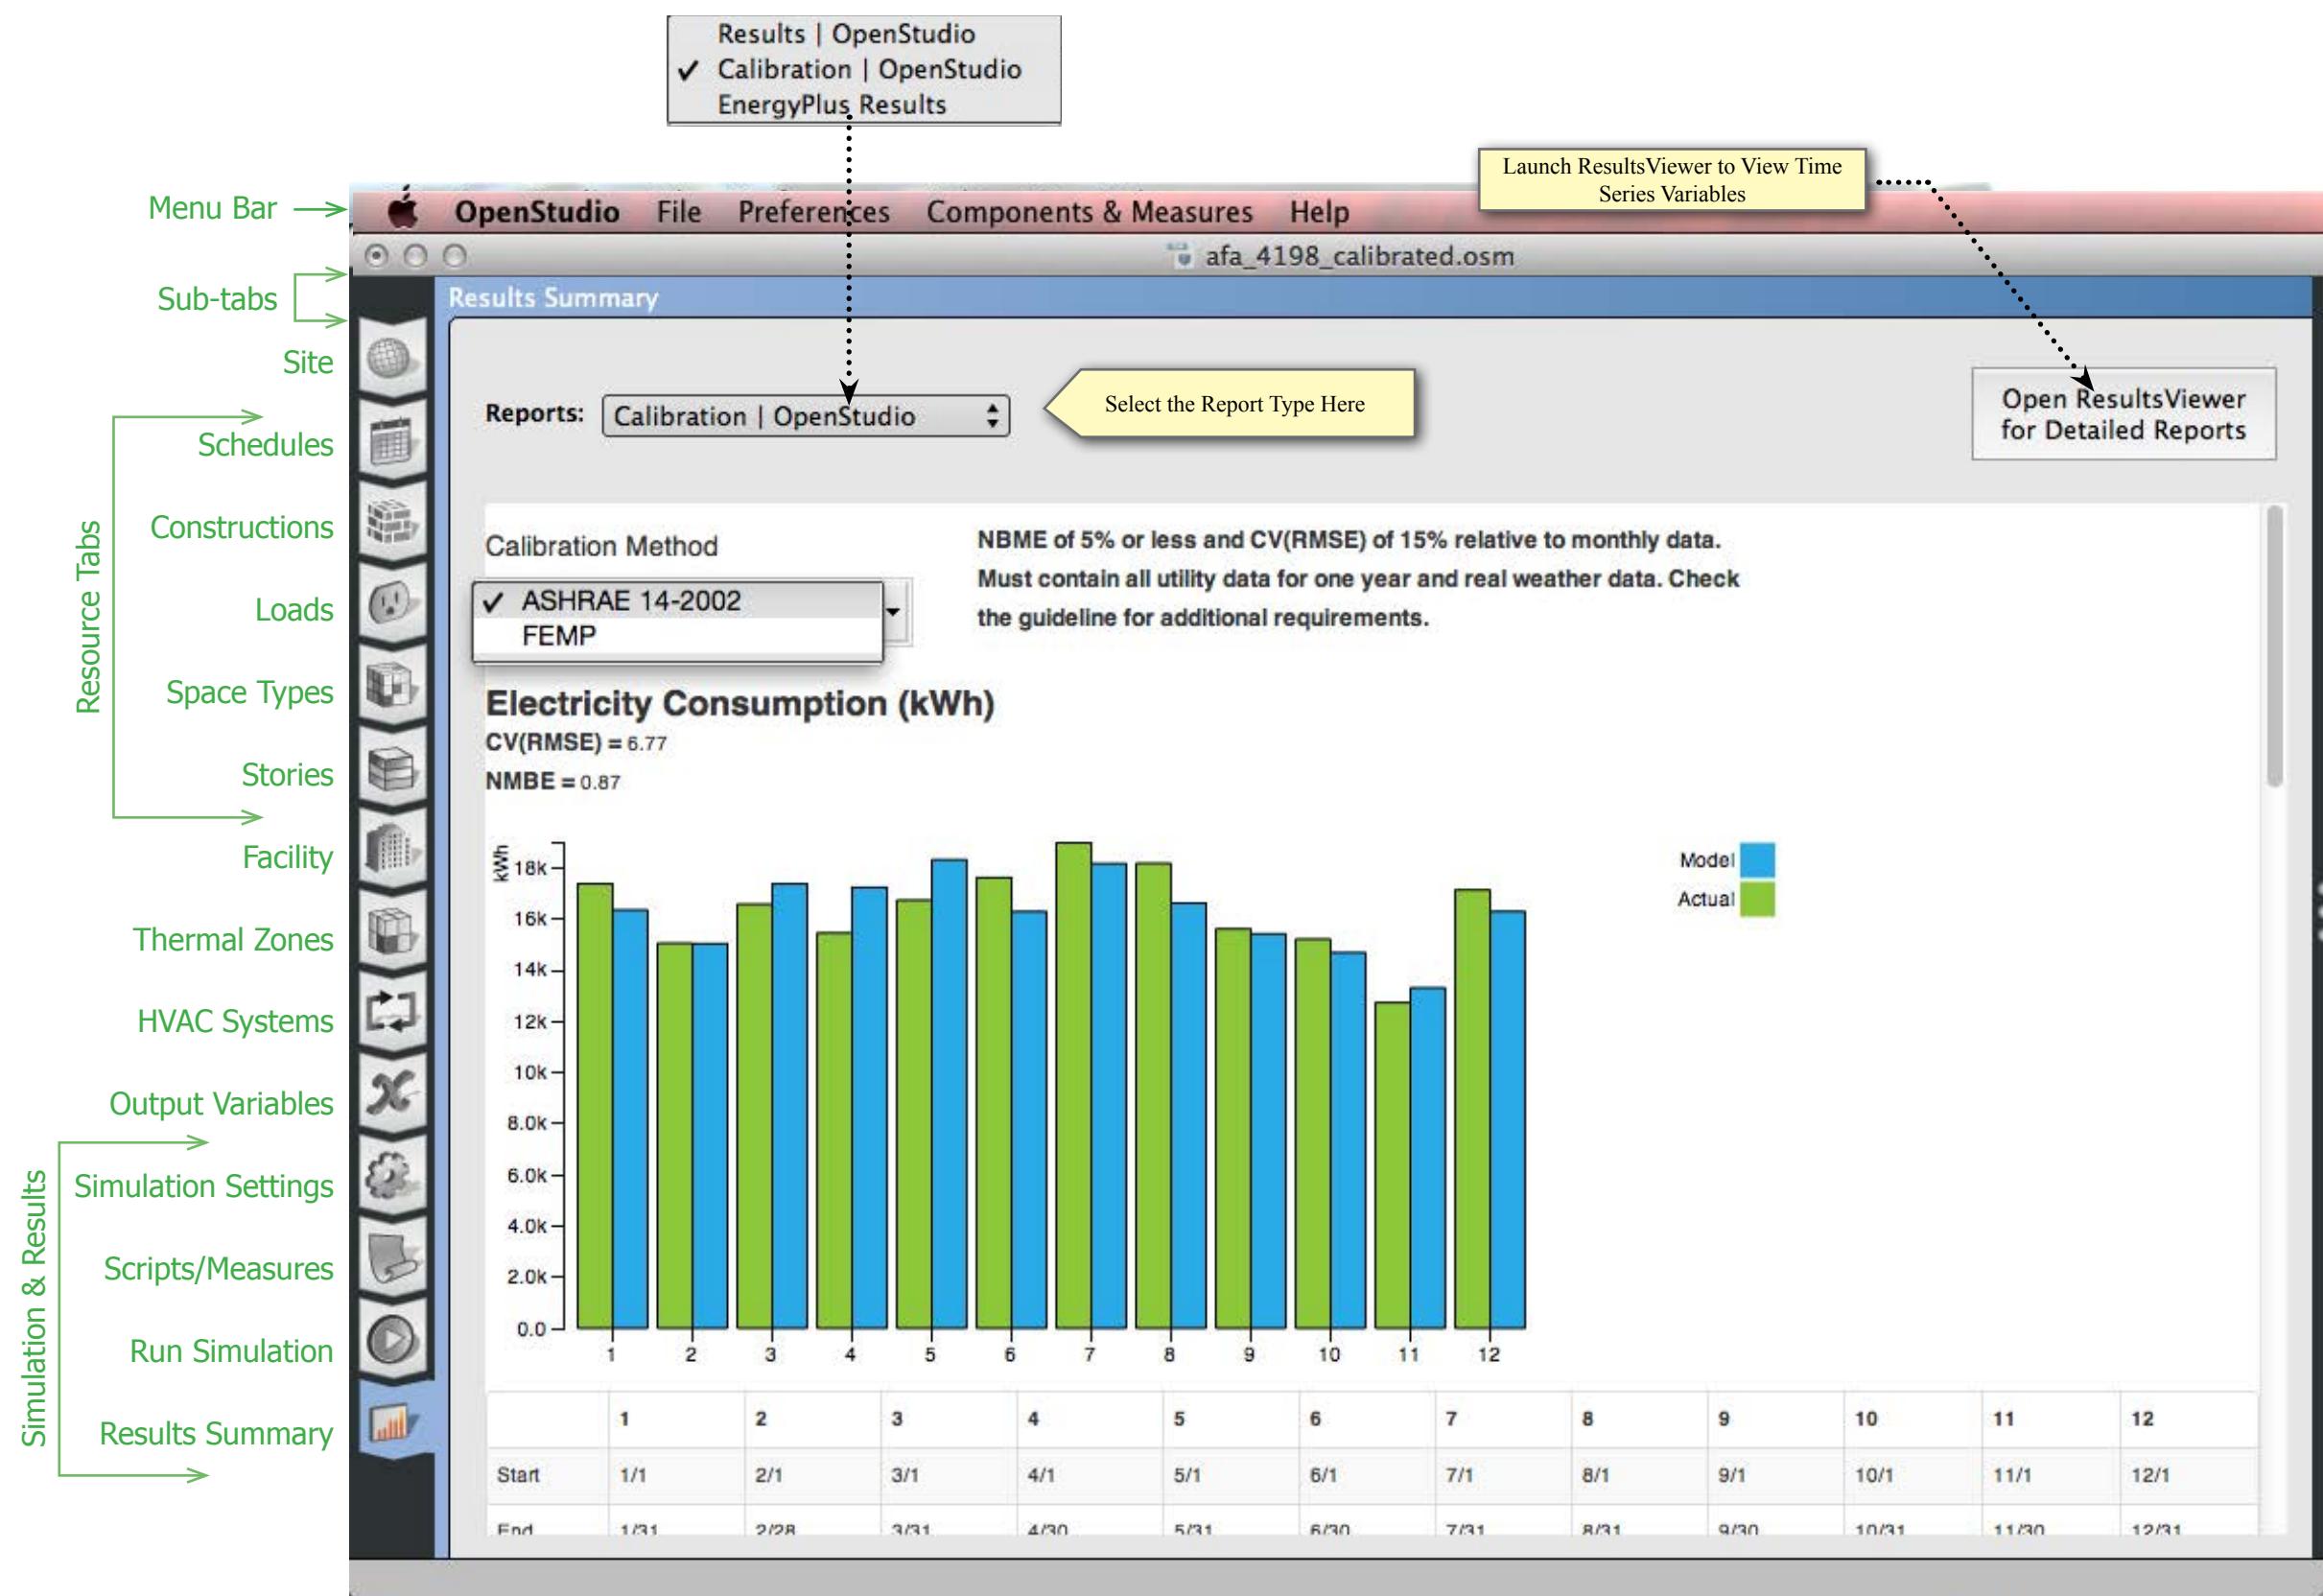

# OpenStudio 1.7.0 Basic Workflow Guide

[openstudio.net](http://openstudio.net)

## Results Summary: EnergyPlus Results

### Notes

The HTML view of the EnergyPlus report is available through the drop down report menu.

Results | OpenStudio  
Calibration | OpenStudio  
✓ EnergyPlus Results

OpenStudio File Preferences Components & Measures Help  
afa\_4198\_calibrated.osm

Results Summary

Reports: EnergyPlus Results Select the Report Type Here Launch ResultsViewer to View Time Series Variables Open ResultsViewer for Detailed Reports

**Building Area**

	Area [m <sup>2</sup> ]
Total Building Area	562.65
Net Conditioned Building Area	562.65
Unconditioned Building Area	0.00

**End Uses**

	Electricity [GJ]	Natural Gas [GJ]	Additional Fuel [GJ]	District Cooling [GJ]	District Heating [GJ]	Water [m <sup>3</sup> ]
Heating	0.00	1371.88	0.00	0.00	0.00	0.00
Cooling	82.85	0.00	0.00	0.00	0.00	0.00
Interior Lighting	210.02	0.00	0.00	0.00	0.00	0.00
Exterior Lighting	0.00	0.00	0.00	0.00	0.00	0.00
Interior Equipment	186.25	0.00	0.00	0.00	0.00	0.00
Exterior Equipment	0.00	0.00	0.00	0.00	0.00	0.00
Fans	186.47	0.00	0.00	0.00	0.00	0.00
Pumps	36.12	0.00	0.00	0.00	0.00	0.00
Heat Rejection	0.00	0.00	0.00	0.00	0.00	0.00