

# Marine cybernetics laboratory handbook



**NTNU – Trondheim**  
Norwegian University of  
Science and Technology

Faculty of Engineering Science and Technology  
Department of Marine Technology



## **Introduction**

This handbook is a comprehensive reference for the marine cybernetics laboratory. The laboratory is used in teaching and research on development and real-time testing of marine control systems.

## **Structure**

Part I explains the concepts and motivations for the stepwise controller development.

Part II is a user guide intended for users of the laboratory. Step-by-step instructions for development and deployment of programs to the real-time controller are given.

Lower level details, intended for laboratory assistants and customized use, are given in Part III.

# Contents

<b>I</b>	<b>Introduction</b>	<b>1</b>
<b>1</b>	<b>Marine cybernetics laboratory</b>	<b>2</b>
1.1	Fixed Equipment . . . . .	4
1.1.1	Qualisys motion capture system . . . . .	4
1.1.2	Towing carriage . . . . .	4
1.1.3	Wave generator . . . . .	4
1.1.4	Current generator . . . . .	4
1.2	Vessels . . . . .	5
1.2.1	CS Inocean Cat I Arctic Drillship . . . . .	6
1.2.2	CS Saucer . . . . .	7
1.2.3	ROV Neptunus . . . . .	10
1.2.4	CS Enterprise I . . . . .	11
1.2.5	Cybership III . . . . .	16
1.2.6	Cybership II . . . . .	17
1.2.7	Cybership I . . . . .	18
1.2.8	CyberRig . . . . .	19
1.2.9	Our Lass II model . . . . .	20
<b>2</b>	<b>Control system development philosophy</b>	<b>21</b>
2.1	Development Steps . . . . .	22
2.1.1	Model-in-the-Loop . . . . .	22
2.1.2	Software-in-the-Loop . . . . .	22
2.1.3	Processor-in-the-Loop . . . . .	23
2.1.4	Hardware-in-the-Loop . . . . .	23
2.1.5	Scale test . . . . .	23
2.1.6	Full scale . . . . .	23
2.2	Recommended Control Modes . . . . .	24
2.2.1	Individual actuator control . . . . .	24
2.2.2	Generalized force control . . . . .	24
2.2.3	Regulation . . . . .	25
2.2.4	Marine Operations Control . . . . .	26
<b>II</b>	<b>Laboratory user guide</b>	<b>27</b>
<b>3</b>	<b>Safety</b>	<b>28</b>
3.1	Hazards and measures . . . . .	28
3.1.1	Personnel injury . . . . .	28

3.1.2	Material damage . . . . .	28
<b>4</b>	<b>Qualisys motion capture system</b>	<b>30</b>
4.1	Start Qualisys Track Manager . . . . .	30
4.2	Aquire body . . . . .	31
4.3	Troubleshooting . . . . .	33
4.3.1	Long waiting for camera . . . . .	33
<b>5</b>	<b>Towing carriage</b>	<b>35</b>
5.1	Preparation before startup . . . . .	35
5.1.1	Operation console . . . . .	35
5.2	Manual Operation of the Carriage . . . . .	37
5.2.1	Setup . . . . .	37
5.2.2	Main/Standard Operation . . . . .	39
5.3	Operation Controlled automatically from PC . . . . .	40
5.3.1	The Trajectory Input File . . . . .	40
5.4	Troubleshooting . . . . .	41
5.5	Note . . . . .	41
5.6	Basic parameter identification . . . . .	42
<b>6</b>	<b>Wave generator</b>	<b>43</b>
<b>7</b>	<b>Current generator</b>	<b>44</b>
<b>8</b>	<b>CS Inocean Cat I Arctic Drillship</b>	<b>45</b>
8.1	Mathematical model . . . . .	45
<b>9</b>	<b>CS Enterprise I</b>	<b>46</b>
9.1	Mathematical model . . . . .	46
9.2	Model-in-the-loop simulation . . . . .	48
9.3	Processor-in-the-Loop simulation . . . . .	49
9.4	Basin testing . . . . .	50
9.4.1	Student controller implementation . . . . .	50
9.4.2	Ship launching procedure - before sailing . . . . .	52
9.4.3	Deploy control system . . . . .	53
9.4.4	Ship docking procedure - after sailing . . . . .	54
9.4.5	Troubleshooting . . . . .	55
<b>10</b>	<b>CS Saucer</b>	<b>56</b>
10.1	Required Software . . . . .	56
10.2	Deployment . . . . .	56
10.3	NI Dashboard Manual Control . . . . .	56
10.4	Manual Thruster Control . . . . .	57
10.5	Manual Force Control . . . . .	57
10.6	Data logging . . . . .	57
10.7	Charging the Traxxas LiPo Battery . . . . .	58
<b>11</b>	<b>ROV Neptunus</b>	<b>60</b>

<b>III Laboratory Staff Guide</b>	<b>61</b>
<b>12 cRIO-based control system setup</b>	<b>62</b>
12.1 cRIO . . . . .	62
12.1.1 Ethernet ports . . . . .	62
12.1.2 Update cRIO software . . . . .	63
12.1.3 Create FPGA target and XML . . . . .	68
12.1.4 Installing custom device driver . . . . .	81
12.2 Raspberry Pi . . . . .	84
12.2.1 Raspbian installation and setup . . . . .	84
12.2.2 Sixaxis installation and configuration . . . . .	88
12.3 Laptop . . . . .	91
12.3.1 Virtual machine image creation . . . . .	91
12.3.2 Deploying the virtual machine . . . . .	92
<b>13 CS Enterprise I</b>	<b>96</b>
13.1 Actuators . . . . .	96
13.1.1 Motor control signals . . . . .	98
13.1.2 Servo control signals . . . . .	98
13.1.3 Measurements . . . . .	98
13.2 Control software . . . . .	99
13.2.1 sixaxis (currently named WL_joystick) custom device . . . . .	99
13.2.2 QTM (currently named Oqus) custom device . . . . .	99
13.2.3 QTM2SI . . . . .	99
13.2.4 ctrl_sixaxis2thruster control module . . . . .	99
13.2.5 ctrl_sixaxis2force control module . . . . .	100
13.2.6 ctrl_DP_basic control module . . . . .	101
13.2.7 ctrl_student control module . . . . .	101
13.2.8 switch module . . . . .	102
13.2.9 uao2pwm module . . . . .	102
13.2.10 FPGA interface . . . . .	103
13.3 Qualisys body . . . . .	104
<b>IV Miscellaneous</b>	<b>107</b>
<b>A Simulation and control with cRIO</b>	<b>108</b>
A.1 Simulink model adaptation and compilation . . . . .	108
A.1.1 Modeling . . . . .	108
A.1.2 Model configuration . . . . .	110
A.1.3 Build . . . . .	111
A.2 Simulation configuration . . . . .	113
A.2.1 Project creation . . . . .	113
A.2.2 System setup . . . . .	114
A.2.3 Create computer interface . . . . .	115
A.3 Deployment and simulation . . . . .	118
A.3.1 Run . . . . .	118
A.3.2 User interface side data logging . . . . .	118
A.3.3 Stop . . . . .	119
A.3.4 FTP data retrieval . . . . .	119

<b>B Device network addresses</b>	<b>121</b>
<b>C ROV control modes</b>	<b>122</b>
C.1 ROV dynamics . . . . .	122
C.1.1 6 DOF model . . . . .	122
C.1.2 Thruster configuration . . . . .	123
C.2 ROV control modes . . . . .	124
C.2.1 Direct Thruster Control . . . . .	125
C.2.2 Direct Body Motion Control . . . . .	125
C.2.3 Auto Control . . . . .	127
C.2.4 Indirect Motion Control . . . . .	127
C.2.5 Marine Operations Control . . . . .	127
<b>D Personnel and literature</b>	<b>128</b>
D.1 Points of contact . . . . .	128
<b>E Maintenance</b>	<b>129</b>
<b>F Suppliers</b>	<b>130</b>

# Nomenclature

BT	bow thruster
cRIO	compact reconfigurable input/output real-time embedded industrial controller by National Instruments
CS	cybership ship prefix
CSE1	CS Enterprise I
CSS	CS Saucer
DP	dynamic positioning
ESC	electronic speed controller
FPGA	field-programmable gate array
HIL	hardware-in-the-loop
IO	input/output
MC Lab	marine cybernetics laboratory
PWM	pulse-width modulation
RPi	Raspberry Pi single-board computer
VSP	Voith Schneider propeller

# **Part I**

# **Introduction**

## **Chapter 1**

# **Marine cybernetics laboratory**

The laboratory is equipped for experimental testing of marine control systems and hydrodynamic tests. It consists of a wave basin with an advanced instrumentation package and a towing carriage. The basin, depicted in Figure 1.1, has dimensions 40m x 6.45m x 1.5m (LxBxD).

The laboratory gives tangible results that solidifies theoretical work.

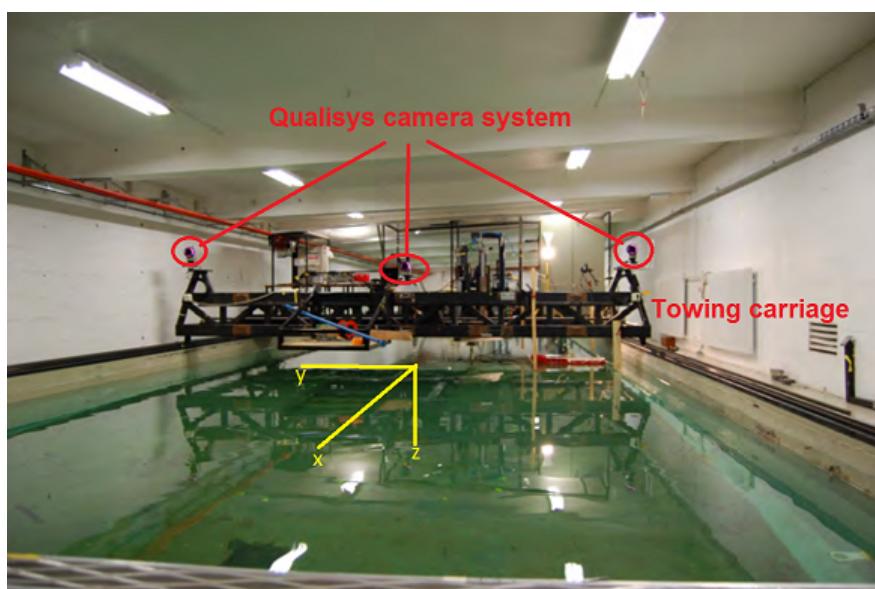


Figure 1.1: Marine cybernetics laboratory basin

	Height [m]	Period T [s]
Regular waves	$H < 0.25$	0.3 - 3.0
Irregular waves	$H_s < 0.15$	0.6 - 1.5

Table 1.1: Wave generator capacity

## 1.1 Fixed Equipment

### 1.1.1 Qualisys motion capture system

Qualisys provides 6 degrees of freedom data tracking. The system has millimeter precision, works in real time and is configured to 50Hz.

The positioning system consists of three Oqus high speed infrared cameras registering infrared reflectors placed on the vessel. Peer-to-peer (P2P) networking is used to transmit camera data to a dedicated computer running Qualisys Track Manager (QTM) software. QTM performs triangulation and broadcasts the vessel position over the wireless network.

### 1.1.2 Towing carriage

The carriage runs at speeds up to 2m/s. It also has capability for precise movement of models in 6 degrees of freedom and is thus suitable for more specialized hydrodynamic tests.

### 1.1.3 Wave generator

The single paddle wave generator is controlled by a dedicated computer. Available spectrum are first order Stoke, JONSWAP, Pierson-Moskowitz, Bretschneider, ISSC and ITTC. Table 1.1 summarizes the generation capacity.

### 1.1.4 Current generator

Not available as of spring 2015.

## 1.2 Vessels

Several both surface and underwater vessels are used in the MC Lab.

The cyber ship class, with ship prefix CS, consists of 6 vessels:

- CS Inocean Cat I Arctic Drillship,
- CS Saucer,
- CS Enterprise I,
- Cybership III,
- Cybership II, and
- Cybership I.

Also, there laboratory holds an underwater craft,

- ROV Neptunus,

and a semi submersible drilling rig

- CyberRig.

### 1.2.1 CS Inocean Cat I Arctic Drillship

Add material from Jon 



Figure 1.2: CS Saucer

### 1.2.2 CS Saucer

CS Saucer is a fully actuated and highly controllable vessel with a spherically shaped hull, much like a flying saucer. It is designed to be light weight, agile and very responsive. The CS Saucer adds possibilities for rapid response and motion in surge and sway, something that is difficult to obtain with a traditional ship hull.

The non conventional shape of the hull of such a marine vessel opens the possibilities for original projects in control theory and hydrodynamics, as well as serving as a platform where student can get experience with the practical aspects of control systems implementation

#### 1.2.2.1 Hull

The hull is constructed from three millimeter MDF sheeting, milled Divinycell foam and a woven carbon with epoxy. This results in a rigid hull with low draft. The vessel has a detachable lid made of Plexiglas which is secured to the top of the vessel with four butterfly screws.

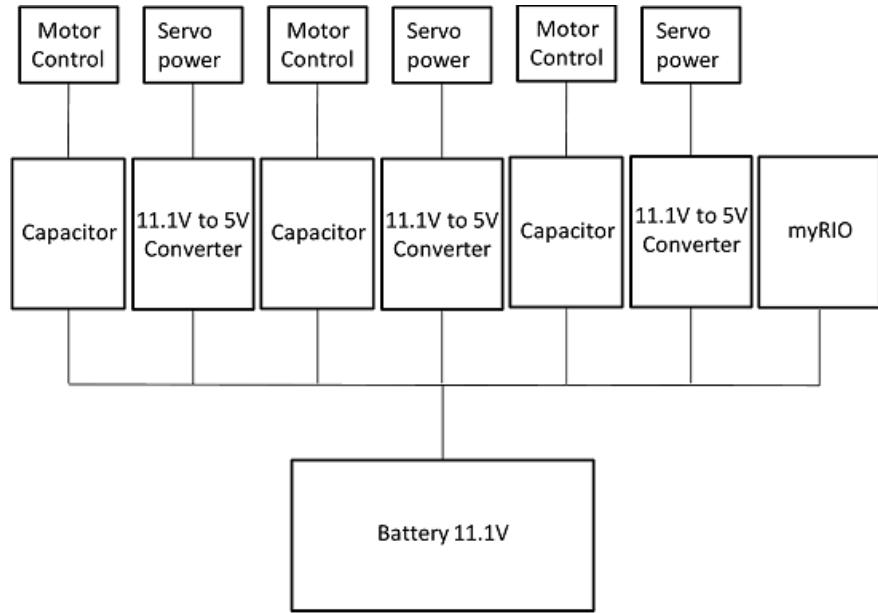


Figure 1.3: CS Saucer power system

#### 1.2.2.2 Control system

The embedded controller myRIO from National Instruments is used to control the vessel. The myRIO with its default FPGA personality is capable of driving 8 PWM signals simultaneously, in addition to multiple digital and analog connections.

Marine 30 Electronic Speed Controllers (ESC) are used to control the DC motors driving the thruster propellers.

#### 1.2.2.3 Actuators

The vessel is fitted with three Graupner Schottel drive unit II azimuth thrusters. Torpedo 800 brushed DC motors drive the propeller. Graupner DS8311 servo motors are used to control the angle of the thrusters.

#### 1.2.2.4 Power

The system is powered by a three cell 11.1V Lithium Polymer battery, as seen in Figure 1.3

In order to convert the 11.1V power provided by the battery to 5V for the servos, a switching DC/DC converter is user together with a capacitor.

### **1.2.2.5 Literature**

#### **Specialization projects and master theses**

- Marine Cybernetics Vessel CS Saucer: Design, construction and control  
(Idland, 2015)
- Rotem Sharoni, 2016
- Einar Skiftestad Ueland, 2016

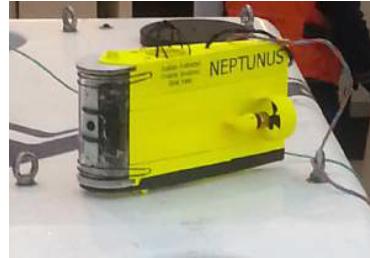


Figure 1.4: ROV Neptunus

### 1.2.3 ROV Neptunus

Neptunus is a small, low-cost ROV prototype. The design is based on Open-ROV, and the instrumentation is directly adapted thence.

#### 1.2.3.1 Hull

Neptunus is designed with a foil shaped body, in order to induce low drag forces in the longitudinal direction. The prototype consists of several blocks, made of acrylonitrile butadiene styrene (ABS) - plastic, 3D printed at NTNU.

#### 1.2.3.2 Actuators

There are three thrusters on Neptunus: two in the longitudinal direction, and one in the vertical.

#### 1.2.3.3 Control system

The main processes are driven by a BeagleBone computer, and an Arduino control board. It is equipped with an inertial measurement unit (IMU) and a high definition (HD) web camera.

#### 1.2.3.4 Literature

##### Specialization projects and master theses

- Low cost ROV design, based on testing, simulations and analysis of Open-ROV(Follestad et al., 2014)
- Design and Implementation of Software for the ROV Neptunus (Munz, 2015)
- Remote Control and Automatic Path-following for C/S Enterprise I and ROV Neptunus (Sandved, 2015)



Figure 1.5: CS Enterprise I

#### 1.2.4 CS Enterprise I

The CSE1, depicted in Figure 1.5,

hva bruker vi den til

The vessel CS Enterprise I was constructed as a model ship available to master and PhD students at NTNU [Skatun, 2011]. The work performed on CS Enterprise I include, but is not limited to, dynamic positioning systems, maneuvering systems and path following, and navigation with virtual reality [Valle, 2015].

##### 1.2.4.1 Hull

tug boat model.

##### 1.2.4.2 Actuators

The ship is fitted with two Voith Schneider propellers (VSP) astern and a bow thruster (BT).

##### 1.2.4.3 Control system

The on-board control system consists of

- a National Instruments compact reconfigurable input/output (cRIO) embedded controller,
- a Raspberry Pi (RPi) single-board computer,
- three electronic speed controllers (ESC), and
- four servos.

The operator interfaces the system by

- laptop, and
- a Sony Sixaxis wireless gamepad for PlayStation 3.

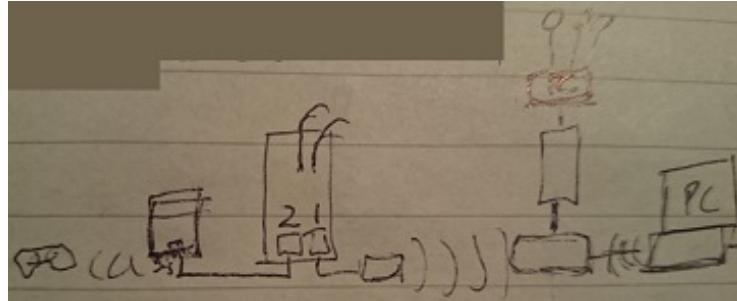


Figure 1.6: CSE1 communication diagram

**High-level communication** Following Figure 1.6 from left to right:

**Sixaxis** transmits its information to the RPi Bluetooth USB dongle with which it is previously paired<sup>1</sup>.

**RPi** receives Sixaxis data through the USB dongle and forwards it through its TCP/IP<sup>2</sup> server over Ethernet to the cRIO.

**cRIO** reads QTM broadcast positioning data through the Wi-Fi bridge on Ethernet port 1, Sixaxis data on Ethernet port 2. Online data and laptop input is transmitted and received on Ethernet port 1 by the VeriStand Engine.

**Laptop** reads simulation data and sends input to the cRIO over Ethernet.

**Low-level communication** The BT and VSP motor speeds are controlled by ESC. The ESC receive their setpoints as a pulse-width modulated (PWM) signals from the cRIO digital output module.

The VSP blade pitches are controlled by servos. The servos also receive their setpoint as PWM signals.

**Software** The software supports four different control modes, as seen in the middle of Figure 1.8:

- Individual actuator control allows controlling the force  $u$ , angular velocity  $\omega$  and angle  $\alpha$  each thruster
- Generalized force control facilitates inputting desired surge and sway forces and yaw moment,  $X$ ,  $Y$ ,  $N$ , respectively.
- The user defined custom control
- Stationkeeping.

The two first modes only take the joystick signal as input.

---

<sup>1</sup>One-time pairing procedure described in Appendix 12.2.2.

<sup>2</sup>All IP addresses are as given in Table B.1.

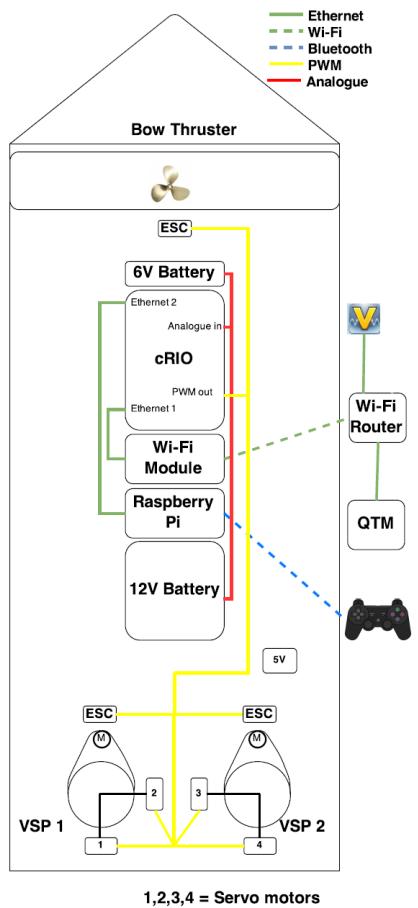


Figure 1.7: CSE1 signal paths

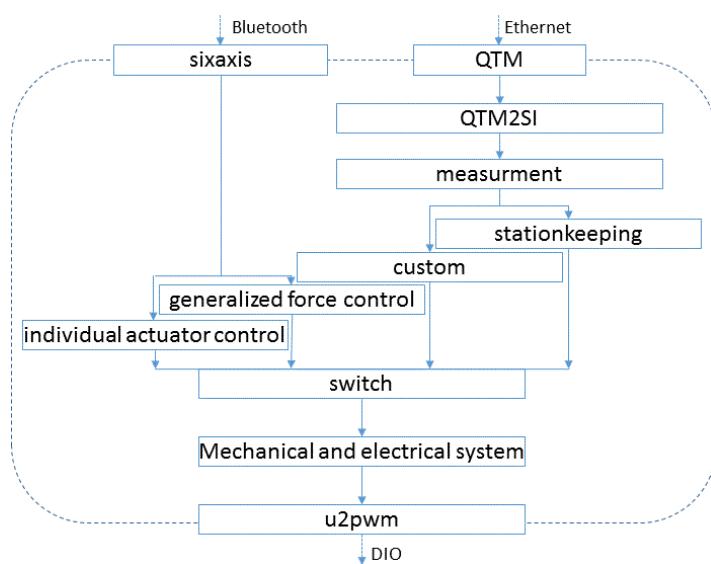


Figure 1.8: CSE1 control software

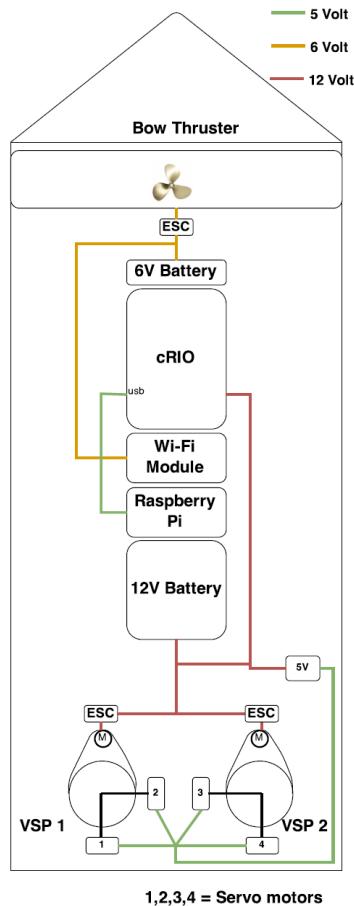


Figure 1.9: CSE1 power system

The two latter modes take the position measurement  $\eta_{QTM}$  from QTM. This signal is in turn converted meters and radians. Finally, measurement noise may be added to get the measured signal  $\eta_m$ .

The control modes output the desired output vector  $u_d$ . The actual output  $u$  may differ due to mechanical and electrical dynamics.

Finally, the output is converted to pwm signals outputted through the digital input/output (DIO) port.

#### 1.2.4.4 Power

See Figure 1.9.

#### 1.2.4.5 Literature

#### Journals and conferences

- LOS guidance for towing an iceberg along a straight-line path (Orsten et al., 2014)

### **Specialization projects and master theses**

- Development of a DP system for CS Enterprise I with Voith Schneider thrusters. (Skåtun, 2011)
- Development of a modularized control architecture for CS Enterprise I for path-following based on LOS and maneuvering theory (Tran, 2013)
- Automatic Reliability-based Control of Iceberg Towing in Open Waters (Orsten, 2014)
- Line-Of-Sight-based maneuvering control design, implementation, and experimental testing for the model ship C/S Enterprise I.(Tran, 2014)
- Remote Control and Automatic Path-following for C/S Enterprise I and ROV Neptunus (Sandved, 2015)
- Marine Telepresence System (Valle, 2015)
- Elias Bjørne, 2016

### **Other**

- YouTube video (Skåtun, 2014)

#### **1.2.4.6 Further development**

- Implement “fail to zero” for communication breakdown
- Add IMU or gyro

### **1.2.5 Cybership III**

1:30 scale model of a supply vessel.

### **1.2.6 Cybership II**

2001. 1:70 scaled model of a supply vessel.

### **1.2.7 Cybership I**

1:70 scaled model of a supply vessel.

### **1.2.8 CyberRig**

The CyberRig is a semi submersible 1:100 scaled model drilling rig used in student projects and research [Bjørneset, 2014].



Figure 1.10: Our Lass II

### 1.2.9 Our Lass II model

1:24 scaled model of a fishing vessel

#### 1.2.9.1 Literature

##### Journals and conferences

- Online Estimation of Ship's Mass and Center of Mass Using Inertial Measurements (Linder et al., 2015)

## **Chapter 2**

# **Control system development philosophy**

As the complexity of marine vessels and operations grows, the need for thorough testing and verification of the vessel real-time control and monitoring systems increases. More advanced integrated functionality relies on many separately designed control and monitoring systems to cooperate on performing common tasks. Regular software simulations cannot cover all aspects of this complexity.

Through steps-wise verification and validation at different levels of fidelity, errors can be discovered at earlier stages thus lowering the total development cost.

In the case of the MC Lab, users qualify their experimental setups before the assigned laboratory time. This reduces debugging time, improves tuning of parameters and test scenarios, thereby increasing efficiency and maximizing the outcome of the experimental work.

## **2.1 Development Steps**

Marine cybernetics deals with control engineering for the vessel mechatronic systems which again interact with the environment. In this section, “the controller” refers to the designed control software and “the plant” to the combination of the mechatronic system and the environment.

### **2.1.1 Model-in-the-Loop**

#### **2.1.1.1 Principle**

A model of the controller interconnected with a physical model of the plant, in a control development environment, such as MATLAB Simulink.

#### **2.1.1.2 Aim**

Develop control strategies . Test principles.

#### **2.1.1.3 Iteration time**

Extremely short, small changes are immediately implemented and tested.

#### **2.1.1.4 Cost**

Low

### **2.1.2 Software-in-the-Loop**

The controller is coded in the final language, such as C or C++, and connected to the plant model in a control development environment.

#### **2.1.2.1 Aim**

Test of coding system. Reveal coding failures.

#### **2.1.2.2 Iteration time**

Slightly longer than MIL.

### **2.1.3 Processor-in-the-Loop**

#### **2.1.3.1 Principle**

The controller is deployed to a representative microprocessor, connected to the plant simulation via high speed bus, such as JTAG. The plant must be synchronized with the controller.

#### **2.1.3.2 Aim**

Expose problems with execution in the embedded environment, such as insufficient computing resources on the embedded processor.

#### **2.1.3.3 Iteration time**

Higher, due to the need to regenerate and deploy code for each run.

### **2.1.4 Hardware-in-the-Loop**

#### **2.1.4.1 Principle**

Controller fully installed into the intended final hardware, connected through the plant only through the proper IO. The plant simulator must run on a real-time computer emulating the IO of a real process.

#### **2.1.4.2 Aim**

Perform regulation, security and failure tests without risk.

Investigate the interaction between subsystems.

Ensure a high level of robustness and quality.

### **2.1.5 Scale test**

-

### **2.1.6 Full scale**

-

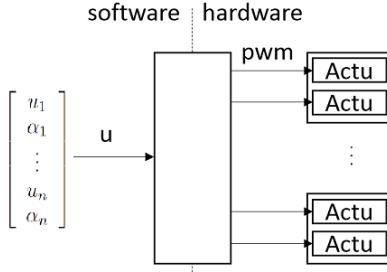


Figure 2.1: Individual actuator control

## 2.2 Recommended Control Modes

It is favorable to allow for five main control modes:

- Stop all actuators
- 1. Individual actuator control
- 2. Generalized force control
- 3. Regulation
- 4. Operations

In addition, sub-modes may allow more functionality.

### 2.2.1 Individual actuator control

The most basic mode allows controlling each thruster separately. Inputs are typically normalized force  $u = [-1, 1]$ , angle  $\alpha = [-\pi, \pi]$ , and sometimes normalized rotational speed  $\omega = [-1, 1]$ . The software computes the corresponding physical signal, for instance a pulse width manipulated (PWM) signal as illustrated in Figure 2.1.

The user interface may be through gamepad, computer, tablet, etc.

Implementation details are discussed in Appendix C.2.1.

### 2.2.2 Generalized force control

Thrust allocation allows input of the desired generalized force, as seen in Figure 2.2. For six degrees of freedom (6 DOF) control the input is

$$\tau = \begin{bmatrix} X \\ Y \\ Z \\ K \\ M \\ N \end{bmatrix}.$$

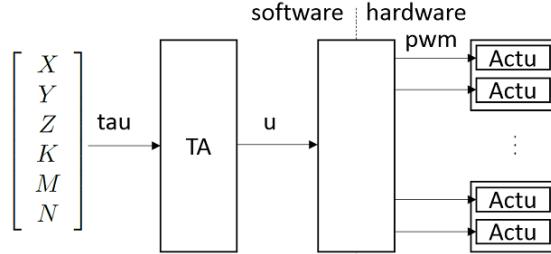


Figure 2.2: Generalized force control

For surface craft, 3 DOF are typically considered:

$$\tau = \begin{bmatrix} X \\ Y \\ N \end{bmatrix}.$$

The user interface may be through gamepad, computer, tablet, etc. The appropriate reference frame depends on the application.

### 2.2.2.1 Body frame

Most commonly, the desired thrust is given in the vessel-fixed body frame. This is the intuitive setup for an on-board operator.

Implementation details are discussed in Appendix C.2.2.1.

### 2.2.2.2 Inertial frame

For remote operation, it may be suitable to input the force with regard to the inertial frame, rather than the vessel orientation.

Implementation details are discussed in Appendix C.2.2.2.

### 2.2.2.3 User frame

When the operator has eye contact with the vessel, it may be suitable to specify the force with respect to the line of sight between the operator and craft.

Implementation details are discussed in Appendix C.2.2.3.

## 2.2.3 Regulation

Maintaining a given value in one or several DOFs under the influence of disturbances is the basic automatic control mode. The given value is called setpoint, as illustrated in Figure 2.3. Typical sub-modes are listed in Table 2.1. Reference filters for changing setpoints may or may not be included.

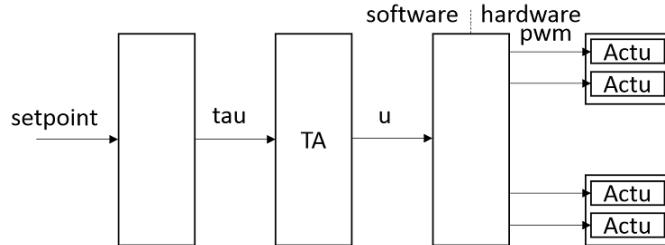


Figure 2.3: Regulation

	$x$	$y$	$z$	$\phi$	$\theta$	$\psi$
Stationkeeping	✓	✓				✓
Heading					✓	
Depth				✓		
Roll/Pitch					✓	✓

Table 2.1: A selection of regulation modes

The user interface typically allows inputting the setpoint value directly, for instance on a computer or tablet. Alternatively, the setpoint may be translated through gamepad.

Further details are discussed in Appendix C.2.3.

#### 2.2.4 Marine Operations Control

The more complex control modes, typically combined from several of the different submodes, give automatic functions that are important for different marine operations. Input varies depending on the operation. It may be maps or waypoints, as in Figure 2.4.

Further details are discussed in Appendix C.2.5.

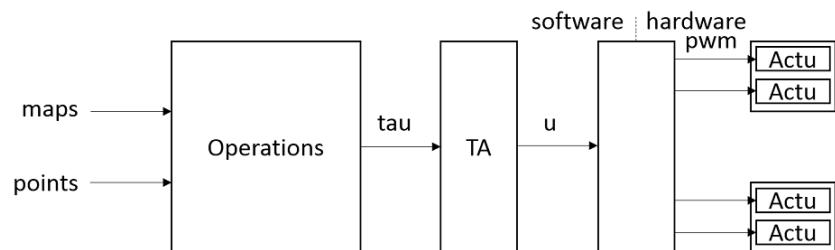


Figure 2.4: Marine Operations Control

## **Part II**

# **Laboratory user guide**

# Chapter 3

# Safety

## 3.1 Hazards and measures

### 3.1.1 Personnel injury

**Drowning** It is required to have two or more persons present when using the basin.

**Electric shock** The towing catenary should not be approached or touched.

**Carriage collision** It is forbidden to run the towing carriage when there are people alongside the basin.

**Thruster blade cuts** Vessels must stay in the water as long as actuators are active. Before removing the vessels from the water, the control system must be stopped and disabled, for instance by undeploying in the VeriStand project.

### 3.1.2 Material damage

#### Cybership Enterprise 1

**Water damage:** CSE1 is not waterproof and has excessive thrust capability which can inflict large roll angles. The risk of water on deck is reduced through thrust limitation and HIL testing before application of new control algorithms.

**Propeller dry running:** BT must only be run in water. Before removing the vessel from the water, the control system must be stopped and the VeriStand project undeployed.

**Loss of laptop control:** Wireless network instability may result in loss of connection between the laptop user interface and the cRIO. In this event, fall back to manual thruster control, by pushing  on the Sixaxis.

**Loss of position measurement:** -

**Total loss of control:** Pull the vessel with a boat hook. Keep the CSE1 in water while disconnecting batteries.

**Towing carriage** Stop before automatic stop at high speeds.

## Chapter 4

# Qualisys motion capture system

### 4.1 Start Qualisys Track Manager

1. Execute the program. The first displayed window is as in Figure 4.1.

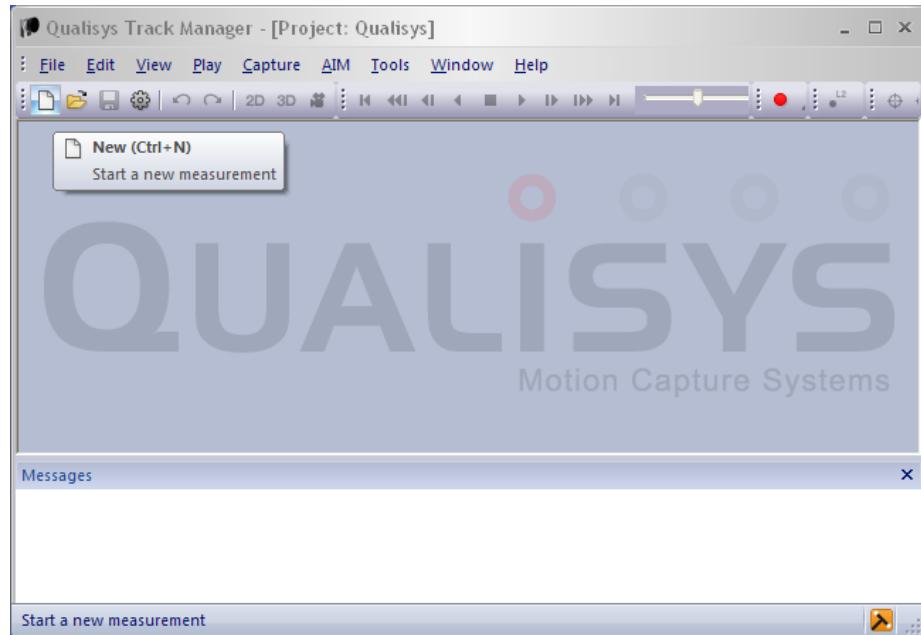


Figure 4.1: Qualisys Track Manager start window

2. Push the white sheet icon to start a new measurement. The main window should then display the 2D view, as in Figure 4.2. The squares numbered #1, #2 and #3 show the basin as seen from the respective cameras. The

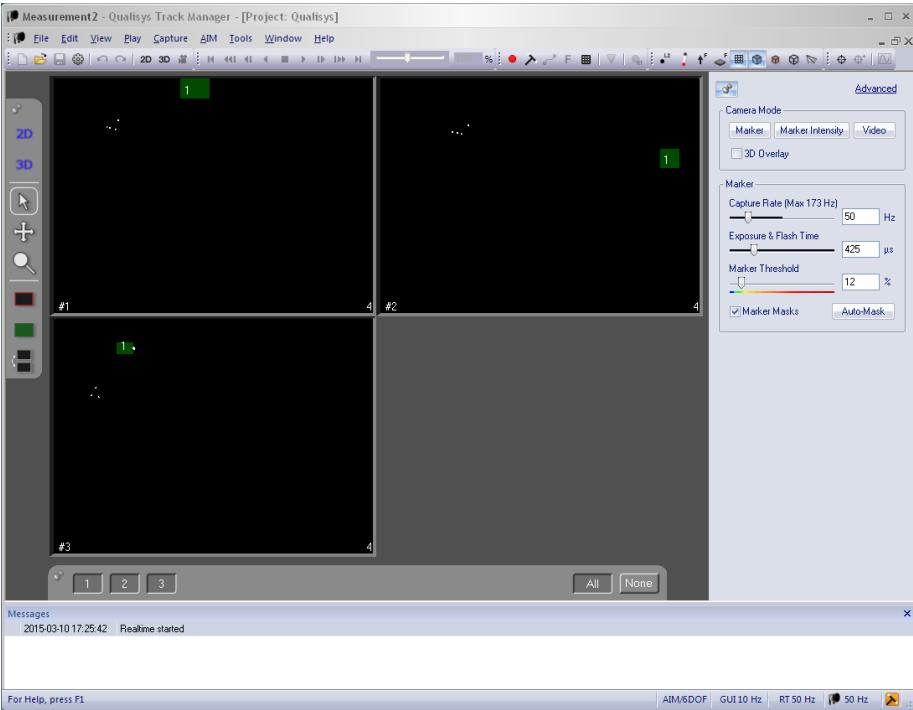


Figure 4.2: Qualisys Track Manager 2D view

white dots are the vessel reflectors. A minimum of three reflectors must be visible in each camera.

## 4.2 Acquire body

1. Push the gear icon to access Project Options. Navigate to 6DOF Tracking, as in Figure 4.3.
2. Remove previous bodies, if any.
3. Align the vessel with desired heading 0 and push “Acquire Body” to get the position of the reflectors. A list appears, as in Figure 4.4.
4. To redefine the body fixed coordinate frame
  - (a) Chose a reference reflector. As highlighted in Figure 4.4, it may be practical to choose the highest-most, in this case reflector 3.
  - (b) Push “Translate” and enter the coordinates of the chosen reflector in the desired frame. In Figure 4.5, reflector 3 is set at  $x, y, z = (0.550, 0, -0.500)$ . Figure 4.6 shows the resulting coordinates after translation.
5. Finally, select 3D view to confirm that the body-fixed frame is indeed located as desired, as in Figure 4.7.

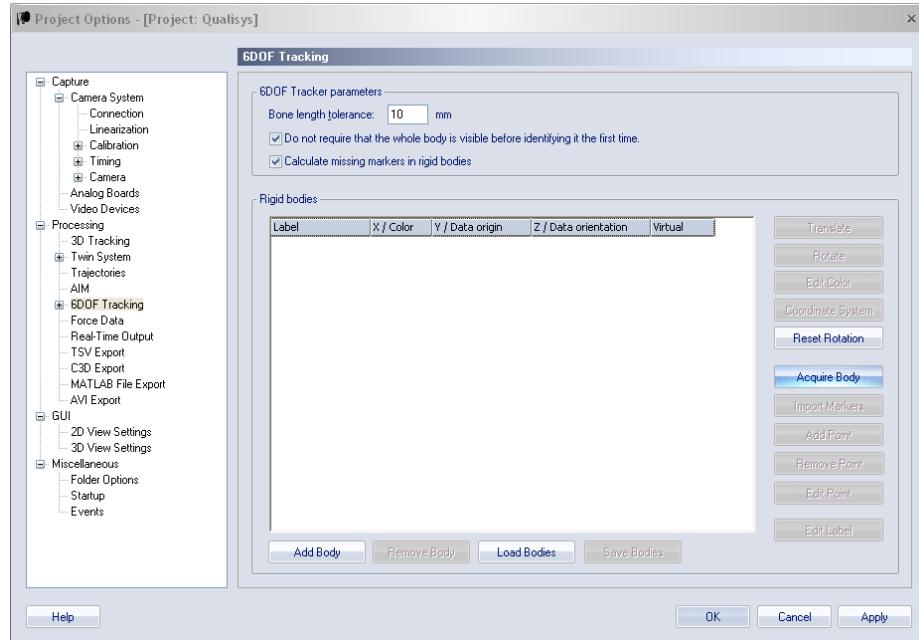


Figure 4.3: Qualisys Track Manager 6 DOF Tracking

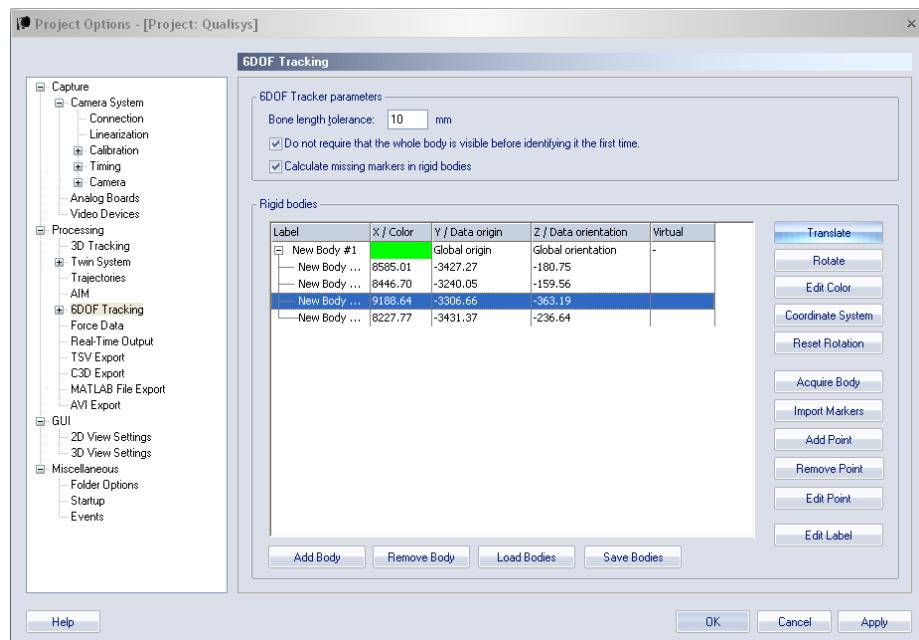


Figure 4.4: Qualisys Track Manager aquired body

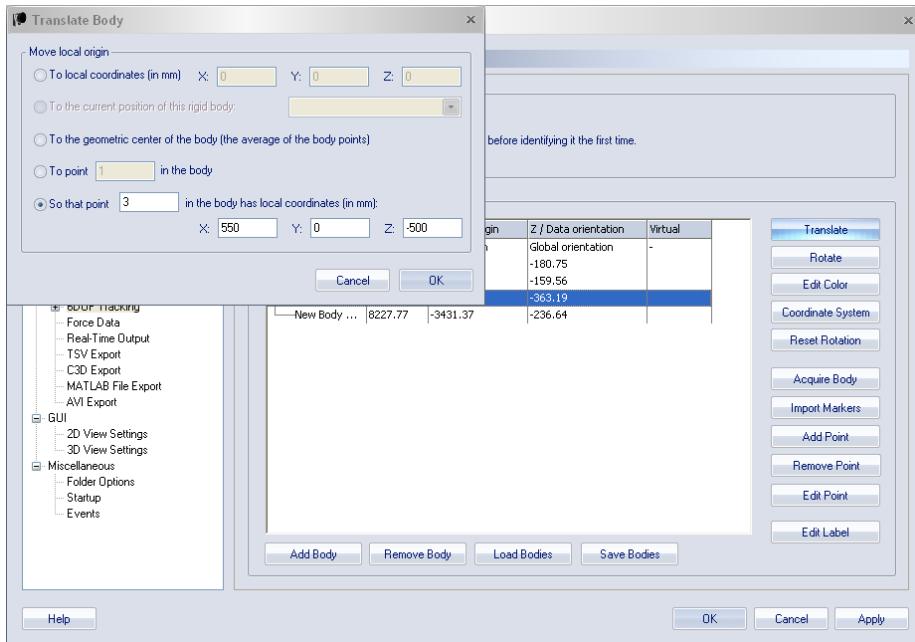


Figure 4.5: Qualisys Track Manager translate body

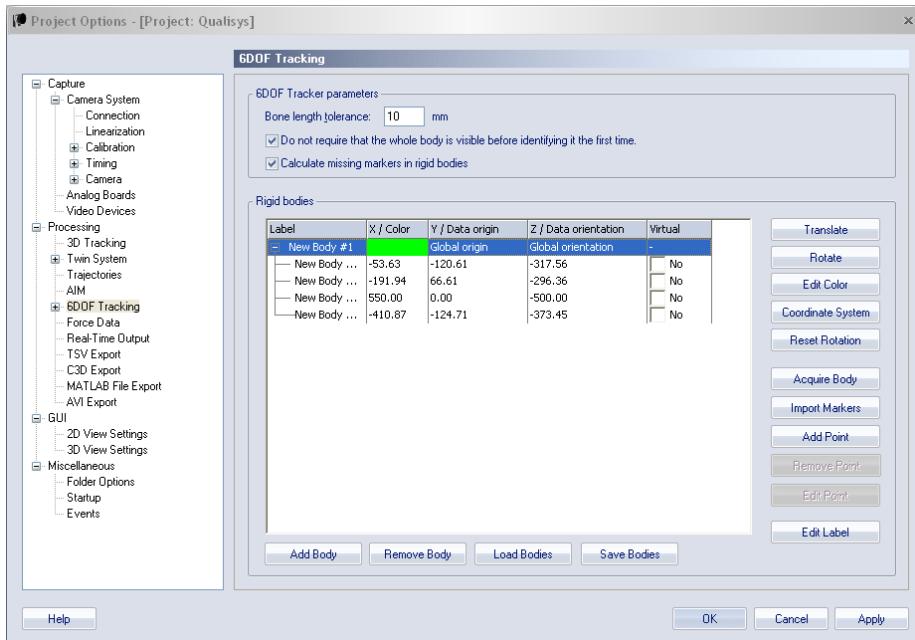


Figure 4.6: Qualisys Track Manager translated body

## 4.3 Troubleshooting

### 4.3.1 Long waiting for camera

If the operation depicted in Figure 4.8 is unsuccessful after a couple of minutes, reboot the cameras by unplugging and ~~38~~connecting the power cord on the rack.

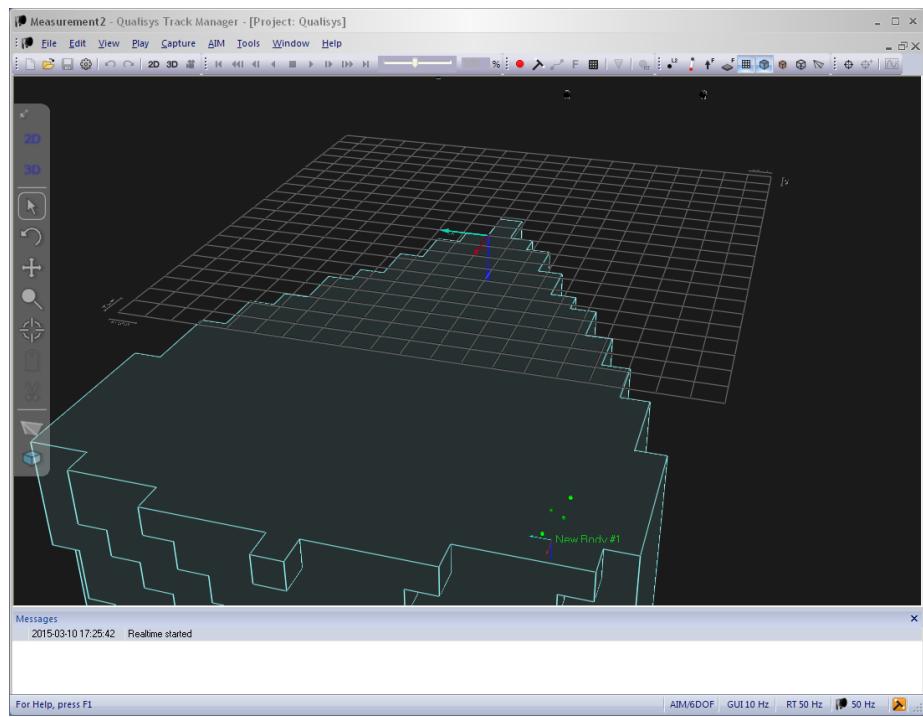


Figure 4.7: Qualisys Track Manager 3D view

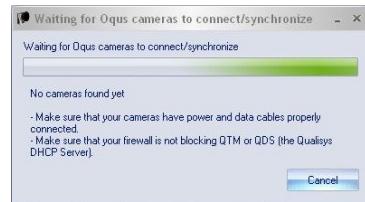


Figure 4.8: Qualisys Track Manager waiting for cameras

# **Chapter 5**

## **Towing carriage**

The scope of this section is to explain how to safely operate the carriage without any damage towards humans or equipment.

### **5.1 Preparation before startup**

To start with, you must make sure that any items mounted or fixed to the carriage are securely fitted, so they don't prevent the operation of the carriage. All personnel must stay on the operation platform during the travel of any axis.

Locate the Emergency Button and place it so that you can easily reach it from where you are sited. DO NOT USE THE EMERGENCY BUTTOM AS A BRAKE. YOU MUST ONLY OPERATE IT WHEN YOU ARE IN REAL EMERGENCY SITUATIONS.

#### **5.1.1 Operation console**

The operation console is an All-in-one PC. The Power button is on the bottom right side of the screen. If the operation panel is not on the desktop, you can start it by double clicking on desktop Icon, shown in Figure 5.2.



Figure 5.1: Towing carriage

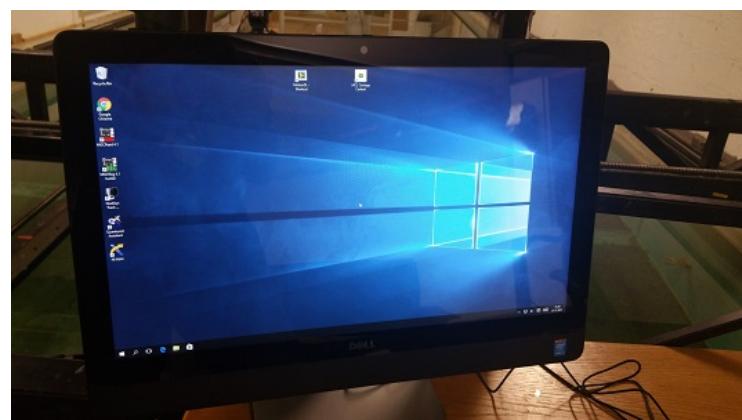


Figure 5.2: Towing console

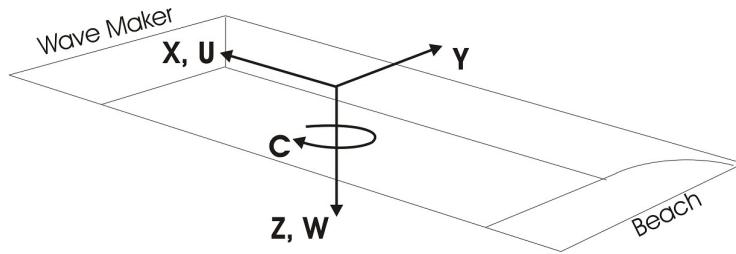


Figure 5.3: Coordinate system

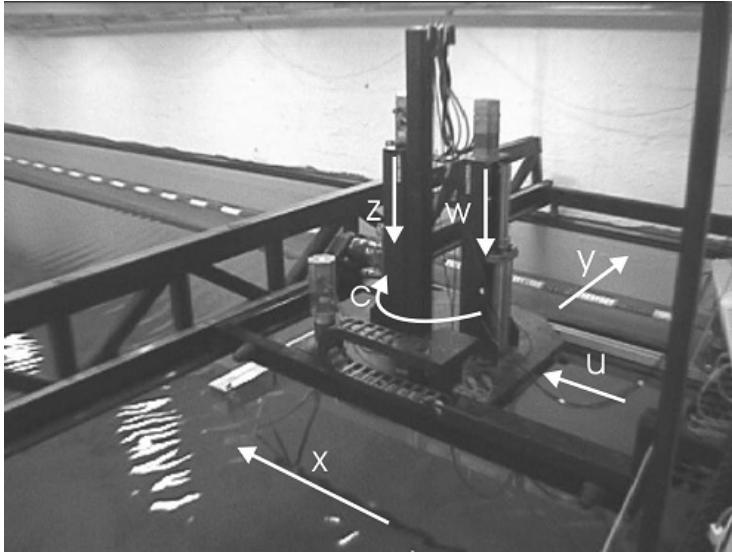


Figure 5.4: Coordinate system

## 5.2 Manual Operation of the Carriage

### 5.2.1 Setup

It is very important to select the Setup tab first before you start any operation of the carriage. As you can see in Figure 5.5, it is possible to change the travel parameters for all available axes. In principle, all axis parameters have different range limits. These are listed in Table 5.1.

All axes can be activated or deactivate by using the ON button.

For the X axis it is possible to activate a list of predefined Forward speeds. You will then have the ability to automatically change to a different speed on the next run. The list can be edited in the Main Tab Window.

By selecting the “Lock Z-W” button the Z-W axis will operate in parallel. They will use the Z-axis parameter setup.

Axis	Forward/Backward Speed		Acceleration Deceleration		Position Pos./Neg. Limit	
	Speed		% of 0 - 0.5	m/s <sup>2</sup>	0 - 22	[m]
X	0 - 2.0	[m/s]				
Y	0 - 1.0	[m/s]	% of 0 - 1.0	m/s <sup>2</sup>	0 - 4.5	[m]
U	0 - 1.0	[m/s]	% of 0 - 1.0	m/s <sup>2</sup>	0 - 1	[m]
C	0 - 10	[deg/s]	% of 0 - 20	deg/s <sup>2</sup>	0 - 255	[deg]
Z	0 - 1.0	[m/s]	% of 0 - 2.0	m/s <sup>2</sup>	0 - 0.5	[m]
W	0 - 1.0	[m/s]	% of 0 - 2.0	m/s <sup>2</sup>	0 - 0.5	[m]

Table 5.1: Operation Limit



Figure 5.5: Setup

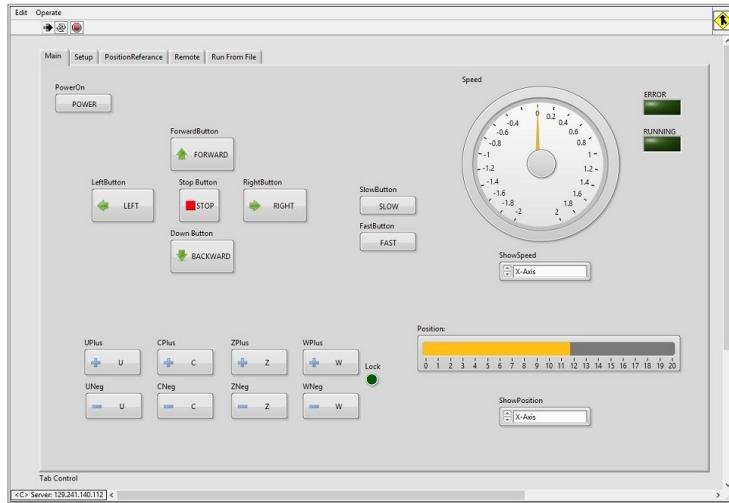


Figure 5.6: Main

### 5.2.2 Main/Standard Operation

All the activated axes will operate within the limits set in the Setup. Only one axis can operate at a time. If you hit the button for another axis than the running one, it will instantly stop and new one will start running. To stop the running axis, simply hit the stop button. If no buttons are operated carriage axis will run it hit limit position of the current axis.

If an error occurs, for some reason, it can be cleared by hitting the “Power” button. If the error keeps reoccurring, please look at the Troubleshooting section of this document or contact responsible MC Lab personnel.

The current speed and position of the active axis are displayed referred to the selected limits.

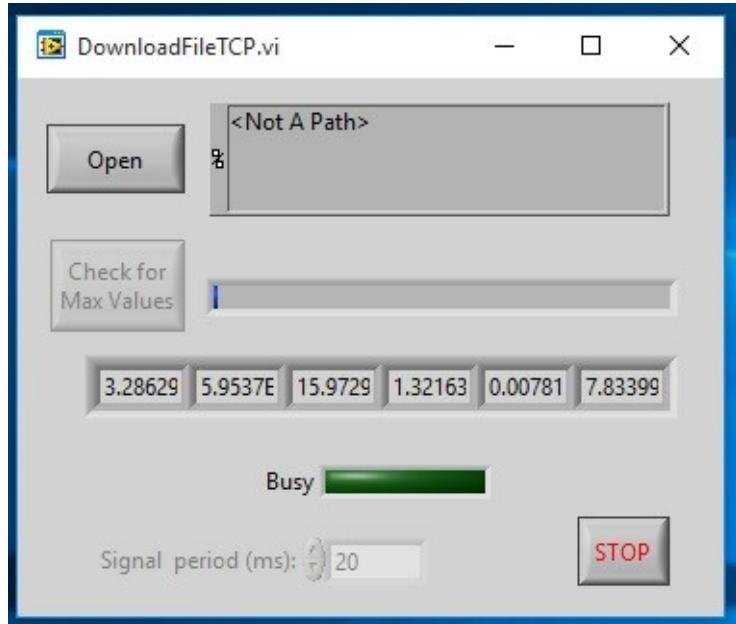


Figure 5.7: Run From File

## 5.3 Operation Controlled automatically from PC

### 5.3.1 The Trajectory Input File

All trajectories must be defined in a .mcl input file. The format of the file is slightly more general than allowed here and is the same as for the sloshing rig input. The entries in the file are

1. Time Step in ms, double precision integer (int32). Must be set to 10.
2. Number of channels, double precision integer (int32). Must be 6.
3. Position references in sequence: X(1),Y(1),U(1),C(1),Z(1),W(1), X(2),Y(2),... double precision real (float32).

The following MTALAB lines write the matrix body (6xN) to file on the correct format:

```
fid=fopen(filename,'wb');
head=[10;6];
count=fwrite(fid,head,'int32');
count=count+fwrite(fid,body,'float32');
fclose(fid);
```

The resulting input file must be transferred to the realtime computer at /home/ntuser/inputpos.mcl. Normally this is done automatically when the Load button on the LabVIEW GUI is pressed.

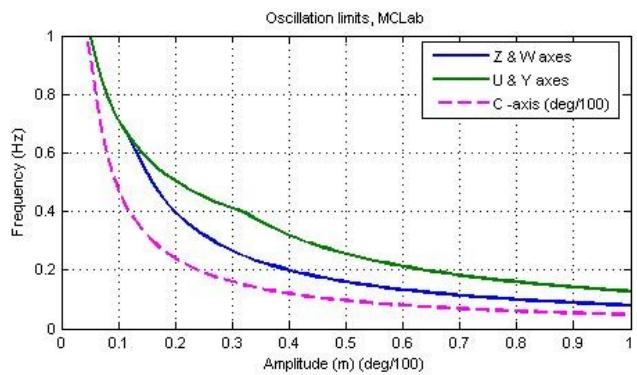


Figure 5.8: Operation Limit Amplitude vs. Frequency

## 5.4 Troubleshooting

-

## 5.5 Note

When the wagon is moving, no one is allowed to move on the sides of the basin.

## 5.6 Basic parameter identification

Jon master

## Chapter 6

# Wave generator

---

Get basic information  
from Astrid, including  
hacking of wave series

# **Chapter 7**

## **Current generator**

## Chapter 8

# CS Inocean Cat I Arctic Drillship

### 8.1 Mathematical model

---

Add material from Jon

## Chapter 9

# CS Enterprise I

### 9.1 Mathematical model

The proposed control design model is

$$\dot{\eta} = R(\psi)\nu \quad (9.1)$$

$$M\dot{\nu} = -C(\nu)\nu - D(\nu)\nu + \tau \quad (9.2)$$

where

- the pose and velocity vectors are

$$\eta = \begin{bmatrix} x \\ y \\ \psi \end{bmatrix} \in \mathbb{R}^3, \text{ and } \nu = \begin{bmatrix} u \\ v \\ r \end{bmatrix} \in \mathbb{R}^3,$$

respectively.  $(x, y)$  is the position and  $\psi$  the yaw angle or heading in the basin frame.  $(u, v)$  are the surge and sway velocities in the CSE1 vessel frame, and  $r$  is the yaw rate.

- the thrust force and moment vector is

$$\tau = \begin{bmatrix} X \\ Y \\ N \end{bmatrix} \in \mathbb{R}^3,$$

where  $(X, Y)$  is the surge and sway force vector, and  $N$  is the yaw moment.

- the three degrees of freedom (3 DOF) rotation matrix is

$$R(\psi) = \begin{bmatrix} \cos \psi & -\sin \psi & 0 \\ \sin \psi & \cos \psi & 0 \\ 0 & 0 & 1 \end{bmatrix}.$$

- the vessel inertia matrix is

$$M = \begin{bmatrix} m - X_{\dot{u}} & 0 & 0 \\ 0 & m - Y_{\dot{v}} & mx_g - Y_{\dot{r}} \\ 0 & mx_g - Y_{\dot{r}} & I_z - N_{\dot{r}} \end{bmatrix} = M^\top > 0.$$

Rigid body		Added mass	
Parameter	Value	Parameter	Value
$m$	14.79	$X_{\dot{u}}$	-2
$I_z$	1.76	$Y_{\dot{v}}$	-10
$x_g$	0.0375	$Y_{\dot{r}}$	-0
$y_g$	0.0	$N_{\dot{r}}$	-1

Table 9.1: CSE1 rigid body and added mass parameters

Hydro surge		Hydro sway		Hydro yaw	
Parameter	Value	Parameter	Value	Parameter	Value
$X_u$	-0.6555	$Y_v$	-1.33	$N_v$	0.0
$X_{uu}$	0.3545	$Y_{vv}$	-2.776	$N_{vv}$	-0.2088
$X_{uuu}$	-3.787	$Y_{vvv}$	-64.91	$N_{vvv}$	0.0
$X_v$	0.0	$Y_r$	-7.25	$N_r$	-1.9
$X_{vv}$	-2.443	$Y_{rr}$	-3.45	$N_{rr}$	-0.75
$X_{vvv}$	0.0	$Y_{rrr}$	0.0	$N_{rrr}$	0.0
.	.	$Y_{rv}$	-0.805	$N_{rv}$	0.130
.	.	$Y_{vr}$	-0.845	$N_{vr}$	0.080

Table 9.2: CSE1 damping parameters

- the coriolis and centripetal matrix is

$$C(\nu) = \begin{bmatrix} 0 & -mr & Y_{\dot{v}}v + (Y_{\dot{r}} - mx_g)r \\ mr & 0 & -X_{\dot{u}}u \\ -Y_{\dot{v}}v - (Y_{\dot{r}} - mx_g)r & X_{\dot{u}}u & 0 \end{bmatrix} = -C^\top(\nu).$$

- the damping matrix is

$$D(\nu) = \begin{bmatrix} d_{11}(u) & 0 & 0 \\ 0 & d_{22}(v, r) & d_{23}(v, r) \\ 0 & d_{32}(v, r) & d_{33}(v, r) \end{bmatrix},$$

where the damping components are

$$d_{11}(u) = -X_u - X_{|u|u}|u| - X_{uuu}u^2 \quad (9.3)$$

$$d_{22}(v, r) = -Y_v - Y_{|v|v}|v| - Y_{vvv}v^2 - Y_{|r|v}|r| \quad (9.4)$$

$$d_{23}(v, r) = -Y_r - Y_{|v|r}|v| - Y_{|r|r}|r| - Y_{rrr}r^2 \quad (9.5)$$

$$d_{32}(v, r) = -N_v - N_{|v|v}|v| - N_{vvv}v^2 - N_{|r|v}|r| \quad (9.6)$$

$$d_{33}(v, r) = -N_r - N_{|v|r}|v| - N_{|r|r}|r| - N_{rrr}r^2 \quad (9.7)$$

The rigid body inertia and hydrodynamic added mass parameters are given in Table 9.1.

The hydrodynamic damping parameters are given in Tables ?? and 9.2.

The model is valid for low-speed.

## **9.2 Model-in-the-loop simulation**

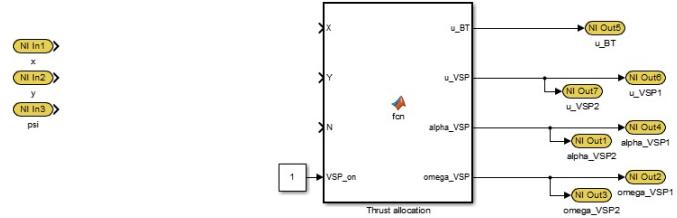


Figure 9.1: CSE1 `ctrl_student.slx` including thrust allocation

### 9.3 Processor-in-the-Loop simulation

Implementation of the student controller is done in the `ctrl_student.slx` Simulink template, depicted in Figure 9.1. Detailed implementation steps are given in Section 9.4.1.

The generic control system consists of several Simulink modules, the details of which are given in Appendix 13.2, a FPGA driver, described in Appendix 12.1.3, and two custom device drivers.

## 9.4 Basin testing

### 9.4.1 Student controller implementation

1. Unzip the CSE1 Veristand Project `CSE1.zip` to `C:\CSE1\`.<sup>1</sup>
2. Simulink implementation and compilation
  - (a) Update `ctrl_student.slx` according to your controller design. Additional input and output, resets and data logging may be added, as described in Section A.1.1.  
Do not alter the predefined input and output: `x`, `y`, `psi`, `u_BT`, `u_VSP1`, `u_VSP2`, `alpha_VSP1`, `alpha_VSP2`, `omega_VSP1` and `omega_VSP2`.
  - (b) Select a suitable solver, as described in Section A.1.2.  
The remaining configuration, such as target selection is preselected in the file.
  - (c) Compile the model as described in Section A.1.3. The MATLAB current folder should be `C:\CSE1\`, in order to ensure that the resulting `.out` file is created in `C:\CSE1\ctrl_student_niVeriStand_VxWorks_rtw`.
3. CSE1 Veristand Project configuration
  - (a) Open `CSE1.nivsproj`<sup>2</sup> to access the project.
  - (b) Update `ctrl_student.out`:
    - i. Open the System Explorer by double-clicking the system definition file `CSE1.nivssdf`.
    - ii. Browse the left pane tree, as seen in Figure 9.2, and select `ctrl_student`. Refresh by pushing the  icon.
    - iii. If necessary, add mappings.  
Do not change the existing mappings. Position input (`x`, `y`, `psi`) and controller output (`u_BT`, `u_VSP1`, `u_VSP2`, `alpha_VSP1`, `alpha_VSP2`, `omega_VSP1`, `omega_VSP2`) are already mapped as necessary.
    - iv. Save and close to return to the Project Explorer.
  - (c) Implement a suitable workspace, as described in Section A.2.3, for your controller in control screen 4: `ctrl_student`. Figure 9.3 shows control screen 4 before customization.

---

<sup>1</sup>Other paths are possible but require changing all VeriStand project paths.

<sup>2</sup>Not `CSE1.nivssdf`, since not only the system definition should be altered.

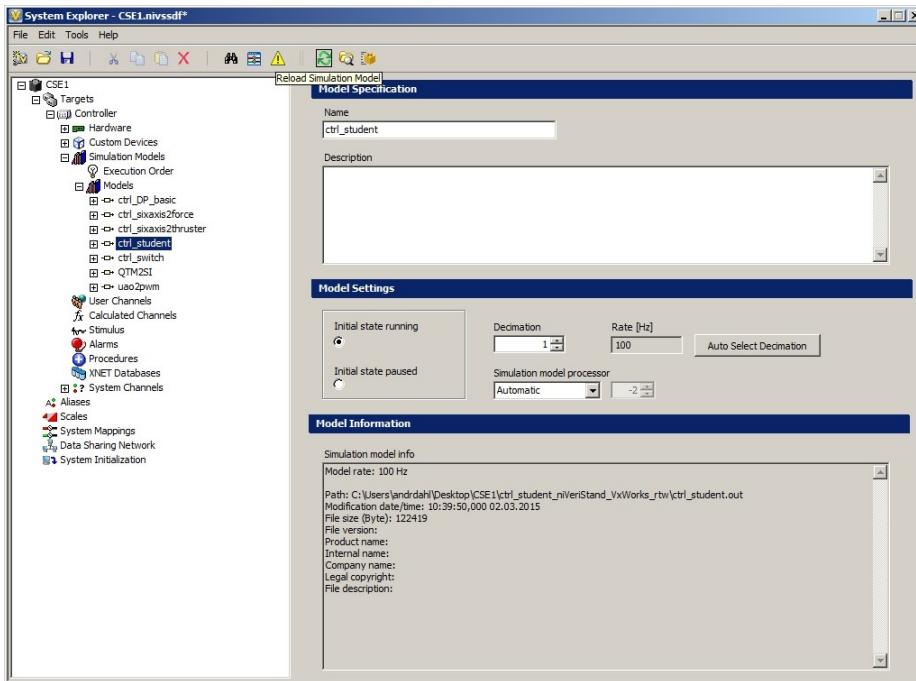


Figure 9.2: CSE1 Veristand Project simulation models


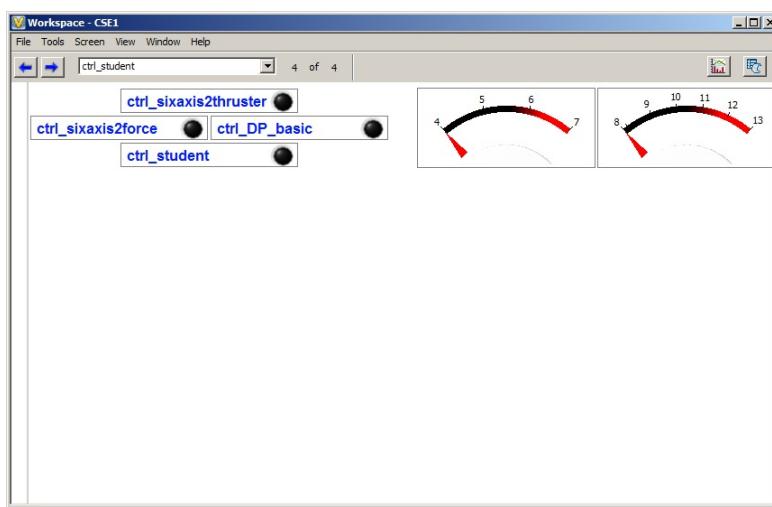


Figure 9.3: CSE1 Veristand Project ctrl\_student workspace

## 9.4.2 Ship launching procedure - before sailing

### 9.4.2.1 Power up and connection

1. Place the batteries adjacent to the watertight box: main battery battery (12 V) astern and secondary battery (6 V) in the bow.
2. Connect main battery: first the red wire to the red/positive pole, then the black wire to the black/negative pole<sup>3</sup>. cRIO LED nr.1 (power) will light up green.
3. Wait for cRIO and RPi start up.  
When complete, the Bluetooth dongle blue LED blinks evenly at approximately 1 Hz.
4. Turn on Sixaxis by pushing the PS3 button.  
When successfully connected, the Bluetooth dongle blue LED is almost constantly lit and the Sixaxis' red LEDs 1, 2, 3, and 4 blink at approximately 2 Hz.
5. Connect the secondary battery: red wire to the red/positive pole, then the black wire to the black/negative pole.  
The WiFi bridge Power LED will light up green.
6. Wait for WiFi connection to HILLab network.  
When connected, the WiFi bridge WLAN green LED turns on.

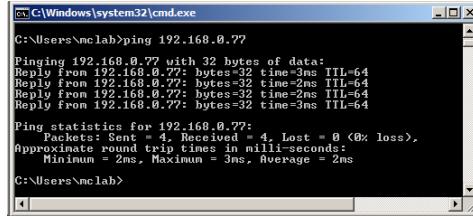

```
C:\Windows\system32\cmd.exe
C:\Users\nclab>ping 192.168.0.77

Pinging 192.168.0.77 with 32 bytes of data:
Reply from 192.168.0.77: bytes=32 time=3ms TTL=64
Reply from 192.168.0.77: bytes=32 time=2ms TTL=64
Reply from 192.168.0.77: bytes=32 time=2ms TTL=64
Reply from 192.168.0.77: bytes=32 time=3ms TTL=64

Ping statistics for 192.168.0.77:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 2ms, Maximum = 3ms, Average = 2ms

C:\Users\nclab>
```

Figure 9.4: Ping, successful access to CSE1

7. Verify laptop access: ping the CSE1 IP in the command prompt, as in Figure 9.4. While the round trip times may vary, it is essential to have 0% loss.
8. Gently place the vessel in the basin, avoiding any water splashes.

### 9.4.2.2 Positioning system

---

<sup>3</sup>The connection order of the wires should not matter. However, experiences favor this order of connection.

Sixaxis	Control mode
	<b>Manual thruster control</b> VSP speed: directional pad up/down $\pm 0.1$ Left joystick: VSP1 thrust Right joystick: VSP2 thrust L2/R2: BT thrust
	<b>Manual forces and moment control</b> VSP speed: user interface button on/off Left joystick: surge and sway forces L2/R2: yaw moment
	<b>Basic dynamic positioning (DP)</b> VSP speed: user interface button on/off Setpoint: user interface Gains: user interface
	<b>Student controller</b> User implemented controller

Table 9.3: Generic control modes

#### 9.4.3 Deploy control system

Verstand osv

A diagram representation of CSE1's control system is given in Figure ???. The first three controllers are predefined, while users may implement their own controller in the fourth.

The vessel can switch among four control modes, summarized in Table 9.3.

#### **9.4.4 Ship docking procedure - after sailing**

Undeploy the running project to disable all actuators.

Lift out of water avoiding water on rail.

Put CSE1 in its stand. The vessel should not be left on the water for extensive periods, i.e. overnight.

Remove and put used batteries to charge. Load fresh batteries in vessel.

Connect the Sixaxis gamepad to the laptop for charging.

#### **9.4.5 Troubleshooting**

# **Chapter 10**

## **CS Saucer**

### **10.1 Required Software**

NI LabVIEW software required to run the project “CyberShip Saucer”:

1. LabVIEW 2014
2. LabVIEW 2014 myRIO Toolkit
3. LabVIEW 2014 Real-Time Module
4. LabVIEW Control Design and Simulation Module

### **10.2 Deployment**

When the power source is connected and the Wi indicator lights up, the vessel is ready to deploy.

- Run the host application “mainHost.vi”.
- Deploy the target application “main.vi”.

The vessel is now operational.

### **10.3 NI Dashboard Manual Control**

The CS Saucer can be controlled directly from an Android or a iOS device with the NI Dashboard app.

## 10.4 Manual Thruster Control

- Make sure that your device is connected to the local are network with a static ip adress.
- Create a new Dashboard with six slide controls, these will be the six control inputs  $u_0, u_1, u_2, \alpha_0, \alpha_1$  and  $\alpha_2$ .
- Congure the scale of the slide controls so that  $u \in [-1, 1]$  and  $\alpha \in [-114, 114]$
- Tap a control to connect it to its corresponding shared variable node on the myRIO. The ip adress for the myRIO-Saucer is: 192:168:0:99.
- The shared variable nodes for the manual thruster control are located in the library “libctrlMaulThruster”. Be careful to only use the variables with the label “DSH”.
- Start the dashboard.

## 10.5 Manual Force Control

- Make sure that your device is connected to the local are network with a static ip adress.
- Create a new Dashboard with three slide controls, this will be the commanded force vector  $\tau = [X, Y, N]^T$ .
- Congure the scale of the slide controls so that  $X = [-9; 9]$ ,  $Y = [-9; 9]$  and  $N = [-4; 4]$
- Tap a control to connect it to its corresponding shared variable node on the myRIO. The ip adress for the myRIO-Saucer is: 192:168:0:99.
- The shared variable nodes for the manual force control are located in the library “libctrlMaulForce”. Be careful to only use the variables with the label “DSH”.
- Start the dashboard.

## 10.6 Data logging

Continuous data logging has been implemented in the main target application. On initialization, a “.csv” le is created for each of the control modes. The log le for a control mode will only be populated when that particular control mode is active. Each log le is created with a control mode identier and a time stamp, e.g. “dp114700”. The log le format “.csv” (comma separated values) is highly compatible with MATLAB and enables easy import and post processing of the data in MATLAB. The import code in the script is easily created using MATLAB’s import le wizard which generates code for le import for a specic le.

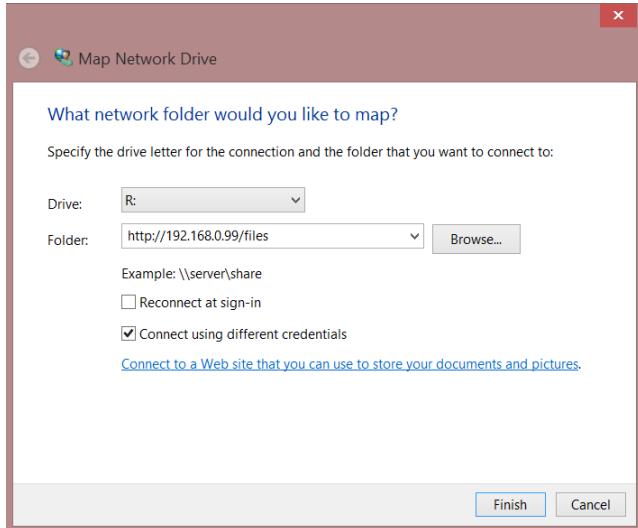


Figure 10.1: Map network drive to the NI myRIO.

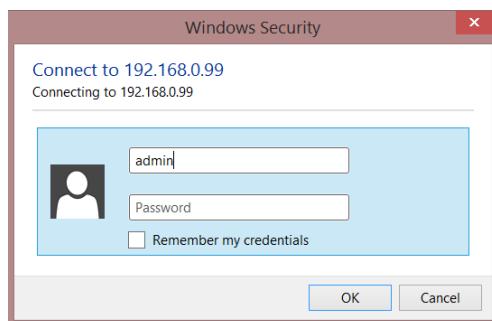


Figure 10.2: Login credentials on the myRIO-Saucer. The password is blank.

The log files on the myRIO are stored in the “les/tmp” folder which is a temporary folder that is cleared on reboot. Saving the log files in this directory ensures that the target does not use all of its storage memory to store old log files. A log file can be easily exported from the target by using the “Map network drive” feature in Windows. Simply map to the static ip of the target as shown in Figure 10.1. Remember to check the “Connect using different credentials” box. When prompted for a password, type in “admin” as the user and leave the password blank as shown in Figure 10.2. The “les/tmp” directory of the target is now available in the windows file explorer as seen in Figure 10.3.

## 10.7 Charging the Traxxas LiPo Battery

Connect both the balancing plug and the main power plug to the charger before starting a charge. Then place the battery in the flame resistant bag. Ensure that the charger is set to LiPo mode before pressing start. The charging indicator

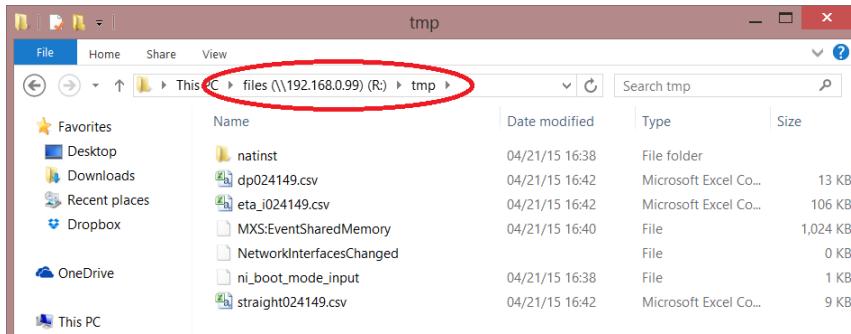


Figure 10.3: The log files are saved in the tmp folder on the myRIO

will turn green when the battery is fully charged.

Discharging the battery lower than 9V can destroy it or lead to reduced capacity and performance. It is therefore recommended that the battery should be charged when reaching a voltage of 11.1. The voltage of the battery can be measured with a voltmeter on the balancing plug. Using the ground wire in the balancing plug, the voltage of each of the cells can be measured from three remaining wires in the plug. If the LiPo battery is discharged below 9V it will not charge in LiPo mode. It is therefore wise to stay well above this limit. Should this happen, the battery can be charged in "NiMh" mode for maximum 10 seconds. This has proved to be effective for getting the voltage above 9V and able to charge in LiPo mode again. However it should be stressed that this measure be used with extreme caution and only as a last resort.

## Chapter 11

# ROV Neptunus

k

## **Part III**

# **Laboratory Staff Guide**

## Chapter 12

# cRIO-based control system setup

### 12.1 cRIO

The cRIO runs Wind River VxWorks real-time operating system.

#### 12.1.1 Ethernet ports

The cRIO has two Ethernet ports the primary communicates with the PC and the secondary with the Raspberry PI.

##### 12.1.1.1 Primary

Set fixed IP, set fixed IP on HIL-computers

##### 12.1.1.2 Enabling the secondary ethernet port

1. Start *NI MAX*
2. In the left pane tree, select the cRIO under *Remote Systems*
3. Open the *Network Settings* tab (located at the bottom of the window)
4. Set *Adapter Mode* to *TCP/IP Network*
5. Set *Configure IPv4 Address* to *Static*

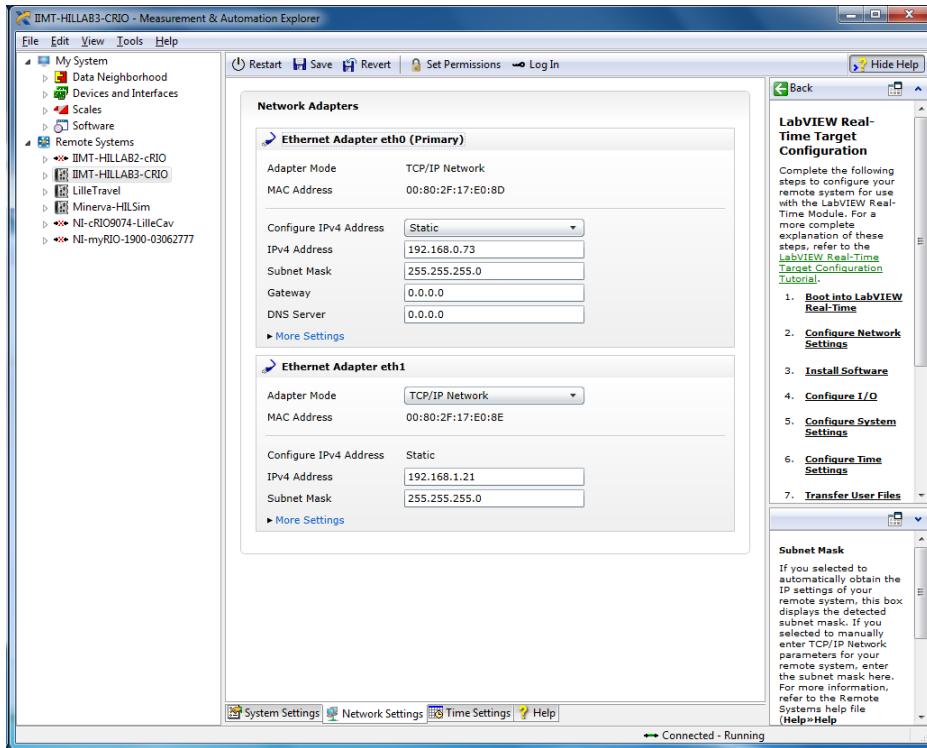


Figure 12.1: NI MAX - Network Settings

### 12.1.2 Update cRIO software

To be able to run the models on the cRIO, the software version on the cRIO and PC must match. In addition you must install the NI Veristand Engine. Software changes on the cRIO is handled in NI Max.

#### 12.1.2.1 Update

1. Open NI Max
2. Find your cRIO on the left hand side and click it
3. Click Software, and then Add/Remove Software located on the top pane, see Figure 12.2
4. A new window will now open. Choose the option that matches your LabVIEW/Veristand edition (in our case 14.0 or 14.0.1) under LabVIEW Real-Time 14.0.0 and click next. See Figure 12.3
5. Click next without making any changes
6. Click next without making any changes
7. Wait for the installation to finish and the cRIO to reboot

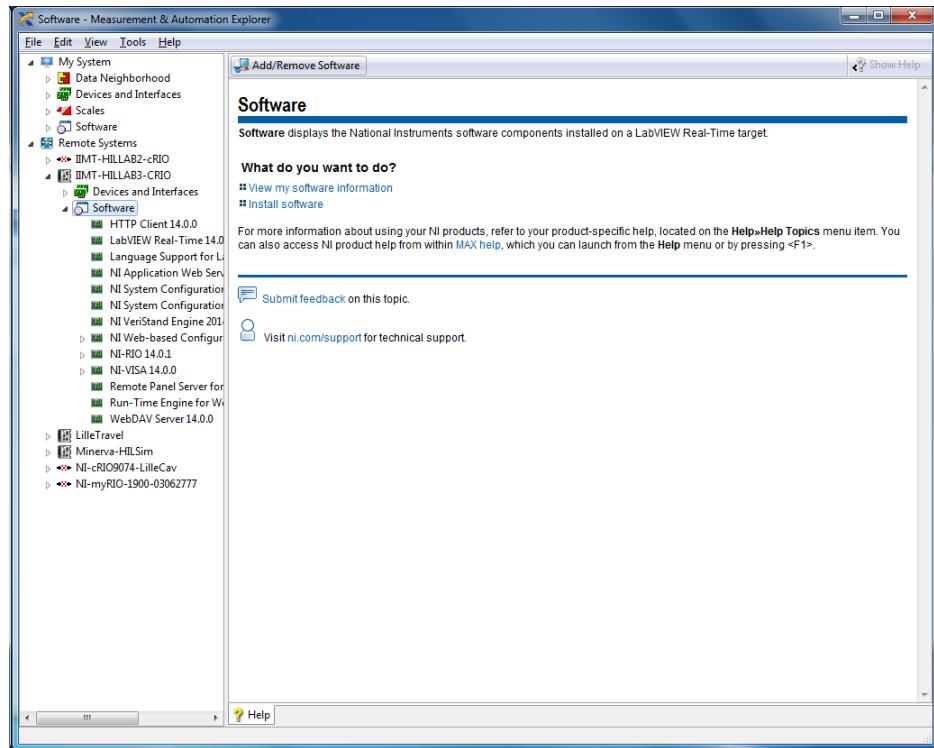


Figure 12.2: NI MAX - Software Update 1

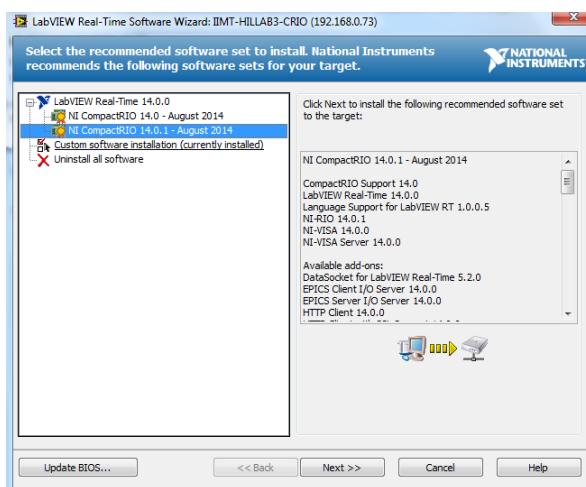


Figure 12.3: NI MAX - Software Update 1

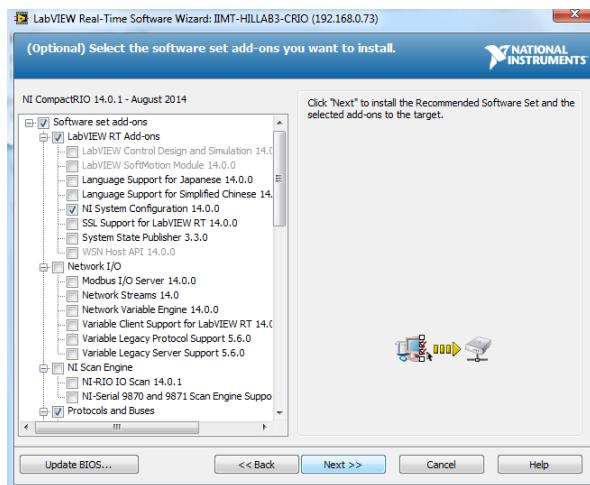


Figure 12.4: NI MAX - Software Update 3

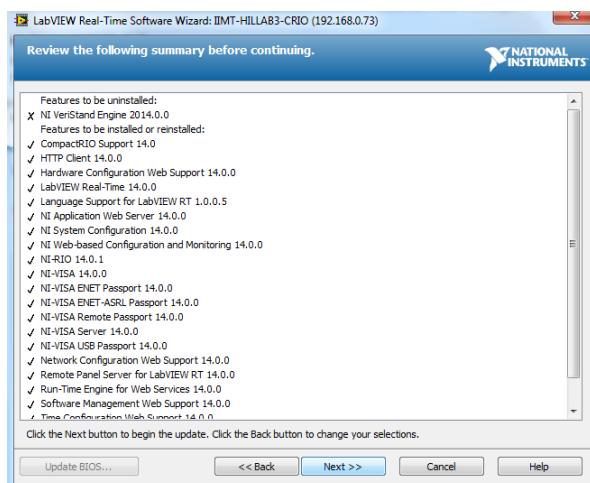


Figure 12.5: NI MAX - Software Update 4

### 12.1.2.2 NI Veristand Engine

1. Repeat step 1-3 from the previous guide
2. Now you choose Custom Software installation in the menu, see Figure 12.6
3. Ignore the warning, See Figure 12.7
4. Locate NI Veristand Engine 2014 0.0 and click install feature. See Figure 12.8
5. Click your way through the rest of the installation and let the cRIO reboot.

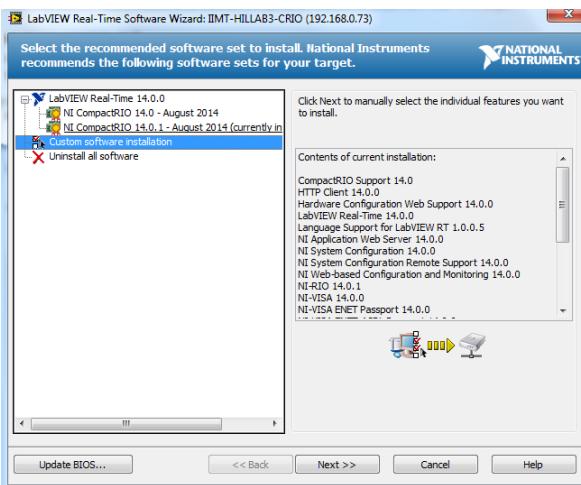


Figure 12.6: NI MAX - NI Veristand Engine installation 1

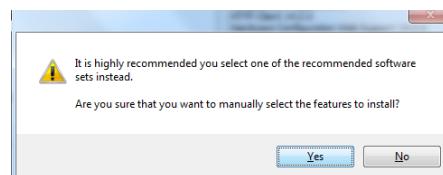


Figure 12.7: NI MAX - NI Veristand Engine installation 1

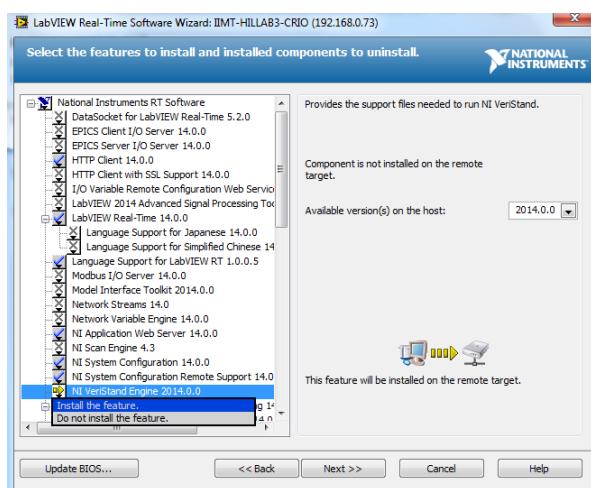


Figure 12.8: NI MAX - NI Veristand Engine installation 1

### 12.1.3 Create FPGA target and XML

If you do not have a Veristand FPGA target at your disposal, follow the steps below. If you have a target available and just need to install it in NI Veristand, please jump to the next subsection

1. Open LabVIEW and create new project. We have done this in LabVIEW 2013 because of some installation issues with LabVIEW 2014, but the procedure should be the same for both editions.
2. Choose NI Veristand FPGA Project in project templates and proceed.
3. Choose CompactRIO Reconfigurable Embedded System and click next.
4. You will now get the choice between letting LabVIEW detect your cRIO system or configure it yourself. If you are connected to the cRIO and it has all of the I/O ports connected, the option “Discover existing system” is simpler and therefore recommended. If you do not have your cRIO connected choose “Create new system”, this is the version that will be worked through here.
5. Select your controller, in our case cRIO-9024.
6. Select your FPGA target, in our case cRIO-9113.
7. Then you select your I/O modules to the correct slots. In our case NI 9215 in slot 1 and NI 9474 in slot 4.
8. You are now finished with configuring your project. Press next.
9. The project menu will now appear and should look something like Figure 12.18. Select the LabVIEW VI as demonstrated our is called Custom Personality FPGA.vi
10. The UI window will now present itself, select window and show block diagram.
11. You should now see a block diagram similar to Figure 12.19. You will now have to redesign this to look like Figure 12.20. This will be valid for our system, if you have different I/O modules the block diagram need to reflect this.
12. Now, return to the Project explorer and select Build Specifications and Custom Personality FPGA
13. A new window will open. Check that the name and project path is correct and press build.
14. Select your preferred compile server. The compilation process will take quite some time (approx 15-30 min).
15. When the compilation process is finished, the last step is to edit the automatically generated XML file. You will now have to find your project directory in Windows. Here there will be a folder called bitfiles which contains the files you compiled in the last step, there will also be a .XML file. The point of editing this file is to match the actually compiled VI, meaning the packets must match the connected I/O. The recommended

way to edit the file is to copy our XML file from: Dropbox\TMR4243 - LAB\04 cRIO software\FPGA IO. You will have to make sure that the name of your bitfile matches the name in the XML file as seen in Figure 12.25, also make sure the I/O modules matches your setup.

16. Copy the bitfiles from the bitfile folder to the level above so that the bitfile and the XML file is in the same folder.

Documentation: <https://decibel.ni.com/content/docs/DOC-13815>

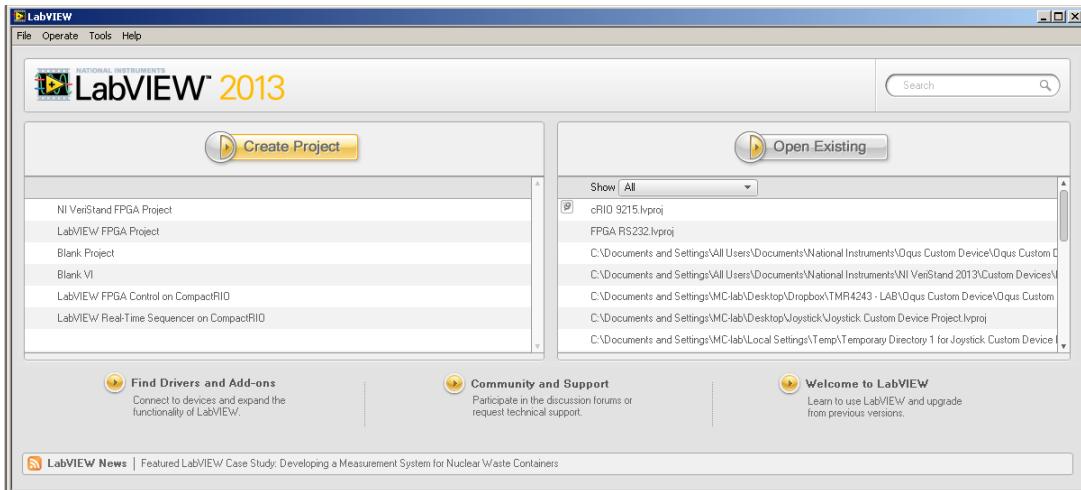


Figure 12.9: Create Labview FPGA target and XML - 1

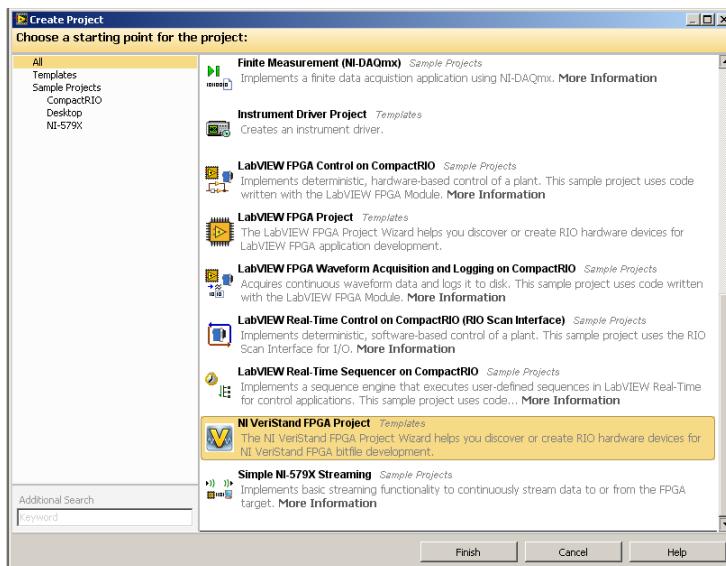


Figure 12.10: Create Labview FPGA target and XML - 2

Veristand FPGA programming

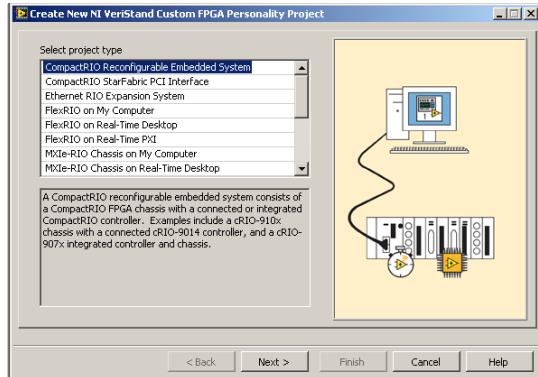


Figure 12.11: Create Labview FPGA target and XML - 3

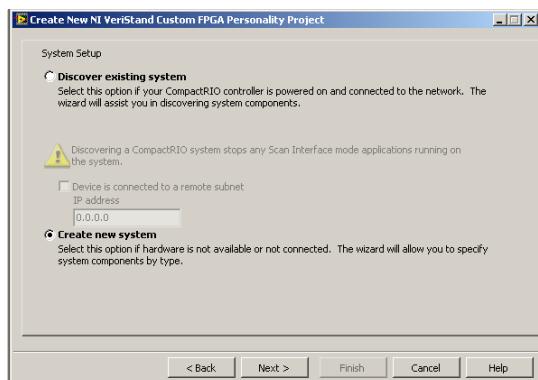


Figure 12.12: Create Labview FPGA target and XML - 4

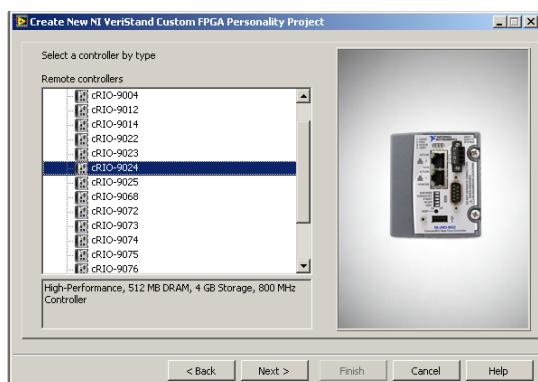


Figure 12.13: Create Labview FPGA target and XML - 5

In order to access the analogue and digital I/O modules on our cRIO from Veristand, it is necessary to create a FPGA target in Labview with Labview and you will have to write a custom XML file.

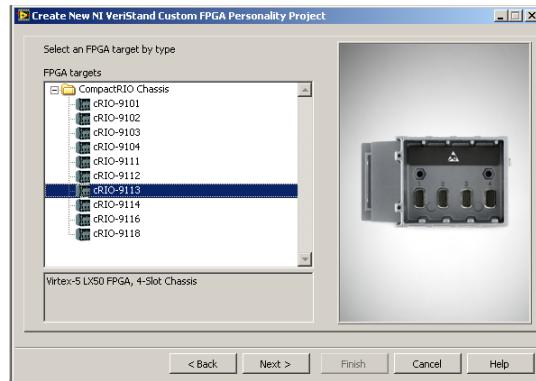


Figure 12.14: Create Labview FPGA target and XML - 6

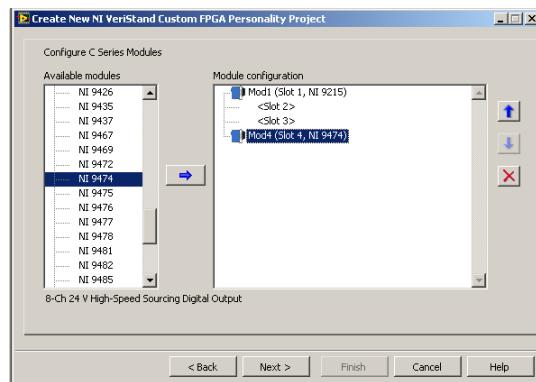


Figure 12.15: Create Labview FPGA target and XML - 7

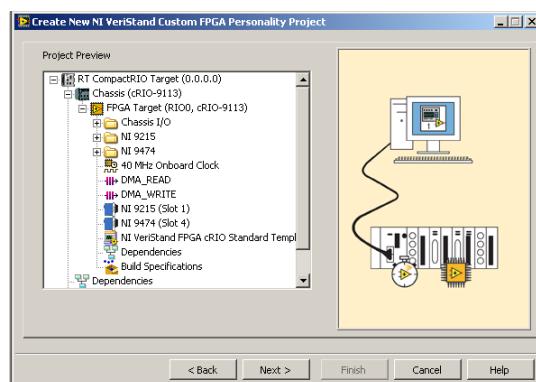


Figure 12.16: Create Labview FPGA target and XML - 8

### 12.1.3.1 Install in veristand

The Veristand software does not recognize the physical I/O components of the cRIO. It is necessary to write a specific FPGA mapping for the specific setup. This results in a XML file that maps the ports.

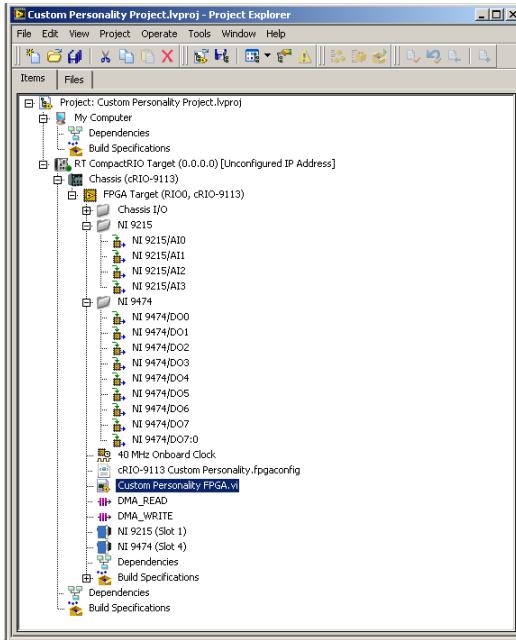


Figure 12.17: Create Labview FPGA target and XML - 9

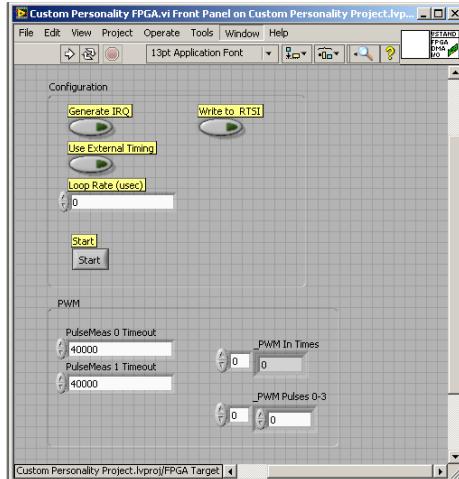


Figure 12.18: Create Labview FPGA target and XML - 10

To add this file to your Veristand project, enter the system explorer and find the FPGA pane under *targets\controller\hardware\chassis*, as seen in figure 12.26.

The next step is to find your XML file. In this case called cRIO-9113 Ex, it is very important that the XML file is placed on level above the FPGA bitfile folder in the directory system, as the files are really being used are the FPGA bitfiles.

The menu in should now look something like Figure 12.27, here you can see the

analogue input signals and the digital output PWM signals. These can again be linked to other signals as seen in Figure12.33.

## PWM

**Ticks og sånt** tick = FPGA clock pulse

$$\text{tick in seconds} = \frac{1}{\text{frequency}} = \frac{1}{40MHz} = \frac{1}{40 * 10^6} = 25 * 10^{-9} = 25ns$$

output at 50 Hz demands output every

$$\frac{40MHz}{50Hz} = \frac{40 * 10^6}{50} = 800000 \text{ tick}$$

**VeriStand FPGA programming** LabView -> Create project -> All -> NI VeriStand FPGA project -> Compact RIO -> Discover existing system -> Velge eget utstyr -> Vente på discovering -> I Project explorer \*.vi (er bitfilen) \*.fpgaconfig (egentlig XML) Endre på \*.vi Fjerne overfølgende pakker Oppdatere antall pakker i XML-filen og fjerne pakker som ikke er aktuelle, oppdatere tall på beholdte pakker. Kompiler

Kopier bit-file ut i samme mappe som \*.fpgaconfig I System exlporer, FPGA -> Add FPGA target -> Finne \*.fpgaconfig

Analog input

Eirik: FPGA-greier  
osv

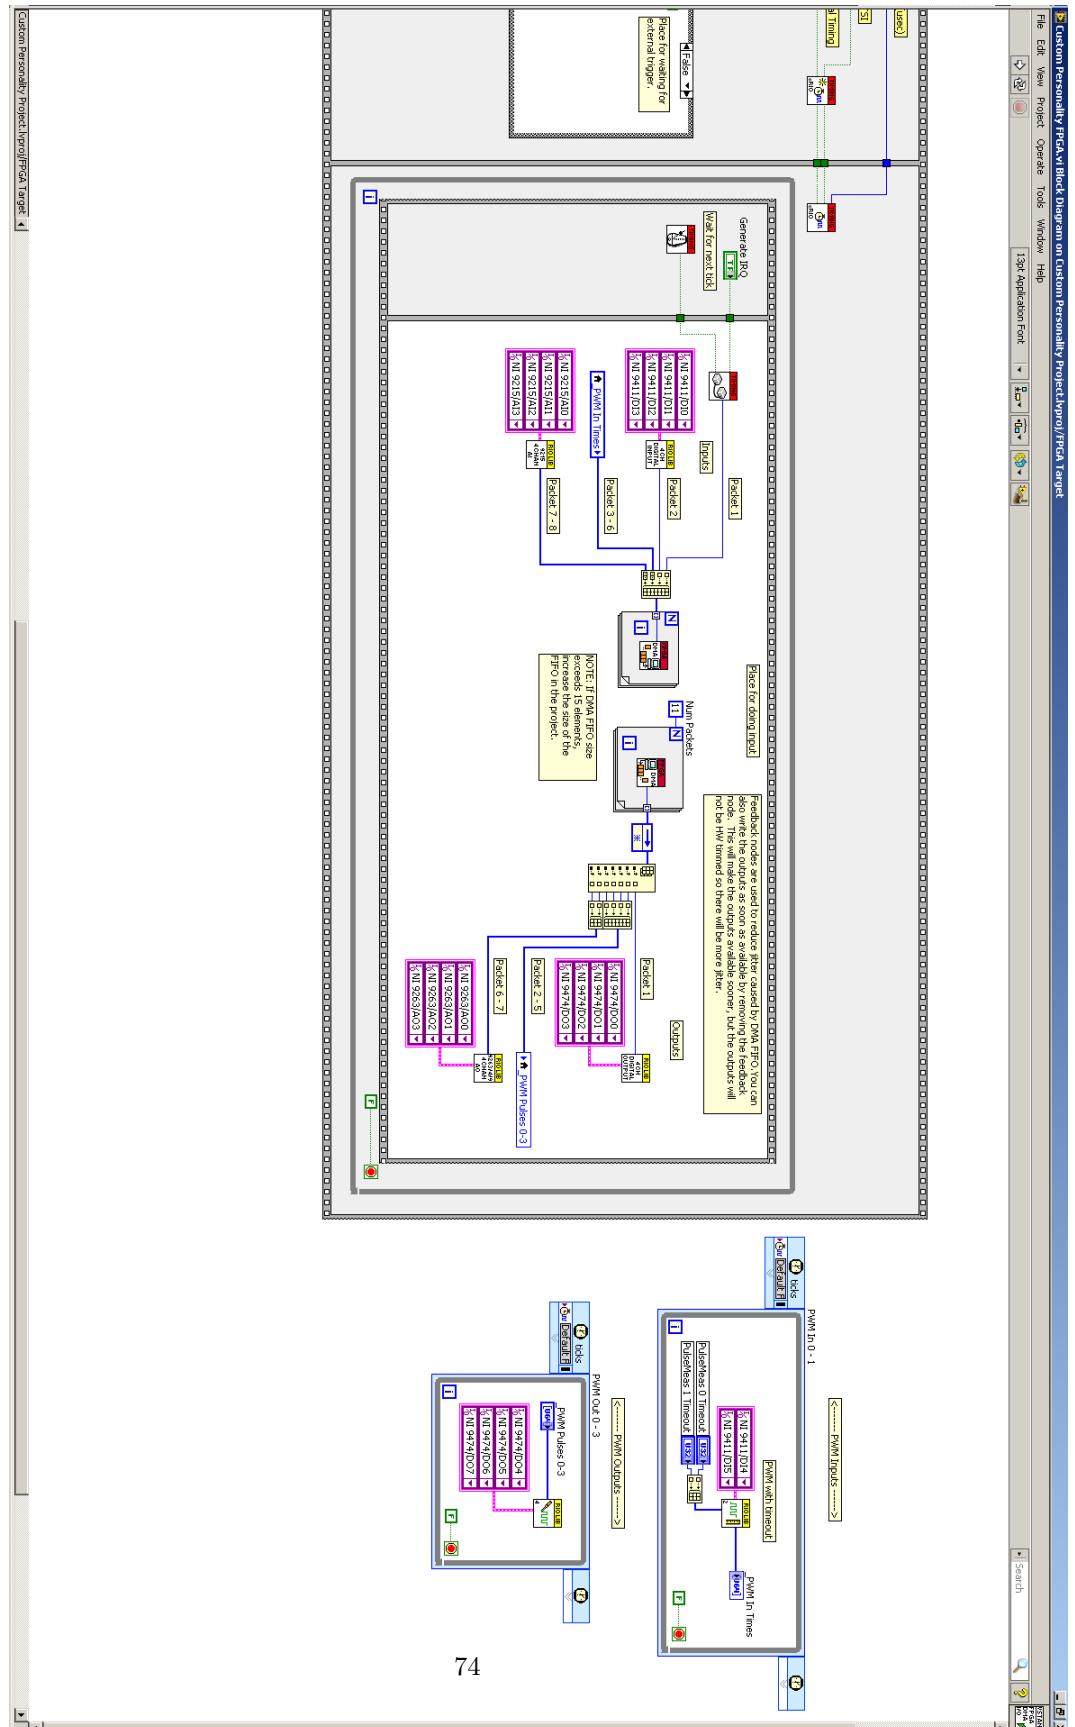


Figure 12.19: Create Labview FPGA target and XML - 11

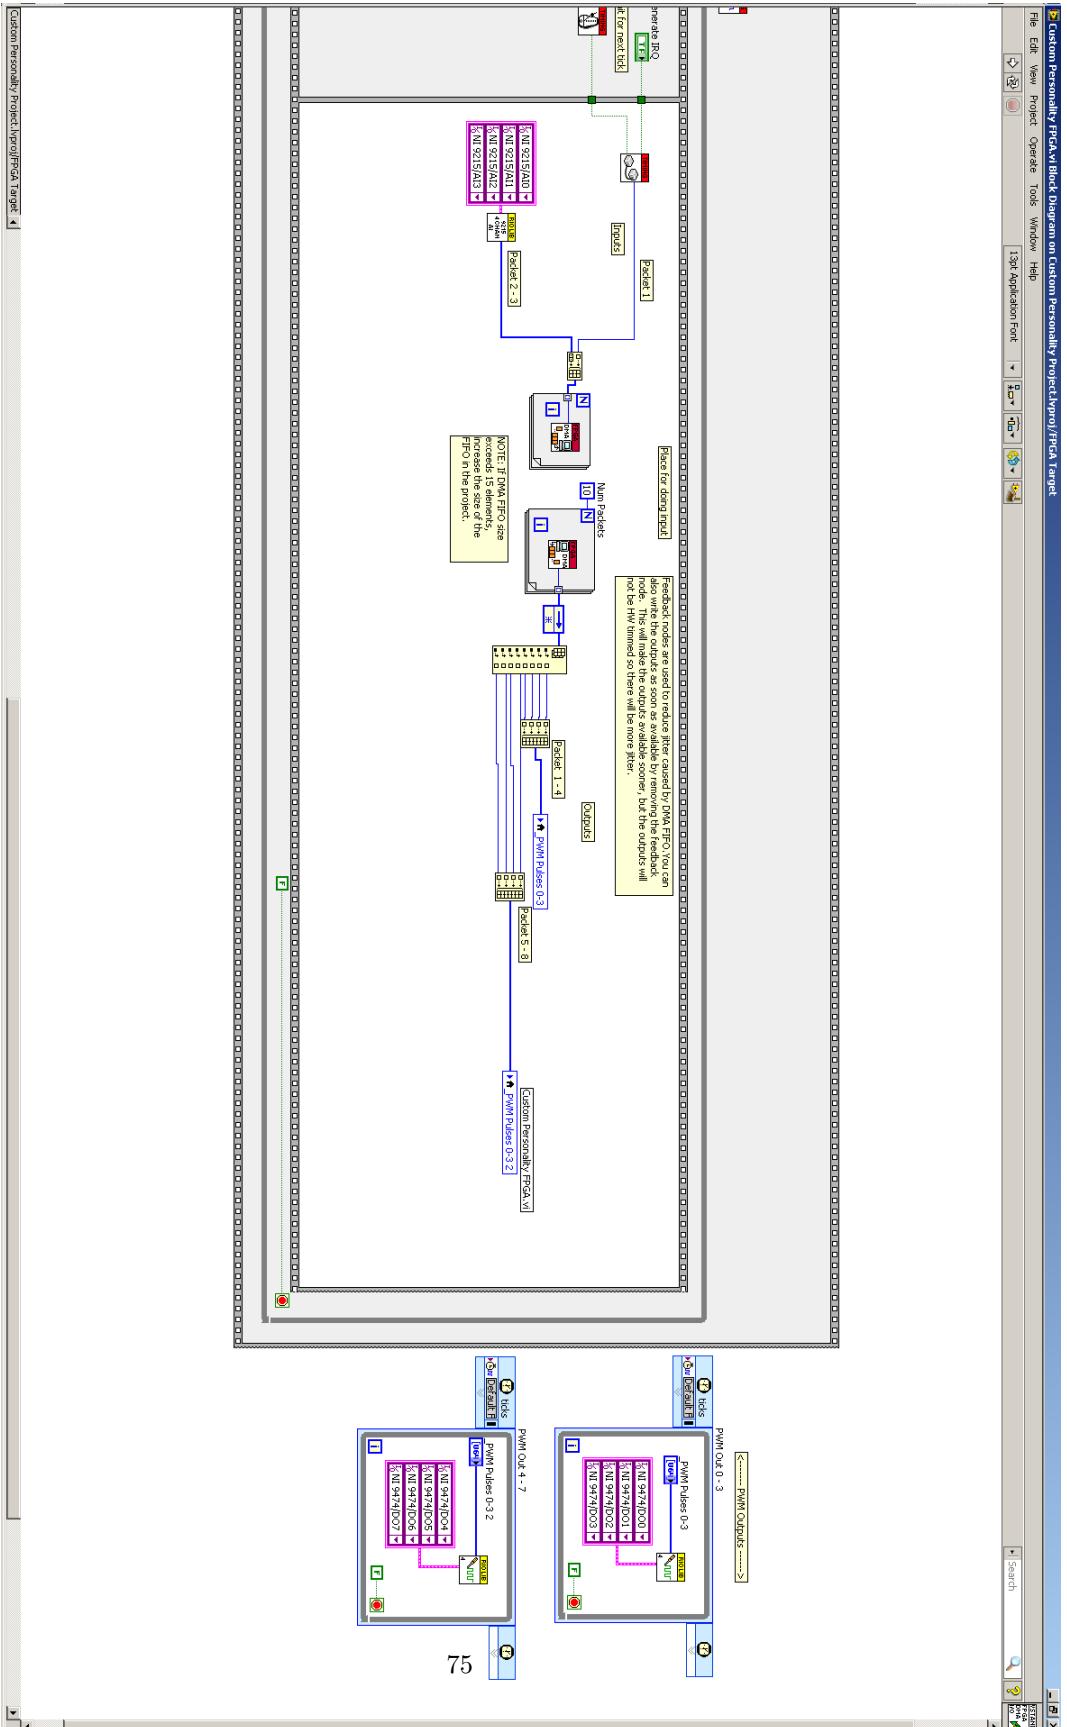


Figure 12.20: Create Labview FPGA target and XML - 12

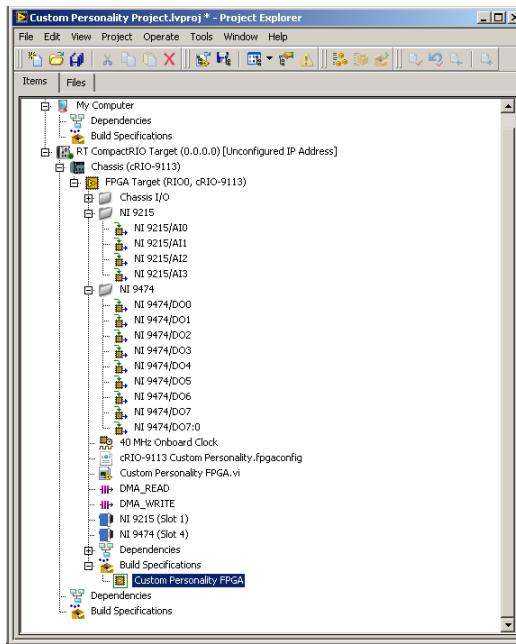


Figure 12.21: Create Labview FPGA target and XML - 13

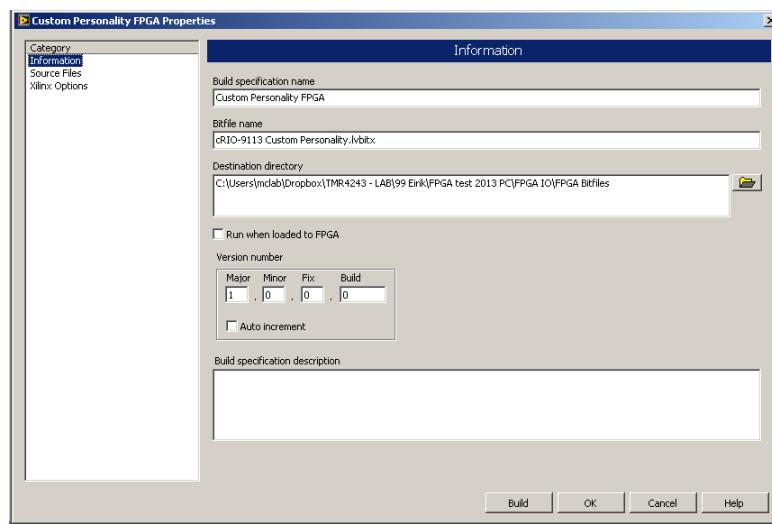


Figure 12.22: Create Labview FPGA target and XML - 14

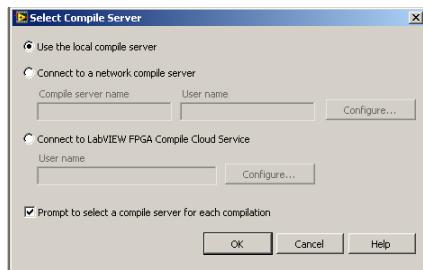


Figure 12.23: Create Labview FPGA target and XML - 15


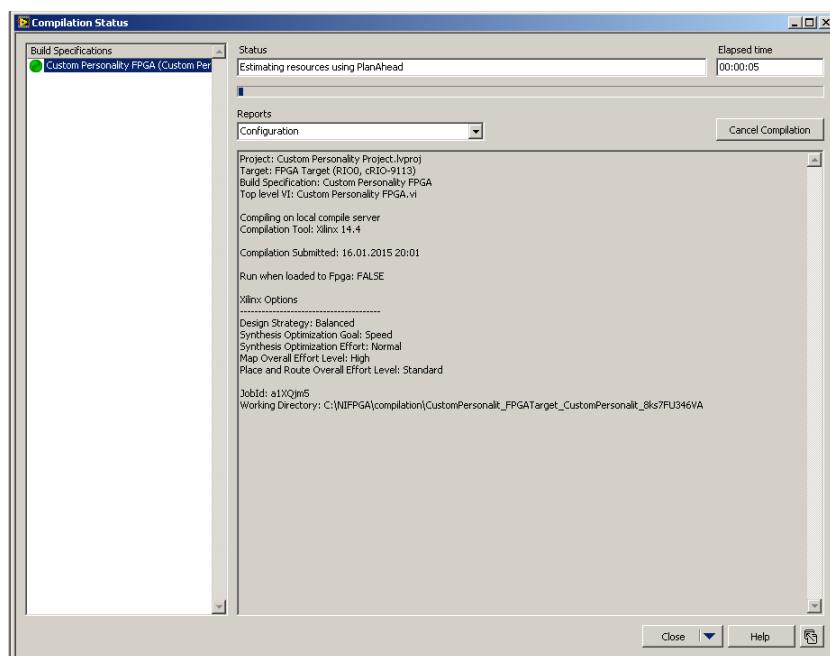


Figure 12.24: Create Labview FPGA target and XML - 16

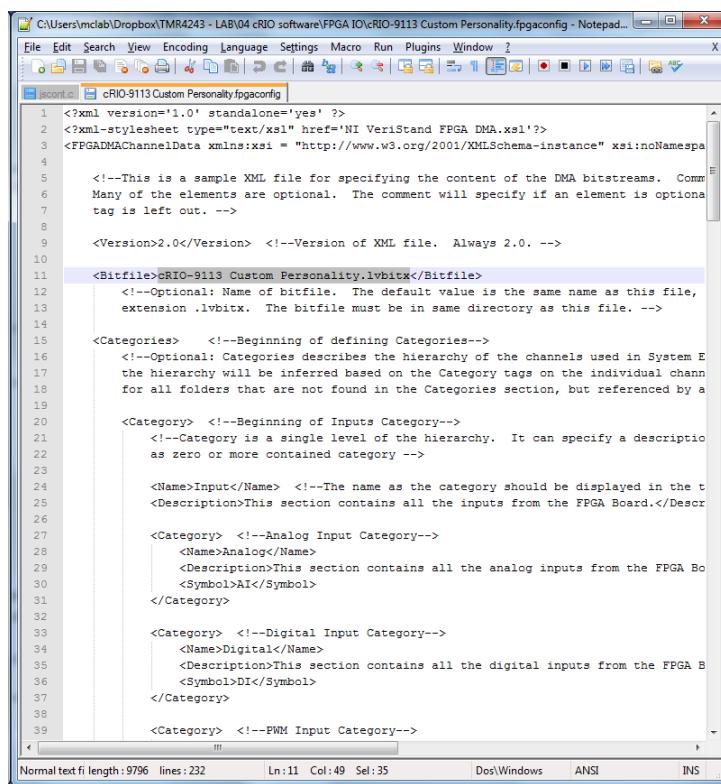

```

1 <?xml version='1.0' standalone='yes' ?>
2 <?xmlstylesheet type="text/xsl" href="NI VeriStand FFGA DMA.xsl'?>
3 <FFGADMAChannel1Data xmlns:xsi = "http://www.w3.org/2001/XMLSchema-instance" xsi:noNamespaceSchemaLocation="NI VeriStand FFGA DMA.xsd">
4
5   <!--This is a sample XML file for specifying the content of the DMA bitstreams. Comment Many of the elements are optional. The comment will specify if an element is optional or not. -->
6
7   <Version>2.0</Version> <!--Version of XML file. Always 2.0. -->
8
9   <Bitfile>cRIO-9113 Custom Personality.lvbitx</Bitfile>
10  <!--Optional: Name of bitfile. The default value is the same name as this file, extension .lvbitx. The bitfile must be in same directory as this file. -->
11
12  <Categories> <!--Beginning of defining Categories-->
13    <!--Optional: Categories describes the hierarchy of the channels used in System E. The hierarchy will be inferred based on the Category tags on the individual channels for all folders that are not found in the Categories section, but referenced by a
14    <Category> <!--Beginning of Inputs Category-->
15      <!--Category is a single level of the hierarchy. It can specify a description as zero or more contained category -->
16
17      <Name>Input</Name> <!--The name as the category should be displayed in the target -->
18      <Description>This section contains all the inputs from the FPGA Board.</Description>
19
20      <Category> <!--Analog Input Category-->
21        <Name>Analog</Name>
22        <Description>This section contains all the analog inputs from the FPGA Board.</Description>
23        <Symbol>AI</Symbol>
24      </Category>
25
26      <Category> <!--Digital Input Category-->
27        <Name>Digital</Name>
28        <Description>This section contains all the digital inputs from the FPGA Board.</Description>
29        <Symbol>DI</Symbol>
30      </Category>
31
32      <Category> <!--PWM Input Category-->
33        <Name>PWM</Name>
34        <Description>This section contains all the PWM inputs from the FPGA Board.</Description>
35        <Symbol>PWMS</Symbol>
36      </Category>
37
38      <Category> <!--Timing Input Category-->
39        <Name>Timing</Name>
40        <Description>This section contains all the timing inputs from the FPGA Board.</Description>
41        <Symbol>TIN</Symbol>
42      </Category>
43
44    </Category>
45
46  </Categories>
47
48  <!--Optional: DMA Channel 1 Data-->
49
50  <DMAChannel1Data>
51
52    <!--Optional: DMA Channel 1 Data-->
53
54  </DMAChannel1Data>
55
56</FFGADMAChannel1Data>

```

Figure 12.25: Create Labview FPGA target and XML - 17

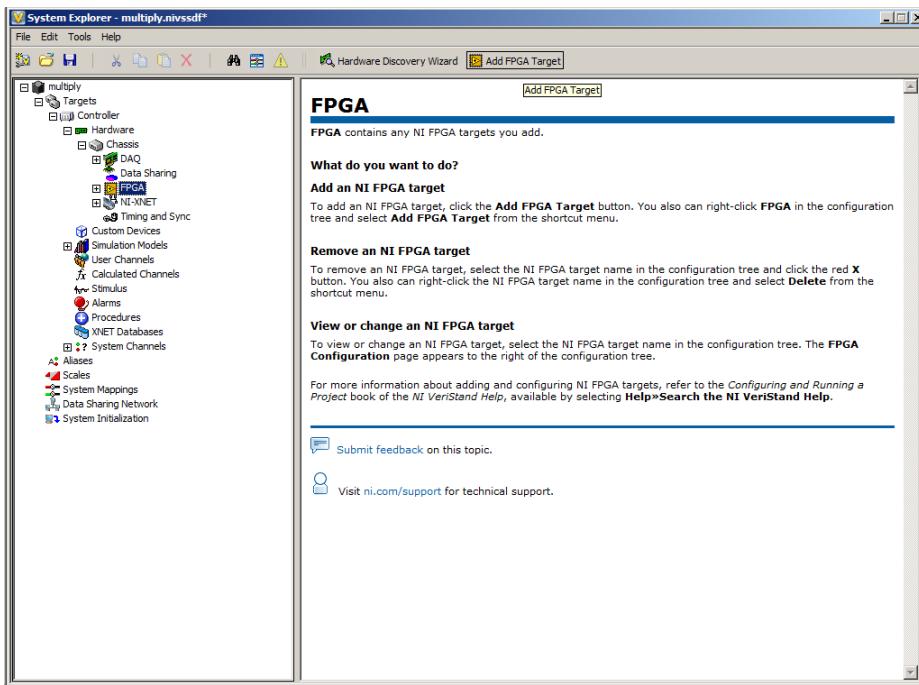


Figure 12.26: FPGA1

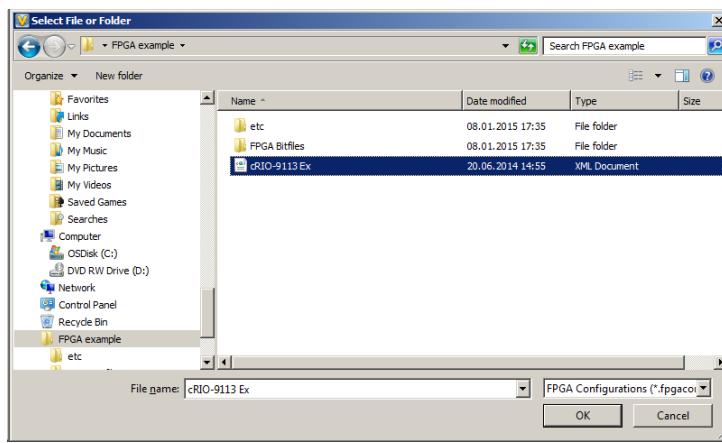


Figure 12.27: FPGA2

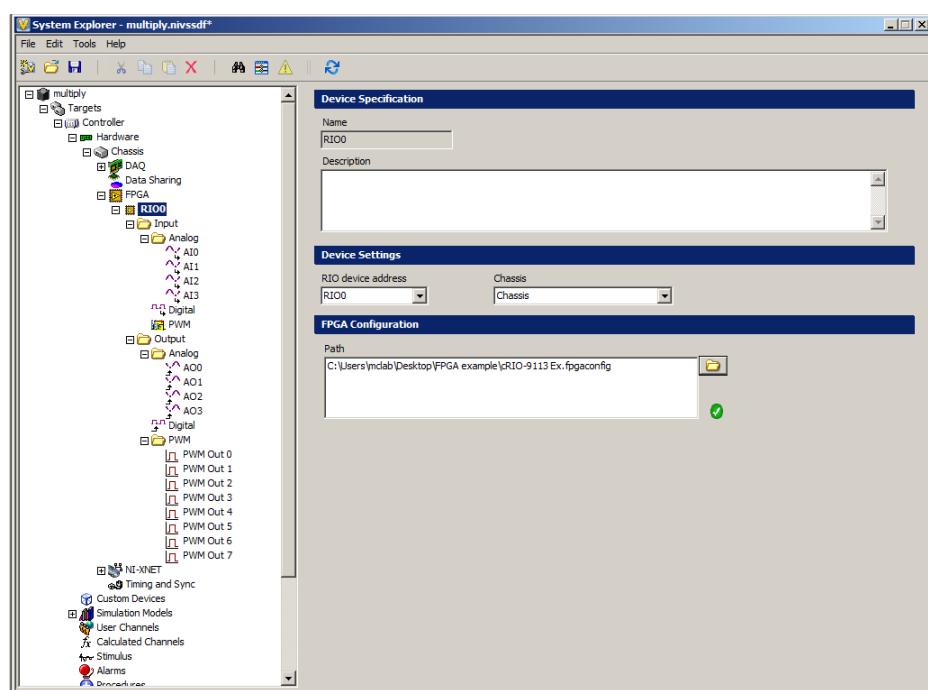


Figure 12.28: FPGA3

### 12.1.4 Installing custom device driver

**Create** Torgeir Wahl has built the custom device driver for taking Oqus and PS3 controller input to Veristand

**Install** In order to use a RPi to send joystick commands to the cRIO it is necessary to build a custom device driver. In our case Torgeir Wahl has built a driver, and this guide will show how to install the driver.

The first step is to copy the whole directory (folder named WL\_Joystick) of the custom device driver into the correct directory on your computer:

C:\Users\Public\Documents\National Instruments\NI VeriStand 2014\Custom Devices

The directory should now contain something like Figure 12.29.

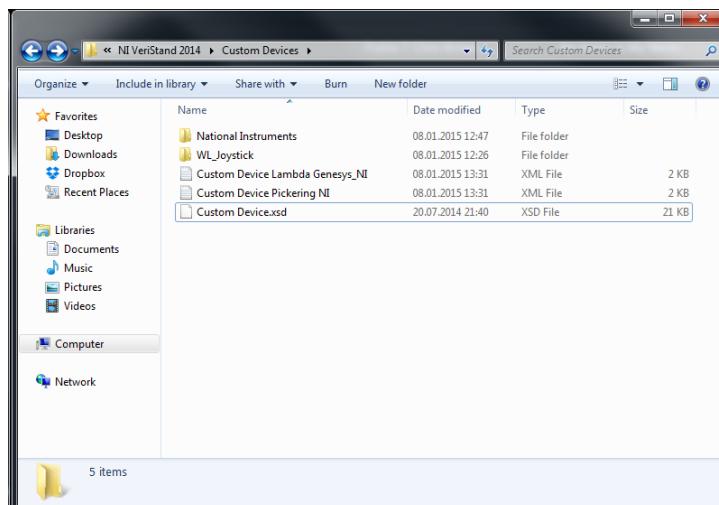


Figure 12.29: Custom device folder

The next step is to add custom device to your project. This is done in the system explorer, which is found as seen in Figure 12.30.

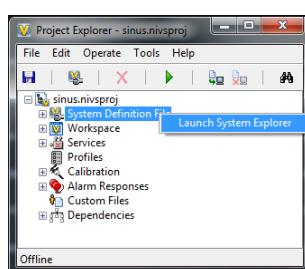


Figure 12.30: VeriStand launch system explorer

When in the system explorer, adding the custom device should be as simple as right clicking the custom device pane and choosing WL\_Joystick, as in Figure

12.31. If you do not find the custom device WL\_Joystick, the most likely problem is that the placement of the custom device folder from step 1 is wrong.

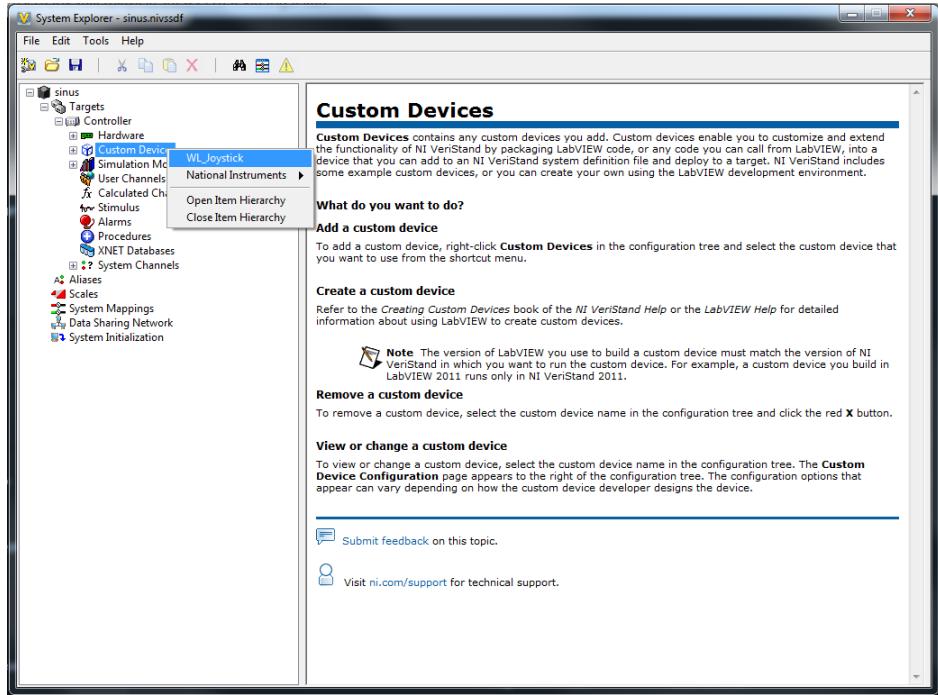


Figure 12.31: Custom device selection

If the installation is successful you should be able to see WL\_Joystick folder under custom devices as seen in the red box in Figure 12.32. Here you will also see the different inputs from the custom device, in this case it is joystick axis.

To connect the joystick to the input ports of the Simulink model. You open the system configuration mappings (click the button marked by the arrow in Figure 12.32).

You simply find the ports you would like to connect, mark them and click the connect button. Figure 12.33 a joystick output is connected to a input port on the Simulink model.

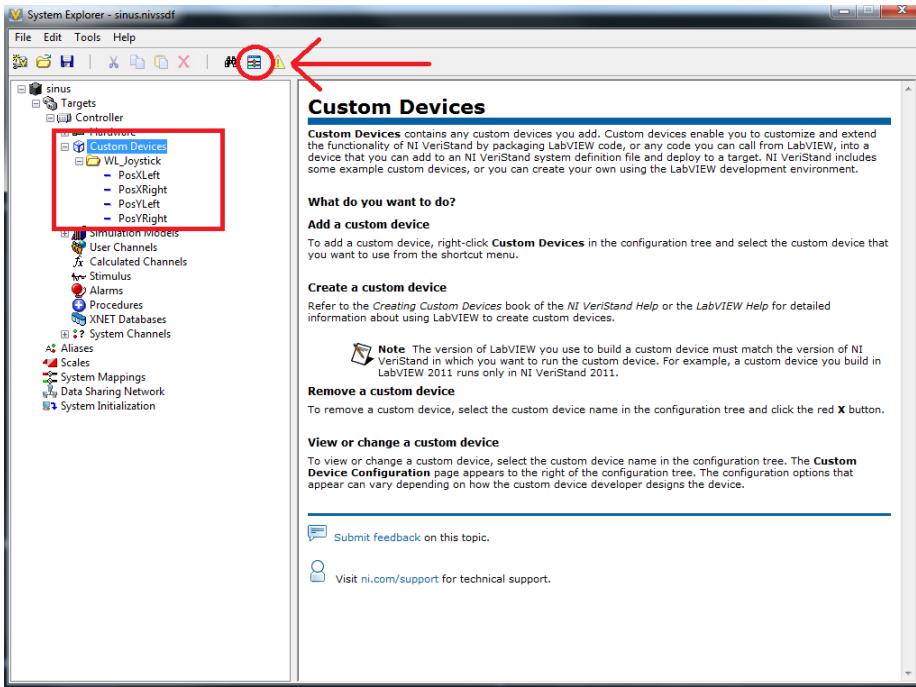


Figure 12.32: VeriStand

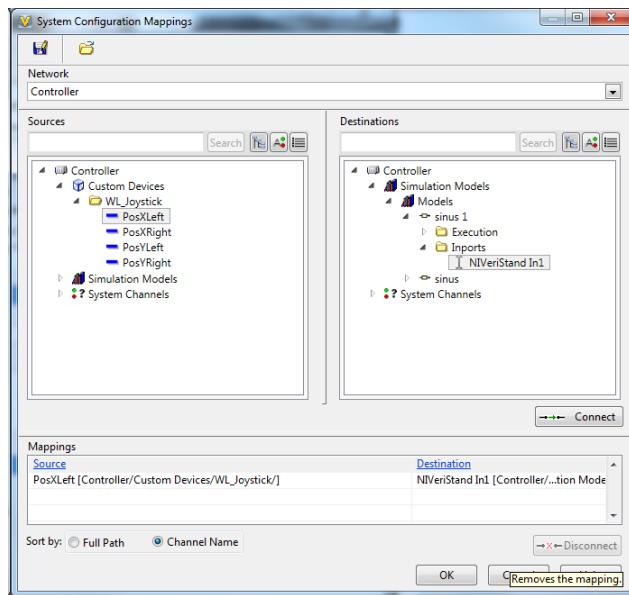


Figure 12.33: VeriStand System Configuration Mappings

## 12.2 Raspberry Pi

the unit is configured with Raspbian Linux-kernel-based operating system

### 12.2.1 Raspbian installation and setup

This section describes how to install and access the Raspbian operating system on the RPi from a Windows computer. The operations are also possible from an OSX or Linux computer.

#### 12.2.1.1 Download operating system and utilities

Download and extract the newest Raspbian<sup>1</sup> operating system (OS) image.

Necessary utilities for the setup are

- Win32 Disk Imager<sup>2</sup> to write the OS image to the RPi SD card
- Advanced IP scanner<sup>3</sup> to find the RPi address on the network
- Putty terminal emulator<sup>4</sup> for SSH connection
- WinSCP<sup>5</sup> for file transfer

Windows	Linux, OSX
<b>Win32 Disk Imager</b>	dd
<b>Advanced IP scanner</b>	nmap
<b>Putty</b>	ssh
<b>WinSCP</b>	sftp

Table 12.1: RPi installation and setup utilities

See Table ?? for a list of the equivalent software for OSX and Linux.

#### 12.2.1.2 Write image to SD card

Since the .iso file is raw, it needs to be written to the SD card in way that makes it bootable. Win32 Disk Imager does this.

Run the program as administrator. Select the correct image file and device, as in Figure 12.34. Make sure that you have selected the correct drive before you push WRITE.

Once the write is complete, insert the SD card in the RPi and boot.

<sup>1</sup>[raspberrypi.org/downloads](http://raspberrypi.org/downloads)

<sup>2</sup>[sourceforge.net/projects/win32diskimager](http://sourceforge.net/projects/win32diskimager)

<sup>3</sup>by Famatech, [advanced-ip-scanner.com](http://advanced-ip-scanner.com)

<sup>4</sup>[www.chiark.greenend.org.uk/~sgtatham/putty/download.html](http://www.chiark.greenend.org.uk/~sgtatham/putty/download.html)

<sup>5</sup>by Martin Prikryl, [winscp.net/eng/download.php](http://winscp.net/eng/download.php)

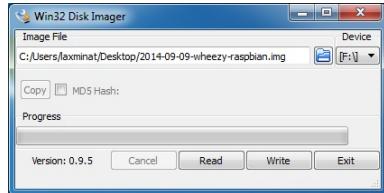


Figure 12.34: Disk Imager

### 12.2.1.3 Terminal access

RPi can be accessed through the network, i.e. without having to directly connect a monitor and keyboard.

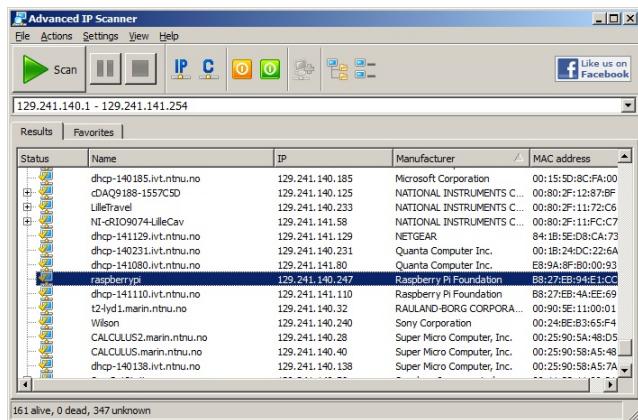


Figure 12.35: Advanced IP Scanner

At first boot, the RPi by default waits to be assigned an IP address by DHCP. If this address is not known, scan the network with Advanced IP Scanner. It is advisable to sort the results by manufacturer since it is fixed (*Raspberry Pi Foundation*). The name is typically *raspberrypi*. See Figure 12.35.



Figure 12.36: Putty settings

Once the IP is known, it is specified in the Putty settings, as in Figure 12.36, and a connection can be opened.

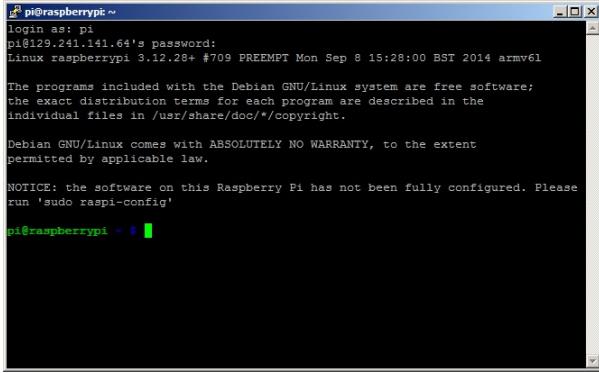


Figure 12.37: SSH connection

The default login is **pi**, and the default password **raspberry**. Figure 12.37 shows the terminal output on first login.

#### 12.2.1.4 Finalize configuration

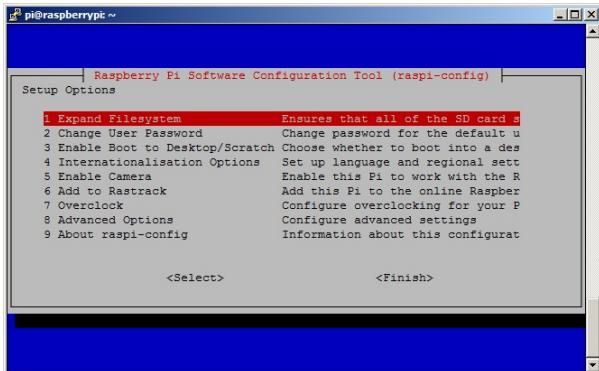


Figure 12.38: RPi configuration tool

Enter the

```
sudo raspi-config
```

command to start the RPi Software Configuration Tool, as in Figure 12.38. Use the menu to apply the following

1. Update configuration tool: 8 Advanced Options >A9 Update
2. Change password: 2 Change User Password
3. Expand filesystem: 1 Expand Filesystem >Finish

Exit the configuration tool and select YES for reboot. Reconnect through Putty.

Finally, update the repository package lists and upgrade all packages currently installed on the RPi:

```
sudo apt-get update  
sudo apt-get upgrade -y
```

This process took approximately 10 minutes on a 90 Mbps internet connection.

#### **12.2.1.5 Transfer files to RPi from computer**

WinSCP can be used to transfer files to the RPi. This is useful for instance when transferring code, or when the RPi is not directly connected to the internet.

#### **12.2.1.6 Set fixed IP address**

When the RPi is connected directly to the cRIO or computer, a fixed IP is necessary since there is no DHCP server in that network. During most of this setup, however, it is preferable to keep the default DHCP assigned IP setting.

To set a fixed IP

1. Open the network interface configuration information file for editing

```
sudo nano /etc/network/interfaces
```
2. Alter the eth0 settings from `dhcp` to `static` and add address and netmask as

```
auto eth0  
iface eth0 inet static  
    address 192.168.1.22  
    netmask 255.255.255.0
```
3. Save the changes by the key combination `CTRL+X`.

The new IP is applied on the next reboot.

## 12.2.2 Sixaxis installation and configuration

This section describes how to install and configure the Sixaxis gamepad for Bluetooth connection to the RPi, and how to add a server for sending joystick signals to the cRIO.

### 12.2.2.1 Download and install bluetooth support

BlueZ is the official Linux Bluetooth stack. It provides support for core Bluetooth layers and protocols.

To download and install, type

```
sudo apt-get install bluez-utils bluez-compat bluez-hcidump  
libusb-dev libbluetooth-dev joystick checkinstall -y
```

The process takes a few minutes.

Figure 12.39: Bluetooth configuration tool

To confirm the installation, use the `hciconfig` command to print name and basic information about Bluetooth devices installed in the system. The output should include UP RUNNING PSCAN, as in Figure 12.39. If instead it says DOWN, some error has occurred.

Most experienced errors were due to typos.

### 12.2.2.2 Bluetooth pairing

Sixaxis does not support the standard Bluetooth pairing procedure, instead, pairing is done over USB. The `sixpair` command-line utility<sup>6</sup> searches USB buses for Sixaxis devices and tells them to connect to a new Bluetooth master.

Download and compile the program by the following commands:

```
wget http://www.pabr.org/sixlinux/sixpair.c  
gcc -o sixpair sixpair.c -lusb
```

Connect the Sixaxis by USB before running the pairing utility

```
sudo ./sixpair
```

The output should be similar to

```
Current Bluetooth master: 00:02:72:BF:BC:8F  
Setting master bd_addr to: 00:02:72:BF:BC:8F
```

<sup>6</sup>by Pabr Technologies, [www.pabr.org](http://www.pabr.org)

The addresses at the end of each line will only be the same if you have already paired the Sixaxis with the Bluetooth dongle. First time they will be different.

The Sixaxis USB cable may now be disconnected.

#### 12.2.2.3 Joystick manager system service

QtSixA<sup>7</sup> reads the Sixaxis signals and makes them available to other programs. This program needs to run automatically whenever the RPi is booted.

To download the program, type

```
wget http://sourceforge.net/projects/qtsixa/files/QtSixA%201.5.1/QtSixA-1.5.1-src.tar.gz
```

To install, type

```
tar xfvz QtSixA-1.5.1-src.tar.gz  
cd QtSixA-1.5.1/sixad  
make  
sudo mkdir -p /var/lib/sixad/profiles  
sudo checkinstall -y
```

Update the system service list with sixad driver and reboot

```
sudo update-rc.d sixad defaults  
sudo reboot
```

To test the program, turn on the Sixaxis (round PS button in the middle) and start the test program

```
sudo jstest /dev/input/js0
```

The terminal should now fill up with numbers that change as you move the analogue sticks and press the buttons on the Sixaxis. Exit the program by the key combination CTRL+C.

#### 12.2.2.4 Joystick signal server

A server must run to make joystick signals available over the RPi ethernet port. This should also start whenever the RPi is booted.

Transfer the source file jscont.c to the RPi (see Section 12.2.1.5), then compile:

```
g++ -o jscont jscont.c
```

To verify that the program runs correctly, turn off (hold PS3 button for about 10 seconds) the previously paired Sixaxis and start the program

```
./jscont
```

The program should then wait until you turn on the Sixaxis before giving output simular to Figure 12.40. To exit the server use the key combination CTRL+C.

---

<sup>7</sup>the Sixaxis Joystick Manager by falkTX, qtsixa.sourceforge.net

```

pi@raspberrypi: ~ ./jscont
JoyStick C/S Controller. Version: TWa20150106
JoyStick detected: Sony Computer Entertainment Wireless Controller
    27 axis
    19 buttons
using port #51717
waiting for new client...

```

Figure 12.40: Joystick signal server test

Next, disable login at start-up in the bootup service description `inittab`:

1. Open the file for editing

```
sudo nano /etc/inittab
```

2. Change the line that reads

```
1:2345:respawn:/sbin/getty --noclear 38400 tty1
```

by adding `--autologin pi` to get

```
1:2345:respawn:/sbin/getty --autologin pi --noclear 38400 tty1
```

**Warning:** Typos here may result in consequences hard to correct.

3. Save and exit the changes by the key combination `CTRL+X`.

Finally, add `jscont` to the login execution file:

1. Open the file for editing

```
sudo nano /home/pi/.bashrc
```

2. At the very end of the file, add

```
sudo ./jscont
```

3. Save the changes by the key combination `CTRL+X`.

RPi should now be sending joystick signals at start-up.

## 12.3 Laptop

To ease the administration of the student computers, a virtual machine has been created that contains all the necessary software specified in Section 12.3.1. The virtual machine (the guest guest, VM) can be run on any computer (the host machine) and on any operating system, that is supported by *VirtualBox*.

### 12.3.1 Virtual machine image creation

Compatibility between software is very important, See NI VeriStand Version Compatibility KnowlegeBase<sup>8</sup>.

#### 12.3.1.1 Order of installation

1. Microsoft .NET
2. Microsoft SDK
3. Matlab
4. Labview
5. Veristand
  - (a) Including NI VeriStand Model Framework! This does not follow in the standard (full) install. Need to select “install with customization” and then select it.
6. Additional for model compilation
  - (a) VxWorks:
    - i. WindRiver GNU Toolchain<sup>9</sup>
    - ii. Real-Time Workshop software
  - (b) PharLap:
    - i. Microsoft Visual C++
    - ii. The MathWorks, Inc. Real-Time Workshop® software

---

<sup>8</sup><http://digital.ni.com/public.nsf/allkb/2AE33E926BF2CDF2862579880079D751>

<sup>9</sup>[ftp://ftp.ni.com/pub/devzone/epd/gccdist\\_vxworks6.3\\_gcc3.4.4.zip](ftp://ftp.ni.com/pub/devzone/epd/gccdist_vxworks6.3_gcc3.4.4.zip)

### **12.3.2 Deploying the virtual machine**

#### **12.3.2.1 Free disk space**

The image is over 70 GB large. Sufficient space must be available on the hard-disk.

Space may be freed by

- turning off Windows power settings Hibernate and Hybrid-sleep, and deleting the Hibernate file,
- reducing the size of the system virtual memory, and
- deleting unnecessary files.

See online tutorials on how to do this.

#### **12.3.2.2 Virtual Box**

Virtual Box is a Virtual Machine environment from Oracle and under the GNU license.<sup>10</sup> After installation any number of virtual machines can be added to the system.

#### **12.3.2.3 MC Lab Virtual Machine**

The virtual machine can be found on the ArcticDP server. Access at \\ArcticDPStation\MC-Lab or \\129.241.140.194\MC-Lab, when connected to the ivt.ntnu.no network.

After unzipping on the host computers harddrive, the following steps have to be conducted in VirtualBox:

1. Add the virtual machine image to VirtualBox, as shown in Figure 12.42.
2. Adjust the settings of the virtual machine, such that it fits the host machine. The virtual machine is set up to run on the student lab computers. It will claim 2 processor cores and 10 GB of memory.
3. Start the virtual machine, as shown in Figure 12.43.

#### **12.3.2.4 Common known problems**

1. *VM's Matlab cannot find the license server*: Make sure that the host computer is connected to the universities network. Make sure to use Eduroam on the host computer. Do not use the ntnuguest network. The network connections are “bridged” into the virtual machine. In case you cannot find the problem or in case Eduroam of NTNU is not available, you can use the Cisco VPN client installed on the VM.

---

<sup>10</sup><https://www.virtualbox.org>

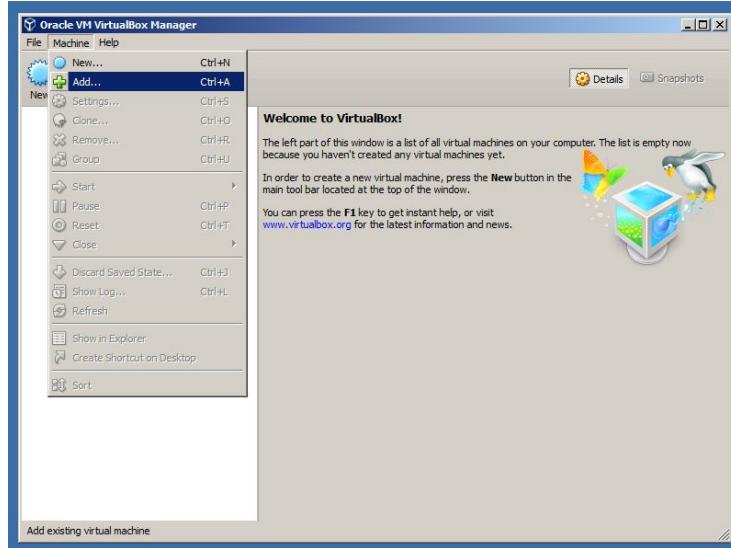


Figure 12.41: Adding a virtual machine to VirtualBox

2. *The VM cannot find the cRIO:* Go to the settings of the virtual machine (move your mouse down to the middle section of the bottom of the screen inside the VM). Go to the network settings and check out “Network adapter 2”. Is it “bridged” to the correct network adapter of the host machine? Sometimes, after a driver update on the host machine, you have to set that right again. Second thing is that if you use the Cisco VPN client to connect to NTNU, you have to tick “Allow local (LAN) access when using VPN”, as shown in Figure .

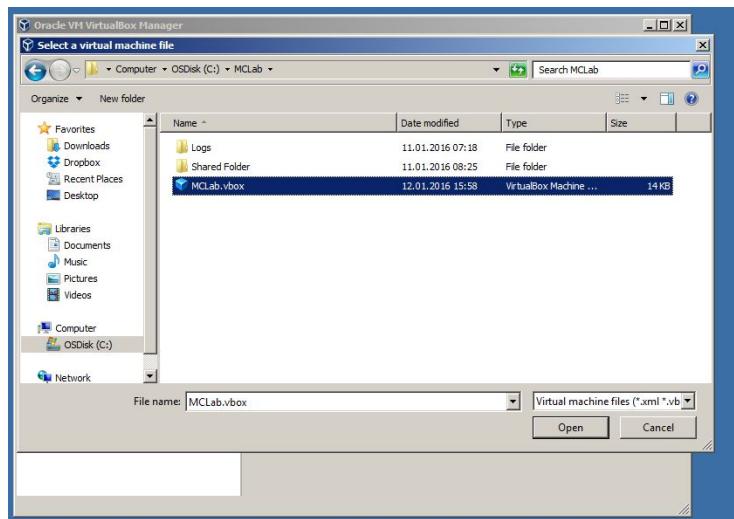


Figure 12.42: Adding a virtual machine to VirtualBox

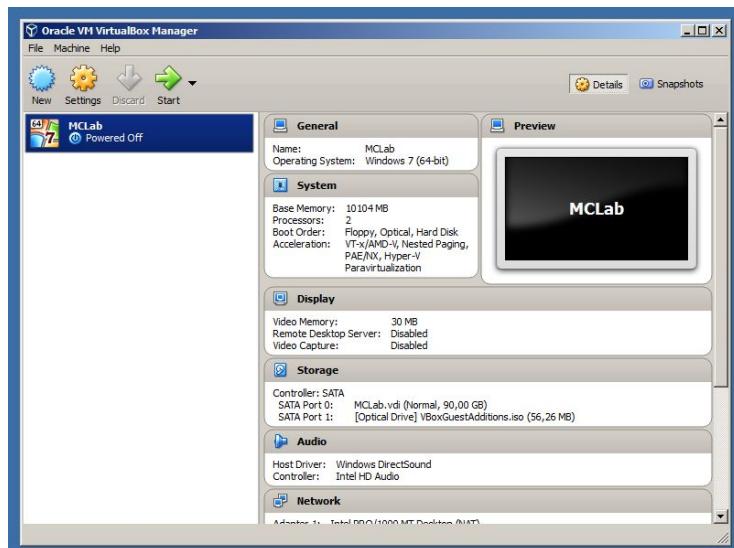


Figure 12.43: Start a virtual machine

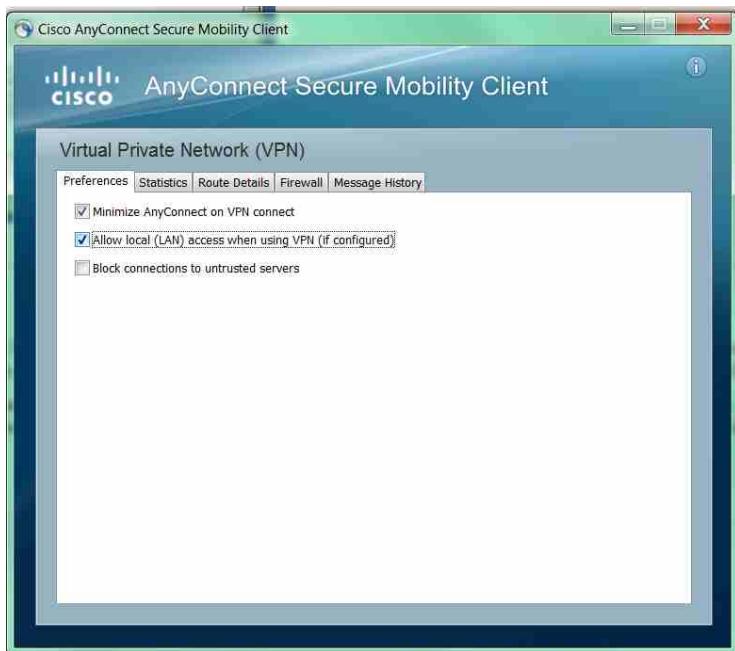


Figure 12.44: Cisco VPN client LAN option

## Chapter 13

# CS Enterprise I

Increased servo percentage results in clockwise? motion.

Hysteresis on motors

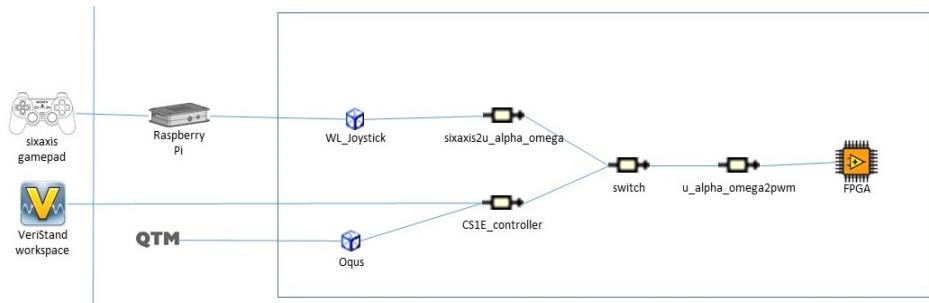


Figure 13.1: CSE1 component communication

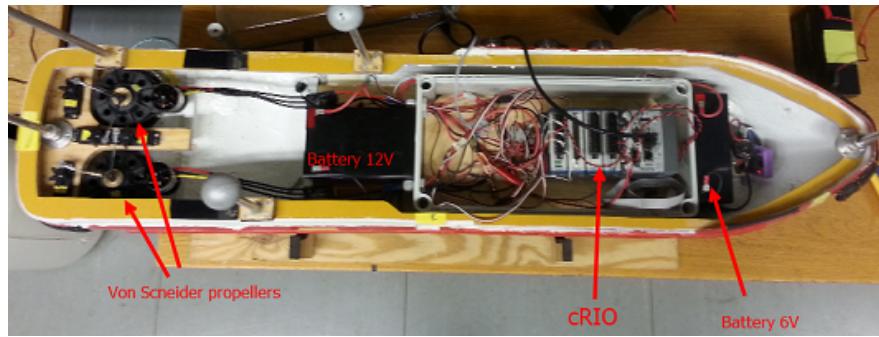


Figure 13.2: CSE1 - Hardware

### 13.1 Actuators

Antall, posisjon, aktivert med pwm.



Figure 13.3: CSE1 diagram

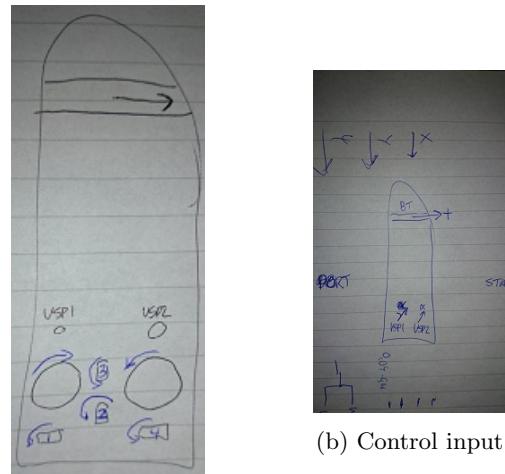


Figure 13.4: Thruster configuration

Port	Component
pwm0	Bow thruster motor
pwm1	VSP1 motor
pwm2	VSP2 motor
pwm3	not in use
pwm4	servo1
pwm5	servo2
pwm6	servo3
pwm7	servo4

Table 13.1: CSE1 cRIO digital output

50Hz. Table ??

Motors motor control, servos directly.

PWM signals are found experimentally. Remeasure to account for wear and tear and flexibility.

### **13.1.1 Motor control signals**

### **13.1.2 Servo control signals**

### **13.1.3 Measurements**

Port	Component
<b>AI0</b>	6V Battery
<b>AI1</b>	Unknown
<b>AI2</b>	Unknown
<b>AI3</b>	12V Battery

Table 13.2: CSE1 cRIO analog input

## 13.2 Control software

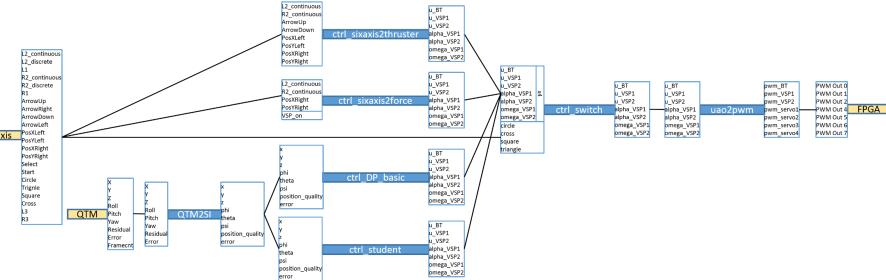


Figure 13.5: CSE1 control software modules

### 13.2.1 sixaxis (currently named WL\_joystick) custom device

Reads sixaxis gamepad input from the RPi server.

### 13.2.2 QTM (currently named Oqus) custom device

Reads pose (position and orientation) information broadcasted by Qualisys Track Manager. The data is in millimeters and degrees.

Additional outputs are

- a residual which is 0 for perfect measurement, increases with reduced quality of measurement and -1 for no measurement.
- an error code
- framecounter

### 13.2.3 QTM2SI

Converts QTM data to standard international (SI) units: position in meters and orientation in radians. The yaw angle is mapped to the interval  $\psi \in [-\pi, \pi]$ .

### 13.2.4 ctrl\_sixaxis2thruster control module

Provides manual thruster control.

#### 13.2.4.1 Voith Schneider Propellers

The left and right joysticks, respectively, give the VSP deflections,  $u_{VSP1}$  and  $u_{VSP2}$ , and angles,  $\alpha_{VSP1}$  and  $\alpha_{VSP2}$ , depicted in Figure 13.4b. The joystick

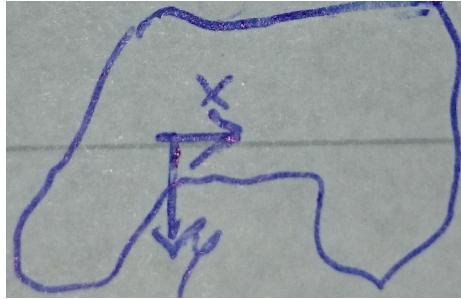


Figure 13.6: Sixaxis coordinate system

coordinates PosX and PosY axes point right and down, as seen in Figure 13.6. The deflection is

$$u_{VSPi} = \min \left( \sqrt{(\text{PosX})^2 + (\text{PosY})^2}, 1 \right).$$

The  $\min(\cdot)$  ensures constraining  $u_{VSPi} \in [0, 1]$ . The angle is

$$\alpha_{VSPi} = \arctan 2(\text{PosX}, -\text{PosY}).$$

The VSP rotational speeds,  $\omega_{VSP1}$  and  $\omega_{VSP2}$ , are set in  $\pm 0.1$  increments by use of the directional pad up and down buttons.

#### 13.2.4.2 Bow thruster

BT is controlled by L2 and R2. Both buttons output -1 when released and increasing to 1 when fully pushed. The thruster input

$$u_{BT} = -\frac{L2 - R1}{2}$$

maps to the interval  $u_{BT} \in [-1, 1]$  with positive direction according to Figure 13.4b.

#### 13.2.5 ctrl\_sixaxis2force control module

Provides manual forces and moment control. Surge and sway forces, X and Y, are given by the left joystick. Yaw moment N is given by the L2 and R2 buttons.

Thrust allocation is based on the configuration shown in Figure 13.4b. The thrust is thus

$$\tau = T(\alpha) Ku$$

where

$$\begin{aligned}\tau &= \begin{bmatrix} X \\ Y \\ N \end{bmatrix} \text{ are the forces and moment,} \\ T(\alpha) &= \begin{bmatrix} \cos(\alpha_{VSP1}) & \cos(\alpha_{VSP2}) & 0 \\ \sin(\alpha_{VSP1}) & \sin(\alpha_{VSP2}) & 1 \\ l_{x,VSP1} \cos(\alpha_{VSP1}) - l_{y,VSP1} \sin(\alpha_{VSP1}) & l_{x,VSP2} \cos(\alpha_{VSP2}) - l_{y,VSP2} \sin(\alpha_{VSP2}) & l_{BT} \end{bmatrix} \\ &\text{is the configuration matrix,} \\ \alpha &= \begin{bmatrix} \alpha_{VSP1} \\ \alpha_{VSP2} \end{bmatrix} \text{ are the thruster angles,} \\ K &= \begin{bmatrix} K_{VSP1} & 0 & 0 \\ 0 & K_{VSP2} & 0 \\ 0 & 0 & K_{BT} \end{bmatrix} \text{ is the force coefficient matrix, and} \\ u &= \begin{bmatrix} u_{VSP1} \\ u_{VSP2} \\ u_{BT} \end{bmatrix} \text{ are the control forces.}\end{aligned}$$

Since solving the thrust equation for  $u$  and  $\alpha$  is complicated, a virtual azimuthing thruster VSP representing the joint forces from VSP1 and VSP2 is considered instead. It is further assumed that  $\alpha_{VSP1} = \alpha_{VSP2}$ ,  $K_{VSP1} = K_{VSP2}$  and  $u_{VSP1} = u_{VSP2}$ . Considering an extended control force vector

$$u_e = \begin{bmatrix} u_{VSP,x} \\ u_{VSP,y} \\ u_{BT} \end{bmatrix},$$

where the VSP control forces are decomposed, yields

$$\underbrace{\begin{bmatrix} X \\ Y \\ N \end{bmatrix}}_{\tau_e} = \underbrace{\begin{bmatrix} 1 & 0 & 0 \\ 0 & 1 & 1 \\ 0 & l_{x,VSP} & l_{BT} \end{bmatrix}}_{T_e} \underbrace{\begin{bmatrix} K_{max,VSP} & 0 & 0 \\ 0 & K_{max,VSP} & 0 \\ 0 & 0 & K_{max,BT} \end{bmatrix}}_{K_e} u_e.$$

This is solved for  $u_e$  by simple inversion. Finally, the actual control forces are

$$\begin{aligned}u_{VSP1} = u_{VSP2} &= \sqrt{(u_{VSP,x})^2 + (u_{VSP,y})^2}, \text{ and} \\ \alpha_{VSP1} = \alpha_{VSP2} &= \arctan2(u_{VSP,y}, u_{VSP,x}).\end{aligned}$$

### 13.2.6 ctrl\_DP\_basic control module

Provides basic dynamic positioning capability.

### 13.2.7 ctrl\_student control module

-

	min	control input	max
	$-1 \leq$	u_BT	$\leq 1$
	$0 \leq$	u_VSP1	$\leq 1$
	$0 \leq$	u_VSP2	$\leq 1$
	$-\pi \leq$	alpha_VSP1	$\leq \pi$
	$-\pi \leq$	alpha_VSP2	$\leq \pi$
	$-1 \leq$	omega_VSP1	$\leq 1$
	$-1 \leq$	omega_VSP2	$\leq 1$

Table 13.3: Control input ranges

### 13.2.8 switch module

Selects one out of four control modules

- ctrl\_sixaxis2thruster when  $\Delta$  is pushed
- ctrl\_sixaxis2force when  $\square$  is pushed
- ctrl\_DP\_basic when  $\circ$  is pushed
- ctrl\_student when  $\times$  is pushed

The module also saturates the control signals according to Table 13.3 and issues a warning signal if the current controller exceeds the bounds.

### 13.2.9 uao2pwm module

Converts the unitized controller inputs to signals suitable for pwm output to the ESC.

The position of the VSP steering rods are controlled by a pair of servos for each.

Position	VSP1		VSP2	
	servo1 [%]	servo2 [%]	servo3 [%]	servo4 [%]
N	4.25	5.20	4.95	3.85
NE	4.30	4.50	5.60	3.90
E	4.90	4.05	5.89	4.38
SE	5.40	4.10	5.60	5.00
S	5.99	4.70	4.95	5.50
SW	5.75	5.50	4.35	5.40
W	5.25	5.75	4.15	4.85
NW	4.60	5.65	4.20	4.30
Origo	4.90	4.82	4.83	4.52

Table 13.4: Servo pwm ranges

Ikke lineært, ikke rett frem.

Foreslått metode

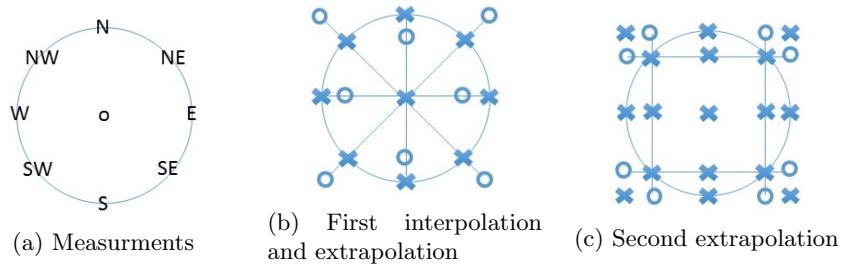


Figure 13.7: Servo, rod position tuning

### 13.2.10 FPGA interface

Outputs pwm signals through the digital output modules.

ua02pwm	<b>FPGA</b>
pwm <sub>BT</sub>	pwm0
pwm <sub>VSP1</sub>	pwm1
pwm <sub>VSP2</sub>	pwm2
pwm <sub>servo1</sub>	pwm4
pwm <sub>servo2</sub>	pwm5
pwm <sub>servo3</sub>	pwm6
pwm <sub>servo4</sub>	pwm7

Table 13.5: PWM connections

### 13.3 Qualisys body

calibration

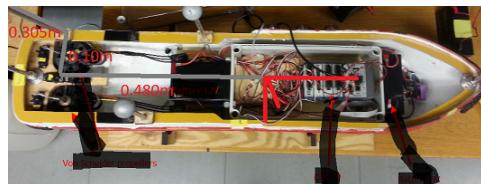


Figure 13.8: Matlab console

# Bibliography

- Follestad, J., Sandved, F., Valle, E., 2014. Low cost rov design, based on testing, simulations and analysis of OpenROV. Specialization project. 1.2.3.4
- Idland, T. K., 2015. Marine cybernetics vessel CS Saucer: Design, construction and control. Master's thesis, Norwegian University of Science and Technology. 1.2.2.5
- Linder, J., Enqvist, M., Fossen, T. I., Johansen, T. A., Gustafsson, F., 2015. Online estimation of ship's mass and center of mass using inertial measurements. In: 10th Conference on Manoeuvring and Control of Marine Craft. 1.2.9.1
- Munz, J., 2015. Design and implementation of software for the ROV Neptunus. Master's thesis, Norwegian University of Science and Technology. 1.2.3.4
- Orsten, A., 2014. Automatic reliability-based control of iceberg towing in open waters. Master's thesis, Norwegian University of Science and Technology. 1.2.4.5
- Orsten, A., Norgren, P., Skjetne, R., 2014. LOS guidance for towing an iceberg along a straight-line path. In: Proceedings of the 22nd IAHR International Symposium on ICE 2014 (IAHR-ICE 2014). 1.2.4.5
- Sandved, F., 2015. Remote control and automatic path-following for C/S Enterprise I and ROV Neptunus. Master's thesis, Norwegian University of Science and Technology. 1.2.3.4, 1.2.4.5
- Skåtun, H. N., 2011. Development of a DP system for CS Enterprise I with Voith Schneider thrusters. Master's thesis, Norwegian University of Science and Technology. 1.2.4.5
- Skåtun, H. N., 2014. CS Enterprise I. Video, <http://www.youtube.com/watch?v=MiESJsIZO04>. 1.2.4.5
- Tran, N. D., 2013. Development of a modularized control architecture for CS Enterprise I for path-following based on LOS and maneuvering theory. Specialization project. 1.2.4.5
- Tran, N. D., 2014. Line-of-sight-based maneuvering control design, implementation, and experimental testing for the model ship C/S Enterprise I. Master's thesis, Norwegian University of Science and Technology. 1.2.4.5

Valle, E., 2015. Marine telepresence system. Master's thesis, Norwegian University of Science and Technology. 1.2.4.5

## **Part IV**

# **Miscellaneous**

## Appendix A

# Simulation and control with cRIO

### A.1 Simulink model adaptation and compilation

Complete the following steps to convert your model you created in Simulink into a compiled model that runs on RT targets.

Version compatibility is an issue for VeriStand-Simulink interaction. Mostly<sup>1</sup> Simulink code may be programmed in any version of the MATLAB, compilation, on the other hand, can only be done in version compatible with the intended VeriStand version. See Section 12.3.1.

#### A.1.1 Modeling

##### A.1.1.1 Input and output

In order for the model to interact with VeriStand, special input and output blocks must be added to the block diagram<sup>2</sup>. These are found in the Simulink Library Browser under NI VeriStand Blocks.

##### A.1.1.2 Initial conditions

If the simulation is to be run with different initial conditions, one possible method is to allow external reset of the integrators. This is done right-click the integrator and selecting Block Parameters (Integrator) in the drop-down

---

<sup>1</sup>It has been experience that MATLAB function blocks are not compatible across versions. This results in build error message “invalid object ID”. The MATLAB function block code must then be copied and pasted into a new MATLAB function block from the compatible version Simulink Library Browser.

<sup>2</sup>Ordinary input/source and output/sink blocks could be used at the diagram top level. However, subsystem ports are only available when using the VeriStand blocks.

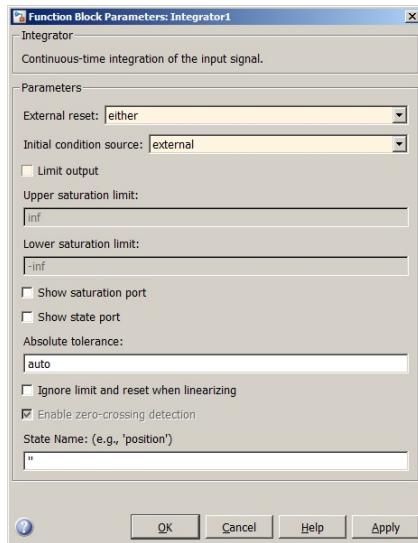


Figure A.1: Integrator function block parameters

menu. Here, the reset condition is set. The initial condition source should be external, as in Figure A.1.

#### A.1.1.3 Real-time data logging

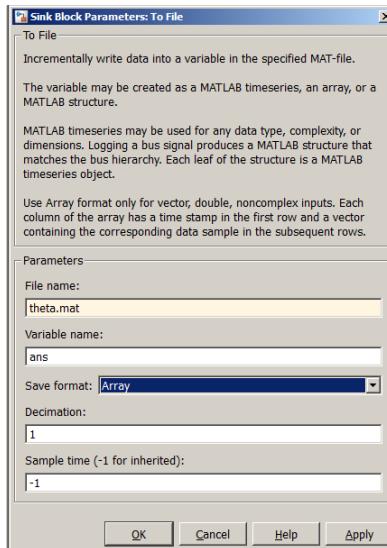


Figure A.2: To File block parameters

Model output can be saved to the cRIO, for later retrieval through FTP, during simulation through a To File block. This block is found in the Simulink Library Browser under Sinks. The output file name is specified under the block param-

eters, as in Figure A.2. The format should be set to Array, since the cRIO does not support the Timeseries format.

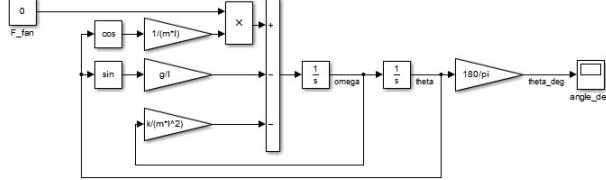


Figure A.3: Simulink model for offline simulation

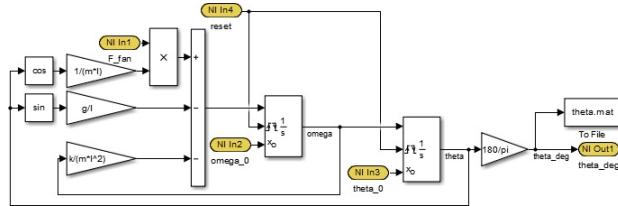


Figure A.4: Simulink model for adjusted for compilation

**Example:** For a simple pendulum,  $\dot{\omega} = -\frac{g}{l} \sin(\theta) - \frac{k}{ml^2} \omega + \frac{F_{fan}}{ml} \cos(\theta)$ , the offline simulation block diagram could look as Figure A.3. Figure A.4 shows the same system adapted for VeriStand input, including reset and initial conditions, and output. The VeriStand blocks are yellow.  $\omega_0$  and  $\theta_0$  are ports corresponding to the initial conditions  $(\omega(0), \theta(0))$ . The integrators take these values whenever reset is rising or falling.

### A.1.2 Model configuration

The code generation toolbox compiles the Simulink diagram to an output shared library in \*.out format<sup>3</sup>. Model configuration parameters must be adjusted before generating, or building, the code.

The solver stop time should be `inf` (infinity) if the model is supposed to run until it is otherwise interrupted. The solver type must be fixed step. If your model only performs arithmetical operations, such as a mapping or transformation module would, the discrete solver should be used. If the model contains continuous states, i.e. if you have integrators, choose some differential equation solver such as `ode3` or `ode4`. See Figure A.5. Finally, the step size can be set: for a target running at 100 Hz, such as the cRIO-9024 default, a 0.01 step size results in the model running in simulating 1 second pr. second<sup>4</sup>.

<sup>3</sup>The \*.out format is for targets running Wind River VxWorks real-time operating system (RTOS) such as cRIO-9024, while dynamic link libraries in \*.dll format are for targets running IntervalZero Phar Lap ETS RTOS such as cRIO-9081.

<sup>4</sup>This can also be achieved by use of decimation, as described in Section A.2.2.

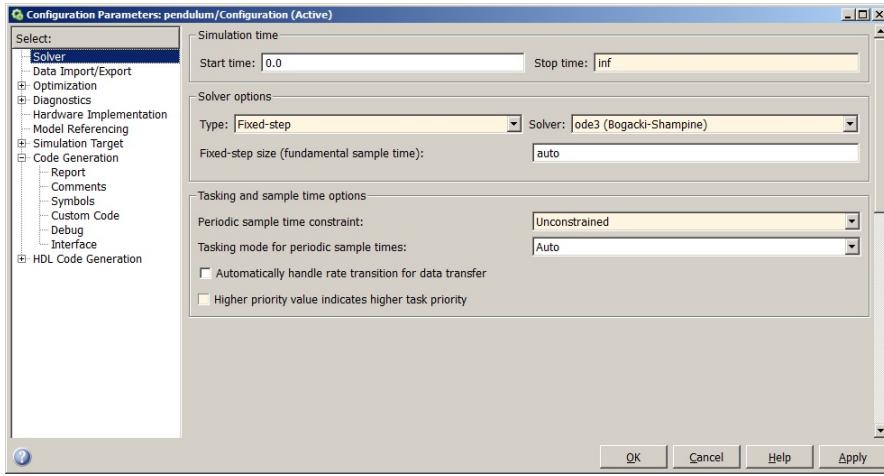


Figure A.5: Simulink configuration parameters - solver

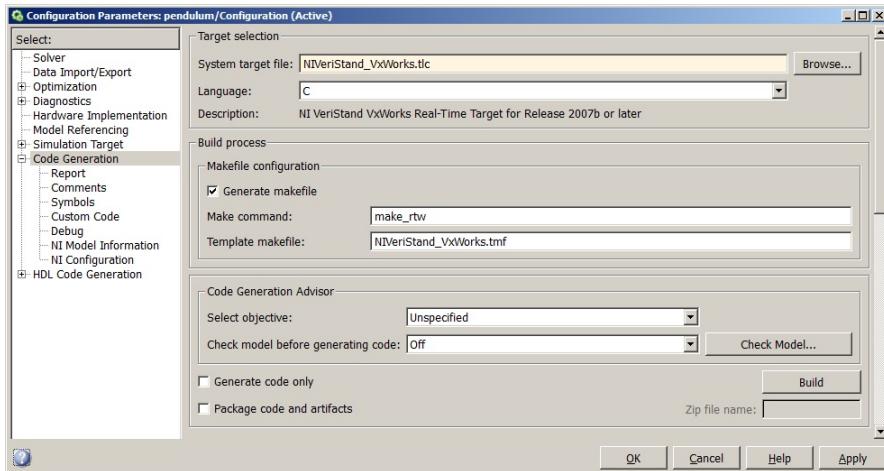


Figure A.6: Simulink configuration parameters - target selection

The correct target file should be selected depending on the target device. Select `NIVeriStand_VxWorks.tlc` for VxWorks targets<sup>5</sup>, such as cRIO-9024, as in Figure A.6.

The WindRiver GNU Toolchain must be present in the folder specified under NI Configuration, as in Figure A.7.

### A.1.3 Build

The build output is placed in a subfolder in the MATLAB Current Folder. The desired folder must therefore be active in the MATLAB main window, as in

---

<sup>5</sup>For PharLap targets, select `NIVeriStand.tlc`.

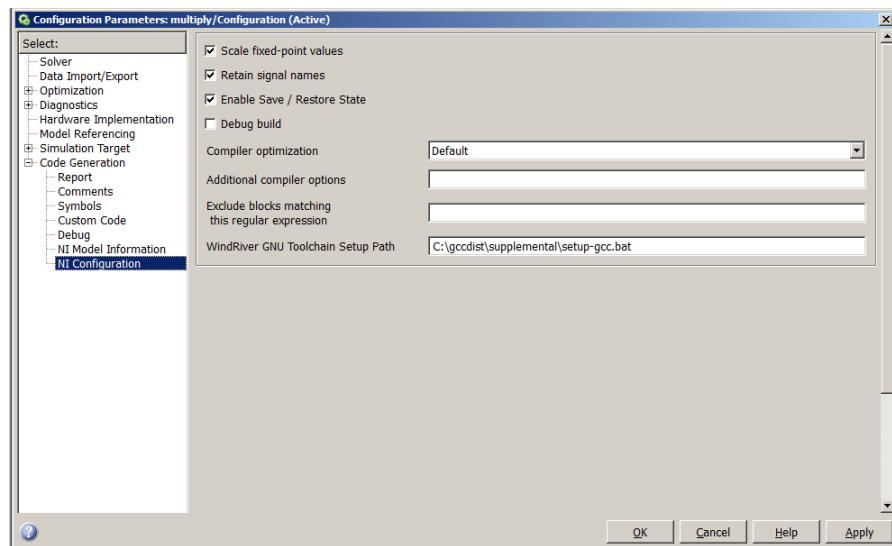


Figure A.7: Simulink model configuration - NI configuration

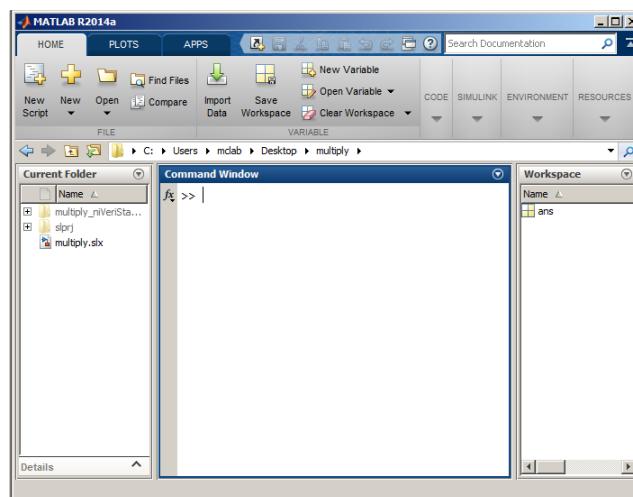


Figure A.8: MATLAB console

Figure A.8, before compiling. The build subfolder name is [simulink model name].niVeriStand\_VxWorks.rtw.

The build is done in in Simulink, either with the Build button in the configuration window, by clicking the button, by the key combination **CTRL+B**, through the menu **Code >C/C++ Code >Build model**, or by pushing the icon button.

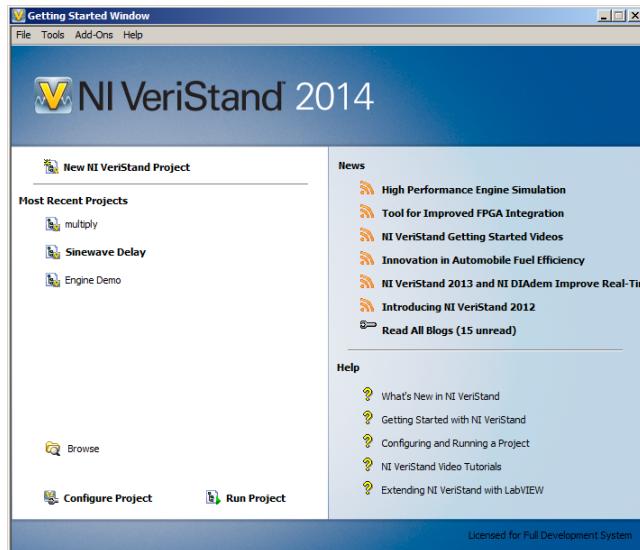


Figure A.9: VeriStand start screen

## A.2 Simulation configuration

Simulations are set up, deployed and interfaced through VeriStand. Figure A.9 shows the start screen. Already configured projects can be run directly from here, or reconfigured.

### A.2.1 Project creation

To deploy model for the first time, click New NI VeriStand Project. Give your new project a suitable name and location. Clicking OK creates the project files

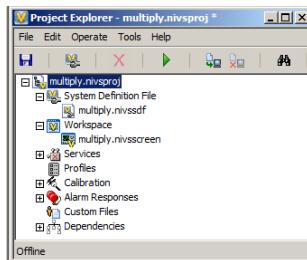


Figure A.10: VeriStand Project Explorer

in given location and opens the Project Explorer, as in Figure A.10. In this section, the example project name is multiply.

## A.2.2 System setup

To configure the setup which will run on the cRIO, open the System Explorer by double-clicking the system definition file [project name].nivssdf.

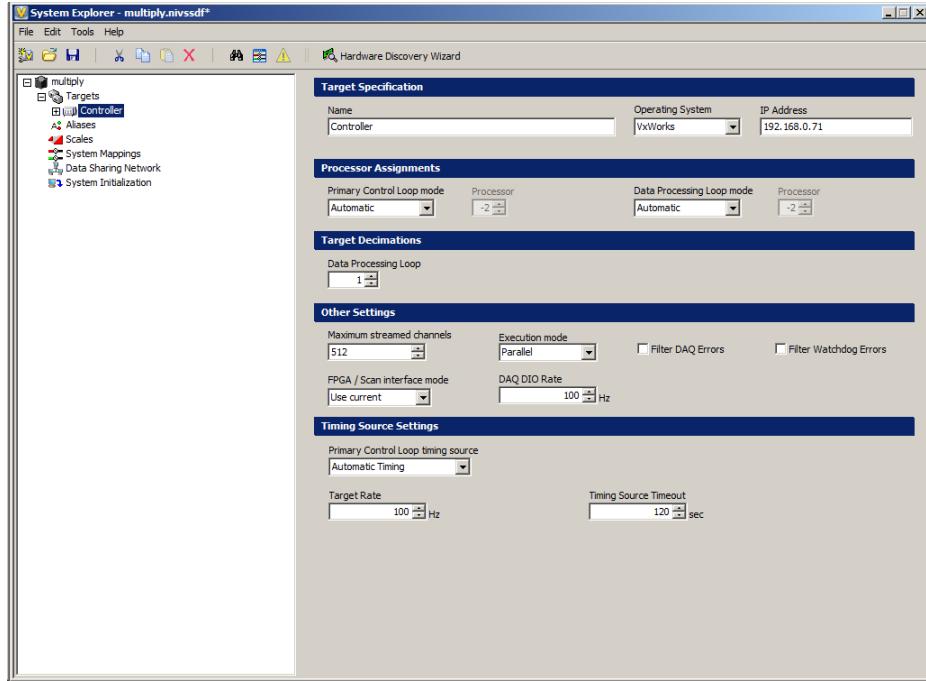


Figure A.11: VeriStand - System Explorer - Controller

1. Set the correct controller operating system and IP address, as in Figure A.11. All HIL and MC lab IP addresses are given in Table B.1. Also, note the target rate.
2. Click Add a Simulation Model, as seen at the top of Figure A.12. Browse to the output of the Simulink compilation, as seen in Figure A.13. Finally, click Auto Select Decimation to make sure the model runs at the intended rate.  
Repeat if several models should run simultaneously.
3. Add custom devices, such as network input, by right clicking the custom device pane and choosing the required device<sup>6</sup>. Figure A.14 shows an example with the Sixaxis (WL\_Joystick) device. Upon selection, a subfolder with the device name appears in the tree with signals listed inside it.
4. Configure mappings, by pushing the icon at the top of the window, to connect signals between custom devices, FPGA and models. Expand the trees to find the desired signals and click Connect, as in Figure A.15.
5. Save and close to return to the Project Explorer.

---

<sup>6</sup>If the required device is not present, refer to the device driver installation instructions in Section 12.1.4.

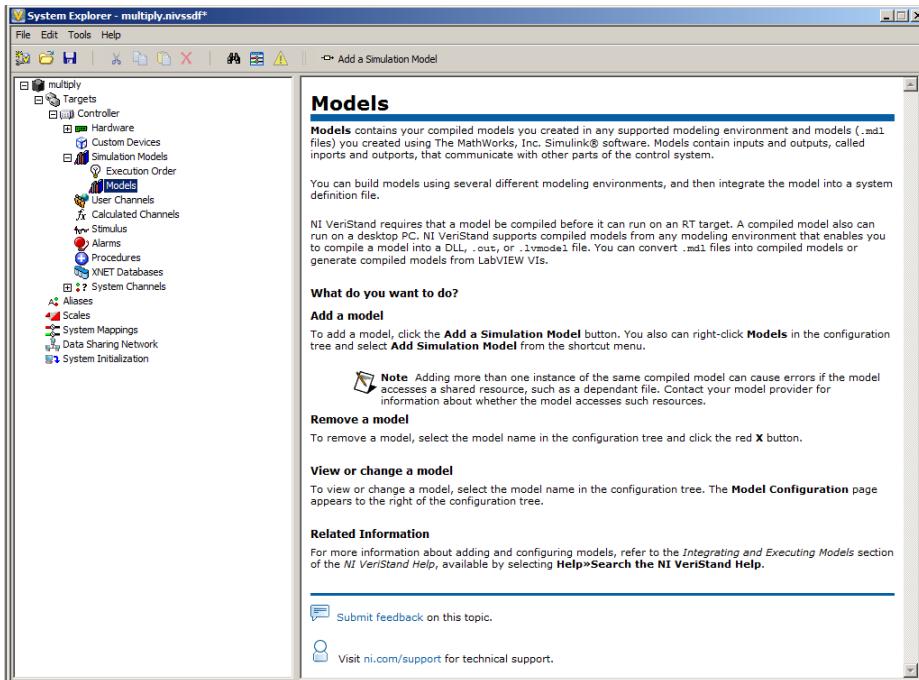


Figure A.12: VeriStand - System Explorer - Models

### A.2.3 Create computer interface

To configure the computer interface, open the Workspace editor by double-clicking the workspace file [project name].nivsscreen. The blank workspace pops up.

1. Enter Edit mode by CTRL+M or Screen >Edit Mode.
2. Click the Workspace Control pane on the left side to access indicators, controls and such.
3. Drag and drop the desired item to the desired position in the workspace. Select the corresponding signal in the pop-up dialog.
4. Close the Workspace editor.

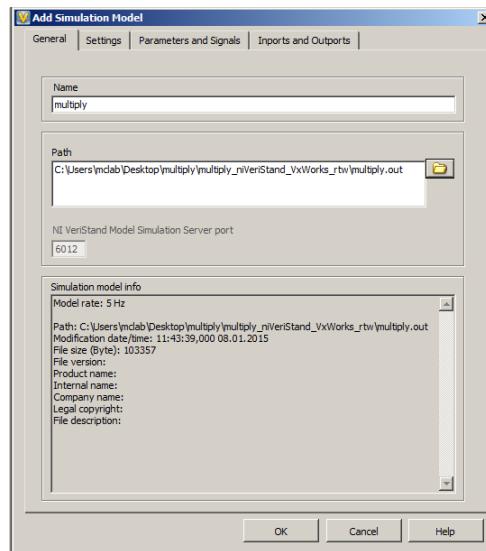


Figure A.13: VeriStand - System Explorer Model

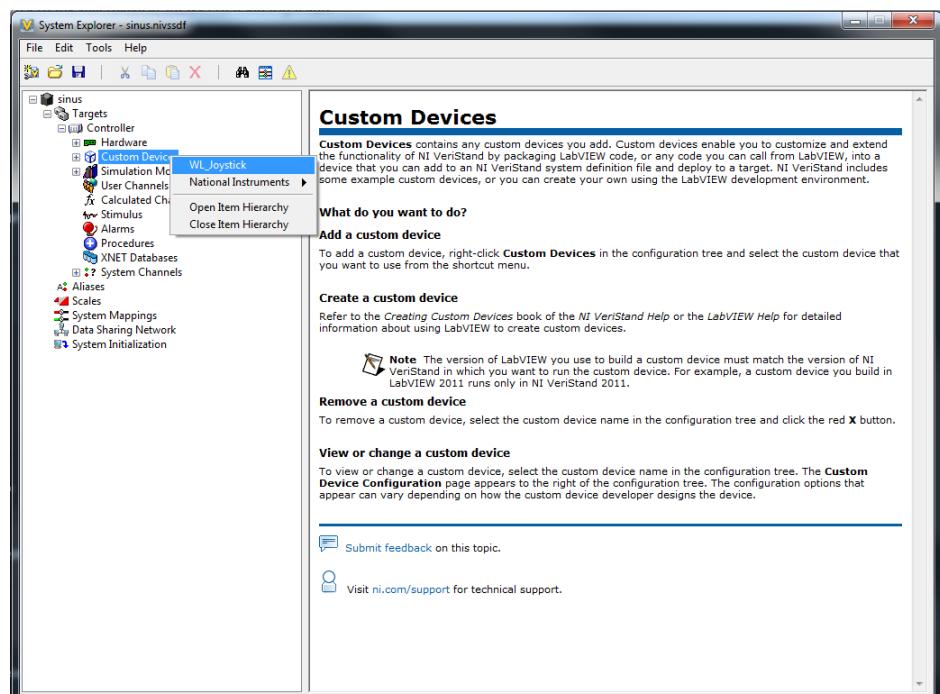


Figure A.14: Custom device selection

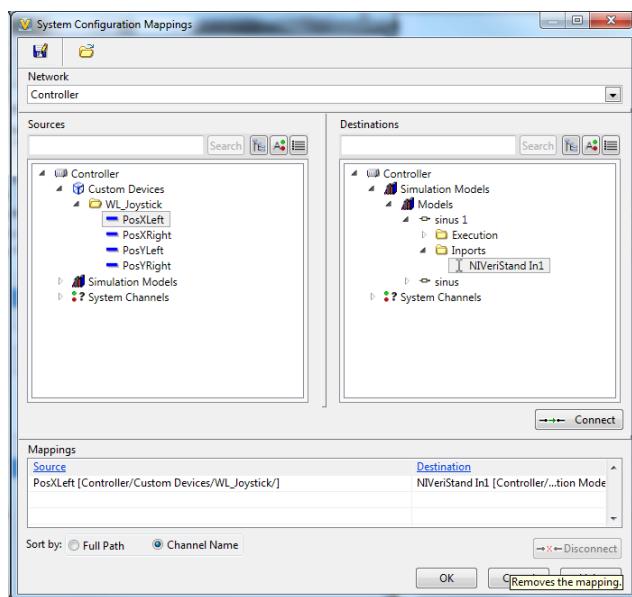


Figure A.15: VeriStand System Configuration Mappings

## A.3 Deployment and simulation

### A.3.1 Run

Deploy by tapping the F6 key, or  button, or Operate >Deploy. A dialog box appears. Upon successful deployment, the workspace pops up.

### A.3.2 User interface side data logging

For reliability, it is recommended to log data directly on the cRIO during simulation, as described in Section A.1.1.3. It is also possible to log via the laptop user interface.

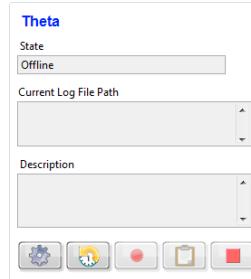


Figure A.16: Logging Control

A Logging Control, as seen in Figure A.16, must be added to the workspace to export data from the simulation. The control is added as described in Section A.2.3.

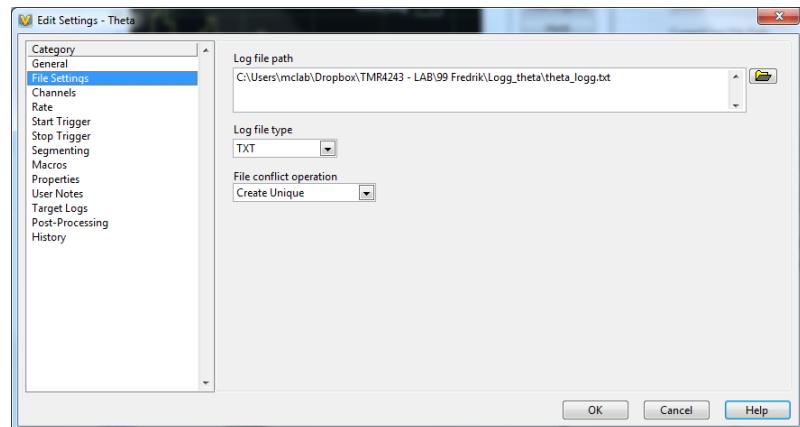


Figure A.17: Logging Control file settings

Once the control is added, a pop-up window allows to edit the settings. The log file path is specified under File Settings, see Figure A.17. Under Channels, the desired channels can be selected and added, as in Figure A.18.

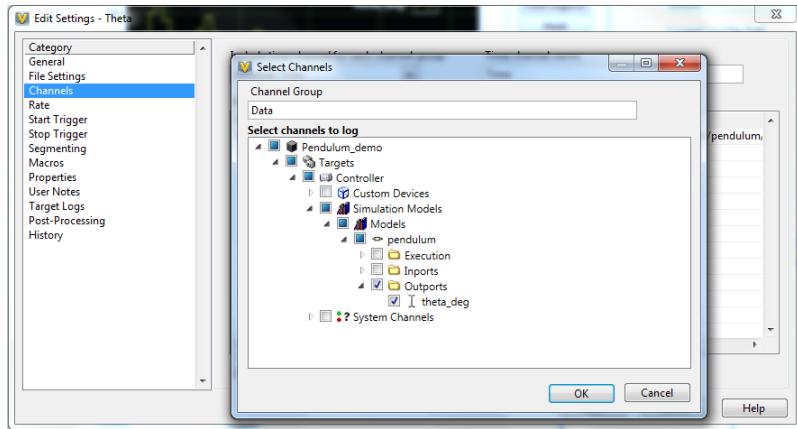


Figure A.18: Logging Control add channel

### A.3.3 Stop

button

### A.3.4 FTP data retrieval

Data logged on the cRIO through To File blocks can be retrieved after simulation over FTP with software such as WinSCP.



Figure A.19: WinSCP login

To connect to the cRIO, the correct IP must be specified, as in Figure A.19. For the standard HIL setup, the user name and password are blank.

Logged data with file names corresponding to the To File block names are located on the cRIO root, as seen in the right pane of Figure A.20. Data is transferred to the laptop by drag and drop to the desired location in the left pane.

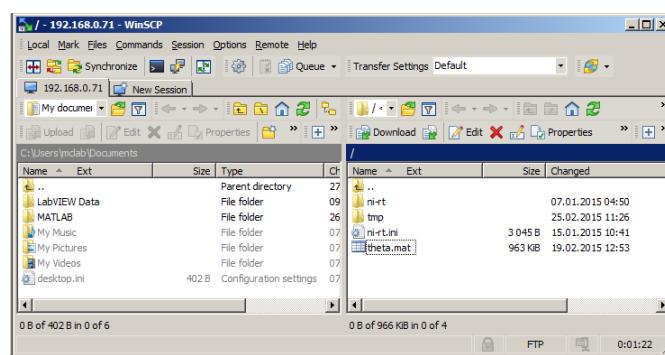


Figure A.20: WinSCP

## Appendix B

# Device network addresses

<b>Qualisys PCs</b>	192.168.0.10 192.168.0.20	surface underwater
<b>Laptops</b>	192.168.0.41 192.168.0.42 192.168.0.43 192.168.0.47	iimt-HILLab1-PC iimt-HILLab2-PC iimt-HILLab3-PC MClab
<b>MC Lab router</b>	192.168.0.50	SSID: MC Lab
<b>RPi</b>	192.168.1.22	for all
<b>cRIO primary ethernet</b>	192.168.0.71 192.168.0.72 192.168.0.73 192.168.0.76	iimt-HILLab1-cRIO iimt-HILLab2-cRIO iimt-HILLab3-cRIO CSE1
<b>cRIO secondary ethernet</b>	192.168.1.21	for all
<b>Assigned by DHCP</b>	From 192.168.0.100 to 192.168.0.254	
<b>Subnet mask</b>	255.255.255.0	for all

Table B.1: IP addresses

All RPis have the same IP address, but there is no IP conflict since the cRIO-RPi networks are separate and closed. The same goes for the cRIO secondary ethernet ports

Note: to connect the RPi directly to the computer, both need to be on the same domain and the computer IP thus needs to change to 192.168.1.xx.

## Appendix C

# ROV control modes

### C.1 ROV dynamics

#### C.1.1 6 DOF model

We let the 6 DOF position/angle vector be  $\eta = \text{col}(p, \Theta)$ , where  $p = \text{col}(x, y, z)$  and  $\Theta = \text{col}(\phi, \theta, \psi)$ , and the corresponding body-fixed velocity vector  $\nu = \text{col}(u, v, r, p, q, r)$ . The ROV kinematic model is then

$$\dot{\eta} = J(\Theta)\nu. \quad (\text{C.1})$$

The kinetic control model is given by

$$M\ddot{\nu} + C(\nu)\nu + D(\nu)\nu + g(\eta) = \tau + J(\Theta)^{-1}b(t), \quad (\text{C.2})$$

where, in particular,  $M = M_{rb} + M_a$  is the system inertia matrix,  $g(\eta)$  is the restoring vector, and  $b(t)$  is an external slowly varying bias vector. The thrust load vector is

$$\tau = \begin{bmatrix} \mathcal{F} \\ \mathcal{M} \end{bmatrix}, \quad \mathcal{F} = \begin{bmatrix} X \\ Y \\ Z \end{bmatrix} [\text{N}], \quad \mathcal{M} = \begin{bmatrix} K \\ M \\ N \end{bmatrix} [\text{Nm}] \quad (\text{C.3})$$

According to Fossen, if we assume starboard-port symmetry with  $y_g = I_{xy} = I_{yz} = I_{zx} = 0$ , then  $M$  is given by

$$M = \begin{bmatrix} m - X_{\dot{u}} & 0 & -X_{\dot{w}} & 0 & mz_g - X_{\dot{q}} & 0 \\ 0 & m - Y_{\dot{v}} & 0 & -mz_g - Y_{\dot{p}} & 0 & mx_g - Y_{\dot{r}} \\ -X_{\dot{w}} & 0 & m - Z_{\dot{w}} & 0 & -mx_g - Z_{\dot{q}} & 0 \\ 0 & -mz_g - Y_{\dot{p}} & 0 & I_x - K_{\dot{p}} & 0 & -I_{zx} - K_{\dot{r}} \\ mz_g - X_{\dot{q}} & 0 & -mx_g - Z_{\dot{q}} & 0 & I_y - M_{\dot{q}} & 0 \\ 0 & mx_g - Y_{\dot{r}} & 0 & -I_{zx} - K_{\dot{r}} & 0 & I_z - N_{\dot{r}} \end{bmatrix}. \quad (\text{C.4})$$

Expressions for the Coriolis and centripetal matrix  $C(\nu)$ , and damping matrix  $D(\nu)$ , and restoring loads  $g(\eta)$  can be found in Fossen.

### C.1.2 Thruster configuration

The thruster configuration for an ROV is given by a set of lever arms from the vessel origin (VO) to each individual thruster. For a single thruster, let the thrust vector it produces in the body frame, and its location in the body frame, be

$$f = \begin{bmatrix} f_x \\ f_y \\ f_z \end{bmatrix}, \quad l = \begin{bmatrix} l_x \\ l_y \\ l_z \end{bmatrix}, \quad (\text{C.5})$$

respectively. Then the corresponding thrust loads become

$$\tau = \begin{bmatrix} f \\ l \times f \end{bmatrix} = \begin{bmatrix} f_x \\ f_y \\ f_z \\ l_y f_z - l_z f_y \\ l_z f_x - l_x f_z \\ l_x f_y - l_y f_x \end{bmatrix}. \quad (\text{C.6})$$

For a thruster producing thrust  $T$  in pure surge direction becomes  $f = \text{col}(T, 0, 0)$ , pure sway becomes  $f = \text{col}(0, T, 0)$ , and pure heave becomes  $f = \text{col}(0, 0, T)$ . For an azimuth thruster producing thrust in surge-sway at an angle  $\alpha$  becomes  $f = \text{col}(T \cos \alpha, T \sin \alpha, 0)$ . For  $m$  thrusters, each with an orientation  $\alpha_i$ , we get the total generalized thrust loads

$$\tau = \sum_{i=1}^m \tau_i = \sum_{i=1}^m \begin{bmatrix} f_i \\ l_i \times f_i \end{bmatrix} = B(\alpha)Ku \quad (\text{C.7})$$

where  $B(\alpha)$  is the thruster configuration matrix with  $\alpha = \text{col}(\alpha_1, \dots, \alpha_m)$ ,  $K = \text{diag}(k_1, \dots, k_m)$  is a matrix of scaling gains, and  $u = \text{col}(T_1, \dots, T_m)$  is the individual thruster forces (possibly normalized using the scaling in  $K$ ).

#### C.1.2.1 Example: Minerva

For ROV Minerva the thruster configuration is shown in Figure C.1 (where  $f_p$  should point in the opposite direction).

Considering only the thrusters for the 3DOF horizontal motion, the thruster configuration is:

- T1: Aft starboard thruster.
- T2: Aft port thruster.
- T3: Bow thruster, lateral thrust in positive y-direction.

Thruster	Location [m]	Azimuth []	Saturation [RPM]	Saturation [N]
Thr1	$l_1 = (-0.57, 0.24)$	$\alpha_2 = 10$	1450	$[T_{1,\min}, T_{1,\max}]$
Thr2	$l_2 = (-0.57, -0.24)$	$\alpha_3 = -10$	1450	$[T_{2,\min}, T_{2,\max}]$
Thr3	$l_3 = (0.166, 0)$	$\alpha_1 = 90$	1450	$[T_{3,\min}, T_{3,\max}]$

Table C.1: ROV Minerva thruster data

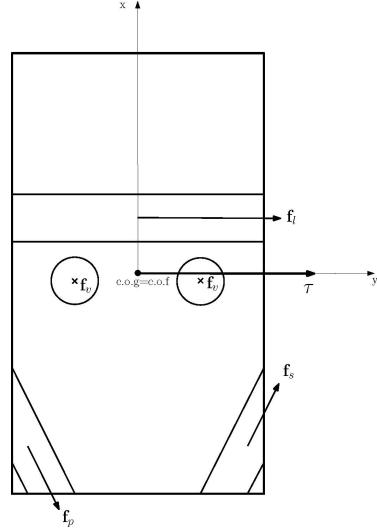


Figure C.1: Thruster configuration for ROV Minerva. The thrust force  $f_p$  should point in opposite direction.

These thrusters data is given in Table C.1.

With the generalized force/moment vector  $\tau := \text{col}(\tau_u, \tau_v, \tau_r)$ , and  $u = \text{col}(T_1, T_2, T_3)$  being the thrust force [N] from each thruster, this gives the following configuration

$$\begin{aligned} \tau &= B(\alpha)u && \text{(C.8)} \\ B(\alpha) &= \begin{bmatrix} \cos \alpha_1 & \cos \alpha_2 & \cos \alpha_3 \\ \sin \alpha_1 & \sin \alpha_2 & \sin \alpha_3 \\ l_{1x} \sin \alpha_1 - l_{1y} \cos \alpha_1 & l_{2x} \sin \alpha_2 - l_{2y} \cos \alpha_2 & l_{3x} \sin \alpha_3 - l_{3y} \cos \alpha_3 \end{bmatrix} \\ &= \begin{bmatrix} 0 & \cos \alpha_2 & \cos \alpha_3 \\ 1 & \sin \alpha_2 & \sin \alpha_3 \\ l_{1x} & l_{2x} \sin \alpha_2 - l_{2y} \cos \alpha_2 & l_{3x} \sin \alpha_3 - l_{3y} \cos \alpha_3 \end{bmatrix}. \end{aligned}$$

The commanded thrust for  $(T_1, T_2, T_3)$ , based a commanded generalized thrust load vector  $\tau_c$ , is then calculated by a **thrust allocation** algorithm.

## C.2 ROV control modes

We have discussed control modes for an ROV. We typically have different input devices:

- Keyboard
- Joystick
- Touchscreen

Each of these can be set up to control the ROV in a number of control modes. The proposed modes, open for debate, is the following:

1. **Direct Thruster Control:** Direct command of individual thrusters.
2. **Direct Motion Control:** Direct command of ROV motions, distinguishing between:
  - (a) **Direct Body-relative motion:** Direct command of motion relative to Body reference frame.
  - (b) **Direct NED-relative motion:** Direct control of motion relative to NED reference frame.
  - (c) **Direct User-relative motion:** Direct control of motion relative to User reference frame.
3. **Auto Control:** Automatic control modes
  - **AutoPos:** Automatic control of  $(x, y)$ .
  - **AutoDepth:** Automatic control of  $(z)$ .
  - **AutoHead:** Automatic control of  $(\psi)$ .
  - **CompRollPitch:** Automatic compensation control of  $(\phi, \theta)$ .
4. **Indirect Motion Control:** Instantaneously command a guidance filter and use feedback to automatically control the ROV correspondingly.
5. **Marine Operations Control:** More complex modes specific for various marine operations of the ROV, such as:
  - Waypoint tracking control
  - Path-following
  - ...

Typically in a motion control system it is possible to combine several of these modes, such that one can for instance use *Direct Motion Control* in horizontal position, while using AutoHead and AutoDepth. Other modes may not be possible to combine, since they may be in conflict. For instance, one should not combine the submodes *Direct Body-relative Motion Control* with *Direct NED-relative Motion Control* since these may come in conflict. The user should therefore be given a mode *Direct Motion Control* and a switch to select Body-, NED-, or User-relative submodes.

### C.2.1 Direct Thruster Control

Use the input device to directly command the individual thrust vector

$$u = \text{col}(T_1, T_2, \dots, T_m) = u_{cmd}.$$

### C.2.2 Direct Body Motion Control

Direct Motion Control uses thrust allocation to enable the user to command motions of the fully actuated vehicle without need to consider individual thruster

setting. Motions can be commanded relative to body-frame, NED-frame, or user-frame.

### C.2.2.1 Direct Body-relative motion

Use the input device to command the generalized **body-relative** thrust vector

$$\tau = \text{col}(\mathcal{F}, \mathcal{M}) = \tau_{cmd}. \quad (\text{C.9})$$

Then use thrust allocation to calculate the corresponding individual commanded thrust vector, e.g.

$$u_{cmd} = B(\alpha)^\dagger \tau_{cmd}. \quad (\text{C.10})$$

### C.2.2.2 Direct NED-relative motion

Use the input device to command the generalized **NED-relative** thrust vector  $\tau_{cmd}^{NED}$ .

Assuming we have the orientation vector  $\Theta$  for the vehicle available, we use the NED-Body transformation to calculate the corresponding body-fixed thrust vector, i.e.

$$\tau_{cmd}^{Body} = J(\Theta)^{-1} \tau_{cmd}^{NED}. \quad (\text{C.11})$$

Finally we allocate this thrust vector to the individual thrusters, e.g.

$$u_{cmd} = B(\alpha)^\dagger \tau_{cmd}^{Body} = B(\alpha)^\dagger J(\Theta)^{-1} \tau_{cmd}^{NED}. \quad (\text{C.12})$$

### C.2.2.3 Direct User-relative motion

Use the input device to command the generalized **User-relative** thrust vector  $\tau_{cmd}^{User}$ .

Assuming we have the orientation vector  $\Theta_{User}$  for the user relative to the NED-frame, we then calculate

$$\tau_{cmd}^{NED} = J(\Theta_{User}) \tau_{cmd}^{User} \quad (\text{C.13})$$

Then, with the orientation vector  $\Theta$  for the vehicle available, we use the NED-Body transformation to calculate the corresponding body-fixed thrust vector, i.e.

$$\tau_{cmd}^{Body} = J(\Theta)^{-1} \tau_{cmd}^{NED} = J(\Theta)^{-1} J(\Theta_{User}) \tau_{cmd}^{User}. \quad (\text{C.14})$$

Finally we allocate this thrust vector to the individual thrusters, e.g.

$$u_{cmd} = B(\alpha)^\dagger \tau_{cmd}^{Body} = B(\alpha)^\dagger J(\Theta)^{-1} J(\Theta_{User}) \tau_{cmd}^{User}. \quad (\text{C.15})$$

### C.2.3 Auto Control

The automatic feedback control modes are proposed as:

1. AutoPos: Automatic control of  $(x, y)$ .
2. AutoDepth: Automatic control of  $(z)$ .
3. AutoHead: Automatic control of  $(\psi)$ .
4. CompRollPitch: Automatic control of  $(\phi, \theta)$ .

These submodes are self-explanatory. To be detailed in the student projects.

### C.2.4 Indirect Motion Control

The idea is that the input devices are used to instantaneously command positions/velocities/accelerations, feed these through a reference filter or a guidance algorithm, and then use feedback to automatically control the ROV correspondingly.

Here we can be creative and try different options.

### C.2.5 Marine Operations Control

These are a set of more complex control modes, typically combined from several of the different submodes, to give automatic functions that are important for different marine operations of the ROV. An example is Path Following, where a sophisticated path-generation algorithms and a guidance filter is combined with automatic control of  $(x, y)$ ,  $(z)$ , and  $(\psi)$ , possibly while compensating  $(\phi, \theta)$ .

## Appendix D

# Personel and literature

### D.1 Points of contact

**Håkon Nødset Skåtun** Hakon.Nodset.Skatun@km.kongsberg.com, built CSE1

**Øivind Kåre Kjerstad** Built CSE1.

**Torgeir Wahl** Custom devices (Qualisys client, Sixaxis client), Sixaxis RPi server

**Dinh Nam Tran** oppryddingsarbeid

**Andreas Orsten** brukt mye, skrevet artikkel om sleping av isberg

**Robert Kanajus** rkajanush@gmail.com brukt HIL-lab og Minerva

**Eirik Valle** Teaching assistant TMR4243, Sixaxis for RPi setup

**Andreas Reason Dahl** andreas.r.dahl@ntnu.no, Laboratory assistant TMR4243

**Jostein Follestad** Teaching assistant TMR4243. Comprehensive CSE1 identification, including towing. CS1E HIL model.

**Fredrik Sandved** Teaching assistant TMR4243, Custom displays

**Tor Kvæstad Idland** Built CSS spring 2015.

**Trond Innset** Trond.Innset@marintek.sintef.no, cut out the CSS hull foam

# **Appendix E**

# **Maintenance**

*Oil VSP*

## Appendix F

# Suppliers

<b>Laptops</b>	Dell
<b>cRIO</b>	National Instruments
<b>VSP</b>	Thrusters were ordered at <a href="http://www.cornwallmodelboats.co.uk/acatalog/voith_schottel.html">www.cornwallmodelboats.co.uk/ acatalog/voith_schottel.html</a> . Per 2014, availability is variable.

Table F.1: Suppliers