AN13303 SNxxx/PN557- NFC Host SW Integration Guideline

Rev-3.0— 6/20/2025

Application Note

Document information

| Info | Content |
|----------|--------------|
| Keywords | NFC, Android |

Android NFC Setup Guide

Revision history

| Rev | Date | Description | |
|-----|------------|---|--|
| 1.0 | 2023-12-15 | Initial version for Android 15 NXP NFC Host SW Integration Guide | |
| 2.0 | 2024-08-30 | Android 15 Observe mode config options | |
| 2.1 | 2024-09-18 | Android 15 eUICC SMB debug, KM2.0 configuration support | |
| 2.2 | 2024-10-16 | Updated Android 15 Observe mode config options | |
| 2.3 | 2024.10.24 | Added overlay flag to enable nfc proprietary get caps support. | |
| 2.4 | 2024.12.16 | Android 16 DP1 Migration | |
| 2.5 | 2025.01.31 | Added extension library to support proprietary features in mainline architecture for upgrade and launch device. | |
| 2.6 | 2025.02.14 | Android 16 Beta1 Migration with Mainline Architecture | |
| 2.7 | 2025.03.14 | Android 16 Beta2 Migration with Mainline Architecture | |
| 2.8 | 2025.04.04 | Android 16 Beta3 Migration with Mainline Architecture | |
| 2.9 | 2025.05.09 | Android 16 Beta4 Migration with Mainline Architecture | |
| 3.0 | 2025.06.20 | Android 16 GPP Migration with Mainline Architecture | |

1. Introduction

NXP's NFC controller SNxxxT/U and PN557 are designed to work with Android open source.

Below Table shows the NXP's development and validation platform setup.

| Chip Type | Platform | NFC/SE Board |
|---------------|----------|---------------------|
| SN110 | RB3 | Iguana Lite Board |
| SN220 & later | RB3 | Komodo |
| PN557 | RB3 | PN8x Daughter Board |

Android NFC Setup Guide

2. Abbreviations

NFC Near Field Communication

OEM Original Equipment Manufacturer

HW Hardware

IC Integrated Circuit
SWP Single Wire Protocol

GPIO General Purpose Input / Output

I2C Inter-Integrated CircuitSPI Serial Peripheral Interface

SW Software

SE Secure Element

OMAPI Open Mobile Application Programming Interface

AOSP Android Open Source Project
HAL Hardware Abstraction Layer
eSE Embedded Secure Element

OS Operating System

SEMS Secure Element Management Service

LS Loader Service
GSMA GSM Association

GSM Global System for Mobile

NFCC NFC Controller SMB System Mail Box

HIDL HAL interface definition language
UICC Universal Integrated Circuit Card

ISO International Organization for Standardization

DH Device Host

DTA Device Test Application

NA Not Applicable

MPOS Mobile Point of Sale

TEE Trusted Execution Environment

Android NFC Setup Guide

3. Scope

This document provides guidelines for setting up NXP's new generation NFC/SE monolithic platform SNxxxT/U and NFC only PN557 in Android 16 build environment. It is a reference guideline for basic system integration. OEM integration may have variations based on actual system integration.

4. General steps for Android NFC integration

For the NFC software integration with Android, it is hereby assumed that NFC IC HW integration is done in a platform with following checks.

- Schematic reviewed with NXP
- HW IC interface like I2C/SPI, SWP (if used) working.
- Antenna designed and reviewed
- Antenna connection working
- GPIO connections checked

Fig. 4, shows the basic flow for Android NFC SW bring up. Following sections describe these steps in detail.

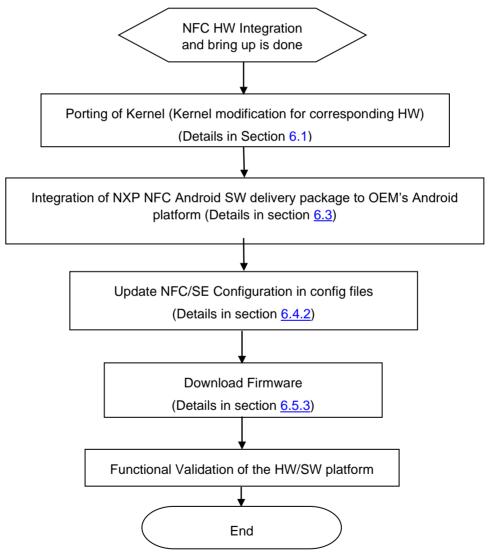


Figure 4: Android NFC SW bring up flow

Android NFC Setup Guide

5. Architecture Overview

Fig. 5, describes the architecture of Android 16 based NXP delivery package.

OMAPI implementation is part of the AOSP from Android P version onwards and NXP does not make any modification in Android OMAPI service layer.

Note: SEHal, WeaverHal, KeyMint Hal, AuthSecret HAL and SPIDriver are not applicable and shall not be integrated for NFC only product PN557.

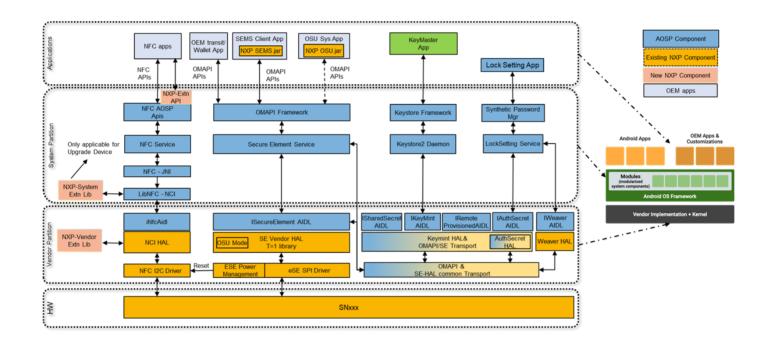


Figure 5: Secure NFC MW architecture

6. Setup of Android NFC

6.1 Android Kernel driver setup for NXP-NFCC and eSE

6.1.1 SNxxx

The db845c platform kernel can be downloaded by the below command:

```
repo init -u https://android.googlesource.com/kernel/manifest repo sync -j8

Additional information regarding db845 kernel: git branch: android16-6.12-lts git commit: 6a0454f040a6b8c8d37bde957d79d12479eddf2a
```

Steps to integrate NXP specific I2C and SPI drivers for accessing NFCC and eSE.

- Download NFC I2C & SPI drivers from below git hub location: https://github.com/NXPNFCProject/NXPPNFC_I2CDriver/tree/br_ar_16_aosp_mainline
 https://github.com/NXPNFCProject/NXPESE_SPIDriver/tree/br_ar_16_aosp_mainline
- 2. Create nxp folder inside kernel/common/drivers/
- 3. Copy nfc from NXPNFC_I2CDriver and keep inside common/driver/nxp
- 4. Copy ese from NXPNFC_SPIDriver to kernel/common/driver/nxp
- Include the Kconfig source to the higher level Kconfig in hierarchy From Path: "drivers/nxp/Kconfig"
 To Path: drivers/Kconfig
 Using "source "drivers/nxp/Kconfig""
- 6. Add the DTS changes required in your platform DTS file

```
clock-frequency = <1000000>;
sn-i2c@28 {
  compatible = "nxp,sn-nci";
  reg = <0x28>;
  nxp.sn-irq = < &tlmm 49 00>:
  nxp,sn-vbat = <\&tlmm 40 00>:
  nxp,sn-ven-rstn = <\&tlmm 79 00>;
  pinctrl-names = "default";
  pinctrl-0 = <&io_supply_activate>;
};
p61@0 {
  compatible = "nxp,p61";
  req = <0>:
  spi-max-frequency = <25000000>;
  nxp,p61-irq = <&tlmm 81 0>;
  nxp,p61-rst = < &tlmm 80 0>;
  nxp,trusted-se = < &tlmm 51 0>;
  nxp,nfcc = "11-0028";
```

- 7. Set the kernel configuration to build driver as static or dynamic in the platform config file
 - a. Static Linking with kernel image

```
CONFIG_NXP_NFC_I2C=y
CONFIG_NXP_ESE_P73=y
```

Android NFC Setup Guide

- b. Dynamic as module(.ko)CONFIG_ NXP_NFC_I2C=mCONFIG_ NXP_ESE_P73=m
- 8. Compile the kernel using below command kernel/tools/bazel --batch run //common:db845c dist command in kernel folder

Note: It is recommended to apply the patches manually.

Steps 2-6 are only required for building driver in-tree during building kernel.

Max frequency supported can be adjusted in dts as in step 7.

Ex. For SNxxx based platforms:

For I2c: clock-frequency = <3400000>

Due to RB3 device limitation, maximum operating frequency achieved is 1MHZ

For SN2XX or lower chip types

For SPI: spi-max-frequency = <25000000>

For SN3XX or greater chip types

For SPI: spi-max-frequency = <30000000>

6.1.2 PN557

The db845c platform kernel can be downloaded by the below command:

repo init -u https://android.googlesource.com/kernel/manifest repo sync -j8

Additional information regarding db845 kernel:

git branch: android15-6.6-2024-07 git commit: android15-6.6-2024-07_r30

Steps to perform in platform's kernel root directory to integrate NXP specific I2C driver for accessing NFCC

- Download NFC I2C driver from below git hub location: https://github.com/NXPNFCProject/NXPNFC_I2CDriver
- 2. Create nxp folder inside kernel/common/driver/
- 3. Copy nfc from NXPNFC_I2CDriver and keep inside kernel/driver/nxp
- Include the Kconfig source to the higher level Kconfig in hierarchy From Path: "drivers/nxp/Kconfig"
 To Path: drivers/Kconfig
 Using "source "drivers/nxp/Kconfig""
- 5. Add the DTS changes required in your platform DTS file

Android NFC Setup Guide

```
sn-i2c@28 {
      compatible = "nxp,sn-nci";
      req = <0x28>:
      nxp,sn-irq = <\&tlmm 49 00>;
      nxp,sn-ven-rstn = < &tlmm 50 00>;
      nxp.sn-dwl-req = < &tlmm 51 00>:
      pinctrl-names = "default";
      pinctrl-0 = <&io supply activate>;
};
  p61@0 {
        compatible = "nxp,p61";
        reg = <0>;
        spi-max-frequency = <25000000>;
        nxp,p61-irq = <&tlmm 81 0>;
        nxp,p61-rst = <&tlmm 80 0>;
        nxp,trusted-se = <&tlmm 51 0>;
        nxp,nfcc = "11-0028";
};
```

- Set the kernel configuration to build driver as dynamic in the platform config file CONFIG NXP NFC I2C=m
- Compile the kernel using below command kernel/tools/bazel --batch run //common:db845c_dist command in kernel folder

6.2 Setup of Android NFC for DB845C

| Source code | TAG Name | |
|-------------|--------------------------|--|
| Android TAG | Android-16.0.0_r2 | |
| NXP MW TAG | NFC_AR_00_7E800_16.07.00 | |

System partition changes needs to be taken from above manifest build and vendor partition changes (HAL, Extension Libraries, Extension Jar) needs to be taken from NXP MW tag of GIT HUB paths mentioned below.

6.2.1 Downloading Android source code from AOSP Public

Use following command to get source code for Android-16.0.0 r2

```
repo init -u https://android.googlesource.com/platform/manifest -b android-16.0.0_r2 repo sync --force-sync
```

For detailed steps to download Android source code refer Android website: http://source.android.com/source/downloading.html

Android NFC Setup Guide

6.2.2 Integrate the system partition hot fixes given separately in the release email

6.2.3 Building the source code

Use android build instructions from Android website for building android OS image:

http://source.android.com/source/building.html

Build name for RB3 development board is **DB845C.** For device specific build (e.g. RB3), additional steps as described in link below needs to be followed.

https://source.android.com/setup/build/running

Information about the public APIs supported by Android NFC are available on following links:

http://developer.android.com/reference/android/nfc/package-summary.html

http://developer.android.com/reference/android/nfc/tech/package-summary.html

6.3 Android NXP NFC SW Delivery Package

6.3.1 Android NXP NFC Package Description

| Project/Repository | Repository Link | Branch |
|-----------------------------|---|------------------------|
| nfcandroid_nfc_hidlimpl | https://github.com/NXPNFCProject/nfcandroid_nfc_hi_dlimpl | br_ar_16_aosp_mainline |
| nfcandroid_se_hidlimpl | https://github.com/NXPNFCProject/nfcandroid_se_hid_limpl | br_ar_16_aosp_mainline |
| nfcandroid_weaver_hidlimpl | https://github.com/NXPNFCProject/nfcandroid_weave r_hidlimpl | br_ar_16_aosp_mainline |
| nfcandroid_keymint_hidlimpl | https://github.com/NXPNFCProject/nfcandroid_keymint_hidlimpl | br_ar_16_aosp_mainline |
| nfcandroid_nxp_ese_clients | https://github.com/NXPNFCProject/nfcandroid_nxp_e se_clients | br_ar_16_aosp_mainline |
| NXPNFC_Reference | https://github.com/NXPNFCProject/NXPNFC_Reference | br_ar_16_aosp_mainline |
| NXPNFC_I2CDriver | https://github.com/NXPNFCProject/NXPNFC_I2CDriver | br_ar_16_aosp_mainline |
| NXPESE_SPIDriver | https://github.com/NXPNFCProject/NXPESE_SPIDriver | br_ar_16_aosp_mainline |
| NFC_NCIHAL_docs | https://github.com/NXPNFCProject/NFC NCIHAL do cs | br_ar_16_aosp_mainline |
| nfc-NXPNFCC_FW | https://github.com/NXP/nfc-NXPNFCC_FW | br_ar_16_aosp_mainline |
| NXPAndroidDTA | https://github.com/NXPNFCProject/NXPAndroidDTA | br_ar_16_aosp_mainline |
| nfcandroid_frameworks | https://github.com/NXPNFCProject/nfcandroid_frame works.git | br_ar_16_aosp_mainline |

Android NFC Setup Guide

| libnfc_vendor_extn | https://github.com/NXPNFCProject/NFC NCIHAL lib nfc-nci | br_ar_16_aosp_mainline |
|--------------------------|--|------------------------|
| nfcandroid_modules_nfc | https://github.com/NXPNFCProject/nfcandroid_modules_nfc.git | br_ar_16_aosp_mainline |
| nfcandroid_frameworks | https://github.com/NXPNFCProject/nfcandroid_frame works_non_updatable.git | br_ar_16_aosp_mainline |
| nfcandroid_secureelement | https://github.com/NXPNFCProject/nfcandroid_secure element.git | br_ar_16_aosp_mainline |

Table 1: Android NXP NFC Package Description

6.3.2 Integration of NXP NFC Modules for SNxxx & PN557

Modify/Add AOSP directories in-place with NXP GitHub sources as per the following table:

| Module | NXP GitHub sources | Integration Path | Description | Applicable Chip type |
|--|--|--|--|----------------------|
| NCI based NFC stack implementation | nfcandroid_modules_n fc/libnfc-nci | \$ANDROID_ROOT/packages/ modules/Nfc/libnfc-nci/ | NCI based NFC stack. It is a derived module originally from AOSP (Android Open Source Project). | SNxxx & PN557 |
| HAL implementation for NFC | nfcandroid_nfc_hidlimp | \$ANDROID_ROOT/hardware/nxp/nfc | Hardware abstraction layer for NXP specific controllers. This directory includes the configuration files also as below. 1.libnfc-nci.conf (to be pushed to vendor/etc on target) 2.libnfc-nxp- sn100x_example.conf (to be pushed to vendor/etc on target as libnfc-nxp.conf. 3.libnfc-nxp_RF- sn100x_example.conf(to be pushed to /vendor/ on target) NOTE: these configuration files are example files. Contact NXP support engineer for creating exact file for your platform. | SNxxx & PN557 |
| HAL implementation for Secure Element | nfcandroid_se_hidlimpl | \$ANDROID_ROOT/hardware/ nxp/secure_element | Hardware abstraction layer implementation for Secure Element. | SNxxx |
| HAL implementation for Weaver | nfcandroid_weaver_hi dlimpl | \$ANDROID_ROOT/hardware/ nxp/weaver | Hardware abstraction layer implementation for Weaver. | SNxxx |
| HAL implementation for keymint | nfcandroid_keymint_hi dlimpl | \$ANDROID_ROOT/hardware/ nxp/keymint | Hardware abstraction layer implementation for Keymint | SNxxx |
| HAL implementation for authsecret | nfcandroid_keymint_hi dlimpl/authsecret | \$ANDROID_ROOT/hardware/ nxp/keymint/authsecret | Hardware abstraction layer implementation for authsecret | SNxxx |
| eSe Client Library | nfcandroid_nxp_ese_c lients | \$ANDROID_ROOT/hardware/ nxp/secure_element_extns | NXP eSE client library implementation | SNxxx |

Android NFC Setup Guide

| Vendor APIs | nfcandroid_framework s | \$ANDROID_ROOT/vendor/nx p/frameworks | NXP vendor framework APIs for NXP extension interfaces, SEMS & GSMA interfaces. | SNxxx & PN557 |
|--------------------------------|--|--|---|-----------------------------|
| NFC I2C Driver | NXPNFC_I2CDriver/nf c | \$KERNEL_ROOT/drivers/nxp/ nfc | NFCC I2C Interface | SNxxx & PN557 |
| NFC SPI Driver | NXPESE_SPIDriver/es e | \$KERNEL_ROOT/drivers/nxp/ ese | NFCC SPI Interface | SNxxx |
| Nxp Nfc Documentation | NFC_NCIHAL_docs | NA | NXP framework Java Docs | SNxxx & PN557 |
| NFCC Firmware | nfc-NXPNFCC_FW | \$ANDROID_ROOT/system/ve vendor/lib64 | NFCC FW binary | SNxxx & PN557 |
| DTA | NXPAndroidDTA | \$ANDROID_ROOT/vendor/nx p/nfc-dta | Device Test Application (DTA) used for NFC Forum testing. | SNxxx & PN557 |
| SePolicy | NXPNFC_Reference/ /nxp/SNxxx/sepolicy | \$ANDROID_ROOT/vendor/nx p/SNxxx/sepolicy | SE Policy updates for NFC and SE service | SNxxx & PN557 |
| System Extension Library | NFC_NCIHAL_libnfc- nci/ | \$ANDROID_ROOT /vendor/nxp/libnfc_vendor_ext n | NXP proprietary feature implementation for upgrade devices in mainline architecture | SNxxx & PN557 & PN560 |
| Vendor Extension Library | NFC_NCIHAL_libnfc- ncil | \$ANDROID_ROOT /hardware/nxp/nfc/snxxx/libnfc _vendor_extn | NXP proprietary feature implementation for launch devices in mainline architecture | SNxxx & PN557 & PN560 |

Table 2 : Android NXP NFC Integration

6.3.3 Android NFC Apps and Lib on Target

| Projects | Compiled Files | Location in target device |
|---------------------------------------|--|---|
| nfcandroid_modules _nfc/framework | Will be part of framework.jar | /system/framework |
| nfcandroid_modules _nfc/NfcNci | com.android.nfcser vices.apex | android/out/soong/.intermediates/packages/modules/Nfc/apex/com.android.nf cservices/android_common_scs_com.android.nfcservices\ |
| nfcandroid_secureel ement | oat/ SecureElement.apk | /sytem/app/SecureElement |
| nfcandroid_modules _nfc/libnfc-nci | com.android.nfcser vices.apex | android/out/soong/.intermediates/packages/modules/Nfc/apex/com.android.nf cservices/android_common_scs_com.android.nfcservices\ |
| nfcandroid_nfc_hidli mpl | nfc_nci_nxp_snxxx. so android.hardware.nf c-service.nxp | /vendor/lib64 /vendor/bin/hw/ |
| nfcandroid_nfc_hidli mpl/extns | vendor.nxp.nxpnfc_ aidl-V1-ndk.so | /vendor/lib64 |
| nfcandroid_se_hidli mpl | ese_spi_nxp_snxxx .so android.hardware.s ecure_element- | /vendor/lib64 /vendor/bin/hw/ |

Android NFC Setup Guide

| | service.nxp | |
|---------------------------------|--|---|
| nfcandroid_keymint _hidlimpl | libjc_keymint.nxp.s o libjc_keymint_trans port.nxp.so android.hardware.s ecurity.keymint- service.strongbox.n xp android.hardware.a uthsecret- service.nxp | /vendor/lib64 /vendor/bin/hw /vendor/bin/hw |
| nfcandroid_weaver_ hidlimpl | ese_weaver.so android.hardware.w eaver-service.nxp | /vendor/lib64 /vendor/bin/hw |
| nfcandroid_nxp_ese _clients | se_extn_client.so | /vendor/lib64 |
| Nfcandroid_framew orks | com.nxp.nfc.jar com.nxp.sems.jar com.nxp.osu.jar | /system/framework /product/framework /product/framework |
| NFC_NCIHAL_libnf | libnfc_vendor_extn. so (for upgrade devices) | /system/lib64 |
| | libnfc_vendor_extn. so (for launch devices) | /vendor/lib64 |

Table 3 : Android NXP NFC Apps & Library Info on Target

Android NFC Setup Guide

6.3.4 Android Platform Modifications

6.3.4.1 Android platform specific patches

Follow Step 1 to enable the following:

- Enable NFC, host card emulation and HCE-Felica features.
- Provide permission to i2c(nxp-nci) and spi(p73) driver for NFC Hal and SE Hal
- Assign object type for i2c(nxp-nci) and spi(p73) devices for providing se policy permissions
- Android SE Policy changes (these changes help in defining types, classes, permissions and rules for Nfc, SE, Strongbox & Weaver Hal service)
 - 1. Integrate all required sepolicy. Reference SE policy changes are available in below link

NXPNFC Reference/nxp/SNxxx/sepolicy at br ar 16 aosp mainline NXPNFCProject/NXPNFC Reference · GitHub

Make sure to add corresponding HAL SEPolicy dirs to device makefile. Example as below BOARD_SEPOLICY_DIRS += vendor/\$(NXP_VENDOR_DIR)/SNxxx/sepolicy \

vendor/\$(NXP_VENDOR_DIR)/SNxxx/sepolicy/authsecret \
vendor/\$(NXP_VENDOR_DIR)/SNxxx/sepolicy/keymint \
vendor/\$(NXP_VENDOR_DIR)/SNxxx/sepolicy/nfc \
vendor/\$(NXP_VENDOR_DIR)/SNxxx/sepolicy/se \
vendor/\$(NXP_VENDOR_DIR)/SNxxx/sepolicy/weaver

6.3.4.2 Android Source Build

To perform a full build, execute the following command from android root directory:

- cd \$ANDROID ROOT/
- make api-stubs-docs-non-updatable-update-current-api
- make system-api-stubs-docs-non-updatable-update-current-api
- make -j\$(nproc)

Android NFC Setup Guide

6.4 Host SW Source Package Compilation

6.4.1 Compilation Flags

NXP_EXTNS=TRUE Enable NXP extensions

Table 4: Compilation Flags

6.4.2 Configuration Files

Host specific configuration are available in the below path and all the configs are self-explanatory and some of the configs are listed below

SN110 config path:

https://github.com/NXPNFCProject/nfcandroid_nfc_hidlimpl/tree/br_ar_16_aosp_mainline/snxxx/halimpl_v2/conf/SN1xx/sn110/gen-config-files

SN100 config path:

https://github.com/NXPNFCProject/nfcandroid_nfc_hidlimpl/tree/br_ar_16_aosp_mainline/snxxx/halimpl_v2/conf/SN1xx/sn100/gen-config-files

SNXXX config path: Folder with chiptype name on below path <SNXXX>/gen-config-file

Ex. Sn220/gen-config-file

https://github.com/NXPNFCProject/nfcandroid_nfc_hidlimpl/tree/br_ar_16_aosp_mainline/snxxx/halimpl_v2/conf

PN557 config path:

https://github.com/NXPNFCProject/nfcandroid_nfc_hidlimpl/tree/br_ar_16_aosp_mainline/snxxx/halimpl_v2/conf/PN557/gen-config-files

SN300 Config path:

https://github.com/NXPNFCProject/nfcandroid_nfc_hidlimpl/tree/br_ar_16_aosp_mainline/snxxx/halimpl_v2/conf/SN300/gen-config-files

PN560 Config path:

https://github.com/NXPNFCProject/nfcandroid_nfc_hidlimpl/tree/br_ar_16_aosp_mainline/snxxx/halimpl_v2/conf/PN560/gen-config-files

Note:

- With mainline to support OEM features with Vendor Freeze libnfc-nci.conf cannot be updated. Hence we propose to place NXP provided libnfc-nci.conf in /product/etc/ in system partition, to avoid complexity in handling OEM features through system extn library.
- In case, Customer chooses other product path, it is recommended to delete the libnfc-nci.conf from other paths to avoid the AOSP configuration override issue.

Android NFC Setup Guide

6.5 Feature Integration guideline

6.5.1 OMAPI Secure Element terminal configuration

Assignment of terminal number to each SE interface (SPI) is based on system configuration in **libnfc-nxp-**<snxxx>-example.conf. These terminals are mapped to OMAPI framework SEService readers list. This section is not applicable for PN557.

Terminal Naming should start from eSE1 and continue in ascending order

(This is as per OMAPI SE service implementation)

Only terminal which are mapped in configuration file are reflected as readers available in SE service.

For Example: -

Order below is just an example

```
NXP_SPI_SE_TERMINAL_NUM="eSE1" -> eSE domain accessed via SPI interface
```

Additionally, from Android 11 onwards it is mandatory to enable terminals as per the system configuration in vendor/etc/vintf/manifest/secure_element-service-nxp.xml.xml

Based on number of terminals getting enabled in config file corresponding number of terminal instances need to be updated in manifest.xml as shown below

```
<manifest version="1.0" type="device">
    <hal format="aidl">
        <name>android.hardware.secure_element</name>
        <version>1</version>
        <fqname>ISecureElement/eSE1</fqname>
        </hal>
    </manifest>
```

6.5.2 NFC DTA Setup

6.5.2.1 NFC DTA Source

Information of NXPAndroidDTA Project repositories in the GitHub are as below:

NFC DTA source can be downloaded from the below link:

https://github.com/NXPNFCProject/NXPAndroidDTA/tree/br ar new dta arch

Please make sure checkout to branch "br_ar_new_dta_arch" in NxpAndroidDTA repo.

Copy NxpAndroidDTA source to <ANDROID_ROOT>/vendor/nxp/nfc-dta folder

Android NFC Setup Guide

6.5.2.2 Build NFC DTA

After building DTA, it generates DTA apk. To install DTA on the android device, ensure that adb is installed on the system and USB cable is connected between the system and the android device.

6.5.2.3 NFC DTA APK

To install NXPDTA APK, use below steps:

adb root
adb remount
adb push NXPDTA /vendor/app/
adb reboot


Configuration changes required before running NFC forum test cases:

- pull libnfc-nci.conf file from the device using adb pull /product/etc/libnfc-nci .
- Modify parameter ISO15693_SKIP_GET_SYS_INFO_CMD value from 0 to 1.
- Push modified conf file in the device using adb push libnfc-nci.conf /product/etc/
- Reboot the device using adb reboot.

Before running DTA APK

Switch ON the NFC service option in Settings, Settings->Connected devices-> Connection preferences -> NFC as ON.

Once after NFC is ON in figure 3, select Contactless payments & it will go to Default wallet app screen. In this Select NXP DTA and come back to home screen & launch NXP DTA application.

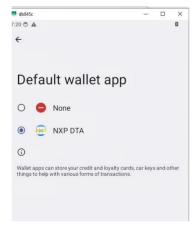

Refer DTA setup guide(link) for the usage of DTA application.

Android NFC Setup Guide

6.5.3 Firmware Download

NXP provides precompiled firmware for ARM platforms. NXP also can provide firmware as .c file and it can be compiled as .so file with the platform compiler. Firmware resides at location /system/vendor/lib64/ on the android target system.

Firmware can be updated when NXP releases an updated version. Steps to update are as follows:

- 1. Compile the firmware to .so file using the file received in .C file format. If firmware is in .so format then this step can be skipped.
- 2. Push the firmware file to
 - a. /system/vendor/lib64/libsn100u_fw.so for SN1xx
 - b. /system/vendor/lib64/lib<snxxx>u_fw.so for SNxxx
 - c. /system/vendor/lib64/libpn557_fw.so for PN557on target.
- 3. Reboot the device or disable and enable NFC service. New firmware will be downloaded during the NFC service boot up
- 4. Firmware file can be downloaded from below location for all for all chip types with folder name as <chiptype> Ex. Sn220

https://github.com/NXP/nfc-NXPNFCC_FW/tree/master

Note 1: Firmware download can take up around 10 seconds including host delay.

Note 2: It is strongly recommended not to modify the original firmware download logic of Android NFC.

Note 3: It is recommended that Firmware is always upgraded and not downgraded. If firmware version is required to be downgraded, then please consult NXP.

Android NFC Setup Guide

6.5.4 NXP NFC Extension Library Integration

NXP provides extension library to support the proprietary features in mainline architecture for upgrade and launch devices.

Below steps shall be followed to enable NXP NFC extension features for upgrade devices

- Download NXP NFC extension library source from NXP git hub
 - https://github.com/NXPNFCProject/NFC NCIHAL libnfcnci/hardware/nxp/nfc/snxxx/libnfc_vendor_extn/
- Integrate NXP NFC extension library source to AOSP Code (br_ar_16_aosp_mainline)
 - cp -rf nxp_nci_hal_libnfc-nci/hardware/nxp/nfc/snxxx/libnfc_vendor_extn/ android/vendor/nxp/libnfc_vendor_extn
 - This step is applicable only for HIDL1.2. Comment the below line in Android.bp to avoid compilation issue. Please skip this step for AIDL1.0.
 - # "vendor.nxp.nxpnfc aidl-V1-ndk",
- Add NXP NFC extension package in "android/vendor/nxp/SNxxx/device-nfc.mk"
 - PRODUCT_PACKAGES += libnfc_vendor_extn_sys

Below steps shall be followed to enable NXP NFC extension features for launch devices

- Download NXP NFC extension library source from NXP git hub
 - https://github.com/NXPNFCProject/NFC_NCIHAL_libnfcnci/hardware/nxp/nfc/snxxx/libnfc_vendor_extn/
- Integrate NXP NFC extension library source to AOSP Code (br_ar_16_aosp_mainline)
 - cp -rf nxp_nci_hal_libnfc-nci/hardware/nxp/nfc/snxxx/libnfc_vendor_extn/ android/hardware/nxp/nfc/snxxx/libnfc_vendor_extn
 - Apply the patch to enable vendor extension library
 - cd android/hardware/nxp/nfc/snxxx/libnfc_vendor_extn
 - Disable vendor extension library of upgrade device and enable vendor extension library of launch device by making below change

```
-00 -81,7 +81,7 00 cc defaults {
 cc library shared {
     name: "libnfc vendor extn sys",
     stem: "libnfc vendor extn",
     enabled: true,
     enabled: false,
     defaults: [
          "extn defaults",
          "ext sys headers",
-00 -114,7 +114,7 00 cc library shared {
     name: "libnfc vendor extn vnd",
     stem: "libnfc vendor extn",
     proprietary: true,
     enabled: false,
     enabled: true,
     defaults: [
          "extn defaults",
     ],
```

Android NFC Setup Guide

- Add NXP NFC extension package in "android/vendor/nxp/SNxxx/device-nfc.mk"
 - PRODUCT_PACKAGES += libnfc_vendor_extn_vnd

OEM have to take care of vendor API level settings to correctly pick the system or vendor extension library based on launch or upgrade device.

Example:

Add the following build prop to set the vendor API level, if OEM using the pre gpp source code

- Pull the the /vendor/build.prop, add the following line and reboot
 - ro.vendor.api level=36

6.5.5 NXP NFC Jar Integration

NxpNfc Jar uses system API's so NxpNfc Jar should be used with system applications only. By default, we support NxpNfc Jar dynamically as shared Jar.

- Loading as NxpNfc Jar dynamically as shared Jar (Runtime)
 - o Add the NxpNfc Jar permission file as shown below. File name is com.nxp.nfc.xml

```
<permissions>
  library name="com.nxp.nfc"
    file="/system/framework/com.nxp.nfc.jar" />
</permissions>
```

o Add below changes in Android.bp of NxpNfc Jar module

```
prebuilt_etc {
    name: "com.nxp.nfc.xml",
    sub_dir: "permissions",
    src: "com.nxp.nfc.xml",
}

java_library {
    name: "com.nxp.nfc",
    installable: true,
    required: ["com.nxp.nfc.xml"],
    srcs: [
        "com/**/I*.aidl",
        "com/**/*.java",
    ],
}
```

Add below changes in Android.bp of test application

```
libs: ["com.nxp.nfc"],
uses_libs: ["com.nxp.nfc"],
```

- Loading as NxpNfc Jar as part of application
 - Add below changes in Android.bp of test application

Android NFC Setup Guide

static_libs: ["com.nxp.nfc"]
API Documentation Link:

Pre-requisite for calling other API's:

6.6 Enable SecureElement OMAPI AIDL interface to Vendor Services

To enable communication from KeyMint/Weaver HAL to SecureElement OMAPI AIDL service, following settings Required in the build environment

Add overlay in the device configuration folders as below (Example is given as per Dragon board)
 Create new folder device/linaro/dragonboard/overlay/packages/apps/SecureElement/res/value

Create new file "config.xml" with following content:

<?xml version="1.0" encoding="utf-8"?>
<resources>
 <!-- To enable vendor stable service, set this to true and
 make sure its vntf manifest entry is also configured. -->
 <bool name="secure_element_vintf_enabled">true</bool>
</resources>

config.xml file should be present in the "device/linaro/dragonboard/overlay/packages/apps/SecureElement/res/value"

Add following line in <ANDORID_ROOT>/vendor/nxp/SNxxx/BoardConfigNfc.mk
 PRODUCT_MANIFEST_FILES += packages/apps/SecureElement/secure_element-service.xml

6.7 Strongbox, Weaver & AuthSecret Hal Integration

NXP Secure Element enables tamper-resistant key storage for Android Apps using StrongBox. StrongBox is an implementation of the Keymint HAL that resides in a hardware security module.

Weaver provides secure storage of secret value (device PIN/Password) that may only be read if the corresponding key has been presented.

This section is not applicable for PN557

6.7.1 Weaver Hal Integration

NXP Weaver applet shall be preinstalled on eSE, please contact NXP CAS for further support.

Below steps shall be followed to enable Weaver Hal in Android.

Download Weaver Hal source from NXP git hub

AN13303

- https://github.com/NXPNFCProject/nfcandroid weaver hidlimpl
- Integrate Weaver Hal to AOSP Code (br_ar_16_aosp_mainline)
 - cp -rf nfcandroid_weaver_hidlimpl/weaver AOSP/hardware/nxp/weaver
 - Copy below folder if keymint hal is not integrated, please skip if keymint hal is integrated
 - cp –rf nfcandroid keymint hidlimpl/keymint/transport/ AOSP/hardware/nxp/weaver
 - Update include path in AOSP/hardware/nxp/weaver/libese_weaver/Android.bp
- · Required sepolicy rules for Weaver HAL in link below

NXP

- https://github.com/NXPNFCProject/NXPNFC_Reference/tree/br_ar_16_aosp_mainline/nxp/SNx xx/sepolicy/weaver
- Add Below permission in "AOSP/vendor/nxp/SNxxx/sepolicy/file context"
 - "(vendor|system/vendor)/bin/hw/android\.hardware\.weaver-service\.nxp u:object_r:hal_weaver_default_exec:s0"
- Add Weaver HAL Service Pkg in "AOSP/vendor/nxp/SNxxx/Device.mk"
 - PRODUCT PACKAGES += android.hardware.weaver-service.nxp
 - BOARD SEPOLICY DIRS += vendor/\$(NXP VENDOR DIR)/SNxxx/sepolicy/weaver
- Minimal FW logic shall be enabled in NFC Hal(only required for SN110), Please make sure below configs are set
 - Android makefile: -DNXP_NFC_RECOVERY=TRUE
 - · Libnfc-nxp config file option
 - # Enable or Disable the minimal FW recovery support.
 - # This logic will get enabled on early NFC hal boot.
 - # Disable NFCC RECOVERY support 0x00
 - # Enable NFCC RECOVERY support 0x01
 - NXP_NFCC_RECOVERY_SUPPORT=0x01
 - NFC hal shall be configured as early hal, SE policy changes shall be adopted in SE and NFC hal

https://github.com/NXPNFCProject/NXPNFC_Reference/tree/br_ar_16_aosp_mainline/nxp/SNx xx/sepolicy

Weaver VTS test cases to be executed:

| SI No | Module | Location in AOSP | Steps to Execute |
|----------|------------------------|------------------------------|---|
| 1 | VtsHalWeaverTargetTest | hardware/int erfaces/weav | run vts -a arm64-v8a -m VtsHalWeaverTargetTest |

Android NFC Setup Guide

| | or/uts/ | |
|--|---------|--|
| | ei/vts/ | |
| | | |
| | | |

6.7.2 Strongbox Hal(Keymint) Integration

Android supports hardware backed Keystore implementation. Keymint HAL 400 has been included in A16 release. All three version of Keymint Hals are available in GitHub, but are mutually exclusive. Only one service should be integrated in system. Also corresponding NXP Keymint applet shall be preinstalled on eSE. Please contact NXP CAS for info on which Hardware backed keystore is supported for specific chip types.

Keymint uses OMAPI Transport layer. Hence ARA rules need to be updated for keymint HAL to access eSE via OMAPI. Please contact NXP CAS for ARA applet and ARA rules support.

- Get Keymint HAL source from below location
 - o https://github.com/NXPNFCProject/nfcandroid keymint hidlimpl/tree/br ar 16 aosp mainline
- cp -rf nfcandroid_keymint_hidlimpl/keymint AOSP/hardware/nxp/keymint
 - Enable compilation of strongbox HAL source by adding android.hardware.security.keymint3-service.strongbox.nxp in board config file (e.g. vendor/nxp/SNxxx/device-nfc.mk)
 PRODUCT PACKAGES += android.hardware.security.keymint3-service.strongbox.nxp

Use android.hardware.security.keymint4-service.strongbox.nxp for KM400 accordingly.

- Required sepolicy changes as below in vendor/nxp/SNxxx/sepolicy/file_contexts
 #StrongBox Keymint HAL
 - + /vendor/bin/hw/android\.hardware\.security\.keymint3-service\.strongbox u:object r:hal keymint strongbox exec:s0
- vendor/nxp/SNxxx/sepolicy/hal_keymint_strongbox.te shall have changes available in below link
 - https://github.com/NXPNFCProject/NXPNFC_Reference/blob/br_ar_16_aosp_mainline/ nxp/SNxxx/sepolicy/keymint/hal_keymint_strongbox.te
- vendor/nxp/SNxxx/config.fs shall have changes available in below link & config.fs file should be added as TARGET_FS_CONFIG_GEN (e.g., TARGET_FS_CONFIG_GEN += vendor/nxp/SNxxx/config.fs) in BoardConfigNfc.mk
 - https://github.com/NXPNFCProject/NXPNFC_Reference/blob/br_ar_16_aosp_mainline/ nxp/SNxxx/config.fs
- Please confirm below binaries/files are present on device after flashing KM300 integrated image:
 - KM300 HAL binary: /vendor/bin/hw/android.hardware.security.keymint3-service.strongbox.nxp
 - o KM300 init rc: /vendor/etc/init/android.hardware.security.keymint3-service.strongbox.nxp.rc
 - KM300 VINTF Manifest: /vendor/etc/vintf/manifest/android.hardware.security.keymint3service.strongbox.nxp.xml

Android NFC Setup Guide

- KM300(SHARED-SECRET) VINTFManifest: /vendor/etc/vintf/manifest/ android.hardware.security.sharedsecret3-service.strongbox.nxp.xml
- uuid mapping xml file : vendor/etc/hal_uuid_map_config.xml
 Refer vendor/nxp/SNxxx/hw/SN300/hal_uuid_map_config.xml

6.7.2.1 Changes required for Keymint VTS, CTS and RKPD test case execution:

- Enable Keystore attest key feature
 - O PRODUCT COPY FILES += \

frameworks/native/data/etc/android.hardware.keystore.app_attest_key.xml:system/etc/permissions /android.hardware.keystore.app attest key.xml

For RKP functionality

- PRODUCT_PRODUCT_PROPERTIES += remote_provisioning.hostname=remoteprovisioning.googleapis.com
- PRODUCT_PRODUCT_PROPERTIES += remote_provisioning.enable_rkpd=true
- PRODUCT_PRODUCT_PROPERTIES += remote_provisioning.strongbox.rkp_only=true

Setting ro.vendor.build.security_patch for Keymint 3.0 VTS Test cases

VENDOR SECURITY PATCH = \$(PLATFORM SECURITY PATCH)

For testing deleteAllKeys during factory reset

 PRODUCT_PRODUCT_PROPERTIES += ro.crypto.metadata_init_delete_all_keys.enabled=true

• For Device Id Attestation Testcases

These changes are just for reference only and properties values might vary based on the OEM device configurations.

o PRODUCT_COPY_FILES += \

frameworks/native/data/etc/android.software.device_id_attestation.xml:\$(TARGET_COPY_OUT_VENDOR)/etc/permissions/android.software.device_id_attestation.xml

o PRODUCT_COPY_FILES += \

frameworks/native/data/etc/handheld_core_hardware.xml:\$(TARGET_COPY_OUT_VENDOR)/etc/permissions/handheld_core_hardware.xml

Android NFC Setup Guide

- PRODUCT_PRODUCT_PROPERTIES += ro.product.device_for_attestation=\$(TARGET_PRODUCT)
- PRODUCT_PRODUCT_PROPERTIES += ro.product_product_for_attestation=unknown
- PRODUCT_PRODUCT_PROPERTIES += ro.product.manufacturer_for_attestation=unknown
- o PRODUCT_PRODUCT_PROPERTIES += ro.product.vendor.name=unknown
- PRODUCT_PRODUCT_PROPERTIES += ro.product.name=unknown
- PRODUCT_MODEL_FOR_ATTESTATION := \$(TARGET_PRODUCT)
- o PRODUCT_BRAND_FOR_ATTESTATION := Android

List of Keymint CTS/VTS test cases to be executed:

| SI | Module | Location in | Steps to Execute |
|----|--------------------------------------|---|---|
| No | | AOSP | |
| 1 | VtsAidlKeyMintTargetTest | hardware/inte rfaces/security /keymint/aidl/ vts/functional | run vts -a arm64-v8a -m VtsAidlKeyMintTargetTest |
| 2 | VtsRemotelyProvisionedComponentTests | hardware/inte rfaces/security /rkp/aidl/vts/f unctional | run vts -a arm64-v8a -m VtsHalRemotelyProvisionedComponentTarg etTest |
| 3 | VtsAidlSharedSecretTargetTest | hardware/inte rfaces/security /sharedsecret/ aidl/vts/functi onal | run vts -a arm64-v8a -m VtsAidlSharedSecretTargetTest |
| 4 | CtsKeystoreTestCases | https://source .android.com/ docs/compati | run cts -a arm64-v8a -m CtsKeystoreTestCases |
| 5 | CtsKeystoreWycheproofTestCases | bility/cts/dow nloads | run cts -a arm64-v8a -m CtsKeystoreWycheproofTestCases |
| 6 | CtsKeystorePerformanceTestCases | | run cts -a arm64-v8a -m CtsKeystorePerformanceTestCases |

Remote Key Provision test cases to be executed.

| SI N o | Package/tool | Location in AOSP | Description | Steps to Execute |
|--------------|---------------------------------|--|--|---|
| 1 | rkp_factory_extra ction_tool | system/security/provisi oner/ | Extract the RKP CSR in factory to share with Google. This shall be done prior to any test. | adb push rkp_factory_extraction_tool /vendor/bin/ adb shell /vendor/bin/rkp_factory_extraction_to ol |
| 2 | rkpdapp.apk | packages/modules/Rem oteKeyProvisioning/app / | RKP service | This always runs in background on boot complete. |
| 3 | RkpdAppIntegrati onTests.apk | packages/modules/Rem oteKeyProvisioning/app /tests/e2e | RKP end to end tests | adb install -t RkpdAppIntegrationTests.apk adb shell am instrument -w com.android.rkpdapp.e2etest/androidx .test.runner.AndroidJUnitRunner |
| 4 | RkpdAppUnitTest s.apk | packages/modules/Rem oteKeyProvisioning/app /tests/unit | RKP unit test | adb install -t RkpdAppUnitTests.apk adb shell am instrument -w com.android.rkpdapp.unittest/android x.test.runner.AndroidJUnitRunner |
| 5 | RkpdAppStressTe sts.apk | packages/modules/Rem oteKeyProvisioning/app /tests/ stress | RKP stress test | adb install -t RkpdAppStressTests.apk adb shell am instrument -w com.android.rkpdapp.stress/androidx.t est.runner.AndroidJUnitRunner |

6.7.3 SE Update Agent Integration

SE Update Agent is a module for performing updates to the Secure Element components (e.g. Applets).

SE update agent, available at **/vendor/bin/hw/se_update_agent.nxp** uses update (SEMS) scripts for performing updates.

Started by **init** process on device early boot, SE Update Agent parses the Update scripts if available under **/vendor/etc/loaderservice** and executes them to perform updates to SE components if component version available in eSE is lower than the version in corresponding Update scripts.

It also has the provision to be triggered by Android OTA agent. OTA agent after downloading the OTA package and flashing the system images, triggers SE Update agent to check if update to SE components is required.

Only metadata embedded Update(SEMS) scripts should be used for update. Contact CAS for more information.

Follow below steps to Integrate SE Update Agent (se_update_agent.nxp):

AN13303

Android NFC Setup Guide

- Download SE Update Agent source from NXP github:
 https://github.com/NXPNFCProject/nfcandroid nxp ese clients/tree/br ar 16 aosp mainline
- Integrate to AOSP

NXP

- cp -rf nxp_ese_clients AOSP/hardware/nxp/secure_element_extns
- Add Below permission in "AOSP/vendor/nxp/SNxxx/sepolicy/file_contexts".
 /vendor/bin/hw/se_update_agent\.nxp_u:object_r:hal_keymint_strongbox_exec:s0
- Include binary name under PRODUCT_PACKAGES in appropriate device makefile.
 - PRODUCT PACKAGES += se update agent.nxp
- vendor/nxp/SNxxx/config.fs shall have changes available in below link & config.fs file should be added
 as TARGET_FS_CONFIG_GEN (e.g., TARGET_FS_CONFIG_GEN += vendor/nxp/SNxxx/config.fs) in
 BoardConfigNfc.mk
 - https://github.com/NXPNFCProject/NXPNFC_Reference/blob/br_ar_16_aosp_mainline/nxp/SN xxx/config.fs
- Make sure uuid mapping xml file (vendor/etc/hal_uuid_map_config.xml) UUID mapping for SE
 Update Agent uuid (2904). OEMs can use some other number if this conflicts with existing UUIDs.
 Make sure to update the same in vendor/nxp/SNxxx/config.fs
- Since SE Update agent executes on device early boot, it communicates to eSE directly via eSE HAL. This requires changes at eSE HAL side to support serialized access from multiple clients.

eSE hal changes to support serialized access to eSE HAL from multiple clients:

Since customer don't use NXP eSE HAL they can refer below commits for doing the changes on the eSE HAL

repo: nfcandroid_se_hidlimpl

Reference changes from NXP eSE HAL:

https://github.com/NXPNFCProject/nfcandroid_se_hidlimpl/commit/ee7b46270e6846e5413dcaa71bb220e84a44bb8a

https://github.com/NXPNFCProject/nfcandroid_se_hidlimpl/commit/2fe470e30a51752616c7f49f4e 3f1f4f7bf06088

6.7.4 AuthSecret Hal Integration

NXP IAR applet shall be preinstalled on eSE, please contact NXP CAS for further support. Below steps shall be followed to enable AuthSecret Hal in Android.

- Download KeyMint Hal source from NXP git hub
 - https://github.com/NXPNFCProject/nfcandroid keymint hidlimpl/tree/br ar 16 aosp mainline
- Integrate Weaver Hal to AOSP Code (br_android_ncihalx_comm_16)
 - cp -rf nfcandroid keymint hidlimpl/ authsecret AOSP/hardware/nxp/authsecret
- · Copy below folder if keymint hal is not integrated, please skip if keymint hal is integrated
 - cp -rf nfcandroid_keymint_hidlimpl/transport/ AOSP/hardware/nxp/authsecret
 - Update include path in AOSP/hardware/nxp/authsecret/Android.bp
- · Required sepolicy rules for AuthSecret HAL in link below
 - https://github.com/NXPNFCProject/NXPNFC_Reference/blob/br_ar_16_aosp_mainline/nxp/SN xxx/sepolicy/authsecret/hal authsecret default.te
 - https://github.com/NXPNFCProject/NXPNFC_Reference/blob/br_ar_16_aosp_mainline/nxp/SN xxx/sepolicy/se/secure_element.te
- Add Below permission in "AOSP/vendor/nxp/SNxxx/sepolicy/file_context"
 - "/vendor/bin/hw/android\.hardware\.authsecret-service\.nxp u:object_r:hal_authsecret_default_exec:s0"
- Add AuthSecret HAL Service Pkg in "AOSP/vendor/nxp/SNxxx/Device.mk"
 - PRODUCT_PACKAGES += android.hardware.authsecret-service.nxp
- BOARD_SEPOLICY_DIRS += vendor/\$(NXP_VENDOR_DIR)/SNxxx/sepolicy
- vendor/nxp/SNxxx/config.fs shall have changes available in below link & config.fs file should be added as TARGET_FS_CONFIG_GEN (e.g., TARGET_FS_CONFIG_GEN += vendor/nxp/SNxxx/config.fs) in BoardConfigNfc.mk
 - https://github.com/NXPNFCProject/NXPNFC_Reference/blob/br_ar_16_aosp_mainline/nxp/SN xxx/config.fs
- Make sure uuid mapping xml file (vendor/etc/hal_uuid_map_config.xml) UUID mapping for AuthSecret HAL service UID.
- AuthSecret VTS test cases to be executed:

| SI No | Module | Location in AOSP | Steps to Execute |
|----------|----------------------------|---|---|
| 1 | VtsHalAuthSecretTargetTest | hardware/int erfaces/auths ecret/aidl/vts | run vts -a arm64-v8a -m VtsHalAuthSecretTargetTest |

NXP AN13303
Android NFC Setup Guide

6.8 Enable ULPDET feature (Optional)

To enable ULPDET feature please add following property to the "libnfc-nxp.conf"

NXP_DEFAULT_ULPDET_MODE=1

Note: This feature is supported only on SN220 or later chipset. This is not applicable for SN1xx & PN557.

6.9 Power Tracker feature (Optional)

 To enable Power feature please add following property to the "libnfc-nxp.conf" NXP SYSTEM POWER TRACE POLL DURATION SEC=30

- 2) By Default power tracker specific libraries build as part of NFC HAL compilation
- 3) During full build add command line argument POWER_TRACKER_FEATURE=true to enable power tracker service.

Example: make TARGET_NXP_NFC_HW=<SNXXX> POWER_TRACKER_FEATURE=true

For more information related to Power tracker integration & test steps please refer below link.

Link:

https://github.com/NXPNFCProject/nfcandroid_nfc_hidlimpl/blob/br_ar_16_aosp_mainline/snxxx/halimpl/power-tracker/README.txt

Note: This feature is supported only on SN220.

6.10 Adding proprietary HALs to device compatibility matrix

Due to the core_hals only restriction (AOSP main branch) in the framework compatibility matrix all the proprietary hal entries added to the Device Framework Compatibility Matrix.

Link for further reference https://source.android.com/docs/core/architecture/vintf/comp-matrices

In the Board or OEM specific make file set below property and its file path

DEVICE_FRAMEWORK_COMPATIBILITY_MATRIX_FILE := vendor/nxp/SNxxx/framework_compatibility_matrix.xml

Below are the contents of framework_compability_matrix.xml shall be added/skipped based on the HALs supported by customer.

vendor/nxp/SNxxx/framework_compatibility_matrix.xml

```
<compatibility-matrix version="1.0" type="framework">
  <hal format="aidl" optional="true">
     <name>android.hardware.security.keymint</name>
     <interface>
     <name>IRemotelyProvisionedComponent</name>
```

Android NFC Setup Guide

```
<instance>strongbox</instance>
    </interface>
  </hal>
  <hal format="hidl" optional="true">
    <name>vendor.nxp.nxpnfc</name>
    <version>2.0</version>
    <interface>
       <name>INxpNfc</name>
       <instance>default</instance>
    </interface>
  </hal>
  <hal format="hidl" optional="true">
    <name>vendor.nxp.nxpese</name>
    <version>1.0</version>
    <interface>
       <name>INxpEse</name>
       <instance>default</instance>
    </interface>
  </hal>
  <hal format="aidl" optional="true">
    <name>android.se.omapi</name>
    <version>1</version>
    <interface>
       <name>ISecureElementService</name>
       <instance>default</instance>
    </interface>
  </hal>
  <hal format="aidl" optional="true">
    <name>vendor.nxp.nxpnfc_aidl</name>
    <version>1</version>
    <interface>
       <name>INxpNfc</name>
       <instance>default</instance>
    </interface>
  </hal>
</compatibility-matrix>
```

6.11 Android15 Observe Mode

6.11.1 Ways to enable and use observed mode & polling loop notifications.

- 1. Default Lx Debug notification/Polling loop notification shall be enabled with Field info notifications, Type A,B,F, timestamp and signal strength etc.
- 2. If Card Emulation application opts-in observe mode and either
 - o It is brought to foreground.
 - Or chosen as default Wallet application (Introduced in A15)
 - Or Chosen in Tap & pay settings.

Below sequence is seen

Android NFC Setup Guide

- The Discovery configuration enables Field detect mode. (Disable Listen, reader allowed)
- When in reader field would receive polling loop notification filters and then NfcService can bind with matching polling-loop-filter registered in its xml file.
- Service can call disable observe mode and enable normal discovery with listen/transaction enabled further continue transaction.
- o Once the transaction is finished it shall reenable observe mode back.

Methods to enable Observe Mode

- NfcAdapter.setObserveModeEnabled(Boolean enabled) API
- In apps host-apdu-service xml add android:defaultToObserveMode="true"
- CardEmulation.setShouldDefaultToObserveModeForService(Component service, Boolean enable) API

6.11.2 Default config options to be enabled for Observe mode

1) By default "nfc_observe_mode_supported" & "nfc_proprietary_getcaps_supported" is disabled, Please use overlay as below to enable the feature

/overlay/packages/apps/Nfc/res/values/config.xml

```
<resources>
    <br/>
    <br/>
```

"nfc proprietary getcaps supported" is used to enable Nfc proprietary get caps support

For example:

https://cs.android.com/android/platform/superproject/main/+/main:device/google/sunfish/rro_overlays/N fcOverlay/res/values/config.xml;l=26?q=nfc_observe_mode_supported&ss=android%2Fplatform%2Fs uperproject%2Fmain

Note: For AIDL1.0 and lower versions does not support get caps command and we need to set nfc proprietary getcaps supported value as false.

- 2) Below config option shall be enabled
 - ⇒ NXP_EXTENDED_FIELD_DETECT_MODE=0x03
 - ⇒ NXP_OBSERVE_MODE_REQ_NOTIFICATION_TYPE=0x02

in libnfc-nxp.conf

6.11.3 Default config options to be enabled for Mainline specific features

By default "nfc_observe_mode_supported" & "nfc_proprietary_getcaps_supported" is disabled, Please use overlay as below to enable the feature

Android NFC Setup Guide

/overlay/packages/apps/Nfc/res/values/config.xml

"nfcc_always_on_allowed" enables the NFC controller to stay on, supporting minimal functions like transparent and card emulation modes.

"enable euicc support" enables EUICC support for offhost card emulation.

"config skuSupportsSecureNfc" enables the secure NFC feature.

6.11.4 Android vendor Logging support

There is a new config "NXPLOG_AVCNCI_LOGLEVEL" in libnfc-nxp.conf to support Android vendor NCI Messages (Command, Response and Notification) support.

6.12 Android one specific

Android one compliant stack is where only vendor partition(HAL source), config files are from NXP remaining layers(Framework, NFC service, JNI and libnfc source) i.e. system partition is default AOSP source. Following section contains list of changes needed for Android-one specific configuration.

This section is not applicable for PN557

6.12.1 Card emulation through Off-host in Android-one platform

To achieve card emulation functionality through off-host(eSE/UICC) on Android one stack below changes are needed in libnfc-nxp config file which is different from regular config options

Default AOSP implementation only supports below config options related to routing table management

- 1) DEFAULT ISODEP ROUTE(libnfc-nci.conf)
- 2) DEFAULT_SYS_CODE_ROUTE(libnfc-nxp.conf)
- 3) DEFAULT_OFFHOST_ROUTE(libnfc-nxp.conf)

| | Value | | |
|-------|-------------|---------|--|
| Route | Android One | Regular | |
| eSE | 0xC0 | 0x01 | |
| UICC1 | 0x80 | 0x02 | |

Android NFC Setup Guide

| UICC2 | 0x81 | 0x03 |
|--------|------|------|
| eUICC1 | 0xC1 | 0x05 |
| eUICC2 | 0xC2 | 0x06 |

Table 5: NFCEE route Ids

Hence the platforms which are willing to use Card emulation functionality through off-host locations shall updateconfig file with values indicated above

6.12.2 To Support eUICC SMB debug over SMB

To use this interface shall use OMAPI terminal reader and also below changes would be needed in libnfc-nxp.conf config options.

- 1. NXP_NFC_SE_TERMINAL_NUM to "eSE2" (can be configurable in order starting from eSE1, as eSE1 used for T=1 SPI in MW default release)
- 2. Make NXP_SE_SMB_TERMINAL_TYPE field as below.(as this is debug feature not enabled by default)
 - 01 for eSE APDU (Apdu Pipe ID : 0x19)
 - 02 for eUICC APDU in SN300(Apdu Pipe ID : 0x27)
 - 03 for eUICC APDU in SN220(Apdu Pipe ID : 0x19)

6.12.3 To configure KeyMint HAL for 2.0 configuration

As default MW KM HAL is configured as KM3.0 shall apply below patch to KM HAL repo

diff --git a/keymint/KM200/__Android.bp__ b/keymint/KM200/Android.bp

similarity index 100%

rename from keymint/KM200/__Android.bp__

rename to keymint/KM200/Android.bp

diff --git a/keymint/KM200/res/config.fs b/keymint/KM200/res/config.fs

index f1b7da3..52deba7 100755

--- a/keymint/KM200/res/config.fs

+++ b/keymint/KM200/res/config.fs

@@ -9,10 +9,10 @@ value:2902

mode: 0755

user: AID_VENDOR_NXP_STRONGBOX

Android NFC Setup Guide

```
group: AID_SYSTEM
-caps: SYS ADMIN SYS NICE
+caps: SYS ADMIN SYS NICE WAKE ALARM
[vendor/bin/hw/android.hardware.weaver@1.0-service.nxp]
mode: 0755
user: AID_VENDOR_NXP_WEAVER
group: AID SYSTEM
-caps: SYS ADMIN SYS NICE
+caps: SYS_ADMIN SYS_NICE WAKE_ALARM
diff --git a/keymint/KM300/Android.bp b/keymint/KM300/ Android.bp
similarity index 100%
rename from keymint/KM300/Android.bp
rename to keymint/KM300/__Android.bp__
diff --git a/keymint/transport/Android.bp b/keymint/transport/Android.bp
index 8ddacd6..58ce80a 100644
--- a/keymint/transport/Android.bp
+++ b/keymint/transport/Android.bp
@@ -42,9 +42,6 @@ cc_library {
 srcs: [
 "*.cpp",
 ],
 defaults: [
    "keymint use latest hal aidl ndk shared",
. ],
 cflags: [
    "-DOMAPI_TRANSPORT",
```

6.13 Android-16 Updates

Android NFC, SE and Keymint features aligned till Android 16 Beta#1 AOSP manifest.

- Enable KM4.0 support by replacing default KM3.0 in MW
- 2. Observer mode with out RF deactivate command
- 3. Observer mode per technology

"-DINTERVAL_TIMER",

Android NFC Setup Guide

6.14 Nfc Module Logging in Android-16

Starting Android-16, libnfc module log level is set to debug. Below command should be used to get verbose level logs.

adb shell setprop persist.log.tag.libnfc nci VERBOSE

6.15 Nxp Nfc Module Logging in Android-16

We have modified the default log level to warning for below modules starting 16.07.00 release onwards. If debug log levels are needed, please update to 0x04 as mentioned below.

NXPLOG_EXTNS_LOGLEVEL=0x04 NXPLOG_NCIHAL_LOGLEVEL=0x04 NXPLOG_FWDNLD_LOGLEVEL=0x04 NXPLOG_TML_LOGLEVEL=0x04 SE_LOG_LEVEL=0x04

7. Legal information

Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Android NFC Setup Guide

Translations — A non-English (translated) version of a document is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Evaluation products — This product is provided on an "as is" and "with all faults" basis for evaluation purposes only. NXP Semiconductors, its affiliates and their suppliers expressly disclaim all warranties, whether express, implied or statutory, including but not limited to the implied warranties of non-infringement, merchantability and fitness for a particular purpose. The entire risk as to the quality, or arising out of the use or performance, of this product remains with customer.

In no event shall NXP Semiconductors, its affiliates or their suppliers be liable to customer for any special, indirect, consequential, punitive or incidental damages (including without limitation damages for loss of business, business interruption, loss of use, loss of data or information, and the like) arising out the use of or inability to use the product, whether or not based on tort (including negligence), strict liability, breach of contract, breach of warranty or any other theory, even if advised of the possibility of such damages.

Notwithstanding any damages that customer might incur for any reason whatsoever (including without limitation, all damages referenced above and all direct or general damages), the entire liability of NXP Semiconductors, its affiliates and their suppliers and customer's exclusive remedy for all of the foregoing shall be limited to actual damages incurred by customer based on

Table of Contents

| 1. | Introduction3 |
|-------|--|
| 2. | Abbreviations4 |
| 3. | Scope5 |
| 4. | General steps for Android NFC integration6 |
| 5. | Architecture Overview7 |
| 6. | Setup of Android NFC7 |
| 6.1 | Android Kernel driver setup for NXP-NFCC and |
| | eSE7 |
| 6.1.1 | SNxxx7 |
| 6.1.2 | PN5579 |
| 6.2 | Setup of Android NFC for DB845C10 |
| 6.2.1 | Downloading Android source code Error! |
| | Bookmark not defined. |
| 6.2.2 | Integrate the system partition hot fixes given |
| | separately in the release email11 |
| 6.2.3 | Building the source code11 |
| 6.3 | Android NXP NFC SW Delivery Package11 |
| 6.3.1 | Android NXP NFC Package Description11 |
| 6.3.2 | Integration of NXP NFC Modules for SNxxx & |
| | PN55712 |

reasonable reliance up to the greater of the amount actually paid by customer for the product or five dollars (US\$5.00). The foregoing limitations, exclusions and disclaimers shall apply to the maximum extent permitted by applicable law, even if any remedy fails of its essential purpose.

Licenses

Purchase of NXP <xxx> components

<License statement text>

Patents

Notice is herewith given that the subject device uses one or more of the following patents and that each of these patents may have corresponding patents in other jurisdictions.

<Patent ID> — owned by <Company name>

Trademarks

Notice: All referenced brands, product names, service names and trademarks are property of their respective owners.

<Name> — is a trademark of NXP Semiconductors N.V.

| 6.3.3 | Android NFC Apps and Lib on Target | 13 |
|--------|---|----|
| 6.3.4 | Android Platform Modifications | |
| 6.4 | Host SW Source Package Compilation | |
| 6.4.1 | Compilation Flags | |
| 6.4.2 | Configuration Files | |
| 6.5 | Feature Integration guideline | |
| 6.5.1 | OMAPI Secure Element terminal configuration | 17 |
| 6.5.2 | NFC DTA Setup | |
| 6.5.3 | Firmware Download | |
| 6.5.4 | NXP NFC Extension Library Integration | 20 |
| 6.6 | Enable SecureElement OMAPI AIDL interface | to |
| | Vendor Services | 22 |
| 6.7 | Strongbox, Weaver & AuthSecret Hal Integration | on |
| | | 22 |
| 6.7.1 | Weaver Hal Integration | 22 |
| 6.7.2 | Strongbox Hal(Keymint) Integration | 24 |
| 6.7.3 | SE Update Agent Integration | 27 |
| 6.7.4 | AuthSecret Hal Integration | 28 |
| 6.8 | Enable ULPDET feature (Optional) | |
| 6.9 | Power Tracker feature (Optional) | 30 |
| 6.10 | Adding proprietary HALs to device compatibility | / |
| | matrix | 30 |
| 6.11 | Android15 Observe Mode | 31 |
| 6.11.1 | Ways to enable and use observed mode & | |
| | polling loop notifications | 31 |
| 6.11.2 | Default config options to be enabled for Observ | |
| | mode | |

Android NFC Setup Guide

| 6.11.3 | Default config options to be enabled for Ma | inline |
|------------|---|--------|
| | specific features | 32 |
| 6.11.4 | Android vendor Logging support | 33 |
| 6.12 | Android one specific | 33 |
| 6.12.1 | Card emulation through Off-host in Android | -one |
| | platform | 33 |
| 6.12.2 | To Support eUICC SMB debug over SMB | 34 |
| 6.12.3 | To configure KeyMint HAL for 2.0 configura | ıtion |
| | | 34 |
| 6.13 | Android-16 Updates | 35 |
| 6.14 | Nfc Module Logging in Android-16 | 36 |
| | _egal information | |
| Definition | ıs | 36 |
| Disclaime | ers | 36 |
| Licenses | 37 | |
| Patents | 37 | |
| Tradema | rks | 37 |