

NetApp HCI compute and storage nodes


Installation and Setup Instructions


Prepare for installation | Stage 1



In the box


NetApp HCI chassis (only for H410S and H410C)

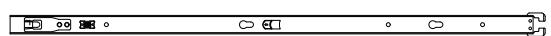H615C compute node (order dependent)

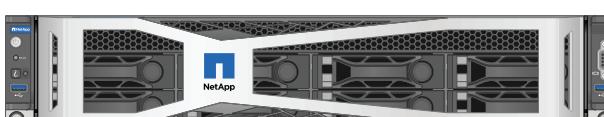Slide rail kit


H610S storage node (order dependent)

H610C compute node (order dependent)


H410S storage node (order dependent)

H410C compute node (order dependent)

Power cables
(Two per chassis)

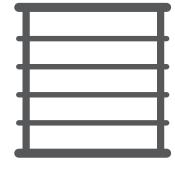
You provide


Rack space (order dependent)

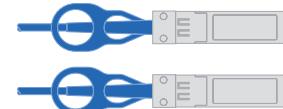 H410C and H410S: 2U per chassis
 H610C: 2U per chassis
 H610S: 1U per chassis
 H615C: 1U per chassis

**SFP28/SFP+
direct-attach cables
or transceivers**

USB stick (optional)

**CAT5e or higher cable
with RJ45 connector**

**Monitor with a
VGA connection
and keyboard with
a standard USB
connection**

**Any operating
system (OS) client
with a browser**


Access online



- [End User License Agreement](#)
- [Hardware Universe \(HWU\)](#)
- [NetApp HCI Documentation Center](#)

- [NetApp HCI Resources page](#)
- [NetApp SolidFire Resources page](#)
- [SolidFire and Element 11.3 Documentation Center](#)

Install hardware | Stage 2



Steps 1 and 2 apply only if you are setting up a new system.

1 Install the rails.


Note:

- Ensure that you have installed the rack according to the safety instructions from the manufacturer.
- Ensure that the rack is stabilized. The heaviest equipment should be at the bottom of the rack.
- Follow proper grounding practices to avoid risk of electric shock.
- Follow proper airflow and cooling requirements to prevent hardware from overheating.
- Installing the chassis requires two people.


2 Install the chassis.

See [Rail Kit Installation instructions](#).



H410C, H615C,
and H410S

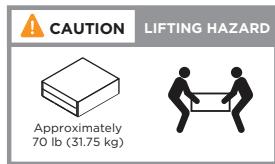

H610C

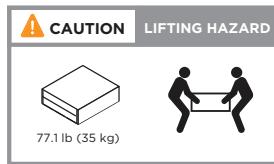

H610S

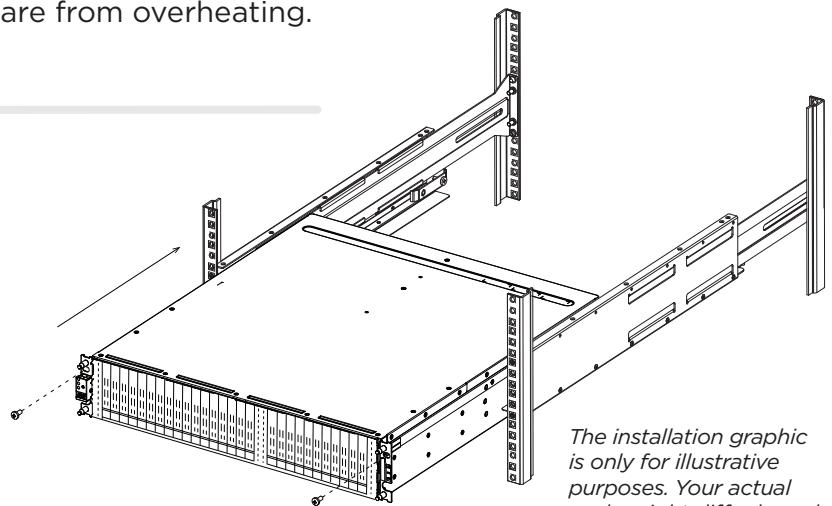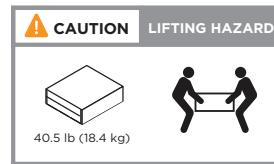

The minimum initial NetApp HCI configuration requires two chassis.




Steps 3 and 4 apply only if you are installing H410C and H410S nodes in a NetApp H-series chassis.

3 Install nodes in the chassis.



4 Install drives for storage nodes.

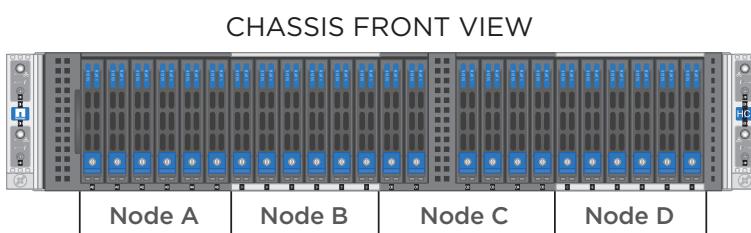

Cable the node | Stage 3

1 Cable the compute node.



If the airflow vents at the rear of the chassis are blocked by cables or labels, it can lead to premature component failures due to overheating.



If you are adding nodes to an existing NetApp HCI installation, ensure that the cabling and network configuration of the nodes that you add are identical to the existing installation.

H410C compute nodes (choose option A or B)


OPTION A

Two-cable configuration



10/25GbE cables

- Connect two SFP28/SFP+ cables or transceivers for shared management, virtual machines, and storage connectivity.
- (Optional, recommended) Connect a CAT5e cable in the IPMI port for out-of-band management connectivity.

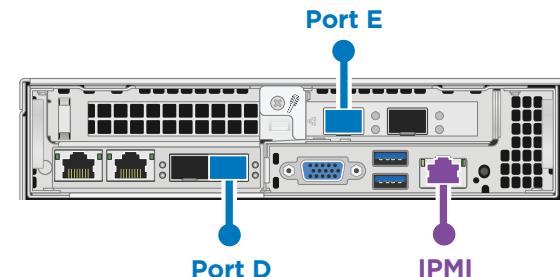

OPTION B

Six-cable configuration




1/10GbE cables

- Connect two CAT5e or higher cables in ports A and B for management connectivity.



10/25GbE cables

- Connect two SFP28/SFP+ cables or transceivers in ports C and F for virtual machine connectivity.
- Connect two SFP28/SFP+ cables or transceivers in ports D and E for storage connectivity.
- (Optional, recommended) Connect a CAT5e cable in the IPMI port for out-of-band management connectivity.

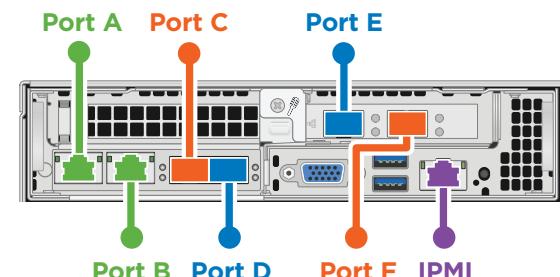

Cable the node | Stage 3 cont.

H610C compute node

Note: H610C nodes are deployed only in the two-cable configuration. Ensure that all the VLANs are present on ports C and D.



- Connect the node to a 10/25GbE network using two SFP28/SFP+ cables in ports C and D.




- (Optional, recommended) Connect the node to a 1GbE network using an RJ45 connector in the IPMI port.



- Connect both power cables to the node. Plug the power cables to a 200-240V power outlet.

- Press the power button at the front of the chassis.

Note: It takes approximately five minutes and 30 seconds for the node to boot.

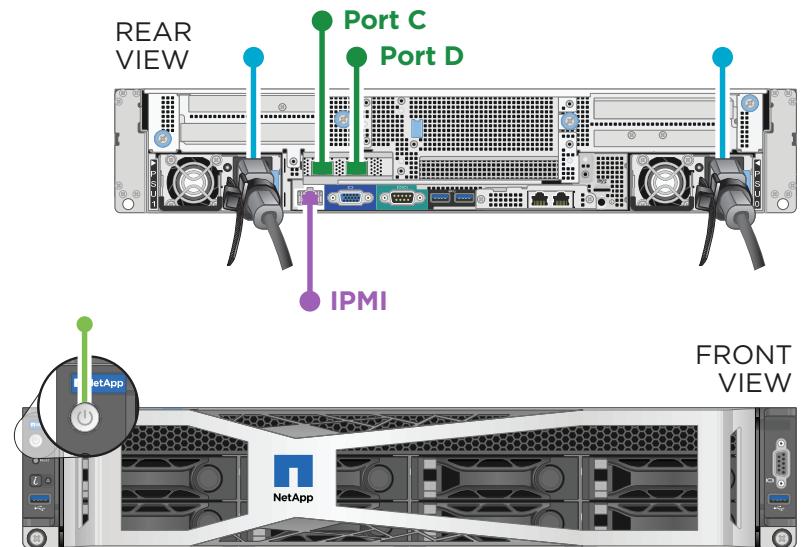

H615C compute node

Note: H615C nodes are deployed only in the two-cable configuration. Ensure that all the VLANs are present on ports A and B.



- Connect the node to a 10/25GbE network using two SFP28/SFP+ cables in ports A and B.




- (Optional, recommended) Connect the node to a 1GbE network using an RJ45 connector in the IPMI port.



- Connect both power cables to the node. Plug the power cables to a 110-140V power outlet.

- Press the power button at the front of the chassis.

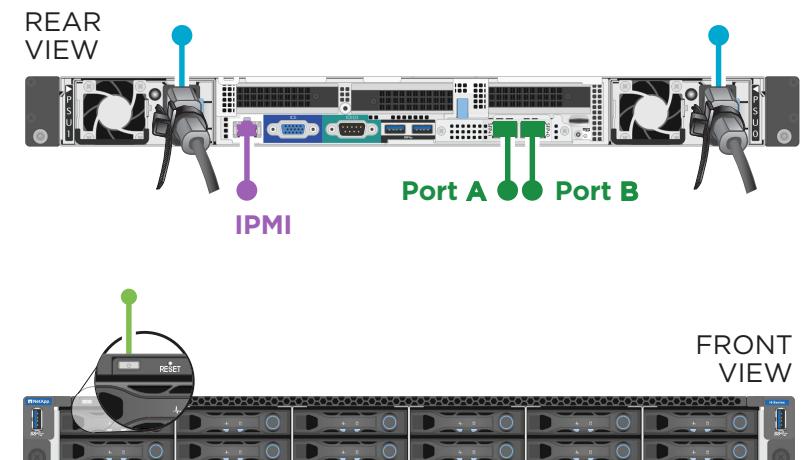

Cable the node | Stage 3 cont.

② Cable the storage node.

! If the airflow vents at the rear of the chassis are blocked by cables or labels, it can lead to premature component failures due to overheating.


H410S storage node




- Connect two CAT5e or higher cables in ports A and B for management connectivity.



- Connect two SFP28/SFP+ cables or transceivers in ports C and D for storage connectivity.

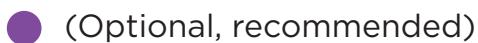

- (Optional, recommended)
Connect a CAT5e cable in the IPMI port for out-of-band management connectivity.

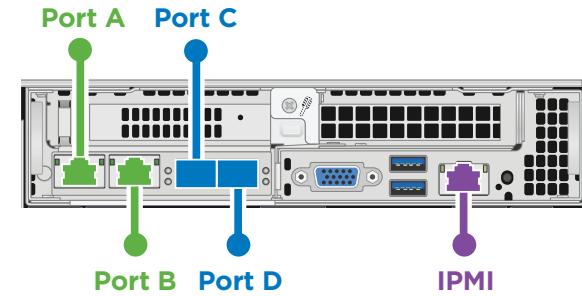

H610S storage node



- Connect the node to a 1GbE network using two RJ45 connectors.



- Connect the node to a 10/25GbE network using two SFP28 or SFP+ cables.




- Connect the node to a 1GbE network using an RJ45 connector in the IPMI port.



- Connect both power cables to the node.

- Plug the power cables to a suitable power outlet. Press the power button at the front of the chassis.

Note: It takes approximately five minutes and 30 seconds for the node to boot.

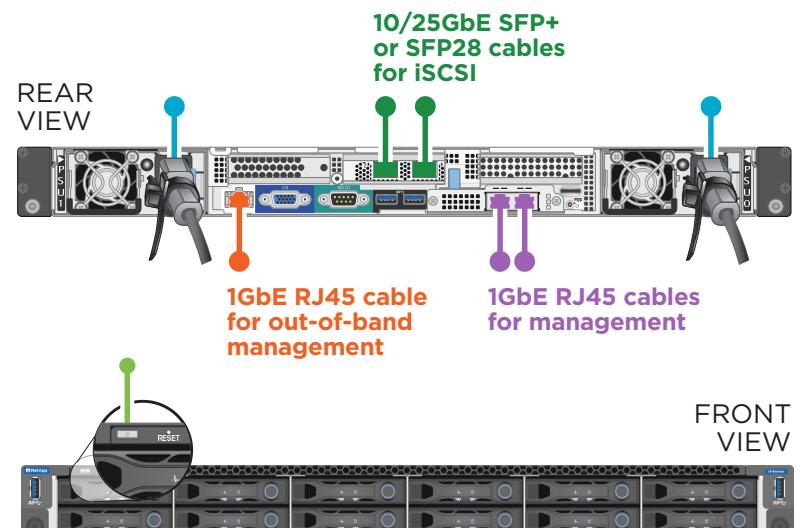


Steps 3 and 4 apply only if you are installing H410C and H410S nodes in a chassis.

③ Connect the power cords to the two power supply units per chassis and plug them into 240V PDU or power outlet.

This step does not apply if you are adding a new node to an existing chassis.

Cable the node | Stage 3 cont.

- ④ Power on the NetApp HCI nodes.

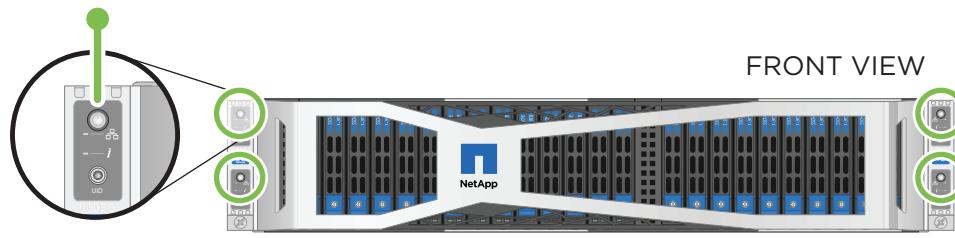

It takes approximately six minutes for the node to boot.

Configure NetApp HCI | Stage 4

(Choose option A or B below)


OPTION A

Setting up a new NetApp HCI installation

1. Configure an IPv4 address on the management network (Bond1G) on one storage node.

Note: If you are using DHCP on the management network, you can connect to the DHCP-acquired IPv4 address of the storage system. For more information about DHCP-acquired IPv4 addresses, see the [NetApp HCI Deployment Guide](#).

- a. Plug in a KVM to the back of one storage node.
 - b. Configure the IP address, subnet mask, and gateway address for Bond1G in the user interface. You can also configure a VLAN ID for the Bond1G network.
2. Using a supported web browser (Mozilla Firefox, Google Chrome, or Microsoft Edge), navigate to the NetApp Deployment Engine by connecting to the IPv4 address that you configured in Step 1.
 3. Use the NetApp Deployment Engine user interface (UI) to configure NetApp HCI.

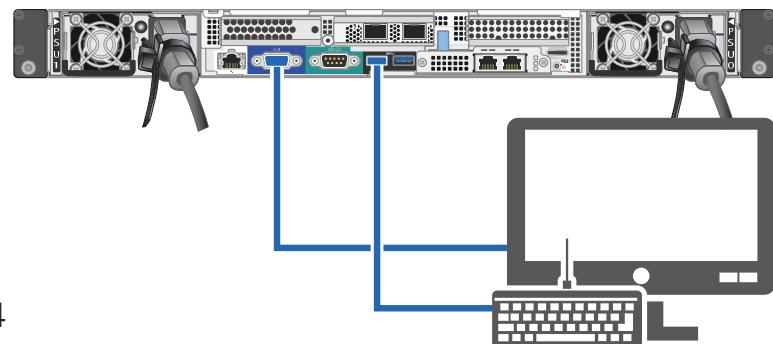

All the other NetApp HCI nodes that you installed will be discovered automatically. For more information, see the [NetApp HCI Deployment Guide](#).

OPTION B

Expanding an existing NetApp HCI installation

Note: If you are expanding your installation using H615C compute nodes, you must ensure that the cluster runs on NetApp HCI 1.7 or later.

1. Using a supported web browser, browse to the IP address of the management node.
2. Log in to the NetApp Hybrid Cloud Control by providing the NetApp HCI storage cluster administrator credentials.
3. Follow the steps in the wizard to add storage and/or compute nodes to your NetApp HCI installation. The newly installed NetApp HCI nodes on the same network will be discovered automatically. For more information, see the [NetApp HCI Deployment Guide](#).



The cabling and network configuration of the nodes that you add must be identical to the existing NetApp HCI installation.

Perform post-deployment tasks | Stage 5

H610C compute node

Install the GPU drivers in ESXi for each H610C node that you installed, and validate their functionality. See the [NetApp Deployment Guide](#).

H615C compute node

- If your H615C node has GPUs in it, install the GPU driver. See the [NetApp Deployment Guide](#).
 - Configure out-of-band management using the Baseboard Management Controller (BMC).
 1. Use a web browser and navigate to the default BMC IP address: 192.168.0.120
 2. Log in using the following default credentials: **User name:** root **Password:** calvin
 3. From the node management screen, navigate to **Settings > Network Settings**, and configure the network parameters for the out-of-band management port.
-

H610S storage node

Configure out-of-band management using the Baseboard Management Controller (BMC).

1. Use a web browser and navigate to the default BMC IP address: 192.168.0.120
2. Log in using the following default credentials: **User name:** root **Password:** calvin
3. From the node management screen, navigate to **Settings > Network Settings**, and configure the network parameters for the out-of-band management port.

See [How to access BMC and change IP address on H610S](#).