# **Updating EXA accessory firmware.**

(using Nordic Semiconductor tools)

You can check current firmware version using RFIDDemo→About→Attached reader Info: Accessory.

RFIDDemo application is another way to perform firmware update but if not available you can follow this instruction for secured DFU update using Nordic Semiconductor software.

Needed mobile software: (from Android PlayStore or from App Store for IoS devices) "nRF Connect for Mobile"

#### Latest EXA Firmware files:

### https://github.com/NordicID/nur exa firmware/

Download and store files in to your mobile phone locally or save in to the cloud storage like a Dropbox.

**Note:** if your accessory firmware version is lower than 2.0.5, then bootloader need to be updated first. **Note:** if your accessory firmware version is lower than 2.0.0, then please contact to Nordic ID support.


Follow instruction below to update Bootloader first and then application:

# **Setting device to boot mode:**


- Power off device.
- Press and keep trigger button down --> -blue led blinks rapidly.
- Press both: POWER and PAIR button down and then release. → Left and right led's are on.
- Release trigger → Device is now in boot mode and advertises itself as "DfuNid" or "DfuEXA". If no DFU connection within 90 sec, device restart normally.

### **Updating Firmware:**


- -Open "nRF Connect" application from your mobile phone. (Make sure Bluetooth is enabled)
- -"DfuNid" or "DfuEXA" should appear in the list. → Press "Connect"

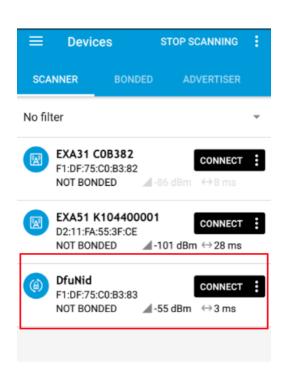

after successful connection, following screen appears. Press DFU as pointed below:

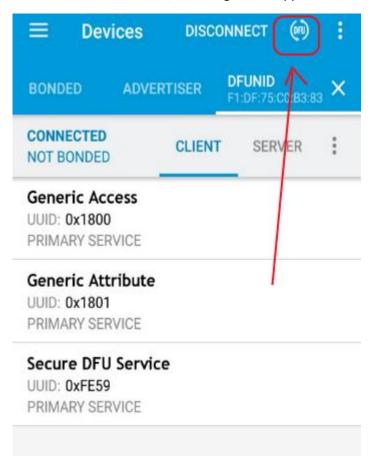

Select Distribution packet (ZIP) and browse to firmware file:

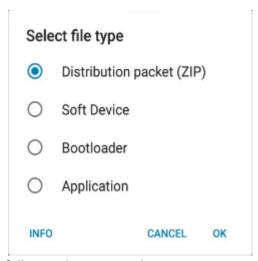

follow updating procedure.

After DFU procedure, all led goes off and it takes about 30 sec before device restart so please be patient.