

SHEHDS®

Make any stage the BIG STAGE

WELCOME TO SHEHDS

USER'S MANUAL

380W Beam Moving Head Light

With Ring version



CAUTION! Keep this device away from rain and moisture!

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY

BEFORE YOU INITIAL START - UP!

1-Maintenance

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

During the operation the housing becomes hot). Allow the fixture to cool approximately 20 minutes prior to manipulate with it.

Make sure that the available voltage is not higher than stated on the rear panel.

to completely remove power from unit when not in use or before cleaning or servicing the fixture.

Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power-cord by the plug. Never pull out the plug by tugging the power cord.

This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.

The electric connection, repairs and servicing must be carried out by a qualified employee. Do not connect this device to a dimmer pack.

Do not switch the fixture on and off in short intervals as this would reduce the fixture's life.

During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.

Do not touch the device's housing bare hands during its operation (housing becomes hot)!

For replacement use fixtures and fuses of same type and rating only.



CAUTION!

Be careful with your operations.

With a high voltage you can suffer a dangerous electric shock when touching the wires!

2-Operating determination

Attention: The powerCON is a connector without breaking capacity, i.e. the powerCON should not be connected or disconnected under load or live!

This device is a moving head for creating decorative effects and was designed for indoor use only.

This device is for professional use only. It is not for household use.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Before switching the fixture OFF, turn the fixture OFF and allow the fixture to cool for a while.

Never run the device without fixture!

Do not shake the device. Avoid brute force when installing or operating the device.

Never lift the fixture by holding it at the projector-head, as the mechanics may be damaged.

Always hold the fixture at the transport handles.

When choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. There should not be any cables lying around. You endanger your own and the safety of others!

The minimum distance between light output and the illuminated surface must be more than 8 meters.

Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.

Always fix the fixture with an appropriate safety rope. Fix the safety rope at the correct holes only.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

The fixture must never be ignited if the objective-lens or any housing-cover is open, as discharge fixtures may

explode and emit a high ultraviolet radiation, which may cause burns.

The maximum ambient temperature 45°C must never be exceeded.

3-Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over +&-10% while the light is using, it will be decreased the life of fixture if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minuter.
6. Please look round the manual for ensure the product can be used normally.

4-Rigging the fixture

A structure intended for installation of the fixture(s) must safely hold weight of the fixture(s) placed on it. The structure has to be certificated to the purpose.

The fixture (fixtures) must be installed in accordance with national and local electrical and construction codes and regulation.

For overhead installation, the fixture must be always secured with a safety wire that can bear at least 10 times the weight of the fixture

When rigging, derigging or servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are

approved by a skilled person once a year.

Allow the fixture to cool for ten minutes before handling.

The projector should be installed outside areas where persons may walk by or be seated.

IMPORTANT! OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE

Including calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself, but use a help of professional companies.

CAUTION: Fixtures may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the fixture!

The fixture has to be installed out of the reach of public.

The fixture must never be fixed swinging freely in the room.

Danger of fire !

When installing the device, make sure there is no highly inflammable material (decoration articles, etc.) in a distance of min. 1 m.

The minimum distance of 8 meters between light output from the moving head and the lit objects must be kept!

CAUTION!

Use 2 appropriate fixtures to rig the fixture on the truss.

Follow the instructions mentioned at the bottom of the base.

Make sure that the device is fixed properly! Ensure that the structure (truss) to which you are attaching the fixtures is secure.

The fixture can be placed directly on the stage floor or rigged in any orientation on a truss without altering its operation characteristics.

For securing a fixture to the truss, install two safety wires which can hold at least 10 times the weight of the fixture. Use only the safety wires with screw-on carabiners.

5-DMX-512 connection

The fixture is equipped with both 3-pin sockets for DMX input and output. The sockets are wired in parallel.

Only use a shielded twisted-pair cable designed for 3-pin XLR-plugs and connectors in order to connect the controller with the fixture or one fixture with another.


DMX - output

XLR mounting-sockets (rear view):




DMX-input

XLR mounting-plugs (rear view):

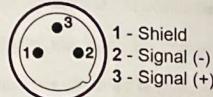

Building a serial DMX-chain:

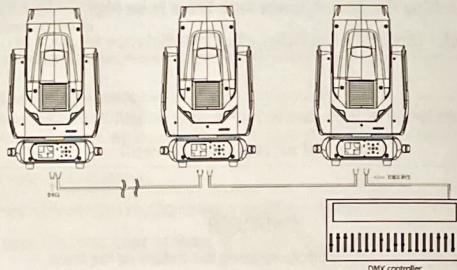

Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected. Up to 32 fixtures can be connected.

Caution: At the last fixture, the DMX-cable has to be terminated with a terminator.

Solder a 120 Ω resistor between Signal (-) and Signal (+) into a 3-pin (5-pin) XLR-plug and plug it in the DMX-output of the last fixture.

6-Technical Specifications

Voltage: AC90V ~ 240V / 50 ~ 60Hz	Pan/Tilt: 540°/190°
Output Power: 460W	Dimmer: 0-100% Linear dimmer
Light source: 380W Bulb white color	Effect: Frost wash
Beam angle: 1.9 degrees	Prism 1: 8 face prism and rotating
Control mode: DMX512/Master-Slave/Auto/Sound	Prism 2: 8+8 face prism and rotating
Channel: 19 CH	Product Size: 55.5x34.5x25 cm
Color wheel: 14 colors + open	Product weight: 16.15kg
Gobo wheel: 16 gobos + open	Package Size: 50x46x42.5 cm
Rainbow wheel: 6 colors	Package weight: 19.85 kg
Function: RDM, Intelligent temperature control, DMX monitor, Manual control	

7-Maintenance and cleaning

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not build up on or within the fixture. Otherwise, the fixture's light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably throughout its life.

A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

DANGER !

Disconnect from the mains before starting any maintenance work

The front objective lens will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light-output very quickly. The cooling-fans should be cleaned monthly. The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an air-jet.

Remove dust and dirt from the fans and cooling vents using a soft brush and vacuum-cleaner.

Important! Check the air filters periodically and clean before they become clogged!

Clean two air filters placed in the fixture's covers and two in the fixture base. Use a vacuum cleaner, compressed air or you can wash them and put back dry.

8-Replacing the fuse.

Before replacing the fuse, unplug mains lead.

1. Remove the fuse holder on the rear panel of the base with a fitting screwdriver from the housing(anti-clockwise).
2. Remove the old fuse from the fuse holder.
3. Install the new fuse in the fuse holder (only the same type and rating).
4. Replace the fuse holder in the housing and fix it.

Checking plastic parts of the fixture.

The plastic parts of the fixture should be checked for damages and beginning cracks at least every two months.

In addition, the plastic part of the front lens has to be checked mechanically (by means of movement by the plastic part) if it is firmly fastened to the fixture. If hint of a crack is found on some plastic part, do not use the fixture until the damaged part will be replaced.

Cracks or another damages of the plastic parts can be caused by the fixture transportation or manipulation and also ageing process may influence plastic materials.

This checking is necessary for both fixed installations and preparing fixtures for renting. Any free moving parts inside of the fixture head, cracked plastic or any plastic part of front lens not sitting properly in place need to be immediately replaced.

9-Control Menu

After the system is powered on, the graphical interface will be displayed to reset and initialize the entire system. At the same time the functional status of the system will be checked. If there is an error or a certain function is not normal, the square in the upper right corner of the screen will turn red after the reset is completed to indicate an error. You can view error messages in the 'Information Menu/Error Messages/View' section. Normally green.



MenuBoard description:

DMX	DMX Signal Indicator light
SOUND	Indicator light when triggered by sound control
Up	Menu Up Selection
Down	Menu Down Selection
Left	Menu Left Selection/Return
Right	Menu Right Selection
OK	confirm button
Time on the left side of the screen	Total system usage time (display can be turned off in standard settings)
Time on the right side of the screen	Total power on time this time (display can be turned off in standard settings)
Vertical signal above the screen	The current DMA signal connection signal strength Red: no signal
Square icon in the upper right corner of the screen	Green: normal, no errors Red: There is an error (you can click on the icon or "Information Menu/Error Messages/View" to check for errors)

System menu description:

Reve	Invert the screen display
Exit	Exit to the Home screen
语言	Choice of Simplified Chinese or English
Standard	Address codes and some commonly used function settings
Advanced	Main debugging parameter settings at the factory
Info	Display of errors, software versions, and other information
Program	Manually control operation or edit user programs
Perform	Automatic or voice controlled running of built-in programs
Reset	System reset to initial position

10-Control menu map

Menu		Function	
Standard	Default Set	Enter	Restore factory default parameters
	Address	001-512	Set lamp address code
	DMX mode	Mode 1 / Mode 2	DMX channel mode
	Effect mode	Yes / No	The effect disc automatically searches for the shortest distance to rotate and run
	Started lamp	On / Off	Choose whether the light bulb 'on' or 'off' each time it is activated
	Switch lamp	On / Off	Manually turn on and light up the bulb
	No signal	Hold	Keep the value of the DMA channel
		Clear	Zero the value of the DMA channel
	UI Color	Blue	
		Golden	Choose screen menu color
	Show time	Yes / No	Display the running time timer on the Home screen
	Brightness	000-255	Adjusting screen brightness
	Effect sync	Off 1-7	Effect Speed: Off / Speed 1-7
	Screensaver	Off/on	Turn off screen when there is no action
	XY encoder	No/Yes	XY automatic error correction function
	X inversion	No/Yes	Inverte pan
	Y inversion	No/Yes	Inverte tilt
	Focus inversion	No/Yes	Inverte focus
	Zoom inversion	No/Yes	Inverte zoom
Advanced	This setting is the main parameter setting for the lighting fixture and requires permission		
Info	Error List	No error/View	View errors
	DisplayVer	1A238182	Current Display Version
	MainboardV	20230713	Current Mainboard Version

Serial NO.	XXXXXXX	Equipment factory number
SYS timer	000.0H	Current system runtime
Run timer	00000.0H	Total system running time (hours)
Lamp timer	000:00	Operating time after this power on (hours)
Permisslon	-----	Permisslon
Equip TEMP	000	Current fixture temperature
Head TEMP	000	Current lamp temperature
FAN 1 Speed	0000 RPM	Current Fan 1 Speed
FAN 2 Speed	0000 RPM	Current Fan 2 Speed
Pan Coder		Pan Condition monitoring
Tilt Coder		Tilt Condition monitoring
Run mode	Auto/Sound	Run auto /sound mode
Run speed	0-255	Set the speed for automatic program operation
Run cross	0-255	Set step fade speed
Built-in 1	Off/on	Device built-in test program 1
Built-in 2	Off/on	Device built-in test program 2
User PRO 1	Off/on	User self programmed program 1
User PRO 2	Off/on	User self programmed program 2
User PRO 3	Off/on	User self programmed program 3
User PRO 4	Off/on	User self programmed program 4
Circle shape	Off/on	(No function)
Square shape	Off/on	(No function)
Shape range	000-255	(No function)
Sound DB	000-255	Adjusting voice sensitivity

Program View the following detailed instructions

Reset System reset to initial position

PRO1	=001	MANU	Back
Copy	Past	Zero	Save
CH1	000	000	000
CH5	000	000	000
CH9	000	000	000
CH13	000	000	000
next page			

Programming function description:

1: This function can program up to 4 user programs, which can be run in series. That is to say, the programmed 4 programs can be switched on simultaneously in the "Test Run" function. When running, program 1 is run first, then program 2, then program 3, then program 4, and then loop back to program 1, and so on. Of course, it can also be run by single selection.

2: The operations that programming function buttons can achieve:

Select program, read program, select step, delete step, manually or console input, copy current step, paste to selected step, reset current step, save to selected program space

Manual control programming:

Select the PRO1-4 that needs to be saved to, manually control and set the channel values for one step, and then click step (the number button represents step)

Press the up and down buttons to proceed to the next step. Manually control the setting of channel values again, and so on in the next step.

Delete step:

If there are too many programming steps, you can delete the following steps. Select the step button and press the 'Next' button to return to the unnecessary step. At this point, the number of steps is displayed as >0XX. Press and hold the OK button for 3 seconds to delete the subsequent steps. The display changes to =0XX.

Copy step:


Press the copy button to copy all channel values of the current step and temporarily store them in the memory paste board.

Paste steps:

After copying, you can choose to go to any step and paste the channel values of the pasteboard into the currently selected step channel.

Zeroing step:

Press the reset button to reset the current channel value.

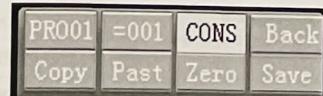

5. Console control programming:

This device provides a more convenient console input programming function, which can also be used to step by step input the program of the console, achieving the function of copying the program programmed by the console.

As shown in the figure, select the manual/console input mode as the console.

At this point, all channel values are inputted by the DMA control panel, which is invalid for manual operation, pasting, and resetting. All channel values are displayed in real-time as the DMA values.

At this point, programming only requires input from the control panel, or the control panel can run the programmed steps in one step, which is to enter the control panel program. Here, the device only needs to click on the next number and press the up arrow to achieve programming.

Save program:

After each step is programmed through manual input or console input, this programming can be saved. Please confirm the selected save location PRO1- PRO4. Please note that the save step length is equal to the step value of =0XX, rather than seeing a step value greater than 0XX.

Please delete the remaining steps first, refer to 'Delete Steps', and then press 'Save'.

Read program and re edit program:

As shown in the figure, select the PRO1-



PRO4 that needs to be read, click the step button, and then press the <down>button to display "Read". At this point, press the OK key to read the selected program. The displayed value after reading is the maximum step value of the current program. If the program is empty, it will be displayed as 'Empty' or 'No'.

At this point, you can re edit the program that has already been read out. After editing, press Save to overwrite the current program, or select another PRO1- PRO4 space to save as.

Run program:

If you need to run a program that has been programmed and saved, please return to the "Test Run/Performance" function menu, click to select the corresponding user program, and switch to "On".

Running	Back
Run mode	DMX
Run speed	240
Run cross	255
Built-in 1	ON
Built-in 2	OFF

10-DMX Channel

DMX Channel Summary-19 Channels Mode			
Channel		Value	Features
CH1	Color	0-4	White
		5-9	White + Color 1
		10-14	Color 1 Rot
		15-19	Color 1 + Color 2
		20-24	Color 2 Gob
		25-29	Color 2 + Color 3
		30-34	Color 3 Blac

35-39	Color 3 + Color 4	
40-44	Color 4 Gob	
45-49	Color 4 + Color 5	
50-54	Color 5 Pink	
55-59	Color 5 + Color 6	
60-64	Color 6 Light Blue	
65-69	Color 6 + Color 7	
70-74	Color 7 DV?	
75-79	Color 7 + Color 8	
80-84	Color 8 Gob	
85-89	Color 8 + Color 9	
90-94	Color 9 Orange / Amber	
95-99	Color 9 + Color 10	
100-104	Color 10 White Blue	
105-109	Color 10 + Color 11	
110-114	Color 11 Beige	
115-119	Color 11 + Color 12	
120-124	Color 12 Magenta	
125-129	Color 12 + Color 13	
130-134	Color 13 White	
135-139	Color 13 + Color 14	
140-144	Color 14 Orange	
145-149	Color 14 + White	
150-200	Clockwise Rotation	
201-255	Anti clockwise Rotation	
CH2	0-3	Off
	4-103	Shutter slow - fast
	104-107	Open

		108-207	Shutter slow - fast
		208-212	open
		213-251	Random shuter slow - fast
		252-255	Open
CH3	Dim	0-255	Dimming
CH4	Gobo	0-3	White
		4-6	Gobo 1
		7-9	Gobo 2
		10-12	Gobo 3
		13-15	Gobo 4
		16-18	Gobo 5
		19-21	Gobo 6
		22-24	Gobo 7
		25-27	Gobo 8
		28-30	Gobo 9
		31-33	Gobo 10
		34-36	Gobo 11
		37-39	Gobo 12
		40-42	Gobo 13
		43-45	Gobo 14
		46-48	Gobo 15
		49-51	Gobo 16
		52-54	Gobo 17
		55-59	White
		60-63	Gobo 1 shake
		64-67	Gobo 2 shake
		68-71	Gobo 3 shake
		72-75	Gobo 4 shake

		76-79	Gobo 5 shake
		80-83	Gobo 6 shake
		84-87	Gobo 7 shake
		88-91	Gobo 8 shake
		92-95	Gobo 9 shake
		96-99	Gobo 10 shake
		100-103	Gobo 11 shake
		104-107	Gobo 12 shake
		108-111	Gobo 13 shake
		112-115	Gobo 14 shake
		116-119	Gobo 15 shake
		120-123	Gobo 16 shake
		124-127	Gobo 17 shake
		128-189	Clockwise Rotation
		190-193	Stop
		194-255	Anti clockwise Rotation
CH5	Prism1	0-31	No Prism
CH6	Prism rot	32-255	Prism on
		0-127	0-360° rotation
		128-190	Clockwise Rotation
		191-192	Stop
CH7	Prism2	193-255	Anti clockwise Rotation
		0-32	No Prism
		33-255	Prism on
CH8	Prism rot	0-127	0-360° rotation
		128-190	Clockwise Rotation
		191-192	Stop
		193-255	Anti clockwise Rotation

CH9	Fucos	0-255	Fucos
CH10	Pan	0-255	Pan movement
CH11	Pan fine	0-255	Pan fine movement
CH12	Tilt	0-255	Tilt movement
CH13	Tilt fine	0-255	Tilt fine movement
CH14	Speed	0-255	Pan&Tilt speed
CH15	Frost	0-79	No function
		80-159	Rianbow color on
		160-255	Frost on
CH16	Lamp	0-99	No function
		100-105	Delay Off
		106-149	No function
		150-155	Half power on (if supported)
		156-199	No function
		200-205	Delay On
		206-254	No function
		255-255	Reset after 5s
		0-9	No function
CH17	Ring	10-49	Dim On
		50-89	Strobe
		90-129	Fade-in mode
		130-169	Fade-Out mode
		170-209	Fade-Out strobe
		210-249	Random strobe
		250-255	On
CH18	Effect	0-255	Loop effect select
CH19	Speed	0-255	Effect speed

11-Fault handling

Corresponding solutions have been proposed for some common faults. Any unresolved issues should be handled by professionals. Before maintaining the lighting fixtures, please disconnect the power supply.

1.The light bulb does not light up

- Check if a voltage matching the lamp is installed;
- Check for poor contact at the power supply connection or control switch of the lighting fixture;
- Check if the power supply is insufficient;
- Check if the DMX512 controller has sent instructions.

2. After the lamp is reset normally, it does not accept control from the control panel

- Check if the digital start address value and function options of the lighting fixtures are correct;
- Check if the connection of the communication control line is correct, if the communication line is too long or has been interrupted;
- Check if the control equipment is malfunctioning and if the signal amplifier connected in series is malfunctioning;
- Check if the communication line is too long or if there are other devices interfering with each other;
- Optimize wiring, shorten the length of control signal lines, and separate high-voltage and low-voltage lines for wiring;
- Add a signal amplifier;
- The signal line adopts high-quality shielded twisted pair;
- Connect the signal terminal resistor (120 ohms) at the end of the lamp.

3.The lamp cannot be activated

- Check whether the power supply parameters match the lighting fixtures;
- Inspect the lighting fixtures for poor contact during long-distance transportation due to compression deformation, internal component vibration, moisture, and other reasons
- Or fall off.
- Please check if the internal wires and connectors of the lamp have fallen off or become loose.
- Check if the electronic components of the lighting fixtures (such as electronic transformers, PCB boards, motor control boards, etc.) are loose, short circuited, or burnt out.

4.During operation, the X-axis or Y-axis of the lighting fixture does not operate normally

- Check one by one according to the previous step;
- Check whether the transmission belts corresponding to the X and Y axis directions inside the lamp are detached or broken;
- Check if the data feedback receiver (optocoupler) corresponding to the X and Y directions inside the lamp is damaged;
- Restart and reset once.

12-Accessories list

Quick lock x 2

Power cable x 1

Dmx512 cable x 1

Manual x 1