

EB tresos® E2E Profile 1 documentation

product release 8.8.4





Elektrobit Automotive GmbH Am Wolfsmantel 46 91058 Erlangen, Germany Phone: +49 9131 7701 0

Fax: +49 9131 7701 6333

Email: info.automotive@elektrobit.com

Technical support

https://www.elektrobit.com/support

Legal disclaimer

Confidential information.

ALL RIGHTS RESERVED. No part of this publication may be copied in any form, by photocopy, microfilm, retrieval system, or by any other means now known or hereafter invented without the prior written permission of Elektrobit Automotive GmbH.

All brand names, trademarks, and registered trademarks are property of their rightful owners and are used only for description.

Copyright 2021, Elektrobit Automotive GmbH.



Table of Contents

1. Overview of EB tresos E2E Profile 1 documentation	7
2. E2EP01 release notes	8
2.1. Overview	8
2.2. Scope of the release	8
2.2.1. Configuration tool	8
2.2.2. AUTOSAR modules	8
2.2.3. EB (Elektrobit) modules	
2.2.4. MCAL modules and EB tresos AutoCore OS	9
2.3. Module release notes	9
2.3.1. E2E module release notes	9
2.3.1.1. Change log	9
2.3.1.2. New features	. 13
2.3.1.3. EB-specific enhancements	13
2.3.1.4. Deviations	14
2.3.1.5. Limitations	. 14
2.3.1.6. Open-source software	. 15
2.3.2. E2EP01 module release notes	. 15
2.3.2.1. Change log	15
2.3.2.2. New features	. 19
2.3.2.3. EB-specific enhancements	20
2.3.2.4. Deviations	21
2.3.2.5. Limitations	. 23
2.3.2.6. Open-source software	. 23
2.3.3. SCrc module release notes	23
2.3.3.1. Change log	23
2.3.3.2. New features	. 26
2.3.3.3. EB-specific enhancements	27
2.3.3.4. Deviations	27
2.3.3.5. Limitations	. 27
2.3.3.6. Open-source software	. 27
3. E2EP01 user's guide	28
3.1. Overview	28
3.2. Background information	. 28
3.2.1. Functional overview	. 28
3.2.1.1. Safety mechanisms	28
3.2.1.2. Failure modes and required safety mechanisms	30
3.3. Configuring E2EP01	. 31
3.4. E2EP01 integration notes	. 32
4. E2EP01 module references	. 33



4.1. Overview	33
4.1.1. Notation in EB module references	33
4.1.1.1. Default value of configuration parameters	33
4.1.1.2. Range information of configuration parameters	33
4.2. E2E	34
4.2.1. Configuration parameters	34
4.2.1.1. CommonPublishedInformation	34
4.2.1.2. PublishedInformation	37
4.2.2. Application programming interface (API)	37
4.2.2.1. Type definitions	38
4.2.2.1.1. E2E_PCheckStatusType	38
4.2.2.2. Macro constants	38
4.2.2.2.1. E2E_AR_MAJOR_VERSION	38
4.2.2.2. E2E_AR_MINOR_VERSION	38
4.2.2.2.3. E2E_AR_PATCH_VERSION	38
4.2.2.2.4. E2E_AR_RELEASE_MAJOR_VERSION	38
4.2.2.2.5. E2E_AR_RELEASE_MINOR_VERSION	38
4.2.2.2.6. E2E_AR_RELEASE_REVISION_VERSION	39
4.2.2.2.7. E2E_E_INPUTERR_NULL	39
4.2.2.2.8. E2E_E_INPUTERR_WRONG	39
4.2.2.2.9. E2E_E_INTERR	39
4.2.2.2.10. E2E_E_INVALID	39
4.2.2.2.11. E2E_E_OK	39
4.2.2.2.12. E2E_E_WRONGSTATE	40
4.2.2.2.13. E2E_MODULE_ID	40
4.2.2.2.14. E2E_P_ERROR	40
4.2.2.2.15. E2E_P_NONEWDATA	40
4.2.2.2.16. E2E_P_NOTAVAILABLE	40
4.2.2.2.17. E2E_P_OK	40
4.2.2.2.18. E2E_P_REPEATED	
4.2.2.2.19. E2E_P_WRONGSEQUENCE	41
4.2.2.2.20. E2E_SW_MAJOR_VERSION	41
4.2.2.2.21. E2E_SW_MINOR_VERSION	41
4.2.2.2.22. E2E_SW_PATCH_VERSION	41
4.2.2.2.23. E2E_VENDOR_ID	41
4.2.2.3. Functions	42
4.2.2.3.1. E2E_GetVersionInfo	42
4.2.3. Integration notes	42
4.2.3.1. Exclusive areas	42
4.2.3.2. Production errors	42
4.2.3.3. Memory mapping	42
4.2.3.4. Integration requirements	43



4.3. E2EP01	43
4.3.1. Configuration parameters	43
4.3.1.1. CommonPublishedInformation	43
4.3.1.2. PublishedInformation	47
4.3.2. Application programming interface (API)	47
4.3.2.1. Type definitions	47
4.3.2.1.1. E2E_P01CheckStateType	47
4.3.2.1.2. E2E_P01CheckStatusType	47
4.3.2.1.3. E2E_P01ConfigType	48
4.3.2.1.4. E2E_P01DataIDMode	49
4.3.2.1.5. E2E_P01ProtectStateType	49
4.3.2.1.6. E2E_P01ReceiverStateType	49
4.3.2.1.7. E2E_P01ReceiverStatusType	50
4.3.2.1.8. E2E_P01SenderStateType	51
4.3.2.2. Macro constants	51
4.3.2.2.1. E2EP01_AR_MAJOR_VERSION	51
4.3.2.2.2. E2EP01_AR_MINOR_VERSION	51
4.3.2.2.3. E2EP01_AR_PATCH_VERSION	52
4.3.2.2.4. E2EP01_AR_RELEASE_MAJOR_VERSION	52
4.3.2.2.5. E2EP01_AR_RELEASE_MINOR_VERSION	. 52
4.3.2.2.6. E2EP01_AR_RELEASE_REVISION_VERSION	52
4.3.2.2.7. E2EP01_SW_MAJOR_VERSION	52
4.3.2.2.8. E2EP01_SW_MINOR_VERSION	52
4.3.2.2.9. E2EP01_SW_PATCH_VERSION	52
4.3.2.2.10. E2EP01_VENDOR_ID	53
4.3.2.3. Functions	53
4.3.2.3.1. E2E_P01Check	53
4.3.2.3.2. E2E_P01CheckInit	53
4.3.2.3.3. E2E_P01MapStatusToSM	54
4.3.2.3.4. E2E_P01Protect	
4.3.2.3.5. E2E_P01ProtectInit	56
4.3.3. Integration notes	56
4.3.3.1. Exclusive areas	56
4.3.3.2. Production errors	56
4.3.3.3. Memory mapping	57
4.3.3.4. Integration requirements	57
4.4. SCrc	
4.4.1. Configuration parameters	. 57
4.4.1.1. CommonPublishedInformation	
4.4.1.2. PublishedInformation	
4.4.1.3. SCrcPublishedInformation	
4.4.2. Application programming interface (API)	61



4.4.2.1. Macro constants	62
4.4.2.1.1. SCRC_FUNCENABLED_SCRC_CRC16	. 62
4.4.2.1.2. SCRC_FUNCENABLED_SCRC_CRC32P4	. 62
4.4.2.1.3. SCRC_FUNCENABLED_SCRC_CRC8	62
4.4.2.1.4. SCRC_FUNCENABLED_SCRC_CRC8H2F	62
4.4.2.1.5. SCRC_SW_MAJOR_VERSION	
4.4.2.1.6. SCRC_SW_MINOR_VERSION	63
4.4.2.1.7. SCRC_SW_PATCH_VERSION	. 63
4.4.2.1.8. SCRC_VENDOR_ID	. 63
4.4.2.2. Functions	. 63
4.4.2.2.1. SCrc_CalculateCRC16	63
4.4.2.2.2. SCrc_CalculateCRC32P4	
4.4.2.2.3. SCrc_CalculateCRC8	64
4.4.2.2.4. SCrc_CalculateCRC8H2F	
4.4.3. Integration notes	. 66
4.4.3.1. Exclusive areas	
4.4.3.2. Production errors	
4.4.3.3. Memory mapping	
4.4.3.4. Integration requirements	. 66
5. Bibliography	. 67



1. Overview of EB tresos E2E Profile 1 documentation

Welcome to the EB tresos E2E Profile 1 (E2EP01) product documentation.

This document provides:

- Chapter 2, "E2EP01 release notes": release notes for the E2EP01 modules
- ► <u>Chapter 3, "E2EP01 user's guide"</u>: containing background information and instructions
- ► <u>Chapter 4, "E2EP01 module references"</u>: information about configuration parameters and the application programming interface



2. E2EP01 release notes

2.1. Overview

This chapter provides the E2EP01 product specific release notes. General release notes that are applicable to all products are provided in the EB tresos AutoCore Generic documentation. Refer to the general release notes in addition to the product release notes documented here.

2.2. Scope of the release

2.2.1. Configuration tool

Your release of EB tresos AutoCore is compatible with the release of the EB tresos Studio configuration tool:

► EB tresos Studio: 28.2.0 b211016-0103

2.2.2. AUTOSAR modules

The following table lists the AUTOSAR modules that are part of this E2EP01 release.

Module name	AUTOSAR version and revision	SWS version and revision	Module version	Supplier
<u>E2E</u>	4.2.1 []	4.2.1 [0000]	2.0.18	Elektrobit Automo- tive GmbH
E2EP01	4.2.1 []	4.2.1 [0000]	2.2.17	Elektrobit Automotive GmbH

Table 2.1. Hardware-Independent Modules specified by the AUTOSAR standard

2.2.3. EB (Elektrobit) modules

The following table lists all modules which are part of this release but are not specified by the AUTOSAR standard. These modules include tooling developed by EB or they may hold files shared by all other modules.



Module name	Module version	Supplier
SCrc	2.0.11	Elektrobit Automotive GmbH

Table 2.2. Modules not specified by the AUTOSAR standard

2.2.4. MCAL modules and EB tresos AutoCore OS

For information about MCAL modules and OS, refer to the respective documentation, which is available as PDF at \$TRESOS_BASE/doc/3.0_EB_tresos_AutoCore_OS and \$TRESOS_BASE/doc/5.0_MCAL_-modules¹. It is also available in the online help in EB tresos Studio. Browse to the folders EB tresos AutoCore OS and MCAL modules.

2.3. Module release notes

2.3.1. E2E module release notes

AUTOSAR R4.2 Rev 1

AUTOSAR SWS document version: 4.2.1

Module version: 2.0.18.B466224

Supplier: Elektrobit Automotive GmbH

2.3.1.1. Change log

This chapter lists the changes between different versions.

Module version 2.0.18

2021-03-05

Updated preprocessor include guards to be PC-lint compatible

Module version 2.0.17

2020-10-23

¹\$TRESOS BASE is the location at which you installed EB tresos Studio.



- Internal module improvement. This module version update does not affect module functionality
- ▶ Implemented independency of E2E_Mem.h from Base module

2020-06-19

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.15

2020-02-21

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.14

2020-01-24

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.13

2019-10-11

- Improved implementation of signal unpack macros
- Improved range check implementation of signal pack macros
- Internal module improvement. This module version update does not affect module functionality

Module version 2.0.12

2019-07-05

- ASCE2E-766 Fixed known issue: Wrong safety related ComXf serialization of 64bit ISignalGroup members
- ASCE2E-771, ASCCOMXF-492 Fixed known issue: Invalid safety-related ComXf support for XfrmBuffer-LengthType configured to UINT32 (Note: requires also ComXf module update)

Module version 2.0.11

2019-06-14

Internal module improvement. This module version update does not affect module functionality



2019-02-15

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.9

2018-10-26

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.8

2018-05-29

ASCE2E-626 Fixed known issue: Undefined behavior for safety related ComXf serialization

Module version 2.0.7

2018-03-16

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.6

2018-02-16

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.5

2017-10-27

- Implemented support for configurable type of BufferLength
- Implemented profile specific parts from E2E transformer in E2E profiles and library

Module version 2.0.4

2017-09-22

- Improved implementation of signal pack and unpack macros
- Implemented 64 bit signal pack and unpack macros
- Switch from MISRA-C:2004 to MISRA-C:2012



2017-06-30

Implemented signal pack and unpack macros

Module version 2.0.2

2015-06-19

- Added additional return values required for E2E transformer concept
- Implemented deterministic start-up behavior for E2E State Machine according to Bugzilla #67553

Module version 2.0.1

2013-02-15

Provide a Basic Software Module Description that specifies the Memory Mappings

Module version 2.0.0

2012-06-22

Update to ASR 4.0 Rev3

Module version 1.0.4

2011-09-16

Internal module improvement. This module version update does not affect module functionality

Module version 1.0.3

2011-05-20

- Update of version macros and Info
- Usage of unix line endings

Module version 1.0.2

2010-12-23

Each profile is implemented as an individual module



▶ The E2E library shall use the SCrc module instead of the AUTOSAR Crc module

Module version 1.0.1

2010-11-30

- Enumeration E2E_P02ReceiverStateType must have defined values
- Removed dead code in E2E Library
- Input parameter is not correctly checked against Null pointer

Module version 1.0.0

2010-11-12

Initial release

2.3.1.2. New features

No new features have been added since the last release.

2.3.1.3. EB-specific enhancements

This chapter lists the enhancements provided by the module.

Support for the usage with AUTOSAR E2E Transformer

Description:

In addition to AUTOSAR version R4.0 Rev 3, the following additional return values according to AUTOSAR release 4.2.1 are provided:

- E2E_P_OK
- ► E2E P REPEATED
- ► E2E P WRONGSEQUENCE
- E2E P ERROR
- Deterministic initialization behavior for E2E State Machine

Description:

In addition to AUTOSAR release 4.2.1, Bugzilla RfC 67553 is incorporated. That is, a new generic profile status type E2E_P_NONEWDATA is introduced in case no new data was received in the actual receive cycle. See also http://www.autosar.org/bugzilla/show_bug.cgi?id=67553.



2.3.1.4. Deviations

This chapter lists the deviations of the module from the AUTOSAR standard.

[ASCE2E-10] No support for building customized E2E Profiles

Description:

The following functions are not supported:

- E2E_CRC8*
- E2E_UpdateCounter

Rationale:

The generic E2E library is only used in combination with specific E2E profiles.

Requirements:

E2E0106, E2E0107, E2E0092, E2E0091, E2E0094, E2E0095, E2E0096, E2E0276, E2E0097, E2E0098, E2E0099

2.3.1.5. Limitations

This chapter lists the limitations of the module. Refer to the module references chapter *Integration notes*, subsection *Integration requirements* for requirements on integrating this module.

Packing of 64 bit signal types

Description:

In order to serialize 64-bit data types the following contraints apply to the configuration of a signal within a PDU:

- signal shall be byte aligned
- bit length shall be a multiple of 8
- the bitlength parameter value shall correlate with the value of the nbytes parameter
- Unpacking of 64 bit signal types

Description:

In order to deserialize 64-bit data types the following contraints apply to the configuration of a signal within a PDU:

- signal shall be byte aligned
- bitlength shall be a multiple of 8



- the bitlength parameter value shall correlate with the value of the nbytes parameter
- Range checks of 64 bit signal types

Description:

- Range checks for float signal types are not supported.
- Range checks for 64bit signal types are only supported on byte level.

2.3.1.6. Open-source software

E2E does not use open-source software.

2.3.2. E2EP01 module release notes

AUTOSAR R4.2 Rev 1

AUTOSAR SWS document version: 4.2.1

Module version: 2.2.17.B466224

Supplier: Elektrobit Automotive GmbH

2.3.2.1. Change log

This chapter lists the changes between different versions.

Module version 2.2.17

2021-04-09

Implemented E2E Profile variant 1B (DataIDMode: E2E P01 DATAID ALT)

Module version 2.2.16

2021-03-05

Updated preprocessor include guards to be PC-lint compatible

Module version 2.2.15

2020-06-19



Internal module improvement. This module version update does not affect module functionality

Module version 2.2.14

2020-01-24

Implemented extension of range in data validity check for ArrayLength up to 2048 bits

Module version 2.2.13

2019-10-11

Internal module improvement. This module version update does not affect module functionality

Module version 2.2.12

2019-06-14

Internal module improvement. This module version update does not affect module functionality

Module version 2.2.11

2018-12-21

Implemented configurable initial value of the WaitForFirstData parameter

Module version 2.2.10

2018-10-26

Internal module improvement. This module version update does not affect module functionality

Module version 2.2.9

2018-03-02

Internal module improvement. This module version update does not affect module functionality

Module version 2.2.8

2017-10-27

Implemented support for configurable type of BufferLength



Implemented profile specific parts from E2E transformer in E2E profiles and library

Module version 2.2.7

2017-09-22

Switch from MISRA-C:2004 to MISRA-C:2012

Module version 2.2.6

2017-08-25

Internal module improvement. This module version update does not affect module functionality

Module version 2.2.5

2015-11-06

Internal module improvement. This module version update does not affect module functionality

Module version 2.2.4

2015-06-19

Implemented a deterministic start-up behavior for the E2E State Machine according to Bugzilla #67553

Module version 2.2.3

2014-04-07

- Internal module improvement. This module version update does not affect module functionality
- Removed the maximum data length check (depends on the application scenario)

Module version 2.2.2

2013-11-29

Internal module improvement. This module version update does not affect module functionality

Module version 2.2.1

2013-08-16



Implemented support for Profile 01 variant C according to AUTOSAR 4.1 Rev 2 (RfC #59003)

Module version 2.2.0

2013-04-15

Implemented support for Profile 01 variant C according to AUTOSAR 4.1 Rev 1

Module version 2.1.3

2013-02-15

Internal module improvement. This module version update does not affect module functionality

Module version 2.1.2

2012-12-12

Implemented support for profile variant A and different CRC and counter offsets

Module version 2.1.1

2012-10-24

Internal module improvement. This module version update does not affect module functionality

Module version 2.1.0

2012-07-27

Implemented a re-synchronization handling if the profile detects an unexpected behavior of the received counter according to AUTOSAR 3.2 Rev 2

Module version 2.0.0

2012-06-22

Updated to AUTOSAR 4.0 Rev 3

Module version 1.0.5

2011-09-16

Internal module improvement. This module version update does not affect module functionality



2011-05-20

- ► Corrected a parameter check regarding MaxDeltaCounterInit
- ► Corrected the wording from INITAL to INITIAL of the receiver states
- Internal module improvement. This module version update does not affect module functionality
- Updated version macros
- Implemented usage of Unix line endings

Module version 1.0.3

2011-03-18

Implemented code improvements regarding explicit casts

Module version 1.0.2

2011-02-28

Removed unnecessary input parameter checks

Module version 1.0.1

2011-01-28

Implemented an evaluation by the receiver if all bits in the payload data are set to 1 ("Ungültigkeitskennzeichnung" of application CRC)

Module version 1.0.0

2010-12-23

Initial release

2.3.2.2. New features

E2EP01B: Implemented E2E Profile variant 1B (DataIDMode: E2E_P01_DATAID_ALT). Depending on parity of the counter (alternating ID configuration) the high or the low byte is included. For even counter values the low byte is included and for odd counter values the high byte is included.



2.3.2.3. EB-specific enhancements

This chapter lists the enhancements provided by the module.

[ASCE2E-41] The receiver evaluates if all bits in the payload data are set to 1 ("Ungueltigkeitskennzeichnung" of application CRC)

Description:

For more information, see the *Deviations* chapter.

► [ASCE2ESE-138] Re-synchronization handling in case the profile detects an unexpected behavior of the received counter

Description:

After a detected sequence error, e.g. due to a message loss or a reset of the sender, the library enters a synchronization state until the communication is error-free in order to provide a deterministic behavior. This behavior is configurable according to the *Specification of SW-C End-to-End Communication Protection Library, V3.0.0, R4.1 Rev 1.* For more information, see http://www.autosar.org/bugzilla/show_bug.cgi? id=52362.

Requirements:

E2E0018, E2E0022, E2E0196, E2E0021

[ASCE2E-204] Support for Profile 01 variant C

Description:

Provision of a new profile variant 1C which uses a 12-bit Datald where the higher 4 bits are explicitly transmitted and checked by the receiver according to the *Specification of SW-C End-to-End Communication Protection Library, V3.0.0, R4.1 Rev 1.* For more information, see http://www.autosar.org/bugzilla/show bug.cgi?id=53619) and http://www.autosar.org/bugzilla/show bug.cgi?id=59003.

Rationale:

Existing Profile 01 variants do not have sufficient error detection for masquerading failures if more than 255 values are used in a given system.

Requirements:

E2E0018, E2E0196, E2E0085, E2E0163, E2E0200, E2E0195

Support for the usage with AUTOSAR E2E Transformer

Description:

In addition to AUTOSAR version R4.0 Rev 3, the following APIs are provided according to AUTOSAR release 4.2.1 in a backward compatible way:



```
E2E_P01Protect()

E2E_P01Check()

E2E_P01ProtectInit()

E2E_P01CheckInit()

E2E_P01MapStatusToSM()
```

Deterministic initialization behavior for E2E State Machine

Description:

In addition to AUTOSAR release 4.2.1, Bugzilla RfC 67553 is incorporated. That is, a new generic profile status type E2E_P_NONEWDATA is introduced if no new data is received in the actual receive cycle. For more information, see http://www.autosar.org/bugzilla/show_bug.cgi?id=67553.

[ASCE2E-246] Support of 256 bytes in Profile 01

Description:

Provision of the possibility to configure E2E_P01ConfigType DataLength to up to 2048 bits (including control fields).

Rationale:

There may be use cases for a DataLength of more than 32 Bytes. Therefore, up to 2048 Bits are supported, such as in P02. ASR UC_E2E_00051 recommends a maximum length of 32 Bytes for the E2E Profile 01. The User is responsible if the DataLength configuration exceeds 32 Bytes.

Requirements:

E2E0018

[ASCE2E-894] Support for Profile 01 variant B

Description:

Provision of a new profile variant 1B which uses a 16-bit Datald where depending on parity of the counter (alternating ID configuration) the high and the low byte are included. For even counter values the low byte is included and for odd counter values the high byte is included.

Requirements:

E2E0018, E2E0196, E2E0085, E2E0163, E2E0200, E2E0195

2.3.2.4. Deviations

This chapter lists the deviations of the module from the AUTOSAR standard.



▶ [ASCE2E-34] The E2E Library uses the Safety CRC module SCrc instead of the AUTOSAR Crc module

Description:

Instead of the standard AUTOSAR Crc module, a Safety CRC module named SCrc is used. That is, instead of Crc_CalculateCRC8() and Crc_CalculateCRC8H2F, the functions SCrc_CalculateCRC8() and SCrc CalculateCRC8H2F() of the SCrc module are called.

Rationale:

The implementation of the SCrc library complies with the requirements for the development of safety-related software for the automotive domain.

Requirements:

E2E0114, E2E0190

[ASCE2E-41] The receiver evaluates if all bits in the payload data are set to 1 ("Ungueltigkeitskennzeichnung" of application CRC)

Description:

The functional behavior of the $E2E_P01Check()$ routine is stated in requirement E2E0196 (AUTOSAR SWS of the E2E Library) and does not consider *data invalid* recognition. This behavior is modified in a way that the evaluation of the payload data without CRC is done as follows:

- ▶ 1) The receiver checks the payload data to contain completely binary ones.
- 2a) If so, the data is invalid and no further checks are performed.
- 2b) If the data does not contain completely binary ones, the data is checked as specified by the Profile 01.

As a consequence, the application is informed if *data invalid* is recognized.

Rationale:

This is a requirement stated in the communication specification document (*Lastenheft Requirements Specification: Bordnetzkommunikation; BMW Group; Requirement Id: BN_KOM_30_569; 11.11.2009*).

Requirements:

E2E0196

[ASCE2E-8] Configuration pointer is a pointer to const

Description:

In contrast to E2E0166 and E2E0158, the first argument of E2E_P01Protect() and the first and third argument of E2E P01Check() are pointers to const:



See also https://www.autosar.org/bugzilla/show_bug.cgi?id=68903.

Rationale:

The E2E configuration is always constant and no write access is performed on it. Also the data must not be modified by $E2E \ P01Check()$, so no write access is performed on it.

Requirements:

E2E0166, E2E0158

2.3.2.5. Limitations

This chapter lists the limitations of the module. Refer to the module references chapter *Integration notes*, subsection *Integration requirements* for requirements on integrating this module.

For this module no constraints and limitations are known.

2.3.2.6. Open-source software

E2EP01 does not use open-source software.

2.3.3. SCrc module release notes

Module version: 2.0.11.B466224

Supplier: Elektrobit Automotive GmbH

2.3.3.1. Change log

This chapter lists the changes between different versions.

Module version 2.0.11

2021-03-05



- Updated preprocessor include guards to be PC-lint compatible
- Internal module improvement. This module version update does not affect module functionality

2020-06-19

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.9

2019-10-11

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.8

2019-06-14

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.7

2019-02-15

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.6

2018-10-26

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.5

2018-02-01

Internal module improvement. This module version update does not affect module functionality

Module version 2.0.4

2017-09-22



Switch from MISRA-C:2004 to MISRA-C:2012

Module version 2.0.3

2015-06-19

Added CRC routines required for new E2E Profiles 4, 5, 6

Module version 2.0.2

2013-11-29

- Non-functional code improvements (Inspection findings, Consistent use of static qualifier).
- ASCSCRC-74 Fixed known issue: The SCrc module used a compiler abstraction macro of the Crc module.

Module version 2.0.1

2013-02-15

Provide a Basic Software Module Description that specifies the Memory Mappings.

Module version 2.0.0

2012-06-22

▶ Update to ASR 4.0 Rev3 (New parameter isFirstCall in CalculateCRC APIs).

Module version 1.0.8

2011-09-16

Non-functional code improvements.

Module version 1.0.7

2011-05-20

Usage of unix line endings.

Module version 1.0.6

2011-04-20



- Correction of common published information.
- Correction of compiler abstraction.

2011-03-18

Macro definitions for switching between Crc implementation of SCrc module or external Crc module.

Module version 1.0.4

2011-02-28

► The GetVersionInfoApi() removed from the SCrc module.

Module version 1.0.3

2011-02-14

Elimination of misra violations.

Module version 1.0.2

2010-12-23

► Table-based 8-bit Crc routine according to SAE J1850 CRC.

Module version 1.0.1

2010-11-30

Removed unintended header file in Crc.c.

Module version 1.0.0

2010-11-12

► Table-based 8-bit Crc routine with generator polynomial 0x2F.

2.3.3.2. New features

No new features have been added since the last release.



2.3.3.3. EB-specific enhancements

This module is not part of the AUTOSAR specification.

2.3.3.4. Deviations

This module is not part of the AUTOSAR specification.

2.3.3.5. Limitations

This chapter lists the limitations of the module. Refer to the module references chapter *Integration notes*, subsection *Integration requirements* for requirements on integrating this module.

For this module no limitations are known.

2.3.3.6. Open-source software

Open-source software information is not available for this module.



3. E2EP01 user's guide

3.1. Overview

This user's guide describes the E2EP01 module. From this user's guide you learn the basic functionality of the E2EP01. You also learn which related modules are necessary to configure the E2EP01 module. The E2EP01 module reference provides further information on how to configure the E2EP01 itself.

Note that this user's guide is intended for readers who have good knowledge of AUTOSAR and about the purpose of the E2EP01. The information provided here helps you to integrate the E2EP01 in your AUTOSAR project.

- Section 3.2, "Background information" provides an overview of the basic functionality of the E2EP01.
- Section 3.3, "Configuring E2EP01" provides information on related modules that are needed in order to configure the E2EP01.
- Section 3.4, "E2EP01 integration notes" provides notes for the integration of the E2EP01 module into your project.
- For details on how to configure the E2EP01 itself, see the parameter descriptions provided in the E2EP01 module reference Chapter 4, "E2EP01 module references", which is provided together with the dependent modules E2E and SCrc.

3.2. Background information

The general concept of end-to-end communication protection is described in the EB tresos E2E Protection Wrapper documentation of the E2EPW module.

3.2.1. Functional overview

3.2.1.1. Safety mechanisms

This profile is based on E2E Profile 1 specified by AUTOSAR, see [1] and [2]. E2EPW uses the following safety mechanisms:



- Cyclic redundancy check (CRC): An 8-bit CRC is explicitly sent with polynomial 0x1D with an initial value 0x00 and a final XOR-value 0x00. The bit-offset of the CRC value within a transmitted signal group is configurable but must be byte-aligned.
- Sequence counter/alive counter: A 4-bit sequence number with a counter that represents numbers from 0 to 14 is explicitly sent and incremented at every transmission request. The bit-offset of the sequence counter/alive counter value within a transmitted signal group is configurable but must be aligned with respect to nibbles.
- System-wide unique 16-bit data ID for every port data element sent over a port: The following data ID inclusion modes can be configured:
 - ▶ **Both bytes** (dataIdMode=0): Both bytes of the 16-bit data ID are attached to the safety data for CRC calculation, but not explicitly sent.
 - Low byte only (dataIdMode=2): Only the low byte of the 16-bit data ID is attached to the safety data for CRC calculation, but not explicitly sent, while the high byte is set to 0.
 - Explicit transmission of data ID nibble (dataIdMode=3): Both bytes of the 16-bit data ID are attached to the safety data for CRC calculation, but the low nibble of the high byte of the data ID is explicitly transmitted. Only 12 bits are used in this 16-bit data ID and the high nibble of the high byte is set to 0. The bit-offset of the data ID nibble value within a transmitted signal group is configurable, but must be aligned with respect to nibbles. To be able to use this data ID inclusion mode together with the data ID inclusion mode Both bytes, the CRC is calculated over the low byte of the data ID and the high byte which is set to 0. For more information on explicit transmission of data ID nibbles, see Figure 3.4, "Layout of the protected message including control data (CRC, SEQ) with explicit transmission of data ID nibble (dataIdMode=3)"). The constraints specified in ASR_E2EPW020377 must be adhered to.

Figure 3.1, "Layout of the protected message including control data (CRC, SEQ) with 2-byte data ID (dataId-Mode=0)" shows the layout of the AUTOSAR E2E Profile 1 with a CRC offset of 0 bits and a sequence counter/alive counter offset of 8 bits for dataIdMode=0.

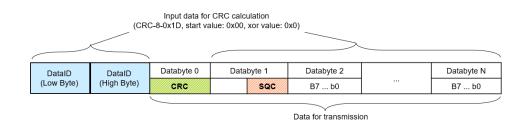


Figure 3.1. Layout of the protected message including control data (CRC, SEQ) with 2-byte data ID (dataIdMode=0)

Figure 3.2, "Layout of the protected message including control data (CRC, SEQ) with 2-byte data ID (dataId-Mode=1)" shows the layout of the AUTOSAR E2E Profile 1 with a CRC offset of 0 bits and a sequence counter/alive counter offset of 8 bits for dataIdMode=1.



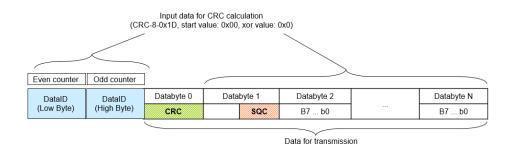


Figure 3.2. Layout of the protected message including control data (CRC, SEQ) with 2-byte data ID (dataIdMode=1)

Figure 3.3, "Layout of the protected message including control data (CRC, SEQ) with 1-byte data ID (dataId-Mode=2)" shows the layout of the AUTOSAR E2E Profile 1 with a CRC offset of 0 bits and a sequence counter/alive counter offset of 8 bits for dataIdMode=2.

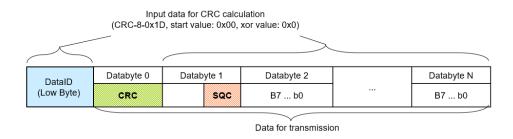


Figure 3.3. Layout of the protected message including control data (CRC, SEQ) with 1-byte data ID (dataIdMode=2)

Figure 3.4, "Layout of the protected message including control data (CRC, SEQ) with explicit transmission of data ID nibble (dataIdMode=3)" shows the layout of the AUTOSAR E2E Profile 1 with a CRC offset of 0 bits and a sequence counter/alive counter offset of 8 bits and a data ID nibble offset of 12 bits as used for dataIdMode=3.

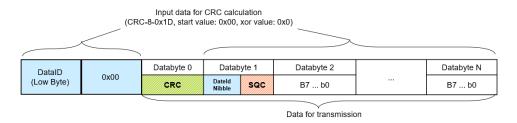


Figure 3.4. Layout of the protected message including control data (CRC, SEQ) with explicit transmission of data ID nibble (dataIdMode=3)

3.2.1.2. Failure modes and required safety mechanisms

The serialization of the application data is equal to the layout of the corresponding signal group for all variants. The <u>Table 3.1</u>, "Failure modes detection matrix for <u>E2E Profile 1</u>" shows the failure modes and the required safety mechanisms of E2E Profile 1 with the different data ID variants for detection of the failure mode.



NOTE

Different data ID inclusion modes



The different data ID inclusion modes only limits the applicable range of data IDs which can be used to detect masquerading.

An x specifies that the failure mode can be detected by the safety mechanism implemented in the E2E Profile.

An (X) specifies a safety mechanism which is only required to implement another safety mechanism.

An A specifies that the failure mode can be detected by a safety mechanism implemented in the data sink.

A \mathbb{W} specifies that the failure mode can be detected by the safety mechanism implemented in the product EB tresos E2E Protection Wrapper. If this module is used directly in the Sofware Component or is used together with a different product, e.g. EB tresos E2E Protection Transformer, ensure that either this safety mechanism is not required or already implemented in a different module, e.g. Rte.

Failure mode/safety mechanism	Sequence counter	CRC	Data ID	Timeout detection	Range check
Unintended message repetition	Х				
Message loss	Х			А	
Insertion of mes- sage	Х	(X)	Х		
Resequencing	Х				
Message corruption		X			W
Delayed reception				A	
Addressing faults	(X)	(X)	Х		
Masquerading	(X)	(X)	Х		

Table 3.1. Failure modes detection matrix for E2E Profile 1

3.3. Configuring E2EP01

To configure the E2EP01 module, add the module to your project using EB tresos Studio. This module does not provide any configuration parameters except a common published information. You find this information in



the module references section of this document. You also find these in the parameter description in EB tresos Studio.

To use the E2EP01 module, you must configure additional modules as outlined below:

- The E2EP01 module requires API functions and data types from the E2E library module. This module does not provide any configuration parameters.
- The E2EP01 module requires API functions and data types from the SCrc library module. This module does not provide any configuration parameters.
- The E2EP01 module provides API functions and data types required either from the E2EPW module or from the E2ESM and E2EXf module. For more information on the E2ESM and E2EXf modules, see [2] and [3]).

3.4. E2EP01 integration notes

You find general integration information in the EB tresos AutoCore Generic documentation.

In addition, you find module-specific information about exclusive areas, production errors and memory mapping in the module-specific integration notes. You find the module-specific integration notes in the module references chapter of this document. See Chapter 4, "E2EP01 module references" sub-section Integration notes in each module.



4. E2EP01 module references

4.1. Overview

This chapter provides module references for the E2EP01 product modules. These include a detailed description of all configuration parameters. Furthermore this chapter lists the application programming interface with all data types, constants and functions.

The content of the sections is sorted alphabetically according the EB tresos AutoCore Generic module names.

For further information on the functional behavior of these modules, refer to the chapter E2EP01 user's guide.

4.1.1. Notation in EB module references

EB notation may differ from the AUTOSAR standard notation in the software specification documents (SWS). This section describes the notation of *default value* and *range* fields in the EB module references.

4.1.1.1. Default value of configuration parameters

If there is no default value specified for a parameter, the default value field is omitted to prevent ambiguity with parameters that have -- as default values.

Example: The parameter <code>BswMCompuConstText</code> of the <code>BswM</code> module of EB tresos AutoCore Generic 8 Mode Management has no default value field, therefore it is omitted.

4.1.1.2. Range information of configuration parameters

The range of a configuration parameter contains an upper and a lower boundary. However, in special cases the range of allowed values can be computed by means of an XPath function that is evaluated at configuration time. An XPath function can either be a standard <code>xpath:<function>()</code> or a custom <code>cxpath:<function>()</code> function. The range of a configuration parameter may be computed based on other configuration parameters that are referenced from the XPath function. For more information on custom XPath functions, see section <code>Custom XPath Functions API</code> of the EB tresos Studio developer's guide.

Example: The parameter <code>BswMCompuConstText</code> of the <code>BswM</code> module of EB tresos AutoCore Generic 8 Mode Management has the custom XPath function <code>cxpath:getCompuMethodsVT()</code> in the range field which provides the allowed values.



4.2. E2E

4.2.1. Configuration parameters

Containers included		
Container name	Multiplicity	Description
CommonPublishedInformation	11	Label: Common Published Information Common container, aggregated by all modules. It contains published information about vendor and versions.
PublishedInformation	11	Label: EB Published Information Additional published parameters not covered by Common-PublishedInformation container.

4.2.1.1. CommonPublishedInformation

Parameters included		
Parameter name	Multiplicity	
<u>ArMajorVersion</u>	11	
<u>ArMinorVersion</u>	11	
<u>ArPatchVersion</u>	11	
<u>SwMajorVersion</u>	11	
<u>SwMinorVersion</u>	11	
<u>SwPatchVersion</u>	11	
ModuleId	11	
Vendorld	11	
VendorApilnfix	11	
Release	11	

Parameter Name	ArMajorVersion
Label	AUTOSAR Major Version
Description	Major version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11



Туре	INTEGER_LABEL
Default value	4
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArMinorVersion
Label	AUTOSAR Minor Version
Description	Minor version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	2
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArPatchVersion
Label	AUTOSAR Patch Version
Description	Patch level version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	1
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	SwMajorVersion
Label	Software Major Version
Description	Major version number of the vendor specific implementation of the module.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	2
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name SwMinorVersion



Label	Software Minor Version
Description	Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	0
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	SwPatchVersion
Label	Software Patch Version
Description	Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	18
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	Moduleld
Label	Numeric Module ID
Description	Module ID of this module from Module List
Multiplicity	11
Туре	INTEGER_LABEL
Default value	207
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	Vendorld
Label	Vendor ID
Description	Vendor ID of the dedicated implementation of this module according to the AUTOSAR vendor list
Multiplicity	11
Туре	INTEGER_LABEL



Default value	1
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	VendorApilnfix
Multiplicity	11
Туре	STRING_LABEL

Parameter Name	Release
Label	Release Information
Multiplicity	11
Туре	STRING_LABEL
Default value	
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

4.2.1.2. PublishedInformation

Parameters included	
Parameter name	Multiplicity
PbcfgMSupport	11

Parameter Name	PbcfgMSupport
Label	PbcfgM support
Description	Specifies whether or not the E2E can use the PbcfgM module for post-build support.
Multiplicity	11
Туре	BOOLEAN
Default value	false
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

4.2.2. Application programming interface (API)



4.2.2.1. Type definitions

4.2.2.1.1. E2E_PCheckStatusType

Purpose	Status type for E2E State Machine return values.
Туре	uint8

4.2.2.2. Macro constants

4.2.2.2.1. E2E_AR_MAJOR_VERSION

Purpose	AUTOSAR specification major version.
Value	4U

4.2.2.2. E2E_AR_MINOR_VERSION

Purpose	AUTOSAR specification minor version.
Value	2U

4.2.2.2.3. E2E_AR_PATCH_VERSION

Purpose	AUTOSAR specification patch version.
Value	1U

4.2.2.2.4. E2E_AR_RELEASE_MAJOR_VERSION

Purpose	AUTOSAR release major version.
Value	4U

4.2.2.2.5. E2E_AR_RELEASE_MINOR_VERSION

Purpose	AUTOSAR release minor version.
---------	--------------------------------



|--|

4.2.2.2.6. E2E_AR_RELEASE_REVISION_VERSION

Purpose	AUTOSAR release revision version.
Value	1U

4.2.2.2.7. E2E_E_INPUTERR_NULL

Purpose	At least one pointer parameter is a NULL pointer.
Value	0x13U

4.2.2.2.8. E2E_E_INPUTERR_WRONG

Purpose	At least one input parameter is erroneous (e.g. out of range).
Value	0x17U

4.2.2.2.9. E2E_E_INTERR

Purpose	An internal library error has occurred.
Value	0x19U
Description	An internal library error has occurred. (e.g. error detected by program flow monitoring, violated invariant or postcondition)

4.2.2.2.10. E2E_E_INVALID

Purpose	Invalid value passed to function.
Value	0xFFU

4.2.2.2.11. E2E_E_OK

Purpose	Function completed successfully.
Value	0U



4.2.2.2.12. E2E_E_WRONGSTATE

Purpose	Function executed in wrong state.
Value	0x1AU

4.2.2.2.13. E2E_MODULE_ID

Purpose	AUTOSAR module identification.
Value	207U

4.2.2.2.14. E2E_P_ERROR

Purpose	Error not related to counters occurred (e.g. wrong crc, wrong length, wrong DataID) or the return of the check function was not OK.
Value	0x03U
Description	Note: related to E2E_PCheckStatusType

4.2.2.2.15. E2E_P_NONEWDATA

Purpose	No new Data is available since the last call of the check function.
Value	0x05U
Description	Note: related to E2E_PCheckStatusType

4.2.2.2.16. E2E_P_NOTAVAILABLE

•	No value has been received yet. This is used as the initialization value for the buffer, it is not returned by any E2E profile.
Value	0x04U
Description	Note: related to E2E_PCheckStatusType

4.2.2.2.17. E2E_P_OK

Purpose	The checks of the Data in this cycle were successful (including counter check).
Value	0x00U



|--|

4.2.2.2.18. E2E_P_REPEATED

Purpose	Either no new data is available, or the new data has a repeated counter.	
Value	0x01U	
Description	Note: related to E2E_PCheckStatusType	

4.2.2.2.19. E2E_P_WRONGSEQUENCE

Purpose	The checks of the Data in this cycle were successful, with the exception of counter jump, which changed more than allowed delta.
Value	0x02U
Description	Note: related to E2E_PCheckStatusType

4.2.2.2.20. E2E_SW_MAJOR_VERSION

Purpose	AUTOSAR module major version.		
Value	2U		

4.2.2.2.1. E2E_SW_MINOR_VERSION

Purpose	AUTOSAR module minor version.	
Value	0U	

4.2.2.2.22. E2E_SW_PATCH_VERSION

Purpose	AUTOSAR module patch version.	
Value	18U	

4.2.2.2.23. E2E_VENDOR_ID

Purpose	AUTOSAR vendor identification: Elektrobit Automotive GmbH.
Value	1U



4.2.2.3. Functions

4.2.2.3.1. E2E_GetVersionInfo

Purpose	Return the modules version information.		
Synopsis	<pre>void E2E_GetVersionInfo (Std_VersionInfoType * VersionInfo);</pre>		
Service ID	0x14		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (out)	VersionInfo	Pointer where to store the version information of this module	
Description	This service returns the version information of this module. The version information includes: Module Id Vendor Id Vendor specific version numbers		

4.2.3. Integration notes

4.2.3.1. Exclusive areas

Exclusive areas are not used by the E2E module.

4.2.3.2. Production errors

Production errors are not reported by the $\mathtt{E2E}$ module.

4.2.3.3. Memory mapping

General information about memory mapping is provided in the EB tresos AutoCore Generic documentation. Refer to the section Memory mapping and compiler abstraction in the Integration notes section for details.

The following table provides the list of sections that may be mapped for this module:



Memory section
CODE
CONST_8
CONST_16
CONST_32
CONST_UNSPECIFIED

4.2.3.4. Integration requirements

WARNING

Integration requirements list is not exhaustive



The following list of integration requirements helps you to integrate your product. However, this list is not exhaustive. You also require information from the user guide, release notes, and EB tresos AutoCore known issues to successfully integrate your product.

Integration requirements are not listed for the E2E module.

4.3. E2EP01

4.3.1. Configuration parameters

Containers included		
Container name	Multiplicity	Description
CommonPublishedInformation	11	Label: Common Published Information Common container, aggregated by all modules. It contains published information about vendor and versions.
PublishedInformation	11	Label: EB Published Information Additional published parameters not covered by Common-PublishedInformation container.

4.3.1.1. CommonPublishedInformation

Parameters included	
Parameter name	Multiplicity



Parameters included		
ArMajorVersion	11	
ArMinorVersion	11	
ArPatchVersion	11	
SwMajorVersion	11	
SwMinorVersion	11	
<u>SwPatchVersion</u>	11	
ModuleId	11	
Vendorld	11	
VendorApiInfix	11	
Release	11	

Parameter Name	ArMajorVersion
Label	AUTOSAR Major Version
Description	Major version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	4
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArMinorVersion
Label	AUTOSAR Minor Version
Description	Minor version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	2
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArPatchVersion
Label	AUTOSAR Patch Version



Description	Patch level version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	1
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	SwMajorVersion
Label	Software Major Version
Description	Major version number of the vendor specific implementation of the module.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	2
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	SwMinorVersion
Label	Software Minor Version
Description	Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	2
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	SwPatchVersion
Label	Software Patch Version
Description	Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	17



Configuration class	PublishedInformation:	
Origin	Elektrobit Automotive GmbH	

Parameter Name	Moduleld
Label	Numeric Module ID
Description	Module ID of this module from Module List
Multiplicity	11
Туре	INTEGER_LABEL
Default value	0
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	Vendorld
Label	Vendor ID
Description	Vendor ID of the dedicated implementation of this module according to the AU- TOSAR vendor list
Multiplicity	11
Туре	INTEGER_LABEL
Default value	1
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	VendorApilnfix
Multiplicity	11
Туре	STRING_LABEL

Parameter Name	Release
Label	Release Information
Multiplicity	11
Туре	STRING_LABEL
Default value	
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH



4.3.1.2. PublishedInformation

Parameters included		
Parameter name	Multiplicity	
<u>PbcfgMSupport</u>	11	

Parameter Name	PbcfgMSupport	
Label	PbcfgM support	
Description	Specifies whether or not the E2EP01 can use the PbcfgM module for post-build support.	
Multiplicity	11	
Туре	BOOLEAN	
Default value	false	
Configuration class	PublishedInformation:	
Origin	Elektrobit Automotive GmbH	

4.3.2. Application programming interface (API)

4.3.2.1. Type definitions

4.3.2.1.1. E2E_P01CheckStateType

Purpose	Definition of E2E Profile 1 check state type.	
Туре	E2E_P01ReceiverStateType	
Description	Type-definition for backward-compatibility due to type renaming done in AUTOSAR version 4.2.1.	

4.3.2.1.2. E2E_P01CheckStatusType

Purpose	Definition of E2E Profile 1 check status type.	
Туре	E2E_P01ReceiverStatusType	
Description	Type-definition for backward-compatibility due to type renaming done in AUTOSAR version 4.2.1.	



4.3.2.1.3. E2E_P01ConfigType

Purpose	Configuration of transmitted Data for E2E Profile 1.		
Туре	struct	struct	
Members	uint16 CounterOffset	Bit offset of Counter (Least Significant Bit) from the beginning of the Byte-Array (bit numbering: bit 0 is the least important). The offset shall be a multiple of 4. For example, offset 8 means that the Counter will take the low nibble of the byte 1, i.e. bits 811.	
	uint16 CRCOffset	Bit offset of CRC (Least Significant Bit) from the beginning of the Byte-Array (bit numbering: bit 0 is the least important). The offset shall be a multiple of 8. For example, offset 8 means that the CRC will take the byte 1, i.e. bits 815.	
	uint16 DataID	A unique identifier for protection against masquerading.	
	uint16 DataIDNibbleOffset	Bit offset of the low nibble (Least Significant Bit) of the high byte of Data ID from the beginning of the Byte-Array (bit numbering: bit 0 is the least important). The offset shall be a multiple of 4. For example, offset 8 means that the DataIDNibble will take the low nibble of the byte 1, i.e. bits 811.	
	E2E_P01DataIDMode DataIDMode	Inclusion mode of ID in CRC computation.	
	uint16 DataLength	Length of the data in bits. The value shall be a multiple of 8 and shall be <= 2048.	
	uint8 MaxDeltaCounterInit	Initial maximum allowed gap between two counter values of two consecutively received valid Data.	
	uint8 MaxNoNewOrRepeatedData	Maximum amount of missing or repeated Data which the receiver does not expect to exceed under normal communication conditions.	
	uint8 SyncCounterInit	Number of Data required for validating the consistency of the counter that must be received with a valid counter after the de-	



		tection of an unexpected behavior of a received counter.
Description	Configuration of transmitted Data (Data Ele each transmitted Data, there is an instance	,

4.3.2.1.4. E2E_P01DataIDMode

Purpose	Inclusion modes of Data ID for E2E Profile 1.	
Туре	enum	
Constants	E2E_P01_DATAID_BOTH	Two bytes are included in the CRC .
	E2E_P01_DATAID_ALT	One of the two bytes is included, alternating high and low byte.
	E2E_P01_DATAID_LOW	Only low byte is included, high byte is never used.
	E2E_P01_DATAID_NIBBLE	The low byte is included in the implicit CRC calculation, the low nibble of the high byte is explicitly transmitted along with the data, the high nibble of the high byte is not used.
Description	The Data ID is two bytes long in E2E Profile 1. There are three inclusion modes how the implicit two-byte Data ID is included in the one-byte CRC.	

4.3.2.1.5. E2E_P01ProtectStateType

Purpose	Definition of E2E Profile 1 protect state type.	
Туре	E2E_P01SenderStateType	
Description	Type-definition for backward-compatibility due to type renaming done in AUTOSAR version 4.2.1.	

4.3.2.1.6. E2E_P01ReceiverStateType

Purpose	Definition of E2E Profile 1 receiver state type.	
Туре	struct	
Members	E2E_P01ReceiverStatusType Status	Result of the verification of the Data, determined by the Check function.
	uint8 LastValidCounter	Counter of last valid received message.



	uint8 MaxDeltaCounter	MaxDeltaCounter specifies the maximum allowed difference between two counter values of consecutively received valid messages.
	boolean WaitForFirstData	If true means that no correct data (with correct Data ID and CRC) has been yet received after the receiver (re-)initialization.
	boolean NewDataAvailable	Indicates to E2E Library that a new data is available for the Library to be checked. This attribute is set by the E2E Library caller and not by the E2E Library.
	uint8 LostData	Number of data (messages) lost since reception of last valid one.
	uint8 NoNewOrRepeatedData- Counter	Amount of consecutive reception cycles in which either (1) there was no new data, or (2) when the data was repeated.
	uint8 SyncCounter	Number of consecutively received valid Data required for determining the consistency of the counter.
Description	State of the sender for a Data protected with E2E Profile 1.	

4.3.2.1.7. E2E_P01ReceiverStatusType

Purpose	Definition of E2E Profile 1 receiver status type.		
Туре	enum	enum	
Constants	E2E_P01STATUS_OK	New data has been correctly received.	
	E2E_P01STATUS_NONEWDATA	The Check function has been invoked but new Data is not available since the last call.	
	E2E_P01STATUS_WRONGCRC	The data has been received according to communication medium, but the CRC is incorrect.	
	E2E_P01STATUS_SYNC	New data has been received after detection of an unexpected behavior of counter.	
	E2E_P01STATUS_INITIAL	New data has been correctly received, but this is the first Data since the receiver's (re-)initialization.	



	E2E_P01STATUS_REPEATED	New data has been correctly received, but the Counter is identical to the most recent Data received with Status _INITIAL, _OK, or _OKSOMELOST.
	E2E_P01STATUS_OKSOMELOST	New data has been correctly received, but some data in the sequence have been probably lost.
	E2E_P01STATUS_WRONGSEQUENCE	The new data has been correctly received, but the Counter Delta is too big (DeltaCounter > MaxDeltaCounter)
	E2E_P01STATUS_DATAINVALID	All bits in the received data except for byte 0 (CRC) are set to one.
Description	Result of the verification of the Data in E2E tion.	Profile 1, determined by the Check func-

4.3.2.1.8. E2E_P01SenderStateType

Purpose	State of the sender for a Data protected wit	h E2E Profile 1.
Туре	struct	
Members		Counter to be used for protecting the Data. The counter is incremented modulo 15

4.3.2.2. Macro constants

4.3.2.2.1. E2EP01_AR_MAJOR_VERSION

Purpose	AUTOSAR specification major version.
Value	4U

4.3.2.2.2. E2EP01_AR_MINOR_VERSION

Purpose	AUTOSAR specification minor version.
Value	2U



4.3.2.2.3. E2EP01_AR_PATCH_VERSION

Purpose	AUTOSAR specification patch version.
Value	1U

4.3.2.2.4. E2EP01_AR_RELEASE_MAJOR_VERSION

Purpose	AUTOSAR release major version.
Value	4U

4.3.2.2.5. E2EP01_AR_RELEASE_MINOR_VERSION

Purpose	AUTOSAR release minor version.
Value	2U

4.3.2.2.6. E2EP01_AR_RELEASE_REVISION_VERSION

Purpose	AUTOSAR release revision version.
Value	1U

4.3.2.2.7. E2EP01_SW_MAJOR_VERSION

Purpose	AUTOSAR module major version.
Value	2U

4.3.2.2.8. E2EP01_SW_MINOR_VERSION

Purpose	AUTOSAR module minor version.
Value	2U

4.3.2.2.9. E2EP01_SW_PATCH_VERSION

Purpose	AUTOSAR module patch version.
---------	-------------------------------



|--|--|--|--|

4.3.2.2.10. E2EP01_VENDOR_ID

Purpose	AUTOSAR vendor identification: Elektrobit Automotive GmbH.
Value	1U

4.3.2.3. Functions

4.3.2.3.1. E2E_P01Check

Purpose	Check the received Data using the E2E Profile P01.	
Synopsis	<pre>Std_ReturnType E2E_P01Check (const E2E_P01ConfigType * Config , E2E_P01CheckStateType * State , const uint8 * Data);</pre>	
Service ID	0x02	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different communication data / states	
Parameters (in)	Config Pointer to static configuration.	
	Data Pointer to received Data.	
Parameters (in,out)	State Pointer to port/data communication state.	
Return Value	Function execution success status	
	E2E_E_INPUTERR_NULL At least one pointer parameter is pointer.	
E2E_E_INPUTERR_WRONG At least 0		At least one input parameter is erroneous.
	E2E_E_OK Function completed successfully.	
Description	Checks the Data received using the E2E Profile P01. This includes CRC calculation, handling of Counter and Data ID.	

4.3.2.3.2. E2E_P01CheckInit

Purpose Initializes the check state.	urpose	Initializes the check state.	
--------------------------------------	--------	------------------------------	--



Synopsis	<pre>Std_ReturnType E2E_P01CheckInit StatePtr);</pre>	(E2E_P01CheckStateType *
Service ID	0x1c	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different states	
Parameters (out)	StatePtr Pointer to port/data communication state.	
Return Value	Function execution success status	
	E2E_E_INPUTERR_NULL	NULL pointer passed.
	E2E_E_OK	Function completed successfully.
Description	Initializes the state structure by setting: LastValidCounter = 0 MaxDeltaCounter = 0 WaitForFirstData = E2EXF_WAIT_FOR_FIRST_DATA_INIT_VALUE NewDataAvailable = TRUE LostData = 0 Status = E2E_P01STATUS_NONEWDATA NoNewOrRepeatedDataCounter = 0 SyncCounter = 0.	

4.3.2.3.3. E2E_P01MapStatusToSM

Purpose	Maps the check status of Profile 1	Maps the check status of Profile 1 to a generic check status.	
Synopsis	E2E_PCheckStatusType E2E_P01MapStatusToSM (Std_ReturnType CheckReturn , E2E_P01CheckStatusType Status , boolean profile-Behavior);		
Service ID	0x1d	0x1d	
Sync/Async	Synchronous	Synchronous	
Reentrancy	Reentrant for different status types	Reentrant for different status types	
Parameters (in)	CheckReturn	Return value of the E2E_P01Check function.	
	Status	Status determined by E2E_P01Check function.	
	profileBehavior	FALSE: check has the legacy behavior, before R4.2 TRUE: check behaves like new P4/P5/P6 profiles introduced in R4.2	
Return Value	Profile-independent status of the reception on one single Data in one cycle.		
	E2E_P_OK	CheckReturn is E2E_E_OK and profile-Behavior is TRUE and Status is E2E P01STATUS_OK or E2E_P01STATUS OKSOMELOST or E2E_P01STATUS	



		SYNC, or CheckReturn is E2E_E_OK and profileBehavior is FALSE and Status is E2E_P01STATUS_OK or E2EP01STATUS_OKSOMELOST or E2EP01STATUS_INITIAL.
	E2E_P_ERROR	CheckReturn is E2E_E_OK and Status is E2E_P01STATUS_WRONGCRC, or CheckReturn is E2E_E_OK and Status is a not defined status, or CheckReturn does not equal E2E_E_OK.
	E2E_P_REPEATED	CheckReturn is E2E_E_OK and Status is E2E_P01STATUS_REPEATED.
	E2E_P_NONEWDATA	CheckReturn is E2E_E_OK and Status is E2E_P01STATUS_NONEWDATA.
	E2E_P_WRONGSEQUENCE	CheckReturn is E2E_E_OK and profile-Behavior is TRUE and Status is E2EP01STATUS_WRONGSEQUENCE or E2E_P01STATUS_INITIAL, or Check-Return is E2E_E_OK and profileBehavior is FALSE and Status is E2EP01STATUS_WRONGSEQUENCE or E2E_P01STATUS_SYNC.
Description	The function maps the check status of Profile 1 to a generic check status, which can be used by E2E state machine check function. The E2E Profile 1 delivers a more fine-granular status, but this is not relevant for the E2E state machine.	

4.3.2.3.4. E2E_P01Protect

Purpose	Protects the array/buffer to be transmitted using the E2E Profile P01.		
Synopsis	<pre>Std_ReturnType E2E_P01Protect (fig , E2E_P01ProtectStateType *</pre>		
Service ID	0x01		
Sync/Async	Synchronous		
Reentrancy	Reentrant for different communication data / states		
Parameters (in)	Config Pointer to static configuration.		
Parameters (in,out)	State Pointer to port/data communication st		
	Data Pointer to Data to be protected		



Return Value	Function execution success status	
	E2E_E_INPUTERR_NULL	At least one pointer parameter is a NULL pointer.
	E2E_E_INPUTERR_WRONG	At least one input parameter is erroneous.
	E2E_E_OK	Function completed successfully.
Description	Protects the array/buffer to be transmitted using the E2E Profile P01. This includes checksum calculation, handling of counter and Data ID.	

4.3.2.3.5. E2E_P01ProtectInit

Purpose	Initializes the protection state.	
Synopsis	<pre>Std_ReturnType E2E_P01ProtectInit (E2E_P01ProtectStateType * StatePtr);</pre>	
Service ID	0x1b	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different states	
Parameters (out)	StatePtr Pointer to port/data communication state.	
Return Value	Function execution success status	
	E2E_E_INPUTERR_NULL NULL pointer passed.	
	E2E_E_OK Function completed successfully.	
Description	Initializes the state structure by setting the Counter to 0.	

4.3.3. Integration notes

4.3.3.1. Exclusive areas

Exclusive areas are not used by the E2EP01 module.

4.3.3.2. Production errors

Production errors are not reported by the ${\tt E2EP01}$ module.



4.3.3.3. Memory mapping

General information about memory mapping is provided in the EB tresos AutoCore Generic documentation. Refer to the section Memory mapping and compiler abstraction in the Integration notes section for details.

The following table provides the list of sections that may be mapped for this module:

Memory section	
CODE	

4.3.3.4. Integration requirements

WARNING

Integration requirements list is not exhaustive



The following list of integration requirements helps you to integrate your product. However, this list is not exhaustive. You also require information from the user guide, release notes, and EB tresos AutoCore known issues to successfully integrate your product.

Integration requirements are not listed for the E2EP01 module.

4.4. SCrc

4.4.1. Configuration parameters

Containers included		
Container name	Multiplicity	Description
CommonPublishedInformation	11	Label: Common Published Information Common container, aggregated by all modules. It contains published information about vendor and versions.
PublishedInformation	11	Label: EB Published Information Additional published parameters not covered by Common-PublishedInformation container.
SCrcPublishedInformation	11	Additional published parameters not covered by Common-PublishedInformation container.



Containers included	
	Note that these parameters do not have any configuration
	class setting, since they are published information.

Parameters included		
Parameter name Multiplicity		
IMPLEMENTATION_CONFIG_VARIANT	11	

Parameter Name	IMPLEMENTATION_CONFIG_VARIANT
Label	Config Variant
Multiplicity	11
Туре	ENUMERATION
Default value	VariantPreCompile
Range	VariantPreCompile

4.4.1.1. CommonPublishedInformation

Parameters included	
Parameter name	Multiplicity
ArMajorVersion	11
ArMinorVersion	11
ArPatchVersion	11
<u>SwMajorVersion</u>	11
SwMinorVersion	11
SwPatchVersion	11
ModuleId	11
Vendorld	11
Release	11

Parameter Name	ArMajorVersion
Label	AUTOSAR Major Version
Description	Major version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11
Туре	INTEGER_LABEL



Default value	0
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArMinorVersion
Label	AUTOSAR Minor Version
Description	Minor version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	0
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	ArPatchVersion
Label	AUTOSAR Patch Version
Description	Patch level version number of AUTOSAR specification on which the appropriate implementation is based on.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	0
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	SwMajorVersion
Label	Software Major Version
Description	Major version number of the vendor specific implementation of the module.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	2
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	SwMinorVersion
----------------	----------------



Label	Software Minor Version
Description	Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	0
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	SwPatchVersion
Label	Software Patch Version
Description	Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.
Multiplicity	11
Туре	INTEGER_LABEL
Default value	11
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	Moduleld
Label	Numeric Module ID
Description	Module ID of this module from Module List
Multiplicity	11
Туре	INTEGER_LABEL
Default value	0
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	Vendorld
Label	Vendor ID
Description	Vendor ID of the dedicated implementation of this module according to the AUTOSAR vendor list
Multiplicity	11
Туре	INTEGER_LABEL



Default value	1
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

Parameter Name	Release
Label	Release Information
Multiplicity	11
Туре	STRING_LABEL
Default value	
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

4.4.1.2. PublishedInformation

Parameters included	
Parameter name	Multiplicity
PbcfgMSupport	11

Parameter Name	PbcfgMSupport
Label	PbcfgM support
Description	Specifies whether or not the SCrc can use the PbcfgM module for post-build support.
Multiplicity	11
Туре	BOOLEAN
Default value	false
Configuration class	PublishedInformation:
Origin	Elektrobit Automotive GmbH

4.4.1.3. SCrcPublishedInformation

4.4.2. Application programming interface (API)



4.4.2.1. Macro constants

4.4.2.1.1. SCRC_FUNCENABLED_SCRC_CRC16

·	Defines whether or not SCrc_CalculateCRC16 shall map to SCrc_CalculateCRC16() of this SCrc module (STD_ON) or shall map to an external function Crc_Calculate-CRC16() declared in Crc.h (STD_OFF).
Value	STD_ON

4.4.2.1.2. SCRC_FUNCENABLED_SCRC_CRC32P4

Purpose	Defines whether or not SCrc_CalculateCRC32P4 shall map to SCrc
	CalculateCRC32P4() of this SCrc module (STD_ON) or shall map to an external func-
	tion Crc_CalculateCRC32P4() declared in Crc.h (STD_OFF).
Value	STD_ON

4.4.2.1.3. SCRC_FUNCENABLED_SCRC_CRC8

	Defines whether or not SCrc_CalculateCRC8 shall map to SCrc_CalculateCRC8() of this SCrc module (STD_ON) or shall map to an external function Crc_Calculate-CRC8() declared in Crc.h (STD_OFF).
Value	STD_ON

4.4.2.1.4. SCRC_FUNCENABLED_SCRC_CRC8H2F

Purpose	Defines whether or not SCrc_CalculateCRC8H2F shall map to SCrc
	CalculateCRC8H2F() of this SCrc module (STD_ON) or shall map to an external func-
	tion Crc_CalculateCRC8H2F() declared in Crc.h (STD_OFF).
Value	STD_ON

4.4.2.1.5. SCRC_SW_MAJOR_VERSION

Purpose	AUTOSAR module major version.
---------	-------------------------------



|--|--|

4.4.2.1.6. SCRC_SW_MINOR_VERSION

Purpose	AUTOSAR module minor version.
Value	0U

4.4.2.1.7. SCRC_SW_PATCH_VERSION

Purpose	AUTOSAR module patch version.
Value	11U

4.4.2.1.8. SCRC_VENDOR_ID

Purpose	AUTOSAR vendor identification: Elektrobit Automotive GmbH.
Value	1U

4.4.2.2. Functions

4.4.2.2.1. SCrc_CalculateCRC16

Purpose	Calculation of CRC16.	
Synopsis	<pre>uint16 SCrc_CalculateCRC16 (const uint8 * SCrc_DataPtr , uint32 SCrc_Length , uint16 SCrc_StartValue16 , boolean SCrc IsFirstCall);</pre>	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	SCrc_DataPtr	Valid pointer to start address of data block
	SCrc_Length	Length of data block in bytes
	SCrc_StartValue16	Initial Value
	SCrc_IsFirstCall	TRUE: First call in a sequence or individual CRC calculation; start from initial



		value, ignore Crc_StartValue16. FALSE: Subsequent call in a call sequence; Crc StartValue16 is interpreted to be the return value of the previous function call.
Return Value	calculated CRC16 value	
Description	This function performs the calculation of a referenced by SCrc_DataPtr of byte length	,

4.4.2.2.2. SCrc_CalculateCRC32P4

Purpose	Calculation of CRC32P4.	
Synopsis	<pre>uint32 SCrc_CalculateCRC32P4 (const uint8 * SCrc_DataPtr , uint32 SCrc_Length , uint32 SCrc_StartValue32P4 , boolean SCrc_IsFirstCall);</pre>	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	SCrc_DataPtr	Valid pointer to start address of data block
	SCrc_Length	Length of data block in bytes
	SCrc_StartValue32P4	Initial Value
	SCrc_IsFirstCall	TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue8. FALSE: Subsequent call in a call sequence; Crc_StartValue32P4 is interpreted to be the return value of the previous function call.
Return Value	calculated CRC32 value	
Description	This function performs the calculation of a 32-bit CRC value for Ethernet over the memory block referenced by SCrc_DataPtr of byte length SCrc_Length.	

4.4.2.2.3. SCrc_CalculateCRC8

Purpose	Calculation of CRC8.	
Synopsis	<pre>uint8 SCrc_CalculateCRC8 (const uint8 * SCrc_DataPtr , uint32 SCrc_Length , uint8 SCrc_StartValue8 , boolean SCrc_IsFirstCall);</pre>	



Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	SCrc_DataPtr	Valid pointer to start address of data block
	SCrc_Length	Length of data block in bytes
	SCrc_StartValue8	Initial Value
	SCrc_IsFirstCall	TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue8. FALSE: Subsequent call in a call sequence; Crc_StartValue8 is interpreted to be the return value of the previous function call.
Return Value	calculated CRC8 value	
Description	This function performs the calculation of a ory block referenced by SCrc_DataPtr of b	8-bit SAE J1850 CRC value over the memyte length SCrc_Length.

4.4.2.2.4. SCrc_CalculateCRC8H2F

Purpose	Calculation of CRC8 with the Polynomial 0x2F.	
Synopsis	<pre>uint8 SCrc_CalculateCRC8H2F (const uint8 * SCrc_DataPtr , uint32 SCrc_Length , uint8 SCrc_StartValue8H2F , boolean SCrc IsFirstCall);</pre>	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	SCrc_DataPtr	Valid pointer to start address of data block
	SCrc_Length	Length of data block in bytes
	SCrc_StartValue8	Initial Value
	SCrc_IsFirstCall	TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue8. FALSE: Subsequent call in a call sequence; Crc_StartValue8 is interpreted to be the return value of the previous function call.
Return Value	calculated CRC8 value	
Description	This function performs the calculation of a 8-bit CRC value with the Polynomial 0x2F over the memory block referenced by SCrc_DataPtr of byte length SCrc_Length.	



4.4.3. Integration notes

4.4.3.1. Exclusive areas

Exclusive areas are not used by the SCrc module.

4.4.3.2. Production errors

Production errors are not reported by the SCrc module.

4.4.3.3. Memory mapping

General information about memory mapping is provided in the EB tresos AutoCore Generic documentation. Refer to the section Memory mapping and compiler abstraction in the Integration notes section for details.

The following table provides the list of sections that may be mapped for this module:

Memory section
CODE
CONST_8
CONST_16
CONST_32

4.4.3.4. Integration requirements

WARNING

Integration requirements list is not exhaustive



The following list of integration requirements helps you to integrate your product. However, this list is not exhaustive. You also require information from the user guide, release notes, and EB tresos AutoCore known issues to successfully integrate your product.

Integration requirements are not listed for the SCrc module.



5. Bibliography

Bibliography

- [1] AUTOSAR Specification of SW-C End-to-End Communication Protection Library, Issue Version 2.0.0, Release 4.0.3, Revision 0003, Publisher: AUTOSAR
- [2] AUTOSAR Specification of SW-C End-to-End Communication Protection Library, Issue AUTOSAR 4.2.1, Publisher: AUTOSAR
- [3] AUTOSAR Specification of Module E2E Transformer, Issue AUTOSAR 4.2.1, Publisher: AUTOSAR