
Creating a Ring Topology network configuration in X-CTU using XBEE S1 module

Ring Topology:

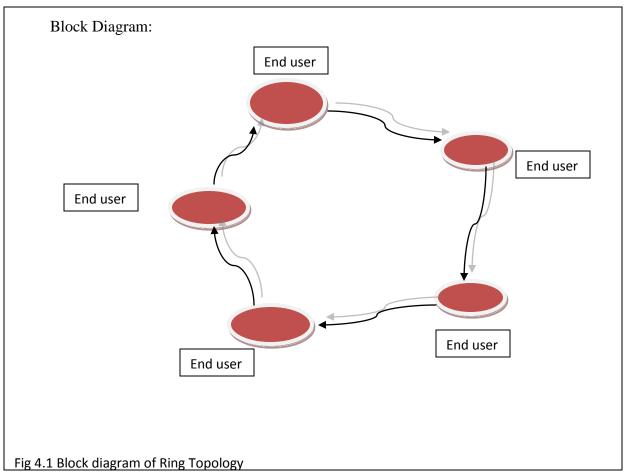

. The Ring Topology Consists of a group of end users, in which one end user can communicate with his next ad joint end users and this end users can communicate with next ad joint end users but it cannot communicate with any other end user.

Components Required:

- Zigbee modules(XBEE S1) 4
- Zigbee adaptor 4
- USB cable 4
- Computers (we need 4 USB ports, in same or different computers).

The steps to create a Ring Topology communication in XBEE module using 16-bit addressing are as follows:

Step 1: Connecting Zigbee to PC.

Make the connection between laptop and XBEE module using a USB cable as shown in figure.

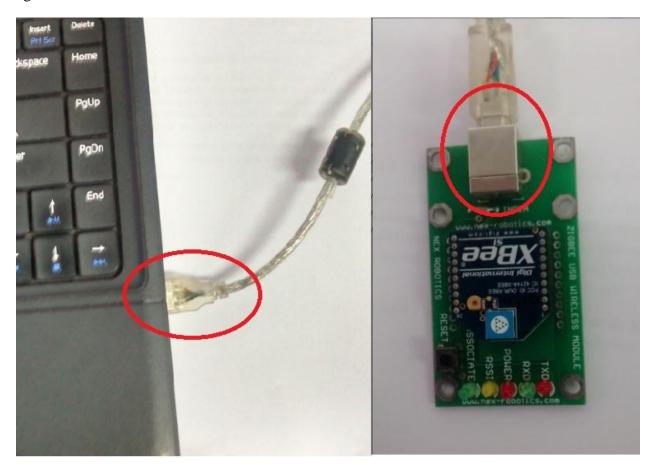


Figure 4.2 USB connections

The red Power LED in XBEE module must ON and green associate LED must start blinking.



Fig 4.3 verification through LEDs

Repeat the step 1 four times for four different modules.

Step 2: Launching X-CTU Software.

Launch X-CTU windows from shortcut icon on desktop or program files in start menu.

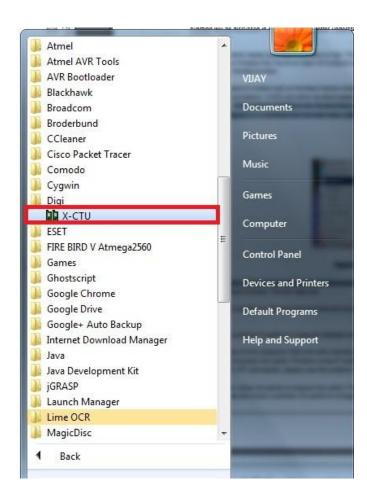




Fig 4.4 Launching of X-CTU

Do this for all four modules. Open multiple windows in same computer, one window for each module separately.


Step 3: Testing and Querying the Network by Serial number verification.

Notice the COM ports being displayed on the select COM port workspace. Test/Query each COM port individually in the windows opened previously.

The result of Test/Query must show serial numbers as shown in figure 2 if the connections are correct.

About	_ □ ×	
PC Settings Range Test Terminal Modern Configuration PC Settings Range Test Terminal Modern Configuration	PC Settings Range Test Terminal Modem Configuration	
Com Port Setup————————————————————————————————————		
Select Com Port Select Com Port USB Serial Port (COM19) Baud 9600 ▼ USB Serial Port (COM19) Baud Baud Select Com Port USB Serial Port (COM19) Select Com Port USB Serial Port (COM19) Baud USB Serial Port (COM19) Baud USB Serial Port (COM19) USB	9600 🕶	
USB Serial Port (CDM20)		
USB Serial Port (CDM21) USB Serial Port (COM22) Flow Control NONE USB Serial Port (COM21) USB Serial Port (COM22) Flow Control NONE	rol NONE 🔻	
Data Bits 8 👤 Data Bits	8 🔻	
Parity NONE Parity	NONE -	
Stop Bits 1 ▼	1 •	
J. Step Step	l	
Test / Query	est / Query	
Host Setup User Com Ports Network Interface Host Setup User Com Ports Network Interface		
API Reponse Timeout Reponse Timeout	- 1	
□ Enable API □ Enable API □ Timeout	1000	
Use escape characters (ATAP = 2)		
AT command Setup ASCII Hex ASCII Hex		
Command Character (CC) + 28 Command Character (CC) + 28		
Guard Time Refore (RT) 1000		
Guard Time Before (BT) 1000 Guard Time Before (BT) 1000		
Modem Flash Update Modem Flash Update		
□ No baud change □ No baud change		
₩ X-CTU - □ × ₩ X-CTU	_ 🗆 ×	
About	_ 🗆 🗙	
	×	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Com Port S	X	
About PC Settings Range Test Terminal Modem Configuration PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port		
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) Baud USB Serial Port (COM20)	9600	
About PC Settings Range Test Terminal Modem Configuration PC Settings Range Test Terminal Range Test Terminal Range Test T	9600	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM21)	9600	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM22) Flow Control NDNE About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM21) USB Serial Port (COM22)	aeoo •	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM21) USB Serial Port (COM22) Data Bits Parity NONE About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM21) USB Serial Port (COM22) Data Bits Parity	9600 T	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM20) Data Bits Parity NONE Stop Bits About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM2	9600 ▼ NONE ▼ NONE ▼	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20	9600 T	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM20) Data Bits Parity NONE Stop Bits About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM2	9600 ▼ NONE ▼ NONE ▼	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM22) Data Bits 8 Parity NONE Test / Query About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM19) USB Serial Port (COM21) USB Serial Port (COM22) Test / Query	9600 ▼ NONE ▼ NONE ▼	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM22) Data Bits Parity NONE Test / Query Host Setup User Com Ports Network Interface API Enable API Timeout About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM22) Flow Control NONE Parity Stop Bits Test / Query Host Setup User Com Ports Network Interface API Enable API Timeout	9600 ▼ NONE ▼ NONE ▼	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM21) USB Serial Port (COM21) USB Serial Port (COM22) Data Bits Parity NONE Test / Query Host Setup User Com Ports Network Interface API Reponse Timeout About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM19) USB Serial Port (COM21) USB Serial Port (COM21) USB Serial Port (COM22) Flow Control USB Serial Port (COM21) USB Serial Port (COM22) Flow Control USB Serial Port (COM22) Flow Control USB Serial Port (COM21) USB Serial Port (C	9600 V NONE V NONE V 1 V	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB	9600 V NONE V NONE V 1 V	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM22) Data Bits 8 Parity Stop Bits 1 Test / Query Host Setup User Com Ports Network Interface API	9600 V NONE V NONE V 1 V	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (CDM19) USB Serial Port (CDM19) USB Serial Port (CDM20) USB Serial Port (CDM21) USB Serial Port (CDM21) USB Serial Port (CDM21) USB Serial Port (CDM21) USB Serial Port (CDM22) Data Bits 8	9600 V NONE V NONE V 1 V	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (CDM19) USB Serial Port (CDM19) USB Serial Port (CDM20) USB Serial Port (CDM20) USB Serial Port (CDM21) USB Serial Port (CDM22) Data Bits 8	9600 V NONE V NONE V 1 V	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (COM19) USB Serial Port (COM20) USB Serial Port (COM21) USB Serial Port (COM22) USB Serial Port (COM21) USB Serial Port (COM21) USB Serial Port (COM22) USB Serial Port (COM22) USB Serial Port (COM22) USB Serial Port (COM21) USB Serial Port (COM22)	9600 V NONE V NONE V 1 V	
About PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (CDM19) USB Serial Port (CDM20) USB Serial Port (CDM21) USB Serial Port (CDM22) Data Bits Parity NDNE Test / Query Host Setup User Com Ports Network Interface API Enable API Use escape characters (ATAP = 2) AT command Setup ASCII Hex Command Character (CC) ABout PC Settings Range Test Terminal Modem Configuration Com Port Setup Select Com Port USB Serial Port (CDM19) USB Serial Port (CDM19) USB Serial Port (CDM20) USB Se	9600 V NONE V NONE V 1 V	

Fig 4.5 Test/Query

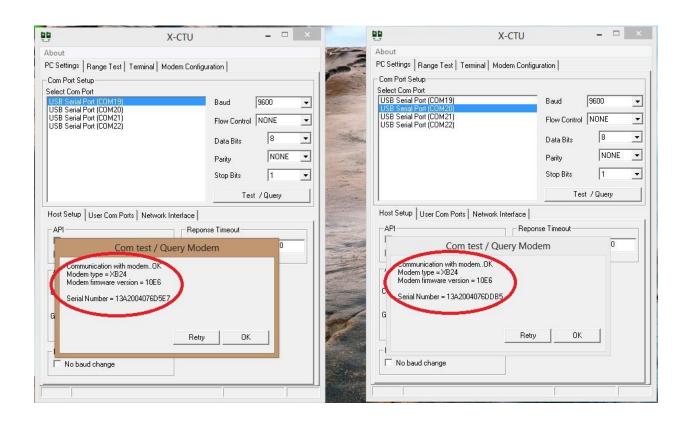

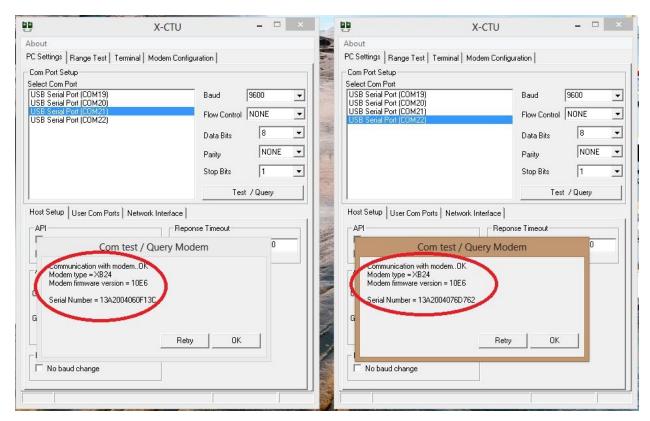


Fig 4.6 serial number verification


Serial Number:

A unique 64-bit IEEE source address is assigned at the factory and can be read with the SL (Serial Number Low) and SH (Serial Number High) commands. Short addressing must be configured manually. A module will use its unique 64-bit address as its Source Address if its MY (16-bit Source Address) value is "0xFFFF" or "0xFFFF".

The above figures are for two windows, whereas you'll have to do it for four windows. One window of one module each.

Step 4: Reading the module.

Open modem configuration tab on the X-CTU window and read the modem.

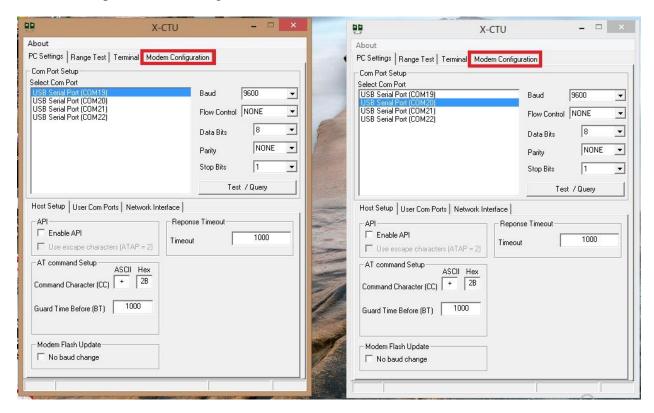

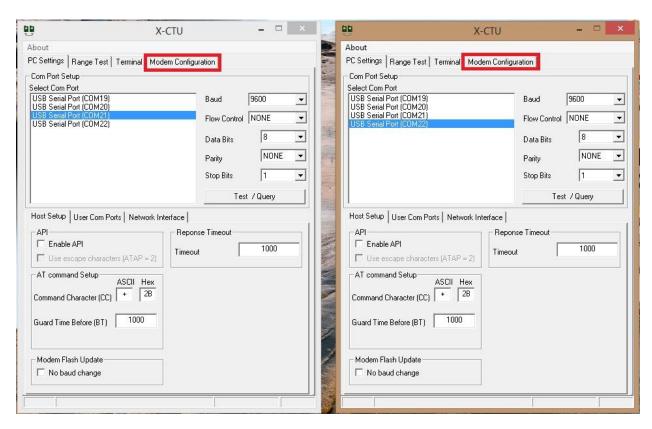
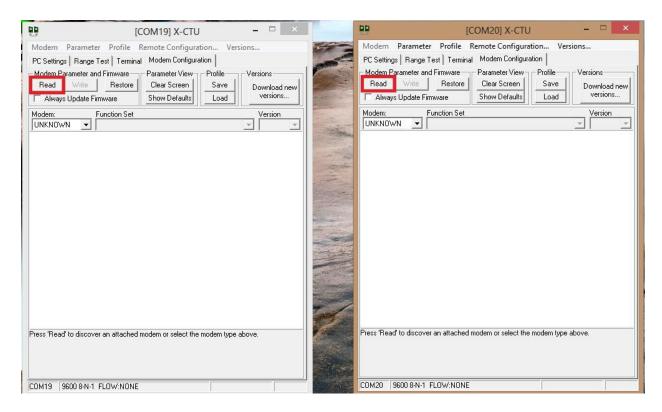


Fig 4.7 Modem Configuration



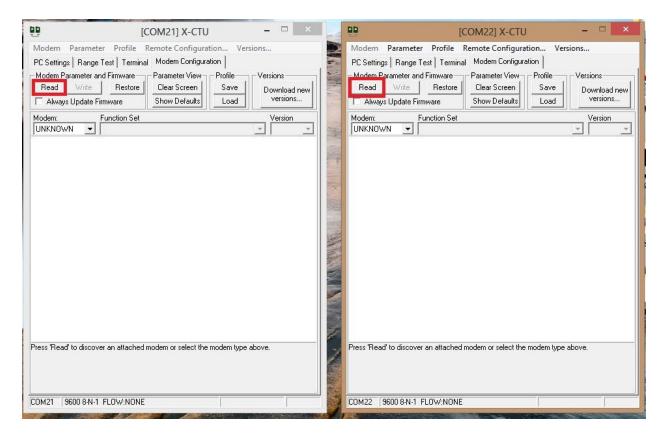


Fig 4.8 Reading the module

The X-CTU will read the pre-configuration of XBEE.

Step 5: Setting the Network Address.

In the workspace under Network & Security tab select following settings

X-CTU(window 1)	X-CTU(window 2)	X-CTU(window 3)	X-CTU(window 4)
CH-Channel = C	CH-Channel = C	CH-Channel = C	CH-Channel = C
PAN ID = 2222			
DH = 0	DH = 0	DH = 0	DH = 0
DL = 1	DL = 2	DL = 3	DL = 4
MY = 4	MY = 1	MY = 2	MY = 3

^{*}this is a sample address and can be varied.

- PAN IDs and Channel (CH) of all end users and server must same since they are operating in same network.
- Since we are using 16-bit addressing mode DH of all modules must be 0.
- DL of one end user should be MY (source address) of next ad joint end user.
- MY (source address) of every end users should be unique.

Note:

- When configured to operate in Ring topology Mode, set the destination addresses of the one zigbee as source of next zigbee and the destination of this next zigbee as source of zigbee after that zigbee.
- In the above sample address all are individual end users and no single server.
- The information transmitted from terminal of window 1 will be received in terminal of window 2 and information transmitted from terminal of window 2 will be received in terminal of window 3.

Key Terms:

- Channel(CH): 802.15.4 and Zigbee break the 2.4Ghz band into 16 channels. Parameter range for Xbee is 0x0B 0x1A.
- **Personal Area Network(PAN)** A data communication network that includes one or more End Devices and optionally a Coordinator.
- **PAN ID**: Each network is defined with a unique PAN identifier (PAN ID). This identifier is common among all devices of the same network. ZigBee devices are either preconfigured with a PAN ID to join, or they can discovery nearby networks and select a PAN ID to join. If multiple Zigbee networks are operating within range of each other, each should

have unique PAN ID.

Destination Address:

- O DH: Destination Address High. Set/Read the upper 32 bits of the 64-bit destination address. When combined with DL, it defines the destination address used for transmission. To transmit using a 16-bit address, set DH parameter to zero and DL less than 0xFFFF. 0x00000000000FFFF is the broadcast address for the PAN.
- o **DL: Destination Address Low**. Set/Read the lower 32 bits of the 64-bit destination address. When combined with DH, DL defines the destination address used for transmission. To transmit using a 16-bit address, set DH parameter to zero and DL less than 0xFFFF. 0x000000000000FFFF is the broadcast address for the PAN.

• Source Address:

- o **16-bit(MY):** Set/Read the RF module 16-bit source address. Set MY = 0xFFFF to disable reception of packets with 16-bit addresses
- o **64-bit:** 64-bit source address (serial number) and broadcast address (0x000000000000FFFF) is always enabled.
 - **SH: Serial Number High**. Read high 32 bits of the RF module's unique IEEE 64-bit address. 64-bit source address is always enabled.
 - **SL: Serial Number Low**. Read low 32 bits of the RF module's unique IEEE 64-bit address. 64-bit source address is always enabled.

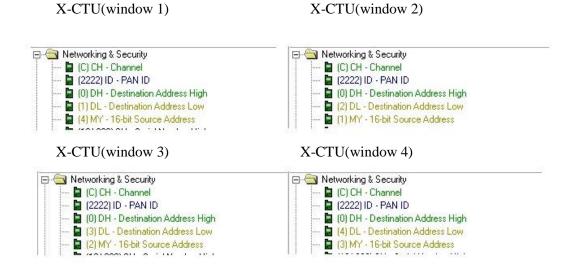


Fig 4.9 Network addressing

Step 6: Writing the module.

Write this configuration into the module by clicking on write option.

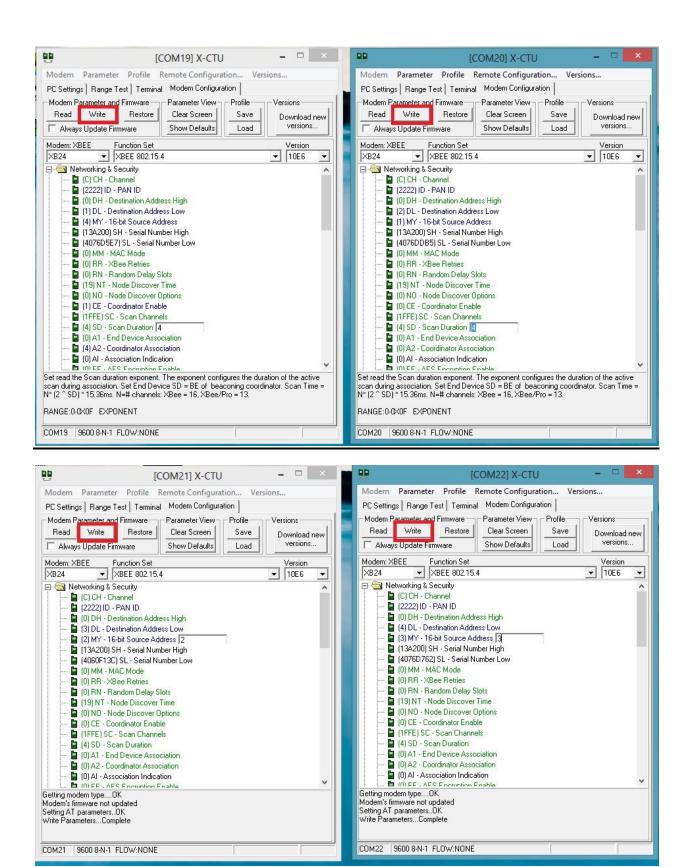


Fig 4.10 writing the module

Step 7: Verification of Ring Topology Network Configuration.

Go to terminal window and check if the transmission is a valid.

In Terminal Window you can transmit by typing in the workspace.

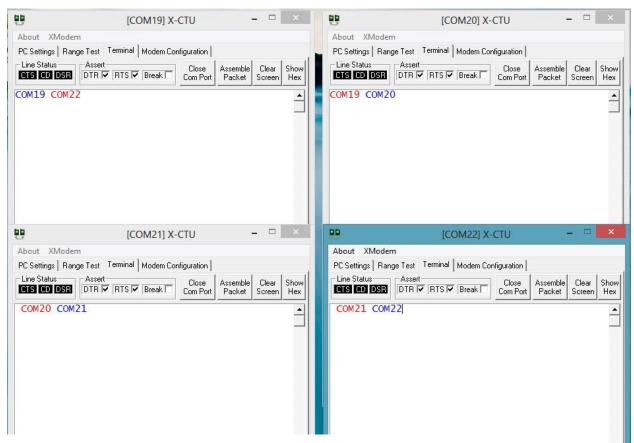


Fig 4.11 verification of Ring topology from terminal window

*In above fig. blue letters are manually written, while red letters are transmitted.

as it is as shown in fig 4.11: ❖ [com19] [com20][com21]and[com22] are end user. ❖ Data sent by first end user is received at next ad joint end user and data transmitted by second end users are only received by third end user. Data transmitted by one end user outside network are not received by any end user other than that ad joint end user. ❖ Message "com19" was sent by first end user and is received second end users [com20]. Message "com20" was sent by second end user and is received third end users [com21]. Message "com21" was sent by third end user and is received fourth end users [com22]. Message "com22" was sent by fourth end user and is received first end users [com19]. ❖ This is called 'Ring Topology'.