GigaDevice Semiconductor Inc.

GD32E230C-EVAL User Guide



Table of Contents

Ta	ble o	f Contents	1
Li	st of I	Figures	4
Li	st of T	Tables	5
1.	Sui	mmary	6
2.	Fur	nction Pin Assign	6
3.	Get	tting started	7
4.	Hai	rdware layout overview	7
	4.1.	Power supply	7
	4.2.	Boot option	7
	4.3.	LED	8
	4.4.	KEY	8
	4.5.	USART0	8
	4.6.	ADC	9
	4.7.	12S	9
	4.8.	I2C	9
	4.9.	QSPI-FLASH1	0
	4.10.	SPI-TFT LCD1	0
	4.11.	CMP1	0
	4.12.	IFRP1	1
	4.13.	GD-Link1	1
	4.14.	Extension 1	2
	4.15.	MCU 1	2
5.	Ro	utine use guide1	13
	5.1.	GPIO_Runing_Led1	
	5.1.		
	5.1.	.2. DEMO Running Result	3
	5.2.	GPIO_KeyBoard_Polling_mode1	
	5.2.	.1. DEMO Purpose	3



5.2.2.	DEMO Running Result	13
5.3. GPI	O_KeyBoard_Interrupt_mode	14
5.3.1.	DEMO Purpose	14
5.3.2.	DEMO Running Result	14
5.4. USA	ART Printf	14
5.4.1.	DEMO Purpose	
5.4.2.	DEMO Running Result	
	ART_HyperTerminal_Interrupt	
5.5.1.	DEMO Purpose	
5.5.2.	DEMO Running Result	15
5.6. USA	ART_DMA	15
5.6.1.	DEMO Purpose	15
5.6.2.	DEMO Running Result	15
5.7. ADC	C_Conversion_Triggered_By_Timer	16
5.7.1.	DEMO Purpose	
5.7.2.	DEMO Running Result	
F.0. Com		
5.8. Com 5.8.1.	nparator_Obtain_Brightness DEMO Purpose	
	•	
5.8.2.	DEMO Running Result	16
5.9. I2C_	_EEPROM	17
5.9.1.	DEMO Purpose	17
5.9.2.	DEMO Running Result	17
5.10. Q	SPI FLASH	18
5.10.1.	DEMO Purpose	18
5.10.2.	DEMO Running Result	
E 44 CI	ŭ	
	PI_TFT_LCD_Driver	
5.11.1.	DEMO Purpose	
5.11.2.	DEMO Running Result	18
5.12. I2	S_Audio_Player	20
5.12.1.	DEMO Purpose	20
5.12.2.	DEMO Running Result	20
5.13. R	CU_Clock_Out	20
5.13.1.	DEMO Purpose	
5.13.2.	DEMO Running Result	
E 4.4 DI	MU_sleep_wakeup	
5.14. PI 5.14.1.	DEMO Purpose	
5.14.1. 5.14.2.	•	
	DEMO Running Result	
5.15. R	TC_Calendar	21
5.15.1.	DEMO Purpose	21



ODOZEZOOO E VAL		Gigabevice
21	DEMO Running Result	5.15.2.
22	RInfrared_Transceiver	5.16. IRI
22	DEMO Purpose	5.16.1.
	DEMO Running Result	5.16.2.
22	IMER_Breath_LED	5.17. TIM
22	DEMO Purpose	5.17.1.
22	DEMO Running Result	5.17.2.
23	n history	6. Revision



List of Figures

Figure 4-1 Schematic diagram of power supply	
Figure 4-2 Schematic diagram of boot option	7
Figure 4-3 Schematic diagram of LED function	8
Figure 4-4 Schematic diagram of Key function	
Figure 4-5 Schematic diagram of USART0 function	8
Figure 4-6 Schematic diagram of ADC function	g
Figure 4-7 Schematic diagram of I2S function	
Figure 4-8 Schematic diagram of I2C function	
Figure 4-9 Schematic diagram of QSPI-FLASH function	
Figure 4-10 Schematic diagram of SPI-TFT LCD function	
Figure 4-11 Schematic diagram of CMP function	
Figure 4-12 Schematic diagram of IFRP function	
Figure 4-13 Schematic diagram of GD-Link function	
Figure 4-14 Schematic diagram of Extension Pin	
Figure 4-15 Schematic diagram of MCU Pin	



List of Tables

Table 2-1 Pin assignment	t
Table 4-1 Boot configuration	
Table 6-1 Revision history	



1. Summary

GD32E230C-EVAL evaluation board uses GD32E230C8T6 as the main controller. As a complete development platform of GD32E230 powered by ARM® Cortex™-M23 core, the board supports full range of peripherals. It uses mini-USB interface to supply 5V power. GD-Link, Reset, Boot, User button key, LED, I2C, I2S, USART, TFT-LCD, IFRP LED、IFRP Transceiver, RTC, SPI, ADC and Extension Pin are also included. This document details its hardware schematic and the relevant applications.

2. Function Pin Assign

Table 2-1 Pin assignment

Function	Pin	Description
	PA8	LED1
LED	PA11	LED2
LED	PA12	LED3
	PA15	LED4
RESET		K1-Reset
KEY	PA0	K2-Wakeup
KEY	PC13	K3-Tamper
ID.	PB4	IR_RX
IR	PB9	IR_TX
100	PB6	I2C0_SCL
I2C	PB7	I2C0_SDA
	PA4	I2S0_WS
I2S	PA5	I2S0_CK
125	PA7	I2S0_SD
	PA6	I2S0_MCK
LICARTO	PA9	USART0_TX
USART0	PA10	USART0_RX
	PB13	SPI1_SCK
	PB14	SPI1_MISO
	PB15	SPI1_MOSI
SPI	PB10	SPI1_IO2
581	PB11	SPI1_IO3
	PB12	SPIFlash_CS
	PB0	TFT_CS
	PB1	TFT_RESET
ADC	PA2	ADC_IN2
COMPARATOR	PA1	COMPO_INP



3. Getting started

The EVAL Board uses mini-USB connecter to get power, the hardware system power is +3.3V. A GD-Link on board is necessary in order to download and debug programs. Select the correct boot mode and then power on, the LEDPWR will turn on, which indicates that the power supply is OK.


There are Keil version and IAR version of all projects. Keil version of the projects are created based on Keil MDK-ARM 5.25 uVision5. IAR version of the projects are created based on IAR Embedded Workbench for ARM 8.32.1. During use, the following points should be noted:

- 1. If you use Keil uVision5 to open the project. In order to solve the "Device Missing (s)" problem, you can install GigaDevice.GD32E230_DFP.1.0.0.pack.
- 2. If you use IAR to open the project, install IAR_GD32E230_ADDON_1.0.0.exe to load the associated files.

4. Hardware layout overview

4.1. Power supply

Figure 4-1 Schematic diagram of power supply

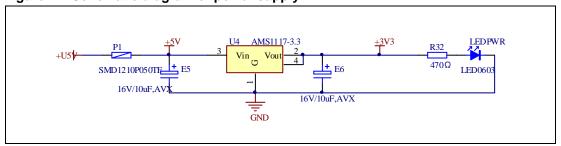

4.2. Boot option

Figure 4-2 Schematic diagram of boot option

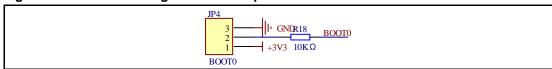



Table 4-1 Boot configuration

BOOT1	воото	Boot Mode
Default	2-3	User memory
Derault	1-2	System memory
Changed by ISP	1-2	SRAM memory




4.3. LED

Figure 4-3 Schematic diagram of LED function

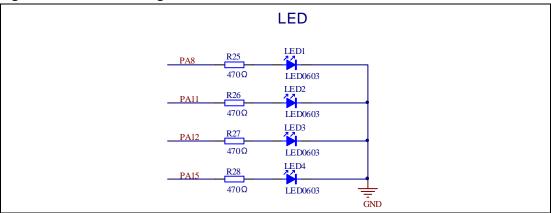


4.4. **KEY**

Figure 4-4 Schematic diagram of Key function

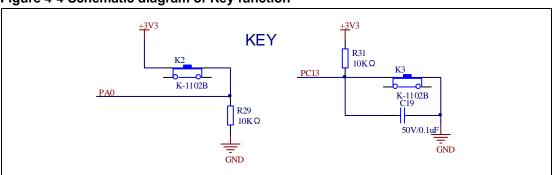

4.5. **USARTO**


Figure 4-5 Schematic diagram of USART0 function

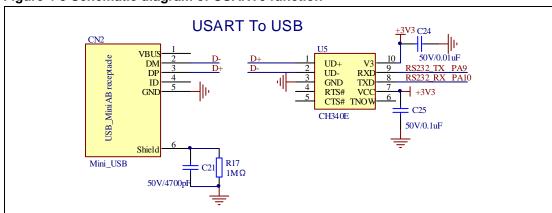




4.6. ADC

Figure 4-6 Schematic diagram of ADC function

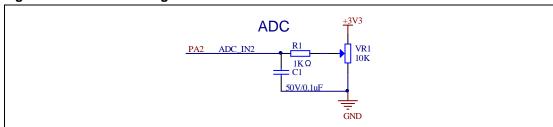


4.7. I2S

Figure 4-7 Schematic diagram of I2S function

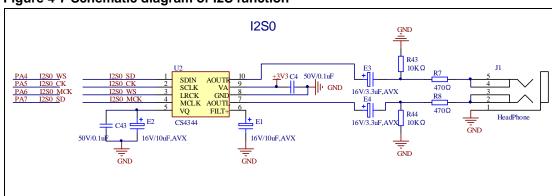

4.8. I2C


Figure 4-8 Schematic diagram of I2C function

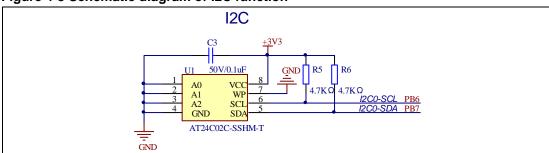




4.9. QSPI-FLASH

Figure 4-9 Schematic diagram of QSPI-FLASH function

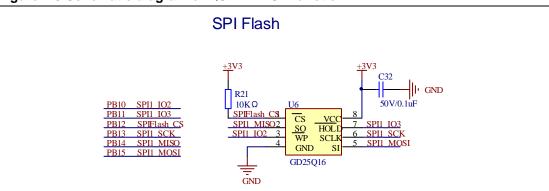


4.10. SPI-TFT LCD

Figure 4-10 Schematic diagram of SPI-TFT LCD function

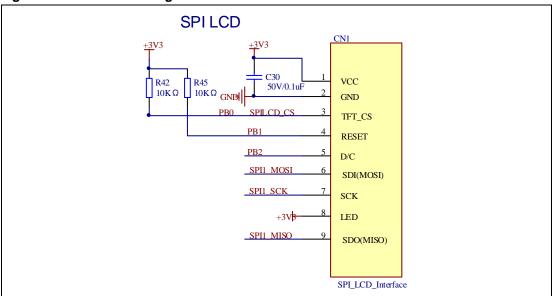

4.11. CMP


Figure 4-11 Schematic diagram of CMP function

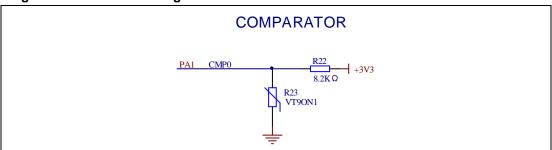




4.12. IFRP

Figure 4-12 Schematic diagram of IFRP function

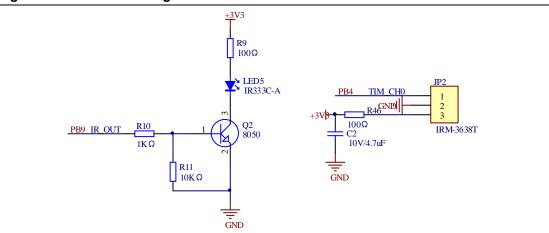

4.13. **GD-Link**


Figure 4-13 Schematic diagram of GD-Link function

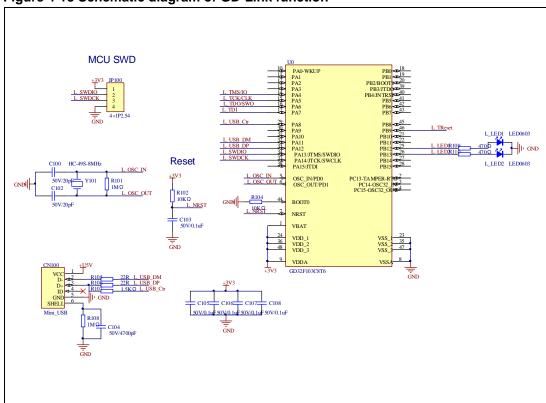




4.14. Extension

Figure 4-14 Schematic diagram of Extension Pin

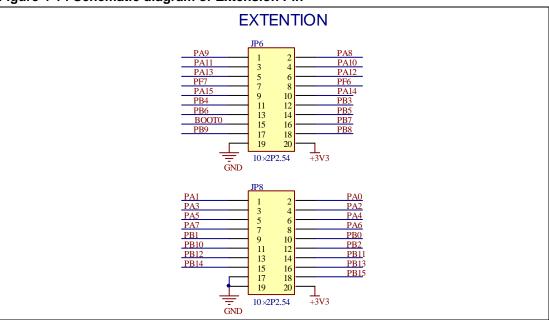

4.15. MCU

Figure 4-15 Schematic diagram of MCU Pin

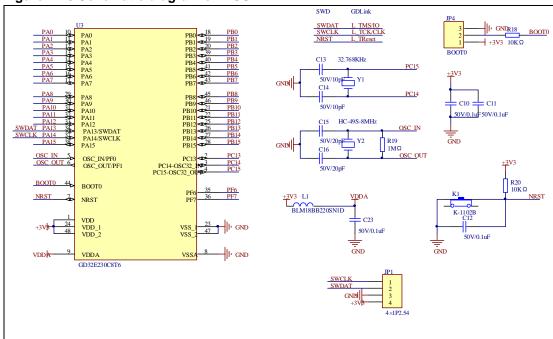



5. Routine use guide

5.1. **GPIO_Runing_Led**

5.1.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use GPIO for controlling the LED
- Learn to use SysTick to generate 1ms delay

GD32E230C-EVAL board has four LEDs. The LED1, LED2, LED3 and LED4 are controlled by GPIO. This demo will show how to light the LEDs.

5.1.2. **DEMO Running Result**

Download the program <01_GPIO_Runing_Led> to the EVAL board, four LEDs will turn on one by one from LED1 to LED4 every 200ms, and then turn off together. 200ms later, the four LEDs work like previous again.

5.2. **GPIO_KeyBoard_Polling_mode**

5.2.1. **DEMO Purpose**

This Demo includes the following functions of GD32 MCU:

- Learn to use GPIO control the LED and the KEY
- Learn to use SysTick to generate 1ms delay

GD32E230C-EVAL board has three keys and four LEDs. The three keys are Reset key, Tamper key and Wakeup key. The LED1, LED2, LED3 and LED4 are controlled by GPIO.

This demo will show how to use the Tamper key to control the LED2. When press down the Tamper Key, it will check the input value of the IO port. If the value is 0, wait for 50ms. Then check the input value of the IO port again. If the value is still 0, indicates that the button is pressed down successfully, and light the four LED2.

5.2.2. DEMO Running Result

Download the program <02_GPIO_KeyBoard_Polling_mode> to the EVAL board, When press down the Tamper Key, LED2 will be turned on. Press down the Tamper Key again, LED2 will be turned off.



5.3. **GPIO_KeyBoard_Interrupt_mode**

5.3.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use GPIO to control the LED and the KEY
- Learn to use EXTI to generate external interrupt

GD32E230C-EVAL board has three keys and four LEDs. The three keys are Reset key, Wakeup key and Tamper key. The LED1, LED2, LED3 and LED4 are controlled by GPIO.

This demo will show how to use EXTI interrupt line to control the LED2. When press down the Tamper Key, it will produce an interrupt. In the interrupt service function, the demo will toggle LED2.

5.3.2. DEMO Running Result

Download the program <03_GPIO_KeyBoard_Interrupt_mode> to the EVAL board, when press down the Tamper Key, LED2 will be turned on. Press down the Tamper Key again, LED2 will be turned off.

5.4. **USART_Printf**

5.4.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

■ Learn to retarget the C library printf function to the USART

5.4.2. DEMO Running Result

Download the program <04_USART_Printf> to the EVAL board and run. serial port will output "usart printf test example!".

The information via a serial port output as following.

usart printf test example!



5.5. USART_HyperTerminal_Interrupt

5.5.1. DEMO Purpose


This Demo includes the following functions of GD32 MCU:

■ Learn to use the EVAL_COM transmit and receive interrupts to communicate with the hyperterminal

5.5.2. DEMO Running Result

Download the program <05_USART_HyperTerminal_ Interrupt> to the EVAL board and run. Firstly, the COM sends the "USART interrupt test" to the hyperterminal and waits for receiving data from the hyperterminal that you must send. The string that you have sent is stored in the receiver_buffer array. The receive buffer have a receivesize=32 bytes as maximum. After that, compare rxcount with receivesize. If rxcount is same with receivesize, the COM sends the "USART receive successfully!" to the hyperterminal.

The information via a serial port output as following:

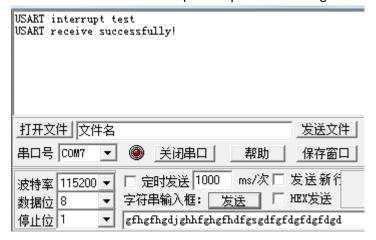

5.6. USART_DMA

5.6.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

Learn to use the COM transmit and receive using DMA

5.6.2. **DEMO Running Result**

Download the program < 06_USART_DMA > to the EVAL board and run. Firstly, the COM sends the "a usart dma function test example!

USART DMA receive and transmit example, please input 10 bytes:" to the hyperterminal and then loops waiting for receiving max 10 datas from the hyperterminal. Every time if the number of data you enter is equal to or more than 10 bytes, USART will send 10 bytes to the hyperterminal.



The information via a serial port output as following:

a usart dma function test example! USART DMA receive and transmit example, please input 10 bytes: gfhgfhgdgf

5.7. ADC_Conversion_Triggered_By_Timer

5.7.1. **DEMO Purpose**

This Demo includes the following functions of GD32 MCU:

- Learn to use ADC to convert analog to digital
- Learn to use TIMER to generate a channel compare event
- Learn to use LCD to show the ADC converted result

TIMERO CHO event triggers ADC conversion, the value displayed on the LCD corresponds to the ADC analog input, and changes with it. The converted data are moved to SRAM through DMA continuously.

5.7.2. DEMO Running Result

Download the program <07_ADC_conversion_triggered_by_timer> to the GD32E230C-EVAL board, adjust the adjustable potentiometer knob to change the analog input. The ADC, which is triggered by TIMER0 CH0 event, will convert the analog input, and you will see the result, a voltage curve, on the LCD. The curve adjusts with the analog input.

5.8. Comparator_Obtain_Brightness

5.8.1. **DEMO Purpose**

This Demo includes the following functions of GD32 MCU:

■ Learn to use comparator output compare result

There are two comparators on EVAL board and each comparator has two inputs. In this demo, one input is 3.3V, and the other one is the 1/4 reference voltage. Compare the two input voltages, the output is a high or low level, and the LED2 will performs the corresponding action.

5.8.2. **DEMO Running Result**

Download the program <08_Comparator_obtain_brightness> to the EVAL board,



comparing two input voltage, if output level is high, LED2 is off, otherwise LED2 is off.

5.9. I2C_EEPROM

5.9.1. **DEMO Purpose**

This Demo includes the following functions of GD32 MCU:

- Learn how to use the master transmitting mode of the I2C module
- Learn how to use the master receiving mode of the I2C module
- Learn to read and write the EEPROM with the I2C interface

5.9.2. **DEMO Running Result**

Download the program <09_I2C_EEPROM> to the EVAL board and run. Connect serial cable to COM, and open the HyperTerminal to show the print message.

Firstly, the data of 256 bytes will be written to the EEPROM from the address 0x00 and printed by the serial port. Then, reading the EEPROM from address 0x00 for 256 bytes and the result will be printed. Finally, compare the data that were written to the EEPROM and the data that were read from the EEPROM. If they are the same, the serial port will output "I2C-AT24C02 test passed!" and the four LEDs lights flashing, otherwise the serial port will output "Err: data read and write aren't matching." and all the four LEDs light.

The output information via the serial port is as following.



```
I2C-24C02 configured.
The I2CO is hardware interface
The speed is 400000
AT24CO2 writing
0x00 0x01 0x02 0x03 0x04 0x05 0x06 0x07 0x08 0x09 0x0A 0x0B 0x0C 0x0D 0x0E 0x0F
0x10 0x11 0x12
               0x13
                    0x14 0x15 0x16 0x17
                                        0x18 0x19
                                                  Ox1A Ox1B Ox1C
                                                                 0x1D
0x20 0x21 0x22 0x23
                    0x24 0x25
                              0x26
                                   0x27
                                        0x28 0x29 0x2A 0x2B 0x2C
                                                                 0x2D 0x2E
0x30 0x31 0x32
                    0x34 0x35
                                   0x37
               0x33
                              0x36
                                        0x38 0x39
                                                  Ox3A Ox3B Ox3C
                                                                 Ox3D Ox3E
0x48 0x49 0x4A 0x4B 0x4C
                                                                 Ox4D Ox4E Ox4E
0x50 0x51
         0x52 \ 0x53
                    0x54 0x55
                              0x56
                                   0x57
                                        0x58 \ 0x59
                                                  0x5A 0x5B 0x5C
                                                                 0x5D 0x5E
                                                                            0x5F
         0x62
               0x63
                    0x64
                         0x65
                              0x66
                                   0x67
                                        0x68
                                                  0x6A 0x6B 0x6C
0x60
     0x61
                                             0x69
                                                                 0x6D
                                                                      0x6E
0x70 0x71 0x72 0x73
                    0x74 0x75
                              0x76
                                   0x77
                                        0x78 0x79
                                                  Ox7A Ox7B Ox7C
                                                                 0x7D 0x7E
    0x81 0x82
               0x83
                    0x84 0x85
                                   0x87
                                        0x88 0x89
                                                  Ox8A Ox8B Ox8C
0x80
                              0x86
                                                                 Ox8D Ox8E
                                                                            0x8F
0x90 0x91 0x92 0x93
                    0x94 0x95
                              0x96
                                   0x97
                                        0x98 0x99
                                                  Ox9A Ox9B Ox9C
                                                                 Ox9D Ox9E
                                                                            0x9F
0xA0
    0xA1
         0xA2 0xA3
                    0xA4 0xA5
                              0xA6
                                   0xA7
                                        OxA8 OxA9
                                                  OxAA OxAB OxAC
                                                                 OxAD OxAE
                                                                            0xAF
     0xB1
         0xB2
               0xB3
                    0xB4 0xB5
                              0xB6
                                   0xB7
                                        0xB8
                                             0xB9
                                                  OxBA OxBB OxBC
                                                                 OxBD
                                                                      OxBE
0xC0 0xC1 0xC2 0xC3
                    0xC4 0xC5
                              0xC6
                                   0xC7
                                        0xC8 0xC9 0xCA 0xCB 0xCC
                                                                 OxCD OxCE
OxDO OxD1 OxD2 OxD3 OxD4 OxD5 OxD6
                                   0xD7
                                        OxD8 OxD9 OxDA OxDB OxDC
                                                                 OxDD OxDE
                                                                            OxDF
OxEO OxE1 OxE2 OxE3 OxE4 OxE5 OxE6
                                   OxE7 OxE8 OxE9 OxEA OxEB OxEC
                                                                 OxED OxEE
                                                                            0xEF
OxFO OxF1 OxF2 OxF3 OxF4 OxF5 OxF6
                                   OxF7 OxF8 OxF9 OxFA OxFB OxFC
                                                                 OxFD OxFE OxFF
AT24CO2 reading.
0x00 0x01 0x02 0x03 0x04 0x05 0x06 0x07 0x08 0x09 0x0A 0x0B 0x0C 0x0D 0x0E 0x0F
0x10 0x11 0x12 0x13 0x14 0x15 0x16 0x17 0x18 0x19 0x1A 0x1B 0x1C
                                                                 Ox1D Ox1E
0x20 0x21 0x22 0x23
                    0x24 0x25
                              0x26 0x27
                                        0x28 0x29 0x2A 0x2B 0x2C
                                                                 0x2D 0x2E
                                                                            0x2F
0x30 0x31 0x32 0x33 0x34 0x35 0x36
                                   0x37
                                        0x38 0x39 0x3A 0x3B 0x3C
                                                                 Ox3D Ox3E
                                                                            0x3F
     0x41
         0x42
               0x43
                    0x44 0x45
                              0x46
                                   0x47
                                        0x48
                                             0x49
                                                  Ox4A Ox4B Ox4C
                                                                  0x4D
                                                                      0x4E
0x50 0x51 0x52 0x53
                    0x54 0x55 0x56
                                   0x57
                                        0x58 0x59
                                                  0x5A 0x5B 0x5C
                                                                 0x5D 0x5E
                                                                            0x5F
         0x62 0x63
                    0x64 \ 0x65
                              0x66
                                   0x67
                                        0x68 0x69
Nx60 0x61
                                                  Ox64 Ox6B Ox6C
                                                                 Ox6D Ox6E
                                                                            0x6F
0x70
     0x71
         0x72
               0x73
                    0x74
                         0x75
                              0x76
                                   0x77
                                        0x78 \ 0x79
                                                  0x7A 0x7B 0x7C
                                                                 0x7D
                                                                      0x7E
                                                                            0x7F
    0x81
         0x82 0x83 0x84 0x85
                              0x86
                                   0x87
                                        0x88 0x89
                                                  Ox8A Ox8B Ox8C
0x80
                                                                 Ox8D Ox8E
     0x91
         0x92
               0x93
                    0x94
                         0x95
                              0x96
                                   0x97
                                        0x98
                                             0x99
                                                  Ox9A Ox9B Ox9C
                                                                  0x9D
                                                                      0x9E
0xA0
    0xA1 0xA2 0xA3
                    0xA4 0xA5
                              0xA6
                                   0xA7
                                        0xA8 0xA9
                                                  OxAA OxAB OxAC
                                                                 OxAD OxAE
                                                                            0xAF
                                        0xB8 0xB9
|OxBO OxB1 OxB2 OxB3
                    0xB4 0xB5
                              0xB6
                                   0xB7
                                                  OxBA OxBB OxBC
                                                                 OxBD OxBE
                                                                            \Omega_X RF
                                                                            OxCF
    0xC1
         0xC2 0xC3
                    0xC4 0xC5
                              0xC6
                                   0xC7
                                        0xC8 0xC9
                                                  OxCA OxCB OxCC
                                                                 0xCD
                                                                      OxCE
OxDO OxD1 OxD2 OxD3 OxD4 OxD5 OxD6
                                   0xD7
                                        OxD8 OxD9 OxDA OxDB OxDC
                                                                 OxDD OxDE
OxEO OxE1 OxE2 OxE3 OxE4 OxE5 OxE6
                                   0xE7
                                        OxE8 OxE9 OxEA OxEB OxEC
                                                                 OxED OxEE
OxFO OxF1 OxF2 OxF3 OxF4 OxF5 OxF6 OxF7 OxF8 OxF9 OxFA OxFB OxFC OxFD OxFE OxFF
|I2C-AT24C02 test passed!
```

5.10. QSPI_FLASH

5.10.1. DEMO Purpose

This demo includes the following functions of GD32 MCU:

Learn to use the Quad-SPI mode of SPI unit to read and write NOR Flash with the SPI interface

5.10.2. DEMO Running Result

The computer serial port line connected to the COM port of development board, set the baud rate of HyperTerminal software to 115200, 8 bits data bit, 1 bit stop bit.

Download the program <10_QSPI_FLASH> to the EVAL board, the HyperTerminal software can observe the operation condition and will display the ID of the flash, 256 bytes data which are written to and read from flash. Compare the data that were written to the flash and the data that were read from the flash. If they are the same, the serial port will output "SPI-GD25Q16 Test Passed!", otherwise, the serial port will output "Err: Data Read and Write aren't Matching.". At last, turn on and off the LEDs one by one. The following is the experimental results.



```
|GD32E230C_EVAL_1.0 System is Starting up...
GD32E230C_EVAL_1.0 Flash:64K
GD32E230C_EVAL_1.0 SPI Flash:GD25Q16 configured...
The Flash_ID:0xC84015
|Write to tx_buffer:
0x00 0x01 0x02 0x03 0x04 0x05 0x06 0x07 0x08 0x09 0x0A 0x0B 0x0C 0x0D 0x0E 0x0F 0x10
0x11 0x12 0x13 0x14 0x15 0x16 0x17 0x18 0x19 0x1A 0x1B 0x1C 0x1D 0x1E 0x1F 0x20 0x21
|0x22 0x23 0x24 0x25 0x26 0x27 0x28 0x29 0x2A 0x2B 0x2C 0x2D 0x2E 0x2F 0x30 0x31 0x32
l0x33 0x34 0x35
              0x36 0x37 0x38 0x39 0x3A 0x3B 0x3C 0x3D 0x3E 0x3F 0x40 0x41 0x42 0x43
0x44 0x45 0x46
              0x47
                  0x48 0x49 0x4A 0x4B 0x4C
                                          Ox4D Ox4E Ox4F
                                                        0x50 0x51
                                                                 0x52
                                                                      0x53 0x54
0x55 0x56 0x57
              0x58 0x59 0x5A 0x5B 0x5C 0x5D 0x5E 0x5F 0x60 0x61 0x62 0x63 0x64 0x65
0x66 0x67 0x68
              0x69 0x6A 0x6B 0x6C
                                0x6D 0x6E 0x6F 0x70 0x71 0x72
                                                            0x73 0x74 0x75
                                                                           0x76
|0x77 0x78 0x79
              Ox7A Ox7B Ox7C
                            0x7D
                                0x7E
                                     0x7F
                                          0x80 0x81 0x82
                                                        0x83 0x84 0x85
                                                                      0x86
                                                                           0x87
0x88 0x89 0x8A
              Ox8B Ox8C Ox8D Ox8E Ox8F
                                     0x90
                                          0x91 0x92 0x93 0x94 0x95
                                                                 0x96
                                                                      0x97
                                                                           0x98
                                              0xA3
                  Ox9D Ox9E
    Ox9A Ox9B
              0x9C
                            0x9F
                                0xA0
                                     0xA1
                                          0xA2
                                                   0xA4 0xA5
                                                            0xA6
                                                                 0xA7
                                                                      0xA8
OxAA OxAB OxAC
              OxAD OxAE OxAF
                            OxBO OxB1 OxB2 OxB3 OxB4 OxB5 OxB6 OxB7 OxB8 OxB9 OxBA
OxBB OxBC OxBD OxBE OxBF OxCO OxC1 OxC2
                                     0xC3 0xC4 0xC5
                                                   0xC6 0xC7
                                                            0xC8 0xC9 0xCA 0xCB
OxCC OxCD OxCE OxCF OxDO OxD1 OxD2 OxD3 OxD4 OxD5 OxD6 OxD7 OxD8 OxD9 OxDA OxDB OxDC
OxDD OxDE OxDF OxEO OxE1 OxE2 OxE3 OxE4 OxE5 OxE6 OxE7 OxE8 OxE9 OxEA OxEB OxEC OxED
OXEE OXEF OXFO OXF1 OXF2 OXF3 OXF4 OXF5 OXF6 OXF7 OXF8 OXF9 OXFA OXFB OXFC OXFD OXFE
0xFF
Read from rx_buffer:
0x00 0x01 0x02 0x03 0x04 0x05 0x06 0x07 0x08 0x09 0x0A 0x0B 0x0C 0x0D 0x0E 0x0F 0x10
0x11 0x12 0x13
              0x14 0x15 0x16
                            0x17
                                0x18 0x19 0x1A 0x1B 0x1C
                                                        Ox1D Ox1E Ox1F
                                                                      0x20 0x21
|0x22 0x23 0x24 0x25 0x26 0x27
                            0x28 0x29 0x2A 0x2B 0x2C 0x2D 0x2E 0x2F 0x30 0x31 0x32
l0x33 0x34 0x35
              0x36 0x37 0x38
                            0x39 0x3A 0x3B 0x3C
                                              Ox3D Ox3E Ox3F
                                                            0x40 0x41 0x42 0x43
0x44 0x45 0x46
              0x47 0x48 0x49 0x4A 0x4B 0x4C
                                          Ox4D Ox4E Ox4F
                                                        0x50 0x51 0x52
                                                                      0x53 0x54
              0x58 0x59 0x5A 0x5B 0x5C 0x5D
                                          0x5E 0x5F 0x60 0x61 0x62 0x63 0x64 0x65
0x55 0x56 0x57
0x66 0x67 0x68
              0x69 0x6A 0x6B 0x6C
                                0x6D 0x6E
                                          0x6F
                                              0x70 0x71 0x72
                                                            0x73 0x74 0x75
                                                                           0x76
l0x77 0x78 0x79
             0x7A 0x7B 0x7C
                            0x7D 0x7E 0x7F
                                          0x80 0x81 0x82 0x83 0x84 0x85 0x86 0x87
0x96
                                                                      0x97
                                                                           0x98
Ox99 Ox9A Ox9B
              Ox9C Ox9D Ox9E
                            0x9F
                                OxAO OxA1
                                          0xA2 0xA3 0xA4
                                                        0xA5 0xA6
                                                                 0xA7
                                                                      OxA8 OxA9
OxAA OxAB OxAC OxAD OxAE OxAF OxBO OxB1 OxB2 OxB3 OxB4 OxB5 OxB6 OxB7 OxB8 OxB9 OxBA
OxBB OxBC OxBD OxBE OxBF OxCO OxC1 OxC2 OxC3 OxC4 OxC5 OxC6 OxC7 OxC8 OxC9 OxCA OxCB
OxCC OxCD OxCE OxCF OxDO OxD1 OxD2 OxD3 OxD4 OxD5 OxD6 OxD7 OxD8 OxD9 OxDA OxDB OxDC
OxDD OxDE OxDF OxEO OxE1 OxE2 OxE3 OxE4 OxE5 OxE6 OxE7 OxE8 OxE9 OxEA OxEB OxEC OxED
OXEE OXEF OXFO OXF1 OXF2 OXF3 OXF4 OXF5 OXF6 OXF7 OXF8 OXF9 OXFA OXFB OXFC OXFD OXFE
lo_{\mathbf{x}}FF
SPI-GD25Q16 Test Passed!
```

5.11. SPI_TFT_LCD_Driver

5.11.1. DEMO Purpose

This Demo includes the following function of GD32 MCU:

Learn how to use SPI to drive TFT LCD screen and display

GD32E230C-EVAL board has a TFT LCD screen which supports SPI interface. In this demo, tests of font, number, draw and color are displayed on the LCD screen respectively.

5.11.2. DEMO Running Result

Download the program <11_SPI_TFT_LCD_Driver> to the EVAL board. All the LEDs are turned on and then turned off for test. After that, the LCD screen on the board will display the GUI tests in infinite loop.





5.12. I2S_Audio_Player

5.12.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

■ Learn to use I2S module to output audio file

GD32E230C-EVAL board integrates the I2S (Inter-IC Sound) module, and the module can communicate with external devices using the I2S audio protocol. This Demo mainly shows how to use the I2S interface of the board for audio output.

5.12.2. **DEMO Running Result**

Download the program <12_I2S_Audio_Player>. After downloading the program, insert the earphone into the audio port J1, then listen to the audio file.

5.13. RCU_Clock_Out

5.13.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use GPIO control the LED
- Learn to use EXTI to generate external interrupt
- Learn to use the clock output function of RCU
- Learn to communicate with PC by USART



5.13.2. DEMO Running Result

Download the program <13_RCU_Clock_Out> to the EVAL board and run. Connect serial cable to EVAL_COM, open the HyperTerminal. When the program is running, HyperTerminal will display the initial information. Then user can choose the type of the output clock by pressing the Tamper button. After pressing, the LED will be lit in turn and HyperTerminal will display which mode be selected. The frequency of the output clock can be observed through the oscilloscope by PA8 pin.

Information via a serial port output as following:

/====== Gigadevice Clock output Demo =======/
press tamper key to select clock output source
CK_OUT: system clock
CK_OUT: IRC8M
CK_OUT: IRC28M
CK_OUT: IRC40K
CK_OUT: LXTAL
CK_OUT: HXTAL
CK_OUT: PLL/2

5.14. PMU_sleep_wakeup

5.14.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

Learn to use the USART receive interrupt to wake up the PMU from sleep mode

5.14.2. DEMO Running Result

Download the program < 14_PMU_sleep_wakeup > to the EVAL board, connect serial cable to EVAL_COM. After power-on, all the LEDs are off. The MCU will enter sleep mode and the software stop running. When the USART0 receives a byte of data from the HyperTerminal, the MCU will wake up from a receive interrupt. And all the LEDs will flash together.

5.15. RTC_Calendar

5.15.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use RTC module to implement calendar function
- Learn to use LCD module to display the time of calendar

5.15.2. DEMO Running Result

Download the program <15_RTC_Calendar> to the EVAL board and run. When the program is running, the four LEDs, LED1 to LED4 turn on, then turn off. And then the



LCD prints out the information of the board, and the calendar. When you press the Wakeup key, the time will be configured to 2018-05-13, 12:00:00.

5.16. IRInfrared_Transceiver

5.16.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use general timer output PWM wave
- Learn to use general timer generated update interrupt
- Learn to use general timer capture interrupt
- Learn to use general timer TIMER15 and TIMER16 implement Infrared function

5.16.2. **DEMO Running Result**

Download the program <16_IRInfrared_Transceiver> to the EVAL board and run. When the program is running, if the infrared receiver received data is correct, LED1, LED2, LED3, LED4 light in turn, otherwise LED1, LED2, LED3, LED4 toggle together.

5.17. TIMER_Breath_LED

5.17.1. DEMO Purpose

This Demo includes the following functions of GD32 MCU:

- Learn to use Timer output PWM wave
- Learn to update channel value

5.17.2. **DEMO Running Result**

Download the program <17_TIMER_Breath_LED> to the GD32E230C-EVAL board and run. PA8 should not be reused by other peripherals.

When the program is running, you can see LED1 lighting from dark to bright gradually and then gradually darken, ad infinitum, just like breathing as rhythm.



6. Revision history

Table 6-1 Revision history

Revision No.	Description	Date
1.0	Initial Release	Nov. 1th, 2018



Important Notice

This document is the property of GigaDevice Semiconductor Inc. and its subsidiaries (the "Company"). This document, including any product of the Company described in this document (the "Product"), is owned by the Company under the intellectual property laws and treaties of the People's Republic of China and other jurisdictions worldwide. The Company reserves all rights under such laws and treaties and does not grant any license under its patents, copyrights, trademarks, or other intellectual property rights. The names and brands of third party referred thereto (if any) are the property of their respective owner and referred to for identification purposes only.

The Company makes no warranty of any kind, express or implied, with regard to this document or any Product, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The Company does not assume any liability arising out of the application or use of any Product described in this document. Any information provided in this document is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Except for customized products which has been expressly identified in the applicable agreement, the Products are designed, developed, and/or manufactured for ordinary business, industrial, personal, and/or household applications only. The Products are not designed, intended, or authorized for use as components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, atomic energy control instruments, combustion control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or Product could cause personal injury, death, property or environmental damage ("Unintended Uses"). Customers shall take any and all actions to ensure using and selling the Products in accordance with the applicable laws and regulations. The Company is not liable, in whole or in part, and customers shall and hereby do release the Company as well as it's suppliers and/or distributors from any claim, damage, or other liability arising from or related to all Unintended Uses of the Products. Customers shall indemnify and hold the Company as well as it's suppliers and/or distributors harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of the Products.

Information in this document is provided solely in connection with the Products. The Company reserves the right to make changes, corrections, modifications or improvements to this document and Products and services described herein at any time, without notice.

© 2018 GigaDevice – All rights reserved