			-		TCH & DEVI	CES Corporation
RoHS D	irective S	Support		Dec. 8. 2017 H. Kanemoto	Checked By Dec. 8. 2017 K. Fujiwara	Approved By Dec. 8. 2017 Y. Kuramitsu
r Reference						
		Product	Specific	cations		
	Item Name	Vibration	Sensor			
	Model _	D7S-A000	01			
No. in the Control of		0				
em Name:	art Number for (Customer				
tem Name: tem Number:					Suhmi	tted Stamp
tem Name: tem Number:	art Number for (Submi	tted Stamp
tem Name: tem Number:						tted Stamp
tem Name: tem Number:						ndled By
tem Name: tem Number:					Har	ndled By ution Copies

OMRON

Product Specifications

Item Name: Vibration Sensor

Model: D7S-A0001

1. Model

D7S-A0001

2. Functions

The D7S provides the following functions.

(a) Basic Functions

When an earthquake occurs with a seismic intensity equivalent to 5 Upper or higher on the JMA Seismic Intensity Scale, the D7S will activate the shutoff output to notify the user that an earthquake has occurred. (The basic functions can be used without using communications.)

(b) Communications

The D7S is equipped with I2C communications to allow the user to acquire and set the following information.

- SI values of the past five earthquakes that occurred
- ② Peak acceleration of the past five earthquakes that occurred
- ③ Execute self-diagnostic instructions and get the results
- 4 Switch to Initial Installation Mode via communications

3. Purpose

Vibration Sensor


4. Appearance

1) Package: Surface-mounting

2) Outline Drawing: Drawing No. 9499978-7


3) Taping and Packaging Outline Drawing: Drawing No. 9499980-9

4) Terminal Arrangement (Top View):

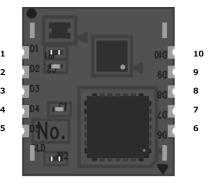


	Signal	Function	Direction	Description
1	VCC	Power supply voltage	-	
2	INT1	Shutoff output	OUT	An open-drain output. Goes active (ON) when the shutoff judgment condition and collapse detection condition are met.
3	INT2	Processing notification output	OUT	An open-drain output. Goes active (ON) during earthquake calculations, offset acquisition, and self-diagnostic processing.
4	SCL	I ² C clock	IN	Pull up the voltage to VCC even when you do not use I ² C.
5	SDA	I ² C data	IN/OUT	Pull up the voltage to VCC even when you do not use I ² C.
6	GND	Power supply ground	-	
7	SETTING	Initial setting input	IN	Changes the Sensor to Initial Installation Mode for an input from an external device. Normal Mode: High Initial Installation Mode: Low
8	NC	Not connected	-	Completely floating and cannot be connected to another line.
9	VCC	Power supply voltage	-	
10	GND	Power supply ground	-	

5. Block Diagram



6. Recommended Circuit Diagram

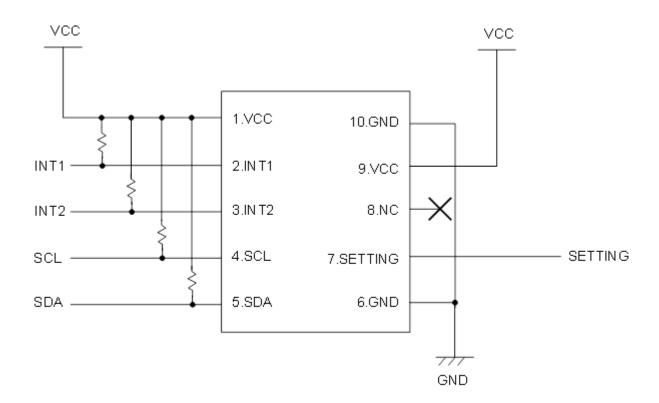


Note: Regardless of whether or not you are using I^2C , pull up pins 4 and 5 to Vcc with 2.2 to 10 k Ω resistors.

7. Recommended Mounting Pattern

Recommended Mounting Conditions

Peak Mounting Temperature: 245°C min. (260°C max.)

Reflow Time: 64 to 80 s (220°C) Reflow Repetitions: Up to 2 times

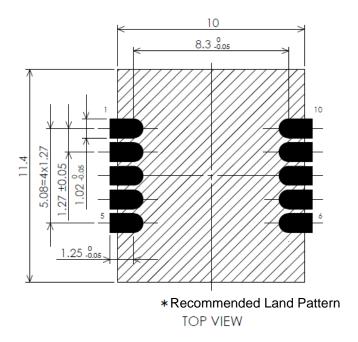

* Mounting other components or placing wiring patterns in the area marked with diagonal lines is prohibited.

Also take care so that foreign material does not become stuck under the chip in the area marked with diagonal lines.

8. Ratings:

(1) Absolute Maximum Ratings

Item	Symbol	Min.	Max.	Unit
Power Supply Voltage	Vcc	-0.3	6.0	V
I/O Terminals	Vin	-0.3	6.0	V

(2) Electrical Characteristics

Item	Symbol	Min.	Max.	Unit
Power Supply Voltage	Vcc	2.1	5.5	V
Current Consumption at Standby	Is	-	90	uA
Average Current Consumption during Processing	lw	-	300	uA
Terminal Input Voltage Range	Vin	-0.3	5.5	V
Sink Current (INT1 and INT2)	Is	-	16	mA

(3) I²C Digital Characteristics

 $(Vcc = 2.1 \text{ to } 5.5 \text{ V and Ta} = 25^{\circ}\text{C} \text{ unless otherwise specified.})$

Item	Symbol	Min.	Тур.	Max.	Unit	Remarks
Input Voltage Range	Vin	-0.3	-	5.5	V	All input and output terminals.
Digital Input Low Voltage	Vil	-	-	0.6	V	
Digital Input High Voltage	Vih	1.4	-	-	V	
Pull-up Resistor	Rpullup	2.2		10	kΩ	Recommended value for external resistor.

(4) Environmental Performance

Λ	
<u>A1\</u>	

Item	Symbol	Min.	Тур.	Max.	Unit	Remarks
Operating	Topr	-30	-	70	°C	With no condensation
Temperature						or icing.
Storage	Tstr		-		°C	With no condensation
Temperature						or icing.
Unopened		0		40		
After opening		0		30		
Ambient	Hopr	25	-	95	%RH	With no condensation
Humidity						or icing.
Storage	Hstr		-		%RH	With no condensation
Humidity						or icing.
Unopened		5		90		
After opening		5		10		
Mounting Angle	θ	-5	0	+5	Degree	-



(5)Humidity control standard

TYPE D7S humidity management standards are as follows.

- Storage condition unopened : 1 year in the condition temperature of 40 degrees C or less and a humidity of 90% or less.
- Storage condition after opening: Please keep in a dry box with humidity less than 10%.
- MSL 4: Please complete the mounting within 72 hours in an environment with a temperature of 30 degrees C or less and a humidity of 60% or less.
- Baking condition: When type D7S is left over 72hours, with temperature of 30 degrees C or less and humidity of 60% or less, it can recover the reflow life to do the low temperature baking at 40 degrees C 5% RH. The baking time is 13 days.

9. Sensor Characteristics

(Vcc = 3.0 V and Ta = 25°C unless otherwise specified.)

Item	Min.	Тур.	Max.	Unit	Remarks
Vibration Output Specification	waveforms wave of 25 s, 0.5 s, or sine wave of 0.3 s, 0.5 s	0.7 s. Not ac of 80 gal and , or 0.7 s or	by a sine period of 0.3 ctivated by a d a period of		Japan Electrical Wiring Devices and Equipment Industries Association standard. Compliant with Appendix 2 of JWDS 0007.
Acceleration Output Specification (Gain)	95		105	%	
Acceleration Output Specification (Offset)	-180	_	180	gal	

10. Operation Overview

The Sensor has the following functions.

1) Shutoff Signal Output Function

This function calculates the SI value and PGA (peak acceleration value) based on the acceleration values acquired from the acceleration sensor, and then it outputs the shutoff signal by pulling the INT1 pin low if the waveform conditions defined in JEWA standard JWDS 0007 Appendix 2 are met. The acceleration offset is automatically updated at this time to eliminate successive offset drift in the acceleration sensor.

2) Collapse Detection Function

This function compares the Initial Installation Mode offset values and the offset values that were automatically updated. If the values differ by a large degree, the function will detect this as significant tilting compared to initial installation (an amount approximately equivalent to a 20° inclination), and it will output the collapse detection output from INT1.

3) Information Acquisition Function via I²C Communications

The following functions have been implemented via the integrated I²C communications.

- The SI value and PGA that are being calculated during an earthquake can be read via I²C communications.
- After the end of earthquake processing, the SI value and PGA for that earthquake can be read from the Vibration Sensor's memory (up to five waveforms).


11. Operation Mode Details

(1) Status Transitions

This Sensor switches to Normal Mode when the power supply is turned ON.

The types of modes are Normal Mode (the mode that determines earthquakes and performs the shutoff judgment with the SI calculation), Initial Installation Mode, Offset Acquisition Mode, and Self-Diagnostic Mode. The mode is changed by changing the content of register address MODE (0x1003) via I²C communications.

You can switch to Initial Installation Mode, Offset Acquisition Mode, and Self-Diagnostic Mode only from Normal Mode. The mode is restored to Normal Mode after Initial Installation Mode, Offset Acquisition Mode, and Self-Diagnostic Mode are ended.

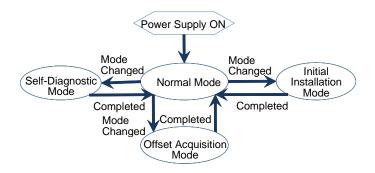

(2) Normal Mode

In Normal Mode, the Sensor first acquires the current 3-axis acceleration values and holds them as the offset. If the CTRL register (0x1004) setting is 0: YZ axes, 1: XZ axes, 2: XY axes, or 4: Switch axes at installation, the latest offset data (register addresses 0x4100 to 0x4114) values are updated. If the CTRL register (0x1004) setting is 3: Auto switch axes, the latest offset data (register addresses 0x4100 to 0x4114) values and initial installation data (register addresses 0x4000 to 0x4014) values are automatically updated. Then the current tilting of the Sensor is judged and the two axes in the horizontal direction are automatically calculated to determine the axes to use for the SI value.

After the offset values are calculated, the offset values in the initial installation data and latest offset data are compared. If there is a large difference in those values, the Sensor is judged as having titled from the initial installation state, and the collapse detection output is output from the INT1 pin. To set the INT1 output to inactive after it has become active, you must read the EVENT register (0x1002), switch to Initial Installation Mode, or turn OFF the power supply.

The Sensor then transitions to the standby status. This status is normally maintained while an earthquake does not occur.


When an earthquake occurs, the earthquake processing starts. The Vibration Sensor calculates the SI value and PGA (peak acceleration value) based on the acceleration values acquired from the acceleration sensor every 320 ms. If the waveform conditions defined in JEWA standard JWDS 0007 Appendix 2 are met during the calculations, the shutoff signal is output from the INT1 pin. The SI value and PGA that are being calculated during this earthquake processing can be read via I²C communications. The INT2 output is also activated (ON) during earthquake processing. Earthquake processing is performed for two minutes.

After the end of earthquake processing, the SI value and PGA for that earthquake are stored in the Vibration Sensor's memory (up to five waveforms). The data for the five latest waveforms are stored in memory, as well as the data for the five waveforms with the largest SI values. If INT1 is being output after the data is stored, INT1 is set to inactive.

The Sensor then checks if the earthquake is still occurring. If the earthquake is still occurring, earthquake processing is once again performed. If the Sensor judges that the earthquake has ended, the offset values are acquired. The latest offset data (register addresses 0x4100 to 0x4114) values are updated at this time.

After the offset values are calculated, the offset values in the initial installation data and latest offset data are compared. If there is a large difference in those values, the Sensor is judged as having titled from the initial installation state, and the collapse detection output is output from the INT1 pin. To set the INT1 output to inactive after it has become active, you must read the EVENT register (0x1002), switch to Initial Installation Mode, or turn OFF the power supply.

The Sensor then returns to the initial settings and switches to the standby status.

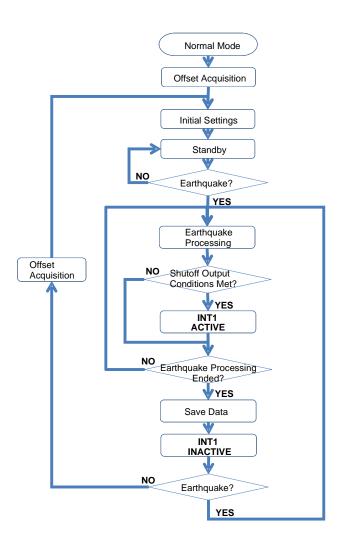


(3) Initial Installation Mode

The Sensor switches to Initial Installation Mode when that mode is specified in the MODE register (0x1003) or when the SETTING pin is pulled low.

In Initial Installation Mode, the Sensor first acquires the current 3-axis acceleration values and holds them as the offset. The latest offset data (register addresses 0x4100 to 0x4114) values and initial installation data (register addresses 0x4000 to 0x4014) values are updated at this time.

If the CTRL register (0x1004) setting is 3: Auto switch axes or 4: Switch axes at installation, the current tilting of the Sensor is judged and the two axes in the horizontal direction are automatically calculated to determine the axes to use for the SI value.

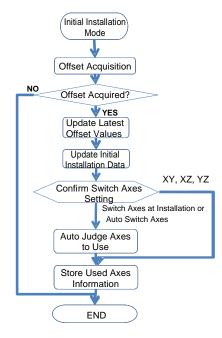


(4) Offset Acquisition Mode

The Sensor switches to Offset Acquisition Mode when that mode is specified in the MODE register (0x1003).

In Offset Acquisition Mode, the Sensor first acquires the current 3-axis acceleration values and holds them as the offset. The latest offset data (register addresses 0x4100 to 0x4114) values are updated at this time.

After the offset values are calculated, the offset values in the initial installation data and latest offset data are compared. If there is a large difference in those values, the Sensor is judged as having titled from the initial installation state, and the collapse detection output is output from the INT1 pin. To set the INT1 output to inactive after it has become active, you must read the EVENT register (0x1002), switch to Initial Installation Mode, or turn OFF the power supply.

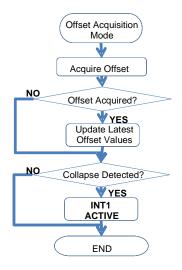

(5) Self-Diagnostic Mode

The Sensor switches to Self-Diagnostic Mode when that mode is specified in the MODE register (0x1003).

When an acceleration sensor failure has been determined and is judged as a fault, the event_selftest bit in the EVENT register (0x1002) changes to 1. The self-diagnostic data (register addresses 0x4200 to 0x420E) is also updated.

12. I2C Communications Protocol

Device Type	Slave
Communications Method	I ² C
Baud Rate	400 kbps
Transmission Code	Binary
Slave Address	0x55
I ² C Clock Stretching	Enabled

The I²C slave address (0x55) is expressed as follows.

Bit	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
	Add[6]	Add[5]	Add[4]	Add[3]	Add[2]	Add[1]	Add[0]	R/W
Value	1	0	1	0	1	0	1	1/0

When writing: Set the LSB of the slave address to 0 so that the address is AAh (1010_1010b). When reading: Set the LSB of the slave address to 1 so that the address is ABh (1010_1011b).

Symbols


START: START condition STOP: STOP condition

SACK: Acknowledge by Slave
MACK: Acknowledge by Master
MNACK: Not Acknowledge by Master

*Attention: When the non-volatile memory in the Sensor is being updated, NACK may be returned for an I²C communications request to prevent memory data corruption.


(1) Single Write Access Protocol

The following diagram is an example of the protocol when overwriting a register address specified as a 16-bit value with an 8-bit setting value.




(2) Multi Write Access Protocol

The following diagram is an example of the protocol when overwriting a register address specified as a 16-bit value with consecutive setting values. The register address is incremented in the amount of register addresses specified by the master, and the setting values for those register addresses are overwritten.

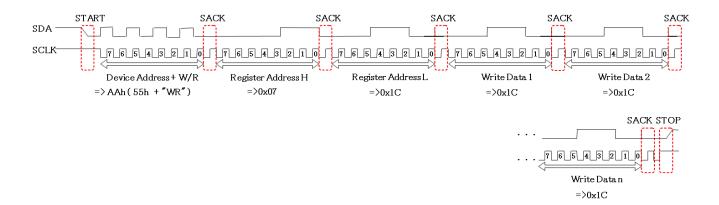


(3) Single Read Access Protocol

The following diagram is an example of the protocol when reading data from a register address specified as a 16-bit value.

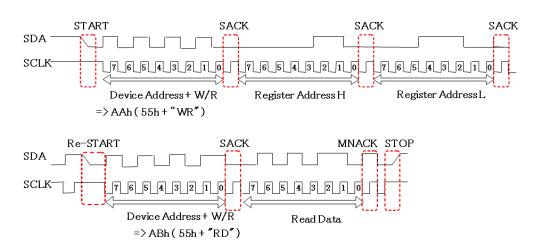

(4) Multi Read Access Protocol

The following diagram is an example of the protocol when reading consecutive items of data starting from a register address specified as a 16-bit value. The register address is incremented in the amount of register addresses specified by the master, and the data held in those register addresses can be read.

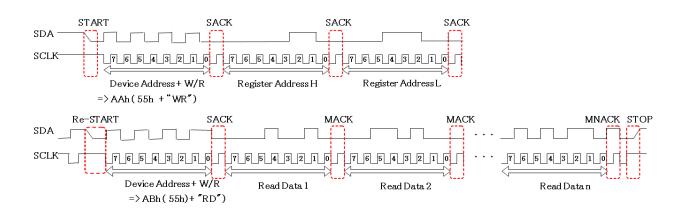

13. Implemented Registers

(1) Registers List

Item	F	Regist	er	Register Name	R/W Data							Default		
il.o	P	Addre	ss	rtogister rtaine	FC/ VV	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0	Value
	0x	10	00	STATE	R	-	-	-	-	-		state[2:0]	1	0x00
Status	0x	10	01	AXIS_STATE	R	-	-	-	-	-	-		_state :0]	0x02
	0x	10	02	EVENT	R	-	-	-	-	event_off set	event_sel ftest	event_col lapse	event_sh ut	0x00
	0×	10	03	MODE	R/W	-	-	-	-	-		mode[2:0]	0×01
Change Status	0x	10	04	CTRL	R/W	-	d	trl_axis[2:0	0]	ctrl_thres h	-	-	-	0x40
	0x	10	05	CLEAR_COMMAND	R/W	-	-	-	-	clear_set _offset	clear_rec ent_offse		clear_qua ke	0×00
Earthquake- Related	0x	20	00	MAIN_SI_H	R				main_s	si[15:0]				0x0000
Data	0x	20	01	MAIN_SI_L										
(During an Earthquake)	0x	20	02	MAIN_PGA_H	R				main_pg	ga[15:0]				0x0000
- Lartinquanto)	0x	20 30	03 00	MAIN_PGA_L										
	0x	30	00	N1_MAIN_OFFSET_X_H	R			n	1_main_of	fset_x[15:0	0]			0x0000
	0x 0x	30	02	N1_MAIN_OFFSET_X_L N1_MAIN_OFFSET_Y_H	1									
	0x	30	03	N1_MAIN_OFFSET_Y_L	R			n	1_main_of	fset_y[15:0	0]			0x0000
	0x	30	04	N1 MAIN OFFSET Z H										
Latest Data 1	0x	30	05	N1 MAIN OFFSET Z L	R			n	1_main_of	fset_z[15:0	0]			0x0000
Data	0x	30	06	N1 MAIN T AVE H										
	0x	30	07	N1 MAIN T AVE L	R				n1_main_t	_ave[15:0]]			0x0000
	0x	30	08	N1 MAIN SI H										
	0x	30	09	N1 MAIN SI L	R				n1_main	_si[15:0]				0x0000
	0x	30	0A	N1_MAIN_PGA_H	1_					F				
	0x	30	0B	N1_MAIN_PGA_L	R				n1_main_	pga[15:0]				0x0000
	0x	31	00	N2_MAIN_OFFSET_X_H	R			n	2 main of	fset_x[15:0	าา			0x0000
	0x	31	01	N2_MAIN_OFFSET_X_L	IX.			"	2_1110111_01	13Ct_x[13.t	J]			0.0000
	0x	31	02	N2_MAIN_OFFSET_Y_H	R			n	2 main of	fset_y[15:0	าา			0x0000
	0x	31	03	N2_MAIN_OFFSET_Y_L	IX.				2_1110111_01	13Ct_y[13.t	J]			0.0000
	0x	31	04	N2_MAIN_OFFSET_Z_H	R			n	2 main of	fset_z[15:0	าา			0x0000
Latest Data 2	0x	31	05	N2_MAIN_OFFSET_Z_L					2_1110111_01	1300_2[13.0	J]			0,0000
Dala 2	0x	31	06	N2_MAIN_T_AVE_H	R				n2 main t	_ave[15:0]	1			0x0000
	0x	31	07	N2_MAIN_T_AVE_L					<u>_</u> ac	_uvc[13.0	J			0,0000
	0x	31	08	N2_MAIN_SI_H	R				n2 main	_si[15:0]				0x0000
	0x	31	09	N2_MAIN_SI_L	IX.				IIZ_IIIdiiI	_3[13.0]				0.0000
	0x	31	0A	N2_MAIN_PGA_H	R				n2 main	pga[15:0]				0x0000
	0x	31	0B	N2_MAIN_PGA_L					112_1110111_	pgu[13.0]				0,0000
	0x	32	00	N3_MAIN_OFFSET_X_H	R			n	3 main of	fset_x[15:0	าา			0x0000
	0x	32	01	N3_MAIN_OFFSET_X_L	IX.			"	J_111d111_01	13Ct_x[13.t	J]			0.0000
	0x	32	02	N3_MAIN_OFFSET_Y_H	R			n	3 main of	fset_y[15:0	าา			0×0000
	0x	32	03	N3_MAIN_OFFSET_Y_L	K			"	3_11lall1_0l	iset_y[is.t	J]			000000
Latest	0x	32	04	N3_MAIN_OFFSET_Z_H	R			n	3 main of	fset_z[15:0	าา			0x0000
Data 3	0x	32	05	N3_MAIN_OFFSET_Z_L	'`				5_11Idil1_01	.550_2[15.0	~,			5,0000
,	0x	32	06	N3_MAIN_T_AVE_H	R				n3 main t	_ave[15:0]	1			0x0000
	0x	32	07	N3_MAIN_T_AVE_L	1					_3,0[13.0	1			3,0000
	0x	32	08	N3_MAIN_SI_H	R				n3 main	_si[15:0]				0x0000
	0x	32	09	N3_MAIN_SI_L	1					_5,[15.0]				3,0000
	0x	32	0A	N3_MAIN_PGA_H	R				n3 main	pga[15:0]				0x0000
	0x	32	0B	N3_MAIN_PGA_L					113_1110111_	pya[13.0]				0,0000

	0x 3	_	00	N4_MAIN_OFFSET_X_H	R	n4_main_offset_x[15:0]	0x0000
	0x 3:		01 02	N4_MAIN_OFFSET_X_L N4_MAIN_OFFSET_Y_H			
	0x 3		03	N4_MAIN_OFFSET_Y_L	R	n4_main_offset_y[15:0]	0x0000
1 -11	0x 3		04	N4_MAIN_OFFSET_Z_H	R	nd main effect a[15:0]	0x0000
Latest Data 4	0x 3		05	N4_MAIN_OFFSET_Z_L	К	n4_main_offset_z[15:0]	000000
	0x 3		06	N4_MAIN_T_AVE_H	R	n4_main_t_ave[15:0]	0x0000
	0x 3		07 08	N4_MAIN_T_AVE_L N4_MAIN_SI_H			
	0x 3		09	N4_MAIN_SI_L	R	n4_main_si[15:0]	0x0000
	0x 3		0A	N4_MAIN_PGA_H	R	n4 main nga[15:0]	0x0000
	0x 3		0B	N4_MAIN_PGA_L	K	n4_main_pga[15:0]	0,0000
	0x 3		00 01	N5_MAIN_OFFSET_X_H	R	n5_main_offset_x[15:0]	0x0000
	0x 3		02	N5_MAIN_OFFSET_X_L N5_MAIN_OFFSET_Y_H			
	0x 3		03	N5_MAIN_OFFSET_Y_L	R	n5_main_offset_y[15:0]	0x0000
Latest	0x 3		04	N5_MAIN_OFFSET_Z_H	R	n5_main_offset_z[15:0]	0x0000
Data 5	0x 3		05	N5_MAIN_OFFSET_Z_L	- ' '		CAGGGG
	0x 3		06 07	N5_MAIN_T_AVE_H N5_MAIN_T_AVE_L	R	n5_main_t_ave[15:0]	0x0000
	0x 3		08	N5_MAIN_SI_H	_	oF	00000
	0x 3		09	N5_MAIN_SI_L	R	n5_main_si[15:0]	0x0000
	0x 3		OA	N5_MAIN_PGA_H	R	n5_main_pga[15:0]	0x0000
	0x 3		0B 00	N5_MAIN_PGA_L M1_MAIN_OFFSET_X_H			
	0x 3		01	M1_MAIN_OFFSET_X_L	R	m1_main_offset_x[15:0]	0x0000
	0x 3		02	M1_MAIN_OFFSET_Y_H	R	m1_main_offset_y[15:0]	0x0000
	0x 3	_	03	M1_MAIN_OFFSET_Y_L	- '`		0,0000
SI	0x 3 0x 3		04 05	M1_MAIN_OFFSET_Z_H M1_MAIN_OFFSET_Z_L	R	m1_main_offset_z[15:0]	0x0000
Ranked Data 1	0x 3		06	M1_MAIN_OITSET_Z_E M1_MAIN_T_AVE_H	_		
	0x 3		07	M1_MAIN_T_AVE_L	R	m1_main_t_ave[15:0]	0x0000
	0x 3		80	M1_MAIN_SI_H	R	m1_main_si[15:0]	0x0000
	0x 3		09 0A	M1_MAIN_SI_L			
	0x 3		0B	M1_MAIN_PGA_H M1_MAIN_PGA_L	R	m1_main_pga[15:0]	0x0000
	0x 3		00	M2_MAIN_OFFSET_X_H	D	m2 main offset v[1Ev0]	0x0000
	0x 3		01	M2_MAIN_OFFSET_X_L	R	m2_main_offset_x[15:0]	000000
	0x 3		02	M2_MAIN_OFFSET_Y_H	R	m2_main_offset_y[15:0]	0x0000
01	0x 3		03 04	M2_MAIN_OFFSET_Y_L M2_MAIN_OFFSET_Z_H			
SI Ranked	0x 3	_	05	M2_MAIN_OFFSET_Z_L	R	m2_main_offset_z[15:0]	0x0000
Data 2	0x 3		06	M2_MAIN_T_AVE_H	R	m2_main_t_ave[15:0]	0x0000
	0x 3		07 08	M2_MAIN_T_AVE_L M2_MAIN_SI_H			
	0x 3		09	M2_MAIN_SI_L	R	m2_main_si[15:0]	0x0000
	0x 3		0A	M2_MAIN_PGA_H	R	m2_main_pga[15:0]	0x0000
	0x 3		0B	M2_MAIN_PGA_L	K	IIIZ_IIIaIII_pga[13.0]	000000
	0x 3		00 01	M3_MAIN_OFFSET_X_H	R	m3_main_offset_x[15:0]	0x0000
	0x 3		02	M3_MAIN_OFFSET_X_L M3_MAIN_OFFSET_Y_H			
	0x 3		03	M3_MAIN_OFFSET_Y_L	R	m3_main_offset_y[15:0]	0x0000
SI	0x 3	_	04	M3_MAIN_OFFSET_Z_H	R	m3_main_offset_z[15:0]	0x0000
Ranked	0x 3		05	M3_MAIN_OFFSET_Z_L			
Data 3	0x 3		06 07	M3_MAIN_T_AVE_H M3_MAIN_T_AVE_L	R	m3_main_t_ave[15:0]	0x0000
	0x 3		08	M3_MAIN_SI_H	_		00000
	0x 3		09	M3_MAIN_SI_L	R	m3_main_si[15:0]	0x0000
	0x 3		OA	M3_MAIN_PGA_H	R	m3_main_pga[15:0]	0x0000
	0x 3		0B 00	M3_MAIN_PGA_L M4_MAIN_OFFSET_X_H			
	0x 3		01	M4_MAIN_OFFSET_X_L	R	m4_main_offset_x[15:0]	0x0000
ntlp	0x 3		02	M4_MAIN_OFFSET_Y_H	R	m4_main_offset_y[15:0]	0x0000
	0x 3		03	M4_MAIN_OFFSET_Y_L	ļ.,		
SI	0x 3		04 05	M4_MAIN_OFFSET_Z_H M4_MAIN_OFFSET_Z_L	R	m4_main_offset_z[15:0]	0x0000
Ranked	0x 3		06	M4_MAIN_T_AVE_H	D	m4 main + ava[15:0]	0x0000
Data 4	0x 3		07	M4_MAIN_T_AVE_L	R	m4_main_t_ave[15:0]	UXUUUU
	0x 3		80	M4_MAIN_SI_H	R	m4_main_si[15:0]	0x0000
	0x 3		09 0A	M4_MAIN_SI_L M4_MAIN_PGA_H			
	0x 3		0B	M4_MAIN_PGA_L	R	m4_main_pga[15:0]	0x0000
	0x 3		00	M5_MAIN_OFFSET_X_H	R	m5_main_offset_x[15:0]	0x0000
	0x 3		01	M5_MAIN_OFFSET_X_L			
	0x 3		02 03	M5_MAIN_OFFSET_Y_H M5_MAIN_OFFSET_Y_L	R	m5_main_offset_y[15:0]	0x0000
SI	0x 3		04	M5_MAIN_OFFSET_Z_H	0	mc main affact =[45.0]	0,0000
Ranked	0x 3		05	M5_MAIN_OFFSET_Z_L	R	m5_main_offset_z[15:0]	0x0000
Data 5	0x 3		06	M5_MAIN_T_AVE_H	R	m5_main_t_ave[15:0]	0x0000
	0x 3		07 08	M5_MAIN_T_AVE_L M5_MAIN_SI_H			
	0x 3		09	M5_MAIN_SI_L	R	m5_main_si[15:0]	0x0000
	0x 3		0A	M5_MAIN_PGA_H	R	m5_main_pga[15:0]	0x0000
	0x 3		0B	M5_MAIN_PGA_L		part1	

	0x	40	00	OFFSET_SET_X_H	R				offset set	t_x[15:0]				0x0000
	0x	40	01	OFFSET_SET_X_L	.,				0.1501_50	C_X[10.0]				CACCCC
	0x	40	02	OFFSET_SET_Y_H	R				offset set	t_y[15:0]				0x0000
	0x	40	03	OFFSET_SET_Y_L	.,				0.1501_50	-,[15.0]				олосос
	0x	40	04	OFFSET_SET_Z_H	R				offset set	t_z[15:0]				0x0000
	0x	40	05	OFFSET_SET_Z_L										
	0x	40	06	OFFSET_SET_T_AVE_H	R	offset_set_t_ave[15:0]								0x0000
	0x	40	07	OFFSET_SET_T_AVE_L							,			
Initial	0x	40	80	OFFSET_SET_MAX_X_H	R			0	ffset set n	nax_x[15:0)]			0x0000
Installation	0x	40	09	OFFSET_SET_MAX_X_L										
Data	0x	40	0A	OFFSET_SET_MAX_Y_H	R		offset_set_max_y[15:0] offset_set_max_Z[15:0]							0x0000
	0x	40	0B	OFFSET_SET_MAX_Y_L										
	0x	40	0C	OFFSET_SET_MAX_Z_H	R									0x0000
	0x	40	0D	OFFSET_SET_MAX_Z_L										
	0x	40	0E	OFFSET_SET_MIN_X_H	R	offset_set_min_x[15:0] offset_set_min_y[15:0] offset_set_min_Z[15:0]							0x0000	
	0x	40	0F	OFFSET_SET_MIN_X_L										
	0x		10	OFFSET_SET_MIN_Y_H	R								0x0000	
	0x		11	OFFSET_SET_MIN_Y_L										
	0x		12	OFFSET_SET_MIN_Z_H	R								0x0000	
	0x	_	13	OFFSET_SET_MIN_Z_L	_								0.00	
	0x	40	14	OFFSET_SET_AXIS	R	offset_set_axis[1:						_axıs[1:0]	0x00	
	0x	41	00	OFFSET_RECENT_X_H	R	offset_recent_x[15:0]							0x0000	
	0x		01	OFFSET_RECENT_X_L		offset_recent_y[15:0]								
	0x	41	02	OFFSET_RECENT_Y_H	R								0x0000	
	0x	41	03	OFFSET_RECENT_Y_L										
	0x	41	04	OFFSET_RECENT_Z_H	R				offset_rece	nt_z[15:0]				0x0000
	0x	41	05	OFFSET_RECENT_Z_L										
	0x	41 41	06 07	OFFSET_RECENT_T_AVE_H	R	R offset_recent_t_ave[15:0]							0x0000	
				OFFSET_RECENT_T_AVE_L										
	_	41 41	08 09	OFFSET_RECENT_MAX_X_H	R			offs	et_recent_	_max_x[15	:0]			0x0000
Latest	0x 0x	41	09 0A	OFFSET_RECENT_MAX_X_L OFFSET_RECENT_MAX_Y_H										
Offset Data	0x 0x	41	0B	OFFSET_RECENT_MAX_Y_L	R			offs	et_recent_	_max_y[15	:0]			0x0000
Data	0x	41	OC	OFFSET RECENT MAX Z H										
	0x	41	0D	OFFSET RECENT MAX Z L	R			offs	et_recent_	_max_Z[15	:0]			0x0000
	0x	41	0E	OFFSET_RECENT_MIN_X_H										
	0x	41	0F	OFFSET_RECENT_MIN_X_L	R			off	set_recent	_min_x[15	:0]			0x0000
	0x	41	10	OFFSET_RECENT_MIN_Y_H										
	0x	41	11	OFFSET_RECENT_MIN_Y_L	R			off	set_recent	_min_y[15	:0]			0x0000
	0x	41	12	OFFSET RECENT MIN Z H										
	0x	41	13	OFFSET RECENT MIN Z L	R			off	set_recent	_min_Z[15	:0]			0x0000
	- C.											offset_rece	ent state	
	0x	41	14	OFFSET_RECENT_STATE	R							1:0		0x00
	0x	42	00	SELFTEST_BEFORE_X_H								1.,	~1	
	0x 0x	42	01	SELFTEST_BEFORE_X_L	R			S	elftest_bef	ore_x[15:0)]			0x0000
	0x 0x	42	02	SELFTEST_BEFORE_X_L SELFTEST AFTER X H										
	0x 0x	42	03	SELFTEST_AFTER_X_L	R			:	selftest_aft	er_x[15:0]				0x0000
	0x 0x	42	03	SELFTEST_BEFORE_Y_H										
	0x	42	05	SELFTEST BEFORE Y L	R			S	elftest_bef	ore_y[15:0)]			0x0000
	0x	42	06	SELFTEST_AFTER_Y_H										1
Self-Diag	0x	42	07	SELFTEST_AFTER_Y_L	R				selftest_aft	er_y[15:0]				0x0000
nostic Data	0x	42	08	SELFTEST BEFORE Z H							_			
Data	0x	42	09	SELFTEST_BEFORE_Z_L	R			S	elftest_bef	ore_z[15:0]			0x0000
	0x	42	0A	SELFTEST_BETOKE_Z_E SELFTEST_AFTER_Z_H										
	0x	42	0B	SELFTEST_AFTER_Z_L	R			:	selftest_aft	er_z[15:0]				0x0000
	0x	42	0C	SELFTEST_T_AVE_H	_					- · ·				
	0x	42	0D	SELFTEST_T_AVE_L	R				selftest_t_	ave[15:0]				0x0000
		7			_								selftest_e	0
	0x	42	0E	SELFTEST_ERROR	R								rror	0x00

^{*}OMRON assumes no responsibility for operation after accessing registers where access is prohibited.

(2) Register Details

Basic Settings

Item	R	egist	er	Register Name	R/W				Da	ita				Default
nom	Address		SS	1109.01011	IN/ W	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0	Value
	0x	10	00	STATE	R	-	-	-	-	-		state[2:0]		0×00
Status	0x	10	01	AXIS_STATE	R	-	-	-	-	-	-	[1.0]		0x02
	0x	10	02	EVENT	R	-	-	-	-	event_off set	event_sel ftest	event_col lapse	event_sh ut	0x00
	0x	10	03	MODE	R/W	-	ı	ı	1	1	mode[2:0]			0x01
Change Status	0x	10	04	CTRL	R/W	-	ctrl_axis[2:0] ctrl_thres		-	-		0x40		
	0x	10	05	CLEAR_COMMAND	R/W	-	-	-	-	clear_set _offset	clear_rec ent_offse	clear_self test	clear_qua ke	0x00

state	Current status	0x00: Normal Mode standby 0x01: Normal Mode not in standby 0x02: Initial Installation Mode 0x03: Offset Acquisition Mode
		0x04: Self-Diagnostic Mode

^{*}You can read the current status with this register.

Normal Mode can be separated into the standby status and not-in-standby status (primarily during earthquake processing).

	Current avec wood for Clivelye	0: Use 2 axes YZ
axis_state	Current axes used for SI value	1: Use 2 axes XZ
	calculation	2: Use 2 axes XY

*The SI value is calculated from the acceleration values of the two horizontal axes. You can read information about the two axes that are used in the SI value calculation with this register.

event_shut	INT1 pin ACTIVE information (shutoff signal in earthquake)	0: Default 1: Shutoff signal ON in earthquake
event_collapse	INT1 pin ACTIVE information (shutoff signal in collapse)	0: Default 1: Shutoff signal ON in collapse
event_selftest	Self-diagnostic result information	0: Self-diagnostic OK 1: Self-diagnostic error
event_offset	Acquire offset result information	0: Acquire offset OK 1: Acquire offset error

^{*}When these events occur, the corresponding bit changes to 1.

The bits will change from 1 to 0 when this register is read.

mode	Current mode	0x01: Normal Mode 0x02: Initial Installation Mode 0x03: Offset Acquisition Mode 0x04: Self-Diagnostic Mode
------	--------------	--

^{*}You can read the current mode with this register.

You can also switch the Sensor's mode by writing that mode to the register.

You can switch to Initial Installation Mode, Offset Acquisition Mode, and Self-Diagnostic Mode only from Normal Mode.

The mode is restored to Normal Mode after Initial Installation Mode, Offset Acquisition Mode, and Self-Diagnostic Mode are ended.

ctrl_thresf	Earthquake shutoff judgement threshold	0: Threshold level H 1: Threshold level L
ctrl_axis	SI value calculation axes setting pattern	O: YZ axes, 1: XZ axes, 2: XY axes, 3: Auto switch axes (auto axes calculation by automatically switching to Initial Installation Mode at the start of Normal Mode), 4: Switch axes at installation (auto axes calculation in switching to Initial Installation Mode)

^{*}The earthquake shutoff judgment threshold is active only when using I²C communications (i.e., when the SELECT pin is high).

The default is threshold level H, and the shutoff signal will be output if an earthquake occurs with a seismic

intensity equivalent to 5 Upper or higher on the JMA Seismic Intensity Scale.

*You can change the SI value calculation axes setting pattern by writing the corresponding value to ctrl axis.

The default is 4: Switch axes at installation. When the Sensor has switched to Initial Installation Mode, the current tilting of the Sensor is judged and the two axes in the horizontal direction are automatically calculated to determine the axes to use for the SI value.

With 0: YZ axes, 1: XZ axes, and 2: XY axes, the SI value is calculated with the specified fixed axes.

With 3: Auto switch axes, the current tilting of the Sensor is judged and the two axes in the horizontal direction are automatically calculated to determine the axes to use for the SI value each time the power supply is turned ON or Normal Mode is started.

clear_quake	Clear earthquake data memory	0: Default 1: Start clear earthquake data memory
clear_selftest	Clear self-diagnostic data memory	Default Start clear self-diagnostic data memory
clear_recent _offset	Clear latest offset data memor	Default Start clear latest offset data memory
clear_set_off set	Clear initial installation data memory	0: Default 1: Start clear initial installation data memory

*Change the corresponding bit from 0 to 1 to clear the corresponding memory (the data will be written with zeros). Earthquake data is located in register addresses 0x3000 to 0x391D. Self-diagnostic data is located in register addresses 0x4200 to 0x420E. Latest offset data is located in registered addresses 0x4100 to 0x4114. Initial installation data is located in register addresses 0x4000 to 0x4014.

Earthquake-Related Data (During an Earthquake)

During an earthquake, you can acquire the SI value and PGA currently being calculated by executing a read on the following register addresses.

Item	Item Register Address		er	Register Name		Data								Default	
			SS			bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0	Value	
Earthquake-	0x	20	00	MAIN_SI_H	D	main_si[15:0]									
Related	0x	20	01	MAIN_SI_L	K										
Data (During an	0x	20	02	MAIN_PGA_H	R	main_pga[15:0]								0x0000	
Earthquake)	0x	20	03	MAIN_PGA_L	K		maii_pga[13.0]							0.0000	

main_si	SI value	0x0000 to 0xFFFF (0.0 to 6,553.5) *Precision fixed to one digit after the decimal point.
---------	----------	--

^{*}The SI value during an earthquake. The value becomes 0 when the earthquake ends.

main_pga	PGA (2-axis synthetic peak acceleration)	0x0000 to 0xFFFF (0 to 65,535) *Integer
----------	--	---

^{*}The PGA value during an earthquake. The value becomes 0 when the earthquake ends.

Earthquake-Related Data (Latest Data)

After the earthquake ends, you can read the data for the past five earthquakes by accessing the following register addresses via I²C. Latest Data 1 (register addresses 0x3000 to 0x300B) always holds the latest data.

	a. ———												
Item	Registe Addres		Register Name	R/W	bit7	bit6	bit5	bit4	Data bit3	bit2	bit1	bit0	Default Value
		00	N1_MAIN_OFFSET_X_H		Dici	Dico	Dico	•	•		DICI	DICO	
	-	01	N1_MAIN_OFFSET_X_L	R				n1_ma	in_offset_x	[15:0]			0x0000
		02	N1_MAIN_OFFSET_Y_H	п				n1	in offeet	[15.0]			0x0000
	0x 30	03	N1_MAIN_OFFSET_Y_L	R				n1_ma	in_offset_y	[15:0]			0x0000
Latest	0x 30	04	N1_MAIN_OFFSET_Z_H	R				n1 ma	in_offset_z	[15:0]			0x0000
Data 1	0x 30	05	N1_MAIN_OFFSET_Z_L	1				III_IIId	III_0II3Ct_2	[13.0]			000000
		06	N1_MAIN_T_AVE_H	R				n1 ma	ain_t_ave[15:01			0x0000
	-	07	N1_MAIN_T_AVE_L						ac_a.c_	10.01			- CAGGGG
	-	08	N1_MAIN_SI_H	R	n1_main_si[15:0]							0x0000	
		09	N1_MAIN_SI_L			n1_main_pga[15:0]							
	-	OA	N1_MAIN_PGA_H	R									0x0000
		0B 00	N1_MAIN_PGA_L										
	-	01	N2_MAIN_OFFSET_X_H	R				n2_ma	in_offset_x	[15:0]			0x0000
		02	N2_MAIN_OFFSET_X_L N2_MAIN_OFFSET_Y_H										
	-	03	N2_MAIN_OFFSET_Y_L	R				n2_ma	in_offset_y	[15:0]			0x0000
		04	N2_MAIN_OFFSET_Z_H		1								
Latest		05	N2_MAIN_OFFSET_Z_L	R				n2_ma	in_offset_z	[15:0]			0x0000
Data 2	-	06	N2_MAIN_T_AVE_H										
		07	N2_MAIN_T_AVE_L	R				n2_m	ain_t_ave[15:0]			0x0000
	0x 31	80	N2_MAIN_SI_H	_				2	trans	. 01			00000
	0x 31	09	N2_MAIN_SI_L	R				n2_	main_si[15	:0]			0x0000
	0x 31	0A	N2_MAIN_PGA_H	R				n? n	nain nga[1	E+01			0x0000
	0x 31	0B	N2_MAIN_PGA_L	K		n2_main_pga[15:0]							
	0x 32	00	N3_MAIN_OFFSET_X_H	R	n3_main_offset_x[15:0]								0x0000
		01	N3_MAIN_OFFSET_X_L					115_1110	011366_x	[13.0]			ОХОООО
	-	02	N3_MAIN_OFFSET_Y_H	R				n3 mai	in_offset_y	[15:0]			0x0000
		03	N3_MAIN_OFFSET_Y_L										
Latest	-	04	N3_MAIN_OFFSET_Z_H	R				n3_ma	in_offset_z	[15:0]			0x0000
Data 3		05	N3_MAIN_OFFSET_Z_L		-								-
		06 07	N3_MAIN_T_AVE_H N3_MAIN_T_AVE_L	R				n3_ma	ain_t_ave[15:0]			0x0000
	-	08	N3_MAIN_SI_H										
		09	N3_MAIN_SI_L	R				n3_	main_si[15	:0]			0x0000
		0A	N3_MAIN_PGA_H										
		0B	N3_MAIN_PGA_L	R				n3_n	nain_pga[1	5:0]			0x0000
	0x 33	00	N4_MAIN_OFFSET_X_H	_						[45.0]			00000
	0x 33	01	N4_MAIN_OFFSET_X_L	R				n4_ma	in_offset_x	[15:0]			0x0000
	0x 33	02	N4_MAIN_OFFSET_Y_H	R				n/ ma	in_offset_y	[15:0]			0x0000
	0x 33	03	N4_MAIN_OFFSET_Y_L	K				114_1110	iii_oiiset_y	[13.0]			0.0000
Latest	-	04	N4_MAIN_OFFSET_Z_H	R				n4 mai	in_offset_z	[15:0]			0x0000
Data 4		05	N4_MAIN_OFFSET_Z_L	ļ.,									
		06	N4_MAIN_T_AVE_H	R				n4_m	ain_t_ave[15:0]			0x0000
	-	07	N4_MAIN_T_AVE_L		1					-			
		08 09	N4_MAIN_SI_H	R				n4_	main_si[15	:0]			0x0000
		09 0A	N4_MAIN_SI_L N4_MAIN_PGA_H	-	1								+
		0B	N4_MAIN_PGA_H N4_MAIN_PGA_L	R				n4_n	nain_pga[1	5:0]			0x0000
		00	N5_MAIN_OFFSET_X_H	1	+								+
		01	N5_MAIN_OFFSET_X_L	R				n5_ma	in_offset_x	[15:0]			0x0000
		02	N5_MAIN_OFFSET_Y_H	_						545.03			0.000
		03	N5_MAIN_OFFSET_Y_L	R				n5_ma	in_offset_y	[15:0]			0x0000
Latest		04	N5_MAIN_OFFSET_Z_H	P	Ì			nE	in offeet	[15.0]			050000
Data 5	0x 34	05	N5_MAIN_OFFSET_Z_L	R	<u></u>			no_ma	in_offset_z	[12:0]			0x0000
	0x 34	06	N5_MAIN_T_AVE_H	R				n5 m	ain t avol	15:0]			0x0000
		07	N5_MAIN_T_AVE_L	Γ.	R n5_main_t_ave[15:0]							0.0000	
	-	08	N5_MAIN_SI_H	R				n5	main_si[15	:01			0x0000
	-	09	N5_MAIN_SI_L	ļ.,	1								1
	-	0A	N5_MAIN_PGA_H	R				n5_m	nain_pga[1	5:0]			0x0000
	0x 34	0B	N5_MAIN_PGA_L	<u> </u>	1								

n1_main_offset_x to n5_main_offset_x	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal	1
---	---	-----	---

*X-axis acceleration offset value that was used when calculating the saved SI value and PGA.

The newest value is n1 and the oldest value is n5.

n1_main_offset_y to n5_main_offset_y	Y-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal	
---	----------------------------	---	-----	--

*Y-axis acceleration offset value that was used when calculating the saved SI value and PGA.

The newest value is n1 and the oldest value is n5.

n1_main_offset_z to n5_main_offset_z	s acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
---	-----------------------	---	-----

*Z-axis acceleration offset value that was used when calculating the saved SI value and PGA.

The newest value is n1 and the oldest value is n5.

n1_main_t_ave to n5_main_t_ave	Temperature during SI calculation	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	°C
-----------------------------------	-----------------------------------	---	----

^{*}Temperature during calculation of the saved SI value and PGA.

The newest value is n1 and the oldest value is n5.

n1_main_si to n5_main_si SI value	0x0000 to 0xFFFF (0.0 to 6,553.5) *Precision fixed to one digit after the decimal point.	kine
-----------------------------------	--	------

^{*}SI values stored in order from newest to oldest.

The newest value is n1 and the oldest value is n5.

n1_main_pga	PGA (2-axis synthetic peak	0x0000 to 0xFFFF (0.0 to 6,553.5)	gal	1
to n5_main_pga	acceleration)	*Precision fixed to one digit after the decimal point.	3	-1

^{*}PGA stored in order from newest to oldest.

The newest value is n1 and the oldest value is n5.

Earthquake-Related Data (SI Ranked Data)

After the earthquake ends, you can read the data for five earthquakes with the largest SI values, out of all earthquakes that occurred in the past, by accessing the following register addresses via I²C. SI Ranked Data 1 (register addresses 0x3500 to 0x350B) always holds the largest SI value.

Item	Re Ad	gister dress		Register Name	R/W	Data bit7 bit6 bit5 bit4 bit3 bit2 bit1 bit0	Default Value
		5 0 5 0	_	M1_MAIN_OFFSET_X_H M1_MAIN_OFFSET_X_L	R	m1_main_offset_x[15:0]	0x0000
		5 0: 5 0:	_	M1_MAIN_OFFSET_Y_H M1_MAIN_OFFSET_Y_L	R	m1_main_offset_y[15:0]	0x0000
SI Ranked	0x 3	5 0 5 0	4	M1_MAIN_OFFSET_Z_H M1_MAIN_OFFSET_Z_L	R	m1_main_offset_z[15:0]	0x0000
Data 1	0x 3	5 0 5 0	6	M1_MAIN_T_AVE_H M1_MAIN_T_AVE_L	R	m1_main_t_ave[15:0]	0x0000
	0x 3	5 0: 5 0:	8	M1_MAIN_SI_H M1_MAIN_SI_L	R	m1_main_si[15:0]	0x0000
	0x 3	5 0. 5 0.	Α	M1_MAIN_SI_L M1_MAIN_PGA_H M1_MAIN_PGA_L	R	m1_main_pga[15:0]	0x0000
	0x 3	6 0	0	M2_MAIN_OFFSET_X_H M2_MAIN_OFFSET_X_L	R	m2_main_offset_x[15:0]	0x0000
	0x 3	6 0:	2	M2_MAIN_OFFSET_Y_H M2_MAIN_OFFSET_Y_L	R	m2_main_offset_y[15:0]	0x0000
SI	0x 3	6 0	4	M2_MAIN_OFFSET_Z_H M2_MAIN_OFFSET_Z_L	R	m2_main_offset_z[15:0]	0x0000
Ranked Data 2	0x 3	6 0	6	M2_MAIN_T_AVE_H M2_MAIN_T_AVE_L	R	m2_main_t_ave[15:0]	0x0000
	0x 3	6 0	8	M2_MAIN_SI_H M2_MAIN_SI_L	R	m2_main_si[15:0]	0x0000
	0x 3	6 0	Α	M2_MAIN_PGA_H M2_MAIN_PGA_L	R	m2_main_pga[15:0]	0x0000
	0x 3	7 0	0	M3_MAIN_OFFSET_X_H M3_MAIN_OFFSET_X_L	R	m3_main_offset_x[15:0]	0x0000
SI	0x 3	7 0: 7 0:	2	M3_MAIN_OFFSET_Y_H M3_MAIN_OFFSET_Y_L	R	m3_main_offset_y[15:0]	0x0000
	0x 3	7 0	4	M3_MAIN_OFFSET_Z_H M3_MAIN_OFFSET_Z_L	R	m3_main_offset_z[15:0]	0x0000
Ranked Data 3	0x 3	7 0	6	M3_MAIN_T_AVE_H M3_MAIN_T_AVE_L	R	m3_main_t_ave[15:0]	0x0000
		7 0	_	M3_MAIN_SI_H M3_MAIN_SI_L	R	m3_main_si[15:0]	0x0000
	_	7 0	_	M3_MAIN_PGA_H M3_MAIN_PGA_L	R	m3_main_pga[15:0]	0x0000
	_	8 0	_	M4_MAIN_OFFSET_X_H M4_MAIN_OFFSET_X_L	R	m4_main_offset_x[15:0]	0x0000
	-	8 0: 8 0:	_	M4_MAIN_OFFSET_Y_H M4_MAIN_OFFSET_Y_L	R	m4_main_offset_y[15:0]	0x0000
SI Ranked	-	8 0: 8 0:	_	M4_MAIN_OFFSET_Z_H M4_MAIN_OFFSET_Z_L	R	m4_main_offset_z[15:0]	0x0000
Data 4		8 0	_	M4_MAIN_T_AVE_H M4_MAIN_T_AVE_L	R	m4_main_t_ave[15:0]	0x0000
		8 0: 8 0:	_	M4_MAIN_SI_H M4_MAIN_SI_L	R	m4_main_si[15:0]	0x0000
		8 0	_	M4_MAIN_PGA_H M4_MAIN_PGA_L	R	m4_main_pga[15:0]	0x0000
	_	9 0	_	M5_MAIN_OFFSET_X_H M5_MAIN_OFFSET_X_L	R	m5_main_offset_x[15:0]	0x0000
	0x 3	9 0:	_	M5_MAIN_OFFSET_Y_H M5_MAIN_OFFSET_Y_L	R	m5_main_offset_y[15:0]	0x0000
SI Ranked	0x 3	9 0	5	M5_MAIN_OFFSET_Z_H M5_MAIN_OFFSET_Z_L	R	m5_main_offset_z[15:0]	0x0000
Data 5	0x 3	9 0	_	M5_MAIN_T_AVE_H M5_MAIN_T_AVE_L	R	m5_main_t_ave[15:0]	0x0000
		9 0:	_	M5_MAIN_SI_H M5_MAIN_SI_L	R	m5_main_si[15:0]	0x0000
		9 0	_	M5_MAIN_PGA_H M5_MAIN_PGA_L	R	m5_main_pga[15:0]	0x0000

m1_main_offset_x to m5_main_offset_x X-axis acceleration	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
--	---	-----

*X-axis acceleration offset value that was used when calculating the saved SI value and PGA.

The largest SI value during an earthquake is m1, followed by m2, m3, m4, and m5 in descending order.

m1_main_offset_y to m5_main_offset_y Y-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal	Ī
--	---	-----	---

*Y-axis acceleration offset value that was used when calculating the saved SI value and PGA.

The largest SI value during an earthquake is m1, followed by m2, m3, m4, and m5 in descending order.

m1_main_offset_z to m5_main_offset_z	Z-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
---	----------------------------	---	-----

*Z-axis acceleration offset value that was used when calculating the saved SI value and PGA.

The largest SI value during an earthquake is m1, followed by m2, m3, m4, and m5 in descending order.

m1_main_t_ave to m5_main_t_ave	Temperature during SI calculation	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	°C
-----------------------------------	-----------------------------------	---	----

^{*}Temperature during calculation of the saved SI value and PGA.

The largest SI value during an earthquake is m1, followed by m2, m3, m4, and m5 in descending order.

m1_main_si to m5_main_si	SI value	0x0000 to 0xFFFF (0.0 to 6,553.5) *Precision fixed to one digit after the decimal point.	kine	
-----------------------------	----------	--	------	--

^{*}SI values stored in order from the largest value.

The largest SI value during an earthquake is m1, followed by m2, m3, m4, and m5 in descending order.

				-
m1_main_pga to m5_main_pag	PGA (2-axis synthetic peak acceleration)	0x0000 to 0xFFFF (0.0 to 6,553.5) *Precision fixed to one digit after the decimal point.	gal	

^{* *}PGA values stored in order from the largest SI value.

The largest SI value during an earthquake is m1, followed by m2, m3, m4, and m5 in descending order.

Initial Installation Data

Item	R	egist	er	Register Name	R/W					Data				Default
пеш	Α	ddre	ss	Register Name	K/ W	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0	Value
	0x	40	00	OFFSET_SET_X_H	R				offcet	set_x[15:0	17			0x0000
	0x		01	OFFSET_SET_X_L	IX.				Oliset_	3C(_X[13.0	'1			0,0000
	_	_	02	OFFSET_SET_Y_H	R				offset	set y[15:0	1			0x0000
	0x	_	03	OFFSET_SET_Y_L	.,				0500_	.500_/[1510	.1			0,0000
	0x		04	OFFSET_SET_Z_H	R				offset	set z[15:0	1			0x0000
	0x	40	05	OFFSET_SET_Z_L	- 10				OHSCC_	JC(_Z[1J.C	,1			0,0000
	0x	_	06	OFFSET_SET_T_AVE_H	R		offset_set_t_ave[15:0]						0x0000	
			07	OFFSET_SET_T_AVE_L	- 10	011361_361_C_4V6[13.0]						0,0000		
	_	_	08	OFFSET_SET_MAX_X_H	R	offset_set_max_x[15:0]						0x0000		
Initial		40	09	OFFSET_SET_MAX_X_L	.,							0,0000		
Installtion	0x	40	0A	OFFSET_SET_MAX_Y_H	R	offset set max y[15:0]					0x0000			
Data	0x		0B	OFFSET_SET_MAX_Y_L	IX.	onset_set_max_y[15.0]						0,0000		
	0x	40	0C	OFFSET_SET_MAX_Z_H	R	offset set max Z[15:0]					0x0000			
	0x		0D	OFFSET_SET_MAX_Z_L	- 10	011361_361_11ldx_2[13.0]						0,0000		
		_	0E	OFFSET_SET_MIN_X_H	R				offset se	t_min_x[15	·n1			0x0000
	0x	40	0F	OFFSET_SET_MIN_X_L	- 10				011301_30	C_111111X[15	,.0]			0,0000
	0x	40	10	OFFSET_SET_MIN_Y_H	R	offset_set_min_y[15:0]				0x0000				
	0x	40	11	OFFSET_SET_MIN_Y_L	IX.				011301_30	C_IIIII_y[IS	,.0]			0,0000
	0x	40	12	OFFSET_SET_MIN_Z_H	R				offcat ca	t min 7[1]	5.01			0x0000
	0x	40	13	OFFSET_SET_MIN_Z_L	^	offset_set_min_Z[15:0]			0.0000					
	0x	40	14	OFFSET_SET_AXIS	R							offset_	set_axis[1:0]	0x00

offset_set_x	X-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal	
--------------	----------------------------	---	-----	--

*X-axis acceleration offset value during initial installation.

offset_set_y Y-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
---	---	-----

*Y-axis acceleration offset value during initial installation.

offset_set_z	Z-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
--------------	----------------------------	---	-----

*Z-axis acceleration offset value during initial installation.

offset_set_ave	Temperature during initial installation	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	°C
----------------	---	---	----

*Temperature during initial installation.

offset set max x	Maximum value of X-axis acceleration when the offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
offset_set_max_x	acceleration when the onset	Precision fixed to one digit after the decimal point.	gal
	values were acquired		i

*Maximum value of X-axis acceleration when calculating the offset during initial installation.

offset_set_max_y	Maximum value of Y-axis acceleration when the offset values were acquired	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
------------------	---	---	-----

*Maximum value of Y-axis acceleration when calculating the offset during initial installation.

*Maximum value of Z-axis acceleration when calculating the offset during initial installation.

offset_set_min_x	Minimum value of X-axis acceleration when the offset values were acquired	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
------------------	---	---	-----

*Minimum value of X-axis acceleration when calculating the offset during initial installation.

	Minimum value of Y-axis	0x8000 to 0x7FFF (-3,276.8 to 3,276.7)	
offset_set_min_y	acceleration when the offset	*Precision fixed to one digit after the decimal point.	gal
-	values were acquired		

*Minimum value of Y-axis acceleration when calculating the offset during initial installation.

•	Minimum value of Z-axis	0x8000 to 0x7FFF (-3,276.8 to 3,276.7)	
offset_set_min_z	acceleration when the offset	*Precision fixed to one digit after the decimal point.	gal
	values were acquired		

*Minimum value of Z-axis acceleration when calculating the offset during initial installation.

	Axes information during initial	0: Use 2 axes YZ	
offset_set_axis	installation	1: Use 2 axes XZ	
		2: Use 2 axes XY	

^{*}Information about the axes that were decided during initial installation and will be used in the SI value calculation.

Latest Offset Data

Item	R	egist	er	Register Name	R/W		Data		Data	Data		Default		
пст	Α	ddres	SS	register rearrie	K/W	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0	Value
	0x	41	00	OFFSET_RECENT_X_H	R				offcot r	ecent_x[15	·01			0x0000
	0x	41	01	OFFSET_RECENT_X_L	K				Uliset_it	cent_x[1	5.0]			0,0000
	0x	41	02	OFFSET_RECENT_Y_H	R				offset re	ecent v[15	5.01			0x0000
	0x	41	03	OFFSET_RECENT_Y_L	IX.				011300_10	cciic_y[ic). U]			0,0000
	0x	41	04	OFFSET_RECENT_Z_H	R				offcot re	ecent_z[15	5.01			0x0000
	0x	41	05	OFFSET_RECENT_Z_L	IX.				011300_10	JCCIIC_Z[15	J. 0 _]			0,0000
	0x	41	06	OFFSET_RECENT_T_AVE_H	R				offset rece	ant t avol	15.01			0x0000
	0x	41	07	OFFSET_RECENT_T_AVE_L	IX.	onset_recent_t_ave[13.0]		00000						
Latest	0x	41	08	OFFSET_RECENT_MAX_X_H	R				offset rece	int may y	[15:0]			0x0000
Offset	0x	41	09	OFFSET_RECENT_MAX_X_L	R offset_recent_max_x[15:0]		00000							
Data	0x	41	0A	OFFSET_RECENT_MAX_Y_H	R				offset rece	nt may v	[15:0]			0x0000
	0x	41	0B	OFFSET_RECENT_MAX_Y_L	IX.				Oliset_reee	.iic_iiidx_y	[13.0]			0,0000
	0x	41	0C	OFFSET_RECENT_MAX_Z_H	R				offset_rece	nt may 7	[15:0]			0x0000
	0x	41	0D	OFFSET_RECENT_MAX_Z_L	IX.				Oliset_reec	.nc_max_z	[13.0]			0,0000
	0x	41	0E	OFFSET_RECENT_MIN_X_H	R			offset_recent_min_x[15:0]					0x0000	
	0x	41	0F	OFFSET_RECENT_MIN_X_L	IX.				Olisci_iccc	اد_۱۱۱۱۱_۸	13.0]			0,0000
	0x	41	10	OFFSET_RECENT_MIN_Y_H	R		offset recent min y[15:0]		0x0000					
	0x	41	11	OFFSET_RECENT_MIN_Y_L	- 1				011301_1000	y	.10.0]			0,0000
	0x	41	12	OFFSET_RECENT_MIN_Z_H	Р	R offset_recent_min_Z[15:0]		0×0000						
	0x	41	13	OFFSET_RECENT_MIN_Z_L	0//3et_letelit_lilli1_2[15.0]		orrset_recent_min_2[15:0]		0,0000					
	0x	41	14	OFFSET_RECENT_STATE	R							offset_	recent_state[0x00

	offset_recent_x	X-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal	
--	-----------------	----------------------------	---	-----	--

^{*}Current X-axis acceleration offset value.

offset_recent_y	Y-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal

^{*}Current Y-axis acceleration offset value.

offset_recent_z	Z-axis acceleration offset	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal	
-----------------	----------------------------	---	-----	--

^{*}Current Z-axis acceleration offset value.

				1
offset_recent_ave	Latest temperature	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	°C	

^{*}Temperature when the current offset values were calculated.

offset_recent_max_x	Maximum value of X-axis acceleration when the offset values were acquired	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
---------------------	---	---	-----

^{*}Maximum value of X-axis acceleration when the current offset values were calculated.

				_
offset_recent_max_y	Maximum value of Y-axis acceleration when the offset values were acquired	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal	

^{*}Maximum value of Y-axis acceleration when the current offset values were calculated.

offset_recent_max_z	Maximum value of Z-axis acceleration when the offset values were acquired	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
---------------------	---	---	-----

^{*}Maximum value of Z-axis acceleration when the current offset values were calculated.

offset_recent_min_x	Minimum value of X-axis acceleration when the offset values were acquired	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
---------------------	---	---	-----

^{*}Minimum value of X-axis acceleration when the current offset values were calculated.

offset_recent_min_y	Minimum value of Y-axis acceleration when the offset values were acquired	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
---------------------	---	---	-----

*Minimum value of Y-axis acceleration when the current offset values were calculated.

offset_recent_min_z	Minimum value of Z-axis acceleration when the offset values were acquired	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
---------------------	---	---	-----

*Minimum value of Z-axis acceleration when the current offset values were calculated.

offset_recent_state	Offset data type	Offset during earthquake judgment in Normal Mode Offset from Initial Installation Mode Offset from Offset Acquisition Mode	
---------------------	------------------	--	--

^{*}Information about the mode used to acquire the offset values when the current offset values were calculated.

Self-Diagnostic Data

Item	R	legist	er	Register Name	R/W				Di	ata				Default
	Α	ddre	SS	regioto. Hamb	R/ W	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0	Value
	0x	42	00	SELFTEST_BEFORE_X_H	R		selftest before x[15:0]					0x0000		
	0x	42	01	SELFTEST_BEFORE_X_L	K		Selitest_DelOfe_X[15:0]						000000	
	0x	42	02	SELFTEST_AFTER_X_H	R		selftest_after_x[15:0]				0x0000			
	0x	42	03	SELFTEST_AFTER_X_L	IX						UXUUUU			
	0x	42	04	SELFTEST_BEFORE_Y_H	R	selftest_before_y[15:0]				0x0000				
	0x	42	05	SELFTEST_BEFORE_Y_L	K						0,0000			
0 - 14 Di	0x	42	06	SELFTEST_AFTER_Y_H	R	selftest_after_y[15:0]					0x0000			
Self-Diag nostic	0x	42	07	SELFTEST_AFTER_Y_L	K									
Dada	0x	42	08	SELFTEST_BEFORE_Z_H	R	R selftest before z[15:0]					0x0000			
Dada	0x	42	09	SELFTEST_BEFORE_Z_L	K			2	entest_bei	016_2[15.	oj.			UXUUUU
	0x	42	0A	SELFTEST_AFTER_Z_H	R				selftest af	tor 7[1E:0	17			0x0000
	0x	42	0B	SELFTEST_AFTER_Z_L	K				sentest_an	tei_z[15.t	']			000000
	0x	42	OC	SELFTEST_T_AVE_H	R		10				0x0000			
	0x	42	0D	SELFTEST_T_AVE_L	K	selftest_t_ave[15:0]					UXUUUU			
	0x	42	0E	SELFTEST_ERROR	R								selftest_e rror	0x00

^{*}X-axis acceleration before the self-diagnostic was run.

selftest_after_x	X-axis self-diagnostic acceleration	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal	

^{*}X-axis acceleration after the self-diagnostic was run.

selftest_before_y Y-axis reference	e acceleration 0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
------------------------------------	--	-----

^{*}Y-axis acceleration before the self-diagnostic was run.

selftest_after_y	Y-axis self-diagnostic acceleration	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal
------------------	-------------------------------------	---	-----

^{*}Y-axis acceleration after the self-diagnostic was run.

selftest_before_z	Z-axis reference acceleration	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) "Precision fixed to one digit after the decimal point.	gal
-------------------	-------------------------------	---	-----

^{*}Z-axis acceleration before the self-diagnostic was run.

selftest_after_z	Z-axis self-diagnostic acceleration	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) *Precision fixed to one digit after the decimal point.	gal

^{*}Z-axis acceleration after the self-diagnostic was run.

selftest_t_ave	Temperature during self-diagnostic	0x8000 to 0x7FFF (-3,276.8 to 3,276.7) "Precision fixed to one digit after the decimal point.	°C
----------------	------------------------------------	---	----

^{*}Temperature during self-diagnostic.

selftest_error	Self-diagnostic result	0: Self-diagnostic OK 1: Self-diagnostic error	-
----------------	------------------------	---	---

^{*}The result of the self-diagnostic.

14. Environmental Performance

(1) Low Temperature Exposure

The characteristics in Section 9 are met after the Sensor was exposed to an environment of -40±3°C in a constant temperature chamber for 72 hours.

(2) High Temperature Exposure

The characteristics in Section 9 are met after the Sensor was exposed to an environment of 80±3°C in a constant temperature chamber for 96 hours.

(3) High Temperature & Humidity Exposure

The characteristics in Section 9 are met after the Sensor was exposed to an environment of $40\pm2^{\circ}$ C and 90% to 95% in a constant temperature chamber for 96 hours.

(4) Drop Resistance

The characteristics in Section 9 are met after the Sensor was freely dropped three times on a concrete surface from a height of 1 m.

(5) Vibration Endurance

The characteristics in Section 9 are met after the Sensor was exposed to vibrations with a frequency of 10 Hz to 55 Hz, total amplitude of 1.5 mm, and sweeping in the X, Y, and Z directions for two hours for each axis.

(6) Electrostatic Resistance


HBM: 1.5 k Ω and 100 pF, no abnormalities with an electrostatic discharge of ± 2 kV.

MM: 0 k Ω and 200 pF, no abnormalities with an electrostatic discharge of ± 200 V.


Note: After the test ends, the Sensor is measured after it is exposed to ambient temperature and humidity for two hours.

15. Shipped Form

The product is stored on a $\phi 330$ reel which stores 1,000 units. The following diagram shows the appearance of the reel and label.

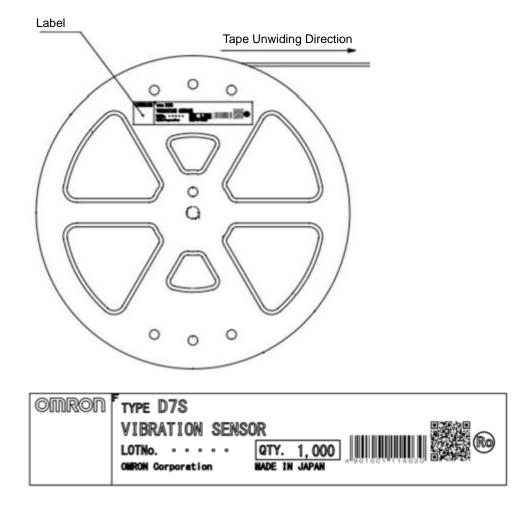

The following diagram shows the detailed dimensions of the carrier tape.

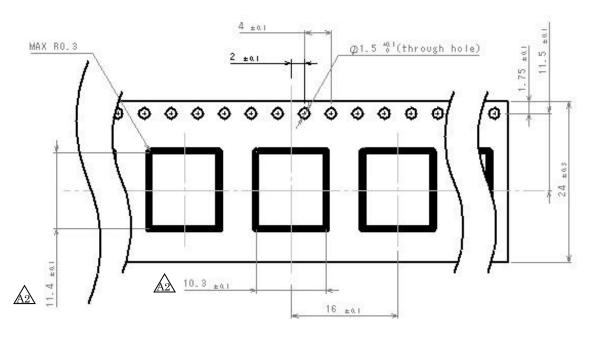

16. Handling Precautions

(1) Handling the Product

- 1) Do not use the Sensor in locations with volatile, flammable, or corrosive gas (organic solvent vapor, sulfite gas, chlorine, sulfide gas, ammonia gas, etc.) or other toxic gases. They may cause the Sensor to break down.)
- 2) Do not use the Sensor in locations subject to fresh water, salt water, water drops, or splattering oil.
- 3) Do not use the Sensor in an environment where condensation or icing may occur. Moisture freezing on the Sensor may cause output to fluctuate or may cause the Sensor to break down.
- 4) Do not use the Sensor in locations subject to direct sunlight. Doing so may cause the Sensor to break down.
- 5) Do not use the Sensor in locations subject to direct radiant heat from heating equipment. Doing so may cause the Sensor to break down.
- 6) Do not use the Sensor in locations with severe temperature changes. Doing so may cause the Sensor to break down.
- 7) Do not use the Sensor in environments with excess mechanical stress. Doing so may cause the Sensor to malfunction or break down.
- 8) Do not use the Sensor in locations with large vibration or shock. These may cause the Sensor to break down.
- 9) Do not use the Sensor in locations with strong electrical or magnetic fields. These may cause the Sensor to break down.
- 10) Static electricity can destroy the Sensor. Take countermeasures including grounded work benches, floors, and other charged objects and workers.
- 11) This Sensor is a precision device. Do not drop it or subject it to excessive shock or force. Doing so could break it or change its characteristics. Do not use the Sensor if it has been dropped.
- 12) Do not handle the Sensor in locations with excessive vapor, dust, dirt, etc.
- 13) Do not hold the Sensor with pliers, tweezers, or similar tools, and do not subject components to damage or excessive shock due to inadequate adjustment of the mounter.
- 14) When placing components near the edge of the PCB or near a connector, make sure that stress is not applied to the Sensor when the device is assembled or when the connector is connected or disconnected.
- 15) Do not apply any external force to components after soldering until everything has cooled off and do not allow mechanical stress due to PCB warping or other factors.
- 16) Under some usage conditions, ultrasound may cause the Sensor to resonate and be destroyed. OMRON cannot specify the detailed conditions under which the Sensor will be used, so we assume no responsibility if the Sensor is used in environments where ultrasound is used. If the Sensor must be used in an environment with ultrasound, check its performance in the actual environment beforehand.
- 17) The Sensor does not contain any protective circuits. Never allow the electrical load to exceed the absolute maximum ratings. Such loads may damage the circuits. If required, install protective circuits so that absolute maximum ratings are not exceeded.
- 18) Allow as much space as possible between the Sensor and devices that generate surges or high frequencies (such as high-frequency welders and high-frequency sewing machines). Attach a surge protector or noise filter on nearby noise-generating devices (in particular, motors, transformers, solenoids,

- magnetic coils, or other devices that have an inductance component).
- 19) Wire the Sensor away from high-voltage and large-current power lines in order to prevent inductance noise. It is also helpful to separate conduits and ducts and to use shielded cables.
- 20) When using a switching regulator, power supply switching noise may cause malfunctions, so check this before use.
- 21) Stress due to plastic hardening may change Sensor characteristics. Do not mold seal the Sensor after mounting.
- 22) When applying a moisture preventing coating or other coating after mounting the Sensor, select a coating with minimal stress and check operation carefully.
- 23) Do not attempt to disassemble or modify the Sensor.
- 24) Do not use the Sensor in safety devices or for applications in which Sensor operation would directly affect human life.
- 25) Carefully read the precaution in the *Instruction Manual* before using the Sensor.
- 26) In addition, if you use the Sensor under conditions other than those in these specifications, check Sensor operation under those conditions beforehand.

(2) Transportation and Storage

- 1) Do not store the Sensor in locations with harmful corrosive gas (organic solvent vapor, sulfite gas, sulfide gas, etc.)
- 2) The Sensor is not drip proof, so do not store it anywhere that water might get on it.
- 3) Store the Sensor within appropriate temperature and humidity ranges.
- 4) Note: Before storing the Sensor in an environment other than the environment recommended by OMRON, evaluate the results in the actual storage environment and judge whether or not storage there is appropriate.
- 5) Do not store the Sensor in locations with excessive vapor, dust, dirt, etc.

(3) Measures for Product Failures

- 1) If a failure occurs where the Sensor does not meet these specifications in the receiving inspection at your factory after delivery, and the cause of the failure lies with OMRON, a replacement product will be provided at no charge. In this situation, the Sensors that have been judged as defective will be returned to OMRON.
- 2) If a failure occurs after your receiving inspection, measures for those Sensors may be decided after negotiations by both parties. As a general rule, Sensors that are rejected from receiving are to be returned to OMRON within 14 days of the receiving date after clearly specifying the details of the failure.

17. Conditions of Use

- (4) The definition of terms used in item 17 are as follows:
 - 1) Usage conditions: Usage conditions, rating, performance, operating environment, handling instructions, cautions, prohibited use, etc. of the Vibration Sensors described in the documents such as these Product Specifications, instruction sheets, or user's manuals.
 - Customer application: Application of the Vibration Sensors by customers which include embedding and/or using the Vibration Sensors in their parts/components, electronic substrates, devices, equipment or systems manufactured by customers.

3) Fitness: (a) fitness, (b) performance, (c) non-infringement of third-party intellectual property, (d) compliance with laws and regulations and (e) conformity to standards.

(5) Caution on Descriptions

Attention is required to the following points on descriptions in these Product Specifications.

- Rated values and performance values are the product of tests performed for separate single conditions, including but not limited to temperature and humidity. It is not intended to warrant rated values and performance values for multiple combined conditions.
- 2) Reference data are provided for reference only. Omron does NOT warrant that the Vibration Sensors work properly at all time in the range of reference data.
- 3) Application examples are provided for reference only. Omron does NOT warrant the fitness of the Vibration Sensors under such application.
- 4) Omron may discontinue the production of the Vibration Sensors or change the specifications of them for the purpose of improving such products or other reasons entirely at its own discretion.
- (6) Please be aware of and accept the following when you introduce or use the Vibration Sensors:
 - 1) Please use the Vibration Sensors in compliance with usage conditions including rating and performance.
 - 2) Please confirm fitness of the Vibration Sensors in your application and use your own judgment to determine the appropriateness of using them in such application. Omron shall not warrant the fitness of the Vibration Sensors in customer application.
 - Please confirm that the Vibration Sensors are properly wired and installed for their intended use in your overall system.
 - 4) When using the Vibration Sensors, please make sure to (i) maintain a margin of safety vis- -vis the published rated and performance values, (ii) design to minimize risks to customer application in case of failure of the Vibration Sensors, such as introducing redundancy, (iii) introduce system-wide safety measures to notify risks to users, and (iv) conduct regular maintenance on the Vibration Sensors and customer application.
 - 5) The Vibration Sensors are designed and manufactured as general-purpose products for use in general industrial products. They are not intended to be used in the following applications. If you are using the Vibration Sensors in the following applications, Omron shall not provide any warranty for such Vibration Sensors. Even in the case of the following applications to elevator/lift equipment and medical devices, etc, some case are likely applied to an usual guarantee prescribed on next article as general-purpose products used for general industrial products. So, please contact our sales person in charge.
 - a) Applications with stringent safety requirements, including but not limited to nuclear power control equipment, combustion equipment, aerospace equipment, railway equipment, elevator/lift equipment, amusement park equipment, medical equipment, safety devices and other applications that could cause danger/harm to people body and life.
 - b) Applications that require high reliability, including but not limited to supply systems for gas, water and electricity, etc., 24 hour continuous operating systems, financial settlement systems and other applications that handle rights and property.

- c) Applications under severe conditions or in severe environment, including but not limited to outdoor equipment, equipment exposed to chemical contamination, equipment exposed to electromagnetic interference and equipment exposed to vibration and shocks.
- d) Applications under conditions and environment not described in these Product Specifications.
- 6) In addition to the applications listed in (a) to (d) above, the Vibration Sensors are not intended for use in automotive applications (including two wheeled vehicles). Please do NOT use the Vibration Sensors for automotive applications. Please contact Omron sales staff for products for automotive use.
- (7) The terms and conditions for warranty of the Vibration Sensors are as follows:
 - 1) Warranty period: One year after the purchase.
 - 2) Coverage: Free replacement of the malfunctioning Vibration Sensors with the same number of replacement/alternative products.
 - 3) Exceptions: Omron will not cover the Vibration Sensors under its warranty if the cause of the malfunction falls under any of the following:
 - (a) Usage in a manner other than the original intended use for the Vibration Sensors.
 - (b) Usage outside of the usage conditions.
 - (c) Modification or repair made to the Vibration Sensors by other than Omron personnel.
 - (d) Software program embedded by other than Omron or usage of such software.
 - (e) Causes which could not have been foreseen with the level of science and technology at the time of shipping from Omron.
 - (f) Causes originating from other than Omron or the Vibration Sensors (including force majeure such as but not limited to natural disasters).

(8) Limitation of Liability

The warranty set out in these Terms and Conditions is the whole and sole liability for the Vibration Sensors. There are no other warranties, expressed or implied. Omron and the distributors of the Vibration Sensors are not liable for any damages which may arise from or be related to the Vibration Sensors.

(9) Export Controls

Customers of the Vibration Sensors shall comply with all applicable laws and regulations of Japan and/or other relevant countries with regard to security export control, when exporting the Vibration Sensors and/or technical documents or providing such products and/or documents to a non-resident.

Omron may not provide customers with the Vibration Sensors and/or technical documents should they fail to comply with such laws and regulations.

A2	171208	Item 15 revised	H.Kanemoto	K.Fujiwara	Y.Kuramitsu
A1	170522	Add humidity control condition	H.Kanemoto	K.Fujiwara	Y.Kuramitsu
Α	161116	First version	K.Fujiwara		S.Fukui
Symbol	Date	Revised Content	Issued By	Checked By	Approved By