AMD GPU Debug API Specification

Generated by Doxygen 1.8.11

Contents

1	Intro	duction	on Control of the Con	1	ı
	1.1	Overvi	riew	1	ı
	1.2	Assum	mptions	1	ı
	1.3	Requir	irements	1	ı
2	Data	Struct	ture Index	3	3
	2.1	Data S	Structures		3
3	File	Index		Ę	5
	3.1	File Lis	ist	5	5
4	Data	Struct	ture Documentation	7	7
	4.1	HwDbo	ogDataBreakpointInfo Struct Reference		7
		4.1.1	Detailed Description		7
		4.1.2	Field Documentation		7
			4.1.2.1 dataBreakpointMode		7
			4.1.2.2 dataSize		7
			4.1.2.3 pAddress		3
	4.2	HwDbo	ogDim3 Struct Reference		3
		4.2.1	Detailed Description		3
		4.2.2	Field Documentation		3
			4.2.2.1 x		3
			4.2.2.2 y		3
			4.2.2.3 z		3
	4.3	HwDbg	ogState Struct Reference)

iv CONTENTS

		4.3.1	Detailed	Description	9
		4.3.2	Field Do	cumentation	9
			4.3.2.1	behaviorFlags	9
			4.3.2.2	packetId	9
			4.3.2.3	pDevice	9
			4.3.2.4	pPacket	9
	4.4	HwDbg	gWavefron	ıtlnfo Struct Reference	10
		4.4.1	Detailed	Description	10
		4.4.2	Field Do	cumentation	10
			4.4.2.1	breakpointType	10
			4.4.2.2	codeAddress	11
			4.4.2.3	dataBreakpointHandle	11
			4.4.2.4	executionMask	11
			4.4.2.5	pOtherData	11
			4.4.2.6	wavefrontAddress	11
			4.4.2.7	workGroupId	11
			4.4.2.8	workItemId	11
5	File	Docum	entation		13
	5.1	AMDG	PUDebug	.h File Reference	13
		5.1.1	Ŭ	Description	15
		5.1.2		efinition Documentation	15
			5.1.2.1	AMDGPUDEBUG VERSION BUILD	15
			5.1.2.2	AMDGPUDEBUG_VERSION_MAJOR	16
			5.1.2.3	AMDGPUDEBUG VERSION MINOR	16
			5.1.2.4	HWDBG API CALL	16
			5.1.2.5	HWDBG API ENTRY	16
			5.1.2.6	HWDBG WAVEFRONT SIZE	16
		5.1.3		Documentation	16
		50	5.1.3.1	HwDbgCodeAddress	16
			5.1.3.2	HwDbgCodeBreakpointHandle	16
			J J.	2333333334Apontalatio	

CONTENTS

	5.1.3.3	HwDbgContextHandle	17
	5.1.3.4	HwDbgDataBreakpointHandle	17
	5.1.3.5	HwDbgLoggingCallback	17
	5.1.3.6	HwDbgWavefrontAddress	17
5.1.4	Enumera	tion Type Documentation	17
	5.1.4.1	HwDbgAPIType	17
	5.1.4.2	HwDbgBehaviorType	18
	5.1.4.3	HwDbgBreakpointType	18
	5.1.4.4	HwDbgCommand	18
	5.1.4.5	HwDbgDataBreakpointMode	18
	5.1.4.6	HwDbgEventType	19
	5.1.4.7	HwDbgLogType	19
	5.1.4.8	HwDbgStatus	19
5.1.5	Function	Documentation	20
	5.1.5.1	HwDbgBeginDebugContext(const HwDbgState state, HwDbgContextHandle *pDebugContextOut)	20
	5.1.5.2	HwDbgBreakAll(const HwDbgContextHandle hDebugContext)	20
	5.1.5.3	HwDbgContinueEvent(HwDbgContextHandle hDebugContext, const HwDbg← Command command)	21
	5.1.5.4	HwDbgCreateCodeBreakpoint(HwDbgContextHandle hDebugContext, const HwDbgCodeAddress codeAddress, HwDbgCodeBreakpointHandle *p↔ BreakpointOut)	21
	5.1.5.5	HwDbgCreateDataBreakpoint(HwDbgContextHandle hDebugContext, const HwDbgDataBreakpointInfo breakpointInfo, HwDbgDataBreakpointHandle *p← DataBreakpointOut)	22
	5.1.5.6	HwDbgDeleteAllCodeBreakpoints(HwDbgContextHandle hDebugContext)	23
	5.1.5.7	HwDbgDeleteAllDataBreakpoints(HwDbgContextHandle hDebugContext)	24
	5.1.5.8	HwDbgDeleteCodeBreakpoint(HwDbgContextHandle hDebugContext, HwDbg← CodeBreakpointHandle hBreakpoint)	24
	5.1.5.9	HwDbgDeleteDataBreakpoint(HwDbgContextHandle hDebugContext, HwDbg⇔ DataBreakpointHandle hDataBreakpoint)	25
	5.1.5.10	HwDbgEndDebugContext(HwDbgContextHandle hDebugContext)	26
	5.1.5.11	HwDbgGetActiveWavefronts(const HwDbgContextHandle hDebugContext, const HwDbgWavefrontInfo **ppWavefrontInfoOut, uint32_t *pNumWavefrontsOut)	26

vi

5.1.5.12	HwDbgGetAPIType(HwDbgAPIType *pAPITypeOut)	27
5.1.5.13	HwDbgGetAPIVersion(uint32_t *pVersionMajorOut, uint32_t *pVersionMinorOut, uint32_t *pVersionBuildOut)	27
5.1.5.14	HwDbgGetCodeBreakpointAddress(const HwDbgContextHandle hDebug← Context, const HwDbgCodeBreakpointHandle hBreakpoint, HwDbgCodeAddress*pCodeAddressOut)	28
5.1.5.15	$\label{lem:hybbgGetDataBreakpointInfo} HwDbgContextHandle & hDebugContext, \\ const \ HwDbgDataBreakpointHandle & hDataBreakpoint, \ HwDbgDataBreakpoint \\ \vdash Info \ *pDataBreakpointInfoOut)$	28
5.1.5.16	HwDbgGetDispatchedKernelName(const HwDbgContextHandle hDebugContext, const char **ppKernelNameOut)	29
5.1.5.17	HwDbgGetKernelBinary(const HwDbgContextHandle hDebugContext, const void **ppBinaryOut, size_t *pBinarySizeOut)	30
5.1.5.18	HwDbgInit(void *pApiTable)	31
5.1.5.19	HwDbgKillAll(const HwDbgContextHandle hDebugContext)	31
5.1.5.20	HwDbgReadMemory(const HwDbgContextHandle hDebugContext, const uint32_t memoryRegion, const HwDbgDim3 workGroupId, const HwDbgDim3 workItemId, const size_t offset, const size_t numBytesToRead, void *pMemOut, size_t *pNumBytesOut)	32
5.1.5.21	HwDbgSetLoggingCallback(uint32_t types, HwDbgLoggingCallback pCallback, void *pUserData)	32
5.1.5.22	HwDbgShutDown()	33
5.1.5.23	HwDbgWaitForEvent(HwDbgContextHandle hDebugContext, const uint32_t time- out, HwDbgEventType *pEventTypeOut)	33
		35

Index

Chapter 1

Introduction

1.1 Overview

This document describes a set of interfaces which can be used by debugger or application developers to incorporate GPU kernel debugging functionality into their debugger or application running on AMD Graphics Core Next GPUs (or APUs).

The AMD GPU Kernel Debugging API has been designed to hide the multiple driver API specific implementations and the internal architecture of a particular GPU device. It has evolved starting from a minimal set of GPU debugging APIs that can be currently supported by AMD GPUs and software stacks. As more GPU debug features are implemented and validated, the API will evolve further. It is still a work-in-progress.

For HSA, this API together with the AMD HSA binary interface, AMD HSA debug info and AMD HSA API and dispatch interception mechanism form the AMD HSA GPU Debugging Architecture. Refer to the "AMD HSA GPU Debugging Architecture" document for more information.

1.2 Assumptions

The AMD GPU Kernel Debugging API is an "in-process" debug API. That is, the API must be called from the same process address space as the program being debugged and will have direct access to all process resources. No OS provided inter-process debug mechanisms are required, but it should be reasonably straightforward for tool developers to create a client/server remote debugging model through the introduction of a simple communication protocol.

To inject these kernel debugging API calls into the debugged application process address space, the API and kernel dispatch interception mechanism provided through amd_hsa_tools_interfaces.h can be used.

1.3 Requirements

For HSA:

- 1. AMD Kaveri and Carrizo APUs
- 2. HSA Runtime and HSAIL 1.0 Final

2 Introduction

Chapter 2

Data Structure Index

2.1 Data Structures

Here are the data structures with brief descriptions:

HwDbgDataBreakpointInfo
HwDbgDim3
HwDbgState 9
HwDbgWavefrontInfo

Data Structure Index

Chapter 3

File Index

3.1 File List

Here is a list of all documented files with brief descriptions:

AMDGPUDebug.h	
The AMD GPU Kernel Debugging API to implement device kernel debugging on AMD Graphics	
Core Next (GCN) GPUs	- 4

6 File Index

Chapter 4

Data Structure Documentation

4.1 HwDbgDataBreakpointInfo Struct Reference

```
#include <AMDGPUDebug.h>
```

Data Fields

- HwDbgDataBreakpointMode dataBreakpointMode
- uint64_t dataSize
- void * pAddress

4.1.1 Detailed Description

A structure to hold all the info required to create a single data breakpoint.

Warning

This is not yet supported

Definition at line 229 of file AMDGPUDebug.h.

4.1.2 Field Documentation

4.1.2.1 HwDbgDataBreakpointMode HwDbgDataBreakpointInfo::dataBreakpointMode

the relevant mode for the data breakpoint

Definition at line 232 of file AMDGPUDebug.h.

4.1.2.2 uint64_t HwDbgDataBreakpointInfo::dataSize

the size of data in bytes being watched

Definition at line 235 of file AMDGPUDebug.h.

4.1.2.3 void* HwDbgDataBreakpointInfo::pAddress

the memory address to be watched

Definition at line 238 of file AMDGPUDebug.h.

4.2 HwDbgDim3 Struct Reference

```
#include <AMDGPUDebug.h>
```

Data Fields

- uint32 t x
- uint32_t y
- uint32_t z

4.2.1 Detailed Description

A three dimensional type, used by work-group and work-item ids.

Definition at line 220 of file AMDGPUDebug.h.

4.2.2 Field Documentation

4.2.2.1 uint32_t HwDbgDim3::x

x dimension

Definition at line 222 of file AMDGPUDebug.h.

4.2.2.2 uint32_t HwDbgDim3::y

y dimension

Definition at line 223 of file AMDGPUDebug.h.

4.2.2.3 uint32_t HwDbgDim3::z

z dimension

Definition at line 224 of file AMDGPUDebug.h.

4.3 HwDbgState Struct Reference

```
#include <AMDGPUDebug.h>
```

Data Fields

- void * pDevice
- void * pPacket
- uint64_t packetId
- uint32_t behaviorFlags

4.3.1 Detailed Description

A structure to hold the device state as an input to the HwDbgBeginDebugContext

Definition at line 286 of file AMDGPUDebug.h.

4.3.2 Field Documentation

4.3.2.1 uint32_t HwDbgState::behaviorFlags

flags that the control the behavior of the debug context

Definition at line 299 of file AMDGPUDebug.h.

4.3.2.2 uint64_t HwDbgState::packetId

set to packet_id from the pre-dispatch callback function

Warning

This is not yet supported

Definition at line 296 of file AMDGPUDebug.h.

4.3.2.3 void* HwDbgState::pDevice

set to hsa_agent_t.handle from the pre-dispatch callback function

Definition at line 289 of file AMDGPUDebug.h.

4.3.2.4 void* HwDbgState::pPacket


set to $hsa_kernel_dispatch_packet_t*$ from the pre-dispatch callback function

Definition at line 292 of file AMDGPUDebug.h.

4.4 HwDbgWavefrontInfo Struct Reference

#include <AMDGPUDebug.h>

Collaboration diagram for HwDbgWavefrontInfo:

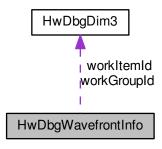

Data Fields

- · HwDbgDim3 workGroupId
- HwDbgDim3 workItemId [HWDBG_WAVEFRONT_SIZE]
- uint64_t executionMask
- HwDbgWavefrontAddress wavefrontAddress
- HwDbgCodeAddress codeAddress
- HwDbgDataBreakpointHandle dataBreakpointHandle
- HwDbgBreakpointType breakpointType
- void * pOtherData

4.4.1 Detailed Description

A structure to hold the active wave info returned by HwDbgGetActiveWavefronts API

Definition at line 242 of file AMDGPUDebug.h.

4.4.2 Field Documentation

4.4.2.1 HwDbgBreakpointType HwDbgWavefrontInfo::breakpointType

the type of breakpoint that was signaled

Warning

This is not yet supported

Definition at line 265 of file AMDGPUDebug.h.

4.4.2.2 HwDbgCodeAddress HwDbgWavefrontInfo::codeAddress

the byte offset in the ISA binary for the wavefront

Definition at line 257 of file AMDGPUDebug.h.

4.4.2.3 HwDbgDataBreakpointHandle HwDbgWavefrontInfo::dataBreakpointHandle

the data breakpoint handle

Warning

This is not yet supported

Definition at line 261 of file AMDGPUDebug.h.

4.4.2.4 uint64_t HwDbgWavefrontInfo::executionMask

the execution mask of the work-items

Definition at line 251 of file AMDGPUDebug.h.

4.4.2.5 void* HwDbgWavefrontInfo::pOtherData

additional data that can be returned

Definition at line 268 of file AMDGPUDebug.h.

4.4.2.6 HwDbgWavefrontAddress HwDbgWavefrontInfo::wavefrontAddress

the hardware wavefront slot address (not unique for a dispatch)

Definition at line 254 of file AMDGPUDebug.h.

4.4.2.7 HwDbgDim3 HwDbgWavefrontInfo::workGroupId

the work-group id

Definition at line 245 of file AMDGPUDebug.h.

4.4.2.8 HwDbgDim3 HwDbgWavefrontInfo::workItemId[HWDBG_WAVEFRONT_SIZE]

the work-item id (local id within a work-group)

Definition at line 248 of file AMDGPUDebug.h.


Chapter 5

File Documentation

5.1 AMDGPUDebug.h File Reference

The AMD GPU Kernel Debugging API to implement device kernel debugging on AMD Graphics Core Next (GCN) GPUs.

```
#include <stddef.h>
#include <stdint.h>
Include dependency graph for AMDGPUDebug.h:
```

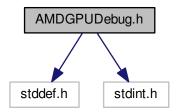

Data Structures

- struct HwDbgDim3
- struct HwDbgDataBreakpointInfo
- struct HwDbgWavefrontInfo
- struct HwDbgState

Macros

- #define HWDBG_API_ENTRY
- #define HWDBG_API_CALL
- #define AMDGPUDEBUG_VERSION_MAJOR 1
- #define AMDGPUDEBUG VERSION MINOR 3
- #define AMDGPUDEBUG_VERSION_BUILD 3626
- #define HWDBG_WAVEFRONT_SIZE 64

Typedefs

- typedef uint64 t HwDbgCodeAddress
- typedef uint32 t HwDbgWavefrontAddress
- typedef void * HwDbgContextHandle
- typedef void * HwDbgCodeBreakpointHandle
- typedef void * HwDbgDataBreakpointHandle
- typedef void(* HwDbgLoggingCallback) (void *pUserData, const HwDbgLogType type, const char *const pMessage)

Enumerations

- enum HwDbgStatus {
 HWDBG_STATUS_SUCCESS = 0x0, HWDBG_STATUS_ERROR = 0x01, HWDBG_STATUS_DEVICE_
 ERROR = 0x02, HWDBG_STATUS_DRIVER_ERROR = 0x03,
 HWDBG_STATUS_DUPLICATE_BREAKPOINT = 0x04, HWDBG_STATUS_INVALID_ADDRESS_ALIG
 NMENT = 0x05, HWDBG_STATUS_INVALID_HANDLE = 0x06, HWDBG_STATUS_INVALID_PARAMET
 ER = 0x07,
 HWDBG_STATUS_NULL_POINTER = 0x08, HWDBG_STATUS_OUT_OF_RANGE_ADDRESS = 0x09,
 HWDBG_STATUS_OUT_OF_MEMORY = 0x0A, HWDBG_STATUS_OUT_OF_RESOURCES = 0x0B,
 HWDBG_STATUS_REGISTRATION_ERROR = 0x0C, HWDBG_STATUS_UNDEFINED = 0x0D, HWDB
 G_STATUS_UNSUPPORTED = 0x0E, HWDBG_STATUS_NOT_INITIALIZED = 0x0F,
 HWDBG_STATUS_INVALID_BEHAVIOR_STATE = 0x10 }
- enum HwDbgCommand { HWDBG_COMMAND_CONTINUE = 0x0 }
- enum HwDbgAPIType { HWDBG_API_HSA = 0x0 }
- enum HwDbgEventType { HWDBG_EVENT_INVALID = 0x0, HWDBG_EVENT_TIMEOUT = 0x1, HWDBG←
 EVENT_POST_BREAKPOINT = 0x2, HWDBG_EVENT_END_DEBUGGING = 0x3 }
- enum HwDbgDataBreakpointMode { HWDBG_DATABREAKPOINT_MODE_READ = 0x1, HWDBG_DAT
 ABREAKPOINT_MODE_NONREAD = 0x2, HWDBG_DATABREAKPOINT_MODE_ATOMIC = 0x4, HWD
 BG_DATABREAKPOINT_MODE_ALL = 0x7 }
- enum HwDbgLogType {
 HWDBG_LOG_TYPE_NONE = 0x00, HWDBG_LOG_TYPE_ASSERT = 0x01, HWDBG_LOG_TYPE_ER
 ROR = 0x02, HWDBG_LOG_TYPE_TRACE = 0x04,
 HWDBG_LOG_TYPE_MESSAGE = 0x08, HWDBG_LOG_TYPE_ALL = 0x0f }

Functions

- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgSetLoggingCallback (uint32_t types, Hw
 —
 DbgLoggingCallback pCallback, void *pUserData)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetAPIVersion (uint32_t *pVersionMajor
 — Out, uint32_t *pVersionMinorOut, uint32_t *pVersionBuildOut)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetAPIType (HwDbgAPIType *pAPI← TypeOut)
- HWDBG API ENTRY HwDbgStatus HWDBG API CALL HwDbgInit (void *pApiTable)
- HWDBG API ENTRY HwDbgStatus HWDBG API CALL HwDbgShutDown ()
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgBeginDebugContext (const HwDbgState state, HwDbgContextHandle *pDebugContextOut)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgEndDebugContext (HwDbgContextHandle hDebugContext)

- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgWaitForEvent (HwDbgContextHandle h
 — DebugContext, const uint32_t timeout, HwDbgEventType *pEventTypeOut)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgContinueEvent (HwDbgContextHandle h
 — DebugContext, const HwDbgCommand command)

- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgDeleteAllCodeBreakpoints (HwDbg
 —
 ContextHandle hDebugContext)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetKernelBinary (const HwDbgContext← Handle hDebugContext, const void **ppBinaryOut, size_t *pBinarySizeOut)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetDispatchedKernelName (const Hw
 — DbgContextHandle hDebugContext, const char **ppKernelNameOut)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetActiveWavefronts (const HwDbg
 — ContextHandle hDebugContext, const HwDbgWavefrontInfo **ppWavefrontInfoOut, uint32_t *pNum
 — WavefrontsOut)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgReadMemory (const HwDbgContext
 Handle hDebugContext, const uint32_t memoryRegion, const HwDbgDim3 workGroupId, const HwDbgDim3
 workItemId, const size_t offset, const size_t numBytesToRead, void *pMemOut, size_t *pNumBytesOut)

- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgCreateDataBreakpoint (HwDbgContext
 Handle hDebugContext, const HwDbgDataBreakpointInfo breakpointInfo, HwDbgDataBreakpointHandle
 *pDataBreakpointOut)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgDeleteDataBreakpoint (HwDbgContext← Handle hDebugContext, HwDbgDataBreakpointHandle hDataBreakpoint)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgDeleteAllDataBreakpoints (HwDbg← ContextHandle hDebugContext)
- HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetDataBreakpointInfo (const HwDbg
 — ContextHandle hDebugContext, const HwDbgDataBreakpointHandle hDataBreakpoint, HwDbgData
 — BreakpointInfo *pDataBreakpointInfoOut)

5.1.1 Detailed Description

The AMD GPU Kernel Debugging API to implement device kernel debugging on AMD Graphics Core Next (GCN) GPUs

Copyright (c) 2015-2016 Advanced Micro Devices, Inc. All rights reserved.

Author

AMD Developer Tools

5.1.2 Macro Definition Documentation

5.1.2.1 #define AMDGPUDEBUG_VERSION_BUILD 3626

The AMD GPU Debug API build number.

Definition at line 83 of file AMDGPUDebug.h.

5.1.2.2 #define AMDGPUDEBUG_VERSION_MAJOR 1

The AMD GPU Debug API major version.

Definition at line 79 of file AMDGPUDebug.h.

5.1.2.3 #define AMDGPUDEBUG_VERSION_MINOR 3

The AMD GPU Debug API minor version.

Definition at line 81 of file AMDGPUDebug.h.

5.1.2.4 #define HWDBG_API_CALL

The API calling convention on linux.

Definition at line 75 of file AMDGPUDebug.h.

5.1.2.5 #define HWDBG_API_ENTRY

No symbol visibility control for GCC older than 4.0.

Definition at line 72 of file AMDGPUDebug.h.

5.1.2.6 #define HWDBG_WAVEFRONT_SIZE 64

The maximum number of lanes in a wavefront for the GPU device.

Definition at line 86 of file AMDGPUDebug.h.

5.1.3 Typedef Documentation

5.1.3.1 typedef uint64_t HwDbgCodeAddress

The code location type (in bytes).

Definition at line 201 of file AMDGPUDebug.h.

5.1.3.2 typedef void* HwDbgCodeBreakpointHandle

A unique handle for a code breakpoint (returned by HwDbgCreateCodeBreakpoint).

Definition at line 210 of file AMDGPUDebug.h.

5.1.3.3 typedef void* HwDbgContextHandle

A unique handle for the kernel debug context (returned by HwDbgBeginDebugContext).

Definition at line 207 of file AMDGPUDebug.h.

5.1.3.4 typedef void* HwDbgDataBreakpointHandle

A unique handle for a data breakpoint (returned by HwDbgCreateDataBreakpoint).

Warning

This is not yet supported

Definition at line 214 of file AMDGPUDebug.h.

5.1.3.5 typedef void(* HwDbgLoggingCallback) (void *pUserData, const HwDbgLogType type, const char *const pMessage)

The user provided logging callback function to be registered.

This function will be called when the message with the type registered by the user is generated by the library.

Parameters

in	pUserData	The pointer specified by the user during registration	
in	In type The type of log message being passed back		
in	pMessage	The log message being passed back	

Definition at line 326 of file AMDGPUDebug.h.

5.1.3.6 typedef uint32_t HwDbgWavefrontAddress

The hardware wavefront location type.

Definition at line 204 of file AMDGPUDebug.h.

5.1.4 Enumeration Type Documentation

5.1.4.1 enum HwDbgAPIType

The enumeration values of possible driver software stacks supported by the library

Enumerator

HWDBG_API_HSA the library is built for HSA software stack

Definition at line 156 of file AMDGPUDebug.h.

5.1.4.2 enum HwDbgBehaviorType

The enumerated bitfield values of supported behavior, the flags can be used internally to optimize behavior

Enumerator

HWDBG_BEHAVIOR_NONE Default flag, used to debug GPU dispatches

HWDBG_BEHAVIOR_DISABLE_DISPATCH_DEBUGGING Disable GPU dispatch debugging. However this behavior mode allows extraction of kernel binaries and breakpoint management. Allowed API calls are HwDbg[Begin or End]DebugContext, HwDbgGetKernelBinary, HwDbg[CodeBreakpoint] and Hw← Dbg[DataBreakpoint]

Definition at line 272 of file AMDGPUDebug.h.

5.1.4.3 enum HwDbgBreakpointType

The enumeration values of possible breakpoint types supported by the library.

Warning

This is not yet supported

Enumerator

```
HWDBG_BREAKPOINT_TYPE_NONE no breakpoint typeHWDBG_BREAKPOINT_TYPE_CODE instruction-based breakpoint typeHWDBG_BREAKPOINT_TYPE_DATA memory-based or data breakpoint type
```

Definition at line 163 of file AMDGPUDebug.h.

5.1.4.4 enum HwDbgCommand

The list of debugger commands for the HwDbgContinueEvent API to advance to the next state in the GPU debug engine.

Enumerator

HWDBG_COMMAND_CONTINUE resume the device execution

Definition at line 150 of file AMDGPUDebug.h.

5.1.4.5 enum HwDbgDataBreakpointMode

The list of possible access modes of data breakpoints supported.

Warning

This is not yet supported

Enumerator

```
HWDBG_DATABREAKPOINT_MODE_READ read operations only
HWDBG_DATABREAKPOINT_MODE_NONREAD write or atomic operations only
HWDBG_DATABREAKPOINT_MODE_ATOMIC atomic operations only
HWDBG_DATABREAKPOINT_MODE_ALL read, write or atomic operations
```

Definition at line 182 of file AMDGPUDebug.h.

5.1.4.6 enum HwDbgEventType

The enumeration values of possible event types returned by the HwDbgWaitForEvent API.

Enumerator

HWDBG_EVENT_INVALID an invalid event
HWDBG_EVENT_TIMEOUT has reached the user timeout value
HWDBG_EVENT_POST_BREAKPOINT has reached a breakpoint
HWDBG_EVENT_END_DEBUGGING has completed kernel execution

Definition at line 172 of file AMDGPUDebug.h.

5.1.4.7 enum HwDbgLogType

The enumerated bitfield values of supported logging message types

Enumerator

HWDBG_LOG_TYPE_NONE do not register for any message
HWDBG_LOG_TYPE_ASSERT register for assert messages
HWDBG_LOG_TYPE_ERROR register for error messages
HWDBG_LOG_TYPE_TRACE register for trace messages
HWDBG_LOG_TYPE_MESSAGE register for generic messages
HWDBG_LOG_TYPE_ALL register for all messages

Definition at line 306 of file AMDGPUDebug.h.

5.1.4.8 enum HwDbgStatus

The enumeration values of the possible return status from the provided API.

Warning

Not all the enum values are supported currently

Enumerator

```
HWDBG STATUS SUCCESS the API was executed successfully
HWDBG_STATUS_ERROR a debugger internal error occurred
HWDBG_STATUS_DEVICE_ERROR the GPU device does not support debugging
HWDBG_STATUS_DRIVER_ERROR the driver is not compatible with the API
HWDBG STATUS DUPLICATE BREAKPOINT a duplicate breakpoint is detected
HWDBG_STATUS_INVALID_ADDRESS_ALIGNMENT invalid address alignment was provided
HWDBG_STATUS_INVALID_HANDLE an invalid debug context handle was provided
HWDBG STATUS INVALID PARAMETER invalid input arguments were provided
HWDBG_STATUS_NULL_POINTER expected a non NULL input argument
HWDBG_STATUS_OUT_OF_RANGE_ADDRESS out of range address was provided
HWDBG_STATUS_OUT_OF_MEMORY failed to allocate memory
HWDBG_STATUS_OUT_OF_RESOURCES ran out of hardware resources (for data breakpoints)
HWDBG_STATUS_REGISTRATION_ERROR started debugging on more than one application process
HWDBG_STATUS_UNDEFINED an undefined operation was detected (i.e. an incorrect call order)
HWDBG STATUS UNSUPPORTED the API has not been implemented
HWDBG_STATUS_NOT_INITIALIZED HwDbgInit has not been called
HWDBG_STATUS_INVALID_BEHAVIOR_STATE The debug context was created with unsupported be-
    havior flags for the API
```

Definition at line 93 of file AMDGPUDebug.h.

5.1.5 Function Documentation

5.1.5.1 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgBeginDebugContext (const HwDbgState state, HwDbgContextHandle * pDebugContextOut)

Mark the start debugging of a kernel dispatch.

This function should be called right before the execution of the kernel to be debugged (such as within the predispatch callback function). Only one kernel dispatch should be between HwDbgBeginDebugContext and HwDbg← EndDebugContext. Only one process can be debugged at a time in the system.

Parameters

in	state	specifies the input debug state
out <i>pDebugContextOut</i>		returns the handle that identifies the particular kernel debug context

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_NULL_POINTER	If the input argument is NULL
HWDBG_STATUS_OUT_OF_MEMORY	If fail to allocate necessary memory
HWDBG_STATUS_REGISTRATION_ERROR	If more than 1 debug process is detected
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgEndDebugContext

5.1.5.2 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgBreakAll (const HwDbgContextHandle hDebugContext)

Break kernel execution of all active wavefronts for a kernel dispatch.

Can be called at any time after a HwDbgBeginDebugContext call.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

5.1.5.3 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgContinueEvent (HwDbgContextHandle hDebugContext, const HwDbgCommand command)

Continue to the next operation (resume device execution, run to the next breakpoint).

This is performed after receiving an event from HwDbgWaitForEvent. This is an asynchronous call, subsequent calls are undefined until the next HwDbgWaitEvent call.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
in	command	specifies the debugger command to execute next

Returns

HwDbgStatus

Return values

put for details)

See also

HwDbgWaitForEvent

5.1.5.4 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgCreateCodeBreakpoint (HwDbgContextHandle hDebugContext, const HwDbgCodeAddress, HwDbgCodeBreakpointHandle * pBreakpointOut)

Create a breakpoint at a specified program counter.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
in	codeAddress	specifies the byte offset into the ISA binary indicating where to set the breakpoint. This has to be 4-byte aligned for AMD GPUs.
		The had to be 1 Sylve anglied for 7 will Gill Co.
out	pBreakpointOut	returns the handle of the newly created instruction-based breakpoint. It is valid for
		use anywhere after creation. However, it is undefined to change the breakpoint state
		outside the HwDbgWaitForEvent/ HwDbgContinueEvent pair associated with the
		kernel dispatch that the breakpoint was created for

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If the codeAddress is invalid (not 4-byte aligned or out of range) or
	has been inserted before
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_NULL_POINTER	If the input argument is NULL
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgDeleteCodeBreakpoint, HwDbgDeleteAllCodeBreakpoints, HwDbgGetCodeBreakpointAddress

5.1.5.5 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgCreateDataBreakpoint (HwDbgContextHandle hDebugContext, const HwDbgDataBreakpointInfo breakpointInfo, HwDbgDataBreakpointHandle * pDataBreakpointOut)

Create a data breakpoint.

Warning

This is not yet supported

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
in	breakpointInfo	specifies the structure containing information where to set the data breakpoint
out	pDataBreakpointOut	returns the handle of the newly created data breakpoint. It is valid for use anywhere after creation. However, it is undefined to change the breakpoint state outside the HwDbgWaitForEvent/ HwDbgContinueEvent pair associated with the shader dispatch that the breakpoint was created for

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_NULL_POINTER	If the input argument or address is NULL
HWDBG_STATUS_OUT_OF_RESOURCES	If cannot be created due to hw limits
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgDeleteDataBreakpoint, HwDbgDeleteAllDataBreakpoints, HwDbgGetDataBreakpointInfo

5.1.5.6 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgDeleteAllCodeBreakpoints (HwDbgContextHandle hDebugContext)

Delete all instruction-based breakpoints.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
----	---------------	---

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgCreateCodeBreakpoint, HwDbgDeleteCodeBreakpoint, HwDbgGetCodeBreakpointAddress

5.1.5.7 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgDeleteAllDataBreakpoints (HwDbgContextHandle hDebugContext)

Delete all data breakpoints.

Warning

This is not yet supported

After this call, all data breakpoint handles created prior for the debug context will be invalid.

Parameters

	and the second forms of the Description Description of ADI
in hDebugContext specifies the context handle r	eceived from HwDbaBeainDebuaContext API

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgCreateDataBreakpoint, HwDbgDeleteDataBreakpoint, HwDbgGetDataBreakpointInfo

5.1.5.8 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgDeleteCodeBreakpoint (
HwDbgContextHandle hDebugContext, HwDbgCodeBreakpointHandle hBreakpoint)

Delete a instruction-based breakpoint.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API	
in	hBreakpoint	specifies the breakpoint handle. The handle is invalid after this call and may be	
		returned in future calls to HwDbgCreateCodeBreakpoint	

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If breakpoint handle is invalid or contains an invalid code address
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgCreateCodeBreakpoint, HwDbgDeleteAllCodeBreakpoints, HwDbgGetCodeBreakpointAddress

5.1.5.9 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgDeleteDataBreakpoint (
HwDbgContextHandle hDebugContext, HwDbgDataBreakpointHandle hDataBreakpoint)

Delete a data breakpoint.

Warning

This is not yet supported

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API	
in	hDataBreakpoint	specifies the data breakpoint handle. The handle is invalid after this call and may be	
		returned in future calls to HwDbgCreateCodeBreakpoint	

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgCreateDataBreakpoint, HwDbgDeleteAllDataBreakpoints, HwDbgGetDataBreakpointInfo

5.1.5.10 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgEndDebugContext (HwDbgContextHandle hDebugContext)

Mark the end debugging of a kernel dispatch.

This function must be called after the kernel has complete execution. Only one kernel dispatch should be between HwDbgBeginDebugContext and HwDbgEndDebugContext. Only one process can be debugged at a time in the system.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API. If it is	
		NULL, then all sessions in flight will be terminated and deleted	

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_INVALID_HANDLE	If hDebugContext is an invalid handle
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_UNDEFINED	If kernel execution has not yet completed
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgBeginDebugContext

5.1.5.11 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetActiveWavefronts (const HwDbgContextHandle hDebugContext, const HwDbgWavefrontInfo ** ppWavefrontInfoOut, uint32_t * pNumWavefrontsOut)

Retrieve the list of active wavefronts for the kernel dispatch in the GPU device.

Must only be called after receiving a HWDBG_EVENT_POST_BREAKPOINT event from HwDbgWaitForEvent API.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API	
out	ppWavefrontInfoOut	returns a pointer to HwDbgWavefrontInfo structures. It contains the work-group	
		ids, work- item ids, code adress, etc for each wavefront	
out	pNumWavefrontsOut	returns the number of active wavefronts	

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_NULL_POINTER	If the ppWaveInfoOut is NULL
HWDBG_STATUS_UNDEFINED	If it is called after not receiving a
	HWDBG_EVENT_POST_BREAKPOINT event
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

5.1.5.12 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetAPIType (HwDbgAPIType * pAPITypeOut)

Retrieve the driver API type of the loaded library.

This function can be called prior to a HwDbgInit call.

Parameters

	out	pAPITypeOut	returns the API type of the library
--	-----	-------------	-------------------------------------

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_NULL_POINTER	If the input argument is NULL
HWDBG_STATUS_UNSUPPORTED	If the API is not yet implemented

5.1.5.13 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetAPIVersion (uint32_t * pVersionMajorOut, uint32_t * pVersionMinorOut, uint32_t * pVersionBuildOut)

Retrieve the library version (major, minor and build) number.

This function can be called prior to a HwDbgInit call.

Parameters

out	pVersionMajorOut	returns the API version major number
out	pVersionMinorOut	returns API version minor number
out	pVersionBuildOut	returns API build number

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_NULL_POINTER	If an input argument is NULL
HWDBG_STATUS_UNSUPPORTED	If the API is not yet implemented

Retrieve the code location from an instruction-based breakpoint handle.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
in	hBreakpoint	specifies the breakpoint handle
out	pCodeAddressOut	returns the code address (program counter)

Returns

HwDbgStatus
HWDBG_STATUS_SUCCESS On success

Return values

HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_NULL_POINTER	If the input argument is NULL
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgCreateCodeBreakpoint, HwDbgDeleteCodeBreakpoint, HwDbgDeleteAllCodeBreakpoints

5.1.5.15 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetDataBreakpointInfo (const HwDbgContextHandle hDebugContext, const HwDbgDataBreakpointHandle hDataBreakpoint, HwDbgDataBreakpointInfo * pDataBreakpointInfoOut)

Retrieve the data breakpoint information from a data breakpoint handle.

Warning

This is not yet supported

Parameters

i	.n	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
i	.n	hDataBreakpoint	specifies the data breakpoint handle
0	ut	pDataBreakpointInfoOut	returns a structure containing information of the data breakpoint

Return values

HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
------------------------------	-------------------------------------

Returns

HwDbgStatus HWDBG_STATUS_SUCCESS On success

Return values

HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NULL_POINTER	If the input argument is NULL
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgCreateDataBreakpoint, HwDbgDeleteDataBreakpoint, HwDbgDeleteAllDataBreakpoints

5.1.5.16 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetDispatchedKernelName (const HwDbgContextHandle hDebugContext, const char ** ppKernelNameOut)

Retrieve the dispatched kernel name.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
out	ppKernelNameOut	returns a pointer to a null-terminated character array The lifetime of the character array is within the debug context (i.e. after HwDbgBeginDebugContext call until the HwDbgEndDebugContext call)

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_DRIVER_ERROR	If the retrieved kernel name is NULL

Return values

HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NULL_POINTER	If the input argument is NULL
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

5.1.5.17 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgGetKernelBinary (const HwDbgContextHandle hDebugContext, const void ** ppBinaryOut, size_t * pBinarySizeOut)

Retrieve the kernel binary (in ELF) of the kernel dispatch.

For HSA, the binary is the loaded and relocated code object. The binary contains the debugging information (in DWARF) from high level source to ISA (can be multiple level of DWARFs such as one DWARF to represent the mapping from a high level kernel source to BRIG and another DWARF to represent the mapping from BRIG to ISA).

Note

Refer to the following two documentation for more information:

- 1. HSA Application Binary Interface AMD GPU Architecture document for the complete ABI.
- 2. HSA Debug Information document for the HSA DWARF extension

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
out	ppBinaryOut	returns a pointer to a buffer containing the binary kernel code object The lifetime of the buffer is within the debug context (i.e. after HwDbgBeginDebugContext call until the HwDbgEndDebugContext call)
out	pBinarySizeOut	returns the binary size in bytes

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_DRIVER_ERROR	If the retrieved kernel binary is NULL or the binary size is 0
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_NULL_POINTER	If the input argument is NULL
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

5.1.5.18 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgInit (void * pApiTable)

Initialize the GPU debug engine.

This function should be called right after the debugged process starts. For hsa, this is in the HSA Runtime's OnLoad callback.

Parameters

in	pApiTable	Used by HSA: Pass in the pointer to the hsa api table provided by the HSA Runtime's
		OnLoad callback. Can be NULL (won't support full DBE functionality).

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If called multiple times without a corresponding HwDbgShutDown
HWDBG_STATUS_OUT_OF_MEMORY	If fail to allocate necessary memory

See also

HwDbgShutDown

5.1.5.19 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgKillAll (const HwDbgContextHandle hDebugContext)

Terminate the kernel dispatch execution.

Can be called at any time after a HwDbgBeginDebugContext call. Can be called multiple times to terminate a large kernel dispatch.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
----	---------------	---

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

5.1.5.20 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgReadMemory (const HwDbgContextHandle hDebugContext, const uint32_t memoryRegion, const HwDbgDim3 workGroupId, const HwDbgDim3 workItemId, const size_t offset, const size_t numBytesToRead, void * pMemOut, size_t * pNumBytesOut)

Read data from a memory region.

Warning

Only private memory region (IMR_Scratch = 1) is currently supported.

Must only be called after receiving a HWDBG_EVENT_POST_BREAKPOINT event from HwDbgWaitForEvent API.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
in	memoryRegion	specifies the target memory region to read from. This should be set to an enum value stored in DW_AT_HSA_isa_memory_region attribute of DW_TAG_variable tag in ISA DWARF.
in	workGroupId	specifies the work-group id of interest (from HwDbgGetActiveWavefronts)
in	workItemId	specifies the work-item id of interest (from HwDbgGetActiveWavefronts)
in	offset	specifies a byte offset for the logical location that should be retrieved. On GPU, this must be a multiple of 4 bytes (align on a DWORD boundary)
in	numBytesToRead	specifies the number of bytes to retrieve On GPU, this must be a multiple of 4 bytes
out	pMemOut	returns a pointer to a memory chunk of at least "numBytesToRead" bytes long
out	pNumBytesOut	returns the number of bytes written into pMemOut

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_NULL_POINTER	If an input argument is NULL
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

5.1.5.21 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgSetLoggingCallback (uint32_t types, HwDbgLoggingCallback pCallback, void * pUserData)

Register a logging callback function.

Extra diagnostics output about the operation of the AMD GPU Debug API may be enabled by registering a client callback function through this API.

This function can be called prior to a HwDbgInit call.

Parameters

in	types	specifies the logging message types to be registered (a combination of HwDbgLogType enum value)
in	pCallback	specifies the logging callback function Set to a callback function function to enable logging Set to NULL to disable logging
in	pUserData	specifies a pointer to data that can be accessed by the user specified logging callback function

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	If the callback can be set successfully
HWDBG_STATUS_ERROR	If an error is encountered
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

5.1.5.22 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgShutDown ()

Shut down the GPU debug engine.

This function should be called before the debugged process ends. For hsa, this should be called right before calling the hsa_shut_down API.

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_NOT_INITIALIZED	If called without a corresponding HwDbgInit

See also

HwDbgInit

5.1.5.23 HWDBG_API_ENTRY HwDbgStatus HWDBG_API_CALL HwDbgWaitForEvent (HwDbgContextHandle hDebugContext, const uint32_t timeout, HwDbgEventType * pEventTypeOut)

Wait on a debug event from the GPU device.

This is a synchronous function that will not return until it receives an event or reaches the specified timeout value.

Parameters

in	hDebugContext	specifies the context handle received from HwDbgBeginDebugContext API
in	timeout	specifies how long to wait in milliseconds before timing out
out	pEventTypeOut	The resulting event type

Returns

HwDbgStatus

Return values

HWDBG_STATUS_SUCCESS	On success
HWDBG_STATUS_ERROR	If an internal error occurs (check the log output for details)
HWDBG_STATUS_INVALID_BEHAVIOR	If the context behavior flags are invalid
HWDBG_STATUS_INVALID_HANDLE	If the input hDebugContext is invalid
HWDBG_STATUS_NOT_INITIALIZED	If called prior to a HwDbgInit call
HWDBG_STATUS_NULL_POINTER	If an input argument is NULL
HWDBG_STATUS_UNDEFINED	If the kernel has completed execution
HWDBG_STATUS_UNSUPPORTED	If the API has not been implemented

See also

HwDbgContinueEvent

Index

AMDGPUDEBUG VERSION BUILD	HWDBG STATUS OUT OF MEMORY, 19
AMDGPUDebug.h, 15	HWDBG_STATUS_OUT_OF_RANGE_ADDRE↔
AMDGPUDEBUG_VERSION_MAJOR	SS, 19
AMDGPUDebug.h, 15	HWDBG_STATUS_OUT_OF_RESOURCES, 19
AMDGPUDEBUG VERSION MINOR	HWDBG_STATUS_REGISTRATION_ERROR, 19
AMDGPUDebug.h, 16	HWDBG STATUS SUCCESS, 19
AMDGPUDebug.h, 13	HWDBG_STATUS_UNDEFINED, 19
AMDGPUDEBUG_VERSION_BUILD, 15	HWDBG_STATUS_UNSUPPORTED, 19
AMDGPUDEBUG_VERSION_MAJOR, 15	HWDBG_WAVEFRONT_SIZE, 16
AMDGPUDEBUG_VERSION_MINOR, 16	HwDbgAPIType, 17
HWDBG_API_CALL, 16	HwDbgBeginDebugContext, 20
HWDBG_API_ENTRY, 16	HwDbgBehaviorType, 17
HWDBG API HSA, 17	HwDbgBreakAll, 20
HWDBG_BEHAVIOR_DISABLE_DISPATCH_D↔	HwDbgBreakpointType, 18
EBUGGING, 18	HwDbgCodeAddress, 16
HWDBG_BEHAVIOR_NONE, 18	HwDbgCodeBreakpointHandle, 16
HWDBG_BREAKPOINT_TYPE_CODE, 18	HwDbgCommand, 18
HWDBG BREAKPOINT TYPE DATA, 18	HwDbgContextHandle, 16
HWDBG_BREAKPOINT_TYPE_NONE, 18	HwDbgContinueEvent, 21
HWDBG_COMMAND_CONTINUE, 18	HwDbgCreateCodeBreakpoint, 21
HWDBG_DATABREAKPOINT_MODE_ALL, 18	HwDbgCreateDataBreakpoint, 22
HWDBG DATABREAKPOINT MODE ATOMIC,	HwDbgDataBreakpointHandle, 17
	HwDbgDataBreakpointMode, 18
18 HWDBG_DATABREAKPOINT_MODE_NONRE↔	HwDbgDeleteAllCodeBreakpoints, 23
AD, 18	HwDbgDeleteAllDataBreakpoints, 23
	HwDbgDeleteCodeBreakpoint, 24
HWDBG_DATABREAKPOINT_MODE_READ, 18	HwDbgDeleteDataBreakpoint, 25
HWDBG_EVENT_END_DEBUGGING, 19	HwDbgEndDebugContext, 25
HWDBG_EVENT_INVALID, 19	HwDbgEventType, 18
HWDBG_EVENT_POST_BREAKPOINT, 19	HwDbgGetAPIType, 27
HWDBG_EVENT_TIMEOUT, 19	HwDbgGetAPIVersion, 27
HWDBG_LOG_TYPE_ALL, 19	HwDbgGetActiveWavefronts, 26
HWDBG_LOG_TYPE_ASSERT, 19	HwDbgGetCodeBreakpointAddress, 28
HWDBG_LOG_TYPE_ERROR, 19	HwDbgGetDataBreakpointInfo, 28
HWDBG_LOG_TYPE_MESSAGE, 19	HwDbgGetDispatchedKernelName, 29
HWDBG_LOG_TYPE_NONE, 19	HwDbgGetKernelBinary, 30
HWDBG_LOG_TYPE_TRACE, 19	HwDbgInit, 30
HWDBG_STATUS_DEVICE_ERROR, 19	HwDbgKillAll, 31
HWDBG_STATUS_DRIVER_ERROR, 19	HwDbgLogType, 19
HWDBG_STATUS_DUPLICATE_BREAKPOINT,	HwDbgLoggingCallback, 17
19	HwDbgReadMemory, 32
HWDBG_STATUS_ERROR, 19	HwDbgSetLoggingCallback, 32
HWDBG_STATUS_INVALID_ADDRESS_ALIG←	HwDbgShutDown, 33
NMENT, 19	HwDbgStatus, 19
HWDBG_STATUS_INVALID_BEHAVIOR_STA↔	HwDbgWaitForEvent, 33
TE, 19	HwDbgWavefrontAddress, 17
HWDBG_STATUS_INVALID_HANDLE, 19	
HWDBG_STATUS_INVALID_PARAMETER, 19	behaviorFlags
HWDBG_STATUS_NOT_INITIALIZED, 19	HwDbgState, 9
HWDBG_STATUS_NULL_POINTER, 19	breakpointType

36 INDEX

HwDbgWavefrontInfo, 10	AMDGPUDebug.h, 19
	HWDBG_LOG_TYPE_TRACE
codeAddress	AMDGPUDebug.h, 19
HwDbgWavefrontInfo, 10	HWDBG_STATUS_DEVICE_ERROR
	AMDGPUDebug.h, 19
dataBreakpointHandle	HWDBG_STATUS_DRIVER_ERROR
HwDbgWavefrontInfo, 11	AMDGPUDebug.h, 19
dataBreakpointMode	HWDBG_STATUS_DUPLICATE_BREAKPOINT
HwDbgDataBreakpointInfo, 7	AMDGPUDebug.h, 19
dataSize	HWDBG_STATUS_ERROR
HwDbgDataBreakpointInfo, 7	AMDGPUDebug.h, 19
	HWDBG_STATUS_INVALID_ADDRESS_ALIGNMENT
executionMask	AMDGPUDebug.h, 19
HwDbgWavefrontInfo, 11	HWDBG_STATUS_INVALID_BEHAVIOR_STATE
LIMPRO ARL CALL	AMDGPUDebug.h, 19
HWDBG_API_CALL	HWDBG_STATUS_INVALID_HANDLE
AMDGPUDebug.h, 16	AMDGPUDebug.h, 19
HWDBG_API_ENTRY	HWDBG STATUS INVALID PARAMETER
AMDGPUDebug.h, 16	AMDGPUDebug.h, 19
HWDBG_API_HSA	HWDBG_STATUS_NOT_INITIALIZED
AMDGPUDebug.h, 17	AMDGPUDebug.h, 19
HWDBG_BEHAVIOR_DISABLE_DISPATCH_DEBU↔	HWDBG_STATUS_NULL_POINTER
GGING	AMDGPUDebug.h, 19
AMDGPUDebug.h, 18	HWDBG_STATUS_OUT_OF_MEMORY
HWDBG_BEHAVIOR_NONE	AMDGPUDebug.h, 19
AMDGPUDebug.h, 18	HWDBG_STATUS_OUT_OF_RANGE_ADDRESS
HWDBG_BREAKPOINT_TYPE_CODE	AMDGPUDebug.h, 19
AMDGPUDebug.h, 18	HWDBG_STATUS_OUT_OF_RESOURCES
HWDBG_BREAKPOINT_TYPE_DATA	AMDGPUDebug.h, 19
AMDGPUDebug.h, 18	HWDBG_STATUS_REGISTRATION_ERROR
HWDBG_BREAKPOINT_TYPE_NONE	
AMDGPUDebug.h, 18	AMDGPUDebug.h, 19
HWDBG_COMMAND_CONTINUE	HWDBG_STATUS_SUCCESS
AMDGPUDebug.h, 18	AMDGPUDebug.h, 19
HWDBG_DATABREAKPOINT_MODE_ALL	HWDBG_STATUS_UNDEFINED
AMDGPUDebug.h, 18	AMDGPUDebug.h, 19
HWDBG_DATABREAKPOINT_MODE_ATOMIC	HWDBG_STATUS_UNSUPPORTED
AMDGPUDebug.h, 18	AMDGPUDebug.h, 19
HWDBG_DATABREAKPOINT_MODE_NONREAD	HWDBG_WAVEFRONT_SIZE
AMDGPUDebug.h, 18	AMDGPUDebug.h, 16
HWDBG_DATABREAKPOINT_MODE_READ	HwDbgAPIType
AMDGPUDebug.h, 18	AMDGPUDebug.h, 17
HWDBG_EVENT_END_DEBUGGING	HwDbgBeginDebugContext
AMDGPUDebug.h, 19	AMDGPUDebug.h, 20
HWDBG_EVENT_INVALID	HwDbgBehaviorType
AMDGPUDebug.h, 19	AMDGPUDebug.h, 17
HWDBG_EVENT_POST_BREAKPOINT	HwDbgBreakAll
AMDGPUDebug.h, 19	AMDGPUDebug.h, 20
HWDBG_EVENT_TIMEOUT	HwDbgBreakpointType
AMDGPUDebug.h, 19	AMDGPUDebug.h, 18
HWDBG_LOG_TYPE_ALL	HwDbgCodeAddress
AMDGPUDebug.h, 19	AMDGPUDebug.h, 16
HWDBG_LOG_TYPE_ASSERT	HwDbgCodeBreakpointHandle
AMDGPUDebug.h, 19	AMDGPUDebug.h, 16
HWDBG_LOG_TYPE_ERROR	HwDbgCommand
AMDGPUDebug.h, 19	AMDGPUDebug.h, 18
HWDBG_LOG_TYPE_MESSAGE	HwDbgContextHandle
AMDGPUDebug.h, 19	AMDGPUDebug.h, 16
HWDBG_LOG_TYPE_NONE	HwDbgContinueEvent

INDEX 37

AMDGPUDebug.h, 21	behaviorFlags, 9
HwDbgCreateCodeBreakpoint	pDevice, 9
AMDGPUDebug.h, 21	pPacket, 9
HwDbgCreateDataBreakpoint	packetld, 9
AMDGPUDebug.h, 22	HwDbgStatus
HwDbgDataBreakpointHandle	AMDGPUDebug.h, 19
AMDGPUDebug.h, 17	HwDbgWaitForEvent
HwDbgDataBreakpointInfo, 7	AMDGPUDebug.h, 33
dataBreakpointMode, 7	HwDbgWavefrontAddress
dataSize, 7	AMDGPUDebug.h, 17
pAddress, 7	HwDbgWavefrontInfo, 10
HwDbgDataBreakpointMode	breakpointType, 10
AMDGPUDebug.h, 18	codeAddress, 10
-	dataBreakpointHandle, 11
HwDbgDeleteAllCodeBreakpoints	executionMask, 11
AMDGPUDebug.h, 23	pOtherData, 11
HwDbgDeleteAllDataBreakpoints	wavefrontAddress, 11
AMDGPUDebug.h, 23	· ·
HwDbgDeleteCodeBreakpoint	workGroupId, 11
AMDGPUDebug.h, 24	workItemId, 11
HwDbgDeleteDataBreakpoint	n A ddroon
AMDGPUDebug.h, 25	pAddress
HwDbgDim3, 8	HwDbgDataBreakpointInfo, 7
x, 8	pDevice
y, 8	HwDbgState, 9
z, 8	pOtherData
HwDbgEndDebugContext	HwDbgWavefrontInfo, 11
AMDGPUDebug.h, 25	pPacket
HwDbgEventType	HwDbgState, 9
AMDGPUDebug.h, 18	packetld
HwDbgGetAPIType	HwDbgState, 9
AMDGPUDebug.h, 27	
	wavefrontAddress
HwDbgGetAPIVersion	HwDbgWavefrontInfo, 11
AMDGPUDebug.h, 27	workGroupId
HwDbgGetActiveWavefronts	HwDbgWavefrontInfo, 11
AMDGPUDebug.h, 26	workItemId
HwDbgGetCodeBreakpointAddress	HwDbgWavefrontInfo, 11
AMDGPUDebug.h, 28	
HwDbgGetDataBreakpointInfo	X
AMDGPUDebug.h, 28	HwDbgDim3, 8
HwDbgGetDispatchedKernelName	
AMDGPUDebug.h, 29	у
HwDbgGetKernelBinary	HwDbgDim3, 8
AMDGPUDebug.h, 30	
HwDbgInit	Z
AMDGPUDebug.h, 30	HwDbgDim3, 8
HwDbgKillAll	
AMDGPUDebug.h, 31	
HwDbgLogType	
AMDGPUDebug.h, 19	
HwDbgLoggingCallback	
AMDGPUDebug.h, 17	
HwDbgReadMemory	
AMDGPUDebug.h, 32	
HwDbgSetLoggingCallback	
AMDGPUDebug.h, 32	
HwDbgShutDown	
AMDGPUDebug.h, 33	
HwDbgState, 9	