This guide shows how to connect devices using the RoKiX Development Kit and how to monitor the data output using the RoKiX Windows GUI.

✓ STEP 1: Download and Install the latest release of the RoKiX Windows GUI following this link:

https://github.com/RohmSemiconductor/RoKiX-IoT-Platform/releases/latest

 Note: After installation, the shortcuts to the RoKiX Windows GUI and to the RoKiX IoT Platform Users Guide can be found on the desktop, in the Windows Start menu under RoKiX folder, and in the installation directory:

\Documents\RoKiX\

✓ STEP 2: Start RoKiX Windows GUI. If Configuration update pop-up window is shown, click Yes to download the latest configurations from the server.



✓ STEP 3: (Optional) The CY8CKIT-059 PSoC® 5LP Prototyping Kit comes preloaded with the custom RoKiX-CY8CKIT-059 firmware when purchased as part of the RoKiX Development Kit. The latest version of the firmware can be found in the installation directory:

\Documents\RoKiX\RoKiX-Firmware\Cypress-PSoC

or on GitHub:


https://github.com/RohmSemiconductor/RoKiX-IoT-Platform/tree/master/RoKiX-Firmware/Cypress-PSoC

 Note: The guide for programming the RoKiX-CY8CKIT-059 firmware to the Cypress CY8CKIT-059 PSoC® 5LP Prototyping Kit can be found in the section 3.1.4 of the RoKiX Development Kit User Guide. ✓ STEP 4: Connect the KX132-1211 evaluation board to the RoKiX Adapter Board A3 directly to the 18-pin header J6 or using the provided ribbon cable.






✓ STEP 5: Connect the CY8CKIT-059 to the PC using the provided micro-USB cable to establish the connection with RoKiX Windows GUI.

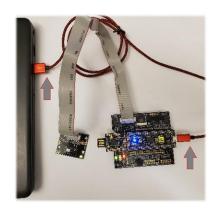

 Note: With Windows 10, the operating system should automatically use the correct driver. For earlier Windows versions, please follow the driver installation procedure in section 3.1.3 of the RoKiX Development Kit User Guide.

- ✓ STEP 6: Start the RoKiX Windows GUI software and adjust your settings as follows to get the device connected:
 - (1) Select the board configuration from the Board menu: CY8CKIT-059 / RoKiX adapter A3 / I2C
 - (2) Select the desired configuration stream for the corresponding accelerometer sensor from the Stream menu: e.g.: KX132-1211 / Accel data 50Hz ±2q high performance

If the settings are adjusted properly, data streaming should start automatically, and the on-screen output should display real time output for X, Y, and 7 axes of KX132-1211 sensor.

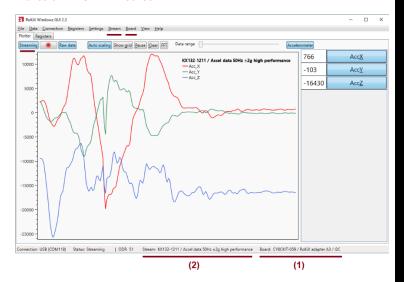

✓ STEP 7: For additional details about the RoKiX Development Kit, please see RoKiX Development Kit User Guide

RoKiX Development Kit



RoKiX Development Kit Contents:

- 1. RoKiX Adapter Board A3
 P/N: RKX-MPIF-1-ADBA30
- 2. Cypress PSoC® 5LP Prototyping Kit P/N: CY8CKIT-059
- 3. KX132-1211 RoKiX Digital Evaluation Board P/N: *KX132-1211-EVB110*
- 4. Micro-USB cable (3.3' / 1M)
- 5. 14-position ribbon cable (1.5' / 457.20mm)
- 6. Quick Start Guide (this document)

www.kionix.com/developer-tools





