

# Device: Panasonic AU-EVA1




## Introduction

The Device Core "Panasonic EVA1" is used for controlling the AU-EVA1 camera. The goal of this manual is to help configuring a SKAARHOJ interface to control features available in the Device Core at this present time.

## Setting up Camera


In order to control the camera a USB/Ethernet adapter must be utilized from the USB2.0 HOST port on the camera. All communication between a SKAARHOJ interface and the camera is done via IP. The implementation have been done on version 0.00-00-8.02.

Panasonic recommends to use [Plugable USB 3.0 Gigabit Eathernet Adapter](#) or [UGREEN USB3.0 to RJ45 Ethernet Adapter 20256](#)

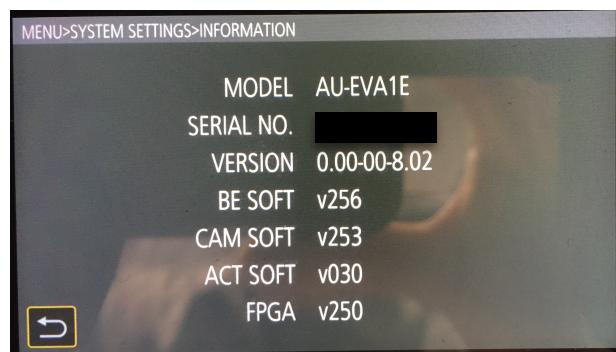

A number of actions are required for a SKAARHOJ controller to communicate with the camera. Please follow these procedures in the MENU → NETWORK SETTINGS. The aim of the procedures is to set a **static IP address** on the camera which the SKAARHOJ controller can connect to and to create a **user account** for authentication. You can use a different IP address as long as the Panasonic Device Core on the SKAARHOJ controller reflects this.


- NETWORK SEL: **WLAN**

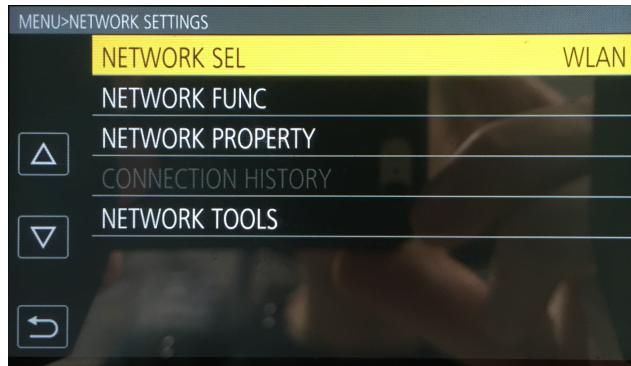

- NETWORK FUNC - add a account
  - Account name: **skaarhoj**
  - Account password: **12345678**

The first screenshot shows the 'USER ACCOUNT' menu. The second screenshot shows a keyboard input screen where the account name 'skaarhoj' is being typed. The third screenshot shows a similar keyboard input screen where the password '\*\*\*\*\*8' is being typed.


- NETWORK PROPERTY - set static IP
  - TYPE: **INFRA(SELECT)**
  - DHCP: **OFF**
  - IP ADDRESS: **192.168.10.178**
  - SUBNET MASK: **255.255.255.0**
  - DEFAULT GATEWAY: **192.168.10.1**
  - PRIMANRY DNS: **192.168.10.2**

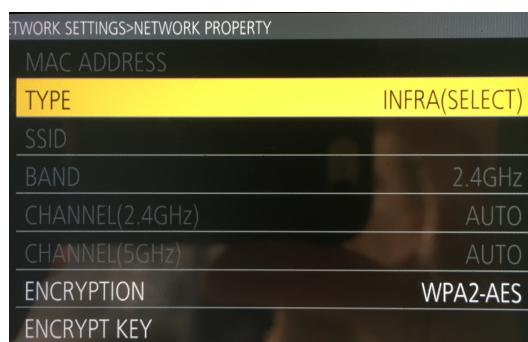

## Setting up a RCPv2 controller using the default configuration “Panasonic AU-EVA1”

Please follow these instructions if you have a RCPv2 and want to use it with the Panasonic AU-EVA1 camera.




If your RCPv2 have been shipped preconfigured with the “Panasonic AU-EVA1” configuration please go to section **“Confirm Connection”**

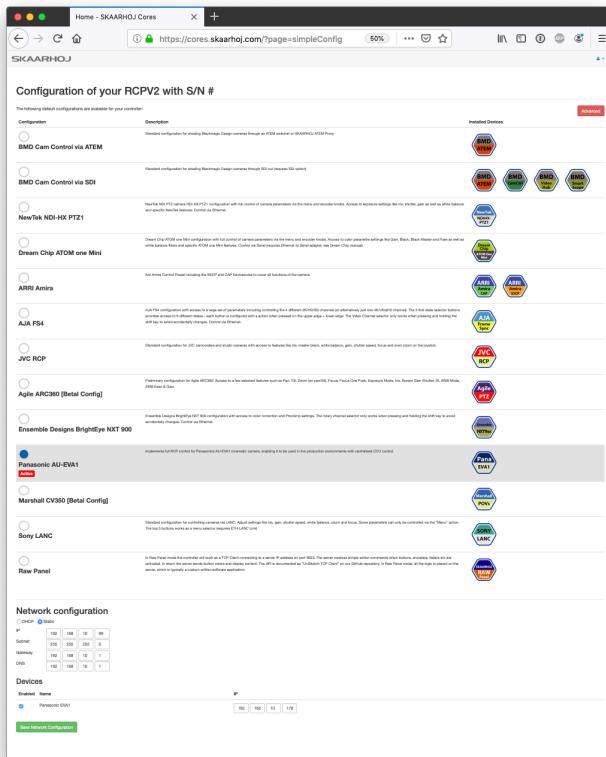

If you have a RCPv2 and want to use the default configuration “Panasonic AU-EVA1” please follow these steps

- Download and install the Firmware Updater Application (<https://www.skaarhoj.com/support/firmware-updater/>)
- Connect the RCPv2 with the USB programming cable (if you are on Windows and have multiple com ports available please see the section “Port selection on Windows” in the Installation and Operation Manual (<https://www.skaarhoj.com/support/manuals/>)
- Press “Online Configuration” in the Firmware Application


# SKAARHOJ DEVICE CORES
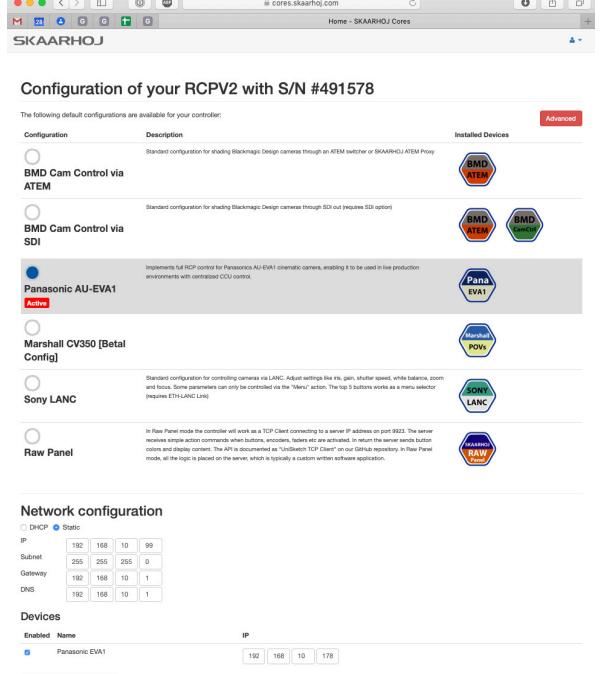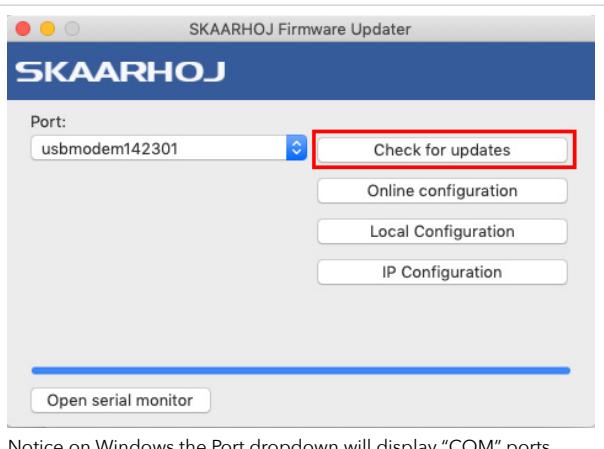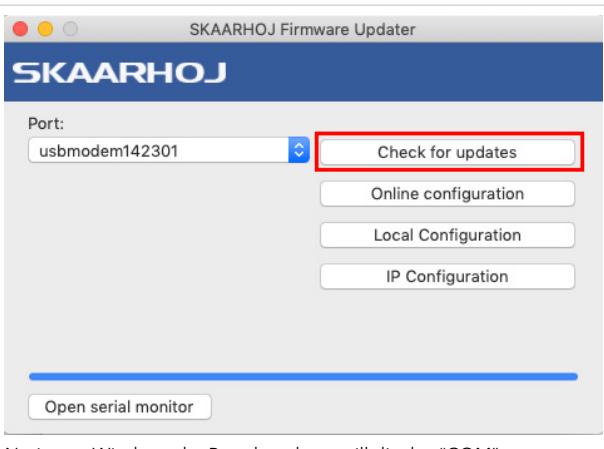
<p><b>Direct Selection of Default Config</b> If no custom configurations have been made on the RCPv2 you will be presented with this interface</p>  <p>Select the "Panasonic AU-EVA1" config and then go to the Firmware Application and press "Check for updates". This will generate a firmware file on our server and download it to the controller.</p> <p>If you want to use different IP addresses then alter "Network configuration" and press "Save Network Configuration" and then press "Check for updates" in the Firmware Application</p>	<p><b>Selection of Default Config</b> If custom configurations have been made on the RCPv2 you will be presented with this interface</p>  <p>Select the "Panasonic AU-EVA1" config in the drop down list. This will load the configuration on the configuration page. Then go to the Firmware Application and press "Check for updates".</p> <p>This will generate a firmware file on our server and download it to the controller.</p>
 <p>Notice on Windows the Port dropdown will display "COM" ports. Please see section "Port selection on Windows" in Installation and Operation manual <a href="https://www.skaarhoj.com/support/manuals/">https://www.skaarhoj.com/support/manuals/</a></p>	 <p>Notice on Windows the Port dropdown will display "COM" ports. Please see section "Port selection on Windows" in Installation and Operation manual <a href="https://www.skaarhoj.com/support/manuals/">https://www.skaarhoj.com/support/manuals/</a></p>

## Confirm Connection


If the RCPv2 have come preconfigured with the Panasonic Configuration or you have just successfully downloaded the Firmware to the RCPv2, then it is ready to control the camera *provided* you have followed the steps in the "Setting up Camera" section. It is important that the IP address you have set on the camera matches the IP address of the Panasonic EVA1 Device Core.

Connection to the camera can be confirmed from the Serial Monitor with the commands as shown below.

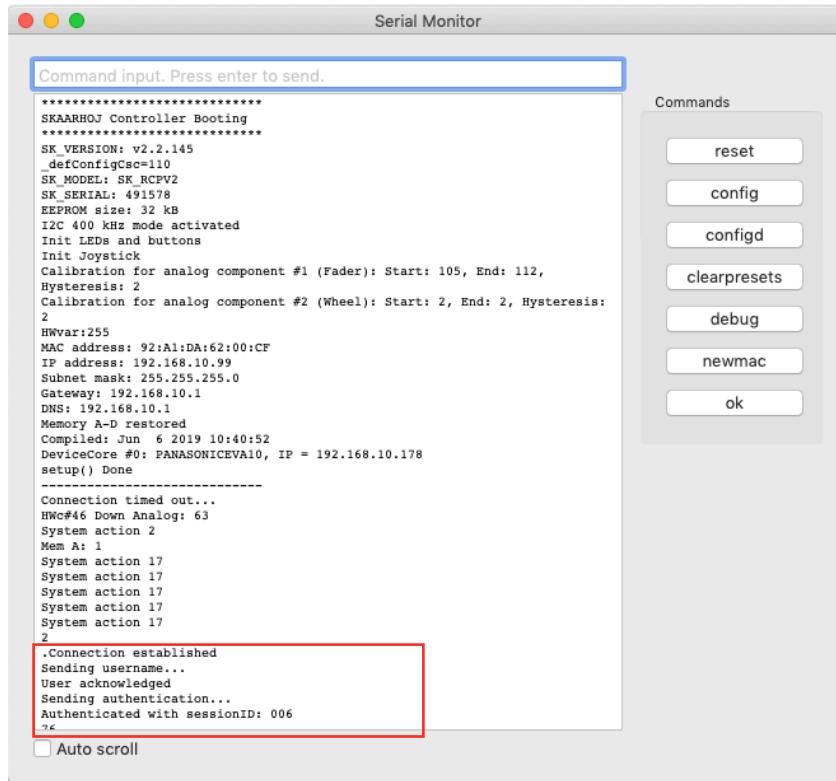


## Check IP Addresses on SKAARHOJ Controller

If you have issues connecting to the camera it is recommend to confirm that IP settings are correct. A way to confirm IP settings on the SKAARHOJ controller is using the Serial Monitor in the Firmware Application and check IP settings in the boot up process.

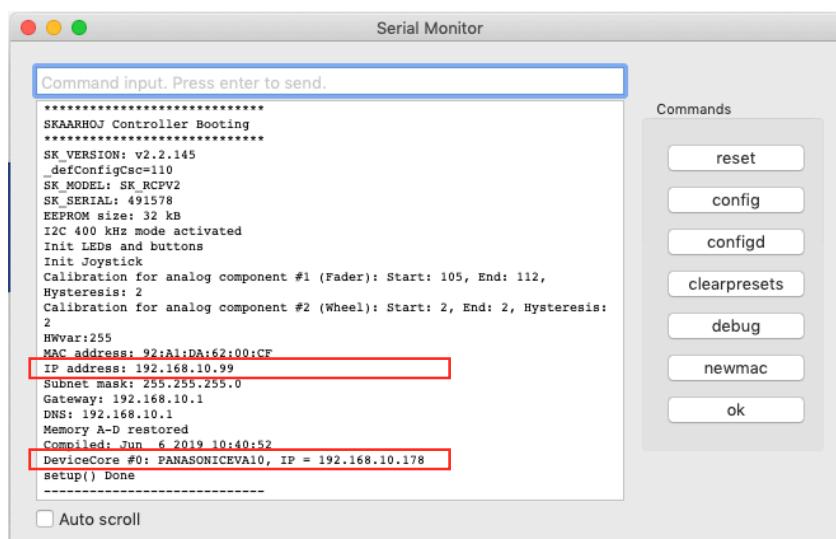

## Using different IP address on Panasonic AU-EVA1 camera

You can set a different IP address on the camera *as long* as the Device Core IP address is updated as well.  
 You can use the "IP Configuration" option in the Firmware Application to change the Device Core IP address.

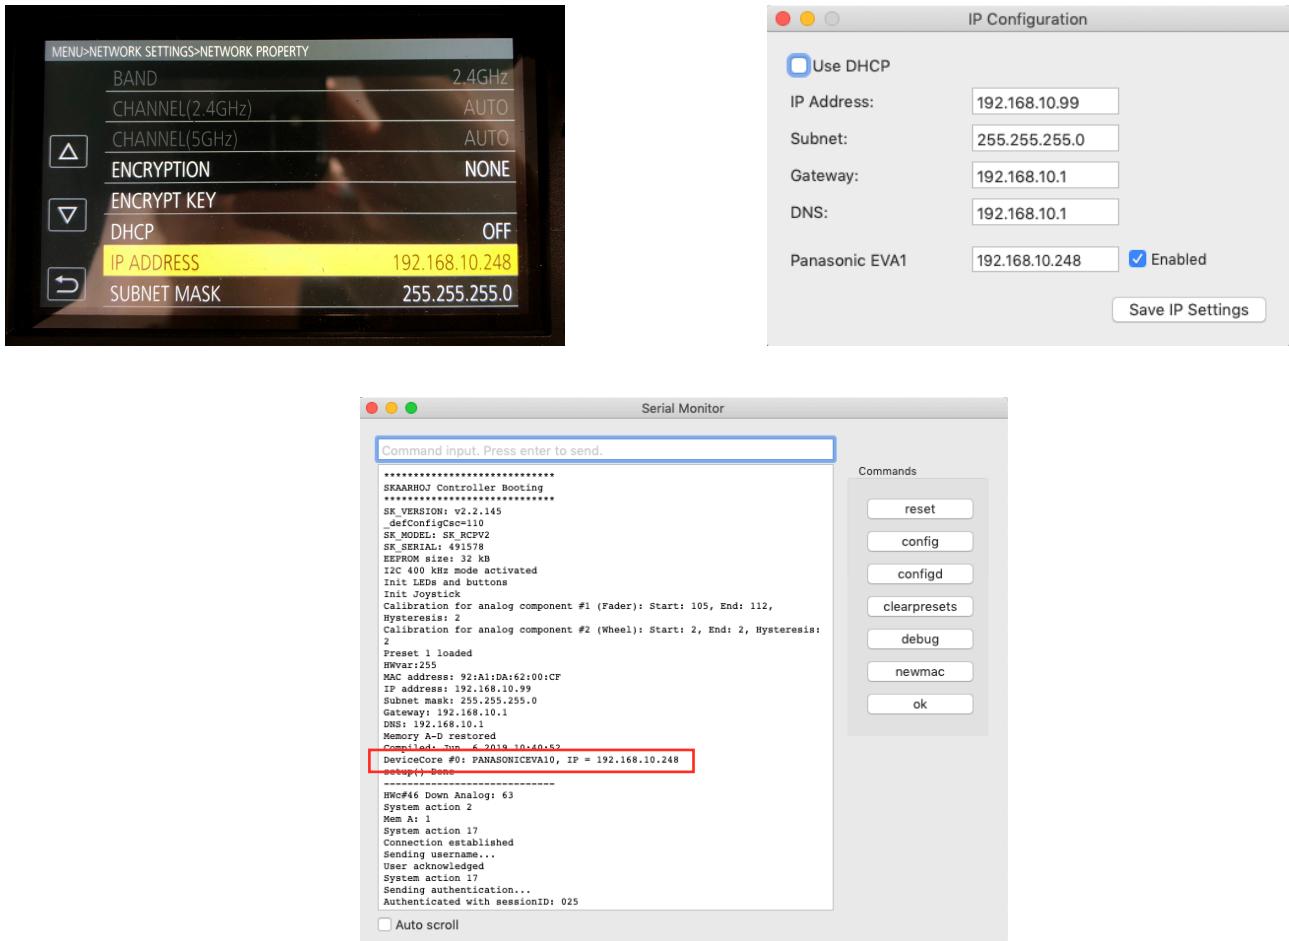

Debugging Connection between SKAARHOJ Controller and Camera

If IP settings are correct but the Account name is not correct the Serial Monitor will report "Camera Error: Wrong user"





If the Account name is correct but the password is not the Serial Monitor will report "Camera Error: Wrong User" after reporting that the user is acknowledged.



## Alternative way of Downloading and Installing the Firmware on a RCPv2

If you have issues using the Firmware Application to generate and installing the Firmware on your RCPv2 please follow these steps

- Press "Online Configuration" in the Firmware Application
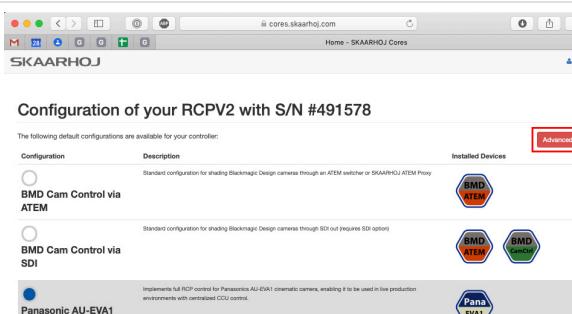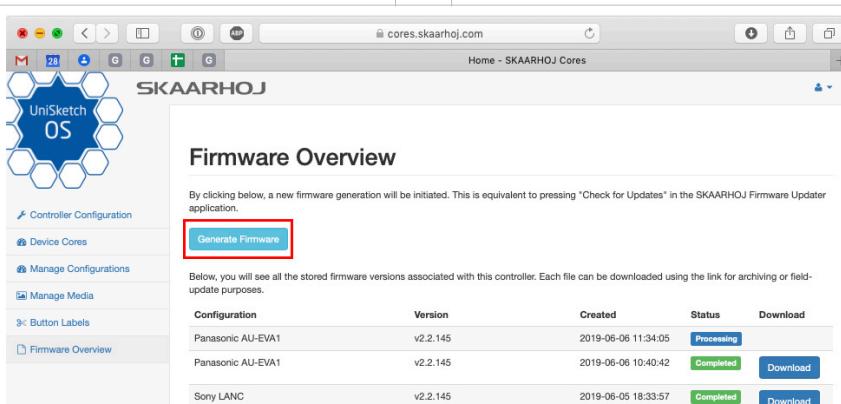
<p><b>Direct Selection of Default Config</b>  <i>If no custom configurations have been made on the RCPv2 you will be presented with this interface</i></p>  <p>Select the "Panasonic AU-EVA1" config and press "Advanced"</p>	<p><b>Selection of Default Config</b>  <i>If custom configurations have been made on the RCPv2 you will be presented with this interface</i></p>  <p>Select the "Panasonic AU-EVA1" config in the drop down list.</p>
 <p>Press the "Firmware Overview" tab and press "Generate Firmware"</p>	

# SKAARHOJ DEVICE CORES

The screenshot shows the SKAARHOJ Firmware Overview page. On the left is a sidebar with icons for Controller Configuration, Device Cores, Manage Configurations, Manage Media, Button Labels, and Firmware Overview. The main area has a title "Firmware Overview". A note says: "By clicking below, a new firmware generation will be initiated. This is equivalent to pressing "Check for Updates" in the SKAARHOJ Firmware Updater application." Below this is a table:

Configuration	Version	Created	Status	Action
Panasonic AU-EVA1	v2.2.145	2019-06-06 11:34:05	Completed	Download
Panasonic AU-EVA1	v2.2.145	2019-06-06 10:40:42	Completed	Download
Sony LANC	v2.2.145	2019-06-05 18:33:57	Completed	Download

After the firmware have been generated press "Download"

Open the Firmware Updater Application and use the "Load Firmware from file" in the option tab

The screenshot shows two applications. On the left, the "SKAARHOJ App" on Mac has a menu bar with Apple, SKAARHOJ App, File, Edit, Options, Help. The Options menu is open, showing "Load firmware from file" and "Show Log". On the right, the "SKAARHOJ Firmware Updater" on PC has a menu bar with Options, Help. The Options tab is selected, showing "Load firmware from file..." and "Show Log". Below the menu is a "Port" dropdown set to "COM3" and three buttons: "Check for updates", "Online configuration", and "Local configuration".

Important to select proper COM port. See "Port selection on Windows" in Installation and Operation manual <https://www.skaarhoj.com/support/manuals/>

Select the ".hex" firmware file. Naming might be different dependent on browser but it should be a .hex file to be selected.

The screenshot shows a file browser window titled "Downloads" with a list of files. It shows "Google Drev", "Google Drev A...", and "firmware.hex". The "firmware.hex" file is highlighted. Below the browser is the "SKAARHOJ Firmware Updater" application window. The "Port" dropdown is set to "usbmodem142301". The application has four buttons: "Check for updates", "Online configuration", "Local Configuration", and "IP Configuration". At the bottom, a message box says "Firmware successfully updated!" with a red border around it. There is also a blue progress bar at the bottom of the message box. Below the message box is a button labeled "Open serial monitor".

When done the Firmware Updater application reports "Firmware successfully updated"

## Setting up Controller

This section is only relevant if you are building a configuration from scratch.

The Device Core "Panasonic AU-EVA1" must be added to your controller

The Device Core *must* have the IP address matching, the one set on the camera it self (see "Setting up Camera" section).

Connection to the camera can be confirmed from the Serial Monitor with the command: *PanasonicEVA: Connected*

## SKAARHOJ DEVICE CORES

This is a overview of the actions implemented in the Device Core

✓  
Panasonic EVA1: Iris  
Panasonic EVA1: Auto Iris  
Panasonic EVA1: Pedestal  
Panasonic EVA1: Focus (Creep)  
Panasonic EVA1: Focus (Step)  
Panasonic EVA1: Focus (Fine)  
Panasonic EVA1: Focus (Binary)  
Panasonic EVA1: Zoom (Creep)  
Panasonic EVA1: Zoom (Step)  
Panasonic EVA1: Zoom (Fine)  
Panasonic EVA1: Zoom (Binary)  
Panasonic EVA1: ND Filter  
Panasonic EVA1: Record  
Panasonic EVA1: Color Settings  
Panasonic EVA1: Variable Shutter  
Panasonic EVA1: Shutter Mode  
Panasonic EVA1: Shutter  
Panasonic EVA1: Variable FR  
Panasonic EVA1: Frame Rate  
Panasonic EVA1: Auto White Balance  
Panasonic EVA1: Color Temperatur  
Panasonic EVA1: Auto Black Balance  
Panasonic EVA1: Exp Index  
Panasonic EVA1: Exp Index Gain  
Panasonic EVA1: Gamma Select  
Panasonic EVA1: Master Gamma  
Panasonic EVA1: Black Gamma Enable  
Panasonic EVA1: Black Master Gamma  
Panasonic EVA1: Black Gamma Range  
Panasonic EVA1: Master Knee Enable  
Panasonic EVA1: Knee Point  
Panasonic EVA1: Knee Slope  
Panasonic EVA1: Chroma  
Panasonic EVA1: Linear Matrix Enable  
Panasonic EVA1: Linear Matrix  
Panasonic EVA1: Color Correction Enable  
Panasonic EVA1: Color Correction  
Panasonic EVA1: Detail Enable  
Panasonic EVA1: Detail Coring  
Panasonic EVA1: Detail Master Detail  
Panasonic EVA1: Detail Frequency  
Panasonic EVA1: White Clip Enable  
Panasonic EVA1: White Clip Level  
Panasonic EVA1: Menu Display  
Panasonic EVA1: Menu Enter  
Panasonic EVA1: Menu Navigation  
Panasonic EVA1: User Switch  
Panasonic EVA1: Bars  
Panasonic EVA1: Red Tally

At this present time only a default shipping config with the EVA1 camera for the RCPv2 exist. We recommend only to control one camera per SKAARHOJ controller.

## Zoom + Focus

The Zoom + Focus control have been implemented on the base of a CANON CN-E 18-80MM T4.4LIS KAS S

Please notice if a Zoom in/out adjustment have been initiated on a SKAARHOJ controller and one try to zoom directly on the lens when this is in "servo AUTO mode" the SKAARHOJ controller will overrule adjustments being done on the lens directly.

Focus must be set to "AF" on the lens itself if focus adjustments should be done from the SKAARHOJ panel.

If a Focus near/far adjustments have been initiated on a SKAARHOJ controller (while AF is set) the SKAARHOJ controller will overrule adjustments being done on the lens directly.

## Iris

Iris must be set to "A" mode on the lens itself if iris adjustments should be done from the SKAARHOJ panel.

This is a table of actions for some of the actions in the Panasonic EVA1 Device Core.

<b>Zoom (Creep)</b>	Initiates a Creep Zoom in/out with speeds between -8 to +8  <i>Binary triggers:</i> Will only reflect the speed of the Creep Zoom value (-8 to +8)  <i>Pulse inputs:</i> Will cycle between -8 to +8. When -8 Creep Zoom out is at the highest speed. When +8 Creep Zoom in is at the highest speed. When 0 no zoom is initiated.  <i>Displays:</i> "Creep Zm/Speed of zoom"
<b>Zoom (Step)</b>	Zoom in/out with steps defined to a specific value. Used to quickly zoom to a desired range  #10 <b>Knob B</b>  Black Panasonic EVA1: Zoom (Coarse) ▾ Cam 1 ▾ +  Speed Limit: 1 Speed Limit: 2 Speed Limit: 3 Speed Limit: 4 Speed Limit: 5 Speed Limit: 6 Speed Limit: 7 Speed Limit: 8  INS CP ▾  Mem K Mem L Mem M Mem N  <i>Binary triggers:</i> Will only reflect the current zoom value in mm  <i>Pulse inputs:</i> Will zoom in/out with the given speed value Speed Limit 1: Small steps Speed Limit 8: Large steps  <i>Displays:</i> "Step Zm/Zoom range in mm"
<b>Zoom (Fine)</b>	Zoom in/out with small steps to a specific value zoom range  Black Panasonic EVA1: Zoom (Fine) ▾ Cam 1 ▾ +  <i>Binary triggers:</i> Will only reflect the current zoom value in mm  <i>Pulse inputs:</i> Will zoom in/out in small steps to set a specific zoom range. Only recommended to use for very small adjustments. Reacts slow if turned multiple times  <i>Displays:</i> "Fine Zm/Zoom range in mm"
<b>Zoom (Binary)</b>	Used to zoom in/out via buttons instead of a encoder  Black Panasonic EVA1: Zoom (Binary) ▾ Cam 1 ▾ Speed Limit: 5 ▾ ✓ Zoom In Zoom Out +  <i>Binary triggers:</i> Zoom in/out as long as a button is pressed and held down. Speed of the zoom is determined with the speed limiter.  <i>Pulse inputs:</i> Not implemented  <i>Displays:</i> "Zoom/[Out,In]"

# SKAARHOJ DEVICE CORES

## Focus (Creep)



Initiates a Creep Focus far/nearer with speeds between -6 to +6


*Binary triggers:* Will only reflect the speed of the Creep Focus value (-6 to +6)

*Pulse inputs:* Will cycle between -6 to +6. When -6 Creep Focus near is at the highest speed. When +6 Creep Focus far is at the highest speed. When 0 no zoom is initiated.

*Displays:* "Creep Fcs/Speed of focus"

Focus far/near with steps defined to a specific value. Used to quickly focus to a desired range

## Focus (Step)

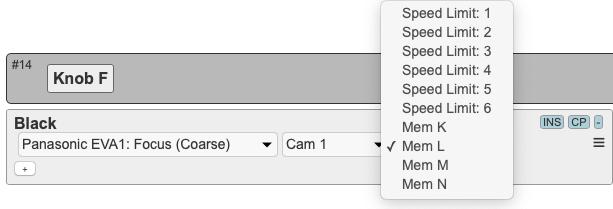

*Binary triggers:* Will only reflect the current focus value in m

*Pulse inputs:* Will focus far/near with the given speed value  
Speed Limit 1: Small steps  
Speed Limit 6: Large steps

*Displays:* "Step Fcs/Focus range in m"

## Focus (Fine)



Focus far/near with small steps to a specific value focus range


*Binary triggers:* Will only reflect the current focus value in m

*Pulse inputs:* Will focus far/near in small steps to set a specific focus value. Only recommended to use for very small adjustments. Reacts slow if turned multiple times

*Displays:* "Fine Fcs/Focus range in m"

Used to Focus far/near via buttons instead of a encoder

## Focus (Binary)

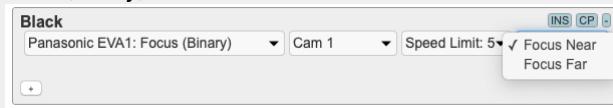

*Binary triggers:* Focus far/near as long as a button is pressed and held down. Speed of the focus is determined with the speed limiter.

*Pulse inputs:* Not implemented

*Displays:* "Focus/[Near,Far]"

## Wireless Control using the Panasonic AJ-WM50P Wireless Module







It should be noted that the supported case between a SKAARHOJ controller and the Panasonic AU-EVA1 camera is via a wired ethernet connection. This is to ensure a robust integration and to achieve a good user experience (stable connection, responsiveness etc). The Device Core have been optimised to work on a wired ethernet connection and this is the supported case.

The AJ-WM50P wires module have been tested *briefly* in order to determine if wireless control of the Panasonic AU-EVA1 camera is possible from a SKAARHOJ Controller. It is possible but there are drawbacks. A couple of comments:


- In the tested setup idle connection to the camera seemed somewhat stable but connection would still be lost even no interaction was done on the SKAARHOJ controller (most likely a timeout issue)
- If SKAARHOJ controller was used to transmit a lot of data such as moving the joystick quickly for iris control, connection would be lost
- Changing iris quickly could resort in feedback to the SKAARHOJ controller being delayed
- Delay in changing parameters on the camera was observed
- If connection was lost it would quickly reconnect

The configuration used for testing are shown below.

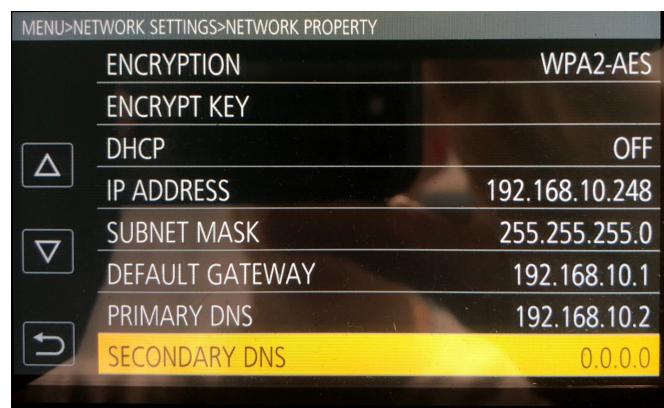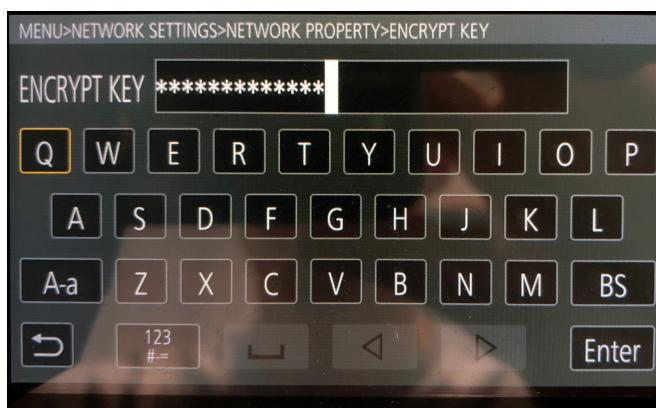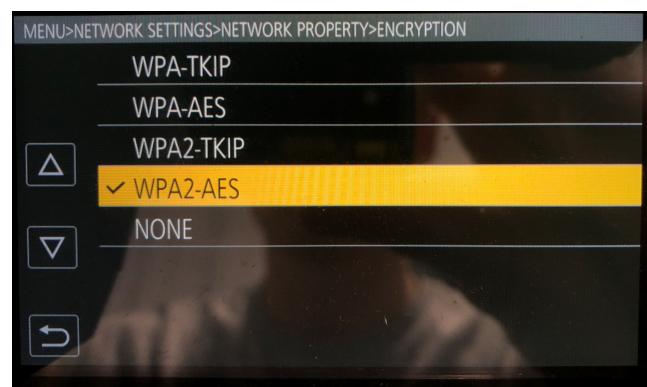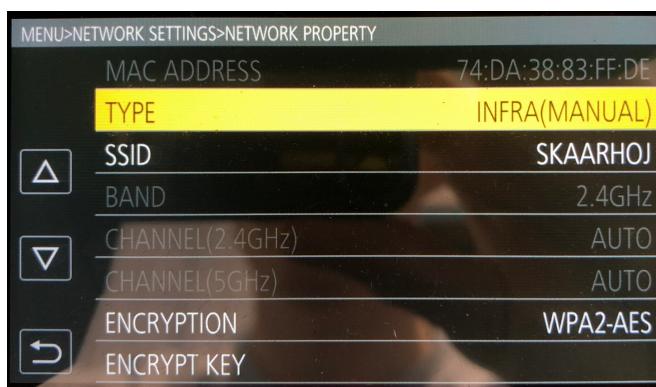

## SKAARHOJ DEVICE CORES

A video of the behaviour can be seen here: [https://github.com/SKAARHOJ/Support/raw/master/Manuals/Videos/RCPv2\\_Panasonic\\_AU-EVA1\\_Wireless\\_Test.MOV](https://github.com/SKAARHOJ/Support/raw/master/Manuals/Videos/RCPv2_Panasonic_AU-EVA1_Wireless_Test.MOV)

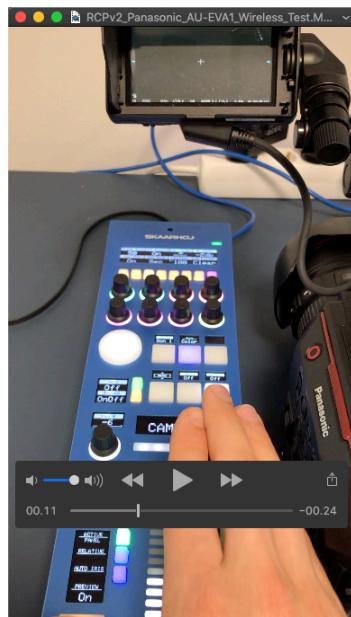

Panasonic have conducted a test themselves following the above method, and experienced a more stable behaviour.

## Tally

With the default configuration "Panasonic AU-EVA1" for the RCPv2 tally will be enabled on the camera from the DB9 connector (EXT I/O) directly on the RCPv2 panel.

### Integrating Tally directly via IP from Video Switchers

It is possible to integrate tally directly from a Video Switcher we have a Device Core for. In the case of a ATEM Switcher the following steps needs to be taken to achieve Tally control on the camera:

- Add an ATEM Device Core to the configuration
- Add actions to the Hardware Component "Controller" like illustrated below (remember to set "Hold Down"

The following additional states are enabled in the configuration below. States can be hidden to ease the configuration.

Matrix  Exp  WB/Detail  Gamma  Color  Zoom/Focus

Devicecore actions can be hidden from the select lists as well to make configuration faster. (Note: This does not work in Safari)

Panasonic EVA1 Actions  BMD ATEM Actions  System Actions

#48	Controller	Controller
<b>Black</b> BMD ATEM: Program Src M/E 1 1 and System: Synthesized Trigger Binary Prev. action and Panasonic EVA1: Red Tally Cam Mem A Hold Down		
<input type="button" value="Save Settings"/>		

It is also recommend to enable Tally feedback on the "ID Tally" bar via the following action:

#30	ID Tally	ID Tally
<b>Black</b> BMD ATEM: Video Tally 1 Prog/Prev		