

NEXA

JIMNY

OWNER'S MANUAL

- Refer for vehicle usage at all times
- Contains Warranty policy and Important Information On Safety, Operation & Maintenance

Part No. 99011M80T03-74W

July, 2024

ENG

This owner's manual applies to the JIMNY series.



NOTE: The illustrated model is one of the JIMNY series.

Copyright © Maruti Suzuki India Limited. 2024 All Rights Reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

FOREWORD

The digital Owner's Manual is an essential part of your vehicle a rich document which familiarizes you with the vehicle by providing information such as features, warnings, operations and equipment description etc. Please read this manual carefully before operating your new MARUTI SUZUKI vehicle and review the manual from time to time. It is recommended to download this manual (from "Maruti Suzuki Rewards" mobile application with your registered mobile number) and save a soft copy of the same for easy access all times. Please visit MARUTI SUZUKI authorised workshop for availing any service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle.

MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

⚠ WARNING/ ⚠ CAUTION/NOTICE/ NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

⚠ WARNING

Indicates a potential hazard that could result in death or serious injury.

⚠ CAUTION


Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

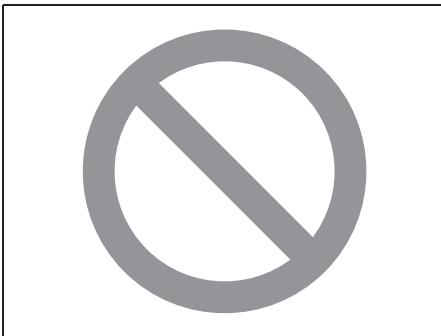

MODIFICATION WARNING

⚠ WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorized workshop or qualified service technician for advice on installing such mobile communication equipment.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

“WARNING”



Vehicle may break-down, meet with an accident or catch fire due to

1. Installation of
 - High wattage bulbs
 - Non genuine lamps / horns
 - Modified suspension / wheels
 - Non genuine parts / accessories etc.
2. Retrofitment of LPG / CNG fuel systems/kits.
3. Usage of domestic LPG.
4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may break-down or engine may fail due to

1. Water entry into the engine (which may lead to hydrostatic lock).
2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.

NOTE:
IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

“CAUTION”

1. Retro-fitment of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
3. Usage of domestic LPG for running vehicles is prohibited as per law.
4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning.(reduced contact area between tire and road due to presence of water)
6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
9. Always wear seat belt at all the times.
10. Do not use mobile phone while driving.
11. Avoid Smoking in the car, live bud thrown in car may cause fire.
12. Do not put any body part under the vehicle when it is supported on a Jack.
13. Do not use non-genuine accessories in your vehicle.
14. Do not fit accessories from unauthorized workshops/sources.
15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
19. Do not check the engine room / open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
20. Avoid driving when vehicle has met with an accident . Before driving, Please contact with authorized MSIL dealership.

To experience and use the Digital Owner's Manual, download Maruti Suzuki app



Maruti Suzuki Rewards app ensures a hassle free car ownership experience. Get easy access to all the services and information you need by downloading the app



How to download Owners manual from Maruti Suzuki application

Step 1: Download “Maruti Suzuki Rewards” application from apple app store / google play store on your mobile phone

Step 2: Input registered mobile number and the OTP received from SMS

Step 3: Select “S-Assist BOT” icon and click “View Owner’s Manual” to access digital Owner’s Manual

Step 4: Click “Down Arrow” download and save Owner’s Manual on your mobile phone

Now, the Owner's Manual is available on your mobile phone for reference at all times.

(For assistance, contact Maruti Suzuki authorised workshop)

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorised dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised workshop.

(2) Term:

The term of the warranty shall be Thirty-Six (36) months or 1,00,000 kilometers (whichever occurs first) from the date of invoice to the first owner.

NOTE:

Maruti Suzuki offers warranty for the below parts in vehicle, if equipped, as follows:

- *Lithium-ion battery, Integrated Starter Generator (ISG), Hybrid ECU, Inverter / Converter Unit, Power Management ECU - Sixty (60) months or 1,00,000 kilometers (whichever occurs first).*
- *Hybrid Electric Vehicle (HEV) Battery- Ninety six (96) months or 1,60,000 kilometers (whichever occurs first).*

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labor, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, Consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.

(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer.)

-
- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding - not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
 - (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
 - (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
 - (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.
 - (i) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
 - (j) Any vehicle which has not received the service inspections prescribed in this Owner's Manual and Service Booklet.
 - (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorised workshop.
 - (l) Any vehicle which has been used for purposes other than what it was designed for.
 - (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
 - (n) Insignificant defects which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
 - (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discolouration, fading, deformation or blurring and fabric discolouration.
 - (p) Installation and usage of domestic LPG gas/LPG Cylinder.
 - (q) V-belts, hoses and gas leaks.
 - (r) Any vehicle retrofitted with LPG/CNG kits.
 - (s) Repainting including patchwork, bodywork and mouldings and interior trims.
 - (t) Corrosion, rusting of body parts and/ or components.
 - (u) Any vehicle on which odometer has been changed unauthorisedly or odometer reading has been modified/ tampered with/ or not matching the service records.
 - (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
 - (w) Any damage(s) caused to vehicle including battery/ tyre due to parking of the vehicle in idle condition for long duration of time periods.
 - (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
 - (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorised workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Responsibilities:

NOTICE

The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorised workshop all the service inspections specified in the Owner's Manual described in "INSPECTION AND MAINTENANCE" SECTION".
- Should you resell the vehicle, please guide the new users/ owners to download this manual (from "Maruti Suzuki Rewards" mobile application with your registered mobile number). Also the soft copy of the manual must be passed on to new users/ owners when resold or otherwise transferred.

If the Owner's Manual is lost due to any reason, the owner or user may download a soft copy of the same (from "Maruti Suzuki Rewards" mobile application with the mobile number) and save it for easy access at any point of time.

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.

NOTE:

Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.

EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities (**New Delhi, Kolkata, Mumbai and Chennai**) with effect from July 1st, 2001.

Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of invoice to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

Conditions:

1. Under Emission Warranty, Warranty claims will be admitted for a prima-facie examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
2. The warranty claims will only be accepted after examination carried out by Maruti Suzuki or Maruti Suzuki authorised workshop which leads to firm conclusions that the
 - a) Original settings have not been tampered in any case.
 - b) Part (as given in Annexure - A) has a manufacturing defect.
 - c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.

3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and Maruti Suzuki authorised workshop and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and Maruti Suzuki authorised workshop has the right to charge all, or part of the cost of such examination.
4. Under Emission Warranty, the parts (as given in Annexure - A) will be changed free of cost, but the consumables will be charged as per actual.
5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and Maruti Suzuki authorised workshop will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
6. Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
7. Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest Maruti Suzuki authorised workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki authorised workshop.
8. Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
9. Emission Warranty will not be affected by the change of owner, provided all the documents are available.

-
10. All maintenance actions (as specified in the Owner's Manual need to be followed for emission warranty).
 11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The records/receipts (for the maintenance of the vehicle as per maintenance schedule specified in the Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

NOTE:

To keep the engine running at idle speed (for strong hybrid model, if equipped) switch to maintenance mode by performing following steps within 60 seconds:

- Turn the ignition switch to ON
- Move the shift lever to P or select park (P) and fully depress the accelerator pedal twice
- Move the shift lever to N or select neutral (N) and fully depress the accelerator pedal twice
- Move the shift lever to P or select park (P) and fully depress the accelerator pedal twice.
- Start the engine by turning the ignition switch ON (READY) while depressing the brake pedal.
- Check that the 2WD maintenance mode message is displayed on the multi-information display.
- Post completion of test:
- Turn the Ignition Switch OFF and wait for at least 30 seconds, the hybrid system will turn off.
- After deactivating maintenance mode, turn the Ignition Switch ON and check corresponding message is no longer displayed.

Conditions under which the Emission Warranty is not APPLICABLE

1. In the absence of valid PUC certificate.
2. Vehicle not serviced from Maruti Suzuki authorised workshop as per the schedule specified in the Owner's Manual.
3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
4. Use of non MSGP (Maruti Suzuki Genuine Part).
5. Vehicle that has been tampered with.
6. Tampering with odometer so that the actual kilometer reading cannot be determined.
7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).


Annexure - A

List of parts (if applicable) covered under Emission Warranty

1. Fuel Injection Assembly, Pressure Regulator, Throttle Body Assembly.
2. ECM (Electronic Control Module).
3. Intake Manifold.
4. EGR valve.
5. Ignition Coil.
6. Canister Assembly.
7. Vapour Liquid Seperator.
8. Fuel Tank and Filler Cap.
9. PCV (Positive Crankcase Ventilation) Valve.
10. Oil Filler Cap.
11. Catalytic Convertor.
12. Exhaust Manifold.
13. All Fuel Injection System related Sensors.
14. High Pressure Fuel Pump.
15. Glow Plug.
16. Glow Plug Controller.

SERVICE STATION GUIDE

1. Engine hood (see section 7)
2. Engine coolant (see section 9)
3. Windshield washer fluid/
Headlight washer fluid (see section 9)
4. Engine oil dipstick (see section 9)
5. Lead-acid battery (see section 9)
6. Automatic transmission fluid dipstick
(see section 9)
7. Fuel (see section 7)
8. Tyre pressure (see Tyre Information
Label on driver's door lock pillar)
9. Tyre changing tools (see section 10)
10. Spare tyre (see section 10)

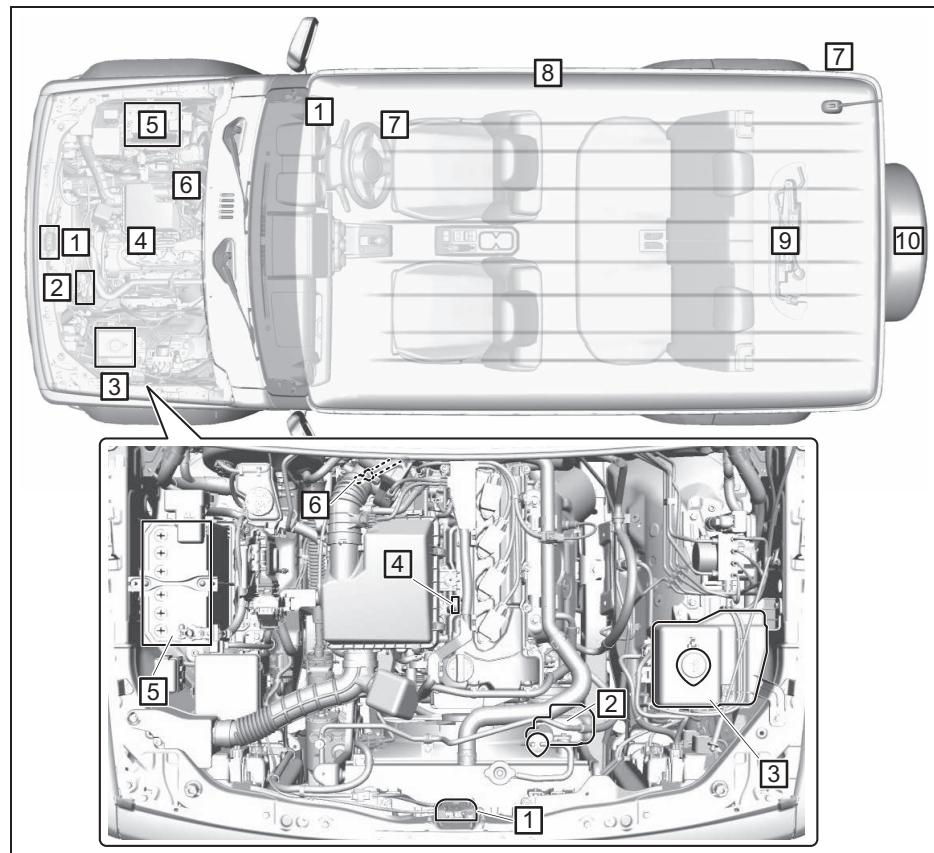

80T000010


TABLE OF CONTENTS

QUICK GUIDE	1
FOR SAFE DRIVING	2
BEFORE DRIVING	3
INSTRUMENT CLUSTER	4
OPERATING YOUR VEHICLE	5
ADVICE FOR YOUR DRIVING	6
OTHER CONTROLS AND EQUIPMENT	7
VEHICLE LOADING AND TOWING	8
INSPECTION AND MAINTENANCE	9
EMERGENCY SERVICE	10
APPEARANCE CARE	11
SPECIFICATIONS	12
SERVICE NETWORK	13

MEMO

QUICK GUIDE

Illustrated Table of Contents	1-1
Warning Lights and Indicators	1-9
Warning Buzzer	1-16
FAQ	1-24

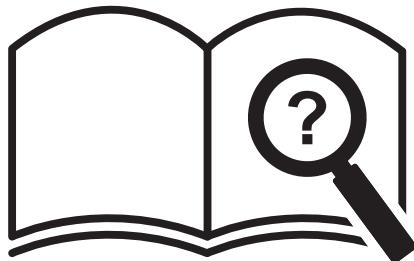


59RN00020

QUICK GUIDE

Illustrated Table of Contents

Exterior

- (1) Fuel Filler Cap (P.7-1)
- (2) Door Locks (P.3-1)
- (3) Outside Rearview Mirror (P.2-9)
- (4) Windshield Wiper (P.3-27, 9-42)
- (5) Tailgate (P.3-4)
- (6) Rear Window Wiper (P.3-29, 9-44)
- (7) High-mount Stop Light (P.9-38)
- (8) Radio Antenna (P.7-32)
- (9) Door (P.3-1)
- (10) Side turn signal light on fender (P.9-36)
- (11) Front Fog Light (if equipped) (P.3-24, 9-42)
- (12) Front Turn Signal Light (P.9-35)
- (13) Headlight (P.9-34)
- (14) Position light (P.9-35)
- (15) Engine Hood (P.7-4)
- (16) Tail / Brake Light (P.9-37)
- (17) Rear Turn Signal Light (P.3-25, 9-37)
- (18) Reversing Light (P.9-37)
- (19) Parking sensor (P.5-47)
- (20) License Plate Light (P.9-38)
- (21) Rearview Camera (P.5-50)
- (22) Spare Tyre (P.10-7)

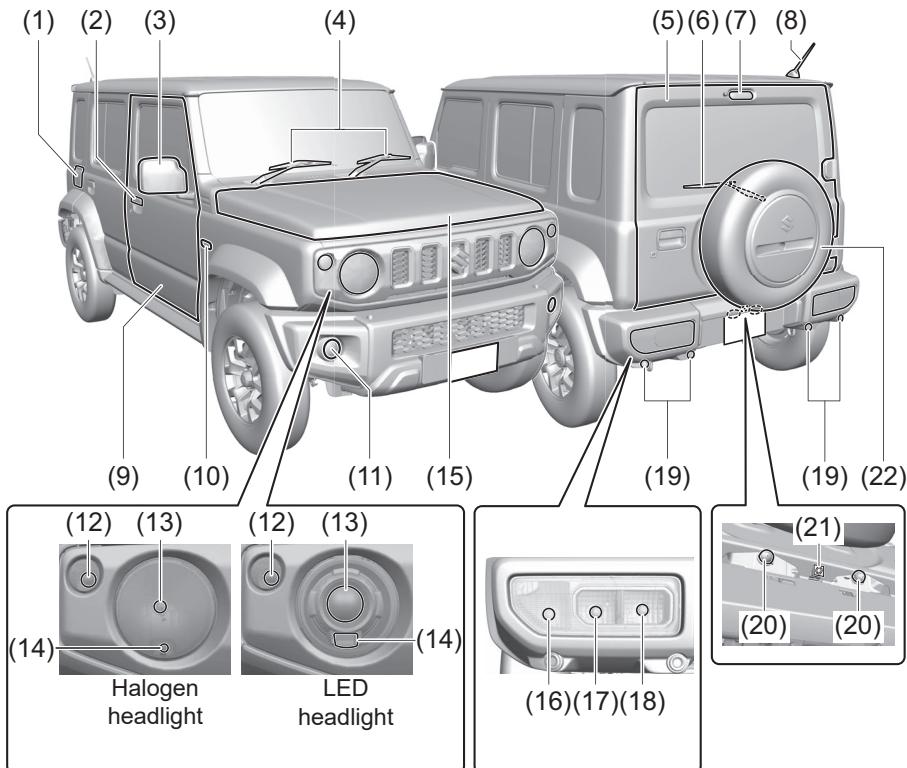

80T010030

Interior, Side


- (1) Inside Rearview Mirror (P.2-8)
- (2) Front Interior Light (P.7-7, 9-39)
- (3) Sun Visor (P.7-6)
- (4) Warning Label for Front Passenger's Front Airbag (P.2-41) *1, *2
- (5) Side Curtain Airbag (P.2-42)
- (6) Seat Belt (P.2-18)
- (7) Center Interior Light (P.7-8, 9-39)
- (8) Front Seat (P.2-5)
- (9) Side Airbag (P.2-39)
- (10) Front Seat Back Pocket (P.7-15)

*1: Be sure to read the detailed information in the target page before using a child restraint system.

*2: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.



72M00150

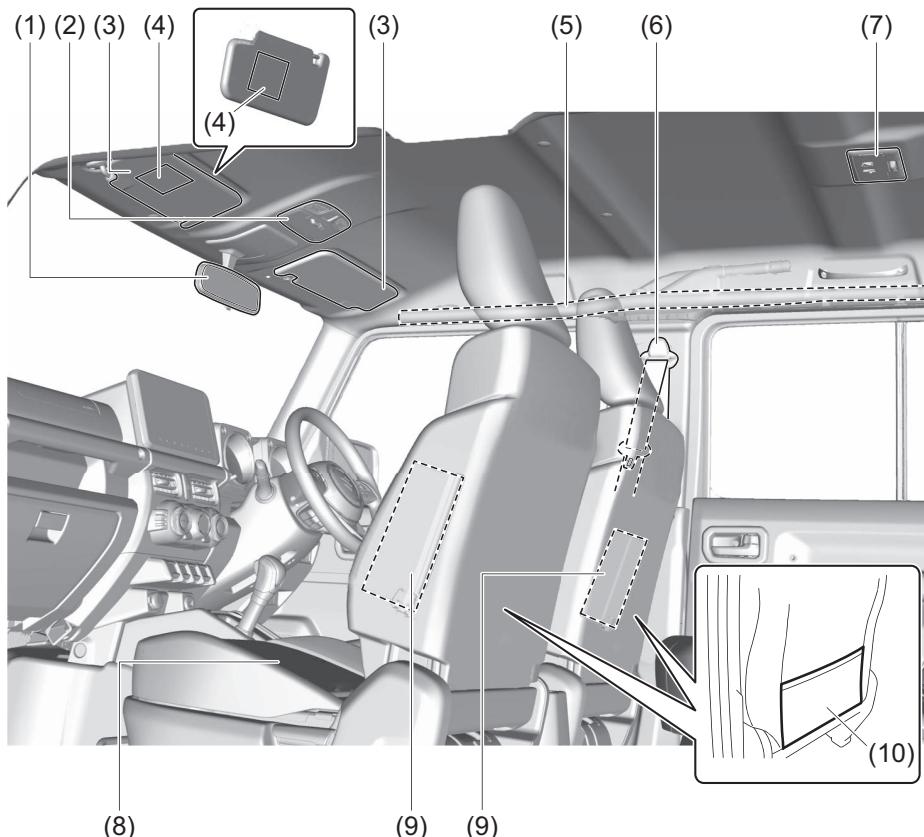


80T010040

QUICK GUIDE

Interior, Rear


- (1) Assist Grip (P.7-13)
- (2) Seat Belt (P.2-18)
- (3) Accessory Socket (if equipped)
(P.7-9)
- (4) Luggage Compartment Light (P.7-9)
- (5) Rear Seat (P.2-10)

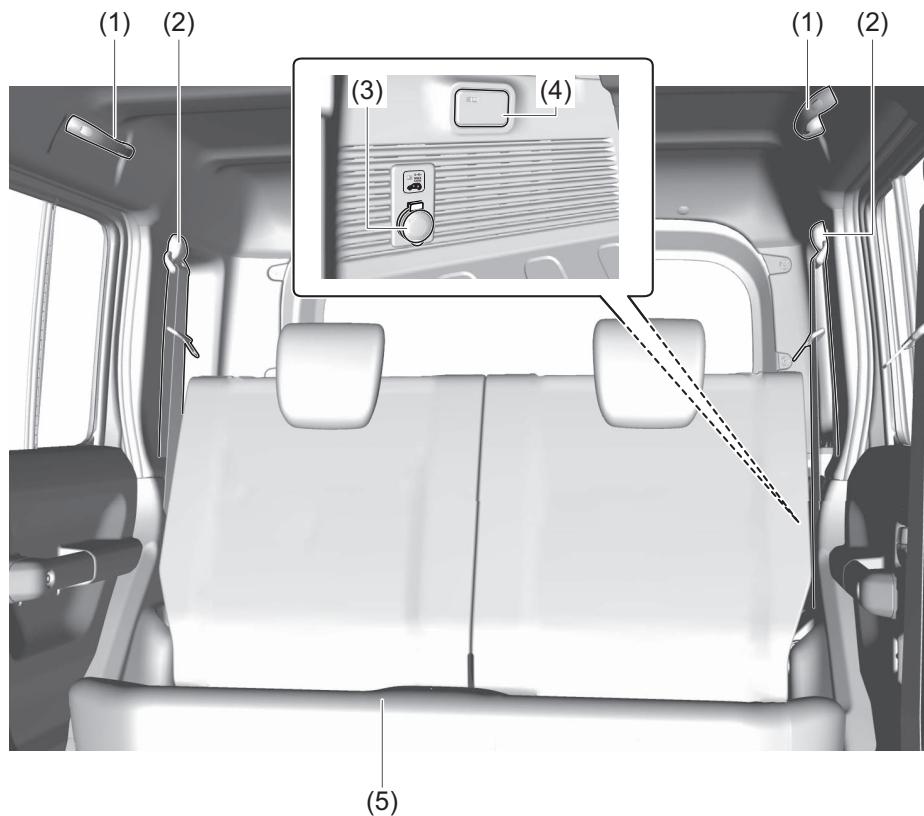

80T010070

Interior, Front


- (1) Glove Box (P.7-13)
- (2) Front Passenger's Front Airbag (P.2-41)
- (3) USB Socket (P.7-15)
- (4) Driver's Front Airbag (P.2-41)
- (5) Engine Hood Release Handle (P.7-4)
- (6) Manual Heating and Air Conditioning System (P.7-19)
- (7) Automatic Heating and Air Conditioning System (P.7-25)
- (8) Accessory Socket (P.7-9)
- (9) Parking Brake Lever (P.5-29)
- (10) Transfer Lever (P.5-39)
- (11) Electric Window Control
(Rear passenger's door) (P.3-19)
- (12) Window Lock Switch (P.3-20)
- (13) Fuel Lid Opener Lever (P.7-1)

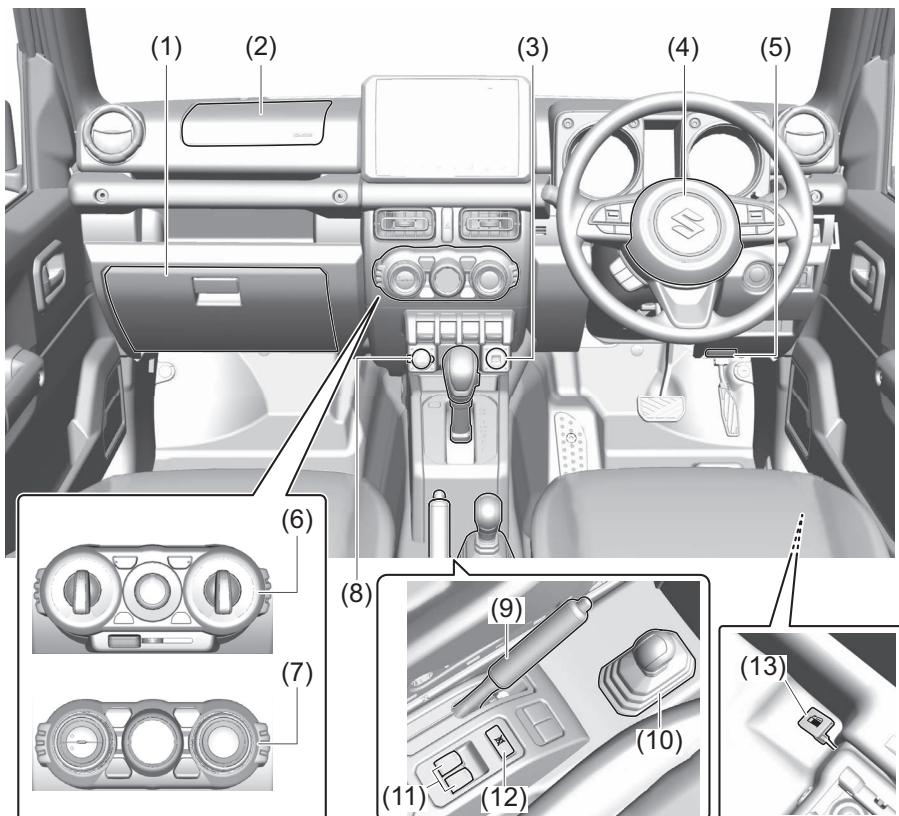

QUICK GUIDE

Instrument Panel 1


- (1) Heated Rear Window Switch (Automatic Heating and Air Conditioning System) (P.3-30)
- (2) Heated Rear Window Switch (Manual Heating and Air Conditioning System) (P.3-30)
- (3) Windshield Wiper and Washer Lever (P.3-27)/Rear Window Wiper/Washer Switch (P.3-29)
- (4) Remote Audio Controls (P.7-33)
- (5) Instrument Cluster (P.4-1)
- (6) Cruise Control Switches (if equipped) (P.5-45)
- (7) Lighting Control Lever (P.3-21)/ Turn Signal Control Lever (P.3-25)
- (8) Hazard Warning Switch (P.3-26)
- (9) Hands-free switch (P.7-34)
Voice recognition switch (if equipped) (P.7-34)
- (10) Tilt Steering Lock Lever (P.2-7)
- (11) Engine Switch (vehicle with keyless push start system) (P.5-5)
- (12) Ignition Switch (vehicle without keyless push start system) (P.5-3)

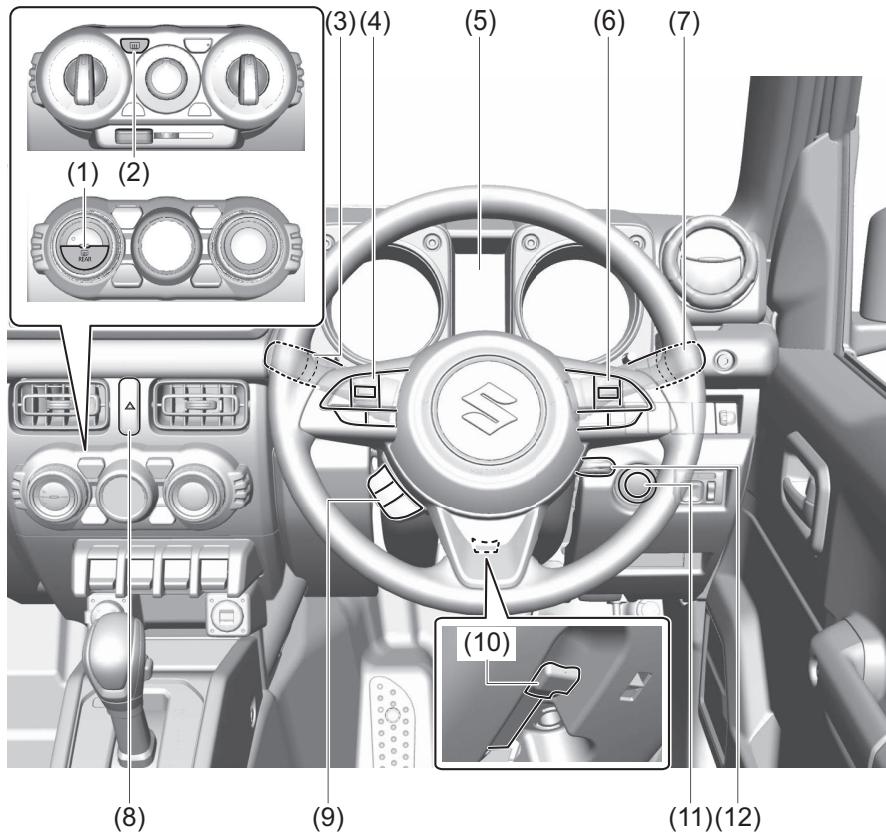

80T010130

Instrument Panel 2

- (1) ENG A-STOP OFF Switch
(P.5-26)
- (2) Headlight Washer Switch
(if equipped) (P.3-25)
- (3) Headlight Leveling Switch (P.3-24)
- (4) Electric Window Control (Passenger's door) (P.3-19)
- (5) ESP® OFF Switch (P.5-58)
- (6) Hill Descent Control Switch (P.5-59)
- (7) Electric Window Control
(Driver's door) (P.3-18)
- (8) Electric Mirror Control (P.2-9)

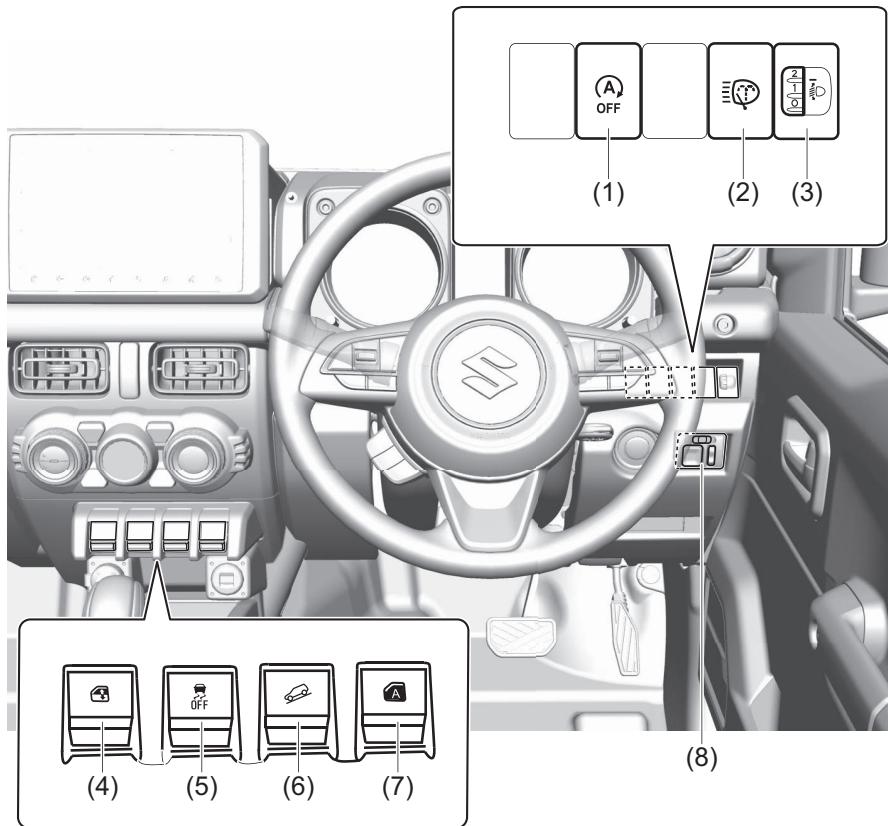


80T010140

QUICK GUIDE

Luggage Compartment

- (1) Luggage Compartment Board
- (2) Wheel Wrench (P.10-4)
- (3) Jack Handle (P.10-4)
- (4) Jack (P.10-4)

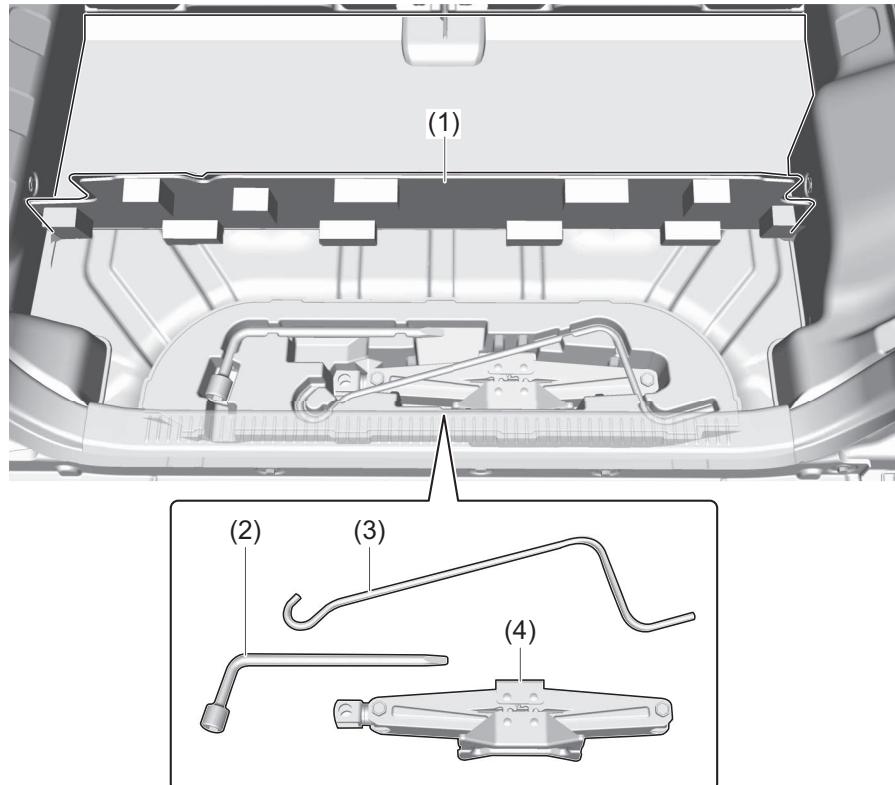



80T010170

Key

(1) Keyless Push Start System Remote Controller (P.3-10)
Keyless Push Start System (P.5-10)
Starting Engine (P.5-15)

(2) Key (P.3-1)
Door Locks (P.3-1)

(3) Keyless Entry System Transmitter
(P.3-6)
Starting Engine (P.5-13)
Key (P.3-1)
Door Locks (P.3-1)

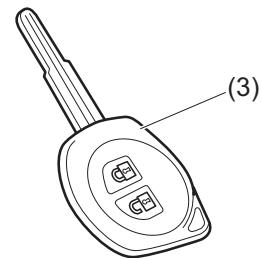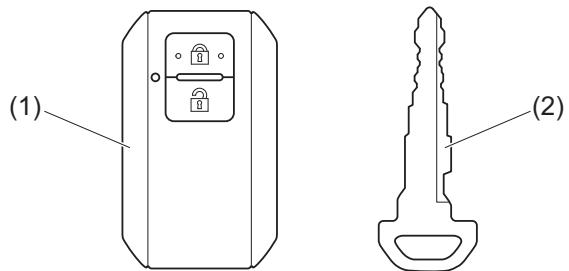


55T010010

QUICK GUIDE

Warning Lights and Indicators

Warning Lights

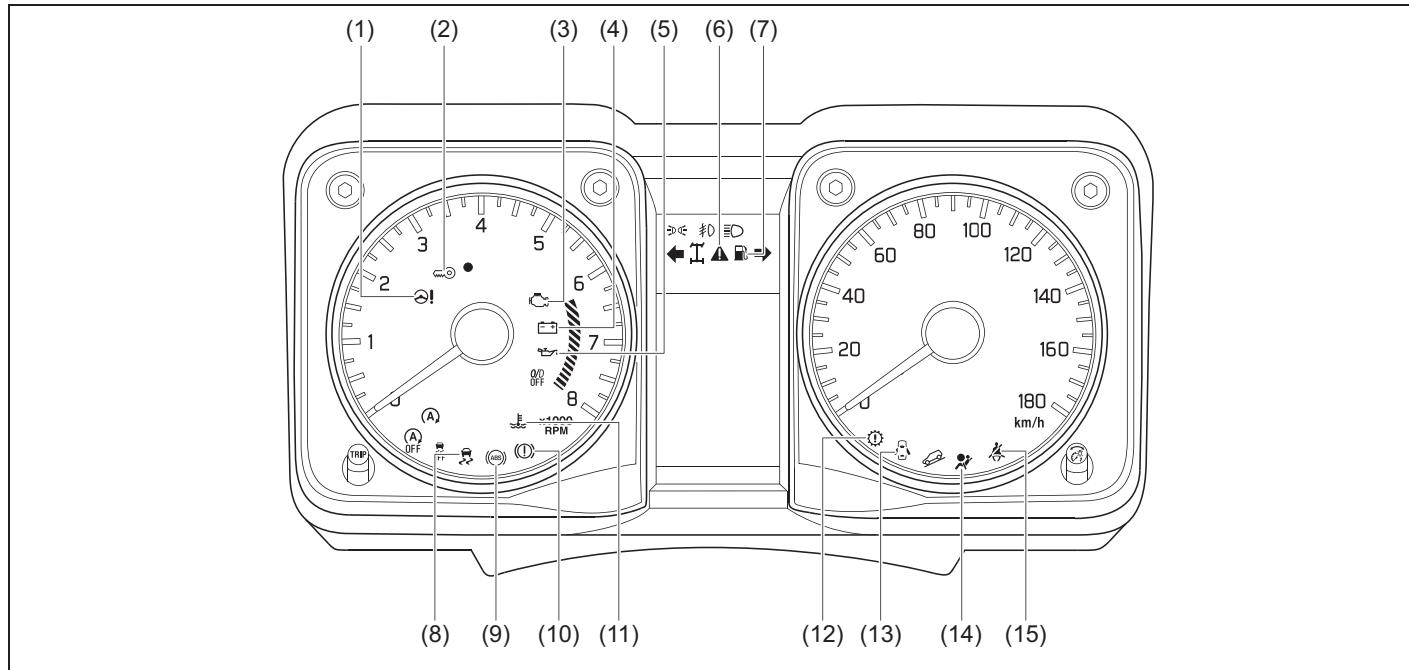

80TM01001

- If a warning light continues to be lit or is blinking, there may be a problem with the vehicle or the system. Carefully read the following reference information and consult with a Maruti Suzuki authorized workshop.
- It is considered normal that warning lights and indicators marked with an asterisk (*) are lit when turn the ignition switch to "ON" position or pressing the engine switch to change the ignition mode to ON (i.e., high engine coolant temperature warning light initially lights up in red). If such lights do not light up, consult with a Maruti Suzuki authorized workshop.
- For the ENG A-STOP system, there is the particular condition that a warning light or an indicator is lit.

Warning light		Color	Name
(1)		*	Orange Electric Power Steering Light
(2)		*	Orange Immobilizer System Warning Light
(3)		*	Orange Malfunction Indicator Light
(4)		*	Red Charge Warning Light
(5)		*	Red Engine Oil Pressure Warning Light
(6)		*	Orange Master Warning Indicator Light


QUICK GUIDE

Warning light		Color	Name
(7)		Orange	Low Fuel Warning Light
(8)		*	Orange ESP® Warning Light
(9)		*	Orange Anti-lock Brake System (ABS) Warning Light
(10)		*	Red Brake System Warning Light
(11)		*	Red High Engine Coolant Temperature Warning Light
(12)		*	Orange Transmission Warning Light (Automatic Transmission models)
(13)		Red	Open Door Warning Light
(14)		*	Red Airbag Warning Light

Warning light		Color	Name
(15)		Red	Driver's Seat Belt Reminder Light / Front Passenger's Seat Belt Reminder Light
			Rear Passenger's Seat Belt Reminder Light (if equipped)

QUICK GUIDE

Indicators

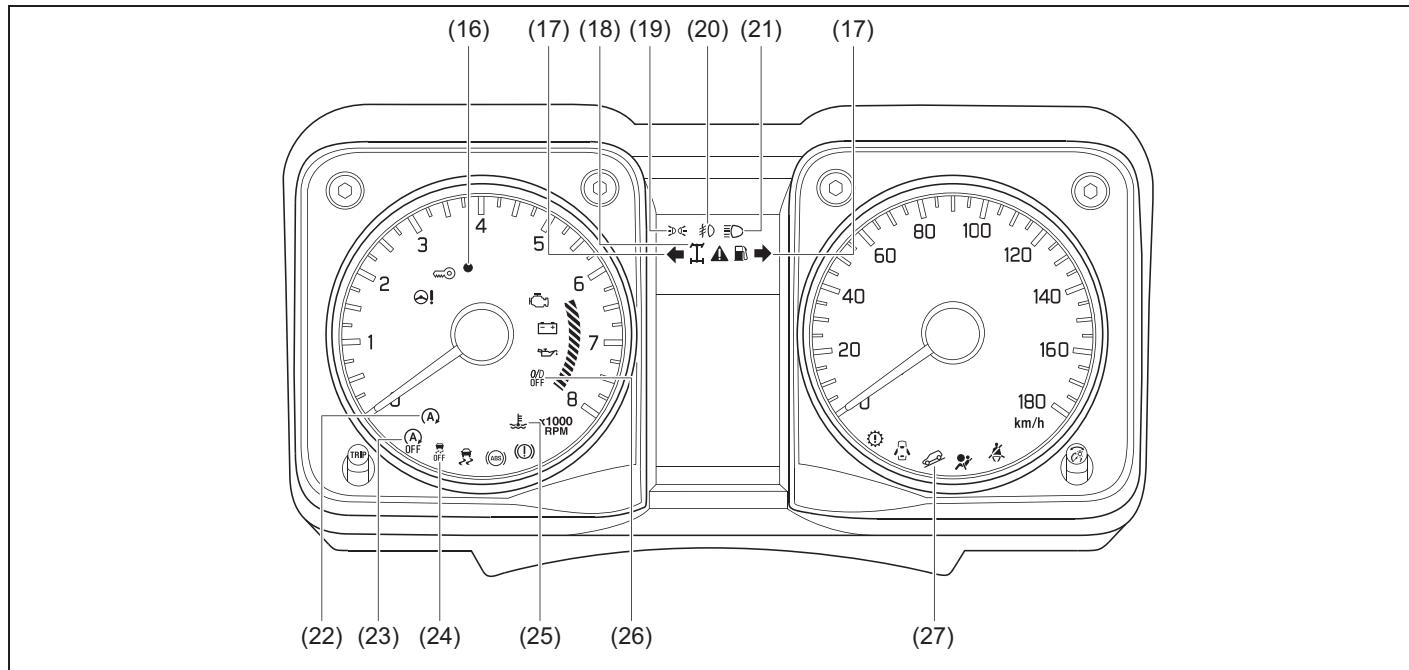

80TM01002

Indicator		Color	Name
(16)		Red	Security System Indicator
(17)		Green	Turn Signal Indicators
(18)		*	4WD Indicator Light
(19)		Green	Illumination Indicator Light
(20)		Green	Front Fog Light Indicator Light (if equipped)
(21)		Blue	Main Beam (High Beam) Indicator Light
(22)		*	ENG A-STOP Indicator Light
(23)		*	ENG A-STOP OFF Indicator Light

QUICK GUIDE

Indicator		Color	Name
(24)		*	Orange ESP® OFF Indicator Light
(25)			Blue Low Engine Coolant Temperature Light
(26)			Amber “O/D OFF” Indicator Light (for Automatic Transmission models)
(27)		*	Green Hill Descent Control Indicator Light

Warning Buzzer

- *1: The master warning  in the instrument cluster blinks. At the same time, the message will be shown on the information display to inform the driver of the vehicle condition and the remedy.
- *2: The message will be shown on the information display to inform the driver of the vehicle condition and the remedy.

For All model

When	Warning buzzer	Instrument cluster	Cause and remedy
When one of the doors (including engine hood and tailgate) is opened	Interior buzzer • Beeping at short intervals for approx. 10 seconds	 Blinks every 2 seconds	The security system warning is being activated. You can stop the warning by either of the following operations: <ul style="list-style-type: none"> Unlock the doors using the keyless entry transmitter or keyless push start system remote controller or the request switch. Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON.
When the ignition switch is in "ON" position or the engine switch is pressed to change the ignition mode to ON	Interior buzzer • Beeping 4 times	 Blinks rapidly for approx. 8 seconds	Indicates that a security system has been activated while the vehicle has been parked; check the vehicle to make sure that it is not broken into or nothing is stolen.
	Interior buzzer • Chime (once)	*1	The steering wheel lock has not been released. With load not applied, turn the steering wheel to the left or right so as to turn the ignition switch or press the engine switch again.

QUICK GUIDE

When	Warning buzzer	Instrument cluster	Cause and remedy
When the ignition switch is in "ON" position or the engine switch is pressed to change the ignition mode to ON	Interior buzzer	 Lights up	The brake fluid is insufficient or the brake system may be faulty. consult with a Maruti Suzuki authorized workshop.
	<ul style="list-style-type: none"> • Chime (once) 		
When driving	Interior buzzer	 Lights up	The fuel level is low. Refuel soon.
	<ul style="list-style-type: none"> • Chime (once) 		
	Interior buzzer	 Blinks <small>*1</small>	The driver does not wear his/her seat belt. Stop the vehicle in a safe place and wear your seat belt. The front passenger does not wear his/her seat belt. Wear the seat belt.
	<ul style="list-style-type: none"> • Beeping at short intervals for approx. 95 seconds 		The rear passenger does not wear his/her seat belt. Wear the seat belt (if equipped).
	<ul style="list-style-type: none"> • Interior buzzer 	 Lights up <small>*1</small>	The parking brake has not been released. Stop the vehicle in a safe place and release the parking brake.
	<ul style="list-style-type: none"> • 3 beeps repeating at short intervals 		
	Interior buzzer	 Lights up <small>*1</small>	One of the doors is not completely closed. Stop the vehicle in a safe place and close all doors completely.
	<ul style="list-style-type: none"> • Chime (once) 		

When	Warning buzzer	Instrument cluster	Cause and remedy
When opening the driver's door	Interior buzzer • Continuous beep	 Lights up *1	The headlights and/or the position lights are left on. Turn them off.
When stopping or backing up the vehicle	Interior buzzer • Short beeps at long intervals, short beeps at short intervals, short beeps at very short intervals, or continuous beep	—	Rear parking sensors detect an obstacle on the rear side of the vehicle. Check the surrounding area directly with your eyes and the mirrors, and back up the vehicle slowly.

QUICK GUIDE

For Manual Transmission models

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine is stopped automatically by the ENG A-STOP system	Interior buzzer • 2 Beeps	—	The engine stalled because the hood is opened after the engine is stopped automatically. To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then shift into "N" (Neutral). 2) Securely close the engine hood. 3) Turn the ignition switch or press the engine switch to restart the engine.
When the engine is stopped automatically by the ENG A-STOP system	Interior buzzer • 2 Beeps	—	The gearshift lever is in a position other than "N" (Neutral). Place the gearshift lever in "N" (Neutral) position.
When the engine is stopped automatically by the ENG A-STOP system	Interior buzzer • 5 beeps	 and  Lights up	The engine stalled because the following operations were performed. • The driver's seat belt is unfastened. • The driver's door is opened. Close the door and buckle the seat belt, and then turn the ignition switch or press the engine switch to restart the engine.
When the engine is stopped automatically by the ENG A-STOP system	Interior buzzer • 2 beeps	 Lights up	The driver's seat belt is unfastened. You can restart the engine by depressing the clutch pedal when the seat belt is fastened.

For Automatic Transmission models**For vehicle with ENG A-STOP system**

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine is stopped automatically by the ENG A-STOP system	Interior buzzer • 2 Beeps	–	The engine stalled because the hood is opened after the engine is stopped automatically. To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "P" position. 2) Securely close the engine hood. 3) Press the engine switch to restart the engine.
When the engine is stopped automatically by the ENG A-STOP system	Interior buzzer • 5 beeps	 or  Lights up *2	<p>The engine has restarted automatically because either of the following operations was performed.</p> <ul style="list-style-type: none"> • The driver's seat belt is unfastened. • The driver's door is opened. <p>Before starting the vehicle, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below.</p> <ol style="list-style-type: none"> 1) Set the parking brake firmly, and then place the gearshift lever in the "P" position. 2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, turn the ignition switch or press the engine switch to stop the engine.

QUICK GUIDE

For Vehicle Without Keyless Push Start System

When	Warning buzzer	Instrument cluster	Cause and remedy
When opening the driver's door	Interior buzzer	–	The ignition key is in the ignition switch. Remove the ignition key from the ignition switch.
	• Continuous beep		

For Vehicle With Keyless Push Start System

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine switch is pressed to change the ignition mode to LOCK (OFF)	Interior buzzer • Chime (once)	*1	You cannot change the ignition mode to LOCK (OFF) because there may be malfunction of the gearshift lever. consult with a Maruti Suzuki authorized workshop.
When the engine switch is pressed to change the ignition mode to ON	Interior buzzer • Beeping once	 Blinks every 1 second *1	There may be a problem with the keyless push start system. Ask your Maruti Suzuki authorized workshop for inspection.
	Interior buzzer • Beeping twice	 Lights up *1	The remote controller may be outside the vehicle or its battery may have become discharged. Bring the remote controller in the vehicle or touch the engine switch with the remote controller.

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine switch is pressed to change the ignition mode to ON or ACC	Exterior and/or interior buzzers	 Blinks <small>*1</small>	When the engine switch was pressed to change the ignition mode to ON or ACC, the remote controller was detected. However, when starting the engine, the remote controller was not detected. Place the remote controller in the interior workable area and then press the engine switch again.
	• 5 beeps repeating at short intervals		
	Interior buzzer		
When one of the door is opened or closed	• Chime (once)		
	Exterior and/or interior buzzers	 Blinks <small>*1</small>	The remote controller may be outside the vehicle. Bring the remote controller in the vehicle.
When opening the driver's door	• 5 beeps repeating at short intervals		
	Interior buzzer	–	Press the engine switch to change the ignition mode from ACC to LOCK (OFF).
	• Beeping at short intervals		
Interior buzzer	–	–	The steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch. Have the vehicle inspected by a Maruti Suzuki authorized workshop.
	• Continuous short beeps		

QUICK GUIDE

When	Warning buzzer	Instrument cluster	Cause and remedy
When pushing the request switch	Exterior buzzer	–	The engine switch is in ACC or ON mode. Press the engine switch to change the ignition mode to LOCK (OFF).
	• Beeping at short intervals for approx. 2 seconds	–	The remote controller is left inside the vehicle. Take the remote controller outside the vehicle.
		 Lights up <small>*2</small>	Any door (including the tailgate) is open. Close all doors completely
When pushing LOCK button on the remote controller	Exterior buzzer	 Lights up <small>*2</small>	Any door (including the tailgate) is open. Close all doors completely
	• Beeping at short intervals for approx. 2 seconds		

FAQ**Q&A**

Refer to the following list of frequently asked questions.

Door opening / closing

- Q. The keyless entry system does not work. What should I do?
 - A. There is a possibility that something is interfering with the function of the keyless entry system. Refer to "Keyless Entry System" in the "BEFORE DRIVING" section.
 - A. If the battery of the keyless entry system transmitter or keyless push start system remote controller is dead, replace it. Refer to "Battery Replacement" in the "BEFORE DRIVING" section.
- Q. A loud alarm sounds when opening the door. What does this mean?
 - A. The security system has been activated. Press the engine switch to change the ignition mode to ON to stop the alarm. For the correct method of handling, refer to "Security System (if equipped)" in the "BEFORE DRIVING" section.

Window glass

- Q. How can I clear fog on the inside of the windshield and door glass areas?
 - A. Use the defroster switch. Refer to "Manual Heating and Air Conditioning System" or "Automatic Heating and Air Conditioning System" in the "OTHER CONTROLS AND EQUIPMENT" section.
- Q. How can I clear fog on the inside of the rear window glass?
 - A. Use the heated rear window switch. Refer to "Heated Rear Window Switch" in the "BEFORE DRIVING" section.

QUICK GUIDE

Tyres

- Q. I get a flat tyre. What should I do?
- A. Change the flat tyre with a spare tyre. Refer to “Changing Wheels” in the “EMERGENCY SERVICE” section.

Running out of battery

- Q. The battery runs out and the engine does not start. What should I do?
- A. Connect the battery of a vehicle for assistance to jump leads and start the engine. Refer to “Jump-starting Instructions” in the “EMERGENCY SERVICE” section.

Engine oil

- Q. I would like to change the engine oil. What should I do?
- A. Refer to “Engine Oil and Filter” in the “INSPECTION AND MAINTENANCE” section and “Specifications” in the “SPECIFICATIONS” section.

ENG A-STOP system

- Q. The ENG A-STOP system does not work. What should I do?
- A. Refer to “ENG A-STOP” in the “OPERATING YOUR VEHICLE” section.


Electrical equipment

- Q. The headlights or brake lights do not light up. What should I do?
 - A. Check the light bulbs. Refer to “Bulb Replacement” in the “INSPECTION AND MAINTENANCE” section and “Specifications” in the “SPECIFICATIONS” section.
- Q. I cannot use an electrical device. What should I do?
 - A. Check the fuses. Refer to “Fuses” in the “INSPECTION AND MAINTENANCE” section.

QUICK GUIDE

MEMO

FOR SAFE DRIVING

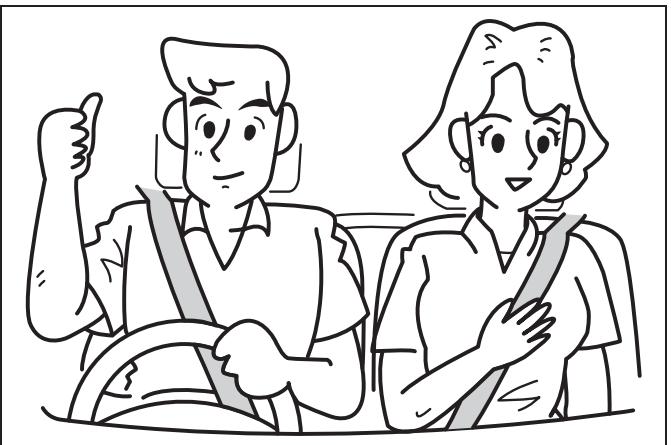

59RN02300


Driver's Seat Floor	2-1
Seat Belts and Child Restraint Systems	2-2
Front Seats	2-5
Tilt Steering Lock Lever	2-7
Mirrors	2-8
Rear Seats	2-10
Seat Utility	2-12
Safety for Child	2-14
Seat Belt	2-18
Handling and Care for Seat Belt	2-23
Seat Belt Pretensioner System (Only for Front Seat)	2-25
Seat Belt Force Limiter System (if equipped)	2-26
Child Restraint Systems	2-27
Supplemental Restraint System (Airbags)	2-37
When Driving the Vehicle with SRS Airbag System	2-39
Handling for Airbags	2-43
Function of Airbags	2-45
When Starting the Engine	2-53
When Loading the Luggage	2-54

FOR SAFE DRIVING

Driver's Seat Floor

Floor Mats

Example for genuine floor mat

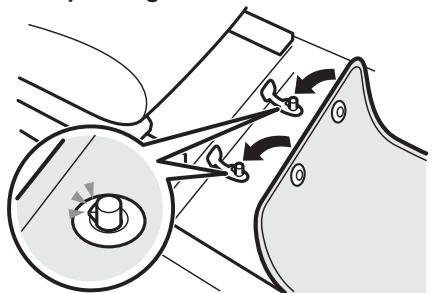

55T020010

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, genuine Maruti Suzuki floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend to use genuine Maruti Suzuki floor mats for proper fitting.

⚠ WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Check that the floor mat grommets are hooked to the fasteners.
- Never stack floor mats.
- Never use a floor mat which does not fit the floor as the same may cause hindrance/damage in vehicle and its functioning.
- Never use damaged floor mats.

Clearing the Floor




69RHS157

⚠ WARNING

Do not leave empty cans, etc. at your feet. These objects may interfere with pedal operation and cause accidents.

Seat Belts and Child Restraint Systems


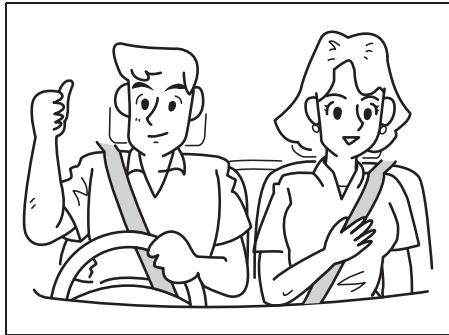


59RN02300


⚠ WARNING

- Wear your seat belts at all times.
- An airbag supplements or adds to the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

(Continued)

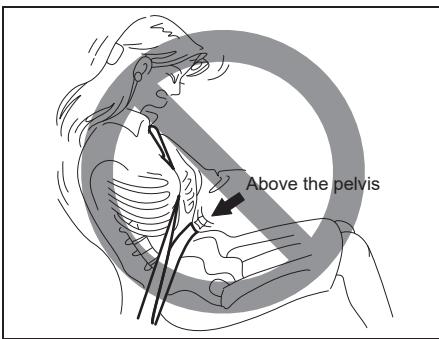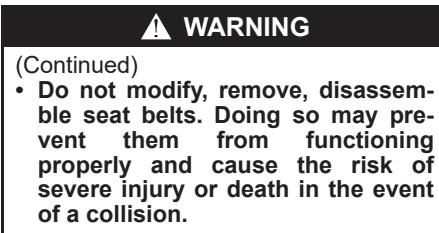

59RN02390

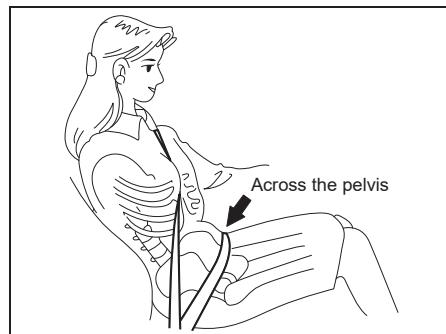

59RN02400



59RN02380

FOR SAFE DRIVING

⚠ WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.
- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats. It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

⚠ WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.
- Do not wear seat belts over hard, fragile, or sharp items such as pens, keys, eyeglasses, etc in pockets or on clothing. The pressure from seat belt on such items can cause injury in case of an accident.



59RN02440

- Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.

(Continued)

⚠ WARNING

(Continued)

- Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children aged 12 and under should ride properly restrained in the rear seat.

(Continued)

⚠ WARNING

(Continued)

- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Check that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.
- For child, if the seat belt irritates the neck or face, use a child restraint system appropriately for the child. The seat belts of your vehicle are principally designed for persons of adult size.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins and clips into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

Adjustment before Driving



80J014

Correct Use of Seat Belt



69RHS158

⚠ WARNING

- When driving, do not adjust the steering wheel (only adjustable type with certain specifications), the seat, the inside rearview mirror or the outside rearview mirrors. Otherwise, there is the risk of mistaken operation of the steering wheel or reduced awareness of what is in front of you, possibly leading to an accident.
- Do not tilt the seatback further back than necessary. Otherwise, the head restraint and the seat belt cannot function as intended.

- Adjust the seat to the correct position. Sit your body fully into the seat.
- Make sure that the seat belt is not twisted.
- Make sure that you place the lap portion of the belt as low as possible across the pelvis.
- The upper belt should rest on the area midway between the shoulder and the base of the neck.
- Confirm that the belt is not twisted in any way, and remove any slack.



77R20050

⚠ WARNING

- If you do not fasten your seat belt properly, your body may not be restrained in a sudden braking and a collision. This may cause severe injury.

Fasten your seat belt properly before driving.

- If all the passengers do not fasten their seat belts properly, their body may not be restrained in a sudden braking and a collision. This may cause severe injury.

Ask all the passengers on the front passenger's seat and the rear seats to fasten their seat belts properly before driving.

Front Seats Seat Adjustment

⚠ WARNING

- Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Check that the driver's seat and seatback are properly adjusted before you start driving.
- To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

(Continued)


⚠ WARNING

(Continued)

- If you place a cushion, etc. between the seatback and your back, you may not be able to drive the vehicle in a correct posture. Also, the seat belt and the head restraint may not provide the best performance. This may cause severe injury in an accident.

Do not place a cushion, etc. between the seatback and your back.

- Do not place any object under the front seat. If an object gets stuck under the front seat, the seat shall not be latched properly and may cause injury.
- Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.

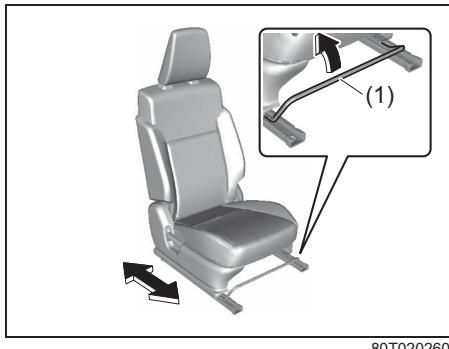

80T020260

Seat position adjustment lever (1)

Pull the lever up and slide the seat.




80T020270

Seatback angle adjustment lever (2)

Pull the lever up and move the seatback.

NOTE:

To operate the seat back smoothly, pull the seat back adjustment lever (2) in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.

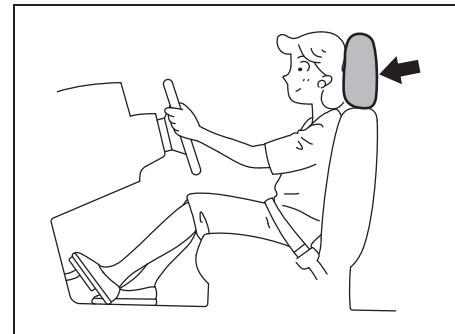Head Restraints

80J001

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.


FOR SAFE DRIVING

⚠ WARNING

- If you drive the vehicle with the head restraint removed, a passenger's backward tilting cannot be prevented in a collision from the backward and the impact to a passenger's head cannot be reduced in a sudden braking or a collision. This may cause severe injury. Never drive the vehicle with the head restraints removed.
- If the head restraint is installed back to front or it is not installed securely, the head restraint may not provide the best performance in case of emergency, resulting in severe injury.
If the head restraint is installed back to front, you cannot adjust the height and install it securely.
Make sure to install the head restraint securely in the right direction.
- Being distracted by head restraint adjustment could lead to an accident.
Do not attempt to adjust the head restraint while driving.


NOTE:

It may be necessary to recline the seat-back to provide enough overhead clearance to remove the head restraint.

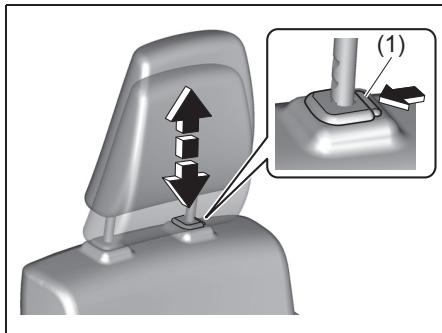

To raise the front head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock button (1). If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock button (1) and pull the head restraint all the way out.

Tilt Steering Lock Lever

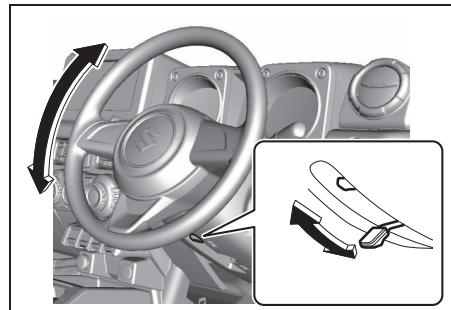

- (1) LOCK
(2) UNLOCK

The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- 2) Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- 3) Try moving the steering wheel up and down back and forth to check that it is securely locked in position.

⚠ WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.



Mirrors

⚠ WARNING

Failure to observe following point may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.

- Always unfold all the outside rear-view mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

Inside Rearview Mirror

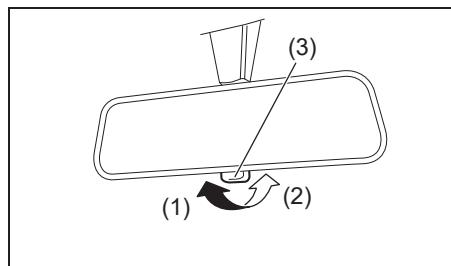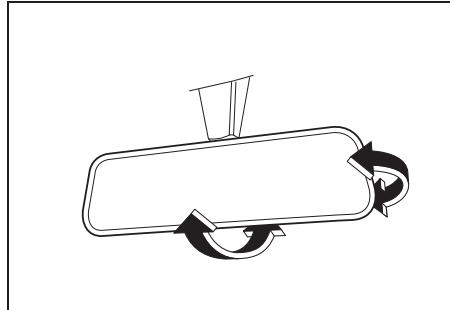

- (1) Night driving
 (2) Day driving
 (3) Selector tab

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror. To adjust the mirror, set the selector tab (3) to the day position, then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab (3) to the night position to reduce glare from the headlights of vehicles behind you.

⚠ WARNING

- If you adjust the inside rearview mirror while driving, you could lose control of the vehicle, resulting in an accident.
 Adjust the inside rearview mirror before driving.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

⚠ CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.

FOR SAFE DRIVING

Outside Rearview Mirrors


Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

! WARNING

If you adjust the outside rearview mirror while driving, you could lose control of the vehicle, resulting in an accident.

Adjust the outside rearview mirror before driving.

Electric mirrors (if equipped)

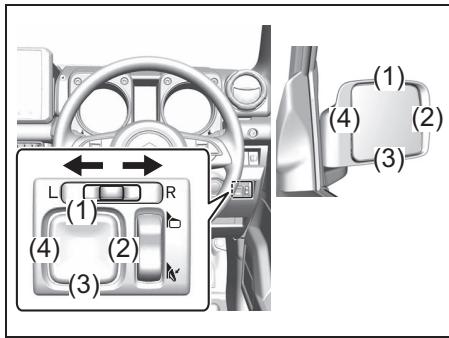

80T020020


The switch to control the electric mirrors is located on the instrument panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position, or the ignition mode is ACC or ON. To adjust the mirrors:

- 1) Move the selector switch (1) to the left or right to select the mirror you wish to adjust.
- 2) Press the outer part of the switch (2) that corresponds to the direction in which you wish to move the mirror.
- 3) Return the selector switch (1) to the center position to help prevent unintended adjustment.


NOTICE

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.
- Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.

Outside Rearview Mirror Folding Switch (if equipped)

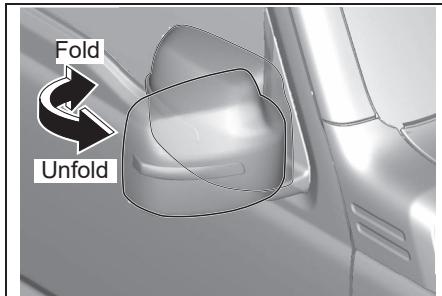


80T020040

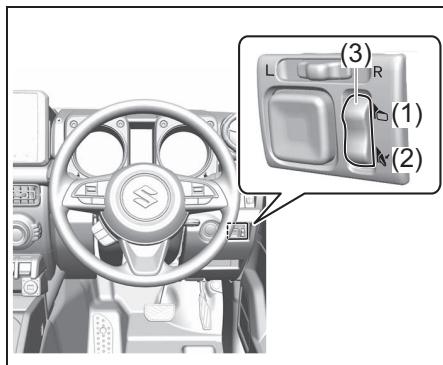

80T020070

- (1) Unfold
(2) fold

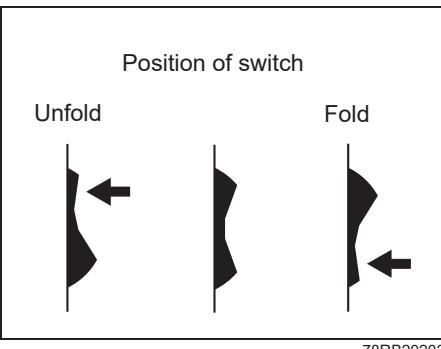**NOTE:**

- If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the outside rearview mirrors may get stuck during that moment. To open the outside rearview mirrors completely, again press the folding switch after starting the engine.*
- Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.*

You can fold the mirrors when you park the vehicle in a narrow space. Push the folding switch (3) to fold and unfold the mirrors. Make sure the mirrors are completely unfolded before you start driving.

⚠ WARNING

If you drive the vehicle with the outside rearview mirrors folded, it may result in an accident.
Do not drive the vehicle with the outside rearview mirrors folded.

⚠ CAUTION


Moving mirrors can pinch and injure a hand. Do not allow anyone's hand to get near the mirrors when folding and unfolding the mirrors.

Rear Seats

Seat Adjustment

⚠ WARNING

- To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.
- Do not place any object under the rear seat equipped with the seat position adjustment lever. If an object becomes caught under the rear seat, the seat will not be latched.

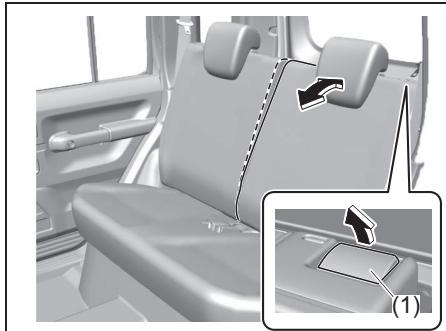

80T020290

Pull the lever (1) up and move the seat-back.

After adjustment, move the seat and seat-back forward and backward to check that it is securely latched.

Head Restraints

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

WARNING

- If you drive the vehicle with the head restraint removed, a passenger's backward tilting cannot be prevented in a collision from the backward and the impact to a passenger's head cannot be reduced in a sudden braking or a collision. This may cause severe injury.
Never drive the vehicle with the head restraints removed.
- If the head restraint is installed back to front or it is not installed securely, the head restraint may not provide the best performance in case of emergency, resulting in severe injury.
If the head restraint is installed back to front, you cannot adjust the height and install it securely.
Make sure to install the head restraint securely in the right direction.

(Continued)

WARNING

(Continued)


- Being distracted by head restraint adjustment could lead to an accident.
Do not attempt to adjust the head restraint while driving.
- If you try to install a child restraint system and it touches the head restraint, a child may be severely injured in a collision.
When you install a child restraint system, adjust the height of the head restraint as high as possible or remove the head restraint for avoiding that the child restraint system touches the head restraint.

CAUTION

If you leave the removed head restraint in the vehicle, it may jump out and hit passengers or objects, resulting in injury or damage.
Do not leave the removed head restraint in the vehicle.


NOTE:

It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.

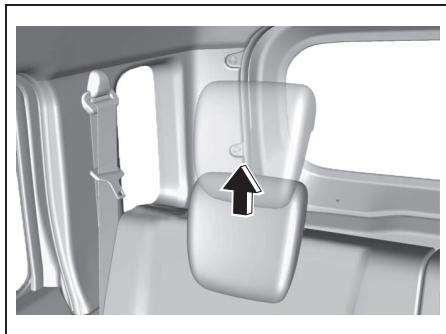

80T020120

To raise the rear head restraint, pull up the head restraint until it clicks.

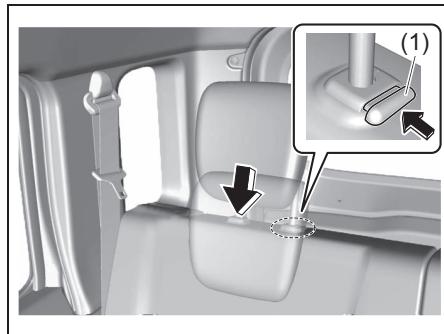

80T020130

To lower the head restraint, push down the head restraint while holding in the lock button (1). If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock button (1) and pull the head restraint all the way out.

When installing a child restraint system, adjust the height of the head restraint or remove it for fitting the child restraint system, as necessary.

Seat Utility


Folding Rear seats

CAUTION

Remove objects from the rear seats before folding the rear seats. There may be a case that the rear seat belt reminder will not be activated, if objects are remained on the rear seats.

To fold the rear seats forward:

- 1) Lower the head restraint fully.

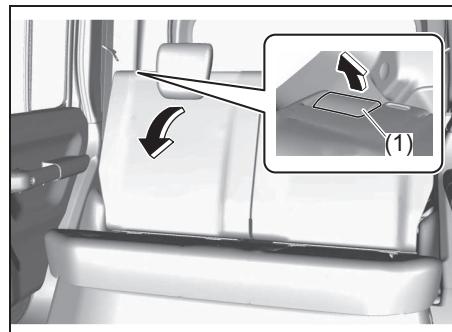

80T020100

- 2) Pull the release lever (1) on the top of each split seat, and fold the seatbacks forward.

FOR SAFE DRIVING

NOTICE

After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

WARNING

If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.


To return the seat to the normal position, follow the procedure below.

CAUTION

When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.

NOTICE

When returning the rear seatback to the normal position, check that there is nothing around the striker. Any foreign materials prevent the seatback from being locked securely.

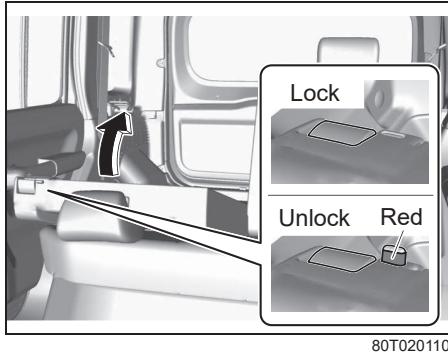

Raise the seatback until it locks into place.

After returning the seat, move the seatback forward and backward to check that it is securely latched.

CAUTION

- Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.
- After securing the rear seatback, check that it is locked securely. If it is not, red button will appear beside the release lever.

NOTICE

- When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.
- When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.
- As the lock is designed exclusively for securing the rear seatback, do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback from being locked securely.


NOTE:

After returning the rear seatback, check that the seat belts are not twisted or caught in the rear seatback.

Safety for Child

For safety, carefully drive at lower speed than usual.

Place a Child in the Rear Seat

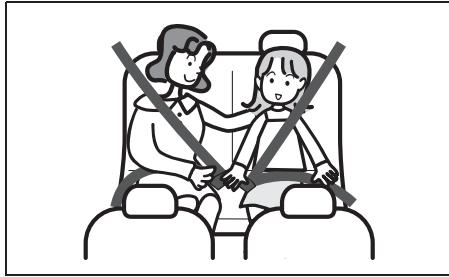

51K0188

- Seat a child next to an adult when possible, and ensure that the child can be visually monitored.
- Select an appropriate child restraint system suitable for the child's age and physical size.

⚠ WARNING

- If you do not use the child-proof lock, a child may open a door and the child may be thrown out, resulting in severe injury. To avoid this, use the child-proof lock setting.
- When it is necessary to seat the child who does not need a child restraint system in the front passenger's seat, observe the following point.
 - Slide the front passenger's seat all the way back. If the front passenger's seat is in a forward position, there is a risk of serious injury due to major impact if the front passenger's seat airbag was to be deployed.

(Continued)

⚠ WARNING

(Continued)



59RN04650

- If a child put a hand out of the window or lean on a door, the child may get severe injury by a strong impact of side or curtain airbag activation.
Do not allow a child to put hand out of the window or lean on a door.
- Do not allow the hands or feet, etc., of a child near movable parts inside a vehicle, such as the seat rails. Otherwise, there is the possibility of injury.

FOR SAFE DRIVING

A Child Needs to Wear Seat Belt



69RHS159

⚠ WARNING

(Continued)

- If two or more people use a single seat belt, in a sudden braking and a collision, the seat belt may not provide the best performance, resulting in severe injury.
Do not allow two or more people to use a single seat belt.



69RHS160

⚠ WARNING

- Do not drive with a child on your lap. Even if you hold the child tightly, proper support is not possible, and in the event of a collision, etc., the child may get serious injury.
- If a child does not wear a seat belt, in a sudden braking and a collision, the child may get serious injury.
Be sure to always have a child wear a seat belt.

(Continued)

⚠ WARNING

- The seat belts of this vehicle are designed to be suitable for occupants of adult size. If the shoulder strap rests on the neck or chin of a child rather than the shoulder, or if the lap portion of the belt does not rest securely on the hipbone, ensure that the child is seated in a child restraint system placed in the rear seat. Failure to properly use a seat belt may result in serious injury to the child.
- Use a child restraint system securely fastened to the rear seat for any child that cannot hold their head upright or sit on their own.

Do not Let a Child Play with Seat Belt



69RHS161

⚠ WARNING

If a child play with a seat belt, for example, if the child's body is wrapped by the seat belt, it may cause severe injury such as suffocation. In case of emergency, cut the seat belt with scissors.

Using the Child Restraint System

Refer to "Securing Child Restraint System by Seat Belt" in this section.

An Adult Needs to Open or Close Each Door or Window, and Adjust Seats

Only an adult should open or close each door or window and adjust seats, not to get a child's hands, arms, legs or neck, etc. caught in.



69RHS162

⚠ WARNING

- If the windows are not locked, a child may operate the windows by mistake or the other passengers may be caught in the windows.
To avoid unintended operation of the power window by a child, use the window lock switch.

(Continued)

⚠ WARNING

(Continued)

- If you leave the power window in ready condition, it may cause unintended operation of the power window by a child, resulting in an accident.

When you leave the vehicle, make sure to turn the ignition switch to "OFF" position or press the engine switch to change the ignition mode to OFF, keep the key with you and leave the vehicle with your child.


FOR SAFE DRIVING

Do not Let a Child Stick His/her Head or Hands out of the Window




69RHS163

Do not Leave a Child Unattended in the Vehicle

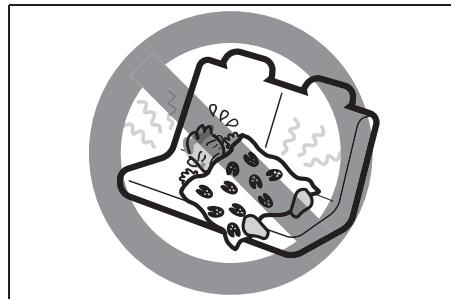

69RHS164

Do not Place a Child in Luggage Compartment

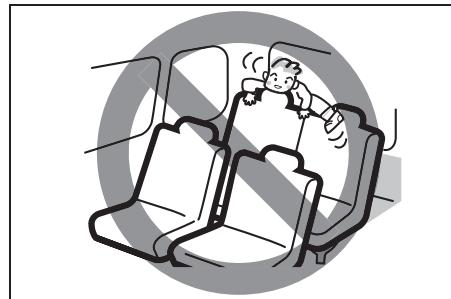

69RHS165

⚠ WARNING

Ensure that a child does not put their hands or heads, etc., out the windows. Otherwise, serious injuries due to falling out or sudden braking may occur. Moreover, serious injury could also occur if a child were to come into contact with objects outside the vehicle.

⚠ WARNING

When getting out of the vehicle, do not allow a child to stay in the vehicle without you.

- Unintended and wrong operations by a child may cause a fire or an accident from the vehicle start.
- As the inside temperature of the vehicle will become hot under the blazing sun, a child may suffer from heat stroke or dehydration, resulting in severe health problems or death in the worst case. Even if you turn on the air conditioner, do not leave a child alone in the vehicle.

⚠ WARNING

The luggage areas do not feature a structure that can accommodate people. Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.

Seat Belt

A Child Needs to Wear Seat Belt

Refer to "Safety for Child" in this section.

Information for Pregnant Woman and the Sick Person



69RHS166

⚠ WARNING


- Those that are pregnant or sick/disabled must also wear their seat belts. However, in the event of a collision, there is the danger of heavy pressure focused on certain body areas. Consultation with a physician is recommended.
- For those that are pregnant, ensure that the lap portion of the belt is as low as possible across the pelvis, avoiding to touch the abdomen. Make sure that the shoulder strap rests halfway between the shoulder and the base of the neck, crossing the chest and avoiding to touch the abdomen.

Lap-shoulder Belt

Emergency locking retractor (ELR)


The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder

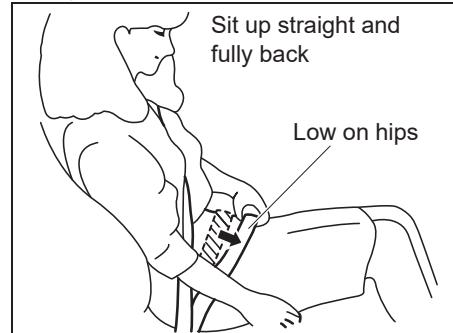


59RN02310

FOR SAFE DRIVING

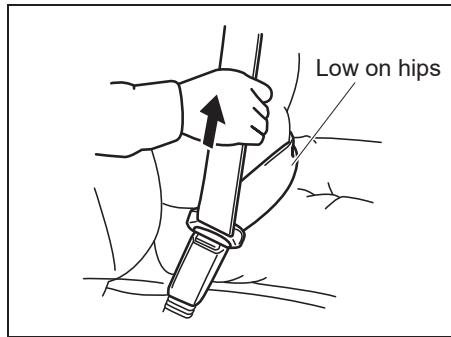


59RN02320

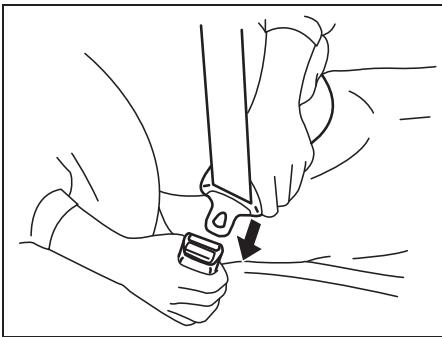

59RN02330

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

To fasten the seat belt, sit up straight and far back into the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a click. After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

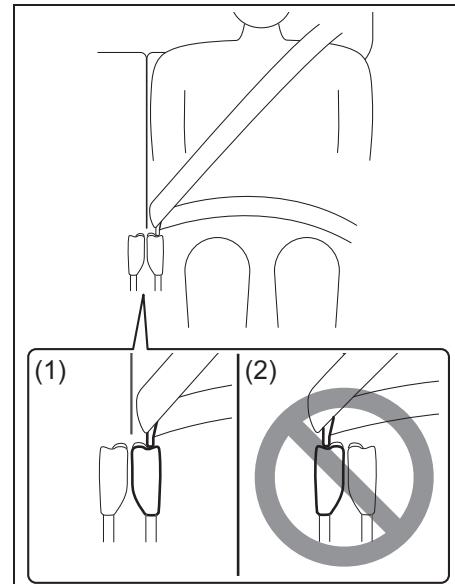


78RB02085

- (1) Correct
(2) Wrong

⚠ WARNING

When fastening the rear seat belt, always use the closest buckle to you. If you use the buckle for your next rear seat position by mistake, the rear seat belt may not function properly.

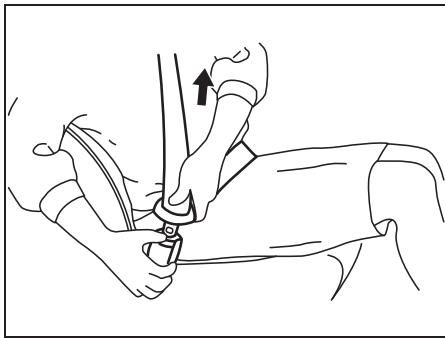

59RN02340

To unfasten the seat belt, push the red "PRESS" button on the buckle and retract the belt slowly while holding the belt or/and the latch plate.

NOTE:

If the seat belt cannot be pulled from its fully retracted position, firmly pull the belt and release it. Then smoothly pull the belt out of the retractor.

Correct Use of Seat Belt

WARNING

Use the seat belt correctly. Otherwise, in a sudden braking or a collision, the body may not be restrained, resulting in severe injury. Observe the following points.


- If the seat belt is twisted or contains excessive slack, there is danger of heavy pressure focused on certain body areas.
- If the seat belt rests on the abdomen, this area may sustain heavy pressure when you get a strong impact.
- If the seat belt does not rest firmly over the shoulder, you may be thrown forward when you get a strong impact.

Adjustment of Seat Belt Length

The seat belt does not require length adjustment. The seat belt extends and retracts according to the movement of the body. If the seat belt gets a strong impact, the belt locks its tension automatically, in order to secure the body.

FOR SAFE DRIVING

Seat Belt Reminder

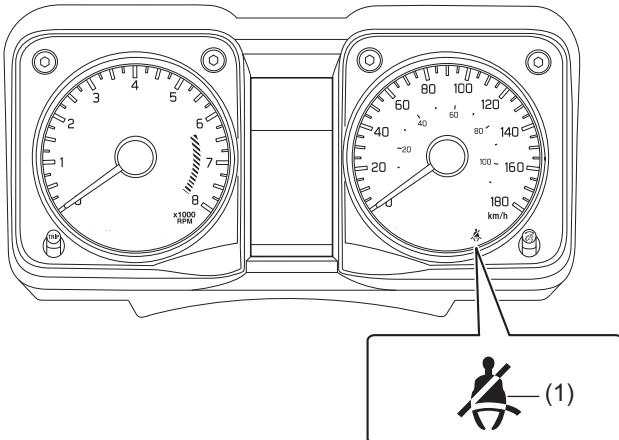

80TM02001

- (1) Driver's seat belt reminder light / front passenger's seat belt reminder light / rear passenger's seat belt reminder light*

When the driver and/or passenger (front passenger and/or rear passenger*) do(not) fasten their seat belts, the seat belt reminder lights will come on or blink and a buzzer will sound to remind the driver and/or passenger (front passenger and/or rear passenger*) to fasten their seat belts. For more details, refer to the explanation below.

WARNING

It is absolutely essential that the driver, front passenger and rear passenger* fasten their seat belts at all times. Persons who are not fastening seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

NOTE:

Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.

NOTE:

The driver's seat belt reminder light / front passenger's seat belt reminder light / rear passenger's seat belt reminder light* is for all the driver, front passenger and rear passenger.

*: If equipped

Driver's seat belt reminder

If the driver's seat belt remains unbuckled when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the reminder works as follows:


- 1) The driver's seat belt reminder light will come on. The front passenger's seat belt reminder light will also come on if a front passenger does not fasten his/her seat belt.
- 2) After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) The reminder light will remain on until the driver's seat belt is buckled.

If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned to off, or the engine switch is pressed to change the ignition mode to LOCK (OFF).

Front passenger's seat belt reminder

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the front passenger's seat belt reminder will activate.

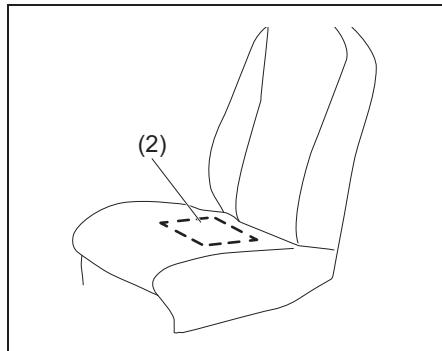

69RH203

- (2) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (2) detects whether a person is sitting in the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

NOTICE

- The sensor of the front passenger's seat belt reminder is located in the seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.
- Depending on the variety of seat cover, operation of the sensor may be adversely affected. Maruti Suzuki highly recommends that you use Maruti Suzuki genuine seat cover exclusively for this vehicle. If a seat cover is installed, consult with a Maruti Suzuki authorized workshop.
- If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.

(Continued)

FOR SAFE DRIVING

NOTICE

(Continued)

- When sitting on the front passenger's seat, it is very important that the passenger sits upright, leaning against the seat backrest and centered on the seat cushion in order for the seatbelt reminder system to function effectively. An occupant sitting improperly (slouches, turns sideways, sits forward or sideways) may hamper the functioning of this system as it may not detect the occupant.

NOTE:

- If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.
- If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.

Rear passenger's seat belt reminder

If the rear passenger's seat belt remains unbuckled when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the reminder works as follows:

- The rear passenger's seat belt reminder light will come on.
- After the vehicle's speed has reached about 15 km/h, the rear passenger's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- The reminder light will remain on until the rear passenger's seat belt is buckled.

If the rear passenger has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the rear passenger's seat belt is buckled or the ignition switch is turned to off, or the engine switch is pressed to change the ignition mode to LOCK (OFF).

Handling and Care for Seat Belt

Seat Belt Handling



80T020150

Periodically check if the seat belts work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages and guide loops. Replace any seat belts which do not work properly or are damaged.

! WARNING

- Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners were activated. The pretensioners and the load limiter only function once. In case they did not activate, consult with a Maruti Suzuki authorized workshop.
- If frays, scratches, cuts are found on the seat belt, replace it with a new one.
- If the buckle does not work properly, ask your Maruti Suzuki authorized workshop for inspection.
- If strong force was applied to the seat belt in a collision, the seat belt function may be damaged, even though its appearance is normal. Replace the seat belt with a new one.

(Continued)

! WARNING

(Continued)

- As the seat belt may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - When foreign material enters into the buckle or you spill a drink, the seat belt may not work properly. In this case, ask your Maruti Suzuki authorized workshop for inspection.
 - As the seat belt may be damaged, be careful not to get the seat belt caught in the door. Before closing the door, check that the seat belt is retracted without any slack.
 - Do not modify or remove the seat belt.


Seat Belt Care

Caring for seat belts is the same as caring for any type of regular cloth material, etc.

! WARNING

Do not use bleach, solvent or dyes on seat belts. Doing so may cause stains, discoloration and strength deterioration, and the seat belt may not function properly.

Seat Belt Pretensioner System (Only for Front Seat)

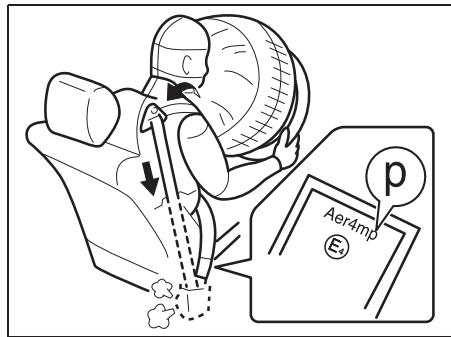

⚠ WARNING

This section describes your Maruti Suzuki vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front or rear seating positions, check the label on the seat belt at the bottom part. If the letter "p" appears as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the preten-

sioner seat belts in the same manner as ordinary seat belts.

Read this section and "Supplemental Restraint System (Airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (airbags). The crash sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal or side collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental Restraint System (Airbags)" section in addition to this "Seat Belt Pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal or side collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to

minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat Adjustment" section and the instructions and precautions about the seat belts in this "Seat Belts and Child Restraint Systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal or side collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal side collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by Maruti Suzuki authorized workshop as soon as possible.

The pretensioner system or the airbag system may not work properly if any of the following conditions occurs:

1) If the air bag warning light on the instrument cluster does not come on briefly, when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

2) If the air bag light comes on and stays on for more than 10 seconds, when the

ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

3) If the air bag light comes on while driving.

Have both systems inspected by Maruti Suzuki authorized workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by Maruti Suzuki authorized workshop who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been in LOCK (OFF) for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Maruti Suzuki vehicle, ask a Maruti Suzuki authorized workshop, body repair shop, or scrap yard for assistance.

For Proper Operation of Seat Belt Pretensioner System

Do not modify any parts that can affect the functionality of the seat belt pretensioner system. The seat belt may be retracted unexpectedly, or it may not be properly retracted when necessary.


Disposal and Scrapping

Seat belt pretensioners that have not been activated must be activated according to the predetermined procedure before disposal.

⚠ WARNING

If you do not handle a pretensioner properly for disposal, the pretensioner system may activate unexpectedly, resulting in severe injury. When disposing of a pretensioner or scrapping the vehicle equipped with a pretensioner, consult with a Maruti Suzuki authorized workshop


Seat Belt Force Limiter System (if equipped)

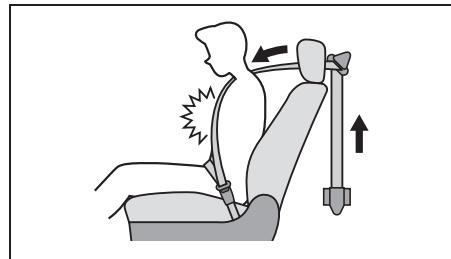

69RHS167

In the event of a strong impact coming from the front, the seat belt force limiter operates in two stages (driver's seat) and one stage (front and rear passenger's seat) to reduce a force to the shoulder strap, thus lessening the impact being sustained by the front passengers.

FOR SAFE DRIVING

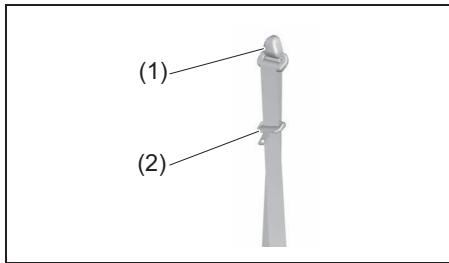


80T020160

⚠ WARNING

If the seat belt sustains strong impact, the resin of the shoulder anchor part (1) and the tongue plate part (2) could soften due to heavy friction, thus sticking to the seat belt, making the belt slide less easily. In such a case, the seat belt may not provide the best performance, resulting in severe injury in case of emergency. Have the seat belt replaced by Maruti Suzuki authorized workshop.


Child Restraint Systems Child Restraint System Usage

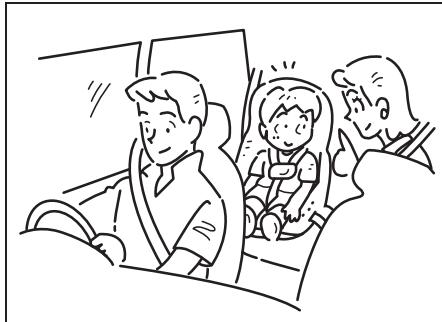

59RN02280


The following types of child restraint system are available generally.

Infant restraint

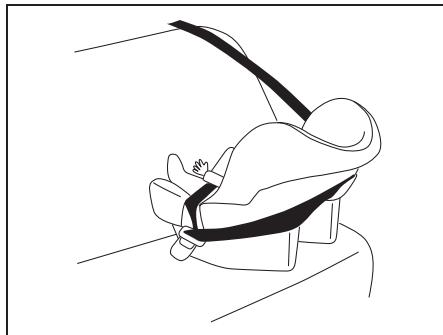


80JC007

Child restraint

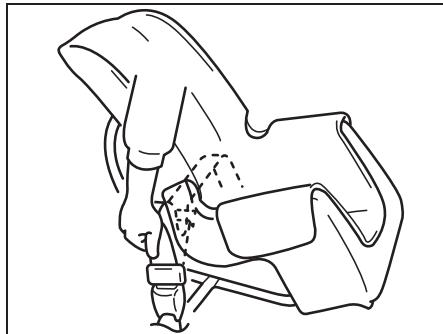

59RN02350

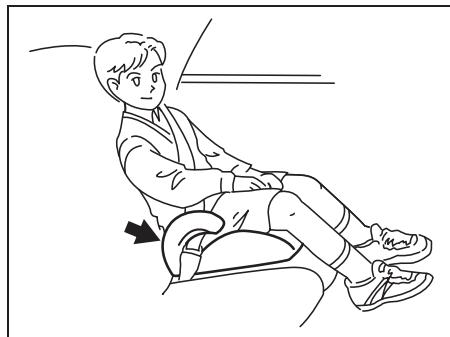Booster seat

59RN02290

Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap belts or the lap portion of lap-shoulder belts) or by special rigid lower anchor bars built onto the floor. Whenever possible, Maruti Suzuki recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

NOTE:

Observe any statutory regulation about child restraints.



61M0241

- Do not install a child restraint system on the front passenger's seat.

(Continued)

! WARNING

(Continued)

- When installing a child restraint system to the rear seat, touching the child's foot or the child restraint system to the seatback of the front seat can cause serious injury to the child in the event of an accident. Adjust the front seat so that it does not touch the child or the child restraint system.
- If child restraint systems are not installed properly, children or other occupants could be seriously injured in the event of an accident. Secure the child restraint system firmly according to both this manual and the instruction provided by child restraint system's manufacturer.

(Continued)

⚠ WARNING

(Continued)

- If the child is not secured properly in the child restraint system, it could cause serious injury to the child in the event of an accident. Use the child restraint system correctly following the instruction provided by child restraint system's manufacturer.
- If you recline the seatback, a child restraint system may not be secured properly and a child body may slip beneath the seat belt. This may cause severe injury.
Do not recline the seatback when a child restraint system is installed on the seat.
- If you use the child restraint system which was severely damaged by an accident, etc., it may not provide the best performance. This may cause severe injury to a child.
If the child restraint system was severely damaged by an accident, etc., do not reuse the child restraint system even though its appearance looks normal.

Child Restraint Systems for India

Child Restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP		Seating position (or other site)				
		Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center
Group 0	Up to 10 kg	X	U	N.A.	N.A.	N.A.
Group 0+	Up to 13 kg	X	U	N.A.	N.A.	N.A.
Group I	9 to 18 kg	X	U	N.A.	N.A.	N.A.
Group II	15 to 25 kg	X	U	N.A.	N.A.	N.A.
Group III	22 to 36 kg	X	U	N.A.	N.A.	N.A.

Key of letters to be inserted in the above table:

U =Suitable for 'universal' category restraints approved for use in this mass group

X =Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE:

- 'universal' is the category in the AIS 072.
- 'Outboard' indicates window side seat.

FOR SAFE DRIVING

Securing Child Restraint System by Seat Belt

Choose the appropriate seat for the child's age and physical size.

⚠ WARNING



61M0241

- Do not install a child restraint system on the front passenger's seat.
- If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not contact the front seatback. This will help avoid injury to the child in the event of an accident.

(Continued)

⚠ WARNING

(Continued)

- Do not hold a child on passenger's lap when the vehicle is in motion.
- Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.

⚠ CAUTION


If your vehicle is equipped with the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

Securing

This section explains securing the child restraint system in the rear seat.

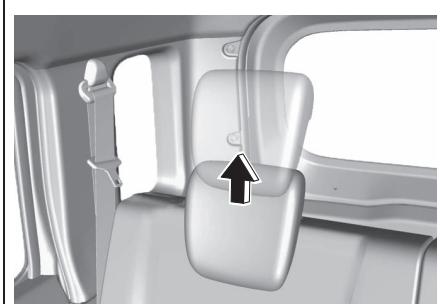

80T020120


- 1) When the child restraint system contacts the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint system.

⚠ WARNING

If the child restraint system contacts the head restraint, the child restraint system cannot be secured firmly. This may cause severe injury to a child in a collision.


When installing the child restraint system, adjust the head restraint height to the highest position as much as possible or remove the head restraint so that the child restraint system would not contact the head restraint.

- 2) If your vehicle is equipped with the reclining mechanism of rear seatback, adjust the angle of the seatback so that there is no gap between the child restraint system and the seatback.
- 3) Make sure that the child restraint system is securely fastened to the main seat.
- 4) Make sure to pass the seat belt of the passenger's seat through the specified parts, according to the instruction manual that came with the child restraint system.

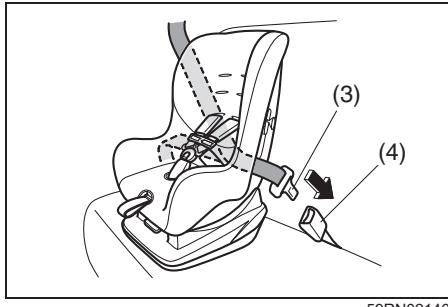

59RN02140

- 5) Insert the tongue plate (3) firmly into the seat belt buckle (4) until you hear a click.
 • The child restraint system in the above figure is a typical example.

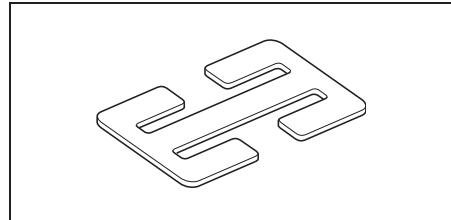

72M00172

- 6) If the child restraint system does not have a seat belt locking mechanism or a locking clip, secure it to the seat by using an aftermarket locking clip.
 • The aftermarket locking clip shown in the above figure is a typical example.

⚠ WARNING

Failure to securely fasten a child restraint system via the seat belt locking mechanism or a locking clip may cause serious injury to a child when sudden braking or a collision occurs.

FOR SAFE DRIVING


- 7) Shake the child restraint system back and forth, and left and right to check if it is securely in position.
• If you cannot ensure secure positioning, check the instruction manual that came with the child restraint system or consult the dealer where you purchased the seat.

⚠ WARNING

Make sure to position the child restraint system securely. Failure in doing so could result in the child sustaining serious injury when sudden braking or a collision occurs.

Securing Child Restraint System by ISOFIX


Securing

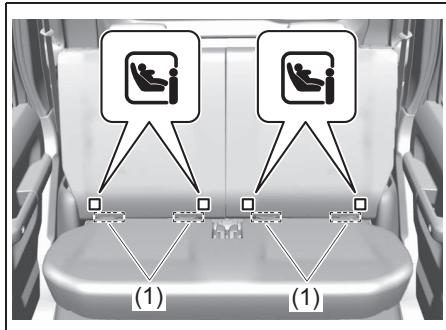

(1) Lower anchorage

Your vehicle is equipped with the lower anchorages in the rear seats for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

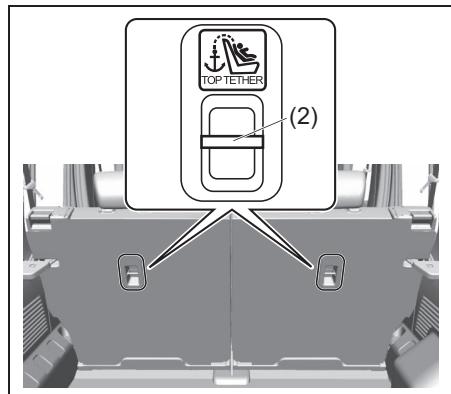

(2) Top tether anchorage

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.


Here is a general instruction:

▲ CAUTION


If your vehicle is equipped with the head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

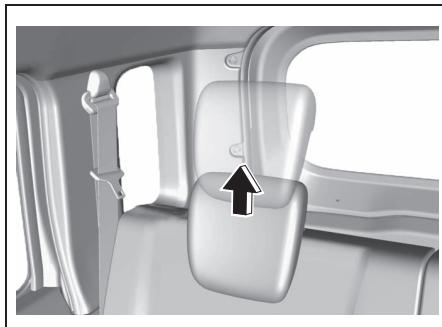

80T020120

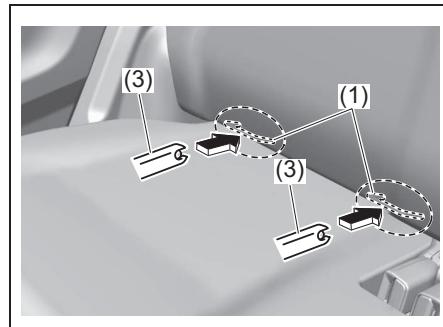


80T020190

- When the child restraint system contacts the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint system.

▲ WARNING


If the child restraint system contacts the head restraint, the child restraint system cannot be secured firmly. This may cause severe injury to a child in a collision. When installing the child restraint system, adjust the head restraint height to the highest position as much as possible or remove the head restraint so that the child restraint system would not contact the head restraint.

FOR SAFE DRIVING

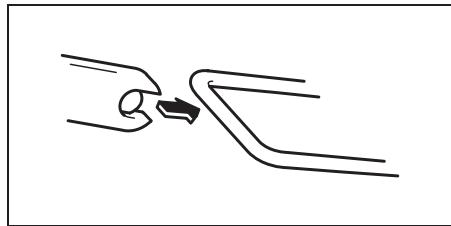


80T020340

- 3) Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.

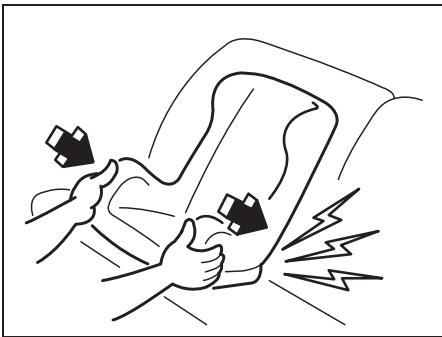

54G185

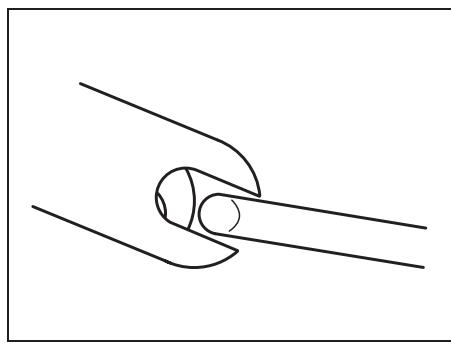


54G184

- 4) Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

NOTICE

When installing a child restraint system to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

Installation of Child Restraint with Top Tether

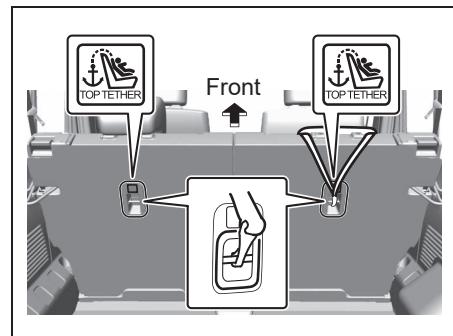

80T020200


Some child restraint systems require the use of a top tether strap. Top tether anchorages are provided in your vehicle at the locations shown in the illustrations. The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

- 1) Secure the child restraint on the rear seat using the procedure described above for securing a restraint system that does not require a top tether strap.

- 2) Hook the top tether strap to the top tether anchorage and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage located directly behind the child restraint. Do not attach the top tether strap to the luggage restraint loops (if equipped).

⚠ WARNING

Do not attach the child restraint top tether strap to the luggage restraint loops. Incorrectly attached top tether strap will reduce the intended effectiveness of the child restraint system.

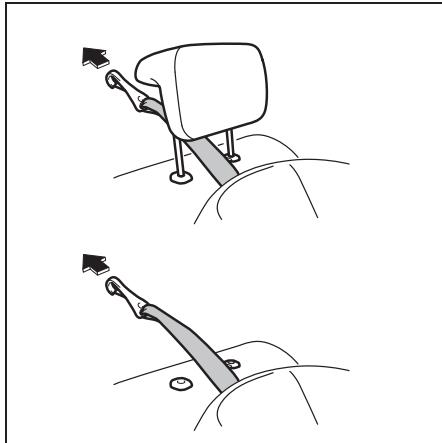

52RS20431

⚠ WARNING

If the seat belt, etc. gets stuck in the child restraint system, it may not be secured properly and this may cause severe injury to a child in a collision. When you install the child restraint system, check that obstacles and the seat belt do not exist near the ISOFIX anchorages and the top tether anchorages.

- 3) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head Restraints" section for details on how to adjust the height of head restraint or remove it.)
4) Check that cargo does not interfere with routing of the top tether strap.

FOR SAFE DRIVING


Supplemental Restraint System (Airbags)

⚠ WARNING

This section describes the protection provided by your Maruti Suzuki vehicle's supplemental restraint system (airbags). Read and follow all instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a supplemental restraint system consisting of the following components in addition to a lap-shoulder belt at each seating position.


- (1) Side curtain airbag module (if equipped)
- (2) Side crash sensor (if equipped)
- (3) Forward crash sensor
- (4) Front passenger's front airbag module
- (5) Driver's front airbag module
- (6) Front seat belt pretensioner
- (7) Side airbag module (if equipped)
- (8) Airbag controller

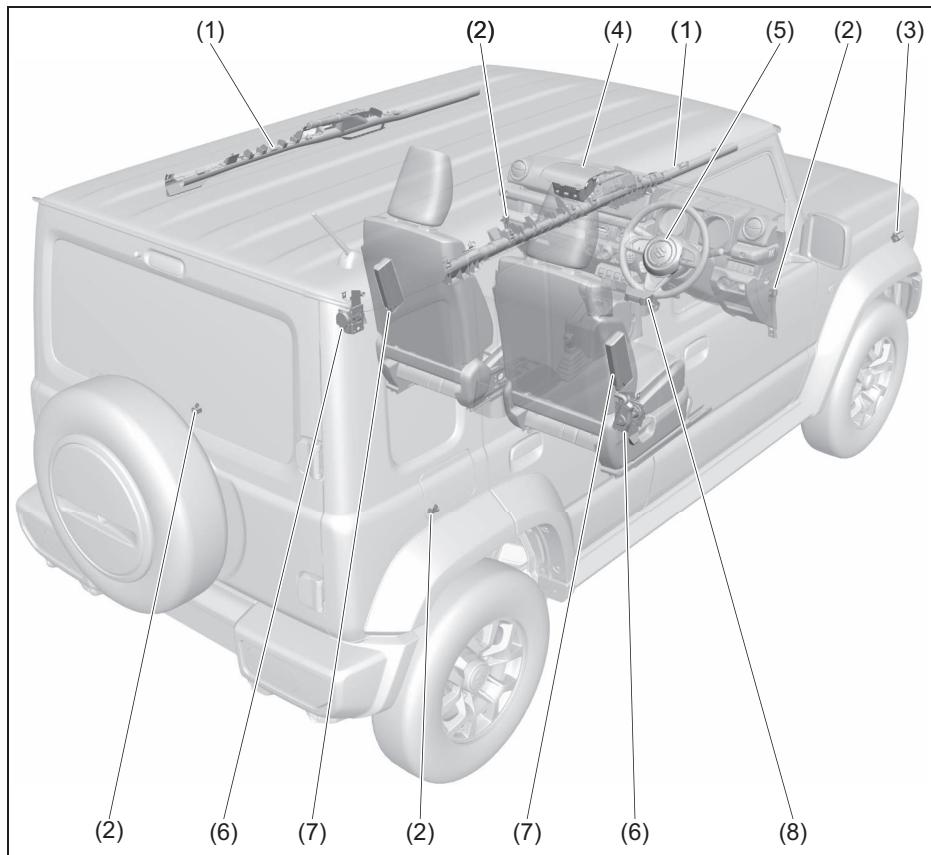

80T020210

What is SRS Airbag System?

SRS stands for "Supplemental Restraint System". This system aims to restrain passengers in their seats for safety.

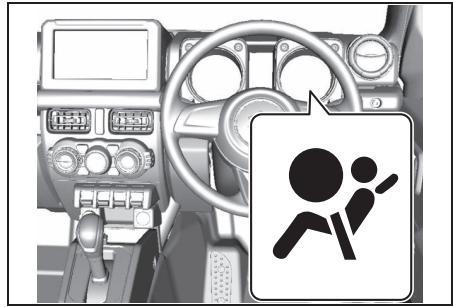

80T020320

If airbag warning light on the instrument cluster does not blink or come on when the ignition switch is first turned to "ON" position, or the ignition mode is first changed to ON, or airbag warning light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by Maruti Suzuki authorized workshop as soon as possible.

⚠ WARNING

- SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time.
If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision.
Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.
- If the seat belts are not fastened properly, airbags may not provide the best performance. This may cause severe injury in a sudden braking and a collision.
Make sure that the driver and all the passengers fasten the seat belts properly in a correct posture.

NOTE:

Via the event data recorder (EDR) system, this vehicle records and accumulates data when the airbag is deployed.

Front airbags



80J090

Front airbags are designed to inflate in severe frontal collisions when the ignition switch is in "ON" position or the ignition mode is ON.

NOTE:


In a frontal angle collision, the side airbags (if equipped) and side curtain airbags (if equipped) may inflate.

Front airbags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

FOR SAFE DRIVING

Side airbags (if equipped) and side curtain airbags (if equipped)

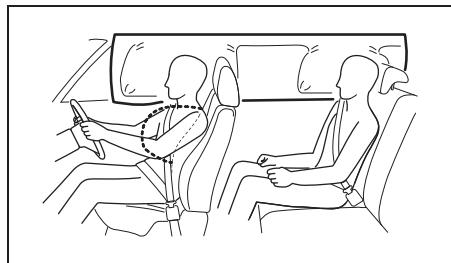

68KM090

Side airbags and side curtain airbags are designed to inflate in severe side impact collisions when the ignition mode is ON.

Side airbags and side curtain airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag and side curtain airbag on the side of the vehicle that is struck will inflate. However, in a frontal angle collision, the side airbags and side curtain airbags may inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.


When Driving the Vehicle with SRS Airbag System

Make Sure to Fasten Seat Belt



65J106

Correct Sitting Posture

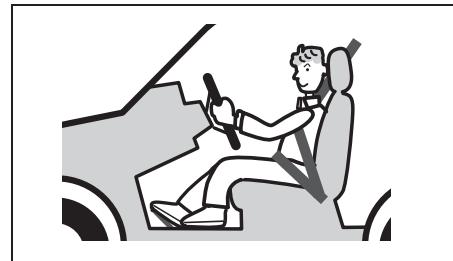

80J014

There is a possibility of major impact from the front airbags when the airbags activate and deploy instantaneously, the driver and the passenger should sit deeply into their seats and touch their backs lightly to the seatback. In addition, the seat should be positioned so that it is not too far forward.

WARNING


SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time. If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision.

Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.




59RN02190

For Proper SRS Airbag System Operation

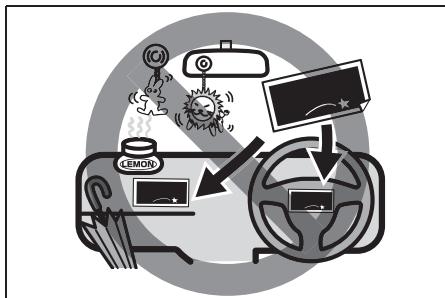

69RHS169

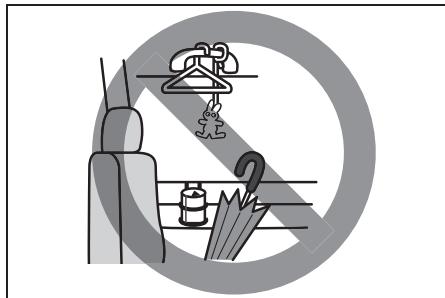

59RN02200

⚠ WARNING

- Do not position your face, chest, etc., close to the steering wheel or instrument cluster, and do not rest your feet up into this area. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.
- If side airbags (if equipped) or side curtain airbags (if equipped) activate, you may get strong impact, resulting in severe injury. Do not put hands out of the window or lean on the door. Also, when sitting in the rear seat, do not hug the seatback of the front seat.

⚠ WARNING

For the vehicle with side airbags or side curtain airbags, do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.

⚠ WARNING

- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it.
- Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.
- Do not attach accessories (except for Maruti Suzuki genuine products), etc., to the windshield or the inside rearview mirror.

FOR SAFE DRIVING

Warning Label of SRS Airbag for Front Passenger's Seat



You may find this label on the sun visor.




Description of warning label

Symbol	Symbol meaning
	Do not install a rear-facing child restraint system to the front passenger's seat equipped with an airbag.
	If the front passenger's seat airbag were to be deployed, a major impact could be applied to a rear-facing child restraint system and the child.
	For more details, read this owner's manual.


"SRS AIRBAG" Mark and Location

Driver's front airbag

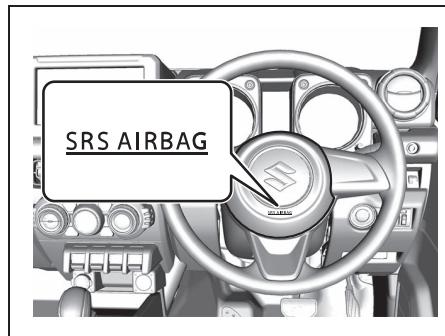

77R30400

Front passenger's front airbag

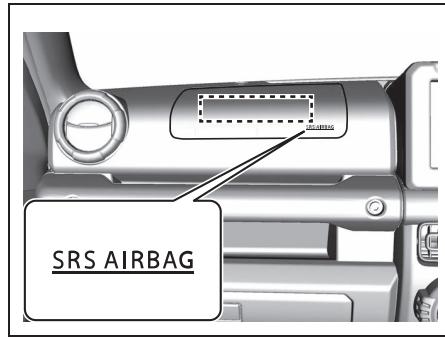

77R30410

Side airbags (if equipped)

80T020330

the front passenger's front airbag is located behind the passenger's side of the dashboard.

Side airbags are located in the part of the front seatbacks closest to the doors.

Side curtain airbags are located in the roof lining.

The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

⚠ WARNING

- If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by Maruti Suzuki authorized workshop.
- If you smash the airbag stored place or apply a strong impact to it, the airbag may not work properly or may inflate unexpectedly, resulting in serious injury.
Do not smash the airbag stored place or apply a strong impact to it.

Side curtain airbags (if equipped)

80T020250

The driver's front airbag is located behind the center pad of the steering wheel and

Installation of Child Restraint System
⚠ WARNING


61M0241

Do not install a child restraint system on the front passenger's seat.

Refer to "Seat Belts and Child Restraint Systems" section for details on securing your child.

FOR SAFE DRIVING

Handling for Airbags

For Proper SRS Airbag System Operation

If objects are positioned within the range where the airbag deploys, such objects might be impacted and blown off or the airbag may not deploy properly.

! WARNING

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not modify the suspension. If the vehicle height or the stiffness of the suspension were to change, airbag malfunction may result.
 - When installing a grille guard, etc., on the front of the vehicle, consult with a Maruti Suzuki authorized workshop. If you modify the front part of the vehicle, the airbag system may not work properly.
 - When installing radio equipment, etc., consult with a Maruti Suzuki authorized workshop. Radio waves, etc., from a radio may adversely affect the computer module used in the airbag system.

(Continued)

! WARNING

(Continued)

– Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by a Maruti Suzuki authorized workshop to ensure that it works properly. If the original function of airbag system is damaged, airbag may not function effectively and fully in case of an emergency.

- If the airbag-related parts are replaced or repaired, which has an impact on the airbag functions, the airbag may activate unnecessarily or may not activate when necessary.

The following situations may give a negative impact to the airbag system. In these cases, consult with a Maruti Suzuki authorized workshop beforehand.


- Removing the steering wheel, repairing the areas around the steering wheel, etc.

(Continued)

! WARNING

(Continued)


- Center console repair, repairs around the instrument cluster, repairs under the front seat, and repairs of electrical wiring
- Installation of audio equipment, etc.
- Sheet metal painting and repairs around the dashboard
- Replacement of the front seat and repairs around the seat
- Repairs around the front pillar, the back pillar or the roof side
- Repairs around the center pillar

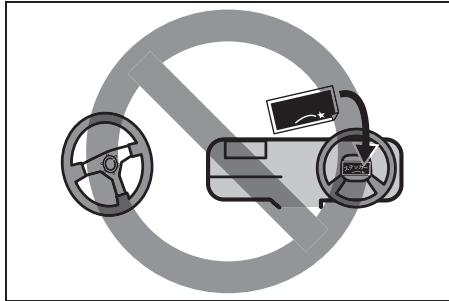Driver's front airbag precautions

69RHS022

⚠ WARNING

- Do not position your hands, face, chest, etc., close to airbag unit area or lean on the steering wheel. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.
- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it. Otherwise, the airbag may not deploy normally in case of emergency, resulting in severe injury.

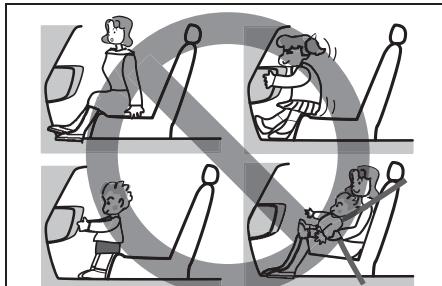Front passenger's front airbag precautions

69RHS170

⚠ WARNING


- When riding in the front passenger's seat or when allowing a child to ride in this seat, be sure to observe the following points. Failure to do so may result in serious injury due to major impact if the airbag is deployed.
 - Do not position your hands or feet on the airbag unit area, and do not position your face, chest, etc., close to this area.
 - Do not allow a child to stand in front of the airbag unit area or sit on a passenger's lap in the front passenger's seat. Have a child ride in the rear seat wearing a seat belt.

(Continued)

⚠ WARNING

(Continued)

- For a child that is not yet big enough to wear a seat belt properly, be sure to use a child restraint system on the rear seat.

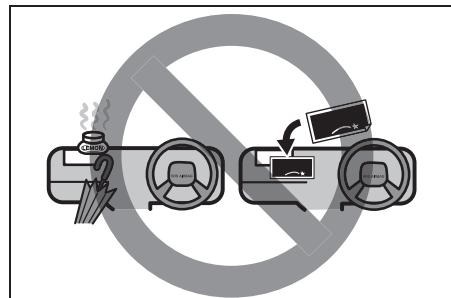


69RHS171

FOR SAFE DRIVING

⚠ WARNING

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.
 - Do not attach accessories (except for Maruti Suzuki genuine products), etc., to the windshield or the inside rearview mirror.

Side airbags (if equipped) and side curtain airbags (if equipped) precautions

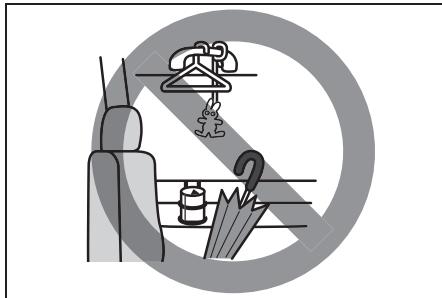

59RN02200

⚠ WARNING

If you attach accessories such as cup holders or hangers near the door, or if you lean umbrellas against the door, when side airbags or side curtain airbags activate, these objects may be thrown out and may not inflate properly, resulting in severe injury.

Do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.

Function of Airbags

How the System Works

In a frontal collision, the collision sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to "Seat Adjustment" section and "Seat Belts and Child Restraint Systems" section in this section for details on proper seat and seat belt adjustments.



80T020350



59RN04670



59RN02360

⚠ WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front air bag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side air bags and side curtain air bag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.

(Continued)

⚠ WARNING

(Continued)

- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each condition, it may cause severe injury.
- For vehicles with side airbags, do not use non-genuine seat covers on the front seats, because non-genuine seat covers may obstruct the inflation of side airbags. Maruti Suzuki highly recommends Maruti Suzuki-genuine seat covers to be used when covering the front seats of such vehicles with side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella, as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.

(Continued)

FOR SAFE DRIVING

⚠ WARNING

(Continued)

- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the airbags to malfunction.
- Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by Maruti Suzuki authorized workshop to ensure that it works properly. If the original function of air bag system is damaged, air bag may not function effectively and fully in case of an emergency.

⚠ CAUTION

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation. This may cause burn injury.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, and which sensors activated the deployment.

Servicing the airbag system

If the airbags inflate, have the airbags and related components replaced by Maruti Suzuki authorized workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If this happens, ask your Maruti Suzuki authorized workshop to check the airbag system as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only Maruti Suzuki authorized workshop should be allowed to service or replace your airbags. Remind anyone who services your Maruti Suzuki vehicle that it has airbags.

Service on or around airbag components or wiring must be performed only by Maruti Suzuki authorized workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the airbag system, check that the battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been in LOCK (OFF) for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.


CAUTION

If you do not handle the airbags properly, they may inflate unexpectedly, resulting in personal injury.
When scrapping the airbags or the vehicle that has the airbags, consult with a Maruti Suzuki authorized workshop.

Front Airbag Deployment Conditions**Front airbags deploy (inflation)**

76J30450

- Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

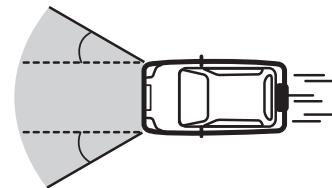

76J30460

- Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle

Front airbags may inflate


Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.



76J30470

- Hitting a curb or medial strip

FOR SAFE DRIVING

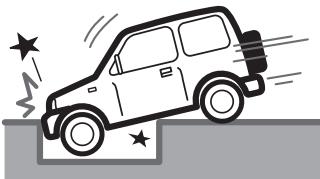

76J30480

- Falling into a deep hole or ditch



76J30490

- Landing hard or falling

Front airbags may not inflate


The front airbags may not inflate when a strong impact has not occurred since the collision object (including living beings like animals) was easy to be deformed or moved, or the crashed portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle. Also, in certain collisions at low speed, the airbag may not inflate.



76J30510

- Collision that the front of your vehicle goes under the bed of a truck etc.

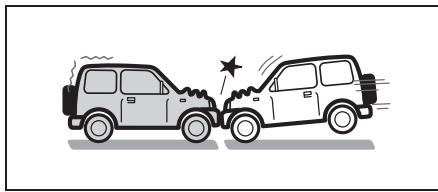

76J30500

- Frontal collision to a stopped vehicle at less than about 50 km/h




76J30520

- Collision with a utility pole or stumpage



76J30530

- Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

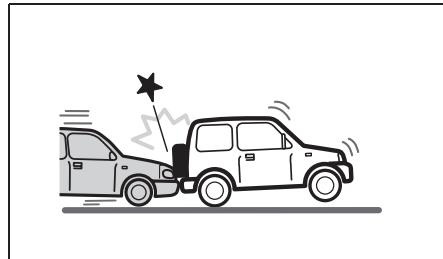


76J30561

- Impact from the rear



76J30540

- Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h

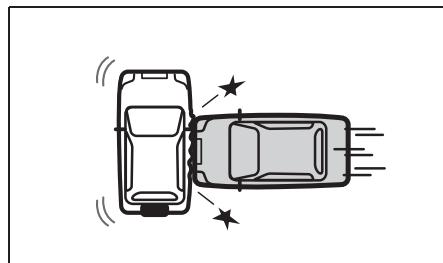

76J30571

- Impact from the side




76J30580

- Vehicle rollover

FOR SAFE DRIVING

Side Airbags (if equipped) and Side Curtain Airbags (if equipped) Deployment Conditions

Side airbags and side curtain airbags deploy (inflation)

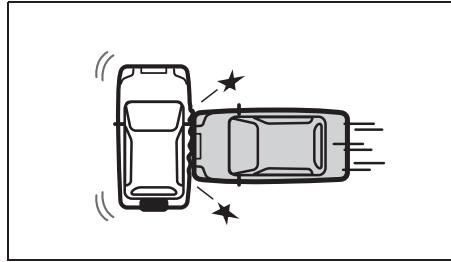


76J30571

- Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h or in a greater impact


Side airbags and side curtain airbags may inflate in a strong impact

Side airbags and side curtain airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.

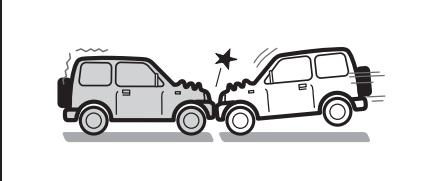


76J30500

- Frontal collision

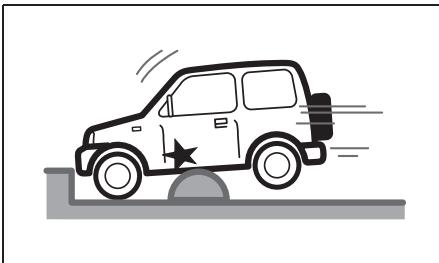


77R30880

- Hitting a curb or bump

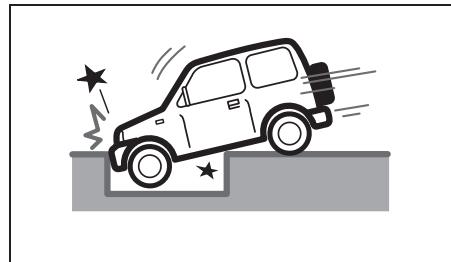

76J30480


- Falling into a deep hole or ditch

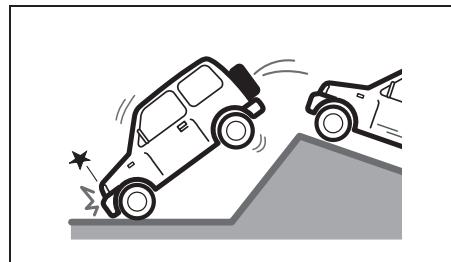


76J30490

- Landing hard or falling


**Side airbags and side curtain airbags
may not inflate**

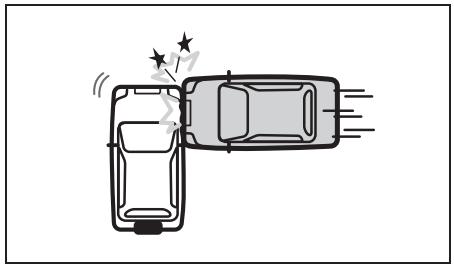

77R30890

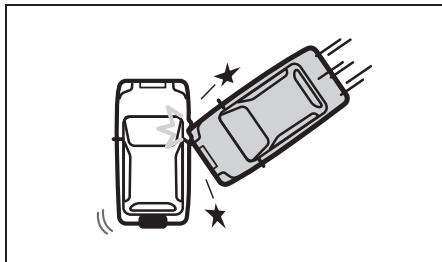

77R30910

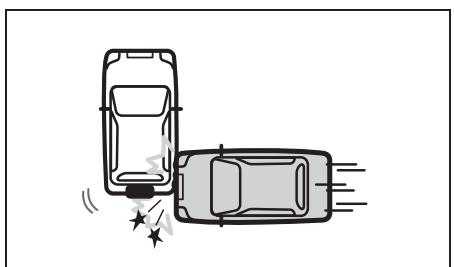


77R30900

- Impact from the side to the vehicle body other than the passenger compartment




77R30920

- Impact from the side by a high hood vehicle

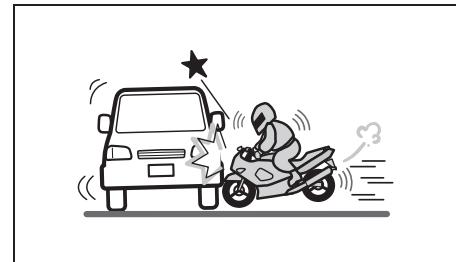

77R30930

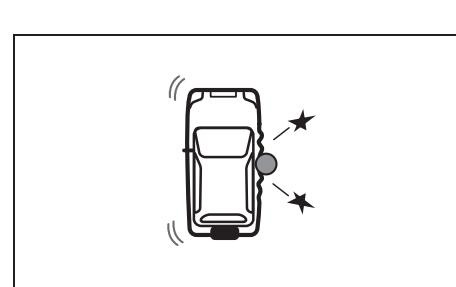

77R30940

- Collision with a utility pole or stumpage

FOR SAFE DRIVING

Side airbags and side curtain airbags do not inflate



76J30561

- Impact from the rear



76J30580


- Vehicle rollover

When Starting the Engine Be Careful of Carbon Monoxide Poisoning

⚠ WARNING

Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. If you breath exhaust gases, you may feel drowsy, resulting in severe health problems or death in the worst case.
If you start the engine, be careful of carbon monoxide poisoning.

Do not Run Engine in a Poorly-ventilated Area

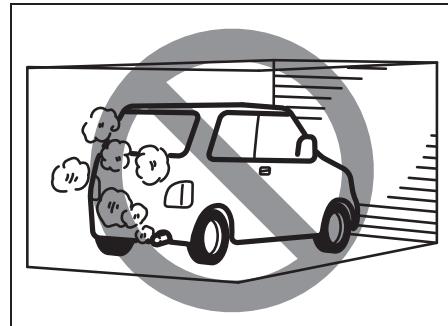

52D334

⚠ WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, take the following precautions to help prevent carbon monoxide from entering your vehicle. Otherwise, it may result in severe health problems or death in the worst case.

- Do not leave the engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problem and lead to death.
- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, check that the air intake selector is set to "FRESH AIR" and the blower is at high speed.

(Continued)

! WARNING

(Continued)

- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to do so, check that the all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grill in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leakage. Any damage or leakage should be repaired immediately.

Do not Take a Nap with Engine Running

69RHS172

! WARNING

Do not take a nap with the engine running. Otherwise, it may result in an accident, severe health problems or death in the worst case.

- Exhaust gases can enter the vehicle due to surrounding conditions and wind direction, possibly causing carbon monoxide poisoning.
- The gearshift lever could change unintentionally, or the accelerator pedal could be depressed accidentally, causing an accident.
- If you were to accidentally step on the accelerator pedal while asleep, the engine and exhaust system could overheat, resulting in danger of fire.

When Loading the Luggage

Loading too much luggage in the vehicle may have negative effects to the vehicle body or driving performance.

! WARNING

59RN02230

- Fuel, chemical containers, spray cans etc. may catch a fire or cause an explosion.
Do not bring these objects into the vehicle.

(Continued)

FOR SAFE DRIVING

⚠ WARNING

(Continued)



59RN02240

- If you place any objects on the instrument panel, these objects may move and interfere with driver's view or safe driving. Also, the front passenger's front airbag may not work properly or these objects may be thrown out when the airbag inflates in an accident.
Do not place any objects on the instrument panel.




59RN07290

⚠ CAUTION

- If you hang any objects on the gearshift lever or use it as a handrest, the gearshift lever may not work properly, resulting in a malfunction or an accident.
Do not hang any objects on the gearshift lever or use it as a handrest.
- If you pile up luggage, it may interfere with driver's view. Also, in a sudden braking, the luggage would jump out and it may result in an accident.
Do not pile up luggage in the vehicle.
- If animals move about in the vehicle, it may interfere with driver's view. Also, in a sudden braking, it may result in an accident.
When you bring animals into the vehicle, make sure that animals do not move about.

BEFORE DRIVING

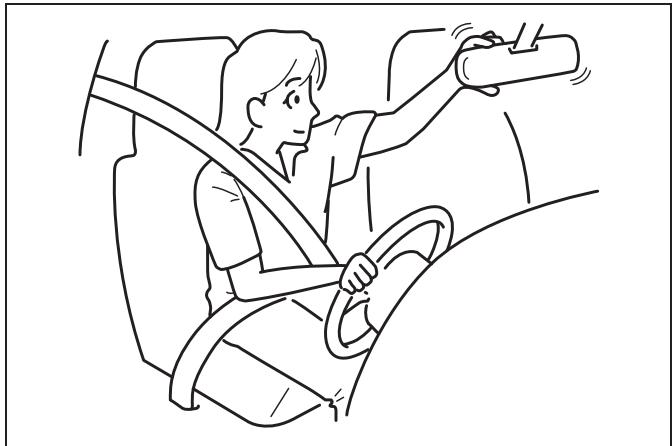

60G404


Keys	3-1
Doors	3-1
Keyless Entry System Transmitter / Keyless Push Start System Remote Controller	3-6
Security System	3-16
Windows	3-18
Lighting Control Lever	3-21
Headlight Leveling Switch	3-24
Headlight Washer Switch (if equipped)	3-25
Turn Signal Control Lever	3-25
Hazard Warning Switch	3-26
Windshield Wiper and Washer Lever	3-27
Horn	3-30
Heated Rear Window Switch	3-30

BEFORE DRIVING

Keys

Your vehicle comes with a pair of identical keys. Keep one of the keys as a spare key in a safe place. One key can open all of the locks on the vehicle.

Key Number Plate

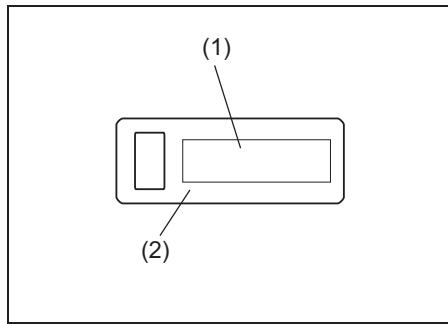

55T030020

The key identification number (1) is stamped on a metal tag (2) provided with the keys. Keep the tag in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

NOTE:

- Carefully keep the tag in the place other than your vehicle, so that someone does not find out about the key identification number. If you lose your key, inform the key identification number to a Maruti Suzuki authorized workshop
- When you resell or transfer your vehicle to a new owner or operator, give the key number plate with your vehicle to him or her.

Immobilizer System

For detail of immobilizer system, "Immobilizer System" in the "OPERATING YOUR VEHICLE" section


Doors

WARNING

- When a seat belt or luggage is caught by a door, the door cannot be shut properly and it may open while driving. This may cause an accident. Close a door not to catch a seat belt or luggage in the door.
- When you keep the tailgate open with the engine running, exhaust gases will enter the vehicle and cause carbon monoxide poisoning. This may cause severe health problems or death in the worst case. Do not keep the tailgate open with the engine running.
- To prevent fire or theft, stop the engine and lock the doors when leaving the vehicle.
- When opening a door, be careful of the surrounding area. An accident, such as a collision with the vehicle or a pedestrian behind your vehicle, may occur. Be very careful when opening a door especially on a windy day.

CAUTION

- When a child opens or closes a door, his / her hands, legs or head may be caught in the door and this may cause injury. Opening or closing a door should be performed not by a child but by an adult.
- When the tailgate is not fully opened, it may be unexpectedly closed and this may cause injury. When opening the tailgate, open it fully.
- Opening the tailgate right behind the exhaust pipes may cause burn injury. With the engine running, do not open the tailgate right behind the exhaust pipes.

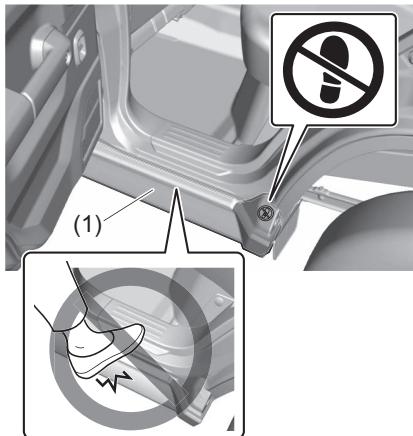
NOTICE

80T030330

**Do not put your foot on the side sill splash guard (1).
This might cause it to damage.**

NOTE:

- When leaving the vehicle even for a short period of time, do not leave cash or valuables in the vehicle, to avoid risk of theft.
- Depending on the setting conditions of the security alarm and the opening conditions of the doors, an alarm may operate. Refer to "Security System" in this section.

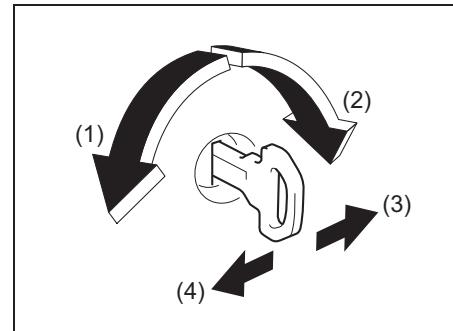Side Door Locks

59RN03100


- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

BEFORE DRIVING

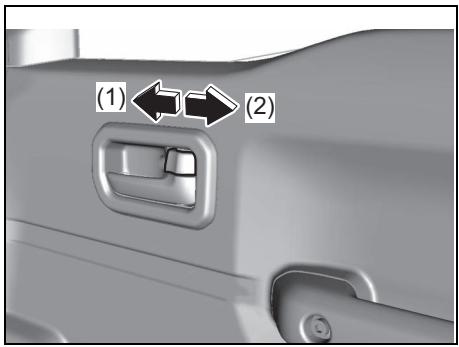

80T030090

- (1) LOCK
(2) UNLOCK


To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.

To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.

Central Door Locking System

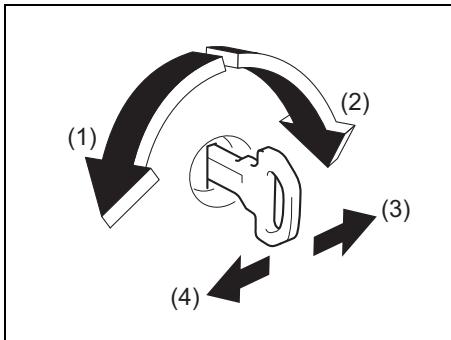

59RN03180


- (1) UNLOCK
(2) LOCK
(3) Front
(4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle.

Child-proof Locks (rear door)

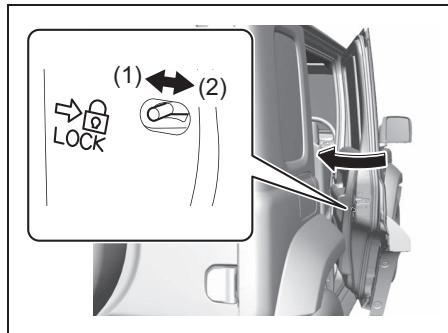

80T030100

- (1) UNLOCK
- (2) LOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in the lock position (2), the rear door can only be opened from outside. When the lock lever is in the unlock position (1), the rear door can be opened from inside or outside.

⚠ WARNING

Be sure to place the child-proof lock in the lock position whenever children are seated in the rear.

NOTE:

When you open a door from inside, put your hand out of the window and use the door handle.

Tailgate


⚠ WARNING

Always check that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

⚠ CAUTION

If you unlock the tailgate, pull up the tailgate handle and pull the tailgate, it will continue to open to the fully-open position by the damper stay performance. Check that no obstacle exists within the opening and closing range of the tailgate.

Locking and unlocking from outside the vehicle

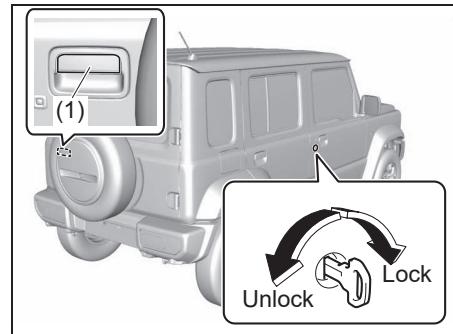

80T030260

- (1) Tailgate handle

You can lock and unlock the tailgate by using the key in the driver's door lock.


To open the tailgate, pull up the tailgate handle (1) and pull the tailgate.

BEFORE DRIVING


Unlocking from inside the vehicle

If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged lead-acid battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.


- 1) Fold the rear seat forward for easier access. Refer to "Folding Rear seats" in "FOR SAFE DRIVING" section for details on how to fold the rear seat forward.

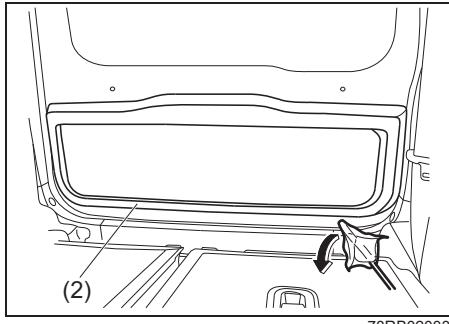

- 2) Remove the trim (2) of the tailgate.
 - Insert a flat-bladed screwdriver covered with a soft cloth between the trim and the tailgate to make a space for fingers, and then pull out the trim with your fingers.

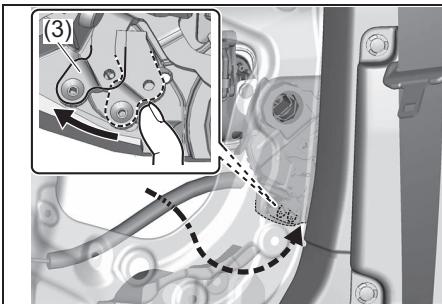

- 3) Move the lever (3) in arrow direction to unlock the tailgate.

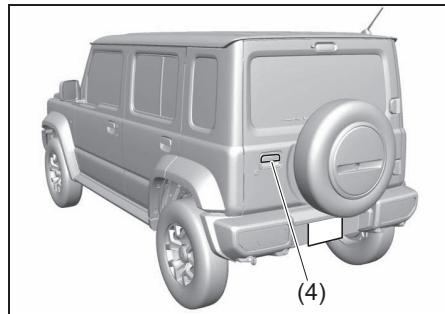


- 4) From outside the vehicle, pull up the tailgate handle (4) and open the tailgate.

If the tailgate cannot be unlatched by pulling up the tailgate handle, have the vehicle inspected by a Maruti Suzuki authorized workshop.

CAUTION

Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

Keyless Entry System Transmitter / Keyless Push Start System Remote Controller

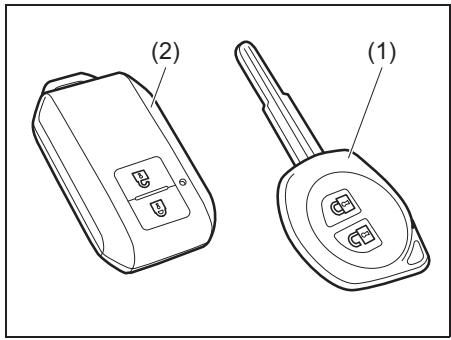


Your vehicle is equipped with either a keyless entry system transmitter (1) or a keyless push start system remote controller (2). The transmitter has only a keyless entry system. The remote controller has a keyless entry system and a keyless push start system. For details, refer to the following explanations.

WARNING

Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.

- Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.
- If radio wave interference is a concern, have the function of the antenna(s) disabled by a Maruti Suzuki authorized workshop.

Keyless Entry System Transmitter (if equipped)

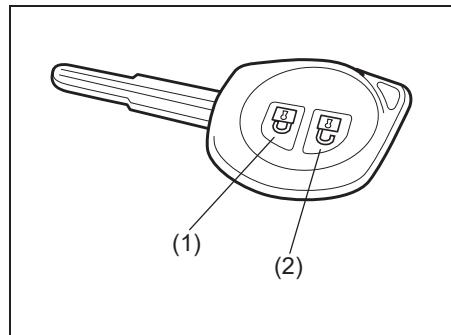

79MH0237

- (1) LOCK button
(2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

BEFORE DRIVING

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock all doors, push UNLOCK button (2) once.

The turn signal lights will flash once and the siren will sound once (if equipped) when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice (if equipped).
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

NOTE:

- If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.
- If you lock the doors using the transmitter when the engine hood is open, the siren will sound 3 times to remind you (if equipped).

- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.

- Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound (if equipped). However, push one of the buttons 5 seconds later, the siren will sound.
- You can set whether the siren sounds (if equipped) when locking or unlocking the door(s) via the setting mode of the information display. For details on how to use the information display, refer to "Information Display" in "INSTRUMENT CLUSTER" section.

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can only be unlocked with the transmitter, and the turn signal light will not flash.

- If you lose one of the transmitters, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Car locator function (if equipped)

This function helps in locating the vehicle. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds.

The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time.

To cancel the car locator function, press any button (LOCK or UNLOCK).

You can also turn the ignition switch to the "ON" position or the press the engine switch to change the ignition mode to ON to cancel the car locator function.

NOTE:

The car locator function will not activate when the key is in the ignition switch.


Battery replacement

If the transmitter becomes unusable, replace the battery.


NOTE:

You may damage the transmitter when replacing its battery. Ask your Maruti Suzuki authorized workshop to inspect the system.

To replace the battery of the transmitter:

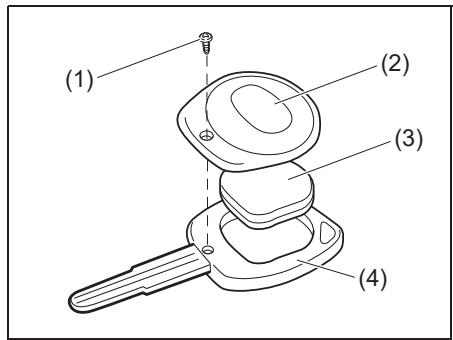

- 1) Remove the screw (1), and open the transmitter cover (2).
- 2) Remove the transmitter (3) from the transmitter holder (4).

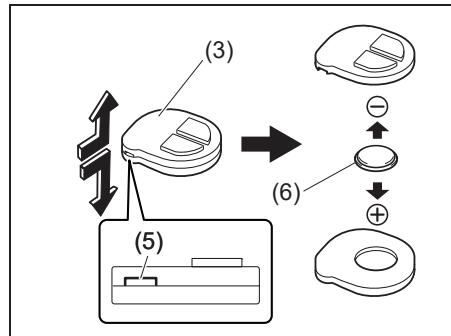

(6) Lithium disc type battery:
CR1616

- 3) Separate the case up and down while applying force to the slot (5) on the side of the transmitter (3).
- 4) Replace the battery (6) so its + terminal faces "+" mark of the transmitter.
- 5) Close the case and install it into the transmitter holder (4).
- 6) Close the transmitter cover (2), install and tighten the screw (1).
- 7) Check that the door locks can be operated with the transmitter.
- 8) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

BEFORE DRIVING

⚠ WARNING


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the transmitter controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

NOTE:

Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.

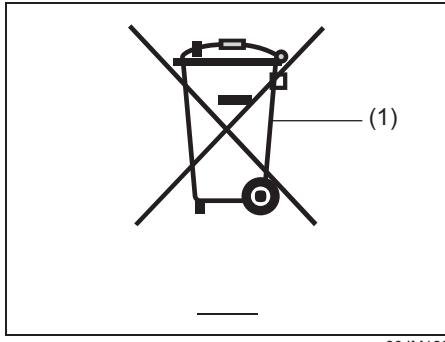

80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling of the used battery, consult with a Maruti Suzuki authorized workshop.

Be careful not to lose your key and to leave it in the locked vehicle.

⚠ WARNING


When you take the remote controller in an airplane, do not press the lock button or the unlock button. When you put the remote controller in a bag, place it so that either of these buttons is not pressed easily. If either of these buttons is pressed, radio wave may interfere with operation of the airplane.

*The remote controller is an electronic device which has a restriction on its use in the airplane.

Keyless Push Start System Remote Controller (if equipped)

The remote controller enables the following operations:

- You can lock or unlock the doors by operating LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch. For details, refer to the explanation in this section.
- You can start the engine without using an ignition key. For details, refer to "Engine Switch (Vehicle with Keyless Push Start System) (if equipped)" in "OPERATING YOUR VEHICLE" section.

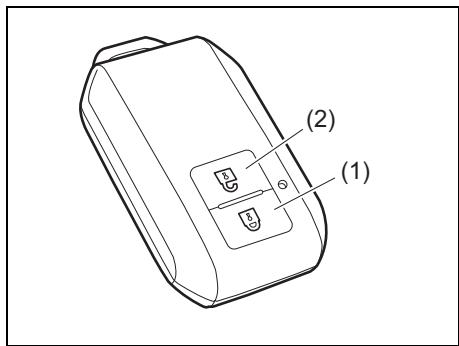

(1) LOCK button
(2) UNLOCK button

There are two ways to lock or unlock all doors (including the tailgate) simultaneously by operating the remote controller near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock all doors, push UNLOCK button (2) once.

The turn signal lights will flash once and the siren will sound once (if equipped) when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice (if equipped).
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

NOTE:

- If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.
- The maximum operating distance of the remote controller is about 5 m (16.4 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the remote controller if the ignition mode is other than the "LOCK" (OFF).
- When any door is open, if you push LOCK button on the remote controller, the exterior buzzer will sound and doors cannot be locked.
- If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop for program the new remote controller code in your vehicle's memory so that the old code is erased.

BEFORE DRIVING

Car locator function

This function helps in locating the vehicle. Push both of LOCK button (1) and UNLOCK button (2) for more than 3 seconds. The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time.

To cancel the car locator function, press any button (LOCK or UNLOCK).

You can also cancel the car locator function in any of the following operations.

- Press the engine switch to change the ignition mode to ON.
- Bring the remote controller with you and press the request switch.


NOTE:

- The car locator function will not activate when the ignition mode is "ACC" or "ON".
- If you lock the doors using the remote controller when the engine hood are open, the siren will sound 3 times to remind you.
- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the remote controller, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound. However, push one

of the buttons 5 seconds later, the siren will sound.

- You can set whether the siren sounds when locking or unlocking the door(s) via the setting mode of the information display.
- For details on how to use the information display, refer to "Information Display" in "INSTRUMENT CLUSTER" section.
- The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the remote controller if the ignition mode is other than the LOCK (OFF).
- When any door is open, if you push LOCK button on the remote controller, the exterior buzzer will sound and doors cannot be locked.
- If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop for program the new remote controller code in your vehicle's memory so that the old code is erased.

Keyless unlocking / locking using the request switches

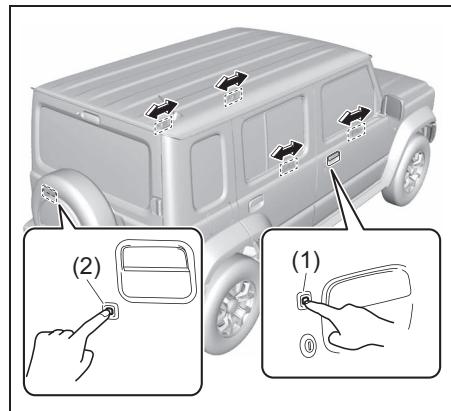

80T030130

When the remote controller is within the operating range described in this section, you can lock or unlock all the doors (including tailgate) by pushing the request switch (1) on the driver's door or front passenger's door or tailgate.

When all doors are unlocked:

- To lock all doors, push one of the request switches once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

To unlock all doors:

- To unlock all doors, push one of the request switches once.


When the doors are unlocked:

- The turn signal lights will flash twice and the exterior buzzer will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate the request switch to lock the doors.

NOTE:

- *The door locks cannot be operated by the request switch under the following conditions:*
 - If any door is open or is not completely closed.
 - If the ignition mode is in any other mode than LOCK (OFF).
- *If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.*

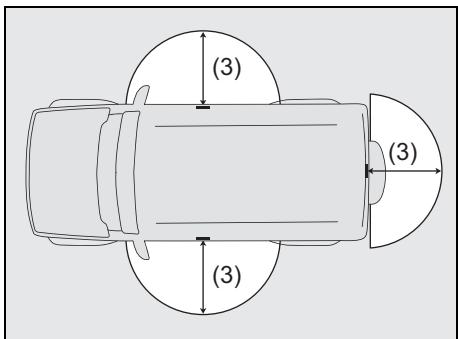

80T030140

(3) 80 cm (2.6 ft)

When the remote controller is within approximately 80 cm (2.6 ft) from a front door handle or the tailgate switch, you can lock or unlock the doors by pushing the request switch.

NOTE:

- *If the remote controller is outside the request switch operating range described above, you will not be able to operate the request switch.*
- *If the battery of the remote controller runs down or there are strong radio waves or noise, the request switch operating range may be reduced or the remote controller may be inoperative.*
- *If the remote controller is too close to the door glass, the request switches may not operate.*

- *If a spare remote controller is in the vehicle, the request switches may not operate normally.*

- *The remote controller will only operate a request switch if it is within the switch's operating range. For example, if the remote controller is within the operating range of the driver's door request switch but not the front passenger's door request switch or the tailgate request switch, the driver's door switch can be operated but the front passenger's door switch or tailgate switch cannot be operated.*

NOTICE

The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:

- **Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.**
- **Keep the remote controller away from magnetic objects such as a television.**

NOTE:

The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the following:


- *When there are strong signals coming from a television, power station or a cellular phone.*

BEFORE DRIVING

- When the remote controller is in contact with or covered by a metal object.
- When a radio wave type remote keyless entry is used nearby.
- When the remote controller is placed near an electronic device such as personal computer.


Some additional precautions you should take and information you should be aware of are:

- Check that the key is stowed in the remote controller. If the remote controller becomes unusable, you will not be able to lock or unlock the doors.
- Check that the driver always carries the remote controller.
- If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop for program the new remote controller code in your vehicle's memory so that the old code is erased.
- You can use up to four remote controllers and the keys for your vehicle. Ask your Maruti Suzuki authorized workshop for details.
- The battery life of the remote controller is about two years, but it can vary depending on usage conditions.

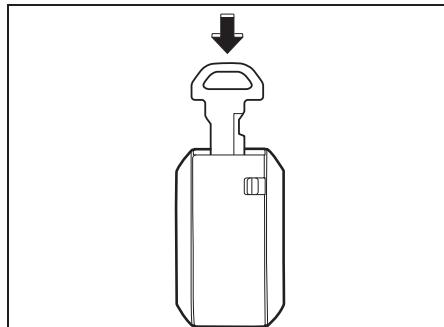

55T030030

To stow the key into the remote controller, push the key in the remote controller until you hear a click.

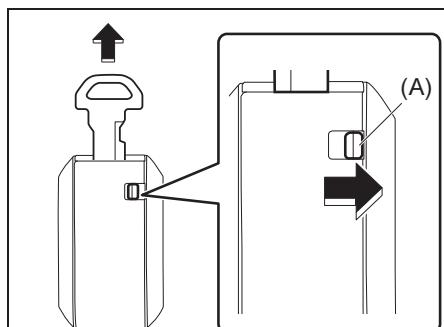

55T030040

To remove the key from the remote controller, slide the lock knob (A) in arrow direc-

tion and pull the key out from the remote controller.


Request switch warning buzzer

The exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch is not working:

- The request switch is pressed after all doors are closed with the ignition mode changed to ACC or ON position by pressing the engine switch when the remote controller is outside the vehicle.
- The request switch is pressed in any of the following conditions after changing the ignition mode to LOCK (OFF) by pressing the engine switch.
 - The remote controller is left inside the vehicle.
 - Any door (including the tailgate) is open.

Press the request switch again after doing the following:

With the ignition mode changed to LOCK (OFF) by pressing the engine switch, bring out the remote controller if it is inside the vehicle and check that all doors are completely closed.

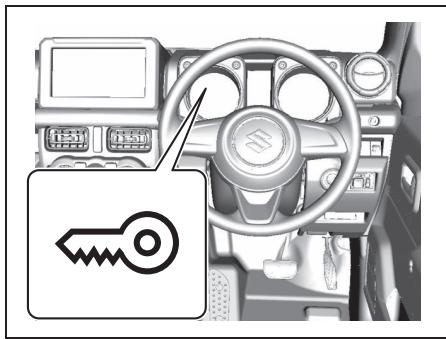Reminder function

77R40040

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:

When one or more doors are opened and all of the doors are later closed with the ignition in any other mode than LOCK (OFF).

The indicator light will turn off within several seconds after the remote controller is returned to an area of the vehicle other than the rear luggage area.

If the remote controller is left in the vehicle and you lock the driver's door or front passenger's door as described below, the door will be automatically unlocked.

- If you open the driver's door and lock the door by turning the lock knob forward, the driver's door will be automatically unlocked.
- If you open the front passenger's door and lock the door by turning the lock knob forward, the front passenger's door will be automatically unlocked.

NOTE:

- *The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor, etc.*
- *Check that the driver always carries the remote controller.*
- *Do not leave the remote controller in the vehicle when leaving the vehicle.*

Battery Replacement**WARNING**

Swallowing a lithium battery may cause serious internal injury or death in the worst case. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When you replace the battery by yourself, touch a metallic part and remove static electricity to prevent damaging the remote controller.

BEFORE DRIVING



NOTE:

- Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.
- You may damage the remote controller when replacing its battery. Ask your Maruti Suzuki authorized workshop to inspect the system.
- When you purchase the battery by yourself at Maruti Suzuki authorized workshop, check the year of manufacture for the battery.

If the remote controller becomes unreliable, replace the battery as follows:


NOTE:

You may damage the remote controller when replacing its battery. Ask your Maruti Suzuki authorized workshop for details.

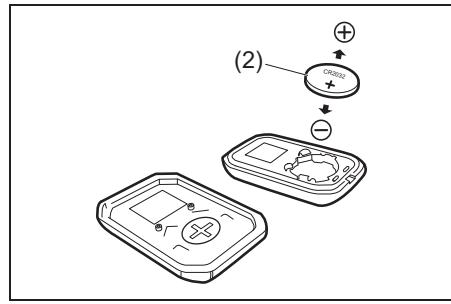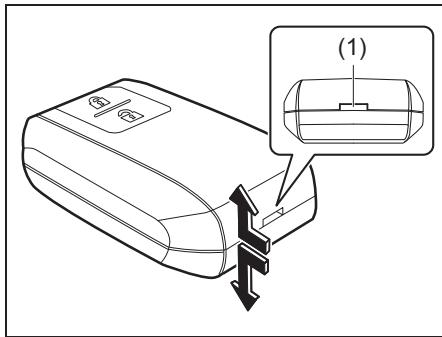

(2) Lithium disc type battery:
CR2032

- 1) Pull the key out from the remote controller.
- 2) Separate the remote controller up and down while applying force to the slot (1) on the side of the remote controller.
- 3) Replace the old battery.
- 4) Place the battery (2) so its + terminal faces up as shown in the illustration.
- 5) Close the remote controller firmly.
- 6) Make sure the door locks can be operated with the remote controller.
- 7) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

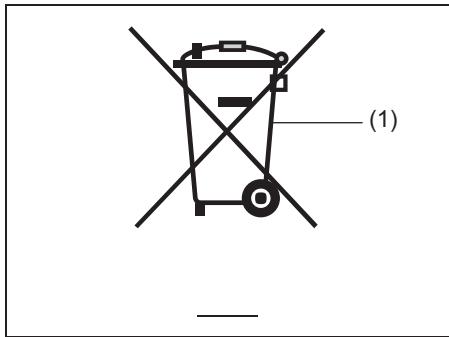

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling of the used battery, consult with a Maruti Suzuki authorized workshop.

80JM133

Security System

The security system is armed after you close and lock all doors (including engine hood and tailgate) by using the keyless entry system transmitter, keyless push start system remote controller or request switch.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless entry system transmitter, keyless push start system remote controller or request switch, or open the engine hood will cause the alarm to be triggered.

- The key
- The lock knob on a door

NOTE:


- The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into the vehicle.
- Always use the keyless entry system transmitter, keyless push start system remote controller or request switch to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.
- If a person who does not know the security system is going to drive the vehicle, we recommend you explain the system and its operation to the person. Mistakenly triggering the alarm may cause a nuisance to others.

- Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or valuable things in the vehicle.

How to Arm the Security System

Lock all doors (including engine hood and tailgate) using the keyless entry system transmitter, keyless push start system remote controller or request switch.

When the system is armed, the indicator (1) continues to blink at intervals of approximately 2 seconds.

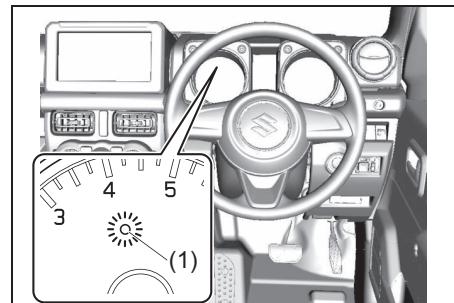

77R30110

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or the warning may be triggered.
- The security system is not armed when all doors are locked using the key from

BEFORE DRIVING

outside, using the door lock knobs or the central door locking switch from inside.

- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, keyless push start system remote controller or request switch, the doors are automatically locked again. When the doors are locked, the security system will be armed.*
- If the security system indicator (1) blinks when the ignition switch is in the "ON" position or the ignition mode is "ON", there may be something wrong with the security system. Ask your Maruti Suzuki authorized workshop for inspection.*

How to Disarm the Security System

Simply unlock the doors using the keyless entry system transmitter, keyless push start system remote controller or request switch. The security system indicator will go out, indicating that the security system is disarmed.

How to Stop the Alarm

Should the alarm be triggered accidentally, the alarm will stop by the following operations.

- Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON in case of emergency.
- Unlock the doors using the keyless entry system transmitter, keyless push start system remote controller or request switch.

NOTE:

- Even after the alarm has stopped, if you lock the doors using the keyless entry system transmitter, keyless push start system remote controller or request switch, the security system will be rearmed.*
- If you disconnect the battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be re-triggered when the battery is reconnected.*
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, without disarming the security system.*

Checking Whether the Alarm has Been Triggered During Parking

If the alarm was triggered and you then turn the ignition switch to "ON" position or the ignition mode is ON the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether the vehicle has been broken into while you were away from it.

Security System Indication


- If any of the doors or tailgate are opened without unlocking by the keyless entry system transmitter, keyless push start system remote controller or request switch, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.*
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.*

Windows


Electric Window Controls

The electric windows can only be operated when the ignition switch is in "ON" position or the ignition mode is ON.

Front

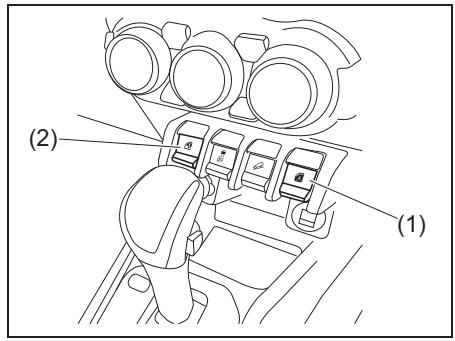


The center console has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window.

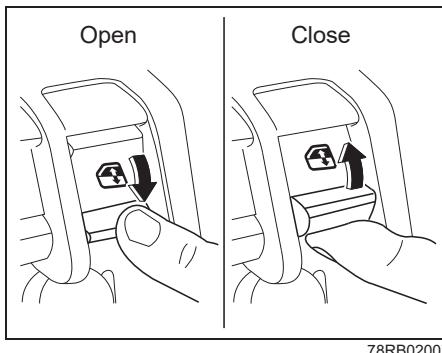

78RB02007


To open a window, push the switch. To close the window, lift up the switch.

The driver's window has AUTO-DOWN and AUTO-UP (if equipped) features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open or close the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

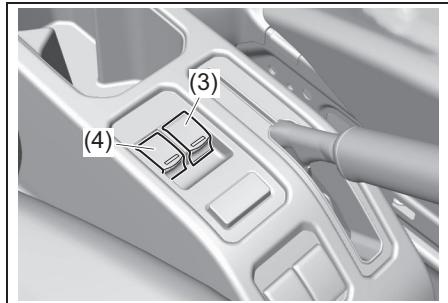

80T030030

The floor console has switches (3) and (4) to operate the rear left and right passenger windows.

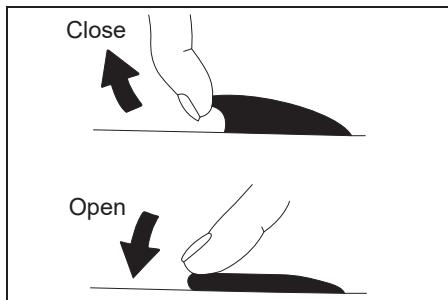

81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

BEFORE DRIVING

Off-delay timer function for the driver's window

After you turn the ignition switch to "ACC" or "LOCK" position or press the engine switch to change ON mode to ACC or LOCK (OFF) mode, you can open or close the driver's window within 30 seconds.

NOTE:


Even within 30 seconds, if the driver's door or the passenger's door is opened, you cannot open or close the driver's window.

Rear



80T030050

The rear passenger's door has a switch (5) to operate the passenger's window.

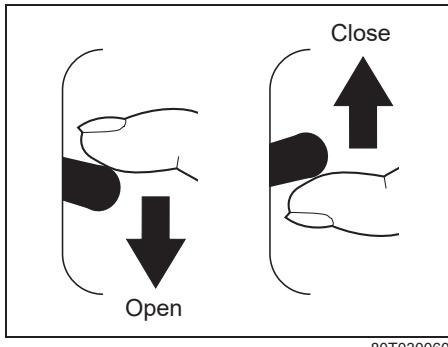

80T030060

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

! WARNING

- When opening or closing a window, a part of body such as hands, legs and neck may be caught by the window and an accident may occur. When you operate a window, observe the following precautions:
 - A driver and the other passengers should be careful when opening or closing a window.
 - Do not allow a child to operate the window switches.
 - You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation. Refer to "Window Lock Switch" in this section for details.
 - When you leave your vehicle, make sure to turn the ignition switch to "LOCK" or press the engine switch to change the ignition mode to OFF. Then, carry your key with you and take a child or children out of the vehicle.

(Continued)

! WARNING

(Continued)

- When you open or close the front passenger's window or the rear windows on the driver's side, check that the other passengers and children do not take their hands and faces outside the vehicle, before the window operation. Also, make sure to inform them that you will perform the window operation.
- When you operate the electric window controls from the outside of the window, your hands or neck may be caught by the window and an accident may occur. Do not operate the electric window controls from the outside of the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Window Lock Switch



80T030040

The floor console also has a lock switch for the rear passenger's window(s). When you push in the lock switch, the rear passenger's window(s) cannot be raised or lowered by operating any of the switches (3), (4) or (5). To restore normal operation, release the lock switch by pushing it again.

Pinching Prevention Function

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

! WARNING

The function may not detect the object depending on shape, size, hardness and position of the object caught by the closing window. This may cause severe injury.

Be very careful when opening or closing the windows.

BEFORE DRIVING

⚠ CAUTION

- The pinching prevention function does not operate while you are holding the window switch in UP position.
- The pinching prevention function may not detect an object caught in the window just before the window is fully closed.

NOTE:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position.

If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:


- Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON.
- Open the driver's window fully by holding the window switch in DOWN position.
- Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- Check the driver's window to see if the AUTO-DOWN/UP feature works.

⚠ WARNING


As the pinching prevention function will not operate until its initialization is completed, an accident may occur. Make sure to perform the pinching prevention function initialization.

If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Lighting Control Lever Automatic Light Operation (if equipped)

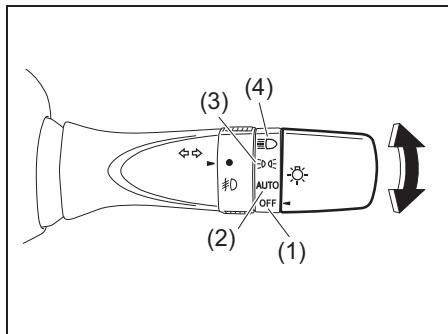

80T030360

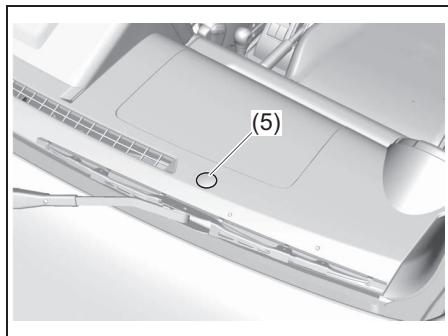

80T030280

Your vehicle's lighting system is controlled by two main systems: the lighting switch and the auto-on headlight system (when the lighting switch is in "AUTO" position).

The two systems work together to operate your lights as shown in the following chart:

ON: Lights ON

LIGHT: When it is light around the light sensor (5).

DARK: When it is dark around the light sensor (5).

Lighting switch position	Main lights to be operated	Ignition switch in the "LOCK" or "ACC" position / Ignition mode LOCK (OFF) or ACC		Ignition switch in the "ON" position / Ignition mode ON	
		LIGHT	DARK	LIGHT	DARK
(1) OFF	Position lights, Tail lights	—	—	—	—
	Headlights	—	—	—	—
(2) AUTO	Position lights, Tail lights	—	—	—	ON
	Headlights	—	—	—	ON
(3) ⚡	Position lights, Tail lights	ON	ON	ON	ON
	Headlights	—	—	—	—
(4) ⚡	Position lights, Tail lights	ON	ON	ON	ON
	Headlights	ON	ON	ON	ON

To turn the lights on or off, twist the knob on the end of the lever. There are four positions:

OFF (1)

All lights are off.

AUTO (2)

This function works when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON. The headlights and position lights are turned on and off automatically according to the amount of outside light detected by a sensor. They go out automatically when you turn the ignition switch to "ACC" or "LOCK" position or change the ignition mode to ACC or LOCK (OFF) by pressing the engine switch.

The light sensor (5) for sensing the amount of outside light is installed on the passenger's seat side of instrument panel.

CAUTION

If the light sensor area of the windshield is covered with mud, ice, or other similar substances, the headlights and position lights may be turned on even when it is still light outside.

BEFORE DRIVING

NOTE:


- Avoid covering the light sensor area of the windshield with a sticker. The sticker may impair the performance of the sensor and make the system unable to control operation of the lights correctly.
- If you turned the ignition switch to "ON" position or changed the ignition mode to ON by pressing the engine switch and "AUTO" position remains selected, the headlights and position lights come on automatically as it gets dark outside, even with the engine not running. Leaving the lights lit for a long time may lead to a completely discharged battery.

☰ (3)

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.


☰ (4)

Front position lights, tail lights, license plate light, instrument lights and headlights are on.

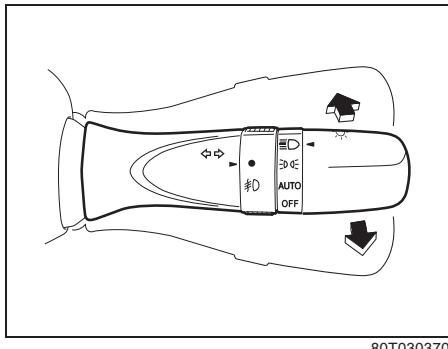

80T030370

Auto-on headlight system

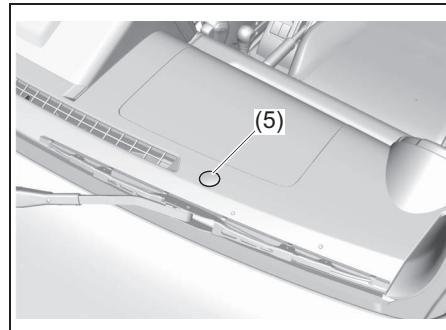

80T030280

The auto-on headlight system automatically turns on all lights that are operated by the lighting switch, when the following three conditions are all met.

Conditions for auto-on headlight system operation:

- 1) It is dark around the light sensor (5).
- 2) The lighting switch is in "AUTO" position.
- 3) You turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON.

This system is activated by a signal from the light sensor (5) on the passenger side of instrument panel. Do not cover the sensor (5). Otherwise, the system will not work correctly.

⚠ WARNING

It takes about 5 seconds for the light sensor to react to a change in lighting conditions. To help avoid an accident due to reduced visibility, turn on your headlights before driving into a tunnel, parking structure, etc.

NOTE:

The light sensor reacts even to infrared rays, so it may operate incorrectly when there are strong infrared rays.

Light Reminder Buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:


The headlights and/or position lights are on even after the ignition switch is turned to "LOCK" position, or the engine switch is pressed to change the ignition mode to LOCK (OFF).

The buzzer stops sounding when you turn off the headlights and position lights.

NOTE:

A message is indicated on the information display in the instrument cluster while the buzzer is sounding.

Front Fog Light Switch (if equipped)

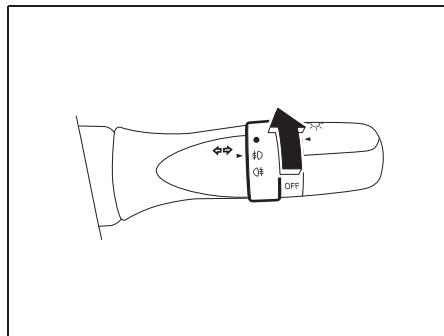


55T030110

To turn the front fog light on, twist the knob as shown in the illustration with the position lights, tail lights and/or the headlights are on. When the front fog light is on, an indicator light on the instrument cluster will come on.

NOTE:

In some countries the lighting operation may be different from the above description according to local regulations.

Headlight Leveling Switch

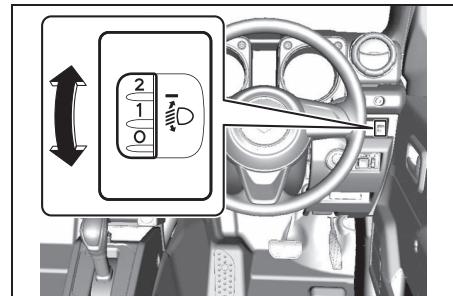


80T030190

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle load conditions.

BEFORE DRIVING

Vehicle Load Condition	Switch Position
Driver only	0
Driver + 1 passenger (in front seat)	0
Driver + 3 passengers, no cargo	1.5
Driver + 3 passengers, cargo added	2.0
Driver + full cargo	3.5

Headlight Washer Switch (if equipped)

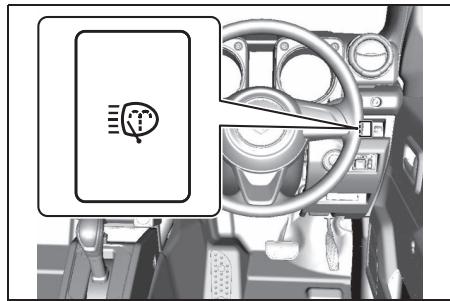


With the ignition switch in the "ON" or the ignition mode ON and the headlights are turned on, push the headlight washer switch to wash the headlight lenses. Washer fluid is sprayed for half a second. If necessary, push the switch again.

Under the same conditions, if you operate the windshield washer two or more times successively at short intervals, the headlight washers also operate automatically but only once at the same time as the first windshield washer operation.

Turn Signal Control Lever

You can use the turn signal control lever when the ignition switch is in "ON" position or the engine switch is in ON mode.

Turn Signal Operation

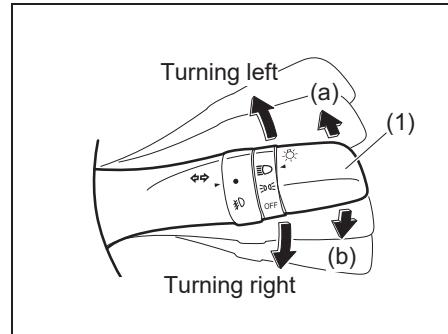


With the ignition switch in "ON" position or the ignition mode ON, move the lever upward or downward to activate the right or left turn signals.

- Move the turn signal control lever (1) as follows:
 - Turning left: Move the lever upward.
 - Turning right: Move the lever downward
- When you move the lever, the turn signal lights and the turn signal light indicators on the instrument cluster will flash simultaneously.

- When you move the lever to its original position, the turn signal lights and the turn signal light indicators on the instrument cluster will be turned off.
- When changing lanes, if you lightly press the turn signal control lever in the directions (a) or (b) in which you want to change lanes, the turn signal lights and turn signal light indicators on the instrument cluster will flash only while the turn signal control lever is pressed.
- The turn signal control lever in the above figure is a typical example; the actual equipment depends on the vehicle type.

NOTE:

If the angle which you turn the steering wheel is small, the lever will not automatically returned to its original position. In this case, return the lever to its original position by your hand.

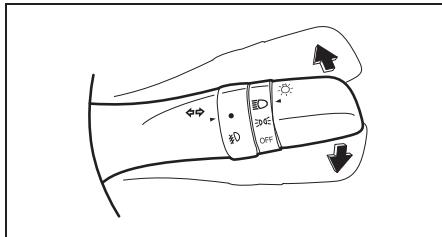Lane change signal


55T030510

Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.

- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.

NOTE:

- The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information Display" in "INSTRUMENT CLUSTER" section.*
- You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times). Please ask your Maruti Suzuki authorized workshop for the customization.*

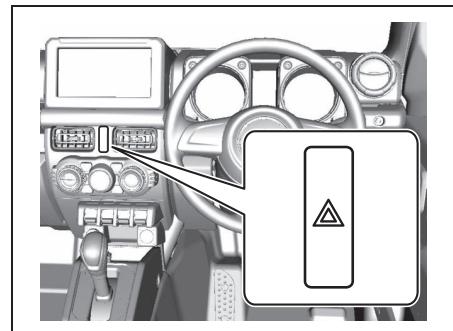Hazard Warning Switch

77R30850

You can use the hazard warning switch to warn the other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

- Push the hazard warning switch to activate the hazard warning lights. The turn signal lights and the turn signal indicators on the instrument cluster will flash simultaneously.
- Push the switch again to turn off the hazard warning switch.
- The instrument panel in the above figure is a typical example; the actual equipment depends on the vehicle type.

BEFORE DRIVING

NOTICE

If you use the hazard warning switch for many hours with the engine stopped, the lead-acid battery may run out.

Do not use the hazard warning switch for many hours with the engine stopped.

Windshield Wiper and Washer Lever

When the ignition switch is in "ON" position or the ignition mode is ON, you can use the wiper/washer lever.

▲ CAUTION

In cold weather, the sprayed washer fluid on the glass may get frozen and it may cause poor visibility to a driver. Use the defroster to warm the glass and spray the washer fluid. Refer to "Heating And Air Conditioning" in the "OTHER CONTROLS AND EQUIPMENT" section.

NOTICE

- If you use the wipers with the glass dried, the glass and the wiper blade rubbers may be damaged. When the glass is dry, use the washer fluid and then use wipers.
- If you operate the wipers with the wiper blades stuck on the glass, the wiper blade rubbers may be damaged or the wipers may be broken. When the wiper blades are stuck on the glass, do not operate the wipers.
- If you use the washer when the washer fluid cannot be sprayed enough, the washer pump may be broken. When the washer fluid cannot be sprayed enough, turn off the washer switch.

When the operative wipers suddenly stop


When the wipers are under heavy load such as covered by snow and the temperature of the wiper motor becomes high, the breaker will be activated and the wipers will temporarily stop to protect the wiper motor from overheating.

If this happens, perform the following operations:

- 1) Stop the vehicle in a safe place, and turn the ignition switch to "ACC" or "LOCK" position or press the engine switch to change the ignition mode to ACC or LOCK (OFF).
- 2) Move the wiper lever and switch to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and you can use the wipers.

If you cannot use the wipers after a while, there may be another problem. Ask your Maruti Suzuki authorized workshop to have the wipers inspected.


Windshield Wipers

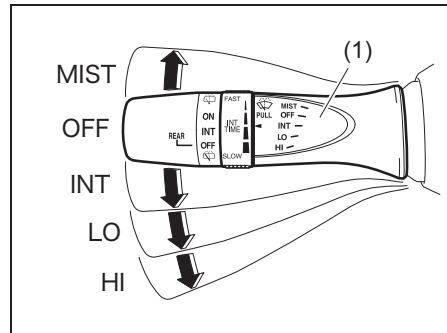

52R30460

You can operate the windshield wipers by moving the lever (1) upward or downward.

MIST	Temporary operation only while the lever is up
OFF	Off
INT	Intermittent operation
LO	Low speed operation
HI	High speed operation

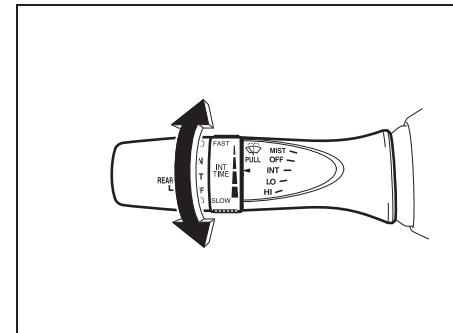


80T030250

The lever is equipped with the "INT TIME" control. Turn the control forward or rearward to adjust the intermittent wiper operation to the desired interval.

BEFORE DRIVING

Windshield Washer

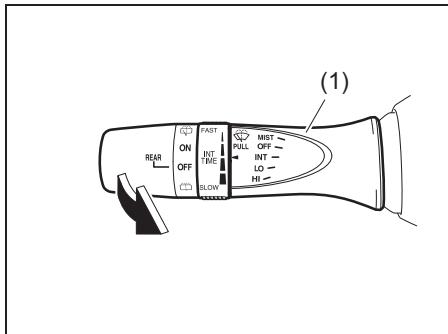

81P31000

If you pull the lever (1) toward you, the windshield washer fluid will be sprayed and the windshield wipers will automatically operate a few times.

WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.

Rear Window Wiper

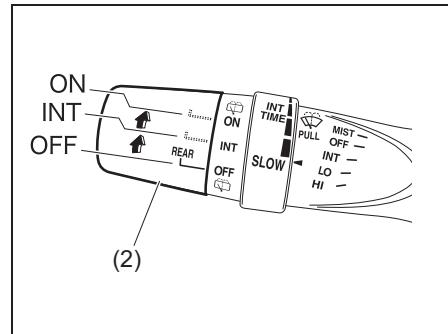


80T030350

You can operate the rear window wiper by twisting the lever (2) as shown in the illustration.

ON	Normal operation
INT	Intermittent operation
OFF	Off


NOTICE

Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

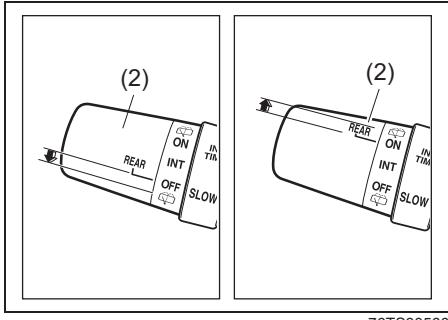Rear Window Washer


76TS030560

- If you twist the lever (2) in the direction of \uparrow and align it to  (washer) position above "ON" position, the rear window washer fluid will be sprayed and the rear wiper will operate simultaneously. If you release your hand from the lever, it will return to "ON" position.
- If you twist the lever (2) in the direction of \downarrow and align it to  (washer) position below "OFF" position, the rear window washer fluid will be sprayed and the rear wiper will operate simultaneously. If you release your hand from the lever, it will return to "OFF" position.

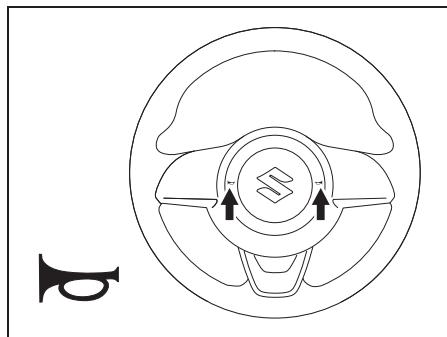
Horn

80TM030301

Press the horn button of the steering wheel to sound the horn.

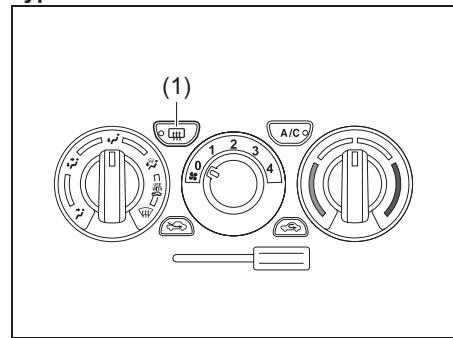Heated Rear Window Switch**Type 1**

80T030320

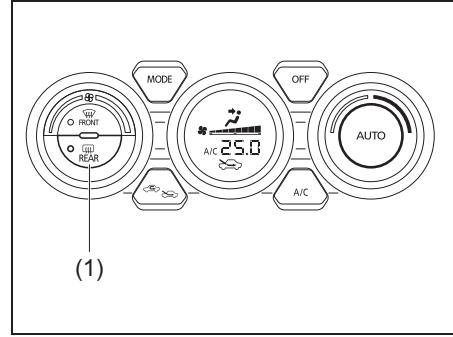Type 2

78RB02064

When the rear window is misted, push this switch (1) to clear the window.

BEFORE DRIVING

An indicator light will come on when the defogger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.


NOTICE

The heated rear window use a large amount of electricity. Turn off the switch after the window have become clear.

NOTE:

- *The defogger will work only when the engine is running.*
- *The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the lead-acid battery.*

INSTRUMENT CLUSTER

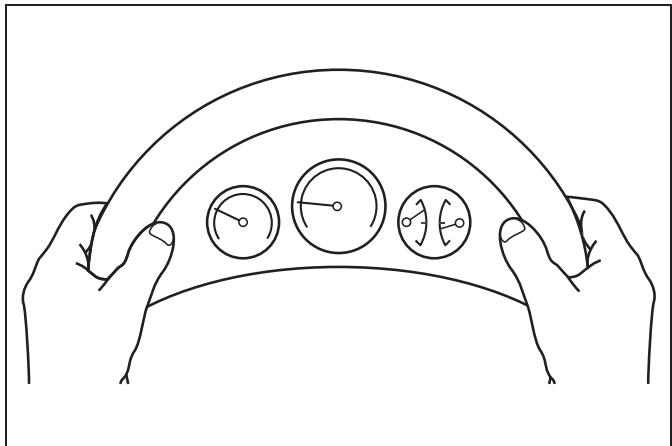


59RN04640

Instrument Cluster	4-1
Information Switch (if equipped)	4-3
Information Display	4-4
Warning and Indicator Lights	4-25

INSTRUMENT CLUSTER

Instrument Cluster

- (1) Speedometer
- (2) Tachometer
- (3) Information display
- (4) Trip meter selector knob
- (5) Indicator selector knob
- (6) Warning and indicator lights

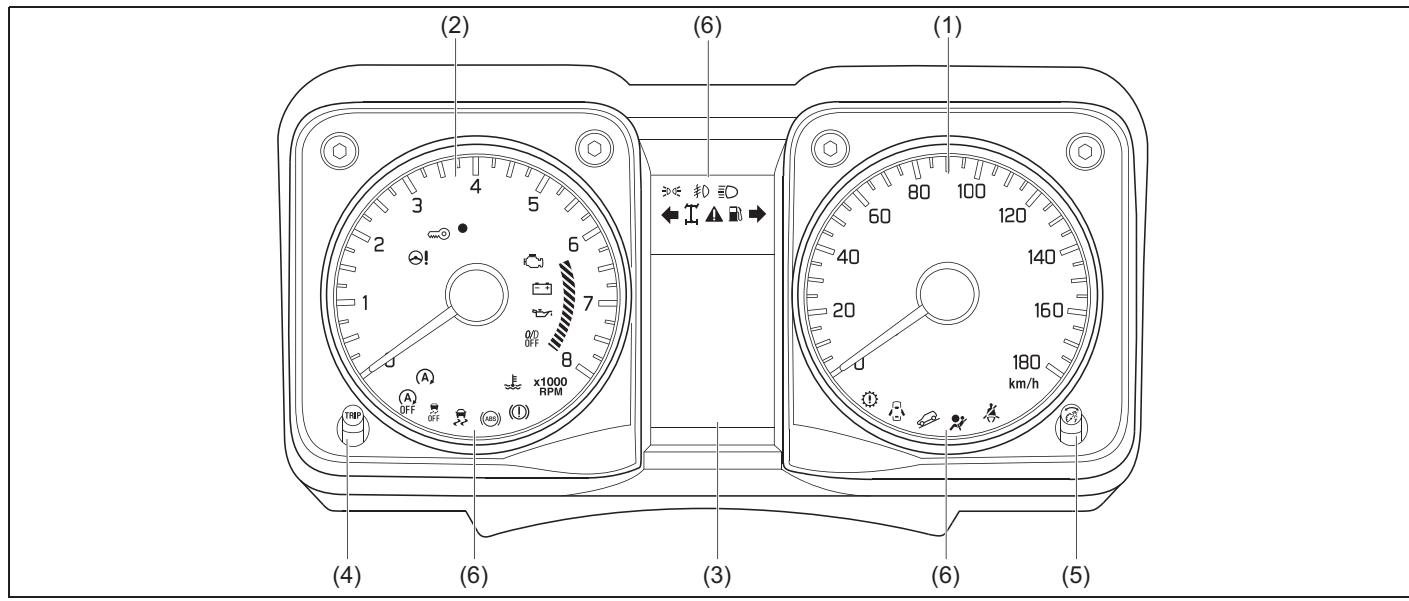

80TM04001

Speedometer

The speedometer indicates vehicle speed.

Tachometer


The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result.

Keep the engine speed below the red zone even when downshifting to a lower gear position.

Refer to "Downshifting maximum allowable speeds" in "OPERATING YOUR VEHICLE" section.

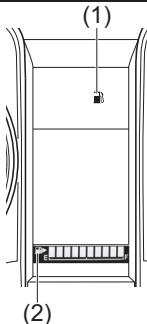Fuel Gauge

78RB02036

When the ignition switch is in "ON" position or the ignition mode is ON, this gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

- If the indicator shows only one segment to "E", refill the tank as soon as possible.


If the last segment blinks, it means that the fuel is almost empty. If the low fuel warning light (1) comes on, fill the fuel tank immediately. Refer to "Low fuel warning light" in "Warning and indicator lights" in this section for details. The mark (2) indicates that the fuel filler door is located on the right side of the vehicle.

NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

Brightness Control

80TM04004

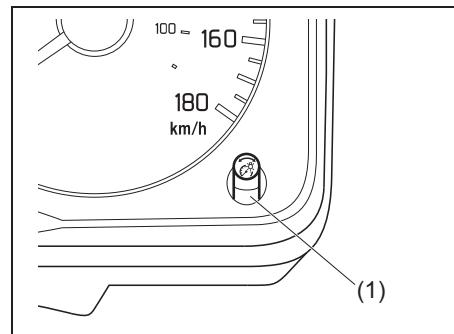

80TM04005

INSTRUMENT CLUSTER

When the ignition switch is in "ON" position or the ignition mode is ON, the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

When the position lights and/or headlights are on, you can adjust the meter illumination brightness.

To increase the brightness of the instrument panel lights, turn the indicator selector knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the indicator selector knob (1) counterclockwise.

WARNING


Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

- If you do not turn the knob within several seconds, the brightness control display will be canceled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.
- If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be cancelled.
 - The function which automatically dims the brightness of instrument panel lights
 - The function which operates with the brightness control, except maximum brightness level

Information Switch (if equipped)

You can use the information switch to switch the display indication when the ignition switch is in "ON" position and the vehicle is stationary.

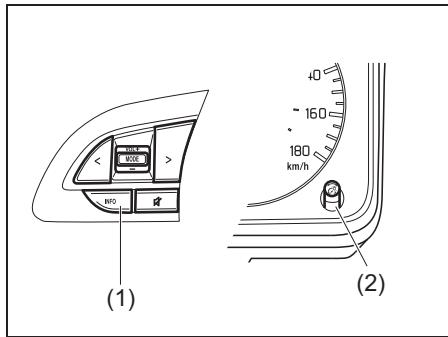

78RB02099

(1) Information switch

(2) Indicator selector knob

To switch to the setting mode

- 1) Push and hold the information switch (1) when the vehicle is stationary.
- 2) After the display of setting mode is shown, select the setting item that you want to change by turning the indicator selector knob (2) left or right. Refer to "Setting mode" in this section for details.

NOTE:

If you switch to the setting mode while either of the following items is shown on the information display, the current value will be reset. If you do not want to reset its value, push the indicator selector knob (2) quickly beforehand and switch to the other item.

- Average fuel consumption
- Driving time
- Average speed

To exit the setting mode

To exit the setting mode, select "Back" and push the indicator selector knob (2) or push the information switch (1) quickly.


NOTE:

You can exit the setting mode by either of the following operations:

- Turn the ignition switch to "ACC" or "LOCK" position or change the ignition mode to ACC or LOCK (OFF) by pressing the engine switch.
- Start driving your vehicle.


Information Display

The information display is shown when the ignition switch is in "ON" position or the ignition mode is ON.

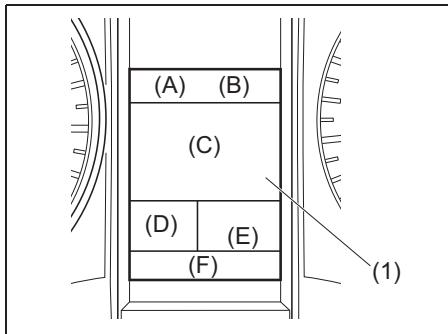

80TM04002

(1) Information display

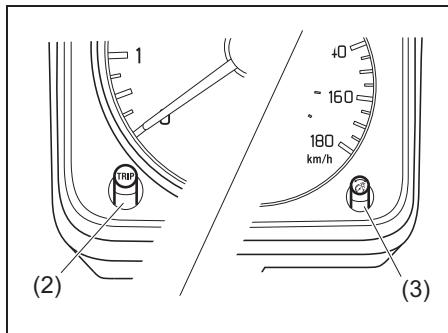

78RB02039

- (2) Trip meter selector knob
(3) Indicator selector knob

The information display shows the following information.

Display (A)

Clock

Display (B)

Thermometer

Display (C)

Warning and indicator messages / Fuel consumption / Driving range / Average speed / Driving time / Cruise control (if equipped)

Display (D)

Selector position (for Automatic transmission models) / Gearshift indicator (if equipped)


INSTRUMENT CLUSTER

Display (E)

Trip meter / Odometer

Display (F)

Fuel gauge

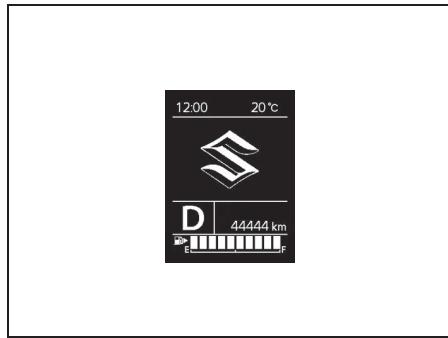

80TM04003

When the ignition switch is turned "ON" position or the ignition mode is ON, the message shown in the above illustration will appear on the display for several seconds.

Some warning and indicator messages may appear on the display when the ignition switch is in "ACC" or "LOCK" position or the ignition mode is ACC or LOCK (OFF).

Clock


When the ignition switch is turned "ON" position or the ignition mode is ON, the display (A) shows the time. To set the clock, follow "Setting mode" instructions in this section.

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.
Do not attempt to adjust the display while driving.

Thermometer

When the ignition switch is in "ON" position or the ignition mode is ON, the display (B) shows the thermometer. The thermometer indicates the outside temperature.

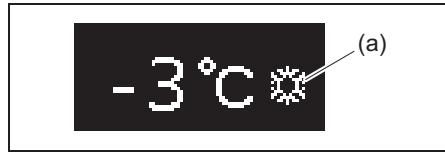

78RB02040


If the outside temperature nears freezing condition, the mark (a) will appear on the display.

NOTE:

- The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.
- If there is something wrong with the thermometer, or just after the ignition switch is turned "ON" or changed the ignition mode to ON, the display may not indicate the outside temperature.

When the display (C) shows the driving range, you can change the unit of temperature.


To change the unit of temperature, refer to "Setting mode" in this section.

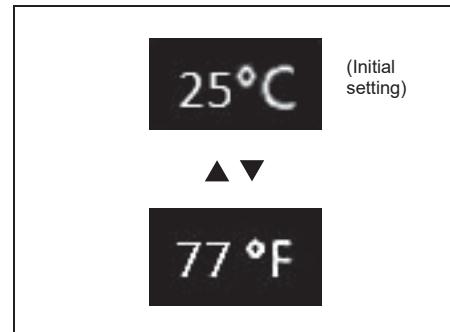

52RM20880

Fuel Consumption / Driving Range / Average Speed / Driving Time

When there are no warning or indicator messages on the display (C), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time or no indication.

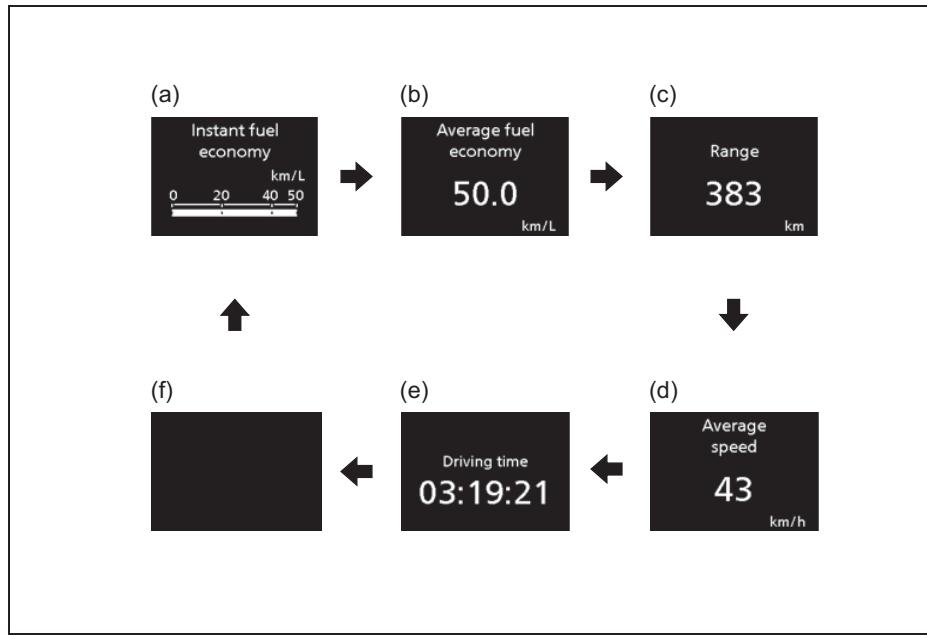

- (a) Instantaneous fuel consumption
- (b) Average fuel consumption
- (c) Driving range
- (d) Average speed
- (e) Driving time
- (f) No indication

To switch the display indication, push the indicator selector knob (3) quickly.

NOTE:

The value of fuel consumption, driving range and average speed shown on the display are affected by the following conditions;

- road condition
- surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blinks

78RB02041

INSTRUMENT CLUSTER

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

NOTE:

- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L.
- The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
 - For L/100km setting: 30
 - For km/L setting: 50
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

Average fuel consumption

If you previously selected average fuel consumption setting, the display shows average fuel consumption from the last reset to the present when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to ON.

NOTE:

When you reconnect the terminals to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;

- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

NOTE:

If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset.

Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "—" for a few seconds and then indicates the current driving range when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to ON.

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display "—" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.

NOTE:

- If you refuel when the ignition switch is "ON" or the ignition mode is ON, the driving range may not indicate the correct value.
- When you reconnect the terminals to the lead-acid battery, the value of driving range will be shown after driving for a period of time.

- If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly.*

Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to ON. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, push and hold the indicator selector knob (3) for a while when the display indicates an average speed. The display shows "---" and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the terminals to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

Driving time

The display shows the total amount of driving time since the indication was reset.


- To reset the driving time, push and hold the indicator selector knob (3) for a while when the display shows the driving time.*

NOTE:

- When you reset the indication or reconnect the terminals to the lead-acid battery, the driving time will be shown after driving for a while.*
- The indicated maximum value of driving time is 99:59:59. No more than the maximum value will be indicated on the display until you reset the driving time.*

Selector Position (for Automatic transmission vehicles) / Gearsshift Indicator (for Manual transmission vehicles)

The display (D) shows some of the following indications.

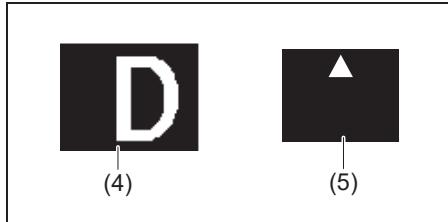

80T040090

- (4) Selector position
(5) Gearsshift indicator


Refer to "Gearsshift indicator" in "OPERATING YOUR VEHICLE" section.

INSTRUMENT CLUSTER

Trip Meter / Odometer

The display (E) shows one of the following indications; odometer, trip meter A or trip meter B.

To switch the display indication (E), push the trip meter selector knob (2).

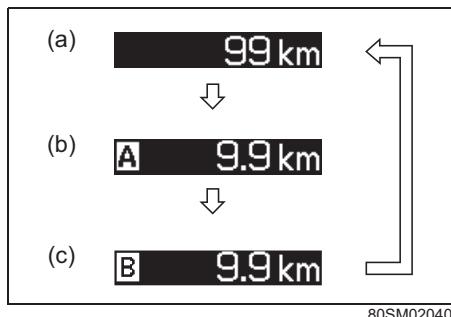

Push the trip meter selector knob (2).

- (a) Odometer
- (b) Trip meter A
- (c) Trip meter B

⚠ WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.
Do not attempt to adjust the display while driving.

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To reset the trip meter, push and hold the trip meter selector knob (2) until the display shows 0.0.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Odometer

The odometer records the total distance the vehicle has been driven.

NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.


Fuel Gauge

The display (F) shows the fuel gauge. Refer to "Fuel gauge" in this section.

Setting Mode

When the ignition switch is in "ON" position or the ignition mode is ON and the vehicle is stationary, you can enter the setting mode of the information display by pushing and holding the indicator selector knob (3) for a while.

- To select the setting that you want to change, turn the indicator selector knob (3) left or right.
- To change the setting, push the indicator selector knob (3).
- To exit the setting mode, select "Back" and push the indicator selector knob (3).

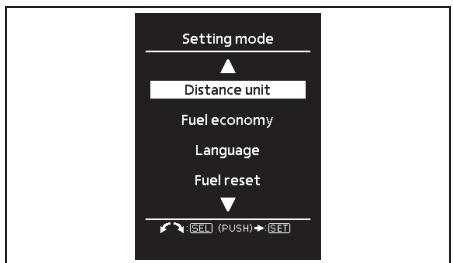

78RB02096

NOTE:

The currently selected setting item is surrounded by a frame.

NOTE:

- If you push and hold the indicator selector knob (3) to enter the setting mode when the display (C) shows average fuel consumption or average speed, driving time, the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.
- If you turn the ignition switch, press the engine switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.

Distance unit

(Odometer / trip meter / driving range / average speed distance unit setting)

You can change the units in which odometer / trip meter / driving range / average speed distance is displayed.

Fuel economy

(Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language

You can change the language of the information display.

Fuel reset

(Average fuel consumption reset setting)

You can change when the value of average fuel consumption is reset.

Temperature

(Temperature unit setting)

You can change the units that temperature is displayed in.

- To change the temperature unit, select "Temperature" in "Setting mode". Then, select "°C" or "°F".

NOTE:

When you change the units that temperature is displayed in, the automatic heating and air conditioning system temperature display units will be changed automatically.

Clock setting

(Adjusting the clock)

- Adjust the clock by selecting "Clock setting" in "Setting mode". Then, select "Adjust Clock".
- To change the hour indication, turn the indicator selector knob (3) left or right repeatedly when the hour indication appears as reversed color. To change the hour indication quickly, turn and hold indicator selector knob (3). To set the hour indication, push the indicator selector knob (3) and the minute indication appears as reversed color.
- To change the minute indication, turn the indicator selector knob (3) left or right repeatedly when the minute indication appears as reversed color. To change the minute indication quickly, turn and hold indicator selector knob (3). To set the minute indication, push the indicator selector knob (3).

INSTRUMENT CLUSTER

(Selecting 12H/24H format)

- Switch the time indication between 12-hour and 24-hour format by selecting "Clock setting" in "Setting mode". Then, select "12H" or "24H".

Door lock (Door lock setting)

(Auto lock)

- Manual Lock:
Disable the automatic door locking function
- Speed Sync:
Lock all doors when the vehicle speed reaches 15 km/h (default setting)
- Gear shift sync: (if equipped)
Lock all doors when the gearshift lever is in other than "P" position.

(Auto unlock)

- Sync Off:
Disable the automatic door unlocking function (default setting)
- IGN-OFF Sync:
(vehicle with keyless push start system)
Unlock all doors when the engine switch is pressed to change the ignition mode to LOCK (OFF)
- IGN-OFF Sync:
(vehicle without keyless push start system)
Unlock all doors when the ignition switch is turned to "LOCK" position
- Gear shift sync:
(for automatic transmission vehicle)
Unlock all doors when the gearshift lever is moved from other position to "P" position.

(Alarm)

- You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

Lights

(Lane change setting)

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever shortly after operating it.

- To change the lane change setting, select "Lane change" in "Setting mode". Then, select "ON" or "OFF"
- If you want to change the number of flashing, consult with a Maruti Suzuki authorized workshop.

IS A/C (ENG A-STOP system setting)

- When using the automatic heating and air conditioning system (if equipped), you can select one of the following engine auto stop settings.
 - Standard
 - Economy
 - Comfort
- When "Economy" is selected, engine auto stop condition is eased, compared with "Standard". As engine auto stop condition will occur more frequently, the stop time will be longer, leading to reduction of fuel consumption.
- When "Comfort" is selected, engine auto stop condition becomes severe, compared with "Standard". As engine auto stop condition will occur less frequently,

the stop time will be shorter, leading to more comfortable cabin condition by air conditioner.

Default

(Initialization setting)

If you select "YES" and push the indicator selector knob (3), all settings will be reinitialized.

Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

In some cases, the internal buzzer may also sound at the same time to alert you.

If warning and indicator messages appear on the display, follow the messages.

- When you push and hold the indicator selector knob (3) for several seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after several seconds.

Master warning indicator light



80P0382

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:


- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.

INSTRUMENT CLUSTER


Warning and indicator messages

When ignition switch is in “ACC” or “LOCK” position or ignition mode is ACC or LOCK (OFF)

All models

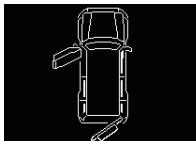Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 80T040280	Off	Off	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly.
 61MM0A172	Blinks	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.

Vehicle with keyless push start system

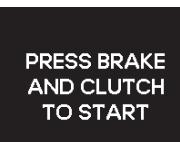Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 61MM0A163	Off	Off	This message is displayed when ACC position is selected as the ignition mode. *1
 75RM214	Off	Off	The brake pedal is depressed. Press the engine switch to start the engine.
Manual transmission  61MM0A166	Off	Off	The engine switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message.

*1:This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Automatic Transmission  61MM0A165	Off	Off	The engine switch is pressed with the gear-shift lever in a position other than "P" or "N" or without depressing the brake pedal. Shift into "P" and depress the brake pedal.
Automatic Transmission  75RM221	Off	Off	The engine switch is pressed with the gear-shift lever in a position other than "P". Shift into "P" and depress the brake pedal.
 61MM0A168	Blinks 	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.


Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 SERVICE START SYSTEM 75RM215	Blinks 	Beep (one time from interior buzzer)	There is a problem with the immobilizer/keyless push start system. Also, the vehicle battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by a Maruti Suzuki authorized workshop.
 KEY FOB NOT DETECTED 75RM216	Blinks 	Beep (two times from interior/exterior buzzer)	The remote controller may be outside the vehicle or its battery may be discharged. Bring the remote controller in the vehicle or touch the engine switch with the remote controller. If the message still appears, replace the remote controller battery.
 PLACE KEY FOB ON START SWITCH 75RM217			

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 <p>KEY FOB NOT DETECTED</p> <p>75RM216</p>	 <p>Blinks</p>	<p>Beep (five times from interior/exterior buzzer) and then Beep (one time from interior buzzer)</p>	<p>When the engine switch was in ACC or ON mode, the remote controller was detected. However, when you started the vehicle, the remote controller was not detected. Bring the remote controller in the detectable area and try to push the engine switch again.</p>
 <p>PLACE KEY FOB ON START SWITCH</p> <p>75RM217</p>			
 <p>KEY FOB NOT DETECTED</p> <p>75RM216</p>	 <p>Blinks</p>	<p>Beep (five times from exterior buzzer)</p>	<p>When you started the engine or the engine switch is in ACC or ON mode, you opened or closed any of the doors and the remote controller was out of the detectable area. Bring the remote controller in the detectable area.</p>

When ignition switch is in “ON” position or ignition mode is ON

All models

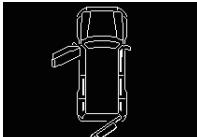Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 80T040280	Blinks  (only while driving)	Beep (one time from interior buzzer) (only while driving)	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly. *1
 75RM268	Blinks 	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.
 75RM213	Off	Beep (one time from interior buzzer)	Fuel level is low. Refill it as soon as possible. *1

*1: This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 ICE POSSIBLE DRIVE WITH CARE 78RB02047	Off	Off	The road may be icy. Drive very carefully. *1
 75RM223	Blinks	Beep (one time from interior buzzer)	There may be a problem with ESP® system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
Hill hold control system / Hill descent control system  75RM224	Blinks	Beep (one time from interior buzzer)	There may be a problem with hill hold control system or hill descent control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

*1: This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Hill hold control system ESP HILL HOLD DISABLE 75RM224	Blinks 	Beep (one time from interior buzzer)	When the transfer lever is in "4L" position and ESP® OFF switch is pushed and turned off the ESP® systems, the hill hold control system is deactivated and this message appears. This is not a malfunction and check that the hill hold control system is deactivated.

INSTRUMENT CLUSTER

Vehicle with keyless push start system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 75RM218	Off	Off	This message is displayed when ON position is selected as the ignition mode. *1
 75RM214	Off	Off	The brake pedal is depressed. Press the engine switch to start the engine.
Manual transmission  61MM0A166	Off	Off	The engine switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Automatic Transmission  PRESS BRAKE SHIFT TO P TO START 61MM0A165	Off	Off	The engine switch is pressed with the gear-shift lever in a position other than "P" or "N" or without depressing the brake pedal. Shift into "P" and depress the brake pedal.
 SERVICE STEERING LOCK SYSTEM 61MM0A168	Blinks 	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
 TRN. STEERING WHEEL TO RELEASE LOCK 75RM219	Blinks 	Beep (one time from interior buzzer)	The steering lock is not disengaged. While lightly turning the steering wheel in left and right directions, press the engine switch again.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 SERVICE START SYSTEM 75RM215	Blinks 	Beep (one time from interior buzzer)	There is a problem with the immobilizer/ keyless push start system. Also, the vehicle battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by a Maruti Suzuki authorized workshop.
 KEY FOB LOW BATTERY 75RM220	Off	Off	The remote controller battery is about to become flat. Replace the battery. *1

*1:This message will disappear for a while even if the problem that caused the message to appear is not corrected.

INSTRUMENT CLUSTER

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
 KEY FOB NOT DETECTED 75RM216	Blinks 	Beep (two times from interior/exterior buzzer)	The remote controller may be outside the vehicle or its battery may be discharged. Bring the remote controller in the vehicle or touch the engine switch with the remote controller. If the message still appears, replace the remote controller battery.
 PLACE KEY FOB ON START SWITCH 75RM217			

INSTRUMENT CLUSTER

Warning and Indicator Lights

NOTE:

If warning and indicator lights blink or come on, the corresponding messages may be shown on the information display.

Brake System Warning Light



82K170

Three different types of operations exist depending on the vehicle's specification.

- 1) The light comes on briefly when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON. The light comes on when the parking brake is engaged with the ignition mode ON.
- 2) The light comes on when under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system. If this happens, you should:

- 1) Pull off the road and stop carefully.

⚠ WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- 2) Test the brakes by carefully starting and stopping on the shoulder of the road.
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorized workshop for repairs or tow the vehicle to the nearest Maruti Suzuki authorized workshop for repairs.

⚠ WARNING

If any of the following conditions occur, you should immediately ask your Maruti Suzuki authorized workshop to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to ON.
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

(Parking Brake Reminder Buzzer)

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Anti-lock Brake System (ABS) Warning Light



80J127

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to "LOCK" position or change the ignition mode to LOCK (OFF) by pressing the engine switch and then start the engine again.

If the warning light comes on briefly then turns off, the system is normal. If the warning light still stays on, the system will be something wrong.

If the light and the brake system warning light stay on, or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and anti-lock function of the ABS system.

If one of these happens, have the system inspected by a Maruti Suzuki authorized workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Anti-Lock Brake System (ABS)" in the "OPERATING YOUR VEHICLE" section.

ESP® Warning Light



52KM133

ESP® is a registered trademark of Mercedes-Benz Group AG.

This light blinks 5 times per second when one of the ESP® systems other than ABS is activated. If this light blinks, drive carefully.

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working. If the light stays on, or comes on when driving and remains on, there may be something wrong with the ESP® systems (other than ABS). You should have your vehicle inspected by a Maruti Suzuki authorized workshop.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®)" in the "OPERATING YOUR VEHICLE" section.

! WARNING

The ESP® systems cannot prevent accidents. Always drive carefully.

INSTRUMENT CLUSTER

ESP® OFF Indicator Light



57L30045

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®)" in the "OPERATING YOUR VEHICLE" section.

NOTE:

- If the vehicle speed is greater than approximately 30 km/h, the ESP® systems (other than ABS) will be activated automatically and the light will go out.
- When the transfer lever is in "4L" (4-wheel drive low range) position, the ESP® system (other than ABS) will be canceled automatically. The light will come on and stay on.

Hill Descent Control Indicator Light



79K050

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working. When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

For details of the hill descent control system, refer to "Hill descent control system" in the "OPERATING YOUR VEHICLE" section.

Engine Oil Pressure Warning Light



80J223

This light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, and goes out when the engine is started. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorized workshop before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the engine oil pressure warning light to indicate the need to add oil. Be sure to periodically check the engine oil level.

Charge Warning Light



80J226

This light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, and goes out when the engine is started. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a Maruti Suzuki authorized workshop.

Seat belt reminder light



60G049

When the driver and/or passenger (front passenger and/or rear passenger*) do(es) not buckle his or her seat belt, this light will come on and/or blink. For details of the seat belt reminder, refer to "Seat belts and child restraint systems" section.

*: If equipped

NOTE:

Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.

Airbag Warning Light



63J030

This light blinks or comes on for several seconds when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, so you can check if the light is working.

The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

⚠ WARNING

If the airbag warning light does not blink or come on briefly when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, stays on for more than 6 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a crash. Have both systems inspected by a Maruti Suzuki authorized workshop.

INSTRUMENT CLUSTER

Malfunction Indicator Light



80J222

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument panel to indicate when it is necessary to have the emission control system serviced. The malfunction indicator light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, to let you know the light is working and goes out when the engine is started.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a Maruti Suzuki authorized workshop to have the damage fixed.

Also, if this light comes on when the engine is running, there is a problem with the automatic transmission system. Ask your Maruti Suzuki authorized workshop to inspect the system.

WARNING

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- Do not drive or stop over such as withered grasses.
- Drive slowly if required to move the vehicle.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transmission Warning Light (Automatic Transmission models)



80J219

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on for several seconds so you can check that the light is working.

If this light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, there is a problem with the automatic transmission system.

If this light comes on or blinks, stop the vehicle in a safe place and contact a Maruti Suzuki authorized workshop. If the light comes on or blinks again after the light goes out, have the system inspected by a Maruti Suzuki authorized workshop.

Immobilizer / Keyless Push Start System Warning Light

80JM122

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working.

If this light blinks or stays on, there is a problem with the system.

If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask your Maruti Suzuki authorized workshop for inspection.

Open Door Warning Light

54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low Fuel Warning Light

54G343

If this light comes on, refuel the fuel tank as soon as possible. When this light comes on, a ding sounds once to remind you to refuel. If you do not refuel, a ding sounds every time when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON.

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.

INSTRUMENT CLUSTER

Electric Power Steering Light



80J408

This light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, and goes out when the engine is started.

If this light comes on while driving, the power steering system may not work properly. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- Following operations of the steering wheel while parking or driving at a very low speed may have steering effort bigger gradually. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent them from overheating.

- The steering wheel is operated very often.
- The steering wheel is kept in a fully turned position for a long while.

When the power steering control system cool down, the power steering system back to the original condition.

However, repeating these operations could cause the power steering system damaged.

- If the power steering system does not work properly, you will feel heavier to steer but you still will be able to steer.
- If the steering is operated, you may hear a noise. This is normal and indicates that the power steering system works properly.

Low Engine Coolant Temperature Light (blue color)



54G344

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on and stays on if the engine is cold, and goes off after the engine warms up.

If this light still stays on after the engine warms up, there is a problem with the sensor.

Have your vehicle inspected by a Maruti Suzuki authorized workshop.

High Engine Coolant Temperature Warning Light (red color)



54G344

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working. If this light blinks while driving, it means the engine is running hot. If the light stays on after blinking, then the engine is overheating. To avoid actual overheating, if this light blinks or stays on while driving, follow the instructions in the "If the Engine Overheats" of "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Turn Signal Indicators



59RN04690

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.

NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be a malfunction in the turn signal system. Ask your Maruti Suzuki authorized workshop to inspect the system.

Main Beam (High beam) Indicator Light



80J212

This indicator comes on when headlight main beams (high beams) are turned on.

INSTRUMENT CLUSTER

Illumination Indicator Light



64J045

This indicator light comes on while the position lights, tail light and/or the headlights are on.

Front Fog Light Indicator Light (if equipped)



74P30830

The front fog light indicator light comes on when the front fog light operates.

Overdrive OFF Switch Light (if equipped)

O/D
OFF

76TS40680

The transmission is a 4-speed (3-speed plus overdrive) automatic transmission. By operating the overdrive off switch, the transmission can be converted to a 3-speed automatic transmission that will not move to the overdrive position. To convert the transmission to the 3-speed mode, push in the overdrive off switch and release it.

To return the transmission to the 4-speed mode, push in the overdrive off switch again.

When the ignition switch is turned to "ACC" position or the engine switch is pressed to change the ignition mode to ACC, the transmission in the 3-speed mode is converted to the 4-speed mode automatically. The 3-speed mode is suitable for the following driving conditions:

- Driving on hilly, winding roads
 - You can drive more smoothly with less frequent gear changing
- Going down a steep hill
 - Some engine braking is provided

For details, refer to "Overdrive off switch" in "OPERATING YOUR VEHICLE" section.

4WD Indicator Light



78RB02078

This indicator light comes on when the transfer gear and the air locking hubs are switched to 4-wheel drive condition ("4H" or "4L").

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this 4WD indicator light will come on for a while and then this light will turn on or off according to the drive condition.


If 4WD indicator light continues to blink, there may be a malfunction of the system. If so, have your vehicle inspected by a Maruti Suzuki authorized workshop.

When you shift the transfer lever from "2H" position to "4H" position at a speed of 100 km/h or more, this indicator light blinks.

When you shift transfer lever again while changing the drive condition, this indicator blinks.

NOTE:

When the drive condition is 4-wheel drive condition and the engine is not running with the ignition switch turned “ON” or the ignition mode to ON, this 4WD indicator light will come on for a while and then blink. In this situation, when you start the engine and this indicator light comes on, the system does not indicate a malfunction.

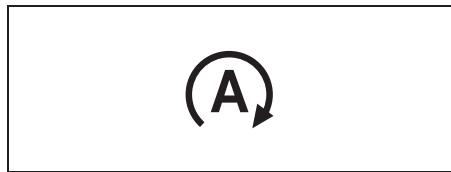
ENG A-STOP Indicator Light

72M00032

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly to let you know the light is working.

When the engine stops automatically, this light comes on.

For details, refer to “ENG A-STOP System (Engine Auto Stop Start System)” in the “OPERATING YOUR VEHICLE” section.

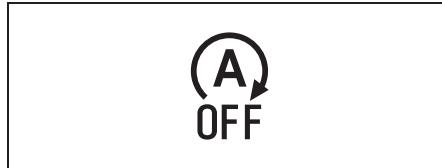ENG A-STOP OFF Indicator Light


62R0352

When the ignition switch is turned to “ON” position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly if the system works properly.

When you push the ENG A-STOP OFF switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG A-STOP system. You should have the system inspected by a Maruti Suzuki authorized workshop.

For details, refer to “ENG A-STOP System (Engine Auto Stop Start System)” in the “OPERATING YOUR VEHICLE” section.

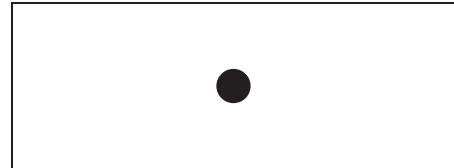Security System Indicator

82K269

For details about the security system, refer to “Security System” in the “BEFORE DRIVING” section.

INSTRUMENT CLUSTER

MEMO

OPERATING YOUR VEHICLE




59RN05760

Daily Inspection Checklist	5-1
Ignition Switch (Vehicle without Keyless Push Start System)	5-3
Engine Switch (Vehicle with Keyless Push Start System)	5-5
Immobilizer System	5-7
Pedal	5-9
Keyless Push Start System (if equipped)	5-10
Starting / Stopping Engine (Vehicle without Keyless Push Start System)	5-13
Starting / Stopping Engine (Vehicle with Keyless Push Start System)	5-15
ENG A-STOP System (Engine Auto Stop Start System)	5-19
Air Conditioning System Settings by ENG A-STOP System	5-28
Parking Brake Lever	5-29
Precaution for Parking	5-30
Using Transmission	5-33
Gearshift Indicator (if equipped)	5-37
Transfer lever	5-39
Cruise Control (if equipped)	5-45
Parking Sensors	5-47
Rearview Camera	5-50
Electronic Stability Program (ESP [®])	5-56
Braking	5-63
Anti-lock Brake System (ABS)	5-64

OPERATING YOUR VEHICLE

Daily Inspection Checklist

Before Driving

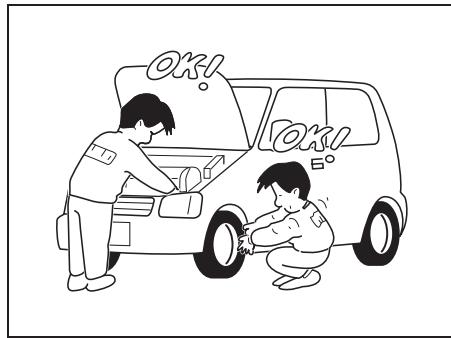

59RN05750

- 1) Check that the windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tyres for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.
- 3) Look for fluid and oil leakage.

NOTE:

It is normal for water to drip from the air conditioning system while and after use.

- 4) Check that the hood is fully closed and latched.
- 5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint.
- 7) Check the brake pedal feeling and the adjustment condition for the parking brake lever or pedal.
Refer to "Brake" in "INSPECTION AND MAINTENANCE" section for details.
- 8) Adjust the mirrors.
- 9) Check that you and all the passengers have properly fastened the seat belts.
- 10) Check that all the warning lights come on as the ignition switch is turned to "ON" position or the press the engine switch to change the ignition mode to ON.
- 11) Check all the gauges.
- 12) Check that the brake system warning light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

- Engine oil level
- Coolant level
- Brake fluid level
- Battery fluid (acid) level
- Windshield washer fluid level
- Hood latch operation

Pull the hood release lever inside the vehicle. Check that you cannot open the hood further without releasing the secondary latch. Close the hood securely after checking for proper latch operation. See the item "All latches, hinges and locks" of "CHASSIS AND BODY" in "Maintenance Schedule" in "INSPECTION AND MAINTENANCE" section for lubrication schedule.

! WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre.

When You Notice the Following Symptoms




80J009

CAUTION

If you keep using your vehicle in the following conditions, malfunction and an accident may occur. Consult with a Maruti Suzuki authorized workshop.

- Leaked oil or other liquid appears on the ground below the vehicle.
- Brake fluid level is low.
- There are unusual odors, sounds or vibrations.
- The feeling of operating the steering wheel, the acceleration or the brakes is different than usual.

Check the Tyre Pressure

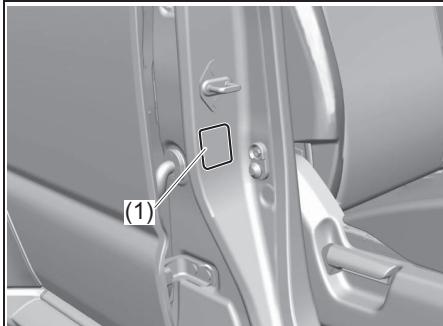


80T090180

- Periodically check and adjust the tyre pressure. The specified tyre pressure for the tyres of this vehicle can be confirmed by checking the tyre information label (1) affixed to the opening of the driver's door.
- Driving with insufficient tyre pressure can cause the sides of the tyre to wear, in addition to decreasing fuel efficiency.

WARNING

- Driving with extremely low tyre pressure can cause a tyre blowout (bursting) and may result in an accident. Do not drive with extremely low tyre pressure.

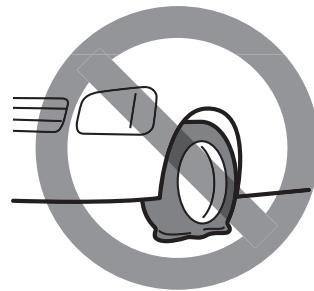

69RHS173

- If the specified tyre pressure is not maintained, the full performance of the vehicle cannot be achieved and the following could occur, leading to accidents or malfunctions. Adjust the tyre pressure as specified.
 - Decreased driving stability
 - Longer distance required for braking

(Continued)

OPERATING YOUR VEHICLE

⚠ WARNING

(Continued)

- Accurate tyre rotation speed cannot be detected, which interferes with the following functions:
 - ABS
 - Electronic stability program (ESP®)

To adjust the tire pressure, refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.

Check the Exhaust Pipe




80J011

Periodically check the exhaust pipes for holes or cracks.

⚠ WARNING

If leaks in exhaust pipes are present, exhaust gas could enter the vehicle and possibly cause carbon monoxide poisoning. If you feel that something is abnormal, consult with a Maruti Suzuki authorized workshop.

Ignition Switch (Vehicle without Keyless Push Start System)

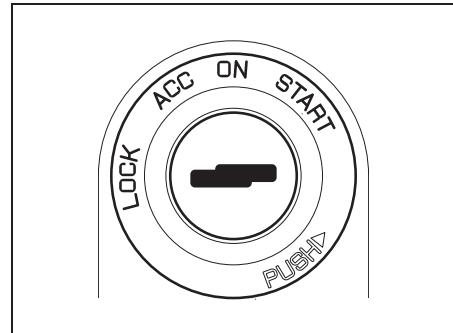


68PH00310

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

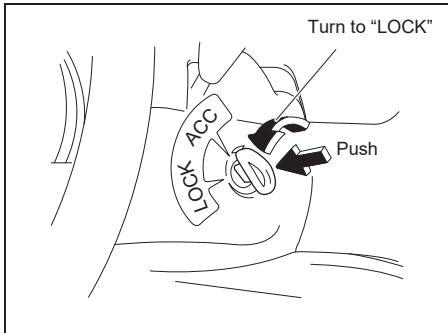Manual transmission

55T050010

• Manual transmission vehicles:

You must push in the key to turn it to "LOCK" position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

• Automatic transmission vehicles:

The gearshift lever must be in "P" (Park) position to turn the key to "LOCK" position. It locks the ignition and prevents normal use of the steering wheel and gearshift lever.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering wheel, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON


This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

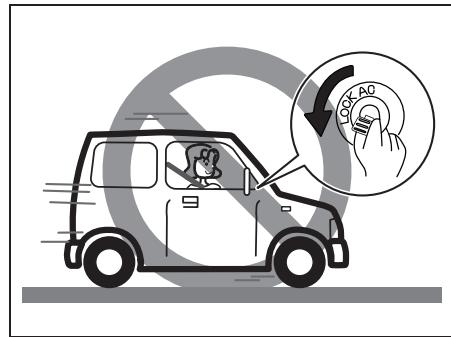

55T050020

! WARNING

- Never return the ignition switch to "LOCK" position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.

(Continued)

OPERATING YOUR VEHICLE

⚠ WARNING


(Continued)

- Always return the ignition switch to “LOCK” position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle or could tamper with power windows. They also could suffer from heat stroke in warm or hot weather. These could result in severe injury or even death.

NOTICE

Do not leave the ignition switch in “ON” position if the engine is not running as the lead-acid battery will discharge.

Engine Switch (Vehicle with Keyless Push Start System)

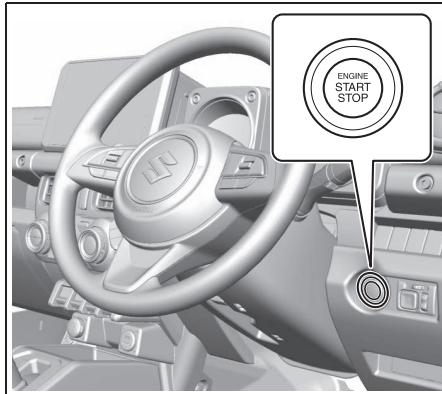

80T050990

LOCK (OFF)

This mode is for parking the vehicle. When this mode is selected by pressing the engine switch and then any door (including the tailgate) is opened or closed, the steering will be locked automatically.

ACC

Press the engine switch to select this ignition mode to use such electric equipment as the audio system, outside rearview mirrors and accessory socket with the engine off. When this position is selected, the information display in the instrument cluster shows the following message.



61MM0A163

ON

- With the engine off

You can use such electric equipment as the power windows and wipers with the engine off. When this ignition mode is selected by pressing the engine switch, the information display in the instrument cluster shows the following message.



75RM214

- With the engine on

All electric equipment is operational. The vehicle can be driven when you have selected this ignition mode by pressing the engine switch.

START

Manual transmission vehicles:

Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after shifting to "N" (Neutral) and depressing the brake and clutch pedals.

Automatic transmission vehicles:

Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after placing the gearshift lever in "P" (Park) position and depressing the brake pedal. (If you need to restart the engine while the vehicle is moving, shift into "N".)

- You do not need to keep the engine switch pressed until the engine starts.
- In the presence of strong radio wave or noise, you may not be able to change the ignition mode to ACC or ON or to start the engine using the engine switch. In this case, the information display in the instrument cluster will show the following message.



75RM216

NOTICE

Do not leave the engine switch in ACC or ON mode when the engine is not running. Avoid using the radio or other electric accessories for a long time when the engine switch is in ACC or ON mode when the engine is not running, otherwise the lead-acid battery may discharge.

NOTE:

- The steering will be unlocked when you press the engine switch to change the ignition mode from LOCK (OFF) to ACC or ON.

OPERATING YOUR VEHICLE

Unreleased Steering Lock Warning

If the steering lock remains engaged when you press the engine switch to change the ignition mode to ON, the information display in the instrument cluster shows the following message and you cannot start the engine. If this happens, press the engine switch, turning the steering wheel to right or left.



80T050010



80T050030

NOTE:

The steering lock may not be released and the immobilizer / keyless push start system warning light turns on if some load is applied on the steering wheel. If this happens, turn the steering wheel system to the right or left to relieve it from the load before you press the engine switch again to change to the desired ignition mode.

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key or keyless push start system remote controller, which has an electronic identification code programmed in it. The key or remote controller communicates the identification code to the vehicle when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON. If you need to make spare keys or remote controllers, consult with a Maruti Suzuki authorized workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.

In the case you can start the engine, when you turn the ignition switch to "LOCK" position or press the engine switch to change the ignition mode to ON, the immobilizer system will be released and the immobilizer/keyless push start system warning light will turn on for about 2 seconds and then it will turn off.

When you turn the ignition switch to "LOCK" position or press the engine switch to change the ignition mode to LOCK (OFF), the immobilizer system will operate.

NOTICE

If the immobilizer system is modified or removed, it cannot be properly operated. Do not modify or remove the immobilizer system.

NOTE:

This immobilizer system is maintenance-free.

Immobilizer / Keyless Push Start System Warning Light



80JM122

If the immobilizer/keyless push start system warning light blinks when the ignition switch is in "ON" position or the ignition mode is ON, the engine will not start.

NOTE:

If the immobilizer/keyless push start system warning light blinks or comes on, a message may be shown on the information display.

For vehicles without a keyless push start system

If this light blinks, turn the ignition switch to "LOCK" position, and then turn it back to "ON" position.

If the light still blinks after the ignition switch is turned back to "ON" position, there may be something wrong with your key or with the immobilizer system. Ask your Maruti Suzuki authorized workshop for inspection.

For vehicles with a keyless push start system

If this light blinks, change the ignition mode to LOCK (OFF), and then change it back to ON. Also refer to "If the master warning indicator light blinks and the engine cannot be started" in "Starting / stopping engine (vehicle with keyless push start system) (if equipped)" in "OPERATING YOUR VEHICLE" section.

If the light still blinks after the ignition mode is changed back to ON, there may be something wrong with your key or with the immobilizer system. Ask your Maruti Suzuki authorized workshop for inspection.

The immobilizer/keyless push start system warning light may also blink if the remote controller is not in the vehicle when you close the door or attempt to start the engine.

NOTE:

- If you lose your immobilizer ignition key or remote controller, ask your Maruti Suzuki authorized workshop as soon as possible to deactivate the lost one, and to make a new key or remote controller.*
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch or the engine switch when using your Maruti Suzuki vehicle. Otherwise, the engine may not be started because they may interfere with your Maruti Suzuki vehicle's immobilizer system.*
- If you attach any metal objects to the immobilizer key or remote controller, it may not start the engine.*

NOTICE

The immobilizer key and remote controller are sensitive electronic instruments. To avoid damaging them:

- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.**
- Keep them away from magnetic objects.**


Ignition Key Reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition keyhole when the driver's door is opened.

OPERATING YOUR VEHICLE


Pedal

Manual transmission

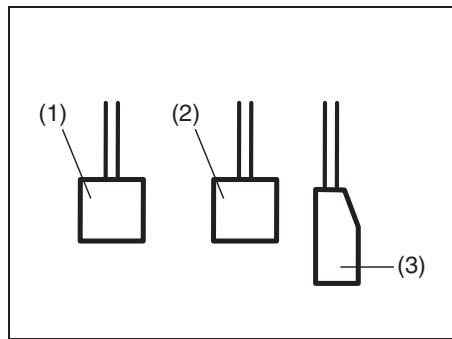

80J2121

Automatic transmission

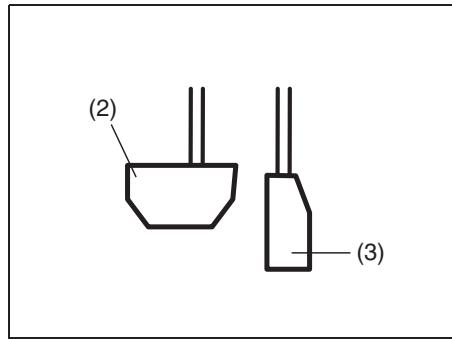

80J2122

Clutch Pedal (1)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gear-shift lever. Depressing the pedal disengages the clutch.

WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal (2)

Your vehicle is equipped with either front and rear disc brakes or front disc brakes and rear drum brakes. Depressing a brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc.

WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a Maruti Suzuki authorized workshop.

WARNING

Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.


NOTE:

Your vehicle is equipped with Brake Override System. If you depress both the accelerator pedal and the brake pedal simultaneously, the engine power output may be suppressed.

Keyless Push Start System (if equipped)

Provided the keyless push start system remote controller is within the interior workable area, you can use the engine switch for starting the engine and selecting an ignition mode (ACC or ON). In addition, the following functions can be used:

- Keyless entry function. Refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section for details.
- Locking and unlocking doors (including the tailgate) using a request switch. Refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section for details.
- Immobilizer (anti-theft) function. Refer to "Immobilizer System" in this section for details.

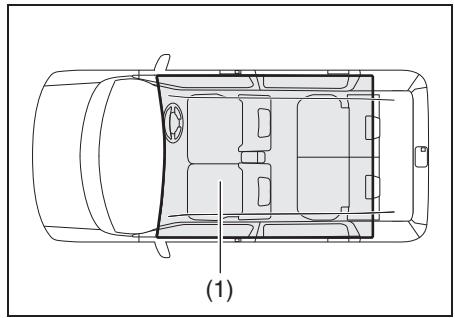

81M40230

(1) Interior workable area

The interior workable area is defined as all the interior spaces except for the space on the instrument panel or in the luggage compartment.


NOTE:

- Even when the remote controller is in the interior workable area, if it is in any of the following conditions, you may not be able to start the engine or select the ignition modes, and the remote controller outside warning may be given.
 - The remote controller's battery is low.
 - The remote controller is affected by strong radio wave or noise.
 - The remote controller is in contact with or covered by a metallic object.
 - The remote controller is in the secluded stowages such as the glove box or a door pocket.
 - The remote controller is in the sun visor pocket or on the floor.
- Even when the remote controller is outside the interior workable area, if it is in any of the following conditions, you may be able to start the engine or select the ignition mode. The remote controller outside warning may not be given at that time.
 - The remote controller is outside the vehicle but very close to a door.
 - The remote controller is on the instrument panel.

Engine Switch Illumination

The engine switch is illuminated (lit) in the following situations:

- When the engine is off and the driver's door is open, or for 15 seconds after the driver's door is closed. The illumination will fade out after 15 seconds passed.
- While the headlights and/or the position lights are on, the illumination will turn on. The illumination will go out when the headlights and the position lights are turned off.

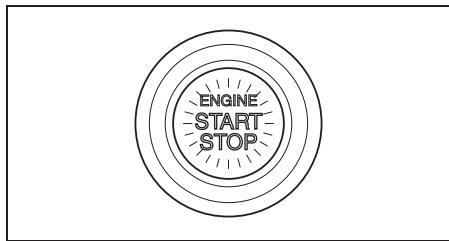

82K253

NOTE:

To save the lead-acid battery, the illumination will be automatically turned off when both of the following conditions are simultaneously met:

- The headlights and the position lights are turned off.
- 15 minutes has elapsed since opening the driver's door.

OPERATING YOUR VEHICLE


Selection of Ignition Modes

Press the engine switch to select ACC or ON mode as follows when you use an electric accessory or check the operation of instrument cluster without running the engine.

NOTE:

When selecting the ignition modes, the information display in the instrument cluster show certain messages. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section.

- 1) Bring the keyless push start system remote controller with you and sit in the driver's seat.

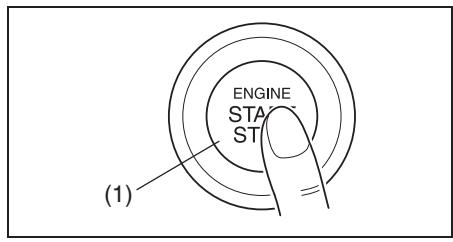


82K254

- 2) Manual transmission – Without depressing the clutch pedal, press the engine switch (1).
Automatic transmission – Without depressing the brake pedal, press the engine switch (1).


Every time you press the engine switch, the ignition mode changes as follows.

Manual transmission

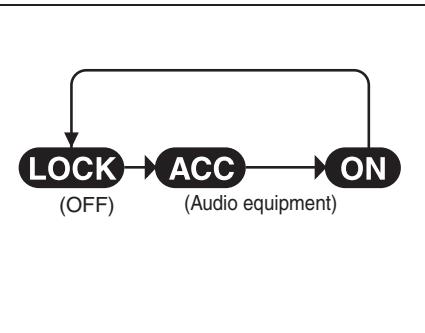

68PH00322


Automatic transmission

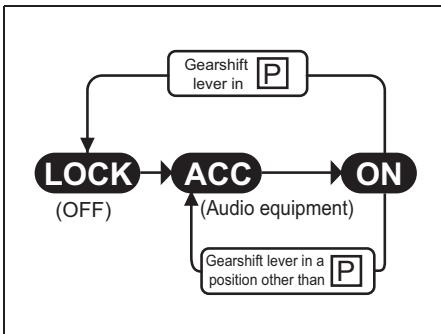

57L31006

If the master warning indicator light blinks and the ignition modes cannot be selected

Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the ignition modes still cannot be selected, the battery of the remote controller may be discharged. To select an ignition mode, you must then use the following method:

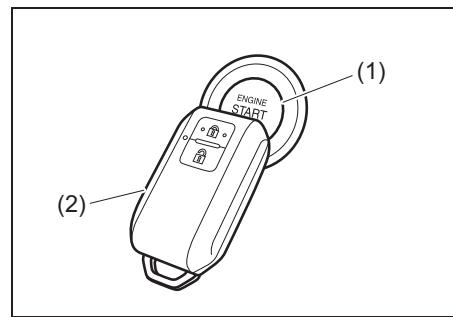

63R40050

- 1) Manual transmission – Without depressing the clutch pedal, push the engine switch (1).
Automatic transmission – Without depressing the brake pedal, press the engine switch (1).



75RM217

- 2) Within about 10 seconds while the master warning indicator light blinks and the information display in the instrument cluster shows the following message, touch the engine switch with the lock switch end of the remote controller (2) for about 2 seconds.

While the master warning indicator light blinks, the immobilizer/keyless push system warning light will come on for about 5 seconds.

If you still cannot select the ignition modes, there may be the other problem such as the discharged lead-acid battery. In this case, consult with a Maruti Suzuki authorized workshop.

NOTE:

- You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. For this customization, consult with a Maruti Suzuki authorized workshop.
- If the battery of the remote controller is almost discharged, the information display in the instrument cluster shows the following message when you press the engine switch to change the ignition mode to ON. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details. For details on replacing the battery, refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section.




75RM220

Remote Controller Outside Warning

When either of the following conditions is met, the system causes the remote controller outside warning by sounding the interior and exterior buzzers. At the same time, the immobilizer/keyless push start system warning light comes on, the master warning indicator light blinks and the information display in the instrument cluster will show the corresponding message.

- Any door is opened and then closed while the remote controller is not inside the vehicle and the engine is running or the ignition mode has been changed to ACC or ON by pressing the engine switch.
- The remote controller is not inside the vehicle when you attempt to start the engine after changing the ignition mode to ACC or ON by pressing the engine switch.

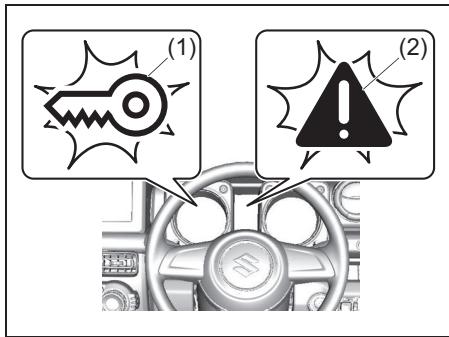

80T050050

- (1) Immobilizer/keyless push start system warning light (blinks)
- (2) Master warning indicator light (blinks)

If the warning is given, place the remote controller inside the vehicle as soon as possible.

- Any attempt to start the engine will fail while the warning is active. The message appearing in the information display in the instrument cluster will also indicate this condition. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section for details.


- Normally, the immobilizer/keyless push start system warning light should go out and the master warning indicator light should stop blinking shortly after the remote controller is brought back inside the vehicle. If they remain lit and blinking, change the ignition mode to LOCK (OFF) by pressing the engine switch and then perform the engine starting operation. Refer to "Starting / Stopping Engine (Vehicle with Keyless Push Start System)" in this section.

NOTE:

Always keep the remote controller with you as the driver.

Starting / Stopping Engine (Vehicle without Keyless Push Start System)

Starting Engine

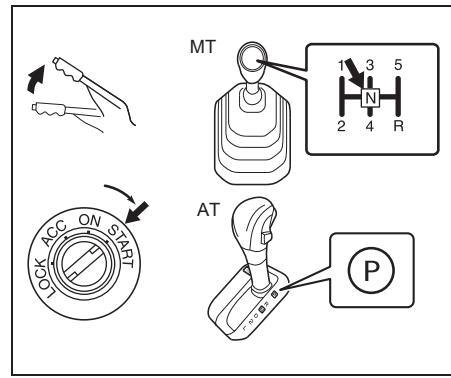

80T051100

- 1) Check that the parking brake is set fully.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.

- 3) Manual transmission vehicles:
Shift into "N" (Neutral). Hold the clutch pedal and brake pedal fully depressed.
- Automatic transmission vehicles:
If the gearshift lever is not in "P" (Park) position, shift into "P" (Park). Hold the brake pedal fully depressed.
- 4) With your foot taken off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key immediately after the engine has started.

NOTICE

- For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine does not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult with a Maruti Suzuki authorized workshop.**
- Automatic transmission vehicles:**
In case that you need to restart the engine while the vehicle is moving, shift into "N". Otherwise the engine and transmission can be damaged.

(Continued)

NOTICE

(Continued)

- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill. This starting method could result in damage to the catalytic converter or damage to other parts.**

NOTICE

Automatic transmission vehicles:
If you stop the engine while the vehicle is in motion, the automatic transmission may be damaged. Avoid stopping the engine while driving.

NOTE:


Automatic transmission vehicles:
Automatic transmission vehicles have a starter interlock device. The engine starts when the gearshift lever is in either "P" or "N" position.

Stopping Engine**⚠ WARNING**

Except in cases of emergency, do not stop the engine while the vehicle is in motion. If you stop the engine while the vehicle is in motion, the steering wheel will lock and you will not be able to steer the vehicle. This may result in an accident. Avoid stopping the engine while driving.

Starting / Stopping Engine (Vehicle with Keyless Push Start System)


Starting Engine

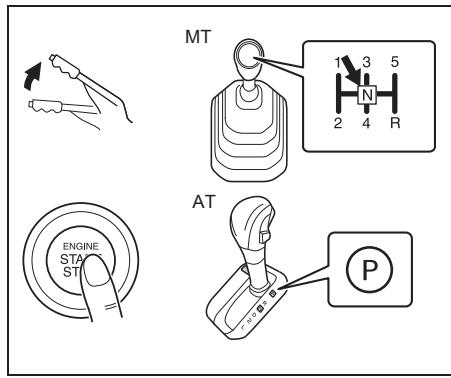

- 1) Check that the parking brake is set fully.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.

- 3) Manual transmission vehicles:
Shift into "N" (Neutral). Hold the clutch pedal and brake pedal fully depressed.

Automatic transmission vehicles:
If the gearshift lever is not in "P" (Park) position, shift into "P" (Park). Hold the brake pedal fully depressed.
- 4) The "PUSH START SWITCH" message will appear in the information display in the instrument cluster.

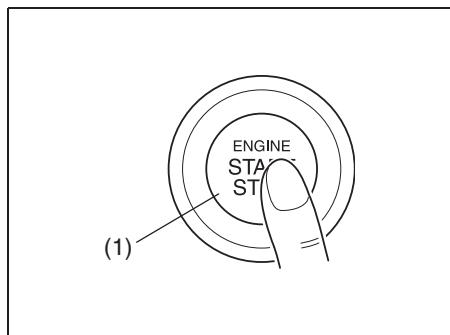

- 5) With your foot taken off the accelerator pedal, push the engine switch (1). When the engine is started, the starter motor will automatically stop.
 - Even if you fail to start the engine, the starter motor will stop turning automatically after approximately 12 seconds. In this case, press the engine switch to select LOCK (OFF) mode and restart the engine.

- If there is a problem with the system, the engine will not start automatically even if the switch is pressed. In case the starter motor does not turn or stops immediately, start the engine by the following procedure.
 - a. Press the engine switch to select the ON mode.
 - b. Perform the above procedure 1) to 3).
 - c. Keep the engine switch pressed until the engine starts. Release your finger from the engine switch after the engine has started.

NOTICE

- If the engine does not start, press the engine switch to select LOCK (OFF) mode and wait for more than 30 seconds before trying again, for protection of a lead-acid battery and a starter motor. If the engine does not start after several attempts, consult with a Maruti Suzuki authorized workshop.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill. This starting method could result in damage to the catalytic converter or damage to other parts.

NOTE:

- You do not need to keep the engine switch pressed to start the engine.
- **Manual transmission vehicles:**
The engine of a manual transmission vehicle will not start unless the clutch pedal is depressed.
- **Automatic transmission vehicles:**
Automatic transmission vehicles have a starter interlock device. The engine starts when the gearshift lever is in either "P" or "N" position.
- During the engine starting procedure, messages on the information display will help you. Refer to "Information display" in "INSTRUMENT CLUSTER" section for details.
- When the engine stalls in intersection and railway crossing etc., restart the engine by usual procedure.

Stopping Engine

- Depress the engine switch to stop the engine after the vehicle stopped completely.
- If the engine remains stopped for a while after it was stopped unexpectedly or was raced before stopping, a clicking sound may be heard from around the engine when it is restarted. This is not a malfunction. Always let the engine idle before stopping it.

WARNING

Except in cases of emergency, do not stop the engine while the vehicle is in motion. If you stop the engine while the vehicle is in motion, the steering wheel will lock and you will not be able to steer the vehicle. This may result in an accident. Avoid stopping the engine while driving.

NOTICE

Automatic transmission vehicles:
If you stop the engine while the vehicle is in motion, the automatic transmission may be damaged. Avoid stopping the engine while driving.

Emergency Stop

In case of emergency, you can stop the engine by quickly pushing the engine switch more than 3 times, or pushing and holding the engine switch for more than 2 seconds while the vehicle is in motion.


NOTE:

Except in cases of emergency, do not stop the engine while the vehicle is in motion. The steering and braking operation will require more effort when the engine is stopped. Refer to "Braking" in this section.

OPERATING YOUR VEHICLE


If the Master Warning Indicator Light Blinks and the Engine cannot be Started

Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the engine cannot be started, the battery of the remote controller may be discharged. To start the engine, you must then use the following method:

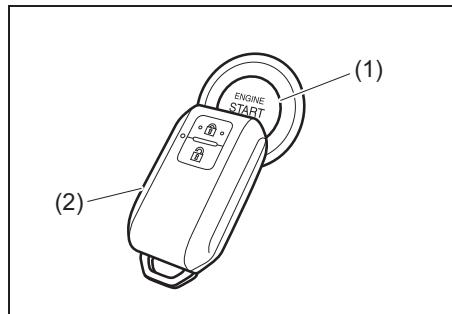

63R40050

- 1) Check that the gearshift lever is in "P" (Park) position and keep depressing the brake pedal fully.

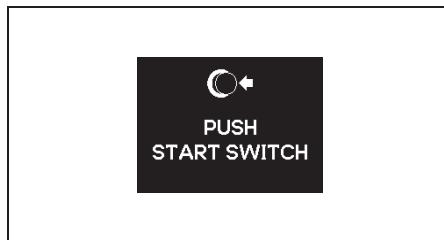

75RM214

- 2) If the above message is shown on the information display in the instrument cluster, press the engine switch (1).



75RM217

- 3) Within about 10 seconds while the master warning indicator light blinks and the information display in the instrument cluster shows the following message, touch the engine switch with the lock switch end of the remote controller (2) for about 2 seconds.

While the master warning indicator light blinks, the immobilizer/keyless push system warning light will come on for about 5 seconds.

If you still cannot start the engine, there may be the other problem such as the discharged lead-acid battery. In this case, consult with a Maruti Suzuki authorized workshop.

NOTE:

- You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. For this customization, consult with a Maruti Suzuki authorized workshop.

- If the battery of the remote controller is almost discharged, the information display in the instrument cluster shows the following message when you press the engine switch to change the ignition mode to ON. Refer to “Information Display” in “INSTRUMENT CLUSTER” section for details. For details on replacing the battery, refer to “Keyless Push Start System Remote Controller” in “BEFORE DRIVING” section.*



75RM220

Returning Ignition Mode to LOCK (OFF)

Automatic transmission – To ensure safety, the ignition mode can be returned to LOCK (OFF) by pressing the engine switch only when the gearshift lever is placed in “P” position without pressing the knob button.

NOTE:

In the case of an automatic transmission, the ignition mode cannot be returned to LOCK (OFF) position if the gearshift lever is in any other position than “P”.

Certain problems such as a fault in engine system may prevent the engine switch from going back to LOCK (OFF) mode. If this happens, have the vehicle inspected by a Maruti Suzuki authorized workshop after doing the following:

- Lock the doors using the key to prevent theft. (The request switches and the keyless push start system remote controller cannot be used to lock them.)*
- Disconnect the negative cable from the lead-acid battery to prevent discharge.*

LOCK (OFF) mode reminder buzzer

If the driver's door is opened without returning the ignition mode to LOCK (OFF) by pressing the engine switch, a buzzer sounds to warn you of this condition.

- If you open the driver's door after pressing the engine switch to change the ignition mode to ACC, the interior buzzer beeps intermittently.*
- The buzzer will stop sounding if you then push the engine switch twice, thus bringing it back to the ignition mode to LOCK (OFF).*

NOTE:

Whenever you leave the vehicle, check that you have returned the ignition mode to LOCK (OFF) using the engine switch and then lock the doors. Without returning the ignition mode to LOCK (OFF), you cannot use a request switch or keyless push start system remote controller to lock the doors.

Steering lock warning buzzer

If the steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch and any door (including the tailgate) is opened or closed, the interior buzzer will warn you of this condition with repeated short beeps. If this happens, have your vehicle inspected by a Maruti Suzuki authorized workshop.

ENG A-STOP System (Engine Auto Stop Start System)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the engine switch.


Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

NOTE:

If your vehicle is equipped with automatic heating and air conditioning system, you can change the automatic engine stop condition via the information display. Refer to "Information display" in "INSTRUMENT CLUSTER" section.

⚠ WARNING

- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, push the engine switch to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.

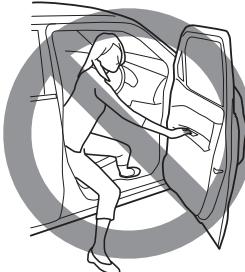

72M2042


NOTE:

- *Manual transmission vehicle – If the driver's seat belt is unfastened and the driver's door is opened, the engine will stall.*
- *Automatic transmission vehicle – If the driver's seat belt is unfastened, even if the brake pedal is pressed down, or the driver's door is opened, the engine will be restarted to warn you that the engine was stopped automatically by the ENG A-STOP system.*

Automatic Stopping / Restarting of the Engine

Manual transmission vehicle

- With the brake pedal depressed, decelerate the vehicle.

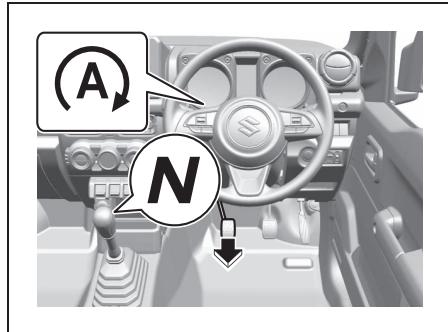

77R40690

- After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to "N", and then release the clutch pedal, the engine will stop automatically. The ENG A-STOP indicator light (green) will come on.

- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to "Conditions to stop the engine automatically" in this section.
- During the automatic engine stop, the engine may shut down, accompanied by

an interior buzzer or restarted, to ensure safety.

For details, refer to "Precautions of When the Engine is Stopped Automatically" in this section.

NOTICE


- During the automatic engine stop, do not shift the gearshift lever to a position other than "N" without depressing the clutch pedal. If the gearshift lever is in a position other than "N", the engine will not restart automatically even if the clutch pedal is depressed.
- If the driver unfastens the seat belt, the engine does not restart automatically even if the clutch pedal is depressed. Also a buzzer will sound to alert the driver. In this case, fasten the seat belt.

NOTE:

During the automatic engine stop, electric equipment will be in the following conditions:


- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.*
- If the vehicle is equipped with automatic heating and air conditioning system, the fan speed will be limited during the automatic engine stop (only in the auto control mode) to keep the cabin air-conditioned for a longer time.*
- If the engine stalled by a rapid clutch operation, the engine will restart with the gear positioned "N" (neutral) and the clutch pedal depressed.*

OPERATING YOUR VEHICLE

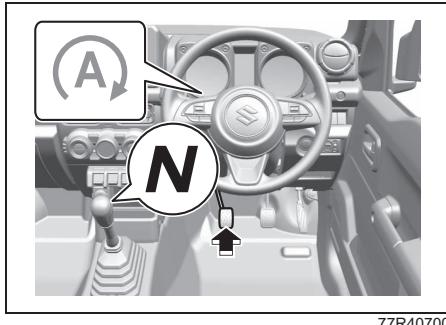

77R40700

Automatic transmission vehicles

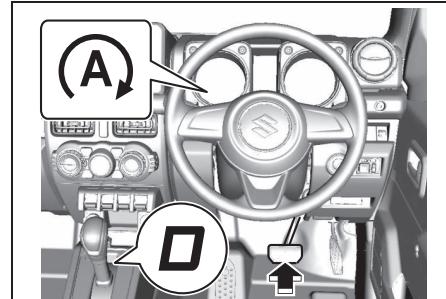

77R40600

- 3) Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) will go off.


While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

- Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.

For details, refer to "Conditions to restart the engine automatically" in this section.

NOTE:

- The engine is not stopped automatically when decelerating without depressing the brake pedal, for example, by using engine braking.
- Electrical components, such as the navigation system or the audio system, can be used while the engine has been stopped automatically, however, the air conditioner switches to the ventilation position.
- For the automatic heating and air conditioning system, airflow is limited (only under automatic operation) when the engine is stopped automatically, in order to improve the cooling and heating performance.

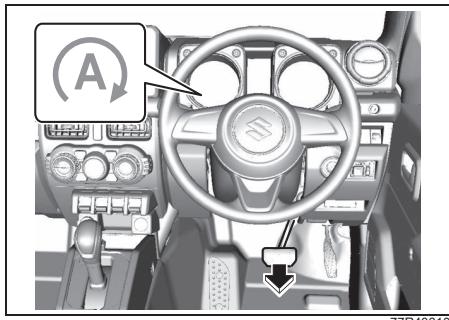**NOTE:**

- *The hill hold control system is activated when the engine is restarted automatically.*
- *If a sound of audio system is loud, the sound may be interrupted when the engine is restarted. This is not a malfunction.*

2) When you remove your foot from the brake pedal, the engine is restarted and the ENG A-STOP indicator light (green) goes off.

- The engine is restarted automatically if the conditions to restart the engine automatically are met, even if the brake pedal is depressed.

For details on the conditions for automatically restarting the engine, refer to "Conditions to restart the engine automatically" in this section.

- When restarting the engine, you can prevent the vehicle from creeping ahead and rolling downward on an uphill slope, by keeping force on the brake pedal temporarily.

OPERATING YOUR VEHICLE

Precautions of When the Engine is Stopped Automatically

WARNING

Do not perform any of the following operations while the engine has been stopped automatically. This may result in an accident.

	Operation/Vehicle Condition	Solution
Common	<p>Engine hood opened</p> <ul style="list-style-type: none">• The interior buzzer sounds 2 times.• After the engine is stopped automatically, it stalls.• The ENG A-STOP indicator light (green) goes off.	<p>To restart the engine, follow the procedure below.</p> <ol style="list-style-type: none">1) Set the parking brake firmly, and then place the gearshift lever in the "N" position (for manual transmission) or "P" position (for automatic transmission).2) Securely close the engine hood.3) Turn the ignition switch or press the engine switch to restart the engine.
Manual transmission	<p>Driver's seat belt unfastened and driver's door opened</p> <ul style="list-style-type: none">• The interior buzzer sounds 5 times.• After the engine is stopped automatically, it stalls.• The ENG A-STOP indicator light (green) goes off.	<p>Before starting the vehicle, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below.</p> <ol style="list-style-type: none">1) Set the parking brake firmly, and then place the gearshift lever in the "N" position.2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, turn the ignition switch or the press the engine switch to stop the engine.
	<p>Gearshift lever shifted to a position other than "N" without depressing the clutch pedal</p> <ul style="list-style-type: none">• The interior buzzer sounds 2 times.• After the engine is stopped automatically, it stalls.• The ENG A-STOP indicator light (green) goes on.	The gearshift lever is placed returned to the "N" position.

	Operation/Vehicle Condition	Solution
Automatic transmission	Driver's seat belt unfastened, or driver's door opened <ul style="list-style-type: none">• The interior buzzer sounds 10 times.• The engine is restarted automatically.• The ENG A-STOP indicator light (green) blinks 5 times, then goes off.	Before driving, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below. <ol style="list-style-type: none">1) Set the parking brake firmly, and then place the gearshift lever in the "P" position.2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, turn the ignition switch or press the engine switch to stop the engine.

NOTE:

The following indicator lights in the instrument cluster do not come on when the engine is stopped automatically.

- *Malfunction indicator light, electric power steering light, oil pressure light, charging light*

OPERATING YOUR VEHICLE

Operating Conditions of ENG A-STOP System

Standby conditions

If all of the following conditions are met while driving, the automatic engine stop will be permitted.

When the engine is started*

Common	<ul style="list-style-type: none">The engine is started with the engine hood securely closed.
--------	---

*: If the engine is started according to the procedures for the Jump-starting Instructions in "EMERGENCY SERVICE" section, the standby conditions are not met.

When driving

Common	<ul style="list-style-type: none">The ENG A-STOP system is not deactivated (OFF) (For details, refer to "ENG A-STOP OFF Switch" in this section.)The battery is charged more than a certain amount, and the temperature inside the battery is within the specified range (#1)The engine coolant temperature is within the specified rangeThe driver's seat belt is fastenedThe driver's door is securely closedThe engine hood is securely closedThere is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system (#2)The transfer lever is in "2H" position <p><Automatic heating and air conditioning system></p> <ul style="list-style-type: none">The air from the outlets is sufficiently cooled while cooling or sufficiently warmed while heating.The defroster is turned off.
Manual transmission	<ul style="list-style-type: none">The gearshift lever is not in "R" position
Automatic transmission	<ul style="list-style-type: none">The gearshift lever is in the "D" or "N" position.The overdrive OFF switch light goes off.

#1: If the battery is discharged, for example, if the vehicle has not been used for a long time or electrical components, such as the navigation system or audio system, have been used for a long time while the engine was stopped, it may take some time until the system can be in standby.

#2: If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

Conditions to stop the engine automatically

If all of the following conditions, the ENG A-STOP indicator light (green) in the instrument cluster will illuminate when the vehicle is stopped and the engine will stop automatically.

Common	<ul style="list-style-type: none">• The ABS or ESP® system has not been activated• Brake booster vacuum pressure is normal
Manual transmission	<ul style="list-style-type: none">• The gearshift lever is in "N" position• The clutch pedal is released
Automatic transmission	<ul style="list-style-type: none">• The brake pedal is sufficiently depressed (#)• The accelerator pedal is not depressed• The vehicle is not stopped on a steep hill

#: The engine may not be stopped automatically if the brake pedal was depressed lightly or strongly.

The engine may not stop automatically when the brake pedal is depressed lightly.

In this case, when the brake pedal is depressed additionally, the engine may stop automatically.

The driver can operate whether the engine stops automatically or not depending on how hard the brake pedal is pressed.

OPERATING YOUR VEHICLE

Conditions to restart the engine automatically

If any of the following vehicle conditions occur or operations are performed while the engine is stopped automatically, the engine is restarted automatically and the ENG A-STOP indicator light (green) goes off.

Common	<ul style="list-style-type: none">• The ENG A-STOP system is deactivated (OFF)• The battery continues to be discharged (#1)• A malfunction was detected in this system (#1)• The negative pressure of the brake booster has dropped (#1)• The vehicle starts to move on a slope, etc. (#1)• Some time (2 minutes or so) has elapsed after the start of the automatic engine stop (#1)• Shift the transfer lever into "4H" or "4L" position (#1) <p><Automatic heating and air conditioning system></p> <ul style="list-style-type: none">• The temperature of the air from the air conditioner outlets changes greatly after the automatic engine stop, or the cooling and heating performance is insufficient (#1)• The temperature selector was greatly set toward COOL while cooling or greatly set toward HOT while heating (#1)• The defroster is turned on (#1)
Manual transmission	<ul style="list-style-type: none">• The clutch pedal is depressed.
Automatic transmission	<ul style="list-style-type: none">• The driver releases the seat belt (#1, #2)• The driver's door is opened (#1)• The foot is removed from the brake pedal (#2)• The accelerator pedal is depressed• The gearshift lever is placed in the "P", "R", "L" or "2" position, or push the overdrive off switch and release the overdrive• After the gearshift lever is placed in the "N" position, it is returned to the "D" position


#1:The ENG A-STOP indicator light (green) will blink and then go off

#2:The interior buzzer sounds intermittently (5 times).

#3:If the brake pedal is not fully depressed, the engine may be restarted automatically. The engine may not be stopped automatically when the brake pedal is depressed lightly, but the engine is stopped automatically by further depressing the brake pedal. The driver can operate whether idling stop is performed or not depending on how much the brake pedal is depressed.

ENG A-STOP OFF Switch

The ENG A-STOP system can be deactivated.

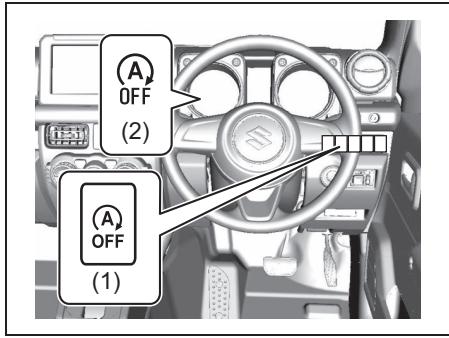

77R40620

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.
- Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.

ENG A-STOP OFF Indicator Light


- When you push the ENG A-STOP OFF switch, this light comes on.



56RM03012

The ENG A-STOP OFF indicator light (orange) in the speedometer comes on or blinks in the following cases as well, and not only to warn you that the ENG A-STOP system is deactivated. If it blinks, have the vehicle inspected by a Maruti Suzuki authorized workshop.

- If the system is operating normally when the engine switch is pressed to change the ignition mode to ON, the indicator light comes on for approximately 2 seconds, then goes off.
- If there is something wrong with the system, or if it is time to replace the engine component (starter motor) or the lead-acid battery, the indicator light will blink when the engine switch is pressed to change the ignition mode to ON. (The ENG A-STOP system will not work properly.)

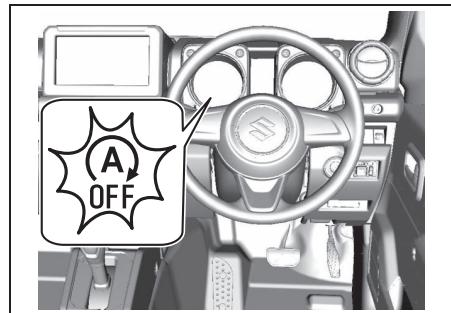

77R40630

NOTE:


If the indicator light blinks when the engine has stopped automatically by the ENG A-STOP system, the engine may restart or stall.

Air Conditioning System Settings by ENG A-STOP System

When using the automatic heating and air conditioning system while the engine is stopped automatically by the ENG A-STOP system, you can select the settings via the setting mode of the information display.

For details on how to use the information display, refer to "Setting Mode" of "Information Display" in the "INSTRUMENT CLUSTER" section.

Parking Brake Lever

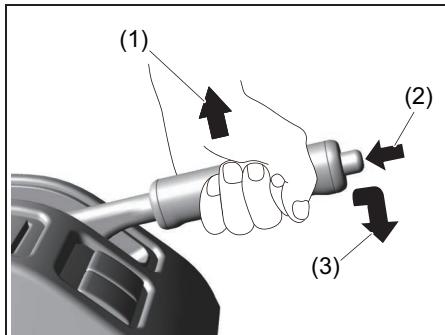

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

! WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected by a Maruti Suzuki authorized workshop.
- Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, check that the gearshift lever is in one of the following positions:
 - 1st gear or "R" (Reverse) for manual transmission vehicles.
 - "P" (Park) for automatic transmission vehicles.

Remember, even though the transmission is in gear or in Park, you must set the parking brake fully.

(Continued)

! WARNING

(Continued)

- When parking the vehicle in extremely cold weather, the following procedure should be used:
 - 1) Set the parking brake.
 - 2) Manual transmission – turn off the engine, then shift into reverse or first gear.
Automatic transmission – shift into “P” (Park) and turn off the engine.
 - 3) Get out of the vehicle and put chocks under the wheels.
 - 4) Release the parking brake.
When you return to your vehicle, first set the parking brake, and then remove the wheel chocks.
- Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:
 - Gas may leak from a cigarette lighter or spray can and may lead to a fire.
 - The glasses, plastic cards or CD cases, etc. may deform or crack.
 - Soft drink cans may fracture.

Parking Brake Reminder Buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.

Precaution for Parking

When Moving the Vehicle

When moving the vehicle, start the engine.

! WARNING

If you coast with the engine off, stronger force than normal is required when turning the steering wheel or depressing the brake pedal, resulting in an accident.
Do not coast on a downhill slope with the engine off.

When Taking a Nap in the Vehicle



69RHS172

Do not take a nap in the vehicle with the engine running.

OPERATING YOUR VEHICLE

⚠ WARNING

- Exhaust gases can enter the vehicle due to surrounding conditions and wind direction, possibly causing carbon monoxide poisoning.
- The gearshift lever could change unintentionally, or the accelerator pedal could be depressed accidentally, causing an accident.
- If you were to accidentally step on the accelerator pedal while you are asleep, the engine and the exhaust system could overheat, resulting in danger of fire.

With the Engine Running, the Cooling Fan (Radiator Fan) may Rotate Suddenly

The cooling fan (radiator fan) in the engine compartment may automatically stop and rotate depending on the conditions of the engine coolant temperature.

⚠ WARNING

If you get close to a rotating cooling fan (radiator fan), your hands, hair and clothing may get caught in it, resulting in personal injury. With the engine running, even when the cooling fan (radiator fan) stops, it may automatically rotate. Therefore, do not get close to the cooling fan (radiator fan).

When You Park the Vehicle Outside on a Snowy Day

⚠ WARNING

- When you park the vehicle under the eaves or the trees, fallen snow may hit the vehicle's roof and it may be dented.
Do not park the vehicle under the eaves or the trees on a snowy day.
- If you park the vehicle outside on a snowy day, the wiper arms may be deformed and the wiper blades may be frozen on the windshield, because of the weight of snow.
When you park the vehicle outside, raise the wiper arms.

Do not Park the Vehicle Near Flammable Materials



69RHS174

⚠ WARNING

If you park the vehicle near flammable materials, the exhaust pipes and exhaust gas will get hot, resulting in danger of fire.
Do not park the vehicle near flammable materials such as dry grass, paper waste and plywood.

When Leaving the Vehicle, Stop the Engine and Lock Doors



69RHS054

Even when leaving the vehicle for a short time, do not leave cash or valuables inside, as there is a risk of theft.

⚠ WARNING

If you leave the vehicle unattended with the engine running, problems such as fire or theft can occur.
Do not leave the vehicle unattended with the engine running.

Do not Leave the Computer and the Mobile Phone in the Vehicle

There is the possibility of theft, or these items could become damaged due to moisture, humidity or temperature change.

Do not Leave Lighters and Eye-glasses in the Vehicle



69RHS175

⚠ WARNING

- As the inside of the vehicle becomes hotter when parking in areas where strong sunlight causes increased temperature, there is the danger of spontaneous ignition of lighters or spray cans, fire due to explosion, the deformation or cracking of eye-glasses, plastic cards or CD cases, or the rupture of carbonated beverage cans. When parking in those areas, do not leave lighters, spray cans, plastic products (eyeglasses, plastic cards, CD cases, etc.) or carbonated beverage cans in the vehicle.
- When items get pushed around or when the seats are moved, it is possible that gas could escape and lead to a fire. Do not place accessories such as lighters or spray cans with exposed operating parts in the glove box, in storage compartments, between the seats, on the floor, etc.


OPERATING YOUR VEHICLE

Using Transmission

⚠ WARNING

Do not hang any items on the gear-shift lever and do not use the gear-shift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

Manual Transmission

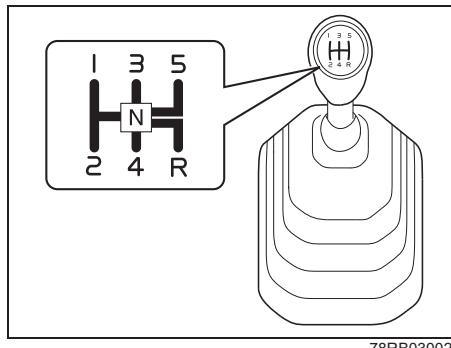

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized and provide quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed from rising into the red zone of the tachometer.

Downshifting maximum allowable speeds

Transfer lever in "2H" or "4H" position

Downshifting	km/h
2nd to 1st	20 (12)
3rd to 2nd	80 (49)
4th to 3rd	115 (71)
5th to 4th	160 (99)*

Transfer lever in "4L" position

Downshifting	km/h
2nd to 1st	10 (6)
3rd to 2nd	40 (24)
4th to 3rd	55 (34)
5th to 4th	80 (49)*

*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

⚠ WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.


NOTE:

If it is difficult to engage reverse gear [R], follow below procedure.

- Put gear lever in neutral [N] position.
- Release clutch pedal once.
- Again depress the clutch pedal and shift from [N] to [R].

Automatic Transmission

Gearshift lever

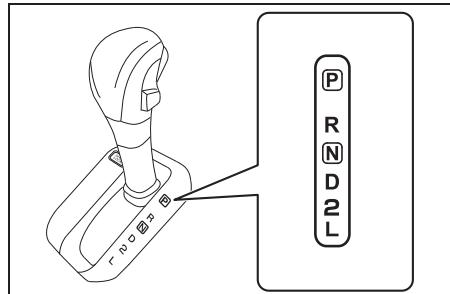

80T050080

The gearshift lever is designed so that it cannot be shifted out of "P" position unless the ignition switch is in "ON" position and the brake pedal is depressed.

Use the gearshift lever positions as follows:

P (Park)

Use this position to lock the transmission when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

NOTICE

- Check that the vehicle is completely stationary before you shift into reverse.
- To help avoid clutch damage, do not use the clutch pedal as a foot-rest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

OPERATING YOUR VEHICLE

N (Neutral)

Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

D (Drive)

Use this position for all normal driving.

With the gearshift lever in "D" range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

2 (Low 2)

Use this position to provide extra power when climbing hills, or to provide engine braking when going down hills.

L (Low 1)

Use this position to provide maximum power when climbing steep hills or driving through deep snow or mud, or to provide maximum engine braking when going down steep hills.

WARNING

Always depress the brake pedal before shifting from "P" (Park) or "N" (Neutral) if the vehicle is stationary to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.

CAUTION

For the vehicles with the keyless push start system, if you cannot press the engine switch firmly, the engine may not start. Even if you shift the gearshift lever into "R" or "D" position without the engine running, the vehicle does not move.


If you try to move your vehicle under the above-mentioned condition, the vehicle may move in unexpected directions on a slope, etc. This may cause an accident. When starting the engine, press the engine switch firmly. Also, make sure that the engine is running by checking engine sound or warning and indicator lights.

NOTE:

When you shift the gearshift lever into "P" and stop the engine before depressing the parking brake pedal, if you try to restart the engine and shift the gearshift lever into the

position other than "P", it may reduce gearshift lever capability, or unusual sound and shock may occur. However, this is not abnormal.

The gearshift lever has a lock mechanism to help prevent accidental shifting. Shift the gearshift lever as follows:

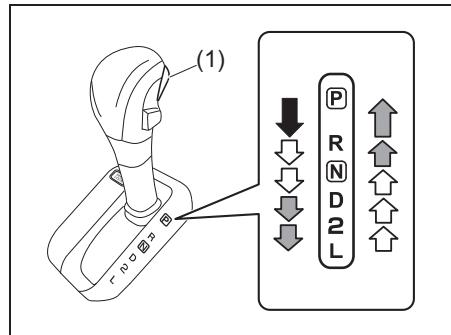

80T051070

(1) knob button


	Shift with the knob button (1) pushed in and the brake pedal depressed.
	Shift with the knob button (1) pushed in.
	Shift without the knob button (1) pushed in.

NOTICE

- Do not shift the gearshift lever into "R" while moving forward, or the transmission may be damaged. If you shift into "R" when the vehicle speed is over 10 km/h, the transmission will not shift into reverse.
- Be sure to take the following precautions to help avoid damage to the automatic transmission:
 - Make sure that the vehicle is completely stationary before shifting into "P" or "R".
 - Do not shift from "P" or "N" to "R", "D" or "L" when the engine is running above idle speed.
 - Do not rev the engine with the transmission in a drive position ("R", "D" or "L") and the front wheels not moving.
 - Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.

NOTE:

- Always shift the gearshift lever without pushing in the knob button except when you shift from "P" to "R", from "D" to "2", from "2" to "L", from "N" to "R" or from "R" to "P". If you always push in the knob button when shifting the gearshift lever, you could shift into "P", "R", "2" or "L" by mistake.
- If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.

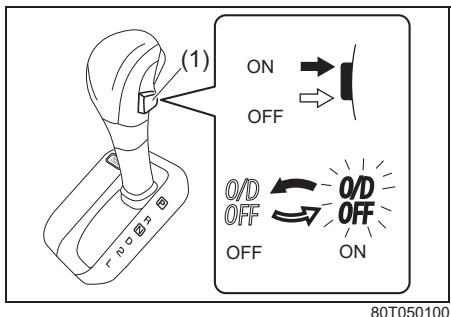Overdrive off switch

(1) Overdrive off switch

The transmission is a 4-speed (3-speed plus overdrive) automatic transmission. By operating the overdrive off switch, the transmission can be converted to a 3-speed automatic transmission that will not move to the overdrive position. To convert


the transmission to the 3-speed mode, push in the overdrive off switch and release it.

To return the transmission to the 4-speed mode, push in the overdrive off switch again.

When the ignition switch is turned to the "ACC" position, the transmission in the 3-speed mode is converted to the 4-speed mode automatically.

The 3-speed mode is suitable for the following driving conditions:

- Driving on hilly, winding roads
 - You can drive more smoothly with less frequent gear changing
- Going down a steep hill
 - Some engine braking is provided

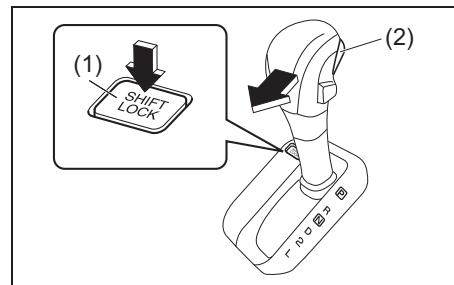If you cannot Shift Automatic Transmission Gearshift Lever out of "P" (PARK)


OPERATING YOUR VEHICLE

The automatic transmission vehicles have an electrically operated park-lock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the automatic transmission cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.

- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- 3) Make sure the key is in "ON" or "ACC" position.
- 4) With the release button (1) pushed, push the knob button (2) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to a Maruti Suzuki authorized workshop for repair.

Gearshift Indicator (if equipped)

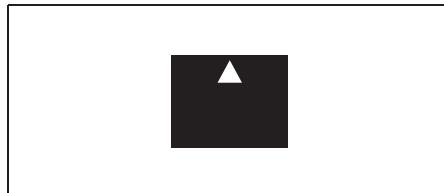

52RM30410

In the following cases, the gearshift indicator is indicated in the information display when the ignition switch is in "ON" position.

- When the gearshift lever is in a position other than "N" (Neutral).
- When the transfer lever is in "2H" or "4H" position.
- For vehicles equipped with the cruise control, when the system is not in use.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated in the display while driving, we recommend you to shift up or down the gear. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

! WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.

NOTE:


- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.
- If any of the electrical systems such as ESP® system is working, the gearshift indicator will disappear temporarily.

Example of the gearshift indicator

Indication	Description
	<p>Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended.</p> <ul style="list-style-type: none">• In this case, shifting up is recommended.
	<p>Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended.</p> <ul style="list-style-type: none">• In this case, shifting down is recommended.

OPERATING YOUR VEHICLE

Transfer Lever

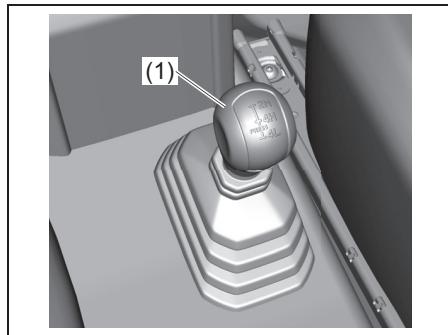


78RB03022


(1) Transfer lever

Your vehicle is equipped with the "ALL GRIP PRO" system that consists of a transfer case with a synchronizer (between 2WD-high and 4WD-high positions) and the air locking hubs. With this feature, you can shift the drive mode between 2-wheel drive high range and 4-wheel drive high range by shifting the "2H" or "4H" position. Stop the vehicle or reduce the speed to less than 100 km/h with the front wheels in the straight ahead position. Do not shift the transfer lever without depressing the accelerator pedal. Do not activate the cruise control system when shifting the transfer lever.

Free axle mechanism

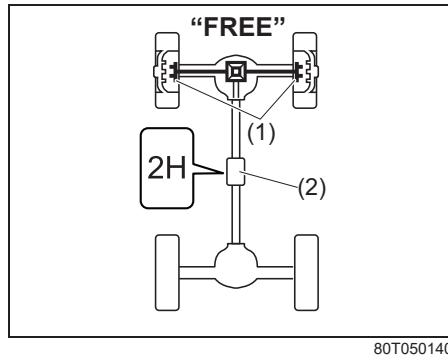


Fixed axle mechanism

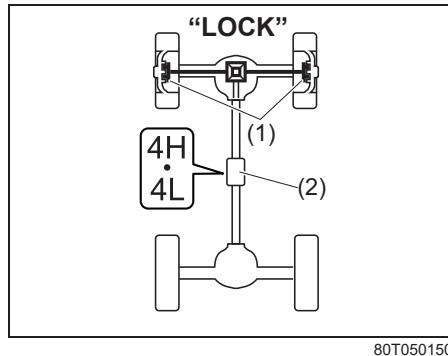

(1) Air locking hubs
(2) Transfer case

NOTE:

- The air locking hubs are activated by the vacuum of the engine and changed to shift the front wheel drive. The air locking hubs are not shifted when the engine is stopping. Several seconds are required from the operation of the transfer lever to the activation of air locking hubs.
- When the front tyres receive a big shock during running in 2-wheel drive position on the road surface of the big irregularity, etc, some noise may occur inside the air locking hubs afterwards. In this situation, stop the vehicle and then shift the transfer lever into "4H" position. After that, shift the transfer lever into "2H" position again.

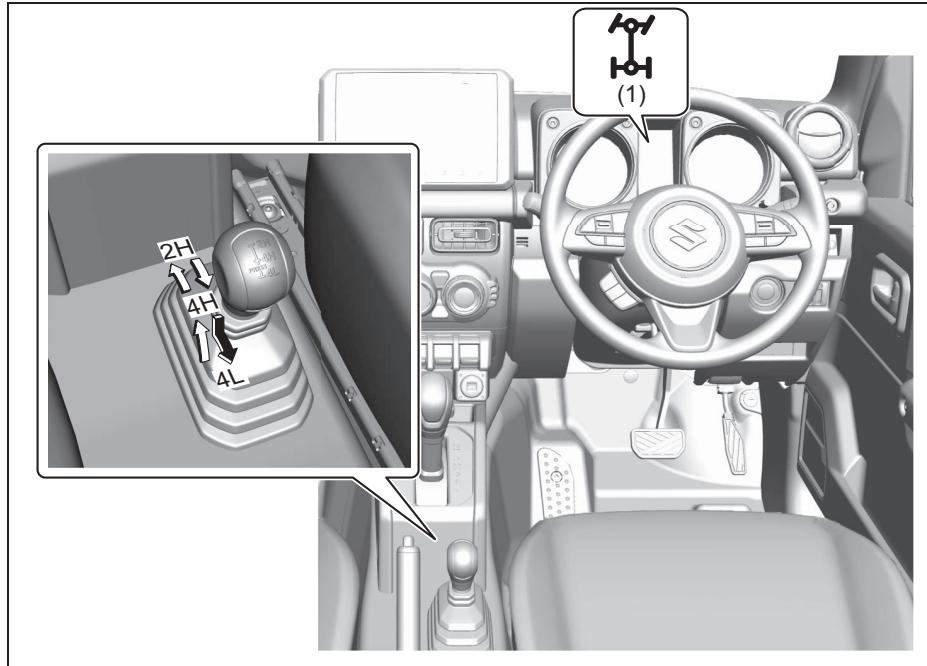Description of Transfer Lever Positions and Indicator Light

80T050160

(1) 4WD indicator light

	Shift the transfer lever without the lever pressed.
	Shift the transfer lever with the lever pressed.

OPERATING YOUR VEHICLE

Transfer lever position	Wheel drive position	Indicator light	Description
		4WD indicator light	
2H	2-wheel drive position	—	In this position, engine power is supplied to the rear axle only. Use this position for normal driving.
4H	4-wheel drive high range position	 78RB03024	In this position, engine power is supplied to the front and rear axles at normal speed, providing greater traction than 2-wheel drive. Use this position for off-road driving, or for driving on slippery roads (icy, snow-covered, muddy, etc.).
4L	4-wheel drive low range position	 78RB03024	In this position, engine power is supplied to the front and rear axles at reduced speed. Use this position for off-road driving on soft or slippery surfaces, or for climbing or descending steep, slippery hills.

NOTICE

- Never operate your vehicle in “4H” or “4L” on dry pavement and, as much as possible, avoid using “4H” or “4L” on wet pavement, as this may seriously damage the drive train.
- If the transfer lever is returned to the original position while shifting the transfer lever, the drive train may be damaged.
- When you turn suddenly on a sharp curve, a side road, or a parking space in “4H” or “4L” position, the turning strength of the steering wheel will be growing big and tight corner braking phenomenon* may occur and result in accidents. 4-wheel drive system damage could also result.

* Tight corner braking phenomenon is the similar situation to depress the brake when the drive train is in 4-wheel drive position (“4H” or “4L”) and the steering wheel is turned suddenly and then the revolution difference between the front wheels and the rear wheels could not absorb.

Transfer Lever Operation

NOTICE

- Unevenly worn tyres can cause problems in the operation of the transfer lever. Be sure to rotate the tyres according to the maintenance schedule. Refer to "Tyres" and "Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section for proper tyre rotation procedures.
- If a problem exists during the shifting function, all lights of the 4WD indicator will blink continuously and the transfer lever operation will not work.


If the shift function does not work after trying the shifting operation several times, it may be the result of a system failure. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- When the temperature of 4-wheel drive system or the transmission is not warm under the low temperature, you may feel it hard to shift the transfer lever or gear noise may occur.
- Unless you can shift the transfer lever, drive your vehicle for a while and then shift the transfer lever again.

Operate the transfer lever according to the appropriate procedure described below:

- From "2H" position to "4H" position
From "4H" position to "2H" position

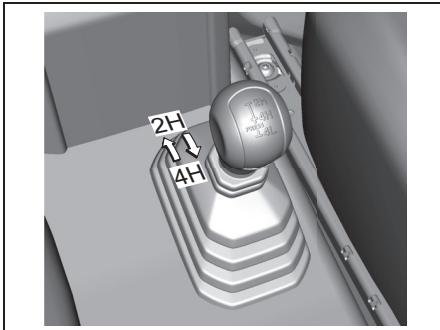

78RB03026

The transfer lever can be shifted when the vehicle is either stopped or moving. Position the front wheels straight ahead and shift the transfer lever from "2H" to "4H" or "4H" to "2H". If the vehicle is moving, the speed must be less than 100 km/h during this operation.

WARNING

Do not shift the transfer lever while the rear tyre is spinning. Your vehicle may move to the unexpected direction. 4-wheel drive system may be also damaged.

NOTICE

Pay attention to shifting the transfer lever safely when driving your vehicle.


NOTE:

- After shifting the transfer lever from "2H" to "4H", check that the 4WD indicator light comes on.
- After shifting the transfer lever from "4H" to "2H", check that the 4WD indicator goes off.
- When 4WD indicator light is blinking after shifting the transfer lever to "4H" position, accelerate, slow down your vehicle or stop and reverse your vehicle a little to shift the transfer lever. Pay attention to the vehicles and the circumference toward or backward your vehicle when shifting the transfer lever.
- When you shift the transfer lever while turning the steering wheel or depressing the accelerator pedal, shifting the transfer lever may be difficult.
- Operate the transfer lever while driving at low speed if it may be difficult to shift the transfer lever from "2H" position to "4H" position when the vehicle is stopped.

OPERATING YOUR VEHICLE

- Shift the transfer lever again after decelerating or stopping the vehicle if it may be difficult to shift the transfer lever from “2H” position to “4H” position while driving or when the gear noise occurs.
- There may be a case to operate the transfer lever heavily when shifting the transfer lever from “4H” position to “2H” position while driving. In this case, position the front wheels straight ahead and drive for a while and then operate shifting the transfer lever again.
- When the transfer lever is shifted from “2H” position to “4H” position or from “4H” position to “2H” position and the air locking hubs are activated, the air conditioning system may not be operated for several seconds. This is not a malfunction.
- When the ignition switch is turned “ON” after the transfer lever is shifted from “2H” position to “4H” position or from “4H” position to “2H” position while stopping the engine, 4WD indicator light may blink. This is not a malfunction.

From “4H” position to “4L” position

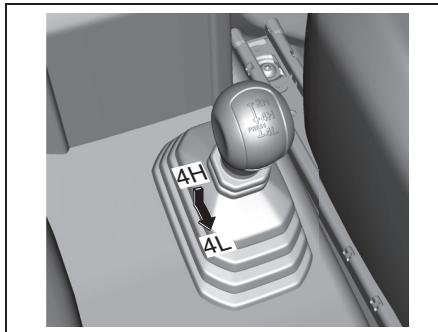

78RB03027

Stop the vehicle completely, place the transmission in “N” (Neutral) or depress the clutch pedal fully (if equipped), then shift the transfer lever from “4H” position to “4L” position by pressing the transfer lever.

WARNING

When you turn off the engine while the transfer is not finished to shift into “4L” position, follow instructions below.

- Depress the brake pedal* fully.
- Turn the ignition switch to “OFF” position or press the engine switch to change the ignition mode to OFF.

* Depress the brake pedal until the engine is started again.

- Even though the gearshift lever is shifted into 1st gear or “R” (Reverse) gear for manual transmission vehicles or shifted into “P” (Park) position for automatic transmission vehicles, there may be a case that the wheels of the vehicle is not stationary.

When you turn off the engine in this situation, start the engine again and move the vehicle forward or backward slowly.


CAUTION

- Do not operate the transfer lever while driving.
- Do not operate the transfer lever while making a left or right turn or while holding rear wheels slipped on icy, snow-covered, or muddy roads. Your vehicle may move to the unexpected direction. 4-wheel drive system may be also damaged.

NOTE:

- There may be a case that you will feel the difficulty to operate the transfer lever when shifting the transfer lever from “4H” position to “4L” position. Operate the transfer lever into “4L” position surely.
 - When shifting the transfer lever from “4H” position to “4L” position, the buzzer will sound and the function of the ESP® system and the vehicle stability control system will be deactivated.
 - There may be a case that shifting into “4L” position is not completed when the transfer system or the transmission is not warm in the cold weather. There may be a possibility of difficulty to shift especially for automatic transmission vehicles in the cold weather. Follow instructions below in this case and operate the transfer lever again.
 - Stop the vehicle completely.
 - Place the transmission in “N” (Neutral).
 - Depress the brake pedal* fully.
 - Release the parking brake.
 - Turn the ignition switch to “OFF” position or press the engine switch to change the ignition mode to OFF.
 - Shift the transfer lever from “4H” position to “4L” position by pressing the transfer lever.
 - Check whether the vehicle can be moved by moving the vehicle forward or backward slowly.
- * Depress the brake pedal until the engine is started again.

- There may be a case that it is difficult to operate the transfer lever or the gear noise occurs after driving the vehicle for a while in the cold weather. There may be a possibility of difficulty to shift the transfer lever from “4H” position to “4L” position. In this case, shift the transfer lever into “4H” position or “2H” position and then operate the transfer lever again after driving for a while.

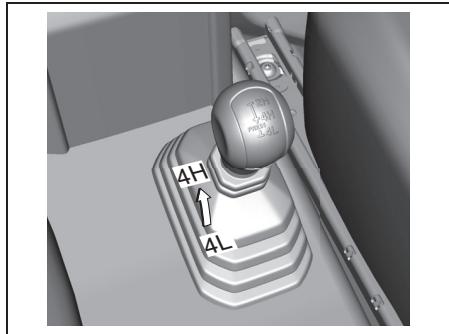From “4L” position to “4H” position

78RB03028

Stop the vehicle completely, place the transmission in “N” (Neutral) or depress the clutch pedal fully (manual transmission model), then shift the transfer lever from “4L” position to “4H” position.

OPERATING YOUR VEHICLE

Cruise Control (if equipped)

The cruise control system allows you to maintain a steady speed without keeping your foot on the accelerator pedal. The controls for operating the cruise control system are on the steering wheel.

You can use the cruise control system under the following conditions:


- For manual transmission vehicle, the gear position is in 3rd, 4th or 5th
- For automatic transmission vehicle, the gearshift lever is in "D" position
- When the transfer lever is in "2H" or "4H" position
- When 4WD indicator light does not blink
- The vehicle speed is about 40 km/h or higher

⚠ WARNING


To help avoid loss of vehicle control, do not use the cruise control system when driving in heavy traffic, on slippery or winding roads, or on steep downhills.

Setting Cruising Speed

Cruise control switch

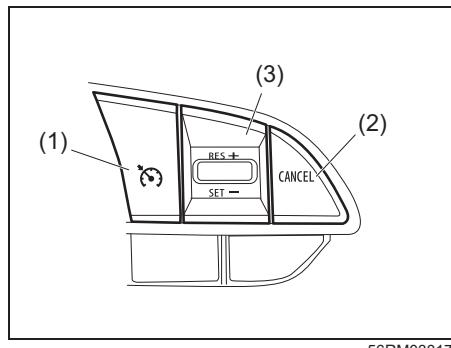

(1) Cruise switch
(2) "CANCEL" switch
(3) "RES +/SET -" switch

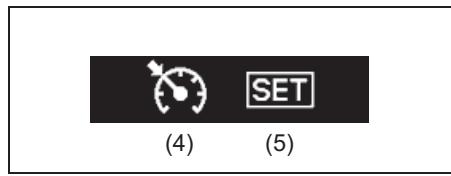

(4) Cruise indicator
(5) "SET" indicator

- 1) Turn on the cruise control system by pushing cruise switch (1). When the cruise indicator (4) comes on, you can set cruising speed.
- 2) Accelerate or decelerate to the desired speed.
- 3) Push down the "RES +/SET -" switch (3), "SET" indicator (5) comes on. Take your foot off the accelerator pedal and the set speed will be maintained.

⚠ WARNING

If the cruising speed is set by accident, you cannot decelerate or could lose control of the vehicle. This could lead to an accident, resulting in severe injury or death.

Turn off the cruise control system and check that cruise indicator (4), "SET" indicator (5) is off when the system is not in use.

NOTE:

Established cruising speed may differ a little from the speed meter indication depending on the road conditions.

Changing Speed Temporarily

When the cruising speed is maintained, you can temporarily accelerate or decelerate.

To accelerate, depress the accelerator pedal. When you take your foot off the pedal, your vehicle will return to the set speed.

To decelerate, depress the brake pedal. The set speed will be canceled and "SET" indicator (5) will go off.

To resume the previously set speed, push up the "RES +/SET -" switch (3) and turn on "SET" indicator (5) again when vehicle speed is above 40 km/h. The vehicle will accelerate to the previously set speed and maintain its speed.

Changing Cruising Speed

Using the accelerator pedal

To reset at a faster cruising speed, accelerate to the desired speed using the accelerator pedal and push down the "RES +/SET -" switch (3). The new speed will be maintained.

Using the brake pedal

To reset at a slower cruising speed, decelerate to the desired speed using the brake pedal and push down the "RES +/SET -" switch (3). The new speed will be maintained.

NOTE:

When the brake pedal is depressed, "SET" indicator (5) will go off until you reset the cruising speed.

Using "RES +/SET -" switch

To reset at a faster cruising speed, press repeatedly or hold push up the "RES +/SET -" switch (3). Vehicle speed will steadily increase. When you release the switch, the new speed will be maintained.

To reset at a slower cruising speed, press repeatedly or hold push down the "RES +/SET -" switch (3) until the vehicle has slowed to the desired speed, and then release the switch. The new speed will be maintained.

NOTE:

- You can adjust the set speed by approximately 1 km/h by pushing "RES +/SET -" switch quickly.
- When the current vehicle speed is about 10 km/h or more faster than the previously set speed, the cruising speed cannot be decreased even if the "RES +/SET -" switch (3) is pushed down.
- When the current vehicle speed is about 10 km/h or more slower than the previously set speed, the cruising speed cannot be increased even if the "RES +/SET -" switch (3) is pushed up.

Cancelling Cruise Control

"SET" indicator (5) will go off and the cruise control will be canceled temporarily with the following conditions:

- Push "CANCEL" switch (2)
- Depress the brake pedal
- For manual transmission, depress the clutch pedal
- For automatic transmission vehicle, the gear position is changed to "L"
- The vehicle speed falls more than about 20 percent from the set speed
- Any time the vehicle speed falls below 40 km/h
- When the vehicle skids and ESP® is activated
- If the automatic brake system is working
- When the transfer lever is operated

OPERATING YOUR VEHICLE

To resume the previously set speed, push up the "RES +/SET -" switch (3) and turn on "SET" indicator (5). The vehicle speed must be above 40 km/h when the vehicle is not under the above conditions.

To turn off the cruise control system, push cruise switch (1) and check that the cruise indicator (4) is off.

Also, if the malfunction indicator light in the instrument cluster comes on or blinks, the cruise control system will be turned off.

NOTE:

If you turn off the cruise control system, the previously set speed in the memory is cleared. Reset your cruising speed again.

Parking Sensors

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumper. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obstacle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.
- The parking sensor function can be used when you turn the ignition switch to "ON" position or the engine switch is pressed to change the ignition mode to "ON", the gearshift lever is in the reverse position (manual transmission models) or "R" position (automatic transmission models). This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles.

WARNING

- The parking sensor warns you of obstacles with buzzers. However, you must still pay full attention yourself while driving.
- The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.


NOTICE

Parking sensors are only for driver's assistance.

NOTE:

When the gearshift lever is shifted to the reverse position (manual transmission models) or "R" position (automatic transmission models), a buzzer will sound once.

Sensor Locations

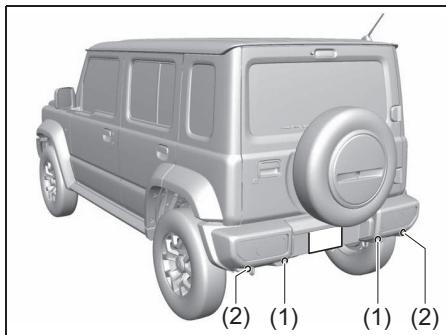

- (1) Rear center sensors (2 places)
 (2) Rear corner sensors (2 places)

NOTICE

- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorized workshop.

Working sensors

The sensors work depending on the gearshift lever position as follows:

Gearshift lever position	Manual transmission		Automatic transmission		Parking brake lever	
	R	N, 1st – 5th	R	N, D or L		
Rear sensors	Center	On	Off	On	Off	No relation
	Corner	On	Off	On	Off	No relation

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound.

- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.
- Warnings when obstacles are detected by rear sensors


Distance (approx.)		Buzzer
Center sensors	60–150 cm	Short beeps at long intervals
	45–60 cm	Short beeps at short intervals
	35–45 cm	Short beeps at very short intervals
	Less than 35 cm	Continuous beep

NOTE:

- Buzzer will sound with a short delay after the detection of obstacles.
- If the system detects multiple obstacles simultaneously, however, the buzzers will sound only for the nearest obstacles.

OPERATING YOUR VEHICLE

Approximate areas where obstacles can be detected

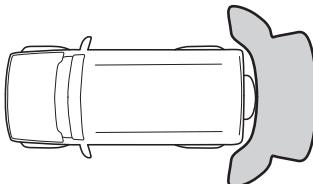

80T050690

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect obstacles such as a wall up to about 1.5 m (5 ft) from the rear of vehicle.

⚠ WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
 - Sensors are covered with mud, ice or other materials (Such materials must be removed for normal operation).
 - Sensors are wet from water splashes or heavy rain.
 - Sensors are covered by a hand, sticker, accessory, etc.
 - There is an accessory or other object attached within the sensor's sensing area.
 - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
 - The height of the bumper is changed due to alteration to the suspension or other causes.
 - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
 - The vehicle is on a rough surface, slope, gravel road or grass field.
 - The vehicle is at a steep angle.

(Continued)

⚠ WARNING

(Continued)

- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass (Ultrasonic waves are not reflected back from the obstacle).
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material like wire netting and ropes.
 - Square-shaped curbstones or other objects with sharp edges.
 - Tall objects with a large upper part like a road sign.
 - Low-profile objects such as curbstones.
 - Sound-absorbing objects such as cotton and snow.

NOTE:

- Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.*
- The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.*

Parking Sensor System Malfunction

If there is a problem or warning regarding the parking sensor system, a buzzer inform it. Follow its instruction.

- The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Rearview Camera

When the gearshift lever is shifted to “R” position while the ignition switch is in “ON” position or the ignition mode is “ON”, the rearview camera system automatically shows the view behind the vehicle on the display.

WARNING


The distance viewed in the rearview camera may differ from the actual distance according to the condition of road or the load the vehicle is carrying. Since the camera display area is also limited, backing up by only looking at the display may cause an accident or a crash with an object.

The rearview camera cannot replace the driver's attention. The driver alone is responsible for parking and similar driving maneuvers.

- Use the rearview camera only to provide driving assistance.
- Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes and using the rear view mirror.
- Check that the trunk lid is securely closed when backing up.

NOTICE

If you use the rearview camera for a long time when the ignition switch is in “ON” position or the ignition mode is ON, but the engine is not running, the battery may discharge. Do not leave the ignition switch in “ON” position or the ignition mode to ON for a long time when the engine is not running.

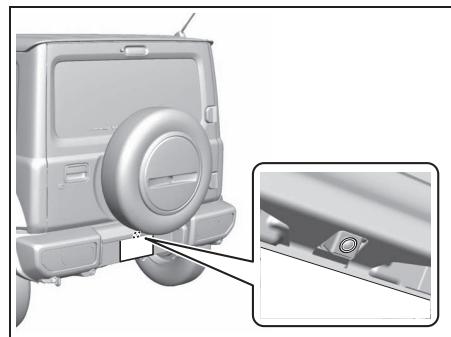Rearview Camera Location

80T050700

(1) Rearview camera

The rearview camera is installed on the tailgate.

OPERATING YOUR VEHICLE

NOTICE

- The rearview camera is a precision instrument. If you strike the camera, it may be broken and cause damage resulting in a catch fire or a malfunction.
 - Do not strike the camera.
 - Do not remove snow or mud on the camera lens with a stick.
- If water enters the rearview camera, it may cause a malfunction or catch fire.
Do not use high pressure water around the camera.
- This lens is hard coated to prevent damage or discoloration. Damage or discoloration of lens may obscure the image.
 - Do not use a brush to clean lens.
 - Do not use alcohol, benzene or thinner to clean the lens.
 - Do not use wax on the camera lens.

NOTE:

If body wax gets on the camera lens, wipe off the wax with a clean cloth dampened with mild detergent diluted with water, and then wipe the lens with a dry cloth.

How to use Rearview Camera

- 1) Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to "ON".
- 2) Shift the gearshift lever in "R" position.
 - The display automatically shows the view behind the vehicle.
 - When the gearshift lever is shifted from "R" to another gearshift lever position, the display returns to the previous display.


NOTE:

The rearview camera display has first priority in any display mode. However, the rearview camera display does not show the rear view while the system is initializing.


Display Range of Rearview Camera

The rearview camera display shows the area behind the rear end of the bumper. The display cannot show objects which are close to the bumper or under the bumper. The rearview camera display cannot show obstacles which are higher than the camera. Upper parts of tall objects such as road signs cannot be viewed on the display.

Display range of rearview camera

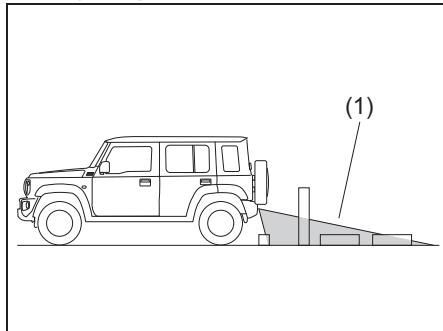

80T050710

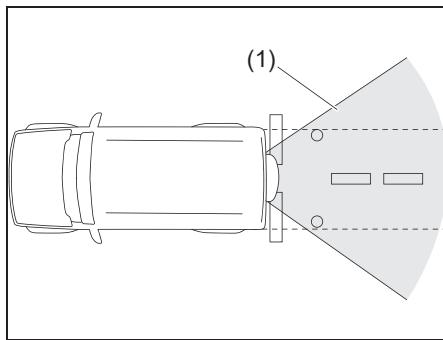

80T050720

(1) Display range


NOTE:

- *Images shown on the display from the rearview camera are reversed images (mirror images).*
- *The colors of objects on the rearview camera may differ from the actual object colors.*
- *The rearview camera display may be difficult to see under the following conditions, but this is not a system malfunction.*
 - *In dark areas, on a rainy day or at night.*
 - *When the temperature around the lens is too high/low, or the camera is wet such as on a rainy day or during periods of high humidity (dew condensation may occur on the camera lens).*
 - *When a foreign object such as mud or a drop of water is stuck around the camera lens.*
 - *When strong light directly enters the camera (vertical lines may be seen on the display).*
 - *Under fluorescent light (The display may flicker).*
 - *When the outside temperature is low (the image on the display may be darkened).*

OPERATING YOUR VEHICLE

How to Understand the Displayed Items on the Screen

The rearview camera display and following guide lines will be displayed on the screen.

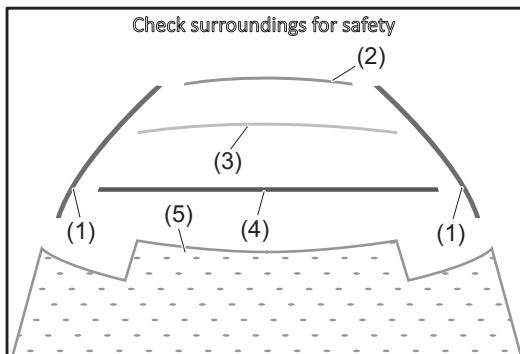

80T051090

- As each guide line is displayed towards road surface, the distance from your vehicle to an obstacle such as the parked vehicle near your vehicle is not accurately displayed.
- Trapezoidal guide lines for the distance and the vehicle width which are displayed on the screen are rough indications and they depend on the actual distance and vehicle width.
- If you modify suspensions or replace a tyre by undesignated tyre, the guide lines will not be accurately displayed.

No.	Item name	Displayed color	Contents
(1)	Guide line for the vehicle width (vertical line)	Purple	This shows the guide line of the position which is slightly outside of the vehicle width (including the width of outside rearview mirrors).


No.	Item name	Displayed color	Contents
(2)	Guide line for the distance	Light blue	This shows the guide line of the position which is about 2 m (6.6 ft) backward from the center of bumper back-end.
(3)		Yellow	This shows the guide line of the position which is about 1 m (3.3 ft) backward from the center of bumper back-end.
(4)		Red	This shows the guide line of the position which is about 0.5 m (1.6 ft) backward from the center of bumper back-end
(5)	Guide line for the vehicle body	Orange	This shows the guide line of the position of the vehicle body shape (including the spare wheel).

OPERATING YOUR VEHICLE

Rearview Camera Screen Indication

The distance viewed in the rearview camera may differ from the actual distance according to the condition of the road or the load the vehicle is carrying.

Uphill incline behind the vehicle

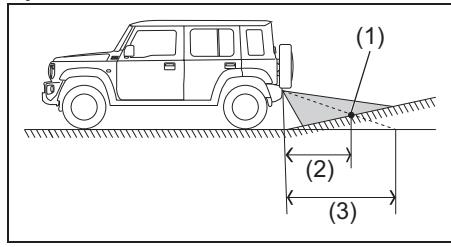


(1) Object

(2) Actual distance

(3) Distance on the display

When there is an uphill incline behind the vehicle, the object shown on the display appears farther away than the actual distance.

Downhill incline behind the vehicle

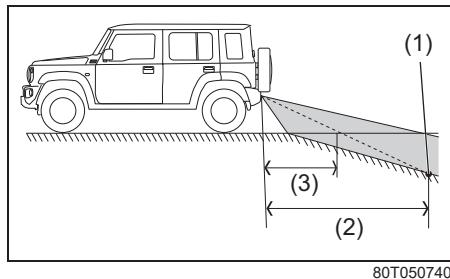

(1) Object

(2) Actual distance

(3) Distance on the display

When there is a downhill incline behind the vehicle, the object shown on the display appears closer than the actual distance.

- If the image from the rearview camera is poor.

- Check that the camera lens is not dirty.
- Check that light from the sun or the beam of the headlights from the vehicle behind is not shining directly into the lens.

If the rearview camera system is still not working properly after checking the above, have the system inspected by a Maruti Suzuki authorized workshop as soon as possible.

If the rear view from the rearview camera is not shown or there is a poor image

- If the rear view from the rearview camera is not shown.
 - Check that the ignition switch is in "ON" position or the ignition mode is "ON".
 - Check that the gearshift lever is shifted to "R" position.

Electronic Stability Program (ESP[®])

ESP[®] is a registered trademark of Mercedes-Benz Group AG.

The Electronic Stability Program (ESP[®]) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP[®] helps to avoid skidding by controlling braking pressure.

⚠ WARNING

The ESP[®] cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP[®] cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents.

The capabilities of an ESP[®]-equipped vehicle must never be used as a substitute for careful driving.

⚠ CAUTION

- Observe the following points. Otherwise, ESP[®] may not operate properly or it may result in a malfunction.
 - Adjust the tyre pressure as specified.
 - When replacing tyres, use the same tyres with the size, type, and tread patterns.
 - Do not use the tyres which have excessively worn conditions.
 - Do not modify the suspension or the brake and do not change vehicle height or suspension hardness.
 - Do not drive the vehicle with suspension or brake excessively deteriorated.
 - Do not modify the engine or the muffler.
 - Do not install LSD (limited slip differential).
 - When you install the snow chains, ESP[®] may not operate properly.

The ESP[®] has the following systems:

Anti-lock Brake System (ABS)

Refer to "Anti-lock Brake System (ABS)" in this section.

Brake Assist System

Refer to "Brake Assist System" in this section.

Traction Control System

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

NOTE:

You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

OPERATING YOUR VEHICLE


Stability Control System

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

NOTE:

- If you perform the following operations, you may hear an operation sound or a clicking sound. This means that the ESP® system is in the self-check mode and this does not indicate a malfunction.
 - When ignition switch is turned to the "ON" position or pressing the engine switch to change the ignition mode to "ON"
 - When releasing your foot from the brake pedal, after the ignition switch is in "ON" position or the ignition mode is "ON" with the brake pedal depressed
 - When starting the engine
 - When starting the vehicle after starting the engine
- When engine revolutions is high and ESP® operates, you may feel the change of engine revolutions or vibration of vehicle body. However, this is normal.

ESP® Warning Light

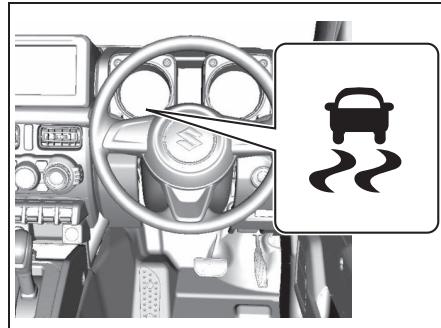

77R40170

- If there is a problem in the ESP® system with the ignition switch in "ON" position or the engine switch in ON mode, this light will come on. While this light comes on, the following situations will occur. In this case, ask your Maruti Suzuki authorized workshop for inspection.
 - The following functions will not work:
 - Traction control system
 - Stability control system
 - Hill descent control system
 - SUZUKI SAFTY SUPPORT
 - ENG A-STOP system
 - Hill hold control system may not work.
 - ABS will work.

- Depending on the malfunction condition, brake assist system may not work.
- If any of the following situations occurs, this light will blink at very short intervals of 0.2 seconds.
 - Traction control system is activated when starting or accelerating the vehicle
 - Stability control system is activated when making a sharp turn or whirling round
 - Hill descent control system is activated when going down steep hills


- If the system is in normal condition, when you turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

CAUTION

If this light blinks at very short intervals, there is high possibility that the vehicle will be stuck or skid on a slippery road surface. In this case, drive the vehicle very carefully.

NOTE:

While this light comes on, traction control system and stability control system will not be activated. However, you can use ABS.

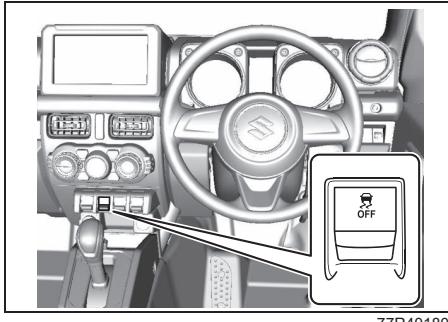ESP® OFF Switch**(1) ESP® OFF switch**

When the ESP® OFF switch located at the instrument panel is pushed and held to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light in the instrument cluster comes on.

When you have turned the ESP® systems (other than ABS) off, turn them back on before resuming ordinary driving.

When you push the ESP® OFF switch again, the ESP® OFF indicator light will go out and all of the ESP® systems will be activated.

NOTE:


When you push and hold the ESP® OFF switch for a while with the transfer lever in "4L" position, the hill hold control system can be deactivate.



If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the ESP® system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- *The ESP® system will not activate while this message is displayed.*

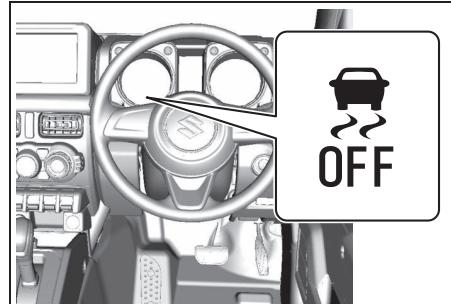ESP® OFF Indicator Light

You should turn the ESP® on during your ordinary driving, so that you have the benefits of all of the ESP® systems.

It may be required to turn the ESP® systems (other than ABS) off if your vehicle is stuck in sand, mud, or snow, where wheel spin is necessary.

- If you press and hold the ESP® OFF switch with the ignition switch is in "ON" position or the ignition mode is "ON", this light will come on.
 - While this light comes on, traction control system and stability control system will not work.
- If the system is in normal condition, when you turn the ignition switch to "ON" position or press the engine switch to

OPERATING YOUR VEHICLE

change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

NOTE:

- When the vehicle speed is greater than approximately 30 km/h, the ESP® systems (other than ABS) will turn on automatically and the ESP® OFF indicator light will go out.
- When the transfer gear is in "4L" (4-wheel drive low range) position, the ESP® systems (other than ABS) will be canceled to provide improved vehicle traction, and the ESP® OFF indicator light will come on.

When the transfer gear is in "4L" (4-wheel drive low range) position, brake traction control can be activated. Brake traction control brakes the spinning wheel to distribute drive power to the other wheels for increased climbing ability or for better performance on a rolling hill or a slippery surface.


Hill Descent Control System

The hill descent control system is designed to reduce the driver's workload when going down steep, rough and/or slippery hills where the vehicle cannot decelerate enough by engine braking alone. The hill descent control system helps to control vehicle speed by automatically engaging the vehicle's brakes, as needed, so you can concentrate on steering the vehicle.

WARNING

Do not rely excessively on the hill descent control system. The hill descent control system may not control the vehicle speed on a hill under all load or road conditions. Always be prepared to control vehicle speed by applying the brakes. Failure to pay attention and control vehicle speed using the brakes when necessary may result in loss of control or an accident.

Hill descent control switch

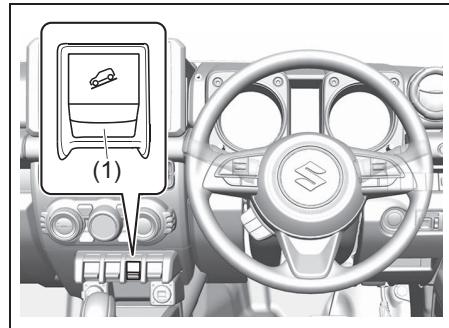

80T050800

(1) Hill descent control switch

To activate the hill descent control system:

- Shift the transfer lever into 4-wheel drive high range position ("4H") or 4-wheel drive low range position ("4L").
- Shift the gearshift lever into a forward gear or reverse gear.
- Push the hill descent control switch (1) when the vehicle speed is under 25 km/h. The hill descent control indicator on the instrument cluster will come on and the hill descent control system will be activated.

4-wheel drive high range position

When the vehicle speed exceeds about 10 km/h without depressing the accelerator pedal, the hill descent control system applies the brakes automatically to maintain the vehicle speed at about 10 km/h.

4-wheel drive low range position

When the vehicle speed exceeds about 5 km/h without depressing the accelerator pedal, the hill descent control system applies the brakes automatically to maintain the vehicle speed at about 5 km/h.

- When braking, the brake/tail lights come on and the ESP® warning light blinks.
- When the vehicle speed exceeds about 35 km/h, the hill descent control system stops functioning and the hill descent control indicator goes blink. When the vehicle slows down below about 25 km/h, the hill descent control system will be activated again and the hill descent control indicator will come on.


WARNING

- When the hill descent control system is used continuously for a long time, the temperature of the brake system may increase and the hill descent control system may be deactivated temporarily to protect the device of the brake system. The hill descent control indicator blinks to let you know the system is deactivated. Depress the brake pedal and stop the vehicle in a safe place. When the temperature of the brake system goes down, the hill descent control indicator will come on and the system is activated again.
- The hill descent control system may be activated when the gearshift lever is in "N" (Neutral) position, but engine braking will not work. Always use the hill descent control system with the gearshift lever in a forward gear or reverse gear.
- When using the hill descent control system, push the hill descent control switch and make sure that the hill descent control indicator light comes on and no warning message are indicated on the information display.

NOTE:

You may hear a sound coming from the engine when the hill descent control system is activated. This sound is normal and does not indicate a malfunction.

To turn off the hill descent control system, push the hill descent control switch and turn off the hill descent control indicator light.

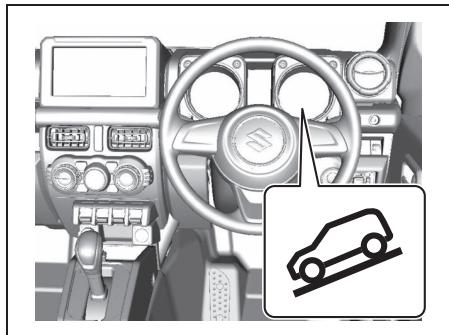Hill descent control indicator light

80T050820

When the ignition switch is in "ON" position or the ignition mode is ON, this light comes on briefly so you can check that the light is working.

OPERATING YOUR VEHICLE

When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

If hill descent control indicator light comes on while not operating the hill descent control switch, or the indicator light does not come on after the switch is pushed, there is a problem in this system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

If the hill descent control indicator blinks when you push the hill descent control switch, check the following conditions.

- The transfer lever is in 4-wheel drive high range position ("4H") or 4-wheel drive low range position("4L")
- The gearshift lever is in a forward gear or reverse gear
- The vehicle speed is under 25 km/h
- The brake system is under normal operating temperature

NOTE:

If any of the following conditions occur, there may be a problem with the hill descent control system or the ESP® system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

- The hill descent control indicator does not come on or blink when you push the hill descent control switch.
- The hill descent control indicator stays on when driving without pushing the hill descent control switch.



75RM224

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the hill descent control system and the hill hold control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

You cannot activate the hill descent control system while this message is displayed.

Hill Hold Control System

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

! WARNING

- Do not rely excessively on the hill hold control system. The hill hold control system may not prevent the vehicle from rolling downward on a hill under all load or road conditions. Always be prepared to depress the brake pedal to prevent the vehicle from rolling downward. Failure to pay attention and depress the brake pedal to hold the vehicle on a hill when necessary, may result in loss of control or an accident.
- The hill hold control system is not designed to stop the vehicle on a hill.

(Continued)

⚠ WARNING

(Continued)

- After you release your foot from the brake pedal, accelerate the vehicle to move up immediately. If you release your foot from the brake pedal over 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of slope. And, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage.
- If you drive on the steep slope, the gravel, the snow-covered road, or the muddy road and the hill hold control system is activated, there may be a possibility that the wheels will be locked and then the vehicle may lose the control.

The hill hold control system activates for a maximum of about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.

- 1) The gearshift lever is in a forward gear or reverse gear.
- 2) The parking brake is released.
- 3) The vehicle is on an upward incline.

NOTE:

When the hill hold control system is activated, the following conditions may be found, but this is not a malfunction.

- You may hear a sound from the engine room.
- As brake pedal becomes heavy, it may be difficult for you to depress it.



75RM224

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the hill descent control system and the hill hold control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:


The hill hold control system will not activate while this message is displayed.

How to turn off Hill hold control system

When driving on a steep slope, or a slippery road (icy, snow-covered, muddy, etc), it is possible to deactivate the hill hold control system.


To deactivate the hill hold control system:

- 1) Make sure that the gear shift lever is in "N" (Neutral) position for manual transmission vehicles and automatic transmission vehicles.

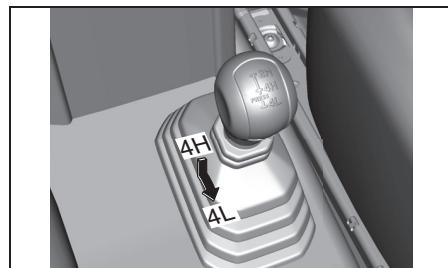

78RB03027

- 2) Shift the transfer lever from 4-wheel high range position ("4H") to 4-wheel low range position ("4L").

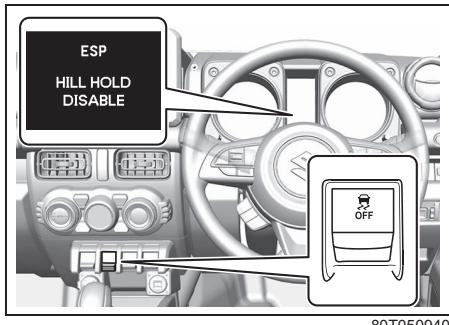


80T050940

- 3) When the ESP® OFF switch is pushed and held to turn off the ESP® system (other than ABS), the message is shown on the display for the vehicles with instrument cluster and the hill hold control system is deactivated.

NOTE:

- When the ESP® OFF switch is pushed again, the hill hold control system is activated again.
- When the hill hold control system is deactivated and the transfer lever is shifted from "4L" position to "4H" position, the hill hold control system is activated again.
- When the hill hold control system is deactivated, hill descent control system is also deactivated.

Braking

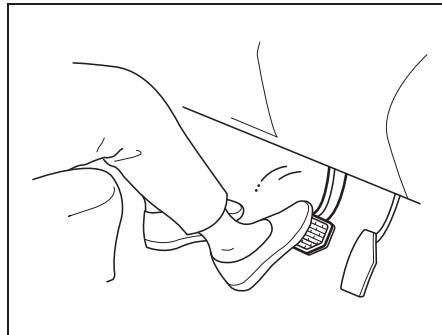

59RN05770

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

! WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

⚠ WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake Assist System

When you slam the brakes on, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear clicking sound by the brake assist system operation. This is normal and indicates that the brake assist system is activated properly.

Anti-lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal move a little while the ABS is operating.

⚠ WARNING

- Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ABS has limits and the system may not function properly depending on the surrounding conditions.
- If tyre grip performance is over the limit or hydroplaning occurs, ABS cannot work properly.

NOTE:

- If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.

- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

Braking Distance

ABS is not designed to shorten the stopping distance.

⚠ WARNING

- In the following situations, the braking distance required for a vehicle with ABS may be slightly greater than the one required for a vehicle without ABS, resulting in an accident. Drive the vehicle slowly and maintain ample distance between your vehicle and the vehicle in front of you.
 - When driving on rough roads such as unpaved or stone-paved roads
 - When driving on gravel roads or fresh snow roads
 - When driving over bumps on the roads such as joint seams
 - When passing over metal plates such as manholes
 - When snow chains are installed

OPERATING YOUR VEHICLE

NOTE:

- When applying sudden brake or applying brake on slippery roads, the braking distance required for a vehicle with ABS is almost the same as the one required for a vehicle without ABS.
- If you would like to suddenly apply brake, just push the brake pedal down firmly without pumping. Otherwise, the longer braking distance will be required.
- The ABS will not work if vehicle speed is under about 9 km/h. This depends on the road conditions.

Vibration and Sound during ABS Operation

When strongly depressing the brake pedal, you might feel vibration of the brake pedal, the steering wheel, and the vehicle body. This is due to ABS operation, and does not indicate a malfunction; continue strongly depressing the brake pedal at this time.

NOTE:

Immediately after starting the engine and beginning to drive, you might temporarily hear a motor sound. This means that the systems are in self-check mode. This sound does not indicate a malfunction.

Tyres


⚠ WARNING

ABS detects each wheel rotation speed via a sensor. If tyres or wheels other than those specified in the owner's manual are used for size, type, tread pattern, or if worn conditions of tyres are different, the correct wheel rotation speed cannot be detected and ABS will not work properly. This may result in an accident. When replacing tyres, use the tyres with the size, type, and tread patterns which are specified in this owner's manual.

Also, do not use the tyres which are excessively worn.


Situations where ABS may Activate by Chance when Applying Brake

- When driving on slippery roads

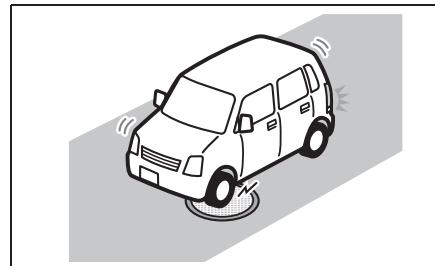


69RHS150

- Manholes

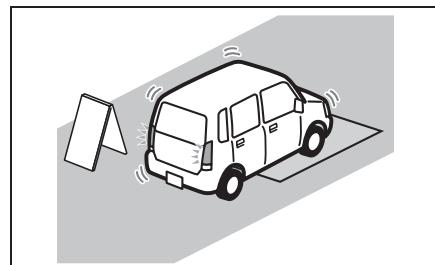


69RHS151

- Metal plates in construction zones

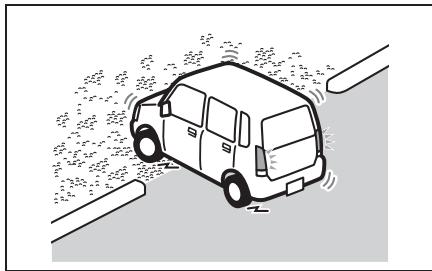


69RHS152

- Gravel roads
- When driving over joints in roads and other height differences

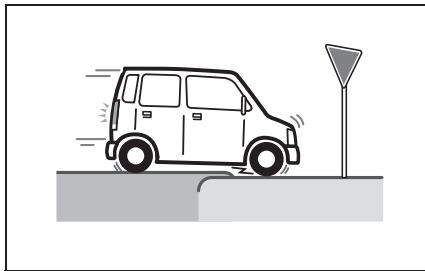


69RHS154

- Height differences in roads
- When driving on rough roads

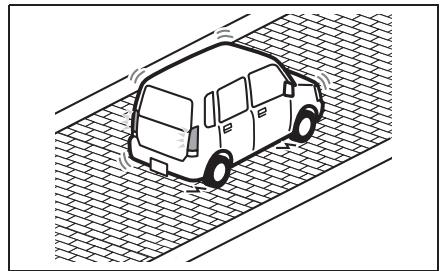

69RHS156

- Cobblestone

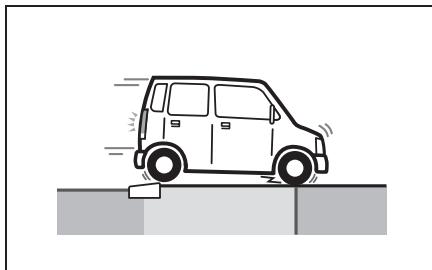

69RHS153

- Joints in roads




69RHS155

- Bumpy roads


OPERATING YOUR VEHICLE

ABS Warning Light

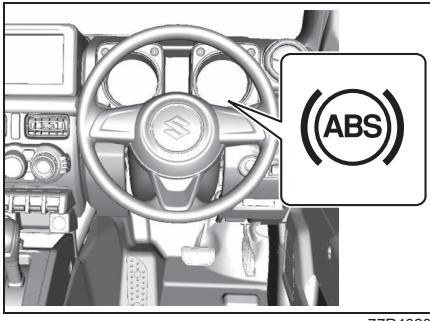

77R40200

If there is a problem in the ABS system with the ignition switch in "ON" position or the engine switch in ON mode, this light will come on.

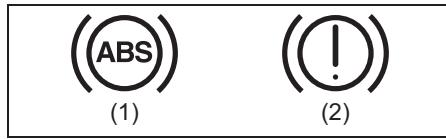

54MN069

- (1) ABS warning light
- (2) Brake system warning light

NOTE:


- If the ABS warning light (1) on the instrument cluster comes on and stays on while driving, there may be a problem with the ABS system. Ask your Maruti Suzuki authorized workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the brake system warning light (2) on the instrument cluster simultaneously stay on or come on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask your Maruti Suzuki authorized workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

Braking Assist

This function assists you in applying more force when operating the brake. When sudden braking is applied, the time until the ABS comes into full effect is shortened.

- If you do not depress the brake pedal firmly, braking assist will not operate.
- Brake assist is not a device that provides control beyond the original braking performance.

ADVICE FOR YOUR DRIVING

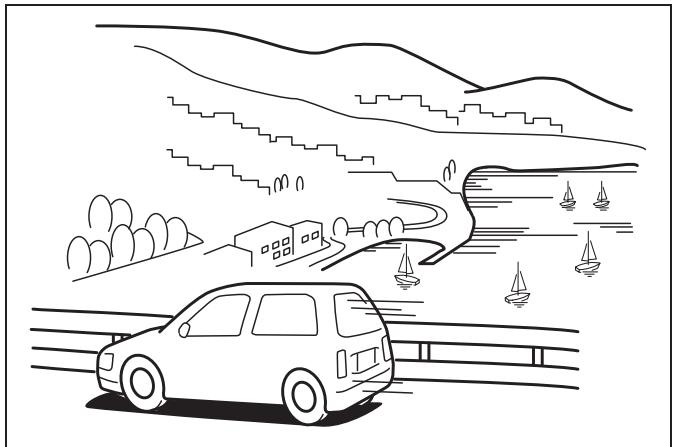

60G409

When Driving	6-1
Important Vehicle Design Features to Know	6-1
On-Paved Road Driving	6-2
Off-road Driving	6-10
Improving Fuel Economy	6-12
Precaution for Handling Vehicle	6-14
Running-in	6-17
Catalytic Converter	6-17

ADVICE FOR YOUR DRIVING

When Driving



59RN02300

⚠ WARNING

- Wear your seat belts at all times. Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to "Seat belts and child restraint systems" in "FOR SAFE DRIVING" section for instructions on proper use of the seat belts.
- Never drive under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated or under stress.

Important Vehicle Design Features to Know

⚠ WARNING

Your multipurpose vehicle has handling characteristics that differ from those of a conventional passenger car. For the safety of you and your passengers, please read the following section very carefully.

Multipurpose vehicles such as your new Maruti Suzuki have higher ground clearance and a narrower track than conventional passenger cars, to make them capable of performing in a wide variety of off-road applications. Specific design characteristics give them a higher center of gravity than ordinary cars. An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems. They are not designed for cornering at the same speed as conventional passenger cars any more than low-slung sports cars are designed to perform satisfactorily under off-road conditions. If at all possible, avoid sharp turns or abrupt maneuvers. As with other vehicles of this type, failure to operate this vehicle correctly may result in loss of control or vehicle rollover. Multipurpose vehicles have a significantly higher rollover rate than other types of vehicles. In a rollover collision, an unbelted person is significantly more likely to die than a person wearing a seat belt.

Important Differences Between Your Multipurpose Vehicle and Ordinary Passenger Cars

Higher Ground Clearance

The higher ground clearance of your vehicle enables it to clear off-road obstacles, such as rocks and tree stumps, that ordinary passenger cars cannot drive over. An unavoidable result of this higher ground clearance is that the vehicle also has a higher center of gravity. Consequently, your vehicle will handle differently than a vehicle with a lower center of gravity.

Narrower Body Width and Track

Your vehicle is narrower than the average passenger car so that it can pass through tight spaces. Without the essential characteristics described above: higher ground clearance, and narrower body width and track -your vehicle could not provide you with excellent off-road driving performance. However, it is also true that on-road driving, handling, and steering will be different from what drivers experience with a conventional passenger car.

On-Paved Road Driving

The data of accidents show that most rollover accidents for multi-purpose vehicles are caused when a driver loses control of the vehicle and leaves the paved portion of the roadway striking a ditch, curb or other off-road object that causes the vehicle to overturn. The following driving practices may reduce the risk of rollover.

Vehicle Slides Off-Road

You can reduce the risk of this kind of roll-over accident by always keeping the vehicle under control. Typically, drivers lose control of vehicles, often resulting in roll-over accidents, when the driver is impaired because of alcohol or other drugs, falls asleep at the wheel or is otherwise inattentive, or is driving too fast for the road conditions.

Rollovers On the Roadway

If, for any reason, your vehicle slides sideways or spins out of control at highway speeds, while on the paved portion of the roadway, the risk of rollover is greatly increased. This condition can be created when two or more wheels drop off onto the shoulder and you steer sharply in an attempt to reenter the roadway. To reduce the risk of rollover in these circumstances, if conditions permit, you should hold the steering wheel firmly and slow down before pulling back into the travel lanes with controlled steering movements.

All Types of Rollover Accidents

As with many kinds of automobile accidents, rollovers can be greatly reduced by doing what all prudent drivers should do, i.e., don't drink and drive, don't drive when tired and don't do anything behind the wheel that could cause a loss of attention to the driving task.

Additional guidelines are set out as follows for your on-road driving.

Know Your Vehicle

Take time to familiarize yourself with the unique handling characteristics of your vehicle by first driving around in an area away from traffic. Practice turning the vehicle at a variety of speeds and in different directions. Get a feel for the greater steering response that your vehicle has over a conventional car.

Wear Your Seat Belts at All Times

The driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to the "SEAT BELTS" in "FOR SAFE DRIVING" section for instructions on proper use of the seat belts.

Don't Make Sharp Turns

As mentioned before, small multipurpose vehicles have specific design characteristics that allow them to perform in a wide variety of applications. These characteristics also change the cornering behavior relative to conventional passenger cars.

Remember, small multipurpose vehicles have more responsive steering and a higher center of gravity than conventional passenger cars. If at all possible, avoid making sharp turns in your vehicle.


Slow Down on Curves

Learn to approach curves cautiously and at a conservative speed. Do not attempt to take curves at the same speeds that you would in a vehicle with a lower center of gravity. Just as you would not drive a sports car on a trail, you should not attempt to drive your vehicle around curves like a sports car.

ADVICE FOR YOUR DRIVING

Start Driving after Carefully Checking the Surrounding Circumstances

Be sure to always fully check the safety of the surrounding circumstances before beginning to drive.

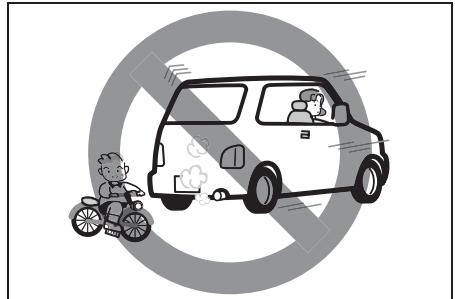

69RHS176

▲ CAUTION

You cannot check the safety of the surrounding circumstances enough only by the 360 view camera, the rear parking sensors and the inside mirror. When moving the vehicle forward or backward, check the safety of the surrounding circumstances by directly checking with your eyes.

Do not Race the Engine, and Do not Avoid Fast Starts and Rapid Acceleration Just after Engine Start

Refer to "Avoid Fast Starts, Rapid Acceleration and Hard Braking" and "Do not Race the Engine" in the "Improving Fuel Economy" section.

Do not Concentrate on a Mobile Phone or Navigation System



55T060040

! WARNING

- Do not operate a mobile phone, etc. while driving. Being distracted by phone operation could lead to an accident.
- Do not operate navigation/audio equipment, etc. while driving. Otherwise, there is the danger of an accident due to being distracted.

Do not Reach Through the Steering Wheel



69RHS178

⚠ WARNING

Reaching through the steering wheel could interfere with steering wheel operation and result in an accident.

Do not Drive with Your Foot on the Brake Pedal

⚠ CAUTION

Driving with your foot resting on the brake pedal could cause brake parts to become worn out more quickly than normal or cause brake components to overheat, making them less effective.

When Depressing the Accelerator Pedal and the Brake Pedal Simultaneously

NOTE:

If you depress both the accelerator pedal and the brake pedal simultaneously while driving, the engine power output may be suppressed.

Do not Shift the Gearshift Lever into “N” (Neutral) while Driving



69RHS180

⚠ CAUTION

Do not put the gearshift lever into the “N” (Neutral) position while driving, except in times of emergency, as this disengages engine braking, which could result in an accident.

ADVICE FOR YOUR DRIVING

What Should You Do in Case of Mal-function or Emergency?

- **Warning light turns on**

Stop immediately in a safe place and take corrective action.

For details, refer to "Warning Lights and Indicators" in the "QUICK GUIDE" section or "Warning and indicator messages" in the "INSTRUMENT CLUSTER".

- **You feel strong shock from under the floor**

Immediately stop in a safe place and check whether there is brake fluid leakage or fuel leakage, and also check whether there is any abnormality in the exhaust pipe, etc. If any abnormality is found, consult with a Maruti Suzuki authorized workshop.

- **Sudden tyre puncture**

Grasp the steering wheel firmly, carefully apply the brake, slowly reduce speed, and stop in a safe place.

- **You feel that the brake pedal is heavy to use**

Via engine vacuum pressure, the vehicle utilizes a brake booster to reduce the force necessary for depressing the brake pedal. If this engine vacuum pressure decreases, you may feel as if the brakes require more force than usual to depress, but this is not abnormal. Depress the brake pedal as strongly as you need to.

- **Metallic screeching sound is heard from the brakes**

Promptly consult with a Maruti Suzuki authorized workshop. The disk brake pads (Maruti Suzuki genuine parts) are designed to emit a creaking/screeching sound as a function to warn the wear, as they have almost reached usage limit and replacement timing.


WARNING

The brakes could be losing their ability to function normally, which could result in an accident.
If you hear a metallic creaking/screeching sound, do not continue driving.

Use Engine Brake on a Long Downhill Slope

Use engine braking(*) in tandem with regular braking when driving on a long downhill slope. Release the accelerator pedal and shift down according to vehicle speed.


Manual transmission vehicles

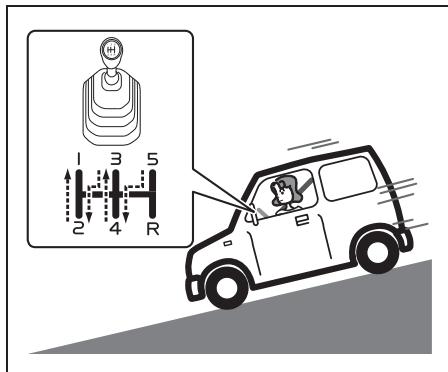

80T060010

For manual transmission vehicle, shift down to a lower gear one by one.

Automatic transmission vehicles

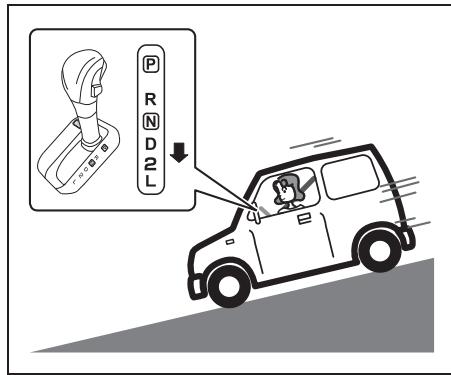


For automatic transmission vehicle, turn off the overdrive (O/D) switch or shift the gearshift lever into "2" or "L".

*: Engine braking is a braking effect that occurs when you release your foot from the accelerator pedal while driving. The lower the gear, the greater the effect of engine braking becomes.

⚠ WARNING


Continuously depressing the brake pedal could cause the brakes to overheat, possibly rendering them ineffective.

When Side Wind Is Strong

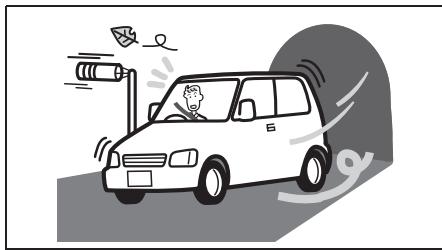

At a tunnel exit, on a bridge, or when a large truck passes you, your vehicle might be blown slightly sideways by side wind. Do not panic. Firmly grasp the steering wheel, gradually reduce speed, and regain your intended course.

Drive Slowly on a Slippery Road Surface

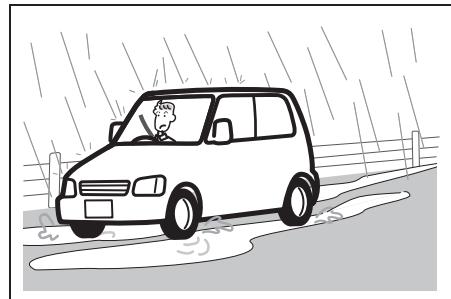

Under wet road conditions you should drive at a lower speed than on dry roads due to possible slippage of tyres during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements. Use 4-wheel drive high range (4H) for better traction.

ADVICE FOR YOUR DRIVING

NOTICE

Never operate your vehicle in "4H" or "4L" on dry pavement and, as much as possible, avoid using "4H" or "4L" on wet pavement, as this puts severe stress on the drive train, especially during tight cornering, and can damage it. Also, you may have some difficulty in steering.

Do not Drive on Puddles at High Speed



69RHS182

Check Brake Effectiveness after Driving on Puddles or Washing a Vehicle



72J20360

CAUTION

When driving on puddles or on wet road surfaces at high speed, a thin surface of water is built between the wheels and the road surface, and the wheels may float. This is called as hydroplaning, which leads to a loss of control in the steering wheel and the brakes and possibly results in an accident.

- After verifying the safety of the surroundings, depress the brake pedal several times at low speed and check the brake effectiveness.
- If the brake effectiveness is still poor, depress the brake pedal at low speed gently and repeatedly until the brake effectiveness is fully recovered, to dry the brake equipment.

Do not Drive Through Deep or Rushing water



61M0075

Driving in deep or rushing water can be hazardous. You could lose control of the vehicle and the occupants could drown. Also, your vehicle could be seriously damaged. To avoid these risks, observe the following instructions and precautions.

- Do not drive through deep or rushing water. Deep or rushing water, such as fast-moving streams or floodwaters, could carry your vehicle away from your intended path. The water is too deep if it covers your wheel hubs, axles, or exhaust tailpipe. Know the depth of the water before you attempt to drive through it.

If the vehicle goes across the river unavoidably, follow the instructions below before going across the river.

- 1) Confirm the depth of the river and the terrain.
- 2) Select the place which is less than 30cm in depth of water. Go across the river to a right angle for the river or lower part of the river
- 3) Drive slowly at less than 5 km/h not to raise the wave and go across the river immediately to avoid operating the gearshift lever.

If the vehicle goes across the river that is more than 30 cm in depth of water unavoidably, stop the vehicle in a safe place while checking the brake effectiveness. Then, ask your Maruti Suzuki authorized workshop to check the following inspection items.

- Function of brake
- Function of electrical components
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.
- If water blocks the tailpipe, the engine may not start or run. If the water is deep enough to get drawn into the engine intake system, the engine will be badly damaged.

- Submerged brakes will have poor braking performance. Drive slowly and carefully. Driving slowly will also help avoid water splashing onto the ignition system, which could cause the engine to stall.
- Even when driving through shallow or still waters, drive carefully since the water may be hiding ground hazards such as holes, ditches, or bumps.

! WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions for on-road and off-road driving.

- Driver and passengers should wear seat belts at all times.
- Do not let anyone else drive your vehicle unless they are also aware of the vehicle characteristics and handling differences described in this section.
- Avoid loaning your vehicle to anyone unless you accompany them.
- Make sure your tyres are in good condition and always maintain the specified tyre pressure. Refer to “Tyres” in the “INSPECTION AND MAINTENANCE” section for details.

(Continued)

ADVICE FOR YOUR DRIVING

⚠ WARNING

(Continued)

- Do not use tyres other than those specified by Maruti Suzuki. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the "SPECIFICATIONS" section.
- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will raise the center of gravity of the vehicle and change its handling characteristics.
- After driving through water, mud, or sandy ground, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.
- After extended operation in mud, sand, or water, have the brakes, bearings and joint parts etc. Ask your Maruti Suzuki authorized workshop for inspection as soon as possible.


Highway Driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.


Driving on Hills

Manual transmission vehicles

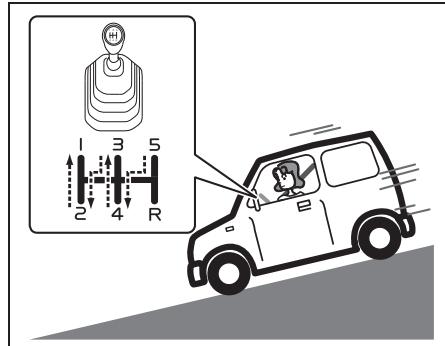

80T060010

Automatic transmission vehicles

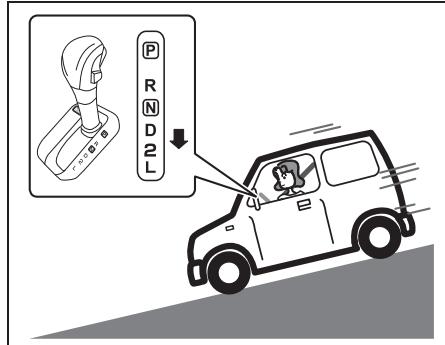

80T060020

- When driving on steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE

When descending a downhill, Never turn the ignition key to "LOCK" position or press the engine switch to change the ignition mode to LOCK (OFF). Emission control system and automatic transmission damage may result.

Off-road Driving

Your vehicle has specific design characteristics for off-road driving. When you leave the paved road, you will encounter driving surfaces of all kinds which may change continually as you drive. In most cases, off-road driving requires the use of 4-wheel drive.

Use Caution on Steep Inclines

Always inspect hills before you attempt to drive up them. Know what is on the other side and how you will get back down. If you have any doubt that it is safe, do not attempt to drive over a hill. Never drive your vehicle up an extremely steep incline. Coming down a steep hill can be trickier than getting up one. Keep the vehicle heading straight down the hill and use low gear. Do not lock the brakes. If the vehicle begins to slide, accelerate slightly to regain steering control.

Do not Drive Across the Side of Hills

Driving across the side of a hill can be extremely hazardous. Most of the vehicle's weight will be transferred to the downhill tyres, which could result in the vehicle rolling sideways. Whenever possible, avoid this potential hazard. Also, if you have to exit your vehicle on a side-hill, always get out on the uphill side.

Wear Your Seat Belts at All Times

You and your passengers should use the seat belts at all times when driving off-road. For proper seat belt use, refer to the "Seat Belts" in "FOR SAFE DRIVING" section in this manual.

Avoid Sudden Reactions in Mud, Ice, or Snow

Be careful when off-road conditions are slippery. Reduce your speed and avoid sudden movements of the vehicle. Be aware that driving in deep snow or mud can cause a loss of traction and an increase in the resistance to the vehicle's forward motion. Use 4WD low gear (4L) and maintain a steady but moderate speed with a light touch on the steering wheel and brakes.

ADVICE FOR YOUR DRIVING

Snow chains

Snow chains should only be used if they are needed to increase traction or are required by law. Check that the chains you use are the correct size for your vehicle's tyres.

Also check that there is enough clearance between the fenders and the chains as installed on the tyres.

Install the chains on the rear tyres tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

If you hear the chains hitting against the vehicle body while driving, stop and tighten them.

Do not Drive in the Field Covered with Grown Grass



69RHS181

Do not drive in the field covered with grown grass. If you drive in the field covered with grass, it may cause accident or fire or vehicle damage by getting caught in grown grass.

WARNING

If loose grass, etc. becomes entangled in drive train parts or exhaust pipes, drive train components might become damaged or fire may result.

WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

(Continued)

⚠ WARNING

(Continued)



55T060070

- In addition to following the driving tips in this section, it is important to observe the following precautions.
 - Check that your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.
 - Do not use tyres other than those specified by Maruti Suzuki. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.

(Continued)

⚠ WARNING

(Continued)

- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps, causing vehicle damage or tyre failure.
- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

NOTICE

- Release the accelerator pedal when operating the gearshift lever or the transfer lever. Operating the gearshift lever or the transfer lever with the engine racing can damage the gears and the free axle mechanism.
- Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating, transmission, transfer case, axles, propeller shaft or differential damage, or tyre damage.

Improving Fuel Economy**NOTE:**

Fuel economy (mileage) of the vehicle may vary due to several factors i.e. driving habits- gear change pattern, usage of A.C, Air pressure in the tyres, wind speed, traffic conditions, fuel quality-non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

Keep Tyre Pressures Correct

Under-inflation of the tyres can waste fuel due to increased running resistance of the tyres. Keep your tyres inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.

Keep Weight to a Minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Avoid Excessive idling

If you park your vehicle for more than one minute, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

ADVICE FOR YOUR DRIVING

Avoid Fast Starts, Rapid Acceleration and Hard Braking

Avoid fast starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.


Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

Do not Race the Engine

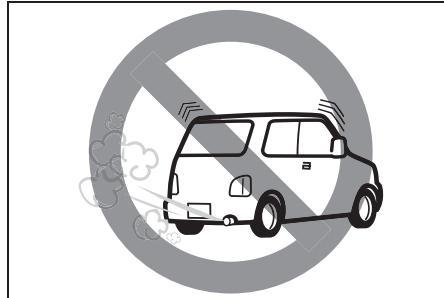


69RHS060

Revving the engine only consumes extra fuel and has no benefit.

NOTICE

Immediately after starting, the engine is often not yet fully warmed up. Therefore, revving the engine, starting to drive suddenly, or rapid acceleration can cause engine failure.

Keep the Air Cleaner Clean

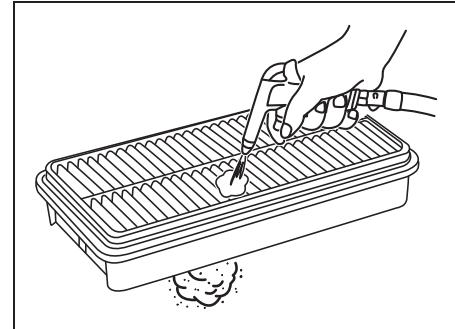

59RN06050

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Drive with an Appropriate Gear for Vehicle Speed

Running the vehicle at a high engine rotation speed by using a low-speed gear will result in poor fuel economy. Use the correct gear according to the vehicle speed.

Precaution for Handling Vehicle

Do not Apply Strong Force to Exterior Parts

NOTICE

Do not apply strong force to the body panel, front and rear bumper, side sill splash guards, etc. These forces can cause damage to these exterior parts.

Be Careful of Uneven Road Surface

NOTICE

In the following cases, the bumper or the lower part of the vehicle could get damaged. Ensure proper care.

- Entering the areas where there is uneven road surface, such as road shoulder
- Driving on roads with grooves, bumps or potholes

Do not Modify Your Vehicle Illegally



69RHS184

! WARNING

(Continued)

- Do not use wheels or wheel nuts other than specified Maruti Suzuki genuine products. Doing so could lead to accidents, such as nuts loosening and the wheel coming off while driving. Also, fuel consumption and driving stability could worsen, or it could result in other malfunctions.

NOTICE

- When installing or removing electrical equipment such as radio equipment, navigation, audio equipment or electronic toll control equipment, consult with a Maruti Suzuki authorized workshop. Also, do not operate electrical equipment directly from the battery terminals or connect ground wires directly. Otherwise, there is a danger of hindering the functioning of electronic components, causing fire, malfunction, battery runout, etc.

(Continued)

! WARNING

- If you modify your vehicle illegally, there is a danger of a fire or an accident. Illegal modifications might adversely affect handling, performance or durability. Also, this could even violate laws and ordinances.
Do not install unsuitable parts to your vehicle or do not make your own adjustments or wiring.

(Continued)

ADVICE FOR YOUR DRIVING

NOTICE
(Continued) <ul style="list-style-type: none">• Only a troubleshooting device designed for inspection and maintenance for this model can be connected to the vehicle's onboard diagnostics system. Connecting a device other than that specified could hinder the functioning of electronic components and cause battery runout, etc.

When Installing, Removing and Repairing Parts

WARNING

The SRS airbag system and the seat belt pretensioner system could activate unexpectedly or could be rendered ineffective if the parts that affect their functions are adjusted or arranged. In the following cases, these systems will be adversely affected. Consult with a Maruti Suzuki authorized workshop beforehand.

- When removing the steering wheel and conducting repairs around the steering wheel, etc.
- When conducting repairs around the center console, around the instrument cluster, under the front seats or to electrical wiring
- When installing audio equipment, etc.
- When conducting sheet metal painting or repairs around the dashboard
- When replacing the front seats or conducting repairs around the seats
- Repairs around the front pillar, the back pillar or the roof side
- When conducting repairs around the center pillar

Be Careful When Placing Accessories



69RHS185

WARNING

Do not attach accessories to the window glasses. Accessories and suction cups could hinder vision, or a suction cup could act as a lens and cause a fire. Also, if an airbag is activated, such accessories could be ejected outward within the vehicle, possibly resulting in injury.

When Spilling Drinks or Liquids

⚠ WARNING

Do not allow liquids to spill, splash or spray inside the vehicle. The following items could malfunction, or fire could result. In the case of spilling drinks, etc., promptly consult with a Maruti Suzuki authorized workshop.

- SRS airbag system
- Audio equipment
- Electrical parts such as switches and wiring
- Movable parts such as the gearshift lever or seat belt buckles

NOTICE


The sensor of the seat belt reminder is built into the front passenger's seat cushion.

If you spill liquid such as soft drinks or juice, the sensor of the seat belt reminder may be damaged.

If you spill any liquid on the seat cushion, immediately wipe it with a soft cloth.

When Replacing Engine Oil

Replace engine oil regularly

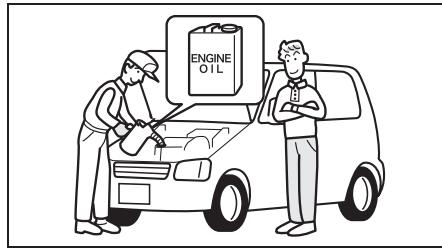

54M3143

- If the vehicle is normally used, replace the engine oil and filter every 15,000 km or every 12 months, whichever is earlier.
- When the vehicle is used under severe driving conditions, the engine oil and filter replacement is required earlier than the case that the vehicle is normally used.

NOTICE

Observe the periods designed for the engine oil and filter replacement. Degraded oil or clogged filters can cause engine malfunction or abnormal noise. For replacement, consult with a Maruti Suzuki authorized workshop.

Specification and viscosity of engine oil

As performance factors such as fuel consumption depend on the engine oil used, use oil that satisfies the specifications in the following Table 1 and Table 2. Using Maruti Suzuki genuine oil is recommended.

Table 1

Specification		Oil quality
API(*1)	ILSAC(*2)	
SP	GF-6	
SN	—	
SM	—	
SL	—	




Table 2

For India

Specification	All vehicles
Viscosity: SAE(*3)	0W-16

ADVICE FOR YOUR DRIVING

Except for India

Specification	All vehicles
Viscosity: SAE(*3)	0W-16, 0W-20, 5W-30, 10W-30, 10W-40, 15W-40, 20W-40

- *1: The API standard is determined by the American Petroleum Institute and represents the quality grade of engine oil.
- *2: The ILSAC standard is an engine oil standard for automobiles, established by the International Lubricant Specification Advisory Committee, and is based on the API standard while indicating even higher performance specifications such as for fuel conservation and durability.
- *3: SAE viscosity is a standard that determines the viscosity of lubricating oil. The number on the left side (the number with a "W") means the viscosity at low temperature. The smaller this figure is, the stronger the oil resistance to coldness is and the better the engine start capability is. The number on the right side means the viscosity at high temperature. The larger this figure is, the stronger the oil resistance to heat is and the better the engine protection performance is.


Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km of driving.
- Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.
- Do not tow a trailer during the first 960 km of vehicle operation.

Catalytic Converter

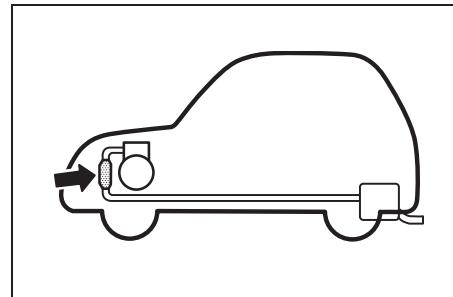

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.



59RN06060


⚠ WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

ADVICE FOR YOUR DRIVING

MEMO

OTHER CONTROLS AND EQUIPMENT

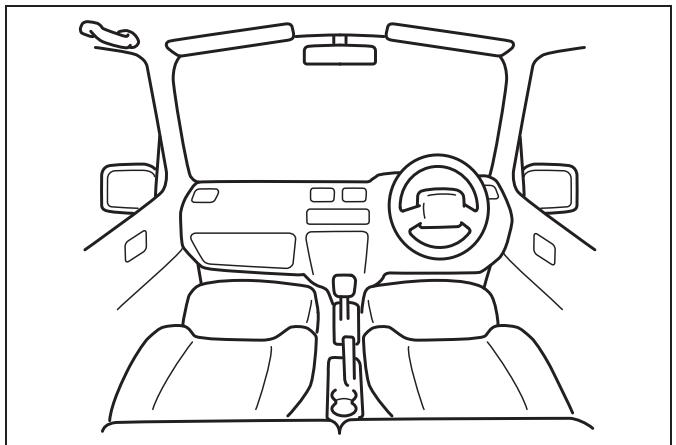

60G407

7

Fuel Filler Opening	7-1
Refueling	7-2
Hood	7-4
Sun Visor	7-6
Interior Light	7-7
Accessory Socket	7-9
Drink Holder	7-10
Storage Area	7-12
Assist Grips	7-13
Ride-in Assist Grip	7-13
Footrest (if equipped)	7-14
Door Pocket	7-14
USB Socket	7-15
Seatback Pocket	7-15
Frame Hooks	7-15
Heating and Air Conditioning System	7-17
Manual Heating and Air Conditioning System	7-19
Automatic Heating and Air Conditioning System (climate control)	7-25
Radio Antenna	7-32
Installation of Radio Frequency Transmitters	7-32
Audio Function	7-33
Remote Audio Controls (if equipped)	7-33

OTHER CONTROLS AND EQUIPMENT


Fuel Filler Opening

Make sure to read "Refueling" in this section.

WARNING


Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.

- Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

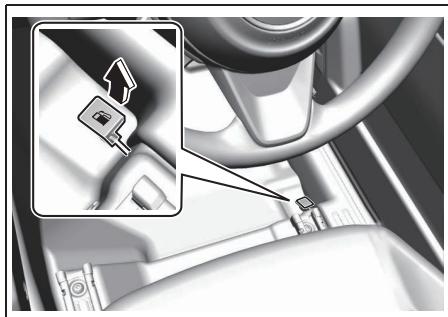

80T070010

Fuel Filler Cap

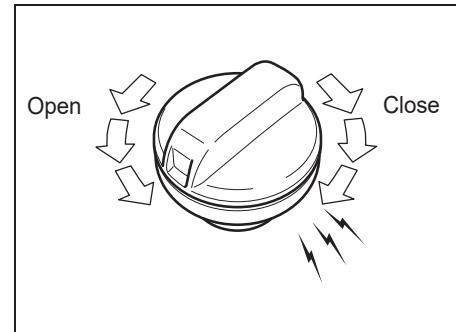


57L51093

- To open the fuel filler cap, turn it counter-clockwise.
- To close the fuel filler cap, turn it clockwise until you hear more than 2 clicks.

Fuel Filler Door



80T070270

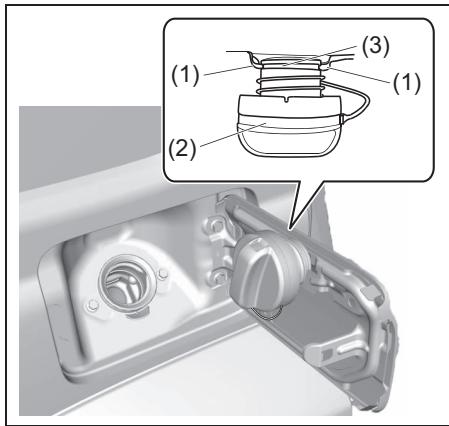

80T070410

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

- ⚠ WARNING**
- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
 - If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
 - If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, close the fuel filler cap until you hear more than 2 clicks.
 - If you use the fuel cap other than a genuine Maruti Suzuki cap, it may cause fuel leakage. Do not use the fuel cap other than a genuine Maruti Suzuki cap.

Refueling**Watch Out for Fire**

69RHS186

⚠ WARNING

Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.

- Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

OTHER CONTROLS AND EQUIPMENT

When Refueling at a Self-service Gas Station

⚠ WARNING

When refueling at a self-service gas station, be sure to observe the following points.

- If substantial static electricity is accumulated within your body, a spark could ignite fuel vapors and possibly cause burns. Before opening the fuel filler cap, discharge any static electricity* that might have accumulated in your body, by touching a metal part of the vehicle body or the gas pump machine. In addition, do not re-enter the vehicle while refueling, as static electricity could be charged to your body again.
- Do not allow others who have not discharged their static electricity to come close to the fuel filler opening.

*Take special care when air is dry, as this can cause your body to become charged with static electricity more easily. In addition, wearing layers of clothing can generate static electricity due to the friction of the fibers.

(Continued)

⚠ WARNING

(Continued)

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If you do not insert the fuel filler nozzle securely into the fuel filler opening, fuel may spill out. Insert the fuel filler nozzle securely into the fuel filler opening until it stops.
- Pull the gas pump filler nozzle lever until it stops.

(Continued)

⚠ WARNING

(Continued)



69RHS070

- If you continue to refuel after the automatic stop to top up the tank, fuel could overflow. When the automatic stop function of gas pump filler nozzle is activated, stop refueling.

*Depending on the type of gas pump machine being used, the automatic stop function could activate early and refueling might not be possible. Please follow the instructions of the employees at the gas station.

(Continued)

! WARNING

(Continued)

- If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, return the fuel filler nozzle to its original position and close the fuel filler cap until you hear more than 2 clicks.
- Fuel contains substances harmful to the human body. Do not breathe in vaporized fuel.
- In addition, be sure to observe all the warnings posted at the gas station.

Use Unleaded Gasoline Only

NOTICE


Using leaded gasoline, low-quality gasoline or other types of fuel (such as alcohol and diesel oil) can cause harmful effects to the engine and fuel delivery system.
Do not use fuel other than unleaded gasoline.

Hood

! WARNING

- As the hood is heavy, if a child tries to open or close it, the child may get injured. Do not allow a child to open or close the hood.
- As the engine compartment becomes hot, it may cause burns. When opening the hood, do not allow a child to come close to the hood.
- If you leave any tool or cloth in the engine compartment, it may cause a malfunction. Also, as the engine compartment becomes hot, it may result in vehicle fire. Do not leave any tool or cloth for inspection or cleaning in the engine compartment.

Opening the Hood

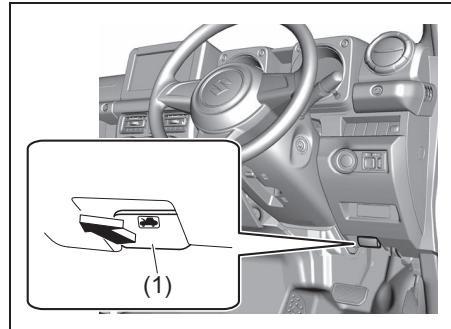


77R50040

- 1) Pull up the hood release lever (1) located under the driver's side instrument panel in the outboard position. This will disengage the hood lock half-way.

! CAUTION

If you come close to a running drive belt or a cooling fan (radiator fan), hands, hair, clothing, etc. may be caught and you may get injured. When the engine is running, keep away from the drive belt or the cooling fan (radiator fan).

OTHER CONTROLS AND EQUIPMENT

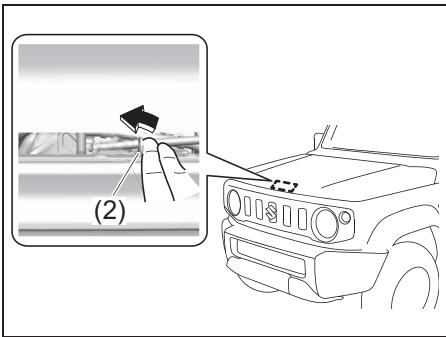


- 2) Push the under-hood release lever (2) sideways with your finger, as shown in the illustration. While pushing the lever, lift up the hood.

▲ CAUTION

The under-hood release lever can be hot enough to burn your finger while the engine is running or right after the engine stopped.

If you try to open the hood while the engine is running or right after the engine stopped, touch the under-hood release lever after it becomes cool enough.

NOTICE
If you lift up the hood with the wiper arms raised, the wiper arms and the hood may get damaged. Do not lift up the hood with the wiper arms raised.

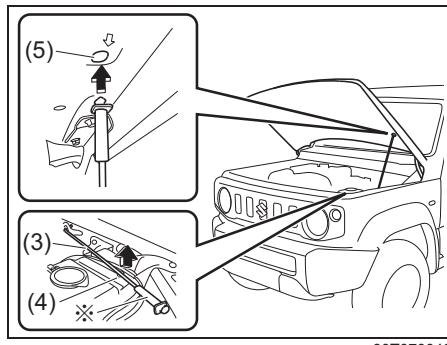


- 3) While holding the hood, pull the prop rod (3) out from the holding clip (4), and then insert the end of the rod into the designated hole (5).

▲ CAUTION

- The prop rod can be hot enough to burn your finger while the engine is running or right after the engine stopped. If you would like to use the prop rod while the engine is running or right after the engine stopped, touch the prop rod after it becomes cool enough.
- If the prop rod slips out, you may get caught in the closing hood. Insert the end of the prop rod into the hole securely.
- The prop rod may slip out when the hood is blown by wind. If this occurs, you may get caught in the closing hood. Be very careful when you open the hood on a windy day.

NOTE:

When you pull out the prop rod from the holding clip, hold the  part.

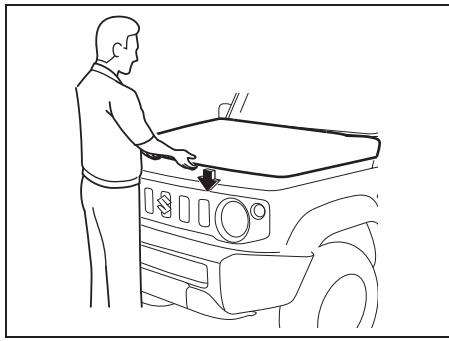Closing the Hood

- 1) Lift up the hood slightly and remove the prop rod from the hole. Put the prop rod back into the holding clip.
- 2) Lower the hood to about 20 cm above the hood latch, and then let it drop down. Check that the hood is securely latched after closing.

WARNING

If the hood is not fully closed, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident. Check that the hood is fully closed and latched before driving.


CAUTION

When closing the hood, the occupant's body such as hands may get caught in the hood and get injured. Also, pushing on the hood from the top may damage it.

When closing the hood, check that no part of the occupant's body such as hands is in the path of the hood.

NOTICE

Pushing on the hood from the top may damage it.

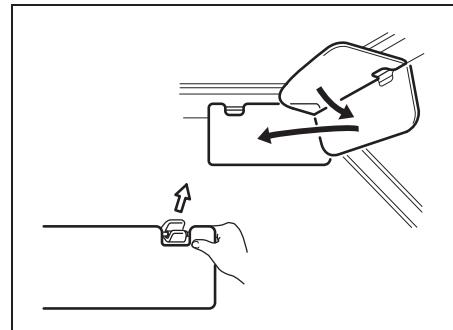Sun Visor


The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, handle it by the hard plastic parts or the sun visor can be damaged.

OTHER CONTROLS AND EQUIPMENT

Card Holder

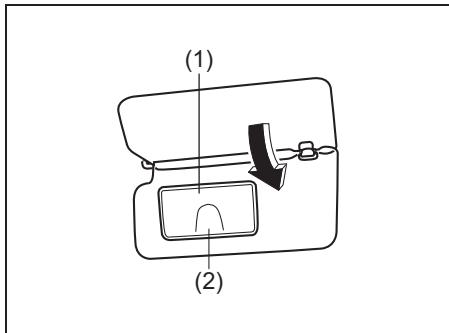


- (1) Mirror cover
(2) Card holder

You can put a card in the card holder (2) on the back of the sun visor.

NOTICE

If you park your vehicle outdoors in direct sunlight in hot weather, the inside of the vehicle will become hot. The heat may distort or crack a card. When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the card holder.

Vanity Mirror

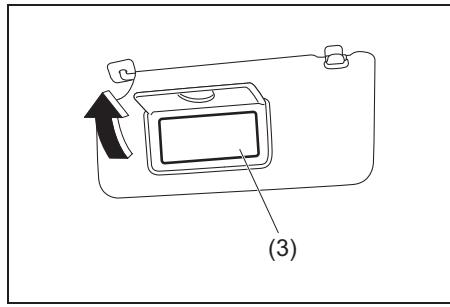

(3) Vanity mirror

To use the vanity mirror (3) on the back of the sun visor, pull up the mirror cover (1).

WARNING


- If you use the vanity mirror while driving, you may lose control of the vehicle, resulting in an accident. Do not use the vanity mirror while driving.
- Do not place any object on the location where an airbag is stored or come close to the location where airbag is stored, when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of airbag.

Interior Light

NOTICE

If you turn on the interior light for a long time with the engine stopped, the lead-acid battery may discharge. Do not turn on the interior light for a long time with the engine stopped.

Front

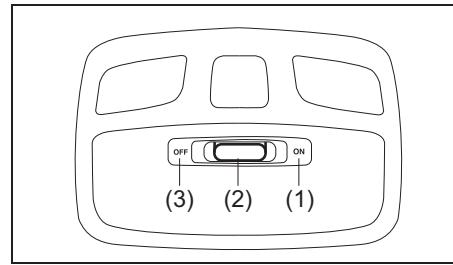

This light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position or the ignition mode is LOCK (OFF).
- The hazard warning lights, the position lights and the headlights are off.
- 15 minutes passed after the light is turned on.

DOOR (2)

The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you insert the key, or press the engine switch to change the ignition mode to ACC or ON during this time, the light will start to fade out immediately. After removing the key from the ignition switch or press the engine switch to change the ignition mode to LOCK (OFF), the light will turn on for about 15 seconds and then fade out.


NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position or the ignition mode is LOCK (OFF).
- About 15 minutes passed after the light is turned on.

OFF (3)

The light remains off even when the door is opened.

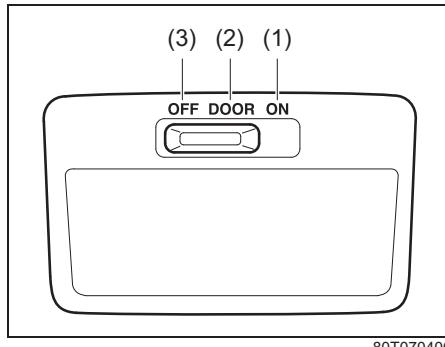Center

This light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

If your vehicle is equipped with the keyless push start system or the keyless entry system, the light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in the "LOCK" position, or the ignition mode is LOCK (OFF).

- The hazard warning lights, the position lights and the headlights are off.
- After 15 minutes of the light on.

DOOR (2)


- The light comes on when the door is opened. After closing all doors, the light will remain on for 15 seconds and then fade out. If you insert the key, or press the engine switch to change the ignition mode to ACC or ON during this time, the light will start to fade out immediately. After removing the key from the ignition switch or press the engine switch to change the ignition mode to "LOCK" (OFF), the light will turn on for 15 seconds and then fade out.
- When the ignition switch is in LOCK position, or the ignition mode is LOCK (OFF), to prevent the lead-acid battery from discharging, the light will automatically be turned off when a period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

OFF (3)

The light remains off even when the door is opened.


OTHER CONTROLS AND EQUIPMENT

Luggage Compartment Light

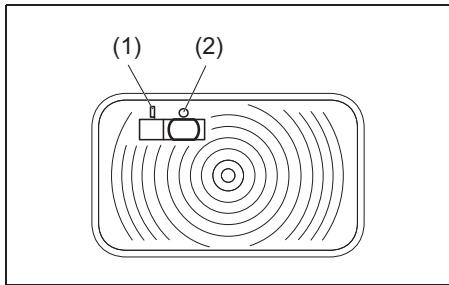

When you open the tailgate with the luggage compartment light switch in the "ON" position (1), the light comes on for about 15 minutes.

When the luggage compartment light switch is in the "OFF" position (2), the light remains off regardless of whether the tailgate is open or close.

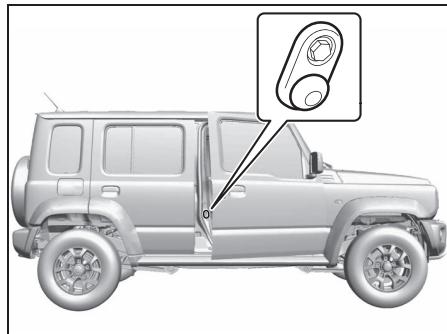


NOTE:


The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber protrusion) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber protrusion.

Accessory Socket

Center Console

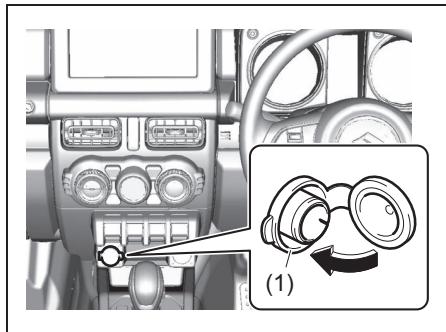

Luggage Compartment

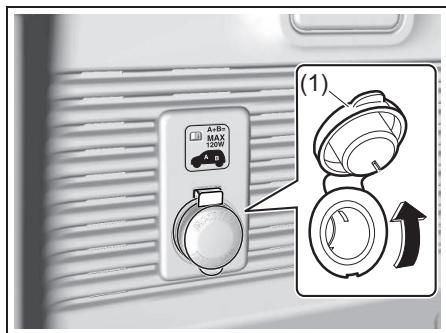

The accessory socket will work when the ignition switch is in "ACC" or "ON" position or the engine switch is in ACC or ON mode.

This socket can be used to provide 12 volt/120 watt/10 ampere power for electrical accessories. Check that the rubber cap remains on the socket when the socket is not in use.

When using the accessory socket, open the rubber cap (1).

⚠ WARNING

When the accessory socket is not in use, closed the rubber cap. If any foreign material enters the accessory socket, it may cause a malfunction or short circuit.

NOTICE

- To prevent the fuse from being blown, when using sockets at the same time, do not exceed the total combined power capacity of 12 volt/120 watt/10 ampere.
- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Check that any electrical accessories you use are designed to plug into this type of socket.

(Continued)

NOTICE


(Continued)

- Check that the cap remains on the socket when the socket is not in use.
- When the ignition switch is in "LOCK" position or the ignition mode to LOCK (OFF) during using the accessory socket, the following accidents may occur;
 - the audio or navigation system does not turn off.
 - the keyless entry system does not work, etc.

If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.

If the problem persists, ask your Maruti Suzuki authorized workshop for inspection.

Drink Holder

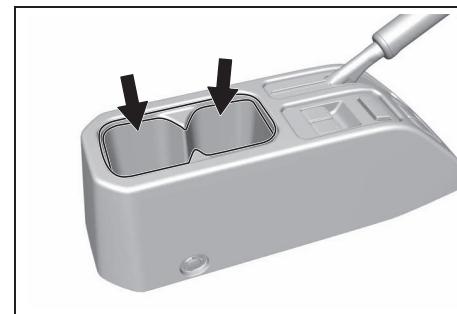

80T070260

Use the drink holder to put a cup with a lid or a bottle with a cap. Also, you can put small articles in the drink holder.

OTHER CONTROLS AND EQUIPMENT

WARNING


Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful when you are using the cup holders to hold a cup containing hot liquid. Spilling out hot liquid can cause burn injury.
- Do not use the cup holders to hold sharp-edged, hard or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.
- If you spill, or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- *If you place the keyless remote controller in a drink holder or a bottle holder, it may not be detected.*
- *If you spill or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorized workshop.*

Storage Area

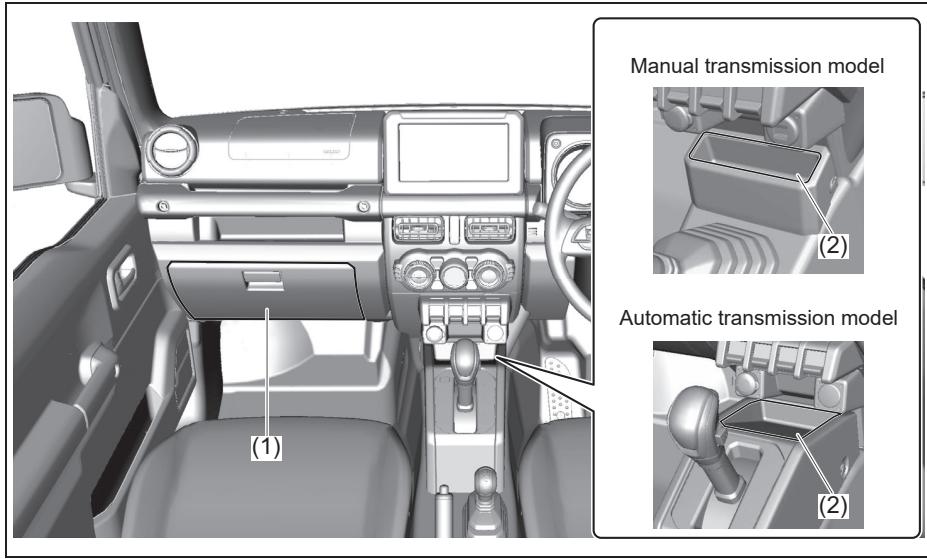

80T070080

- (1) Glove box
- (2) Floor console tray

Each item in the figure is a typical example; the actual equipment depends on the vehicle type.

⚠ WARNING

- If any object gets caught in the brake pedal or the accelerator pedal, you may not operate the pedal properly, resulting in an accident. If you use a storage area without a lid, do not place the object which may fall out while driving.
- If there is any object within the area where the front passenger's airbag could inflate, the object may be thrown out or the front passenger's airbag may not inflate properly. Do not place a big object on the instrument panel tray.

⚠ CAUTION

If you use a storage area with a lid, do not drive the vehicle with the lid open. In acceleration, a sudden braking or an collision, your body may be hit by the lid or the object which falls out from the storage area.


NOTE:

If you place the keyless remote controller in any of storage areas, it may not be detected.

OTHER CONTROLS AND EQUIPMENT

Using Storage Area with a Lid

Glove box

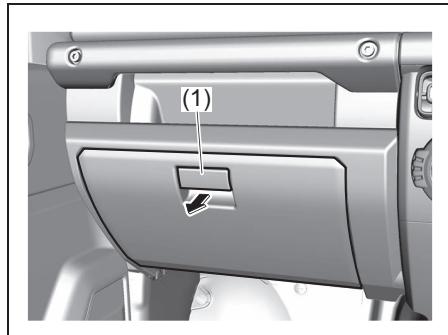


80T070090

- To open the glove box, pull the latch lever (1).
- To close it, push the lid until it is latched securely.

WARNING

- Never drive with the glove box lid open. It could cause injury if an accident occurs.
- Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.

Assist Grips

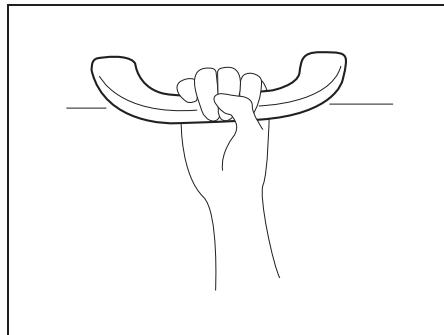

80T070110

Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Ride-in Assist Grip




77R50220

Ride-in assist grip (1) provides solid support for the front passenger when entering or exiting the vehicle.

WARNING

- Do not put any objects between the passenger side of the dashboard and the ride-in assist grip. When the passenger's airbag is inflated, objects may be flown toward the passenger and may cause serious injury.
- Front passenger should not grip the ride-in assist grip while seating. In this situation, the passenger would be too close to the inflating airbag, and may suffer severe injury.


Footrest (if equipped)

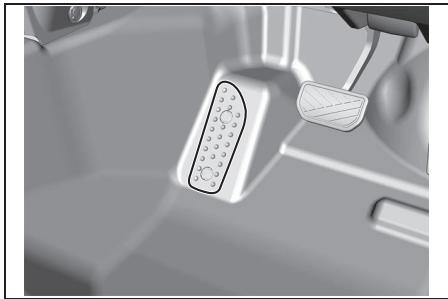

77R50160

Use the footrest as a support for your left foot only.

Door Pocket

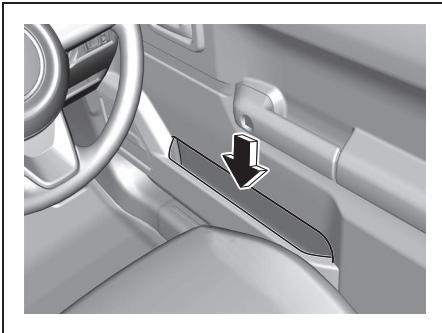

80T070130

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

⚠ CAUTION


- If an accident occurs, objects such as bottles, cans, etc. in the door pocket can injure the occupants. Do not put hard or breakable objects in the door pocket.
- If you grab and pull the door pocket, it may be broken, resulting in personal injury. When closing a door, do not grab and pull the door pocket.

NOTE:

If you place the keyless remote controller in a door pocket, it may not be detected.

OTHER CONTROLS AND EQUIPMENT

USB Socket

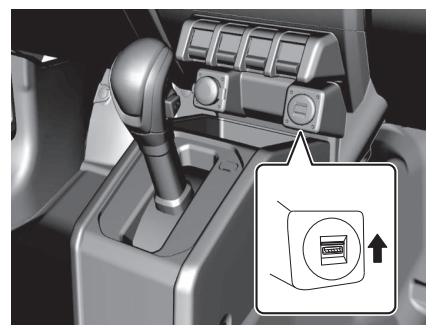


Open the cover, and then connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to the supplementary manual for details.

⚠ WARNING

If foreign material enters the USB socket, a malfunction or a short circuit may occur.
Always close the cover when the USB socket is not in use.

Seatback Pocket

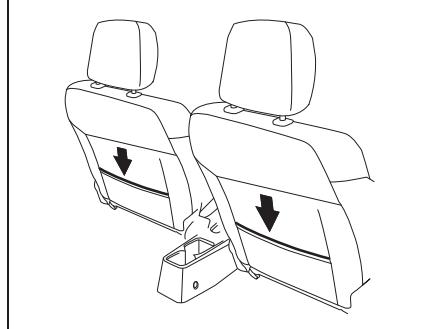

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

⚠ CAUTION

- If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat. Do not put hard or breakable objects in the pocket.
- If you put sharp or heavy objects in the pocket, the seat may be damaged. Do not put sharp or heavy objects in the pocket.

Frame Hooks

It is not recommended that you use the frame hooks for towing another vehicle. They were originally designed to tow your vehicle in emergency situation.


If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in "EMERGENCY SERVICE" section.

⚠ WARNING


Observe the following instructions when using frame hooks. The frame hook or vehicle body may break and cause serious injury or damage:

- Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the frame hook.

In such case, we recommend that you contact a professional service.

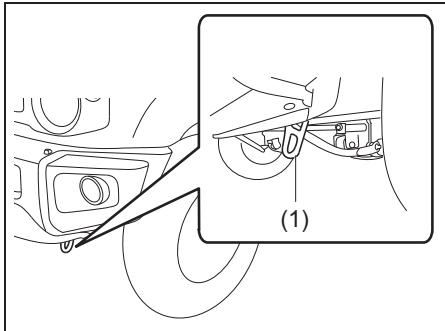Front


78RB05023

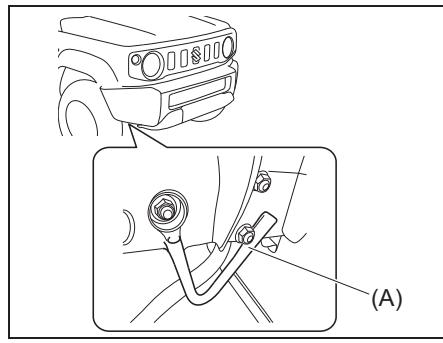

78RB05054

NOTICE

When you use the frame hook (1), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, or the vehicle body. Do not sudden accelerate.

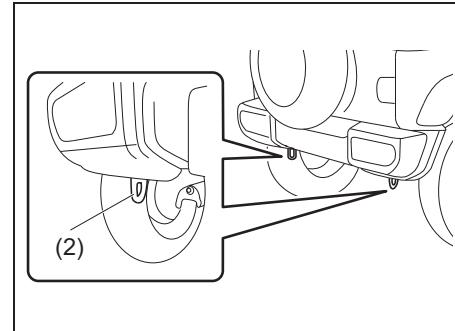Rear

78RB05024

NOTICE

Do not use the hook (A) in emergency situation. If you use this hook (A), the hook or the vehicle may be damaged.

NOTICE

When you use the frame hook (2), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, the vehicle body or the drive system.

- Do not sudden accelerate.
- Do not tow the vehicle heavier than your vehicle.


OTHER CONTROLS AND EQUIPMENT

Heating and Air Conditioning System

There are two types of heating and air conditioning systems as follows:

- Manual heating and air conditioning system
- Automatic heating and air conditioning system (climate control)


Air Outlet

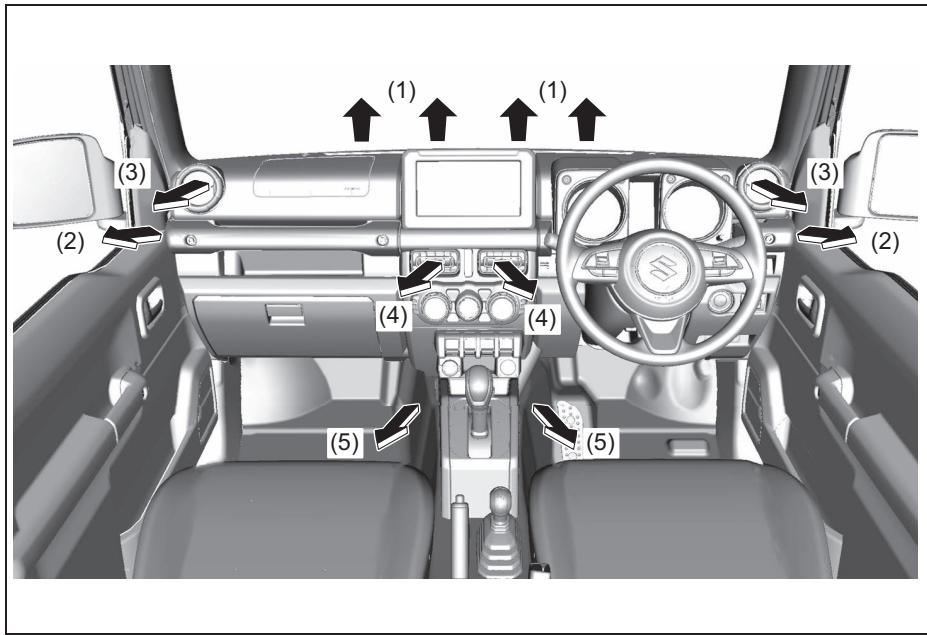

80T070150

- (1) Windshield defroster outlet
- (2) Side defroster outlet
- (3) Side outlet
- (4) Center outlet
- (5) Floor outlet


Center outlet

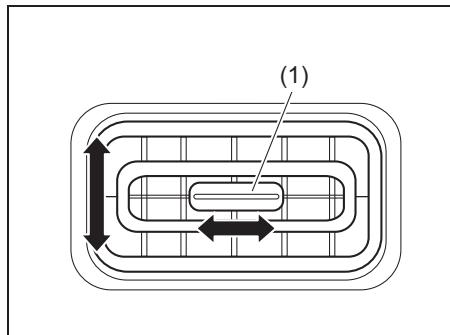

78RB05027

Move the knob (1) vertically or horizontally, to adjust the direction of airflow as desired.

Side outlet

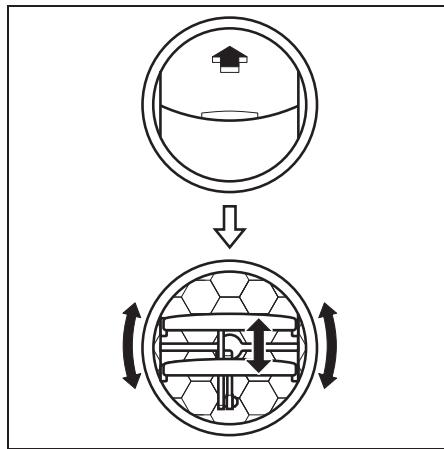

78RB05026

When open, air comes out regardless of the air flow selector position.


CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

OTHER CONTROLS AND EQUIPMENT

Manual Heating and Air Conditioning System

Description of Controls

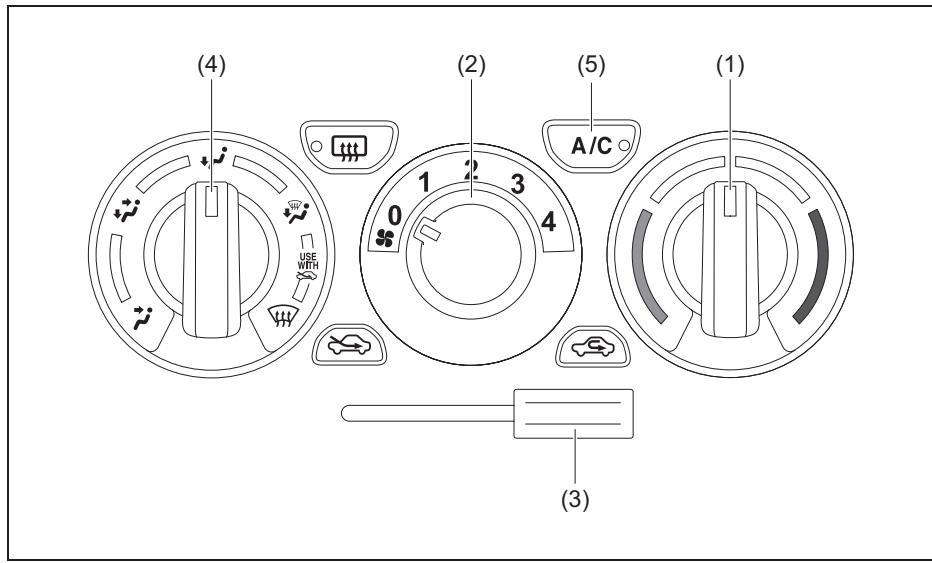

80T070390

- (1) Temperature selector
- (2) Blower speed selector
- (3) Air intake selector
- (4) Air flow selector
- (5) Air conditioning switch


Temperature selector (1)

This is used to adjust the temperature.

Blower speed selector (2)

This is used to turn on the blower and to select blower speed.

Air intake selector (3)

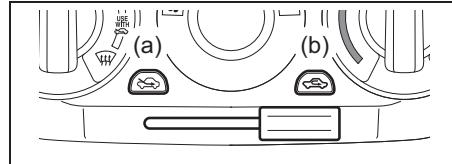

78RM50020

This selector is used to select the following modes.

FRESH AIR (a)

When this mode is selected by moving the lever to the position of (a) in the above illustration, outside air comes in.


RECIRCULATED AIR (b)

When this mode is selected by moving the lever to the position of (b) in the above illustration, inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down or warm up the interior or to reduce unwanted odor from entering the vehicle.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated.

Therefore, you should occasionally select FRESH AIR.

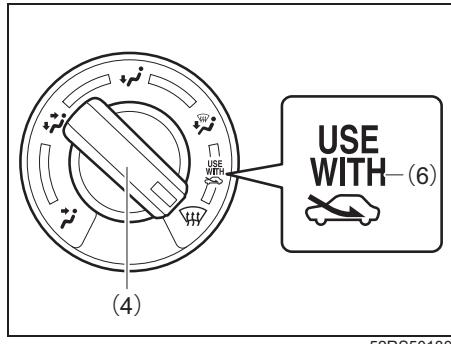


NOTE:

The mark of "USE WITH" (6)


To clear fog on the windshield and/or the side windows quickly, set the air flow selector (4) to "HEAT & DEFROST" or "DEFROST" and air intake selector (3) to "FRESH AIR". These positioning will clear the fogged windshield and/or the side windows faster than the "RECIRCULATED AIR".

Air flow selector (4)

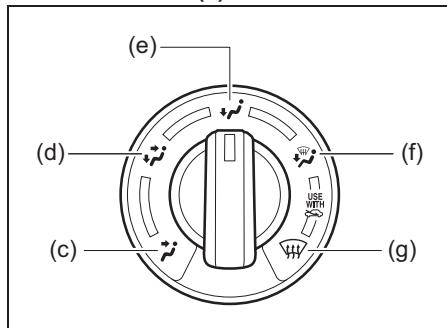

This is used to select one of the following functions.

VENTILATION (c)

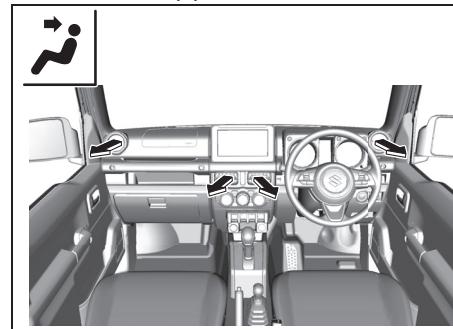


80T070160

Temperature-controlled air comes out of the center and side air outlets.

OTHER CONTROLS AND EQUIPMENT


BI-LEVEL (d)

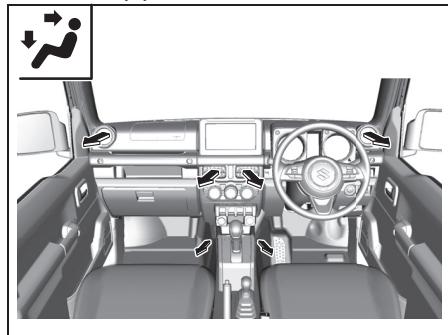

80T070170

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.


HEAT (e)

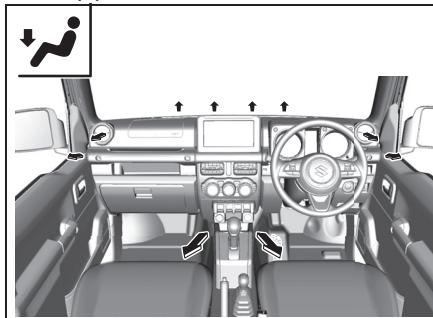

80T070180


Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

HEAT & DEFROST (f)

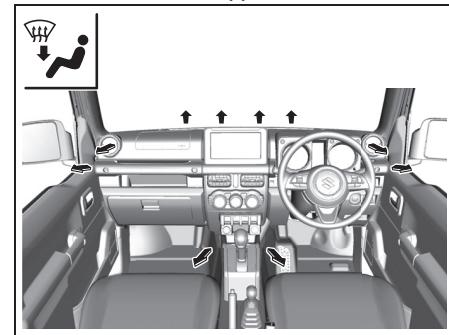

80T070190

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

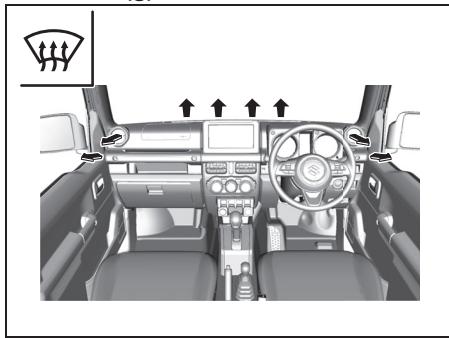DEFROST (g)

80T070200

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is working. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System Operating Instructions**Natural ventilation**

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The base settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)

The base settings are the same as for normal heating except you select RECIRCULATED AIR. If you use this heating method for an extended period of time, the air in the vehicle may become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

OTHER CONTROLS AND EQUIPMENT

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The base settings are the same as for normal cooling except you select RECIRCULATED AIR and the highest blower speed.

NOTE:

- If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible.


- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

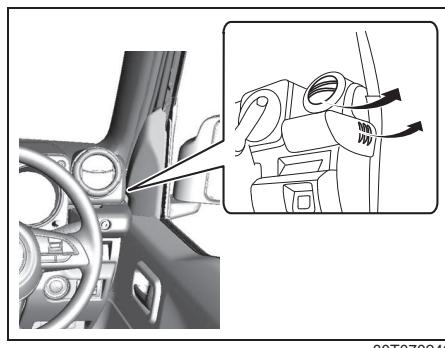

NOTE:

If you need maximum defrosting:

- select DEFROST and FRESH AIR,
- set the blower speed selector to high,
- adjust the temperature selector to the hot end,
- turn on "A/C" switch, and
- adjust the side outlets so the air blows on the side windows.

Models with ENG A-STOP System

- If the cooling and heating performance can no longer perform at a sufficient level due to automatically stopping engine, press the ENG A-STOP OFF switch to deactivate the ENG A-STOP system. (The engine will automatically restart and the air conditioning performance will be restored.)
- If the windshield and/or the driver's side/ passenger side door windows are fogged during the automatic engine stop, stop the ENG A-STOP system and restart the engine. Then, turn the air flow selector (4) to change the air flow to the HEAT & DEFROST or DEFROST position to defog the windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section.

(For models with air conditioner refrigerant R-134a)

NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.


NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

OTHER CONTROLS AND EQUIPMENT

Automatic Heating and Air Conditioning System (climate control)


Description of Controls

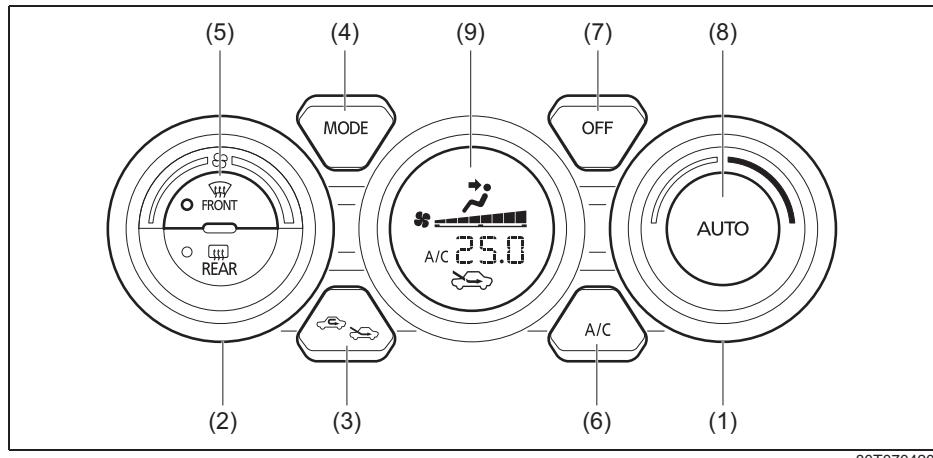

80T070420

- (1) Temperature selector
- (2) Blower speed selector
- (3) Air intake selector
- (4) Air flow selector
- (5) Defrost switch
- (6) Air conditioning switch
- (7) "OFF" switch
- (8) "AUTO" switch
- (9) Display

Temperature selector (1)

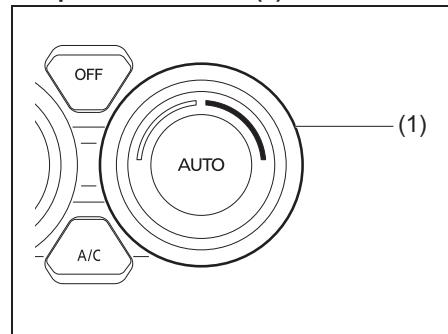

78RB05037


Turn the temperature selector (1) to adjust the temperature.

NOTE:

If you turn the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling. The temperature of the air from the outlets may change suddenly while "LO" or "HI" is displayed, but this is normal.

NOTE:


When you change the unit of temperature in the information display, the unit of temperature in the air conditioning system will be changed. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details.

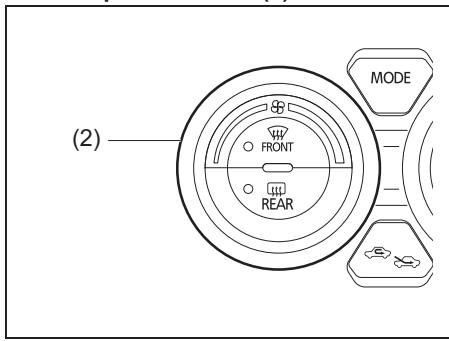Blower speed selector (2)

78RB05038

The blower speed selector (2) is used to turn on the blower and to select blower speed.

If "AUTO" switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

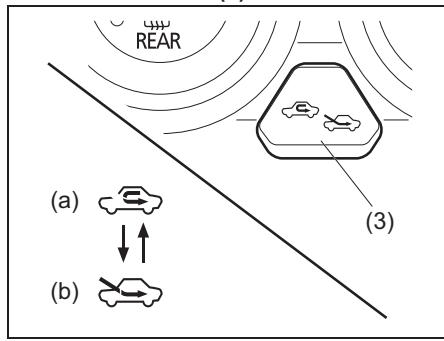Air intake selector (3)

78RB05039

Push the air intake selector (3) to change between the recirculated air and fresh air mode.

If "AUTO" switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

NOTE:

When the recirculated air mode is selected, the automatic operation system is deactivated even if you push "AUTO" switch (8).

RECIRCULATED AIR (a)

When this mode is selected, inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as a tunnel, or when attempting to quickly cool down or warm up the interior or to reduce unwanted odor from entering the vehicle.

FRESH AIR (b)

When this mode is selected, outside air is introduced.

FRESH AIR and RECIRCULATED AIR are selected alternately each time the air intake selector is pushed.


NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated.

Therefore, you should occasionally select FRESH AIR.

OTHER CONTROLS AND EQUIPMENT

Air flow selector (4)

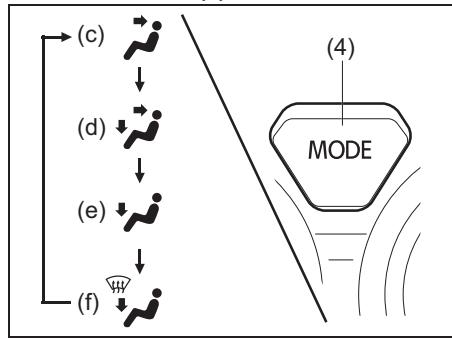


78RB05040

Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears in the display.

If "AUTO" switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.


VENTILATION (c)

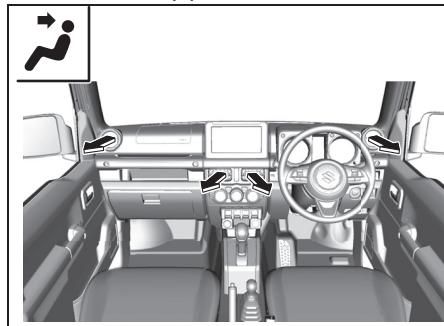

80T070160

Temperature-controlled air comes out of the center and side outlets.


BI-LEVEL (d)

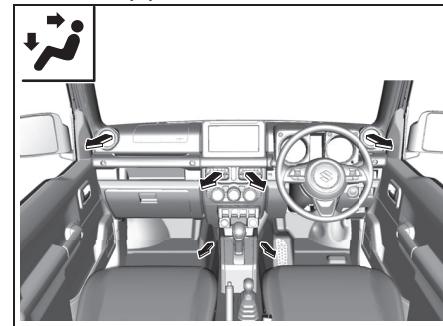

80T070170


Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

HEAT (e)

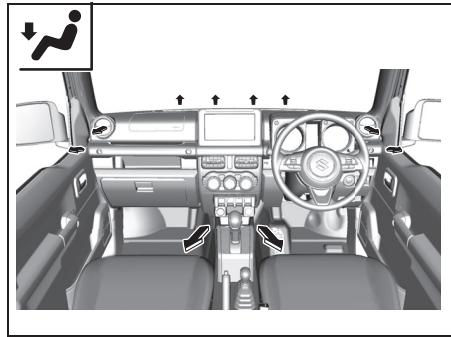


80T070180

HEAT & DEFROST (f)

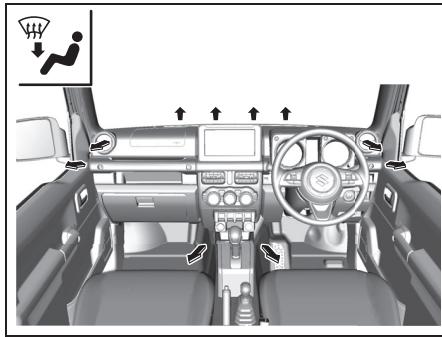

80T070190

Defrost switch (5)

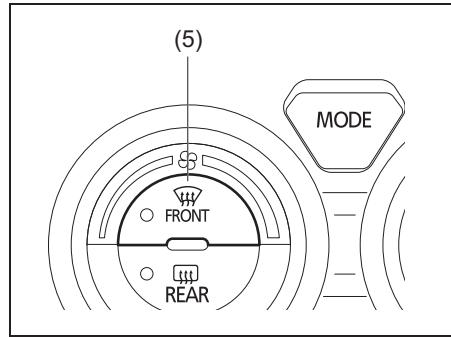

78RB05045


Temperature-controlled air comes out of the floor outlets and the side outlets, a small amount of air comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

Push the defrost switch (5) to turn on the defroster.

OTHER CONTROLS AND EQUIPMENT

DEFROST

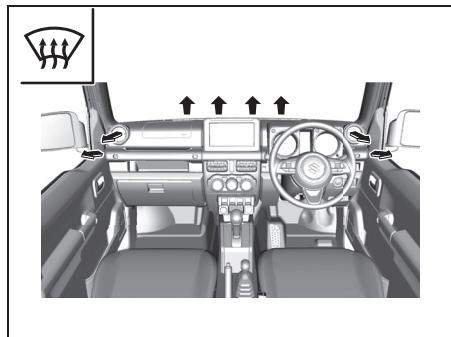


80T070200

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

NOTE:

When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will operate and FRESH AIR mode will be selected automatically. In very cold weather, however, the air conditioning system will not operate.

Air conditioning switch (6)

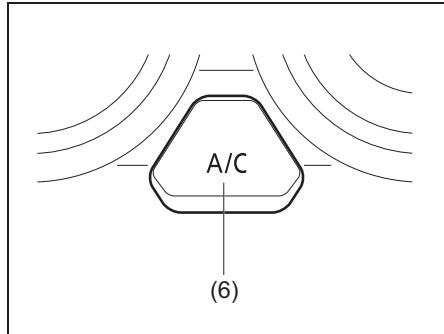


78RB05047

The air conditioning switch (6) is used to turn on and off the air conditioning system only when the blower is on. To turn on the air conditioning system, push in the switch and "A/C" will appear in the display. To turn off the air conditioning system, push in the switch again and "A/C" will go off.

System Operating Instructions

Automatic operation

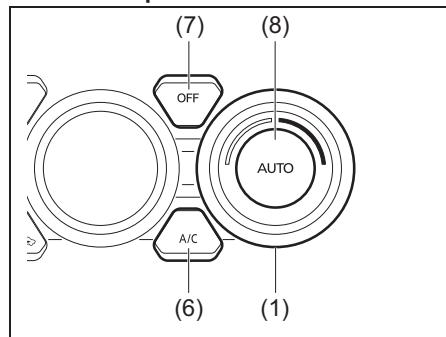

78RB05048

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below.

- 1) Start the engine.
- 2) Push "AUTO" switch (8).
- 3) Set the desired temperature by turning the temperature selector (1).

The blower speed, air intake and air flow are controlled automatically to maintain the set temperature. However, the air flow is not changed to DEFROST position automatically.

NOTE:

When the recirculated air mode is selected, the automatic operation system is deactivated even if you push "AUTO" switch (8).

You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

To turn the climate control system off, push "OFF" switch (7).

NOTE:


If "AUTO" in the display blinks, there is a problem in the heating system and/or air conditioning system. You should have the system inspected by a Maruti Suzuki authorized workshop.

NOTE:


- To find the temperature at which you are most comfortable, start with the 22°C (72°F) or 25°C (75°F) setting. (the temperature vary depending on vehicle specifications.).
- If you turn the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling and the blower will run at full speed.
- To avoid blowing cold air in cold weather or hot air in hot weather, the system will delay turning on the blower until warmed or cooled air is available.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.
- Even under the automatic operation, you can set individual selectors to the manual

mode. The manually selected functions are maintained, and the other functions remain under automatic operation.

- If the windshield and/or the front door windows are fogged, push the defrost switch (5) to turn on the defroster, or push the air flow selector (4) to change the air flow to HEAT & DEFROST position to defog the windows.
- To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push "AUTO" switch (8).

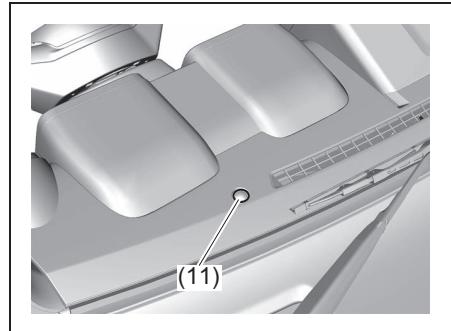

80T070220

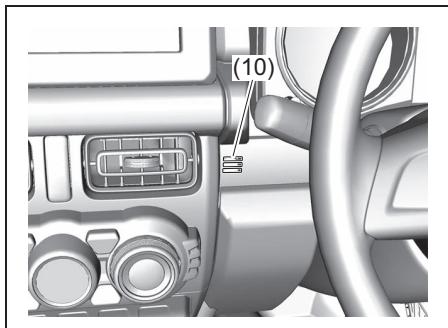


80T070210

Be careful not to cover the interior temperature sensor (10) located between the steering wheel and the climate control panel, or the solar sensor (11) located at the top of the passenger's side dashboard. These sensors are used by the automatic system to regulate temperature.

OTHER CONTROLS AND EQUIPMENT

Manual operation

You can manually control the climate control system. Set the selectors to the desired positions.

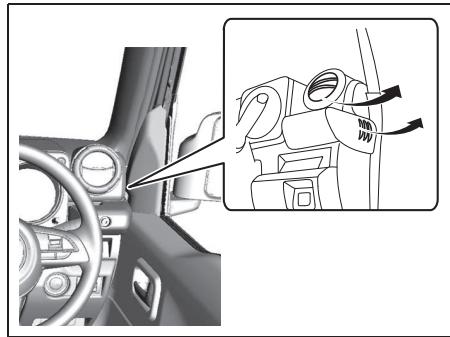

80T070240

NOTE:

If you need maximum defrosting:

- push the defrost switch (5) to turn on the defroster (the air conditioning system will operate and FRESH AIR mode will be selected automatically),
- set the blower speed selector to high,
- adjust the temperature selector to "HI" indication on the display, and
- adjust the side outlets so the air blows on the side windows.

Models with ENG A-STOP system

If the cooling and heating performance is insufficient when the engine is stopped automatically, push the ENG A-STOP OFF switch to deactivate the ENG A-STOP system. (The engine is restarted automatically, and the cooling and heating performance is restored.)

- If the windshield and/or front door windows are fogged, push the defrost switch. (When the defrost switch is pushed, the engine is restarted automatically and the defroster is turned on.)

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section. Have this job done by a Maruti Suzuki authorized workshop as the lower glove box must be lowered for this job.

(For models with air conditioner refrigerant R-134a)

NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE


Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

How to Use Air Conditioning System Effectively

Parking under the blazing sun

After parking for a long time under the blazing sun, the interior temperature can become very high. Use the air conditioning system, with the windows or doors opened to ventilate the interior.

Radio Antenna Removal and Installation

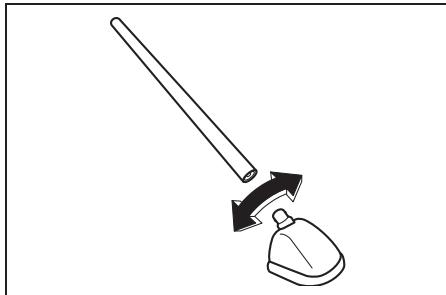

63J055

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.
- Remove the antenna when parking your vehicle for a long time on a snowy day.

Installation of Radio Frequency Transmitters

We recommend that you always ask an authorized Maruti Suzuki workshop about frequency band, max output power, antenna position of vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

OTHER CONTROLS AND EQUIPMENT

Audio Function

When Using Audio System with Appropriate Volume not to Disturb Safe Driving

- When playing music or other audio, if a mobile phone is used inside or nearby the vehicle, noise may be heard from the speakers. This does not indicate a malfunction.
- Navigation and audio equipment may not function properly if they are interfered with unauthorized radio waves.
- For further information about the features of the navigation or audio equipment, refer to the instruction manuals.

WARNING

If you operate the navigation or audio equipment, you may be distracted by them, resulting in an accident.
Do not operate the navigation or audio equipment while driving.

NOTICE

While the engine is stopped, using the navigation or audio equipment for a long period of time may cause the lead-acid battery to run out.
Do not use the navigation or audio equipment for a long period of time while the engine is stopped.

NOTE:


Due to poor quality of FM/AM signal, some disturbance/noise may be heard from speakers. It is recommended to switch off the tuner system to prevent the said disturbance/noise in the speaker.

Remote Audio Controls (if equipped)

Controlling basic functions of the audio system is available using the switches on the steering wheel.

The remote audio switches are available when the ignition switch is in "ACC" or "ON" position or engine switch is in ACC or ON mode.

- For operation of an audio system or a navigation system, refer to the supplementary manual, provided along with it.
- The operating procedure may be different depending on an audio system or a navigation system.

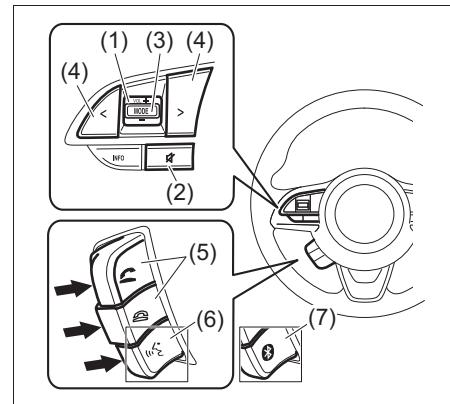

80TM07001

(1) Volume switch

(2) Mute switch

(3) "MODE" switch

(4) Select switch

(5) Hands-free switch

(6) Voice recognition switch (if equipped)

(7) Bluetooth® setup switch (if equipped)

NOTE:

To use the button (5), (6) or (7), press each button in the arrow direction as shown in the illustration.

Volume Switch (1)

You can adjust volume with this switch.

- To increase the volume, press “+” side.
- To decrease the volume, press “-” side.
- The volume will continue to increase or decrease until this switch is released.

Mute Switch (2)

To mute this sound, press the switch (2).

“MODE” Switch (3)

Every time you press this switch, the audio modes such as radio, etc. will be switched in order.

Depending on a navigation system or an audio systems, you can turn on the system by pressing this switch, even when the equipment itself is turned off.

Select Switch (4)

Every time you press this switch, you can select broadcast station or music according to your preference, along with the currently selected mode.

Hands-free Switch (5)

You can use this switch for the equipment which has the hands-free function. To use the function, you need to set up for the equipment. Refer to the supplementary manual for details.

Voice Recognition Switch (6)* (if equipped)

You can use this switch for the equipment which has the voice recognition function. To use the function, you need to set up for the equipment. Refer to the supplementary manual for details.

*: When using Apple CarPlay® or Android Auto™ on infotainment system

Apple CarPlay® may not be available in your country or region.

For details about Apple CarPlay, visit the following site:
<http://www.apple.com/ios/carplay>

Android Auto™ may not be available in your country or region.

For details about Android Auto, please refer to the Google support site:
<http://support.google.com/androidauto>

Bluetooth® Setup Switch (7) (if equipped)

To use the function, you need to set up for the equipment. Refer to the supplementary manual for details.



The Bluetooth® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.

Stop using this unit and a Bluetooth® ready device whenever requested.


This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

OTHER CONTROLS AND EQUIPMENT

MEMO

VEHICLE LOADING AND TOWING

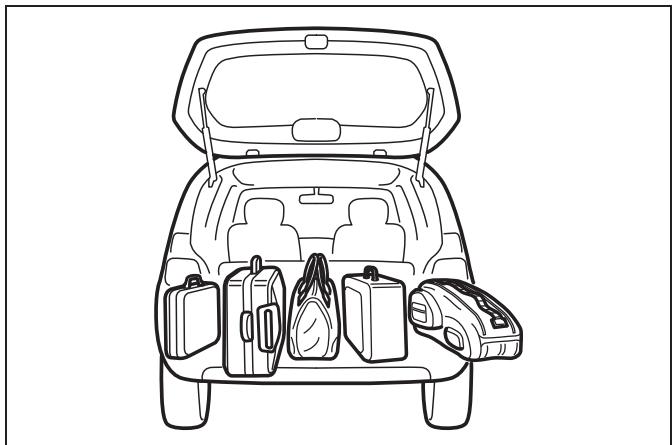

54G215

Vehicle Loading	8-1
Trailer Towing	8-1

VEHICLE LOADING AND TOWING

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

WARNING

- Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).
- Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer Towing

Your vehicle was originally designed to carry people and a normal amount of cargo. Do not tow a trailer.

NOTE:

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in "EMERGENCY SERVICE" section.

INSPECTION AND MAINTENANCE



60G410

9

Maintenance Schedule	9-2
Periodic Maintenance Schedule	9-2
Drive Belt	9-7
Engine Oil and Filter	9-7
Engine Coolant	9-11
Air Cleaner	9-13
Spark Plugs	9-13
Automatic Transmission Fluid	9-14
Gear Oil	9-16
Clutch	9-18
Brakes	9-19
Steering Wheel	9-22
Tyres	9-23
Battery	9-25
Fuses	9-28
Headlight Aiming	9-31
Bulb Replacement	9-32
Headlight Washer Fluid	9-41
Wiper Blades	9-41
Windshield Washer Fluid	9-45
Air Conditioning System	9-46
Preparation Before Winter Season	9-48



59RN05750

⚠ WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

- To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, check that the lead-acid battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been in LOCK (OFF) position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.
- Do not leave the engine running in garages or other confined areas.

(Continued)

⚠ WARNING

(Continued)

- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, check that the parking brake is set fully and the transmission is in Neutral (for manual transmission vehicles) or Park (for automatic transmission vehicles).
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.

(Continued)

⚠ WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorized workshop.

Periodic Maintenance Schedule

“C”: Clean

“R”: Replace or Change

“I”: Inspect, clean, adjust, lubricate or replace as necessary

“L”: Lubricate

“T”: Tighten to Specified Torque

“O”: Rotate

NOTE:

- *This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.*
- *For free inspection the cost of materials and consumables to be borne by customer.*

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.					FREE INSPECTION		PERIODIC MAINTENANCE AT COST							
		km (x1000)			1	5	10	20	30	40	50	60	70	80
		months			1	6	12	24	36	48	60	72	84	96
ENGINE														
1-1.	Water pump drive belt (Wear)				-	-	I	I	I	I	I	I	I	R
1-2.	Engine Coolant (Level, Leakage)	First time:		Replace at 1,00,000 km or 60 months whichever comes first										
		Second time and after:		Replace at 40,000 km or 24 months whichever comes first										
1-3.	Engine oil, engine oil filter and drain plug gasket (Level, Leakage)				I	I	R	R	R	R	R	R	R	R
1-4.	Cooling system hoses and connections (Leakage and Damage)				I	I	I	I	I	I	I	I	I	I
1-5.	Engine Mounting & manifold fixing (Loose, Damage)				-	-	I	-	I	-	I	-	I	-
1-6.	Valve Clearance				-	-	-	-	I	-	-	I	-	-
1-7.	Exhaust System (Noise, Leakage etc.)				-	I	-	I	-	I	-	I	-	I
1-8.	Positive Crank Case Ventilation System (Hoses, Connections and Valve)				-	I	-	I	-	I	-	I	-	I
IGNITION														
2-1.	Ignition wire (Damage, Deterioration)				-	-	-	I	-	I	-	I	-	I
2-2.	Spark Plug (Nickel Plug)				-	-	-	-	-	R	-	-	-	R
FUEL														
3-1.	Air cleaner filter element	Paved-road		Clean after every 5,000 km Replace after every 40,000 km										
		Dusty Condition		Clean after every 2,500 km or as required. Replace after every 40,000 km										
				Replace more frequently if dust condition is severe.										
3-2.	Fuel tank cap, fuel lines and connections (Leakage and Damage)				-	I	-	-	-	I	-	-	-	I
3-3.	Fuel Filter				Replace after every 1,00,000 km or 120 months whichever comes first									
3-4.	Fuel Tank				-	-	-	-	-	I	-	-	-	I
CLUTCH AND TRANSMISSION														
4-1.	Clutch fluid (Level, Leakage)				I	I	I	I	I	I	I	I	I	I
		Replace after every 40,000 km or 24 months whichever comes first												
4-2.	Clutch slipping (Dragging or Excess Damage)				I	I	I	I	I	I	I	I	I	I

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		km (x1000)	FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
			1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
4-3.	Manual Transmission Oil (Level, Leakage)		I	I	I	I	I	I	I	I	I	I
4-4.	Automatic Transmission Fluid (Level, Leakage)		Replace at 1,65,000 km or 11 years whichever comes first									
4-5.	Transfer Oil (4WD) (Level, Leakage)		I	I	I	I	I	I	I	I	I	I
			Replace after every 1,50,000 km or 120 months whichever comes first									
4-6.	Rear Differential Oil (4WD) (Level, Leakage)		I	I	I	I	I	I	I	I	I	I
			Replace after every 1,50,000 km or 120 months whichever comes first									
4-7.	Automatic Transmission cooling system hoses and pipe (Leakage and Damage)		I	I	I	I	I	I	I	I	I	I
4-8.	Gear shifter (Operation)		I	I	I	I	I	I	I	I	I	I
DRIVE SHAFT												
5-1.	Drive shaft noise		I	I	I	I	I	I	I	I	I	I
5-2.	Drive shaft boot / Propeller shafts (boot damage)		-	I	I	I	I	I	I	I	I	I
BRAKE												
6-1.	Brake Fluid (Level, Leakage)		I	I	I	I	I	I	I	I	I	I
			Replace after every 40,000 km or 24 months whichever comes first									
6-2.	Brake pedal (Pedal - floor carpet clearance)		I	I	I	I	I	I	I	I	I	I
6-3.	Parking brake lever and cable (Play, Damage)		I	I	I	I	I	I	I	I	I	I
6-4.	Brake disc and pad (Wear)		-	I	I	I	I	I	I	I	I	I
6-5.	Brake drum and shoes (Wear)		-	-	I	I	I	I	I	I	I	I
6-6.	Brake hoses and pipes (Fluid leakage, Damage)		I	I	I	I	I	I	I	I	I	I
6-7.	Master cylinder, wheel cylinder and caliper piston (Fluid leakage, Boot/Seal damage)		I	I	I	I	I	I	I	I	I	I
WHEEL												
7-1.	Tires (Air pressure, Abnormal wear, Crack and Rotation)		I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O
7-2.	Wheels (Damage)		I	I	I	I	I	I	I	I	I	I
7-3.	Front/Rear wheel bearing (Loose, Damage)		I	I	I	I	I	I	I	I	I	I

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
	km (x1000)	1	5	10	20	30	40	50	60	70	80
	months	1	6	12	24	36	48	60	72	84	96
FRONT / REAR SUSPENSION											
8-1. Suspension strut (Oil leakage, Damage)		I	I	I	I	I	I	I	I	I	
8-2. Suspension arms / Knuckle support and Torsion rods (Loose, Damage)		-	I	I	I	I	I	I	I	I	
8-3. Rear spring (Damage)		I	I	I	I	I	I	I	I	I	
8-4. Shock absorbers (Oil leakage, Damage)		I	I	I	I	I	I	I	I	I	
8-5. All bolts and nuts (Loose)		-	T	T	T	T	T	T	T	T	
STEERING											
9-1. Steering wheel (Play, Loose)		I	I	I	I	I	I	I	I	I	
9-2. All rods and arms (Loose, Damage, Wear)		I	I	I	I	I	I	I	I	I	
9-3. Tilt Steering (Operation)		I	I	I	I	I	I	I	I	I	
ELECTRICAL											
10-1. Battery - electrolyte (Level, leakage) and voltage		I	I	I	I	I	I	I	I	I	
10-2. Wiring harness connection (Loose, Damage)		-	I	I	I	I	I	I	I	I	
10-3. Lighting system (Operation, Stains, Damage)		I	I	I	I	I	I	I	I	I	
10-4. Wiper (Operation)		I	I	I	I	I	I	I	I	I	
10-5. Horn (Operation)		I	I	I	I	I	I	I	I	I	
10-6. AUX, USB and accessory socket (if equipped) (Operation)		-	I	I	I	I	I	I	I	I	

⚠ WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your Maruti Suzuki authorized workshop for assistance.

INSPECTION AND MAINTENANCE

Interval: This interval should be judged by odometer reading or months, whichever comes first.		FREE INSPECTION			PERIODIC MAINTENANCE AT COST						
	km (x1000)	1	5	10	20	30	40	50	60	70	80
	months	1	6	12	24	36	48	60	72	84	96
BODY											
11-1. All chassis bolts and nuts (Tighten)		-	T	T	T	T	T	T	T	T	
11-2. All latches, hinges and locks (Function)		I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	
ROAD TEST											
12-1. Operation of Brakes, gear shifting and speedometer		I	I	I	I	I	I	I	I	I	
12-2. Body and chassis noise		I	I	I	I	I	I	I	I	I	
AIR CONDITIONER											
13-1. Check belt tension		I	I	I	I	I	I	I	I	I	
13-2. Tighten compressor mounting bolt		-	T	T	T	T	T	T	T	T	
13-3. All hose joint (Check, Tighten)		I	I	I	I	I	I	I	I	I	
13-4. Check functioning of Recirculating flap		I	I	I	I	I	I	I	I	I	
13-5. Clean condenser with low pressure water		-	C	C	C	C	C	C	C	C	
13-6. Check belt for frayed edges		I	I	I	I	I	I	I	I	I	
13-7. Check all mounting bolts		I	I	I	I	I	I	I	I	I	
13-8. Air conditioner filter element		I	I	I	I	R	I	I	R	I	

INSPECTION AND MAINTENANCE

Drive Belt


⚠ WARNING

When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

Check that the drive belt tension is correct while the engine is stopped. If the belt is too loose, insufficient battery charging, engine overheating, poor air conditioning, or excessive belt wear can result. When you push the belt with your thumb midpoint between the pulleys, there should be a deflection according to the following chart.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a Maruti Suzuki authorized workshop.

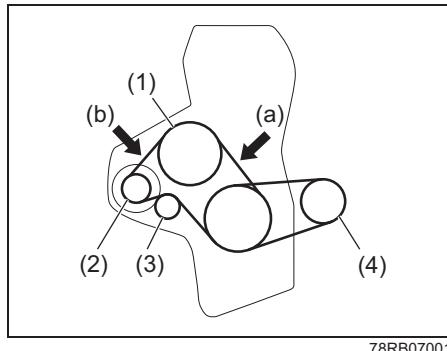

78RB07001


- (1) Water pump (2) Generator
(3) Idler pulley (4) Air conditioner compressor

Drive belt deflection (100 N)

- (a) New:
4.8 - 5.9 mm
Readjustment:
6.2 - 7.1 mm
- (b) New:
3.2 - 4.1 mm
Readjustment:
4.4 - 5.0 mm

Engine Oil and Filter Specified Oil

For India

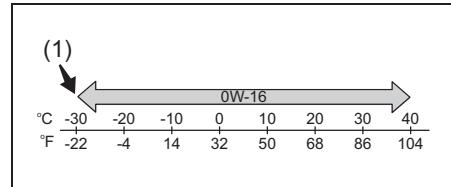


(1) Preferred

For India, check that the engine oil you use comes under the quality classification of API SN. Select the appropriate oil viscosity according to the above chart.

For India, be sure that the engine oil you use comes under the quality classification as listed below.

- API SN, SP
- ILSAC GF-6

SAE 0W-16 (1) is the best choice for good fuel economy and good startability in cold weather.

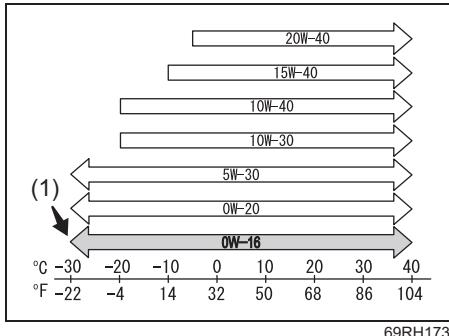Except for India

(1) Preferred


Except for India, be sure that the engine oil you use comes under the quality classification as listed below.

- API SL, SM, SN, SP
- ILSAC GF-6

SAE 0W-16 (1) is the best choice for good fuel economy and good startability in cold weather.

NOTE:

- We recommend that you use Maruti Suzuki genuine oil. To purchase it, see a Maruti Suzuki authorized workshop.
- The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.

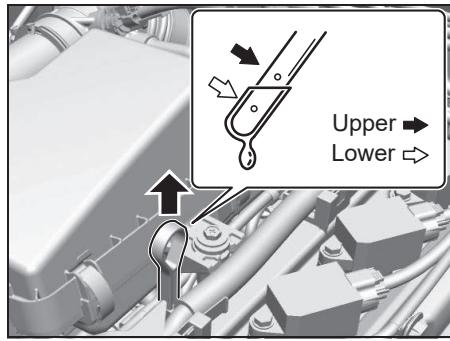
Oil Level Check

It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe the oil off with a clean cloth, insert the dipstick all the way into the engine, and then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

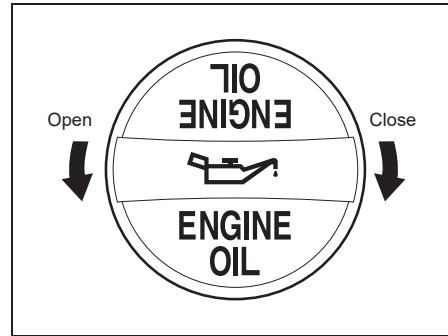
Refilling

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.


INSPECTION AND MAINTENANCE

Changing Engine Oil and Filter

Drain the engine oil while the engine is still warm.

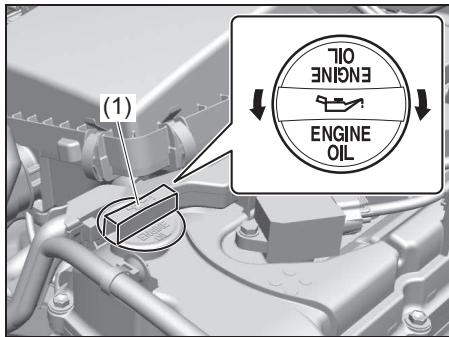

- 1) Remove the oil filler cap (1).

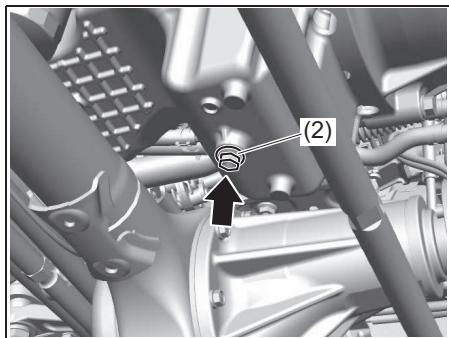

- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug (2) and drain the engine oil.

CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

- 4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

Tightening torque for drain plug:
35 Nm (3.6 kg-m)

NOTE:

Ask your Maruti Suzuki authorized workshop for changing engine oil and filter if you have difficulties.

WARNING

Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.


Repeated, prolonged contact with used engine oil may cause skin cancer.

Brief contact with used oil may irritate skin.

To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dish-washing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.

Launder any clothing or rags if it is with oil.


Recycle or properly dispose of used oil and oil filters.

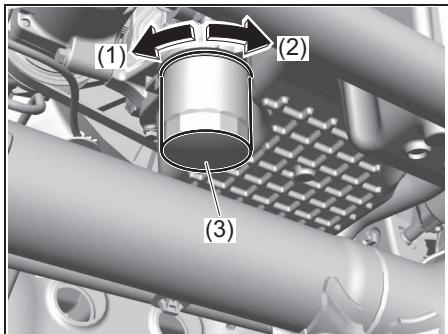Oil Filter Replacement

80T090040

- (1) Loosen (counterclockwise)
 (2) Tighten (clockwise)

- 1) Using an oil filter wrench, turn the oil filter (3) counterclockwise and remove it.
- 2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- 3) Smear a small amount of engine oil around the rubber gasket of the new oil filter.
- 4) Screw the new filter by hand until the filter gasket contacts the mounting surface.

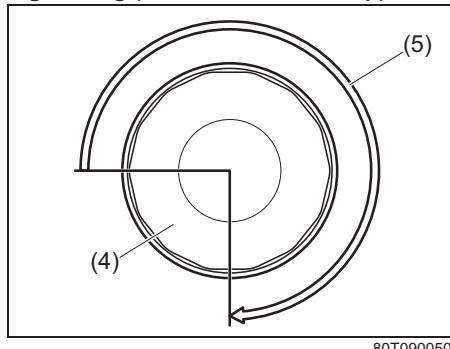Tightening (viewed from filter top)

80T090050

- (4) Oil filter
 (5) 3/4 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

- 5) Turn the oil filter clockwise as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter:
3/4 turn or
14 Nm (1.4 kg-m)

NOTICE

To prevent oil leakage, check that the oil filter is tight, but do not overtighten it.

Refilling with Oil and Oil Leakage Check

- 1) Pour oil through the filler hole and install the filler cap.
 For the approximate capacity of the oil, refer to "Recommended fuel / lubricants and capacities (approx.)" in "SPECIFICATIONS" section.
- 2) Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- 3) Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE
<ul style="list-style-type: none">When replacing the oil filter, it is recommended that you use a genuine Maruti Suzuki replacement filter. If you use an aftermarket filter, check that it is of equivalent quality and follow the manufacturer's instructions.Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have your vehicle inspected by a Maruti Suzuki authorized workshop.

Engine Coolant

Selection of Coolant

To maintain optimum performance and durability of your engine, use Maruti Suzuki genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your Maruti Suzuki authorized workshop can help you select the proper coolant.

NOTICE
<p>SUZUKI LLC: Super (Blue) coolant; This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.</p>

NOTICE
<p>To avoid damaging your cooling system:</p> <ul style="list-style-type: none">Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water or deionized water at the correct mixture concentration.Check that the proper mix is 50/50 coolant to distilled water or deionized water and in no case higher than 50/50. Concentrations greater than 50/50 coolant to distilled water or deionized water will cause overheating conditions.Do not use straight coolant nor plain water.Do not add extra inhibitors or additives. They may not be compatible with your cooling system.Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/automatic transmission damage.

Coolant Level Check


Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks.

Adding Coolant

⚠ WARNING

Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.

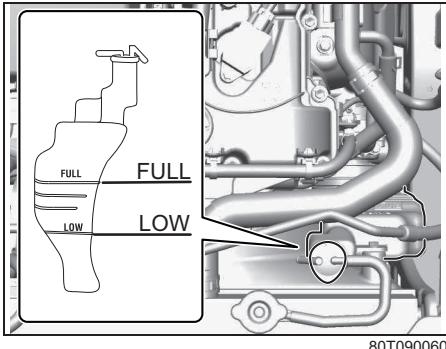

NOTICE

When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Coolant Replacement

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

If the coolant level is below "LOW" mark, coolant should be added. While the engine is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark. Never fill the reservoir tank above "FULL" mark.


NOTICE

SUZUKI LLC: Super (Blue) coolant; This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.

INSPECTION AND MAINTENANCE

Air Cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

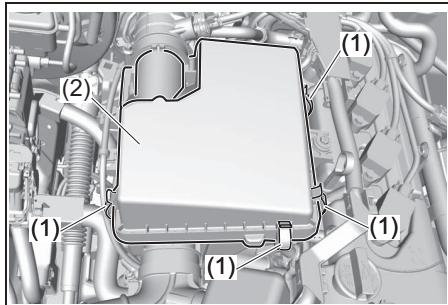


80T090070

- 1) Unclamp the side clamps (1).
- 2) Hold up the air cleaner upper case (2).
- 3) Remove the element from the air cleaner case. If it appears to be dirty, clean or replace it with a new one.
- 4) Reinstall the air cleaner case securely.

Spark Plugs

Spark Plug Replacement and Inspection

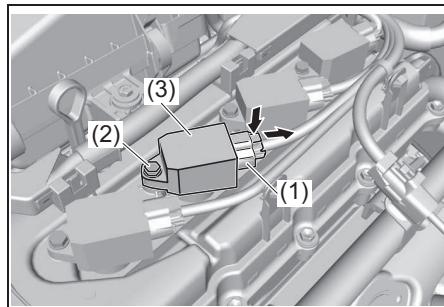


80T090080

To access the spark plug:

- 1) Disconnect the coupler (1) while pushing the release lever.
- 2) Remove the bolt (2).
- 3) Pull out the ignition coil (3) straight.

NOTE:



During installation, check that the wires, couplers, sealing rubber of air cleaner chassis and washers, are correctly returned in place.

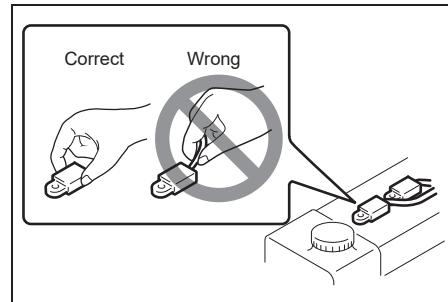

78K179

NOTICE

- When pulling out the ignition coils, do not pull on the cable. Pulling on the cable can damage it.
- When servicing the iridium/platinum spark plugs (slender center electrode type plugs), do not touch the center electrode, as it is easy to be damaged.

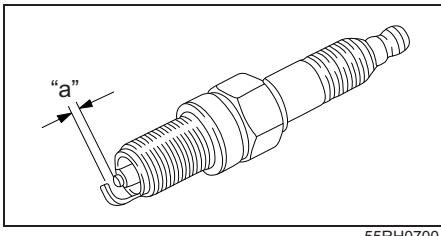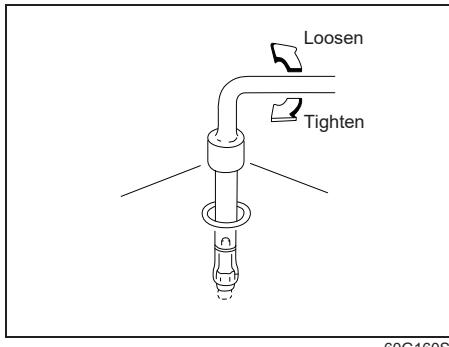

Spark plug gap "a":

**KR6A-10
0.95-1.05mm**

NOTICE

- When installing the spark plugs, screw them in with your fingers to avoid stripping the threads. Tighten the spark plugs with a torque wrench to 17.5 Nm (1.7 kg-m). Do not allow contaminants to enter the engine through the spark plug holes when the plugs are removed.
- Never use spark plugs with the wrong thread size.

NOTICE

When replacing spark plugs, you should use the brand and type specified for your vehicle. For the specified plugs, refer to "SPECIFICATIONS" section in the end of this book. If you wish to use a brand of spark plug other than the specified plugs, consult with a Maruti Suzuki authorized workshop.

NOTICE

Driving with too much or too little fluid can damage the transmission.

You must check the fluid level with the automatic transmission fluid at normal operating temperature.

To check the fluid level:

- To warm up the transmission fluid, drive the vehicle or idle the engine until the engine coolant temperature light (blue color) goes off.
- Then drive for ten more minutes.


INSPECTION AND MAINTENANCE

NOTICE

Be sure to use the specified automatic transmission fluid. Using automatic transmission fluid other than SUZUKI ATF3317 or Mobil ATF3309 may damage the automatic transmission of your vehicle.

NOTE:

Do not check the fluid level if you have just driven the vehicle for a long time at high speed, or if you have driven in city traffic in hot weather. Wait until the fluid cools down (about 30 minutes), or the fluid level indication will not be correct.

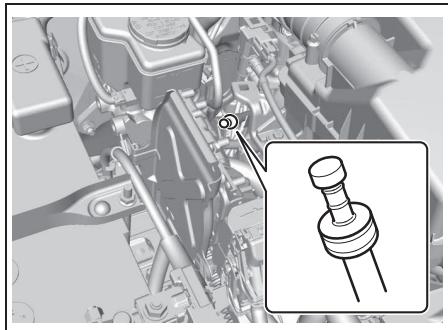


two minutes and keep it running during the fluid level check.


- 5) With your foot on the brake pedal, move the gearshift lever through each gear, pausing for about three seconds in each range. Then move it back to the "P" (Park) position.

WARNING

Be sure to depress the brake pedal when moving the gearshift lever, or the vehicle can move suddenly.

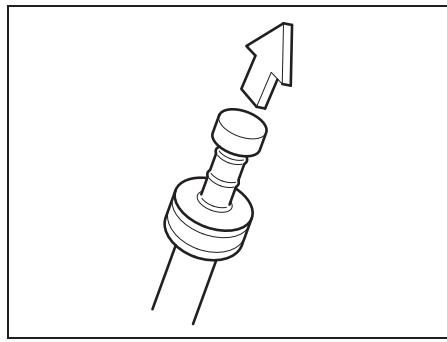

- 7) Check both sides of the dipstick, and read the lowest level. The fluid level should be between the two marks on the dipstick.

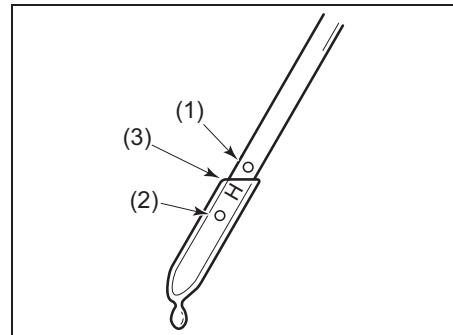

78RB07055

(1) FULL
(2) LOW
(3) The lowest point = Fluid level

- 8) Add just enough specified fluid through the dipstick hole to fill the transmission oil to the proper level.

NOTICE

After checking or adding oil, be sure to insert the dipstick securely.

- 3) Park your vehicle on level ground.
- 4) Apply the parking brake and then start the engine in "P" (Park). Let it idle for

Changing Oil

Since special procedures, materials, and tools are required to change the automatic transmission oil, ask your Maruti Suzuki authorized workshop for this job.


Gear Oil

Manual Transmission Oil / transfer Oil / Front/rear Differential Oil

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.


We highly recommend you use "MARUTI GENUINE GEAR OIL 75W" for manual transmission oil and transfer oil.

Manual transmission oil/Transfer oil

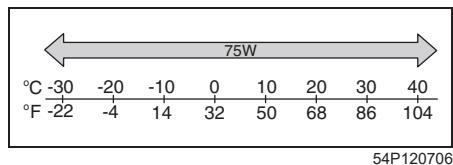


We highly recommend you use "MARUTI GENUINE GEAR OIL 75W-85" for front/rear differential oil.

Front/rear differential oil

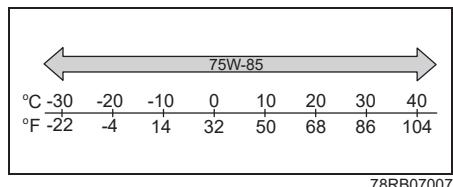

Gear Oil Level Check

Manual transmission

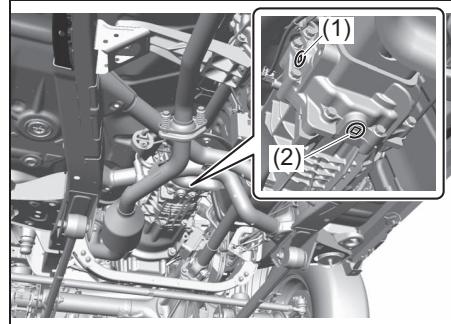


80T090100

- (1) Oil filler and level plug
- (2) Oil drain plug

INSPECTION AND MAINTENANCE

Transfer

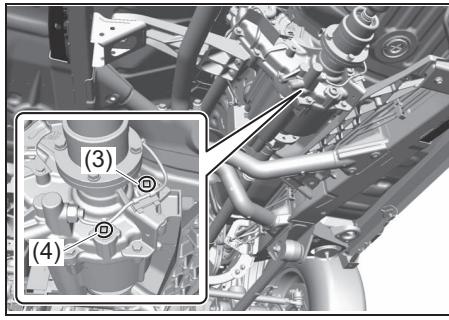


80T090110

(3) Oil filter and level plug

(4) Oil drain plug

Front/rear differential

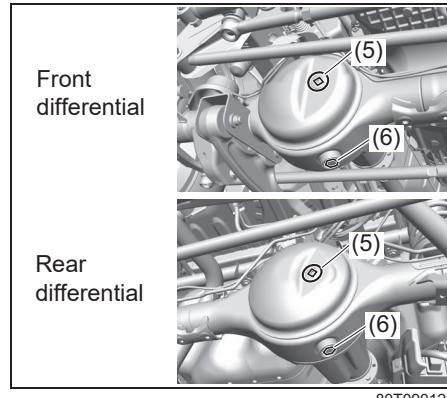

80T090120

(5) Oil filter and level plug

(6) Oil drain plug

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug.

For the manual transmission;

- 3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.

For the transfer and front/rear differential;

- 3) Check the inside of the hole with your finger. If the oil level comes up to the bottom of the plug hole, the oil level is correct. If so, reinstall the plug.
- 4) If the oil level is low, add gear oil through the oil filler and level plug hole until the oil level reaches the bottom of the filler hole, and then reinstall the plug.

Tightening torque for oil filler and level plug

Manual transmission (1)(2):
23 Nm (2.3 kg-m)

Transfer (3)(4):
23 Nm (2.3 kg-m)

Front/rear differential (5)(6):
(5)50 Nm (5.0 kg-m)
(6)55 Nm (5.6 kg-m)

CAUTION


After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug are cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE

Be sure to use new plug with new gasket to avoid looseness of the plug and oil leakage.

Gear Oil Change


Since special procedures, materials and tools are required, ask your Maruti Suzuki authorized workshop for this job.

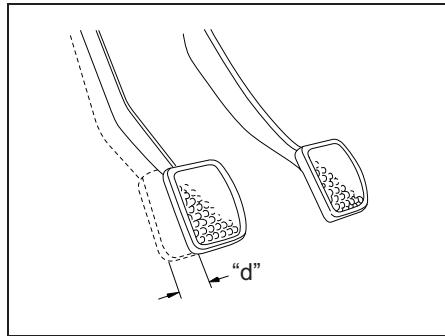Clutch**Clutch Pedal**

54G274

**Clutch pedal play "d":
MAX 10 mm**

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be less than the specified values. If the play is more than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorized workshop.

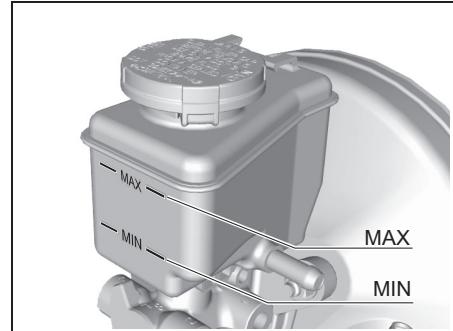Clutch Fluid

80T090130

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorized workshop. If the clutch fluid level is near "MIN" line, fill it up to "MAX" line with DOT3 or SAE J1703 brake fluid.


NOTICE

Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

INSPECTION AND MAINTENANCE

Brakes

Brake Fluid

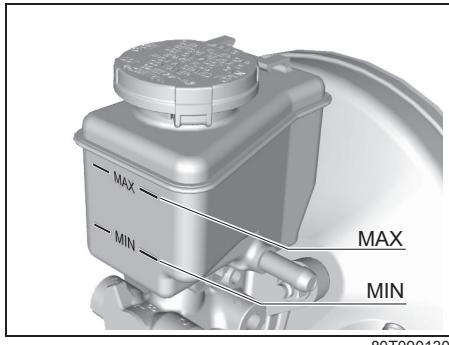

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines.

⚠ WARNING

- Failure to follow the guidelines below can result in personal injury or serious trouble in the brake system.
 - If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument cluster will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask your Maruti Suzuki authorized workshop to inspect the brake system.
 - A rapid fluid loss indicates leakage in the brake system. In this case, immediately ask your Maruti Suzuki authorized workshop to inspect the brake system.
 - Do not use any fluid other than DOT3 or SAE J1703 brake fluid. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

(Continued)

⚠ WARNING

(Continued)

- Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

NOTICE

- If your brake fluid level is near the "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case, ask your Maruti Suzuki authorized workshop to inspect the brake system.
- Brake fluid can damage painted surfaces. Be careful when refilling the reservoir.


NOTE:

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.
- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.

Replace the brake fluid according to the maintenance schedule in this owner's manual.

Brake Pedal

Check brake pedal stroke. If the stroke is so large, have the brake system inspected by a Maruti Suzuki authorized workshop. If you doubt the brake pedal is at its normal height, check it as follows:

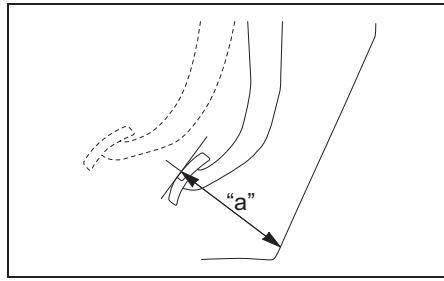

Minimum distance between brake pedal and floor carpet "a"

89 mm


With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor carpet in your measurement.
- Measure the distance at the brake pedal's side facing toward the driver's door.

INSPECTION AND MAINTENANCE

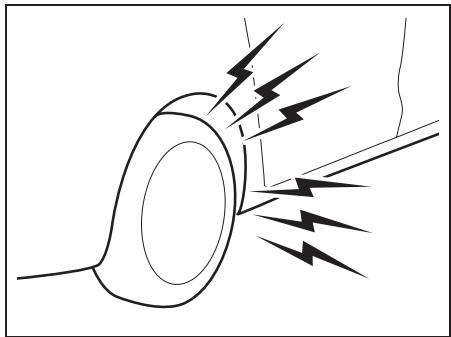

52RM70500

⚠ WARNING

If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.

If you hear this noise, have your vehicle inspected by a Maruti Suzuki authorized workshop.


Continued driving with this condition can cause an accident.

⚠ CAUTION

If you experience any of the following problems with your vehicle's brake system, have your vehicle inspected by a Maruti Suzuki authorized workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels)
- Excessive pedal travel
- Brake dragging

Parking Brake

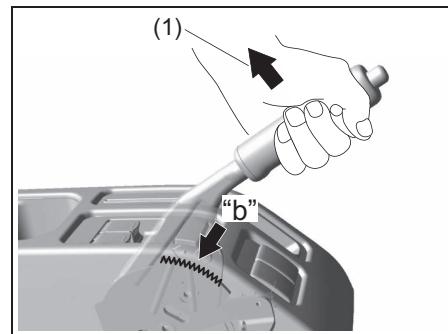


80T090140

Ratchet tooth specification "b":

4th – 9th


Lever pull force (1):
200 N (20 kg)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorized workshop.

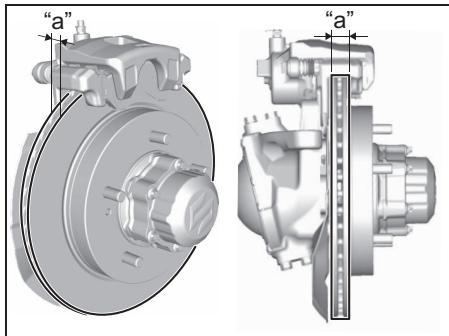Brake Discs and Brake Drums**Brake disc**

80T090150


Brake location	Minimum thickness "a"
Front wheels	15.0 mm

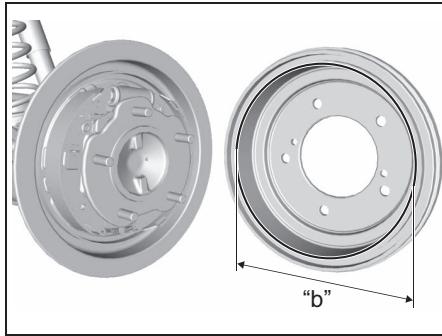Brake drum

80T090160

Brake location	Maximum inner diameter "b"
Rear wheels	222 mm

If the measured thickness or inner diameter of the most worn part falls below or exceeds the value indicated above, the parts should be replaced with a new one. The measurement involves disassembling each brake and requires the use of a micrometer or caliper, which must be done according to the instructions described in the relevant service manual or available from the relevant repair information site.

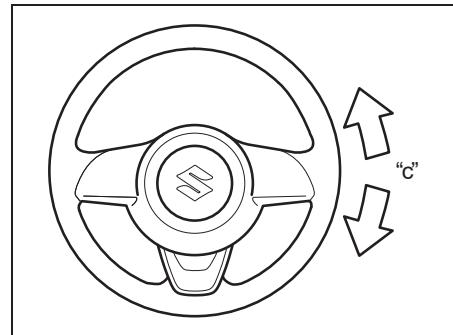Steering Wheel


78RB07012

**Steering wheel play "c":
0–30 mm**

Check the free play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is not as specified or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorized workshop.

Tyres

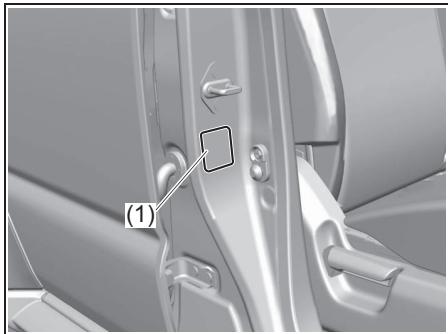

80T090180

The front and rear tyre pressure specifications are listed in the tyre information label (1). Both front and rear tyres should have the specified tyre pressure.

Note that the value does not apply to the compact spare tyre, if equipped.


Tyre Inspection

Inspect your vehicle's tyres at least once a month or before long trip by performing the following checks:

- 1) Measure the air pressure with a tyre gauge. Adjust the pressure if necessary.

WARNING

- Air pressures should be checked when the tyres are cold or you may get inaccurate readings.
- Check the tyre pressure from time to time while inflating the tyre gradually, until the specified pressure is obtained.
- Never under-inflate or over-inflate the tyres.
Under-inflation can cause unusual handling characteristics or can cause the rim to slip on the tyre bead, resulting in an accident or damage to the tyre or rim.
Over-inflation can cause the tyre to burst, resulting in personal injury.
Over-inflation can also cause unusual handling characteristics which may result in an accident.

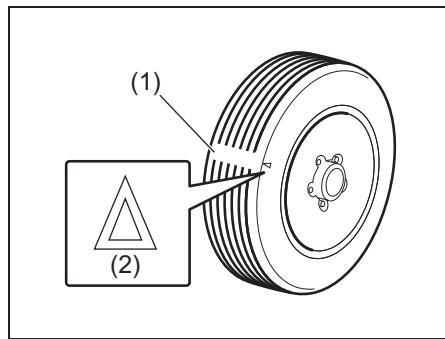

80T090190

(1) Tread wear indicator

(2) Indicator location mark

- 2) Check that the depth of the tread groove is more than 1.6 mm. To help you check this, the tyres have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm or less and the tyre should be replaced.
- 3) Check for abnormal wear, cracks and damage. Any tyres with cracks or other damage should be replaced. If any tyres show abnormal wear, have them inspected by a Maruti Suzuki authorized workshop.

CAUTION

Hitting curbs and running over rocks can damage tyres and affect wheel alignment. Have tyres and wheel alignment checked periodically by a Maruti Suzuki authorized workshop.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tyres.

WARNING

- Your Maruti Suzuki vehicle is equipped with tyres which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tyres of different size or type on the four wheels of your vehicle. The size and type of tyres used should be only those approved by Maruti Suzuki as standard or optional equipment for your vehicle.

(Continued)


WARNING

(Continued)


- Replacing the wheels and tyres equipped on your vehicle with certain combinations of aftermarket wheels and tyres can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tyre combinations approved by Maruti Suzuki as standard or optional equipment for your vehicle.

NOTICE

- Replacing the original tyres with tyres of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorized workshop before purchasing replacement tyres that differ in size from the original tyres.
- Replacing a tyre with one of a different size, or using different brands among the four tyres can result in damage to the drive train.

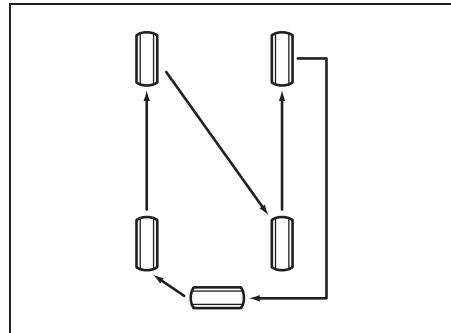Tyre Rotation
5-tyre rotation


80T090200

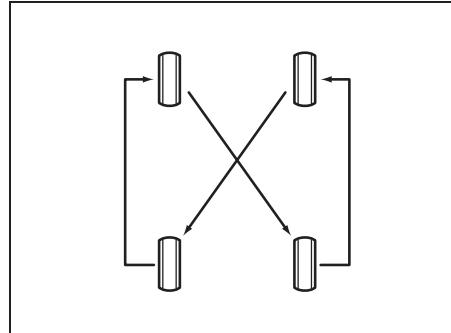4-tyre rotation

65D459

INSPECTION AND MAINTENANCE

To avoid uneven wear of your tyres and to prolong their life, rotate the tyres as illustrated. Tyres should be rotated every 10000 km. After rotation, adjust front and rear tyre pressures to the specification listed on your vehicle's Tyre Information Label.

NOTE:

- To change the tyres, refer to "Changing Wheels" in "EMERGENCY SERVICE" section.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at a Maruti Suzuki authorized workshop.

Wheel Alignment

In case of abnormal tyre wear or pulling towards one side, have the wheel aligned at a Maruti Suzuki authorized workshop.

Tubeless Tyres

The vehicle is equipped with Tubeless Tyres. In tubeless tyre, a thin layer of butyl rubber is used for lining the inside of the tubeless tyre. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tyre bead and wheel rim. Tubeless tyres are having advantage of slow air loss and preventing sudden deflation while driving.


Care and maintenance tips for tubeless tyres

- 1) Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tyre damage.
- 2) In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tyre has run at low pressure, it must be inspected for any defect.
- 4) Whenever new tyre is fitted, replace the valve.
- 5) If continuous high speed driving is required, increase tyres pressure by 5 psi over recommended inflation pressure.
- 6) Never run the tyre beyond TWI (Tread wear indicator). The tyre is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tyre marked by a triangular symbol (TWI).
- 7) Always prefer tubeless tyre mounting machine. In case of manual mounting tyre/wheel rim damage may occur.
- 8) In case of any problem, please get in touch with a Maruti Suzuki authorized workshop.

Battery

⚠ WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions in "EMERGENCY SERVICE" section if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

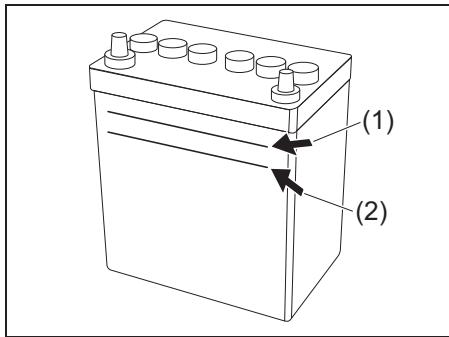

80T090530

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery solution must be kept between the upper level line "MAX" (1) and the lower level line "MIN" (2) at all times. If the level is found to be below the lower level line (2), add distilled water to the upper level line (1). You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

WARNING

If the battery is used with battery level being less than the lower level line "MIN" (2), it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN" (2).

NOTICE

- If the battery liquid is added more than the upper level line "MAX" (1), liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid overspills, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX" (1).

(Continued)

NOTICE

(Continued)


- If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "SPECIFICATIONS" section for details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult with a Maruti Suzuki authorized workshop.

NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" (1) and lower level "MIN" (2), add distilled water till it reaches the upper level line "MAX" (1).

INSPECTION AND MAINTENANCE

Replacement of the battery

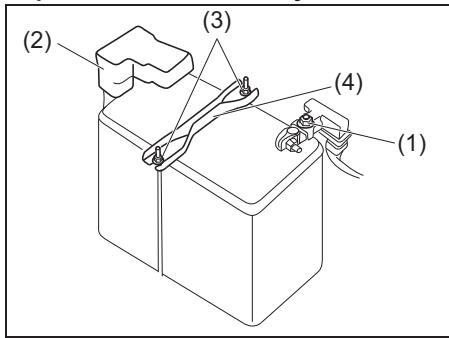

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:


- When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated. These functions must be required to reset after the battery is reconnected.
- Do not disconnect the battery terminals for at least one minute after the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to "LOCK" (OFF).

NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "OFF" or changing the ignition mode to "LOCK" (OFF).

WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.

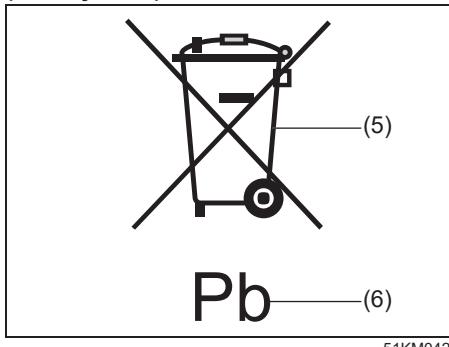(Battery label)

(5) Crossed-out wheeled bin symbol

(6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult with a Maruti Suzuki authorized workshop.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the lead-acid battery.


Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses


These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller provided in the fuse box cover.

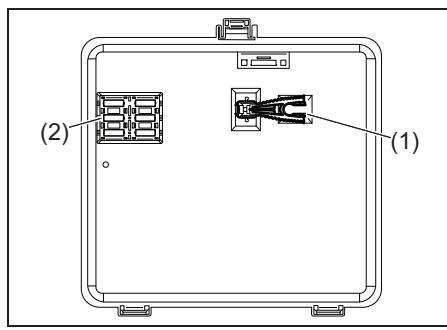


(1) Fuse puller

(2) Spare fuse

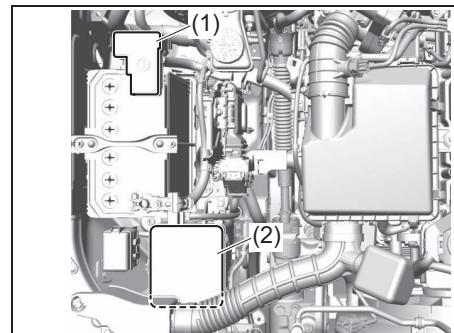Fuses in Engine Compartment

(1) Main fuse box


(2) Relay box

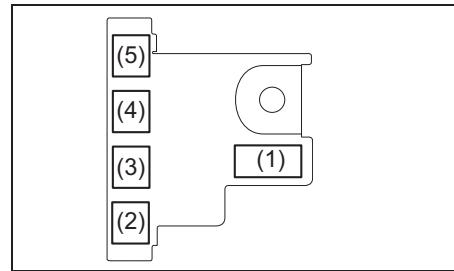Main fuse box

78RB07022

INSPECTION AND MAINTENANCE

Relay box

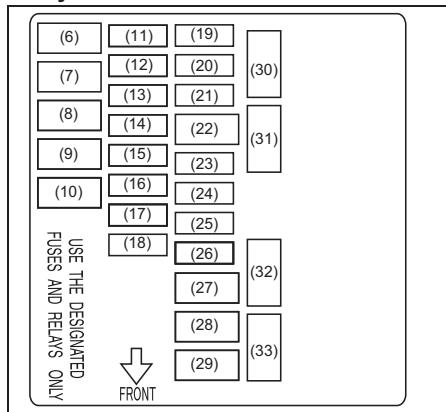

78RB07023

MAIN FUSE / PRIMARY FUSE


(1)	120 A	FL1
(2)	100 A	FL2
(3)	80 A	SPARE
(4)	100 A	FL4
(5)	50 A	FL5
(6)	50 A	Ignition switch
(7)	40 A	ABS motor
(8)	—	Blank

(9)	30 A	Blower fan
(10)	30 A	Starter motor
(11)	30 A	Headlight cleaner
(12)	15 A	Headlight (Right)
(13)	15 A	Headlight (Left)
(14)	25 A	ABS/ESP® control module
(15)	30 A	DCDC 1
(16)	—	Blank
(17)	25 A	Headlight high
(18)	30 A	Back up
(19)	30 A	DCDC 2
(20)	15 A	Fuel injection
(21)	15 A	Transmission
(22)	50 A	Ignition sw2
(23)	10 A	A/C compressor
(24)	10 A	4WD
(25)	20 A	Front fog light
(26)	—	Blank
(27)	40 A	Power steering
(28)	—	Blank
(29)	40 A	Radiator fan


(30)	5 A	T/M 2
(31)	5 A	Starter motor signal
(32)	15 A	Headlight high (Left)
(33)	15 A	Headlight high (Right)

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a genuine Maruti Suzuki replacement parts or equivalent for individual fuses.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

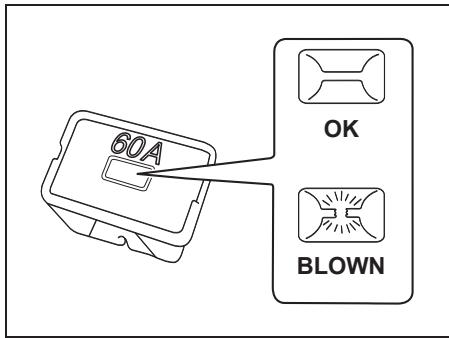

Fuses Under Dashboard

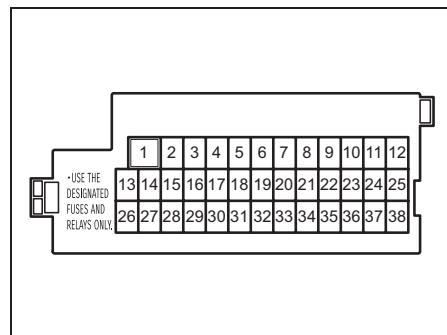

80P0185

PRIMARY FUSE		
(1)	30 A	Power window
(2)	10 A	Meter
(3)	15 A	Ignition coil
(4)	5 A	Ignition-1 signal 2
(5)	20 A	Blank
(6)	20 A	Blank
(7)	—	Blank
(8)	20 A	Door lock
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	5 A	A-STOP
(12)	10 A	Rear fog lamp
(13)	5 A	ABS/ESP® control module
(14)	15 A	Seat heater
(15)	5 A	Ignition-1 signal 3
(16)	10 A	Dome light-2
(17)	5 A	Dome light
(18)	15 A	Radio
(19)	5 A	CONT
(20)	5 A	Key 2

⚠ WARNING


If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorized workshop. Always use a genuine Maruti Suzuki replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.

NOTE:

Check that the fuse box always carries spare fuses.

INSPECTION AND MAINTENANCE

(21)	20 A	Power window timer
(22)	5 A	Key
(23)	15 A	Horn
(24)	5 A	Tail light (Left)
(25)	10 A	Tail light
(26)	10 A	Airbag
(27)	10 A	Ignition-1 signal
(28)	10 A	Back-up light
(29)	5 A	ACC-3
(30)	20 A	Rear defogger
(31)	10 A	Heated mirror
(32)	15 A	ACC-2
(33)	5 A	ACC
(34)	10 A	Rear wiper
(35)	5 A	Ignition-2 signal
(36)	15 A	Washer
(37)	25 A	Front wiper
(38)	10 A	Stop light

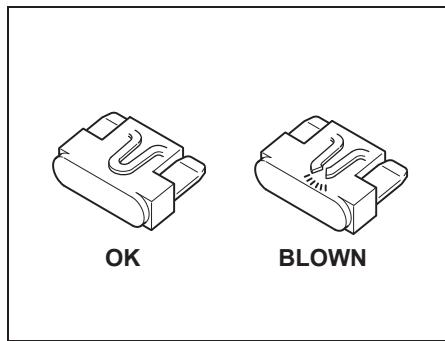

55T090630


Headlight Aiming

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

⚠ WARNING

Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Bulb Replacement

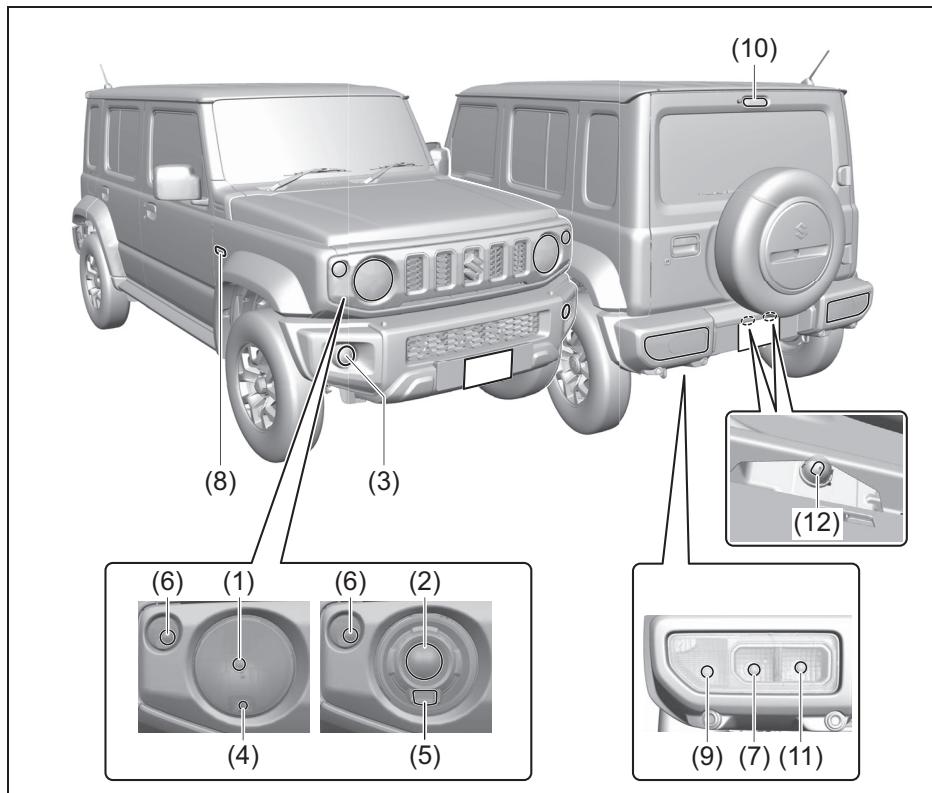

No.	ITEM: Lights	WATT-AGE	BULB No.
(1)	Headlight	12V 60/55W	H4
(2)	Headlight ^{*1}	LED	–
(3)	Front fog light	12V 19W	H16
(4)	Position light	12V5W	W5W
(5)	Position light ^{*1}	LED	–
(6)	Turn signal light	Front	12V 21W
(7)		Rear	WY21W
(8)	Side turn signal light	12V 5W	–
(9)	Tail / brake light	12V 21/ 5W	W21/ 5W
(10)	High-mount stop light ^{*1}	LED	–
(11)	Reversing light	12V21W	W21W
(12)	License plate light	12V5W	W5W

If you need to replace the following lights indicated in the above table, consult with a Maruti Suzuki authorized workshop.

*1: Since the lights are non-disassemable type, you cannot replace a bulb. Replace the target assembly if any light is defective.

80T090250

INSPECTION AND MAINTENANCE

▲ CAUTION

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

- The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.
- Frequent bulb replacement indicates the need for an inspection of the electrical system. This should be carried out by a Maruti Suzuki authorized workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in this section.

NOTE:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights.

The above-mentioned phenomena are not vehicle malfunction.

However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have the vehicle inspected by a Maruti Suzuki authorized workshop.

Non-disassembled Type Lights

Since the lights shown below are non-disassemble type, you cannot replace a light. Replace the target assembly if any light is defective.

If you need to replace the assembly, ask your Maruti Suzuki authorized workshop.


- Headlight (LED type) (if equipped)
- Position light (vehicle with LED headlights)
- Side turn signal light on fender
- High mount stop light

Headlights

LED type


Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

Halogen type

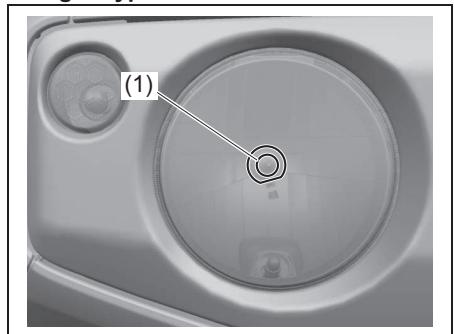


80T090460

(1) Bulb

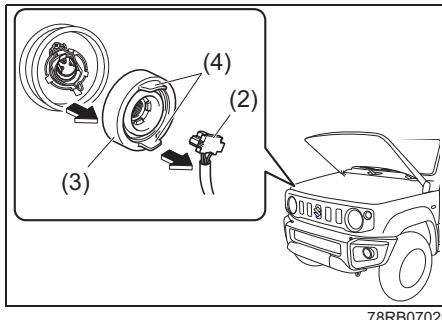

78RB07026


- 1) Open the engine hood while the engine is stopped. Disconnect the coupler (2). Remove the sealing rubber (3) by pulling the grip (4).

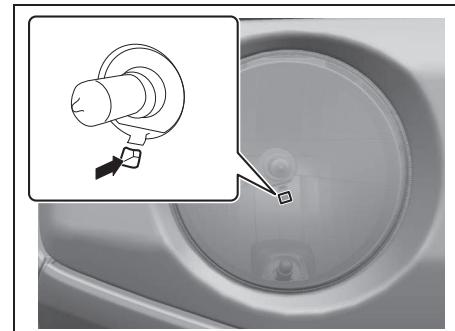

80T090470

NOTE:

You can see the position of retaining spring from the hole of headlight.

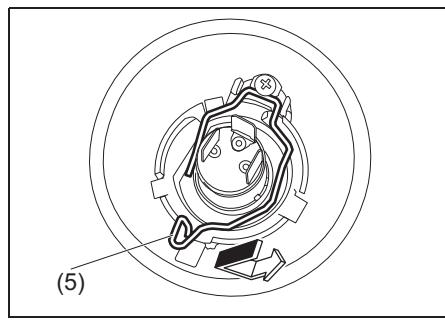

78RB07027


- 2) Push the retaining spring (5) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

INSPECTION AND MAINTENANCE

Front Turn Signal Light and Front Position Light


For front LED position light (if equipped), it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement since special procedures are required.

Vehicle with the halogen headlights

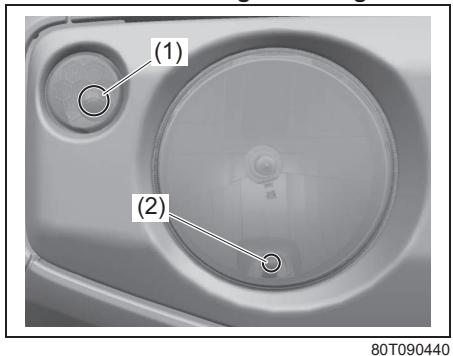


- (1) Front turn signal light
- (2) Front position light


Vehicle with the LED headlights

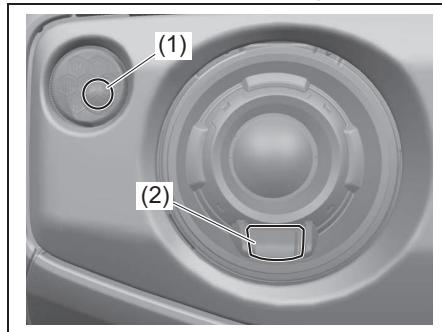

- (1) Front turn signal light
- (2) Front LED position light

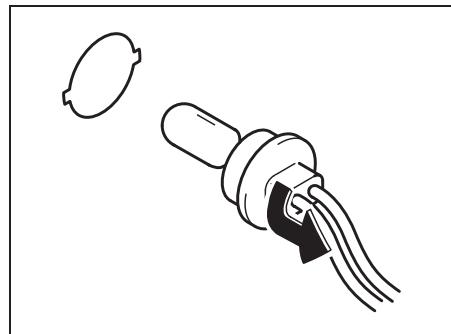


- 1) Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light or the front position light (for vehicle with halogen headlights) from the light housing, turn the holder counterclockwise and pull it out.

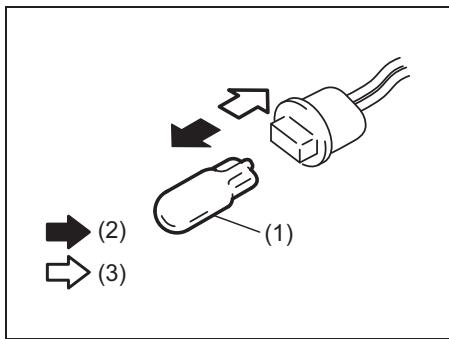

78RB07051

- (2) Removal
(3) Installation

- 2) To remove and install the bulb of the front position light (1), simply pull out or push in the bulb.

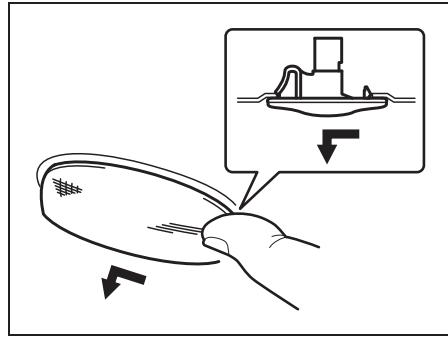
Side Turn Signal Light

78RB07031

Since the bulb is built-in type, replace it as the light assembly. Remove the light assembly by sliding the light housing leftward with your finger.

Front Fog Light (if equipped)


- 1) Start the engine. Turn the steering wheel to the opposite side of the fog light to be replaced to replace the bulb easily. Then turn off the engine.

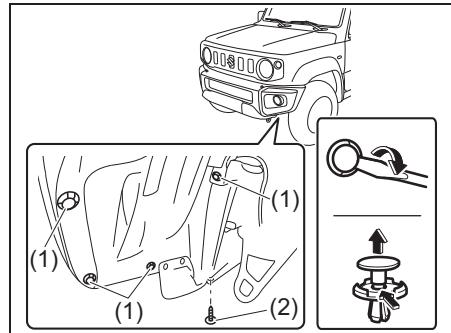


80T090540

- 2) Remove the clips (1) and screw (2) at the bottom of bumper.
For removing the clip, use a flat-bladed screwdriver as shown in the illustration.

INSPECTION AND MAINTENANCE

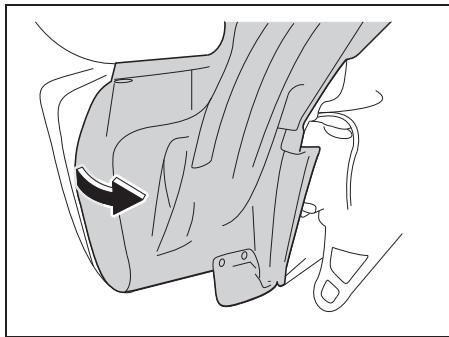


- 3) Open the end of the cover inside the fender.

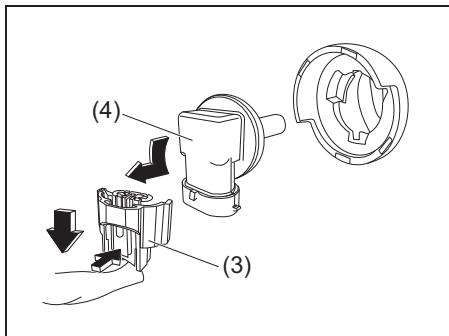


- 4) Disconnect the coupler (3) by pushing the lock release. Turn the bulb holder (4) counterclockwise and remove it.


Rear Combination Light

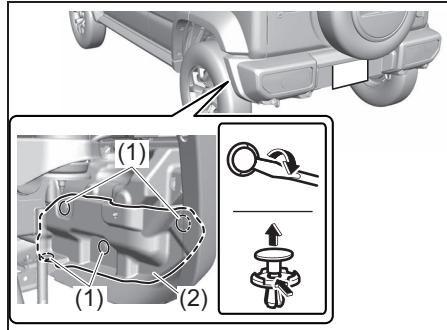

- 1) Remove the clips (1) and then remove the cover (2).

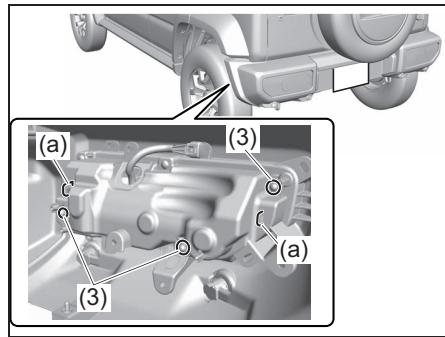


- 2) Remove the nuts (3) and pull the rear combination light from the rear bumper by pushing the hooks (a).

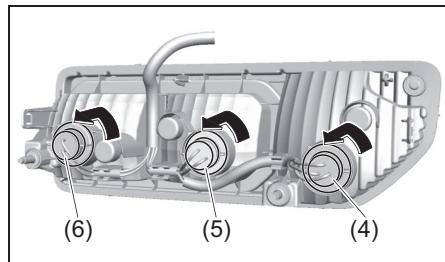

- (4) Tail / brake light
- (5) Rear turn signal light
- (6) Reversing light

- 3) To remove the bulb holder of the above light from the light housing, turn the holder counterclockwise and pull it out.

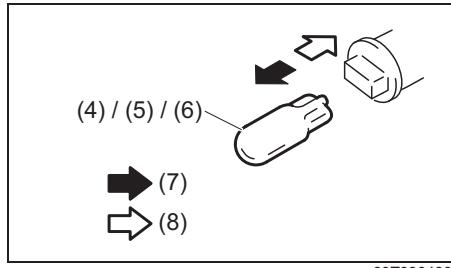


80T090490

- (7) Removal
 (8) Installation


- 4) To remove and install the bulb of the tail / brake light (4), the rear turn signal light (5), the reversing light (6), simply pull out or push in the bulb.

License Plate Light

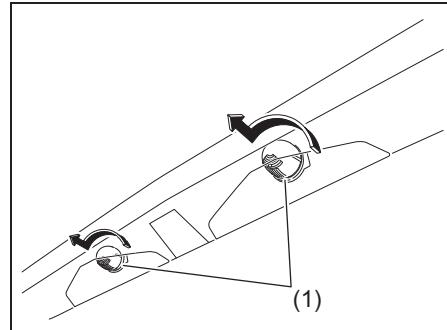

52RM70070

- 1) Remove the cover (1) by turning it counterclockwise.

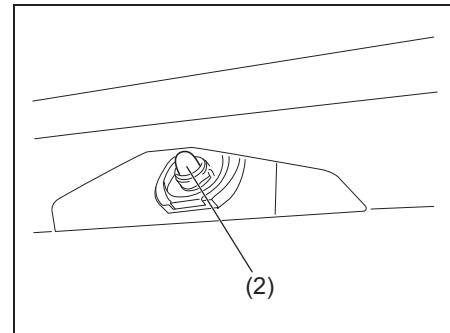

76MH0A126

- 2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.


High-mount Stop Light

LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement since special procedures are required.

INSPECTION AND MAINTENANCE


Interior Light

Front

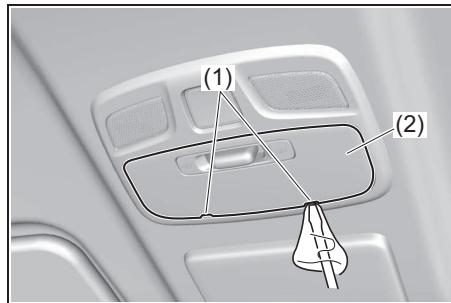

80T090280


- 1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notches (1), and then remove the lens (2).

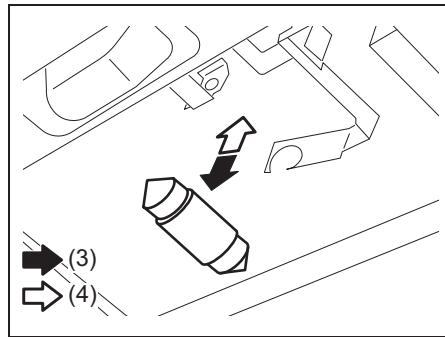

55T090050


- (3) Removal
(4) Installation
- 2) Pull the bulb out and then insert a new one.
- 3) After replacing the bulb, install the center interior light lens in the reverse order of removal.

Center

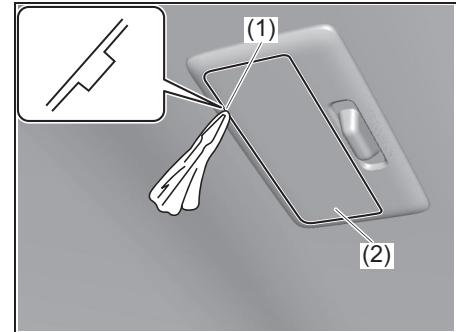


55T090460

- 1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

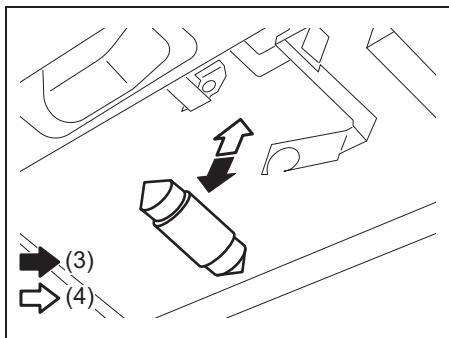


55T090050

- (3) Removal
 (4) Installation
- 2) Pull the bulb out and then insert a new one.
 - 3) After replacing the bulb, install the center interior light lens in the reverse order of removal.

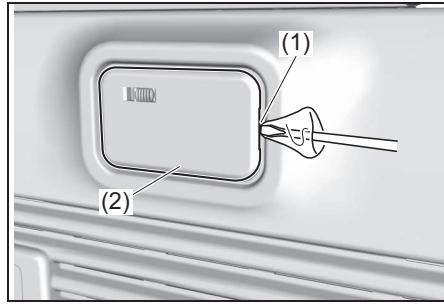Luggage compartment (if equipped)

80T090290

- 1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

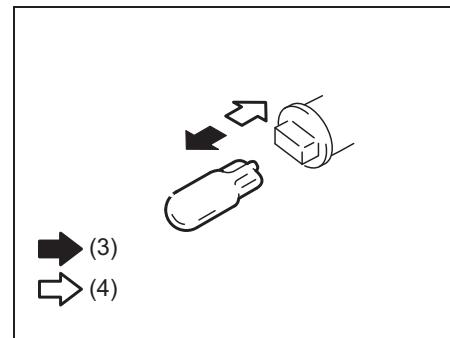


55T090040

- (3) Removal
 (4) Install
- 2) Pull the bulb out and then insert a new one.
 - 3) After replacing the bulb, install the luggage compartment light lens in the reverse order of removal.

INSPECTION AND MAINTENANCE

Headlight Washer Fluid

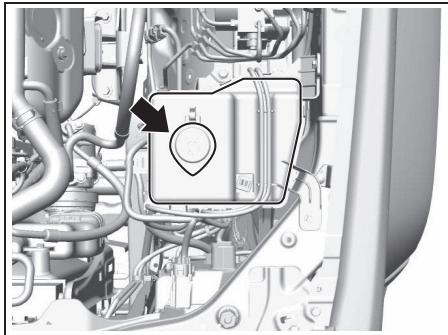


80T090300

Check that there is washer fluid in the tank in the engine room. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

! WARNING

- Do not use radiator antifreeze in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.


(Continued)

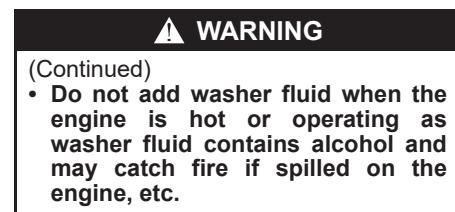

NOTICE

- Damage may result if the washer motor is operated with no fluid in the washer tank.
- In winter season, be sure to remove snow or ice on the nozzle at the front bumper before operating headlight washer.
- To avoid the frozen damage to the nozzle of the headlight washer, be sure to use the specific washer fluid.

Wiper Blades

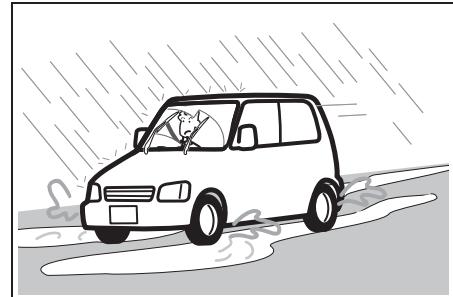

59RN09450

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

NOTICE

- To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.


NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult with a Maruti Suzuki authorized workshop for proper replacement method.

For Windshield Wipers


80T090510

- 1) Hold the wiper arm away from the window.

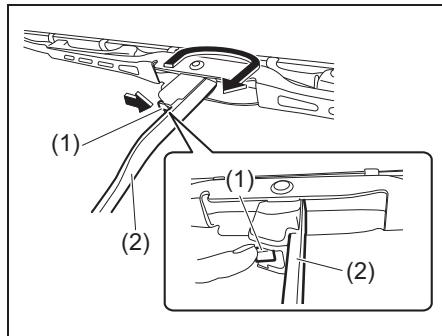


59RN09240

- 2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.

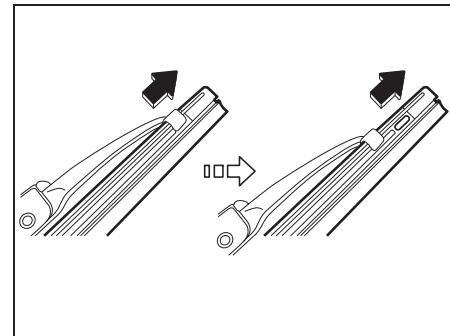

- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.


INSPECTION AND MAINTENANCE

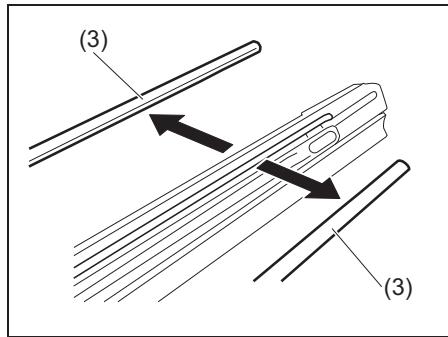

59RN09260

(3) Retainer

- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.

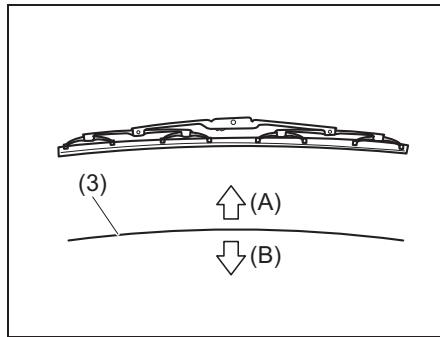


59RN09270

- (A) Up
(B) Down

NOTE:

When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustration.

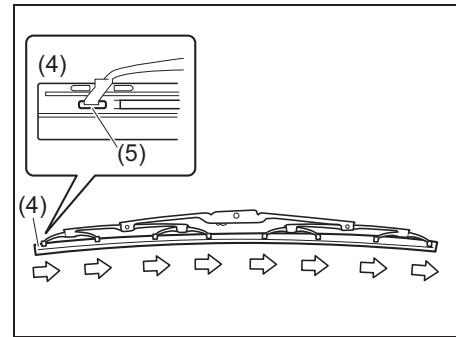


55T090710

(4) Locked end

- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

NOTICE

**Fit the stopper side (5) of the wiper blade in the driver's seat side.
Otherwise, the wiper blade may be misaligned while the wiper operates.**

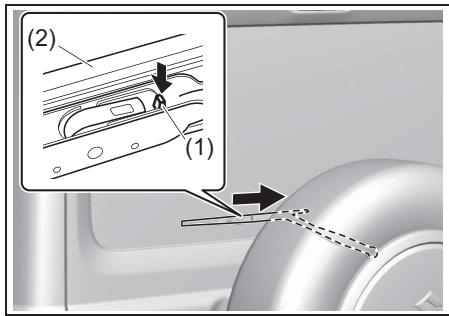
For Rear Window Wiper

(1) Lock end
 (2) Wiper blade

- 1) Lift the rear wiper arm a little from the rear window. Remove the wiper frame from the rear wiper arm by pushing the lock end (1) from the side of wiper blade frame and then by pushing the wiper frame to the direction of the arrow with the lock end (1) free from locking in the above illustration.


NOTE:

Return the rear wiper arm slowly after removing the rear wiper blade.

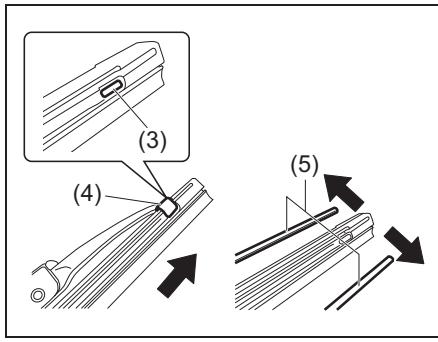


(3) Stopper
 (4) Hook
 (5) Retainer

- 2) Pull and remove the wiper blade from the wiper frame until the stopper (3) of the wiper frame is taken out of the hook (4). Remove the retainers (5) from the wiper blade.

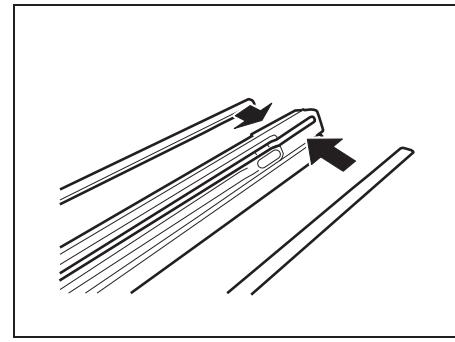


- 3) If the new blade is provided without the two metal retainers, install them from the old blade to the new one.

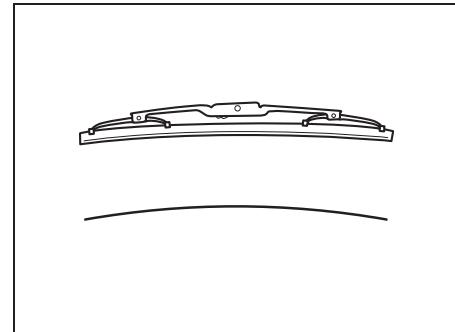


- 4) Install the retainers along the direction of camber as shown in the illustration.

INSPECTION AND MAINTENANCE

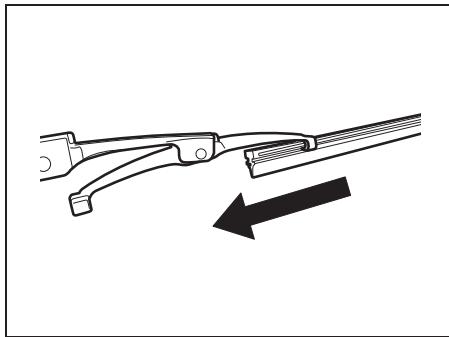


63R60180

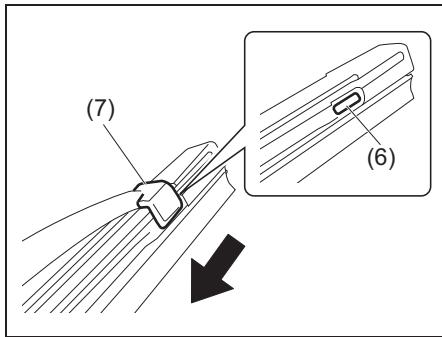

80T100110

- 5) Slide the new wiper blade into the wiper frame. When installing the wiper blade, put into the side that has no stopper on the wiper blade.
- 6) Fix the wiper blade securely by pushing the hook (7) into the stopper (6).
- 7) Reinstall the wiper frame to the rear wiper arm in the reverse order of removal. Make sure that the rear wiper blade is installed securely.

Windshield Washer Fluid

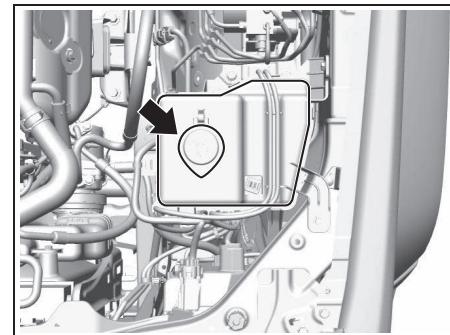

80T090300

Check that there is washer fluid in the tank in the engine room. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

! WARNING

- Do not use radiator antifreeze in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.
- Do not add washer fluid when the engine is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.

NOTICE


- Damage may result if the washer motor is operated with no fluid in the washer tank.
- Avoid use of hard water to prevent building of lime scale on the vehicle.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Air Conditioner Filter Replacement


Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

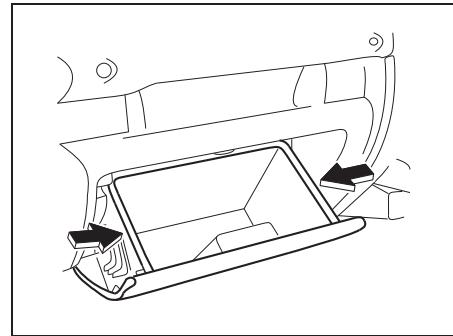

77R50340


- 1) To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.

INSPECTION AND MAINTENANCE

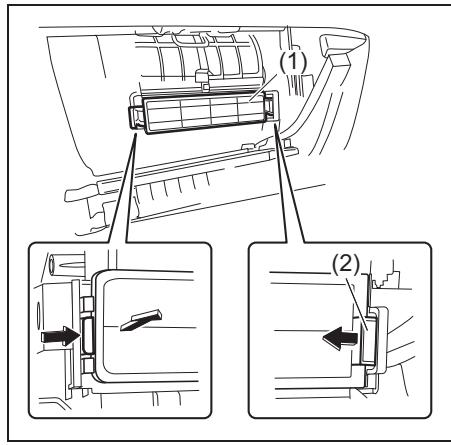


80T090310

- 2) Unlock the holder (1) and release it from the air conditioner unit.
- 3) Slide the tab (2) of the holder (1) in an arrow direction and remove the holder.

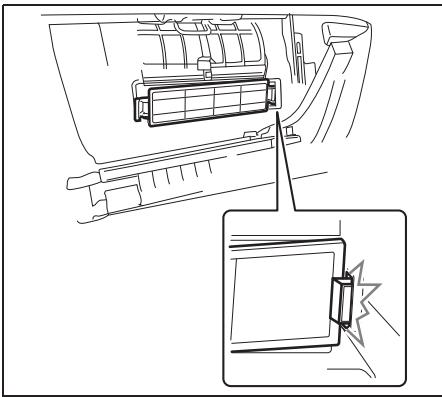

77R50420

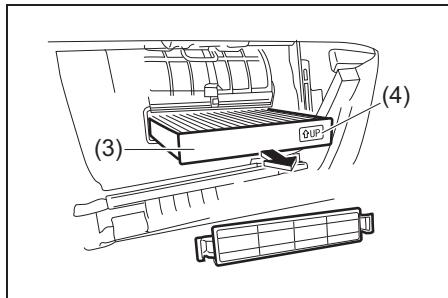

80T090320

- 4) Pull out the air conditioner filter (3)

NOTE:

When you install a new filter, check that the UP mark (4) faces upward.

NOTICE

Do not apply excessive force to the tab when removing the holder. Otherwise, the tab may be damaged.

Preparation Before Winter Season

Windshield Washer Fluid

To prevent windshield washer fluid from freezing, dilute it by the ratio according to outside temperature.

Lead-acid Battery

Check the liquid measure and the specific gravity of lead-acid battery. When it becomes cold, the battery performance gets worse. Also, it becomes difficult to start the engine by the weak battery. Refer to "Battery" in the "INSPECTION AND MAINTENANCE" section.


Engine Coolant

To prevent the inside of engine from corroding and freezing, use the designated engine coolant. Refer to "Specifications" in the "SPECIFICATIONS" section.

NOTE:

To check the concentration of engine coolant or replace it, ask your Maruti Suzuki authorized workshop.

Winter Tyres and Chocks

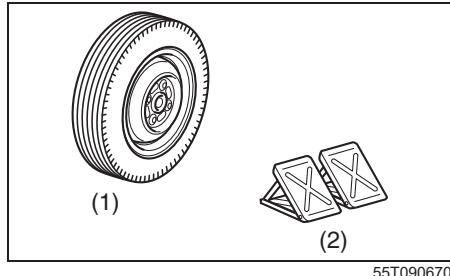

(1) Winter tyre
(2) Chock

Winter tyres and chocks are necessary to drive on the snow roads or the frozen roads.

Before Your Driving


Snow on the Roof



Remove snow on the roof before your driving. If you do not remove it, snow may fall during your driving and it may hinder your view.

INSPECTION AND MAINTENANCE


Frozen Wiper Blades

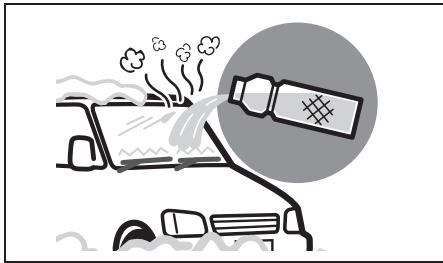

65P60060

Melt ice by pouring lukewarm water. After melting it, wipe off water to prevent refreezing. If you operate the wiper blades forcedly when ice stays freezing, the wiper rubbers may be damaged and the wiper blades may be broken.


Snow and Frost on the Window Glasses

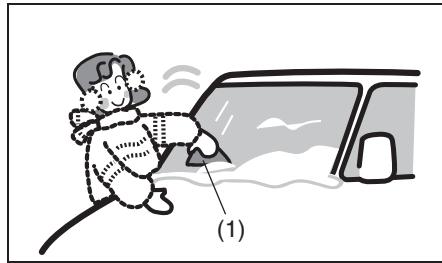

82K261

Use the plastic board (1). You can remove snow and frost not to damage the window glasses.

Frozen Outside Rearview Mirrors

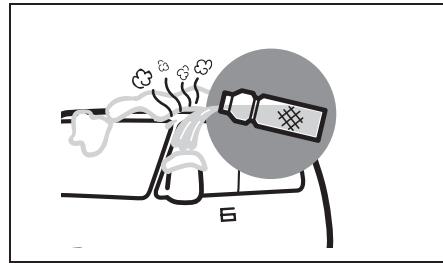


65P60070

Melt ice by pouring lukewarm water. After melting it, wipe off water to prevent refreezing. If you operate the outside rearview mirrors forcedly when ice stays freezing, the outside rearview mirrors may be broken.

NOTICE

- For the outside rearview mirror folding switch, check if you can move the mirrors by your hands first. Then, operate the switch. If you repeat to operate the switch when ice stays freezing, the mirrors may be broken.
- For the remote folding mirrors, deactivate the function of the remote folding mirrors in the cold condition where the outside rearview mirrors are frozen. If you repeat to operate them when ice stays freezing, the mirrors may be broken.

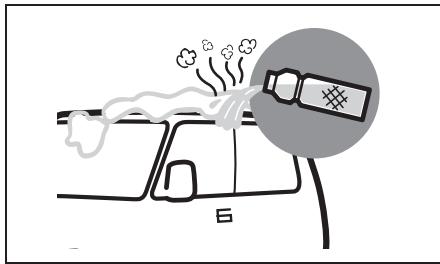Frozen Doors

65P60080

Snow Attaching to Shoes

80J312

Pour lukewarm water except the keyhole on the door. After opening the door, wipe off water. If you open the door forcedly when ice stays freezing, the rubbers around the door may be come off and broken.

Remove snow attaching to shoes before getting in your vehicle. If you do not remove it, you may slip when operating the pedals and the window glasses may mist easily because of high humidity inside the vehicle.

INSPECTION AND MAINTENANCE

When Parking the Vehicle Outside




80J315

NOTICE

- If you park the vehicle under eaves or trees, the roof of the vehicle may be dented by accumulated snow or fallen snow.
When it is snowing, do not park the vehicle under eaves or trees.
- If you park the vehicle outside when it is snowing, the wiper arms may be deformed or the wiper blades may be frozen on the windshield by snow weight. Raise the wiper arms away from the windshield when parking the vehicle.

EMERGENCY SERVICE

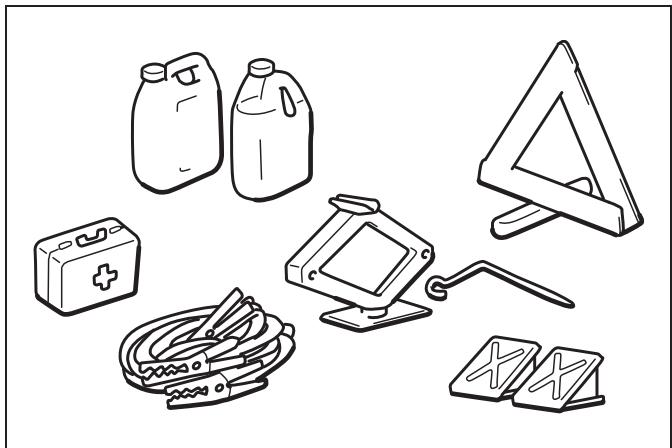


60G411

Towing Your Vehicle	10-1
Jacking Instructions	10-4
Changing Wheels	10-7
Jump-starting Instructions	10-10
Running Out of Battery	10-11
If You Get a Flat Tyre While Driving	10-11
Engine Trouble: Starter Does not Operate	10-12
Engine Trouble: Does not Start	10-12
Engine Trouble: Overheating	10-13
Warning Triangle	10-14


EMERGENCY SERVICE

Towing Your Vehicle

If you need to have your vehicle towed, contact a professional service. A Maruti Suzuki authorized workshop can provide you with detailed towing instructions.

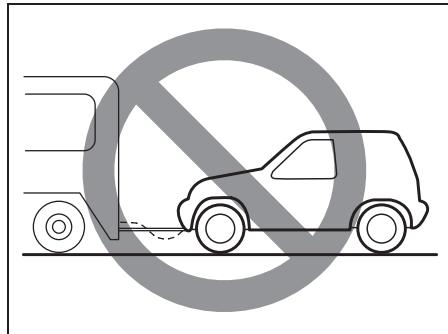

54G586

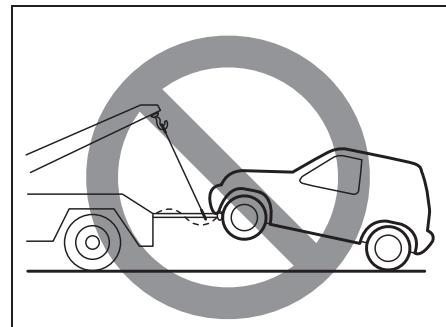

54G587

NOTICE

Observe the following instructions when towing your vehicle.

- To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.
- Using the frame hook, tow your vehicle on paved roads for short distances at low speed.


⚠ WARNING

When you tow your vehicle, refer to the following instructions to avoid accidents and damage to your vehicle. In addition, be sure to observe government and local requirements regarding vehicle lighting and trailer hitches or tow bars.

NOTICE

Do not tow your vehicle with the rear wheels directly on the ground (and the transmission in neutral). If you do, the transmission will be damaged fatally.

Before towing

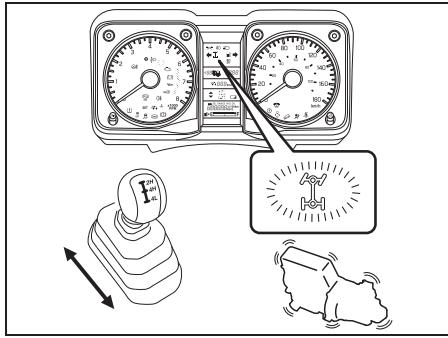


80TM10001

If you tow your vehicle with the front wheels on the ground, shift the transmission into Neutral and make sure the 4WD indicator on the instrument cluster comes on when you use the transfer lever to shift into 4-wheel drive high range position ("4H") and goes off when you use the transfer lever to shift into 2-wheel high drive position ("2H") with the engine running. If the 4WD indicator does not come on or it does not go off, that means, the air-locking hubs cannot be locked or unlocked, the vehicle must be towed with the front wheels lifted and the rear wheels on a dolly.

Towing a Disabled Vehicle

If your vehicle is disabled, and if the steering and drive train are in good condition (and the engine can be started for 4WD vehicles), the vehicle can be towed according to the instructions in this section. Your vehicle may also be towed by a tow truck with the front or rear wheels lifted, according to the instructions below.

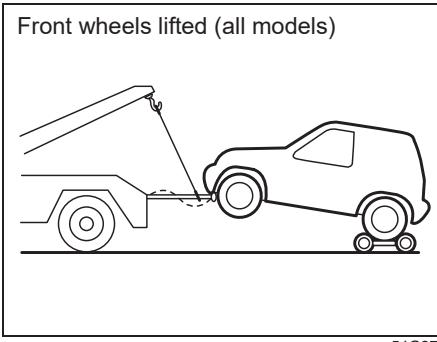


54G279

Front wheels lifted

Your vehicle may be towed by a tow truck with the front wheels lifted and a dolly under the rear wheels.

EMERGENCY SERVICE

Rear wheels lifted (all models)

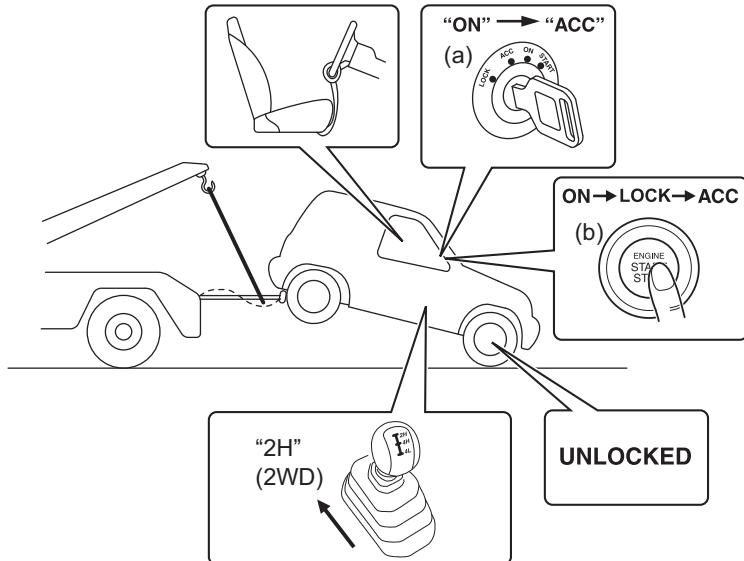

- (a) Vehicle without keyless push start system
(b) Vehicle with keyless push start system

80T100060

Rear wheels lifted

Your vehicle may be towed by a tow truck with the rear wheels lifted and the front wheels on the ground. Towing speed should not exceed 90 km/h (56 mph).

For this type of towing:

- 1) Shift the manual transmission to Neutral or the automatic transmission to "P" position and start the engine.
- 2) Shift the transfer lever to 2WD position ("2H").
- 3) Make sure the 4WD indicator on the instrument cluster is turned off.

NOTICE

If the air-locking hubs cannot be unlocked, tow the vehicle with the rear wheels lifted and a dolly under the front wheels.

- 4) Turn the ignition key to the "ACC" position or change the ignition mode to ACC to stop the engine and to unlock the steering wheel.

NOTICE

The steering column lock is not strong enough to withstand shocks transmitted from the front wheels during towing.

- 5) Make sure the front wheels are facing straight forward and secure the steering wheel with a steering wheel clamping device designed for towing service.


Jacking Instructions

- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "P" (Park) if your vehicle has an automatic transmission, or shift into "R" (Reverse) if your vehicle has a manual transmission.

⚠ WARNING


- Be sure to shift into "P" (Park) for an automatic transmission vehicle, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

- 3) Turn on the hazard warning switch if your vehicle is near traffic.

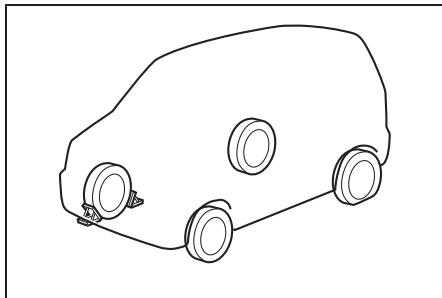


59RN10010

- 4) Block the front and rear of the wheel diagonally opposite to the wheel being lifted.

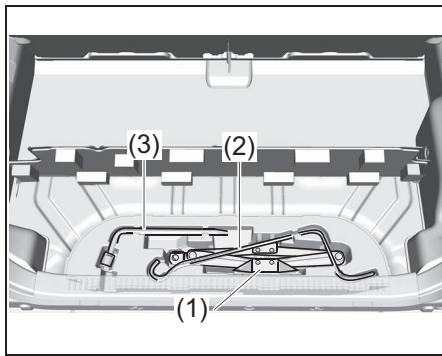


80T100070

- 5) Prepare the jack (1), jack handle (2) and wheel wrench (3).

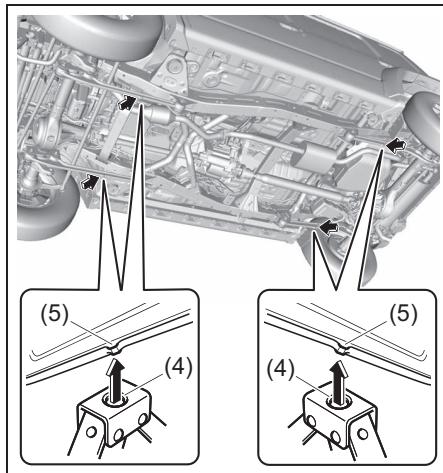

80T100040

- 6) Position the jack as shown in the illustration. Turn the jack handle mounting part clockwise by hand to unfold the jack and lightly contacts the jack-head hole (4) to the suspension arm boss (5) beneath the vehicle body.
- 7) Check that the jack-head hole (4) fits in the suspension arm boss (5) by shaking the jack-head lightly by hand.

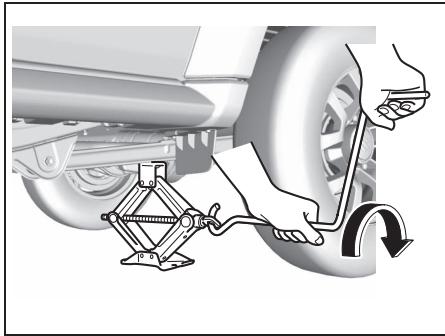

- 8) Install the jack handle to the jack.
- 9) Turn the jack handle and carefully lift the vehicle until the tyre is slightly off the ground. Do not raise the vehicle more than necessary.

⚠ WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than between the frame bosses near the wheel to be changed.
- Make sure that the jack is raised at least 25 mm before it contacts the boss. Use of the jack when it is within 25 mm of being fully collapsed may result in failure of the jack.
- Do not use wooden blocks or similar objects as a jack underlay.
- No person should place any portion of their body under a vehicle that is supported by a jack. Never place your hands or feet under the raised vehicle when it is supported by a jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

Raising Vehicle with Garage Jack


- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

- (1) Front
 (2) Jack stand
 (3) Rear
 (4) Garage jack
 (5) Jacking point for garage jack

⚠ WARNING

As the vehicle may get damaged or an accident may occur, observe the following points.

- Observe the designated points shown in the illustration.
- When holding the lifted vehicle, use the jack stand.
- When jacking up the front side or the rear side only, put a chock (commercially available) on front and back of the grounded tyre.

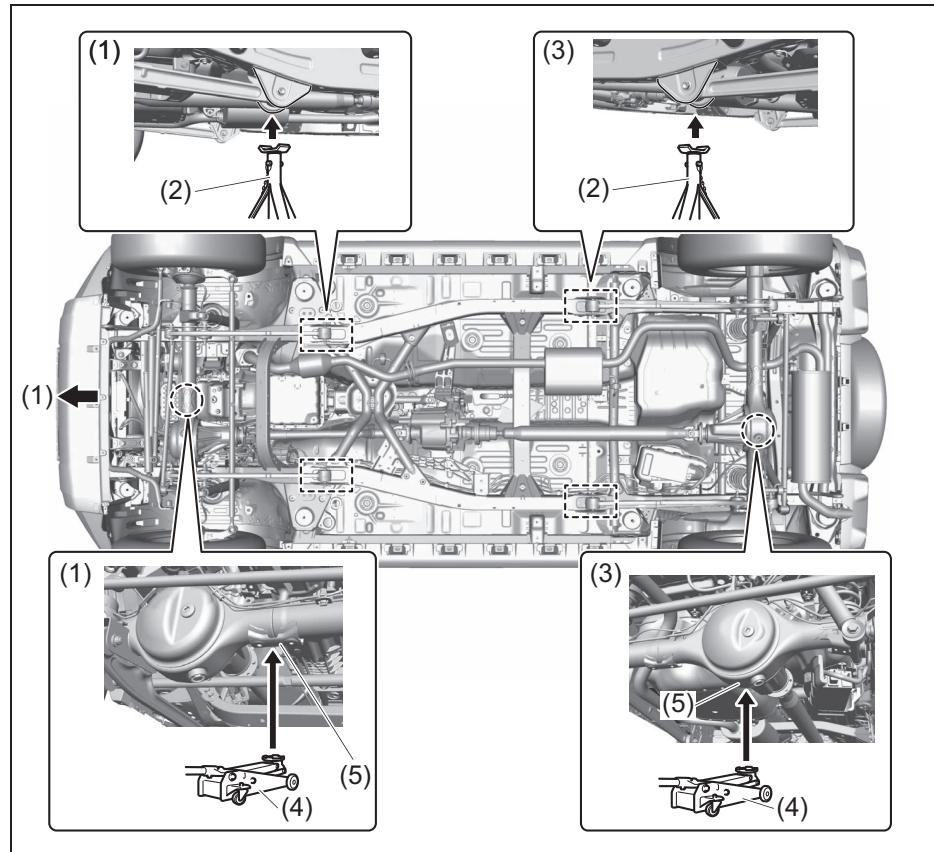

80T100030


EMERGENCY SERVICE

Changing Wheels


⚠ WARNING

Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorized workshop.


To change a wheel, use the following procedure:

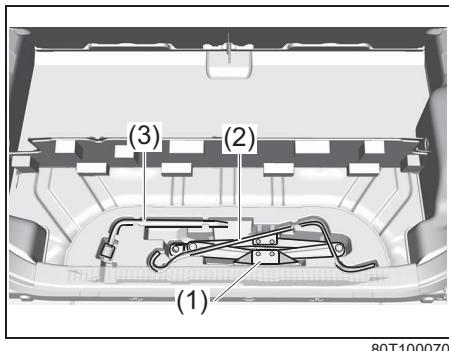


- 1) Prepare the jack (1), jack handle (2), wheel wrench (3).

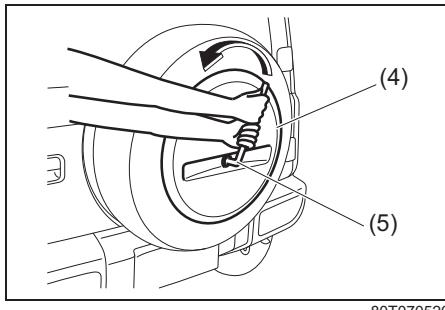

- 2) Remove the spare wheel half cover (4).
 - Remove the center nut by turning it counterclockwise with the wheel wrench (5).

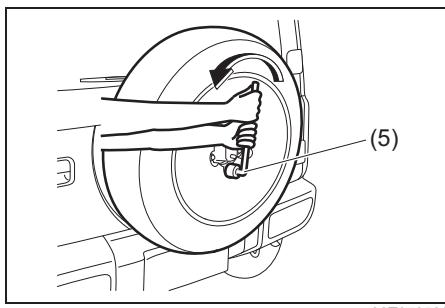

- 3) Remove three wheel nuts of the spare wheel by turning them counterclockwise with the wheel wrench (5).

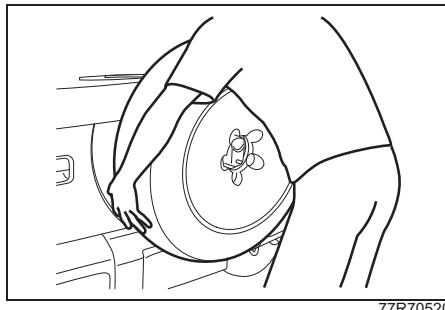

- 4) Remove the spare wheel with both hands.

NOTICE

Carefully lower the spare wheel to the ground.

- 5) Loosen the wheel nuts, but do not remove them.
- 6) Jack up the vehicle (refer to the "Jacking Instructions" in this section).


⚠ WARNING

- Shift into "P" (Park) for an automatic transmission, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.


CAUTION

Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven.

- 7) Remove the wheel nuts and wheel.

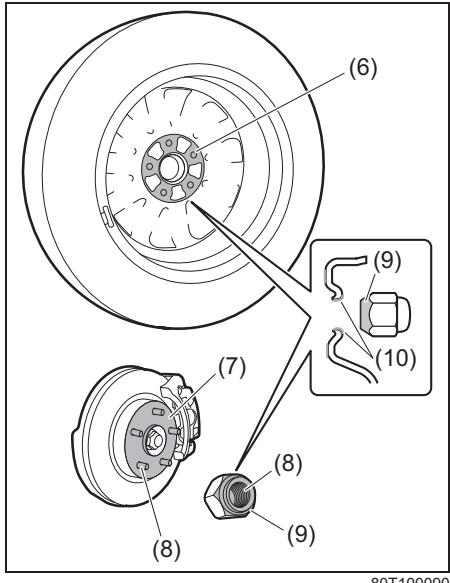

- 8) Before installing the new wheel, clean any mud or dirt off from the surface of the wheel (6), hub (7), thread part (8), surface of the wheel nuts (9) and surface of the wheel holes (10) with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 9) Install the new wheel and replace the wheel nuts. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

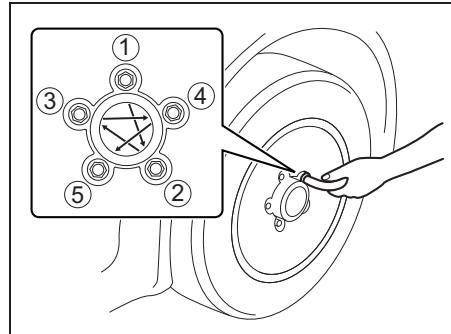


**Tightening torque for wheel nut:
100 Nm (10.0 kg-m, 72.3 lb-ft)**

- 10) Lower the jack and fully tighten the nuts in a crisscross fashion with a wrench as shown in the illustration.

WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorized workshop.


EMERGENCY SERVICE

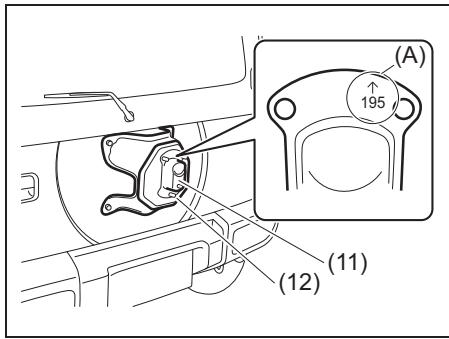

80T070510


- 11)Check the direction of the bracket (11) attached to the spare wheel carrier (12).
– The "195" mark (A) should be facing up.

NOTE:
If you install the bracket upside down, the center nut of the spare wheel half cover will not tighten securely.

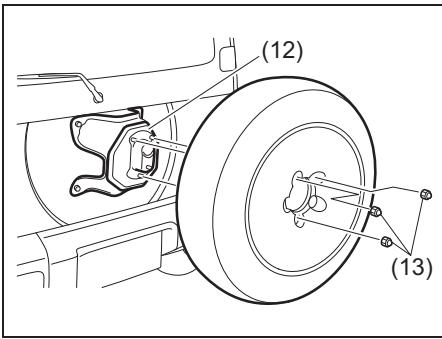

80T070540

- 12)Install the spare wheel to the spare wheel carrier (12).
– Hold the spare wheel firmly in both hands and align the bolts of the spare wheel carrier (12) with the wheel holes (three locations).
13)Tighten the wheel nuts (13) evenly and securely with the wheel wrench.
14)Check that the wheel nuts (13) are securely tightened.

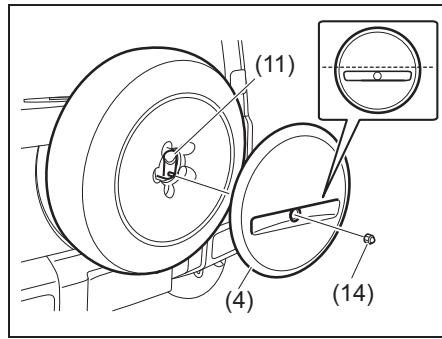

80T070550

- 15)Install the spare wheel half cover (4).
– Align the hole of the spare wheel half cover with the bolt of the bracket (11) so that the hole of the cover is positioned below the center of the spare wheel half cover as shown in the illustration.
– Tighten the center nut (14) securely with the wheel wrench.

NOTICE

Do not tighten the nut more than necessary. The spare wheel half cover may be damaged.

Jump-starting Instructions


⚠ WARNING

- Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Batteries in this condition may explode.
- When making jump lead connections, check that your hands and the jump leads remain clear from pulleys, belts or fans.
- Lead-acid batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- If the booster battery you use for jump-starting is installed in another vehicle, check that the two vehicles are not touching each other.
- If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorized workshop.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions below.
If you are in doubt, call for qualified road service.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

- 1) Use only a 12-volt lead-acid battery to jump-start your vehicle. Position the good 12-volt lead-acid battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- 2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

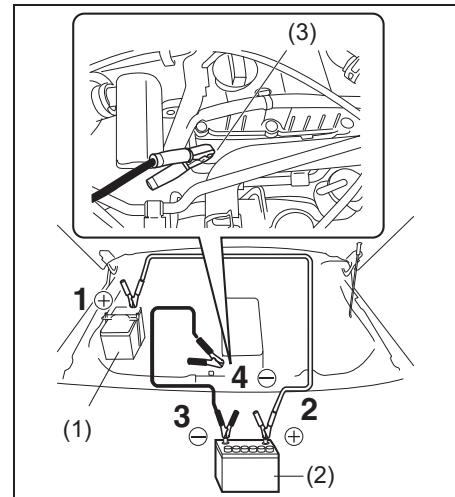

78RB08004

- 3) Connect jump leads as follows:

1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
2. Connect the other end to the positive (+) terminal of the booster battery (2).
3. Connect one end of the second jump lead to the negative (-) terminal of the booster battery (2).
4. Make the final connection to an unpainted, heavy metal part (3) of engine cylinder head in the vehicle with the discharged battery (1).

⚠ WARNING

Never connect the jump lead directly to the negative (–) terminal of the discharged battery, or an explosion may occur.

⚠ CAUTION

Connect the jump lead to the engine mount bolt securely. If the jump lead disconnects from the engine mount bolt because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged battery.
- 6) Remove the jump leads in the exact reverse order in which you connected them.

Running Out of Battery

In the following cases, the lead-acid battery is running out.

- The starter does not engage when attempting to turn on the engine. Or, the starter rotation is too weak to make the engine start.
- The headlight illumination is extremely low or the horn volume is low.

If You Get a Flat Tyre While Driving

Firmly hold the steering wheel and carefully apply the brakes to slow down the vehicle and stop it in a safe place.

Engine Trouble: Starter Does not Operate

- 1) Try turning the ignition switch to "START" position or try pressing the engine switch to change the ignition mode to START with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the battery terminal contact is poor. Recharge the lead-acid battery or correct battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorized workshop.

Engine Trouble: Does not Start

- Make sure that your vehicle has enough fuel and battery. If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine. Refer to "Starting / Stopping Engine (Vehicle without Keyless Push Start System)" or "Starting / Stopping Engine (Vehicle with Keyless Push Start System)" in "OPERATING YOUR VEHICLE" section. If the engine still does not start have your vehicle inspected by a Maruti Suzuki authorized workshop.
- Do not operate the starter motor for more than 12 seconds.

(Vehicle with keyless push start system)

NOTE:

If the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or if there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.

EMERGENCY SERVICE

Engine Trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating during driving:

- 1) Turn off the air conditioner.
- 2) Take the vehicle to a safe place and park.
- 3) Run the engine at a normal idle speed for a few minutes until the high engine coolant temperature warning light goes off.

! WARNING


If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

If the high engine coolant temperature warning light does not go off:

- 1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump, radiator hoses and heater hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
- 3) If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in "INSPECTION AND MAINTENANCE" section.)

NOTE:

If engine overheats and you are not sure what to do, consult with a Maruti Suzuki authorized workshop.

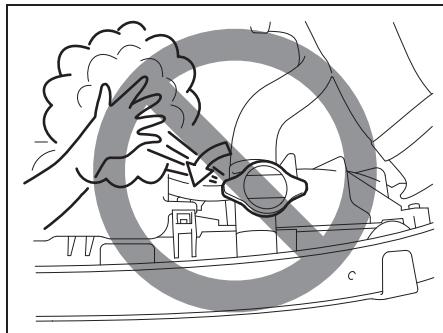


79J007

! WARNING


- It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan. These electric fans can automatically turn on without warning.

Warning Triangle

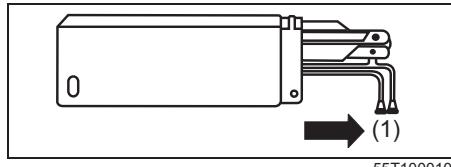


55T100010

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50–100 m (164–328 ft). The reflecting side of the triangle should face the oncoming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

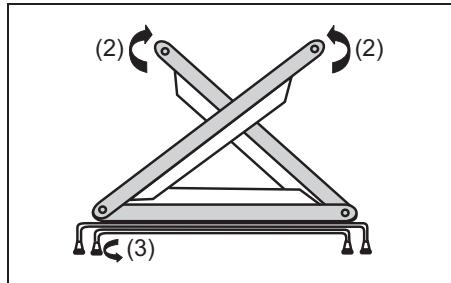

55T100020

- Remove the warning triangle carefully from the cover as shown by arrow (1).
- Open both the reflector arms as shown by arrow (2) and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow (3). Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

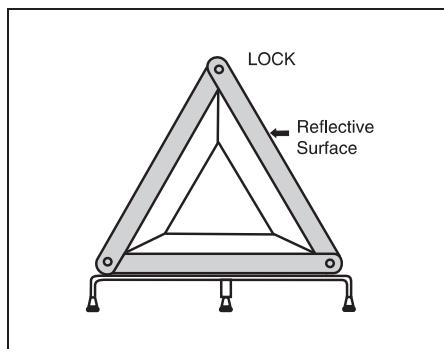


55T100030

EMERGENCY SERVICE

MEMO

APPEARANCE CARE

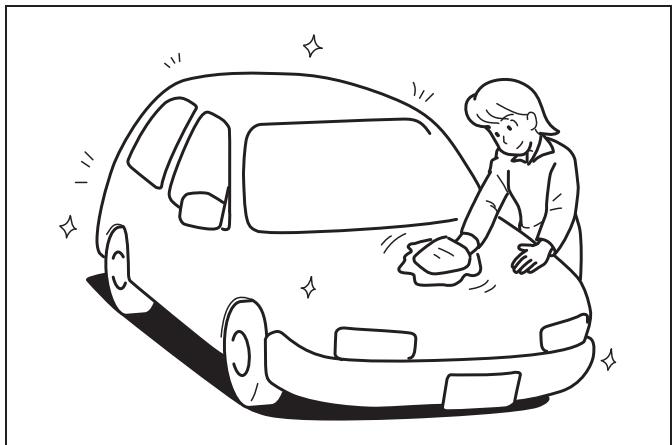

60G412

Corrosion Prevention	11-1
Cleaning Exterior	11-2
Cleaning Interior	11-7

APPEARANCE CARE

Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information about Corrosion

Common causes of corrosion

- 1) Accumulation of road salt, dirt, moisture or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- 2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.
- 3) Any or all of the below mentioned points:
 - Continuous exposure to sunlight.
 - Hard water & sea water coming in contact with vehicle.
 - Foot rubbing (skirting).

Environmental conditions which accelerate corrosion

- 1) Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
- 2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.

- 3) Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even when other body sections are completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter and the exhaust pipes. It may catch a fire if the undercoating substance becomes overheated.

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing.

Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible.

If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Cleaning Exterior" in this section.

Remove foreign material deposits

Foreign materials such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Check that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area

Park your vehicle to save it from continuous exposure to direct sunlight. Do not park your vehicle in a damp, poorly-ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

Use mud and gravel shields

Use mud and gravel shields

The use of mud and gravel shields will help protect your vehicle, especially if you frequently drive on gravel or salted roads. Full-size shields, which extend as close to the road as is practical, are the best. The fittings for such shields should also be corrosion resistant. Please check with your Maruti Suzuki authorized workshop for information on these shields.

Cleaning Exterior

For Keeping the Paintwork Beautiful

To keep your vehicle's beautiful appearance for a long term, daily care is important.

- For parking and storing the vehicle, we recommend garages with good ventilation and locations with roofs.
- The following situations may cause rusting and discoloration of the paint. Wash your vehicle promptly.
 - When driving in coastal areas or on roads sprayed with antifreeze agent (Wash the underside of the vehicle and around the wheel wells especially)
 - When bird droppings, dead insects, sap, iron dust, soot or smoke residue, coal tar, etc., adhere to the paint or when the vehicle gets wet with acid rain
 - When the vehicle is dirty with dust or mud
- Give the vehicle a wax about once a month or whenever the water-repelling ability of the painted surfaces has declined. Follow all instructions on the package of the wax (sold separately).

APPEARANCE CARE

NOTE:

Do not use wax on plastic parts that are not coated. Waxing these surfaces could result in a whitened or uneven appearance.



80J302

- Chips from flying rocks, scratches, etc. can cause rust. Repair these areas as soon as possible.

NOTICE

- When repairing scratches on painted surfaces, consult with a Maruti Suzuki authorized workshop. Using an inappropriate material for repair could cause damage to the paint.
- It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Washing

WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to check that they have maintained their normal effectiveness.




- When washing or waxing the vehicle, do not lean on the vehicle body or do not push it hard. This might cause it to deform.

(Continued)

NOTICE

(Continued)

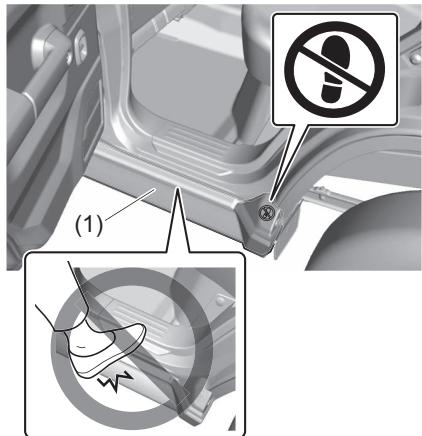

80T030330

- When washing or waxing the vehicle, do not put your foot on the side sill splash guard (1). This might cause it to damage.

Washing by hand

80J303

When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:

- Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE**When washing the vehicle:**

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- Getting water or other liquids into the engine components may cause an engine starting problem or an electrical components to fail. To avoid damaging engine components, do not spray the engine components with water or other liquids.



80TM11001

- Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

- To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.

APPEARANCE CARE

- 3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
1. Clean all damaged spots and allow them to dry.
 2. Stir the paint and touch up the damaged spots lightly using a small brush.
 3. Allow the paint to dry completely.

Washing by an automatic car wash

NOTICE

If you use an automatic car wash, check that your vehicle's body parts, such as antenna, cannot be damaged. If you are in doubt, consult the car wash operator for advice.

Washing by a high-pressure cleaner

NOTICE

If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.

- Pointing the nozzle to the surrounding parts of camera can allow water to enter the camera. This may cause a fire, malfunction, dew condensation, etc.
- For vehicle with rear view camera, do not point to the nozzle to the camera.
- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
- Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.

Caring for the Windshield

If an oil film, etc. adheres to the windshield and the windshield wipers cannot clean it, use a glass cleaner (sold separately) to clean the windshield by hand.

Caring for Lights

Wash the lens part of light and wipe it off with a soft cloth.

NOTICE

- Do not use the detergent including organic solvent on the lens surface of the light. The lens surface may be cracked.
If you use the detergent including organic solvent, rinse it off with ample water.
- Do not wipe the lens surface by wax or a hard brush. This may damage the lens or hasten its deterioration.

Caring for Cameras

Wash the lens part of camera and wipe it off with a soft cloth. If the lens part is very dirty, use a mild detergent.

NOTICE

- Using alcohol, benzine, thinner etc. to wipe the camera may cause discoloration.
When you wipe the camera, do not use alcohol, benzine, thinner etc.
- Hard coating is used for the lens of camera not to be easily scratched. However, if you use the brush for a vehicle, it may be difficult for you to see the image on the camera.
Be very careful not to scratch the lens.
- The resin cover of the camera may be damaged if an organic solvent adheres to the camera.
Do not let organic solvent, body wax, oil film remover, or glass coating agent adhere to the product.
- If the camera is subjected to a sudden temperature change, it may be damaged.
Do not expose the camera to sudden temperature changes such as melting frozen snow with hot water.


Caring for Aluminum Wheels

NOTE:

- Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaners will cause permanent spots, discoloration and cracks on the finished surface and damage to the center cap.
- Do not use a bristle brush and a soap containing an abrasive material. These will damage the finished surface.

APPEARANCE CARE

Waxing

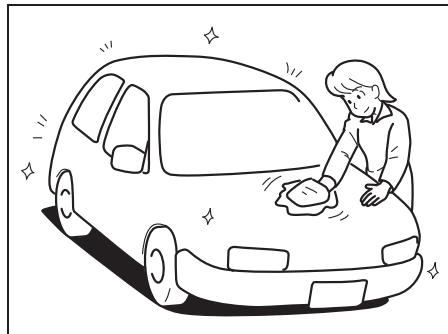

60G412

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

Cleaning Interior

- Clean out any dirt, sand, etc. using a vacuum cleaner, or wipe off the surfaces using a soft cloth moistened with cold or lukewarm water. If the interior is left dirty, scratches can occur.
- Quickly clean off any liquids such as those from air fresheners or spilled beverages by using tissue paper or a soft cloth. Leaving spilled liquids can cause staining, discoloration or cracking.

⚠ WARNING

- Do not spray the interior with water or other liquids. If the navigation equipment, audio components, switches, wiring under the floor, or other electrical parts become wet, there is a risk of fire or malfunction, and the SRS airbag system could fail to function normally.
If you pour water or spill a drink in the vehicle, consult with a Maruti Suzuki authorized workshop as soon as possible for inspection.

NOTICE

- Do not use chemical products containing the following ingredients. Doing so may cause staining, discoloration, deformation, or a deterioration in strength, etc.
 - Solvents such as benzine, gasoline, thinner, or sticker peeling agents
 - Acidic or alkaline detergents
 - Bleaches or dyes
- Do not use chemical products that include silicone for cleaning the areas around the air conditioner, electronic equipment such as the audio or navigation systems or switches. Contact with silicone may cause them to malfunction.
- Do not leave colored leather goods, furs, vinyl articles, etc. in your vehicle for long periods. Doing so could cause discoloration or deformation of the interior.

NOTE:

To prevent liquid-based air fresheners from spilling, it is recommended to fix their containers in place, or use solid-type air fresheners instead.

Vinyl Upholstery

Prepare a solution of soap or mild detergent dissolved in warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric Upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

Leather Upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- *In order to keep the leather upholstery looking good, it should be cleaned at least twice a year.*
- *If the leather upholstery becomes wet, immediately wipe it dry with a tissue paper or a soft cloth. Water may cause the leather to harden and shrink if it is not wiped off.*
- *When parking on sunny days, select a shady place or use a sunshade. If the leather upholstery is exposed to the direct sunlight for a long time, it may discolor and shrink.*
- *As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.*

Seat Belts

Clean seat belts with mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric of the belts.

Vinyl Floor Mats

Ordinary dirt can be removed from vinyl with water or the mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets

Remove the dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

APPEARANCE CARE

Instrument Panel and Console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.


! WARNING

Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components. Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/or lead to non-functioning of the part or may cause fire.

Inside of the Tailgate Window


NOTE:

Wipe the window along the antenna wires or heat wires by a soft cloth dampened with water to avoid damaging these wires.

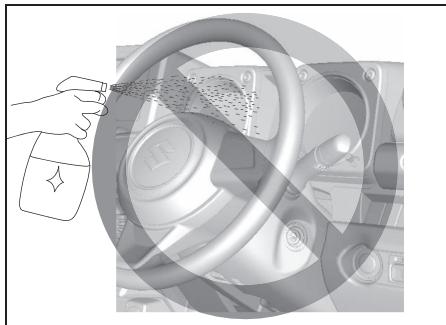

80TM11002

SPECIFICATIONS

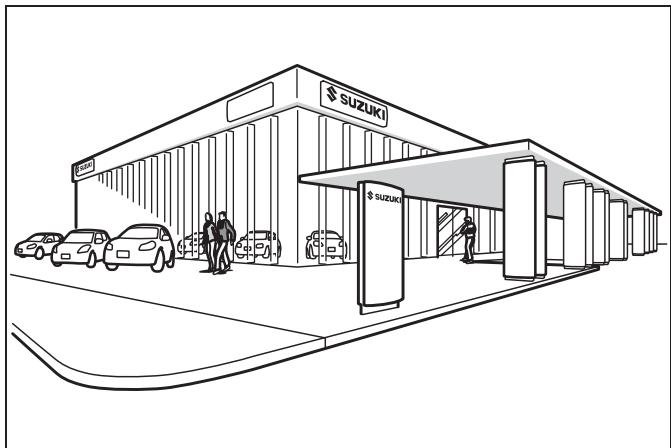


84MM01001

Vehicle Identification	12-1
FASTag (if equipped)	12-2
High Security Registration Plate (HSRP) (if applicable) ..	12-3
Fuel Recommendation	12-4
Specifications	12-5


SPECIFICATIONS

Vehicle Identification

Chassis Serial Number

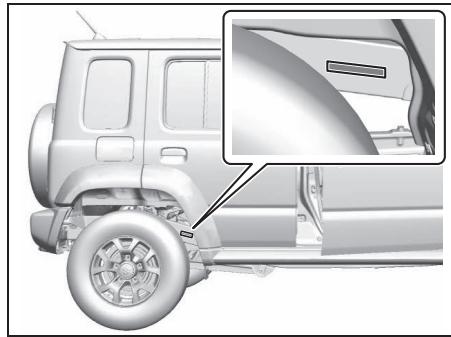


80T120030

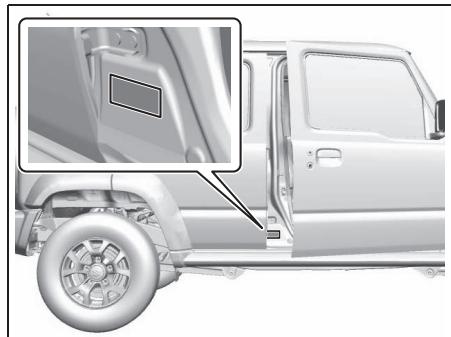

80T120040

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist a Maruti Suzuki authorized workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorized workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

Engine Serial Number

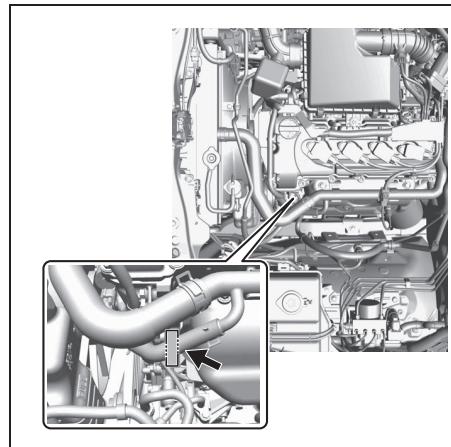


80T120020

The engine serial number is stamped on the cylinder block as shown in the illustration.


FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.


In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorized workshop.

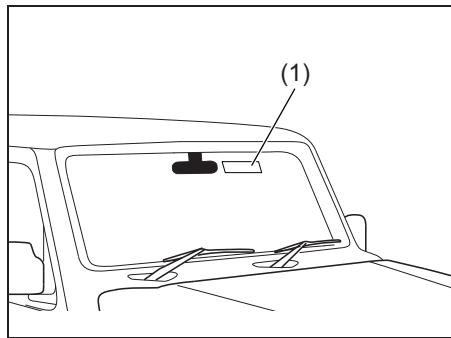

As seen from inside of the vehicle

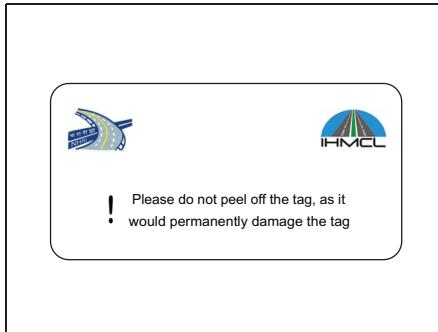

As seen from outside of the vehicle

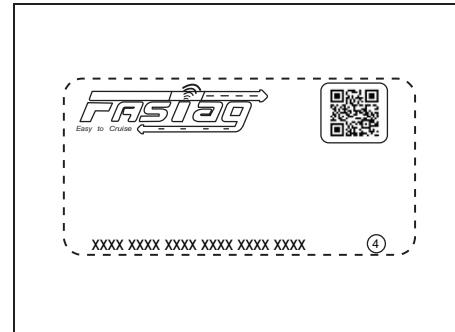

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.

SPECIFICATIONS


High Security Registration Plate (HSRP) (if applicable)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.

HSRP contains;


- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- Third license plate on front windshield.

Third License Plate

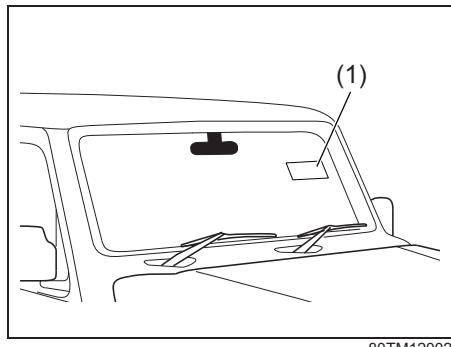

(1) Third license plate

Third license plate - As seen from outside of the vehicle

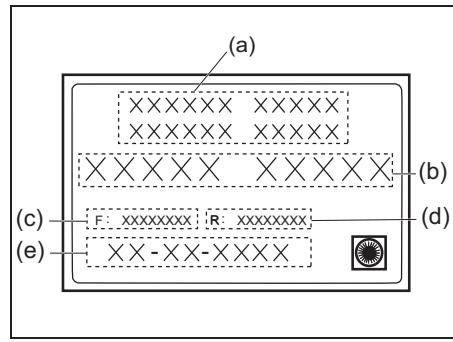

- (a) HSRP issuing authority name
- (b) Vehicle registration number
- (c) Unique laser number - Front plate
- (d) Unique laser number - Rear plate
- (e) Date of 1st registration
(in DD-MM-YYYY format)
- (f) Green strips (BS6 vehicle)

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:


- Any attempt to remove the third license plate from the windscreens will result in permanent damage to the label.

- Use of chemical cleaners to clean the windscreens area where the label is mounted can damage the same.

- Use of any sharp objects on the label can damage the label.

- In the event of any replacement of the third license plate, may please contact the approved authority.

Third license plate - As seen from inside of the vehicle

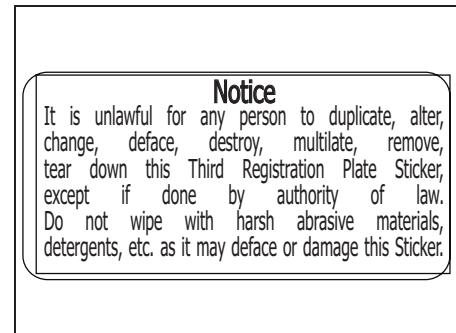

Notice

It is unlawful for any person to duplicate, alter, change, deface, destroy, mutilate, remove, tear down this Third Registration Plate Sticker, except if done by authority of law. Do not wipe with harsh abrasive materials, detergents, etc. as it may deface or damage this Sticker.

80T120100

NOTE:

The picture shown is for indicative purpose only.

NOTE:

Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.

Fuel Recommendation

Petrol Engine

To avoid damaging catalytic converter, you must use unleaded petrol with an octane number (RON) of 91 or higher.

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol, also known as gasohol, are commercially available in the country and can vary with location. Gasoline Ethanol blend up to E20 can be used as fuel for this vehicle.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

CAUTION

Use of spurious, low quality, adulterated fuel can cause damage to the engine and engine auxilliaries, affect functioning of engine and degrade engine performance including but not limited to engine seizure.

NOTICE

- The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.
- Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

SPECIFICATIONS

Specifications

NOTE:

Specifications are subject to change without notice.

M/T: Manual transmission

A/T: Automatic transmission

ITEM: Dimensions		UNIT: mm
Overall length		3820 (Front bumper to rear bumper) 3865 (Front bumper to spare tyre) 3985 (Front bumper to spare wheel half cover)
Overall width		1645
Overall height		1720
Wheelbase		2590
Track	Front	1395
	Rear	1405

ITEM: Mass (weight)		UNIT: kg
Curb mass (weight)	M/T	1195–1200
	A/T	1205–1210
Gross vehicle mass (weight) rating		1545
Permissible maximum Axle Weight	Front	765
	Rear	880

SPECIFICATIONS

ITEM: Engine	
Type	K15B
Number of cylinders	4
Bore	74.0 mm
Stroke	85.0 mm
Piston displacement	1462 cm ³
Compression ratio	10.0: 1

ITEM: Electrical	
Standard spark plug	NGK KR6A-10
Battery	12V ISS N55 ^{*1} 20HR 45AH CCA 480A(JIS)
Fuses	See "INSPECTION AND MAINTENANCE" section

*1: Your vehicle is equipped with a lead-acid battery for exclusive use of the ENG A-STOP system.

When replacing the lead-acid battery, make sure to select the specified type for ENG A-STOP system. Consult with a Maruti Suzuki authorized workshop for replacing the lead-acid battery.

SPECIFICATIONS

ITEM: Recommended fuel / lubricants and capacities (approx.)			
Fuel	See "FUEL RECOMMENDATION" section	40 L	
Engine oil	Classification: API SN or SP ILSAC GF-6 Viscosity: SAE 0W-16	3.6 L (replacement with oil filter)	
Engine coolant	SUZUKI LLC: Super (Blue) Coolant	4.8 L (including reservoir tank)	

ITEM: Recommended fuel / lubricants and capacities (approx.)			
Manual transmission oil	MARUTI GENUINE GEAR OIL 75W	1.2 L	
Automatic transmission oil	SUZUKI ATF 3317 or Mobil ATF3309	5.7 L	
Differential oil	Front	1.6 L	
	Rear	1.3 L	
Transfer oil	SUZUKI GEAR OIL 75W-85	1.21 L	
Brake fluid / Clutch fluid	MARUTI GENUINE BRAKE FLUID (MGBF) or DOT 3.	Refill to the proper oil level according to the instructions in "INSPECTION AND MAINTENANCE" section.	
Windshield washer fluid	–	4.0 L	

SPECIFICATIONS

ITEM: Wheels and tyres		
Tyre size, front and rear		195/80R15 96S ^{*1}
Rim size	with steel wheels	15X5 1/2J
	with aluminum wheels	15X5 1/2J
Tyre pressures		For the specified tyre pressure, see the tyre information label located on the driver's door lock pillar.
Recommended snow chain		Radial thickness: 20 mm, axial thickness: 20mm
Recommended snow tyre		195/80R15 ^{*2}

*1 If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed symbol.

*2 If you prepare snow tyres;

- Check that they are tyres of the same size, structure and load capacity as the originally installed tyres.
- Mount the snow tyres on all four wheels.
- Understand that the maximum permissible speed of snow tyres is generally less than the originally installed tyres.

Consult with a Maruti Suzuki authorized workshop for further information.

ITEM: Lights		WATTAGE	BULB No.
Interior light	Front	12V 10W	C10W
	Center	12V 10W	C10W
	Luggage compartment	12V 5W	W5W

• If you need to replace the following bulbs indicated in the above table, consult with a Maruti Suzuki authorized workshop.

*1 Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

SPECIFICATIONS

MEMO

SERVICE NETWORK (AS ON 31.10.2023)

- MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS
- MARUTI AUTHORISED SERVICE STATIONS (MASSes) :
 - 'A' CATEGORY MASSes (**MARKED)
Free & paid Service, Major repairs & Accidental repairs
 - 'B' CATEGORY MASSes (* MARKED)
Free & paid Service & Major repairs
 - 'C' CATEGORY MASSes (##MARKED)
Free & paid Service & Minor repairs
 - 'D' CATEGORY MASSes (#MARKED)
Free Service & Minor repairs

NOTE:

Certain MASSes are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki NEXA Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit www.marutisuzuki.com or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE, RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH.: 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO.- 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NO. TCG 3/3, VIBHUTI KHANDEM, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOT NO#15, ACTION AREA IID, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALAYA, MIZORAM, NAGALAND, TRIPURA

SERVICE NETWORK (AS ON 31.10.2023)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED Plot No-GEN 25 + 25 B/2,TTC INDUSTRIAL AREA,PAWANE VILLAGE,THANE BELAPUR ROAD,NAVI MUMBAI- 400705 PH NO-022 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 - 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 10th Floor, Block A, Global Infocity Park, No.40, Anna Nedunchalai, Kandanchavadi, Perungudi, Chennai, Tamil Nadu – 600096 PH. - 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING,VITTAL MALLYA ROAD,BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITD 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-66729999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg,Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact : 0755 6051555
Calicut	Maruti Suzuki India Limited, Ground Floor, Aarpees Arcade, YMCA Cross Road, Opp. Indusind Bank, Kozhikode, Kerala -PIN 673001 Phone:- 0495-2723151
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph.- 0422-2221091
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph. - 0452-4200203
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111

SERVICE NETWORK (AS ON 31.10.2023)

DETAILS OF AREA OFFICES	
Area Office Location	Area Office Address
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo,Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph.- 0771-4039643
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001
Vijayawada	Maruti Suzuki India Limited, Vaishnavi Complex, 4th Floor, Unit 2,Opposite Executive Club, Vijayawada, -530002,
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299

ANDHRA PRADESH

ANANTHAPUR

- SRI DURGA (1BNA-01), NO.124, SOMALADODDI, ANANTHAPUR, ANDRA PRADESH - 515004 PH :9885183851.

GUNTUR

- JAYLAXMI (G5NA-01), D-NO:199/2, OPP AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001 PH :9959844644.

NELLORE

- BHARGAVI AUTO (ABNA-01), SURVEY NO 245B, CHEMUDUGINTA VILLAGE, NH-16, ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002 PH :8886682222.

ONGOLE

- JAYALAXMI (BYNA-01), SURVEY NO:194/2, BESIDE NH 5, MUKTHINUTHALAPADU, ONGOLE, ANDHRA PRADESH - 523225 - 523225 PH :9492133433.

RAJAHMUNDRY

- SB MOTORS (C5NA-01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDRY, ANDRAPRADESH-533106 - 533016 PH :9248727888.

SRIKAKULAM

- VARUN MOTORS (W6NA-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIKAKULAM DISTRICT, ANDHRA PRADESH - 532401 PH :9885317344.

VIJAYAWADA

- VARUN MOTORS (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. - 521137 PH :6309955655.
- PARAMSHIVA MOTORS (26NB-26-01), NO. 20-1-34, C K REDDY ROAD, AYODHYA NAGAR, VIJAYAWADA, ANDRAPRADESH- 520003. - 520003 PH :9866551078.

ASSAM

BONGAIGAON

- BHARATI MOTORS (7NNA-01), CHAPAGURI RD, NEAR POST OFFICE, NORTH BONGAIGAON, AMGURI, BONGAIGAON, ASSAM 783380 - 783380 PH :7002350887.

DIBRUGARH

- VISHAL CAR WORLD (C1NA-01), MOHPUALIMORA GOHAIN GAON, A.T ROAD, DIBRUGARH, ASSAM - 786008 PH :8000900008.

GUWAHATI

- PODDAR AUTO (09NA-01), AT ROAD ,KAMAKHYA GATE ,GUWAHATI,KAMRUP-781009 - 781009 PH :8085957586.
- BIMAL AUTO (09NB-01), DREAMLAND APPARTMENT,NAHRANI PATH,DISPUR LAST GATE, GUWAHATI - 781006 (ASSAM) PH :9864074525.

JORHAT

- RD MOTOR (G9NB-01), M/S R D MOTORS PVT LTD, DHAKPATA, NEAR TINALI, JORHAT -785006 - 785006 PH :7002099547.

SILCHAR

- JAIN UDHYOG (J2NA-01), R.S. PATTAA NO 149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH :9436121557.

TEZPUR

- RD MOTOR (T1NA-01), SOLAGAN VILLAGE ,GOROMARI ,SONABEEL BEFORE MAA KALYANI PETROL PUMP, TEZPUR - 784105 PH :9836872710.

TINSUKIA

- VISHAL CAR WORLD (J4NA-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD),A.T. ROAD, LAIPULI,TINSUKIA ,ASSAM -786183 PH :9664211022.

BIHAR

PATNA

- ALANKAR AUTO SALES AND SERVICE (15NA-15-01), 70 FEET, BYEPASS ROAD, SARISTABAD, PATNA - 800020 PH :9262899356.
- REESHAV AUTOMOBILES (15NB-15-01), MUKDUMPUR,DIGHA,90 NO GATE, PATNA - 800012 PH :7369944132.
- SHREEGOPAL AUTO (15NC-15-01), BHIKACHAK, ANISABAD, NEW BYEPSS ROAD, OPP. SITA RAM PATH, PATNA - 800002 PH :9262853333.

PURNEA

- SEEMANCHAL MOTORS (6VNA-01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31,GUALBBAGH,PURNEA,BIHAR - 854326 PH :9334710055.

CHANDIGARH

CHANDIGARH

- AUTOPACE (FEB) (07NA-01), PLOT NO. 37, INDUSTRIAL AREA – PHASE 1, CHANDIGARH - 160002 PH :7087119796.
- AUTOVOGE PVT LTD (07NC-02), PLOT NO 29/4, INDUSTRIAL AREA PHASE 2, CHANDIGARH - 160002 PH :8725099835.
- NAVEDSH AUTO (07NE-01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH - 160002 PH :8827057534.

CHATTISGARH

AMBIKAPUR

- MAHAMAYA (AENA-01), AJAB NAGAR,MAHATHMA GANDHI ROAD,AMBIKAPUR - 497001 PH :9516609632.

BILASPUR

- SATYA AUTOMOBILES (C3NB-01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001 PH :6372803057.

RAIPUR

- SPARSH (S0NA-50-01), NEAR TCI GODOWN, NH-6, CHANDHANI, TATIBANDH, RAIPUR, CHHATTISGARH - 492029 PH :9926262662.
- SKY AUTOMOBILES (S0NB-50-01), NEXA MAGNETO, LABHANDHI ,G. E. ROAD, RAIPUR

DELHI

DELHI

- RANA MOTORS (08NE-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI
- TR SAWNEY (08NN-01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI PH :9953350008.
- PLATINUM MOTORS (08NQ-01), PLOT NO-H4,BLOCK-B1,MOHAN CO-OPERATIVE INDEX,MATHURA ROAD,PIN-110044 - 110044
- MAGIC AUTO (08NA-01), CISF GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH :9873052000.
- AAA VEHICLES (08NW-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH :9870611111.
- COMPETENT AUTO (08NF-01), PLOT NO-34,RAJASTHAN UDYOG NAGAR, GT AKRNAL ROAD ,DELHI - 110003 PH :9932049425.

- JAGMOHAN MOTORS (08NX-01), C133-136(PART, PHASE I, INDUSTRIAL AREA, MANGOLPUR) S BLOCK, NEW DELHI, DELHI 110083 - 110083 PH :9812259000.

GOA

MARGAO (GOA)

- CHOWGULE INDUSTRIES (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAIA, SALCETE - (GOA) - 403720. - 403720 PH :9850966950.

PORVORIM(PANJIM)

- SAI SERVICE (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521

GUJARAT

AHEMADABAD

- STAR LINE CARS (01NE-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT - 382 330 - 382330 PH :7436003235.
- PEGASUS (01NG-01), PLOT NO 9, OPP RABARI COLONY BRITS STOP, CTM, NAROL - NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. - 380026 PH :9909023000.

- POPULAR WHEELERS (01NC-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT - 380009 PH :9925203344.

ANAND

- AMAR CARS (F7NA-01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT - 388001 PH :9925407666.

BHARUCH

- RAVIRATNA (F8NA-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. - 392001 PH :9727700823.

BHUJ

- KD MOTORS (P5NA-01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPAR HIGHWAY, BHUJ - 370040 PH :9879898799.

GANDHIDHAM

- BM AUTO LINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH , GUJARAT - 370201 PH :7211120014.

GANDHINAGAR

44. NANDA AUTOMOBILES (2BNA-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT. - 382421
PH: .9687641974.

GODHRA

45. RB CARS (2CNA-01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001
PH: .9925051444.

JUNAGARH

46. PERFECT AUTO SERVICES (K8NA-01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037
PH: .9909022619.

MEHASANA

47. STAR LINE CARS (D1NA-01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002

PATAN

48. STARINE CARS (Q9NA-01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT) - 382465 - 382465
PH: .9909043244.

RAJKOT

49. PERFECT AUTO SERVICES (55NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT - 360004
PH: .9512035501.

SURAT

50. KIRAN MOTORS (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJARAT - 395009 - 395009
PH: .7020569426.
51. AMAR MOTORS (40ND-40-01), SURVEY NO 139 BLOCK NO-'21'A,OPPOSITE TO AWADH ARENA MALL,V.I.P ROAD ,BHARTHAMA,SURAT,GUJARAT - 395007
PH: .9871389795.

SURENDARNAGAR

52. DREAM VEHICLES (LCNA-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDERNAGAR, GUJARAT. - 363035
PH: .851104644.

VADODARA

53. KATARIA AUTO (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007
PH: .9824701590.

VAPI

54. KATARIA AUTO (97NA-97-01), NEAR CROMA OUTLET, RATHD CHAMBERS, DAMAN ROAD,CHALA VAPI - 396191
PH: .9714799985.

HARYANA

AMBALA

55. EAKANSH WHEELS (18NA-18-01), AMBALA-CHANDIGARH HIGHWAY ADJOINING AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA PH: .8395903111.

BHIWANI

56. PASCO AUTOMOBILES (X3NA-01), NEAR HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI-HARYANA-127021 - 127021
PH: .9289192582.

FARIDABAD

57. PASCO AUTOMOBILES (58NB-58-01), 14/4, MATHURA ROAD, FARIDABAD, HARYANA - 121003
PH: .9999790229.
58. BVA AUTO (58NC-58-01), 2/53-54, NH-2, NIT FARIDABAD, HARYANA PH: .9911259288.
59. VIPUL MOTORS (58NA-58-01), SUB DIVISION NO-3, INDUSTRIAL PLOT NO -34, N.I.T, FARIDABAD HARYANA - 121001
PH: .8562019252.

GURGAON

60. PREM MOTORS (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001
PH: .1292565666.
61. TR SAWHNEY (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001
PH: .1274254441.

HISAR

62. SARAOGI AUTOMOBILES (76NB 1-76-01), PLOT NO. 180, SECTOR 27-28, INDUSTRIAL AREA HISAR. - 125001

KAITHAL

63. EAKANSH MOTORS (U8NA-01), NH-65, OPP RKM FARM, AMBALA ROAD, KAITHAL - 136027
64. EAKANSH MOTORS (U8NA-02), KHETWAT NO -458, KHATONI - 563, KITTAS - 20/87K 01M ADJOINING NEXA SHOWROOM, AMBALA HISAR ROAD, KAITHAL - 136027
PH: .8813038777.

KARNAL

65. KARNAL MOTORS (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA - 132001

PANIPAT

66. AUTO GALLERY (D3NB-01), NANGAL KHERI, NEAR BBMB POWER HOUSE, OPP. SEC-29, PANIPAT, HARYANA - 132103
PH: .9812615000.

REWARI

67. DINCO MOTORS (U1NA-01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401

ROHTAK

68. JAGMOHAN MOTORS (A6NA-01), NORTHERN BYEPASS, SUKHPURA CHOWK, JIND ROAD, ROHTAK, HARYANA PH: .8754045446.

SIRSIA

69. SHAKTI MOTORS (E4NA-01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSIA - 125055

SONIPAT

70. JAGMOHAN AUTOMOBILES (J5NB-01), SONIPAT MURTHAL ROAD NEAR ASR CNG PUMP - 131001

HIMACHAL

KANGRA

71. KANGRA VEHICLEADES (D9NA-01), VPO-HATWAS, NAGROTA BAGWAN, DISTRICT-KANGRA, HIMACHAL PRADESH - 176047
PH: .7018145653.

JAMMU & KASHMIR

JAMMU

72. JAMKASH VEHICLES (33NB-33-01), NH-1A BYE PASS OPPOSITE CHANNI HIMMAT, JAMMU (J&K)

73. JAMMU MOTORS (33ND-33-01), KHASRA NO. 421, TOPE SHERKHANIA, AKHNOR ROAD, OPPOSITE BEST PRICE, JAMMU, JAMMU & KASHMIR - 180016

SRINAGAR

74. PEAKS AUTO (12NA-12-01), DR. ALI JAN ROAD, SOURA, SRINAGAR PIN - 190011. - 190011
PH: .7006285604.

JHARKHAND

BOKARO

75. HINDUSTAN AUTO AGENCY (B5NA-01), KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS, BOKARO - 827013
PH: .9304807318.

DEOGHAR

76. PREMSONS (SGWN-01), PLOT NO 318/319 UNDER THANA NO 583,MAHESHMARA MOUJA ,DEOGHAR - 814112
PH: .9833507004.

DHANBAD

77. RELIABLE (52NA-52-01), RELIABLE INDUSTRIES NEXA WORKSHOP AMAGHATA, BY PASS ROAD SUGIADH,PIN - 828109 - 828109
PH: .7992470853.

HAZARIBAGH

78. PREMSONS (Y9NA-01), PREMON MOTOR UDYOG PVT LTD, NEXA SHOWROOM NEXT TO GST OFFICE,ARYA NAGAR,HURHURU,HAZARIBAGH,JHARKHAND 825301 - 825301
PH: .9835507004.

JAMSHPEDPUR

79. MOTOR WORLD (31NB-31-01), NS-6, 2ND PHASE, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013
80. PEBCO MOTORS (31NA-31-01), KANDRA ROAD, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013
PH: .9334183260.

RANCHI

81. SUDHA MOTORS (51NB-51-01), KATHALMORE, OPP. MANER DHABA, RANCHI - 834005
82. PREMSONS (51NC-51-01), PLOT NO 2651/2652, KHATA NO 239, MAUJA, VILLAGE BARAGAI , BARIATU MAIN ROAD, RANCHI, JHARKHAND - 834009
PH: .9334811248.

KARNATAKA

BANGALORE

83. MANDOVI MOTORS (02NJ-01), SURVEY NO.33/2,ALLLASANDRA, YELAHANKA NORTH, BANGALORE, KARNATAKA - 560064
PH: .9513729888.

84. KALYANI MOTORS (02NI-01), SURVEY NO.17/2, KENCHENAHALLI VILLAGE, RAJARAJESHWARI NAGAR, MYSORE ROAD,BANGALORE, KARNATAKA - 560032
PH: .9845049626.
85. SURAKSHA CAR CARE (02NF-01), 2/6, BERTEN AGRAHARA, OPP TO METRO CASH & CARRY, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE, KARNATAKA - 560100
PH: .9845047393.

86. PRATHAM MOTORS (02NK-01), 120,SARJUPUR MAIN ROAD,DODDAKANAHALLI, VARTHUR HOBLI, BANGALORE EAST, KARNATAKA- 560035. - 560035
PH: .8844000579.

87. VARUN MOTORS (02NG-01), NO.23/A, INDUSTRIAL SUBURB 2ND STAGE, TUMKUR ROAD YESHWANTPUR, BANGALORE, KARNATAKA - 560022 - 560022
PH: .8971888885.

88. VARUN MOTORS (02NM-01), 37/56 NAVAGARA VILLAGE,HEBBAL RING ROAD ,BANGALORE - 560024
PH: .9513394753.

89. KALYANI MOTORS (02NN--01), 152/7, OUTER RING ROAD, DODDA BANASWADI, HORAMAVU, KR PURAM HOBALI, BANGALORE -560043. - 560043
PH :9900020454.
90. BIMAL AUTO AGENCY INDIA PVT LTD (02NL-01), NO. 1 3 RD BLOCK, 2ND STAGE, NAGARBHAVI,OUTER RING ROAD, BANGALORE - 560072
91. BIMAL AUTO AGE/CNY INDIA PVT LTD (02NC-01), SY.NO.9/04, NEAR KATAMANULLUR GATE, KANNAMANGALA, KADUGODI MAIN ROAD, SANNATAMMANHALLI, BENGALURU, KARNATAKA - 560067
PH :9742269137.
- BELGAUM**
92. SHANTESA MOTORS (E8NA-01), PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD, KANGRALI B K, BELGAUM, KARNATAKA-590010. - 590010
PH :9538195381.
- BIJAPUR**
93. CHAVAN MOTORS (TKT) PRIVATE LIMITED (T7NA-01), #262, RANE MADRAS ROAD RING ROAD, NEAR SESHPARIUPURAM COLLEGE HEBBAL MYSORE - 566109
PH :879957100.
- DAVANGERE**
94. SHRUTI MOTORS (S1NA-01), #323/1A, OLD PB ROAD AVARAGERE, DAVANGERE - 577003
- HASSAN**
95. VENKAT MOTORS (C8NA-01), VENKAT MOTORS, #20046/2,D.M HALLI,NEAR GUHEKALAMMA TEMPLE,B.M ROAD ,HASSAN - 573201
- HUBLI**
96. LEKHYA MOTORS (73NA-73-01), OPP TO APMC 2ND GATE, ESHWAR NAGAR, HUBLI-DHARWAD ROAD, HUBLI-580025. - 580025
PH :9513777265.
- MANGLORE**
97. MANDOVI MOTORS (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142
PH :9845133077.
- mysore**
98. FRIENDLY MOTORS (25NB-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA-570016. - 570016
PH :9845011686.
99. MANDOVI MOTORS PRIVATE LIMITED (25NA-01), MANDOVI MOTORS PRIVATE LIMITED NEXA SERVICE #907,DATTAGALLI RING ROAD, R.T.NAGAR JUNCTION, MYSURU - 570023
100. KALYANI MOTORS PVT LTD (25NC-01), KALYANI MOTORS PVT LTD - 570016
- SHIMOGA**
101. SHRUTI MOTORS (B7NA-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALLI ROAD, SHIMOGA,KARNATAKA - 577201
PH :9895966666.
- KERELA**
- CALICUT**
102. AM MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EYE HOSPITAL,SRAMBKKAL PARAMBA,MINI BYPASS JAIL ROAD JUNCTION,PUTHIYARA POST,CALICUT, KERELA-673004. - 673004
PH :7708333966.
103. POPULAR VEHICLES (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017
PH :9946104660.
- COCHIN**
104. INDUS MOTOR (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106
PH :9747508822.
105. SAI SERVICE (27NA-27-01), 723/7.6.18,OPP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALKU, THIRRAKKARA NORTH, COCHIN-682021. - 682021
PH :9645106193.
- KAYAMKULAM**
106. SAI SERVICE (8LNA-01), S.NO 111/48, KP ROAD, KAYAMKULAM, KERALA - 690502
PH :9288024222.
- KOLLAM**
107. SARATHY AUTOCARS (C7NA-01), NH-47 BYE PASS ROAD, AYATHIL,P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021
PH :9848659456.
- TRIVANDRUM**
108. INDUS MOTOR (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND,ALUMOOD JN,NH 47,KANNIYAPURAM, TRIVANDRUM - 695301. - 695301
PH :9656685678.
- MADHYA PRADESH**
- BHOPAL**
109. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-01), 42, 6_BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSANGABAD ROAD, BHOPAL (M.P.)
- INDORE**
110. PATEL MOTORS (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJRANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016
PH :7771002581.
111. OCEAN MOTORS (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001
112. RANA MOTORS (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 - 452010
PH :9933055539.
113. RUKMANI (53NC-53-01), RUKMANI MOTORS NEXA SERVICE,FOOTHI OTHI SQUARE,OPP.DASTOOR GARDEN,INDORE - 452002
PH :9755512100.
- JABALPUR**
114. STANDARD MOTORS (54NC-54-01), KHARSA NO-529/11, NEAR TRIPURI CHOWK GARHA JABALPUR M. P. - 482003
PH :9773543358.
- SAGR**
115. ADINATH CARS (G1NA-01), KHASRA NO 155, P H NO. -77, BAHERIA GADGAD, SAGAR JABALPUR ROAD, SAGAR - 470004, MADHYA PRADESH, INDIA - 470004
PH :975247690.
- SATNA**
116. CITY CARS (D7NA-01), BEHIND NEXA SHOWROOM, 666/2,AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001
PH :6262230999.
- UJJAIN**
117. RUKMARANI (YUG) (3WNA-01), 59/1, DEWAS ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN - 456664
PH :9755512100.
- MAHARASHTRA**
- AHMEDNAGAR**
118. KANKARIYA AUTOMOBILES (A5NA-01), SH-60,NEWASA ROAD ,NAGARDEOLE,AHMEDNAGAR,MAHARASTRA - 414601
PH :9403961522.
- AMARAVATI**
119. ASPA BANDSONS (F2NA-01), F32/1 MIDC , AURANGABAD NAGPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444607
PH :9130041513.
- AURANGABAD**
120. AUTOMOTIVE MANUFACTURER LTD (21NB-21-01), PLOT NO :-L/ 3 / 1, BETWEEN GARWARE & WOCKHARDT LTD, JALGAON ROAD, MIDC CHIKALTHANA,AURANGABAD PIN : - 431006, MAHARASHTRA - 431006
PH :9970499273.
121. PAGARIYA AUTO (21NA-21-01), OPP AIRPORT, NEXT TO INDIAN OIL PETROL PUMP, JALNA ROAD, AURANGABAD, MAHARASHTRA - 431006
PH :8888859902.
- BARAMATI**
122. MAHALAXMI AUTO (7RNA-01), BHIGWAN ROAD, SHIV NAGAR, BARAMATI (MAHARASHTRA) PH :9850994014.
- CHANDRAPUR**
123. BARBATE AUTO (H3NA-01), PLOT NO 15-18, OUT OF SURVEY NO 14/4, 15/5, MAUZA BADOLI, NAGPUR CHANDRAPUR HIGHWAY, CHANDRAPUR, MAHARASHTRA - 440025
PH :8380887666.
- JALGAON**
124. MANRAJ AUTO (C4NB-01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA - 425003 - 425003
- KHARGHAR**
125. SIMRAN MOTORS (AACN-01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA - 410209
- KOLHAPUR**
126. SAI SERVICE (38NA-38-01), 1243/66, E WARD, SHIVAJI UDHYAMNAGAR, KOLHAPUR - 416001
PH :9923208401.
- MUMBAI**
127. SAI SERVICE (05NB-01), JOSEPH CARDIJN TECHNICAL SCHOOL , KHASHABA JADHAV MARG , OFF DR. AMBEDKAR ROAD , DADAR (EAST) MUMBAI, MAHARASHTRA - 400014
128. SHIVAM MOTORS (05ND-01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA - . 400069
129. KTS AUTOMOTORS (05NH-01), UNIT NO A1, PANNALAL COMPOUND, LBS KANTILAL MAGANLAL ESTATE, L.B.S MARG, BHANDUP (W), MUMBAI - 400078
130. SHIVAM AUTOZONE (05NE-01), PLOT NO. 1 & 2, RAMCHANDRA LANE EXTN., KANCHPADA, OFF LINK ROAD, MALAD-WEST. - 400064
PH :9870938888.
- NAGPUR**
131. BARBATE AUTO (20NA-20-01), 37/2, MANISH NAGAR, BESAT POINT, BESA ROAD NAGPUR 440025 - 440025
- NANDED**

Nexa Network (AS ON 31.10.2023)

132. SEVA AUTOMOBILES (68NA-68-01), AIRPORT ROAD,SANGVI - 431605
PH :7065026520.

NASHIK

133. SEVA AUTOMOBILES (37NA-37-01), PLOT B-17, MIDC, AMBAD, NASIK, MAHARASHTRA - 422010
PH :8975762303.

NAVI MUMBAI

134. AUTOMOTIVE MANUFACTURER LTD (39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY, NAVI MUMBAI - 400706
PH :9769206120.

PUNE

135. KOTHARI WHEELS (19NB-19-01), GATE NO 1605, OLD 1099, KESNAND ROAD, WAGHOLI, TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA - 412207
PH :7721865000.

136. EXCEL AUTOVISTA (19NG-19-01), SURVEY NO 98/2/A/P, NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM, BANER TALUKA, PUNE - 411045

137. SEHGAL AUTO RIDERS (19NE-19-01), SURVEY NO 63/2, SHEWALEWADI, MANJARI BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHTRA - 412307
PH :9158000049.

138. WONDER CARS (19ND-19-01), PLOT NO 52/1 BLOCK F2, MIDC PIMPRI, PUNE - 411019
PH :9850094151.

139. MAHALAXMI AUTO (19NI-19-01), NEAR SADGURU PIETROL PUMP, PUNE NASHIK HIGHWAY, AT KURALI, KED TALUKA, CHAKAN - 410501
PH :9923589214.

140. SAI SERVICE (19NC-19-01), SINHAGAD ROAD, NEAR NANDED CITY, VADGAON KHURD, PUNE. (MAHARASHTRA)
PH :9923308333.

RATNAGIRI

141. JAGRUT MOTORS (G3NA-01), 410/6/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612
PH :9820039626.

SOLAPUR

142. CHAVAN MOTORS (B1NA-01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224
PH :8888881314.

THANE

143. EXCEL AUTOVISTA (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD , THANE , MAHARASTRA - 400607
PH :9967331726.

144. EXCEL AUTOVISTA (39NA-39-02), NEAR ARIHANT COMPOUND, KALHER, BHIWANDI, THANE - 400607
PH :9967331726.

NAGALAND

DIMAPUR

145. PROGRESSIVE MOTORS (32NA-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, - 797115
PH :7669223736.

ODISHA

BERHAMPUR

146. SKY AUTOMOBILES (E2NA-01), PLOT NO 373/2229 & 373/1204, AMABAPUA MOUZA, BRAHMAPUR (ODISHA) - 760007

ROURKELA

147. ORBIT MOTORS (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041
PH :9163071234.

SAMBALPUR

148. ODYSSEY MOTORS (D4NA-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006

PUNJAB

AMRITSAR

149. JAYCEE MOTORS (17NA-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501

BHATINDA

150. TARA (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATINDA, PUNJAB - 151001
PH :8437019666.

JALLANDHAR

151. LOVELY AUTO (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALLANDHAR PUNJAB
152. MARWAHA AUTOS (35NC-35-01), KHASRA NO - 16450, SITUATED AT RAJA GARDEN, KAPURTHALA RD, JALLANDHAR - 144001
PH :9915944600.

LUDHIANA

153. GULZAR (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003
PH :9814839777.

154. HOSHARPUR AUTO (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003
PH :8872501234.

155. MARWAHA AUTOS (62NH-62-01), FEROZEPUR RD, AMAN PARK, NEW SUNDER NAGAR, LUDHIANA, PUNJAB - 141012
PH :8872500357.

156. LOVELY AUTOS (62NF-62-01), NEAR SAMRALA CHOWNK, MOTI NAGAR, LUDHIANA - 141010
PH :9875999161.

MOHALI

157. CM AUTO SALES (L1NA--01), B-64A, INDUSTRIAL AREA, PHASE-7, MOHALI

NAWANSHahr

158. LOVELY AUTOS (J7NA-01), VPO LANGROYA, CHANDIGARH ROAD, NAWANSHahr - 144514
PH :9915028682.

PATHANKOT

159. PATHANKOT VEHICLEADS (A7NA--01), PLOT NO-C-30, INDUSTRIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023
PH :7527006800.

RAJASTHAN

AJMER

160. NAVNEET MOTORS (B2NA-01), PLOT NO7 -8,RIICO INDIRUTL ESTATE MAKHAPURA NASIRBAD ROAD,AJMER(RAJASTHAN)-PIN CODE-305002 - 305002
PH :9414191494.

ALWAR

161. FORTUNE CAR (F9NA-01), 6TH MILESTONE VILLAGE JATIYANA,OPP. PETROL BEHOR ROAD ALWAR - 301001
PH :9982341741.

BHILWARA

162. CHAMPION CARS (E3NA-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001
PH :9001027933.

BIKANER

163. AUDI MOTORS (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD, BICHHWAL INDUSTRIAL AREA , BIKANER 334001 - 334001
PH :9887222786.

CHITTORGARH

164. TECHNOY (K9NA-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001

JAIPUR

165. K P AUTOMOTIVES (11NB-11-01), PLOT NO.3-4,MANGAL RICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION,SIRSIA ROAD - 302034
PH :7412059923.

166. SATNAM MOTORS (11ND-11-01), D-27, K/L/M, ROAD NO-3,SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA, JAIPUR, RAJASTHAN-302023 - 302023
PH :9649373311.

JHUNJHUNW

167. AUDI MOTORS (FNNA-01), NEAR TVS TWO WHEELER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001
PH :797006402.

JODHPUR

168. AUDI MOTORS (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001
PH :7300077394.

169. LMU AUTO (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1 JODHPUR - 342009
PH :7412087320.

170. LMI SERVICES (65NB-65-02), PLOT NO.-61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001
PH :8094011126.

KOTA

171. BHATIA & CO. (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPIA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005
PH :8094011126.

SIKAR

172. JAMU (K7NA-01), THAR PETROL PUMP,JAIPUR ROAD,SIKAR - 332001
PH :9414037515.

UDAIPUR

173. TECHNOY (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS , UDAIPUR

TAMIL NADU

CHENNAI

174. PILLAI & SONS (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117
PH :9994950505.

175. POPULAR VEHICLES (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI,TAMILNADU- 600116 - 600116
PH :9842389111.

176. KHIVRAJ MOTORS (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058 - 600058
PH :9626099999.

177. VISHNU CAR (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056
PH :7339359111.

178. ABT (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU - 600032
PH : 9994444303.
179. VISHNU CAR (14NG-14-02), POONAMALLE HIGH ROAD, ARUMBakkAM, KOYAMBEDU, CHENNAI, TAMIL NADU - 600056
PH : 755033622.
- COIMBATORE**
180. AADHI CARS (41NB-41-01), OLD KALIAPPAA KALYANAMANDAM, PREMISES, KAVUNDAMPALAYAM, COIMBATORE, TAMIL NADU - 627007
PH : 9003977577.
181. SREE SARADHAMBAL (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. - 641004
PH : 9790004271.
- ERODE**
182. SREE SARADHAMBAL (H7NA-01), NO.75, NEAR SURABI NURSERY, PERUNDURI ROAD, ERODE, TAMILNADU-638011. - 638011
PH : 9786022272.
- HOSUR**
183. SRI AMMAN CARS (7QNA-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44 OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109
PH : 9841033464.
- KARAIKUDI**
184. MEENAKSHI AUTOZONE (HXNA-01), T S NO 624/1, DOOR NO. 5, 1ST STREET SUBRAMANIAPIURAM, KARAIKUDI, TAMIL NADU - 630001
PH : 9940094881.
- MADRASI**
185. ASIR (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU - 625001 - 625001
- NAGERCOIL**
186. ATHEN CARS (S5NA-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU - 629003
PH : 9751196436.
- PONDICHERRY**
187. SHENBKA CARS (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMBAKKAM, BAHOOR COMMUNE,PONDICHERRY - 607402
PH : 7338322220.
188. THRIVENI CARS (A2NA-01), 2/6, KANDHAMALPATTY,BYE PASS ROAD, SALEM, TAMILNADU - 636005
PH : 9786022272.
189. SM CAR (A2NB-01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM - 636010
PH : 7094440010.
- THANJAVUR**
190. PILLAI & SONS (E7NA-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403
PH : 9443264165.
- TRICHY**
191. PLA MOTORS (23NA-23-01), TS NO.29P.31P & 32P 36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017. - 620017
PH : 8110099991.
- TRIPUR**
192. SHASHTI (Y7NA-01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604
PH : 9942903310.
- VELLORE**
193. SRI GANESH CARS (C6NA-01), 9616, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI,VELLORE, TAMILNADU - 632009
PH : 9884722126.
- TELANGANA**
- HYDERABAD**
194. KALYANI MOTORS (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHARMANGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079
PH : 9347121212.
195. VARUN MOTORS (10NB-10-01), B-54, CO.INDUTRIAL ESTATE, BALANAGAR, HYDERABAD, TELANGANA - 500037
196. GEM MOTORS (10NH-10-01), D.NO.8-96, SURVEY NO.128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA - 500084
PH : 9912345999.
197. JAYABHERI AUTO (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032. - 500032
198. VARUN MOTORS (10NB-10-02), H.NO. 8-2-120/117/A2, PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD - TELANGANA - 500033
PH : 9885610555.
- WARANGAL**
199. SAI SERVICE (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046 - 500046
PH : 9966377888.
200. RKS (10NI-10-01), SY NO:42, PET BASHFERRABD, OUTHBULLAPUR, MEDCHAL MANDAL, HYDERABAD - 500014
201. ADARSHA AUTOMOTIVE (10NG-10-01), PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI NAGAR, BALANAGAR, KUKATPALLY, HYDERABAD - 500072
202. ADARSHA AUTOMOTIVE, SHAMSHABAD (10NG-02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA - 501218 - 501218
PH : 8297116633.
- KARIMNAGAR**
203. ADARSHA AUTOMOTIVE (N6NA-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001
PH : 9847073265.
- MAHBUBNAGAR**
204. JAYARAMMA AUTO (WPNA-01), CHRISTIANAPALLY, BHOOPTOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001
PH : 809699074.
- MANCHERIAL**
205. ADARSHA AUTO (CMNA-01), SURVEY NO-417, BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL,TELANGANA - 504208
PH : 913329709.
- NIZAMABAD**
206. VARUN MOTORS (1HNA-01), 1-51/4/1/D4 MADAHAVA NAGAR, HYDERABAD ROAD, NIZAMABAD, TELANGANA, 503230 - 503230
PH : 9542222486.
- SECUNDERABAD**
207. MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDERABAD, ANDRAPRADESH-500020 - 500020
208. AUTO FIN (K6NB-01), PLOT NO.6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDERABAD, TELANGANA - 500011
PH : 8886144551.
209. VARUN MOTORS (K6NC-01), VARUN MOTORS,2ND CROSS ROAD, SAINIKPURI,SECUNDERABAD PH : 779960093.
- JHANSI**
210. ADARSHA AUTOMOTIVE (DSNA-01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007
PH : 8978944414.
- UPPER PRADESH**
- AGRA**
211. MADHUSUDAN MOTORS (66NA-66-01), ADJOINING HEMA PETROL PUMP, EIT MANDI, BODLA, AGRA
- ALIGARH**
212. CLML (B6NA-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOL, ALIGARH, UTTAR PRADESH, - 202002
PH : 9639775522.
213. CLML (B6NA-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 - 202140
PH : 9358373099.
- BARIELY**
214. CORAL (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BARIELY, UP - 243001
PH : 9359101010.
- GAZIABAD**
215. ROHAN MOTORS (59NA-59-01), KHASRA NO 46 , DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GAZIABAD, UTTAR PRADESH 245101 - 245101
PH : 8178839830.
216. J J IMPEX (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHAR ROAD INDUSTRIAL AREA, GAZIABAD, UTTAR PRADESH 201003 - 201003
- GORAHPUR**
217. SMART WHEELS (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAHPUR, UTTAR PRADESH - 273009
PH : 8222002147.
- GREATER NOIDA**
218. MSM (JJ IMPEX) (T233-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009
- HARDOI**
219. CONCEPT (OENA-01), PLOT NO. 1609 & 1605, GUNGABUX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001
PH : 7607696666.
- JHANSI**
220. SURI (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003
PH : 7705000558.
- KANPUR**

Nexa Network (AS ON 31.10.2023)

221. KTL (28NB-28-01), ARAZI NO. 352, SINGHPUR
KACHHAR, BITHOOR ROAD, NORTHERN
RAILWAY COLONY, KANPUR, UTTAR
PRADESH - 208017
PH :7408409312.

LUCKNOW

222. ANAND MOTORS (13NC-13-01), GATA NO. 1062
PARGANA RAJA BIJLI PASI VILLAGE
AURANGABAD, SHAHEED PATH (OPPOSITE TO
RAMABAI AMBEDKAR MARDAN), LUCKNOW,
UTTAR PRADESH - 226012

223. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT
NO - 513, VILL HARIHARPUR BUNAUR, OPP
ANSAL API, AMAR SHAHEED PATH, LUCKNOW -
227105
PH :7311190503.

MATHURA

224. UMA MOTORS (H8NA--01), PLOT NO 222,
MAHOLI, NEAR KIRAN HOSPITAL, MATHURA -
281004
PH :9997385999.

MEERUT

225. TR SAWHNEY (48NB-48-01), 1183/17 RITHANI,
ZONE - A, SECTOR 4 NEAR PETROL PUMP,
MEERUT, UTTAR PRADESH - 250103
PH :18002704142.

NOIDA

226. FAIR DEAL (A1ND--01), A-107, SECTOR-5.
NOIDA - 201301
PH :9810542222.

227. MOTOR CRAFT (59NB-59-01), C 42 SECTOR 57,
NOIDA, UTTAR PRADESH - 201301

RAIBARELY

228. KTL AUTOMOBILE PVT LTD (HSNA--01), 1481,
NEAR KATHWARA BUS STAND, LUCKNOW
RAIBARELI HIGHWAY, HARCHANDPUR,
RAIBARELI - 229303
PH :7311190503.

SAHIBABAD

229. MSM (M983--N1), MARUTI SERVICE MASTERS,
NEXA SERVICE, PLOT NUMBER 58/4, SITE 4,
SAHIBABAD INDUSTRIAL AREA, - 201010
PH :9711474930.

SHAHJHANPUR

230. SUMITRA DS (W2NA--01), SH25 , RETI ROAD
SHAHJHANPUR

UTTARAKHAND

HALDWANI

231. NAINITAL MOTORS (J6NA--01), 5TH KM RAMPUR
ROAD, JEETPUR NEGI, NEAR AMAR UJALA
PRINTING PRESS, HALDWANI, UTTARAKHAND -
263139

ROORKEE

232. SHAKUMBARI (H2NA--01), 5 KM MILESTONE
,NH-58,ROORKEE-DELHI ROAD, NEAR HOTEL
GODWARI,ROORKEE, UTTARAKHAND - 247667

RUDRAPUR

233. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT.
LTD. (U4NB--01), KASHIPUR ROAD, OPPOSITE
GREEN PARK COLONY, VILLAGE DIBIBA,
TEHSIL BILASPUR, RAMPUR, UTTRAKHAND -
244901

WEST BENGAL

ASANSOL

234. BEEKAY AUTO (F6NA--01), NH-2 CHANDA
MORE ,POST KALI PAHARDI, JAMMURIA
DISTRICT WEST BARDHAMAN - 713339
PH :9932049425.

HOWRAH

235. MACHINOTECHNO (X7NA--01), 109, 1, UPPER
FORESHORE RD, CHOURA BUSTEE, SHIBPUR,
HOWRAH, WEST BENGAL 711102 - 711102
PH :9830081632.

JALPAIGURI

236. PODDAR AUTO (XYNA--01), ASSAM MORE BUS
STOP, SH12A, JALPAIGURI, WEST BENGAL
735102 - 735102
PH :8945533002.

KHARAGPUR

237. BHANDARI AUTOMOBILES (G7NA--01),
CHOWRANGEE, PLOT NO-138 & 139, O T ROAD,
KHARAGPUR - 721301
PH :7603076061.

KOLKATA

238. JYOTE MOTORS (06ND--01), MIRANIA ROAD,
ARUPOTA ON BASANTI HIGHWAY, - 700105
PH :9074158220.

ANDAMAN AND NICOBAR ISLANDS**DIGLIPUR**

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (PU01-01), MADHUPUR VILLAGE,TEHSIL DIGLIPUR,NORTH ANDAMAN - 744202 PH :271056.

PORTBLAIR

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-01), GARACHRAMA, PORT BLAIR - 744105 PH :251980, 253586, 211590.
- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-02), NAYAGEN, PORTBLAIR - 744101 PH :227104, 211682.

RANGAT

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-03), NIMBURILLA, PO RANGAT, DIST. MIDDLE ANDMAN. - 744201 PH :211546.

ANDRA PRADESH**AMALAPURAM**

- S.B. MOTOR CORPORATION (BTS1-01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201 PH :8374303303.

AMARAVATI

- JAYALAKSHMI AUTOMOTIVES PVT. LTD (CVB1-01), SURVEY NO. 29, TOWNSHIP-16, SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1, SUB-DIVISION-L40, MALKAPURAM LIMITS, MANDAL - THULLURU, AMARAVATI-CITY, DIST -GUNTUR, ANDRA PRADESH. - 522237 PH :8374847777.

ANAKAPALLE

- JAYABHERI AUTOMOTIVES PVT. LTD. (0N01-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001 PH :7093575555.

ANANTAPUR

- SRI DURGA AUTOMOBILES PVT. LTD. (1B01-01), 17/377-A,GOOTY ROAD,,ANANTAPUR - 515001 PH :9100902697.
- JAYALAKSHMI (1B02-01), SURVEY NO 146-3,SRI NAGAR COLONY, ANANTAPUR, ANDRA PRADESH - 510052 PH :9177723377.

ANNAVARAM

- VARUN MOTORS (SJH1-01), DO-NO : 5/116, SURVEY NO .59,,CHALAMAYYA NAGAR, RAILWAY STATION ROAD, NEAR SMP BAJAJ SHOWROOM, ANNAPURAM, EAST GODAVARI DISTRICT, ANDHRA PRADESH. - 533406 PH :9885288339.

ARAKU

- VARUN MOTORS (SJG1-01), SURVEY NO 33-9/A, RAVALAGADDA VILLAGE,BESIDE GOVT DEGREE COLLEGE,ARAKU,VISHAKAPATNAM,ANDHRAPRadesh - 531151 PH :9885317344.

BHIANSA

- ADARSHA (BS1-01), SURVEY NO 448A/1, BASAR ROAD, BHAINSA,NIRMAL DISTRICT,TELANGANA - 504103 PH :8866092222.

BHIMAVARAM

- NOVELTY REDDY & REDDY MOTORS PVT LTD (TM01-01), NEAR BYEPASS ROAD,UNDI ROAD,BHIMAVARAM - 534202 PH :7799771177.

BOBBILI

- VARUN MOTORS PVT. LTD. (CAM1-01), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE - MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT - VIZIANAGARAM, ANDHRA PRADESH. - 535558 PH :9885280772, 9885317344.

CHALLAPALLI

- MITHRA AUTO AGENCIES PVT LTD (CSX1-01), D.NO.9-30, 9TH BLOCK, LAKSHIMPURAM LIMITS, RAMANAGARAM, CHALLAPALLI MANDAL, DISTT. KRISHNA - 521126 PH :8866035262.

CHEPURAPALLI

- JAYABHERI AUTOMOBILES (SNS1-01), 4-284, CHEPURAPALLI, VIZIANAGARAM, ANDHRA PRADESH - 535128 PH :6304902456.

CHILKALURIPET

- JAYALAKSHI (SFT1-01), M/S JAYALAKSHMI AUTO, SURVEY NO 457/C3, CHILKALURIPET, NADENLA MANDAL, GUNTUR, ANDHRA PRADESH - 522616 PH :9989144344.

CHINTALAPUDI

- REDDY AND REDDY MOTORS (BYO1-01), RS NO.698/2 MARUTI NAGAR COURT CENTRE, ELURU-CHINTALAPUDI HIGHWAY, CHINTALAPUDI MANDAL, ANDHRA PRADESH - 534460 PH :9912341624, 9948827555.

CHIRALA

- JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-04), 9-1-92, CHURCH ROAD,CHIRALA, - 523157 PH :7331151661.

CHITTOOR

- BHARGAVI AUTO PVT. LTD. (A801-03), 22-241/A,KATTAMANCHI TIRUPATI ROAD,CHITTOOR, - 517001 PH :8463955556.

CHODAVARAM

- VARUN MOTORS (SHT1-01-J), SURVEY NO: 108-2-A, 108-3-A & 108-4, GOVCHODAVARAM, DIST. VISAKHAPATNAM. - 531036 PH :9885317344.

CUDDAPAH

- MSA MOTORS (C201-03), K.T. BYE PASS ROAD,CUDDAPPAH,ANDHRA PRADESH, - 516001 PH :7396685626.

ELURU

- REDDY & REDDY MOTORS (1E01-01), OLD NH-5 ROAD,BESIDES C R REDDY WOMEN'S COLLEGE OLD NH-5,ELURU, - 534001 PH :9705311566.

ENIKAPUDU, VIJAWADA

- VARUN MOTORS (2603-08), SURVEY NO 2077, 207/BB2, 20715B, D-NO 10-3, NEAR SHIVALAYAM TEMPLE, ENIKEPADU, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH - 521108 PH :9885576602.

GAJAPATINAGARAM

- JAYABHERI AUTOMOTIVES (SNN1-01), SURVEY NO 50-14, D.NO 3-1/C, BONDAPALLI MANADALAM, GAJAPATHINAGARAM, ANDHRA PRADESH. - 535270 PH :9100818111.

GAMBHEERAM

- JAYABHERI AUTOMOTIVES PVT. LTD. (BQ01-02), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHERAM, ANANDPURAM, VISHAKHAPATNAM. - 530052 PH :9642496789.

GUDIVADA

- VARUN MOTORS PVT. LTD. (2603-02), D NO. 1-621,AUTONAGER 1ST LANE,GUDIVADA - 521301 PH :9885651383.

GUDUR

- BHARGAVI AUTO PVT. LTD. (IS01-01), SURVEY NO.1619/3A,GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT, NELLORE, A.P. - 524101 PH :9652984999.

GUNTAKAL

- SRI DURGA AUTOMOBILES PVT. LTD. (BJA1-01), SURVEY NO. 407, D. NO. 20/342-19, BELLARY ROAD,GUNTAKAL, DIST.-ANANTPUR, ANDHRA PRADESH. - 515801 PH :8886603336.

GUNTUR

- JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-01), D-N-8-24-31,MANGALAGIRI ROAD,GUNTUR - 522001 PH :7893117111/0863-2241000.
- JAYALAKSHMI (G502-05), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP - 522203 PH :9848131133/9625255555.
- JAYALAKSHMI AUTO (G502-06), SURVEY NO 509, D. NO 25-11-50 TOWN, WARD NO 22, OPPOSITE ITC BUILDING, R AGRAHARAM, NAGARAPALAM ROAD,GUNTUR, - 522004 PH :8374847777.

HUMAN JUNCTION

- SANTOSH MOTORS (SHB1-01), SY NO. 569/1 BESIDES NH5, VELURU VILLAGE, BAPULAPADU MANDAL, HANUMAN JUNCTION KRISHNA DISTRICT PIN 521105 - 521115 PH :9703633755.

HINDUPUR

- SRI DURGA AUTOMOBILES PVT. LTD. (IB01-02), PLOT NO.83, NEAR RELIANCE PETROL BUNK, BYE PASS ROAD, HINDUPUR - 515201 PH :9100902697.

ICHAPURAM

- JAYABHERI AUTOMOTIVES PVT. LTD. (GLL1-01), SURVEY NO. 105/3, 105/4 AND 229/7, ICAPURAM, BALAKRISHNAPURAM PANCHAYAT,MUNIBADRA VILLAGE,ANDHRA PRADESH. - 532312 PH :9394006666, 8142933666.

JAGGAIAHIPETA

- VARUN MOTORS PVT. LTD. (2603-05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHIPET TOWN, JAGGAIAHIPET, KRISHNA DISTT. - 521175 PH :964225297/9052418111.

JAGGAMPET

- SB MOTORS (CDG1-01), M/S D NO 10-37, JAGGAMPETA, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533435 PH :8886677759.

JANGAREDDYGUDEM

Dealer Network (AS ON 31.10.2023)

38. REDDY & REDDY MOTORS (1E01-02), NEAR R&B GUEST HOUSE,ELURU ROAD,JANGAREDDYGUDEM, - 534447 PH :9912563666.
- KAITALURU**
39. SANTOSH AUTOMOTORS PVT. LTD. (CLW1-01), SY. NO. 127/7 & 99, OPP. NAIDU COMPLEX, AATAPAKA, KAILALURU MANDAL, DIST. KRISHNA - 521333 PH :7799787969.
- KAKINADA**
40. S B MOTORS (W701-01), D. NO. 52-10-36/3,NEAR AMAR GHATI CENTER,KARAPA ROAD, KAKINADA - 533001 PH :9885119888.
- KANCHIKACHERLA**
41. VARUN MOTORS PVT. LTD. (GJD1-01), SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERLA VILLAGE AND MANDAL, KRISHNA DIST., ANDHRA PRADESH. - 521180 PH :9885082622, 9885576602.
- KANDUKURU**
42. JAYALAKSHMI AUTOMOTIVES PVT. LTD (BEY1-01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT – PRAKASHAM, ANDHRA PRADESH. - 523105 PH :9848131133.
- KANIGIRI**
43. JAYALAKSHMI AUTOMOTIVES PVT. LTD (SCC1-01), SURVEY NO 793, PLOT NO 11,12 , KANIGIRI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523230 PH :9848131133, 9052457512.
- KAVALI**
44. BHARGAVI AUTO PVT. LTD. (A801-05), KAVALI NELLORE,ANDHRA PRADESH - 524201 PH :9248702567.
- KURNOOOL**
45. MSA MOTORS (C201-01), AUTO NAGAR,INDUSTRIAL ESTATE, NH-7, KURNOOOL - 518004 PH :9912826682.
46. ADARSHA (C202-01), SURVEY NO 105, DINNEDEVARAPADU VILLAGE, KURNOOOL, ANDHRA PRADESG - 518001 PH :9160182222.
- MACHERLA**
47. JAYALAKSHMI AUTOMOTIVES PVT. LTD (CEY1-01), D.NO. 343/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY. - 522426 PH :9848131133, 9705261801.
- MACHILIPATNAM**
48. MITHRA AUTO AGENCIES PVT LTD (2604-04), NARASIMHA NAGAR, MACHILIPATNAM, ANDHRA PRADESH - 521001 PH :8886063526.
- MADANAPALLI**
49. BHARGAVI AUTO PVT. LTD. (AAT1-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT, ANDHRA PRADESH - 524101 PH :9959893434.
- MADHURAWADA**
50. JAYABHERI AUTOMOTIVES PVT. LTD. (BQ01-01), PLOT NO. 5, SURVEY NO. 4/P, KOMMADI ROAD, MADHURAWADA, VISHAKAPATNAM, ANDHRA PRADESH - 530048 PH :8886669985.
- MALKIPIURAM**
51. VARUN MOTORS (SEH1-01), SURVEY NO 49/6A, MALKIPIURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533250 PH :9885317344.
- MANDAPETA**
52. S B MOTOR CORPORATION (BJC1-01), BLOCK NO. 4, D. 4-1-64, MANDAPETA, DISTRICT – EAST GOADAVARI, ANDHRA PRADESH . - 533308 PH :8886664090.
- MARKHPURAM**
53. JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFI1-01), D. NO. 4-515/12, SURVEY NO. 1167, OPP. INDUSTRIAL ESTATE, ONGOLE ROAD, MARKAPURAM, DISRT.-PRAKASAM, ANDHRA PRADESH. - 523316 PH :9848131133, 7331151674.
- MYLAVARAM**
54. VARUN MOTORS PVT. LTD. (GKL1-01), D.NO. 2-1762, MAIN ROAD, MYLAVARAM, KRISHNA DISTRICT, PIN-521203, ANDHRA PRADESH - 521230 PH :9885576602, 9581337222.
- NAIDUPET**
55. BHARGAVI (BJD1-01), M/S SURVEY NO 11-2, JUVALAPALEM VILLAGE, NAIDUPETA, ANDHRA PRADESH STATE: - 524126 PH :9248747777.
- NAKKAPALLI**
56. VARUN MOTORS (SFR1-01), SURVEY NO 202/3, 203/4,DEGGUMMULURU GRAM PANCHAYAT, RAYAVARAM MANDAL, NAKKAPALLI, VISHAKAPATNAM, ANDHRA PRADESH - 531081 PH :9885317344.
- NANDIGAMA**
57. VARUN MOTORS PVT. LTD. (CUB1-01), RE SURVEY NO. 601/1B, NH-9 ROAD, NANDIGAMA, DIST.-KRISHNA, ANDHRA PRADESH. - 521185 PH :9885576602, 7702624494.
- NANDYAL**
58. MSA MOTORS (CKB1-01), SURVEY NO. 333, VUDUMALPURAM, MANDAL – NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT – KURNNOOL . - 518501 PH :9490666616.
- NARASARAOPET**
59. JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-03), NEAR RELIANCE PETROL PUMP BUNK,VINUKONDA ROAD, NARASARAOPET, GUNTUR . - 522603 PH :7680000052/9100791343.
- NARSAPURAM**
60. NOVELTY REDDY & REDDY (SIU1-01), SY NO. 98/7, NARSAPURAM- CHINCHINDA BYPASS ROAD,NARSAPURAM, PALAKOULLU MANDAL, WEST GODAVARI DISTRIC T,ANDHRA PRADESH - 534206 PH :9703900011.
- NARSIPATNAM**
61. JAYABHERI AUTOMOTIVES PVT. LTD. (WT01-01), OPP. RDO BUNGLOW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH :7702333513.
- NELLORE**
62. BHARGAVI AUTO PVT. LTD. (A801-01), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :9248742225.
63. BHARGAVI AUTO PVT. LTD. (A801-04), A2, INDUSTRIAL ESTATE,A.K. NAGAR,NELLORE, - 524004 PH :9248727888.
64. VISHNU CARS PVT. LTD. (A802-01), FIELD NO. 628 /SURVEY NO. 877, 878/A/4 AND 883/A/1A, NELLORE BIT-II, BESIDES GSR GARDENS, BALAJI NAGAR, NH-16, NELLORE CITY. - 542002 PH :7337340778.
- NUZIVIDU**
65. VARUN MOTORS PVT. LTD. (2603-03), BESIDE R T C BUS DEPOT, OLD D M OFFICE,VIJAYAWADA ROAD, NIZVID - 521201 PH :254444, 958133722.
- ONGOLE**
66. JAYALAKSHMI AUTOMOTIVES PVT. LTD (BY01-01), THROVGUNTA COMPANY CENTRE,NH-5,GUNTUR ROAD,ONGOLE,PRAKASAM DISTRICT. - 523003 PH :9701059595.
- PALAKONDA**
67. VARUN MOTORS PVT. LTD. (CKO1-01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440 PH :9966877033, 9885317344.
- PALASA**
68. JAYABHERI AUTOMOTIVES PVT. LTD. (BWH1-01), SURVEY NO. 63 OF VILLAGE – PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT – SRIKAKULAM, ANDHRA PRADESH. - 532221 PH :9849054442, 8790946464.
- PARTHIPURAM**
69. JAYABHERI AUTOMOTIVES (BYS1-01), SY.NO. 195-1A, NEAR TBR THEATRE, NARSIPURAM, PARVATHIPURAM MANDAL, DISTRICT – VIZIANAGARAM, ANDHRAPRADESH, PINCODE – 535522 - 535522 PH :9100818111.
- PATHAPATNAM**
70. VARUN MOTORS (SSJ1-01), D.NO 4-245,SURVEY NO 264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA PRADESH - 532213 PH :9885317344.
- PENDURTHI**
71. VARUN MOTORS PVT. LTD. (BAP1-01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKPATNAM - 530047 PH :9885438455.
72. VARUN MOTORS PVT LTD (BAP1-02), SURVEY NO 240/1 & 241, PENDURTHI, VIZAG - 531173 PH :9703843737.
- PIDUGURALLA**
73. JAYALAKSHMI AUTOMOTIVES PVT. LTD (BPN1-01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT – GUNTUR, ANDHRA PRADESH. - 522413 PH :9848131133, 9100787058.
- PITHAPURAM**
74. S B MOTORS (CTS1-01), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAVRI DIST., ANDHRA PRADESH. - 533 450 PH :8886677759, 8886677754.
- PONNUR**
75. JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFC1-01), PLOT NO. 4, D.NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124 PH :9849445639, 9121141913.
- RAJAHMUNDRY**

76. S.B. MOTOR CORPORATION (C501-01), OPP.FCI GOWDOWN,JAILROAD,LALACHERUVLI,RAJAMUDRY - 533101 PH :08885585667.
77. S B MOTORS (C501-03), D. NO. 3-243, NH-5, ROAD HUKIMPETA, RAJAHMUNDY, - 533 107 PH :08885886262.
78. VARUN MOTORS PVT. LTD. (C502-01), SURVEY NO. 660, PALACHERLA VILLAGE OF RANJANAGRAM MANDAL, RAJAHMUNDY, EAST GODAVARI DSIT. - 533102 PH :964225289.
- RAJAM**
79. VARUN MOTORS PVT. LTD. (BLJ1-01), PLOT NO. 44, SARATHI NAGAR, RAJAMINAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH :7799666998.
- RAMPACHODAVARAM**
80. VARUN MOTORS (SOK1-01), SURVEY NO 14/1,IURLAPALLY VILLAGE, RAMPACHODAVARAM,ANDHRA PRADESH - 532328 PH :9885288339.
- REPALLE**
81. JAYALAKSHMI (SKA1-01),D.NO 430, BEside ESAR PETROL BUNK, REPALLE, DISTRICT: GUNTUR, ANDHRA PRADESH - 522265 PH :837447777.
- S KOTA**
82. JAYABHERI (SIV1-01), SURVEY NO 113/3,MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH :9100818111.
- SOMPETA**
83. VARUN MOTORS PVT LTD (GLX1-01), KHATA NO 406.407.408 DENOTED IN SURVEY NO 24/1/MOGLIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284 PH :988517344, 7382112922.
- SRIKAKULAM**
84. VARUN MOTORS PVT. LTD. (4603-09), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH :9985477155.
85. JAYABHERI AUTOMOTIVE (4606-04), SURVEY NO 22/207 AND SURVEY NO 29/12,16,17, BALAGA RURALSRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH :9100818111.
- SULURUPETA**
86. BHARGAVI AUTO PVT. LTD. (BZA1-01), KEERTI ENCLAVE,NEAR RTO OFFICE,NH-5,SULLURUPETA - 524121 PH :984602345, 7997998516.
- TADA**
87. VISHNU CARS PVT.LTD. (SFW1-01), SURVEY NO 58/3,TADA, NELLORE DISTRICT - 524401 PH :9840434242.
- TANUKU**
88. NOVELTY REDDY & REDDY MOTORS PVT LTD (BAR2-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH :9912341624.
- TENALI**
89. JAYALAKSHMI AUTOMOTIVES PVT. LTD (PE01-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH :262100/ 9866111788.
- THAGARAPUVALASA**
90. VARUN MOTORS PVT. LTD. (CQV1-01), SURVEY NO.11/2B,11/3,NAGARAMPalem VILLAGE, NH-16, NAGARAMPalem GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM, - 531162 PH :9885317344, 9885280772.
- TIRUPATI**
91. BHARGAVI AUTO PVT. LTD. (A801-02), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, - 517507 PH :7997969946.
92. BHARGAVI AUTO PVT. LTD. (A801-06), SURVEY NO.2/B3, ADJACENT TO PARK HOTEL, RENIGUNTA ROAD, TIRUPATI. - 517501 PH :7997969919.
93. VISHNU CARS (NS02-01), SURVEY NO. 192/3A2, 200' CHENNAI - TIRUPATI HIGHWAY, KOTRAMANGALAM,RENIGUNTA MANDAL, TIRUPATI - 517520 PH :9154971551.
- TIRUVURU**
94. SANTOSH AUTOMOTORS PVT. LTD. (CIM1-01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. - 521235 PH :7798787969.
- TUNI**
95. SATTIBABU MOTORS (PVT) LTD. (KY01-01), D. NO. 65-31/15, OPP. FCI GOWDONS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH :7661893888.
- VENKATAGIRIKOTA**
96. BHARGAVI AUTO PVT. LTD. (CDI1-01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK,GMR FUNTION HALL,DARASALLA,PALLIKUPPAM,KUPPAM ROAD V KOTA - 517242 PH :9848602345, 7799997720.
- VENKATAGIRI**
97. BHARGAVI AUTOMOBILES (SOL1-01), SURVEY NO 166,169/1,169/2,RTC COLONY,VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH :9248747777.
- VIJAYAWADA**
98. MITHRA AUTO AGENCIES PVT LTD (2604-01), 40-17-3,PICHAIHA STREET,GANDHI COLONY,VIJAYAWADA - 520001 PH :88855063507.
99. VARUN MOTORS PVT. LTD. (2603-01), 48-17/4,RING ROAD,VIJAYAWADA - 520008 PH :9885576602.
100. VARUN MOTORS PVT. LTD. (2603-06), SURVEY NO.561/1, 562/1 & 561/3, 562/6 KESARAPALI,VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH :8297241177.
101. SANTOSH AUTOMOTORS PVT. LTD. (2607-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010 PH :9642225291.
102. VARUN MOTORS PVT. LTD. (2603-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH :9642225291.
103. SANTOSH AUTOMOTORS PVT. LTD (2607-02), D NO. 77-42-16A, OPP. NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520 015 PH :7997877932.
- VINUKONDA**
104. JAYALAXMI AUTOMOTIVES (SS01-01), SURVEY NO 239/3A,237/3, VINUKONDA, PALNADU DISTRICT, ANDHRA PRADESH - 522647 PH :8374847777.
- VISHAKAPATNAM**
105. VARUN MOTORS PVT. LTD. (4603-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026 PH :9703843737.
106. VARUN MOTORS PVT. LTD. (4603-08), DOOR NO. 58/BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH :08912525885.
- VIZAG, VISHAKAPATNAM**
107. VARUN MOTORS PVT. LTD. (4603-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISHAKAPATNAM, - 530007 PH :9885511911.
108. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATNAM, ANDHRA PRADESH - 530018 PH :8866332209.
109. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-02), D.NO.51-17-2, NH-5, KRANTHINAGAR, VISHAKAPATNAM,(ANDHRA PRADESH). - 530013 PH :7799772272.
110. VARUN MOTORS PVT. LTD. (4607-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOC PETROL BUNK, MANUCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007 PH :7799124243.
111. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-03), SURVEY NO. 119/6, KURMANNAPALEM GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH, - 530046 PH :8897541234.
112. VARUN MOTORS PVT. LTD. (4603-0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE – DUPPURITU, MANDAL – ACHUTAPURAM, DISTRICT – VISHAKAPATNAM, ANDHRA PRADESH, - 531011 PH :9966877133.
113. VARUN MOTORS PVT. LTD. (4603-0L), SURVEY NO. 408/1 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ, VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. - 530045 PH :9885315344.
114. VARUN MOTORS PVT. LTD. (4603-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530 017 PH :07901644535.
- VISSANNAPETA**
115. VARUN MOTORS (SNO1-01), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH - 521215 PH :9885576602.
- VIZAG, VISHAKAPATNAM**
116. VARUN MOTORS (4603-10), SURVEY NO 239/24, WARD NO 19, AGNAMPUDI,VIZAG - 533083 PH :9885317344.
- VIZIANAGARAM**
117. VARUN MOTORS PVT. LTD. (4603-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001 PH :88686721213.

Dealer Network (AS ON 31.10.2023)

- 118. JAYABHERI AUTOMOTIVES PVT. LTD.**
(NB01-01), PLOT NO.B-1,DOOR NO.8-32-1,SURVEY NO.108/12A & 109/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH - 535001 PH :7702333514.
- YANAM**
- 119. SB MOTORS (CTR1-01), SURVEY NO 82-2,TALLAREVU MANDAL,YANAM, EAST GODAVARI DISTRICT - 533463 PH :8866677759.**
- YELEMANCHILI**
- 120. JAYABHERI AUTOMOTIVES PVT. LTD. (GJR1-01), SURVEY NO. 19-1, 2, 3, 45/1, 45/2&3, KOKIRAPALLI , YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH. - 531055 PH :9649445639, 9642502345.**
- YELESWARAM**
- 121. VARUN MOTORS (SOP1-01), VARUN MOTORS P LTD DO-NO - 2-4-41,BESIDE GOLLAJI GARU BUNK,YERRAVARAM ROAD,YELESWARAM – 533429 - 533429 PH :9885511911.**
- ARUNACHAL PRADESH**
- BHALUKPONG**
- 122. DY MOTORS (YT01-01), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG , ARUNACHAL PRADESH - 790114 PH :8415075164.**
- ITANAGAR**
- 123. DY MOTORS (7502-01), LPC NO - DC/ICC/LPC, BORUM VILLAGE, PO/PS-NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100 PH :8415075164.**
- RUKSIN**
- 124. DY MOTORS (SHZ1-01), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH - 787060 PH :8415075164.**
- ASSAM**
- BAIHATA CHARIALI**
- 125. PALLAVI MOTORS PVT LTD (BBL1-01), DAG NO. 1042, PATTAA NO. 17, MOUZA – BORBANKHAR, P.S – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381 PH :9664052488.**
- BARAMA**
- 126. MITTAL AUTOZONE (SOX1-01), VILLAGE - BARJAR, PO & PS - BARAMA, ASSAM - 781346 - 781346 PH :8638487401.**
- BARPETA**
- 127. BHARATI MOTORS PVT. LTD. (7N01-02-), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313 PH :7002819523.**
- BIJOYNAGAR**
- 128. PODDAR CAR WORLD (IA01-01), AT/PO - BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125 PH :9864209733.**
- BISWANATH CHAIRALI**
- 129. RAMLAL DURGADUTT MOTORS PVT LTD (BX1-01-), DAG NO - 7.8, 7.9 PERIODIC PATTAA NO - 24, REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176 PH :8724087940.**
- BONGAIGAON**
- 130. BHARATI MOTORS PVT. LTD. (7N01-01-), CHAPAGURI ROAD, BONGAIGAON - 783380 PH :7002350887/9864427537.**
- CHAMATA**
- 131. PALLAVI MOTORS PVT LTD (CEI1-01-), DAG NO.1137, PATTAA NO.376, MOUZA – DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306 PH :9864052488.**
- DHEKIAJULI**
- 132. RAMLAL DURGADUTT MOTORS PVT LTD (BRX1-01-), DAG NO.242, K.P. PATTAA NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM - 784110 PH :9706568722.**
- DHEMAJI**
- 133. SAIKIA AUTO PVT. LTD. (7P01-02-), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057 PH :8638725209.**
- DIBRUGARH**
- 134. JAYBEE AUTO AGENCIES PVT. LTD. (C101-01-), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH :9954799273.**
- 135. BIMAL AUTO AGENCY (C102-01-), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA - MANKHATTA KANIKAR, DIST.-DIBRUGARH, ASSAM. - 786004 PH :9864040452, 7003901301.**
- DIGBOI**
- 136. VISHAL CAR WORLD PVT LTD (BYD1-01-), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. - DIGBOI, DISTRICT – TINSUKIA , ASSAM. - 786171 PH :9435860000..**
- DIPHU**
- 137. RAMLAL DURGADUTT MOTORS PVT LTD (P01-01-), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - 782460 PH :9707556868.**
- DULIAJAN**
- 138. JAYBEE AUTO AGENCIES PVT. LTD. (ADA1-01-), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602 PH :7002722358.**
- GOALPARA**
- 139. BHARATI MOTORS PVT. LTD. (YN01-01-), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301 PH :9101940372.**
- GOLAGHAT**
- 140. RAMLAL DURGADUTT MOTORS PVT LTD (J303-01-), DAG NO. - 718, 684 & 706, PATTAA NO 213, 168 & 192, KURUKA GAON, P.O - MORANGI, P.S -GOLAGHAT, DIST: GOLAGHAT, ASSAM PIN -785702 - 785702 PH :7002099547.**
- GORAIMARI**
- 141. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVIA AUTOMOTIVE PVT. LTD.) (GMB1-01-), DAG NO. 3, KP PATTAA NO - 11, VILLAGE- CHALABASTI, MOUZA- GORAIMARI - 783390 PH :7002279100.**
- GUWAHATI**
- 142. BIMAL AUTO AGENCY (901-01-), JHALUKBARI, GUWAHATI - 781014 PH :9864074525.**
- 143. PALLAVI MOTORS PVT LTD (902-01-), DAG NO. 182,NEXT TO DEPTT. OF FAMILY WELFARE,SIX MILE: KHANAPARA G.S. ROAD, GUWAHATI - 781022 PH :9864210937.**
- 144. PODDAR CAR WORLD PVT LTD (904-01-), HENGRABARI, VIP ROAD, GUWAHATI - 781036 PH :9508746340.**
- 145. BIMAL AUTO AGENCY (903-01-), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021 PH :9864489722.**
- 146. BIMAL AUTO AGENCY (901-02-), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37, GUWAHATI - 781028 PH :9864040406.**
- 147. PODDAR CAR WORLD (905-01-), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM) - 781029 PH :7002299414.**
- 148. BIMAL AUTO AGENCY (903-03-), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005 PH :7578005159.**
- 149. MITTAL AUTOZONE (908-01-), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028 PH :9864296666**
- 150. PALLAVI MOTORS PVT LTD (902-02-), DAG NO. 2201, PATTAA NO. 237, VILLAGE - JYOTIKUCHI, MOUZA – BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. - 781034 PH :9864052488.**
- HOJAI**
- 151. RAMLAL DURGADUTT MOTORS PVT LTD (ARA1-01-), KHATIYAN NO.: 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT - NAGAON , ASSAM - 782435 PH :7002680534.**
- HOWLY**
- 152. PODDAR CARWORLD (GKW1-01-), PATTAA NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316 PH :8085957586.**
- HOWRAGHAT**
- 153. BAJRANG CARWORLD (SGR1-01-), HOWRAGHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481 PH :9864191169.**
- JAGI ROAD**
- 154. RAMLAL DURGADUTT MOTORS PVT LTD (J701-02-), JAGIROAD,MORIGAON,NALAO,ASSAM - 782410 PH :9365884355.**
- JORHAT**
- 155. RAMLAL DURGADUTT MOTORS PVT LTD (G902-01-), DAG NO. 7 & 8 OF P.P NO. 33, DAG O. 9 OF P.P NO. 61, DAG NO. 382 OF P.P NO. 206, VILLAGE - PAKIMURI HABIGAON, MOUZA - SARABHAL, JORHAT. - 785006 PH :7002099547.**
- 156. JAINCO AUTOTECH (G904-01-), AT ROAD, SEUNI ALI, JORHAT, ASSAM 785001 - 785001 PH :9287957451.**
- KALGACHIA**
- 157. MITTAL AUTO (SLB1-01-), VILL - KALGACHIA, PO - KALGACHIA , DIST BARPETA - 781319 PH :8638487401.**
- KARIMGANJ**
- 158. JAIN UDYOG (6901-04-), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710 PH :9435179025.**
- KAYAKUCHI**

159. MITTAL AUTO ZONE (–), B.B ROAD, KAYAKUCHI, BARPETA, ASSAM - 781352 PH :863847401.
- KHARUPATIA**
160. BIMAL (BWR-01-), VILL –BOLOGARAH, P.O – KHARUPATIA, P.S DHULA, DIST – DARRANG, ASSAM - 784115 PH :9864074525.
- KHATKHATI**
161. PODDAR CAR WORLD PVT. LTD. (CAZ1-01-), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBIA ANGLONG - . 782460 PH :6000900381.
- LANKA**
162. RAMLAL DURGADUTT MOTORS PVT LTD (SDDI-01-), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR, MOUZA - LANKA, DIST - HOJAI, ASSAM - 782442 PH :9707556868.
- MANGALDOI**
163. PODDAR CAR WORLD (YW01-01-), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115 PH :9706970132.
- MARGHERITA**
164. VISHAL CAR WORLD PVT LTD (YR01-01-), MARGHERITA TOWN, BEHIND IOC PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181 PH :9435860000.
- MORIAON**
165. RAMLAL DURGADUTT MOTORS PVT LTD (RB01-01-), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIAON, ASSAM - . 782105 PH :7002239592.
- NAGAOA**
166. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-01-), KHUTIKHATIA, HAIBARGON, NAGAOA - 782002 PH :9706007918.
167. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (J703-01-), DAG NO. 255, 1508(N)254(O), 1509(N)257(O) AND 291, PATTNA NO. 506(N)15(O), 507(N)15(O), 507(N)97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAHKIMORIA, DIST -NAGAOA - . 782002 PH :9435060474/9864191169.
168. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-03-), PAKHIMURA, NEAR BHUGDOI DHABA, NAGAOA, ASSAM - 782003 PH :9706007918.
- NAHARKATIYA**
169. JAYBEE AUTO AGENCIES PVT. LTD. (C101-03-), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM - . 786610 PH :7002722358.
- NALBARI**
170. BIMAL AUTO AGENCY (9201-01-), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - . 781335 PH :7576842484.
- NORTH LAKHIMPUR**
171. SAIKIA AUTO PVT. LTD. (7P01-01-), HATILING, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - . 787031 PH :8473946336.
172. SAIKIA AUTO PVT. LTD. (7P01-03-), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - . 787001 PH :7002571073.
- PATHSALA**
173. PODDAR CAR WORLD PVT. LTD. (CLD1-01-), DAG NO. 451, PATTNA NO. 151 KMP, PATHSALA, DIST -BARPETA, ASSAM - . 781325 PH :6000900256.
- RAJGARH**
174. JAYBEE AUTO AGENCIES PVT. LTD. (CLJ1-01-), DAG NO.162, PP NO 140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DIST. DIBRUGARH, ASSAM - . 786611 PH :9954799273.
- RANGIA**
175. PODDAR CAR WORLD PVT. LTD. (6X01-01-), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - . 781354 PH :724877892.
- SILCHAR**
176. JAIN UDYOG (6901-02-), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - . 788006 PH :9706002524.
- SIVASAGAR**
177. RAMLAL DURGADUTT MOTORS PVT LTD (G902-02-), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR - . 785640 PH :7002099547.
- SORBHOG**
178. MITTAL AUTOZONE (SGS1-01-), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM - . 781317 PH :8011042222.
- TANGLA**
169. BIMAL AUTO AGENCIES PVT. LTD. (C101-03-), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM - . 786610 PH :9954376719.
- TEZPUR**
179. BIMAL AUTO AGENCY (CHO1-01-), DAG NO.:121, PATTNA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA - . 784521 PH :9954376719.
180. RAMLAL DURGADUTT MOTORS PVT LTD (T102-01-), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - . 784154 PH :8724087940.
181. RAMLAL DURGADUTT MOTORS PVT LTD (T102-01-), GORAIMARI, VILLAGE - SOLGAON, TEZPUR, ASSAM - . 784001 PH :9836036157.
- TINSUKIA**
182. VISHAL CAR WORLD PVT LTD (J401-01-), LAIUPHYI, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - . 786183 PH :9435860000.
- BIHAR**
- ARARIA**
183. SEEMANCHAL MOTORS PVT. LTD. (O701-01-), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - . 854318 PH :8797096013.
- ARRAH**
184. PEARL CARS (VU01-01-), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPURA, NEAR GANPAT CHAUDHARY DWAR, NH-30, ARRAH (BIHAR) - . 802301 PH :8294634604.
- AURANGABAD**
185. KARLO AUTOMOBILES (SNG1-01-), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANI, AURANGABAD - . 824101 PH :7019085212.
- BANKA**
186. SEEMANCHAL MOTORS PVT. LTD. (CEO1-01-), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR - . 813101 PH :8797096020.
- BEGUSARAI**
187. GS MOTORS PVT. LTD. (1U01-01-), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - . 851101 PH :9204756206.
- BETTIAH**
188. SHREE GOPAL AUTO PVT. LTD. (O401-01-), BEETIAH - MOTIHARI HIGHWAY, NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR) - . 845438 PH :9771486183.
- DARBHANGA**
197. RAJKRISHNA MOTORS LLP (1V02-01-), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - . 846009 PH :7004529271.
198. RAJKRISHNA MOTORS LLP (1V02-02-), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - . 846003 PH :9693127351.
- DEHRI ON SONE**
189. SEEMANCHAL MOTORS PVT. LTD. (G802-01-), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - . 812005 PH :8797096020.
- BHITA**
190. REESHAV (CBY2-01-), PLOT NO 1674 & 1676, KHATA NO - 19 & 67 AT MOUZA - MAHADEOPUR PHULARI, P.O - BIHTA, P.S- BIHTA, DISTRICT - PATNA - . 801103 PH :7763954585.
- BIHARSHARIF**
191. REESHAV AUTOMOBILES (MG01-03-), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DIST-NALANDA, BIHAR - . 803101 PH :9263632175.
- BUXAR**
192. PEARL CARS (VV01-01-), C/O DEVDHTRHA UPPDHYYA, SYNDICATE, BYE PASS ROAD, BUXAR - . 802101 PH :8294634605/8294634602.
- CHAKIA**
193. RAM KRISHNA MOTORS PVT. LTD. (CWA1-01-), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - . 845412 PH :9601773716.
- CHAPRA**
194. REESHAV AUTOMOBILES (MG01-02-), 146, PLOT NO. 381, VILLAGE RAJUA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - . 841301 PH :7061295296.
- DANAPUR**
195. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-02-), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, - . 800018 PH :9386898456.
- DANAPUR, PATNA**
196. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-05-), TOUZI NO. 5057, THANA NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA - . 801503 PH :9334415434.

Dealer Network (AS ON 31.10.2023)

199. PEARL CARS (1X01-02-), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST.-ROHTAS, BIHAR - 821307
PH : 8294634602.

GAYA

200. KARLO AUTOMOBILES PVT LTD (Y601-01-), BODH GAYA, GAYA - 824231
PH : 9026457463/8539063615
201. DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD (Y602-01-), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD,GAYA, PIN 823004 - 823004 PH : 9031011806/9900024001.

GOPALGANJ

202. SHREE GOPAL AUTO PVT. LTD. (O301-01-), NH-28, DANAPUR, TEHSIL-MANJAGARH, GOPALGANJ (BIHAR) - 800023
PH : 9771486170/9771486139.

HAJIPUR

203. REESHAV AUTOMOBILES (MG01-01-), KHATA 617 & KHASRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SET ROAD, HAJIPUR (VAISHALI) - 844101
PH : 9060945038.

JEHANABAD

204. DMC CARS (SNV1-01-), KHATA NO - 80, PLOT NO -1490, MOUZA - MUTHER, PS- JEHANBAD, DIST - JEHANABAD - 804408
PH : 9031011806/9900024001.

KATIHAR

205. SEEMANCHAL MOTORS PVT. LTD. (O601-01-), NEAR SBP VIDYA VIHAR SCHOOL, SIRSA, KATHIAR PURNEA ROAD, KATIHAR - 854105
PH : 7762893700.

KISHANGANJ

206. SEEMANCHAL MOTORS PVT. LTD. (PX01-01-), PASCHIM PALI ROAD, COLLEGE ROAD, THANA:KNE, WARD NO.1, KISHANGANJ (BIHAR) - 855101
PH : 8797096019.

LAKHISARAI

207. GS MOTORS PVT. LTD. (CHU1-01-), TAUZI NO. 39, KHATA NO. 3, KHSRA NO. 496, MOUZA - JAINAGAR, ANCHAN - LAKHISARAI, DIST. -LAKHISARAI, BIHAR - 811311
PH : 9204756206.

MADHUBANI

208. RAJKRISHNA MOTORS LLP (CAJ2-01-), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211
PH : 9304481978
9693127351.

MOHANIA

209. PEARL CARS (VW01-01-), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109
PH : 8294634632/8294634649.

MOTIHARI

210. RAJIV AUTOMOBILES PVT LTD (T401-03-), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401
PH : 9234609669.

MUZAFFARPUR

211. RAJIV AUTOMOBILES PVT LTD (T401-01-), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002
PH : 9910347908.

212. RAM KRISHNA MOTORS PRIVATE LTD. (T402-01-), KRISHNA TALKIES CAMPUS, AKHARGAHT ROAD, MUZAFFARPUR, BIHAR. - 842001
PH : 9102173333.

213. RAJIV AUTOMOBILES PVT LTD (T401-04-), Khabra POKHAR LANE NO -1, PANCHAYAT -Khabra, CITY - MUZAFFARPUR - 843146
PH : 9234609671.

NAUGACHIA

214. SEEMANCHAL MOTORS PVT. LTD. (CFS1-01-), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT - BHAGALPUR, BIHAR. - 853204
PH : 8797096014, 8797096020.

NAWADA

215. REESHAV AUTOMOBILES (MG01-04-), 191 & 400, KHASRA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110
PH : 6206162228.

PATNA

216. VAUS AUTOMOBILE (1503-01-), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA. - 800014
PH : 9771446012.

217. KARLO AUTOMOBILES PVT LTD (1502-04-), NEAR BATA GUNJ, DINGA PATNA, BIHAR. - 800013
PH : 09304212119/7004573547.

218. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-03-), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001
PH : 9934020200.

219. REESHAV AUTOMOBILES PVT.LTD. (1506-01-), PLOT NO.25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004
PH : 7632995356.

220. KARLO AUTOMOBILES PVT LTD (1502-05-), JAGDEOPATH , NEAR SAI CORPORATE PARK, PATNA .- 801506
PH : 9264190675.

221. ALANKAR (1504-06-), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA - 800006 - 800006
PH : 9304403916.

PURNEA

222. SEEMANCHAL MOTORS PVT. LTD. (6V01-01-), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326
PH : 8797096014.

SAHARSA

223. GS MOTORS PVT. LTD. (AAP1-02-), PATUAHA, NH 107 SAHARSA,BIHAR - 852201
PH : 9263638456.

SAMASTIPUR

224. RAJKRISHNA MOTORS LLP (1W02-01-), KHSRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR - 848101
PH : 9204552405.

SASARAM

225. PEARL CARS (1X01-01-), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115
PH : 8294634602/8294634649.

SITAMARHI

226. RAJIV AUTOMOBILES PVT. LTD. (E001-01-), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. - 843301
PH : 9234609671
7280074124.

SIWAN

227. SHREE GOPAL AUTO PVT. LTD. (O501-01-), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236
PH : 9771486132.

CHANDIGARH

CHANDIGARH

228. MODERN AUTOMOBILES (702-01-), 4 M.W. INDL AREA, CHANDIGARH - 160002
PH : 9646000190.

229. AUTOPACE NETWORK PVT LTD (705-01-), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002
PH : 9878422201.

230. TRICITY AUTOS (SM01-02-), PLOT NO 296, INDUSTRIAL AREA PHASE-2, CHANDIGARH - 160002
PH : 9988882335.

231. NAVDESH AUTO LLP (708-01-), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. - 160002
PH : 7087035482.

CHATTISGARH

CHARODA

232. SPARSH AUTO (SIZ1-01-), NH-6, OPP. RAIL NAGAR, CHARODA, BHILAI - 490025
PH : 8770554701.

GHARGHODA

233. M SQAURE (SML1-01-), M/S M SQAURE,VILLAGE BHENGARI, NAVAPARA-TENDA, GHARGHODA,DISTRICT – RAIGARH CHHATTISGARH. PIN CODE: 496111 - 496111
PH : 7987690484.

KURUD

234. HDN MOTORS (SKS1-01-), KHASRA NO 601/9 & 601/10, DHAMTARI-RAIPUR ROAD, KURUD, CHHATTISGARH - 493663
PH : 7909800004.

PHULBANI

235. SKY AUTO (CEP1-01-), PLOT NO. 54/633, GUDRIASHI, KHAJURIAPADA,DISTRICT – KANDHAMAL ODISHA. PIN CODE: 762001 - 762001
PH : 9776900333.

CHHATTIGARH

PENDRA

236. M SQAURE (SCZ1-01-), – M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA,GOURELA PENDRA MARWAHI-495119 - 495119
PH : 7987590484.

CHHATTISGARH

AKALTARA

237. M SQAURE (SKE1-01-), SHOP NO 4.5,6,7 & 8, SHRI NARAYAN COMPLEX & GODOWN, NEAR INDRA UDAY SHEORINARAYAN ROAD,AKALTARA-495552, CHHATTISGARH - 495552
PH : 7987590484.

AMBIKAPUR

238. MAHAMAYA AUTOCARS PVT LTD (AE01-01-), MANEDRAGARH ROAD, AMBIKAPUR, CHHATTISGARH - 497001
PH : 9877741432.

BAGBAHARA

239. HDN MOTORS (SEB1-01-), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449
PH : 7909800004.

BAIKUNTHPUR

240. MAHAMAYA AUTOCARS PVT LTD (CQU01-01), WARD NO.01, KHATA NO.91/6, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335 PH :9179350707.
- BALOD**
241. CHOUMAN (SFE1-01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228 PH :9837325267.
- BALODA BAZAR**
242. SKY AUTOMOBILES (5001-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH - 493332 PH :9893307429.
- BASNA**
243. VISHWABHARTI (VT01-01), M/S VISHWABHARTI AUTO, PADAMPUR ROAD, BASNOUL, BASNA, CHHATTISGARH - 493554 PH :626260060.
- BEMETRA**
244. CHOUMAN AUTOMOBILES LLP (CBC2-01), KHASRA NO. 88/2, CHOUMAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVGHAD CHOWK, BEMTARA CHATTISGARH - 491335 PH :6262000222.
- BHATAPARA**
245. SPARSH AUTOMOBILES (BBJ1-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118 PH :8921326361/ 9285505780.
- BHILAI**
246. CHOUMAN AUTOMOBILES LLP (B305-01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUMAN ESTATE, G.E. ROAD, SUPELA, BHILAI - 490023 PH :9111100140.
247. SPARSH AUTOMOBILES PVT LTD (8304-01), R-17, INDUSTRIAL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH - 490026 PH :8779064848.
248. CHOUMAN AUTOMOBILES LLP (B305-02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001 PH :6262000222.
- BHILLAI**
249. SPARSH AUTOMOBILES (8304-02)- M/S. SPARSH AUTO VEERSAVARKAR MARKET, G.E ROAD, SUPELA,BHILLAI-490023 - 490023 PH :9926626662.
- BILASPUR**
250. SATYA AUTO PVT LTD (C303-01), SECTOR C, PLOT NO. 42, SIRGUTTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001 PH :9109194833.
251. SATYA AUTO PVT LTD (C303-02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH - 495006 PH :9977879698.
252. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (C302-01), KHASRA NO. 420 & 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR ROAD, RAIPUR ROAD, PARSADA, BILASPUR. - 49523 PH :6262622560.
- DALLIRAJHARA**
253. CHOUMAN (SMZ1-01), H.NO 185, WARD NO 25, NAYA MARKET,DALLIRAJHARA,BALOD DISTRICT-491228 - 491228 PH :6262000222.
- DEOBHOG**
254. SPARSH AUTO (SIQ1-01), M/S SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR,NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG - 493890 - 493890 PH :9926626662.
- DHAMTARI**
255. SKY AUTOMOBILES (7V01-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH :888998612.
- DURG**
256. SPARSH AUTOMOBILES PVT LTD (7W03-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001 PH :9640473544.
- GARIYABANDH**
257. SPARSH AUTOMOBILES (CCH1-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABANDH, CHHATTISGARH - 756032 PH :9669638883.
- JAGDALPUR**
258. SKY AUTOMOBILES (EC01-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH - 494001 PH :9109996511.
- JANJIR**
259. SATYA AUTO PVT LTD (9N02-01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJIR - 495668 PH :7747000446.
- KANKER**
260. SKY AUTOMOBILES (5001-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER , DISTRICT – KANKER, CHHATTISGARH - 494334 PH :889998625.
- KAWARDHA**
261. CHOUMAN AUTOMOBILES LLP (D02-01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491 995 PH :6262000222.
- KHAIRAGARH**
262. SPARSH AUTOMOBILES PVT LTD (GMG1-01), KHAIRAGARH JHALBANDHA ROAD,AMILPARA, OPP - BIJAL OFFICE, KHAIRAGARH -491881 - 491881 PH :9926626662.
- KHARSIA**
263. SATYA AUTO (SET1-01), M/S SATYA AUTO , BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 496661 PH :9993092051.
- KONDAGOAON**
264. SKY AUTO (SDF1-01), - M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGOAN, CHHATTISGARH - 494226 PH :9425204051.
- KORBA**
265. SATYA AUTO PVT LTD (U702-01), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681 PH :8462000861.
- MAHASAMUND**
266. SPARSH AUTOMOBILES (5002-02), BARONDA CHOWKN, BAGBAGRA ROAD, MAHASAMUND. - ?? PH :9926280700.
- MANENDRAGARH**
267. MAHAMAYA AUTOCARS PVT LTD (AE01-02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442 PH :9584136234.
- MUNGELI**
268. SATYA AUTO PVT LTD (BLE2-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468 PH :8462000844.
- PATHALGAON**
269. MAHAMAYA AUTOCARS PVT LTD (BX01-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118 PH :9752195523.
- PITHORA**
270. SPARSH AUTOMOBILES (CCG1-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008 PH :9926280700.
- RAIGARH**
271. SATYA AUTO PVT LTD (7Y03-01), JINDAL ROAD, RAIGARH - 496001 PH :7024398350.
- RAIPUR**
272. SKY AUTOMOBILES (5001-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010 PH :9584433102.
273. SKY AUTOMOBILES (5001-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH :9584460290.
274. SPARSH AUTOMOBILES (5002-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001 PH :9669792000.
275. SKY AUTOMOBILES (5001-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH :9893000161.
276. SKY AUTOMOBILES (5003-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH :9522314155.
277. SPARSH AUTOMOBILES (5002-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004 PH :9009666400.
278. SPARSH AUTOMOBILES (5002-05), PLOT - 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR - ?? PH :9977220395.
279. SKY AUTOMOBILES (5001-07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. - 492013 PH :9584460289.
280. HDN MOTORS PVT. LTD. (5005-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. - 492001 PH :7909800093.
281. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH - 492005 PH :6262620057.
- RAJIM**
282. SPARSH AUTOMOBILES (5002-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493381 PH :966963883.
- RAJNANDGAON**
283. SPARSH AUTOMOBILES PVT LTD (LQ02-01), NEAR HANUMAN TEMPLE, VILL-MANKI , NH-6, RAJNANDGAON, CHHATTISGARH - 491441 PH :7887518100.
- SARAIPALLI**

Dealer Network (AS ON 31.10.2023)

284. SKY AUTOMOBILES PVT. LTD. (BUF1-01-), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI - 493558
PH :7000723259.
- SARANGARH**
285. SATYA AUTO PVT LTD (BU/C2-01-), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. - 733751
PH :8462000841.
- SIMGA**
286. HDN MOTOR (SSZ1-01-), PLOT NO 2, WARD NUMBER 05, SHANKAR NAGAR, SIMGA, BALODA BAZAR, CHHATTISGARH - 493101
PH :9826686000.
- TILDA**
287. SKY AUTOMOBILES (CWR1-01-), KASRA NO. 29/31, TILDA, DIST.-RAIPUR, CHHATTISGARH. - 493 114
PH :9425204051.
- TITLAGARH**
288. ODYSSEY MOTORS (SQE1-01-), M/S PLOT NO 687/1216, MOUZA PIPALPATAR,
TITLAGARH, BALANGIR, ODISHA - 767033
PH :9439314464.
- CHHATTISGARJH**
- SHIVRNARAYAN**
289. SATYA AUTO (SMQ1-01-), M/S SATYA AUTO,DEORI, SHIVRNARAYAN, JANJIRI – CHAMPA, CHATTISGARH - PIN 495556 - 495556
PH :9993092051.
- DADRA AND NAGAR HAVELI**
- SILVASSA**
290. KATARIA AUTOMOBILES PVT. LTD. (ED01-01-), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230
PH :9728316223.
- DAMAN AND DIU**
- DAMAN**
291. KATARIA AUTOMOBILES PVT. LTD. (104-08-), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY - 396210
PH :9924130655.
- DELHI**
292. SAYA AUTOMOBILES PVT. LTD. (808-03-), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033
PH :47088888.
293. BAGGA LINK MOTORS PVT LTD. (811-01-), 395 PATPAR GARJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092
PH :46488830, 46488831.
294. DD MOTORS (A DIVISION OF D.D. PREM PVT LTD.) (08F1-01-), A-100, MAYAPURI PHASE-II,NEW DELHI - 110064
PH :41845000, 49305232.
295. COMPETENT AUTOMOBILES CO. LTD. (806-03-), PLOT NO.3,GAZIPUR,DELHI - 110096
PH :45300000.
296. T.R. SAWHNEY MOTORS PVT LTD (819-01-), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094
PH :999399104, 999399104.
297. RANA MOTORS PVT LTD (08A1-02-), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020
PH :41707777.
298. T.R. SAWHNEY MOTORS PVT LTD (819-02-), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042
PH :71118333.
299. DD MOTORS (A DIVISION OF D.D. PREM PVT LTD.) (08F2-01-), 5, WAZIPUR,INDUSTRIAL AREA,ADJACENT TO WAZIPUR DEPOT,RING ROAD, NEW DELHI - 110035
PH :999090388, 8860637394, 8860637306, 8448594691.
300. ROHAN MOTORS LTD. (886-01-), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044
PH :40567900, 4167925-259.
301. MAGIC AUTO PVT. LTD. (888-01-), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI - 110064
PH :41847777.
302. DD MOTORS (A DIVISION OF D.D. PREM PVT LTD.) (08F3-01-), KHASRA NO. 544/1, MUNDKA, NEW DELHI - 110041
PH :25983535, 4861500.
303. T.R. SAWHNEY MOTORS PVT LTD (819-04-), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092
PH :9999044326, 9999525756.
304. MAGIC AUTO PVT. LTD. (08B7-01-), PLOT NO. 68/3,MOTINAGAR,NEW DELHI - 110015
PH :43777777, 43777721.
305. SAYA AUTOMOBILES (808-2B-), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI - 110033
PH :27731325, 27731856.
306. RANA MOTORS PVT LTD (08A1-04-), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020
PH :40877777, 26389930.
307. COMPETENT AUTOMOBILES CO. LTD. (806-06-), 650/1A, 14, SHIVAJI MARG, NAGAFGHAR ROAD, NEW DELHI - 110015
PH :8377007988.
308. PREM MOTORS PVT. LTD. (08D4-01-), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI - 110037
PH :011 42390000.
309. AAA VEHICLEADES PVT. LTD. (08B9-03-), VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041
PH :9717092903.
310. RANA MOTORS PVT LTD (08A1-05-), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.11, DELHI. - 110033
PH :41609999, 42474444.
311. T.R. SAWHNEY MOTORS PVT LTD (08D2-01-), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064
PH :71119333, 9999049337.
312. DD MOTORS (A DIVISION OF D.D. PREM PVT LTD.) (08F2-02-), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015
PH :99903888.
313. MAGIC AUTO PVT. LTD. (08D5-01-), PLOT NO. 49 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI - 110092
PH :981741741.
314. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-03-), PLOT NO. 87/1, RANAJI ENCLAVE, NAGLI SAKRAWATI,BEHIND NAGLI METRO STATION, NAGAFGHAR, NEW DELHI. - 110043
PH :8448487126, 8448095528.
315. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F5-01-), 36/22, NEAR RAMDEV CHOWK, NARELA, DELHI - 110040
PH :999127953, 9873578740.
316. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-04-), 32/19, OPP SHANTI GARDEN, DWARKA SECTOR-3, MATIALA DELHI - 110059
PH :9873173005.
317. FAIR DEAL WHEELS PVT. LTD (08E3-01-), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.49/17, OPP. BRAHMASHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANHWALA ROAD, DELHI - 110086
PH :8448690737.
318. COMPETENT AUTOMOBILES CO. LTD. (806-07-), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059
PH :9682797774.
319. JAGMOHAN AUTOMOTIVES (08F6-01-), PLOT NO. 69/2, WAZIPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052
PH :9650790351.
320. RANA MOTORS (08A1-08-), B-83, GT KARNAL ROAD, INDUSTRIAL AREA, OPP. GUJRANWALA TOWN, NEAR BIKANER WALA, DELHI - 110033
PH :8379496300.
321. AAA VEHICLEADES (08B9-G1-), KHASRA NO. 204, MAIN CHHATARPUR ROAD, CHHATARPUR, NEAR SAI BABA MANDIR, DELHI, PIN-110030 - 110030
PH :9829342761.
322. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F8-01-), PLOT NO.9, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. - 110063
PH :43288888.
323. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F8-02-), A-3, WAZIPUR INDUSTRIAL AREA, DELHI. - 110052
PH :42020000, 9910142455.
324. VIPUL MOTORS (08F7-01-), B-26, JHILMIL INDUSTRIAL AREA, DELHI-110095 - 110095
PH :981233385.
- OKHLA, DELHI**
325. AAA VEHICLEADES PVT LTD (08B4-01-), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020
PH :8446582912.
- WAZIPUR - DELHI**
326. DD MOTORS (08F1-05-), A-90, WAZIPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052
PH :9310367233.
- GOA**
- BICHOLIM**
327. SAI SERVICE PRIVATE LIMITED (BHN1-01-), CITY SURVEY NO. 49/1, MUSLIM WADDO, BICHOLIM, GOA - 403529
PH :2385500, 9881746566.
- CANACONA**
328. CHOWGULE INDUSTRIES PVT. LTD. (IT01-01-), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHRESTAL, CANCONA, SOUTH GOA - 403702
PH :0832-2633010/8805024916.
- CUNCOLIM**
329. SAI SERVICE PRIVATE LIMITED (3402-06-), SURVEY NO.647, SHOP NO.3-A-II, CANCNA MODI, CUNCOLIM, SOUTH GOA - 403703
PH :2763062, 2763063, 9850398057.
- DHARBANDORA**
330. CHOWGULE INDUSTRIES PVT. LTD. (3408-07-), AT-KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401
PH :0832-6623477/7888004357.
- MAPUSA**

331. SAI SERVICE PRIVATE LIMITED (3402-05), D-29,MAPUSA INDUSTRIAL ESTATE,MAPUSA, GOA . - 403507 PH :2267000, 8660432266.
332. CHOWGULE INDUSTRIES PVT. LTD. (3408-03), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE KARASIWADA, MAPUSA, GOA . - 403507 PH :0832-6631666/6631608/8888817955.
- MARGAO**
333. CHOWGULE INDUSTRIES PVT. LTD. (3408-01), OPP.DAMODAR TEMPLE,FATODA,MARGOA,GOA . - 403602 PH :0832-6623444/4207796630235.
334. SAI POINT CARS PVT LTD (3409-01), H.NO.17,WARD NO.5,SURVEY NO.343/344,MARGAO PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN,SALCETE ,GOA . - 403722 PH :95455454826/8380013499.
335. SAI SERVICE PRIVATE LIMITED (3402-02), SURVEY NO. 212/4,VILLAGE - VERNATAL : SALCETE, NEXT TO AGNEL POLYTECHNIC, MARGAO . - 403718 PH :2883000, 2791195,9834398096.
336. CHOWGULE INDUSTRIES PVT. LTD. (3408-08), PLOT NO. M-58 AND M-59, PHASE 3B, VERA INDUSTRIAL ESTATE, MARGAO, VERA, SALCETE SOUTH GOA, GOA . - 403722 PH :0832-6621800/9922950800.
- PANAJI**
337. CHOWGULE INDUSTRIES PVT. LTD. (3408-02), DB BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001 PH :9922950798/9922952701.
338. SAI SERVICE PRIVATE LIMITED (3402-07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELIGAON, ST.INEZ, PANJIM, GOA-403 002 . - 403001 PH :22229222/225222,9923865179.
- PERNEM**
339. CHOWGULE INDUSTRIES PVT. LTD. (CUA1-01-), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA . - 403512 PH :8380082693.
- POLEM**
340. CHOWGULE INDUSTRIES (SH01-01-), DULGAL-SHELM VILLAGE POLEM-LOLIEM SOUTH GOA,403728 - 403728 PH :9049555395.
- PONDA**
341. SAI SERVICE PRIVATE LIMITED (3402-03), OFF PANJIM HIGHWAY,PONDA,GOA . - 403401 PH :2324106, 2311499, 2324120, 9518349559.
- PORVORIM**
342. SAI SERVICE PRIVATE LIMITED (3402-01-), SURVEY NO: 36/1,PENHA DE FRANCE,TAL : BARDEZ, ALTO PCVRORIM,GOA . - 403501 PH :2419200, 2414324, 9881746567.
- SANVORDEM**
343. CHOWGULE INDUSTRIES PVT. LTD. (BTK1-01-), SURVEY NO. 4, SUBDIVISION-3, VILLAGE – CACORA, TALUKA – CURCHOREM, SANVORDEM, DIST. – SOUTH GOA, GOA . - 403706 PH :9850477607.
- SATTARI**
344. CHOWGULE INDUSTRIES PVT. LTD. (3408-10-), SURVEY NO. 60, SUB DIV NO. 05, VILLAGE ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA . - 403505 PH :9923464422.
- TALEIGAON**
345. CHOWGULE INDUSTRIES PVT. LTD. (3408-06-), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON . - 403001 PH :9922950798/9922925701.
- VASCO**
346. SAI SERVICE PRIVATE LIMITED (3402-04-), NEXT TO SHIKALIM CHURCH,SHIKALIM,VASCO,GOA . - 403802 PH :2542581/2526008/2526000/9850398058.
347. CHOWGULE INDUSTRIES PVT. LTD. (3408-09-), OPP BHARAMASTAL TEMPLE, PATRONG BAINA, VASCO,GOA . - 403802 PH :0832-2500407/427/9921943608/9850986904.
- GUJARAT**
- AHMEDABAD**
348. KIRAN MOTORS LTD (T02-01-), SARKHEJ - GANDHINAGAR HIGHWAY,OPP. RAJPATH CLUB,AHMEDABAD . - 380054 PH :9624055445.
349. KATARIA AUTOMOBILES PVT. LTD. (104-01-), D/8 BEHIND ESI HOSPITAL,OUTSIDE DARIAPUR DARWAJA,AHMEDABAD . - 380016 PH :98245443500.
350. POPULAR WHEELERS (INDIA) PVT. LTD. (105-01-), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NAROLA HIGHWAY,ISANPURA ROAD,AHMEDABAD . - 382443 PH :61903232.
351. KIRAN MOTORS LTD (102-02-), BEHIND L&T GODOWN,SARKHEJ SANAND HIGHWAY, AHMEDABAD . - 382210 PH :26891863, 26891009, 26891294.
352. KATARIA AUTOMOBILES PVT. LTD. (104-05-), NEAR KOKHRA BRIDGE,MANINAGAR . - 380008 PH :7567568182.
353. KATARIA AUTOMOBILES PVT. LTD. (110-01-), BEHIND ADANAL PUMP ,NEAR MAKARBA CROSSING, MAKARBA,SG HIGHWAY . - 380051 PH :7069054900.
354. POPULAR WHEELERS (INDIA) PVT. LTD. (111-01-), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA AHMEDABAD . - 380054 PH :65058111.
355. KIRAN MOTORS LTD (112-01-), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD . - 380005 PH :8347491800/9824023122.
356. UDAY AUTOLINA PVT. LTD. (113-01-), NEAR GALAXY SPAICIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT . - 382430 PH :7567229999.
357. NANDA AUTOMOBILES PVT. LTD. (114-01-), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLAI ROAD, NAROL, AHMEDABAD, GUJARAT . - 382405 PH :8866558787 / 8460088883.
358. STARLINE CARS (AHMEDABAD) PVT LTD (115-01-), PLOT NO. 10/32, NANDA CHILDOA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD . - 382330 PH :9824601729.
359. KIRAN MOTORS LTD (112-02-), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAJISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD . - 382330 PH :7069868374/9173840458/7383651643/9173044104 .
360. KIRAN MOTORS LTD (102-04-), SURVEY NO. 2453/TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD . - 380060 PH :9327617447, 9327214890.
361. POPULAR WHEELERS (INDIA) PVT. LTD. (109-01-), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. - 380007 PH :9099993830.
362. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (129-01-), PLOT NO. 116, BOPAL - AMBIL ROAD, BOPAL , AHMEDABAD, DISTRICT – AHMEDABAD, GUJARAT . - 380058 PH :721140026, 721130053.
363. TANU MOTORS PVT. LTD. (118-01-), SURVEY NO. 115/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) . - 382110 PH :9512009110.
- AMBAJI**
370. TANU MOTORS (SKQ1-01-), OPP KUMBHARIYA JAIN DERASAR, GIDC ROAD, AMBAJI, DIST-BANASKANTHA, GUJARAT 385110 - 385110 PH :9727709227.
- AMOD**
371. RAVIRATNA MOTORS (F801-03-), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT . - 392110 PH :9687691106/9687699383.
- AMRELI**
372. ALPHA AUTOLINK LLP (9E02-01-), LATHI BY PASS ROAD, AMRELI, GUJARAT . - 365601 PH :9978938856/9978938833.
- ANAND**
373. AMAR CARS PVT. LTD. (F702-01-), JANTHA CROSSING SOJITRA ROAD,ANAND . - 388121 PH :9909960772.
374. KATARIA AUTOMOBILES PVT. LTD. (F703-01-), SURVEY NO. 189/1+2/4+3/AK 190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT. - 388 120 PH :7698954466.
- ANKLAV**

Dealer Network (AS ON 31.10.2023)

375. KATARIA AUTOMOBILES (SEO1-01), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASDAR CHOKDI, TAL. ASDAR, CITY ANKLAV, DIST. ANAND, PIN-388510, GUJARAT - 388510
PH :7227917151.

ANKLESHWAR

376. RAVIRATNA MOTORS PVT LTD (P901-01), PLOT NO. 624/2BA, GIDC, VALIA ROAD, ANKLESHWAR - 393002
PH :9687691063.

BAGODRA

377. NANDA AUTOMOBILES PVT. LTD. (CVQ1-01), SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA. - 382240
PH :9727822000, 9726269111.

BALASINOR

378. AMAR CARS PVT. LTD. (CJE1-01), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJINA MUWADA, VILLAGE - VADALA, TALUKA - BALASINOR, DISTRICT - MAHISAGAR, GUJARAT. - 388255
PH :7211109960.

BARDOLI

379. DHRU MOTORS (4002-02), G.I.D.C.SURAT BARDOLI ROAD,BARDOLI. - 394601
PH :9625131139/879104454.
380. KATARIA AUTOMOBILES PVT. LTD. (Q106-02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310
PH :7698022665/9924138860.

BAREJA

381. KATARIA AUTOMOBILES PVT. LTD. (BAN1-01), 5/6/7, ADITYA COMPLEX NATIONAL HIGHWAY-8, BAREJA , TALUKA - DASKROI, DISTRICT - AHMEDABAD, GUJARAT - 382425
PH :7046079997.

BARWALA (AHMEDABAD)

382. UDAY AUTOLINK PVT. LTD. (I401-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST, AHMEDABAD - 382450
PH :7667449999/9687677611.

BAVLA

383. KATARIA AUTOMOBILES PVT. LTD. (104-07-), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220
PH :9824344889.

BECHRAJI

384. STARLINE CARS PVT. LTD. (GJM1-01), R.S. NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST.-MEHSANA. - 384210
PH :9909043244.

BHABHAR

385. STARLINE CARS (CWD1-01), SHOP NO. 7, 8, 9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABBAR, DIS. -BANASKANTHA, GUJARAT. - 385320
PH :90904043244, 9824601729.

BHACHAU

386. K.D. MOTORS (P501-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140
PH :9909553036, 9879390919.

BHANVAD

387. ATUL MOTORS JAM LLP (BND2-01), R.S. NO.439, PLOT NO.19, BHANVAD (GUJARAT) - 360510
PH :9574005964 / 9574004714.

BHARUCH

388. RAVIRATNA MOTORS (F801-01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011
PH :9687691044, 9687632647.

BHAVNAGAR

389. KATARIA AUTOMOBILES (C902-01), SURVEY NO 137/2, PLOT NO 30/1&3 AND 301/4&5, VERTEJ GIDC, NARI CHOKDI, RAJKOT ROAD, BHAVNAGAR. - 364004
PH :9426168286.
390. KATARIA AUTOMOBILES (C902-02), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATNAKA, AT-ADHEWADA, DIST-BHAVNAGAR, GUJARAT - 364002. - 364002
PH :9638884422.

BHUJ

391. K.D. MOTORS (P501-01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , BHUJ, GUJARAT - 370001
PH :02832-232534/ 9879898799, 8780351870.
392. K.D. MOTORS (P501-03), R.S NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001
PH :9090953124.

BODELI

393. KIRAN MOTORS LTD (0R01-01), OPP.NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA: SANKHEDA,VADODARA - 391135
PH :9714592999.

BORSAD

394. AMAR CARS PVT. LTD. (BJM1-01), BORSAD - TARAPUR HIGHWAY, BORSAD , DISTRICT - ANAND, GUJARAT - 385840
PH :9586477744.

BOTAD

395. DREAM VEHICLES PVT LTD (CFI1-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO - CHOTILA, DISTRICT - SURENDRANAGAR, GUJARAT. - 363520
PH :9227775709.

395. KATARIA AUTOMOBILES (AP03-19), PLOT NO.13, SURVEY NO 33,34, 35 PAIKKI VILLAGE, HADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIYAD BOTAD ROAD - 364710
PH :9558060658.

CHANASMA

396. STARLINE CARS (CVF1-01), 16/17, PASABIHJI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220
PH :9909043244, 9824601729.

CHANDIYAL

397. DB MOTORS (STJ1-01), SHOP NO 1,2,3 SWAPNIL ARCADE, GRAM-CHANDIYAL, TAL-DASKROI, DIST-AHMEDABAD, GUJARAT. - 382433
PH :9909048301.

CHANDKHEDA - AHMEDABAD

398. KATARIA AUTOMOBILES PVT. LTD. (104-10-), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD. - 382470
PH :9723302111.

CHANDRALA

399. NANDA AUTOMOBILES PVT. LTD. (GLT1-01-), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST-GANDHINAGAR, GUJARAT - 382320
PH :9725062187, 9727726003.

CHANGODAR

400. PEGASUS (A UNIT OF VISUAL MOTORS PVT. LTD.) (CTD2-01), SURVEY NO.393, VILLAGE - MORAIYA, CHANGODAR, TALUKA - SANAND, SUN DISTT - AHMEDABAD. - 382210
PH :7211120014.

CHIKHLI

401. KATARIA AUTOMOBILES PVT. LTD. (BCB1-01-), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521
PH :7698953899.

CHILODA

402. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (GLC1-01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. - 382355
PH :7971846442.

CHOTILA

403. DREAM VEHICLES PVT LTD (CFI1-01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO - CHOTILA, DISTRICT - SURENDRANAGAR, GUJARAT. - 363520
PH :9227775709.

CHUDA

404. DREAM AUTOMOBILES (SOC1-01-), NR. GOVT HOSPITAL,CHATARLIYA ROAD,CHUDA,SURENDRANAGAR. - 363410
PH :9313802500.

DABHOI

405. KATARIA AUTOMOBILES PVT. LTD. (U001-01-), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADDODARA - 391110
PH :8156000463.

DAHOD

406. R B CARS PVT. LTD. (2C01-02-), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151
PH :9099043715, 9727700823.

DANTIWADA

407. TANU MOTORS (SSX1-01-), VISHWAS COMPLEX, OPP HINGLAJ PETROL PUMP, NR. JAIN DERASAR, DANTIWADA HIGHWAY, AT-PO PANTHWADA, TALUKA-DANTIWADA, DIST-BANASKANTHA - 385545
PH :9099404024.

DEESA

408. TANU MOTORS PVT. LTD. (Q801-03-), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535
PH :9909006099.

DEHGAM

409. NANDA AUTOMOBILES PVT. LTD. (2B01-03-), NEAR UMIYA Mataji TEMPLE, COLLEGE ROAD AHMEDABAD ROAD, DEHGAM - 382305
PH :234567.

DETROJ

410. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (GLC1-01), PLOT NO-61,MILKAT NO-2534, AT-DETROJ,TALUKA-DETROJ-RAMPURA-382120 - 382120
PH :7971846442.

DEVGADH BARIA

411. R B CARS PVT. LTD. (2C01-05-), BESIDE ARIHANT PETROL PUMP, PILOD ROAD, DEVGADH BARIA - 389380
PH :9099049344, 6352384846, 9099043715.

DHANERA

412. TANU MOTORS PVT. LTD. (BZW1-01-), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA - 385310
PH :9099006099, 8401784018.

DHARAMPUR

413. KATARIA AUTOMOBILES PVT. LTD. (BSK1-01-), SURVEY NO.293/P1, VILLAGE ASHURA NR. ASHURA CIRACLE, DHARMPUR DISTT. VALSHAD, GUJARAT - 396050 PH :9723455291.
- DHARI**
414. ALPHA AUTOLINK LLP (GG02-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI, TALUKA - DHARI, DIST. - AMRELLI, GUJARAT. - 365640 PH :9904549999/9978938858.
- DHOLKA**
415. TANU MOTORS PVT. LTD. (CQ02-01-), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, Dholka KALIKUND HIGHWAY, Dholka, GUJARAT - 382 225 PH :9512009104.
- DHORAJI**
416. PERFECT AUTO SERVICE (5502-09-), JETPUR ROAD, OPP. SRINATHJI SOCIETY, DHORAJI - - 360410 PH :9099027402, 8200969617.
- DHRANGADHRA**
417. DREAM VEHICLES PVT LTD (IM01-01-), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH :9227775725.
- DIYODAR**
418. TANU MOTORS (SFU1-01-), NR.HP PETROL PUMP, BHESANA CROSS ROAD, BHABHAR HIGHWAY, DIYODAR-385330 - 385330 PH :909017756.
- DWARKA**
419. ATUL MOTORS JAM LLP (CJG2-01-), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT – DWARKA - . - 361335 PH :9712212900 / 957404714.
- GANDHIDHAM**
420. B M AUTOLINK (7702-01-), EAST OF PLOT NO. 30-35,NATIONAL HIGHWAY, GANDHIDHAM - 370201 PH :9727725723.
421. B M AUTOLINK (7702-03-), SURVEY NO 129/26 P, GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110 PH :9727725723, 9727739550.
- GANDHINAGAR**
422. NANDA AUTOMOBILES PVT. LTD. (2B01-01-), 1003,SECTOR-28,GANDHI NAGAR - 382028 PH :(079)23212692 / 93 / 94.
423. NANDA AUTOMOBILES PVT. LTD. (2B01-05-), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028 PH :079-23212692/93/94 9727726003.
- GODHRA**
424. R B CARS PVT. LTD. (2C01-01-), PLOT NO. 112/11..12-VAVDI, GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001 PH :9099043715, 9727700823.
425. R B CARS PVT. LTD. (2C01-04-), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001 PH :9099043715, 9727700823.
- GONDAL**
426. ATUL MOTORS PVT LTD (5503-05-), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY,GONDAL - 360311 PH :9904922333.
- GOZARIA**
427. VIMCO MOTORS PVT. LTD. (GJN1-01-), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA . - 382825 PH :7016623842.
- HALOL**
428. R B CARS PVT. LTD. (BKCI-01-), PLOT NO. 10/4 & 10/4D, VADODARA - GODHRA HIGHWAY, NEAR NAVIJAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350 PH :9099043715, 9727700823.
- HALVAD**
429. DREAM VEHICLES PVT LTD (GX01-01-), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330 PH :8238009665.
- HANSOT**
430. RAVIRATNA MOTORS (BGQ1-01-), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. - 393030 PH :9687691063.
- HIMMATNAGAR**
431. KIRAN MOTORS LTD (P601-01-), NEAR G.I.D.C.MOTIPURA, HIMMATNAGAR - 383001 PH :9824576711.
- IDER**
432. KIRAN MOTORS LTD (UX01-01-), SURVEY NO.69 IDAR-ABAJI ROAD, IDAR DIST: SABARKANTHA - 383430 PH :8155994111.
- JAMBUSAR**
433. RAVIRATNA (SKR1-01-), SURVEY NO-2939-2954, PLOT NO-2, VILLAGE-JAMBUSAR, TALUKA-JAMBUSAR, DIST-BHARUCH. - 392150 PH :9687667595.
- JAMJODHPUR**
434. ATUL MOTORS (JAM LLP) (CSN3-01-), NEAR HDFC BANK, GAYATRI MANDIR ROAD, JAMJODHPUR, DIST-JAMNAGAR (GUJARAT) - 360530. - 360530 PH :9537888988.
- JAMNAGAR**
435. ATUL MOTORS JAM LLP (F402-01-), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001 PH :9574004710 / 9574004716.
436. STARLINE CARS PVT. LTD. (D101-02-), CHANASMA HIGHWAY, PATTAN - 384265 PH :7046046187.
437. ATUL MOTORS JAM LLP (F402-02-), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002 PH :9574004704 / 9574004717.
438. ATUL MOTORS (JAM LLP) (F402-03-), OPP MADHAV BAUG1, NEAR RAILWAY OVER BRIDGE, JAMNAGAR, GUJARAT-361006. - 361006 PH :9574004709.
- JASDAN**
439. ATUL MOTORS PVT LTD (5503-09-), SURVEY NO. 123, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST-.RAJKOT, GUJARAT. - 360050 PH :9265404142.
- JHALOD**
440. R B CARS PVT. LTD. (CJF1-01-), SURVEY NO. 2550/10, 11, AT JHALOD, TALUKA- JHALOD, DISTRICT - DAHOD. - 389170 PH :909684363, 909043715.
- JUNAGADH**
441. PERFECT AUTO SERVICES (5502-06-), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPURA, JUNAGADH - 362001 PH :9879518052, 7043999073, 9909022618.
- JUNAGARH**
442. PERFECT AUTO SERVICES (5502-02-), PLOT NO. 81-82.G.I.D.C., DOLATPURA,RAJKOT-JUNAGAR HIGHWAY, JUNAGADH - 362001 PH :9909006980, 7043999073, 9909022618.
- KADI**
443. STARLINE CARS PVT. LTD. (D101-07-), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH :8160707156.
- KAKANPUR**
444. RB CARS (SDN1-01-), SURVEY NO.618/2, PAIKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. - 388713 PH :9099049347.
- KALAVAD**
445. ATUL MOTORS JAM LLP (BNC2-01-), SANIDHYA ARCADE, NEAR SANIDHYA PARTY PLOT, KALAVAD - DHORAJI ROAD, KALAVAD. - 381160 PH :9574222111.
- KALOL**
446. NANDA AUTOMOBILES PVT. LTD. (2B01-02-), PLOT NO. 162-168, GIDC,KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL . - 383028 PH :220781 / 82 / 83.
- KAPADVANJ**
447. AMAR CARS PVT. LTD. (NC01-01-), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADVANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620 PH :9909960761.
- KARJAN**
448. AMAR CARS PVT. LTD. (UZ01-01-), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODARA (GUJARAT) - 391210 PH :7567299666/99252462929.
- KATHLAL**
449. AMAR CARS PVT. LTD. (CXA1-01-), MAHAVEER AUTO SHOWROOM, NADIAS ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387 630 PH :9909960761.
- KESHOD**
450. PERFECT AUTO SERVICES (BZY1-01-), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA - KESHOD, DISTRICT - JUNAGADH, GUJARAT. - 362220 PH :7043999073.
- KHAMBHAT**
451. AMAR CARS PVT. LTD. (BNF1-01-), PLOT NO. 7/8, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620 PH :9909960772.
- KHEDA**
452. AMAR CARS PVT. LTD. (BNA1-01-), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570 PH :9909960761.
- KHEDBRAHMA**

Dealer Network (AS ON 31.10.2023)

453. KIRAN MOTORS (CMU1-01), AMBAJI ROAD, KHEDBRAHMA, DIST. - SABARKANTHA, PIN - 383255 - 383255
PH: .9824010721.

KHERALU

454. STARLINE CARS (SN02-01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA - 384325 PH: .9909043244, 9824601729.

KIM

455. KATARIA AUTOMOBILES PVT. LTD. (UW01-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110 PH: .9723555185.

KODINAR

456. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (CS01-01), R.S.NO.222, PLOT NO.2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720 PH: .7043992893, 7043340792.

KUKARWADA

457. STARLINE CARS PVT. LTD (CS1C-01), SHOP NO.741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830 PH: .9909043244, 9824601729.

LAVANA

458. RB MOTORS (SLW1-01), AT PO - LAVANA, NEAR BABILYA CROSSING, MODASA ROAD, LAVANA -389230 - 389230 PH: .9866099470.

LIMBDI

459. DREAM VEHICLES PVT LTD (BSG1-01), SURVEY NO.2/6/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421 PH: .02753-261262 / 9227775728.

LUNAWADA

460. R B CARS PVT. LTD. (BYN1-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA , TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230 PH: .909043715, 9727700823.

MAHUVA (BHAVNAGAR)

461. KATARIA AUTOMOBILES (IV03-01), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290 PH: .6357327534.

MAHUVA (SURAT)

462. KATARIA (BRM1-01), BLOCK NO. 14/2, VILLAGE BUDHALESHWAR, SURAT SAPUTARA STATE HIGHWAY,TAL. MAHUA, DIST. SURAT - 394250 - 394250 PH: .9824051060/9824094498.

MANAVADAR

463. PERFECT AUTO SERVICE (CU11-01), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA - MANAVADAR, DIST.-JUNAGADH. - 362 630 PH: .704399073.

MANDAL

464. KIRAN MOTORS LTD (IW01-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH: .9408803925.

MANDVI

465. K.D. MOTORS (UY01-01), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465 PH: .990953088, 9825353679.

MANGROL

466. KATARIA AUTOMOBILES PVT. LTD. (CAH1-01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH: .6357071775.

MANSA

467. NANDA AUTOMOBILES PVT. LTD. (B201-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINagar, GUJARAT - 382845 PH: .9727921000.

MEHMADBAD

468. AMAR CARS PVT. LTD. (BRA1-01), PATEL FALIYA, KHATRAJ, MEHMEDABAD, DIST. -KHEDE, GUJARAT. - 387130 PH: .9909960761.

MEHSANA

469. STARLINE CARS PVT. LTD. (D101-01), NAGALPUR HIGHWAY,MAHESANA , GUJRAT - 384002 PH: .9909043635.

470. TANU MOTORS PVT. LTD. (Q081-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH: .9909006076.

471. VIMCO MOTORS PVT. LTD. (D103-01), SURVEY NO. 104 & 104 PAIKI 1, AT P.O. - PALAVASANA, MEHSANA, GUJARAT. - 384 002 PH: .8909953333.

472. VIMCO MOTORS (D103-02), SHOP # 7&8, TIRUPATI SAHIBAGH MARKET, MEHSANA - RADHANPUR ROAD, NEAR SAJAH VILLA, MEHSANA - 380002. - 380002 PH: .8909953333.

METODA

473. ATUL MOTORS PVT LTD (5503-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021 PH: .8140909095, 9924688774.

MODASA

474. KIRAN MOTORS LTD (P601-02), SHAMIL JI ROAD,SABARKANTHA DIST , MODASA - 383315 PH: .815995111.

MORBI

475. PERFECT AUTO SERVICES (5502-07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI , TEHSIL-MORBI, DISTT-MORBI, GUJARAT. - 363641 PH: .909058044, 9925199569, 9879499088.

476. DREAM VEHICLES (LC01-03), NR. PRIME FILLINGS, PLOT-6 ,DHARMASADDHI VILLAGE:MAHENDRANAGAR, TALUKA: MORBI, DIST:MORBI , - 363642 PH: .7069089532.

MOTI KHAVADI

477. ATUL MOTORS JAM LLP (AAU2-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LAPUR, DIST - JAMNAGAR, GUJARAT, - 361140 PH: .9574047079 / 957404743.

MUNDRA

478. B M ALLINK (7702-02), PRAGPAR ROAD,MUNDRA,DISTRICT-KUTCH, GUJARAT, - 370421 PH: .9687632631, 9978940978.

NADIAD

479. AMAR CARS PVT. LTD. (F702-02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370 PH: .9909960761.

NAKHATARANA

480. KD MOTORS (CMV1-01), PLOT NO-1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHTRANA, KUTCH - 370615 PH: .9909953119.

NALIYA

481. KD MOTORS (SLX1-01), AT PO - SHAKTI SOCIETY, MAHVIR NAGAR, PLOT(1), OPP. BANK OF BARODA, NALIYA, TAL-ABDASA, KUTCH. - 370655 PH: .9909953119.

NANA PONDHA

482. AMAR CAR (SEL1-01), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA-KAPRADA, DIST-VALSAD - 396126 PH: .7227971155.

NASWADI

483. RAVIRATNA MOTORS (SCV1-01), HOUSE NO-301,302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR - 391150 PH: .9687691047.

NAVSARI

484. KATARIA AUTOMOBILES PVT. LTD. (Q701-01), PLOT NO.-891, OPP PAUVA MILL, NH-8,NEAR GANESH SISODRA CHOKDI,GANESH SISODIA NAVSARI, GUJARAT - 396463 PH: .9723430012.

NETRANG

485. RAVIRATNA MOTORS (CUZ1-01), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST-BHARUCH. - 393130 PH: .9687691063.

OLPAD

486. COMET CAR SALES & SERVICE PVT LTD (4006-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH: .9099916099.

PADRA

487. AMAR CARS PVT. LTD. (2205-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST - VADDODARA, GUJARAT - 391440 PH: .8980036200, 8980006795.

PALANPUR

488. TANU MOTORS (Q801-01), OPP.DHARTI RESORT, ABU-AHMEDABAD HIGHWAY, PALANPUR - 385001 PH: .9099017756.

489. STARLINE CARS PVT. LTD. (D101-08), SURVEY NO.4 & 5/2, OPPOSITE L.K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH: .9824601793.

PALEJ

490. RAVIRATNA MOTORS (BGR1-01), PLOT NO. 626/6, GIDC AREA, PALEJ, DISTRICT - BHARUCH - 392220 PH: .9687691044; 9687632647.

PALITANA

491. KATARIA AUTOMOBILES (CSD2-01), PLOT NO. 15, YASOVIJAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BIHVNAGAR. - 364270 PH: .6357314891.

PALSANA

492. KATARIA AUTOMOBILES PVT. LTD. (4004-07-),
BESIDE SAINATH COMPLEX, KADODARA
AHMEDABAD ROAD , NH-8, UMBHEL
GAM,TALUKA: PALSANA KADODARA, SURAT. -
382721
PH :9924446895.

PARDI

493. AMAR CARS (SLJ1-01-), OPPOSITE MORARJI
DESI MEMORIAL HALL, SERVICE ROAD
NH-48, KILLA-PARDI, DIST-VALSAD - 396125
PH :7226800777.

PATDI

494. DREAM VEHICLES PVT LTD (BFS1-01-), R.S.
NO.1614/2, PLOT NO.16, PATDI TALUKA
DASADA, DISTT. SURENDRANAGAR, GUJARAT -
382765
PH :9227775709.

PAVI JETPUR

495. PERFECT AUTO SERVICES (PKO1-01-), NEAR
ANKUR HOTEL, OPP. DHARESHWAR GEB
STATION, PITHADIA, RAJKOT HIGHWAY,
JETPUR (GUJARAT) - 360370
PH :9099027402, 8200969617.

PETLAD

496. AMAR CARS PVT. LTD. (CMW1-01-), SURVEY
NO. 396/2, RANGAIPIUR VILLAGE, PETLAD, DIST.
-ANAND - 388450
PH :9099017068.

PORBANDAR

497. ATUL MOTORS JAM LLP (T601-01-), PLOT NO.
208, GIDC VANANA, NATIONAL HIGHWAY ,
PORBANDAR, DIST. PORBANDAR GUJARAT -
360577
PH :9574004746 / 7228819123.

PRANTUJ

498. KIRAN MOTORS LTD (AA1-01-), NO.6/P, OPP.
VEGETABLE MARKET, PRANTUJ HIGHWAY ,
VILLAGE-KHAMALPUR, TALUKA-PRANTUJ,
DISTT. SABARKANTHA, GUJARAT - 383205
PH :9624401888.

RADHANPUR

499. STARLINE CARS PVT. LTD. (BN1-01-), SURVEY
NO. 208/A, MOUJA - RADHANPUR, RADHANPUR
MAIN ROAD, DISTRICT - PATAK, GUJARAT. -
385340
PH :9909043244, 9824601729.

RAJKOT

500. PERFECT AUTO SERVICES (5502-01-),
PERFECT HOUSE,GONDAL
ROAD,VANDI,RAJKOT - 360004
PH :9879499077, 9909006982, 9825304940.

501. ATUL MOTORS PVT LTD (5503-01-), PLOT
NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL
ESTATE, RAJKOT . - 360002
PH :8140909093.
502. PERFECT AUTO SERVICES (5502-04-), 150 RING
ROAD,OPP. GANDHIGRAM POLICE
CHOWKI RAJKOT - 360005
PH :9925238691, 9925117104.

503. ATUL MOTORS PVT LTD (5503-02-), BEHIND HP
PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL,
RAJKOT - 360005
PH :8347005082.
504. ATUL MOTORS PVT LTD (5503-06-), RAJKOT
AHMEDABAD HIGHWAY ,NR. CHANDARANA
PETROL PUMP, OPP. GUJARAT SAMACHAR
PRESS, AT, NAVAGAM RAJKOT - 360003
PH :9924688774.

505. PERFECT AUTO SERVICES (5502-08-), R.S. NO.
50/1, 150 FEET RING ROAD, RAIL NAGAR,
RONKI, RAJKOT, GUJARAT . - 360006
PH :9978861995, 9925117104.
506. KATARIA AUTOMOBILES PVT. LTD. (5504-01-),
S. NO. 10/1, TPS NO. - 10, KALAVAD ROAD,
MOTAMAMA, RAJKOT, GUJARAT. - 360001
PH :7573870001.

RAJPARDI

507. RAVIRATNA MOTORS PVT. LTD. (CAI1-01-),
R.S.NO.973, CTN NO. 1298, SHOPS PLOT NO.29
& 30, MOJE RAJPIARI, TALUKA-JHGADIA,
DISTT. BHARUCH - 393115
PH :9687691044, 9687632647.
508. RAVIRATNA MOTORS PVT. LTD. (9X01-01-),
OPP. JALARAM SAW MILL, NEAR HARSIDDHI
MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA,
GUJARAT . - 393145
PH :9687691062/9687645880.

RAJPIPLA

509. ALPHA AUTOLINK (BAK2-01-), R.S NO 96/3,
PLOT NO-4 & 7. HINDOURA ROAD, RAJULA
CITY, TALUKA-RAJULA . - 365560
PH :9033409043.

RAJULA

510. B.M. AUTOLINK (SCO1-01-), PARAGPAR CHAAR
RASTA RAJAPAR GHANDHIDHAM KUTCH - 370165
PH :9727725723.

SAMI

511. STARLINE CARS (BNH1-01-), SHOP NO. 55-56,
AMBESHWAR PLAZA, SAMI-HARIJ ROAD . -
384240
PH :9909043244, 9824601729.
512. VIMCO MOTORS (BNH2-01-), SURVEY
NO 917, VIRA SHOPPING CENTER, AT-SAMI,
TALUKA-HARIJ, DIST-PATAK, GUJARAT. -
384245
PH :8909953333.

SANTEJ

513. NANDA AUTOMOBILES PVT. LTD. (CXC1-01-),
SUB PLOT NO. 05, SHOP NO. 3 & 4, BLOCK NO.
1162, SANTEJ, KALOL . - 380060
PH :9727822000.

SANTRAMPUR

514. R B CARS PVT. LTD. (2C01-03-), NEAR PTC
COLLEGE, SANT ROAD, SANTRAMPUR,DISTT.-
PANCHMAHAL . - 389260
PH :8880585851, 9099043715.

SAVLI

515. KIRAN MOTORS LTD (CFD1-01-), SURVEY NO.
2592/1 PAKI 2, NEAR RELIANCE PETROL
PUMP, BHADRVA CHOWKDI, SAVLI - TIMBA
ROAD, SAVIL, TALUK - SAVLI, DISTRICT -
VADODARA, GUJARAT. - 391770
PH :7984799054.

SAYAN

516. KIRAN MOTORS LTD (OO01-01-), PLOT NO.6 TO
10 OF R BLOCK, SURVEY NO.209, VILLAGE
PARIA, TALUKA: OLPAD, SAYAN - 394130
PH :815588862/9662330480.

SAYLA

517. DREAM VEHICLES (SJMJ1-01-), LALGURU
COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT
SURENDRANAGAR, GUJARAT PIN 363430 -
363430
PH :9227775709.

SHANKESHWAR

518. STARLINE CARS (SLY1-01-), MANIBHADRA
SHOPPING CENTRE, SHANKESHWAR
HIGHWAY, SHANKESHWAR (GUJARAT)- DIST:
PATAN - 384246
PH :9824601729.

SHAPAR

519. ATUL MOTORS PVT LTD (BQZ1-01-), SHOP NO.
1 TO 4, SURVEY NO. 305/1, PLOT NO. 169,
SHAPAR, DISTRICT - RAJKOT, GUJARAT -
360024
PH :9714008492, 9624711397.

SIDDHPUR

520. STARLINE CARS PVT. LTD. (CMY1-01-), PLOT
NO. 140-1285/7, SIDHPUR, TALUKA - VADGAM,
DISTRICT - PATAN . - 384151
PH :9909043244, 9824601729.

SINOR

521. RAVIRATNA MOTORS PVT LTD (GML1-01-),
NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD,
AT AND POST SEVGA, TALUKA SINOR, DIST.
VADODARA, PIN-391105, GUJARAT - 391105
PH :7227055065.

SITAPUR

522. STARLINE CARS PVT LTD (SFV1-01-), SHOP NO.
2, RUDRA ARCADE, REVENUE SURVEY NO. 129,
VITHLAPUR (SITAPUR) BECHARAJI -
VIRAGAM HIGHWAY, DIST. AHMEDABAD, PIN
CODE: 382120 - 382120
PH :9909043244.

SONGADH

523. COMET CAR SALES & SERVICE PVT LTD
(CWE1-01-), LAXMI PLAZA, SHOP NO. 21 & 22,
SURAT DHULIYA HIGHWAY, TALUKA -
SONGADH, DIST-TAPI. - 384220
PH :9099916099.

SUPEDI

524. KATARIA AUTOMOBILES (SEM1-01-), SURVEY
NO-482/7, PAIKI PLOT NO-18, MATRAVAD ROAD,
GRAM-SUPEDI, DIST - RAJKOT - 360440
PH :9409479702.

SURAT

525. KIRAN MOTORS LTD (4001-01-),
SURAT-BARDOLI ROAD,DUMBHAL,NEAR PUNA
JAKAT NAKA,SURAT - 395010
PH :992448715/9924637898.
526. DHRU MOTORS (4002-01-), JEEVAN GANGA
NAGAR,NEAR JEEVAN JYOT THEATRE,UDHNA
MAIN ROAD,SURAT - 394210
PH :9925155911/9925155907.

527. KIRAN MOTORS LTD (4001-02-),
PANDESSA,BAMROLI ROAD,SURAT - 395002
PH :9824603880.
528. KATARIA AUTOMOBILES PVT. LTD. (4004-04-),
TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO.
39, OPP SMS GARDEN, NEAR VIP ROAD, VESU,
SURAT - 395007 - 395007
PH :9714612700, 9924401000.

529. DHRU MOTORS (4002-18-), 207, NEW
INDUSTRIAL ESTATE,ROAD NO.-6,UDHNA
UDYOG NAGAR, SURAT - 394210
PH :0261-2272118/ 9978900862.
530. KATARIA AUTOMOBILES PVT. LTD. (4004-05-),
KATARIA ARCADE,OPP. RAJHANS
CINEMA,DUMAS ROAD, PILOD, SURAT -
395007
PH :7698022449/9624477252.

531. COMET CAR SALES & SERVICE PVT LTD
(4006-01-), CHIKUWADI COMPLEX, GHB ROAD,
PANDESSA, SURAT. - 394221
PH :9099915995.

532. KATARIA AUTOMOBILES PVT. LTD. (4004-08-),
BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA
RESIDENCY, PALANPORE, ADAJAN, SURAT -
394310
PH :9924119020.

533. KIRAN MOTORS LTD (4005-01-), PLOT NO. 443,
FP NO. 26 MOJE PALGAM, ADAJAN, SURAT -
395009
PH :9824611153/9824701590.

Dealer Network (AS ON 31.10.2023)

534. AMAR CARS PVT. LTD. (4009-02), PLOT NO.10&11, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR DGVCL OFFICE, KARMNATH MAHDEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006 PH :7069026512.
535. COMET CAR SALES & SERVICE PVT LTD (4006-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 10/2/A, KATARGAM, SURAT, DISTRICT - SURAT, GUJARAT. - 395004 PH :9099916099.
536. DHRU MOTORS (4002-03), PLOT NO.54/A, LAXMINARAYAN INDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210 PH :9978900862.
- SURENDRNAGAR**
537. DREAM VEHICLES PVT LTD (LC01-01), 261/P, OPP MARKETING YARD,GIDC AREA,WADHWAN CITY, SURENDRNAGAR - 363030 PH :02752-241314 / 02752-651516 / 9227775721.
538. DREAM VEHICLES (LC01-02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANAGAR, GUJARAT-363030 - 363030 PH :9227775724.
- TALAJA**
539. KATARIA (BCI2-01), SURVEY NO-168, DHANJIBHAI BALADIYA NI VADI, NEAR MAHUVA PAULITANA CROSS ROAD, MAHUVА BHAVNAGAR HIGHWAY, TALAJA-364140. - 364140 PH :9316626475.
- TALALA**
540. PERFECT (JV01-01), SURVEY NO-55/9/1, PLOT NO-10, TALALA-VERAWAL HIGHWAY, AT-TALALA, DIST-GIR SOMNATH, 362150 - 362150 PH :8511147524.
- TANKARA**
541. ATUL MOTORS PVT LTD (BQY1-01), PLOT NO. 8/1, S. NO. 107, VILLAGE - JABALPUR, TALUKA - TANKARA, SUB DISTRICT - MORBI, DISTRICT - RAJKOT. - 363650 PH :9714008492, 9624711397.
- TARAPUR**
542. AMAR CARS PVT. LTD. (GH01-01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST. -ANAND. - 388180 PH :9099960772.
- THARA**
543. TANU MOTORS PVT. LTD. (0V01-01), SHOP NO.17 & 18, SIHORI HIGHWAY, R.B. THAKKAR COMPLEX, THARA, KAKREJ TALUKA, BANSANKANTA DISTT. - 385555 PH :9909960699, 991380329.
- THARAD**
544. TANU MOTORS PVT. LTD. (CDM1-01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANSANKANTA - 384220 PH :9909006099, 9724219565.
- THASRA**
545. KATARIA AUTOMOBILES (SIM1-01), PLOT NO 1 & 2, GIDC THASRA, BESIDES NARMADA VASAHAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250 PH :7984092780.
- TILAKVADA**
546. RAVIRATA (-), SURVEY NO-157, VILLAGE-MOTI KAMSOI, TALUKA-TILAKVADA, DIST-NARMADA, PIN-391120. - 391120 PH :9687691044.
- UMERGAON**
547. KATARIA AUTOMOBILES PVT. LTD. (BNB1-01), PLOT NO. 23, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT - VALSAD, GUJARAT. - 396170 PH :9624001794.
- UMRETH**
548. AMAR CARS PVT. LTD. (CFE1-01), R. S. NO. 30/2, NADID-AKOR ROAD, UMRETH , DIST-ANAND, GUJARAT. - 388220 PH :9909960772.
- UNA**
549. PERFECT AUTO SERVICES (BFD1-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. - 362560 PH :7043992893, 7043340792.
- UNJHA**
550. TANU MOTORS (Q801-02), OPP. DHANA DAL FACTORY,MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH :9727762079.
- UPLETA**
551. PERFECT AUTO SERVICE (CH01-01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360 490 PH :9099027402, 8200969617.
- VADGAM**
552. VIMCO MOTORS (CMX1-01), SURVEY NO-177, BESIDE ESSAR PETROL PUMP, VADGAM - PALANPUR ROAD, VADGAM, DIST - BANSANKANTA, GUJARAT - 385410. - 385410 PH :8909953333.
- VADNAGAR**
553. VIMCO MOTORS PVT LTD (GKU1-01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADE HOTEL, VADNAGAR, GUJARAT - 385355 PH :7016623842.
- VADODARA**
554. KIRAN MOTORS LTD (2201-01), 9094/G,I,D,C,MAKARPURA,VADODARA - 390010 PH :9624472699.
555. KIRAN MOTORS LTD (2201-02), PLOT NO.160, SUB-I NUTAN GUJINDLE ESTATE,OLD CHHANI ROAD, VADODARA - 390002 PH :9824207899.
556. AMAR CARS PVT. LTD. (2203-01), GORWA ROAD,VARODARA,GUJARAT. - 390016 PH :9081311990, 9723742425, 8980036184.
557. AMAR CARS PVT. LTD. (2203-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH :7211109952.
558. KATARIA AUTOMOBILES PVT. LTD. (2204-01), 9844/GIDC, OLD NH-8, MAKARUPURA ROAD, VADODARA, GUJARAT - 390010 PH :990433422.
559. AMAR CARS PVT. LTD. (2205-01), VARASIYA AIRPORT ROAD, OPP PONNAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH :8980006756.
560. KIRAN MOTORS LTD (2201-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH :2771122.
561. KATARIA AUTOMOBILES PVT. LTD. (2204-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBHA BHRAO ROAD, SALATWADA, VADODARA - 390001 PH :8156017770.
562. RAVIRATA MOTORS PVT LTD (2206-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA. - 390012 PH :7227055065, 7227055064.
- VALOD**
563. DHRU MOTORS (CSW1-01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. - 394640 PH :9712984522.
- VALSAD**
564. KATARIA AUTOMOBILES PVT. LTD. (104-06-), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020 PH :9904133306.
- VANSDA**
565. KATARIA AUTOMOBILES PVT. LTD. (Q701-02-), JAMNABA PARK, VANDSA HANUMAN BARI CHAR RASTA, VANDSA-DHARAMPUR ROAD, RANI FALYA, VANDSA, DISTRICT – NAVSARI, GUJARAT - 396580 PH :7624088188.
- VAPI**
566. KATARIA AUTOMOBILES PVT. LTD. (104-03-), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195 PH :9924204423.
567. KATARIA AUTOMOBILES PVT. LTD. (104-09-), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI , DISTRICT -VALSAD, GUJARAT - 369191 PH :9723462612.
568. AMAR CARS PVT. LTD. (9701-01-), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145 PH :9327909504.
- VERAVAL**
569. PERFECT AUTO SERVICES (5502-05-), NR. BILYA HANUMAM,VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265 PH :9998894550, 9898121122.
- VIJAPUR**
570. STARLINE CARS PVT. LTD. (D101-04-), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH :9609043635.
- VIRAMGAM**
571. KIRAN MOTORS LTD (AAB1-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH :8156016222.
- VISNAGAR**
572. STARLINE CARS PVT. LTD. (D101-05-), VISNAGAR -AMB AJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT.- MEHSANA - 384315 PH :7046046174.
- VIYARA**
573. COMET CAR SALES & SERVICE PVT LTD (BIVY1-01-), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT – TAPI, GUJARAT - 394650 PH :9999916099.
- WAGHODIA**
574. KATARIA AUTOMOBILES PVT. LTD. (BZZ1-01-), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA - WAGHODIA, DISTRICT – VADODARA, GUJARAT. - 391760 PH :7203013712.
- WANKANER**

575. ATUL MOTORS PVT LTD (BAL1-01-), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621
PH :9904922333.

GUJRAT**KHERGAM**

576. KATARIA AUTOMOBILES (STR1-01-), SANVIRA HAT BAZAAR, KHERGAM-DHARAMPUR HIGHWAY ROAD, SH-67, KHERGAM, PIN-396040. - 396040
PH :9624007774.

SOJITRA

577. AMAR CARS (SMT1-01-), RAMDEV ARCADE, OPP. BUS STATION, AT - SOJITRA, DIST. - ANAND GUJARAT PIN 387240. - 387240
PH :9662357557.

HARYANA**GURGAON**

578. PASCO AUTO (9506-04-), KHASRA NO. 191/2 & 190/2, MAIN Daulatabad ROAD, OPP. OLD BHALLA CHEMICALS FACTORY, DAULATABAD INDUSTRIAL AREA, GURGAON, HARYANA - 122006. - 122006
PH :8851227233.

KARNAL

579. MODERN AUTOMOBILES (8907-03-), 117-118 KM MILE STONE NH1, NEAR VILLAGE KAMBOPURA, GT ROAD, KARNAL - 132001
PH :7419900042.

SAMALKHA

580. RKH AUTO GALLERY (LY02-01-), GT ROAD, SAMALKHA, PANIPAT, HARYANA PIN- 132101 - 132101
PH :9053700003.

HARYANA**ADAMPUR (HARYANA)**

581. SARAOGI AUTOMOBILES (P) LTD. (CWW2-01-), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 44/21/12(1-0), MANDI ADAMPUR, TEHSIL - ADAMPUR, DIST.-HISSAR, STATE - HARYANA. - 125052
PH :8607777153.

AMBALA

582. MODERN AUTOMOBILES (1801-01-), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA - 134003
PH :9215016044.

583. MODERN AUTOMOBILES (1801-02-), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003
PH :9215016044.

584. EAKANSH WHEELS (1802-01-), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001
PH :9991703000.

585. EAKANSH WHEELS (1802-03-), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001
PH :8881387488.

586. TR SAWHNEY (1803-01-), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003
PH :9990110068.

ASSANDH

587. KARNAL MOTORS PVT. LTD. (8906-04-), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032
PH :7082111325.

BABARPUR

588. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CKX1-01-), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103
PH :7009336727.

BAHADURGARH

589. COMPETENT AUTOMOBILES CO. LTD. (2602-01-), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124 507
PH :8929648144.

BAPOLI

590. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CW11-01-), KHEWAT NO. 136, VILLAGE - JHAMBA, TEHSIL - BAPOLI, DISTRICT - PANIPAT - 132103
PH :9053400583.

BARARA

591. EAKANSH WHEELS (NX01-01-), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201
PH :9991478100.

BARWALA

592. MODERN AUTOMOBILES (BSA2-01-), KHEWAT/KHOTONI NO. 388, KHASRA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118
PH :9896217059.

BAWAL

593. DINCO 4 WHEELS LLP (AUTO VIBES) (BBD2-01-), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, BAWAL, DISTRICT - REWARI, HARYANA. - 123501
PH :7082100250.

BHIWANI

594. JAGMOHAN MOTORS PVT LTD (X301-01-), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021
PH :8685005592.

BILASPUR

595. PANDIT AUTOMOBILES PVT. LTD. (BGH1-01-), NEAR GRAMIN BANK, JAGDHRI ROAD, BILASPUR, DISTRICT - YAMUNANAGAR, HARYANA - 135102
PH :9992113854.

BILASPUR (HARYANA)

596. PLATINUM MOTOCORP LLP (2L04-02-), KHASRA NO.54/6/7, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT - GURUGRAM. - 122413
PH :995345329/9953345403.

CHARKHI DADRI

597. JAGMOHAN MOTORS PVT LTD (X301-02-), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306
PH :8059900538.

CHEEKA

598. EAKANSH MOTORS PVT. LTD. (U802-04-), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA - 136034
PH :8053086000.

CHHACHHRAULI

599. PANDIT AUTOMOBILES PVT. LTD. (COZ1-01-), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL - CHHACHHRAULI, DISTRICT - YAMUNA NAGAR. - 135103
PH :9812455895.

DADRI TOE

600. COMPETENT AUTOMOBILES CO. LTD. (BVH2-01-), KHEWAT NO. - 270 MIN, KHATONI NO. - 319, DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN 124103 - 124103
PH :9821308849.

DAHINA

601. DINCO 4 WHEELS LLP (AUTO VIBES) (GLH1-01-), REWARI MAHENDERGARH ROAD, NEAR RAILWAY STATION, DAHINA, REWARI - 123411
PH :7082100201.

DHAND

602. EAKANSH MOTORS (BEU1-01-), PANCHMUKHI CHOWK, KARNAL ROAD, DHAND, DISTT. KAITHAL, HARYANA. - 136020
PH :8395906111.

DHARUHERA

603. DINCO 4 WHEELS LLP (AUTO VIBES) (CRP1-01-), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI.
PH :7082100270.

ELLENABAD

604. SHAKTI MOTORS PVT.LTD. (E401-03-), SURERA CHOWK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055
PH :8222900250.

FARIDABAD

605. VIPUL MOTORS PVT. LTD. (5801-01-), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002
PH :2555011
2555013
97114 14556.

606. VIPUL MOTORS PVT. LTD. (5801-03-), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006
PH :4286000
4286024
4286024
9311321419.

607. TCS AUTOMOBILES (5804-01-), PLOT NO-1A, SECTOR-6, FARIDABAD. - 121001
PH :4292929; 7503036200.

608. FAIR DEAL PREMIUM WHEELS PVT LTD. (5807-01-), PLOT NO-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003
PH :8446296666.

609. TCS AUTOWORLD PVT. LTD. (TCS & ASSOCIATES PVT. LTD.) (5804-02-), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA - 121003
PH :2277225; 7290029211.

610. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-01-), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003
PH :4180500
7290032501.

611. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-02-), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. - 121006
PH :74287 48467.

FARRUKHNAGAR

612. PLATINUM MOTOCORP LLP (KE01-01-), KHEVAT NO. 299, MUSTIL NO-12, KHASRA NO.-19/3 AND 22/2, VILLAGE - SEHADPUR MOHAMADPUR, TEHSIL - FARRUKHNAGAR, DISTRICT - GURGAON. - 122506
PH :9599007357/9953345380.

FATEHABAD

Dealer Network (AS ON 31.10.2023)

613. SHAKTI MOTORS PVT.LTD. (2H02-01), NH-10, SIRSA ROAD, FATEHABAD - 125050 PH :8222900217.

GANAURO

614. JAGMOHAN AUTOMOTIVES PVT. LTD. (NA04-01), RAILWAY ROAD, GANAUR - 131101 PH :8199911106.

GHARAUNDA

615. KARNAL MOTORS PVT. LTD. (8906-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114 PH :8222022321.

GOHANA

616. JAGMOHAN AUTOMOTIVES PVT. LTD. (CU03-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT - 131301 PH :8685005521.

GURGAON

617. PASCO AUTOMOBILES (9506-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006 PH :9650790323/7290069623/9992339959/4952100. 618. VIPUL MOTORS PVT. LTD. (5801-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001 PH :4395701 4395704 8448487921.

619. COMPETENT AUTOMOBILES CO. LTD. (9505-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004 PH :42500002, 9582797735.

620. PASCO AUTOMOBILES (9506-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, - 122015 PH :1015804442/7962087767/9650701958.

621. ROHAN MOTORS LTD. (9508-01), 2482/84, SECTOR-52A, WAZIRABAQ VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001 PH :08860076163/8130593202/8130593201 3.

622. VIPUL MOTORS PVT. LTD. (5801-04), PLOT NO.5/22/1, SARHAUL VILLAGE SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102 PH :4395800 4395806 844848936.

623. PREM MOTORS PVT. LTD. (9511-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON - 122017 PH :4337900, 7065003445.

624. PREM MOTORS PVT. LTD. (9512-01), PLOT NO. 3, IDC, OPPOSITE SECTOR-14, GURGAON - 122001 PH :7065003373, 7065003377, 0124-4319000.

625. RANA MOTORS PVT LTD (9509-02), PLOT NO.60, IDC, GURGAON - 122001 PH :48677777, 9873400882.

626. PASCO AUTOMOBILES (9510-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA, - 122001 PH :9953669444/9953669222.

627. PREM MOTORS PVT. LTD. (9512-02), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017 PH :4337933, 7065003442.

628. PLATINUM MOTO CORP (2L04-03), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL GURGAON HARYANA - 122018 PH :995345370/9891118867.

629. PREM MOTORS (9512-G1), QILA NUMBER 8/2, MUSTAKIL NO - 25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015 PH :8800000817.

630. PLATINUM MOTOCORP (2L04-04), KILA NO. 15, SECTOR 93, NEAR HAYATPUR POLICE CHOWKI, HAYATPUR, GURGAON, PIN-122050, HARYANA - 122050 PH :9891118850.

HANSI

631. JAGMOHAN MOTORS PVT LTD (GT02-01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI - 124001 PH :8059900546.

HISAR

632. MODERN AUTOMOBILES (7602-01), OPP. VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005 PH :9355473000.

633. SARAOGI AUTOMOBILES (P) LTD. (7604-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA - 125001 PH :8607777043.

634. MODERN AUTOMOBILES (7602-02), OPP. BBM, HISSAR DELHI ROAD, HISSAR - 125001 PH :9355473000.

635. UNIQUE MOTORS PVT. LTD. (7603-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD, HISSAR (HARYANA) - 125006 PH :8180555535.

HODAL

636. ROHAN MOTORS (EE01-02), KILA NO. 8/2(7-11), 9/5-06), 12(5-0), 13(8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DISTT.-PALWAL. PH :8930202088 ; 9413080376.

ISMALIABAD

637. KARNAL MOTORS PVT. LTD. (I901-01), KHEWAT NO. 928, KHASRA NO. 2760/5-14, 2761(800), VILLAGE - ISMAILABAD, TEHSIL - PEHOW, DIST-KURUKSHETRA, HARYANA - 136129 PH :7082007138.

ISRANA

638. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (I802-01), MUSHTIL NO.-119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132101 PH :9053400417.

JHAJJAR

639. COMPETENT (0B02-01), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101 PH :9999493040.

JIND

640. EAKANSH MOTORS PVT. LTD. (2K01-01), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102 PH :7876008184.

JULANA

641. EAKANSH MOTORS PVT. LTD. (MA01-01), JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101 PH :8816802111.

KAITHAL

642. EAKANSH MOTORS PVT. LTD. (U802-01), AMBALA ROAD, NH-65, KAITHAL - 136027 PH :9671788801.

KALANAUR

643. JAGMOHAN MOTORS (SPQ1-01), BHWANI ROAD, KALANAUR, DISTRICT ROHTAK, - 124113 PH :9812004245.

644. PANDIT AUTOMOBILES (SSN1-01), VPO. KALANAUR, DISTRICT- YAMUNANAGAR, HARYANA - 124113 PH :9053055550.

KALAYAT

645. EAKANSH MOTORS PVT. LTD. (BJP1-01), NEAR BUS STAND, KAITHAL-KALAYAT ROAD, VILLAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117 PH :9671788801.

KALKA

646. MODERN AUTOMOBILES (EG02-01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302 PH :9896217059.

KARNAL

647. KARNAL MOTORS PVT. LTD. (8906-01), 71/3 MILESTONE ,G.T.ROAD, KARNAL - 132001 PH :8222022339.

648. KARNAL MOTORS PVT. LTD. (8906-02), KHEWAT NO. 59, JAHANJHARI GT ROAD, KARNAL - 132001 PH :8222022430.

649. MODERN AUTOMOBILES (8907-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL - 132001 PH :7419900042.

KATHURA

650. JAGMOHAN AUTOMOTIVES (SFJ1-01), GOHANA MAHAM ROAD, KATHURA, GOHANA. - 131301 PH :8685005400.

KHARKHODA

651. JAGMOHAN AUTOMOTIVES PVT. LTD. (BU02-01), NEAR KANYA GURUKUL MAHAVIDYALYA, DELHI ROAD, NEAR UNION BANK, KHARKHODA (HARYANA) - 131402 PH :8685005593.

KOSLI

652. DINO 4 WHEELS LLP (AUTO VIBES) (CAN1-1), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT – REWARI, HARYANA .. 123302 PH :7082100202.

KUND

653. DINO 4 WHEELS LLP (AUTO VIBES) (CJL1-01), NEAR KUND BARRIER, OPP. SBI BANK, NARNAUL ROAD, VILLAGE - MANETHI, KUND, DISTRICT - REWARI, HARYANA. - 123102 PH :856998928, 97082100000.

KUNDLI

654. JAGMOHAN AUTOMOTIVES PVT. LTD. (GU03-01), 34 E, SECTOR 57, PHASE 4 , KUNDLI INDUSTRIAL AREA, KUNDLI - 131001 PH :8059900518.

KURUKSHETRA

655. KARNAL MOTORS PVT. LTD. (8906-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA - 136 118 PH :8222022371.

LADWA

656. KARNAL MOTORS PVT. LTD. (CRA1-01), KHEWAT NO. 197, KATHONI NO.233, KHASRA NO.27/17/27/14, LADWA-KURUKSHETRA ROAD, VILLAGE - LADWA, TEHSIL THANESAR, DISTT. KURUKSHETRA - 136132 PH :7082007182.

LOHARU

657. JAGMOHAN MOTORS (HB02-01), BHWANI ROAD , OPP. ITI, CITY: LOHARU - 127201 PH :9812000425.

MADLAUDA

658. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (CFK2-01), VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD, MADLAUDA, PIN-132113, HARYANA - 132113
PH :9053400524.

MAHENDARGARH

659. PLATINUM MOTO CORP (DP01-01), KHEWAT NO. 187, KILLA NO. 51/8, REVENUE ESTATE OF VILLAGE REWASA, DADRI ROAD, TEHSIL & DISTRICT, MAHENDERGARH, PIN-123029, HARYANA - 123029
PH :9566136120, 9053088490.

MANDI DABWALI

660. SHAKTI MOTORS PVT.LTD. (E401-02), SANGRIA ROAD, DABWALI, DISTT.-SIRSA - 125104
PH :8222900209.

MANESAR

661. PLATINUM MOTOCORP LLP (2L04-01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON - 122052
PH :09953345326/9953345324/9910100341.

MEHAM

662. JAGMOHAN MOTORS PVT LTD (A601-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101
PH :8059900592.

MOHNA

663. TCS & ASSOCIATES PVT LTD (CRT1-01), YAMUNA PUL ROAD, NEAR GYATRI PETROL PUMP, VPO-MOHNA, TEHSIL BALLABGARH , DISTT FARIDABAD - 121004
PH :9911573130, 8929579400.

MUSTAFABAD

664. PANDIT AUTOMOBILES PVT. LTD. (CDX1-01), KHATUNI NO. 205/287, KHASRA NO. 39/17/2, VILLAGE - MANSURPUR, THANA - CHAPPER, MUSTAFABAD, DIST.-YAMUNA NAGAR, STATE - HARYANA - 133 103
PH :992113854.

NARAINGARH

665. EAKANSH WHEELS (1802-02), NH-72, AMBALA-KALA AMB ROAD, NEAR DARSH FILLING STATION, NARAINGARH - 134203
PH :9991143700.

NARNAUL

666. PLATINUM MOTOCORP LLP (9Q02-01), KAILASH NAGAR, REWARI ROAD, NARNAUL, HARYANA - 123001
PH :09053088460/9582226838/9053088501/905308845
1/9053088500.

NARNAUND

667. JAGMOHAN MOTORS (SDK1-01), KHASRA NO. 234, HANSI ROAD, NARNAUND, DISTT. HISAR, HARYANA - 125039
PH :9812000471.

NARWANA

668. EAKANSH MOTORS PVT. LTD. (U802-03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116
PH :9813583100.

NUH

669. PASCO AUTOMOBILES (7L02-01), MAIN DELHI - ALWAR ROAD, NEAR SHAHEED PARK, NH -248A, NUH, DISTRICT - MEWAT, HARYANA. - 122107
PH :9810014947.

PALWAL

670. ROHAN MOTORS LTD. (EE01-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101
PH :304100 : 304107/8930202060.

PANCHKULA

671. MODERN AUTOMOBILES (702-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113
PH :9646000165.
672. AUTOPACE NETWORK PVT LTD (705-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113
PH :7087119847.
673. AUTO VOGUE PVT. LTD. (K303-01), PLOT NO- 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113
PH :8558813181.

PANIPAT

674. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (D302-01), KHASRA NO. 436, 449 & 10, VILLAGE - JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA - 132103
PH :9053400515.

PATAUDI

675. PLATINUM MOTOCORP LLP (BY03-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503
PH :9953345381/9953345488/9953345330.

PEHOWA

676. KARNAL MOTORS PVT. LTD. (M202-01), NEAR DAV COLLEGE, AMBALA ROAD, PEHOWA. 136128
PH :8222022464.

PUNDRI

677. EAKANSH MOTORS PVT. LTD. (BFF1-01), KILA NO. 30/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026
PH :9671788801.

PUNHANA

678. PASCO AUTOMOBILES (BIU1-01), KILA NO. 4/2, PUNHANA, DIST- MEWAT, HARYANA - 122508
PH :9991300950, 8059730879.

RADAUR

679. PANDIT AUTOMOBILES PVT. LTD. (D201-02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA - 135001
PH :9992113854.

RAJOURD

680. EAKANSH MOTORS (SHV1-01), MITTAL KHAL BHANDAR, RAJOURD, DISTT KAITHAL - 136044
PH :9671788801.

REWARI

681. DINCO 4 WHEELS LLP (AUTO VIBES) (U102-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA) - 123401
PH :7082100207/7082100204/7082100201.

ROHTAK

682. JAGMOHAN MOTORS PVT LTD (A601-01), SONEPAT ROAD, ROHTAK - 124001
PH :9467465035.
683. JAGMOHAN MOTORS PVT LTD (A601-09), SWAN GARDEN, DELHI ROAD, ROHTAK - 124001
PH :9812000357.
684. UNIQUE AUTO LEAD LLP (A602-01), KHASRA NO. 3597 JIND ROAD, JIND CHOWK, ROHTAK, HARYANA - 124001
PH :9812259000.

SAFIDON

685. EAKANSH MOTORS PVT. LTD. (U802-05), NEAR BRSK SCHOOL, OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT- JIND - 126112
PH :9416616603.

SAMPLA

686. JAGMOHAN MOTORS PVT LTD (NY01-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501
PH :9812000351.

SATNALI

687. PLATINUM (SLH1-01), KHEVAT NO.605, KHATUNI NO-1134 KILLA NO.167, VILL: SATNALI, NEAR BHARAT PETROL PUMP MAHENDRAGARH ROAD, HARYANA -123024 (LOCATION: MAHENDRAGARH) - 123024
PH :9910100341.

SHAHABAD

688. KARNAL MOTORS PVT. LTD. (CCR2-01-), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST.- KURUKSHETRA - 136135
PH :8222022338.

SIRSA

689. SHAKTI MOTORS PVT.LTD. (E401-01), DABBALI RD., SIRSA, HARYANA - 125055
PH :8222900201.

SIWANI

690. SARAOGI AUTOMOBILES (P) LTD. (HA03-01), OPP.GOVt HOSPITAL, SIWANI BYPASS CHOWK,HISSAR ROAD, SIWANI,DIST.BHIWANI -127046 HARYANA - 127046
PH :860777749.

SOHNA

691. PASCO AUTOMOBILES (9506-03), 56, KILLA NO. 13 (4-10), 18(4-6), 19 (8-0), 22 (8-0), 23 (4-2), VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA , DISTRICT -GURUGRAM . - 122103
PH :08683000902/9873711127/8683000919.

SONIPAT

692. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001
PH :9992200372.
693. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-02-), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001
PH :8685005866.
694. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-03-), O-11 INDUSTRIAL AREA, SONIPAT, HARYANA - 131001
PH :9812615000.

TARU

695. PASCO AUTOMOBILES (BIV1-01), KILA NO. 34/1, REWARI ROAD, TARU, DIST- MEWAT, HARYANA - 122015
PH :8683000902, 9873001497, 8683000954, 9671150250, 9034926253.

TIGAON

696. TCS (5804-03-), TCS AUTOWORLD, ARYAN PLAZA, NEEMKA BHUPGARH, TIGAON-BALLABGARH ROAD, FARIDABAD, PIN-121004, HARYANA - 121004
PH :9971422444.

TOHANA

697. SHAKTI MOTORS PVT.LTD. (XP01-01-), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120
PH :8572800991.

TOSHAM

Dealer Network (AS ON 31.10.2023)

698. JAGMOHAN MOTORS PVT LTD (DY01-01),
BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI.
- 127040
PH : 8059900566.

YAMUNANAGAR

699. PANDIT AUTOMOBILES PVT. LTD. (D201-01-),
GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR
- 135001
PH : 9812455896.
700. PANDIT AUTOMOBILES PVT. LTD. (D201-01-),
PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD,
YAMUNA NAGAR (HARYANA) - 135001
PH : 9812455896.

HIMACHAL PRADESH

ALAMPUR

701. KANGRA VEHICLEADES (RL01-01), KHASRA
NO. 1606/1582, STATE HIGHWAY
PALAMPUR-SUJANPUR AT JANGAL, VILLAGE -
ALAMPUR, DIST.-KANGRA - 176082
PH : 9898002269.

BADDI

702. GOYAL MOTORS PVT LTD (7D01-04-),
KHATA/KHATAUNI NO. 26/26, KHASRA NO.
93/56/32 AND 94/56/32, KITAS 2, REVENUE
MAUZA - CHAK JANGI, HADBAST NO. 203,
TEHSIL - BADDI, DISTRICT - SOLAN, HIMACHAL
PRADESH. - 173205
PH : 9418076972.

BAIJNATH

703. KANGRA VEHICLEADES (BBC1-01), TASHI
JONG, PAPROLA-BAIJNATH, NH-20, KANGRA
-MANDI ROAD, TEHSIL BAIJNATH, DISTT.
KANGRA - 176115
PH : 8628820603.

BANIKHET

704. PATHANKOT VEHICLEADES PVT. LTD.
(BWN1-01), KHASRA NO.709, KHATA KHATOONI
NO.23, BANIKHET, THE-DALHOUSIE, DISTT.
CHAMBA - 176303
PH : 254186, 232036, 9418048803.

BILASPUR

705. COMPETENT AUTOMOBILES CO. LTD.
(6Y01-01), KHETWAT NO. 8/B KHATAUNI,
KHASRA NO. 137/30, 31, MAUZA KOTHI,
PARGANA 9, P. O. - CHANDPUR, TEHSIL -
SADAR, DIST. - BILASPUR, HIMACHAL
PRADESH. - 174001
PH : 7807166832, 7807800330 / 7807800440.

CHAMBA

706. KANGRA VEHICLEADES (D902-03-), MOHALLA
SULTANPUR, BALU BRIDGE, CHAMBA - 176310
PH : 9418059252 , 9418045778.

707. KANGRA VEHICLEADES (D902-05-), KHASRA
NO. 88/961, & KHASRA NO.628/276, VILLAGE &
PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL
PRADESH. - 176310
PH : 9418059252 , 9418013810.

CHOWARI

708. PATHANKOT VEHICLEADES PVT. LTD.
(CWV1-01-), KHATA KHATNI NO. 24/32 MIN,
KHASRA NO. 90, VILLAGE - LAHRU, P.O. -
PARCHHORE, TEHSIL - BHATTIYAT, DIST.
-CHAMBA, HAMACHAL PRADESH. - 144416
PH : 8894569632.

DEHRA

709. KANGRA VEHICLEADES (D902-02-), VILLAGE &
P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA -
177101
PH : 9817013058.

GAGGAL

710. KANGRA VEHICLEADES (BBV1-01-), NATIONAL
HIGHWAY -20, ZAMANABAD ROAD, ICHHI,
GAGGAL, DISTT. KANGRA , HIMACHAL
PRADESH. - 176209
PH : 9418988832.

HAMIRPUR

711. COMPETENT AUTOMOBILES CO. LTD.
(W901-01-), VILLAGE TIKKAR, P.O DIDWIN
TEHSIL & DISTT. HAMIRPUR - 177401
PH : 9805510276.

INDORA

712. PATHANKOT VEHICLEADES PVT. LTD.
(BHE1-01-), VILLAGE CHANDOR, PO & TEHSIL
INDORA, DISTT. KANGRA, PIN-176401,
HIMACHAL PRADESH - 176401
PH : 9418008627.

JASISINGHPUR

713. KANGRA VEHICLEADES (BVA1-01-), Harsi
PATTAN ROAD, OPP. SABJI MANDI, TEHSIL -
JASISINGHPUR, DIST - KANGRA, HIMACHAL
PRADESH. - 176095
PH : 9418477756.

JAWALI

714. PATHANKOT VEHICLEADES PVT. LTD.
(BXE1-01-), VILLAGE - TIUKARI, NEAR MAHAVIR
HOSPITAL LUBH ROAD, TEHSIL - JAWALI, DIST.
-KANGRA, HAMACHAL PRADESH. - 176023
PH : 9418195333.

JOGINDER NAGAR

715. COMPETENT AUTOMOBILES CO. LTD.
(BBO1-01-), VILL. DHELU PO DOHAG, JOGINDER
NAGAR (H.P.) - 175015
PH : 9805005754.

JWALAMUKHI

716. KANGRA VEHICLEADES (CND1-01-), KHASRA
88/613, MAUJA BOHAN, TEHSIL JWALAMUKHI,
DISTRICT KANGRA - 176031
PH : 9418488999.

KULLU

717. COMPETENT AUTOMOBILES CO. LTD.
(2001-01-), PLOT 3&4, INDUSTRIAL AREA,
SHAMSHI, KULLU (HP) - 175126
PH : 7018035136.

KUNIHRAR

718. GOYAL MOTORS PVT LTD (BBX1-01-), KHATA
NO. - 77, VILLAGE KOTHI, P.O. KUNIHRAR,
TEHSIL - ARKI, DISTRICT - SOLAN, HIMACHAL
PRADESH. - 173207
PH : 9418131247.

MANALI

719. COMPETENT AUTOMOBILES CO. LTD.
(BKU1-01-), VILL. CHOURI VIHAR (ALAU
GROUND), P.O. & THESSL - MANALI, DIST.
KULLU, (H.P.) - 175131
PH : 9418387465.

MANDI

720. COMPETENT AUTOMOBILES CO. LTD.
(B301-01-), GUTKAR INDUSTRIAL AREA, DELHI
MANDI ROAD, NH.21 GUTKAR, MANDI - 124501
PH : 9805513208/9816664891.

NADAUN

721. COMPETENT AUTOMOBILES CO. LTD.
(BXA1-01-), VILLAGE JALAN, KHASRA NO.183,
PO & TEHSIL NADAUN, DISTTT. HAMIRPUR,
HIMACHAL PRADESH - 177041
PH : 9805537436.

NAGROTA

722. KANGRA VEHICLEADES (D902-01-), MALAN,
NAGROTA - BAGWAN, KANGRA, H.P. - 176047
PH : 7018268819.

NAGROTA BAGWAN

723. KANGRA VEHICLEADES (D902-06-), JHIKLI
AMBARI, MOUZA AMBARI, MALAN, NAGROTA
BAGWAN, TEHSIL & DISTT. KANGRA,
HIMACHAL PRADESH - 176047
PH : 7018268819.

NAGROTA SURIAN

724. KANGRA VEHICLEADES (BCI1-01-), KHEWAT
NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037,
MAHAL BASSA, SUB TEHSIL - NAGROTA
SURIAN, DISTRICT - KANGRA. - 176027
PH : 9418488999.

NALAGARH

725. GOYAL MOTORS PVT LTD (IB02-01-), NEAR HP
PETROL PUMP, VILLAGE PEERSTHAN, P.O &
TEHSIL NALAGARH, DISTT. SOLAN (H.P.) -
174101
PH : 9418704572.

NERWA

726. GOYAL MOTORS PVT LTD (CRS1-01-), KHASRA
NO. 482, VILLAGE - KEDI, TEHSIL - NERWA,
DISTRICT - SHIMLA, HIMACHAL PRADESH. -
171210
PH : 9418663572.

NURPUR

727. KANGRA VEHICLEADES (D902-04-), VILLAGE
JACHH, PO JASSUR, TEHSIL NURPUR, DISTT.
KANGRA - 176201
PH : 9418195333 , 9418041778.

PALAMPUR

728. KANGRA VEHICLEADES (2T01-01-), NEAR IOCL
PUMP, KANGRA MANDI ROAD, PALAMPUR,
DISTT. KANGRA, HIMACHAL PRADESH. - 176061
PH : 9418222622/ 9463265072.

PAONTA SAHIB

729. GOYAL MOTORS PVT LTD (A901-02-), OPP
BIBIJEET KAUR SENIOR SECONDARY SCHOOL,
SHAMSHERPUR , NH-72, PAONTA SAHIB -
173025
PH : 9459210872.

RAJGARH

730. GOYAL MOTORS PVT LTD (BJX1-01-), KHATA
NO. 517/505, 478/3, KHASRA NO. - 38/98
VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL
- RAJGARH, DISTRICT - SIRMAUR, HIMACHAL
PRADESH. - 173101
PH : 9418312472.

RAMPUR

731. GOYAL MOTORS PVT LTD (CEZ1-01-), KHASRA
NO. 824/825, MINN NO. 155/396, 163/411, NAGLI,
ROHRU ROAD, RAMPUR, TEHSIL - RAMPUR,
DISTRICT - SHIMLA. - 172001
PH : 9459296572.

ROHRU

732. GOYAL MOTORS PVT LTD (JZ01-01-),
CHARGAON SHIMLA ROAD, ROHRU, DISTRICT
- SHIMLA . - 171207
PH : 9418016072.

SALOONI

733. PATHANKOT VEHICLEADES (SES1-01-),
KHASRA NO. 299/174, VILLAGE, MANJEER,
TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320,
HIMACHAL PRADESH - 176320
PH : 9418059252.

SHAHPUR

734. KANGRA VEHICLEADES (SCR1-01-), VILLAGE
MANJHGRAN, P.O. DRAMMAN, TEHSIL
SHAHPUR, DISTT. KANGRA, HIMACHAL
PRADESH - 176206
PH : 9459900241.

SHIMLA

735. GOYAL MOTORS PVT LTD (A901-01), TARADEVI, SHIMLA, (H.P.) - 171010 PH :9418663572.
- SOLAN**
736. GOYAL MOTORS PVT LTD (7D01-01), DEON GHAT, SOLAN - 173211 PH :9418138772.
- UNA**
737. COMPETENT AUTOMOBILES CO. LTD. (QD01-01), VILLAGE RAINSYAR, P.O JHALERA,TEHSIL & DISTRICT:UNA - 174303 PH :9805737436.
- JAMMU**
738. JAMKASH VEHICLEADES PVT. LTD (BPM1-01), KHASRA NO. 269, LOWER MUTHI DHARMAL, DIST.-JAMMU, STATE - JAMMU & KASHMIR. - 181205 PH :7006889474.
- JAMMU & KASHMIR**
- CHOWKI CHOURA**
739. JAMU MOTORS (SDY1-01), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154 PH :9596975060.
- MAHANPUR**
740. JAMMU MOTORS (SPK1-01), MAHANPUR, DISTRICT KATHUA, TEHSIL MAHANPUR - JAMMU & KASHMIR. - 184202 PH :9596975060.
- MANJAKOTE**
741. JAMKASH VEHICLEADES (SQV1-01), NEAR PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE, DISTRICT RAJOURI, J&K - 185131 PH :7006014395.
- VIJAYPUR**
742. JAMMU MOTORS (OZ2-01), JAMMU PATHANKOT HIGHWAY, VIJAYPUR (SAMBA), J&K - 184120 PH :9596975060.
- JAMMU AND KASHMIR**
- AKHNOOR**
743. JAMMU MOTORS PVT. LTD. (2X02-01), MAIN ROAD DASKAL, TEHSIL - AKHNOOR, DISTRICT - JAMMU - 181201 PH :9419118393.
- ANANTNAG**
744. PEAKS AUTO PVT. LTD. (2Y01-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165 PH :9519275151.
- ASHMUQAM**
745. PEAKS AUTOS (BOH1-01), KP ROAD, HUTMARAH, NEAR ASHMUQAM, ANANTNAG, JAMMU AND KASHMIR - 192125 PH :9519275151.
- BANDIPORA**
746. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-04), AJAR BANDIPORA, J&K - 193502 PH :9149726427.
- BARAMULLA**
747. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (8C01-01), VILLAGE SANGRAMA,WAGAROO, BARAMULLA - 193101 PH :7889612218.
- BHADERWAH**
748. J&K VEHICLEADES PVT. LTD (AKA1-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K - 182222 PH :9419796821.
- BHASOLI**
749. JAMKASH VEHICLEADES PVT. LTD. (GLK1-01), ZERO MORTH, BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201 PH :9018847230.
- BUDGAM**
750. HIGHLAND AUTOMOBILES PVT.LTD (1202-04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM, - 191111 PH :9419019898.
- DAYALACHAK**
751. JAMKASH VEHICLEADES PVT. LTD (BFH1-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK,TEHSIL & DISTT. KATHUA , JAMMU & KASHMIR - 184121 PH :88492849170.
- DODA**
752. J & K VEHICLEADES PVT. LTD (2Z02-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202 PH :9419796821.
- GANDERBAL**
753. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (ZA01-01)- MALSIAIE BAGH, GANDERBAL (J&K) - 191201 PH :9419000828.
- HANDWARA**
754. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (BYA1-01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO- 3764/1816, MOZA BRARIPORA, TEH- HANDWARA, DIST- KUPWARA, J&K - 193221 PH :262322, 9419074012.
- JAMMU**
755. JAMKASH VEHICLEADES PVT. LTD (3306-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015 PH :9068016139.
756. JAMKASH VEHICLEADES PVT. LTD (3306-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001 PH :9419224014.
757. JAMKASH VEHICLEADES PVT. LTD (3306-04), SUNJWAN, DISTT. JAMMU - 180011 PH :7006018600.
758. PEAKS AUTO JAMMU PVT. LTD. (3312-01), GANGLY INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010 PH :9697001125.
759. JAMMU MOTORS PVT. LTD. (3308-01), 6, AKHNOOR ROAD, JAMMU - 180001 PH :9419118393.
760. JAMMU MOTORS PVT. LTD. (3308-02), PLOT NO.2, RAJPURA CHUNG OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002 PH :9419118393.
761. PEAKS AUTO JAMMU PVT. LTD. (3312-02), KHASRA NO.425 & 426, KHA NO.425 & 426, TOPE SHIRKHANIAN (BACKSIDE OF BEST PRICE), AKHNOOR ROAD, JAMMU. - 180001 PH :9697001125.
762. JAMKASH VEHICLEADES PVT. LTD (3306-07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. - 180007 PH :9419191502.
- KATHUA**
763. JAMMU MOTORS PVT. LTD. (3B02-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORN, NH-1A, KATHUA TEHSIL KATHUA - 184101 PH :9419118393.
- KULGAM**
764. PEAKS AUTO PVT. LTD. (OY01-01), NEAR GRID STATION,MAIN ROAD, KULGAM - 191202 PH :9519275151.
- KUPWARA**
765. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-01), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223 PH :9622499902.
- MAGAM**
766. JAMKASH VEHICLEADES PVT. LTD (GLS1-01), KHASRA NO. 34, MOUZA - CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST -BARAMULLA, JAMMU & KASHMIR. - 193 401 PH :8825016046.
- PHINTER**
767. JAMKASH VEHICLEADES PVT. LTD (BHV1-01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203 PH :9419187583.
- POONCH**
768. JAMKASH VEHICLEADES PVT. LTD (AAW1-01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121 PH :7006014395.
- PULWAMA**
769. PEAKS AUTO PVT. LTD. (1204-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301 PH :9519275151.
- RAJOURI**
770. JAMKASH VEHICLEADES PVT. LTD (3306-06), KALAKOTA ROAD, VILLAGE BADOL, RAJOURI - 185131 PH :7006014395.
- RS PURA**
771. JAMKASH VEHICLEADES PVT. LTD (3306-03), GAGAIN MORTH, R S PURA, JAMMU. - 181102 PH :9419190370.
- SHOPIAN**
772. PEAKS AUTO PVT. LTD. (AAA1-01), AGLAR SOFANAMAN, SHOPIAN - 192303 PH :9519275151.
- SIDHRA**
773. JAMKASH VEHICLEADES PVT. LTD (CDL1-01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019 PH :9419134144.
- SRINAGAR**
774. HIGHLAND AUTOMOBILES PVT.LTD (1202-01), SONWAR, SRINAGAR - 190001 PH :9419057564.
775. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015 PH :7006037255.
776. PEAKS AUTO PVT. LTD. (1204-01), BYE PASS ROAD, NH - 1A, NEAR HOTEL SILVER STAR, SRINAGAR - 191101 PH :9519275151.

Dealer Network (AS ON 31.10.2023)

777. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017 PH :9796700750.	787. PEBCO MOTORS (BOY1-01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT - WEST SINGHDHUM, JHARKHAND - 833201 PH :7070449718.	DUMKA	798. RELIABLE INDUSTRIES (L701-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101 PH :6205161170.	808. PEBCO MOTORS LTD. (3101-02), 16 BALICHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHPEDPUR - 831011 PH :9308433388.
SUNDERBANI	CHANDWA	GARHWA	799. PREMSONS MOTOR UDYOG PVT. LTD. (VX01-01), KHATA NO. 4, KHSERA NO. 108, 109, THANA NO. 324, PIPRAKALA, GARHWA, JHARKHAND - 822114 PH :8862828802 9835507004.	809. MOTOR WORLD (3102-01), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHPEDPUR - 831012 PH :9431347164, 9570168342.
778. PEAKS AUTO JAMMU PVT. LTD. (AAM3-01), MOUZA THANDA PANI, TEH. SUNDERBANI - 185153 PH :9697001125.	788. HILLTOP MOTORS (A UNIT OF HIRAL MOTORS PVT LTD) (SCS1-01), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA - 829203, DIST - LATEHAR, JHARKHAND - 829203 PH :7061157502.	GHATSHILA	800. PEBCO MOTORS LTD. (A1A1-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. - CHIRKUNDA, DISTRICT - DHANBAD, JHARKHAND - 828202 PH :9905937751 9835814404.	810. RELIABLE INDUSTRIES (BOX1-01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND - 815351 PH :9835814404.
SURANKOTE	CHIRKUNDA	KATRAS	801. RELIABLE INDUSTRIES (CQT1-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. - CHIRKUNDA, DISTRICT - DHANBAD, JHARKHAND - 828202 PH :9905937751 9835814404.	811. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (GLP1-01), RAJHANS REFRACTORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-828114 - 828114 PH :8910900556.
779. PEAKS AUTO JAMMU PVT. LTD. (TY03-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101 PH :9697001125.	789. RELIABLE INDUSTRIES (CQT1-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. - CHIRKUNDA, DISTRICT - DHANBAD, JHARKHAND - 828202 PH :9905937751 9835814404.	KHELARI	812. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (CFO1-01), PLOT 113, MOUZA - BUKBUKA, BESIDE PAHADI MANDIR, KHELARI, RANCHI - 829205 PH :6458222, 9534199997.	KHUNTI
THANA MANDI	DALTONGANJ	GIRIDIH	802. RELIABLE INDUSTRIES PVT. LTD (5202-08), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND - 815301 PH :9835835101.	813. PREMSONS MOTOR UDYOG PVT. LTD. (B01-01), PLOT NO. 747, KHATA NO. 2, DAHUGUTU, CHAIBASA ROAD, KHUNTI, JHARKHAND - 835 210 PH :9835507004.
780. JAMKASH VEHICLEADES PVT. LTD. (SD01-01), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI - 185212 - 185212 PH :9419267607.	790. PREMSONS MOTORS UDYOG PVT LTD (5103-02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101 PH :9835507004.	GODDA	803. RELIABLE INDUSTRIES (5202-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, - 814112 PH :6207129088 7001553251.	814. HINDUSTAN AUTO AGENCY (VR01-01), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. - TILAIYA, DISTRICT - KODERMA, JHARKHAND. - 825409 PH :6201998936.
URI (CHAAL BONYAAR)	DEOGHAR	GUMLA	804. PREMSONS MOTOR UDYOG PVT. LTD. (5103-02), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207 PH :9835507004.	LOHARDAGA
782. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (CKK1-01), KHSRA NO.346/1/18, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT: BARAMULLA - 193123 PH :9419074912.	791. RELIABLE INDUSTRIES (5202-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, - 814112 PH :6207129088 7001553251.	HAZARIBAGH	805. HINDUSTAN AUTO AGENCY (Y901-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301 PH :9304051949, 9263631327.	815. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (CX01-01), PLOT NO. 14P, 15, 23, RIADA, LOHARDAGA, JHARKHAND. - 835302 PH :9534199997.
JHARKHAND	DHANBAD	MURIA	806. HINDUSTAN AUTO AGENCY (Y901-02), MASIPIRHL, BABHANBAY, HAZARIBAGH . JHARKHAND. - 825301 PH :9216888118 9263631327..	PAKUR
BAGODAR	793. RELIABLE INDUSTRIES (5202-01), KATRAS ROAD, DHANBAD, JHARKHAND - 826001 PH :9835830202	JAMSHPEDPUR	807. PEBCO MOTORS LTD. (3101-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH :9308433388.	816. HILLTOP MOTORS (BVE2-01), NEAR BANK OF INDIA, SILLI MAIN ROAD, MURI, PIN - 835102 - 835102 PH :7061157502.
783. RELIABLE INDUSTRIES PVT. LTD. (BHA1-01), SONTURP, GT ROAD, GAIDA, BAGODAR, GIRDIH, JHARKHAND - 825322 PH :9507102036 9835814404.	794. RELIABLE INDUSTRIES (5202-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O.K.G. ASHRAM, SARAIDEHLA , DHANBAD - 826127 PH :8102333474 7369945040.	KHUNTI	817. HINDUSTAN AUTO AGENCY (Y901-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301 PH :9304051949, 9263631327.	
BALIAPUR	795. RELIABLE INDUSTRIES (5202-06), SUGIADIH, HIRAK ROAD, SARAIDEHLA, DHANBAD, JHARKHAND. - 828127 PH :9334094940.	KHUNTI	818. HINDUSTAN AUTO AGENCY (Y901-02), MASIPIRHL, BABHANBAY, HAZARIBAGH . JHARKHAND. - 825301 PH :9216888118 9263631327..	
784. CARONE (SN1-01), WARD NO 53, HOLDING NO - SAF3797, KANDRA SINDRI, BALIAPUR. - 828123 PH :7980074787.	796. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (5205-01), NH-2, GT ROAD, SAHARJONI, BARWADA, DHANBAD. - 828 109 PH :9006828000, 9835740433.	KHUNTI	819. HINDUSTAN AUTO AGENCY (Y901-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301 PH :9304051949, 9263631327.	
BOKARO	797. RELIABLE INDUSTRIES (5202-09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 827004 PH :9431127983/9431128683.	KHUNTI	820. HINDUSTAN AUTO AGENCY (Y901-02), MASIPIRHL, BABHANBAY, HAZARIBAGH . JHARKHAND. - 825301 PH :9216888118 9263631327..	
785. HINDUSTAN AUTO AGENCY (B501-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004 PH :9831550033/7070403002/9431128683.	798. RELIABLE INDUSTRIES (5202-09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 828109 PH :9031096662.	KHUNTI	821. HINDUSTAN AUTO AGENCY (Y901-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301 PH :9304051949, 9263631327.	
786. HINDUSTAN AUTO AGENCY (B501-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) - 827004 PH :9431127983/9431128683.		KHUNTI	822. HINDUSTAN AUTO AGENCY (Y901-02), MASIPIRHL, BABHANBAY, HAZARIBAGH . JHARKHAND. - 825301 PH :9216888118 9263631327..	
CHAIBASA		KHUNTI	823. HINDUSTAN AUTO AGENCY (Y901-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301 PH :9304051949, 9263631327.	

817. RELIABLE (CLO1-01), CIO KHOKHAN
RAY,HIRAPUR,,PAKUR, MAIN
ROAD,VILL SAHARKOL,PS PAKUR REGISTRY
OFFICE : 816107
PH .9031096662.

RAMGARH

818. HINDUSTAN AUTO AGENCY (AV01-01), MARAR,
RANCHI ROAD (NH-33), RAMGARH - 829122
PH :9263631345.

RANCHI

819. PREMSONS MOTORS UDYOG PVT LTD
(5103-01), 502, KANKE ROAD, RANCHI - 834008
PH .9304807355.
820. PREMSONS MOTOR UDYOG PVT. LTD.
(5103-03), 10/P, NAMKUM INDUSTRIAL
ESTATE,BEHIND HIGH TENSION INSULATOR
FACTORY, LOWER CHUTIA, RANCHI - 834010
PH :9262899003.
821. PREMSONS MOTOR UDYOG PVT. LTD.
(5103-05), PLOT NO.31 & 134, JOHNSON MORN,
TUPUDANA INDUSTRIAL AREA, TUPUDANA,
RANCHI - 834003
PH .9355070004.

822. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS
ENTERPRISES PVT LTD) (5107-02), PLOT NO.
74, OPPOSITE OTC GROUND, HEHAL RATU
ROAD, RANCHI, JHARKHAND - 834005
PH .9524199997, 8227996660.
823. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS
ENTERPRISES PVT LTD) (5107-03), PLOT NO.
39, NEAR BOOTY MORE, RANCHI-RAMGARH
ROAD, RANCHI - 835217
PH .9534199997.

824. PREMSONS MOTOR UDYOG PVT. LTD.
(5103-06), PLOT NO.14 (P) KOKAR INDUSTRIAL
AREA KOKAR, RANCHI - 834001
PH .9835507004.
825. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PVT LTD) (5109-01), KHATA NO. 247,
MOUZA - PUNDAG,P.S. - PUNDAG, RANCHI,
JHARKHAND - 834004
PH .7061157502.

826. HILLTOP MOTORS (A UNIT OF HIRALAL
MOTORS PVT LTD) (5109-02), NEAR KATHAL
MORE, ARGORA RANCHI RD, NEAR EKLABA
TOWER, DHIPATOLI, ARGORA, RANCHI - 834004
PH .7061157502.

SIMDEGA

827. PREMSON (BJ01-01), R.S PLOT NO 4674
UNDER KHATA NO 157, SITUATED AT VILLAGE
- GOTRA, NEAR GOUSHALA, MAIN ROAD,
SIMDEGA, JHARKHAND. - 835223
PH .9835507004.

KARNATAKA**ANEKAL**

828. PRATHAM MOTORS PVT. LTD (205-04-),
SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI,
ANEKAL TALUK - 562106
PH .9945540131.

ANKOLA

829. BHARATH AUTO CARS PVT. LTD. (FC02-01-),
NEAR NARAYANA TEMPLE KAKKAR MUTTA,
BELEGULI CROSS, ANKOLA, UK DISTRICT -
581314
PH .7829567400.

ATHANI

830. SHANTESHA MOTORS (BWA1-01), RS NO. 605,
SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI,
DIST. - BELGAUM - 591304
PH .8884472587.

ATHRADJI

831. ABHARAN MOTORS PVT LTD (G601-04-),
HERABETTU ROAD ATHARDI UDUPI - 576107
PH .9845472500.

ATTIBELE

832. SURAKSHA CAR CARE PVT. LTD. (BMM1-01-),
SURVEY NO.22/78, SARJAPUR MAIN ROAD,
INDIAEBEL VILLAGE, OPP. TO GOLDEN
LIBERTY, ATTIBELE P.O., BANGALORE. - 562107
PH .9449865665.

BAGALKOT

833. VIJAY MOTOWINGS (ZL01-01), 1804/2 BELGUM
RAICHUR ROAD.NEAR APMC MARKET YARD,
BAGALKOT - 587103
PH .9481299167.

BAGEPALLI

834. BIMAL AUTO AGENCY INDIA PVT. LTD.
(BTVI-01), H.L. NO. 423 AND 436 SRI SATHYA
SAI NAGAR, ON NH-7, THIMAKALAPALLI
BLOCK-II, PARAGODU GRAM PANCHAYATH,
KASABA HOBLI, BAGEPALLI TALUK,
CHIKKABALLAPUR DIST. - 561 207
PH .9742458888.

BANDAHALLI

835. BIMAL AUTO AGENCY INDIA PVT. LTD.
(STB1-01), SURVEY NO: 44/11, TAVARAKERE
VILLAGE, NANDAGUDI HOBLI, BANDHALLI,
HOSKOTE TALUK, BANGALORE RURAL DIST.
KARNATAKA- 562122 - 562122
PH .95137 48707.

BANGALORE

836. MANDOVI MOTORS PVT LTD. (201-01-), 24/4,7TH
MAIN,WILSON GARDENS,BANGALORE - 560027
PH .9945235511.
837. MANDOVI MOTORS PVT LTD. (201-07-), 17/A-2&
IND SUBRB,IND STAGE,
GORANGUNTEPALAYA, TUMKUR ROAD,
YESWANTHPUR, BANGALORE - 560022
PH .9945235537.

838. MANDOVI MOTORS PVT LTD. (201-05-),
NO.2/106 (NEXT TO KASSIA BLDG.),17TH
CROSS,MAGADI CHORD ROAD EXTN.
VIJAYANAGAR,BANGALORE - 560079
PH .9945235529.

839. RNS MOTORS (7301-03-), 2275 TUMKUR ROAD,
GURGUNTEPALAYA, YESWANTHPUR,
BANGALORE - 560022
PH .9606933236.

840. BIMAL AUTO AGENCY INDIA PVT. LTD. (218-01-),
NO.-60/3, VENKATALA VILLAGE, YELAHANKA
HOBLI, BANGALORE NORTH TALUK - 560064
PH .9945541034.

841. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-01-),
6/2, MAHADEVAPURA, WHITE FIELD ROAD,
BANGALORE - 560048
PH .99723 98105.

842. RNS MOTORS (7301-04-), HOSUR
ROAD,BOOMANAHALLI,MADIVALA
POST,BANGALORE - 560068
PH .9148001412.

843. MANDOVI MOTORS PVT LTD. (201-08-), NO. 70
SARAKKI INDUSTRIAL LAYOUT,J.P NAGAR,3RD
PHASE, BANGALORE - 560078
PH .9954235522.

844. PRATHAM MOTORS PVT. LTD. (205-01-), 16,
BALLANDUR, SARJAPUR RING ROAD,
BANGALORE - 560037
PH .9945540126.

845. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-02-),
NO. 6/2, SARAKKI, KANAKAPURA ROAD,
BANGALORE - 560078
PH .9972398139.

846. PRATHAM MOTORS PVT. LTD (205-02-),
STHANIKAM'S ARCADE, OPP. ST THERESA
HOSPITAL, DR. RAJ KUMAR ROAD, A
BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE -
560010
PH .9900061378.

847. KALYANI MOTORS PVT. LTD. (211-01-), MYSORE
ROAD,PANTHARAPALYA,KENGRI
HOBBLI,BANGALORE - 583201
PH .9538897078.

848. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-03-),
NO.7/1, KALANAAGRAHARA VILLAGE, MOUNT
ST. JOSEPH TRAINING COLLEGE FOR JESUITS
COMPOUND, IIMB POST, BANNERGHATTA RD.,
BANGALORE - 560076
PH .9845166612.

849. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-04-),
6TH CROSS, OFF OLD AIRPORT ROAD, HAL
2ND STAGE POST, BANGALORE - 560038
PH .9972398106.

850. MANDOVI MOTORS PVT LTD. (201-0C-), NO 1 TO
5, NADAGUDA HBSC, 4TH STAGE, 4TH MAIN,
RAJAJINAGAR INDUSTRIAL TOWN,
BASAWIESHWAR NAGAR - 560044
PH .9945235537.

851. KALYANI MOTORS PVT. LTD. (211-04-), 119/1,
11TH CROSS,MALLESHWARAM,BANGALORE, -
560003
PH .9886026519.

852. MANDOVI MOTORS PVT LTD. (201-0D-), 6/8,
SHREE GANGA GARDEN, GANGA NILAYA,
HENNIUR CROSS, KALYANAGAR POST - 560043
PH .9845132048.

853. MANDOVI MOTORS PVT LTD. (201-0E-), SY
NO.26,AMBILIPURA VILLAGE,VATHUR
HOBLLI,BANGALORE,EAST TALUKA. - 560102
PH .9945235518.

854. MANDOVI MOTORS PVT LTD. (201-9B-), PLOT
NO.-257/1-13, BANNERGHATTA ROAD, N.S.
PALYA, BANGALORE - 560076
PH .9945238559.

855. KALYANI MOTORS PVT. LTD. (213-02-), SY.
NO.58/1A & 61/22, AVALAHALLI, NH-4, K.R.
PURAM, BANGALORE. - 560049
PH .9900037122.

856. SURAKSHA CAR CARE PVT LTD (280-01-), 30/3
K AGRAHARA, HOSUR MAIN ROAD,
ELECTRONIC CITY, BANGALORE - 580100
PH .9449865605.

857. KALYANI MOTORS PVT. LTD. (213-03-),
NO.1294, KUNDALAHALLI VILLAGE, OPP. TO
BROOKE FIELD HOSPITAL, BROOKFIELD,
BENGALURU. - 574239
PH .9900038119.

858. SURAKSHA CAR CARE PVT. LTD. (280-02-),
#54/1, BOOMANAHALLI, HOSUR MAIN ROAD,
BANGALORE - 560068
PH .9449865655.

859. KALYANI MOTORS PVT. LTD. (213-04-),
250/1,BILEKAHALLI, BANNERGHATTA ROAD,
BENGALURUE - 560076
PH .9688445406.

860. BIMAL AUTO AGENCY INDIA PVT. LTD. (218-04-),
PLOT NO.37/38, 2ND STAGE, PEENYA
INDUSTRIAL AREA, BANGALORE - 560058
PH .9945237213.

861. RNS MOTORS (7301-0C-), 106/7, BELLARY
ROAD, NEAR IOC PETROL BUNK,
AMROTHAALLI, NEAR HEBBAL FLYOVER,
BENGALURU (KARNATAKA) - 560092
PH .6364884787.

862. PRATHAM MOTORS PVT. LTD (205-05-), #58/5
KUDLU VILLAGE, NEXT TO ZEE SCHOOL,
SARJAPUR HOBLLI, ANEKAL TALUK,
BANGALORE - 560034
PH .9900058466.

863. RNS MOTORS LIMITED (7301-0H-), PLOT
NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI
VILLAGE, BOMMASANDRA, JIGINI LINK ROAD,
BANGALORE - 562158
PH .9538965771.

Dealer Network (AS ON 31.10.2023)

864. KALYANI MOTORS PVT. LTD. (291-02), 10/1, HEBBAL ,AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024 PH :9740985324, 7760983887.
865. BIMAL AUTO AGENCY INDIA PVT. LTD. (286-01-), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066 PH :9900245079.
866. SURAKSHAA CAR CARE PVT. LTD. (280-04-), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034 PH :8884419010.
867. KALYANI MOTORS PVT. LTD. (287-01-), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056 PH :9900019961.
868. BIMAL AUTO AGENCY INDIA PVT. LTD. (216-06-), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033 PH :9738501996.
869. MANDOVI MOTORS PVT LTD. (201-0H-), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093 PH :9945235533.
870. VARUN MOTORS PVT. LTD. (292-01-), HNO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE - 560022 PH :7373834582.
871. KALYANI MOTORS PVT. LTD. (213-05-), PLOT NO. 74/5, HORAMAVU MAIN ROAD, NEAR BBMP OFFICE, KUR PRAM HOBLI, BANGALORE, - 560043 PH :9900037114.
872. KATARIA AUTOMOBILES PVT. LTD. (294-01-), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST – AADUGODI, BANGALORE, - 560030 PH :7342921802.
873. MANDOVI MOTORS PVT LTD. (201-0i-), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASPURA, KENGERI HOBLLI, UTTARAHALLI, BANGALORE - 560060 PH :9945235516.
874. VARUN MOTORS PVT. LTD. (292-02-), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGLAGINTA, HESSARGHATTAA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE, - 560073 PH :7338286729.
875. MANDOVI MOTORS PVT LTD. (201-0j-), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIRAKSHINAN ROAD, VIDYARANYAPURA, BANGALORE, - 560097 PH :9945235514.
876. KATARIA AUTOMOBILES PVT. LTD. (293-01-), SURVEY NO. 8/3, 10/4, 10/2, VILLAGE – THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA - 560109 PH :8884434340.
877. RNS MOTORS LIMITED (7301-0j-), SY. NO. 11/2 & 12/1, VILLAGE – ARAKERE, BEGUR HOBLLI, BANNERGHATTA ROAD, BANGALORE - 560 076 - 560076 PH :7760982836.
878. SURAKSHAA CAR CARE PVT. LTD. (280-05-), SURVEY NO./26, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE, - 560100 PH :8884471200.
879. KALYANI MOTORS PVT. LTD. (211-05-), SY.NO.84, G HOSAHALLI MAIN ROAD, GOLLARAHATTI, V N POST, YESHWANTPUR HOBLLI, MAGADI MAIN ROAD, BANGALORE - 560091 PH :9900080229.
880. SURAKSHAA CAR CARE (280-06-), BEARING NO. 14/4-320/2, BEGUR HOBLLI, BOMMANAHALLI VILLAGE, BEGUR HOBLLI, BANGALORE, KARNATAKA - 560 068 PH :9449865665.
881. PRATHAM MOTORS PVT. LTD (205-07-), SUVEY NO.43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST - DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA. - 562125 PH :9611834659.
882. SURAKSHAA CAR CARE PVT. LTD. (280-07-), SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN,MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA - 560099 PH :94498 65666.
883. KALYANI MOTORS (291-03-), SURVEY NO. 194/5, HUNSEMARAMAHALLI, JALA HOBLLI, DEVANAHALLI TALUK, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH PH :9740985324.
884. MANDOVI MOTORS (201-09-), MUNICIPAL NO. 133 (OLD NOS 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018. - 560018 PH :9945235516.
- BANGALORE (HEBBAGODI)**
885. RNS MOTORS (210-01-), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD,ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560 099 PH :8366938829.
- BANGALORE- KP ROAD**
886. KALYANI MOTORS (213-06-), SURVEY NO. 67, NH-209, NAVARATNA GARDENS, (NEAR IOC PETROL BUNK) DODDAKALASANDRA VILL., UTTARAHALLI HOBLLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062 PH :990003944/9900073254.
- BANGARPET**
887. SURAKSHAA CAR CARE PVT. LTD. (0R04-01-), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH :9449865601.
- BANGLORE - BOMMANAHALLI**
888. VARUN MOTORS PVT LTD (292-03-), SY NO. 136 (OLD NO 54/8) SANGEURUVANAHALLI(VP) KAMAKSHIPALALA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE,KARNATAKA - 560079 PH :9513683052.
- BANTWAL**
889. MANDOVI MOTORS PVT LTD. (TR01-01-), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231 PH :9008810123.
- BELGAUM**
890. SHANTESHA MOTOR (P) LTD (E801-01-), MUJAWAR COMPOUND,NEHRU NAGAR, BELGAUM, - 590010 PH :9902043711.
891. SHANTESHA MOTOR (P) LTD (E801-04-), PLOT NO. 8, SURVEY NO. 251/1, HAVLOCK ROAD CAMP, BELGAUM - 290010 PH :9588645387.
892. SHANTESHA MOTOR (P) LTD (E801-03-), PLOT NO. 39, RS NO. 670, CTS NO. 1612/3, KHANUPAR ROAD, UDAYMBA, BELGAUM (SCREE SHOT ATTACHED) - 590006 PH :8884433911.
893. SHANTESHA MOTORS (P) LTD (E801-06-), PLOT NO. 2/1, RS NO. 29, KIADB INDUSTRIAL AREA, KIADB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010 PH :9731396805.
- BELLARY**
894. K.P.F. PVT. LTD. (G201-01-), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101 PH :9449876025.
- BELTHANGADY**
895. BHARATH AUTO CARS PVT. LTD. (4503-04-), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH :9886543230.
- BHADRAWATI**
896. SHRUTI MOTORS (FB01-01-), SURVEY NO. 18/4, BH ROAD,KADADAKATTE HOBLLI, KADADAKATTE, BHADRAWATI, SHIMOGA DIST., KARNATAKA - 577229 PH :7899885404.
- BHATKAL**
897. BHARATH AUTO CARS PVT. LTD. (CEF1-01-), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320 PH :9008693940.
- BIDAR**
898. LAHOTI MOTORS PVT. LTD (EX01-01-), SI 50/51,PRATAP NAGAR, UDIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402 PH :8884412049.
899. LAHOTI MOTORS PVT. LTD (EX01-02-), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585 401 PH :9108707709.
- BIJAPUR**
900. RNS MOTORS (7301-0l-), SURVEY NO.25K1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109 PH :8861208998.
- BUDHIGERE**
901. BIMAL (SGM1-01-), KHATTA NO:115,SY. NO. 128/33, MANDUR MAIN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOC PETROL BUNK, BANGALORE EAST TALUK, BANGALORE, - 560049 PH :9742259528.
- BYNDIOR**
902. ABHARAN MOTORS PVT LTD (BUH1-01-), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDIOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214 PH :7899751777.
- CHALLAKERE**
903. SAKETH AUTOMOBILES (CKN1-01-), SITE NO. 9 & 10, SY. NO. 98/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522 PH :9686550126.
- CHAMARAJANAGAR**
904. MANDOVI MOTORS PVT LTD. (0E01-01-), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313 PH :9845445986.
- CHANNAGIRI**

905. SHRUTI MOTORS (BUQ1-01-), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213
PH :7899934143.
- CHANNAPATNA**
906. KALYANI MOTORS PVT. LTD., (BSX1-01-), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160
PH :9845066682.
- CHANNARAYAPATNA**
907. VENKAT MOTORS (HC01-01-), PLOT NO. 389, 36/3, 132/1, BEIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA - 573116
PH :8147077144.
- CHICKBALLAPUR**
908. BIMAL AUTO AGENCY INDIA PVT. LTD., (KJ02-01-), NO. 169/1, AMMANI KANDAVARAKERI VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101
PH :9742262499.
- CHICKMAGALUR**
909. SHRUTI MOTORS (B701-02-), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102
PH :9980157446.
- CHIKODI**
910. SHANTESHA MOTORS (E801-05-), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201
PH :7829925790.
- CHINTAMANI**
911. PRATHAM MOTORS PVT. LTD (205-06-), SURVEY NO. 33, NEXT TO VIJAYA PU COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASAPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125
PH :7899761301.
- CHITRADURGA**
912. SAKETH AUTOMOBILES (AL01-01-), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130
PH :9686550313.
- DAVANGERE**
913. SHRUTI MOTORS (S101-01-), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004
PH :9880401284.
- DAVENGERE**
914. SHRUTI MOTORS (S101-02-), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001
PH :9880401284.
- DEVARAHALLI**
915. BIMAL AUTO AGENCY INDIA PVT. LTD. (WH01-01-), SURVEY NO.24/1/14/6, 11TH WARD, BB ROAD, DEVARAHALLI, BANGALORE DISTT: - 562110
PH :9742262514.
- DHARWAD**
916. REVANKAR MOTORS PVT. LTD., (BIX1-01-), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYADPUR VILLAGE, DHARWAD, KARNATAKA - 580001
PH :8861006707.
- DODDABALLAPUR**
917. PRATHAM MOTORS PVT. LTD. (BUA1-01-), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALI GUDDADAHALLI, KASABA HOBLI TALUK - DODDABALLAPUR, DISTRICT - BENGALURU RURAL. - 561203
PH :9886671687.
- DAGAD**
918. RNS MOTORS (7301-0E-), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI DAGAD MAIN ROAD, DAGAD - 582103
PH :9538925602.
- GANGAVATI**
919. MUNEER ENTERPRISES PVT. LTD. (N701-03-), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, - 583227
PH :9449870754.
- GAURIBIDANUR**
920. MANDOVI MOTORS PVT LTD. (BUY1-01-), NO.59/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210
PH :8217453513.
- GOKAK**
921. SHANTESHA MOTORS PVT. LTD. (IR01-01-), RS NO.10/6/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307
PH :7829925760.
- GONIKOPPAL**
922. MANDOVI MOTORS PVT LTD. (2501-07-), KAIKERY VILLAGE, GONIKOPPAL,, - 571213
PH :9900064873.
- GUDIBANDHA**
923. BIMAL AUTO AGENCY INDIA PVT. LTD. (SGT1-01-), DOOR NO:160, 1ST WARD, OPP TO GOVERNMENT BUS STAND, BAGEPALLI ROAD, GUDIBANDA, CHICKABALLAPURA DISTRICT KARNATAKA - 561209
PH :9742261903.
- GULBARGA**
924. LAHOTI MOTORS PVT. LTD (E902-01-), LAHOTI GARDENS,NEAR KMF. HUMNABAD ROAD,GULBARGA - 585104
PH :9480825014.
925. LAHOTI MOTORS PVT. LTD (E902-02-), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA - 585104
PH :7619342035.
- GUNDLUPET**
926. KALYANI MOTORS PVT. LTD (BPU2-01-), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111
PH :9686855799.
- HAGARIBOMMANAHALLI**
927. MUNEER ENTERPRISES PVT. LTD. (BUX1-01-), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.3, HAGARIBOMMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212
PH :9481343007.
- HALIYAL**
928. RNS MOTORS (SFM1-01-), SURVEY NO: 347P/27, DOOR NO:B1180/15 & B1180/16, HANUMAN COMPLEX, HALIYAL CIRCLE, MAIN ROAD, HALIYAL TOWN & TALUK, UTTARA KANNADA DISTRICT,KARNATAKA - 581329
PH :8284200200.
- HARAHOLI**
929. SURAKSHA (SIH1-01-), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA. - 562112
PH :9449865608.
- HASSAN**
930. VENKAT MOTORS (C802-01-), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201
PH :9844044038.
- HAVERI**
931. REVANKAR MOTORS PVT LTD (BBM1-01-), NEAR TIME SOCIETY CAMPUS, UJARILAKAMAPUR, PB ROAD, HAVERI - 581110
PH :7022016903.
- H-CROSS**
932. BIMAL AUTO AGENCY INDIA PVT. LTD. (CRQ1-01-), PART NO.1, SITE NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTAA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122
PH :9738948126.
- HEBRI**
933. ABHARAN MOTORS PVT LTD (BGD1-01-), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI KARKALA, DIST.-UDUPI, KARNATAKA - 576112
PH :9800077605.
- HEGGADADEVANA KOTE (H D KOTE)**
934. KALYANI MOTORS PVT. LTD (CJC2-01-), SURVEY NO. 54, VILLAGE - YARAHALLI, KASABA HOBLI TALUK - H.D.KOTE, DISTRICT - MYSORE . - 571125
PH :9686855799.
- HESSARGHATHA**
935. BIMAL (SGN1-01-), SY NO 294/3, HESARAGHATHA VILLAGE YELAHANKA TALUK, BENGALURU,KARNATAKA - 560088
PH :9743658662.
- HOSDURGA**
936. SAKETH AUTOMOBILES (BWO1-01-), ASSESSMENT NO. 9310/6, PLOT NO. 6, HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST.-CHITRADURGA, KARNATAKA - 577 527
PH :7625088946.
- HOSKOTE**
937. BIMAL AUTO AGENCY INDIA PVT. LTD. (B16-05-), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114
PH :9742281726.
- HOSPET**
938. MUNEER ENTERPRISES PVT. LTD. (N701-01-), BELLARY ROAD,SANKLAPUR,HOSPET , - 583203
PH :7619505001.
- HUBLI**
939. RNS MOTORS (7301-01-), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025
PH :9538965902.
940. RNS MOTORS (7301-0F-), GOKUL ROAD MUREDISHWAR BHAVAN, HUBLI - 580030
PH :8861208532.
941. REVANKAR MOTORS PVT. LTD. (7303-01-), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029
PH :8792008301.
- HUNSUR**

Dealer Network (AS ON 31.10.2023)

942. KALYANI MOTORS PVT. LTD (GLI2-01), M-18 & M-19, KSSIDC INDUSTRIAL ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE DISTRICT, KARNATAKA - 571105
PH :7022669699.

JEWARGI

943. LAHOTI (SLI1-01), S NO: 125, PLOT NO:7, FILTER BED ROAD, OPP. BUS DEPOT, JEWARGI, KALABURGI DISTRICT (FORMERLY GULABARGA) , KARNATAKA-585310. - 585310 PH :9480825004.

KADABA

944. MANDOVI MOTORS PVT LTD. (BYE1-01), SURVEY NO .11/20, KALAR, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA - 574221
PH :9740912365.

KADUR

945. SHRUTI MOTORS (BQS1-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548
PH :8904823736.

KANAKAPURA

946. KALYANI MOTORS PVT. LTD. (BXY1-01), SURVEY NO. 44/1B, KASABA HOBLI, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT-RAMANAGARA. KARNATAKA. - 562117
PH :9900599933.

KARKALA

947. ABHARAN MOTORS PVT LTD (G601-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104
PH :9880232666.

KARWAR

948. BHARATH AUTO CARS PVT. LTD. (B8J01-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARAKANNADA DISTRICT, KARNATAKA. - 581301
PH :7829567400.

KITTUR, BELGAUM

949. SHANTESHA (SFO1-01), PLOT NO. 219, KITTUR INDUSTRIAL AREA (KIADB), POONA BANGALORE HIGHWAY (NH-4),KITTUR TOWN AND TALUK, BELGAUM DISTRICT. - 591115
PH :9731396808.

KOLAR

950. MANDOVI MOTORS PVT LTD. (201-0F), 6/7 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALL, OPP HOTEL SHANTI SAGAR, KOLAR. - 563101
PH :9740202734.

KOPPAL

951. K.P.F. PVT. LTD. (ER01-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238
PH :9449876027.

KRISHNARAJANAGARA (KRNAGARA)

952. KALYANI MOTORS PVT. LTD (SC02-01), NO:D, DORNNAHALI,DODDEKOPPALI GRAMA PANCHAYAT,KASABA HOBLI, KRISHNARAJANAGARA, MYSORE DISTRICT,KARNATAKA - 571602 PH :8971159430.

KRISHNARAJAPET

953. MANDOVI MOTORS PVT LTD. (BMP1-01), KHATA NC 3094, NO. SY. NO.278, MYSORE CHENNERAYAPATNA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHNARAJPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423 PH :9845132038.

KUMTA

954. BHARATH AUTO CARS PVT. LTD. (AFA2-01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334
PH :9448979530.

KUNDAPUR

955. ABHARAN MOTORS PVT LTD (G601-02), NH-17, THAKKATTE, KUNDAPURA - 272877
PH :9880197524.

KUNIGAL

956. SAKETH AUTOMOBILES (VQ01-01), NEAR KRS AGRAHARA,BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130
PH :9686550127.

KUSHAL NAGAR

957. MANDOVI MOTORS PVT LTD. (VN01-01), SY NO:88,MADAPATANA,KUSHAL NAGAR,SOMVARPUR,NORTH KODAGU, KARNATAKA - 571234
PH :990080893.

LINGASUGUR

958. MUNEER ENTERPRISES PVT. LTD. (BO01-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122
PH :9480830255.

MADDUR

959. MANDOVI MOTORS PVT LTD. (BMK1-01), SURVEY NO 802/2AAB, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN,MANDYA DISTRICT, KARNATAKA - 571428
PH :90080 31608.

MADIKERI

960. KALYANI MOTORS PVT. LTD (QX02-01), BASAPPA THEATRE BUILDING, DASAWAL ROAD,MADIKERI KODAGU DISTRICT. - 571201 PH :9606073867.

MAGADI

961. PRATHAM MOTORS PVT. LTD. (BHX1-01), SY NO:92/2, THIRUMALAI VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARNATAKA - 562120 PH :9900058483.

MANCHENAHALLI

962. VARUN MOTORS (SRU1-01), NO:1219,GOLAPPA COMPOUND, MAHESHWARI CIRCLE, MANCHENAHALLI, GOWRIBIDANUR TALUK, CHIKKABALLAPUR DIST, KARNATAKA- 561211 - 561211 PH :98713979162.

MANDYA

963. MANDOVI MOTORS PVT LTD. (2501-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD. - 571401 PH :9611165873.

MANGALORE

964. MANDOVI MOTORS PVT LTD. (4502-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATT, MANGALORE - 575001 PH :9845107701.

965. BHARATH AUTO CARS PVT. LTD. (4503-01), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR AJ. HOSPITAL, MANGALORE - 575004 PH :9886785730.

966. MANDOVI MOTORS PVT LTD. (4502-03), NO., HASSAN GROWTH CENTRE,ADYAR.N.H. -48, MANGALORE - 575007 PH :9845514146.

967. MANDOVI MOTORS PVT LTD. (4502-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008 PH :988679235.

968. BHARATH AUTO CARS PVT. LTD. (4503-06), PLOT NO. 290/1, 291/1, KODIALBALI VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002 PH :9886333030.

969. MANDOVI MOTORS PVT LTD. (4502-08), DOOR NO. 2-634, SUJITH BAGH LANE, YEYYADE, MANGALORE. DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575008 PH :9880278077.

970. BHARATH AUTO CARS PVT. LTD. (4503-08), S. NO. 136/1, 137/5/41-2A/1, 2A/1P, 137/3-40, 136/1-40-A2, KASABA BAZAR, KANDAPALLI, KUDRU, TALUK - MANGALORE, MANGALORE, KARNATAKA. - 575003 PH :9886785730.

MUDBIDRI

971. BHARATH AUTO CARS PVT. LTD. (4503-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227 PH :9886785430.

MUDHOL

972. VIJAY MOTOWINGS (ET01-01), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587 313 PH :9606046173.

MULKI

973. BHARATH AUTO CARS PVT. LTD. (4503-05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154 PH :9986020730.

MURUDESHWAR

974. RNS MOTORS (7301-02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350 PH :9538965969.

MYSORE

975. MANDOVI MOTORS PVT LTD. (2501-01), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH :9945248860.

976. MANDOVI MOTORS PVT LTD. (2501-05), NO.18/2/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011 PH :9845939936.

977. KALYANI MOTORS PVT. LTD (2503-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008 PH :7259255558.

978. MANDOVI MOTORS PVT LTD. (2501-08), 217/Z., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH :9845399397.

NAGAMANGALA

979. MANDOVI MOTORS PVT LTD (SFK1-01), SURVEY NO:3316/2327,VISHALAXAMMA COMPLEX, T B BADAVANE B M ROAD, NAGAMANGALA TOWN, MANDYA DISTRICT, KARNATAKA - 571432 PH :9845132038.

NANJANGUD

980. KALYANI MOTORS PVT. LTD. (BYK2-01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT - MYSORE, KARNATAKA. - 571301 PH :9686855799.

NARASIMHARAJAPURA

981. SHRUTI MOTORS (SPP1-01), SURVEY NO # SURVEY NO.173/P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALU R DIST.,KARNATAKA - 577134 PH :8310187660.

NARAVI	990. VARUN MOTORS (SLE1-01), SURVEY NO. 3/1, SITE NO. 6 , SINGANAYAKANAHALLI, RAJANKUNTE, BANGALORE NORTH TALUK, BANGALORE URBAN, KARNATAKA - 560064 PH :9513979162.	1000. RNS MOTORS LTD (MQ01-01), SURVEY NO 43/B, LANDAKANALLI VILLAGE, DODNALLI GRAMA,SIRSI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402 PH :9895979023.	1009. SHRUTI MOTORS (BQR1-01), PLOT NO. 1507/2187, OPP TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI . - 577432 PH :7795851011.
NEELAMANGALA	982. MANDOVI MOTORS (SRS1-01), SURVEY NO:122/1B1,DOOR NO:4/59,SHRI CHAITHANYA , ARASAKATTE, NARAVI, BELTHANGADY TALUK, DAKSHINA KANNADA DIST, KARNATAKA- 574109 . - 574109 PH :9740392005.	RAMANAGARAM	991. KALYANI MOTORS PVT. LTD. (211-02), #K1318/2034C,OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511 PH :9686689007.
RANE BENNUR	992. REVANKAR MOTORS (BXV1-01), SCHEDULE A-2, OPP. STUIT ENGINEERING COLLEGE, P B ROAD, RANE BENNUR, KARNATAKA . - 581115 PH :8830947883.	SIRSI	1001. RNS MOTORS (7301-0D-), K H B COLONY, SIRSI - 581402 PH :9538925606.
NELYADI	984. BHARATH AUTO CARS PVT. LTD. (BPF1-01), SURVEY NO. 97/1P AND SURVEY NO. 97/9, VILLAGE - HOSAMAJLU KAUKRADY, POST - NELYADI, TALUK - PUTTUR, DIST -DAKSHIN KANNADA . - 574229 PH :9886072730.	SIRUGUPPA	1002. MUNEER ENTERPRISES PVT. LTD. (CTN1-01), SITE NO:31C/18 & PLOT NO.1, BELLARY - SIRUGUPPA MAIN ROAD, SIRUGUPPA TALUK, BELLARY DISTRICT . - 583121 PH :761950001.
OORGAMPET	985. BIMAL AUTO AGENCY (SRJ1-01), SITE NO:10, NEW KATHA NO: 251, ROBERTSONPET, KGF, OORGAMPET, KOLAR DIST, KARNATAKA- 563122 . - 563122 PH :9513748707.	SOMWARPET	1003. MANDOVI MOTORS PVT LTD. (CSG1-01-), SURVEY NO.130 SITUATED AT MADIKERI ROAD, NAGROOR VILLAGE, BALAGUNDU POST, SOMWARPET TALUK, NORTH KODAGU DISTT . - 571236 PH :9845115665.
PADUBIDRI	986. ABHARAN MOTORS PVT LTD (CSI1-01-), PLOT NO. 51/20, VILLAGE - PADUBETTI, PADUBIDRI TOWN, TALUK & DISTRICT - UDUPI, KARNATAKA . - 574111 PH :9880232999.	SRINIVASAPURA	1004. SURAKSHA CAR CARE PVT. LTD. (BUR1-01-), SY NO. 40, VPRD NO. 86, PROPERTY NO. 84 & 87, CHALIDIGANA HALLI GRAMA PANCHAYATH, PANNASAMAKANA HALLI VILLAGE, SRINIVASAPURA POST & TALUK, DIST.-KOLAR, KARNATAKA . - 563 135 PH :9449865601.
PERESANDRA	987. BIMAL AUTO AGENCY INDIA PVT. LTD (SMU1-01-), SURVEY NO # NO.39.NO.113, SAMRUDDHI NILAYA GROUND FLOOR, NH7, ARURU VILLAGE, PERESANDRA, CHIKKABALLAPUR DISTRICT, KARNATAKA- 562104 . - 562104 PH :8660799820.	SULLIYA	1005. MANDOVI MOTORS PVT LTD. (4502-04-), ODAIBAI SULLIA,MANGALORE MYSORE ROAD,KARNATAKA - 574239 PH :9900002325.
PUTTUR	988. BHARATH AUTO CARS PVT. LTD. (4503-02-), NEAR RAIWAY STATION, HARADY, PUTTUR - 517583 PH :9886072730.	SURATHKAL	1006. MANDOVI MOTORS PVT LTD. (4502-02-), KANA ROAD, SURATHKAL - 574158 PH :9845514143.
RAICHUR	989. MUNEER ENTERPRISES PVT. LTD. (N701-02-), #12-10-64,GOUHAL ROAD,SIYA TALAB AREA,RAICHUR - 584101 PH :9480830264.	T. NARASIPURA	1007. MANDOVI MOTORS (SFL1-01-), KHATA NO:472/473/474, OPP TO SRI RAGHAVENDRA SWAMY MUTT, CHAMARAJANAGAR ROAD, T. NARASIPURA TOWN, MYSORE DISTRICT, KARNATAKA . - 571124 PH :9845132038.
RAJANUKUNTE	990. BHARATH AUTO CARS PVT. LTD. (BPY1-01-), SURVEY NO. 211, NEAR IOC PETROL BUNK, JOG ROAD, VILLAGE - HOSUR, TALUK - SIDDAPUR, DISTRICT - UTTARA KANNADA . - 581355 PH :9449402730.	TEKAL	1008. PRATHAM MOTORS PVT. LTD. (SUE1-01-), SURVEY NO: 12, NEAR NANJUNDESHWARA PETROL BUNK, MALUR ROAD, K G HALLI, TEKAL HOBILI, KOLAR DIST., KARNATAKA-563137 . - 563137 PH :9900058466.
	SIRISI	THIRTHAHALLI	1009. MANDOVI MOTORS PVT LTD. (CCE1-01-), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTEL TOWN, TALUKU - BANTWAL, DISTRICT - DAKSHIN KANNADA . - 574243 PH :9008810123.
		VITTEL	1010. BHARATH AUTO CARS PVT. LTD. (QW01-01-), NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA KANNADA DISTT. - 575017 PH :9538796330.
		THOKOTU	
		TIPTUR	1011. SAKEETH AUTOMOBILES (H101-03-), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA . - 572201 PH :9945301023.
		TUMKUR	1012. SAKEETH AUTOMOBILES (H101-01-), SIRA ROAD, TUMKUR . - 572106 PH :9686550323.
		UDUPI	1013. ABHARAN MOTORS PVT LTD (G601-01-), N.H. 17, NITTUR, UDUPI - 576103 PH :9880232999.
			1014. ABHARAN MOTORS PVT LTD (G601-05-), NO. 305/IC, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI . - 576101 PH :9686694341.
		UJIRE	1015. BHARATH AUTO CARS PVT. LTD. (BWT1-01-), SURVEY NO.237-2B1, MANGALORE-CHARMDADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKU, DISTT. DAKSHINA KANNADA, KARNATAKA . - 574240 PH :9886176130.
		UPPINANGADI	1016. MANDOVI MOTORS PVT LTD. (4502-05-), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH :9740912365.
		VIJAYPURA	1017. BIMAL AUTO AGENCY (BTZ1-01-), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA . - 562135 PH :8884433996.
		VITTEL	1018. MANDOVI MOTORS PVT LTD. (CCE1-01-), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTEL TOWN, TALUKU - BANTWAL, DISTRICT - DAKSHIN KANNADA . - 574243 PH :9008810123.
		YADGIR	

Dealer Network (AS ON 31.10.2023)

1019. LAHOTI MOTORS (SFP1-01), SURVEY NO. 101/1, GULASAR VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA PH : 948025031.

YELLAPUR

1020. REVANKAR MOTORS PVT. LTD (CUR1-01), PLOT NO. 4 A1A1A1 GR. 5, UDYAM NAGAR, YELLAPUR POST, BALGIMANI, HUBLI-ANKOLA, YELLAPUR TOWN, UTTARA KANNADA DIST., KARNATAKA - 581359 PH : 7090772121.

KERALA

ADOOR

1021. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH : 9745998303.

1022. AVG MOTORS LTD. (Y501-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANMTHITTA, KERALA - 691523 PH : 9446355900.

ALANALLUR

1023. KVR AUTOCARS PVT LTD (CIW1-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST - ALANALLUR, TALUKA - MANNARKAD, DISTRICT - PALAKKAD, KERALA. - 676801 PH : 9747020582.

ALATHIYOO

1024. A AM MOTORS (E601-11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE - ALATHIYOO, TIRUR PONNAI ROAD, TALUKA - TIRUR, DIST. -MALAPPURAM, KERALA. - 676102 PH : 9895940000 , 9072998833.

ALATHUR

1025. BRD CAR WORLD LIMITED (BRW1-01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 676862 PH : 9745634999.

ALLEPPY

1026. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-12), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002. - 699002 PH : 9745977744.

ALLEPPY

1027. POPULAR VEHICLES (E502-01), BUILDING NO. XVII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZHA, KERALA-688011. - 688011 PH : 9778698161.

ALUVA

1028. BRD CAR WORLD LIMITED (A404-09), RE SURVEY NO.330/7, NH-47, KUNNUMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102 PH : 9745907100.

ANCHAL

1029. SARATHY AUTO CARS (BQ1-01), SURVEY NO. 371/9, VILLAGE - IDAMULAKKAL, P.O. - ANCHAL TALUK - PUNALUR, DISTRICT - KOLLAM. - 691306 PH : 9526906665.

1030. POPULAR VEHICLE (1601-14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KATHADY JUNCTION, ANCHAL, KERALA - 691306 PH : 9778698200.

ANGAMALY

1031. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572 PH : 9745998434.

1032. POPULAR VEHICLES & SERVICES LTD. (2701-0D), 182-AIRPORT JUNCTION NAGAR.M. C. ROAD,ANGAMALY - 683572 PH : 8086078886.

ATTINGAL

1033. POPULAR VEHICLES & SERVICES LTD. (1601-07), PALAMKONAM, PERUNKULAM,VIA-ALAMCODE, ATTINGAL - 695102 PH : 8086078788.

1034. SARATHY AUTODRIVERS PVT LTD (SX05-01), SURVEY NO. 2952/17 & 2952/4, KIZHVILLAM VILLAGE, ATTINGAL, CHARAINKEEZHU TALUK, TRIVANDRUM DIST., KERALA. - 695 104 PH : 9526052765.

1035. INDUS MOTOR COMPANY PRIVATE LIMITED (SX01-01), S.Y. NO. 54/13, 14, 15, 16, (OLD S.Y. NO. 22, 2213, 16), IN BLOCK NO. 3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. - 695104 PH : 9747550888.

BALARAMPURAM

1036. POPULAR VEHICLES & SERVICES LTD. (1601-11), POOVAR ROAD, VAZHIMUKKU, BALARAMPURAM P.O., TRIVANDRUM DISTRICT - 695501 PH : 8943345922.

BHARANIKAVU

1037. SARATHY AUTO CARS (BQU1-01), SURVEY NO. 116/2 F, SASTHAMKOTTA VILLAGE, BHARANIKAVU TOWN, KUNNATHOOR TALUK, KOLLAM DISTRICT. KERALA, PIN-690520 - 690520 PH : 7994825565.

CALICUT

1038. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011 PH : 9745998019.

1039. POPULAR VEHICLES & SERVICES LTD. (4702-02), BEHIND MIMS, EASWARANGAMAL ROAD, GOVINDAPURAM P.O., CALICUT - 673016 PH : 9846288613.

1040. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-06), KOYA ROAD JUNCTION, PUTHIYANACADI, POST WEST HILL, CALICUT - 673005 PH : 9745998020.

1041. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655 PH : 9745998020.

1042. POPULAR VEHICLES & SERVICES LTD. (4702-07), NH-17 BY PASS,PACHAKKIL, MALAPARUMBA P.O., KOZHIKODE, CALICUT - 673009 PH : 9288012082.

1043. BIMAL AUTO AGENCY INDIA PVT LTD (4706-01), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH - CHERUVANUR, P.O. - NALLALAM, CALICUT (KOZHIKODE) , KERALA. - 673027 PH : 7592898888, 7594997888.

CHALAKUDY

1044. BRD CAR WORLD LIMITED (ZJ02-01), MURINGOOR P.O., CHALAKUDY - 680316 PH : 9645176999.

1045. INDUS MOTOR COMPANY PRIVATE LIMITED (ZJ03-01), SURVEY NO. 53/1, 53/2 & 55/1, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALUKA CHALAKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307 PH : 9747557355.

CHALAKUDY / CHILLAKUDDY / THRISSUR

1046. POPULAR VEHICLES & SERVICES LTD. (2701-0C), OPPOSITE CCMK HOSPITAL, VELLIKULAM ROAD, CHALAKUDY, KERALA - 680307 PH : 9072609600.

CHANGANASSERY

1047. INDUS MOTORS (CNZ1-01), BUILDING NO. 4/11, BLOCK NO. 4, RE-SURVEY NO. 224/1, VAZHAPPALLI WEST VILLAGE, CHANGANASSERY TOWN & TALUK, KOTTAYAM DIST.KERALA - 686103 PH : 9778699557.

CHANGARAMKULAM

1048. A M MOTORS (VH01-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DIST, KERALA - 679585 PH : 9895756008.

CHAVAKKAD

1049. BRD CAR WORLD LIMITED (A404-06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512 PH : 9645963399.

1050. SAI SERVICE PRIVATE LIMITED (0J02-01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK - GURUVAYUR, CHAVAKKAD,) - 680506 PH : 9495883852.

CHENGANNUR

1051. SARATHY AUTO CARS (C701-06), PRAVUMKOOD, THIRUVANANDAOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) - 689124 PH : 9447002647.

1052. SAI SERVICE (UL03-01), SURVEY NO. 276/2/11,13,13-2, NEAR BPCL PUMP AND SURVEY NO. 276/12, M C ROAD, NEAR LABHAM MAVELI STORE,CHENGANNUR PO & MUNICIPAL, CHENGANNUR VILL & TALUK, ALAPUZHA DIST., KERALA-689121 - 689121 PH : 9288024220.

CHERPLASSERY

1053. KVR AUTOCARS PVT LTD (NB01-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE - CHERUPPALASSERY, TALUK - OTTAPPALAM, DISTRICT - PALAKKAD - 679503 PH : 9747020582, 280100.

CHERTHALA

1054. INDUS MOTOR COMPANY PRIVATE LIMITED (VL03-01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKUZHI,CHERTHALA, ALAPUZHA-DIST. - 688552 PH : 9745997633.

1055. POPULAR VEHICLES & SERVICES PVT. LTD. (VL02-01), RE-SURVEY NO.150/2-1,147/3, BUILDING NO KP-18/80, N.H. KANJIKUZHI VILLAGE, CHERTHALA, ALAPUZHA DISTT., - 688582 PH : 9072530127.

CHINGAVANAM

1056. POPULAR (I602-01), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531
PH :9778690817.
- CHITTUR**
1057. INDUS MOTOR COMPANY PRIVATE LIMITED (BOX1-01), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLYIVALLAMPATTY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555
PH :9745915160.
- CHULLIMANOOR**
1058. POPULAR VEHICLES (1601-16), RE-SURVEY NO. 43/7, VILLAGE-ANAND, CHULLIMANOOR TOWN, TALUKA-NEDMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541
PH :9778690745.
- COCHIN**
1059. POPULAR VEHICLES & SERVICES LTD. (2701-01), PEROANDO ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025
PH :9846017725.
1060. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN. - 682015
PH :974598040.
1061. SAI SERVICE PRIVATE LIMITED (2705-01), 50/1 15L, CHERANALLOOR ROAD EDAPPALLY, COCHIN - 682024
PH :9645106339.
1062. SAI SERVICE PRIVATE LIMITED (2705-02), NH-47, PATHADIPALAM,EDAPPALLY,COCHIN - 682024
PH :9645105057.
1063. POPULAR VEHICLES & SERVICES LTD. (2701-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018
PH :9846298618.
1064. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-09), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN, - 682030
PH :974598013.
1065. SAI SERVICE PRIVATE LIMITED (2705-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) - 682040
PH :8129496818.
1066. GEORGE MAJO AUTOMOBILES PVT. LTD. (2709-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104
PH :755997864, 4237700.
1067. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKUMBHAGAM, PUTHIYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301
PH :9745992070.
1068. GEORGE MAJO AUTOMOBILES PVT. LTD. (2709-02), PLOT NO 2/316, NH-47, MARADU VILLAGE, KANNIDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001
PH :7994763336.
- EDAPPAL**
1069. POPULAR VEHICLES & SERVICES LTD. (4702-05), KOZHUKKODA ROAD, KAVILPADY, EDAPPAL, MALAPURAM - 679582
PH :9946104680.
- EDAVANAPPARA**
1070. POPULAR VEHICLES (GKP1-01), SURVEY NO. 77/16-1 & 77/2-4, BUILDING NO.19/152-B, CHEEKODE VILLAGE,EDAVANAPPARA KONDOTTY ROAD, CHERUVAYOR PO, MALLAPPURAM DISTRICT, KERALA-673645 - 673645
PH :9539007323.
- FORT KOCHI**
1071. SAI SERVICE PRIVATE LIMITED (BRS1-01), PLOT NO.83/2, OPPOSITE TO KUMAR PETROL PUMP, STATION ROAD, CHULLIKAL POST, FORT KOCHI - 682005
PH :9645106330.
- GURUVAYUR**
1072. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUVYOR, THRISSUR - 680505
PH :9745998015.
- IRINJALAKUDA**
1073. BRD CAR WORLD LIMITED (A404-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670
PH :9539006999.
- IRITTY**
1074. INDUS MOTOR COMPANY PRIVATE LIMITED (R002-02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRITTY, KANNUR, KERALA - 670703
PH :9747554929.
- IRITY**
1075. POPULAR VEHICLE (VJ02-01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRITTY MUNICIPAL, KANNUR DIST. KERALA. - 670703
PH :7902473741.
- KAIAPAMANGALAM**
1076. SAI SERVICE PRIVATE LIMITED (2705-07), VAZHIYAMBALAM PO, KAIPAMANGALAM,THRISSURE - 680681
PH :9745996846.
- KALAMASSERY/ ERNAKULAM/ COCHIN**
1077. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106
PH :9745998012.
- KALLALBALAM**
1078. POPULAR (QZ02-01), BUILDING NO. 5/472, NH-47, KADUVAPPALLY, THOTTAKAD P.O., KALLALBALAM, TRIVANDRUM DIST., KERALA - 695605
PH :8086078788.
- KALPETA**
1079. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591
PH :9745998592.
1080. KVR (JE02-C1), BUILDING NOS. 363, 364, 365, 366,367,368 AND 369 CONSTRUCTED ON THE PLOT COMPRISED IN SURVEY NOS. 719/6, 722/3, 722/22, 722/6, 722/10, 722/21, SITUATED AT MUTTU, NORTH VILLAGE, VYTHIRI TALUK, KALPETA SUB-DISTRICT, WAYAND DISTRICT, KERALA. - 673 122
PH :9747021902.
- KANHAGAD**
1081. KVR CARS (3L01-02), ARANGADI, P.O. KANHAGAD, DIST. KASARGOD. - 671315
PH :9605040999.
1082. POPULAR VEHICLES & SERVICES LTD. (4702-06), HIGHWAY JUNCTION,KANHAGAD SOUTH P.O., KANHAGAD - 689641
PH :9946104685.
- KANHAGAD**
1083. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHAGAD, HOSADURGA TALUK, KASARGOD DISTT, KERALA. - 671541
PH :9745998024.
- KANJIRAPALLY**
1084. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O., KANJIRAPALLY - 686506
PH :9745998009.
1085. AVG MOTORS LTD. (Y903-01), NEW SURVEY NO. 17/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT, KERALA - 686512
PH :8606071155.
- KANNUR**
1086. HAR CARS (K101-01), HAR AVENUE, KANNOTHUMCHAL, CHOVVA POST, KANNUR - 670006
PH :9539009480.
1087. HAR CARS (K101-03), POTTIAN SHEKHARAN ROAD, MAKKANY , SOUTH BAZAR, KANNUR - 670002
PH :9539009443.
1088. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-0E), BALANKINAR JN., KATTAMPALLY,P.O, KANNUR - 690011
PH :9745998023.
1089. KVR CARS (3L01-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011
PH :9656034333.
1090. POPULAR VEHICLES & SERVICES LTD. (4702-0F), PLOT NO 82/6A, NEAR CHARAPPURAM SREEMUTHUAPPAN KAVU, KAPPAD ROAD, THAZHE CHOVVA (PO), KANNUR - 670018
PH :9846062795.
- KARIKKAD**
1091. BRD CAR WORLD LIMITED (A404-02), BRD INDUSTRIAL ESTATE,KARIKKAD, KUNNAMKULAM - 680519
PH :9995804599.
- KARUNAGAPALLY**
1092. SARATHY AUTO CARS (C701-05), K.S. PURAM,NEELIKULAM, KARUNAGAPPALLY,KOLLAM. - 690544
PH :9526691565.
1093. INDUS MOTOR COMPANY PRIVATE LIMITED (A003-01), SY.NO.243/1, 243/10, 243/16, 243/14, 243/15, 243/16, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583
PH :9745998006.
1094. SARATHY (C701-11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA. - 690 562
PH :9526691565.
- KASARGOD**
1095. KVR CARS (3L01-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123
PH :9747021206.
1096. POPULAR VEHICLES & SERVICES LTD. (4702-0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371
PH :9946104621.
1097. INDUS MOTOR COMPANY PRIVATE LIMITED (R002-03), 18/304A & 18/304B, SY. NO. 39/3B, RE SY. NO. 57/6.MOGRAL, MANJESHWAR TALUK, KASARAGOD, KERALA - 671541
PH :9747550747.
- KATTAPANA**

Dealer Network (AS ON 31.10.2023)

1098. INDUS MOTOR COMPANY PRIVATE LIMITED (ZN01-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.) - 685508
PH: .9746743460.
1099. POPULAR VEHICLES (ZN02-01), RE-SURVEY NO. 81/ VILLAGE & TOWN - KATTAPPANA, TALUK & DIST.-IDUKKI, KERALA. - 685 515
PH: .9746818407.
- KAYAMKULAM**
1100. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-05-), KARIYILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. - 690572
PH: .9745998005.
1101. POPULAR VEHICLES & SERVICES LTD. (B802-03-), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. - 690502
PH: .9946105601.
- KODUNGALLUR**
1102. SAI SERVICE PRIVATE LIMITED (2705-03-), NH-17,T.K.S.PURAM, KODUNGALLOR - 680667
PH: .9645105657.
1103. INDUS MOTOR COMPANY PRIVATE LIMITED (8K02-01-), RE-SURVEY NO. 116/1-, 116/2-, BUILDING NO. 560/A, WARD NO. VII, AALA VILLAGE, (OLD VILLAGE-SREENARAYANAPURAM). KODUNGALLUR TALUK, MADHILAKOM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA - 680 008
PH: .9747513444.
- KODUVALLY**
1104. AM MOTORS (BGX1-01-), SURVEY NO.91/9, 91/10,NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572
PH: .9895979023.
- KOLANCHERRY**
1105. SAI SERVICE (SJ01-01-), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERY TOWN, NH-85, AICARANU NORTH VILL., KUNNATHUNADU TALUK, ERNAKULAM DIST.., KERALA-682311 - 682311
PH: .7356605955.
- KOLLAM**
1106. SARATHY AUTO CARS (C701-01-), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017
PH: .9744552265.
1107. POPULAR VEHICLES & SERVICES LTD. (1601-04-), H & C COMPOUND, MUNDDACKAL, KOLLAM - 680006
PH: .7594977550.
1108. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-03-), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005
PH: .9745998004.
1109. SARATHY AUTO CARS (C701-13-), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AYATHIL, KILLIKKLOO PO, PUNTHALATHAZHAM-PALATHARA ROAD, KOLLAM - 691004
PH: .8606430765.
- KOLLAM/ QUIILON**
1110. SARATHY AUTO CARS (C701-08-), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, UMAPANALLUR SIDCO INDUSTRIAL ESTATE, KOLLAM. - 691589
PH: .9947127565.
1111. SARATHY AUTO CARS (C701-12-), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2 SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIYAM PO, KOLLAM DIST., KERALA. - 691571
PH: .9847936165.
- KONDOTTY**
1112. INDUS MOTOR COMPANY PRIVATE LIMITED (ID02-01-), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAKULAM TALUKA, MALAPURAM DISTRICT, KERALA - 683573
PH: .9746743178.
- KOOTHATTUKULAM**
1113. SAI SERVICE PRIVATE LIMITED (VM01-01-), EDAPUTHUSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. - 686662
PH: .9645106258.
- KOPPAM**
1114. AM MOTORS (CUU1-01-), SURVEY NOS: 331/3-6, 331/3-10, NEAR SALAFIYYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309
PH: .904866635.
- KOTHAMANGALAM**
1115. POPULAR VEHICLES & SERVICES LTD. (2701-08-), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA - 686691
PH: .9864027990.
1116. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-03-), PALAKKADAN BUILDING,CHANKLAM,KOTHAMANGALAM - 686691
PH: .9745998479.
- KOTTAKKAL**
1117. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-09-), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST. - 676503
PH: .9745998017.
- KOTTARAKARA**
1118. POPULAR VEHICLES & SERVICES LTD. (4702-03-), NH-17 ,CHANDAPARAMBU, ,RANBATHANI P.O, MALAPPURAM, KOTTAKAL - 676510
PH: .9946104631.
- KOTTARKKARA**
1119. POPULAR (S801-02-), BUILDING NO. MP/20749,20/426, 20/748, INCHAKADU, KALAYAPURAM VILLAGE, MYLON PANCHAYATH, KOTTARAKKARA TALUKA, KOLLAM DISTRICT, KERALA- 691560 - 691560
PH: .8086073466.
- KOTTARKKARA**
1120. POPULAR VEHICLES & SERVICES LTD. (S801-01-), MYLON, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA - 691531
PH: .8086073466.
1121. SARATHY AUTO CARS (S802-01-), WARD NO 40, MELLILLA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARAKKARA DISTT. KOLLAM (KERELA) - 691531
PH: .9847423365.
1122. INDUS MOTOR COMPANY PRIVATE LIMITED (S804-01-), RE SURVEY NO.20/73-2, KIZHAKKEKARA MURIYIL KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT. - 691531
PH: .9747562299.
1123. INDUS MOTOR COMPANY PRIVATE LIMITED (S804-02-), RE-SURVEY NO.141/34,142/1-2,15-16,143/1-2,143/2,143/15-2,143/15-2-2, BEARING NOS. 25/36 & 38, KOTTARAKKARA VILLAGE, KOTTARAKKARA TALUK, KOLLAM DISTRICT, KERALA- 691506 - 691506
PH: .9747562299.
- KOTTAYAM**
1124. AVG MOTORS LTD. (B801-01-), ERAYILKADAVU, KOTTAYAM - 686001
PH: .7510982222.
1125. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-04-), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM , KERALA - 686013
PH: .9745998148.
1126. POPULAR VEHICLES & SERVICES LTD. (B802-01-), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O, KOTTAYAM - 686006
PH: .8086073454.
1127. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0C-), MANIPUZHA, NATTAKOM P.O,KOTTAYAM - 686013
PH: .9745998007.
- KOZHENCHERRY**
1128. AVG MOTORS LTD. (W801-03-), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT- PATHANAMTHITTA. - 689641
PH: .9446092995.
- KUNNAMKULAM**
1129. POPULAR VEHICLES & SERVICES LTD. (2701-07-), CHOONDAL,TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502
PH: .9946105695.
- LAKKIDI PERUR**
1130. A M MOTORS (CER1-01-), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302
PH: .8086305555.
- MALAPURAM**
1131. A M MOTORS (E601-01-), VARANGODE, DOWNHILL, MALAPURAM, - 676519
PH: .9895705325.
- MALLAPPALLY**
1132. INDUS MOTOR COMPANY PRIVATE LIMITED (201-01-), THOPELLI COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERELA) - 689585
PH: .9747541400.
- MANATHAVADY**
1133. INDUS MOTOR COMPANY PRIVATE LIMITED (IE02-01-), SURVEY NO. 1/2A1, A1, B1, RY 1/210, 1/99, MYSORE ROAD, CHETTAPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA. - 670645
PH: .9745997002.
- MANJERI**
1134. AM MOTORS (E601-05-), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA - 676121
PH: .9895756035.
1135. KVR AUTOCARS PVT LTD (8V02-01-), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123
PH: .9747020801.
1136. POPULAR VEHICLES & SERVICES LTD. (4702-0E-), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERELA) - 676121
PH: .8589992406.
- MANNARKAD**
1137. A M MOTORS (E601-07-), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582
PH: .9895979048.
1138. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0K-), ANAKATTY ROAD, AANDIPPADAM, NELLIPUZHA-PO, MANNARKAD,KERALA - 678583
PH: .9745995946.
- Mavelikara**

1139. POPULAR VEHICLES & SERVICES LTD.
(B802-02), KONNAYI SIVAKU INDUSTRIAL
COMPLEX, SHED A-1, KOLLAKADAVU
INDUSTRIAL ESTATE, KOCHAL MOODU,
KALLIMEL P.O., Mavelikkara, KERALA -
690570
PH: .9745998338
1140. INDUS MOTOR COMPANY PRIVATE LIMITED
(1602-07-), NEAR PRATHIBA THEATRE,
PUTTHIYAKAVU, Mavelikkara - 690101
PH: .9745998137.
- Mavelikkara**
1141. POPULAR VEHICLES (B802-10), BUILDING NO.
10/115-A, WARD NO. 10, CHENNITHALA VILL.
AND TOWN, SHANTHIVANAM JUNCTION,
CHERUKOLE P.O., Mavelikkara TALUK,
Alappuzha DIST., KERALA- 690104. - 690104
PH: .9778690833.
- MORAYUR**
1142. A M MOTORS (CUJ1-01), SURVEY NO. 328/1,
VILLAGE - MORAYUR, VALENCHERY, DISTRICT
- MALAPPURAM, KERALA. - 673642
PH: .9806526666.
- Muvattupuzha**
1143. INDUS MOTOR COMPANY PRIVATE LIMITED
(7E01-01), NH-49, MUVTUPUZHA
KODAMANGALAM ROAD, NEAR R.K. HOSPITAL,
MUVTUPUZHA, ERNAKULAM DIST - 686661
PH: .9745999801.
1144. POPULAR VEHICLES & SERVICES LTD.
(2708-02), MUTHUKALLU
JUNCTION, PERUMPALLUR P.O.,
MUVTUPUZHA, KERALA - 686673
PH: .7356988640.
- NEDUMANGAD**
1145. POPULAR VEHICLES & SERVICES LTD.
(Z001-01), RE-SURVEY NO. - 855/29, 855/14/1
(OLD SURVEY NO. 1583/1), KARPUR VILLAGE,
NEDUMANGAD TALUK, TRIVANDRUM
DIST.-KERALA-695541. - 695541
PH: .9846036696.
- NEYYANTINKARA**
1146. INDUS MOTOR COMPANY PRIVATE LIMITED
(A701-01), INDUS MOTOR CO. PVT. LTD., OLD
M.V. THEATRE, NEAR KSRTC BUS STATION,
NEYYATTINKARA, DIST. TRIVANDRUM - 695121
PH: .9747544500.
- NEYYATTINKARA**
1147. POPULAR VEHICLES (1601-15), BUILDING NO.
11/562, KP-IX-843, NH 47, KOTTAMOM ,
KOLLAYIL PANCHAYAT, PANVEL - KOCHI -
KANYAKUMARI HIGHWAY, KOTTAMOM,
NEYYATTINKARA, TRIVANDRUM, KERALA-
695122. - 695122
PH: .9946104602.
- NILAMBUR**
1148. INDUS MOTOR COMPANY PRIVATE LIMITED
(4701-0A-), MINERVA JUNCTION, NILAMBUR ,
KERALA - 679329
PH: .9745998396.
1149. INDUS MOTOR COMPANY PRIVATE LIMITED
(4701-0D-), MANAVEDHAM HIGH SCHOOL
ROAD, CHANDAKUNNU - NILAMBUR PO,
NILAMBUR, MALAPPURAM DIST. - 679329
PH: .9745998396.
1150. POPULAR VEHICLES & SERVICES (AF02-01),
RE-SURVEY NO: 6/1 BLOCK NO. 76,
CHEMMARAN, NADUVATH PO, WANDOOR
ROAD,NILAMBUR, MALAPPURAM DIST.,
KERALA - 679328
PH: .7376094999.
- NILAMEL**
1151. INDUS MOTOR COMPANY PRIVATE LIMITED
(DA02-01-), SURVEY NO. 195/10, 195/3-1,2,
195/3-2,1, 195/8, 195/14, 195/9-1, 195/11-1,
BLOCK NO. 32, ATTINGAL MUNICIPAL,
PAZHAYAKUNNAMEL VILLAGE, CHIRAYINKIL
TALUK, (BORDER OF NILAMEL TOWN),
TRIVANDRUM DIST., KERALA - 695601
PH: .9745998331.
1152. POPULAR (DA03-01), BUILDING NO. 10/279 TO
288, M. C. ROAD, KANNANCUDU, NILAMEL PO,
KOLLAM (DIST.), KERALA- 691535 - 691535
PH: .8714606483.
- OTTAPALAM**
1153. INDUS MOTOR COMPANY PRIVATE LIMITED
(PA01-01-), BUILDING NO.23/667, 23/669,
PALAKKAD-OTTAPPALAM ROAD, OTTAPPALAM
VILLAGE, OTTAPPALAM TALUK, PALAKKAD
DIST., KERALA - 679101
PH: .9747544454.
- PALAI**
1154. POPULAR VEHICLES & SERVICES LTD.
(B802-04-), 12TH MILE,PALA-PONKUNNAM
ROAD,PALA - 686575
PH: .9072609475.
1155. INDUS MOTOR COMPANY PRIVATE LIMITED
(7E01-05-), OPP. ALPHONA COLLAGE
ARUNAPURAM(PO), PALA, KOTTAYAM - 686574
PH: .9745998878.
1156. AVG MOTORS LTD. (GN03-01), SURVEY
NO.670/1, BLOCK-21, LALAM VILLAGE,
ANTHINADU MEENANCHIL, PALA, KOTTAYAM
DIST. - 686651
PH: .9447137246.
1157. INDUS MOTOR COMPANY PRIVATE LIMITED
(7E01-07-), SURVEY NO. 176, BLOCK NO. 16,
HIGHWAY JUNCTION, ETTUMANOOR-POOJAR
HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM
DISTRICT - 686584
PH: .9747516934.
- PALAKKAD**
1158. POPULAR VEHICLES & SERVICES LTD.
(2701-09-), OPP. PALANA
HOSPITAL,KODUVAYOOR ROAD,KINASSERY
P.O.,PALAKKAD - 678707
PH: .9946105613.
1159. INDUS MOTOR COMPANY PRIVATE LIMITED
(2702-0G-), VADAKKUMURI-NH-47, KANNADI,
KUZHALMAMMAM (P.O.), PALAKKAD. - 678701
PH: .9745998590.
1160. INDUS MOTOR COMPANY PRIVATE LIMITED
(Y202-01-), DOOR NO: 5/366 & 367, NH 47,
KOOTUPATHA, CHANDRANAGAR POST,
PALAKKAD - 678007
PH: .9747519500.
- PANDIKKAD**
1161. AM MOTORS (CUV1-01-), SURVEY NOS: 333/2-2,
333/3-2,CHOORAKAVU, PERINTHALMANNA
ROAD, NEAR INDIAN OIL PETROL PUMP,
PANDIKKAD TOWN & POST, MALAPPURAM
DISTRICT, KERALA - 676 521
PH: .9533999570.
- PARAPPANANGADI**
1162. A M MOTORS (CTK1-01-), SURVEY NO.66/6,
66/7, KODAPPADI, POST-CHETTIPADDY,
PARAPPANGADI, MALAPPURAM. - 676319
PH: .9895900466.
- PARAVUR**
1163. POPULAR VEHICLES & SERVICES LTD.
(ZS01-01-), SURVEY NO. 340/1-76,77,78, NEAR
HP PETROL PUMP, PARAVUR-MANJALI MAIN
ROAD, MANNAM PO, NORTH PARAVUR
MUNICIPAL, ERNAKULAM DIST. 683520,
KERALA. - 683520
PH: .9072609638.
- PATHANAMTHITTA**
1164. AVG MOTORS LTD. (W801-02-), JUNNUGAPADY,
MYLAPRA ROAD, PATHANAMTHITTA. - 686971
PH: .9446002987.
1165. INDUS MOTOR COMPANY PRIVATE LIMITED
(1602-13-), KUMBAZHA, PATHANAMTHITTA -
689653
PH: .9745998008.
1166. POPULAR VEHICLES & SERVICES LTD.
(B802-05-), T.K. ROAD, NEAR
COLLECTORATE,PATHANAMTHITTA - 686945
PH: .9539009734.
1167. INDUS MOTOR COMPANY PRIVATE LIMITED
(1602-12-), SURVEY NO. 11-13/12(1),
KARIMPANKUZHY ROAD, NEAR SAROJ GAS
AGENCY, MAKKANKUNNU, PATHANAMTHITTA,
KERALA. - 686945
PH: .9745998858.
- PATHIRAPALLY**
1168. POPULAR VEHICLES & SERVICES LTD
(E502-02-), BUILDING NO. X/832 TO 834, X/837
TO 838, OPP. UDAYA STUDIO, PATHIRAPALLY
TOWN, AMBALAPUZA TALUK, NH-47,
ALAPUZA DIST., KERALA-688521. - 688521
PH: .9778698169.
- PATTAMBI**
1169. A M MOTORS (E601-04-), SHORANUR ROAD,
PATTAMBI, DISTRICT-PALAKKAD. - 679306
PH: .9567866059.
1170. INDUS MOTOR COMPANY PRIVATE LIMITED
(2702-08-), PERINTHALMANNA ROAD,
THEKKUMURI, PATTAMBI - 679303
PH: .9745998295.
1171. A M MOTORS (E601-09-), CHERPULASSERY
ROAD, KOOMBAN KALLU, KARIMPULLI, MELE
PATTAMBI POST, PALAKKAD DISTT., KERALA. -
679306
PH: .9567866059.
- PAYANUR**
1172. POPULAR VEHICLES & SERVICES LTD.
(4702-04-), N H 17,EZHILODE P O.,PAYANUR -
670309
PH: .9946104701.
1173. POPULAR VEHICLES & SERVICES LTD.
(9201-01-), SY. NO. 218/1, CHERUTHAZHAM
VILLAGE, EZHILODE (NEAR, COLONY BUS
STOP), PAYANUR-KANNUR NH, PAYANUR
TALUK, KANNUR DISTRICT, KERALA - 670 309.
PH: .9946104701.
- PAYYANUR**
1174. INDUS MOTOR COMPANY PVT. LTD. (Z02-01-),
SURVEY NO.-289/117, 290/105, KARIVELLUR
PERALAM GRAM PANCHAYAT (NEAR
PALATHARA BRIDGE), PAYYANUR TALUK,
KANNUR DISTRICT, KERALA- PIN-670521. -
670521
PH: .9745998204.
- PERINTHALMANNA**
1175. A M MOTORS (E601-03-), NEAR FIRE STATION,
HOSPITAL ROAD, PERINTHALMANNA - 679322
PH: .8129818235.
1176. KVR AUTOCARS PVT LTD (7H01-01-), SURVEY
NO. 8/7B-15, CALICUT ROAD, NEAR ITC,
THRIRUKKUDI, PERINTHALMANNA - 679351
PH: .9747020573.
1177. KVR AUTOCARS PVT LTD (7H01-06-), OOTY
ROAD, PERINTHALMANNA, MALAPPURAM(DT.),
KERALA - 679322
PH: .9747020837.
- PERUMBAVOOR**
1178. SAI SERVICE PRIVATE LIMITED (2705-04-),
M.C.ROAD,PERUMBAVOOR,ERNAKULAM
DIST.,KERALA - 683542
PH: .7034258335.

Dealer Network (AS ON 31.10.2023)

1179. INDUS MOTOR COMPANY PRIVATE LIMITED (8W03-1), SURVEY NO. 722/2-3, 723/3, TALUK - KUNNATHUNADU, VILLAGE - RAYAMANGALAM, SUB DIST.-PERUMBAVOOR, DIST.ERNAKULAM. - 683 541
PH: 9747591803.

PIROVAM

1180. SAI SERVICE (BQW1-01), SUVEY NO. 788/122-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN & MUNICIPALITY, MUVTAPPUZHA TALUK, ERNAKULAM DIST., KERALA - 686 664
PH: 9645106198.

POINACHI

1181. KVR CARS (3L01-03), CHOWKI, MAILATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319
PH: 9747021026.

PUNALUR

1182. SARATH AUTO CARS (C701-03), NH-208, Q.S. ROAD ELAMPAL POST,PUNALUR, KOLLAM DIST - 691322
PH: 9744400265.
1183. INDUS MOTOR COMPANY PRIVATE LIMITED (8002-01), SY. NO. 48/1/42, OLD, SY. NO. 231A/3324, OLD RAMRAJ TILES FACTORY, THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD. - 691 305
PH: 9747638885.

QUILANDY

1184. INDUS MOTOR COMPANY PRIVATE LIMITED (3001-01), BUILDING NO.13/5 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306
PH: 9745997875.

RAMANATTUKKARA

1185. A M MOTORS (E601-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKKARA. - 673632
PH: 9567866144.

RANNI

1186. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677
PH: 9745998737.

SASTHAMKOTTAH

1187. INDUS MOTOR COMPANY PRIVATE LIMITED (1802-09), NO. SP IX/661, 662, 663, KADUPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM - , KERALA - 690520
PH: 9745998849.

SHORNUR

1188. POPULAR VEHICLES & SERVICES LTD. (2701-04), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124
PH: 8589992432.

SULTHAN BATHERY

1189. POPULAR VEHICLES (VK01-01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA. - 673 591
PH: .759497551.

TALIPARAMBA

1190. HAR CARS (K101-02), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141
PH: 9539009473.

THALASSERY

1191. INDUS MOTOR COMPANY PRIVATE LIMITED (R002-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105
PH: 9745998022.

THALASSERY / TELLICHERRY

1192. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY , KERALA - 670102
PH: 9747520100.

THALAYOLAPARAMBU

1193. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-04), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605
PH: 9746743903.

THAMARASSERY

1194. INDUS MOTOR COMPANY PRIVATE LIMITED (PB06-01), RE-SY. NO. 44/5A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMARASSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. - 673573
PH: 974753362.

1195. POPULAR (PB07-10), SURVEY NO.43/4 BLOCK NO:005 . RAROTH VILLAGE , THAMARASSERY TALUK , KOZHIKODE DISTRICT, KERALA - 673573
PH: 9846397060.

THIRUVALLA

1196. AVG MOTORS LTD. (Y501-01), M.C ROAD, PERUMTHRUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107
PH: 9446323999.

1197. POPULAR VEHICLES & SERVICE (B802-06), KAVUMBAGHAM P.O, THIRUVALLA, PATHANAMTHITTA (DIST), KERALA - 689103
PH: 8086073489.

THODUPUZHA

1198. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-04), PALA ROAD, THODUPUZHA - 685584
PH: 9745998631.

1199. POPULAR VEHICLES & SERVICES LTD. (H202-01), SY.NO.124/7A-1, 124/7A-2, THODUPUZHA EHLOR MAIN ROAD, VILLAGE & TOWN, THODUPUZHA, DISTT. IDUKI - 685585
PH: .9072530120.

THRISSUR

1200. POPULAR VEHICLES & SERVICES LTD. (2701-04), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655
PH: 6282306495.

1201. SAI SERVICE PRIVATE LIMITED (2705-06), 17/30.POOTHOLE,THRISSUR,KERALA - 680004
PH: 9645105051.

1202. BRD CAR WORLD LIMITED (A404-01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031
PH: .9995807141.

1203. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-0D), JYOTHI COMPLEX, GURUVAYOR ROAD, WEST FORT, THRISSUR - 680004
PH: 9745998014.

1204. BRD CAR WORLD LIMITED (A404-07), GURUVAYOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002
PH: 9746476529.

THRITHALLUR

1205. BRD CAR WORLD LIMITED (A404-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619
PH: 9539197888.

TIRUR

1206. A M MOTORS (E601-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101
PH: 9995879706.

1207. KVR AUTOCARS PVT LTD (7H01-05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307
PH: 9747020673.

1208. A M MOTORS (E601-08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103
PH: 9995705323.

1209. INDUS MOTOR COMPANY PRIVATE LIMITED (Y403-01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PVT. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA. - 676105
PH: 9747518883.

TRIPPUNITHURA, COCHIN

1210. SAI SERVICE PRIVATE LIMITED (2705-05), HILL PALACE ROAD,KARINGACHIRA,COCHIN - 682301
PH: 9645105067.

TRIPRAYAR

1211. POPULAR VEHICLES & SERVICES LTD. (2701-08), SURVEY NO. 296/5,8, 296/9, 296/9-1, NATTIKA VILLAGE, NEAR CIVIL STATION, POLY JUNCTION, TRIPRAYAR TOWN, THRISSUR TALUK & DISTRICT, KERALA-680566 - 680566
PH: .9846699245.

TRIVANDRUM

1212. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM - 695014
PH: 9745998001.

1213. POPULAR VEHICLES & SERVICES LTD. (1601-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002
PH: 9946104601.

1214. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-02), NH BYE PASS ROAD, VEMPALAVATTOM, TRIVANDRUM - 695029
PH: 9745998003.

1215. SARATHY AUTO DRIVES PVT LTD (1607-02), KOVALAM BYEPASS,SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009
PH: 9947270665.

1216. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, - , 695011
PH: 9745998002.

1217. POPULAR VEHICLES & SERVICES LTD. (1601-05), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPALAM,TRIVANDRUM - 695002
PH: 9846288610.

1218. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-11), SURVEY NO.3,TC-7/11069(9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM - 695030
PH: 9747508823.

1219. SOUTH PARK MOTORS PVT. LTD. (1604-01), SURVEY NO: 985/3-4-5-6, VILLAGE - KADAKAMPALLY, CHACKAI BYPASS, TALUKA - TRIVANDRUM, TRIVANDRUM, KERALA - 695029
PH: .9526100008.

1220. SARATHY AUTO DRIVES PVT LTD (1607-03), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT- THIRUVANANTHPURAM, KERALA. - 695019
PH: 9961665965.

1221. POPULAR VEHICLES (1601-12), RE-SURVEY NO. 26/4-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA. - 695 015
PH: 9846498605.

1222. POPULAR VEHICLES (1601-17), BUILDING NO. 13/632-A, 633,633-A1,633-A2,634-636, 6TH MILE STONE, VAZHAYILA PO, PEROORKADA, THIRUVANANTHAPURAM, KERALA - 695521 - 695521
PH : 9288023313.
1223. SARATH AUTODRIVES PVT LTD (1607-01), SURVEY NO. 2448/4, VILL. MUTTATHARA, NH BYE PASS ROAD, KALLUMOOD JN., VALLAKADU PO, ENCHAKKAL, THIRUVANANTHAPURAM, KERALA-695008 - 695008
PH : 9562416665.

TRIVANDRUM-MANANTHALA

1224. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-01), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANANTHALA M C ROAD, VATTAPPARA PO, MANANTHALA,TRIVANDRUM - 695028 PH : 9747540100.

UPPALA

1225. POPULAR VEHICLES & SERVICES LTD. (4702-0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH : 8086078864.
1226. KVR CARS (402-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH : 9526021876.

VADAKARA

1227. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104 PH : 974598021.
1228. POPULAR VEHICLES AND SERVICES (8S02-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH : 8943345935.

VALENCHARRY

1229. A MOTORS (CUK1-01), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. - 676552 PH : 9745986666.

VETTICHARY

1230. KVR AUTOCARS PVT LTD (7H01-03), AP IV, 75A TO G, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHARY, - 676552 PH : 9747020023.

WADAKKANCHERY

1231. BRD CAR WORLD LIMITED (A404-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH : 9567869403.

KERLA**EDAKKARA**

1232. KVR (GMN1-01), SURVEY NO. 1087/1C-91, VAZHAKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679 331 PH : 9747020777.

LEH

1233. DRUK AUTOZONE (9S02-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH - 194101 PH : 8082800205.

LADAKH**AGAR**

1234. UNITARA MOTORS (BJT2-01), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669 PH : 9575605883.

ALIRAJPUR

1235. RUKMANI MOTORS PVT. LTD. (GLY1-01), WARD NO. 1, JHBABA ROAD, ALIRAJPUR, MADHYA PRADESH, MP - 457887 PH : 8889676035.

ANUPPUR

1236. SHUBH MOTORS PVT. LTD. (BIB1-01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224 PH : 9752546255, 9755051545.

ASHOK NAGAR

1237. PREM MOTORS PVT. LTD. (DS01-02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH : 9926809856.

ASHTA

1238. JEEWAN MOTORS PVT. LTD. (BSF1-01), KHASRA NO.11/1 NEAR RELIANCE PETROL PUMP RHPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001 PH : 9826429604 6264918307 8718911222.

BADNAWAR

1239. PATEL MOTORS (INDORE) PVT. LTD. (BPT1-01), KHASRA NO. 219/4, BADNAGAR ROAD, BADI CHOPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH. - 454660 PH : 979653543.

BADWAH / BARWAHA (BOTH NAMES ARE OK)

1240. NIMAR MOTORS PVT. LTD. (AU01-05), NIRMAL COMPLEX , INDORE ROAD , BARWAH - 451001 PH : 7770878726, 9669569496.

BALAGHAT

1241. KUNAL MOTORS (U501-04), KH NO.-1/56, JHULELAL DHARMSHALA ROAD, BALAGHAT, MADHYA PRADESH - 4811001 PH : 83499992181.

BARELI

1242. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (I03-01), SURVEY 423/2, VILLAGE KAMTON, NH 12, BARELI, RAISEN, MADHYA PRADESH. - 464668 PH : 7909093922.

BARIHI

1243. SHUBH MOTORS PVT. LTD. (GMK1-01), 1286/2, BARIHI, DIST. - KATNI, MADHYA PRADESH - 483770 PH : 9752546255.

BARNAGAR

1244. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (BBK2-01), RUNJA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN - 456771 PH : 9755512100/7898900224.

BARWANI

1245. NIMAR MOTORS PVT. LTD. (AU01-02), ANJAD ROAD, VILLAGE -KARABI, BARWANI, MADHYA PRADESH - 451551 PH : 7770804492, 9669569496.

BEGAMGANJ

1246. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CIL1-01), IN FRONT OF DUSHERRA MAIDAN, SAGAR BHOPAL ROAD, BEGAMGANJ, DIST - RAISEN , MADHYA PRADESH - 464881 - 464881 PH : 9755997536.

BEOHARI

1247. SHUBH MOTORS PVT. LTD. (BKA1-01), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST. -SHAHDOL, MADHYA PRADESH. - 484774 PH : 9755959423.

BERASIA

1248. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CKG1-01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT - BHOPAL, MADHYA PRADESH. - 463106 PH : 8770593501.

BETMA

1249. OCEAN MOTORS PVT. LTD. (BVR1-01), OPPOSITE MPEB OFFICE, INDORE-EMHABEDAD ROAD, BETMA, DISTRICT - INDORE, MADHYA PRADESH . - 453001 PH : 7389936444.

BETUL

1250. KUNAL MOTORS (U501-02), BHOPAL - NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK., BETUL - 460001 PH : 8349999177.

1251. KAMTHI MOTORS (KK02-01), NEAR SUNITA COLONY, ITARSI ROAD, BETUL, MADHYA PRADESH - 4600013 - 4600013 PH : 9111535777.

BHAVRA

1252. RUKMANI MOTORS (SPT1-01), GRAM PANCHAYAT, KALIYAVAH, OPP SUNKER MANDIR, BHAVRA TEHSIL, ALRAJPUR DISTRICT, MADHYA PRADESH - 457882. - 457882 PH : 9755549200.

BHITARWAR

1253. NIKUNI MOTORS (SRB1-01), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, DABRA-BHITARWAR ROAD, BHITARWAR, MP - 474009 - 474009 PH : 9109105599.

BHOPAL

1254. JEEWAN MOTORS PVT. LTD. (302-01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024 PH : 405888/ 98260171799 9826429605.

1255. SATYAM MOTORS (307-01), NH-12, SUVEESA NAGAR,HOSHANGABAD ROAD,MISROAD - 462040 PH : 6261900423.

1256. JEEWAN MOTORS PVT. LTD. (302-04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH,CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036 PH : 4057988 9131364153.

1257. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (308-01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023 PH : 4063529,30,31,32,33,34,35, 9926516501.

1258. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (309-01), 4/1, DAGA HEIGHTS, NEAR BUDHNA MANDIR, MAIN ROAD KOLAR ROAD, CHUNABHATTI, BHOPAL, MADHYA PRADESH. - 462016 PH : 10109900400.

BIAORA

1259. UNITARA (0F02-01), OLD AB ROAD, KACHINARIA, BIAORA (M.P.) - 465674 PH : 9575650883.

BIJURI

Dealer Network (AS ON 31.10.2023)

1260. SHUBH MOTORS (SMJ1-01), GRAM - NEAR GENTRI GATE, NAGAR PALIKA PARISHAD BIJURI, DISTRICT - ANUPPUR, MADHYA PRADESH - 484116 PH : 9755580253.
- BINA**
1261. ADINATH CARS PRIVATE LIMITED (BHQ2-01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT - SAGAR, MADHYA PRADESH - 470113 PH : 9009780047.
- BURHANPUR**
1262. NIMAR MOTORS PVT. LTD. (BRR1-01), KHASRA NO. 654/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP. PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH - 450331 PH : 7694011374, 9669569496.
- CHAKGHAT**
1263. CITY CARS (UNIT OF AGARWAL WHEELS) (KGK1-01), GRAM AND POST - CHANDAI, CHAKGHAT, TEHSIL - TEONTHER, PRAGRAJ ROAD, NH 27, DIST - REWA, MP - 486226.. - 486226 PH : 9754301199, 7354252525.
- CHATTARPUR**
1264. ADINATH CARS PRIVATE LIMITED (BB02-01), MAHOBIA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGR - 471001 PH : 9009785577.
- CHHANERA**
1265. NIMAR MOTORS (SMX1-01), NEAR ST. STEPHEN SCHOOL, HARDA ROAD, CHHANERA (HARSUD), PIN-450001, MADHYA PRADESH - 450001 PH : 9669569504.
- CHHINDWARA**
1266. KUNAL MOTORS (U501-03), OPP. KUNAL MOTORS SHOWROOM, LAL BAGH TIRAHABEHIND TRUE VALUE OUTLET, NASIRABAD ROAD, CHHINDWARA(MP) - 480001 PH : 9981852239.
1267. KUNAL MOTORS (U501-06), PLOT NO. 546, LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002 PH : 9981852239.
1268. KAMTHI MOTORS LLP (U502-01), KHASRA NO.1/53, BESIDE MVM SCHOOL, NAGPUR ROAD, VILL.-SARRA, DISTT. CHHINDWARA, MADHYA PRADESH - 480001 PH : 9111488444/ 9111535777.
- CHITRAKOOT**
1269. CITY CARS (UNIT OF AGARWAL WHEELS) (GKS1-01), PILIKOTHI CHOURAHA, BESIDE SINGH AUTOMOBILE - A HERO AGENCY, CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA (MADHYA PRADESH)- 485334 - 485334 PH : 7089906823, 7354252525.
- DABRA**
1270. PREM MOTORS PVT. LTD. (BOR1-01), PICHHIRORE TIRAH, GWALIOR JHANSI ROAD, DABRA, DIST - GWALIOR - 475110 PH : 9926809110.
- DAHOM**
1271. ADINATH CARS PRIVATE LIMITED (RD02-01), SAGAR JABALPUR BYPASS ROAD, DAHOM (M.P.) - 470661 PH : 9009780035.
- DATIA**
1272. PREM MOTORS PVT. LTD. (3003-05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661 PH : 9165012280.
- DEORI**
1273. ADINATH CARS PRIVATE LIMITED (CUO1-01), C/O VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE, NEAR GOVT. HIGH SCHOOL, NARSINGHPUR ROAD, VILLAGE KHEER, DEORI DISTT. SAGR (M.P.) - 470226 PH : 7000410522.
- DEPALPUR**
1274. OCEAN MOTORS PVT. LTD. (WB01-03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,INDST.INDORE-MP - 453115 PH : 220505, 222501.
- DEWAS**
1275. UNITARA MOTORS PVT LTD (3Q02-01), SURVEY NO 255, A,B, ROAD, RASULPUR SQUARE, DEWAS, MADHYA PRADESH PIN 455001 - 455001 PH : 9575650883.
- DHAMNOD**
1276. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (UT01-01), KHASRA NO. 484/1/2, OLD A B ROAD, OPPOSITE HP PETROL PUMP, DHAMNOD, DIST -DHAR, MADHYA PRADESH. - 454552 PH : 9981585165.
- DHAR**
1277. RUKMANI MOTORS (P) LTD (5304-02), 41/ MAGAJUPURA,DHAR.. - 454001 PH : 0731-223500, 9755549200.
- DINDORI**
1278. STANDARD MOTOCORP PVT LTD (AVA2-01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP,DINDORI - 481661 PH : 280030, 7771014728 9111248709.
- FALI**
1279. OCEAN MOTORS (SGH1-01), NH 47, NEAR GRAM - FALI, TEHSIL KHUDEL, INDORE, MADHYA PRADESH. - 452016 PH : 7389936477.
- GADARWARA**
1280. STANDARD MOTOCORP PVT LTD (BOI3-01), KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119, GADARWARA, DISTRICT – NARSINGHPUR. - 487551 PH : 8319784336.
- GANDHWANI**
1281. RANA MOTORS (SIO1-01), MUKATI COMPLEX, BAGH AWALDA MAAN ROAD, TEHSIL- GANDHWANI, DIST - DHAR, MADHYA PRADESH - 454446 - 454446 PH : 9109975566.
- GANJ BASODA**
1282. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AE2-01), LAL BAGH, BARETH ROAD, GANJ BASODA, VIDISHA, 464221. - 464221 PH : 9425148584.
- GARRA**
1283. KAMTHI MOTORS LLP (GJC1-01), LABARRA ROAD, GARRA INDUSTRIAL AREA, GARRA, BALAGHAT, MADHYA PRADESH. - 481331 PH : 7723020684.
- GAUTAMPURA**
1284. OCEAN MOTORS PVT. LTD. (CFW1-01), RUNJI CHOURAHA, GAUTAMPURA, TEHSIL - DEPALPUR, DISTT. -INDORE, MADHYA PRADESH. - 453220 PH : 230501, 7389937314.
- GHATIYA**
1285. YUG CARS (SJW1-01), NEAR JAGOTI SQUARE, UJJAIN - AGAR ROAD, GHATIYA, MP - 456550 - 456550 PH : 9425067979.
- GOTEGAON**
1286. STANDARD MOTOCORP PVT LTD (BLY2-01), JABALPUR ROAD, OPP. NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR. - 443 001 PH : 7771003774.
- GUNA**
1287. PREM MOTORS PVT. LTD. (S301-01), OPP R.T.O.,A.B. ROAD,GUNA. - 473001 PH : 268015.
- GWALIOR**
1288. PREM MOTORS PVT. LTD. (3003-01), M. L. B. ROAD, GWALIOR., - 474002 PH : 9926809803.
1289. PREM MOTORS PVT. LTD. (3005-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH : 9926809803.
1290. NIKUNJ MOTORS (3006-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 PH : 9407067974.
- HALALPUR - BHOPAL**
1291. DAGA MOTORS (309-02), KHASRA NO. 80/1/K, VILLAGE - HALALPURA, TEHSIL - HIZUR, DISTRICT - BHOPAL, MADHYA PRADESH. - 462030 PH : 9109900365.
- HANSA KHEDI**
1292. KATHED MOTOCORP (SGI1-01), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GANJ), TEHSIL -SANWER, DISTRICT -INDORE, MADHYA PRADESH. - 453551 PH : 9479952490.
- HARDA**
1293. INFINITY CARS (A UNIT OF FOUDZAR CARS PVT. LTD) (KM01-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331 PH : 8889284444, 8889282222.
- HATOD**
1294. OCEAN MOTORS PVT. LTD. (BVT1-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111 PH : 7389936477.
- HATTA**
1295. ADHINATH MOTORS (SKK1-01), NEAR NAVODAYA SCHOOL, DAMOH ROAD, HATTA, DISTT. DAMOH (M.P.) - 470775. - 470775 PH : 9009785562.
- HOSHANGABAD**
1296. INFINITY CARS (A UNIT OF FOUDZAR CARS PVT. LTD) (KM01-01), 185, RAMJBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001 PH : 8889282222.
- ICHHAWAR**
1297. RAJURUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (C1K1-01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT - SEHORE, MADHYA PRADESH. - 466115 PH : 9399061645/ 9926516501.
- INDERGARGH**
1298. PREM MOTORS (SPU1-01), NEAR KHERAPATI GARDEN, INDERGARGH, MP - 475675. - 475675 PH : 9926809818.

INDORE

1299. PATEL MOTORS (INDORE) PVT. LTD. (5303-01), 428/3/NIRANJANPUR,A B ROAD,INDORE - 452010 PH :99777-03609/99777-03512.
1300. RUKMANI MOTORS (P) LTD (5304-01), 2-3,A.B. ROAD,INDORE - 452001 PH :99071-57890/90390-88702.
1301. PATEL MOTORS (INDORE) PVT. LTD. (5303-02), 176/1,PIPLYA RAU A.B. ROAD, INDORE - 452017 PH :99777-03512/99777-03260.
1302. RUKMANI MOTORS (P) LTD (5304-03), NO.-4/5, MONARAMA GANJ, INDORE - 452001 PH :99071-57890/90390-88702.
1303. OCEAN MOTORS PVT. LTD. (5306-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001 PH :6627500, 6627505.
1304. OCEAN MOTORS PVT. LTD. (5306-02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017 PH :6617505,2877505.
1305. PATEL MOTORS (INDORE) PVT. LTD. (5303-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006 PH :7314293919.
1306. OCEAN MOTORS PVT. LTD. (5306-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAJESHWARI EXTENSION, PIPLIYAHANA, INDORE - 452001 PH :9685333331,7389936451.
1307. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (5307-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002 PH :7471111132.
1308. RANA MOTORS (5308-01), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009 PH :9109975566.
1309. PATEL MOTORS (INDORE) PVT. LTD. (5303-05), SURVEY NO. 174/5 AND 174/6, PIPLYA RAO, INDORE, MADHYA PRADESH. - 452012 PH :99777-03512/99777-03260.
1310. RUKMANI MOTORS (P) LTD (5304-04), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 15/1, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. - 452010 PH :99071-57890/90390-88702.
1311. OCEAN MOTORS PVT. LTD. (5306-04), PLOT NO. 142 AND 151, SCHEME NO. 97, PART-4, COMMERCIAL MANDI, NEAR CAT SQUARE, INDORE. - 452012 PH :7389936405.

1312. KTL AUTOMOBILES (5309-C1-), PLOT NO.5/RC, SCHEME NO 134,MR 10,VILLAGE KHAJURANA, DIST INDORE - 452010,MADHYA PRADESH - 452010 PH :6263455999.
1313. RUKMANI MOTORS (P) LTD-C4 (5304-05-), 109, BHAWRASI A NEAR PRATAP AUTO, FRONT OF VINAYAK TOL KANTE, SANWER ROAD, INDORE, PIN-453111, MADHYA PRADESH - 453111 PH :9109978301.

JABALPUR

1314. STANDARD MOTOCORP PVT LTD (5405-01-), OPPOSITE ALLAHABAD BANK DELITE TALKIES ROAD,CIVIL LINES, JABALPUR - 482001 PH :4040405 / 4040406 07771003012 / 07771003374.
1315. SHUBH MOTORS (5403-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYA PRADESH - 482001 PH :9755545450.
1316. STANDARD MOTOCORP PVT LTD (5405-02-), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002 PH :4038001 9301190205 7771006920.
1317. SHUBH MOTORS PVT LTD (5403-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAH, JABALPUR, MADHYA PRADESH - 482002 PH :9755595496.
1318. STANDARD MOTOCORP PVT LTD (5405-03-), CHIMNEY PLOT, MADAN MAHAL, NEAR GUILZAR HOTEL, JABALPUR - 482001 PH :9303568517 9300008708.
1319. MAA GAYTRI (AGGARWAL) (5404-01-), MOUZA KARMETA N.H. 497, P.H. NO 23/2, KHASRA NO. 497 & DIV. KHASRA NO. 484/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. - 482002 PH :7489901021.
1320. STANDARD MOTOCORP PVT LTD (5405-04-), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. - 482003 PH :7800806222 9303568517.
1321. PATEL MOTORS (INDORE) PVT. LTD. (P801-04-), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226 PH :243399, 7089901505, 9926932221.

JAORA

1322. PATEL MOTORS (INDORE) PVT. LTD. (AAR-01-), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JAHBUA ,MADHYA PRADESH. - 457661 PH :9826634449.

JOBAT

1323. RUKMANI MOTORS (SOA1-01), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP - 457990. - 457990 PH :6262505181.

KARERA

1324. PREM MOTORS (SMO1-01), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660. - 473660 PH :9926823596.

KATNI

1325. SHUBH MOTORS PVT LTD (FK01-01-), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501 PH :9755515839.

KHANDWA

1326. NIMAR MOTORS PVT. LTD. (AU01-03-), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001 PH :9575105697, 9669569496.

KHARGONE

1327. NIMAR MOTORS PVT. LTD. (AU01-01-), JETAPUR,SANAWAD ROAD,KHARGONE, - 462026 PH :9669569504, 9669569496.
1328. NIMAR MOTORS PVT. LTD. (AU01-06-), PH. NO. 35, VILLAGE - DANAPUR, TEHSIL - KHARGONE, DISTRICT - KHARGONE, MADHYA PRADESH. - 451001 PH :769411436, 9669569496.

KHATEGAON

1329. UNITARA (BXB2-01-), NEMAWAR-INDORE ROAD, KHATEGAON, M.P. - 455336 - 455336 PH :9993406993.

KOTMA

1330. SHUBH MOTORS (D001-01-), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336 PH :9755581441.

KUKSHI

1331. OCEAN MOTORS PVT. LTD. (B101-01-), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331 PH :9009780030, 7389945443, 8085999990.

LAKHNADON

1332. KAMTHI MOTORS LLP (SCL1-01-), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480866 PH :9285506128.

MAHESHWAR

1333. NIMAR MOTORS (SHH1-01-), OPPOSITE DEVRAJ HOTEL, MAIN MANDELESHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224 PH :9669569504.

MAHIPUR

1334. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CWN1-01-), 264/3, BHIMAKHEDA, MAHIPUR, UJJAIN - 456443 PH :9109130402.

MAIHAR

1335. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-04-), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH :7354252525.

MAJHAULI

1336. CITY CARS (SPN1-01-), WARD NUMBER 14, NAGAR PARISAD MAJHAULI, DIST. SIDHI (M.P.) - 486666. - 486666 PH :7970003171.

MAJHOLI

1337. SHUBH MOTORS (STJ1-01-), INDRANA ROAD, SUHAJNI TIRAH, MAJHOLI, MADHYA PRADESH - 483336 PH :911155580.

MANASA

1338. PATEL MOTORS (INDORE) PVT. LTD. (BZX1-01-), 982/1, RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. - 458110 PH :9644405368.

MANAWAR

1339. OCEAN MOTORS PVT. LTD. (BVS1-01-), NEAR SHANTIKUNJ COLONY, INDORE-MANAWAR MAIN ROAD, TEHSIL - MANAWAR, DISTRICT - DHAR. - 454335 PH :7389936477.

MANDLA

1340. STANDARD MOTOCORP PVT LTD (WD02-01-), KATARA ROAD, MANDLA, DIST. MANDLA MP - 481661 PH :260600,260622 9301090184 8959280989.

MANDSAUR

Dealer Network (AS ON 31.10.2023)

1341. PATEL MOTORS (INDORE) PVT. LTD. (WC01-01), NEAR SHIVANA BRIDGE,RATLAM MANDSAUR ROAD,MANDSAUR - 458001 PH :07422-404050, 220372.
1342. PATEL MOTORS (INDORE) PVT. LTD. (WC01-02), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001 PH :07422-404050, 220372.
- MANPUR**
1343. PATEL MOTORS (INDORE) PVT. LTD. (BRL1-01), KHASRA NO. 302/1/3, AB ROAD, MANPUR, DIST- INDORE - 453661 PH :9626360699.
- MAUGANJ**
1344. CITY CARS (SEY1-01), NEAR SENGAR PETROL PUMP, CHACK MODE WARD NUMBER 03,NH 7 ,MAUGANJ, DISTT - REWA, MADHYA PRADESH - 486331 . PH :975301199.
- MHOW**
1345. OCEAN MOTORS PVT. LTD. (WA01-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441 PH :7389936478, 266211.
- MORENA**
1346. PREM MOTORS PVT. LTD. (RG01-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH :9926002791.
- NAGDA**
1347. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHR2-01), PLOT NO. 17, STATE HIGHWAY NO.17, INDORIYA ROAD, NAGDA, DISTRICT - UJJAIN, MADHYA PRADESH. - 456335 PH :9755044300/9755512100.
- NARAYANGARH**
1348. PATEL MOTORS (SFN1-01), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. - 458553 PH :9977703907.
- NARSINGHPUR**
1349. STANDARD MOTOCORP PVT LTD (BB02-01), KH. NO. 82/4 & 83/4, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONRSA R.I.M. 2, TEHSIL & DISTRICT - NARSINGHPUR, MADHYA PRADESH. - 487001 PH :232757 9303513711.
- NASRULLAGANJ**
1350. JEEWAN MOTORS PVT. LTD. (CIN1-01-), KHASRA NO. 458, VILLAGE - RALA, TEHSIL - NASRULLAGANJ, DISTRICT - SEHORE, MADHYA PRADESH. - 466331 PH :9826017799, 8959900110.
- NEEMUCH**
1351. PATEL MOTORS (INDORE) PVT. LTD. (P801-02-), MHOW-NEEMUCH ROAD,NEEMUCH(MP), - 458441 PH :9977703907.
- NIWARI**
1352. ADINATH MOTORS (SFC1-01-), ATKHASRA NO 201/1, NEAR HDFC BANK MAIN ROAD, NIWARI, MADHYA PRADESH - 472442 - 472442 PH :9009787562.
- PANDHURNA**
1353. KAMTHI MOTORS (SFG1-01-), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334 - 480334 PH :9111535777.
- PANNA**
1354. CITY CARS (UNIT OF AGARWAL WHEELS) (E001-01-), KHASRA NO. 378, MOHAN RAJ VILAS CHOORHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH . - 489001 PH :7354252525.
- PARASIA**
1355. KAMTHI MOTORS LLP (GKF1-01-), KHRSADOMHAL, PARASIA, CHHINDWARA, MP - 480441 PH :9285506109.
- PATAN**
1356. MAA GAYATRI (SHPI-01-), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119 PH :9770415141.
- PAWAI**
1357. CITY CARS (UNIT OF AGARWAL WHEELS) (SIX1-01-), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. - PANNA, MP- 488446 - 488446 PH :9754301199.
- PETLAWAD**
1358. PATEL MOTORS (INDORE) PVT. LTD. (CJD1-01-), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT - JHABUA, MADHYA PRADESH. - 457773 PH :9111160868.
- PIPARIYA**
1359. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (CGB1-01-), HATHWAS TIRaha, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775 PH :8889285555, 8889282222.
- PITHAMPUR**
1360. PATEL MOTORS (INDORE) PVT. LTD. (5303-04-), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH :9826360699.
- RAISEN**
1361. RAJRUP MOTORS (RF03-01-), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551 PH :7869755501.
1362. JEEWAN MOTORS (RF02-01-), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551 PH :9826017799.
- RAJGARH**
1363. RUKMINI MOTORS (P) LTD (GKE1-01-), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116 PH :9755549200.
- RATLAM**
1364. PATEL MOTORS (INDORE) PVT. LTD. (P801-01-), 76 C.D.E,INDUSTRIAL AREA,RATLAM - 452001 PH :99269-32221/93404-31858.
1365. PATEL MOTORS (INDORE) PVT. LTD. (P801-03-), 18/17/18,DOSHI GOAN,INDUSTRIAL AREA JAORA ROAD,RATLAM - 457001 PH :99269-32221/93404-31858.
- REWА**
1366. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-03-), NYPASS CHURHATA,DIST. REWA - 482001 PH :7354252525.
1367. SHUBH MOTORS (5403-05-), VILLAGE - RATHARA TEHSIL - HUZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003 PH :9755562351.
- SADALPUR**
1368. OCEAN MOTORS (SPS1-01-), JAIN SHRI SUPER MARKET, SERVICE ROAD, MHOW- NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P.) - 454001. - 454001 PH :7389936423.
- SAGAR**
1369. ADINATH CARS PRIVATE LIMITED (G102-01-), STATION ROAD, TILAK GANJ, SAGAR (M.P.) - 470001 PH :9009780030.
- SANWER**
1370. RANA MOTORS PVT LTD (CWX1-01-), S.NO. 356/01, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. - 453551 PH :9109975566.
- SATNA**
1371. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-05-), (A UNIT OF AGRAWAL WHEELS PVT. LTD.), BESIDE BHASKAR PRESS, BEHIND MARUTI SHOWROOM, WARD NO.27, AMOUDHA KALA, PANNA ROAD, SATNA - 485001 PH :9754301199, 7354252525.
- SAUSAR**
1372. KAMTHI MOTORS (SRX1-01-), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P - 480106. - 480106 PH :9111535777.
- SEHORE**
1373. JEEWAN MOTORS PVT. LTD. (302-02-), 869/12,OFFICERS COLONY,IN FRONT OF CHURCH GROUND,BHOPAL, INDORE ROAD - 466001 PH :2226400 9926009735.
- SENDHWA**
1374. NIMAR MOTORS PVT. LTD. (CIIH1-01-), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL - SENDHWA, DISTRICT - BARWANI, MADHYA PRADESH. - 451666 PH :7694011408, 96669569496.
- SEONI**
1375. KUNAL MOTORS (US01-05-), JYARAT NAKA, JABALPUR NAGPUR ROAD, SEONI (M.P.) - 480661 PH :8349999269.
- SEONI MALWA**
1376. INFINITY (SRW1-01-), NEAR AXIS BANK, SEONI MALWA, MP - 461223 - 461223 PH :8889221113.
- SHADOL**
1377. SHUBH MOTORS (MF01-01-), JAMUA, NEAR GYAN GUPTA,BUDHAR ROAD,SHADOL, - 484771 PH :9755595423.
- SHAHPURА**
1378. STANDARD MOTOCORP PVT LTD (CRD2-01-), KHASRA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH :7771000392.
- SHAJAPUR**

1379. UNITARA (RH03-01), LAL GHATI, A B ROAD, SHAJAPUR, MP - 465001 PH :9993406993.	1389. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CVM1-01), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH - 464228 PH :7909997585.	VIDHISHA	1409. KOTHARI AUTO WHEELS PVT LTD (CSZ2-01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, A/P - ALEPHATA, TALUKA - JUNNAR, DISTT. PUNE, PIN:412411 - 412411 PH :8421753278.
SHAMGARH	SITAMAU	VIDISHA	ALIBAUG
1380. PATEL MOTORS (INDORE) PVT. LTD. (BFZ1-01), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL – SHAMGARH, DISTRICT – MANDSAUR, MADHYA PRADESH. - 458883 PH :9753088222.	1390. PATEL MOTORS (SLL1-01), MAUKHEDA, TEHSIL - SITAMAU, DISTRICT - MANDAUR, MADHYA PRADESH . - 458990 - 458990 PH :9826360699.	1400. RAJRUP (AY03-01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001 PH :7869755501.	1410. SIMRAN MOTORS PVT. LTD. (7S01-05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE - VESVHI, ALIBAUG, DISTRICT – RAIGAD, MAHARASHTRA - 402201 PH :9223161512, 9270888786.
SHIVPURI	TARANA	WAIDHEN	AMALNER
1381. PREM MOTORS PVT. LTD. (3003-04), A B ROAD, SIVPURI, - 473551 PH :9926809976.	1391. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHQ2-01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH . - 456665 PH :9893563031/9755512100.	1401. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI, MADHYA PRADESH - 486886 PH :7354252525.	1411. MANRAJ MOTORS (ELO1-01), PRASAD MOTORS, RAVI NAGAR, NEAR NAYARA PETROL PUMP, DHULE ROAD, AMALNER, DIST. JALGAON-425401. - 425401 PH :#N/A.
SHUJALPUR	TENDUKHEDA	MAHARASHTRA	AMBERNATH
1382. UNITARA (BGP2-01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P. - 465333 - 465333 PH :9575650883.	1392. STANDARD MOTOCORP PVT LTD (CRC2-01), KHASARA NO. 49/6, MOUZA – TENDUKHEDA, DISTRICT – NARSINGHPUR. - 470880 PH :7771014773.	1402. KANKARIYA AUTOMOBILES PVT. LTD. (A501-01-), SARDHA MILLS,SAVEDI ROAD, AHMEDNAGAR, MAHARASTRA - 414001 PH :7410024227.	1412. AHER AUTOPRIME LLP (COP1-01), PLOT NO-24,26,27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVLI, AMBERNATH - 421501 PH :8422871720.
SHYAMPUR	THIKRI	1403. KANKARIYA AUTOMOBILES PVT. LTD. (A501-05-), MIDC, AHMEDNAGAR - 414003 PH :7447700029.	AMRAVATI
1383. DAGA MOTORS (SJX1-01), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT – SEHORE, MADHYA PRADESH - 466651 - 466651 PH :7909997570.	1393. NIMAR CAR (SED1-01), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH -451660. - 451660 PH :9109202186.	1404. SAI SERVICE PRIVATE LIMITED (CIR1-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT - KOLHAPUR. - 416505 PH :777837717, 9673331977.	1413. ASPA BANDSONS AUTO PVT. LTD. (F201-01-), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA, - 444607 PH :942123665.
SIDHI	TIKAMGARH	1405. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-04), PLOT NO. 15/3-A, PANCHVATI STOP, MALINAGAR ROAD,AKLUU - 413101 PH :0217722303/8805986848.	1414. ASPA BANDSONS AUTO PVT. LTD. (F201-05-), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607 PH :9422339601.
1384. CITY CARS (UNIT OF AGARWAL WHEELS) (BKMI-01), ADHIYAR KHOKH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. - 486661 PH :9754301199, 7354252525.	1394. ADINATH CARS PRIVATE LIMITED (RE02-01), NEAR NEW BUS STATION, OPPOSITE OF BANKE BIHARI COLONY, MAURANIPUR ROAD,TIKAMGARH, MADHYA PRADESH - 472001 PH :9200888454.	AJARA	APTA
SIHORA	UDAIPURA	1406. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-04), PLOT NO. 15/3-A, PANCHVATI STOP, MALINAGAR ROAD,AKLUU - 413101 PH :0217722303/8805986848.	1415. K.T.S. AUTOMOTORS PVT. LTD. (582-01-), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWAL, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207 PH :9420611356/942066111326.
1385. SHUBH MOTORS PVT. LTD. (CIG1-01), KHASRA NO. 31/1, P.H. - 11, MOUZA – GHAT SIMARIYA, TEHSIL – SIHORA, DISTRICT - JABALPUR, MADHYA PRADESH. - 483440 PH :9755099971, 9752546255.	1395. JEEWAN (SC1-01), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770 PH :9826017799.	1407. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-02), PLOT NO E/12-13-MIDC PHASE-2, AKOLA. - 444001 PH :9767892552/9112220551.	1416. SEVA AUTOMOBILES (SMF1-01), PLOT NO-7, SURVEY NO-32/7, MAUZA -AHMADNAGAR, WARDHA ROAD, NAGAR PARISHAD-ARVI, TEHSIL-ARVI, DIST-WARDHA - 442201 PH :8484988769.
SILWANI	UJJAIN	1408. KHANDELWAL AUTO (SMN1-01), PLOT NO 18 & 19, SURVEY NO 600/3, AKOT – AKOLA ROAD, AKOT, AKOLA (MAHARASHTRA) - 444101 - 444101 PH :9112220551, 9767892552.	AURANGABAD
1386. RAJRUP (SRP1-01), MAHAVIR COLONY, SAI KHEDA ROAD, SILVANI, DIST. RAISEN, MP - 464886 - 464886 PH :9174000501.	1396. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (3W03-01), SURVEY NO. 59/3, DEWAS ROAD,UJJAIN - 456010 PH :0734-2524002, 9755512100.	1409. KHANDELWAL AUTOMANUFACTURERS PVT. LTD. (2102-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH :9158000046.	
SIMROL	UMARIA	1397. YUG CARS (3W03-02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURHA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH - 456001 PH :9425067979.	
1387. RUKMANI MOTORS (BZV2-01), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020 PH :9109978301.	1398. SHUBH MOTORS (5403-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH :9755502682.	1410. KHANDELWAL AUTO WHEELS PVT. LTD. (2102-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210 PH :9158000046.	
SINGHOLI	UMARIA	1411. SEWA AUTOMOBILES (SMF1-01), PLOT NO-7, SURVEY NO-32/7, MAUZA -AHMADNAGAR, WARDHA ROAD, NAGAR PARISHAD-ARVI, TEHSIL-ARVI, DIST-WARDHA - 442201 PH :8484988769.	
1388. PATEL MOTORS (SEQ1-01), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP - 458228 - 458228 PH :9977703907.			
SIRONJ			

Dealer Network (AS ON 31.10.2023)

1418. PAGARIYA AUTO PVT. LTD. (2103-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD - 431005 PH :02406659902.	BHIGWAN	1428. MAHALAXMI AUTO (SMP1-01), GAT NUMBER-342, NEXT TO HOTEL SAGR, PUNE-SOLAPUR HIGHWAY, BHIGWAN - 413130. - 413130 PH :9922979653.	CHIPLUN	1438. JAGRUT MOTORS PVT LTD (9A01-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMBASTE, TAL-CHIPLUN, DIST-RATNAGIRI, MAHARASHTRA - 415605 PH :7083687172/8308917693.	1447. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD.) (ZK02-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARAstra - 442702 PH :8669929188.
1419. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-03)- C-27 MIDC, CHIKALTHANA, N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006 PH :9158000059.	BHOR	1429. SEHGAJ AUTORIDERS PVT. LTD. (BSV1-01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA – BHOR, DISTRICT – PUNE, MAHARASHTRA - 412206 PH :9527771016.	CHOUK	1439. SIMRAN MOTORS (SNK1-01), SIMRAN MOTORS PVT LTD STOCKYARD , AT WAVANDAL ,SURVEY NO- 62/2A POST- CHOWK, NEAR ARUN HOTEL ,MUMBAI-PUNE HIGHWAY, TALUKA - KHALAPUR, DISTRICT - RAIGAD - 410206 PH :8691988895.	GADINGALAJ
1420. PAGARIYA AUTO PVT. LTD. (2103-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005 PH :986099484/9860994968.	BHUSAVAL	1430. MANRAJ AUTO (C401-02), NATIONAL HIGHWAY 6,NEAR KHADKA ROAD CROSSING, BHUSAVAL 425201 - 425201 PH :9422867242.	DAHANU	1440. SAI SERVICE PRIVATE LIMITED (V901-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHE - 401602 PH :9730302821/9167980005/9594952211.	GONDIA
1421. PAGARIYA AUTO PVT. LTD. (2103-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001 PH :8408886768/7387279311.	BOISAR	1431. SHIVAM AUTO ZONE (ES02-01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARASHTRA - 401501 PH :8082551155.	DAPOLI	1441. JAGRUT MOTORS PVT LTD (G301-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI DIST RATANAGIRI. - 415712 PH :8308816572/7447752372.	GUHAGAR
1422. PRAKASH AUTO PVT. LTD. (9001-01), SHOP NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA WATER SUPPLY, OPP. INDIAN OIL PETROL PUMP, MIDC ROAD, KATRAP, BADLAPUR (EAST) - 421503 PH :8655791288/9870453155.	BRAMHAPURI	1432. TRISTRAR CARS PVT LTD (H302-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BHAIMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206 PH :7745883000.	DHAMANGAON	1442. ASPA (SFZ2-01), RAMDEVBABA NAGAR, ANJANISINGH ROAD, DHAMANGAON RAILWAY, DIST- AMRAVATI - 444709 PH :9850333558.	HINGANGHAT
1423. TRISTRAR CARS (H302-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMBNI, TAH. BALLAPUR - DIST. - 442701 PH :7447473304.	BULDHANA	1433. MANRAJ MOTORS PVT LTD (COU1-01), GAT NO. 94, PLOT NO. 11, SUNDERKED, BULDHANA, MAHARASHTRA - 443 001 PH :7875051521.	DHULE	1443. SEVA AUTOMOTIVE LTD. (P301-01), GATE NO. 90, AWADHAN,MUMBAI AGRA ROAD,DHULE - 424001 PH :02562-281128/29.	HINGANGHAT
1424. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-01), BARAMATI-PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102 PH :9881370310.	CHALISGAON	1434. MANRAJ MOTORS PVT LTD (AAE1-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA - 424101 PH :8408889861.	DINDORI	1444. AUTOMOTIVE MANUFACTURERS PVT. LTD. (AAF1-01), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202 PH :9673000822.	HINGOLI
1425. CHAVAN MOTORS DIVISION INDIA PVT LTD (BBAI-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI . - 413401 PH :0217-22966/8378983726.	CHANDGAD	1435. SAI SERVICE PRIVATE LIMITED (BTF1-01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA - 416507 PH :9673339103.	DOMBIVALI	1445. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-02), PLOT NO. B-43, PHASE-1,DOMBIVALI INDUSTRIAL AREA, DOMBIVALI,DISTT-THANE, MAHARASHTRA - 421201 PH :8879050913/9769206095/9769206101.	HUPARI
1426. PAGARIYA AUTO PVT. LTD. (V602-01), GUT NO. 61, VILLAGE – GHOSAPURI, TALUKA AND DISTRICT – BEED, MAHARASHTRA - 431122 PH :9834161614/02442256058/02442256056/02442256057.	CHANDRAPUR	1436. TRISTRAR CARS PVT LTD (H302-01), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 441904 PH :7722068612.	DOMBIVALI	1446. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-02) , SURVEY NO.13, NEAR PIMPLESHWAR TEMPLE, OPP. MAHANAGAR CNG PUMP, KALYAN-SHLIPATHA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. - 421203 PH :8422800740, 8422978490.	ICHALKARANJI
1427. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904 PH :7030932330/9673004280.	BHANDARA	1437. TRISTRAR CARS PVT LTD (H302-03), NAGPUR ROAD, CHANDRAPUR - 442401 PH :7722068603.	GADCHIROLI	1447. SAI SERVICE PRIVATE LIMITED (4D01-01), GATE NO. 107, KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122 PH :0230-2425262.	INDAPUR
				1456. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-02), STATE HIGHWAY NO. 151, INDAPUR - 412219 PH :8308807314.	

ISLAMPUR

1457. CHOWGULE INDUSTRIES PVT. LTD. (PJ02-01-), GATE NO.305/A/3, NEAR BOMBAY RAYAN, PUNE-BANGALOE HIGHWAY (NH-4), ISLAMPUR TALUKA : WALVA, DIST:SANGLI - 415409 PH :02342-225757.

JALGAON

1458. MANRAJ MOTORS PVT LTD (C401-01), AJINTA ROAD, MIDC INDL AREA, JALGAON - 425003 PH :0257-221210.

JALNA

1459. AUTOMOTIVE MANUFACTURERS PVT. LTD., (2102-02), PLOT NO. 4 & 5, CTS NO. 1142/74/A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA - 431203 PH :9158000063.

JATH

1460. CHOWGULE INDUSTRIES PVT. LTD. (J102-05-), PLOT NO. 12, SAWANT ESTATE, MORE COLONY, OPP. CATTLE BAZAR, SATARA ROAD, JATH, DISTRICT SANGLI, MAHARASHTRA - 416404 PH :02344-246598.

1461. SIDHI WHEELS (BLX1-01), GAT NO- 27/1B, POST-RAMPURI, JATH-SANGLI ROAD, TALUKA-JATH, DISTRICT-SANGLI - 416404 PH :8956454526.

JAYSINGHPUR

1462. SAI SERVICE PRIVATE LIMITED (ASA1-01-), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGAON(JAYSINGHPUR), TALUKA-SHIRO, DIST: KOLHAPUR - 416134 PH :9673339762.

JEJURI

1463. EXCELL AUTO VISTA (SKY1-01), GAT NO - 224, AT POST-SAKURDE, JEJURI, TALUKA-PURANDHAR, DISTRICT-PUNE, PIN-412303 . - 412303 PH :9075028780.

KALWAN

1464. SHAAN CARS PRIVATE LIMITED (BNW1-01-), GAT NO. 189, PLOT NO. 7, MALEGONA ROAD, A/P KALWAN, NASHIK - 423501 PH :9075028780, 9689003988.

KALYAN

1465. AHER AUTOPRIME LLP (CFV1-01-), SURVEY NO.53 & 54, HIND MILL, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI - 421301 PH :9819705444/8857402204/9769927505.

1466. AHER AUTOPRIME LLP (CFV1-02-), SURVEY NO.31B, MOHANE ROAD, NEAR SHAHD RAILWAY STATION SHAHD, KALYAN - 421103 PH :8422871720/8657402204/9833993076.

KAMSHET

1467. SEHGAL AUTO (CEA1-01-), AT NAYGAON, POST KAMSHET, TALUKA MAVAL, DISTRICT PUNE, MAHARASHTRA (410405) - 410405 PH :8888881358.

KANKAVLI

1468. JAGRUT MOTORS PVT LTD (G301-05-), PLOT NO.32-33,SURVEY NO.-1886/1,MUMBAI-GOA HIGHWAY (NH-17),JANAVLI,KANKAVLI,MAHARASHTRA - 416002 PH :7499051071/9021095805.

KARAD

1469. CHOWGULE INDUSTRIES PVT. LTD. (F303-02-), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110 PH :9922569835.

KARJAT

1470. SIMRAN MOTORS PVT. LTD. (TS01-03-), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201 PH :8691988895, 8108181978.

1471. KANKARYA AUTOMOBILES PVT. LTD. (GJVI-01-), KARJAT-NAGAR ROAD, KARJAT, MAHARASHTRA - 414402 PH :9690843771.

KARMAD

1472. PAGARIYA (CEB1-01-), GAT NO-245, BHAKTI COMPLEX, BEHIND BHARAT PETROL PUMP, AURANGABAD ROAD, KARMAD - 431007. - 431007 PH :7575071718 / 9687668929.

KARMALA

1473. CHAVAN MOTORS DIVISION INDIA PVT LTD (GQJ01-01-), GAT NO. 105, SURVEY NO. 3961, KARMALA-NAGAR ROAD, A/P- KARMALA, TALUKA - KARMALA, DIST.-SOLAPUR. - 413202 PH :8806665691.

KAVATE MAHANKAL

1474. CHOWGULE INDUSTRIES PVT. LTD. (SC02-01-), MAHANKALI BAAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405 PH :02341-222102.

KHAMGAON

1475. MANRAJ MOTORS PVT LTD (BXU1-01-), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON . MAHARASHTRA - 444303 PH :07623-250002/3.

KHANAPUR (SANGLI)

1476. CHOWGULE INDUSTRIES LTD (SNM1-01-), KHANAPUR VITA ROAD, KHANAPUR, TAL-KHANAPUR, DIST-SANGLI - 415307 PH :9767899653.

KHARGHAR

1477. EXCELL AUTOVISTA PVT LTD (AAC1-01-), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210 PH :7666703636 / 9594153308 / 8422991300 / 9320357300.

KHED

1478. JAGRUT MOTORS (COR1-01-), GAT NO - 43/B, MAUZA-BHARNE NAKA, TALUKA-KHED, DIST-RATNAGIRI. - 415709 PH :9698533472.

KHOPOLI

1479. KIRAN MOTORS (9C02-01-), PLOT NO-68, VILLAGE-MULGAON, KHOPOLI INDUSTRIAL ESTATE, KHOPOLI, TALUKA-KHALAPUR DIST-RAIGARH - 410204 PH :8976791922, 8976791920.

KOLHAPUR

1480. SAI SERVICE PRIVATE LIMITED (3802-01-), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR - 416008 PH :0231-2661676.

1481. SAI SERVICE PRIVATE LIMITED (3803-01-), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122 PH :0230-2468376.

1482. SAI SERVICE PRIVATE LIMITED (3802-06-), R S NO. 10/18/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA - 416012 PH :0231-2329494.

1483. KR MOTORS KOLKHUR PVT LTD (3804-01-), PLOT NO. 216/2, 216/3, 216/5, NH-4, GOKUL SHIRGAON, KOLHAPUR - 416234 PH :9855005050, 7447755504.

KONGAON

1484. PRAKASH AUTO PVT. LTD. (3903-02-), SURVEY NO.126/127,98/38,AT & POST KONGAON, - 421302 PH :9702809668/9870453155.

KOPARGAO

1485. SHAAN CARS PRIVATE LIMITED (COV1-01-), SURVEY NO. 15/36 GAWARE PATIL ESTATE, NAGAR MANMAND HIGHWAY, NEAR ASHOKA HOTEL, KOPARGAOON. - 423 601 PH :9075028780.

KOREGAON BHIMA

1486. SAI SERVICE (BUO1-01-), GAT NO-373, VILLAGE-KOREGAON BHIMA, TALUKA-SHIRUR, DIST-PUNE. - 415501 PH :7774997005.

KUDAL

1487. JAGRUT MOTORS PVT LTD (9B01-01-), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA – KUDAL, DISTRICT – SINDUDURG, MAHARASHTRA - 416520 PH :8806664572/8208965235.

KUDITRE

1488. SAI SERVICE (SRV1-01-), KUDITRE FACTORY PHATA, A/P -KOPARDE, TALUKA-KARVEER, DIST-KOLHAPUR-416205. - 416205 PH :9923208460.

KURUDWADI

1489. CHAVAN MOTORS DIVISION INDIA PVT LTD (CUF1-1), GAT NO-.256, BYPASS ROAD, A/P KURDA, TALUKA-MADHA, DISTT. SOLAPUR. - 413208 PH :8806665691.

KURUNDWAD

1490. SAI SERVICE PVT. LTD. (BHO1-01-), GAT NO. 250, AT POST - KURUNDWAD, TALUKA - SHUROO, DIST-KOLHAPUR. - 416106 PH :9673339695.

LANJA

1491. JAGRUT MOTORS (SER1-01-), GAT NO-663, TALUKA-LANJA, DIST- RATNAGIRI, MAHARASHTRA -416701 - 416701 PH :8108718346.

LASALGAON

1492. SHAAN CARS PRIVATE LIMITED (BZM1-01-), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA – NANDGAON, DISTRICT – NASHIK. - 422306 PH :9075028780, 7720094874.

LATUR

1493. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-01-), CITY SURVEY NO. 2960, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR - 413512 PH :9607999095.

1494. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-02-), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512 PH :9607999091/9607999092/9607999093/9607999094

LONAVALA

Dealer Network (AS ON 31.10.2023)

1495. SEHGAU AUTORIDERS PVT. LTD. (CGA1-01-),
GATE NO. 120/1, VILLAGE - WAKSAI, TALUKA -
MAVAL, LUNAVALA, DISTRICT - PUNE,
MAHARASHTRA - 410405
PH : 89753 73431.

MAHAD

1496. SIMRAN MOTORS PVT. LTD. (TS01-04-), NEAR
RELIANCE PUMP, PANVEL-GOA ROAD, MAHAD,
DIST. RAIGAD - 402301
PH : 9870404323.

MALEGAON

1497. SHAAN CARS PRIVATE LIMITED (3703-02-),
PLOT NO. 572/81, CHANDANPUR SHIVAR, OLD
MUMBAI, AGRA ROAD, DIST - NASIK, MALEGAON -
423203
PH : 9922969620/9922969656.

MANCHAR

1498. KOTHARI AUTO WHEELS PVT LTD (CSH2-01-),
SOHAM NAGARI, A-WING, SHOP NO 8 & 16,
PUNE NASIK HIGHWAY, A/P MANCHAR,
TALUKA: AMBEAGAON, DISTT: PUNE,
MAHARASHTRA - 410503
PH : 841103608.

MANGALVEDHA

1499. CHAVAN MOTORS (SQR1-01-), NEAR
SWARAJYA HOTEL, PANDHUPUR ROAD,
CHOKAMELANAGAR, MANGALVEDHA,
MAHARASHTRA, PIN-413305 - 413305
PH : 8805778881.

MANGAON

1500. SIMRAN MOTORS PVT. LTD. (BAM1-01-),
SURVEY NO. 97, AT-POST-NANORE, NH-17,
MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD,
MAHARASHTRA - 402104
PH : 9223181120.

MANMAD

1501. SHAAN CARS PRIVATE LIMITED (BNX1-01-),
GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4,
NANDGAON ROAD, MANMAD. - 423104
PH : 9075028780, 8888832369.

MANOR

1502. SAI SERVICE PRIVATE LIMITED (CRE1-01-), GUT
NO. 37, NEAR MSEB POWER STATION,
PALGHAR MANOR ROAD, AT POST -
TAKVHAL, DISTRICT - PALGHAR, MANOR. -
401403
PH : 9167980005.

MAYANI

1503. CHOWGULE INDUSTRIES (STQ1-01-), GAT NO -
2101/1, 560/1,
MAYANI VADUJ ROAD, A/P- MAYANI,
TAL-KHATAV, DIST-SATARA-415102. - 415102
PH : 8888866659.

MIRA ROAD, THANE

1504. SUPREME AUTOMOBILES (3915-01-), BRILLIANT
COMPLEX, WESTERN EXPRESS HIGHWAY,
MIRA ROAD, THANE- 401107. - 401107
PH : 8591942704.

MIRAJ

1505. CHOWGULE INDUSTRIES PVT. LTD. (J102-03-),
42C, OPP. WHISPERING WOODS, MIDC AREA,
TALUKA MIRAJ, DIST: SANGLI, MAHARASHTRA -
416410
PH : 0233-2643221, 0233-264322.

MORGAO

1506. MAHALAXMI AUTO (SRN1-01-), GAT NO-179,
MORGAOA. - TALUKA- BARBATI, DIST-PUNE -
412304
PH : 9850994014.

MUMBAI

1507. SAI SERVICE PRIVATE LIMITED (504-01-), 462
SENAPATI BAPAT MARG,WORLI NAKA,LOWER
PAREL, MUMBAI - 400013
PH : 959495212/9594952088/9167980082

1508. SAI SERVICE PRIVATE LIMITED (504-02-),
ARVIND CHAMBERS,194 ANDHERI KURLA
ROAD, ANDHERI(EAST), MUMBAI - 400069
PH : 43030606 /800, 9594952341 / 9594952084 /
9594952250.

1509. VITESSE PRIVATE LIMITED (503-01-), SHAH
INDL.ESTATE, PLOT 11 LINK ROAD, ANDHERI
(WEST), MUMBAI - 400058
PH : 02226730787/02226730280/02226730296/0226164
2500/02261642500.

1510. VITESSE PRIVATE LIMITED (503-02-), 77 AF
PALKY GULLY,OFF VEER SAWARKAR MARG,
PRABHADDEVI, MUMBAI - 400025
PH : 24229747/24223933/9821894915.

1511. SHA & SANGI AUTO AGENCIES PVT.LTD
(505-01), PRAKASH MILLS COMPOUND, OFF.
GLOBE MILLS PASSAGE,WORLI,MUMBAI -
400013
PH : 02224925452/02224925453/02224925454.

1512. SAI SERVICE PRIVATE LIMITED (504-04-), C/O
SHAKTI INDUSTRIAL WIRE COMPOUND, DATTA
PADA ROAD,BORIVILI (EAST),MUMBAI - 400066
PH : 28707000 / 9594057006 / 9594952344 /
9594952417.

1513. EXCELL AUTOVIA PVT LTD (510-01-),
RESHAM SINGH COMPOUND,CST
ROAD,KALINA, SANTACRUZ EAST,MUMBAI -
400098
PH : 67743888_26653242, 43, 46 / 7666703636 /
9594972889 / 7715804477.

1514. AUTOMOTIVE MANUFACTURERS PVT. LTD.
(3901-04-), PLOT NO. 108, BAZAR WARD,
KURLA(WEST), MUMBAI - 400070
PH : 61563734 / 61563734 / 61563731 / 9167773925.

1515. FORT POINT AUTOMOTIVE (CARS) PVT. LTD.
(521-02-), D-9, STREET NO. 21, OPP PATNI
COMPUTERS, SEEEPZ, MIDC, ANDHERI,
MUMBAI - 400096
PH : 9694973889, 8422800747.

1516. SHIVAM AUTO ZONE (I) PVT. LTD. (531-01-),
CHARKOP INDUSTRIAL ESTATE,
KANDIVLI(WEST), MUMBAI, MAHARASHTRA -
400067
PH : 7718893072/9152001329/8082551017/9870938888

1517. VITESSE PRIVATE LIMITED (503-07-), PLOT
NO. A59, KANDIVLI INDUSTRIAL CO-OP. SOC.,
GOVERNMENT INDUSTRIAL ESTATE,
CHARKOP, KANDIVLI (W), MUMBAI - 400067
PH : 02228674753.

1518. FORT POINT AUTOMOTIVE (CARS) PVT. LTD.
(521-03-), C/O VARUN STEEL INDUSTRIES,AAM
TOOL COMPOUND BOAT HURT ROAD, BEHIND
SEWARI POLICE STATION, DARUKHANA, REAY
ROAD, MUMBAI - 400010
PH : 9594974678, 8691045341.

1519. SHIVAM AUTO ZONE (I) PVT. LTD. (531-02-),
PLOT NO. 485, RAMCHANDRA LANE EXTN., OFF
LINK ROAD, KANCHPADA, MALAD-WEST.
MUMBAI - 400064. - 400064
PH : 8082551115/9362721124/9870938888.

1520. VELOX MOTORS (A UNIT OF CARCRAFT
AUTOMOBILES PVT LTD) (05A3-01), PLOT
NO.115/16/17 MIVERVA INDUSTRIAL ESTATE,
MULUND-WEST, MUMBAI - 400080
PH : 8104998939/8104998947.

1521. KIRAN MOTORS (05A1-01), CTS NO. 170 & 4081,
BOMBAY AGRA ROAD, LB SHASTRI MARG,
GHATKOPAR (WEST), MUMBAI,
MAHARASHTRA, PINCODE: 400086. - 400086
PH : 9152004223/770988886.

1522. MY CAR (PUNE) PVT LTD (05A8-01), PLOT
NO-10, CHANDIVLI ESTATE, CHANDIVLI
FARM ROAD, OPP LAKE HOMES, ANDHERI
EAST, MUMBAI, MAHARASHTRA - 400072
PH : 8104907081.

MURBAD

1523. PRAKASH AUTO PVT. LTD. (BYO1-01-), SURVEY
NO. 6/1, KALYAN - MURBAD ROAD, VILLAGE -
DAHAGAON, TALUKA - MURBAD, DISTRICT -
THANE, MAHARASHTRA - 421605
PH : 7798725726.

MURGUD

1524. SAI SERVICE PRIVATE LIMITED (AWA1-01-),
R.S. NO. 18/4, A/P MURGUD, TALUKA: KAGAL,
DIST: KOLHAPUR - 416219
PH : 02325-265553.

MURTIZAPUR

1525. KHANDELWAL AUTOWHEELS (SHE1-01-),
SURVEY NO 38, MAUJA SONARI, NH 06, NEAR
HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA -
444107
PH : 8484063274.

NAGPUR

1526. SEVA AUTOMOTIVE LTD. (2002-01-), 34/3,
KACHIMET AREA, NEAR VAYUSENA NAGAR
BUS STOP, WADI, AMRAVATI ROAD, NAGPUR -
440023
PH : 0712-6652863.

1527. AUTOMOTIVE MANUFACTURERS PVT. LTD.
(2001-02-), 575 KAMPTEE ROAD,NAGPUR-26. -
440026
PH : 9673004226/9673004223.

1528. SEVA AUTOMOTIVE LTD. (2002-03-), PLOT NO.
33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR,
MAHARASHTRA - 440016
PH : 0712-666444.

1529. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE
(I) PVT. LTD.) (2004-01-), NEAR PARDY NAKA
(OUTSIDE), NH-6, BHANDARA ROAD,NAGPUR -
440035
PH : 8888859506/8888859534.

1530. AUTOMOTIVE MANUFACTURERS PVT. LTD.
(2001-05-), PLOT NO. 38/1, NEAR BOUDHHA
VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE
ROAD, NAGPUR, MAHARASHTRA - 441001
PH : 9166699701/9673004227.

1531. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE
(I) PVT. LTD.) (2007-01-), PLOT NO. 4, NEW
COTTON MARKET, CHAT ROAD, NAGPUR,
MAHARASHTRA - 440018
PH : 8888859542.

1532. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE
(I) PVT. LTD.) (2007-02-), PLOT NO. 131, NH-6,
BHANDARA ROAD, MAHALGAON, NAGPUR,
MAHARASHTRA - 441201
PH : 8888820312.

1533. SEVA AUTOMOTIVE PVT. LTD. (2002-04-), PLOT
NO.05, 12, 13A, 13B CHANDRAKHAGA GRUHA
NIRMAN SAHAKARI LIMITED, KH NO 4/5, CITY
SURVEY NO.570, MANEWADA RING ROAD,
NAGPUR, MAHARASHTRA - 440027
PH : 8390446644.

1534. ARUN MOTORS (2008-01-), PLOT NO.9&10,
PATNI PLAZA, KHAMLA RING ROAD,
SAWARKAR NAGAR, NAGPUR, MAHARASHTRA
- 440025
PH : 7757988800/7028688800.

1535. ARUN MOTORS (2008-02-), C-48/1, MIDC
HIGNA MAIN ROAD, WADI, NAGPUR,
PIN:440028, MAHARASHTRA - 440028
PH : 7757988800.

NALASOPARA

1536. SHIVAM AUTO (CUH1-01), SURVEY NO. 91,92 , PLOT NO. 7, VILLAGE- DHANIV, NALASOPARA, DIST. PALGHAR, MAHARASHTRA - 401209 PH :9152001458/7777002930.
- NANDED**
1537. SEVA AUTOMOTIVE LTD. (6801-01), NANDED HYDERABAD ROAD, NANDED - 431604 PH :7447415607.
- NANDURBAR**
1538. SEVA AUTOMOTIVE LTD. (P301-02), P NO.-324, BASIL NAGAR SHAHADA BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFFULEY NANDURBAR-425412 -425412 PH :7720017528.
- NARAYANGAON**
1539. KOTHARI AUTO WHEELS PVT LTD (FV03-01), GATE NO. 74, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :8411003608.
- NASHIK**
1540. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3702-01), P-1-12,ADDITIONAL NASIK INDL. AREA,AMBAD, NASIK - 422010 PH :0253-6636329/ 319/312/313/314/317.
1541. SEVA AUTOMOTIVE LTD. (3701-01), PLOT NO. X - 46 MIDC, AMBAD, NASIK - 422010 PH :0253-664444.
1542. SHAAN CARS CARS PRIVATE LIMITED (3703-01), E-3 MIDC AREA,SATPUR , NASIK,MAHARASHTRA - 422007 PH :9075028780, 9922969464.
1543. SHAAN CARS PRIVATE LIMITED (3703-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011 PH :0253-223680.
1544. SEVA AUTOMOTIVE LTD. (3701-06), SEVA FARMS, GATE NO: 8/2, AMBE BHULYA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH :9146000709.
1545. SEVA AUTOMOTIVE PVT LTD (3701-07), PLOT NO A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006 PH :0253-663444.
1546. SEVA AUTOMOTIVES PVT LTD (3701-08), SHOP NO. 1 & 2, SER. NO. 241/B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH :0253-6654444.
- NAVI MUMBAI**
1547. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-01), D-234 MIDC TTC INDL. AREA,SHIRVANE NERUL,NEW BOMBAY, - 400706 PH :66143900/66133923/66143924.
1548. SIMRAN MOTORS PVT. LTD. (3913-01), CAMEO FABRIC COMPANY, GEN 16, NEAR SULZER COMPANY, DIGHA, TTC AREA, AIROLI - 400701 PH :8788582329, 8369658212.
- NEVASA**
1549. KANKARIYA AUTOMOBILES PVT. LTD. (BSU1-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVASA PHATA, AURANGABAD ROAD, TALUKA – NEVASA, DISTRICT - AHMEDNAGAR. - 414603 PH :9420494601.
- NIPAHAD**
1550. SHAAN CARS PVT. LTD. (COX1-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPAHAD, DISTRICT - NASHIK, MAHARASHTRA. - 422303 PH :9075028780.
- OSMANABAD**
1551. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-03), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501 PH :8888867861.
- OTUR**
1552. KOTHARI AUTO WHEELS PVT LTD (SLG2-01), GAT NO-18A/3/B, ALEPHATA-KALYAN ROAD, OPP HP PETROL PUMP, VILLAGE-OTUR, TALUKA - JUNNAR, DIST-PUNE - 412409 PH :8411003608.
- PABAL**
1553. MAHALAXMI (SKB1-01), 3733, SHINALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403 PH :8956288087.
- PAITHAN**
1554. PAGARIYA AUTO PVT. LTD. (BNQ1-01), GAT NO-277, MAUZA- PAITHAN, TALUKA- PAITHAN, DIST - AURANGABAD 431107. - 431107 PH :9922994237.
- PALGHAR**
1555. SAI SERVICE PRIVATE LIMITED (TE01-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404 PH :9167980042/9167980005/9594952211.
- PALUS**
1556. CHOWGULE INDUSTRIES PVT. LTD. (J102-04), PLOT NO.8-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308 PH :8888870122.
- PANDHARPUR**
1557. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-05), GAT NO.56, ESABAV, PUNE ROAD, TAL-PANDHERUP, SOLAPUR - 413001 PH :7774997005.
- PANVEL**
1558. SIMRAN MOTORS PVT. LTD. (7S01-01), PLOT2-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBIAI PUNE HIGHWAY,PANVEL - 410206 PH :8291957798, 8657443202.
1559. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-03), PLOT NO.92/1, VILLAGE KOLAKHA, MUMBIAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206 PH :9769202055/9769206045/9769206018/8291467042
- PARATWADA**
1560. ASPA BANDSONS AUTO PVT. LTD. (CFZ1-01), SURVEY NO. 26/A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA - ACHALPUR, DISTRICT – AMRAVATI. - 444 805 PH :8888897629.
- PARBHANI**
1561. PAGARIYA AUTO PVT. LTD. (LN02-01), SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI - 431401 PH :9511868433.
- PATAS**
1562. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUK DAUND DISTT.-PUNE - 413106 PH :8888890597.
- PEN**
1563. SIMRAN MOTORS (9I01-01), AT SURVEY NO 75, PLOT NO 2, MUMBIAI-GOA HIGHWAY, WADHAKI (PEN) - 402107 PH :9503381198.
- PHALTAN**
1564. CHOWGULE INDUSTRIES PVT. LTD. (KH02-01), PLOT NO.83/B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523 PH :888886301.
- PIMPLEGAON**
1565. AUTOMOTIVE MANUFACTURERS PVT. LTD. (BAY1-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPAHAD, DIST-NASHIK - 422202 PH :02550-252808.
- PIRANGUT**
1566. MY CAR (SEC1-01), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108. - 412108 PH :9325424613.
- PUNE**
1567. SAI SERVICE PRIVATE LIMITED (1901-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012 PH :020-46404440/020-46404448.
1568. SAI SERVICE PRIVATE LIMITED (1901-02), 889/9 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004 PH :9923208347.
1569. CHOWGULE INDUSTRIES PVT. LTD. (1908-02), S.NO. 53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046 PH :020-66786200.
1570. SAI SERVICE PRIVATE LIMITED (1901-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH :9923208345.
1571. WONDER CARS PVT LTD (1903-02), 12, NPS LINES SOLAPUR ROAD, OLD POOL GATE,CAMP, PUNE - 411001 PH :020-26332934/35.
1572. KOTHARI AUTO WHEELS PVT LTD (1984-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH :7498272309.
1573. MY CAR (PUNE) PVT. LTD. (1907-01), SURVEY NO. 131, MUMBIAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057 PH :020-67922900.
1574. ACE KUDALE CAR PVT. LTD. (1910-01), 36/C/1, MANRAJ BUDRUK, PUNE-SOLAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE - 412201 PH :9552592454.
1575. CHOWGULE INDUSTRIES PVT. LTD. (1911-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046 PH :02066803555/02066803500.
1576. SAI SERVICE PRIVATE LIMITED (1901-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019 PH :020-46605999/020-46605995.
1577. SEHAL AUTORIDERS PVT. LTD. (1913-01), SURVEY NO. 51, BAVIDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021 PH :8308304444, 020-41463625, 020-41463627.
1578. SAI SERVICE PRIVATE LIMITED (1901-06), SURVEY NO.244/I, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057 PH :9923208302.
1579. ACE KUDALE CAR PVT. LTD. (1910-02), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMALI, BHOSARI, PUNE. - 411039 PH :9552193904.
1580. KOTHARI AUTO WHEELS PVT LTD (1984-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019 PH :9168662302.

Dealer Network (AS ON 31.10.2023)

1581. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH :8888874980.
1582. WONDER CARS PVT LTD (1903-03), PLOT NO.2/1 BLOCK F2, MIDC, PIMPRI, PUNE. - 411018 PH :020-46608888.
1583. SAI SERVICE PRIVATE LIMITED (1901-07), 4/A/1A, 1/3 A, SALUNI VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. - 411048 PH :9923208358.
1584. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016 PH :8888842887.
1585. CHOWGULE INDUSTRIES PVT. LTD. (1908-05), 120/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033 PH :020-67915700.
1586. SAI SERVICE PRIVATE LIMITED (1901-08), SURVEY NO. 37, HISSA NO. 0, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT - PUNE, MAHARASHTRA. - 411 041 PH :9923208312.
1587. KOTHARI AUTO WHEELS PVT LTD (1984-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028 PH :8411002005, 8087060432.
1588. CHOWGULE INDUSTRIES PVT. LTD. (1908-06), SR. NO. 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE- SATARA ROAD, PUNE. - 411009 PH :020-67273200.
1589. EXCELL AUTOVISTA PVT LTD (1917-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE - WADKI, TAL - HAVELI, DIST PUNE. - 412308 PH :9594632888/9146052651.
1590. KOTHARI AUTO WHEELS PVT LTD (1984-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH :8411003631.
1591. ACE KUDALE CAR PVT. LTD. (1910-03), SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA - HAVELI, DISTRICT - PUNE. - 412105 PH :7767814381.
1592. SUMANKIRTI CARS PVT. LTD. (1915-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH :9551990106.
1593. MY CAR (PUNE) PVT. LTD. (1918-01), GAT NO. 625 HISSA NO. 1/3/1, VILLAGE - KURULI, TALUKA - KHED, CHAKAN, DISTRICT - PUNE. - 410501 PH :7755900000.
1594. WONDER CARS PVT LTD (1903-04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALA, TALUKA - MULSHI, DANDWAD CHOKW, PUNE - 411 033 - 411033 PH :7887883311.
- PUNE (LOHEGAON)**
1595. MAHALAXMI AUTO (1912-05), LANE NO 9, SANT NAGAR, BEHIND IOCL PETROL PUMP, LOHEGAON, PUNE, MAHARASHTRA-411047 - 411047 PH :8956045026.
- RAHATA**
1596. KANKARIYA AUTOMOBILES PVT. LTD. (ZV03-01), SHIRDI ROAD, SAKORI, RAHATA, - 423107 PH :8275033313.
- RAHURI**
1597. KANKARIYA AUTOMOBILES PVT. LTD. (COZI-01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH :9420036767.
- RAJAPUR**
1598. JAGRUT MOTORS PVT LTD (AHAI-01), SURVEY NO.14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702 PH :9627632363/8806665572.
- RAJGURUNAGAR**
1599. MY CAR (PUNE) PVT. LTD. (CBZ1-01), SURVEY NO.94, SANDBORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH :9112235153.
- RAMTEK**
1600. SEVA AUTO (BTU1-01), MOUZA NO 275, P.H NO 24, GRAM PANCHAYAT - MANSAR, TEHSIL - RAMTEK, DISTRICT - NAGPUR, MAHARASHTRA. - 441401 PH :7758028606.
- RATNAGIRI**
1601. JAGRUT MOTORS PVT LTD (G301-01), D-25, MIDC MIROLE, MAHARASTRA, RATNAGIRI - 415639 PH :2352228380/9130013172.
- ROHA**
1602. EXCELL AUTOVISTA (COS1-01), SHOP NO. 1 & 2, PANCHARTANA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109 PH :9209200073.
- SANGAMNER**
1603. SHAAN CARS PRIVATE LIMITED (HE03-01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605 PH :02425-259197.
- SANGLI**
1604. CHOWGULE INDUSTRIES PVT. LTD. (J102-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH :9850966805.
1605. SIDDIH WHEELS (J104-01), SR. NO. 917/2/B, SANGLI MIRAJ ROAD, MIRAJ, DISTRICT - SAGLI. - 416410 PH :937127001, 0233-2211610/1620/1630.
- SANGOLA**
1606. CHAVAN MOTORS DIVISION INDIA PVT LTD (CUE1-01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA - SANGOLA, DIST.-SOLAPUR. - 413307 PH :8806665691.
- SASWAD**
1607. CHOWGULE INDUSTRIES PVT. LTD. (1908-03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301 PH :0215224450/02115225210.
- SATANA**
1608. SHAAN CARS (BSW1-01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 - 423301 PH :9922969656.
- SATARA**
1609. CHOWGULE INDUSTRIES PVT. LTD. (F303-01), PLOT NO. B-2/OLD MIDC, SATARA - 415002 PH :9011015066/9850966823.
- SAVNER**
1610. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (BTJ1-01), PLOT NO.2, MADANE LAYOUT, MOUZA GUJARKHEDI, NR. INDIAN PETROL PUMP, NAGPUR ROAD, SAVNER DISTT. NAGPUR. - 441107 PH :8888859546.
- SAWANTWADI**
1611. JAGRUT MOTORS PVT LTD (BBL1-01), SHIVSAMBHO APARTMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. - 416510 PH :9970654699, 9689533472.
- SHAHAPUR**
1612. SHIVAM AUTO ZONE (I) PVT. LTD. (BZU1-01), DR. DESHPANDE COMPOUND, NEAR BHATSASA COLONY, VILLAGE - GOTHEGHAR, TALUKA - SHAHIPUR, DISTRICT - THANE, MAHARASHTRA - 421601 PH :7718893483.
- SHAHUWADI**
1613. SAI SERVICE (BFT1-01), GATE NO. 1213, R/AT DONOLI, TALUKA - SHAHWADI, DIST. -KOLHAPUR . - 416 213 PH :9923208446.
- SHILTPATA**
1614. VELOX MOTORS (SGJ1-01), SURVEY NO- 99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTA MANDIR, POST-PADALE, DIST-THANE, PIN-421204. - 421204 PH :8419984188.
- SHIRUR**
1615. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA - 412210 PH :8888837082/9011038682.
- SHIRWAL**
1616. CHOWGULE INDUSTRIES PVT. LTD. (BSD1-01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH :9637399003.
- SHRIRAMPUR**
1617. KANKARIYA AUTOMOBILES PVT. LTD. (LV03-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR . - 413709 PH :9420494543.
- SIKRAPUR**
1618. EXCELL AUTOVISTA PVT LTD (GKJ1-01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST: PUNE, PIN-412208, PUNE - 412208 PH :9146194973.
- SILLOD**
1619. PAGARIYA AUTO PVT. LTD. (2103-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213.

SINNAR

1620. SHAAN CARS PRIVATE LIMITED (3703-03), A-24,
MIDC AREA MALEGAON,SINNAR TAL- SINNER,,
- 422103
PH:02551-230305.

SOLAPUR

1621. CHAVAN MOTORS DIVISION INDIA PVT LTD
(B102-02-), 150, AKALKOT ROAD,OPP. SVCS
HIGH SCHOOL,SOLAPUR, - 413006
PH: 0217-2606666/8805986818.
1622. CHAVAN MOTORS DIVISION INDIA PVT LTD
(B102-01-), 18,39, INDUSTRIAL ESTATE,HOTAGI
ROAD,SOLAPUR, - 413224
PH: 0805778881.
1623. CHAVAN MOTORS DIVISION INDIA PVT LTD
(B102-06-), PLOT NO.95, IND. ESTATE, HOTAGI
ROAD, SOLAPUR. - 413003
PH: 8805986826.

TALASARI

1624. SHIVAM AUTO ZONE (I) PVT. LTD. (BIN1-01-),
SURVEY NO. 19/1 PLOT NO. 5, AT-POST –
VADAVALI, NH-8, TALASARI, THANE,
MAHARASHTRA - 401606
PH: 9355248143/7777002930.

TALEGAON

1625. MY CAR (PUNE) PVT. LTD. (4K01-01-),
SR.NO.113, HISSA NO.1/3/A, MUMBAI PUNE
OLD HIGHWAY, MAVAL, TALEGAON - 410506
PH: 9136855855.

TALOJA

1626. EXCELL AUTOVISTA PVT LTD (AAC1-02-), PLOT
NO-9,MIDC,NAVADE,TALOJA, TAL-PANVEL
,DIST-RAIGAD - 410208
PH: 9136948195/9320357300.

TASGAON

1627. SIDDI WHEELS (A UNIT OF TARALEKAR
MOTORS PVT. LTD.) (GKB1-01-), SHETKARI
MARKET, NEAR ISHA HOTEL,
TASGAON-SANGLI ROAD, TALUKA - TASGAON,
DIST -SANGLI . - 416312
PH: 8275030748.

THANE

1628. FORT POINT AUTOMOTIVE (CARS) PVT. LTD.
(3906-01-), KOTHARI WAREHOUSE NO.
111,POKHRAJ ROAD NO. 11,MANPADA,
CHATLASSAR,THANE - 400607
PH: 9594974656, 8691039873.
1629. NAVNEET MOTORS (3908-02-), B R T PLOT
,THANE (W), MAHARASHTRA - 400607
PH: 9664496732, 9167215178.

1630. VELOX MOTORS (A UNIT OF CARCRAFT
AUTOMOTIVES PVT LTD) (05A3-02-), NEW
SURVEY NO. 17/1/B, NEAR BLUE ROOF CLUB,
VILLAGE - OWALE, GHODBUUNDER ROAD,
THANE (W) - 400615
PH: 8104989847,96536 88455.

TITIWALA

1631. AHER AUTO PRIME (BYP2-01-), SURVEY NO.
23/2, SHOP NO. 3, NEAR GOVELI, TITIWALA
ROAD, GHOTSAI, TITIWALA, PIN-421301,
MAHARASHTRA - 421301
PH: 18008334369.

TUMSAR

1632. AML (SLV-1), GAT NOS. 1350/149 & 1350/150,
VILLAGE TUMSAR, TQ TUMSAR, DIST.-
BHANDARA, STATE-MAHARASHTRA - 441912
PH: 7391075992.

TURBHE

1633. SAI SERVICE (P04-06-), D 42, TTC INDUSTRIAL
AREA, NAVI MUMBAI, PIN-400705 - 400705
PH: 022-26861111/ 9876999060.

ULHASNAGAR

1634. PRAKASH AUTO PVT. LTD. (3903-01-), U
NO-3 SHEET, P.O. 30,VITHALWADI STATION
ROAD, ULHASNAGAR - 421003
PH: 9987902127/9870453155.

URALI KANCHAN

1635. EXCELL AUTOVISTA PVT LTD (GK1-01-), GAT
NO-244, VILLAGE-SORTAPWADI, TALUKA
-HAVELI, URALI KANCHAN, DIST-PUNE,
PIN-412201 - 412201
PH: 8097452280.

VADUJ

1636. CHOWGULE INDUSTRIES PVT. LTD. (F303-03-),
KALEVASTI, VAJDU DAHIWADI ROAD , VAJDU -
415506
PH: 8888866659.

VAJAPUR

1637. PAGARIYA AUTO PVT. LTD. (BNR1-01-), NEAR
SUBHASH BUNGLOW, STATION ROAD,
VAJAPUR, AURANGABAD. - 423701
PH: 9922994237.

VASAI

1638. SAI SERVICE PRIVATE LIMITED (V901-01-),
ANDRADESH BHAVAN, SURVEY #27 A,NEAR
UMELA PHATAK, VASAI (WEST), DIST. THANE,
MAHARASHTRA - 401202
PH: 9167980080/9167980036/9594952211.
1639. SAI SERVICE PRIVATE LIMITED (504-03-), C/O
MR. KENNETH NICHOLAS D'SOUZA, SURVEY
NO-89, SATIVALI ROAD, VILLAGE-WALIV, VASAI
(EAST), DIST-PALGHAR, MAHARASHTRA,
PIN-410208 - 401208
PH: 9167980004/9167980084/9594950000.

VASHI

1640. MY CAR (PUNE) PVT. LTD. (05A4-01-), A-751/2,
MIDC TTC, TURBHE MAHAPE ROAD, PAWANE,
NAVI MUMBAI - - 400 071
PH: 8104906953, 9372802861, 9326713481.

VELHE

1641. SUMANIKIRTI CARS (SLO1-01-), MAUZA
NO-492/2, A/P-VELHA, TAL- VELHA,
DIST-PUNE-412212 - 412212
PH: 8554981603/8550995444.

VIKRAMGADH

1642. SHIVAM AUTOZONE (SKV1-01-), NEAR
GOVERNMENT DISPENSARY HOSPITAL,
DAHANU ROAD, TEHSIL-VIKRAMGADH,
DIST-PALGHAR-401605 - 401605
PH: 8082551080.

VIRAR

1643. SAI SERVICE PRIVATE LIMITED (V901-02-),
SURVEY NO.16, AGASHI ROAD, PADMAN
NAGAR, VIRAR-WEST, DISTT. PALGHAR. -
401301
PH: 9594952343/9167980036/9594952211.

VITA

1644. CHOWGULE INDUSTRIES PVT. LTD. (BSE1-01-),
S NO. 900, HISSA NO. 1.2/3/2, SANGLI VITA
ROAD, VITA, TALUKA - KHANAPUR, DISTRICT –
SANGLI, MAHARASHTRA - 415311
PH: 8888870120.

WAGHOLI

1645. SAI SERVICE PRIVATE LIMITED (1901-04-), GAT
NO 2406/1440, VILLAGE- WAGHOLI,TAL- HAVELI,
DIST- PUNE - 412207
PH: 9923208313/9923208221/9923208133.

WAI

1646. CHOWGULE INDUSTRIES PVT. LTD. (BYC1-01-),
GAT NO. 407, A/P SHENDURJANE, MIDC ROAD,
NEAR HOTEL GANDHARVA, OPP. DHOM LEFT
CANAL, TAL - WAI, DISTT. SATARA - 412803
PH: 83800080501.

WALUJ

1647. PAGARIYA AUTO PVT. LTD. (2103-03-),
E-16,WALUJ,AURANGABAD - 431001
PH: 9860999466.

WARANAGAR

1648. SAI SERVICE PRIVATE LIMITED (CRB1-01-), GAT
NO:112/2A, KODOLI, TALUKA: PANHALA, DIST.
KOLHAPUR - 416114
PH: 9923204173.

WARDHA

1649. SEVA AUTOMOTIVE LTD. (2002-02-), GOPURI
CHOWK, OPP. BANK OF INDIA COLONY,
NAGPUR ROAD, WARDHA - 442001
PH: 07152-253545/253525.

1650. SEVA AUTOMOTIVE PVT. LTD. (2002-05-), PLOT
NO. 177, WARDHA-NAGPUR HIGHWAY, AT
PAVNAR, TEHSIL - WARDHA, DIST- WARDH,
PIN:442111, MAHARASHTRA - 442111
PH: 7720009444.

WARUD

1651. ASPA BANDSONS AUTO PVT. LTD. (F201-04-),
SURVEY NO. 503, SETURJANAGHAT ROAD,
TALUKA: WARUD, DIST. AMRAWATI - 444906
PH: 7248925687.

WASHIM

1652. ASPA BANDSONS AUTO PVT. LTD. (F201-02-),
NEAR RAILWAY CROSSING,HIGOLI
ROAD,WASHIM, - 444505
PH: 9922500981/ 9146191534.

YAVATMAL

1653. HIMALAYA CARS (4M01-01-), OPPOSITE RAUT
PETROL PUMP, DARWHA ROAD, YAVATMAL,
MAHARASHTRA - 445001
PH: 07232-249991.

YEOLA

1654. SEVA AUTOMOTIVES PVT LTD (BST1-01-), GAT
NO. 65-A, PLOT NO. 41, AHMED
NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE,
YEOLA, TALUKA - YEOLA, DISTRICT - NASHIK,
MAHARASHTRA. - 423401
PH: 9130033944.

YEWAT

1655. MAHALAXMI AUTOMOTIVES PVT. LTD.
(AZA1-01-). SOLAPUR PUNE NATIONAL
HIGHWAY, SAHAJAPUR, YEWAT, TALUKA:
DAUND, DIST: PUNE (MAHARASHTRA) -
412202
PH: 8308818946.

MANIPUR**BISHNUPUR**

1656. EASTERN MOTORS (CSA1-01-), BISHNUPUR
BAZAR, TIDIM ROAD, BISHNUPUR DISTT.
MANIPUR - 795126
PH: 8415945626.

CHANDEL

1657. EASTERN MOTORS (CSB1-01-), KAKCHING
LAMKHA, AH1 (INDO BURMA ROAD), CHANDEL
(MANIPUR) - 795103
PH: 8415945626.

CHURACHANDPUR

1658. EASTERN MOTORS (B8E1-01-), HMUA
VENG, TEDDIM ROAD, CHURACHANDPUR,
MANIPUR - 795126
PH: 03874235969, 9862555472.

IMPHAL

1659. EASTERN MOTORS (7401-01-), CHINGMEIRONG
EAST, IMPHAL, MANIPUR - 795 001
PH: 8415945626.

Dealer Network (AS ON 31.10.2023)

1660. EASTERN MOTORS (7401-02), NH.39,
CHINGMEIRONG, WEST, IMPHAL - 795010
PH :8415945626.

1661. SAMADON ENTERPRISE (7402-01), 82 GHARI
MAKHA LEIKAI, IMPHAL WEST, MANIPUR - 795
140
PH :7005987123.

JIRIBAM

1662. EASTERN MOTORS (SMG1-01), AT HILGHAT,
IMPHAL SILCHAR ROAD, JIRIBAM - 788104
PH :8415945626.

SENAPATI

1663. EASTERN MOTORS (CNN1-01), DIST.-COUNCIL
(POULEA) VILLAGE, P.O. - SENAPATI,
SENAPATI, MANIPUR - 795 106
PH :8415945626.

THOUBAL

1664. EASTERN MOTORS (BJL1-01), THOUBAL
ATHOKPAM KHUNOU, NEAR D.C. OFFICE
COMPLEX, THOUBAL, MANIPUR - 795138
PH :9862662225.

UKHRUL

1665. SAMADON ENTERPRISE (SCK1-01),
KAMPHASOM, UKHRUL, MANIPUR - 795142
PH :9774216305.

MEGHALAYA

BHAITBARI

1666. RANI MOTORS (-), NEW BHAITBARI, WEST
GARO HILLS, MEGHALAYA, (PATT NO - 89
SONG - NEKEKONA, MOZU NO - VI - 3 LOT) -
794104
PH :8638220312.

BHOIRYMBONG

1667. RANI MOTORS (CHP1-01), VILLAGE - UMROI
MADAN, DISTRICT - RI BHOI, MEGHALAYA. -
793103
PH :9774478281.

JOWAI

1668. RANI MOTORS (3I01-01), LADTHADLABHO,
OPP. PWD OFFICE, JOWAI, DIST - JAINTIA
HILLS, MEGHALAYA - 793150
PH :708549525.

KHLEHRIAT

1669. BANALARI WORLD CARS (8502-03),
JOWAI-SICHAR ROAD, MEGHALAYA,
KHLEHRIAT - 793150
PH :7005757760/7005569550.

MAWKYRWAT

1670. RANI MOTORS (CGR1-01), DAK BANGLA,
MAWKYRWAT, WEST KHASI HILLS, MEGLAYA
- 793114
PH :9856005544.

MAWNGAP

MAWNGAP

1671. BANALARI WORLD CARS (CBK1-01),
LAITYNTER, SHILLONG NONGTONG ROAD,
MAWNGAP, DIST.-EAST KHASI HILLS,
MEGHALAYA. - 793121
PH :7005757760/7005569550.

MOIRANG

1672. SAMADON (SLD1-01), MOIRANG LAISHANGBAM
LEIKAI, PO AND PS: MOIRANG, DIST-
BISHNUPUR, MANIPUR - 795133
PH :7005987122.

MYLLIEM

1673. BANALARI WORLD CARS (CSK1-01),
MADANING SYIEM, MYLLIEM, SHILLONG
CHERRAPUNJI ROAD, DISTT: EAST KHASI
HILLS, MEGHALAYA. - 793009
PH :7005757760/7005569550.

NONGPOH

1674. RANI MOTORS (8501-05), NEAR D.T.O. OFFICE,
G.S. ROAD, NONGPOH, RIBHOI DISTT. -
793102
PH :9774478281.

NONGSTON

1675. RANI MOTORS (8501-04), OPP.IRANI PETROL
PUMP, NEW NONGSTEIN, DISTRICT-WEST
KHASI HILLS, MEGHALAYA - 793119
PH :9856005544.

PYNURSULA

1676. BANALARI CAR WORLD (CBJ1-01),
PHLANGSHLAIN MAIN ROAD, SHILLONG DAWKI,
PYNURSLA, DISTRICT - EAST KHASI HILLS,
MEGHALAYA - 793110 - 793110
PH :8415942700.

SHILLONG

1677. RANI MOTORS (8501-01), SUNNY HILLS,
GARIKHANA, G.S.ROAD, SHILLONG - 793014
PH :9862099400.

1678. RANI MOTORS (8501-02), MAWBLEI, NH-44,
SHILLONG JOWAI ROAD, MEGHALAYA. - 793021
PH :8014734780.

1679. BANALARI WORLD CARS (8502-01), MAWLAI
NONGKWAR, G.S. ROAD, SHILLONG - 793017
PH :7005757760/7005569550.

TURA

1680. RANI MOTORS (CLF1-01), AGILLANGRE,
ARAIMILE, PO NEW TURA, TURA - 794101
PH :7005563791.

UMSAW

1681. BANALARI WORLD CARS (CHZ1-01),
UMSAWKHWA RI RAID MAWBH, MYLLIEM
SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. -
793123
PH :7005757760/7005569550.

MIZORAM

AIZAWL

1682. G.I.G. MOTORS (9103-01), EDENTHAR, AIZAWL,
MIZORAM. - 796001
PH :8974559065.

LUNGLEI

1683. GIG (YS01-01), RAMTHAR VILLAGE, LUNGLEI,
DISTRICT-LUNGLEI, MIZORAM - 796701
PH :8974559065.

MP

BHANPURA

1684. PATEL MOTORS (-), GAROTH RD., BHANPURA,
MADHYA PRADESH - 458775 - 458775
PH :9826360699.

BHOPAL

1685. SRISATYA SAI AUTOMOBILES PVT. LTD.
(310-01), RAJENDRA PRASAD BHAWAN
PARSHAR, INFRONT OF OLD VIDHAN SABHA
BUILDING, PO - JAHANGIRABAD, MALVIYA
NAGAR, BHOPAL, DISTRICT - BHOPAL,
MADHYA PRADESH - 462008 . - 462008
PH :7415862390.

BICHHIYA

1686. MAA GAYATRI AUTOMOBILES (SMK1-01),
SALPURA ROAD, ATRU, NEAR DEPUTY OFFICE,
PIN-325218, RAJASTHAN - 481995
PH :9303143327.

NAINPUTUR

1687. STANDARD MOTOCORP PVT LTD (SEZ2-01),
MANU SAHU, MANDLA ROAD, NEAR MPEB
OFFICE, ADJOINING TO BAJAJ SHOW ROOM,
NAINPUTUR, DISST MANDLA, MADHYA PRADESH
-481776 . - 481776
PH :7771003374.

NIWAS

1688. STANDARD MOTOCORP (-), OPP. INDIAL OIL
PETROL PUMP, NIWAS , DISTRICT MANDLA,
MADHYA PRADESH - 483001. - 483001
PH :7800806222.

NAGALAND

DIMAPUR

1689. PROGRESSIVE MOTORS (3201-01), OPPOSITE
AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD,
DIMAPUR - 797112
PH :7005254089.

KOHIMA

1690. SEYIE AUTO (4N02-01), TSIECIE, NH-29, PHEK
ROAD, KOHIMA, NAGALAND - 797001
PH :7005867051.

MOKOKCHUNG

1691. PROGRESSIVE MOTORS (CGL1-01),
SUNGKONLEN ROAD, MOKOKCHUNG,
NAGALAND . - 798601
PH :8787732534.

WOKHA

1692. PROGRESSIVE MOTORS (SFH1-01), NIOPEN
COLONY, WOKHA-797111, NAGALAND - 797111
PH :9774070707.

NEW DELHI

DELHI (GTK)

1693. DD MOTORS (A DIVISION OF D.D. PREM
PVT LTD.) (08F2-02), GROUND FLOOR, PLOT
NO. C-7, SMA CO-OPERATIVE INDUSTRIAL
AREA, GTK ROAD, AZADPUR, PIN-110033,
DELHI - 110033
PH :9873187388.

NEW DELHI

1694. COMPETENT AUTO (806-08), 43/12,
NAJAFGARH BAHUDARGARH ROAD, NEW ANAJ
MANDI, NEAR JAAT BHAWAN, NAJAFGARH,
PIN-110043, DELHI - 110043
PH :8750700420.

ODHISA

ATTAGARH

1695. TUSHI (SLZ1-01), KHATA NO 212/420.MOUZA
:BAKISHOREPUR ATHAGARH, DISTRICT:
CUTTACK - 754029
PH :7504890838.

ODISHA

ANANDAPUR

1696. JYOTE MOTORS PVT LTD (CIU2-01), KHATA
NO. 246/407, PLOT NO. 76, P.S. - GHASIPURA,
MOUZA - SUDUSUDIA, DISTRICT - KEONJHAR,
ANANDPUR, ODISHA . - 758021
PH :7381028525.

ANGUL

1697. ODYSSEY MOTORS PVT LTD (W101-01), AT/PO
KULAD (NEAR NALCO CPP PLANT), KANDASAR,
NALCO NAGAR, ANGUL (DISTT: ANGUL). -
759145
PH :9439817308.

BALASORE

1698. JYOTE MOTORS (BALASORE) PVT. LTD
(L501-01), PLOT NO. 276,
GANESHWARPUR-NH-5, POST-JANUGANJ VIA
REMUNA, DIST.-BALASORE - 756019
PH :7381072600.

BALUGOAN

1699. JYOTE MOTORS (CWG1-01), .M/S PLOT NO
758/31,KHATA NO
350/30.MOUZA-GOBARDHANPUR,BALUGAON,
DISTRICT-KHORDA,ODISHA-752030 - 752030
PH :9776615001.

BAMRA

1700. ODYSSEY MOTORS (SIA1-01), M/S ODYSSEY MOTORS,NEAR SATSANG KENDRA, DUMERMUNDA COLLEGE ROAD, BAMPRA,GOVINDPUR-768221 - 768221 PH :9439314464.
- BARGARH**
1701. ODYSSEY MOTORS PVT LTD (D401-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028 PH :8908944206.
- BARIPADA**
1702. JYOTE MOTORS (BALASORE) PVT. LTD (L501-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001 PH :7381072624.
- BERHAMPUR**
1703. SKY AUTOMOBILES (E203-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002 PH :9776126600.
1704. SKY AUTOMOBILES (E203-02), PLOT NO. 876, WESTERN ROAD NH-5, KONISI HATO, VILLAGE - KONISI, BERPAMORE, GANJAM, ODISHA - 761008 PH :7381266000.
- BHADRAK**
1705. JYOTE MOTORS (BALASORE) PVT. LTD (I201-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK , ODISHA - 756101 PH :9776345311.
- BHAWANIPATNA**
1706. LEGEND CARS PVT. LTD. (SW01-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001 PH :9937198684.
- BHUBANESWAR (NAYAPALLI)**
1707. JYOTE MOTORS PVT LTD (405-01), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-751003 - 751003 PH :7381028525.
- BHUBANESWAR**
1708. NARAYANI MOTORS PVT. LTD. (403-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006 PH :9583022031.
1709. JYOTE MOTORS PVT LTD (402-01), A-62, NAYAPALLI NEAR CRPF SQUARE, BHUBANESWAR - 751003 PH :7064493302.
1710. SKY AUTOMOBILES (404-01), PLOT NO. -435/1866, NEAR KIIT SQUARE PATIA, BHUBANESHWAR - 751022 PH :8117829611.
1711. NARAYANI MOTORS PVT. LTD. (403-02), PLOT NO 56 & 57,RASULGARH, BHUBANESHWAR, ODISHA - 751010 PH :9583022246.
1712. JYOTE MOTORS PVT LTD (402-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR - 751010 PH :7978910223.
1713. SKY AUTOMOBILES (404-02), KHATA NO. 457/675, PLOT NO. 543, 756, 789 AND 546, SRIVIHIAR, INFRONT OF IOC OFFICE, P.S. -CHADRASHEKARPUR, BHUBANESHWAR, ODISHA - 751 024 PH :7440011604.
- BOLANGIR**
1714. ODYSSEY MOTORS PVT LTD (D401-03), NH-201, MADHIAPALI, SAMBALPUR ROAD, BOLANGIR, ORISSA - 767001 PH :8895418122.
- CHANDIKHOLE**
1715. SKY AUTOMOBILES (BXL1-01), PLOT NO.285/3, SHANTI MANDAP MOUZA-SUNGUDA, TEHSIL-DARAPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA, - 755044 PH :9776645798.
- CUTTACK**
1716. SKY AUTOMOBILES (6701-02), BHANPUR, NH-5, CUTTACK - 753011 PH :9776645798.
1717. TUSHI MOTORS PVT. LTD. (6702-01), PLOT NO. C-14, PLOT NO.C-13, INDUSTRIAL ESTATE ,KHAPURIA,TAHASIL - CUTTACK SADAR ,CUTTACK DISTRICT,BHUBANESWAR - 753001 PH :9692912345.
- DEOGARH**
1718. ORBIT MOTORS PVT. LTD. (CBB1-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108 PH :9437607865.
- DHENKENAL**
1719. SKY AUTOMOBILES (6701-04), PLOT NO-136/1103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKANAL - 759001 PH :7440025919.
- GANDAI**
1720. SPARSH AUTOMOBILES (SHU1-01), M/S SPARSH AUTOMOBILES, WARD NO - 7, NEAR KRISHI UPAJ MANDI, GANDAI RAJNANDGAON ROAD,GANDAI - 491888 - 491888 PH :9926626662.
- JAGATSINGHPUR**
1721. NARAYANI MOTORS PVT. LTD. (CFM1-01), KHATA NO. 827/221 & 827/222, PLOT NO. 1197 & 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSINGHPUR, ODISHA - 754103 PH :9556511213.
- JAJPUR**
1722. SKY AUTOMOBILES (6701-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019 PH :9583011010.
- JALESWAR**
1723. JYOTE MOTORS (BALASORE) PVT. LTD (BXPI-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.- BALASORE, ODISHA, - 756032 PH :7381072600.
- JEYPORE**
1724. LEGEND CARS PVT. LTD. (SW01-03), SOURAGUDA,JEYPORE,DISTT-KORAPUT,ORISSA INDIA - 764001 PH :9437575188.
- JHARSUGUDA**
1725. ODYSSEY MOTORS PVT LTD (BJU1-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBALAH P.S. JHARSUGUDA, ORISSA - 762801 PH :9439548823.
- KEONJHAR**
1726. JYOTE MOTORS PVT LTD (7U01-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001 PH :7064499047.
- NAYAGARH**
1727. JYOTE MOTORS PVT LTD (402-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069 PH :7064499048.
- NIMPARA**
1728. NARAYANI MOTORS PVT. LTD. (CFL1-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT - PURI, ODISHA - 752106 PH :7381093622.
- PALLAHARA**
1729. ODYSSEY MOTORS PVT LTD (CHV1-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA - 759119 PH :9439817308.
- PARADEEP**
1730. NARAYANI MOTORS PVT. LTD. (OE01-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. - 754141 PH :9583022020.
- PARLAKHEMUNDI**
1731. SKY AUTOMOBILES (CLG1-01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211 PH :9776999977.
- PURI**
1732. NARAYANI MOTORS PVT. LTD. (4Q01-01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAO, PURI, ODISHA - 752002 PH :9583022220.
- RAIRANGPUR**
1733. JYOTE MOTORS (BALASORE) PVT. LTD (CES1-01), PLOT NO.107/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046 PH :7064499936.
- RAYAGADA**
1734. LEGEND CARS (YB01-01), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001 PH :7008771180.
- ROURKELA**
1735. ORBIT MOTORS PVT. LTD. (8701-01), VEDVIYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041 PH :9437061040.
- SAMBALPUR**
1736. ODYSSEY MOTORS PVT LTD (D401-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH :7381083571.
1737. APARNA MOTOR (A UNIT OF APARNA VAHAN) (D402-01), PLOT NO 969/4497,PANCHGACHIA SAMBALPUR - 768019 PH :8260966698.
1738. ODYSSEY (D401-05), ODYSSEY MOTORS, AINTHAPALI, SAMBALPUR - 768004 PH :9692200963.
- SORO**
1739. JYOTE MOTORS (SQF1-01), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE. - 756045 PH :9776615001.
- SUBARNAPUR**
1740. ODYSSEY MOTORS PVT LTD (BUK1-01), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNAPUR, ODISHA - 767017 PH :8895418122.
- SUNDERGARH**
1741. ORBIT MOTORS PVT. LTD. (BWJ1-01), M/S ORBIT MOTORS, AT -PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH :8249354447.

Dealer Network (AS ON 31.10.2023)

TANGI

1742. SKY AUTO (SKM1-01-), KHATA NO 731/18, PLOT NO,107,CHAMPAGARH NH 5,TANGI, DISTRICT – KHORDHA, - 752023
PH :9776900333.

UDALA

1743. JYOTE MOTORS (BALASORE) PVT. LTD (CHW1-01-), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST-MAYURBHANJ, ODISHA. - 757041
PH :8249877935.

ODISHAN

NIRGUNDI

1744. NARAYANI (403-04-), KHATA NO 251/255, PLOT NO 233,MALGOWDINI-MOUZA BLITERUA, NIRGUNDI,DISTRICT-CUTTACK, ORISSA. - 754025
PH :9583001877.

ORISSA

BHUBANESWAR

1745. NARAYANI (403-03-), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUBANESHWAR - 751025
PH :9583001877.

KENDRAPARA

1746. JYOTE MOTORS (SF1-01-), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. - 754206
PH :9776615001.

KUCHINDA

1747. ODYSSEY MOTORS (SLN1-01-), S/O ODYSSEY MOTORS, PLOT NO 146,KHATA NO 76/9,MOUZA-KUNDAPOSHI,NEAR KUNDESHWAR MANDIR,KUCHINDA,SAMBULPUR. - 768222
PH :9439314464.

PADAMPUR

1748. ODYSSEY MOTORS (SFB1-01-), M/S ODYSSEY MOTORS, CHARPALI,PADAMPUR, NEAR REGENCY HOTEL,DISTRICT:BARGARH, ORISSA - 770039
PH :9439314464.

PUDUCHERRY

KARAikal

1749. SHENBAKA CARS PVT. LTD. (CCF1-01-), R. S. NO. 173/PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAikal NAGORE MAIN ROAD, VILLAGE - ODUTHRARI REVENUE, NERAVY COMMUNE, KARAikal MUNICIPALITY, KARAikal. - 609602
PH :04368-227800/12.

MADAGADIPET

1750. SHENBAKA CARS PVT. LTD (CUD1-01-), SURVEY NO. 129/4/A2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605 107
PH :8220046178.

PONDICHERRY

1751. SHENBAKA CARS PRIVATE LIMITED (6601-01-), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010
PH :0413-2293391/92/93.

PUNJAB

ABO哈尔

1752. TARA AUTOMOBILES (ABO哈尔) (H501-01-), SHRIE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABO哈尔, PUNJAB - 152116
PH :9876047847.

ADAMPUR

1753. LOVELY AUTOS (CHA1-01-), KHASRA NO.10/7/1, JALANDHAR-HOSHPIUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102
PH :8288050777.

AJNALA

1754. SWANI MOTORS PVT. LTD. (CBP1-01-), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102
PH :8872001731.

AMRITSAR

1755. SWANI MOTORS LTD. (1701-01-), 81,COURT ROAD, AMRITSAR - 143001
PH :9877482175, 8872000000.
1756. JAYCEE MOTORS (1704-01-), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006
PH :9780038335.

1757. RISHABH FOURWHEELS PVT. LTD. (1703-01-), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004
PH :9914841577.

ANANADPUR SAHIB

1758. CM AUTOSALES PVT. LTD. (OF01-01-), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANADPUR SAHIB,TEHSIL ANANADPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123
PH :9915022297.

APRA

1759. LOVELY AUTOS (CWV1-01-), SAMRAI CHOWK PHILLAU ROAD, VILLAGE - APRA, TEHSIL - PHILLAU, DIST.-JALANDHAR, STATE - PUNJAB. - 144416
PH :9915020515.

AUR

1760. LOVELY AUTOS (CVY1-01-), KHATUNI NO. 479/588, KHASRA NO. 27/2004(2-18), 21/2(2-10), VILLAGE - AUR, TEHSIL - NAWSHAR, DIST. -SBS NAGAR, STATE - PUNJAB. - 144417
PH :9915020510.

BAGHA PURANA

1761. REMIRA MOTORS PVT. LTD. (BAH2-01-), BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038
PH :7087025009.

BALACHAUR

1762. LOVELY AUTOS (XV01-01-), NEAR MCDONALD – GHUGGI JUNCTION, VPO-GARHI KANUGO, NAWSHANSHAR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWSHANSHAR) - 144521
PH :9878427910.

BALBEHRA

1763. HIRA AUTOWORLD (SOG1-01-), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA - 147101
PH :9888341118.

BANGA

1764. LOVELY AUTOS (3503-03-), NAWSHEHAR-JALANDHAR ROAD, BANGA - 144505
PH :9915028625.

BANUR

1765. TRICITY AUTOS PVT. LTD. (BRT1-01-), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601
PH :9988882330.

BARNALA

1766. MAX AUTOMOBILES (4S02-01-), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001
PH :285022, 9216529220.

BATALA

1767. PATHANKOT VEHICLEADES PVT. LTD. (A701-05-), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505
PH :9417900850 , 9417900918.

BEGOWAL

1768. MARWAHA AUTOS (BHF2-01-), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO, BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621
PH :9779166004.

BHADSON

1769. HIRA AUTOMOBILES LTD (BAG1-01-), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202
PH :9217048236, 9217048250.

BHAGTA BHAI KA

1770. TARA AUTOMOBILES (BHG1-01-), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT - BHATINDA. - 151206
PH :8437030666.

BHATINDA

1771. TARA AUTOMOBILES (BHT1-01-), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001
PH :0164-2235349, 50.

BHIKHWIND

1772. RISHABH FOURWHEELS PVT. LTD. (BPK1-01-), KHASRA NO. 673/2, 4/1, 7/2, 8/1, 8/2, PIND BHIKHWIND, TEHSIL - PAITI, DISTRICT - TARN TARAN, PUNJAB. - 143303
PH :9914708577.

BHOPUR

1773. LOVELY AUTOS (BRU2-01-), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOPUR - 144201
PH :9872030006.

BHULATH

1774. LOVELY AUTOS (CHB1-01-), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT - KAPURTHALA, PUNJAB. - 144622
PH :9876541065, 8288050777.

BILGA

1775. LOVELY AUTOMOBILES (SPM1-01-), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLLAUR, JALANDHAR. - 144036
PH :9815069814.

CHUNNI KALAN

1776. HOSHIARPUR AUTOMOBILES (CFG1-01-), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGHAR SAHIB - 140307
PH :248005, 9815131766.

DASUYA

1777. HOSHIARPUR AUTOMOBILES (H402-04-), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205
PH :9815131766, 9872312371.

DERABASSI

1778. AUTOPACE NETWORK PVT LTD (705-02-), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507
PH :9815011669.

DEVIGARH

1779. HIRA AUTOMOBILES LTD (OG1-01-), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111
PH :8872034118, 9217048250.

DHILWAN

1780. MARWAHA AUTOS (SGU1-01), MIANI BAKPUR,AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA - 144804 PH :9779166004.
- DORAH**
1781. GULCAR MOTORS (OC02-01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAH, DISTT. LUDHIANA, PUNJAB. - 141421 PH :9814191122.
- FARIDKOT**
1782. MAPSKO AUTO INDIA PVT. LTD. (4U02-01), FARIDKOT - KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204 PH :01639-264001,7347000520.
- FATEHGARH CHURIAN**
1783. PATHANKOT VEHICLEADES PVT. LTD. (BA01-01), KHASRA NO. 17 R. DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSIL - BATALA, DIST.-GURDASPUR, STATE - PUNJAB. - 143 602 PH :9871900850 , 9875930180.
- FAZILKA**
1784. TARA AUTOMOBILES (H501-03), NH-10, NEAR SARHWITKARI BAL VIDYA MANDIR, FAZILKA - 152116 PH :9876047647.
- FEROZEPUR**
1785. BABU AUTOS (7C01-01), MOGA ROAD, FEROZEPUR CANTT - 152002 PH :8872013211.
- GARHSANKAR**
1786. HOSHIARPUR AUTOMOBILES (H402-02), OPP. COURT, CHANDIGARH ROAD, GARHSANKAR, DIST. HOSHIARPUR - 144527 PH :9815131766, 9781543131.
- GHANAUR**
1787. HIRA AUTOWORLD LLP (CVX2-01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAIPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401 PH :9217048437.
- GHAROTA**
1788. PATHANKOT VEHICLEADES (SFF1-01), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT - 143533. - 143533 PH :8264105000.
- GHOMAN**
1789. PATHANKOT VEHICLEADES PVT. LTD. (CUL1-01), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11/25 (7-18), VILLAGE - BALRAMPUR ADDA, KHASBA - GHOMAN. - 143514 PH :8054500130.
- GIDDARBHA**
1790. HIRA AUTOMOBILES LTD (AUA1-01), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBHA, DISTT. SRI MUKSAR SAHIB (PUNJAB) - 152101 PH :231510, 9217048250.
- GORAYA**
1791. LOVELY AUTOS (BJR1-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH :9417804049.
- GURDASPUR**
1792. PATHANKOT VEHICLEADES PVT. LTD. (A701-01), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521 PH :9419008070 , 9878050710.
1793. PATHANKOT VEHICLEADES PVT. LTD. (A701-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH :9417900870.
- HOSHIARPUR**
1794. HOSHIARPUR AUTOMOBILES (H402-01), SINGIRWALA, JALLANDHAR ROAD, HOSHIARPUR. - 146001 PH :9815131766, 9878632537.
- JAGRAON**
1795. SANDHU AUTOMOBILES (6206-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :8437025969.
- JAITU**
1796. MAPSKO AUTO INDIA PVT. LTD. (YX02-01), NEAR CANAL, BATHINDA ROAD, JAITU, DISTRICT - FARIDKOT. - 151202 PH :7347000520.
- JALALABAD**
1797. TARA AUTOMOBILES (H501-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH :9876047847.
- JALANDHAR**
1798. LOVELY AUTOS (3503-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :9915020515.
1799. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (3506-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH :9779166004.
1800. LOVELY AUTOS (3505-01), KHASRA NO. 24/204, B D ENCLAVE, VILLAGE - JALANDHAR, DIST. JALANDHAR, PUNJAB. - 144001 PH :9876044001, 9915020515.
- JANDIALA GURU**
1801. BABA AUTOS (7C01-03), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115 PH :8872013029.
- JANDIALA MANJKI**
1802. LOVELY AUTOS (BJS1-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE - JANDIALA MANJKI, TEHSIL - NOORMAHAL, DISTRICT - JALANDHAR, PUNJAB. - 144033 PH :7087439797.
- KAHNUWAN**
1803. PATHANKOT VEHICLEADES PVT. LTD. (CGM1-01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. - 143528 PH :8288993301.
- KALA SANGHIANI**
1804. MARWAHA AUTOS (SPL1-01), MAIN CHOWK, KALA SANGHIANI, DISTRICT KAPURTHALA, PUNJAB - 144623 PH :9779166004.
- KALANAUR**
1805. PATHANKOT VEHICLEADES (SJ1-01), KALANAUR-GURDASPUR ROAD, VILLAGE KALANAUR, TEHSIL AND DISTRICT GURDASPUR, PUNJAB - 143512 PH :9417900879.
- KAPURTHALA**
1806. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (4Z02-01), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602 PH :9779166004.
- KATHU NANGAL**
1807. JAYCEE MOTORS (CSP2-01), KHASRA NO.12/20/2, 21/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502 PH :9780038335.
- KHANNA**
1808. HOSHIARPUR AUTOMOBILES (N302-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST-LUDHIANA, PUNJAB. - 141401 PH :9888716261.
- KHARAR**
1809. CM AUTOSALES PVT. LTD. (7K01-03), NH-95, MORINDA ROAD,KHANPUR, KHARAR, DIST. MOHALI - 140301 PH :9915022878.
- KILANWALI**
1810. HIRA AUTOMOBILES LTD (BFV1-01), GT ROAD (NH-09), NEAR GURU NANAK COLLEGE, KILANWALI, TEHSIL - MALOUT, DISTRICT - MUKTSAR SAHIB. - 152107 PH :8872034131.
- KOTKAPURA**
1811. MAPSKO AUTO INDIA PVT. LTD. (BIS2-01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT - FARIDKOT - 151204 PH :7347000518.
- LALRU**
1812. AUTOPACE NETWORK PVT LTD (BRJ1-01), VILLAGE - LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501 PH :9815011669.
- LUDHIANA**
1813. GULZAR MOTORS LTD. (6204-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003 PH :9814160099.
1814. SANDHU AUTOMOBILES (6206-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141203 PH :9815600095.
1815. LIBRA AUTO CAR CO. LTD (6207-01), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020 PH :0160-2512701, 03.
1816. LIBRA AUTO CAR CO. LTD (6207-02), G.T. ROAD, NEAR AIRPORT, LUDHIANA. - 141020 PH :0160-25035130.
1817. LOVELY AUTO (6209-01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA - 141001 - 140101 PH :9875928451, 9875928450.
1818. LOVELY AUTOS (6209-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB - 141003 PH :9815098914.
1819. LOVELY AUTOS (6209-03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001 PH :9815098914.
1820. LOVELY AUTOS (6209-04), EURO MART COMPLEX, HAMBRAN ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008 PH :9815098914.
1821. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-01), GT ROAD, OPPOSITE GOYAL HYUNDAI, VILLAGE DHANDHARI KHURD, LUDHIANA, DISTRICT - LUDHIANA, PUNJAB - 141010 PH :8054399990.
- MACHIWARA**

Dealer Network (AS ON 31.10.2023)

1822. HOSHIARPUR AUTOMOBILES (9T03-01-),
SAMRALA ROAD, MACHIWARA, NEAR SHEEVA
MARRIAGE PALACE - 141115
PH : 9875900147.

MAHILPUR

1823. HOSHIARPUR AUTOMOBILES (H402-05-), NEAR
NEW BUS STAND, CHANDIGARH ROAD,
MAHILPUR, DIST. HOSHIARPUR - 146105
PH : 9914720424.

MAJITHA

1824. RISHABH FOURWHEELS PVT. LTD. (CDR1-01-),
PLOT NO.130, OPP. DANA MANDI, AMRITSAR
ROAD, MAJITHA - 143601
PH : 9914841577.

MALERKOTLA

1825. MAX AUTOMOBILES (CCI2-01-),
MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE
- BHOGIWAL, MALERKOTLA, DIST.-SANGRUR,
PUNJAB - 148023
PH : 9814403131, 9056903131.

MALOUT

1826. HIRA AUTOMOBILES LTD (6302-05-), TINKONI
CHOWK, NEAR LIC BUILDING, MALOUT - 152107
PH : 299524, 264724, 9988417000.

MANDI GOBINDGARH

1827. HOSHIARPUR AUTOMOBILES (U903-01-), PLOT
GOYAL MOTORS, NEAR YES BANK, MANDI
SIRHIND ROAD, NH-1, MANDIGOBINDGARH,
PUNJAB - 147301
PH : 9815131766, 9914119292.

MANSA

1828. TARA AUTOMOBILES (7002-02-), BALATA ROAD,
NEAR ARVIND NAGAR, MANSA, PUNJAB -
151505
PH : 01652-216042.

MEHTA

1829. RISHABH (CDS1-01-), KHASRA NO. 343, BABA
BAKALA ROAD, VILLAGE MEHTA CHOW,
TEHSIL - BABA BAKALA, DIST AMRITSAR,
PUNJAB - 143114
PH : 7760315710.

MOGA

1830. REMIRA MOTORS PVT. LTD. (H602-01-),
INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD,
MOGA - 142001
PH : 7087025402.

MOHALI

1831. NAVDESH AUTOS LLP (L105-01-), PLOT
NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI
- 160059
PH : 8872016453.

1832. CM AUTOSALES PVT. LTD. (706-03-), PLOT NO.
B-64, INDUSTRIAL AREA PHASE-7, MOHALI -
PUNJAB - 140110
PH : 8284800597.

MORINDA

1833. CM AUTOSALES PVT. LTD. (BHH1-01-), KHASRA
NO. 1092, CHANDIGARH-SAMRALA ROAD,
MORINDA, DIST.-ROPAR, PUNJAB - 140 101
PH : 9915022111.

MUKERIAN

1834. HOSHIARPUR AUTOMOBILES (IP01-01-), VILL.
TALWANDI KALAN, GT ROAD, MUKERIAN -
144211
PH : 9815131766, 8437919900.

MUKTSAR

1835. HIRA AUTOMOBILES LTD (6302-03-), BHAI
COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB
- 152026
PH : 9217048250, 9056900042.

MULLANPUR

1836. SANDHU AUTOMOBILES (YY01-01-), OPPOSITE
DHAKA ROAD, FEROZEPUR ROAD,
MULLANPUR - 141101
PH : 8437025969.

MULLANPUR GARIBDASS

1837. NAVDESH AUTOS LLP (CVZ2-01-), H NO. 341,
POST OFFICE - MULLAPUR GARIBDASS,
TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE -
PUNJAB - 140901
PH : 8872004676.

NABHA

1838. HIRA AUTOMOBILES LTD (6302-06-), RADHA
SWAMI ROAD, NABHA - 147201
PH : 9317000004, 9217048250.

NAKODAR

1839. LOVELY AUTOS (3503-04-), JALANDHAR ROAD,
NEAR MALARI GATE, NAKODAR - 144040
PH : 9915028603.

NANGAL

1840. CM AUTOSALES PVT. LTD. (7K01-02-),
PLOT#36 AJOLI MOR, FOCAL POINT
INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB -
140126
PH : 9692916811.

NAWANSIHAHR

1841. LOVELY AUTOS (3503-02-), NAWANSIHAHR
CHANDIGARH ROAD, VILL- LANGROHA, DISTT-
NAWANSIHAHR, PUNJAB - 144514
PH : 9915028682.

NIHAL SINGH WALA

1842. REMIRA MOTORS PVT LTD (QB02-01-),
BARNALA ROAD, NEAR DEE BABA SEWA
DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA.
- 142 055
PH : 7067025009.

PATHANKOT

1843. PATHANKOT VEHICLEADEAS PVT. LTD.
(A701-01-), NEAR MAMOON CHOWK,
DALHOUSIE ROAD, PATHANKOT - 145001
PH : 8264105000, 9417900883.
1844. PATHANKOT VEHICLEADEAS PVT. LTD.
(A701-04-), NEAR A. B. COLLEGE, PATHANKOT
- 145001
PH : 9417900828, 9417900842.

PATIALA

1845. HIRA AUTOMOBILES LTD (6302-01-), 13-B,
FACTORY AREA, PATIALA - 147001
PH : 2360131, 2360562, 9217048250.
1846. HIRA AUTOMOBILES LTD (6302-04-), C-20 &
C-45, FOCAL POINT, PATIALA, PUNJAB - 147001
PH : 2232377, 9217048234, 9217048250.
1847. HIRA AUTOMOBILES LTD (6302-07-), D-1A,
INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB).
- 147001
PH : 2232295, 2232296, 9217048250.
1848. ATELIER AUTOMOBILES (6304-01-), VILLAGE
MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR
CASABA RESORT, PATIALA - 147001
PH : 7527000106, 7527000111.

PATRAN

1849. HIRA AUTOMOBILES LTD (6302-02-), NARWANA
ROAD, PATRAN, PUNJAB - 147105
PH : 244445, 245788, 9217048250.

PATTI

1850. JAYCEE MOTORS (BQA2-01-), KHASRA NO.
64/19/21 K KA 1649 & KHASRA NO. 64/20 KA
29/94, NEAR RADHA SWAMI, TARN TARAN
ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN,
PUNJAB - 143416
PH : 9780038335.

PHAGWARA

1851. MARWAHA AUTOS (A UNIT OF INDERJIT
MARWAHA AUTOS PVT. LTD.) (5C02-01-), PLOT
NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE
LUDHIANA - 141001
PH : 9779166004.

PHILLAUR

1852. LOVELY AUTO (XU01-01-), OLD NAWANSIHAHR
ROAD CIVIL LINE, PHILLAUR, DISTRICT
JALANDHAR - 144410
PH : 9815069814.

POHIR

1853. LOVELY AUTOS (XS02-01-),
LUDHIANA-MALERKOTLA ROAD, NEAR SODHI
MARRIAGE PALACE, POHIR, DISTRICT
LUDHIANA, PUNJAB - 141204
PH : 9915020513.

RAIKOT

1854. GULZAR MOTORS PVT LTD (XT02-01-),
BARNALA BY PASS ROAD, RAIKOT - 141109
PH : 9814160099.

RAJPURA

1855. HIRA AUTOWORLD LLP (HK02-01-), VILLAGE
BADHIAK, RAJPUR PATAIALA ROAD, RAJPURA -
140401
PH : 244881-84, 9217048437, 9217048250.

RAMPURA PHUL

1856. TARA AUTOMOBILES (XR01-01-), RAMPURA
-BARNALA ROAD, RAMPURA PHUL - 151103
PH : 01651-266643.

RAYYA

1857. RISHABH FOURWHEELS PVT. LTD. (CAK1-01-),
NH-1, GT ROAD RAYYA, TEHSIL - BABA
BAKALA, DISTRICT - AMRITSAR. - 143112
PH : 9914708577.

ROPAR

1858. CM AUTOSALES PVT. LTD. (7K01-01-),
CHANDIGARH ROPAR ROAD, ROPAR - 140001
PH : 9915022802.

SAMANA

1859. HIRA AUTOMOBILES LTD (BFU01-01-), KEWAT
NO. 948/950, KHATUNI NO. 1427, KHASRA NO.
101/27(4-7), PATAIALA SAMANA ROAD, SAMANA,
DIST.-PATAIALA, STATE PUNJAB - 147101
PH : 9217048236.

SANGRUR

1860. MAX AUTOMOBILES (G402-01-), DHURI ROAD,
SANGRUR, - 148024
PH : 01672-239627.

SHAHKOT

1861. LOVELY AUTOS (BHT1-01-), PUBLIC SCHOOL
ROAD, SHAHKOT, DISTRICT - JALANDHAR,
PUNJAB - 144702
PH : 8437936811.

SIRHIND

1862. HOSHIARPUR AUTOMOBILES (TF03-01-),
KHEWAT KHATONI NO. 802/1049 & 821/1070
KHEWAT, KHAS NO. 43/12/1 (1-0), BESIDE SBI
BANK, BASSI ROAD, SIRHIND, TEHSIL AND
DISTRICT - FATEHGHAR SAHIB - 140406
PH : 9815131766, 7527082471.

SULTANPUR LODHI

1863. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (ZY02-01), NEAR TALWADI BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA - 144626
PH : 9779166004.

TALWANDI BHAI

1864. BABA AUTOS (GMF1-01), FEROZEPUR ROAD, NEAR FUNISLAND, TALWANDI BHAI, DISTT. FEROZEPUR - 142050
PH : 8872013002.

TALWANDI SABO

1865. TARA AUTOMOBILES (ON01-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI, TALWANDI SABO, BHATINDA - 1551302
PH : 9646691047, 8437086666.

TALWARA

1866. HOSHIARPUR AUTOMOBILES (H402-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216
PH : 9815131766, 9781842244.

TANDA

1867. HOSHIARPUR AUTOMOBILES (H402-06), VILL.PULPKHATA, MIANI ROAD, TANDA - 144203
PH : 9815131766, 8437430400.

TARAGARH

1868. PATHANKOT VEHICLEADES PVT. LTD. (BVC1-01), VILLAGE - RAHIMPUR, VPO-TARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534
PH : 9988639963.

TARN TARAN

1869. JAYCEE MOTORS (BLP2-01), VILLAGE - KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401
PH : 9780038039.

ZIRA

1870. BABA AUTOS (7C01-02), FEROZEPUR ROAD, ZIRA - 142047
PH : 8872013230.

ZIRAKPUR

1871. TRICITY AUTOS (9M01-01), PATIALA HIGHWAY,VILLAGE - NABHA, ZIRAKPUR, PUNJAB - 140603
PH : 9988882330.

RAJASHTHAN**JAIPUR**

1872. AURIC MOTORS (1116-C1-), COMMERCIAL PLOT NO. 44, COMMERCIAL BELT B, VT ROAD, NEW SANGANER ROAD, MANSAROVAR SCHEME, JAIPUR, RAJASTHAN 302020 - 302020
PH : 9571105651.

RAJASTHAN**AANDHI**

1873. KP AUTO (SJJK1-01-), KHASRA NUMBER 11 25 , VILL.AANDHI , DISTT JAIPUR, RAJASTHAN- 303001 - 303001
PH : 95496565559.

ABU ROAD

1874. NAVNEET MOTORS (QOQ1-01-), PLOT NO. E-26, RIICO AMBALI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026
PH : 7665000644.

ACHROL

1875. KTL AUTOMOBILE PVT. LTD. (GKD1-01-), KHASRA NO. 37/1522,GRAM ANI, ACHROL, DELHI ROAD,TEHSIL - ACHROL, DISTRICT - JAIPUR, 303002 - 303002
PH : 7412077022.

AHORE

1876. AURIC MOTORS (SHN1-01-), MADHOPURA, NEAR KARNAWATI HOSPITAL, AHORE, DISTRICT - JALORE, RAJASTHAN PIN CODE: 307029 - 307029
PH : 8875088998.

AJMER

1877. AJMER AUTO AGENCIES PVT. LTD. (B201-01-), SRINagar ROAD,AJMER (RAJASTHAN) - 305001
PH : 9314955201.

1878. RELAN MOTORS (B203-01-), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001
PH : 95876 87000, 84400 41027.

1879. RELAN MOTORS (B203-02-), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001
PH : 95876 87000, 87400 16329.

1880. AJMER AUTO AGENCIES PVT. LTD. (B201-05-), KHASRA NO.34/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER - 305001
PH : 9314955201.

AKLERA

1881. BHATIA AND COMPANY (SGK1-01-), NH-52, RAM NAGAR COLONY, AKLERA, JHALAWAR, PIN-326033, RAJASTHAN - 326033
PH : 9799299971.

ALWAR

1882. MG MOTORS (F901-01-), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001
PH : 9001795520.

1883. MG MOTORS (F901-02-), KHASRA NO.803/198, BHUGOO TIRAH, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001
PH : 9001795520.

ANOOPGARH

1884. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BFE1-01-), PLOT NO. AMEDKAR CHARAHARA, RAILWAY STATION ROAD ,ANUPGARH (ANOOPGARH),DISTT SRI GANGANAGAR, - 335701
PH : 9982638516.

ANTA

1885. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTG2-01-), KOTA-BARAN ROAD, ANTAKH, DIST-BARAN. - 325502
PH : 9413739001.

ASIND

1886. CHAMPION CARS (SID1-01-), DEV TOWERS, BEAWAR ROAD, ASIND, DISTRICT - BHILWARA, RAJASTHAN - 311302 - 311302
PH : 9887063862.

ATRU

1887. SUWALIKA MOTORS (SNU1-01-), JAISALMER ROAD, CHANDAN, DISTT JAISALMER ,RAJASTHAN - 325218
PH : 8306333731.

BAGRU

1888. PREM MOTORS PVT. LTD. (US02-01-), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPUR - 303007
PH : 01414711118,8058411181.

BALESAR

1889. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CW01-01-), KHASRA NO. 2167 JODHPUR JAISALMER ROAD, VILL- BALESAR SATTAA, TEH- BALESAR , DIST- JODHPUR (RAJ.) - 342203
PH : 7412087344.

BALOTRA

1890. LMJ SERVICES LTD. (6502-05-), JODHPUR BALOTRA ROAD,BALOTRA, RAJASTHAN - 344022
PH : 8005898360.

BANSUR

1891. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (BQP1-01-), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402
PH : 8875005116.

BANSWARA

1892. NAVNEET MOTORS (X903-01-), NEAR J.C. MILL,OPPOSITE AKASHWANI,DAHOD ROAD,BANSWARA - 327001
PH : 02962-254546, 257596,7665000879.

BARAN

1893. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-03-), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205
PH : 8929854244.

BARMER

1894. LMJ SERVICES LTD. (6502-06-), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001
PH : 8005898360.

1895. LMJ SERVICES LTD. (SH01-01-), NH# 68, OPP. SADAR THANA - 344001
PH : 8005898360.

BASSI

1896. PREM MOTORS PVT. LTD. (VF02-01-), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301
PH : 01414711118,8058794151.

BAYTU

1897. LMJ SERVICES (SIT1-01-), NH-8, NEAR JAGDAMBA PETROL PUMP , BAYTU - 344034
PH : 8094011126.

BEAWAR

1898. RELAN MOTORS (FL03-01-), PLOT NO 1, INDIRA GANDHI UDYOOGPURI , AJMER ROAD ,BEAWAR, RAJASTHAN. - 305202
PH : 9587687000.

BEGUN

1899. BHATIA & CO (BTD1-01-), BHATIA & CO. (A UNIT OF BHATIA CORPORATION PVT LTD),IN FRONT OF GIRUKUL, CHITTOR ROAD,BEGUN, TEHSIL - BEGUN, DISTRICT CHITTORGARH, 312023 - 312023
PH : 9837325267.

BEHROR

1900. MG MOTORS (FQ01-01-), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701
PH : 9001795520.

BHADRA

1901. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIF1-01-), CHAK NUMBER-8,BARANI, NEAR HISAR BYEPASS BHADRA -BALSAMAND ROAD, BHADRA - 335501
PH : 9166712222, 9413311745.

BHARATPUR

1902. TM MOTORS PVT. LTD. (5J01-01-), BRIJ VIHAR COLONY, MADARPUR ROAD,BHARATPUR,RAJASTHAN - 321001
PH : 9251423392.

BHAWANI MANDI

Dealer Network (AS ON 31.10.2023)

1903. SUWALKA MOTORS PVT LTD (SDB1-01), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI,JHALAWAR- 326502 . 326502 PH :9414242256.	BIKANER	1914. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-01)-, OPP. URMUL DAIRY PLANT,GANGANAGAR ROAD,BIKANER - 334004 PH :1512253984,9414138511.	CHOMU	1925. KTL AUTOMOBILES (HW02-01), KHARSA NO.695, JAIPUR SIKAR BYPASS ROAD, CHOMU, RAJASTHAN - 303702 PH :7412077034.	1935. SHRI MANGLAM AUTO PVT. LTD. (FT03-01), KHARSA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA , DISTRICT – NAGAUR. - 341303 PH :7230055924.
1904. LOHIA AUTOMOBILES (E301-01), AJMER ROAD,NEAR OCTROI POST,BHILWARA - 311001 PH :7568378555,9462979233.		1915. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-04)-, JAIPUR BYE PASS,BIKANER . - 334004 PH :1512230384,8875010507.		1926. SATNAM MOTORS (HW03-01)-, NEAR CM CHOPRA HOSPITAL, JAIPUR ROAD, CHOMU, DISTRICT – JAIPUR, RAJASTHAN - 303702 PH :8302090000.	1936. PREM MOTORS PVT. LTD. (BRY1-01), KHARSA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU - 303008 PH :8058411181.
1905. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD)(E302-01)-, CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001 PH :01482- 267096,9358130064, 9358130066.		1916. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-05)-, OPP. AVYAPPAA TEMPLE, K. K. COLONY, BIKANER - 334003 PH :7014063193,9413311949.			DUDU
1906. LOHIA AUTOMOBILES (E301-03), PLOT NO. H-11, EVERGREEN TEXTILE PARK, RICO INDUSTRIAL AREA, PUR ROAD, BHILWARA. - 311001 PH :9667187847.		1917. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES) (7102-01), KHARSA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. - 334001 PH :8292834417.		1927. TR SAWHNEY (MD04-01), KHARSA NO. 913/54, JAIPUR ROAD, VILLAGE RAMSARA, CHURU, PIN-331001, RAJASTHAN - 331001 PH :9782078531.	1937. NAVNEET MOTORS (4902-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001 PH :9414104833,9414104833.
1907. TECHNO MOTORS INDIA PVT. LTD., (CBS1-01), NEAR RAILWAY STATION,SALUMBAR CHOURAHA, BHINDER - 313603 PH :8306111337.	BHINDER	1918. LMJ SERVICES LTD. (BZB1-01)-, BANGANGA MOD, JODHPUR ROAD, BILARA , RAJASTHAN - 342602 PH :8104698935.			DUNGURPUR
1908. SHRI KRISHNA AUTOSALES PVT LTD (CQN1-01), KHARSA NO. 2281, KARADA CROSSING, BHINNAL, DISTRICT - JALORE, RAJASTHAN. PH :9610242790.	BHINMAL	1919. AURIC MOTORS (SNT1-01)-, NEAR KESARGARH PALACE, HANUMANGARH ROAD, TIBBI, DIST. HANUMANGARH, PIN-335526, RAJASTHAN - 342604 PH :9413311745.		1928. JAMU AUTOMOBILES PVT LTD (CTQ1-01)-, KHARSA NO. 1016/266, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR. - 332703 PH :9116816905.	1938. LMJ SERVICES LTD. (BBR1-01)-, OPPOSITE PRAKASH DINING HOTEL,_FALNA - 306116 PH :8094011126.
1909. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-01), OPP. INDAG RUBBER,MAIN ROAD ,BHIWADI - 301019 PH :9214794326,8875005116.	BHIWADI	1920. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD,OPPOSITE ICICI ATM, BUNDI - 323001 PH :8929853245.		1929. VIPUL MOTORS PVT. LTD. (1102-03), AGRA JAIPUR ROAD, DAUSA - 303303 PH :9672211333.	FATEHNAGAR
1910. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-02), F-458-C,RICO,INDUSTRIAL AREA,BHIWADI - 301019 PH :9214794326,8875005116.		1921. K P AUTOMOTIVES PVT LTD (1104-03), TONK ROAD,CHAKSU - 303901 PH :0141-4071111, 4071101,8696934973.		1930. SHRI MANGALAM (SDJ1-01), PLOT NUMBER -189, NEAR NAGAUR RAILWAY STATION ROAD, DEGANA - 341503 PH :7230055955.	GANGAPUR CITY
1911. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-04)-, KHARSA NO. 656/431, ALWAR ROAD, BHIWADI. - 301019 PH :9214794326,8875005116.		1922. LMJ SERVICES LTD. (SHR1-01)-, JAISALMER ROAD ,CHANDAN, DISTT JAISALMER ,RAJASTHAN - 345031 PH :8094011126.		1931. K P AUTOMOTIVES PVT LTD (Z001-01), KOTA-JAIPUR HIGHWAY, NH-12, DEOLI - 304804 PH :8696925299.	GUDAMALINI
1912. AJMER AUTO AGENCIES PVT LTD (GLF1-01), KHARSA NO 39, AJMER -BHILWARA HIGHWAY CITY -BJAYANAGAR DISTRICT – AJMER ,RAJASTHAN - 305624 PH :8890902472.	BJAYANAGAR	1923. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SY02-01)-, NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026 PH :01598-217163,7230081668.		1932. LOHIA AUTOMOBILES (CUQ1-01)-, NEAR KRISHI MANDI, KAMILGHAT ROAD, TEHSIL – DEVGARH, DISTRICT – RAJSAMAND, RAJASTHAN. - 313331 PH :9772626856.	GUDHAGORJI
1913. LOHIA AUTOMOBILES (E301-02), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTORGARH-BIJOLA HIGHWAY, BIJOLA, DIST. -BHILWARA - 311602 PH :7568378555,7230094157.	BIJOLIA	1924. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (K901-01), PLOT NO. 1001/1-1002/1, NIMBAHERA ROAD,CHITTORGARH - 312001 PH :01472-240999,9549277861.		1933. BHATIA & CO. (SMC1-01)-, PRATAPGARH ROAD, DHARIYAWAD , DIST. - PRATAPGARH, RAJASTHAN - 313605 -313605 PH :9829736081.	1942. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-03)-, JUNCTION TOWN ROAD,HANUMANGARH - 335512 PH :01552-231295,9166712222, 9413311745.
				1934. TM MOTORS PVT. LTD. (SK01-01), TM MOTORS PVT. LTD., GT ROAD DHOOLPUR, RAJASTHAN. - 328001 PH :8094777862.	1944. AURIC MOTORS (7101-06)-, PLOT NUMBER 134, INDUSTRIAL AREA, HANUMANGARH, RAJASTHAN. - 335512 PH :9413311745.
					HINDAUN

1945. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S002-01), KHASRA NO. 737, VILLAGE – PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN. - 322230
PH :7017024146,7017024146.
- JAIPUR**
1946. VIPUL MOTORS PVT. LTD. (1102-01), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017
PH :9269117654,8949686508.
1947. K P AUTOMOTIVES PVT LTD (1104-01), E-198, SANGANER INDUSTRIAL AREA,MANSAROVAR,JAIPUR - 302020
PH :0141-4071111, 4071101,6377203709, 6377203731.
1948. PREM MOTORS PVT. LTD. (1112-02), 12 13,SUDARSHANA INDUSTRIAL AREA, JAIPUR - 302006
PH :0141-4711111,80587903388 , 8058794122.
1949. SANGA AUTOMOBILES PVT. LTD. (1110-01), SECTOR 35, PRATAP NAGAR,SANGANER, JAIPUR - 302033
PH :9772210922.
1950. VIPUL MOTORS PVT. LTD. (1102-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR - 302012
PH :0141-3524203,9672211333.
1951. PREM MOTORS PVT. LTD. (1112-01), PLOT NO. E101/A, VKI , JAIPUR - 302039
PH :0141441123,8929409921.
1952. SATNAM MOTOCORP PVT. LTD. (1113-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR - 302 022, RAJASTHAN. - 302022
PH :1412771976,8302390000.
1953. KTL AUTOMOBILE PVT. LTD. (1115-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR. - 302012
PH :7412077022.
1954. PREM MOTORS PVT. LTD. (1112-03), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR. - 302017
PH :9358715550,8929409921.
1955. KTL AUTOMOBILES (1115-02), KHASRA NO 1210-1216/2959, BHANKROTA, TEH SANGANER , DISTRICT JAIPUR. - 302026
PH :7412077007.
1956. KTL AUTOMOBILES (1115-03), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD ,JAIPUR . - 302006
PH :7412077007.
1957. K.P. AUTOMOTIVE (1104-G1), B-1, GOVIND MARG, ADARSH NAGAR, JAIPUR - 302004 - 302004
PH :9549656559.
1958. KTL AUTOMOBILES (1115-04), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGHA, BILOCHOYAN MOHALLA, TRANSPORT NAGAR, DELHI ROAD, JAIPUR - 302002 - 302002
PH :9772210922.
1959. KP AUTO (1104-G2-), PLOT NO. 4, RAJIV COLONY, RPA ROAD, OPP. RADHA SWAMI SATSANG BHAWAN, SHASTRI NAGAR, JAIPUR 302016. - 302016
PH :9549656559.
1960. SANGA AUTONATION (1117-01), SECTOR 35, PRATAP NAGAR, SANGANER, JAIPUR, PIN-302023, RAJASTHAN - 302023
PH :929365847.
- JAISALMER**
1961. LMJ SERVICES LTD. (5L01-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY,HDC SOCIETY, DABA ROAD, JAISALMER (RAJASTHAN) - 345001
PH :8005898360.
- JAITARAN**
1962. LMJ SERVICES LTD. (BNY1-01), KHASRA NO. 784, JAIPUR-JODHPUR BYE PASS ROAD, JAITARAN, DIST.-PALI. - 306302
PH :9269971266.
- JALORE**
1963. SHRI KRISHNA AUTOSALES PVT LTD (VD01-01)-, KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001
PH :2973211613,8929203644.
- JAMWA RAMGARH**
1964. K P AUTOMOTIVES PVT LTD (BZL1-01), KHASRA NUMBER -228/169,OPP UDAY AUTOMOBILES,JAIPUR ALWAR ROAD –JAMWA RAMGRAH. - 303109
PH :6377203709, 6377203731.
- JHADOL**
1965. TECHNOY MOTORS (SKO1-01), KHASRA NO. 1861/G, NH 8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, PIN-306104, RAJASTHAN - 306104
PH :8890673099.
- JHALAWAR**
1966. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-02), OPP. BALAJI KI CHHATRI, KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001
PH :9413350336.
- JHUNJHUNU**
1967. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (FN03-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001
PH :01592-250045,7412087489.
- JOBNER**
1968. PREM MOTORS PVT. LTD. (BRD1-01-), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL – PHULERA, DISTRICT – JAIPUR, RAJASTHAN - 303328
PH :8058411181.
- JODHPUR**
1969. LMJ SERVICES LTD. (6502-01), PRATAP NAGAR,JODHPUR - 340002
PH :9950496202.
1970. LMJ SERVICES LTD. (6502-04), OPP TO RFC OFFICE NEW POWER HOUSE ROAD,JODHPUR - 342003
PH :8094011127.
1971. SHRI KRISHNA AUTOSALES PVT LTD (6503-01-), 32-A,HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005
PH :2912748402,9001894669.
1972. LMJ SERVICES LTD. (6502-09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008
PH :8094011147.
1973. LMJ SERVICES LTD. (6502-0C-), 2/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002
PH :7230057721.
1974. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-01), C-26 BASINI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005
PH :7412059839.
1975. LMJ SERVICES LTD. (6502-0D-), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342 001
PH :8696916455.
1976. LMJ SERVICES LTD. (6502-10-), KHASRA NO. 375/B, BARAN ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342 003
PH :7222002424.
- KAPRAN**
1977. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BGG1-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAN DISTT. BUNDI - 323301
PH :9413379001.
- KEKRI**
1978. AJMER AUTO AGENCIES PVT. LTD. (B201-03), KOTA SAWAR ROAD,KEKRI - 305404
PH :9314955201.
- KAJUWALA**
1979. AURIC MOTORS (SJ1-01), DANTOR ROAD, KAJUWALA, DIST. - BIKANER, RAJASTHAN. - 334023
PH :9982299866.
- KHANDAR**
1980. PREM MOTORS (SQM1-01-), SAWAI MADHOPUR-KHANDAR RD., KHANDAR, RAJASTHAN - 322025. - 322025
PH :8058899960.
- KHANPUR**
1981. SUWALKHA MOTORS (SMA1-01), BYPASS CHORAYA, MEGA HIGHWAY BARAN-JHALAWAR, KHANPUR, TEHSIL – KHANPUR, DISTRICT – JHALAWAR, RAJASTHAN PIN CODE: 326038 - 326038
PH :8306333731.
- KHERLI**
1982. MG MOTORS (BZE1-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606
PH :9001795520.
- KHERWARA**
1983. TECHNOY MOTORS (SEE1-01-), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8,KHERWARA, TEHSIL – KHERWARA, DISTRICT –UDAIPUR, RAJASTHAN PIN CODE: 313803 - 313803
PH :9530396845.
- KISHANGARH**
1984. AJMER AUTO AGENCIES PVT LTD (TU01-01), R K LINK ROAD, - 305802
PH :9314391011.
- KISHANGARH BAS**
1985. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405
PH :8875007753,8875007753.
- KOTA**
1986. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-01), 13-16 B.INDUSTRIAL ESTATE, KOTA - 324007
PH :8929400447.
1987. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-01-), AUTO MOBILE ZONE,G-11/12 INDUSTRIAL AREA, KOTA - 324005
PH :0744-2439008,2439006,9587894887.
1988. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-04-), 3(K).CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007
PH :8929400447.
1989. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-05-), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007
PH :8929400447.
1990. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-06-), PLOT NO. E-22, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324005
PH :0744-2439008,2439006,9587894887.

Dealer Network (AS ON 31.10.2023)

1991. SUWALKA MOTORS PVT. LTD. (6104-01), RIDHI SIDDI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN - 324008
PH :0744-2661226,77421212.

KOTPUTLI

1992. PREM MOTORS PVT. LTD. (MH09-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108
PH :01414711118,8058411181.
1993. PREM MOTORS PVT. LTD. (MH09-02), KHASRA NO. 636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108
PH :01414711118,8058411181.

KUCHAMAN

1994. SHRI MANGLAM AUTO PVT. LTD. (VA02-01), SUDARSHAN NAGAR, BURSU ROAD, KHASRA NO.148, KUCHAMAN - 341508
PH :7230055928.

LADNU

1995. SHRI MANGLAM AUTO PVT. LTD. (CUP1-01), KHASRA NO. 1011, SUJANGARH ROAD, LADNU - 341306
PH :7412044506.

LALSOT

1996. VIPUL MOTORS PVT. LTD. (BZF1-01), PLOT NO.22, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502
PH :9672211333.

LOSAL

1997. JAMU MOTORS (SMD1-01), LOSAL-SALASAR-DIDWANA ROAD, OPPOSITE SHIV MANDIR, WARD NO. 1, LOSAL, RAJASTHAN - 332025 - 332025
PH :9057400761.

LUNI

1998. LMJ SERVICES (SFD1-01), NEAR SBI BANK, SALAWAS ROAD,LUNI, TEHSIL - LUNI,DISTRICT - JODHPUR,RAJASTHAN PIN CODE: 342802 - 342802
PH :8094011126.

MAHWA

1999. VIPUL MOTORS PVT. LTD. (BKZ1-01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H. -11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608
PH :9672211333.

MAKRANA

2000. SHRI MANGLAM AUTO PVT. LTD. (CFX1-01), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLAM ROAD, MAKRANA, DISTRICT - NAGAUR - 341505
PH :7230055934.

MALPURA

2001. K P AUTOMOTIVES PVT LTD (BLB1-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502
PH :8696925262.

MANDALGARH

2002. CHAMPION (SHA1-01), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT - BHILWARA, PIN-311604, RAJASTHAN - 311604
PH :9837325267.

MERTA

2003. SHRI MANGLAM MOTORS (NGD03-01), KHASRA NUMBER 1679, NH-89,MERTA,RAJASTHAN. - 341510
PH :9116007201.

NAGAUR

2004. SHRI MANGLAM AUTO PVT. LTD. (HL03-01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUR - 341 001
PH :9116008624.

NAINWA

2005. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTJ1-01), UNIARA ROAD, OPP. PETROL PUMP, NAINWA, DIST. KOTA - 323801
PH :9413379001.

NARAYANPUR

2006. FORTUNE CARS (SDV1-01), KHASRA NO. 2848, JAIPUR ROAD,NEAR NARAYANPUR BYPASS VILLAGE, NARAYANPUR TEHSIL - NARAYANPUR, DISTRICT - ALWAR,RAJASTHAN PIN CODE: 301024 - 301024
PH :887504375.

NASIRABAD

2007. AJMER AUTO AGENCIES PVT. LTD. (B201-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601
PH :9314955201.

NATHDWARA

2008. LOHIA AUTOMOBILES (X201-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND - 313301
PH :8306009399.

NAWALGARH

2009. AURIC MOTORS (SIE1-01), KHATA NO. 76, PUNIA KI DHANI, SIKAR ROAD, NAWALGARH, DISTRICT - JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042
PH :9926730260.

NEEM KA THANA

2010. JAMU AUTOMOBILES PVT LTD (K701-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713
PH :9116816905,9116816905.

NEEMRANA

2011. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHOR, DISTT. ALWAR - 301705
PH :9610715222,9636193986.

NIMBAHERA

2012. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTH1-01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601
PH :9772378681,9772378681.

NIWAI

2013. K P AUTOMOTIVES PVT LTD (BLA1-01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT - TONK - 304021
PH :8696925262.

NOHAR

2014. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (VE02-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523
PH :0155-5221485,7412059821, 8875010541.

NOKHA

2015. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (I501-01), F-46, RICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803
PH :7412059805.

PADAMPUR

2016. DUDI MOTORS (SGC1-01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 - 335041
PH :8619215475.

PALI

2017. LMJ SERVICES LTD. (6502-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401
PH :9269971266.

PAOTA

2018. K P AUTOMOTIVES PVT LTD (BRH1-01), PATTI SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106
PH :6377203709, 6377203731.

PARBATSAR

2019. SRI MANGLAM (SKT1-01), NEAR IFL HOUSING FINANCE CO., KISHANGARH ROAD, PARBATSA, DISTRICT - NAGAUR, RAJASTHAN - 341512 - 341512
PH :8740909096.

PARTAPUR

2020. NAVNEET MOTORS (BKY1-01), AAASHAPURA CHAURAH, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024
PH :9001550644.

PHALODI

2021. SHRI KRISHNA AUTOSALES PVT LTD (BQH1-01), OPP. RCP GUEST HOUSE, NAGAUR KHICHAN ROAD, PHALODI, RAJASTHAN - 342301
PH :9116011958.

PHULEREA

2022. KTL AUTOMOBILE PVT. LTD. (CUS1-01), KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULEREA, DISTRICT - JAIPUR, RAJASTHAN - 303338
PH :7412077022.

PINDWARA

2023. NAVNEET MOTORS (CQP1-01), OPPOSITE WOLEK FACTORY, SIROHI ROAD, PINDWARA, DIST - SIROHI. - 307022
PH :7230036616,7230019849.

PIPAR

2024. LMJ SERVICES LTD. (BT1-01), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601
PH :9462616268.

PISANGAN

2025. AJMER AUTO AGENCIES PVT. LTD. (CTL1-01), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT - AJMER, RAJASTHAN. - 305204
PH :9314955201.

POKHRAH

2026. LMJ SERVICES (BOA1-01), SUNDER NAGAR, TEHSIL POKHRAN, DISTRICT - JAISALMER, RAJASTHAN. - 345021
PH :9610115660.

PRATAPGARH (RAJASTHAN)

2027. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (PN01-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605
PH :9571274999.

RAIPUR

2028. LMJ SERVICES LTD. (CRZ1-01), NATIONAL HIGHWAYS, PALI ROAD, VILLAGE - RAIPUR, DISTRICT - PALI. - 306304
PH :9269971266.

RAISINGHNGAR

2029. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHK1-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNGAR, DISTRICT - SRIGANGANAGAR. - 335051
PH :9982638516.

RAJGARH

2030. MG MOTORS (Y01-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH :9001795520.
2031. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGD1-01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU. - 331023 PH :9602261977.

RAJSAMAND

2032. LOHIA AUTOMOBILES (X201-01), BHILWARA ROAD KHANAKROLI, RAJSAMAND DISTT., RAJSAMAND - 313301 PH :8306009399.

RAMGANJMANDI

2033. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BAZ1-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH :9414085790.

RANIWARA

2034. SHRI KRISHNA AUTOALES PVT LTD (SGX1-01), NEAR RAILWAY GATE, BHIMNAL ROAD, RANIWARA, TEHSIL - RANIWARA, DISTRICT - JALORE, RAJASTHAN, PIN CODE: 343040 - 343040 PH :9928377669.

RATANGARH

2035. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHJ1-01), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331 022 PH :7412087301.

RAWATBHATA

2036. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (JQ01-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA, DIST. CHITTORGARH, RAJASTHAN. - 323307 PH :9587894887.

RAWATSAR

2037. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SDA1-01), CHAK 21-22,DWD,PLOT NUMBER -10 & 11, RAWATSAR (RAJASTHAN). - 335524 PH :9166712222, 9413311745.

REENGUS

2038. JAMMU MOTORS (SGL1-01), REENGUS HIGHWAY, REENGUS DISTT. SIKAR -332404 PH :332404.

RENWAL MANJHI

2039. PREM MOTORS PVT. LTD. (GKZ1-01), KHASRA NUMBER 2286/110,OPP ROHINI NAGAR 1 JAIPUR BHILWARA HIGHWAY ,RENWAL,TEHSIL PHAGI JAIPUR,RAJASTHAN (303904) - 303904 PH :01414711118,9928494441.

REVDAR

2040. TECHNOY MOTORS INDIA PVT. LTD. (CRY1-01), OPP. TIRUPATI PETROL PUMP, KAROTI ROAD, REVNDAR, DISTT. SIROHI, RAJASTHAN. - 307514 PH :9116653766,9116653766.

SAGWARA

2041. TECHNOY MOTORS INDIA PVT. LTD. (CK01-01), BANSWARA ROAD, CHUNGINKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTTT., RAJASTHAN - 314025 PH :02966254767,723008824.

SALUMBAR

2042. NAVNEET MOTORS (BZH1-01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT - UDAIPUR. - 313027 PH :7665887444.

SAMBHAR

2043. KTL AUTOMOBILE PVT. LTD. (CVD1-01), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE , PHULERA ROAD, SAMBHAR 303604 - 303604 PH :7412077022.

SANCHORE

2044. SHRI KRISHNA AUTOALES PVT LTD (GY01-01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. - 343041 PH :9636224546.

SANGARIA

2045. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (GKK1-01), HANUMANGARH ROAD NEAR KARMA PETROL PUMP - 335035 PH :7412059827.

SANGOD

2046. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (GLG1-01), KHASRA NO 1637 , SANGOD BAPAPAR MAIN ROAD ,SANGOD - 325601 PH :9413353999.

SARDARSHAHAR

2047. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BD1-01), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN - 331403 PH :9799833995.

SARWAR

2048. RELAN MOTORS (SJR1-01), CHAMAN CHOORHA, AJMER ROAD, SARWAR, DISTRICT - AJMER, RAJASTHAN 305403 - 305403 PH :9587687000.

SAWAI MADHOPUR

2049. PREM MOTORS PVT. LTD. (FY03-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001 PH :01414711118,9358725409.

SAYALA

2050. AURIC MOTORS (SHM1-01), NEAR PETROL PUMP, HANUMAN MANDIR SOUTH STYLE, MAIN ROAD SAYALA, SAYALA TEHSIL - SAYALA, DISTRICT - JALORE, RAJASTHAN PIN CODE: 343022 - 343022 PH :9460739993.

SHAHPURA

2051. K P AUTOMOBILES PVT LTD (1104-05), VILLAGE RAJPIRA, GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103 PH :0141-4071111, 4071101,8696394964, 9358220012.

2052. LOHIA AUTOMOBILES (CCP1-01), OPPOSITE LIC OFFICE BHILWARA ROAD, SHAHPURA DISTT. BHILWARA - 311404 PH :7568378555,9462979238.

SHEO

2053. LMJ SERVICES LTD. (SDO1-01), NEAR RIDDI SIDDHII HOTEL, OPPOSITE HP PETROL PUMP, TEH SHEO, DISTT - BARMER - 335521 PH :8094011144.

SHEOGANJ

2054. NAVNEET MOTORS (SMI1-01), F 132 ,OPP. 33/1 KV STATION, RIICO INDUSTRIAL AREA, SHEOGANJ, DISTRICT - SIROHI, RAJASTHAN - 30727 - 307027 PH :9414159146.

SIKAR

2055. JAMU AUTOMOBILES PVT LTD (K701-01), F-54, JAIPUR ROAD (NH-11),SIKAR - 332001 PH :9116816905,9116816905.

SIMALWARA

2056. NAVNEET MOTORS (SLF101-), RAJPU PEETH ROAD, SIMALWARA,DISTRICT - DUNGARPUR, RAJASTHAN - 314403 - 314403 PH :9001550644.

SIROHI

2057. NAVNEET MOTORS (4902-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH :7799860989.

SIVANA

2058. LMJ SERVICES LTD. (CCO1-01), BALOTRA ROAD, SWINA, DISTRICT - JODHPUR, RAJASTHAN . - 344044 PH :8005898360.

SOJAT

2059. LMJ SERVICES LTD. (BWI1-01), KHASRA NO. - 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT ., RAJASTHAN - 306104 PH :9269971266.

SRI DUNGARGARH

2060. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIG1-01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT - BIKANER, RAJASTHAN. - 331803 PH :9414138511.

SRI KARANPUR

2061. AURIC MOTORS (SDL1-01), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR,TEHSIL - SRI KARANPUR, DISTRICT - SRI GANGANAGAR,RAJASTHAN, PIN CODE: 335073 - 335073 PH :8875088998.

SRI MADHOPUR

2062. JAMU AUTOMOBILES PVT LTD (BZD1-01), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR . - 332715 PH :9116816905.

SRIGANGANAGAR

2063. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-01), NEW AUTOMOBILE MARKET,SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001 PH :0154-2465226,7412059837.

2064. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001 PH :8875911503.

SUJANGARH

2065. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BRB1-01), KHASRA NO 459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507 PH :8875011561.

SULTANPUR

2066. SUWALKA MOTORS PRIVATE LIMITED (GKY1-01), KHASRA NUMBER 485, NEAR PETROL PUMP, SULTANPUR ROAD , SULTANPUR, DISTT KOTA - 325204 PH :7742121212.

SUMERPUR

2067. LMJ SERVICES LTD. (6502-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHREERA GROUND, SUMERPUR - 306902 PH :8094002633.

Dealer Network (AS ON 31.10.2023)

SURATGARH

2068. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804 PH :8875012667.

THANAGAZI

2069. MG MOTORS (CFJ1-01), NEAR INDIA PETOL PUMP, THANAGAZI, ALWAR ROAD, DIST. ALWAR, PIN-301022, RAJASTHAN - 301022 PH :9799398200.

TIBBI

2070. AURIC MOTORS (SNJ1-01), KHASRA NO.2261, NEAR T POINT , BYPASS SIKARPUR ROAD ,BULANDSHAHAR - 335526 PH :9413311745.

TINWARI

2071. LMJ (STK1-01), OPPOSITE NEW TEHSIL OFFI CE, TIWARI, MATHANIA ROAD, TIWARI -342306 - 342306 PH :809011126.

TONK

2072. K P AUTOMOTIVES PVT LTD (GM01-01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001 PH :9549651972.

TUNGA

2073. PREM MOTORS (SMB1-01), VILLAGE GWALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL- BASSI, JAIPUR - 303302 - 303302 PH :805898123.

UDAIPUR

2074. NAVNEET MOTORS (4901-01), 7 CITY STATION ROAD UDAIPUR - 313001 PH :7230046375.

2075. NAVNEET MOTORS (4901-02), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002 PH :0294- 2449451-547,7665000881.

2076. TECHNOY MOTORS INDIA PVT. LTD. (4903-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002 PH :7073468229.

2077. TECHNOY MOTORS INDIA PVT. LTD. (4903-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL - BADGAON, UDAIPUR, RAJASTHAN - 313001 PH :7297062111,9116101063.

VIRATNAGAR

2078. K.P. AUTOMOTIVES PVT. LTD. (SCB1-01), KHASRA NUMBER 1156, OPP HOTEL GULMOHAR ,JAIPUR ROAD ,VIRATNAGAR,DISSIT JAIPUR - 303102 PH :0141-4071111, 4071101,9358220012.

SIKKIM

GANGTOK

2079. ENTEL MOTORS (B902-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102 PH :9933031828 9933032059.

JORTHANG

2080. ENTEL MOTORS (ND02-01), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121 PH :9733168822 9933009934.

TAMIL NADU

ALANDURAI

2081. AADHI CARS PVT. LTD. (CTO1-01), NO.69/1 A, SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) - 641101 PH :8754045816.

ALANGULAM

2082. AADHI CARS PVT. LTD. (SJF1-01), SURVEY NO. 4957, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT,TN - 627851 PH :8754044143.

AMBASAMUDRAM (AMBAI)

2083. AADHI CARS PVT. LTD. (BXT1-01), DOOR NO. 2/253, SURVEY NO. 10/2, RTO OFFICE ROAD, VILLAGE - VAGAIKULAM, AMBASAMUDRAM - 627 401 PH :7397188585.

ANAMALAI

2084. ABT (CHE1-01), SITE NO. 6/12, NEAR ABT SAMUGA KOODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642 104 PH :9783174244.

ANDIPATTI

2085. ASIR (S1S1-01), SURVEY NO. 459/1A1, THENI MAIN ROAD, ANDIPATTI, THENI DISTRICT,TAMILNADU - 625512 PH :750372220.

ANNUR

2086. JAIKRISHNAA AUTOSALES PVT. LTD. (DN01-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653 PH :9788850733.

ANTHIYUR

2088. JAIKRISHNAA AUTOSALES PVT. LTD. (DN01-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653 PH :9788850733.

2087. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUX1-01), SURVEY NO.495/4, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD,ANTHYUR. - 638501 PH :8754086777.

ARAKKONAM

2088. GANESH CARS PVT. LTD. (BKQ1-01), SURVEY NO. 556/A3, VILLAGE - ICHIPUDHUR, ARAKKONAM, VELLORE . - 631003 PH :9842345399.

ARIYALUR

2089. PILLAI & SONS MOTOR CO. (EB01-01), NO.1/1 , NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU) . - 621704 PH :04329-228300, 9442281302.

ARNI

2090. GANESH CARS PVT. LTD. (BKP1-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI, THIRUVANAMALAI, TAMIL NADU. - 632301 PH :9585533266.

ARUPUKKOTTAI

2091. ASIR AUTOMOBILES PVT LTD (CWF1-01-), SURVEY NO. 205/1, S/5C, NEHRU NAGAR, ARUPUKKOTTAI TO MADURAI BYPASS ROAD, ARUPUKKOTTAI, DIST.-VIRUDHUNAGAR. - 626 101 PH :9944059911.

ATTUR

2092. S.M.CAR PVT. LTD. (QT02-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108 PH :7094440057.

AVADI

2093. VISHNU CARS PVT. LTD. (5P01-01), SURVEY NO. 146, 147/1F & 147/G, NO. 17 VILLAGE – KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT – THIRUVALLUR, CHENNAI, TAMIL NADU - 600054 PH :7338888021, 7358024470.

AVINASHI

2094. SHASHTI CAR PVT LTD (CLK1-01), SURVEY NO. 373/IE, THEEKU THOTTAM, NALLIGOUNDANPALAYAM, PALANGARAI, KUPOUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654 PH :9942903319.

BHAVANI

2095. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-01), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316 PH :9597385777.

CHENGALPETTU

2096. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. - 603002 PH :7299057387.

2097. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU - 603020 PH :7299057387.

CHENGAM

2098. GANESH CARS PVT. LTD. (BUP1-01), SURVEY NO. 293/3A, 3A1,VILLAGE - THUKAPETTA, CHENGAM, DIST.-TIRUVANNAMALAI. - 606 701 PH :7397395289.

CHENNAI

2099. ABT LIMITED (1401-01), # 355-A, GST ROAD, ALANDUR, CHENNAI, TAMILNADU - 600032 PH :044-42254544, 42254554.

2100. KHIVRAJ MOTORS PVT LTD. (1404-01), 623 MOUNT ROAD, CHENNAI - 600006 PH :9043014530.

2101. CARS INDIA PVT. LTD. (1403-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058 PH :9952000089.

2102. CARS INDIA PVT. LTD. (1403-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020 PH :044-24462020.

2103. POPULAR VEHICLES & SERVICES LTD. (1410-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117 PH :9176906334, 9176906335, 9176906336.

2104. ABT LIMITED (1401-05), A/2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093 PH :044-23650488, 23650490.

2105. ABT LIMITED (1401-06), NO. 1 & 2, VASANTHA PRESS,ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020 PH :044-24465814, 24465815.

2106. CARS INDIA PVT. LTD. (1403-03), 4/321, OLD MAHALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040 PH :044-24540182 /43590913.

2107. POPULAR VEHICLES & SERVICES LTD. (1410-01), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093 PH : 928240519, 9282348331, 8939915206.
2108. ABT LIMITED (1401-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMALE HIGH ROAD, CHENNAI - 600106 PH : 044-42267628/604.
2109. GRESO (A UNIT OF NEXGEN VENTURES PVT LTD), (1493-01), 5, THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107 PH : 730507055.
2110. ABT LIMITED (1411-01), 29, WALLEES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058 PH : 044-42281707 / 719 / 720 / 721 / 737/.
2111. VISHNU CARS PVT. LTD. (1427-02), 1761, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004 PH : 0427-24661973/74/75.
2112. VISHNU CARS PVT. LTD. (1427-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALAVARAM, CHENNAI - 600043 PH : 044-6681279/733888000.
2113. POPULAR VEHICLES & SERVICES LTD. (1410-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI , CHENNAI - 600099 PH : 7448814726/23/33.
2114. CARS INDIA PVT. LTD. (1403-05), PLOT NO. - 80, BABU JAGAEVAN RAM STREET, GERUGAMBAKAM, CHENNAI - 600112 PH : 995200079.
2115. KHIVRAJ MOTORS PVT LTD. (1404-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH : 7299971978.
2116. ABT LIMITED (1401-0D), NO.2/10, ECR ROAD, INJAMBAKAM, CHENNAI TAMIL NADU - 600041 PH : 044-24490584 / 585 / 586.
2117. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-01), PLOT NO.1,2,3 & 4, SURVEY NO.9/12, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115 PH : 7401211553.
2118. RAJALAKSHMI CARS PVT. LTD. (1486-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI . - 600060 PH : 8939995454/8939995404.
2119. KHIVRAJ MOTORS PVT LTD. (1480-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI - 600096 PH : 98414 23569.
2120. ABT LIMITED (1401-0E-), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU - 600119 PH : 044-24502185 / 87 / 88 / 89.
2121. VISHNU CARS PVT. LTD. (1427-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU - 600089 PH : 875440002 / 967724432.
2122. VISHNU CARS PVT. LTD. (1487-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056 PH : 9677127432.
2123. VISHNU CARS PVT. LTD. (1487-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100 PH : 9840929994/9840944478.
2124. VISHNU CARS PVT. LTD. (1427-04), NEW S. NO. 31/4/1B1A, PALLAVARAM - THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI - 600117 PH : 9940057775.
2125. VISHNU CARS PVT. LTD. (1427-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. - 600016 PH : 044-45590293.
2126. RAJALAKSHMI CARS PVT. LTD. (1486-02), OLD NO. 27, NEW NO. 22A, ALAPAKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095 PH : 984142752/9500125083.
2127. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD), (1493-03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI - 600058 PH : 7305087033.
2128. POPULAR VEHICLES AND SERVICES LTD (1410-06), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1B, 88/1C & 88/2B, NOOMBAL MAIN ROAD, VANAKARAM, CHENNAI. - 600 077 PH : 044-6134344, 464900069.
2129. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU - 600 049. PH : 9841742426.
2130. VISHNU CARS PVT. LTD. (1427-07), SURVEY NO. 19/1A2, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI - 600069 PH : 95000 82346.
2131. VISHNU CARS PVT. LTD. (1427-08), SURVEY NO. 6/2/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI , TAMIL NADU - 600 073 PH : 8056260022.
2132. ABT LIMITED (1401-10), S. NO: 3/2, NANDAMBAKAM, PADMINI GARDEN, CHENNAI - 600089, T.N. - 600089 PH : 044-22320161, 8220011558.
2133. POPULAR VEHICLES AND SERVICES LTD (1410-G1), SURVEY NO: 18/1B2A1, NAZARTHETPET VILLAGE, POONAMALLE, CHENNAI,TAMIL NADU - 600123 - 600123 PH : 7994449644.
- CHENNAI (GUINDY)**
2134. ABT (1401-11), OLD SURVEY NO: 84/1A & 85/1A, NEW TOWN SURVEY NO:1, RACE COURSE ROAD, GUINDY, CHENNAI, TAMILNADU - 600032 PH : 9994437421.
- CHEYYAR**
2135. GANESH CARS PVT. LTD. (BUD1-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407 PH : 9787669339.
- CHIDAMBARAM**
2136. VISHNU CARS PVT. LTD. (CPK1-01), SURVEY NO. 10/22 & 10/25, BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU . - 608 602 PH : 041-44241354/7358004555.
- COIMBATORE**
2137. ABT LIMITED (4101-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037 PH : 9944400987.
2138. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005 PH : 8220862666.
2139. ABT LIMITED (4101-05), LAKSHMI THEATRE BUILDING, T.S. NO. 119/2, TS WARD NO. 3, KEMPATTI COLONY, SOUTH UKKADAM, COIMBATORE - 641001 PH : 044-4232660, 4232666.
2140. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH : 9047055667.
2141. ABT LIMITED (4101-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043 PH : 96009 66056.
2142. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-01), 8/60-&8/62-D, METTUPALAYAM ROAD, G.N.MILLS POST, NEARJOHNBOSCO CHURCH,COIMBATORE - 641029 PH : 044-4519140.
2143. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOURU THOTTAM, SANGANUR, COIMBATORE - 641027 PH : 9655219900.
2144. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-08), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANAMPATTI, COIMBATORE . - 641013 PH : 9585877775.
- COONOR**
2145. SREE SARADHAMBAL AUTOMOBILES PVT LTD (3601-01), 78 E. BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102 PH : 95852 7775.
- CUDDALORE**
2146. ABT LIMITED (5Q01-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003 PH : 04142-224567.

Dealer Network (AS ON 31.10.2023)

2157. VISHNU CARS PVT. LTD. (5Q02-01), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANANGKUPPAM, CUDDALORE - 607 001
PH: .733884131.

CUMBUM

2158. MEENAKSHI AUTO ZONE PVT. LTD. (CJS1-01), PATTIA NO. 438B, SURVEY NO. 1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB DIST. -CUMBUM, TAMIL NADU - 625516 PH: .9940094881.

DEVAKOTTAI

2159. SIVA AUTOMOTIVE TRADING PVT LTD (GKV1-01), SURVEY NO. 5/1A, MULLIGUNDU (SOMANENTHAL VILLAGE), DEVAKOTTAI TALUK, SIVAGANGAI DISTRICT,TAMILNADU - 630 303 PH: .7094688870.

DHARAPURAM

2160. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-04) - OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURI ROAD, DHARAPURAM - 638656 PH: .9697550777.

DHARMAPURI

2161. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI , TAMILNADU - 636807 PH: .9750938892/ 9159086222.

DINDIGUL

2162. PLA MOTORS (S401-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL - 624001 PH: .7010075200.

EDAYARPALAYAM, COIMBATORE

2163. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CJ1K-01)-, SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE. - 641025 PH: .9047081914.

ERODE

2164. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-01)-, 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH: .9677987777.

2165. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-06)-, SURVEY NO. 1363/3, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP, OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE. - 638 002 PH: .6385805777.

2166. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (H702-01)-, OLD G.S. NO. 337 (1 TO 4), RS NO. 259/11A,10.9.8., SATHY ROAD, PERIYA SEMUR VILLAGE, ERODE,TAMILNADU - 638003 PH: .9171791991.

2167. SRICITY AUTO (H702-02), R.S.NO:1098/3, VINAYAGAR KOVL STREET, TELEPHONE NAGAR, POONDURAI MAIN ROAD , ERODE, TAMILNADU - 638002 PH: .9626671444.

GOBICHETTIPALAYAM

2168. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-03) , NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH: .9697560777.

GUDIYATHAM

2169. GANESH CARS PVT. LTD. (CQW1-01), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAM, GUDIYATTAM. - 653803 PH: .04171-290172.

GUDUVANCHERY

2170. VISHNU CARS PVT. LTD. (BAD1-01)-, 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKUDI, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203 PH: .950012553/ 967712225.

GUMMIDIPOONDI

2171. RAJALAKSHMI CARS PVT. LTD. (BIZ1-01)-, PLOT NO. F-13, SURVEY NO. 26/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE – PAPPANAKUPPAM, GUMMIDIPOONDI, THIRUVALUR - 601201 PH: .044-27922060.

HARUR

2172. SRI AMMAN CARS INDIA PVT. LTD. (AAV1-01)-, 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903 PH: .8220014360/7339071500.

HOSUR

2173. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-01)-, P.O.- PERANDAPALLI NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 PH: .9790036377/8883259555.

IDAPPADI

2174. THRIVENI CAR COMPANY PVT LTD. (H101-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101 PH: .9003311488.

KALLAKURICHI

2175. ABT LIMITED (CHG1-01), SURVEY NO. 215/4 TO APT SCHOOL, DURUGAM ROAD, NEAR DOORDARSHAN BLDG, NEELAMANGALAM VILLAGE., KALLAKURICHI TALUK & DIST., TAMILNADU - 606 202 PH: .9047514890.

2176. S M CARS (CHG2-01)-, SF. 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213 PH: .7094440010.

KANCHEEPURAM

2177. GANESH CARS PVT. LTD. (C601-02)-, ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA CAE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH: .9842306061.

KANGAYAM

2178. SREE SARADHAMBAL AUTOMOBILES PVT LTD (GJ1-01)-, NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU . - 638701 PH: .7708531777.

KARAIKUDI

2179. ABT LIMITED (4202-05), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302 PH: .4565-232484, 232486.

2180. SIVA AUTOMOTIVE TRADING PVT LTD (HDX2-01)-, NO. 73, SUBRAMANIYAPURAM 9TH STREET, COLLEGE ROAD, KARAICKUDI, SIVAGANGA DIST, TAMILNADU-630002 - 630002 PH: .7402710000.

KARUMATHAMPATTI

2181. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CJQ1-01)-, SF. NO.281B, NEAR BHARAT PETROL BUNK, VILLAGE -VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADM, DISTT. COIMBATORE. - 641659 PH: .9159210008.

KARUNGAL

2182. ATHEN (SGE1-01)-, SURVEY NO. 639/5, KARUNGAL TOWN, VILAVANCODE TALUK, KANYAKUMARI DISTRICT, TAMILNADU - 629157 PH: .7094434179.

KARUNGALPALAYAM, ERODE

2183. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (H701-08)-, RF. NO. 17/1, 2, CAVERI ROAD, KARUNGALPALAYAM, ERODE ,TAMILNADU - 638003 PH: .8098825000.

KARUR

2184. ABT LIMITED (K401-01)-, SF NO. 529/1, SALEEM BY PASS,ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002 PH: .0432-222261/62/63.

KATPADI

2185. GANESH CARS PVT. LTD. (C601-04-), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH: .9842313139.

KATTUMANNARKOIL

2186. VISHNU CARS (SKG1-01-), SURVEY NO. 6 & 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOIL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301 PH: .7358004555.

KELAMBAKKAM

2187. CRESCO (A UNIT OF NEXGEN VENTURE PVT LTD) (SJ1V-01)-, AGP MAHAL, HIGH ROAD, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU . - 603 103 PH: .7305087002.

KINATHUKADAVU

2188. AADHI CARS PVT. LTD. (BB1-01-), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109 PH: .0422-3000506/ 3000505.

KODUMUDI

2189. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUY1-01-), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI. - 638151 PH: .8754756777.

KOTAGIRI

2190. AADHI CARS PVT. LTD. (BAS1-01-), SURVEY NO 89/79, OOTY MAIN ROAD, KOTAGIRI, NILGIRIS, TAMIL NADU . - 643217 PH: .8754045891/ 8754045442.

KOVILPATTI

2191. ASIR AUTOMOBILES PVT LTD (NO01-01-), OLD NO. 1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501 PH: .4632-232220.

KRISHNAGIRI

2192. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-03-), NH-7, NR. AAVIN DAIRY, MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001 PH: .9500202416/ 82200042270.

KUMBAKONAM

2193. PILLAI & SONS MOTOR CO. (E701-02-), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM, TANJAVUR - 612501 PH: .0435-2442566, 2442565, 9443264696.

MADRASI

2194. ABT LIMITED (4202-02-), MADURAI-DINDIGAL
BYE PASS ROAD,NEAR FATHIMA
COLLEGE,MADURAI - 625018
PH :9994400615.
2195. ABT LIMITED (4202-04-), 09, 109A, GST ROAD,
TIRUPURANKUNDRAM, MADURAI - 625005
PH :9600966164.
2196. SIVA AUTOMOTIVE TRADING PVT. LTD.
(4205-01-), 2C, GATE LOCK ROAD, NEAR NEW
RAMNAD ROAD, MADURAI - 625016
PH :7402780000.
2197. SIVA AUTOMOTIVE TRADING PVT. LTD.
(4205-02-), NO. 6-A, TPK ROAD, NEAR SAIBABA
TEMPLE, ANDALPURAM, MADURAI - 625003
PH :7402788840.
2198. ASIR AUTOMOBILES PVT LTD (4206-01-), 9,
CHAMBAKULAM, MELUR MAIN ROAD,
MATTUTHAVANI, MADURAI, TAMIL NADU -
625007
PH :9944059911.
2199. MEENAKSHI AUTO ZONE PVT. LTD. (4207-01-),
PLOT NO. 25 D. SIDCO INDUSTRIAL ESTATE,
KAPPALUR, MADURAI, TAMIL NADU - 625008
PH :9942299581.
2200. MEENAKSHI AUTO ZONE PVT. LTD. (4207-02-),
SURVEY NO. 238/2A, PLOT NO. 36, 37, 38,
TALLAKULAM VILLAGE, SIVAGAMI NAGAR,
NATHAM MAIN ROAD, MADURAI - 652 014
PH :9940224881.
- MADURANTHAKAM**
2201. AIE CARS (A UNIT OF AI ENTERPRISES PVT
LTD) (CEW1-01-), SURVEY NO. 38/3 A2B, NH-45,
MADURANTHAKAM, KANCHIPURAM - 603306
PH :7401212797.
- MALLASAMUDRAM**
2202. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(CWY1-01-), SF NO. 194/3C, MALLASAMUDRAM
MAIN ROAD, MALLASAMUDRAM TOWN,
TIRUCHENGODE TALUK, NAMAKKAL DIST.,
TAMIL NADU - 637503
PH :9894932019.
- MALLUR**
2203. THRIVENI CAR COMPANY PVT LTD. (CDH1-01-),
SURVEY NO.50/4A, AMANI AMMAPALAYAM
VILLAGE, DISTT.: DADHAGAPATTY SUB
REGISTRATION , MALLUR DISTT. SALEM -
636309
PH :0427-2422399.
- MANAMADURAI**
2204. ABT LIMITED (CHF1-01-), NO. 35, OLD RAMNAD
ROAD, MANAMADURAI TOWN, DISTRICT –
SIVGANGAI - . 630606
PH :9994450331.
- MANAPPARAI**
2205. PILLAI AND SONS MOTOR COMPANY
(SKW1-01-), PLOT NO.262, TRICHY DINDIGUL
BYPASS ROAD, VENGAIKURUCHI
VILLAGE,MANAPPARAI, TRICHY,TN - 621307
PH :8489900908.
- MANGALAPURAM**
2206. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(CLX1-01-), DOOR NO. 1/18, SURVEY NO. 75/1,
ATTUR MAIN ROAD, MANGALAPURAM (POST),
TALUK – RASIPURAM, DISTRICT – NAMAKKAL -
636202
PH :7094447871.
- MANNARGUDI**
2207. PILLAI & SONS MOTOR CO. (BKR1-01-), NO. 37,
THIRUTHURAIPONDI ROAD, MANNARGUDI,
THIRUVARUR DISTRICT, TAMIL NADU. - 614001
PH :7094411675.
- MAYILADUTHURAI**
2208. PILLAI & SONS MOTOR CO. (E701-04-),
46,VELLALAGARAM VILLAGE,
MAYILADUTHURAI, TAMILNADU - 609007
PH :04364-251767, 251765, 9442141703.
- MECHERI**
2209. SM CARS (CVK1-01-), SURVEY NO. 139/A,
PATTA NO. 653, AMANI M.KALPATTY VILLAGE,
MECHERI TOWN, METTUR TALUK, SALEM
DIST., TAMIL NADU - 636 453
PH :7094440010.
- MELUR**
2210. SIVA AUTOMOTIVE TRADING PVT. LTD.
(CHC1-01-), OLD SN. 138/1, SURVEY WARD C,
BLOCK NO. 1, T.S. NO. 21/7, VILLAGE AND
TOWN – MELUR, MELUR, DIST.-MADURAI. -
625109
PH :8098120000.
- METTUPALAYAM**
2211. ABT LIMITED (4101-0C-), PLOT NO. 6 TO
9,PONVIZHAI NAGAR, KARAMADAI KOVAI MAIN
ROAD, METTUPALAYAM - 641043
PH :95009 45094.
- METTUR**
2212. THRIVENI CARS (BUI1-01-), S.F. NO. 73/7A3C,
METTUR TO BHAVANI ROAD, NEAR
NATAMANGALAM BUS STOP,
MADHAIYANKUTTAI (PO), METTUR TALUK,
SALEM, TAMILNADU - 636452
PH :9159566999.
- MINJUR**
2213. RAJALAKSHMI CARS PVT. LTD. (BPE1-01-),
PLOT NO. 27, SRI JANAKI RATHINA NAGAR,
VILLAGE AND TOWN – MINJUR, PONNERI – 601203
DISTRICT – THIRUVALUR. - 601203
PH :044-27933331.
- NAGAPATTINAM**
2214. PILLAI & SONS MOTOR CO. (CQQ1-01-),
NO.18, KEELA ANTHANAPETTAI,
ANTHANAPETTAI, P.O. - MANAKKOLAI,
PUTHR, NAGAPATTINAM DISTT. TAMIL NADU -
611106
PH :4365220250.
- NAGARCOIL**
2215. ATHEN (S503-01-), RESURVEY NO. G.3/9-7,
BUILDING NO. 254-A/3 & 4 K.P ROAD
.PARAVATHIPURAM, NAGERCOIL
.KANYAKUMARI DISTRICT TAMILNADU - 629003
PH :8012029777.
- NAMAKKAL**
2216. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(X401-01-), SURVEY NO. 1/10-11, NEAR
MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL -
637001
PH :937164888.
2217. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(X401-03-), 1/41/21 NEAR PON NAGAR,
MUDALAIAPPATY, SALEM ROAD, NH-7,
NAMAKKAL (TAMIL NADU) - 637001
PH :737192888.
- NATRAMPALLI**
2218. GANESH CARS PVT. LTD. (SPR1-01-), NO:8/12-1,
NEAR ARJUNA SULOCCHANAM MAHAL,
BENGALURU- CHENNAI MAIN
ROAD,VELAKALNATHAM, NATRAMPALLI,
TIRUPATTUR DIST. TAMIL NADU - 635854. -
635854
PH :7397 53146.
- NEGAMAM**
2219. ABT LIMITED (CHD1-01-), 68, 69, ABT BUS
STAND, PALLADAM ROAD, PERIA NEGAMAM,
POLLACHI, TAMIL NADU - 642120
PH :99948 76794.
- OMALUR**
2220. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-04-),
123, 3B, NH-7, BANGALORE BYE PASS ROAD,
KOTTAMETTUPATTI, OMALUR, SALEM (DIST.),
TAMIL NADU - 636012
PH :8220010070/883529888.
2221. THRIVENI CAR COMPANY PVT LTD. (UM01-01-),
PLOT NO. 44 & 45, PALANIYAPPAA NAGAR
LAYOUT, NH-7, KAMALAPURAM VILLAGE,
OMALUR, DISTRICT – SALEM, TAMIL NADU -
636309
PH :4290-222711.
- OTY**
2222. SREE SARADHAMBAL AUTOMOBILES PVT LTD
(4103-05-), VIJAYANAGARAM FARM ROAD,
NEAR ROSE GARDEN, OOTY - 643001
PH :97511 09229.
- P.N. PALAYAM, COIMBATORE**
2223. SRI AMMAN CARS INDIA PVT LTD (SRA1-01-),
SURVEY NO:708, PLOT NO: 87-88 & 89,
PERNAMBUT TO GUDIYATTAM ROAD,
PERNAMBUT, VELLORE DISTRICT, TAMIL NADU
- 635810 - 635810
PH :7094403100.
- PERUNDURAI**

Dealer Network (AS ON 31.10.2023)

2232. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BTX1-01), SF NO.542/1, KOVAI MAIN ROAD, PERUNDURAI VILLAGE, PERUNDURAI DISTT. ERODE, TAMIL NADU - 638052
PH : 9597490777.

POCHAMPALLI

2233. SRI AMMAN CARS PVT. LTD. (CJW1-01), NEW SURVEY NO. 561/5, VILLAGE – JUMBUKUTTANPATTI, POCHAMPALLI, KRISHNAGIRI - 635206
PH : 9600466988.

POLLACHI

2234. ABT LIMITED (L301-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003
PH : 99944 53265.

POLUR

2235. GANESH CARS PVT. LTD. (GLV1-01), AZHAGO COMPLEX, SURVEY NO.77/1, CUDALOR TO CHITTOOR ROAD, POLUR, THIRUVANNAMALAI DISTRICT,TAMILNADU - 606803
PH : 9842345200.

PUDUKKOTTAI

2236. PLA MOTORS (2305-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKKOTTAI - 622003
PH : 04322-265566/67.

PUNJAI PUlipattI

2237. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BK01-01), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTU - 638459, SATHY THALUK, ERODE - 638459
PH : 6385810777.

RAJAPALAYAM

2238. MEENAKSHI (5V02-01), DOOR NO. 96, COTTON MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117
PH : 9443785681.

RAMANATHAPURAM

2239. SIVA AUTOMOTIVE TRADING PVT. LTD. (0U02-01), SURVEY NO. 172/1B2C, 172/2C, VILLAGE - ACHUNTHANVALAYAL, ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM, RAMANATHAPURAM. - 623502
PH : 8098110000.

RAMESHWARAM

2240. SIVA AUTOMOTIVE (SK1-01), NO.2307, SURVEY NO.279/3A, RAMNAD ROAD, ARIYANKADU, RAMESHWARAM, RAMANATHAPURAM DISTRICT, TAMILNADU - 623529
PH : 7402788898.

RANIPET

2241. GANESH CARS PVT. LTD. (CJJ1-01), SURVEY NO. 44/1, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET , TAMIL NADU. - 632403
PH : 9842330388.

RASIPURAM

2242. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BSJ1-01), SURVEY NO.41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI , SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401
PH : 4286-231402/7539972888.

REDHILLS

2243. CARS INDIA PVT. LTD. (1403-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066
PH : 9952000078.

SALEM

2244. ABT LIMITED (4101-03), 32 THAMANA CHETTY ROAD, ARISALIPALAYAM , SALEM - 636009
PH : 0427-406988, 406995.

2245. THRIVENI CAR COMPANY PVT. LTD. (A203-01), 12/21, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005
PH : 0427-2440000.

2246. S M CARS PVT. LTD. (A204-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGKURAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202
PH : 7094448000, 7034449000.

2247. THRIVENI CAR COMPANY PVT. LTD. (A203-03), SURVEY NO. 57, VILLAGE - MASINAICKENPATTI, AYOTHIAPATTINAM, AMMAPET, SALEM - 636103
PH : 0427-2291000.

2248. S M CAR PRIVATE LIMITED (A204-02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTI, SALEM, TAMILNADU - 636007
PH : 7094440053.

SANKAGIRI

2249. THRIVENI CAR COMPANY PVT LTD. (BTN1-01), SURVEY NO.171/5B, KCK PLAZA, KACHERIDADU, DEPUTY COLLECTOR ROAD, SALEM, SANKAGIRI (TAMIL NADU) - 637301
PH : 914283242600 +914283242601.

SANKARANKOVIL

2250. AADHI CARS PVT. LTD. (BXS1-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. - 627756
PH : 7397728025.

SATHY ROAD, ERODE

2251. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-09), SF:No:245, KANDHAYAN THOTTAM, SOOLAI, SATHY ROAD, VEERAPPANCHATTIRAM, ERODE, TAMILNADU - 638004
PH : 9655240486.

SATHYAMANGALAM

2252. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BSJ1-01), SURVEY NO.41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI , SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401
PH : 9597592777.

SATTUR

2253. MEENAKSHI AUTO ZONE PVT. LTD. (SDR1-01), SURVEY NO. 18/10,CHATRAPATTI VILLAGE, MADURI KANYAKUMARI NATIONAL HIGHWAYS, SATTUR, VIRUDHUNAGAR DISTRICT,TAMILNADU - 626203
PH : 9940094881.

SEYDUNGANALLUR

2254. ASIR AUTOMOBILES PVT LTD (S603-02), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK - SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU - 628809
PH : 8344992220.

SHOLINGUR

2255. GANESH CARS PVT. LTD. (GLU1-01), NO:401, ARAKKONAM MAIN ROAD,OPPOSITE TVS FOUNDRY, PANDIYANELLORE,SHOLINGHUR,WALAJA TALUK, RANIPET DISTRICT, TMILANADU - 631102
PH : 7397395259.

SIVAKASI

2256. MEENAKSHI AUTO ZONE PVT. LTD. (X602-01), 372 D & E, ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. - 626123
PH : 4562-231281.

SRIPERUMBUDUR

2257. RAJALAKSHMI CARS PVT. LTD. (7B01-01), SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBUDUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105
PH : 8939995469.

SRIVILLIPUTHUR (RAJAPALAYAM)

2258. ABT LIMITED (4202-03), NO. 10/32, PADIKKASUVAITHANPATTI . NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125
PH : 95090 05020.

SULUR

2259. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR - 641 402
PH : 0422-3199901.

TENKASI

2260. AADHI CARS PVT. LTD. (BXR1-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE - KUNARAMANALLUR, TENKASI . - 627814
PH : 9500991475.

2261. AADHI CARS PVT. LTD. (BXR1-02), DOOR NO. 47, MADHALAMPARI, TENKASHI AMBAL HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU . - 627 814
PH : 9500991475.

THAMMAPATI

2262. SM CARS (SNH1-01), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI,SALEM DISTRICT, TAMILNADU - 636113. - 636113
PH : 7094400910.

THANJAVUR

2263. PILLAI & SONS MOTOR CO. (E701-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU - 613007
PH : 04362-271723, 271724, 9443264164.

THARAMANGALAM

2264. THRIVENI (CSQ1-01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST. ,TAMIL NADU . - 636501
PH : 9159355999/9003504760.

THENI

2265. MEENAKSHI AUTO ZONE PVT. LTD. (9U02-01), DOOR NO. 87/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT - THENI - 625531
PH : 9789703881.

THIRUMULLAIVOYAL

2266. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD.) (CDW2-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULLAIVOYAL DISTT. CHENNAI - 600062
PH : 7305087044.

THIRUVALLUR

2267. KHIVRAJ MOTORS PVT LTD. (1404-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001
PH : 99520 78443.

2268. KHIVRAJ MOTORS PVT LTD. (1404-05), PLOT NOS.218,219,220,225,226,227,228 AND S.NOS.186,186/ EMPIRE CITY PART-3, KAKKULUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001
PH : 97103 94818.

THIRUVANNAMALAI

2269. GANESH CARS PVT. LTD. (C601-03), NO.-5, NH-78, KRISHNAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601 PH :9842305072.
- THIRUVARUR**
2270. PILLAI & SONS MOTOR CO. (E701-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001 PH :04366-250250, 9442163707.
2271. PILLAI & SONS MOTOR COMPANY (LJ01-01), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 601/681, SUNDARAPALAYAM, NARSINGHAMPET, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001 PH :9442163509.
- THISAYANVILLAI**
2272. AADHI CARS PVT. LTD. (CVL1-01), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHU, THISAYANVILLAI. - 627 657 PH :7339511187.
- THUCKALAY**
2273. ATHENS (BWQ2-01), DOOR NO. 5/76B, (RE SURVEY NO-530/7) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURUCHI, VILLAGE – MUTHALAKURUCHI, KALKULAM-TALUK, THUCKALAY, DISCTRICK – KANYAKUMARI, TAMILNADU - 629174 PH :8012029888.
- THURAIYUR**
2274. PLA MOTORS (CSE1-01), D.NO.:5/300, SINGALANDHUPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010 PH :9486763725.
- TIRUCHENDUR**
2275. ASIR AUTOMOBILES PVT LTD (CCJ1-01), SURVEY NO. 220/1D1A, 221/3, 221/4, 221/5, 221/5A, 221/B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215 PH :7373900220.
- TIRUCHENGODE**
2276. SREE SARADHBAL AUTOMOBILES PVT LTD (X401-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE - 637001 PH :4288-282292.
- TIRUNELVELI**
2277. AADHI CARS PVT. LTD. (A303-01), PLOT NO. 261, MADURAII MAIN ROAD, KARAIERUPPU, TIRUNELVELI, TAMIL NADU - 627357 PH :9500991610.
2278. AADHI CARS PVT. LTD. (A303-03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU - 627 011. PH :9500991610.
- TIRUNVELI**
2279. AADHI CARS PVT. LTD. (A303-04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU - 627001 PH :95009 91479.
- TIRUPATHUR**
2280. GANESH CARS PVT. LTD. (BDP1-01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601 PH :9842308909.
- TIRUPATTUR (SIVAGANGAI)**
2281. ABT LIMITED (CHH1-01), DOOR NO. 8/2/29A, KARAUKUDI ROAD, TIRUPATHUR, DISTRICT – SIVAGANGAI - 630211 PH :999450331.
- TIRUPUR**
2282. ABT LIMITED (4101-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR - 641601 PH :95009 98368.
2283. SHASHI CARS PVT LTD (Y701-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604 PH :044-2430275/ 2430276.
- TIRUTHANI**
2284. CARDS INDIA PVT. LTD. (CIC1-01), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI,TAMILNADU - 631209 PH :7358773860.
- TIRUVANNAMALAI**
2285. SRI AMMAN CARS INDIA PVT LTD. (LX02-01), 2A/2, SURVEY NO. 367/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601 PH :7094471293.
- TONDI**
2286. SIVA AUTOMOTIVES (SHW1-01), SURVEY NO: 85/16, WARD 10/78, SOUTH THOUPU STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU - 623409 PH :74027788820.
- TRICHY**
2287. ABT LIMITED (2302-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY - 620001 PH :0431-4221620.
2288. PLA MOTORS (2305-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009 PH :9994599777/9600950960.
2289. ABT LIMITED (2302-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005 PH :0431-4221555.
2290. PLA MOTORS (2305-03), 10A & B, ALEXANDRIA ROAD, CANTONMENT, TRICHY - 620001 PH :0431-2411540/530.
2291. PILLAI & SONS MOTOR CO. (2306-01), SURVEY NO. 10B, 1/A/D, CHENNAI TRICHI BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY. - 620002 PH :8489900902, 9384826814.
- TUTICORIN**
2292. ASIR AUTOMOBILES PVT LTD (S603-01), SURVEY NO. 25/1B, MAPPILAIURINI VILLAGE, ETТАYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002 PH :7373501220.
- UDUMALPET**
2293. ABT LIMITED (QR01-01), 2/3, PERIYAKOTTAI PIRUVU, S.V. MILL POST, UDUMALPET - 642126 PH :99944 41645.
- USILAMPATTI**
2294. SIVA AUTOMOTIVE TRADING PVT LTD (SNC1-01), NO. 33/1B2A, USILAMPATTI - MADURAI HIGHWAY,POTTULUPATTI PANCHAYATH, USILAMPATTI, MADURAI DISTRICT, TAMILNADU-625532 - 625532 PH :7868088840.
- UTHANGARAI**
2295. SRI AMMAN CARS INDIA PVT. LTD. (CFY1-01), SURVEY NO. 10/41, 104/1B, VILLAGE – THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304 PH :9715046600.
- UTHUKOTTAI**
2296. KHIVRAJ MOTORS PVT LTD. (CUC1-01)- SURVEY NO. 44/21, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST-THIRUVALLUR - 602 026 PH :7299635936.
- VALLYUR**
2297. AADHI CARS PVT. LTD. (BXQ1-01), DOOR NO. 314/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002 PH :7373091462.
- VANDAVASI**
2298. GANESH CARS PVT. LTD. (CRN1-01), SURVEY NO.27, KEELSATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408 PH :7395802484.
- VANIYAMBADI**
2299. GANESH CARS PVT. LTD. (BJY1-01), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801 PH :9842327709.
- VELLORE**
2300. GANESH CARS PVT. LTD. (C601-01), 91 NEW BY-PASS ROAD, VELLORE - 632004 PH :9842377110.
2301. SRI AMMAN CARS INDIA PVT. LTD. (C602-01), DOOR NO. 68, SURVEY NO. 66/7, NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUK, GANDHINAGAR, VELLORE DIST., TAMIL NADU . - 632006 PH :7094471320, 7094471321.
2302. SRI AMMAN CARS INDIA PVT. LTD. (C602-02), SURVEY NO. 316/3B2, 316/3A, 316/BB, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE VELLORE TALUK & DIST, ON NH48 (CHENNAI – BENGALURU HIGHWAY), VELLORE, TAMILNADUR - 632010 PH :7094471320.
- VILLUPURAM**
2303. ABT LIMITED (Q001-02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602 PH :04146-225509 / 225590.
- VIRUDHACHALAM**
2304. ABT LIMITED (BMA1-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU . - 606101 PH :04143-262631/262632/262633.
- VIRUDHUNAGAR**
2305. MEENAKSHI AUTO ZONE PVT LTD (SCF1-0A), DOOR NO:6/504, SURVEY NO. 116, PELAMPATTI VILLAGE,VIRUDHUNAGAR MADURAI HIGH WAY,OPPOSITE TO VVV COLLEGE , TALUK & DIST. VIRUDHUNAGAR, TAMILNADU - 626001 PH :9940094981.
- TAMILNADU**
- ALANGUDI**
2306. PLA MOTORS (SLR1-01), S. NO. 400/6-A-2, NO. 1/85, MANGALAPURAM, PUDDUKOTTAI TO ALANGUDI ROAD, NEAR KNP KALYANA MANDAPAM, ALANGUDI TOWN & TALUK, PUDDUKOTTAI DIST., TN - 622301 - 622301 PH :8870454466.

Dealer Network (AS ON 31.10.2023)

CHENNAI

2307. VISHNU CARS (1488-01), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTANGAL, CHENNAI,TN - 600032 PH :7550360444.

CHENNAI- MAMBAKKAM

2308. KHIVRAJ MOTORS (1404-G1), SURVEY NO:76/A, NO:27, PLOT NO. D-2, KEELAKOTTAYUR, VANDALUR TO KELAMBakkAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI,TN - 600127 PH :9841591558.

CHEPPET

2309. GANESH CARS (SGY1-01), DOOR NO: 35/C, CHEPPET TOWN, CHEPPET TALUKA, TIRUVANNAMALAI DIST.,TAMILNADU, - 606 801 PH :98423 06337.

CHINNAMANUR

2310. ABT LIMITED (SKX1-01), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO.8/15, PERIYAKULAM TO CHINNAMANUR MAIN ROAD KEELAPOOLANANDHAPURAM, CHINNAMANUR MUNICIPAL TOWN & TALUK, THENI DIST.,TN - 625515 - 625515 PH :9715863213.

DENKANIKKOTTAI

2311. AMMAN CARS (SDT1-01), SURVEY NO:766/ 1B11, THABILAGOUNDAN THOTTI, DENKANIKKOTTAI, KRISHNAGIRI DISTRICT, TAMILNADU - 635107 PH :9685599935.

DHARAPURAM

2312. SREE SARADHAMBAL AUTOMOBILES PVT LTD (QNO-01-1), SF 134/4A3, DINIDIGUL BYPASS ROAD, NEAR INDIAN OIL PETROL PUMP, DHARAPURAM TOWN AND TALUKA, TIRUPPUR DIST., TAMILNADU-638656 - 638656 PH :9787853000.

GANGAVALLI

2313. THRIVENI CARS (SOS1-01), SURVEY NO # SF NO. 22/3A1A,106 ATTUR MAIN ROAD,GANGAVALLI,SALEM, TN - 636105 PH :9159722999.

KAWALKINARU

2314. AADHI CARS PVT. LTD. (CSU1-01), SURVEY NO:1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAVALKINARU JUNCTION, KAVALKINARU (VADAKANKULAM), TIRUNELVELI - 627105 PH :7339111259.

KULASEKHARAM

2315. ATHEN CARS (SIL1-01), ITE NO : 409/17A – ARANIVILAI, NEAR RANGE OFFICE, CONVENT ROAD – KULASEKARAM, KALKULAM –TALUK,KANIYAKUMARI DIST. TN - 629 161 PH :7094471569.

KUMBAKONAM

2316. PILLAI AND SONS MOTOR CO. (E701-06)-, D. NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO, THIRUBUVANAM TOWN & POST, KUMBAKONAM, THANjavur DISTRICT, TAMILNADU - 612103 PH :8489900136.

MADURAI

2317. SIVA AUTOMOTIVE TRADING PVT LTD (4205-03), PATA NO. 615, SURVEY NO. 32/2, 32/4, THENI MAIN ROAD, ACHAMPATHU, MADURAI, TN - 625019 PH :7402738888.

NEYVELI

2318. VISHNU CARS (CPN1-01), SURVEY NO:545/2A1A, NH-45C, OPP. NATIONAL COLLEGE,KUMBAKONAM - CHENNAI HIGH WAY, NEAR NEYVELI ARCH GATE, NEYVELI T.S. KEELAOLLAI, MARUNGUR POST,PANRUTI,CUDALORE DISTRICT, TAMILNADU - 607103 PH :9384059575.

PERUMBAKKAM

2319. KHIVRAJ MOTORS PVT LTD (SSL1-01-), NO:1,VARALAKSHMI NAGAR, THIRUVALLUR ROAD, PERAMBAKKAM,KANCHIPURAM DIST, TAMILNADU- 631402 PH :7338786693.

SIVAGANGAI

2320. ASIR AUTOMOBILES (SDC1-01), S. NO: 144/1, SIVAGANGAI-THONDII ROAD, PAIYAIRPILLAIVAYAL, SIVAGANGAI,TAMILNADU - 630561 PH :9750372220.

THANJAVUR

2321. PLA MOTORS FIRM (E702-01), SURVEY NO. 173/6B4, TRICHY-THANjavur ROAD, NANUKKOTTAI BYPASS, THANjavur, TAMILNADU - 613005 PH :9344006433/9344003877.

THIRUMAZHISAI

2322. CARS INDIA/PVT.LTD (SMH1-01)- DP 30, SIDCO INDUSTRIAL ESTATE, THIRUMAZHISAI, - 600124 PH :9500064259.

THOPPUR

2323. SRI AMMAN CARS (SLU1-01), SITE NO. 422 /2A, BANGALORE TO SALEM HIGH WAY, AMMANI, THOPPUR VILLAGE & TOWN NALLAMPALLI TK, DHARMAPURI DISTRICT, - 636352 PH :9790004273.

TINDIVARAM

2324. VISHNU CARS (SD11-01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVARAM, VILUPPURAM,TAMILNADU - 604102 PH :9500039023.

TIRUPPUVANAM

2325. MEENA KSHI AUTO ZONE PVT LTD (SQZ1-01-), NO:21,BAKHYA NAGAR, WARD NO:1, MANDAPAM MAIN ROAD, TIRUPPUVANAM, SIVAGANGA DISTRICT, TAMIL NADU - 630611 - 630611 PH :9442799581.

UTHIRAMERUR

2326. AIE CARS (SHG1-01), SURVEY NO:383/3B-B2, UTHIRAMERUR MAIN ROAD, UTHIRAMERUR, KANCHEEPURAM DISTRICT, TAMILNADU - 603406 PH :7299057387.

VELLAKOVL

2327. SRI CITI AUTO (SGO1-01-), SURVEY NO:502/C &371/D, NO. 196,197,KOVAI KARUR MAIN ROAD, VELLAKOVL, TIRUPUR DIST. , TAMILNADU - 638111 PH :9994606000.

VENGAL

2328. VISHNU CARS PVT LTD (STC1-01-), NEW SURVEY NO:67/1B, 67/20, CHIMAYA NAGAR,THAMARAIPAKAM VILLAGE, VENGAL,THIRUVALLUR DIST., TAMILNADU- 601103 - 601103 PH :9500121559.

TELANGANA

ADILABAD

2329. ADARSHA AUTOMOTIVES PVT LTD (BTM1-01-), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA - 504001 PH :9133307724.

ARMUR

2330. VARUN MOTORS PVT. LTD. (BBN1-01-), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224 PH :9052901888.

BASARA

2331. ADARSHA (SSY1-01-), URVEY NO 59/E, RAVINDRAPUR, BASARA, NIRMAL DISTRICT, TELANGANA - 504101 PH :8886092222.

BATCHUPALLY , HYDERABAD

2332. SAI SERVICE PRIVATE LIMITED (1011-09-), SURVEY NO 499/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090 PH :7330771111.

BELLAMPALLY

2333. ADARSHA AUTOMOTIVES (SJZ1-01-), SURVEY NO 5/31, PEDANAPALLI, BELLAMPALLY, MANCHERIAL DISTRICT, TELANGANA - 504251 PH :8886092222.

BHADRACHALAM

2334. VARUN MOTORS (CLZ1-01-), H-NO 1-138/1B-OLD SARPKA ROAD, BHADRACHALAM, BHADRADI-KOTHAGUDEM, TELANGANA - 507111 PH :9885576602.

BHUPALAPALLY

2335. ADARSHA AUTOMOTIVES PVT LTD (D502-04-), 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169 PH :7799790526.

BODHAN

2336. VARUN MOTORS PVT. LTD. (O801-01-), PLOT NO. 5/2, ACHANAPALLY CROSS ROAD, BODHAN, DIST.-NIZAMABAD, TELANGANA. - 503 185 PH :9885576602, 9553714189.

CHEVELLA

2337. GEM MOTORS (INDIA) PVT. LTD. (CBL1-01-), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. - 510101 PH :9912899128, 9912834567.

DUBBAK

2338. AADARSHA (-), ADARSHA AUTOMOTIVE PVT LTD, OPP. BUS DEPOT, BYPASS ROAD, SIDDIPEET, TELANGANA - 502108 PH :9160746633.

ETUNAGARAM

2339. WIN MOTORS (SOJ1-01-), H.NO 12-412 & 12-413,AKULAVARI GHANPUR, ETURNAGARAM, MULUGU DISTRICT,TELANGANA - 506165 PH :8688828005.

GADWAL

2340. SRI JAYARAMA MOTORS PVT. LTD. (WP01-02-), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNool ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125 PH :8096990074, 8096996671.

GAJWEL

2341. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYU1-01), SURVEY NO. 220, VILLAGE - PRAGNAYPUR, GAJWEL, DISTRICT - MEDAK, TELANGANA . - 502311 PH :8885088080, 9849017827.
- GHATKESAR**
2342. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYU1-01), 3-21, JODIMETLA, CHOURA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT - RANGA REDDY . - 501301 PH :8885088075, 9849017827.
- HUSNABAD**
2343. ADARSHA AUTOMOTIVES PVT LTD (GJE1-01), SURVEY NO. 202/E, H. NO. 12-1/4 & 12-1/A, VILLAGE & MANDAL - HUSNABAD, DIST. -SIDDIPET, TELANGANA . - 505467 PH :8886092222, 7995835552.
- HYDERABAD**
2344. THE MITHRA AGENCIES (1002-01), 1-8-670, NEAR RTC CROSS ROAD,AZAMABAD INDUSTRIAL AREA, HYDERABAD . - 500020 PH :9966838294.
2345. RKS MOTORS PVT. LTD. (1003-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD . - 500482 PH :0444544443, 9010811166.
2346. RKS MOTORS PVT. LTD. (1003-02), R-4/A/JDA BLOCK, INDUSTRIAL ESTATE, UPPAL, HYDERABAD . - 500039 PH :040 23434504, 9010822210.
2347. VARUN MOTORS PVT. LTD. (4603-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD . - 500037 PH :9885208555, 9985145222.
2348. VARUN MOTORS PVT. LTD. (4603-08), ADITYA NAGAR COLONY ,ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD . - 500008 PH :64551700, 8886114856.
2349. VARUN MOTORS PVT. LTD. (1010-01), PLOT NO. VI/VII A & B/JUNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT . - 500070 PH :9885208555.
2350. VARUN MOTORS PVT. LTD. (4603-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD . - 500036 PH :4553395, 4547676, 9885093360.
2351. RKS MOTORS PVT. LTD. (1003-04), 16-11-19/5/2/C, SALEEM NAGAR COLONY, MALAKAPET (NEAR FARHAT HOSPITAL),HYDERABAD . - 500036 PH :9010811192.
2352. THE MITHRA AGENCIES (1002-03), PLOT NO. 3-4-10,NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD . - 500081 PH :04023113399 04023113388 9959912702.
2353. RKS MOTORS PVT. LTD. (1003-05) 11-6-191/192,OPP. HOTEL HARSHA,PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD . - 500001 PH :9848811158.
2354. VARUN MOTORS PVT. LTD. (4603-0A-), 1-11-200,SHAMMALA BUILDING BEGUMPET, HYDERABAD . - 500016 PH :9985206555.
2355. THE MITHRA AGENCIES (1002-04), 8-18-138, PLOT NO. 8,NEAR MARGADARSHI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD . - 500074 PH :9963551265.
2356. GEM MOTORS (INDIA) PVT. LTD. (1009-01), RAGHUVENDRA SOCIETY,KONDAPUR,,HYDERABAD , ANDHRA PRADESH . - 500084 PH :9912899128.
2357. GEM MOTORS (INDIA) PVT. LTD. (1009-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH . - 500072 PH :9912344553.
2358. SAI SERVICE PRIVATE LIMITED (1011-01-), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR,,BALANAGAR, HYDERABAD . - 500037 PH :9010822755.
2359. THE MITHRA AGENCIES (1002-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD . - 500076 PH :04027176999 04027177999 9983551267.
2360. VARUN MOTORS PVT. LTD. (1012-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD . - 500008 PH :9885104860, 69997979.
2361. RKS MOTORS PVT. LTD. (1003-08), D.NO.1-10-1/2851, OPP. VEGETABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD . - 500062 PH :7799779810.
2362. SAI SERVICE PRIVATE LIMITED (1011-04-), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD . - 500059 PH :7799352000.
2363. VARUN MOTORS PVT. LTD. (4603-0G-), 1-10-28/1 SY. NO.285, KUSHAIKGUDA, NEAR ECIL X ROADS, HYDERABAD . - 500062 PH :7799600093.
2364. VARUN MOTORS PVT. LTD. (4603-0H-), PLOT NO. 135/41, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBILEE HILLS, HYDERABAD, ANDHRA PRADESH . - 500033 PH :8886322776.
2365. VARUN MOTORS PVT. LTD. (4603-0J), PLOT NO. 1-45, SY NO.1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE . - 500019 PH :8886067847.
2366. SAI SERVICE PRIVATE LIMITED (1011-07-), PLOT NO.8-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD . - 502032 PH :97038111411.
2367. ADARSHA AUTOMOTIVES PVT LTD (1014-01-), 18-245 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERABAD . - 500005 PH :8142326633.
2368. RKS MOTORS PVT. LTD. (1003-09), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD . - 500072 PH :9010811131.
2369. SAI SERVICE PRIVATE LIMITED (1011-08-), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD . - 500018 PH :7799360003.
2370. KALYANI MOTORS PVT. LTD. (1018-01-), PLOT NO. A-23 & A31/1, I.D.A. NACHARAM, HYDERABAD . - 500076 PH :9100114863.
2371. GEM MOTORS (INDIA) PVT. LTD. (1009-03-), SURVEY NO. 135A & 135/1A, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA . - 500089 PH :9912341524.
2372. ADARSHA AUTOMOTIVES PVT LTD (1014-02-), H. NO. 8-64/1, RUDRA COLONY, SHAMSABAD, HYDERABAD . - 501218 PH :9603206633.
2373. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-01-), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SQUARE, VILLAGE - GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE . - 500032 PH :9100909401.
2374. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-02-), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD . - 500081 PH :7799916666.
- Ibrahimpatnam**
2384. PAVAN MOTORS PVT. LTD (CSF1-01-), S.NO.123/E, MPP. PATELGUDA, IBRAHMPATNAM, RANGA REDDY . - 501506 PH :8790144499.
- JAGITIAL**

Dealer Network (AS ON 31.10.2023)

2385. ADARSHA AUTOMOTIVES PVT LTD (N601-04),
HOUSE NO.-1-5-216/A,OPPOSITE TO KVA
SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, -
505327
PH :8886152222.

JANGAON

2386. ADARSHA AUTOMOTIVES PVT LTD (K101-01),
H.NO.339, HYDERABAD ROAD, JANGAON. -
506167
PH :7799626633.

KAMAREDDY

2387. VARUN MOTORS PVT. LTD. (KX01-01),
H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA
COLONY, CHINNA MALLAREDDY VILLAGE,
KAMAREDDY - 503111
PH :9985557570.

KARIMNAGAR

2388. ADARSHA AUTOMOTIVES PVT LTD (N601-01),
H.NO. 8-6-313/1,HYDERABAD ROAD,BY-PASS
JUNCTION,KARIMNAGAR - 505001
PH :8886600315.

2389. ADARSHA AUTOMOTIVES PVT LTD (N601-05),
H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR,
KARIM NAGAR, TELANGANA - 505001
PH :8886152222.

2390. VARUN MOTORS PVT. LTD. (N603-01),
BEARING NO. 1-81/3/10/2, SURVEY NO. 221 &
222, REKURTHY VILLAGE,
KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR
MANDAL & DIST., TELANGANA - 505 001
PH :09133376762, 888619373.

2391. VARUN MOTORS (N603-02), SURVEY NO.
277,278/B, AREPALLY VILLAGE,
TEEGALAGUTTAPALLI GRAM PANCHAYAT,
KARIMNAGAR - 505001
PH :9885210555.

KEESARA

2392. JAYABHERI AUTO (SEI1-01), H.NO 3-56/9/6A,
SURVEY NO 5,KEESARA,
MEDCHAL-MALKAJGIRI, TELANGANA - 501301
PH :9676076666.

KHAMMAM

2393. MITHRA AUTO AGENCIES PVT LTD (2604-02),
SURVY NO. 182,WARANGAL ROAD, OPP. FCI
GODOWNS,PEDA THANDA,KHAMMAM - 507003
PH :8886063527.

KHANAPUR

2394. VARUN MOTORS (SN1D-01), NO:14-10A, NEAR
SAI BABA TEMPLE, OPP. GIRLS HIGH SCHOOL,
VILL & MANDAL: KHANAPOOR, DIST- NIRMAL -
504203
PH :8886619373.

KODAD

2395. PAVAN MOTORS PVT. LTD (BRP2-01), SURVEY
NO. 42, KOMARBANDA REVENUE LIMITED,
KODAD , DISTRICT - NALGONDA, TELANGANA -
508206
PH :8008889995.

KOLLAPUR

2396. SRI JAYARAMA (SHC1-01), SURVEY NO
259/A/2, 259/E2,KOLLAUPUR, NAGAR KURNNOOL
DISTRICT, TELANGANA - 509102
PH :9985880015.

KOSGI

2397. JAYARAMA (-), SY. NO. 1798/B, KOSGI TOWN,
SITUATED TANDOR ROAD KOSGI(G.P &
MANDAL), NARAYANPET DIST, TELANGANA -
509339
PH :8096990069.

KOTHAGUDEM

2398. VARUN MOTORS PVT. LTD. (2603-04), DOOR
NO. 3-53/B,LAKSHMINIDAVI
PALLI BHADRACHALAM ROAD, KOTTHAGUDEM
- 507101
PH :8297168222/9052549111.

LUXITTIPET

2399. VARUN MOTORS (SSF1-01), SURVEY NO 289/E,
NEAR BY SSS GARDENS LUXETTIPET,
MANCHERIL DISTRICT, TELANGANA - 504215
PH :8297848999.

MAHBUBABAD

2400. ADARSHA AUTOMOTIVES PVT LTD (CQS1-01),
SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE
AND MANDAL, MAHBUBABAD. - 506101
PH :9177746333, 7799700525.

MAHBUBNAGAR

2401. SRI JAYARAMA MOTORS PVT. LTD. (WP01-01),
PLOT NO.C1 & C2, INDUSTRIAL ESTATE,
METTUGADA, MEHBOOBNAGAR - 504001
PH :8096998846.

MAHESHWARAM

2402. ADARSHA AUTOMOTIVES PVT LTD (CQR1-01),
(BEARING #5-187, SURVEY NO.336/A1, VILLAGE
& MANDAL: MAHESHWARAM DISTT. RANGA
REDDY . - 501359
PH :8142326633, 9703152222.

MANCHERIAL

2403. ADARSHA AUTOMOTIVES PVT LTD (N601-03),
BEHIND MAHINDRA TRACTORS
SHOWROOM,BELLAMPALLY ROAD,
MANCHERIAL , DISTT. ADILABAD - 504208
PH :8886302222.

MANTHANI

2404. VARUN MOTORS (SHS1-01), SURVEY NO 1018,
H NO 16-4/2, PLOT NO 5, LAINGADDA STREET,
MANTHANI . - 505184
PH :8886619373.

MEDAK

2405. VARUN MOTORS PVT. LTD. (KF01-01),
SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK
(MDL & TOWN) - 502110
PH :9154953337.

MEDCHAL

2406. AUTOFIN LIMITED (CID1-01-), H. NO. 11-27/1,
SURVEY NO.401, MEDCHAL VILLAGE AND
MANDAL, DIST. - MEDCHAL . - 501401
PH :8885040020.

METAPALLY

2407. ADARSHA (BFJ1-01-), SURVEY NO. 40/U/2
CHOULMADHI, METPALLY PIN CODE 505325 -
505325
PH :8886092222.

MIRYALAGUDA

2408. PAVAN MOTORS PVT. LTD (WR01-01-), SURVEY
NO-940 &943; (OPPOSITE TO MINA
ENGINEERING COLLEGE) KARPETPALLY
ADDANKI BY-PASS ROAD,MIRYALAGUDA
,NALGONDA DISTRICT,ANDHRA PRADESH -
508207
PH :8790900399.

MOINABAD

2409. GEM MOTORS (INDIA) PVT. LTD. (CFN1-01-),
SURVEY NO. 70, PLOT NO. 4, VILLAGE AND
GRAM PANCHAYAT - HIMAYATH NAGAR,
MANDAL - MOINABAD, DISTRCT - RANGA
REDDY . - 500075
PH :9912899128, 7799799485.

NAGARKURNNOOL

2410. SRI JAYARAMA MOTORS PVT. LTD. (EV01-01-),
SURVEY NO.44/A AND 45/A, UYYALWADA
VILLAGE, NAGARKURNNOOL, TELANGANA -
509209
PH :8096990074.

NALGONDA

2411. PAVAN MOTORS PVT. LTD (AN01-01-),
CHERLAPPALLY VILLAGE, NALGONDA ROAD,
NALGONDA - 508001
PH :247399.8790344499.

NARAYANKHED

2412. VARUN MOTORS PVT. LTD. (CGI1-01-), D. NO.
1-6-111/25/B/5/A/1, SY NO. 57/2, BHUMAN
COLONY, GRAM PANCHAYAT & MANDAL -
NARAYANKHED, DISTRICT - MEDAK,
TELANGANA - 502286
PH :9885301055.

NARAYANPET

2413. SRI JAYARAMA MOTORS PVT. LTD. (BPG1-01-),
SURVEY NO. 4684, MAHABUBNAGAR ROAD,
NARAYANPET TOWN, DIST-.MAHABUBNAGAR,
STATE - TELANGANA . - 509210
PH :8096997701, 7893177448.

NARSAPUR

2414. KALYANI MOTORS PVT. LTD. (SCX1-01-),
SURVEY NO 66, BLOCK
NO-19,NARSAPUR,DISTRICT:MEDAK,
TELANGANA . - 534275
PH :9100067766.

NIRMAL

2415. ADARSHA AUTOMOTIVES PVT LTD (N601-02-),
H. NO. 1-1-131, SHASTRINAGAR,MANCHIRIAL
ROAD, DISTT. ADILABAD, NIRMAL - 504106
PH :8886342222.

NIZAMABAD

2416. VARUN MOTORS PVT. LTD. (IH02-01-), PLOT
NO. GP 1-57/A1,PANGARA
BORGOAN,NIZAMABAD - 503230
PH :8297848999, 9052080444.

PALWANCHHA

2417. VARUN MOTORS PVT. LTD. (HF01-01-), SURVEY
NO.758 & 757, NEHRU NAGAR, PALWANCHHA
(NEW POLANCHA) MANDAL & TOWN,
BHADRADRI KOTHAGUDEM DISTT.,
TELANGANA . - 507115
PH :8297163222.

PARGI

2418. VARUN MOTORS PVT. LTD. (CBO1-01-), HOUSE
NO. 2-356 JANGAIAH COMPLEX, SURVEY NO.
217/E4, JAYANTHI NAGAR COLONY, MANDAL -
PARGI, DISTRICT - RANGA REDDY . - 510501
PH :988521055, 9885200000.

PARKAL

2419. ADARSHA (SEK1-01-), SY.NO 946, H.NO 5-27,
VIKAS NAGAR, PARKAL,WARANGAL . - 506164
PH :8886742222.

PEDAPALLY

2420. ADARSHA AUTOMOTIVES PVT LTD (GKN1-01-),
SURVEY NO 142, H NO 185, RANGAMPALLI
VILLAGE, PEDDAPALLI , TELANGANA - 505172
PH :8886618155, 8886672222.

RAMAGUNDAM

2421. ADARSHA AUTOMOTIVES PVT LTD (BGA1-01-),
5-6-172 SURVEY NO . - 259/B, MEDIPALLY
SHIVAR, RAMAGUNDAM MUNICIPALITY,
DISTRICT - KARIM NAGAR, ANDHRA PRADESH
- 505209
PH :8886144550.

RAMAYAMPET

2422. VARUN MOTORS PVT. LTD. (CD01-01-),
SURVEY NO. 1626 & 1626/2 SITUATED AT
BLOCK NO. 16, RAMAYAMPET, DISTRICT -
MEDAK . - 502101
PH :9885208555, 9703803399.

SADHASHIVPET

2423. SAI SERVICE (SFQ1-01-), PLOT NO. 2, SY NO. 974, GURUNAGAR COLONY, OLD BOMBAY HIGHWAY ROAD, SADASHIVPET, SANGAREDDY DIST. - 502291 - . 502291 PH.:9966377888.

SANGAREDDY

2424. SAI SERVICE PRIVATE LIMITED (1011-05-), H.NO.4-8/2/14/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH.:7661811000.

SATUPALLI

2425. MITHRA AUTO AGENCIES PVT LTD (SHD1-01-), SURVEY NO. 75 NEAR VIVEKANANDA STATUE, SATUPALLI, KHAMMAM - . 507303 PH.:9848988312.

SECUNDERABAD

2426. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (KG01-01-), A1, MOTI VALLEY,TRIMULCHERRY,SECUNDERABAD, - 500015 PH.:040 44554747, 8885088080.

2427. AUTOFIN LIMITED (KG06-01-), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011 PH.:8885040130.

2428. VARUN MOTORS PVT. LTD. (4603-01-), 1-10-176/1, BEHIND VARUN TOWERS-I, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE - . 500016 PH.:9985552452.

2429. RKS MOTORS PVT. LTD (K605-01-), PLOT NO. 207, TADBUND, SECUNDERABAD, - . 500009 PH.:9010801004.

2430. AUTOFIN LIMITED (K606-02-), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD, - . 500090 PH.:8885040126.

2431. PAVAN MOTORS PVT. LTD (K608-02-), PLOT NO. 1-12, 749, 750, SURVEY NO. 751/2, VENKATADRI NAGAR, NEW MIRJALGUDA, MALKAJGIRI, SECUNDERABAD, TELANGANA - . 500047 PH.:9121293690.

SHAD NAGAR

2432. SRI JAYARAMA MOTORS (P) LTD. (WS01-01-), SURVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT., ANDHRA PRADESH - . 500216 PH.:9086996671.

SHAMIRPET

2433. RKS MOTOR PVT. LTD. (SDE1-01-), SHED NO 2-242, MAJEDPUR CROSS ROADS,SHAMIRPET, MEDCHAL-MALKAJGIRI,TELANGANA - . 500078 PH.:9848866618.

SHANKARPALLY

2434. SAI SERVICE PRIVATE LIMITED (CEX1-01-), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - . 501203 PH.:9966377888, 9912899128, 9703811011.

SIDDIPET

2435. ADARSHA AUTOMOTIVES PVT LTD (CAL1-01-), SURVEY 19/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA - . 502103 PH.:09703716633, 9160746633.

SIRCILLA

2436. ADARSHA AUTOMOTIVES PVT LTD (BYW1-01-), H. NO. 10-1/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR ROAD, SIRCILLA, DISTRICT – KARIMNAGAR, TELANGANA - . 505301 PH.:8886618155, 8142244131.

SURYAPET

2437. PAVAN MOTORS PVT. LTD (BLC1-01-), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - . 508213 PH.:9008899995, 27502750.

TALLADA

2438. MITHRA AUTO (SOU1-01-), SURVEY NO 890/A, D.NO 7-8, NARAYANAPURAM, TALLADA, TELANGANA - . 501767 PH.:9848988312.

TANDUR

2439. VARUN MOTORS PVT. LTD. (CFR1-01-), H. NO. 2-1/203, 2-1/203/A & 2-1/209, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDEPPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA - . 501141 PH.:8886619370.

THORRUR

2440. ADARSHA AUTOMOTIVES PVT LTD (BYV1-01-), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - . 506163 PH.:9059438007, 7799790527.

TOOPRAN

2441. ADARSHA (SE1-01-), PLOT NO 7&8, SY NO 185,184,179U, NAGULAPALLY VILLAGE,TOOPRAN MANDAL,TELANGANA STATE: TELANGANA CITY: TOOPRAN PIN : 502334 CITY CATEGO - . 502334 PH.:9291859954.

UTNROO

2442. ADARSHA AUTOMOBILES (SEG1-01-), OPP., KB COMPLEX, UTNROO, DIST- ADILABAD - . 504311 PH.:9075792221.

VIKARABAD

2443. GEM MOTORS (INDIA) PVT. LTD. (BYM1-01-), SHOP NO. 3-2-93/2, VILLAGE – YENNAPALLY, VIKARABAD MUNICIPALITY, VIKARABAD, DISTRICT – RANGA REDDY, TELANGANA - . 501101 PH.:9912349840.

WANAPARTHY

2444. SRI JAYARAMA MOTORS (P) LTD. (WQ01-01-), SURVEY NO.1149, KURNool ROAD, WANAPARTHY (A.P.) - . 509103 PH.:8096903879.

WARANGAL

2445. ADARSHA AUTOMOTIVES PVT LTD (D502-02-), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - . 506007 PH.:8886132222.

2446. ADARSHA AUTOMOTIVES PVT LTD (D502-03-), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL - . 506001 PH.:8886492222.

2447. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D503-01-), SURVEY NO. 16, 16/A & 16/B, OPPOSITE KAKATIYA UNIVERSITY GATE-2, LASHKERSINGARAM REVENUE VILLAGE, HANAMKONDA MANDAL, WARANGAL - . 506 001 PH.:868828010.

2448. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D503-02-), PLOT NUMBER 9,10,11 & 13/A ,SURVEY NUMBER 148/A&B OF BHEEMRAM VILLAGE, WARANGAL. - . 506015 PH.:8688828015.

ZAHIRABAD

2449. SAI SERVICE PRIVATE LIMITED (BAT1-01-), PLOT NO.5-NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD,MEDAK (DIST),ANDHRA PRADESH - . 502220 PH.:7660005206.

TELENGANA**KAGHAZNAGAR**

2450. ADARSHA AUTOMOTIVES (SCN1-01-), H. NO :1-6/13,BORIGAON,KAGHAZNAGAR,KOMARAMB HEEM - . 504296 PH.:8886092222.

PALAKURTHY

2451. WIN MOTORS (SCY1-01-), SURVEY NO 537/B,MAIN RAOD, PALAKURTHY,JANGAON DISTRICTTELANGANA. - . 506317 PH.:8688838005.

TRIPURA**AGARTALA**

2452. JAIN UDYOG (6901-01-), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - . 799003 PH.:9662149275.

2453. JAIN UDYOG (6901-05-), 58/B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA - . 799003 PH.:70057 71216.

2454. JAIN UDYOG (6901-06-), KHATIAN NO. 1843, MOUA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - . 799008 PH.:97746 16831.

2455. PALLAVI MOTORS (6902-01-), 44 NH ROAD, DAG NO. 495, DAG NO. 1748, DAG NO. 867, POST OFFICE KHERPUR, AGARTALA (TRIPURA) - . 799008 PH.:9864052488.

AMARPUR

2456. JAIN UDYOG (CVR1-01-), NEAR MOTOR STAND, AMARPUR,TRIPURA - . 799101 PH.:97748 45751.

AMBASSA

2457. JAIN UDYOG (CDT1-01-), A.A. ROAD, OPPOSITE OF CHANDRAI PA RA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - . 799289 PH.:70052 88437.

DHARMANAGAR

2458. JAIN UDYOG (6901-03-), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - . 799250 PH.:97747 93164.

UDAIPUR

2459. JAIN UDYOG (YU01-01-), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR,TRIPURA (SOUTH) - . 799116 PH.:9774020152.

UP**GREATER NOIDA**

2460. VIPUL MOTORS (T202-01-), PLOT NO. 64, ECOTECH 12, GREATER NOIDA (WEST), UP - . 201009 PH.:9811233385.

UTTAR PRADESH**AGRA**

2461. MADHUSUDAN MOTORS PVT LTD (6603-01-), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - . 282005 PH.:531102-05.

2462. MADHUSUDAN MOTORS PVT LTD (6603-02-), GANESH GANJ, PRATAPPURA, AGRA - . 282001 PH.:9837097887.

2463. MADHUSUDAN MOTORS PVT LTD (6603-03-), 6-A , VIBHAV INDUSTRIAL STATE, AGRA - . 282007 PH.:3299221.

Dealer Network (AS ON 31.10.2023)

2464. MADHUSUDAN MOTORS PVT LTD (6603-04), 26/253, SULTAN GANJ KI PULIA, MAUZA LASKARPUR, AGRA - 283203 PH: 9837097894.
2465. KTL PVT. LTD. (6606-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004 PH: 8449715033 8449715099.
2466. PREM MOTORS PVT. LTD. (6607-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002 PH: 9690010799.
2467. KTL PVT. LTD. (6606-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001 PH: 8449715099.
2468. MERAK VEHICLES (6609-01), KHASRA NO 65 & 74, MAUZA MOHAMMADPUR, AGRA-DELHI ROAD (NH-2), SIKANDRA, AGRA UTTAR PRADESH-282007. - 282007 PH: 9690486139.
- AKBARPUR**
2469. KTL PVT. LTD. (2801-03), KANPUR ROAD, AKBARPUR - 290206 PH: 7408409348.
2470. SMARTWHEELS PVT. LTD. (7201-08), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOBPUR, AKBARPUR , DIST-AMBEDKAR NAGAR (U.P.) - 224122 PH: 7705803248.
- ALIGARH**
2471. DEV MOTORS (P) LTD (B601-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001 PH: 521771.
2472. DEV MOTORS (B601-04), PLOT NO 97, VILLAGE SIKANDERPUR, BHUKRIVALI, GT ROAD BYE PASS, ALIGARH - 202002 PH: 7351345577.
- ALLAHABAD**
2473. AMITDEEP MOTORS (2901-01), 26 SULEM SARAI, G.T. ROAD, ALLAHABAD - 211001 PH: 8948122749, 9026111339, 7738555692, 9839890333, 9936413399.
- AMETHI**
2474. KTL AUTOMOBILE PVT. LTD. (BBB2-01), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR - 227409 PH: .7379557377.
- AMROHA**
2475. AKANKSHA AUTOMOBILES PVT. LTD. (A001-01), AMROHA – JOYA ROAD, NEAR PUNJAB NATIONAL BANK, AMROHA, UTTAR PRADESH, PIN CODE: 244221 - 244221 PH: 7247800064.
- ANPARA**
2476. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (NU01-01), KAHLUA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT – SONEBHADRA - 232101 PH: .7052547903, 9721905002, 0151154306, 9450544961.
- ANUPSHAHAR**
2477. SK UNIVERSE (S101-01), KHASRA NO. 341, BULANDSHAHAR ROAD, ANOPSHAHAR, DIST. BULANDSHAHAR, PIN-203390, UTTAR PRADESH - 203390 PH: .7055118430.
- ANOLA**
2478. KAVISHA MOTORS PVT LTD (CV1-01), COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR MUNICIPALITY OFFICE, TEHSIL - AONLA, DIST., BAREILLY, STATE- UTTAR PRADESH. - 243301 PH: .07895980222, 07895980300.
- AURAI**
2479. VARANASI MOTORS PVT LTD (CBM1-01), KHATA / KATHAUNA NO. 00045, GT ROAD (EHAK BHaura), OPP. CHINI MILL, VILLAGE & TEHSIL AURAI, DISTT: BHADHOI, UTTAR PRADESH, PIN 2221 301 - 2221301 PH: .9833360662, 7617002786.
- AURAIYA**
2480. KULDEEP MOTORS (QJ01-01), NEAR INDIAN OIL TIRAH, KANPUR ROAD, AURAIYA. - 206241 PH: 9235358444.
- AYODHYA (FAIZABAD)**
2481. SMART WHEELS (7201-03), GHATAMPUR MAGALSI, OPP TRIMURTI HOTEL, TEHSIL SOHAWAL, FAZABAD, UTTAR PRADESH - 224001 PH: .7705800602.
- AZAMGARH**
2482. DEEP MOTORS (K501-01), HARBANSHPUR NARAIUL, AZAMGARH - 276001 PH: .9838072905.
- BABRALA**
2483. AKANKSHA AUTOMOBILES PVT. LTD. (SJU1-01), CHANDAUSI ROAD, BABRALA, DISTRICT SAMBAL, UTTAR PRADESH. - 243751 PH: .7895600005.
- BACHRAWAN**
2484. KTL AUTOMOBILE PVT. LTD. (CGX2-01), VISHNUPUR, PHARWAN, RAEBARELI-LUCKNOW ROAD, DIST. -RAEBARELI - 229301 PH: .9918451222.
- BAH**
2476. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (NU01-01), KAHLUA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT – SONEBHADRA - 232101 PH: .7052547903, 9721905002, 0151154306, 9450544961.
2485. KTL PVT. LTD. (CHI1-01), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH. - 283104 PH: .7055707169, 8449715033.
- BAHERI**
2486. KAVISHA MOTORS PVT LTD (BSB1-01), KASRA NO. 530, 531, 532, 533, NAINTAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201 PH: .8756000000, 7607696666.
- BAHRAICH**
2487. ANAND MOTORS AGENCIES LTD (1301-05), LUCKNOW ROAD, BAHRAICH, UTTAR PRADESH - 271801 PH: .9519586080.
- BALLIA**
2488. DEEP MOTORS (K501-03), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001 PH: .9838072917.
- BALRAMPUR**
2489. ANAND MOTORS AGENCIES LTD (XB01-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD, BALRAMPUR-UTTAR PRADESH - 271201 PH: .6307959376.
- BANDA**
2490. MY CAR PVT. LTD. (2803-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001 PH: .9792971223.
2491. SUMITRA DS MOTORS (SPB1-01), PURANPUR ROAD, BANDA, TEHSIL BANDA, THANA BANDA, DISTT. SHAHJAHANPUR - U.P. - 242042 PH: .9336408074.
- BANSI**
2492. ARBIT AUTOMOBILES PVT LTD (GMD1-01), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA: KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT : SIDARTHNAGAR - 272153 PH: .89534 12821.
- BANTHRA**
2493. MEGA MOTORS (SGQ1-01), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401 PH: .991910456.
- BARABANKI**
2494. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001 PH: .9838075960.
- BARAUT**
2495. TANYA AUTOMOBILES (LL02-01), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611 PH: .7055300019.
- BAREILLY**
2496. CORAL MOTORS (P) LTD. (5602-01), STATION ROAD, BAREILLY - 243001 PH: .559191.
2497. CORAL MOTORS (P) LTD. (5602-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002 PH: .0581-2554922.
2498. KAVISHA MOTORS PVT LTD (5601-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502 PH: .8756000000, 7607696666.
2499. ETERNITY MOTORS LLP (5603-01), KHASRA NO. 803/2, PILIBHIT BYPASS ROAD, PEER BAHORA, OPP. FUN CITY, BAREILLY, UTTAR PRADESH. - 243001 PH: .9105555746.
- BASTI**
2500. SMARTWHEELS PVT. LTD. (7201-05), MANORI CHAURAH, DUMARIYA GANJ ROAD, BASTI - 270002 PH: .286294.
2501. ARBIT AUTOMOBILES (7203-03), SANSPUR FUTAHIA POST GANDHI NAGAR DISRCT BASTI UTTAR PRADESH - 272182 PH: .8953412821.
- BEHTA**
2502. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (GMH1-01), KHASRA NO. 234, OPPOSITE SANGAM MOTORS, KURSI ROAD, BEHTA - 226026 PH: .6388901514.
- BHADOHI**
2503. VARANASI MOTORS PVT. LTD. (8402-02), VARNASI ROAD, BHADOHI - 221401 PH: .9833606662.
- BHINGA**
2504. ANAND MOTORS (BVG1-01), PATNAKHARGAURA, BHINGA, SHRAVASTI - 271831 PH: .9415013059.
- BHOJPUR**
2505. MOTORCRAFT SALES INDIA PVT LTD (SDQ1-01), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL – MODINAGAR, DISTRICT – GHAZIABAD. - 201204 PH: .9410038456.
- BIJNOR**
2506. SHAKUMBARI AUTOMOBILES (P) LTD (6D01-01), PLOT & KHASRA NO. 253/ 3 & 258/1 ADJACENT KHEDI CHAURAH, NEAR PULKIT HOSPITAL, DELHI-BIJNOR HIGHWAY, BIJNOR, DIST. – BIJNOR, UTTAR PRADESH. - 246701 PH: .8630881409.
- BILARI**

2507. AKANKSHA AUTOMOBILES PVT. LTD.
(SDM1-01), 2KML-BILARI NH 509, NEAR SBS
SCHOOL, BILARI, MORADABAD 244001 - 244001
PH :7906000008.
- BILASPUR**
2508. AKANKSHA AUTOMOBILES PVT. LTD.
(BCN1-01), NH-87, OPPOSITE SHAGUN
BANQUET HALL, NEAR MILTON ACADEMY
SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR,
DISTRICT - RAMPUR. - 244921
PH :9105370007.
- BISALPUR**
2509. CORAL MOTORS PVT LTD (CXB1-01), KHASRA
NO. 668, VILLAGE : BISALPUR, DISTT: PILIBHIT,
UTTR PRADESH - 262201
PH :9837891846.
- BISWAN**
2510. CONCEPT CARS LIMITED (SEW1-01-),
BILJHARIYA, OPPOSITE-555, BRICK FIELD,
BISWAN - 261201 - 261201
PH :7807696666.
- BUDAUN**
2511. CORAL MOTORS (P) LTD. (5602-04), PLOT NO.
72, BARELY-MATHURA HIGHWAY, BUDAUN,
UTTR PRADESH - 132103
PH :9837891846.
- BULANDSHAHAR**
2512. SK UNIVERSE (M502-02-), KHASRA NO.2261,
NEAR T POINT , BYPASS SIKARPUR ROAD
,BULANDSHAHAR - 203001
PH :7055118430.
- BULANDSHAHAR**
2513. SK UNIVERSE (M502-01-), KHASRA NO 561 ,
BHOOR, OPP PANDIT PETROL PUMP ,
BULANSHAHR - 203001
PH :9219694600.
- CHAKIA**
2514. STAR CARS (A UNIT OF SARASWATI VEHICLES
LLP) (CJH1-01-), KATHSILA NAHER, NEAR SAINT
JOHN'S SCHOOL CHAKIA, DISTRICT –
CHANDAULI. - 232101
PH :9450544961.
- CHANDAUSI**
2515. AKANKSHA AUTOMOBILES PVT. LTD.
(XA01-01-), AZAD ROAD, NEAR ROADWAYS,
CHANDAUSI (BHEEM NAGAR) - 202412
PH :7248000002.
- CHAURI CHAURA**
2516. ARBIT AUTOMOBILES (SIR1-01-), ARAZI NO 561
DOMARI, CHAURI, CHAURI CHAURA,
GORAKHPUR - 273201
PH :8953412821.
- CHIRRAMAU**
2517. KTL PVT. LTD. (BMY1-01-), PLOT GHATA NO. 70,
MAUJA - LALAKPUR, VILLAGE - CHIRRAMAU,
DIST-KANNAUJ, UTTAR PRADES. - 209721
PH :7408409200, 9414113666.
- CHITRASENPUR**
2518. AGR (SMM1-01-), KHASRA
NO-194,CHITRASENPUR, KACHHUWA ROAD,
VARANASI, PIN - 221313 - 221313
PH :9889803355.
- DALMAU**
2519. KTL AUTOMOBIELS (SGZ1-01-), DALMAU ROAD,
OPPOSITE BHAGIRATHI GUEST HOUSE -
229203
PH :9918451222.
- DANKAUR**
2520. MOTORCRAFT SALES (HG01-01-), OPP. SHRI
DRONACHARYA DEGREE COLLEGE, DANKAUR,
DIST. - GAUTAM BUDH NAGAR, HARYANA. -
203201
PH :9810289355.
- DEOBAND**
2521. ATELIER AUTOMOBILES (XK02-01-), OPPOSITE
CIVIL COURT, MUZZAFARNAGAR HIGHWAY,
DEOBAND - 247001
PH :7500220011.
- DEORIA**
2522. SMARTWHEELS PVT. LTD. (M601-01-), PLOT
NO. C-7 AND SHED NO. D-3, GOVERNMENT
INDUSTRIAL SECTOR MEHRA, DEORIA, DIST.
.DEORIA, UTTAR PRADESH. - 274001
PH :7705800602.
2523. ARBIT AUTOMOBILES (M602-01-), ARAZI NO 467
MI & 607 MAUJA SONUGHAT PARGANA
SALEMPUR MAJHAULI, DEORIA, UTTAR
PRADESH. - 274001
PH :8953412821.
- DHAMPUR**
2524. SHAKUMBARI AUTOMOBILES (P) LTD
(CPQ1-01-), KHASRA NO. 205, OPPOSITE, UHSA
SMARAK SCHOOL, MORADABAD ROAD, TEHSIL
- DHAMPUR, MOJA - ALEHPUR, DIST-BIJNOR,
UTTR PRADESH. - 246761
PH :9675970960.
- DIBYAPUR**
2525. KULDEEP MOTORS (SLA1-01-), AURAIYYA
ROAD, DIBYAPUR - 206244
PH :9235258425.
- DOMARIAGANJ**
2526. SMARTWHEELS (SMW1-01-), VILL & POST –
CHAUKHARA, DOMARIAGANJ, DISTT –
SIDDHARTH NAGAR - 272193
PH :7705800602.
- ETAH**
2517. MADHUSUDAN VEHICLES PRIVATE LTD.
(XG01-01-), 472 ASROLI, GT ROAD, ETAH -
207125
PH :9837097894.
2528. DEV MOTORS (XG02-01-), GATA NO 685/4 VILL
GIRORA, ETAH-KASGANJ ROAD, ETAH, UP -
207001
PH :7351345577.
- ETAWAH**
2529. KULDEEP MOTORS (6E01-01-), PAKKA BAGH,
KANPUR ROAD, ETAWAH - 206001
PH :257029.
- FAIZABAD**
2530. SMARTWHEELS PVT. LTD. (7201-02-), SAHADAT
GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR
PRADESH - 224001
PH :7705803245.
- FAKHARPUR**
2531. ONE UP (SRT1-01-), GHASIPUR, FAKHARPUR,
BAHRAICH (UP) - 271902
PH :9935275786.
- FARIDPUR**
2532. KAVISHA MOTORS PVT LTD (CEM1-01-), GATE
NO. 216, KASBA SARAI, TEHSIL – FARIDPUR,
DISTRICT - BAREILLY, UTTAR PRADESH. -
243503
PH :07895980222, 07895980300.
- FARRUKHBAD**
2533. MY CAR PVT. LTD. (2803-04-), NEKPUR KALAN,
FARRUKHBAD - 209625
PH :9792970093.
- FATEHABAD**
2534. KTL PVT. LTD. (BLQ1-01-), KHASRA NO. 730/731,
GRAM MAUJA, MADAYNA SIKRARA MODE,
FATEHABAD, DISTRICT – AGRA, UTTAR
PRADESH - 283111
PH :849710051.
- FATEHPUR**
2535. KTL PVT. LTD. (2801-04-), NH-2, OPP. RTO
OFFICE, KANPUR ROAD, FATEHPUR - 212601
PH :7408409383, 7408400000.
- FEROZABAD**
2536. MADHUSUDAN VEHICLES PRIVATE LTD.
(DF01-01-), 746, ALI NAGAR KEJRA , NEAR RAJA
KA TAL CROSSING, NH 2, FEROZABAD - 283203
PH :9690003077.
- GAJRAULA**
2537. AKANKSHA AUTOMOBILES PVT. LTD.
(XD01-01-), JHANAKPUR OPPOSITE RELIANCE
PETROL PUMP, DELHI ROAD, GAJRAULA -
244235
PH :7895400003.
- GAZIABAD**
2538. ROHAN MOTORS LTD. (5904-01-), 432 MUKAND
NAGAR, G.T.ROAD, GHAZIABAD - 201001
PH :9971466644, 011-204170810, +911204170816,
+911204170826, +911204170819.
2539. REGENT AUTOLINKS (P) LTD (5902-01-), A-10/9
INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD,
GHAZIABAD - 201001
PH :0120-4641900,904,911,8744042111,9999740464,9
711127008.
2540. ROHAN MOTORS (5904-02-), PLOT NO.46,
MEERUT-DELHI ROAD, MORTA, GHAZIABAD -
201012
PH :09310404354, 9971466644.
2541. T.R. SAHHNEY MOTORS PVT LTD (5905-01-),
PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL
AREA, MOHAN NAGAR, GHAZIABAD, DISTT. -
GHAZIABAD, U.P. - 201007
PH :9999052148; 9999130612.
2542. SNV AUTO (5906-01-), PLOT NO. 15, SOUTH
SIDE GT ROAD INDUSTRIAL AREA, GHAZIABAD,
UTTR PRADESH - 201001 - 201001
PH :9650324325.
2543. GLOBUS AUTO (5907-01-), 139, PANDAV NAGAR,
GHAZIABAD, PIN-201001, UTTAR PRADESH -
201001
PH :8588872804.
- GHAZIPUR**
2544. AGR AUTOMOBILES PVT. LTD. (8403-03), RKBK
PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR -
2333001
PH :2361136.
- GHIROR**
2545. KULDEEP MOTORS (CVA1-01-), KARHAL ROAD,
TEHSIL – GHIROR, DISTRICT – MAINPURI,
UTTR PRADESH. - 205121
PH :9367555555.
- GOLA**
2546. SMARTWHEELS PVT LTD (SMS1-01-), NEAR
KANYA INTER COLLEGE, BHARASADA, GOLA,
DISTT – GORAKHPUR, UTTAR PRADESH -
273408
PH :7705800602.
- GONDA**
2547. SMARTWHEELS PVT. LTD. (7201-07-), JANKI
NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH
ROAD, GONDA, UTTAR PRADESH, - 271001
PH :7705803261.
- GORAKHPUR**
2548. SMARTWHEELS PVT. LTD. (7201-01-),
MOHADDIPUR, (NEAR RAMGARH TAL),
GORAKHPUR (U.P.) - 273012
PH :7705803152.
2549. SMARTWHEELS PVT. LTD. (7201-06-), NEAR T B
HOSPITAL, LACHHIPUR, NEPAL ROAD,
GORAKHPUR - 273012
PH :7705803109.

Dealer Network (AS ON 31.10.2023)

2550. SMARTWHEELS PVT. LTD. (7202-01), PLOT NO.AL4, SECTOR-9, GIDA, GORAKHPUR. - 273209 PH : 9235401004.	IGLAS 2561. DEV MOTORS (SOD1-01), MATHURA ROAD, IGLAS, DISTRICT ALIGARH. - 202124 PH: 9837549000.	2572. KTL PVT. LTD. (2801-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007 PH : 7408492953.	KHAIR 2585. DEV MOTORS (SHQ1-01), PLOT 117, ALIGARH PALWA ROAD, VILLAGE CHAMAN NAGARIYA, KHAIR - 202138 PH : 7351345577.
2551. ARBIT AUTOMOBILES PVT LTD (7203-01), ARAZI NO. 66/1 MI & 66/2/ML 66 MI, MAUZA - MAHEWA MUSTAKIL, NEAR FALMANDI CHOWK, TRANSPORT NAGAR, GORAKHPUR, UTTAR PRADESH. - 273016 PH : 8953412821.	ITUNJA 2562. BRIGHT 4 WHEEL (SJID1-01), 90M GATA GRAM MANDOLI, ITTAUNJA, LUCKNOW, UTTAR PRADESH-226203. - 226203 PH : 70114282903.	2573. MY CAR PVT. LTD. (2803-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022 PH : 9792970086.	KHANDAULI 2586. MADHUSUDAN MOTORS PVT LTD (BV1-01), KHASRA NO. 97, AGRA-SADABAD, HATHRAS ROAD, OPP. HDFC BANK, VILL.-KHANDAULI, TEHSIL ETHMADPUR, DIST. AGRA, UTTAR PRADESH. - 283126 PH : 9837097863, 9690003034.
2552. ARBIT AUTOMOBILES (7203-1B), MEDICAL COLLEGE ROAD, NEAR SPORTS COLLEGE, GORAKHPUR, UTTAR PRADESH - 273016 PH : 8953412821.	JAGDISHPUR 2563. BRIGHT 4 WHEEL SALES PVT. LTD. (XC01-01), KATHARA MUSAIFKHANA LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH. - 227817 PH : 9712526961 , 9628374814.	2574. S B CARS PVT.LTD (2806-01)- 77B , FAZALGANJ, KANPUR - 208012 PH : 2241660.	KHURJA 2587. SK UNIVERSE (SKP1-01), OLD GT ROAD, KHURJA, DISTRICT-BULANDSHAHAR, UTTAR PRADESH. - 203131. - 203131 PH : 7055118430.
GOSAIGANJ 2553. BRIGHT 4 WHEEL SALES PVT. LTD. (CWK1-01), KHASRA NO. 24, VILLAGE - SHEKHANPUR, PARGANA MOHANLALGANJ, TEHSIL - MOHANLALGANJ, DIST.-LUCKNOW, UTTAR PRADESH. - 226501 PH : 9838075929.	JAGNER 2564. MERAK VEHICLES (SPJ1-01), SHRI RAM GARDEN, AGRA ROAD, NEAR RADHA KRISHNA MANDHIR, JAGNER, UTTAR PRADESH, 283115 - 283115 PH : 7896500400.	2575. MY CAR PVT. LTD. (2803-05)- 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004 PH : 9792970081.	KHUTAR 2588. SUMITRA DS MOTORS PVT LTD (CIO1-01), VILLAGE - NARAINPUR, VIKRAMPUR GOLA ROAD, KHUTAR, DISTRICT - SHAHJAHANPUR, UTTAR PRADESH. - 242405 PH : 9336408074.
GREATER NOIDA 2554. ROHAN MOTORS LTD. (T201-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTAR PRADESH - 201306 PH : 4513739, 4513736, 4513734, 4513700/9958506111.	JALALABAD 2565. SUMITRA DS MOTORS PVT. LTD. (GJX1-01), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSIL: JALALBAD, DIST. SHAHJAHANPUR - 242221 PH : 9336408074, 9897019488.	2576. KULDEEP MOTORS KANPUR LLP. (2808-01), BUKHAND NO. 756, 756A, 757, BLOCK: W, YOJNA 2, JUHI KALAN, BARA BYE PASS, KANPUR - 208017 PH : 9076608701.	KIRAOJI 2589. PREM MOTORS PVT. LTD. (BJZ1-01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA - JAIPUR HIGHWAY, KIRAWALLI, DISTRICT – AGRA, UTTAR PRADESH. - 283122 PH : 9690010799.
HAIDERGARH 2555. BRIGHT 4 WHEEL SALES PVT. LTD. (CVU1-01), PROPERTY SHOP NO. 5, 6 AND 7, VILLAGE - GOTAUANA, PARGANA - HAIDERGARH, TEHSIL - HAIDERGARH, DISTRICT - BARABANKI. - 225124 PH : 9935275786, 9838075929.	JAUNPUR 2566. KIRTIKUNJ AUTOMOBILES PVT. LTD. (6H01-01), KHANPUR AKBAR, KUTTUPUR TIRHA - 222001 PH : 9554951026.	2577. KTL PVT. LTD. (2801-07), ARAJI NO. 1110, VILLAGE BAIJI, AKBARPUR, KACHHAR, INDRA NAGAR, KANPUR, UTTAR PRADESH - 208 026 PH : 7408409379.	KONCH 2590. KULDEEP MOTORS (SNZ1-01), NEW PATEL NAGAR, CITY KONCH, DISTRICT - JALAUN, UTTAR PRADESH - 285205 PH : 9639015046.
HAMIRPUR 2556. KTL PVT. LTD. (QH01-11), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301 PH : 7704907587.	JHANSI 2567. SURI AUTOMOBILES (6001-01), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN - 284002. - 284002 PH : 88818111383.	2578. MADHUSUDAN VEHICLES PRIVATE LTD. (BVX1-01), ARAJI NO. 646, SAURO ROAD, KASGANJ, DISTRICT - KASGANJ, UTTAR PRADESH. - 207123 PH : 9837097863, 9792970391.	KOSI 2591. UMA MOTORS PVT. LTD. (CPV1-01), KHASRA NO. 245, CITY - KOSI, DIST-MATHURA. - 281004 PH : 9997683333, 9997511006.
HAPUR 2557. ROHAN MOTORS (6G01-01), DELHI-HAPUR ROAD, OPPOSITE SSV INTERCOLLEGE,HAPUR, DISTRICT- GHAZABAD - 245101 PH : 8476853930, 9536129292.	KASGANJ 2568. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (6002-01), PLOT NO 486, 487, 488, 489 AND 477 (PATTNA NUMBERS), MAUZA - KOCHCHABHANWAR, BLOCK - BADAGAON, TEHSIL AND DISTT - JHANSI. - 284128 PH : 9895412821.	2579. MY CAR PVT. LTD. (CBU1-01), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 212025 PH : 9839029868, 9792970391.	KONCH 2590. KULDEEP MOTORS (SNZ1-01), NEW PATEL NAGAR, CITY KONCH, DISTRICT - JALAUN, UTTAR PRADESH - 285205 PH : 9639015046.
HARDOI 2558. CONCEPT CARS PVT. LTD. (QE01-01), NANAK GANI, LUCKNOW ROAD, HARDOI - 241001 PH : 8756000000, 7607696666.	KANNAUJ 2569. KTL PVT. LTD. (2801-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725 PH : 70480490305.	2580. SUMITRA DS (SHY1-01), GRAM: SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL - TILHAR, SHAHJAHANPUR - 242301 PH : 9336408074.	KOSI 2591. UMA MOTORS PVT. LTD. (CPV1-01), KHASRA NO. 245, CITY - KOSI, DIST-MATHURA. - 281004 PH : 9997683333, 9997511006.
HARDOI 2559. CONCEPT CARS PVT. LTD. (QE01-04), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001 PH : 7607696666, 8756000000.	KANPUR 2570. KTL PVT. LTD. (2801-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002 PH : 7408409341.	2581. ARBIT AUTOMOBILES PVT LTD (GMJ1-01), MAUJA BHAIASHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206 PH : 8953412821.	KUBERPUR 2592. KTL PVT. LTD. (6006-04), KHASRA NO 248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006 PH : 8449715099.
HATHRAS 2560. DEV MOTORS (P) LTD (B601-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS - 204101 PH : 9917435500.	KAYAMGANJ 2571. MY CAR PVT. LTD. (2803-01), 84/54 C, JARIB CHOWKI, G.T. ROAD, KANPUR - 208003 PH : 9792970511.	2582. SARASWATI MOTORS (SLQ1-01), ARAJI NO 1228, KORRO MANJHANPUR, KAUSHAMBI, UTTAR PRADESH, PINCODE - 212207. - 212207 PH : 8090854005.	KUNDA 2593. SARASWATI MOTORS (CBF2-01), ALLAHABAD-LUCKNOW HIGHWAY, KUNDA, DISTRICT PRATAPGARH. - 230204 PH : 8090854005.
		2583. MY CAR PVT. LTD. (CBV1-01), BYE PASS ROAD ,NEAR KHAN PETROL PUMP, VILLAGE : KAYAMGANJ, DISTT. FARUKHABAD - 209502 PH : 9639029868, 9792970391.	LAKHIMPUR 2594. SUMITRA DS MOTORS PVT LTD (W201-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001 PH : 7522888333, 9415700000.

2595. SUMITRA DS (M301-01-), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE - BHARDASARIYA, KHERI, LAKHIMPUR - 262702 PH :9522888333, 9415770000.
- LALGANJ**
2596. KTL AUTOMOBILE PVT. LTD. (CSL2-01-), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206 PH :9918451222.
- LALITPUR**
2597. SURI AUTOMOBILES (6001-03-), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH :9451496015.
2598. VELOCITY CARS (6002-01-), LALITPUR BYPASS ROAD, NH26 (LALITPUR-MEHRAUNI HIGHWAY), IN FRONT OF RMV COLLEGE ROAD, MAIN HIGHWAY, LALITPUR, UTTAR PRADESH - 284403 PH :9560998709.
- LUCKNOW**
2599. ANAND MOTORS AGENCIES LTD (1301-01-), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105 PH :7080000462.
2600. KTL AUTOMOBILE PVT. LTD. (1311-01-), MATIYARI CHAURAHI, CHINHAT, FAIZABAD ROAD, LUCKNOW - 227105 PH :7408411453.
2601. ANAND MOTORS AGENCIES LTD (1301-02-), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW - 226016 PH :309257, 7080000463.
2602. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-01-), 11/CP-6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022 PH :2739501.
2603. ONE UP MOTORS INDIA PVT. LTD. (1306-01-), C-16A, TRANSPORT NAGAR, KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012 PH :9918100801.
2604. KTL AUTOMOBILE PVT. LTD. (1311-02-), INDRA NAGAR, OPP. HALFAZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016 PH :7408411478.
2605. KTL AUTOMOBILE PVT. LTD. (1311-03-), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005 PH :9918451222.
2606. ANAND MOTORS AGENCIES LTD (1301-04-), G-3, LDA MARKET, ALIGANJ, LUCKNOW - 226024 PH :4103406/407/408, 7080000464.
2607. ONE UP MOTORS INDIA PVT. LTD. (1306-03-), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH :9918500451.
2608. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-02-), PARGANA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH :9838075960.
2609. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-04-), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020 PH :7317049000.
2610. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-05-), PLOT NO: 68, BUTLERGANJ, BAALU ADDA, LUCKNOW - 226001 PH :8756000000, 7607696666.
2611. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-01-), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW. - 226 010 PH :9935096417, 7054631666.
2612. KTL AUTOMOBILE PVT. LTD. (1311-07-), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. - 226008 PH :7800007376.
2613. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-06-), KHASRA NO. 418, MISHRUPAR PARGANA MAHONA, KURSI ROAD, LUCKNOW. - 226022 PH :9935275786.
2614. ONE UP MOTORS INDIA PVT. LTD. (1314-01-), KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJABGANJ, HARDOI ROAD, LUCKNOW. - 226003 PH :982126545, 780005200.
2615. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-02-), KHASRA NO. 614, VILLAGE: BHADRUHK, VIP CHANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHSIL: SAROJNI NAGAR, LUCKNOW, U.P AR PRADESH 226002 - 226002 PH :6388901514.
- MADHOGANJ**
2616. CONCEPT CARS PVT. LTD. (BHI1-01-), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST, HARDOI. - 241001 PH :220016, 220064, 7607696666.
- MAHARAJGANJ**
2617. SMARTWHEELS PVT. LTD. (EI01-01-), NEAR PHARENDI TAXI STAND, NAHAR ROAD, PIPIR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303 PH :7705800602, 7705803109.
2618. KTL AUTOMOBILE PVT. LTD. (CSM2-01-), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL - MAHARAJGANJ, DISTRICT - RAIBARELLI, UTTAR PRADESH. - 229306 PH :9918451222.
- MAHMUDABAD**
2619. CONCEPT CARS PVT. LTD. (AAN1-01-), IN FRONT OF POWER HOUSE, SIDALU ROAD, MAHMOODABAD (U.P.) - 261203 PH :7607696666, 8756000000.
- MAHOBIA**
2620. SURI AUTOMOBILES (6001-02-), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBIA, UTTAR PRADESH. - 284001 PH :244344, 9451496015.
2621. VELOCITY MOTORS (RM02-01-), BAJRANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBIA - 210427 PH :95600998709.
- MAHOLI**
2622. CONCEPT CARS PVT. LTD. (CWS1-01-), MUSKAN TRACTORS, NEAR MELA Mайдан, SHAHJAHANPUR ROAD, MAHSUNIYAGANJ, MAHOLI, DIST-SITAPUR, UTTAR PRADESH. - 261141 PH :7607696666.
- MAINPURI**
2623. KULDEEP MOTORS (6E01-02-), SKP-4A, MAINPURI - 205001 PH :923258444.
- MALIHABAD**
2624. ONE UP MOTORS INDIA PVT. LTD. (BOD1-01-), KHASRA NO. 326/1 AND 327, VILLAGE: PARGANA, TEHSIL - MALIHABAD, DISTRICT - LUCKNOW, UTTAR PRADESH. - 227111 PH :9918100781.
- MANDURI**
2625. DEEP MOTORS (K501-04-), VILLAGE - BALDEV MADURI, TEHSIL - SAGRI, DISTRICT - AZAMGARH, UTTAR PRADESH. - 276138 PH :09838072902.
- MATHURA**
2626. UMA MOTORS PVT. LTD. (H801-01-), 68, MAHOLINE JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004 PH :2463043/ 629070.
- MATI**
2627. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (SCG1-01-), GATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE- MATI, PARGANA-DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225 003 PH :6388901514.
- MAU**
2628. DEEP MOTORS (BWK1-01-), DARI CHATTI , KHUKHUNDVA, MAU, UTTAR PRADESH. - 275305 PH :770400052.
- MAURANIPUR**
2629. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (GJ1-01-), BASERA CITY, MAURANIPUR - GARUTHA ROAD, MAURANIPUR, DISTT: JHANSI, UTTAR PRADESH - 284204 PH :8299202863.
- MAWANA**
2630. RADHA GOVIND AUTOMOBILES PVT LTD (CWZ1-01-), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401 PH :7456001002.
- MEERUT**
2631. TANYA AUTOMOBILES PVT. LTD. (4802-03-), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001 PH :9837077003.
2632. TANYA AUTOMOBILES PVT. LTD. (4802-03-), NAUCHANDI GROUND,GARH ROAD, MEERUT - 250001 PH :9837077004.
2633. RADHA GOVIND AUTOMOBILES PVT. LTD. (4807-01-), VILLAGE - BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002 PH :7456001030, 7456003222.
2634. TANYA AUTOMOBILES PVT. LTD. (4802-04-), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE - ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001 PH :7900201515.
2635. TR SAWHNEY (4801-01-), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002 PH :9999163125.
- MIRZAPUR**
2636. STAR CARS (6K02-01-), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001 PH :7052547903, 9721905002, 9151154306, 9450544961.
- MISHRIKH**
2637. CONCEPT CAR (SKJ1-01-), NEAR ARYAVART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P. PINCODE: 261401 - 261401 PH :7607696666.
- MODINAGAR**
2638. MOTORCRAFT SALES PVT. LTD. (5903-02-), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204 PH :09557338222 & 07042427140.
- MOHANLAL GANJ**

Dealer Network (AS ON 31.10.2023)

2639. BRIGHT 4 WHEEL SALES PVT. LTD. (BWU1-01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHALNAGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305
PH :7571905966.

MOOSANAGAR

2640. MY CAR (SLP1-01), VILL GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH - 209208
PH : 97929 70005.

MORADABAD

2641. AKANKSHA AUTOMOBILES PVT. LTD. (B401-01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001
PH : 7247800008.

2642. AKANKSHA AUTOMOBILES PVT. LTD. (B401-03), 5TH KM DELHI ROAD, MORADABAD - 244001
PH : 9566820001.

2643. AKANKSHA AUTOMOBILES PVT. LTD. (B401-01), KHASRA NO. 569-570, VILLAGE - KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH - 244001
PH : 7895600007.

MUZAFFARNAGAR

2644. RADHA GOVIND (H903-01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001
PH : 9760092009, 7535007026.

NAJIBABAD

2645. SHAKUMBARI AUTOMOBILES (P) LTD (CPS1-01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246 701
PH : 8630881459.

NARWAL

2646. MY CAR (SSB1-01), GATA NO. 821, KARIBGWANA ROAD , NARWAL , KANPUR, UTTAR PRADESH. - 209401
PH : 9792970005.

NAUGARH

2647. SMARTWHEELS PVT. LTD. (QG01-01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDHARTHANAGAR - 272205
PH : 7705803129.

NAUTANWA

2648. SMARTWHEELS PVT LTD (SDW1-01), OPP. RAJIV GANDHI DEGREE COLLEGE, BYPASS ROAD, NAUTANWA, DISTT - MAHARAJGANJ - 273164
PH : 77058 00602.

NAWABGANJ

2649. KAVISHA MOTORS PVT LTD (CHT1-01), VILLAGE - EIDH JAGRIN NEAR GURUDWARA AT NH-74, TEHSIL - NAWABGANJ, DISTRICT - BAREILLY. - 262406
PH : 07895980222, 07895980300.

NIKOHA

2650. BRIGHT 4 WHEELS (SGV1-01), GATA NO 146, VILL NIKOHA, TEHSIL MOHALNAGANJ, LUCKNOW - 226302
PH : 7011482503.

NOIDA

2651. ROHAN MOTORS LTD. (A102-01), C-8/9, SECTOR - I, NOIDA - 201301
PH : 4071900, 4071909, 4071931, 4071932, 4071209, 4071949/9582210152.

2652. ROHAN MOTORS LTD. (A102-02), C-11, SECTOR - I, NOIDA, UTTAR PRADESH - 201301
PH : 4071900, 209.31, 32, 9582210152.

2653. FAIR DEAL PREMIUM WHEELS PVT.LTD. (A108-01), D-39, SEC-10, NOIDA - 201301
PH : 0844829669 & 09654326008.

2654. VIPUL MOTORS PVT. LTD. (A101-02), B-124 & B-125, SECTOR - 5, NOIDA, UTTAR PRADESH - 201301
PH : 4603100/28/33/8527835888.

2655. VIPUL MOTORS PVT. LTD. (A106-01), J-14, SECTOR-6, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301
PH : 4758000/01/02/8448589759.

2656. MOTORCRAFT SALES PVT. LTD. (5903-04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) - 201305
PH : 09818532222 & 09971733233.

2657. MOTORCRAFT SALES (5903-05), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST ,GB NAGAR , UP - 201306
PH : 8826312222.

ORAI

2658. S B CARS PVT.LTD (2806-02), KANPUR ROAD, ORAI - 285001
PH : 9307219303.

PADRONA

2659. SMARTWHEELS PVT. LTD. (BGJ1-01), AARJI NO. 37 & 38, MAUJA - BELWA MISRA, TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL - PADRAUNA, DIST.-KUSHINAGAR, UTTAR PRADESH. - 274304
PH : 7705803259.

PANWARI

2660. SURI AUTOMOBILES (SLC1-01), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBIA - 210429
PH : 9452287690.

PAPHUNDA

2661. TANYA AUTOMOBILES (4802-05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA - 245206
PH : 9917547777.

PEPPEGANJ

2662. ARBIT AUTOMOBILES PVT LTD (GKG1-01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165
PH : 89534 12821.

PILIBHIT

2663. CORAL MOTORS (P) LTD. (IL01-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001
PH : 9837891846.

POOTH KHAS

2664. TR SAWHNEY (SSM1-01), POOTH KHAS, ROHTA ROAD, MEERUT, UTTAR PRADESH. - 250502
PH : 999790229.

PRAYAGRAJ

2665. SARASWATI MOTORS (2904-01), PLOT NO 24, INDUSTRIAL AREA MNIT COLLEGE, TELYARGANJ, PRAYAGRAJ, UTTAR PRADESH. - 211004
PH : 809854053.

2666. BRIGHT 4WHEELS (2905-01), ARAZI NO 390 AND 399 AT KATKA, ANDAWA SAHSON BYPASS, PRAYAGRAJ - 211002
PH : 94155324201.

PURANPUR

2667. CORAL MOTORS (P) LTD. (CAD1-01), KHASRA NO. 768 & 770, VILLAGE - KHAMRIYA PATTI, PURANPUR - PILIBHIT ROAD, TEHSIL AND PARGANA - PURANPUR, DIST. PILIBHIT. - 262124
PH : 9837891846, 9927001120.

RAIBAREILLY

2668. KTL AUTOMOBILE PVT. LTD. (HS07-01), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303
PH : 7800001601.

RAM SANEHI GHAT

2669. BRIGHT 4WHEELS (SDH1-01), GATA NO 76, VILLAGE - BHENDUA BRAHMANAN, TEHSIL - RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409
PH : 9935275786.

RAMNAGAR

2670. BRIGHT 4 WHEEL SALES PVT. LTD. (BRK1-01), KHASRA NO. 629, VILLAGE - BUDHAWAL, TEHSIL - RAMNAGAR, DIST.-BARABANKI, UTTAR PRADESH. - 225205
PH : 9935275786, 9838075929.

RAMPUR

2671. AKANKSHA AUTOMOBILES PVT. LTD. (B401-02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901
PH : 7895500007.

RAYA

2672. UMA MOTORS PVT. LTD. (BKX1-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204
PH : 9997683333, 9997511006.

ROBERTSGANJ

2673. STAR CAR (CTY1-01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231 216
PH : 7052547903, 9721905002, 9151154306, 9450544961.

RUNKATA

2674. PREM MOTORS (SLS1-01), ROYAL BANDHAN RESORT, KHASRA NO 108, NH-2, RUNKATA, AGRA - 282101
PH : 7060111245.

SAHARANPUR

2675. ATELIER AUTOMOBILES (S203-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001
PH : 750250070.

2676. TANYA AUTOMOBILES PVT. LTD. (S204-01), AAWAS VIKAS YOGNA, DELHI ROAD, SAHARANPUR, UTTAR PRADESH - 247001
PH : 9837077004.

SAHASWAN

2677. CORAL MOTORS, (SGA1-01), OPP BHARAT PETROL PUMP, BADAUN ROAD, SAHASWAN, DISTT. BADAUN - 243638
PH : 9837891846.

SAHIBABAD

2678. FAIR DEAL WHEELS PVT. LTD (80-01), 12/6 SITE 4, INDUSTRIAL AREA, SAHIBABAD, GHAZIABAD - 110095
PH : 4740409/102/436, 8860088659.

2679. MOTORCRAFT SALES PVT. LTD. (5903-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010
PH : 4172222 / 4102222, 0998562222 & 09560605122.

2680. T.R. SAWHNEY MOTORS PVT LTD (819-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA,DISTT- GHAZIABAD, UTTAR PRADESH - 201010
PH : 9999399152; 9999399143.

SALEMPUR

2681. SMARTWHEELS PVT LTD (GKA1-01), GHATA NO. 48, GRAM: DEVARPAR, TEHSIL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509 PH :7705800602, 7705803321.	SIDHAWLI	2691. CONCEPT CARS PVT. LTD. (BFO1-01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHI, OPP. BLOCK, SIDHAWLI, SITAPUR. - 261303 PH :7607596666.	2700. AKANKSHA AUTOMOBILES PVT. LTD. (K001-01), 2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHABGANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH - 244601 PH :7248000040.	2710. NAINITAL MOTORS PVT LTD (J603-04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHARAGARH ROAD, ALMORA - 263601 PH :9997194132.
SALON 2682. KTL AUTOMOBILES (SCP1-01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH - 229127 PH :9918451222.	SIKANDRA	2692. KTL PVT LTD (SJE1-01), YADAV MARKET, NEAR SURY Dhaba, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. - 209715 PH :9414113666.	TIKAUTGANJ	2701. KTL AUTOMOBILE (SNB1-01), KANAUJIA CITY, PHASE 2, MADARPUR, MOHAN ROAD, LUCKNOW. - 226013 PH :9918451222.
SAMBHAL 2683. AKANKSHA AUTOMOBILES PVT. LTD., (BPPI-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBAL ROAD, SAMBAL, UTTAR PRADESH - 244302 PH :7248000028.	SIKANDRABAD	2693. SK UNIVERSE (CWQ1-01), NEAR R K SCHOOL, VILLAGE - SANWALI SIKANDRABAD, DIST - BULANDSHAHR UTTAR PRADESH , PIN 203202-203202 PH :7310106565.	TILOI	2702. KTL AUTOMOBILE PVT. LTD. (CGY2-01), VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST -RAIBARELI. - 229309 PH :9918451222.
SANDILA 2684. CONCEPT CARS PVT. LTD. (WY01-01), PLOT NO.371, SARAY MARUPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204 PH :8756000000, 7607696666.	SIRUALI GHASPUR	2694. BRIGHT FOUR WHEELS (SMR1-01), KHASRA 77, GRAM GHUSEDIYA, POST & TEHSIL SIRUALI GAUSPUR, BARABANKI UTTAR PRADESH-225207 - 225207 PH :7011482503.	UJHANI	2703. ETERNITY MOTORS LLP (GJK1-01), BADAUN BYE PASS ROAD, UJHANI - 243639 PH :94122 89074.
SARDHANA 2685. RADHAGOVIND AUTOMOBILES (MM01-01), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342 PH :7456001030.	SITAPUR	2695. CONCEPT CARS PVT. LTD. (QE01-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAPUR, SITAPUR - 261001 PH :7607696666, 8756000000.	UNCHAHAR	2704. KTL AUTOMOBILE PVT. LTD. (IH02-01), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHAR, DISTT: RAIBARELI - 229404 PH :9918451222.
SHAHABAD 2686. CONCEPT CARS PVT. LTD. (AAX1-01), VILLAGE MUJAGADH, SHAHABAD - 241124 PH :8756000000, 7607696666.	SIYANA	2696. SK UNIVERSE (SIN1-01), BULANDSHAHR ROAD, SIYANA DIST - BULANDSHAHR, UTTAR PRADESH PIN CODE 203412 - 203412 PH :9219639460.	UNNAO	2705. S B CARS (2006-04), HUSSAIN NAGAR BYPASS KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO U.P. - 209801 PH :9839806451.
SHAJAHANPUR 2687. SUMITRA DS MOTORS PVT LTD (W201-01), SITAPUR ROAD, NH-24, SHAJAHANPUR - 242001 PH :7522888333, 9415770000.	SULTANPUR	2697. KIRTIKUNJ AUTOMOBILES PVT. LTD. (N101-01), SHAURYAMAU, MIRANPUR, VARANASI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001 PH :227760, 220107.	VARANASI	2706. VARANASI MOTORS PVT. LTD. (8402-01), THE MALL, CANTONMENT, VARANASI - 221001 PH :2509068, 2509069.
SHAMLI 2688. RADHA GOVIND AUTOMOBILES PVT. LTD. (XJ01-01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776 PH :8979862084, 7535007010.	SWAR	2698. AKANKSHA AUTOMOBILES PVT. LTD. (CQX1-01), IN FRONT OF EIDGAH, TEHSIL - SWAR, DISTRICT - RAMPUR, UTTAR PRADESH. - 244924 PH :7900600041.	2707. AGR AUTOMOBILES PVT. LTD. (8403-01), B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010 PH :2360436.	2708. VARANASI MOTORS PVT. LTD. (8402-03-), AARAJI NO 2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) - 221311 PH :2632786, 9838360662.
SHIKOHABAD 2689. MADHUSUDAN VEHICLES PRIVATE LTD. (XH01-01), 2608, KATRA MIRA, MAHMAMBAD, OPP PROFESSOR COLONY, NH 2, BYE PASS ROAD, SHIKOHABAD, DISTT: FIROZABAD, UTTAR PRADESH - 283203 PH :9837097894, 9690003001.	TAMBOUR	2699. CONCEPT CARS (SOB1-01), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR - 261208 PH :7607696666.	2709. AGR AUTOMOBILES PVT. LTD. (8403-04), ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112 PH :98898 03355.	2710. FUTURE AUTO WHEELS PVT LTD (5706-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001 PH :0135-2640263, 78995956011.
SHIVRAJPUR 2690. KTL PVT LTD. (STD1-01), ARAZI NO. 67K, DUBIYANA, GT ROAD, SHIVRAJPUR, KANPUR, UTTAR PRADESH - 209205 PH :9414113666.	THAKURDWARA		2711. FUTURE AUTO WHEELS (5706-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001 PH :9760444430.	DIDIHAT
			UTTARAKHAND	
			ALMORA	

Dealer Network (AS ON 31.10.2023)

2721. NAINITAL MOTORS (SKN1-01), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T., DIDIAT, DISTT PITHORAGARH, PINCODE: 262551. - 262551
PH: .9634092692.

DOIWALA

2722. FUTURE AUTO WHEELS PVT LTD (BRI1-01), 26, MISSARAWALA, DOIWALA, DISTRICT – DEHRADUN, UTTARAKHAND - 248140
PH: .7883473506.

GADARPUR

2723. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVS1-01.), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND - 263152
PH: .8929400545, 9917467845.

GAIRSAIN

2724. ROHAN MOTORS LTD (CRH1-01.), KHASRA NO. 1048, RANKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT – CHAMOLI, UTTARA KHAND - 246428
PH: .8126484626.

GANGOLIHAT

2725. NAINITAL MOTORS (SQX1-01.), VILL- KHETIGARA, PITHORAGARH-GANGOLIHAT ROAD, GANGOLIHAT, DISTT: PITHORAGARH - 262522
PH: .9997093043.

GOPESHWAR

2726. ROHAN MOTORS LTD. (5702-03.), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028
PH: .9634852898.

HALDWANI

2727. NAINITAL MOTORS PVT LTD (J603-01.), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139
PH: .7060201024.

2728. NAINITAL MOTORS PVT LTD (J603-02.), KALA DUNG, NEAR ABDULLAH PETROL PUMP, HALDWANI - 263139
PH: .8126359222.

HARIDWAR

2729. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-01.), E-56, INDUSTRIAL AREA, HARIDWAR - 249407
PH: .9927870025, 8869064400.

JASPUR

2730. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (BKL2-01.), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND - 244712
PH: .8192000724.

KARANPRAYAG

2731. ROHAN MOTORS LTD (CRG1-01.), BADRINATH ROAD, KARANPRAYAG, DISTRICT – CHAMOLI, UTTARAKHAND - 246444
PH: .8126129148.

KASHIPUR

2732. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (DG02-01.), BAZPUR ROAD, KASHIPUR - 244713
PH: .8929400544, 8859502626.

KHATIMA

2733. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (XL02-01.), VILLAGE: CHARUBETA,NEAR RTO CHECK POST,PILBHIT ROAD KHATIMA, U.S NAGAR,UTTRAKHAND - 262308
PH: .8929400545, 8191000565.

KOTDWAR

2734. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-02.), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001
PH: .875598075, 7310106565.

LAKSAR

2735. SHAKUMBARI AUTOMOBILES (CTF1-01.), HARIDWAR ROAD, LAKSAR - 247664
PH: .9927877715.

NANAKMATA

2736. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVT1-01.), KHATIMA ROAD, OPP GURURAMAS HOSPITAL, NANAKMATA, U.S. NAGAR, UTTARAKHAND - 262311
PH: .9012772084.

PITHORAGARH

2737. NAINITAL MOTORS PVT LTD (J603-03.), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501
PH: .9634092692.

PRATAPNAGAR

2738. SHAKUMBARI AUTOMOBILES (STT1-01.), NEAR AISHWARYA FILLING STATION, LAMBGAON, PRATAPNAGAR, DISTRICT TEHRI., UTTARAKHAND - 249165
PH: .9927877715.

RAMNAGAR

2739. NAINITAL MOTORS PVT LTD (XM01-01.), BASAI, KASIPUR ROAD, RAMNAGER - 244137
PH: .9639016895, 9634093404.

RANIKHET

2740. NAINITAL MOTORS PVT LTD (AXA1-01.), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTRAKHAND) - 263645
PH: .9557243222.

RISHIKESH

2741. FUTURE AUTO WHEELS PVT LTD (AAS1-01-), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201
PH: .0135-243237, 7895614411.

ROORKEE

2742. SHAKUMBARI AUTOMOBILES (P) LTD (H201-01.), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARIDWAR - 247667
PH: .7055104191.

RUDRAPRAYAG

2743. ROHAN MOTORS (IK01-01.), GULABRAI-BADRINATH ROAD, RUDRAPRAYAG - 246171
PH: .8650876815.

RUDRAPUR

2744. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U404-01.), KICHHA BYE PASS ROAD, INDUSTRIAL AREA, RUDRAPUR - 263153
PH: .8929400545, 8859502684.

SELAQUI

2745. ROHAN MOTORS LTD (CRF1-01.), KHASRA NO.783, BADHUPUR ROAD, NH-72, SELAKUI, DISTT.-DEHRADUN, UTTARAKHAND - 248011
PH: .800600439.

SITARGANJ

2746. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CD02-01.), PLOT NO 228/5 AND 228/6 KHATIMA ROAD, SITARGANJ. DISTT - RUDRAPUR, UTTARAKHAND - 262405
PH: .8929400545, 8859502846.

SRINAGAR

2747. SHAKUMBARI AUTOMOBILES (ANA1-01.), SRICOTGANAGANI, NEAR MEDICAL COLLEGE, PO- SRICOT, SRINAGAR - 246174
PH: .8755903005, 9897476897.

TEHRI

2748. DD MOTORS (A DIVISION OF D.D. PREM PVT LTD.) (OAO2-01.), PLOT NO. 541, SECTOR-8E, DISTT. - NEW TEHRI - 249001
PH: .8006000914.

UTTARKASHI

2749. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (6I02-01.), HOTEL RAMOLA, BARETHI CHUNGI, GANGOTRI NATIONAL HIGHWAY, UTTARKASHI. - 249151
PH: .8006000922.

VIKAS NAGAR

2750. ROHAN MOTORS (RIO2-01.), KHASRA NO. 433/7/2, VENGAVARGH, POST OFFICE- AMBALI, CHAKRATA-BARKOT ROAD, VIKAS NAGAR - 248198
PH: .897507410.

UTTRAKHAND

DEHRADUN

2751. SHAKUMBARI AUTOMOBILES (5708-01-), KHASRA NO 15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN, PIN-248001, UTTARAKHAND - 248001
PH: .9927870025, 8869064400.

PATI

2752. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SFX1-01.), LOHAGHAT- HALDWANI MAIN ROAD, NEAR PITHORAGARH CO-OPERATIVE BANK, PATI-262528 - 262528
PH: .9917467820.

WEST BENGAL

ALIPURDUAR

2753. PODDAR CAR WORLD PVT. LTD. (BZ01-01.), BIRPARA MORE, COOCH BEHAR ROAD, BESIDE GOYENKA PETROL PUMP, ALIPURDUAR, WEST BENGAL - 736121
PH: .8945533002
9735008343
9749707070.

AMTALA

2754. BHANDARI AUTOMOBILES PVT LTD (BQH1-01-), VILLAGE - UDAYAMPUR, P.O. - KANYANAGAR, P.S. - BISHNUPUR, AMTALA, DIST-24 PARGANAS SOUTH, WEST BENGAL - 743 398
PH: .9903850402.

ARAMBAGH

2755. SANEI MOTORS PVT. LTD. (7T02-01-), R.S. DAG NO. 1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO. 1233, MOUZA-PARUL, J.L.N. NO. 38, R.S.NO. 3111, P.S. ARAMBAGH, DISTT. HOOGHLY, WEST BENGAL - 712601
PH: .884050184.

ASANSOL

2756. BEEKAY AUTO PVT LTD (F601-01-), CHANDA MORE, N.H.-2, ASANSOL - 713301
PH: .9932049425,
9932049435.

BADURIA

2757. PREMIER CARWORLD (SOE1-01-), VILL- KIRTIPIUR, P.O- MANDRA, P.S - BADURIA, DIST - NORTH 24 PARGANAS, WEST BENGAL. PIN - 743438 - 743438
PH: .9831414956.

BAGDAH

2758. SANEI MOTORS PVT. LTD. (BON1-01-), C/O, DINABANDHU TARAFDAR, S/O LATE NARENDRANATH TARAFDAR, VILLAGE - HALENCCHA SOUTH, P.O. - HALENCCHA COLONY, P.S. - BAGDAH, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL. - 743270
PH: .8584050184.

BAHRAMPUR

2759. BEEKAY AUTO PVT LTD (DJ02-01-), BOKULTALA (PASCHIM GAMINI), NH-34, BAHARAMPUR, DISTT. MURSHIDABAD. - 742101 PH .267340.	2768. STARBURST MOTORS PVT LTD (BXJ1-02-), NEAR RAIL GATE, WARD NO. 24, WEST BARASAT ROAD, P.S. - TITAGARH, BARRACKPORE, DISTRICT - NORTH 24 PARGANAS, KOLKATA. - 700120 PH :8335061333.	2785. BEEKAY AUTO PVT LTD (4301-05-), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101 PH :9932049347 9932049382 7478004430.
BAJKUL		DHUPGURI
2760. BHANDARI AUTOMOBILES PVT LTD (CAV1-01-), VILLAGE - KAPTYAPA BARI, P.O. - KAJLAGARH, P.S. - BHAGWANPUR, BAJKUL, DISTRICT - PURBA MIDNAPORE. - 721626 PH :9930555339.	2769. BHANDARI AUTOMOBILES PVT LTD (G701-05-), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE, WEST BENGAL - 721654 PH :9933055539.	2786. BEEKAY AUTO PVT LTD (BWD1-01-), MOUZA - DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT - JALPAIGURI, WEST BENGAL - 735210 PH :7477785203 9932049347 9932049382 7478004430.
BALAGARH		DIAMOND HARBOUR
2761. SANEI MOTORS PVT. LTD (BM1-01-), DAG NO. 671, MOUZA - BARUIPARA, J L NO. 100, P.O. - BALAGARH, DIST -HOOGLY, WEST BENGAL - 712 501 PH :8584050184.	2770. BHANDARI AUTOMOBILES PVT LTD (X701-03-), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. - 743428 PH :8017569789.	2787. ONE AUTO (CEG2-01-), SUSUMAPALLY, CANNING, DIST - SOUTH 24 PARGANAS, WB - 743329 PH :8442830001.
BALURGHAT		DINHATA
2762. J K WHEELS PVT. LTD. (PT01-01-), BARO RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. - BALURGHAT, DIST -DAKSHIN DINAJPUR. - 733 103 PH :9064301464.	2771. PODDAR CARWORLD (SCU1-01-), PRASANNA NAGAR, BELACOBA, BATTALA, JALPAIGURI - 735133 - 735133 PH :8945533002.	2788. BEEKAY AUTO PVT. LTD. (YE01-01-), VILLAGE - CHEWRA, OPPOSITE - K.E. CARMEL SCHOOL, P.O. - SARISHA HAT, P.S. - DIAMOND HARBOUR, DISTRICT - 24 PARGANAS (S), WEST BENGAL - 743368 PH :8584862243.
BANDEL		DURGAPUR
2763. SANEI (612-03-), C/O G.S. LAMINATOR, BANDEL STATION ROAD, HOOGLY 712123 - 712123 PH :8336969010.	2772. SEVOKE MOTORS (CQL1-01-), BHAGAT PARA, NH - 31, MADARIHAT ROAD, BIRPARA, BESIDE TASHI HOTEL, OPP - HIMALYAN HOTEL, P.S. - MADARIHAT, DIST - ALIPURDUAR, PIN - 735204 - 735204 PH :9800069144.	2789. SAINATH AUTOLINKS PVT. LTD. (4402-01-), PLAT NO.2986, LR DAG NO. 3150, UNDER L R KHATIAN NO.3859, MOUZA- KRISHNARAMPUR, J.L. 59, POLICE STATION- CHANDITALA, HOOGHLY, WEST BENGAL - 712702 PH :6296900498.
BANKURA		FALAKATA
2764. BHANDARI AUTOMOBILES PVT LTD (G701-02-), PLOT NO.-156, KH NO.-173, MITHILA MOUZA, AT/PO-BANKURA (WB) - 722101 PH :256766.	2773. BHANDARI AUTOMOBILES PVT LTD (AAG1-01-), STATION ROAD, P.O+P.S- BISHNUPUR, DIST - BANKURA, WEST BENGAL - 722122 PH :9930555339.	2790. PODDAR CAR WORLD PVT. LTD. (CSR1-01-), DAKSHIN PARANGAPAR, KHATIAN NO. 167/1 JL NO. 60, DAG NO. 652/1159, P.S. - FALAKATA , DIST ALIPURDWAR - 735211 PH :8945533002.
BARASAT		GAZOLE
2765. PREMIER CARWORLD PVT. LTD. (XZ03-01-), R.S DAG NO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, J.L NO. 4, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700125 PH :8420122407.	2774. SAINATH AUTOLINKS PVT. LTD. (4402-03-), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM - 731204 PH :964744888 89259511.	2791. JK WHEELS (SKZ1-01-), MOUZA- BAJEGAIRAL, RANIGANJ, PURBAPARA, KAMALDANGA, P.S- GAZOLE, DIST-MALDA, PIN - 732138 - 732138 PH :9734963360.
BARDHAMAN		GHATAL
2766. BEEKAY AUTO PVT LTD (T301-03-), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL - 713101 PH :9932049454.	2775. STARBURST MOTORS PVT LTD (TQ02-01-), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLYA, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235 PH :9748298939.	2792. BHANDARI AUTOMOBILES PVT LTD (AAD1-01-), SERPUR BAMUNBAR P.O. MARISHIDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401 PH :254572.
BARJORA		GOPIBALLAVPUR
2767. BHANDARI AUTOMOBILES PVT LTD (BED1-01-), VILLAGE + P.O. + P.S. - BARJORA, MOUZA - BARJORA, JL NO. 46, KHATIAN NO. 3380, PLOT NO. 2795, BARJORA DISTRICT - BANKURA, WEST BENGAL - 722202 PH :8016087297.	2776. ONE AUTO PVT. LTD. (BAV1-01-), MAHESH TALA, NEAR DAGKHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAGKHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141 PH :8584878802 7604084762.	
BARRACKPORE		

Dealer Network (AS ON 31.10.2023)

2793. BHANDARI AUTOMOBILES PVT LTD (BPQ1-01),
JL NO. 1103, KHATIAN NO. 1103, PLOT NO. 438,
VILLAGE + P.O. + P.S. - GOPIBALLAVPUR,
MOUZA - GOPIBALLAVPUR, WEST MIDNAPUR,
WEST BENGAL - 721506
PH :993055539, 8170018577.

GUMA (ASHOKNAGAR)

2794. STARBURST MOTORS PVT LTD (BXJ1-03),
JESSORE ROAD, MANIKNAGAR, KHOSELDUPUR
MORE, P.S. - ASHOKNAGAR, NORTH 24
PARGANAS, WEST BENGAL - 743222
PH :8697731763, 8336933447.

HALDIA

2795. BHANDARI AUTOMOBILES PVT LTD (G701-04),
BALGHASIPUR, BHABANIPUR, PURBA
MEDIANPUR, HALDIA - 721657
PH :8016082344, 923502421.

HOWRAH

2796. BHANDARI AUTOMOBILES PVT LTD (X701-01),
BANKRA THANA,DOMJUR,HOWRAH . - 711403
PH :9674735304.
2797. PREMIER CARWORLD PVT. LTD. (611-02-),
MOUZA – PRASASTHA, P.S. – DOMJUR, UNDER
MOHARY 2 NO. GRAM PANCHAYAT,
ANKURHATI, HOWRAH, WEST BENGAL. -
711302
PH :8420122402.

JALPAIGURI

2798. PODDAR CAR WORLD PVT. LTD. (XY01-01-),
COLLEGE PARA, SIRISHTALA, NEAR ASSAM
MORE ,JALPAIGURI, WEST BENGAL - 735101
PH :8945533002.

JAYGAON

2799. SEVOKE MOTORS PVT. LTD. (CHS1-01-),
HOUSE NO.43, WARD NO.11/22, N.S ROAD
DARAGAON, P.S - JAYGAON, DISTT.
ALIPURDUAR, WEST BENGAL - 736182
PH :9433825851.

JHARGRAM

2800. BHANDARI AUTOMOBILES PVT LTD (BUG1-01-),
DAG NO.383, KHATIAN NO. J396, WARD NO.11,
RAJBATI CAMPUS, JHARGRAM, WEST BENGAL
- 721507
PH :8016087297, 9933055539.

KADAMBAGACHI

2801. STARBURST MOTORS PVT LTD (BXJ1-04-),
MOUZA - PURBA ICAPUR, J.L NO. 111, RESU
NO. 131, DAG NO. 385, KHATIAN NO. L.R 754,
KADAMBAGACHI, P.S. - BARASAT, DIST.-NORTH
24 PARGANAS, WEST BENGAL - 700125
PH :8336933410.

KALIMPONG

2802. BEEKAY AUTO (BWF1-01-), 10TH MILE, GUMBA
HATTA, PO&PS-KALIMPONG, DIST -
KALIMPONG, WB - 734301
PH :9932049347.

KALNA

2803. BEEKAY AUTO PVT LTD (WZ01-01-), KALNA
ROAD, NEAR KALNA SUB DIVISIONAL
HOSPITAL, KALNA, PO+PS: KALNA, DISTT.
BURDWAN, (W.B.) - 713409
PH :9932251483.

KALYANI

2804. STARBURST MOTORS PVT LTD (IJ01-01-),
KALYANI INDUSTRIAL GROWTH CENTRE,
PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S
COLLEGE), KALYANI - 741234
PH :8584040215, 8336933447.

KHARAGPUR

2805. BHANDARI AUTOMOBILES PVT LTD (G701-01-),
BHANDARI BUILDING, JHAPATAPUR,
KHARAGPUR, WEST BENGAL - 721301
PH :755537.
2806. PODDAR CARWORLD (G702-01-), RS DAG NO -
147, RS KHATIAN NO 7, MOUZA -
MOBARAKCHAK, JL NO-210, PS - KHARAGPUR -
721301
PH :9831348626.

KHATRA

2807. BHANDARI AUTOMOBILES PVT LTD (BGZ1-01-),
VILLAGE - SENAPATI, P.O & P.S - KHATRA,
MOUZA-SENAPATI, JL NO.189, KHATIAN NO.659,
PLOT NO.33/34, DISTT. BANKURA, WEST
BENGAL - 722140
PH :9933055539.

KOLKATA

2808. MACHINO TECHNO SALES LTD. (601-02-), 48 A,
TARATALA ROAD, KOLKATA - 700066
PH :9073330177.
2809. DEWAR'S GARAGE (605-01-), (PROP. DELTA
INTERNATIONAL LTD.), 14 BRITISH INDIAN
STREET, CALCUTTA - 700069
PH :8584015205.
2810. MACHINO TECHNO SALES LTD. (601-01-), 21/1
DARGA ROAD, (PARK CIRCUS), CALCUTTA -
700017
PH :9073330178.

2811. PREMIER CARWORLD PVT. LTD. (611-01-),
AGARPARA JUTE MILL, 28-B.T.ROAD, P.O:
-KAMARHATI, DISTT.-KOLKATA - 700058
PH :8697730344.

2812. BHANDARI AUTOMOBILES PVT LTD (609-01-),
BUDGE BUDGE TRUNK ROAD, NEW
GOPALPUR, SARKARPOOL, MAHESHTALA,
DISTT. SOUTH 24 PARGANAS, WEST BENGAL -
700143
PH :9674476000.

2813. BHANDARI AUTOMOBILES PVT LTD (609-02-),
37, GULAM JILANI KHAN ROAD, KOLKATA. -
700039
PH :9903850402.

2814. SANEI MOTORS PVT. LTD. (612-01-), 16/2 CANAL
EAST ROAD, NEAR MANIKTALA POLICE
STATION KOLKATA - 700067
PH :8584050184.

2815. ONE AUTO PVT. LTD. (614-02-), 62 EAST TOPSIA
ROAD, P.S. TILJALA, ARUPOTA, KOLKATA.,
WEST BENGAL - 700105
PH :8584878802.

2816. ONE AUTO PVT. LTD. (614-01-), JL NO.3,
MOUZA-JAGADIPOTA, P.S.SONARPUR,
KHEYADHA NO.2, GRAM PANCHAYAT, DISTT.
SOUTH 24 PARGANAS. - 700099
PH :8584870725.

2817. DEWAR'S GARAGE (605-03-), P-27/2, TARATALA
ROAD, KOLKATA - 700088
PH :8584015293.

2818. SANEI MOTORS PVT LTD (612-02-), 235,
HATIYARA ROAD, SITALATALA, BAGUATI,
KOLKATA, WEST BENGAL - 700059
PH :8584050184.

2819. OSL MOTOCORP PVT LTD (616-01-), 49
DEBENDA CHANDRA DEY ROAD, LANE
BESIDE SILVER SPRING CLUB, E.M. BYE-PASS,
KOLKATA - 700015
PH :8336996355
8697982283.
2820. JYOTE MOTORS (624-01-), NAZIRABAD MAIN
ROAD, NAZIRABAD, ANANDAPUR, NEAR
BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150,
WEST BENGAL - 700150
PH :8334930830.

KOLKATTA

2821. BHANDARI AUTOMOBILES (619-C1-), PLOT NO.
IID/15, ACTION AREA 2D, NEW TOWN, P.S.
RAJRAHAT, KOLKATA, WEST BENGAL
PIN-700156 - 700156
PH :6291042160.

KOTULPUR

2822. BHANDARI AUTOMOBILES PVT LTD (BIP1-01-),
KHATIAN NO.644, PLOT NO.373, JL NO. 101,
VILLAGE - MULDARA, P.S. + P.S. - KOTULPUR,
DISTT.-BANKURA, WEST BENGAL - 722141
PH :9933055539.

KRISHNANAGAR

2823. BHANDARI AUTOMOBILES PVT LTD (X701-02-),
PLOT NO.-1874, MOUZA-GOBINDSARAK J.K.
NO. 94, PS-KOTWAL, OLD WARD NO. 20, LAL
MOHAN GHOSH ROAD, KRISHNANAGAR -
742011
PH :9051999742.

MADHYAMGRAM

2824. STARBURST MOTORS PVT LTD (BXJ1-01-), 9/1,
HEMANTA BOSE SARANI, BASUNAGAR, NEAR
DEAF & DUMB SCHOOL, UDAYRAJPUR,
MADHYAMGRAM - 700129
PH :9836075989, 8336933447.

MALBAZAR

2825. BEEKAY AUTO PVT LTD (BWG1-01-), CALTEX
MORE, VILLAGE + P.S. - MALBAZAR AND
DISTRICT - JALPAIGURI . - 735221
PH :9932049347
9932049382
7478004430
7477785203.

MALDA

2826. J K WHEELS PVT. LTD. (L801-01-), GABGACHHI,
N.H. 34, MALDA. - 732103
PH :9851520855, 9735003949.

MATHABHANGA

2827. BEEKAY AUTO PVT LTD (BQF1-01-),
SITAKULI ROAD, WARD
NO.9,MATHABHANGA, DISTRICT -
COOCHBEHAR. - 736146
PH :7477785202
9932049347
9932049382
7478004430.

MOHANPUR

2828. BHANDARI AUTOMOBILES PVT LTD (CIV1-01-),
VILLAGE-NAYAON, P.O-PAROI, P.S.
-MOHANPUR, MOUZA - NAYAON, JL NO.395,
KHATIAN NO.175/1, PLOT NO.895, DISTT.
-PASCHIM MIDNAPUR,W.BENGAL - 721436
PH :9933055539.

NAIHATI

2829. PREMIER CARWORLD PVT. LTD. (YD01-01-),
P.O. BHATPARA, GRAM-MUKTARPUR, P.S. -
JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) -
743123
PH :801700824.

NAKASHIPARA

2830. BHANDARI AUTOMOBILES PVT LTD (BMJ1-01-),
L R DAG NO. 7271, UNDER L R KHATIAN NO.
6734, MOUZA - DEBAGRAM, J L NO. 60, POLICE
STATION - KALIGANJ, BLOCK - KALIGANJ,
NAKASHIPARA, DIST-NADIA, WEST BENGAL -
741138
PH :9163314418.

NAXALBARI

2831. BEEKAY AUTO PVT LTD (CSJ1-01-), MOUZA – GENI, KHATIAN NO.275, PARGANA-HATIGHISHA, P.S. NAXALBARI, DISTT. DARJEELING, WEST BENGAL - 734429
PH .9932049347
9932049382
7478004430
9563370099.

PANCHLA

2832. BHANDARI AUTOMOBILES PVT. LTD. (BPI1-01-), L.R DAG NO. 3274, UNDER L.R KHATIAN NO. 3044, MOUZA-MALLICKBAGAN, JL NO-7, POLICE STATION – PANCHLA, DIST- HOWRAH - 711310 PH .9073664926.

PANDUA

2833. BHANDARI AUTOMOBILES PVT LTD (BOS1-01-), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL - 712149
PH .9073912566.

PANSKURA

2834. BHANDARI AUTOMOBILES PVT LTD (BPS1-01-), MOUZA – PASCHIM NEKRA, JL NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL - 721139
PH .9933055539.

PURULIA

2835. SAINATH AUTOLINKS PVT. LTD. (4402-02-), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149
PH .9647444888
8927895511.

RAGHUNATHPUR

2836. BEEKAY AUTO PVT LTD (CKZ1-01-), MOUZA – BUNDLA, JL. NO. 197, PLOT NO. 2656, KHATIAN NO. 1027, P.O. – RAGHUNATHPUR, P.S. – RAGHUNATHPUR, DISTRICT – PURULIA. - 723133
PH .9932049425,
9932049435.

RAIGANJ

2837. J K WHEELS PVT. LTD. (BN02-01-), JL NO. 150, KHATIAN NO. 1683 & 1684, PLOT NO. 4158, P.S. – RAIGANJ, MUNICIPALITY – RAIGANJ, WARD NO. 11, HOLDING NO. 577/N, MOUZA – RAIGANJ, DISTRICT – UTTAR DINAJPUR, - 731314
PH .9735008842.

RAJARHAT - KOLKATA

2838. STARBURST MOTORS PVT LTD (BXJ1-05-), R.S & L.R. DAG NO. 3434, MOUZA- GOPALPUR, JL NO. -02, RS NO. -140, LR KHATIAN NO. -5638, NEW TOWN, RAJARHAT - 700136
PH .9681080301.

RANAGHAT

2839. STARBURST MOTORS PVT LTD (BBW1-01-), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI , PLOT NO.309, RANAGHAT, DISTT: NADIA - 741256
PH :8145821191, 8584040215.

RUPNARAYANPUR

2840. BEEKAY AUTO PVT LTD (BWS1-01-), P.S. – SALANOUR, UNDER MOUZA – JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHATIAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL - 713335
PH .9932049425,
9932049435.

SABANG

2841. BHANDARI AUTOMOBILES PVT LTD (CCL1-01-), VILLAGE - PAIKAN DAKSHINBARH, P.O. - DHANISWARPUR & P.S. - PINGLA, DIST. -PASCHIM MIDNAPORE, SABANG - 721 166, WEST BENGAL - 721166
PH .9933055539.

SEORI

2842. BEEKAY AUTO PVT LTD (F601-02-), RAMBADANPUR, NEAR SP MORE, DIST-BIRBHUM, SEORI - 731101
PH .9932049425,
9932049406.

SHYAMPUR

2843. SANEI MOTORS PVT LTD (CAW1-01-), VILLAGE + P.O. – GOBINDAPUR, P.S. – SHYAMPUR, DISTRICT - HOWRAH, WEST BENGAL. - 711314
PH :8584050184.

SILIGURI

2844. BEEKAY AUTO PVT LTD (4301-01-), NH-31, P.O. MATIGARA,SILIGURI. - 734428
PH .9932049347
9932049382
7478004430.

2845. BEEKAY AUTO PVT LTD (4301-04-), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001
PH .9932049347
9932049380.

2846. SEVOKE MOTORS PVT. LTD. (4302-01-), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001
PH .9706010366.

2847. PODDAR CAR WORLD PVT LTD (XY01-02-), VILL. EAST DHANTALLA, FULBARI II G.P., P.O SATELLITE TOWNSHIP, DIST- JALPAIGURI -

734015

PH :8945533002.

SONADA

2848. SEVOK (SDX1-01-), RATO MATEY DARA, NEAR PETROL PUMP,P.O- SONADA, WEST BENGAL PIN - 734209 - 734209
PH .9800069144.

SONAMUKHI

2849. BHANDARI AUTOMOBILES PVT LTD (CAU1-01-), J L NO. 77, KHATIAN NO. 360, PLOT NO. 114/287, SONAMUKHI BISHNUPUR ROAD, VILLAGE - CHURAMANIPUR, P.O. & P.S. - SONAMUKHI, WEST BENGAL - 722207
PH .9933055539.

SREERAMPORE (SREERAMPUR)

2850. BHANDARI AUTOMOBILES PVT LTD (BBT1-01-), BANGIHALI (MADPUR) DELHI ROAD, SREERAMPUR, DISTT: HOOGHLY, WB - 712203
PH .66137505, 66137585, 9674741544.

TAMILUK

2851. BHANDARI AUTOMOBILES PVT LTD (OL01-01-), MOUZA PADUMBASAN, WARD NO 10, JL NO:144, DISTT: EAST MIDNAPUR, WEST BENGAL - 721636
PH .9933055539.

TARAKESHWAR

2852. SANEI MOTORS PVT. LTD. (YH01-01-), MOUZA BAIDYAPUR, UNDER BALIGORI(1), GRAM PANCHAYET, TARAKESHWAR, DISTT: HOOGHLY, WEST BENGAL - 712410
PH :8584050184.

TOOFANGANJ

2853. PODDAR CAR (SDG1-01-), POWER HOUSE PARA, PO ANDARANFULBARI (WEST), TUFANGANJ, COOCHBEHAR, PIN-736159, WEST BENGAL - 736159
PH :8945533002.

UDAYNARAYANPUR

2854. BHANDARI AUTOMOBILES PVT LTD (BOO1-01-), VILLAGE-JANGALPARA BELGRAM, PS- UDAYNARAYANPUR, DIST- HOWRAH, WEST BENGAL - 711226
PH .9073664902.

ULUBERIA

2855. BHANDARI AUTOMOBILES PVT LTD (2401-01-), HOLDING 1242A, BANITALA, P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH, WEST BENGAL - 711316
PH :8335052335.

Maruti Service Master (AS ON 30.10.2023)

DELHI

DELHI

1. MARUTI SALES & SERVICE(DELHI) (0810-08-01),
C-119, INDUSTRIAL AREA PHASE-I, NARAINA,
NEW DELHI - 110028
PH :46541113.
2. J J IMPEX (DELHI) LTD(MARUTI SERVICE
MASTERS) (0883-08-01), F-39,OKHLA
INDUSTRIAL AREA,PHASE-II,NEW DELHI -
110020
PH :41612194, 40685500.

TAMIL NADU

CHENNAI

3. J J IMPEX (DELHI) LTD(MARUTI SERVICE
MASTERS) (1485-14-01), # 9, (SP),THIRU-VI-KA
INDUSTRIAL ESTATE, GUINDY, CHENNAI -
600032
PH :044-43563366, 43563367, 9176615000.

ARUNACHAL PRADESH

ITANAGAR

- HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111
PH :7005337938.

ASSAM

BARBETA

- ROY AUTO ENGINEERING WORKS (7281-7Z-01), POST OFFICE, BARBETA ROAD, MAIN ROAD , WARD NO.-4, ASSAM - 781315
PH :9954069396.

DULIAJAN

- B.S. MOTORS (X881-XB-01), NO. 01, BORPOTHAR TINAL, DULIAJAN - 786602
PH :9435719753.

BIHAR

PATNA

- CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013
PH :9334117070/8210810240.

DELHI

DELHI

- GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, - 110018
PH :43276666.
- A M AUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, LAWRENCE ROAD,,DELHI - 110035
PH :48280000.

HARYANA

BALLABGARH

- ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004
PH :4271800; 9899232536,9212142536.

MURTHAL

- MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIIDC, MURTHAL - 131027
PH :9215182230.

PANCHKULA

- CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113
PH :9914115427.

PANIPAT

- VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103
PH :9896118618.

SAHA

- PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.- AMBALA - 133104
PH :9896666402.

YAMUNANAGAR

- HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001
PH :8950000069.

HIMACHAL PRADESH

JASSUR

- CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201
PH :9882217575, 9495000613.

JAMMU AND KASHMIR

SRINAGAR

- RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR - 2441384
PH :9906631702.

JHARKHAND

RANCHI

- PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48 , KOKAR INDUSTRIAL AREA, RANCHI - 834001
PH :2544681, 2542650.

KERALA

COCHIN

- AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 662024
PH :9025730007.

PATHANAMTHITTA

- AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA - 689640
PH :9288117477.

MADHYA PRADESH

NEEMUCH

- AUTO SCAN (3T81-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH, - 458441
PH :9425106588.

MAHARASHTRA

PUNE

- MARUTI CARE POINT (1981-19-02), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD, OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017
PH :9689901459.

THANE

- THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE - 400007
PH :9833947772, 9833947778.

ODISHA

KEONJHAR

- KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001
PH :9437075366.

PUNJAB

BATALA

- CITI AUTOMOBILES (VS81-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA - 143505
PH :9676024243 , 9876024254.

MOGA

- SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI ,G.T. ROAD, MOGA - 142001
PH :06136-226807.

RAJASTHAN

JAIPUR

- KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A : NARAYANPUR,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034
PH :7427059388.

TELANGANA

HYDERABAD

- RETOUCH (1082-10-01), H.NO. 3-67/A, B. C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068
PH :9848062263.

UTTAR PRADESH

ALIGARH

- VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001
PH :9917473052, 9582123586.

GHAZIABAD

- KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR,HAPUR ROAD,GAZIABAD - 201002
PH :0120-4538200, 9717629599, 9810523345.
- CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD - 201102
PH :9582945510, 9999107841.

LUCKNOW

- K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW - 226003
PH :2473369.

MEERUT

- UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, - 250001
PH :9837072642.

NOIDA

- MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8 & 9,SECTOR-8,NOIDA - 201301
PH :08826172222 & 09971689689.
- MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA, - 201301
PH :09958732222 & 09910282222.
- JKM MOTORS (A184-A1-01), A-25,SECTOR 9,DISTT. GAUTAM BUDDH NAGAR,NOIDA - 201301
PH :0120-4052400, 9899424000.
- FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301
PH :4581111; 4581131/9650631111.

SAHIBABAD

- FAST TRACK SERVICES (M881-M9-01), PLOT NO.40/1/B2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.), - 201010
PH :95609868111.

UNNAO

- VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801
PH :2830610,2831248.

VARANASI

- PRATAP ENGINEERS (6481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002
PH :25100469, 9415203641.

WEST BENGAL

KOLKATA

- MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027
PH :24568326, 24486568, 24568325.

BATTERY LABEL SYMBOL MEANINGS

	No smoking, no naked flames, no sparks			Battery acid
	Shield eyes			Note operating instructions
	Keep away from children			Explosive gas

Prepared by

MARUTI SUZUKI INDIA LIMITED

Service Division

July, 2024

Part No. 99011M80T03-74W

Printed in India

**For 24 X 7 assistance, contact Toll Free number 1800 102 6392[#] / 1800 200 6392[#]
(NEXA)**

No STD code to be prefixed.

Service Division

MARUTI SUZUKI INDIA LIMITED

Palam Gurgaon Road, Gurgaon - 122 015 (Haryana)

www.marutisuzuki.com



99011M80T03-74W