

Epson ePOS SDK for iOS

User's Manual

Functionality

How to Use

API Reference

Device Specifications

Sample Programs

Application Guide

Appendix

Precautions

- Unauthorized duplication, copying, reproduction, or modification of any part or all of this document is strictly prohibited.
- Contents of this manual are subject to change without prior notice. Contact us directly for the most recent information.
- Every effort is made to ensure that the contents of this manual are without error. Please contact us if any errors or other issues are found.
- The previous statement notwithstanding, we will not be liable for any negative impact as a result of use.
- Epson shall not be liable for any damages caused as a result of using this product incorrectly, failing to comply with the content of this document, or having repair or modifications performed by third parties other than Epson or those specified by Epson.
- Epson shall not be liable for any issues as a result of installing optional parts or consumables that are not genuine Epson parts or parts certified by Epson.

Trademarks

EPSON, EXCEED YOUR VISION, and ESC/POS are registered trademarks of Seiko Epson Corporation.

iPhone®, iPod touch®, iPad®, iTunes®, and Xcode® are trademarks of Apple Inc. registered in the US and other countries.

iOS® is a trademark or registered trademark of Cisco in the US and other countries.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

The Bluetooth® word mark and logo is a registered trademark of Bluetooth SIG, Inc. Seiko Epson uses these trademarks under the terms of license. Other trademarks and trade names are the property of their respective owners.

QR Code is a registered trademark of Denso Wave Incorporated.

Other company names or product names are trademarks or registered trademarks of their respective companies.

ESC/POS® Command System

Epson has embarked on a global initiative by developing ESC/POS, a unique POS printer command system. ESC/POS contains a wealth of unique commands, many of which are patent-protected. Our system enables the configuration of versatile POS systems with a high level of scalability. In addition to being compatible with most Epson POS printers and displays, the flexibility provided by this unique control system facilitates ease of future upgrades. This functionality and convenience of use are appreciated around the world.

© Seiko Epson Corporation 2015-2020. All rights reserved.

Safety Precautions

Meaning of Symbols

The following symbols are used in this manual. Make sure to understand the meaning of these symbols before using the product.



Describes usage precautions that must be observed. Incorrect handling due to the disregard of this information may result in product failure or incorrect operation.



Describes additional explanation or other useful information.

Usage Limitations

Please use our products in environments and systems designed with consideration to safety and disaster recovery such as fail-safe configurations and redundant designs, for example, if this product is used in applications in which a high level of reliability and safety in functionality and precision is required such as in aircraft, trains, ships, automobiles and other transportation-related applications or in crime prevention equipment and safety equipment.

This product is not intended for use in applications that require extremely high levels of reliability and safety such as in aerospace equipment, trunk-line communications equipment, nuclear power control equipment, and medical equipment. Consider your usage environment and requirements carefully before using this product in such applications.

About this Manual

Purpose of this Manual

This manual provides the information necessary to develop applications using Epson ePOS SDK for iOS.

Organization of this Manual

This manual is organized into the following chapters.

Chapter 1	Functionality
Chapter 2	How to Use
Chapter 3	API Reference
Chapter 4	Device Specifications
Chapter 5	Sample Programs
Chapter 6	Application Guide
Appendix	Open Source Software Licensing

Contents

■ Safety Precautions	3
Meaning of Symbols.....	3
■ Usage Limitations	3
■ About this Manual.....	3
Purpose of this Manual.....	3
Organization of this Manual	3
■ Contents	4

Functionality 11

■ Application Development in Epson ePOS SDK for iOS	11
TM Printer Models	12
Customer Display Models.....	12
TM Printer + DM-D30 + barcode scanner model	13
POS Terminal Model	14
■ Epson ePOS SDK for iOS Development Environment	15
■ Application Operating Environment.....	15
Supported printers.....	15
Functions provided in each printer.....	17
Controllable Peripheral Devices.....	19
■ Downloadable Content	21
■ Web Content.....	21
■ Limitations	22

How to Use 23

■ Printer Connections	23
■ Creating an Epson ePOS SDK for iOS Project	23
■ Programming Guide.....	25
Programming Flow	25
Effective range of command buffers for setting	31
Status	32

API Reference 33

■ List of ePOS SDK API	33
Epos2Printer class.....	33
Epos2HybridPrinter class	38
Epos2LineDisplay class.....	41
Epos2Keyboard class.....	41
Epos2POSKeyboard class.....	42
Epos2BarcodeScanner class	42

Epos2MSR class	42
Epos2SimpleSerial class	43
Epos2GermanyFiscalElement class	43
Epos2OtherPeripheral class	43
Epos2CommBox class	44
Common to all classes	44
Epos2Discovery class	44
Epos2Log class	44
Epos2BluetoothConnection class	45
EasySelect class	45
EasySelectInfo class	45

■ **Epos2Printer Class** **46**

initWithPrinterSeries	46
connect	48
disconnect	52
startMonitor	53
stopMonitor	54
getStatus	55
sendData	57
beginTransaction	58
endTransaction	59
requestPrintJobStatus	60
clearCommandBuffer	61
addTextAlign	62
addLineSpace	63
addTextRotate	64
addText	65
addTextLang	66
addTextFont	67
addTextSmooth	68
addTextSize	69
addTextStyle	70
addHPosition	72
addFeedUnit	73
addFeedLine	74
addImage	75
addLogo	79
addBarcode	80
addSymbol	84
addHLine	89
addVLineBegin	91
addVLineEnd	93
addPageBegin	94
addPageEnd	95
addPageArea	96
addPageDirection	98
addPagePosition	99
addPageLine	101
addPageRectangle	103
addRotateBegin	105
addRotateEnd	107
addCut	108
addPulse	109
addSound	111
addFeedPosition	114
addLayout	115
addCommand	119

getMaintenanceCounter.....	120
resetMaintenanceCounter	122
getPrinterSetting	124
setPrinterSetting	127
downloadFirmwareList.....	130
getPrinterFirmwareInfo.....	132
verifyUpdate.....	134
updateFirmware.....	136
forceRecover.....	139
forcePulse.....	140
forceStopSound	142
forceCommand.....	143
forceReset.....	144
setStatusChangeEventDelegate	145
setReceiveEventDelegate	147
interval.....	149
■ Epos2HybridPrinter class.....	150
initWithLang.....	150
connect	151
disconnect.....	154
startMonitor	155
stopMonitor.....	156
getStatus.....	157
sendData.....	159
beginTransaction	160
endTransaction.....	161
clearCommandBuffer.....	162
selectPaperType	163
waitInsertion	164
cancelInsertion	165
ejectPaper	166
readMicrData.....	167
cleanMicrReader	168
forceRecover.....	169
forcePulse	170
forceCommand.....	172
forceReset.....	173
paperType	174
interval.....	175
waitTime	176
mode40Cpl	177
setStatusChangeEventDelegate	178
setReceiveEventDelegate	180
■ Epos2LineDisplay Class.....	183
initWithDisplayModel	183
connect	184
disconnect.....	187
getStatus.....	188
sendData.....	189
clearCommandBuffer.....	190
addInitialize	191
addCreateWindow	192
addDestroyWindow.....	194
addSetCurrentWindow.....	195
addClearCurrentWindow	196
addSetCursorPosition	197

addMoveCursorPosition	198
addSetCursorType.....	199
addText.....	200
addReverseText	202
addMarqueeText.....	204
addSetBlink.....	206
addSetBrightness	207
addShowClock.....	208
addCommand.....	209
setReceiveEventDelegate.....	210
■ Epos2Keyboard class	212
init	212
connect	213
disconnect.....	215
getStatus.....	216
setPrefix.....	217
getPrefix.....	218
setKeyPressEventDelegate.....	219
setReadStringEventDelegate	220
■ Epos2POSKeyboard class.....	221
init	221
connect	222
disconnect.....	224
getStatus.....	225
setKeyPressEventDelegate.....	226
■ Epos2BarcodeScanner Class	227
init	227
connect	228
disconnect.....	231
getStatus.....	232
setScanEventDelegate.....	233
■ Epos2MSR class	234
init	234
connect	235
disconnect.....	237
getStatus.....	238
setDataEventDelegate.....	239
■ Epos2SimpleSerial Class	241
init	241
connect	242
disconnect.....	244
getStatus.....	245
sendCommand.....	246
setReceiveEventDelegate.....	247
■ Epos2GermanyFiscalElement Class	248
init	248
connect	249
disconnect.....	253
getStatus.....	254
operate	255
setReceiveEventDelegate.....	256
■ Epos2OtherPeripheral class	258

init	258
connect	259
disconnect.....	261
getStatus.....	262
sendData.....	263
setReceiveEventDelegate.....	264
■ Epos2CommBox Class	265
init	265
connect	266
disconnect.....	268
getStatus.....	269
getCommHistory	270
sendMessage	272
setReceiveEventDelegate.....	274
■ Common to all classes	275
getAdmin.....	275
getLocation.....	276
setConnectionEventDelegate.....	277
■ Epos2Discovery Class.....	278
start.....	278
stop	282
■ Epos2Log Class.....	283
setLogSettings.....	283
SdkVersion	285
■ Epos2BluetoothConnection Class	286
connectDevice.....	286
disconnectDevice.....	287
■ EasySelect Class	288
parseNFC	288
parseQR.....	290
createQR	291
parseBeacon.....	292
■ EasySelectInfo Class.....	293
deviceType	293
printerName	293
macAddress	293
target.....	293
■ Status list	294
Error Status and countermeasures.....	294
Callback Codes and countermeasures.....	296
Printer Status and countermeasures	299
■ Key code list	303
Device Specifications	305
■ List of Supported Classes	305
■ List of Supported APIs.....	308
Epos2Printer Class	308

Epos2LineDisplay Class	319
Common to all classes	324
EasySelect Class.....	326
■ Printer-specific Support Information	328
TM-m10.....	328
TM-m30	331
TM-m30II.....	334
TM-m30II-H	337
TM-T20.....	340
TM-T20II.....	342
TM-T20III	345
TM-T20IIIL.....	347
TM-T20X	349
TM-T60.....	351
TM-T70.....	353
TM-T70II.....	355
TM-T81II.....	358
TM-T81III	360
TM-T82.....	362
TM-T82II.....	364
TM-T82III	366
TM-T82IIIL.....	368
TM-T82X	370
TM-T83III	372
TM-T88V.....	375
TM-T88VI	377
TM-T100	380
TM-U220	382
TM-U330	383
TM-P20	385
TM-P60 (Receipt).....	389
TM-P60 (Peeler)	391
TM-P60II (Receipt)	394
TM-P60II (Peeler).....	397
TM-P80	400
TM-H6000V	403
TM-T20II-i.....	405
TM-T70-i	407
TM-T82II-i.....	409
TM-T83II-i.....	411
TM-T88V-i.....	413
TM-T88VI-iHUB.....	415
TM-U220-i.....	418
TM-T70II-DT.....	419
TM-T70II-DT2	422
TM-T88V-DT	425
TM-T88VI-DT2	427
TM-H6000IV-DT	429
TM-T88IV	431
TM-T90.....	433
TM-L90.....	435
TM-H6000IV	438
■ Usage restriction by firmware version	440
TM-i Series/TM-DT Series	440
TM-m30.....	441
TM-T88VI	441

TM-T88VI-iHUB.....	441
--------------------	-----

Sample Programs442

■ Functionality	442
ePOS2Printer	442
ePOS2 Hybrid Printer	443
ePOS2Discovery	443
ePOS2LineDisplay	443
ePOS2Keyboard	444
ePOS2POSKeyboard	444
ePOS2BarcodeScanner.....	444
ePOS2MSR.....	444
ePOS2SimpleSerial.....	445
ePOS2GermanyFiscalElement.....	445
ePOS2OtherPeripheral	446
ePOS2CommBox.....	446
ePOS2EasySelection	446
ePOS2_POSAppForTerminalModel.....	447
■ Use Environment	448
■ Installation Procedure	448

Application Guide.....449

■ To search printers	449
■ To monitor continuously	450
■ To use the same printer from multiple mobile devices	452
■ To specify a transaction	453
■ To reconnect to the network automatically	454
■ To transmit and receive the data between applications	455
■ To perform forward printing	457
■ To select a printer using its QR code	459
■ To select a printer using its NFC tag	461
■ To perform check process	463
■ To control multiple peripheral devices	465
■ To update the printer firmware version	466

Appendix467

■ Open Source Software Licensing	467
Sample Programs.....	467
Libraries.....	467

Functionality

Epson ePOS SDK for iOS is an SDK for developing iOS applications. Using Epson ePOS SDK for iOS enables the use of simple code to control TM printers. Also, in some TM printers, peripheral devices such as the customer display and barcode scanner that are connected to the printer, and slave printers that are connected over a network can be controlled. In addition, application software using unique functions such as the spooler function and Communication Box, etc. can also be developed.

In this manual, printers are classified as follows.

Type	Description
TM Printers	Collective name for the following receipt printer models: <ul style="list-style-type: none">• Single-function models• Mobile models• Hybrid models• TM-i Series• TM-DT Series
Slave Printers	A collective name for TM printers connected over a network that are controlled from a smart device via the master TM printer.

Application Development in Epson ePOS SDK for iOS


The following section describes the system configurations of applications developed in Epson ePOS SDK for iOS. Refer to the Technical Reference Guide of each printer for information on system configuration methods.

TM Printer Models

This is a system in which a smart device and TM printer are connected through communication.

A connection method (*Bluetooth/Wi-Fi/Ethernet*) conforming to the specifications of your smart device and TM printer can be selected.

Multiple TM printers can be controlled via a Wi-Fi/Ethernet connection.

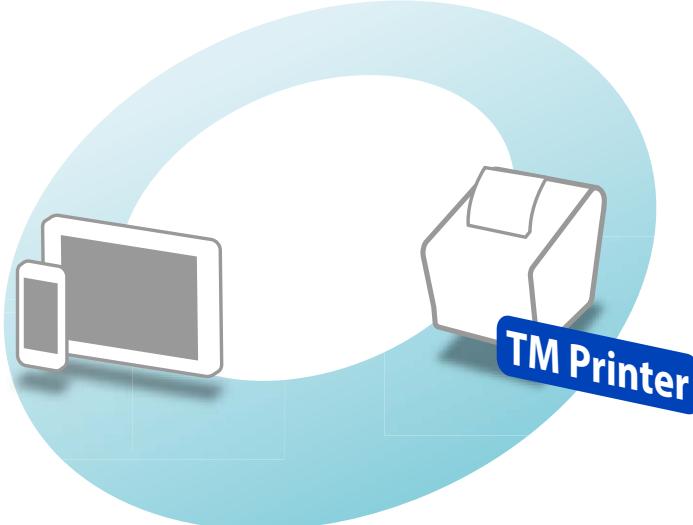


Epson must apply with Apple in advance to register applications using *Bluetooth* communication in the App Store. Use the following URL to apply for registration of each application into the App Store.
<https://c4b.epson-biz.com/ais/E/>

Customer Display Models

This is a system in which the TM printer and customer display are controlled from a smart device.

The customer display is connected to the TM printer, and the smart device and TM printer are connected through communication.

A connection method (*Bluetooth/Wi-Fi/Ethernet*) conforming to the specifications of your smart device and TM printer can be selected.

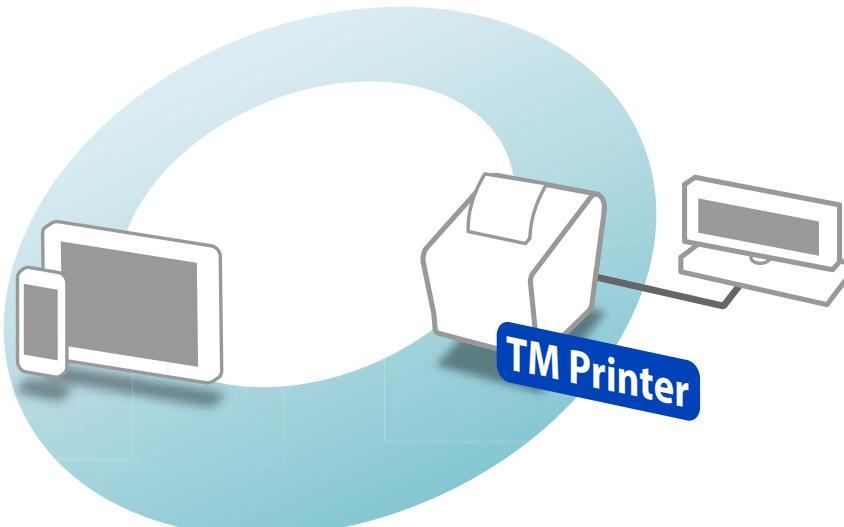

TM Printer + DM-D30 + barcode scanner model


This is a system in which the TM Printer and DM-D30, as well as the barcode scanner are controlled from a smart device.

The DM-D30 and the barcode scanner are connected to the TM Printer, and the smart device and TM Printer are connected through communication.

A connection method (*Bluetooth/Wi-Fi/Ethernet*) conforming to the specifications of your smart device and the TM Printer can be selected.

TM Printer + DM-D30 + barcode scanner model can be configured by the following TM printer.


- TM-m30
- TM-m30II
- TM-m30II-H
- TM-T88VI

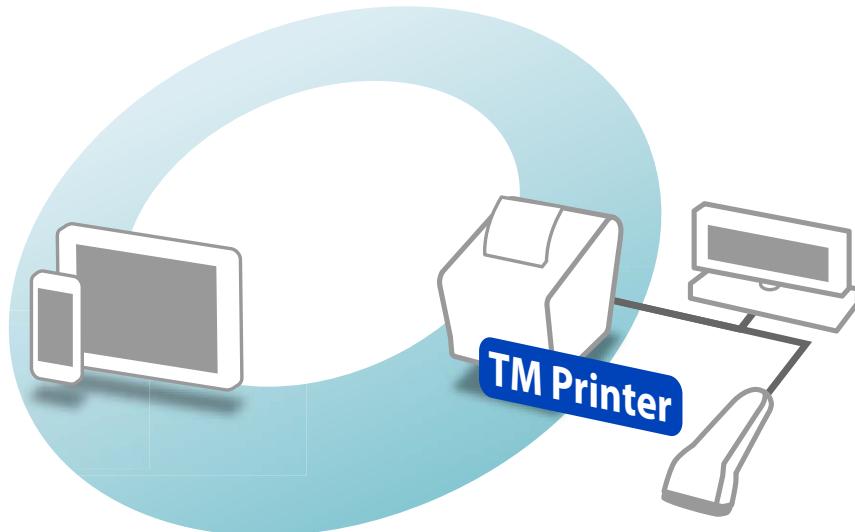

- The ePOS-Device settings of the TM printer must be set to "Enable."
 - * The ePOS-Device settings are made from EpsonNet Config (Web version) of the TM-m30.
 - * The default settings for the ePOS-Device settings of the TM-m30II/TM-m30II-H vary according to the destination.
Check the settings in EpsonNet Config (Web version) or TM-m30II Utility.
 - * The TM-T88VI ePOS-Device settings are carried out in TM-T88VI Utility.
- A combination of TM Printer + barcode scanner can also be used.

POS Terminal Model

This is a system in which a smart device and the TM printer (master) that acts as the POS terminal are connected through Wi-Fi/Ethernet network communication, and operation is performed by connecting multiple peripheral devices such as slave printers and customer display, etc. to the master printer.

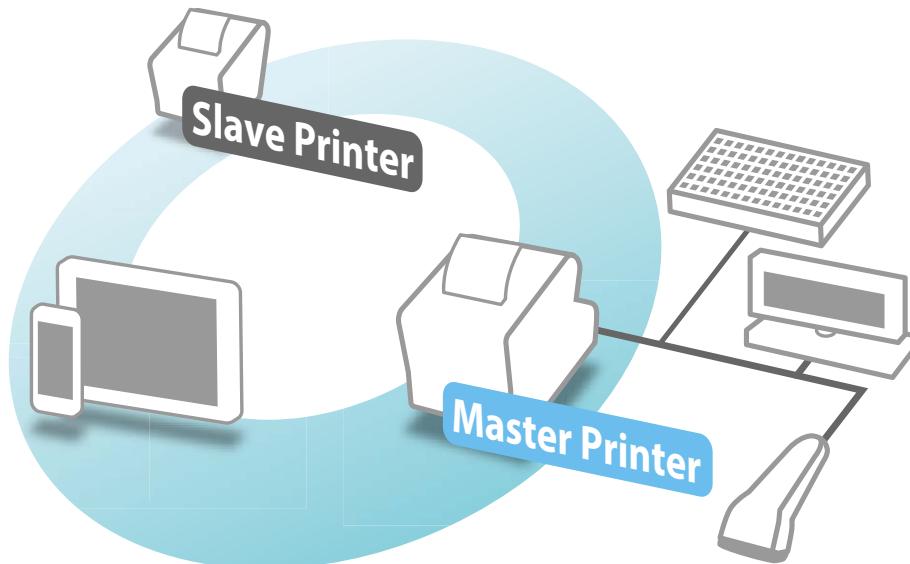

In addition to Epson's peripheral devices, the POS terminal model can control various peripheral devices from the device control program and device control script originally developed by Epson.

Since the software to be loaded and the version of the software differ depending on the TM printer that acts as the POS terminal, the peripheral devices that can be controlled are also different.

For details on controllable peripheral devices, refer to the Technical Reference Guide of the printer.

The device control programs are implemented in TM-DT series (TM-DT software version 4.0 or later).

Refer to TM-DT Series Peripheral Device Control Guide for information on the device control programs and device control scripts.

Epson ePOS SDK for iOS Development Environment

Use the latest version of Xcode for the development of applications using the Epson ePOS SDK for iOS.



Epson ePOS SDK for iOS is compatible with Bitcode.

Application Operating Environment

This section describes the operating environment for applications developed using the Epson ePOS SDK for iOS. For the most recent information on applicable smart devices, refer to the README.en.txt file contained in the "Epson ePOS SDK for iOS" package.



The NFC function can be used with devices that can read the NFC NDEF tags by CoreNFC of iOS11 or later.

Supported printers

The following list of printers can be controlled from the applications.



Usable interfaces vary depending on the specific TM printer. Refer to the Technical Reference Guide of each printer for more information.

Single-function models

- | | |
|-------------------------------------|-------------------------------------|
| <input type="checkbox"/> TM-m10 | <input type="checkbox"/> TM-T81III |
| <input type="checkbox"/> TM-m30 | <input type="checkbox"/> TM-T82 |
| <input type="checkbox"/> TM-m30II | <input type="checkbox"/> TM-T82II |
| <input type="checkbox"/> TM-m30II-H | <input type="checkbox"/> TM-T82III |
| <input type="checkbox"/> TM-T20 | <input type="checkbox"/> TM-T82IIIL |
| <input type="checkbox"/> TM-T20II | <input type="checkbox"/> TM-T82X |
| <input type="checkbox"/> TM-T20III | <input type="checkbox"/> TM-T83III |
| <input type="checkbox"/> TM-T20IIIL | <input type="checkbox"/> TM-T88V |
| <input type="checkbox"/> TM-T20X | <input type="checkbox"/> TM-T88VI |
| <input type="checkbox"/> TM-T60 | <input type="checkbox"/> TM-T100 |
| <input type="checkbox"/> TM-T70 | <input type="checkbox"/> TM-U220 |
| <input type="checkbox"/> TM-T70II | <input type="checkbox"/> TM-U330 |
| <input type="checkbox"/> TM-T81II | |

Mobile models

- | | |
|---------------------------------|-----------------------------------|
| <input type="checkbox"/> TM-P20 | <input type="checkbox"/> TM-P60II |
| <input type="checkbox"/> TM-P60 | <input type="checkbox"/> TM-P80 |

Hybrid models

- TM-H6000V
-

TM-i Series

- TM-T20II-i
 - TM-T70-i (TM-i firmware Ver. 4.0 or later)
 - TM-T82II-i
 - TM-T83II-i
 - TM-T88V-i (TM-i firmware Ver. 4.0 or later)
 - TM-T88VI-iHUB
 - TM-U220-i
-

TM-DT Series

- TM-T70II-DT
- TM-T70II-DT2
- TM-T88V-DT
- TM-T88VI-DT2
- TM-H6000IV-DT

Functions provided in each printer

Among the functions provided by Epson ePOS SDK for iOS, those that can be used differ according to the printer. Refer to the list below.

	SSL/TLS communication ^{*1}	Ringing control of built-in buzzer	Ringing control of optional external buzzer	Printing by multiple interfaces	Control of slave printers	Spooler/Print Forwarding	Communication Box	Control of peripheral devices ^{*2}	Simple selection using NFC tag	Simple selection using QR code	Simple selection using iBeacon	Bluetooth pairing
TM-m10	-	-	✓	✓	-	-	-	-	✓	✓	-	✓ ^{*6}
TM-m30	-	-	✓	✓ ^{*5}	-	-	-	✓	✓	✓	-	✓ ^{*6}
TM-m30II	-	-	✓	✓ ^{*5}	-	-	-	✓	✓	✓	-	✓ ^{*6}
TM-m30II-H	-	-	✓	✓ ^{*5}	-	-	-	✓	✓	✓	✓	✓ ^{*6}
TM-T20	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T20II	-	-	✓	-	-	-	-	-	✓	✓	-	✓ ^{*6}
TM-T20III	-	-	✓	-	-	-	-	-	✓	✓	-	✓ ^{*6}
TM-T20IIIL	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T20X	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T60	-	-	-	-	-	-	-	-	✓	✓	-	-
TM-T70	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T70II	-	✓ ^{*4}	✓	-	-	-	-	-	✓	✓	-	✓ ^{*6}
TM-T81II	-	-	-	-	-	-	-	-	✓	✓	-	-
TM-T81III	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T82	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T82II	-	✓ ^{*4}	✓	-	-	-	-	-	✓	✓	-	-
TM-T82III	-	✓ ^{*4}	✓	-	-	-	-	-	✓	✓	-	✓
TM-T82IIIL	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T82X	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T83III	-	-	✓	-	-	-	-	-	✓	✓	-	-
TM-T88V	-	✓ ^{*4}	✓	-	-	-	-	-	✓	✓	-	✓ ^{*6}
TM-T88VI	✓ ^{*3}	✓ ^{*4}	✓	✓ ^{*5}	-	-	-	✓	✓	✓	✓	✓ ^{*6}

	SSL/TLS communication ^{*1}	Ringing control of built-in buzzer	Ringing control of optional external buzzer	Printing by multiple interfaces	Control of slave printers	Spooler/Print Forwarding	Communication Box	Control of peripheral devices ^{*2}	Simple selection using NFC tag	Simple selection using QR code	Simple selection using iBeacon	Bluetooth pairing
TM-T100	-	-	✓	-	-	-	-	-	-	✓	-	-
TM-U220	-	-	-	-	-	-	-	-	-	✓	-	-
TM-U330	-	-	-	-	-	-	-	-	-	✓	-	-
TM-P20	-	✓	-	-	-	-	-	-	✓	✓	-	✓ ^{*6}
TM-P60	-	-	-	-	-	-	-	-	✓	✓	-	-
TM-P60II	-	✓	-	-	-	-	-	-	✓	✓	-	✓ ^{*6}
TM-P80	-	✓	-	-	-	-	-	-	✓	✓	-	✓ ^{*6}
TM-H6000V	✓	-	-	✓	-	-	-	✓	✓	✓	-	✓ ^{*6}
TM-T20II-i	✓	-	✓	-	✓	✓	✓	✓	-	-	-	-
TM-T70-i	✓	-	-	-	✓	✓	✓	✓	-	-	-	-
TM-T82II-i	✓	✓ ^{*4}	✓	-	✓	✓	✓	✓	-	-	-	-
TM-T83II-i	✓	✓ ^{*4}	✓	-	✓	✓	✓	✓	-	-	-	-
TM-T88V-i	✓	-	✓	-	✓	✓	✓	✓	-	-	-	-
TM-T88VI-iHUB	✓	✓ ^{*4}	✓	-	✓	✓	✓	✓	✓	-	✓	-
TM-U220-i	✓	-	✓	-	✓	✓	✓	✓	-	-	-	-
TM-T70II-DT	✓	-	✓	-	✓	✓	✓	✓	-	-	-	-
TM-T70II-DT2	✓	-	✓	-	✓	✓	✓	✓	-	-	-	-
TM-T88V-DT	✓	-	✓	-	✓	✓	✓	✓	-	-	-	-
TM-T88VI-DT2	✓	-	✓	-	✓	✓	✓	✓	-	-	-	-
TM-H6000IV-DT	✓	-	-	-	✓	✓	✓	✓	-	-	-	-

*1: To communicate with the printer using SSL/TLS, select "TCP/S" as the connection type in the connect API.

*2: The peripheral devices that can be used differ according to the printer. Refer to the Technical Reference Guide of each printer.

*3: Cannot be used in the system configuration of the customer display + barcode scanner model.

*4: Supports ringing control by the drawer kick command.

*5: Cannot be used in a system configuration with TM printer + barcode scanner.

*6: Supported by **Bluetooth** models.

Controllable Peripheral Devices

Control of the following peripheral devices is supported in Epson ePOS SDK for iOS.



- Controllable devices vary by model of printer.
Refer to [Functions provided in each printer](#) or the Technical Reference Guide of each printer.
- By developing a device control program, a TM-DT series printer can control peripheral devices other than those introduced here.
Refer to TM-DT Series Peripheral Device Control Guide for information on the development.

Slave printer

Wi-Fi enabled models of the following TM printers

- | | |
|--|---------------------------------|
| <input type="checkbox"/> TM-P20 | <input type="checkbox"/> TM-P80 |
| <input type="checkbox"/> TM-P60II (Peeler) | |

The following TM printers that are equipped with a Wi-Fi/Ethernet interface

- | | |
|-----------------------------------|-------------------------------------|
| <input type="checkbox"/> TM-T20 | <input type="checkbox"/> TM-T88V |
| <input type="checkbox"/> TM-T20II | <input type="checkbox"/> TM-T88VI |
| <input type="checkbox"/> TM-T70 | <input type="checkbox"/> TM-T90 |
| <input type="checkbox"/> TM-T70II | <input type="checkbox"/> TM-L90 |
| <input type="checkbox"/> TM-T82II | <input type="checkbox"/> TM-U220 |
| <input type="checkbox"/> TM-T83II | <input type="checkbox"/> TM-H6000IV |
| <input type="checkbox"/> TM-T88IV | |

The following TM-i Series/TM-DT Series

- | | |
|--|--|
| <input type="checkbox"/> TM-T20II-i | <input type="checkbox"/> TM-T88V-i (TM-i firmware Ver. 4.0 or later) |
| <input type="checkbox"/> TM-T70-i (TM-i firmware Ver. 4.0 or later) | <input type="checkbox"/> TM-T88V-DT (TM-DT software Ver.4.0 or later) |
| <input type="checkbox"/> TM-T70II-DT (TM-DT software Ver.4.0 or later) | <input type="checkbox"/> TM-U220-i |
| <input type="checkbox"/> TM-T82II-i | <input type="checkbox"/> TM-H6000IV-DT (TM-DT software Ver.4.0 or later) |
| <input type="checkbox"/> TM-T83II-i | |

Customer display

- | | |
|----------------------------------|----------------------------------|
| <input type="checkbox"/> DM-D30 | <input type="checkbox"/> DM-D210 |
| <input type="checkbox"/> DM-D110 | |

Peripheral Devices that can be Controlled by Device Control Programs

Peripheral devices conforming to the OPOS specifications can be controlled using the device control programs that are supported by TM-DT series (TM-DT software version 4.0 or later).

In the categories described below, peripheral devices having a driver that runs in combination with OPOS Common Control Object (OPOS CCO) 1.14.001 can be controlled.

- MSR
 - POS keyboard
 - Barcode scanner
-

Peripheral Devices that can be Controlled by Device Control Scripts

The peripheral devices listed below can be controlled from the device control scripts of the TM-i series/TM-DT series.

- Key input device
 - MSR (Hitachi-Omron Terminal Solutions, Corp.)
 - Keyboard (Standard HID device)
 - Barcode scanner (Standard HID device)
- Serial communication device

Downloadable Content

Epson ePOS SDK for iOS packages include the following files.

Filename	Description
ePOS2.h	This is a header file that includes the class definition and error value/device type constant definition.
libepos2.a	This is a library for function execution. (Compatible with armv6, armv7, armv7s, arm64, i386, x86_64)
ePOSEasySelect.h	This is a header file for simple printer selection.
libeposeeasyselect.a	This is a library for the simple printer selection function.
OPOS_CCOs_1.14.001.msi	This is the OPOS CCO installer package.
ePOS2_Sample_iOS.zip	These files are sample programs.
DeviceControlProgram_Sample.zip	This file contains sample device control programs.
README.jp.txt	This is the Japanese README file.
README.en.txt	This is the English README file.
EULA.jp.txt	This is the Japanese software license agreement.
EULA.en.txt	This is the English software license agreement.
ePOS_SDK_iOS_um_ja_revx.pdf	This is the Japanese user manual.
ePOS_SDK_iOS_um_en_revx.pdf	This is the English user manual.
TM-DT_Peripherals_ja_revx.pdf	This is the Japanese TM-DT Series Peripheral Device Control Guide. This guide describes how to control peripheral devices with TM-DT series.
TM-DT_Peripherals_en_revx.pdf	This is the English TM-DT Series Peripheral Device Control Guide.
JSON_Specification.pdf	This is the JSON specifications. This describes the JSON specifications that are used for GermanyFiscalElement class.
ePOS_SDK_iOS_Migration_Guide_ja_revx.pdf	This is the Japanese migration guide. This guide describes the procedure to migrate from the ePOS-Print SDK or ePOS-Device SDK.
ePOS_SDK_iOS_Migration_Guide_en_revx.pdf	This is the English migration guide.

Web Content

Online reference is publicly available from the following website.

<https://reference.epson-biz.com/pos/reference/>

Limitations

- Set the barcode reader suffix (delimiter) to CR (carriage return code). Data cannot be obtained using any other settings.
- When using 2D barcode readers, Japanese and other multi-byte characters cannot be read correctly. However, when combining a TM-m30/TM-m30II/TM-m30II-H/TM-T88VI and 2D barcode reader to read a QR code, multi-byte characters encoded with UTF-8 can be obtained correctly.
- Control codes cannot be read from 2D barcode data if it contains ASCII control codes (0x00 through 0x1F).
- The number of device ports that can be simultaneously opened in the same application is 16 ports.
- Communication will be disrupted if a terminal enters sleep mode while communicating with a printer via a *Bluetooth* connection.
- When connecting via *Bluetooth* and sending print data to devices that cannot print, the print data may be deleted depending on the specifications of the particular iOS version. Devices cannot print under the following circumstances.
 - The roll-paper cover is open.
 - The printer is out of paper.
 - Waiting for printed labels to be separated.

How to Use

This section describes how to create Epson ePOS SDK for iOS projects and some basic programming methods used in the Epson ePOS SDK for iOS.

Printer Connections

Connect smart devices and printers using a connection method that matches the system you want to create. Refer to the Technical Reference Guide of each printer for more information.

Creating an Epson ePOS SDK for iOS Project



You can get Xcode from the following URL.

<https://developer.apple.com/>

- 1 Create a new project in Xcode.
- 2 Allocate the following provided Objective-C headers to the desired layer of the project in the Xcode **Project Navigator**.
 - ePOS2.h
 - ePOSEasySelect.h
- 3 Drag the following provided static libraries to the desired layer of the project in the Xcode **Project Navigator**.
 - libepos2.a
 - libposeeasyselect.a
- 4 Select the project files in the root location from the **Project Navigator**.
- 5 Select **Build Phase** from **Targets**.
- 6 Expand **Link Binary With Libraries** and the click "+".
- 7 Select **libxml2.2.*** and **ExternalAccessory.framework** and then click **Add**.



Import the following .frameworks according to the application functions to be developed.

- iBeacon function: CoreLocation.framework
- NFCfunction: CoreNFC.framework

- 8 Describe the import definitions for the Objective-C headers in the *.m source files for the application you want to use. Refer to the following documents.

```
#import "ePOS2.h"
#import "ePOSEasySelect.h"
```

9 When the *Bluetooth* is used, set the protocol name.

Set the protocol name according to the following procedure:

1. In Project Navigator, select *.plist. (The file name will be Project name-info.)
2. In the pop-up menu, select Add Row.
3. Select "Supported external accessory protocols".
4. Expand the items added in Step 3.
5. Enter com.epson.escpos as the Value for Item 0.

Key	Type	Value
Localization native development region	String	en
Bundle display name	String	\$(PRODUCT_NAME)
Executable file	String	\$(EXECUTABLE_NAME)
Bundle identifier	String	test.\$(PRODUCT_NAME).rfc1034identifier
InfoDictionary version	String	6.0
Bundle name	String	\$(PRODUCT_NAME)
Bundle OS Type code	String	APPL
Bundle versions string, short	String	1.0
Bundle creator OS Type code	String	????
Bundle version	String	1.0
Application requires iPhone environment	Boolean	YES
► Required device capabilities	Array	(1 item)
► Supported interface orientations	Array	(3 items)
▼ Supported external accessory protocols	Array	(1 item)
Item 0	String	com.epson.escpos

Programming Guide

This section describes some of the basic programming methods used in the Epson ePOS SDK for iOS.

Programming Flow

This section describes a flow to create a program for controlling printers or peripheral devices respectively.

- [Controlling Printers](#)
- [Controlling Customer Displays](#)
- [Controlling Keyboards and Barcode Scanners](#)



Do not add an API of Epson ePOS SDK in the callback.

Controlling Printers

The method of controlling the TM printer and slave printer, and programming receipt printing is described below.

1. Printer selection (class initialization)



2. Creating print data (data buffering)



3. Sending print data (connection with the devices/communication/printing/disconnection)

Printer selection (class initialization)

Initialize the Epos2Printer class and select the printer to control.

```
Epos2Printer *printer = nil;
printer = [[Epos2Printer alloc] initWithPrinterSeries:EPOS2_TM_T88
lang:EPOS2_MODEL_ANK];
if (printer == nil) {
    //Displays error messages
}
```

Register the callback method for response document receive events.

```
[printer setReceiveEventDelegate:self];
```

Creating print data (data buffering)

Use add* API commands in the Epos2Printer class to create print data.

```

int result = EPOS2_SUCCESS;
result = [printer addTextAlign:EPOS2_ALIGN_CENTER];
result = [printer addText:@"Hello World"];
if (result != EPOS2_SUCCESS) {
    //Displays error messages
}

```

Sending print data (connection with the devices/communication/printing/disconnection)

Connect to the printer to which the created print data will be sent.

```

int result = EPOS2_SUCCESS;
result = [printer connect:@"TCP:192:168.192.168", timeout:EPOS2_PARAM_DEFAULT];
if (result != EPOS2_SUCCESS) {
    //Displays error messages
}

```

Run the print process and retrieve the print result in the callback. Do not add an API command in the callback.

```

result = [printer sendData:EPOS2_PARAM_DEFAULT];
if (result != EPOS2_SUCCESS) {
    //Displays error messages
}

- (void)onPtrReceive:(Epos2Printer *)printerObj code:(int)code
status:(Epos2PrinterStatusInfo *)status printJobId:(NSString *)printJobId
{
if (code == EPOS2_CODE_SUCCESS) {
    //Displays successful print messages
}
else {
    //Displays error messages
}
//Abort process
}

```



When an error occurs, the print data that has been created is not erased until the command buffer is cleared.
The print data can be used for re-printing in cases such as when the error processing ends.

Disconnect from the printer.

```

int result = EPOS2_SUCCESS;
result = [printer disconnect];

```

Clear the command buffer and terminate the printer control.

```

[printer clearCommandBuffer];
[printer setReceiveEventDelegate:nil];
printer = nil;

```

Controlling Customer Displays

This section describes the programming methods for controlling customer displays and displaying text on displays.

1. Device selection (class initialization)



2. Creating display data (data buffering)



3. Sending display data (connection with the devices/communication/printing/disconnection)

Device selection (class initialization)

Initialize the Epos2LineDisplay class and connect to the customer display.

```
Epos2Display *display = nil;
display = [[Epos2Display alloc] initWithDisplayModel:EPOS2_DM_D30]
if (display == nil) {
    //Displays error messages
}
```

Register the callback method for response document receive events.

```
[display setReceiveEventDelegate:self];
```

Creating display data (data buffering)

Use add* API commands in the Epos2LineDisplay class to create display data.

In the following example, data is created to display "Hello World".

```
int result = EPOS2_SUCCESS;
result = [display addText:@"Hello World"];
if (result != EPOS2_SUCCESS) {
    //Displays error messages
}
```

Sending display data (connection with the devices/communication/printing/disconnection)

Connect the customer display to which created display data will be sent.

```
int result = EPOS2_SUCCESS;
result = [display connect:@"TCP:192.168.192.168", timeout:EPOS2_PARAM_DEFAULT];
if (result != EPOS2_SUCCESS) {
    //Displays error messages
}
```

Run the display process and retrieve the display result.

```
Epos2DisplayStatusInfo *status = nil;
status = [display getStatus];
if (status.connection && status.online) {
    result = [display sendData];
} else{
    //Displays error messages
    //Abort process
}

- (void) onDispReceive:(Epos2LineDisplay *)displayObj code:(int)code
{
if (code == EPOS2_CODE_SUCCESS) {
    //Displays successful print messages
}
else {
    //Displays error messages
}
    //Abort process
}
```

Disconnect from the customer display.

```
int result = EPOS2_SUCCESS;
result = [display disconnect];
if (result != EPOS2_CODE_SUCCESS) {
    //Displays error messages
}
```

Clear the command buffer and terminate the customer display control.

```
[display clearCommandBuffer];
[display setReceiveEventDelegate:nil];
display = nil;
```

Controlling Keyboards and Barcode Scanners

This section describes how to create a program that enables receiving data input from keyboards and barcode scanners.

The following section describes the programming flow for controlling keyboards.

1. Connecting to the device



2. Receiving data



3. Disconnecting from the device

Connecting to the device

Initialize the Epos2Keyboard class, connect the keyboard, and then register the callback method that will receive input data.

```
//Initialization process
EPOS2Keyboard keyboard_ = [[EPOS2Keyboard alloc] init];

if (keyboard_ == nil) {
    //Displays error messages
}

[keyboard_ setReadStringEventDelegate:self];

//Connection process
int result = EPOS2_SUCCESS;

result = [keyboard_ connect:@"TCP:192.168.192.168[local_keyboard]"
timeout:EPOS2_PARAM_DEFAULT];
if (result != EPOS2_SUCCESS) {

    //Displays error messages
    //Abort process
}
```

Receiving data

Register the callback method for key press events.

```
//Receive process
- (void)onKbdKeyPress:(EPOS2Keyboard *)keyboardObj keyCode:(int)keyCode ascii:(NSString *)
*ascii
{
    switch (keyCode) {
        case EPOS2_VK_RETURN:
            //Process executed when the Return key is pressed
            break;

        default:
            //Process executed when the any key is pressed
            break;
    }
}
```

Disconnecting from the device

Disrupt communication to terminate the reception of input data from the keyboard.

```
//Abort process
int result = [keyboard_ disconnect];

if (result != EPOS2_SUCCESS) {
    //Error message
}

//Termination process
[keyboard_ setReadStringEventDelegate:nil];

keyboard_ = nil;
```

Effective range of command buffers for setting

The valid range of add* of the Epos2Printer class used for setting depends on the print method.

Receipt

Effective after setting add* until `sendData` is executed.

The configured values are initialized every time `sendData` is executed. See below.

```
[printer addText:@"Hello World!\n"];
[printer addTextFont:EPOS2_FONT_B];
[printer addText:@"Hello World!\n"];
[printer addText:@"Hello World!\n"];
[printer sendData:EPOS2_PARAM_DEFAULT];
[printer clearCommandBuffer];
[printer addText:@"Hello World!\n"];
[printer sendData:EPOS2_PARAM_DEFAULT];
[printer clearCommandBuffer];
```

Red letters: Font A

Green letters: Font B

Slip, Endorsement, Validation

Effective after setting add* until the paper is ejected.

The configured values are initialized each time the following APIs are executed:

- `waitInsertion`
- `readMicrData`
- `sendData` (receipt printing)

See below.

```
[HybridPrinter selectPaperType:EPOS2_PAPER_TYPE_SLIP];
[HybridPrinter waitInsertion:EPOS2_PARAM_DEFAULT];
[HybridPrinter addText:@"Hello World!\n"];
[HybridPrinter addTextFont:EPOS2_FONT_B];
[HybridPrinter addText:@"Hello World!\n"];
[HybridPrinter addText:@"Hello World!\n"];
[HybridPrinter sendData:EPOS2_PARAM_DEFAULT];
[HybridPrinter clearCommandBuffer];
[HybridPrinter addText:@"Hello World!\n"];
[HybridPrinter sendData:EPOS2_PARAM_DEFAULT];
[HybridPrinter clearCommandBuffer];
[HybridPrinter ejectPaper];
[HybridPrinter selectPaperType:EPOS2_PAPER_TYPE_RECEIPT];
[HybridPrinter addText:@"Hello World!\n"];
[HybridPrinter sendData:EPOS2_PARAM_DEFAULT];
```

Red letters: Font A


Green letters: Font B

Status

The following statuses are defined in the Epson ePOS SDK for iOS.


Error status

Indicates a result of sending data to devices in each class. The result is sent immediately as an exception of API. Refer to [Error Status and countermeasures](#) for more information.

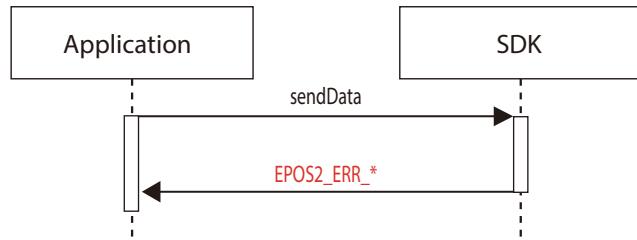

Callback code

Indicates a device's processing result for a `sendData`. Notified in a print completion event (`onPtrReceive` / `onDispReceive`). Refer to [Callback Codes and countermeasures](#) for more information.

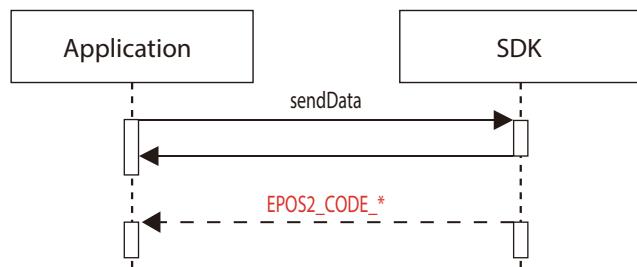

Printer status

Indicates the status of printers when sending print data. The printer status is retrieved when executing `sendData`. Refer to [Printer Status and countermeasures](#) for more information.

API Reference

This chapter describes the APIs provided by Epson ePOS SDK for iOS.

List of ePOS SDK API

Epson ePOS SDK for iOS provides the following classes:



- Available APIs and parameters vary by printer model and peripheral device.
Refer to [List of Supported Classes](#).
- For the list of APIs of each class, and the APIs supported by each printer, refer to [List of Supported APIs](#).

- [Epos2Printer class](#)
- [Epos2HybridPrinter class](#)
- [Epos2LineDisplay class](#)
- [Epos2Keyboard class](#)
- [Epos2POSKeyboard class](#)
- [Epos2BarcodeScanner class](#)
- [Epos2MSR class](#)
- [Epos2SimpleSerial class](#)
- [Epos2GermanyFiscalElement class](#)
- [Epos2OtherPeripheral class](#)
- [Epos2CommBox class](#)
- [Common to all classes](#)
- [Epos2Discovery class](#)
- [Epos2Log class](#)
- [Epos2BluetoothConnection class](#)
- [EasySelect class](#)
- [EasySelectInfo class](#)

Epos2Printer class

Controls printing by the printer.

API		Description
Initialization	initWithPrinterSeries	Initializes the Epos2Printer class.
Communication path	connect	Connects to the printer.
	disconnect	Disconnects from the printer.
Status monitor	startMonitor	Enables status event notification.
	stopMonitor	Disables status event notification.

API		Description
Status acquisition	getStatus	Acquires status of the connected printer.
Transmission	sendData	Sends a command to the printer.
Transaction	beginTransaction	Starts a transaction.
	endTransaction	Ends a transaction.
Print job	requestPrintJobStatus	Acquires the print result.
Buffer clear	clearCommandBuffer	Clears the command buffer.
Text	addTextAlign	Adds text alignment setting to the command buffer.
	addLineSpace	Adds line spacing setting to the command buffer.
	addTextRotate	Adds text rotation setting to the command buffer.
	addText	Adds text to print to the command buffer.
	addTextLang	Adds language setting to the command buffer.
	addTextFont	Adds character font setting to the command buffer.
	addTextSmooth	Adds character smoothing setting to the command buffer.
	addTextSize	Adds character scaling factor setting to the command buffer.
	addTextStyle	Adds character style setting to the command buffer.
Paper feed	addFeedUnit	Adds paper-feed setting in dots to the command buffer.
	addFeedLine	Adds paper-feed setting in lines to the command buffer.
Graphics	addImage	Adds a raster image print command to the command buffer.
	addLogo	Adds a NV logo print command to the command buffer.
Barcode	addBarcode	Adds a barcode print command to the command buffer.
	addSymbol	Adds a 2D symbol print command to the command buffer.

API		Description
Ruled line	addHLine	Adds a horizontal ruled line print command to the command buffer.
	addVLineBegin	Adds a vertical ruled line start command to the command buffer.
	addVLineEnd	Adds a vertical ruled line end command to the command buffer.
Page mode	addPageBegin	Adds a page mode start command to the command buffer.
	addPageEnd	Adds a page mode end command to the command buffer.
	addPageArea	Adds page mode print area setting to the command buffer.
	addPageDirection	Adds page mode print direction setting to the command buffer.
	addPagePosition	Adds page mode print position setting to the command buffer.
	addPageLine	Adds a page mode line draw command to the command buffer.
	addPageRectangle	Adds a page mode rectangle draw command to the command buffer.
Batch rotate print	addRotateBegin	Adds the start batch rotate print mode to the command buffer.
	addRotateEnd	Adds the end batch rotate print mode to the command buffer.
Cut	addCut	Adds a sheet cut command to the command buffer.
Drawer	addPulse	Adds a drawer kick command to the command buffer.
Buzzer	addSound	Adds a buzzer sound command to the command buffer.
Label sheet/black mark sheet	addFeedPosition	Adds a paper feed command to the command buffer.
	addLayout	Adds sheet layout setting to the command buffer.
Command	addCommand	Adds a command to the command buffer.
Maintenance counter	getMaintenanceCounter	Acquires the counter value.
	resetMaintenanceCounter	Resets the counter value.
Printer setting	getPrinterSetting	Acquires the set value of the printer setting.
	setPrinterSetting	Changes the printer setting.

API		Description
Firmware update	downloadFirmwareList	Acquires the list of the firmware.
	getPrinterFirmwareInfo	Acquires the information of the printer firmware.
	verifyUpdate	Acquires the result of the firmware update.
	updateFirmware	Instructs the printer to write the firmware image.
Forced transmission	forceRecover	Forced transmission function
	forcePulse	
	forceStopSound	
	forceCommand	
	forceReset	
Reception of result	setStatusChangeEventDelegate	Registers the callback method for an event.
	setReceiveEventDelegate	
Monitor interval	interval	<Obsolete> Status monitor interval

The print mode includes the standard mode, page mode, and the batch rotate print mode.

- Standard mode

Prints line by line. Line spacing is automatically adjusted according to character size, image size, and barcode height. Suitable for printing receipts whose print length varies by print content.

- Page mode

Prints page by page. Prints characters, images, and/or barcodes on a single page that is defined as a print area.

To print in the page mode, use [addPageBegin](#) and [addPageEnd](#) to start and end the page mode process, respectively.

- Batch rotate print mode

This is a print mode in which the range of the print data (such as characters, images, barcodes, etc.) is set, the print data in the set range is compiled, inverted, and then printed.

When performing the processing in the batch rotate print mode, start the batch rotate print processing with [addRotateBegin](#), and end the batch rotate print processing with [addRotateEnd](#).

The APIs that can be used in each mode are described in the table below.

API	Standard mode	Page mode	Batch rotate print mode
initWithPrinterSeries	-	-	-
connect	-	-	-
disconnect	-	-	-
startMonitor	✓	✓	✓
stopMonitor	✓	✓	✓
getStatus	✓	✓	✓
sendData	✓	✓	-
beginTransaction	✓	✓	✓

API	Standard mode	Page mode	Batch rotate print mode
endTransaction	✓	✓	-
requestPrintJobStatus	✓	✓	✓
clearCommandBuffer	✓	✓	-
addTextAlign	✓	-	✓
addLineSpace	✓	✓	✓
addTextRotate	✓	-	✓
addText	✓	✓	✓
addTextLang	✓	✓	✓
addTextFont	✓	✓	✓
addTextSmooth	✓	✓	✓
addTextSize	✓	✓	✓
addTextStyle	✓	✓	✓
addHPosition	✓	✓	✓
addFeedUnit	✓	✓	✓
addFeedLine	✓	✓	✓
addImage	✓	✓	✓
addLogo	✓	✓	✓
addBarcode	✓	✓	✓
addSymbol	✓	✓	✓
addHLine	✓	-	✓
addVLineBegin	✓	-	✓
addVLineEnd	✓	-	✓
addPageBegin	✓	-	-
addPageEnd	-	✓	-
addPageArea	-	✓	-
addPageDirection	-	✓	-
addPagePosition	-	✓	-
addPageLine	-	✓	-
addPageRectangle	-	✓	-
addRotateBegin	✓	-	-
addRotateEnd	-	-	✓
addCut	✓	-	-
addPulse	✓	-	-
addSound	✓	-	-

API	Standard mode	Page mode	Batch rotate print mode
<code>addFeedPosition</code>	✓	-	✓
<code>addLayout</code>	✓	-	✓
<code>addCommand</code>	✓	✓	✓

Epos2HybridPrinter class

Controls the hybrid model printers.

API		Description
Initialization	<code>initWithLang</code>	Initializes the HybridPrinter class.
Communication path	<code>connect</code>	Connects to the printer.
	<code>disconnect</code>	Disconnects from the printer.
Status monitor	<code>startMonitor</code>	Enables status event notification.
	<code>stopMonitor</code>	Disables status event notification.
Status acquisition	<code>getStatus</code>	Acquires status of the connected printer.
Transmission	<code>sendData</code>	Transfers a print command.
Transaction	<code>beginTransaction</code>	Starts a transaction.
	<code>endTransaction</code>	Ends a transaction.
Buffer clear	<code>clearCommandBuffer</code>	Clears the command buffer.
Print method	<code>selectPaperType</code>	Specifies a print method.
Paper feed	<code>waitInsertion</code>	Inserts paper.
	<code>cancelInsertion</code>	Cancels waiting for paper insertion.
Paper eject	<code>ejectPaper</code>	Ejects paper.
MICR	<code>readMicrData</code>	Reads by MICR.
	<code>cleanMicrReader</code>	Cleans the MICR mechanism.
Forced transmission	<code>forceRecover</code>	Forced transmission function
	<code>forcePulse</code>	
	<code>forceCommand</code>	
	<code>forceReset</code>	
Print method acquisition	<code>paperType</code>	Acquires the print method setting information.
Monitor interval	<code>interval</code>	Printer status update interval
On standby	<code>waitTime</code>	Time from insertion of a paper to start of operation
40cpl mode	<code>mode40Cpl</code>	40cpl mode
Reception of result	<code>setStatusChangeEventDelegate</code>	Registers the event listener registration method.
	<code>setReceiveEventDelegate</code>	

List of supported control operations for HybridPrinter class

APIs available for the Epos2HybridPrinter class depend on the print method.

The APIs and corresponding print methods are listed below.

API	Control operation				
	Receipt	Slip sheet	Endorse- ment	Valida- tion	MICR
initWithLang	✓	✓	✓	✓	✓
connect	✓	✓	✓	✓	✓
disconnect	✓	✓	✓	✓	✓
startMonitor	✓	✓	✓	✓	✓
stopMonitor	✓	✓	✓	✓	✓
getStatus	✓	✓	✓	✓	✓
sendData	✓	✓	✓	✓	-
beginTransaction	✓	✓	✓	✓	✓
endTransaction	✓	✓	✓	✓	✓
clearCommandBuffer	✓	✓	✓	✓	-
selectPaperType	✓	✓	✓	✓	-
waitInsertion	-	✓	✓	✓	-
cancelInsertion	-	✓	✓	✓	✓
ejectPaper	-	✓	✓	✓	✓
readMicrData	-	-	-	-	✓
cleanMicrReader	-	-	-	-	✓
setStatusChangeEventDelegate	✓	✓	✓	✓	✓
setReceiveEventDelegate	✓	✓	✓	✓	✓

Creating print document by the Epos2HybridPrinter class

The Epos2HybridPrinter class creates a print document using the same API as the [Epos2Printer class](#).

The APIs and corresponding print methods are listed below.

API	Print method				
	Receipt	Slip sheet	Endorse- ment	Endorse- ment (40cpl)	Validation
Text	addTextAlign	✓	✓	✓	-
	addLineSpace	✓	✓	✓	-
	addTextRotate	✓	✓	✓	✓
	addText	✓	✓	✓	✓
	addTextLang	✓	✓	-	-
	addTextFont	✓	✓	✓	-
	addTextSmooth	✓	-	-	-
	addTextSize	✓	✓	✓	-
	addTextStyle	✓	✓*	✓*	-
Paper feed	addFeedUnit	✓	✓	✓	✓
	addFeedLine	✓	✓	✓	✓
Graphics	addImage	✓	-	-	-
	addLogo	✓	-	-	-
Barcode	addBarcode	✓	-	-	-
	addSymbol	✓	-	-	-
Page mode	addPageBegin	✓	✓	-	-
	addPageEnd	✓	✓	-	-
	addPageArea	✓	✓	-	-
	addPageDirection	✓	✓	-	-
	addPagePosition	✓	✓	-	-
	addPageLine	✓	✓	-	-
	addPageRectangle	✓	✓	-	-
Cut	addCut	✓	-	-	-
Drawer	addPulse	✓	✓	✓	✓
Command	addCommand	✓	✓	✓	✓

* The reverse parameter is not supported.

Epos2LineDisplay class

Controls character display on the customer display.

API		Description
Initialization	initWithDisplayModel	Initializes the Epos2LineDisplay class.
Communication path	connect	Connects to the customer display.
	disconnect	Disconnects from the customer display.
Status acquisition	getStatus	Acquires status of the connected device.
Transmission	sendData	Sends a command to the customer display.
Buffer clear	clearCommandBuffer	Clears the command buffer.
Reset	addInitialize	Initializes the customer display.
Window	addCreateWindow	Adds a process to execute to the command buffer.
	addDestroyWindow	
	addSetCurrentWindow	
	addClearCurrentWindow	
Cursor	addSetCursorPosition	
	addMoveCursorPosition	
	addSetCursorType	
Text display	addText	
	addReverseText	
	addMarqueeText	
Display setting	addSetBlink	
	addSetBrightness	
Clock	addShowClock	
Command transfer	addCommand	
Reception of result	setReceiveEventDelegate	Registers the callback method for an event.

Epos2Keyboard class

Controls character entry from the keyboard.

API		Description
Initialization	init	Initializes the Epos2Keyboard class.
Communication path	connect	Connects to the keyboard.
	disconnect	Disconnects from the keyboard.
Status acquisition	getStatus	Acquires status of the connected device.

API		Description
String setting	setPrefix	Sets the condition to handle as a continuous string.
String setting acquisition	getPrefix	Acquires the set prefix.
Key detection	setKeyPressEventDelegate	Registers the callback method for an event.
String detection	setReadStringEventDelegate	

Epos2POSKeyboard class

Controls character entry from the POS keyboard.

API		Description
Initialization	init	Initializes the Epos2POSKeyboard class.
Communication path	connect	Connects to the keyboard.
	disconnect	Disconnects from the keyboard.
Status acquisition	getStatus	Acquires status of the connected device.
Key detection	setKeyPressEventDelegate	Registers the callback method for an event.

Epos2BarcodeScanner class

Controls barcode reading by the barcode scanner.

API		Description
Initialization	init	Initializes the Epos2BarcodeScanner class.
Communication path	connect	Connects to the barcode scanner.
	disconnect	Disconnects from the barcode scanner.
Status acquisition	getStatus	Acquires status of the connected device.
Input data reception	setScanEventDelegate	Registers the callback method for an event.

Epos2MSR class

Controls card reading by the MSR.

API		Description
Initialization	init	Initializes the Epos2MSR class.
Communication path	connect	Connects to the MSR.
	disconnect	Disconnects from the MSR.
Status acquisition	getStatus	Acquires status of the connected device.
Data detection	setDataEventDelegate	Registers the callback method for an event.

Epos2SimpleSerial class

Controls serial communication between the printer and device.

API		Description
Initialization	init	Initializes the Epos2SimpleSerial class.
Communication path	connect	Connects to the serial.
	disconnect	Disconnects from the serial.
Status acquisition	getStatus	Acquires status of the connected device.
Command transfer	sendCommand	Transfers a command.
Input data reception	setReceiveEventDelegate	Registers the callback method for an event.

Epos2GermanyFiscalElement class

Connects to the German fiscal element (TSE), and controls data read/write operations.

API		Description
Initialization	init	Initializes the Epos2GermanyFiscalElement class.
Communication path	connect	Connects to the German fiscal element (TSE).
	disconnect	Disconnects from the German fiscal element (TSE).
Status acquisition	getStatus	Acquires status of the German fiscal element (TSE).
Operation	operate	Send the JSONstring to the German fiscal element (TSE).
Reception of result	setReceiveEventDelegate	Registers the callback method for an event.

Epos2OtherPeripheral class

Controls peripheral devices via the developed device control programs.

API		Description
Initialization	init	Initializes the Epos2OtherPeripheral class.
Communication path	connect	Connects to the device.
	disconnect	Disconnects from the device.
Status acquisition	getStatus	Acquires status of the connected device.
Transmission	sendData	Data transmission
Reception of result	setReceiveEventDelegate	Registers the callback method for an event.

Epos2CommBox class

Controls data transmission and reception using the communication box.

API		Description
Initialization	init	Initializes the Epos2CommBox class.
Communication path	connect	Connects to the communication box.
	disconnect	Disconnects from the communication box.
Status acquisition	getStatus	Acquires status of the connected device.
Transmission history	getCommHistory	Acquires the message transmission history.
Transmission	sendMessage	Sends a message to the communication box.
Reception	setReceiveEventDelegate	Registers the callback method for an event.

Common to all classes

These APIs can be used with all classes.

API		Description
Administration information	getAdmin	Acquires the administration information.
	getLocation	Acquires the installation location information.
Reconnection	setConnectionEventDelegate	Registers the callback method for an event.

Epos2Discovery class

Controls the device discovery function.

API		Description
Start	start	Starts device search.
Stop	stop	Stops device search.

Epos2Log class

Controls the log output function.

API		Description
Log	setLogSettings	Sets the log output function.
Version acquisition	SdkVersion	Acquires the Epson ePOS SDK version.

Epos2BluetoothConnection class

Controls pairing connection with a *Bluetooth* device.

API		Description
<i>Bluetooth</i> communication path	connectDevice	Establishes <i>Bluetooth</i> connection.
	disconnectDevice	Disconnects <i>Bluetooth</i> connection.

EasySelect class

EasySelect class and EasySelectInfo class offer API commands and member variables for selecting printers using NFC tags, QR codes, or iBeacon data.

EasySelect class analyzes NFC tags, QR codes, and iBeacon data.

API		Description
Analysis of NFC tags	parseNFC	Analyzes NFC tag data.
Analysis of QR codes	parseQR	Analyzes QR codes data.
Creation of QR codes	createQR	Creates QR code data that can be analyzed by parseQR.
Analysis of printer information	parseBeacon	Analyzes iBeacon data.

EasySelectInfo class

Stores data analyzed by [parseNFC](#), [parseQR](#) or [parseBeacon](#). Calls the [connect](#) API command with the information of these member variables to connect with the printer.

Member variables		Description
Printer type	deviceType	Stores printer type information.
Printer name	printerName	Stores a printer name.
MAC address/BD address	macAddress	Stores a MAC address or a BD address.
Target information	target	Stores the target information.

Epos2Printer Class

initWithPrinterSeries

Initializes the Epos2Printer class.

Syntax

- (id) initWithPrinterSeries:(int)printerSeries lang:(int)lang;

Parameter

printerSeries

Specifies the target printer model.

Value	Description
EPOS2_TM_M10	TM-m10
EPOS2_TM_M30	TM-m30
EPOS2_TM_M30II	TM-m30II, TM-m30II-H
EPOS2_TM_P20	TM-P20
EPOS2_TM_P60	TM-P60 (Receipt/Peeler)
EPOS2_TM_P60II	TM-P60II (Receipt/Peeler)
EPOS2_TM_P80	TM-P80
EPOS2_TM_T20	TM-T20, TM-T20II, TM-T20II-i, TM-T20III, TM-T20IIIL, TM-T20X
EPOS2_TM_T60	TM-T60
EPOS2_TM_T70	TM-T70, TM-T70-i, TM-T70II, TM-T70II-DT, TM-T70II-DT2
EPOS2_TM_T81	TM-T81II, TM-T81III
EPOS2_TM_T82	TM-T82, TM-T82II, TM-T82II-i, TM-T82III, TM-T82IIIL, TM-T82X
EPOS2_TM_T83	TM-T83II-i
EPOS2_TM_T83III	TM-T83III
EPOS2_TM_T88	TM-T88IV, TM-T88V, TM-T88VI, TM-T88V-i, TM-T88VI-iHUB, TM-T88V-DT, TM-T88VI-DT2
EPOS2_TM_T90	TM-T90
EPOS2_TM_T100	TM-T100
EPOS2_TM_U220	TM-U220, TM-U220-i
EPOS2_TM_U330	TM-U330

Value	Description
EPOS2_TM_L90	TM-L90
EPOS2_TM_H6000	TM-H6000IV, TM-H6000V, TM-H6000IV-DT

lang

Specifies the language of the printer.

Value	Description
EPOS2_MODEL_ANK	ANK model
EPOS2_MODEL_CHINESE	Simplified Chinese model
EPOS2_MODEL_TAIWAN	Taiwan model
EPOS2_MODEL_KOREAN	Korean model
EPOS2_MODEL_THAI	Thai model
EPOS2_MODEL_SOUTHASIA	South Asian model

Return value

If the process succeeds, an initialized Epos2Printer class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_PARAM	An invalid parameter was specified.
EPOS2_ERR_MEMORY	Memory could not be allocated.
EPOS2_ERR_UNSUPPORTED	A model name or language not supported was specified.

Supplementary explanation

When iterating a process, be sure to generate and destroy instances outside the iterated process and not iterate the process at a short interval.

Memory releasing by the OS may affect the process of the Epson ePOS SDK, resulting in an invalid operation.

When connecting to multiple printers, generate instances appropriate to each model.

connect

Starts communication with the printer.

Syntax

```
- (int) connect:(NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

The connection method varies according to the system configuration.

- TM Printer Models

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Printer host name 	"TCP:192.168.192.168"
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> Serial number Omitted 	"USB:00000000000000000000" "USB:"

- Customer Display Models

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Printer host name 	"TCP:192.168.192.168"
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> Serial number Omitted 	"USB:00000000000000000000" "USB:"

To connect to the printer via SSL/TLS communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCPS"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Printer host name 	"TCPS:192.168.192.168[local_printer]"

- TM Printer + DM-D30 + barcode scanner model/

TM Printer + barcode scanner model

To connect via Wi-Fi/Ethernet network communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Printer host name 	"TCP:192.168.192.168[local_printer]"

The device ID is fixed as [local_printer].

To connect via *Bluetooth* or USB, specify using the following syntax.

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> Serial number Omitted 	"USB:000000000000000000000000" "USB:"

- POS Terminal Model

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	<ul style="list-style-type: none"> "TCP" "TCPS" 	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Printer host name 	"TCP:192.168.192.168[local_printer]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The printer could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ When communication with the printer is no longer necessary, be sure to call [disconnect](#) to terminate it.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ The printer status is returned to the event registered with the Epos2Printer class.
For details, refer to Chapter 2 "Programming Flow" and Chapter 6 "To use the same printer from multiple mobile devices."
- ❑ The device ID is an arbitrary character string that is set when the peripheral device is registered to the TM printer (master).
For details, refer to the Technical Reference Guide of each printer.
- ❑ If you are using DHCP to assign the IP address of the printer, specify the MAC address or host name of the printer as the identifier.
- ❑ For TM-DT series, MAC address cannot be specified.

- ❑ If you specify the host name of the printer as the identifier, use in the environment where it can be found by the DNS server.
- ❑ When connecting with the printer using *Bluetooth*, complete pairing before calling the connect command.
- ❑ Depending on the project settings, *Bluetooth* communication may be disconnected if the application runs in the background.
- ❑ If the identifier is omitted in the USB connection, the OS connects with the USB device found first.
- ❑ If *Bluetooth* and USB are used simultaneously, priority is given to the USB.
- ❑ This API will succeed regardless of the connection status of the TM printer (master) and peripheral devices.
- ❑ Devices other than printers are exclusively locked.

disconnect

Ends communication with the printer.

Syntax

- (int) disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- ❑ If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

startMonitor

Enables printer status event notification.

Acquires and updates the printer status at the interval specified with the [interval](#) property and returns it to the callback function registered by [setStatusChangeEventDelegate](#).

Syntax

```
- (int) startMonitor;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Supplementary explanation

- ❑ Use this API after starting a communication with the printer (after executing the [connect](#) API).
- ❑ During ESC/POS control, any ASB information items which have been changed during the update interval specified by the [interval](#) property are reported.
During ePOS-Device XML control, the ASB information at the time of update is reported.

stopMonitor

Disables status events.

Syntax

```
- (int)stopMonitor;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

getStatus

Acquires the current status information.

Syntax

- (Epos2PrinterStatusInfo *)getStatus;

Return value

The current status is returned in the Epos2PrinterStatusInfo type.

The following status information is stored in the object as a member.

Printer status	Status	Description
connection: Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Status is unknown.
online: Online status	EPOS2_TRUE	Online
	EPOS2_FALSE	Offline
	EPOS2_UNKNOWN	Status is unknown.
coverOpen: Cover status	EPOS2_TRUE	Cover is open.
	EPOS2_FALSE	Cover is closed.
	EPOS2_UNKNOWN	Status is unknown.
paper: Paper status	EPOS2_PAPER_OK	Paper remains.
	EPOS2_PAPER_NEAR_END	Paper is running out.
	EPOS2_PAPER_EMPTY	Paper has run out.
	EPOS2_UNKNOWN	Status is unknown.
paperFeed: Paper feed	EPOS2_TRUE	Paper feed in progress
	EPOS2_FALSE	Stopped
	EPOS2_UNKNOWN	Status is unknown.
panelSwitch: Panel switch (Feed button) status	EPOS2_SWITCH_ON	Pressed
	EPOS2_SWITCH_OFF	Not pressed
	EPOS2_UNKNOWN	Status is unknown.
drawer: Offline status due to the battery level (Mobile models)	EPOS2_DRAWER_HIGH	High
	EPOS2_DRAWER_LOW	Low
	EPOS2_UNKNOWN	Status is unknown.
drawer: Drawer kick connector pin No.3 sta- tus (except for the Mobile models)	EPOS2_DRAWER_HIGH	High
	EPOS2_DRAWER_LOW	Low
	EPOS2_UNKNOWN	Status is unknown.

Printer status	Status	Description
errorStatus: Error status	EPOS2_NO_ERR	Normal
	EPOS2_MECHANICAL_ERR	Mechanical error occurred.
	EPOS2_AUTOCUTTER_ERR	Auto cutter error occurred.
	EPOS2_UNRECOVER_ERR	Unrecoverable error occurred.
	EPOS2_AUTORECOVER_ERR	Automatic recovery error occurred.
	EPOS2_UNKNOWN	Status is unknown.
autoRecoverError: Automatic recovery error status	EPOS2_HEAD_OVERHEAT	Head overheat error
	EPOS2_MOTOR_OVERHEAT	Motor driver IC overheat error
	EPOS2_BATTERY_OVERHEAT	Battery overheat error
	EPOS2_WRONG_PAPER	Paper error
	EPOS2_COVER_OPEN	Cover is open.
	EPOS2_UNKNOWN	Unknown status
buzzer: Buzzer sound status	EPOS2_TRUE	Sounding (Applicable printer only)
	EPOS2_FALSE	Stopped (Applicable printer only)
	EPOS2_UNKNOWN	Status is unknown.
adapter: AC adapter connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected
	EPOS2_UNKNOWN	Status is unknown.
batteryLevel: Remaining battery capacity	EPOS2_BATTERY_LEVEL_6	Remaining battery capacity 6
	EPOS2_BATTERY_LEVEL_5	Remaining battery capacity 5
	EPOS2_BATTERY_LEVEL_4	Remaining battery capacity 4
	EPOS2_BATTERY_LEVEL_3	Remaining battery capacity 3
	EPOS2_BATTERY_LEVEL_2	Remaining battery capacity 2
	EPOS2_BATTERY_LEVEL_1	Remaining battery capacity 1 (almost run out)
	EPOS2_BATTERY_LEVEL_0	Remaining battery capacity 0 (run out)
	EPOS2_UNKNOWN	Status is unknown.

Supplementary explanation

- ❑ If this API is called while communication is not available, printer states other than "connection" will be set to "EPOS2_UNKNOWN."
- ❑ The status object is set to the status at the timing of execution of this API and will not be updated.
- ❑ If this function is executed within a callback function, nil will be returned.

sendData

Sends the print command.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Make sure not to use this API repeatedly without getting the result in the callback.

This API sends data buffered by an add-type API (e.g., [addText](#)).

Syntax

- (int) sendData:(long)timeout;

Parameter

timeout

Specifies the timeout period before completion of printing in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ILLEGAL	The control commands have not been buffered. This API was called while no communication had been started.

Supplementary explanation

For Bluetooth connection, the offline status may not be detected and a timeout error may occur.

Refer to Chapter 6 "To use the same printer from multiple mobile devices" for details.

beginTransaction

Starts a transaction.

A transaction represents a single printing task such as printing a single sheet of receipt or coupon.

After this API is called, data until the transaction is terminated by [endTransaction](#) will be regarded as a single printing task.

Syntax

- (int) beginTransaction;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started. Another transaction had been already started by this function.
EPOS2_ERR_FAILURE	An unknown error occurred.

endTransaction

Ends a transaction.

A transaction represents a single printing task such as printing a single sheet of receipt or coupon.

After [beginTransaction](#) is called, data until the transaction is terminated by this API will be regarded as a single printing task.

Syntax

- (int) endTransaction;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started. This API was called while no transaction had been started.
EPOS2_ERR_FAILURE	An unknown error occurred.

requestPrintJobStatus

Acquires the print result for the specified print job ID.

Syntax

```
- (int) requestPrintJobStatus:(NSString*)printJobId;
```

Parameter

printJobId

Specifies the print job ID.

Alphanumeric characters, underscore, hyphen, and period in 1 to 30 digits can be used.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_CONNECT	Communication error
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Supplementary explanation

- ❑ The result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.
- ❑ When multiple print processes were performed with the same print job ID, the status of the latest print job is acquired.

clearCommandBuffer

Clears the command buffer.

Syntax

```
- (int) clearCommandBuffer;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.

addTextAlign

Adds text alignment setting to the command buffer.

Syntax

```
- (int) addTextAlign:(int)align;
```

Parameter

align

Specifies alignment.

Value	Description
EPOS2_ALIGN_LEFT (default)	Left alignment
EPOS2_ALIGN_CENTER	Center alignment
EPOS2_ALIGN_RIGHT	Right alignment
EPOS2_PARAM_DEFAULT	Specifies the default value (left alignment).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- Use this API at the "beginning of a line." If this API is used elsewhere, it will be ignored.
- Setting of this API is also applied to the barcode/2D symbol.
- When specifying alignment in the page mode, use [addPagePosition](#) API instead of this API.

addLineSpace

Adds line spacing setting to the command buffer.

Syntax

- (int) addLineSpace:(long)linespc;

Parameter

linespc

Specifies the line spacing (in dots).

Value	Description
Integer from 0 to 255	Line spacing (in dots)

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

If the line spacing for a single line is set smaller than the print character size, paper may be fed for a larger quantity than the set amount to ensure proper printing.

addTextRotate

Adds text rotation setting to the command buffer.

Syntax

```
- (int) addTextRotate:(int)rotate;
```

Parameter

rotate

Enables or disables text rotation.

Value	Description
EPOS2_TRUE	Specifies text rotation.
EPOS2_FALSE (default)	Disables text rotation.
EPOS2_PARAM_DEFAULT	Specifies the default value (text rotation disabled).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ Use this API at the "beginning of a line." If this API is used elsewhere, it will be ignored.
- ❑ Setting of this API is also applied to the barcode/2D symbol.
- ❑ When specifying text rotation in the page mode, use [addPageDirection](#) API instead of this API.

addText

Adds a character print command to the command buffer.

Syntax

```
- (int) addText:(NSString *)data;
```

Parameter

data

Specifies the string to print.

Use the following escape sequences for a horizontal tab and line feed.

String	Description
\t	Horizontal tab (HT)
\n	Line feed (LF)
\\\	Back slash

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- To print data other than text after printing text, feed a line or page.
A line which does not end with a line feed will be discarded as unfixed data by the next [sendData](#).
- In the page mode, text is printed from the current print position with the base line dot of the characters as the standard.

addTextLang

Adds language setting to the command buffer.

A text string specified by the [addText](#) API is encoded according to the language specified by this API.

Syntax

```
- (int) addTextLang:(int)lang;
```

Parameter

lang

Specifies the target language.

Value	Description
EPOS2_LANG_EN (default)	English (ANK specification)
EPOS2_LANG_JA	Japanese
EPOS2_LANG_ZH_CN	Simplified Chinese
EPOS2_LANG_ZH_TW	Traditional Chinese
EPOS2_LANG_KO	Korean
EPOS2_LANG_TH	Thai (South Asian specification)
EPOS2_LANG_VI	Vietnamese (South Asian specification)
EPOS2_LANG_MULTI	Multiple languages (UTF-8)
EPOS2_PARAM_DEFAULT	Specifies the default value (English).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API is called before the [addText](#) API.
- ❑ Available languages differ depending on character specifications of the printer. For details, see Technical Reference Guide of the printer.

addTextFont

Adds character font setting to the command buffer.

Syntax

```
- (int) addTextFont:(int)font;
```

Parameter

font

Specifies the font.

Value	Description
EPOS2_FONT_A (default)	Font A
EPOS2_FONT_B	Font B
EPOS2_FONT_C	Font C
EPOS2_FONT_D	Font D
EPOS2_FONT_E	Font E
EPOS2_PARAM_DEFAULT	Specifies the default value (font A).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addTextSmooth

Adds smoothing setting to the command buffer.

Syntax

- (int) addTextSmooth:(int)smooth;

Parameter

smooth

Enables or disables smoothing.

Value	Description
EPOS2_TRUE	Enables smoothing.
EPOS2_FALSE (default)	Disables smoothing.
EPOS2_PARAM_DEFAULT	Specifies the default value (smoothing disabled).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addTextSize

Adds character scaling factor setting to the command buffer.

Syntax

```
- (int) addTextSize:(long)width height:(long)height;
```

Parameter

width

Specifies the horizontal scaling of characters.

Value	Description
Integer from 1 to 8	Specifies the horizontal scaling factor rate (default: 1).
EPOS2_PARAM_DEFAULT	Specifies the default value (1).
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

height

Specifies the vertical scaling of characters.

Value	Description
Integer from 1 to 8	Specifies the vertical scaling factor rate (default: 1).
EPOS2_PARAM_DEFAULT	Specifies the default value (1).
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ If all the parameters are set to "EPOS2_PARAM_UNSPECIFIED," EPOS2_ERR_PARAM will be returned.
- ❑ For slip, endorsement, or validation printing, an integer from 1 to 2 can be set for the width and height.

addTextStyle

Adds character style setting to the command buffer.

Syntax

```
- (int) addTextStyle:(int)reverse ul:(int)ul em:(int)em
color:(int)color;
```

Parameter

reverse

Enables or disables the reverse style.

Value	Description
EPOS2_TRUE	Enables the reverse style.
EPOS2_FALSE (default)	Disables the reverse style.
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.
EPOS2_PARAM_DEFAULT	Specifies the default value (reverse style disabled).

ul

Enables or disables the underscore style.

Value	Description
EPOS2_TRUE	Enables the underscore style.
EPOS2_FALSE (default)	Disables the underscore style.
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.
EPOS2_PARAM_DEFAULT	Specifies the default value (underscore style disabled).

em

Enables or disables the bold style.

Value	Description
EPOS2_TRUE	Enables the bold style.
EPOS2_FALSE (default)	Disables the bold style.
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.
EPOS2_PARAM_DEFAULT	Specifies the default value (bold style disabled).

color

Specifies the color.

Value	Description
EPOS2_COLOR_NONE	No printing

Value	Description
EPOS2_COLOR_1 (default)	First color
EPOS2_COLOR_2	Second color
EPOS2_COLOR_3	Third color
EPOS2_COLOR_4	Fourth color
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.
EPOS2_PARAM_DEFAULT	Specifies the default value (first color).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

If all the parameters are set to "EPOS2_PARAM_UNSPECIFIED," EPOS2_ERR_PARAM will be returned.

addHPosition

Adds horizontal character print start position to the command buffer.

Syntax

- (int) addHPosition:(long)x;

Parameter

x

Specifies the horizontal print start position in dots.

Value	Description
Integer from 0 to 65535	Horizontal print start position (in dots)

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ Calling this API causes the printer positioned at "other than the beginning of the line." This is also true even if 0 is set to "x."
- ❑ After executing this API, [addTextAlign](#) and [addTextRotate](#) cannot be used.

addFeedUnit

Adds a paper-feed-by-dot command to the command buffer.

Syntax

- (int) addFeedUnit:(long)unit;

Parameter

unit

Specifies the paper feed amount (in dots).

Value	Description
Integer from 0 to 255	Paper feed amount (in dots)

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

Calling this API causes the printer positioned at "the beginning of the line."

addFeedLine

Adds a paper-feed-by-line command to the command buffer.

Syntax

- (int) addFeedLine:(long)line;

Parameter

line

Specifies the paper feed amount (in lines).

Value	Description
Integer from 0 to 255	Paper feed amount (in lines)

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

Calling this API causes the printer positioned at "the beginning of the line."

addImage

Adds a raster image print command to the command buffer.

Prints UllImage class graphics.

A specified area of UllImage class graphics is binarized according to the mode, halftone, and brightness parameters and converted into a raster image data.

The converted image is compressed or not compressed before transmission according to the compress parameter value.

One pixel of an image corresponds to one dot of the printer. When a transparent color is contained in the image, the background of the image is assumed to be white.

Syntax

```
- (int) addImage:(UIImage *)data x:(long)x y:(long)y
width:(long)width height:(long)height color:(int)color
mode:(int)mode halftone:(int)halftone
brightness:(double)brightness compress:(int)compress;
```

Parameter

data

Specifies an instance of the UllImage class.

x

Specifies the horizontal start position of the print area (in pixels).

Value	Description
Integer from 0 to 65534	Horizontal start position of the print area (in pixels)

y

Specifies the vertical start position of the print area (in pixels).

Value	Description
Integer from 0 to 65534	Vertical start position of the print area (in pixels)

width

Specifies the width of the print area (in pixels).

Value	Description
Integer from 1 to 65535	Width of the print area (in pixels).

height

Specifies the height of the print area (in pixels).

Value	Description
Integer from 1 to 65535	Height of the print area (in pixels).

color

Specifies the color.

Value	Description
EPOS2_COLOR_NONE	No printing
EPOS2_COLOR_1	First color
EPOS2_COLOR_2	Second color
EPOS2_COLOR_3	Third color
EPOS2_COLOR_4	Fourth color
EPOS2_PARAM_DEFAULT	Specifies the default value (first color).

mode

Specifies the color mode.

Value	Description
EPOS2_MODE_MONO	Monochrome (2 scales)
EPOS2_MODE_GRAY16	Multi-gradation (16 scales)
EPOS2_MODE_MONO_HIGH_DENSITY	Monochrome (2 scales), double density
EPOS2_PARAM_DEFAULT	Specifies the default (monochrome (2 scales)).

halftone

Specifies the halftone processing method.

Value	Description
EPOS2_HALFTONE_DITHER	Dithering (appropriate for printing graphics only)
EPOS2_HALFTONE_ERROR_DIFFUSION	Error diffusion (appropriate for printing text and graphics)
EPOS2_HALFTONE_THRESHOLD	Threshold (appropriate for printing text only)
EPOS2_PARAM_DEFAULT	Specifies the default (dithering).

Effective for the monochrome (2 scales) color mode only.

brightness

Specifies the brightness compensation value.

Value	Description
Real number from 0.1 to 10.0	Brightness compensation (gamma correction) value
EPOS2_PARAM_DEFAULT	Default (1.0)

When a value other than 1.0 is specified for the brightness compensation value, processing gets slower.

compress

Enables or disables compression.

Compressing print images can prevent white banding or streaks from occurring on printed images.

This works well when connecting with the printer using *Bluetooth*.

Value	Description
EPOS2_COMPRESS_DEFLATE	Compresses the image.
EPOS2_COMPRESS_NONE	Does not compress the image.
EPOS2_COMPRESS_AUTO	Automatically chooses to or not to compress the image.
EPOS2_PARAM_DEFAULT	Default (automatically chooses to or not to compress the image internally)

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ If the area specified by x/y and width/height does not fit within the image size specified by data parameter, EPOS2_ERR_PARAM will be returned.
- ❑ Compress can only be specified with the *Bluetooth* model of the following printers. For other printers, specify EPOS2_COMPRESS_AUTO.

Model	Firmware version
TM-m10	No restriction
TM-m30	No restriction
TM-m30II/TM-m30II-H	No restriction
TM-P20	No restriction
TM-P60II (Receipt)	5.14 ESC/POS or later
TM-P60II (Peeler)	6.14 ESC/POS or later
TM-P80	1.02 ESC/POS or later
TM-P80AC	2.01 ESC/POS or later
TM-T20II	No restriction
TM-T20III	No restriction
TM-T70II	No restriction

Model	Firmware version
TM-T82III	No restriction
TM-T88V	No restriction
TM-T88VI	No restriction

- Printing may get slower if a transparent image is printed.
- The multi-gradation and the compression of image data are not supported in the page mode. If you set those in the page mode, nothing will be printed.
- Set an image size appropriate for the printer. If you set to print a large image, the API commands will be succeeded, but the printer may print nothing.

addLogo

Adds a NV logo print command to the command buffer.
Prints the logo registered in the NV memory of the printer.

Syntax

- (int) addLogo:(long)key1 key2:(long)key2;

Parameter

key1

Specifies the key code 1 of the NV logo.

Value	Description
Integer from 1 to 255	Key code 1 of the NV logo

key2

Specifies the key code 2 of the NV logo.

Value	Description
Integer from 1 to 255	Key code 2 of the NV logo
EPOS2_PARAM_DEFAULT	Specify this for the printers that do not support key code 2.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ For how to register the NV logo, refer to the Technical Reference Guide of the printer.
- ❑ The page mode does not support multi-gradation printing. Multi-gradation graphics can be printed in the standard mode only.
- ❑ The NV logo specified by this API is printed with the color setting specified by [addTextStyle](#) in advance and stored in the buffer.
- ❑ TM-U220 and TM-U330 use only the key1 parameter, however, you need to set "Printer.PARAM_DEFAULT" as the key2 parameter for those printers since an empty key2 parameter causes an error.

addBarcode

Adds a barcode print command to the command buffer.

Syntax

```
- (int) addBarcode:(NSString *)data type:(int)type hri:(int)hri
font:(int)font width:(long)width height:(long)height;
```

Parameter

data

Specifies barcode data as a text string.

Specify a string in accordance with the standard of the barcode specified in type.

Type	Description
UPC-A	If an 11-digit figure is specified, the check digit is automatically appended. If a 12-digit figure is specified, the 12th digit is used as the check digit but verification is not performed.
UPC-E	Specify 0 in the first digit. Specify the manufacturer code in the 2nd to 6th digits. Specify the item code in right justification in the 7th to 11th digits. The number of digits of the item code depends on the manufacturer code. Specify 0 in each unused data. If an 11-digit figure is specified, the check digit is automatically appended. If a 12-digit figure is specified, the 12th digit is used as the check digit but verification is not performed.
EAN13	If an 12-digit figure is specified, the check digit is automatically appended. If a 13-digit figure is specified, the 13th digit is used as the check digit but verification is not performed.
JAN13	
EAN8	If an 7-digit figure is specified, the check digit is automatically appended. If an 8-digit figure is specified, the 8th digit is used as the check digit but verification is not performed.
JAN8	
CODE39	If the first character is * , this character is processed as the start character. If it is not , the start character is automatically added.
ITF	The start and stop codes are automatically added. Addition and verification of the check digit are not performed.
CODABAR	Specify the start character ((A to D, a to d). Specify the stop character ((A to D, a to d). Addition and verification of the check digit are not performed.
CODE93	The start and stop characters are automatically added. The check digit is automatically calculated and added.

Type	Description
CODE128	<p>Specify the start character (CODE A, CODE B, CODE C). The stop character is automatically added. The check digit is automatically calculated and added. To encode the following characters, specify the corresponding 2-digit code starting with { :</p> <ul style="list-style-type: none"> • FNC1: {1 • FNC2: {2 • FNC3: {3 • FNC4: {4 • CODE A: {A • CODE B: {B • CODE C: {C • SHIFT: {S • { : {{ <p>When specifying CODE C, specify the barcode data as the control code of the escape sequence.</p>
GS1-128	<p>The start character, FNC1, check digit, and stop characters are automatically added. However, FNC1 used as a data separator is not added. To automatically calculate and add the application ID (AI) and the following check digit, specify "*" at the check digit position. The application ID (AI) can be put in parentheses. The parentheses are used as print characters for HRI and not encoded as data. A blank space can be inserted between the application ID (AI) and data. The blank space is used as print characters for HRI and not encoded as data. To encode the following characters, specify the corresponding 2-digit code starting with { :</p> <ul style="list-style-type: none"> • FNC1: {1 • FNC3: {3 • { : {{ • } : }}) • FNC1: {1 • { : {{
GS1 DataBar Omnidirectional	Specify a 13-digit product ID (GTIN) excluding the application ID (AI) and check digit.
GS1 DataBar Truncated	
GS1 DataBar Limited	
GS1 DataBar Expanded	<p>The application ID (AI) can be put in parentheses. The parentheses are used as print characters for HRI and not encoded as data. To encode the following characters, specify the corresponding 2-digit code starting with { :</p> <ul style="list-style-type: none"> • FNC1: {1 • { : {{ • } : }})

When specifying binary data which cannot be represented as a string, use the following escape sequences.

String	Description
\xnn	Control code (set nn in hexadecimal)
\\"	Back slash

type

Specifies the barcode type.

Value	Description
EPOS2_BARCODE_UPC_A	UPC-A
EPOS2_BARCODE_UPC_E	UPC-E
EPOS2_BARCODE_EAN13	EAN13
EPOS2_BARCODE_JAN13	JAN13
EPOS2_BARCODE_EAN8	EAN8
EPOS2_BARCODE_JAN8	JAN8
EPOS2_BARCODE_CODE39	CODE39
EPOS2_BARCODE_ITF	ITF
EPOS2_BARCODE_CODABAR	CODABAR
EPOS2_BARCODE_CODE93	CODE93
EPOS2_BARCODE_CODE128	CODE128
EPOS2_BARCODE_GS1_128	GS1-128
EPOS2_BARCODE_GS1_DATABAR_OMNIDIRECTIONAL	GS1 DataBar Omnidirectional
EPOS2_BARCODE_GS1_DATABAR_TRUNCATED	GS1 DataBar Truncated
EPOS2_BARCODE_GS1_DATABAR_LIMITED	GS1 DataBar Limited
EPOS2_BARCODE_GS1_DATABAR_EXPANDED	GS1 DataBar Expanded

hri

Specifies the HRI position.

Value	Description
EPOS2_HRI_NONE (default)	No printing.
EPOS2_HRI ABOVE	Above the barcode
EPOS2_HRI BELOW	Below the barcode
EPOS2_HRI BOTH	Both above and below the barcode
EPOS2_PARAM_DEFAULT	Specifies the default value (no printing).
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

font

Specifies the HRI font.

Value	Description
EPOS2_FONT_A (default)	Font A
EPOS2_FONT_B	Font B
EPOS2_FONT_C	Font C
EPOS2_FONT_D	Font D
EPOS2_FONT_E	Font E
EPOS2_PARAM_DEFAULT	Specifies the default value (font A).
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

width

Specifies the width of a single module in dots.

Value	Description
Integer from 2 to 6	Width of a single module (in dots)
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

height

Specifies the height of the barcode in dots.

Value	Description
Integer from 1 to 255	Height of the barcode (in dots)
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- Use this API at the "beginning of a line."
- When the barcode data specified in data does not conform to the barcode standard specified in type, an error will not be returned in the return value and the barcode will not be printed.

addSymbol

Adds a 2D symbol print command to the command buffer.

Syntax

```
- (int) addSymbol:(NSString *)data type:(int)type
level:(int)level width:(long)width height:(long)height
size:(long)size;
```

Parameter

data

Specifies 2D symbol data as a text string.

Specify a string in accordance with the standard of the 2D symbol specified in type.

Type	Description
Standard PDF417	Converts the string into UTF-8, processes the escape sequence(s), and encodes the data.
Truncated PDF417	The maximum number of code words in the data area is 928, the maximum number of code words in a single stage is 30, and the maximum number of stages is 90.
QR Code Model 1	Converts the string into JIS, processes the escape sequence(s), and encodes the data by choosing the data type from the following:
QR Code Model 2	<ul style="list-style-type: none"> • Figure: 0 to 9 • Alphanumeric: 0 to 9, A to Z, blank space, \$, %, *, +, -, ., /, : • Kanji: Characters which can be represented with Shift JIS codes • 8-bit byte data: 0x00 to 0xff
QR Code Micro	Converts the string into UTF-8, processes the escape sequence(s), and encodes the data.
MaxiCode Mode 2	In Mode 2 or 3, if the first data is J]>\x1e01\x1ddy ("yy" is a 2-digit figure), this is processed as the message header and the second and succeeding data sequence is processed as the primary message.
MaxiCode Mode 3	Otherwise, the primary message starts with the fist data.
MaxiCode Mode 4	For the mode 2, specify the primary message in the following format:
MaxiCode Mode 5	<ul style="list-style-type: none"> • Zip code (1- to 9-digit figure) GS:(\x1d) • ISO country code (1- to 3-digit figure) GS:(\x1d) • Service class code (1- to 3-digit figure)
MaxiCode Mode 6	For the mode 3, specify the primary message in the following format:
GS1 DataBar Stacked	<ul style="list-style-type: none"> • Zip code (data which can be converted with 1 to 6 code sets A) GS (\x1d) • ISO country code (1- to 3-digit figure) GS (\x1d) • Service class code (1- to 3-digit figure)
GS1 DataBar Stacked Omnidirectional	Converts the string into UTF-8, processes the escape sequence(s), and encodes the data. Specify a 13-digit product ID (GTIN) excluding the application ID (AI) and check digit.

Type	Description
GS1 DataBar Expanded Stacked	<p>Converts the string into UTF-8, processes the escape sequence(s), and encodes the data.</p> <p>The application ID (AI) can be put in parentheses.</p> <p>The parentheses are used as print characters for HRI and not encoded as data.</p> <p>To encode the following characters, specify the corresponding 2-digit code starting with { :</p> <ul style="list-style-type: none"> • FNC1: {1 • (: { (•): })
Aztec Code	Converts the string into UTF-8, processes the escape sequence(s), and encodes the data.
DataMatrix	Converts the string into UTF-8, processes the escape sequence(s), and encodes the data.

When specifying binary data which cannot be represented as a string, use the following escape sequences.

String	Description
\xnn	Control code (set nn in hexadecimal)
\\	Back slash

type

Specifies the 2D symbol type.

Value	Description
EPOS2_SYMBOL_PDF417_STANDARD	Standard PDF417
EPOS2_SYMBOL_PDF417_TRUNCATED	Truncated PDF417
EPOS2_SYMBOL_QRCODE_MODEL_1	QR Code Model 1
EPOS2_SYMBOL_QRCODE_MODEL_2	QR Code Model 2
EPOS2_SYMBOL_QRCODE_MICRO	QR Code Micro
EPOS2_SYMBOL_MAXICODE_MODE_2	MaxiCode Mode 2
EPOS2_SYMBOL_MAXICODE_MODE_3	MaxiCode Mode 3
EPOS2_SYMBOL_MAXICODE_MODE_4	MaxiCode Mode 4
EPOS2_SYMBOL_MAXICODE_MODE_5	MaxiCode Mode 5
EPOS2_SYMBOL_MAXICODE_MODE_6	MaxiCode Mode 6
EPOS2_SYMBOL_GS1_DATABAR_STACKED	GS1 DataBar Stacked
EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL	GS1 DataBar Stacked Omnidirectional
EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED	GS1 DataBar Expanded Stacked
EPOS2_SYMBOL_AZTECCODE_FULLRANGE	Aztec Code Full-Range mode

Value	Description
EPOS2_SYMBOL_AZTECCODE_COMPACT	Aztec Code Compact mode
EPOS2_SYMBOL_DATAMATRIX_SQUARE	DataMatrix Square
EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8	DataMatrix Rectangle, 8 lines
EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12	DataMatrix Rectangle, 12 lines
EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16	DataMatrix Rectangle, 16 lines

level

Specifies the error correction level.

Specify a value in accordance with the 2D symbol type.

Specify "EPOS2_PARAM_DEFAULT" for MaxiCode, 2D GS1 DataBar, and DataMatrix.

PDF417

Value	Description
EPOS2_LEVEL_0	Error correction level 0
EPOS2_LEVEL_1	Error correction level 1
EPOS2_LEVEL_2	Error correction level 2
EPOS2_LEVEL_3	Error correction level 3
EPOS2_LEVEL_4	Error correction level 4
EPOS2_LEVEL_5	Error correction level 5
EPOS2_LEVEL_6	Error correction level 6
EPOS2_LEVEL_7	Error correction level 7
EPOS2_LEVEL_8	Error correction level 8
EPOS2_PARAM_DEFAULT	Specifies the default value (Error correction level 1).
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

QR Code

Value	Description
EPOS2_LEVEL_L	Error correction level L
EPOS2_LEVEL_M	Error correction level M
EPOS2_LEVEL_Q	Error correction level Q
EPOS2_LEVEL_H	Error correction level H
EPOS2_PARAM_DEFAULT	Specifies the default value (Error correction level M).
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

Aztec Code

Value	Description
Integer from 5 to 95	Error correction level (in percents)
EPOS2_PARAM_DEFAULT	Specifies the default value (Error correction level 23).
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

width

Specifies the module width.

An integer from 1 to 255 can be specified.

When "EPOS2_PARAM_UNSPECIFIED" is specified, the current setting is retained.

The range differs depending on the 2D symbol type.

2D symbol type	Valid value	Default value
PDF417	2 to 8	3
QR Code	3 to 16	3
MaxiCode	1 to 255 (Ignored)	
2D GS1 DataBar	2 to 8	2
Aztec Code	2 to 16	3
DataMatrix	2 to 16	3

height

Specifies the module height.

An integer from 1 to 255 can be specified.

When "EPOS2_PARAM_UNSPECIFIED" is specified, the current setting is retained.

The range differs depending on the 2D symbol type.

2D symbol type	Valid value	Default value
PDF417	2 to 8 (Scaling factor for width)	3
QR Code		
MaxiCode		
2D GS1 DataBar	1 to 255 (Ignored)	
Aztec Code		
DataMatrix		

QR Code, MaxiCode, 2D GS1 DataBar, Aztec Code, and DataMatrix are ignored.

size

Specifies the maximum size of the 2D symbol.

An integer from 0 to 65535 can be specified.

When "EPOS2_PARAM_UNSPECIFIED" is specified, the current setting is retained.

The range differs depending on the 2D symbol type.

2D symbol type		Default value	Description
PDF417		0 (auto)	Specifies the number of code words per stage.
QR Code		0 to 65535 (Ignored)	
MaxiCode		0 to 65535 (Ignored)	
2D GS1 DataBar	Expanded Stacked	0 (auto)	Specifies the maximum width of the 2D symbol (106 or more).
	Other	0 to 65535 (Ignored)	
Aztec Code		0 to 65535 (Ignored)	
DataMatrix		0 to 65535 (Ignored)	

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ Use this API at the "beginning of a line."
- ❑ When the 2D symbol data specified in data does not conform to the 2D symbol type specified in type, an error will not be returned in the return value and the 2D symbol will not be printed.
- ❑ During ESC/POS control, specifying values outside the valid ranges for the width and height parameters results in default value printing.
- ❑ During ePOS-Device XML control, specifying values outside the valid ranges for the width and height parameters causes [sendData](#) to return EPOS2_ERR_FAILURE.

addHLine

Adds a horizontal ruled line print command to the command buffer.

Draws a horizontal ruled line.

Syntax

```
- (int) addHLine:(long)x1 x2:(long)x2 lineStyle:(int)lineStyle;
```

Parameter

x1

Specifies the start position to draw a horizontal ruled line (in dots).

Value	Description
Integer from 0 to 65535	Start position to draw a horizontal ruled line (in dots)

x2

Specifies the end position to draw a horizontal ruled line (in dots).

Value	Description
Integer from 0 to 65535	End position to draw a horizontal ruled line (in dots)

lineStyle

Specifies the ruled line type.

Value	Description
EPOS2_LINE_THIN	Solid line: Thin
EPOS2_LINE_MEDIUM	Solid line: Medium
EPOS2_LINE_THICK	Solid line: Thick
EPOS2_LINE_THIN_DOUBLE	Double line: Thin
EPOS2_LINE_MEDIUM_DOUBLE	Double line: Medium
EPOS2_LINE_THICK_DOUBLE	Double line: Thick
EPOS2_PARAM_DEFAULT	Specifies the default (solid line: thin).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API cannot be used in the page mode.
- ❑ Use [addPageLine](#) to draw a horizontal ruled line in the page mode.

addVLineBegin

Adds a command to start drawing a vertical ruled line to the command buffer.

Starts drawing a vertical line.

Syntax

```
- (int) addVLineBegin:(long)x lineStyle:(int) lineStyle  
lineId:(int *)lineId;
```

Parameter

x1

Specifies the start position to draw a vertical ruled line (in dots).

Value	Description
Integer from 0 to 65535	Start position to draw a vertical ruled line (in dots)

lineStyle

Specifies the ruled line type.

Value	Description
EPOS2_LINE_THIN	Solid line: Thin
EPOS2_LINE_MEDIUM	Solid line: Medium
EPOS2_LINE_THICK	Solid line: Thick
EPOS2_LINE_THIN_DOUBLE	Double line: Thin
EPOS2_LINE_MEDIUM_DOUBLE	Double line: Medium
EPOS2_LINE_THICK_DOUBLE	Double line: Thick
EPOS2_PARAM_DEFAULT	Specifies the default (solid line: thin).

lineId

Returns the ID of the ruled line printed by this API.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- This API cannot be used in the page mode.

- ❑ Use [addPageLine](#) to draw a vertical ruled line in the page mode.
- ❑ This API draws a vertical ruled line until stopped by [addVLineEnd](#).
- ❑ Use this API with the [addVLineEnd](#) API.

addVLineEnd

Adds a command to stop drawing a vertical ruled line to the command buffer.
Ends drawing a vertical line.

Syntax

- (int) addVLineEnd:(int)lineId;

Parameter

lineId

Specifies the line ID acquired by [addVLineBegin](#).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API cannot be used in the page mode.
- ❑ Use [addPageLine](#) to draw a vertical ruled line in the page mode.
- ❑ Drawing of the vertical ruled line continues until stopped by this API.
- ❑ Use this API with the [addVLineBegin](#) API.

addPageBegin

Adds a page mode start command to the command buffer.

Starts processing in the page mode.

Syntax

```
- (int) addPageBegin;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ The page mode does not support multi-gradation printing.
- ❑ Use this API with the [addPageEnd](#) API.

addPageEnd

Adds a page mode end command to the command buffer.
Ends processing in the page mode.

Syntax

```
- (int) addPageEnd;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ The page mode does not support multi-gradation printing.
- ❑ Use this API with the [addPageBegin](#) API.

addPageArea

Adds page mode print area setting to the command buffer.

Specifies the page mode print area (coordinates). Following this API, call an [addText](#) API to specify print data such as the API.

Syntax

```
- (int) addPageArea:(long)x y:(long)y width:(long)width
height:(long)height;
```

Parameter

x

Specifies the horizontal origin (in dots).

Value	Description
Integer from 0 to 65535	Horizontal origin (in dots)

"0" specifies the leftmost position of the printable area of the printer.

y

Specifies the vertical origin (in dots).

Value	Description
Integer from 0 to 65535	Vertical origin (in dots)

"0" specifies the position where paper is not fed.

width

Specifies the width of a print area (in dots).

Value	Description
Integer from 1 to 65535	Width of a print area (in dots)

height

Specifies the height of a print area (in dots).

Value	Description
Integer from 1 to 65535	Height of a print area (in dots)

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.

Error status	Description
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ Define the print area in accordance with the contents to print. If the print data does not fit within the print area, the printed contents will be truncated.
- ❑ Use this API between the [addPageBegin](#) and [addPageEnd](#) APIs.
- ❑ Specify the width and height of the print area in accordance with the print direction setting. Otherwise the print data may be truncated. The print direction is specified by [addPageDirection](#).
- ❑ This API does not work in the standard mode.

addPageDirection

Adds page mode print direction setting to the command buffer.

Specifies the print direction in the page mode.

Syntax

```
- (int) addPageDirection:(int) direction;
```

Parameter

direction

Specifies the print direction in the page mode.

Value	Description
EPOS2_DIRECTION_LEFT_TO_RIGHT (default)	Do not rotate data. (Data is printed rightward from the upper-left position.)
EPOS2_DIRECTION_BOTTOM_TO_TOP	Rotate data counterclockwise by 90 degrees. (Data is printed upward from the lower-left position.)
EPOS2_DIRECTION_RIGHT_TO_LEFT	Rotate data by 180 degrees. (Data is printed leftward from the lower-right position.)
EPOS2_DIRECTION_TOP_TO_BOTTOM	Rotate data clockwise by 90 degrees. (Data is printed downward from the upper-right position.)
EPOS2_PARAM_DEFAULT	Specifies the default value (no rotation).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API does not work in the standard mode.
- ❑ Use this API between the [addPageBegin](#) and [addPageEnd](#) APIs.

addPagePosition

Adds print position setting within the print area in the page mode to the command buffer.

Specifies the print start position (coordinates) within the area specified by the [addPageArea](#) API.

Syntax

```
- (int) addPagePosition:(long)x y:(long)y;
```

Parameter

x

Specifies the horizontal print position (in dots).

Value	Description
Integer from 0 to 65535	Horizontal print position (in dots)
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

y

Specifies the vertical print position (in dots).

Value	Description
Integer from 0 to 65535	Vertical print position (in dots)
EPOS2_PARAM_UNSPECIFIED	<Obsolete> Not specify.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API does not work in the standard mode.
- ❑ Use this API between the [addPageBegin](#) and [addPageEnd](#) APIs.
- ❑ Specify the print start position (coordinates) in accordance with the contents to print. See below.

Print data	Specification method
When printing a text string	Specify the leftmost position of the baseline for the first character. This can be omitted when printing data with the standard size in left justification. When printing a double-height character, set y to 42 or larger.

Print data	Specification method
When printing a barcode	Specify the lower-left position of the symbol. Specify the height of the barcode in y.
When printing graphics/logo	Specify the lower-left position of the graphic data. Specify the height of the graphic data in y.
When printing a 2D symbol	Specify the upper-left position of the symbol. This can be omitted when printing from the upper-left position.

□ If all the parameters are set to "EPOS2_PARAM_UNSPECIFIED," EPOS2_ERR_PARAM will be returned.

addPageLine

Adds a page mode line draw command to the command buffer.

Draws a line in the page mode.

Syntax

```
- (int) addPageLine:(long)x1 y1:(long)y1 x2:(long)x2
y2:(long)y2 lineStyle:(int) lineStyle;
```

Parameter

x1

Specifies the horizontal position to start drawing (in dots).

Value	Description
Integer from 0 to 65535	Horizontal position to start drawing (in dots)

y1

Specifies the vertical position to start drawing (in dots).

Value	Description
Integer from 0 to 65535	Vertical position to start drawing (in dots)

x2

Specifies the horizontal position to end drawing (in dots).

Value	Description
Integer from 0 to 65535	Horizontal position to end drawing (in dots)

y2

Specifies the vertical position to end drawing (in dots).

Value	Description
Integer from 0 to 65535	Vertical position to end drawing (in dots)

lineStyle

Specifies the ruled line type.

Value	Description
EPOS2_LINE_THIN	Solid line: Thin
EPOS2_LINE_MEDIUM	Solid line: Medium
EPOS2_LINE_THICK	Solid line: Thick
EPOS2_LINE_THIN_DOUBLE	Double line: Thin
EPOS2_LINE_MEDIUM_DOUBLE	Double line: Medium

Value	Description
EPOS2_LINE_THICK_DOUBLE	Double line: Thick
EPOS2_PARAM_DEFAULT	Specifies the default (solid line: thin).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API does not work in the standard mode.
- ❑ A diagonal line cannot be drawn.
- ❑ Use this API between the [addPageBegin](#) and [addPageEnd](#) APIs.

addPageRectangle

Adds a page mode rectangle draw command to the command buffer.

Draws a rectangle in the page mode.

Syntax

```
- (int) addPageRectangle:(long)x1 y1:(long)y1 x2:(long)x2
y2:(long)y2 lineStyle:(int) lineStyle;
```

Parameter

x1

Specifies the horizontal position to start drawing (in dots).

Value	Description
Integer from 0 to 65535	Horizontal position to start drawing (in dots)

y1

Specifies the vertical position to start drawing (in dots).

Value	Description
Integer from 0 to 65535	Vertical position to start drawing (in dots)

x2

Specifies the horizontal position to end drawing (in dots).

Value	Description
Integer from 0 to 65535	Horizontal position to end drawing (in dots)

y2

Specifies the vertical position to end drawing (in dots).

Value	Description
Integer from 0 to 65535	Vertical position to end drawing (in dots)

Style

Specifies the ruled line type.

Value	Description
EPOS2_LINE_THIN	Solid line: Thin
EPOS2_LINE_MEDIUM	Solid line: Medium
EPOS2_LINE_THICK	Solid line: Thick
EPOS2_LINE_THIN_DOUBLE	Double line: Thin
EPOS2_LINE_MEDIUM_DOUBLE	Double line: Medium

Value	Description
EPOS2_LINE_THICK_DOUBLE	Double line: Thick
EPOS2_PARAM_DEFAULT	Specifies the default (solid line: thin).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- This API does not work in the standard mode.
- Use this API between the [addPageBegin](#) and [addPageEnd](#) APIs.

addRotateBegin

Adds the start batch rotate print mode to the command buffer.

Syntax

- (int) addRotateBegin;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API does not work in the page mode.
- ❑ Use the add APIs for batch rotate printing (Example: [addText](#)) by enclosing between this API and the [addRotateEnd](#) API.
- ❑ Do not use the following APIs between this API and the [addRotateEnd](#) API.
 - [endTransaction](#)
 - [addPageBegin](#)
 - [addPageEnd](#)
 - [addCut](#)
 - [addPulse](#)
 - [addSound](#)
 - [setPrinterSetting](#)
 - [ejectPaper](#)
- ❑ The data volume that the printer can process in a single batch rotate printing is as described below.
 - Strings: 80 lines
 - Graphics: 2400 dots
- ❑ When you are using the add APIs (Example: [addText](#)) in the batch rotate print mode, you must take care while using certain APIs.

API	Precautions
addTextSize	<ul style="list-style-type: none"> • If the longitudinal direction is set to triple angle or higher with addTextSize before this API, then this API and the succeeding APIs will become double-angled. • If the longitudinal direction is set to triple angle or higher with addTextSize after this API, then the specification in the longitudinal direction will be ignored and become single-angled.
addFeedUnit	<p>The number of paper feed lines varies depending on the line spacing specified in addLineSpace.</p> <p>If the line spacing is specified as 30 in addLineSpace, paper feeding can be performed for 8 lines with the maximum value of addFeedUnit as 255.</p>

API	Precautions
addImage	<ul style="list-style-type: none">Graphics cannot be split and processed (printed). If 500-dot data B is sent to a location in the printer buffer where 2000-dot data A is accumulated, then data B will be accumulated in the printer buffer after data A has been printed.The multi-gradation (16 scales) maximum size is up to 600 dots vertically. In the case of multi-gradation (16 scales), a data volume that is four times that of monochrome (2 scales) is required.If the vertical size exceeds the data volume that can be processed in one go, printing will not be performed. Monochrome (2 scales) maximum value: 2400 dots Multi-gradation (16 scales) maximum value: 600 dots

addRotateEnd

Adds the end batch rotate print mode to the command buffer.

Syntax

- (int) addRotateEnd;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- This API does not work in the page mode.
- Use the add APIs for batch rotate printing (Example: [addText](#)) by enclosing between this API and the [addRotateBegin](#) API.

addCut

Adds a sheet cut command to the command buffer.

Sets how to cut paper.

Syntax

```
- (int) addCut:(int)type;
```

Parameter

type

Specifies how to cut paper.

Value	Description
EPOS2_CUT_FEED	Feed cut (cut the sheet after feeding paper).
EPOS2_CUT_NO_FEED	Cut without feed (cut the sheet without feeding paper).
EPOS2_CUT_RESERVE	Cut reservation (print the following texts and cut the sheet at the cutting position).
EPOS2_PARAM_DEFAULT	Specifies the default (feed cut (cut the sheet after feeding paper)).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API cannot be used in the page mode.
- ❑ Use this API at the "beginning of a line." If this API is used elsewhere, it will be ignored.
- ❑ If print data is not specified after the cut reservation (EPOS2_CUT_RESERVE), the printer will execute the cut after feeding paper up to the position of the reserved cut.
- ❑ Depending on the printer, it may wait approximately 2 seconds for the print data after the cut reservation (EPOS2_CUT_RESERVE) before starting the paper feed operation.
- ❑ When using the cut reservation (EPOS2_CUT_RESERVE), set the length of one receipt to at least 20 mm.

addPulse

Adds a drawer kick command to the command buffer.

Sets the drawer kick.

Syntax

- (int) addPulse:(int)drawer time:(int)time;

Parameter

drawer

Specifies the drawer kick connector.

Value	Description
EPOS2_DRAWER_2PIN	Drawer kick connector pin No.2
EPOS2_DRAWER_5PIN	Drawer kick connector pin No.5
EPOS2_PARAM_DEFAULT	Specifies the default (drawer kick connector pin No.2).

time

Specifies the on time of the drawer kick signal.

Value	Description
EPOS2_PULSE_100	100-msec signal
EPOS2_PULSE_200	200-msec signal
EPOS2_PULSE_300	300-msec signal
EPOS2_PULSE_400	400-msec signal
EPOS2_PULSE_500	500-msec signal
EPOS2_PARAM_DEFAULT	Specifies the default (100-msec signal).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API cannot be used in the page mode.
- ❑ The drawer and optional external buzzer cannot be connected simultaneously.

- ❑ Do not open the drawer repeatedly for a short time. The drawer may be damaged due to too much load.
- ❑ For built-in buzzer equipped models of the following printers, sounding the buzzer is possible using the pulse output commands for drawer kick connectors.

For details on controlling the built-in buzzer, refer to the Technical Reference Guide of the printer.

- TM-T70
- TM-T70II
- TM-T82II
- TM-T82III
- TM-T88IV
- TM-T88V
- TM-T88VI
- TM-T82II-i
- TM-T83II-i
- TM-T88VI-iHUB
- TM-L90

addSound

Adds buzzer sound setting to the command buffer.

Sets the buzzer.

Syntax

```
- (int) addSound:(int)pattern repeat:(long)repeat
cycle:(long)cycle;
```

Parameter

pattern

Specifies the buzzer tone.

Value	Description
EPOS2_PATTERN_NONE	Stop (Mobile models)
EPOS2_PATTERN_NONE	Stop. However, the buzzer already sounding does not stop. (Except for Mobile models)
EPOS2_PATTERN_A	Pattern A (optional external buzzer)
EPOS2_PATTERN_B	Pattern B (optional external buzzer)
EPOS2_PATTERN_C	Pattern C (optional external buzzer)
EPOS2_PATTERN_D	Pattern D (optional external buzzer)
EPOS2_PATTERN_E	Pattern E (optional external buzzer)
EPOS2_PATTERN_ERROR	Error sound pattern (optional external buzzer)
EPOS2_PATTERN_PAPER_EMPTY	Paper empty sound pattern (optional external buzzer)
EPOS2_PATTERN_1	Pattern 1 (built-in buzzer)
EPOS2_PATTERN_2	Pattern 2 (built-in buzzer)
EPOS2_PATTERN_3	Pattern 3 (built-in buzzer)
EPOS2_PATTERN_4	Pattern 4 (built-in buzzer)
EPOS2_PATTERN_5	Pattern 5 (built-in buzzer)
EPOS2_PATTERN_6	Pattern 6 (built-in buzzer)
EPOS2_PATTERN_7	Pattern 7 (built-in buzzer)
EPOS2_PATTERN_8	Pattern 8 (built-in buzzer)
EPOS2_PATTERN_9	Pattern 9 (built-in buzzer)
EPOS2_PATTERN_10	Pattern 10 (built-in buzzer)
EPOS2_PARAM_DEFAULT	Specifies the default (Pattern A).

repeat

Specifies the repeat count.

Value	Description
0	Unlimited
1 to 255	1 to 255 times
EPOS2_PARAM_DEFAULT	Specifies the default (once).

cycle

Specifies the buzzer sound interval (in milliseconds).

Value	Description
1000 to 25500	1000 to 25500 milliseconds
EPOS2_PARAM_DEFAULT	Specifies the default (1000 milliseconds).

Effective for Patterns 1 to 10 only.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API cannot be used in the page mode.
- ❑ The drawer and optional external buzzer cannot be connected simultaneously.
- ❑ This API cannot be used if the printer is not equipped with a buzzer.
- ❑ The timing to receive the callback of sendData API varies by printer.
Mobile models: [sendData](#) After running API
Other than Mobile models: After buzzer stops sounding
- ❑ For built-in buzzer equipped models of the following printers, sounding the buzzer is possible using [addPulse](#).
 - TM-T70
 - TM-T70II
 - TM-T82II
 - TM-T82III
 - TM-T88IV
 - TM-T88V
 - TM-T88VI
 - TM-T82II-i

- TM-T83II-i
- TM-T88VI-iHUB
- TM-L90

addFeedPosition

Adds a label sheet/black mark sheet feed command to the command buffer.

Syntax

```
- (int) addFeedPosition:(int)position;
```

Parameter

position

Specifies the paper feed position.

Value	Description
EPOS2_FEED_PEELING	Feed the sheet to the peeling position.
EPOS2_FEED_CUTTING	Feed the sheet to the cut position.
EPOS2_FEED_CURRENT_TOF	Feed the sheet to the top of the current label.
EPOS2_FEED_NEXT_TOF	Feed the sheet to the top of the next label.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ The label sheet/black mark sheet can be controlled in the standard mode.
- ❑ This API cannot be used in the page mode.

addLayout

Adds layout setting of the label sheet/black mark sheet to the command buffer.

Syntax

```
- (int) addLayout:(int)type width:(long)width
height:(long)height marginTop:(long)marginTop
marginBottom:(long)marginBottom offsetCut:(long)offsetCut
offsetLabel:(long)offsetLabel;
```

Parameter

type

Specifies the paper type.

Value	Description
EPOS2_LAYOUT_RECEIPT	Receipt (without black mark)
EPOS2_LAYOUT_RECEIPT_BM	Receipt (with black mark)
EPOS2_LAYOUT_LABEL	Label sheet (without black mark)
EPOS2_LAYOUT_LABEL_BM	Label sheet (with black mark)

width

Specifies the paper width (in 0.1mm units).

Value		Description
TM Printer Models	POS Terminal Model	
Integer from 1 to 10000	Integer from 290 to 600	Paper width (in 0.1 mm units)

height

Specifies the distance from the print reference mark to the next print reference mark (in 0.1mm units).

Sheet type	Value		Description
	TM Printer Models	POS Terminal Model	
Receipt (without black mark)	0	0	No distance specified (auto)
Receipt (with black mark)	0 to 10000	0 to 1550	Distance between the top edges of two consecutive black marks.
Label sheet (without black mark)			Distance between the top edges of two consecutive labels
Label sheet (with black mark)			Distance between the bottom edges of two consecutive black marks.

marginTop

Specifies the distance from the print reference mark to the top of the sheet (in 0.1mm units).

Sheet type	Value		Description
	TM Printer Models	POS Terminal Model	
Receipt (without black mark)	0	0	No distance specified (auto)
Receipt (with black mark)	-9999 to 10000	-150 to 1500	Distance from the top edge of the black mark to the top of the sheet
Label sheet (without black mark)	0 to 10000	0 to 1500	Distance from the top edge of the label to the top of the sheet
Label sheet (with black mark)	-9999 to 10000	-15 to 1500	Distance from the bottom edge of the black mark to the top of the sheet

marginBottom

Specifies the distance from the eject reference mark to the bottom edge of the printable area (in 0.1mm units).

Sheet type	Value		Description
	TM Printer Models	POS Terminal Model	
Receipt (without black mark)	0	0	No distance specified (auto)
Receipt (with black mark)	0	0	No distance specified (auto)
Label sheet (without black mark)	-9999 to 0	-15 to 0	Distance from the bottom edge of the label (A positive value represents the paper feed direction.)
Label sheet (with black mark)	-9999 to 10000	-15 to 15	Distance from the top of the black mark (A positive value represents the paper feed direction.)

offsetCut

Specifies the distance from the eject reference mark to the cut position (in 0.1mm units).

Sheet type	Value		Description
	TM Printer Models	POS Terminal Model	
Receipt (without black mark)	0	0	No distance specified (auto)
Receipt (with black mark)	-9999 to 10000	-290 to 50	Distance from the top edge of the black mark to the cut position
Label sheet (without black mark)	0 to 10000	0 to 50	Distance from the bottom edge of the label to the cut position
Label sheet (with black mark)	0 to 10000	0 to 50	Distance from the top edge of the black mark to the cut position

offsetLabel

Specifies the distance from the eject reference mark to the bottom edge of the label (in 0.1mm units).

Sheet type	Value		Description
	TM Printer Models	POS Terminal Model	
Receipt (without black mark)	0	0	No distance specified (auto)
Receipt (with black mark)	0	0	No distance specified (auto)
Label sheet (without black mark)	0	0	No distance specified (auto)
Label sheet (with black mark)	0 to 10000	0 to 15	Distance from the top edge of the black mark to the bottom edge of a label

Return value


Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation


- ❑ This API does not work in the page mode.
- ❑ Available setting values vary by TM printer model. For more details, see the FS (L<Function 33>) command.
<https://reference.epson-biz.com/pos/reference/>
- ❑ The available parameter values for each type of paper are listed below.
The following table shows available values for TM printer models, and shows those for POS terminal models in parentheses.

Parameter	Receipt (without black mark)	Label sheet (without black mark)	Label sheet (with black mark)	Receipt (with black mark)	Symbol in dia- gram
width	1 to 10000 (290 to 600)				f
height	0 (0)	0 to 10000 (0 to 1550)		a	
marginTop	0 (0)	0 to 10000 (0 to 1500)	-9999 to 10000 (-15 to 1500)	-9999 to 10000 (-150 to 1500)	b
marginBottom	0 (0)	-9999 to 0 (-15 to 0)	-9999 to 10000 (-15 to 15)	0 (0)	e
offsetCut	0 (0)	0 to 10000 (0 to 50)		-9999 to 10000 (-290 to 50)	c
offsetLabel	0 (0)		0 to 10000 (0 to 15)		d



Receipt

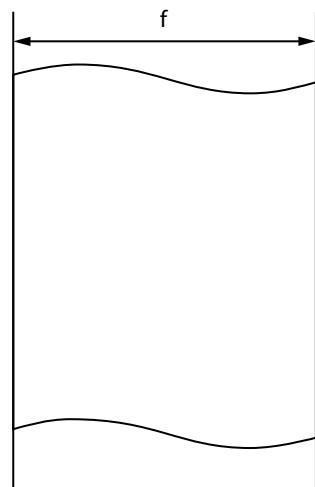

<with Black Mark>

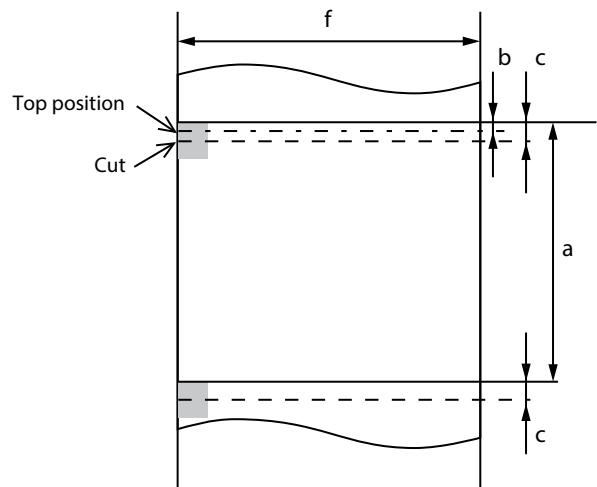

Label

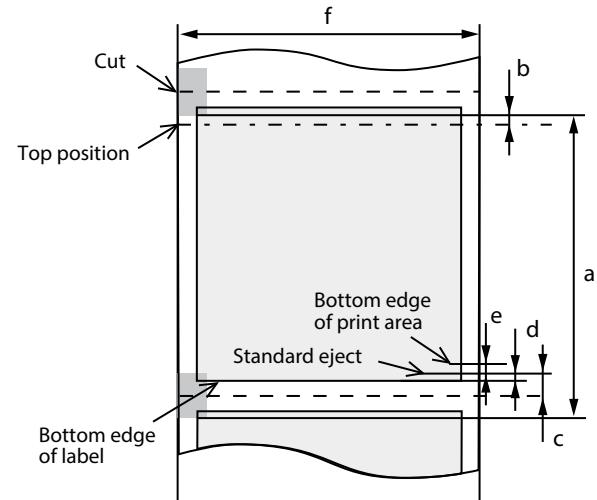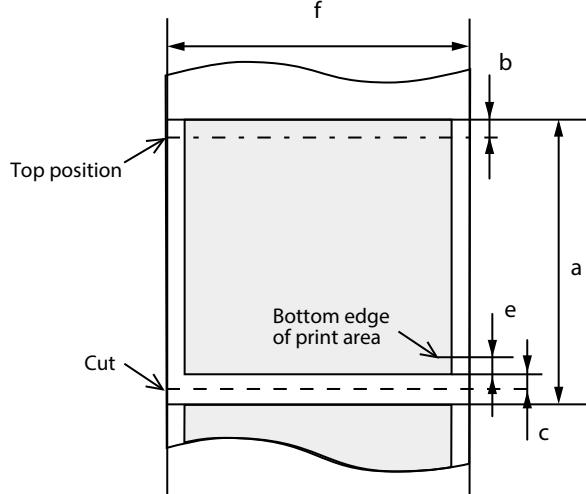

addCommand

Adds a command to the command buffer.

Sends the ESC/POS command.

Syntax

```
- (int) addCommand:(NSData *)data;
```

Parameter

data

Specifies the ESC/POS command.

Specifies the binary data.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

Refer to the following URL for details of the ESC/POS command.

https://reference.epson-biz.com/modules/ref_escpos/

Epson ePOS SDK does not check the commands sent using this API.

If the commands interfere with Epson ePOS SDK operations, other APIs may work wrongly or status values may become invalid.

This API should be used with a full understanding of ESC/POS commands and the receipt printer specifications.

getMaintenanceCounter

Acquires the value of the printer's maintenance counter.

The value acquired by this API is notified to the callback method specified in the delegate parameter.

Syntax

```
- (int) getMaintenanceCounter:(long)timeout
type:(int)Type
delegate:(id<Epos2MaintenanceCounterDelegate>)delegate;
```

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

type

Specifies the type of maintenance counter to be acquired.

Value	Description
EPOS2_MAINTENANCE_COUNTER_PAPER_FEED	Number of paper feed lines
EPOS2_MAINTENANCE_COUNTER_AUTO_CUTTER	Number of times auto cutter is operated

delegate

Registers the callback method that returns the processing result of this API.

```
- (void) onGetMaintenanceCounter:(int)code type:(int)Type
value:(int)value;
```

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_AUTORECOVER	Automatic recovery error occurred.
EPOS2_CODE_ERR_COVER_OPEN	Cover open error occurred.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.
EPOS2_CODE_ERR_MECHANICAL	Mechanical error occurred.
EPOS2_CODE_ERR_EMPTY	No paper is left in the roll paper end detector.
EPOS2_CODE_ERR_PARAM	An invalid parameter was passed.

Error status	Description
EPOS2_CODE_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_CODE_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_CODE_ERR_PROCESSING	Could not run the process.
EPOS2_CODE_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.

type

The type of maintenance counter acquired is stored.

value

The value of the acquired maintenance counter is stored.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

This API cannot be used simultaneously with other APIs.

After executing this API, do not execute any other API until the callback is returned.

Do not turn off the power supply to the printer while executing this API.

This API can be used in the system configuration of the TM printer model and customer display model.

With the system configuration of the TM Printer + DM-D30 + barcode scanner model, this API can be used when connecting via *Bluetooth* or USB.

This API cannot be used with SSL/TLS communication.

resetMaintenanceCounter

Resets the value of the printer's maintenance counter.

The value acquired by this API is notified to the callback method specified in the delegate parameter.

Syntax

```
- (int) resetMaintenanceCounter:(long)timeout
    type:(int)Type
    delegate:(id<Epos2MaintenanceCounterDelegate>)delegate;
```

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

type

Specifies the type of maintenance counter to be reset.

Value	Description
EPOS2_MAINTENANCE_COUNTER_PAPER_FEED	Number of paper feed lines
EPOS2_MAINTENANCE_COUNTER_AUTO_CUTTER	Number of times auto cutter is operated

delegate

Registers the callback method that returns the processing result of this API.

```
- (void) onResetMaintenanceCounter:(int)code type:(int)Type;
```

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_AUTORECOVER	Automatic recovery error occurred.
EPOS2_CODE_ERR_COVER_OPEN	Cover open error occurred.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.
EPOS2_CODE_ERR_MECHANICAL	Mechanical error occurred.
EPOS2_CODE_ERR_EMPTY	No paper is left in the roll paper end detector.
EPOS2_CODE_ERR_PARAM	An invalid parameter was passed.

Error status	Description
EPOS2_CODE_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_CODE_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_CODE_ERR_PROCESSING	Could not run the process.
EPOS2_CODE_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.

type

The type of maintenance counter reset is stored.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed. The conditions to execute this API were not fulfilled.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- This API cannot be used simultaneously with other APIs.
After executing this API, do not execute any other API until the callback is returned.
- Do not turn off the power supply to the printer while executing this API.
- Do not execute this API more than 10 times per day. If executed more than this number of times, the printer may become unable to operate.
- This API can be used in the system configuration of the TM printer model and customer display model.
With the system configuration of the TM Printer + DM-D30 + barcode scanner model, this API can be used when connecting via *Bluetooth* or USB.
- This API cannot be used with SSL/TLS communication.

getPrinterSetting

Acquires the set value of the printer setting.

The value acquired by this API is notified to the callback method specified in the delegate parameter.

Syntax

```
- (int) getPrinterSetting:(long)timeout
type:(int)Type
delegate:(id<Epos2PrinterSettingDelegate>)delegate;
```

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

type

Specifies the printer setting item to be acquired.

Value	Description
EPOS2_PRINTER_SETTING_PAPERWIDTH	Paper width
EPOS2_PRINTER_SETTING_PRINTDENSITY	Print density
EPOS2_PRINTER_SETTING_PRINTSPEED	Print speed

delegate

Registers the callback method that returns the processing result of this API.

```
- (void) onGetPrinterSetting:(int)code type:(int)Type
value:(int)value;
```

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_AUTORECOVER	Automatic recovery error occurred.
EPOS2_CODE_ERR_COVER_OPEN	Cover open error occurred.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.
EPOS2_CODE_ERR_MECHANICAL	Mechanical error occurred.
EPOS2_CODE_ERR_EMPTY	No paper is left in the roll paper end detector.

Error status	Description
EPOS2_CODE_ERR_PARAM	An invalid parameter was passed.
EPOS2_CODE_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_CODE_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_CODE_ERR_PROCESSING	Could not run the process.
EPOS2_CODE_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.

type

The processing result is stored.

Value	Description
EPOS2_PRINTER_SETTING_PAPERWIDTH	Paper width
EPOS2_PRINTER_SETTING_PRINTDENSITY	Print density
EPOS2_PRINTER_SETTING_PRINTSPEED	Print speed

value

The acquired set value of the printer setting is stored.

Value	Description
EPOS2_PRINTER_SETTING_PAPERWIDTH58_0	Paper width 58 mm
EPOS2_PRINTER_SETTING_PAPERWIDTH60_0	Paper width 60 mm
EPOS2_PRINTER_SETTING_PAPERWIDTH80_0	Paper width 80 mm
EPOS2_PRINTER_SETTING_PRINTDENSITYDIP	Print density DIP switch setting
EPOS2_PRINTER_SETTING_PRINTDENSITY70	Print density 70%
EPOS2_PRINTER_SETTING_PRINTDENSITY75	Print density 75%
EPOS2_PRINTER_SETTING_PRINTDENSITY80	Print density 80%
EPOS2_PRINTER_SETTING_PRINTDENSITY85	Print density 85%
EPOS2_PRINTER_SETTING_PRINTDENSITY90	Print density 90%
EPOS2_PRINTER_SETTING_PRINTDENSITY95	Print density 95%
EPOS2_PRINTER_SETTING_PRINTDENSITY100	Print density 100%
EPOS2_PRINTER_SETTING_PRINTDENSITY105	Print density 105%
EPOS2_PRINTER_SETTING_PRINTDENSITY110	Print density 110%
EPOS2_PRINTER_SETTING_PRINTDENSITY115	Print density 115%
EPOS2_PRINTER_SETTING_PRINTDENSITY120	Print density 120%

Value	Description
EPOS2_PRINTER_SETTING_PRINTDENSITY125	Print density 125%
EPOS2_PRINTER_SETTING_PRINTDENSITY130	Print density 130%
EPOS2_PRINTER_SETTING_PRINTSPEED1	Print speed level 1
EPOS2_PRINTER_SETTING_PRINTSPEED2	Print speed level 2
EPOS2_PRINTER_SETTING_PRINTSPEED3	Print speed level 3
EPOS2_PRINTER_SETTING_PRINTSPEED4	Print speed level 4
EPOS2_PRINTER_SETTING_PRINTSPEED5	Print speed level 5
EPOS2_PRINTER_SETTING_PRINTSPEED6	Print speed level 6
EPOS2_PRINTER_SETTING_PRINTSPEED7	Print speed level 7
EPOS2_PRINTER_SETTING_PRINTSPEED8	Print speed level 8
EPOS2_PRINTER_SETTING_PRINTSPEED9	Print speed level 9
EPOS2_PRINTER_SETTING_PRINTSPEED10	Print speed level 10
EPOS2_PRINTER_SETTING_PRINTSPEED11	Print speed level 11
EPOS2_PRINTER_SETTING_PRINTSPEED12	Print speed level 12
EPOS2_PRINTER_SETTING_PRINTSPEED13	Print speed level 13
EPOS2_PRINTER_SETTING_PRINTSPEED14	Print speed level 14

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API cannot be used simultaneously with other APIs.
After executing this API, do not execute any other API until the callback is returned.
- ❑ Do not turn off the power supply to the printer while executing this API.
- ❑ This API can be used in the system configuration of the TM printer model and customer display model.
With the system configuration of the TM Printer + DM-D30 + barcode scanner model, this API can be used when connecting via *Bluetooth* or USB.
- ❑ This API cannot be used with SSL/TLS communication.

setPrinterSetting

Changes the set value of the printer setting.

The value acquired by this API is notified to the callback method specified in the delegate parameter.

Syntax

```
- (int) setPrinterSetting:(long)timeout
    setttingList:(NSDictionary *)list
    delegate:(id<Epos2PrinterSettingDelegate>)delegate;
```

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

list

Specifies the list combining the changed printer setting item (type) and the set value (value).

type

Specifies the printer setting item to be changed.

Value	Description
EPOS2_PRINTER_SETTING_PAPERWIDTH	Paper width
EPOS2_PRINTER_SETTING_PRINTDENSITY	Print density
EPOS2_PRINTER_SETTING_PRINTSPEED	Print speed

value

Specifies the set value of the printer setting to be changed.

Value	Description
EPOS2_PRINTER_SETTING_PAPERWIDTH58_0	Paper width 58 mm
EPOS2_PRINTER_SETTING_PAPERWIDTH60_0	Paper width 60 mm
EPOS2_PRINTER_SETTING_PAPERWIDTH80_0	Paper width 80 mm
EPOS2_PRINTER_SETTING_PRINTDENSITYDIP	Print density DIP switch setting
EPOS2_PRINTER_SETTING_PRINTDENSITY70	Print density 70%
EPOS2_PRINTER_SETTING_PRINTDENSITY75	Print density 75%
EPOS2_PRINTER_SETTING_PRINTDENSITY80	Print density 80%
EPOS2_PRINTER_SETTING_PRINTDENSITY85	Print density 85%

Value	Description
EPOS2_PRINTER_SETTING_PRINTDENSITY90	Print density 90%
EPOS2_PRINTER_SETTING_PRINTDENSITY95	Print density 95%
EPOS2_PRINTER_SETTING_PRINTDENSITY100	Print density 100%
EPOS2_PRINTER_SETTING_PRINTDENSITY105	Print density 105%
EPOS2_PRINTER_SETTING_PRINTDENSITY110	Print density 110%
EPOS2_PRINTER_SETTING_PRINTDENSITY115	Print density 115%
EPOS2_PRINTER_SETTING_PRINTDENSITY120	Print density 120%
EPOS2_PRINTER_SETTING_PRINTDENSITY125	Print density 125%
EPOS2_PRINTER_SETTING_PRINTDENSITY130	Print density 130%
EPOS2_PRINTER_SETTING_PRINTSPEED1	Print speed level 1
EPOS2_PRINTER_SETTING_PRINTSPEED2	Print speed level 2
EPOS2_PRINTER_SETTING_PRINTSPEED3	Print speed level 3
EPOS2_PRINTER_SETTING_PRINTSPEED4	Print speed level 4
EPOS2_PRINTER_SETTING_PRINTSPEED5	Print speed level 5
EPOS2_PRINTER_SETTING_PRINTSPEED6	Print speed level 6
EPOS2_PRINTER_SETTING_PRINTSPEED7	Print speed level 7
EPOS2_PRINTER_SETTING_PRINTSPEED8	Print speed level 8
EPOS2_PRINTER_SETTING_PRINTSPEED9	Print speed level 9
EPOS2_PRINTER_SETTING_PRINTSPEED10	Print speed level 10
EPOS2_PRINTER_SETTING_PRINTSPEED11	Print speed level 11
EPOS2_PRINTER_SETTING_PRINTSPEED12	Print speed level 12
EPOS2_PRINTER_SETTING_PRINTSPEED13	Print speed level 13
EPOS2_PRINTER_SETTING_PRINTSPEED14	Print speed level 14

delegate

Registers the callback method that returns the processing result of this API.

- **(void) onSetPrinterSetting:(int)code;**

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_AUTORECOVER	Automatic recovery error occurred.

Error status	Description
EPOS2_CODE_ERR_COVER_OPEN	Cover open error occurred.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.
EPOS2_CODE_ERR_MECHANICAL	Mechanical error occurred.
EPOS2_CODE_ERR_EMPTY	No paper is left in the roll paper end detector.
EPOS2_CODE_ERR_PARAM	An invalid parameter was passed.
EPOS2_CODE_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_CODE_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_CODE_ERR_PROCESSING	Could not run the process.
EPOS2_CODE_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API cannot be used simultaneously with other APIs.
After executing this API, do not execute any other API until the callback is returned.
- ❑ Do not turn off the power supply to the printer while executing this API.
- ❑ If communication with the printer is disconnected during execution of this API, the printer may become unable to operate. In such a case, turn the power supply to the printer off and then on again.
- ❑ Communication with the printer disconnects as the printer automatically restarts during execution of this API. Reconnect as necessary.
In a network environment that uses DHCP, the IP address may change due to restart of the printer.
In such a case, search for the printer using [Epos2Discovery class](#) and reconnect.
- ❑ This API can be used in the system configuration of the TM printer model and customer display model.
With the system configuration of the TM Printer + DM-D30 + barcode scanner model, this API can be used when connecting via *Bluetooth* or USB.
- ❑ This API cannot be used with SSL/TLS communication.

downloadFirmwareList

Acquires the firmware list from the server.

The firmware list acquired by this API is notified to the callback method specified in the delegate parameter.

Syntax

- ❑ - (int) downloadFirmwareList: (NSString *) printerModel
delegate: (id<Epos2FirmwareListDownloadDelegate>) delegate;
- ❑ - (int) downloadFirmwareList: (NSString *) printerModel
option:(NSString*)option delegate:(id<Epos2FirmwareListDownloadDelegate>)delegate;

Parameter

printerModel

Specifies the model name of the target printer.

Value	Description
TM-m10	TM-m10
TM-m30	TM-m30
TM-T88VI	TM-T88VI
TM-T88VI-iHUB	TM-T88VI-iHUB

option

Specifies the version of the target firmware.

Value	Description
-A	Ver.*.*A ESC/POS
-B	Ver.*.*B ESC/POS

Ver.*.*A ESC/POS:For OT-WL02/WL06 users

Ver.*.*B ESC/POS:For OT-WL05/WL06 users

Check the firmware release information for the detailed functions of each firmware version.

If you don't use a wireless LAN unit, you can choose either A or B.

delegate

Registers the callback method that returns the processing result of this API.

```
- (void) onFirmwareListDownload:(int)code
firmwareList:(NSMutableArray<Epos2FirmwareInfo *>
*)firmwareList
```

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_CONNECT	Failed to communicate with the server.

firmwareList

The list of firmware that can be downloaded is stored in the Array format of Epos2FirmwareInfo.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Failed to communicate with the server.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- This API can be used in an environment that can be connected to both the Internet and the printer.
- This API cannot be used simultaneously with other APIs.
After executing this API, do not execute any other API until the callback is returned.
- Do not turn off the power supply to the printer while executing this API.
- This API can be used in the system configuration of the TM printer model and customer display model.
With the system configuration of the TM Printer + DM-D30 + barcode scanner model, this API can be used when connecting via *Bluetooth* or USB.
- This API cannot be used with SSL/TLS communication.
- If no firmware image exists on the server, the firmware list cannot be acquired.

getPrinterFirmwareInfo

Acquires the firmware information of the connected printer.

The firmware information acquired by this API is notified to the callback method specified in the delegate parameter.

Syntax

```
- (int) getPrinterFirmwareInfo: (long) timeout
delegate: (id<Epos2FirmwareInformationDelegate>) delegate;
```

Parameter

timeout

Specifies the timeout period until the completion of acquisition of firmware information in milliseconds.

Value	Description
Integer from 15000 to 60000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (30000).

delegate

Registers the callback method that returns the processing result of this API.

```
- (void) onFirmwareInformationReceive:(int)code
firmwareInfo:(Epos2FirmwareInfo *)firmwareInfo;
```

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.

firmwareInfo

The firmware information of the connected printer is stored.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_TIMEOUT	The process did not end within the specified time period.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Error status	Description
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Supplementary explanation

- This API can be used in an environment that can be connected to both the Internet and the printer.
- This API cannot be used simultaneously with other APIs.
After executing this API, do not execute any other API until the callback is returned.
- Do not turn off the power supply to the printer while executing this API.
- This API can be used in the system configuration of the TM printer model and customer display model.
With the system configuration of the TM Printer + DM-D30 + barcode scanner model, this API can be used when connecting via *Bluetooth* or USB.
- This API cannot be used with SSL/TLS communication.

verifyUpdate

Compares the firmware of the connected printer and the firmware image specified in [updateFirmware](#).

Execute this API after executing [updateFirmware](#), and make sure the printer firmware has been rewritten to the firmware image specified in [updateFirmware](#).

The execution result of this API is notified to the callback method specified in the delegate parameter.

Syntax

```
- (int) verifyUpdate: (Epos2FirmwareInfo *)  
targetFirmwareInfo  
delegate: (id<Epos2VerifyUpdateDelegate>) delegate;
```

Parameter

targetFirmwareInfo

Specifies the firmware image of the version to be applied to the printer from the list acquired in [downloadFirmwareList](#).

Specifies the same firmware image as that specified in the targetFirmwareInfo parameter of [updateFirmware](#).

delegate

Registers the callback method that returns the processing result of this API.

```
- (void) onUpdateVerify:(int)code;
```

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_DIFFERENT_MODEL	The corresponding model of the firmware image specified in targetFirmwareInfo, and the model name of the connected printer are different.
EPOS2_CODE_ERR_DIFFERENT_VERSION	The version of the firmware image specified in targetFirmwareInfo, and the firmware version of the connected printer are different.
EPOS2_CODE_ERR_PARAM	An invalid parameter was passed.
EPOS2_CODE_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_CODE_ERR_TIMEOUT	The process did not end within the specified time period.
EPOS2_CODE_ERR_DATA_CORRUPTED	The firmware image is corrupted.
EPOS2_CODE_ERR_PROCESSING	Could not run the process.
EPOS2_CODE_ERR_ILLEGAL	This API was called while no communication had been started.

Error status	Description
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed. This API was called when updateFirmware had not been executed.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ This API can be used in an environment that can be connected to both the Internet and the printer.
- ❑ This API cannot be used simultaneously with other APIs.
After executing this API, do not execute any other API until the callback is returned.
- ❑ Do not turn off the power supply to the printer while executing this API.
- ❑ This API can be used in the system configuration of the TM printer model and customer display model.
With the system configuration of the TM Printer + DM-D30 + barcode scanner model, this API can be used when connecting via *Bluetooth* or USB.
- ❑ This API cannot be used with SSL/TLS communication.

updateFirmware

Downloads the firmware image from the server, and instructs writing of the firmware image to the printer. Execute [verifyUpdate](#) after executing this API, and make sure the printer firmware has been rewritten to the specified firmware image.

The return value of this API is the result of execution of the instruction to write the firmware image to the printer. It is not the execution result of the overall firmware update.

The progress or execution result of this API is notified to the callback method specified in the delegate parameter.

Syntax

```
- (int) updateFirmware: (Epos2FirmwareInfo *)  
targetFirmwareInfo  
delegate: (id<Epos2FirmwareUpdateDelegate>) delegate;
```

Parameter

targetFirmwareInfo

Specifies the firmware image of the version to be applied to the printer from the list acquired in [downloadFirmwareList](#).

delegate

Registers the callback method that returns the progress or execution result of this API.

- Acquires the progress status

```
- (void) onFirmwareUpdateProgress:(NSString *)task  
progress:(float)progress;
```

task

The name of the process being executed is stored.

Name	Description
Prepare	Preparing.
Download Firmware	Downloading the firmware image from the server.
Sending firmware image	Sending the downloaded firmware image to the printer.

progress

A value from 0.0 to 1.0 is stored depending on the progress of the process being executed.

- Acquires the execution result

- (void) onFirmwareUpdate:(int)code
maxWaitTime:(int)maxWaitTime;

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_DIFFERENT_MODEL	The corresponding model of the firmware image specified in targetFirmwareInfo, and the model name of the connected printer are different.
EPOS2_CODE_ERR_PARAM	An invalid parameter was passed.
EPOS2_CODE_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_CODE_ERR_CONNECT	Failed to communicate with the printer or the server.
EPOS2_CODE_ERR_TIMEOUT	The process did not end within the specified time period.
EPOS2_CODE_ERR_DATA_CORRUPTED	The firmware image is corrupted.
EPOS2_CODE_ERR_PROCESSING	Could not run the process.
EPOS2_CODE_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.

maxWaitTime

The maximum wait time until the completion of writing of the firmware image is stored.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- This API can be used in an environment that can be connected to both the Internet and the printer.
- This API cannot be used simultaneously with other APIs.
After executing this API, do not execute any other API until the callback is returned.
- Do not turn off the power supply to the printer while executing this API.
- Communication with the printer disconnects as the printer automatically restarts during execution of this API. Reconnect as necessary.
In a network environment that uses DHCP, the IP address may change due to restart of the printer.
In such a case, search for the printer using [Epos2Discovery Class](#) and reconnect.

- ❑ This API can be used in the system configuration of the TM printer model and customer display model.
With the system configuration of the TM Printer + DM-D30 + barcode scanner model, this API can be used when connecting via *Bluetooth* or USB.
- ❑ This API cannot be used with SSL/TLS communication.
- ❑ When updating the firmware by executing this API, note the following points:
 - The time required to update depends on the interface.
 - About 15 minutes for a network connection
 - About 85 minutes for a *Bluetooth* connection
 - You cannot stop the update once it has started.
 - Check that the smart device is charged sufficiently.
 - Check that no errors have occurred in the printer.
 - Check that the printer's communication status is in good condition.
 - Do not operate the smart device while updating the firmware.
 - Do not disconnect the connection cable and power cable while updating the firmware.
 - Do not sleep the smart device while updating the firmware.

forceRecover

Forcibly sends the error recovery command from a recoverable error status (example: auto cutter error).

For details on recoverable errors, refer to the Technical Reference Guide of each printer.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Syntax

- (int) forceRecover:(long) timeout;

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Supplementary explanation

- ❑ After recovering from a recoverable error, the buffer of the printer is reset.
- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

forcePulse

Forcibly sends the drawer kick command.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Syntax

```
- (int) forcePulse:(int)drawer pulseTime:(int)pulseTime
               timeout:(long)timeout;
```

Parameter

drawer

Specifies the drawer kick connector.

Value	Description
EPOS2_DRAWER_2PIN	Drawer kick connector pin No.2
EPOS2_DRAWER_5PIN	Drawer kick connector pin No.5
EPOS2_PARAM_DEFAULT	Specifies the default (drawer kick connector pin No.2).

time

Specifies the on time of the drawer kick signal.

Value	Description
EPOS2_PULSE_100	100-msec signal
EPOS2_PULSE_200	200-msec signal
EPOS2_PULSE_300	300-msec signal
EPOS2_PULSE_400	400-msec signal
EPOS2_PULSE_500	500-msec signal
EPOS2_PARAM_DEFAULT	Specifies the default (100-msec signal).

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Supplementary explanation

- ❑ The drawer and optional external buzzer cannot be connected simultaneously.
- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

forceStopSound

Forcibly sends the buzzer sound command.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Syntax

```
- (int) forceStopSound:(long)timeout;
```

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Supplementary explanation

- ❑ The drawer and optional external buzzer cannot be connected simultaneously.
- ❑ This API cannot be used if the printer is not equipped with a buzzer.
- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

forceCommand

Forcibly sends the ESC/POS command.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Syntax

```
- (int) forceCommand:(NSData *)data timeout:(long)timeout;
```

Parameter

data

Forcibly sends the ESC/POS command.

Specifies the binary data.

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Supplementary explanation

- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

forceReset

Forcibly sends the printer reset command.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Syntax

- (int) forceReset:(long)timeout;

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Supplementary explanation

- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

setStatusChangeEventDelegate

Registers a callback method for a status change event.

Syntax

```
- (void) setStatusChangeEventDelegate:  
    (id<Epos2PtrStatusChangeDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2PtrStatusChangeDelegate protocol.

Protocol declaration

```
@protocol Epos2PtrStatusChangeDelegate <NSObject>  
@required  
- (void) onPtrStatusChange:(Epos2Printer *)printerObj  
eventType:(int) eventType;  
@end
```

Parameter

printerObj

The callback source object is stored.

eventType

The type of the event that occurred is stored.

Event type	Description
EPOS2_EVENT_ONLINE	Online
EPOS2_EVENT_OFFLINE	Offline
EPOS2_EVENT_POWER_OFF	Power off
EPOS2_EVENT_COVER_CLOSE	Cover close
EPOS2_EVENT_COVER_OPEN	Cover open
EPOS2_EVENT_PAPER_OK	Paper remains.
EPOS2_EVENT_PAPER_NEAR_END	Paper has almost run out.
EPOS2_EVENT_PAPER_EMPTY	Paper has run out.
EPOS2_EVENT_DRAWER_HIGH	Drawer kick connector pin No.3 status = "H"
EPOS2_EVENT_DRAWER_LOW	Drawer kick connector pin No.3 status = "L"
EPOS2_EVENT_BATTERY_ENOUGH	Battery is enough.
EPOS2_EVENT_BATTERY_EMPTY	Battery has run out.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.

setReceiveEventDelegate

Registers a callback method for a response document reception event.

Syntax

```
- (void)
setReceiveEventDelegate:(id<Epos2PtrReceiveDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2PtrReceiveDelegate protocol.

Protocol declaration

```
@protocol Epos2PtrReceiveDelegate <NSObject>
@required
- (void)onPtrReceive:(Epos2Printer *)printerObj
code:(int)code status:(Epos2PrinterStatusInfo *)status
printJobId:(NSString *)printJobId;
@end
```

Parameter

printerObj

The callback source object is stored.

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Print succeeded.
EPOS2_CODE_PRINTING	Printing
EPOS2_CODE_ERR_AUTORECOVER	Automatic recovery error occurred.
EPOS2_CODE_ERR_COVER_OPEN	Cover open error occurred.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.
EPOS2_CODE_ERR_MECHANICAL	Mechanical error occurred.
EPOS2_CODE_ERR_EMPTY	No paper is left in the roll paper end detector.
EPOS2_CODE_ERR_UNRECOVERABLE	Unrecoverable error occurred.
EPOS2_CODE_ERR_FAILURE	Error exists in the requested document syntax.
EPOS2_CODE_ERR_NOT_FOUND	Printer specified by the device ID does not exist.
EPOS2_CODE_ERR_SYSTEM	Error occurred with the printing system.

Error status	Description
EPOS2_CODE_ERR_PORT	Error was detected with the communication port.
EPOS2_CODE_ERR_TIMEOUT	Print timeout occurred.
EPOS2_CODE_ERR_JOB_NOT_FOUND	Specified print job ID does not exist.
EPOS2_CODE_ERR_SPOOLER	Print queue is full.
EPOS2_CODE_ERR_BATTERY_LOW	Battery has run out.
EPOS2_CODE_ERR_TOO_MANY_REQUESTS	The number of print jobs sent to the printer has exceeded the allowable limit.
EPOS2_CODE_ERR_REQUEST_ENTITY_TOO_LARGE	The size of the print job data exceeds the capacity of the printer.

status

Status at the timing when the process was run is stored as the `Epos2PrinterStatusInfo` type.

printJobId

- When the spooler function has been enabled, a print job ID is stored.
- When the spooler function is disabled, nil is stored.

Supplementary explanation

- When this API is run multiple times, the callback method specified later takes effect.
- If nil is specified in delegate when calling this API, the registered callback method is canceled.
- When a communication error occurs during ePOS-Device XML control, communication disconnection is not notified.
To notify the disconnection event, implement the [setConnectionEventDelegate](#).
- When controlling multiple printers at a time, identify which printer has finished printing by comparing the `Printer` object in the caller and the `printerObj` parameter.

interval

Updates the printer status (EPOS2_EVENT_POWER_OFF event) and specifies a notification interval. <obsolete>

Syntax

Setter

`-(int) setInterval:(long) interval`

Getter

`-(long) getInterval`

Value

Updates the printer status (EPOS2_EVENT_POWER_OFF event) and specifies a notification interval. The default value is 3,000.

Value	Description
Integer from 1000 to 60000	Interval to update the printer status (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (3,000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.

Supplementary explanation

Events other than EPOS2_EVENT_POWER_OFF are updated and notified at an interval of less than 1 second. The update interval cannot be changed.

Epos2HybridPrinter class

initWithLang

Initializes the Epos2HybridPrinter class.

Syntax

- (id) initWithLang:(int)lang;

Parameter

lang

Specifies the language of the printer.

Value	Description
EPOS2_MODEL_ANK	English (ANK specification)
EPOS2_MODEL_JAPANESE	Japanese
EPOS2_MODEL_CHINESE	Simplified Chinese
EPOS2_MODEL_TAIWAN	Traditional Chinese
EPOS2_MODEL_KOREAN	Korean
EPOS2_MODEL_THAI	Thai
EPOS2_MODEL_SOUTHASIA	South Asian specification

Return value

If the process succeeds, an initialized Epos2HybridPrinter class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_PARAM	An invalid parameter was specified.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_UNSUPPORTED	A language not supported was specified.

Supplementary explanation

When iterating a process, be sure to generate and destroy instances outside the iterated process and not iterate the process at a short interval.

Memory releasing by the OS may affect the process of the Epson ePOS SDK, resulting in an invalid operation.

connect

Starts communication with the printer.

Syntax

```
- (int) connect:(NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

The connection method varies according to the system configuration.

- TM Printer Models

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168"
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> • Serial number • Omitted 	"USB:000000000000000000000000" "USB:"

To connect to the printer via SSL/TLS communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCPS"	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCPS:192.168.192.168[local_printer]"

- Customer Display Models

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168"
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"

To connect to the printer via SSL/TLS communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connection type	Identifier	Example
Wi-Fi/Ethernet	"TCPS"	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCPS:192.168.192.168[local_printer]"

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

- ❑ The device ID is an arbitrary character string that is set when the peripheral device is registered to the TM printer (master). For details, refer to the Technical Reference Guide of each printer.
- ❑ If you specify TCPS in the connection to a printer that does not support SSL/TLS communication, ERR_PARAM is returned.
- ❑ Devices other than printers are exclusively locked.

disconnect

Ends communication with the printer.

Syntax

- (int) disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Supplementary explanation

- ❑ When connected to the printer with *Bluetooth*, executing this API while a slip sheet is inserted by `readMicrData` causes the slip sheet to be ejected.
- ❑ Executing this API while waiting for paper insertion after executing `waitForInsertion`, `readMicrData`, and `cleanMicrReader` cancels waiting for paper insertion.
At that time, processing result of `waitForInsertion`, `readMicrData`, and `cleanMicrReader` is not notified.
- ❑ If `disconnect` is conducted during an application background transition event process, wait until `disconnect` completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and `connect` cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

startMonitor

Enables printer status event monitoring.

Acquires and updates the printer status at the interval specified by the [interval](#) property and returns it to the callback method registered by [setStatusChangeEventDelegate](#).

Syntax

```
- (int) startMonitor;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Supplementary explanation

During ESC/POS control, any ASB information items which have been changed during the update interval specified by the [interval](#) property are reported.

During ePOS-Device XML control, the ASB information at the time of update is reported.

stopMonitor

Disables status events.

Syntax

```
- (int)stopMonitor;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

getStatus

Acquires the current status information.

Syntax

- (Epos2HybridPrinterStatusInfo *)getStatus;

Return value

The current status is returned in the Epos2HybridPrinterStatusInfo type.

The following status information is stored in the object as a property.

Printer status	Status	Description
connection:	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected
online:	EPOS2_TRUE	Online
	EPOS2_FALSE	Offline
	EPOS2_UNKNOWN	Status is unknown.
coverOpen:	EPOS2_TRUE	Cover is open.
	EPOS2_FALSE	Cover is closed.
	EPOS2_UNKNOWN	Status is unknown.
paper:	EPOS2_PAPER_OK	Paper remains.
	EPOS2_PAPER_NEAR_END	Paper is running out.
	EPOS2_PAPER_EMPTY	Paper has run out.
	EPOS2_UNKNOWN	Status is unknown.
paperFeed:	EPOS2_TRUE	Paper feed in progress
	EPOS2_FALSE	Stopped
	EPOS2_UNKNOWN	Status is unknown.
panelSwitch (Feed button):	EPOS2_SWITCH_ON	Pressed
	EPOS2_SWITCH_OFF	Not pressed
	EPOS2_UNKNOWN	Status is unknown.
Drawer kick connector pin No.3 status:	EPOS2_DRAWER_HIGH	High
	EPOS2_DRAWER_LOW	Low
	EPOS2_UNKNOWN	Status is unknown.

Printer status	Status	Description
errorStatus: Error status	EPOS2_NO_ERR	Normal
	EPOS2_MECHANICAL_ERR	Mechanical error occurred.
	EPOS2_AUTOCUTTER_ERR	Auto cutter error occurred.
	EPOS2_UNRECOVER_ERR	Unrecoverable error occurred.
	EPOS2_AUTORECOVER_ERR	Automatic recovery error occurred.
	EPOS2_UNKNOWN	Status is unknown.
autoRecoverError: Automatic recovery error status	EPOS2_HEAD_OVERHEAT	Head overheat error
	EPOS2_MOTOR_OVERHEAT	Motor driver IC overheat error
	EPOS2_WRONG_PAPER	Paper error
	EPOS2_COVER_OPEN	Cover is open.
	EPOS2_UNKNOWN	Status is unknown.
insertionWaiting: Paper insertion wait status	EPOS2_INSERTION_WAIT_SLIP	Waiting for slip sheet insertion
	EPOS2_INSERTION_WAIT_VALIDATION	Waiting for validation sheet insertion
	EPOS2_INSERTION_WAIT_MICR	Waiting for slip sheet insertion
	EPOS2_INSERTION_WAIT_NONE	Not waiting for paper insertion
	EPOS2_UNKNOWN	Status is unknown.
removalWaiting: Paper removal wait status	EPOS2_REMOVAL_WAIT_PAPER	Waiting for paper removal
	EPOS2_REMOVAL_WAIT_NONE	Not waiting for paper removal
	EPOS2_UNKNOWN	Status is unknown.
slipPaper: Status of paper conveyance route for the slip mechanism	EPOS2_SLIP_PAPER_OK	Paper remains.
	EPOS2_SLIP_PAPER_EMPTY	Paper has run out.
	EPOS2_UNKNOWN	Status is unknown.

Supplementary explanation

- ❑ If this API is called while communication is not available, printer states other than "connection" will be set to "EPOS2_UNKNOWN."
- ❑ The status object is set to the status at the timing of execution of this API and will not be updated.
- ❑ When a head overheat error occurs, EPOS2_UNKNOWN may be returned in autoRecoverError.
- ❑ EPOS2_INSERTION_WAIT_SLIP in insertionWaiting does not distinguish between slip sheet insertion for slip printing and endorsement printing.

sendData

Sends the print command and performs printing in the print method specified by [selectPaperType](#).

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2HybridPrinter class.

Syntax

```
- (int) sendData:(long)timeout;
```

Parameter

timeout

Specifies the timeout period before completion of printing in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_ILLEGAL	The control commands have not been buffered. This API was called while no communication had been started.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

beginTransaction

Starts a transaction.

A transaction represents a single printing task such as printing a single sheet of receipt or coupon.

After this API is called, data until the transaction is terminated by [endTransaction](#) will be regarded as a single printing task.

Syntax

- (int) beginTransaction

Return value

If the process succeeds, EPOS2_SUCCESS will be returned.

If the process fails, one of the following values be returned.

Error status	Description
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started. Another transaction had been already started by this function.
EPOS2_ERR_FAILURE	An unknown error occurred.

endTransaction

Ends a transaction.

A transaction represents a single printing task such as printing a single sheet of receipt or coupon.

After [beginTransaction](#) is called, data until the transaction is terminated by this API will be regarded as a single printing task.

Syntax

- (int) endTransaction;

Return value

If the process succeeds, EPOS2_SUCCESS will be returned.

If the process fails, one of the following values be returned.

Error status	Description
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started. This API was called while no transaction had been started.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

Do not execute this API during the period from paper insertion through paper eject during slip, endorsement, validation, and MICR control.

clearCommandBuffer

Clears the command buffer.

The contents buffered in the command buffer are retained until this API is called.

Syntax

- (int) clearCommandBuffer;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.

selectPaperType

Specifies a print method.

Syntax

- (int) selectPaperType:(int)paperType;

Parameter

paperType

Specifies a print method.

Value	Description
EPOS2_PAPER_TYPE_RECEIPT	Receipt printing
EPOS2_PAPER_TYPE_SLIP	Slip printing
EPOS2_PAPER_TYPE_ENDORSE	Endorsement printing
EPOS2_PAPER_TYPE_VALIDATION	Validation printing
EPOS2_PARAM_DEFAULT	Specifies the default (receipt printing).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started. This API was called while waiting for paper insertion. This API was called while paper has already been inserted. This API was called while transmitting data. This API was called while waiting for paper removal.
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_UNSUPPORTED	A print method not supported by the printer was specified.

Supplementary explanation

The print method specified by this API affects [waitInsertion](#) and [sendData](#) APIs.

waitInsertion

Causes the printer to wait for paper insertion.

After running this API, set the paper appropriate for the print method specified by the [selectPaperType](#).

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2HybridPrinter class.

Syntax

- (int) waitInsertion:(long)timeout;

Parameter

timeout

Specifies the timeout period before completion of paper insertion in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

cancellInsertion

Cancels the paper insertion wait status.

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2HybridPrinter class.

Syntax

```
- (int)cancelInsertion;
```

Return value

If the process succeeds, EPOS2_SUCCESS will be returned.

If the process fails, one of the following values be returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	<p>This API was called while no communication had been started.</p> <p>This API was called while receipt printing was specified as the print method.</p> <p>This API was called while not waiting for paper insertion.</p> <p>This API was called while paper has already been inserted.</p> <p>This API was called while reading MICR.</p> <p>This API was called while waiting for paper removal.</p>
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

ejectPaper

Ejects the papers.

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2HybridPrinter class when the eject command has been transmitted to the printer.

Syntax

- (int)ejectPaper;

Return value

If the process succeeds, EPOS2_SUCCESS will be returned.

If the process fails, one of the following values be returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Supplementary explanation

Cannot communicate with the printer until the paper ejected after receiving the callback is removed.

readMicrData

Performs read by MICR.

Inserting a slip sheet after executing this API starts reading MICR.

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2HybridPrinter class.

Syntax

```
- (int)readMicrData:(int)micrFont timeout:(long)timeout;
```

Parameter

micrFont

Specifies the font of characters to read.

Value	Description
EPOS2_MICR_FONT_E13B	Specifies E13B as the read font.
EPOS2_MICR_FONT_CMC7	Specifies CMC7 as the read font.
EPOS2_PARAM_DEFAULT	Specifies the default value (font E13B).

timeout

Specifies the timeout period before completion of MICR reading in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

If the process succeeds, EPOS2_SUCCESS will be returned.

If the process fails, one of the following values be returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_UNSUPPORTED	The printer is not equipped with MICR.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

cleanMicrReader

Cleans the MICR mechanism.

Inserting a cleaning sheet after executing this API starts cleaning the MICR mechanism.

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2HybridPrinter class.

Syntax

```
- (int)cleanMicrReader:(long)timeout;
```

Parameter

timeout

Specifies the timeout period before completion of MICR mechanism cleaning in milliseconds.

Value	Description
Integer from 5000 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

If the process succeeds, EPOS2_SUCCESS will be returned.

If the process fails, one of the following values be returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_UNSUPPORTED	The printer is not equipped with MICR.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

forceRecover

Forcibly sends the error recovery command.

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Syntax

```
- (int) forceRecover:(long)timeout;
```

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Supplementary explanation

- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

forcePulse

Forcibly sends the drawer kick command.

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Syntax

```
- (int) forcePulse:(int)drawer pulseTime:(int)pulseTime
    timeout:(long)timeout;
```

Parameter

drawer

Specifies the drawer kick connector.

Value	Description
EPOS2_DRAWER_2PIN	Drawer kick connector pin No.2
EPOS2_DRAWER_5PIN	Drawer kick connector pin No.5
EPOS2_PARAM_DEFAULT	Specifies the default (drawer kick connector pin No.2).

pulseTime

Specifies the on time of the drawer kick signal.

Value	Description
EPOS2_PULSE_100	100-msec signal
EPOS2_PULSE_200	200-msec signal
EPOS2_PULSE_300	300-msec signal
EPOS2_PULSE_400	400-msec signal
EPOS2_PULSE_500	500-msec signal
EPOS2_PARAM_DEFAULT	Specifies the default (100-msec signal).

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.

Error status	Description
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Supplementary explanation

- ❑ The drawer and optional external buzzer cannot be connected simultaneously.
- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

forceCommand

Forcibly sends the ESC/POS command.

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2Printer class.

Syntax

```
- (int) forceCommand:(NSData *)data timeout:(long)timeout;
```

Parameter

data

Forcibly sends the ESC/POS command.

Specifies the binary data.

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Supplementary explanation

- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

forceReset

Forcibly sends the printer reset command.

The processing result of this API is returned to the callback method set by the [setReceiveEventDelegate](#) API of the Epos2EPOS2 class.

Syntax

```
- (int) forceReset:(long)timeout;
```

Parameter

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 0 to 600000	Timeout period (in milliseconds)
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Supplementary explanation

- ❑ For TM-H6000V, the “Command execution during offline” setting must be enabled.
Refer to TM-H6000V Utility User’s Manual for more information.
- ❑ Available during ePOS-Device XML control.

paperType

Acquires the print method setting information.

Syntax

Getter

`- (int) getPaperType`

Value

Acquires the set print method information.

Value	Description
EPOS2_PAPER_TYPE_RECEIPT	Specifies receipt printing.
EPOS2_PAPER_TYPE_SLIP	Specifies slip printing.
EPOS2_PAPER_TYPE_ENDORSE	Specifies endorsement printing.
EPOS2_PAPER_TYPE_VALIDATION	Specifies validation printing.

Supplementary explanation

The [selectPaperType](#) API is used to change the set value.

interval

Specifies the interval to update the printer status.

Syntax

Setter

- (int) setInterval:(long) interval

Getter

- (long) getInterval

Value

Specifies the interval to update the printer status (in milliseconds). The default value is 3000.

Value	Description
Integer from 1000 to 600000	Interval to update the printer status (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (3000).

Return value

Value	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.

Supplementary explanation

The new set value takes effect upon the next printer status notification.

waitTime

Specifies the time from insertion of a paper to start of insertion operation.

Syntax

Setter

- (int) setWaitTime:(long) time

Getter

- (long) getWaitTime

Value

Default: 500

Value	Description
Integer from 0 to 6400	Specifies the value in milliseconds.
EPOS2_PARAM_DEFAULT	Specifies the default value (500).

Return value

Value	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.

Supplementary explanation

Set values are rounded down to the nearest 100 milliseconds.

Example: 1 -> 0, 101 -> 100, 150 -> 100

mode40Cpl

Enables or disables the 40cpl mode.

Syntax

Setter

- (int) setMode40Cpl:(int) mode

Getter

- (int) getMode40Cpl

Value

Default: 40cpl mode enabled

Value	Description
EPOS2_TRUE	40cpl mode enabled
EPOS2_FALSE	40cpl mode disabled
EPOS2_PARAM_DEFAULT	Specifies the default (40cpl mode enabled).

Return value

Value	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.

Supplementary explanation

This API does not work in the page mode.

setStatusChangeEventDelegate

Registers a callback method for a status change event.

Syntax

```
- (void) setStatusChangeEventDelegate:(id<Epos2HybdStatusChangeDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2HybdStatusChangeDelegate protocol.

Protocol declaration

```
@protocol Epos2HybdStatusChangeDelegate <NSObject>
@required
- (void) onHybdStatusChange:(Epos2HybridPrinter *)HybridPrinter_Obj
    eventType:(int)eventType;
@end
```

Parameter

printerObj

The callback source object is stored.

eventType

The type of the event that occurred is stored.

Event type	Description
EPOS2_EVENT_ONLINE	Online
EPOS2_EVENT_OFFLINE	Offline
EPOS2_EVENT_POWER_OFF	Power off
EPOS2_EVENT_COVER_CLOSE	Cover close
EPOS2_EVENT_COVER_OPEN	Cover open
EPOS2_EVENT_PAPER_OK	Paper remains.
EPOS2_EVENT_PAPER_NEAR_END	Paper has almost run out.
EPOS2_EVENT_PAPER_EMPTY	Paper has run out.
EPOS2_EVENT_DRAWER_HIGH	Drawer kick connector pin No.3 status = "H"
EPOS2_EVENT_DRAWER_LOW	Drawer kick connector pin No.3 status = "L"
EPOS2_EVENT_INSERTION_WAIT_SLIP	Waiting for slip sheet insertion

Event type	Description
EPOS2_EVENT_INSERTION_WAIT_VALIDATION	Waiting for validation sheet insertion
EPOS2_EVENT_INSERTION_WAIT_MICR	Waiting for slip sheet insertion
EPOS2_EVENT_INSERTION_WAIT_NONE	Not waiting for paper insertion
EPOS2_EVENT_REMOVAL_WAIT_PAPER	Waiting for paper removal
EPOS2_EVENT_REMOVAL_WAIT_NONE	Not waiting for paper removal
EPOS2_EVENT_SLIP_PAPER_OK	Paper remains in the paper conveyance route for the slip mechanism
EPOS2_EVENT_SLIP_PAPER_EMPTY	No paper in the paper conveyance route for the slip mechanism

Supplementary explanation

- When this API is run multiple times, the callback method specified later takes effect.
- If nil is specified in delegate when calling this API, the registered callback method is canceled.

setReceiveEventDelegate

Register the callback method for response document receive events.

Syntax

```
- (void)
setReceiveEventDelegate:(id<Epos2HybdReceiveDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2HybdReceiveDelegate protocol.

Protocol declaration

```
@protocol Epos2HybdReceiveDelegate <NSObject>
@required
- (void) onHybdReceive:(Epos2HybridPrinter *)
hybridPrinterObj
method:(int)method
code:(int)code
micrData:(NSString *)micrData
status:(Epos2HybridPrinterStatusInfo *)status
@end
```

Parameter

hybridPrinterObj

The callback source object is stored.

method

The method information is stored.

Code	Description
EPOS2_METHOD_WAITINSERTION	Result of the waitInsertion API
EPOS2_METHOD_SENDDATA	Result of the sendDataAPI
EPOS2_METHOD_CANCELINSERTION	Result of the cancellInsertion API
EPOS2_METHOD_EJECTPAPER	Result of the ejectPaper API
EPOS2_METHOD_READMICRDATA	Result of the readMicrData API
EPOS2_METHOD_CLEANMICRREADER	Result of the cleanMicrReader API

code

The processing result is stored.

Code	Description
EPOS2_CODE_SUCCESS	Processing successful.
EPOS2_CODE_CANCELED	Cancels the insertion wait status.
EPOS2_CODE_PRINTING	Printing
EPOS2_CODE_ERR_AUTOMATICAL	Automatic recovery error occurred.
EPOS2_CODE_ERR_COVER_OPEN	Cover open error occurred.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.
EPOS2_CODE_ERR_MECHANICAL	Mechanical error occurred.
EPOS2_CODE_ERR_EMPTY	No paper is left in the roll paper end detector.
EPOS2_CODE_ERR_UNRECOVERABLE	Unrecoverable error occurred.
EPOS2_CODE_ERR_FAILURE	Error exists in the requested document syntax.
EPOS2_CODE_ERR_NOT_FOUND	Printer specified by the device ID does not exist.
EPOS2_CODE_ERR_SYSTEM	Error occurred with the printing system.
EPOS2_CODE_ERR_PORT	Error was detected with the communication port.
EPOS2_CODE_ERR_TIMEOUT	Timeout occurred.
EPOS2_CODE_ERR_JOB_NOT_FOUND	Specified job ID does not exist.
EPOS2_CODE_ERR_SPOOLER	Print queue is full.
EPOS2_CODE_ERR_TOO_MANY_REQUESTS	Print data exceeding the printer firmware capacity was transmitted.
EPOS2_CODE_ERR_REQUEST_ENTITY_TOO_LARGE	Print data exceeding the maximum capacity per transfer was transmitted.
EPOS2_CODE_ERR_PAPER_PULLED_OUT	Paper removal was detected.
EPOS2_CODE_ERR_CANCEL_FAILED	Failed to cancel waiting for paper insertion.
EPOS2_CODE_ERR_NO_MICR_DATA	A slip sheet out of the standard was inserted.
EPOS2_CODE_ERR_NO_MAGNETIC_DATA	Cannot detect the magnetic waveform.
EPOS2_CODE_ERR_RECOGNITION	A character which cannot be analyzed was detected.
EPOS2_CODE_ERR_READ	Error occurred during MICR read operation.
EPOS2_CODE_ERR_NOISE_DETECTED	Noise error was detected.
EPOS2_CODE_ERR_COVER_OPEN	Cover open error occurred during MICR read operation.
EPOS2_CODE_ERR_PAPER_JAM	Paper jam error occurred during MICR read operation.

Code	Description
EPOS2_CODE_ERR_PAPER_TYPE	Printer operation differs from the specified print method.
EPOS2_CODE_ERR_WAIT_INSERTION	Could not run the process while waiting for paper insertion.
EPOS2_CODE_ERR_ILLEGAL	The function was used in an illegal way.
EPOS2_CODE_ERR_INSERTED	Could not run the process while paper had already been inserted.
EPOS2_CODE_ERR_WAIT_REMOVAL	Could not run the process while waiting for paper removal.
EPOS2_CODE_ERR_DEVICE_BUSY	The specified device is in process and the process cannot be executed.

micrData

MICR read result is stored.

status

Status at the timing when the process was run is stored as the `Epos2PrinterStatusInfo` type.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.
- ❑ When a communication error occurs during ePOS-Device XML control, communication disconnection is not notified.
To notify the disconnection event, implement the [setConnectionEventDelegate](#).
- ❑ When controlling multiple printers at a time, identify which printer has finished printing by comparing the `HybridPrinter` object in the caller and the `hybridPrinterObj` parameter.

Epos2LineDisplay Class

initWithDisplayModel

Initializes the Epos2LineDisplay class.

Syntax

```
- (id) initWithDisplayModel:(int) displayModel;
```

Parameter

displaySeries

Specifies the model name of the target customer display.

Value	Description
EPOS2_DM_D110	DM-D110
EPOS2_DM_D210	DM-D210
EPOS2_DM_D30	DM-D30

Return value

If the process succeeds, an initialized Epos2LineDisplay class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_PARAM	An invalid parameter was specified.
EPOS2_ERR_MEMORY	Memory could not be allocated.

Supplementary explanation

When iterating a process, be sure to generate and destroy instances outside the iterated process and not iterate the process at a short interval.

Memory releasing by the OS may affect the process of the Epson ePOS SDK, resulting in an invalid operation.

connect

Starts communication with the customer display.

Syntax

```
- (int) connect:(NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

The connection method varies according to the system configuration.

- Customer Display Models

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Host name 	"TCP:192.168.192.168"
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> Serial number Omitted 	"USB:00000000000000000000" "USB:"

To connect to the printer via SSL/TLS communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCPS"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Host name 	"TCPS:192.168.192.168[local_dis-play]"

- TM Printer + DM-D30 + barcode scanner model

To connect via Wi-Fi/Ethernet network communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Host name 	"TCP:192.168.192.168[local_disp-lay]"

To connect via *Bluetooth* or *USB*, specify using the following syntax.

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
<i>Bluetooth</i>	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> • Serial number • Omitted 	"USB:00000000000000000000" "USB:"

- POS Terminal Model

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	<ul style="list-style-type: none"> • "TCP" • "TCPS" 	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[local_display]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time. The printer is offline.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Error status	Description
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ Devices other than printers are exclusively locked.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ The device ID is an arbitrary character string that is set when the peripheral device is registered to the TM printer (master).
For details, refer to the Technical Reference Guide of each printer.
- ❑ Depending on the project settings, *Bluetooth* communication may be disconnected if the application runs in the background.
- ❑ If the identifier is omitted in the USB connection, the OS connects with the USB device found first.
If Bluetooth and USB are used simultaneously, priority is given to the USB.
- ❑ This API will succeed regardless of the connection status of the TM printer (master) and peripheral devices.

disconnect

Ends communication with the customer display.

Syntax

- (int) disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- ❑ If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

getStatus

Acquires the current status information.

Syntax

```
- (Epos2DisplayStatusInfo *)getStatus;
```

Return value

The current status is returned in the Epos2DisplayStatusInfo type.

The following status information is stored in the object as a property.

Printer status	Status	Description
connection: Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

- The status object is set to the status at the timing of execution of this API and will not be updated.
- If this function is executed within a callback function, nil will be returned.
- If "FALSE" is returned when connecting a DM-D30, the TM printer is not connected to the terminal.

sendData

Sends the command buffer.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method set by the [setReceiveEventDelegateAPI](#) of the Epos2LineDisplay class.

This API sends data buffered by an add-type API (e.g., [addText](#)).

Syntax

- (int) sendData;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ILLEGAL	The control commands have not been buffered. This API was called while no communication had been started.

clearCommandBuffer

Clears the command buffer.

Syntax

```
- (int) clearCommandBuffer;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.

addInitialize

Initializes the customer display. Initialization changes the customer display status as follows.

- All the displayed characters are erased and all the windows are destroyed.
- Cursor settings are initialized to the default and the cursor position is returned to the origin of the customer display.
- The display blinking and brightness settings are initialized to the default.

Syntax

- (int)addInitialize;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addCreateWindow

Adds window configuration to the command buffer.

Syntax

```
- (int)addCreateWindow:(long)number x:(long)x y:(long)y
width:(long)width height:(long)height scrollMode:(int)
scrollMode;
```

Parameter

number

Specifies the window number.

Value	Description
Integer from 1 to 4	Window number

x

Specifies the x coordinate of the window origin on the customer display.

Value	Description
Integer from 1 to 20	X coordinate on the customer display

y

Specifies the y coordinate of the window origin on the customer display.

Value	Description
Integer from 1 to 2	Y coordinate on the customer display

width

Specifies the window width.

Value	Description
Integer from 1 to 20	Window width

height

Specifies the window height.

Value	Description
Integer from 1 to 2	Window height

scrollMode

Specifies the window scroll mode.

Value	Description
EPOS2_SCROLL_OVERWRITE	When the current display position is at the rightmost position of the upper line, displaying a new character moves the display position to the leftmost position of the lower line. When the current display position is at the rightmost position of the lower line, displaying a new character moves the display position to the leftmost position of the upper line.
EPOS2_SCROLL_VERTICAL	When the current display position is at the rightmost position of the upper line, displaying a new character moves the display position to the leftmost position of the lower line. When the current display position is at the rightmost position of the lower line, displaying a new character scrolls up the characters on the lower line and clears the lower line.
EPOS2_SCROLL_HORIZONTAL	When the current display position is at the rightmost position, displaying a new character scrolls all the characters already displayed on the cursor line to the left by one character and the new character is displayed at the rightmost position.
EPOS2_PARAM_DEFAULT	Specifies the default value (Overwrite).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

To add a window, be careful so that the existing window(s) should not be overlapped by the new window on the customer display.

addDestroyWindow

Adds a command to destroy the defined window to the command buffer.

Syntax

```
- (int)addDestroyWindow:(long)number;
```

Parameter

number

Specifies the number of the window to destroy.

Value	Description
Integer from 1 to 4	Number of the window to destroy

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addSetCurrentWindow

Adds a command to move to another window to the command buffer.

A specified window is displayed and the cursor is moved to the origin of the new window.

Syntax

```
- (int)addSetCurrentWindow:(long)number;
```

Parameter

number

Specifies a window number of a destination window.

Value	Description
Integer from 1 to 4	Window number of a destination window

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addClearCurrentWindow

Adds a window clear command for the current window to the command buffer.

Syntax

```
- (int)addClearCurrentWindow;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addSetCursorPosition

Adds cursor position setting to the command buffer.

Syntax

```
- (int)addSetCursorPosition:(long)x y:(long)y;
```

Parameter

x

Specifies the destination x coordinate.

Value	Description
Integer from 1 to 20	Destination x coordinate

y

Specifies the destination y coordinate.

Value	Description
Integer from 1 to 2	Destination y coordinate

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

Use [addMoveCursorPosition](#) to move within a window.

addMoveCursorPosition

Adds cursor position setting within the current window to the command buffer.

Syntax

```
- (int)addMoveCursorPosition:(int)position;
```

Parameter

position

Specifies the new cursor position within the current window.

Value	Description
EPOS2_MOVE_TOP_LEFT	Sets the new position to the top left edge.
EPOS2_MOVE_TOP_RIGHT	Sets the new position to the top right edge.
EPOS2_MOVE_BOTTOM_LEFT	Sets the new position to the bottom left edge.
EPOS2_MOVE_BOTTOM_RIGHT	Sets the new position to the bottom right edge.
EPOS2_PARAM_DEFAULT	Specifies the default value (top left edge).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addSetCursorType

Adds cursor display setting to the command buffer.

Syntax

```
- (int) addSetCursorType:(int) type;
```

Parameter

type

Specifies the cursor display method.

Value	Description
EPOS2_CURSOR_NONE	No cursor display
EPOS2_CURSOR_UNDERLINE	Underscore
EPOS2_PARAM_DEFAULT	Specifies the default value (no cursor display).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addText

Adds string display setting to the command buffer.

Syntax

- ❑ (int) addText:(NSString *)data;
- ❑ (int) addText:(NSString *)data lang:(int)lang;
- ❑ (int) addText:(NSString *)data x:(long)x y:(long)y;
- ❑ (int) addText:(NSString *)data x:(long)x y:(long)y lang:(int)lang;

Parameter

data

Specifies the string to display.

lang

Specifies the language to display the string.

Value	Description
EPOS2_LANG_EN (default)	English
EPOS2_LANG_JA	Japanese
EPOS2_PARAM_DEFAULT	Specifies the default value (English).

x

Specifies the x coordinate of the display position.

Value	Description
Integer from 1 to 20	X coordinate of the display position

y

Specifies the y coordinate of the display position.

Value	Description
Integer from 1 to 2	Y coordinate of the display position

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.

Error status	Description
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ If the coordinates of the display position are omitted, the coordinates of the cursor position upon execution of addText are used.
- ❑ Parameters x and y specify coordinates with the origin at the top left of the line display.

addReverseText

Adds reverse text display setting to the command buffer.

Syntax

- ❑ (int) addReverseText:(NSString *)data;
- ❑ (int) addReverseText:(NSString *)data lang:(int)lang;
- ❑ (int) addReverseText:(NSString *)data x:(long)x y:(long)y;
- ❑ (int) addReverseText: (NSString *)data x:(long)x y:(long)y lang:(int)lang;

Parameter

data

Specifies the string to display.

lang

Specifies the language to display the string.

Value	Description
EPOS2_LANG_EN (default)	English
EPOS2_LANG_JA	Japanese
EPOS2_PARAM_DEFAULT	Specifies the default value (English).

x

Specifies the x coordinate of the display position.

Value	Description
Integer from 1 to 20	X coordinate of the display position

y

Specifies the y coordinate of the display position.

Value	Description
Integer from 1 to 2	Y coordinate of the display position

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.

Error status	Description
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ If the coordinates of the display position are omitted, the coordinates of the cursor position upon execution of `addText` are used.
- ❑ Parameters x and y specify coordinates with the origin at the top left of the line display.

addMarqueeText

Adds marquee display setting to the command buffer.

The marquee is displayed on a single line in the horizontal scroll mode, without regard to the scroll mode setting of the display window.

Syntax

```
- (int)addMarqueeText:(NSString *)data format:(int)format
unitWait:(long)unitWait repeatWait:(long)repeatWait
repeatCount:(long)repeatCount lang:(int)lang;
```

Parameter

data

Specifies the string to display.

format

Specifies how to display the string.

Value	Description
EPOS2_MARQUEE_WALK	Displays the text from the rightmost position of the window.
EPOS2_MARQUEE_PLACE	Displays the text from the leftmost position of the window.
EPOS2_PARAM_DEFAULT	Specifies the default value (Walk).

unitWait

Specifies the display interval per character (in milliseconds).

Value	Description
Integer from 1 to 2000	Display interval per character (in milliseconds).

repeatWait

Specifies the display repeat interval (in milliseconds).

Value	Description
Integer from 1 to 2000	Display repeat interval (in milliseconds)

repeatCount

Specifies the display repeat count.

Value	Description
Integer from 1 to 127	Display repeat count
0	Unlimited

lang

Specifies the language to display the string.

Value	Description
EPOS2_LANG_EN	English
EPOS2_LANG_JA	Japanese
EPOS2_PARAM_DEFAULT	Specifies the default value (English).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ When using DM-D30 and when using a combination of TM-H6000V with DM-D110/DM-D210, "0" is only allowed in repeatCount.
- ❑ When controlling DM-D30, its marquee display may be distorted if the interval for displaying text is too short due to the characteristics of the LCD.
It is recommended to set unitWait and repeatWait so that the interval for displaying text is 600 msec or longer.

addSetBlink

Adds screen blink setting to the command buffer.

Syntax

```
- (int)addSetBlink:(long)interval;
```

Parameter

interval

Specifies the blink interval (in milliseconds). The setting value is rounded to the nearest 50 milliseconds.

Value	Description
Integer from 1 to 12700	Blink interval (in milliseconds)
0	Continuously lit
EPOS2_PARAM_DEFAULT	Specifies the default (continuously lit).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addSetBrightness

Adds brightness setting of the customer display to the command buffer.

Syntax

```
- (int)addSetBrightness:(int)brightness;
```

Parameter

brightness

Specifies the brightness value of the customer display.

Value	Description
EPOS2_BRIGHTNESS_20	Sets the customer display brightness to 20%.
EPOS2_BRIGHTNESS_40	Sets the customer display brightness to 40%.
EPOS2_BRIGHTNESS_60	Sets the customer display brightness to 60%.
EPOS2_BRIGHTNESS_100	Sets the customer display brightness to 100%.
EPOS2_PARAM_DEFAULT	Specifies the default value (brightness 100%).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

addShowClock

Adds time display setting to the command buffer.

Displaying the time clears all the displayed text. When another command is sent while the time is displayed, the time disappears.

Syntax

```
- (int)addShowClock;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

Not available for DM-D30.

addCommand

Adds the ESC/POS command to the command buffer.

Syntax

```
- (int) addCommand:(NSData *)data;
```

Parameter

data

Specifies the ESC/POS command.

Specifies the binary data.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ Refer to the following URL for details of the ESC/POS command.
https://reference.epson-biz.com/modules/ref_escpos_dm_d_en/
- ❑ Epson ePOS SDK does not check the commands sent using this API.
If the commands interfere with Epson ePOS SDK operations, other APIs may work wrongly or status values may become invalid.
This API should be used with a full understanding of ESC/POS commands and the customer display specifications.

setReceiveEventDelegate

Registers a callback method for a response document reception event.

Syntax

```
- (void)
setReceiveEventDelegate:(id<Epos2DispReceiveDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2DispReceiveDelegate protocol.

Protocol declaration

```
@protocol Epos2DispReceiveDelegate <NSObject>
@required
- (void)onDispReceive:(Epos2LineDisplay *)displayObj
code:(int)code;
@end
```

Parameter

displayObj

The callback source object is stored.

code

The processing result is stored.

Error status	Description
EPOS2_SUCCESS	Display completed.
EPOS2_CODE_ERR_NOT_FOUND	The device was not found.
EPOS2_CODE_ERR_INVALID_WINDOW	An unregistered window was specified.
EPOS2_CODE_ERR_PORT	An internal communication error with the device occurred.
EPOS2_CODE_ERR_TIMEOUT	A timeout error occurred during communication with the device.
EPOS2_CODE_ERR_TOO_MANY_REQUESTS	The number of display data sent to the display has exceeded the allowable limit.
EPOS2_CODE_ERR_AUTORECOVER	Automatic recovery error occurred.
EPOS2_CODE_ERR_COVER_OPEN	Cover open error occurred.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.
EPOS2_CODE_ERR_MECHANICAL:	Mechanical error occurred.

Error status	Description
EPOS2_CODE_ERR_EMPTY	No paper is left in the roll paper end detector.
EPOS2_CODE_ERR_UNRECOVERABLE	Unrecoverable error occurred.
EPOS2_CODE_ERR_BATTERY_LOW	Battery has run out.
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.
- ❑ When a communication error occurs during ePOS-Device XML control, communication disconnection is not notified.

To notify the disconnection event, implement the [setConnectionEventDelegate](#).

Epos2Keyboard class

init

Initializes the Epos2Keyboard class.

Syntax

- (id) init;

Return value

If the process succeeds, an initialized Epos2Keyboard class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_MEMORY	Memory could not be allocated.

Supplementary explanation

When iterating a process, be sure to generate and destroy instances outside the iterated process and not iterate the process at a short interval.

Memory releasing by the OS may affect the process of the Epson ePOS SDK, resulting in an invalid operation.

connect

Starts communication with the keyboard.

Syntax

```
- (int) connect:(NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

The connection method varies according to the system configuration.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	<ul style="list-style-type: none"> • "TCP" • "TCPS" 	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[local_keyboard]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Error status	Description
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ The device ID is an arbitrary character string that is set when the peripheral device is registered to the TM printer (master).
For details, refer to the Technical Reference Guide of each printer.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ This API will succeed regardless of the connection status of the TM printer (master) and peripheral devices.
- ❑ Devices other than printers are exclusively locked.

disconnect

Ends communication with the keyboard.

Syntax

- (int) disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- ❑ If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

getStatus

Acquires the current status information.

Syntax

```
- (Epos2KeyboardStatusInfo *)getStatus;
```

Return value

The current status is returned in the Epos2KeyboardStatusInfo type.

The following status information is stored in the object as a property.

Printer status	Status	Description
connection: Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

- ❑ The status object is set to the status at the timing of execution of this API and will not be updated.
- ❑ If this function is executed within a callback function, nil will be returned.

setPrefix

Sets the list of prefixes for string entry.

Syntax

```
- (int)setPrefix:(NSData *)prefixes;
```

Parameter

prefixes

Specifies the key code arrangement.

Refer to "[Key code list](#)" for the key codes.

Specifying nil disables setPrefix.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

Entering nil or "" (blank) clears the current setting.

getPrefix

Acquires the list of prefixes currently set.

Syntax

```
- (NSData *)getPrefix;
```

Return value

The list of prefixes currently set by setPrefix is returned.

setKeyPressEventDelegate

Registers a callback method for a key press event.

Syntax

```
- (void)
setKeyPressEventDelegate:(id<Epos2KbdKeyPressDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2KbdKeyPressDelegate protocol.

Protocol declaration

```
@protocol Epos2KbdKeyPressDelegate <NSObject>
@required
- (void)onKbdKeyPress:(Epos2Keyboard *)keyboardObj
keyCode:(int)keyCode ascii:(NSString *)ascii;
@end
```

Parameter

keyboardObj

The callback source object is stored.

keyCode

The code of the pressed key is stored.

ascii

The character corresponding to the code of the pressed key is stored. If no character corresponds to the key code, "" (blank character) is stored.

Depending on the keyboard used, double-byte characters may be entered.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.

setReadStringEventDelegate

Registers a callback method which receives characters starting with one of the strings specified by [setPrefix](#) and ending with the Enter key as a string.

Syntax

```
- (void)
setReadStringEventDelegate:(id<Epos2KbdReadStringDelegate
>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2KbdReadStringDelegate protocol.

Protocol declaration

```
@protocol Epos2KbdReadStringDelegate <NSObject>
@required
- (void)onKbdReadString:(Epos2Keyboard *)keyboardObj
readString:(NSString *)readString prefix:(int)prefix;
@end
```

Parameter

keyboardObj

The callback source object is stored.

readString

The detected string is stored.

prefix

Key code recognized as the start of a string is stored.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.

Epos2POSKeyboard class

init

Initializes the Epos2POSKeyboard class.

Syntax

- (id) init;

Return value

If the process succeeds, an initialized Epos2POSKeyboard class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_MEMORY	Memory could not be allocated.

connect

Starts communication with the POS keyboard.

Syntax

```
- (int) connect:(NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

Specify the connection method using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Description
Wi-Fi/Ethernet	<ul style="list-style-type: none"> • "TCP" • "TCPS" 	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[local_pos_keyboard]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Error status	Description
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ The device ID is a logical device name that is set when the POS keyboard is registered to the TM printer (master). For details, refer to the TM-DT Series Peripheral Device Control Guide.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ Devices other than printers are exclusively locked.

disconnect

Ends communication with the POS keyboard.

Syntax

- (int) disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- ❑ If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

getStatus

Acquires the current status information.

Syntax

```
- (Epos2POSKeyboardStatusInfo *)getStatus;
```

Return value

The current status is returned in the Epos2POSKeyboardStatusInfo type.

The following status information is stored in the object as a property.

Keyboard status	Status	Description
connection : Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

The status object is set to the status at the timing of execution of this API and will not be updated.

setKeyPressEventDelegate

Registers the callback method for key press events.

Syntax

```
- (void)
setKeyPressEventDelegate:(id<Epos2POSKeyboardDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2POSKeyboardDelegate protocol.

Protocol declaration

```
@protocol Epos2POSKeyboardDelegate <NSObject>
@required
- (void)onKbdKeyPress:(Epos2POSKeyboard *)keyboardObj
posKeyCode:(int)posKeyCode;
@end
```

Parameter

keyboardObj

The callback source object is stored.

posKeyCode

The code of the pressed key is stored.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.

Epos2BarcodeScanner Class

init

Initializes the Epos2BarcodeScanner class.

Syntax

- (id) init;

Return value

If the process succeeds, an initialized Epos2BarcodeScanner class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_MEMORY	Memory could not be allocated.

Supplementary explanation

When iterating a process, be sure to generate and destroy instances outside the iterated process and not iterate the process at a short interval.

Memory releasing by the OS may affect the process of the Epson ePOS SDK, resulting in an invalid operation.

connect

Starts communication with the barcode scanner.

Syntax

```
- (int) connect:(NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

The connection method varies according to the system configuration.

- TM Printer + DM-D30 + barcode scanner model/

TM Printer + barcode scanner model

To connect via Wi-Fi/Ethernet network communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[local_scanner]"

To connect via *Bluetooth* or USB, specify using the following syntax.

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> • Serial number • Omitted 	"USB:00000000000000000000000000000000" "USB:"

- POS Terminal Model

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	<ul style="list-style-type: none"> • "TCP" • "TCPS" 	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[local_scanner]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ The device ID is an arbitrary character string that is set when the peripheral device is registered to the TM printer (master).
For details, refer to the Technical Reference Guide of each printer.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ If the identifier is omitted in the USB connection, the OS connects with the USB device found first.
- ❑ *If Bluetooth and USB are used simultaneously, priority is given to the USB.*
- ❑ This API will succeed regardless of the connection status of the TM printer (master) and peripheral devices.
- ❑ Set the barcode reader suffix (delimiter) to CR (carriage return code). Data cannot be obtained using any other settings.

- ❑ Devices other than printers are exclusively locked. Do not control the scanner and printer connected to the scanner from multiple applications at the same time.
- ❑ If a combination of TM Printer + barcode scanner is used on a connection established via *Bluetooth*, the barcode data read during printing is notified after the printing is complete.

disconnect

Ends communication with the barcode scanner.

Syntax

- (int) disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- ❑ If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

getStatus

Acquires the current status information.

Syntax

- (Epos2ScannerStatusInfo *)getStatus;

Return value

The current status is returned in the Epos2ScannerStatusInfo type.

The following status information is stored in the object as a property.

Printer status	Status	Description
connection: Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

- ❑ The status object is set to the status at the timing of execution of this API and will not be updated.
- ❑ If this function is executed within a callback function, nil will be returned.
- ❑ When TM printer and a barcode scanner are used together connected via *Bluetooth*, the communication status of the barcode scanner is acquired. If connected in one of the other ways, the status of the printer is acquired.
- ❑ If a combination of TM Printer+ barcode scanner is used on a connection established via *Bluetooth*, the connection status of TM Printer and the barcode scanner is obtained. If the combination is used by some other connection method, the connection status of the smart device and TM Printer is obtained.

setScanEventDelegate

Registers a callback method for a barcode data entry event.

Syntax

```
- (void) setScanEventDelegate:  
    (id<Epos2ScanDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2ScanDelegate protocol.

Protocol declaration

```
@protocol Epos2ScanDelegate <NSObject>  
@required  
- (void) onScanData:(Epos2BarcodeScanner *)scannerObj  
scanData:(NSString *)scanData;  
@end
```

Parameter

scannerObj

The callback source object is stored.

scanData

The detected string is stored.

Supplementary explanation

- When this API is run multiple times, the callback method specified later takes effect.
- If nil is specified in delegate when calling this API, the registered callback method is canceled.
- The notification timing of the barcode data entry event differs depending on how it is connected. Refer to the description of the target parameter of the [connect](#) API for details.

Epos2MSR class

init

Initializes the Epos2MSR class.

Syntax

- (id) init;

Return value

If the process succeeds, an initialized Epos2MSR class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_MEMORY	Memory could not be allocated.

connect

Starts communication with the MSR.

Syntax

```
- (int) connect:(NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

Specify the connection method using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Description
Wi-Fi/Ethernet	<ul style="list-style-type: none"> • "TCP" • "TCPS" 	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[local_msr]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Error status	Description
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ The device ID is set when the MSR is registered to the TM printer (master).
The value differs depending on the control method.

Control method	Device ID	Reference
Device control program	Logical device name	TM-DT Series Peripheral Device Control Guide
Device control script	Arbitrary character string	Technical Reference Guide of the printer

- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ Devices other than printers are exclusively locked.

disconnect

Ends communication with the MSR.

Syntax

- (int) disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- ❑ If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

getStatus

Acquires the current status information.

Syntax

- (Epos2MSRStatusInfo *)getStatus;

Return value

The current status is returned in the Epos2MSRStatusInfo type.

The following status information is stored in the object as a property.

MSR status	Status	Description
connection : Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

The status object is set to the status at the timing of execution of this API and will not be updated.

setDataEventDelegate

Registers a callback method for a card data detection event.

Syntax

```
- (void)
setDataEventDelegate:(id<Epos2MSRDataDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2MSRDataDelegate protocol.

Protocol declaration

```
@protocol Epos2MSRDataDelegate <NSObject>
@required
- (void)onMSRData:(Epos2MSR *)msrObj
data:(Epos2MSRData *)data;
@end
```

Parameter

msrObj

The callback source object is stored.

data

Acquires the read card data.

The result is stored in the Epos2MSRData structure.

Property	Description
(NSString *)track1	Entire data of track 1
(NSString *)track2	Entire data of track 2
(NSString *)track4	Entire data of track 4 (JIS2 track)
(NSString *)accountNumber	Account number
(NSString *)expirationData	Expiration date ("YYMM" format)
(NSString *)surname	Surname
(NSString *)firstName	First Name
(NSString *)middleInitial	Middle name/initial
(NSString *)title	Title
(NSString *)serviceCode	Service code
(NSString *)track1_dd	Arbitrary data of track 1
(NSString *)track2_dd	Arbitrary data of track 2

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.

Epos2SimpleSerial Class

init

Initializes the Epos2SimpleSerial class.

Syntax

- (id) init;

Return value

If the process succeeds, an initialized Epos2SimpleSerial class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_MEMORY	Memory could not be allocated.

Supplementary explanation

When iterating a process, be sure to generate and destroy instances outside the iterated process and not iterate the process at a short interval.

Memory releasing by the OS may affect the process of the Epson ePOS SDK, resulting in an invalid operation.

connect

Starts communication with the serial communication device.

Syntax

```
- (int) connect:(NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

Specify the connection method using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	<ul style="list-style-type: none"> • "TCP" • "TCPS" 	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[local_serial]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Error status	Description
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ The device ID is an arbitrary character string that is set when the peripheral device is registered to the TM printer (master).
For details, refer to the Technical Reference Guide of each printer.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ This API will succeed regardless of the connection status of the TM printer (master) and peripheral devices.
- ❑ Devices other than printers are exclusively locked.

disconnect

Ends communication with the serial communication device.

Syntax

- (int) disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

getStatus

Acquires the current status information.

Syntax

- (Epos2SimpleSerialStatusInfo *)getStatus;

Return value

The current status is returned in the Epos2SimpleSerialStatusInfo type.

The following status information is stored in the object as a property.

Printer status	Status	Description
connection: Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

- ❑ The status object is set to the status at the timing of execution of this API and will not be updated.
- ❑ If this function is executed within a callback function, nil will be returned.

sendCommand

Transfers a command.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method set by the [setReceiveEventDelegateAPI](#) of the Epos2SimpleSerial class.

Syntax

- (int)sendCommand:(NSData *)data;

Parameter

data

Specifies the command.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

setReceiveEventDelegate

Registers a callback method for a reception event from the device.

Syntax

```
- (void)
setReceiveEventDelegate:(id<Epos2SimpleSerialReceiveDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2SimpleSerialReceiveDelegate protocol.

Protocol declaration

```
@protocol Epos2SimpleSerialReceiveDelegate <NSObject>
@required
- (void)onSimpleSerialReceive:(Epos2SimpleSerial *)serialObj
data:(NSData *)data;
@end
```

Parameter

serialObj

The callback source object is stored.

data

Receives reception data.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.
- ❑ When a communication error occurs during ePOS-Device XML control, communication disconnection is not notified.

To notify the disconnection event, implement the [setConnectionEventDelegate](#).

Epos2GermanyFiscalElement Class

init

Initializes the Epos2GermanyFiscalElement class.

Syntax

- (id) init;

Return value

If the process succeeds, an initialized Epos2GermanyFiscalElement class instance will be returned.

If the process fails, nil will be returned. The process fails. The cause may be due to the following reasons:

Error status	Description
EPOS2_ERR_MEMORY	Memory could not be allocated.

Supplementary explanation

When iterating a process, be sure to generate and destroy instances outside the iterated process and not iterate the process at a short interval.

Memory releasing by the OS may affect the process of the Epson ePOS SDK, resulting in an invalid operation.

connect

Starts communication with the German fiscal element (TSE).

Syntax

```
- (int) connect: (NSString *) target
    timeout: (long) timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

The connection method varies according to the system configuration.

- TM Printer Models

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Printer host name 	"TCP:192.168.192.168"
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> • Serial number • Omitted 	"USB:00000000000000000000000000000000" "USB:"

- Customer Display Models

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Printer host name 	"TCP:192.168.192.168"
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> • Serial number • Omitted 	"USB:00000000000000000000000000000000" "USB:"

To connect to the printer via SSL/TLS communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCPS"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Printer host name 	"TCPS:192.168.192.168[local_TS E]"

- TM Printer + DM-D30 + barcode scanner model/

TM Printer + barcode scanner model

To connect via Wi-Fi/Ethernet network communication, specify using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	"TCP"	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Printer host name 	"TCP:192.168.192.168[local_TSE]"

The device ID is fixed as [local_TSE].

To connect via *Bluetooth* or USB, specify using the following syntax.

<connection type>:<identifier>

I/F	Connec-tion type	Identifier	Example
Bluetooth	"BT"	BD address	"BT:00:22:15:7D:70:9C"
USB	"USB"	<ul style="list-style-type: none"> Serial number Omitted 	"USB:00000000000000000000000000000000" "USB:"

- POS Terminal Model

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	<ul style="list-style-type: none"> "TCP" "TCPS" 	<ul style="list-style-type: none"> IP address in IPv4 format MAC address Printer host name 	"TCP:192.168.192.168[local_TSE]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_ILLEGAL	Tried to start communication with a printer with which communication had been already established.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.

Supplementary explanation

- ❑ When communication with the printer is no longer necessary, be sure to call [Disconnect](#) to terminate it.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ The printer status is returned to the event registered with the Epos2GermanyFiscalElement class.
For details, refer to Chapter 2 "Programming Flow" and Chapter 6 "To use the same printer from multiple mobile devices."
- ❑ The device ID is an arbitrary character string that is set when the peripheral device is registered to the TM printer (master).
For details, refer to the Technical Reference Guide of each printer.
- ❑ If you are using DHCP to assign the IP address of the printer, specify the MAC address or host name of the printer as the identifier.

- ❑ If you specify the host name of the printer as the identifier, use in the environment where it can be found by the DNS server.
- ❑ When connecting with the printer using *Bluetooth*, complete pairing before calling the connect command.
- ❑ Depending on the project settings, *Bluetooth* communication may be disconnected if the application runs in the background.
- ❑ If the identifier is omitted in the USB connection, the OS connects with the USB device found first.
- ❑ If *Bluetooth* and USB are used simultaneously, priority is given to the USB.
- ❑ This API will succeed regardless of the connection status of the TM printer (master) and peripheral devices.

disconnect

Ends communication with the German fiscal element (TSE).

Syntax

- (int)disconnect;

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- ❑ If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

getStatus

Acquires the connection status with the German fiscal element (TSE).

Syntax

- (Epos2GermanyFiscalElementStatusinfo *) getStatus;

Return value

The current status is returned in the Epos2GermanyFiscalElementStatusinfo type.

The following status information is stored in the object as a property.

Printer status	Status	Description
connection: Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

- ❑ The status object is set to the status at the timing of execution of this API and will not be updated.
- ❑ If this function is executed within a callback function, nil will be returned.

operate

Sends the JSON string to the German fiscal element (TSE).

The processing result of the devices using this API is returned to the callback method set by [setReceiveEventDelegate](#) of the Epos2GermanyFiscalElement class.

Syntax

```
- (int) operate: (NSString *) jsonString
           timeout: (long) timeout;
```

Parameter

jsonString

Specifies the JSON string to be sent to the German fiscal element (TSE).

timeout

Specifies the timeout period before completion of command transmission in milliseconds.

Value	Description
Integer from 5000 to 120000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (10000).

Return value

The result of the API is returned.

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- ❑ If this API is executed during the printer processing, EPOS2_ERR_PROCESSING will occur.
Execute this API after receiving the callback for process completion.
- ❑ If nil is specified in the JSON string, or if the size of the jsonString to be sent is 64 KByte or more, EPOS2_ERR_PARAM is returned as the return value.

setReceiveEventDelegate

Registers the callback method for response document receive events.

Syntax

```
- (void) setReceiveEventDelegate:  
    (id<Epos2GermanyFiscalElementReceiveDelegate>) delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2GermanyFiscalElementReceiveDelegate protocol.

Protocol declaration

```
(void)  
onGfeReceive:(Epos2GermanyFiscalElement  
*)germanyFiscalObj code:(int)code  
data:(NSString *)data
```

Parameter

germanyFiscalObj

The callback source object is stored.

code

The processing result is stored.

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_CODE_ERR_PORT	Error was detected with the communication port.
EPOS2_CODE_ERR_GET_JSON_SIZE	Failed to acquire the JSON string.
EPOS2_CODE_ERR_AUTORECOVER	Automatic recovery error occurred.
EPOS2_CODE_ERR_UNRECOVERABLE	Unrecoverable error occurred.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.
EPOS2_CODE_ERR_MECHANICAL	Mechanical error occurred.
EPOS2_CODE_ERR_NOT_FOUND	The device was not found.
EPOS2_CODE_ERR_DEVICE_BUSY	The specified device is in process and the process cannot be executed.

data

The processing result is stored in the JSON string.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.

Epos2OtherPeripheral class

init

Initializes the Epos2OtherPeripheral class.

Syntax

- (id) init;

Return value

If the process succeeds, an initialized Epos2OtherPeripheral class instance will be returned.

If the process fails, nil will be returned. The process fails. The cause may be due to the following reasons:

Error status	Description
EPOS2_ERR_MEMORY	Memory could not be allocated.

connect

Starts communication with the peripheral device.

Syntax

```
- (int)connect: (NSString *)target timeout:(long)timeout;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

Specify the connection method using the following syntax.

<connection type>:<identifier>[<device ID>]

I/F	Connec-tion type	Identifier	Description
Wi-Fi/Ethernet	<ul style="list-style-type: none"> • "TCP" • "TCPS" 	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[local_other]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_CONNECT	Failed to open the device.
EPOS2_ERR_MEMORY	Sufficient memory required for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_NOT_FOUND	The device could not be found.

Error status	Description
EPOS2_ERR_IN_USE	The device was in use.
EPOS2_ERR_TYPE_INVALID	The device type is different.
EPOS2_ILLEGAL	Tried to start communication with a printer with which communication had been already established.

Supplementary explanation

- ❑ The device ID is a logical device name that is set when the peripheral device is registered to the TM printer (master).
For details, refer to the TM-DT Series Peripheral Device Control Guide.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [disconnect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.
- ❑ Devices other than printers are exclusively locked.

disconnect

Ends communication with the peripheral device.

Syntax

- (int)disconnect;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to end communication where it had not been established.
EPOS2_ERR_MEMORY	Necessary memory could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_DISCONNECT	Failed to disconnect the device.

Supplementary explanation

- ❑ If disconnect is conducted during an application background transition event process, wait until disconnect completes.
- ❑ When using multi-threading to connect to multiple printers or peripheral devices, this API and [connect](#) cannot be started for other printers or peripheral devices until this API finishes processing. Start the next process after this API finishes processing.

getStatus

Acquires the current status information.

Syntax

```
- (Epos2OtherPeripheralStatusInfo *)getStatus;
```

Return value

The current status is returned in the Epos2OtherPeripheralStatusInfo type.

The following status information is stored in the object as a property.

Device status	Status	Description
connection : Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

The status object is set to the status at the timing of execution of this API and will not be updated.

sendData

Sends data to the peripheral device. Specifies the arbitrary function of the device control program side, and passes JSON data made from a set of the property name and value.

For details, refer to the TM-DT Series Peripheral Device Control Guide.

Syntax

```
- (int)sendData:(NSString *)methodName data:NSString
           *)data;
```

Parameter

methodName

Specifies the function name to be executed.

data

Specifies the parameter to be passed to the function in JSON string.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_MEMORY	Sufficient memory required for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

setReceiveEventDelegate

Registers a callback method for a notification of reception data from the peripheral device event.

Syntax

```
- (void)
setReceiveEventDelegate:(id<Epos2OtherReceiveDelegate>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2OtherReceiveDelegate protocol.

Protocol declaration

```
@protocol Epos2OtherReceiveDelegate <NSObject>
@required
- (void)onOtherReceive:(Epos2OtherPeripheral *)otherObj
eventName:(NSString *)eventName data:(NSString *)data;
@end
```

Parameter

otherObj

The callback source object is stored.

eventName

The event name is stored.

data

Reception data is stored in the JSON string.

Supplementary explanation

- When this API is run multiple times, the callback method specified later takes effect.
- If nil is specified in delegate when calling this API, the registered callback method is canceled.

Epos2CommBox Class

init

Initializes the Epos2CommBox class.

Syntax

- (id) init;

Return value

If the process succeeds, an initialized Epos2CommBox class instance will be returned.

If the process fails, nil will be returned. The process may fail due to the following reasons:

Error status	Description
EPOS2_ERR_MEMORY	Memory could not be allocated.

Supplementary explanation

When iterating a process, be sure to generate and destroy instances outside the iterated process and not iterate the process at a short interval.

Memory releasing by the OS may affect the process of the Epson ePOS SDK, resulting in an invalid operation.

connect

Starts communication with the communication box.

Syntax

```
- (int)connect: (NSString *)target timeout:(long)timeout
myId:(NSString *)myId;
```

Parameter

target

Specifies the method of connecting to the printer by a character string.

Specify the connection method using the following syntax.

<connection type>:<identifier>[<box ID>]

I/F	Connec-tion type	Identifier	Example
Wi-Fi/Ethernet	<ul style="list-style-type: none"> • "TCP" • "TCPS" 	<ul style="list-style-type: none"> • IP address in IPv4 format • MAC address • Host name 	"TCP:192.168.192.168[Box1]"

To connect to the printer via SSL/TLS communication, specify TCPS in the connection type.

timeout

Specifies the maximum time (in milliseconds) to wait for communication with the printer to be established.

Value	Description
Integer from 1000 to 300000	Maximum wait time before an error is returned (in milliseconds).
EPOS2_PARAM_DEFAULT	Specifies the default value (15000).

myId

Specifies a member ID to identify the application itself in the communication box.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Could not open the device.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.

Error status	Description
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ALREADY_OPENED	Communication box is already open.
EPOS2_ERR_ALREADY_USED	Specified member ID is already in use.
EPOS2_ERR_BOX_COUNT_OVER	The number of created communication boxes has exceeded the upper limit.
EPOS2_ERR_BOX_CLIENT_OVER	The number of members belong to the communication box has exceeded the upper limit.

Supplementary explanation

- ❑ This API will succeed regardless of the connection status of the TM printer (master) and peripheral devices.
- ❑ Devices other than printers are exclusively locked.

disconnect

Ends communication with the communication box.

Syntax

- (int)disconnect;

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Supplementary explanation

If disconnect is conducted during an application background transition event process, wait until disconnect completes.

getStatus

Acquires the current status information.

Syntax

- (Epos2CommBoxStatusInfo *)getStatus;

Return value

The current status is returned in the Epos2CommBoxStatusInfo type.

The following status information is stored in the object as a property.

Printer status	Status	Description
connection: Connection status	EPOS2_TRUE	Connected
	EPOS2_FALSE	Disconnected

Supplementary explanation

- ❑ The status object is set to the status at the timing of execution of this API and will not be updated.
- ❑ If this function is executed within a callback function, nil will be returned.

getCommHistory

Acquires the transmission history of the communication box.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method.

Syntax

```
- (int)getCommHistory:(id<Epos2GetCommHisotoryDelegate>)
delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2GetCommHistoryDelegate protocol.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_CONNECT	Communication failed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Protocol declaration

```
@protocol Epos2GetCommHistoryDelegate <NSObject>
@required
- (void)onGetCommHistory:(Epos2CommBox *)commBoxObj
code:(int)code historyList:(NSArray *)historyList;
@end
```

Parameter

commBoxObj

The callback source object is stored.

code

Error status	Description
EPOS2_SUCCESS	Processed successfully.
EPOS2_CODE_FAILURE	An unknown error occurred.

historyList

The transmission history of the communication box is stored.

(NSDictionary *)historyList[index]	
Key	Description
(NSString *)senderId	The member ID of the transmitter is stored. If no member ID was specified when running the connect method, "" (blank character) is set.
(NSString *)receiverId	The member ID of the receiver is stored. If data was sent to all the members of the communication box, "" (blank character) is set.
(NSString *)message	Received data is set.

sendMessage

Sends a message to the communication box.

The return value of this API is the result of sending data to the devices.

The processing result of the devices using this API is returned to the callback method.

Syntax

```
- (int)sendMessage:(NSString *)message targetId:(NSString *)targetId
delegate:(id<Epos2CommBoxSendMessageDelegate>)delegate;
```

Parameter

message

Specifies data to send to the communication box.

targetId

Specifies the member ID of the receiver.

When nil or "" (blank character) is specified, data is sent to all the members other than the transmitter.

delegate

Specifies an object conforming to the Epos2CommBoxSendMessageDelegate protocol.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.
EPOS2_ERR_ILLEGAL	This API was called while no communication had been started.

Protocol declaration

```
@protocol Epos2CommBoxSendMessageDelegate <NSObject>
@required
- (void) onCommBoxSendMessage:(Epos2CommBox
*)commBoxObj code:(int)code count:(long)count;
@end
```

Parameter**commBoxObject**

The callback source object is stored.

code

Error status	Description
EPOS2_CODE_SUCCESS	Processed successfully.
EPOS2_CODE_ERR_NOT_FOUND	Specified member ID cannot be found.
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.

count

Number of clients which tried to send the message is stored.

setReceiveEventDelegate

Registers a callback method for a message reception event of the communication box.

Syntax

```
- (void)
setReceiveEventDelegate:(id<Epos2CommBoxReceiveDelegate
>)delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2CommBoxReceiveDelegate protocol.

Protocol declaration

```
@protocol Epos2CommBoxReceiveDelegate <NSObject>
@required
- (void)onCommBoxReceive:(Epos2CommBox
*)commBoxObj senderId:(NSString *)senderId
receiverId:(NSString *)receiverId message:(NSString
*)message;
@end;
```

Parameter

commBoxObj

The callback source object is stored.

SenderId

The member ID of the transmitter is stored.

If no member ID was specified when running the connect method, "" (blank character) is set.

receiverId

The member ID of the receiver is stored.

If data was sent to all the members of the communication box, "" (blank character) is set.

message

The received message is stored.

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
 - ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.
 - ❑ When a communication error occurs during ePOS-Device XML control, communication disconnection is not notified.
- To notify the disconnection event, implement the [setConnectionEventDelegate](#).

Common to all classes

getAdmin

Acquires the administrator name set with printer.

Syntax

```
-(NSString *)getAdmin;
```

Return value

A string for the administrator name.

Supplementary explanation

- If not set, "" (blank character) is returned for the TM printer.
- The administrator name is set by EPSON TMNet WebConfig.
- This API cannot be used with *Bluetooth* communication.

getLocation

Acquires the installation location information set with printer.

Syntax

```
- (NSString *)getLocation;
```

Return value

A string for the installation location.

Supplementary explanation

- If not set, "" (blank character) is returned for the TM printer.
- The installation location information is set by EPSON TMNet WebConfig.
- This API cannot be used with *Bluetooth* communication.

setConnectionEventDelegate

Registers a callback method which receives a notification that the reconnection process has been started.

Syntax

```
- (void)
setConnectionEventDelegate:(id<Epos2ConnectionDelegate>)
delegate;
```

Parameter

delegate

Specifies an object conforming to the Epos2ConnectionDelegate protocol.

Protocol declaration

```
@protocol Epos2ConnectionDelegate <NSObject>
@required
- (void) onConnection:(id)deviceObj
eventType:(int)eventType;
@end
```

Parameter

deviceObj

The callback source object is stored.

eventType

The type of the event that occurred is stored.

Event type	Description
EPOS2_EVENT_RECONNECTING	Reconnection start event
EPOS2_EVENT_RECONNECT	Reconnection completion event
EPOS2_EVENT_DISCONNECT	Disconnection event

Supplementary explanation

- ❑ When this API is run multiple times, the callback method specified later takes effect.
- ❑ If nil is specified in delegate when calling this API, the registered callback method is canceled.
- ❑ It takes about 30 seconds for the disconnection event to occur after the disconnection.
- ❑ Do not make any call operation when EPOS2_EVENT_RECONNECTING has occurred.
Wait until EPOS2_EVENT_RECONNECT or EPOS2_EVENT_DISCONNECT occurs.
- ❑ EPOS2_EVENT_DISCONNECT occurs in the following cases:
 - When disconnect is running
 - When connection fails after occurrence of EPOS2_EVENT_RECONNECTING
- ❑ When EPOS2_EVENT_DISCONNECT occurs, it is not necessary to call disconnect.
When disconnect is called, ERR_ILLEGAL will be returned in the return value.

Epos2Discovery Class

start

Starts searching for the specified device type.

Each device is reported by the callback as it is detected.

Syntax

```
+ (int) start:(Epos2FilterOption *)filterOption
delegate:(id<Epos2DiscoveryDelegate>)delegate;
```

Parameter

filterOption

In order to filter the search result, set the filter option in the Epos2FilterOption type and specify it in the parameter. When nil is specified, search is run with the default settings.

The following information is stored in the Epos2FilterOption type.

portType

Selects the port to search.

Value	Description
EPOS2_PORTTYPE_ALL (default)	Search for all devices which can be connected via TCP and <i>Bluetooth</i> .
EPOS2_PORTTYPE_TCP	Search for devices connected to the network.
EPOS2_PORTTYPE_BLUETOOTH	Search for devices which can be connected via <i>Bluetooth</i> .
EPOS2_PORTTYPE_USB	Search for devices which can be connected via USB.

broadcast

Specify a Broadcast Address for TCP search as a string.

Value	Description
"255.255.255.255" (default)	-

deviceModel

Specifies the device model to search for.

Value	Description
EPOS2_MODEL_ALL	Search for all models.

deviceType

Specifies the device type to search for.

Value	Description
EPOS2_TYPE_ALL (default)	Search for all devices.

Value	Description
EPOS2_TYPE_PRINTER	Search for printers.
EPOS2_TYPE_HYBRID_PRINTER	Searches for hybrid model printers.
EPOS2_TYPE_DISPLAY	Search for customer displays.
EPOS2_TYPE_KEYBOARD	Search for keyboards.
EPOS2_TYPE_SCANNER	Search for barcode scanners.
EPOS2_TYPE_SERIAL	Search for serial communication devices.
EPOS2_TYPE_POS_KEYBOARD	Search for the POS keyboard.
EPOS2_TYPE_MSR	Search for the MSR.
EPOS2_TYPE_GFE	Search for the German fiscal element (TSE).
EPOS2_TYPE_OTHER_PERIPHERAL	Search for other peripheral devices.

delegate

Specifies an object conforming to the Epos2DiscoveryDelegate protocol.

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_ILLEGAL	Tried to start search when search had been already done.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_ERR_FAILURE	An unknown error occurred.
EPOS2_ERR_PROCESSING	Could not run the process.

Protocol declaration

```
@protocol Epos2DiscoveryDelegate <NSObject>
@required
- (void)onDiscovery:(Epos2DeviceInfo *)deviceInfo;
@end
```

Parameter**deviceInfo**

The device information of the detected device is stored in the Epos2DeviceInfo type.

The following device information is stored.

deviceType

The device type is stored.

Device type	Status
For a printer	EPOS2_TYPE_PRINTER
For hybrid model printers	EPOS2_TYPE_HYBRID_PRINTER
For a customer display	EPOS2_TYPE_DISPLAY
For a keyboard	EPOS2_TYPE_KEYBOARD
For a barcode scanner	EPOS2_TYPE_SCANNER
For a serial communication device	EPOS2_TYPE_SERIAL
For POS keyboard	EPOS2_TYPE_POS_KEYBOARD
For MSR	EPOS2_TYPE_MSR
For German fiscal element (TSE)	EPOS2_TYPE_GFE
For other peripheral devices	EPOS2_TYPE_OTHER_PERIPHERAL

target

The connection target of a device which can be specified by connectAPI is stored as a string.

Example)

```
"TCP:192.168.192.168"
"BT:00:22:15:7D:70:9C"
"USB:000000000000000000000000"
"TCP:192.168.192.168[local_printer]"
"TCP:192.168.192.168[local_display]"
"TCP:12:34:56:78:56:78"
```

deviceName

The name set to the device is stored.

If it could not be acquired, "" (blank character) is stored.

Example)

For a printer: "TM-T88V"

ipAddress

The IP address is stored.

If it could not be acquired, "" (blank character) is stored.

Example)

TCP: "192.168.192.168"

BT: ""(blank character)

macAddress

The MAC address is stored.

If it could not be acquired, "" (blank character) is stored.

Example)

TCP: "12:34:56:78:56:78"

BT: ""(blank character)

bdAddress

The BD address is stored.

If it could not be acquired, "" (blank character) is stored.

Example)

TCP: ""(blank character)

BT: "12:34:56:78:56:78"

Supplementary explanation

- ❑ The search result of this API is reported to the callback function for each device detected.
An already opened device is also reported. However, an already opened *Bluetooth* device is not reported.
- ❑ In search for TCP devices, if multiple devices with the same IP address exist, the device information is treated as a single device. Consistency for such device information is not guaranteed.
- ❑ If the printer has its TCP address and TCPS address, and the both are detected, only the TCPS address is reported to the callback function.
- ❑ Hybrid model printers can be detected as deviceType of EPOS2_TYPE_PRINTER and EPOS2_TYPE_HY-BRID_PRINTER.
- ❑ After the search begins and the process ends, make sure to end the search.

stop

Stops search.

Syntax

```
+ (int) stop;
```

Return value

Error status	Description
EPOS2_SUCCESS	The function was executed successfully.
EPOS2_ERR_ILLEGAL	Tried to stop a search while it had not been started.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

After the search begins and the process ends, make sure to end the search.

Epos2Log Class

setLogSettings

Sets the log output function.

Syntax

```
+ (int) setLogSettings:(int) period output:(int) output
    ipAddress:(NSString *)ipAddress port:(int)port
    logSize:(int)logSize logLevel:(int)logLevel;
```

Parameter

period

Specifies whether the log output function setting is temporary or permanent.

The configuration file is not created for temporary setting but is created for permanent setting.

Value	Description
EPOS2_PERIOD_TEMPORARY	Temporarily reflects the setting.
EPOS2_PERIOD_PERMANENT	Permanently reflects the setting.

output

Enables or disables the log output function and specifies the log output location.

Value	Description
EPOS2_OUTPUT_DISABLE	Disables the log output function.
EPOS2_OUTPUT_STORAGE	Output to the storage of the terminal.
EPOS2_OUTPUT_TCP	Output via TCP.

ipAddress

Specifies the IP address for TCP communication.

Specifies the IP address in the IPv4 format.

nil can be specified when the log output function is disabled or the log is output to the storage of the terminal.

port

Specifies the port number for TCP communication.

Also specifies a value within the valid range even when the log output function is disabled or the log is output to the storage of the terminal.

Value	Description
Integer from 0 to 65535	Port number

logSize

Specifies the maximum capacity of the log stored in the storage.

Also specifies a value within the valid range even when the log output function is disabled or the log is output to TCP.

Value	Description
Integer from 1 to 50	Maximum capacity of the log stored (in MB)

logLevel

Specifies the log output level.

Value	Description
EPOS2_LOGLEVEL_LOW	Low level

Return value

Error status

If the process succeeds, EPOS2_SUCCESS will be returned.

If the process fails, one of the following values be returned.

Error status	Description
EPOS2_ERR_PARAM	An invalid parameter was passed.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

When setting output to EPOS2_OUTPUT_STORAGE, enable the file sharing setting of iTunes. Follow the procedure below.

1. Add "UIFileSharingEnabled" to nfo.plist of the application. Automatically changed to "Application supports iTunes file sharing".
2. Set Value of "Application supports iTunes file sharing" to "YES".

SdkVersion

Acquires the Epson ePOS SDK version.

Syntax

Getter

`- (NSString) getSdkVersion`

Supplementary explanation

The version of SDK used can be acquired as a character string.

Example: "Ver.2.0.0"

Epos2BluetoothConnection Class

connectDevice

Shows a list of *Bluetooth* devices available for pairing and pairs a selected device with the terminal.
Acquires the *Bluetooth* address of the printer newly paired with the terminal.

Syntax

```
- (int) connectDevice:(NSMutableString *) macAddress;
```

Parameter

macAddress

The BD address of the printer newly paired is returned.

Format	Description
BT:00:11:22:33:44:55	Separated by ":" (colon).

Return value

The result of the API is returned.

Error status	Description
EPOS2_BT_SUCCESS	The function was executed successfully.
EPOS2_BT_ERR_PARAM	An invalid parameter was passed.
EPOS2_BT_ERR_UNSUPPORTED	The function was executed on an unsupported OS.
EPOS2_BT_ERR_CANCEL	Pairing connection was canceled.
EPOS2_BT_ERR_ALREADY_CONNECT	A printer already paired was selected.
EPOS2_BT_ERR_ILLEGAL_DEVICE	An invalid device was selected.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

- Use this API before calling [connect](#) API.
- This API is supported by iOS7.0 or later only.
- When using on an iOS terminal with the arm64 architecture, add "arm64" to the architectures used to build the application.
- Complete pairing and connecting with the *Bluetooth* device, and then start the application, or use `connectDevice` API to establish pairing and connection with the device.

disconnectDevice

Disconnects from a *Bluetooth* device paired with the terminal.

Syntax

```
- (int) disconnectDevice:(NSString *) macAddress;
```

Parameter

macAddress

Specify the BD address of a paired printer to disconnect.

Format	Description
BT: 00:11:22:33:44:55	Separated by ":" (colon).
BT: 00-11-22-33-44-55	Separated by "-" (hyphen).
BT: 001122334455	No separation

Return value

The result of the API is returned.

Error status	Description
EPOS2_BT_SUCCESS	The function was executed successfully.
EPOS2_BT_ERR_PARAM	An invalid parameter was passed.
EPOS2_BT_ERR_CONNECT	A communication error occurred.
EPOS2_BT_ERR_MEMORY	Memory necessary for processing could not be allocated.
EPOS2_BT_ERR_ILLEGAL	The function was used in an illegal way.
EPOS2_BT_ERR_UNSUPPORTED	The function was used with an unsupported printer.
EPOS2_ERR_FAILURE	An unknown error occurred.

Supplementary explanation

Use this API after calling [disconnect](#) API.

EasySelect Class

parseNFC

Analyzes NFC tags data.

Syntax

```
- (NSArray<EposEasySelectInfo *> *)  
parseNFC:(NFCNDEFMessage *)message  
timeout:(long)timeout
```

Parameter

message

Specifies the NDEF message of the acquired NFC tag.

NDEF message to be analyzed	Description
Network data	For Network (uniquely defined data)
BTSSP	For <i>Bluetooth</i> (NFR standard)

timeout

Specifies the wait time for a NFC tag to be analyzed.

Value	Description
Integer from 0 to 60000	Wait time for analysis (in msec units)
PARSE_NFC_TIMEOUT_DEFAULT	Specifies the default value (500).

Return value

The NFC tag analysis result is stored in NSArray and returned to the member variables of the EasySelectInfo class.

When the analysis has failed, nil is returned.

Supplementary explanation

- ❑ Import CoreNFC.framework for using this API.
- ❑ nil or "" (blank) will be returned if information for the member variables of the EasySelectInfo class cannot be acquired from the message.
- ❑ If nil or "" (blank) is returned to analysis data, refer to the following.

Status	Cause	Countermeasure
nil or "" (blank) is returned to EasySelectInfo.printerName	Printer name information is not included in the NFC tag.	Define the printer name information in the NFC tag.

Status	Cause	Countermeasure
"" (blank) is returned to EasySelect-Info.macAddress	<ul style="list-style-type: none">Communication with the printer is terminated.Timeout occurred for the MAC address response from the printer.	Check if there is no problem in the connection and power of the printer.

parseQR

Analyzes QR tags data.

Syntax

- (EposEasySelectInfo*) parseQR:(NSString *)data

Parameter

data

Specifies QR code data that has been read by using iOS API.

Return value

The QR code analysis result is returned to the member variables of the EasySelectInfo class.

When the analysis has failed, nil is returned.

Supplementary explanation

Create the QR code using [createQR](#) API and print it to be read.

Some printers can print the QR code on a status sheet. For details, refer to the Technical Reference Guide of the printer.

createQR

Creates QR code data that can be analyzed by [parseQR](#).

Syntax

```
- (NSString *) createQR:(NSString *)printerName
DeviceType:(int)deviceType
MacAddress(NSString *):macAddress
```

Parameter

printerName

Specifies a printer name.

deviceType

Specifies a printer type.

Value	Description
EPOS_EASY_SELECT_DEVTYPE_TCP	Slave printer (wired / wireless)
EPOS_EASY_SELECT_DEVTYPE_BLUETOOTH	Bluetooth compatible printer

macAddress

Specifies a MAC address (for a slave printer), or a BD address (for a Bluetooth compatible printer). The following shows the address format.

Format	Description
00:11:22:33:44:55	Separate the digits by colons.
00-11-22-33-44-55	Separate the digits by hyphens.
001122334455	No separation

Return value

QR code print data is returned. Specify this data by [addSymbol](#) to print the QR code.

When failed to create the print data, nil is returned.

Supplementary explanation

To see the printer name, MAC address, and BD address, print a status sheet from the printer.

For instructions on how to print the status sheet, refer to the Technical Reference Guide of the printer.

parseBeacon

Analyzes printer information in iBeacon data.

Syntax

```
- (EposEasySelectInfo *) parseBeacon:(CLBeacon *)beacon
```

Parameter

beacon

Specifies iBeacon data acquired by CLLocationManager of iOS.

Return value

The iBeacon data analysis result is returned to the member variables of the EasySelectInfo class.

Item	Description
deviceType	Fixed to EASY_SELECT_DEVTYPE_TCP.
printerName	Printer name. Returns a blank when the analysis failed.
macAddress	Fixed to nil.
target	Returns the IP address in the IPv4 format. Returns a blank if the address format is other than IPv4, or the iOS device is not connected to the network.

Supplementary explanation

- ❑ Use this command only when the iOS device and the printer are in the same network.
If the printer is connected to a different network, the printer cannot be selected using the information of EasySelectInfo class.
- ❑ Import CoreLocation.framework for using this API.

EasySelectInfo Class

deviceType

Stores printer type information.

Stored data	Description
EPOS_EASY_SELECT_DEVTYPE_TCP	Slave printer
EPOS_EASY_SELECT_DEVTYPE_BLUETOOTH	<i>Bluetooth</i> compatible printer

Syntax

```
int deviceType;
```

printerName

Stores printer name information.

Syntax

```
NSString *printerName;
```

macAddress

Stores a MAC address or a BD address.

Syntax

```
NSString *macAddress;
```

target

Stores analyzed target information.

Syntax

```
NSString *target;
```

Status list

Error Status and countermeasures

Error Status	Cause	Countermeasure
EPOS2_ERR_PARAM	An invalid parameter was passed. <Example> A value outside the supported range was specified.	Check the value specified in the parameter.
EPOS2_ERR_CONNECT	Failed to communicate with the device. <Example> Failed to connect to the printer.	Run disconnect for the appropriate class and then connect to restore communication. To connect via <i>Bluetooth</i> , establish a pairing connection with connectDevice, and then perform the process described above.
EPOS2_ERR_TIMEOUT	Failed to communicate with the devices within the specified time.	Check the timeout period. Set the timeout period to longer than the time required for printing.
EPOS2_ERR_MEMORY	Memory necessary for processing could not be allocated.	Close unnecessary applications.
EPOS2_ERR_ILLEGAL	The function was used in an illegal way. <Example> Tried to start communication with a printer with which communication had been already established.	Use the API in the correct manner.
EPOS2_ERR_PROCESSING	Could not run the process. <Example> The specified process could not be run because a similar process was being run by another thread.	The timing of the processes has overlapped. Re-execute the API in which the error occurred.
EPOS2_ERR_UNSUPPORTED	<ul style="list-style-type: none"> • A model name or language not supported was specified. • A print method not supported by the printer was specified. 	<ul style="list-style-type: none"> • A function cannot be used if it is not supported by the specified model. • Specify a print method supported by the printer.
EPOS2_ERR_NOT_FOUND	The specified target could not be found. <Example> The printer specified as the connection target does not exist.	Check if the connection type and/or IP address are correct.
EPOS2_ERR_IN_USE	The specified device is in use. <Example> The device is being used by another application.	Stop using the device from another application.

Error Status	Cause	Countermeasure
EPOS2_ERR_TYPE_INVALID	The device class is not correct (Epos2Printer, Epos2LineDisplay).	Check the class of the connected device and connect to it with the correct device class.
	An unsupported connection method is specified.	Check the system configuration, and specify the appropriate connection method.
EPOS2_ERR_DISCONNECT	Failed to disconnect from the device.	Check connection with the device.
EPOS2_ERR_ALREADY_OPENED	Communication box is already open.	Finish communication with the communication box.
EPOS2_ERR_ALREADY_USED	Specified member ID is already in use.	Specify a different member ID.
EPOS2_ERR_BOX_COUNT_OVER	The number of created communication boxes has exceeded the upper limit.	Delete an unnecessary communication box.
EPOS2_ERR_BOX_CLIENT_OVER	The number of members belong to the communication box has exceeded the upper limit.	Delete a member who is not using the communication box.
EPOS2_ERR_FAILURE	An unknown error occurred.	Check for a problem with the execution environment.

Callback Codes and countermeasures

CallbackCode	Cause	Countermeasure
EPOS2_CODE_SUCCESS	Processed successfully.	-
EPOS2_CODE_ERR_TIMEOUT	The process exceeded the specified timeout period.	Adjust the timeout period.
EPOS2_CODE_ERR_NOT_FOUND	<ul style="list-style-type: none"> The connection type and/or IP address are not correct. The specified device is not connected. 	<ul style="list-style-type: none"> Check if the connection type and/or IP address are correct. Check connection with the device.
EPOS2_CODE_ERR_AUTORECOVER	<ul style="list-style-type: none"> Head overheat error occurred. Motor driver IC overheat error occurred. Battery overheat error occurred. 	Start the process after the device is cooled down.
	The print reference mark on the label sheet cannot be found.	Open and close the cover.
EPOS2_CODE_ERR_COVER_OPEN	<ul style="list-style-type: none"> Cover is open. Cover was opened during MICR read operation. 	Close the printer cover.
EPOS2_CODE_ERR_CUTTER	Auto cutter error occurred.	Remove the error cause and power off and then on the printer.
EPOS2_CODE_ERR_MECHANICAL	Mechanical error occurred.	Remove the error cause and power off and then on the printer.
EPOS2_CODE_ERR_EMPTY	Paper has run out.	Refill the paper.
EPOS2_CODE_ERR_UNRECOVERABLE	Unrecoverable error occurred.	Power off and then on the printer. Contact the distributor or service center if the problem persists.
EPOS2_CODE_ERR_SYSTEM	An error occurred with the TM-i firmware or TM-DT software.	Turn off and then turn on the power supply to the TM-i series/TM-DT series, and restart the OS.
EPOS2_CODE_ERR_PORT	<ul style="list-style-type: none"> Forced transmission was run in the online state. A communication error occurred. 	<ul style="list-style-type: none"> Run forced transmission in the offline state. Review the connection environment.
EPOS2_CODE_ERR_INVALID_WINDOW	An unregistered window was specified.	Check the specified window.
EPOS2_CODE_ERR_JOB_NOT_FOUND	A print job ID which did not exist was specified.	Check the specified job ID.
EPOS2_CODE_PRINTING	<code>requestPrintJobStatus</code> was run by specifying a print job ID which was being printed.	Run the process after printing completes.
EPOS2_CODE_ERR_SPOOLER	Print data exceeding the spooler capacity was transmitted.	Check if communication with the printer is disconnected.
EPOS2_CODE_ERR_BATTERY_LOW	Battery has run out.	Replace the battery or connect the AC adapter.

CallbackCode	Cause	Countermeasure
EPOS2_CODE_ERR_FAILURE	An unknown error occurred.	Check for a problem with the execution environment.
EPOS2_CODE_ERR_TOO_MANY_REQUESTS	The number of print jobs or data to be displayed on a display has exceeded the allowable limit of the printer's firmware.	Wait for the printer to process some of the tasks, then send the jobs or data again.
EPOS2_CODE_ERR_REQUEST_ENTITY_TOO_LARGE	Print job data with the size exceeding the capacity of the printer firmware was transmitted.	Check the content of the print job, reduce the size of the data, and then resend the print job.
EPOS2_CCHANGER_CODE_ER_R_OPOSCODE	A device vendor definition error occurred.	In the OPOS driver manual, refer to ResultCodeExtended properties.
EPOS2_CODE_ERR_NO_MICR_DATA	MICR data cannot be detected.	Check the slip sheet and clean the MICR mechanism if necessary.
EPOS2_CODE_ERR_ILLEGAL_LENGTH	Paper length is not appropriate.	Check the paper length.
EPOS2_CODE_ERR_NO_MAGNETIC_DATA	Magnetic waveform cannot be detected.	<ul style="list-style-type: none"> • Check the font to read. • Clean the MICR mechanism.
EPOS2_CODE_ERR_RECOGNITION	Illegible MICR text was detected.	Check the status of the slip sheet.
EPOS2_CODE_ERR_READ	Error occurred during MICR read operation.	Remove the error cause and try again. If the error persists, restart the printer.
EPOS2_CODE_ERR_NOISE_DETECTED	Noise error was detected.	Remove the error cause and try the noise measurement again. If the error persists, restart the printer.
EPOS2_CODE_ERR_PAPER_JAM	Paper jam error occurred during MICR read operation.	Remove the jammed paper.
EPOS2_CODE_ERR_PAPER_PULLED_OUT	<ul style="list-style-type: none"> • Paper was removed during insertion. • Paper was removed during MICR read operation. • Paper was removed after it had been inserted. 	Reset the paper.
EPOS2_CODE_ERR_CANCEL_FAILED	Failed to cancel waiting for paper insertion.	Check the status of the printer and try the process again.
EPOS2_CODE_ERR_PAPER_TYPE	Printer operation differs from the specified print method.	Specify a correct print method again.
EPOS2_CODE_ERR_WAIT_INSERTION	Could not run the process while waiting for paper insertion.	<ul style="list-style-type: none"> • Reset the paper and try the process again. • Cancel waiting for paper insertion and try the process again.
EPOS2_CODE_ERR_ILLEGAL	<p>The function was used in an illegal way. <Example> Tried to cancel waiting for paper insertion while paper had already been inserted.</p>	Use the API in an appropriate manner.
EPOS2_CODE_ERR_INSERTED	Could not run the process while paper had already been inserted.	Eject the paper and try the process again.

CallbackCode	Cause	Countermeasure
EPOS2_CODE_ERR_WAIT_REMOVAL	Could not run the process while waiting for paper removal.	Remove the paper and try the process again.
EPOS2_CODE_ERR_DEVICE_BUSY	The specified device is in process.	Execute the process after the process completes.

Printer Status and countermeasures

Printer class

Printer Status	Cause	Countermeasure
status.connection==EPOS2_FALSE	<ul style="list-style-type: none"> The printer is powered off. No connection is established with the printer. 	Check the power and communication status of the printer.
status.online==EPOS2_FALSE	Offline status.	Remove a cause which forces the printer offline (e.g., the cover is open or paper has run out).
status.online==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.coverOpen==EPOS2_TRUE	Cover is open.	Close the printer cover.
status.coverOpen==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.paper==EPOS2_PAPER_NEAR_END	Running short of paper.	Replace the paper.
status.paper==EPOS2_PAPER_EMPTY	Paper has run out.	Refill the paper.
status.paper==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.paperFeed==EPOS2_TRUE	Paper is being fed by pressing the Paper Feed button.	Run the process after paper feed completes.
status.paperFeed==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.panelSwitch==EPOS2_SWITCH_ON	Panel switch is being operated.	Run the process after the operation completes.
status.panelSwitch==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.drawer== EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.errorStatus== EPOS2_MECHANICAL_ERR	Mechanical error occurred.	Remove the error cause and power off and then on the printer.
status.errorStatus== EPOS2_AUTOCUTTER_ERR	Auto cutter error occurred.	Remove the error cause and power off and then on the printer.
status.errorStatus== EPOS2_UNRECOVER_ERR	Unrecoverable error occurred.	Power off and then on the printer. Contact the distributor or service center if the problem persists.

Printer Status	Cause	Countermeasure
status.errorStatus== EPOS2_AUTORECOVER_ERR	<ul style="list-style-type: none"> • Head overheat error occurred. • Motor driver IC overheat error occurred. • Battery overheat error occurred. 	Start the process after the device is cooled down.
	The print reference mark on the label sheet cannot be found.	Open and close the cover.
status.errorStatus==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.autoRecoverError== EPOS2_HEAD_OVERHEAT	Head overheat error occurred.	Run the process after the device gets cooled down.
status.autoRecoverError== EPOS2_MOTOR_OVERHEAT	Motor driver IC overheat error occurred.	Run the process after the device gets cooled down.
status.autoRecoverError== EPOS2_BATTERY_OVERHEAT	Battery overheat error occurred.	Run the process after the device gets cooled down.
status.autoRecoverError== EPOS2_WRONG_PAPER	The print reference mark on the label sheet cannot be found.	Open and close the cover.
status.autoRecoverError== EPOS2_COVER_OPEN	Cover is open.	Close the printer cover.
status.autoRecoverError== EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.buzzer==EPOS2_TRUE	Buzzer is sounding.	Check the buzzer sounding condition of the printer, and run the process after removing the cause for buzzer sounding.
status.buzzer==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.adapter==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.batteryLevel== EPOS2_BATTERY_LEVEL_1	Running short of battery.	Charge the battery or connect the AC adapter.
status.batteryLevel== EPOS2_BATTERY_LEVEL_0	Battery has run out.	Replace the battery or connect the AC adapter.
status.batteryLevel==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.

HybridPrinter class

Printer Status	Cause	Countermeasure
status.connection==EPOS2_FALSE	<ul style="list-style-type: none"> • The printer is powered off. • No connection is established with the printer. 	Check the power and communication status of the printer.

Printer Status	Cause	Countermeasure
status.online==EPOS2_FALSE	Offline status.	Remove a cause which forces the printer offline (e.g., the cover is open or paper has run out).
status.online==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.coverOpen==EPOS2_TRUE	Cover is open.	Close the printer cover.
status.coverOpen==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.paper==EPOS2_PAPER_NEAR_END	Running short of paper.	Replace the paper.
status.paper==EPOS2_PAPER_EMPTY	Paper has run out.	Refill the paper.
status.paper==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.paperFeed==EPOS2_TRUE	Paper is being fed by pressing the Paper Feed button.	Run the process after paper feed completes.
status.paperFeed== HybridPrinter.UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.panelSwitch==EPOS2_SWITCH_ON	Panel switch is being operated.	Run the process after the operation completes.
status.panelSwitch==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.drawer==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.errorStatus== EPOS2_MECHANICAL_ERR	Mechanical error occurred.	Remove the error cause and power off and then on the printer.
status.errorStatus== EPOS2_AUTOCUTTER_ERR	Auto cutter error occurred.	Remove the error cause and power off and then on the printer.
status.errorStatus== EPOS2_UNRECOVER_ERR	Unrecoverable error occurred.	Power off and then on the printer. Contact the distributor or service center if the problem persists.
status.errorStatus== EPOS2_AUTORECOVER_ERR	<ul style="list-style-type: none"> • Head overheat error occurred. • Motor driver IC overheat error occurred. 	Start the process after the device is cooled down.
status.errorStatus==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.autoRecoverError== EPOS2_HEAD_OVERHEAT	Head overheat error occurred.	Run the process after the device gets cooled down.
status.autoRecoverError== EPOS2_HEAD_OVERHEAT	Motor driver IC overheat error occurred	Run the process after the device gets cooled down.
status.autoRecoverError== EPOS2_WRONG_PAPER	The print reference mark on the label sheet cannot be found.	Open and close the cover.

Printer Status	Cause	Countermeasure
status.autoRecoverError== EPOS2_COVER_OPEN	Cover is open.	Close the printer cover.
status.autoRecoverError== EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.insertionWaiting== EPOS2_INSERTION_WAIT_SLIP	Waiting for slip sheet insertion.	Insert a slip sheet.
status.insertionWaiting== EPOS2_INSERTION_WAIT_VALIDATION	Waiting for validation sheet insertion.	Insert a validation sheet.
status.insertionWaiting== EPOS2_INSERTION_WAIT_MICR	Waiting for slip sheet insertion for MICR reading.	Insert a slip sheet.
status.insertionWaiting== EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.removalWaiting== EPOS2_REMOVAL_WAIT_PAPER	Waiting for paper removal.	Remove the paper.
status.removalWaiting== EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.
status.slipPaper==EPOS2_UNKNOWN	No connection is established with the printer.	Check the communication status of the printer.

Key code list

Constant	Code	Constant	Code
EPOS2_VK_BACK	0x08	EPOS2_VK_L	0x4C
EPOS2_VK_TAB	0x09	EPOS2_VK_M	0x4D
EPOS2_VK_RETURN	0x0D	EPOS2_VK_N	0x4E
EPOS2_VK_SHIFT	0x10	EPOS2_VK_O	0x4F
EPOS2_VK_CONTROL	0x11	EPOS2_VK_P	0x50
EPOS2_VK_MENU	0x12	EPOS2_VK_Q	0x51
EPOS2_VK_CAPITAL	0x14	EPOS2_VK_R	0x52
EPOS2_VK_ESCAPE	0x1B	EPOS2_VK_S	0x53
EPOS2_VK_CONVERT	0x1C	EPOS2_VK_T	0x54
EPOS2_VK_NONCONVERT	0x1D	EPOS2_VK_U	0x55
EPOS2_VK_SPACE	0x20	EPOS2_VK_V	0x56
EPOS2_VK_PRIOR	0x21	EPOS2_VK_W	0x57
EPOS2_VK_NEXT	0x22	EPOS2_VK_X	0x58
EPOS2_VK_END	0x23	EPOS2_VK_Y	0x59
EPOS2_VK_HOME	0x24	EPOS2_VK_Z	0x5A
EPOS2_VK_LEFT	0x25	EPOS2_VK_MULTIPLY	0x6A
EPOS2_VK_UP	0x26	EPOS2_VK_ADD	0x6B
EPOS2_VK_RIGHT	0x27	EPOS2_VK_SUBTRACT	0x6D
EPOS2_VK_DOWN	0x28	EPOS2_VK_F1	0x70
EPOS2_VK_INSERT	0x2D	EPOS2_VK_F2	0x71
EPOS2_VK_DELETE	0x2E	EPOS2_VK_F3	0x72
EPOS2_VK_0	0x30	EPOS2_VK_F4	0x73
EPOS2_VK_1	0x31	EPOS2_VK_F5	0x74
EPOS2_VK_2	0x32	EPOS2_VK_F6	0x75
EPOS2_VK_3	0x33	EPOS2_VK_F7	0x76
EPOS2_VK_4	0x34	EPOS2_VK_F8	0x77
EPOS2_VK_5	0x35	EPOS2_VK_F9	0x78
EPOS2_VK_6	0x36	EPOS2_VK_F10	0x79
EPOS2_VK_7	0x37	KEPOS2_VK_F11	0x7A
EPOS2_VK_8	0x38	EPOS2_VK_F12	0x7B
EPOS2_VK_9	0x39	EPOS2_VK_OEM_1	0xBA
EPOS2_VK_A	0x41	EPOS2_VK_OEM_PLUS	0xBB
EPOS2_VK_B	0x42	EPOS2_VK_OEM_COMMA	0xBC

Constant	Code	Constant	Code
EPOS2.VK.C	0x43	EPOS2.VK.OEM_MINUS	0xBD
EPOS2.VK.D	0x44	EPOS2.VK.OEM_PERIOD	0xBE
EPOS2.VK.E	0x45	EPOS2.VK.OEM_2	0xBF
EPOS2.VK.F	0x46	EPOS2.VK.OEM_3	0xC0
EPOS2.VK.G	0x47	EPOS2.VK.OEM_4	0xDB
EPOS2.VK.H	0x48	EPOS2.VK.OEM_5	0xDC
EPOS2.VK.I	0x49	EPOS2.VK.OEM_6	0xDD
EPOS2.VK.J	0x4A	EPOS2.VK.OEM_7	0xDE
EPOS2.VK.K	0x4B	EPOS2.VK.OEM_ATTN	0xF0

Device Specifications

Provides information about restriction on the use of APIs depend on devices such as printer and peripheral device, and the parameter setting value.



Refer to the Technical Reference Guide of each printer for more information on each printer.

List of Supported Classes

The following lists the classes supported by each printer.

	Epos2Printer class ^{*1}	Epos2HybridPrinter class	Epos2LineDisplay class ^{*1}	Epos2Keyboard class	Epos2POSKeyboard class	Epos2BarcodeScanner class	Epos2MSR class	Epos2SimpleSerial class	Epos2GermanyFiscalElement class	Epos2OtherPeripheral class	Epos2CommboBox class	Common to all classes	Epos2Discovery class	Epos2Log class	Epos2BluetoothConnection class	EasySelect class ^{*1}	EasySelectInfo class
TM-m10	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
TM-m30	✓	-	✓	-	-	✓ ^{*3}	-	-	✓ ^{*10}	-	-	✓	✓	✓	✓	✓	✓
TM-m30II	✓	-	✓	-	-	✓	-	-	✓	-	-	✓	✓	✓	✓	✓	✓
TM-m30II-H	✓	-	✓	-	-	✓	-	-	✓	-	-	✓	✓	✓	✓	✓	✓
TM-T20	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T20II	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
TM-T20III	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
TM-T20IIIL	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T20X	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T60	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T70	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T70II	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
TM-T81II	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T81III	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T82	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T82II	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T82III	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
TM-T82IIIL	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓

	Epos2Printer class^{*1}	Epos2HybridPrinter class	Epos2LineDisplay class^{*1}	Epos2Keyboard class	Epos2POSKeyboard class	Epos2BarcodeScanner class	Epos2MSR class	Epos2SimpleSerial class	Epos2GermanyFiscalElement class	Epos2OtherPeripheral class	Epos2CommBox class	Common to all classes	Epos2Discovery class	Epos2Log class	Epos2BluetoothConnection class	EasySelect class^{*1}	EasySelectInfo class
TM-T82X	✓	✓	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T83III	✓	✓	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T88V	✓	✓	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-T88VI	✓	-	✓	-	-	✓ ^{*4}	-	-	-	-	-	✓	✓	✓	✓	✓	✓
TM-T100	✓	✓	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-U220	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-U330	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-P20	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
TM-P60 (Receipt)	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-P60 (Peeler)	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	-	✓	✓
TM-P60II (Receipt)	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓ ^{*7}	✓	✓
TM-P60II (Peeler)	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓ ^{*8}	✓	✓
TM-P80	✓	-	-	-	-	-	-	-	-	-	-	✓	✓	✓	✓ ^{*9}	✓	✓
TM-H6000V	✓	✓ ^{*5}	✓	-	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓
TM-T20II-i	✓	-	✓	✓	-	✓ ^{*6}	✓ ^{*6}	✓	-	-	✓	✓	✓	✓	-	-	-
TM-T70-i	✓	-	✓	✓	-	✓ ^{*6}	✓ ^{*6}	✓	-	-	✓	✓	✓	✓	-	-	-
TM-T82II-i	✓	-	✓	✓	-	✓ ^{*6}	✓ ^{*6}	✓	-	-	✓	✓	✓	✓	-	-	-
TM-T83II-i	✓	-	✓	✓	-	✓ ^{*6}	✓ ^{*6}	✓	-	-	✓	✓	✓	✓	-	-	-
TM-T88V-i	✓	-	✓	✓	-	✓ ^{*6}	✓ ^{*6}	✓	-	-	✓	✓	✓	✓	-	-	-
TM-T88VI-iHUB	✓	-	✓	✓	-	✓ ^{*6}	✓ ^{*6}	✓	✓ ^{*10}	-	✓	✓	✓	✓	-	-	-
TM-U220-i	✓	-	✓	✓	-	✓ ^{*6}	✓ ^{*6}	✓	-	-	✓	✓	✓	✓	-	-	-
TM-T70II-DT	✓	-	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓	-	-	-
TM-T70II-DT2	✓	-	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓	-	-	-
TM-T88V-DT	✓	-	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓	-	-	-
TM-T88VI-DT2	✓	-	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓	-	-	-
TM-H6000IV-DT	✓	-	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓	-	-	-
TM-T88IV ^{*2}	✓	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
TM-T90 ^{*2}	✓	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

	Epos2Printer class^{*1}	Epos2HybridPrinter class	Epos2LineDisplay class^{*1}	Epos2Keyboard class	Epos2POSKeyboard class	Epos2BarcodeScanner class	Epos2MSR class	Epos2SimpleSerial class	Epos2GermanyFiscalElement class	Epos2OtherPeripheral class	Epos2CommBox class	Common to all classes	Epos2Discovery class	Epos2Log class	Epos2BluetoothConnection class	EasySelect class^{*1}	EasySelectInfo class
TM-L90 ^{*2}	✓	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
TM-H6000IV ^{*2}	✓	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

*1: The availability and restriction on the use of APIs varies for each printer. Refer to [List of Supported APIs](#).

*2: Supports control as a slave printer only.

*3: Supported by TM-m30 firmware Ver. 1.40 ESC/POS or later.

*4: Supported by TM-T88VI firmware Ver. 40.50 ESC/POS or later.

*5: The availability and restriction on the use of APIs varies for each model. Refer to [Epos2HybridPrinter class](#).

*6: Does not support control by the device control program.

*7: Supported by firmware Ver. 5.14 ESC/POS or later.

*8: Supported by firmware Ver. 6.14 ESC/POS or later.

*9: TM-P80: Supported by firmware Ver. 1.02 ESC/POS or later.

TM-P80AC: Supported by firmware Ver. 2.01 ESC/POS or later.

*10: Supported with the following versions of firmware.

- TM-m30 firmware Ver. 1.46A ESC/POS or later
- TM-m30 firmware Ver. 1.46B ESC/POS or later
- TM-T88VI-iHUB firmware Ver. 50.52A ESC/POS or later
- TM-T88VI-iHUB firmware Ver. 50.52B ESC/POS or later

List of Supported APIs

Provides list of supported APIs for each printer.

The following is an explanation of the symbol indicated in table:

- ✓: Supported.
- ✓*: Supported but has a restriction on specifying the parameter setting value.
- -: Not supported.

For information on the "✓*" restrictions, refer to Printer-specific Support Information.

Epos2Printer Class

Single-function models (1)

API	TM-m10	TM-m30	TM-m30II	TM-m30II-H	TM-T20	TM-T20II	TM-T20III	TM-T20IIIL	TM-T20X	TM-T60	TM-T70	TM-T70II	TM-T81II	TM-T81III	TM-T82
initWithPrinterSeries	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
connect	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
disconnect	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
startMonitor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
stopMonitor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getStatus	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
sendData	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
beginTransaction	✓	✓	✓	✓	-	-	-	-	-	-	-	-	-	-	-
endTransaction	✓	✓	✓	✓	-	-	-	-	-	-	-	-	-	-	-
requestPrintJobStatus	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
clearCommandBuffer	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextAlign	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addLineSpace	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextRotate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addText	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextLang	✓*	✓*	✓*	✓	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addTextFont	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addTextSmooth	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextSize	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextStyle	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addHPosition	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addFeedUnit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

API	TM-m10	TM-m30	TM-m30II	TM-m30II-H	TM-T20	TM-T20II	TM-T20III	TM-T20IIIL	TM-T20X	TM-T60	TM-T70	TM-T70II	TM-T81II	TM-T81III	TM-T82
addFeedLine	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addImage	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addLogo	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addBarcode	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addSymbol	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addHLine	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
addVLineBegin	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
addVLineEnd	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
addPageBegin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addPageEnd	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addPageArea	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addPageDirection	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addPagePosition	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addPageLine	✓*	✓*	✓*	✓*	-	-	-	-	-	-	-	-	-	-	-
addPageRectangle	✓*	✓*	✓*	✓*	-	-	-	-	-	-	-	-	-	-	-
addRotateBegin	-	-	✓	✓	-	-	-	-	-	-	-	-	-	-	-
addRotateEnd	-	-	✓	✓	-	-	-	-	-	-	-	-	-	-	-
addCut	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addPulse	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addSound	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	-	-	✓*	-	✓*
addFeedPosition	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
addLayout	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
addCommand	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getMaintenanceCounter	-	✓	✓	✓	-	✓	-	-	-	-	-	-	-	-	-
resetMaintenanceCounter	-	✓	✓	✓	-	✓	-	-	-	-	-	-	-	-	-
getPrinterSetting	-	✓*	✓*	✓*	-	✓*	-	-	-	-	-	-	-	-	-
setPrinterSetting	-	✓*	✓*	✓*	-	✓*	-	-	-	-	-	-	-	-	-
downloadFirmwareList	✓*	✓*	-	-	-	-	-	-	-	-	-	-	-	-	-
getPrinterFirmwareInfo	✓	✓	-	-	-	-	-	-	-	-	-	-	-	-	-
verifyUpdate	✓	✓	-	-	-	-	-	-	-	-	-	-	-	-	-
updateFirmware	✓	✓	-	-	-	-	-	-	-	-	-	-	-	-	-
forceRecover	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
forcePulse	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

API	TM-m10	TM-m30	TM-m30II	TM-m30II-H	TM-T20	TM-T20II	TM-T20III	TM-T20IIIL	TM-T20X	TM-T60	TM-T70	TM-T70II	TM-T81II	TM-T81III	TM-T82
forceStopSound	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
forceCommand	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
forceReset	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
setStatusChangeEventDelegate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
setReceiveEventDelegate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
interval	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Single-function models (2)

API	TM-T82II	TM-T82III	TM-T82IIIL	TM-T82X	TM-T83III	TM-T88V	TM-T88VI	TM-T100	TM-U220	TM-U330					
initWithPrinterSeries	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*					
connect	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
disconnect	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
startMonitor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
stopMonitor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
getStatus	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
sendData	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
beginTransaction	-	-	-	-	-	-	-	✓	-	-					
endTransaction	-	-	-	-	-	-	-	✓	-	-					
requestPrintJobStatus	-	-	-	-	-	-	-	-	-	-					
clearCommandBuffer	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
addTextAlign	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
addLineSpace	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
addTextRotate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
addText	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
addTextLang	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*					
addTextFont	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*					
addTextSmooth	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
addTextSize	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					
addTextStyle	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*					
addHPosition	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	✓			
addFeedUnit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓					

API	TM-T82II	TM-T82III	TM-T82IIIIL	TM-T82X	TM-T83III	TM-T88V	TM-T88VI	TM-T100	TM-U220	TM-U330
addFeedLine	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addImage	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addLogo	✓	✓	✓	✓	✓	✓	✓	✓	✓*	✓*
addBarcode	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	-	✓*
addSymbol	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	-	✓*
addHLine	-	-	-	-	-	-	-	-	-	-
addVLineBegin	-	-	-	-	-	-	-	-	-	-
addVLineEnd	-	-	-	-	-	-	-	-	-	-
addPageBegin	✓	✓	✓	✓	✓	✓	✓	✓	-	-
addPageEnd	✓	✓	✓	✓	✓	✓	✓	✓	-	-
addPageArea	✓	✓	✓	✓	✓	✓	✓	✓	-	-
addPageDirection	✓	✓	✓	✓	✓	✓	✓	✓	-	-
addPagePosition	✓	✓	✓	✓	✓	✓	✓	✓	-	-
addPageLine	-	-	-	-	-	-	✓*	-	-	-
addPageRectangle	-	-	-	-	-	-	✓*	-	-	-
addRotateBegin	-	-	-	-	-	-	-	-	-	-
addRotateEnd	-	-	-	-	-	-	-	-	-	-
addCut	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addPulse	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addSound	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	-	-
addFeedPosition	-	-	-	-	-	-	-	-	-	✓*
addLayout	-	-	-	-	-	-	-	-	-	-
addCommand	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getMaintenanceCounter	-	-	-	-	-	-	✓	-	-	-
resetMaintenanceCounter	-	-	-	-	-	-	✓	-	-	-
getPrinterSetting	-	-	-	-	-	-	✓*	-	-	-
setPrinterSetting	-	-	-	-	-	-	✓*	-	-	-
downloadFirmwareList	-	-	-	-	-	-	✓*	-	-	-
getPrinterFirmwareInfo	-	-	-	-	-	-	✓	-	-	-
verifyUpdate	-	-	-	-	-	-	✓	-	-	-
updateFirmware	-	-	-	-	-	-	✓	-	-	-
forceRecover	-	-	-	-	-	-	-	-	-	-
forcePulse	-	-	-	-	-	-	-	-	-	-

API	TM-T82II	TM-T82III	TM-T82IIIL	TM-T82X	TM-T83III	TM-T88V	TM-T88VI	TM-T100	TM-U220	TM-U330
forceStopSound	-	-	-	-	-	-	-	-	-	-
forceCommand	-	-	-	-	-	-	-	-	-	-
forceReset	-	-	-	-	-	-	-	-	-	-
setStatusChangeEventDelegate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
setReceiveEventDelegate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
interval	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Mobile models/Hybrid models

API	TM-P20	TM-P60 (Receipt)	TM-P60 (Peeler)	TM-P60II (Receipt)	TM-P60II (Peeler)	TM-P80	TM-H6000V
initWithPrinterSeries	✓*	✓*	✓*	✓*	✓*	✓*	✓*
connect	✓	✓	✓	✓	✓	✓	✓
disconnect	✓	✓	✓	✓	✓	✓	✓
startMonitor	✓	✓	✓	✓	✓	✓	✓
stopMonitor	✓	✓	✓	✓	✓	✓	✓
getStatus	✓	✓	✓	✓	✓	✓	✓
sendData	✓	✓	✓	✓	✓	✓	✓
beginTransaction	-	-	-	-	-	-	✓
endTransaction	-	-	-	-	-	-	✓
requestPrintJobStatus	-	-	-	-	-	-	-
clearCommandBuffer	✓	✓	✓	✓	✓	✓	✓
addTextAlign	✓	✓	✓	✓	✓	✓	✓
addLineSpace	✓	✓	✓	✓	✓	✓	✓
addTextRotate	✓	✓	✓	✓	✓	✓	✓
addText	✓	✓	✓	✓	✓	✓	✓
addTextLang	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addTextFont	✓	✓*	✓*	✓*	✓*	✓*	✓*
addTextSmooth	✓	✓	✓	✓	✓	✓	✓
addTextSize	✓	✓	✓	✓	✓	✓	✓
addTextStyle	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addHPosition	✓	✓	✓	✓	✓	✓	✓

API	TM-P20	TM-P60 (Receipt)	TM-P60 (Peeler)	TM-P60II (Receipt)	TM-P60II (Peeler)	TM-P80	TM-H6000V
addFeedUnit	✓	✓	✓	✓	✓	✓	✓
addFeedLine	✓	✓	✓	✓	✓	✓	✓
addImage	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addLogo	✓	✓	✓	✓	✓	✓	✓
addBarcode	✓	✓*	✓*	✓*	✓*	✓*	✓*
addSymbol	✓*	-	✓*	✓*	✓*	✓*	✓*
addHLine	-	-	-	-	-	-	-
addVLineBegin	-	-	-	-	-	-	-
addVLineEnd	-	-	-	-	-	-	-
addPageBegin	✓	✓	✓	✓	✓	✓	✓
addPageEnd	✓	✓	✓	✓	✓	✓	✓
addPageArea	✓	✓	✓	✓	✓	✓	✓
addPageDirection	✓	✓	✓	✓	✓	✓	✓
addPagePosition	✓	✓	✓	✓	✓	✓	✓
addPageLine	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addPageRectangle	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addRotateBegin	-	-	-	-	-	-	-
addRotateEnd	-	-	-	-	-	-	-
addCut	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addPulse	-	-	-	-	-	-	✓
addSound	✓*	-	-	✓*	✓*	✓*	-
addFeedPosition	✓*	-	✓	-	✓	✓*	-
addLayout	✓*	-	✓	-	✓	✓*	-
addCommand	✓	✓	✓	✓	✓	✓	✓
getMaintenanceCounter	✓*	-	-	-	-	-	-
resetMaintenanceCounter	✓*	-	-	-	-	-	-
getPrinterSetting	✓*	-	-	-	-	-	-
setPrinterSetting	✓*	-	-	-	-	-	-
downloadFirmwareList	-	-	-	-	-	-	-
getPrinterFirmwareInfo	-	-	-	-	-	-	-
verifyUpdate	-	-	-	-	-	-	-

API	TM-P20	TM-P60 (Receipt)	TM-P60 (Peeler)	TM-P60II (Receipt)	TM-P60II (Peeler)	TM-P80	TM-H6000V
updateFirmware	-	-	-	-	-	-	-
forceRecover	-	-	-	-	-	-	✓
forcePulse	-	-	-	-	-	-	✓
forceStopSound	-	-	-	-	-	-	-
forceCommand	-	-	-	-	-	-	✓
forceReset	-	-	-	-	-	-	✓
setStatusChangeEventDelegate	✓	✓	✓	✓	✓	✓	✓
setReceiveEventDelegate	✓	✓	✓	✓	✓	✓	✓
interval	✓	✓	✓	✓	✓	✓	✓

TM-i Series/TM-DT Series

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-iHUB	TM-U220-i	TM-T70II-DT	TM-T70II-DT2	TM-T88V-DT	TM-T88VI-DT2	TM-H6000IV-DT
initWithPrinterSeries	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
connect	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
disconnect	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
startMonitor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
stopMonitor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getStatus	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
sendData	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
beginTransaction	-	-	-	-	-	-	-	-	-	-	-	-
endTransaction	-	-	-	-	-	-	-	-	-	-	-	-
requestPrintJobStatus	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
clearCommandBuffer	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextAlign	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addLineSpace	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextRotate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addText	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextLang	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-iHUB	TM-U220-i	TM-T70II-DT	TM-T70II-DT2	TM-T88V-DT	TM-T88VI-DT2	TM-H6000IV-DT
addTextFont	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addTextSmooth	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addTextSize	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
addTextStyle	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addHPosition	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
addFeedUnit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addFeedLine	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addImage	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addLogo	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
addBarcode	✓*	✓*	✓*	✓*	✓*	✓*	-	✓*	✓*	✓*	✓*	✓*
addSymbol	✓*	✓*	✓*	✓*	✓*	✓*	-	✓*	✓*	✓*	✓*	✓*
addHLine	-	-	-	-	-	-	-	-	-	-	-	-
addVLineBegin	-	-	-	-	-	-	-	-	-	-	-	-
addVLineEnd	-	-	-	-	-	-	-	-	-	-	-	-
addPageBegin	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
addPageEnd	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
addPageArea	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
addPageDirection	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
addPagePosition	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
addPageLine	-	-	-	-	-	✓*	-	-	-	-	-	-
addPageRectangle	-	-	-	-	-	✓*	-	-	-	-	-	-
addRotateBegin	-	-	-	-	-	-	-	-	-	-	-	-
addRotateEnd	-	-	-	-	-	-	-	-	-	-	-	-
addCut	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
addPulse	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addSound	✓*	-	✓*	✓*	✓*	✓*	-	✓*	✓*	✓*	✓*	-
addFeedPosition	-	-	-	-	-	-	-	-	-	-	-	-
addLayout	-	-	-	-	-	-	-	-	-	-	-	-
addCommand	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getMaintenanceCounter	-	-	-	-	-	✓	-	-	-	-	-	-
resetMaintenanceCounter	-	-	-	-	-	✓	-	-	-	-	-	-
getPrinterSetting	-	-	-	-	-	✓*	-	-	-	-	-	-

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-iHUB	TM-U220-i	TM-T70II-DT	TM-T70II-DT2	TM-T88V-DT	TM-T88VI-DT2	TM-H6000IV-DT
setPrinterSetting	-	-	-	-	-	✓*	-	-	-	-	-	-
downloadFirmwareList	-	-	-	-	-	✓*	-	-	-	-	-	-
getPrinterFirmwareInfo	-	-	-	-	-	✓	-	-	-	-	-	-
verifyUpdate	-	-	-	-	-	✓	-	-	-	-	-	-
updateFirmware	-	-	-	-	-	✓	-	-	-	-	-	-
forceRecover	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	✓	✓
forcePulse	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
forceStopSound	✓	-	✓	✓	✓	✓	-	✓	✓	✓	✓	-
forceCommand	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
forceReset	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
setStatusChangeEventDelegate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
setReceiveEventDelegate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
interval	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Slave Printers

API	TM-T88IV	TM-T90	TM-L90	TM-H6000IV
initWithPrinterSeries	✓*	✓*	✓*	✓*
connect	✓	✓	✓	✓
disconnect	✓	✓	✓	✓
startMonitor	✓	✓	✓	✓
stopMonitor	✓	✓	✓	✓
getStatus	✓	✓	✓	✓
sendData	✓	✓	✓	✓
beginTransaction	-	-	-	-
endTransaction	-	-	-	-
requestPrintJobStatus	-	-	-	-
clearCommandBuffer	✓	✓	✓	✓
addTextAlign	✓	✓	✓	✓
addLineSpace	✓	✓	✓	✓
addTextRotate	✓	✓	✓	✓

API	TM-T88IV	TM-T90	TM-L90	TM-H600IV
addText	✓	✓	✓	✓
addTextLang	✓*	✓*	✓*	✓*
addTextFont	✓*	✓*	✓*	✓*
addTextSmooth	✓	✓	✓	✓
addTextSize	✓	✓	✓	✓
addTextStyle	✓*	✓*	✓*	✓*
addHPosition	✓	✓	✓	✓
addFeedUnit	✓	✓	✓	✓
addFeedLine	✓	✓	✓	✓
addImage	✓*	✓*	✓*	✓*
addLogo	✓	✓	✓	✓
addBarcode	✓*	✓*	✓*	✓*
addSymbol	✓*	✓*	✓*	✓*
addHLine	-	-	-	-
addVLineBegin	-	-	-	-
addVLineEnd	-	-	-	-
addPageBegin	✓	✓	✓	✓
addPageEnd	✓	✓	✓	✓
addPageArea	✓	✓	✓	✓
addPageDirection	✓	✓	✓	✓
addPagePosition	✓	✓	✓	✓
addPageLine	-	-	-	-
addPageRectangle	-	-	-	-
addRotateBegin	-	-	-	-
addRotateEnd	-	-	-	-
addCut	✓*	✓*	✓*	✓*
addPulse	✓	✓	✓	✓
addSound	-	-	-	-
addFeedPosition	-	-	✓	-
addLayout	-	-	-	-
addCommand	✓	✓	✓	✓
getMaintenanceCounter	-	-	-	-
resetMaintenanceCounter	-	-	-	-

API	TM-T88IV	TM-T90	TM-L90	TM-H600IV
getPrinterSetting	-	-	-	-
setPrinterSetting	-	-	-	-
downloadFirmwareList	-	-	-	-
getPrinterFirmwareInfo	-	-	-	-
verifyUpdate	-	-	-	-
updateFirmware	-	-	-	-
forceRecover	-	-	-	-
forcePulse	-	-	-	-
forceStopSound	-	-	-	-
forceCommand	-	-	-	-
forceReset	-	-	-	-
setStatusChangeEventDelegate	✓	✓	✓	✓
setReceiveEventDelegate	✓	✓	✓	✓
interval	✓	✓	✓	✓

Epos2LineDisplay Class

Single-function models (1)

API	TM-m10	TM-m30	TM-m30II	TM-m30II-H	TM-T20	TM-T20II	TM-T20III	TM-T20X	TM-T60	TM-T70	TM-T70II	TM-T81II	TM-T81III	TM-T82
initWithDisplayModel	-	✓*	✓*	✓*	-	-	-	-	-	-	-	-	-	-
connect	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
disconnect	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
getStatus	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
sendData	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
clearCommandBuffer	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addInitialize	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addCreateWindow	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addDestroyWindow	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addSetCurrentWindow	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addClearCurrentWindow	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addSetCursorPosition	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addMoveCursorPosition	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addSetCursorType	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addText	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addReverseText	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addMarqueeText	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addSetBlink	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addSetBrightness	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
addShowClock	-	-	-	-	-	-	-	-	-	-	-	-	-	-
addCommand	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-
setReceiveEventDelegate	-	✓	✓	✓	-	-	-	-	-	-	-	-	-	-

Single-function models (2)

API	TM-T82II	TM-T82III	TM-T82III-L	TM-T82X	TM-T83III	TM-T88V	TM-T88VI	TM-T100	TM-U220	TM-U330
initWithDisplayModel	-	-	-	-	-	-	✓*	-	-	-
connect	-	-	-	-	-	-	✓	-	-	-
disconnect	-	-	-	-	-	-	✓	-	-	-

API	TM-T82II	TM-T82III	TM-T82IIIL	TM-T82X	TM-T83III	TM-T88V	TM-T88VI	TM-T100	TM-U220	TM-U330
getStatus	-	-	-	-	-	-	✓	-	-	-
sendData	-	-	-	-	-	-	✓	-	-	-
clearCommandBuffer	-	-	-	-	-	-	✓	-	-	-
addInitialize	-	-	-	-	-	-	✓	-	-	-
addCreateWindow	-	-	-	-	-	-	✓	-	-	-
addDestroyWindow	-	-	-	-	-	-	✓	-	-	-
addSetCurrentWindow	-	-	-	-	-	-	✓	-	-	-
addClearCurrentWindow	-	-	-	-	-	-	✓	-	-	-
addSetCursorPosition	-	-	-	-	-	-	✓	-	-	-
addMoveCursorPosition	-	-	-	-	-	-	✓	-	-	-
addSetCursorType	-	-	-	-	-	-	✓	-	-	-
addText	-	-	-	-	-	-	✓	-	-	-
addReverseText	-	-	-	-	-	-	✓	-	-	-
addMarqueeText	-	-	-	-	-	-	✓	-	-	-
addSetBlink	-	-	-	-	-	-	✓	-	-	-
addSetBrightness	-	-	-	-	-	-	✓	-	-	-
addShowClock	-	-	-	-	-	-	✓	-	-	-
addCommand	-	-	-	-	-	-	✓	-	-	-
setReceiveEventDelegate	-	-	-	-	-	-	✓	-	-	-

Mobile models/Hybrid models

API	TM-P20	TM-P60 (Receipt)	TM-P60 (Peeler)	TM-P60II (Receipt)	TM-P60II (Peeler)	TM-P80	TM-H6000V
initWithDisplayModel	-	-	-	-	-	-	✓*
connect	-	-	-	-	-	-	✓
disconnect	-	-	-	-	-	-	✓
getStatus	-	-	-	-	-	-	✓
sendData	-	-	-	-	-	-	✓
clearCommandBuffer	-	-	-	-	-	-	✓
addInitialize	-	-	-	-	-	-	✓
addCreateWindow	-	-	-	-	-	-	✓

API	TM-P20	TM-P60 (Receipt)	TM-P60 (Peeler)	TM-P60II (Receipt)	TM-P60II (Peeler)	TM-P80	TM-H6000V
addDestroyWindow	-	-	-	-	-	-	✓
addSetCurrentWindow	-	-	-	-	-	-	✓
addClearCurrentWindow	-	-	-	-	-	-	✓
addSetCursorPosition	-	-	-	-	-	-	✓
addMoveCursorPosition	-	-	-	-	-	-	✓
addSetCursorType	-	-	-	-	-	-	✓
addText	-	-	-	-	-	-	✓
addReverseText	-	-	-	-	-	-	✓
addMarqueeText	-	-	-	-	-	-	✓
addSetBlink	-	-	-	-	-	-	✓
addSetBrightness	-	-	-	-	-	-	✓
addShowClock	-	-	-	-	-	-	✓
addCommand	-	-	-	-	-	-	✓
setReceiveEventDelegate	-	-	-	-	-	-	✓

TM-i Series/TM-DT Series

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-iHUB	TM-U220-i	TM-T70II-DT	TM-T70II-DT2	TM-T88V-DT	TM-T88VI-DT2	TM-H6000V-DT
initWithDisplayModel	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*	✓*
connect	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
disconnect	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getStatus	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
sendData	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
clearCommandBuffer	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addInitialize	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addCreateWindow	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addDestroyWindow	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addSetCurrentWindow	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addClearCurrentWindow	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addSetCursorPosition	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-iHUB	TM-U220-i	TM-T70II-DT	TM-T88V-DT	TM-T88VI-DT2	TM-H6000IV-DT
addMoveCursorPosition	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addSetCursorType	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addText	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addReverseText	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addMarqueeText	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addSetBlink	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addSetBrightness	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addShowClock	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
addCommand	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
setReceiveEventDelegate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Slave Printers

API	TM-T88IV	TM-T90	TM-L90	TM-H6000IV
initWithDisplayModel	-	-	-	-
connect	-	-	-	-
disconnect	-	-	-	-
getStatus	-	-	-	-
sendData	-	-	-	-
clearCommandBuffer	-	-	-	-
addInitialize	-	-	-	-
addCreateWindow	-	-	-	-
addDestroyWindow	-	-	-	-
addsetCurrentWindow	-	-	-	-
addClearCurrentWindow	-	-	-	-
addSetCursorPosition	-	-	-	-
addMoveCursorPosition	-	-	-	-
addSetCursorType	-	-	-	-
addText	-	-	-	-
addReverseText	-	-	-	-
addMarqueeText	-	-	-	-

API	TM-T88IV	TM-T90	TM-L90	TM-H600IV
<code>addSetBlink</code>	-	-	-	-
<code>addSetBrightness</code>	-	-	-	-
<code>addShowClock</code>	-	-	-	-
<code>addCommand</code>	-	-	-	-
<code>setReceiveEventDelegate</code>	-	-	-	-

Common to all classes

Single-function models (1)

API	TM-m10	TM-m30	TM-m30II	TM-m30II-H	TM-T20	TM-T20II	TM-T20III	TM-T20X	TM-T60	TM-T70	TM-T70II	TM-T81II	TM-T82
getAdmin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getLocation	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
setConnectionEventDelegate	-	-	-	-	-	-	-	-	-	-	-	-	-

Single-function models (2)

API	TM-T82II	TM-T82III	TM-T82III	TM-T82X	TM-T83III	TM-T88V	TM-T88VI	TM-T100	TM-T20III	TM-T20X	TM-T60	TM-T70	TM-T70II
getAdmin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getLocation	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
setConnectionEventDelegate	-	-	-	-	-	-	-	-	-	-	-	-	-

Mobile models/Hybrid models

API	TM-P20	TM-P60 (Receipt)	TM-P60 (Peeler)	TM-P60II (Receipt)	TM-P60II (Peeler)	TM-P80	TM-H6000V	TM-U220	TM-U330
getAdmin	✓	✓	✓	✓	✓	✓	✓	✓	✓
getLocation	✓	✓	✓	✓	✓	✓	✓	✓	✓
setConnectionEventDelegate	-	-	-	-	-	-	-	-	-

TM-i Series/TM-DT Series

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-iHUB	TM-T220-i	TM-T70II-DT	TM-T70II-DT2	TM-T88V-DT	TM-T88VI-DT2	TM-H6000V-DT
getAdmin	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
getLocation	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-HUB	TM-U220-i	TM-T70II-DT	TM-T88V-DT	TM-T88VI-DT2	TM-H6000IV-DT
setConnectionEventDelegate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Slave Printers

API	TM-T88V	TM-T90	TM-L90	TM-H6000IV
getAdmin	-	-	-	-
getLocation	-	-	-	-
setConnectionEventDelegate	-	-	-	-

EasySelect Class

Single-function models (1)

API	TM-m10	TM-m30	TM-m30II	TM-m30II-H	TM-T20	TM-T20II	TM-T20III	TM-T60	TM-T70	TM-T70II	TM-T81II	TM-T82
parseNFC	✓	✓	✓	-	-	-	-	-	-	-	-	-
parseQR	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
createQR	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
parseBeacon	-	-	-	✓	-	-	-	-	-	-	-	-

Single-function models (2)

API	TM-T82II	TM-T82III	TM-T82III-L	TM-T82X	TM-T83III	TM-T88V	TM-T88VI	TM-T100	TM-U220	TM-U330	TM-T20X	TM-T70
parseNFC	-	-	-	-	-	-	✓	-	-	-	-	-
parseQR	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
createQR	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
parseBeacon	-	-	-	-	-	-	✓	-	-	-	-	-

Mobile models/Hybrid models

API	TM-P20	TM-P60 (Receipt)	TM-P60 (Peeler)	TM-P60II (Receipt)	TM-P60II (Peeler)	TM-P80	TM-H6000V
parseNFC	✓	✓	✓	✓	✓	✓	✓
parseQR	✓	✓	✓	✓	✓	✓	✓
createQR	✓	✓	✓	✓	✓	✓	✓
parseBeacon	-	-	-	-	-	-	-

TM-i Series/TM-DT Series

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-iHUB	TM-U220-i	TM-T70II-DT	TM-T88V-DT	TM-T88VI-DT2	TM-H6000IV-DT
parseNFC	-	-	-	-	-	✓	-	-	-	-	-
parseQR	-	-	-	-	-	-	-	-	-	-	-

API	TM-T20II-i	TM-T70-i	TM-T82II-i	TM-T83II-i	TM-T88V-i	TM-T88VI-HUB	TM-U220-i	TM-T70II-DT	TM-T70II-DT2	TM-T88V-DT	TM-T88VI-DT2	TM-H6000IV-DT
createQR	-	-	-	-	-	-	-	-	-	-	-	-
parseBeacon	-	-	-	-	-	✓	-	-	-	-	-	-

Slave Printers

API	TM-T88IV	TM-T90	TM-L90	TM-H6000IV
parseNFC	-	-	-	-
parseQR	-	-	-	-
createQR	-	-	-	-
parseBeacon	-	-	-	-

Printer-specific Support Information

TM-m10

Printer Specifications

Item	Specification
Amount of initial feed	30 dots
Initial page mode area	420 x 2400 dots
Maximum page mode area	420 x 2400 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	21 dots from the top of the character
Baseline of Font C	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_M10
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none">• EPOS2_PATTERN_NONE• EPOS2_PATTERN_A• EPOS2_PATTERN_B• EPOS2_PATTERN_C• EPOS2_PATTERN_D• EPOS2_PATTERN_E• EPOS2_PATTERN_ERROR• EPOS2_PATTERN_PAPER_EMPTY• EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none">• 1 to 255• EPOS2_PARAM_DEFAULT
downloadFirmwareList	printerModel	<ul style="list-style-type: none">• TM-m10

TM-m30***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 2400 dots	576 x 2400 dots
Maximum page mode area	420 x 2400 dots	576 x 2400 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	ANK	21 dots from the top of the character
	Chinese characters	21 dots from the top of the character
	Hangul character	15 dots from the top of the character
Baseline of Font C	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_M30
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT
setPrinterSetting	value	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PAPERWIDTH58_0 • EPOS2_PRINTER_SETTING_PAPERWIDTH80_0 • EPOS2_PRINTER_SETTING_PRINTDENSITY70 • EPOS2_PRINTER_SETTING_PRINTDENSITY75 • EPOS2_PRINTER_SETTING_PRINTDENSITY80 • EPOS2_PRINTER_SETTING_PRINTDENSITY85 • EPOS2_PRINTER_SETTING_PRINTDENSITY90 • EPOS2_PRINTER_SETTING_PRINTDENSITY95 • EPOS2_PRINTER_SETTING_PRINTDENSITY100 • EPOS2_PRINTER_SETTING_PRINTDENSITY105 • EPOS2_PRINTER_SETTING_PRINTDENSITY110 • EPOS2_PRINTER_SETTING_PRINTDENSITY115 • EPOS2_PRINTER_SETTING_PRINTDENSITY120 • EPOS2_PRINTER_SETTING_PRINTDENSITY125 • EPOS2_PRINTER_SETTING_PRINTDENSITY130 • EPOS2_PRINTER_SETTING_PRINTSPEED1 • EPOS2_PRINTER_SETTING_PRINTSPEED2 • EPOS2_PRINTER_SETTING_PRINTSPEED3 • EPOS2_PRINTER_SETTING_PRINTSPEED4 • EPOS2_PRINTER_SETTING_PRINTSPEED5 • EPOS2_PRINTER_SETTING_PRINTSPEED6 • EPOS2_PRINTER_SETTING_PRINTSPEED7 • EPOS2_PRINTER_SETTING_PRINTSPEED8 • EPOS2_PRINTER_SETTING_PRINTSPEED9 • EPOS2_PRINTER_SETTING_PRINTSPEED10
downloadFirmwareList	printerModel	<ul style="list-style-type: none"> • TM-m30
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D30

TM-m30II***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 4800 dots	576 x 4800 dots
Maximum page mode area	420 x 4800 dots	576 x 4800 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	21 dots from the top of the character	
Baseline of Font C	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_M30II
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
setPrinterSetting	value	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PAPERWIDTH58_0 • EPOS2_PRINTER_SETTING_PAPERWIDTH80_0 • EPOS2_PRINTER_SETTING_PRINTDENSITY70 • EPOS2_PRINTER_SETTING_PRINTDENSITY75 • EPOS2_PRINTER_SETTING_PRINTDENSITY80 • EPOS2_PRINTER_SETTING_PRINTDENSITY85 • EPOS2_PRINTER_SETTING_PRINTDENSITY90 • EPOS2_PRINTER_SETTING_PRINTDENSITY95 • EPOS2_PRINTER_SETTING_PRINTDENSITY100 • EPOS2_PRINTER_SETTING_PRINTDENSITY105 • EPOS2_PRINTER_SETTING_PRINTDENSITY110 • EPOS2_PRINTER_SETTING_PRINTDENSITY115 • EPOS2_PRINTER_SETTING_PRINTDENSITY120 • EPOS2_PRINTER_SETTING_PRINTDENSITY125 • EPOS2_PRINTER_SETTING_PRINTDENSITY130 • EPOS2_PRINTER_SETTING_PRINTSPEED1 • EPOS2_PRINTER_SETTING_PRINTSPEED2 • EPOS2_PRINTER_SETTING_PRINTSPEED3 • EPOS2_PRINTER_SETTING_PRINTSPEED4 • EPOS2_PRINTER_SETTING_PRINTSPEED5 • EPOS2_PRINTER_SETTING_PRINTSPEED6 • EPOS2_PRINTER_SETTING_PRINTSPEED7 • EPOS2_PRINTER_SETTING_PRINTSPEED8 • EPOS2_PRINTER_SETTING_PRINTSPEED9 • EPOS2_PRINTER_SETTING_PRINTSPEED10 • EPOS2_PRINTER_SETTING_PRINTSPEED11 • EPOS2_PRINTER_SETTING_PRINTSPEED12 • EPOS2_PRINTER_SETTING_PRINTSPEED13
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D30

TM-m30II-H***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 4800 dots	576 x 4800 dots
Maximum page mode area	420 x 4800 dots	576 x 4800 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	21 dots from the top of the character	
Baseline of Font C	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_M30II
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
setPrinterSetting	value	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PAPERWIDTH58_0 • EPOS2_PRINTER_SETTING_PAPERWIDTH80_0 • EPOS2_PRINTER_SETTING_PRINTDENSITY70 • EPOS2_PRINTER_SETTING_PRINTDENSITY75 • EPOS2_PRINTER_SETTING_PRINTDENSITY80 • EPOS2_PRINTER_SETTING_PRINTDENSITY85 • EPOS2_PRINTER_SETTING_PRINTDENSITY90 • EPOS2_PRINTER_SETTING_PRINTDENSITY95 • EPOS2_PRINTER_SETTING_PRINTDENSITY100 • EPOS2_PRINTER_SETTING_PRINTDENSITY105 • EPOS2_PRINTER_SETTING_PRINTDENSITY110 • EPOS2_PRINTER_SETTING_PRINTDENSITY115 • EPOS2_PRINTER_SETTING_PRINTDENSITY120 • EPOS2_PRINTER_SETTING_PRINTSPEED1 • EPOS2_PRINTER_SETTING_PRINTSPEED2 • EPOS2_PRINTER_SETTING_PRINTSPEED3 • EPOS2_PRINTER_SETTING_PRINTSPEED4 • EPOS2_PRINTER_SETTING_PRINTSPEED5 • EPOS2_PRINTER_SETTING_PRINTSPEED6 • EPOS2_PRINTER_SETTING_PRINTSPEED7 • EPOS2_PRINTER_SETTING_PRINTSPEED8 • EPOS2_PRINTER_SETTING_PRINTSPEED9 • EPOS2_PRINTER_SETTING_PRINTSPEED10 • EPOS2_PRINTER_SETTING_PRINTSPEED11 • EPOS2_PRINTER_SETTING_PRINTSPEED12 • EPOS2_PRINTER_SETTING_PRINTSPEED13
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D30

TM-T20***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 831 dots	576 x 831 dots
Maximum page mode area	420 x 1662 dots	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T20
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T20II***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 831 dots	576 x 831 dots
Maximum page mode area	420 x 1662 dots	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T20
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
setPrinterSetting	type	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PRINTDENSITY • EPOS2_PRINTER_SETTING_PRINTSPEED
	value	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PRINTDENSITY85 • EPOS2_PRINTER_SETTING_PRINTDENSITY90 • EPOS2_PRINTER_SETTING_PRINTDENSITY95 • EPOS2_PRINTER_SETTING_PRINTDENSITY100 • EPOS2_PRINTER_SETTING_PRINTDENSITY105 • EPOS2_PRINTER_SETTING_PRINTDENSITY110 • EPOS2_PRINTER_SETTING_PRINTDENSITY115 • EPOS2_PRINTER_SETTING_PRINTSPEED1 • EPOS2_PRINTER_SETTING_PRINTSPEED2 • EPOS2_PRINTER_SETTING_PRINTSPEED3 • EPOS2_PRINTER_SETTING_PRINTSPEED4 • EPOS2_PRINTER_SETTING_PRINTSPEED5 • EPOS2_PRINTER_SETTING_PRINTSPEED6 • EPOS2_PRINTER_SETTING_PRINTSPEED7 • EPOS2_PRINTER_SETTING_PRINTSPEED8 • EPOS2_PRINTER_SETTING_PRINTSPEED9 • EPOS2_PRINTER_SETTING_PRINTSPEED10 • EPOS2_PRINTER_SETTING_PRINTSPEED11 • EPOS2_PRINTER_SETTING_PRINTSPEED12 • EPOS2_PRINTER_SETTING_PRINTSPEED13

TM-T20III***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	Standard mode	420 x 1662 dots
	42 column mode	378 x 1662 dots
Maximum page mode area	Standard mode	464 x 3324 dots
	42 column mode	639 x 3324 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T20
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T20IIIL***Printer Specifications***

Item	80mm Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T20
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T20X***Printer Specifications***

Item	80mm Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T20
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T60***Printer Specifications***

Item	58mm Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T60
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_CHINESE
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

TM-T70***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	ANK model	416 x 1662 dots 512 x 831 dots
	Multiple languages model	416 x 1662 dots 576 x 1662 dots
Maximum page mode area	ANK model	416 x 1662 dots 512 x 1662 dots
	Multiple languages model	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T70
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

TM-T70II***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	ANK model	416 x 1662 dots
	Multiple languages model	416 x 1662 dots
Maximum page mode area	ANK model	416 x 1662 dots
	Multiple languages model	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> EPOS2_TM_T70
	lang	<ul style="list-style-type: none"> EPOS2_MODEL_ANK EPOS2_MODEL_CHINESE EPOS2_MODEL_TAIWAN EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> EPOS2_LANG_EN (default) EPOS2_LANG_JA EPOS2_LANG_ZH_CN EPOS2_LANG_ZH_TW EPOS2_LANG_KO EPOS2_LANG_TH EPOS2_LANG_VI EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> EPOS2_FONT_A (default) EPOS2_FONT_B EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> EPOS2_COLOR_1 (default) EPOS2_PARAM_UNSPECIFIED EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> EPOS2_COLOR_1 EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> EPOS2_MODE_MONO EPOS2_MODE_MONO_HIGH_DENSITY EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
addSymbol	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none">• EPOS2_PATTERN_NONE• EPOS2_PATTERN_A• EPOS2_PATTERN_B• EPOS2_PATTERN_C• EPOS2_PATTERN_D• EPOS2_PATTERN_E• EPOS2_PATTERN_ERROR• EPOS2_PATTERN_PAPER_EMPTY• EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none">• 1 to 255• EPOS2_PARAM_DEFAULT

TM-T81II***Printer Specifications***

Item	58mm Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T81
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_CHINESE • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

TM-T81III***Printer Specifications***

Item	80mm Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T81
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T82***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 831 dots	576 x 831 dots
Maximum page mode area	420 x 1662 dots	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T82
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_CHINESE • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T82II***Printer Specifications***

Item	Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T82
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T82III***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	Standard mode	420 x 1662 dots
	42 column mode	378 x 1662 dots
Maximum page mode area	Standard mode	464 x 3324 dots
	42 column mode	639 x 3324 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T82
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T82IIIL***Printer Specifications***

Item	80mm Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T82
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T82X***Printer Specifications***

Item	80mm Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T82
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T83III***Printer Specifications***

Item		80mm Specification
Amount of initial feed		30 dots
Initial page mode area	for Korea	546 x 831 dots
	Other	576 x 831 dots
Maximum page mode area	for Korea	546 x 1662 dots
	Other	576 x 1662 dots
Baseline of Font A		21 dots from the top of the character
Baseline of Font B		16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T83III
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_KOREAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
addSymbol	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none">• EPOS2_PATTERN_NONE• EPOS2_PATTERN_A• EPOS2_PATTERN_B• EPOS2_PATTERN_C• EPOS2_PATTERN_D• EPOS2_PATTERN_E• EPOS2_PATTERN_ERROR• EPOS2_PATTERN_PAPER_EMPTY• EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none">• 1 to 255• EPOS2_PARAM_DEFAULT

TM-T88V***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	360 x 831 dots	512 x 831 dots
Maximum page mode area	360 x 1662 dots	512 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	ANK	16 dots from the top of the character
	Chinese characters	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T88
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-T88VI***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	360 x 831 dots	512 x 831 dots
Maximum page mode area	360 x 1662 dots	512 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	ANK	16 dots from the top of the character
	Chinese characters	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T88
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
setPrinterSetting	value	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PAPERWIDTH58_0 • EPOS2_PRINTER_SETTING_PAPERWIDTH80_0 • EPOS2_PRINTER_SETTING_PRINTDENSITYDIP • EPOS2_PRINTER_SETTING_PRINTDENSITY70 • EPOS2_PRINTER_SETTING_PRINTDENSITY75 • EPOS2_PRINTER_SETTING_PRINTDENSITY80 • EPOS2_PRINTER_SETTING_PRINTDENSITY85 • EPOS2_PRINTER_SETTING_PRINTDENSITY90 • EPOS2_PRINTER_SETTING_PRINTDENSITY95 • EPOS2_PRINTER_SETTING_PRINTDENSITY100 • EPOS2_PRINTER_SETTING_PRINTDENSITY105 • EPOS2_PRINTER_SETTING_PRINTDENSITY110 • EPOS2_PRINTER_SETTING_PRINTDENSITY115 • EPOS2_PRINTER_SETTING_PRINTDENSITY120 • EPOS2_PRINTER_SETTING_PRINTDENSITY125 • EPOS2_PRINTER_SETTING_PRINTDENSITY130 • EPOS2_PRINTER_SETTING_PRINTSPEED1 • EPOS2_PRINTER_SETTING_PRINTSPEED2 • EPOS2_PRINTER_SETTING_PRINTSPEED3 • EPOS2_PRINTER_SETTING_PRINTSPEED4 • EPOS2_PRINTER_SETTING_PRINTSPEED5 • EPOS2_PRINTER_SETTING_PRINTSPEED6 • EPOS2_PRINTER_SETTING_PRINTSPEED7 • EPOS2_PRINTER_SETTING_PRINTSPEED8 • EPOS2_PRINTER_SETTING_PRINTSPEED9 • EPOS2_PRINTER_SETTING_PRINTSPEED10 • EPOS2_PRINTER_SETTING_PRINTSPEED11 • EPOS2_PRINTER_SETTING_PRINTSPEED12 • EPOS2_PRINTER_SETTING_PRINTSPEED13 • EPOS2_PRINTER_SETTING_PRINTSPEED14
downloadFirmwareList	printerModel	<ul style="list-style-type: none"> • TM-T88VI
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110 • EPOS2_DM_D30

TM-T100***Printer Specifications***

Item	80mm Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T100
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

TM-U220***Printer Specifications***

Item	76mm Specification	69.5mm Specification	57.5mm Specification
Amount of initial feed	12 dots		

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_U220
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_THAI
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_COLOR_2 • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_COLOR_2 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addLogo	key2	<ul style="list-style-type: none"> • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

TM-U330***Printer Specifications***

Item	76mm Specification	69.5mm Specification	57.5mm Specification
Amount of initial feed	12 dots		

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_U330
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_CHINESE
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_COLOR_2 • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_COLOR_2 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addLogo	key2	<ul style="list-style-type: none"> • EPOS2_PARAM_DEFAULT
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none">• EPOS2_SYMBOL_QRCODE_MODEL_1• EPOS2_SYMBOL_QRCODE_MODEL_2
	level	<ul style="list-style-type: none">• EPOS2_LEVEL_L• EPOS2_LEVEL_M• EPOS2_LEVEL_Q• EPOS2_LEVEL_H• EPOS2_PARAM_DEFAULT• EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none">• EPOS2_CUT_FEED• EPOS2_CUT_NO_FEED• EPOS2_PARAM_DEFAULT
addFeedPosition	position	<ul style="list-style-type: none">• EPOS2_FEED_CUTTING

TM-P20***Printer Specifications***

Item	Specification
Amount of initial feed	30 dots
Initial page mode area	384 x 2400 dots
Maximum page mode area	384 x 2400 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	21 dots from the top of the character
Baseline of Font C	16 dots from the top of the character
Baseline of Font D	21 dots from the top of the character
Baseline of Font E	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_P20
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_1 • EPOS2_PATTERN_2 • EPOS2_PATTERN_3 • EPOS2_PATTERN_4 • EPOS2_PATTERN_5 • EPOS2_PATTERN_6 • EPOS2_PATTERN_7 • EPOS2_PATTERN_8 • EPOS2_PATTERN_9 • EPOS2_PATTERN_10 • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT
addFeedPosition	position	<ul style="list-style-type: none"> • EPOS2_FEED_CUTTING • EPOS2_FEED_CURRENT_TOF • EPOS2_FEED_NEXT_TOF
addLayout	type	<ul style="list-style-type: none"> • EPOS2_LAYOUT_RECEIPT • EPOS2_LAYOUT_RECEIPT_BM
	height	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
	marginTop	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
	marginBottom	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
	offsetCut	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
	offsetLabel	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
getMaintenanceCounter	type	<ul style="list-style-type: none"> • EPOS2_MAINTENANCE_COUNTER_PAPER_FEED
resetMaintenanceCounter	type	<ul style="list-style-type: none"> • EPOS2_MAINTENANCE_COUNTER_PAPER_FEED
getPrinterSetting	type	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PRINTDENSITY • EPOS2_PRINTER_SETTING_PRINTSPEED

API	Parameter	Specifiable Setting Value
setPrinterSetting	type	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PRINTDENSITY • EPOS2_PRINTER_SETTING_PRINTSPEED
	value	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PRINTDENSITY70 • EPOS2_PRINTER_SETTING_PRINTDENSITY75 • EPOS2_PRINTER_SETTING_PRINTDENSITY80 • EPOS2_PRINTER_SETTING_PRINTDENSITY85 • EPOS2_PRINTER_SETTING_PRINTDENSITY90 • EPOS2_PRINTER_SETTING_PRINTDENSITY95 • EPOS2_PRINTER_SETTING_PRINTDENSITY100 • EPOS2_PRINTER_SETTING_PRINTDENSITY105 • EPOS2_PRINTER_SETTING_PRINTDENSITY110 • EPOS2_PRINTER_SETTING_PRINTDENSITY115 • EPOS2_PRINTER_SETTING_PRINTDENSITY120 • EPOS2_PRINTER_SETTING_PRINTDENSITY125 • EPOS2_PRINTER_SETTING_PRINTDENSITY130 • EPOS2_PRINTER_SETTING_PRINTSPEED1 • EPOS2_PRINTER_SETTING_PRINTSPEED2 • EPOS2_PRINTER_SETTING_PRINTSPEED3 • EPOS2_PRINTER_SETTING_PRINTSPEED4 • EPOS2_PRINTER_SETTING_PRINTSPEED5 • EPOS2_PRINTER_SETTING_PRINTSPEED6 • EPOS2_PRINTER_SETTING_PRINTSPEED7 • EPOS2_PRINTER_SETTING_PRINTSPEED8 • EPOS2_PRINTER_SETTING_PRINTSPEED9 • EPOS2_PRINTER_SETTING_PRINTSPEED10

TM-P60 (Receipt)

Printer Specifications

Item	58mm Specification	60mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 1200 dots	432 x 1200 dots
Maximum page mode area	420 x 1200 dots	432 x 1200 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	21 dots from the top of the character	
Baseline of Font C	15 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_P60
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

TM-P60 (Peeler)***Printer Specifications***

Item	58mm Specification	60mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 1200 dots	432 x 1200 dots
Maximum page mode area	420 x 1200 dots	432 x 1200 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	21 dots from the top of the character	
Baseline of Font C	15 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_P60
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addCut	type	<ul style="list-style-type: none">• EPOS2_CUT_FEED• EPOS2_CUT_NO_FEED• EPOS2_PARAM_DEFAULT

TM-P60II (Receipt)

Printer Specifications

Item	Receipt Specification	Die-cut Label Specification
Amount of initial feed	30 dots	
Initial page mode area	432 x 1624 dots	400 x 1624 dots
Maximum page mode area	432 x 1624 dots	400 x 1624 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	
Baseline of Font C	15 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_P60II
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none">• EPOS2_PATTERN_NONE• EPOS2_PATTERN_1• EPOS2_PATTERN_2• EPOS2_PATTERN_3• EPOS2_PATTERN_4• EPOS2_PATTERN_5• EPOS2_PATTERN_6• EPOS2_PATTERN_7• EPOS2_PATTERN_8• EPOS2_PATTERN_9• EPOS2_PATTERN_10• EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none">• 1 to 255• EPOS2_PARAM_DEFAULT

TM-P60II (Peeler)

Printer Specifications

Item	Receipt Specification	Die-cut Label Specification
Amount of initial feed	30 dots	
Initial page mode area	432 x 1624 dots	400 x 1624 dots
Maximum page mode area	432 x 1624 dots	400 x 1624 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	
Baseline of Font C	15 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_P60II
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none">• EPOS2_PATTERN_NONE• EPOS2_PATTERN_1• EPOS2_PATTERN_2• EPOS2_PATTERN_3• EPOS2_PATTERN_4• EPOS2_PATTERN_5• EPOS2_PATTERN_6• EPOS2_PATTERN_7• EPOS2_PATTERN_8• EPOS2_PATTERN_9• EPOS2_PATTERN_10• EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none">• 1 to 255• EPOS2_PARAM_DEFAULT

TM-P80***Printer Specifications***

Item	Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 1662 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	21 dots from the top of the character
Baseline of Font C	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_P80
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_1 • EPOS2_PATTERN_2 • EPOS2_PATTERN_3 • EPOS2_PATTERN_4 • EPOS2_PATTERN_5 • EPOS2_PATTERN_6 • EPOS2_PATTERN_7 • EPOS2_PATTERN_8 • EPOS2_PATTERN_9 • EPOS2_PATTERN_10 • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT
addFeedPosition	position	<ul style="list-style-type: none"> • EPOS2_FEED_CUTTING • EPOS2_FEED_CURRENT_TOF • EPOS2_FEED_NEXT_TOF
addLayout	type	<ul style="list-style-type: none"> • EPOS2_LAYOUT_RECEIPT • EPOS2_LAYOUT_RECEIPT_BM
	height	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
	marginTop	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
	marginBottom	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
	offsetCut	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)
	offsetLabel	<ul style="list-style-type: none"> • Receipt (without black mark) • Receipt (with black mark)

TM-H6000V***Printer Specifications***

Item	Receipt	Slip	Validation	Endorsement	Endorsement (40cpl)
Amount of initial feed	30 dots	24 dots			18 dots
Initial page mode area	512 x 1662 dots	540 x 1408 dots	-		
Maximum page mode area	512 x 2400 dots	540 x 1408 dots	-		
Baseline of Font A	21 dots from the top of the character	9 dots from the top of the character	9 dots from the top of the character	7 dots from the top of the character	
Baseline of Font B	21 dots from the top of the character	9 dots from the top of the character	9 dots from the top of the character	-	
Baseline of Font C	18 dots from the top of the character	-			

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_H6000
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110 • EPOS2_DM_D210

TM-T20II-i***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	420 x 831 dots	576 x 831 dots
Maximum page mode area	420 x 1662 dots	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T20
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110

TM-T70-i***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	ANK model	416 x 1662 dots 512 x 831 dots
	Multiple languages model	416 x 1662 dots 576 x 1662 dots
Maximum page mode area	ANK model	416 x 1662 dots 512 x 1662 dots
	Multiple languages model	416 x 1662 dots 576 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T70
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110

TM-T82II-i***Printer Specifications***

Item	Specification
Amount of initial feed	30 dots
Initial page mode area	576 x 831 dots
Maximum page mode area	576 x 1662 dots
Baseline of Font A	21 dots from the top of the character
Baseline of Font B	16 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T82
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110

TM-T83II-i***Printer Specifications***

Item	Specification	
Amount of initial feed		30 dots
Initial page mode area		512 x 1662 dots
Maximum page mode area		512 x 1662 dots
Baseline of Font A		21 dots from the top of the character
Baseline of Font B	ANK	16 dots from the top of the character
	Chinese characters	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T83
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_KOREAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110

TM-T88V-i***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	360 x 831 dots	512 x 831 dots
Maximum page mode area	360 x 1662 dots	512 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	ANK	16 dots from the top of the character
	Chinese characters	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T88
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110

TM-T88VI-iHUB***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	360 x 831 dots	512 x 831 dots
Maximum page mode area	360 x 1662 dots	512 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	ANK	16 dots from the top of the character
	Chinese characters	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T88
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addPageLine	lineStyle	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addPageRectangle	Style	<ul style="list-style-type: none"> • EPOS2_LINE_THIN • EPOS2_LINE_MEDIUM • EPOS2_LINE_THICK • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
setPrinterSetting	value	<ul style="list-style-type: none"> • EPOS2_PRINTER_SETTING_PAPERWIDTH58_0 • EPOS2_PRINTER_SETTING_PAPERWIDTH80_0 • EPOS2_PRINTER_SETTING_PRINTDENSITYDIP • EPOS2_PRINTER_SETTING_PRINTDENSITY70 • EPOS2_PRINTER_SETTING_PRINTDENSITY75 • EPOS2_PRINTER_SETTING_PRINTDENSITY80 • EPOS2_PRINTER_SETTING_PRINTDENSITY85 • EPOS2_PRINTER_SETTING_PRINTDENSITY90 • EPOS2_PRINTER_SETTING_PRINTDENSITY95 • EPOS2_PRINTER_SETTING_PRINTDENSITY100 • EPOS2_PRINTER_SETTING_PRINTDENSITY105 • EPOS2_PRINTER_SETTING_PRINTDENSITY110 • EPOS2_PRINTER_SETTING_PRINTDENSITY115 • EPOS2_PRINTER_SETTING_PRINTDENSITY120 • EPOS2_PRINTER_SETTING_PRINTDENSITY125 • EPOS2_PRINTER_SETTING_PRINTDENSITY130 • EPOS2_PRINTER_SETTING_PRINTSPEED1 • EPOS2_PRINTER_SETTING_PRINTSPEED2 • EPOS2_PRINTER_SETTING_PRINTSPEED3 • EPOS2_PRINTER_SETTING_PRINTSPEED4 • EPOS2_PRINTER_SETTING_PRINTSPEED5 • EPOS2_PRINTER_SETTING_PRINTSPEED6 • EPOS2_PRINTER_SETTING_PRINTSPEED7 • EPOS2_PRINTER_SETTING_PRINTSPEED8 • EPOS2_PRINTER_SETTING_PRINTSPEED9 • EPOS2_PRINTER_SETTING_PRINTSPEED10 • EPOS2_PRINTER_SETTING_PRINTSPEED11 • EPOS2_PRINTER_SETTING_PRINTSPEED12 • EPOS2_PRINTER_SETTING_PRINTSPEED13 • EPOS2_PRINTER_SETTING_PRINTSPEED14
downloadFirmwareList	printerModel	<ul style="list-style-type: none"> • TM-T88VI-iHUB
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110 • EPOS2_DM_D30

TM-U220-i***Printer Specifications***

Item	76mm Specification	69.5mm Specification	57.5mm Specification
Amount of initial feed	12 dots		

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_U220
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_THAI
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_COLOR_2 • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_COLOR_2 • EPOS2_PARAM_DEFAULT
	mode	<ul style="list-style-type: none"> • EPOS2_MODE_MONO • EPOS2_MODE_MONO_HIGH_DENSITY • EPOS2_PARAM_DEFAULT
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110

TM-T70II-DT***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	ANK model	416 x 1662 dots
	Multiple languages model	416 x 1662 dots
Maximum page mode area	ANK model	416 x 1662 dots
	Multiple languages model	416 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> EPOS2_TM_T70
	lang	<ul style="list-style-type: none"> EPOS2_MODEL_ANK EPOS2_MODEL_CHINESE EPOS2_MODEL_TAIWAN EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> EPOS2_LANG_EN (default) EPOS2_LANG_JA EPOS2_LANG_ZH_CN EPOS2_LANG_ZH_TW EPOS2_LANG_KO EPOS2_LANG_TH EPOS2_LANG_VI EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> EPOS2_FONT_A (default) EPOS2_FONT_B EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> EPOS2_COLOR_1 (default) EPOS2_PARAM_UNSPECIFIED EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> EPOS2_COLOR_1 EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
addSymbol	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none">• EPOS2_PATTERN_NONE• EPOS2_PATTERN_A• EPOS2_PATTERN_B• EPOS2_PATTERN_C• EPOS2_PATTERN_D• EPOS2_PATTERN_E• EPOS2_PATTERN_ERROR• EPOS2_PATTERN_PAPER_EMPTY• EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none">• EPOS2_DM_D110• EPOS2_DM_D30

TM-T70II-DT2***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	ANK model	416 x 1662 dots
	Multiple languages model	416 x 1662 dots
Maximum page mode area	ANK model	416 x 1662 dots
	Multiple languages model	416 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T70
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
addSymbol	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addSound	pattern	<ul style="list-style-type: none">• EPOS2_PATTERN_NONE• EPOS2_PATTERN_A• EPOS2_PATTERN_B• EPOS2_PATTERN_C• EPOS2_PATTERN_D• EPOS2_PATTERN_E• EPOS2_PATTERN_ERROR• EPOS2_PATTERN_PAPER_EMPTY• EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none">• EPOS2_DM_D110• EPOS2_DM_D30

TM-T88V-DT***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	360 x 831 dots	512 x 831 dots
Maximum page mode area	360 x 1662 dots	512 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	ANK	16 dots from the top of the character
	Chinese characters	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T88
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110 • EPOS2_DM_D30

TM-T88VI-DT2***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	360 x 831 dots	512 x 831 dots
Maximum page mode area	360 x 1662 dots	512 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	ANK	16 dots from the top of the character
	Chinese characters	15 dots from the top of the character

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T88
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_SOUTHASIA
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED • EPOS2_SYMBOL_AZTECCODE_FULLRANGE • EPOS2_SYMBOL_AZTECCODE_COMPACT • EPOS2_SYMBOL_DATAMATRIX_SQUARE • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_8 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_12 • EPOS2_SYMBOL_DATAMATRIX_RECTANGLE_16
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
addSound	pattern	<ul style="list-style-type: none"> • EPOS2_PATTERN_NONE • EPOS2_PATTERN_A • EPOS2_PATTERN_B • EPOS2_PATTERN_C • EPOS2_PATTERN_D • EPOS2_PATTERN_E • EPOS2_PATTERN_ERROR • EPOS2_PATTERN_PAPER_EMPTY • EPOS2_PARAM_DEFAULT
	repeat	<ul style="list-style-type: none"> • 1 to 255 • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110 • EPOS2_DM_D30

TM-H6000IV-DT***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	360 x 831 dots	512 x 831 dots
Maximum page mode area	360 x 1662 dots	512 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_H6000
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT
initWithDisplayModel	displaySeries	<ul style="list-style-type: none"> • EPOS2_DM_D110 • EPOS2_DM_D30

TM-T88IV***Printer Specifications***

Item		58mm Specification	80mm Specification
Amount of initial feed		30 dots	
Initial page mode area	Monochrome printing	360 x 831 dots	512 x 831 dots
	Two-color printing	360 x 415 dots	512 x 415 dots
Maximum page mode area	Monochrome printing	360 x 1662 dots	512 x 1662 dots
	Two-color printing	360 x 831 dots	512 x 831 dots
Baseline of Font A		21 dots from the top of the character	
Baseline of Font B		16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T88
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_COLOR_2 • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_COLOR_2 • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

TM-T90***Printer Specifications***

Item	58mm Specification	60mm Specification	80mm Specification	
Amount of initial feed	30 dots			
Initial page mode area	Monochrome printing	420 x 738 dots	384 x 831 dots	576 x 738 dots
	Two-color printing	420 x 369 dots	384 x 415 dots	576 x 369 dots
Maximum page mode area	Monochrome printing	420 x 1476 dots	384 x 1662 dots	576 x 1476 dots
	Two-color printing	420 x 738 dots	384 x 831 dots	576 x 738 dots
Baseline of Font A	21 dots from the top of the character			
Baseline of Font B	16 dots from the top of the character			

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_T90
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_THAI
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_COLOR_2 • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_COLOR_2 • EPOS2_PARAM_DEFAULT
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_FONT_C • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

TM-L90***Printer Specifications***

Item	Receipt Specification	Die-cut Label Specification
Amount of initial feed	30 dots	
Initial page mode area	Monochrome printing	576 x 738 dots 560 x 738 dots
	Two-color printing	576 x 369 dots 560 x 369 dots
Maximum page mode area	Monochrome printing	576 x 1476 dots 560 x 1476 dots
	Two-color printing	576x 738 dots 560 x 738 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	ANK: 16 Chinese characters: 15 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_L90
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_ANK • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN • EPOS2_MODEL_KOREAN • EPOS2_MODEL_THAI
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_COLOR_2 • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT

API	Parameter	Specifiable Setting Value
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_COLOR_2 • EPOS2_PARAM_DEFAULT
addBarcode	type	<ul style="list-style-type: none"> • EPOS2_BARCODE_UPC_A • EPOS2_BARCODE_UPC_E • EPOS2_BARCODE_EAN13 • EPOS2_BARCODE_JAN13 • EPOS2_BARCODE_EAN8 • EPOS2_BARCODE_JAN8 • EPOS2_BARCODE_CODE39 • EPOS2_BARCODE_ITF • EPOS2_BARCODE_CODABAR • EPOS2_BARCODE_CODE93 • EPOS2_BARCODE_CODE128
	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addCut	type	<ul style="list-style-type: none">• EPOS2_CUT_FEED• EPOS2_CUT_NO_FEED• EPOS2_PARAM_DEFAULT

TM-H6000IV***Printer Specifications***

Item	58mm Specification	80mm Specification
Amount of initial feed	30 dots	
Initial page mode area	360 x 831 dots	512 x 831 dots
Maximum page mode area	360 x 1662 dots	512 x 1662 dots
Baseline of Font A	21 dots from the top of the character	
Baseline of Font B	16 dots from the top of the character	

Parameter Restrictions

API	Parameter	Specifiable Setting Value
initWithPrinterSeries	printerSeries	<ul style="list-style-type: none"> • EPOS2_TM_H6000
	lang	<ul style="list-style-type: none"> • EPOS2_MODEL_CHINESE • EPOS2_MODEL_TAIWAN
addTextLang	lang	<ul style="list-style-type: none"> • EPOS2_LANG_EN (default) • EPOS2_LANG_JA • EPOS2_LANG_ZH_CN • EPOS2_LANG_ZH_TW • EPOS2_LANG_KO • EPOS2_LANG_TH • EPOS2_LANG_VI • EPOS2_PARAM_DEFAULT
addTextFont	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT
addTextStyle	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 (default) • EPOS2_PARAM_UNSPECIFIED • EPOS2_PARAM_DEFAULT
addImage	color	<ul style="list-style-type: none"> • EPOS2_COLOR_1 • EPOS2_PARAM_DEFAULT
addBarcode	font	<ul style="list-style-type: none"> • EPOS2_FONT_A (default) • EPOS2_FONT_B • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED

API	Parameter	Specifiable Setting Value
addSymbol	type	<ul style="list-style-type: none"> • EPOS2_SYMBOL_PDF417_STANDARD • EPOS2_SYMBOL_PDF417_TRUNCATED • EPOS2_SYMBOL_QRCODE_MODEL_1 • EPOS2_SYMBOL_QRCODE_MODEL_2 • EPOS2_SYMBOL_MAXICODE_MODE_2 • EPOS2_SYMBOL_MAXICODE_MODE_3 • EPOS2_SYMBOL_MAXICODE_MODE_4 • EPOS2_SYMBOL_MAXICODE_MODE_5 • EPOS2_SYMBOL_MAXICODE_MODE_6 • EPOS2_SYMBOL_GS1_DATABAR_STACKED • EPOS2_SYMBOL_GS1_DATABAR_STACKED_OMNIDIRECTIONAL • EPOS2_SYMBOL_GS1_DATABAR_EXPANDED_STACKED
	level	<ul style="list-style-type: none"> • EPOS2_LEVEL_0 • EPOS2_LEVEL_1 • EPOS2_LEVEL_2 • EPOS2_LEVEL_3 • EPOS2_LEVEL_4 • EPOS2_LEVEL_5 • EPOS2_LEVEL_6 • EPOS2_LEVEL_7 • EPOS2_LEVEL_8 • EPOS2_LEVEL_L • EPOS2_LEVEL_M • EPOS2_LEVEL_Q • EPOS2_LEVEL_H • EPOS2_PARAM_DEFAULT • EPOS2_PARAM_UNSPECIFIED
addCut	type	<ul style="list-style-type: none"> • EPOS2_CUT_FEED • EPOS2_CUT_NO_FEED • EPOS2_PARAM_DEFAULT

Usage restriction by firmware version

Availability and restriction on the use of APIs and parameters depends on the versions of the firmware and software installed on the printer. For how to check the versions and/or update the firmware and software, refer to the Technical Reference Guide of the printer.

TM-i Series/TM-DT Series

- Supported by TM-DT software Ver. 2.5 and TM-i firmware 4.0 or later.

Class	API	Parameter	Value
Epos2CommBox class	-	-	-

- Supported by TM-DT software Ver. 2.5 and TM-i firmware 4.1 or later.

Class	API	Parameter	Value
Epos2Printer class	requestPrintJobStatus	-	-
Epos2Printer class	addSymbol	data	QR Code Micro
Epos2Printer class	addSymbol	type	Printer.SymbolType.QRCodeMicro
Epos2Printer class	setReceiveEventDelegate	args	printJobId

- Supported by TM-DT software Ver. 3.02 and TM-i firmware 4.4 or later.

Class	API	Parameter	Value
Epos2Discovery class	-	-	-

- Supported by TM-DT software Ver. 4.0 or later.

Class	API	Parameter	Value
Epos2POSKeyboard class	-	-	-
Epos2MSR class	-	-	-
Epos2OtherPeripheral class	-	-	-
Epos2Discovery class	start	deviceType	EPOS2_TYPE_CCHANGER
			EPOS2_TYPE_POS_KEYBOARD
			EPOS2_TYPE_CAT
			EPOS2_TYPE_MSR
			EPOS2_TYPE_OTHER_PERIPHERAL

TM-m30

- Supported by TM-m30 firmware Ver. 1.40 ESC/POS or later.

Class	API	Parameter	Value
Epos2BarcodeScanner class	-	-	-

- Supported with the following versions of firmware.

- TM-m30 firmware Ver. 1.46A ESC/POS or later
- TM-m30 firmware Ver. 1.46B ESC/POS or later

Class	API	Parameter	Value
Epos2GermanyFiscalElement class	-	-	-

TM-T88VI

- Supported by TM-T88VI firmware Ver. 40.50 ESC/POS or later.

Class	API	Parameter	Value
Epos2BarcodeScanner class	-	-	-

TM-T88VI-iHUB

- Supported with the following versions of firmware.

- TM-T88VI-iHUB firmware Ver. 50.52A ESC/POS or later
- TM-T88VI-iHUB firmware Ver. 50.52B ESC/POS or later

Class	API	Parameter	Value
Epos2GermanyFiscalElement class	-	-	-

Sample Programs

The sample programs provided with Epson ePOS SDK for iOS are implementation samples of iOS applications. Xcode iOS application projects that include the Objective-C source files are provided.



- Xcode iOS application projects that include Swift source files are also provided with [ePOS2Printer](#).
- parseNFC of [ePOS2EasySelection](#) is developed with Swift 4.0.

Functionality

The sample programs provide the following functionality.

ePOS2Printer

Printer search and specification

- Specifies the connection type.
- Displays a list of search results.
- Retrieves target information required for the connection selected from the search results.
- *Bluetooth* pairing function

Sample receipt printing

Sample coupon printing

Printer status confirmation

- Confirms the status of printers before printing.
- When the printer is not capable of printing, the program generates a notification message of the possible causes and corresponding action of the error.

Display of print results and printer status

- Sends notification of the print result after printing.
- Notifies the users of an API error that occurred while searching for printers, or during printing sample receipts or coupons.

Log Output Settings

- Enables log output to terminal storage when displaying the main screen.

ePOS2 Hybrid Printer

- Printer search and specification
 - Displays a list of search results.
 - Retrieves target information required for the connection selected from the search results.
 - *Bluetooth* pairing function
- Controls operations continuously from endorsement printing after MICR reading to slip and receipt printings.
- Validation printing
- Printer status confirmation
 - Confirms the status of printers before printing.
 - When the printer is not capable of printing, the program generates a notification message of the possible causes and corresponding action of the error.
- Display of print results and printer status
 - Sends notification of the print result after printing.
 - The program generates a message corresponding to the printer status at the time that the printer result notification was made.
 - Notifies the users of an API error that occurred while searching for printers or printing samples.
- Sets the log output function.
 - Enables log output to terminal storage when displaying the main screen.

ePOS2Discovery

- Filter Option settings
- Search of printers and peripheral devices
- Search initiation
- Display of search results
- Search completion
- Error notification
 - Notifies the users of an API error that occurred when starting a search, during searching, or in the process of completing a search.

ePOS2LineDisplay

- Display of the specified text on the customer display
- Turns on or off the blinking display
- Error notification
 - When failed to connect to the customer display, notifies the user of the connection error.
 - Notifies the users of an API error that occurred while sending display data to the customer display.

ePOS2Keyboard

- Starts and ends connection with the printer
 - Starts connection with the keyboard specified in the Target text boxes.
 - Ends connection with the connected keyboard.
- Display of text input with the keyboard in text boxes in the application
- Error notification
 - Notifies the users of an API error that occurred while entering text with the keyboard.

ePOS2POSKeyboard

- Starts and ends connection with TM-DT
 - Connects to the specified keyboard.
 - When failed to connect to the keyboard, notifies the user of the connection error.
- Display of keycode input with the keyboard in text boxes in the application
- Error notification
 - Notifies the users of an API error that occurred while entering keycode with the keyboard.

ePOS2BarcodeScanner

- Starts and ends connection with the printer
 - Starts connection with the barcode scanner specified in the Target text boxes.
 - Ends connection with the connected barcode scanner.
- Display of data read by the barcode scanner in text boxes in the application
- Error notification
 - Notifies the users of an API error that occurred while reading data with the barcode scanner.

ePOS2MSR

- Starts and ends connection with TM-DT
 - Starts connection with the MSR specified in the Target text boxes.
 - Ends connection with the connected MSR.
- Display of data read by the MSR in text boxes in the application
- Error notification
 - Notifies the users of an API error that occurred while reading data with the MSR.

ePOS2SimpleSerial

- Starts and ends connection with the printer
 - Starts connection with the serial communication device specified in the Target text boxes.
 - Ends connection with the connected serial communication device.
- Transmission of data specified by the application to the serial communication device.
- Display of response commands from the serial communication device in the application
- Error notification
 - Notifies the users of an API error that occurred while sending data to the serial communication device.

ePOS2GermanyFiscalElement

- Peripheral device settings
 - Searches for the printer, and displays the search results in a list.
 - Specifies the printer to be used.
 - Specifies the German fiscal element (TSE) to be used.
 - Specifies the customer display to be used.
 - Sets up German fiscal element (TSE) to be used.
- Purchase of a product
 - A product is selected by pushing a button.
 - The barcode is read by the barcode scanner, and the product is selected.
 - Displays the price of the selected product on the customer display.
 - Writes the information of the selected product to German fiscal element (TSE).
- Payment for a product
 - Displays the total price of the products on the customer display.
 - Prints the receipt.
 - Writes the information of the product for which payment is finished to German fiscal element (TSE).
- Export from German fiscal element (TSE)
 - Exports the information written to German fiscal element (TSE).
- Information acquisition from German fiscal element (TSE)
 - Acquires the information of German fiscal element (TSE).
- Printer firmware update
 - Acquires the firmware version of the connected printer.
 - Acquires the released version of printer firmware.
 - Updates the printer firmware.

ePOS2OtherPeripheral

- Starts and ends connection with TM-DT
 - Starts connection with the device specified in the Target text boxes.
 - Ends connection with connected device.
- Transmission of data specified by the application to the device
- Display of response commands from the device in the application
- Error notification
 - Notifies the users of an API error that occurred at the timing when the process was run by the device.

ePOS2CommBox

- Starts and ends connection with the printer
 - Starts connection with the communication box specified in the Target text boxes.
 - Ends connection with the connected communication box.
- Transmission of messages to the member ID specified by the application
- Error notification
 - Notifies the users of an API error that occurred when sending a message.

ePOS2EasySelection

- Easy connection with a printer by using its NFC tag or QR code.
 - Acquires printer information from the NFC tag.
 - Acquires printer information from the QR code.
 - Opens the port by using the acquired printer information.
- Printing of a QR code that enables easy printer selection.
 - Creates a QR code that contains the printer information from the printer search result.
- Easy connection with a printer by using iBeacon data
 - Acquires printer information from iBeacon data
 - Opens the port by using the acquired printer information

ePOS2_POSAppForTerminalModel

Peripheral device settings

- Searches for the printer, and displays the search results in a list.
- Specifies the printer to be used.
- Specifies the customer display to be used.
- Specifies the barcode scanner to be used.

Purchase of a product

- A product is selected by pushing a button.
- The barcode is read by the barcode scanner, and the product is selected.
- Displays the price of the selected product on the customer display.
- Displays the total price of the selected products on the application software.

Payment for a product

- Displays the total price of the products on the customer display.
- Displays the amount paid on the application software.
- Displays the amount paid on the customer display.
- Displays the amount of change on the application software.
- Displays the amount of change on the customer display.
- Prints the receipt.

Error notification

- Notifies the user of an error that occurred in the connected peripheral device.

Use Environment

Refer to [Epson ePOS SDK for iOS Development Environment](#) and [Application Operating Environment](#).



Change the Xcode project settings according to your development environment.

Installation Procedure

- 1** Extract the sample programs from the zip file and store the extracted files at any desired location.
- 2** Double-click ePOS2_*.xcodeproj within the extracted files.
- 3** After starting Xcode, select **Scheme** as the target device.
- 4** Click **Run** in the upper-left.
- 5** The sample program is installed to the target device and the sample program starts up.



Enable "Near Field Communication Tag Reading" of Xcode project for using the parseNFC of ePOS2EasySelection.

Application Guide

To search printers

Starts searching

```
Epos2FilterOption *filterOption = nil;  
filterOption = [[Epos2FilterOption alloc] init];  
  
filterOption.porttype = EPOS2_PORTTYPE_ALL;  
filterOption.broadcast = @"255.255.255.255"  
filterOption.deviceModel = EPOS2_MODEL_ALL;  
filterOption.deviceType = EPOS2_TYPE_ALL;
```

Starts searching

```
result = [Epos2Discovery start:filterOption Delegate:self];  
if (result != EPOS2_CODE_SUCCESS) {  
    //Displays error messages  
}
```

Notifies the detected devices

```
- (void) onDiscovery:(Epos2DeviceInfo *)deviceInfo  
{  
    //Display the detected device in the application software  
}
```

Stops searching

```
- (void)stopDiscovery  
{  
    int result = EPOS2_SUCCESS;  
    result = [Epos2Discovery stop];  
    if (result != EPOS2_CODE_SUCCESS) {  
        //Displays error messages  
    }  
}
```

To monitor continuously

```
When application starts
int result = EPOS2_SUCCESS;
Epos2Printer printer_ = nil
printer_ = [[Epos2Printer alloc] initWithPrinterModel:EPOS2_TM_T88
lang:EPOS2_MODEL_ANK];
[printer_ setStatusChangeEventDelegate:self]

result = [printer_ connect:@>"TCP:192.168.192.168" timeout:EPOS2_PARAM_DEFAULT];

[printer_ setInterval:3000];

result = [printer_ startMonitor];
if (result != EPOS2_CODE_SUCCESS) {
    //Displays error messages
}

//Buffers the print data(addText..)
//Sends the print data (sendData)

//Buffers the print data(addText..)
//Sends the print data (sendData)

//Buffers the print data(addText..)
//Sends the print data (sendData)

When application closes
result = [printer_ stopMonitor];
if (result != EPOS2_CODE_SUCCESS) {
    //Displays error messages
}

result = [printer_ disconnect];
if (result != EPOS2_CODE_SUCCESS) {
    //Displays error messages
}
```


```
(void) onPtrStatusChange:(Epos2Printer *)printerObj EventType:(int)eventType
{
    switch (eventType) {
        case EPOS2_EVENT_ONLINE:
            break;
        case EPOS2_EVENT_OFFLINE:
            //Displays notification messages
            break;
        case EPOS2_EVENT_POWER_OFF:
            //Displays notification messages
            break;
        case EPOS2_EVENT_COVER_CLOSE:
            //Displays notification messages
            break;
        case EPOS2_EVENT_COVER_OPEN:
            //Displays notification messages
            break;
        case EPOS2_EVENT_PAPER_OK:
            //Displays notification messages
            break;
        case EPOS2_EVENT_PAPER_NEAR_END:
            //Displays notification messages
            break;
        case EPOS2_EVENT_PAPER_EMPTY:
            //Displays notification messages
            break;
        case EPOS2_EVENT_DRAWER_HIGH:
            //Displays notification messages
            break;
        case EPOS2_EVENT_DRAWER_LOW:
            //Displays notification messages
            break;
        case EPOS2_EVENT_BATTERY_ENOUGH:
            //Displays notification messages
            break;
        case EPOS2_EVENT_BATTERY_EMPTY:
            //Displays notification messages
            break;
        default:
            break;
    }
}
```



Refer to [Error Status and countermeasures](#) for the messages displayed on "Displays notification messages".


To use the same printer from multiple mobile devices

The following shows a processing flow when using a single printer from the mobile terminal A and B.

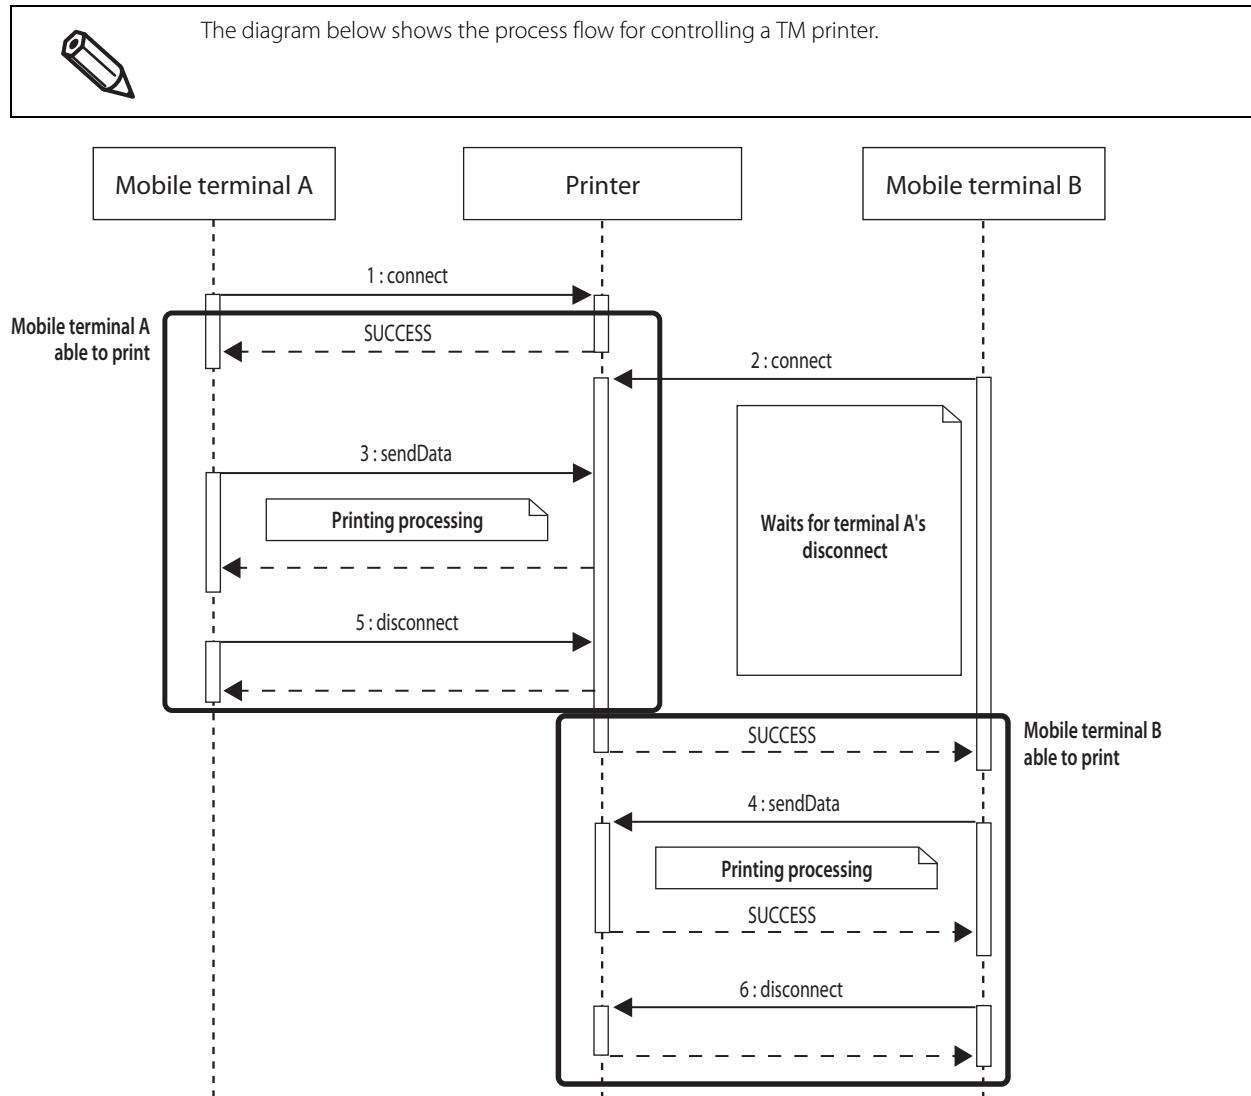


To specify a transaction

Put the set of print processing to be carried out consecutively (such as a single receipt or a single coupon) between `beginTransaction` and `endTransaction`.

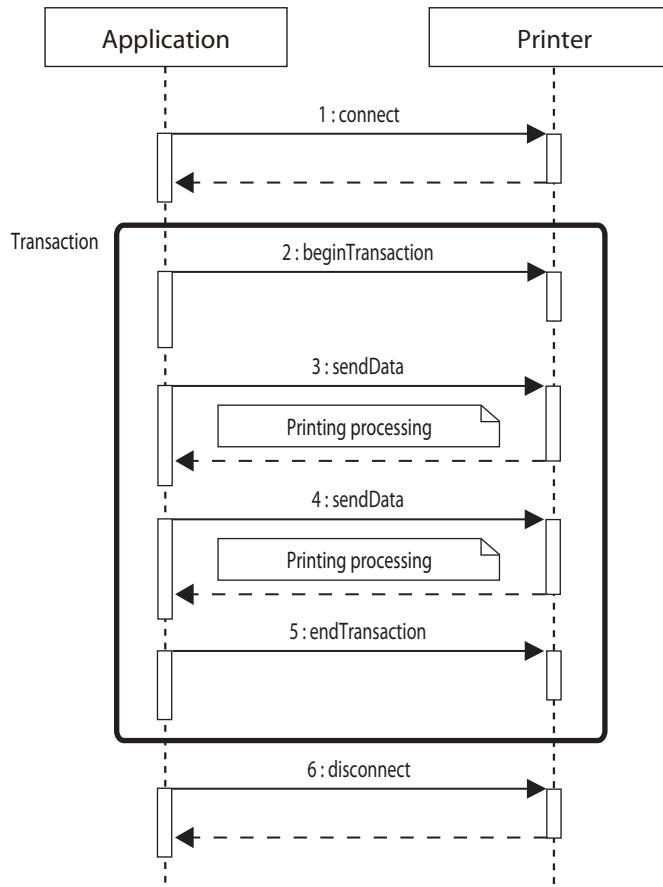

To reconnect to the network automatically

The following is a sequence for automatically reconnecting if network communication is cut off with the printer.

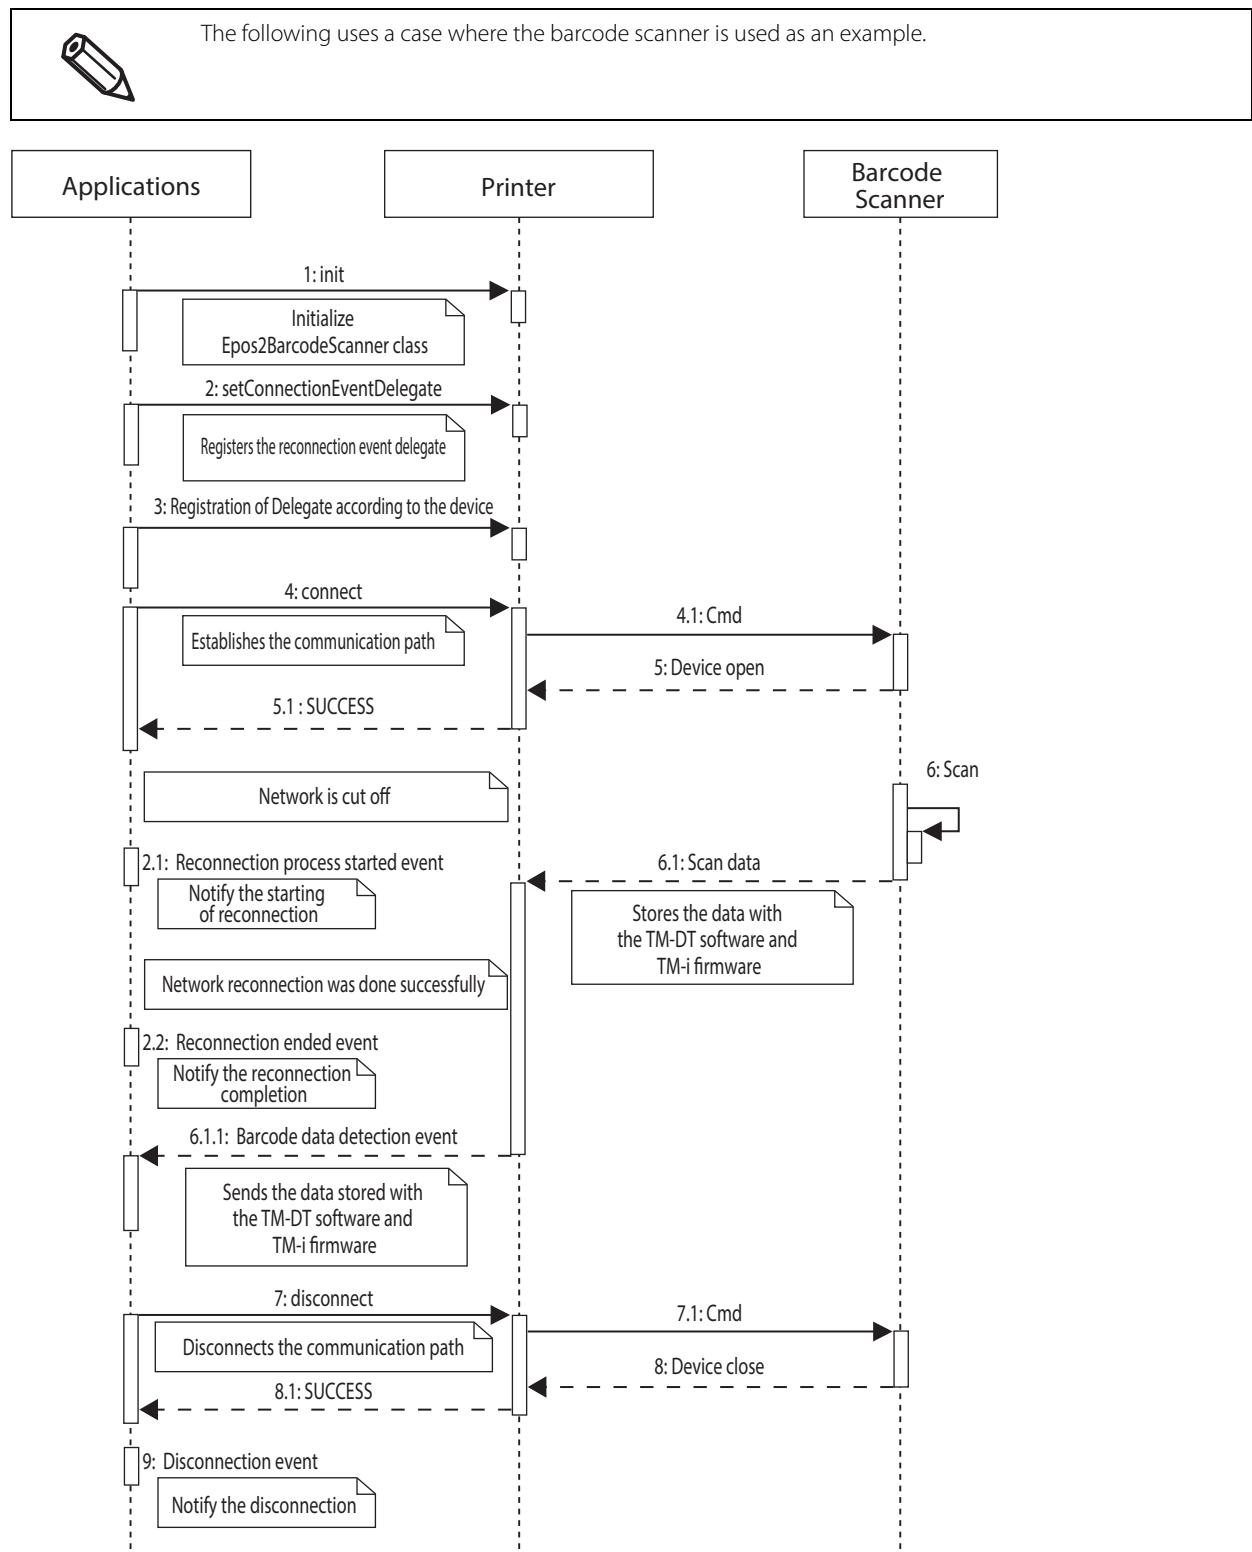



To transmit and receive the data between applications

Use the Communication Box function of the printer.

For details on a printer equipped with the Communication Box function, refer to [Functions provided in each printer](#).

The following indicates the basic programming sequence using the Communication Box. A "Client" in the sequence figure refers to an application.

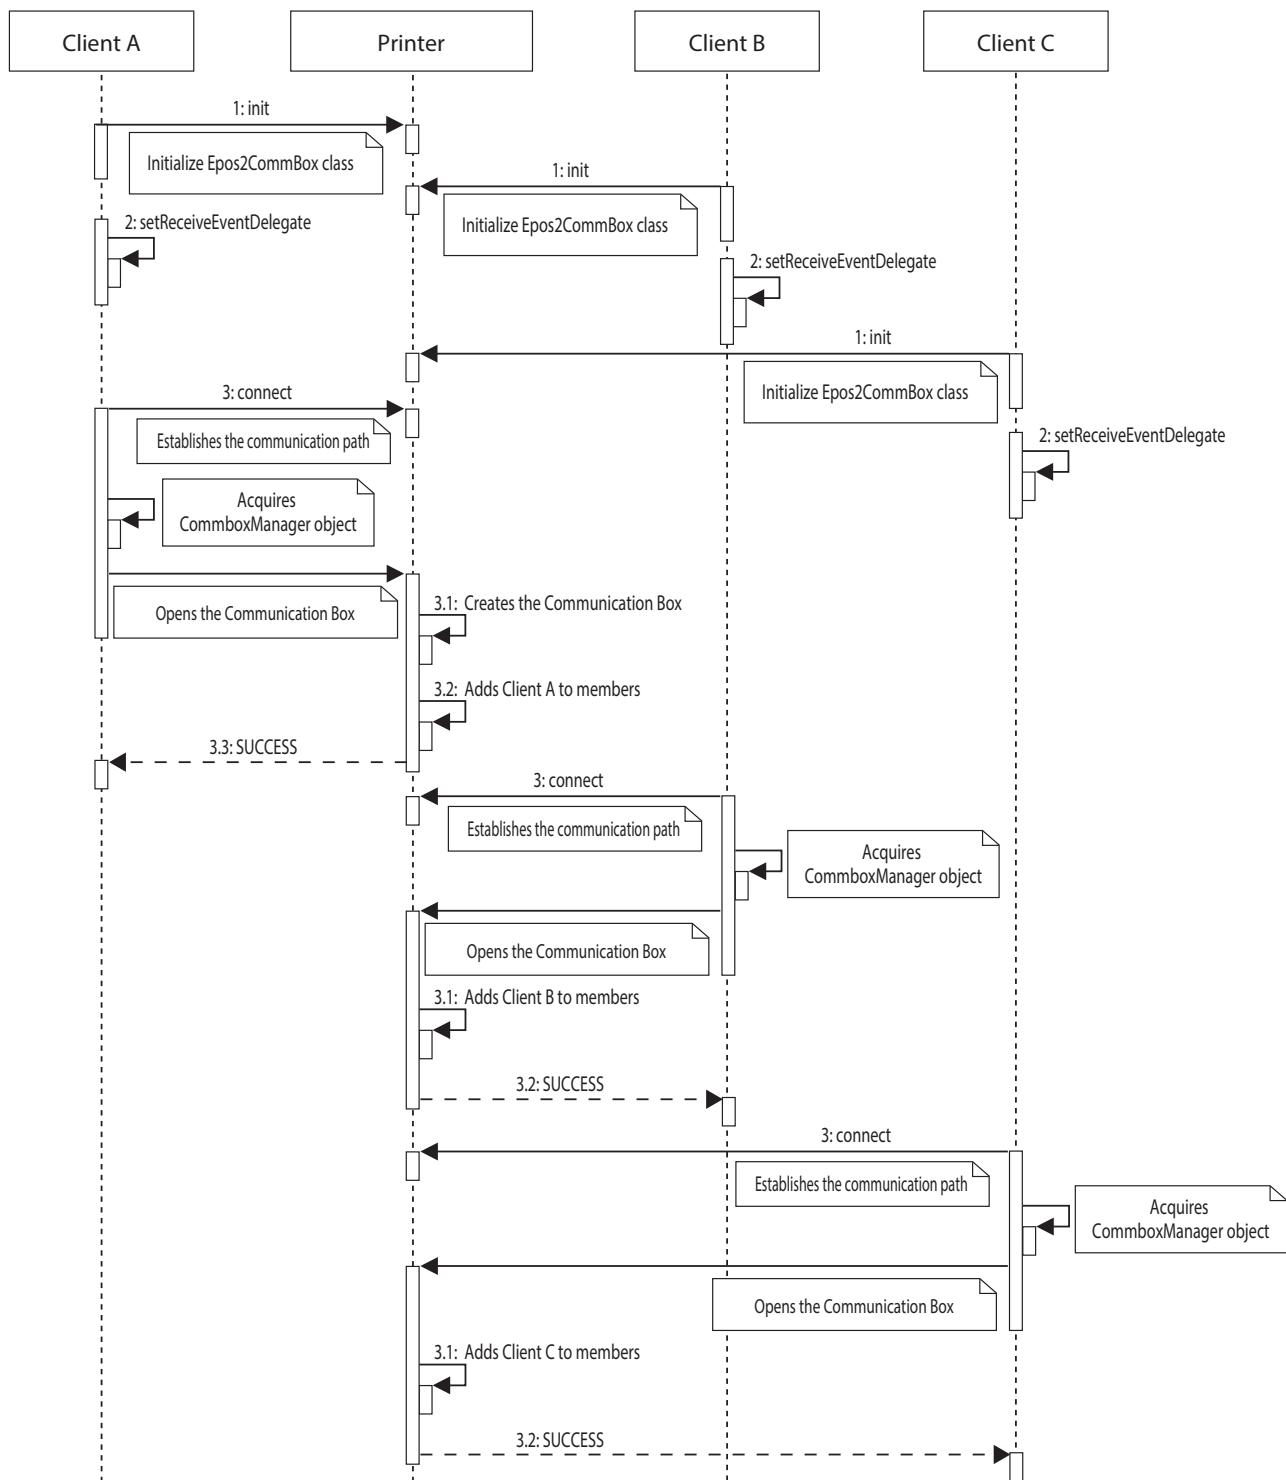

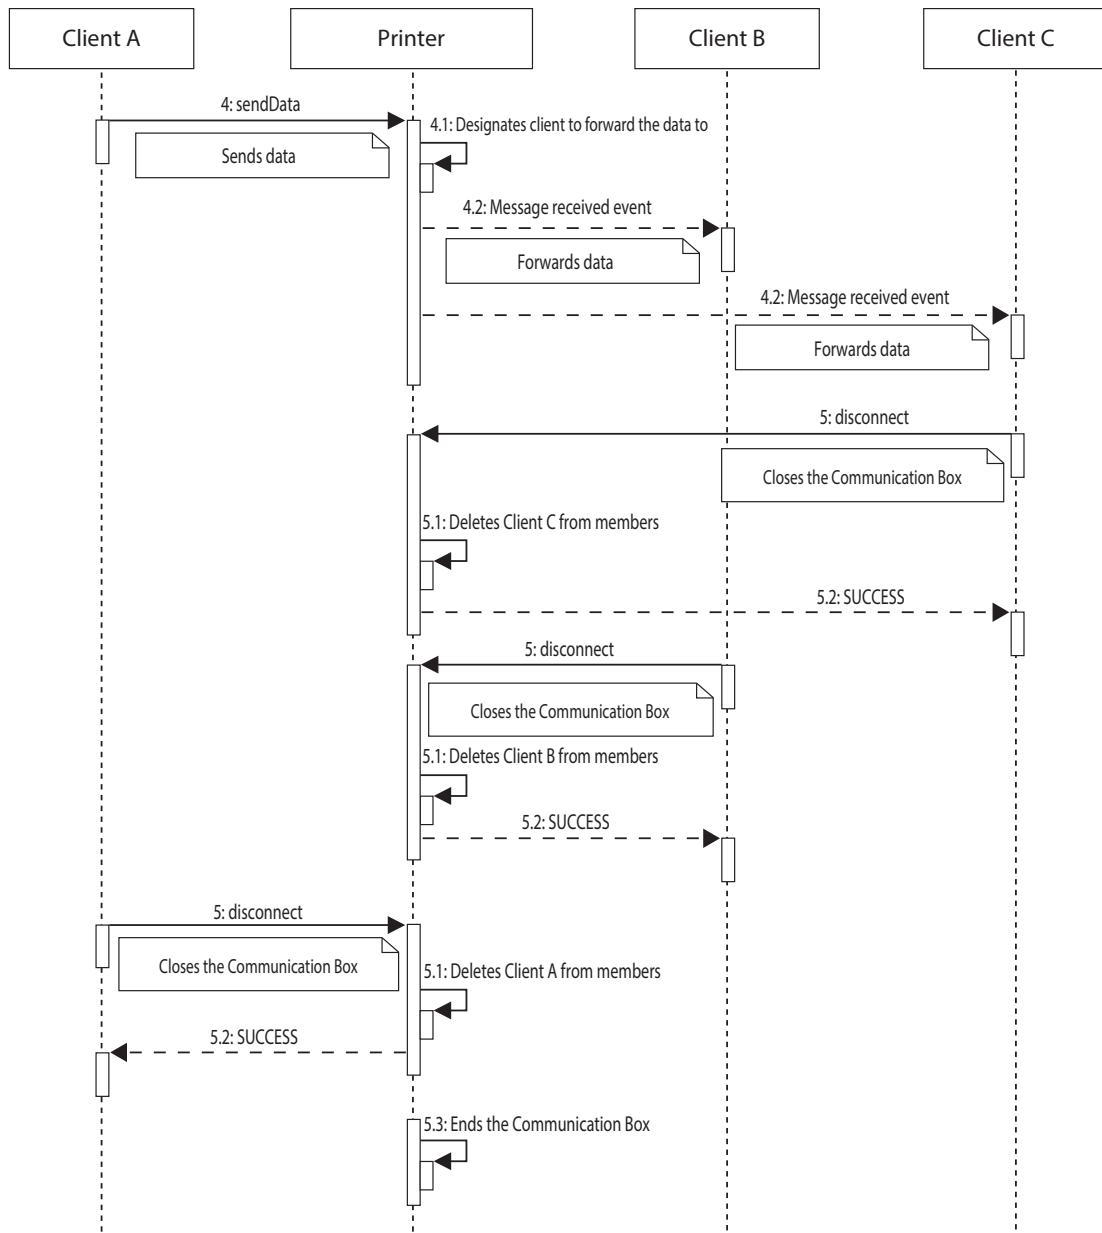


To perform forward printing


Use the spooler function of printers.

For details on a printer equipped with the spooler function, refer to [Functions provided in each printer](#).


If a request is sent to the printer equipped with the spooler function from the application when the spooler function is disabled, printing is immediately executed and a response is returned to the application after printing completes.

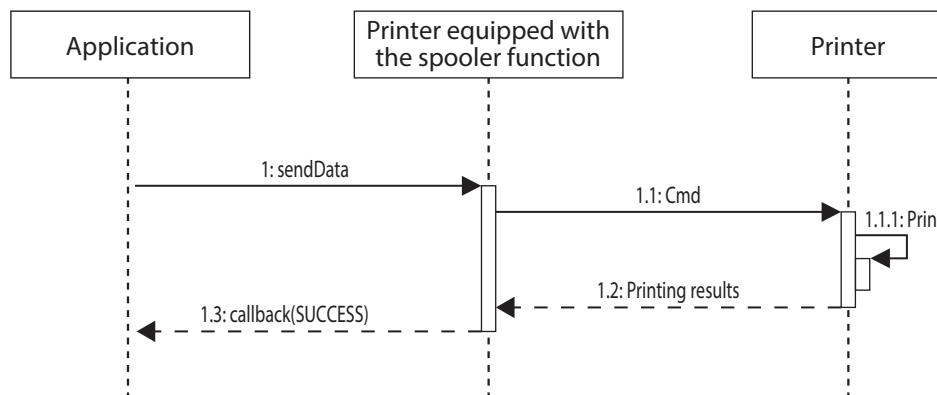

If a request is sent to the printer equipped with the spooler function from the application when the spooler function is enabled, the print job is stored in the print queue and a response is returned to the application before printing completes.

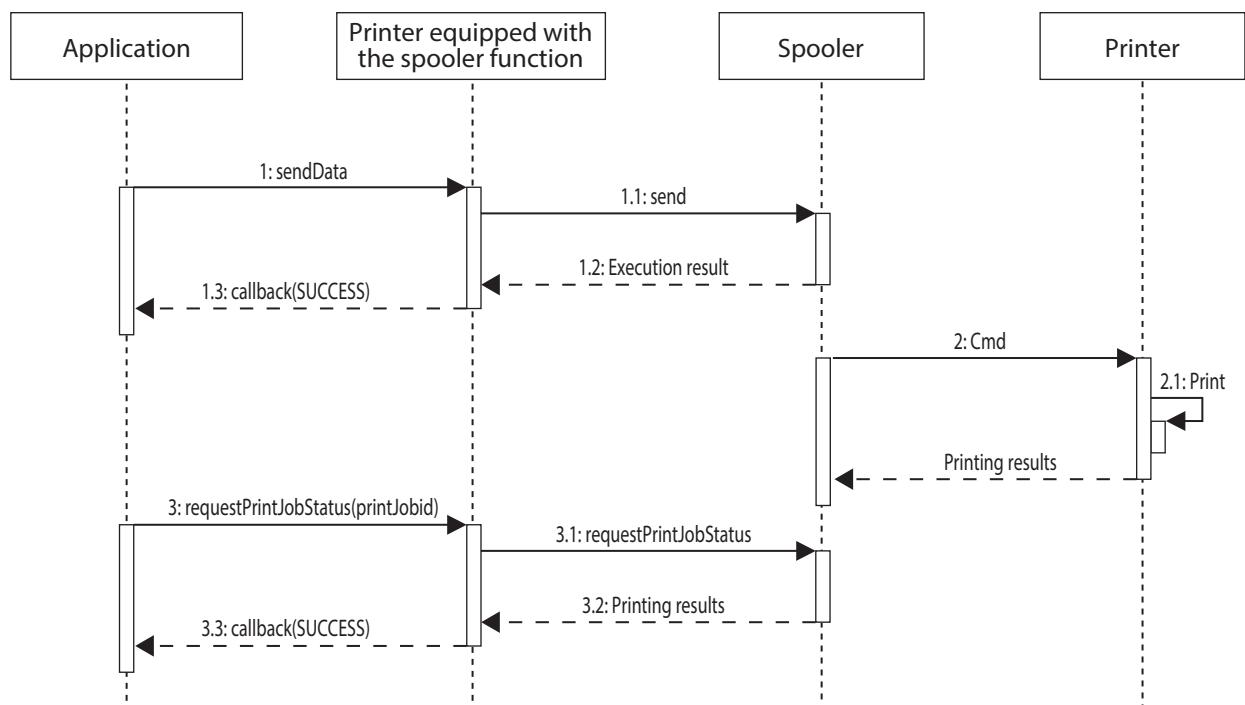

If the destination printer cannot print, the printer equipped with the spooler function does not return the error to the application. Enabling forward printing will allow for the printing task to be completed on a substitute printer, with the application acquiring the printing results afterward. Refer to the sequence diagram below.

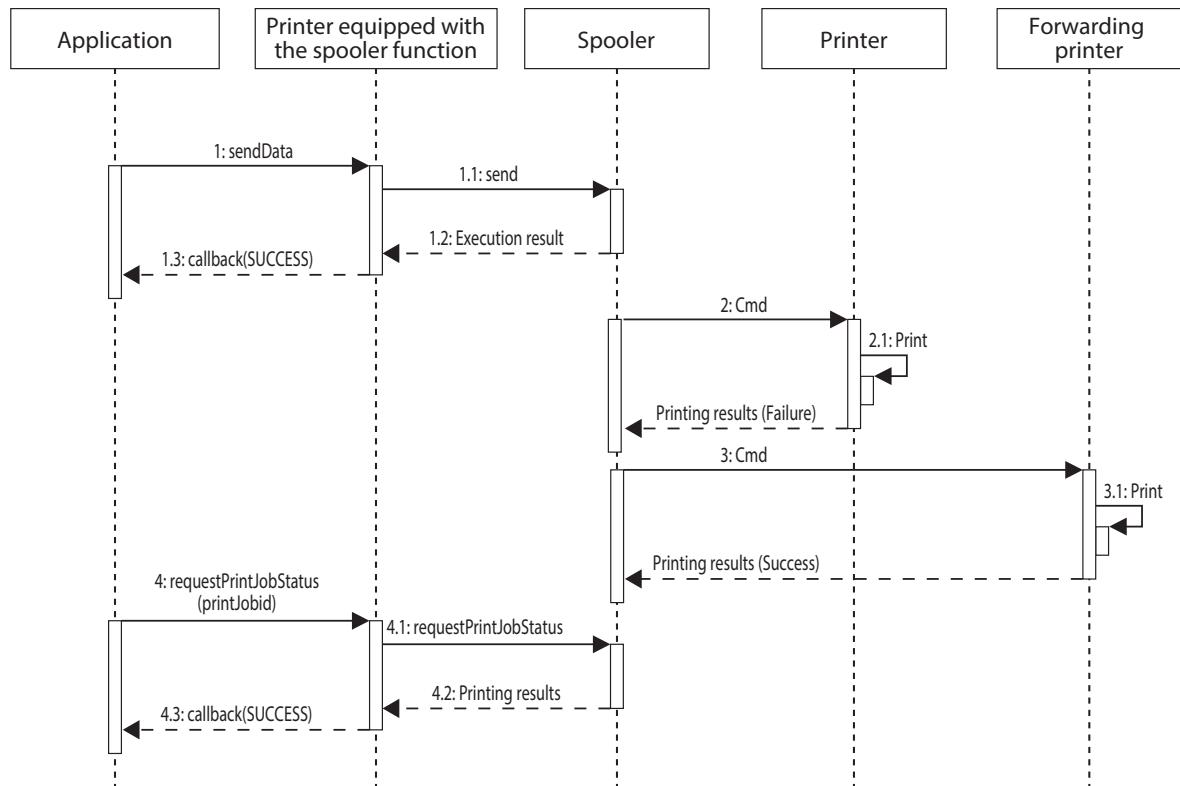

To select a printer using its QR code

Analyze the QR code by using parseQR in the EasySelect class. Then, specify the analyzed information in the connect API to connect to the printer.

```

@interface Sample()
{
    Epos2Printer *printer_;
}

(BOOL) ConnectPrinterByQRCode
{
    // Analyzes QR code
    EposEasySelect* easySelect = [[EposEasySelect alloc] init];
    EposEasySelectInfo *easySelectInfo = [easySelect parseQR:result];

    if(!easySelectInfo){
        // If the QR code is not the one for easy printer selection.
        return NO;
    }

    // Converts printer name into PrinterSeries
    int printerSeries = [self convertPrinterNameToPrinterSeries:easySelectInfo.printerName];

    // Initializes Epos2Printer
    printer_ = [[Epos2Printer alloc] initWithPrinterSeries:printerSeries
lang:EPOS2_MODEL_ANK];
    if(!printer_){
        return NO;
    }

    // Generates connect parameters
    NSString *targetText = [self convertEasySelectInfoToTargetString:easySelectInfo];
    if([targetText isEqualToString:@""]){
        return NO;
    }

    // Connects to the printer
    int result = [printer_ connect:targetText timeout:EPOS2_PARAM_DEFAULT];
    if(result != EPOS2_SUCCESS){
        return NO;
    }

    return YES;
}

```

```

- (int) convertPrinterNameToPrinterSeries:(NSString*)printerName
{
    int printerSeries = EPOS2_TM_T88;

    if([printerName isEqualToString:@"TM-T88V"]){
        printerSeries = EPOS2_TM_T88;
    }else if([printerName isEqualToString:@"TM-m10"]){
        printerSeries = EPOS2_TM_M10;
    }else if([printerName isEqualToString:@"TM-m30"]){
        printerSeries = EPOS2_TM_M30;
    }else if([printerName isEqualToString:@"TM-P20"]){
        printerSeries = EPOS2_TM_P20;
    }else if([printerName isEqualToString:@"TM-P60II"]){
        printerSeries = EPOS2_TM_P60II;
    }else if([printerName isEqualToString:@"TM-P80"]){
        printerSeries = EPOS2_TM_P80;
    }else{
        // Depending on the printer, add conversion processes.
    }

    return printerSeries;
}

- (NSString*) convertEasySelectInfoToTargetString:(EposEasySelectInfo*)easySelectInfo
{
    NSString *connectionTypeString = @"";
    switch(easySelectInfo.deviceType){
        case EPOS_EASY_SELECT_DEVTYPE_TCP:
            connectionTypeString = @"TCP:";
            break;
        case EPOS_EASY_SELECT_DEVTYPE_BLUETOOTH:
            connectionTypeString = @"BT:";
            break;
    }

    return [NSString stringWithFormat:@"%@%@", connectionTypeString,easySelectInfo.macAddress];
}

```

How to print a QR code to be used for printer selection

For the printers that can print the QR code on a status sheet

Some printers can print the QR code on a status sheet. For more details, refer to the Technical Reference Guide of the printer.

For the printers that cannot print the QR code on a status sheet

Create the QR code by using [createQR](#). Specify the created data by [addSymbol](#) to print the QR code.

Refer to "Printing of a QR code that enables easy printer selection" of the sample program.

To select a printer using its NFC tag

Analyze the NFC tag using `parseNFC` in the `EasySelect` class. Then, specify the analyzed information in the `connect` API to connect to the printer.



The following sample code is created with Swift.

```
// Receives the NFC tag information with the following NFCNDEFReaderSessionDelegate method.
func readerSession(
    _ session: NFCNDEFReaderSession,
    didDetectNDEFs messages: [NFCNDEFMessage]) {

    //Analyzes the NFC tag.
    guard let targetList = EposEasySelect().parseNFC(
        messages,
        timeout: Int(PARSE_NFC_TIMEOUT_DEFAULT.rawValue)),
        !targetList.isEmpty else {
        // If the NFC tag is not the one for easy printer selection
        return
    }

    // Acquires the first NFC data.
    let easySelectInfo: EposEasySelectInfo = targetList[0]

    guard let printerName = easySelectInfo.printerName, !printerName.isEmpty else {
        // If the printerName cannot be acquired
        return
    }

    // Converts printer name into PrinterSeries.
    let printerSeries: CInt = convertPrinterNameToPrinterSeries(printerName: printerName)

    guard let macAddress = easySelectInfo.macAddress, !macAddress.isEmpty else {
        // If the macAddress cannot be acquired
        return
    }

    // Initialilizes Epos2Printer.
    guard let printer = Epos2Printer(
        printerSeries: printerSeries,
        lang: EPOS2_MODEL_ANK.rawValue) else {
        return
    }

    // Generates connect parameters.
    let targetString = convertEasySelectInfoToTargetString(info: easySelectInfo)
    guard !targetString.isEmpty else {
        return
    }

    // Connects to the printer.
    var result = printer.connect(
        targetString,
        timeout: CLong(EPOS2_PARAM_DEFAULT))
    guard result == EPOS2_SUCCESS.rawValue else {
        // Writes error processing.
        return
    }
}
```

```

func convertPrinterNameToPrinterSeries(printerName: String) -> CInt {
    var printerSeries: CInt = EPOS2_TM_T88.rawValue

    if printerName == "TM-T88V" || printerName == "TM-T88VI" {
        printerSeries = EPOS2_TM_T88.rawValue
    } else if printerName == "TM-m10" {
        printerSeries = EPOS2_TM_M10.rawValue
    } else if printerName == "TM-m30" {
        printerSeries = EPOS2_TM_M30.rawValue
    } else if printerName == "TM-P20" {
        printerSeries = EPOS2_TM_P20.rawValue
    } else if printerName == "TM-P60II" {
        printerSeries = EPOS2_TM_P60II.rawValue
    } else if printerName == "TM-P80" {
        printerSeries = EPOS2_TM_P80.rawValue
    } else {
        //if you use other printer , add convert printerSeries
    }

    return printerSeries
}

func convertEasySelectInfoToTargetString(info: EposEasySelectInfo?) -> String {
    guard let deviceType = info?.deviceType, let macAddress = info?.macAddress else {
        return ""
    }

    var connectionTypeString = ""

    switch deviceType {
    case EPOS_EASY_SELECT_DEVTYPE_TCP.rawValue:
        connectionTypeString = "TCP"
    case EPOS_EASY_SELECT_DEVTYPE_BLUETOOTH.rawValue:
        connectionTypeString = "BT"
    default:
        break
    }


    return "\(connectionTypeString):\\"(macAddress)"
}


```

To perform check process

Epos2HybridPrinter class is used to control the hybrid model printers.

The following sequence diagram shows the flow from endorsement printing after MICR reading to slip printing.

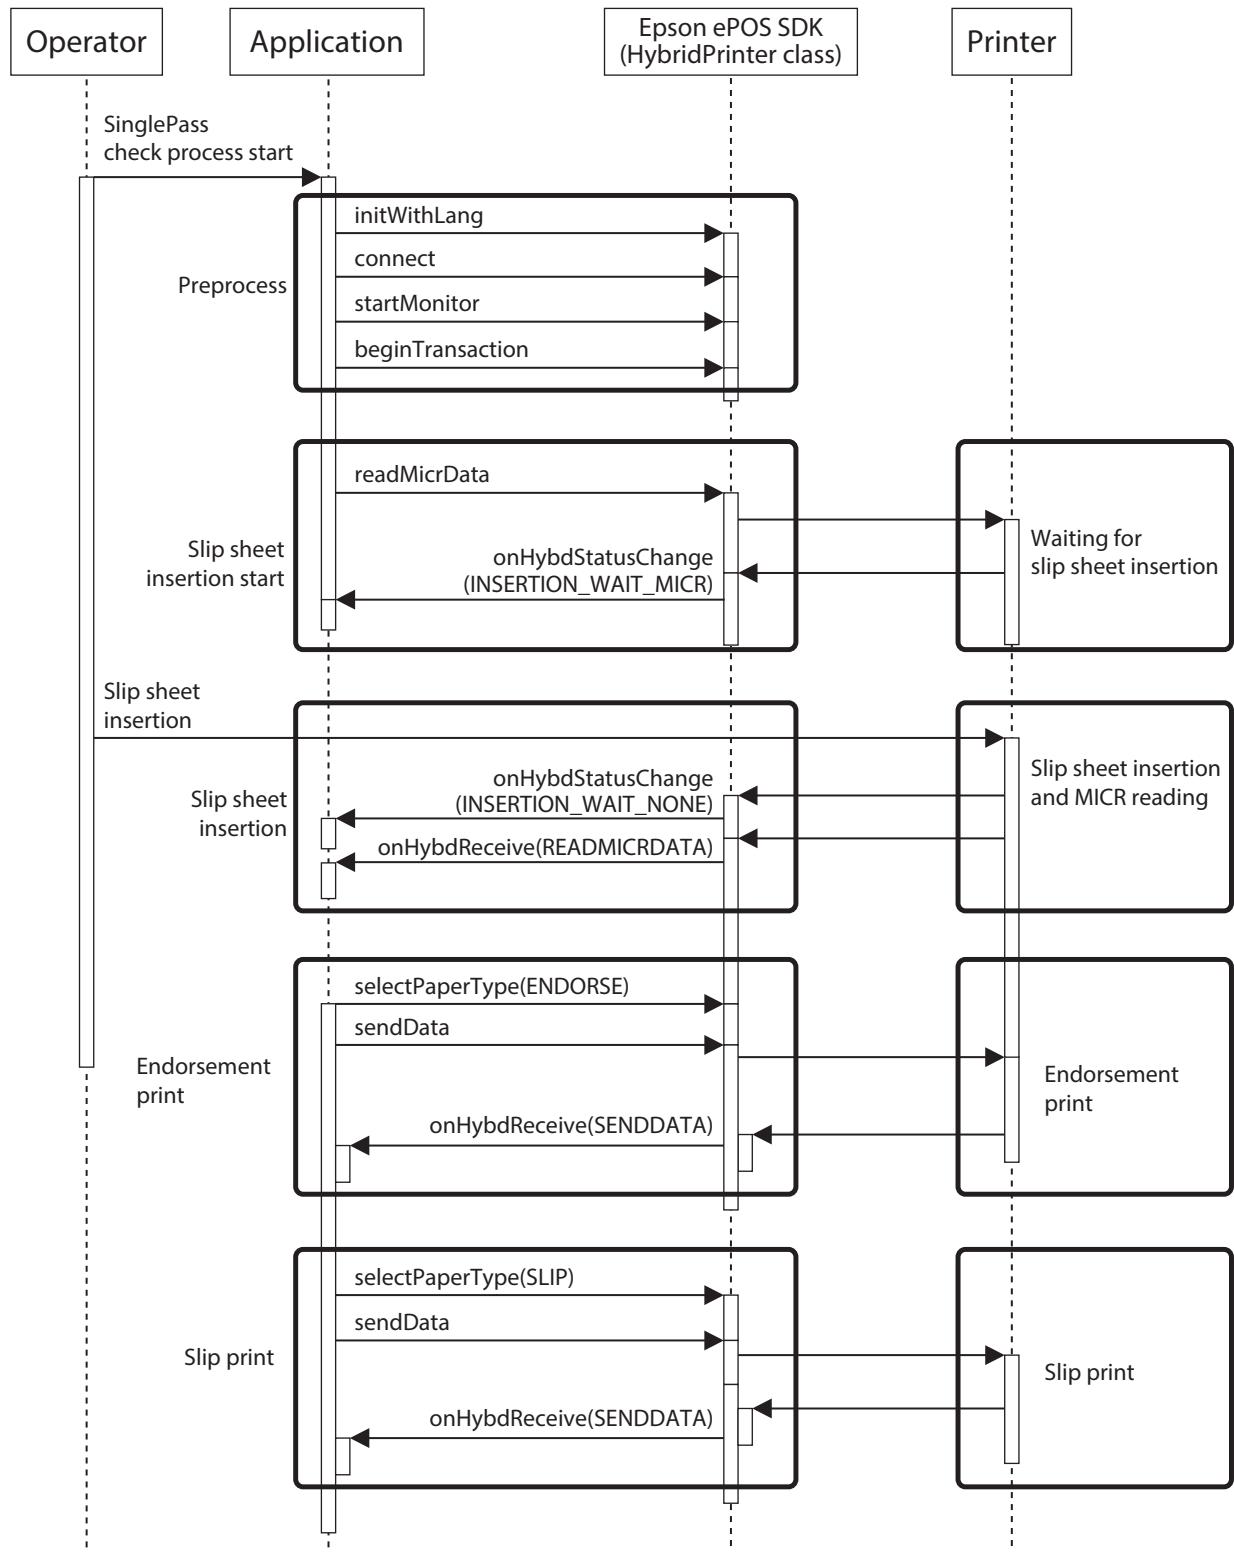

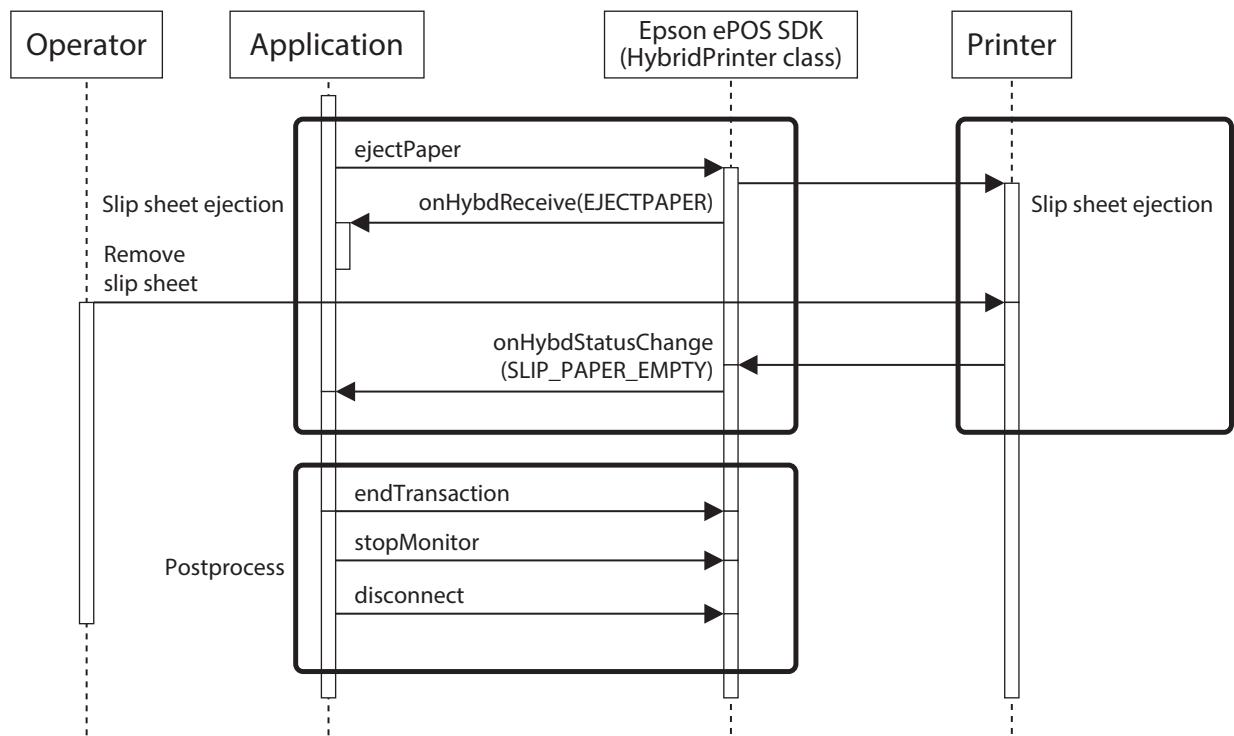


To control multiple peripheral devices

The sequence diagram that controls the printer and customer display is indicated below.



- To connect/disconnect communication with the printer or peripheral devices, call connect API/disconnect API from one thread to each peripheral device in order.
- The following process can be processed concurrently in one thread.
 - * Displaying data on the customer display
 - * Receipt printing

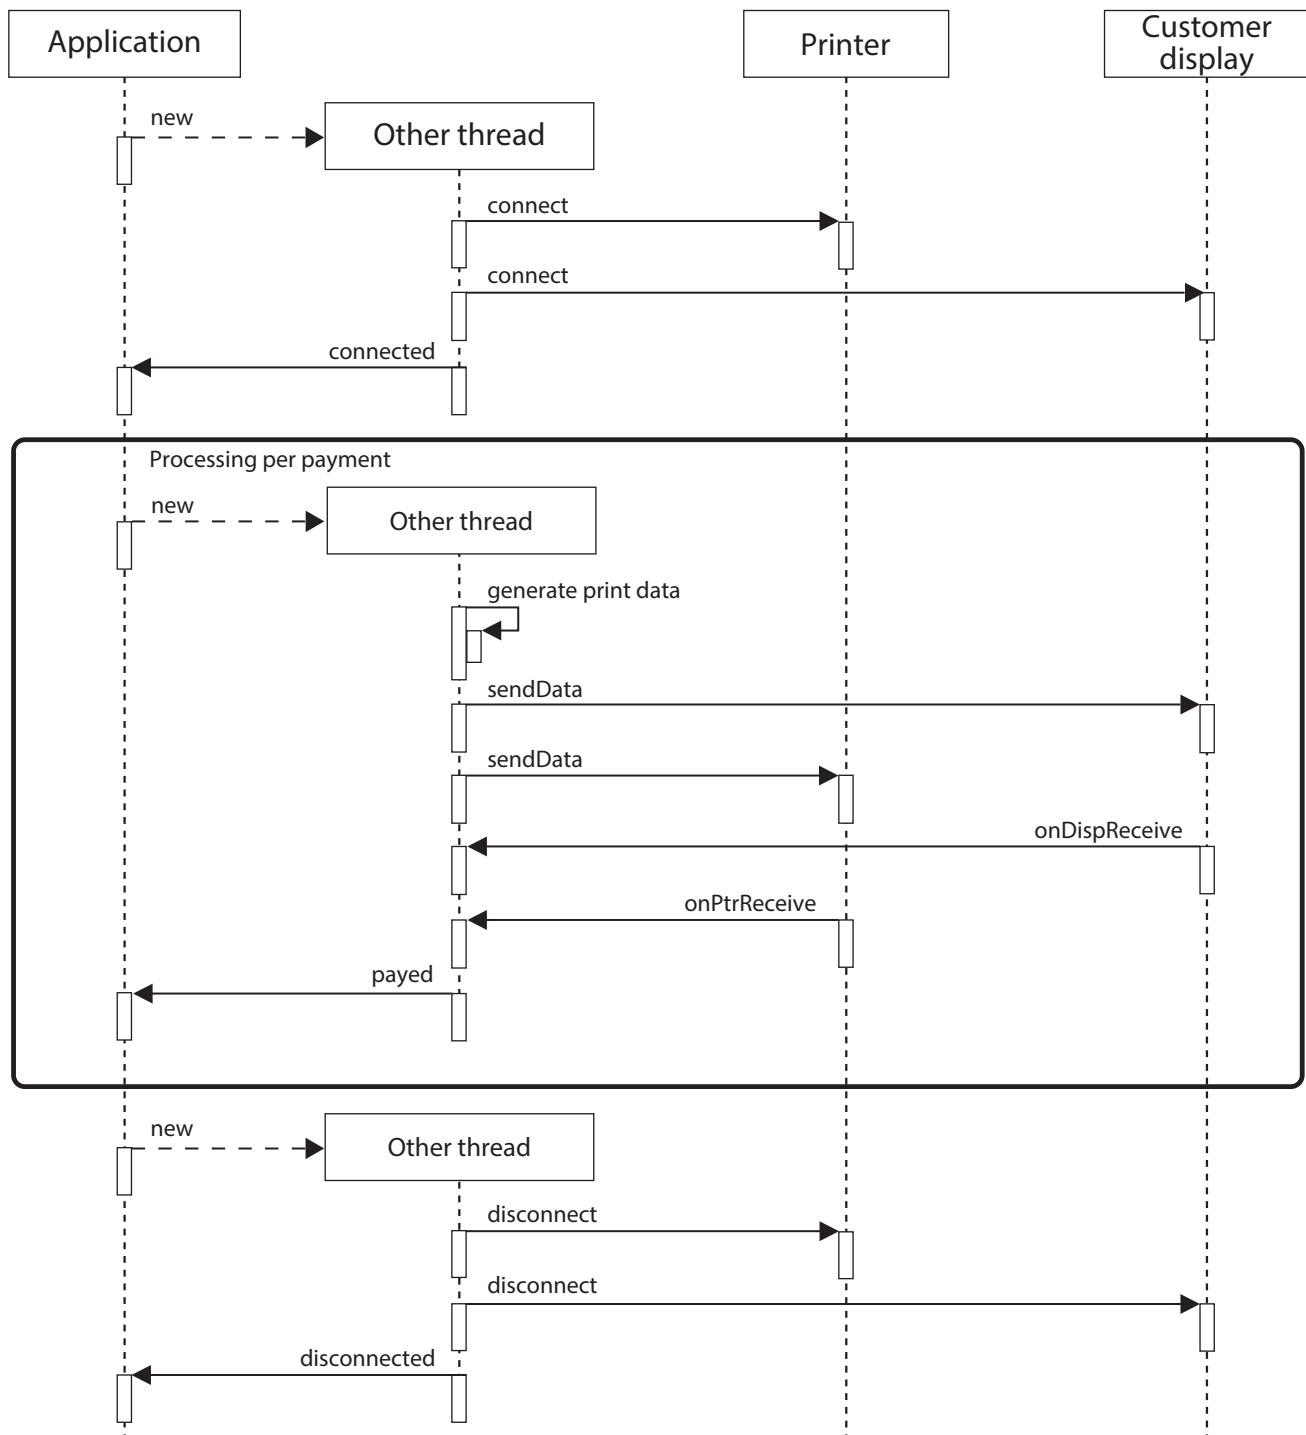


To update the printer firmware version

Use the following APIs in the Printer class:

- [downloadFirmwareList](#)
- [updateFirmware](#)
- [verifyUpdate](#)

The sequence diagram of firmware version update is shown below.

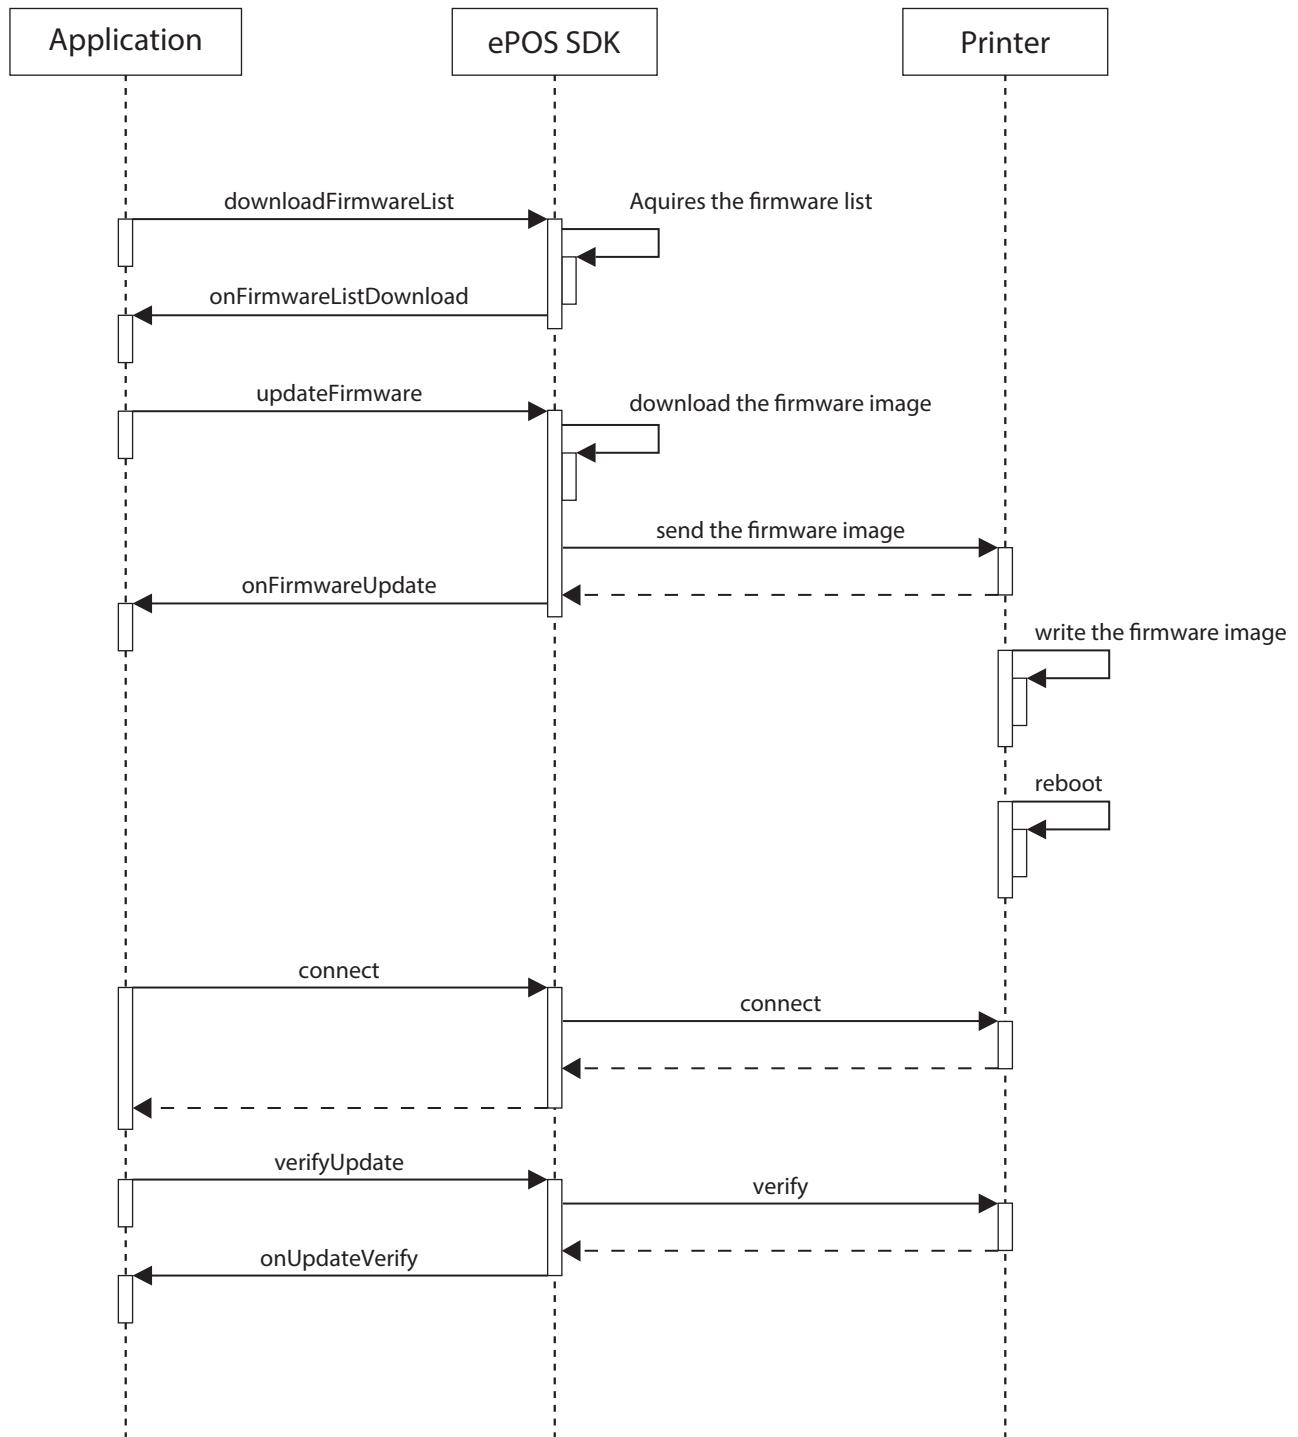

Appendix

Open Source Software Licensing

The following open-source software is used in the sample programs and libraries provided by the Epson ePOS SDK for iOS.

Sample Programs

ZXing(<https://github.com/zxing/zxing>)

ZXing is licensed based on Apache 2.0 license (<http://www.apache.org/licenses/LICENSE-2.0.html>).

Libraries

zlib

zlib.h -- interface of the 'zlib' general purpose compression library
version 1.2.8, April 28th, 2013

Copyright (C) 1995-2013 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly	Mark Adler
jloup@gzip.org	madler@alumni.caltech.edu

The data format used by the zlib library is described by RFCs (Request for Comments) 1950 to 1952 in the files <http://tools.ietf.org/html/rfc1950> (zlib format), rfc1951 (deflate format) and rfc1952 (gzip format).

LICENSE ISSUES

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts.

OpenSSL License

```
/*
 * Copyright (c) 1998-2016 The OpenSSL Project. All rights reserved.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 *
 * 1. Redistributions of source code must retain the above copyright
 *    notice, this list of conditions and the following disclaimer.
 *
 * 2. Redistributions in binary form must reproduce the above copyright
 *    notice, this list of conditions and the following disclaimer in
 *    the documentation and/or other materials provided with the
 *    distribution.
 *
 * 3. All advertising materials mentioning features or use of this
 *    software must display the following acknowledgment:
 *    "This product includes software developed by the OpenSSL Project
 *    for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
 *
 * 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to
 *    endorse or promote products derived from this software without
 *    prior written permission. For written permission, please contact
 *    openssl-core@openssl.org.
 *
 * 5. Products derived from this software may not be called "OpenSSL"
 *    nor may "OpenSSL" appear in their names without prior written
 *    permission of the OpenSSL Project.
 *
 * 6. Redistributions of any form whatsoever must retain the following
 *    acknowledgment:
 *    "This product includes software developed by the OpenSSL Project
 *    for use in the OpenSSL Toolkit (http://www.openssl.org/)"
 *
 * THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY
 * EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
 * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
```

* PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR
 * ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,
 * SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT
 * NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;
 * LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
 * HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,
 * STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
 * ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED
 * OF THE POSSIBILITY OF SUCH DAMAGE.
 * ======
 *
 * This product includes cryptographic software written by Eric Young
 * (eay@cryptsoft.com). This product includes software written by Tim
 * Hudson (tjh@cryptsoft.com).
 *
 */

Original SSLeay License

```

/* Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)
 * All rights reserved.
 *
 * This package is an SSL implementation written
 * by Eric Young (eay@cryptsoft.com).
 * The implementation was written so as to conform with Netscapes SSL.
 *
 * This library is free for commercial and non-commercial use as long as
 * the following conditions are aheared to. The following conditions
 * apply to all code found in this distribution, be it the RC4, RSA,
 * Ihash, DES, etc., code; not just the SSL code. The SSL documentation
 * included with this distribution is covered by the same copyright terms
 * except that the holder is Tim Hudson (tjh@cryptsoft.com).
 *
 * Copyright remains Eric Young's, and as such any Copyright notices in
 * the code are not to be removed.
 * If this package is used in a product, Eric Young should be given attribution
 * as the author of the parts of the library used.
 * This can be in the form of a textual message at program startup or
 * in documentation (online or textual) provided with the package.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 * 1. Redistributions of source code must retain the copyright
 *    notice, this list of conditions and the following disclaimer.
  
```

* 2. Redistributions in binary form must reproduce the above copyright
* notice, this list of conditions and the following disclaimer in the
* documentation and/or other materials provided with the distribution.
* 3. All advertising materials mentioning features or use of this software
* must display the following acknowledgement:
* "This product includes cryptographic software written by
* Eric Young (eay@cryptsoft.com)"
* The word 'cryptographic' can be left out if the routines from the library
* being used are not cryptographic related :-).
* 4. If you include any Windows specific code (or a derivative thereof) from
* the apps directory (application code) you must include an acknowledgement:
* "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"
*
* THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS'' AND
* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
* ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE
* FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
* DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS
* OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT
* LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF
* SUCH DAMAGE.
*
* The licence and distribution terms for any publically available version or
* derivative of this code cannot be changed. i.e. this code cannot simply be
* copied and put under another distribution licence
* [including the GNU Public Licence.]
*/