
Pocket Checklist

F-14A/B AIRCRAFT

REV: 20210902

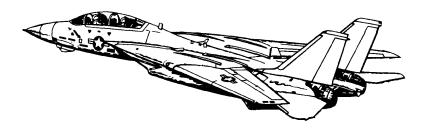

Procedures

Systems

AWG-9 Radar

TCS LANTIRN

A/G Weapons

A/A Weapons



Contents

PROCEDURES	1
1.1 PILOT - PRE-START	. 1
1.2 PILOT - ENGINE START	. 2
1.3 PILOT - POST-START	. 3
1.4 RIO - PRE-START	. 5
1.5 RIO - POST-START - SHORE	. 5
1.6 RIO - POST-START - CARRIER	. 7
1.7 PRE-TAXI	. 9
1.8 TAKEOFF - SHORE	. 9
1.9 TAKEOFF - CARRIER	. 10
1.10 LANDING - OVERHEAD PATTERN	. 11
1.11 LANDING - CHECKLIST	. 12
1.12 AERIAL REFUELING	. 13
1.13 AIRSTART	. 14
SYSTEMS	15
2.1 AFCS - SAS	. 15
2.2 AFCS - AUTOPILOT	. 15
2.3 APC / AUTOTHROTTLE	. 17
2.4 ACLS	. 17
2.5 WING-SWEEP	. 17
2.6 NAVIGATION	. 19
2.7 COMMS - OVERVIEW	. 21
2.8 COMMS - ARC-159 UHF 1	. 21
2.9 COMMS - ARC-182 V/UHF 2	. 22
2.10 COMMS - KY-28 VOICE SECURITY EQUIPMENT	. 23
2.11 LINK 4 DATALINK - OVERVIEW	. 24
2.12 LINK 4 DATALINK - CONTROL PANEL	. 24
2.13 LINK 4 DATALINK - REPLY/ANTENNA PANEL	. 24
2.14 ALR-67 RWR - CONTROLS / OVERVIEW	. 26
2.15 ALR-67 RWR - THREAT SYMBOLOGY	. 28
2.16 ALE-39 COUNTERMEASURES DISPENSER	. 30
2.17 ALQ-100 / ALQ-126 DECM	. 30
	1.2 PILOT - ENGINE START 1.3 PILOT - POST-START 1.4 RIO - PRE-START 1.5 RIO - POST-START - SHORE 1.6 RIO - POST-START - CARRIER 1.7 PRE-TAXI 1.8 TAKEOFF - SHORE 1.9 TAKEOFF - CARRIER 1.10 LANDING - OVERHEAD PATTERN 1.11 LANDING - CHECKLIST 1.12 AERIAL REFUELING 1.13 AIRSTART SYSTEMS 2.1 AFCS - SAS 2.2 AFCS - AUTOPILOT 2.3 APC / AUTOTHROTTLE 2.4 ACLS 2.5 WING-SWEEP 2.6 NAVIGATION 2.7 COMMS - OVERVIEW 2.8 COMMS - ARC-159 UHF 1

7		
4		
3	AWG-9 RADAR	31
	3.1 MAIN MODES - OVERVIEW	31
	3.2 MAIN MODES	31
	3.3 PULSE MODE - PULSE SEARCH	32
	3.4 PULSE MODE - PSTT	33
	3.5 PULSE DOPPLER MODE - PULSE DOPPLER SEARCH	34
	3.6 PULSE DOPPLER MODE - RWS	36
	3.7 PULSE DOPPLER MODE - TWS	37
	3.8 PULSE DOPPLER MODE - TWS MAN	39
	3.9 PULSE DOPPLER MODE - TWS AUTO	40
	3.10 PULSE DOPPLER MODE - PDSTT	41
	3.11 ACM MODES - OVERVIEW	42
	3.12 APX-76 IFF	42
	3.13 TID SYMBOLOGY	43
	TOO	40
4	TCS	49
	4.1 OVERVIEW	49
5	LANTIRN	51
	5.1 OVERVIEW	51
	5.2 OVERVIEW - STARTUP	51
	5.3 OVERVIEW - POINTING MODES	52
	5.4 OVERVIEW - LASING/DESIGNATION	53
	5.5 CONTROLS - PANEL	53
	5.6 CONTROLS - STICK	54
	5.7 DISPLAY	55
6	A/G WEAPONS	57
	6.1 A/G WEAPON SETTINGS - OVERVIEW	57
	6.2 SELECTIVE ORNANCE JETTISON	58
	6.3 M61 GUN	58
	6.4 FFAR / ZUNI ROCKETS	59
	6.5 UNGUIDED BOMB - CCIP	59
	6.6 UNGUIDED BOMB - CCRP	60
	6.7 LASER GUIDED BOMB	61
	6.8 TALD DECOYS	62

	WEAPONS	 63
7.1	M61 GUN - OVERVIEW	63
7.2	M61 GUN - MANUAL	63
7.3	M61 GUN - RTGS / NO RADAR	64
7.4	M61 GUN - RTGS / RADAR	64
7.5	AIM-9 SIDEWINDER - OVERVIEW	65
7.6	AIM-9 SIDEWINDER - SILENT	66
7.7	AIM-9 SIDEWINDER - RADAR	66
7.8	AIM-7 SPARROW - OVERVIEW	67
7.9	AIM-7 SPARROW - STT	68
7.10	AIM-54 PHOENIX - OVERVIEW	69
7.11	AIM-54 PHOENIX - PD-STT	71
7.12	P AIM-54 PHOENIX - TWS / MULTI	71



PROCEDURES F-14A/B REV: 20210902

1 PROCEDURES

1.1 PILOT - PRE-START

1. Parking Break ENGAGED 2. Ground Power connected 3. Compressed Air connected 4. ICS HOT MIC 5. TO RIO "Begin Start-Up" 6. ICS Comm Check 7. MASTER TEST Selector (a) LTS 8. EGAUTION Lights Checked checked 9. FIRE GO Checked illuminated 9. EGT Checked illuminated 9. FIRE GO Checked illuminated 10. Checked PRM Checked 10. Canopy Closed 10. Oxygen Carloy Closed 10. Oxygen Carloy Closed 10. Oxygen Carloy Closed 11. Emergency Wing Carloy Checked <th></th> <th></th> <th></th>			
3. Compressed Air connected	1.	Parking Break	ENGAGED
4. ICS HOT MIC 5. TO RIO "Begin Start-Up" 6. ICS Comm Check 7. MASTER TEST Selector (a) LTS • Warning Lights checked • Advisory Lights checked • Advisory Lights checked • Advisory Lights checked • REFIRE GO checked • REFIRE	2.	Ground Power	connected
5. TO RIO "Begin Start-Up" 6. ICS Comm Check 7. MASTER TEST Selector (a) LTS • Warning Lights checked checked • Caution Lights checked checked (b) FIRE DET/EXT • L FIRE GO illuminated • R FIRE GO illuminated illuminated (c) INST • RPM segt segt segt segt segt segt segt segt	3.	Compressed Air	connected
6. ICS Comm Check 7. MASTER TEST	4.	ICS	HOT MIC
7. MASTER TEST Selector (a) LTS • Warning Lights	5.	TO RIO	"Begin Start-Up"
Warning Lights Checked	6.	ICS	Comm Check
 ■ EGT	7.		Warning Lights checked Caution Lights checked Advisory Lights checked (b) FIRE DET/EXT L FIRE GO illuminated R FIRE GO illuminated
9. RIO Canopy Closed 10. Oxygen ON (FWD) 11 Emergency Wing OVERSWEEP			• EGT 960 C • FF 10500 pph • AOA 18 ± 5 • Wing Sweep 45 ± 2.5 • FUEL QTY 2000 ± 200 • Oxygen QTY 2 liters • L&R FF lights illuminated
10. Oxygen ON (FWD) 11 Emergency Wing OVERSWEEP	8.	Ejection Seat	Armed
11 Emergency Wing OVERSWEEP	9.	RIO	Canopy Closed
	10.	Oxygen	ON (FWD)
	11		OVERSWEEP

PILOT - ENGINE START

1.	AIR SOURCE	OFF
2.	Hydraulics	(a) HYD TRANSFER PUMP SHUTOFF (b) Emerg. Hyd AUTO (LOW)
3.	L&R MASTER GEN	NORM
4.	RIO	"Ready to Start"
5.	Right Engine Start-Up	(a) Engine Crank R (b) R Eng N2 20% (c) R Throttle IDLE (d) TIT < 890 C during start
6.	Stabilized Parameters	 RPM
7.	Left Engine Start- Up	(a) Engine Crank L (b) L Eng N2 20% (c) L Throttle IDLE (d) TIT < 890 C during start
8.	Stabilized Parameters	 RPM
9.	HYD TRANSFER PUMP	NORM
10.	HYD PRESSURE	3000 psi
11.	AIR SOURCE	BOTH ENG
12.	Ground Power	disconnected
13.	Compressed Air	disconnected

1.3 PILOT - POST-START

1.	TO RIO	"Both Engines Running"
2.	Displays Control Panel	• VDI ON • HUD ON • HSD ON • HDS MODE TID (monitor INS)
3.	RIO	 Select Align Quality INS GO NOW: shortest but least precise alignment INS GO COARSE: does not meet Launch Criteria for AIM-7 / AIM-54 INS GO MIN WPN LAUNCH: allows AIM-7 / AIM-54 launch INS GO FINE fine align (8 min)
4.	ACM Panel	• GUN RATE
5.	Gun Rounds	Set
6.	ANTI-SKID SPOILER BK	OFF
7.	Emergency Wing Sweep	(a) Handle
8.	AFCS Panel - SAS STAB AUG	• PITCH ON • ROLL ON • YAW ON
9.	WING/EXT TRANS	AUTO
10.	UHF 1 Function Selector	ВОТН
11.	TACAN Function Selector	T/R
12.	ARA-63 ICLS RE- CEIVER	ON

13.	Radar Altimeter	(a) Control Knob one click CW to turn on (b) Display 6000 ft (warm up) (c) Display 0 ft (ready)
14.	Standby ADI	erect at least 2 min before T/O
15.	KY-28 Crypt. Key	Set (refer to GROUND SETTINGS kb)
16.	RIO	set D/L frequency
17.	Lights	As desired

1.4 RIO - PRE-START

1.	Oxygen	ON (FWD)
2.	PILOT	• Ground Power connected • Compressed Air connected
3.	ICS	Comm Check
4.	Lights	As required
5.	LTS Test	Coordinate with Pilot
6.	Ejection Seats	ARMED
7.	Canopy	CLOSED
8.	TO PILOT	"Ready to Start"

1.5 RIO - POST-START - SHORE

1.	PILOT	• Engines started • AIR SOURCEBOTH ENG
2.	INS STARTUP	(a) LIQUID COOLING ON (FWD) (b) WCS Switch STANDBY (c) IR/TV Power STBY/IR/TV (d) TID/DDD illuminated after 40 s
3.	Kneeboard	Retrieve Coordinates, Elevation, Magnetic Variation from GROUND SETTINGS Page
WA	RNING Input Coords E	BEFORE selecting GND ALIGN if using ASH
4.	Start INS Align	(a) Nav Mode GND ALIGN (b) CAP • Category NAV
		MESSAGE OWN AC
		(c) Keyboard
		 CLEAR, LAT, latitude, ENTER LONG, longitude, ENTER ALT, altitude, ENTER
		(d) CAP MESSAGE MAG HDG VAR (e) Keyboard HDG, mag var, ENTER (f) Align Progress Monitor
5.	U/VHF Mode	T/R G

6.	Datalink	(a) Kneeboard TACTICAL DL (b) DL Power ON (FWD) (c) DL Mode TAC (AFT) (d) DL Freq. Set
7.	TACAN	T/R
8.	RWR Panel	(a) Display Type NORM (b) PWR ON (c) TEST SPL (d) MODE LMT
9.	DECM	STBY, then ACT
10.	IFF	(a) MASTER
11.	Altimeter	Reset
12.	CAP	Enter Data (WP, FP, etc.)
13.	Displays	• DDD
14.	Hand Control Panel	Set
15.	AN/ALE-39	Set (as required) • AUTO (CHAFF)/MAN • MAN
16.	Flare Mode	PILOT
17.	Complete INS Align	Duration Full Fine
		(a) Align Complete Caret \rightarrow Diamond (b) NAV Mode INS NAV
18.	Standby ADI	Erect at least 2 min before T/O
19.	TO PILOT	"Ready to Taxi"
Onc	e Airborne	
20.	IR/TV Power	ON
21.	WCS Switch	WCS XMT

1.6 RIO - POST-START - CARRIER

1.	PILOT	• Enginesstarted • AIR SOURCEBOTH ENG
2.	INS STARTUP	(a) LIQUID COOLING ON (FWD) (b) WCS Switch STANDBY (c) IR/TV Power STBY/IR/TV (d) TID/DDD illuminated after 40 states
3.	Datalink	(a) Kneeboard
4.	Start INS Align	(a) DL FREQ Set (b) DL Mode CAINS/WAYPT (c) Nav Mode CVA
5.	U/VHF Mode	T/R G
6.	TACAN	T/R
7.	RWR Panel	(a) Display Type NORM (b) PWR ON (c) TEST SPL (d) MODE LMT
8.	DECM	STBY, then ACT
9.	IFF	(a) MASTER
10.	Altimeter	Reset
11.	CAP	Enter Data (WP, FP, etc.)
12.	Displays	• DDD
13.	Hand Control Panel	Set
14.	AN/ALE-39	Set (as required) • AUTO (CHAFF)/MAN • MAN
15.	Flare Mode	PILOT
16.	Complete INS Align	Duration Full Fine
		(a) Align Complete Caret → Diamond(b) NAV Mode

PR	OCEDURES	F-14A/B REV: 20210902
17.	Datalink	(a) DL Mode TAC (AFT) (b) DL Freq Set
18.	Standby ADI	Erect at least 2 min before T/O
19.	TO PILOT	"Ready to Taxi"
^	a Airla runa	

		(b) DL Freq. Set
18.	Standby ADI	Erect at least 2 min before T/O
19.	TO PILOT	"Ready to Taxi"
Onc	e Airborne	
20.	IR/TV Power	ON
21.	WCS Switch	WCS XMT

PROCEDURES F-14A/B REV: 20210902

1.7 PRE-TAXI

1.	ANTI-SKID SPOILER BK	OFF
2.	HOOK BYPASS	As Required
3.	Nose Strut	RETRACTED
4.	HUD MODE	ТО
5.	Parking Brake	Released (IN)
6.	NWS	ENGAGED
7.	Path	verify clear


1.8 TAKEOFF - SHORE

		After Lining Up On Runway
1.	Wing Sweep	(a) EM WING SWEEP FWD, then IN (b) MASTER RESET PRESS (c) Wings Verify thumb controller (d) WING SWEEP AUTO (e) Wings Verify at 20 deg
2.	ANTI SKID SPOILER BK	BOTH (UP)
3.	FLAPS	UP
4.	Trim	0 deg
5.	NWS	DISENGAGED
6.	Takeoff	(a) Throttle MIL (90% RPM) (b) Stick Back at 130 KIAS (c) Rotation approx 140 KIAS (d) GEAR UP < 250 KIAS

1.9 TAKEOFF - CARRIER

	Lineup	 Wait behind JBD until Catapult is clear Follow Taxi Directors Instructions to line up on Catapult
1.	Wing Sweep	(a) EM WING SWEEP FWD, then IN (b) MASTER RESET PRESS (c) Wings Verify thumb controller (d) WING SWEEP AUTO (e) Wings Verify at 20 deg
2.	FLAPS	DOWN
3.	Launch Bar Preparation	(a) Nose Strut KNEEL when directed (b) Throttle UP when directed (c) Taxi launch bar into shuttle (d) Throttle IDLE when directed
4.	Trim	2-3 deg nose up
5.	Speed Brakes	IN
6.	Final Checks	(a) ThrottleMIL when directed
		(b) Control Wipeout
		 (b) Control Wipeout Stick Full Forward Stick Full Aft Stick Full Left Stick Full Right Rudder Full Left Rudder Full Right
		 Stick Full Forward Stick Full Aft Stick Full Left Stick Full Right Rudder Full Left
7.	Catapult Shot	Stick Full Forward Stick Full Aft Stick Full Left Stick Full Right Rudder Full Left Rudder Full Right Ender Full Right Column Checked

1.10 LANDING - OVERHEAD PATTERN

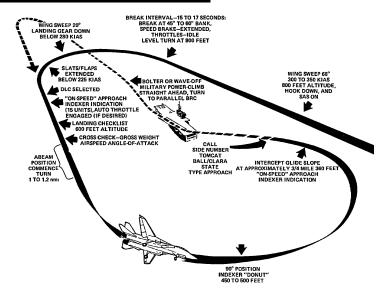

1.	Initial Approach	WING SWEEP68 deg
		• HOOKDOWN
		• SAS ON
		• HUDLDG
		• Airspeed300-350 KIAS
		• Altitude800 ft
2.	Initial Break	Break Interval 15-17 s
		• BANK45-60 deg
		SPEED BRAKE EXTEND
		ThrottleIDLE
		• G 3-4 G
		• Altitude800 ft
3.	Break Turn	• Wing Sweep AUTO < 280 KIAS
		• Landing Gear DOWN < 280 KIAS
		• FLAPS DOWN < 225 KIAS
4.	Downwind	DLC Selected once flaps out
		• AOA ON-SPEED
		LANDING CHECKLIST
		Altitudedescend to 600 ft

PROCEDURES F-14A/B REV: 20210902

5.	Final Turn	180 Deg Position • Abeam Pos	1-1.2 nmi
		• AOA	DONUT
		Altitude	400-500 ft
6.	Intercept Glides-	Distance	3/4 Mile
	lope	Altitude	360 ft
		• AOA	ON-SPEED

1.11 LANDING - CHECKLIST

1.	Wing Sweep	20 deg AUTO
2.	Wheels	• Lights 3 DOWN • Transition Light OUT
3.	SAS	ON
4.	FLAPS	DOWN
5.	DLC	Checked
6.	Hook	HOOKDOWN Transition LightOUT
7.	Harness	Locked
8.	Speedbrakes	EXT
9.	Brakes	Check
10.	Fuel	Check

F-14A/B REV: 20210902

1.12 AERIAL REFUELING

1.13 AIRSTART

• Spooldown	Before significant spooldown (a) Non-Running ENG IDLE or above
	If no relight occurs
	(b) Non-Running ENG OFF then IDLE
	If still no relight occurs
	(c) ENG MODE SEC
	(d) Non-Running ENG OFF then IDLE
 Cross-Bleed Restart 	With one ENG running, if Spooldown fails
	(a) Non-Running ENG OFF
	(b) FUEL SHUT OFFcheck
	(c) Running throttle80%+
	(d) BACK UP IGNITIONON
	(e) ENG CRANK non-running eng
	(f) Non-Running ENG IDLE
	If no start occurs
	(g) Non-Running ENG OFF then IDLE
	If still no start
	(h) ENG MODE SEC
	(i) Non-Running ENG OFF then IDLE
 Windmill Restart 	(a) Airspeed >450 kts
	(b) ThrottleIDLE or above
	(c) BACK UP IGNITIONON
	If no relight occurs
	(d) Throttle OFF then IDLE
	If still no relight
	(e) ENG MODE
	(f) ThrottleOFF then IDLE
 Post Restart 	(a) BACK UP IGNITIONOFF
	(b) ENG MODE PRI

SYSTEMS F-14A/B REV: 20210902

2 SYSTEMS

2.1 AFCS - SAS

• SAS	Stability Augmentation System
	Not Fly-by-Wire
	 Automatic control surface commands generated by analog computer to im- prove stability
• Controls	Three individual Switches
	Pitch
	– Roll
	- Yaw
 Autopilot Emer- 	 Paddle on Stick
gency Disengage Paddle	Disengages Autopilot ModesDeactivates Pitch, Roll SAS Channels

2.2 AFCS - AUTOPILOT

Attitude Hold	Basic Attitude Hold
	 Maintains existing pitch & roll Attitude can be changed with stick input If engaged outside limits will automatically move within range
	• Limits
	Pitch: 30 degRoll: 60 deg
	Engagement
	(a) SAS Switches ON (FWD) (b) Alt. Hold Mode OFF (c) VEC/PCD/ACL OFF
	(d) Heading ModeOFF (e) Autopilot Switch ENGAGE (FWD)

 Altitude Hold 	Barometric Altitude Hold
	 Maintains current barometric altitude
	• Limits
	Vertical velocity: < 100 ft/s
	Engagement
	(a) SAS Switches
 Heading Hold 	Magnetic Heading Hold
	 Maintains current magneatic heading
	• Limits
	Bank angle < 5 deg
	Engagement
	(a) SAS Switches ON (FWD) (b) Autopilot Switch ENGAGE (FWD) (c) Heading Mode HDG (FWD)
Ground Track	Autopilot follows ground track
	Similar to heading hold
	Similar to heading holdCompensates for wind drift
	 Similar to heading hold
	Similar to heading holdCompensates for wind drift
	 Similar to heading hold Compensates for wind drift Uses INS data instead of mag. bearing
	 Similar to heading hold Compensates for wind drift Uses INS data instead of mag. bearing Limits Bank angle < 5 deg Engagement
	 Similar to heading hold Compensates for wind drift Uses INS data instead of mag. bearing Limits Bank angle < 5 deg
• VEC/PCD	 Similar to heading hold Compensates for wind drift Uses INS data instead of mag. bearing Limits Bank angle < 5 deg Engagement (a) SAS Switches
• VEC/PCD	 Similar to heading hold Compensates for wind drift Uses INS data instead of mag. bearing Limits Bank angle < 5 deg Engagement (a) SAS Switches
• VEC/PCD	 Similar to heading hold Compensates for wind drift Uses INS data instead of mag. bearing Limits Bank angle < 5 deg Engagement (a) SAS Switches ON (FWD) (b) Autopilot Switch ENGAGE (FWD) (c) Heading Mode GT (AFT) (d) A/P REF Light Wait until appears (e) NWS Button Press Vector / Precision Course Direction Allows Link 4 controller to remotely direct the aircraft
	- Similar to heading hold - Compensates for wind drift - Uses INS data instead of mag. bearing • Limits - Bank angle < 5 deg • Engagement (a) SAS Switches
• VEC/PCD	 Similar to heading hold Compensates for wind drift Uses INS data instead of mag. bearing Limits Bank angle < 5 deg Engagement (a) SAS Switches ON (FWD) (b) Autopilot Switch ENGAGE (FWD) (c) Heading Mode GT (AFT) (d) A/P REF Light Wait until appears (e) NWS Button Press Vector / Precision Course Direction Allows Link 4 controller to remotely direct the aircraft

F-14A/B

REV: 20210902

- Autopilot Emergency Disengage Paddle
- Paddle on Stick
 - Disengages Autopilot Modes
 - Deactivates Pitch, Roll SAS Channels

2.3 APC / AUTOTHROTTLE

• APC	Approach Power Compensator
	 Automatic throttle control
	 Maintains ON SPEED AoA
• Conditions	Engagement is inhibited / APC is disengaged if conditions not met
	• Throttles75%-90% RPM
	Landing Gear HandleDown
	Weight on Wheels No
• Engage	Throttle Mode AUTO (FWD)
• Disengage	Cage/Seam Button

2.4 **ACLS**

2.5 WING-SWEEP

• Overview	 In Flight Limited between 20 deg & 68 deg On Ground can Oversweep to 75 deg Hydromechanically Controlled
	Automatically through CADCManually with emergency wing-sweep handle
	15 deg/s at 1g loadingMechanically linked to ensure symmetry
CADC Modes	• AUTO
	 CADC controls wing position as function of current Mach via wing-sweep program
	• MAN
	 Pilot manually chooses desired wing sweep angle with thumb controller
	• BOMB
	 Sets wing sweep to 55 deg or further aft

• Emergency Mode	 Emergency Wing-Sweep Handle
	 Moved with wing sweep program by spider detent under normal operation Can be forced out of spider detent and moved manually
• Oversweep	 Selected via Emergency Wing-Sweep Han- dle
	(a) Em. Wing-Sweep
	(b) HZ TAIL AUTHIlluminated (c) Em. Wing-Sweep75 deg
Return to CADC	After Emergency Mode / Oversweep
Control	(a) Em. Wing-SweepSpider Detent (Fwd on startup)
	(b) MASTER RESET Press

Indicated Mach	Max Forward Wing Position	
0.4	20 deg	
0.7	25 deg	
0.8	50 deg	
0.9	60 deg	
1.0	68 deg	

2.6 NAVIGATION

TEMS	F-14A/B	REV:	202 1	0902

2.7 COMMS - OVERVIEW

• ARC-159 UHF 1	 Air-to-Air & Air-to-Surface Communication Pilot Controlled Frequency
	Range – 225.000 - 399.975 MHz
	Steps – 25 kHz
	Channels – 20
• ARC-182 V/UHF 2	 Air-to-Air & Air-to-Surface Communication
	 RIO Controlled
	Frequency
	– Band 1 − 30 - 88 MHz
	 Band 2 – 108 - 156 MHz
	 Band 3 – 156 - 174 MHz
	 Band 4 – 225 - 399.975 MHz
	Steps – 25 kHz
	- Channels - 20
ARA-50 UHF ADF	 UHF Automatic Direction Finder
	 LoS bearing to UHF Transmitter
	 Bearing displayed on BDHI, Pilot HSD
	• 5 min Warmup
KY-28 Voice Se-	Voice Ciphering
curity Equipment	 Integrated with UHF 1 and V/UHF 2
	• 2 min Warmup

2.8 COMMS - ARC-159 UHF 1

• ARC-159 UHF 1	Air-to-Air & Air-to-Surface CommunicationPilot ControlledFrequency
	 Range – 225.000 - 399.975 MHz Steps – 25 kHz Channels – 20
VOL Knob	Controls Pilot UHF 1 Audio Level
BRT/TEST Knob	Controls Radio FREQ DisplayTurn past max to display 888.888
SQL Switch	Toggles radio squelch (noise attenuation)
READ Switch	 Displays Frequency of Selected Preset Channel
	01

SYSTEMS	F-14A/B REV: 20210902
LOAD Button	Saves Displayed Frequency to Selected Preset Channel
TONE Button	Steady 1.020 kHz Test Tone
Mode Selector	Frequency Selection Method
	 GUARD – 243.000 MHz
	 MANUAL – Manual tuning
	 PRESET – Preset channels
 Function Selector 	 Selects Transceivers to Energize
	 ADF – Not simulated
	BOTH – Main & Guard

- MAIN - Main

- OFF - Secures UHF 1 radio

• Selects from 20 preset Channels

2.9 COMMS - ARC-182 V/UHF 2

CHAN SEL

• ARC-182 V/UHF 2	Air-to-Air & Air-to-Surface CommunicationRIO ControlledFrequency
	 Band 1 – 30 - 88 MHz Band 2 – 108 - 156 MHz Band 3 – 156 - 174 MHz Band 4 – 225 - 399.975 MHz Steps – 25 kHz Channels – 20
VOL Knob	Controls RIO UHF 2 Audio Level
BRT/TEST Knob	Controls Radio FREQ Display
• SQL Switch	Toggles radio squelch (noise attenuation)
Mode Selector	 Transceiver Settings OFF – Secures V/UHF radio unless frequency mode set to 243 T/R – Energizes transmitter and main receiver T/R & G – Energizes transmitter, main, and guard receiver DF – Automatic direction finding from 108 - 399.975 MHz TEST – BIT

SYSTEMS	F-14A/B REV: 20210902
• CHAN SEL Outer Dial	 Selects Frequency Tuning Mode 243 – Selects UHF Guard MAN – Manual Select frequency G – Tunes Tranceiver to guard frequecy in last selected band PRESET – Allows selection between 40 preset channels (31-40 are Have Quck and not simulated) READ – Displays frequency of selected preset channel LOAD – Saves displayed frequency to selected preset channel
• CHAN SEL	 Selects one of 40 Preset Channels

2.10 COMMS - KY-28 VOICE SECURITY EQUIPMENT

Inner Dial

KY-28 Voice Se- curity Equipment	Voice CipheringIntegrated with UHF 1 and V/UHF 22 min Warmup
ZEROIZE Switch	Lift Guard to Erase Preloaded CodesCodes loaded via ground crew
 Power-Mode 	Selects Mode
Switch	 P/OFF – Removes power from system C – Transmit / Receive in secure mode DELAY – Between PTT and trans.
• Radio-Select	Selects Radio Mode
Switch	 RELAY – Acts as relay for other stations (not simulated)
	 RAD-2 – Secure voice for V/UHF 2
	 RAD-1 – Secure voice for UHF 1

2.11 LINK 4 DATALINK - OVERVIEW

• Link 4	Modes – Mutually exclusive
	Link 4A – AWACS / Surface ShipLink 4C – Fighter to Fighter
	Data Speed – up to 5000 bit/s!
• Link 4A	Network – AWACS / Surface Ship Additionally used for ACLS
• Link 4C	Network – Fighter to Fighter
	Up to four F-14sUnique to F-14
Basic Operation	(a) Power Switch As Desired
	• Link 4AON • Link 4CAUX
	(b) Mode Switch

2.12 LINK 4 DATALINK - CONTROL PANEL

Test Switch	Controls Test / Anti-Jam Modes
	TEST – Initiates BIT
	 NORM – Normal Operation
	A-J – Anti-Jam (not simulated)
 Frequency 	Selects Datalink Frequency
Thumbwheels	 First Digit – Fixed as 3
	 Allowable Range – 300.0 - 324.9 MHz
 Power Switch 	Controls System Power
	ON – Enables Link 4A
	OFF – Disables system
	 AUX – Enables Link 4C

2.13 LINK 4 DATALINK - REPLY/ANTENNA PANEL

– UHF 1 LWR / DL UPR	• ANTENNA	Selects Antenna
	Switch	 Shared with UHF 1 – Mutually exclusive
		– UHF 1 LWR / DL UPR
– UHF 1 UPR / DL LWR		– UHF 1 UPR / DL LWR

SYSTEMS		F-14A/B	REV: 20210902
	\boldsymbol{A}		

REPLY Switch	 Sets Reply Mode NORM – Own Aircraft replies to datalink messages CANC – Receive only
MODE Switch	Controls Overall Mode
	TAC – Normal airborne modeCAINS/WAYPT – Enables CV align
Address Thumbwheels	Sets Two Least Significant Bits of Aircraft D/L Address

2.14 ALR-67 RWR - CONTROLS / OVERVIEW

PWR Switch	Set to ON to Operate
 VOL Knob 	Sets RIO Audio Level
TEST Switch	 Springloaded to Center BIT – Initiates Build In Test SPL – Holds BIT status page while held
MODE Switch	 Springloaded to Center OFST – Separates overlapping symbols LMT – Displays 6 highest threats
DISPLAY TYPE Selector	 Changes Priority of Display NORM – Normal threat symbology AI – Airborne Interceptor prioritized AAA – Anti-aircraft artillery prioritized UNK – Unknown prioritized FRIEND – Friendly threats prioritized
	 Indicated by Letter in Display Center
• Display	 Outer Band Critical Band Imminent threat to own aircraft Blinking indicates engaging own aircraft
	Middle Band
	Lethal BandPotentially threatening emittersNot actively engaging own aircraft
	Inner Band
	Non-Lethal BandNot currently within capability of emitter
	Inner Circle
	 N, I, A, U, F – Prioritization type O – Offset L – Limit B – BIT Failure T – Thermal overload

SYSTEMS F-14A/B REV: 2021090

Alert Tones

• Short Tone – New emitter / emitter moved

- Slow Warbling Threat in critical band
- Fast Warbling Threat actively engaging own aircraft
- **4-Tone Sequence** New threat capable of silently engaging own aircraft

2.15 ALR-67 RWR - THREAT SYMBOLOGY

	SHIPS
AB	Arleigh Burke
AK	Admiral Kuznetsov
GR	Grisha 5 (Albatros)
HP	Oliver Hazard Perry
J2	Type 054A Frigate, "Jiangkai II class"
KK	Krivak 3 (Rezky)
ΚV	Kirov (Pyotr Velikiy)
L1	Type 052B Destroyer, "Luyang I class"
L2	Type 052C Destroyer, "Luyang II class"
N	Ship with Nav Radar
NE	Neustrashimy
NZ	Nimitz (Vinson, Stennis)
SV	Slava (Moscow)
TC	Ticonderoga
TT	Tarantul 3 (Molniya)
TW	Tarawa
YU	Type 071 Amphibious Transport Dock, "Yuzhao class"
	AIRCRAFT
14	F-14A/B
15	F-15C/E
16	F-16C
17	JF-17
18	F/A-18C
19	MiG-19

23 24 25	MiG-21bis MiG-23MLD Su-24M/MR MiG-25PD MiG-29A/G/S Su-27 Su-33
24	Su-24M/MR MiG-25PD MiG-29A/G/S Su-27 Su-33
25	MiG-25PD MiG-29A/G/S Su-27 Su-33
	MiG-29A/G/S Su-27 Su-33
29	Su-27 Su-33
	J-11A
30	Su-30
31	MiG-31
34	Su-34
37	AJS-37
39	Su-25TM
50	A-50
52	B-52
	AN-26B AN-30M
AP	AH-64D
B1	B-1B
	Tu-95 Tu-142M
BF	Tu-22M3
BJ	Tu-160
E2	E-2D
E3	E-3C
F4	F-4E
F5	F-5E
НХ	Ka-27
IL	IL-76MD IL-78M
KC	KC-135

KJ	KJ-2000
M2	Mirage 2000-C Mirage 2000-5
S3	S-3B
SH	SH-60B
ТО	Tornado
TR	C-130 C-17A
	AIR DEFENSE
2	S-75 TR SNR (SA-2) "Fan Song"
3	S-125 TR SNR-125 (SA- 3) "Low Blow"
6	Kub SA-6
7	HQ-7 TR
8	OSA (SA-8)
10	S-300PS 30N6 TR (SA- 10)
11	Buk (SA-11)
12	S-300V
15	Tor 9A331 (SA-15)
19	Tunguska 2C6M (SA-19)
A	Gepard M-163 Vulcan ZSU-23-4 Shilka
ВВ	S-300PS 64H6E SR (SA- 10/Big Bird)
BF	Rapier Blindfire TR
CS	S-300PS 5N66M SR (SA-10/Clam Shell)
DE	Sborka (Dog Ear)
FF	S-125 P-19 SR (SA- 3/Flat Face)
GR	Roland SR

НА	Hawk SR
HK	Hawk TR
HQ	HQ-7 SR
PT	Patriot
RO	Roland
RP	Rapier SR
S	1L13 55G6 EWR
SD	Buk TR (SA-11/Snow Drift)
SN	PRW-11 (Side Net)
	MISSILES
M	AIM-54 AIM-120 MICA-EM R-37 R-77 SD-10
ATC	
T	Airport ATC Radar

- 2.16 ALE-39 COUNTERMEASURES DISPENSER
- 2.17 ALQ-100 / ALQ-126 DECM

AWG-9 RADAR


MAIN MODES - OVERVIEW

	Pulse		Pulse Doppler			
	Pulse Search	P-STT	PD Search	RWS	TWS	PD-STT
Range	60 nm	50 nm	110 nm	90 nm	90 nm	90 nm
AIM-7	BRSIT	CW	BRS	SIT	-	PD
AIM-54	BRSIT	ACT	BRS	SIT	Multi TGT	PD/ACT

MAIN MODES

• Pulse	Basic Pulse w/o doppler filtering
	Cannot be notchedGround ClutterRudimentary Ground mapping
	Pulse Sub-Modes
	Pulse SearchPulse-STT
 Pulse Doppler 	 Doppler filter -> no ground returns
	 Susceptible to notching No ground clutter Greater range Advanced sub modes AIM-54 Guidance
	 Pulse Doppler Sub-Modes
	PD SearchRWSTWSPD-STT


PULSE MODE - PULSE SEARCH 3.3

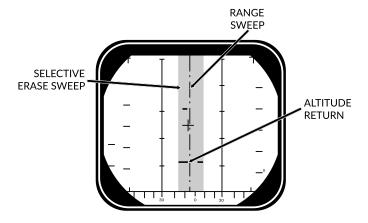

SEARCH (±10° SCAN)


Pulse Search	Basic Mode - AWG-9 does not use pulse doppler filtering • Advantages
	All aspect target detectionCannot be notchedRudimentary ground mapping
	 Disadvantages
	Cannot discern ground returns and targetsLower range
• DDD	 Range/Azimuth Visual representation of radar and erase sweeps
• TID	No Information from PulseCannot guide AIM-54

3.4 PULSE MODE - PSTT

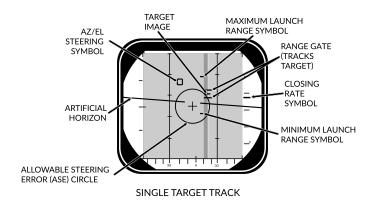

Pulse STT	Lock Target w/o doppler filtering • Advantages
	 Cannot be notched
	 Disadvantages
	 Susceptible to ground clutter
Lock Target	Conditions
	Pulse Search Mode selectedRDR HCU Mode selected
	Lock Target
	(a) Hold HCU Half-action(b) Slew to desired Target(c) HCU Full-Action to lock
	Unlock Target
	(d) HCU Half-action
• DDD	Track Indications
	 ANT TRK light RDROT light Tracking gates Closure rate Attack Symbology

3.5 PULSE DOPPLER MODE - PULSE DOPPLER SEARCH

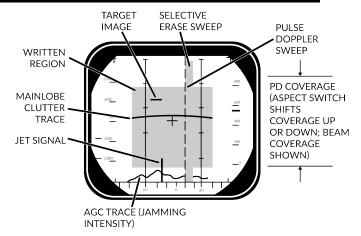


SEARCH (±40° SCAN)

 Pulse Doppler Search 	"Early Warning" Mode - Longest Range, cannot display rangeAdvantages		
	Longest RangeDoppler Filtering"Look Down Shoot Down"		
	 Disadvantages 		
	Can be notchedNo range information		
• DDD	 Closure Rate/Azimuth Visual representation of radar and erase sweeps 		
 Doppler Filters 	Main Lobe Clutter (MLC) Filter		
	Own GS +/- 133 knotsRemoves main ground returnSource of notching		
	Zero Doppler Filter		
	 Negative own GS +/- 100 knots Removes Radar reflection from ground directly beneath own AC 		

AWG-9 RADAR	F-14A/B REV: 20210902
MLC Switch	 IN: Enables MLC filter AUTO: Enables MLC filter if look-up angle less than 3 deg OUT: Disables MLC filter
• Vc Switch	Changes closure rate DDD scale • X-4: -800 to 4000 knots • NORM: -200 to 1000 knots • VID: -50 to 250 knots
ASPECT Switch	Changes closure rate processing scale • NOSE: -600 to 1800 knots

• BEAM: -1200 to 1200 knots

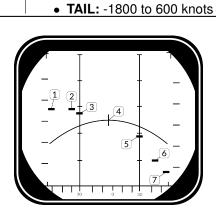

	Look Angle	Line of Sight Rate	Target Heading
1	60 deg	1490	180 deg
2	45 deg	1500	120 deg
3	30 deg	1428	100 deg
4	0 deg	1200	90 deg
5	30 deg	672	80 deg
6	45 deg	210	60 deg
7	60 deg	-300	0 deg

3.6 PULSE DOPPLER MODE - RWS

 Range While Search 	FM Ranging, used for getting good A/A picture before selecting TWSFM Ranging
	 Pulse Doppler with ranging TID shows momentary tracks with ranges Processing reduces max range
	Advantages
	Long RangeDoppler Filtering"Look Down Shoot Down"Signal Processing
	 Disadvantages
	 Can be notched
• DDD	 Closure Rate/Azimuth Visual representation of radar and erase sweeps
• TID	 Momentary Tracks Max concurrent tracks: 48 Cannot lock targets from TID
 Filtering 	Same as Pulse Doppler Search

3.7 PULSE DOPPLER MODE - TWS

Track While Scan	Builds Track Files, high situational awareness, multi-target AIM-54 launch • Track Files
	 AWG-9 builds Trackfiles for contacts Can launch multiple AIM-54 Processing reduces max range Can lock targets from TID
	FM Ranging
	 Pulse Doppler with ranging TID shows momentary tracks with ranges Processing reduces max range
	Advantages
	Doppler FilteringMulti-Target AIM-54
	 Disadvantages
	Lowest RangeCan be notched
• DDD	 Closure Rate/Azimuth Visual representation of radar and erase sweeps
• TID	TracksfilesMax concurrent tracks: 24Max displayed tracks: 18
 Filtering 	Same as Pulse Doppler Search
Scan Volume	Trackfiles require update every 2.5 s -> • 20 deg 4 bar (if selected) • 40 deg 2 bar (else)
• TID Mode Selector	 GND STAB: Ground Stabilized, True North is up on TID A/C STAB: Aircraft Stabilized ATTAK: same as A/C STAB with superimposed attack steering symbology TV: Displays TCS on TID, dispays LANTIRN on TID if equipped

Selector
Buttons

RID DISABLE: Not simulated

- ALT NUM: Enables display of track altitudes on left side of track symbols
- SYM ELEM: Enables display of all supplementary symbology of tracks and waypoints
- DATA LINK: Enables display of D/L contacts
- JAM STROBE: Enables display of jam strobes
- NON-ATTK: enables/disables display of targets not possible to engage (friendlies)
- LAUNCH ZONE: Enables display of weapon launch zones
- VEL VECTOR: Enables display of velocity vectors

• TRACK HOLD & CLSN Steering Buttons

TRACK HOLD

- Normally: Tracks maintained for 14 s after last observation
- Track Hold: maintained for 2 min after last observation

CLSN Button

- begins collision steering to currently tracked target
- enables Steering Centroid if in TWS
- LD CLSN presents azimuth steering only
- CLSN presents both azimuth and elevation steering

TWS AUTO / MAN

- TWS MAN: Manual azimuth/elevation control, target designation by RIO
- TWS AUTO: Automatic prioritization of targets and azimuth elevation control

3.8 PULSE DOPPLER MODE - TWS MAN


TWS MAN	Target Selection: Manual
	Scan Azimuth/Elevation: Manual
 Target Selection 	 Conditions
	 TWS MAN Radar Mode selected
	 TID CURSOR TID Mode selected
	Hook Target
	(a) Hold HCU Half-Action
	(b) Slew TID Cursor over desired Tgt
	(c) HCU Full-Action to select Tgt
	TID Symbology
	- Range (RA)
	Bearing (BR)
	Altitude (AL)
	– Magnetic course (MC)
	Lock Target
	(d) Press PD STT or Pulse STT buttons
	Deselect Target
	(e) press HCU Half-Action
AIM-54 Launch	Automatically selects TWS AUTO
	 Prevents selection of TWS MAN

3.9 PULSE DOPPLER MODE - TWS AUTO

TWS AUTO	 Target Selection: prioritizes contacts based off range, aspect, closure Scan Azimuth/Elevation: Geometric center of targets in scan volume
• Centroid / Steer-	Steering Centroid
ing Cues	 facilitates steering cues HUD, VDI, TID, DDD Appears as X on TID Takes Gimbal limits into account Weights individual Tracks based on parameters
	Illumination Centroid
	 Not Visible Controls azimuth and elevation of scan pattern Takes scan volume into account
Pilot Steering	Conditions
Cues	 A-A HUD Mode selected Master Arm ON (UP) AIM-54 or AIM-7 selected TWS-AUTO selected

AWG-9 RADAR F-14A/B REV: 20210902

3.10 PULSE DOPPLER MODE - PDSTT

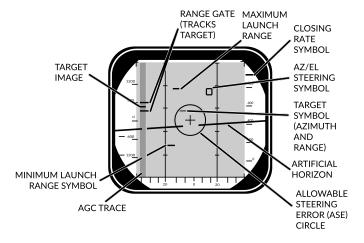

SINGLE TARGET TRACK

 Pulse Doppler STT 	Lock Target with doppler filtering • Advantages	
	 Ground Clutter filtering 	
	 Disadvantages 	
	 Susceptible to notching 	
 Lock Target 	 Conditions 	
	Pulse Doppler Mode selected (PD Search, RWS, TWS)RDR HCU Mode selected	
	Lock Target	
	(a) Hold HCU Half-action(b) Slew to desired Target(c) HCU Full-Action to lock	
	Unlock Target	
	(d) HCU Half-action	
• DDD	Track Indications	
	 ANT TRK light RDROT light Tracking gates Closure rate Attack Symbology 	

— 41 —

3.11 ACM MODES - OVERVIEW

	PLM	VSL	PAL	MRL
Range	5 nm	5 nm	15 nm	5 nm
Description	Boresight	Vertical	Horizontal	RIO
Weapons		Gun + All Missiles		

• PLM	Pilot Lockon Mode Highest Priority ACM Search Pattern - Small Boresight - Range: 5 nm
• VSL	 Vertical Scan Lockon HI Search Pattern Width: 5 deg Vertical: +15 to +55 deg Range: 5 nm
	 LO Search Pattern Width: 5 deg Vertical: -15 to +25 deg Range: 5 nm
	RIO/PILOT Controlled
• PAL	Pilot Automatic LockonSearch Pattern
	Width: +/- 20 degVertical: 8-barRange: 15 nm
• MRL	 Manual Rapid Lockon RIO Controlled Search Pattern
	HCU ControlledRange: 5 nm

3.13 TID SYMBOLOGY

GENERAL		
Center Dot	•	Basic Component of Symbols
		 Marks coordinates of symbol
Own AC		 Symbol representing own aircraft
		 Ground Stabilized: Moves Aircraft Stabilized: Stationary Outside TID: line drawn from TID center towards symbol
TID Cursor		Hook Cursor
		Controlled by HCU in TID mode
		Half-Action
		Enables display of symbolEnables HCU stick to move cursor
		Full-Action
		 Hooks closest symbol If no symbol near, cursor dropped at location
TWS Steering Centroid	X	Steering centroid of TWS tracks
		 Selected by WCS for weapons engagement
ONBOARD SENS	ORS	Symbol Above Dot
Unknown	-	Unknown Sensor TrackAll Returns in RWS
Hostile	^•	 Sensor Track designated Hostile by RIO
Friend	•	 Sensor Track designated Friendly by RIO
Angle-Tracked Radar		Radar Angle Tracking
Target		

Angle-Tracked Radar Target with Altitude	\bullet	 Radar Angle Tracking Jamming Target
Difference Ranging		Alt. diff. ranging
TCS-Angle Tracked Target	•>	TCS Angle Tracking
TCS-Angle Tracked		TCS Angle Tracking
Target with Altitude Difference Ranging		- Alt. diff. ranging
D/L TARGETS	S	Symbol Below Dot
Unknown		 D/L Track designated Un- known by Source
Hostile	•	D/L Track designated Hostile by Source
Friendly		 D/L Track designated Friendly by Source
MANUAL REF PO	INTS	
Home base		Waypoint Representing
		Home Base
		Carrier
•	1 .	- Airfield
Waypoint	\•\	Nav Waypoint Supplement by Number
		Supplanted by Number
Defended Point		- 1, 2, or 3• Waypoint to Defend
Delended Pollit		waypoint to belend
Fixed Point	\times	Generic Waypoint
Hostile Area		Waypoint Indicating Hostile Area
Surface Target	$ \bigoplus$	 Waypoint Indicating Surface Target
IP		Initial Point
		 Waypoint for A/G engage- ment
D/L REF POIN	TS	
Home Base		D/L Waypoint Representing Home Base

AWG-9 RADAR REV: 20210902 Waypoint • D/L Generic Waypoint Data Link Fixed • D/L Waypoint Representing **Point Fixed Point** • D/L Waypoint Representing a Surface Target **Surface Target** POS SYMB MODIFIERS Additional Symbology on TWS **Mandatory Attack Track** - Horizontal bar through center dot Selected by RIO - Only 1 target can be designated - Guaranteed WCS priority number **Data Link Destroy** Additional Symbology on D/L **Track** - Horizontal bar through center dot Selected by Source - No effect on WCS prioritization **Do Not Attack** Additional Symbology on TWS or D/L Track Vertical bar through center dot If Set by RIO - Removes WCS prioritization **Multiple Targets** Additional Symbology on TWS or D/L Track Horizontal bar on left side of symbol • Indicates Multiple Targets

Data Link Challenge		 Additional Symbology on D/L Track
		 Small V with center at center dot
		 Command to Visually Identify
Track Extrapolated	\\hat{\chi}\	 Additional Symbology on TWS or D/L Track
		 Small X with center at center dot
		 No Update within 8 seconds
		 Track deleted after 14 seconds
		Or after 2 min if track hold
Altitude Numerics	4/•\	 Altitude to Nearest Ten Thousand
		- example: 35000-45000
Firing Order Numer-	/^\4	 Indicates AIM-54 Prioritization
ics		Numbers 1-6Only in TWS
Time-to-Impact (TTI)	<i> </i> ∴ 6	After AIM-54 Launch
		 Prioritization replaced with estimated TTI
		Flashes after Pitbull
Velocity Vector		 Additional Symbology from center Dot
		 Direction represents track heading
		 Length represents speed
		 Varies with Mode
		 Ground Stabilized: true heading and ground speed Aircraft Stabilized: relative heading and velocity

Launch Zone Vectors		Additional Symbology for AIM-54 Selected manually by RIO Or 60 seconds from max launch TUMR Time-Until-Minimum-Range Max: 180 seconds, 1.5 inches TUOR Time-Until-Optimal-Range Start of bar is 8 seconds from optimum TUIR Time-Until-In-Range
Jamming Strobe		Line from own AC towards Jammer
Radar Antenna Scan Pattern Azimuth Limits	XXX)	 Limits of Current Scan Azimuth Single Line in STT
Data Link Jamming Strobe		 Line from D/L point towards Jammer
Data Link Pointer		 Additional Symbology on D/L Track Circle Indicates operator concern
Data Link Priority Kill		 Additional Symbology on D/L Track
		 Square Indicates target must be destroyed No effect on WCS prioritization

AWG-9 RADAR F-14A/B REV: 20210902

ATTACK DISPLAY SYMBOLOGY

Artificial Horizon		Represents Pitch and Roll
Steering Guidance		Represents Steering Error
Symbol		 Should be placed as near as possible to center of ASE circle
Allowable Steering Error Circle	(·)	Indicates Allowable Steering Error for Missile Launch
		 Size Varies with Geometry, Mode, Missile
Breakaway Indica- tion	X	Appears when Target Range Less than Minimum for Se- lected Weapon

TCS

OVERVIEW

5 LANTIRN

5.1 **OVERVIEW**

• LANTIRN	Low Altitude Navigation and Targeting Infra-Red for Night Only Targeting Pod – Nav pod was deleted Incomplete Integration – Own control panel, supplants TCS feed
Master Modes	 A/G – Allows bomb release guidance A/A – Optimized for air targets
FOV Levels Overview	 Wide FOV – 5.9 deg Slew – 8.5 deg/s Narrow FOV – 1.7 deg
	Slew – 1.8 deg/sExpanded
	 FOV – 0.8 deg Slew – 0.7 deg/s Digital Zoom – Degraded quality

5.2 OVERVIEW - STARTUP

1.	Power Switch	POD
2.	Pod Startup Sequence	8 min startup sequence MODE Switch shows STBY when complete
3.	MODE Switch	Press
4.	Initialization Sequence	 30 sec initialization MODE Switch shows OPER when ready
5.	VIDEO Switch	FLIR
6.	TID MODE	TV

ANTIRN F-14A/B REV: 20210902

5.3 OVERVIEW - POINTING MODES

 Sensor Modes 	Contrast Lock
Overview	Area TrackPoint Track
	Q Designation
	Directional Q – QSNO / QADL / QHUDLocation Q – QWp / QDES
Directional Q	Do Not Allow Weapon GuidanceQSNO
	 Pod slaved to ground 15 nm in front along own aircraft heading
	• QADL
	 Pod slaved to ADL
	In A/A mode
	• QHUD
	 Pod slaved to HUD
	– In A/G mode
Location Q	Allow Weapon GuidanceQWp
	 Pod slaved to WCS waypoint
	Cycled with QWp+ / QWp-
	• QDES
	 Designate targets for engagement LANTIRN Trigger Second Detent to designate Coordinates can be manually added to WCS for navigation

LANTIRN F-14A/B REV: 20210902

5.4 OVERVIEW - LASING/DESIGNATION

A/G Designation	 (a) DesignateTrigger Full-Action Laser Fires Slant Range calculated Time-to-Go calculated
Steering Cues	 Automatically activated when QDES selected/designated QDES remains even if new Q selected Cues still point towards QDES even if pod at another point
Manual Lase	(a) LaseTrigger Half-Action Hold
Latched Lase	Effect – Lases for 60 sec (a) Activate Latch Lase Button Press (b) Extend Latch Lase Button Press (c) Deactivate Trigger Half-Action
Auto Lase	 Effect – Fires from -10 to +4 sec TIMP (a) Laser Mode Slider AFT Short (b) Cycle A/M Right 4-Way Depress
• Laser Notes	 Always at current Pod location Can point to different location than QDES

5.5 CONTROLS - PANEL

Power Switch	 OFF – Disables power to system IMU – Only powers LANTIRN IMU (Not Simulated in DCS) POD – Powers whole system
MODE Switch	STBY – StandbyOPER – Operational
LASER Switch	ARM – Arms laserSAFE – Inhibits laser use
VIDEO Switch	 FLIR – Displays LANTIRN FLIR on TID TCS – Displays TCS video on TID
• Indicator Lights	Indicate Error States
IBIT Button	Initiates Build-In-Test

5.6 CONTROLS - STICK

 Master Mode 	 A/G Mode – Side 2-Way FWD A/A Mode – Side 2-Way AFT
• Slew	Center Slew Hat
WHOT/BHOT	Center Slew Hat Depress
Contrast Track	Point Track – Left 4-Way UpArea Track – Left 4-Way Down
• Q Select	 QADL/QHUD – Right 4-Way Up QDES – Right 4-Way Right QSNO – Right 4-Way Down
 Declutter 	Right 4-Way Depress
• Zoom Level	FOV Button
Cycle Gain Control Mode	Slider FWD short
Manual Gain Control	(a) Slider FWD long (b) Gain Right 4-Way Up/Down Level Right 4-Way Left/Right
Laser Code	(a) Slider AFT short (b) Select Digit Right 4-Way Left/Right (c) Change Digit Right 4-Way Up/Down
Focus Control	(a) Slider AFT hold (b) Right 4-Way Up/Down
Manual Lase	Trigger Half-Action
Latched Laser	Latched Laser Fire Button
Designate QDES	Trigger Full-Action

5.7 DISPLAY

 Top Left 	Own Aircraft Datablock
	Lat – deg:min.dec
	Long – deg:min.dec
	ALT – Altitude (ft)
	 KGS – Knots Ground Speed
	DIVE – Dive Angle (deg)
Mid Left	Sensor Mode – WHOT / BHOT
	Gain Control – Auto / Manual
Bottom Left	Pod Info Datablock
	SRA – Slant Range
	AZ – Pod LoS Azimuth L/R
	EL – Pod LoS Elevation
	- Time - UTC Time
	- IBIT - Codes
Bottom Center	Master Mode – A/A / A/G
	 Track Mode – AREA / POINT / Q
	Current Weapon
	Laser Code
	• L
	Steady – Laser Armed
	Steady - Laser AffiledFlashing - Laser Firing
 Bottom Right 	Q Datablock
	TTG – Time-To-Go
	B/R – Bearing and Range
	ELEV – Elevation (ft) of Q
	Lat – deg:min:dec
	Long – deg:min:dec
 Mid Center 	Crosshair
	 Bounding Box – Indicates currently
	tracked target in point mode
	 Zoom Boxes – Indicates next zoom lev-
	els
	 FLIR Pointing Cue – Shows Pod LoS,
	screen center indicates straight down

LANTIRN Mid Pight	F-14A/B REV: 20210902
 Mid Right 	Bomb Rlease Cue
	 Only shown if current Q is QDES, with valid weapon selected TREL – Time to release
	 TIMP – Time to Impact (after release)
Top Center	Steering Guidance to Q
	 Relative bearing L/R to commanded

heading

6 A/G WEAPONS

6.1 A/G WEAPON SETTINGS - OVERVIEW

• WPN TYPE	Selects Weapon Type
	 Configures WCS for selected weapon Refer to Kneeboard for list of mounted weapons Mk-81 / 82 / 83 have both L and H option referring to high and low drag
DLVY MODE	 STP-SGL – Single weapon per press STP-PRS Single pair per press RPL-SGL – QTY of weapons per press RPL-PRS – QTY of pairs per press
DLVY OPTNS	 INTERVAL – Interval in ms QTY – Number of stores to be released
MECH FUZE	 NOSE – Arms nose fuze SAFE – Inhibits arming of fuzes NOSE/TAIL – Arms both fuzes
• ELEC FUZE	 SAFE – Inhibits electrical bomb fuzing VT – Sets air-burst mode at preset burst height for compatible stores INST – Sets instantaneous burst mode DLY 1 – Sets preset time delay 1 DLY 2 – Sets preset time delay 2
• STA SEL	 Selects Stations for Employment/Jettison Set to SEL to activate a pylon Stations 1 & 8 should be set to B for selection Station 1 & 8 SW was used for Sidewinder jettison, is now inoperable
• TANK JETT	Allows Drop Tank Jettison
SEL JETT	 JETT – Selective jettison SAFE – Inhibits jettison AUX – Backup mode
• JETT OPTION	 MER TER – Jettisons ejector racks WPNS – Jettisons weapons only

ATTK MODE

- CCMPTR TGT
 - Computer Target Similar to CCRP
- CMPTR IP
 - Computer initial point
 - Extended CMPTR TGT mode using known IP
 - For use when target hard to spot visually but close to landmark
- CMPTR PLT
 - Computer Pilot similar to CCIP
- MAN
 - Manual HUD displays pipper
 - Backup mode
- D/L BOMB
 - Data-Link Bomb Automatic mode steered by D/L cues
 - Not Implemented in DCS

6.2 SELECTIVE ORNANCE JETTISON

1.	Pilot Conditions	MASTER ARMON
2.	RIO Conditions	
		JETT OPTIONS As Desired
3.	Jettison	(a) SEL JETT GuardFlipped
		(b) SEL JETT SwitchJETT

6.3 M61 GUN

1.	Pilot Conditions	• MASTER ARM ON
		• HUD
		WEAPON SELECTOR GUNS
		Wing SweepBOMB
2.	Employment	(a) Dive
		(b) Pipper on target
		(c) TRIGGER FIRE
•	Note: TCS	TCS slaved to radar impact point
		 Rio can select NAR or WIDE

6.4 FFAR / ZUNI ROCKETS

1. RIO Conditions	WPN TYP Attack Mode Attack Mode Deliver Mode Mechanical Fuze Electronic Fuze Delivery Options Stations Attack Attack Pilot Attack RPL-SGL NOSE INST As Desired
2. Pilot Conditions	 MASTER ARM ON HUD A/G WEAPON SELECTOR OFF Stations verify selected Wing Sweep BOMB
3. Employment	(a) Dive 20-30 deg (b) Pipper on target (c) TRIGGER FIRE

6.5 UNGUIDED BOMB - CCIP

1.	RIO Conditions	• WPN TYP MK-8X
		Attack ModePilot Attack
		Deliver ModeSTP-PRS
		Mechanical Fuze NOSE
		Electronic FuzeINST
		Delivery Options As Desired
		Stations Armed
2.	Pilot Conditions	• MASTER ARMON
		• HUDA/G
		WEAPON SELECTOR OFF
		Stations verify selected
		Wing SweepBOMB
3.	Employment	(a) Dive
		(b) Pipper on target
		(c) STORE RELEASE Press and Hold

A/G WEAPONS F-14A/B REV: 20210902

6.6 UNGUIDED BOMB - CCRP

1. RIO Conditions	WPN TYP
2. Pilot Conditions	 MASTER ARM ON HUD A/G WEAPON SELECTOR OFF Stations verify selected Wing Sweep BOMB
3. Designation	(a) Slew Diamond VSL HI/LO (b) DesignatePAL
4. Employment	(a) Flight Path
	(c) STORE RELEASE Press and Hold

6.7 LASER GUIDED BOMB

1. LANTIRN PREP	 (a) Target Pod Power
	(b) Laser Code
	(c) LANTIRN ModeOPERATE
	 STANDBY caution will flash for 30 s Then switches to OPER
	(d) VIDEO Switch
2. RIO Conditions	WPN TYP GBU-XX Attack Mode
3. Pilot Conditions	• MASTER ARM ON • HUD A/G • WEAPON SELECTOR OFF • VDI Mode TV • Stations verify selected • Wing Sweep BOMB
4. Slew LANTIRN	Refer to LANTIRN Control Section Slave to WYPT Left-4-Way RIGHT QSNO (Snowplow) S4 HAT Down Toggle FOV LANTIRN Toggle FOV Slew LANTIRN Stick Area Track Left-4-Way UP Point Track Left-4-Way Down Undesignate LANTIRN Undesignate

4. Designate	Refer to LANTIRN Designation Section (a) DesignateTrigger Full-Action
	 Slant Range calculated
	Time-to-Go calculated
	Once Time-to-Realease (TREL) is 0
	(b) Auto-Lase If selected: lases 10s to impact
	(c) Manual Lase Trigger Full-Action
	(d) While LasingL blinks
5. Employment	Once Time-to-Realease (TREL) is 0
	(a) STORE RELEASE Press and Hold
	(b) Flight Path Gentle right-hand turn
	(to prevent masking)

6.8 TALD DECOYS

1.	RIO Conditions	WPN TYPTALD Deliver ModeSTP-SGL Delivery OptionsAs Desired StationsArmed
2.	Pilot Conditions	 MASTER ARM ON HUD A/G WEAPON SELECTOR OFF HSD Mode TID Stations verify selected
3.	Employment	(a) Flight Path High / Fast (b) RWR Monitor to locate emitters (c) STORE RELEASE Press and Hold

A/A WEAPONS

M61 GUN - OVERVIEW

GUN RATE	Cycles Gun Rate
Button	HIGH – 6000 rpm
	– LOW – 4000 rpm
A/A Gun Modes	• RTGS
	 Real-Time Gunsight Mode Selected automatically with guns If No WCS Data Available displays bullet location at 2000 ft with diamond and 1000 ft with pipper If WCS Data Available pipper displays bullet location at targets current range out to 4000 ft
	MANUAL
	Fixed manual pipperAdjust with GUN ELEV knobPress CAGE/SEAM to select
CAGE/SEAM Button	Cycles RTGS / MANUAL Gun Modes
ROUNDS Knob	Allows selection of remaining gun rounds

M61 GUN - MANUAL

1.	Pilot Conditions	• MASTER ARM	ON
		• HUD	
		• Gun Rate	HIGH
		Gunsight Lead	as required
		WEAPON SELECTOR	GUNS
2.	Employment	(a) Gun Mode	MANUAL
		(b) Pipper	on target
		(c) Trigger	FIRE

M61 GUN - RTGS / NO RADAR 7.3

1.	Pilot Conditions	• MASTER ARM	ON
		• HUD	
		• Gun Rate	HIGH
		WEAPON SELECTOR	GUNS
2.	Employment	(a) Gun Mode	RTGS
		(b) Pipper	on target
		(c) Trigger	FIRE

M61 GUN - RTGS / RADAR

1.	Pilot Conditions	• MASTER ARM	ON
		• HUD	A/A
		• Gun Rate	HIGH
		WEAPON SELECTOR	GUNS
2.	Employment	(a) Gun Mode	RTGS
		(b) Radar	STT
		(c) Pipper	on target
		(d) Trigger	FIRE

7.5 AIM-9 SIDEWINDER - OVERVIEW

• Missile	MSL PREP
Preparation	 AIM-9 seeker must be cooled
	Either press SW COOL button
	- Or activation of ACM
Seeker Head	• SEAM
Modes	 Sidewinder Expanded Acquisition Mode Double-D search pattern invisible to pilot 4.5 sec search time Allows AIM-9 to be uncaged and track target
	 40 deg track limit
	 Allows WCS to slave AIM-9 to radar track
	Boresight
	 AIM-9 locked to ADL
	2.5 deg FOV
	 Selected if MODE/STP set to BRSIT
	 And ACM not active
MODE/STP	• NORM
Switch	 Allows SEAM seeker mode
	BRSIT
	Forces Boresight seeker modeOverridden if ACM active
• CAGE/SEAM	Uncages Seeker
Button	Starts 4.5 second double-D searchIf no IR source found cages again
	Slaves Seeker
	If radar STT locked

7.6 AIM-9 SIDEWINDER - SILENT


1.	Pilot Conditions	MASTER ARM	ON
		• HUD	A/A
		• SW COOL	ON
		• MODE/STP	As Desired
		WEAPON SELECTOR	SW
2.	Employment	(a) CAGE/SEAM	Uncage Seeker
		(b) IR-Lock	Good Tone
		(c) Trigger	FIRE

7.7 AIM-9 SIDEWINDER - RADAR

1.	Pilot Conditions	• MASTER ARM ON
		• HUD
		• SW COOLON
		• MODE/STP NORM
		WEAPON SELECTORSW
2.	Employment	(a) Radar STT
		(b) CAGE/SEAM Slave Seeker
		(c) IR-LOCKGood Tone
		(d) Steering center T-shaped cue with ASE
		(e) TriggerFIRE

7.8 AIM-7 SPARROW - OVERVIEW

Missile	MOL DDED
Missile Preparation	MSL PREP
rieparation	 AIM-7 must be tuned to AWG-9
	- Either press MSL PREP button
	- Or activation of ACM
 Launch Modes 	Normal
	Standard operation, STT target designated before launchAIM-7 uses SARH all the way to target
	WCS can use CS or PD for guidance set with MSL OPTIONS Switch
	Boresight
	 Uses CS flood antenna of AWG-9
	 Missile will track strongest return in Flood area
	 Automatically activated if STT broken
	 Selected if MODE/STP set to BRSIT
	 Or if no STT available
	- Shown Below
MSL SPD GATE	NOSE QTR
Switch	 Standard setting in DCS
	All Others
	All Others
	Not simulated
MSL OPTIONS	7 0
• MSL OPTIONS Switch	Not simulated
	 Not simulated NORM WCS uses dedicated CW antenna for
	 Not simulated NORM WCS uses dedicated CW antenna for AIM-7 guidance
	 NORM WCS uses dedicated CW antenna for AIM-7 guidance SP PD WCS uses PD from main flood antenna
Switch	 NORM WCS uses dedicated CW antenna for AIM-7 guidance SP PD WCS uses PD from main flood antenna for AIM-7F/M guidance NORM
Switch • MODE/STP	 NORM WCS uses dedicated CW antenna for AIM-7 guidance SP PD WCS uses PD from main flood antenna for AIM-7F/M guidance NORM Sets normal launch mode logic
Switch • MODE/STP	 NORM WCS uses dedicated CW antenna for AIM-7 guidance SP PD WCS uses PD from main flood antenna for AIM-7F/M guidance NORM

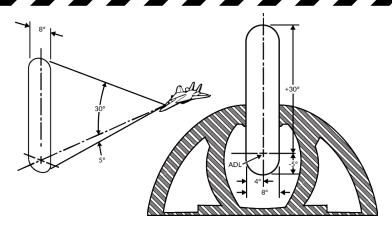

AIM-7 SPARROW - STT 7.9

1. Pilot Conditions	 MASTER ARM ON HUD A/A MSL PREP ON MODE/STP NORM WEAPON SELECTOR SP
2. RIO Conditions	MSL SPD GATE NOSE QTR MSL OPTIONS As Desired
3. Employment	(a) RadarSTT (b) Steering
	Target < 20 deg from ADLASE center T-shaped cue within
	(c) Trigger
	(d) Radar Maintain Lock (until impact)

7.10 AIM-54 PHOENIX - OVERVIEW

Missile	Weapon Cooling
Preparation	 AIM-54 requires liquid cooling
	 RIO enabled LIQUID COOLING switch
	MSL PREP
	 AIM-54 must be tuned to AWG-9
	 Either press MSL PREP button
	Or activation of ACM
Launch Modes	PDSTT SARH
	 AIM-54 uses SARH all the way to targe Faster update rate than TWS Slightly increased effective range as compared to a TWS launch
	• TWS SARH/ARH
	 Allows 6 AIM-54 launches at 6 targets Missile is initially SARH guided When within AIM-54 seeker range AWG 9 sends activation command Not Fire and Forget: Requires automatic activation command
	ACM Active
	 Activated when BRSIT selected Or when ACM active with no radar track Missile commanded active before launch
MSL SPD GATE	NOSE QTR
Switch	 Standard setting in DCS
	All Others
	Not simulated
MSL OPTIONS	• NORM
Switch	 Normal guidance (SARH or SARH/ARH)
	• PH ACT

tion command on launch

Reverts to SARH if no target detectedMust be selected before launch

- WCS immediately sends AIM-54 activa-

A/A WEAPONS	F=14A/B REV: 20210902
• TGTS Switch	 SMALL – 6nm activation range NORM – 10nm activation range LARGE – 13nm activation range
Missile NextLaunch Button	 Selects Hooked Track as Next Target for AIM-54 TWS Engagement
MODE/STP Switch	• NORM
Switch	 Normal operation
	BRSIT
	 Commanded active before launch Missile follows ADL and locks strongest return
TWS Symbology	Refer to TID Symbology Section • Pre-Launch
	 Prioritization numbers assigned to tracks automatically or manually Blinking indicates optimal launch parameters
	Post-Launch
	 Target prioritization number replaced with TTI
	 Other prioritization numbers collapsed by one
	 Tracks under missile attack brightened
	 TTI blinks when missile active

• Normal Operation – 3-4 seconds

• When in ACM - 1 second

Launch To Eject

(LTE) Time

7.11 AIM-54 PHOENIX - PD-STT

1.	Pilot Conditions	MASTER ARM ON HUD A/A MSL PREP ON MODE/STP NORM WEAPON SELECTOR PH
2.	RIO Conditions	 LIQUID COOLING
3.	Employment	(a) Radar STT (b) Steering
		Target < 20 deg from ADLASE center T-shaped cue within
		(c) TriggerPress and Hold (until weapon release)
		(d) Radar Maintain Lock (until impact)

7.12 AIM-54 PHOENIX - TWS / MULTI

1. Pilot Conditions	MASTER ARMON
	• HUDA/A
	• MSL PREPON
	• MODE/STPNORM
	WEAPON SELECTORPH
2. RIO Conditions	• LIQUID COOLING ON (FWD)
	MSL SPD GATE NOSE QTR
	MSL OPTIONS As Desired
	TGTS Switch As Desired
	WCS Mode TWS MAN/AUTO
4. Employment	(a) Radar TWS
	(b) TriggerPress and Hold
	(until weapon release)
	(c) Repeat for remaining targets
	(d) Radar Maintain Track
	(until active)

