
# **Pocket Checklist**

# F-14A/B AIRCRAFT

**REV: 20211026** 

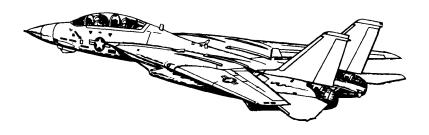

**Procedures** 

Systems

AWG-9 Radar

TCS LANTIRN

A/G Weapons

A/A Weapons



#### **Contents**

1	PROCEDURES	1
	1.1 PILOT - PRE-START	
	1.2 PILOT - ENGINE START	2
	1.3 PILOT - POST-START	3
	1.4 RIO - PRE-START	5
	1.5 RIO - POST-START - SHORE	5
	1.6 RIO - POST-START - CARRIER	7
	1.7 PRE-TAXI	9
	1.8 TAKEOFF - SHORE	9
	1.9 TAKEOFF - CARRIER	10
	1.10 LANDING - OVERHEAD PATTERN	11
	1.11 LANDING - CHECKLIST	12
	1.12 AERIAL REFUELING	13
	1.13 AIRSTART	14
2	SYSTEMS	15
_		_
	2.1 AFCS - SAS	
	2.3 APC / AUTOTHROTTLE	
	2.4 ACLS	
	2.5 WING-SWEEP	
	2.6 NAVIGATION	
	2.7 COMMS - OVERVIEW	
	2.8 COMMS - ARC-159 UHF 1	
	2.9 COMMS - ARC-182 V/UHF 2	
	2.10 COMMS - KY-28 VOICE SECURITY EQUIPMENT	
	2.11 LINK 4 DATALINK - OVERVIEW	
	2.12 LINK 4 DATALINK - CONTROL PANEL	
	2.13 LINK 4 DATALINK - REPLY/ANTENNA PANEL	
	2.14 ALR-67 RWR - CONTROLS / OVERVIEW	
	2.15 ALR-67 RWR - THREAT SYMBOLOGY	
	2.16 ALE-39 COUNTERMEASURES DISPENSER	
	2.17 ALQ-100 / ALQ-126 DECM	31

3	AWG-9 RADAR	33
	3.1 MAIN MODES - OVERVIEW	
	3.2 MAIN MODES	
	3.3 PULSE MODE - PULSE SEARCH	
	3.4 PULSE MODE - PSTT	
	3.5 PULSE DOPPLER MODE - PULSE DOPPLER SEARCH	
	3.6 PULSE DOPPLER MODE - RWS	
	3.8 PULSE DOPPLER MODE - TWS	
	3.9 PULSE DOPPLER MODE - TWS AUTO	
	3.10 PULSE DOPPLER MODE - PDSTT	
	3.11 ACM MODES - OVERVIEW	
	3.12 APX-76 IFF	
	3.13 TID SYMBOLOGY	
	3.13 11D 31MbOLOG1	4/
4	TCS	53
	4.1 OVERVIEW	53
5	LANTIRN	55
	5.1 OVERVIEW	55
	5.2 OVERVIEW - STARTUP	55
	5.3 OVERVIEW - POINTING MODES	56
	5.4 OVERVIEW - LASING/DESIGNATION	57
	5.5 CONTROLS - PANEL	57
	5.6 CONTROLS - STICK	58
	5.7 DISPLAY	59
6	A/G WEAPONS	61
J	6.1 A/G WEAPON SETTINGS - OVERVIEW	
	6.2 SELECTIVE ORNANCE JETTISON	
	6.3 M61 GUN	
	6.4 FFAR / ZUNI ROCKETS	
	6.5 UNGUIDED BOMB - CCIP	
	6.6 UNGUIDED BOMB - CCRP	
	6.7 LASER GUIDED BOMB	
	6.8 TALD DECOYS	

7	A/A	WEAPONS	<b>67</b>
	<b>7</b> .1	M61 GUN - OVERVIEW	67
	7.2	M61 GUN - MANUAL	67
	7.3	M61 GUN - RTGS / NO RADAR	68
	7.4	M61 GUN - RTGS / RADAR	68
	7.5	AIM-9 SIDEWINDER - OVERVIEW	69
	7.6	AIM-9 SIDEWINDER - SILENT	70
	7.7	AIM-9 SIDEWINDER - RADAR	70
	7.8	AIM-7 SPARROW - OVERVIEW	71
	7.9	AIM-7 SPARROW - STT	72
	<i>7</i> .10	AIM-54 PHOENIX - OVERVIEW	73
	<i>7</i> .11	AIM-54 PHOENIX - PD-STT	75
	7.12	AIM-54 PHOFNIX - TWS / MUITI	75



### **PROCEDURES**

### 1.1 PILOT - PRE-START

1.	Parking Break	ENGAGED
2.	<b>Ground Power</b>	connected
3.	Compressed Air	connected
4.	ICS	HOT MIC
5.	TO RIO	"Begin Start-Up"
6.	ICS	Comm Check
7.	MASTER TEST Selector	(a) LTS  • Warning Lights
		• RPM
8.	Ejection Seat	Armed
9.	RIO	Canopy Closed
10.	Oxygen	ON (FWD)
11	Emergency Wing Sweep	OVERSWEEP

### PILOT - ENGINE START

1.	AIR SOURCE	OFF
2.	Hydraulics	(a) HYD TRANSFER PUMP SHUTOFF (b) Emerg. Hyd AUTO (LOW)
3.	L&R MASTER GEN	NORM
4.	RIO	"Ready to Start"
5.	Right Engine Start-Up	(a) Engine Crank       R         (b) R Eng N2       20%         (c) R Throttle       IDLE         (d) TIT       < 890 C during start
6.	Stabilized Parameters	• RPM
7.	Left Engine Start-Up	(a) Engine Crank       L         (b) L Eng N2       20%         (c) L Throttle       IDLE         (d) TIT       < 890 C during start
8.	Stabilized Parameters	• RPM
9.	HYD TRANSFER PUMP	NORM
10.	HYD PRESSURE	3000 psi
11.	AIR SOURCE	BOTH ENG
12.	Ground Power	disconnected

F-14A/B REV: 20211026

#### Compressed Air | disconnected 13.

#### 1.3 PILOT - POST-START

1.	TO RIO	"Both Engines Running"
2.	Displays Control Panel	• VDI
3.	RIO	<ul> <li>Select Align Quality</li> <li>INS GO NOW: shortest but least precise alignment</li> <li>INS GO COARSE: does not meet Launch Criteria for AIM-7 / AIM-54</li> <li>INS GO MIN WPN LAUNCH: allows AIM-7 / AIM-54 launch</li> <li>INS GO FINE fine align (8 min)</li> </ul>
4.	ACM Panel	GUN RATE
5.	Gun Rounds	Set
6.	ANTI-SKID SPOILER BK	OFF
7.	Emergency Wing Sweep	(a) <b>Handle</b>
8.	AFCS Panel - SAS STAB AUG	• PITCH ON • ROLL ON • YAW ON
9.	WING/EXT TRANS	AUTO
10.	UHF 1 Function Selector	ВОТН
11.	TACAN Function Selector	T/R

12.	ARA-63 ICLS RECEIVER	ON
13.	Radar Altime- ter	(a) <b>Control Knob</b> one click CW to turn on (b) <b>Display</b>
14.	Standby ADI	erect at least 2 min before T/O
15.	KY-28 Crypt. Key	Set (refer to GROUND SETTINGS kb)
16.	RIO	set D/L frequency
1 <i>7</i> .	Lights	As desired

_	Oxygen	ON (FWD)
2.	PILOT	Ground Power connected     Compressed Air connected
3.	ICS	Comm Check
4.	Lights	As required
5.	LTS Test	Coordinate with Pilot
6.	Ejection Seats	ARMED
7.	Canopy	CLOSED
8.	TO PILOT	"Ready to Start"
	INIC CTARTUR	• Engines
.5	RIO - POST-STAR	T - SHORE
2.	INS STARTUP	(a) LIQUID COOLING ON (FWD) (b) WCS Switch STANDBY
		(c) IR/TV Power STBY/IR/TV (d) TID/DDDilluminated after 40 s
3.	Kneeboard	Retrieve Coordinates, Elevation, Magnetic Variation from GROUND SETTINGS Page
WA	RNING Input Coord	ds BEFORE selecting GND ALIGN if using ASH
4.	Start INS Align	(a) Nav Mode GND ALIGN
		Category NAV     MESSAGE OWN AC
		(c) <b>Keyboard</b>
		<ul> <li>CLEAR, LAT, latitude, ENTER</li> <li>LONG, longitude, ENTER</li> <li>ALT, altitude, ENTER</li> </ul>
		(d) CAP MESSAGE MAG HDG VAR (e) Keyboard HDG, mag var, ENTER

6.	Datalink	(a) Kneeboard       TACTICAL DL         (b) DL Power       ON (FWD)         (c) DL Mode       TAC (AFT)         (d) DL Freq.       Set
7.	TACAN	T/R
8.	RWR Panel	(a) Display Type         NORM           (b) PWR         ON           (c) TEST         SPL           (d) MODE         LMT
9.	DECM	STBY, then ACT
10.	IFF	(a) MASTER         STBY           (b) CODE         as required
11.	Altimeter	Reset
12.	CAP	Enter Data (WP, FP, etc.)
13.	Displays	• DDD
14.	Hand Control Panel	Set
15.	AN/ALE-39	Set (as required) • AUTO (CHAFF)/MAN • MAN
16.	Flare Mode	PILOT
1 <i>7</i> .	Complete INS Align	• Duration Full Fine
		(a) Align CompleteCaret → Diamond (b) NAV ModeINS NAV
18.	Standby ADI	Erect at least 2 min before T/O
19.	TO PILOT	"Ready to Taxi"
Onc	e Airborne	
20.	IR/TV Power	ON
21.	WCS Switch	WCS XMT

# 1.6 RIO - POST-START - CARRIER

1.	PILOT	• Enginesstarted • AIR SOURCEBOTH ENG
2.	INS STARTUP	(a) LIQUID COOLING       ON (FWD)         (b) WCS Switch       STANDBY         (c) IR/TV Power       STBY/IR/TV         (d) TID/DDD       illuminated after 40 s
3.	Datalink	(a) <b>Kneeboard</b>
4.	Start INS Align	(a) DL FREQ       Set         (b) DL Mode       CAINS/WAYPT         (c) Nav Mode       CVA
5.	U/VHF Mode	T/R G
6.	TACAN	T/R
7.	RWR Panel	(a) Display Type       NORM         (b) PWR       ON         (c) TEST       SPL         (d) MODE       LMT
8.	DECM	STBY, then ACT
9.	IFF	(a) <b>MASTER</b>
10.	Altimeter	Reset
11.	CAP	Enter Data (WP, FP, etc.)
12.	Displays	• DDD
13.	Hand Control Panel	Set
14.	AN/ALE-39	Set (as required) • AUTO (CHAFF)/MAN • MAN
15.	Flare Mode	PILOT

16.	Complete INS Align	• Duration Full Fine
		(a) <b>Align Complete</b> Caret → Diamond (b) <b>NAV ModeINS NAV</b>
17.	Datalink	(a) <b>DL Mode</b>
18.	Standby ADI	Erect at least 2 min before T/O
19.	TO PILOT	"Ready to Taxi"
Onc	e Airborne	
20.	IR/TV Power	ON
21.	WCS Switch	WCS XMT

### 1.7 PRE-TAXI

1.	ANTI-SKID SPOILER BK	OFF
2.	HOOK BYPASS	As Required
3.	Nose Strut	RETRACTED
4.	HUD MODE	ТО
5.	Parking Brake	Released (IN)
6.	NWS	ENGAGED
7.	Path	verify clear


### 1.8 TAKEOFF - SHORE

After Lining Up On Runway		
1.	Wing Sweep	(a) EM WING SWEEP       FWD, then IN         (b) MASTER RESET       PRESS         (c) Wings       Verify thumb controller         (d) WING SWEEP       AUTO         (e) Wings       Verify at 20 deg
2.	ANTI SKID SPOILER BK	BOTH (UP)
3.	FLAPS	UP
4.	Trim	0 deg
5.	NWS	DISENGAGED
6.	Takeoff	(a) Throttle       MIL (90% RPM)         (b) Stick       Back at 130 KIAS         (c) Rotation       approx 140 KIAS         (d) GEAR       UP < 250 KIAS

### 1.9 TAKEOFF - CARRIER

	Lineup	Wait behind JBD until Catapult is clear     Follow Taxi Directors Instructions to line up
1.	Wing Sweep	on Catapult  (a) EM WING SWEEPFWD, then IN (b) MASTER RESETPRESS (c) WingsVerify thumb controller (d) WING SWEEPAUTO (e) WingsVerify at 20 deg
2.	FLAPS	DOWN
3.	Launch Bar Preparation	(a) Nose Strut
4.	Trim	2-3 deg nose up
5.	Speed Brakes	IN
6.	Final Checks	(a) Throttle
		(c) Eng. Inst Checked (d) Caution/Warnings None
7.	Catapult Shot	(a) Salute
	Clearing Turn	

#### 1.10 LANDING - OVERHEAD PATTERN

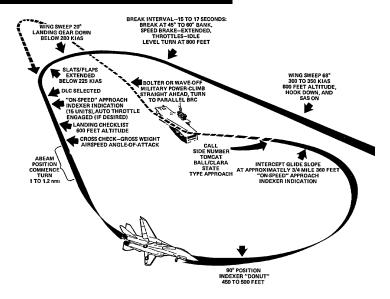

1. Initial Ap-	• WING SWEEP68 deg
proach	• HOOK DOWN
	• SAS ON
	• HUDLDG
	• Airspeed 300-350 KIAS
	• Altitude 800 ft
2. Initial Break	• Break Interval15-17 s
	• BANK 45-60 deg
	SPEED BRAKE EXTEND
	ThrottleIDLE
	• G 3-4 G
	• Altitude 800 ft
3. Break Turn	• Wing SweepAUTO < 280 KIAS
	• Landing Gear DOWN < 280 KIAS
	• FLAPS DOWN < 225 KIAS
4. Downwind	DLC Selected once flaps out
	• AOA ON-SPEED
	LANDING CHECKLIST
	Altitude descend to 600 ft

5.	Final Turn	180 Deg Position • Abeam Pos 90 Deg Position	1-1 <b>.2</b> nmi
		• AOA • Altitude	
6.	Intercept Glideslope	Distance     Altitude     Altonomeror     Altonomeror	3/4 Mile 360 ft

#### 1.11 LANDING - CHECKLIST

1.	Wing Sweep	20 deg AUTO
2.	Wheels	• Lights 3 DOWN • Transition Light OUT
3.	SAS	ON
4.	FLAPS	DOWN
5.	DLC	Checked
6.	Hook	HOOK DOWN     Transition Light OUT
7.	Harness	Locked
8.	Speedbrakes	EXT
9.	Brakes	Check
10.	Fuel	Check

F-14A/B REV: 20211026

1.12 AERIAL REFUELING

### 1.13 AIRSTART

• Spooldown	Before significant spooldown (a) Non-Running ENG . IDLE or above If no relight occurs (b) Non-Running ENG . OFF then IDLE If still no relight occurs (c) ENG MODE
Cross-Bleed Restart	With one ENG running, if Spooldown fails  (a) Non-Running ENG OFF  (b) FUEL SHUT OFF check  (c) Running throttle 80%+  (d) BACK UP IGNITION ON  (e) ENG CRANK non-running eng  (f) Non-Running ENG IDLE  If no start occurs  (g) Non-Running ENG .OFF then IDLE  If still no start  (h) ENG MODE SEC  (i) Non-Running ENG .OFF then IDLE
Windmill Restart	(a) Airspeed
Post Restart	(a) <b>BACK UP IGNITION</b> OFF (b) <b>ENG MODE</b> PRI

# SYSTEMS F-14A/B REV: 20211026

#### 2 SYSTEMS

### 2.1 AFCS - SAS

• SAS	<ul> <li>Stability Augmentation System</li> </ul>	
	<ul> <li>Not Fly-by-Wire</li> <li>Automatic control surface commands generated by analog computer to im prove stability</li> </ul>	
• Controls	<ul> <li>Three individual Switches</li> </ul>	
	- Pitch	
	– Roll	
	– Yaw	
Autopilot Emer-	<ul> <li>Paddle on Stick</li> </ul>	
gency Disen-	<ul> <li>Disengages Autopilot Modes</li> </ul>	
gage Paddle	<ul> <li>Deactivates Pitch, Roll SAS Channels</li> </ul>	

#### 2.2 AFCS - AUTOPILOT

<ul> <li>Attitude Hold</li> </ul>	Basic Attitude Hold
	<ul> <li>Maintains existing pitch &amp; roll</li> <li>Attitude can be changed with stick input</li> <li>If engaged outside limits will automatically move within range</li> </ul>
	• Limits
	<ul><li>Pitch: 30 deg</li><li>Roll: 60 deg</li></ul>
	• Engagement
	(a) SAS Switches

Altitude Hold	<ul> <li>Barometric Altitude Hold <ul> <li>Maintains current barometric altitude</li> </ul> </li> <li>Limits <ul> <li>Vertical velocity: &lt; 100 ft/s</li> </ul> </li> <li>Engagement <ul> <li>(a) SAS Switches</li> <li>(b) Autopilot Switch . ENGAGE (FWD)</li> <li>(c) Alt. Hold Mode</li> <li>(d) A/P REF Light Wait until appears</li> <li>(e) NWS Button Press</li> </ul> </li> </ul>
Heading Hold	<ul> <li>Magnetic Heading Hold         <ul> <li>Maintains current magneatic heading</li> </ul> </li> <li>Limits         <ul> <li>Bank angle &lt; 5 deg</li> </ul> </li> <li>Engagement         <ul> <li>(a) SAS Switches</li></ul></li></ul>
Ground Track	Autopilot follows ground track     Similar to heading hold     Compensates for wind drift     Uses INS data instead of mag. bearing      Limits     Bank angle < 5 deg      Engagement     (a) SAS Switches
• VEC/PCD	<ul> <li>Vector / Precision Course Direction</li> <li>Allows Link 4 controller to remotely direct the aircraft</li> <li>Not Modelled in DCS</li> </ul>

# SYSTEMS F-14A/B REV: 20211026

• ACL	<ul> <li>Automatic Carrier Landing</li> </ul>
	<ul> <li>See relevant section</li> </ul>
Autopilot Emer-	Paddle on Stick
gency Disen- gage Paddle	<ul> <li>Disengages Autopilot Modes</li> </ul>
gage radale	<ul> <li>Deactivates Pitch, Roll SAS Chan- nels</li> </ul>

### 2.3 APC / AUTOTHROTTLE

• APC	Approach Power Compensator	
	<ul> <li>Automatic throttle control</li> </ul>	
	- Maintains ON SPEED AoA	
<ul> <li>Conditions</li> </ul>	Engagement is inhibited / APC is disengaged if conditions not met	
	• Throttles75%-90% RPM	
	Landing Gear HandleDown	
	Weight on WheelsNo	
• Engage	Throttle ModeAUTO (FWD)	
• Disengage	Cage/Seam Button	

#### **2.4** ACLS

#### 2.5 WING-SWEEP

• Overview	<ul> <li>In Flight Limited between 20 deg &amp; 68 deg</li> <li>On Ground can Oversweep to 75 deg</li> <li>Hydromechanically Controlled</li> </ul>
	<ul><li>Automatically through CADC</li><li>Manually with emergency wing-sweep handle</li></ul>
	<ul> <li>15 deg/s at 1g loading</li> <li>Mechanically linked to ensure symmetry</li> </ul>

STSIEMS	F-14A/B REV: 20211026
CADC Modes	• AUTO
	<ul> <li>CADC controls wing position as func- tion of current Mach via wing-sweep program</li> </ul>
	• MAN
	<ul> <li>Pilot manually chooses desired wing sweep angle with thumb controller</li> </ul>
	• BOMB
	<ul> <li>Sets wing sweep to 55 deg or further aft</li> </ul>
• Emergency	<ul> <li>Emergency Wing-Sweep Handle</li> </ul>
Mode	<ul> <li>Moved with wing sweep program by spider detent under normal operation</li> <li>Can be forced out of spider detent and moved manually</li> </ul>
• Oversweep	<ul> <li>Selected via Emergency Wing-Sweep Handle</li> </ul>
	(a) Em. Wing-Sweep
Return to CADC	After Emergency Mode / Oversweep
Control	(a) Em. Wing-Sweep Spider Detent

Indicated Mach	Max Forward Wing Position
0.4	20 deg
0.7	25 deg
0.8	50 deg
0.9	60 deg
1.0	68 deg

(a) Em. Wing-Sweep ...Spider Detent (Fwd on startup)
(b) MASTER RESET ......Press

2.6 NAVIGATION

# 2.7 COMMS - OVERVIEW

• ARC-159 UHF 1	<ul> <li>Air-to-Air &amp; Air-to-Surface Communication</li> <li>Pilot Controlled</li> <li>Frequency <ul> <li>Range - 225.000 - 399.975 MHz</li> <li>Steps - 25 kHz</li> <li>Channels - 20</li> </ul> </li> </ul>
• ARC-182 V/UHF 2	<ul> <li>Air-to-Air &amp; Air-to-Surface Communication</li> <li>RIO Controlled</li> <li>Frequency <ul> <li>Band 1 - 30 - 88 MHz</li> <li>Band 2 - 108 - 156 MHz</li> <li>Band 3 - 156 - 174 MHz</li> <li>Band 4 - 225 - 399.975 MHz</li> <li>Steps - 25 kHz</li> <li>Channels - 20</li> </ul> </li> </ul>
ARA-50 UHF ADF	<ul> <li>UHF Automatic Direction Finder</li> <li>LoS bearing to UHF Transmitter</li> <li>Bearing displayed on BDHI, Pilot HSD</li> <li>5 min Warmup</li> </ul>
KY-28 Voice Se- curity Equip- ment	<ul> <li>Voice Ciphering</li> <li>Integrated with UHF 1 and V/UHF 2</li> <li>2 min Warmup</li> </ul>

### 2.8 COMMS - ARC-159 UHF 1

• ARC-159 UHF 1	<ul> <li>Air-to-Air &amp; Air-to-Surface Communication</li> <li>Pilot Controlled</li> <li>Frequency</li> </ul>
	<ul> <li>Range - 225.000 - 399.975 MHz</li> <li>Steps - 25 kHz</li> <li>Channels - 20</li> </ul>
VOL Knob	Controls Pilot UHF 1 Audio Level

# SYSTEMS F-14A/B REV: 20211026

BRT/TEST Knob	<ul> <li>Controls Radio FREQ Display</li> <li>Turn past max to display 888.888</li> </ul>
SQL Switch	<ul> <li>Toggles radio squelch (noise attenua- tion)</li> </ul>
READ Switch	<ul> <li>Displays Frequency of Selected Pre- set Channel</li> </ul>
LOAD Button	<ul> <li>Saves Displayed Frequency to Se- lected Preset Channel</li> </ul>
TONE Button	<ul> <li>Steady 1.020 kHz Test Tone</li> </ul>
Mode Selector	<ul> <li>Frequency Selection Method</li> <li>GUARD - 243.000 MHz</li> <li>MANUAL - Manual tuning</li> <li>PRESET - Preset channels</li> </ul>
Function Selector	<ul> <li>Selects Transceivers to Energize</li> <li>ADF - Not simulated</li> <li>BOTH - Main &amp; Guard</li> <li>MAIN - Main</li> <li>OFF - Secures UHF 1 radio</li> </ul>
CHAN SEL	Selects from 20 preset Channels

#### 2.9 COMMS - ARC-182 V/UHF 2

• ARC-182 V/UHF 2	<ul> <li>Air-to-Air &amp; Air-to-Surface Communication</li> <li>RIO Controlled</li> <li>Frequency</li> </ul>
	<b>– Band 1</b> – 30 - 88 MHz
	<b>– Band 2</b> – 108 - 156 MHz
	<b>– Band 3</b> – 156 - 174 MHz
	<b>– Band 4</b> – 225 - 399.975 MHz
	<b>– Steps</b> – 25 kHz
	- Channels - 20
• VOL Knob	<ul> <li>Controls RIO UHF 2 Audio Level</li> </ul>
BRT/TEST Knob	<ul> <li>Controls Radio FREQ Display</li> </ul>
• SQL Switch	<ul> <li>Toggles radio squelch (noise attenua- tion)</li> </ul>

SYSTEMS	F-14A/B REV: 20211026
• Mode Selector	<ul> <li>Transceiver Settings</li> <li>OFF - Secures V/UHF radio unless frequency mode set to 243</li> <li>T/R - Energizes transmitter and main receiver</li> <li>T/R &amp; G - Energizes transmitter, main, and guard receiver</li> <li>DF - Automatic direction finding from 108 - 399.975 MHz</li> <li>TEST - BIT</li> </ul>
• CHAN SEL Outer Dial	<ul> <li>Selects Frequency Tuning Mode</li> <li>243 - Selects UHF Guard</li> <li>MAN - Manual Select frequency</li> <li>G - Tunes Tranceiver to guard frequecy in last selected band</li> <li>PRESET - Allows selection between 40 preset channels (31-40 are Have Quck and not simulated)</li> <li>READ - Displays frequency of selected preset channel</li> <li>LOAD - Saves displayed frequency to selected preset channel</li> </ul>
• CHAN SEL	Selects one of 40 Preset Channels

### 2.10 COMMS - KY-28 VOICE SECURITY EQUIPMENT

**Inner Dial** 

KY-28 Voice Se- curity Equip- ment	<ul><li> Voice Ciphering</li><li> Integrated with UHF 1 and V/UHF 2</li><li> 2 min Warmup</li></ul>
• ZEROIZE Switch	<ul><li>Lift Guard to Erase Preloaded Codes</li><li>Codes loaded via ground crew</li></ul>
• Power-Mode Switch	<ul> <li>Selects Mode</li> <li>P/OFF - Removes power from system</li> <li>C - Transmit / Receive in secure mode</li> <li>DELAY - Between PTT and trans.</li> </ul>

F-14A/E

REV: 20211026

Radio-Select
Switch

- Selects Radio Mode
  - RELAY Acts as relay for other stations (not simulated)
  - RAD-2 Secure voice for V/UHF 2
  - RAD-1 Secure voice for UHF 1

# 2.11 LINK 4 DATALINK - OVERVIEW

• Link 4	Modes - Mutually exclusive
	<ul><li>Link 4A - AWACS / Surface Ship</li><li>Link 4C - Fighter to Fighter</li></ul>
	<ul> <li>Data Speed – up to 5000 bit/s!</li> </ul>
• Link 4A	Network - AWACS / Surface Ship     Additionally used for ACLS
• Link 4C	Network - Fighter to Fighter
	<ul><li>Up to four F-14s</li><li>Unique to F-14</li></ul>
Basic Opera-	(a) Power Switch As Desired
tion	• Link 4AON • Link 4CAUX
	(b) Mode Switch

# 2.12 LINK 4 DATALINK - CONTROL PANEL

• Test Switch	<ul> <li>Controls Test / Anti-Jam Modes</li> </ul>
	<b>– TEST</b> – Initiates BIT
	<ul> <li>NORM - Normal Operation</li> </ul>
	<ul><li>A-J – Anti-Jam (not simulated)</li></ul>
• Frequency	<ul> <li>Selects Datalink Frequency</li> </ul>
Thumbwheels	– First Digit – Fixed as 3
	<ul> <li>Allowable Range – 300.0 - 324.9</li> <li>MHz</li> </ul>
<ul> <li>Power Switch</li> </ul>	<ul> <li>Controls System Power</li> </ul>
	<ul><li>ON – Enables Link 4A</li></ul>
	<ul> <li>OFF - Disables system</li> </ul>
	<ul> <li>AUX - Enables Link 4C</li> </ul>

SYSTEMS F-14A/B REV: 20211026

### 2.13 LINK 4 DATALINK - REPLY/ANTENNA PANEL

• ANTENNA Switch	<ul> <li>Selects Antenna</li> <li>Shared with UHF 1 - Mutually exclusive</li> <li>UHF 1 LWR / DL UPR</li> <li>UHF 1 UPR / DL LWR</li> </ul>
• REPLY Switch	<ul> <li>Sets Reply Mode</li> <li>NORM - Own Aircraft replies to datalink messages</li> <li>CANC - Receive only</li> </ul>
MODE Switch	<ul> <li>Controls Overall Mode</li> <li>TAC - Normal airborne mode</li> <li>CAINS/WAYPT - Enables CV align</li> </ul>
• Address Thumbwheels	<ul> <li>Sets Two Least Significant Bits of Air- craft D/L Address</li> </ul>

### 2.14 ALR-67 RWR - CONTROLS / OVERVIEW

• PWR Switch	Set to ON to Operate
• VOL Knob	Sets RIO Audio Level
TEST Switch	<ul> <li>Springloaded to Center</li> <li>BIT – Initiates Build In Test</li> <li>SPL – Holds BIT status page while held</li> </ul>
MODE Switch	<ul> <li>Springloaded to Center</li> <li>OFST - Separates overlapping symbols</li> <li>LMT - Displays 6 highest threats</li> </ul>
• DISPLAY TYPE Selector	<ul> <li>Changes Priority of Display</li> <li>NORM - Normal threat symbology</li> <li>AI - Airborne Interceptor prioritized</li> <li>AAA - Anti-aircraft artillery prioritized</li> <li>UNK - Unknown prioritized</li> <li>FRIEND - Friendly threats prioritized</li> </ul>
	<ul> <li>Indicated by Letter in Display Center</li> </ul>
• Display	<ul> <li>Outer Band</li> <li>Critical Band</li> <li>Imminent threat to own aircraft</li> <li>Blinking indicates engaging own aircraft</li> </ul>
	Middle Band
	<ul> <li>Lethal Band</li> <li>Potentially threatening emitters</li> <li>Not actively engaging own aircraft</li> </ul>
	• Inner Band
	<ul> <li>Non-Lethal Band</li> <li>Not currently within capability of emitter</li> </ul>
	• Inner Circle
	<ul> <li>N, I, A, U, F - Prioritization type</li> <li>O - Offset</li> <li>L - Limit</li> <li>B - BIT Failure</li> <li>T - Thermal overload</li> </ul>

### **SYSTEMS**

### F-14A/B REV: 20211026

Alert Tones

- Short Tone New emitter / emitter moved
- Slow Warbling Threat in critical band
- Fast Warbling Threat actively engaging own aircraft
- **4-Tone Sequence** New threat capable of silently engaging own aircraft

# 2.15 ALR-67 RWR - THREAT SYMBOLOGY

	SHIPS	
AB	Arleigh Burke	
AK	Admiral Kuznetsov	
GR	Grisha 5 (Albatros)	
HP	Oliver Hazard Perry	
J2	Type 054A Frigate, "Jiangkai II class"	
KK	Krivak 3 (Rezky)	
KV	Kirov (Pyotr Velikiy)	
L1	Type 052B Destroyer, "Luyang I class"	
L2	Type 052C Destroyer, "Luyang II class"	
N	Ship with Nav Radar	
NE	Neustrashimy	
NZ	Nimitz (Vinson, Stennis)	
SV	Slava (Moscow)	
TC	Ticonderoga	
TT	Tarantul 3 (Molniya)	
TW	Tarawa	
YU	Type 071 Amphibi- ous Transport Dock, "Yuzhao class"	
AIRCRAFT		
14	F-14A/B	
15	F-15C/E	
16	F-16C	
1 <i>7</i>	JF-17	
18	F/A-18C	
19	MiG-19	

21	MiG-21bis
23	MiG-23MLD
24	Su-24M/MR
25	MiG-25PD
29	MiG-29A/G/S Su-27 Su-33 J-11A
30	Su-30
31	MiG-31
34	Su-34
37	AJS-37
39	Su-25TM
50	A-50
52	B-52
AN	AN-26B AN-30M
AP	AH-64D
В1	B-1B
BE	Tu-95 Tu-142M
BF	Tu-22M3
BJ	Tu-160
<b>E2</b>	E-2D
<b>E3</b>	E-3C
F4	F-4E
F5	F-5E
НХ	Ka-27
IL	IL-76MD IL-78M
КС	KC-135

SYSTEMS F-14A/B REV: 20211026

KJ	KJ-2000	
M2	Mirage 2000-C Mirage 2000-5	
53	S-3B	
	1	
SH	SH-60B	
ТО	Tornado	
TR	C-130 C-17A	
AIR DEFENSE		
2	S-75 TR SNR (SA-2) "Fan Song"	
3	S-125 TR SNR-125 (SA- 3) "Low Blow"	
6	Kub SA-6	
7	HQ-7 TR	
8	OSA (SA-8)	
10	S-300PS 30N6 TR (SA- 10)	
11	Buk (SA-11)	
12	S-300V	
15	Tor 9A331 (SA-15)	
19	Tunguska 2C6M (SA-19)	
A	Gepard M-163 Vulcan ZSU-23-4 Shilka	
ВВ	S-300PS 64H6E SR (SA- 10/Big Bird)	
BF	Rapier Blindfire TR	
CS	S-300PS 5N66M SR (SA-10/Clam Shell)	
DE	Sborka (Dog Ear)	
FF	S-125 P-19 SR (SA-3/Flat	

Face)

GR

**Roland SR** 

HA	Hawk SR	
НК	Hawk TR	
HQ	HQ-7 SR	
PT	Patriot	
RO	Roland	
RP	Rapier SR	
S	1L13 55G6 EWR	
SD	Buk TR (SA-11/Snow Drift)	
SN	PRW-11 (Side Net)	
	MISSILES	
M	AIM-54 AIM-120 MICA-EM R-37 R-77 SD-10	
ATC		
	Airport ATC Radar	

- 2.16 ALE-39 COUNTERMEASURES DISPENSER
- 2.17 ALQ-100 / ALQ-126 DECM

### 3 AWG-9 RADAR


### 3.1 MAIN MODES - OVERVIEW

	Pulse		Pulse Doppler			
	Pulse Search	P-STT	PD Search	RWS	TWS	PD-STT
Range	60 nm	50 nm	110 nm	90 nm	90 nm	90 nm
AIM-7	BRSIT	CW	BRS	SIT	-	PD
AIM-54	BRSIT	ACT	BRS	SIT	Multi TGT	PD/ACT

### 3.2 MAIN MODES

• Pulse	<ul> <li>Basic Pulse w/o doppler filtering</li> <li>Cannot be notched</li> <li>Ground Clutter</li> <li>Rudimentary Ground mapping</li> </ul>	
	Pulse Sub-Modes	
	<ul><li>Pulse Search</li><li>Pulse-STT</li></ul>	
<ul> <li>Pulse Doppler</li> </ul>	<ul> <li>Doppler filter -&gt; no ground returns</li> </ul>	
	<ul> <li>Susceptible to notching</li> <li>No ground clutter</li> <li>Greater range</li> <li>Advanced sub modes</li> <li>AIM-54 Guidance</li> </ul>	
	<ul> <li>Pulse Doppler Sub-Modes</li> </ul>	
	<ul><li>PD Search</li><li>RWS</li><li>TWS</li><li>PD-STT</li></ul>	


#### 3.3 PULSE MODE - PULSE SEARCH

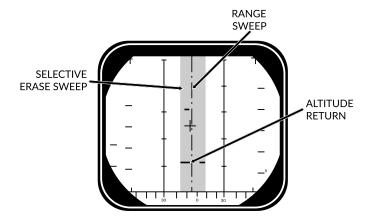

SEARCH (±10° SCAN)

Pulse Searce	<ul> <li>Basic Mode - AWG-9 does not use pulse doppler filtering</li> <li>Advantages</li> </ul>
	<ul> <li>All aspect target detection</li> <li>Cannot be notched</li> <li>Rudimentary ground mapping</li> </ul>
	Disadvantages
	<ul> <li>Cannot discern ground returns and targets</li> <li>Lower range</li> </ul>
• DDD	<ul> <li>Range/Azimuth</li> <li>Visual representation of radar and erase sweeps</li> </ul>
• TID	<ul> <li>No Information from Pulse</li> <li>Cannot guide AIM-54</li> </ul>

#### 3.4 PULSE MODE - PSTT

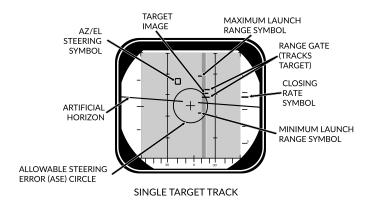


Lock Target w/o doppler filtering  • Advantages
<ul> <li>Cannot be notched</li> </ul>
Disadvantages
<ul> <li>Susceptible to ground clutter</li> </ul>
• Conditions
<ul><li>Pulse Search Mode selected</li><li>RDR HCU Mode selected</li></ul>
• Lock Target
<ul><li>(a) Hold HCU Half-action</li><li>(b) Slew to desired Target</li><li>(c) HCU Full-Action to lock</li></ul>
Unlock Target
(d) HCU Half-action
Track Indications
<ul> <li>ANT TRK light</li> <li>RDROT light</li> <li>Tracking gates</li> <li>Closure rate</li> </ul>

- Attack Symbology

**— 35 —** 


#### 3.5 PULSE DOPPLER MODE - PULSE DOPPLER SEARCH

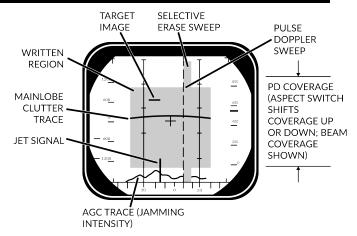

SEARCH (±40° SCAN)

<ul> <li>Pulse Doppler Search</li> </ul>	<ul><li>"Early Warning" Mode - Longest Range, cannot display range</li><li>Advantages</li></ul>
	<ul><li>Longest Range</li><li>Doppler Filtering</li><li>"Look Down Shoot Down"</li></ul>
	<ul> <li>Disadvantages</li> </ul>
	<ul><li>Can be notched</li><li>No range information</li></ul>
• DDD	<ul> <li>Closure Rate/Azimuth</li> <li>Visual representation of radar and erase sweeps</li> </ul>
Doppler Filters	Main Lobe Clutter (MLC) Filter
	<ul> <li>Own GS +/- 133 knots</li> <li>Removes main ground return</li> <li>Source of notching</li> </ul>
	• Zero Doppler Filter
	<ul> <li>Negative own GS +/- 100 knots</li> <li>Removes Radar reflection from ground directly beneath own AC</li> </ul>

MLC Switch	<ul> <li>IN: Enables MLC filter</li> <li>AUTO: Enables MLC filter if look-up angle less than 3 deg</li> <li>OUT: Disables MLC filter</li> </ul>
• Vc Switch	Changes closure rate DDD scale • X-4: -800 to 4000 knots • NORM: -200 to 1000 knots • VID: -50 to 250 knots
ASPECT Switch	<ul> <li>Changes closure rate processing scale</li> <li>NOSE: -600 to 1800 knots</li> <li>BEAM: -1200 to 1200 knots</li> <li>TAIL: -1800 to 600 knots</li> </ul>

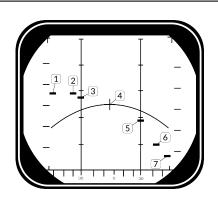

Look Angle	Line of Sight Rate	Target Heading
1   60 deg	1490	180 deg
<b>2</b>   <b>4</b> 5 deg	1500	120 deg
<b>3</b>   30 deg	1428	100 deg
<b>4</b>   0 deg	1200	90 deg
<b>5</b>   30 deg	672	80 deg
<b>6</b>   45 deg	210	60 deg
<b>7</b>   60 deg	-300	0 deg

### 3.6 PULSE DOPPLER MODE - RWS

	<ul><li>Pulse Doppler with ranging</li><li>TID shows momentary tracks with</li></ul>
	ranges
	<ul> <li>Processing reduces max range</li> </ul>
	<ul> <li>Advantages</li> </ul>
	- Long Range
	- Doppler Filtering
	- "Look Down Shoot Down"
	- Signal Processing
	<ul> <li>Disadvantages</li> </ul>
	– Can be notched
• DDD	<ul> <li>Closure Rate/Azimuth</li> </ul>
	<ul> <li>Visual representation of radar and erase sweeps</li> </ul>
• TID	Momentary Tracks
	<ul> <li>Max concurrent tracks: 48</li> </ul>
	<ul> <li>Cannot lock targets from TID</li> </ul>
<ul> <li>Filtering</li> </ul>	Same as Pulse Doppler Search

### 3.7 PULSE DOPPLER MODE - TWS

Track While     Scan	Builds Track Files, high situational awareness, multi-target AIM-54 launch  • Track Files
	<ul> <li>AWG-9 builds Trackfiles for contacts</li> <li>Can launch multiple AIM-54</li> <li>Processing reduces max range</li> <li>Can lock targets from TID</li> </ul>
	• FM Ranging
	<ul> <li>Pulse Doppler with ranging</li> <li>TID shows momentary tracks with ranges</li> <li>Processing reduces max range</li> </ul>
	Advantages
	<ul><li>Doppler Filtering</li><li>Multi-Target AIM-54</li></ul>
	<ul> <li>Disadvantages</li> </ul>
	<ul><li>Lowest Range</li><li>Can be notched</li></ul>
• DDD	<ul> <li>Closure Rate/Azimuth</li> <li>Visual representation of radar and erase sweeps</li> </ul>
• TID	<ul> <li>Tracksfiles</li> <li>Max concurrent tracks: 24</li> <li>Max displayed tracks: 18</li> </ul>
• Filtering	Same as Pulse Doppler Search
Scan Volume	Trackfiles require update every 2.5 s -> • 20 deg 4 bar (if selected) • 40 deg 2 bar (else)
• TID Mode Selector	<ul> <li>GND STAB: Ground Stabilized, True North is up on TID</li> <li>A/C STAB: Aircraft Stabilized</li> <li>ATTAK: same as A/C STAB with superimposed attack steering symbology</li> <li>TV: Displays TCS on TID, dispays LANTIRN on TID if equipped</li> </ul>

**– 39 –** 

•	TID Displo
	Selector
	Buttons

- RID DISABLE: Not simulated
- ALT NUM: Enables display of track altitudes on left side of track symbols
- SYM ELEM: Enables display of all supplementary symbology of tracks and waypoints
- DATA LINK: Enables display of D/L contacts
- JAM STROBE: Enables display of jam strobes
- NON-ATTK: enables/disables display of targets not possible to engage (friendlies)
- LAUNCH ZONE: Enables display of weapon launch zones
- VEL VECTOR: Enables display of velocity vectors

# • TRACK HOLD & CLSN Steering Buttons

#### TRACK HOLD

- Normally: Tracks maintained for 14 s after last observation
- Track Hold: maintained for 2 min after last observation

#### CLSN Button

- begins collision steering to currently tracked target
- enables Steering Centroid if in TWS
- LD CLSN presents azimuth steering only
- CLSN presents both azimuth and elevation steering

#### TWS AUTO / MAN

- TWS MAN: Manual azimuth/elevation control, target designation by RIO
- TWS AUTO: Automatic prioritization of targets and azimuth elevation control


### 3.8 PULSE DOPPLER MODE - TWS MAN

TWS MAN	<ul><li>Target Selection: Manual</li><li>Scan Azimuth/Elevation: Manual</li></ul>
<ul> <li>Target Selec-</li> </ul>	<ul> <li>Conditions</li> </ul>
tion	<ul><li>TWS MAN Radar Mode selected</li><li>TID CURSOR TID Mode selected</li></ul>
	<ul> <li>Hook Target</li> </ul>
	<ul><li>(a) Hold HCU Half-Action</li><li>(b) Slew TID Cursor over desired Tgt</li><li>(c) HCU Full-Action to select Tgt</li></ul>
	<ul> <li>TID Symbology</li> </ul>
	<ul> <li>Range (RA)</li> <li>Bearing (BR)</li> <li>Altitude (AL)</li> <li>Magnetic course (MC)</li> </ul>
	• Lock Target
	(d) Press PD STT or Pulse STT buttons
	<ul> <li>Deselect Target</li> </ul>
	(e) press HCU Half-Action
AIM-54 Launch	<ul><li>Automatically selects TWS AUTO</li><li>Prevents selection of TWS MAN</li></ul>

### 3.9 PULSE DOPPLER MODE - TWS AUTO

TWS AUTO	<ul> <li>Target Selection: prioritizes contacts based off range, aspect, closure</li> <li>Scan Azimuth/Elevation: Geometric center of targets in scan volume</li> </ul>
Centroid /     Steering Cues	Steering Centroid
Pilot Steering Cues	Conditions     A-A HUD Mode selected     Master Arm ON (UP)     AIM-54 or AIM-7 selected     TWS-AUTO selected

#### 3.10 PULSE DOPPLER MODE - PDSTT

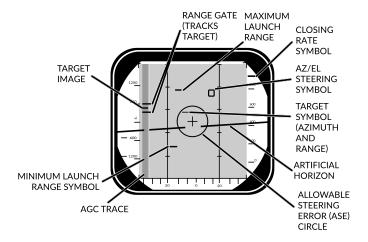

SINGLE TARGET TRACK

### Pulse Doppler STT

Lock Target with doppler filtering

- Advantages
  - Ground Clutter filtering
- Disadvantages
  - Susceptible to notching

### Lock Target

#### Conditions

- Pulse Doppler Mode selected (PD Search, RWS, TWS)
- RDR HCU Mode selected

#### Lock Target

- (a) Hold HCU Half-action
- (b) Slew to desired Target
- (c) HCU Full-Action to lock

#### Unlock Target

(d) HCU Half-action

• DDD

- Track Indications
  - ANT TRK light
    - RDROT light
    - Tracking gates
    - Closure rate
    - Attack Symbology

#### 3.11 ACM MODES - OVERVIEW

	PLM	VSL	PAL	MRL
Range	5 nm	5 nm	15 nm	5 nm
Description	Boresight	Vertical	Horizontal	RIO
Weapons	Gun + All Missiles			

**PLM**  Pilot Lockon Mode Highest Priority **ACM**  Search Pattern - Small Boresight - Range: 5 nm **VSL**  Vertical Scan Lockon HI Search Pattern - Width: 5 deg - Vertical: +15 to +55 deg - Range: 5 nm LO Search Pattern - Width: 5 dea - Vertical: -15 to +25 deg - Range: 5 nm RIO/PILOT Controlled PAL Pilot Automatic Lockon Search Pattern - Width: +/- 20 dea Vertical: 8-bar - Range: 15 nm

MRL

Manual Rapid Lockon

RIO Controlled

Search Pattern

- HCU Controlled

- Range: 5 nm

### 3.12 APX-76 IFF

### 3.13 TID SYMBOLOGY

GENERAL		
Center Dot	•	Basic Component of Symbols
		<ul> <li>Marks coordinates of symbol</li> </ul>
Own AC	igotimes	<ul> <li>Symbol representing own aircraft</li> </ul>
		<ul> <li>Ground Stabilized: Moves</li> <li>Aircraft Stabilized: Stationary</li> <li>Outside TID: line drawn from TID center towards symbol</li> </ul>
TID Cursor		Hook Cursor
		<ul> <li>Controlled by HCU in TID mode</li> </ul>
		<ul> <li>Half-Action</li> </ul>
		<ul> <li>Enables display of symbol</li> <li>Enables HCU stick to move cursor</li> </ul>
		<ul> <li>Full-Action</li> </ul>
		<ul><li>Hooks closest symbol</li><li>If no symbol near, cursor dropped at location</li></ul>
TWS Steering Centroid	X	<ul> <li>Steering centroid of TWS tracks</li> </ul>
		<ul> <li>Selected by WCS for weapons engagement</li> </ul>
ONBOARD SEN	ISORS	Symbol Above Dot
Unknown		<ul><li> Unknown Sensor Track</li><li> All Returns in RWS</li></ul>
Hostile		<ul> <li>Sensor Track designated Hostile by RIO</li> </ul>
Friend	•	<ul> <li>Sensor Track designated Friendly by RIO</li> </ul>

Angle-Tracked Radar Target	<b>-</b>	<ul> <li>Radar Angle Tracking</li> <li>Jamming Target</li> </ul>
Angle-Tracked Radar Target with Altitude Difference Ranging		<ul> <li>Radar Angle Tracking</li> <li>Jamming Target</li> <li>Alt. diff. ranging</li> </ul>
TCS-Angle Tracked Target	•>	TCS Angle Tracking
TCS-Angle Tracked Target with Alti- tude Difference Ranging		• TCS Angle Tracking  – Alt. diff. ranging
D/L TARGE	TS	Symbol Below Dot
Unknown		<ul> <li>D/L Track designated Un- known by Source</li> </ul>
Hostile	•	<ul> <li>D/L Track designated Hostile by Source</li> </ul>
Friendly		D/L Track designated     Friendly by Source
MANUAL REF P	OINTS	
Home base		<ul> <li>Waypoint Representing</li> <li>Home Base</li> <li>Carrier</li> <li>Airfield</li> </ul>
Waypoint	•	<ul> <li>Nav Waypoint</li> <li>Supplanted by Number</li> <li>1, 2, or 3</li> </ul>
Defended Point		Waypoint to Defend
Fixed Point		Generic Waypoint
Hostile Area		Waypoint Indicating Hos- tile Area
Surface Target		Waypoint Indicating Sur- face Target

#### AWG-9 RADAR F-14A/B **REV: 20211026** Initial Point - Waypoint for A/G engagement **D/L REF POINTS Home Base** D/L Waypoint Representing Home Base Waypoint D/L Generic Waypoint **Data Link Fixed** • D/L Waypoint Represent-**Point** ing Fixed Point **Surface Target** D/L Waypoint Representing a Surface Target **POS SYMB MODIFI Mandatory Attack** Additional Symbology on TWS Track Horizontal bar through center dot Selected by RIO - Only 1 target can be designated - Guaranteed WCS priority number **Data Link Destroy** Additional Symbology on D/L Track - Horizontal bar through center dot Selected by Source - No effect on WCS prioritization Do Not Attack Additional Symbology on TWS or D/L Track Vertical bar through center dot If Set by RIO - Removes WCS prioritization

Multiple Targets	Additional Symbology on TWS or D/L Track
<b>~</b>	<ul> <li>Horizontal bar on left side of symbol</li> </ul>
	<ul> <li>Indicates Multiple Targets</li> </ul>
Data Link Challenge	Additional Symbology on D/L Track
	<ul> <li>Small V with center at center dot</li> </ul>
	<ul> <li>Command to Visually Identify</li> </ul>
Track Extrapolated	<ul> <li>Additional Symbology on TWS or D/L Track</li> </ul>
	<ul> <li>Small X with center at center dot</li> </ul>
	<ul> <li>No Update within 8 seconds</li> </ul>
	<ul> <li>Track deleted after 14 seconds</li> </ul>
	<ul> <li>Or after 2 min if track hold</li> </ul>
Altitude Numerics	<ul> <li>Altitude to Nearest Ten Thousand</li> </ul>
	- example: 35000-45000
Firing Order Numerics	Indicates AIM-54 Prioritization
	<ul><li>Numbers 1-6</li><li>Only in TWS</li></ul>
Time-to-Impact	After AIM-54 Launch
(тті)	<ul> <li>Prioritization replaced with estimated TTI</li> </ul>
	<ul> <li>Flashes after Pitbull</li> </ul>

Velocity Vector		<ul> <li>Additional Symbology from center Dot</li> </ul>
		<ul><li>Direction represents track heading</li><li>Length represents speed</li></ul>
		Varies with Mode
		<ul> <li>Ground Stabilized: true heading and ground speed</li> <li>Aircraft Stabilized: relative heading and velocity</li> </ul>
Launch Zone Vectors		Additional Symbology for AIM-54     Selected manually by RIO     Or 60 seconds from max launch     TUMR     Time-Until-Minimum-Range     Max: 180 seconds, 1.5 inches      TUOR     Time-Until-Optimal-Range     Start of bar is 8 seconds from optimum      TUIR     Time-Until-In-Range
Jamming Strobe		Line from own AC towards     Jammer
Radar Antenna Scan Pattern Az- imuth Limits		<ul> <li>Limits of Current Scan Azimuth</li> <li>Single Line in STT</li> </ul>
Data Link Jam- ming Strobe	\	Line from D/L point to- wards Jammer

Data Link Pointer		<ul> <li>Additional Symbology on D/L Track</li> <li>Circle</li> <li>Indicates operator concern</li> </ul>
Data Link Priority Kill		<ul> <li>Additional Symbology on D/L Track</li> <li>Square</li> <li>Indicates target must be destroyed</li> <li>No effect on WCS prioritization</li> </ul>
ATTACK DISPLAY SYN	ABOLOGY	
Artificial Horizon		<ul> <li>Represents Pitch and Roll</li> </ul>
Steering Guidance Symbol		<ul> <li>Represents Steering Error</li> <li>Should be placed as near as possible to center of ASE circle</li> </ul>
Allowable Steer- ing Error Circle	$\overline{}$	<ul> <li>Indicates Allowable     Steering Error for Missile     Launch</li> <li>Size Varies with Geometry, Mode, Missile</li> </ul>
Breakaway Indi- cation	X	<ul> <li>Appears when Target         Range Less than Minimum         for Selected Weapon     </li> </ul>

### **5 LANTIRN**

### 5.1 OVERVIEW

• LANTIRN	Low Altitude Navigation and Targeting Infra-Red for Night
	<ul> <li>Only Targeting Pod – Nav pod was deleted</li> </ul>
	<ul> <li>Incomplete Integration – Own control panel, supplants TCS feed</li> </ul>
Master Modes	<ul> <li>A/G - Allows bomb release guidance</li> <li>A/A - Optimized for air targets</li> </ul>
• FOV Levels	• Wide
Overview	<b>– FOV</b> – 5.9 deg
	<b>- Slew</b> - 8.5 deg/s
	• Narrow
	<b>– FOV</b> – 1.7 deg
	<b>- Slew</b> - 1.8 deg/s
	• Expanded
	<b>– FOV</b> – 0.8 deg
	- Slew - 0.7 deg/s
	<ul> <li>Digital Zoom - Degraded quality</li> </ul>

### **5.2** OVERVIEW - STARTUP

1.	Power Switch	POD
2.	Pod Startup Sequence	<ul> <li>8 min startup sequence</li> <li>MODE Switch shows STBY when complete</li> </ul>
3.	MODE Switch	Press
4.	Initialization Sequence	<ul><li>30 sec initialization</li><li>MODE Switch shows OPER when ready</li></ul>
5.	VIDEO Switch	FLIR
6.	TID MODE	TV

### 5.3 OVERVIEW - POINTING MODES

Sensor Modes     Overview	Contrast Lock				
	<ul><li>Area Track</li><li>Point Track</li></ul>				
	• Q Designation				
	<ul><li>Directional Q - QSNO / QADL / QHUD</li></ul>				
	<ul><li>Location Q - QWp / QDES</li></ul>				
Directional Q	<ul><li>Do Not Allow Weapon Guidance</li><li>QSNO</li></ul>				
	<ul> <li>Pod slaved to ground 15 nm in front along own aircraft heading</li> </ul>				
	• QADL				
	<ul><li>Pod slaved to ADL</li><li>In A/A mode</li></ul>				
	• QHUD				
	<ul><li>Pod slaved to HUD</li><li>In A/G mode</li></ul>				
Location Q	<ul><li>Allow Weapon Guidance</li><li>QWp</li></ul>				
	<ul><li>Pod slaved to WCS waypoint</li><li>Cycled with QWp+ / QWp-</li></ul>				
	• QDES				
	<ul> <li>Designate targets for engage- ment</li> </ul>				
	<ul> <li>LANTIRN Trigger Second Detent to designate</li> </ul>				
	<ul> <li>Coordinates can be manually added to WCS for navigation</li> </ul>				

### LANTIRN F-14A/B REV: 20211026

### 5.4 OVERVIEW - LASING/DESIGNATION

• A/G Designa- tion	<ul> <li>(a) DesignateTrigger Full-Action</li> <li>Laser Fires</li> <li>Slant Range calculated</li> <li>Time-to-Go calculated</li> </ul>
Steering Cues	<ul> <li>Automatically activated when QDES selected/designated</li> <li>QDES remains even if new Q selected</li> <li>Cues still point towards QDES even if pod at another point</li> </ul>
Manual Lase	(a) LaseTrigger Half-Action Hold
Latched Lase	• Effect – Lases for 60 sec
	(a) ActivateLatch Lase Button Press (b) ExtendLatch Lase Button Press (c) DeactivateTrigger Half-Action
Auto Lase	• Effect – Fires from -10 to +4 sec TIMP
	(a) Laser Mode Slider AFT Short (b) Cycle A/M Right 4-Way Depress
Laser Notes	Always at current Pod location     Can point to different location than QDES

### 5.5 CONTROLS - PANEL

•	Power Switch	<ul> <li>OFF - Disables power to system</li> <li>IMU - Only powers LANTIRN IMU (Not Simulated in DCS)</li> <li>POD - Powers whole system</li> </ul>
•	MODE Switch	<ul><li>STBY – Standby</li><li>OPER – Operational</li></ul>
•	LASER Switch	ARM – Arms laser     SAFE – Inhibits laser use
•	VIDEO Switch	<ul> <li>FLIR - Displays LANTIRN FLIR on TID</li> <li>TCS - Displays TCS video on TID</li> </ul>

### LANTIRN F-14A/B REV: 20211026

- Indicator Lights
   Indicate Error States
- IBIT Button
   Initiates Build-In-Test

### 5.6 CONTROLS - STICK

	A4 . A4 I	
•	Master Mode	• A/G Mode - Side 2-Way FWD
		• A/A Mode - Side 2-Way AFT
•	Slew	Center Slew Hat
•	WHOT/BHOT	Center Slew Hat Depress
•	Contrast Track	<ul> <li>Point Track - Left 4-Way Up</li> <li>Area Track - Left 4-Way Down</li> </ul>
•	Q Select	<ul> <li>QADL/QHUD – Right 4-Way Up</li> <li>QDES – Right 4-Way Right</li> <li>QSNO – Right 4-Way Down</li> </ul>
•	Declutter	Right 4-Way Depress
•	Zoom Level	FOV Button
•	Cycle Gain	Slider FWD short
	Control Mode	
•	Manual Gain	(a) SliderFWD long
	Control	(b) Gain Right 4-Way Up/Down
		LevelRight 4-Way Left/Right
•	Laser Code	(a) SliderAFT short
		(b) Select DigitRight 4-Way Left/Right
		(c) Change Digit Right 4-Way Up/Down
•	Focus Control	(a) Slider AFT hold
		(b) Right 4-WayUp/Down
•	Manual Lase	Trigger Half-Action
•	Latched Laser	Latched Laser Fire Button
•	Designate QDES	Trigger Full-Action

LANTIRN F-14A/B REV: 20211026

### 5.7 DISPLAY

• Top Left	<ul> <li>Own Aircraft Datablock</li> </ul>
	<b>– Lat</b> – deg:min.dec
	<ul><li>Long - deg:min.dec</li></ul>
	<ul><li>ALT – Altitude (ft)</li></ul>
	<ul> <li>KGS - Knots Ground Speed</li> </ul>
	<ul><li>DIVE - Dive Angle (deg)</li></ul>
Mid Left	<ul> <li>Sensor Mode – WHOT / BHOT</li> <li>Gain Control – Auto / Manual</li> </ul>
Bottom Left	Pod Info Datablock
	<b>– SRA</b> – Slant Range
	- AZ - Pod LoS Azimuth L/R
	- EL - Pod LoS Elevation
	- Time - UTC Time
	– IBIT – Codes
Bottom Center	<ul> <li>Master Mode – A/A / A/G</li> <li>Track Mode – AREA / POINT / Q</li> </ul>
	Current Weapon
	• Laser Code
	• L
	<b>– Steady</b> – Laser Armed
	- Flashing - Laser Firing
Bottom Right	• Q Datablock
20110111 1119111	- TTG - Time-To-Go
	- B/R - Bearing and Range
	- ELEV - Elevation (ft) of Q
	- Lat - deg:min:dec
	- Long - deg:min:dec
Mid Center	• Crosshair
Mid Celliel	
	<ul> <li>Bounding Box - Indicates currently tracked target in point mode</li> </ul>
	- Zoom Boxes - Indicates next zoom
	levels

• Mid Right	• Bomb Rlease Cue
	<ul> <li>Only shown if current Q is QDES, with valid weapon selected</li> <li>TREL - Time to release</li> <li>TIMP - Time to Impact (after release)</li> </ul>
• Top Center	Steering Guidance to Q     Relative bearing L/R to commanded

heading

REV: 20211026

### A/G WEAPONS

**TANK JETT** 

**SEL JETT** 

### A/G WEAPON SETTINGS - OVERVIEW

A/G WEAPONS F-14A/B

• WPN TYPE	Selects Weapon Type
	<ul> <li>Configures WCS for selected weapon</li> <li>Refer to Kneeboard for list of mounted weapons</li> <li>Mk-81 / 82 / 83 have both L and H option refering to high and low drag</li> </ul>
DLVY MODE	<ul> <li>STP-SGL - Single weapon per press</li> <li>STP-PRS Single pair per press</li> <li>RPL-SGL - QTY of weapons per press</li> <li>RPL-PRS - QTY of pairs per press</li> </ul>
• DLVY OPTNS	<ul> <li>INTERVAL – Interval in ms</li> <li>QTY – Number of stores to be released</li> </ul>
• MECH FUZE	<ul> <li>NOSE - Arms nose fuze</li> <li>SAFE - Inhibits arming of fuzes</li> <li>NOSE/TAIL - Arms both fuzes</li> </ul>
• ELEC FUZE	<ul> <li>SAFE - Inhibits electrical bomb fuzing</li> <li>VT - Sets air-burst mode at preset burst height for compatible stores</li> <li>INST - Sets instantaneous burst mode</li> <li>DLY 1 - Sets preset time delay 1</li> <li>DLY 2 - Sets preset time delay 2</li> </ul>
• STA SEL	Selects Stations for Employment/Jettison  Set to SEL to activate a pylon Stations 1 & 8 should be set to B for selection Station 1 & 8 SW was used for Sidewinder jettison, is now inoperable

Allows Drop Tank Jettison

• JETT - Selective jettison SAFE - Inhibits jettison • AUX - Backup mode

### 6.2 SELECTIVE ORNANCE JETTISON

1.	Pilot Conditions	MASTER ARMON
2.	<b>RIO Conditions</b>	
		JETT OPTIONSAs Desired
3.	Jettison	(a) SEL JETT GuardFlipped
		(b) SEL JETT Switch JETT

## A/G WEAPONS | F-14A/B | REV: 20211026

### 6.3 M61 GUN

1.	Pilot Conditions	<ul> <li>MASTER ARM ON</li> <li>HUD A/G</li> <li>WEAPON SELECTOR GUNS</li> <li>Wing Sweep BOMB</li> </ul>
2.	Employment	(a) Dive       20-30 deg         (b) Pipper       on target         (c) TRIGGER       FIRE
•	Note: TCS	<ul> <li>TCS slaved to radar impact point</li> <li>Rio can select NAR or WIDE</li> </ul>

### 6.4 FFAR / ZUNI ROCKETS

1.	RIO Conditions	<ul> <li>WPN TYP LAU-10</li> <li>Attack Mode Pilot Attack</li> <li>Deliver Mode RPL-SGL</li> <li>Mechanical Fuze NOSE</li> <li>Electronic Fuze INST</li> <li>Delivery Options As Desired</li> <li>Stations Armed</li> </ul>
2.	Pilot Conditions	<ul> <li>MASTER ARM</li> <li>HUD</li> <li>WEAPON SELECTOR</li> <li>Stations</li> <li>Werify selected</li> <li>Wing Sweep</li> <li>BOMB</li> </ul>
3.	Employment	(a) Dive       20-30 deg         (b) Pipper       on target         (c) TRIGGER       FIRE

## A/G WEAPONS | F-14A/B | REV: 20211026

### 6.5 UNGUIDED BOMB - CCIP

1.	<b>RIO Conditions</b>	• WPN TYP MK-8X
		Attack ModePilot Attack
		<ul> <li>Deliver ModeSTP-PRS</li> </ul>
		Mechanical FuzeNOSE
		• Electronic FuzeINST
		Delivery Options As Desired
		StationsArmed
2.	Pilot Conditions	MASTER ARMON
		• HUD A/G
		WEAPON SELECTOROFF
		Stationsverify selected
		Wing SweepBOMB
3.	Employment	(a) <b>Dive</b>
		(b) Pipper on target
		(c) STORE RELEASE Press and Hold

### 6.6 UNGUIDED BOMB - CCRP

1.	RIO Conditions	WPN TYP     MK-8X     Attack Mode
2.	Pilot Conditions	<ul> <li>MASTER ARM</li> <li>HUD</li> <li>WEAPON SELECTOR</li> <li>Stations</li> <li>Werify selected</li> <li>Wing Sweep</li> <li>BOMB</li> </ul>
3.	Designation	(a) Slew DiamondVSL HI/LO (b) DesignatePAL
4.	Employment	(a) Flight Path

## A/G WEAPONS | F-14A/B | REV: 20211026

### 6.7 LASER GUIDED BOMB

1. LANTIRN PREP	<ul> <li>Warm up takes approx. 8 min</li> <li>Automatically switches to STANDBY</li> </ul>
	(b) Laser Code
	(c) LANTIRN Mode OPERATE
	<ul> <li>STANDBY caution will flash for 30 s</li> <li>Then switches to OPER</li> </ul>
	(d) VIDEO Switch FLIR (e) TID ModeTV
2. RIO Conditions	WPN TYP GBU-XX     Attack Mode Manual     Deliver Mode STP-SGL     Mechanical Fuze NOSE     Electronic Fuze INST     Delivery Options As Desired     Stations Armed
3. Pilot Conditions	MASTER ARM ON     HUD A/G     WEAPON SELECTOR OFF     VDI Mode TV     Stations verify selected     Wing Sweep BOMB
4. Slew LANTIRN	Refer to LANTIRN Control Section  Slave to WYPT Left-4-Way RIGHT QSNO (Snowplow) S4 HAT Down Toggle FOV LANTIRN Toggle FOV Slew LANTIRN Stick Area Track Left-4-Way UP Point Track Left-4-Way Down Undesignate LANTIRN Undesignate

## A/G WEAPONS F-14A/B REV: 20211026

4.	Designate	Refer to LANTIRN Designation Section (a) DesignateTrigger Full-Action
		Slant Range calculated
		<ul> <li>Time-to-Go calculated</li> </ul>
		Once Time-to-Realease (TREL) is 0
		(b) Auto-Lase . If selected: lases 10s to impact (c) Manual LaseTrigger Full-Action (d) While LasingL blinks
5.	Employment	Once Time-to-Realease (TREL) is 0
		(a) STORE RELEASEPress and Hold
		(b) Flight Path Gentle right-hand turn

### 6.8 TALD DECOYS

1.	RIO Conditions	<ul> <li>WPN TYP</li></ul>
2.	Pilot Conditions	<ul> <li>MASTER ARM</li> <li>HUD</li> <li>WEAPON SELECTOR</li> <li>HSD Mode</li> <li>Stations</li> <li>ON</li> <li>OF</li> <li>OF</li> <li>TID</li> <li>Stations</li> </ul>
3.	Employment	(a) Flight PathHigh / Fast (b) RWRMonitor to locate emitters (c) STORE RELEASEPress and Hold

### 7 A/A WEAPONS

#### 7.1 M61 GUN - OVERVIEW

GUN RATE But-	• Cycles Gun Rate
ton	- <b>HIGH</b> - 6000 rpm
	<b>– LOW</b> – 4000 rpm
• A/A Gun	• RTGS
Modes	<ul> <li>Real-Time Gunsight Mode</li> </ul>
	<ul> <li>Selected automatically with guns</li> </ul>
	<ul> <li>If No WCS Data Available displays bullet location at 2000 ft with diamond and 1000 ft with pipper</li> <li>If WCS Data Available pipper displays bullet location at targets current range out to 4000 ft</li> </ul>
	• MANUAL
	<ul><li>Fixed manual pipper</li><li>Adjust with GUN ELEV knob</li><li>Press CAGE/SEAM to select</li></ul>
CAGE/SEAM Button	Cycles RTGS / MANUAL Gun Modes
ROUNDS Knob	<ul> <li>Allows selection of remaining gun rounds</li> </ul>

#### **7.2** M61 GUN - MANUAL

1.	<b>Pilot Conditions</b>	• MASTER ARM	ON
		• HUD	A/A
		• Gun Rate	HIGH
		Gunsight Lead	
		WEAPON SELECTOR	GUNS
2.	<b>Employment</b>	(a) <b>Gun Mode</b>	MANUAL
		(b) <b>Pipper</b>	on target
		(c) Trigger	FIRE

#### 7.3 M61 GUN - RTGS / NO RADAR

1.	Pilot Conditions	<ul> <li>MASTER ARM</li> <li>HUD</li> <li>Gun Rate</li> <li>WEAPON SELECTOR</li> </ul>	A/A HIGH
2.	Employment	(a) <b>Gun Mode</b> (b) <b>Pipper</b> (c) <b>Trigger</b>	on target

### M61 GUN - RTGS / RADAR

1.	Pilot Conditions	• MASTER ARM	ON
		• HUD	A/A
		• Gun Rate	HIGH
		• WEAPON SELECTOR	GUNS
2.	<b>Employment</b>	(a) <b>Gun Mode</b>	RTGS
		(b) <b>Radar</b>	STT
		(c) <b>Pipper</b>	on target
		(d) Trigger	FIRE

#### 7.5 AIM-9 SIDEWINDER - OVERVIEW

• Missile Prepa-	MSL PREP
ration	<ul> <li>AIM-9 seeker must be cooled</li> </ul>
	<ul> <li>Either press SW COOL button</li> </ul>
	<ul><li>Or activation of ACM</li></ul>
Seeker Head	• SEAM
Modes	<ul> <li>Sidewinder Expanded Acquisition Mode</li> </ul>
	<ul> <li>Double-D search pattern invisible to pilot</li> </ul>
	- 4.5 sec search time
	<ul> <li>Allows AIM-9 to be uncaged and track target</li> </ul>
	– 40 deg track limit
	<ul> <li>Allows WCS to slave AIM-9 to</li> </ul>
	radar track
	<ul> <li>Boresight</li> </ul>
	<ul> <li>AIM-9 locked to ADL</li> </ul>
	<ul><li>2.5 deg FOV</li></ul>
	<ul> <li>Selected if MODE/STP set to BRSIT</li> </ul>
	<ul> <li>And ACM not active</li> </ul>
<ul> <li>MODE/STP</li> </ul>	• NORM
Switch	<ul> <li>Allows SEAM seeker mode</li> </ul>
	• BRSIT
	<ul> <li>Forces Boresight seeker mode</li> </ul>
	<ul> <li>Overridden if ACM active</li> </ul>
• CAGE/SEAM	Uncages Seeker
Button	<ul> <li>Starts 4.5 second double-D search</li> </ul>
	<ul> <li>If no IR source found cages again</li> </ul>
	<ul> <li>Slaves Seeker</li> </ul>

#### 7.6 AIM-9 SIDEWINDER - SILENT


1.	Pilot Conditions	<ul> <li>MASTER ARM</li> <li>HUD</li> <li>SW COOL</li> <li>MODE/STP</li> <li>WEAPON SELECTOR</li> </ul>	A/A ON As Desired
2.	Employment	(a) <b>CAGE/SEAM</b> (b) <b>IR-Lock</b> (c) <b>Trigger</b>	Good Tone

#### 7.7 AIM-9 SIDEWINDER - RADAR

1.	<b>Pilot Conditions</b>	• MASTER ARM	ON
		• HUD	A/A
		• SW COOL	ON
		• MODE/STP	NORM
		WEAPON SELECTOR	<b>SW</b>
2.	<b>Employment</b>	(a) <b>Radar</b>	STT
		(b) CAGE/SEAMS	lave Seeker
		(c) IR-LOCK	. Good Tone
		(d) <b>Steering</b> center T-shaped	cue with ASE
		(e) Trigger	FIRE

#### 7.8 AIM-7 SPARROW - OVERVIEW

•	Missile Prepa-	MSL PREP
	ration	<ul> <li>AIM-7 must be tuned to AWG-9</li> </ul>
		<ul> <li>Either press MSL PREP button</li> </ul>
		<ul><li>Or activation of ACM</li></ul>
•	Launch Modes	<ul> <li>Normal</li> </ul>
		<ul> <li>Standard operation, STT target designated before launch</li> <li>AIM-7 uses SARH all the way to target</li> <li>WCS can use CS or PD for guidance set with MSL OPTIONS Switch</li> </ul>
		Boresight
		<ul><li>Uses CS flood antenna of AWG-9</li></ul>
		<ul> <li>Missile will track strongest return in Flood area</li> </ul>
		<ul> <li>Automatically activated if STT broken</li> </ul>
		<ul> <li>Selected if MODE/STP set to BRSIT</li> </ul>
		- Or if no STT available
		- Shown Below
•	MSL SPD GATE	NOSE QTR
	Switch	<ul> <li>Standard setting in DCS</li> </ul>
		<ul> <li>All Others</li> </ul>
		<ul> <li>Not simulated</li> </ul>
•	MSL OPTIONS	• NORM
	Switch	<ul> <li>WCS uses dedicated CW antenna for AIM-7 guidance</li> </ul>
		• SP PD
		<ul> <li>WCS uses PD from main flood antenna for AIM-7F/M guidance</li> </ul>
•	MODE/STP	• NORM
	Switch	<ul> <li>Sets normal launch mode logic</li> </ul>
		• BRSIT

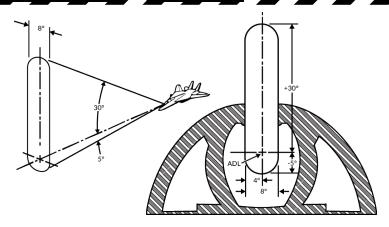

#### 7.9 AIM-7 SPARROW - STT

1. Pilot Co	•	MASTER ARM         ON           HUD         A/A           MSL PREP         ON           MODE/STP         NORM           WEAPON SELECTOR         SP
2. RIO Co	onditions •	MSL SPD GATE NOSE QTR MSL OPTIONS As Desired
3. Employment	\ ' '	RadarSTT Steering
		<ul><li>Target &lt; 20 deg from ADL</li><li>ASE center T-shaped cue within</li></ul>
	(c)	Trigger Press and Hold (until weapon release)
	(d)	Radar Maintain Lock (until impact)

#### 7.10 AIM-54 PHOENIX - OVERVIEW

- Missile Preparation
- Weapon Cooling
  - AIM-54 requires liquid cooling
  - RIO enabled **LIQUID COOLING** switch
- MSL PREP
  - AIM-54 must be tuned to AWG-9
  - Either press MSL PREP button
  - Or activation of ACM
- Launch Modes
- PDSTT SARH
  - AIM-54 uses SARH all the way to taraet
  - Faster update rate than TWS
  - Slightly increased effective range as compared to a TWS launch
- TWS SARH/ARH
  - Allows 6 AIM-54 launches at 6 targets
  - Missile is initially SARH guided
  - When within AIM-54 seeker range AWG-9 sends activation command
  - Not Fire and Forget: Requires automatic activation command
- ACM Active
  - Activated when BRSIT selected
  - Or when ACM active with no radar track
  - Missile commanded active **before** launch
- MSL SPD GATE
  Switch
- NOSE QTR
  - Standard setting in DCS
- All Others
  - Not simulated

A/A WEAPONS	F-14A/B REV: 20211026
• MSL OPTIONS	• NORM
Switch	<ul> <li>Normal guidance (SARH or SARH/ARH)</li> </ul>
	• PH ACT
	<ul> <li>WCS immediately sends AIM-54 activa- tion command on launch</li> </ul>
	<ul> <li>Reverts to SARH if no target detected</li> <li>Must be selected before launch</li> </ul>
• TGTS	SMALL – 6nm activation range
Switch	NORM – 10nm activation range
	LARGE - 13nm activation range
<ul><li>Missile Next</li><li>Launch Button</li></ul>	<ul> <li>Selects Hooked Track as Next Target for AIM-54 TWS Engagement</li> </ul>
MODE/STP	• NORM
Switch	<ul> <li>Normal operation</li> </ul>
	• BRSIT
	<ul> <li>Commanded active before launch</li> <li>Missile follows ADL and locks strongest return</li> </ul>
<ul> <li>TWS Symbol-</li> </ul>	Refer to TID Symbology Section
ogy	• Pre-Launch
	<ul> <li>Prioritization numbers assigned to tracks automatically or manually</li> <li>Blinking indicates optimal launch parameters</li> </ul>
	Post-Launch
	<ul> <li>Target prioritization number replaced with TTI</li> </ul>
	<ul> <li>Other prioritization numbers collapsed by one</li> </ul>
	<ul> <li>Tracks under missile attack brightened</li> <li>TTI blinks when missile active</li> </ul>
• Launch To Eject (LTE) Time	<ul> <li>Normal Operation - 3-4 seconds</li> <li>When in ACM - 1 second</li> </ul>

#### 7.11 AIM-54 PHOENIX - PD-STT

1.	Pilot Conditions	<ul> <li>MASTER ARM ON</li> <li>HUD A/A</li> <li>MSL PREP ON</li> <li>MODE/STP NORM</li> <li>WEAPON SELECTOR PH</li> </ul>
2.	RIO Conditions	<ul> <li>LIQUID COOLING</li></ul>
3.	Employment	(a) Radar
		(d) Radar Maintain Lock
	AIM EA BUOENIN	(until impact)
 7.12	AIM-54 PHOENIX	(until impact)
<b>7.12</b> 1.	AIM-54 PHOENIX Pilot Conditions	(until impact)

**Employment** 

TGTS Switch ...... As DesiredWCS Mode ..... TWS MAN/AUTO

