TENET TECHNETRONICS

"Simplifying Technology for Life"

2016

Interfacing Seven Segment Display with MPLAB Xpress Evaluation Board

Siva A

Tenet Technetronics

Contents

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Introduction

MPLAB Xpress IDE cost free development platform. It's cloud Based IDE available from microchip supporting PIC-based microcontrollers. The platform is comprised of code editor, build automation tools, debugger, code configurator. MPLAB Xpress IDE is an end-to-end solution enabling engineers to develop their applications from initial evaluation to final production.

Component Requirement

- **Hardware:**
  - MPLAB Xpress evaluation tool
  - Seven segment display
- **Software:**
  - MPLAB Xpress IDE

Note: we have on board LED

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Procedure

Step 1: Open your Browser and go to following link

https://mplabxpress.microchip.com/mplabcloud/ide

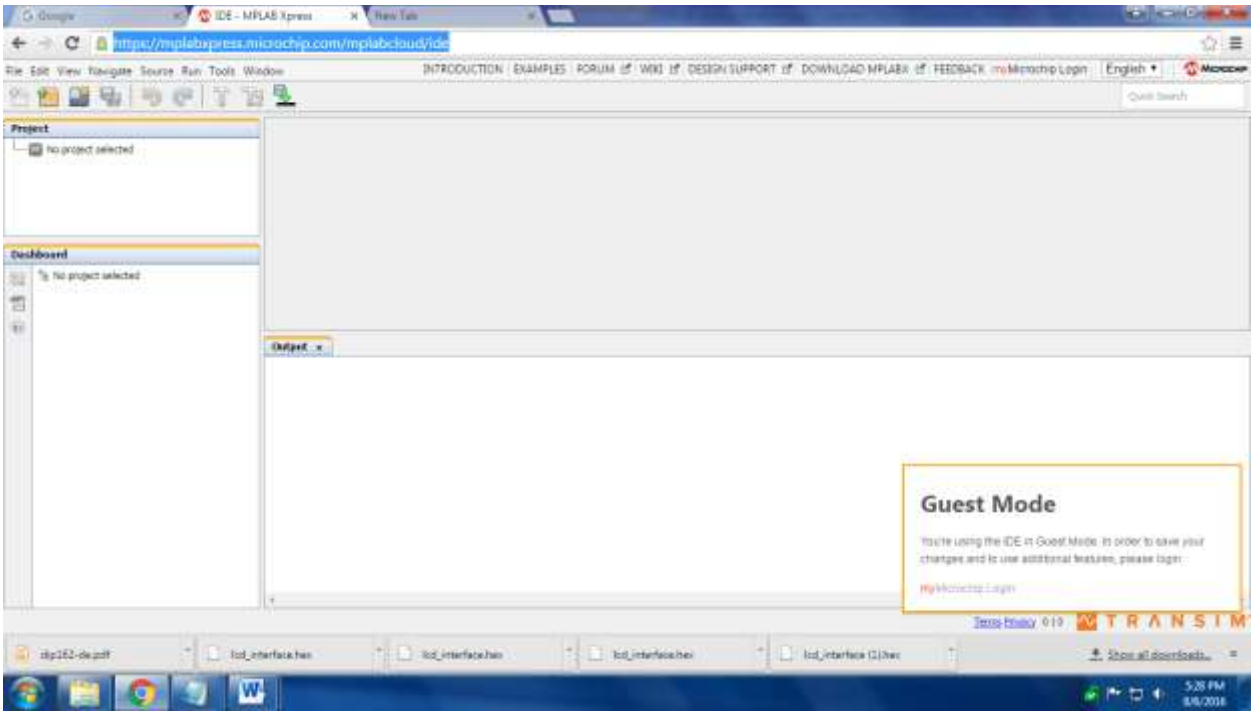

Figure 1 MPLAB Xpress IDE main window

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 2: start creating our new project. Go to **File** >> **New Project.** Select **microchip embedded** as well as **standalone project** then click **next**

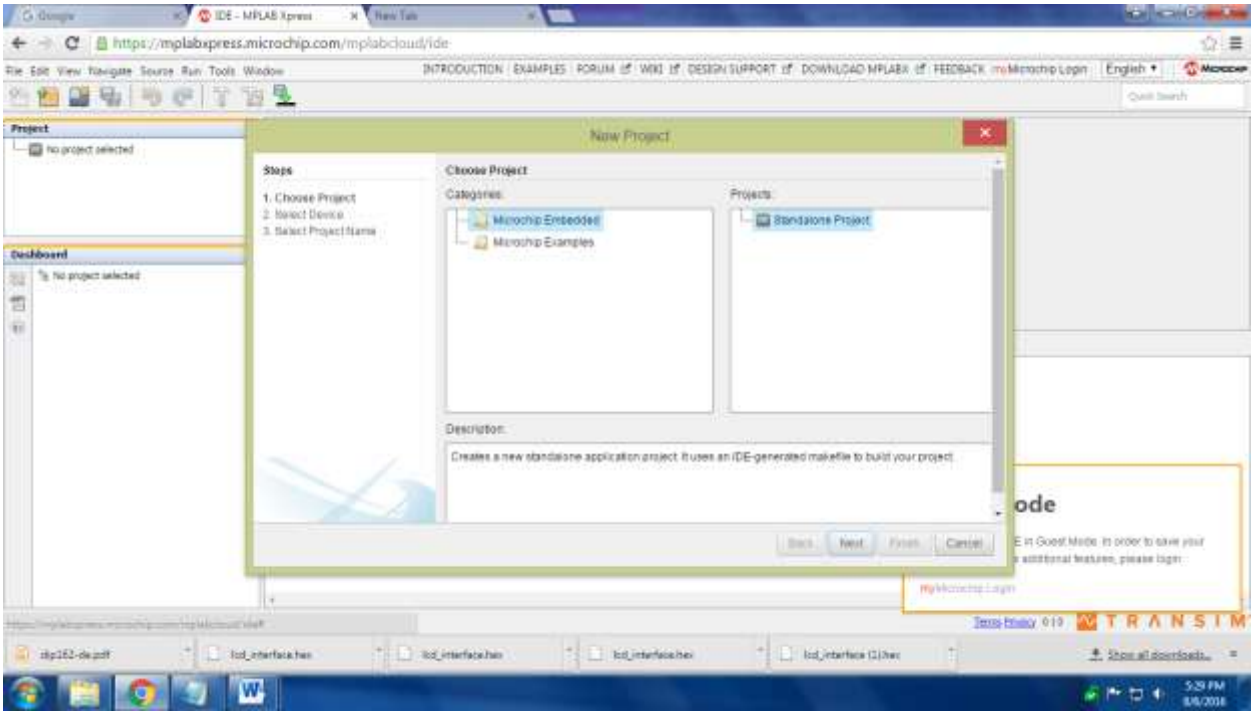

Figure 2 Open new project

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 3: Select device **pic16f18855**, and click **next .**

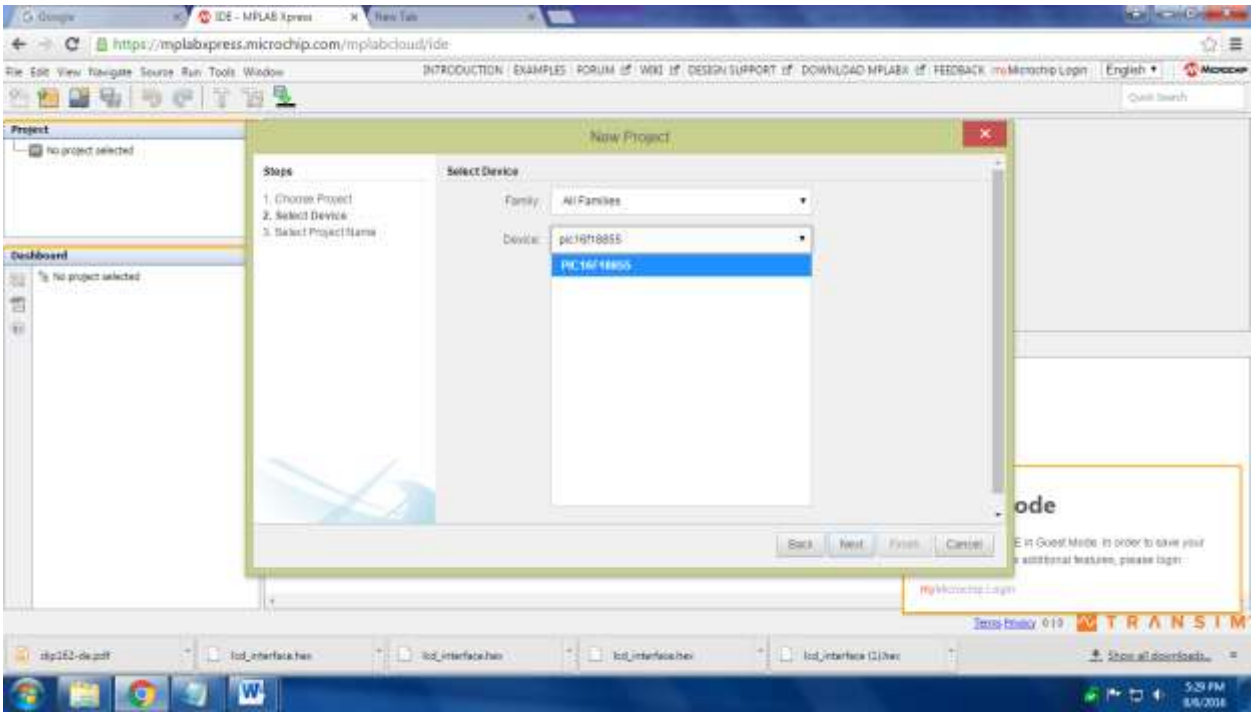

Figure 3 select Device

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 4: then give project name and click finish**.**

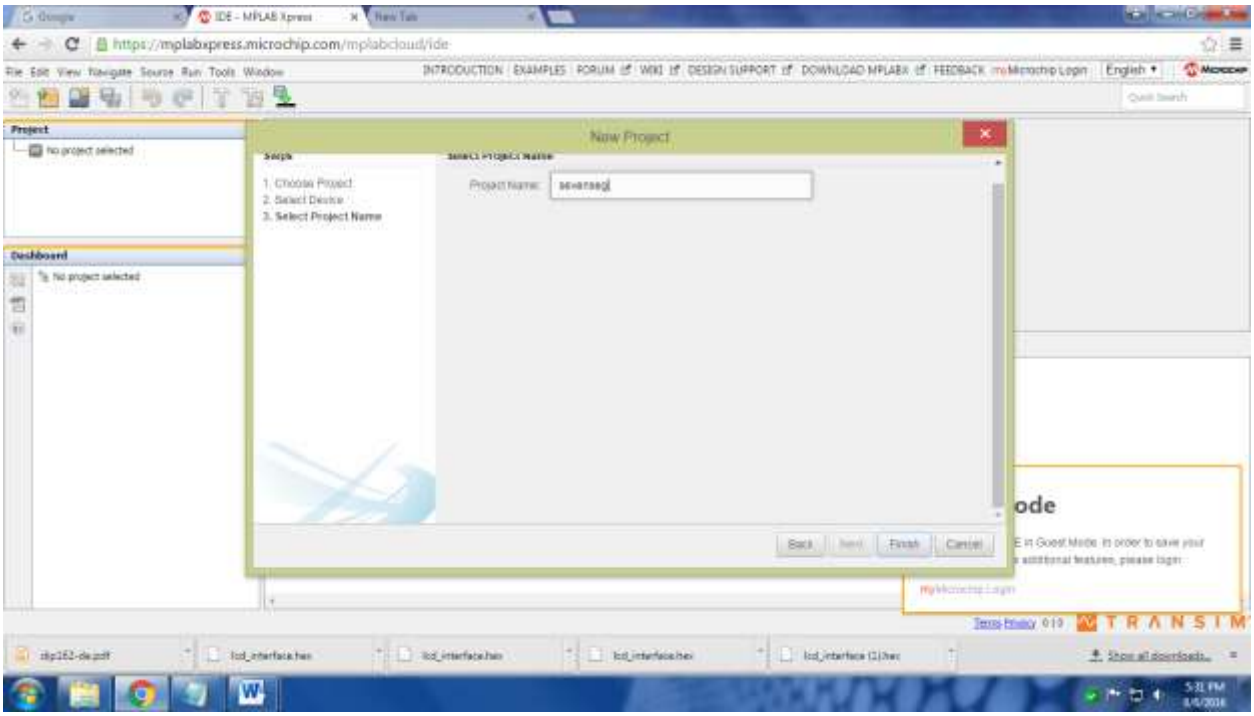

Figure 4 give project name

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 5: Now choose MPLAB Xpress code configurator if its not present in your Device please Download and install

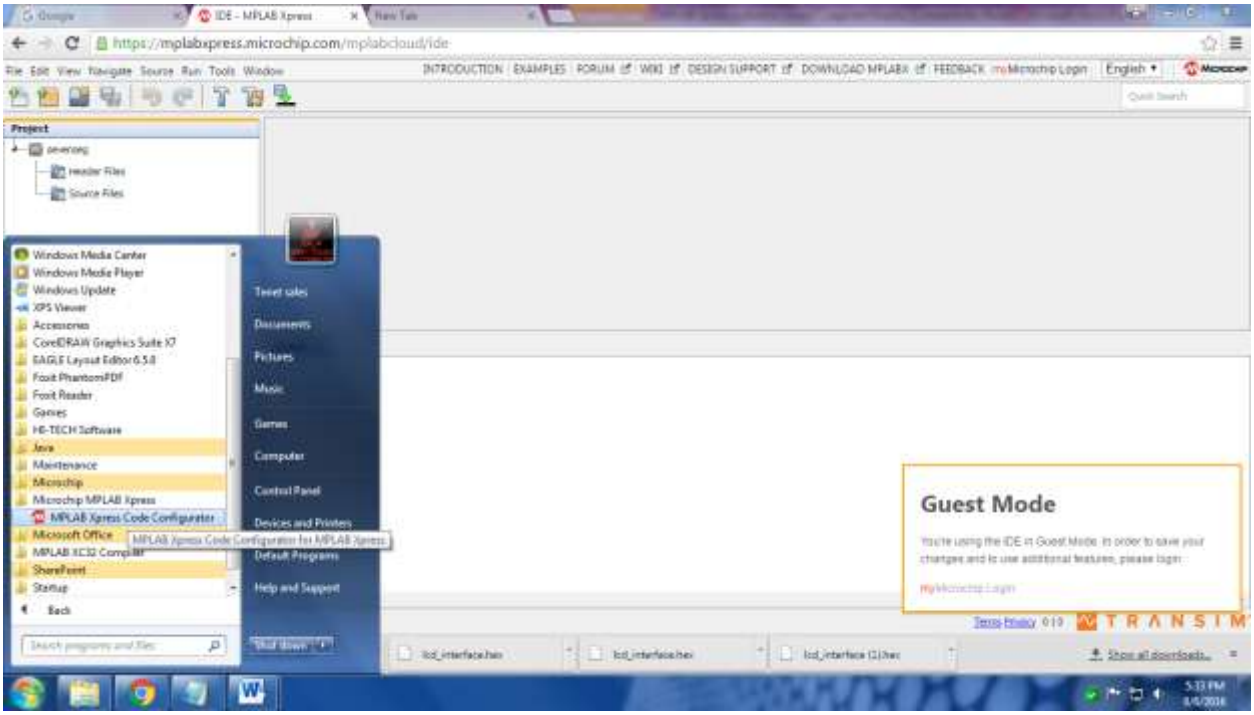

Figure 5 Select mplab xpress code configurator

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 6: Now we can see our mplab xpress configuration window and select system module in mplab xpress configuration window .

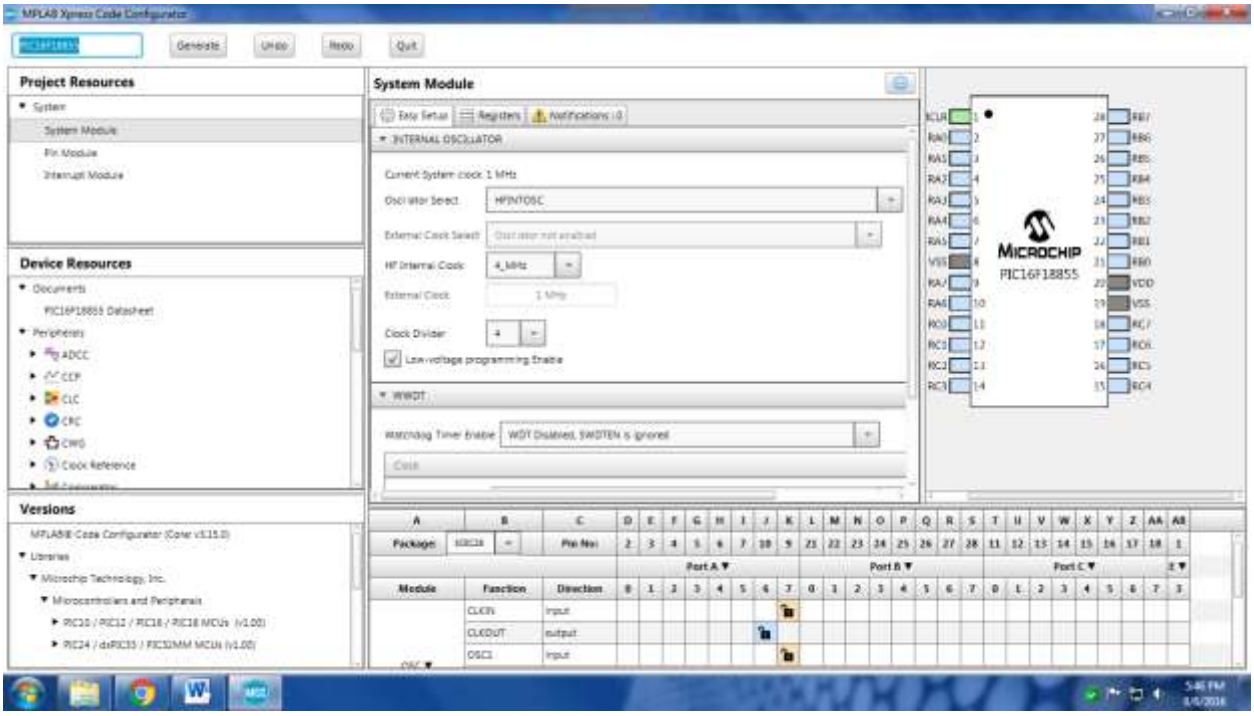

Figure 6 Assign project name

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 7: Make oscillator configuration in MPLAB Xpress configuration window

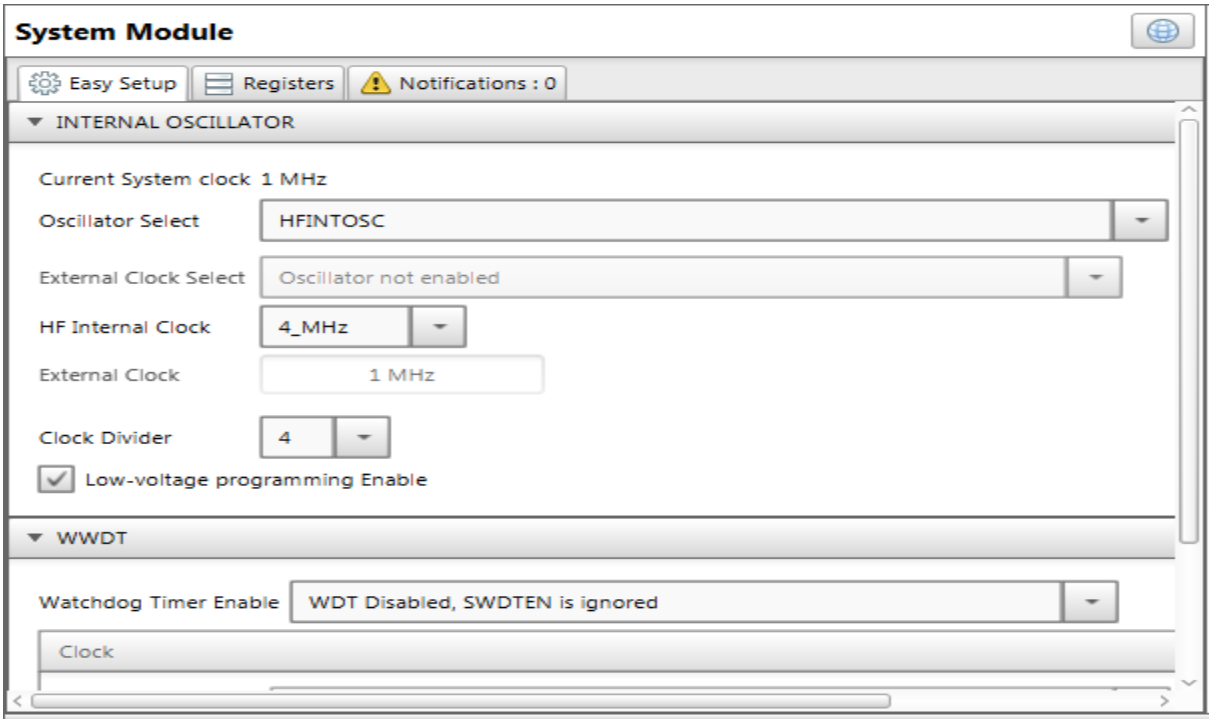

Figure 7 oscillator configuration

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 8: select PORTA all pin and select pin module in MPLAB Xpress configuration window and deselect Analog in pin module window.

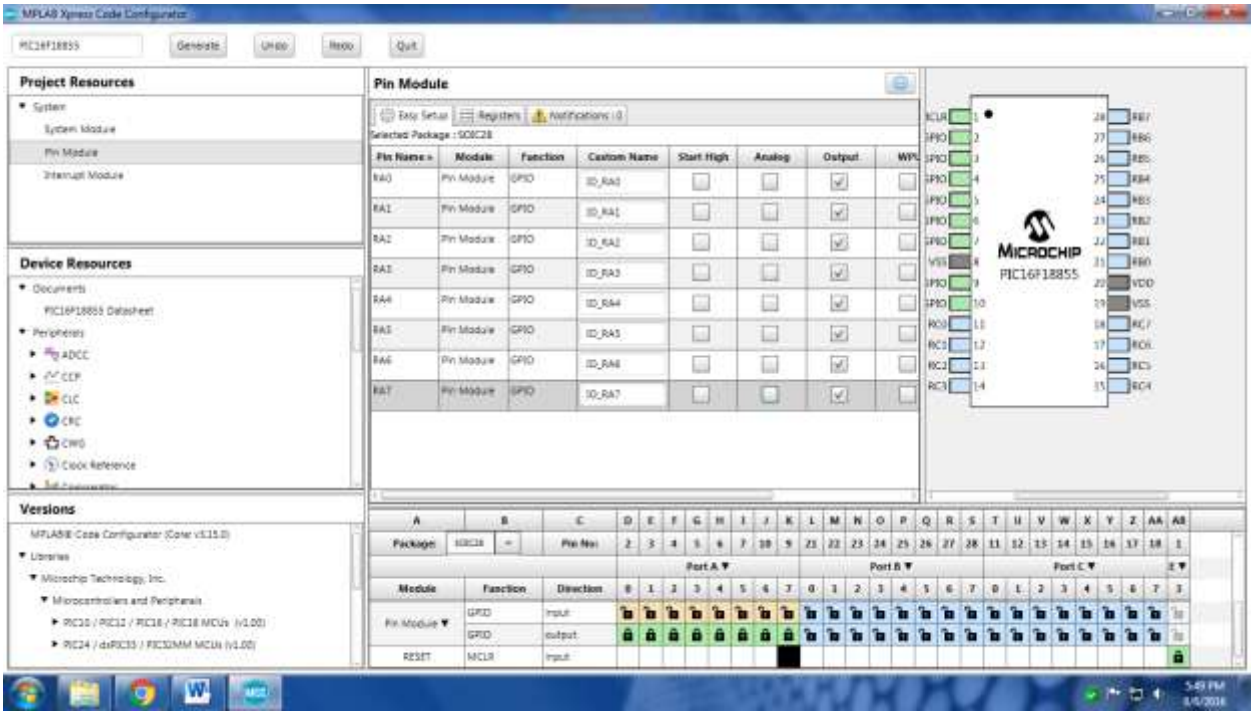

Figure 8 pin configuration set

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 9: Now click Generate option.

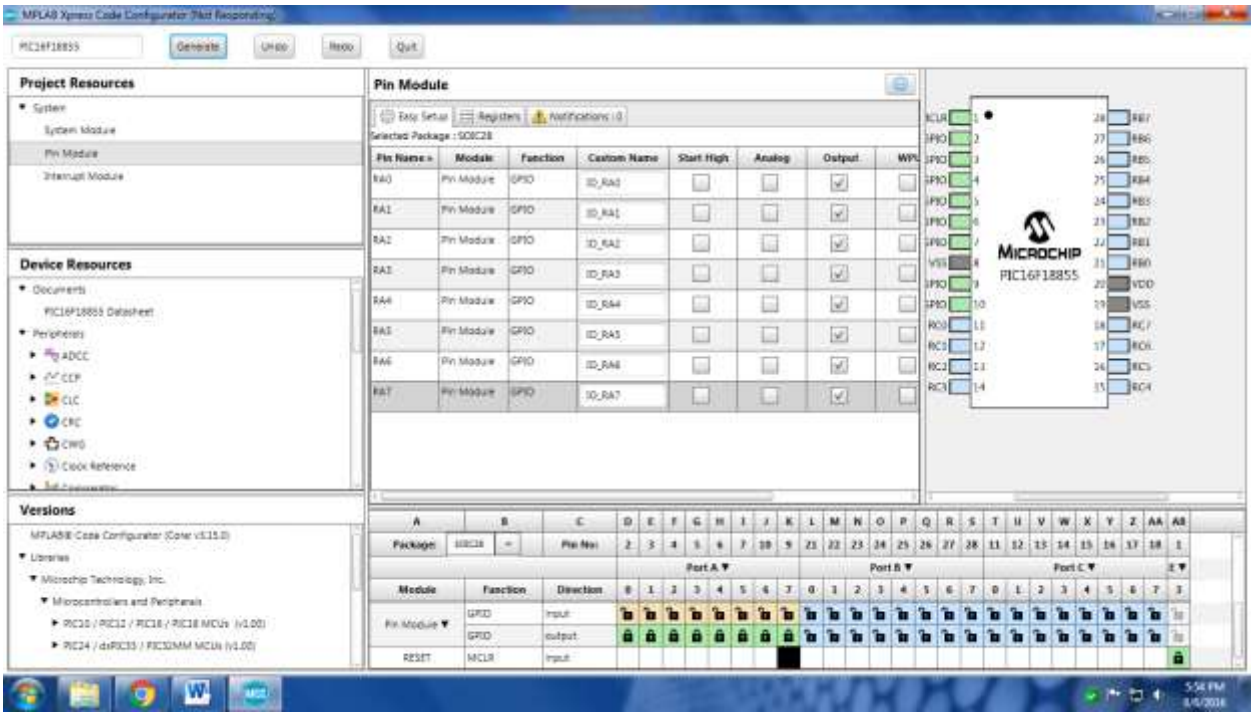

Figure 9 click Generate

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

SOURCE CODE:

```
#include "mcc_generated_files/mcc.h"

Char siva_disp[]={0xF9,0XA4,0XB0,0X99,0X92,0X82,0XF8,0X80,0X98,0XC0,'\0'};

int i,j=0;

void main(void)

{

    SYSTEM_Initialize();           // initialize the device

    while (1)

    {

        for(j=0;j<10;j++)

        {

        PORTA=siva_disp[j];       //display the values

        for(i=0;i<=10000;i++);   //delay

        }

    }

}
```


#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 10: Go to your MPLAP Xpress IDE Erase all existing code and copy above code past there then make clean and build for Export. if you done this go to download you can see hex file for your project.

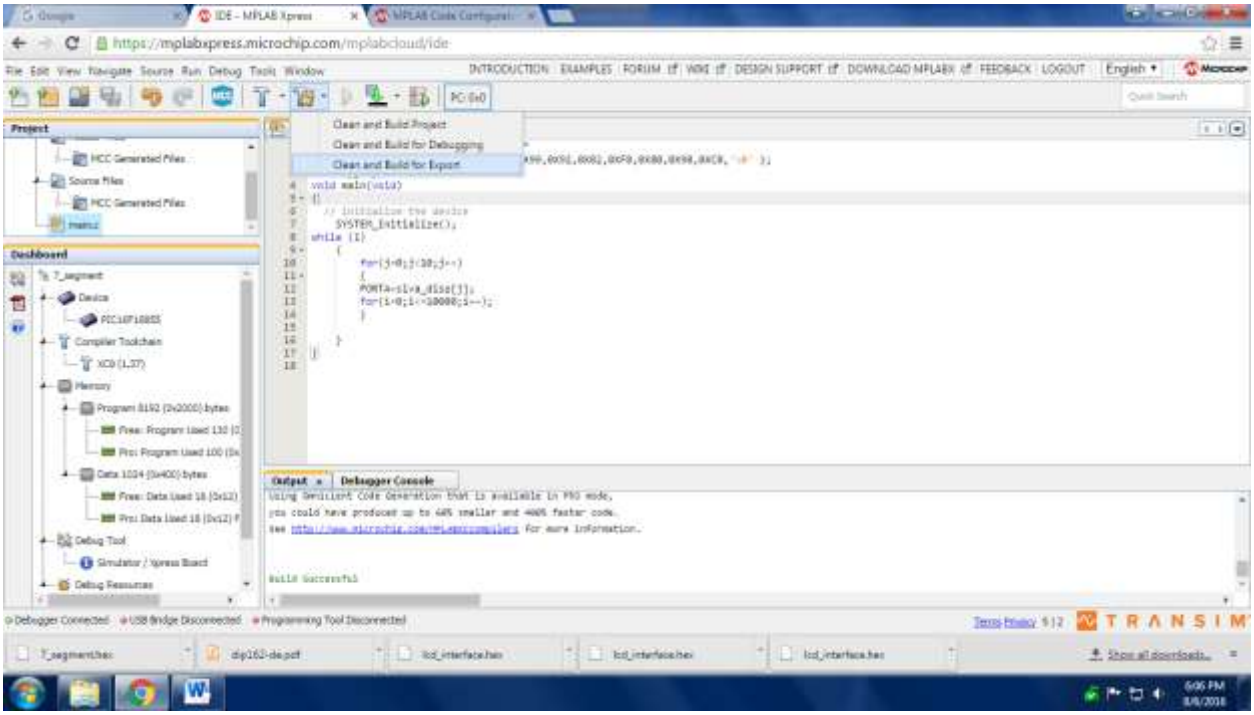

Figure 10 Build the project

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Step 11: Now, if all goes well connect the Micro B cable to pic16f18855 (mplab xpress demonstration board) and connect it to your computer. If you done you can see your devise. And copy that Hex file to your device. And make hardware connection.

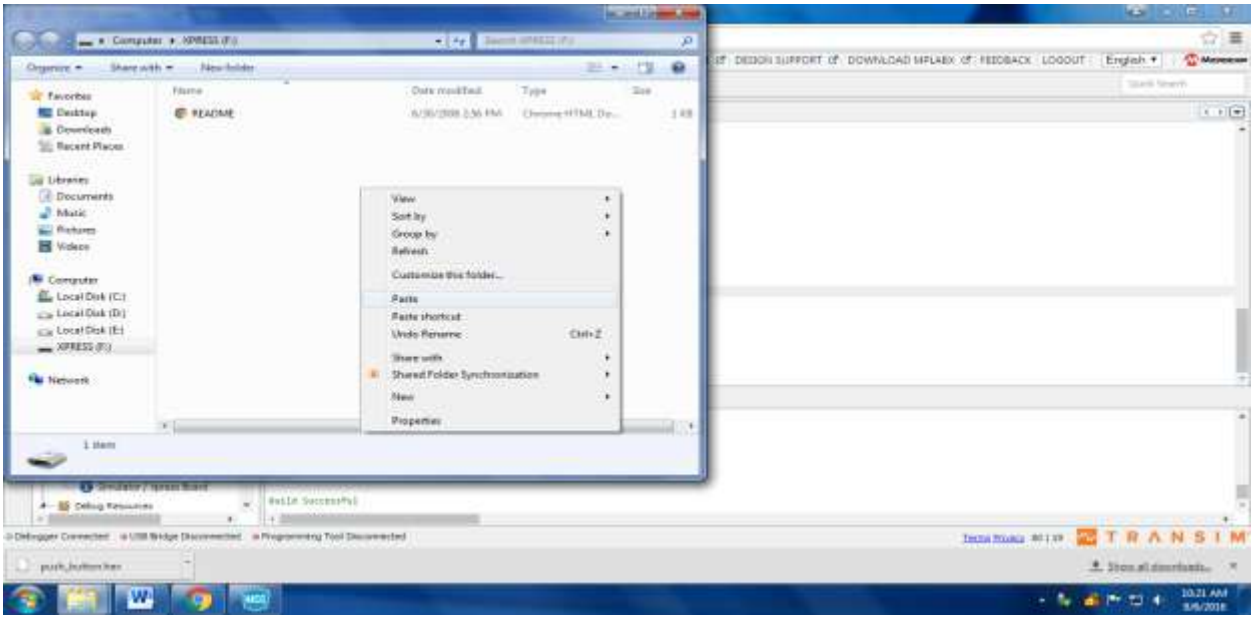

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com

Output:

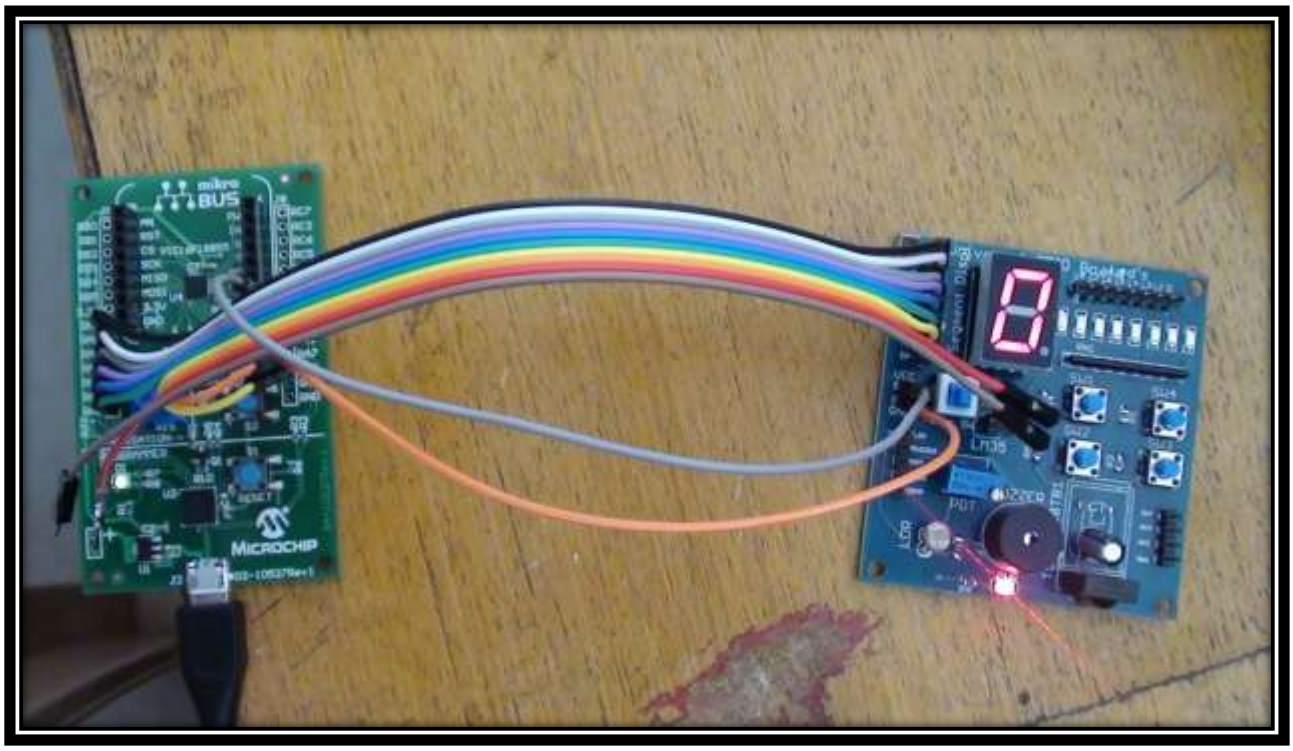

Figure 12 output

For product link:

http://www.tenettech.com/product/8828/mplab-xpress-development-board

For more information please visit: www.tenettech.com

For technical query please send an e-mail: info@tenettech.com

#9/3, Shree Lakshmi Complex, 2nd Floor, Opp. To Vivekananda Park, Girinagar, Bangalore - 560085.
Ph. No: 080-26722726., Website: www.tenettech.com, Email: info@tenettech.com