

## 2016

# Interfacing LED With MPLAB Xpress Evaluation Board



Author: Siva A

Version: 1.0

#### Introduction:

MPLAB Xpress IDE cost free development platform. It's cloud Based IDE available from microchip supporting PIC-based microcontrollers. The platform is comprised of code editor, build automation tools, debugger, code configurator. MPLAB Xpress IDE is an end-to-end solution enabling engineers to develop their applications from initial evaluation to final production.

Component Requirement

- > Hardware:
  - MPLAB Xpress evaluation tool
  - o **LED**
- > Software:
  - MPLAB Xpress IDE

Note: we have on board LED

Step 1: Open your Browser and go to following link

https://mplabxpress.microchip.com/mplabcloud/ide

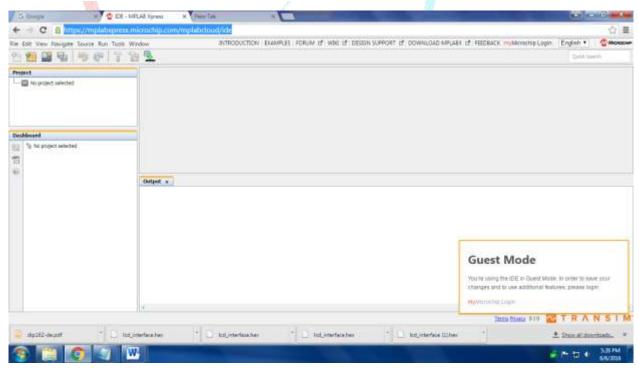


Figure 1 MPLAB Xpress IDE main window

# 9/3, 2nd floor, SreeLaksmi Complex, opp, to Vivekananda Park, Girinagar, Bangalore - 560085, Email: info@tenettech.com, Phone: 080 - 26722726

### **Step 2:** start creating our new project. Go to **File** >> **New Project.** Select **microchip embedded** as well as **standalone project** then click **next**

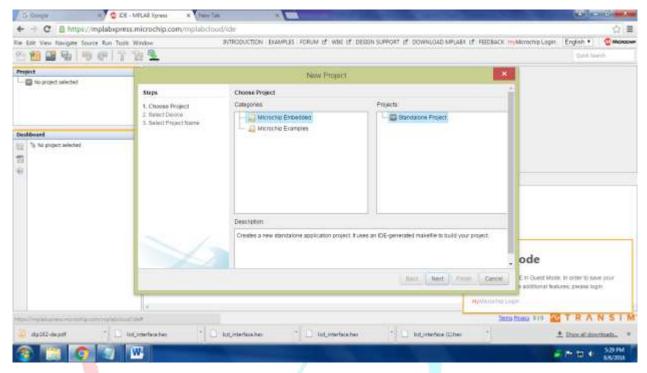


Figure 2 Open new projects

#### Step 3: Select device PIC16F18855, and click next.

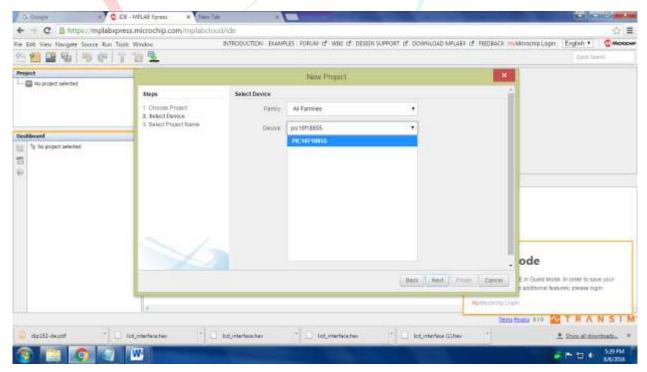


Figure 3 select Device

 ${\it \# 9/3, 2nd floor, Sree Laksmi\ Complex, opp, to\ Vivekananda\ Park, Girinagar,\ Bangalore\ -\ 560085,}$ 

Email: info@tenettech.com, Phone: 080 - 26722726

#### Step 4: Then give project name and click finish.

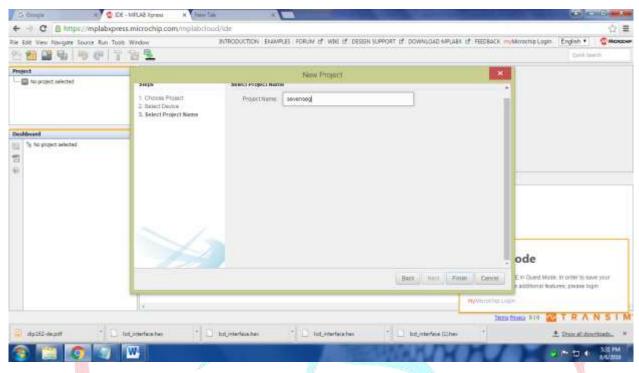


Figure 4 give project name

**Step 5:** Now choose MPLAB Xpress code configurator if its not present in your Device please Download and install it.

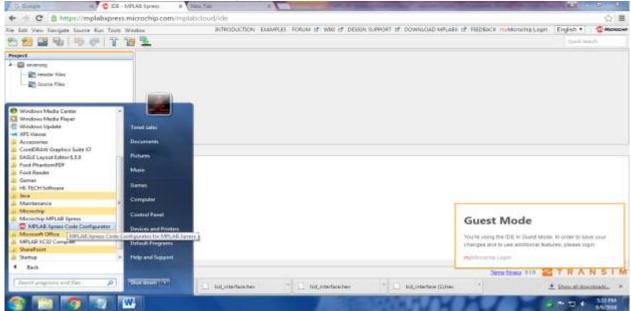


Figure 5 Select MPLAB Xpress code configurator

# 9/3, 2nd floor, SreeLaksmi Complex, opp, to Vivekananda Park, Girinagar, Bangalore - 560085, Email: info@tenettech.com, Phone: 080 - 26722726

**Step 6:** Now we can see our MPLAB Xpress configuration window and select system module in MPLAB Xpress configuration window.

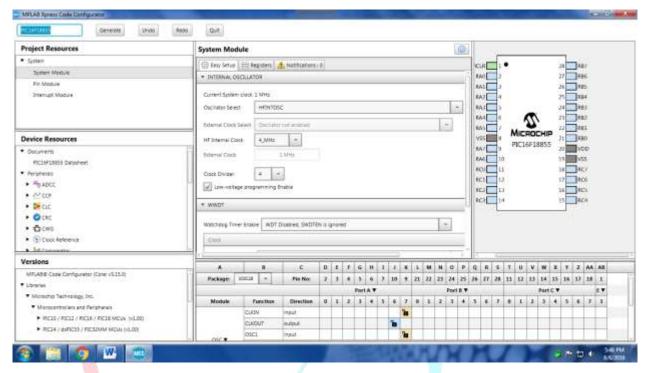


Figure 6 Assign project name

**Step 7:** Make oscillator configuration and select PORT A –RAO, RA1 pins.

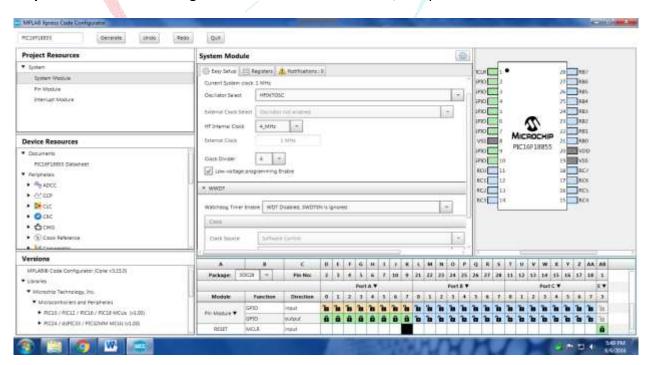


Figure 7 select pin

 $\#\ 9/3,\ 2nd\ floor,\ Sree Laksmi\ Complex,\ opp,\ to\ Vivekananda\ Park,\ Girinagar,\ Bangalore\ -\ 560085,$ 

 ${\bf Email: info@tenettech.com, \, Phone: \, 080 \, - \, 26722726}$ 

**Step 8:** Select pin module in MPLAB Xpress configuration window and make deselect Analog in pin module window.

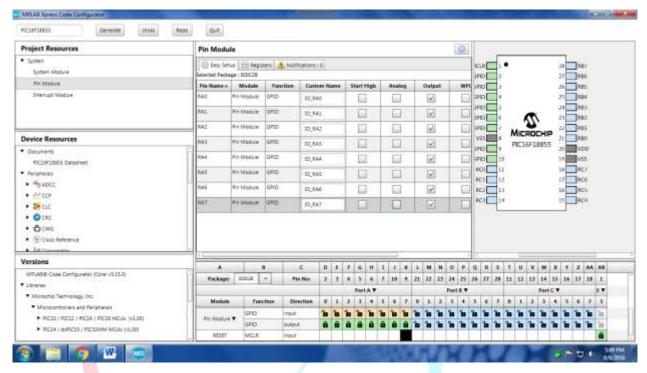


Figure 8 pin configuration set

#### Step 9: Now click Generate option.

 ${\bf Email: info@tenettech.com, Phone: 080-26722726}$ 

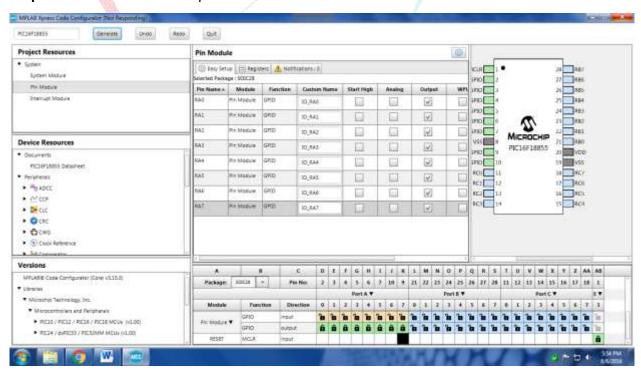


Figure 9 click Generate


 $\#\ 9/3, 2nd\ floor, Sree Laksmi\ Complex, opp,\ to\ Vivekananda\ Park,\ Girinagar,\ Bangalore\ -\ 560085,$ 

#### **SOURCE CODE:**


```
#include "mcc_generated_files/mcc.h"
int i;
void main(void)
{
  SYSTEM_Initialize();
                                  // initialize the device
                                  //continues function
 while (1)
 {
                                  // LED1 OFF
   RA0=1;
   RA1=0;
                                  //LED2 ON
   for(i=0;i<=10000;i++);
                                  //delay for LED2 glow
                                  // LED1 ON
   RA0=0;
   RA1=1;
                                  //LED2 OFF
   for(i=0; i <= 10000; i++);
                                 // delay for LED1 glow
 }
}
```

## TENET Technetronics

**Step 10**: Go to your MPLAP Xpress IDE Erase all existing code and copy above code past there then make clean and build for Export. if you done this go to download you can see hex file for your project.

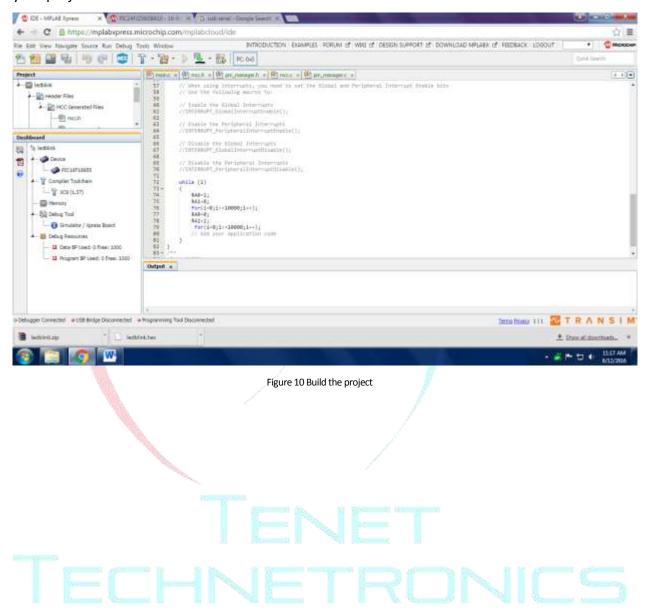

**Step 11:** Now, if all goes well connect the Micro B cable to pic16f18855 (MPLAB express demonstration board) and connect it to your computer. If you done you can see your devise. And copy that Hex file to your device. And make hardware connection.

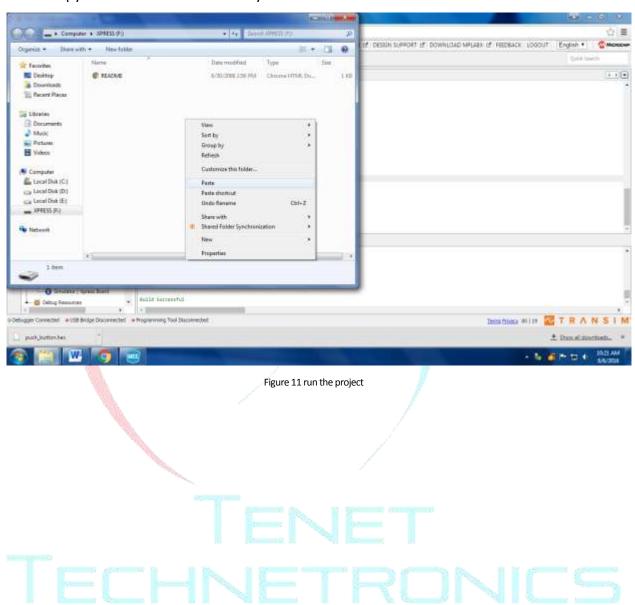

#### **OUTPUT:**



Figure 12 output



http://www.tenettech.com/product/8828/mplab-xpress-development-board

For more information please visit: www.tenettech.com

For technical query please send an e-mail: info@tenettech.com

# 9/3, 2nd floor, SreeLaksmi Complex, opp, to Vivekananda Park, Girinagar, Bangalore - 560085, Email: info@tenettech.com, Phone: 080 - 26722726