
**COSMIC SERIES** 

# DEVILZINE

Operation, Maintenance and Service Manual

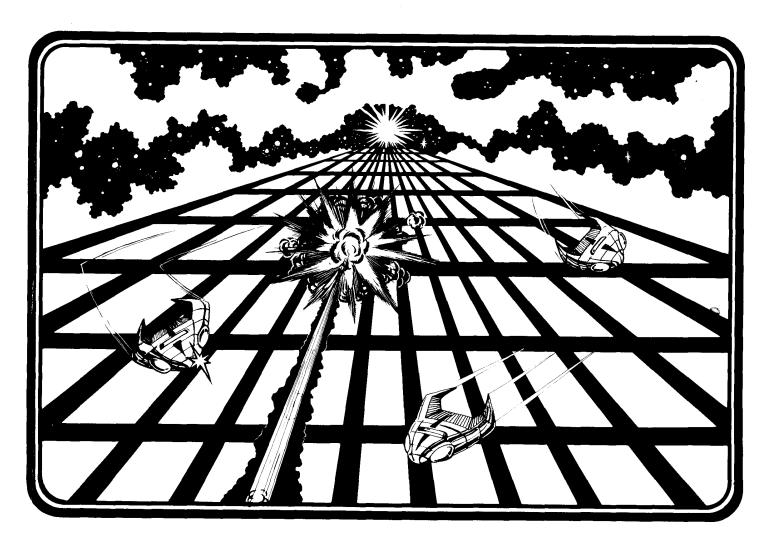

UNIVERSAL

# **CONTENTS**

l.	Feat	ures of this machine
II.	How	to handle and maintain this machine
Ш.	How	to play 3
IV.	Vario	ous optional settings
	A.	Positions of dip switches
	В.	Setting the option (dip switches)
	C.	Volume controller knob 5
V.	TV r	nonitor5
	A.	Adjustment of TV picture screen 5
VI.	Upri	ght type parts catalog
	A.	Component parts related to cabinet (outside)
	В.	Drawing of circuit board mounting positions
	C.	Fuses 7
	D.	Component parts related to cabinet (inside)
		a) Operating panel assembly 8
		b) Door assembly and parts list
		c) Lever assembly and parts list
	E.	Component parts related to switches in the cabinet
VII.	Tabl	e type parts catalog 12
	A.	Component parts related to cabinet (outside)
	В.	Component parts related to cabinet (inside)
		a) Inside cabinet
		b) Fuses
		c) Operating panel assembly
VIII	.Circı	uit board
	A.	Circuit board IC location and parts list
		a) Main circuit board IC location and parts list
		b) Sub-circuit board (1) 8013-V1 IC location and parts list 16
		c) Sound circuit board IC location and parts list
		d) Sub-circuit board (2) IC location and parts list
Sub-	circu	it board (2) block diagram
Wiri	ng dia	ngram (connector)
Sour	nd blo	ock diagram
Pow	er sou	urce block diagram
Bloc	k dia	gram 22
Sche	emati	c diagram (20″ color)
Sche	emati	c diagram (14″ color)
Mair	n bloc	k diagram

#### **REFERENCE DRAWING**

Fig.	1	Positions of Dip Switches
Fig.	2	Position of Volume Controller Knob 5
Fig.	3	Component Parts Related to Cabinet (Outside) 6
Fig.	4	Circuit Board Mounting Positions
Fig.	5	Side View of Circuit Board Mounting Positions
Fig.	6	Fuses in the Power Source Unit
Fig.	7	Fuses in the Power Circuit Board
Fig.	8	Component Parts Related to Cabinet (Inside)
Fig.	9	Operating Panel Assembly 8
Fig. 1	0	Inside View of Door Assembly 9
Fig. 1	1	Lever Assembly
Fig. 1	2	Component Parts Related to Switches in the Cabinet
Fig. 1	3	Component Parts Related to Cabinet (Outside)
Fig. 1	4	Component Parts Related to Cabinet (Inside)
Fig. 1	5	Fuses in the Power Source Unit
Fig. 1	6	Fuses in the Power Circuit Board
Fig. 1	7	Operating Panel Assembly
Fig. 1	8	Main Circuit Board
Fig. 1	9	Sub-circuit Board (1) 8013-V1 16
Fig. 2	0	Sound Circuit Board 17
Fig. 2	1	Sub-circuit Board (2)

#### - WHEN ORDERING PARTS -

Since each component part is indicated by block, definitely specify both the corresponding Fig. No. and part No. within the Fig. when placing an order for it.

# I. FEATURES OF THIS MACHINE

- 1. The game packs in excellent features capturing the hearts of players.
- 2. The lever control system is simple to handle.
- 3. At the flick of a dip switch, you can select among extended play, the number of LASER SHIPs and time of appearance of an additional LASER SHIP, etc.
- 4. High score for the day is always displayed on the screen.
- 5. Finely disigned cabinet and fascinating acoustic effects.
- 6. The 6 highest scorers can register their name on the screen.


# II. HOW TO HANDLE AND MAINTAIN THIS MACHINE

- Since the UNIVERSAL's DEVIL ZONE employs a color TV receiving set, be careful not to shake it during transit and when carrying it about.
- 2. Install it at a location which is not exposed to direct sunlight. In order to prevent the inside temperature rising, avoid as much as possible a location near a heater, etc.
- 3. Since the grounding terminal is visible, be sure to connect it to a grounding conductor.
- 4. Insert the power cord into the outlet and turn on the switch.
- 5. Even if the solid-state module seems to be out of order, do not check the circuit by means of a circuit tester, etc., since the internal voltage of the tester, etc. may sometimes break down the IC.
- 6. Make sure the machine is well ventiated. If the temperature of the IC and transistor is lower than 60°C, the function normally and may be considered reliable. If it exceeds 60°C, their performance cannot be guaranteed.
- 7. Make sure that the connector, etc. is not disconnected.
- 8. Whenever connecting the power cord of the solid-state module to, or disconnecting it from, the outlet, be sure to turn the power off.
- Although the products of UNIVERSAL are manufactured with the utmost care, they may
  develop malfunctions when used for long periods. So, be sure to chek this machine daily.

^


# III. HOW TO PLAY

- A fleet of space devils floating in the far away space. They will come flying in a four-plane formation to assault you. Destroy them by using your fire beam gun while dodging their missiles or dash.
- 2. When the last plane of the four-plane formation began assaulting while turning, destroy it at as remote a position as possible, and you can score high points.
- 3. Scoring 3,000 pts awards another spaceship.
- 4. The 6 highest scorers can register their name on the screen after the end of the game. By working the lever move the carsor until it reaches under either of the alphabets, numerals and symbols aimed at, and drive it in place by using the fire button.

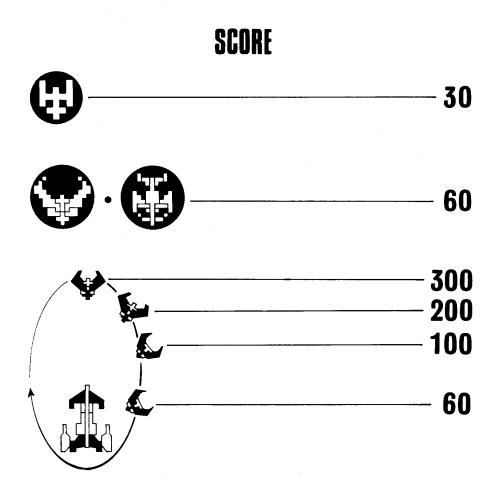

# IV. VARIOUS OPTIONAL SETTINGS (1-way, 2-way common version)

#### A. POSITIONS OF DIP SWITCHES

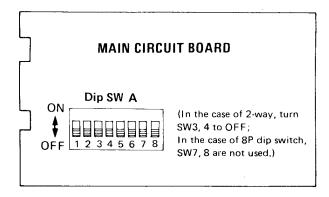

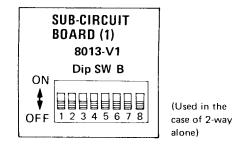


Fig. 1 Positions of Dip Switches

#### **B. SETTING THE OPTION (DIP SWITCHES)**

[Dip Switches A]

1. Change-over setting of the mode of game (SW1)

Style	SW1
Table	OFF
Upright	ON

# 2. Setting the number of LASER SHIPS for game (SW2)

Number of LASER SHIPS	SW2
2 Ships	ON
3 Ships	OFF

# 3. Setting the game charge (Coin & Credit) (SW3, 4)

Coin, Credit	SW3	SW4
1 Coin 1 Credit	ON	ON
1 Coin 2 Credits	OFF	ON
2 Coins 1 Credit	ON	OFF
Set by using		
Dip SW B for	OFF	OFF
2-way chute		

# 4. Setting the required score for an additional LASER SHIP (SW5, 6)

Score for Extra	SW5	SW6
2000 points	ON	OFF
3000 points	OFF	ON
5000 points	OFF	OFF
No extra	ON	ON

#### [Dip Switches B]

\* Used in the case of 2-way chute alone. At that time, be sure to turn SW3, 4 of Dip Switches A to OFF.

#### a. Right chute (SW1, 2, 3, 4)

		,	,		
Coin	Credit	SW1	SW2	SW3	SW4
1	1	OFF	OFF	OFF	OFF
1	2	OFF	OFF	OFF	ON
1	3	OFF	OFF	ON	OFF
11	4	OFF	OFF	ON	ON
1	5	OFF	ON	OFF	OFF
2	1	OFF	ON	OFF	ON
2	2	OFF	ON	ON	OFF
2	3	OFF	ON	ON	ON
3	1	ON	OFF	OFF	OFF
3	2	ON	OFF	OFF	ON
3	3	ON	OFF	ON	OFF
3	4	ON	OFF	ON	ON
4	1	ON	ON	OFF	OFF
4	2	ON	ON	OFF	ON
4	3	ON	ON	ON	OFF
4	4	ON	ON	ON	ON

#### b. Left chute (SW5, 6, 7, 8)

Coin	Credit	SW5	SW6	SW7	SW8
1	1	OFF	OFF	OFF	OFF
1	2	OFF	OFF	OFF	ON
1	3	OFF	OFF	ON	OFF
1	4	OFF	OFF	ON	ON
1	5	OFF	ON	OFF	OFF
2	1	OFF	ON	OFF	ON
2	2	OFF	ON	ON	OFF
2	3	OFF	ON	ON	ON
3	1	ON	OFF	OFF	OFF
3	2	ON	OFF	OFF	ON
3	3	ON	OFF	ON	OFF
3	4	ON	OFF	ON	ON
4	1	ON	ON	OFF	OFF
4	2	ON	ON	OFF	ON
4	3	ON	ON	ON	OFF
4	4	ON	ON	ON	ON

# **UPRIGHT TYPE**

This documentation provides standard information. Universal reserves the right to change without notice.

# VI. UPRIGHT TYPE PARTS CATALOG

#### A. COMPONENT PARTS RELATED TO CABINET (OUTSIDE)


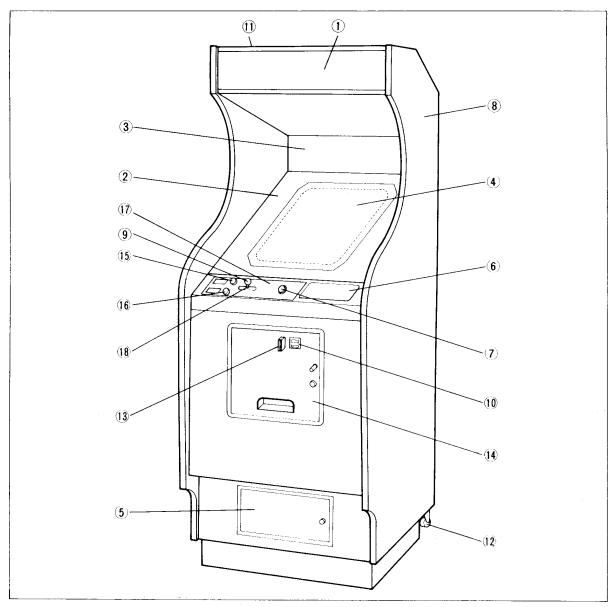


Fig. 3 Component Parts Related to Cabinet (Outside)

#### **OUTSIDE CABINET PARTS LIST**

Ref. No.	Name	Ref. No.	Name
1	Title panel	11	Title panel fixture
2	Illustrated glass A	12	Caster
3	Illustrated glass B	13	Coin slot
4	CRT	14	Main door
5	Cash box door	15	Push button (1 player)
6	Sticker for game rules	16	Push button (2 players)
7	Push button (Fire)	17	Operating indication panel
8	Cabinet proper	18	Control lever (general name)
9	Knob 32-Dim.		
10	Coin indication panel		

#### **B. DRAWING OF CIRCUIT BOARD MOUNTING POSITIONS**

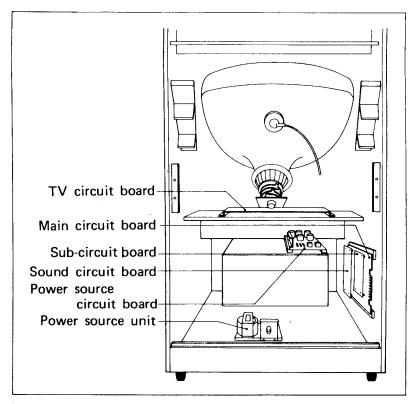

The sound volume can be controlled from this opening.

Before removing the TV monitor, remove the reinforcing lever at the back door.

Main circuit board

Container

Fig. 4 Circuit Board Mounting Positions

Fig. 5 Side View of Circuit Board Mounting Positions

#### C. FUSES

Fuses in the power source unit

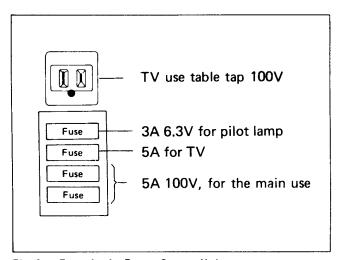


Fig. 6 Fuses in the Power Source Unit

Fuses in the power circuit board

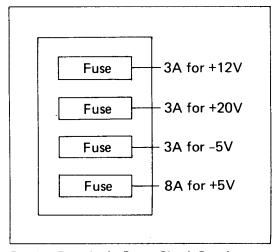


Fig. 7 Fuses in the Power Circuit Board

#### D. COMPONENT PARTS RELATED TO CABINET (INSIDE)

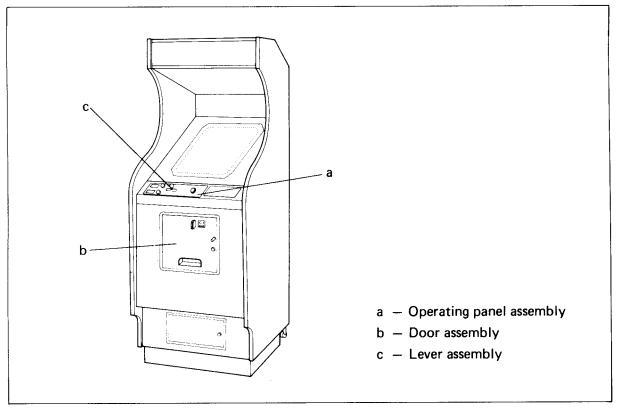


Fig. 8 Component Parts Related to Cabinet (Inside)

#### a) Operating panel assembly

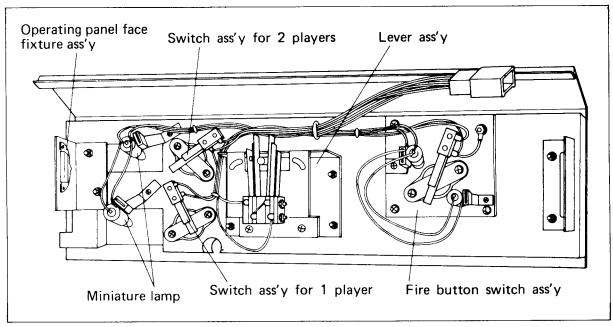


Fig. 9 Operating Panel Assembly

# b) Door assembly and parts list

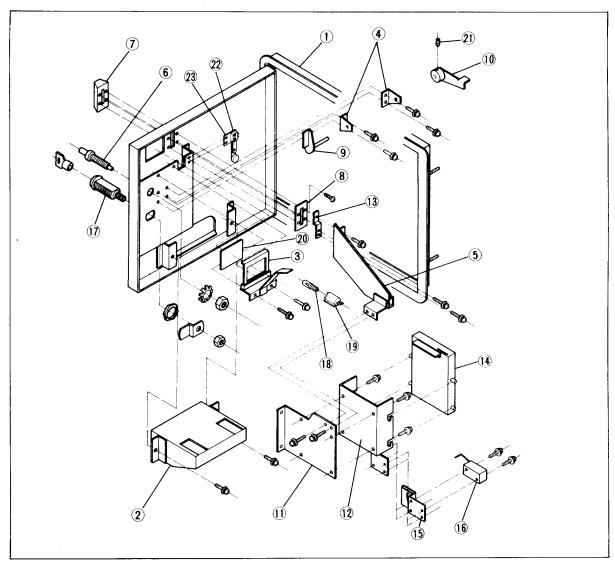


Fig. 10 Inside View of Door Assembly

#### DOOR ASSEMBLY PARTS LIST

Ref. No.	Name	Ref. No.	Name
1	Main door	13	Coin slot shute holder
2	Returning soucer	14	Rejector
3	Lamp & plastic plate bracket	15	Sensor slot
4	Rearing	16	Micro switch
5	Coin slot shute	17	Key sets
6	Returning button	18	Miniature lamp
7	Coin slot	19	Miniature lamp socket
8	Slot plate	20	Coin indication panel
9	Transmission shaft	21	Hexagon socket head screw
10	Rotary bracket	22	Slam switch
11	Rejector bracket	23	Slam switch holder
12	Rejector case		

## c) Lever assembly and parts list

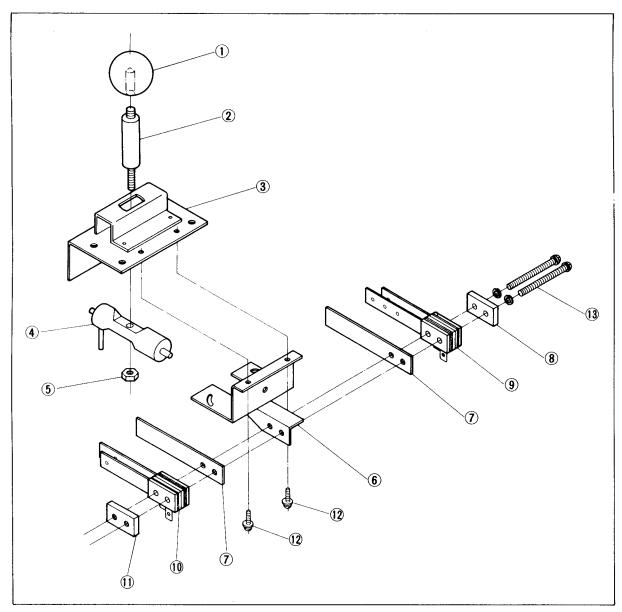


Fig. 11 Lever Assembly

#### LEVER ASSEMBLY PARTS LIST

Ref. No.	Name	Ref. No.	Name
1	Knob 32-Dim.	8	Spring holder
2	Lever shaft	9	Blades switch
3	Lever guide & stopper	10	Blades switch
4	Transmission bar	11	Spring holder with nut
5	Nut with stopper	12	Bolt
6	Switch bracket	13	Bolt
7	Spring		

#### E. COMPONENT PARTS RELATED TO SWITCHES IN THE CABINET

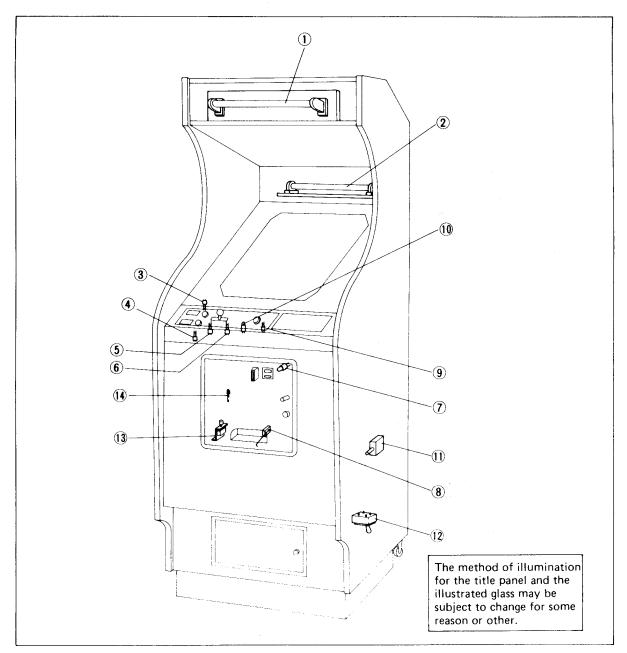


Fig. 12 Component Parts Related to Switches in the Cabinet

#### **INSIDE CABINET PARTS LIST**

Ref. No.	Name	Ref. No.	Name
1	Fluorscent lamp assembly	8	Micro switch
2	Fluorscent lamp assembly	9	Blades switch
3	Blades switch	10	Miniature lamp assembly
4	Blades switch	11	Door switch
5	Blades switch	12	Toggle switch
6	Blades switch	13	Micro switch
7	Miniature lamp assembly	14	Slam switch

# TABLE TYPE

This documentation provides standard information. Universal reserves the right to change without notice.

# VII. TABLE TYPE PARTS CATALOG

#### A. COMPONENT PARTS RELATED TO CABINET (OUTSIDE)

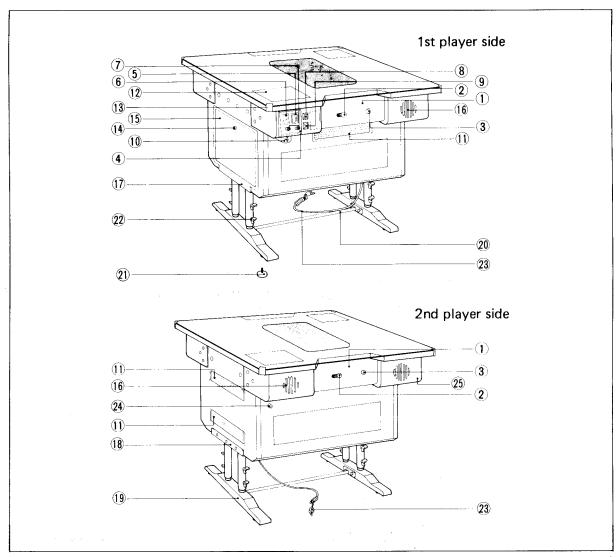


Fig. 13 Component Parts Related to Cabinet (Outside)

#### **OUTSIDE CABINET PARTS LIST**

Ref. No.	Name	Ref. No.	Name
1	Operating indication illustrated panel	13	Glass fittings
2	Control lever	14	Cash box door key
3	FIRE button	15	Cash box door
4	Coin slot frame	16	Speaker (x2)
5	Selector plate (1)	17	Leg (left)
6	Selector plate (2)	18	Leg (right)
	[not used in case of 1-way]	19	Foot
7	Cancel button	20	Foot support
8	Push button ass'y (for 1 player)	21	Leg adjuster
9	Push button ass'y (for 2 players)	22	Thumbscrew (x8)
10	Cancel coin receptacle	23	Power cord (AC)
11	Ventilating panel (x3)	24	Door key
12	Sticker for game rules (x2)	25	Cabinet corner box

# B. COMPONENT PARTS RELATED TO CABINET (INSIDE)

#### a) Inside cabinet

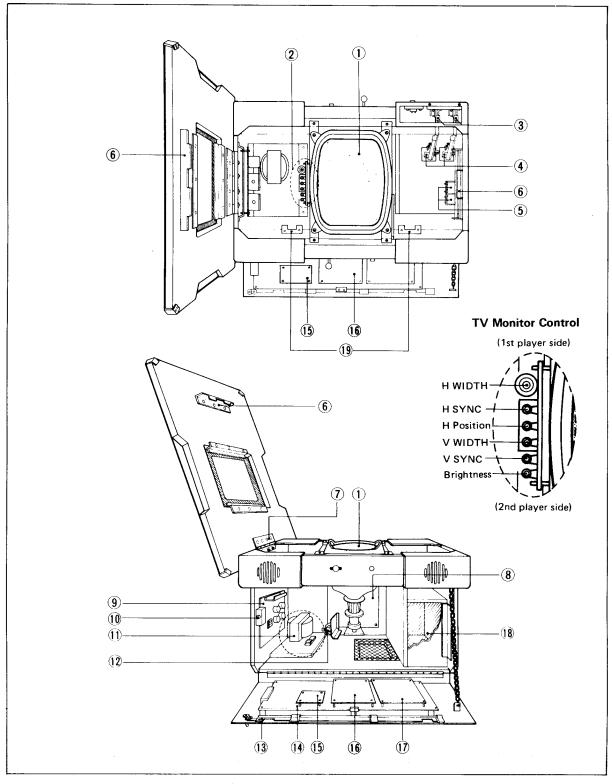


Fig. 14 Component Parts Related to Cabinet (Inside)

#### **INSIDE CABINET PARTS LIST**

Ref. No.	Name	Ref. No.	Name
1	CRT (14" color)	11	Power source unit
2	TV monitor control	12	Demagnetization switch
3	Rejector ass'y	13	Door lock ass'y
4	Coin micro switch	14	Main circuit board
5	Coin counter	15	Sub-circuit board (1) 8013-V1
6	Table lock mechanism ass'y	16	Sub-circuit board (2)
7	Butterfly plate ass'y	17	Sound circuit board
8	TV monitor circuit board	18	Cash box
9	Power source circuit board	19	Metal door fixture
10	Door switch		

#### b) Fuses

#### Fuses in the power source unit

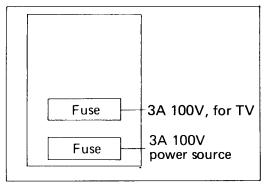


Fig. 15 Fuses in the Power Source Unit

#### Fuses in the power circuit board

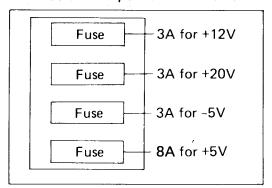


Fig. 16 Fuses in the Power Circuit Board

#### c) Operating panel assembly

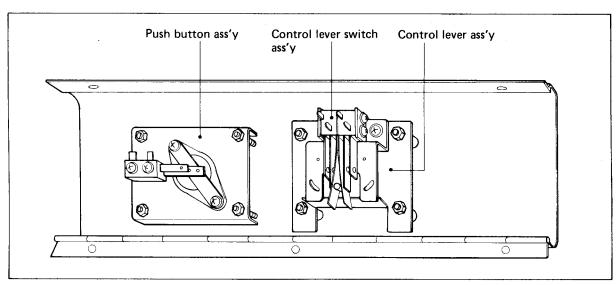


Fig. 17 Operating Panel Assembly

# VIII. CIRCUIT BOARD

#### A. CIRCUIT BOARD IC LOCATION AND PARTS LIST

a) Main circuit board IC location and parts list

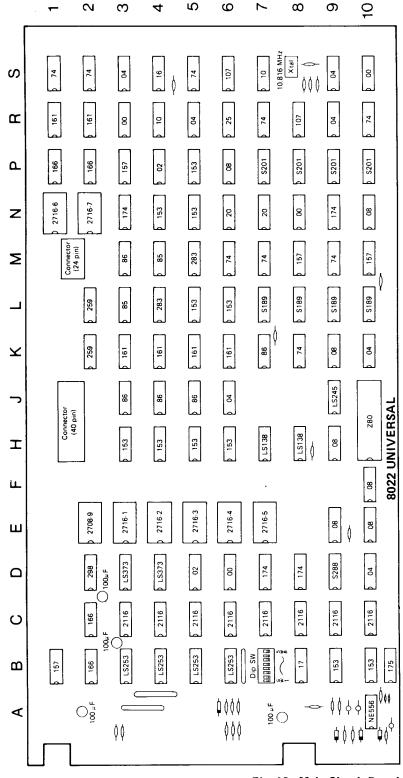


Fig. 18 Main Circuit Board

#### [1] Integrated Circuit

1) Integrated Circuit				
Item No.	Q'ty	Description		
7400N	4	Transistor Logic		
7402N	2	"		
7404N	7	"		
7408N	7	"		
7410N	2	"		
7416N	1	"		
7417N	1	"		
7420N	2	"		
7425N	1	"		
7474N	9	"		
7485N	2	"		
7486N	5	"		
74107N	2	"		
74S138N	2	"		
74153N	11	"		
74157N	4	"		
74161N	6	"		
74166N	4	"		
74174N	4	,,		
74175N	1	"		
74S189N	4	64 bits Bipolar RAM		
74S201N	4	256 bits Bipolar RAM		
74LS245N	1	Transistor Logic		
74LS253N	4	"		
74259N	2	"		
74283N	1	"		
74S288N	1	256 bits Bipolar ROM		
74298N	1	Transistor Logic		
74LS373N	2	"		
2116	8	Nch MOS 16K bits Dynamic		
		RAM		
2708	1	Nch MOS 8K bits EPROM		

Item No.	Q'ty	Description
2716	8	Nch MOS 16K bits EPROM
Z80	1	Nch MOS CPU
NE556	1	Transistor Logic

#### [2] Other Semiconductor Devices

Item No.	Q'ty	Description
10D1	4	Diode

#### [3] Capacitors

Rating	Q'ty	Description
100PF/12V	1	Ceramic Capacitor
150PF/12V	1	"
0.1μF/12V	55	"
1μF/50V	1	Chemical Capacitor
10μF/16V	2	"
100μF/25V	4	,,

#### [4] Resistors

Rating	Q'ty	Description
MS1028AM	3	1KΩ Resistor Array
10Ω 1/4W	3	Carbon Solid Resistor
47Ω "	3	"
270Ω "	3	"
330Ω "	1	"
510Ω "	3	"
1ΚΩ "	8	"
4.7ΚΩ "	1	"
47ΚΩ "	2	"

#### [5] Misc

Name	Q'ty	Description
Dip SW	1	8 Elements Switch Array
X'-tal	1	10.816MHz

## b) Sub-circuit board (1) 8013-V1 IC location and parts list

(Used in the case of 2-way alone)

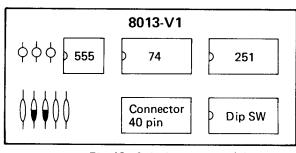


Fig. 19 Sub-circuit Board (1) 8013-V1

#### [2] Other Semi Conducter Devices

Item No.	Q'ty	Description
10D1	2	Diode

#### [3] Capacitors

Rating	Q'ty	Description
0.1μF/12V	4	Ceramic Capacitor
1μF/50V	1	Chemical Capacitor

#### [4] Registors

Rating	Q'ty	Description
MS1028AM	1	1kΩ Registor Array
47Ω	1	Carbon Solid Registor
1kΩ	1	"
47kΩ	1	,,

#### [1] Integrated Circuit

Item No.	Q'ty	Description
7474N	1	Transistor Logic
74251N	1	"
NE555	1	Timer

#### [5] Misc

Name	Q'ty	Description
Dip SW	1	8 elements Switch Array

#### c) Sound circuit board IC location and parts list

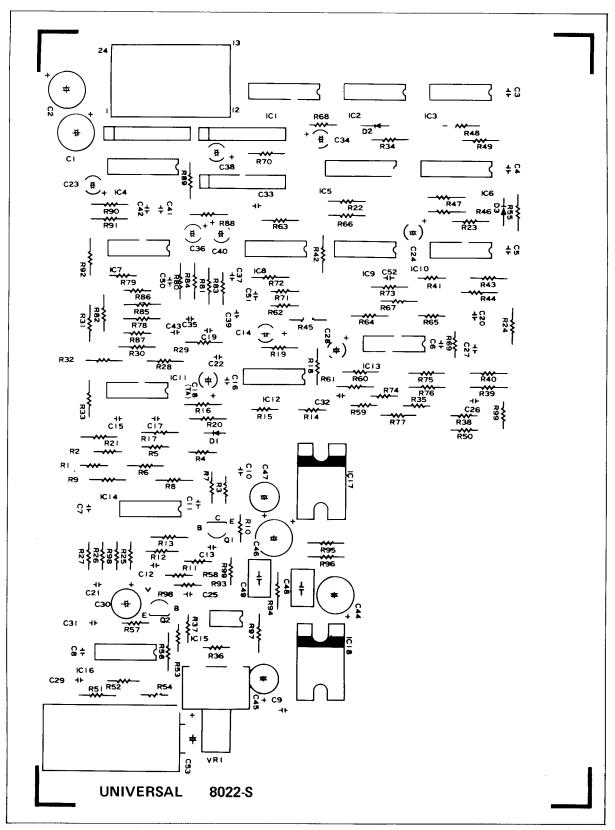


Fig. 20 Sound Circuit Board

Location	Dating	Description	Transit I	B	1 5		T = :-	
R1	Rating 1K	Carbon solid resistor	Location 72	Rating 51K	Description	Locatio		Description
2	1K	","	73	100K	Carbon solid resistor	35	0.1μF	Ceramic
3	1M	,,	74	100K	- ,,	36	4.7μF	Chemical
4	1K	,,	75	100K		<u> </u>	16V	Na:i-
5	100K	"	76	100K	,,,	37	0.047μF	Mila
6	1K	,,	77	220K	,,	39	2.2µF	Chemical
7	100K		78	100K	.,	40	0.1μF	Ceramic
8	1K		79	100K	,,	40	1μF	Chemical
9	1M	- ,,	80	100K	,,	<del>                                   </del>	16V	
10	51K	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	81	100K	***	41	0.1μF 0.022μF	Ceramic Mila
11	51K		82	120K	"	43	0.022µF	Willa
12	100K		83	100K	"	44	100µF	Chemical
13	1M	,,	84	100K	,,	***	16V	Chemical
14	1K	"	85	100K	,,	45	47µF	
15	470K	"	86	100K	"	43	16V	
16	100K	,,	87	220K	"	46	100µF	"
17	100K	""	88	100K	"	~~	16V	
18	120K	"	89	51K		47	47µF	,,
19	1K	***	90	100K	"		16V	
20	100K	,,	91	100K		48	0.068μF	Mila
21	100K	"	92	220K	.,	49	0.068µF	"
22	100K	"	93	10K	"	50	0.01µF	"
23	100K	"	94	2.2K	"	51	2200pF	"
24	1K	"	95	4.7Ω	"	52	0.015µF	,,
25	100K	"	96	1.5Ω	"	53	1000μF	Chemical
26	10K	11	97	1.5Ω	"		16V	
27	10K	"	98	10K	"	54	0.047µF	Ceramic
28	10K	"	99	22K	"			
29	100K	",				<b>_</b>		<b></b>
30	100K	"	C1	100µF	Chemical	Loca-	Item No.	Description
31	100K	"		16V		tion		·
32	100K	"	2	100μF	"	Q1	2SC945	N-P-N Transistor
33	100K			25V		2		<u> </u>
34	100K	"	3	0.1μF	Ceramic	L		T
35	10K	"	4	0.1µF	"	D1	1S1588	Switching Diode
36	1K	.,	5	0.1μF	"	3		
37	75K	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	6	0.1µF	,,	RB1	1401020 414	10ΚΩ
38	100K 51K		7	0.1µF	.,,	RBI	MS1038AM	
39 40	100K	,,	8	0.1µF	"	2		Resistor Array
41	100K	"	9	0.1μF	,,	3	,,	"
42	220K	"	10	0.1μF	,,	<u> </u>		
43	220K	"	12	0.1μF 0.022μF	Mila	VR1	RV16YP	1ΚΩ(Β)
45	220K	- ,,	13	0.022μΓ	Ceramic	* ' ' '		Variable Resistor
46	100K	,,	14	1μΕ	Chemical	<del>                                   </del>		Variable resistor
47	51K	,,	'*	16V	Citerinical	IC1	ULN2003AN	Darlington
48	24K	,,	15	0.1μF	Ceramic		0 2 11 2 0 0 0 1 11 1	Transistor Array
49	12K	,,	16	0.01μF	Mila	2	CD4011CN	Quad 2-Input
50	1K		17	6800pF	"			NAND Gate
51	1K		18	0.22μF	Tantalum	3	CD4013CN	Dual D Flip Flop
52	51K	"	19	0.022µF	Mila	4	ULN2003AN	Darlington
53	10K	"	20	Not Used				Transistor Array
54	330K	"	21	0.1μF	Ceramic	5	CD4049CN	Hex Inverting Buffer
55	10K	"	22	0.1µF		6	CD4040CN	14-Stage Binary
56	1K	"	23	1μF	Chemical			Counters
57	100K			16V	[	7	LM324N	Quadruple Operational
58	100K	11	24	10μF	"			Amplifiers
59	100K	11		16V	<u> </u>	8	NE556N	Dual Timer
60	100K	"	25	4700pF	Mila	9	CD4016CN	Quad Bilateral Switch
61	100K	"	26	0.1μF	Ceramic	10	LM324N	Quadruple Operational
62	1K	"	27	0.022µF	Mila			Amplifiers
63	51K	,,	28	10μF	Chemical	11	LM324N	"
64	100K	,,		16V		12	NE556N	Dual Timer
65	100K	"	29	0.01µF	Mila	13	LM324N	Quadruple Operational
66	330K	"	30	22μF	Chemical			Amplifiers
67	75K	"		16V		14	LM324N	· · · · · · · · · · · · · · · · · · ·
68	100K		31	0.01μF	Mila	15	NE555N	Timer
69	100K	"	32	470pF	Ceramic	16	LM324N	Quadruple Operational
70	100K	"	33	3300pF	Mila		DC1404::	Amplifiers
71	1K		34	1μF	Chemical	17	μPC1181H	Power Amplifier
			1	16V	1	18	μPC1181H	1

#### d) Sub-circuit board (2) IC location and parts list

#### [1] Integrated Circuit

Item No.	Q'ty	Description
7400N	1	Transistor Logic
7404N	1	"
7486N	1	,,
74153N	1	"
74161AN	2	"
74166N	4	"
191N	3	,,
S288N	1	256 bit Bipolar ROM
LS393N	1	Transistor Logic
2716	1	Nch Mos 16K bit EP ROM

#### [2] Capacitors

Rating	Q'ty	Description
0.1μF/12V	7	Ceramic Capacitor

#### [3] Resistors

Rating	Q'ty	Description
MS1028M	1	1KΩ Rogstor Array



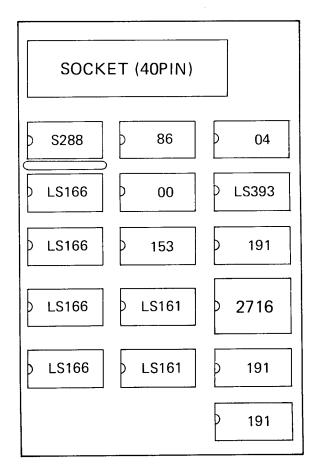


Fig. 21 Sub-circuit Board (2)


#### SUB-CIRCUIT BOARD (2) BLOCK DIAGRAM

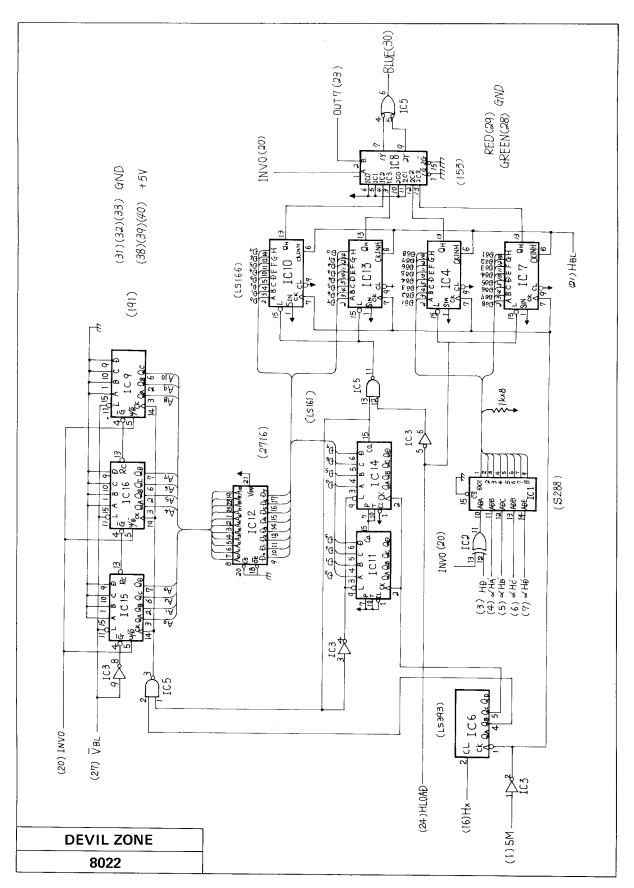


#### WIRING DIAGRAM (CONNECTOR)

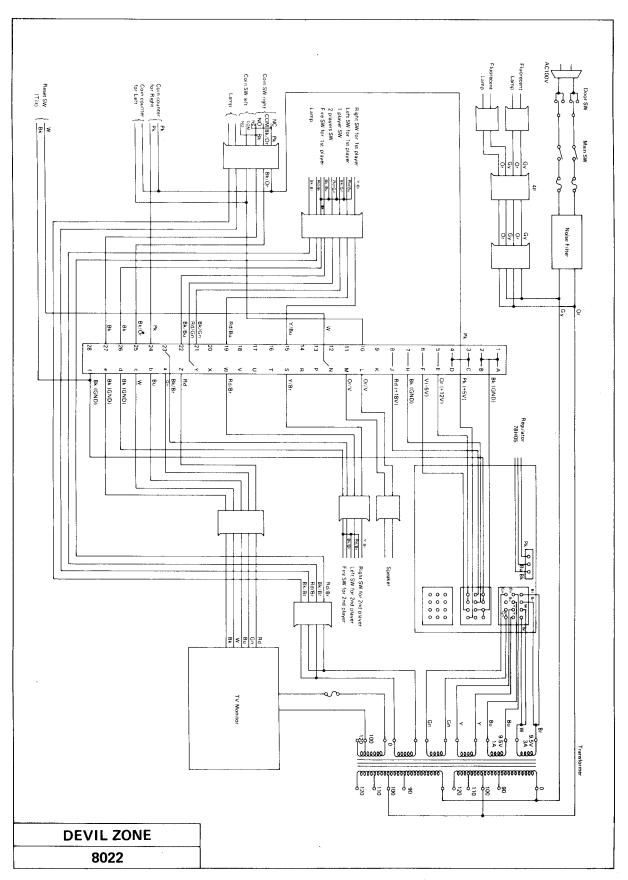


#### **SOUND BLOCK DIAGRAM**

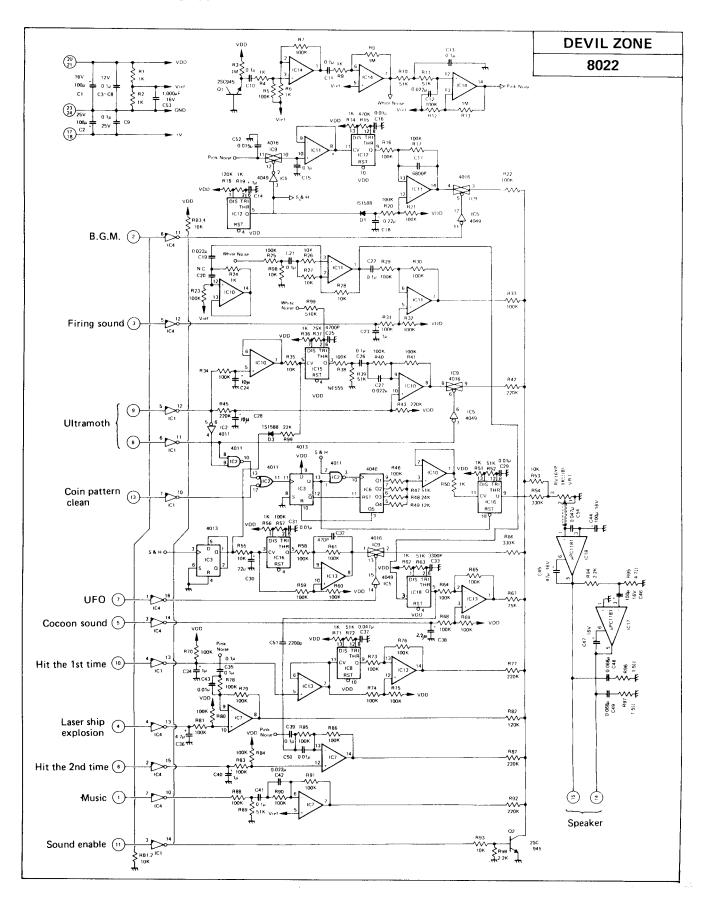


#### POWER SOURCE BLOCK DIAGRAM

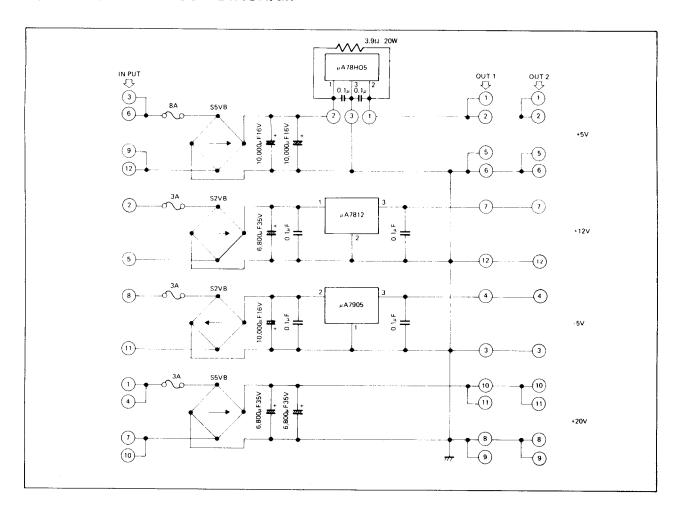



#### **BLOCK DIAGRAM**

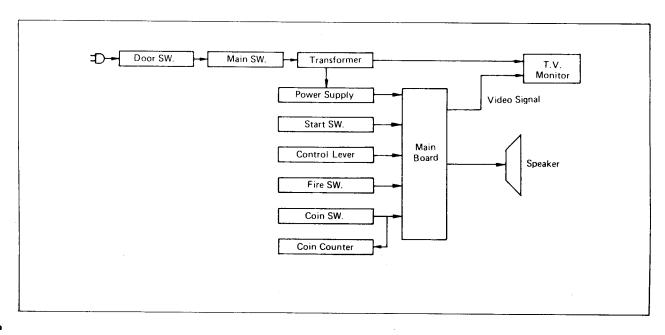

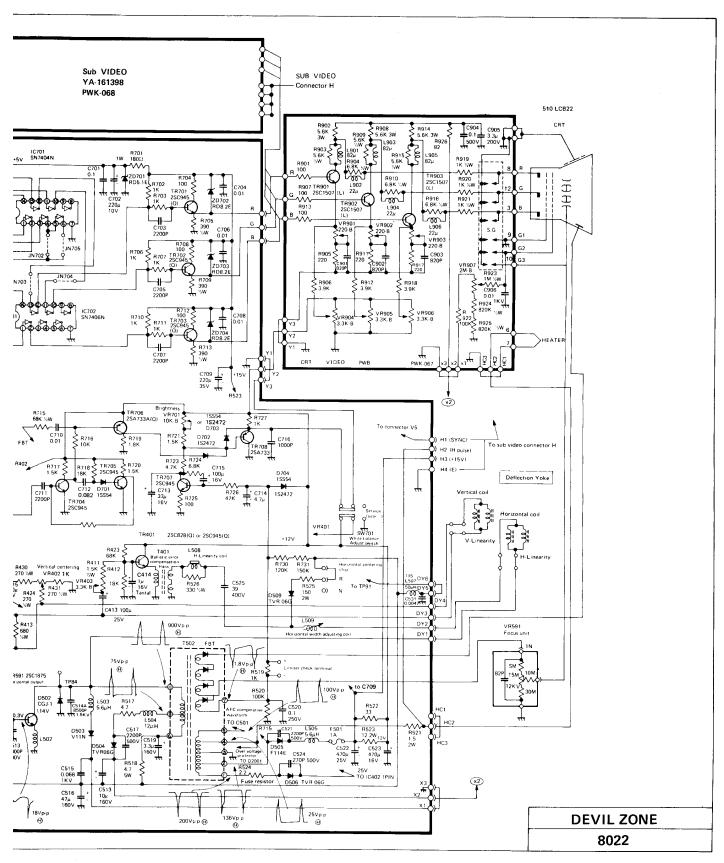

#### 3CHEMATIC DIAGRAM (20" color)

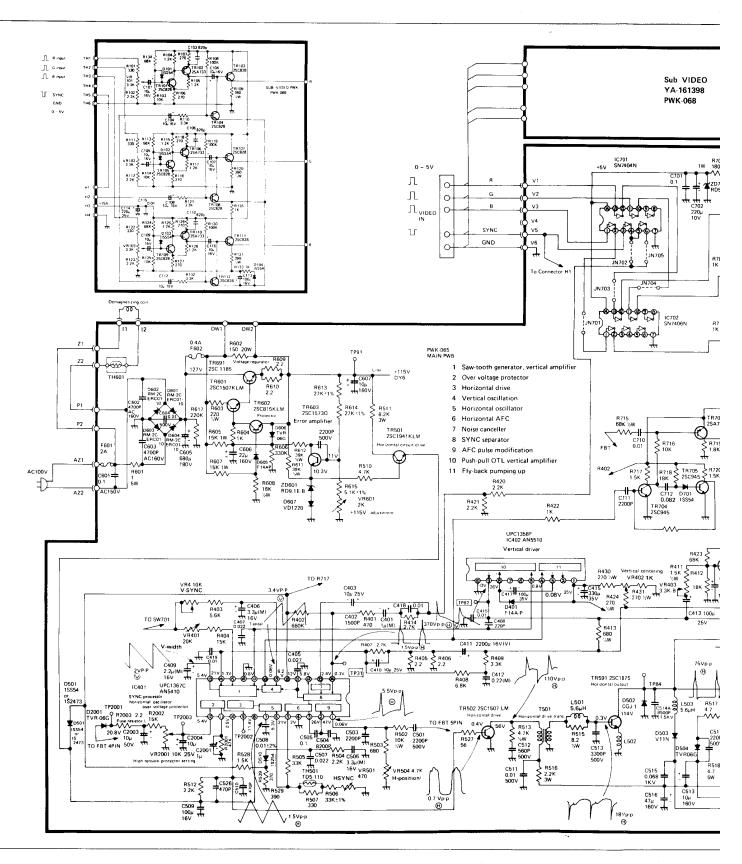

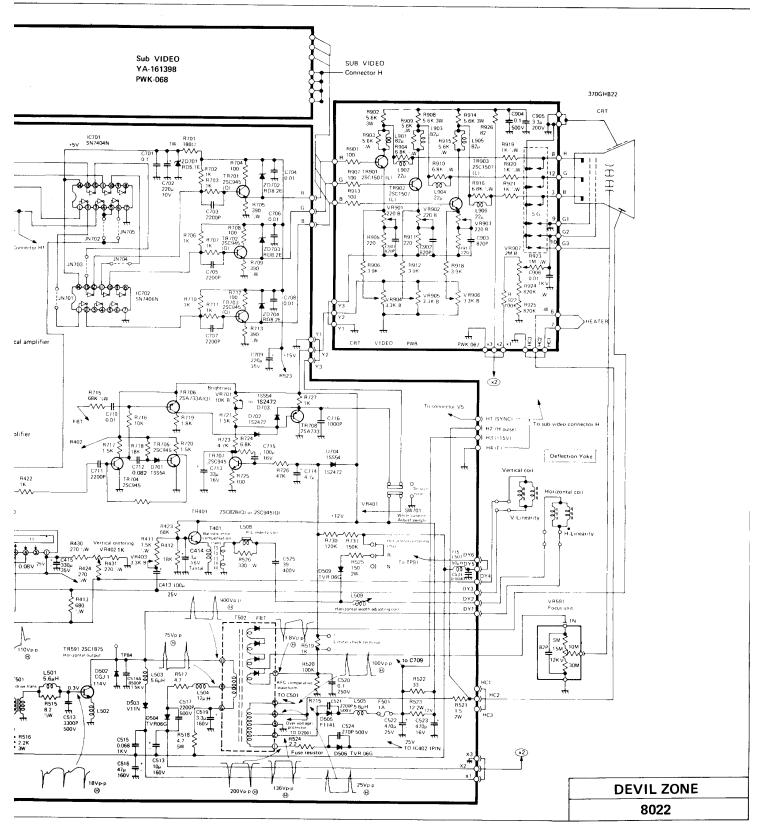

#### SCHEMATIC DIAGRAM (14" color)

