

EZP2019 programmer manual features

Product picture:



Field of application:

This programmer can read and write the bios chips of DVD,TV,PC,harddisk,etc.

Features:

1. USB 2.0 interface, the speed is 12Mbps.
2. The speed of reading and writing is fast.
3. Auto detect chip modes.
4. Auto select power voltage.
5. Support 25 FLASH, 24 EEPROM, 25 EEPROM, 93 EEPROM, etc.
6. Small shape.
7. Windows XP, Windows Vista, Win7, WIN8, WIN10.

List:


1. Programmer 1
2. Usb cable 1
3. CD 1
4. Manual(a file on CD) 1
5. Simple socket for SMD chips 2

[EZP2019 programmer manual](#)
[driver setup](#)


There are two usb device driver files: installer_x64.exe or install_x86.exe
Run the "*.exe"; The step of usb driver setup is same as other usb devices.

EZP2019 programmer manual software setup

No need to install, please run the *.exe program.

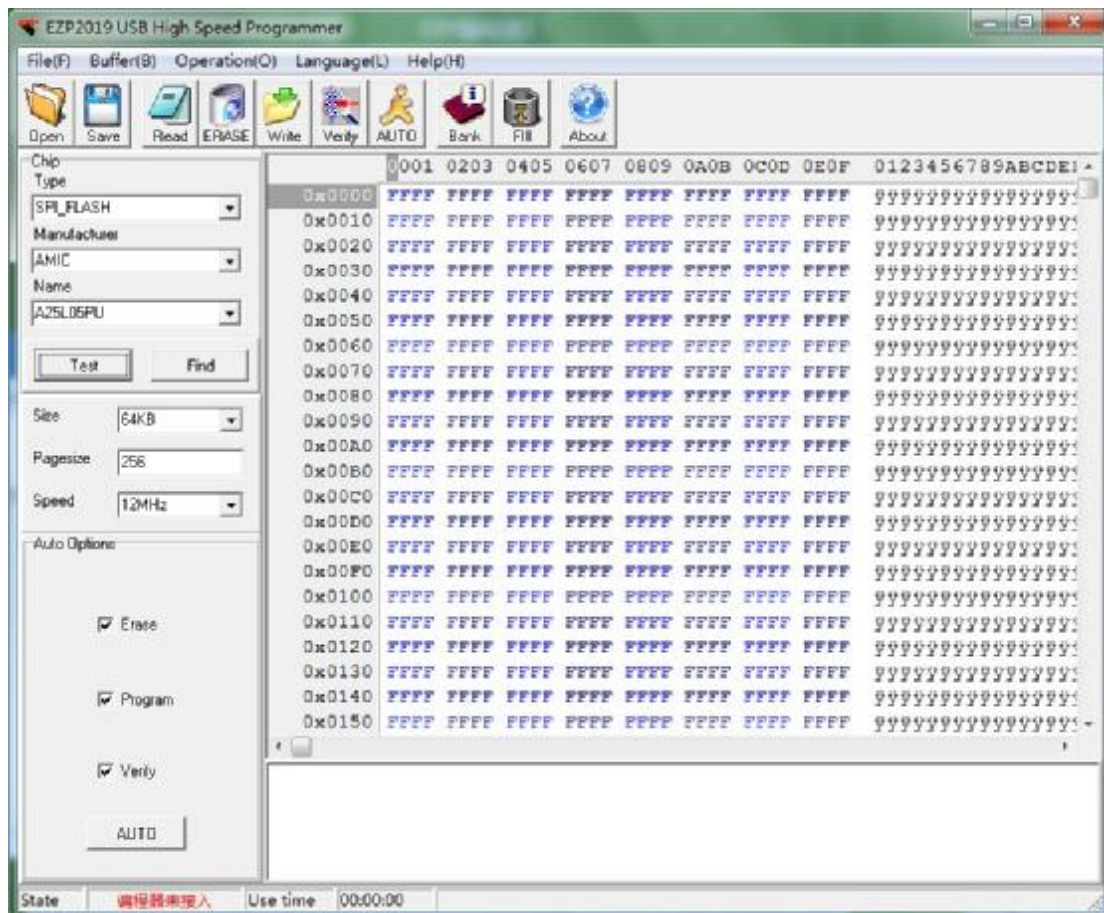


EZP2019 programmer manual select chip

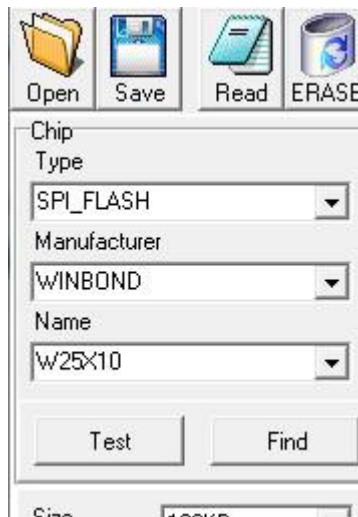

User can select chip mode from "Type", "Manu" and "Chip" combobox.

User can click "Search" to select chip mode too.

[EZP2019 programmer manual](#)
[search chip](#)

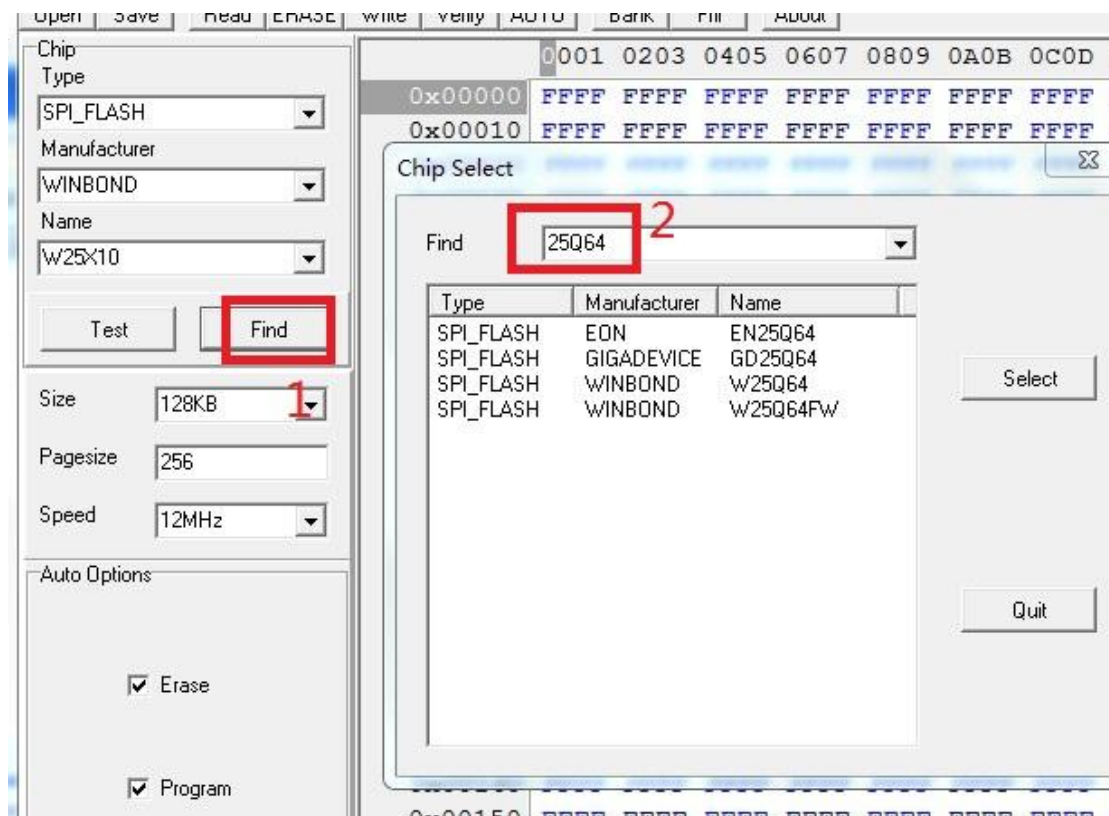

Click "find", then pop the above dialog, enter the keyword, the matched chips will be listed in the listbox.

[EZP2019 programmer manual](#)
[detect chip](#)



Click "Detect", the software will pop a messagebox to show chip name.


The programmer only can detect 25 series spi flash.

Note: Some 8M or more chips are detect ID unstable. recommended to select the chip manually. In addition, if some errors when reading and writing, please to lower the speed(see the picture below).



EZP2019 programmer manual


open file

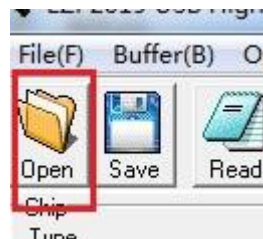

Click "OPEN",

Load data to buffer from a bin file or a hex file.

EZP2019 programmer manual save file

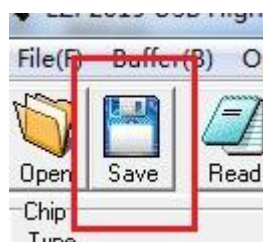

Save data to a bin file from buffer.

EZP2019 programmer manual edit

0x00020	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x00030	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x00040	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x00050	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x00060	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x00070	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x00080	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x00090	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x000A0	FFFF	AACD	EEEE	FFFF	FFFF	FFFF	FFFF	FFF
0x000B0	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x000C0	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x000D0	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x000E0	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x000F0	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF
0x00100	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFF

User can change data in buffer.

EZP2019 programmer manual erase chip

One 25 flash must be erased before writing.

No need to erase one 24 eeprom before writing.

No need to erase one 93 eeprom before writting.

[EZP2019 rogrammer manual](#)
[read chip](#)

Read data to buffer from chip.

[EZP2019 rogrammer manual](#)
[write chip](#)

Write data to chip from buffer.

[EZP2019 rogrammer manual](#)
[verify chip](#)

Compare the data in chip to the data in buffer.

It's necessary to execute the verify command after writting.

[EZP2019 rogrammer manual](#)
[auto](#)

Erase, write and verify.

[EZP2019 ogrammer manual](#)
[FAQ](#)

1. Verify error.

(1)User must select a correct chip modle before writting.

(2)User must erase chip before writting if che chip is a 25 flash.

(3)User must select a correct memory unit width if che chip is a 93 eeprom.

(4)The chip maybe bad.

2. Chip position when reading and writting.

(1)If the programmer is linked to PC, the chip must be placed in the socket as below:

3. Automatically detect chip modle unsuccessful.

See the section "detect chip" in this document.

4. The simple SMD socket.

