Redpitaya: first Vivado project example, using the RF ADC and DAC

G. Goavec-Mérou

December 19, 2019

This documents aims at providing basics on:

- creating a basic Vivado project and the associated block design,
- adding IP and connections between these processing blocks as well as towards the FPGA pins,
- generating the bitstream,
- converting the bitstream to a format usable with GNU/Linux and configuring the FPGA.

This presentation will aim at connecting the Redpitaya radiofrequency ADC output to the DAC input (Fig. 1).

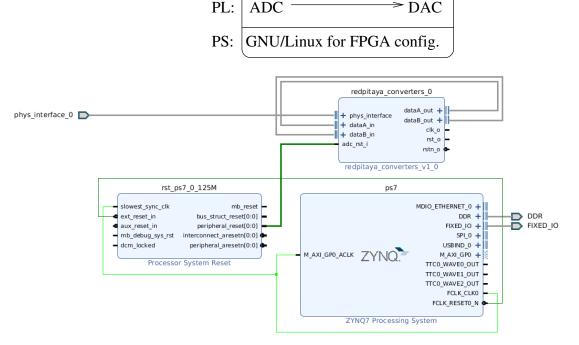


Figure 1: Objective of the tutorial (top) and block design (bottom) including the processor, and the combined ADC/DAC block including clocking circuit.

1 Creating the design

Creating a new design for the Redpitaya requires configuring a project for the Zynq 7010 embedded on the board (Figs. 2, 3, 4 and 5): despite not being defined in Xilinx Vivado, we provide manually the proper Zynq declination instead of the platform settings (Fig. 4).

Such a result is achieved by selecting a RTL Project so that all additional configurations are performed manually. The option *Do not specify sources at this time* prevents Vivado from asking the list of source files at the creation of the project (Fig. 3).

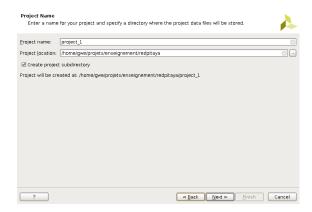


Figure 2: Selecting the project name and storage location

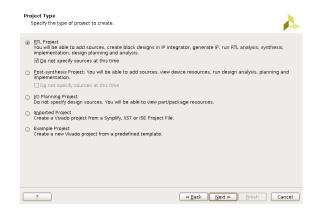


Figure 3: Selecting the project type.

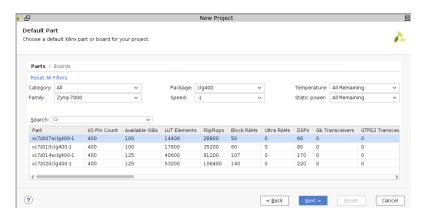


Figure 4: Selecting the Zynq SOC type: the Redpitaya is fitted with a xc7z010clg400-1 model of the Zynq, hence a Zynq-7000 in a "clg400" package, and a speed grade set to -1.

2 Creating the block design

The classical approach offered by Vivado is to assemble blocks graphically: while we shall depart later from this approach for large designs, we will use it for the smaller designs of the first tutorials. Assembling IPs graphically is achieved using the *block design* tool.



Figure 5: Fenêtre récapitulative.

In the left menu, double click on *Create Block Design*. Selecting the design name does not really matter but will define the final bitstream name: for consistency sake we advise to use the same name than the name of the project.

The first item to be added is the *processing system* (representing CPU in the block design). Such a result is achieved by displaying (CTRL + i shortcut) a window allowing for the selection of all available IPs. In the list, add ZYNQ7 Processing System (search keyword zynq). Failing to add this IP, even if not needed, will result in a system freeze when configuring the FPGA from GNU/Linux.

Once this block has been added, a green horizontal bar appears with the text Run Block Automation. Running this option will route the few mandatory connections.

At the beginning of a project creation block design has no knowledge of the Redpitaya hardware configuration (amount of RAM, peripherals ...): defining such a configuration of the processing system is needed for further work. Such a result is achieved by double-clicking on the processing system block: on top of the newly created window, in the Presets menu, select Apply configuration and load the configuration file redpitaya.tcl (or redpitaya16.tcl for the 16-bit Redpitaya version 1) found in the red_vivado_support directory of the https://github.com/trabucayre/redpitaya/repository, or locally at

/somewhere/oscimpDigital/fpga_ip/preset/redpitaya.tcl.

3 Configuring Vivado to use custom IPs

Tools \rightarrow Settings \rightarrow IP \rightarrow Repository \rightarrow + and add somewhere/oscimpDigital/fpga_ip. This operation is completed only once on a given Vivado installation, when accessing for the first time the custom IPs provided by the OscImp project.

4 Inserting a new block in Vivado

Handling ADC, DAC and the associated clocking circuitry is being taken care of by a single processing block: redpitaya_converters. This block is designed to handle the legacy 14-bit Redpitaya as well as the newer 16-bit Redpitaya.

Since this design will not allow communicating with the PS, some blocks that will be used later are not added, such as the axi interconnect and the Processor System Reset. The latter

¹In case of the 16-bit Redpitaya, we wish to echo the 16-bit ADC measurement to the 14-bit DAC. A bit-shift – https://github.com/oscimp/oscimpDigital/blob/master/doc/IP/shifter.md – to the right by two bits is necessary to match data bus sizes. This shifter is automatically inserted when generating the Vivado project from the TCL script found in the design directory.

block is however mandatory in the current case since it handles reset signals. Hence, having again hit CTRL + i, select *Processor System Reset* (search keyword reset). Now connect the redpitaya_converters adc_rst_i input to the proc_sys_reset output named peripher_reset.

5 Connecting blocks to the FPGA pins

The block describing the ADC, DAC and internal signals must be connected to the FPGA pins (Fig. 1).

Exporting a signal to the outer world is achieved by using the *make external* command obtained by selecting a given signal on a block (the line and its name should turn brown) and right-mouse click, or using the shortcut CTRL + t: apply this command to the phys_interface of the redpitaya_converters block.

The make external command we have just used (CTRL+t shortcut) has exported each signal and now requires defining which of the FPGA pins they are connected to. Such constraints are defined by dedicated files with the .xdc extension. For the IP we have used in this design, these files are provided in the sub-directory with the IP name in the repository and must be added:

- in the Sources tab on the left of the schematic, unwrap Constraints and right-click on constrs_1 (Fig. 6) and select Add Sources
- Add or create constraints;
- using the "+" button, Add Files and select the xdc files
 - redpitaya_converters.xdc must alway be selected;
 - add either redpitaya_converters_adc.xdc or redpitaya_converters_adc16.xdc depending whether the legacy (14-bit) or newer (16-bit) Redpitaya is used

located in the IP directories of the oscimpDigital/fpga_ip repository.

• before validating with Finish, select *Copy constraints files into project*, otherwise the project will refer to the repository file using absolute paths, preventing the use of the project if moved to another computer or directory (collaborative work).

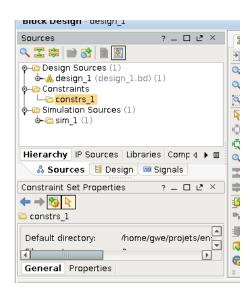


Figure 6: Adding constraints for mapping signals to FPGA pins.

6 Bitstream generation

The project is now completed, but prior to generating the bitstream a last step is mandatory: creating a wrapper whose function is to assemble the various HDL source codes. This file also provides the top file of the design.

Such a result is achieved by right-clicking in the Sources tab the name of the block design (Fig. 7) and selecting Create HDL Wrapper. Having completed this step, we click on Generate Bitstream in the lower left part of the Vivado graphical interface.

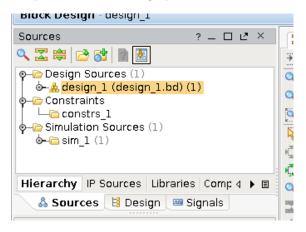


Figure 7: Creating the wrapper (top of the design) needed to generate the bitstream

7 Signed bitstream and FPGA configuration

The previous steps have ended with the generation of a .bit located in the project_name/project_name.runs/impl_1 directory and called project_name_wrapper.bit

7.1 Creating the encrypted bitstream

The default file format of the bitstream generated by Vivado is a .bit file. The driver allowing to configure the PL from GNU/Linux requires a specific format including a dedicated header. Converting from one format to another is achieved by using the bootgen tool provided by the Vivado SDK.

```
This tool expects a configuration file with a .bif extension and filled with all:

{
    bitstream_name.bit
}
    so that the following command is executed
bootgen -image bif_file.bif -arch zynq -process_bitstream bin
```

Following this command, a file named bitstream_name.bit.bin is generated in the current working directory.

7.2 Configuring the PL by using fpga_manager

GNU/Linux provides a homogeneous framework for configuring the FPGA of SoC chips: fpga_manager. This framework expects the .bit.bin file to be located in the /lib/firmware of the target platform.

Once the file is in the right location, the driver must be informed that the FPGA must be configured and which bitstream to use:

```
echo "bitstream_name.bit.bin" > /sys/class/fpga_manager/fpga0/firmware
which results in
fpga_manager fpga0: writing bitstream_name.bit.bin to Xilinx Zynq FPGA Manager
being displayed in the console or in /var/log/syslog and the LED (blue on the Redpitaya
platform) connected to Prog done will be lit.
```

7.3 Using the devicetree overlay for PL configuration

The devicetree overlay provides an alternative solution for configuring the FPGA in which all necessary resources – driver name, address space and bitstream name – are referenced in a single file and communicated to the kernel module. For the purpose of this design, this solution is oversized but offer a coherent approach with next tutorials, where Axi based IPs are used.

Similar to the previous method, the bitstream must be located in /lib/firmware.

Without getting in the details of the devicetree overlay format, the following code aims at modify fpga_full node, defined at board's default devicetree, to provide, through attribute firmware-name, the bitstream name.

```
/dts-v1/;
/plugin/;
/ {
    compatible = "xlnx,zynq-7000";
    fragment@0 {
        target = <&fpga_full>;
        #address-cells = <1>;
        #size-cells = <1>;
        --overlay__ {
            #address-cells = <1>;
            #size-cells = <1
```

This file is compiled by using the following command /somewhere/buildroot/output/host/bin/dtc -@ -I dts -O dtb -o \${FILENAME}.dtbo \${FILENAME}.dts in which

- -@ requires generating symbols that will be dynamically linked when loaded,
- -I dts defines the format of the input file,
- -O dtb defines the format of the output file,
- -o the name of the generated file.

Loading this file in memory is achieved in two steps:

1. creating a directory hosting our overlay mkdir /sys/kernel/config/device—tree/overlays/myname

will create a directory automatically filled with the files needed to communicate with the driver

```
redpitaya> ls -l /sys/kernel/config/device-tree/overlays/myname/
total 0
-rw-r--r-- 1 root root 0 Jan 1 00:04 dtbo
-rw-r--r-- 1 root root 4096 Jan 1 00:04 path
-r--r--1 root root 4096 Jan 1 00:04 status
```

2. loading the overlay in the devicetree:

```
{\it cat~gpio\_red.dtbo} > /{\it sys/kernel/config/device-tree/overlays/myname/dtbo}
```

will configure the PL by transferring the bitstream, insert, if needed, the associated module driver as defined by the "compatible" field which must be filled with a matching string in the driver.

Returning to a state where the overlay functionalities are removed is achieved by erasing the directory: rmdir /sys/kernel/config/device—tree/overlays/myname