# AS3MS-PSA - AIR POWERED 3" LIGHT WEIGHT DUAL ACTION ORBITAL SANDER



- Variable Speed Control with Palm Style On/Off
- Ergonomic Cushion-Grip for Comfort and Stability
- Low Profile for Control and Comfort

- Rear Exhaust Directs Air away
- Suggested Applications: Sanding and Finishing a Variety of Materials including Wood, Metal, Plastic, Fiberglass Composites, Solid Surfaces and other Sandable Surfaces

## Specifications

Air Consumption 17 SCFM @ 90 PSI Maximum 12,000 RPM Horsepower .28 HP

Air Inlet 1/4" NPT (F)
Recommended Hose Size .25" I.D.
Vibration 2.0 m/s2

Model	Height (in.)	Length (in.)	Weight (lbs.)	Sound Level (dBA)
AS3MS-PSA	3.09	4.89	1.12	80



## **WARNING**

Always wear safety goggles to protect your eyes.



**OIL DAILY** 

Oil daily for superior performance.

#### **Operators Instructions**

Includes – Product Highlights and Suggested Applications, Specifications, Please Read and Comply, Assembly Drawing of Machines, Parts List, Proper Use of Tool, Work Stations, Putting the Tool into Service, Operating Instructions

#### **Important**

Read these instructions carefully before installing, operating, servicing or repairing this tool. Keep these instructions in a safe accessible location.

### Please Read and Comply With:

- General Industry Safety & Health Regulations, Part 1910, OSHA 2206, available from: Superintendent of Documents; Government Printing Office; Washington DC 20402
- Safety Code for Portable Air Tools, ANSI B186.1 available from: American National Standards Institute, Inc.; 1430 Broadway; New York, NY 10018
- State and Local Regulations.

Key parts of the above regulations are excerpted below. They are not intended to be inclusive. Study and comply with all regulations.

 TOOL INTENT – Tool shall be used only for purposes intended in its design.


- AIR SUPPLY Test and operate tools at 90 PSIG (6.2 Bar) maximum unless tool is marked otherwise. Use recommended airline filters - regulators – lubricators (FRL).
- UNUSUAL SOUND or VIBRATION If tool vibrates or produces an unusual sound, repair immediately for correction.
- OPERATOR PROTECTIVE EQUIPMENT Wear goggles or face shield whenever tool is in operation. Other protective clothing shall be worn, if necessary. SEE REGULA-TIONS.
- 5) SAFETY MAINTENANCE PROGRAM Employ a safety program to provide inspection and maintenance of all phases of tool operation and air supply equipment in accordance with "Safety Code for Portable Air Tools."

MAC TOOLS, INC.

mactools.com 1-800-MAC TOOLS

# AS3MS-PSA - AIR POWERED 3" LIGHT WEIGHT DUAL ACTION ORBITAL SANDER



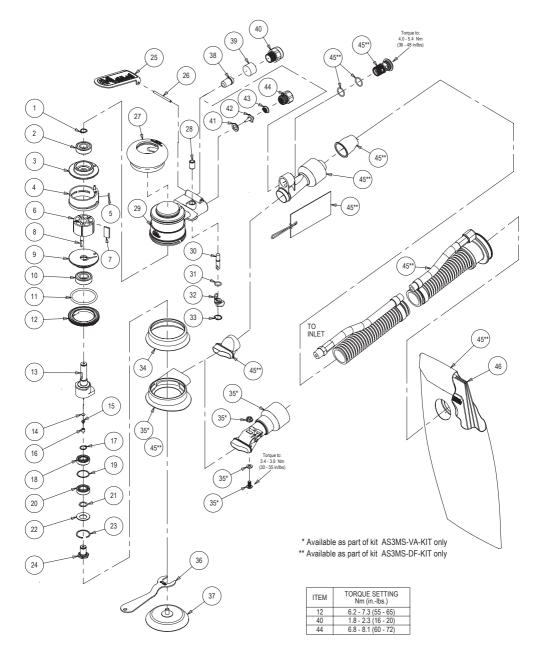

# Parts List

No.	Part Number	Description	Qty	
1	AS415-40	RETAINING RING		
2	AS415-21	BEARING - 2 SHIELDS		
3	AS3MS-13	REAR ENDPLATE	1	
4	AS3MS-11	CYLINDER ASSEMBLY	1	
5	AS415-42	O-RING	1	
6	AS415-05B	ROTOR	1	
7	AS415-10	VANE		
8	AS415-41	WOODRUFF KEY		
9	AS3MS-12	FRONT ENDPLATE		
10	AS415-19	BEARING - 2 SHIELDS		
11	AS415-45	O-RING		
12	AS415-01	LOCK RING		
13	AS3MS-15	SHAFT BALANCER		
14	AS415-122	FILTER		
15	AS415-121	CHECK VALVE		
16	AS415-120	VALVE RETAINER		
17	AP30-41	RETAINING RING		
18	AS3MS-05	BEARING - NO SEAL/SHIELDS	1	
19	AS3MS-07	SPACER	1	
20	AS3MS-04	BEARING - 1 SEAL	1	
21	AS3MS-02	SHIM	1	
22	AS3MS-03	BELLEVILLE WASHER	1	
23	AS3MS-06	RETAINING RING	1	
24	AS3MS-14	SPINDLE	1	
25	AS3MS-10	LEVER	1	
26	AS415-31	LEVER SPRING PIN	1	
	AS415-241	GRIP 2 1/2 in.	Optional	
27	AS415-242	GRIP 2 3/4 in.	Optional	
	AS415-09R	GRIP 3 in.	1	
28	AS3MS-01	VALVE SLEEVE	1	
29	AS3MS-09	HOUSING	1	
30	AS415-08	VALVE STEM ASSEMBLY	1	
31	AS415-43	O-RING	1	
32	AS415-14B	SPEED CONTROL	1	
33	AS415-39	INTERNAL RETAINING RING	1	
34	AS3MS-08	3in LW NON-VAC SKIRT	1	
35	AS3MS-VA-KIT	VACUUM CONVERSION KIT NV TO CV	Optional	
36	AP30-51	17 mm WRENCH	1	
		3 in. LOW PROFILE (1/4-20), NV VINYL FACE PAD	1	
	AS3MS-JH-PAD	3 in. LOW PROFILE (1/4-20), NV J-HOOK FACE PAD	Optional	
38	AS415-54	INTERNAL MUFFLER	1	
39	AS415-68	MUFFLER INSERT	1	
40	AS415-166	MUFFLER HOUSING	1	
41	AS415-09	VALVE SEAT	1	
42	AS415-07	VALVE	1	
43	AS415-14	VALVE SPRING	1	
44	AS415-13	1/4-18 NPT INLET BUSHING ASSEMBLY	1	
45	AS3MS-DF-KIT	VACUUM CONVERSION KIT NV TO SGV	Optional	
46	AS3MS-46	VACUUM BAG INSERT (One included in Kit, 5 pack available separately)		

## Proper Use of the Tool

This sander is designed for sanding all types of materials i.e. metals, wood, stone, plastics, etc. using abrasive designed for this purpose. Do not use this sander for any other purpose than that specified without consulting the manufacturer or the manufacturer's authorized supplier. Do not use back-up pads that have a working speed less than 12,000 RPM free speed

#### Work Stations

The tool is intended to be operated as a hand held tool. It is always recommended that the tool be used when standing on a solid floor. It can be in any position but before any such use, the operator must be in a secure position having a firm grip and footing and be aware that the sander can develop a torque reaction. See the section "Operating Instructions".

### Putting the Tool into Service


Use a clean lubricated air supply that will give a measured air pressure at the tool of 90 psig (6.2 bar) when the tool is running with the lever fully depressed. It is recommended to use an approved 3/8 in. (10 mm) x 25 ft (8 m) maximum length airline. It is recommended that the tool be connected to the air supply as shown in Figure 1.

Do not connect the tool to the airline system without incorporating an easy to reach and operate air shut off valve. The air supply should be lubricated. It is strongly recommended that an air filter, regulator and lubricator (FRL) be used as shown in Figure 1 as this will supply clean, lubricated air at the correct pressure to the tool. Details of such equipment can be obtained from your supplier. If such equipment is not used then the tool should be manually lubricated by shutting off the air supply to the tool, depressurizing the line by pressing the lever on the tool. Disconnecting the airline and putting 2 to 3 drops of suitable pneumatic motor lubricating oil, preferably incorporating a rust inhibitor into the hose end (inlet) of the machine. Reconnect tool to air supply and run tool slowly for a few seconds to allow air to circulate the oil. If tool is used frequently lubricate on daily basis and if tool starts to slow or lose power. It is recommended that the air pressure at the tool be 90 PSI (6.2 Bar) while the tool is running so the maximum RPM is not exceeded. The tool can be run at lower pressures but should never be run higher than 90 PSI (6.2 Bar). If run at lower pressure the performance of the tool is reduced.

## **Operating Instructions**

- Read all instructions before using this tool. All operators must be fully trained in its use and aware of these safety rules. All service and repair must be carried out by trained personnel.
- Make sure the tool is disconnected from the air supply. Select a suitable abrasive and secure it to the back-up pad. Be careful and center the abrasive on the back-up pad.
- Always wear required safety equipment when using this tool.

- 4) When sanding always place the tool on the work then start the tool. Always remove the tool from the work before stopping. This will prevent gouging of the work due to excess speed of the abrasive.
- Always remove the air supply to the sander before fitting, adjusting or removing the abrasive or back-up pad.
- Always adopt a firm footing and/or position and be aware of torque reaction developed by the sander.
- 7) Use only correct spare parts.
- Always ensure that the material to be sanded is firmly fixed to prevent its movement.
- Check hose and fittings regularly for wear. Do not carry the tool by its hose; always be careful to prevent the tool from being started when carrying the tool with the air supply connected.
- 10) Dust can be highly combustible. Vacuum dust collection bag should be cleaned or replaced daily. Cleaning or replacing of bag also assures optimum performance.
- Do not exceed maximum recommended air pressure. Use safety equipment as recommended.
- 12) The tool is not electrically insulated. Do not use where there is a possibility of coming into contact with live electricity, gas pipes, water pipes, etc. Check the area of operation before operation.
- 13) Take care to avoid entanglement with the moving parts of the tool with clothing, ties, hair, cleaning rags, etc. If entangled, it will cause the body to be pulled towards the work and moving parts of the machine and can be very dangerous.
- 14) Keep hands clear of the spinning pad during use.
- 15) If the tool appears to malfunction, remove from use immediately and arrange for service and repair.
- 16) Do not allow the tool to free speed without taking precautions to protect any persons or objects from the loss of the abrasive or pad.

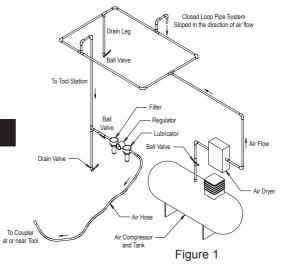

DOC 1598 Rev 1/10/08