


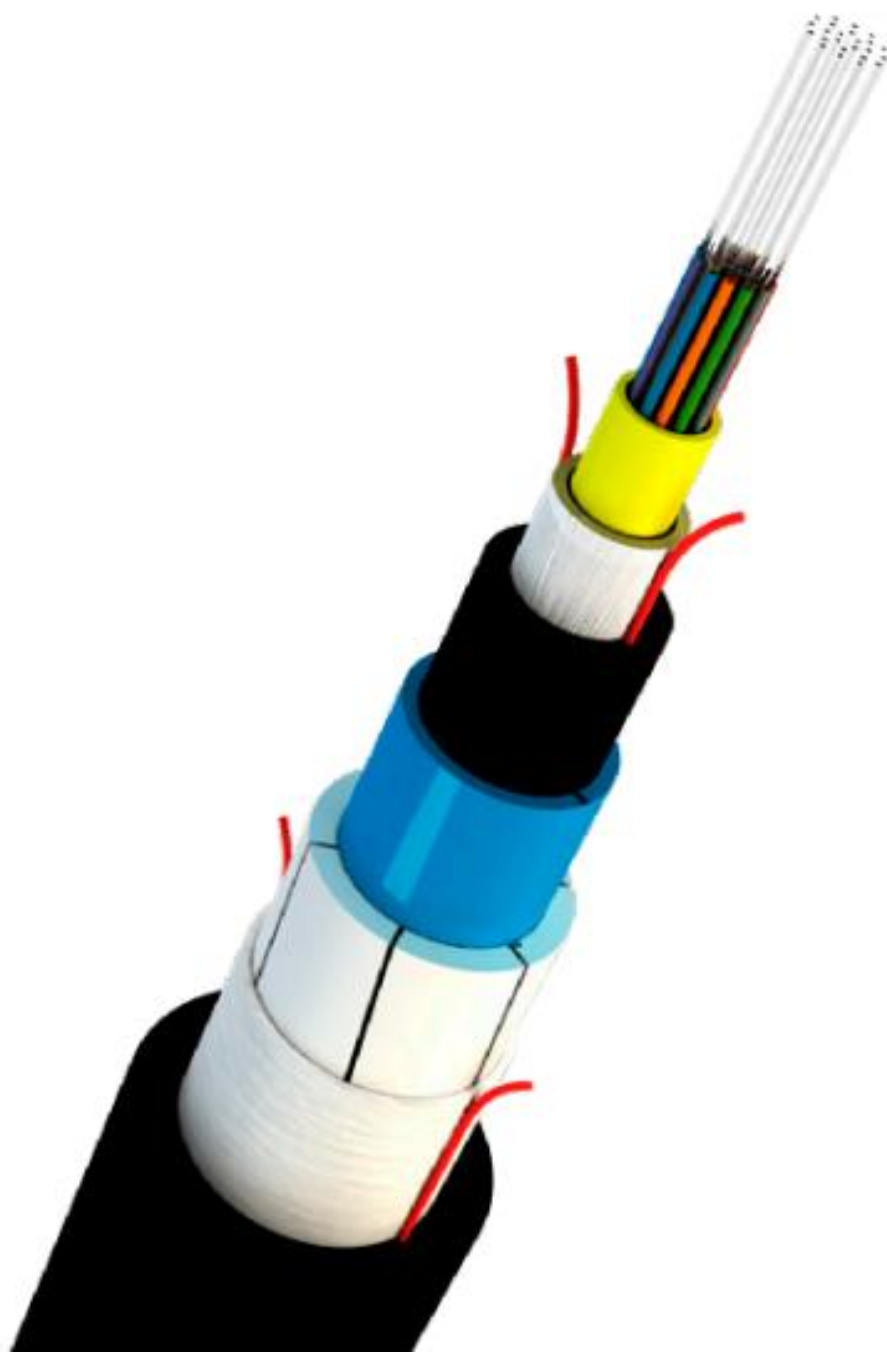

RLD CABLE

STRIPPING INSTRUCTIONS

Tools Required

1. Cable cutter
2. Cable Stripping tools (a, b, c or suitable other)
3. Long nose pliers
4. Screw-driver
5. Retractable safety knife
6. Scissors
7. Tape measure
8. Electrical tape
9. Marker
10. Cut-resistant gloves
11. Safety glasses



Safety Alert



1. Use Protective Personal Equipment (**PPE**) to perform stripping of the cable.
2. Use Cut resistant / heavy leather **gloves** during the cable stripping process to prevent accidental injury.
3. Always wear PPE glasses to protect eyes from flying debris, dust or accidental injury
4. Also, follow the local relevant **safety procedures**.



Stripping Outer PE & GRP

- Step 1:** Determine the stripping length required from the cable end & mark it with Electrical tape / a marker. Suggest adding 100 mm to the required stripping length to allow for stripping Nylon & inner PE (Polyethylene) to expose ripcord.




- Step 2:** Place the stripping tool around the outer jacket at the marked length and using required pressure rotate around the circumference to ring cut the outer PE surface.

Note: This may require adjustment of the blade depth and is best to try on an offset of cable to determine required depth.




Stripping Outer PE & GRP

Step 3: Use safety knife to cut the outer PE sheath longitudinally on **two opposite sides** (approximately up to 100 mm from the free end of the cable). Gently insert a medium sized screwdriver or nose pliers, to lift and open the cut section of the outer PE sheath to expose both the ripcords.

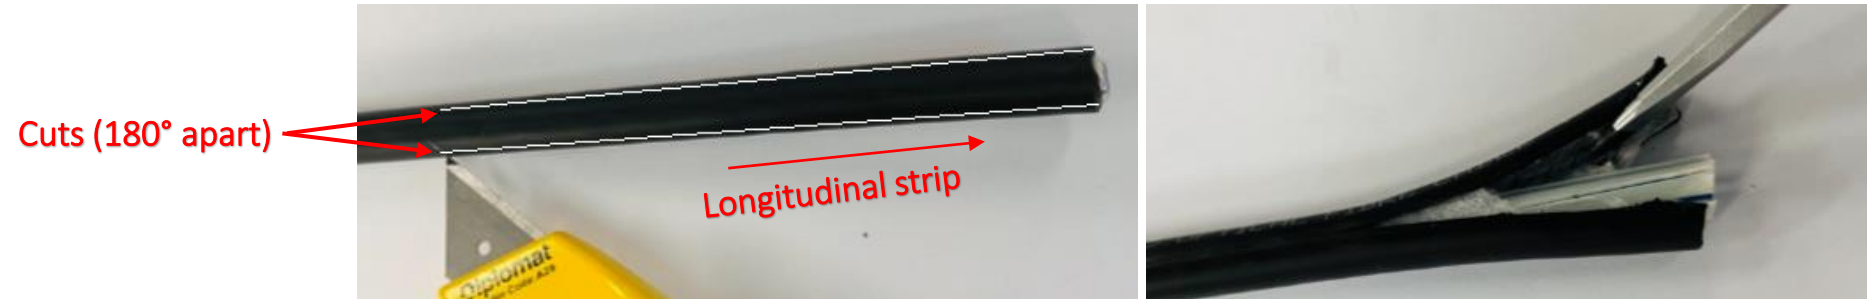


Step 4: If water blocking tape is sticking to the PE, use the screwdriver or pliers to remove the tape from PE sheath and expose the ripcords. Wrap one of the ripcord around a non-sharp small diameter tool like a screwdriver or pliers to assist in the pulling process. Pull the pliers with the ripcord till the original marked location at a very steep angle, almost close to the cable and hold the cable with the other hand at the same time. Repeat this process on the other ripcord.

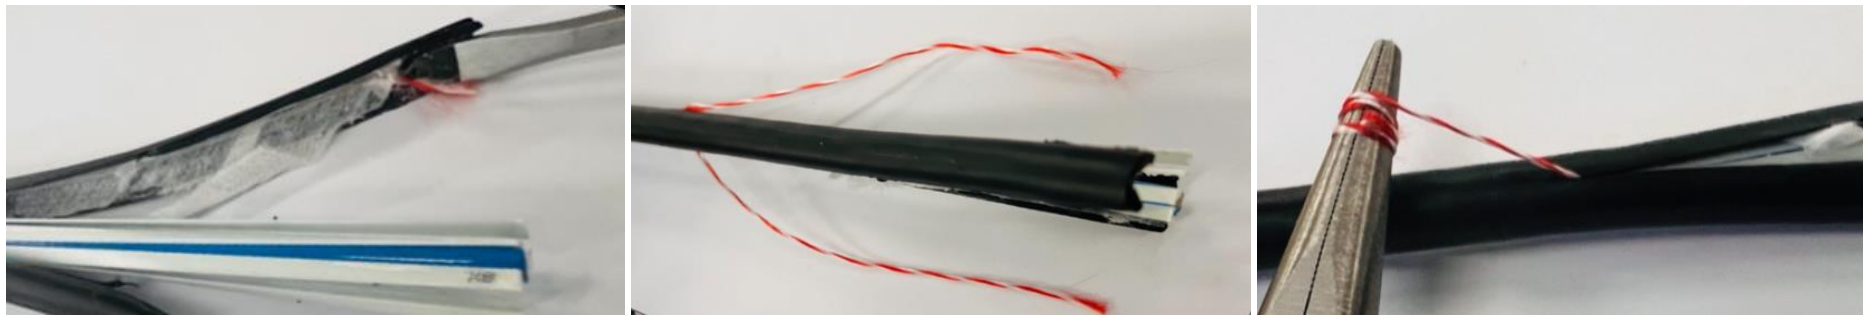


Stripping Outer PE & GRP



Step 5: PE sheath can be peeled off from the cable and removed by hand, like a banana peel action, near the original marked length while wearing specified protective gloves. Leave the ripcords uncut to strip additional length if required.

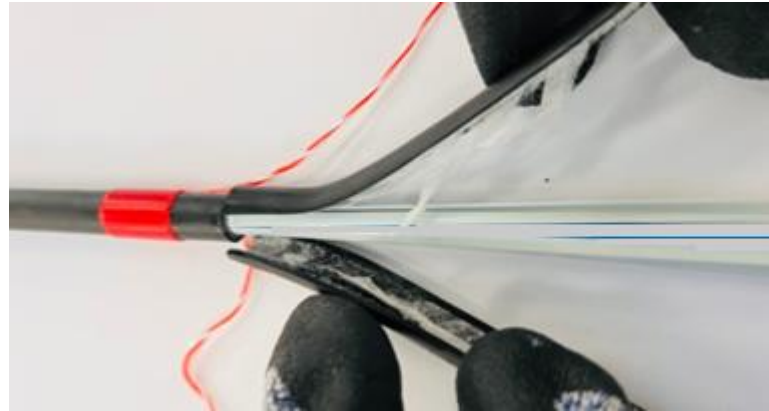

Step 6: Carefully unwrap and cut the water blocking tape and water blocking yarns between the Flat GRP (Glass Reinforced Plastic) armour rods using scissors. Cut the GRP rods using cable cutter.

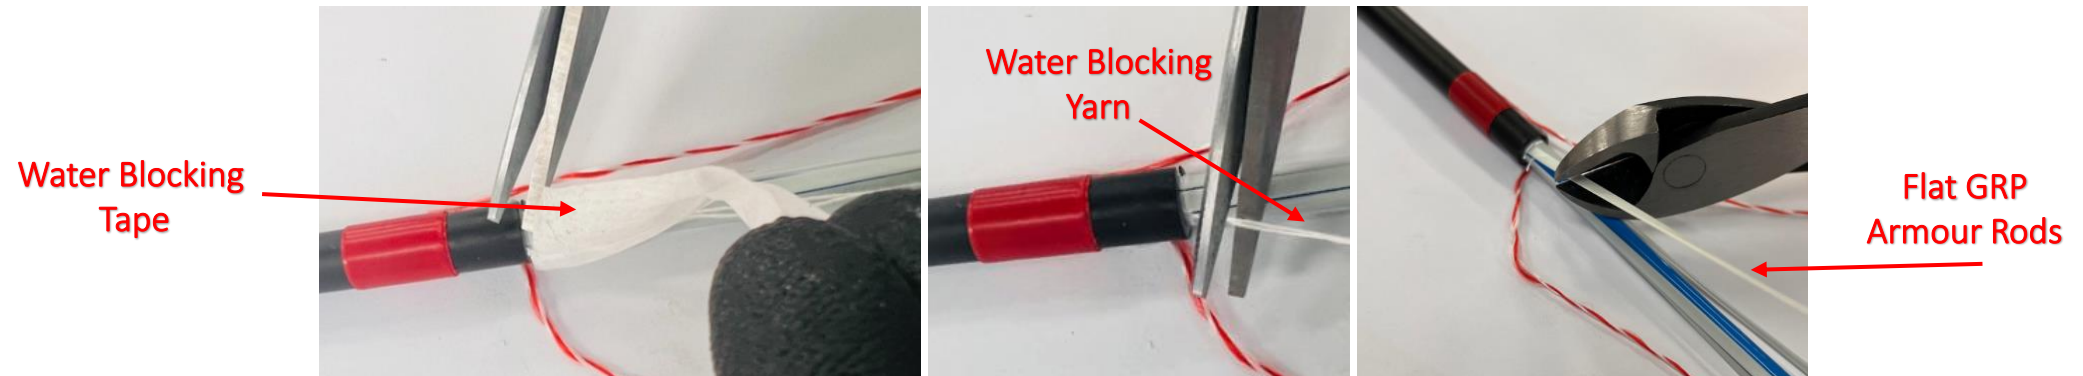


Stripping Nylon & Inner PE



Step 7: Use safety knife to cut the Nylon and inner PE sheath longitudinally 180 degrees apart (approximately up to 100 mm or no more than the length selected in **Step 1**) from the free end of the cable.

Note: The length allocated in **Step 1** is only for exposing the ripcord in this step. So, damaging the cable elements except the ripcords during this step should not be a concern.

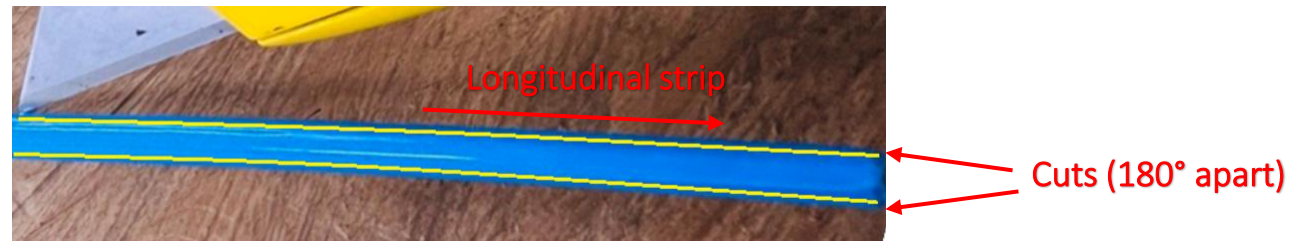


Step 8: While wearing specified protective gloves, Nylon can now be easily peeled off the inner PE by hand. Gently insert a medium sized screwdriver or nose pliers to lift and pull the cut section of the inner PE sheath to expose the ripcords.



Stripping Nylon & Inner PE





Step 9: Once both the ripcord ends are exposed, wrap one of the ripcords around a non-sharp small diameter tool like a screwdriver or pliers to assist in the pulling process. Pull the pliers with the ripcord at a very steep angle, almost close to the cable and hold the cable with the other hand at the same time. Repeat this process on the other ripcord.

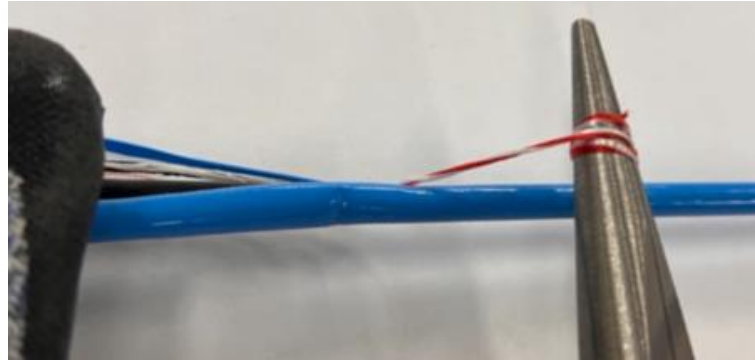

Step 10: Separate the Flexible non-metallic strength elements, Nylon and inner PE sheath from the cable by hands while wearing specified protective gloves and cut them near the original marked length using a cable cutter or safety knife. Leave the ripcords uncut to strip additional length if required.


Flexible Non-Metallic
Strength Elements

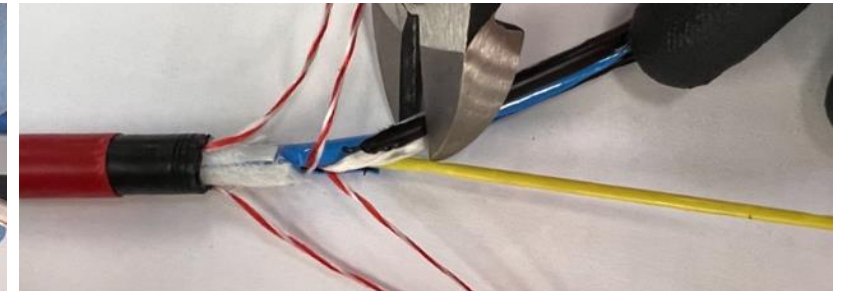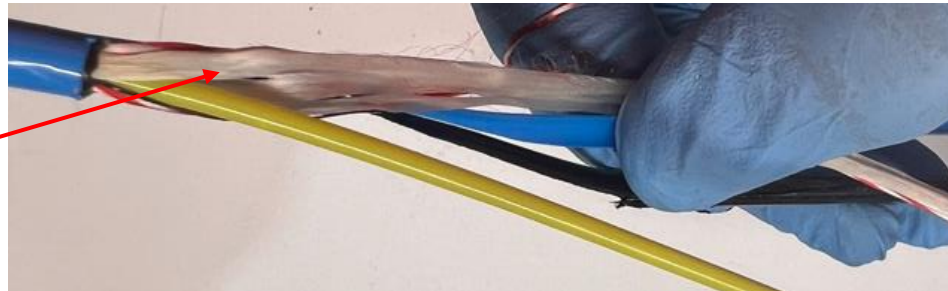


Fibre Preparation

Step 11: Using an appropriate tube cutter (a) or blade (b), break the tube using required pressure and pull it out slowly to expose the fibres. Take care not to cut through the fibres inside the tubes.

Note: This may require adjustment of the blade depth and is best to try on an offset of cable / tube to determine required depth.

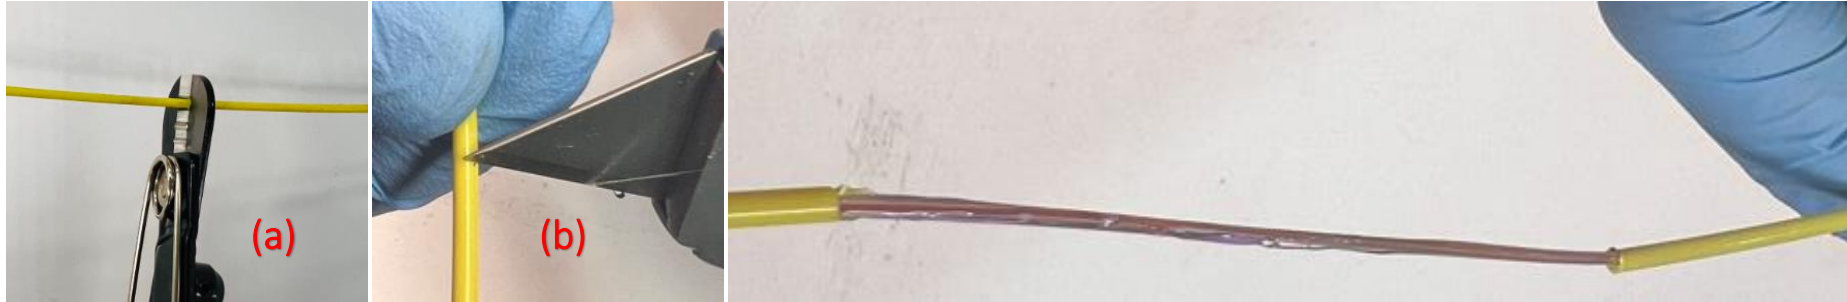


Step 12: Remove gel from the exposed fibres with a suitable solution.

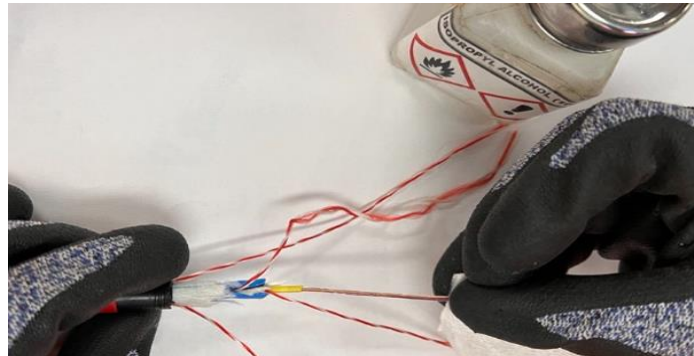

Fibre Preparation



Step 13: Cut and remove 100 mm of fibres from each of the individual tubes. This process will remove any fibre that may have been damaged during any of the cable preparation procedure.

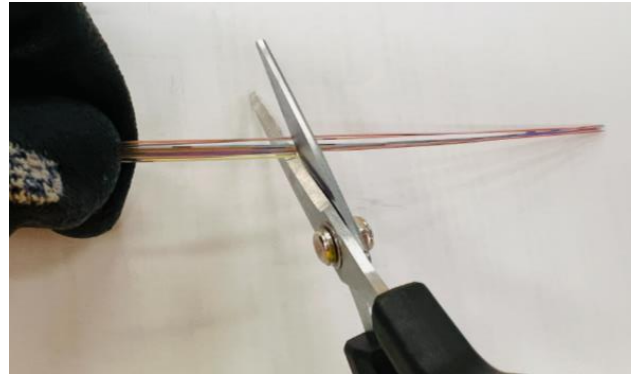



Thank You!