


7.Raspberry Pi platform ----- avoid_ultrasonic

Note:

A. This experiment needs to start the car by pressing the button KEY.

1)Preparation

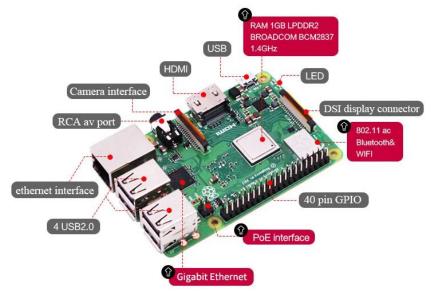

1-1 Raspberry Pi board



1-2 Ultrasonic module

2)Purpose of Experimental

After running the avoid_ultrasonic executable in the Raspberry Pi system, you need to press the K2 to start the car, and the ultrasonic obstacle avoidance function is started. When there is an obstacle in front, the car can avoid the obstacle automatically.


3)Principle of experimental

The ultrasonic module is a sensor that uses ultrasonic characteristics to detect the distance. It has two ultrasonic probes for transmitting and receiving ultrasonic waves. The range of measurement is 3-450 cm.

(Note:The TrikeBot car controls the direction of the front rubber wheel by controlling the servo. In this way, the direction of the car is controlled. In this experimental, we set the angle of the servo to 55 degrees according to the actual situation, indicating that the car is in the front. We set the angle of the servo to 110 degrees according to



the actual situation, indicating that the car is turning left. We set the angle of the servo to 0 degrees according to the actual situation, indicating that the car is turning right.)

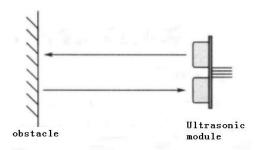


3-1 Ultrasonic emission and reception schematic

(1) You need to input a high level signal of at least 10us to the Trig pin to trigger the ranging function of the ultrasonic module.

Trigger signal	10us high level signal	
	Section Section Section 1	

3-2 Ultrasonic module sends trigger signal

(2) After the ranging function is triggered, the module will automatically send out 8 ultrasonic pulses with 40 kHz and automatically detect whether there is a signal return. This step is done internally by the module.




(3) When the module detects an echo signal, the ECHO pin will output a high level. The high level duration is the time from when the ultrasonic wave is sent to when it returns. You can calculate the distance by using the time function to calculate the high level duration. Formula: Distance = High level duration * Speed of sound(340M/S)/2.


4)Experimental Steps

4-1 About the schematic



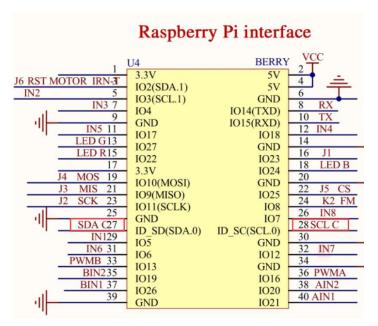

4-1 Raspberry Pi interface circuit diagram

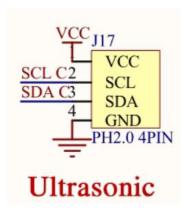

4-2 ultrasonic interface

wiringPi	ВСМ	Funtion	Physical pin		Funtion	ВСМ	wiringPi
		3.3V	1	2	5V		
8	2	SDA.1	3	4	5V		
9	3	SCL.1	5	6	GND		
7	4	GPIO.7	7	8	TXD	14	15
		GND	9	10	RXD	15	16
0	17	GPIO.0	11	12	GPIO.1	18	1
2	27	GPIO.2	13	14	GND		
3	22	GPIO.3	15	16	GPIO.4	23	4
		3.3V	17	18	GPIO.5	24	5
12	10	MOSI	19	20	GND		
13	9	MISO	21	22	GPIO.6	25	6
14	11	SCLK	23	24	CE0	8	10
		GND	25	26	CE1	7	11
30	0	SDA.0	27	28	SCL.0	1	31
21	5	GPIO.21	29	30	GND		
22	6	GPIO.22	31	32	GPIO.26	12	26
23	13	GPIO.23	33	34	GND		
24	19	GPIO.24	35	36	GPIO.27	16	27
25	26	GPIO.25	37	38	GPIO.28	20	28
		GND	39	40	GPIO.29	21	29

4-3 Raspberry Pi 40 pins comparison table



4-2 According to the circuit schematic:

```
Trig----28(Physical pin)---- 31(wiringPi) Echo----27(Physical pin)---- 30(wiringPi)
```

4-3 About the code

Please view .py and.c file

A. For .c code

(1) We need to compile this file in the Raspberry Pi system. (Note: we need to add -lwiringPi to the library file.)

We need to input:gcc avoid ultrasonic.c -o avoid ultrasonic -lwiringPi

(2) We need to run the compiled executable file in the Raspberry Pi system. We need to input: ./avoid ultrasonic

```
pi@raspberryPi:~/TrikeBotCar $ gcc avoid_ultrasonic.c -o avoid_ultrasonic -lw
iringPi
pi@raspberryPi:~/TrikeBotCar $ ./avoid_ultrasonic
```

(Note:The initpin.sh script file is included in the TrikeBotCar/python_code directory.) You need to input: chmod 777 initpin.sh

./initpin.sh

As shown in the figure below.

B. For python code

1) We need to input following command to run python code.

python avoid ultrasonic.py

```
pi@raspberryPi:~/python_code $ python avoid_ultrasonic.py
```

- 2) We can input: ctrl+c to stop this process, which mean is send a signal to the linux kernel to terminate the current process, but the state of the relevant pin is uncertain at this time, we also need to run a script to initialize all pins.
- 3) You need to input: sudo chmod 777 initpin.sh../initpin.sh

After completing the above steps, the experiment is over.

5) Experimental phenomenon

After running the programs. You need to press the K2 to start the car, and the ultrasonic obstacle avoidance function is started. When there is an obstacle in front, the car can avoid the obstacle automatically.



