

PPPx User Manual

Version 1.0.0

Yuanxin Pan

September 19, 2024

Contents

| 1 | Intr | oduction | 1 | | | | | | | | | |
|---|-------------------|-----------------------------------|----|--|--|--|--|--|--|--|--|--|
| | 1.1 | Overview | 1 | | | | | | | | | |
| | 1.2 | Licnese | 1 | | | | | | | | | |
| 2 | Getting started 2 | | | | | | | | | | | |
| | 2.1 | System requirements | 2 | | | | | | | | | |
| | 2.2 | Installation | 2 | | | | | | | | | |
| | | 2.2.1 Linux | 2 | | | | | | | | | |
| | | 2.2.2 macOS | 2 | | | | | | | | | |
| | | 2.2.3 Windows | 2 | | | | | | | | | |
| 3 | Usaş | ge | 3 | | | | | | | | | |
| | 3.1 | Input | 3 | | | | | | | | | |
| | | 3.1.1 Configuration | 3 | | | | | | | | | |
| | | 3.1.2 Product | 7 | | | | | | | | | |
| | | 3.1.3 Table | 7 | | | | | | | | | |
| | 3.2 | Output | 8 | | | | | | | | | |
| | | 3.2.1 pos file | 9 | | | | | | | | | |
| | | 3.2.2 log file | 9 | | | | | | | | | |
| | | 3.2.3 stat file | 9 | | | | | | | | | |
| | 3.3 | Visualization | 10 | | | | | | | | | |
| | | 3.3.1 With Python | 10 | | | | | | | | | |
| | | 3.3.2 With RTKLIB | 11 | | | | | | | | | |
| 4 | Examples 12 | | | | | | | | | | | |
| | 4.1 | SPP: Single Point Positioning | 13 | | | | | | | | | |
| | 4.2 | PPP: Precise Point Positioning | 14 | | | | | | | | | |
| | 4.3 | | 15 | | | | | | | | | |
| | 4.4 | TDP: Time-Differenced Positioning | 15 | | | | | | | | | |
| 5 | Trou | ableshooting | 17 | | | | | | | | | |
| 6 | FAQ | Q s | 18 | | | | | | | | | |
| A | File Download | | | | | | | | | | | |
| | A.1 | Download GNSS observation | 19 | | | | | | | | | |
| | A.2 | Download IGS Products | 19 | | | | | | | | | |
| | A.3 | Download Table Files | 19 | | | | | | | | | |

1 Introduction

1.1 Overview

PPPx is a software package developed for multi-GNSS data processing. Its main component pppx, dedicated to multi-GNSS positioning, will be introduced in this manual. Its primary features are listed following:

- 1. Support four solution modes:
 - (a) SPP: Single Point Positioning
 - (b) PPP: Precise Point Positioning
 - (c) RTK: short baseline processing
 - (d) TDP: Time-Differenced Positioning
- 2. Support GPS/GLONASS/Beidou-2+3/Galileo/QZSS
- 3. Support EKF, FGO, and LSQ as solvers
- 4. Flexible frequency selection (L1/L2/L5/...)
- 5. High-precision yet computation efficient
- 6. Unified input/output for different solution modes

1.2 Licnese

This software is distributed under the GPL-3.0 license.

2 Getting started

In this section, system requirements and the steps to install pppx on different platforms (Linux, macOS and Windows) are introduced.

2.1 System requirements

Generally, there is no specific hardware requirement for pppx. To process a 24-h RINEX observation file of 30 s sampling rate, pppx usually consumes around 150 MB resident memory and 1 CPU core. However, the consumed resident memory may change with GNSS data volume.

2.2 Installation

2.2.1 Linux

Users are recommend to use pppx on Ubuntu 22.04, since the binary was built with gcc 11 on a computer running Ubuntu 22.04. However, the binary should work on most recent Linux systems with gcc 11 available. Note that this requirements only apply to the dynamically linked pppx executable. You can always use pppx_static on a Linux machine but without the support for FGO solver.

The installation on Linux can be simply done with the following commands:

```
$ git clone git@github.com:YuanxinPan/PPPx_bin.git
$ sudo apt install libceres-dev

$ mkdir -p ${HOME}/.local/bin
$ cp PPPx_bin/bin/pppx ${HOME}/.local/bin/
$ echo "export PATH=\${HOME}/.local/bin:\$PATH" >> ${HOME}/.bashrc
# Then restart your terminal
```

2.2.2 macOS

macOS will be supported in the future.

2.2.3 Windows

The easiest way to run pppx on Windows is using the Windows Subsystem for Linux (WSL). Please follow the instructions in Section 2.2.1.

3 Usage

In this section, the usage of the pppx software will be introduced. The general steps to run pppx is:

- 1. Prepare input files, including a GNSS observation file in the RINEX format and necessary products (either broadcast ephemeris or precise products)
- 2. Modify the configuration file *pppx.ini* if necessary
- 3. Execute pppx with command line: pppx path-to-rnxobs [rnxobs-of-base] pppx.ini
- 4. Check output files

Here are some example commands to run pppx:

```
# SPP/PPP/TDP
# Note: TDP should be used with high-frequency data (e.g., 1 Hz)
$ pppx rinex/ZIM200CHE_R_20221000000_01D_30S_MO.rnx pppx.ini
# RTK, ZIMM will be the base station in this way
$ pppx rinex/ZIM200CHE_R_20221000000_01D_30S_MO.rnx \
    rinex/ZIMM00CHE_R_20221000000_01D_30S_MO.rnx pppx.ini
```

3.1 Input

The complete list of input files is shown below:

- GNSS observations in RINEX format, specified by command line arguments
- Configuration file pppx.ini, specified by command line argument
- Satellite products (either brdc or precise), specified by pppx.ini
- Table files (already provided in the table/ directory), specified by pppx.ini

The configuration file and satellite products will be explained in detail in subsequent sections.

3.1.1 Configuration

The configuration file pppx.ini is the main interface of the pppx software. It is written in the ini format and is friendly for human reading. Users can specify the general GNSS positioning strategies (Table 3.1) with it.

Some example configuration files are provided in the folder "example/pppx/". Most settings in pppx.ini is self-explained. Usually, users just need to modify the following settings and keep the rest as default:

Table 3.1: The available sections of the configuration file pppx.ini.

| Section | Description |
|-----------------------|---|
| session constellation | The desired sampling rate and start and end time for data processing The GNSS systems to be used and specific satellites to be excluded |
| observation model | Selection of signal frequency and observable priority The tropospheric and ionospheric models |
| estimation | Various estimation strategies, including solution mode, positioning mode, solver type and etc. |
| product | The choice of satellite product source and the paths to them |
| table | The paths to table files |
| output | The log level and output path |

```
[constellation]: system
[estimation]: sol_mode, pos_mode, solver
[product]: src, nav, sp3, clk
```

The following paragraphs demonstrate how to set the "key-value" for each section of the configuration file.

session Here, "interval" specifies the required interval for data processing, it should be no smaller than the sampling rate in the RINEX file and should be integer number times of it. "date" denotes the year and day of year for data processing, and it will be used to replace the placeholders in the "[product]" section. By default, it can be read from the first epoch of the RINEX file. "start" and "end" denote the start and end epoch for data processing within the day (closed interval).

The screenshot of example settings is shown in Figure 3.1. Note that this figure is just used to show how to correctly configure these settings. Usually, users can leave all the fields of this section as blank. Then, pppx will process the whole RINEX file epoch by epoch.

Figure 3.1: The "session" section of configuration.

constellation This section define the GNSS systems to be used for data processing and problematic satellites to be excluded. Note that the order of letters (i.e., GRECJ) does not matter and the excluded PRNs should be separated by white space.

observation This section is basically self-explained. Just note that the observation noise represents the noise level of uncombined observations. For ionosphere-free com-

Figure 3.2: The "constellation" section of configuration.

bination, observation noises will be automatically computed based on the uncombined ones.

Figure 3.3: The "observation" section of configuration.

model Simply choose the options from the values listed for this section. Note that the options are case-sensitive. Currently, this section is not effective for RTK, since tropospheric and ionospheric delays are ignored for short baselines. Besides, "iono" can only be IF for PPP, unless "sf_ppp" is set to "yes".

Figure 3.4: The "model" section of configuration.

estimation This is the most important section of the configuration. Here, you can choose the solution mode (spp/ppp/rtk/tdp), positioning mode (kinematic/static/fixed) and solver (ekf/fgo/lsq) used for adjustment. However, spp and tdp can only support kinematic mode, and not all the solvers are supported for each solution mode (i.e., lsq and fgo for spp/tdp, ekf and fgo for ppp, ekf for rtk). The software will output an error message if the configuration is not supported. The approximate position of the station can be set with "site_pos"; otherwise, it is computed using SPP. Other settings are self-explained.

NOTE: ""sf_ppp" is designed to run single-frequency PPP with GIM products, i.e., the ionospheric delays are not estimated but fixed to GIM corrections. In this way, the accuracy of GIM products can be evaluated. However, the dual-frequency observations are still required for cycle slip detection.

NOTE: Kinematic GNSS data collected on a moving vehicle is not tested with pppx yet.

product If "src = brdc", then "nav" should be set to a valid path to a broadcast ephemeris. If "src = precise", then "sp3" should be set to a valid path to a SP3 product

```
[estimation]
                             ; opt: spp/ppp/rtk/tdp
sol_mode = ppp
                                                            [ spp ]
          = kinematic
                            ; opt: kinematic/static/fixed [ kinematic ]
pos_mode
                             ; opt: ekf/fgo/lsq
         = ekf
                                                           [ ekf ]
solver
                             ; opt: elev/snr
weight_opt = elev
                                                            [ elev ]
                             ; elevation mask (°)
                                                            [ 10 ]
elev_mask = 7
                                                            [ 25 ]
snr_mask
         = 25
                             ; SNR mask (dB-Hz)
                             ; initial position in xyz (m)
site_pos
                                                            [ SPP ]
; ppp only
sf_ppp
         = no
                            ; single-frequency PPP
                                                            [ no ]
                            ; opt: off GF MW LLI TDCP ALL
slip_det = ALL
                                                            [ ALL ]
        = 100 1
                                                            [ 1E+02 1 ]
pos_pri
                             ; uncertainty process_noise
                                                            [ 1E+02 1E+02 ]
[ 5E+01 3.2E-04 ]
clk_pri
        = 100 100
                                            m/sqrt(s)
         = 50 3.2E-04
isb_pri
ztd pri
          = 0.5 3E-05
                                                            [ 0.5 3E-05 ]
; rtk only
                              ; RTK ambiguity resolution
rtk ar
        = yes
                                                            [ yes ]
                              ; AR for GLONASS
                                                            [ no ]
glonass_ar = no
                              ; base position in xyz (m)
base_pos
                                                            [ spp ]
```

Figure 3.5: The "estimation" section of configuration.

and all other products are not necessary. If you use relative paths for the products, note that the path is relative to the directory where pppx is executed, not where pppx.ini is located. Besides, placeholders (see Figure 3.6) can be used to specify product names, making it easier to process GNSS data across multiple days. More details about product are introduced in Section 3.1.2.

```
; available placeholder:
  -YEAR- : year
  -YR- : 2-digit year
  -DOY- : day of year
-WEEK- : GPS week
           : day of GPS week
  -DOW-
[product]
src = precise
                                                     ; opt: brdc/precise
nav = rinex/BRDC00IGS_R_-YEAR--DOY-0000_01D_MN.rnx ; broadcast ephemeris
                                                                                  (brdc)
                                                   ; precise oribt
sp3 = products/cod-WEEK--DOW-.sp3
                                                                                  (precise)
clk = products/cod-WEEK--DOW-.clk
                                                     ; precise clock
                                                                                  (precise)
erp = products/cod-WEEK--DOW-.erp
                                                     ; earth rotation parameters (precise)
                                                     ; satellite bias (precise)
; satellite attitude (precise)
bia = products/cod-WEEK--DOW-.bia
obx = products/cod-WEEK--DOW-.obx
ion = products/cod-WEEK--DOW-.ion
                                                     ; global ionospheric map
                                                                                  (common)
vmf = products/VMFG_-YEAR--DOY-
                                                     : VMF1 grid
                                                                                  (common)
```

Figure 3.6: The "product" section of configuration.

table Only the example is provided here. More details can refer to Section 3.1.3. Note that the paths to the table files in the configuration are relative to the directory where pppx is executed.

output Only the example is provided here. More details can refer to Section 3.2.

```
[table]
igsatx = ../../table/igs14.atx
oceanload = ../../table/oceanload
channel = ../../table/glonass_chn
gpt2w = ../../table/gpt2_1wA.grd
orography = ../../table/orography_ell
```

Figure 3.7: The "table" section of configuration.

```
[output]
path = ./ ; the folder where results will be stored
level = info ; opt: off/critical/error/warn/info/debug/trace
```

Figure 3.8: The "output" section of configuration.

3.1.2 Product

There are two options of satellite products for each solution mode: "brdc" and "precise", controlled by the configuration "[product] src". The "brdc" option uses satellite orbits and clocks computed from broadcast ephemeris for data processing, while the "precise" option uses orbits and clocks from IGS precise products. Note that "[table] igsatx" is required if "[product] src" is set to "precise".

Here are some clarifications:

- All products labeled "precise" will not be used if "[product] src" is set to "brdc"
- Precise orbits and clocks can be used for SPP, but the Diffential Code Bias (DCB) issue is not handled for single-frequency SPP. In this case, it is recommended to set "[model] iono = IF"
- Only the SP3 file is necessary for the "precise" option. Other products are optional.
 If the CLK product is not available, the clock corrections from the SP3 file will be used
- "ion" and "vmf" are only mandatory when the corresponding models are specified
- PPP specific:
 - Broadcast ephemeris can also be used for PPP. No other product will be used in this case.
 - The nominal attitude will be used if the OBX product is missing
 - The BIA file is not used currently
 - Pole tide corrections will not be applied if the ERP product is missing, but this is fine for most applications.

3.1.3 Table

Several table files are required when specific models are used during data processing. These mainly includes the antenna model, tropospheric model, and tide mode. A com-

plete list of the required table files is provided in Table 3.2. Instructions for downloading each table file are provided in Appendix A.3.

Table 3.2: List of table files.

| Table | Description |
|-----------|---|
| channel | Frequency channel numbers for GLONASS satellites |
| gpt2w | Coefficients of the GPT2w tropospheric model |
| igsatx | Satellite and receiver antenna models in the IGS ANTEX format |
| oceanload | Ocean tide loading coefficients for stations |
| orography | Ellipsoidal station heights of the VMF1 grid points |

Here are the clarifications:

- "channel" is only needed when GLONASS carrier phase measurements are used for data processing (i.e., ppp/rtk/tdp)
- "gpt2w" should be set when "[model] trop" is set to "GPT2w"
- "igsatx" should be specified if "[product] src" is set to "precise" or "[estimation] sol_mode" is set to "ppp"
- "oceanload" is optional. Ocean tide loading will not be corrected if coefficients for the processed station are missing
- "orography" is needed when "[model] trop" is set to "VMF1"

Although the table files are not always required, it is recommended to properly set all the table paths to simplify the process and avoid potential issues.

3.2 Output

This section introduces the output files generated by the pppx software. An overview of these files is provided in Table 3.3. The function and format of each file are described in detail in the following sections.

Table 3.3: List of output files.

| Output | Description |
|-----------|--|
| pos file | Receiver position, clock (GPS) and ZTD estimates for each epoch |
| log file | Information for debugging, including cycle slip detection, a-prior and |
| | postfit residuals |
| stat file | Postfit residuals and various estimates in the RTKLIB stat format, |
| | intended for visualization with RTKLIB |

3.2.1 pos file

The primary output of pppx is the pos file, which contains main estimates for each processed epoch. These include station coordinates in the Earth-centered, Earth-fixed (ECEF) coordinate system, standard deviations of the coordinate estimates, receiver clock errors for the GPS system, and Zenith Total Delays (ZTD).

Figure 3.9 shows the beginning part of a sample pos file. The units used for coordinates, clock errors, and ZTD estimates are meters. Note that the coordinate system will align with the satellite orbit products used for data processing. By default, the standard deviations of coordinates are not included in the output when "fgo" is selected as the solver due to the long computation time required.

| mjd | sod | nsat | X | У | Z | stdx | stdy | stdz | rck(m) | zhd | zwd | dzwd |
|-------|--------|------|-------------|------------|-------------|-------|-------|-------|--------|-------|-------|--------|
| 59679 | 0.00 | 17 | 4331298.023 | 567538.192 | 4633133.548 | 0.795 | 0.278 | 0.797 | -9.8 | 2.081 | 0.025 | 0.2127 |
| 59679 | 30.00 | 17 | 4331299.398 | 567538.409 | 4633134.059 | 0.494 | 0.196 | 0.471 | -8.9 | 2.081 | 0.025 | 0.1388 |
| 59679 | 60.00 | 17 | 4331299.590 | 567538.000 | 4633134.399 | 0.370 | 0.159 | 0.339 | -8.4 | 2.081 | 0.025 | 0.0210 |
| 59679 | 90.00 | 17 | 4331299.938 | 567538.075 | 4633134.310 | 0.298 | 0.137 | 0.265 | -8.2 | 2.081 | 0.025 | 0.0189 |
| 59679 | 120.00 | 17 | 4331299.981 | 567538.018 | 4633134.309 | 0.253 | 0.122 | 0.221 | -8.1 | 2.081 | 0.025 | 0.0125 |
| 59679 | 150.00 | 17 | 4331299.899 | 567537.991 | 4633134.164 | 0.219 | 0.111 | 0.187 | -8.0 | 2.081 | 0.025 | 0.0160 |
| 59679 | 180.00 | 17 | 4331299.918 | 567538.003 | 4633134.082 | 0.191 | 0.103 | 0.160 | -8.0 | 2.081 | 0.025 | 0.0129 |
| 59679 | 210.00 | 17 | 4331299.932 | 567538.003 | 4633134.040 | 0.169 | 0.095 | 0.139 | -8.1 | 2.081 | 0.025 | 0.0147 |
| 59679 | 240.00 | 17 | 4331299.774 | 567537.826 | 4633134.008 | 0.151 | 0.090 | 0.121 | -8.1 | 2.081 | 0.025 | 0.0187 |
| 59679 | 270.00 | 17 | 4331299.776 | 567537.830 | 4633133.938 | 0.136 | 0.085 | 0.107 | -8.2 | 2.081 | 0.025 | 0.0248 |

Figure 3.9: A screenshot of a sample pos file.

3.2.2 log file

A log file will be generated if the "[output] level" in the configuration file is not set to "off". This file contains debugging information such as cycle slip detection, outlier detection, and a-prior and postfit residuals. Each log message generally begins with a letter that indicates the message type: 'T' for Trace, 'D' for Debug, 'I' for Information, 'W' for Warning, 'E' for Error, and 'C' for critical.

Figure 3.10 shows a screenshot of a sample log file. For example, a cycle slip was detected at epoch 86370.0 (seconds of the day). Following the PRN number, the azimuth, elevation, and between-epoch difference of geometry-free (GF) combination of the satellite are provided. The subsequent line indicates that a new ambiguity parameter (numbered 410) was introduced at that epoch. The following lines provide information for all available satellites at that epoch. These include the a-prior residuals of pseudorange and carrier phase, the corresponding postfit residuals, ambiguity estimates in meters, as well as the azimuth and elevation for each satellite, listed after its PRN and epoch time.

3.2.3 stat file

A stat file is always generated for visualization with the RTKLIB software. For detailed information on the format, you can refer to the RTKLIB source code. Currently, pppx only outputs messages with the keywords "\$POS", "\$CLK", and "\$SAT". The only difference is that the "\$CLK" values are expressed in meters (instead of nanoseconds) and represent absolute clock errors for each GNSS system (rather than inter-system biases). Figure 3.11 shows a screenshot of a sample stat file.

```
I ## 86370.00
 GfJump: 86370.0 G30 -170.3 10.2 val: 16.07
I +++ G30 410 86370.00
I E04 86370.00
                            -0.005
                                       -0.423
                                                    0.004
                                                              187.118 -100.0
                                                                                63.8
                  -0.432
                                                                0.179 -109.7
I E09 86370.00
                   3.216
                             0.011
                                        3.222
                                                    0.016
                                                                                11.2
I E11 86370.00
                   0.231
                            -0.006
                                        0.240
                                                    0.003
                                                               -4.188
                                                                        -83.7
                                                                                54.4
I E12 86370.00
                  -0.064
                            -0.009
                                       -0.059
                                                   -0.004
                                                                1.739
                                                                       -168.9
                                                                                39.2
I E18 86370.00
                  -0.479
                            -0.016
                                        -0.471
                                                   -0.008
                                                                3.720
                                                                                10.7
                                                                        -63.6
                  -0.077
                                       -0.069
                            -0.011
                                                                         59.7
I E19 86370.00
                                                   -0.003
                                                                7.753
                                                                                52.5
I E21 86370.00
                   1.853
                             0.001
                                        1.856
                                                    0.004
                                                               -2.511
                                                                         93.7
                                                                                14.4
I E27 86370.00
                   0.895
                            -0.015
                                        0.901
                                                   -0.008
                                                               14.281
                                                                         43.2
                                                                                12.0
                   0.604
                            -0.014
                                        0.613
                                                   -0.005
                                                                5.998
                                                                        -37.7
                                                                                 18.2
I E36 86370.00
I G02 86370.00
                   1.937
                            -0.007
                                        1.946
                                                    0.002
                                                               -2.125
                                                                        -48.7
                                                                                 29.3
                                                                        106.7
I G03 86370.00
                  -1.312
                             0.014
                                        -1.309
                                                    0.017
                                                               47.787
                                                                                26.2
                                                                                51.2
I G04 86370.00
                  -0.193
                            -0.016
                                        -0.185
                                                   -0.008
                                                              369.198
                                                                         57.6
                  -0.409
                                                   -0.004
                                                                       -104.9
                                                                                62.2
I G06 86370.00
                            -0.012
                                        -0.401
                                                               54.960
                                                                        173.3
I G07 86370.00
                   0.904
                            -0.011
                                        0.907
                                                   -0.008
                                                               -28.983
                                                                                31.9
I G09 86370.00
                   0.800
                            -0.002
                                        0.808
                                                    0.007
                                                              246.278
                                                                        -20.0
                                                                                 86.5
I G11 86370.00
                  -1.175
                            -0.009
                                        -1.166
                                                    0.000
                                                              -10.412
                                                                        -49.6
                                                                                 30.7
                                                                                 9.7
                                                               39.702
                            -0.005
                                                   -0.001
                                                                       -129.2
I G19 86370.00
                   3.370
                                        3.373
I G26 86370.00
                  -1.855
                            -0.011
                                        -1.850
                                                    -0.005
                                                               46.984
                                                                         44.9
                                                                                 7.4
                  -0.267
                                                    0.000
                                                              354.394
                                                                      -170.3
I G30 86370.00
                            24.679
                                        -0.266
                                                                                10.2
```

Figure 3.10: A screenshot of a sample log file.

Figure 3.11: A screenshot of a sample stat file.

3.3 Visualization

This section explains how to visualize the solutions generated by pppx.

3.3.1 With Python

A Python script named "plot_ppppos.py" is included in the software package and is located in the "scripts/" folder. This script can generate plots of either (1) the positioning time-series in the east, north, and up components (relative to the mean position) or (2) additional time-series of the receiver clock, and ZTD estimates. The general usage of the script is demonstrated with the commands below, and the corresponding figures are shown in Figure 3.12:

```
# (1) plot position estimates only
$ ../../scripts/plot_ppppos.py pos_file -s

# (2) plot position, receiver closk, and ZTD estimates
$ ../../scripts/plot_ppppos.py pos_file -a

# Options:
# -a Plot position, receiver clock, and ZTD estimates
# -i Interactive mode
```

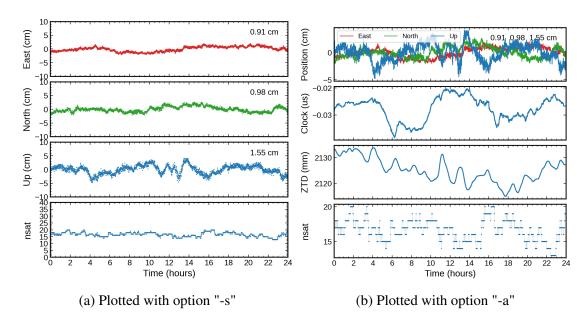


Figure 3.12: Visualization of an FGO-based PPP solution with the Python script.

-s Fixed scale for the y-axis; otherwise, the scale is set automatically

3.3.2 With RTKLIB

The RTKLIB software is recommended for enhanced interactive viewing of various plots and the visualization of postfit residuals. However, a limitation is that the RTKLIB author provides executables only for Windows users. Linux users need to compile the GUI applications by themselves using the Qt library.

Using RTKLIB for visualization is straightforward:

- 1. Open the application "rtkplot.exe"
- 2. Clike the menu "File" > "Open Solution-1" > Select the generated stat file
- 3. Interactively view the various plots

Figure 3.13 shows some example visualizations. A useful tip: you can open two solutions within the same window for easy comparison.

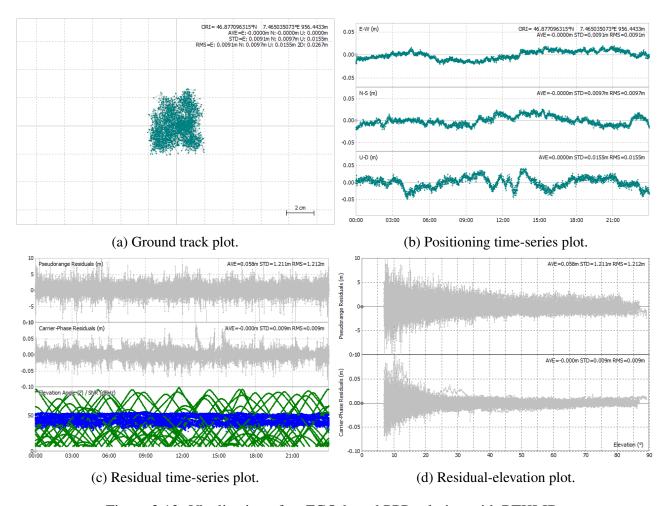


Figure 3.13: Visulization of an FGO-based PPP solution with RTKLIB.

4 Examples

This section provides some examples of using pppx for various types of data processing. The corresponding folder is 'example/pppx/'. Specifically, two RINEX files and some products are provided in "example/pppx/rinex/" and "example/pppx/products/", respectively. The basic information of the observation and product files can be found in Table 4.1 and Table 4.2, respectively. Note that the VMF1 grid product is a spliced file of the epoch 00 h, 06 h, 12 h, 18 h of the current day and the 00 h of the next day. By default, GPS and Galileo observations are used for each example, except that the RTK example is GPS only.

Table 4.1: GNSS data used in examples.

| Data | Description |
|--|-----------------------|
| ZIM200CHE_R_20221000000_01D_30S_MO.rnx | Rover station (GREC) |
| ZIMM00CHE_R_20221000000_01D_30S_MO.rnx | Reference station (G) |

Table 4.2: Products used in examples.

| Product | Description |
|--|------------------------------------|
| BRDC00IGS_R_20220010000_01D_MN.rnx | Broadcast ephemeris for multi-GNSS |
| COD0MGXFIN_20221000000_01D_05M_ORB.SP3 | Precise orbit from CODE |
| COD0MGXFIN_20221000000_01D_30S_CLK.CLK | Precise clock from CODE |
| COD0MGXFIN_20221000000_01D_15M_ATT.OBX | Satellite attitude from CODE |
| COD0MGXFIN_20221000000_01D_01D_OSB.BIA | Satellite bias from CODE |
| COD0MGXFIN_20221000000_03D_12H_ERP.ERP | ERP from CODE |
| codg1000.22i | GIM from CODE |
| VMFG_2022100 | spliced VMF1 grid from TU Vienna |

4.1 SPP: Single Point Positioning

The pppx software supports multi-GNSS SPP, including GPS, GLONASS, Galileo, BeiDou, and QZSS, with either broadcast ephemeris or precise satellite products. Various tropospheric and ionospheric models are supported. However, only kinematic mode is currently supported with either LSQ or FGO as a solver. Note that LSQ- and FGO-based SPP are both epoch-wise solutions (no constraints between epochs), and the only difference is that FGO utilize the Huber loss function (2 m threshold) to improve robustness. Here, the LSQ solver is used since the GNSS data used in the examples are from geodetic-grade receivers.

Here, SPP solutions with IF combination and single-frequency observations are demonstrated. Both examples use broadcast ephemeris, which is the most common case for SPP users. Specifically, GMF model and IF combination are used to correct tropospheric and ionospheric delays for the IF solution, and GMF and a GIM product and are used

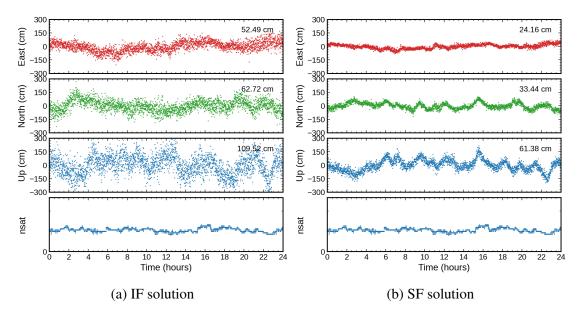


Figure 4.1: Positioning results of SPP solutions.

for the single-frequency solution. The other settings are just kept as defaults. The corresponding configuration files can be found as "example/pppx/00_spp_if.ini" and "example/pppx/01_spp_sf.ini", respectively.

The positioning results are shown in Figure 4.1. It is found that the single-frequency solution is better then IF solution. It is attributed to the fact that the IF combination amplifies the noise of pseudorange by about three times, and the ionospheric delays can be well corrected with the GIM product for the station ZIM2, which locates at middle altitude.

4.2 PPP: Precise Point Positioning

Here, PPP solutions with Kalman filter or FGO as a solver are demonstrated. The corresponding configuration files can be found as "example/pppx/02_ppp_ekf.ini" and "example/pppx/03_ppp_fgo.ini", respectively. The Kalman filter-based solution simulate the real-time scenario and output a forward only solution. The FGO-based solution is dedicated to post-processing and output a batch processing solution, i.e., no convergence period. Besides, FGO utilize Huber loss function to improve robustness, i.e., thresholds of 2 m and 0.02 m for pseudorange and carrier phase observations, respectively.

The positioning results are displayed in Figure 4.2. It is observed that there is no convergence period for the FGO-based solution, but the EKF solution takes approximately 15 min to get converged. It is attributed to that all the GNSS observations are used to form a large LSQ problem and all the parameters are solved together with FGO, while parameters are solved epoch-by-epoch with EKF.

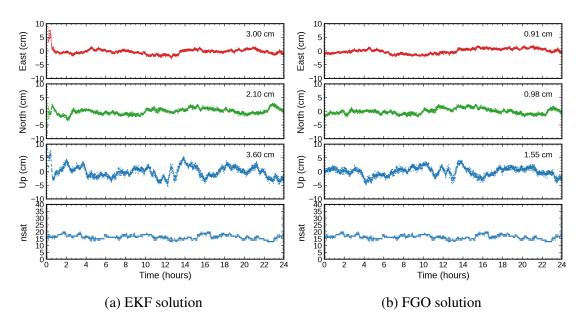


Figure 4.2: Positioning results of PPP solutions.

4.3 RTK: Real-Time Kinematic

The pppx software only supports short baseline solutions. Thus, "[model] trop" and "[model] iono" are always "none". Only "ekf" is supported for RTK. The corresponding configuration file can be found as "example/pppx/05_rtk.ini".

The positioning result is shown in Figure 4.3. The precision is 0.24 cm, 0.28 cm, and 0.48 cm for the east, north, and up components, respectively. It is typical precision for short baseline solutions with ambiguity resolved.

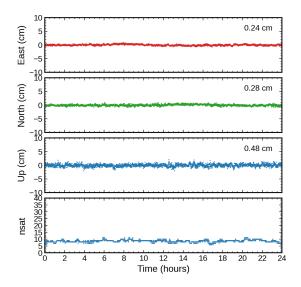


Figure 4.3: Positioning results of a short baseline solution between ZIM2 and ZIMM.

4.4 TDP: Time-Differenced Positioning

TDP is useful for earthquake studies.

An example will be provided in the future.

5 Troubleshooting

Text

6 FAQs

Text

A File Download

A.1 Download GNSS observation

- 1. CDDIS: https://cddis.nasa.gov/archive/gnss/data
- 2. EPN: ftp://ftp.epncb.oma.be/pub/obs
- 3. PBO: https://data.unavco.org/archive/gnss/
- 4. GA: https://data.gnss.ga.gov.au/docs/home/gnss-data.html
- 5. Curtin: http://saegnss2.curtin.edu/ldc
- 6. Hongkong: https://rinex.geodetic.gov.hk

A.2 Download IGS Products

Available websites for downloading GNSS products

- CDDIS: https://cddis.nasa.gov/archive/gnss/
- 2. CODE: http://ftp.aiub.unibe.ch/CODE_MGEX/CODE/
- 3. ESA: http://navigation-office.esa.int/products/gnss-products/
- 4. CNES: http://www.ppp-wizard.net/daily.html

FTP sites:

- 1. CDDIS: ftps://gdc.cddis.eosdis.nasa.gov/gnss/
- 2. CODE: ftp://ftp.aiub.unibe.ch/CODE_MGEX/CODE/
- 3. WHU: ftp://igs.gnsswhu.cn/pub/
- 4. IGN: ftp://igs.ign.fr/pub/igs

Other products:

 VMF1: http://vmf.geo.tuwien.ac.at/trop_products/GRID/2.5x2/VMF1/ VMF1_OP/

A.3 Download Table Files

Ocean tide loading

Old portal: http://holt.oso.chalmers.se/loading/index-aside-2404271219.html

New portal: https://barre.oso.chalmers.se/loading/l.php

Here, we use the old portal to download oceanload coefficients:

- 1. Ocean tide model -> select "FES2004"
- 2. Keep other options as default values
- 3. Enter the station list: either XYZ or BLH
- 4. Enter and email address and click "Submit"

The required oceanload coefficients will be sent to you by email, and then you need to append the coefficients to the table file "table/oceanload".

ANTEX

https://files.igs.org/pub/station/general