

## 3.2 Auto operation start



(1) Turn on the [MAIN SWITCH].

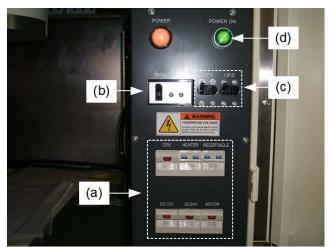


- (2) Turn on the (a).
- (3) Turn on the (b).
- (4) Turn on the (c).
- (5) Turn on the (d).
- \* Turn on the UV power when UV function is in use.

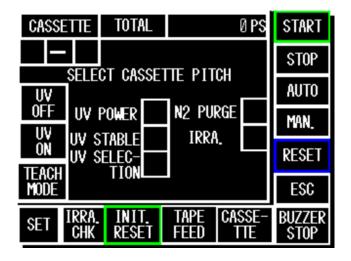

(6) MAIN SCREEN is displayed, and buzzer sounds. Press [BUZZER STOP] key to stop the sound.

(\*) The contents of "MAIN SCREEN" may differ depending on options.

#### MAIN SCREEN

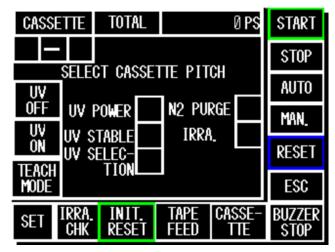

(7) Press [MAN.] key on the MAIN SCREEN to display 1<sup>st</sup> page of the setting screen.

1<sup>st</sup> page of the setting screen

WAFER	CASS.	T (DATA	START
SIZĒ	MODE	T/DATA	STOP
WAFER	LAMP	TOTAL	AUTO
TYPE	TIME	TIMER	MAN.
UV, N2 Select	T3 ALI. SELECT		RESET
		ELD.	ESC
		FWD Page	BUZZER STOP

Pressing [FWD PAGE] / [REV PAGE] switches the display of "1<sup>st</sup> page of the setting screen" and "2<sup>nd</sup> page of the setting screen".

2<sup>nd</sup> page of the setting screen

ALIGNER	3-TIMES APPLY	APPLY Down	START
			STOP
T/1,2 SELECT	2 T/3 REPEEL ST SELECT SELECT	REPEEL SELECT	AUTO
9ELEG1	9ELEG I	SELECT	MAN.
PAD UP Timer	TABLE Blow	IRRA., N2 Timer	RESET
DE!			ESC
REV Page	TBL. PAD SELECT	ROB. VAC. SELECT	BUZZER Stop

Confirm each setting on the screen shown on the next page or later.


To enter each screen, press each key on the "1<sup>st</sup>/2<sup>nd</sup> page of the setting screen".


(8) Confirm whether the setting conditions for wafers to process are correct with each screen shown below. Select appropriate items if the setting condition is inappropriate.

- [ESC] key: Pressing the key displays "1st / 2nd of the setting screen".

- [AUTO] key: Pressing the key displays MAIN SCREEN.



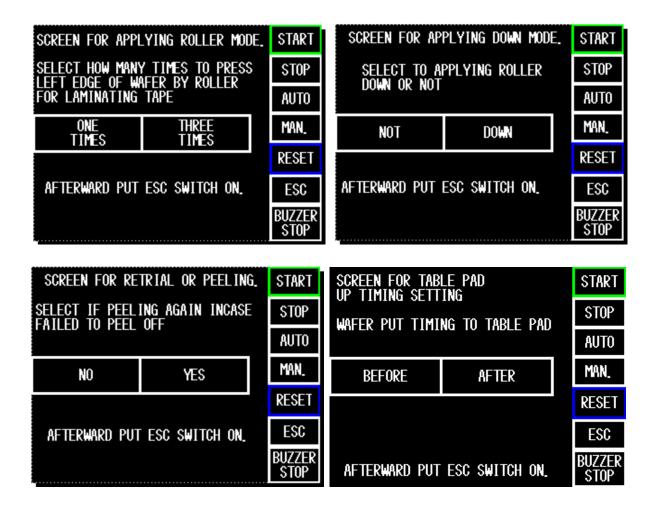


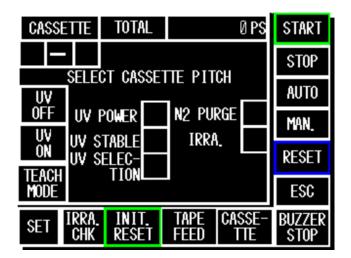

(9) Press [INIT. RESET] key to enable the machine auto operation. The each unit moves to auto operation starting position (Initial reset).



(10) After the initial reset has completed, place the cassettes on the cassette table. Close the front cover.

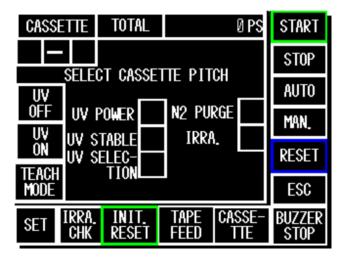

(11) Press [START] key to start auto operation.