Sentinel Automatic Antenna Tracker LITE

ASSEMBLY MANUAL

VirtualPilot

NOTICE

The information contained in this document is believed to be accurate in all respects but is not warranted. The information is subject to change without notice and should not be construed in any way as a commitment by the manufacturer, supplier, distributor, affiliates or subsidiaries.

The manufacturer, supplier, distributor, affiliates or subsidiaries assume no responsibility or liabilities for any errors or omissions in this document.

Revisions of this document or new editions of it may be issued to incorporate such changes.

No part of this document can be reproduced or transmitted in any form or by any means without written permission from the manufacturer.

This device is a hobby grade device intended for use by hobbyists. It is not intended or warranted for commercial or military use.

This device must only be used in compliance with applicable legislation.

This use of device can be impacted by ferromagnetic / electromagnetic and GPS interference.

Trademarks

Other product names mentioned in this document may be trademarks of their respective companies and are hereby acknowledged.

© Copyright 2021, VirtualPilot All rights reserved

TABLE OF CONTENTS

AAT – DIY PCB assembly	4
AAT – DIY PCB connections	5
AAT – 3D STL and source files	6
AAT – 3D print recommendations	6
AAT – 3D printed component preparation	6
AAT – DIY Case assembly	7
AAT – Assembled unit	9
AAT – internal views	10
Parts list – STL components	11
Parts list – optional AAT STL extras	14
Parts list – miscellaneous STL	15
Parts list – fixings	16
Parts list – components	16
Parts list – extras	17

AAT - DIY PCB assembly

Solder the following parts to the PCB:

- 1. RCA/Phone/CINCH video connector
- 2. 4 pole video Fatshark style connector
- 3. DC Power connectors * 2
- 4. Buzzer (NOTE POLARITY)
- 5. LED's * 4 use 3d printed assembly jig to help (NOTE POLARITY below)
- 6. 0.1" PCB header pins for strip on the following:
 - a. I2C (4 pins *1)
 - b. W-EN (2 pins * 1)
 - c. Servo (3 pins * 2)
 - d. VRX-IN (5 pins *1)

OPTIONAL – typically not used:

- 1. OPTIONAL 0.1" PCB header pins for strip on the following:
 - a. VRX-OUT (4 pins *1)
 - b. I2C (4 pins *1)
 - c. ISP (3 pins * 2)
 - d. FTDI (6 pins * 1)
 - e. W-FTDI (5 pins * 1)
 - f. W-BOOT (2 pins * 1)


IMPORTANT – fit a jumper on W-EN pins to enable WiFi/GUI use IMPORTANT – LED POLARITY: long leg goes to square PCB pinhole

DANGER ZONE:

VRX-IN connector has both +5v and VCC (same as supply battery voltage input). Check carefully any wiring to VRX-IN.

Ensure any RX powered by the PCB can support the chosen voltage.

AAT - DIY PCB connections

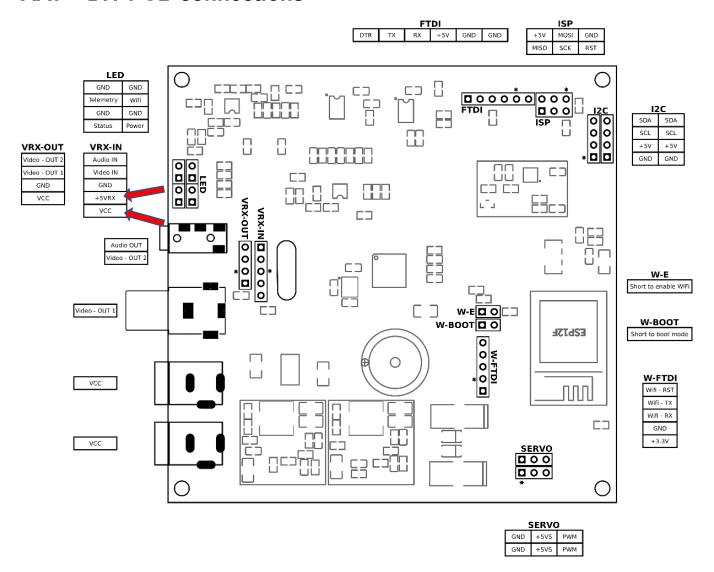

DANGER ZONE:

VRX-IN connector has both +5v and VCC (same as supply battery voltage input). Check carefully any wiring to VRX-IN.

Ensure any RX powered by the PCB can support the chosen voltage.

AAT - 3D STL and source files

Files are available here: https://github.com/aat-sentinel/AAT-lite-hardware

AAT - 3D print recommendations

Print recommendations:

- Print with the highest % of material that you can as the AAT will need to be resilient enough to deal with handling during normal and potentially rough use.
- Figures below are recommended minimum for PLA / ABS.
- Adjust for your needs.
- TIP for printing gears the most common fault is to avoid "elephants foot". See guide: https://rigid.ink/pages/ultimate-troubleshooting-guide#issue-elephants-foot-15

Item	ABS/PLA	PET-G
QR adapter	80% / 5 shells	80% / 5 shells
Box - base	35% / 5 shells	55% / 5 shells
Gears	35% / 5 shells	55% / 5 shells
All other parts	25% / 5 shells	45% / 5 shells

AAT – 3D printed component preparation

Preparation:

- 1. Smooth edges of **Box panel xxxx** to ensure a good fit in **Box base**.
- 2. Check gears mesh together well by rotating Gears servo and Gears main shaft together. If required smooth teeth with a file or glass paper until a good mesh is achieved.
- 3. Fixing holes in the **Tilt base** are printed horizontally and may benefit from clearing with a 2mm drill.
- 4. Servo holes in the **Tilt mount plate** are printed horizontally and may benefit from clearing with a 2mm drill.
- 5. The bearing pivot hole in the **Tilt mount plate** is printed horizontally and will benefit from clearing with a 3mm drill.
- 6. Smooth sharp edges as required. https://github.com/aat-sentinel/AAT-lite-hardware

AAT – DIY Case assembly

Box assembly:

- 7. Attach tripod **QR adapter** to **Box base** using M3 10mm self tapping screws.
- 8. Test fit to tripod before proceeding as QR adapters can vary. This is best time to resolve.
- 9. OPTIONAL OLED display fit OLED into Box panel front using OLED spacer. WARNING! Take great care with OLED displays – they are very fragile until fully mounted. The glass will break even if gentle pressure is applied in the wrong places. Make sure it fits correctly into mounting position before tightening screws. The unit can be used without OLED fitted.
- 10. Fit Box panels front to the PCB and place into Box base. Fix PCB to Box base using M3 10mm self tapping screws.
- 11. If using an OLED display, attach 4 wires from OLED to PCB I2C connector. Take note to ensure correct pins are connected at each end.
- 12. Note PCB is rectangular. Side panels are the longest.

Gear assembly:

- 1. Press fit 2 * bearings into Box top.
- 2. Attach Bearing retainer outer to Box top using M3 10mm self tapping screws.
- 3. Test fit to tripod before proceeding as QR adapters can vary.
- 4. Attach servo to **Box top** using M3 18mm bolts and M3 nuts. Servo should be able to move with a little force to allow adjustment later. Fit servo from underside.
- 5. Remove servo horn, fit **Gears servo** to servo circular horn using M2 10mm screws from servo pack. Note it fits under the servo horn. Trim excess.
- 6. Attach servo horn to servo.
- 7. Power up servo and ensure it is set to center using FC, RX, servo tester etc.
- 8. Fit Gears main shaft into Box-top bearings. Place so that any one of the four holes faces to the edge.
- 9. Attach **Bearing retainer inner** to **Gears main shaft** using M3 10mm self tapping screws.
- 10. Push Gears servo towards Gears main shaft with very gentle pressure to minimise any gear movement and tighten servo bolts.
- 11. Attach **Box gear cover** to **Box top** using M3 10mm self tapping screws.


Tilt assembly:

- 1. Press fit bearing into one of **Tilt arms**.
- 2. Fit servo horn to inside of **Tilt arms** using M2 10mm self tapping screws. Excess may bet cut /files smooth
- 3. Fit **Tilt arms** to **Tilt base** using M3 10mm self tapping screws.
- 4. Fit tilt servo to **Tilt mount plate** using M3 10mm self tapping screws and with the servo spline positioned in centre of plate.
- 5. Fit tilt servo to Tilt mount plate to Tilt arms using M3 16mm bolt and nut. Use washer under nut and between Tilt – mount plate and Tilt – arms. Do not over tighten. Plate should move freely.
- Power up servo and ensure it is set to center using FC, RX, servo tester etc.
- 7. Servo spline can be placed into servo horn with mount plate at approx. 45-degree angle. This is starting point for future calibration. Servo horn retaining screw can be fitted – or after tilt calibration.
- 8. Attach **Tilt base** to **Gears main shaft** using M3 10mm self tapping screws.


Final assembly:

- 1. Prepare cables used to connect the AAT PCB to the receiver. Take utmost care to check the polarity of cables and connections to avoid the magic smoke that powers all electronics. Servo wires are ideal and are included for this. Pins can be swapped to make the correct cable similar to this video link https://www.youtube.com/watch?v=rR6aX 8v3pM
- 2. Wind tilt servo cable around a pen to produce a helical cable greatly improves endurance and performance of cables during pan actions.
- 3. Similarly, wind a video connection cable.
- 4. Feed both servo and video connection cables through the **Tilt base** in preparation for connecting to the PCB.
- 5. Insert Box panels side and Box panels rear into Box base.
- Position the assembled tilt unit above the box and connect servo and video cables to the AAT PCB.
- 7. Lower the tilt unit onto the box, noting the arrows on the components showing the correct orientation of the top assembly in relation to the lower assembly and fit using M3 16mm self tapping screws.

AAT – Assembled unit

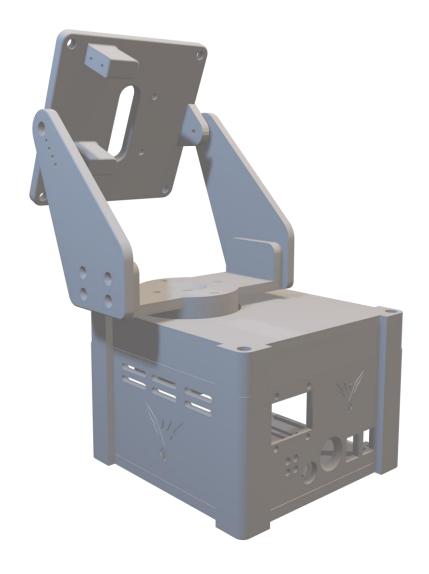

AAT – internal views

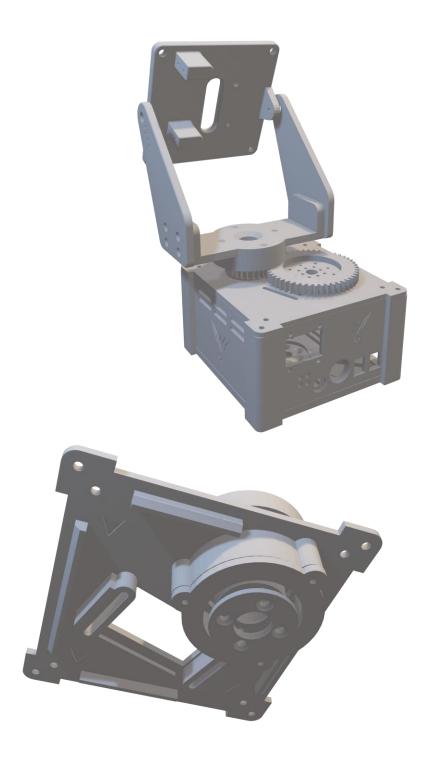


Parts list – STL components

Box - base



QR adapter

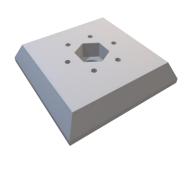


Box - panels side




Box – panels front and rear





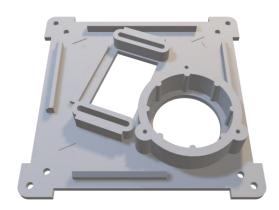

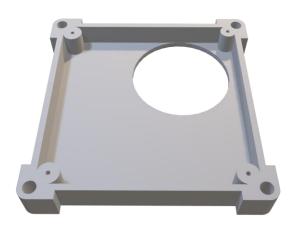

Gears - main shaft



Gears - servo



Bearing retainer - inner



Bearing retainer - outer




Tilt - base Tilt - arms





Tilt – mount plate

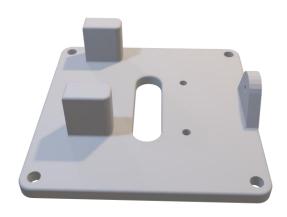

Parts list – optional AAT STL extras


OLED panel mount



4 " LCD side panel mount



Battery side panel battery mount

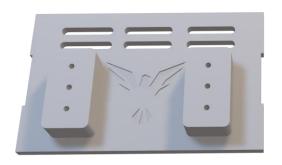




EACHINE RX5808 pro mount






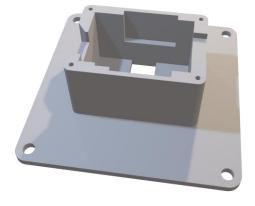

Parts list - miscellaneous STL

Tripod leg battery mount

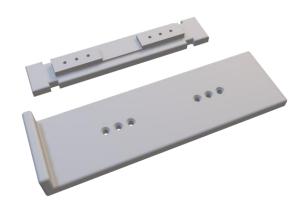

XT60 in line power switch



Tripod leg GoPro mount



XT60M to XT60F in line power switch



Tripod leg 7" LCD mount



XT60M to XT60F in line power switch

Parts list – fixings

Item	QTY
6805 2RS bearing	2
F693ZZ bearing	1
M3 16mm ST screw	4
M3 10mm ST screw	37
M2 10mm ST screw	6
M3 bolt 18mm	5
M3 bolt 12mm	4
M3 Washer	2
M3 Nut	9
OLED screw (use M3 12)	4
OLED nut (use M3)	4
2 * MG996R 180	2

Parts list – components

Item	QTY
RCA / Phone / CINCH	1
4 Pole 3.5mm	1
LED	4
OLED	1
Buzzer	1
PCB header pins	1
Jumper	1

Parts list – extras

Servo lead (RX internal) 150mm M2M	1
Servo lead (RX external) 100 M2F	1
Goggles video cable - 4 pole fatshark style 3m	1
XT60-DC 5.5/2.1 Power leads	1
OLED wires	4