otpod Documentation

Release

Antoine Dumas

CONTENTS

1	Cont	tents:		3
	1.1	Docum	entation of the API	3
		1.1.1	Data analysis	3
		1.1.2	POD computation methods	9
		1.1.3	Adaptive algorithms	29
		1.1.4	Sensitivity analysis	42
		1.1.5	Tools	44
	1.2	Exampl	es of the API	49
		1.2.1	Linear model analysis	49
		1.2.2	Linear model analysis with censored data	58
		1.2.3	Linear model POD	62
		1.2.4	Linear model POD with censored data	69
		1.2.5	Quantile Regression POD	74
		1.2.6	Polynomial chaos POD	78
		1.2.7	Kriging POD	86
		1.2.8	POD Summary	93
		1.2.9	Adaptive Signal POD using Kriging	113
		1.2.10	Adaptive Hit Miss POD	124
		1.2.11	Sobol Indices	134
2	Indic	ces and t	ables	141
In	dex			143

otpod is a module for OpenTURNS.

CONTENTS 1

2 CONTENTS

CHAPTER

ONE

CONTENTS:

1.1 Documentation of the API

This is the user manual for the Python bindings to the otpod library.

1.1.1 Data analysis

UnivariateLinearModelAnalysis

Linear regression analysis with residuals hypothesis tests.

UnivariateLinearModelAnalysis

class UnivariateLinearModelAnalysis (*args)

Linear regression analysis with residuals hypothesis tests.

Available constructors:

UnivariateLinearModelAnalysis(inputSample, outputSample)

UnivariateLinearModelAnalysis(inputSample, outputSample, noiseThres, saturationThres, resDistFact, box-Cox)

Parameters inputSample: 2-d sequence of float

Vector of the defect sizes, of dimension 1.

outputSample: 2-d sequence of float

Vector of the signals, of dimension 1.

noiseThres: float

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None.

resDistFact: openturns.DistributionFactory

Distribution hypothesis followed by the residuals. Default is openturns.NormalFactory.

boxCox: bool or float

Enable or not the Box Cox transformation. If boxCox is a float, the Box Cox transformation is enabled with the given value. Default is False.

Notes

This method automatically:

- •computes the Box Cox parameter if boxCox is True,
- •computes the transformed signals if boxCox is True or a float,
- •builds the univariate linear regression model on the data,
- •computes the linear regression parameters for censored data if needed,
- •computes the residuals,
- •runs all hypothesis tests.

Examples

Generate data:

```
>>> import openturns as ot
>>> import otpod
>>> N = 100
>>> ot.RandomGenerator.SetSeed(0)
>>> defectDist = ot.Uniform(0.1, 0.6)
>>> epsilon = ot.Normal(0, 1.9)
>>> defects = defectDist.getSample(N)
>>> signalsInvBoxCox = defects * 43. + epsilon.getSample(N) + 2.5
>>> invBoxCox = ot.InverseBoxCoxTransform(0.3)
>>> signals = invBoxCox(signalsInvBoxCox)
```

Run analysis with gaussian hypothesis on the residuals:

```
>>> analysis = otpod.UnivariateLinearModelAnalysis(defects, signals, boxCox=True)
>>> print analysis.getIntercept() # get intercept value
[Intercept for uncensored case : 2.51037]
>>> print analysis.getKolmogorovPValue()
[Kolmogorov p-value for uncensored case : 0.835529]
```

Run analysis with noise and saturation threshold:

```
>>> analysis = otpod.UnivariateLinearModelAnalysis(defects, signals, 60., 1700., boxCox=True)
>>> print analysis.getIntercept() # get intercept value for uncensored and censored case
[Intercept for uncensored case : 4.28758, Intercept for censored case : 3.11243]
>>> print analysis.getKolmogorovPValue()
[Kolmogorov p-value for uncensored case : 0.346827, Kolmogorov p-value for censored case : 0.885006]
```

Run analysis with a Weibull distribution hypothesis on the residuals

```
>>> analysis = otpod.UnivariateLinearModelAnalysis(defects, signals, 60., 1700., ot.WeibullFactory(), boxCox=True)
>>> print analysis.getIntercept() # get intercept value for uncensored and ocensored case
[Intercept for uncensored case : 4.28758, Intercept for censored case : 3.11243]
>>> print analysis.getKolmogorovPValue()
[Kolmogorov p-value for uncensored case : 0.476036, Kolmogorov p-value for ocensored case : 0.71764]
```

Methods

drawBoxCoxLikelihood([name])	Draw the loglikelihood versus the Box Cox parameter.
drawLinearModel([model, name])	Draw the linear regression prediction versus the true
	data.
drawResiduals([model, name])	Draw the residuals versus the defect values.
<pre>drawResidualsDistribution([model, name])</pre>	Draw the residuals histogram with the fitted distribution.
drawResidualsQQplot([model, name])	Draw the residuals QQ plot with the fitted distribution.
getAndersonDarlingPValue()	Accessor to the Anderson Darling test p-value.
getBoxCoxParameter()	Accessor to the Box Cox parameter.
getBreuschPaganPValue()	Accessor to the Breusch Pagan test p-value.
getCramerVonMisesPValue()	Accessor to the Cramer Von Mises test p-value.
getDurbinWatsonPValue()	Accessor to the Durbin Watson test p-value.
getHarrisonMcCabePValue()	Accessor to the Harrison McCabe test p-value.
<pre>getInputSample()</pre>	Accessor to the input sample.
getIntercept()	Accessor to the intercept of the linear regression model.
getKolmogorovPValue()	Accessor to the Kolmogorov test p-value.
getNoiseThreshold()	Accessor to the noise threshold.
<pre>getOutputSample()</pre>	Accessor to the output sample.
getR2()	Accessor to the R2 value.
getResiduals()	Accessor to the residuals.
getResidualsDistribution()	Accessor to the residuals distribution.
getResults()	Print results of the linear analysis.
getSaturationThreshold()	Accessor to the saturation threshold.
getSlope()	Accessor to the slope of the linear regression model.
getStandardError()	Accessor to the standard error of the estimate.
getZeroMeanPValue()	Accessor to the Zero Mean test p-value.
saveResults(name)	Save all analysis test results in a file.

drawBoxCoxLikelihood(name=None)

Draw the loglikelihood versus the Box Cox parameter.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

 \mathbf{ax} : matplotlib.axes

Matplotlib axes object.

Notes

This method is available only when the parameter *boxCox* is set to True.

drawLinearModel (model='uncensored', name=None)

Draw the linear regression prediction versus the true data.

Parameters model: string

The linear regression model to be used, either *uncensored* or *censored* if censored threshold were given. Default is *uncensored*.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

drawResiduals (model='uncensored', name=None)

Draw the residuals versus the defect values.

Parameters model: string

The residuals to be used, either *uncensored* or *censored* if censored threshold were given. Default is *uncensored*.

name : string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

drawResidualsDistribution (model='uncensored', name=None)

Draw the residuals histogram with the fitted distribution.

Parameters model: string

The residuals to be used, either *uncensored* or *censored* if censored threshold were given. Default is *uncensored*.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

drawResidualsQQplot (model='uncensored', name=None)

Draw the residuals QQ plot with the fitted distribution.

Parameters model: string

The residuals to be used, either *uncensored* or *censored* if censored threshold were given. Default is *uncensored*.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

getAndersonDarlingPValue()

Accessor to the Anderson Darling test p-value.

Returns pValue: openturns.NumericalPoint

Either the p-value for the uncensored case or for both cases.

getBoxCoxParameter()

Accessor to the Box Cox parameter.

Returns lambdaBoxCox: float

The Box Cox parameter used to transform the data. If the transformation is not enabled None is returned.

getBreuschPaganPValue()

Accessor to the Breusch Pagan test p-value.

Returns pValue: openturns.NumericalPoint

Either the p-value for the uncensored case or for both cases.

getCramerVonMisesPValue()

Accessor to the Cramer Von Mises test p-value.

Returns pValue: openturns.NumericalPoint

Either the p-value for the uncensored case or for both cases.

getDurbinWatsonPValue()

Accessor to the Durbin Watson test p-value.

Returns pValue: openturns.NumericalPoint

Either the p-value for the uncensored case or for both cases.

getHarrisonMcCabePValue()

Accessor to the Harrison McCabe test p-value.

Returns pValue: openturns.NumericalPoint

Either the p-value for the uncensored case or for both cases.

getInputSample()

Accessor to the input sample.

```
Returns defects: openturns.NumericalSample
```

The input sample which is the defect values.

getIntercept()

Accessor to the intercept of the linear regression model.

```
Returns intercept: openturns. Numerical Point
```

The intercept parameter for the uncensored and censored (if so) linear regression model.

getKolmogorovPValue()

Accessor to the Kolmogorov test p-value.

```
Returns pValue: openturns.NumericalPoint
```

Either the p-value for the uncensored case or for both cases.

getNoiseThreshold()

Accessor to the noise threshold.

Returns noiseThres: float

The noise threhold if it exists, if not it returns *None*.

getOutputSample()

Accessor to the output sample.

```
Returns signals: openturns. Numerical Sample
```

The input sample which is the signal values.

getR2()

Accessor to the R2 value.

```
Returns R2: openturns.NumericalPoint
```

Either the R2 for the uncensored case or for both cases.

getResiduals()

Accessor to the residuals.

```
Returns residuals: openturns.NumericalSample
```

The residuals computed from the uncensored and censored linear regression model. The first column corresponds with the uncensored case.

getResidualsDistribution()

Accessor to the residuals distribution.

```
Returns distribution: list of openturns. Distribution
```

The fitted distribution on the residuals, computed in the uncensored and censored (if so) case.

getResults()

Print results of the linear analysis.

getSaturationThreshold()

Accessor to the saturation threshold.

Returns saturationThres: float

The saturation threhold if it exists, if not it returns *None*.

getSlope()

Accessor to the slope of the linear regression model.

Returns slope: openturns. Numerical Point

The slope parameter for the uncensored and censored (if so) linear regression model.

getStandardError()

Accessor to the standard error of the estimate.

Returns stderr: openturns.NumericalPoint

The standard error of the estimate for the uncensored and censored (if so) linear regression model.

getZeroMeanPValue()

Accessor to the Zero Mean test p-value.

Returns pValue: openturns.NumericalPoint

Either the p-value for the uncensored case or for both cases.

saveResults (name)

Save all analysis test results in a file.

Parameters name: string

Name of the file or full path name.

Notes

The file can be saved as a csv file. Separations are made with tabulations.

If *name* is the file name, then it is saved in the current working directory.

1.1.2 POD computation methods

UnivariateLinearModelPOD	Linear regression based POD.
QuantileRegressionPOD	Quantile regression based POD.
PolynomialChaosPOD	Polynomial chaos based POD.
KrigingPOD	Kriging based POD.

UnivariateLinearModelPOD

class UnivariateLinearModelPOD (*args)

Linear regression based POD.

Available constructors:

 $Univariate Linear Model POD (\it analysis=analysis, detection=detection)$

UnivariateLinearModelPOD(inputSample, outputSample, detection, noiseThres, saturationThres, resDistFact, boxCox)

Parameters analysis: UnivariateLinearModelAnalysis

Linear analysis object.

inputSample: 2-d sequence of float

Vector of the defect sizes, of dimension 1.

outputSample: 2-d sequence of float

Vector of the signals, of dimension 1.

detection: float

Detection value of the signal.

noiseThres: float

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None

resDistFact: openturns.DistributionFactory

Distribution hypothesis followed by the residuals. Default is None.

boxCox: bool or float

Enable or not the Box Cox transformation. If boxCox is a float, the Box Cox transformation is enabled with the given value. Default is False.

Notes

This class aims at building the POD based on a linear regression model. If a linear analysis has been launched, it can be used as prescribed in the first constructor. It can be noticed that, in this case, with the default parameters of the linear analysis, the POD will corresponds with the linear regression model associated to a Gaussian hypothesis on the residuals.

Otherwise, all parameters can be given as in the second constructor.

Following the given distribution in *resDistFact*, the POD model is built different hypothesis:

- •if resDistFact = None, it corresponds with Berens-Binomial. This is the default case.
- •if resDistFact = openturns.NormalFactory, it corresponds with Berens-Gauss.
- •if resDistFact = {openturns.KernelSmoothing, openturns.WeibullFactory, ...}, the confidence interval is built by bootstrap.

If bootstrap is used, a progress bar is shown if the verbosity is enabled. It can be disabled using the method setVerbose.

Methods

<pre>computeDetectionSize(*args, **kwargs)</pre>	Compute the detection size for a given probability level.
drawBoxCoxLikelihood([name])	Draw the loglikelihood versus the Box Cox parameter.
drawPOD(*args, **kwargs)	Draw the POD curve.
<pre>getBoxCoxParameter()</pre>	Accessor to the Box Cox parameter.
<pre>getPODCLModel([confidenceLevel])</pre>	Accessor to the POD model at a given confidence level.
getPODModel()	Accessor to the POD model.
getR2()	Accessor to the R2 value.
getSimulationSize()	Accessor to the simulation size.
getVerbose()	Accessor to the verbosity.
run()	Build the POD models.
setSimulationSize(size)	Accessor to the simulation size.
setVerbose(verbose)	Accessor to the verbosity.

computeDetectionSize(*args, **kwargs)

Compute the detection size for a given probability level.

Parameters probabilityLevel: float

The probability level for which the defect size is computed.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

Returns result: collection of openturns. Numerical Point With Description

A NumericalPointWithDescription containing the detection size computed at the given probability level and confidence level if provided.

drawBoxCoxLikelihood(name=None)

Draw the loglikelihood versus the Box Cox parameter.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

Notes

This method is available only when the parameter boxCox is set to True.

drawPOD (*args, **kwargs)

Draw the POD curve.

Parameters probabilityLevel: float

The probability level for which the defect size is computed. Default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

defectMin, defectMax : float

Define the interval where the curve is plotted. Default : min and max values of the input sample.

nbPt: int

The number of points to draw the curves. Default is 100.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

```
Returns fig: matplotlib.figure
```

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

getBoxCoxParameter()

Accessor to the Box Cox parameter.

Returns lambdaBoxCox: float

The Box Cox parameter used to transform the data. If the transformation is not enabled None is returned.

getPODCLModel (confidenceLevel=0.95)

Accessor to the POD model at a given confidence level.

Parameters confidenceLevel: float

The confidence level the POD must be computed. Default is 0.95

Returns PODModelCl: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value at the confidence level given as parameter.

getPODModel()

Accessor to the POD model.

Returns PODModel: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value.

getR2()

Accessor to the R2 value.

Returns R2: float

The R2 value.

getSimulationSize()

Accessor to the simulation size.

Returns size: int

The size of the simulation used to compute the confidence interval.

getVerbose()

Accessor to the verbosity.

Returns verbose: bool

Enable or disable the verbosity. Default is True.

run()

Build the POD models.

Notes

This method build the linear model for the uncensored or censored case depending of the input parameters. Then it builds the POD model following the given residuals distribution factory.

setSimulationSize(size)

Accessor to the simulation size.

Parameters size: int

The size of the simulation used to compute the confidence interval.

setVerbose(verbose)

Accessor to the verbosity.

Parameters verbose: bool

Enable or disable the verbosity.

QuantileRegressionPOD

class QuantileRegressionPOD (*args)

Quantile regression based POD.

Available constructor:

QuantileRegressionPOD(inputSample, outputSample, detection, noiseThres, saturationThres, boxCox)

Parameters inputSample: 2-d sequence of float

Vector of the defect sizes, of dimension 1.

outputSample: 2-d sequence of float

Vector of the signals, of dimension 1.

detection: float

Detection value of the signal.

noiseThres: float

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None

boxCox: bool or float

Enable or not the Box Cox transformation. If boxCox is a float, the Box Cox transformation is enabled with the given value. Default is False.

Notes

This class aims at building the POD based on a quantile regression model. The return POD model corresponds with an interpolate function built with the defect values computed for the given quantile as parameters. The default is 21 quantile values from 0.05 to 0.98. They can be user-defined using the method *setQuantile*.

The confidence level is computed by bootstrap. The POD model at the given confidence level is also an interpolate function based on the defect quantile value computed at the given confidence level.

The computeDetectionSize method calls the real quantile regression at the given probability level.

A progress bar is shown if the verbosity is enabled. It can be disabled using the method setVerbose.

Methods

computeDetectionSize(*args, **kwargs)	Compute the detection size for a given probability level.
drawBoxCoxLikelihood([name])	Draw the loglikelihood versus the Box Cox parameter.
drawLinearModel(probabilityLevel[, name])	Draw the quantile regression prediction versus the true
	data.
drawPOD(*args, **kwargs)	Draw the POD curve.
<pre>getBoxCoxParameter()</pre>	Accessor to the Box Cox parameter.
<pre>getPODCLModel([confidenceLevel])</pre>	Accessor to the POD model at a given confidence level.
getPODModel()	Accessor to the POD model.
getQuantile()	Accessor to the quantile list for the regression.
getR2(quantile)	Accessor to the pseudo R2 value.
getSimulationSize()	Accessor to the simulation size.
getVerbose()	Accessor to the verbosity.
run()	Build the POD models.
setQuantile(quantile)	Accessor to the quantile list for the regression.
setSimulationSize(size)	Accessor to the simulation size.
setVerbose(verbose)	Accessor to the verbosity.

computeDetectionSize(*args, **kwargs)

Compute the detection size for a given probability level.

Parameters probabilityLevel: float

The probability level for which the defect size is computed.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

 $\textbf{Returns result}: \textbf{collection of} \ \texttt{openturns.NumericalPointWithDescription}$

A NumericalPointWithDescription containing the detection size computed at the given probability level and confidence level if provided.

drawBoxCoxLikelihood(name=None)

Draw the loglikelihood versus the Box Cox parameter.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

Notes

This method is available only when the parameter *boxCox* is set to True.

drawLinearModel (probabilityLevel, name=None)

Draw the quantile regression prediction versus the true data.

Parameters probabilityLevel: float

The probability level for which the quantile regression is performed

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

drawPOD (*args, **kwargs)

Draw the POD curve.

Parameters probabilityLevel: float

The probability level for which the defect size is computed. Default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

defectMin, defectMax: float

Define the interval where the curve is plotted. Default: min and max values of the input sample.

nbPt: int

The number of points to draw the curves. Default is 100.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

getBoxCoxParameter()

Accessor to the Box Cox parameter.

Returns lambdaBoxCox: float

The Box Cox parameter used to transform the data. If the transformation is not enabled None is returned.

getPODCLModel (confidenceLevel=0.95)

Accessor to the POD model at a given confidence level.

Parameters confidenceLevel: float

The confidence level the POD must be computed. Default is 0.95

Returns PODModelCl: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value at the confidence level given as parameter.

getPODModel()

Accessor to the POD model.

Returns PODModel: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value.

getQuantile()

Accessor to the quantile list for the regression.

getR2 (quantile)

Accessor to the pseudo R2 value.

Parameters quantile: float

The quantile value for which the regression is performed.

Returns R2: float

The pseudo R2 value.

getSimulationSize()

Accessor to the simulation size.

Returns size: int

The size of the simulation used to compute the confidence interval.

getVerbose()

Accessor to the verbosity.

Returns verbose: bool

Enable or disable the verbosity. Default is True.

run()

Build the POD models.

Notes

This method build the quantile regression model. First the censored data are filtered if needed. The Box Cox transformation is performed if it is enabled. Then it builds the POD model for given data and computes using bootstrap all the defects quantile needed to build the POD model at the confidence level.

setQuantile (quantile)

Accessor to the quantile list for the regression.

Parameters quantile: sequence of float

The quantile value for which the regression is performed and the corresponding defect size is computed.

setSimulationSize(size)

Accessor to the simulation size.

Parameters size: int

The size of the simulation used to compute the confidence interval.

setVerbose (verbose)

Accessor to the verbosity.

Parameters verbose: bool

Enable or disable the verbosity.

PolynomialChaosPOD

class PolynomialChaosPOD (*args)

Polynomial chaos based POD.

Available constructor:

 $Polynomial Chaos POD (\textit{inputSample, outputSample, detection, noise Thres, saturation Thres, box Cox)$

Parameters inputSample: 2-d sequence of float

Vector of the input values. The first column must correspond with the defect sizes.

outputSample: 2-d sequence of float

Vector of the signals, of dimension 1.

detection: float

Detection value of the signal.

noiseThres: float

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None

boxCox: bool or float

Enable or not the Box Cox transformation. If boxCox is a float, the Box Cox transformation is enabled with the given value. Default is False.

Warning: The first column of the input sample must corresponds with the defects sample.

Notes

This class aims at building the POD based on a polynomial chaos model. This method must be used under the assumption that the residuals follows a Normal distribution.

The return POD model corresponds with an interpolate function built with the POD values computed for the given defect sizes. The default values are 20 defect sizes between the minimum and maximum value of the defect sample. The defect sizes can be changed using the method *setDefectSizes*.

The default polynomial chaos model is built with uniform distributions for each parameters. Coefficients are computed using the LAR algorithm combined with the KFold. The AdaptiveStrategy is chosen fixed with a linear enumerate function of maximum degree 3.

For advanced use, all parameters can be defined thanks to dedicated set methods. Moreover, if the user has already built a polynomial chaos result, it can be given as parameter using the method *setPolynomialChaosResult*, then the POD is computed based on this polynomial chaos result.

A progress bar is shown if the verbosity is enabled. It can be disabled using the method setVerbose.

Methods

<pre>computeDetectionSize(*args, **kwargs)</pre>	Compute the detection size for a given probability level.
drawBoxCoxLikelihood([name])	Draw the loglikelihood versus the Box Cox parameter.
drawPOD(*args, **kwargs)	Draw the POD curve.
drawPolynomialChaosModel([name])	Draw the polynomial chaos prediction versus the true
	data.
drawValidationGraph(*args, **kwargs)	Draw the validation graph of the metamodel.
getAdaptiveStrategy()	Accessor to the adaptive strategy.
getBoxCoxParameter()	Accessor to the Box Cox parameter.
<pre>getDefectSizes()</pre>	Accessor to the defect size where POD is computed.
getDegree()	Accessor to the polynomial chaos degree.
getDistribution()	Accessor to the parameters distribution.
<pre>getPODCLModel([confidenceLevel])</pre>	Accessor to the POD model at a given confidence level.
getPODModel()	Accessor to the POD model.
getPolynomialChaosResult()	Accessor to the polynomial chaos result.
<pre>getProjectionStrategy()</pre>	Accessor to the projection strategy.
getQ2()	Accessor to the Q2 value.
getR2()	Accessor to the R2 value.
getSamplingSize()	Accessor to the Monte Carlo sampling size.
getSimulationSize()	Accessor to the simulation size.
getVerbose()	Accessor to the verbosity.
run()	Build the POD models.
setAdaptiveStrategy(strategy)	Accessor to the adaptive strategy.
setDefectSizes(size)	Accessor to the defect size where POD is computed.
setDegree(degree)	Accessor to the polynomial chaos degree.
setDistribution(distribution)	Accessor to the parameters distribution.
setPolynomialChaosResult(chaosResult)	Accessor to the polynomial chaos result.
setProjectionStrategy(strategy)	Accessor to the projection strategy.
setSamplingSize(size)	Accessor to the Monte Carlo sampling size.
setSimulationSize(size)	Accessor to the simulation size.
setVerbose(verbose)	Accessor to the verbosity.

computeDetectionSize(*args, **kwargs)

Compute the detection size for a given probability level.

Parameters probabilityLevel: float

The probability level for which the defect size is computed.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

Returns result: collection of openturns.NumericalPointWithDescription

A NumericalPointWithDescription containing the detection size computed at the given probability level and confidence level if provided.

drawBoxCoxLikelihood(name=None)

Draw the loglikelihood versus the Box Cox parameter.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

Notes

This method is available only when the parameter boxCox is set to True.

```
drawPOD (*args, **kwargs)
```

Draw the POD curve.

Parameters probabilityLevel: float

The probability level for which the defect size is computed. Default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

defectMin, defectMax: float

Define the interval where the curve is plotted. Default: min and max values of the input sample.

nbPt: int

The number of points to draw the curves. Default is 100.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

drawPolynomialChaosModel(name=None)

Draw the polynomial chaos prediction versus the true data.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

Notes

This method only works if the dimension of the input sample is 1.

drawValidationGraph(*args, **kwargs)

Draw the validation graph of the metamodel.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

getAdaptiveStrategy()

Accessor to the adaptive strategy.

Returns strategy: openturns.AdaptiveStrategy

The adaptive strategy for the polynomial chaos.

getBoxCoxParameter()

Accessor to the Box Cox parameter.

Returns lambdaBoxCox: float

The Box Cox parameter used to transform the data. If the transformation is not enabled None is returned.

getDefectSizes()

Accessor to the defect size where POD is computed.

Returns defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

getDegree()

Accessor to the polynomial chaos degree.

Returns degree: int

The degree of the polynomial chaos.

getDistribution()

Accessor to the parameters distribution.

Returns distribution: openturns.ComposedDistribution

The input parameters distribution, default is a Uniform distribution for all parameters.

getPODCLModel (confidenceLevel=0.95)

Accessor to the POD model at a given confidence level.

Parameters confidenceLevel: float

The confidence level the POD must be computed. Default is 0.95

```
\textbf{Returns PODModelCl:} openturns. \texttt{NumericalMathFunction}
               The function which computes the probability of detection for a given defect value at the
               confidence level given as parameter.
getPODModel()
     Accessor to the POD model.
         Returns PODModel: openturns.NumericalMathFunction
               The function which computes the probability of detection for a given defect value.
getPolynomialChaosResult()
     Accessor to the polynomial chaos result.
         Returns result: openturns.FunctionalChaosResult
               The polynomial chaos result.
getProjectionStrategy()
     Accessor to the projection strategy.
         Returns strategy: openturns.ProjectionStrategy
               The projection strategy for the polynomial chaos.
getQ2()
     Accessor to the Q2 value.
         Returns Q2: float
               The Q2 value computed analytically.
getR2()
     Accessor to the R2 value.
         Returns R2: float
               The R2 value.
getSamplingSize()
     Accessor to the Monte Carlo sampling size.
         Returns size: int
               The size of the Monte Carlo simulation used to compute the POD for each defect size.
getSimulationSize()
     Accessor to the simulation size.
         Returns size: int
               The size of the simulation used to compute the confidence interval.
getVerbose()
     Accessor to the verbosity.
         Returns verbose: bool
               Enable or disable the verbosity. Default is True.
run()
     Build the POD models.
```

Notes

This method build the polynomial chaos model. First the censored data are filtered if needed. The Box Cox transformation is performed if it is enabled. Then it builds the POD models, the Monte Carlo simulation is performed for each given defect sizes. The confidence interval is computed by simulating new coefficients of the polynomial chaos, then Monte Carlo simulations are performed.

setAdaptiveStrategy (strategy)

Accessor to the adaptive strategy.

Parameters strategy: openturns.AdaptiveStrategy

The adaptive strategy for the polynomial chaos.

setDefectSizes (size)

Accessor to the defect size where POD is computed.

Parameters defectSize : sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

setDegree (degree)

Accessor to the polynomial chaos degree.

Parameters degree: int

The degree of the polynomial chaos.

setDistribution (distribution)

Accessor to the parameters distribution.

Parameters distribution: openturns.ComposedDistribution

The input parameters distribution.

setPolynomialChaosResult (chaosResult)

Accessor to the polynomial chaos result.

Parameters chaosResult: openturns.FunctionalChaosResult

The polynomial chaos result.

setProjectionStrategy(strategy)

Accessor to the projection strategy.

Parameters strategy: openturns.ProjectionStrategy

The projection strategy for the polynomial chaos.

setSamplingSize(size)

Accessor to the Monte Carlo sampling size.

Parameters size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size.

setSimulationSize(size)

Accessor to the simulation size.

Parameters size: int

The size of the simulation used to compute the confidence interval.

setVerbose (verbose)

Accessor to the verbosity.

Parameters verbose: bool

Enable or disable the verbosity.

KrigingPOD

class KrigingPOD (*args)

Kriging based POD.

Available constructor:

KrigingPOD(inputSample, outputSample, detection, noiseThres, saturationThres, boxCox)

Parameters inputSample: 2-d sequence of float

Vector of the input values. The first column must correspond with the defect sizes.

outputSample: 2-d sequence of float

Vector of the signals, of dimension 1.

detection: float

Detection value of the signal.

noiseThres: float

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None

boxCox: bool or float

Enable or not the Box Cox transformation. If boxCox is a float, the Box Cox transformation is enabled with the given value. Default is False.

Warning: The first column of the input sample must corresponds with the defects sample.

Notes

This class aims at building the POD based on a kriging model. No assumptions are required for the residuals with this method. The POD are computed by simulating conditional prediction. For each, a Monte Carlo simulation is performed. The accuracy of the Monte Carlo simulation is taken into account using the TCL.

The return POD model corresponds with an interpolate function built with the POD values computed for the given defect sizes. The default values are 20 defect sizes between the minimum and maximum value of the defect sample. The defect sizes can be changed using the method *setDefectSizes*.

The default kriging model is built with a linear basis only for the defect size and constant otherwise. The covariance model is an anisotropic squared exponential model. Parameters are estimated using the TNC algorithm, the initial starting point of the TNC is found thanks to a quasi random search of the best loglikelihood value among 1000 computations.

For advanced use, all parameters can be defined thanks to dedicated set methods. Moreover, if the user has already built a kriging result, it can be given as parameter using the method *setKrigingResult*, then the POD is computed based on this kriging result.

A progress bar is shown if the verbosity is enabled. It can be disabled using the method setVerbose.

Methods

computeDetectionSize(*args, **kwargs)	Compute the detection size for a given probability level.
drawBoxCoxLikelihood([name])	Draw the loglikelihood versus the Box Cox parameter.
drawPOD(*args, **kwargs)	Draw the POD curve.
<pre>drawValidationGraph(*args, **kwargs)</pre>	Draw the validation graph of the metamodel.
<pre>getBasis()</pre>	Accessor to the kriging basis.
<pre>getBoxCoxParameter()</pre>	Accessor to the Box Cox parameter.
getCovarianceModel()	Accessor to the kriging covariance model.
<pre>getDefectSizes()</pre>	Accessor to the defect size where POD is computed.
getDistribution()	Accessor to the parameters distribution.
getInitialStartSize()	Accessor to the initial random search size.
getKrigingResult()	Accessor to the kriging result.
getPODCLModel([confidenceLevel])	Accessor to the POD model at a given confidence level.
getPODModel()	Accessor to the POD model.
getQ2()	Accessor to the Q2 value.
getSamplingSize()	Accessor to the Monte Carlo sampling size.
getSimulationSize()	Accessor to the simulation size.
getVerbose()	Accessor to the verbosity.
run()	Build the POD models.
setBasis(basis)	Accessor to the kriging basis.
setCovarianceModel(covarianceModel)	Accessor to the kriging covariance model.
setDefectSizes(size)	Accessor to the defect size where POD is computed.
setDistribution(distribution)	Accessor to the parameters distribution.
setInitialStartSize(size)	Accessor to the initial random search size.
setKrigingResult(result)	Accessor to the kriging result.
setSamplingSize(size)	Accessor to the Monte Carlo sampling size.
setSimulationSize(size)	Accessor to the simulation size.
setVerbose(verbose)	Accessor to the verbosity.

computeDetectionSize(*args, **kwargs)

Compute the detection size for a given probability level.

Parameters probabilityLevel: float

The probability level for which the defect size is computed.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

$\textbf{Returns result}: \textbf{collection of} \ \texttt{openturns.NumericalPointWithDescription}$

A NumericalPointWithDescription containing the detection size computed at the given probability level and confidence level if provided.

drawBoxCoxLikelihood(name=None)

Draw the loglikelihood versus the Box Cox parameter.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

```
Returns fig: matplotlib.figure
```

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

Notes

This method is available only when the parameter boxCox is set to True.

```
drawPOD (*args, **kwargs)
```

Draw the POD curve.

Parameters probabilityLevel: float

The probability level for which the defect size is computed. Default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

defectMin, defectMax: float

Define the interval where the curve is plotted. Default: min and max values of the input sample.

nbPt: int

The number of points to draw the curves. Default is 100.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

drawValidationGraph(*args, **kwargs)

Draw the validation graph of the metamodel.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

getBasis()

Accessor to the kriging basis.

Returns basis: openturns.Basis

The basis used as trend in the kriging model. Default is a linear basis for the defect and constant for the other parameters.

getBoxCoxParameter()

Accessor to the Box Cox parameter.

Returns lambdaBoxCox: float

The Box Cox parameter used to transform the data. If the transformation is not enabled None is returned.

getCovarianceModel()

Accessor to the kriging covariance model.

Returns covarianceModel: openturns.CovarianceModel

The covariance model in the kriging model. Default is an anisotropic squared exponential covariance model.

getDefectSizes()

Accessor to the defect size where POD is computed.

Returns defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

getDistribution()

Accessor to the parameters distribution.

Returns distribution: openturns.ComposedDistribution

The input parameters distribution used for the Monte Carlo simulation. Default is a Uniform distribution for all parameters.

getInitialStartSize()

Accessor to the initial random search size.

Returns size: int

The size of the initial random search to find the best loglikelihood value to start the TNC algorithm to optimize the covariance model parameters. Default is 1000.

getKrigingResult()

Accessor to the kriging result.

Returns result: openturns.KrigingResult

The kriging result.

getPODCLModel (confidenceLevel=0.95)

Accessor to the POD model at a given confidence level.

Parameters confidenceLevel: float

The confidence level the POD must be computed. Default is 0.95

Returns PODModelCl: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value at the confidence level given as parameter.

getPODModel()

Accessor to the POD model.

Returns PODModel: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value.

getQ2()

Accessor to the Q2 value.

Returns Q2: float

The Q2 value computed analytically using Dubrule (1983) technique.

getSamplingSize()

Accessor to the Monte Carlo sampling size.

Returns size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size.

getSimulationSize()

Accessor to the simulation size.

Returns size: int

The size of the simulation used to compute the confidence interval.

getVerbose()

Accessor to the verbosity.

Returns verbose: bool

Enable or disable the verbosity. Default is True.

run()

Build the POD models.

Notes

This method build the kriging model. First the censored data are filtered if needed. The Box Cox transformation is performed if it is enabled. Then it builds the POD models: conditional samples are simulated for each defect size, then the distributions of the probability estimator (for MC simulation) are built. Eventually, a sample of this distribution is used to compute the mean POD and the POD at the confidence level.

setBasis (basis)

Accessor to the kriging basis.

Parameters basis: openturns.Basis

The basis used as trend in the kriging model.

setCovarianceModel (covarianceModel)

Accessor to the kriging covariance model.

Parameters covarianceModel: openturns.CovarianceModel

The covariance model in the kriging model.

setDefectSizes (size)

Accessor to the defect size where POD is computed.

Parameters defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

setDistribution (distribution)

Accessor to the parameters distribution.

Parameters distribution: openturns.ComposedDistribution

The input parameters distribution used for the Monte Carlo simulation.

setInitialStartSize(size)

Accessor to the initial random search size.

Parameters size: int

The size of the initial random search to find the best loglikelihood value to start the TNC algorithm to optimize the covariance model parameters.

setKrigingResult (result)

Accessor to the kriging result.

Parameters result: openturns.KrigingResult

The kriging result.

setSamplingSize(size)

Accessor to the Monte Carlo sampling size.

Parameters size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size.

setSimulationSize(size)

Accessor to the simulation size.

Parameters size: int

The size of the simulation used to compute the confidence interval.

setVerbose (verbose)

Accessor to the verbosity.

Parameters verbose: bool

Enable or disable the verbosity.

1.1.3 Adaptive algorithms

AdaptiveSignalPOD	Adaptive algorithm for signal data type.
AdaptiveHitMissPOD	Adaptive algorithm for hit miss data type.

AdaptiveSignalPOD

class AdaptiveSignalPOD (*args)

Adaptive algorithm for signal data type.

Available constructor:

Adaptive Signal POD (input DOE, output DOE, physical Model, nMore Points, detection, noise Thres, saturation Thres, box Cox)

Parameters inputDOE: 2-d sequence of float

Vector of the input values. The first column must correspond with the defect sizes.

outputDOE: 2-d sequence of float

Vector of the signals, of dimension 1.

physicalModel: NumericalMathFunction

True model used to compute the real signal value to be added to the DOE.

nMorePoints: positive int

The number of points to add to the DOE, computed by the *physicalModel*.

detection: float

Detection value of the signal.

noiseThres: float

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None

boxCox: bool or float

Enable or not the Box Cox transformation. If boxCox is a float, the Box Cox transformation is enabled with the given value. Default is False.

Warning: The first column of the input sample must corresponds with the defect sizes.

Notes

This class aims at building the POD based on a kriging model where the design of experiments is iteratively enriched. The initial design of experiments is given as input parameters. The enrichment criterion is based on the integrated mean squared of the POD. The criterion is computed on several candidate points and the one that minimizes the criterion is added to the current design of experiments. The sample of candidate points is created using a low discrepancy sequence (Sobol') if the input distribution has an independant copula, otherwise a Monte Carlo experiment is used. This is a time consuming technique because it requires to compute the mean and variance of the POD for all candidate points. The stopping criterion is only based on the number of points that must be added to the design of experiments.

No assumptions are required for the residuals with this method. The POD are computed by simulating conditional predictions. For each, a Monte Carlo simulation is performed. The accuracy of the Monte Carlo simulation is taken into account using the TCL.

The return POD model corresponds with an interpolate function built with the POD values computed for the given defect sizes. The default values are 20 defect sizes between the minimum and maximum value of the defect sample. The defect sizes can be changed using the method *setDefectSizes*. It is adviced to run a preliminary POD study in order to know the interesting range of defect sizes. This enables reducing the computing time.

The default kriging model is built with a linear basis only for the defect size and constant otherwise. The covariance model is an anisotropic squared exponential model. Parameters are estimated using the TNC algorithm, the initial starting point of the TNC is found thanks to a quasi random search of the best loglikelihood value among 1000 computations.

In the algorithm, when a point is added to the design of experiments, the kriging model is not always optimized. The covariance model scale coefficients are optimized only if the Q2 value is lower than 0.95.

For advanced use, all parameters can be defined thanks to dedicated set methods.

A progress bar is shown if the verbosity is enabled. It can be disabled using the method setVerbose.

Methods

computeDetectionSize(*args, **kwargs)	Compute the detection size for a given probability level.
drawBoxCoxLikelihood([name])	Draw the loglikelihood versus the Box Cox parameter.
drawPOD(*args, **kwargs)	Draw the POD curve.
drawValidationGraph(*args, **kwargs)	Draw the validation graph of the metamodel.
getBasis()	Accessor to the kriging basis.
<pre>getBoxCoxParameter()</pre>	Accessor to the Box Cox parameter.
getCandidateSize()	Accessor to the number of candidate points.
getCovarianceModel()	Accessor to the kriging covariance model.
<pre>getDefectSizes()</pre>	Accessor to the defect size where POD is computed.
<pre>getDistribution()</pre>	Accessor to the parameters distribution.
getGraphActive()	Accessor to the graph verbosity.
getInitialStartSize()	Accessor to the initial random search size.
getInputDOE()	Accessor to the final input values of the DOE.
getKrigingResult()	Accessor to the kriging result.
getOutputDOE()	Accessor to the final output values of the DOE.
<pre>getPODCLModel([confidenceLevel])</pre>	Accessor to the POD model at a given confidence level.
getPODModel()	Accessor to the POD model.
getQ2()	Accessor to the Q2 value.
<pre>getSamplingSize()</pre>	Accessor to the Monte Carlo sampling size.
<pre>getSimulationSize()</pre>	Accessor to the simulation size.
getVerbose()	Accessor to the verbosity.
run()	Launch the algorithm and build the POD models.
setBasis(basis)	Accessor to the kriging basis.
setCandidateSize(size)	Accessor to the number of candidate points.
setCovarianceModel(covarianceModel)	Accessor to the kriging covariance model.
setDefectSizes(size)	Accessor to the defect size where POD is computed.
setDistribution(distribution)	Accessor to the parameters distribution.
setGraphActive(graphVerbose[,])	Accessor to the graph verbosity.
setInitialStartSize(size)	Accessor to the initial random search size.
setSamplingSize(size)	Accessor to the Monte Carlo sampling size.
setSimulationSize(size)	Accessor to the simulation size.
setVerbose(verbose)	Accessor to the verbosity.

computeDetectionSize(*args, **kwargs)

Compute the detection size for a given probability level.

Parameters probabilityLevel: float

The probability level for which the defect size is computed.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

 $\textbf{Returns result}: \textbf{collection of} \ \texttt{openturns.NumericalPointWithDescription}$

A NumericalPointWithDescription containing the detection size computed at the given probability level and confidence level if provided.

${\tt drawBoxCoxLikelihood}\,(name = None)$

Draw the loglikelihood versus the Box Cox parameter.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

Notes

This method is available only when the parameter *boxCox* is set to True.

```
drawPOD (*args, **kwargs)
```

Draw the POD curve.

Parameters probabilityLevel: float

The probability level for which the defect size is computed. Default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

defectMin, defectMax: float

Define the interval where the curve is plotted. Default: min and max values of the input sample.

nbPt: int

The number of points to draw the curves. Default is 100.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

drawValidationGraph(*args, **kwargs)

Draw the validation graph of the metamodel.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

getBasis()

Accessor to the kriging basis.

Returns basis: openturns.Basis

The basis used as trend in the kriging model. Default is a linear basis for the defect and constant for the other parameters.

getBoxCoxParameter()

Accessor to the Box Cox parameter.

Returns lambdaBoxCox: float

The Box Cox parameter used to transform the data. If the transformation is not enabled None is returned.

getCandidateSize()

Accessor to the number of candidate points.

Returns size: int

The number of candidate points on which the criterion is computed.

getCovarianceModel()

Accessor to the kriging covariance model.

Returns covarianceModel: openturns.CovarianceModel

The covariance model in the kriging model. Default is an anisotropic squared exponential covariance model.

getDefectSizes()

Accessor to the defect size where POD is computed.

Returns defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

getDistribution()

Accessor to the parameters distribution.

Returns distribution: openturns.ComposedDistribution

The input parameters distribution used for the Monte Carlo simulation. Default is a Uniform distribution for all parameters.

getGraphActive()

Accessor to the graph verbosity.

Returns graphVerbose: bool

Enable or disable the display of the POD graph at each iteration. Default is False.

getInitialStartSize()

Accessor to the initial random search size.

Returns size: int

The size of the initial random search to find the best loglikelihood value to start the TNC algorithm to optimize the covariance model parameters. Default is 1000.

getInputDOE()

Accessor to the final input values of the DOE.

getKrigingResult()

Accessor to the kriging result.

Returns result: openturns.KrigingResult

The kriging result.

getOutputDOE()

Accessor to the final output values of the DOE.

getPODCLModel (confidenceLevel=0.95)

Accessor to the POD model at a given confidence level.

Parameters confidenceLevel: float

The confidence level the POD must be computed. Default is 0.95

Returns PODModelCl: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value at the confidence level given as parameter.

getPODModel()

Accessor to the POD model.

Returns PODModel: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value.

getQ2()

Accessor to the Q2 value.

Returns Q2: float

The Q2 value computed analytically using Dubrule (1983) technique.

getSamplingSize()

Accessor to the Monte Carlo sampling size.

Returns size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size.

getSimulationSize()

Accessor to the simulation size.

Returns size: int

The size of the simulation used to compute the confidence interval.

getVerbose()

Accessor to the verbosity.

Returns verbose: bool

Enable or disable the verbosity. Default is True.

run()

Launch the algorithm and build the POD models.

Notes

This method launches the iterative algorithm. First the censored data are filtered if needed. The Box Cox transformation is performed if it is enabled. Then the enrichment of the design of experiments is performed. Once the algorithm stops, it builds the POD models: conditional samples are simulated

for each defect size, then the distributions of the probability estimator (for MC simulation) are built. Eventually, a sample of this distribution is used to compute the mean POD and the POD at the confidence level.

setBasis (basis)

Accessor to the kriging basis.

Parameters basis: openturns.Basis

The basis used as trend in the kriging model.

setCandidateSize(size)

Accessor to the number of candidate points.

Parameters size: int

The number of candidate points on which the criterion is computed

setCovarianceModel (covarianceModel)

Accessor to the kriging covariance model.

Parameters covarianceModel: openturns.CovarianceModel

The covariance model in the kriging model.

setDefectSizes (size)

Accessor to the defect size where POD is computed.

Parameters defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

setDistribution (distribution)

Accessor to the parameters distribution.

Parameters distribution: openturns.ComposedDistribution

The input parameters distribution used for the Monte Carlo simulation.

setGraphActive (graphVerbose, probabilityLevel=None, confidenceLevel=None, directory=None) Accessor to the graph verbosity.

Parameters graphVerbose: bool

Enable or disable the display of the POD graph at each iteration.

probabilityLevel: float

The probability level for which the defect size is computed. Default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

directory: string

Directory where to save the graphs as png files.

setInitialStartSize(size)

Accessor to the initial random search size.

Parameters size: int

The size of the initial random search to find the best loglikelihood value to start the TNC algorithm to optimize the covariance model parameters.

setSamplingSize(size)

Accessor to the Monte Carlo sampling size.

Parameters size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size.

setSimulationSize(size)

Accessor to the simulation size.

Parameters size: int

The size of the simulation used to compute the confidence interval.

setVerbose (verbose)

Accessor to the verbosity.

Parameters verbose: bool

Enable or disable the verbosity.

AdaptiveHitMissPOD

class AdaptiveHitMissPOD (*args)

Adaptive algorithm for hit miss data type.

Available constructor:

AdaptiveHitMissPOD(inputDOE, outputDOE, physicalModel, nMorePoints, detection, noiseThres, saturationThres)

Parameters inputDOE: 2-d sequence of float

Vector of the input values. The first column must correspond with the defect sizes.

outputDOE: 2-d sequence of float

Vector of the signals, of dimension 1.

physicalModel: NumericalMathFunction

True model used to compute the real hit miss value of the signal value to be added to the DOE.

nMorePoints: positive int

The number of points to add to the DOE, computed by the *physicalModel*.

detection: float

Detection value of the signal if the physical model does not return a hit miss value.

 ${\bf noise Thres}: {\bf float}$

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None

Warning: The first column of the input sample must corresponds with the defect sizes.

Notes

This class aims at building the POD based on a classifier model where the design of experiments is iteratively enriched. The initial design of experiments is given as input parameters. The enrichment criterion is based on the misclassification empirical risk. The criterion is computed on several candidate points. The sample of candidate points is created using a low discrepancy sequence (Sobol') if the input distribution has an independant copula, otherwise a Monte Carlo experiment is used. The stopping criterion is only based on the number of points that must be added to the design of experiments.

The classifier algorithms availables are the SVC and the random forests. The choice of the algorithm can be defined using *setClassifierType*. The default algorithm is the random forests.

The physical model can return either the hit miss value (0 or 1) or the signal value. In this case, the detection value must be given and the physical model is transformed in order to provide a hit miss value.

The POD are computed by a Monte Carlo simulation for several defect values. The accuracy of the Monte Carlo simulation is taken into account using the TCL. The return POD model corresponds with an interpolate function built with the POD values computed for the given defect sizes. The default values are 20 defect sizes between the minimum and maximum value of the defect sample. The defect sizes can be changed using the method <code>setDefectSizes</code>.

A progress bar is shown if the verbosity is enabled. It can be disabled using the method setVerbose.

Methods

<pre>drawBoxCoxLikelihood([name]) drawPOD(*args, **kwargs) getBoxCoxParameter()</pre>	Draw the loglikelihood versus the Box Cox parameter. Draw the POD curve. Accessor to the Box Cox parameter. Accessor to the number of candidate points.			
getBoxCoxParameter()	Accessor to the Box Cox parameter.			
	-			
	Accessor to the number of candidate points.			
<pre>getCandidateSize()</pre>	1			
<pre>getClassifier()</pre>	Accessor to the classifier model.			
getClassifierParameters()	Accessor to the classifier parameters.			
getClassifierType()	Accessor to the classifier type.			
getConfusionMatrix()	Accessor to the confusion matrix.			
getDefectSizes()	Accessor to the defect size where POD is computed.			
getDistribution()	Accessor to the parameters distribution.			
getGraphActive()	Accessor to the graph verbosity.			
getInputDOE()	Accessor to the final input values of the DOE.			
getOutputDOE()	Accessor to the final output values of the DOE.			
getPMax()	Accessor to the upper probability bound for the poin			
	selections.			
<pre>getPMin()</pre>	Accessor to the lower probability bound for the point			
	selections.			
<pre>getPODCLModel([confidenceLevel])</pre>	Accessor to the POD model at a given confidence level.			
<pre>getPODModel()</pre>	Accessor to the POD model.			
<pre>getSamplingSize()</pre>	Accessor to the Monte Carlo sampling size.			
<pre>getSimulationSize()</pre>	Accessor to the simulation size.			
getVerbose()	Accessor to the verbosity.			
run()	Launch the algorithm and build the POD models.			
setCandidateSize(size)	Accessor to the number of candidate points.			
setClassifierParameters(parameters)	Accessor to the classifier parameters.			
setClassifierType(classifier)	Accessor to the classifier type.			
	Continued on next page			

Table 1.10 – continued from previous page

setDefectSizes(size)	Accessor to the defect size where POD is computed.		
setDistribution(distribution)	Accessor to the parameters distribution.		
setGraphActive(graphVerbose[,])	Accessor to the graph verbosity.		
setPMax(pmax)	Accessor to the upper probability bound for the point		
	selections.		
setPMin(pmin)	Accessor to the lower probability bound for the point		
	selections.		
setSamplingSize(size)	Accessor to the Monte Carlo sampling size.		
setSimulationSize(size)	Accessor to the simulation size.		
setVerbose(verbose)	Accessor to the verbosity.		

computeDetectionSize(*args, **kwargs)

Compute the detection size for a given probability level.

Parameters probabilityLevel: float

The probability level for which the defect size is computed.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

Returns result: collection of openturns. Numerical Point With Description

A NumericalPointWithDescription containing the detection size computed at the given probability level and confidence level if provided.

drawBoxCoxLikelihood(name=None)

Draw the loglikelihood versus the Box Cox parameter.

Parameters name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

Notes

This method is available only when the parameter *boxCox* is set to True.

drawPOD (*args, **kwargs)

Draw the POD curve.

Parameters probabilityLevel: float

The probability level for which the defect size is computed. Default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

defectMin, defectMax : float

Define the interval where the curve is plotted. Default: min and max values of the input sample.

nbPt: int

The number of points to draw the curves. Default is 100.

name: string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

getBoxCoxParameter()

Accessor to the Box Cox parameter.

Returns lambdaBoxCox: float

The Box Cox parameter used to transform the data. If the transformation is not enabled None is returned.

getCandidateSize()

Accessor to the number of candidate points.

Returns size: int

The number of candidate points on which the criterion is computed.

getClassifier()

Accessor to the classifier model.

Returns result: classifier

The classifier model, either random forest or svm.

getClassifierParameters()

Accessor to the classifier parameters.

${\tt getClassifierType}\ (\)$

Accessor to the classifier type.

getConfusionMatrix()

Accessor to the confusion matrix.

getDefectSizes()

Accessor to the defect size where POD is computed.

Returns defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

getDistribution()

Accessor to the parameters distribution.

Returns distribution: openturns.ComposedDistribution

The input parameters distribution, default is a Uniform distribution for all parameters.

getGraphActive()

Accessor to the graph verbosity.

Returns graphVerbose: bool

Enable or disable the display of the POD graph at each iteration. Default is False.

getInputDOE()

Accessor to the final input values of the DOE.

getOutputDOE()

Accessor to the final output values of the DOE.

getPMax()

Accessor to the upper probability bound for the point selections.

getPMin()

Accessor to the lower probability bound for the point selections.

getPODCLModel (confidenceLevel=0.95)

Accessor to the POD model at a given confidence level.

Parameters confidenceLevel: float

The confidence level the POD must be computed. Default is 0.95

Returns PODModelCl: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value at the confidence level given as parameter.

getPODModel()

Accessor to the POD model.

Returns PODModel: openturns.NumericalMathFunction

The function which computes the probability of detection for a given defect value.

getSamplingSize()

Accessor to the Monte Carlo sampling size.

Returns size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size.

getSimulationSize()

Accessor to the simulation size.

Returns size: int

The size of the simulation used to compute the confidence interval.

getVerbose()

Accessor to the verbosity.

Returns verbose: bool

Enable or disable the verbosity. Default is True.

run()

Launch the algorithm and build the POD models.

Notes

This method launches the iterative algorithm. Once the algorithm stops, it builds the POD models: Monte Carlo simulation are performed for each defect sizes with the final classifier model. Eventually, the sample is used to compute the mean POD and the POD at the confidence level.

setCandidateSize(size)

Accessor to the number of candidate points.

Parameters size: int

The number of candidate points on which the criterion is computed

setClassifierParameters (parameters)

Accessor to the classifier parameters.

setClassifierType (classifier)

Accessor to the classifier type.

setDefectSizes (size)

Accessor to the defect size where POD is computed.

Parameters defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

setDistribution (distribution)

Accessor to the parameters distribution.

Parameters distribution: openturns.ComposedDistribution

The input parameters distribution.

setGraphActive (*graphVerbose*, *probabilityLevel=None*, *confidenceLevel=None*, *directory=None*) Accessor to the graph verbosity.

Parameters graphVerbose: bool

Enable or disable the display of the POD graph at each iteration.

probabilityLevel: float

The probability level for which the defect size is computed. Default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

directory: string

Directory where to save the graphs as png files.

setPMax (pmax)

Accessor to the upper probability bound for the point selections.

setPMin(pmin)

Accessor to the lower probability bound for the point selections.

setSamplingSize(size)

Accessor to the Monte Carlo sampling size.

Parameters size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size.

setSimulationSize(size)

Accessor to the simulation size.

Parameters size: int

The size of the simulation used to compute the confidence interval.

setVerbose(verbose)

Accessor to the verbosity.

Parameters verbose: bool

Enable or disable the verbosity.

1.1.4 Sensitivity analysis

SobolIndices

Sensitivity analysis based on Sobol' indices.

SobolIndices

class SobolIndices (*args)

Sensitivity analysis based on Sobol' indices.

Available constructor:

SobolIndices(*krigingPOD*, *N*)

Parameters krigingPOD: KrigingPOD or AdaptiveSignalPOD

The kriging POD object where the run method has been performed.

N: int

Size of samples to generate

Returns sa: openturns.SobolIndicesAlgorithm

The openturns object that perform the sensitivity algorithm.

Notes

This class uses the openturns. SobolIndicesAlgorithm class of OpenTURNS. The sensitivity analysis can be performed only with a POD built with a Kriging metamodel.

The sensitivity analysis allows to computed aggregated Sobol indices for the given range of defect sizes. The default defect sizes correspond with those defined in the *krigingPod* object. It can be changed using setDefectSizes().

The four methods developed in OpenTURNS are availables and can be chosen thanks to setSensitivityMethod(). The default method is "Saltelli".

The result of the sensitivity analysis is available using getSensitivityResult (). It returns the openturns sensitivity object from which the sensitivity values are given using proper methods.

Methods

drawIndices([label, name])	Plot the aggregated Sobol indices.
<pre>getDefectSizes()</pre>	Accessor to the defect size where the POD is computed.
getSensitivityMethod()	Accessor to the sensitivity method.
getSensitivityResult()	Accessor to the OpenTURNS sensitivity object.
run()	Compute the Sobol indices with the chosen algorithm.
setDefectSizes(size)	Accessor to the defect size where the POD is computed.
setSensitivityMethod(method)	Accessor to the sensitivity method.

drawIndices (label=None, name=None)

Plot the aggregated Sobol indices.

Parameters label: sequence of float

The name of the input parameters

name : string

name of the figure to be saved with *transparent* option sets to True and *bbox_inches='tight'*. It can be only the file name or the full path name. Default is None.

Returns fig: matplotlib.figure

Matplotlib figure object.

ax: matplotlib.axes

Matplotlib axes object.

getDefectSizes()

Accessor to the defect size where the POD is computed.

Returns defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

getSensitivityMethod()

Accessor to the sensitivity method.

Returns method: str

The sensitivity method.

getSensitivityResult()

Accessor to the OpenTURNS sensitivity object.

Returns sa: SobolIndicesAlgorithm

run()

Compute the Sobol indices with the chosen algorithm.

setDefectSizes (size)

Accessor to the defect size where the POD is computed.

Parameters defectSize: sequence of float

The defect sizes where the Monte Carlo simulation is performed to compute the POD.

setSensitivityMethod(method)

Accessor to the sensitivity method.

Parameters method: str

The sensitivity method: either "Saltelli", "Martinez", "Jansen" or "MauntzKucherenko". Default is "Saltelli".

1.1.5 **Tools**

PODSummary	Run the analysis and compute POD with several methods.
DataHandling	Static methods for data handling.

PODSummary

class PODSummary (*args)

Run the analysis and compute POD with several methods.

Available constructor:

PODSummary(inputSample, outputSample, detection, noiseThres, saturationThres, boxCox)

Parameters inputSample: 2-d sequence of float

Vector of the input values. The first column must correspond with the defect sizes.

outputSample: 2-d sequence of float

Vector of the signals, of dimension 1.

detection: float

Detection value of the signal.

noiseThres: float

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None

boxCox: bool or float

Enable or not the Box Cox transformation. If boxCox is a float, the Box Cox transformation is enabled with the given value. Default is False.

Warning: The first column of the input sample must corresponds with the defects sample.

Notes

This class aims at running the linear analysis and computing the POD with different models:

- •Linear regression model with Gaussian residuals hypothesis,
- •Linear regression model with no hypothesis on the residuals (binomial),
- •Linear regression model with with kernel smoothing on the residuals,
- •Quantile regression,
- •Polynomial chaos,
- •kriging if the dimension of the input sample is greater than 1.

Each method can be deactivated using the method setMethodActive and using the key corresponding to the method.

All results can be displayed and saved thanks to the methods *printResults*, *saveResults* and *saveGraphs*. For each method, the probability level and confidence level can be specified in order to compute the defect size to the wanted probability level.

The verbosity is enabled by default but it can be disabled using the method setVerbose.

Methods

drawGraphs([directory, extension,])	draw and save all possible graphs		
getKrigingPOD()	Accessor to the kriging POD object.		
getLinearBinomialPOD()	Accessor to the linear model POD object with no hy-		
	pothesis on the residuals.		
getLinearGaussPOD()	Accessor to the linear model POD object with Gaussian		
	hypothesis.		
getLinearKernelSmoothingPOD()	Accessor to the linear model POD object with kernel		
	smoothing on the residuals.		
getMethodActive()	Accessor to the dictionnary of active methods.		
getPolynomialChaosPOD()	Accessor to the polynomial chaos POD object.		
getQuantileRegressionPOD()	Accessor to the quantile regression POD object.		
<pre>getResults([probabilityLevel, confidenceLevel])</pre>	Print all results in the terminal.		
<pre>getSamplingSize()</pre>	Accessor to the Monte Carlo sampling size.		
getSimulationSize()	Accessor to the simulation size.		
getVerbose()	Accessor to the verbosity.		
run()	Run all active methods.		
saveResults(name[, probabilityLevel,])	Save all analysis test results in a file.		
setMethodActive(method, activation)	Accessor to the dictionnary of active methods.		
setSamplingSize(size)	Accessor to the Monte Carlo sampling size.		
setSimulationSize(size)	Accessor to the simulation size.		
setVerbose(verbose)	Accessor to the verbosity.		

drawGraphs (directory=None, extension='png', probabilityLevel=None, confidenceLevel=None)
draw and save all possible graphs

Parameters directory: string

Directory where to save the graphs. Default is the working directory.

extension: string

File extension of the graphs. Default is 'png'.

probabilityLevel: float

The probability level for which the defect size is computed. default is None.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is None.

getKrigingPOD()

Accessor to the kriging POD object.

Returns algorithm: KrigingPOD

The KrigingPOD object that is used to compute the POD.

getLinearBinomialPOD()

Accessor to the linear model POD object with no hypothesis on the residuals.

Returns algorithm: UnivariateLinearModelPOD

The UnivariateLinearModelPOD object that is used to compute the POD.

getLinearGaussPOD()

Accessor to the linear model POD object with Gaussian hypothesis.

Returns algorithm: UnivariateLinearModelPOD

The UnivariateLinearModelPOD object that is used to compute the POD.

getLinearKernelSmoothingPOD()

Accessor to the linear model POD object with kernel smoothing on the residuals.

Returns algorithm: UnivariateLinearModelPOD

The UnivariateLinearModelPOD object that is used to compute the POD.

getMethodActive()

Accessor to the dictionnary of active methods.

Returns activeDict : dict

The dictionnary containing the bool telling if the methods is activated or not.

getPolynomialChaosPOD()

Accessor to the polynomial chaos POD object.

Returns algorithm: PolynomialChaosPOD

The PolynomialChaosPOD object that is used to compute the POD.

getQuantileRegressionPOD()

Accessor to the quantile regression POD object.

Returns algorithm: QuantileRegressionPOD

The QuantileRegressionPOD object that is used to compute the POD.

getResults (probabilityLevel=0.9, confidenceLevel=0.95)

Print all results in the terminal.

Parameters probabilityLevel: float

The probability level for which the defect size is computed. default is 0.9.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is 0.95.

Notes

The probability level and confidence level can be specified in order to display the defect size for different probability level.

getSamplingSize()

Accessor to the Monte Carlo sampling size.

Returns size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size for polynomial chaos and kriging.

getSimulationSize()

Accessor to the simulation size.

Returns size: int

The size of the simulation used to compute the confidence interval.

getVerbose()

Accessor to the verbosity.

Returns verbose: bool

Enable or disable the verbosity. Default is True.

run()

Run all active methods.

saveResults (name, probabilityLevel=0.9, confidenceLevel=0.95)

Save all analysis test results in a file.

Parameters name: string

Name of the file or full path name.

probabilityLevel: float

The probability level for which the defect size is computed. default is 0.9.

confidenceLevel: float

The confidence level associated to the given probability level the defect size is computed. Default is 0.95.

Notes

The probability level and confidence level can be specified in order to display the defect size for different probability level.

The file can be saved as a csv file. Separations are made with tabulations.

If *name* is the file name, then it is saved in the current working directory.

$\verb|setMethodActive| (method, activation)|$

Accessor to the dictionnary of active methods.

Parameters method: string

The key of the method to activate or deactivate.

activation: bool

Set to True to activate and False to deactivate.

setSamplingSize(size)

Accessor to the Monte Carlo sampling size.

Parameters size: int

The size of the Monte Carlo simulation used to compute the POD for each defect size for polynomial chaos and kriging.

setSimulationSize(size)

Accessor to the simulation size.

Parameters size: int

The size of the simulation used to compute the confidence interval.

setVerbose(verbose)

Accessor to the verbosity.

Parameters verbose: bool

Enable or disable the verbosity.

DataHandling

class DataHandling

Static methods for data handling.

Methods

filterCensoredData(inputSample, signals, ...)

Sort inputSample and signals with respect to the censore thresholds.

static filterCensoredData (inputSample, signals, noiseThres, saturationThres)

Sort inputSample and signals with respect to the censore thresholds.

Parameters inputSample: 2-d sequence of float

Vector of the input sample.

signals: 2-d sequence of float

Vector of the signals, of dimension 1.

noiseThres: float

Value for low censored data. Default is None.

saturationThres: float

Value for high censored data. Default is None

Returns inputSampleUnc: 2-d sequence of float

Vector of the input sample in the uncensored area.

inputSampleNoise: 2-d sequence of float

Vector of the input sample in the noisy area.

inputSampleSat: 2-d sequence of float

Vector of the input sample in the saturation area.

signalsUnc: 2-d sequence of float

Vector of the signals in the uncensored area.

Notes

The data are sorted in three different vectors whether they belong to the noisy area, the uncensored area or the saturation area.

1.2 Examples of the API

ipynb source code

1.2.1 Linear model analysis

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
```

Generate data

```
N = 100
ot.RandomGenerator.SetSeed(123456)
defectDist = ot.Uniform(0.1, 0.6)
# normal epsilon distribution
epsilon = ot.Normal(0, 1.9)
defects = defectDist.getSample(N)
signalsInvBoxCox = defects * 43. + epsilon.getSample(N) + 2.5
# Inverse Box Cox transformation
invBoxCox = ot.InverseBoxCoxTransform(0.3)
signals = invBoxCox(signalsInvBoxCox)
```

Run analysis without Box Cox

```
analysis = otpod.UnivariateLinearModelAnalysis(defects, signals)
```

Get some particular results

```
print(analysis.getIntercept())
print(analysis.getR2())
print(analysis.getKolmogorovPValue())
```

```
[Intercept for uncensored case : -604.758]
[R2 for uncensored case : 0.780469]
[Kolmogorov p-value for uncensored case : 0.803087]
```

Print all results of the linear regression and all tests on the residuals

A warning is printed because some residuals tests failed: the p-value is less than 0.5.


```
print(analysis.getResults())
```

```
Linear model analysis results
                                                 Not enabled
Box Cox parameter :
                                                  Uncensored
Intercept coefficient :
                                                      -604.76
                                                      3606.04
Slope coefficient :
Standard error of the estimate :
                                                      291.47
Confidence interval on coefficients
                                                [-755.60, -453.91]
Intercept coefficient :
Slope coefficient :
                                                [3222.66, 3989.43]
Level :
                                                         0.95
Quality of regression
R2 (> 0.8):
                                                        0.78
       Residuals analysis results
                                              Normal (mu = 6.01403e-13, sigma = 289.
Fitted distribution (uncensored) :
→998)
                                                   Uncensored
Distribution fitting test
Kolmogorov p-value (> 0.05):
                                                          0.8
Normality test
                                                         0.07
Anderson Darling p-value (> 0.05):
Cramer Von Mises p-value (> 0.05):
                                                         0.09
Zero residual mean test
p-value (> 0.05):
                                                          1.0
Homoskedasticity test (constant variance)
Breush Pagan p-value (> 0.05):
                                                          0.0
Harrison McCabe p-value (> 0.05):
                                                          0.2
Non autocorrelation test
Durbin Watson p-value (> 0.05):
                                                        0.99
Warning : Some hypothesis tests failed : you may consider to use the Box Cox_
→transformation.
```

Show graphs


The linear model is not correct

```
fig, ax = analysis.drawLinearModel()
fig.show()
```

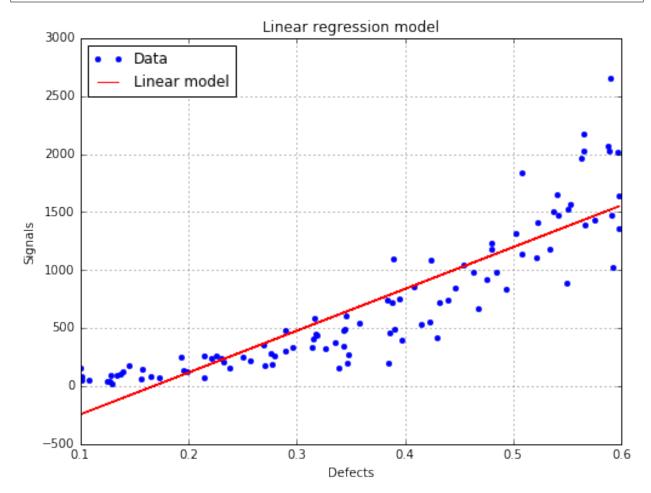

The residuals are not homoskedastic

```
fig, ax = analysis.drawResiduals()
fig.show()
```

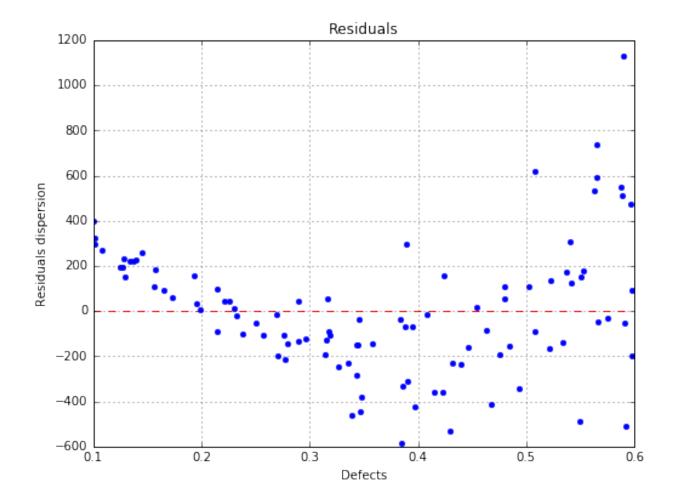

Run analysis with Box Cox

analysis = otpod.UnivariateLinearModelAnalysis(defects, signals, boxCox=True)

Print results of the linear regression and all tests on the residuals

```
print(analysis.getResults())
```

```
Linear model analysis results

Box Cox parameter:

Uncensored

Intercept coefficient:

Slope coefficient:

Standard error of the estimate:

Confidence interval on coefficients
Intercept coefficient:

Intercept coefficient:

[3.33, 4.72]
```

```
[23.80, 27.31]
Slope coefficient :
Level :
                                                        0.95
Quality of regression
R2 (> 0.8):
                                                       0.89
      Residuals analysis results
Fitted distribution (uncensored) :
                                             Normal (mu = 4.15668e-15, sigma = 1.
→32901)
                                                  Uncensored
Distribution fitting test
Kolmogorov p-value (> 0.05):
                                                        0.34
Normality test
                                                        0.06
Anderson Darling p-value (> 0.05):
Cramer Von Mises p-value (> 0.05):
                                                        0.07
Zero residual mean test
p-value (> 0.05):
                                                        1.0
Homoskedasticity test (constant variance)
Breush Pagan p-value (> 0.05):
                                                        0.65
Harrison McCabe p-value (> 0.05):
                                                        0.51
Non autocorrelation test
                                                       0.97
Durbin Watson p-value (> 0.05):
```


Save all results in a csv file

```
analysis.saveResults('results.csv')
```

Show graphs


The linear regression model with data

```
fig, ax = analysis.drawLinearModel(name='figure/linearModel.png')
# The figure is saved as png file
fig.show()
```

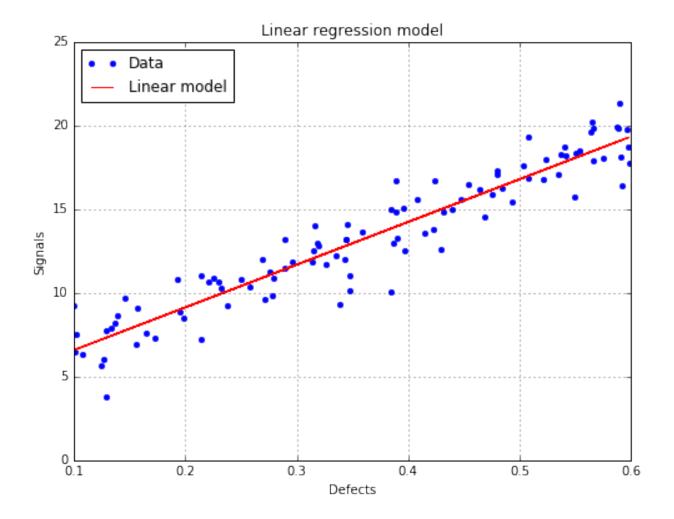


The residuals with respect to the defects

```
fig, ax = analysis.drawResiduals(name='figure/residuals.eps')
# The figure is saved as eps file
fig.show()
```

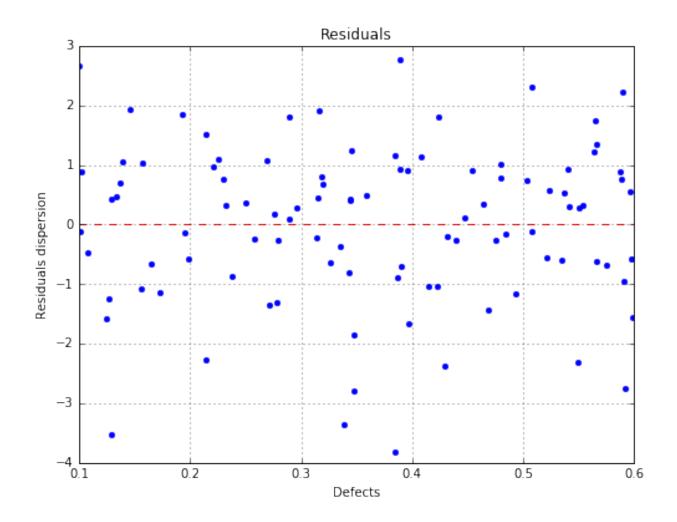


The fitted residuals distribution with the histogram

```
fig, ax = analysis.drawResidualsDistribution()
ax.set_ylim(ymax=0.45)
fig.show()
# The figure is saved after the changes
fig.savefig('figure/residualsDistribution.png', bbox_inches='tight')
```

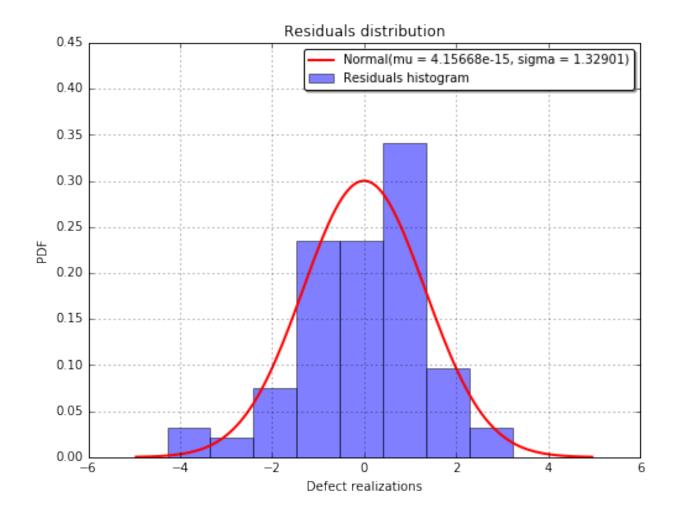


The residuals QQ plot

fig, ax = analysis.drawResidualsQQplot()
fig.show()

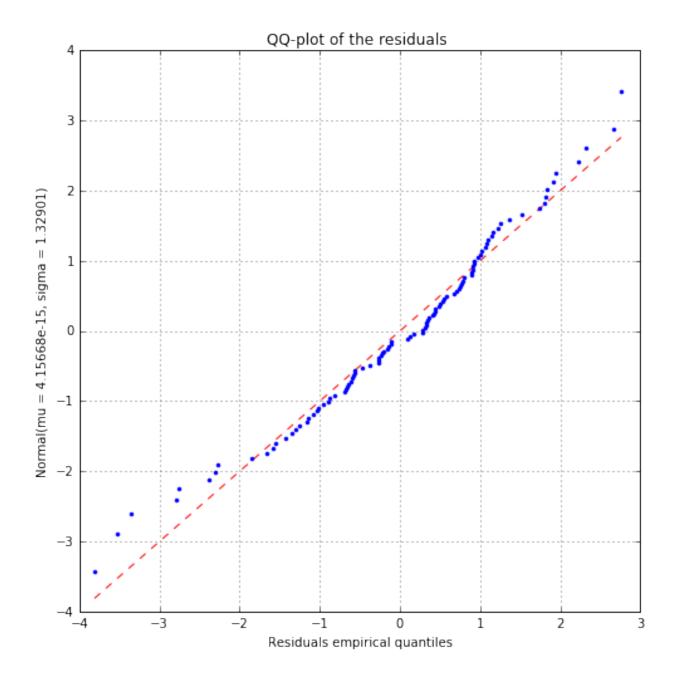

The Box Cox likelihood with respect to the defect

```
fig, ax = analysis.drawBoxCoxLikelihood(name='figure/BoxCoxlikelihood.png')
fig.show()
```

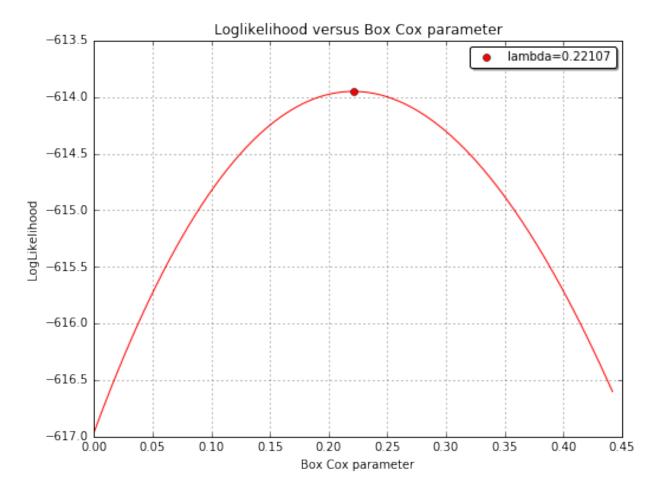

ipynb source code

1.2.2 Linear model analysis with censored data

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
```

Generate data

```
N = 100
ot.RandomGenerator.SetSeed(123456)
defectDist = ot.Uniform(0.1, 0.6)
# normal epsilon distribution
epsilon = ot.Normal(0, 1.9)
defects = defectDist.getSample(N)
signalsInvBoxCox = defects * 43. + epsilon.getSample(N) + 2.5
# Inverse Box Cox transformation
invBoxCox = ot.InverseBoxCoxTransform(0.3)
signals = invBoxCox(signalsInvBoxCox)
```

Run analysis with Box Cox

Get some particular results

Result values are given for both analysis performed on filtered data (uncensored case) and on censored data.

```
print (analysis.getIntercept())
print (analysis.getR2())
print (analysis.getKolmogorovPValue())
```

Print all results of the linear regression and all tests on the residuals

```
# Results are displayed for both case print(analysis.getResults())
```

```
Linear model analysis results
                                                       0.18
Box Cox parameter :
                                                 Uncensored Censored
                                                      4.78
18.15
                                                                    4.16
Intercept coefficient :
Slope coefficient :
                                                                   19.94
Standard error of the estimate :
                                                       0.97
                                                                   1.03
Confidence interval on coefficients
Intercept coefficient :
                                               [4.19, 5.36]
Slope coefficient :
                                               [16.63, 19.67]
                                                       0.95
Level :
Quality of regression
R2 (> 0.8):
                                                       0.87
                                                                     0.86
       Residuals analysis results
Fitted distribution (uncensored) :
                                             Normal(mu = -2.19492e-15, sigma = 0.
→968046)
Fitted distribution (censored) :
                                             Normal (mu = -0.0237409, sigma = 0.
→998599)
                                                 Uncensored
                                                                 Censored
```

Distribution fitting test			
<pre>Kolmogorov p-value (> 0.05):</pre>	0.48	0.51	
Normality test			
Anderson Darling p-value (> 0.05):	0.06	0.08	
Cramer Von Mises p-value (> 0.05):	0.07	0.09	
Zero residual mean test			
p-value (> 0.05):	1.0	0.83	
Homoskedasticity test (constant variance)			
Breush Pagan p-value (> 0.05):	0.69	0.71	
Harrison McCabe p-value (> 0.05):	0.6	0.51	
Non autocorrelation test			
Durbin Watson p-value (> 0.05):	0.43	0.48	

Save all results in a csv file

```
analysis.saveResults('results.csv')
```

Show graphs

The linear regression model with data for the uncensored case (default case)


```
# draw the figure for the uncensored case and save it as png file
fig, ax = analysis.drawLinearModel(name='figure/linearModelUncensored.png')
fig.show()
```

```
/home/dumas/anaconda2/lib/python2.7/site-packages/matplotlib/figure.py:397:_


→UserWarning: matplotlib is currently using a non-GUI backend, so cannot show the_

→figure

"matplotlib is currently using a non-GUI backend, "
```

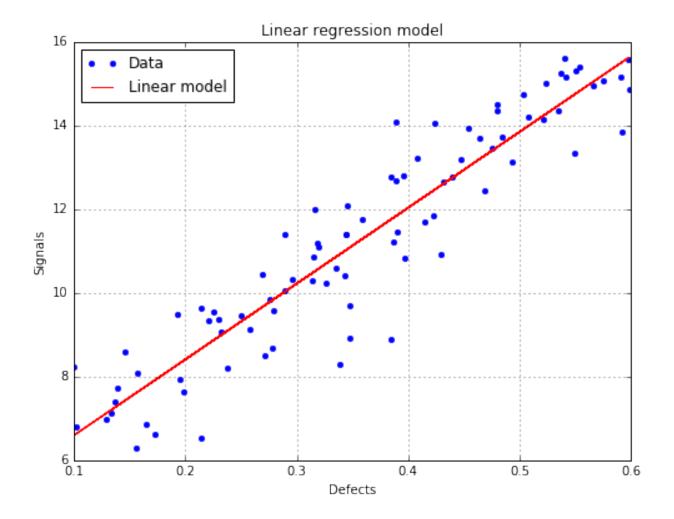

The linear regression model with data for the censored case

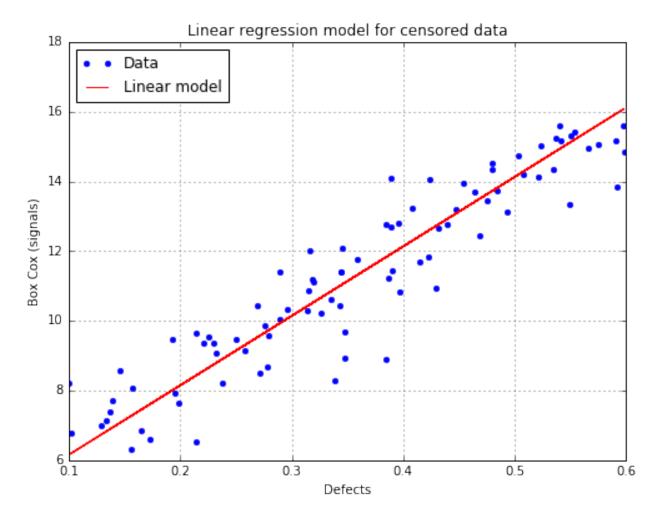

ipynb source code

1.2.3 Linear model POD

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
```

Generate data

```
N = 100
ot.RandomGenerator.SetSeed(123456)
defectDist = ot.Uniform(0.1, 0.6)
# normal epsilon distribution
epsilon = ot.Normal(0, 1.9)
defects = defectDist.getSample(N)
signalsInvBoxCox = defects * 43. + epsilon.getSample(N) + 2.5
# Inverse Box Cox transformation
```

```
invBoxCox = ot.InverseBoxCoxTransform(0.3)
signals = invBoxCox(signalsInvBoxCox)
```

Build POD using previous linear analysis

```
# run the analysis with Gaussian hypothesis of the residuals (default case)
analysis = otpod.UnivariateLinearModelAnalysis(defects, signals, boxCox=True)
```

```
# signal detection threshold
detection = 200.
# Use the analysis to build the POD with Gaussian hypothesis
# keyword arguments must be given
PODGauss = otpod.UnivariateLinearModelPOD(analysis=analysis, detection=detection)
PODGauss.run()
```

Build POD with Gaussian hypothesis

Get the R2 value of the regression

```
print('R2 : {:0.3f}'.format(PODGauss.getR2()))
```

```
R2: 0.895
```

Compute detection size

```
# Detection size at probability level 0.9
# and confidence level 0.95
print(PODGauss.computeDetectionSize(0.9, 0.95))
# probability level 0.95 with confidence level 0.99
print(PODGauss.computeDetectionSize(0.95, 0.99))
```

```
[a90 : 0.303982, a90/95 : 0.317157]
[a95 : 0.323048, a95/99 : 0.343536]
```

get POD NumericalMathFunction

```
# get the POD model
PODmodel = PODGauss.getPODModel()
# get the POD model at the given confidence level
PODmodelCl95 = PODGauss.getPODCLModel(0.95)
```

```
# compute the probability of detection for a given defect value
print('POD : {:0.3f}'.format(PODmodel([0.3])[0]))
print('POD at level 0.95 : {:0.3f}'.format(PODmodelCl95([0.3])[0]))
```

```
POD: 0.886
POD at level 0.95: 0.834
```

Show POD graphs

Only the mean POD

64


```
fig, ax = PODGauss.drawPOD()
fig.show()
```

```
/home/dumas/anaconda2/lib/python2.7/site-packages/matplotlib/figure.py:397:_

→UserWarning: matplotlib is currently using a non-GUI backend, so cannot show the_


→figure

"matplotlib is currently using a non-GUI backend, "
```

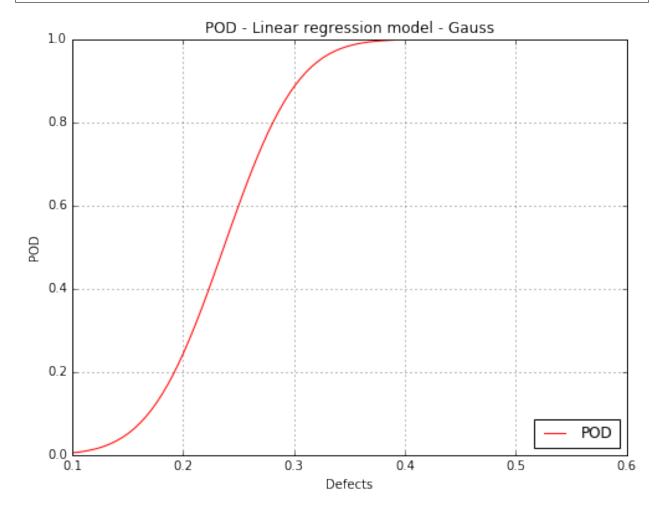


Mean POD with the detection size for a given probability level

```
fig, ax = PODGauss.drawPOD(probabilityLevel=0.9)
fig.show()
```

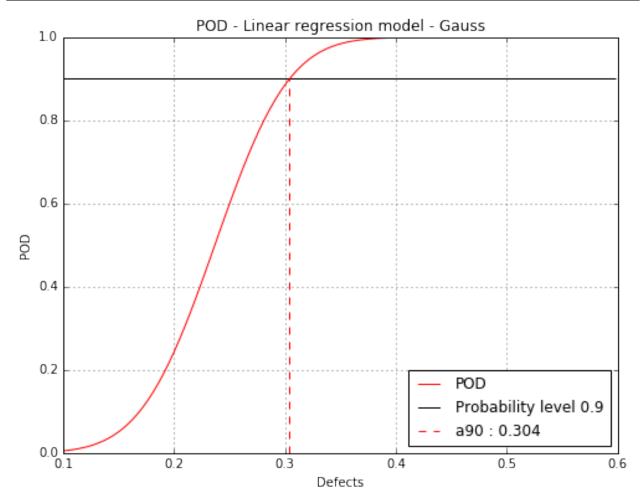


Mean POD with POD at confidence level

```
fig, ax = PODGauss.drawPOD(confidenceLevel=0.95)
fig.show()
```

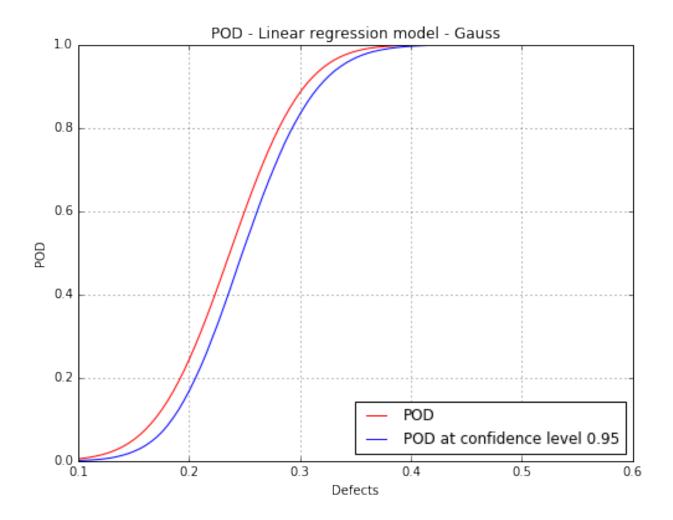

Mean POD and POD at confidence level with the detection size for a given probability level

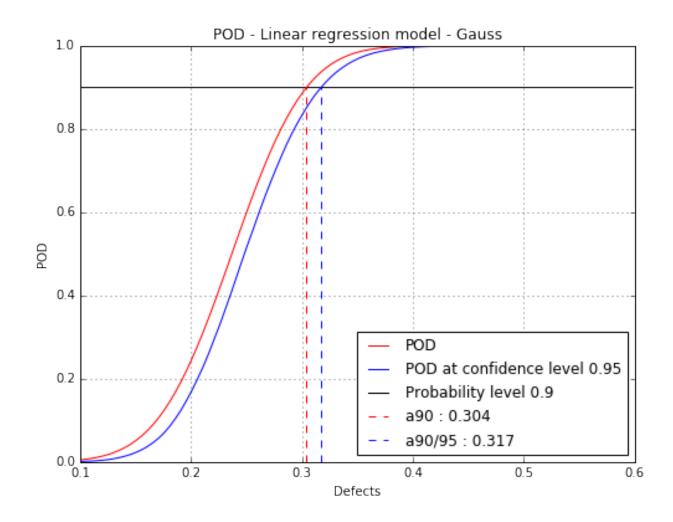

Build POD with no hypothesis on the residuals


This corresponds with the Berens Binomial method.

PODBinomial = otpod.UnivariateLinearModelPOD(defects, signals, detection, boxCox=True)
PODBinomial.run()

```
# Detection size at probability level 0.9
# and confidence level 0.95
print(PODBinomial.computeDetectionSize(0.9, 0.95))
```

```
[a90 : 0.298739, a90/95 : 0.329606]
```

```
fig, ax = PODBinomial.drawPOD(0.9, 0.95)
fig.show()
```

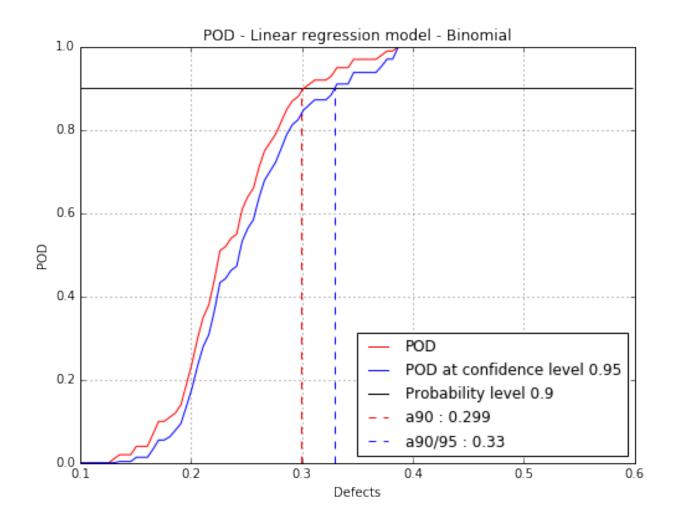

Build POD with kernel smoothing on the residuals

The POD at the given confidence level is built using bootstrap. It may take few seconds. A progress bar if displayed is in this case. It can be remove using setVerbose(False)

```
Computing POD (bootstrap): [======== ] 100.00 


→% Done
```

```
# Detection size at probability level 0.9
# and confidence level 0.95
print(PODks.computeDetectionSize(0.9, 0.95))
```

```
[a90 : 0.308381, a90/95 : 0.331118]
```

```
fig, ax = PODks.drawPOD(0.9, 0.95)
fig.show()
```

68

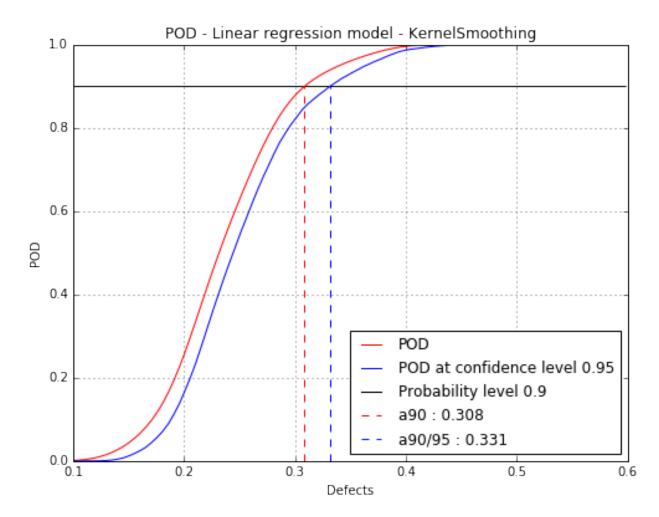

ipynb source code

1.2.4 Linear model POD with censored data

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
```

Generate data

```
N = 100
ot.RandomGenerator.SetSeed(123456)
defectDist = ot.Uniform(0.1, 0.6)
# normal epsilon distribution
epsilon = ot.Normal(0, 1.9)
defects = defectDist.getSample(N)
signalsInvBoxCox = defects * 43. + epsilon.getSample(N) + 2.5
# Inverse Box Cox transformation
```

```
invBoxCox = ot.InverseBoxCoxTransform(0.3)
signals = invBoxCox(signalsInvBoxCox)
```

Build POD using previous linear analysis

```
# signal detection threshold
detection = 200.
# Use the analysis to build the POD with Gaussian hypothesis
# keyword arguments must be given
PODGauss = otpod.UnivariateLinearModelPOD(analysis=analysis, detection=detection)
PODGauss.run()
```

Build POD with Gaussian hypothesis

Get the R2 value of the regression

```
print('R2 : {:0.3f}'.format(PODGauss.getR2()))
R2 : 0.861
```

Compute detection size

```
# Detection size at probability level 0.9
# and confidence level 0.95
print(PODGauss.computeDetectionSize(0.9, 0.95))
```

```
[a90 : 0.30373, a90/95 : 0.317848]
```

get POD NumericalMathFunction

```
# get the POD model
PODmodel = PODGauss.getPODModel()
# get the POD model at the given confidence level
```

```
PODmodelCl95 = PODGauss.getPODCLModel(0.95)

# compute the probability of detection for a given defect value
print('POD : {:0.3f}'.format(PODmodel([0.3])[0]))
print('POD at level 0.95 : {:0.3f}'.format(PODmodelCl95([0.3])[0]))
```

```
POD: 0.887
POD at level 0.95: 0.830
```

Show POD graph


Mean POD and POD at confidence level with the detection size for a given probability level

```
/home/dumas/anaconda2/lib/python2.7/site-packages/matplotlib/figure.py:397:_

→UserWarning: matplotlib is currently using a non-GUI backend, so cannot show the_

→figure

"matplotlib is currently using a non-GUI backend,"
```

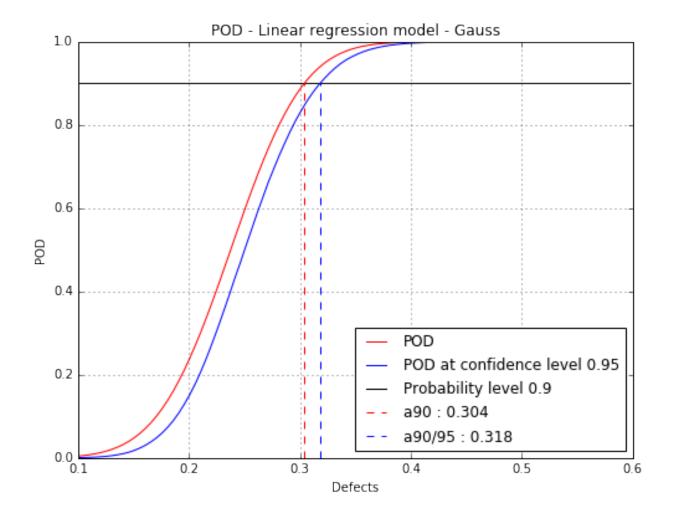

Build POD only with the filtered data

A static method is used to get the defects and signals only in the uncensored area.

```
print (otpod.DataHandling.filterCensoredData.__doc__)
```

```
Sort inputSample and signals with respect to the censore thresholds.

Parameters
------
inputSample: 2-d sequence of float
    Vector of the input sample.
signals: 2-d sequence of float
    Vector of the signals, of dimension 1.
noiseThres: float
    Value for low censored data. Default is None.
saturationThres: float
    Value for high censored data. Default is None

Returns
-----
inputSampleUnc: 2-d sequence of float
    Vector of the input sample in the uncensored area.
```

```
inputSampleNoise : 2-d sequence of float
    Vector of the input sample in the noisy area.
inputSampleSat : 2-d sequence of float
    Vector of the input sample in the saturation area.
signalsUnc : 2-d sequence of float
    Vector of the signals in the uncensored area.


Notes
----
The data are sorted in three different vectors whether they belong to the noisy area, the uncensored area or the saturation area.
```

```
PODfilteredData = otpod.UnivariateLinearModelPOD(defectsFiltered, signalsFiltered, detection, resDistFact=ot.NormalFactory(), boxCox=True)

PODfilteredData.run()
```

```
# Detection size at probability level 0.9
# and confidence level 0.95
print(PODfilteredData.computeDetectionSize(0.9, 0.95))
```

```
[a90 : 0.295976, a90/95 : 0.310948]
```

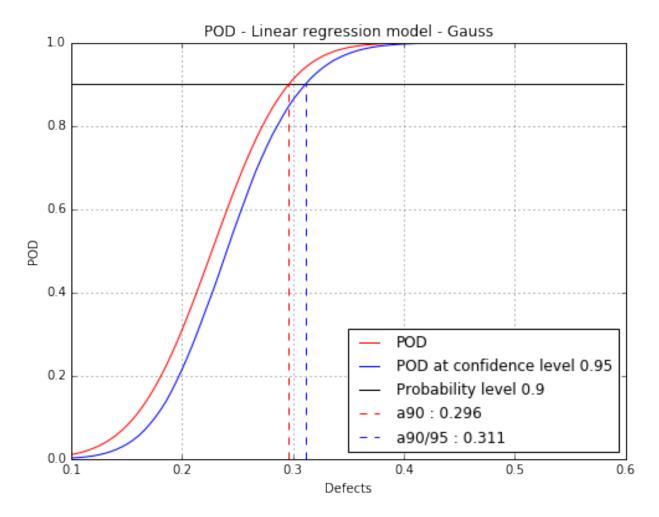

ipynb source code

1.2.5 Quantile Regression POD

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
from time import time
```

Generate data

```
N = 100
ot.RandomGenerator.SetSeed(123456)
defectDist = ot.Uniform(0.1, 0.6)
# normal epsilon distribution
epsilon = ot.Normal(0, 1.9)
defects = defectDist.getSample(N)
signalsInvBoxCox = defects * 43. + epsilon.getSample(N) + 2.5
# Inverse Box Cox transformation
```

```
invBoxCox = ot.InverseBoxCoxTransform(0.3)
signals = invBoxCox(signalsInvBoxCox)
```

Build POD with quantile regression technique

Quantile user-defined

```
# Default quantile values
print('Default quantile: ')
print(POD.getQuantile())
# Defining user quantile, they must range between 0 and 1.
POD.setQuantile([0.1, 0.3, 0.5, 0.7, 0.8, 0.85, 0.9, 0.95])
print('User-defined quantile: ')
print(POD.getQuantile())
```

Running quantile regression POD

```
Computing defect quantile: [=======] 100.00

→% Done

Computing time : 324.25 s
```

The computing time can be reduced by setting the simulation size attribute to another value. However the confidence interval is less accurate.

The number of quantile values can also be reduced to save time.

```
Computing defect quantile: [=======] 100.00 →% Done Computing time : 33.81 s
```

Compute detection size

```
# Detection size at probability level 0.9
# and confidence level 0.95
print(POD.computeDetectionSize(0.9, 0.95))
# probability level 0.95 with confidence level 0.99
print(POD.computeDetectionSize(0.95, 0.99))
```

```
[a90 : 0.298115, a90/95 : 0.328585]
[a95 : 0.331931, a95/99 : 0.372112]
```

get POD NumericalMathFunction

```
# get the POD model
PODmodel = POD.getPODModel()
# get the POD model at the given confidence level
PODmodelCl95 = POD.getPODCLModel(0.95)

# compute the probability of detection for a given defect value
print('POD : {:0.3f}'.format(PODmodel([0.3])[0]))
print('POD at level 0.95 : {:0.3f}'.format(PODmodelCl95([0.3])[0]))
```

```
POD: 0.899
POD at level 0.95: 0.832
```

Compute the pseudo R2 for a given quantile

76

```
print('Pseudo R2 for quantile 0.9 : {:0.3f}'.format(POD.getR2(0.9)))
print('Pseudo R2 for quantile 0.95 : {:0.3f}'.format(POD.getR2(0.95)))
```

```
Pseudo R2 for quantile 0.9 : 0.675
Pseudo R2 for quantile 0.95 : 0.656
```

Show POD graphs


Mean POD and POD at confidence level with the detection size for a given probability level

```
/home/dumas/anaconda2/lib/python2.7/site-packages/matplotlib/figure.py:397:_

→UserWarning: matplotlib is currently using a non-GUI backend, so cannot show the_


→figure

"matplotlib is currently using a non-GUI backend, "
```

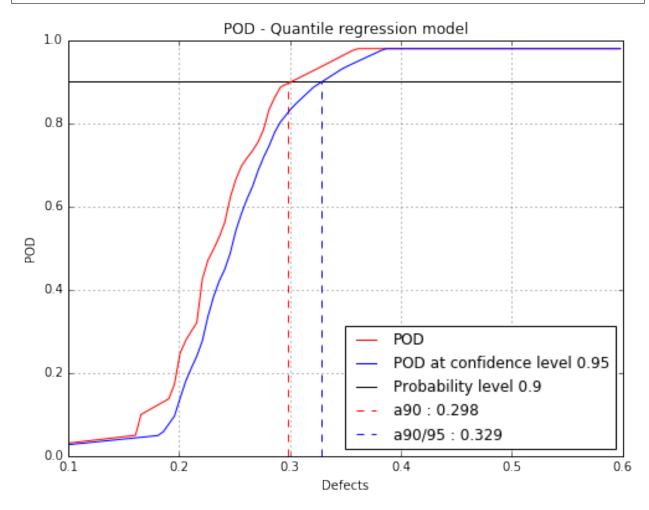

Show the linear regression model at the given quantile

```
fig, ax = POD.drawLinearModel(0.9)
fig.show()
```

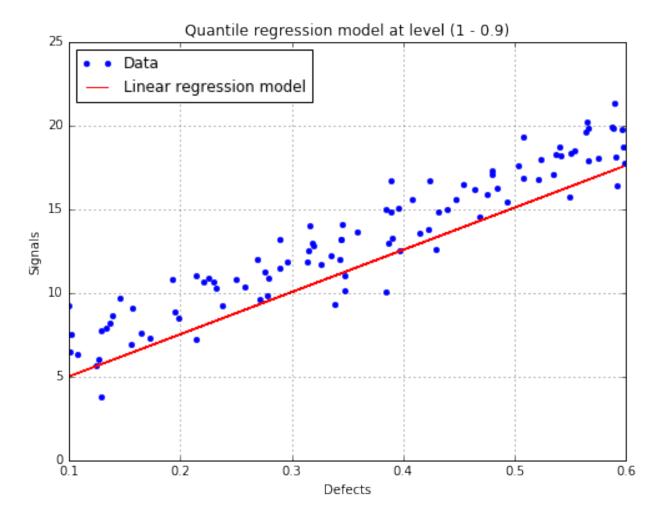

ipynb source code

1.2.6 Polynomial chaos POD

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
```

Generate 1D data

```
N = 100
ot.RandomGenerator.SetSeed(123456)
defectDist = ot.Uniform(0.1, 0.6)
# normal epsilon distribution
epsilon = ot.Normal(0, 1.9)
defects = defectDist.getSample(N)
signalsInvBoxCox = defects * 43. + epsilon.getSample(N) + 2.5
# Inverse Box Cox transformation
```

```
invBoxCox = ot.InverseBoxCoxTransform(0.3)
signals = invBoxCox(signalsInvBoxCox)
```

Build POD with polynomial chaos model

User-defined defect sizes

The user-defined defect sizes must range between the minimum and maximum of the defect values after filtering. An error is raised if it is not the case. The available range is then returned to the user.

```
# Default defect sizes
print('Default defect sizes : ')
print(POD.getDefectSizes())

# Wrong range
try:
    POD.setDefectSizes([0.12, 0.3, 0.5, 0.57])
except ValueError as e:
    print('')
    print('Range of the defect sizes is too large, it returns a value error : ')
    print(e)
```

```
Default defect sizes:
[ 0.19288542  0.21420345  0.23552149  0.25683952  0.27815756  0.29947559  0.32079363  0.34211166  0.3634297  0.38474773  0.40606577  0.4273838  0.44870184  0.47001987  0.49133791  0.51265594  0.53397398  0.55529201  0.57661005  0.59792808]

Range of the defect sizes is too large, it returns a value error:
Defect sizes must range between 0.1929 and 0.5979.
```

```
# Good range
POD.setDefectSizes([0.1929, 0.3, 0.4, 0.5, 0.5979])
print('User-defined defect size : ')
print(POD.getDefectSizes())
```

Running the polynomial chaos based POD

The computing time can be reduced by setting the simulation size attribute to another value. However the confidence interval is less accurate.

The sampling size is the number of the samples used to compute the POD with the Monte Carlo simulation for each defect sizes.

A progress is displayed, which can be disabled with the method *setVerbose*.

Compute detection size

```
# Detection size at probability level 0.9
# and confidence level 0.95
print(POD.computeDetectionSize(0.9, 0.95))
# probability level 0.95 with confidence level 0.99
print(POD.computeDetectionSize(0.95, 0.99))
```

```
[a90 : 0.307344, a90/95 : 0.314406]
[a95 : 0.328888, a95/99 : 0.335715]
```

get POD NumericalMathFunction

```
# get the POD model
PODmodel = POD.getPODModel()
# get the POD model at the given confidence level
PODmodelCl95 = POD.getPODCLModel(0.95)

# compute the probability of detection for a given defect value
print('POD : {:0.3f}'.format(PODmodel([0.3])[0]))
print('POD at level 0.95 : {:0.3f}'.format(PODmodelCl95([0.3])[0]))
```

```
POD: 0.871
POD at level 0.95: 0.841
```

Compute the R2 and the Q2

Enable to check the quality of the model.

```
print('R2 : {:0.4f}'.format(POD.getR2()))
print('Q2 : {:0.4f}'.format(POD.getQ2()))
```

```
R2 : 0.8947
Q2 : 0.8914
```

Show POD graphs


Mean POD and POD at confidence level with the detection size for a given probability level

```
/home/dumas/anaconda2/lib/python2.7/site-packages/matplotlib/figure.py:397:_

→UserWarning: matplotlib is currently using a non-GUI backend, so cannot show the_


→figure

"matplotlib is currently using a non-GUI backend, "
```

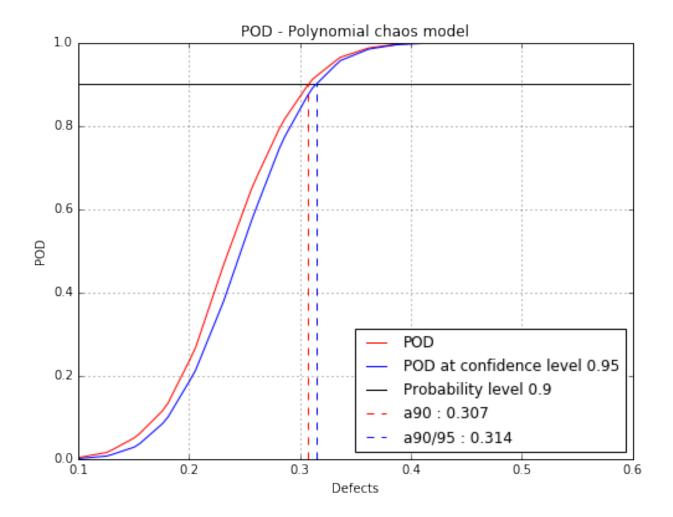

Show the polynomial chaos model (only available if the input dimension is 1)

```
fig, ax = POD.drawPolynomialChaosModel()
fig.show()
```

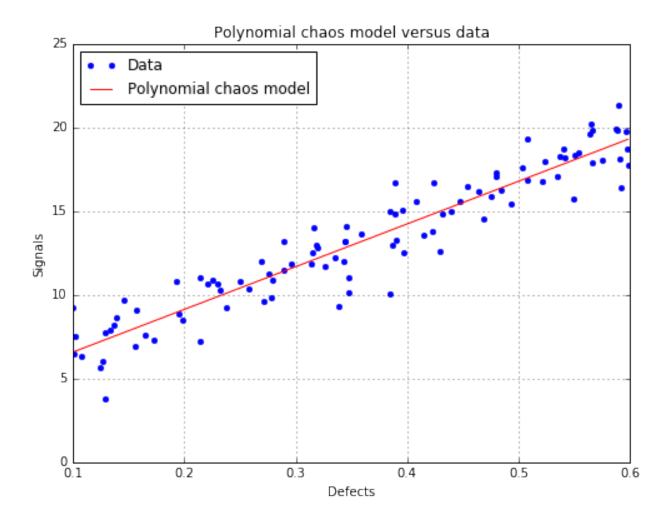

Advanced user mode

The user can defined one or all parameters of the polynomial chaos algorithm: - the distribution of the input parameters - the adaptive strategy - the projection strategy

```
# define the input parameter distribution
distribution = ot.ComposedDistribution([ot.Normal(0.3, 0.1)])
PODnew.setDistribution(distribution)
```

```
# define the adaptive strategy
polyCol = [ot.HermiteFactory()]
enumerateFunction = ot.EnumerateFunction(1)
multivariateBasis = ot.OrthogonalProductPolynomialFactory(polyCol, enumerateFunction)
# degree 1
p = 1
indexMax = enumerateFunction.getStrataCumulatedCardinal(p)
adaptiveStrategy = ot.FixedStrategy(multivariateBasis, indexMax)
```

```
PODnew.setAdaptiveStrategy(adaptiveStrategy)
```


```
# define the projection strategy
projectionStrategy = ot.LeastSquaresStrategy()
PODnew.setProjectionStrategy(projectionStrategy)
```

```
POD.setSamplingSize(2000)
POD.setSimulationSize(500)
PODnew.run()
```


```
print(PODnew.computeDetectionSize(0.9, 0.95))
print('R2 : {:0.4f}'.format(POD.getR2()))
print('Q2 : {:0.4f}'.format(POD.getQ2()))
```

```
[a90 : 0.304772, a90/95 : 0.315494]
R2 : 0.8947
Q2 : 0.8914
```

```
fig, ax = PODnew.drawPOD(probabilityLevel=0.9, confidenceLevel=0.95)
fig.show()
```

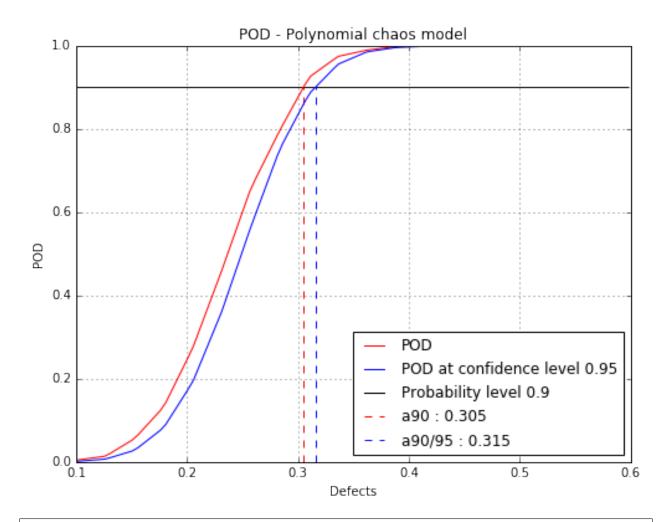

fig, ax = PODnew.drawPolynomialChaosModel()
fig.show()

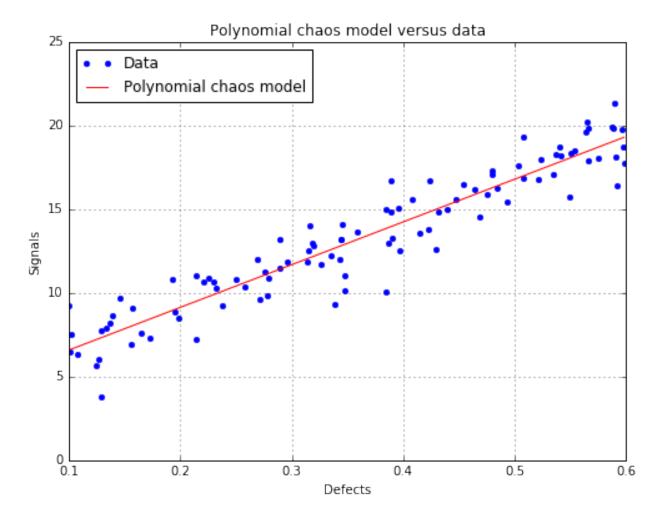

ipynb source code

1.2.7 Kriging POD

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
```

Generate data

```
inputSample = ot.NumericalSample(
    [[4.59626812e+00, 7.46143339e-02, 1.02231538e+00, 8.60042277e+01],
    [4.14315790e+00, 4.20801346e-02, 1.05874908e+00, 2.65757364e+01],
    [4.76735111e+00, 3.72414824e-02, 1.05730385e+00, 5.76058433e+01],
    [4.82811977e+00, 2.49997658e-02, 1.06954641e+00, 2.54461380e+01],
    [4.48961094e+00, 3.74562922e-02, 1.04943946e+00, 6.19483646e+00],
    [5.05605334e+00, 4.87599783e-02, 1.06520409e+00, 3.39024904e+00],
    [5.69679328e+00, 7.74915877e-02, 1.04099514e+00, 6.50990466e+01],
    [5.10193991e+00, 4.35520544e-02, 1.02502536e+00, 5.51492592e+01],
```

```
[4.04791970e+00, 2.38565932e-02, 1.01906882e+00, 2.07875350e+01],
    [4.66238956e+00, 5.49901237e-02, 1.02427200e+00, 1.45661275e+01],
    [4.86634219e+00, 6.04693570e-02, 1.08199374e+00, 1.05104730e+00],
    [4.13519347e+00, 4.45225831e-02, 1.01900124e+00, 5.10117047e+01],
    [4.92541940e+00, 7.87692335e-02, 9.91868726e-01, 8.32302238e+01],
    [4.70722074e+00, 6.51799251e-02, 1.10608515e+00, 3.30181002e+01],
    [4.29040932e+00, 1.75426222e-02, 9.75678838e-01, 2.28186756e+01],
    [4.89291400e+00, 2.34997929e-02, 1.07669835e+00, 5.38926138e+01],
    [4.44653744e+00, 7.63175936e-02, 1.06979154e+00, 5.19109415e+01],
    [3.99977452e+00, 5.80430585e-02, 1.01850716e+00, 7.61988190e+01],
    [3.95491570e+00, 1.09302814e-02, 1.03687664e+00, 6.09981789e+01],
    [5.16424368e+00, 2.69026464e-02, 1.06673711e+00, 2.88708887e+01],
    [5.30491620e+00, 4.53802273e-02, 1.06254792e+00, 3.03856837e+01],
    [4.92809155e+00, 1.20616369e-02, 1.00700410e+00, 7.02512744e+00],
    [4.68373805e+00, 6.26028935e-02, 1.05152117e+00, 4.81271603e+01],
    [5.32381954e+00, 4.33013582e-02, 9.90522007e-01, 6.56015973e+01],
    [4.35455857e+00, 1.23814619e-02, 1.01810539e+00, 1.10769534e+01]])
signals = ot.NumericalSample(
    [[ 37.305445], [ 35.466919], [ 43.187991], [ 45.305165], [ 40.121222], [ 44.
\hookrightarrow 609524],
     [ 45.14552 ], [ 44.80595 ], [ 35.414039], [ 39.851778], [ 42.046049], [ 34.73469,
→ ] ,
     [ 39.339349], [ 40.384559], [ 38.718623], [ 46.189709], [ 36.155737], [ 31.
\rightarrow768369],
     [ 35.384313], [ 47.914584], [ 46.758537], [ 46.564428], [ 39.698493], [ 45.

→6365881,

     [ 40.643948]])
```

Build POD with Kriging model

User-defined defect sizes

The user-defined defect sizes must range between the minimum and maximum of the defect values after filtering. An error is raised if it is not the case. The available range is then returned to the user.

```
# Default defect sizes
print('Default defect sizes : ')
print(POD.getDefectSizes())

# Wrong range
try:
    POD.setDefectSizes([3.2, 3.6, 4.5, 5.5])
except ValueError as e:
    print('Range of the defect sizes is too large, it returns a value error : ')
    print(e)
```

```
# Good range
POD.setDefectSizes([4., 4.3, 4.6, 4.9, 5.1])
print('User-defined defect size : ')
print(POD.getDefectSizes())
```

```
User-defined defect size:
[ 4. 4.3 4.6 4.9 5.1]
```

Running the Kriging based POD

The computing time can be reduced by setting the simulation size attribute to another value. However the confidence interval is less accurate.

The sampling size is the number of the samples used to compute the POD with the Monte Carlo simulation for each defect sizes.

A progress is displayed, which can be disabled with the method setVerbose.

```
POD = otpod.KrigingPOD(inputSample, signals, detection)

# we can change the number of initial random search for the best starting point

# of the TNC algorithm which optimizes the covariance model parameters

POD.setInitialStartSize(500) # default is 1000

# we can change the sample size of the Monte Carlo simulation

POD.setSamplingSize(2000) # default is 5000

# we can also change the size of the simulation to compute the confidence interval

POD.setSimulationSize(500) # default is 1000

%time POD.run()
```

Compute detection size

```
# Detection size at probability level 0.9
# and confidence level 0.95
print(POD.computeDetectionSize(0.9, 0.95))
# probability level 0.95 with confidence level 0.99
print(POD.computeDetectionSize(0.95, 0.99))
```

```
[a90 : 4.62318, a90/95 : 4.63983]
[a95 : 4.66733, a95/99 : 4.6837]
```

get POD NumericalMathFunction

```
# get the POD model
PODmodel = POD.getPODModel()
# get the POD model at the given confidence level
PODmodelCl95 = POD.getPODCLModel(0.95)

# compute the probability of detection for a given defect value
print('POD : {:0.3f}'.format(PODmodel([4.2])[0]))
print('POD at level 0.95 : {:0.3f}'.format(PODmodelCl95([4.2])[0]))
```

```
POD : 0.148
POD at level 0.95 : 0.126
```

Compute the Q2

Enable to check the quality of the model.

```
print('Q2 : {:0.4f}'.format(POD.getQ2()))
```

```
Q2 : 1.0000
```


Draw the validation graph

The predictions are the one computed by leave one out.

```
fig, ax = POD.drawValidationGraph()
fig.show()
```


```
/home/dumas/anaconda2/lib/python2.7/site-packages/matplotlib/figure.py:397:_
→UserWarning: matplotlib is currently using a non-GUI backend, so cannot show the_
→figure

"matplotlib is currently using a non-GUI backend, "
```

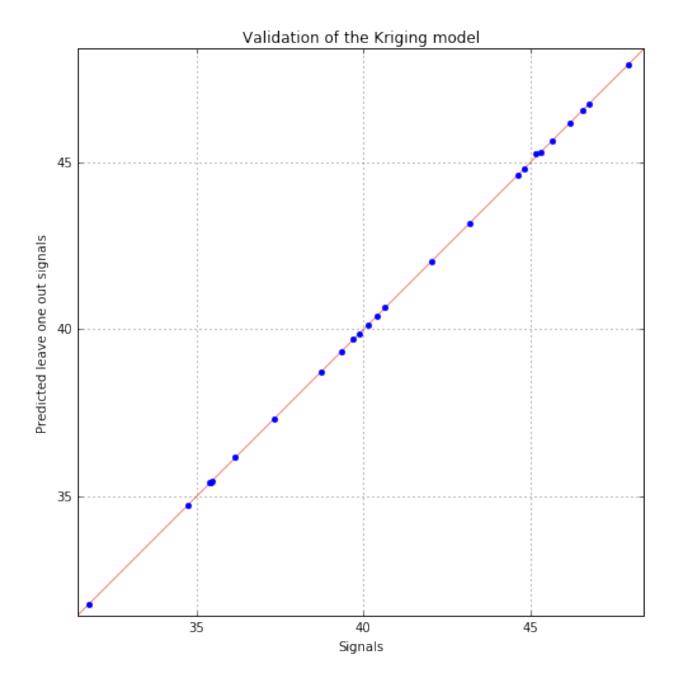

Show POD graphs

Mean POD and POD at confidence level with the detection size for a given probability level

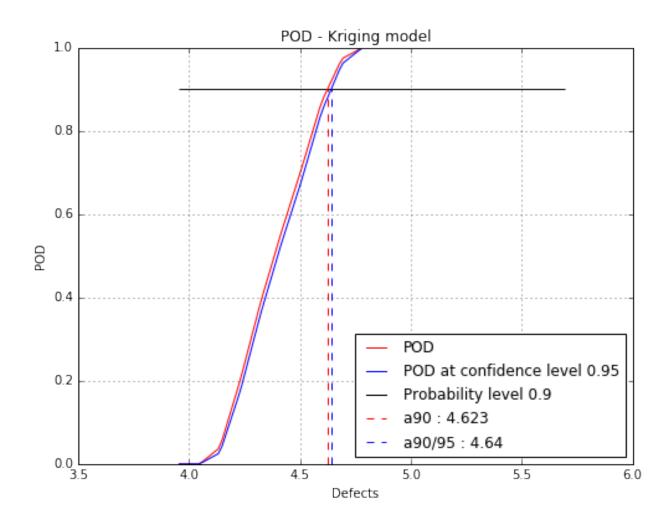

Advanced user mode

The user can defined one or both parameters of the kriging algorithm : - the basis - the covariance model

The user can also defined the input parameter distribution it is known.

The user can set the KrigingResult object if it built from other data.

```
# new POD study
PODnew = otpod.KrigingPOD(inputSample, signals, detection)
```

```
# set the basis constant
basis = ot.ConstantBasisFactory(4).build()
PODnew.setBasis(basis)
```

```
# set the covariance Model as an absolute exponential model
covColl = ot.CovarianceModelCollection(4)
for i in xrange(4):
    covColl[i] = ot.AbsoluteExponential([1], [1.])
covarianceModel = ot.ProductCovarianceModel(covColl)


PODnew.setCovarianceModel(covarianceModel)
```

```
PODnew.run()
```


```
print (PODnew.computeDetectionSize(0.9, 0.95))
print('Q2 : {:0.4f}'.format(POD.getQ2()))
```

```
[a90 : 4.63513, a90/95 : 4.77085]
Q2 : 1.0000
```

```
fig, ax = PODnew.drawPOD(probabilityLevel=0.9, confidenceLevel=0.95)
fig.show()
```

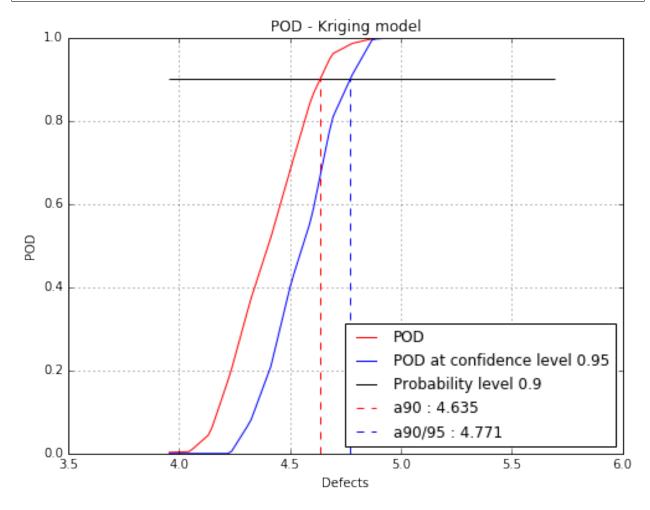

```
fig, ax = PODnew.drawValidationGraph()
fig.show()
```

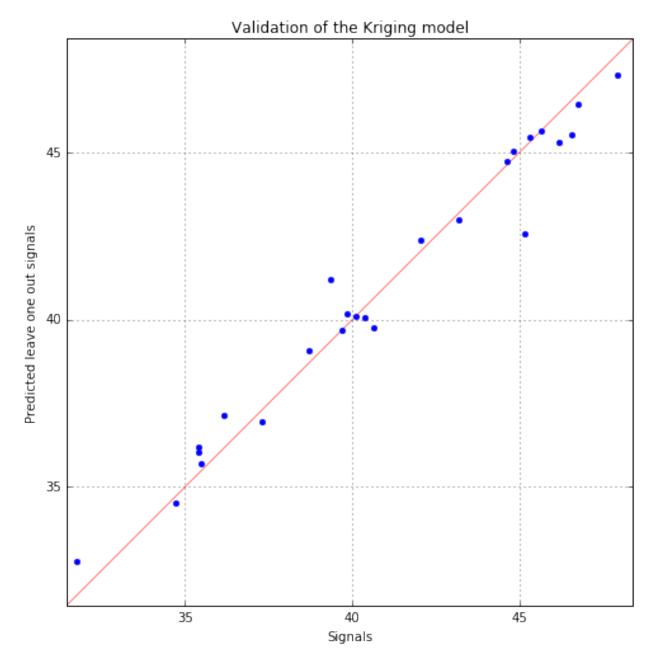

ipynb source code

1.2.8 POD Summary

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
```

Generate data

```
inputSample = ot.NumericalSample(
    [[4.59626812e+00, 7.46143339e-02, 1.02231538e+00, 8.60042277e+01],
    [4.14315790e+00, 4.20801346e-02, 1.05874908e+00, 2.65757364e+01],
    [4.76735111e+00, 3.72414824e-02, 1.05730385e+00, 5.76058433e+01],
    [4.82811977e+00, 2.49997658e-02, 1.06954641e+00, 2.54461380e+01],
    [4.48961094e+00, 3.74562922e-02, 1.04943946e+00, 6.19483646e+00],
    [5.05605334e+00, 4.87599783e-02, 1.06520409e+00, 3.39024904e+00],
    [5.69679328e+00, 7.74915877e-02, 1.04099514e+00, 6.50990466e+01],
    [5.10193991e+00, 4.35520544e-02, 1.02502536e+00, 5.51492592e+01],
    [4.04791970e+00, 2.38565932e-02, 1.01906882e+00, 2.07875350e+01],
    [4.66238956e+00, 5.49901237e-02, 1.02427200e+00, 1.45661275e+01],
    [4.86634219e+00, 6.04693570e-02, 1.08199374e+00, 1.05104730e+00],
    [4.13519347e+00, 4.45225831e-02, 1.01900124e+00, 5.10117047e+01],
    [4.92541940e+00, 7.87692335e-02, 9.91868726e-01, 8.32302238e+01],
    [4.70722074e+00, 6.51799251e-02, 1.10608515e+00, 3.30181002e+01],
    [4.29040932e+00, 1.75426222e-02, 9.75678838e-01, 2.28186756e+01],
    [4.89291400e+00, 2.34997929e-02, 1.07669835e+00, 5.38926138e+01],
    [4.44653744e+00, 7.63175936e-02, 1.06979154e+00, 5.19109415e+01],
    [3.99977452e+00, 5.80430585e-02, 1.01850716e+00, 7.61988190e+01],
    [3.95491570e+00, 1.09302814e-02, 1.03687664e+00, 6.09981789e+01],
    [5.16424368e+00, 2.69026464e-02, 1.06673711e+00, 2.88708887e+01],
    [5.30491620e+00, 4.53802273e-02, 1.06254792e+00, 3.03856837e+01],
    [4.92809155e+00, 1.20616369e-02, 1.00700410e+00, 7.02512744e+00],
    [4.68373805e+00, 6.26028935e-02, 1.05152117e+00, 4.81271603e+01],
    [5.32381954e+00, 4.33013582e-02, 9.90522007e-01, 6.56015973e+01],
    [4.35455857e+00, 1.23814619e-02, 1.01810539e+00, 1.10769534e+01]])
signals = ot.NumericalSample(
    [[ 37.305445], [ 35.466919], [ 43.187991], [ 45.305165], [ 40.121222], [ 44.

→609524],

     [ 45.14552 ], [ 44.80595 ], [ 35.414039], [ 39.851778], [ 42.046049], [ 34.73469]
\hookrightarrow ],
     [ 39.339349], [ 40.384559], [ 38.718623], [ 46.189709], [ 36.155737], [ 31.
\hookrightarrow 768369],
    [ 35.384313], [ 47.914584], [ 46.758537], [ 46.564428], [ 39.698493], [ 45.
\hookrightarrow 6365881,
     [ 40.643948]])
```

Compute POD with several methods

The object POD summary enables the user to compute the POD with all available techniques. techniques can be activated or not thanks to the method *setMethodActive*. Then results can be printed or saved in a file to be compared. Moreover all graphs from the studies can be saved in a given directory.

The techniques are all activated by default: - Univariate linear model with Gaussian residuals, - Univariate linear model with no hypothesis on the residuals (Binomial), - Univariate linear model with kernel smoothing on the residuals, - Quantile regression, - Polynomial chaos, - Kriging (if input dimension > 1)

```
# signal detection threshold
detection = 38.
# The POD summary take
POD = otpod.PODSummary(inputSample, signals, detection, 25)
# The main parameters can modified :
# The number of simulation to compute the confidence level
POD.setSimulationSize(50)
```

```
# The number of Monte Carlo simulation to compute the POD for polynomial chaos and whriging

POD.setSamplingSize(200)

# Deactivate the quantile regression technique

POD.setMethodActive('QuantileRegression', False)

# Finally run

POD.run()
```

```
Start univariate linear model analysis...
Start univariate linear model POD with Gaussian residuals...
Start univariate linear model POD with no hypothesis on the residuals...
Start univariate linear model POD with kernel smoothing on the residuals...
Computing POD (bootstrap): [============] 100.00
→% Done
Start polynomial chaos POD...
Start build polynomial chaos model...
Polynomial chaos model completed
Polynomial chaos validation R2 (>0.8): 0.9999
Polynomial chaos validation Q2 (>0.8): 0.9987
Computing POD per defect: [==================================] 100.00
→% Done
Start kriging POD...
Start optimizing covariance model parameters...
Kriging optimizer completed
kriging validation Q2 (>0.9): 1.0000
Computing POD per defect: [==============================] 100.00
→% Done
```

Access to the dictionnary of the active methods

```
POD.getMethodActive()
```

```
{'Kriging': True,
  'LinearBinomial': True,
  'LinearGauss': True,
  'LinearKernelSmoothing': True,
  'PolynomialChaos': True,
  'QuantileRegression': False}
```

Show results

It is shown the linear analysis results as well as the validation results of each model with the detection size computed for a given probability level and confidence level. These both values can be changed as parameters of the *printResults* method. The default values are probability level = 0.9 and confidence level = 0.95.

A warning is printed when the detection size with a technique returns an error. In this case, the return value is -1.

```
print(POD.getResults())
```

Box Cox parameter :	Not enabled			
	Uncensored	Censored		
Intercept coefficient :		0.02		
Slope coefficient :		8.71		
Standard error of the estimate :	2.29	2.2		
Confidence interval on coefficients				
Intercept coefficient :	[-10.03, 10.07]			
Slope coefficient :	[6.58, 10.85]			
Level :	0.95			
Quality of regression				
R2 (> 0.8):	0.76	0.76		
 Residuals analysis results				
Fitted distribution (uncensored) :	Normal(mu = -1.62004e-14, sigma =			
Fitted distribution (censored):	Normal(mu = 3.42417e-05, sigma = 2			
	Uncensored	Censored		
Distribution fitting test				
<pre>Kolmogorov p-value (> 0.05):</pre>	0.99	0.99		
Normality test				
Anderson Darling p-value (> 0.05):	0.76	0.76		
Cramer Von Mises p-value (> 0.05):	0.83	0.83		
Zero residual mean test				
p-value (> 0.05):	1.0	1.0		
Homoskedasticity test (constant variance)	0.00	0.00		
Breush Pagan p-value (> 0.05):	0.09			
Harrison McCabe p-value (> 0.05):	0.21	0.23		
Non autocorrelation test Durbin Watson p-value (> 0.05):	0.34	0.34		
Model validation results				
	Uncensored Censored			
	R2 (Q2 R2		
Linear Regression (> 0.8): Polynomial Chaos (> 0.8):	0.76	0.76		

Kriging (> 0.8):	1.0		
POD results			
	a90	a90/95	
Linear Regression			
Gaussian residuals :	4.69	4.88	
No residuals hypothesis :	4.71	4.88	
Kernel smoothing on residuals :	4.75	4.81	
Polynomial chaos :	4.6	4.66	
Kriging:	4.64	4.66	

Results can be displayed for another probability and confidence level.

```
print(POD.getResults(0.8, 0.9))
```

Linear model analysis results				
Box Cox parameter :	Not enabled			
	Uncensored	Censored		
Intercept coefficient :	0.02	0.02		
Slope coefficient :	8.71	8.71		
Standard error of the estimate :	2.29	2.2		
Confidence interval on coefficients				
Intercept coefficient :	[-10.03, 10.07]			
Slope coefficient :	[6.58, 10.85]			
Level :	0.95			
Quality of regression				
R2 (> 0.8):		0.76		
Residuals analysis results				
Fitted distribution (uncensored) :		Normal(mu = -1.62004e-14, sigma =		
Fitted distribution (censored) : $\Rightarrow 2441$)	Normal(mu = 3.42	Normal(mu = $3.42417e-05$, sigma =		
	Uncensored	Censored		
	0.99	0.99		
Distribution fitting test Kolmogorov p-value (> 0.05): Normality test	0.99	0.99		
Kolmogorov p-value (> 0.05):		0.99 0.76 0.83		

Zero residual mean test			
p-value (> 0.05):		1.0	1.0
Hamaalaadaatiaita taat (aanataat marianaa)			
Homoskedasticity test (constant variance) Breush Pagan p-value (> 0.05):		0.09	0.09
Harrison McCabe p-value (> 0.05):		0.09	0.09
mailison recade p value (> 0.00).		0.21	0.25
Non autocorrelation test			
Durbin Watson p-value (> 0.05):		0.34	0.34
Model validation results			
	Ü	Incensored	Censored
	R2	02	R2
	1(2	22	1/2
Linear Regression (> 0.8):	0.76		0.76
Polynomial Chaos (> 0.8):	1.0	1.0	
Kriging (> 0.8):	1.0		
POD results			
		a80	a80/90
Linear Regression			,
Gaussian residuals :		4.58	4.67
No residuals hypothesis :		4.64	4.68
Kernel smoothing on residuals :		4.61	4.69
Polynomial chaos :		4.52	4.58
Kriging:		4.57	4.59
 Warning : For polynomial chaos, kriging, resu	lts are di	ven for fil	Itered data
maining . For porynomial onado, kriging, lesa	ico aic gi	. V C.11 - C- 111	corca aaca.

Save results

The results can be saved in a text or csv file. As for the print method, the probability level and confidence level can be specified as parameters.

```
POD.saveResults('results.csv', probabilityLevel=0.9, confidenceLevel=0.95)
```

Draw and save graphs

All available graphs can be saved using the method *saveGraphs*. A specific directory and the extension of the files can be given as parameters. As before the probability level and confidence level can also be chosen by the user.


The warning is also printed here for the polynomial chaos because the detection size at the given probability level cannot be computed. A solution is to set probabilityLevel = None.


```
# return a list a figure
fig = POD.drawGraphs('./figure/', 'png', probabilityLevel=0.9, confidenceLevel=0.95)


for i in range(len(fig)):
    fig[i].show()
```


```
/home/dumas/anaconda2/lib/python2.7/site-packages/matplotlib/figure.py:397:_
→UserWarning: matplotlib is currently using a non-GUI backend, so cannot show the_
→figure


"matplotlib is currently using a non-GUI backend, "
```

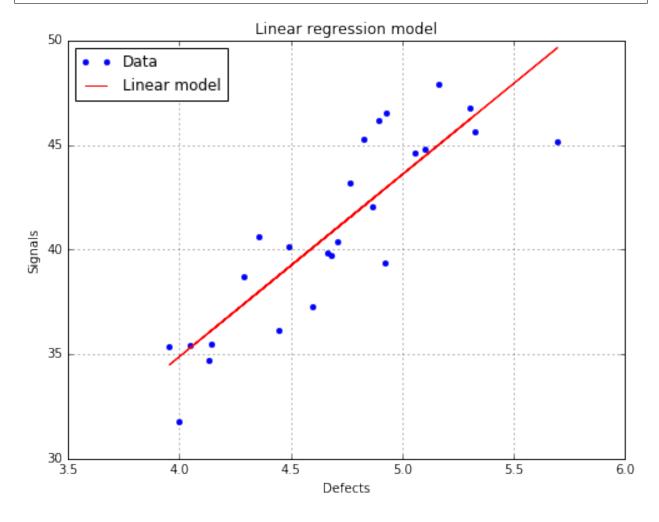


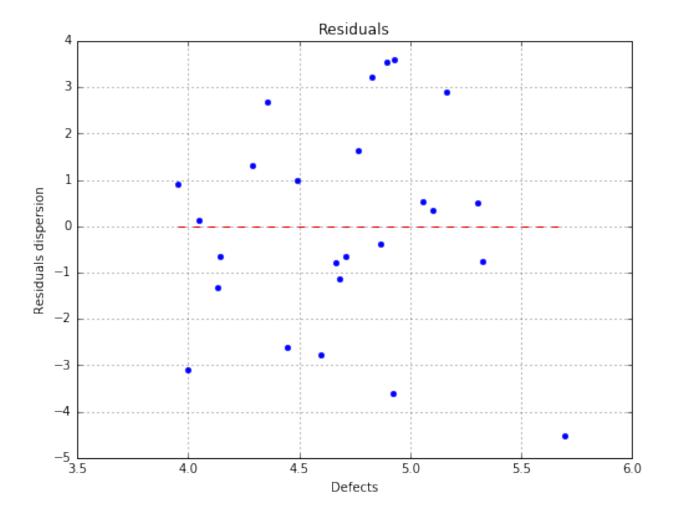


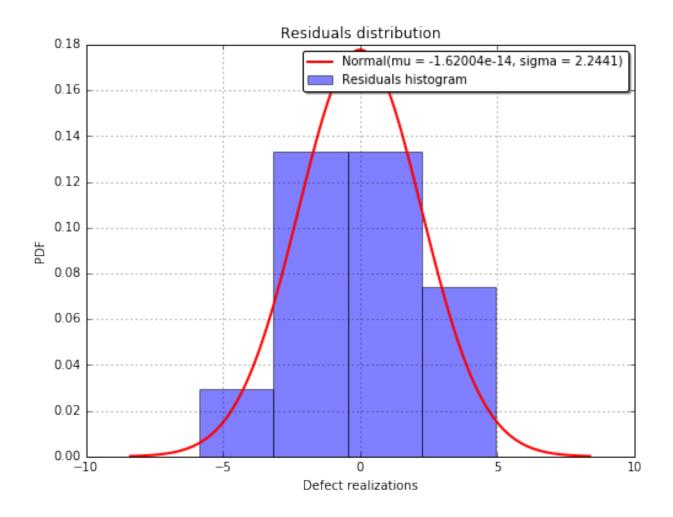


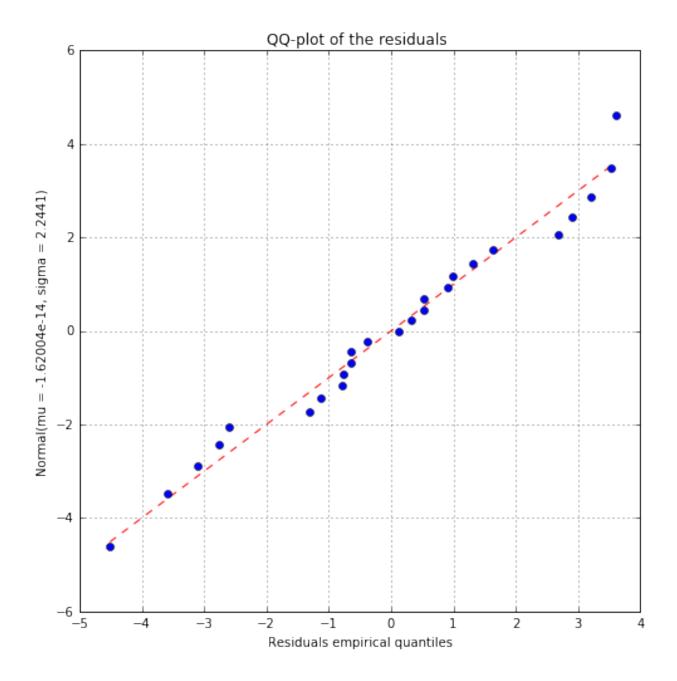


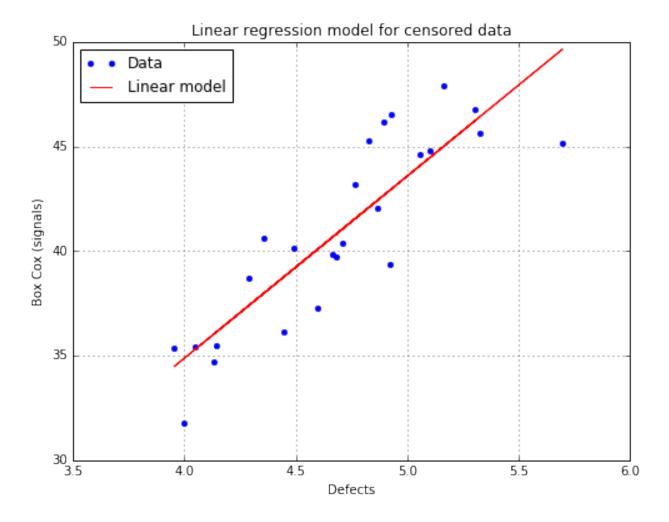


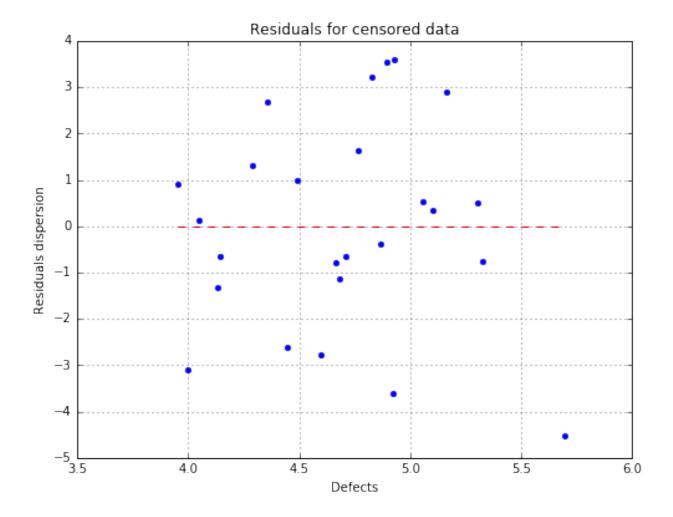


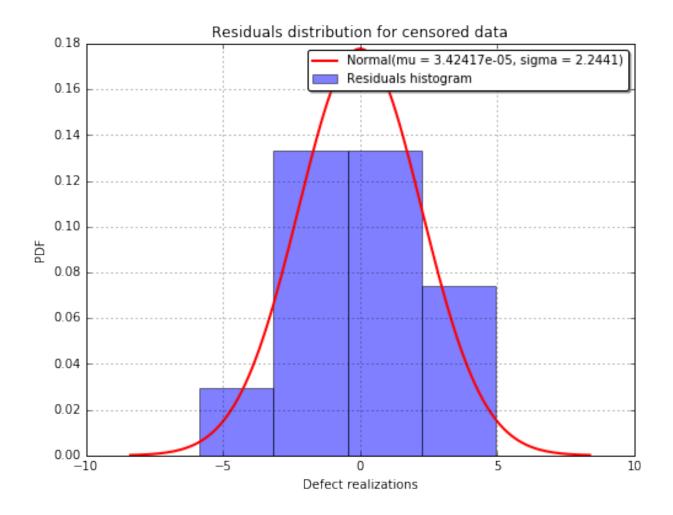


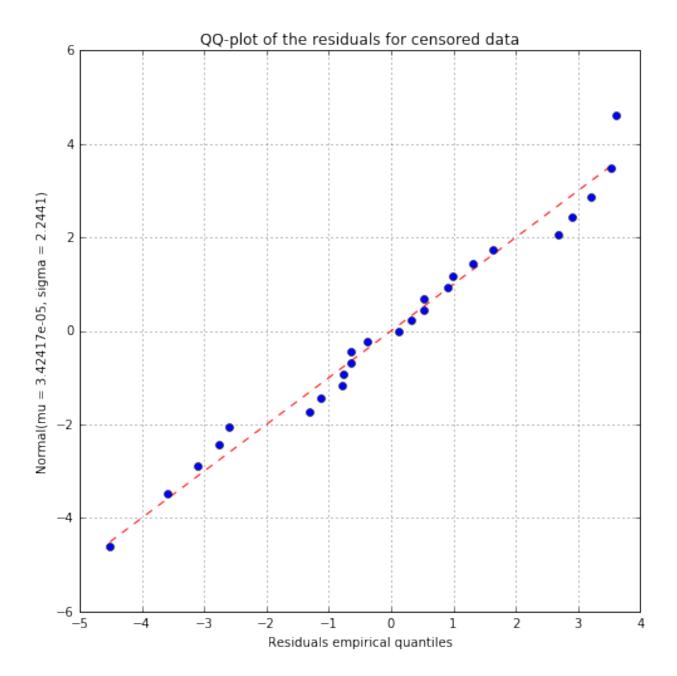


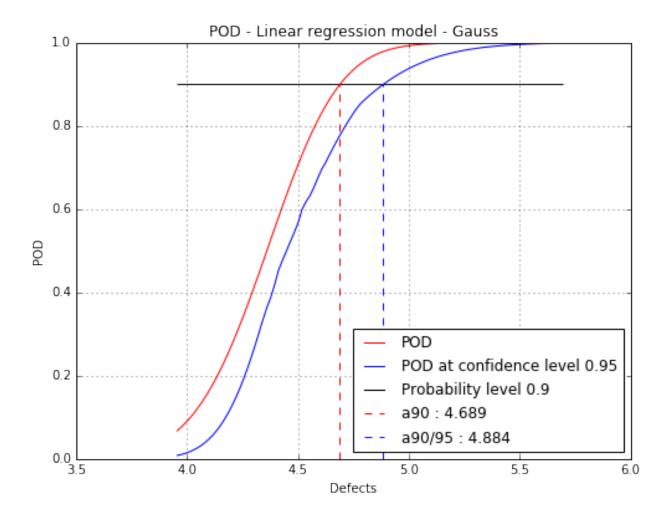


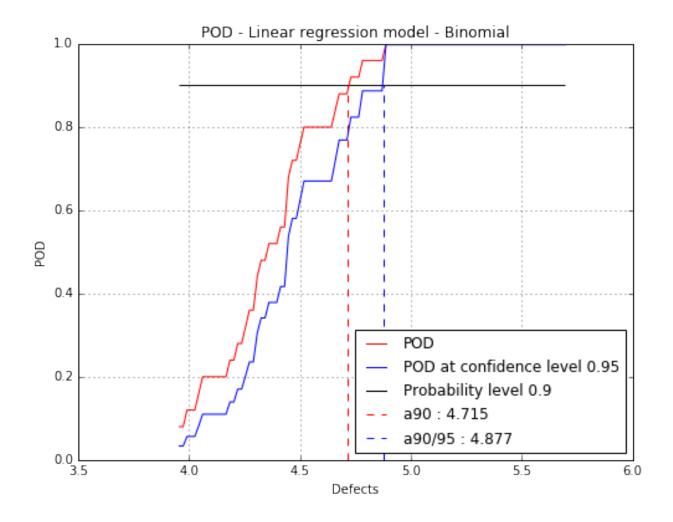


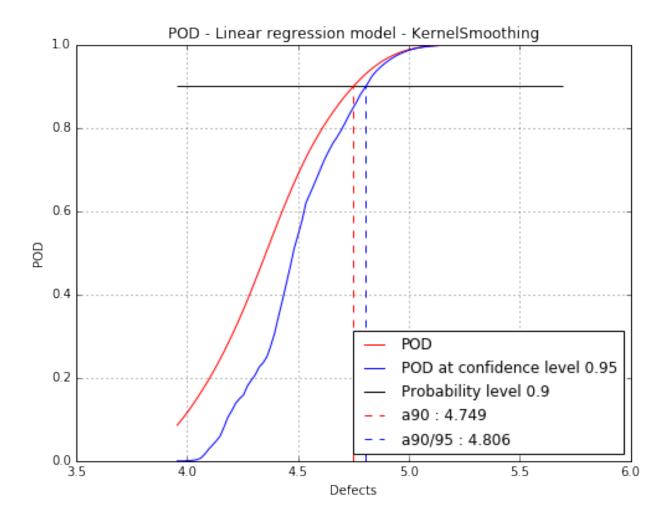

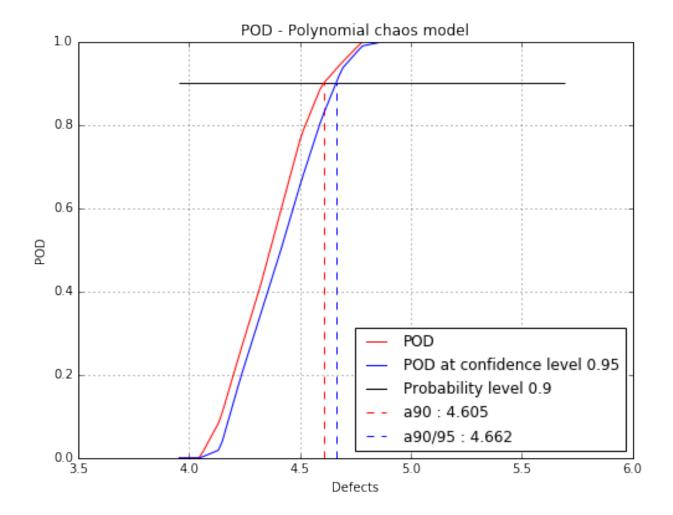

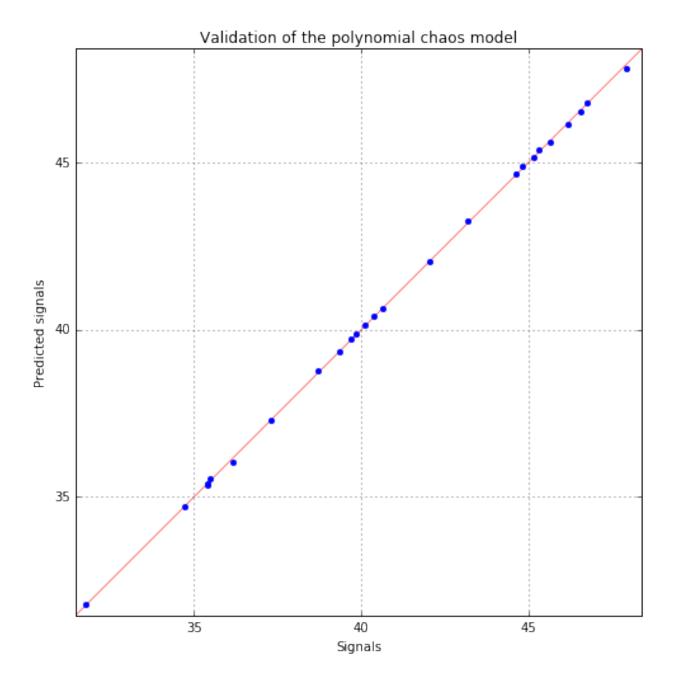

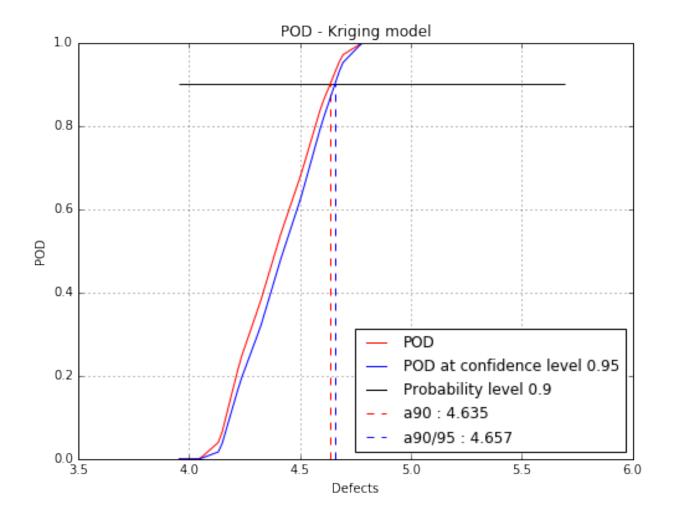

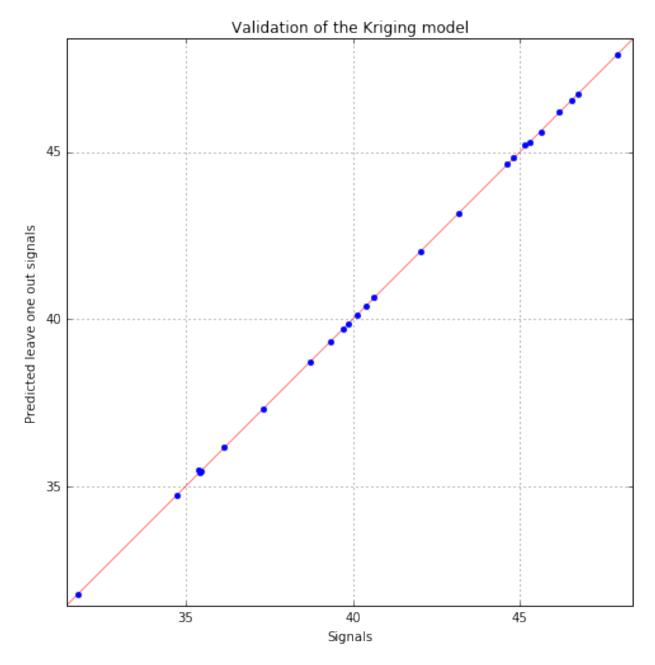

ipynb source code

1.2.9 Adaptive Signal POD using Kriging

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
import numpy as np
```

Generate data

```
inputSample = ot.NumericalSample(
    [[4.59626812e+00, 7.46143339e-02, 1.02231538e+00, 8.60042277e+01],
    [4.14315790e+00, 4.20801346e-02, 1.05874908e+00, 2.65757364e+01],
    [4.76735111e+00, 3.72414824e-02, 1.05730385e+00, 5.76058433e+01],
    [4.82811977e+00, 2.49997658e-02, 1.06954641e+00, 2.54461380e+01],
    [4.48961094e+00, 3.74562922e-02, 1.04943946e+00, 6.19483646e+00],
    [5.05605334e+00, 4.87599783e-02, 1.06520409e+00, 3.39024904e+00],
    [5.69679328e+00, 7.74915877e-02, 1.04099514e+00, 6.50990466e+01],
    [5.10193991e+00, 4.35520544e-02, 1.02502536e+00, 5.51492592e+01],
    [4.04791970e+00, 2.38565932e-02, 1.01906882e+00, 2.07875350e+01],
    [4.66238956e+00, 5.49901237e-02, 1.02427200e+00, 1.45661275e+01],
    [4.86634219e+00, 6.04693570e-02, 1.08199374e+00, 1.05104730e+00],
    [4.13519347e+00, 4.45225831e-02, 1.01900124e+00, 5.10117047e+01],
    [4.92541940e+00, 7.87692335e-02, 9.91868726e-01, 8.32302238e+01],
    [4.70722074e+00, 6.51799251e-02, 1.10608515e+00, 3.30181002e+01],
    [4.29040932e+00, 1.75426222e-02, 9.75678838e-01, 2.28186756e+01],
    [4.89291400e+00, 2.34997929e-02, 1.07669835e+00, 5.38926138e+01],
    [4.44653744e+00, 7.63175936e-02, 1.06979154e+00, 5.19109415e+01],
    [3.99977452e+00, 5.80430585e-02, 1.01850716e+00, 7.61988190e+01],
    [3.95491570e+00, 1.09302814e-02, 1.03687664e+00, 6.09981789e+01],
    [5.16424368e+00, 2.69026464e-02, 1.06673711e+00, 2.88708887e+01],
    [5.30491620e+00, 4.53802273e-02, 1.06254792e+00, 3.03856837e+01],
    [4.92809155e+00, 1.20616369e-02, 1.00700410e+00, 7.02512744e+00],
    [4.68373805e+00, 6.26028935e-02, 1.05152117e+00, 4.81271603e+01],
    [5.32381954e+00, 4.33013582e-02, 9.90522007e-01, 6.56015973e+01],
    [4.35455857e+00, 1.23814619e-02, 1.01810539e+00, 1.10769534e+01]])
signals = ot.NumericalSample(
    [[ 37.305445], [ 35.466919], [ 43.187991], [ 45.305165], [ 40.121222], [ 44.
\leftrightarrow 609524],
     [ 45.14552 ], [ 44.80595 ], [ 35.414039], [ 39.851778], [ 42.046049], [ 34.73469,
     [ 39.339349], [ 40.384559], [ 38.718623], [ 46.189709], [ 36.155737], [ 31.
→7683691,
     [ 35.384313], [ 47.914584], [ 46.758537], [ 46.564428], [ 39.698493], [ 45.
→6365881,
     [ 40.64394811)
# detection threshold
detection = 38
# Select point as initial DOE
inputDOE = inputSample[:7]
outputDOE = signals[:7]
# simulate the true physical model
basis = ot.ConstantBasisFactory(4).build()
covModel = ot.SquaredExponential([5.03148,13.9442,20,20], [15.1697])
krigingModel = ot.KrigingAlgorithm(inputSample, signals, basis, covModel)
krigingModel.run()
physicalModel = krigingModel.getResult().getMetaModel()
```

Create the Adaptive Signal POD with Kriging model

This method aims at improving the quality of the Kriging model where the accuracy of the computed POD is the lowest.

As this method is time consuming, it is more efficient to reduce the area of the defect size only in the most interesting part. To do that, an initial POD study can be run.

Run an initial POD study with the kriging technique

```
initialPOD = otpod.KrigingPOD(inputDOE, outputDOE, detection)
%time initialPOD.run()
```

```
Start optimizing covariance model parameters...

Kriging optimizer completed

kriging validation Q2 (>0.9): 0.8851

Computing POD per defect: [===========] 100.00

$\infty$ Done

CPU times: user 1min 19s, sys: 8.58 s, total: 1min 28s

Wall time: 1min 26s
```


```
fig, ax = initialPOD.drawPOD(0.9, 0.95)
fig.show()
```

```
/home/dumas/anaconda2/lib/python2.7/site-packages/matplotlib/figure.py:397:_

→UserWarning: matplotlib is currently using a non-GUI backend, so cannot show the_

→figure

"matplotlib is currently using a non-GUI backend, "
```

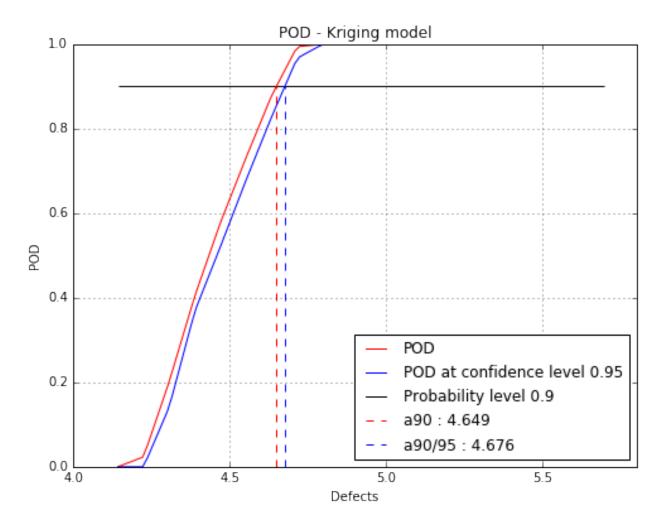

Based on this study, the interesting part for the defects ranges from 4.2 to 4.8. The adaptive signal algorithm will be then reduced to this area.

Run the adaptive algorithm


Computing the criterion is costly so the sampling and simulation size are reduced.


```
# set the number of iterations
nIteration = 5


# Creating the adaptivePOD object
adaptivePOD = otpod.AdaptiveSignalPOD(inputDOE, outputDOE, physicalModel, nIteration,
odetection)

# Change the range for the defect sizes between 4.2 and 4.8
adaptivePOD.setDefectSizes([4.2, 4.35, 4.5, 4.6, 4.7, 4.8])


# We can change also the number of candidate points for which the critertion is
computed
adaptivePOD.setCandidateSize(100)
# we can change the sample size of the Monte Carlo simulation
adaptivePOD.setSamplingSize(500) # default is 5000
# we can also change the size of the simulation to compute the confidence interval
```

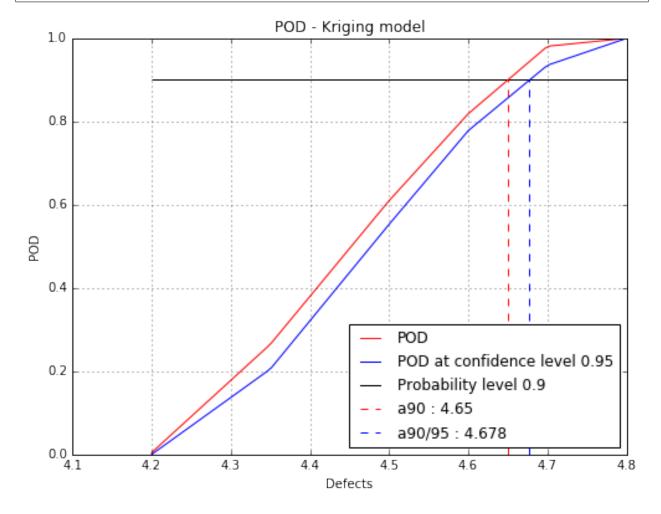

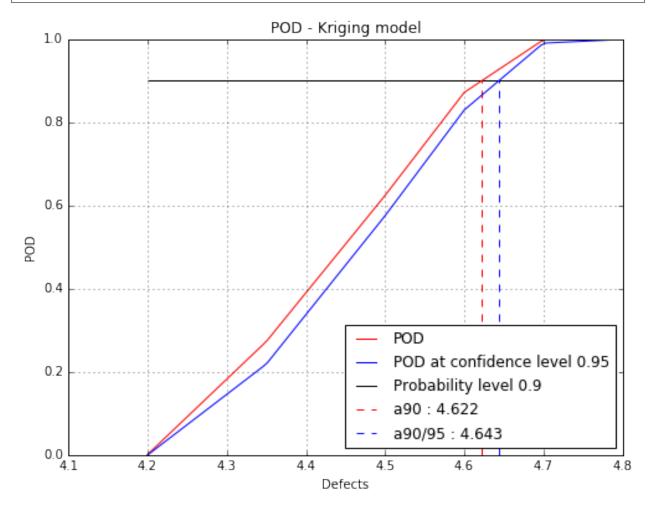


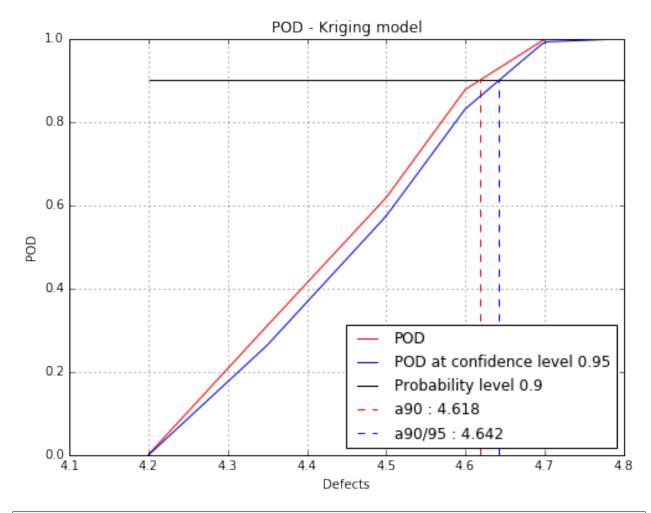

Iteration : 4/5
Computing criterion: [==========] 100.00% Done
Criterion value : 0.0205
Added point : [4.77187,0.0701099,1.04077,33.0796]
Update the kriging model
Kriging validation Q2 (>0.9): 0.9698

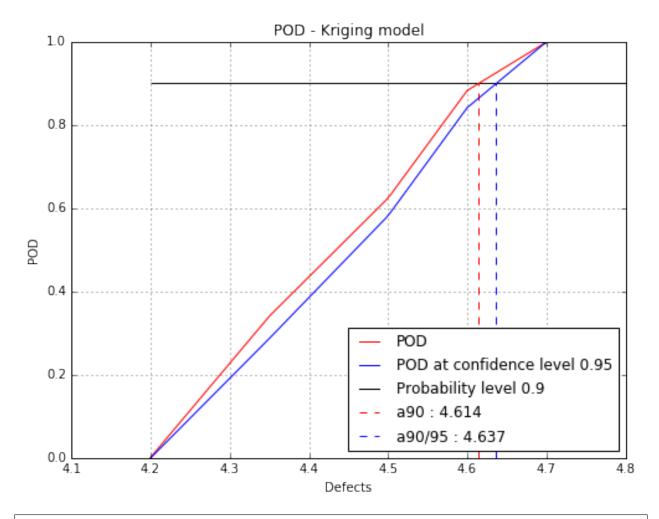


Iteration : 5/5
Computing criterion: [==========] 100.00% Done
Criterion value : 0.0190
Added point : [4.22813,0.0389429,1.0511,51.1515]
Update the kriging model
Kriging validation Q2 (>0.9): 0.9644

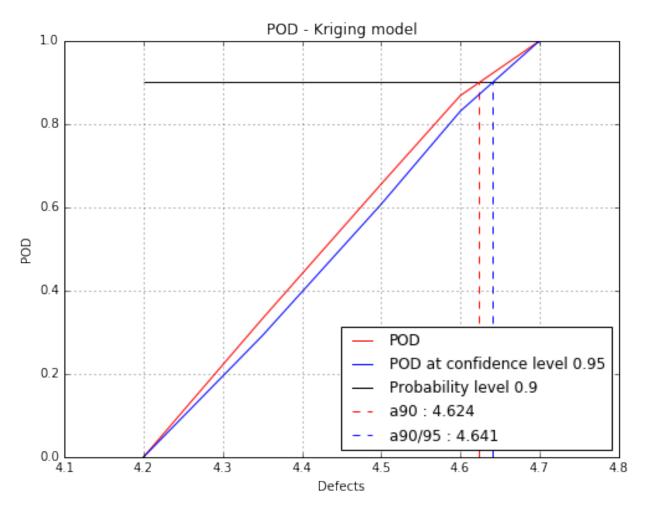


Display the POD result based on the adative kriging model

```
fig, ax = adaptivePOD.drawPOD(0.9, 0.95)
fig.show()
```

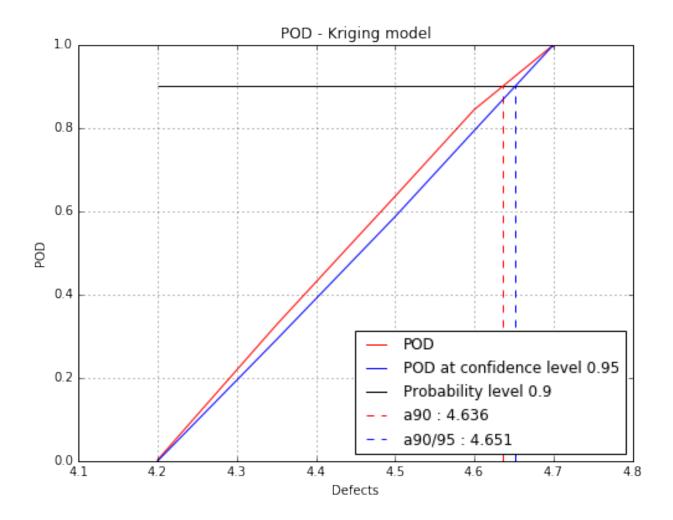

Diplay the validation graph

fid, ax = adaptivePOD.drawValidationGraph()
fig.show()

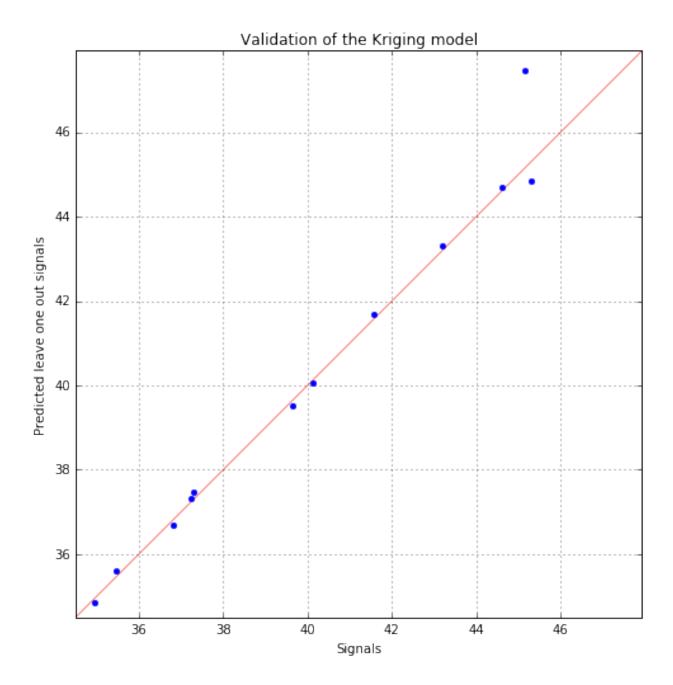

Quality improvement of the POD computation


From the adaptive algorithm, the kriging result and the final DOE are available. As the number of simulations were reduced, we can compute again the POD with more accuracy than before if needed.

```
# get the kriging result and the final DOE from the adaptive algorithm
krigingRes = adaptivePOD.getKrigingResult()
inputfinal = adaptivePOD.getInputDOE()
outputfinal = adaptivePOD.getOutputDOE()
defectSizes = adaptivePOD.getDefectSizes()

# A new POD study is launch with the DOE values
```

```
finalPOD = otpod.KrigingPOD(inputfinal, outputfinal, detection)
finalPOD.setDefectSizes(defectSizes)
# The kriging model is already known so it is given to this study
finalPOD.setKrigingResult(krigingRes)
finalPOD.run()
```

```
fig, ax = finalPOD.drawPOD(0.9, 0.95)
fig.show()
```

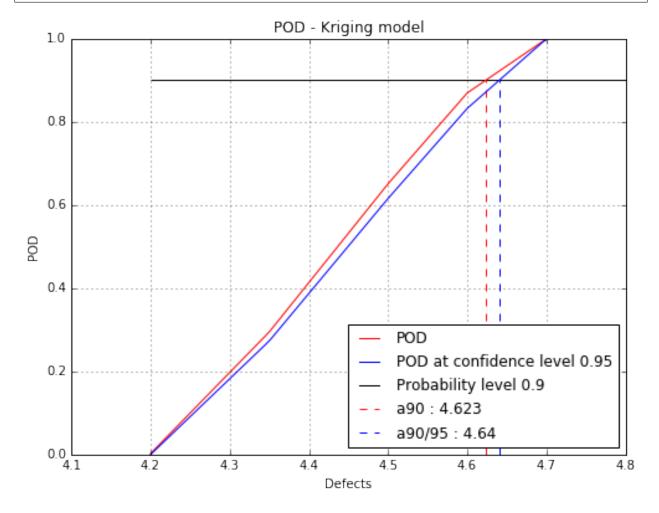

ipynb source code

1.2.10 Adaptive Hit Miss POD

```
%matplotlib inline
import numpy as np
import openturns as ot
import otpod
```


```
import warnings
warnings.filterwarnings("ignore")
```

```
# The Hit/Miss function is build by executing "Make_HM.py"
# The function is called "MyHM"
%run Make_HM.py
```


```
The function 'MyHM' has been loaded
MyHM inputs dimension : 4
MyHM output dimension :
1 if signal > 33
0 if signal < 33
```


```
n_more = 30
# Add n_more points with the adaptive algorithm
# 5 points are added at each iteration
hitmiss_algo = res_algo = otpod.AdaptiveHitMissPOD(inputDOE, outputDOE, MyHM, n_more)
hitmiss_algo.setClassifierType("rf")
# Computation of the POD at each iteration activated and display the POD graph
hitmiss_algo.setGraphActive(True, 0.9, 0.95, 'figure/')
hitmiss_algo.run()
```


```
Building the classifier
Start the improvement loop
Adding points: [======== 16.67%
```

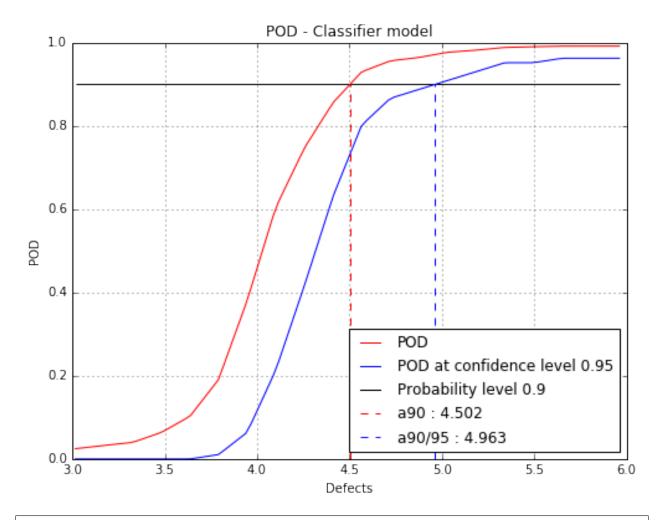


Adding points: [=========== 33.33%

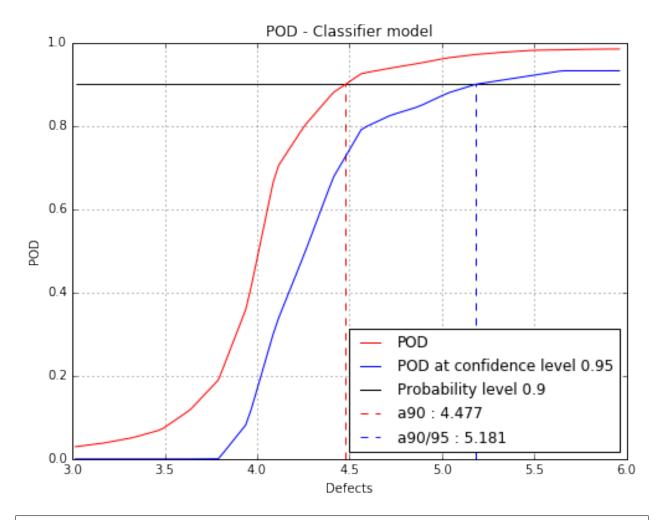


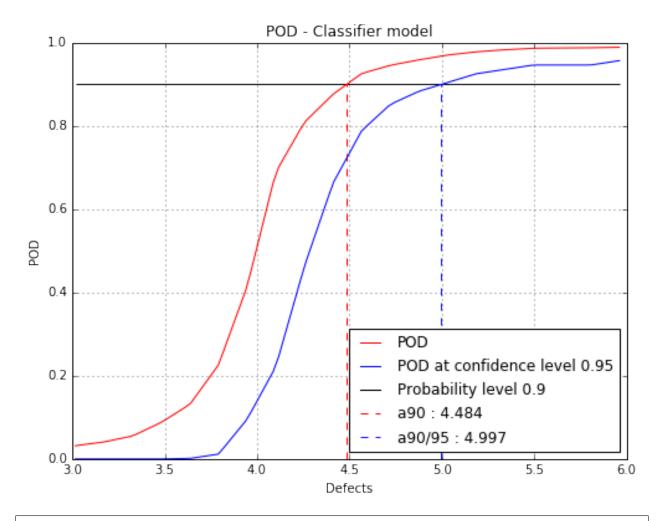

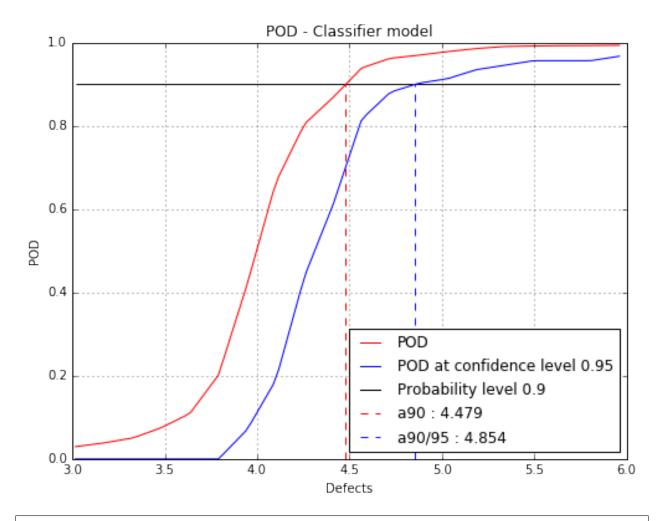


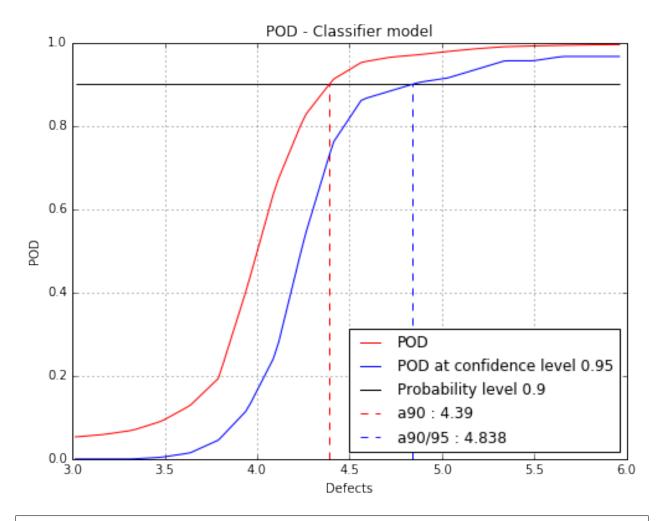

Adding points: [=======] 100.00% Done

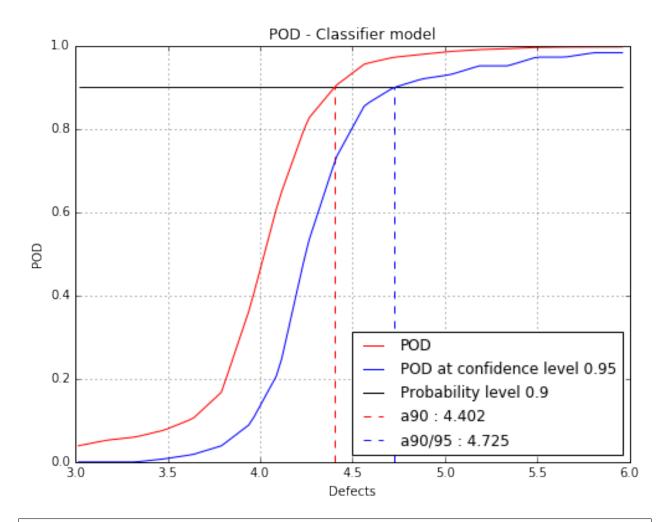

fig, ax = hitmiss_algo.drawPOD(0.9, confidenceLevel=0.95)
fig.show()

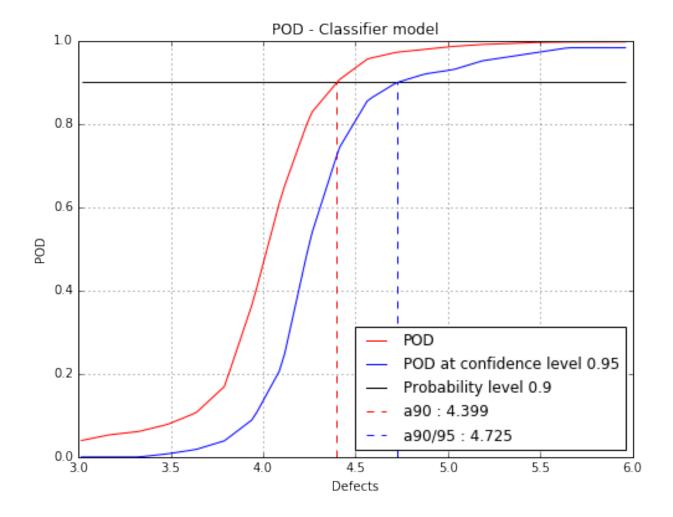

Signal case

Case where the physical model is a function providing the a signal value. In this case, the detection threshold must be given. The hit miss function is built inside the AdaptiveHitMissPOD class and is then used in the algorithm.


```
inputSample = ot.NumericalSample(
    [[4.59626812e+00, 7.46143339e-02, 1.02231538e+00, 8.60042277e+01],
    [4.14315790e+00, 4.20801346e-02, 1.05874908e+00, 2.65757364e+01],
    [4.76735111e+00, 3.72414824e-02, 1.05730385e+00, 5.76058433e+01],
    [4.82811977e+00, 2.49997658e-02, 1.06954641e+00, 2.54461380e+01],
    [4.48961094e+00, 3.74562922e-02, 1.04943946e+00, 6.19483646e+00],
    [5.05605334e+00, 4.87599783e-02, 1.06520409e+00, 3.39024904e+00],
    [5.69679328e+00, 7.74915877e-02, 1.04099514e+00, 6.50990466e+01],
    [5.10193991e+00, 4.35520544e-02, 1.02502536e+00, 5.51492592e+01],
    [4.04791970e+00, 2.38565932e-02, 1.01906882e+00, 2.07875350e+01],
    [4.66238956e+00, 5.49901237e-02, 1.02427200e+00, 1.45661275e+01],
    [4.86634219e+00, 6.04693570e-02, 1.08199374e+00, 1.05104730e+00],
    [4.13519347e+00, 4.45225831e-02, 1.01900124e+00, 5.10117047e+01],
    [4.92541940e+00, 7.87692335e-02, 9.91868726e-01, 8.32302238e+01],
    [4.70722074e+00, 6.51799251e-02, 1.10608515e+00, 3.30181002e+01],
    [4.29040932e+00, 1.75426222e-02, 9.75678838e-01, 2.28186756e+01],
    [4.89291400e+00, 2.34997929e-02, 1.07669835e+00, 5.38926138e+01],
    [4.44653744e+00, 7.63175936e-02, 1.06979154e+00, 5.19109415e+01],
```

```
[3.99977452e+00, 5.80430585e-02, 1.01850716e+00, 7.61988190e+01],
    [3.95491570e+00, 1.09302814e-02, 1.03687664e+00, 6.09981789e+01],
    [5.16424368e+00, 2.69026464e-02, 1.06673711e+00, 2.88708887e+01],
    [5.30491620e+00, 4.53802273e-02, 1.06254792e+00, 3.03856837e+01],
    [4.92809155e+00, 1.20616369e-02, 1.00700410e+00, 7.02512744e+00],
    [4.68373805e+00, 6.26028935e-02, 1.05152117e+00, 4.81271603e+01],
    [5.32381954e+00, 4.33013582e-02, 9.90522007e-01, 6.56015973e+01],
    [4.35455857e+00, 1.23814619e-02, 1.01810539e+00, 1.10769534e+01]]
signals = ot.NumericalSample(
    [[ 37.305445], [ 35.466919], [ 43.187991], [ 45.305165], [ 40.121222], [ 44.
→609524],
     [ 45.14552 ], [ 44.80595 ], [ 35.414039], [ 39.851778], [ 42.046049], [ 34.73469,
→ ] ,
     [ 39.339349], [ 40.384559], [ 38.718623], [ 46.189709], [ 36.155737], [ 31.
→7683691,
    [ 35.384313], [ 47.914584], [ 46.758537], [ 46.564428], [ 39.698493], [ 45.
→636588],
    [ 40.643948]])
# detection threshold
detection = 38
# Select point as initial DOE
inputDOE = inputSample[:]
outputDOE = signals[:]
# simulate the true physical model
basis = ot.ConstantBasisFactory(4).build()
covModel = ot.SquaredExponential([5.03148,13.9442,20,20], [15.1697])
krigingModel = ot.KrigingAlgorithm(inputSample, signals, basis, covModel)
krigingModel.run()
physicalModel = krigingModel.getResult().getMetaModel()
```

```
adaptivePOD = otpod.AdaptiveHitMissPOD(inputDOE, outputDOE, physicalModel, 100, odetection)
adaptivePOD.run()
```

```
Building the classifier
Start the improvement loop
Adding points: [=======] 100.00% Done
```

```
fig, ax = adaptivePOD.drawPOD(0.9, confidenceLevel=0.95)
fig.show()
```

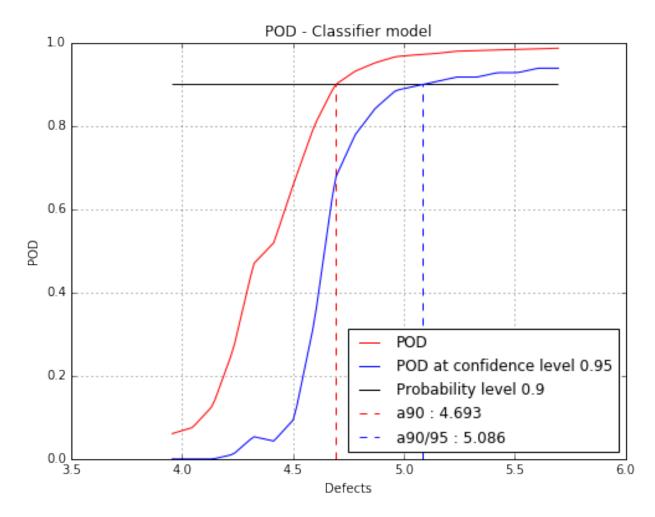

ipynb source code

1.2.11 Sobol Indices

It is required to first build a POD object based on the Kriging metamodel in order to compute the Sobol indices. It also can be used only if the input parameters dimension is greater than 2 (without counting the defect).

```
# import relevant module
import openturns as ot
import otpod
# enable display figure in notebook
%matplotlib inline
```

Generate data

```
inputSample = ot.NumericalSample(
    [[4.59626812e+00, 7.46143339e-02, 1.02231538e+00, 8.60042277e+01],
    [4.14315790e+00, 4.20801346e-02, 1.05874908e+00, 2.65757364e+01],
    [4.76735111e+00, 3.72414824e-02, 1.05730385e+00, 5.76058433e+01],
    [4.82811977e+00, 2.49997658e-02, 1.06954641e+00, 2.54461380e+01],
    [4.48961094e+00, 3.74562922e-02, 1.04943946e+00, 6.19483646e+00],
```

```
[5.05605334e+00, 4.87599783e-02, 1.06520409e+00, 3.39024904e+00],
    [5.69679328e+00, 7.74915877e-02, 1.04099514e+00, 6.50990466e+01],
    [5.10193991e+00, 4.35520544e-02, 1.02502536e+00, 5.51492592e+01],
    [4.04791970e+00, 2.38565932e-02, 1.01906882e+00, 2.07875350e+01],
    [4.66238956e+00, 5.49901237e-02, 1.02427200e+00, 1.45661275e+01],
    [4.86634219e+00, 6.04693570e-02, 1.08199374e+00, 1.05104730e+00],
    [4.13519347e+00, 4.45225831e-02, 1.01900124e+00, 5.10117047e+01],
    [4.92541940e+00, 7.87692335e-02, 9.91868726e-01, 8.32302238e+01],
    [4.70722074e+00, 6.51799251e-02, 1.10608515e+00, 3.30181002e+01],
    [4.29040932e+00, 1.75426222e-02, 9.75678838e-01, 2.28186756e+01],
    [4.89291400e+00, 2.34997929e-02, 1.07669835e+00, 5.38926138e+01],
    [4.44653744e+00, 7.63175936e-02, 1.06979154e+00, 5.19109415e+01],
    [3.99977452e+00, 5.80430585e-02, 1.01850716e+00, 7.61988190e+01],
    [3.95491570e+00, 1.09302814e-02, 1.03687664e+00, 6.09981789e+01],
    [5.16424368e+00, 2.69026464e-02, 1.06673711e+00, 2.88708887e+01],
    [5.30491620e+00, 4.53802273e-02, 1.06254792e+00, 3.03856837e+01],
    [4.92809155e+00, 1.20616369e-02, 1.00700410e+00, 7.02512744e+00],
    [4.68373805e+00, 6.26028935e-02, 1.05152117e+00, 4.81271603e+01],
    [5.32381954e+00, 4.33013582e-02, 9.90522007e-01, 6.56015973e+01],
    [4.35455857e+00, 1.23814619e-02, 1.01810539e+00, 1.10769534e+01]])
signals = ot.NumericalSample(
    [[ 37.305445], [ 35.466919], [ 43.187991], [ 45.305165], [ 40.121222], [ 44.
→609524],
     [ 45.14552 ], [ 44.80595 ], [ 35.414039], [ 39.851778], [ 42.046049], [ 34.73469]
\hookrightarrow ],
     [ 39.339349], [ 40.384559], [ 38.718623], [ 46.189709], [ 36.155737], [ 31.
\hookrightarrow 768369],
     [ 35.384313], [ 47.914584], [ 46.758537], [ 46.564428], [ 39.698493], [ 45.

→636588],

     [ 40.643948]])
```

Build POD with Kriging model

```
# signal detection threshold
detection = 38.
```

Running the Kriging based POD

The computing time can be reduced by setting the simulation size attribute to another value. However the confidence interval is less accurate.

The sampling size is the number of the samples used to compute the POD with the Monte Carlo simulation for each defect sizes.

A progress is displayed, which can be disabled with the method setVerbose.

```
POD = otpod.KrigingPOD(inputSample, signals, detection)

# we can change the number of initial random search for the best starting point

# of the TNC algorithm which optimizes the covariance model parameters

POD.setInitialStartSize(500) # default is 1000


# we can change the sample size of the Monte Carlo simulation

POD.setSamplingSize(2000) # default is 5000

# we can also change the size of the simulation to compute the confidence interval
```

```
POD.setSimulationSize(500) # default is 1000 %time POD.run()
```

Show POD graphs

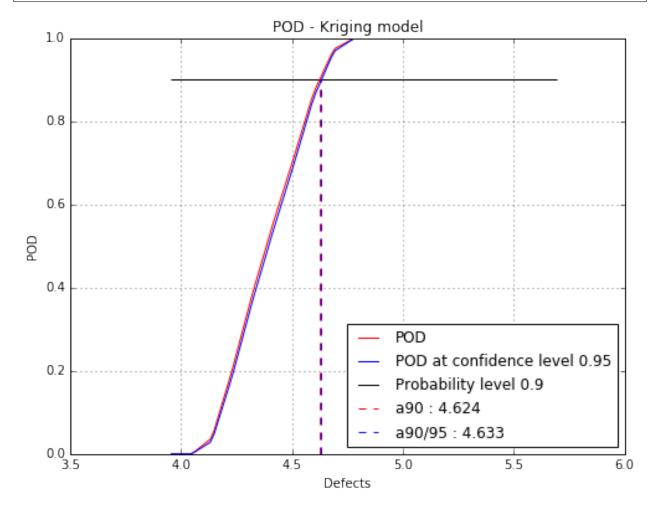

Run the sensitivity analysis

The sensitivity analysis can only be performed with POD computed with a kriging metamodel.


The Sobol indices are aggregated indices computed for the defect sizes defined in the POD study.

```
# number of simulations
N = 1000
sobol = otpod.SobolIndices(POD, N)
sobol.run()
```

Draw the figure with given labels

The default labels are Xi but the user can specify its own input labels. Besides, the figure can be saved specifying the attribute name.

```
fig, ax = sobol.drawIndices(['X1', 'variable2', 'param3'], name='figure/Sobol.png')
fig.show()
```

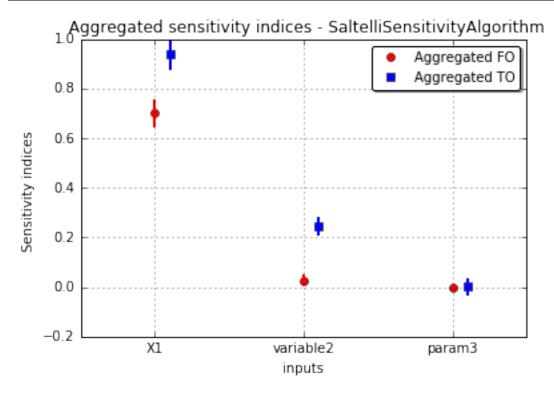

Get the results

The Sobol indices are given in the OpenTURNS object SobolIndicesAlgorithm. The method *getSensitivityResult* allows the get this object and then get back all wanted results.

```
Aggregated first order: [0.699866,0.0271797,0.000276829]
Aggregated total order: [0.938378,0.242988,0.00167926]
First ordre confidence interval:
[0.646461, 0.747969]
[0.00793877, 0.0463859]
[-0.0014029, 0.0018746]
```

It is also possible to retreive the Sobol indices for one defect size among the list.

As example, we want the indices for the 4th defect size in the list. It may return an error if the indices cannot be computed because no variability exists. It is the case when the POD is equal to 0 or 1.

Change the defect sizes list

It is possible to modify the list of the defect sizes either to reduce the range or to compute the indices for a specific defect value. If only one defect size is provided, then the aggregated indices correspond to the indices.

```
sobol.setDefectSizes([4.5])
sobol.run()
```

```
Aggregated first order: [0.730209,0.0326692,0.000894105]
Aggregated total order: [0.97535,0.236755,0.00106565]
First order: [0.730209,0.0326692,0.000894105]
Total order: [0.97535,0.236755,0.00106565]
```

Change the method to compute the indices

OpenTURNS implements 4 methods : Saltelli, Martinez, Jansen and Mauntz-Kucherenko. These methods can be chosen using the method *setSensitivityMethod*.

```
sobol.setSensitivityMethod("Martinez")
sobol.run()
```

```
Aggregated first order: [0.795352,0.0913042,0.047562]
Aggregated total order: [0.916833,0.211141,0.003963]
```

CHAPTER

TWO

INDICES AND TABLES

- genindex
- search

A	drawPOD() (QuantileRegressionPOD method), 16
AdaptiveHitMissPOD (class in otpod), 36	drawPOD() (UnivariateLinearModelPOD method), 11
AdaptiveSignalPOD (class in otpod), 29	drawPolynomialChaosModel() (PolynomialChaosPOD method), 20
C	drawResiduals() (UnivariateLinearModelAnalysis
computeDetectionSize() (AdaptiveHitMissPOD method),	method), 6 drawResidualsDistribution() (UnivariateLinearModel-
38	Analysis method), 6
computeDetectionSize() (AdaptiveSignalPOD method), 31	$draw Residuals QQ plot () \ (Univariate Linear Model Analysis$
computeDetectionSize() (KrigingPOD method), 25	method), 6
computeDetectionSize() (PolynomialChaosPOD	drawValidationGraph() (AdaptiveSignalPOD method), 32 drawValidationGraph() (KrigingPOD method), 26
method), 19	drawValidationGraph() (PolynomialChaosPOD method),
computeDetectionSize() (QuantileRegressionPOD method), 15	21
computeDetectionSize() (UnivariateLinearModelPOD	F
method), 11	filterCensoredData() (DataHandling static method), 48
D	
	G
DataHandling (class in otpod), 48 drawBoxCoxLikelihood() (AdaptiveHitMissPOD	getAdaptiveStrategy() (PolynomialChaosPOD method),
method), 38	21
drawBoxCoxLikelihood() (AdaptiveSignalPOD method),	getAndersonDarlingPValue() (UnivariateLinearModel-Analysis method), 7
drawBoxCoxLikelihood() (KrigingPOD method), 25	getBasis() (AdaptiveSignalPOD method), 33
drawBoxCoxLikelihood() (PolynomialChaosPOD	getBasis() (KrigingPOD method), 26
method), 19	getBoxCoxParameter() (AdaptiveHitMissPOD method),
drawBoxCoxLikelihood() (QuantileRegressionPOD	39
method), 15	getBoxCoxParameter() (AdaptiveSignalPOD method), 33 getBoxCoxParameter() (KrigingPOD method), 27
drawBoxCoxLikelihood() (UnivariateLinearModelAnal-	getBoxCoxParameter() (Rrightgrob hiethod), 27 getBoxCoxParameter() (PolynomialChaosPOD method),
ysis method), 5	21
drawBoxCoxLikelihood() (UnivariateLinearModelPOD method), 11	getBoxCoxParameter() (QuantileRegressionPOD
drawGraphs() (PODSummary method), 45	method), 16
drawIndices() (SobolIndices method), 43	$getBoxCoxParameter() \ (UnivariateLinearModelAnalysis$
drawLinearModel() (QuantileRegressionPOD method),	method), 7
15	getBoxCoxParameter() (UnivariateLinearModelPOD
drawLinearModel() (UnivariateLinearModelAnalysis	method), 12 getBreuschPaganPValue() (UnivariateLinearModelAnal-
method), 5	ysis method), 7
drawPOD() (AdaptiveHitMissPOD method), 38	getCandidateSize() (AdaptiveHitMissPOD method), 39
drawPOD() (AdaptiveSignalPOD method), 32	getCandidateSize() (AdaptiveSignalPOD method), 33
drawPOD() (KrigingPOD method), 26 drawPOD() (PolynomialChaosPOD method), 20	getClassifier() (AdaptiveHitMissPOD method), 39
arani opini orini indimurcina on Opinicani av	

getClassifierParameters()	(AdaptiveHitMissPOD	getPODCLModel() (Polyn	iomialChaosPOD method), 21
method), 39	\ 1		ntileRegressionPOD method),
getClassifierType() (AdaptiveHit	tMissPOD method), 39	16	,,
getConfusionMatrix() (Adaptiv		getPODCLModel()	(UnivariateLinearModelPOD
39	ermannssr ob memou);	method), 12	(emvariaceEmearivioaen ez
getCovarianceModel() (Adaptive	eSignalPOD method) 33	getPODModel() (Adaptive	HitMissPOD method) 40
getCovarianceModel() (KrigingI	=	getPODModel() (Adaptive	
	(UnivariateLinearModel-	getPODModel() (KrigingP	_
Analysis method), 7	(OllivariateLinearWoder-		iialChaosPOD method), 22
	GgsDOD mathad) 20		
getDefectSizes() (AdaptiveHitM			RegressionPOD method), 17
getDefectSizes() (AdaptiveSigna		_	ateLinearModelPOD method),
getDefectSizes() (KrigingPOD r		12	0 (DODG 41 1) 46
getDefectSizes() (PolynomialCh		= -	() (PODSummary method), 46
getDefectSizes() (SobolIndices i		getPolynomialChaosResul	t() (PolynomialChaosPOD
getDegree() (PolynomialChaosP		method), 22	
getDistribution() (AdaptiveHitM		getProjectionStrategy() (Po	olynomialChaosPOD method),
getDistribution() (AdaptiveSigna		22	
getDistribution() (KrigingPOD r		getQ2() (AdaptiveSignalPo	
getDistribution() (PolynomialCh		getQ2() (KrigingPOD met	
getDurbinWatsonPValue() (Univ	variateLinearModelAnal-	getQ2() (PolynomialChaos	
ysis method), 7		getQuantile() (QuantileReg	
getGraphActive() (AdaptiveHitM	MissPOD method), 39	getQuantileRegressionPOI	D() (PODSummary method),
getGraphActive() (AdaptiveSign	nalPOD method), 33	46	
getHarrisonMcCabePValue()	(UnivariateLinearModel-	getR2() (PolynomialChaos	sPOD method), 22
Analysis method), 7		getR2() (QuantileRegression	onPOD method), 17
getInitialStartSize() (AdaptiveSi	gnalPOD method), 33	getR2() (UnivariateLinear)	
getInitialStartSize() (KrigingPO		getR2() (UnivariateLinear)	•
getInputDOE() (AdaptiveHitMis		_	LinearModelAnalysis method),
getInputDOE() (AdaptiveSignal)		8	•
	iateLinearModelAnalysis	getResidualsDistribution()	(UnivariateLinearModelAnal-
method), 7		ysis method), 8	
getIntercept() (UnivariateLinear	ModelAnalysis method).	getResults() (PODSummar	ry method). 46
8	,, ,		nearModelAnalysis method), 8
getKolmogorovPValue() (Univa	ariateLinearModelAnaly-		iveHitMissPOD method), 40
sis method), 8	arrace 2 mean violen mary		iveSignalPOD method), 34
getKrigingPOD() (PODSummar	v method) 45	getSamplingSize() (Krigin	
getKrigingResult() (AdaptiveSig		getSamplingSize() (PODS	
getKrigingResult() (KrigingPOI			omialChaosPOD method), 22
getLinearBinomialPOD() (PODS			(UnivariateLinearModelAnaly-
getLinearGaussPOD() (PODSun	•	sis method), 8	(OllivariateElliearWoderAllary-
getLinearKernelSmoothingPOD	•		abalindiass mathod) 13
	() (PODSummary	getSensitivityMethod() (Sol	
method), 46		getSensitivityResult() (Sob	
getMethodActive() (PODSumma	* * * * * * * * * * * * * * * * * * * *		otiveHitMissPOD method), 40
	iateLinearModelAnalysis		otiveSignalPOD method), 34
method), 8	r: DOD 1 1 1 40	getSimulationSize() (Krigi	=
getOutputDOE() (AdaptiveHitM		getSimulationSize() (POD	
getOutputDOE() (AdaptiveSigna			nomialChaosPOD method), 22
	iateLinearModelAnalysis	-	ntileRegressionPOD method),
method), 8		17	
getPMax() (AdaptiveHitMissPO		getSimulationSize()	(UnivariateLinearModelPOD
getPMin() (AdaptiveHitMissPO)		method), 12	
getPODCLModel() (AdaptiveHi			earModelAnalysis method), 8
getPODCLModel() (AdaptiveSig			JnivariateLinearModelAnalysis
getPODCL Model() (KrigingPOI	D method) 27	method). 9	

144 Index

getVerbose() (AdaptiveHitMissPOD method), 40 getVerbose() (AdaptiveSignalPOD method), 34 getVerbose() (KrigingPOD method), 28 getVerbose() (PODSummary method), 47 getVerbose() (PolynomialChaosPOD method), 22 getVerbose() (QuantileRegressionPOD method), 17 getVerbose() (UnivariateLinearModelPOD method), 12 getZeroMeanPValue() (UnivariateLinearModelAnalysis method), 9	setDistribution() (KrigingPOD method), 28 setDistribution() (PolynomialChaosPOD method), 23 setGraphActive() (AdaptiveHitMissPOD method), 41 setGraphActive() (AdaptiveSignalPOD method), 35 setInitialStartSize() (AdaptiveSignalPOD method), 35 setInitialStartSize() (KrigingPOD method), 29 setKrigingResult() (KrigingPOD method), 29 setMethodActive() (PODSummary method), 47 setPMax() (AdaptiveHitMissPOD method), 41 setPMin() (AdaptiveHitMissPOD method), 41
K	setPolynomialChaosResult() (PolynomialChaosPOD
KrigingPOD (class in otpod), 24	method), 23
Р	setProjectionStrategy() (PolynomialChaosPOD method), 23
PODSummary (class in otpod), 44 PolynomialChaosPOD (class in otpod), 18	setQuantile() (QuantileRegressionPOD method), 17 setSamplingSize() (AdaptiveHitMissPOD method), 41 setSamplingSize() (AdaptiveSignalPOD method), 35
Q	setSamplingSize() (KrigingPOD method), 29
QuantileRegressionPOD (class in otpod), 13	setSamplingSize() (PODSummary method), 47
R	setSamplingSize() (PolynomialChaosPOD method), 23 setSensitivityMethod() (SobolIndices method), 43 setSimulationSize() (AdaptiveHitMissPOD method), 41
run() (AdaptiveHitMissPOD method), 40	setSimulationSize() (AdaptiveSignalPOD method), 36
run() (AdaptiveSignalPOD method), 34	setSimulationSize() (KrigingPOD method), 29
run() (KrigingPOD method), 28	setSimulationSize() (PODSummary method), 47
run() (PODSummary method), 47	setSimulationSize() (PolynomialChaosPOD method), 23
run() (PolynomialChaosPOD method), 22	setSimulationSize() (QuantileRegressionPOD method),
run() (QuantileRegressionPOD method), 17	17
run() (SobolIndices method), 43 run() (UnivariateLinearModelPOD method), 12	setSimulationSize() (UnivariateLinearModelPOD
Tun() (OnivariateEmearwioden OD method), 12	method), 12
S	setVerbose() (AdaptiveHitMissPOD method), 42 setVerbose() (AdaptiveSignalPOD method), 36
saveResults() (PODSummary method), 47	setVerbose() (KrigingPOD method), 29
saveResults() (UnivariateLinearModelAnalysis method),	setVerbose() (PODSummary method), 48
9	setVerbose() (PolynomialChaosPOD method), 23
setAdaptiveStrategy() (PolynomialChaosPOD method), 23	setVerbose() (QuantileRegressionPOD method), 17 setVerbose() (UnivariateLinearModelPOD method), 13
setBasis() (AdaptiveSignalPOD method), 35	SobolIndices (class in otpod), 42
setBasis() (KrigingPOD method), 28	
setCandidateSize() (AdaptiveHitMissPOD method), 41	U
setCandidateSize() (AdaptiveSignalPOD method), 35 setClassifierParameters() (AdaptiveHitMissPOD	UnivariateLinearModelAnalysis (class in otpod), 3 UnivariateLinearModelPOD (class in otpod), 9
method), 41 setClassifierType() (AdaptiveHitMissPOD method), 41	
setCovarianceModel() (AdaptiveSignalPOD method), 35	
setCovarianceModel() (KrigingPOD method), 28	
setDefectSizes() (AdaptiveHitMissPOD method), 41	
setDefectSizes() (AdaptiveSignalPOD method), 35	
setDefectSizes() (KrigingPOD method), 28	
setDefectSizes() (PolynomialChaosPOD method), 23	
setDefectSizes() (SobolIndices method), 43	
setDegree() (PolynomialChaosPOD method), 23	
setDistribution() (AdaptiveHitMissPOD method), 41	
setDistribution() (AdaptiveSignalPOD method), 35	

Index 145