

# **OPC Unified Architecture, Part 5**

**Specification** 

**Part 5: Information Model** 

Release 1.03

July 10, 2015

Specification Type:	Industry Standard Specification	Comments:	Report or view errata: http://www.opcfoundation.org/errat a
Title:	OPC Unified Architecture, Part 5 Part 5 :Information Model	Date:	July 10, 2015
Version:	Release 1.03	Software: Source:	MS-Word OPC UA Part 5 - Information Model 1.03 Specification.docx
Author:	OPC Foundation	Status:	Release

# CONTENTS

FI	GURES	j	vii
TA	BLES.	\	/iii
1	Scop	pe	. 1
2	Norm	native references	. 1
3	Term	ns, definitions and conventions	. 1
	3.1	Terms and definitions	
	3.2	Abbreviations and symbols	
	3.3	Conventions for Node descriptions	
4		elds and BrowseNames	
	4.1	Nodelds	. 3
	4.2	BrowseNames	
5		mon Attributes	
	5.1	General	
	5.2	Objects	
	5.3	Variables	
	5.4	VariableTypes	
6		dard ObjectTypes	
	6.1	General	
	6.2	BaseObjectType	
	6.3	ObjectTypes for the Server Object	
	6.3.1	•	
	6.3.2	<i>7</i> 1	
	6.3.3	•	
	6.3.4		
	6.3.5		
	6.3.6	, ,,	
	6.3.7	ServerRedundancyType	12
	6.3.8	TransparentRedundancyType	12
	6.3.9	NonTransparentRedundancyType	12
	6.3.1	0 NonTransparentNetworkRedundancyType	13
	6.3.1	1 OperationLimitsType	14
	6.3.1	2 AddressSpaceFileType	15
	6.3.1	3 NamespaceMetadataType	15
	6.3.1	4 NamespacesType	16
	6.4	ObjectTypes used as EventTypes	17
	6.4.1	General	17
	6.4.2	· · · · · · · · · · · · · · · · · · ·	
	6.4.3	· · · · · · · · · · · · · · · · · · ·	
	6.4.4	, ,,	
	6.4.5	71	
	6.4.6	1	
	6.4.7	· · · · · · · · · · · · · · · · · · ·	
	6.4.8	••	
	6.4.9	21	
	6.4.1	0 AuditActivateSessionEventType	23

7

6.4.1	1 AuditCancelEventType	23
6.4.1	2 AuditCertificateEventType	23
6.4.1	3 AuditCertificateDataMismatchEventType	24
6.4.1	4 AuditCertificateExpiredEventType	24
6.4.1	5 AuditCertificateInvalidEventType	25
6.4.1	6 AuditCertificateUntrustedEventType	25
6.4.1	7 AuditCertificateRevokedEventType	25
6.4.1	8 AuditCertificateMismatchEventType	25
6.4.1	9 AuditNodeManagementEventType	26
6.4.2	20 AuditAddNodesEventType	26
6.4.2	21	
6.4.2	<b>7.</b>	
6.4.2	<b>~</b> 1	
6.4.2	, ,,	
6.4.2		
6.4.2		
6.4.2	1 21	
6.4.2		
6.4.2	••	
6.4.3		
6.4.3	3 ,,	
6.4.3	2	
6.4.3	31	
6.4.3	<b>71</b>	
6.4.3	71	
6.5	ModellingRuleType	
6.6	FolderType	
6.7	DataTypeEncodingType	
6.8	DataTypeSystemType	
6.9	AggregateFunctionType	
Stan	dard VariableTypes	33
7.1	General	33
7.2	BaseVariableType	33
7.3	PropertyType	34
7.4	BaseDataVariableType	34
7.5	ServerVendorCapabilityType	35
7.6	DataTypeDictionaryType	35
7.7	DataTypeDescriptionType	
7.8	ServerStatusType	
7.9	BuildInfoType	
7.10	ServerDiagnosticsSummaryType	
7.11	SamplingIntervalDiagnosticsArrayType	
7.12	SamplingIntervalDiagnosticsType	
7.13	SubscriptionDiagnosticsArrayType	
7.14	SubscriptionDiagnosticsType	
7.15	SessionDiagnosticsArrayType	
7.16	SessionDiagnosticsVariableType	
7.17	SessionSecurityDiagnosticsArrayType	
7.18	SessionSecurityDiagnosticsType	43

	7.19	OptionSetType	44
8	Stand	dard Objects and their Variables	45
	8.1	General	45
	8.2	Objects used to organise the AddressSpace structure	45
	8.2.1	Overview	45
	8.2.2	Root	45
	8.2.3	Views	45
	8.2.4	Objects	46
	8.2.5	Types	47
	8.2.6	ObjectTypes	47
	8.2.7	VariableTypes	48
	8.2.8	ReferenceTypes	49
	8.2.9	DataTypes	49
	8.2.1	0 OPC Binary	51
	8.2.1	1 XML Schema	51
	8.2.1	2 EventTypes	51
	8.3	Server Object and its containing Objects	52
	8.3.1	General	52
	8.3.2	Server Object	53
	8.4	ModellingRule Objects	54
	8.4.1	ExposesItsArray	54
	8.4.2	Mandatory	54
	8.4.3	Optional	54
	8.4.4	OptionalPlaceholder	55
	8.4.5	MandatoryPlaceholder	55
9	Stand	dard Methods	55
	9.1	GetMonitoredItems	55
	9.2	ResendData	
	9.3	SetSubscriptionDurable	56
	9.4	RequestServerStateChange	
10	Stand	dard Views	
		dard ReferenceTypes	
٠.	11.1	References	
	11.1		
		HierarchicalReferences	
	11.3	NonHierarchicalReferences	
	11.4	HasChild	
	11.5	Aggregates	
	11.6	Organizes	
	11.7	Has Component	
	11.8	Has Ordered Component	
	11.9	HasProperty	
	11.10	HasSubtype	
	11.11	HasModellingRule	
	11.12	HasTypeDefinition	
	11.13	HasEncoding	
		HasDescription	
		HasEventSource	
	11.16	Has Notifier	62

	11.17	GeneratesEvent	62
	11.18	AlwaysGeneratesEvent	62
12	Stand	dard DataTypes	62
	12.1	Overview	62
	12.2	DataTypes defined in Part 3	63
	12.3	DataTypes defined in Part 4	66
	12.4	BuildInfo	67
	12.5	RedundancySupport	68
	12.6	ServerState	68
	12.7	RedundantServerDataType	69
	12.8	SamplingIntervalDiagnosticsDataType	69
	12.9	ServerDiagnosticsSummaryDataType	69
	12.10	ServerStatusDataType	70
	12.11	SessionDiagnosticsDataType	71
	12.12	SessionSecurityDiagnosticsDataType	72
	12.13	ServiceCounterDataType	73
	12.14	StatusResult	73
	12.15	SubscriptionDiagnosticsDataType	74
	12.16	ModelChangeStructureDataType	75
	12.17	SemanticChangeStructureDataType	76
	12.18	BitFieldMaskDataType	76
	12.19	NetworkGroupDataType	77
	12.20	EndpointUrlListDataType	77
Ar	inex A (	informative) Design decisions when modelling the server information	78
	A.1	Overview	78
	A.2	ServerType and Server Object	78
	A.3	Typed complex Objects beneath the Server Object	78
	A.4	Properties versus DataVariables	78
	A.5	Complex Variables using complex DataTypes	78
	A.6	Complex Variables having an array	79
	A.7	Redundant information	79
	A.8	Usage of the BaseDataVariableType	79
	A.9	Subtyping	79
	A.10	Extensibility mechanism	80
Ar	nex B (	normative) StateMachines	81
	B.1	General	81
	B.2	Examples of finite state machines	81
	B.2.1	Simple state machine	81
	B.2.2	State machine containing substates	82
	B.3	Definition of state machine	83
	B.4	Representation of state machines in the AddressSpace	83
	B.4.1	Overview	83
	B.4.2	StateMachineType	84
	B.4.3	StateVariableType	85
	B.4.4	21	86
	B.4.5	FiniteStateMachineType	86
	B.4.6	<b>71</b>	87
	B.4.7	71	
	B.4.8	StateType	88

B.4.9	InitialStateType	88
B.4.10	TransitionType	89
B.4.11	FromState	90
B.4.12	ToState	90
B.4.13	HasCause	90
B.4.14	HasEffect	_
B.4.15	HasSubStateMachine	
	TransitionEventType	
	AuditUpdateStateEventType	
	Special Restrictions on subtyping StateMachines	
	Specific StatusCodes for StateMachines	
	mples of StateMachines in the AddressSpace	
	StateMachineType using inheritance	
	StateMachineType with a sub-machine using inheritance	
B.5.3	StateMachineType using containment	
	Example of a StateMachine having Transition to SubStateMachine ative) File Transfer	
•	•	
	view	
	FileType	
	Open	
C.2.2 C.2.3	Close	
C.2.4	Read	
	Write	
C.2.6	GetPosition	
	SetPosition	
	System	
	FileDirectoryType	
C.3.2	FileSystem Object	
C.3.3	CreateDirectory	
C.3.4	CreateFile	105
C.3.5	Delete	106
C.3.6	MoveOrCopy	106
	FIGURES	
Figure 1 – Star	ndard AddressSpace Structure	45
Figure 2 – Viev	vs Organization	46
Figure 3 – Obje	ects Organization	46
	ectTypes Organization	
_	ableTypes Organization	
_	erenceType Definitions	
_		
•	aTypes Organization	
•	ntTypes Organization	
•	erpt of Diagnostic Information of the Server	
Figure B.1 – Ex	xample of a simple state machine	82
Figure B 2 – F	xample of a state machine having a sub-machine	82

Figure B.3 – The StateMachine Information Model	. 84
Figure B.4 – Example of an initial State in a sub-machine	. 89
Figure B.5 – Example of a StateMachineType using inheritance	. 94
Figure B.6 – Example of a StateMachineType with a SubStateMachine using inheritance	. 95
Figure B.7 – Example of a StateMachineType using containment	. 96
Figure B.8 – Example of a state machine with transitions from sub-states	. 97
Figure B.9 – Example of a StateMachineType having Transition to SubStateMachine	. 98
Figure C.1 – FileSystem Example	104
TABLES	
Table 1 – Examples of DataTypes	2
Table 2 – Type Definition Table	3
Table 3 – Common Node Attributes	4
Table 4 – Common Object Attributes	4
Table 5 – Common Variable Attributes	4
Table 6 – Common VariableType Attributes	5
Table 7 – BaseObjectType Definition	5
Table 8 – ServerType Definition	6
Table 9 – ServerCapabilitiesType Definition	8
Table 10 – ServerDiagnosticsType Definition	. 10
Table 11 – SessionsDiagnosticsSummaryType Definition	. 11
Table 12 – SessionDiagnosticsObjectType Definition	. 11
Table 13 – VendorServerInfoType Definition	. 12
Table 14 – ServerRedundancyType Definition	. 12
Table 15 – TransparentRedundancyType Definition	. 12
Table 16 – NonTransparentRedundancyType Definition	. 13
Table 17 – NonTransparentNetworkRedundancyType Definition	. 13
Table 18 – OperationLimitsType Definition	. 14
Table 19 – AddressSpaceFileType Definition	. 15
Table 20 – NamespaceMetadataType Definition	. 16
Table 21 – NamespacesType Definition	. 17
Table 22 – BaseEventType Definition	. 17
Table 23 – AuditEventType Definition	. 19
Table 24 – AuditSecurityEventType Definition	. 20
Table 25 – AuditChannelEventType Definition	. 20
Table 26 – AuditOpenSecureChannelEventType Definition	. 21
Table 27 – AuditSessionEventType Definition	. 21
Table 28 – AuditCreateSessionEventType Definition	. 22
Table 29 – AuditUrlMismatchEventType Definition	. 22
Table 30 – AuditActivateSessionEventType Definition	
Table 31 – AuditCancelEventType Definition	. 23
Table 32 – AuditCertificateEventType Definition	. 24

Table 33 – AuditCertificateDataMismatchEventType Definition	24
Table 34 – AuditCertificateExpiredEventType Definition	24
Table 35 – AuditCertificateInvalidEventType Definition	25
Table 36 – AuditCertificateUntrustedEventType Definition	25
Table 37 – AuditCertificateRevokedEventType Definition	25
Table 38 – AuditCertificateMismatchEventType Definition	26
Table 39 – AuditNodeManagementEventType Definition	26
Table 40 – AuditAddNodesEventType Definition	26
Table 41 – AuditDeleteNodesEventType Definition	27
Table 42 – AuditAddReferencesEventType Definition	27
Table 43 – AuditDeleteReferencesEventType Definition	27
Table 44 – AuditUpdateEventType Definition	28
Table 45 – AuditWriteUpdateEventType Definition	28
Table 46 – AuditHistoryUpdateEventType Definition	29
Table 47 – AuditUpdateMethodEventType Definition	29
Table 48 – SystemEventType Definition	29
Table 49 – DeviceFailureEventType Definition	30
Table 50 – SystemStatusChangeEventType Definition	30
Table 51 – BaseModelChangeEventType Definition	30
Table 52 – GeneralModelChangeEventType Definition	31
Table 53 – SemanticChangeEventType Definition	31
Table 54 – EventQueueOverflowEventType Definition	31
Table 55 – ProgressEventType Definition	32
Table 56 – ModellingRuleType Definition	32
Table 57 – FolderType Definition	32
Table 58 - DataTypeEncodingType Definition	33
Table 59 - DataTypeSystemType Definition	33
Table 60 – AggregateFunctionType Definition	33
Table 61 – BaseVariableType Definition	34
Table 62 – PropertyType Definition	34
Table 63 – BaseDataVariableType Definition	34
Table 64 – ServerVendorCapabilityType Definition	35
Table 65 – DataTypeDictionaryType Definition	35
Table 66 – DataTypeDescriptionType Definition	35
Table 67 – ServerStatusType Definition	36
Table 68 – BuildInfoType Definition	36
Table 69 – ServerDiagnosticsSummaryType Definition	37
Table 70 – SamplingIntervalDiagnosticsArrayType Definition	37
Table 71 – SamplingIntervalDiagnosticsType Definition	37
Table 72 – SubscriptionDiagnosticsArrayType Definition	38
Table 73 – SubscriptionDiagnosticsType Definition	39
Table 74 – SessionDiagnosticsArrayType Definition	39
Table 75 – SessionDiagnosticsVariableType Definition	41

Table 76 – SessionSecurityDiagnosticsArrayType Definition	43
Table 77 – SessionSecurityDiagnosticsType Definition	44
Table 78 – OptionSetType Definition	44
Table 79 – Root Definition	45
Table 80 – Views Definition	46
Table 81 – Objects Definition	47
Table 82 – Types Definition	47
Table 83 – ObjectTypes Definition	48
Table 84 – VariableTypes Definition	49
Table 85 – ReferenceTypes Definition	49
Table 86 – DataTypes Definition	51
Table 87 – OPC Binary Definition	51
Table 88 – XML Schema Definition	51
Table 89 – EventTypes Definition	52
Table 90 – Server Definition	54
Table 91 – ExposesItsArray Definition	
Table 92 – Mandatory Definition	54
Table 93 – Optional Definition	54
Table 94 – OptionalPlaceholder Definition	
Table 95 – MandatoryPlaceholder Definition	55
Table 96 – GetMonitoredItems Method AddressSpace Definition	56
Table 97 – ResendData Method AddressSpace Definition	56
Table 98 - SetSubscriptionDurable Method AddressSpace Definition	57
Table 99 - RequestServerStateChange Method AddressSpace Definition	
Table 100 – References ReferenceType	58
Table 101 – HierarchicalReferences ReferenceType	58
Table 102 – NonHierarchicalReferences ReferenceType	59
Table 103 – HasChild ReferenceType	59
Table 104 – Aggregates ReferenceType	59
Table 105 – Organizes ReferenceType	59
Table 106 - HasComponent ReferenceType	60
Table 107 – HasOrderedComponent ReferenceType	60
Table 108 – HasProperty ReferenceType	60
Table 109 – HasSubtype ReferenceType	60
Table 110 – HasModellingRule ReferenceType	61
Table 111 – HasTypeDefinition ReferenceType	61
Table 112 – HasEncoding ReferenceType	61
Table 113 – HasDescription ReferenceType	61
Table 114 - HasEventSource ReferenceType	62
Table 115 – HasNotifier ReferenceType	62
Table 116 – GeneratesEvent ReferenceType	62
Table 117 – AlwaysGeneratesEvent ReferenceType	62
Table 118 – Part 3 DataType Definitions	63

Table 119 – BaseDataType Definition	64
Table 120 – Structure Definition	64
Table 121 – Enumeration Definition	65
Table 122 – ByteString Definition	65
Table 123 – Number Definition	65
Table 124 – Double Definition	65
Table 125 – Integer Definition	65
Table 126 – DateTime Definition	66
Table 127 – String Definition	66
Table 128 – UInteger Definition	66
Table 129 – Image Definition	66
Table 130 – UInt64 Definition	66
Table 131 – Part 4 DataType Definitions	67
Table 132 – UserIdentityToken Definition	67
Table 133 – BuildInfo Structure	67
Table 134 – BuildInfo Definition	68
Table 135 – RedundancySupport Values	68
Table 136 - RedundancySupport Definition	68
Table 137 – ServerState Values	68
Table 138 – ServerState Definition	69
Table 139 – RedundantServerDataType Structure	69
Table 140 – RedundantServerDataType Definition	69
Table 141 – SamplingIntervalDiagnosticsDataType Structure	69
Table 142 – SamplingIntervalDiagnosticsDataType Definition	69
Table 143 – ServerDiagnosticsSummaryDataType Structure	70
Table 144 – ServerDiagnosticsSummaryDataType Definition	70
Table 145 – ServerStatusDataType Structure	70
Table 146 – ServerStatusDataType Definition	70
Table 147 – SessionDiagnosticsDataType Structure	71
Table 148 – SessionDiagnosticsDataType Definition	72
Table 149 – SessionSecurityDiagnosticsDataType Structure	73
Table 150 – SessionSecurityDiagnosticsDataType Definition	73
Table 151 – ServiceCounterDataType Structure	73
Table 152 - ServiceCounterDataType Definition	73
Table 153 – StatusResult Structure	74
Table 154 – StatusResult Definition	74
Table 155 – SubscriptionDiagnosticsDataType Structure	75
Table 156 – SubscriptionDiagnosticsDataType Definition	75
Table 157 – ModelChangeStructureDataType Structure	76
Table 158 – ModelChangeStructureDataType Definition	76
Table 159 – SemanticChangeStructureDataType Structure	76
Table 160 – SemanticChangeStructureDataType Definition	76
Table 161 – RitFieldMaskDataType Definition	77

Table 162 – NetworkGroupDataType Structure	77
Table 163 – NetworkGroupDataType Definition	77
Table 164 – EndpointUrlListDataType Structure	77
Table 165 – EndpointUrlListDataType Definition	77
Table B.1 – StateMachineType Definition	85
Table B.2 – StateVariableType Definition	85
Table B.3 – TransitionVariableType Definition	86
Table B.4 – FiniteStateMachineType Definition	87
Table B.5 – FiniteStateVariableType Definition	87
Table B.6 – FiniteTransitionVariableType Definition	88
Table B.7 – StateType Definition	88
Table B.8 – InitialStateType Definition	89
Table B.9 – TransitionType Definition	89
Table B.10 – FromState ReferenceType	90
Table B.11 – ToState ReferenceType	90
Table B.12 – HasCause ReferenceType	91
Table B.13 – HasEffect ReferenceType	91
Table B.14 – HasSubStateMachine ReferenceType	92
Table B.15 – TransitionEventType	92
Table B.16 – AuditUpdateStateEventType	92
Table B.17 – Specific StatusCodes for StateMachines	93
Table C.1 – FileType	99
Table C.2 – Open Method AddressSpace Definition	101
Table C.3 – Close Method AddressSpace Definition	101
Table C.4 – Read Method AddressSpace Definition	102
Table C.5 – Write Method AddressSpace Definition	102
Table C.6 – GetPosition Method AddressSpace Definition	103
Table C.7 – SetPosition Method AddressSpace Definition	103
Table C.8 – FileDirectoryType	104
Table C.9 – CreateDirectory Method AddressSpace Definition	105
Table C.10 – CreateFile Method AddressSpace Definition	106
Table C.11 – Delete Method AddressSpace Definition	106
Table C.12 – MoveOrCopy Method AddressSpace Definition	107

# **OPC FOUNDATION**

## **UNIFIED ARCHITECTURE -**

#### **FOREWORD**

This specification is the specification for developers of OPC UA applications. The specification is a result of an analysis and design process to develop a standard interface to facilitate the development of applications by multiple vendors that shall inter-operate seamlessly together.

Copyright © 2006-2015, OPC Foundation, Inc.

## **AGREEMENT OF USE**

#### COPYRIGHT RESTRICTIONS

Any unauthorized use of this specification may violate copyright laws, trademark laws, and communications regulations and statutes. This document contains information which is protected by copyright. All Rights Reserved. No part of this work covered by copyright herein may be reproduced or used in any form or by any means--graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems--without permission of the copyright owner.

OPC Foundation members and non-members are prohibited from copying and redistributing this specification. All copies must be obtained on an individual basis, directly from the OPC Foundation Web site <a href="http://www.opcfoundation.org">http://www.opcfoundation.org</a>.

#### **PATENTS**

The attention of adopters is directed to the possibility that compliance with or adoption of OPC specifications may require use of an invention covered by patent rights. OPC shall not be responsible for identifying patents for which a license may be required by any OPC specification, or for conducting legal inquiries into the legal validity or scope of those patents that are brought to its attention. OPC specifications are prospective and advisory only. Prospective users are responsible for protecting themselves against liability for infringement of patents.

#### WARRANTY AND LIABILITY DISCLAIMERS

WHILE THIS PUBLICATION IS BELIEVED TO BE ACCURATE, IT IS PROVIDED "AS IS" AND MAY CONTAIN ERRORS OR MISPRINTS. THE OPC FOUDATION MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, WITH REGARD TO THIS PUBLICATION, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF TITLE OR OWNERSHIP, IMPLIED WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR USE. IN NO EVENT SHALL THE OPC FOUNDATION BE LIABLE FOR ERRORS CONTAINED HEREIN OR FOR DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, RELIANCE OR COVER DAMAGES, INCLUDING LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY ANY USER OR ANY THIRD PARTY IN CONNECTION WITH THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

The entire risk as to the quality and performance of software developed using this specification is borne by you.

#### RESTRICTED RIGHTS LEGEND

This Specification is provided with Restricted Rights. Use, duplication or disclosure by the U.S. government is subject to restrictions as set forth in (a) this Agreement pursuant to DFARs 227.7202-3(a); (b) subparagraph (c)(1)(i) of the Rights in Technical Data and Computer Software clause at DFARs 252.227-7013; or (c) the Commercial Computer Software Restricted Rights clause at FAR 52.227-19 subdivision (c)(1) and (2), as applicable. Contractor / manufacturer are the OPC Foundation,. 16101 N. 82nd Street, Suite 3B, Scottsdale, AZ, 85260-1830

#### COMPLIANCE

The OPC Foundation shall at all times be the sole entity that may authorize developers, suppliers and sellers of hardware and software to use certification marks, trademarks or other special designations to indicate compliance with these materials. Products developed using this specification may claim compliance or conformance with this specification if and only if the software satisfactorily meets the certification requirements set by the OPC Foundation. Products that do not meet these requirements may claim only that the product was based on this specification and must not claim compliance or conformance with this specification.

#### TRADEMARKS

Most computer and software brand names have trademarks or registered trademarks. The individual trademarks have not been listed here.

## **GENERAL PROVISIONS**

Should any provision of this Agreement be held to be void, invalid, unenforceable or illegal by a court, the validity and enforceability of the other provisions shall not be affected thereby.

This Agreement shall be governed by and construed under the laws of the State of Minnesota, excluding its choice or law rules.

This Agreement embodies the entire understanding between the parties with respect to, and supersedes any prior understanding or agreement (oral or written) relating to, this specification.

#### **ISSUE REPORTING**

The OPC Foundation strives to maintain the highest quality standards for its published specifications, hence they undergo constant review and refinement. Readers are encouraged to report any issues and view any existing errata here: <a href="http://www.opcfoundation.org/errata">http://www.opcfoundation.org/errata</a>.

## **Revision 1.03 Highlights**

The following table includes the Mantis issues resolved with this revision.

Mantis ID	Summary	Resolution
2391	Clarification that Changes Property of GeneralModelChangeEvent needs an entry in its array	Changed description of Property adding text requiring entry in the array.
2194	Content of ServerProfileArray	Add description that ServerProfileArray should only contain Profiles supported by the server in its current configuration.
2219	Clarifiaction on SessionsDiagnosticsSummaryType	Changed description stating that the sessionName could be used as BrowseName or some server-specific mechanism.
2319	Clarification on SourceName in BaseEventType	Stated that the string-part of the DisplayName should be used using the default local, not the full DisplayName.
2689	Wrong NodeClass in Table	Fixed NodeClass from VariableType to Variable in a refrence description in Table 70 and in Table 72.
<u>2691</u>	Clarification on SubscriptionDiagnosticsDataType	Added a Note to Table 155.
2728	Add DataTypes OptionSet and Union	Added the DataTypes (defined in Part 3) to Table 118 and Table 120.
2730	Add Method to set Subscription to persistent mode	Added Method definition in 9.2 and Method to ServerType in 6.3.1.
2603	Add clarification on securityRejectedSessionCount	Added text describing what operations need to be considered.
2704	Add Method ResendData	Added Method in 9.2
2934	AuditSessionEventType is supposed to inherit from AuditSecurityEventType	Changed 6.4.7 referencing the correct supertype, as already stated in other sections of the spec and Part 3.
2885	Clarify how a client detects that FileType::Read is at the end of the file	Added clarification in C.2.4.
2944	Add DataTypes NormalizedString, DecimalString, DurationString, TimeString and DateString	Added the DataTypes (defined in Part 3) to Table 118 and Table 127.
2914	Add media type to FileType	Added optinal Property MimeType in C.2
2786	Add clarification to string values in SessionSecurityDiagnosticsDataType	Added clarifications on allowed values in Table 149.
3059	Clarify that MaxMonitoredItemsPerCall is also used for DeleteMonitoredItems.	Added description in 6.3.11
3058	Clarification on MaxNodesPerHistoryUpdateData and MaxNodesPerHistoryUpdateEvents	Changed description in 6.3.11
3086	Clarification on referenced XML schema in Part 6	Changed reference in 6.3.12

Mantis ID	Summary	Resolution
3110	Clarification on table descriptions	Modified Table 2 clarifying that DataType is only used for Variables, not for Objects.
3119	Clarification on should/shall in the audit events section	In several places of the document "should" was used when "shall" was intended. This has been fixed.

## **OPC Unified Architecture, Part 5 Specification**

#### Part 5: Information Model

## 1 Scope

This specification defines the Information Model of the OPC Unified Architecture. The Information Model describes standardised *Nodes* of a *Server*'s *AddressSpace*. These *Nodes* are standardised types as well as standardised instances used for diagnostics or as entry points to server-specific *Nodes*. Thus, the Information Model defines the *AddressSpace* of an empty OPC UA *Server*. However, it is not expected that all *Servers* will provide all of these *Nodes*.

#### 2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

Part 1: OPC UA Specification: Part 1 - Concepts

http://www.opcfoundation.org/UA/Part1/

Part 3: OPC UA Specification: Part 3 - Address Space Model

http://www.opcfoundation.org/UA/Part3/

Part 4: OPC UA Specification: Part 4 - Services

http://www.opcfoundation.org/UA/Part4/

Part 6: OPC UA Specification: Part 6 - Mappings

http://www.opcfoundation.org/UA/Part6/

Part 7: OPC UA Specification: Part 7 – Profiles

http://www.opcfoundation.org/UA/Part7/

Part 9: OPC UA Specification: Part 9 – Alarms and conditions

http://www.opcfoundation.org/UA/Part9/

Part 10: OPC UA Specification: Part 10 - Programs

http://www.opcfoundation.org/UA/Part10/

Part 11: OPC UA Specification: Part 11 - Historical Access

http://www.opcfoundation.org/UA/Part11/

RFC 2064: Multipurpose Internet Mail Extensions (MIME) Part Two: Media Types

https://www.ietf.org/rfc/rfc2046.txt

#### 3 Terms, definitions and conventions

## 3.1 Terms and definitions

For the purposes of this document, the terms and definitions given in Part 1 and Part 3, as well as the following apply.

#### 3.1.1

#### ClientUserId

string that identifies the user of the client requesting an action

Note 1 to entry: The *ClientUserId* is obtained directly or indirectly from the *UserIdentityToken* passed by the *Client* in the *ActivateSession Service* call. See 6.4.3 for details.

## 3.2 Abbreviations and symbols

UA Unified Architecture

XML Extensible Markup Language

#### 3.3 Conventions for Node descriptions

Node definitions are specified using tables (see Table 2).

Attributes are defined by providing the Attribute name and a value, or a description of the value.

References are defined by providing the ReferenceType name, the BrowseName of the TargetNode and its NodeClass.

- If the *TargetNode* is a component of the *Node* being defined in the table the *Attributes* of the composed *Node* are defined in the same row of the table.
- The DataType is only specified for Variables; "[<number>]" indicates a single-dimensional array, for multi-dimensional arrays the expression is repeated for each dimension (e.g. [2][3] for a two-dimensional array). For all arrays the ArrayDimensions is set as identified by <number> values. If no <number> is set, the corresponding dimension is set to 0, indicating an unknown size. If no number is provided at all the ArrayDimensions can be omitted. If no brackets are provided, it identifies a scalar DataType and the ValueRank is set to the corresponding value (see Part 3). In addition, ArrayDimensions is set to null or is omitted. If it can be Any or ScalarOrOneDimension, the value is put into "{<value>}", so either "{Any}" or "{ScalarOrOneDimension}" and the ValueRank is set to the corresponding value (see Part 3) and the ArrayDimensions is set to null or is omitted. Examples are given in Table 1.

Notation Data-Value-Array-Description Dimensions Rank Type Int32 Int32 omitted or null A scalar Int32. omitted or {0} 1 Single-dimensional array of Int32 with an Int32[] Int32 unknown size. Int32[][] Int32 2 omitted or {0,0} Two-dimensional array of Int32 with unknown sizes for both dimensions. 2 Int32[3][] Int32 {3,0} Two-dimensional array of Int32 with a size of 3 for the first dimension and an unknown size for the second dimension. Int32[5][3] Int32 2 {5,3} Two-dimensional array of Int32 with a size of 5 for the first dimension and a size of 3 for the second dimension. Int32{Any} Int32 -2 omitted or null An Int32 where it is unknown if it is scalar or array with any number of dimensions. Int32{ScalarOrOneDimension} Int32 -3 An Int32 where it is either a single-dimensional omitted or null array or a scalar.

Table 1 - Examples of DataTypes

- The TypeDefinition is specified for Objects and Variables.
- The TypeDefinition column specifies a symbolic name for a *Nodeld*, i.e. the specified *Node* points with a *HasTypeDefinition Reference* to the corresponding *Node*.
- The *ModellingRule* of the referenced component is provided by specifying the symbolic name of the rule in the *ModellingRule* column. In the *AddressSpace*, the *Node* shall use a *HasModellingRule Reference* to point to the corresponding *ModellingRule Object*.

If the *Nodeld* of a *DataType* is provided, the symbolic name of the *Node* representing the *DataType* shall be used.

Nodes of all other NodeClasses cannot be defined in the same table; therefore only the used ReferenceType, their NodeClass and their BrowseName are specified. A reference to another part of this document points to their definition.

Table 2 illustrates the table. If no components are provided, the DataType, TypeDefinition and ModellingRule columns may be omitted and only a Comment column is introduced to point to the *Node* definition.

Attribute	Value							
Attribute name	Attribute value. If it is an optional Attribute that is not set "" will be used.							
References	NodeClass	NodeClass BrowseName DataType TypeDefinition ModellingRule						
ReferenceType name	NodeClass of the TargetNode.	BrowseName of the target Node. If the Reference is to be instantiated by the server, then the value of the target Node's BrowseName is "".	DataType of the referenced Node, only applicable for Variables.	TypeDefinition of the referenced Node, only applicable for Variables and Objects.	Referenced ModellingRule of the referenced Object.			

Table 2 - Type Definition Table

Components of *Nodes* can be complex, that is containing components by themselves. The *TypeDefinition*, *NodeClass*, *DataType* and *ModellingRule* can be derived from the type definitions, and the symbolic name can be created as defined in 4.1. Therefore those containing components are not explicitly specified; they are implicitly specified by the type definitions.

#### 4 Nodelds and BrowseNames

#### 4.1 Nodelds

The *Nodelds* of all *Nodes* described in this standard are only symbolic names. Part 6 defines the actual *Nodelds*.

The symbolic name of each *Node* defined in this standard is its *BrowseName*, or, when it is part of another Node, the BrowseName of the other Node, a ".", and the BrowseName of itself. In this case "part of" means that the whole has a HasProperty or HasComponent Reference to its part. Since all Nodes not being part of another Node have a unique name in this standard, the symbolic name is unique. For example, the ServerType defined in 6.3.1 has the symbolic name "ServerType". One of its InstanceDeclarations identified would be "ServerType.ServerCapabilities". Since this Object is complex, another InstanceDeclaration of the ServerType is "ServerType.ServerCapabilities.MinSupportedSampleRate". The Server Object defined in 8.3.2 is based on the ServerType and has the symbolic name "Server". Therefore, the instance based on the InstanceDeclaration described above has the symbolic name "Server.ServerCapabilities.MinSupportedSampleRate".

The NamespaceIndex for all *Nodelds* defined in this standard is 0. The namespace for this NamespaceIndex is specified in Part 3.

Note that this standard not only defines concrete *Nodes*, but also requires that some Nodes have to be generated, for example one for each Session running on the *Server*. The *Nodelds* of those *Nodes* are server-specific, including the Namespace. However the NamespaceIndex of those *Nodes* cannot be the NamespaceIndex 0, because they are not defined by the OPC Foundation but generated by the *Server*.

#### 4.2 BrowseNames

The text part of the *BrowseNames* for all *Nodes* defined in this standard is specified in the tables defining the *Nodes*. The NamespaceIndex for all *BrowseNames* defined in this standard is 0.

## 5 Common Attributes

#### 5.1 General

For all *Nodes* specified in this standard, the *Attributes* named in Table 3 shall be set as specified in Table 3.

Table 3 - Common Node Attributes

Attribute	Value		
DisplayName	The <i>DisplayName</i> is a <i>LocalizedText</i> . Each server shall provide the <i>DisplayName</i> identical to the <i>BrowseName</i> of the <i>Node</i> for the LocaleId "en". Whether the server provides translated names for other LocaleIds is vendor specific.		
Description	Optionally a vendor specific description is provided.		
NodeClass	Shall reflect the NodeClass of the Node.		
Nodeld	The Nodeld is described by BrowseNames as defined in 4.1 and defined in Part 6.		
WriteMask	Optionally the <i>WriteMask Attribute</i> can be provided. If the <i>WriteMask Attribute</i> is provided, it shall set all <i>Attributes</i> to not writable that are not said to be vendor-specific. For example, the <i>Description Attribute</i> may be set to writable since a <i>Server</i> may provide a server-specific description for the <i>Node</i> . The <i>NodeId</i> shall not be writable, because it is defined for each <i>Node</i> in this standard.		
UserWriteMask	Optionally the <i>UserWriteMask Attribute</i> can be provided. The same rules as for the <i>WriteMask Attribute</i> apply.		

## 5.2 Objects

For all *Objects* specified in this standard, the *Attributes* named in Table 4 shall be set as specified in Table 4.

Table 4 - Common Object Attributes

Attribute	Value
EventNotifier	Whether the <i>Node</i> can be used to subscribe to <i>Events</i> or not is vendor specific.

#### 5.3 Variables

For all *Variables* specified in this standard, the *Attributes* named in Table 5 shall be set as specified in Table 5.

Table 5 - Common Variable Attributes

Attribute	Value
MinimumSamplingInterval	Optionally, a vendor-specific minimum sampling interval is provided.
AccessLevel	The access level for <i>Variables</i> used for type definitions is vendor-specific, for all other <i>Variables</i> defined in this standard, the access level shall allow a current read; other settings are vendor specific.
UserAccessLevel	The value for the <i>UserAccessLevel Attribute</i> is vendor-specific. It is assumed that all <i>Variables</i> can be accessed by at least one user.
Value	For Variables used as InstanceDeclarations, the value is vendor-specific; otherwise it shall represent the value described in the text.
ArrayDimensions	If the <i>ValueRank</i> does not identify an array of a specific dimension (i.e. <i>ValueRank</i> <= 0) the <i>ArrayDimensions</i> can either be set to null or the <i>Attribute</i> is missing. This behaviour is vendor-specific.  If the <i>ValueRank</i> specifies an array of a specific dimension (i.e. <i>ValueRank</i> > 0) then the <i>ArrayDimensions Attribute</i> shall be specified in the table defining the <i>Variable</i> .

## 5.4 VariableTypes

For all *VariableTypes* specified in this standard, the *Attributes* named in Table 6 shall be set as specified in Table 6.

Table 6 - Common VariableType Attributes

Attributes	Value
Value	Optionally a vendor-specific default value can be provided.
ArrayDimensions	If the ValueRank does not identify an array of a specific dimension (i.e. ValueRank <= 0) the ArrayDimensions can either be set to null or the Attribute is missing. This behaviour is vendor-specific.  If the ValueRank specifies an array of a specific dimension (i.e. ValueRank > 0) then the
	ArrayDimensions Attribute shall be specified in the table defining the VariableType.

## 6 Standard ObjectTypes

#### 6.1 General

Typically, the components of an *ObjectType* are fixed and can be extended by subtyping. However, since each *Object* of an *ObjectType* can be extended with additional components, this standard allows extending the standard *ObjectTypes* defined in this document with additional components. Thereby, it is possible to express the additional information in the type definition that would already be contained in each *Object*. Some *ObjectTypes* already provide entry points for server-specific extensions. However, it is not allowed to restrict the components of the standard *ObjectTypes* defined in this standard. An example of extending the *ObjectTypes* is putting the standard *Property NodeVersion* defined in Part 3 into the *BaseObjectType*, stating that each *Object* of the *Server* will provide a *NodeVersion*.

#### 6.2 BaseObjectType

The BaseObjectType is used as type definition whenever there is an Object having no more concrete type definitions available. Servers should avoid using this ObjectType and use a more specific type, if possible. This ObjectType is the base ObjectType and all other ObjectTypes shall either directly or indirectly inherit from it. However, it might not be possible for Servers to provide all HasSubtype References from this ObjectType to its subtypes, and therefore it is not required to provide this information.

There are no *References* except for *HasSubtype References* specified for this *ObjectType*. It is formally defined in Table 7.

Attribute Value BaseObjectType BrowseName **IsAbstract** False References NodeClass **BrowseName** DataType **TypeDefinition** Modellina Rule HasSubtype ObjectType ServerType Defined in 6.3.1 Defined in 6.3.2 HasSubtype ServerCapabilitiesType ObjectType ServerDiagnosticsType Defined in 6.3.3 HasSubtype ObjectType HasSubtype ObjectType SessionsDiagnosticsSummaryType Defined in 6.3.4 ObjectType HasSubtype SessionDiagnosticsObjectType Defined in 6.3.5 HasSubtype ObjectType VendorServerInfoType Defined in 6.3.6 ServerRedundancyType Defined in 6.3.7 HasSubtype ObjectType HasSubtype ObjectType BaseEventType Defined in 6.4.2 HasSubtype ObjectType ModellingRuleType Defined in 6.5 Defined in 6.6 HasSubtype ObjectType FolderType HasSubtype ObjectType DataTypeEncodingType Defined in 6.7 Defined in 6.8 HasSubtype ObjectType DataTypeSystemType

Table 7 - BaseObjectType Definition

## 6.3 ObjectTypes for the Server Object

## 6.3.1 ServerType

This *ObjectType* defines the capabilities supported by the OPC UA *Server*. It is formally defined in Table 8.

Table 8 - ServerType Definition

Attribute	Value				
BrowseName	ServerType				
IsAbstract	False				
References	NodeCla	ss BrowseName	DataType / TypeDefinition	Modelling Rule	
Subtype of the I	BaseObjectTyp	e defined in 6.2		·	
HasProperty	Variable	ServerArray	String[] PropertyType	Mandatory	
HasProperty	Variable	NamespaceArray	String[] PropertyType	Mandatory	
HasComponent	Variable	ServerStatus <sup>1</sup>	ServerStatusDataType ServerStatusType	Mandatory	
HasProperty	Variable	ServiceLevel	Byte PropertyType	Mandatory	
HasProperty	Variable	Auditing	Boolean PropertyType	Mandatory	
HasProperty	Variable	EstimatedReturnTime	DateTime PropertyType	Optional	
HasComponent	Object	ServerCapabilities <sup>1</sup>	- ServerCapabilitiesType	Mandatory	
HasComponent	Object	ServerDiagnostics <sup>1</sup>	- ServerDiagnosticsType	Mandatory	
HasComponent	Object	VendorServerInfo	- VendorServerInfoType	Mandatory	
HasComponent	Object	ServerRedundancy <sup>1</sup>	- ServerRedundancyType	Mandatory	
HasComponent	Object	Namespaces	- NamespacesType	Optional	
HasComponent	Method	GetMonitoredItems	Defined in 9.1	Optional	
HasComponent	Method	ResendData	Defined in 9.2	Optional	
HasComponent	Method	SetSubscriptionDurable	Defined in 9.3	Optional	
HasComponent	Method	RequestServerStateChange	Defined in 9.4	Optional	

NOTE Containing *Objects* and *Variables* of these *Objects* and *Variables* are defined by their *BrowseName* defined in the corresponding *TypeDefinitionNode*. The *NodeId* is defined by the composed symbolic name described in 4.1.

ServerArray defines an array of Server URIs. This Variable is also referred to as the server table. Each URI in this array represents a globally-unique logical name for a Server within the scope of the network in which it is installed. Each OPC UA Server instance has a single URI that is used in the server table of other OPC UA Servers. Index 0 is reserved for the URI of the local Server. Values above 0 are used to identify remote Servers and are specific to a Server. Part 4 describes discovery mechanism that can be used to resolve URIs into URLs. The Server URI is case sensitive.

The URI of the *ServerArray* with Index 0 shall be identical to the URI of the *NamespaceArray* with Index 1, since both represent the local *Server*.

The indexes into the *server table* are referred to as *server indexes* or *server names*. They are used in OPC UA *Services* to identify *TargetNodes* of *References* that reside in remote *Servers*. Clients may read the entire table or they may read individual entries in the table. The *Server* shall not modify or delete entries of this table while any client has an open session to the *Server*, because clients may cache the *server table*. A *Server* may add entries to the *server table* even if clients are connected to the *Server*.

Namespace Array defines an array of namespace URIs. This Variable is also referred as namespace table. The indexes into the namespace table are referred to as NamespaceIndexes. NamespaceIndexes are used in NodeIds in OPC UA Services, rather than the longer namespace URI. Index 0 is reserved for the OPC UA namespace, and index 1 is reserved for the local Server. Clients may read the entire namespace table or they may read individual entries in the namespace table. The Server shall not modify or delete entries of the namespace table while any client has an open session to the Server, because clients may cache the namespace table. A Server may add entries to the namespace table even if clients are connected to the Server. It is recommended that Servers not change the indexes of the namespace table but only add entries, because the client may cache NodeIds using the indexes.

Nevertheless, it might not always be possible for *Servers* to avoid changing indexes in the *namespace table*. Clients that cache *NamespaceIndexes* of *NodeIds* should always check when starting a session to verify that the cached *NamespaceIndexes* have not changed.

ServerStatus contains elements that describe the status of the Server. See 12.10 for a description of its elements.

ServiceLevel describes the ability of the Server to provide its data to the client. The value range is from 0 to 255, where 0 indicates the worst and 255 indicates the best. Part 4 defines required sub-ranges for different scenarios. The intent is to provide the clients an indication of availability among redundant Servers.

Auditing is a Boolean specifying if the Server is currently generating audit events. It is set to TRUE if the Server generates audit events, otherwise to false. The Profiles defined in Part 7 specify what kind of audit events are generated by the Server.

EstimatedReturnTime indicates the time at which the Server is expected to have a ServerStatus. State of RUNNING\_0. A Client that observes a shutdown or a ServiceLevel of 0 should either wait until after this time to attempt to reconnect to this Server or enter into slow retry logic. For example, most Clients will attempt to reconnect after a failure immediately and then progressively increase the delay between attempts until some maximum delay. This time can be used to trigger the Client to start its reconnect logic with some delay.

ServerCapabilities defines the capabilities supported by the OPC UA Server. See 6.3.2 for its description.

ServerDiagnostics defines diagnostic information about the OPC UA Server. See 6.3.3 for its description.

*VendorServerInfo* represents the browse entry point for vendor-defined *Server* information. This *Object* is required to be present even if there are no vendor-defined *Objects* beneath it. See 6.3.6 for its description.

ServerRedundancy describes the redundancy capabilities provided by the Server. This Object is required even if the Server does not provide any redundancy support. If the Server supports redundancy, then a subtype of ServerRedundancyType is used to describe its capabilities. Otherwise, it provides an Object of type ServerRedundancyType with the Property RedundancySupport set to none. See 6.3.7 for the description of ServerRedundancyType.

Namespaces provides a list of NamespaceMetadataType Objects with additional information about the namespaces used in the Server. See 6.3.14 for the description of NamespaceMetadataType.

The *GetMonitoredItems Method* is used to identify the *MonitoredItems* of a *Subscription*. It is defined in 9.1; the intended usage is defined in Part 4.

The SetSubscriptionDurable Method is used to set a Subscription into a mode where data and event queues are persisted and delivered even if an OPC UA Client was disconnected for a longer time or the OPC UA Server was restarted. It is defined in 9.2; the intended usage is defined in Part 4.

The SetSubscriptionDurable Method is used to set a Subscription into a mode where MonitoredItem data and event queues are stored and delivered even if an OPC UA Client was disconnected for a longer time or the OPC UA Server was restarted. It is defined in 9.3; the intended usage is defined in Part 4.

The RequestServerStateChange Method allows a Client to request a state change in the Server. It is defined in 9.4; the intended usage is defined in Part 4.

## 6.3.2 ServerCapabilitiesType

This *ObjectType* defines the capabilities supported by the OPC UA *Server*. It is formally defined in Table 9.

Table 9 - ServerCapabilitiesType Definition

Attribute	Value					
BrowseName						
IsAbstract						
References	NodeClass	BrowseName	DataType / TypeDefinition	ModellingRule		
Subtype of the Ba	seObjectType	defined in 6.2				
HasProperty	Variable	ServerProfileArray	String[] PropertyType	Mandatory		
HasProperty	Variable	LocaleIdArray	LocaleId[] PropertyType	Mandatory		
HasProperty	Variable	MinSupportedSampleRate	Duration PropertyType	Mandatory		
HasProperty	Variable	MaxBrowseContinuationPoints	UInt16 PropertyType	Mandatory		
HasProperty	Variable	MaxQueryContinuationPoints	UInt16 PropertyType	Mandatory		
HasProperty	Variable	MaxHistoryContinuationPoints	UInt16 PropertyType	Mandatory		
HasProperty	Variable	SoftwareCertificates	SignedSoftwareCertificate[] PropertyType	Mandatory		
HasProperty	Variable	MaxArrayLength	UInt32 PropertyType	Optional		
HasProperty	Variable	MaxStringLength	UInt32 PropertyType	Optional		
HasProperty	Variable	MaxByteStringLength	UInt32 PropertyType	Optional		
HasComponent	Object	OperationLimits	 OperationLimitsType	Optional		
HasComponent	Object	ModellingRules	 FolderType	Mandatory		
HasComponent	Object	AggregateFunctions	 FolderType	Mandatory		
HasComponent	Variable	Vendor specific <i>Variables</i> of a subtype of the ServerVendorCapabilityType defined in 7.5		-		

ServerProfileArray lists the Profiles that the Server supports. See Part 7 for the definitions of Server Profiles. This list should be limited to the Profiles the Server supports in its current configuration.

LocaleIdArray is an array of LocaleIds that are known to be supported by the Server. The Server might not be aware of all LocaleIds that it supports because it may provide access to underlying servers, systems or devices that do not report the LocaleIds that they support.

MinSupportedSampleRate defines the minimum supported sample rate, including 0, which is supported by the Server.

MaxBrowseContinuationPoints is an integer specifying the maximum number of parallel continuation points of the Browse Service that the Server can support per session. The value specifies the maximum the Server can support under normal circumstances, so there is no guarantee the Server can always support the maximum. The client should not open more Browse calls with open continuation points than exposed in this Variable. The value 0 indicates that the Server does not restrict the number of parallel continuation points the client should use.

MaxQueryContinuationPoints is an integer specifying the maximum number of parallel continuation points of the QueryFirst Services that the Server can support per session. The value specifies the maximum the Server can support under normal circumstances, so there is no guarantee the Server can always support the maximum. The client should not open more QueryFirst calls with open continuation points than exposed in this Variable. The value 0 indicates that the Server does not restrict the number of parallel continuation points the client should use.

MaxHistoryContinuationPoints is an integer specifying the maximum number of parallel continuation points of the HistoryRead Services that the Server can support per session. The value specifies the maximum the Server can support under normal circumstances, so there is no guarantee the Server can always support the maximum. The client should not open more HistoryRead calls with open continuation points than exposed in this Variable. The value 0 indicates that the Server does not restrict the number of parallel continuation points the client should use.

SoftwareCertificates is an array of SignedSoftwareCertificates containing all SoftwareCertificates supported by the Server. A SoftwareCertificate identifies capabilities of the Server. It contains the list of Profiles supported by the Server. Profiles are described in Part 7.

The MaxArrayLength Property indicates the maximum length of a one or multidimensional array supported by Variables of the Server. In a multidimensional array it indicates the overall length. For example, a three-dimensional array of 2x3x10 has the array length of 60. The Server might further restrict the length for individual Variables without notice to the client. Servers may use the Property MaxArrayLength defined in Part 3 on individual DataVariables to specify the size on individual values. The individual Property may have a larger or smaller value than MaxArrayLength.

The MaxStringLength Property indicates the maximum number of characters in Strings supported by Variables of the Server. The Server might further restrict the String length for individual Variables without notice to the client. Servers may use the Property MaxStringLength defined in Part 3 on individual DataVariables to specify the length on individual values. The individual Property may have larger or smaller values than MaxStringLength.

The MaxByteStringLength Property indicates the maximum number of Bytes in a ByteString supported by Variables or FileType Objects of the Server. The Server might further restrict the ByteString length for individual Variables or FileType Objects without notice to the Client. Servers may use the Property MaxByteStringLength on individual DataVariables to specify the length on individual values or on FileType Objects to specify the maximum size of read and write buffers. The individual Property may have larger or smaller values than MaxByteStringLength.

OperationLimits is an entry point to access information on operation limits of the Server, for example the maximum length of an array in a read Service call.

ModellingRules is an entry point to browse to all ModellingRules supported by the Server. All ModellingRules supported by the Server should be able to be browsed starting from this Object.

AggregateFunctions is an entry point to browse to all AggregateFunctions supported by the Server. All AggregateFunctions supported by the Server should be able to be browsed starting from this Object. AggregateFunctions are Objects of AggregateFunctionType.

The remaining components of the *ServerCapabilitiesType* define the server-specific capabilities of the *Server*. Each is defined using a *HasComponent Reference* whose target is an instance of a vendor-defined subtype of the abstract *ServerVendorCapabilityType* (see 7.5). Each subtype of this type defines a specific *Server* capability. The *Nodelds* for these *Variables* and their *VariableTypes* are server-defined.

#### 6.3.3 ServerDiagnosticsType

This *ObjectType* defines diagnostic information about the OPC UA *Server*. This *ObjectType* is formally defined in Table 10.

Attribute	Value				
BrowseName	ServerDiagnosticsType				
IsAbstract	False				
References	Node Class	BrowseName	DataType / TypeDefinition	Modelling Rule	
Subtype of the Ba	aseObjectTyp	e defined in 6.2			
HasComponent	Variable	ServerDiagnosticsSummary	ServerDiagnosticsSummaryDataType ServerDiagnosticsSummaryType	Mandatory	
HasComponent	Variable	SamplingIntervalDiagnosticsArray	SamplingIntervalDiagnosticsDataType[] SamplingIntervalDiagnosticsArrayType	Optional	
HasComponent	Variable	SubscriptionDiagnosticsArray	SubscriptionDiagnosticsDataType[] SubscriptionDiagnosticsArrayType	Mandatory	
HasComponent	Object	SessionsDiagnosticsSummary	 SessionsDiagnosticsSummaryType	Mandatory	
HasProperty	Variable	EnabledFlag	Boolean PropertyType	Mandatory	

Table 10 - ServerDiagnosticsType Definition

ServerDiagnosticsSummary contains diagnostic summary information for the Server, as defined in 12.9.

SamplingIntervalDiagnosticsArray is an array of diagnostic information per sampling rate as defined in 12.8. There is one entry for each sampling rate currently used by the Server. Its TypeDefinitionNode is the VariableType SamplingIntervalDiagnosticsArrayType, providing a Variable for each entry in the array, as defined in 7.11.

The sampling interval diagnostics are only collected by *Servers* which use a fixed set of sampling intervals. In these cases, length of the array and the set of contained *Variables* will be determined by the *Server* configuration and the *Nodeld* assigned to a given sampling interval diagnostics variable shall not change as long as the *Server* configuration does not change. A *Server* may not expose the SamplingIntervalDiagnosticsArray if it does not use fixed sampling rates.

SubscriptionDiagnosticsArray is an array of Subscription diagnostic information per subscription, as defined in 12.15. There is one entry for each Notification channel actually established in the Server. Its TypeDefinitionNode is the VariableType SubscriptionDiagnosticsArrayType, providing a Variable for each entry in the array as defined in 7.13. Those Variables are also used as Variables referenced by other Variables.

SessionsDiagnosticsSummary contains diagnostic information per session, as defined in 6.3.4.

EnabledFlag identifies whether or not diagnostic information is collected by the Server. It can also be used by a client to enable or disable the collection of diagnostic information of the Server. The following settings of the Boolean value apply: TRUE indicates that the Server collects diagnostic information, and setting the value to TRUE leads to resetting and enabling the collection. FALSE indicates that no statistic information is collected, and setting the value to FALSE disables the collection without resetting the statistic values.

Static diagnostic *Nodes* that always appear in the *AddressSpace* will return Bad\_NotReadable when the *Value Attribute* of such a *Node* is read or subscribed to and diagnostics are turned off. Dynamic diagnostic *Nodes* (such as the *Session Nodes*) will not appear in the *AddressSpace* when diagnostics are turned off.

#### 6.3.4 SessionsDiagnosticsSummaryType

This *ObjectType* defines diagnostic information about the sessions of the OPC UA *Server*. This *ObjectType* is formally defined in Table 11.

Table 11 - SessionsDiagnosticsSummaryType Definition

Attribute		Value	Value				
BrowseName Se		Sessio	onsDiagnosticsSummaryType				
IsAbstract		False					
References	Node	Class	BrowseName	DataType / TypeDefinition	Modelling Rule		
Subtype of the Ba	aseObje	ctType c	lefined in 6.2				
HasComponent	Variab	ole	SessionDiagnosticsArray	SessionDiagnosticsDataType[] SessionDiagnosticsArrayType	Mandatory		
HasComponent	Variab	le	SessionSecurityDiagnosticsArray	SessionSecurityDiagnosticsDataType[] SessionSecurityDiagnosticsArrayType	Mandatory		
HasComponent Object		t	<clientname></clientname>	 SessionDiagnosticsObjectType	Optional Placeholder		
NOTE This row have those Object		nts no Λ	lode in the AddressSpace. It is a plac	eholder pointing out that instances of the C	ObjectType will		

SessionDiagnosticsArray provides an array with an entry for each session in the Server having general diagnostic information about a session.

SessionSecurityDiagnosticsArray provides an array with an entry for each active session in the Server having security-related diagnostic information about a session. Since this information is security-related, it should not be made accessible to all users, but only to authorised users.

For each session of the *Server*, this *Object* also provides an *Object* representing the session, indicated by *<ClientName>*. The BrowseName could be derived from the *sessionName* defined in the *CreateSession Service* (Part 4) or some other server-specific mechanisms. It is of the *ObjectType* SessionDiagnosticsObjectType, as defined in 6.3.5.

## 6.3.5 SessionDiagnosticsObjectType

This *ObjectType* defines diagnostic information about a session of the OPC UA *Server*. This *ObjectType* is formally defined in Table 12.

Table 12 - SessionDiagnosticsObjectType Definition

Attribute	Value						
BrowseName	SessionDiagnos	SessionDiagnosticsObjectType					
IsAbstract	False						
References	NodeClass	NodeClass BrowseName DataType / TypeDefinition Modellin Rule					
Subtype of the Ba	seObjectType de	fined in 6.2					
HasComponent	Variable	SessionDiagnostics	SessionDiagnosticsDataType SessionDiagnosticsVariableType	Mandatory			
HasComponent	Variable	SessionSecurityDiagnostics	SessionSecurityDiagnosticsDataType SessionSecurityDiagnosticsType	Mandatory			
HasComponent	Variable	SubscriptionDiagnosticsArray	SubscriptionDiagnosticsDataType[] SubscriptionDiagnosticsArrayType	Mandatory			

SessionDiagnostics contains general diagnostic information about the session; the SessionSecurityDiagnostics Variable contains security-related diagnostic information. Because the information of the second Variable is security-related, it should not be made accessible to all users, but only to authorised users.

SubscriptionDiagnosticsArray is an array of Subscription diagnostic information per opened subscription, as defined in 12.15. Its *TypeDefinitionNode* is the *VariableType* SubscriptionDiagnosticsArrayType providing a *Variable* for each entry in the array, as defined in 7.13.

## 6.3.6 VendorServerInfoType

This *ObjectType* defines a placeholder *Object* for vendor-specific information about the OPC UA *Server*. This *ObjectType* defines an empty *ObjectType* that has no components. It shall be subtyped by vendors to define their vendor-specific information. This *ObjectType* is formally defined in Table 13.

Table 13 - VendorServerInfoType Definition

Attribute	Value							
BrowseName	VendorServer	VendorServerInfoType						
IsAbstract	False	False						
References	NodeClass	NodeClass BrowseName DataType TypeDefinition ModellingRule						
Subtype of the BaseObjectType defined in 6.2								

## 6.3.7 ServerRedundancyType

This *ObjectType* defines the redundancy capabilities supported by the OPC UA *Server*. It is formally defined in Table 14.

Table 14 - ServerRedundancyType Definition

Attribute	Value				
BrowseName	ServerRedund	lancyType			
IsAbstract	False				
References	NodeClass	BrowseName	DataType	Type Definition	Modelling Rule
Subtype of the B	aseObjectType c	lefined in 6.2			
HasProperty	Variable	RedundancySupport	RedundancySupport	PropertyType	Mandatory
HasSubtype	ObjectType	TransparentRedundancyType	Defined in 6.3.8		
HasSubtype	ObjectType	NonTransparentRedundancyType	Defined in 6.3.9		

RedundancySupport indicates what redundancy is supported by the Server. Its values are defined in 12.5. It shall be set to NONE\_0 for all instances of the ServerRedundancyType using the ObjectType directly (no subtype).

## 6.3.8 TransparentRedundancyType

This *ObjectType* is a subtype of *ServerRedundancyType* and is used to identify the capabilities of the OPC UA *Server* for server-controlled redundancy with a transparent switchover for the client. It is formally defined in Table 15.

Table 15 - TransparentRedundancyType Definition

Attribute	Value				
BrowseName	Transp	parentRedundancyType			
IsAbstract	False				
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the	ServerRedu	undancyType defined in 6.3.7, i.e	e. inheriting the InstanceDeclara	tions of that Node.	
HasProperty	Variable	CurrentServerId	String	PropertyType	Mandatory
HasProperty	Variable	RedundantServerArray	RedundantServerDataType[]	PropertyType	Mandatory

RedundancySupport is inherited from the ServerRedundancyType. It shall be set to TRANSPARENT\_4 for all instances of the TransparentRedundancyType.

Although, in a transparent switchover scenario, all redundant *Servers* serve under the same URI to the *Client*, it may be required to track the exact data source on the *Client*. Therefore, *CurrentServerId* contains an identifier of the currently-used *Server* in the *Redundant Set*. This *Server* is valid only inside a *Session*; if a *Client* opens several *Sessions*, different *Servers* of the redundant set of *Servers* may serve it in different *Sessions*. The value of the *CurrentServerId* may change due to *Failover* or load balancing, so a *Client* that needs to track its data source shall subscribe to this *Variable*.

As diagnostic information, the *RedundantServerArray* contains an array of available *Servers* in the *Redundant Set*; including their service levels (see 12.7). This array may change during a *Session*.

#### 6.3.9 NonTransparentRedundancyType

This *ObjectType* is a subtype of *ServerRedundancyType* and is used to identify the capabilities of the OPC UA *Server* for non-transparent redundancy. It is formally defined in Table 16.

Variable

ObjectType

HasSubtype

Attribute	Value				
BrowseName	NonTranspare	ntRedundancyType			
IsAbstract	False				
References	NodeClass	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the ServerRedundancyType defined in 6.3.7, which means it inherits the InstanceDeclarations of that Node.					

String[]

Defined in 6.3.10

PropertyType

Table 16 - NonTransparentRedundancyType Definition

ServerUriArray is an array with the URI of all redundant Servers of the OPC UA Server. See Part 4 for the definition of redundancy in this standard. In a non-transparent redundancy environment, the Client is responsible to subscribe to the redundant Servers. Therefore the Client might open a session to one or more redundant Servers of this array. The SeverUriArray shall contain the local Server.

NonTransparentNetworkRedundancyType

RedundancySupport is inherited from the ServerRedundancyType. It shall be set to COLD\_1, WARM\_2, HOT\_3 or HOT\_AND\_MIRRORED\_5 for all instances of the NonTransparentRedundancyType. It defines the redundancy support provided by the Server. Its intended use is defined in Part 4.

## 6.3.10 NonTransparentNetworkRedundancyType

ServerUriArray

This *ObjectType* is a subtype of *NonTransparentRedundancyType* and is used to identify the capabilities of the OPC UA *Server* for non-transparent network redundancy. It is formally defined in Table 17.

Table 17 - NonTransparentNetworkRedundancyType Definition

Attribute	Value					
BrowseName	NonTranspa	NonTransparentNetworkRedundancyType				
IsAbstract	False					
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule	
Subtype of the NonTransparentRedundancyType defined in 6.3.9, which means it inherits the InstanceDeclarations of that Node.						
HasProperty	Variable	ServerNetworkGroups	NetworkGroupDataType[]	PropertyType	Mandatory	

Clients switching between network paths to the same Server behave the same as HotAndMirrored redundancy. Server and network redundancy can be combined. In the combined approach it is important for the Client to know which ServerUris belong to the same Server representing different network paths and which ServerUris represent different Servers. Therefore, a Server implementing non-transparent network redundancy shall use the NonTransparentNetworkRedundancyType to identify its redundancy support.

RedundancySupport is inherited from the ServerRedundancyType. It shall be set to COLD\_1, WARM\_2, HOT\_3 or HOT\_AND\_MIRRORED\_5 for all instances of the NonTransparentNetworkRedundancyType. If no Server redundancy is supported (the ServerUriArray only contains one entry), the RedundancySupport shall be set to HOT AND MIRRORED 5.

The ServerNetworkGroups contains an array of NetworkGroupDataType. The URIs of the Servers in that array (in the serverUri of the structure) shall be exactly the same as the ones provided in the ServerUriArray. However, the order might be different. Thus the array represents a list of HotAndMirrored redundant Servers. If a Server only supports network redundancy, it has only one entry in the ServerNetworkGroups. The networkPaths in the structure represents the redundant network paths for each of the Servers. The networkPaths describes the different paths (one entry for each path) ordered by priority. Each network path contains an endpointUrlList having an array of Strings each containing a URL of an Endpoint. This allows using different protocol options for the same network path.

The *Endpoints* provided shall match with the *Endpints* provided by the *GetEndpoints Service* of the corresponding *Server*.

HasProperty

## 6.3.11 OperationLimitsType

Variable

This *ObjectType* is a subtype of *FolderType* and is used to identify the operation limits of the OPC UA *Server*. It is formally defined in Table 18.

Attribute Value OperationLimitsType BrowseName IsAbstract False References NodeClass BrowseName DataType TypeDefinition ModellingRule Subtype of the FolderType defined in 6.6, which means it inherits the InstanceDeclarations of that Node. HasProperty Variable MaxNodesPerRead Uint32 PropertyType Optional

MaxNodesPerHistoryReadData

MaxNodesPerWrite

MaxNodesPerHistoryReadEvents

MaxNodesPerHistoryUpdateData

MaxNodesPerMethodCall

MaxNodesPerRegisterNodes

MaxMonitoredItemsPerCall

MaxNodesPerBrowse

ToNodelds

MaxNodesPerHistoryUpdateEvents

MaxNodesPerTranslateBrowsePaths

MaxNodesPerNodeManagement

Table 18 - OperationLimitsType Definition

Uint32

PropertyType

PropertyType

PropertyType

Property Type

PropertyType

PropertyType

PropertyType

PropertyType

PropertyType

PropertyType

PropertyType

Optional

The MaxNodesPerRead Property indicates the maximum size of the nodesToRead array when a Client calls the Read Service.

The MaxNodesPerHistoryReadData Property indicates the maximum size of the nodesToRead array when a Client calls the HistoryRead Service using the historyReadDetails RAW, PROCESSED, MODIFIED or ATTIME.

The MaxNodesPerHistoryReadEvents Property indicates the maximum size of the nodesToRead array when a Client calls the HistoryRead Service using the historyReadDetails EVENTS.

The *MaxNodesPerWrite Property* indicates the maximum size of the nodesToWrite array when a *Client* calls the Write *Service*.

The MaxNodesPerHistoryUpdateData Property indicates the maximum size of the historyUpdateDetails array supported by the Server when a Client calls the HistoryUpdate Service.

The MaxNodesPerHistoryUpdateEvents Property indicates the maximum size of the historyUpdateDetails array when a Client calls the HistoryUpdate Service.

The MaxNodesPerMethodCall Property indicates the maximum size of the methodsToCall array when a Client calls the Call Service.

The MaxNodesPerBrowse Property indicates the maximum size of the nodesToBrowse array when calling the Browse Service or the continuationPoints array when a Client calls the BrowseNext Service.

The MaxNodesPerRegisterNodes Property indicates the maximum size of the nodesToRegister array when a Client calls the RegisterNodes Service and the maximum size of the nodesToUnregister when calling the UnregisterNodes Service.

The MaxNodesPerTranslateBrowsePathsToNodelds Property indicates the maximum size of the browsePaths array when a Client calls the TranslateBrowsePathsToNodelds Service.

The MaxNodesPerNodeManagement Property indicates the maximum size of the nodesToAdd array when a Client calls the AddNodes Service, the maximum size of the referencesToAdd array when a Client calls the AddReferences Service, the maximum size of the nodesToDelete

array when a *Client* calls the DeleteNodes *Service*, and the maximum size of the referencesToDelete array when a *Client* calls the DeleteReferences *Service*.

The MaxMonitoredItemsPerCall Property indicates

- the maximum size of the itemsToCreate array when a Client calls the CreateMonitoredItems Service.
- the maximum size of the itemsToModify array when a *Client* calls the ModifyMonitoredItems *Service*,
- the maximum size of the monitoredItemIds array when a *Client* calls the SetMonitoringMode *Service* or the DeleteMonitoredItems *Service*,
- the maximum size of the linksToAdd and the linksToRemove arrays when a *Client* calls the SetTriggering *Service*.

## 6.3.12 AddressSpaceFileType

This *ObjectType* defines the file for a namespace provided by the OPC UA *Server*. It is formally defined in Table 19. It represents an XML address space file using the XML schema defined in Part 6.

Table 19 - AddressSpaceFileType Definition

Attribute	Value						
BrowseName	AddressSpac	AddressSpaceFileType					
IsAbstract	False	False					
References	NodeClass	BrowseName	DataType	TypeDefinition	Modelling Rule		
Subtype of the FileType defined in C.2							
HasComponent	Method	ExportNamespace	The method has	no parameters.	Optional		

The ExportNamespace Method provides a way to export the namespace from the Server AddressSpace to the XML file represented by the AddressSpaceFileType. Value Attributes are only exported if they represent static configuration information. The client is expected to call the ExportNamespace Method first to update the XML file and then access the file with the Methods defined in the FileType.

*Servers* might provide some vendor-specific mechanisms importing parts of an address space as subtype of this *ObjectType*, for example by defining appropriate *Methods*.

## 6.3.13 NamespaceMetadataType

This *ObjectType* defines the metadata for a namespace provided by the *Server*. It is formally defined in Table 20.

Instances of this *Object* allow *Servers* to provide more information like version information in addition to the namespace URI. Important information for aggregating *Servers* is provided by the *StaticNodeldTypes*, *StaticNumericNodeldRange* and *StaticStringNodeldPattern Properties*.

Attribute	Value					
BrowseName	NamespaceMetadataType					
IsAbstract	False					
References	NodeClass	BrowseName	DataType	TypeDefinition	Modelling Rule	
Subtype of the Ba	seObjectType det	fined in 6.2				
HasProperty	Variable	NamespaceUri	String	PropertyType	Mandatory	
HasProperty	Variable	NamespaceVersion	String	PropertyType	Mandatory	
HasProperty	Variable	NamespacePublicationDate	DateTime	PropertyType	Mandatory	
HasProperty	Variable	IsNamespaceSubset	Boolean	PropertyType	Mandatory	
HasProperty	Variable	StaticNodeIdTypes	IdType[]	PropertyType	Mandatory	
HasProperty	Variable	StaticNumericNodeldRange	NumericRange[]	PropertyType	Mandatory	
HasProperty	Variable	StaticStringNodeldPattern	String	PropertyType	Mandatory	
HasComponent	Object	NamespaceFile	-	AddressSpaceFileType	Optional	

Table 20 - NamespaceMetadataType Definition

The *BrowseName* of instances of this type shall be derived from the represented namespace. This can, for example, be done by using the index of the namespace in the *NamespaceArray* as *namespaceIndex* of the *QualifiedName* and the namespace URI as *name* of the *QualifiedName*.

The NamespaceUri Property contains the namespace represented by an instance of the MetaDataType.

The *NamespaceVersion Property* provides version information for the namespace. It is intended for display purposes and shall not be used to programmatically identify the latest version.

The NamespacePublicationDate Property provides the publication date of the namespace version. This *Property* value can be used by *Clients* to determine the latest version if different versions are provided by different *Servers*.

The IsNamespaceSubset Property defines whether all Nodes of the namespace are accessible in the Server or only a subset. It is set to FALSE if the full namespace is provided and TRUE if not.

Static *Nodes* are identical for all *Attributes* in all *Servers*, including the *Value Attribute*. For *TypeDefinitionNodes*, also the *InstanceDeclarations* shall be identical. That means that for static *Nodes* the semantic is always the same. Namespaces with static *Nodes* are for example namespaces defined by standard bodies like the OPC Foundation. This is important information for aggregating *Servers*. If the namespace is dynamic and used in several *Servers* the aggregating *Server* needs to distinguish the namespace for each aggregated *Server*. The static *Nodes* of a namespace only need to be handled once, even if it they are used by several aggregated *Servers*.

The *StaticNodeIdTypes Property* provides a list of *IdTypes* used for static *Nodes*. All *Nodes* in the *AddressSpace* of the namespace using one of the *IdTypes* in the array shall be static *Nodes*.

The StaticNumericNodeldRange Property provides a list of NumericRanges used for numeric Nodelds of static Nodes. If the StaticNodeldTypes Property contains an entry for numeric Nodelds then this Property is ignored.

The StaticStringNodeIdPattern Property provides a regular expression as defined for the Like Operator defined in Part 4 to filter for string NodeIds of static Nodes. If the StaticNodeIdTypes Property contains an entry for string NodeIds then this Property is ignored.

The *Object NamespaceFile* contains all *Nodes* and *References* of the namespace in an XML file where the Information Model XML Schema is defined in Part 6. The XML file is provided through an *AddressSpaceFileType Object*.

## 6.3.14 NamespacesType

This *ObjectType* defines a list of *NamespaceMetadataType Objects* provided by the *Server*. It is formally defined in Table 21.

Table 21 - NamespacesType Definition

Attribute	Value						
BrowseName	NamespacesTy	NamespacesType					
IsAbstract	False	False					
References	NodeClass	BrowseName	Data Type	TypeDefinition	Modelling Rule		
Subtype of the BaseObjectType defined in 6.2							
HasComponent	Object	<namespaceidentifier></namespaceidentifier>	-	NamespaceMetadataType	OptionalPlaceholder		

The ObjectType contains a list of NamespaceMetadataType Objects representing the namespaces in the Server. The BrowseName of an Object shall be derived from the namespace represented by the Object. This can, for example, be done by using the index of the namespace in the NamespaceArray as namespaceIndex of the QualifiedName and the namespace URI as name of the QualifiedName.

## 6.4 ObjectTypes used as EventTypes

#### 6.4.1 General

This International Standard defines standard *EventTypes*. They are represented in the *AddressSpace* as *ObjectTypes*. The *EventTypes* are already defined in Part 3. The following subclauses specify their representation in the *AddressSpace*.

## 6.4.2 BaseEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 22.

Table 22 - BaseEventType Definition

Attribute	Value				
BrowseName	BaseEventT	ype			
IsAbstract	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the E	BaseObjectType o	defined in 6.2			
HasSubtype	ObjectType	AuditEventType	Defined in 6.4.3		
HasSubtype	ObjectType	SystemEventType	Defined in 6.4.28		
HasSubtype	ObjectType	BaseModelChangeEventType	Defined in 6.4.31		
HasSubtype	ObjectType	SemanticChangeEventType	Defined in 6.4.33		
HasSubtype	ObjectType	EventQueueOverflowEventType	Defined in 6.4.34		
HasSubtype	ObjectType	ProgressEventType	Defined in 6.4.35		
HasProperty	Variable	EventId	ByteString	PropertyType	Mandatory
HasProperty	Variable	EventType	Nodeld	PropertyType	Mandatory
HasProperty	Variable	SourceNode	Nodeld	PropertyType	Mandatory
HasProperty	Variable	SourceName	String	PropertyType	Mandatory
HasProperty	Variable	Time	UtcTime	PropertyType	Mandatory
HasProperty	Variable	ReceiveTime	UtcTime	PropertyType	Mandatory
HasProperty	Variable	LocalTime	TimeZoneDataType	PropertyType	Optional
HasProperty	Variable	Message	LocalizedText	PropertyType	Mandatory
HasProperty	Variable	Severity	UInt16	PropertyType	Mandatory

EventId is generated by the Server to uniquely identify a particular Event Notification. The Server is responsible to ensure that each Event has its unique EventId. It may do this, for example, by putting GUIDs into the ByteString. Clients can use the EventId to assist in minimizing or eliminating gaps and overlaps that may occur during a redundancy failover. The EventId shall always be returned as value and the Server is not allowed to return a StatusCode for the EventId indicating an error.

EventType describes the specific type of Event. The EventType shall always be returned as value and the Server is not allowed to return a StatusCode for the EventType indicating an error.

SourceNode identifies the Node that the Event originated from. If the Event is not specific to a Node the Nodeld is set to null. Some subtypes of this BaseEventType may define additional rules for SourceNode.

SourceName provides a description of the source of the *Event*. This could be the string-part of the *DisplayName* of the *Event* source using the default locale of the server, if the *Event* is specific to a *Node*, or some server-specific notation.

*Time* provides the time the *Event* occurred. This value is set as close to the event generator as possible. It often comes from the underlying system or device. Once set, intermediate OPC UA *Servers* shall not alter the value.

ReceiveTime provides the time the OPC UA Server received the Event from the underlying device of another Server. ReceiveTime is analogous to ServerTimestamp defined in Part 4, i.e. in the case where the OPC UA Server gets an Event from another OPC UA Server, each Server applies its own ReceiveTime. That implies that a Client may get the same Event, having the same EventId, from different Servers having different values of the ReceiveTime. The ReceiveTime shall always be returned as value and the Server is not allowed to return a StatusCode for the ReceiveTime indicating an error.

LocalTime is a structure containing the Offset and the DaylightSavingInOffset flag. The Offset specifies the time difference (in minutes) between the *Time Property* and the time at the location in which the event was issued. If DaylightSavingInOffset is TRUE, then Standard/Daylight savings time (DST) at the originating location is in effect and Offset includes the DST correction. If FALSE then the Offset does not include DST correction and DST may or may not have been in effect.

Message provides a human-readable and localizable text description of the *Event*. The *Server* may return any appropriate text to describe the *Event*. A null string is not a valid value; if the *Server* does not have a description, it shall return the string part of the *BrowseName* of the *Node* associated with the *Event*.

Severity is an indication of the urgency of the *Event*. This is also commonly called "priority". Values will range from 1 to 1 000, with 1 being the lowest severity and 1 000 being the highest. Typically, a severity of 1 would indicate an *Event* which is informational in nature, while a value of 1 000 would indicate an *Event* of catastrophic nature, which could potentially result in severe financial loss or loss of life.

It is expected that very few *Server* implementations will support 1 000 distinct severity levels. Therefore, *Server* developers are responsible for distributing their severity levels across the 1 to 1 000 range in such a manner that clients can assume a linear distribution. For example, a client wishing to present five severity levels to a user should be able to do the following mapping:

Client Severity	OPC Severity
HIGH	801 – 1 000
MEDIUM HIGH	601 – 800
MEDIUM	401 – 600
MEDIUM LOW	201 – 400
LOW	1 – 200

In many cases a strict linear mapping of underlying source severities to the OPC Severity range is not appropriate. The *Server* developer will instead intelligently map the underlying source severities to the 1 to 1 000 OPC Severity range in some other fashion. In particular, it is recommended that *Server* developers map *Events* of high urgency into the OPC severity range of 667 to 1 000, *Events* of medium urgency into the OPC severity range of 334 to 666 and *Events* of low urgency into OPC severities of 1 to 333.

For example, if a source supports 16 severity levels that are clustered such that severities 0 to 2 are considered to be LOW, 3 to 7 are MEDIUM and 8 to 15 are HIGH, then an appropriate mapping might be as follows:

OPC Range	Source Severity	OPC Severity	
HIGH (667 – 1 000)	15	1 000	
	14	955	
	13	910	
	12	865	
	11	820	
	10	775	
	9	730	
	8	685	
MEDIUM (334 – 666)	7	650	
	6	575	
	5	500	
	4	425	
	3	350	
LOW (1 – 333)	2	300	
	1	150	
	0	1	

Some *Servers* might not support any *Events* which are catastrophic in nature, so they may choose to map all of their severities into a subset of the 1 to 1 000 range (for example, 1 to 666). Other *Servers* might not support any *Events* which are merely informational, so they may choose to map all of their severities into a different subset of the 1 to 1 000 range (for example, 334 to 1 000).

The purpose of this approach is to allow clients to use severity values from multiple *Servers* from different vendors in a consistent manner. Additional discussions of severity can be found in Part 9.

## 6.4.3 AuditEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 23.

Table 23 - AuditEventType Definition

Attribute		Value				
BrowseName		AuditEventType				
IsAbstract		True				
References NodeClass		s BrowseName	DataType	TypeDefinition	Modelling Rule	
Subtype of the	BaseEventTyp	e defined in 6.4.2, which means it inhe	rits the InstanceDec	larations of that Node		
HasSubtype ObjectType		e AuditSecurityEventType	Defined in 6.	Defined in 6.4.4		
HasSubtype	ObjectType	<ul> <li>AuditNodeManagementEventTyp</li> </ul>	e Defined in 6.	Defined in 6.4.19		
HasSubtype	ObjectType	e AuditUpdateEventType	Defined in 6.	4.24		
HasSubtype	ObjectType	AuditUpdateMethodEventType	Defined in 6.	4.27		
HasProperty	Variable	ActionTimeStamp	UtcTime	PropertyType	Mandatory	
HasProperty	Variable	Status	Boolean	PropertyType	Mandatory	
HasProperty	Variable	ServerId	String	PropertyType	Mandatory	
HasProperty	Variable	ClientAuditEntryId	String	PropertyType	Mandatory	
HasProperty	Variable	ClientUserId	String	PropertyType	Mandatory	

This EventType inherits all Properties of the BaseEventType. Their semantic is defined in 6.4.2.

ActionTimeStamp identifies the time the user initiated the action that resulted in the AuditEvent being generated. It differs from the Time Property because this is the time the server generated the AuditEvent documenting the action.

Status identifies whether the requested action could be performed (set Status to TRUE) or not (set Status to FALSE).

ServerId uniquely identifies the Server generating the Event. It identifies the Server uniquely even in a server-controlled transparent redundancy scenario where several Servers may use the same URI.

ClientAuditEntryld contains the human-readable AuditEntryld defined in Part 3.

The ClientUserId identifies the user of the client requesting an action. The ClientUserId can be obtained from the UserIdentityToken passed in the ActivateSession call. If the UserIdentityToken is a UserNameIdentityToken then the ClientUserId is the UserName. If the UserIdentityToken is an X509IdentityToken then the ClientUserId is the X509 Subject Name of the Certificate. If the UserIdentityToken is an IssuedIdentityToken then the ClientUserId shall be a string that represents the owner of the token. The best choice for the string depends on the type of IssuedIdentityToken. If an AnonymousIdentityToken was used, the value is null.

## 6.4.4 AuditSecurityEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 24.

Attribute Value BrowseName AuditSecurityEventType IsAbstract True NodeClass BrowseName ModellingRule References DataType TypeDefinition Subtype of the AuditEventType defined in 6.4.3, which means it inherits the InstanceDeclarations of that Node. HasSubtype ObjectType AuditChannelEventType Defined in 6.4.5 HasSubtype ObjectType AuditSessionEventType Defined in 6.4.7 AuditCertificateEventType HasSubtype ObjectType Defined in 6.4.12

Table 24 - AuditSecurityEventType Definition

This *EventType* inherits all *Properties* of the *AuditEventType*. Their semantic is defined in 6.4.3. There are no additional *Properties* defined for this *EventType*.

## 6.4.5 AuditChannelEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 25.

Attribute	Value				
BrowseName	AuditChannell	EventType			
IsAbstract	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the A	uditSecurityEven	tType defined in 6.4.4, which means it inh	erits the Instanc	eDeclarations of tha	t Node.
HasSubtype	ObjectType	AuditOpenSecureChannelEventType	Defined in 6.4.6		
HasProperty	Variable	SecureChannelld	String	PropertyType	Mandatory

Table 25 - AuditChannelEventType Definition

This *EventType* inherits all *Properties* of the *AuditSecurityEventType*. Their semantic is defined in 6.4.4. The *SourceNode* for *Events* of this type shall be assigned to the *Server Object*. The *SourceName* for *Events* of this type shall be "SecureChannel/" and the *Service* that generates the *Event* (e.g. SecureChannel/OpenSecureChannel or SecureChannel/CloseSecureChannel). If the *ClientUserId* is not available for a *CloseSecureChannel* call, then this parameter shall be set to "System/CloseSecureChannel".

The SecureChannelId shall uniquely identify the SecureChannel. The application shall use the same identifier in all AuditEvents related to the Session Service Set (AuditCreateSessionEventType, AuditActivateSessionEventType and their subtypes) and the SecureChannel Service Set (AuditChannelEventType and its subtypes).

#### 6.4.6 AuditOpenSecureChannelEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 26.

Table 26 - AuditOpenSecureChannelEventType Definition

Attribute	Value				
BrowseName	AuditO	penSecureChannelEventType			
IsAbstract	True				
References	Node	BrowseName	DataType	TypeDefinition	Modelling
	Class				Rule
Subtype of the Au	ıditChannelE	EventType defined in 6.4.5, whic	h means it inherits the InstanceD	eclarations of that N	lode.
HasProperty	Variable	ClientCertificate	ByteString	PropertyType	Mandatory
HasProperty	Variable	ClientCertificateThumbprint	String	PropertyType	Mandatory
HasProperty	Variable	RequestType	SecurityTokenRequestType	PropertyType	Mandatory
HasProperty	Variable	SecurityPolicyUri	String	PropertyType	Mandatory
HasProperty	Variable	SecurityMode	MessageSecurityMode	PropertyType	Mandatory
HasProperty	Variable	RequestedLifetime	Duration	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *AuditChannelEventType*. Their semantic is defined in 6.4.5. The *SourceName* for *Events* of this type shall be "SecureChannel/OpenSecureChannel". The *ClientUserId* is not available for this call, thus this parameter shall be set to "System/OpenSecureChannel".

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

ClientCertificate is the clientCertificate parameter of the OpenSecureChannel Service call.

ClientCertificateThumbprint is a thumbprint of the ClientCertificate. See Part 6 for details on thumbprints.

RequestType is the requestType parameter of the OpenSecureChannel Service call.

SecurityPolicyUri is the securityPolicyUri parameter of the OpenSecureChannel Service call.

SecurityMode is the securityMode parameter of the OpenSecureChannel Service call.

RequestedLifetime is the requestedLifetime parameter of the OpenSecureChannel Service call.

### 6.4.7 AuditSessionEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 27.

Table 27 - AuditSessionEventType Definition

Attribute		Value				
BrowseName		AuditS	essionEventType			
IsAbstract		True				
References	NodeC	Class	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the Au	ıditSecu	rityEven	tType defined in 6.4.4, which means it in	herits the Inst	anceDeclarations of th	at Node.
HasSubtype	Object	Туре	AuditCreateSessionEventType	Defined in 6	.4.8	
HasSubtype	Object	Туре	AuditActivateSessionEventType	Defined in 6	.4.10	
HasSubtype	Object	Туре	AuditCancelEventType	Defined in 6	.4.11	
HasProperty	Variab	le	SessionId	Nodeld	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *AuditSecurityEventType*. Their semantic is defined in 6.4.4.

If the *Event* is generated by a *TransferSubscriptions Service* call, the *SourceNode* shall be assigned to the *SessionDiagnostics Object* that represents the session. The *SourceName* for *Events* of this type shall be "Session/TransferSubscriptions".

Otherwise, the *SourceNode* for *Events* of this type shall be assigned to the *Server Object*. The *SourceName* for *Events* of this type shall be "Session/" and the *Service* or cause that generates the *Event* (e.g. *CreateSession*, *ActivateSession* or *CloseSession*).

The SessionId shall contain the SessionId of the session that the Service call was issued on In the CreateSession Service this shall be set to the newly created SessionId. If no session context exists (e.g. for a failed CreateSession Service call) the SessionId shall be null.

# 6.4.8 AuditCreateSessionEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 28.

Table 28 - AuditCreateSessionEventType Definition

Attribute		Value				
BrowseName		AuditCre	eateSessionEventType			
IsAbstract		True				
References	Nod	eClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the A	uditSe	ssionEven	tType defined in 6.4.7, which me	eans it inherits the Ins	tanceDeclarations of th	at Node.
HasSubtype	Obje	ctType	AuditUrlMismatchEventType	Defined in 6.4.9		
HasProperty	Varia	able	SecureChannelld	String	PropertyType	Mandatory
HasProperty	Varia	able	ClientCertificate	ByteString	PropertyType	Mandatory
HasProperty	Vari	able	ClientCertificateThumbprint	String	PropertyType	Mandatory
HasProperty	Varia	able	RevisedSessionTimeout	Duration	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *AuditSessionEventType*. Their semantic is defined in 6.4.7. The *SourceName* for *Events* of this type shall be "Session/CreateSession". The *ClientUserId* is not available for this call thus this parameter shall be set to the "System/CreateSession".

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

SecureChannelId shall uniquely identify the SecureChannel. The application shall use the same identifier in all AuditEvents related to the Session Service Set (AuditCreateSessionEventType, AuditActivateSessionEventType and their subtypes) and the SecureChannel Service Set (AuditChannelEventType and its subtypes).

ClientCertificate is the clientCertificate parameter of the CreateSession Service call.

ClientCertificateThumbprint is a thumbprint of the ClientCertificate. See Part 6 for details on thumbprints.

RevisedSessionTimeout is the returned revisedSessionTimeout parameter of the CreateSession Service call.

# 6.4.9 AuditUrlMismatchEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 29.

Table 29 - AuditUrlMismatchEventType Definition

Attribute	Value				
BrowseName	AuditUrlM	ismatchEventType			
IsAbstract	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the A	uditCreateSessi	onEventType defined in	6.4.8 which means it inherits	the InstanceDeclaration	ons of that Node.
HasProperty	Variable	EndpointUrl	String	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *AuditSessionEventType*. Their semantic is defined in 6.4.8.

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

EndpointUrl is the endpointUrl parameter of the CreateSession Service call.

# 6.4.10 AuditActivateSessionEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 30.

Table 30 - AuditActivateSessionEventType Definition

Attribute	Value				
BrowseName	AuditAc	tivateSessionEventType			
IsAbstract	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the	l e AuditSessionl		I ich means it inherits the Instance	Declarations of that	
HasProperty	Variable	ClientSoftwareCertificates	SignedSoftwareCertificate[]	PropertyType	Mandatory
HasProperty	Variable	UserIdentityToken	UserIdentityToken	PropertyType	Mandatory
HasProperty	Variable	SecureChannelld	String	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *AuditSessionEventType*. Their semantic is defined in 6.4.7. The *SourceName* for *Events* of this type shall be "Session/ActivateSession".

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

ClientSoftwareCertificates is the clientSoftwareCertificates parameter of the ActivateSession Service call.

*UserIdentityToken* reflects the userIdentityToken parameter of the ActivateSession *Service* call. For Username/Password tokens the password shall not be included.

SecureChannelId shall uniquely identify the SecureChannel. The application shall use the same identifier in all AuditEvents related to the Session Service Set (AuditCreateSessionEventType, AuditActivateSessionEventType and their subtypes) and the SecureChannel Service Set (AuditChannelEventType and its subtypes).

#### 6.4.11 AuditCancelEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 31.

Table 31 - AuditCancelEventType Definition

Attribute		Value			
BrowseName		AuditCancelEventType			
IsAbstract		True			
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the A	AuditSessionEve	entType defined in 6.4.7, i.e	e. inheriting the Instai	nceDeclarations of that	Node.
HasProperty	Variable	RequestHandle	Uint32	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *AuditSessionEventType*. Their semantic is defined in 6.4.7. The *SourceName* for *Events* of this type shall be "Session/Cancel".

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

RequestHandle is the requestHandle parameter of the Cancel Service call.

#### 6.4.12 AuditCertificateEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 32.

**Attribute** Value BrowseName AuditCertificateEventType IsAbstract True NodeClass References **BrowseName** DataType **TypeDefinition** Modelling Subtype of the AuditSecurityEventType defined in 6.4.7, which means it inherits the InstanceDeclarations of that Node. AuditCertificateDataMismatchEventType HasSubtype ObjectType Defined in 6.4.13 HasSubtype ObjectType AuditCertificateExpiredEventType Defined in 6.4.14 HasSubtype ObjectType AuditCertificateInvalidEventType Defined in 6.4.15 HasSubtype ObjectType Defined in 6.4.16 AuditCertificateUntrustedEventType HasSubtype ObjectType AuditCertificateRevokedEventType Defined in 6.4.17 AuditCertificateMismatchEventType HasSubtype ObjectType Defined in 6.4.18 Mandatory HasProperty Variable Certificate ByteString PropertyType

Table 32 - AuditCertificateEventType Definition

This *EventType* inherits all *Properties* of the *AuditSecurityEventType*. Their semantic is defined in 6.4.4. The *SourceName* for *Events* of this type shall be "Security/Certificate".

Certificate is the certificate that encountered a validation issue. Additional subtypes of this EventType will be defined representing the individual validation errors. This certificate can be matched to the Service that passed it (Session or SecureChannel Service Set) since the AuditEvents for these Services also included the Certificate.

# 6.4.13 AuditCertificateDataMismatchEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 33.

Attribute Value BrowseName AuditCertificateDataMismatchEventType **IsAbstract** True TypeDefinition NodeClass BrowseName DataType ModellingRule References Subtype of the AuditCertificateEventType defined in 6.4.12, i.e. inheriting the InstanceDeclarations of that Node. HasProperty Variable InvalidHostname String PropertyType Mandatory InvalidUri HasProperty Variable String PropertyType Mandatory

Table 33 - AuditCertificateDataMismatchEventType Definition

This *EventType* inherits all *Properties* of the *AuditCertificateEventType*. Their semantic is defined in 6.4.12. The *SourceName* for *Events* of this type shall be "Security/Certificate".

*InvalidHostname* is the string that represents the host name passed in as part of the URL that is found to be invalid. If the host name was not invalid it can be null.

InvalidUri is the URI that was passed in and found to not match what is contained in the certificate. If the URI was not invalid it can be null.

Either the *InvalidHostname* or *InvalidUri* shall be provided.

# 6.4.14 AuditCertificateExpiredEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 34.

Table 34 - AuditCertificateExpiredEventType Definition

Attribute		Value			
BrowseName		AuditCertificateExpiredEven	tType		
IsAbstract		True			
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the	AuditCertificateEv	ventType defined in 6.4.12. wh	ich means it inh	erits the InstanceDecla	arations of that Node.

This *EventType* inherits all *Properties* of the *AuditCertificateEventType*. Their semantic is defined in 6.4.12. The *SourceName* for *Events* of this type shall be "Security/Certificate". The

*Message Variable* shall include a description of why the certificate was expired (i.e. time before start or time after end). There are no additional *Properties* defined for this *EventType*.

# 6.4.15 AuditCertificateInvalidEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 35.

Table 35 - AuditCertificateInvalidEventType Definition

Attribute	Value				
BrowseName	AuditCe	rtificateInvalidEventType			
IsAbstract	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the A	uditCertificateE	ventType defined in 6.4.12	, which means it inf	nerits the InstanceDecla	arations of that Node.

This *EventType* inherits all *Properties* of the *AuditCertificateEventType*. Their semantic is defined in 6.4.12. The *SourceName* for *Events* of this type shall be "Security/Certificate". The *Message* shall include a description of why the certificate is invalid. There are no additional *Properties* defined for this *EventType*.

# 6.4.16 AuditCertificateUntrustedEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 36.

Table 36 - AuditCertificateUntrustedEventType Definition

Attribute		Valu	е			
BrowseName		Audit	tCertificateUntrustedEventTyp	е		
IsAbstract		True				
References	NodeCla	ass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the A	uditCertifi	cateEv	ventType defined in 6.4.12, wh	ich means it inheri	s the InstanceDeclara	tions of that Node.

This *EventType* inherits all *Properties* of the *AuditCertificateEventType*. Their semantic is defined in 6.4.12. The *SourceName* for *Events* of this type shall be "Security/Certificate". The *Message Variable* shall include a description of why the certificate is not trusted. If a trust chain is involved then the certificate that failed in the trust chain should be described. There are no additional *Properties* defined for this *EventType*.

### 6.4.17 AuditCertificateRevokedEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 37.

Table 37 - AuditCertificateRevokedEventType Definition

Attribute		Valu	е			
BrowseName		Audit	tCertificateRevokedEventType	!		
IsAbstract		True				
References	NodeCl	ass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the A	uditCertifi	cateEv	ventType defined in 6.4.12, wh	ich means it inherits t	he InstanceDeclarat	ions of that Node.

This *EventType* inherits all *Properties* of the *AuditCertificateEventType*. Their semantic is defined in 6.4.12. The *SourceName* for *Events* of this type shall be "Security/Certificate". The *Message Variable* shall include a description of why the certificate is revoked (was the revocation list unavailable or was the certificate on the list). There are no additional *Properties* defined for this *EventType*.

# 6.4.18 AuditCertificateMismatchEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 38.

Table 38 - AuditCertificateMismatchEventType Definition

Attribute		Valu	е			
BrowseName		Audit	CertificateMismatchEvent	Туре		
IsAbstract		True				
References	NodeCla	ass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the A	uditCertifi	cateEv	entType defined in 6.4.12	, which means it inheri	ts the InstanceDeclarations	of that Node.

This *EventType* inherits all *Properties* of the *AuditCertificateEventType*. Their semantic is defined in 6.4.12. The *SourceName* for *Events* of this type shall be "Security/Certificate". The *Message Variable* shall include a description of misuse of the certificate. There are no additional *Properties* defined for this *EventType*.

# 6.4.19 AuditNodeManagementEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 39.

Table 39 - AuditNodeManagementEventType Definition

Attribute	Value				
BrowseName	AuditNode	eManagementEventType			
IsAbstract	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the A	AuditEventType d	efined in 6.4.3, which means it inherits	the InstanceD	eclarations of that N	Node.
HasSubtype	ObjectType	AuditAddNodesEventType			
HasSubtype	ObjectType	AuditDeleteNodesEventType			
HasSubtype	ObjectType	AuditAddReferencesEventType			
HasSubtype	ObjectType	AuditDeleteReferencesEventType			

This *EventType* inherits all *Properties* of the *AuditEventType*. Their semantic is defined in 6.4.3. There are no additional *Properties* defined for this *EventType*. The *SourceNode* for *Events* of this type shall be assigned to the *Server Object*. The *SourceName* for *Events* of this type shall be "NodeManagement/" and the *Service* that generates the *Event* (e.g. *AddNodes*, *AddReferences*, *DeleteNodes*, *DeleteReferences*).

# 6.4.20 AuditAddNodesEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 40.

Table 40 - AuditAddNodesEventType Definition

Attribute	V	'alue				
BrowseName	Α	uditAddNodesEventType				
IsAbstract	T	rue				
References	NodeC	lass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the AuditNodeManagementEventType defined in 6.4.19, which means it inherits the InstanceDeclarations of the Node.				larations of that		
HasProperty	Variable	е	NodesToAdd	AddNodesItem[]	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *AuditNodeManagementEventType*. Their semantic is defined in 6.4.19. The *SourceName* for *Events* of this type shall be "NodeManagement/AddNodes".

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

NodesToAdd is the NodesToAdd parameter of the AddNodes Service call.

#### 6.4.21 AuditDeleteNodesEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 41.

Table 41 - AuditDeleteNodesEventType Definition

Attribute	Value					
BrowseName	AuditDelet	uditDeleteNodesEventType				
IsAbstract	True	True				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule	
Subtype of the AuditNodeManagementEventType defined in 6.4.19, i.e. inheriting the InstanceDeclarations of that Node.				of that Node.		
HasProperty	Variable	NodesToDelete	DeleteNodesItem[]	PropertyType	Mandatory	

This *EventType* inherits all *Properties* of the *AuditNodeManagementEventType*. Their semantic is defined in 6.4.19. The *SourceName* for *Events* of this type shall be "NodeManagement/DeleteNodes".

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

NodesToDelete is the nodesToDelete parameter of the DeleteNodes Service call.

### 6.4.22 AuditAddReferencesEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 42.

Table 42 - AuditAddReferencesEventType Definition

Attribute	Value					
BrowseName	AuditA	uditAddReferencesEventType				
IsAbstract	True					
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule	
Subtype of the AuditNodeManagementEventType defined in 6.4.19, which means it inherits the InstanceDeclarations of the Node.				larations of that		
HasProperty	Variable	ReferencesToAdd	AddReferencesItem[]	PropertyType	Mandatory	

This *EventType* inherits all *Properties* of the *AuditNodeManagementEventType*. Their semantic is defined in 6.4.19. The *SourceName* for *Events* of this type shall be "NodeManagement/AddReferences".

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

ReferencesToAdd is the referencesToAdd parameter of the AddReferences Service call.

# 6.4.23 AuditDeleteReferencesEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 43

Table 43 – AuditDeleteReferencesEventType Definition

Attribute	Value					
BrowseName	AuditDeleteF	AuditDeleteReferencesEventType				
IsAbstract	True					
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule	
Subtype of the Au Node.	ditNodeManage	mentEventType defined	l in 6.4.19, which means it in	herits the InstanceDec	larations of that	
HasProperty	Variable	ReferencesToDelete	DeleteReferencesItem[]	PropertyType	Mandatory	

This *EventType* inherits all *Properties* of the *AuditNodeManagementEventType*. Their semantic is defined in 6.4.19. The *SourceName* for *Events* of this type shall be "NodeManagement/DeleteReferences".

The additional *Properties* defined for this *EventType* reflect parameters of the *Service* call that triggers the *Event*.

ReferencesToDelete is the referencesToDelete parameter of the DeleteReferences Service call.

# 6.4.24 AuditUpdateEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 44.

Table 44 - AuditUpdateEventType Definition

Attribute	Value					
BrowseName	AuditUpda	teEventType				
IsAbstract	True					
References	NodeClass	deClass BrowseName DataType TypeDefinition Model				
Subtype of the Au	<i>iditEventType</i> de	ventType defined in 6.4.3, which means it inherits the InstanceDeclarations of that Node.				
HasSubtype	ObjectType	AuditWriteUpdateEventType	Defined in 6.4	4.25		
HasSubtype	ObjectType	AuditHistoryUpdateEventType	Defined in 6.4	4.26		

This *EventType* inherits all *Properties* of the *AuditEventType*. Their semantic is defined in 6.4.3. The *SourceNode* for *Events* of this type shall be assigned to the *NodeId* that was changed. The *SourceName* for *Events* of this type shall be "Attribute!" and the *Service* that generated the event (e.g. *Write*, *HistoryUpdate*). Note that one *Service* call may generate several *Events* of this type, one per changed value.

### 6.4.25 AuditWriteUpdateEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 45.

Table 45 - AuditWriteUpdateEventType Definition

Attribute		Value				
BrowseName		AuditWri	AuditWriteUpdateEventType			
IsAbstract		True				
References	Node	eClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the Au	ıditUpc	lateEvent	Type defined in 6.4.24, v	which means it inherits	the InstanceDeclarations	of that Node.
HasProperty	Varia	able	AttributeId	Uint32	PropertyType	Mandatory
HasProperty	Varia	able	IndexRange	NumericRange	PropertyType	Mandatory
HasProperty	Varia	able	NewValue	BaseDataType	PropertyType	Mandatory
HasProperty	Varia	able	OldValue	BaseDataType	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *AuditUpdateEventType*. The *SourceName* for *Events* of this type h be "Attribute/Write". Their semantic is defined in 6.4.24.

AttributeId identifies the Attribute that was written on the SourceNode.

IndexRange identifies the index range of the written Attribute if the Attribute is an array. If the Attribute is not an array or the whole array was written, the IndexRange is set to null.

NewValue identifies the value that was written to the SourceNode. If the IndexRange is provided, only the values in the provided range are shown.

OldValue identifies the value that the SourceNode contained before the write. If the IndexRange is provided, only the value of that range is shown. It is acceptable for a Server that does not have this information to report a null value.

Both the *NewValue* and the *OldValue* will contain a value in the *DataType* and encoding used for writing the value.

# 6.4.26 AuditHistoryUpdateEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 46.

Table 46 - AuditHistoryUpdateEventType Definition

Attribute	Value	alue				
BrowseName	AuditHisto	uditHistoryUpdateEventType				
IsAbstract	True	rue				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule	
Subtype of the Au	ıditUpdateEvent	Type defined in 6.4.24, which it	means it inherits tl	ne InstanceDeclarations	of that Node.	
HasProperty	Variable	ParameterDataTypeId	Nodeld	PropertyType	New	

This *EventType* inherits all *Properties* of the *AuditUpdateEventType*. Their semantic is defined in 6.4.24.

The *ParameterDataTypeId* identifies the *DataTypeId* for the extensible parameter used by the HistoryUpdate. This parameter indicates the type of HistoryUpdate being performed.

Subtypes of this *EventType* are defined in Part 11 representing the different possibilities to manipulate historical data.

### 6.4.27 AuditUpdateMethodEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 47.

Table 47 – AuditUpdateMethodEventType Definition

Attribute	Value					
BrowseName	AuditUpdate	AuditUpdateMethodEventType				
IsAbstract	True					
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule	
Subtype of the Au	ditEventType de	efined in 6.4.3, which me	ans it inherits the Inst	anceDeclarations of that	Node.	
HasProperty	Variable	MethodId	Nodeld	PropertyType	Mandatory	
HasProperty	Variable	InputArguments	BaseDataType[]	PropertyType	Mandatory	

This EventType inherits all Properties of the AuditEventType. Their semantic is defined in 6.4.3. The SourceNode for Events of this type shall be assigned to the Nodeld of the Object that the Method resides on. The SourceName for Events of this type shall be "Attribute/Call". Note that one Service call may generate several Events of this type, one per method called. This EventType should be further subtyped to better reflect the functionality of the method and to reflect changes to the address space or updated values triggered by the method.

MethodId identifies the method that was called.

*InputArguments* identifies the input Arguments for the method. This parameter can be null if no input arguments where provided.

# 6.4.28 SystemEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 48.

Table 48 - SystemEventType Definition

Attribute	Value						
BrowseName	SystemEver	SystemEventType					
IsAbstract	IsAbstract True						
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule		
HasSubtype	HasSubtype ObjectType DeviceFailureEventType Defined in 6.4.29						
HasSubtype ObjectType SystemStatusChangeEventType Defined in 6.4.30							
Subtype of the Ba	Subtype of the BaseEventType defined in 6.4.2, which means it inherits the InstanceDeclarations of that Node.						

This *EventType* inherits all *Properties* of the *BaseEventType*. Their semantic is defined in 6.4.2. There are no additional *Properties* defined for this *EventType*.

# 6.4.29 DeviceFailureEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 49.

Table 49 - DeviceFailureEventType Definition

Attribute		Valu	е			
BrowseName DeviceFailureEventType						
IsAbstract		True				
References	References NodeClass BrowseName DataType TypeDefinition ModellingRule					
Subtype of the <i>SystemEventType</i> defined in 6.4.28, which means it inherits the InstanceDeclarations of that Node.						

This *EventType* inherits all *Properties* of the *SystemEventType*. Their semantic is defined in 6.4.28. There are no additional *Properties* defined for this *EventType*.

### 6.4.30 SystemStatusChangeEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 50.

Table 50 - SystemStatusChangeEventType Definition

Attribute		Valu	е			
BrowseName SystemStatusChangeEventType						
IsAbstract		True				
References NodeClass Br		BrowseName	DataType	TypeDefinition	ModellingRule	
Subtype of the SystemEventType			defined in 6.4.28, which	means it inherits the I	nstanceDeclarations of the	at Node.
HasProperty	Variable	:	SystemState	ServerState	PropertyType	Mandatory

This *EventType* inherits all *Properties* of the *SystemEventType*. Their semantic is defined in 6.4.28. The *SourceNode* and the *SourceName* shall identify the system. The system can be the *Server* itself or some underlying system.

The *SystemState* specifies the current state of the system. Changes to the *ServerState* of the system shall trigger a *SystemStatusChangeEvent*, when the event is supported by the system.

### 6.4.31 BaseModelChangeEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 51.

Table 51 - BaseModelChangeEventType Definition

Attribute	Value						
BrowseName	BaseModelCh	BaseModelChangeEventType					
IsAbstract	True	True					
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule		
Subtype of the E	e of the BaseEventType defined in 6.4.2, which means it inherits the InstanceDeclarations of that Node.						

This *EventType* inherits all *Properties* of the *BaseEventType*. Their semantic is defined in 6.4.2. There are no additional *Properties* defined for this *EventType*. The *SourceNode* for Events of this type shall be the *Node* of the *View* that gives the context of the changes. If the whole *AddressSpace* is the context, the *SourceNode* is set to the *NodeId* of the *Server Object*. The *SourceName* for *Events* of this type shall be the *String* part of the *BrowseName* of the *View*; for the whole *AddressSpace* it shall be "Server".

# 6.4.32 GeneralModelChangeEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 52.

Table 52 - GeneralModelChangeEventType Definition

Attribute	Value							
BrowseName	e GeneralModelChangeEventType							
IsAbstract	True							
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule			
Subtype of the I	Subtype of the BaseModelChangeEventType defined in 6.4.31, which means it inherits the InstanceDeclarations of that Node.							
HasProperty	Variable	Changes	ModelChangeStructureDataType[]	PropertyType	Mandatory			

This *EventType* inherits all *Properties* of the *BaseModelChangeEventType*. Their semantic is defined in 6.4.31.

The additional *Property* defined for this *EventType* reflects the changes that issued the *ModelChangeEvent*. It shall contain at least one entry in its array. Its structure is defined in 12.16.

# 6.4.33 SemanticChangeEventType

This *EventType* is defined in Part 3. Its representation in the *AddressSpace* is formally defined in Table 53.

Table 53 - SemanticChangeEventType Definition

Attribute	Value							
BrowseName	me SemanticChangeEventType							
IsAbstract	True	True						
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule			
Subtype of the BaseEventType defined in 6.4.2, which means it inherits the InstanceDeclarations of that Node.								
HasProperty	Variable	/ariable Changes SemanticChangeStructureDataType[] PropertyType Mandatory						

This *EventType* inherits all *Properties* of the *BaseEventType*. Their semantic is defined in 6.4.2. There are no additional *Properties* defined for this *EventType*. The *SourceNode* for Events of this type shall be the *Node* of the *View* that gives the context of the changes. If the whole *AddressSpace* is the context, the *SourceNode* is set to the *NodeId* of the *Server Object*. The *SourceName* for *Events* of this type shall be the *String* part of the *BrowseName* of the *View*, for the whole *AddressSpace* it shall be "Server".

The additional *Property* defined for this *EventType* reflects the changes that issued the *SemanticChangeEvent*. Its structure is defined in 12.17.

#### 6.4.34 EventQueueOverflowEventType

EventQueueOverflow Events are generated when an internal queue of a MonitoredItem subscribing for Events in the Server overflows. Part 4 defines when the internal EventQueueOverflow Events shall be generated.

The EventType for EventQueueOverflow Events is formally defined in Table 54.

Table 54 - EventQueueOverflowEventType Definition

Attribute	Value							
BrowseName	EventQueueC	EventQueueOverflowEventType						
IsAbstract	True							
References	NodeClass BrowseName DataType TypeDefinition ModellingRule							
Subtype of the	Subtype of the BaseEventType defined in 6.4.2, which means it inherits the InstanceDeclarations of that Node.							

This *EventType* inherits all *Properties* of the *BaseEventType*. Their semantic is defined in 6.4.2. The *SourceNode* for *Events* of this type shall be assigned to the *NodeId* of the *Server Object*. The *SourceName* for *Events* of this type shall be "Internal/EventQueueOverflow".

#### 6.4.35 ProgressEventType

*ProgressEvents* are generated to identify the progress of an operation. An operation can be a *Service* call or something application specific like a program execution.

The EventType for Progress Events is formally defined in Table 55.

Table 55 - ProgressEventType Definition

Attribute	Value	Value								
BrowseName	ProgressEver	ntType								
IsAbstract	True									
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule					
Subtype of the	BaseEventType	defined in 6.4.2,	which means it inherits the InstanceDecla	arations of that Node	١.					
HasProperty	Variable	/ariable Context BaseDataType PropertyType Mandatory								
HasProperty	Variable	/ariable Progress Uint16 PropertyType Mandatory								

This *EventType* inherits all *Properties* of the *BaseEventType*. Their semantic is defined in 6.4.2. The *SourceNode* for *Events* of this type shall be assigned to the *NodeId* of the *Session Object* where the operation was initiated. The *SourceName* for *Events* of this type shall be "Service/Service Name as defined in Part 4>" when the progress of a *Service* call is exposed.

The additional *Property Context* contains context information about what operation progress is reported. In the case of *Service* calls it shall be a Uint32 containing the *requestHandle* of the *RequestHeader* of the *Service* call.

The additional *Property Progress* contains the percentage completed of the progress. The value shall be between 0 and 100, where 100 identifies that the operation has been finished.

It is recommended that *Servers* only expose *ProgressEvents* for *Service* calls to the *Session* that invoked the *Service*.

# 6.5 ModellingRuleType

*ModellingRules* are defined in Part 3. This *ObjectType* is used as the type for the *ModellingRules*. It is formally defined in Table 56.

**Table 56 – ModellingRuleType Definition** 

Attribute		Valu	Value					
BrowseName		Mod	ModellingRuleType					
IsAbstract	False							
References	References NodeClass		BrowseName		DataType	TypeDefinition	ModellingRule	
Subtype of the BaseObjectType defined in 6.2								
HasProperty	Variable		NamingRule		NamingRuleType	PropertyType	Mandatory	

The Property NamingRule identifies the NamingRule of a ModellingRule as defined in Part 3.

### 6.6 FolderType

Instances of this *ObjectType* are used to organise the *AddressSpace* into a hierarchy of *Nodes*. They represent the *root Node* of a subtree, and have no other semantics associated with them. However, the *DisplayName* of an instance of the *FolderType*, such as "ObjectTypes", should imply the semantics associated with the use of it. There are no References specified for this *ObjectType*. It is formally defined in Table 57.

**Table 57 – FolderType Definition** 

Attribute		Value	/alue					
BrowseName		Folder	olderType					
IsAbstract		False						
References	Node	Class	ass BrowseName DataType TypeDefinition ModellingRule					
Subtype of the Ba	Subtype of the BaseObjectType defined in 6.2.							

#### 6.7 DataTypeEncodingType

DataTypeEncodings are defined in Part 3. This ObjectType is used as type for the DataTypeEncodings. There are no References specified for this ObjectType. It is formally defined in Table 58.

Table 58 - DataTypeEncodingType Definition

Attribute	Value					
BrowseName	DataTypeEn	DataTypeEncodingType				
IsAbstract	False					
References	NodeClass	NodeClass BrowseName DataType TypeDefinition ModellingRule				
Subtype of the BaseObjectType defined in 6.2.						

### 6.8 DataTypeSystemType

DataTypeSystems are defined in Part 3. This ObjectType is used as type for the DataTypeSystems. There are no References specified for this ObjectType. It is formally defined in Table 59.

Table 59 - DataTypeSystemType Definition

Attribute		Value					
BrowseName		DataTypeSystemType	- DataTypeSystemType				
IsAbstract		False					
References NodeClass		BrowseName	DataType	TypeDefinition	ModellingRule		
Subtype of the BaseObjectType defined in 6.2.							

# 6.9 AggregateFunctionType

This *ObjectType* defines an *AggregateFunction* supported by a UA *Server*. It is formally defined in Table 60.

Table 60 - AggregateFunctionType Definition

Attribute	Value							
BrowseName	AggregateFunction	AggregateFunctionType						
IsAbstract	False	False						
References	NodeClass	NodeClass BrowseName DataType TypeDefinition ModellingRule						
Subtype of the BaseObjectType defined in 6.2.								

For the *AggregateFunctionType*, the *Description Attribute* is mandatory. The *Description Attribute* provides a localized description of the *AggregateFunction*. Specific *AggregateFunctions* may be defined in further parts of this series of standards.

# 7 Standard VariableTypes

#### 7.1 General

Typically, the components of a complex *VariableType* are fixed and can be extended by subtyping. However, because each *Variable* of a *VariableType* can be extended with additional components this standard allows the extension of the standard *VariableTypes* defined in this document with additional components. This allows the expression of additional information in the type definition that would be contained in each *Variable* anyway. However, it is not allowed to restrict the components of the standard *VariableTypes* defined in this International Standard. An example of extending *VariableTypes* would be putting the standard *Property NodeVersion*, defined in Part 3, into the *BaseDataVariableType*, stating that each *DataVariable* of the *Server* will provide a *NodeVersion*.

# 7.2 BaseVariableType

The BaseVariableType is the abstract base type for all other VariableTypes. However, only the PropertyType and the BaseDataVariableType directly inherit from this type.

There are no *References*, except for *HasSubtype References*, specified for this *VariableType*. It is formally defined in Table 61.

Table 61 - BaseVariableType Definition

Attribute		Value	/alue				
BrowseName		BaseV	laseVariableType				
IsAbstract		True	rue				
ValueRank		-2 (-2	-2 (-2 = Any)				
DataType		BaseD	)ataType				
References	NodeCl	ass	BrowseName	DataType	TypeDefinition	ModellingRule	
HasSubtype	asSubtype VariableType PropertyType			Defined in 7	.3		
HasSubtype	VariableType BaseDataVariableType Defined in 7.4						

# 7.3 PropertyType

The *PropertyType* is a subtype of the *BaseVariableType*. It is used as the type definition for all *Properties*. *Properties* are defined by their *BrowseName* and therefore they do not need a specialised type definition. It is not allowed to subtype this *VariableType*.

There are no References specified for this VariableType. It is formally defined in Table 62.

Table 62 - PropertyType Definition

Attribute		Value	Value					
BrowseName		PropertyTyp	е					
IsAbstract		False						
ValueRank		-2 (-2 = Any	<b>y</b> )					
DataType		BaseDataTy	ре					
References	No	odeClass	deClass BrowseName DataType TypeDefinition ModellingRule					
Subtype of the BaseVariableType defined in 7.2.								

### 7.4 BaseDataVariableType

The BaseDataVariableType is a subtype of the BaseVariableType. It is used as the type definition whenever there is a DataVariable having no more concrete type definition available. This VariableType is the base VariableType for VariableTypes of DataVariables, and all other VariableTypes of DataVariables shall either directly or indirectly inherit from it. However, it might not be possible for Servers to provide all HasSubtype References from this VariableType to its subtypes, and therefore it is not required to provide this information.

There are no *References* except for *HasSubtype References* specified for this *VariableType*. It is formally defined in Table 63.

Table 63 - BaseDataVariableType Definition

Attribute	V	alue	
BrowseName	В	aseDataVariableType	
IsAbstract	F	alse	
ValueRank	-	2 (-2 = Any)	
DataType	В	aseDataType	
References	NodeClass	BrowseName	Comment
Subtype of the I	BaseVariableT	pe defined in 7.2.	
HasSubtype	VariableTy	pe ServerVendorCapabilityType	Defined in 7.5
HasSubtype	VariableTy	pe DataTypeDictionaryType	Defined in 7.6
HasSubtype	VariableTy	pe DataTypeDescriptionType	Defined in 7.7
HasSubtype	VariableTy	pe ServerStatusType	Defined in 7.8
HasSubtype	VariableTy	pe BuildInfoType	Defined in 7.9
HasSubtype	VariableTy	pe ServerDiagnosticsSummaryType	Defined in 7.10
HasSubtype	VariableTy	pe SamplingIntervalDiagnosticsArrayType	Defined in 7.11
HasSubtype	VariableTy	pe SamplingIntervalDiagnosticsType	Defined in 7.12
HasSubtype	VariableTy	pe SubscriptionDiagnosticsArrayType	Defined in 7.13
HasSubtype	VariableTy	pe SubscriptionDiagnosticsType	Defined in 7.14
HasSubtype	VariableTy	pe SessionDiagnosticsArrayType	Defined in 7.15
HasSubtype	VariableTy	pe SessionDiagnosticsVariableType	Defined in 7.16
HasSubtype	VariableTy	pe SessionSecurityDiagnosticsArrayType	Defined in 7.17
HasSubtype	VariableTy	pe SessionSecurityDiagnosticsType	Defined in 7.18
HasSubtype	VariableTy	pe OptionSetType	Defined in 7.19

# 7.5 ServerVendorCapabilityType

This *VariableType* is an abstract type whose subtypes define capabilities of the *Server*. Vendors may define subtypes of this type. This *VariableType* is formally defined in Table 64.

Table 64 - ServerVendorCapabilityType Definition

Attribute		Value					
BrowseName	-	ServerVendorCapabilit	уТуре				
IsAbstract		True	True				
ValueRank		-1 (-1 = Scalar)	-1 (-1 = Scalar)				
DataType		BaseDataType					
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule		
Subtype of the BaseDataVariableType defined in 7.4.							

# 7.6 DataTypeDictionaryType

DataTypeDictionaries are defined in Part 3. This VariableType is used as the type for the DataTypeDictionaries. There are no References specified for this VariableType. It is formally defined in Table 65.

Table 65 - DataTypeDictionaryType Definition

Attribute	Value	/alue					
BrowseName	DataType	ataTypeDictionaryType					
IsAbstract	False						
ValueRank	-1 (-1 = Scalar)						
DataType	ByteString	ByteString					
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule		
Subtype of the B	Subtype of the BaseDataVariableType defined in 7.4.						
HasProperty	Variable	DataTypeVersion	String	PropertyType	Optional		
HasProperty	Variable	NamespaceUri	String	PropertyType	Optional		

The *Property* DataTypeVersion is defined in Part 3. The NamespaceUri is the URI for the namespace described by the *Value Attribute* of the DataTypeDictionary.

# 7.7 DataTypeDescriptionType

DataTypeDescriptions are defined in Part 3. This VariableType is used as the type for the DataTypeDescriptions. There are no References specified for this VariableType. It is formally defined in Table 66.

Table 66 - DataTypeDescriptionType Definition

Attribute		Value	/alue					
BrowseName		DataTy	DataTypeDescriptionType					
IsAbstract		False	False					
ValueRank		-1 (-1 =	-1 (-1 = Scalar)					
DataType		ByteString						
References	Node	Class	BrowseName	DataType	TypeDefinition	ModellingRule		
Subtype of the Ba	Subtype of the BaseDataVariableType defined in 7.4.							
HasProperty	Variable		DataTypeVersion	String	PropertyType	Optional		
HasProperty	Variab	le	DictionaryFragment	ByteString	PropertyType	Optional		

The *Properties* DataTypeVersion and DictionaryFragment are defined in Part 3.

#### 7.8 ServerStatusType

This complex *VariableType* is used for information about the *Server* status. Its *DataVariables* reflect its *DataType* having the same semantic defined in 12.10. The *VariableType* is formally defined in Table 67.

Table 67 - ServerStatusType Definition

Attribute V		Valu	е					
BrowseName		Serv	ServerStatusType					
IsAbstract		Fals	е					
ValueRank		-1 (-	-1 = Scalar)					
DataType		Serv	erStatusDataType					
References	NodeClass		BrowseName	DataType	TypeDefinition	Modelling Rule		
Subtype of the Ba	seDataVa	riable	Type defined in 7.4.					
HasComponent	Variable		StartTime	UtcTime	BaseDataVariableType	Mandatory		
HasComponent	Variable		CurrentTime	UtcTime	BaseDataVariableType	Mandatory		
HasComponent	Variable		State	ServerState	BaseDataVariableType	Mandatory		
HasComponent	Variable		BuildInfo <sup>1</sup>	BuildInfo	BuildInfoType	Mandatory		
HasComponent	Variable		SecondsTillShutdown	UInt32	BaseDataVariableType	Mandatory		
HasComponent Variable			ShutdownReason LocalizedText BaseDataVariableType Mandatory					
NOTE Containing <i>Objects</i> and <i>Variables</i> of these <i>Objects</i> and <i>Variables</i> are defined by their <i>BrowseName</i> defined in the corresponding <i>TypeDefinitionNode</i> . The <i>NodeId</i> is defined by the composed symbolic name described in 4.1.								

# 7.9 BuildInfoType

This complex *VariableType* is used for information about the *Server* status. Its *DataVariables* reflect its *DataType* having the same semantic defined in 12.4. The *VariableType* is formally defined in Table 68.

Table 68 - BuildInfoType Definition

Attribute		Value			
BrowseName BuildInfoType					
IsAbstract		False			
ValueRank		-1 (-1 = Scalar)			
DataType		BuildInfo			
References	NodeClass	s BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the Ba	aseDataVaria	bleType defined in 7.4.			
HasComponent	Variable	ProductUri	String	BaseDataVariableType	Mandatory
HasComponent	Variable	ManufacturerName	String	BaseDataVariableType	Mandatory
HasComponent	Variable	ProductName	String	BaseDataVariableType	Mandatory
HasComponent	Variable	SoftwareVersion	String	BaseDataVariableType	Mandatory
HasComponent	Variable	BuildNumber	String	BaseDataVariableType	Mandatory
HasComponent	Variable	BuildDate	UtcTime	BaseDataVariableType	Mandatory

# 7.10 ServerDiagnosticsSummaryType

This complex *VariableType* is used for diagnostic information. Its *DataVariables* reflect its *DataType* having the same semantic defined in 12.9. The *VariableType* is formally defined in Table 69.

Table 69 - ServerDiagnosticsSummaryType Definition

Attribute		Value				
BrowseName Ser		Serv	rerDiagnosticsSummaryType			
IsAbstract		Fals	e			
ValueRank		-1 (-	-1 = Scalar)			
DataType		Serv	rerDiagnosticsSummaryDataType			
References	NodeCla	ass	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the Ba	aseDataVa	riable	Type defined in 7.4.			
HasComponent	Variable		ServerViewCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		CurrentSessionCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		CumulatedSessionCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		SecurityRejectedSessionCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		RejectedSessionCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		SessionTimeoutCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		SessionAbortCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		PublishingIntervalCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		CurrentSubscriptionCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		CumulatedSubscriptionCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		SecurityRejectedRequestsCount	UInt32	BaseDataVariableType	Mandatory
HasComponent	Variable		RejectedRequestsCount	UInt32	BaseDataVariableType	Mandatory

# 7.11 SamplingIntervalDiagnosticsArrayType

This complex *VariableType* is used for diagnostic information. For each entry of the array, instances of this type will provide a *Variable* of the SamplingIntervalDiagnosticsType *VariableType* having the sampling rate as *BrowseName*. The *VariableType* is formally defined in Table 70.

Table 70 - SamplingIntervalDiagnosticsArrayType Definition

Attribute		Value			
BrowseName		SamplingIntervalDiagnosticsA	rrayType		
IsAbstract False					
ValueRank		1 (1 = OneDimension)			
ArrayDimensions		{0} (0 = UnknownSize)			
DataType		SamplingIntervalDiagnosticsD	ataType		
References	NodeClass	BrowseName	DataType TypeDefinition	Modelling Rule	
Subtype of the Bas	eDataVariableType	e defined in 7.4.			
HasComponent	Variable	SamplingIntervalDiagnostics	SamplingIntervalDiagnosticsDataType SamplingIntervalDiagnosticsType	ExposesItsArr ay	

# 7.12 SamplingIntervalDiagnosticsType

This complex *VariableType* is used for diagnostic information. Its *DataVariables* reflect its *DataType*, having the same semantic defined in 12.8. The *VariableType* is formally defined in Table 71.

Table 71 - SamplingIntervalDiagnosticsType Definition

Attribute Value			Value					
BrowseName			SamplingIntervalDiagnosticsType					
IsAbstract			False					
ValueRank			-1 (-1 = Scalar)	-1 (-1 = Scalar)				
DataType			SamplingIntervalDiagnosticsDataType					
References	Node Class	Bro	wseName	Data Type	TypeDefinition	Modelling Rule		
Subtype of the Ba	aseDataVaria	ableTy	pe defined in 7.4.					
HasComponent	Variable	San	nplingInterval	Duration	BaseDataVariableType	Mandatory		
HasComponent	Variable	San	npledMonitoredItemsCount	UInt32	BaseDataVariableType	Mandatory		
HasComponent	Variable	Max	SampledMonitoredItemsCount	UInt32	BaseDataVariableType	Mandatory		
HasComponent	Variable	Disa	abledMonitoredItemsSamplingCount	UInt32	BaseDataVariableType	Mandatory		

# 7.13 SubscriptionDiagnosticsArrayType

This complex *VariableType* is used for diagnostic information. For each entry of the array, instances of this type will provide a *Variable* of the SubscriptionDiagnosticsType *VariableType* having the SubscriptionId as *BrowseName*. The *VariableType* is formally defined in Table 72.

Table 72 - SubscriptionDiagnosticsArrayType Definition

Attribute		Value	Value						
BrowseName		SubscriptionDiagnosticsA	SubscriptionDiagnosticsArrayType						
IsAbstract		False	False						
ValueRank		1 (1 = OneDimension)							
ArrayDimensions		{0} (0 = UnknownSize)	{0} (0 = UnknownSize)						
DataType		SubscriptionDiagnosticsD	SubscriptionDiagnosticsDataType						
References NodeClass		BrowseName	DataType TypeDefinition	ModellingRule					
Subtype of the Base	Subtype of the BaseDataVariableType defined in 7.4.								
HasComponent	Variable	SubscriptionDiagnostics	SubscriptionDiagnosticsDataType SubscriptionDiagnosticsType	ExposesItsArray					

# 7.14 SubscriptionDiagnosticsType

This complex *VariableType* is used for diagnostic information. Its *DataVariables* reflect its *DataType*, having the same semantic defined in 12.15. The *VariableType* is formally defined in Table 73.

Table 73 - SubscriptionDiagnosticsType Definition

Attribute		Value					
BrowseName		Subscri	ubscriptionDiagnosticsType				
IsAbstract		False					
ValueRank		<b>−1 (−1</b> :	= Scalar)				
DataType		Subscri	ptionDiagnosticsDataType				
References	No Cla		BrowseName	DataType	TypeDefinition	Modelling Rule	
Subtype of the Bas	seDa	taVariable	eType defined in 7.4.	•	•		
HasComponent	Vai	riable	SessionId	Nodeld	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	SubscriptionId	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	Priority	Byte	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	PublishingInterval	Duration	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	MaxKeepAliveCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	MaxLifetimeCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	MaxNotificationsPerPublish	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	PublishingEnabled	Boolean	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	ModifyCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent			EnableCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	mponent Variable		DisableCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	omponent Variable		RepublishRequestCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Component Variable		RepublishMessageRequestCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	RepublishMessageCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	TransferRequestCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	TransferredToAltClientCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	TransferredToSameClientCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	PublishRequestCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	DataChangeNotificationsCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	EventNotificationsCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	NotificationsCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	LatePublishRequestCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	CurrentKeepAliveCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	CurrentLifetimeCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent		riable	UnacknowledgedMessageCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	DiscardedMessageCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	MonitoredItemCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	DisabledMonitoredItemCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	MonitoringQueueOverflowCount	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	NextSequenceNumber	UInt32	BaseDataVariableType	Mandatory	
HasComponent	Vai	riable	EventQueueOverflowCount	UInt32	BaseDataVariableType	Mandatory	

# 7.15 SessionDiagnosticsArrayType

This complex *VariableType* is used for diagnostic information. For each entry of the array instances of this type will provide a *Variable* of the SessionDiagnosticsVariableType *VariableType*, having the SessionDiagnostics as *BrowseName*. Those *Variables* will also be referenced by the SessionDiagnostics *Objects* defined by their type in 6.3.5. The *VariableType* is formally defined in Table 74.

Table 74 - SessionDiagnosticsArrayType Definition

Attribute		Value					
BrowseName SessionDiagnosticsArrayType			oe .				
IsAbstract		False					
ValueRank		1 (1 = OneDimension)					
ArrayDimensions	3	{0} (0 = UnknownSize)					
DataType		SessionDiagnosticsDataTyp	sDataType				
References	NodeClass	BrowseName	DataType TypeDefinition	ModellingRule			
Subtype of the B	Subtype of the BaseDataVariableType defined in 7.4.						
HasComponen t	Variable	SessionDiagnostics	SessionDiagnosticsDataType SessionDiagnosticsVariableType	ExposesItsArray			

# 7.16 SessionDiagnosticsVariableType

This complex *VariableType* is used for diagnostic information. Its *DataVariables* reflect its *DataType*, having the same semantic defined in 12.11. The *VariableType* is formally defined in Table 75.

Table 75 - SessionDiagnosticsVariableType Definition

Attribute	Value	e		
BrowseName	Sess	ionDiagnosticsVariableType		
IsAbstract	False	)		
ValueRank	-1 (-	1 = Scalar)		
DataType	Sess	ionDiagnosticsDataType		
References	Node Class	BrowseName	DataType TypeDefinition	Modelling Rule
Subtype of the Ba	aseDataVari	ableType defined in 7.4.	1 21:	L
HasComponent	Variable	SessionId	Nodeld	Mandatory
· iac component			BaseDataVariableType	mandato. y
HasComponent	Variable	SessionName	String BaseDataVariableType	Mandatory
HasComponent	Variable	ClientDescription	ApplicationDescription BaseDataVariableType	Mandatory
HasComponent	Variable	ServerUri	String BaseDataVariableType	Mandatory
HasComponent	Variable	EndpointUrl	String BaseDataVariableType	Mandatory
HasComponent	Variable	Localelds	LocaleId[] BaseDataVariableType	Mandatory
HasComponent	Variable	MaxResponseMessageSize	UInt32 BaseDataVariableType	Mandatory
HasComponent	Variable	ActualSessionTimeout	Duration BaseDataVariableType	Mandatory
HasComponent	Variable	ClientConnectionTime	UtcTime BaseDataVariableType	Mandatory
HasComponent	Variable	ClientLastContactTime	UtcTime BaseDataVariableType	Mandatory
HasComponent	Variable	CurrentSubscriptionsCount	UInt32 BaseDataVariableType	Mandatory
HasComponent	Variable	CurrentMonitoredItemsCount	UInt32 BaseDataVariableType	Mandatory
HasComponent	Variable	CurrentPublishRequestsInQueue	UInt32 BaseDataVariableType	Mandatory
HasComponent	Variable	TotalRequestsCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	UnauthorizedRequestsCount	UInt32 BaseDataVariableType	Mandatory
HasComponent	Variable	ReadCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	HistoryReadCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	WriteCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	HistoryUpdateCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	CallCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	CreateMonitoredItemsCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	ModifyMonitoredItemsCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	SetMonitoringModeCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	SetTriggeringCount	ServiceCounterDataType BaseDataVariableType BaseDataVariableType	Mandatory
HasComponent	Variable	DeleteMonitoredItemsCount	ServiceCounterDataType BaseDataVariableType BaseDataVariableType	Mandatory
HasComponent	Variable	CreateSubscriptionCount	ServiceCounterDataType BaseDataVariableType BaseDataVariableType	Mandatory
HasComponent	Variable	ModifySubscriptionCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	SetPublishingModeCount	ServiceCounterDataType BaseDataVariableType BaseDataVariableType	Mandatory
HasComponent	Variable	PublishCount	ServiceCounterDataType BaseDataVariableType BaseDataVariableType	Mandatory
HasComponent	Variable	RepublishCount	ServiceCounterDataType BaseDataVariableType BaseDataVariableType	Mandatory

Attribute	Value	9		
BrowseName	Sessi	onDiagnosticsVariableType		
IsAbstract	False	!		
ValueRank	-1 (-	1 = Scalar)		
DataType	Sessi	onDiagnosticsDataType		
References	Node Class	BrowseName	DataType TypeDefinition	Modelling Rule
Subtype of the Ba	aseDataVari	ableType defined in 7.4.		
HasComponent	Variable	TransferSubscriptionsCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	DeleteSubscriptionsCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	AddNodesCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	AddReferencesCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	DeleteNodesCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	DeleteReferencesCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	BrowseCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	BrowseNextCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	TranslateBrowsePathsToNodeldsCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	QueryFirstCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	QueryNextCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	RegisterNodesCount	ServiceCounterDataType BaseDataVariableType	Mandatory
HasComponent	Variable	UnregisterNodesCount	ServiceCounterDataType BaseDataVariableType	Mandatory

# 7.17 SessionSecurityDiagnosticsArrayType

This complex *VariableType* is used for diagnostic information. For each entry of the array instances of this type will provide a *Variable* of the SessionSecurityDiagnosticsType *VariableType*, having the SessionSecurityDiagnostics as *BrowseName*. Those *Variables* will also be referenced by the SessionDiagnostics *Objects* defined by their type in 6.3.5. The *VariableType* is formally defined in Table 76. Since this information is security related, it should not be made accessible to all users, but only to authorised users.

Table 76 - SessionSecurityDiagnosticsArrayType Definition

Attribute	Value	Value				
BrowseName	Session	SessionSecurityDiagnosticsArrayType				
IsAbstract	False					
ValueRank	1 (1 =	OneDimension)				
ArrayDimensions	{0} (0	{0} (0 = UnknownSize)				
DataType	Session	onSecurityDiagnosticsDataType				
References	Node	Browse	DataType	Modelling		
	Class	ass Name TypeDefinition Rule				
Subtype of the BaseDataVariableType defined in 7.4.						
HasComponent	Variable	SessionSecurityDiagnostics	SessionSecurityDiagnosticsDataType SessionSecurityDiagnosticsType	ExposesItsArray		

# 7.18 SessionSecurityDiagnosticsType

This complex *VariableType* is used for diagnostic information. Its *DataVariables* reflect its *DataType*, having the same semantic defined in 12.12. The *VariableType* is formally defined in Table 77. Since this information is security-related, it should not be made accessible to all users, but only to authorised users.

Mandatory

Mandatory

Mandatory

Mandatory

Attribute Value BrowseName SessionSecurityDiagnosticsType **IsAbstract** False ValueRank -1 (-1 = Scalar) SessionSecurityDiagnosticsDataType DataType Modellina References Node **BrowseName** DataTvpe **TypeDefinition** Rule Class Subtype of the BaseDataVariableType defined in 7.4 HasComponent Variable SessionId Nodeld Mandatory BaseDataVariableType String HasComponent Variable ClientUserIdOfSession Mandatory BaseDataVariableType HasComponent Variable ClientUserIdHistory String[] Mandatory BaseDataVariableType Variable AuthenticationMechanism HasComponent String Mandatory BaseDataVariableType HasComponent Variable Encoding String Mandatory BaseDataVariableType

String

String

ByteString

BaseDataVariableType

MessageSecurityMode

BaseDataVariableType

BaseDataVariableType

BaseDataVariableType

TransportProtocol

SecurityMode

SecurityPolicyUri

ClientCertificate

Table 77 - SessionSecurityDiagnosticsType Definition

#### 7.19 OptionSetType

Variable

Variable

Variable

Variable

HasComponent

HasComponent

HasComponent

HasComponent

The OptionSetType VariableType is used to represent a bit mask. Each array element of the OptionSetValues Property contains either the human-readable representation for the corresponding bit used in the option set or an empty LocalizedText for a bit that has no specific meaning. The order of the bits of the bit mask maps to a position of the array, i.e. the first bit (least significant bit) maps to the first entry in the array, etc.

The *DataType* of this *VariableType* shall be capable of representing a bit mask. It shall be either a numeric *DataType* representing a signed or unsigned integer, or a *ByteString*. For example, it can be the *BitFieldMaskDataType*.

The optional BitMask *Property* provides the bit mask in an array of Booleans. This allows subscribing to individual entries of the bit mask. The order of the bits of the bit mask points to a position of the array, i.e. the first bit points to the first entry in the array, etc. The *VariableType* is formally defined in Table 76.

Attribute	Value	Value				
BrowseName	OptionSet	ionSetType				
IsAbstract	False					
ValueRank	-1 (-1 = 9	Scalar)				
ArrayDimensions	{0} (0 = U	nknownSize)				
DataType	BaseData	Туре				
References	NodeClass	Browse Name	DataType TypeDefinition	Modelling Rule		
Subtype of the Ba	aseDataVariableT	Type defined in 7.4				
HasProperty	Variable	OptionSetValues	LocalizedText[] PropertyType	Mandatory		
HasProperty	Variable	BitMask	Boolean[] PropertyType	Optional		

Table 78 - OptionSetType Definition

# 8 Standard Objects and their Variables

#### 8.1 General

Objects and Variables described in the following subclauses can be extended by additional Properties or References to other Nodes, except where it is stated in the text that it is restricted.

#### 8.2 Objects used to organise the AddressSpace structure

#### 8.2.1 Overview

To promote interoperability of clients and *Servers*, the OPC UA *AddressSpace* is structured as a hierarchy, with the top levels standardised for all *Servers*. Figure 1 illustrates the structure of the *AddressSpace*. All *Objects* in this figure are organised using *Organizes References* and have the *ObjectType FolderType* as type definition.

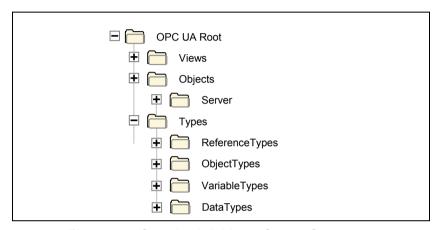


Figure 1 - Standard AddressSpace Structure

The remainder of this provides descriptions of these standard *Nodes* and the organization of *Nodes* beneath them. *Servers* typically implement a subset of these standard *Nodes*, depending on their capabilities.

#### 8.2.2 Root

This standard *Object* is the browse entry point for the *AddressSpace*. It contains a set of *Organizes References* that point to the other standard *Objects*. The "*Root*" *Object* shall not reference any other *NodeClasses*. It is formally defined in Table 79.

Attribute	Value		
BrowseName	Root		
References	NodeClass	BrowseName	Comment
HasTypeDefinition	ObjectType	FolderType	Defined in 6.6
Organizes	Object	Views	Defined in 8.2.3
Organizes	Object	Objects	Defined in 8.2.4
Organizes	Object	Types	Defined in 8.2.5

Table 79 - Root Definition

#### 8.2.3 Views

This standard *Object* is the browse entry point for *Views*. Only *Organizes References* are used to relate *View Nodes* to the "*Views*" standard *Object*. All *View Nodes* in the *AddressSpace* shall be referenced by this *Node*, either directly or indirectly. That is, the "*Views*" *Object* may reference other *Objects* using *Organizes References*. Those *Objects* may reference additional *Views*. Figure 2 illustrates the Views Organization. The "*Views*" standard *Object* directly references the *Views* "View1" and "View2" and indirectly "View3" by referencing another *Object* called "Engineering".

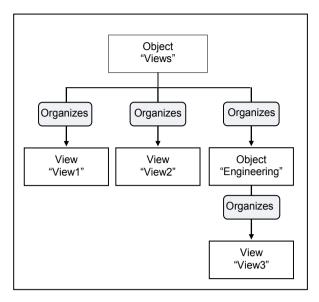


Figure 2 - Views Organization

The "Views" Object shall not reference any other NodeClasses. The "Views" Object is formally defined in Table 80.

Table 80 - Views Definition

Attribute	Value			
BrowseName	Views			
References	NodeClass	BrowseName	Comment	
HasTypeDefinition	ObjectType	FolderType	Defined in 6.6	•

### 8.2.4 Objects

This standard *Object* is the browse entry point for *Object Nodes*. Figure 3 illustrates the structure beneath this *Node*. Only *Organizes References* are used to relate *Objects* to the "*Objects*" standard *Object*. A *View Node* can be used as entry point into a subset of the *AddressSpace* containing *Objects* and *Variables* and thus the "*Objects*" *Object* can also reference *View Nodes* using *Organizes References*. The intent of the "*Objects*" *Object* is that all *Objects* and *Variables* that are not used for type definitions or other organizational purposes (e.g. organizing the *Views*) are accessible through *hierarchical References* starting from this *Node*. However, this is not a requirement, because not all *Servers* may be able to support this. This *Object* references the standard *Server Object* defined in 8.3.2.

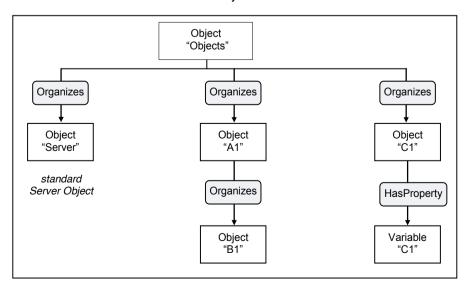


Figure 3 - Objects Organization

The "Objects" Object shall not reference any other NodeClasses. The "Objects" Object is formally defined in Table 81.

Table 81 - Objects Definition

Attribute		Value		
BrowseName		Objects		
References	NodeClas	s	BrowseName	Comment
HasTypeDefinition	ObjectTyp	е	FolderType	Defined in 6.6
Organizes	Object		Server	Defined in 8.3.2

# 8.2.5 Types

This standard *Object Node* is the browse entry point for type *Nodes*. Figure 1 illustrates the structure beneath this *Node*. Only *Organizes References* are used to relate *Objects* to the "*Types*" standard *Object*. The "*Types*" *Object* shall not reference any other *NodeClasses*. It is formally defined in Table 82.

Table 82 - Types Definition

Attribute	Value		
BrowseName	Types		
References	NodeClass	BrowseName	Comment
HasTypeDefinition	ObjectType	FolderType	Defined in 6.6
Organizes	Object	ObjectTypes	Defined in 8.2.6
Organizes	Object	VariableTypes	Defined in 8.2.7
Organizes	Object	ReferenceTypes	Defined in 8.2.8
Organizes	Object	DataTypes	Defined in 8.2.9
Organizes	Object	EventTypes	Defined in 8.2.12

# 8.2.6 ObjectTypes

This standard *Object Node* is the browse entry point for *ObjectType Nodes*. Figure 4 illustrates the structure beneath this *Node* showing some of the standard *ObjectTypes* defined in 6. Only *Organizes References* are used to relate *Objects* and *ObjectTypes* to the "*ObjectTypes*" standard *Object*. The "*ObjectTypes*" *Object* shall not reference any other *NodeClasses*.

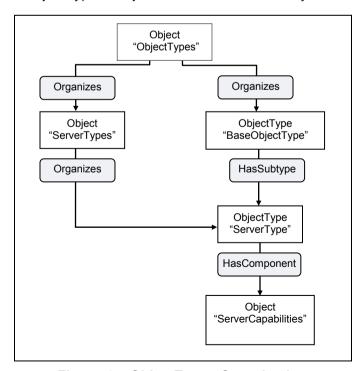


Figure 4 – ObjectTypes Organization

The intention of the "ObjectTypes" Object is that all ObjectTypes of the Server are either directly or indirectly accessible browsing HierarchicalReferences starting from this Node. However, this

Defined in 6.2

is not required and *Servers* might not provide some of their *ObjectTypes* because they may be well-known in the industry, such as the *ServerType* defined in 6.3.1.

This *Object* also indirectly references the *BaseEventType* defined in 6.4.2, which is the base type of all *EventTypes*. Thereby it is the entry point for all *EventTypes* provided by the *Server*. It is required that the *Server* expose all its *EventTypes*, so a client can usefully subscribe to *Events*.

The "ObjectTypes" Object is formally defined in Table 83.

ObjectType

 Attribute
 Value

 BrowseName
 ObjectTypes

 References
 NodeClass
 BrowseName
 Comment

 HasTypeDefinition
 ObjectType
 FolderType
 Defined in 6.6

BaseObjectType

Table 83 - ObjectTypes Definition

#### 8.2.7 VariableTypes

Organizes

This standard *Object* is the browse entry point for *VariableType Nodes*. Figure 5 illustrates the structure beneath this *Node*. Only *Organizes References* are used to relate *Objects* and *VariableTypes* to the "*VariableTypes*" standard *Object*. The "*VariableTypes*" *Object* shall not reference any other *NodeClasses*.

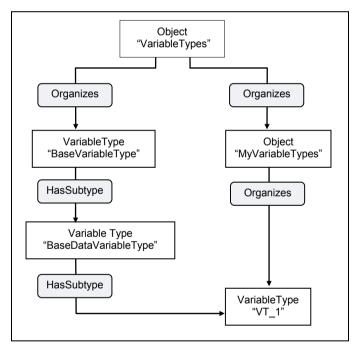


Figure 5 - VariableTypes Organization

The intent of the "VariableTypes" Object is that all VariableTypes of the Server are either directly or indirectly accessible browsing HierarchicalReferences starting from this Node. However, this is not required and Servers might not provide some of their VariableTypes, because they may be well-known in the industry, such as the "BaseVariableType" defined in 7.2.

The "VariableTypes" Object is formally defined in Table 84.

Table 84 - VariableTypes Definition

Attribute	Value		
BrowseName	VariableTypes		
References	NodeClass	BrowseName	Comment
HasTypeDefinition	ObjectType	FolderType	Defined in 6.6
Organizes	VariableType	BaseVariableType	Defined in 7.2

### 8.2.8 ReferenceTypes

This standard *Object* is the browse entry point for *ReferenceType Nodes*. Figure 6 illustrates the organization of *ReferenceTypes*. *Organizes References* are used to define *ReferenceTypes* and *Objects* referenced by the "*ReferenceTypes*" *Object*. The "*ReferenceTypes*" *Object* shall not reference any other *NodeClasses*. See Clause 11 for a discussion of the standard *ReferenceTypes* that appear beneath the "*ReferenceTypes*" *Object*.

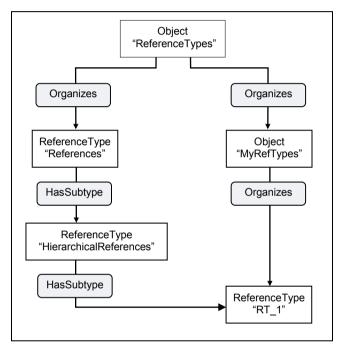


Figure 6 - ReferenceType Definitions

Since ReferenceTypes will be used as filters in the browse Service and in queries, the Server shall provide all its ReferenceTypes, directly or indirectly following hierarchical References starting from the "ReferenceTypes" Object. This means that, whenever the client follows a Reference, the Server shall expose the type of this Reference in the ReferenceType hierarchy. It shall provide all ReferenceTypes so that the client would be able, following the inverse subtype of References, to come to the base References ReferenceType. It does not mean that the Server shall expose the ReferenceTypes that the client has not used any Reference of.

The "ReferenceTypes" Object is formally defined in Table 85.

Table 85 - ReferenceTypes Definition

Attribute	Value		
BrowseName	ReferenceTypes		
References	NodeClass	BrowseName	Comment
HasTypeDefinition	ObjectType	FolderType	Defined in 6.6
Organizes	ReferenceType	References	Defined in 11.1

## 8.2.9 DataTypes

This standard *Object* is the browse entry point for *DataTypes* that the *Server* wishes to expose in the *AddressSpace*. The standard *Object* uses *Organizes References* to reference *Objects* of the *DataTypeSystemType* representing *DataTypeSystems*. Referenced by those *Objects* are

DataTypeDictionaries that refer to their DataTypeDescriptions. However, it is not required to provide the DataTypeSystem Objects, and the DataTypeDictionary need not to be provided.

Because DataTypes are not related to DataTypeDescriptions using hierarchical References, DataType Nodes should be made available using Organizes References pointing either directly from the "DataTypes" Object to the DataType Nodes or using additional Folder Objects for grouping purposes. The intent is that all DataTypes of the Server exposed in the AddressSpace are accessible following hierarchical References starting from the "DataTypes" Object. However, this is not required.

Figure 7 illustrates this hierarchy using the "OPC Binary" and "XML Schema" standard DataTypeSystems as examples. Other DataTypeSystems may be defined under this Object.

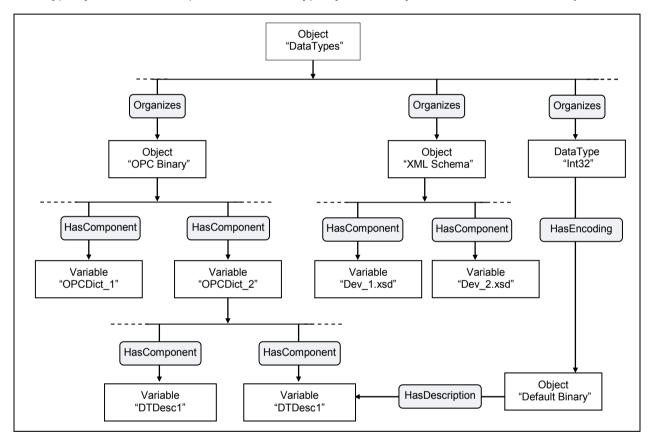


Figure 7 - DataTypes Organization

Each DataTypeSystem Object is related to its DataTypeDictionary Nodes using HasComponent References. Each DataTypeDictionary Node is related to its DataTypeDescription Nodes using HasComponent References. These References indicate that the DataTypeDescriptions are defined in the dictionary.

In the example, the "DataTypes" *Object* references the *DataType* "Int32" using an *Organizes Reference*. The *DataType* uses the non-hierarchical *HasEncoding Reference* to point to its default encoding, which references a *DataTypeDescription* using the non-hierarchical *HasDescription Reference*.

The "DataTypes" Object is formally defined in Table 86.

Table 86 - DataTypes Definition

Attribute	Value		
BrowseName	DataTypes		
References	NodeClass	BrowseName	Comment
HasTypeDefinition	ObjectType	FolderType	Defined in 6.6
Organizes	Object	OPC Binary	Defined in 8.2.10
Organizes	Object	XML Schema	Defined in 8.2.11
Organizes	DataType	BaseDataType	Defined in 12.2

# 8.2.10 OPC Binary

OPC Binary is a standard *DataTypeSystem* defined by OPC. It is represented in the *AddressSpace* by an *Object Node*. The OPC Binary *DataTypeSystem* is defined in Part 3. OPC Binary uses XML to describe complex binary data values. The "*OPC Binary*" *Object* is formally defined in Table 87.

Table 87 - OPC Binary Definition

Attribute	Va	alue			
BrowseName	OI	PC Binary			
References		NodeClass	BrowseName	Comment	
HasTypeDefinition	1	ObjectType	 DataTypeSystemType	 Defined in 6.8	

#### 8.2.11 XML Schema

XML Schema is a standard *DataTypeSystem* defined by the W3C. It is represented in the *AddressSpace* by an *Object Node*. XML Schema documents are XML documents whose xmlns attribute in the first line is:

schema xmlns = http://www.w3.org/1999/XMLSchema

The "XML Schema" Object is formally defined in Table 88.

Table 88 - XML Schema Definition

Attribute	Value		
BrowseName	XML Schema		
References	NodeClass	BrowseName	Comment
HasTypeDefinition	ObjectType	DataTypeSystemType	Defined in 6.8

### 8.2.12 EventTypes

This standard *Object Node* is the browse entry point for *EventType Nodes*. Figure 8 illustrates the structure beneath this *Node* showing some of the standard *EventTypes* defined in Clause 6. Only *Organizes References* are used to relate *Objects* and *ObjectTypes* to the "*EventTypes*" standard *Object*. The "*EventTypes*" *Object* shall not reference any other *NodeClasses*.

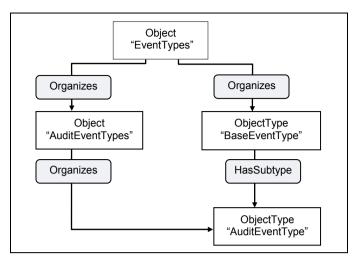


Figure 8 - EventTypes Organization

The intention of the "EventTypes" Object is that all EventTypes of the Server are either directly or indirectly accessible browsing HierarchicalReferences starting from this Node. It is required that the Server expose all its EventTypes, so a client can usefully subscribe to Events.

The "EventTypes" Object is formally defined in Table 89.

Attribute Value BrowseName ObjectTypes NodeClass BrowseName Comment References HasTypeDefinition ObjectType FolderType Defined in 6.6 ObjectType BaseEventType Defined in 6.4.2 Organizes

Table 89 - EventTypes Definition

# 8.3 Server Object and its containing Objects

# 8.3.1 General

The Server Object and its containing Objects and Variables are built in a way that the information can be gained in several ways, suitable for different kinds of clients having different requirements. Annex A gives an overview of the design decisions made in providing the information in that way, and discusses the pros and cons of the different approaches. Figure 9 gives an overview of the containing Objects and Variables of the diagnostic information of the Server Object and where the information can be found.

The SessionsDiagnosticsSummary *Object* contains one *Object* per session and a *Variable* with an array with one entry per session. This array is of a complex *DataType* holding the diagnostic information about the session. Each *Object* representing a session references a complex *Variable* containing the information about the session using the same DataType as the array containing information about all sessions. Such a *Variable* also exposes all its information as *Variables* with simple *DataTypes* containing the same information as in the complex *DataTypes*. Not shown in Figure 9 is the security-related information per session, which follows the same rules.

The *Server* provides an array with an entry per subscription containing diagnostic information about this subscription. Each entry of this array is also exposed as a complex *Variable* with *Variables* for each individual value. Each *Object* representing a session also provides such an array, but providing the subscriptions of the session.

The arrays containing information about the sessions or the subscriptions may be of different length for different connections with different user credentials since not all users may see all entries of the array. That also implies that the length of the array may change if the user is impersonated. Therefore clients that subscribe to a specific index range may get unexpected results.

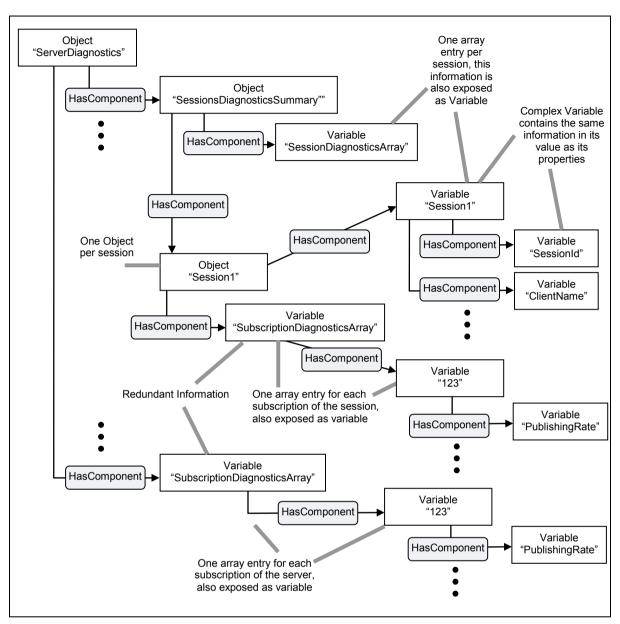


Figure 9 - Excerpt of Diagnostic Information of the Server

# 8.3.2 Server Object

This *Object* is used as the browse entry point for information about the *Server*. The content of this *Object* is already defined by its type definition in 6.3.1. It is formally defined in Table 90. The *Server Object* serves as root notifier, that is, its *EventNotifier Attribute* shall be set providing *Events*. All *Events* of the *Server* shall be accessible subscribing to the *Events* of the *Server Object*.

redundancyc

Attribute	Value				
BrowseName	Server				
References	Node Class	BrowseName	DataType	TypeDefinition	ModellingRule
HasTypeDefinition	Object Type	ServerType	Defined in 6.3.1		
HasProperty	Variable	ServerArray	String[]	PropertyType	Mandatory
HasProperty	Variable	NamespaceArray	String[]	PropertyType	Mandatory
HasComponent	Variable	ServerStatus <sup>a</sup>	ServerStatusDataType	ServerStatusType	Mandatory
HasProperty	Variable	ServiceLevel	Byte	PropertyType	Mandatory
HasComponent	Object	ServerCapabilities <sup>a</sup>		ServerCapabilities	Mandatory
HasComponent	Object	ServerDiagnostics <sup>a</sup>		ServerDiagnostics Type	Mandatory
HasComponent	Object	VendorServerInfo		vendor-specificb	Mandatory
HasComponent	Object	ServerRedundancy <sup>a</sup>		depends on supported	Mandatory

Table 90 - Server Definition

### 8.4 ModellingRule Objects

### 8.4.1 ExposesItsArray

The *ModellingRule ExposesItsArray* is defined in Part 3. Its representation in the *AddressSpace*, the "*ExposesItsArray*" *Object*, is formally defined in Table 91.

Table 91 - ExposesItsArray Definition

Attribute	Value		
BrowseName	ExposesItsArray		
References	NodeClass	BrowseName	Comment
HasTypeDefinition	ObjectType	ModellingRuleType	Defined in 6.5
HasProperty	Variable	NamingRule	Value set to "Constraint"

# 8.4.2 Mandatory

The *ModellingRule Mandatory* is defined in Part 3. Its representation in the *AddressSpace*, the "*Mandatory*" *Object*, is formally defined in Table 92.

**Table 92 - Mandatory Definition** 

Attribute Value		Value		
BrowseName		Mandatory		
References Nod		Class	BrowseName	Comment
HasTypeDefinition ObjectType		ctType	ModellingRuleType	Defined in 6.5
HasProperty	Varial	ble	NamingRule	Value set to "Mandatory"

#### 8.4.3 Optional

The ModellingRule Optional is defined in Part 3. Its representation in the AddressSpace, the "Optional" Object, is formally defined in Table 93.

Table 93 - Optional Definition

Attribute		Value		
BrowseName		Optional		
References No		deClass	BrowseName	Comment
HasTypeDefinition ObjectType		ModellingRuleType	Defined in 6.5	
HasProperty	Var	iable	NamingRule	Value set to "Optional"

Containing Objects and Variables of these Objects and Variables are defined by their BrowseName defined in the corresponding TypeDefinitionNode. The Nodeld is defined by the composed symbolic name described in 4.1.

b Shall be the *VendorServerInfo ObjectType* or one of its subtypes.

<sup>&</sup>lt;sup>c</sup> Shall be the *ServerRedundancyType* or one of its subtypes.

# 8.4.4 OptionalPlaceholder

The *ModellingRule OptionalPlaceholder* is defined in Part 3. Its representation in the *AddressSpace*, the "*OptionalPlaceholder*" *Object*, is formally defined in Table 94.

Table 94 - OptionalPlaceholder Definition

Attribute Value				
BrowseName		OptionalPlaceholder		
References No		deClass	BrowseName	Comment
HasTypeDefinition ObjectType		ojectType	ModellingRuleType	Defined in 6.5
HasProperty	Va	riable	NamingRule	Value set to "Constraint"

# 8.4.5 MandatoryPlaceholder

The *ModellingRule MandatoryPlaceholder* is defined in Part 3. Its representation in the *AddressSpace*, the "*MandatoryPlaceholder*" *Object*, is formally defined in Table 95.

Table 95 - MandatoryPlaceholder Definition

Attribute	Value				
BrowseName	MandatoryPlaceho	MandatoryPlaceholder			
References	NodeClass	BrowseName	Comment		
HasTypeDefinition ObjectType		ModellingRuleType	Defined in 6.5		
HasProperty	Variable	NamingRule	Value set to "Constraint"		

### 9 Standard Methods

#### 9.1 GetMonitoredItems

GetMonitoredItems is used to get information about monitored items of a subscription.Its intended use is defined in Part 4.

### **Signature**

```
GetMonitoredItems(
    [in] UInt32 subscriptionId
    [out] UInt32[] serverHandles
    [out] UInt32[] clientHandles
);
```

Argument	Description
subscriptionId	Identifier of the subscription.
serverHandles	Array of serverHandles for all <i>MonitoredItems</i> of the <i>Subscription</i> identified by subscriptionId
clientHandles	Array of clientHandles for all <i>MonitoredItems</i> of the <i>Subscription</i> identified by subscriptionId

# Method Result Codes (defined in Call Service)

Result Code	Description
Bad_SubscriptionIdInvalid	Defined in Part 4
Bad_UserAccessDenied	Defined in Part 4
	The Method was not called in the context of the Session that owns the Subscription.

Table 96 specifies the *AddressSpace* representation for the *GetMonitoredItems Method*.

Table 96 - GetMonitoredItems Method AddressSpace Definition

Attribute	Value				
BrowseName	GetMonitored	tems			
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory
HasProperty	Variable	OutputArguments	Argument[]	PropertyType	Mandatory

#### 9.2 ResendData

ResendData is used to get the latest values of the data monitored items of a Subscription. Its intended use is defined in Part 4.

### **Signature**

```
ResendData(
    [in] UInt32 subscriptionId
);
```

Argument	Description
subscriptionId	Identifier of the Subscription to refresh.

# Method Result Codes (defined in Call Service)

Result Code	Description
Bad_SubscriptionIdInvalid	Defined in Part 4
Bad_UserAccessDenied	Defined in Part 4
	The <i>Method</i> was not called in the context of the <i>Session</i> that owns the <i>Subscription</i> .

Table 97 specifies the AddressSpace representation for the ResendData Method.

Table 97 - ResendData Method AddressSpace Definition

Attribute	Value				
BrowseName	ResendData				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

### 9.3 SetSubscriptionDurable

SetSubscriptionDurable Method is used to set a Subscription into a mode where MonitoredItem data and event queues are stored and delivered even if an OPC UA Client was disconnected for a longer time or the OPC UA Server was restarted. Its intended use is defined in Part 4.

#### Signature

```
SetSubscriptionDurable(
    [in] UInt32 subscript
```

```
[in] UInt32 subscriptionId
[in] UInt32 lifetimeInHours
[out] UInt32 revisedLifetimeInHours
);
```

Argument	Description
subscriptionId	Identifier of the Subscription.
lifetimeInHours	The requested lifetime in hours for the durable Subscription.
revisedLifetimeInHours	The revised lifetime in hours the Server applied to the durable Subscription.

### Method Result Codes (defined in Call Service)

Result Code	Description	
Bad_SubscriptionIdInvalid	Defined in Part 4	
Bad_InvalidState	Defined in Part 4	
	This is returned when a Subscription already contains MonitoredItems.	
Bad_UserAccessDenied	Defined in Part 4	
	The Method was not called in the context of the Session that owns the Subscription.	

Table 98 specifies the AddressSpace representation for the SetSubscriptionDurable Method.

Table 98 - SetSubscriptionDurable Method AddressSpace Definition

Attribute	Value				
BrowseName	SetSubscription	SetSubscriptionDurable			
References	NodeClass	NodeClass BrowseName DataType TypeDefinition ModellingRule			
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory
HasProperty	Variable	OutputArguments	Argument[]	PropertyType	Mandatory

## 9.4 RequestServerStateChange

The Method RequestServerStateChange allows a Client to request a state change in the Server.

The *Client* shall provide credentials with administrative rights when invoking this *Method* on the *Server*.

## Signature

#### RequestServerStateChange(

```
[in] ServerState state
[in] DateTime estimatedReturnTime
[in] UInt32 secondsTillShutdown
[in] LocalizedText reason
[in] Boolean restart
);
```

Argument	Description	
state	The requested target state for the Server. If the new state is accepted by the Server, the State in the ServerStatus is updated with the new value.	
estimatedReturnTime	Indicates the time at which the <i>Server</i> is expected to be available in the state RUNNING_0. If no estimate is known, a null <i>DateTime</i> shall be provided. This time will be available in the <i>EstimatedReturnTime</i> Property.	
	This parameter shall be ignored by the Server and the Property <i>EstimatedReturnTime</i> shall be set to null if the new state is RUNNING_0.	
secondsTillShutdown	The number of seconds until a <i>Server</i> shutdown. This parameter is ignored unless the state is set to SHUTDOWN_4 or restart is set to True.	
reason	A localized text string that describes the reason for the state change request.	
restart	A flag indicating if the Server should be restarted before it attempts to change into the requested change. If the restart is True the server changes it state to SHUTDOWN_4 before the restart if secondsTillShudown is not 0.	

## Method Result Codes (defined in Call Service)

Result Code	Description
Bad_UserAccessDenied	The current user is not authorized to invoke the method
Bad_InvalidState	The requested state was not accepted by the server

Table 99 specifies the *AddressSpace* representation for the *RequestServerStateChange Method*.

Table 99 - RequestServerStateChange Method AddressSpace Definition

Attribute	Value				
BrowseName	RequestServe	RequestServerStateChange			
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

## 10 Standard Views

There are no core OPC UA Views defined.

## 11 Standard ReferenceTypes

#### 11.1 References

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 100.

Table 100 - References ReferenceType

Attributes	Value		
BrowseName	References		
InverseName			
Symmetric	True		
IsAbstract	True		
References	NodeClass	BrowseName	Comment
HasSubtype	ReferenceType	HierarchicalReferences	Defined in 11.2
HasSubtype	ReferenceType	NonHierarchicalReferences	Defined in 11.3

#### 11.2 HierarchicalReferences

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 101.

Table 101 - HierarchicalReferences ReferenceType

Attributes	Value			
BrowseName	HierarchicalReferer	nces		
InverseName				
Symmetric	False	False		
IsAbstract	True			
References	NodeClass	BrowseName	Comment	
HasSubtype	ReferenceType	HasChild	Defined in 11.4	
HasSubtype	ReferenceType	Organizes	Defined in 11.6	
HasSubtype	ReferenceType	HasEventSource	Defined in 11.15	

#### 11.3 NonHierarchicalReferences

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 102.

Table 102 - NonHierarchicalReferences ReferenceType

Attributes	Value			
BrowseName	NonHierarchicalRef	NonHierarchicalReferences		
InverseName				
Symmetric	True			
IsAbstract	True			
References	NodeClass	BrowseName	Comment	
HasSubtype	ReferenceType	HasModellingRule	Defined in 11.11	
HasSubtype	ReferenceType	HasTypeDefinition	Defined in 11.12	
HasSubtype	ReferenceType	HasEncoding	Defined in 11.13	
HasSubtype	ReferenceType	HasDescription	Defined in 11.14	
HasSubtype	ReferenceType	GeneratesEvent	Defined in 11.17	

#### 11.4 HasChild

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 103.

Table 103 - HasChild ReferenceType

Attributes	Value		
BrowseName	HasChild		
InverseName			
Symmetric	False		
IsAbstract	True		
References	NodeClass	BrowseName	Comment
HasSubtype	ReferenceType	Aggregates	Defined in 11.5
HasSubtype	ReferenceType	HasSubtype	Defined in 11.10

#### 11.5 Aggregates

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 104.

Table 104 - Aggregates ReferenceType

Attributes	Value		
BrowseName	Aggregates		
InverseName			
Symmetric	False		
IsAbstract	True		
References	NodeClass	BrowseName	Comment
HasSubtype	ReferenceType	HasComponent	Defined in 11.7
HasSubtype	ReferenceType	HasProperty	Defined in 11.9

## 11.6 Organizes

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 105.

Table 105 - Organizes ReferenceType

Attributes	Value		
BrowseName	Organizes		
InverseName	OrganizedBy		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

## 11.7 HasComponent

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 106.

Table 106 - HasComponent ReferenceType

Attributes	Value		
BrowseName	HasComponent		
InverseName	ComponentOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment
HasSubtype	ReferenceType	HasOrderedComponent	Defined in 11.8

## 11.8 HasOrderedComponent

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 107.

Table 107 - HasOrderedComponent ReferenceType

Attributes	Value			
BrowseName	HasOrderedComp	HasOrderedComponent		
InverseName	OrderedCompone	entOf		
Symmetric	False			
IsAbstract	False			
References	NodeClass	BrowseName	Comment	

# 11.9 HasProperty

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 108.

Table 108 - HasProperty ReferenceType

Attributes	Value		
BrowseName	HasProperty		
InverseName	PropertyOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

## 11.10 HasSubtype

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 109.

Table 109 - HasSubtype ReferenceType

Attributes	Value		
BrowseName	HasSubtype		
InverseName	SubtypeOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

#### 11.11 HasModellingRule

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 110.

Table 110 - HasModellingRule ReferenceType

Attributes	Value		
BrowseName	HasModellingRule		
InverseName	ModellingRuleOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

## 11.12 HasTypeDefinition

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 111.

Table 111 - HasTypeDefinition ReferenceType

Attributes	Value		
BrowseName	HasTypeDefinition		
InverseName	TypeDefinitionOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

## 11.13 HasEncoding

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 112.

Table 112 - HasEncoding ReferenceType

Attributes	Value		
BrowseName	HasEncoding		
InverseName	EncodingOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

## 11.14 HasDescription

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 113.

Table 113 - HasDescription ReferenceType

Attributes	Value		
BrowseName	HasDescription		
InverseName	DescriptionOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

#### 11.15 HasEventSource

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 114.

Table 114 - HasEventSource ReferenceType

Attributes	Value		
BrowseName	HasEventSource		
InverseName	EventSourceOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment
HasSubtype	ReferenceType	HasNotifier	Defined in 11.16

#### 11.16 HasNotifier

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 115.

Table 115 - HasNotifier ReferenceType

Attributes	Value		
BrowseName	HasNotifier		
InverseName	NotifierOf		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

#### 11.17 GeneratesEvent

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 116.

Table 116 - GeneratesEvent ReferenceType

Attributes	Value		
BrowseName	GeneratesEvent		
InverseName	GeneratedBy		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment
HasSubtype	ReferenceType	AlwaysGeneratesEvent	Defined in 11.18

#### 11.18 AlwaysGeneratesEvent

This standard *ReferenceType* is defined in Part 3. Its representation in the *AddressSpace* is specified in Table 117.

Table 117 - AlwaysGeneratesEvent ReferenceType

Attributes	Value		
BrowseName	AlwaysGeneratesEvent		
InverseName	AlwaysGeneratedBy		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

# 12 Standard DataTypes

## 12.1 Overview

An OPC UA Server need not expose its DataTypes in its AddressSpace. Independent of the exposition of DataTypes, it shall support the DataTypes as described in the following subclauses.

## 12.2 DataTypes defined in Part 3

Part 3 defines a set of *DataTypes*. Their representation in the *AddressSpace* is defined in Table 118.

Table 118 - Part 3 DataType Definitions

BrowseName
BaseDataType
Argument
Boolean
Byte
ByteString
DateTime
Double
Duration
Enumeration
Float
Guid
IdType
SByte
Integer
Int16
Int32
Int64
Image
ImageBMP
ImageGIF
ImageJPG
ImagePNG
LocaleId
LocalizedText
NamingRuleType
NodeClass
Nodeld
Number
QualifiedName
String
Structure
Time
UInteger
UInt16
UInt32
UInt64
UtcTime
XmlElement
TimeZoneDataType
EnumValueType
OptionSet
Union
NormalizedString
DecimalString
DurationString
TimeString
DateString
Datooting

Of the DataTypes defined in Table 118 only some are the sources of References as defined in the following tables.

The References of the BaseDataType are defined in Table 119.

Table 119 - BaseDataType Definition

Attributes	Value	Value					
BrowseName	BaseDataType	BaseDataType					
IsAbstract	TRUE						
References	NodeClass	BrowseName	IsAbstract				
HasSubtype	DataType	Boolean	FALSE				
HasSubtype	DataType	ByteString	FALSE				
HasSubtype	DataType	DateTime	FALSE				
HasSubtype	DataType	DataValue	FALSE				
HasSubtype	DataType	DiagnosticInfo	FALSE				
HasSubtype	DataType	Enumeration	TRUE				
HasSubtype	DataType	ExpandedNodeId	FALSE				
HasSubtype	DataType	Guid	FALSE				
HasSubtype	DataType	LocalizedText	FALSE				
HasSubtype	DataType	Nodeld	FALSE				
HasSubtype	DataType	Number	TRUE				
HasSubtype	DataType	QualifiedName	FALSE				
HasSubtype	DataType	String	FALSE				
HasSubtype	DataType	Structure	TRUE				
HasSubtype	DataType	XmlElement	FALSE				

The References of Structure are defined in Table 120.

**Table 120 - Structure Definition** 

Attributes	Value				
BrowseName	Structure				
IsAbstract	TRUE				
References	NodeClass	BrowseName	IsAbstract		
HasSubtype	DataType	Argument	FALSE		
HasSubtype	DataType	UserIdentityToken	TRUE		
HasSubtype	DataType	AddNodesItem	FALSE		
HasSubtype	DataType	AddReferencesItem	FALSE		
HasSubtype	DataType	DeleteNodesItem	FALSE		
HasSubtype	DataType	DeleteReferencesItem	FALSE		
HasSubtype	DataType	ApplicationDescription	FALSE		
HasSubtype	DataType	BuildInfo	FALSE		
HasSubtype	DataType	RedundantServerDataType	FALSE		
HasSubtype	DataType	SamplingIntervalDiagnosticsDataType	FALSE		
HasSubtype	DataType	ServerDiagnosticsSummaryDataType	FALSE		
HasSubtype	DataType	ServerStatusDataType	FALSE		
HasSubtype	DataType	SessionDiagnosticsDataType	FALSE		
HasSubtype	DataType	SessionSecurityDiagnosticsDataType	FALSE		
HasSubtype	DataType	ServiceCounterDataType	FALSE		
HasSubtype	DataType	StatusResult	FALSE		
HasSubtype	DataType	SubscriptionDiagnosticsDataType	FALSE		
HasSubtype	DataTypes	ModelChangeStructureDataType	FALSE		
HasSubtype	DataTypes	SemanticChangeStructureDataType	FALSE		
HasSubtype	DataType	SignedSoftwareCertificate	FALSE		
HasSubtype	DataType	TimeZoneDataType	FALSE		
HasSubtype	DataType	EnumValueType	FALSE		
HasSubtype	DataType	OptionSet	TRUE		
HasSubtype	DataType	Union	TRUE		

The References of Enumeration are defined in Table 121.

**Table 121 – Enumeration Definition** 

Attributes	Value					
BrowseName	Enumeration	Enumeration				
IsAbstract	TRUE					
References	NodeClass	BrowseName	IsAbstract			
HasSubtype	DataType	IdType	FALSE			
HasSubtype	DataType	NamingRuleType	FALSE			
HasSubtype	DataType	NodeClass	FALSE			
HasSubtype	DataType	SecurityTokenRequestType	FALSE			
HasSubtype	DataType	MessageSecurityMode	FALSE			
HasSubtype	DataType	RedundancySupport	FALSE			
HasSubtype	DataType	ServerState	FALSE			

The References of ByteString are defined in Table 122.

Table 122 - ByteString Definition

Attributes	Value		
BrowseName	ByteString		
IsAbstract	TRUE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	Image	TRUE

The References of Number are defined in Table 123.

Table 123 - Number Definition

Attributes	Value		
BrowseName	Number		
IsAbstract	TRUE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	Integer	TRUE
HasSubtype	DataType	UInteger	TRUE
HasSubtype	DataType	Double	FALSE
HasSubtype	DataType	Float	FALSE

The References of Double are defined in Table 124.

**Table 124 - Double Definition** 

Attributes	Value		
BrowseName	Double		
IsAbstract	FALSE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	Duration	FALSE

The References of Integer are defined in Table 125.

**Table 125 – Integer Definition** 

Attributes	Value		
BrowseName	Integer		
IsAbstract	TRUE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	SByte	FALSE
HasSubtype	DataType	Int16	FALSE
HasSubtype	DataType	Int32	FALSE
HasSubtype	DataType	Int64	FALSE

The References of DateTime are defined in Table 126.

Table 126 - DateTime Definition

Attributes	Value		
BrowseName	DateTime		
IsAbstract	FALSE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	UtcTime	FALSE

The References of String are defined in Table 127.

Table 127 - String Definition

Attributes	Value		
BrowseName	String		
IsAbstract	FALSE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	LocaleId	FALSE
HasSubtype	DataType	NumericRange	FALSE
HasSubtype	DataType	NormalizedString	FALSE
HasSubtype	DataType	DecimalString	FALSE
HasSubtype	DataType	DurationString	FALSE
HasSubtype	DataType	TimeString	FALSE
HasSubtype	DataType	DateString	FALSE

The References of UInteger are defined in Table 128.

Table 128 - UInteger Definition

Attributes	Value		
BrowseName	UInteger		
IsAbstract	TRUE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	Byte	FALSE
HasSubtype	DataType	UInt16	FALSE
HasSubtype	DataType	UInt32	FALSE
HasSubtype	DataType	UInt64	FALSE

The References of Image are defined in Table 129.

Table 129 - Image Definition

Attributes	Value		
BrowseName	Image		
IsAbstract	TRUE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	ImageBMP	FALSE
HasSubtype	DataType	ImageGIF	FALSE
HasSubtype	DataType	ImageJPG	FALSE
HasSubtype	DataType	ImagePNG	FALSE

The References of UInt64 are defined in Table 130.

Table 130 - UInt64 Definition

Attributes	Value		
BrowseName	UInt64		
IsAbstract	FALSE		
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	BitFieldMaskDataType	FALSE

## 12.3 DataTypes defined in Part 4

Part 4 defines a set of *DataTypes*. Their representation in the *AddressSpace* is defined in Table 131.

Table 131 - Part 4 DataType Definitions

BrowseName
AnonymousIdentityToken
DataValue
DiagnosticInfo
ExpandedNodeld
SignedSoftwareCertificate
UserIdentityToken
UserNameldentityToken
X509IdentityToken
WssldentityToken
SecurityTokenRequestType
AddNodesItem
AddReferencesItem
DeleteNodesItem
DeleteReferencesItem
NumericRange
MessageSecurityMode
ApplicationDescription

The SecurityTokenRequestType is an enumeration that is defined as the type of the requestType parameter of the OpenSecureChannel Service in Part 4.

The *AddNodesItem* is a structure that is defined as the type of the nodesToAdd parameter of the AddNodes *Service* in Part 4.

The AddReferencesItem is a structure that is defined as the type of the referencesToAdd parameter of the AddReferences Service in Part 4.

The *DeleteNodesItem* is a structure that is defined as the type of the nodesToDelete parameter of the DeleteNodes *Service* in Part 4.

The *DeleteReferencesItem* is a structure that is defined as the type of the referencesToDelete parameter of the DeleteReferences *Service* in Part 4.

The References of UserIdentityToken are defined in Table 132.

Table 132 - UserldentityToken Definition

Attributes	Value		
BrowseName	UserIdentityToken	UserldentityToken	
IsAbstract	TRUE	TRUE	
References	NodeClass	BrowseName	IsAbstract
HasSubtype	DataType	UserNameIdentityToken	FALSE
HasSubtype	DataType	X509IdentityToken	FALSE
HasSubtype	DataType	WssIdentityToken	FALSE
HasSubtype	DataType	AnonymousIdentityToken	FALSE

#### 12.4 BuildInfo

This structure contains elements that describe the build information of the *Server*. Its elements are defined in Table 133.

Table 133 - BuildInfo Structure

Name	Туре	Description
BuildInfo	structure	Information that describes the build of the software.
productUri	String	URI that identifies the software
manufacturerName	String	Name of the software manufacturer.
productName	String	Name of the software.
softwareVersion	String	Software version
buildNumber	String	Build number
buildDate	UtcTime	Date and time of the build.

Its representation in the AddressSpace is defined in Table 134.

Table 134 - BuildInfo Definition

Attributes	Value
BrowseName	BuildInfo

## 12.5 RedundancySupport

This *DataType* is an enumeration that defines the redundancy support of the *Server*. Its values are defined in Table 135.

Table 135 - RedundancySupport Values

Value	Description	
NONE_0	None means that there is no redundancy support.	
COLD_1	Cold means that the server supports cold redundancy as defined in Part 4.	
WARM_2	Warm means that the server supports warm redundancy as defined in Part 4.	
HOT_3	Hot means that the server supports hot redundancy as defined in Part 4.	
TRANSPARENT_4	Transparent means that the server supports transparent redundancy as defined in Part 4.	
HOT_AND_MIRRORED_5	HotAndMirrored means that the server supports HotAndMirrored redundancy as defined in Part 4.	

See Part 4 for a more detailed description of the different values.

Its representation in the AddressSpace is defined in Table 136.

Table 136 - RedundancySupport Definition

Attributes	Value
BrowseName	RedundancySupport

#### 12.6 ServerState

This *DataType* is an enumeration that defines the execution state of the *Server*. Its values are defined in Table 137.

Table 137 - ServerState Values

Value	Description		
RUNNING_0	The server is running normally. This is the usual state for a server.		
FAILED_1	A vendor-specific fatal error has occurred within the server. The server is no longer functioning. The recovery procedure from this situation is vendor-specific. Most <i>Service</i> requests should be expected to fail.		
NO_CONFIGURATION_2	The server is running but has no configuration information loaded and therefore does not transfer data.		
SUSPENDED_3	The server has been temporarily suspended by some vendor-specific method and is not receiving or sending data.		
SHUTDOWN_4	The server has shut down or is in the process of shutting down. Depending on the implementation, this might or might not be visible to clients.		
TEST_5	The server is in Test Mode. The outputs are disconnected from the real hardware, but the server will otherwise behave normally. Inputs may be real or may be simulated depending on the vendor implementation. StatusCode will generally be returned normally.		
COMMUNICATION_FAULT_6	The server is running properly, but is having difficulty accessing data from its data sources. This may be due to communication problems or some other problem preventing the underlying device, control system, etc. from returning valid data. It may be a complete failure, meaning that no data is available, or a partial failure, meaning that some data is still available. It is expected that items affected by the fault will individually return with a BAD FAILURE status code indication for the items.		
UNKNOWN_7	This state is used only to indicate that the OPC UA server does not know the state of underlying servers.		

Its representation in the AddressSpace is defined in Table 138.

Table 138 - ServerState Definition

Attributes	Value
BrowseName	ServerState

## 12.7 RedundantServerDataType

This structure contains elements that describe the status of the *Server*. Its composition is defined in Table 139.

Table 139 - RedundantServerDataType Structure

Name	Туре	Description
RedundantServerDataType	structure	
serverId	String	The Id of the server (not the URI).
serviceLevel	Byte	The service level of the server.
serverState	ServerState	The current state of the server.

Its representation in the AddressSpace is defined in Table 140.

Table 140 - RedundantServerDataType Definition

Attributes	Value
BrowseName	RedundantServerDataType

## 12.8 SamplingIntervalDiagnosticsDataType

This structure contains diagnostic information about the sampling rates currently used by the *Server*. Its elements are defined in Table 141.

Table 141 - SamplingIntervalDiagnosticsDataType Structure

Name	Туре	Description
SamplingIntervalDiagnosticsDataType	structure	
samplingInterval	Duration	The sampling interval in milliseconds.
sampledMonitoredItemsCount	UInt32	The number of <i>MonitoredItems</i> being sampled at this sample rate.
maxSampledMonitoredItemsCount	UInt32	The maximum number of <i>MonitoredItems</i> being sampled at this sample rate at the same time since the server was started (restarted).
disabledMonitoredItemsSamplingCount	UInt32	The number of <i>MonitoredItems</i> at this sample rate whose sampling currently disabled.

Its representation in the AddressSpace is defined in Table 142.

Table 142 - SamplingIntervalDiagnosticsDataType Definition

Attributes	Value
BrowseName	SamplingIntervalDiagnosticsDataType

## 12.9 ServerDiagnosticsSummaryDataType

This structure contains diagnostic summary information for the *Server*. Its elements are defined in Table 143.

Table 143 - ServerDiagnosticsSummaryDataType Structure

Name	Туре	Description
ServerDiagnosticsSummaryDataType	structure	
serverViewCount	UInt32	The number of server-created views in the server.
currentSessionCount	UInt32	The number of client sessions currently established in the server.
cumulatedSessionCount	UInt32	The cumulative number of client sessions that have been established in the server since the server was started (or restarted). This includes the <i>currentSessionCount</i> .
securityRejectedSessionCount	UInt32	The number of client session establishment requests (ActivateSession and CreateSession) that were rejected due to security constraints since the server was started (or restarted).
rejectedSessionCount	UInt32	The number of client session establishment requests (ActivateSession and CreateSession) that were rejected since the server was started (or restarted). This number includes the securityRejectedSessionCount.
sessionTimeoutCount	UInt32	The number of client sessions that were closed due to timeout since the server was started (or restarted).
sessionAbortCount	UInt32	The number of client sessions that were closed due to errors since the server was started (or restarted).
publishingIntervalCount	UInt32	The number of publishing intervals currently supported in the server.
currentSubscriptionCount	UInt32	The number of subscriptions currently established in the server.
cumulatedSubscriptionCount	UInt32	The cumulative number of subscriptions that have been established in the server since the server was started (or restarted). This includes the <i>currentSubscriptionCount</i> .
securityRejectedRequestsCount	UInt32	The number of requests that were rejected due to security constraints since the server was started (or restarted). The requests include all <i>Services</i> defined in Part 4, also requests to create sessions.
rejectedRequestsCount	UInt32	The number of requests that were rejected since the server was started (or restarted). The requests include all <i>Services</i> defined in Part 4, also requests to create sessions. This number includes the <i>securityRejectedRequestsCount</i> .

Its representation in the AddressSpace is defined in Table 144.

Table 144 - ServerDiagnosticsSummaryDataType Definition

Attributes	Value
BrowseName	ServerDiagnosticsSummaryDataType

## 12.10 ServerStatusDataType

This structure contains elements that describe the status of the *Server*. Its composition is defined in Table 145.

Table 145 - ServerStatusDataType Structure

Name	Туре	Description	
ServerStatusDataType	structure		
startTime	UtcTime	Time (UTC) the server was started. This is constant for the server instance and is not reset when the server changes state. Each instance of a server should keep the time when the process started.	
currentTime	UtcTime	The current time (UTC) as known by the server.	
state	ServerState	The current state of the server. Its values are defined in 12.6.	
buildInfo	BuildInfo		
secondsTillShutdown	UInt32	Approximate number of seconds until the server will be shut down. The value is only relevant once the state changes into SHUTDOWN.	
shutdownReason	LocalizedText	An optional localized text indicating the reason for the shutdown. The value is only relevant once the state changes into SHUTDOWN.	

Its representation in the AddressSpace is defined in Table 146.

Table 146 - ServerStatusDataType Definition

Attributes	Value
BrowseName	ServerStatusDataType

## 12.11 SessionDiagnosticsDataType

This structure contains diagnostic information about client sessions. Its elements are defined in Table 147. Most of the values represented in this structure provide information about the number of calls of a *Service*, the number of currently used *MonitoredItems*, etc. Those numbers need not provide the exact value; they need only provide the approximate number, so that the *Server* is not burdened with providing the exact numbers.

Table 147 - SessionDiagnosticsDataType Structure

Name	Туре	Description
SessionDiagnosticsDataType	structure	
sessionId	Nodeld	Server-assigned identifier of the session.
sessionName	String	The name of the session provided in the CreateSession request.
clientDesription	Application Description	The description provided by the client in the CreateSession request.
serverUri	String	The serverUri request in the CreateSession request.
endpointUrl	String	The endpointUrl passed by the client to the CreateSession request.
localelds	LocaleId[]	Array of Localelds specified by the client in the open session call.
actualSessionTimeout	Duration	The requested session timeout specified by the client in the open session call.
maxResponseMessageSize	UInt32	The maximum size for the response message sent to the client.
clientConnectionTime	UtcTime	The server timestamp when the client opens the session.
clientLastContactTime	UtcTime	The server timestamp of the last request of the client in the context of the session.
currentSubscriptionsCount	UInt32	The number of subscriptions currently used by the session.
currentMonitoredItemsCount	UInt32	The number of MonitoredItems currently used by the session
currentPublishRequestsInQueue	UInt32	The number of publish requests currently in the queue for the session.
currentPublishTimerExpirations	UInt32	The number of publish timer expirations when there are data to be sent, but there are no publish requests for this session. The value shall be 0 if there are no data to be sent or publish requests queued.
totalRequestsCount	ServiceCounter DataType	Counter of all Services, identifying the number of received requests of any Services on the session.
unauthorizedRequestsCount	UInt32	Counter of all Services, identifying the number of Service requests that were rejected due to authorization failure
readCount	ServiceCounter DataType	Counter of the Read <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
historyReadCount	ServiceCounter DataType	Counter of the HistoryRead <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
writeCount ServiceCoun DataType		Counter of the Write <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
historyUpdateCount	ServiceCounter DataType	Counter of the HistoryUpdate Service, identifying the number of received requests of this Service on the session.
callCount	ServiceCounter DataType	Counter of the Call <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
createMonitoredItemsCount	ServiceCounter DataType	Counter of the CreateMonitoredItems Service, identifying the number of received requests of this Service on the session.
modifyMonitoredItemsCount	ServiceCounter DataType	Counter of the ModifyMonitoredItems <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
setMonitoringModeCount	ServiceCounter DataType	Counter of the SetMonitoringMode <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
setTriggeringCount	ServiceCounter DataType	Counter of the SetTriggering Service, identifying the number of received requests of this Service on the session.
deleteMonitoredItemsCount	ServiceCounter DataType	Counter of the DeleteMonitoredItems Service, identifying the number of received requests of this Service on the session.
createSubscriptionCount	ServiceCounter DataType	Counter of the CreateSubscription Service, identifying the number of received requests of this Service on the session.
modifySubscriptionCount	ServiceCounter DataType	Counter of the ModifySubscription <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
setPublishingModeCount	ServiceCounter DataType	Counter of the SetPublishingMode <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
publishCount	ServiceCounter DataType	Counter of the Publish <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.

Name	Туре	Description
republishCount	ServiceCounter DataType	Counter of the Republish Service, identifying the number of received requests of this Service on the session.
transferSubscriptionsCount	ServiceCounter DataType	Counter of the TransferSubscriptions <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
deleteSubscriptionsCount	ServiceCounter DataType	Counter of the DeleteSubscriptions Service, identifying the number of received requests of this Service on the session.
addNodesCount	ServiceCounter DataType	Counter of the AddNodes Service, identifying the number of received requests of this Service on the session.
addReferencesCount	ServiceCounter DataType	Counter of the AddReferences Service, identifying the number of received requests of this Service on the session.
deleteNodesCount	ServiceCounter DataType	Counter of the DeleteNodes Service, identifying the number of received requests of this Service on the session.
deleteReferencesCount	ServiceCounter DataType	Counter of the DeleteReferences Service, identifying the number of received requests of this Service on the session.
browseCount	ServiceCounter DataType	Counter of the Browse Service, identifying the number of received requests of this Service on the session.
browseNextCount	ServiceCounter DataType	Counter of the BrowseNext Service, identifying the number of received requests of this Service on the session.
translateBrowsePathsToNodeIdsCount	ServiceCounter DataType	Counter of the TranslateBrowsePathsToNodelds Service, identifying the number of received requests of this Service on the session.
queryFirstCount	ServiceCounter DataType	Counter of the QueryFirst <i>Service</i> , identifying the number of received requests of this <i>Service</i> on the session.
queryNextCount	ServiceCounter DataType	Counter of the QueryNext Service, identifying the number of received requests of this Service on the session.
registerNodesCount	ServiceCounter DataType	Counter of the RegisterNodes Service, identifying the number of received requests of this Service on the session.
unregisterNodesCount	ServiceCounter DataType	Counter of the UnregisterNodes Service, identifying the number of received requests of this Service on the session.

Its representation in the AddressSpace is defined in Table 148.

Table 148 - SessionDiagnosticsDataType Definition

Attributes	Value
BrowseName	SessionDiagnosticsDataType

## 12.12 SessionSecurityDiagnosticsDataType

This structure contains security-related diagnostic information about client sessions. Its elements are defined in Table 149. Because this information is security-related, it shall only be accessible by authorised users.

Table 149 - SessionSecurityDiagnosticsDataType Structure

Name	Туре	Description
SessionSecurityDiagnosticsDataType	structure	
sessionId	Nodeld	Server-assigned identifier of the session.
clientUserIdOfSession	String	Name of authenticated user when creating the session.
clientUserIdHistory	String[]	Array containing the name of the authenticated user currently active (either from creating the session or from calling the <i>ActivateSession Service</i> ) and the history of those names. Each time the active user changes, an entry shall be made at the end of the array. The active user is always at the end of the array. Servers may restrict the size of this array, but shall support at least a size of 2. How the name of the authenticated user can be obtained from the system via the information received as part of the session establishment is defined in 6.4.3.
authenticationMechanism	String	Type of authentication currently used by the session. The String shall be one of the lexical names of the <i>UserIdentityTokenType</i> Enum.
encoding	String	Which encoding is used on the wire. The String shall be 'XML' or 'UA Binary'.
transportProtocol	String	Which transport protocol is used. The String shall be the scheme from the URL used to establish the session. For example, 'opc.tcp' or 'https'
securityMode	MessageSecurityMode	The message security mode used for the session.
securityPolicyUri	String	The name of the security policy used for the session.
clientCertificate	ByteString	The application instance certificate provided by the client in the CreateSession request.

Its representation in the AddressSpace is defined in Table 150.

Table 150 - SessionSecurityDiagnosticsDataType Definition

Attributes	Value
BrowseName	SessionSecurityDiagnosticsDataType

## 12.13 ServiceCounterDataType

This structure contains diagnostic information about subscriptions. Its elements are defined in Table 151.

Table 151 - ServiceCounterDataType Structure

Name	Туре	Description
ServiceCounterDataType	structure	
totalCount	UInt32	The number of Service requests that have been received.
errorCount	UInt32	The total number of Service requests that were rejected.

Its representation in the AddressSpace is defined in Table 152.

Table 152 - ServiceCounterDataType Definition

Attributes	Value
BrowseName	ServiceCounterDataType

## 12.14 StatusResult

This structure combines a *StatusCode* and diagnostic information and can, for example, be used by Methods to return several *StatusCodes* and the corresponding diagnostic information that are not handled in the *Call Service* parameters. The elements of this *DataType* are defined in Table 153. Whether the diagnosticInfo is returned depends on the setting of the *Service* calls.

## **Table 153 – StatusResult Structure**

Name	Туре	Description
StatusResult	structure	
statusCode	StatusCode	The StatusCode.
diagnosticInfo	DiagnosticInfo	The diagnostic information for the statusCode.

Its representation in the AddressSpace is defined in Table 154.

**Table 154 - StatusResult Definition** 

Attributes	Value	
BrowseName	StatusResult	

## 12.15 SubscriptionDiagnosticsDataType

This structure contains diagnostic information about subscriptions. Its elements are defined in Table 155.

Table 155 - SubscriptionDiagnosticsDataType Structure

Name	Type	Description
SubscriptionDiagnosticsDataType	structure	
sessionId	Nodeld	Server-assigned identifier of the session the subscription belongs to.
subscriptionId	UInt32	Server-assigned identifier of the subscription.
priority	Byte	The priority the client assigned to the subscription.
publishingInterval	Duration	The publishing interval of the subscription in milliseconds
maxKeepAliveCount	UInt32	The maximum keep-alive count of the subscription.
maxLifetimeCount	UInt32	The maximum lifetime count of the subscription.
maxNotificationsPerPublish	UInt32	The maximum number of notifications per publish response.
publishingEnabled	Boolean	Whether publishing is enabled for the subscription.
modifyCount	UInt32	The number of ModifySubscription requests received for the
•		subscription.
enableCount	UInt32	The number of times the subscription has been enabled.
disableCount	UInt32	The number of times the subscription has been disabled.
republishRequestCount	UInt32	The number of Republish <i>Service</i> requests that have been received and processed for the subscription.
republishMessageRequestCount	UInt32	The total number of messages that have been requested to be republished for the subscription.  Note that due to the design of the Republish Service this number is always equal to the republishRequestCount.
republishMessageCount	UInt32	The number of messages that have been successfully republished for the subscription.
transferRequestCount	UInt32	The total number of TransferSubscriptions <i>Service</i> requests that have been received for the subscription.
transferredToAltClientCount	UInt32	The number of times the subscription has been transferred to an alternate client.
transferredToSameClientCount	UInt32	The number of times the subscription has been transferred to an alternate session for the same client.
publishRequestCount	UInt32	The number of Publish <i>Service</i> requests that have been received and processed for the subscription.
dataChangeNotificationsCount	UInt32	The number of data change Notifications sent by the subscription.
eventNotificationsCount	UInt32	The number of Event Notifications sent by the subscription.
notificationsCount	UInt32	The total number of Notifications sent by the subscription.
latePublishRequestCount	UInt32	The number of times the subscription has entered the LATE State, i.e. the number of times the publish timer expires and there are unsent notifications.
currentKeepAliveCount	UInt32	The number of times the subscription has entered the KEEPALIVE State.
currentLifetimeCount	UInt32	The current lifetime count of the subscription.
unacknowledgedMessageCount	UInt32	The number of unacknowledged messages saved in the republish queue.
discardedMessageCount	UInt32	The number of messages that were discarded before they were acknowledged.
monitoredItemCount	UInt32	The total number of monitored items of the subscription, including the disabled monitored items.
disabledMonitoredItemCount	UInt32	The number of disabled monitored items of the subscription.
monitoringQueueOverflowCount	UInt32	The number of times a monitored item dropped notifications because of a queue overflow.
nextSequenceNumber	UInt32	Sequence number for the next notification message.
eventQueueOverflowCount	UInt32	The number of times a monitored item in the subscription has generated an Event of type EventQueueOverflowEventType.

Its representation in the AddressSpace is defined in Table 156.

Table 156 - SubscriptionDiagnosticsDataType Definition

Attributes	Value
BrowseName	SubscriptionDiagnosticsDataType

# 12.16 ModelChangeStructureDataType

This structure contains elements that describe changes of the model. Its composition is defined in Table 157.

Table 157 - ModelChangeStructureDataType Structure

Name	Type	Description			
ModelChangeStructure DataType	structure				
affected	Nodeld	Nodeld of the Node that was changed. The client should assume that the affected Node has been created or deleted, had a Reference added or deleted, or the DataType has changed as described by the verb.			
affectedType	Nodeld	If the affected Node was an Object or Variable, affectedType contains the Nodeld of the TypeDefinitionNode of the affected Node. Otherwise it is set to null.			
verb	Byte			ing to the affected Node.  Integer used as bit mask with the structure defined in the	
		Field	Bit	Description	
		NodeAdded	0	Indicates the affected Node has been added.	
		NodeDeleted	1	Indicates the affected Node has been deleted.	
		ReferenceAdded	2	Indicates a <i>Reference</i> has been added. The affected <i>Node</i> may be either a <i>SourceNode</i> or <i>TargetNode</i> . Note that an added bidirectional <i>Reference</i> is reflected by two ChangeStructures.	
		affected <i>Node</i> may be <i>TargetNode</i> . Note the		Indicates a Reference has been deleted. The affected Node may be either a SourceNode or TargetNode. Note that a deleted bidirectional Reference is reflected by two ChangeStructures.	
		DataTypeChanged 4 This verb may be used only for affected Nodes that are Variables or VariableTypes. It indicates that the DataType Attribute has changed.			
		Reserved 5:7 Reserved for future use. Shall always be zero.			
		A verb may identify several changes on the affected Node at once. This feature she used if event compression is used (see Part 3 for details).  Note that all <i>verbs</i> shall always be considered in the context where the ModelChangeStructureDataType is used. A NodeDeleted may indicate that a <i>Noce</i> was removed from a view but still exists in other <i>Views</i> .			

Its representation in the AddressSpace is defined in Table 158.

Table 158 - ModelChangeStructureDataType Definition

Attributes	Value
BrowseName	ModelChangeStructureDataType

## 12.17 SemanticChangeStructureDataType

This structure contains elements that describe a change of the model. Its composition is defined in Table 159.

Table 159 - SemanticChangeStructureDataType Structure

Name	Туре	Description
SemanticChangeStructureDataType	structure	
affected	Nodeld	Nodeld of the Node that owns the Property that has changed.
affectedType	Nodeld	If the affected Node was an Object or Variable, affectedType contains the Nodeld of the TypeDefinitionNode of the affected Node. Otherwise it is set to null.

Its representation in the AddressSpace is defined in Table 160.

Table 160 - SemanticChangeStructureDataType Definition

Attributes	Value
BrowseName	SemanticChangeStructureDataType

## 12.18 BitFieldMaskDataType

This simple *DataType* is a subtype of UInt64 and represents a bit mask up to 32 bits where individual bits can be written without modifying the other bits.

The first 32 bits (least significant bits) of the *BitFieldMaskDataType* represent the bit mask and the second 32 bits represent the validity of the bits in the bit mask. When the *Server* returns the value to the client, the validity provides information of which bits in the bit mask have a meaning. When the client passes the value to the *Server*, the validity defines which bits should be written. Only those bits defined in validity are changed in the bit mask, all others stay the same. The *BitFieldMaskDataType* can be used as *DataType* in the *OptionSetType VariableType* 

Its representation in the AddressSpace is defined in Table 161.

Table 161 - BitFieldMaskDataType Definition

Attributes	Value
BrowseName	BitFieldMaskDataType

#### 12.19 NetworkGroupDataType

This structure contains information on different network paths for one *Server*. Its composition is defined in Table 162.

Table 162 - NetworkGroupDataType Structure

Name	Туре	Description
NetworkGroupDataType	structure	
serverUri	String	URI of the Server represented by the network group.
networkPaths	EndpointUrlListDataType[]	Array of different network paths to the server, for example provided by different network cards in a Server node. Each network path can have several Endpoints representing different protocol options for the same path.

Its representation in the AddressSpace is defined in Table 163.

Table 163 - NetworkGroupDataType Definition

Attributes	Value
BrowseName	NetworkGroupDataType

## 12.20 EndpointUrlListDataType

This structure represents a list of URLs of an Endpoint. Its composition is defined in Table 164.

Table 164 - EndpointUrlListDataType Structure

Name	Туре	Description
EndpointUrlListDataType	structure	
endpointUrlList	String[]	List of URLs of an Endpoint.

Its representation in the AddressSpace is defined in Table 165.

Table 165 - EndpointUrlListDataType Definition

Attributes	Value
BrowseName	EndpointUrlListDataType

# Annex A (informative)

## Design decisions when modelling the server information

#### A.1 Overview

This annex describes the design decisions of modelling the information provided by each OPC UA *Server*, exposing its capabilities, diagnostic information, and other data needed to work with the *Server*, such as the *NamespaceArray*.

This annex gives an example of what should be considered when modelling data using the Address Space Model. General considerations for using the Address Space Model can be found in Part 3.

This annex is for information only, that is, each *Server* vendor can model its data in the appropriate way that fits its needs.

The following subclauses describe the design decisions made while modelling the *Server Object*. General *DataTypes*, *VariableTypes* and *ObjectTypes* such as the *EventTypes* described in this standard are not taken into account.

## A.2 ServerType and Server Object

The first decision is to decide at what level types are needed. Typically, each *Server* will provide one *Server Object* with a well known *Nodeld*. The *Nodelds* of the containing *Nodes* are also well-known because their symbolic name is specified in this standard and the *Nodeld* is based on the symbolic name in Part 6. Nevertheless, aggregating *Servers* may want to expose the *Server Objects* of the OPC UA *Servers* they are aggregating in their *AddressSpace*. Therefore, it is very helpful to have a type definition for the *Server Object*. The *Server Object* is an *Object*, because it groups a set of *Variables* and *Objects* containing information about the *Server*. The *ServerType* is a complex *ObjectType*, because the basic structure of the *Server Object* should be well-defined. However, the *Server Object* can be extended by adding *Variables* and *Objects* in an appropriate structure of the *Server Object* or its containing *Objects*.

#### A.3 Typed complex Objects beneath the Server Object

Objects beneath the Server Object used to group information, such as Server capabilities or diagnostics, are also typed because an aggregating Server may want to provide only part of the Server information, such as diagnostics information, in its AddressSpace. Clients are able to program against these structures if they are typed, because they have its type definition.

#### A.4 Properties versus DataVariables

Since the general description in Part 3 about the semantic difference between *Properties* and *DataVariables* are not applicable for the information provided about the *Server* the rules described in Part 3 are used.

If simple data structures should be provided, *Properties* are used. Examples of *Properties* are the *NamespaceArray* of the *Server Object* and the *MinSupportedSampleRate* of the *ServerCapabilities Object*.

If complex data structures are used, <code>DataVariables</code> are used. Examples of <code>DataVariables</code> are the <code>ServerStatus</code> of the <code>Server</code> <code>Object</code> and the <code>ServerDiagnosticsSummary</code> of the <code>ServerDiagnostics</code> <code>Object</code>.

## A.5 Complex Variables using complex DataTypes

DataVariables providing complex data structures expose their information as complex DataTypes, as well as components in the AddressSpace. This allows access to simple values as well as access to the whole information at once in a transactional context.

For example, the ServerStatus Variable of the Server Object is modelled as a complex DataVariable having the ServerStatusDataType providing all information about the Server status. But it also exposes the CurrentTime as a simple DataVariable, because a client may want to read only the current time of the Server, and is not interested in the build information, etc.

#### A.6 Complex Variables having an array

A special case of providing complex data structures is an array of complex data structures. The <code>SubscriptionDiagnosticsArrayType</code> is an example of how this is modelled. It is an array of a complex data structure, providing information of a subscription. Because a <code>Server</code> typically has several subscriptions, it is an array. Some clients may want to read the diagnostic information about all subscriptions at once; therefore it is modelled as an array in a <code>Variable</code>. On the other hand, a client may be interested in only a single entry of the complex structure, such as the <code>PublishRequestCount</code>. Therefore, each entry of the array is also exposed individually as a complex <code>DataVariable</code>, having each entry exposed as simple data.

Note that it is never necessary to expose the individual entries of an array to access them separately. The *Services* already allow accessing individual entries of an array of a *Variable*. However, if the entries should also be used for other purposes in the *AddressSpace*, such as having *References* or additional *Properties* or exposing their complex structure using *DataVariables*, it is useful to expose them individually.

#### A.7 Redundant information

Providing redundant information should generally be avoided. But to fulfil the needs of different clients, it may be helpful.

Using complex *DataVariables* automatically leads to providing redundant information, because the information is directly provided in the complex *DataType* of the *Value Attribute* of the complex *Variable*, and also exposed individually in the components of the complex *Variable*.

The diagnostics information about subscriptions is provided in two different locations. One location is the <code>SubscriptionDiagnosticsArray</code> of the <code>ServerDiagnostics</code> Object, providing the information for all subscriptions of the <code>Server</code>. The second location is the <code>SubscriptionDiagnosticsArray</code> of each individual <code>SessionDiagnosticsObject</code> Object, providing only the subscriptions of the session. This is useful because some clients may be interested in only the subscriptions grouped by sessions, whereas other clients may want to access the diagnostics information of all sessions at once.

The SessionDiagnosticsArray and the SessionSecurityDiagnosticsArray of the SessionsDiagnosticsSummary Object do not expose their individual entries, although they represent an array of complex data structures. But the information of the entries can also be accessed individually as components of the SessionDiagnostics Objects provided for each session by the SessionsDiagnosticsSummary Object. A client can either access the arrays (or parts of the arrays) directly or browse to the SessionDiagnostics Objects to get the information of the individual entries. Thus, the information provided is redundant, but the Variables containing the arrays do not expose their individual entries.

#### A.8 Usage of the BaseDataVariableType

All DataVariables used to expose complex data structures of complex DataVariables have the BaseDataVariableType as type definition if they are not complex by themselves. The reason for this approach is that the complex DataVariables already define the semantic of the containing DataVariables and this semantic is not used in another context. It is not expected that they are subtyped, because they should reflect the data structure of the DataType of the complex DataVariable.

#### A.9 Subtyping

Subtyping is used for modelling information about the redundancy support of the *Server*. Because the provided information shall differ depending on the supported redundancy of the *Server*, subtypes of the *ServerRedundancyType* will be used for this purpose.

Subtyping is also used as an extensibility mechanism (see A.10).

## A.10 Extensibility mechanism

The information of the *Server* will be extended by other parts of this series of standards, by companion specifications or by *Server* vendors. There are preferred ways to provide the additional information.

Do not subtype *DataTypes* to provide additional information about the *Server*. Clients might not be able to read those new defined *DataTypes* and are not able to get the information, including the basic information. If information is added by several sources, the *DataType* hierarchy may be difficult to maintain. Note that this rule applies to the information about the *Server*; in other scenarios this may be a useful way to add information.

Add *Objects* containing *Variables* or add *Variables* to the *Objects* defined in this part. If, for example, additional diagnostic information per subscription is needed, add a new *Variable* containing in array with an entry per subscription in the same places that the *SubscriptionDiagnosticsArray* is used.

Use subtypes of the *ServerVendorCapabilityType* to add information about the server-specific capabilities on the *ServerCapabilities Objects*. Because this extensibility point is already defined in this part, clients will look there for additional information.

Use a subtype of the *VendorServerInfoType* to add server-specific information. Because an *Object* of this type is already defined in this part, clients will look there for server-specific information.

# Annex B (normative)

#### **StateMachines**

#### B.1 General

This annex describes the basic infrastructure to model state machines. It defines *ObjectTypes*, *VariableTypes* and *ReferenceTypes* and explains how they should be used.

This annex is an integral part of this standard, that is, the types defined in this annex have to be used as defined. However, it is not required but strongly recommended that a *Server* uses these types to expose its state machines. The defined types may be subtyped to refine their behaviour.

When a *Server* exposes its state machine using the types defined in this annex, it might only provide a simplified view on its internal state machine, hiding for example substates or putting several internal states into one exposed state.

The scope of the state machines described in this annex is to provide an appropriate foundation for state machines needed for Part 9 and Part 10. It does not provide more complex functionality of a state machine like parallel states, forks and joins, history states, choices and junctions, etc. However, the base state machine defined in this annex can be extended to support such concepts.

The following clauses describe examples of state machines, define state machines in the context of this annex and define the representation of state machines in OPC UA. Finally, some examples of state machines, represented in OPC UA, are given.

#### **B.2** Examples of finite state machines

#### B.2.1 Simple state machine

The following example provides an overview of the base features that the state machines defined in this annex will support. In the following, a more complex example is given, that also supports sub-state machines.

Figure B.1 gives an overview over a simple state machine. It contains the three states "State1", "State2" and "State3". There are transitions from "State1" to "State2", "State2" to "State2", etc. Some of the transitions provide additional information with regard to what causes (or triggers) the transition, for example the call of "Method1" for the transition from "State1" to "State2". The effect (or action) of the transition can also be specified, for example the generation of an *Event* of the "EventType1" in the same transition. The notation used to identify the cause is simply listing it on the transition, the effect is prefixed with a "/". More than one cause or effect are separated by a ",". Not every transition has to have a cause or effect, for example the transition between "State2" and "State3".

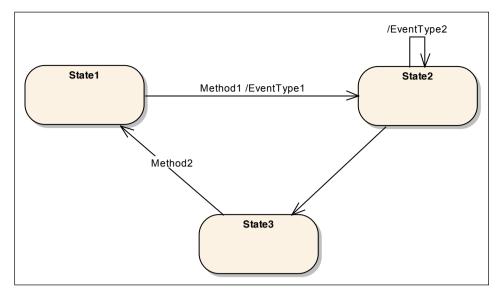


Figure B.1 - Example of a simple state machine

For simplicity, the state machines described in this annex will only support causes in form of specifying *Methods* that have to be called and effects in form of *EventTypes* of *Events* that are generated. However, the defined infrastructure allows extending this to support additional different causes and effects.

## **B.2.2** State machine containing substates

Figure B.2 shows an example of a state machine where "State6" is a sub-state-machine. This means, that when the overall state machine is in State6, this state can be distinguished to be in the sub-states "State7" or "State8". Sub-state-machines can be nested, that is, "State7" could be another sub-state-machine.

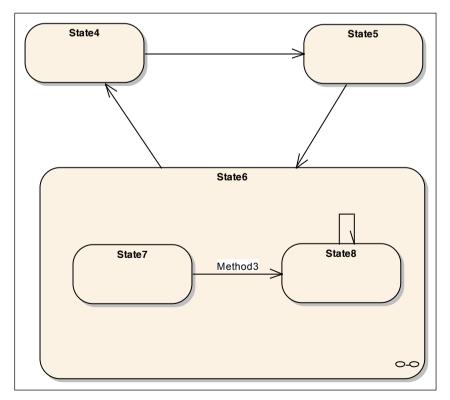


Figure B.2 – Example of a state machine having a sub-machine

#### **B.3** Definition of state machine

The infrastructure of state machines defined in this annex only deals with the basics of state machines needed to support Part 9 and Part 10. The intention is to keep the basic simple but extensible.

For the state machines defined in this annex we assume that state machines are typed and instances of a type have their states and semantics specified by the type. For some types, this means that the states and transitions are fixed. For other types the states and transitions may be dynamic or unknown. A state machine where all the states are specified explicitly by the type is called a finite state machine.

Therefore we distinguish between *StateMachineType* and *StateMachine* and their subtypes like *FiniteStateMachineType*. The *StateMachineType* specifies a description of the state machine, that is, its states, transitions, etc., whereas the *StateMachine* is an instance of the *StateMachineType* and only contains the current state.

Each StateMachine contains information about the current state. If the StateMachineType has SubStateMachines, the StateMachine also contains information about the current state of the SubStateMachines. StateMachines which have their states completely defined by the type are instances of a FiniteStateMachineType.

Each *FiniteStateMachineType* has one or more *States*. For simplicity, we do not distinguish between different *States* like the start or the end states.

Each State can have one or more SubStateMachines.

Each *FiniteStateMachineType* may have one or more *Transitions*. A *Transition* is directed and points from one *State* to another *State*.

Each *Transition* can have one or more *Causes*. A *Cause* leads a *FiniteStateMachine* to change its current *State* from the source of the *Transition* to its target. In this annex we only specify *Method* calls to be *Causes* of *Transitions*. *Transitions* do not have to have a *Cause*. A *Transition* can always be caused by some server-internal logic that is not exposed in the *AddressSpace*.

Each *Transition* can have one or more *Effects*. An *Effect* occurs if the *Transition* is used to change the *State* of a *StateMachine*. In this annex we only specify the generation of *Events* to be *Effects* of a *Transition*. A *Transition* is not required to expose any *Effects* in the *AddressSpace*.

Although this annex only specifies simple concepts for state machines, the provided infrastructure is extensible. If needed, special *States* can be defined as well as additional *Causes* or *Effects*.

## B.4 Representation of state machines in the AddressSpace

#### B.4.1 Overview

The types defined in this annex are illustrated in Figure B.3. The *MyFiniteStateMachineType* is a minimal example which illustrates how these *Types* can be used to describe a *StateMachine*. See Part 9 and Part 10 for additional examples of *StateMachines*.

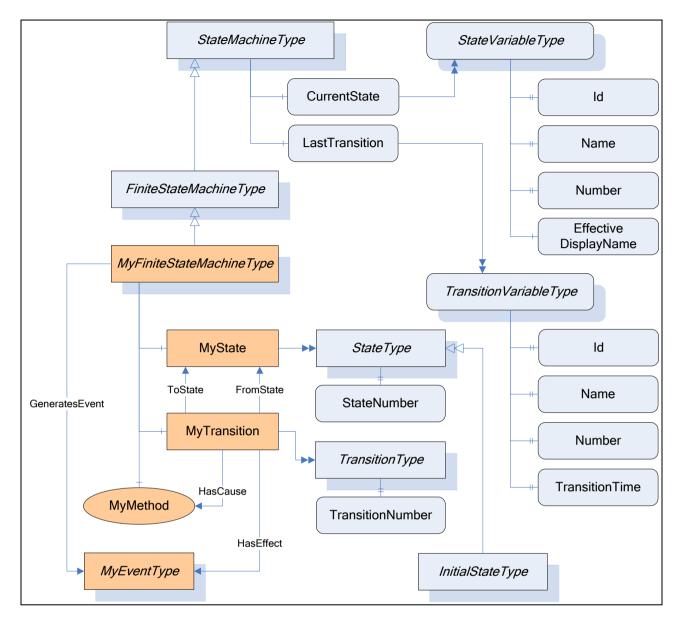


Figure B.3 - The StateMachine Information Model

## B.4.2 StateMachineType

The StateMachineType is the base ObjectType for all StateMachineTypes. It defines a single Variable which represents the current state of the machine. An instance of this ObjectType shall generate an Event whenever a significant state change occurs. The Server decides which state changes are significant. Servers shall use the GeneratesEvent ReferenceType to indicate which Event(s) could be produced by the StateMachine.

Subtypes may add *Methods* which affect the state of the machine. The *Executable Attribute* is used to indicate whether the *Method* is valid given the current state of the machine. The generation of *AuditEvents* for *Methods* is defined in Part 4. A *StateMachine* may not be active. In this case, the *CurrentState* and *LastTransition Variables* shall have a status equal to *Bad\_StateNotActive* (see Table B.17).

Subtypes may add components which are instances of *StateMachineTypes*. These components are considered to be sub-states of the *StateMachine*. *SubStateMachines* are only active when the parent machine is in an appropriate state.

Events produced by SubStateMachines may be suppressed by the parent machine. In some cases, the parent machine will produce a single Event that reflects changes in multiple SubStateMachines.

FiniteStateMachineType is subtype of StateMachineType that provides a mechanism to explicitly define the states and transitions. A Server should use this mechanism if it knows what the possible states are and the state machine is not trivial. The FiniteStateMachineType is defined in B.4.5.

The StateMachineType is formally defined in Table B.1.

Table B.1 - StateMachineType Definition

Attribute	Value	Value					
BrowseName	StateMachi	StateMachineType					
IsAbstract	False						
References	Node Class						
Subtype of the Bas							
Note that a Refere	<i>nce</i> to this subty	pe is not shown in the definit	ion of the BaseObj	ectType.			
HasSubtype	ObjectType	FiniteStateMachineType	Defined in B.4.5				
HasComponent	Variable	CurrentState	LocalizedText	StateVariableType	Mandatory		
HasComponent	Variable	LastTransition	LocalizedText	TransitionVariableType	Optional		

CurrentState stores the current state of an instance of the StateMachineType. CurrentState provides a human readable name for the current state which may not be suitable for use in application control logic. Applications should use the *Id Property* of CurrentState if they need a unique identifier for the state.

LastTransition stores the last transition which occurred in an instance of the StateMachineType. LastTransition provides a human readable name for the last transition which may not be suitable for use in application control logic. Applications should use the *Id Property* of LastTransition if they need a unique identifier for the transition.

#### B.4.3 StateVariableType

The *StateVariableType* is the base *VariableType* for *Variables* that store the current state of a *StateMachine* as a human readable name.

The StateVariableType is formally defined in Table B.2.

Table B.2 - StateVariableType Definition

Attribute	Value	Value					
BrowseName	StateVariab	tateVariableType					
DataType	LocalizedTe	ext					
ValueRank	-1 (-1 = Sc	alar)					
IsAbstract	False						
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule		
		Type defined in 7.4.  ype is not shown in the definition	of the BaseDataVariab	leType.			
HasSubtype	VariableType	FiniteStateVariableType	Defined in B.4.6				
HasProperty	Variable	ld	BaseDataType	PropertyType	Mandatory		
HasProperty	Variable	Name	QualifiedName	PropertyType	Optional		
HasProperty	Variable	Number	UInt32	PropertyType	Optional		
HasProperty	Variable	EffectiveDisplayName	LocalizedText	PropertyType	Optional		

*Id* is a name which uniquely identifies the current state within the *StateMachineType*. A subtype may restrict the *DataType*.

Name is a QualifiedName which uniquely identifies the current state within the StateMachineType.

*Number* is an integer which uniquely identifies the current state within the *StateMachineType*.

EffectiveDisplayName contains a human readable name for the current state of the state machine after taking the state of any SubStateMachines in account. There is no rule specified

for which state or sub-state should be used. It is up to the *Server* and will depend on the semantics of the *StateMachineType*.

StateMachines produce Events which may include the current state of a StateMachine. In that case Servers shall provide all the optional Properties of the StateVariableType in the Event, even if they are not provided on the instances in the AddressSpace.

#### B.4.4 TransitionVariableType

The *TransitionVariableType* is the base *VariableType* for *Variables* that store a *Transition* that occurred within a *StateMachine* as a human readable name.

The *SourceTimestamp* for the value specifies when the *Transition* occurred. This value may also be exposed with the *TransitionTime Property*.

The *TransitionVariableType* is formally defined in Table B.3.

Table B.3 – TransitionVariableType Definition

Attribute	Value	Value					
BrowseName	Trans	ransitionVariableType					
DataType	Local	zedText					
ValueRank	-1 (-	= Scalar)					
IsAbstract	False	·					
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule		
		bleType defined in 7.4. subtype is not shown in the definition of	the <i>BaseDataVarial</i>	oleTvpe.			
HasSubtype	VariableTy	pe FiniteTransitionVariableType	Defined in B.4.7	71			
HasProperty	Variable	Id	BaseDataType	PropertyType	Mandatory		
HasProperty	Variable	Name	QualifiedName	PropertyType	Optional		
HasProperty	Variable	Number	UInt32	PropertyType	Optional		
HasProperty	Variable	TransitionTime	UtcTime	PropertyType	Optional		
HasProperty	Variable	EffectiveTransitionTime	UtcTime	PropertyType	Optional		

*Id* is a name which uniquely identifies a *Transition* within the *StateMachineType*. A subtype may restrict the *DataType*.

Name is a QualifiedName which uniquely identifies a transition within the StateMachineType.

*Number* is an integer which uniquely identifies a transition within the *StateMachineType*.

TransitionTime specifies when the transition occurred.

EffectiveTransitionTime specifies the time when the current state or one of its substates was entered. If, for example, a StateA is active and – while active – switches several times between its substates SubA and SubB, then the *TransitionTime* stays at the point in time where StateA became active whereas the *EffectiveTransitionTime* changes with each change of a substate.

#### B.4.5 FiniteStateMachineType

The *FiniteStateMachineType* is the base *ObjectType* for *StateMachines* that explicitly define the possible *States* and *Transitions*. Once the *States* are defined subtypes shall not add new *States* (see B.4.18).

The States of the machine are represented with instances of the StateType ObjectType. Each State shall have a BrowseName which is unique within the StateMachine and shall have a StateNumber which shall also be unique across all States defined in the StateMachine. Be aware that States in a SubStateMachine may have the same StateNumber or BrowseName as States in the parent machine. A concrete subtype of FiniteStateMachineType shall define at least one State.

A *StateMachine* may define one *State* which is an instance of the *InitialStateType*. This *State* is the *State* that the machine goes into when it is activated.

The *Transitions* that may occur are represented with instances of the *TransitionType*. Each *Transition* shall have a *BrowseName* which is unique within the *StateMachine* and may have a *TransitionNumber* which shall also be unique across all *Transitions* defined in the *StateMachine*.

The initial State for a Transition is a StateType Object which is the target of a FromState Reference. The final State for a Transition is a StateType Object which is the target of a ToState Reference. The FromState and ToState References shall always be specified.

A *Transition* may produce an *Event*. The *Event* is indicated by a *HasEffect Reference* to a subtype of *BaseEventType*. The *StateMachineType* shall have *GeneratesEvent References* to the targets of a *HasEffect Reference* for each of its *Transitions*.

A FiniteStateMachineType may define Methods that cause a transition to occur. These Methods are targets of HasCause References for each of the Transitions that may be triggered by the Method. The Executable Attribute for a Method is used to indicate whether the current State of the machine allows the Method to be called.

A FiniteStateMachineType may have sub-state-machines which are represented as instances of StateMachineType ObjectTypes. Each State shall have a HasSubStateMachine Reference to the StateMachineType Object which represents the child States. The SubStateMachine is not active if the parent State is not active. In this case the CurrentState and LastTransition Variables of the SubStateMachine shall have a status equal to Bad\_StateNotActive (see Table B.17).

The FiniteStateMachineType is formally defined in Table B.4.

Attribute Value BrowseName FiniteStateMachineType IsAbstract True BrowseName DataType TypeDefinition Modelling References Node Class Rule Subtype of the StateMachineType defined in 6.2. HasComponent Variable CurrentState LocalizedText FiniteStateVariableType Mandatory HasComponent LastTransition LocalizedText Variable FiniteTransitionVariableType Optional

Table B.4 - FiniteStateMachineType Definition

#### B.4.6 FiniteStateVariableType

The *FiniteStateVariableType* is a subtype of *StateVariableType* and is used to store the current state of a Finite*StateMachine* as a human readable name.

The FiniteStateVariableType is formally defined in Table B.5.

Table B.5 - FiniteStateVariableType Definition

Attribute	Value				
BrowseName	FiniteState\	/ariableType			
DataType	LocalizedTe	ext			
ValueRank	-1 (-1 = Sc	alar)			
IsAbstract	False				
References	Node BrowseName DataType TypeDefinition Modelling Rule				Modelling Rule
Subtype of the StateVariableType defined in B.4.3					
HasProperty	Variable	ld	Nodeld	PropertyType	Mandatory

Id is inherited from the StateVariableType and overridden to reflect the required DataType. This value shall be the Nodeld of one of the State Objects of the FiniteStateMachineType.

The Name Property is inherited from StateVariableType. Its Value shall be the BrowseName of one of the State Objects of the FiniteStateMachineType.

The Number Property is inherited from StateVariableType. Its Value shall be the StateNumber for one of the State Objects of the FiniteStateMachineType.

#### B.4.7 FiniteTransitionVariableType

The FiniteTransitionVariableType is a subtype of TransitionVariableType and is used to store a Transition that occurred within a FiniteStateMachine as a human readable name.

The FiniteTransitionVariableType is formally defined in Table B.6.

Table B.6 - FiniteTransitionVariableType Definition

Attribute	Value	Value					
BrowseName	FiniteTrans	itionVariableType					
DataType	LocalizedT	ext					
ValueRank	-1 (-1 = Sc	calar)					
IsAbstract	False	False					
References	Node Class	BrowseName	DataType	TypeDefinition	Modelling Rule		
Subtype of the T	ransitionVaria	bleType defined inB.4.4.					
Note that a Reference to this subtype is not shown in the definition of the BaseDataVariableType.							
HasProperty	Variable	ld	Nodeld	PropertyType	Mandatory		

*Id* is inherited from the *TransitionVariableType* and overridden to reflect the required *DataType*. This value shall be the *NodeId* of one of the *Transition Objects* of the *FiniteStateMachineType*.

The Name Property is inherited from the TransitionVariableType. Its Value shall be the BrowseName of one of the Transition Objects of the FiniteStateMachineType.

The Number Property is inherited from the TransitionVariableType. Its Value shall be the TransitionNumber for one of the Transition Objects of the FiniteStateMachineType.

## B.4.8 StateType

States of a FiniteStateMachine are represented as Objects of the StateType.

The StateType is formally defined in Table B.7.

Table B.7 – StateType Definition

Attribute	Value				
BrowseName	StateType				
IsAbstract	False				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the BaseObjectType defined in 6.2. Note that a <i>Reference</i> to this subtype is not shown in the definition of the BaseObjectType.					
HasProperty	Variable	StateNumber	UInt32	PropertyType	Mandatory
HasSubtype	ObjectType	InitialStateType	Defined in B.4.9		

#### B.4.9 InitialStateType

The InitialStateType is a subtype of the StateType and is formally defined in Table B.8. An Object of the InitialStateType represents the State that a FiniteStateMachine enters when it is activated. Each FiniteStateMachine can have at most one State of type InitialStateType, but a FiniteStateMachine does not have to have a State of this type.

A SubStateMachine goes into its initial state whenever the parent state is entered. However, a state machine may define a transition that goes directly to a state of the SubStateMachine. In this case the SubStateMachine goes into that State instead of the initial State. The two scenarios are illustrated in Figure B.4. The transition from State5 to State6 causes the SubStateMachine to go into the initial State (State7), however, the transition from State4 to State8 causes the parent machine to go to State6 and the SubStateMachine will go to State8.

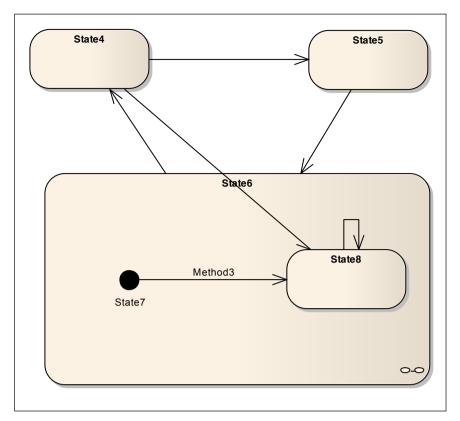


Figure B.4 - Example of an initial State in a sub-machine

If no initial state for a *SubStateMachine* exists and the *State* having the *SubStateMachine* is entered directly, then the *State* of the *SubStateMachine* is server-specific.

Table B.8 - InitialStateType Definition

Attribute		Value				
BrowseName		InitialSta	nitialStateType			
IsAbstract	False					
References	Nod	eClass	BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the StateType defined in B.4.8						

## B.4.10 TransitionType

Transitions of a FiniteStateMachine are represented as Objects of the ObjectType TransitionType formally defined in Table B.9.

Each valid *Transition* shall have exactly one *FromState Reference* and exactly one *ToState Reference*, each pointing to an *Object* of the *ObjectType StateType*.

Each *Transition* can have one or more *HasCause References* pointing to the cause that triggers the *Transition*.

Each *Transition* can have one or more *HasEffect References* pointing to the effects that occur when the *Transition* was triggered.

Table B.9 - TransitionType Definition

Attribute		/alue			
BrowseName		TransitionType			
IsAbstract False					
References	NodeCla	ss BrowseName	DataType	TypeDefinition	ModellingRule
Subtype of the BaseObjectType defined in 6.2. Note that a <i>Reference</i> to this subtype is not shown in the definition of the BaseObjectType.					
HasProperty	Variable	TransitionNumber	UInt32	PropertyType	Mandatory

#### B.4.11 FromState

The FromState ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of NonHierarchicalReferences.

The semantic of this *ReferenceType* is to point form a *Transition* to the starting *State* the *Transition* connects.

The SourceNode of this ReferenceType shall be an Object of the ObjectType TransitionType or one of its subtypes. The TargetNode of this ReferenceType shall be an Object of the ObjectType StateType or one of its subtypes.

The representation of the *FromState ReferenceType* in the *AddressSpace* is specified in Table B.10.

Attributes Value

BrowseName FromState

InverseName ToTransition

Symmetric False

IsAbstract False

References NodeClass BrowseName Comment

Table B.10 - FromState ReferenceType

#### B.4.12 ToState

The *ToState ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to point form a *Transition* to the ending *State* the *Transition* connects.

The SourceNode of this ReferenceType shall be an Object of the ObjectType TransitionType or one of its subtypes. The TargetNode of this ReferenceType shall be an Object of the ObjectType StateType or one of its subtypes.

References of this ReferenceType may be only exposed uni-directional. Sometimes this is required, for example, if a *Transition* points to a *State* of a sub-machine.

The representation of the *ToState ReferenceType* in the *AddressSpace* is specified in Table B.11.

Attributes	Value		
BrowseName	ToState		
InverseName	FromTransition		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

Table B.11 - ToState ReferenceType

#### B.4.13 HasCause

The *HasCause ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to point form a *Transition* to something that causes the *Transition*. In this annex we only define *Methods* as *Causes*. However, the *ReferenceType* is not restricted to point to *Methods*. The referenced Methods can, but do not have to point to a Method of the StateMachineType. For example, it is allowed to point to a server-wide restart Method leading the state machine to go into its initial state.

The SourceNode of this ReferenceType shall be an Object of the ObjectType TransitionType or one of its subtypes. The TargetNode can be of any NodeClass.

The representation of the *HasCause ReferenceType* in the *AddressSpace* is specified in Table B.12.

Table B.12 - HasCause ReferenceType

Attributes	Value		
BrowseName	HasCause		
InverseName	MayBeCausedBy		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

#### B.4.14 HasEffect

The HasEffect ReferenceType is a concrete ReferenceType and can be used directly. It is a subtype of NonHierarchicalReferences.

The semantic of this *ReferenceType* is to point form a *Transition* to something that will be effected when the *Transition* is triggered. In this annex we only define *EventTypes* as *Effects*. However, the *ReferenceType* is not restricted to point to *EventTypes*.

The SourceNode of this ReferenceType shall be an Object of the ObjectType TransitionType or one of its subtypes. The TargetNode can be of any NodeClass.

The representation of the *HasEffect ReferenceType* in the *AddressSpace* is specified in Table B.13.

Table B.13 - HasEffect ReferenceType

Attributes	Value		
BrowseName	HasEffect		
InverseName	MayBeEffectedBy		
Symmetric	False		
IsAbstract	False		
References	NodeClass	BrowseName	Comment

#### B.4.15 HasSubStateMachine

The *HasSubStateMachine ReferenceType* is a concrete *ReferenceType* and can be used directly. It is a subtype of *NonHierarchicalReferences*.

The semantic of this *ReferenceType* is to point from a *State* to an instance of a *StateMachineType* which represents the sub-states for the *State*.

The SourceNode of this ReferenceType shall be an Object of the ObjectType StateType. The TargetNode shall be an Object of the ObjectType StateMachineType or one of its subtypes. Each Object can be the TargetNode of at most one HasSubStateMachine Reference.

The SourceNode (the state) and the TargetNode (the SubStateMachine) shall belong to the same StateMachine, that is, both shall be referenced from the same Object of type StateMachineType using a HasComponent Reference or a subtype of HasComponent.

The representation of the *HasSubStateMachine ReferenceType* in the *AddressSpace* is specified in Table B.14.

Table B.14 - HasSubStateMachine ReferenceType

Attributes	Value			
BrowseName	HasSubStateMachine	HasSubStateMachine		
InverseName	SubStateMachineOf	SubStateMachineOf		
Symmetric	False	False		
IsAbstract	False	False		
References	NodeClass	BrowseName	Comment	

#### **B.4.16** TransitionEventType

The *TransitionEventType* is a subtype of the *BaseEventType*. It can be used to generate an *Event* identifying that a *Transition* of a *StateMachine* was triggered. It is formally defined in Table B.15.

Table B.15 - TransitionEventType

Attribute	Value	Value							
BrowseNam	Transi	TransitionEventType							
е									
IsAbstract	True	True							
References		NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule			
Subtype of the base BaseEventType defined in 6.4.2									
HasComponen	ıt	Variable	Transition	LocalizedText	TransitionVariableType	Mandatory			
HasComponen	ıt	Variable	FromState	LocalizedText	StateVariableType	Mandatory			
HasComponen	ıt	Variable	ToState	LocalizedText	StateVariableType	Mandatory			

The *TransitionEventType* inherits the *Properties* of the *BaseEventType*.

The inherited *Property SourceNode* shall be filled with the *NodeId* of the *StateMachine* instance where the *Transition* occurs. If the *Transition* occurs in a *SubStateMachine*, then the *NodeId* of the *SubStateMachine* has to be used. If the *Transition* occurs between a *StateMachine* and a *SubStateMachine*, then the *NodeId* of the *StateMachine* has to be used, independent of the direction of the *Transition*.

Transition identifies the Transition that triggered the Event.

FromState identifies the State before the Transition.

ToState identifies the State after the Transition.

#### B.4.17 AuditUpdateStateEventType

The AuditUpdateStateEventType is a subtype of the AuditUpdateMethodEventType. It can be used to generate an Event identifying that a Transition of a StateMachine was triggered. It is formally defined in Table B.16.

Table B.16 - AuditUpdateStateEventType

Attribute		Value						
BrowseName		AuditUpdateStateEventType						
IsAbstract		True						
References Node		leClass	BrowseName	DataType	TypeDefinition	ModellingRule		
Subtype of the Au	ıditUpc	lateMethod	EventType defined in 6.4.27					
HasProperty	Var	able	OldStateId	BaseDataType	PropertyType	Mandatory		
HasProperty	Var	able	NewStateId	BaseDataType	PropertyType	Mandatory		

The AuditUpdateStateEventType inherits the Properties of the AuditUpdateMethodEventType.

The inherited *Property SourceNode* shall be filled with the *NodeId* of the *StateMachine* instance where the *State* changed. If the *State* changed in a *SubStateMachine*, then the *NodeId* of the *SubStateMachine* has to be used.

The *SourceName* for *Events* of this type should be the effect that generated the event (e.g. the name of a Method). If the effect was generated by a *Method* call, the *SourceName* should be the name of the *Method* prefixed with "Method/".

OldStateId reflects the Id of the state prior the change.

NewStateId reflects the new Id of the state after the change.

## **B.4.18** Special Restrictions on subtyping StateMachines

In general, all rules on subtyping apply for *StateMachine* types as well. Some additional rules apply for *StateMachine* types. If a StateMachine type is not abstract, subtypes of it shall not change the behaviour of it. That means, that in this case a subtype shall not add *States* and it shall not add *Transitions* between its *States*. However, a subtype may add *SubStateMachines*, it may add *Transitions* from the *States* to the *States* of the *SubStateMachine*, and it may add *Causes* and *Effects* to a *Transition*. In addition, a subtype of a *StateMachine* type shall not remove *States* or *Transitions*.

# **B.4.19** Specific StatusCodes for StateMachines

In Table B.17 specific StatusCodes used for StateMachines are defined.

Table B.17 - Specific StatusCodes for StateMachines

Symbolic Id	Description
Bad_StateNotActive	The accessed state is not active.

# B.5 Examples of StateMachines in the AddressSpace

# B.5.1 StateMachineType using inheritance

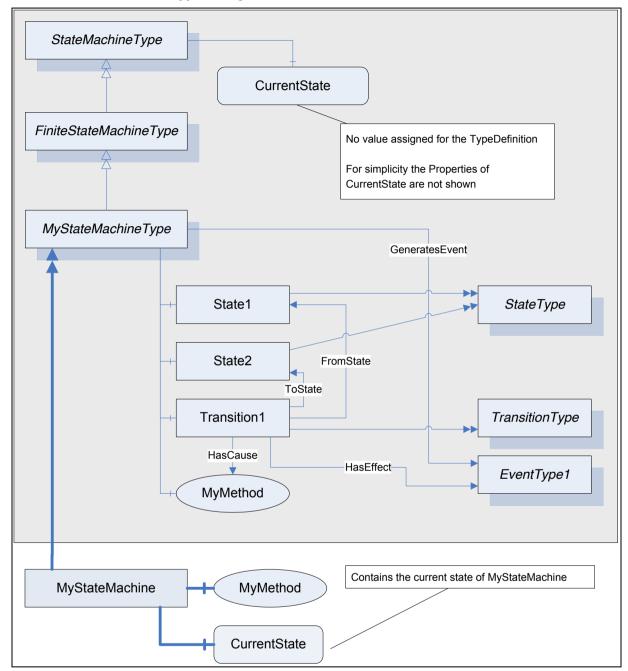


Figure B.5 – Example of a StateMachineType using inheritance

In Figure B.5 an example of a *StateMachine* is given using the Notation defined in Part 3. First, a new *StateMachineType* is defined, called "MyStateMachineType", inheriting from the base *FiniteStateMachineType*. It contains two *States*, "State1" and "State2" and a *Transition* "Transition1" between them. The *Transition* points to a *Method* "MyMethod" as the *Cause* of the *Transition* and an *EventType* "EventType1" as the *Effect* of the *Transition*.

Instances of "MyStateMachineType" can be created, for example "MyStateMachine". It has a *Variable* "CurrentState" representing the current *State*. The "MyStateMachine" *Object* only includes the *Nodes* which expose information specific to the instance.

# B.5.2 StateMachineType with a sub-machine using inheritance

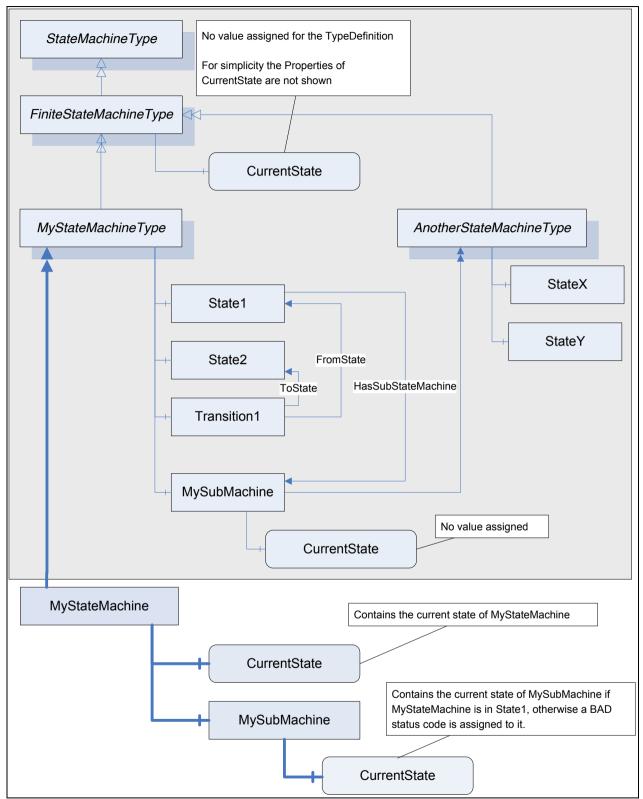


Figure B.6 – Example of a StateMachineType with a SubStateMachine using inheritance

Figure B.6 gives an example of a *StateMachineType* having a *SubStateMachine* for its "State1". For simplicity no effects and causes are shown, as well as type information for the *States* or *ModellingRules*.

The "MyStateMachineType" contains an *Object* "MySubMachine" of type "AnotherStateMachineType" representing a *SubStateMachine*. The "State1" references this *Object* with a *HasSubStateMachine Reference*, thus it is a *SubStateMachine* of "State1". Since "MySubMachine" is an *Object* of type "AnotherStateMachineType" it has a *Variable* representing the current *State*. Since it is used as an *InstanceDeclaration*, no value is assigned to this *Variable*.

An *Object* of "MyStateMachineType", called "MyStateMachine" has *Variables* for the current *State*, but also has an *Object* "MySubMachine" and a *Variable* representing the current state of the *SubStateMachine*. Since the *SubStateMachine* is only used when "MyStateMachine" is in "State1", a client would receive a *Bad\_StateNotActive StatusCode* when reading the *SubStateMachine CurrentState Variable* if "MyStateMachine" is in a different *State*.

### B.5.3 StateMachineType using containment

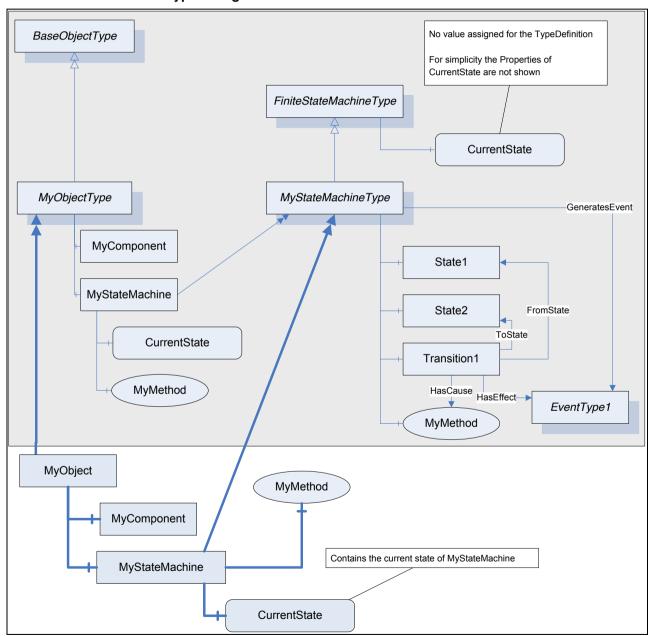


Figure B.7 - Example of a StateMachineType using containment

Figure B.7 gives an example of an *ObjectType* not only representing a *StateMachine* but also having some other functionality. The *ObjectType* "MyObjectType" has an *Object* "MyComponent" representing this other functionality. But it also contains a *StateMachine* 

"MyStateMachine" of the type "MyStateMachineType". *Objects* of "MyObjectType" also contain such an *Object* representing the StateMachine and a *Variable* containing the current state of the StateMachine, as shown in the Figure.

#### B.5.4 Example of a StateMachine having Transition to SubStateMachine

The *StateMachines* shown so far only had *Transitions* between *States* on the same level, that is, on the same *StateMachine*. Of cause, it is possible and often required to have *Transitions* between *States* of the *StateMachine* and *States* of its *SubStateMachine*.

Because a *SubStateMachine* can be defined by another *StateMachineType* and this type can be used in several places, it is not possible to add a bi-directional *Reference* from one of the shared *States* of the *SubStateMachine* to another *StateMachine*. In this case it is suitable to expose the *FromState* or *ToState References* uni-directional, that is, only pointing from the *Transition* to the *State* and not being able to browse to the other direction. If a *Transition* points from a *State* of a *SubStateMachine* to a *State* of another sub-machine, both, the *FromState* and the *ToState Reference*, are handled uni-directional.

A Client shall be able to handle the information of a *StateMachine* if the *ToState* and *FromState References* are only exposed as forward *References* and the inverse *References* are omitted.

Figure B.8 gives an example of a state machine having a transition from a sub-state to a state.

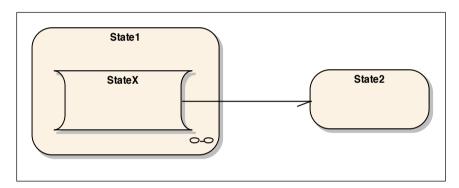


Figure B.8 – Example of a state machine with transitions from sub-states

In Figure B.9, the representation of this example as <code>StateMachineType</code> in the <code>AddressSpace</code> is given. The "Transition1", part of the definition of "MyStateMachineType", points to the "StateX" of the <code>StateMachineType</code> "AnotherStateMachineType". The <code>Reference</code> is only exposed as forward <code>Reference</code> and the inverse <code>Reference</code> is omitted. Thus, there is no <code>Reference</code> from the "StateX" of "AnotherStateMachineType" to any part of "MyStateMachineType" and "AnotherStateMachineType" can be used in other places as well.

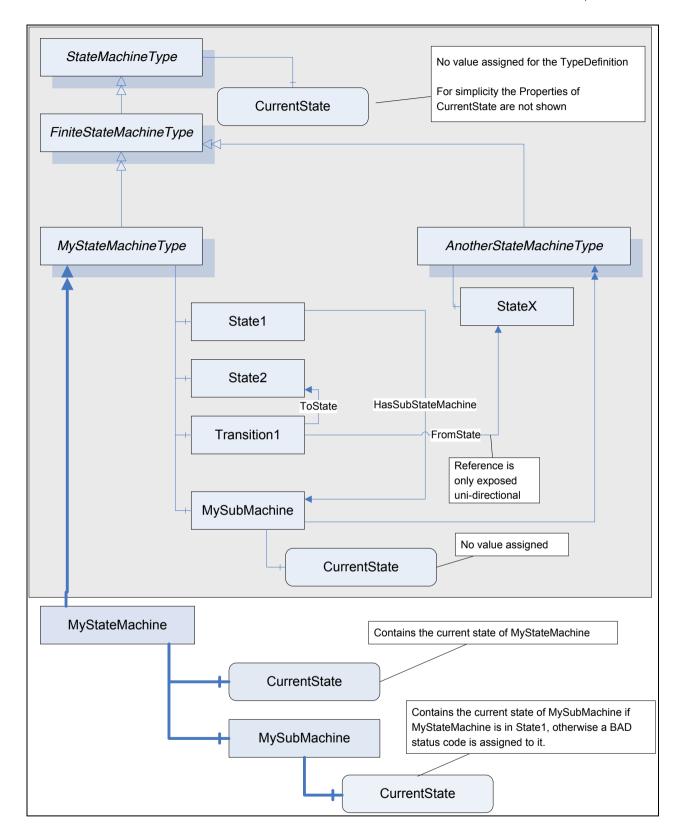


Figure B.9 – Example of a StateMachineType having Transition to SubStateMachine

# Annex C (normative)

#### File Transfer

#### C.1 Overview

This annex describes an information model for file transfer. Files could be modelled in OPC UA as simple Variables using ByteStrings. However, the overall message size in OPC UA is limited due to resources and security issues (denial of service attacks). Only accessing parts of the array can lead to concurrency issues if one client is reading the array while others are manipulating it. Therefore the *ObjectType FileType* is defined representing a file with *Methods* to access the file. The life-cycle of a file stored on a hard disk and an instance of the *FileType* representing the file in an OPC UA *AddressSpace* can be independent.

In addition to representing individual files this annex also defines a way to represent a whole file system or a part of a file system. This can be done using the *FileDirectoryType* in combination with the *FileType*. The *FileDirectoryType* provides *Methods* to create delete and move files and directories. The root of a file system or part of a file system is represented by an instance of the *FileDirectoryType* with the *BrowseName FileSystem*. All directories below the root directory are represented by instances of the *FileDirectoryType* or a subtype. All files below the root directory are represented by instances of the *FileType* or a subtype.

This annex is an integral part of this standard, that is, the types defined in this annex have to be used as defined. However, it is not required but strongly recommended that a *Server* uses these types to expose its files. The defined types may be subtyped to refine their behaviour.

#### C.2 File

#### C.2.1 FileType

This ObjectType defines a type for files. It is formally defined in Table C.1.

Attribute Value BrowseName FileType IsAbstract False References NodeClass **BrowseName** DataType TypeDefinition Modellina Rule Subtype of the BaseObjectType defined in 6.2 PropertyType Mandatory HasProperty Variable Size UInt64 PropertyType HasProperty Variable Boolean Mandatory Writable HasProperty Variable UserWritable Boolean PropertyType Mandatory HasProperty Variable OpenCount UInt16 Mandatory PropertyType MimeType Optional HasProperty Variable String PropertyType Defined in C.2.2 HasComponent Method Open Mandatory Method Defined in C.2.3 HasComponent Close Mandatory HasComponent Method Read Defined in C.2.4 Mandatory HasComponent Method Write Defined in C.2.5 Mandatory GetPosition Defined in C.2.6 HasComponent Method Mandatory Method SetPosition Defined in C.2.7 Mandatory HasComponent

Table C.1 - FileType

Size defines the size of the file in Bytes. When a file is opened for write the size might not be accurate.

Writable indicates whether the file is writable. It does not take any user access rights into account, i.e. although the file is writable this may be restricted to a certain user / user group. The *Property* does not take into account whether the file is currently opened for writing by another client and thus currently locked and not writable by others.

*UserWritable* indicates whether the file is writable taking user access rights into account. The Property does not take into account whether the file is currently opened for writing by another client and thus currently locked and not writable by others.

OpenCount indicates the number of currently valid file handles on the file.

The optional *Property MimeType* contains the media type of the file based on RFC 2046.

Note that all Methods on a file require a fileHandle, which is returned in the Open Method.

### C.2.2 Open

Open is used to open a file represented by an *Object* of FileType. When a client opens a file it gets a file handle that is valid while the session is open. Clients shall use the Close *Method* to release the handle when they do not need access to the file anymore. Clients can open the same file several times for read. A request to open for writing shall return Bad\_NotWritable when the file is already opened. A request to open for reading shall return Bad\_NotReadable when the file is already opened for writing.

#### **Signature**

```
Open(
    [in] Byte mode
    [out] UInt32 fileHandle
);
```

Argument	Description				
mode	write operations and	Indicates whether the file should be opened only for read operations or for read and write operations and where the initial position is set.  The <i>mode</i> is an 8-bit unsigned integer used as bit mask with the structure defined in the following table:			
	Field	Bit	Description		
	Read	0	The file is opened for reading. If this bit is not set the Read Method cannot be executed.		
	Write	1	The file is opened for writing. If this bit is not set the Write Method cannot be executed.		
	EraseExisiting	2	This bit can only be set if the file is opened for writing (Write bit is set). The existing content of the file is erased and an empty file is provided.		
	Append	3	When the Append bit is set the file is opened at end of the file, otherwise at begin of the file. The SetPosition Method can be used to change the position.		
	Reserved	4:7	Reserved for future use. Shall always be zero.		
fileHandle	Object of the Method fileHandle is generate	call) but the	er method calls indicating not the file (this is done by the se access request and thus the position in the file. The erver and is unique for the Session. Clients cannot be Session but need to get a new fileHandle by calling		

Result Code	Description
Bad_NotReadable	See Part 4 for a general description. File might be locked and thus not readable.
Bad_NotWritable	See Part 4 for a general description.
Bad_InvalidState	See Part 4 for a general description. The file is locked and thus not writable.
Bad_InvalidArguments	See Part 4 for a general description. Mode setting is invalid.
Bad_NotFound	See Part 4 for a general description.
Bad_UnexpectedError	See Part 4 for a general description.

Table C.2 specifies the AddressSpace representation for the Open Method.

Table C.2 - Open Method AddressSpace Definition

Attribute	Value				
BrowseName	Open				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory
HasProperty	Variable	OutputArguments	Argument[]	PropertyType	Mandatory

#### C.2.3 Close

*Close* is used to close a file represented by a FileType. When a client closes a file the handle becomes invalid.

### **Signature**

```
Close(
    [in] UInt32 fileHandle
);
```

Argument	Description
fileHandle	A handle indicating the access request and thus indirectly the position inside the file.

### Method Result Codes (defined in Call Service)

Result Code	Description
Bad_InvalidArgument	See Part 4 for a general description. Invalid file handle in call.

Table C.3 specifies the AddressSpace representation for the Close Method.

Table C.3 - Close Method AddressSpace Definition

Attribute	Value				
BrowseName	Close				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

#### C.2.4 Read

*Read* is used to read a part of the file starting from the current file position. The file position is advanced by the number of bytes read.

#### **Signature**

```
Read(
    [in] Uint32 fileHandle
    [in] Int32 length
    [out] ByteString data
);
```

Argument	Description
fileHandle	A handle indicating the access request and thus indirectly the position inside the file.
Length	Defines the length in bytes that should be returned in data, starting from the current position of the file handle. If the end of file is reached all data until the end of the file is returned. The <i>Server</i> is allowed to return less data than specified length. Only positive values are allowed.
Data	Contains the returned data of the file. If the ByteString is empty it indicates that the end of the file is reached.

Result Code	Description
Bad_InvalidArgument	See Part 4 Invalid file handle in call or non-positive length.
Bad_UnexpectedError	See Part 4 for a general description.
Bad_InvalidState	See Part 4 for a general description. File was not opened for read access.

Table C.4 specifies the *AddressSpace* representation for the *Read Method*.

Table C.4 - Read Method AddressSpace Definition

Attribute	Value				
BrowseName	Read				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory
HasProperty	Variable	OutputArguments	Argument[]	PropertyType	Mandatory

#### C.2.5 Write

*Write* is used to write a part of the file starting from the current file position. The file position is advanced by the number of bytes written.

#### **Signature**

```
Write(
    [in] UInt32 fileHandle
    [in] ByteString data
);
```

Argument	Description
fileHandle	A handle indicating the access request and thus indirectly the position inside the file.
data	Contains the data to be written at the position of the file. It is server-dependent whether the written data are persistently stored if the session is ended without calling the Close Method with the fileHandle.  Writing an empty or null <i>ByteString</i> returns a Good result code without any affect on the file.

# Method Result Codes (defined in Call Service)

Result Code	Description
Bad_InvalidArgument	See Part 4 for a general description. Invalid file handle in call.
Bad_NotWritable	See Part 4 for a general description. File might be locked and thus not writable.
Bad_InvalidState	See Part 4 for a general description. File was not opened for write access.

Table C.5 specifies the *AddressSpace* representation for the *Write Method*.

Table C.5 – Write Method AddressSpace Definition

Attribute	Value				
BrowseName	Write				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

#### C.2.6 GetPosition

GetPosition is used to provide the current position of the file handle.

#### Signature

```
GetPosition(
    [in] UInt32 fileHandle
    [out] UInt64 position
);
```

Argument	Description
fileHandle	A handle indicating the access request and thus indirectly the position inside the file.
Position	The position of the fileHandle in the file. If a Read or Write is called it starts at that position.

# **Method Result Codes (defined in Call Service)**

Result Code	Description
Bad_InvalidArgument	See Part 4 for a general description. Invalid file handle in call.

Table C.6 specifies the AddressSpace representation for the GetPosition Method.

Table C.6 - GetPosition Method AddressSpace Definition

Attribute	Value				
BrowseName	GetPosition				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory
HasProperty	Variable	OutputArguments	Argument[]	PropertyType	Mandatory

#### C.2.7 SetPosition

SetPosition is used to set the current position of the file handle.

#### **Signature**

```
SetPosition(
    [in] UInt32 fileHandle
    [in] UInt64 position
);
```

Argument	Description
fileHandle	A handle indicating the access request and thus indirectly the position inside the file.
Position	The position to be set for the fileHandle in the file. If a Read or Write is called it starts at that position. If the position is higher than the file size the position is set to the end of the file.

# Method Result Codes (defined in Call Service)

Result Code	Description
Bad_InvalidArgument	See Part 4 for a general description. Invalid file handle in call.

Table C.7 specifies the AddressSpace representation for the SetPosition Method.

Table C.7 - SetPosition Method AddressSpace Definition

Attribute	Value				
BrowseName	SetPosition				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

# C.3 File System

# C.3.1 FileDirectoryType

This *ObjectType* defines a type for the representation of file directories. It is formally defined in Table C.8.

It is expected that OPC UA Servers will create vendor specific subtypes of the FileDirectoryType with additional functionalities like Methods for creating symbolic links or setting access

permissions. OPC UA *Clients* providing specialized file transfer user interfaces should be prepared to expose such additional *Methods* to the user.

Attribute	Va	Value				
BrowseName	Fi	leDirectoryType				
IsAbstract	Fa	alse				
References		NodeClass	BrowseName	DataType	TypeDefinition	Modelling Rule
Subtype of the F	Subtype of the FolderType defined in 6.6.					
Organizes		Object	<filedirectoryname></filedirectoryname>		FileDirectoryType	OptionalPlaceholder
Organizes		Object	<filename></filename>		FileType	OptionalPlaceholder
HasComponent		Method	CreateDirectory	Defined in C.3.3		Mandatory
HasComponent		Method	CreateFile	Defined in C.3.4		Mandatory
HasComponent		Method	Delete	Defined in C.3.5		Mandatory
HasComponent		Method	MoveOrCopy	Defined in C.3.6		Mandatory

Table C.8 - FileDirectoryType

Instances of the *ObjectType* contain a list of *FileDirectoryType Objects* representing the subdirectories of the file directory represented by the instance of this *ObjectType*.

Instances of the *ObjectType* contain a list of *FileType Objects* representing the files in the file directory represented by the instance of this *ObjectType*.

# C.3.2 FileSystem Object

The support of file directory structures is declared by aggregating an instance of the *FileDirectoryType* with the *BrowseName FileSystem* as illustrated in Figure C.1.

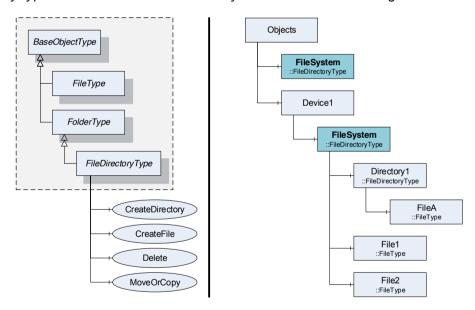


Figure C.1 - FileSystem Example

The *Object* representing the root of a file directory structure shall have the *BrowseName FileSystem*. An OPC UA *Server* may have different *FileSystem Objects* in the *AddressSpace*. *HasComponent* is used to reference a *FileSystem* from aggregating *Objects* like the *Objects Folder* or the *Object* representing a device.

#### C.3.3 CreateDirectory

CreateDirectory is used to create a new FileDirectoryType Object organized by this Object.

# Signature

#### 

);

Argument	Description
directoryName	The name of the directory to create. The name is used for the BrowseName and DisplayName of the directory object and also for the directory in the file system. For the BrowseName, the directoryName is used for the name part of the QualifiedName. The namespace index is Server specific. For the DisplayName, the directoryName is used for the text part of the LocalizedText. The locale part is Server specific.
directoryNodeId	The Nodeld of the created directory Object.

# Method Result Codes (defined in Call Service)

Result Code	Description
Bad_BrowseNameDuplicated	See Part 4 for a general description. A directory with the name already exists.
Bad_UserAccessDenied	See Part 4 for a general description.

Table C.9 specifies the *AddressSpace* representation for the *CreateDirectory Method*.

Table C.9 - CreateDirectory Method AddressSpace Definition

Attribute	Value	Value			
BrowseName	CreateDirector	CreateDirectory			
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory
HasProperty	Variable	OutputArguments	Argument[]	PropertyType	Mandatory

# C.3.4 CreateFile

CreateFile is used to create a new FileType Object organized by this Object. The created file can be written using the Write Method of the FileType.

### **Signature**

Argument	Description
fileName	The name of the file to create. The name is used for the BrowseName and DisplayName of the file object and also for the file in the file system. For the BrowseName, the fileName is used for the name part of the QualifiedName. The namespace index is Server specific. For the DisplayName, the fileName is used for the text part of the LocalizedText. The locale part is Server specific.
requestFileOpen	Flag indicating if the new file should be opened with the Write and Read bits set in the open mode after the creation of the file. If the flag is set to True, the file is created and opened for writing. If the flag is set to False, the file is just created.
fileNodeId	The Nodeld of the created file Object.
fileHandle	The fileHandle is returned if the requestFileOpen is set to True.  The fileNodeld and the fileHandle can be used to access the new file through the FileType Object representing the new file.  If requestFileOpen is set to False, the returned value shall be 0 and shall be ignored by the caller.

Result Code	Description		
Bad_BrowseNameDuplicated	See Part 4 for a general description. A file with the name already exists.		
Bad_UserAccessDenied	See Part 4 for a general description.		

Table C.10 specifies the AddressSpace representation for the CreateFile Method.

Table C.10 - CreateFile Method AddressSpace Definition

Attribute	Value				
BrowseName	CreateFile				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory
HasProperty	Variable	OutputArguments	Argument[]	PropertyType	Mandatory

#### C.3.5 Delete

Delete is used to delete a file or directory organized by this Object.

# Signature

```
Delete(
    [in] NodeId objectToDelete
);
```

Argument	Description
objectToDelete	The Nodeld of the file or directory to delete.
	In the case of a directory, all file and directory Objects below the directory to delete are
	deleted recursively.

# Method Result Codes (defined in Call Service)

Result Code	Description
Bad_NotFound	See Part 4 for a general description. A file or directory with the provided Nodeld is not organized by this object.
Bad_InvalidState	See Part 4 for a general description. The file or directory is locked and thus cannot be deleted.
Bad_UserAccessDenied	See Part 4 for a general description.

Table C.11 specifies the *AddressSpace* representation for the *Delete Method*.

Table C.11 - Delete Method AddressSpace Definition

Attribute	Value				
BrowseName	Delete				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory

# C.3.6 MoveOrCopy

*MoveOrCopy* is used to move or copy a file or directory organized by this *Object* to another directory or to rename a file or directory.

#### **Signature**

Argument	Description
objectToMoveOrCopy	The Nodeld of the file or directory to move or copy.
targetDirectory	The Nodeld of the target directory of the move or copy command. If the file or directory is just renamed, the targetDirectory matches the ObjectId passed to the method call.
createCopy	A flag indicating if a copy of the file or directory should be created at the target directory.
newName	The new name of the file or directory in the new location. If the string is empty, the name is unchanged.
newNodeld	The Nodeld of the moved or copied object. Even if the Object is moved, the Server may return a new Nodeld.

Result Code	Description
Bad_BrowseNameDuplicated	See Part 4 for a general description. A file or directory with the name already exists.
Bad_NotFound	See Part 4 for a general description. A file or directory with the provided Nodeld is not organized by this object.
Bad_InvalidState	See Part 4 for a general description. The file or directory is locked and thus cannot be moved or copied.
Bad_UserAccessDenied	See Part 4 for a general description.

Table C.12 specifies the *AddressSpace* representation for the *MoveOrCopy Method*.

Table C.12 - MoveOrCopy Method AddressSpace Definition

Attribute	Value				
BrowseName	MoveOrCopy				
References	NodeClass	BrowseName	DataType	TypeDefinition	ModellingRule
HasProperty	Variable	InputArguments	Argument[]	PropertyType	Mandatory
HasProperty	Variable	OutputArguments	Argument[]	PropertyType	Mandatory