
Sound, GSL, GNUPLOT, C920 Camera with OpenCV, Myhdl ,GTKWave compiled, GCC, Python switches, 8 Leds, oled display on ZedBoard 11/29/15

Testing on a remote shell running on Ubuntu 12.04. On power up.

The Green led in the upper left is the power on. The Green led blinks to right oled display. The blue to left of the oled display comes on a few seconds later. On the HDMI display Please wait: booting ... is displayed. Before the HDMI display goes to SATO display the oled display turns on displaying the TOPIC logo.

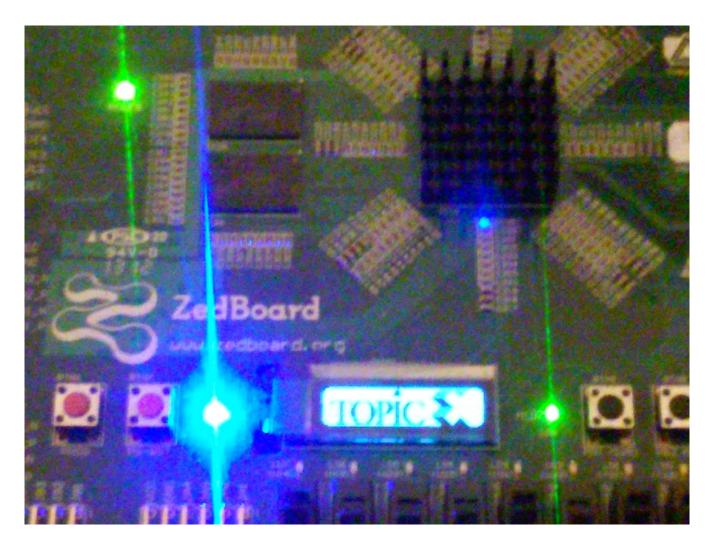

ls /sys/class/gpio/ export gpiochip0 unexport

~/sw_export #!/bin/sh

echo "Starting rcS..."

```
#echo "++ Starting OLED Display"
#load_oled
echo "++ Exporting LEDs & SWs"
for i in 0 1 2 3 4 5 6 7;
do
     sw=$(($i+65));
     echo $sw > /sys/class/gpio/export;
done;
ls /sys/class/gpio/
export gpio66 gpio68 gpio70 gpio72 unexport
gpio65 gpio67 gpio69 gpio71 gpiochip0
read_sw
#!/bin/sh
value=0;
for i in 0 1 2 3 4 5 6 7;
do
     sw=\$((72-\$i));
     sw_tmp=`cat /sys/class/gpio/gpio$sw/value`;
     value=$(($value*2));
     value=$(($value+$sw_tmp));
done:
printf "0x%x %d\n" $value $value;
With switches up dn dn dn up dn up up
./read_sw
0x8b 139
With switches up dn dn dn dn dn up up
./read_sw
0x83 131
cd display_logos
./unload_oled The oled turns off
cp logo.bin.tmp logo.bin Digilent logo is copied to logo.bin file
./load_oled
```




./unload_oled The oled turns off
cp topic_logo.bin.tmp logo.bin
./load_oled



First three Leds on.



All eight Leds On

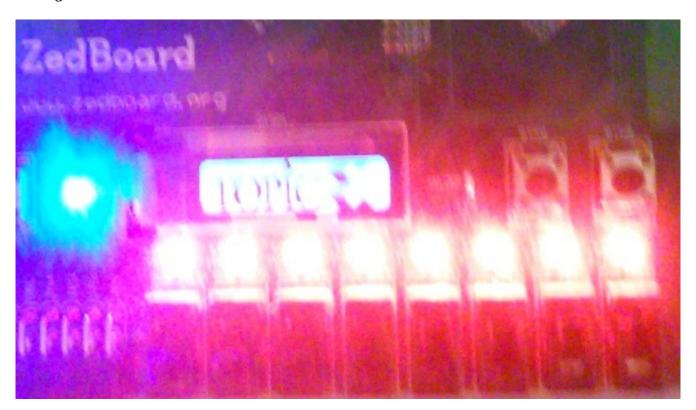

The file below wil turn on the Leds starting on the left #!/bin/bash

echo 1 > /sys/class/leds/ld7\:red/brightness

sleep 1

echo 1 > /sys/class/leds/ld6\:red/brightness

sleep 1

echo 1 > /sys/class/leds/ld5\:red/brightness

sleep 1

echo 1 > /sys/class/leds/ld5\:red/brightness


```
sleep 1
echo 1 > /sys/class/leds/ld4\:red/brightness
sleep 1
echo 1 > /sys/class/leds/ld3\:red/brightness
sleep 1
echo 1 > /sys/class/leds/ld2\:red/brightness
sleep 1
echo 1 > /sys/class/leds/ld1\:red/brightness
sleep 1
echo 1 > /sys/class/leds/ld0\:red/brightness
sleep 1
echo 0 > /sys/class/leds/ld7\:red/brightness
sleep 1
echo 0 > /sys/class/leds/ld6\:red/brightness
sleep 1
echo 0 > /sys/class/leds/ld5\:red/brightness
sleep 1
echo 0 > /sys/class/leds/ld5\:red/brightness
sleep 1
echo 0 > /sys/class/leds/ld4\:red/brightness
sleep 1
echo 0 > /sys/class/leds/ld3\:red/brightness
sleep 1
echo 0 > /sys/class/leds/ld2\:red/brightness
echo 0 > /sys/class/leds/ld1\:red/brightness
sleep 1
echo 0 > /sys/class/leds/ld0\:red/brightness
sleep 1
Speakers are connected to black jack and sound is heard correctly.
aplay speech_dft.wav
Playing WAVE 'speech_dft.wav' : Signed 16 bit Little Endian, Rate 22050 Hz, Mono
ssh -Y 192.168.1.143
uname -a
Linux zedboard 3.12.0 #1 SMP PREEMPT Sat Mar 29 13:42:20 MDT 2014 armv7l GNU/Linux
rpm -qa | sort > zedbrd_pkgs.txt
cd gsl/
. ./setpath
#!/bin/bash
export CFLAGS="-I/usr/include -L/usr/lib -lgsl -lgslcblas -lm"
./compile_test_files
#!/bin/bash
gcc ${CFLAGS} sqmatrice.c -o sqmatice
gcc ${CFLAGS} linalg.c -o linalg
```

```
gcc ${CFLAGS} poly.c -o poly
gcc ${CFLAGS} testmatrices.c -o testmatrices
./linalg
_{\rm X} =
-4.05205
-12.6056
1.66091
8.69377
root@zedboard:~/gsl# ./poly
z0 = -0.809016994374947673 + 0.587785252292473359
z1 = -0.809016994374947673 - 0.587785252292473359
z^2 = +0.309016994374947507 +0.951056516295152976
z3 = +0.309016994374947507 -0.951056516295152976
root@zedboard:~/gsl# ./testmatrices
m(0.0) = 0.23
m(0,1) = 1.23
m(0,2) = 2.23
m(1,0) = 100.23
m(1,1) = 101.23
m(1,2) = 102.23
m(2,0) = 200.23
m(2,1) = 201.23
m(2,2) = 202.23
m(3,0) = 300.23
m(3,1) = 301.23
m(3,2) = 302.23
m(4,0) = 400.23
m(4,1) = 401.23
m(4,2) = 402.23
m(5,0) = 500.23
m(5,1) = 501.23
m(5,2) = 502.23
m(6,0) = 600.23
m(6,1) = 601.23
m(6,2) = 602.23
m(7,0) = 700.23
m(7,1) = 701.23
m(7,2) = 702.23
m(8,0) = 800.23
m(8,1) = 801.23
m(8,2) = 802.23
m(9,0) = 900.23
m(9,1) = 901.23
m(9,2) = 902.23
gsl: ../gsl/gsl_matrix_double.h:275: ERROR: first index out of range
Default GSL error handler invoked.
Aborted
root@zedboard:~/gsl# ./sqmatice
```

```
The output file format ofmt %f
will be used in gsl matrix fprintf (opointer, m, ofmt)
Initial test matrice
m(0,0) = 2.58
m(0,1) = -3.1
m(0,2) = 4.25
m(1,0) = 3.821
m(1,1) = 4.44
m(1,2) = 5.656
m(2,0) = 1.82
m(2,1) = 7.41
m(2,2) = 3.33
transpose of initial matrice
the matrice needs to be square
3
sizeof of struct m 24
num of rows 3
num of cols 3
m(0,0) = 2.58
m(0,1) = 3.821
m(0,2) = 1.82
m(1,0) = -3.1
m(1,1) = 4.44
m(1,2) = 7.41
m(2,0) = 4.25
m(2,1) = 5.656
m(2,2) = 3.33
The identity matrice
m(0,0) = 1
m(0,1) = 0
m(0,2) = 0
m(1,0) = 0
m(1,1) = 1
m(1,2) = 0
m(2,0) = 0
m(2,1) = 0
m(2,2) = 1
```

cd opencv_python_yocto_raspberry_pi/

python facedetect_my.py The image below was taken with RaspberryPi2B and C920 camera. Results are the same on ZedBoard.

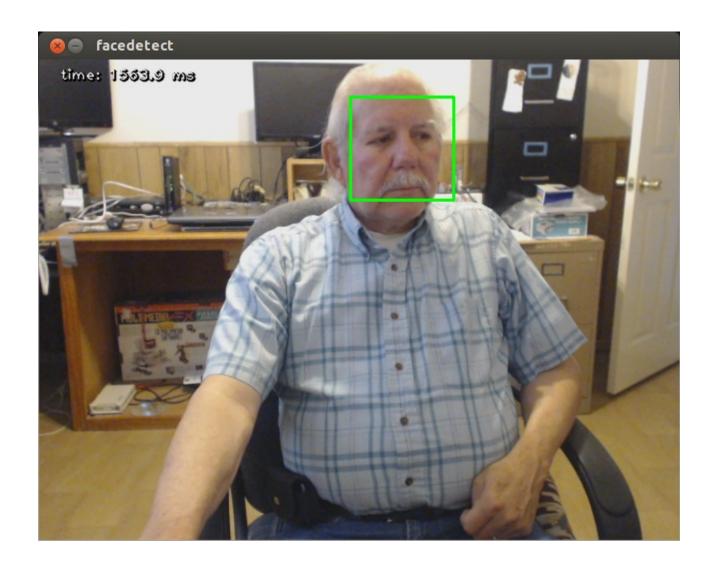

GTKwave compiled on target.

tar xfz gtkwave-3.3.66.tar.gz

cd gtkwave-3.3.66

./configure –disable-tcl

make

make install

cd ../


gtkwave tb.vcd

```
Myhdl
cd myhdl/
python setup.py install
python test_rs232.py
testCharacterize (__main__.rs232Characterize)
Find min/max tx baud rate tolerance by simulation ... Max tx baudrate: 10160
Min tx baudrate: 9095
ok
testDefault (__main__.rs232Test)
Check default case ... ok
testOddParity (__main__.rs232Test)
Check odd parity ... ok
testParityError (__main__.rs232Test)
Expect a parity error ... ok
testSevenBitsEvenParity (__main__.rs232Test)
Check 7 bits with even parity ... ok
Ran 5 tests in 19.002s
OK
Using the repository jpeg-2000-test
cd jpeg-2000-test/ipython_fixbv/test_lifting_jpeg_step
python odd_even_fsm.py
190 muxsel_i 0 rst_fsm 1
200190
root@zedboard:~/jpeg-2000-test/ipython_fixbv/test_lifting_jpeg_step# gtkwave tb.vcd
```

GTKWave Analyzer v3.3.66 (w)1999-2015 BSI

Gtk-Message: Failed to load module "canberra-gtk-module"


[0] start time. [200190] end time.

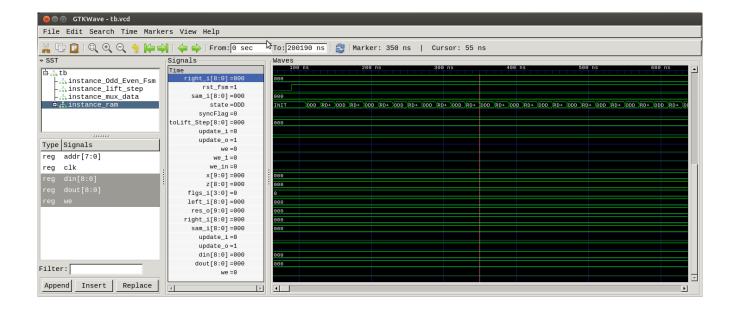

Running gnuplot from xterm

```
xterm
root@zedboard:~# cd gnuplot/demo/
root@zedboard:~/gnuplot/demo# gnuplot
       GNUPLOT
       Version 4.4 patchlevel 4
       last modified November 2011
       System: Linux 3,12,0
       Copyright (C) 1986-1993, 1998, 2004, 2007-2011
       Thomas Williams, Colin Kelley and many others
                        http://www.gnuplot.info
       gnuplot home:
       faq, bugs, etc:
                         type "help seeking-assistance"
                        type "help"
hit 'h'
       immediate help:
       plot window:
Terminal type set to 'x11'
gnuplot> set terminal xterm
Terminal type set to 'xterm'
Hit return to continue
```

plot1 of demo

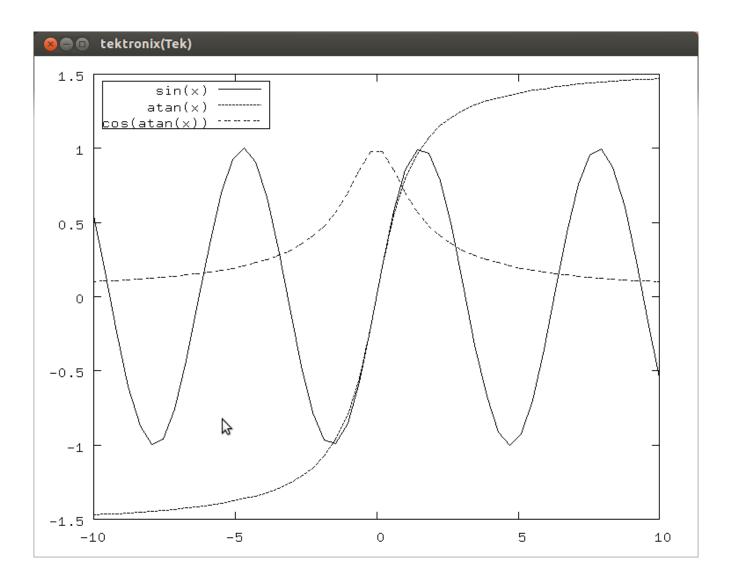

plot2 of demo