

ASF MapReady

User Manual

Version 2.0



Alaska Satellite Facility
User Tool Development Group

Table of Contents

ASF MapReady	1
User Manual	1
Introduction	4
General background.....	4
Data formats	4
Calibration.....	5
Terrain correction.....	6
Map projections.....	7
Configuration file	8
Temporary directories.....	9
Using the MapReady Graphical User Interface	9
Functionality.....	9
Settings	9
Input Files.....	20
Completed Files.....	23
Summary section.....	27
Footer buttons	27
Tool tips.....	29
ASF View	29
Running ASF View.....	30
Using ASF View	30
Saving Image Subsets	33
Toolbar Buttons.....	37
Information Tabs	38
Examples	39
Converting optical ALOS AVNIR data into GeoTIFF format.....	39
Converting optical ALOS PRISM data into GeoTIFF format	43
Converting ALOS PALSAR data into GeoTIFF format.....	44
Terrain correcting standard beam RADARSAT imagery.....	47
The Projection Coordinate Converter	52
Using the MapReady command line tools	53
<code>asf_mapready</code>	53
Generating a configuration file.....	53
Import	58
Terrain correction	59
Geocoding	60
Export	61
Default values file	62
Running <code>asf_mapready</code> in batch mode	63
Overview of the individual command line tools	64

asf_import.....	64
asf_terrcorr	64
asf_geocode.....	64
asf_export.....	65
akdem_grab.....	66
convert2vector.....	66
deskew	66
fill_holes	66
meta2envi.....	66
metadata	67
mosaic	67
refine_geolocation	67
resample.....	67
shift_geolocation.....	67
sr2gr	68
to_sr	68
trim	68
Handling multi-band files with the command line tools.....	68
Appendix A – Configuration File Example	69
Appendix B – Generating a Mask for Terrain Correction.....	75
Defining an Area of interest	75
Generating a vector mask.....	75
Generating a raster mask	76

Introduction

This manual provides a complete overview of the conversion from operationally produced SAR data to a variety of user friendly formats. It presents the theoretical background for the formats, corrections and processing steps in the processing flow. This manual describes the functionality of the graphical user interface (GUI) and command line interface tools provided in the MapReady remote sensing software package. Examples of completed runs are provided. A number of exercises are provided explain how the MapReady software can be utilized for a variety of different applications.

This software and documentation was produced by the User Tool Development group at the [Alaska Satellite Facility](#). If you have any questions or comments about any of the tools, or suggestions for how they could be improved, please visit the ASF User Forum, at <https://forum.asf.alaska.edu>.

General background

This section provides some background information to allow the user to make the most effective use of the MapReady software.

Data formats

After processing the analog SAR signal to binary SAR signal data, the data is called level zero (L0) data in *SKY telemetry format* (STF). The level zero data covers a certain area on the ground in the form of a swath. The length of the swath depends on the amount of data originally collected during the actual acquisition. The size of the files varies but can easily be as large as a few gigabytes. The level zero swaths are then subdivided in frames. For ERS imagery, these frames have a size of 100 by 100 kilometers, which is equivalent to about 26000 lines of radar data. The accompanying leader file is defined in CEOS standard format. This is why these data sets are referred to as CEOS frames.

The CEOS data come in three different flavors. The *CEOS level zero data* is raw signal data that needs to run through a SAR processor before it can be visualized. The result of the SAR processing, *CEOS single look complex* (SLC) data, is primarily used for SAR interferometry, as it contains both amplitude and the required phase information. Furthermore, the data has not been multilooked at this point, i.e. the pixels are not yet square (with the exception of RADARSAT fine beam data). To be useful for SAR interferometry, the data generally needs to be deskewed during the SAR processing. The resulting so-called zero Doppler geometry ensures that two interferometric data sets can be combined without introducing any further distortions. In order to be visualized the data needs to be first converted from its complex form into an amplitude image. Finally, *CEOS level one data* (L1) is the most commonly used format. It does not require any further processing to be useful for regular use. This is the only format that is fully supported by the MapReady software at the current time.


Apart from SAR data itself, which is stored in a binary form, the majority of the other files are stored in ASCII format and can be viewed with any editor available on your system. There is one important exception however. The CEOS leader file is not completely in ASCII format. In order to display the contents of these files, some tools are provided. The *metadata* program enables the user to read any of the CEOS records and store them in plain ASCII files for later reference. The ASF metadata viewer program, *mdv*, provides a graphical user interface for viewing the metadata.

After ingesting the data, all files are stored in an internal format. The image files are flat generic binary files without any headers (with the extension .img). The metadata are stored in text files (with the extension .meta).

Calibration

A SAR processor is calibrated when the coefficients required for accurate radiometry have been determined, but an image is calibrated only when those coefficients have been applied.

Calibrating a SAR image is the process of converting a linear amplitude image into a radiometrically calibrated power image. The input image is in units of digital numbers (DNs), whereas the output image is in units of β_0 , γ_0 or σ_0 , which is the ratio of the power that comes back from a patch of ground to the power sent to the patch of ground. The application requirements will help determine which of these calibration units to choose. Scientists are generally interested in quantitative measures that are reference to the ground, i.e. they would work with σ_0 values. For calibration purposes γ_0 values are preferred because they are equally spaced. Finally, system design engineers would choose β_0 values, because these values are independent from the terrain covered.

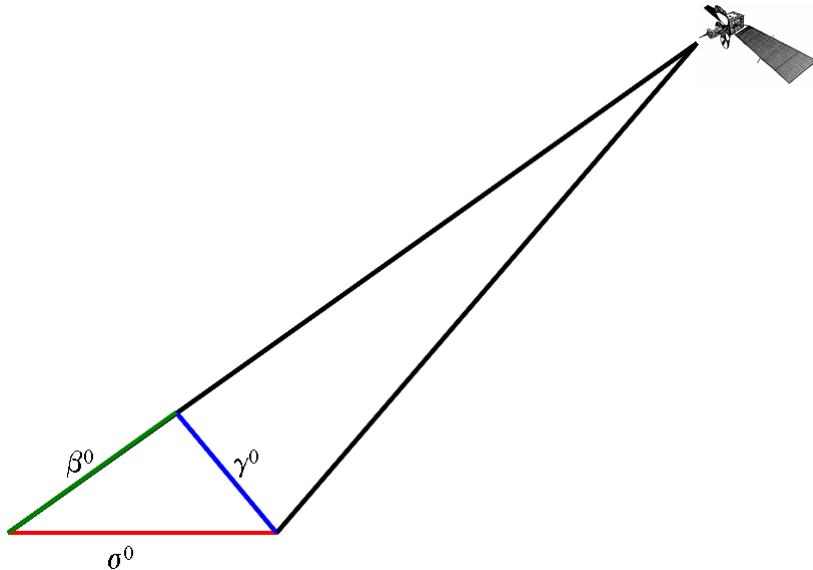

$$\sigma_0 = a_2 (DN^2 - a_1 N_r)$$

$$\gamma_0 = \frac{\sigma_0}{\cos \theta}$$

$$\beta_0 = \frac{\sigma_0}{\sin \theta}$$


The radar backscatter coefficients σ_0 , γ_0 and β_0 are calculated using the equations above. The digital numbers, DN, are the original pixel values. The noise offset N_r is a function of range. The noise scale factor a_1 and linear conversion factor a_2 are determined during the calibration of the processor. The values resulting from the equations above are in power scale. In order to convert them into dB values the following relationship is utilized:

$$\text{dB} = 10 \cdot \log_{10} (\text{power scale})$$

Calibrated images generally use the logarithmic dB scale. When image statistics are calculated for calibrated imagery, special attention needs to be given to the logarithmic nature of the values. In order to correctly determine the mean value of any part of the image, for example, the calculation has to be based on power scale values. The mean power scale value can then be converted back into the logarithmic scale to correctly represent dB values.


Terrain correction


SAR images are acquired in a side looking geometry. This leads to a number of distortions in the imagery.

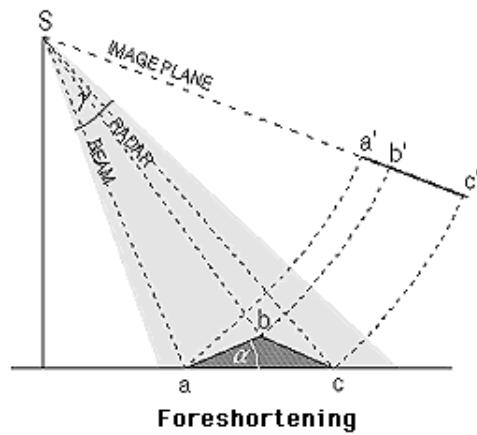

The time difference of two signals backscattered at the bottom and the top of a steep slope ($b'-a'$) is shorter than from the top to the back-side flat area ($c'-b'$). Therefore, the first two points are mapped to a shorter difference in slant range in the image. This geometric effect, called foreshortening, compresses the backscattered signal energy coming from the foreshortened areas, i.e. the affected areas in the image appear brighter.

The layover effect represents the extreme case of foreshortening. The signal backscattered from the top of the mountain is actually received *earlier* than the signal from the bottom, i.e. the fore slope is reversed. The pixel information from various objects is superimposed which leads to a brighter appearance on the image as well.

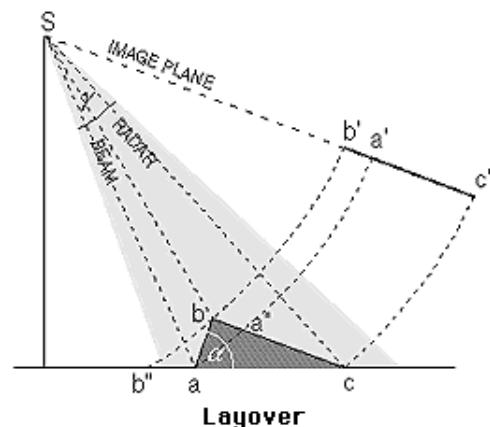

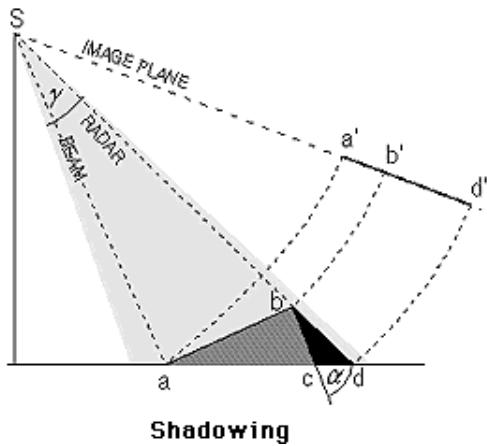

The shadow effect in radar imagery is different from optical imagery. In the case of radar, no information is received from the back slope (shown as a black region in the figure to the left.) The length of the shadow depends on its position in range direction. Therefore, the shadows in far range are longer than those in near range.

Terrain correction removes these geometry induced distortions by making use of the height information available within a digital elevation model (DEM). In this process the DEM is mapped into the SAR in slant range geometry. Part of this processing step is the refinement of the geolocation of the SAR image by matching the real SAR image with a simulated SAR image derived from the DEM. Then the SAR image can be converted in ground range geometry while correcting for the terrain effects.

Map projections

Maps are a two-dimensional representation of the three-dimensional real world. Projecting three-dimensional coordinates into a two-dimensional space is not possible without distortions in feature shape, area, distance, or direction. A very practical illustration of this problem is to lay a carefully peeled orange onto a flat table surface without fracturing it. Map projections can preserve some of the above mentioned characteristics at a time, but never all of them. Selecting an appropriate map projection allows them to be suitable for certain applications and/or geographical regions.

Cylindrical projections work best in equatorial areas. The Universal Transverse Mercator (UTM) projection is the most commonly used one from this family of map projections. The distortions within the UTM projection are manageable as long as the projected area is not very large.

Conic projections, commonly defined with two standard parallels, are often used in the mid-latitude regions. In this case, the Albers Conic Equal Area projection preserves area, while the Lambert Conformal Conic projection preserves angles.

Azimuthal projections are mostly used in the Polar Regions. The Polar Stereographic projection and Lambert Azimuth Equal Area projection are well known representatives of this type of projection.

The ASF MapReady software currently supports five of the most commonly used map projections:

- Universal Transverse Mercator (UTM)
- Albers Conical Equal Area
- Polar Stereographic
- Lambert Conformal Conic
- Lambert Azimuthal Equal Area

Polarimetry

ALOS/PALSAR data can be obtained which uses multiple polarizations to image a scene, including dual-pol (two different polarizations) and quad-pol (four different polarizations).

The “polarization” refers to the orientation of the signal that is sent, either “horizontal” or “vertical”. This is commonly visualized by imagining the wave propagating in either the horizontal or vertical direction, but since these are electromagnetic waves that visualization isn’t entirely accurate.

The ALOS/PALSAR satellite can transmit either horizontally (H) or vertically (V) polarized waves, and receive either as well. The two-letter polarization field of the ASF metadata is always one of HH, HV, VH or VV; the first letter refers to which polarization was transmitted and the second is which was received. For example, if H is transmitted, and V is received (HV), we’re looking at how the scatters on the ground changed the polarization of the wave from horizontal to vertical.

The RADARSAT-1 and ERS-1/2 satellites also used polarized waves, but could not use either; RADARSAT-1 always sent and received horizontally polarized waves (HH), ERS-1/2 always sent and received vertically polarized waves (VV). ALOS/PALSAR quad-pol data contains all four combinations – the satellite alternates between the four combinations, yielding more information about what is on the ground, since various terrain features respond differently to each polarization.

Configuration file

The MapReady tool has a large number of options and parameters that define the exact processing flow to be run. In order to keep track of the parameters in an organized fashion, they are stored in a configuration file. The graphical user interface version of the tool produces this configuration file from user-selected settings on the fly and then executes all of the selected processing steps based on that file.

For simplicity’s sake, the configuration file produced by the graphical user interface is of the same type as the one required to run the command line tool. For throughput reasons, a batch mode is available that allows users to run large quantities of data files through the system with minimal user input. All essential options can be stored in a default values file that is used to process all files in the batch file list using the same set of parameters (other than the input and output file names.) Setting these files up for use

with the command line tool is described later in the “*Running asf_mapready in batch mode*” section.

Temporary directories

MapReady provides the user with the capability of keeping intermediate results for further analysis. During each run, these intermediate files are kept in separate subdirectories for each data set. In order to ensure that intermediate results are not accidentally overwritten by consecutive processing of the same input files, the names of the subdirectories are created with a new date and time stamp. The intermediate files themselves have descriptive names that should make it easy to identify the files for further analysis.

Using the MapReady Graphical User Interface

Functionality

The graphical user interface (GUI) of the MapReady package provides the user with a convenient and interactive way to convert SAR data from their specific CEOS or STF format, explained in detail in the background section, into more user friendly formats that the majority of software packages dealing with images and their processing and analysis are able to handle. As part of the conversion process, the user can perform a number of modifications that make SAR data more powerful to use. These modifications include

- converting the digital numbers of an image into radiometrically calibrated values;
- converting the image from its SAR geometry into a map projection, i.e. geocoding it;
- correcting the SAR image for its geometric distortions using a digital elevation model, i.e. terrain correcting it.

The GUI consists of five areas that allow the user to set up, monitor and execute the conversion processing flow. The functionality of these five areas is described in this section of the manual in more detail.

 The “Settings” section, and the two “Files” sections contain expand/collapse  buttons, which hide & show each section.

Settings

This area consists of five tabs that define all the parameters used in the conversion process.

General

Select Processing Steps:

- Import Data (required...)
- Polarimetry (only for quad-pol SLC data)
- Terrain Correct (with Digital Elevation Model)
- Geocode to a Map Projection
- Export to a Graphics File Format

The General tab controls which of the four processing steps take place: Importing, Polarimetry, Terrain Correction, Geocoding, and Exporting.

The Import processing step is required, however the other three steps are optional. By default, only Import and Export are turned on. Checking/unchecking each step's checkbox will turn on or off the tab that contains the settings for that step's processing.

The general tab also contains the "Keep Intermediate Files" option. The processing flow creates a number of intermediate results for the various processing steps. For troubleshooting purposes or further analysis those intermediate results can be kept.

The "About MapReady..." button on this tab opens the About dialog, which contains contact information for the Alaska Satellite Facility, and the version number of the software.

Import Tab

The user can choose from a variety of data formats: CEOS (Level 0), CEOS (Level 1), STF, GeoTIFF, and ASF Internal.




In the current implementation of the CEOS data ingest, only the processing of CEOS level one data, which is the default value, is fully supported; additional tools are required to take full advantage of the CEOS level zero and STF data. It is not always possible for the software to determine the data format automatically. If however, it is possible to determine the data format automatically, then the automatic determination will override the selected type when processing, i.e. CEOS level 0 selected in the drop-down followed by selecting a CEOS level 1.x product will result in processing assuming CEOS level 1.x data rather than CEOS level 0 data.

Note that all processing other than the import step requires the data to be in the ASF Internal Format file format. This is in fact what the import step accomplishes (additionally applying radiometric conversions of selected.) The result of each processing step other than export will be another set of data in ASF Internal Format. Only export will change the file format to something else, i.e. to a graphics file format for GIS and viewer software compatibility. ASF Internal Format data is a set of 2 files, one that contains metadata (information) about the data in the dataset and another that contains the data itself in binary format. The files share the same name but have different file extensions. The metadata file ends in ".meta" and the data file ends in ".img".

The latitude option allows the user to create a subset of level zero swath data (STF) that contains a certain latitude range defined by its low and high latitude values.

A screenshot of a dialog box titled "Latitude". It contains two input fields: "Low:" with the value "64" and "Hi:" with the value "64.75". There is also a checked checkbox next to the "Latitude" label.

SAR data in its detected form reflects the intensity or amplitude of the reflected backscatter. In order to use SAR data in a quantitative fashion, it is advisable to radiometrically correct the data.

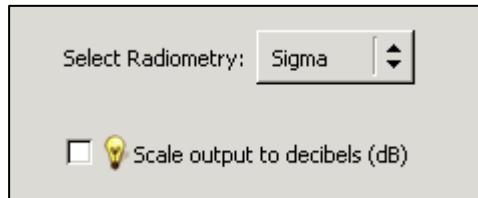

The radiometry default value for the data ingest is 'amplitude', i.e. the pixel values in the image are raw digital numbers. Alternatively, the intensity of the SAR image can be expressed by its power. Certain applications prefer to use the power of an image, rather than the amplitude.

As mentioned before, for quantitative measurements the calibration parameters need to be applied. Depending on the type of measurements, the calibrated values (sigma, beta or gamma) refer to the different projections as discussed in the background section. The values are in power scale.


Optionally, the values can be converted from power scale into dB (see checkmark above.)

Also on the import tab is the "Apply ERS2 Gain Correction" checkbox. The ERS2 satellite has a known gain loss problem that MapReady will attempt to correct by applying a scale correction factor uniformly to all pixels in the image. The correction is dependent on the date, and is only applied to calibrated data (i.e., everything but amplitude). If you are not processing ERS2 data, checking or unchecking this option has no effect.

For more information, see section 4 of:

http://www.asf.alaska.edu/reference/dq/Envisat_symp_ers2_performance.pdf

Polarimetry Tab

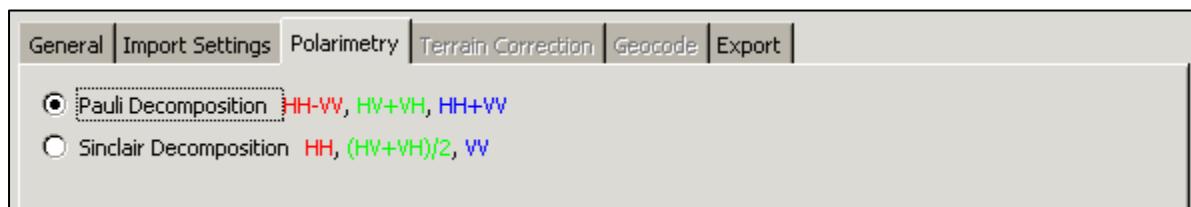

When processing complex quad-pol data (PALSAR Level 1.1), two different visualizations are available. These Polarimetric Decompositions take the four different bands of complex data (HH, HV, VH and VV) and mathematically combine them to produce three bands of real-valued data, which can be directly mapped to RGB and displayed. The mappings attempt to highlight the ways in which the various terrain features respond to the polarized signal data from the satellite.

When the Polarimetry tab is active, the Export tab's RGB options changes to "Export RGB Image according to Polarimetric selection". This means that the RGB channels in the final result are determined by the polarimetric decomposition. The channels and how they are calculated from the input quad-pol data are listed next to the radio button on the Polarimetry tab. For example, for Pauli the red channel is calculated by subtracting the complex VV-band value from the complex HH-band value, and then determining the magnitude of the resulting complex value.

The Pauli Decomposition is calculated from the input data using the following formulas:


- Red: $|HH-VV|$ — even bounce
- Green: $|HV+VH|$ — *rotated dihedral*
- Blue: $|HH+VV|$ — odd bounce

Using the Pauli decomposition to visualize the data allows one to see the dominant scattering mechanisms in different areas of the scene. For example, areas with buildings (where the even bounce return will dominate) will look reddish.

The Sinclair Decomposition is a simple decomposition that combines all four polarizations into a single RGB image in a simple way that doesn't require complex data. The green channel is the average of the cross-polarization terms, which theoretically are equal but may not be due to noise, etc.

This means that the Sinclair decomposition doesn't require SLC data, it can be done with Level 1.5 quad-pol data; whereas the Pauli decomposition requires SLC data (Level 1.1). Polarimetric decompositions added to MapReady in future versions will likely require SLC data as well.


Terrain Correction Tab

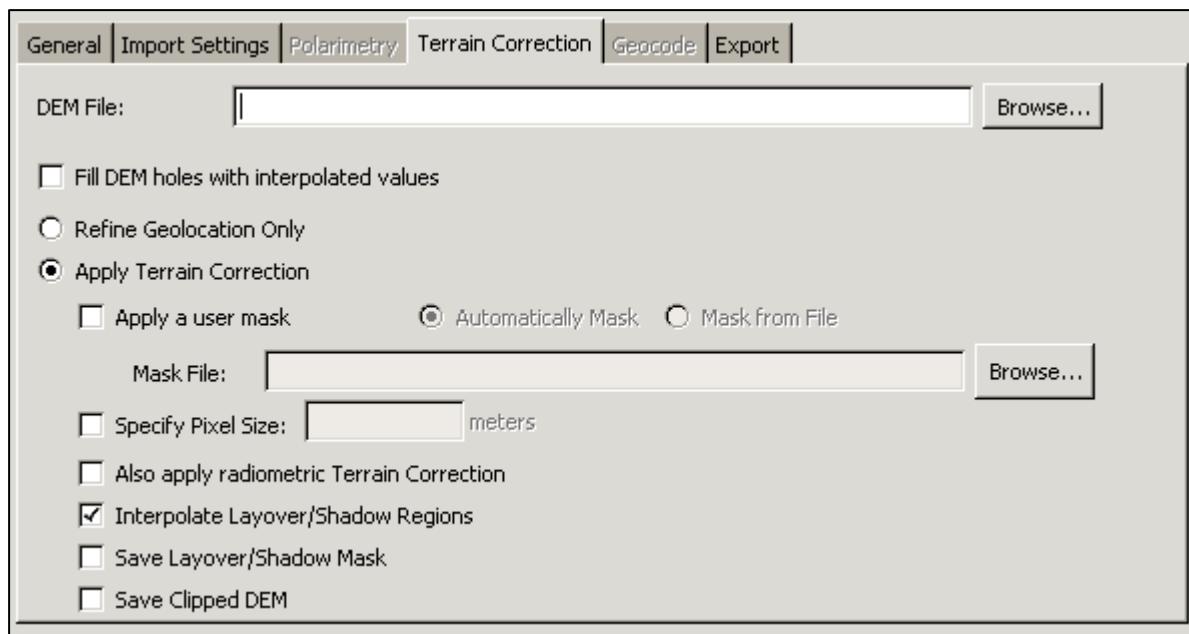


The use of digital elevation models (DEMs) is optional. However, a DEM can be used to improve the SAR data in two different ways. The most important improvement is the correction of distortions caused by the SAR geometry, also referred to as terrain correction. Note that in very flat areas the regular terrain correction procedures may not work very well. In this case, the user may want to consider only refining the geolocation of the image.

The DEM is assumed to be in the ASF internal format. DEMs retrieved in GeoTIFF format, including those from the [USGS seamless data distribution](#), can be ingested as well. Once a DEM is defined, by default the geolocation is refined by the DEM.

The user has a number of DEM and terrain correction related options. Some DEMs contain small 'holes' or regions of no data that appear as black specks or small blank spots.

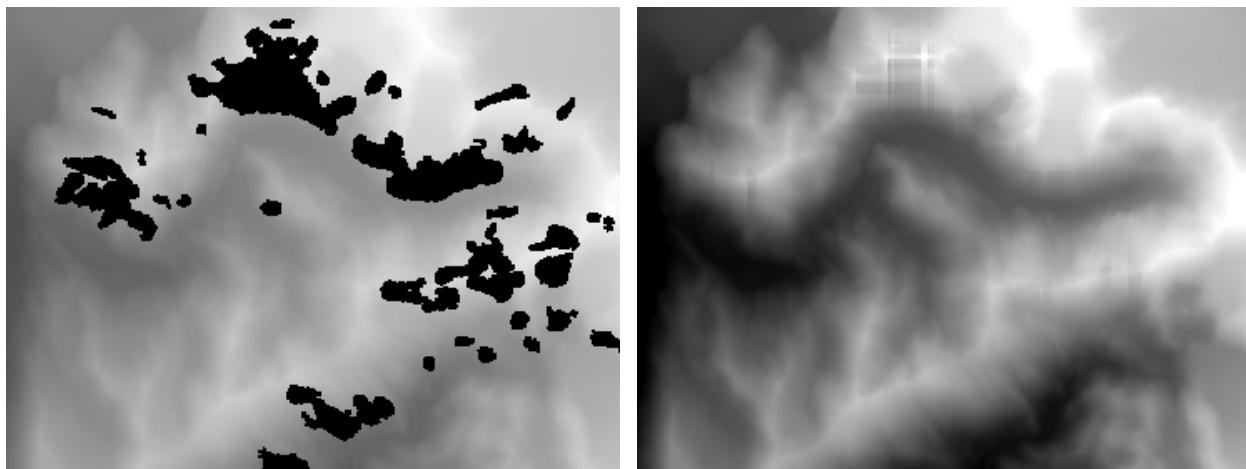

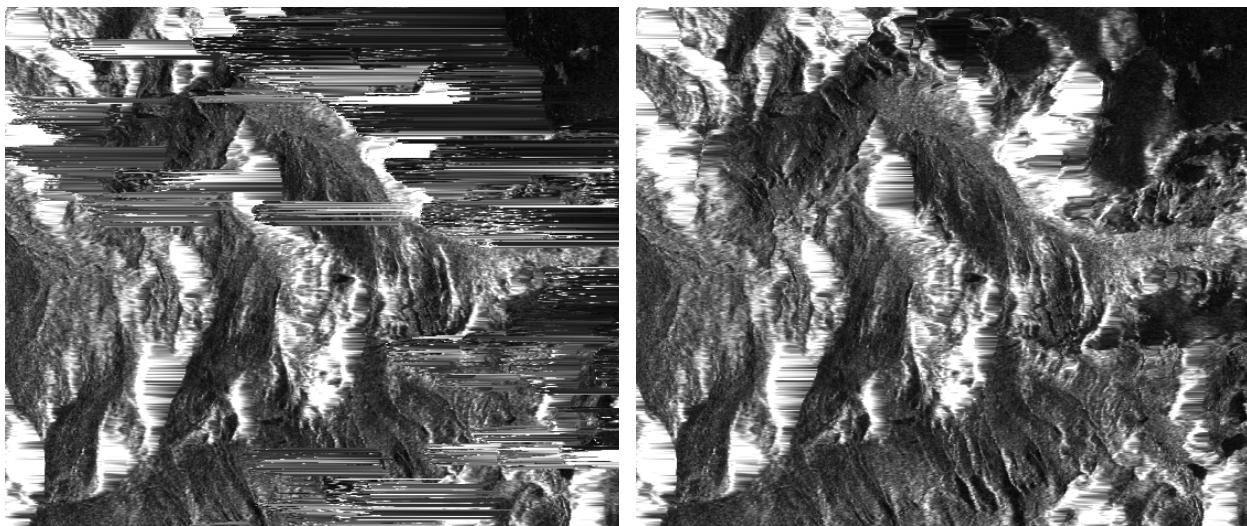

The image in the top left is the original DEM ('holes' clearly visible.) The DEM in the top right image shows the result of the hole-filling interpolation algorithm. The bottom two images show a terrain corrected image using this DEM without hole interpolation (left) and with DEM hole interpolation (right)

The data that is missing in these spots will generally result in minor defects showing up in the final product. If you so choose, you can select a DEM option (check box) for smoothly interpolating the terrain over the regions with missing data. While this will prevent minor defects from occluding the terrain which surrounds the DEM holes, the trade off is that the terrain which exists within the holes is now a best-estimate. It is suggested if your DEM contains holes that you try the processing with the interpolation algorithm turned on and off then compare the results to help you decide which method results in least impact for your purposes.

In case the SAR imagery contains areas that are moving, e.g. water bodies or glaciers, the user can refine the procedure by applying a mask. The automatic mask considers all values in the DEM below a threshold of one meter to be 'masked out' or ignored during the geolocation correlation processing steps that may have trouble trying to match the DEM to ever-changing water conditions or to terrain which is more difficult to match with, i.e. very low topographical detail, especially when combined with speckle. This approach works well for water bodies at sea level. Alternatively, a user defined mask file, assumed to be in ASF internal format, can be used. The description for how to generate a mask file within a GIS environment can be found in a separate document (see Appendix B.)

The terrain correction corrects the distortions in the SAR image using the height information in the DEM. For this process the tool adjusts the pixel size of the SAR image to the pixel size of the reference DEM (usually of lower resolution). This behavior can be overridden by specifying the otherwise optional pixel size. The pixel size option in the Geocoding tab (described below) is more appropriate if you are attempting to size

the final image product, the pixel size value specified here should be selected based on the pixel size of the DEM.

Apart from the geometric correction performed by the terrain correction, the image can be also corrected for its radiometry. Currently, the values are scaled using the formula: $1 - .7 \cdot \cos^2(\theta)$, where θ is the local incidence angle (calculated from the DEM). This is based on a Phong backscatter model.



By default layover and shadow regions in the terrain corrected image are filled with interpolated values. By deselecting this option, the algorithm fills these data holes with zeros.

The layover/shadow masks as well as the clipped, both generated in the terrain correction process, can be saved for further analysis. These products are very specific to this process and do not fall into the general scheme of keeping intermediate products, if selected. More information about the layover/shadow mask is available in the [Examples](#) section, below.

Geocode Tab

The geocoding step is an essential step to establish the relation from the SAR image geometry to the real world. By transforming the image from the SAR geometry into one of the standard map projections, the user can use the data set outside the ASF software tools. Nevertheless, the geocoding of the data is optional.

The geocoding step is invoked by turning on the “Geocode” checkbox, and selecting one of the available map projections. By default, a UTM projection is used, and the zone number will be determined by looking at the center point of the scene. In the summary section, this is indicated by “<from metadata>”.

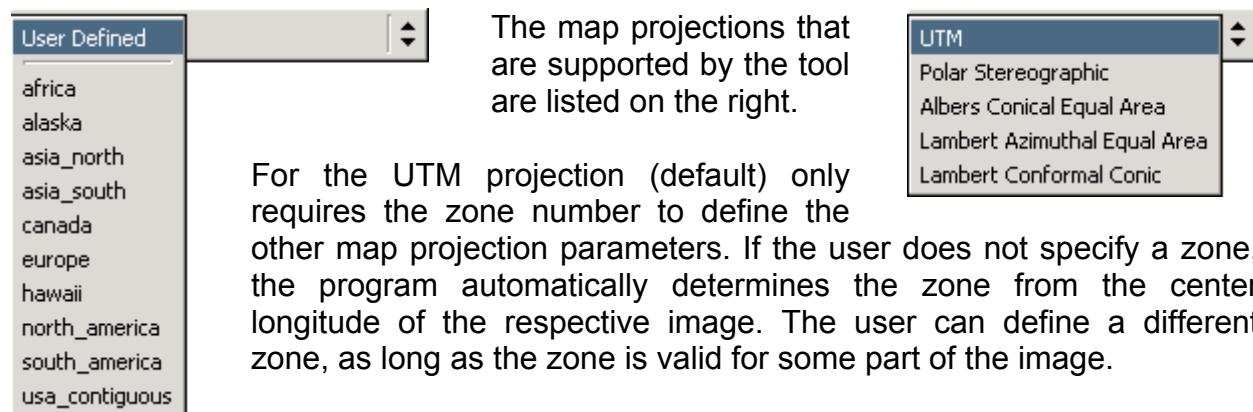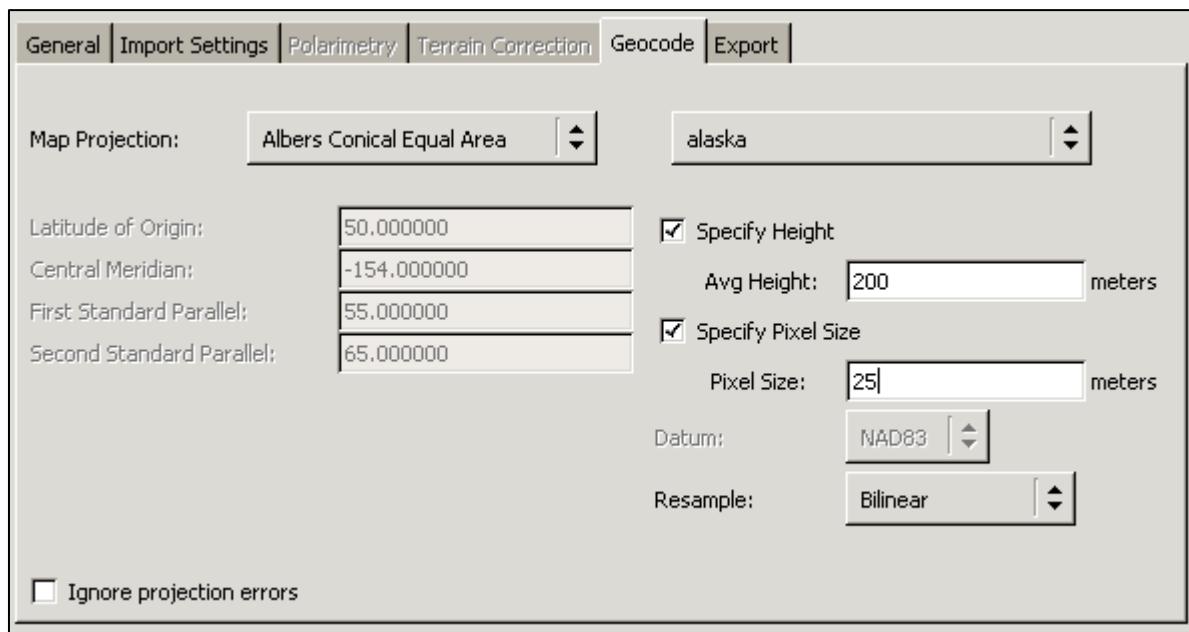

For the UTM projection (default) only requires the zone number to define the other map projection parameters. If the user does not specify a zone, the program automatically determines the zone from the center longitude of the respective image. The user can define a different zone, as long as the zone is valid for some part of the image.

For all other map projections the user can choose from a list of geographical regions for which the required map projection parameters are predefined. For the Polar Stereographic projection the choices are limited to the northern or southern hemisphere. The remaining map projection offers definitions for a larger number of areas as indicated on the left. Alternatively, a user defined map projection may be defined by selecting the type of map projection and manually entering the appropriate map projection parameters for that type. In order to permanently add a user defined map projection, a projection file may be created and stored in the projections subdirectory. The easiest way to do this is to copy one of the existing map projection definition files (*.proj) to a new name and then edit the parameters in the file. When doing so, it is important to only edit the values to the right of the '=' symbols found within the file else the value parsing may fail.

The use of map projection parameters outside their regular value range is limited to avoid extreme distortions in the output image. The following tests are performed to detect whether parameters are outside their regular range:

- latitudes need to be larger than -90 degrees and smaller than +90 degrees;
- longitudes need to be larger than -180 degrees and smaller than 180 degrees;
- UTM zones are only defined between 1 and 60;
- UTM zone needs to be covered in some part of the image;
- Polar Stereographic coordinates are only well defined in polar regions, hence limited to areas higher than 60 degrees latitude and lower than -60 degrees latitude;
- latitudes need to within 30 degrees of the latitude range defined by first and second parallel for Albers Equal Area Conic and Lambert Conformal Conic projection.
- datum selections that may result in large errors, i.e. using a NAD-27 datum for a map projection in Africa would fail unless the “Ignore projection errors” check box is checked

Even though these restrictions are highly recommended, they can be overridden by selecting the "Ignore projection errors" option. Doing so will change process-terminating errors into warning messages instead and the requested processing will continue.

An average height can be specified for the geocoding. All pixels at this particular height will have no geometric distortions in the resulting geocoded image. This assumes that no terrain correction is applied to the data --- if terrain correction has been applied, the average height value is ignored since the DEM provides all height information. Another option that may be selected is the definition of a pixel size for the geocoded output image.




Three datums and one reference spheroid (Hughes) shown on the left can be selected from the Datum drop-down list as the reference frame. The most commonly used one is WGS84 which is the default. Note that if you select Hughes, that exporting to a GeoTIFF will result in a spatial reference with an undetermined datum. Although this is correct according to the European Petroleum Survey Group (EPSG) database, not all GIS software packages will recognize this type of definition and may have trouble recognizing the map projection definition. Also note that the Hughes datum is generally not commonly utilized except in certain polar stereographic SSM/I datasets (north and south pole data) by the National Snow & Ice Data Center (NSIDC.).

None of the projections defined by MapReady use the Hughes datum. You can get a Polar Stereo / North projection that uses the Hughes datum (instead of the usual WGS84) by selecting the predefined projection “Polar Stereo / North”, and then changing to “User Defined”. This will leave the projection parameters for the Polar Stereo North projection (central meridian -150, and first standard parallel 70), and you may then change the datum to Hughes.


As part of the transformation from the SAR geometry into the map projected space, pixels need to be resampled using an interpolation approach. The list on the right offers three different methods. The nearest neighbor approach is the fastest of these techniques but also regularly introduces unwanted artifacts. The bilinear interpolation scheme considers four neighboring pixel values and typically leads to satisfactory results and is therefore the default setting. Bicubic interpolation is even more accurate but is also computationally the most intensive of the three.



Export Tab

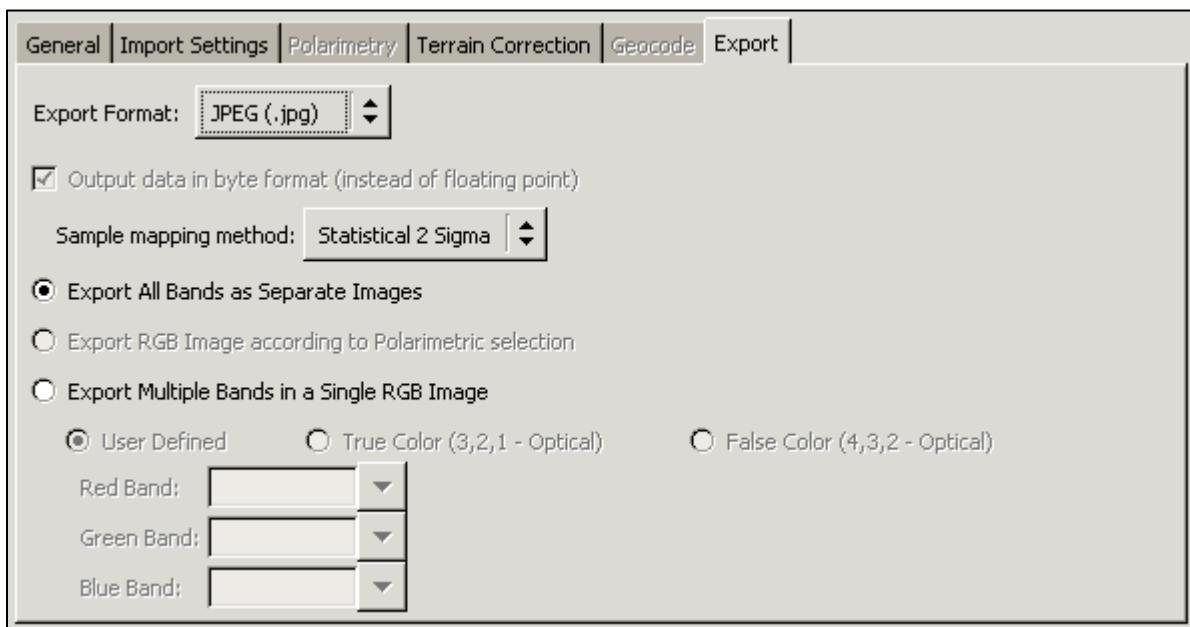


In order to use the data in external software packages, the user might want to convert the images to a more common format. This processing is optional, however selected by default.

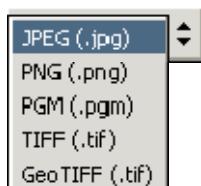

The available output formats are listed on the left. JPEG, PPM and GeoTIFF are the most common graphic formats. Because the JPEG format has the best compression capabilities of these formats, it was selected as the default. All the above mentioned formats require the scaling of the data from floating point to byte values. The GeoTIFF is the most flexible choice. It allows the user to preserve the full dynamic range by keeping the floating point values as well as including spatial reference (map-projection) in TIFF tags and GeoKeys commonly recognized by popular GIS packages.

If no quantitative analysis is required later, the values can be safely converted to byte values by choosing to save the output in byte format together with choosing a method for rescaling the floating point values to byte values. NOTE: If export processing is unselected on the General Tab, then no export will occur and any data that has been processed will remain in ASF Internal Format (see Import Tab section above.) Also, if export to a graphics file format is selected, then the metadata (.meta) file that applied to the ASF Internal Format file set will remain after the export, but the image data (.img) file will be gone unless you elected to save intermediate files (see General Tab section.) This is important since the metadata file information may no longer fully represent the data once the data has been exported, i.e. if remapping occurs then the statistics section, if it exists, will not accurately represent the exported data ...but does accurately represent the data prior to remapping during export.

For the scaling of floating point to byte values, a number of sampling methods are available. They are listed on the right. The default method uses a statistical approach that eliminates any outliers that are outside of two standard deviations around the mean. This approach produces satisfactory results in most cases.

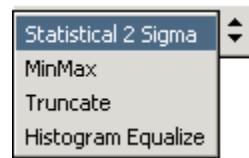


Alternatively, the original dynamic range of the image with its minimum and maximum value can be mapped into the byte value range of 0 to 255. When exporting mask images, the values can most often simply be truncated without any loss of information. Histogram equalization is a nonlinear rescaling method designed for maximizing visibility of the details in the image. Histogram equalization will help expose detail in regions where the local dynamic range is low, i.e. extra dark or extra light regions that tend to hide fine detail will have the local contrast expanded over a broader range of values which highlights detail previously difficult to see.

For images containing multiple bands, the user may select exporting each band or channel to a separate file, i.e. each color (optical) or polarization (SAR) channel, or to a color file (if supported by the selected graphics file type.) In addition to being able to manually select which color band individual channels are mapped to, for polarimetric data several predefined settings are available, as selected on the "Polarimetry" tab. If you have selected a polarimetric decomposition, you will not be able to select RGB channel assignments, the only option available is "Export Image According to Polarimetric Selection".

For optical images, you may also select True Color or False Color output types. If True Color is selected, band 03 will be assigned to the red band, 02 to the green band, and 01 to the blue band. If False Color is selected, then band 04 (near-IR) will be assigned to the red band, 03 to the green band, and 02 to the blue band. Additionally, whenever True Color or False Color is selected, each color band is individually contrast-expanded using a 2-sigma contrast expansion derived from each band's individual statistics.

Input Files

While the tabs section defines the steps, parameters and options of the processing flow, the files section control the data that serve as input to the processing flow. It consists of a number of components describe here in more detail.

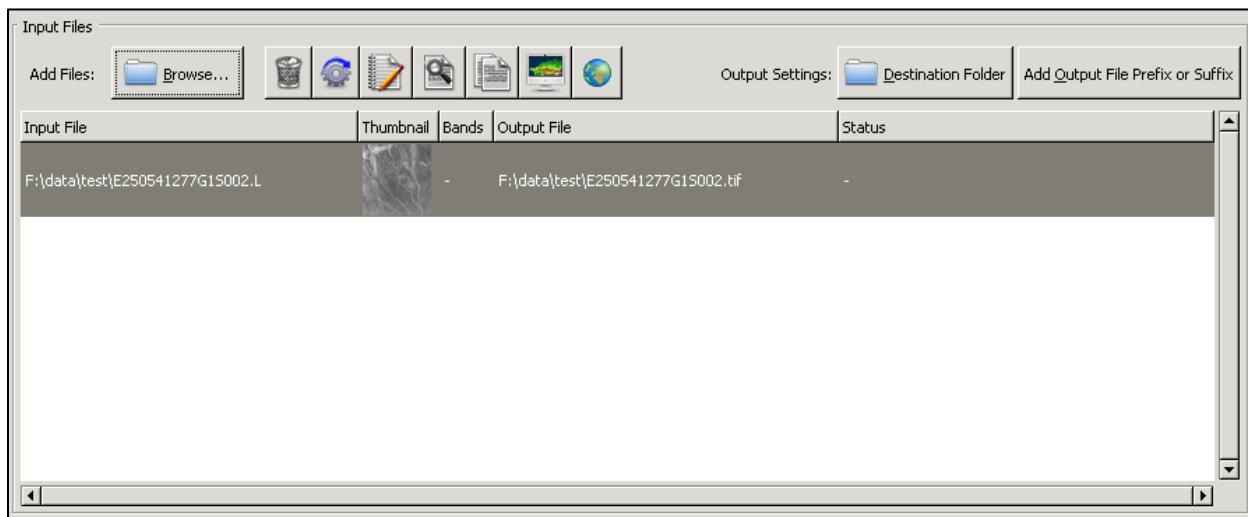

The file browsing menu with its standard functionality handles the selection of individual or groups of files to be processed. Once selected, the files are individually listed and thumbnails are generated for each input image.



Most CEOS files have multiple files together which compose the data. When selecting files for processing, it doesn't matter which of the multiple files you actually select. The "Input Files" will usually list the metadata file for a particular data set, regardless of which file you actually selected.



Immediately to the right of the "Browse" button is a toolbar containing buttons to help to get the data sets organized for the processing.



The "Remove" button deletes a file from the processing list. This becomes necessary, for example, when the input thumbnails, even though they are small, reveal that the selected image does not contain a certain feature or the area of interest. All selected files are removed.



The "Process" button starts the processing of the selected data set rather than processing the entire list of files (see "[Execute](#)" button for details). This feature is particularly useful when a few data sets out of a long list did not successfully process with the current sets of options and parameters. After selecting the appropriate values the data sets can be individually re-run using this feature.



The "Rename" button lets the user individually rename the output images of a run. This feature is mostly used when the same input data set is run with different options and parameters without overwriting any of the previous results. For renaming a large number of files see the details on [naming schemes](#).



The "View log" button allows the user to display the log file once a data set has been processed. The log file contains the feedback from the individual functions called as part of the processing flow. The log file is the single most useful piece of information for troubleshooting problems as it contains the error messages that the tool issues in case the processing needs to be aborted.



The "Display CEOS metadata" button launches the ASF metadata viewer. The viewer reads the CEOS leader file, a partially binary and partially ASCII file that contains the metadata associated with the binary data (see Viewing the Leader Data below.)



The "View Input" button launches the ASF viewer (`asf_view`) to view the selected input file.



The "Display in Google Earth" button launches Google Earth ®, zooms to the image location on the Google Earth globe, and displays a blue box which illustrates the image boundaries.

For images in the UTM projection, it is possible to generate an overlay – the data will be placed on the Google Earth globe, in addition to the boundary.



The functionality of the toolbar menu buttons is also available as a right mouse click context menu (as shown on the left) if you right-click on a selected input file.


Viewing the Leader Data

As mentioned above, clicking the “Display CEOS metadata” toolbar button (or, selecting that option from the right-click context menu) will launch the metadata viewer for viewing the CEOS leader file contents. The leader file is defined by a number of data records. The *data set summary record* provides general information about the image such as orbit and frame number, acquisition date, image size and sensor characteristics. The *platform position data record* contains orbital information in form of state vectors that describe the position of the satellite at a given time.


Metadata File: F:\data\test\E250541277G1S002.L

Data Set Summary	
Scene Header Record	***** begin of Dataset Summary record *****
Map Projection Data	DSS SEQ NUM 1
Platform Position Data	SAR CHNL INDTR 1
Altitude Data	SCENE INDICATOR E250541277G1S002
Radiometric Data	SCENE DESIGNATOR
Radiometric Compensation Data	INPT SCN CTR TIME 20041219212959479
Processed Data Histograms	ASC/DESCENDING DESCENDING
Signal Data Histograms	LAT @ SCN CTR 68.8063890
Range Spectra	LONG @ SCN CTR -150.5311900
Processing Parameters	SCN CTR HEADING 202.9291400
Data Quality Summary	ELLIP DESIGNATOR GEM06
Facility Related Data	ELLIP SEMIMAJOR 6378.1440000
Image File Descriptor	ELLIP SEMIMINOR 6356.7549000
Leader File Descriptor	EARTH MASS 398600.5000000
	GRAVITATIONAL CNST 9.8000002
	ELLIP PARM 1 0.0010826
	ELLIP PARM 2 -0.0000025
	ELLIP PARM 3 -1610000.0000000
	AVG TERRAIN HT 0.0000000
	IMG CTR LINE NUM 4096.000000
	IMG CTR PIX NUM 4096.000000
	IMAGE LENGTH 102.4000000
	IMAGE WIDTH 102.4000000
	NUM SAR CHANNELS 1
	MISSION ID ERS-2
	SENSOR ID ERS-2-C - -VV
	ORBIT NUMBER 50541
	PLAT LAT @ NADIR 67.837
	PLAT LONG @ NADIR -143.789
	PLAT HEADING 202.929
	SNSR CLK ANGLE 90.000
	INCIDENCE ANGLE 22.922
	RADAR FREQUENCY 5.304
	RDR WAVELENGTH 0.0565600
	MOTION COMP IND 00
	RNG PULSE CODE LINEAR FM CHIRPS
	RNG CENTER 0.0000000000000000

 **Destination Folder** The "Destination Folder" button opens small selection menu that lets the user browse for an appropriate output directory where the results of the current processing run are to be stored. This option applies to all files in the input file list.

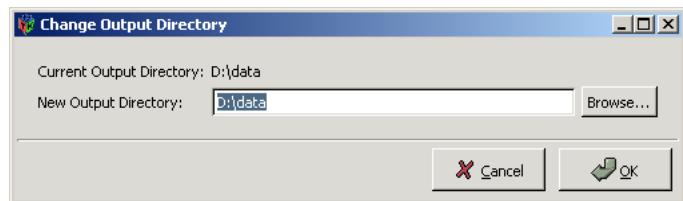

 **Add Output File Prefix or Suffix** The "Add Output File Prefix or Suffix" button opens a menu for defining a naming scheme for the output images. These schemes are particularly useful if the user wants to run the same batch of data sets with different processing options for a comparative analysis. To all the files selected in the input file section, a prefix and/or suffix can be added, i.e. to indicate that all files have been geocoded into the UTM projection.

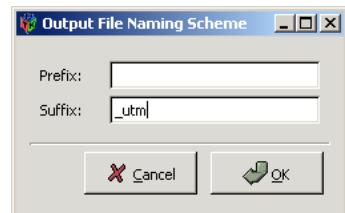


Input File	Thumbnail	Bands	Output File	Status
F:\data\test\E250541277G1S002.L		-	F:\data\test\E250541277G1S002.tif	-

A thumbnail is created for the input image. In case of multi-band imagery, the thumbnail is generated for the first band (only.) For multi-band images all available bands are displayed in the bands field. This simplifies the selection of an appropriate band combination in case the output images are going to be exported as an RGB composite. Note that each band in an input file can be viewed separately, or as a color composite, with the asf_view data viewing tool by clicking the "View Input" button. The user can also monitor the progress of processing the individual data sets as they are processing. The status is updated constantly and indicates what processing step is currently being performed. In case of an error occurring during processing, a short error message is displayed in the status field to indicate what went wrong.


Once the image is successfully processed it is removed from the input file list and added to the list of files in the Completed Files section.

Completed Files

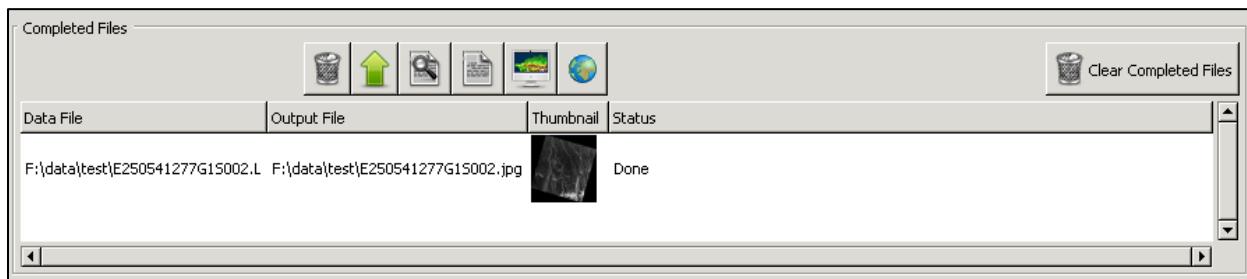


A number of buttons are available to help analyze the results

-  The "Remove" button deletes a file from the list of processed files. This is handy, for example, when the output files are not going to be reprocessed and you don't need to view the log, metadata, output, or the output in Google Earth ®. All selected files are removed.
-  The "Prepare to Re-Process" button moves the image back into the processing queue. This feature is useful when image had apparently not been processed with the intended processing parameters.
-  The "View log" button allows the user to display the log file once a data set has been processed. The log file contains the feedback from the individual functions called as part of the processing flow. The log file is the single most useful piece of information for troubleshooting problems as it contains the error messages that the tool issues in case the processing needs to be aborted.

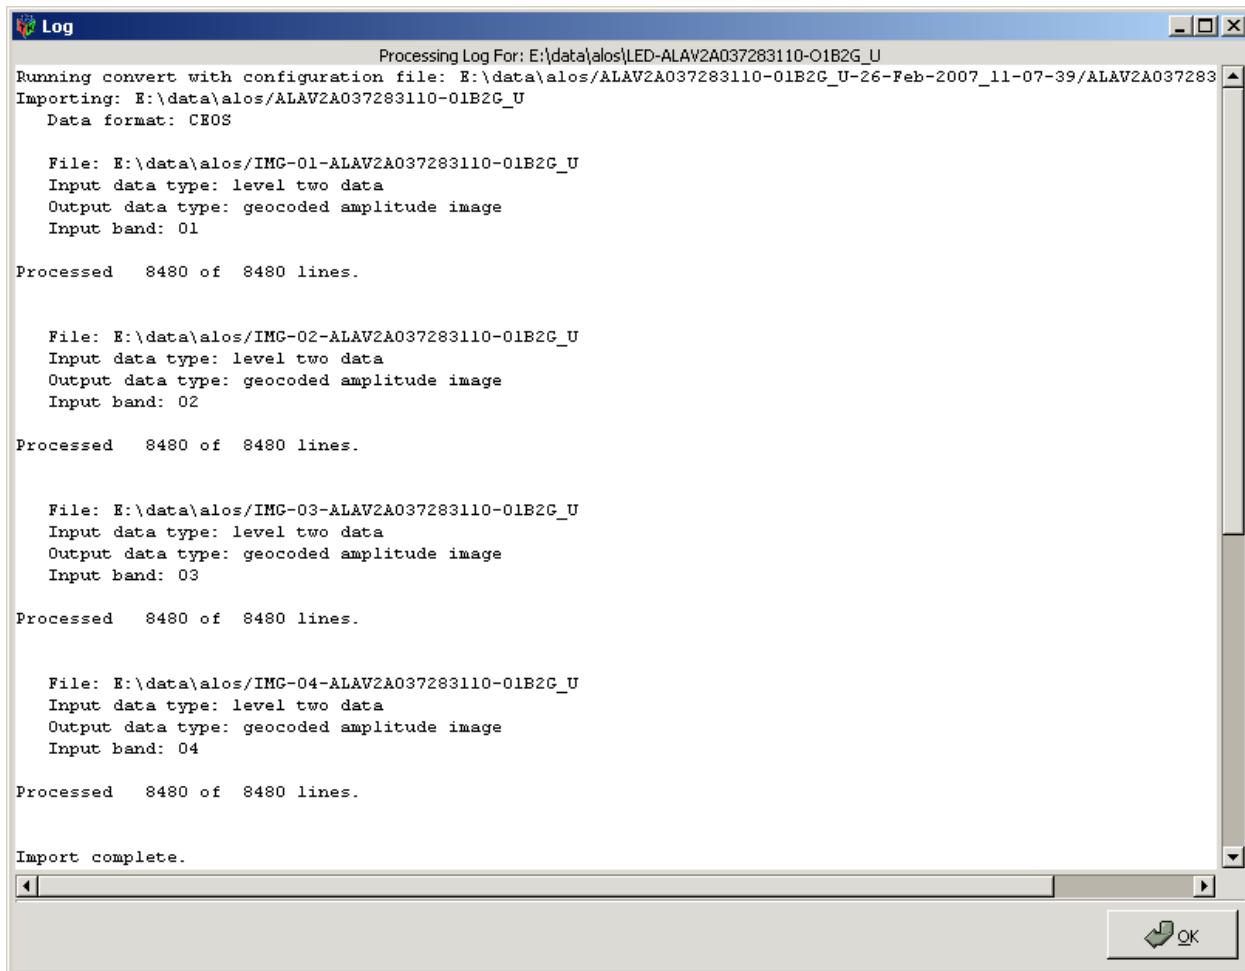

 The "Display ASF metadata" button opens a text window with the internal ASF metadata. The metadata contains a number of structures that provide the essential information to identify, describe and process the data. It is a very small subset of parameters that are extracted out of the CEOS metadata.

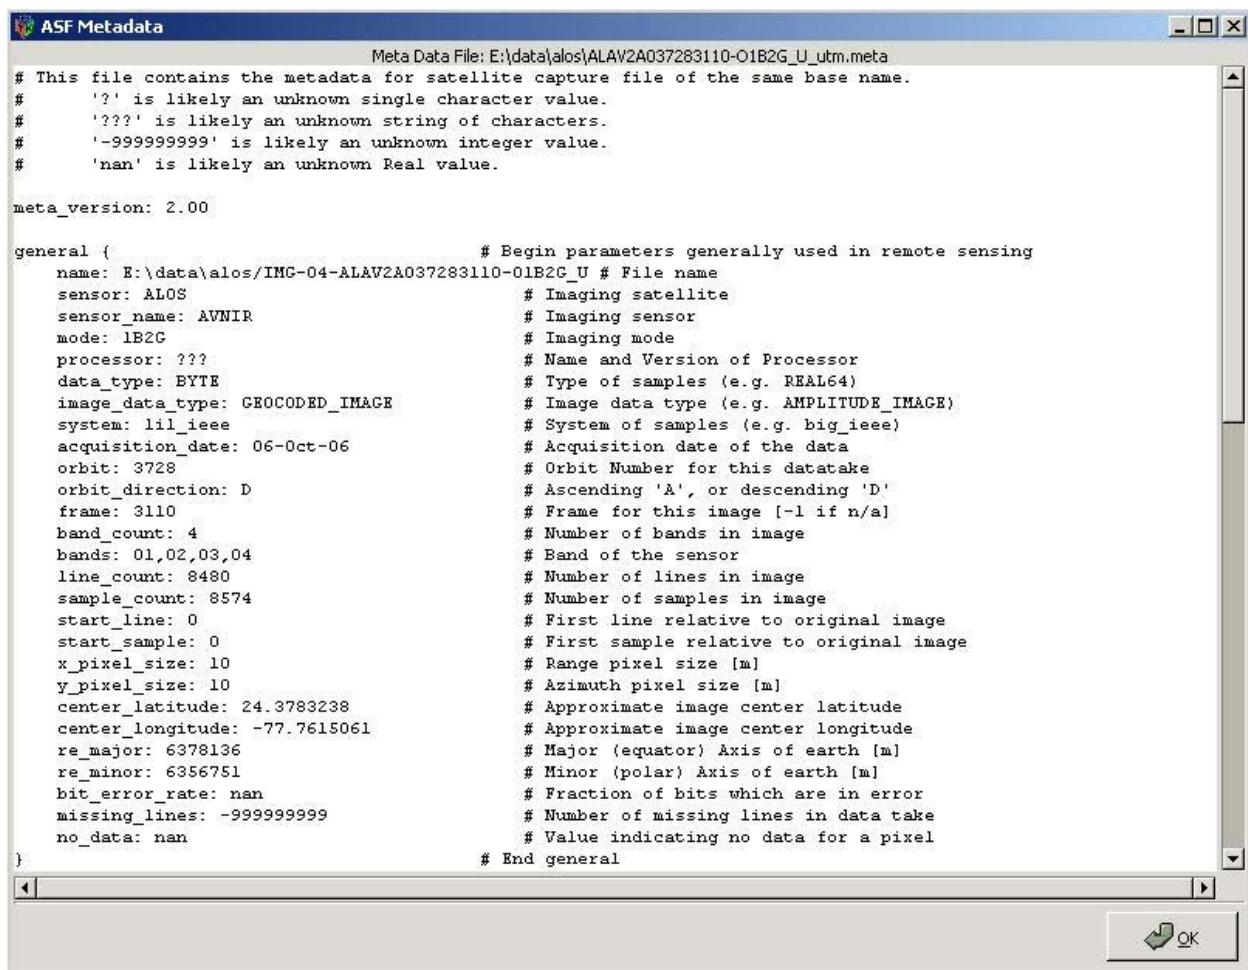

The screenshot shows a Windows-style dialog box titled "ASF Metadata". The title bar includes standard window controls (minimize, maximize, close). The main area contains a text editor displaying a configuration file. The file starts with a header indicating it's a meta-data file for a satellite capture. It defines several sections, with the most extensive being the "general" section which lists various parameters such as sensor name (ALOS), sensor type (AVNIR), mode (1B2G), processor (???, likely a placeholder), and various geometric and spectral parameters. The "general" section ends with a closing brace. At the bottom right of the dialog is an "OK" button.

```

ASF Metadata
Meta Data File: E:\data\alos\ALAV2A037283110-O1B2G_U_utm.meta
# This file contains the metadata for satellite capture file of the same base name.
#      '?' is likely an unknown single character value.
#      '???' is likely an unknown string of characters.
#      '-999999999' is likely an unknown integer value.
#      'nan' is likely an unknown Real value.

meta_version: 2.00

general {
    # Begin parameters generally used in remote sensing
    name: E:\data\alos\IMG-04-ALAV2A037283110-O1B2G_U # File name
    sensor: ALOS # Imaging satellite
    sensor_name: AVNIR # Imaging sensor
    mode: 1B2G # Imaging mode
    processor: ??? # Name and Version of Processor
    data_type: BYTE # Type of samples (e.g. REAL64)
    image_data_type: GEOCODED_IMAGE # Image data type (e.g. AMPLITUDE_IMAGE)
    system: lil_ieee # System of samples (e.g. big_ieee)
    acquisition_date: 06-Oct-06 # Acquisition date of the data
    orbit: 3728 # Orbit Number for this datatake
    orbit_direction: D # Ascending 'A', or descending 'D'
    frame: 3110 # Frame for this image [-1 if n/a]
    band_count: 4 # Number of bands in image
    bands: 01,02,03,04 # Band of the sensor
    line_count: 8480 # Number of lines in image
    sample_count: 8574 # Number of samples in image
    start_line: 0 # First line relative to original image
    start_sample: 0 # First sample relative to original image
    x_pixel_size: 10 # Range pixel size [m]
    y_pixel_size: 10 # Azimuth pixel size [m]
    center_latitude: 24.3783238 # Approximate image center latitude
    center_longitude: -77.7615061 # Approximate image center longitude
    re_major: 6378136 # Major (equator) Axis of earth [m]
    re_minor: 6356751 # Minor (polar) Axis of earth [m]
    bit_error_rate: nan # Fraction of bits which are in error
    missing_lines: -999999999 # Number of missing lines in data take
    no_data: nan # Value indicating no data for a pixel
}
# End general

```




The "View output" button opens the output viewer that allows the user to inspect the output images. See the section on "ASF View" below for information about the viewer application.



The "Display in Google Earth" button launches Google Earth ®, zooms to the image location on the Google Earth globe, and (for most UTM projected images) displays an overlay which illustrates the image boundaries.

The functionality of the completed files section menu buttons is also available as a right mouse click context menu (as shown on the right). The menu can only be invoked *when a file is selected* from the file list.

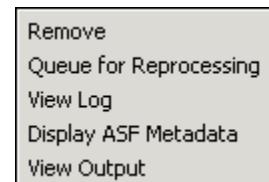



The "Clear" button deletes the images from the completed files section.

Data File	Output File	Output Thumbnail	Status
E:\data\alos\LED-ALAV2A037283110-O1B2G_U	E:\data\alos\ALAV2A037283110-O1B2G_U.tif		Done

A thumbnail for each output image is generated once it is moved into the completed files section. The information about input and output names remains available.

Summary section

The user can find all file names and parameters that are used by the conversion tool in one compact list.

The list is divided into separate entries for each of the tabs. The summary allows the user to verify which of the processing steps are selected and what input values are used for the individual processing steps. It is updated each time make a change in the tab section of the GUI.

Summary
Import: CEOS Level One
Data type: Amplitude
Terrain Correction: Yes
DEM: alaska_dem.img
Pixel Size: 25.000000 m (from geocode)
Interpolate Layover: Yes
Automatic Mask
Save DEM & Layover Mask
Geocoding: Albers Conical Equal Area
Center: (50.000000, -154.000000)
Standard Parallels: (55.000000, 65.000000)
Pixel Size: 25.000000 m
Datum: WGS84
Resampling Method: bilinear
Export: geoTIFF
Byte Scaling Method: Sigma

Footer buttons

The footer consists of three buttons that allow the user to manage the processing of all the files loaded in the files section.

Process All



The "Process All" button starts the processing of all the files listed in the files section. The files are processed are processed with the output directories and naming schemes defined for the individual data sets. The list of data sets is processed in the order that they were loaded into the files section.

During processing, the terminal window that opens along with MapReady will contain the messages generated during the processing. These messages can also be viewed with the "View Log" option, after the file has finished processing.

If an image is successfully processed, it is moved to the “Completed Files” section. If one or more errors occurred during the processing, then it remains in the upper “Files” section, and the Status is set to “Error”, along with a small portion of the actual error message. To get the full error information, use the “View Log” option.

Warning messages generated during processing are also kept in the log – if your image result isn’t satisfactory, check the log to see if any warning messages were generated that might explain why the image didn’t produce the result you were expecting.

Note that when the “Process All” button is clicked, the “Settings” section is automatically collapsed, and the “Completed Files” section is automatically expanded.

Stop Processing



The “Stop Processing” button interrupts the processing of the list of data sets. The image that is currently being processed will stop with a “Processing Stopped By User” error, though any data files that have already completed are left in the “Completed Files” section.

It may take a moment for the processing to stop.


Help



The “Help” button opens the help menu. The help menu contains a contents section with information on:


- how to obtain and install the tool
- how to get started following some example conversions
- options and settings used for the processing of data sets.

In addition, the help menu also has a function that provides the user with the capability to search for keywords.

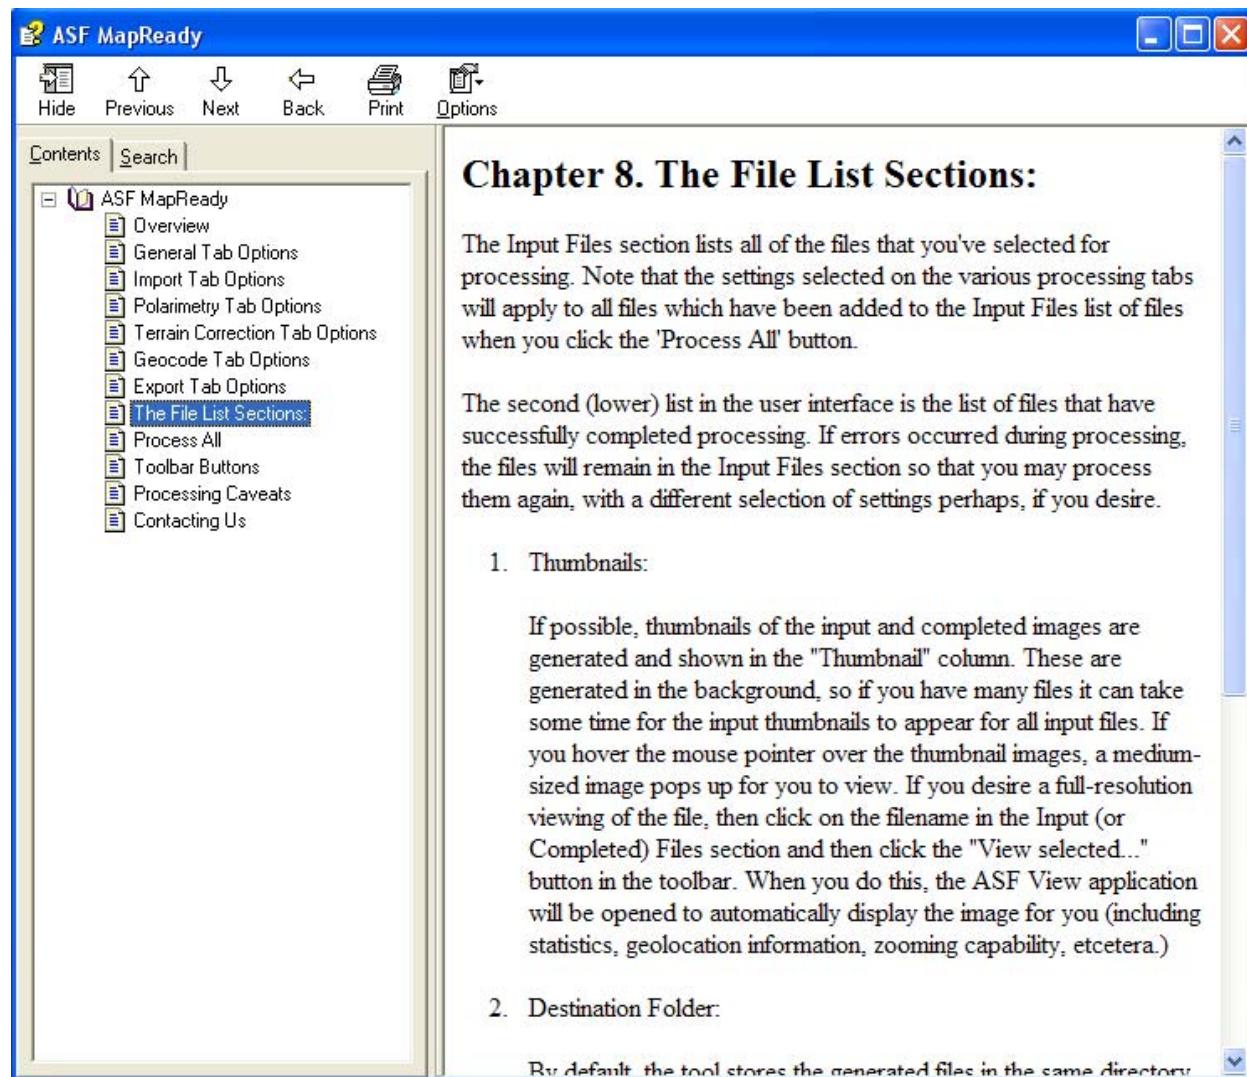

Tool tips

All parts of the GUI, i.e. buttons, check boxes etc, have tool tips attached to them. They provide a brief explanation about the functionality and the options available to the user.

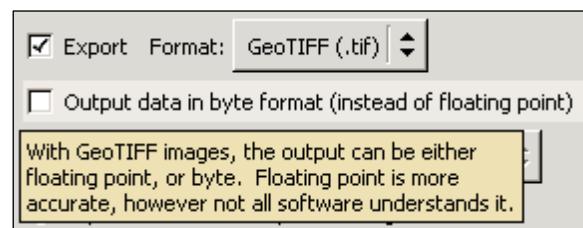

ASF View

The ASF tool suite contains a basic viewer which can be used to view your CEOS, GeoTIFF, ASF Internal format, and other image format files. All image formats

supported by MapReady are supported by ASF View.

Running ASF View

ASF View can be started from within MapReady using the “View Input” and “View Output” options in the files sections. Select a file, then click the appropriate button (or, use the right-click menu). ASF View will start up and display the selected file.

For Windows users, there is a shortcut for ASF View in the ASF Tools start menu group. After starting ASF View, select the “Open File” button to and load in the file you wish to view.

For imagery with more than one file (such as CEOS images), you can choose any of the files. For example, to load a Radarsat CEOS file, you can select either the .D file (the data file), or the .L file (the leader file).

Finally, ASF View can be started on the command-line. The file you wish to view can be given as the argument. For example, to run ASF View and load file1.D:

```
asf_view file1.D
```

Using ASF View

The ASF View window contains 4 sections. On the right, there is the main viewing window. Initially, this is a 1:1 view of the center of the image. On the left, there are three vertically stacked sections: the full image thumbnail, an information section (containing information about the currently selected point – the crosshair), and a tabbed section with more detailed image information.

Immediately below the full image thumbnail is a row of buttons. The rightmost button is the “Open File” button – the others are discussed below.

The tabbed section contains a “Help” tab that lists the basic functionality.

Basic Mouse Usage

Left-Click: Place crosshair

The “crosshair” is the currently selected point, shown with a small green crosshair. By default, it is the center of the image.

The “Information” section on the left displays information for the currently selected point. Not all of the information shown is present for all images: for example, when viewing unprojected images, no projection coordinates are displayed; images with no geolocation information won’t have any latitude/longitude values; and for non-Radar images, the incidence, look, slant range and times values won’t be displayed.

Information

```
Line: 5500.0, Sample: 5500.0
Pixel Value: 24.000000 --> 136
Lat: 78.2588, Lon: -174.4886 (deg)
Proj X,Y: 2933741.4, 10577842.5 m
Incid: 37.7410, Look: 32.9158 (deg)
Slant: 984155.0 m Time: 39.375 s
Distance: (ctrl-click to measure)
```

Right-Click: Re-center view

Right-clicking in the image will change the view so that the clicked-on point becomes the new center point. The crosshair is not moved. The other way to navigate around in the image is to click on the full-image thumbnail, in the upper left corner.

Left-Click and Drag: panning

Panning is accomplished by left-clicking on the image, and holding the mouse button down while “dragging” the image to the new location.

Scroll Wheel: Zoom in/out

Zooming in/out is accomplished using the scroll wheel on the mouse. The page up/down keys will do the same thing.

Zooming in to zoom factors smaller than 1 (i.e., when 1 pixel in the image will cover multiple screen pixels) is possible, though the image will begin to look pixilated. No smoothing or filtering is done, for zoom levels greater or smaller than one.

Home: Zoom to 1:1

End: Fit Image To Window

The “End” key will zoom out to a zoom level such that the entire image is visible in the main viewing window. “Home” will return to the default 1:1 view.

Defining Polygons

Ctrl-Left-Click: Place secondary crosshair(s)

Holding “ctrl” while left-clicking will place a red crosshair. This secondary crosshair can be used to measure distances. After placing the secondary crosshair, the distance between the two points is displayed in the information section.

More than one secondary crosshair can be placed. This will define a polygon, and the total length and the enclosed area of the polygon is displayed in the information section.

Backspace: Remove last ctrl-clicked point

Esc: Clear ctrl-clicked path

Erroneous or badly placed ctrl-clicked points can be cleared using Backspace (clears the last point added) and Escape (clears the entire path).

Arrow Keys: Move crosshair 1x

To fine-tune the positioning of selected points, use the arrow keys. By default, the most recently positioned point is moved. Using “ctrl” and/or “shift” with the arrow key will move the crosshair by a larger amount. (ctrl-arrow: 10 pixels, shift-arrow: 25 pixels, ctrl-shift-arrow: 250 pixels)

Tab: Toggle which crosshair is moved



The “tab” key will change the point that is moved when the arrow keys are used.

Defining Polygons - Example

To illustrate how defining polygons works, we will measure the circumference of the field in the image to the right.

We start by left-clicking on the top left corner. If we miss the point, we can use the arrow keys to fine-tune the location.

If necessary, we could zoom in to ensure that we've got the actual corner.

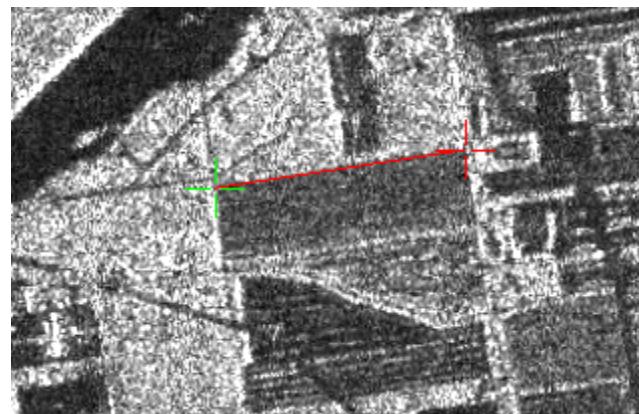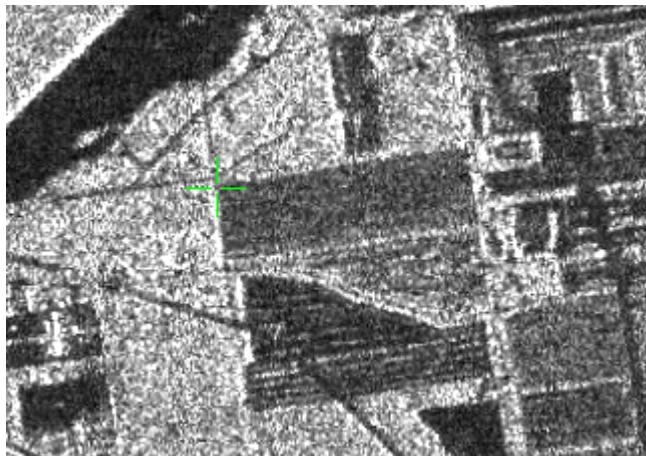

Next, ctrl-left-click on the top right corner of the field. After this, the arrow keys will move the red crosshair.

Using “tab”, we can switch between which crosshair is affected by the arrow keys. Note that when the green crosshair is the active one, the red crosshair isn't shown.

Successive ctrl-clicking along the outside edge of the field leads to the image shown to the right.

Now, “tab” will move the red crosshair along the selected points, marking which is going to be affected when the arrow keys are used.

If “Backspace” is used, the most recently added point is removed.



We don't need to add the final edge of the polygon, if we are only interested in the area, since the area calculation always implicitly closes the polygon. To get the circumference, the final edge of the field needs to be added to the polygon.

Information

Line: 2809.0, Sample: 6174.8
Pixel Value: 2732.000000 -> 68
Lat: 64.1539, Lon: -145.8088 (deg)
Incid: -inf, Look: 41.6318 (deg)
Slant: 987761.1 m Time: 3.379 s
Total distance: 2137.1 m (6 points)
Area (of closure): 306664.2 m²

The area and circumference of the field are now displayed in the “Information” section.

Of course, the circumference and area values are only available in meters (or square meters) if the image being viewed has geolocation information available. A JPEG image, for example, has no geolocation information, and so the circumference and area values will be

displayed in units of pixels (or square pixels).

Other Useful Keyboard Commands

c: Center Image On Crosshair

Moves the main window so that the green crosshair is in the center.

I: Move crosshair to local maxima

Features of interest are often at the pixel of highest intensity. (For example, a corner reflector, or -- when viewing a DEM -- the peak of a mountain)

Using “I” (note that this is a small “L” (ell), not a capital “I” (eye)) will move the crosshair to the brightest pixel in a 30x30 region, centered on the current position of the crosshair. Using **ctrl-I** will search in a larger region (300x300 pixels, again centered on the crosshair).

This applies to the “active” crosshair. For example, to measure the distance between two corner reflectors, we can use this procedure:


1. Click near the first corner reflector, and press “I” to move to it.
2. Ctrl-Click near the second corner reflector, and press “I” again. This moves the secondary (red) crosshair.

Now, the information section displays the distance between the two reflectors.

Saving Image Subsets

When a polygon has been defined (using ctrl-click to define a path, as described above), the “Save Subset” button (in the button toolbar below the full image thumbnail) becomes active.


Clicking this button brings up the “Save Subset” dialog.

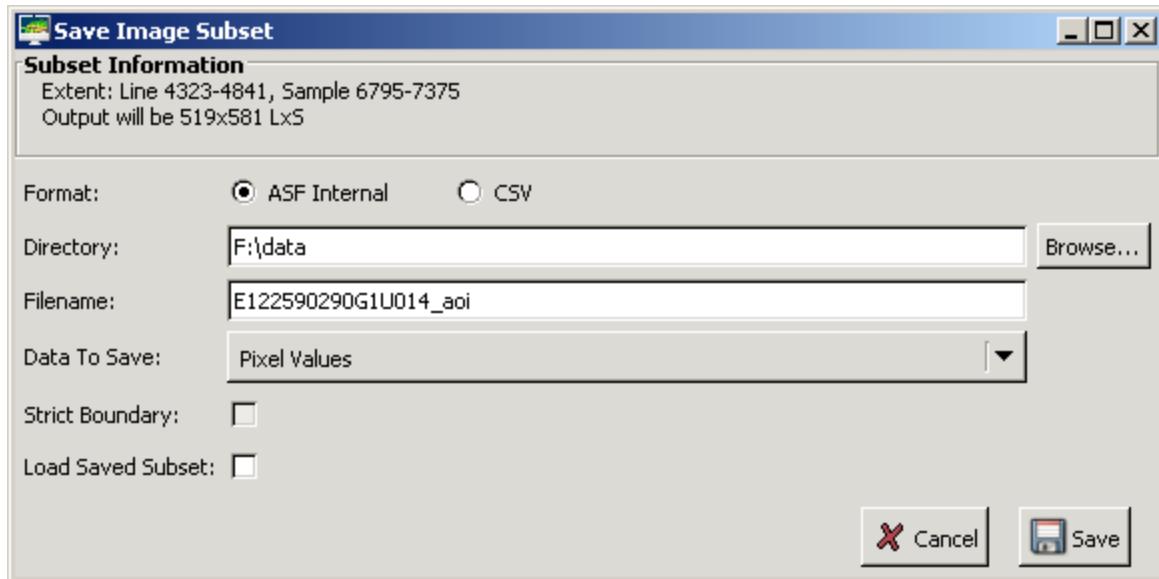

This allows us to save the selected portion of the image as a separate file in either ASF Internal format (an image format), or as a CSV file (a text file, containing the data values in comma-separated columns).

If you have selected only one additional point (i.e., your “polygon” is nothing but a line segment), then the “Save Subset” dialog will assume you wish to save the rectangle which has a diagonal of the selected line segment. In this case, the “Strict Boundary” button (discussed below) is disabled.

After selecting “Save Subset”, the portion of the image that is going to be saved is shown with a purple boundary.

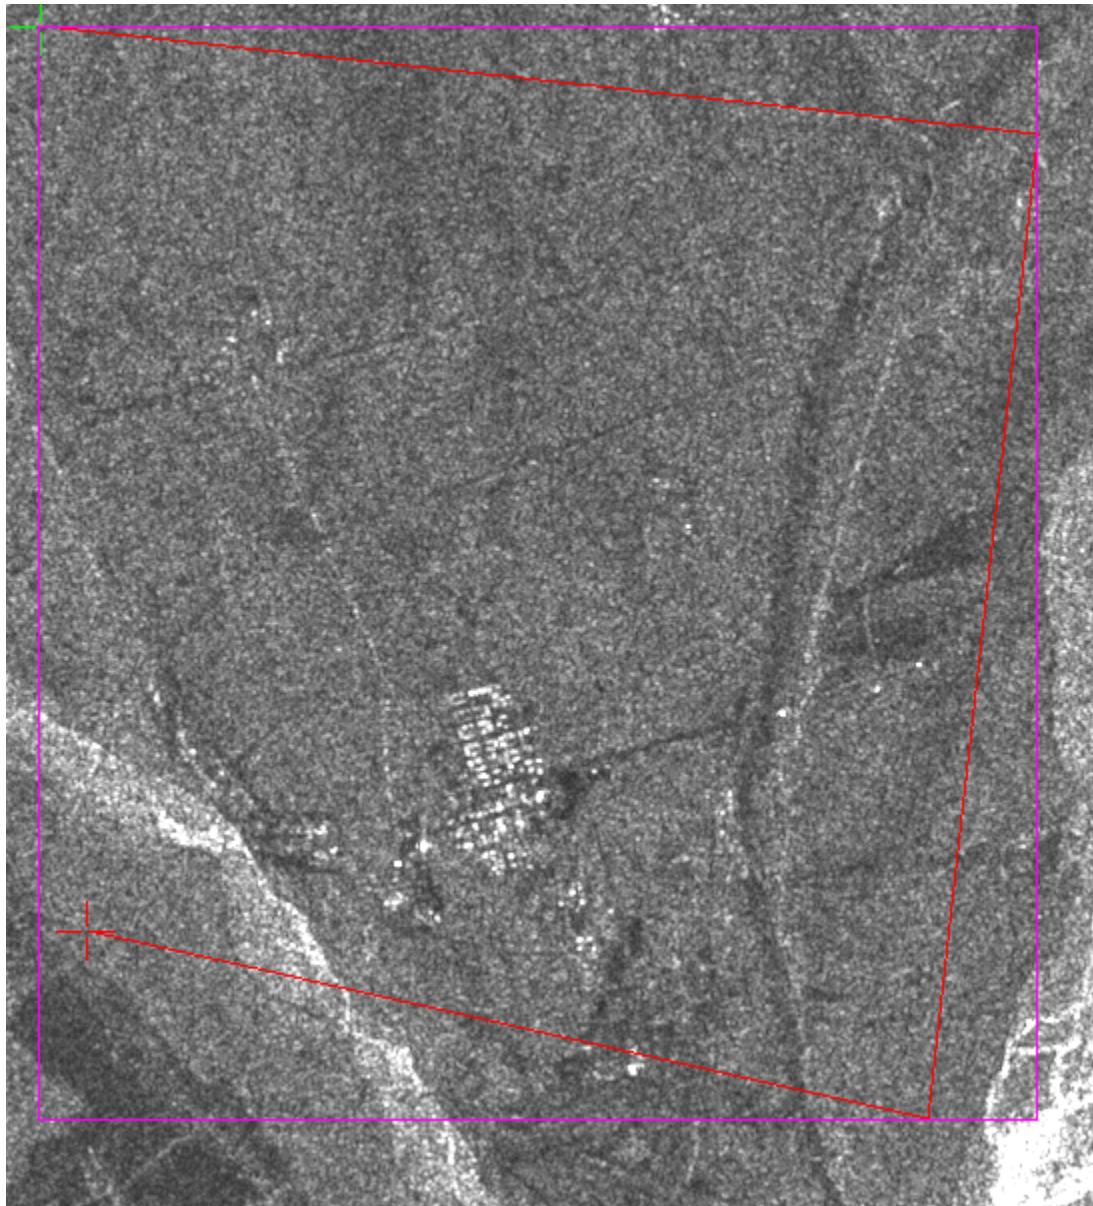

In this example, the defined polygon has four points, and the purple subset-to-be-saved is the smallest rectangle that contains the four points.

It is possible to use the tab & arrow keys as described above to fine-tune the polygon, while the “Save Subset” dialog is open, before the subset is saved.

Once you are satisfied with the polygon, there are a few more options available in the “Save Subset” dialog.

Format

The format for the saved subset can be either “ASF Internal” or “CSV”.

Format:	<input checked="" type="radio"/> ASF Internal	<input type="radio"/> CSV
---------	---	---------------------------

The “ASF Internal” format is an image format used by ASF to store files during conversion from CEOS to Geotiff (or whatever output format). It is a generic-binary format (the file extension will be .img) with a separate metadata (.meta) file.

You may view these files with ASF View, or you can use the command-line tool meta2envi to convert the .meta file to a .hdr file, and then view the .img/.hdr file combination with ENVI.

The “CSV” format refers to comma-separated-value, a text file that contains data values in columns, suitable for loading in a spreadsheet. If you are using this option, you’ll want the subset to be fairly small.

Directory and Filename

Directory:	<input type="text" value="F:\data"/>	<input type="button" value="Browse..."/>
Filename:	<input type="text" value="E122590290G1U014_aoi"/>	


This is where the directory & filename of the subset image is specified. You may use the “Browse...” button to select a different output directory.

By default, the output filename is the same as the loaded image’s filename, with “_aoi” appended (where “aoi” is an abbreviation for “area of interest”). The extension of the file shouldn’t be specified, it will be determined by the selected format (either “.img” & “.meta”, for ASF Internal, or “.csv” for CSV).

Data To Save

The “Data To Save” option specifies exactly what data should be saved. “Pixel Values” is the default, which would just store the data as it is displayed.



A common trick used by users at ASF is to use this feature to produce an incidence angle map of the entire image: first select the entire image (by clicking on the top left, ctrl-clicking on the bottom right), clicking “Save Subset” and choosing the “Incidence Angle” option here.

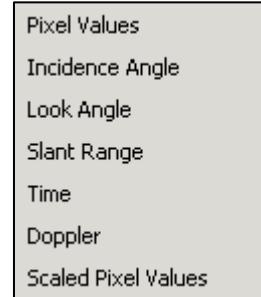

Strict Boundary

This option indicates whether only points within the selected polygon should actually be exported, or if the entire rectangular area should be saved.

When checked, the areas outside the selected polygon are left black. These two images are examples of saving with “Strict Boundary” selected (left), and without “Strict Boundary” selected (right), for the region selected above.

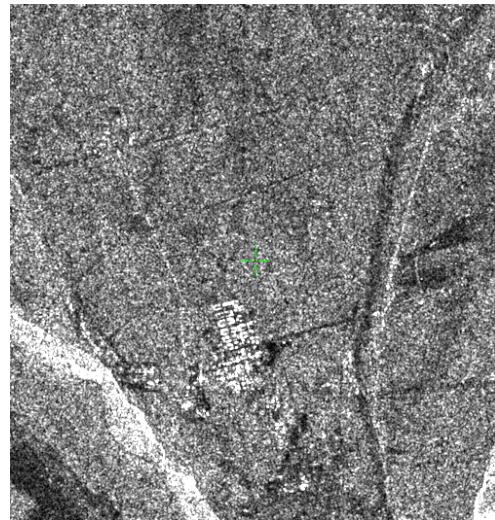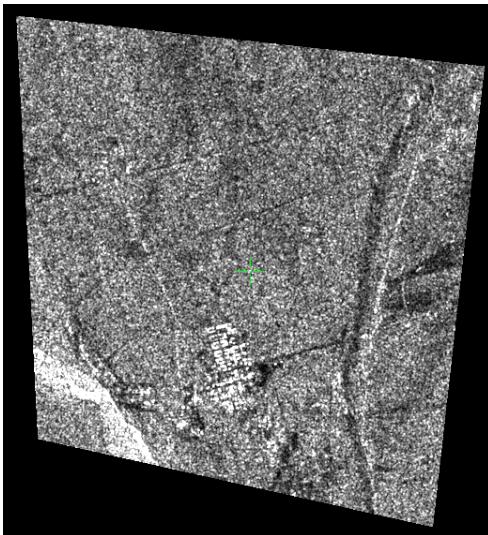

Load Saved Subset

When this option is checked, the newly created file will be immediately loaded by ASF View. When unchecked, the file is created but you will still have the original data file in ASF View.

When exporting to CSV, if you are on Windows and have Excel installed, Excel will be started with the created CSV file loaded.

Toolbar Buttons



The “Google Earth” button functions as it does in MapReady – launches Google Earth ®, zooms to the image location on the Google Earth globe, and displays an overlay (for images in the UTM projection) which illustrates the image boundaries.

The overlay is only available if the data is projected data.



The "Display CEOS metadata" button launches the ASF metadata viewer. The viewer reads the CEOS leader file, a partially binary and partially ASCII file that contains the metadata associated with the binary data.

More details on the CEOS metadata viewer are available in the MapReady section of this manual.

Information Tabs

In the tabbed section, the first tab displayed is the metadata section, containing information about the image being displayed. The “Help” tab, as discussed above, lists the commonly used keyboard and mouse shortcuts.

Stats

The “Stats” tab shows basic image statistics. The values are not exact, since the entire image’s pixel values aren’t used to calculate the values; instead, a subset is used and the statistics are calculated from that. This is to speed up the loading of the image when the application starts.

Display



The “Display” tab contains a few image settings.

For multi-band images, such as quad-pol Palsar data, you have the option of combining the bands into a RGB image.

By default, the first band is shown in grey-scale, but by selecting the “Combine Bands into RGB” radio button, and selecting bands for each of the RGB channels, a RGB composite image is displayed.

When viewing multi-band ALOS images in CEOS format, this multi-band capability is not available – multi-band data spread across multiple files is not supported. You must first import the data, using `ASF_import` (the command-line tool), or MapReady.

The “multilook” checkbox is greyed out for images that are already multilooked. No non-multilooked image data types are supported in MapReady 1.0.

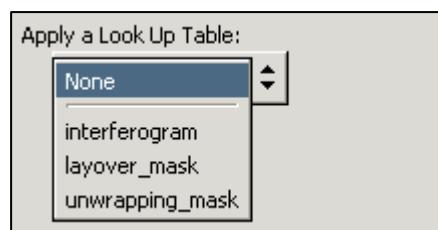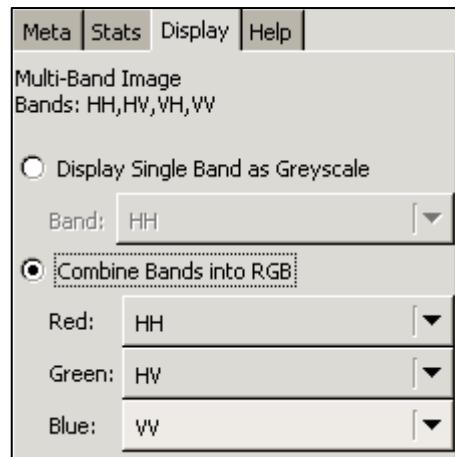


The “Apply a Look Up Table” option can be used to convert a grey-scale image to color, using a look up table which maps each grayscale value to RGB values.

Examples


In this section some of the most common uses of the MapReady tool are demonstrated.

Converting optical ALOS AVNIR data into GeoTIFF format


The AVNIR instrument on the ALOS satellite is a four-band (visible-and near-infrared) radiometer with a resolution of 10 m, designed for observing land and coastal zones. This multi-band imagery is provided in CEOS format with four individual files for the respective bands and a common leader file.

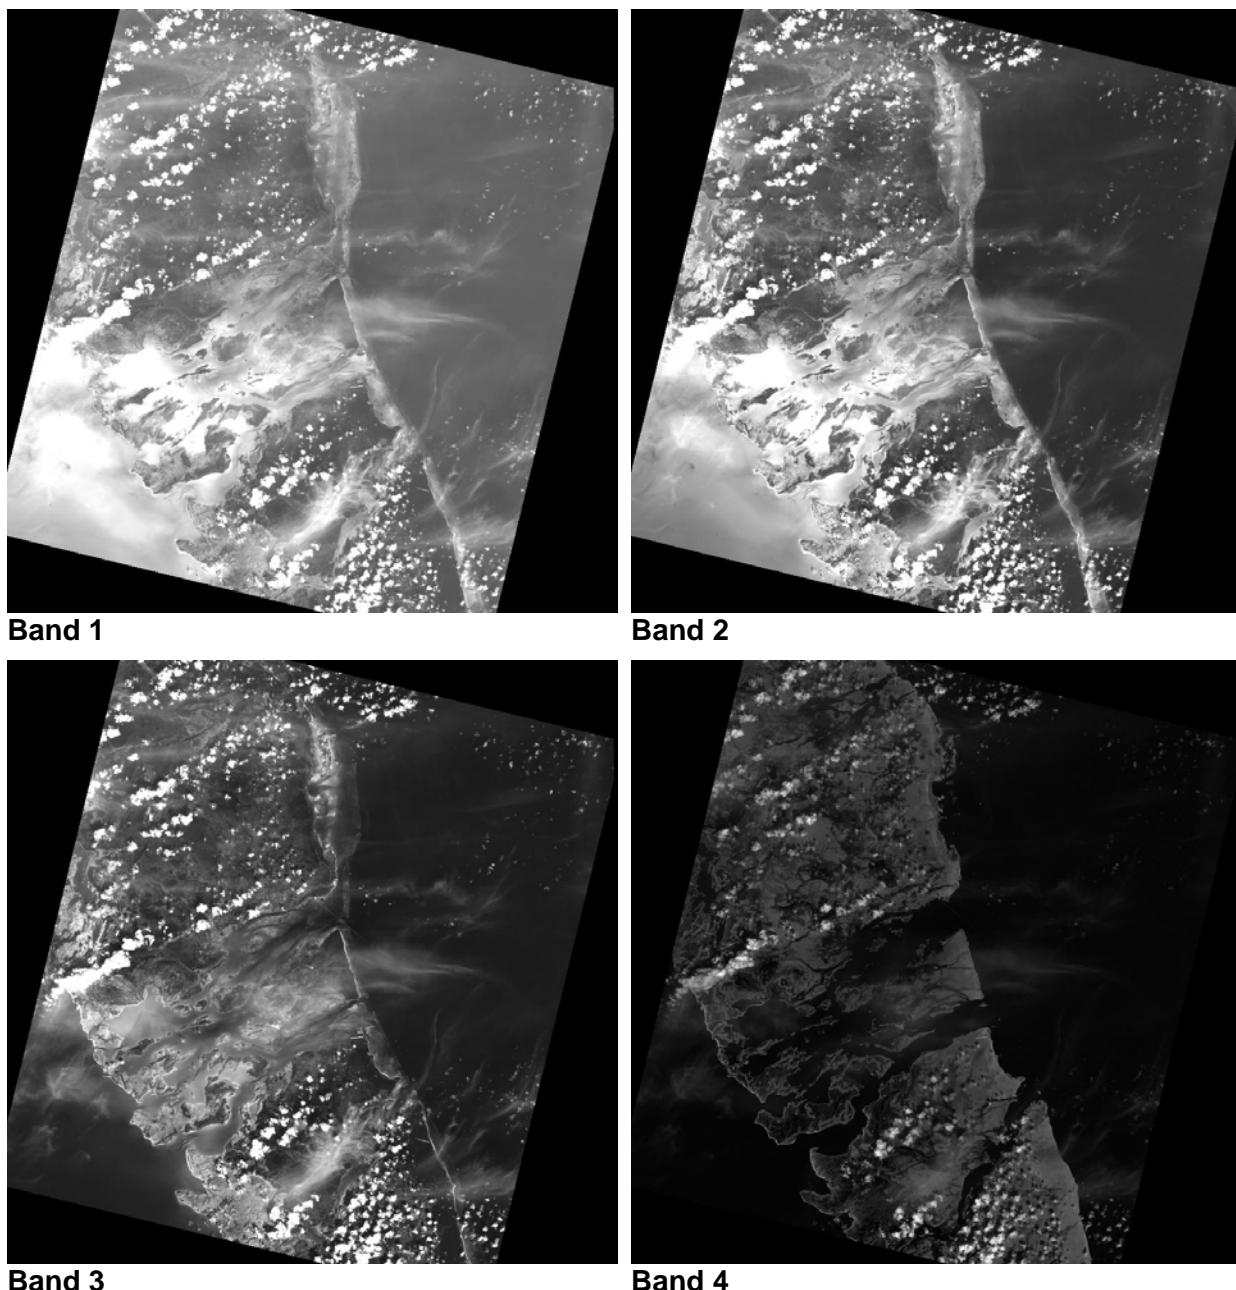


By importing the individual image files the bands in the ASF internal format in a band sequential form in a single file. In this example, the image in the Bahamas was ordered in the 1B2G format, i.e. geocoded in this case to UTM.

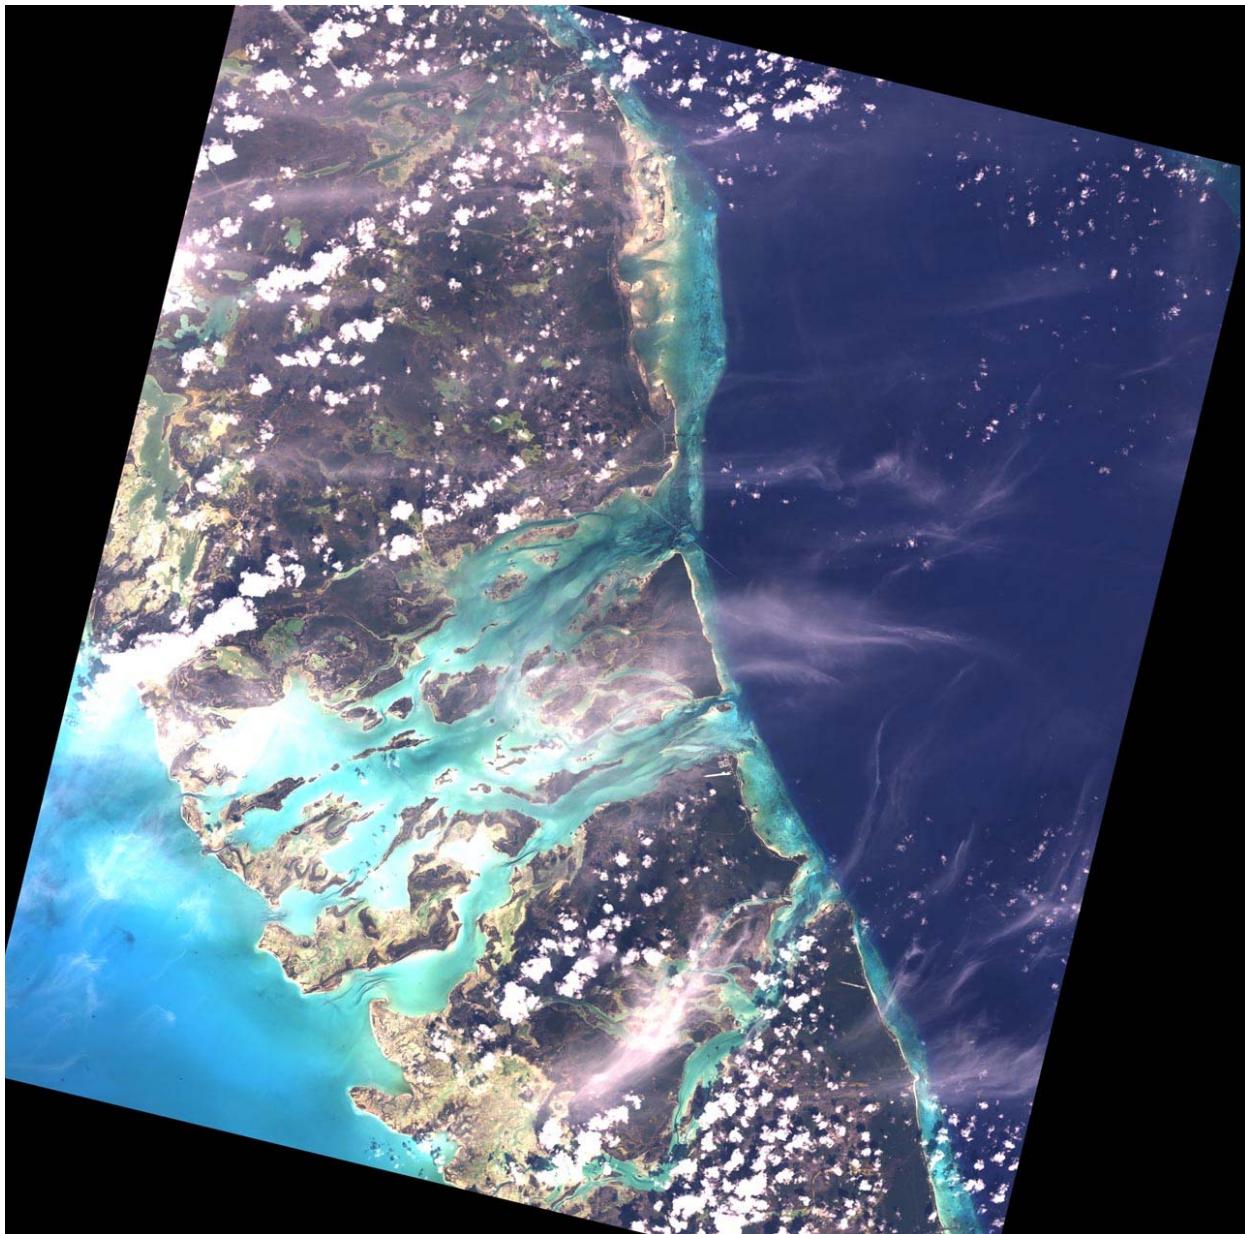


True color RGB composite

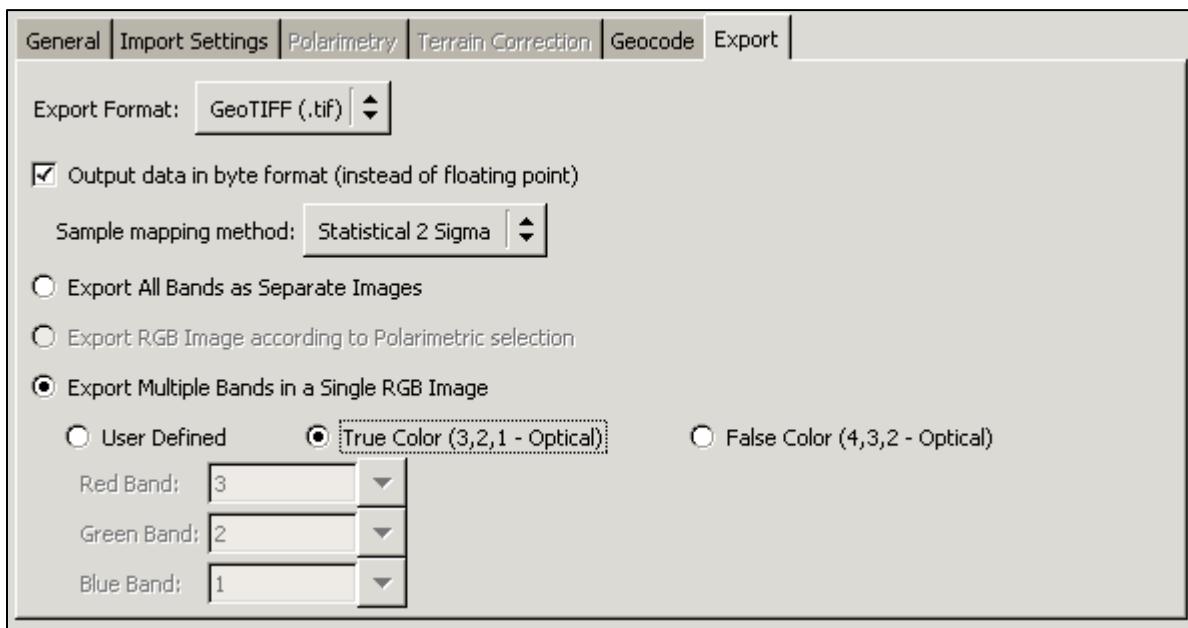

When exporting the data the data to GeoTIFF there are two standard options to consider. The true color option will combine the three visible bands 3,2 and 1 into a true color RGB composite.

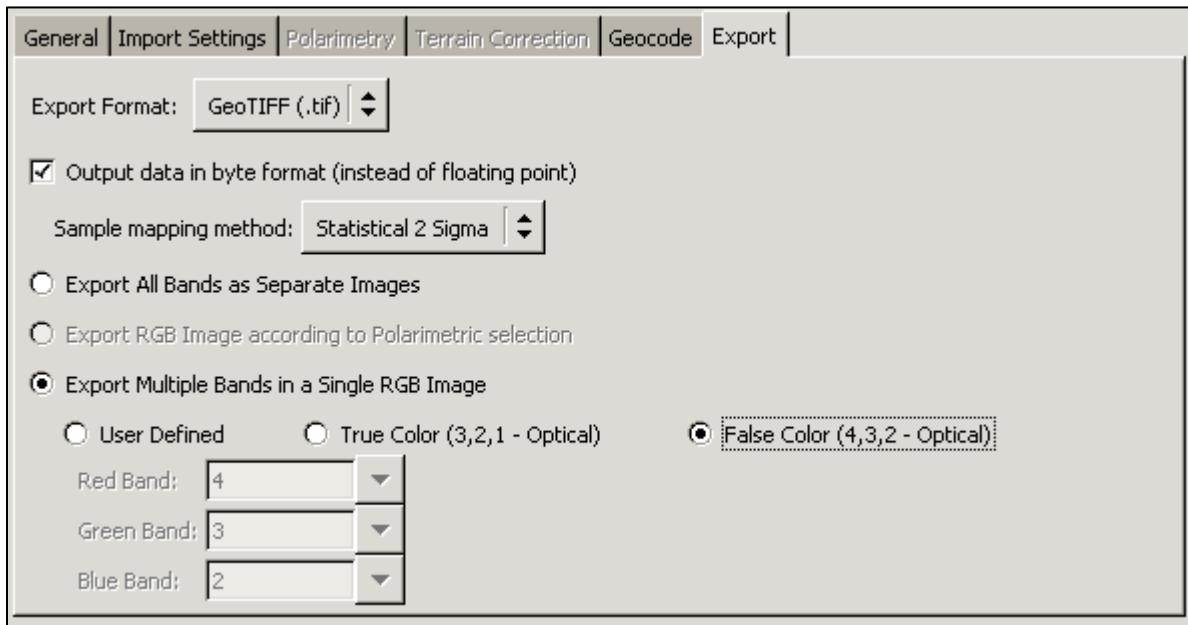

Alternatively, the data can be stored as a standard false color composite with the bands 4,3 and 2. The near-infrared band 4 will characteristically highlight the imaged vegetation in red.

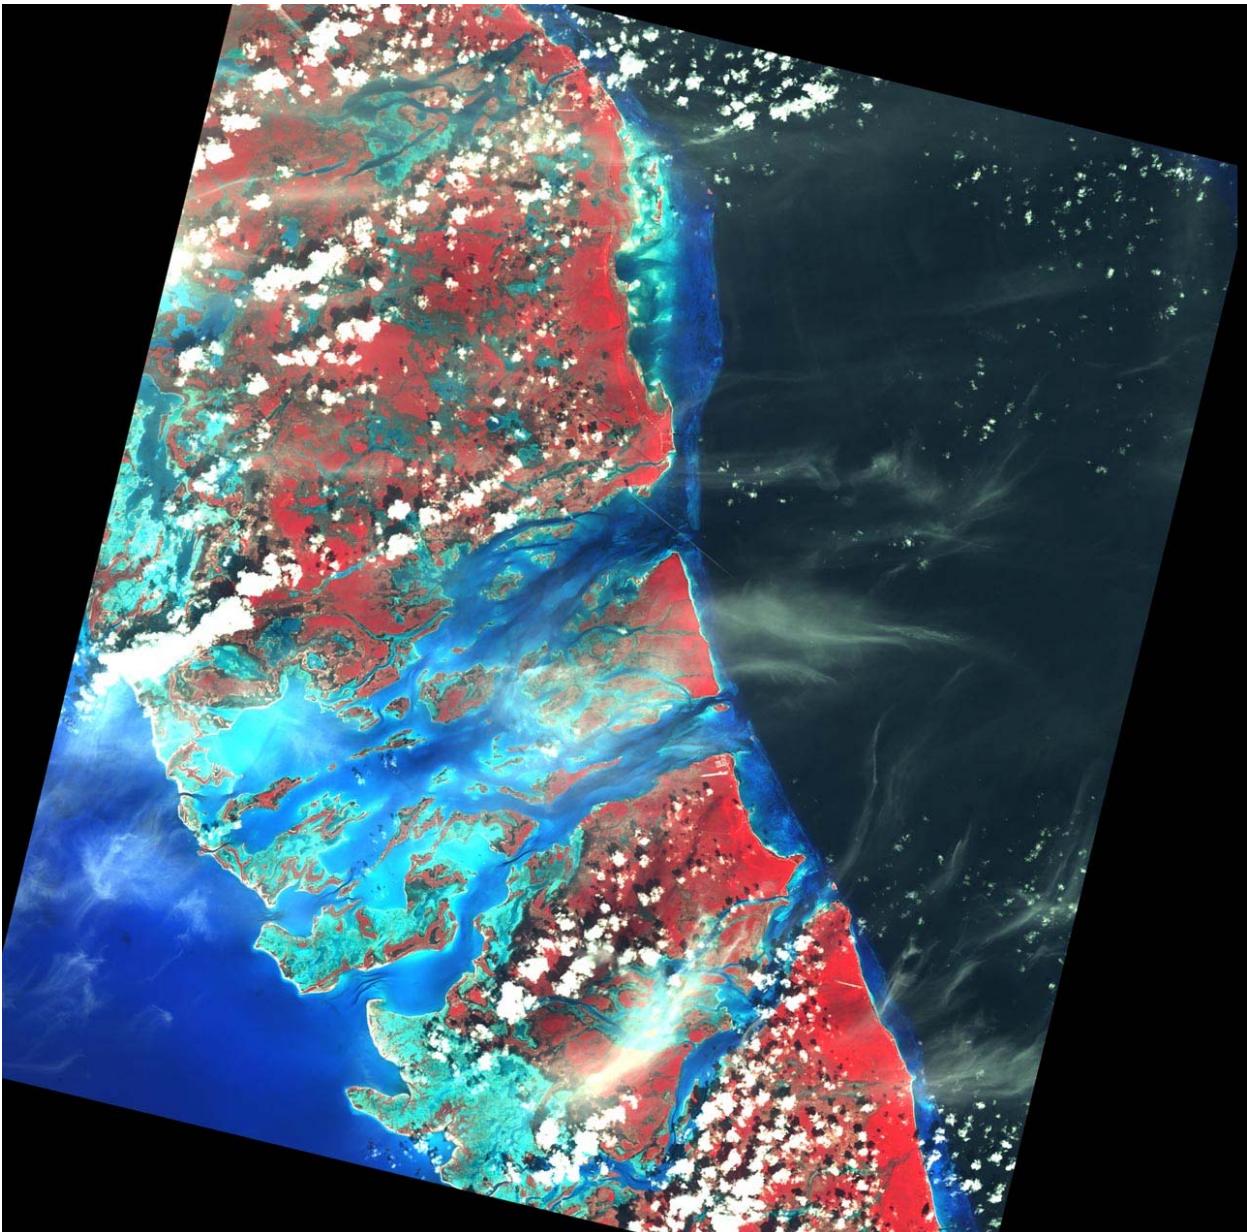


Standard False Color Composite (FCC)

Finally, the user can define other band combinations that are suitable for other types of investigations.


Converting optical ALOS PRISM data into GeoTIFF format

The PRISM instrument on ALOS satellite provides high-resolution (2.5 m) panchromatic imagery and used to provide land coverage and land-use classification maps for monitoring regional environments.

For this example, we have chosen georeferenced 1B2R imagery over Delta Junction, Alaska. Georeferenced images leave the user the choice of map projection for the geocoding. For most remote sensing studies in Alaska the preferred map projection is the Albers Conic Equal Area projection.

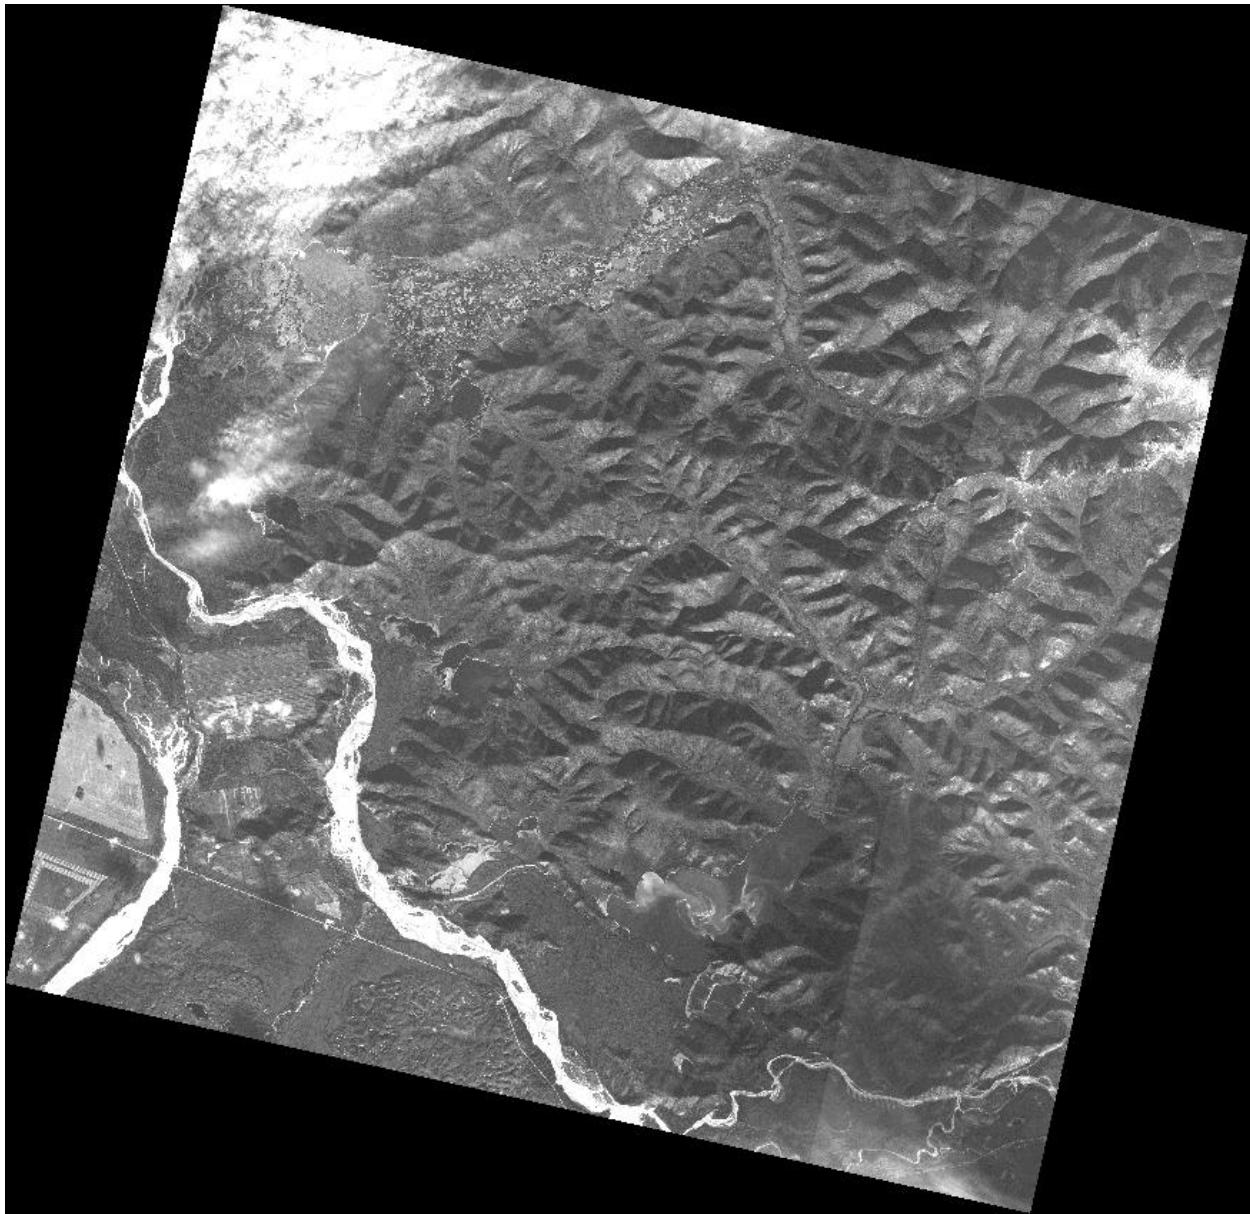


PRISM image geocoded to Albers Conic Equal Area projection

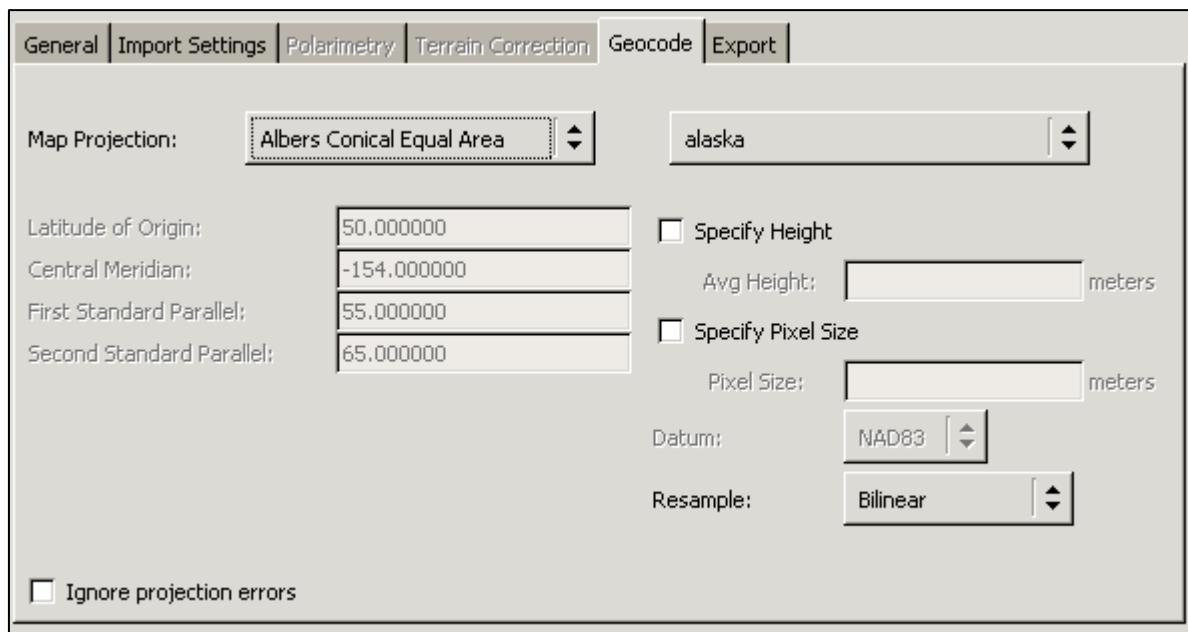


The geocoded image can now be used in any further analysis as the GeoTIFF format can be handled by the majority of image processing software packages.

Converting ALOS PALSAR data into GeoTIFF format

PALSAR is the L-band SAR instrument on board the ALOS satellite. It operates in a variety of modes with different polarizations (single-, dual- and quad-pol) and look angles. For this example, we demonstrate the conversion of a quad-pol image into GeoTIFF format.

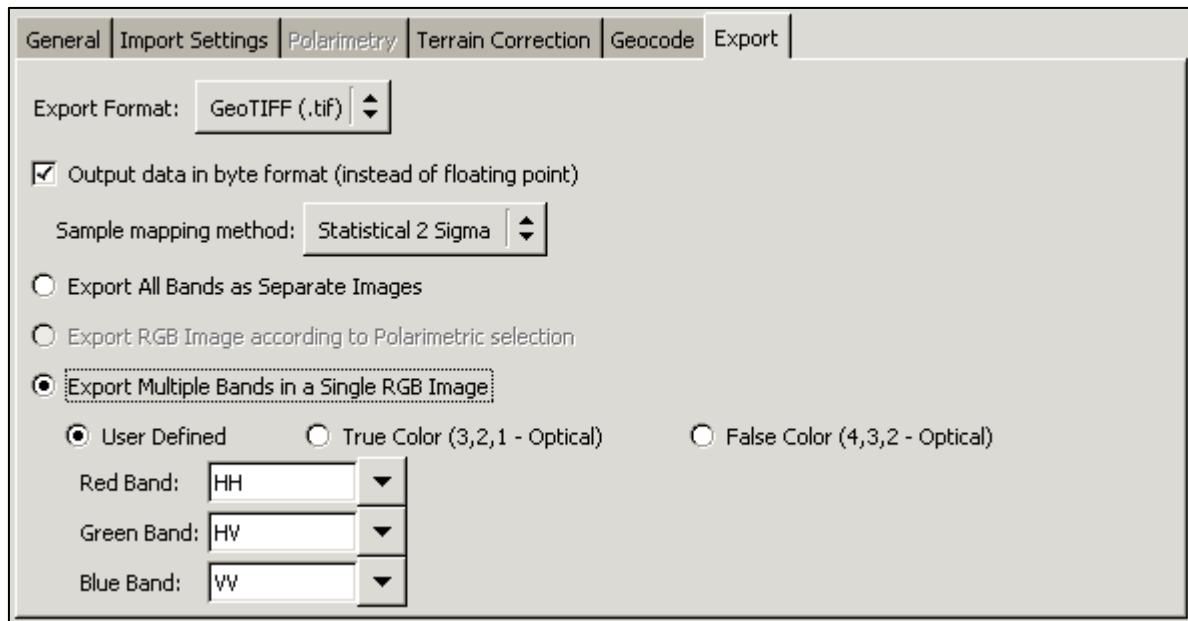


In this case, we chose both horizontal and vertical polarizations as well as one of the cross polarizations for the RGB composite.

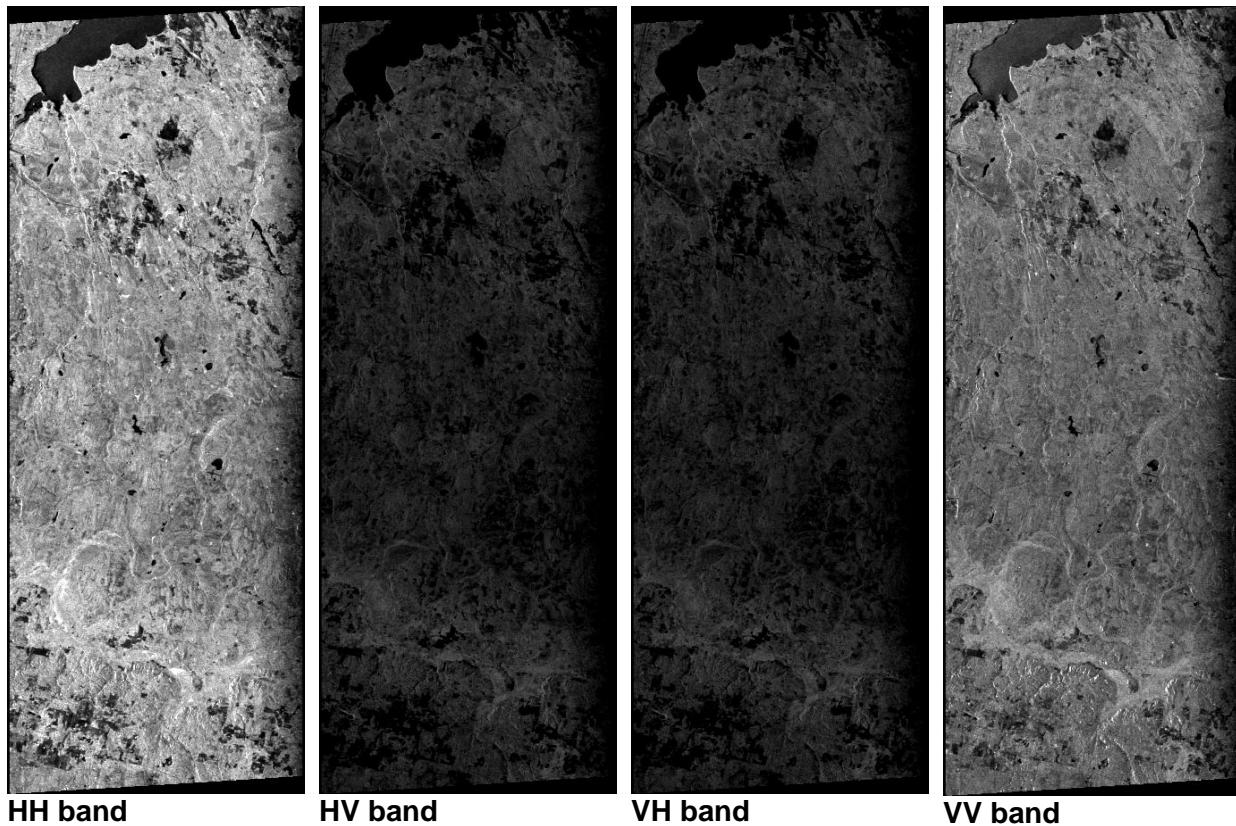

It is apparent that in this image the HH band provides much more contrast than the VV band. With this kind of difference in the opposite polarizations it is to be expected that the cross-polarized bands show up very dark. Compared to each other, both cross-polarized band look very similar.

Interpreting polarimetric data is not straight forward. There are a few standard decompositions, such as the Pauli decomposition and the Sinclair decomposition, used to visualize polarimetric data. However, a more detailed analysis requires an in depth knowledge of the underlying physics and the properties on the ground.


In this example we used a band combination that is very close to a Sinclair decomposition, assuming that the cross-polarized bands HV and VH are close to the same. The water bodies in our example predominantly blue as the HH polarization provides the highest return. The fields in the upper part of the image show different signatures and give an indication why polarimetric data is superior for studying properties on the ground compared to single-polarized images. The combination of the two polarizations including their cross terms carries a wealth of information, especially when the phase information is added to this interpretation. The Sinclair decomposition is also supported with the polarimetry tab in MapReady, here we are illustrating how one can use the “User Defined” RGB settings to create the same thing.

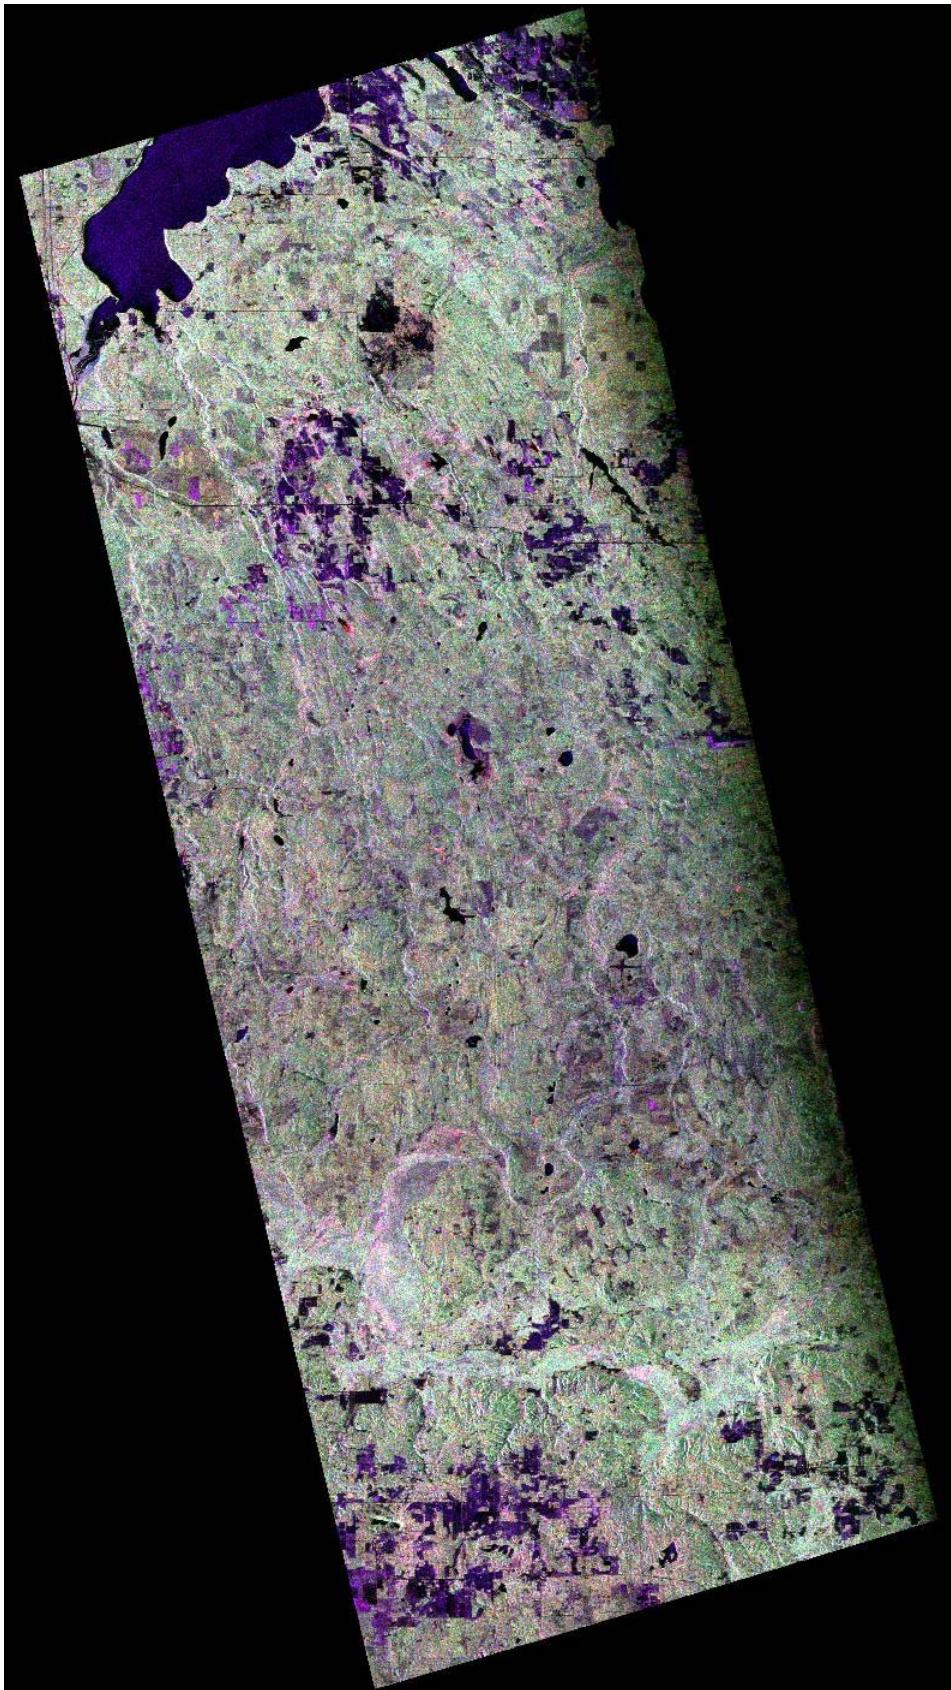

PALSAR RGB composite (HH, HV, VV)


Terrain correcting standard beam RADARSAT imagery

The terrain correction of radar data is a standard procedure before the image can be combined with any other data in a GIS environment. You can use SAR images without terrain correcting them, but the geolocations of peaks, valleys, roads will be incorrect. Terrain correcting an image moves features to where they belong, using an appropriate digital elevation map (DEM) as a reference:

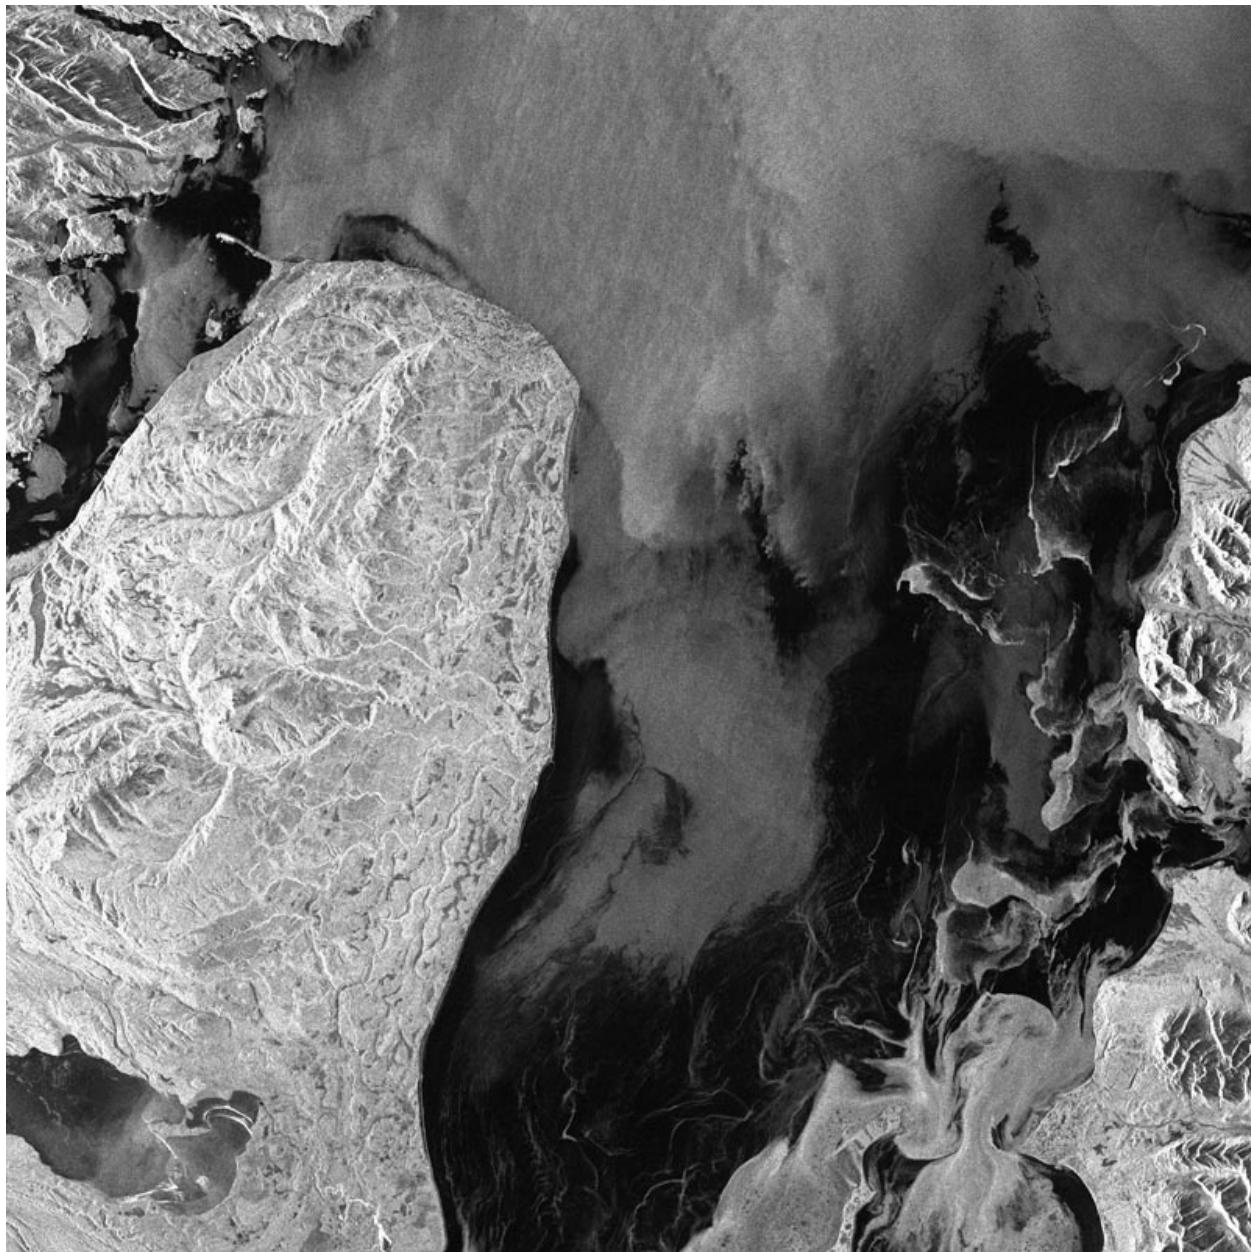

Radarsat Standard Beam image of Cook Inlet

This Radarsat image of the Cook Inlet, Alaska, contains some fairly steep topography that requires terrain correction. A considerable part of the image is covered with water that we want to mask out in the process.

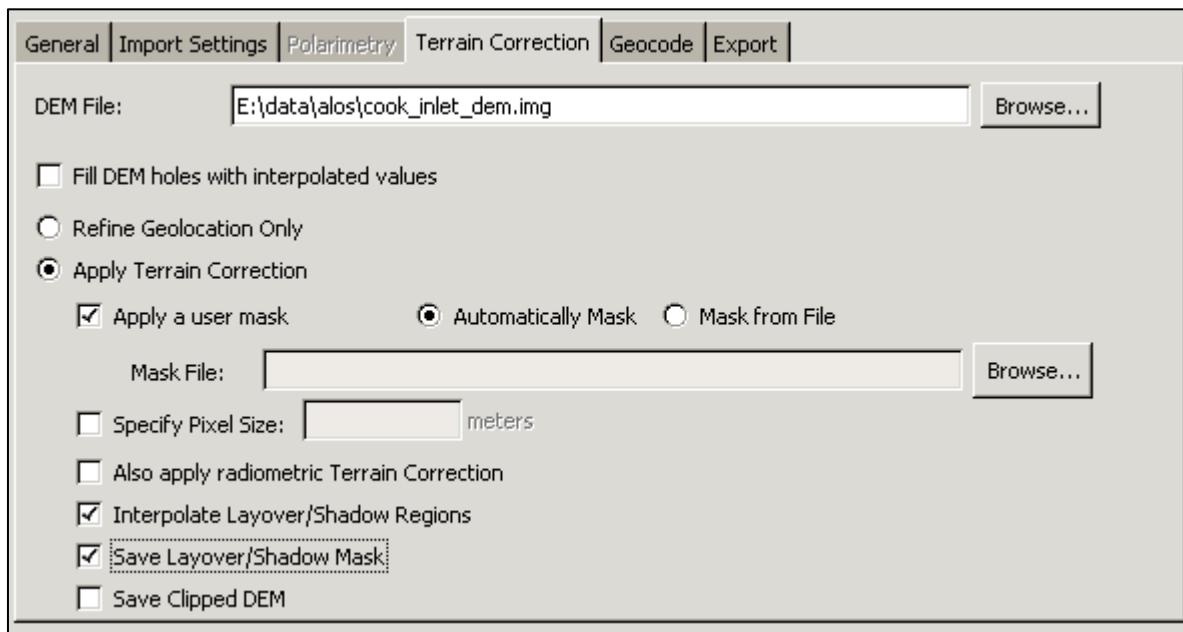

The automatic mask takes a cut out height of 1 m and masks out every pixel below this threshold. This function was designed for imagery near a coastline to mask out large water bodies that would otherwise make the terrain correction impossible.

Alternatively, the mask can be user specified.


We have checked the “Save Layover/Shadow Mask” option, which means in addition to the terrain corrected product, we will also get a matching file indicating which regions of the scene are in layover and shadow.

The Layover/Shadow mask contains grayscale values as follows:

- 1 – Normal (no layover or shadow)
- 2 – User Masked (if a user mask, or automatic masking, was applied)
- 3 – Shadow
- 4 – Layover
- 5 – Invalid


During export, these grayscale values are converted to color values, using a color look-up-table.

After the terrain correction all the distortions that are introduced by the side-looking geometry of the sensor are removed.

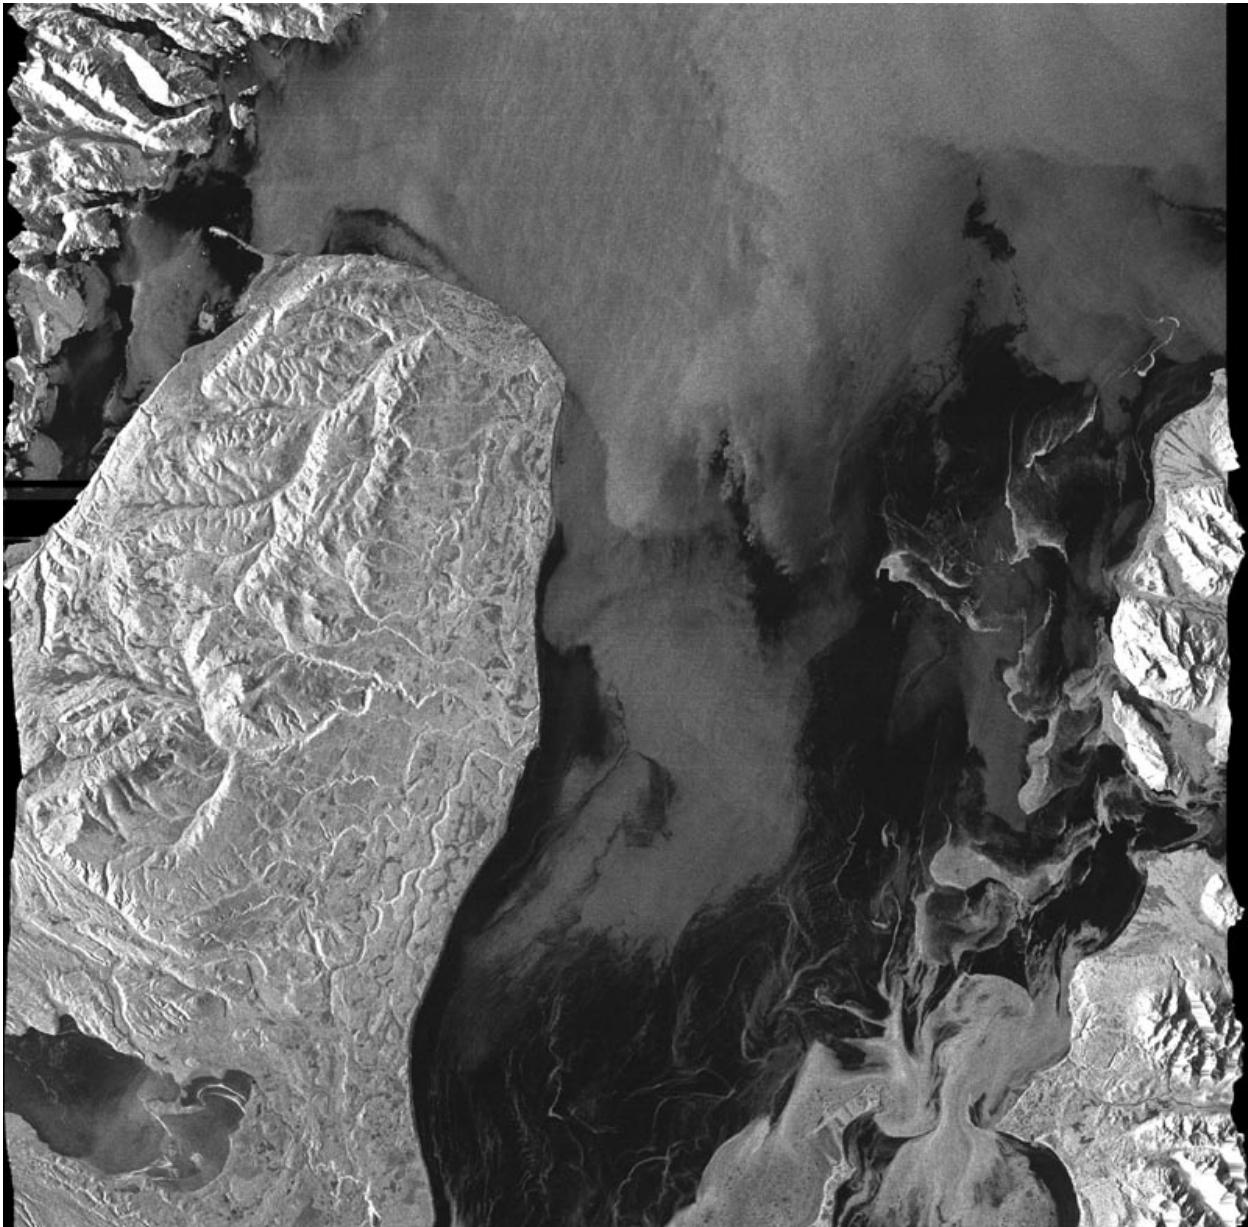

Terrain corrected standard beam image of Cook Inlet

In the next step the terrain corrected image can be geocoded as any other image.

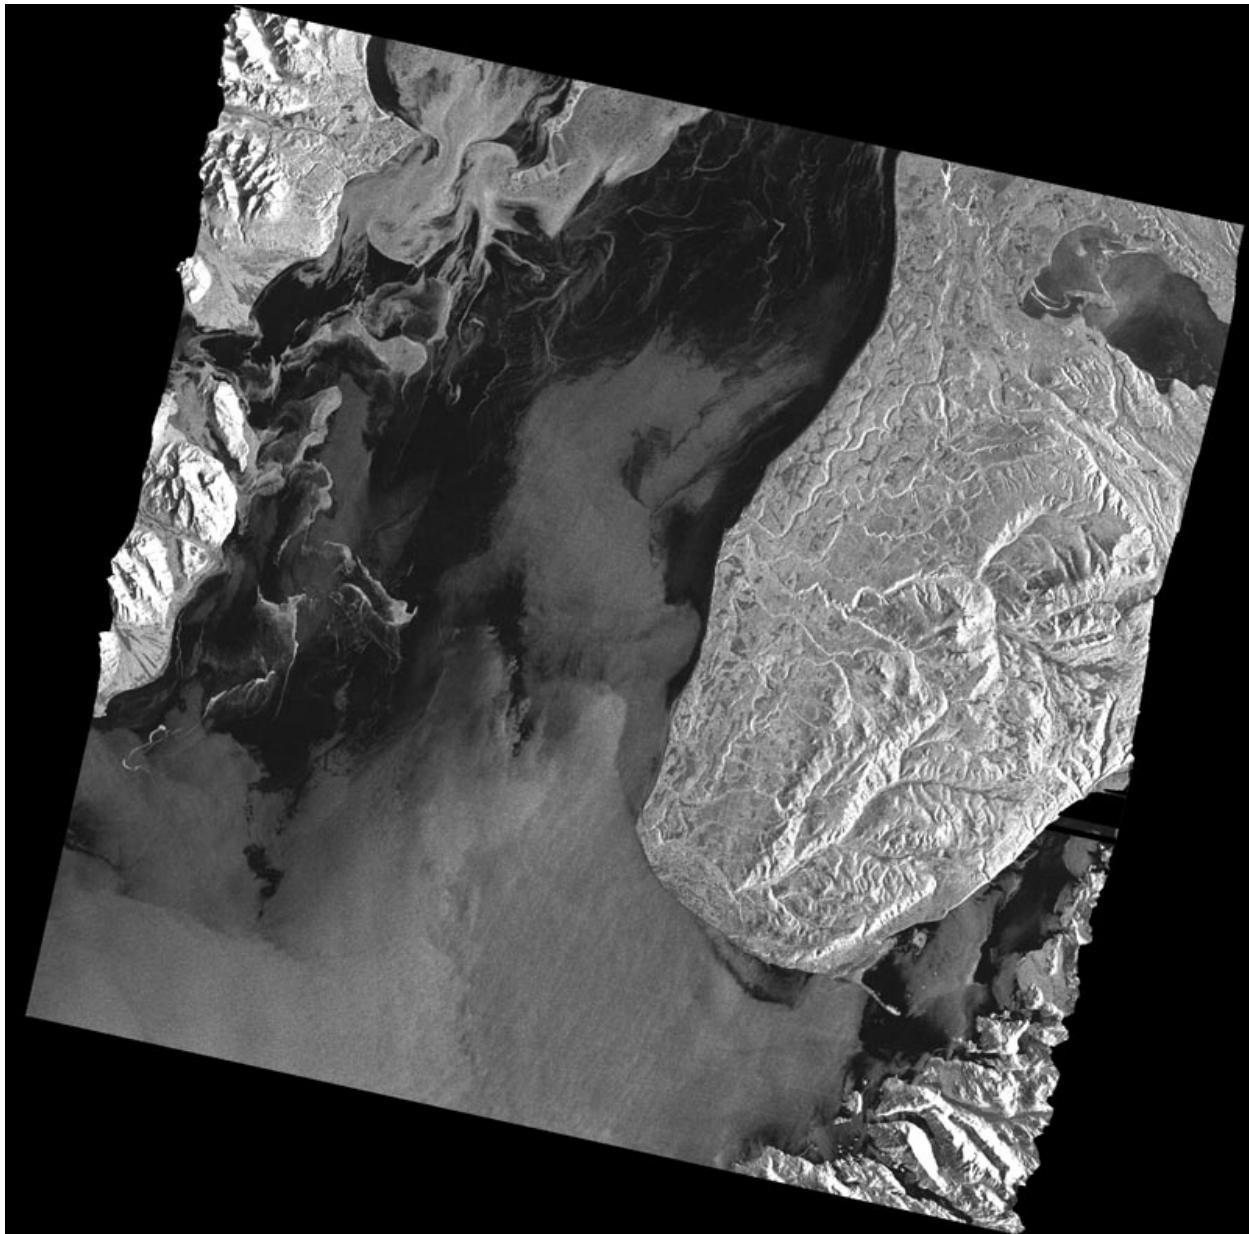


Terrain corrected and geocoded image of Cook Inlet

Since we checked the “Save Layover/Shadow Mask” option on the Terrain Correction tab, this mask file has also been geocoded to our chosen projection, and exported to our chosen format.

During export, the look-up-table “layover_mask.lut” is applied, which maps each of the above to a different color. User masked values, e.g. water when applying automatic masking, are coded in blue. Layover regions are depicted in green, regions of shadow are red. Invalid data, which include areas of no data during the terrain correction as well


as background fill resulting from geocoding the mask, are displayed in dark grey. All other valid data is indicated in black.

In this case, we have overlaid the mask on top of the terrain corrected image.

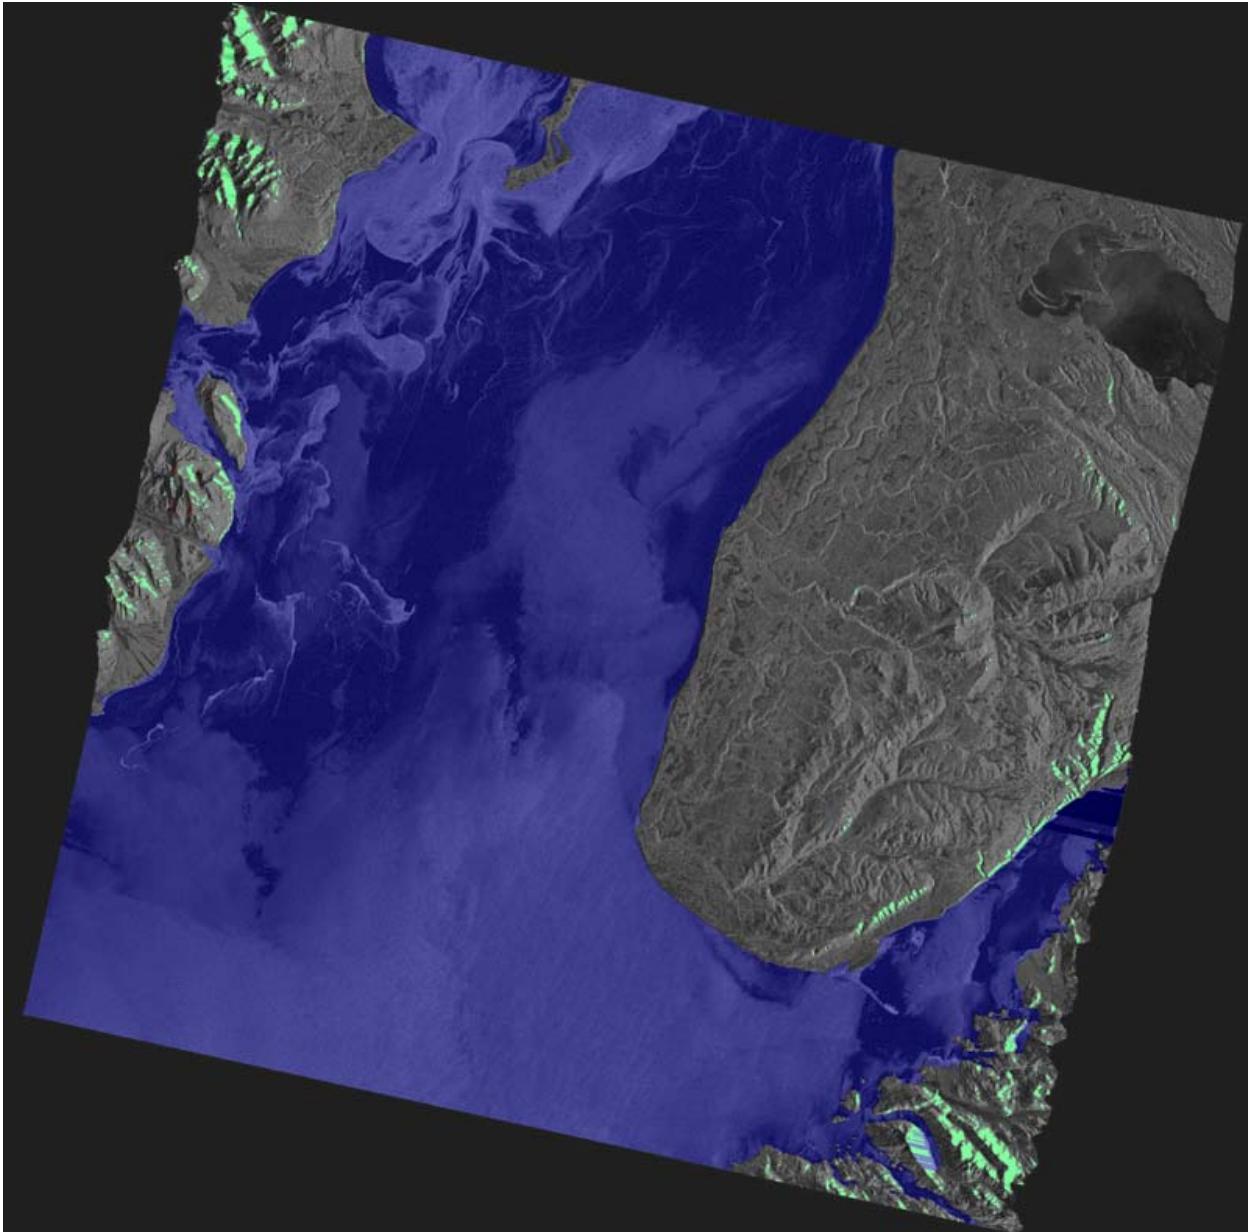

Layover mask overlaid on the terrain corrected image

The Projection Coordinate Converter

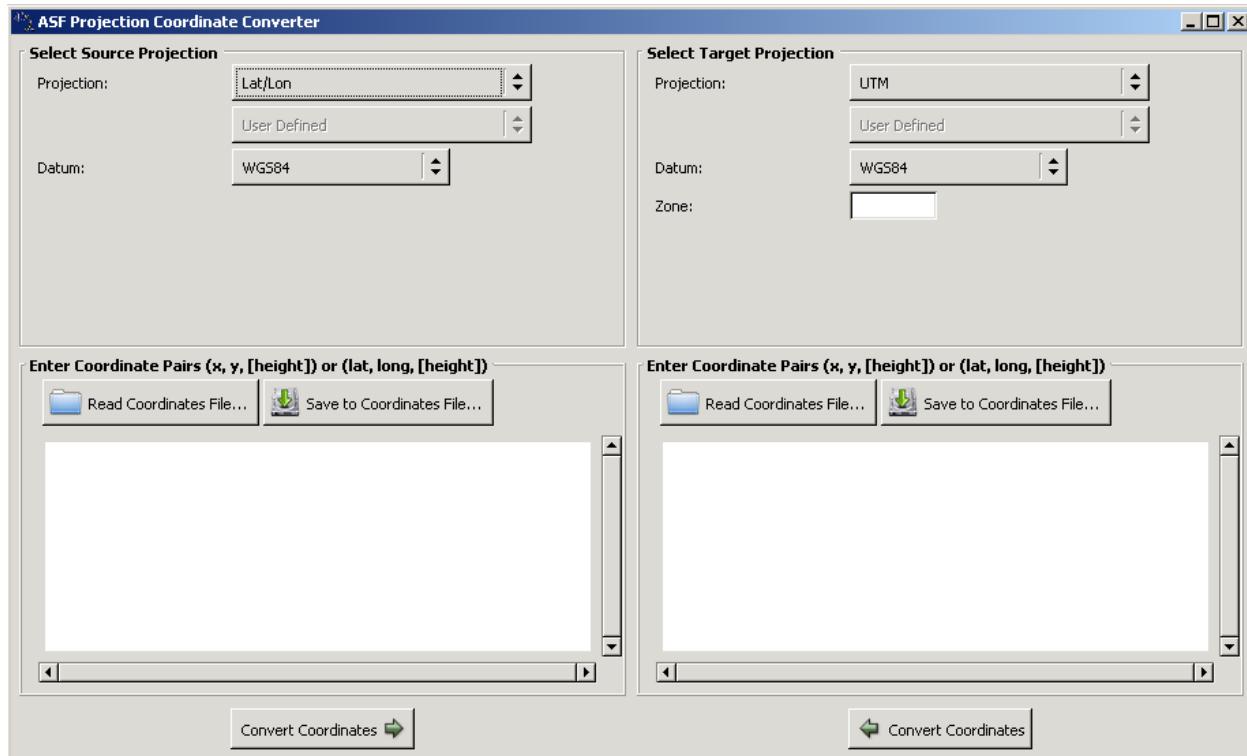

This program is a small utility for converting coordinate values between different map projections.

To use the program, select the coordinate systems you wish to convert between, the “source” and “target” projections. Then the actual coordinate values are entered in the source projection’s text area, and, finally, the “Convert Coordinates” button performs the projection.

Each line should contain a single coordinate pair to be converted. The coordinate pair can contain two or three values; the third is the height value, and if it is omitted the projection is calculated with a height of 0.

The source and target projections are specified as on the [Geocode Tab](#) in MapReady. You may either select a predefined projection (and you may define your own projections, as discussed in the MapReady section on geocoding), or enter your own projection parameters. When using the UTM projection, if the “zone” value is left blank, the first coordinate that is projected will determine which zone is used for the remainder of the coordinates. This value is then placed into the “zone” textbox.

The “Read Coordinates File” and “Save Coordinates File” buttons load and save ascii text files of coordinates. This might be used if you wish to take the projected coordinates and load them into a spreadsheet application, such as Excel.

Using the MapReady command line tools

asf_mapready

This program can ingest ASF and other formats of data, terrain correct it, geocode it, and export it to a variety of imagery formats. The user is able to control how *asf_mapready* dictates the processing flow by creating and/or editing a configuration file which is fed into *asf_mapready* when it is called. It provides all of the functionality of the MapReady GUI application, from the command-line.

Generating a configuration file

This basic configuration file contains all general parameters with a detailed explanation about the respective parameter for the novice user. In general, the process of creating a configuration file and setting it up is as follows:

1. Run *asf_mapready* with the -create flag to create a configuration file:

```
asf_mapready -create R153253303G3S007.cfg
```

2. Advanced users: Edit the configuration file and turn on the ‘short configuration file’ flag
 - a. Find the following line in the configuration file and change the flag’s value from 0 to 1:

```
[General]
...
short configuration file = 1
...
```

- b. Re-execute *asf_mapready* with the -create flag to recreate the configuration file again, but without the extra commenting this time:

```
asf_mapready -create R153253303G3S007.cfg
```

3. All users: Edit all of the settings in the [General] block, then save the configuration file.

```
[General]
input file = R153253303G3S007
output file = R153253303G3S007
import = 1
polarimetry = 0
terrain correction = 0
```

```
geocoding = 1
export = 1
default values =
short configuration file = 1
dump envi header = 1
tmp dir =
```

4. Re-execute `asf_mapready` with the `--create` flag so `asf_mapready` will insert the parameter blocks specified in the [General] block and will remove those that are not. In the example above, re-running `asf_mapready` will add [Import], [Geocoding], and [Export] blocks to the configuration file and will remove the [Terrain correction] block if it existed:

```
asf_mapready --create R153253303G3S007.cfg
```

5. Edit the parameters within each processing block
6. Iterate the steps above if you wish to make changes, i.e. edit the configuration file and re-execute `asf_mapready` with the `--create` flag until everything in the configuration file is correct.
7. Execute `asf_mapready` with your finished configuration file:

```
asf_mapready R153253303G3S007.cfg
```

8. Correct any issues which occur during the execution of `asf_mapready`, i.e. errors in settings or data locations incorrect, or whatever may occur. Warnings that appear are informational and may or may not require action on your part while errors that occur require you to correct something before the processing can complete.

As mentioned in the above sequence, more experienced users can switch the explanatory comments part of the configuration file output off by setting the *short configuration file* parameter to 1.

File Basenames

It is obvious that the input and output files need to be known. To specify an input file name to `asf_mapready`, you just enter the basename as the following examples show. Note that the basename is either the file name without a file extension, or as in the case of ALOS datasets, it is the filename minus identifying prefixes.

Basename Examples:

Dataset Filename(s)	Basename
IMG-01-ALAV2A041552240-O1B2G_U IMG-02-ALAV2A041552240-O1B2G_U IMG-03-ALAV2A041552240-O1B2G_U IMG-04-ALAV2A041552240-O1B2G_U LED-ALAV2A041552240-O1B2G_U VOL-ALAV2A041552240-O1B2G_U TRL-ALAV2A041552240-O1B2G_U ALAV2A041552240-O1B2G_U.txt (or “workreport” in place of the .txt file)	ALAV2A041552240-O1B2G_U
R133776389G1S003.D R133776389G1S003.L	R133776389G1S003
DAT_01.001_cdpf_ssg LEA_01.001_cdpf_ssg TRA_01.001_cdpf_ssg	01.001_cdpf_ssg

Output file names are entirely up to you, but they are also specified by basename only (typically the same basename as the input file(s).) *asf_mapready* will automatically append an identifying file name extension as appropriate, i.e. .img, .jpg, .cpx, .tif, etcetera.

Other Parameters

As illustrated in the example sequence above, the next four parameters are basically switches indicating whether a particular processing step needs to be performed or not. For example, setting the *import* switch to zero assumes that all the data is already in the ASF internal format. The final results are kept in ASF internal format if the *export* switch is set to zero. The default values file is described in more detail in the next section. Intermediate files are usually deleted but the user can set the flag to keep them. The batch file only needs to be defined if you want to run the *asf_mapready* tool in batch mode. This procedure is explained in a later section.

Filled in with the basic minimum the configuration file would look like this.

```
asf_mapready configuration file

[General]
input file = /data/R153253303G3S007
output file = /data/R153253303G3S007
import = 1
polarimetry = 0
terrain correction = 1
```

```
geocoding = 1
export = 1
default values =
intermediates = 0
short configuration file = 1
dump envi header = 1
tmp dir =
```

Note that default values will be provided automatically when appropriate while other fields will be left blank. This is normal. Some default values don't make sense but actually act as flags to tell `asf_mapready` that they built-in defaults should be used, i.e. '`lat begin = -99.00`' specifies an invalid beginning latitude since latitudes can only range from -90.0 to +90.0. When `asf_mapready` sees this value, it will assume the default range of -90.0 to +90.0 and will ignore the "-99.00". If you do perhaps enter an invalid value that `asf_mapready` does not recognize, then appropriate warnings or errors will be printed to the screen and written into the log file. It is a good idea to pay attention to the output enough to spot warnings and errors as they occur.

The configuration file can be extended to include the necessary parameters by using

```
asf_mapready -create <name of configuration file>
```

again.

A fully initialized configuration file has the following parameters.

```
asf_mapready configuration file

[General]
input file = /data/R153253303G3S007
output file = /data/R153253303G3S007
import = 1
polarimetry = 0
terrain correction = 1
geocoding = 1
export = 1
default values =
intermediates = 0
short configuration file = 1
dump envi header = 1
tmp dir =
```

```
[Import]
format = CEOS
radiometry = AMPLITUDE_IMAGE
look up table =
lat begin = -99.00
lat end = -99.00
precise =
output db = 0
```

```
complex SLC = 0  
multilook SLC = 0  
  
[Terrain correction]  
pixel spacing = -99.00  
digital elevation model = /data/delta_dem.img  
mask =  
auto mask water = 0  
water height cutoff = 1.000000  
fill value = 0  
do radiometric = 0  
smooth dem holes = 0  
refine geolocation only = 0  
interpolate = 1  
save terrcorr dem = 0  
save terrcorr layover mask = 0
```

```
[Geocoding]  
projection = /export/asf_tools/share/asf_tools/projections/utm/utm.proj  
pixel spacing = -99.00  
height = 0.0  
datum = WGS84  
resampling = BILINEAR  
background = 0.00  
force = 0
```

```
[Export]  
format = GEOTIFF  
byte conversion = SIGMA  
rgb banding =  
truecolor = 0  
falsecolor = 0  
band =
```

In this case all four processing steps will be performed, i.e. importing, terrain correction, geocoding and exporting of the data set in a new format. Since we don't have SLC data, the polarimetry option is not turned on.

The values for each option are given here in all-capital letters, however the processing is not case sensitive, you may use lower-case values for options if you prefer.

The MapReady GUI generates configuration files in order to process each image. If you have turned on the "Keep Intermediate Files" option, the directory where the intermediate files are stored will contain a configuration file based on the settings selected from the GUI.

Import

As import formats *ASF Internal*, *CEOS*, *GeoTIFF*, and *STF* are recognized. Selecting the ASF Internal format is just another way of actually skipping the import step (rather than having to have the original format file.) The only CEOS format that currently makes sense to include in the processing flow is the CEOS level one data. The processing of any single-look complex (SLC), level zero data, CEOS and STF alike, has not been implemented yet. Without SAR processing being part of the processing flow any of the other steps are obsolete at this point.

The radiometry can be one of the following:

- AMPLITUDE_IMAGE
- POWER_IMAGE
- SIGMA_IMAGE
- GAMMA_IMAGE
- BETA_IMAGE

The amplitude image is the regularly processed SAR image. The power image represents the magnitude (square of the amplitude) of the SAR image. The sigma, gamma and beta image are different representations of calibrated SAR images. Their values are in power scale. Alternatively, the values can be stored in dB setting the *output db* flag. If you plan on terrain correcting, using dB for sigma, gamma and beta is highly recommended, otherwise the co-registration may fail.

The *look up table* option is primarily used by the Canadian Ice Service (CIS) and scales the amplitude values in range direction. The file parsed in to the import tool is expected to have two columns, the first one indicating the look angle with the corresponding scale factor as the second column. Here is an example of part of the ice look up table that the CIS is using.

```
...
22.0316 2.063874702
22.2442 2.087184476
22.4568 2.110376734
22.6694 2.133451475
22.882 2.156408699
23.0946 2.179248406
23.3072 2.201970597
23.5198 2.22457527
23.7324 2.247062427
23.945 2.269432068
24.1576 2.291684191
24.3702 2.313818798
24.5828 2.335835887
24.7954 2.35773546
25.008 2.379517517
...
```

The latitude constraints (*lat begin* and *lat end*) can only be used when importing level zero swath data (STF). This is the most convenient way to cut a subset out of a long image swath. Be sure that the *lat begin* and *lat end* values both lie within the swath.

The *precise* option, currently under development, will allow the use of ERS precision state vector from DLR as a replacement of the restituted state vectors that are provided from the European Space Agency. The parameter required here defines the location of the precision state vectors.

Terrain correction

For the terrain correction portion of the processing a digital elevation model is required. If the SAR image and the reference DEM have different pixel spacings, the resolution of terrain corrected SAR image needs to be adjusted. This resampling can be left to the `asf_mapready` tool to determine by setting the *pixel spacing* to -99.0 in the configuration file. This is the default setting. Alternatively, a user defined value can be set instead.

The *digital elevation model* parameter defines the location of the reference DEM.

During the terrain correction process, co-registration of the DEM and SAR image is accomplished in SAR geometry. In some cases, when parts of the images are known to be moving or changing (e.g. water, glaciers etc.), this can confuse the co-registration step and cause it to fail. If you provide the terrain correction step with a mask file that defines areas of the image to ignore, i.e. the water or glacial regions, then the co-registration step has a far higher likelihood of success.

Instead of creating a mask manually (see Appendix B), you may allow the terrain correction processing to automatically generate a mask for you by setting the *auto mask water* flag. The automatically-generated mask is based on the DEM and attempts to mask the regions of your scene that are water (those regions which may result in a poor match). Specifically, all DEM height values of less than 1 meter are masked out. You may instead force the automatically created mask to mask out all terrain below some other height by specifying a different *water height cutoff* in the terrain correction block of the configuration file.

When applying a mask during terrain correction, you can choose how the regions covered by the mask are filled-in in the final terrain corrected result. If you would like the SAR data to be kept then use -1 as the *fill value*, otherwise enter a value that you'd like to use instead.

When applying terrain correction to low-topography (flat) regions, the results may not be entirely accurate. In these cases, the reference DEM might still be used to improve the geolocation of the SAR image without performing the actual terrain correction. This can be achieved by setting the *refine geolocation only* flag. With this option, the image data is not changed at all – only the geolocation information in the metadata is affected.

Layover and shadow regions are problem areas in images that are in the original SAR geometry since the backscatter information is either heavily condensed or missing. In the terrain correction process they can either be left black (resulting in better image statistics in the remainder of the image) or they may be interpolated over (resulting in a

nicer-looking image). Setting the *interpolate* parameter to 1 indicates that these regions should be interpolated over.

For a more detailed analysis of the terrain correction results a couple of files used in the process can be saved. Setting the *save terrcorr dem* parameter keeps the clipped (to the SAR image extents) reference DEM in *slant range geometry*. Setting the *save terrcorr layover mask* parameter keeps the layover and shadow mask.

Geocoding

The geocoding tool currently supports five different map projections: Universal Transverse Mercator (UTM), Polar Stereographic, Albers Equal Area Conical, Lambert Conformal Conical and Lambert Azimuthal Equal Area. For all these map projections a large number of projection parameter files have been predefined for various parts of the world. The *projection* parameter in the geocoding block indicates the file name of the predefined projection parameter file. Users can define their projection parameter file using the text editor of their choice. On Unix systems the projection parameter files are located in the `ASF_Tools/share/ASF_Tools/projections/<projection>` directories, while on Windows systems they are located in the `projections/<projection>` directories in the ASF Tools installation folder, by default this is `c:\Program Files\ASF_Tools`. The projection parameter file for the UTM projection is a special case. It contains an empty zone parameter, in which case `ASF_Geocode` determines the zone from the center longitude of the image. It allows the use of any other zone for the geocoding as long as that zone is covered in the imagery. For these cases the user can define the zone parameter in the generic UTM projection file.

The *pixel spacing* determines the pixel size used for the resulting geocoded image and, therefore, the size of the output image. The default setting of -99.0 results in no change in pixel size during the geocoding process.

An average *height* can be defined for the image that is taken into account and adjusted for during the geocoding process. The default height is set to 0.0 meters (no height correction.)

Furthermore, a vertical *datum* can be defined for geocoded image. WGS84, NAD27 and NAD83 comprise the list of supported datums. In addition, a Hughes reference spheroid may be specified for the datum parameter as well.

Three different *resampling* methods have been implemented as part of the geocoding: NEAREST NEIGHBOR, BILINEAR and BICUBIC. The bilinear resampling method is the default.

After geocoding, a fill value is required for the regions outside the geocoded image. By default this value is 0, but may be set to a different value here.

In order to ensure the proper use of projection parameter files, we have implemented a number of checks that verify whether the map projection parameters are reasonable for the area that is covered by the data. For example, applying a projection parameter file that is defined for South America for a data set that is covering Alaska would lead to huge distortions. These checks can be overridden by setting the *force* option.

Export

The following *format* values are considered valid:

- TIFF
- GEOTIFF
- JPEG
- PGM
- PNG

All formats, with the exception of GeoTIFF, require the scaling of the internal ASF (usually 32-bit floating point) format from to byte format. The GeoTIFF supports byte as well as floating point data.

The *byte conversion* options are SIGMA, MINMAX, TRUNCATE or HISTOGRAM_EQUALIZE. They scale the floating point values to byte values in various ways:

- SIGMA – Determines the mean and standard deviation of an image, calculates a two sigma (i.e., standard deviations) range around the mean value, then maps image values within this range to 0 to 255. Image values that map to below 0 using are set to 0, and image values that map to greater than 255 are set to 255.
- MINMAX – Determines the minimum and maximum values of the input image and linearly maps those values to the byte range of 0 to 255.
- TRUNCATE – Values less than 0.0 are mapped to 0, values greater than 255.0 are mapped to 255, and values in between have their fractional portions truncated, i.e. 29.7 would become 29 exactly.
- HISTOGRAM_EQUALIZE – Histogram equalization is designed to optimize viewing for humans. It is a *nonlinear* contrast enhancement that expands low-dynamic range regions over a broader range of values and at the same time compresses areas of higher dynamic range over a lesser range of values. The remapping function is derived from the image histogram. Histogram equalization is useful for bringing out detail in areas of the image that otherwise seem to lack detail due to ‘flatness’ or ‘sameness’ in the brightness values, i.e. in dark or light regions or regions of similarly-grey values. Because this transform is nonlinear however, very small changes in the geolocation of may occur. The amount of change is not predictable and is completely dependent on the distribution of the data values in the image, but should be quite small, i.e. fractions of a pixel to a pixel in magnitude (est.).

Default values file

The *default values* file specified in the [General] block (in the configuration file) is used to define the user's preferred parameter settings. In most cases, you will work on a study where your area of interest is geographically well defined. You want the data for the entire project in the same projection, with the same pixel spacing and the same output format. The default values file is essential part of the batch processing, described in the next section.

Here is an example of a default values file that the Canadian Ice Service (CIS) is using for their automated processing system.

```
import = 1
sar processing = 0
terrain correction = 0
geocoding =1
export = 1
intermediates = 0
quiet = 0
short configuration file = 0
input format = CEOS
radiometry = AMPLITUDE_IMAGE
look up table = /export/cis/cis_ice.lut
projection = /export/asf_tools/share/projections/lambert_conformal_conic/
               lambert_conformal_conic_cis.proj
pixel spacing = 100
height = 0.0
datum = WGS84
resampling = BILINEAR
force = 1
output format = GEOTIFF
byte conversion = SIGMA
```

Note that it is not necessary, in a default settings file, to group the settings into blocks as in the normal configuration file. The block names are there to categorize the settings for reasons of clarity. All of the individual settings themselves are unique in their naming to prevent ambiguity. The easiest way to create a default settings file, which is nothing but a simple text file and can use any naming that you desire, is to use `asf_mapready` with the `-create` flag to create a configuration file first. Then edit that file and use it as a default settings file.

It is important to understand the order of events that occur as `asf_mapready` reads and uses both the configuration file created with the `-create` flag as well as the default settings file that *default values* field refers to. Here is how `asf_mapready` utilizes the settings in these two files:

1. `asf_mapready` reads the normal configuration file to determine the path and name of the default settings file.
2. `asf_mapready` then reads the default settings file as though it were a normal configuration file

3. `asf_mapready` then re-reads the normal configuration file and allows settings from that file to override the defaults found in the default settings file
4. Processing then continues according to the final combination of settings

Perhaps the best way to utilize the default settings file is to use one (or more) together with a standard configuration file that has had similar entries removed, i.e. define geocoding (map projection) parameters in the default settings file but delete the [Geocoding] block and its parameters found in the regular configuration file. Note that if you take this approach, that you would still (for this example) leave the *geocoding* flag in the [General] block of the normal configuration file set to '1'. The difference is that the appropriate parameters will be found in the default settings file instead. If you perchance ran `asf_mapready` with the `-create` flag again however, then the [Geocoding] block would be automatically added back to your configuration file. Take a look at a configuration file and at the default settings file provided by the ASF and experiment a bit to clarify how things work. You can find the default settings file provided by the ASF in the `asf_mapready` subfolder of your share directory (located where previously mentioned in this document.)

Running `asf_mapready` in batch mode

The `asf_mapready` tool can be used in a batch mode to run a large number of data sets through the processing flow with the same processing parameters. This requires a much shorter configuration file than for the regular processing. Most of the configuration options will be specified in a *default values* file as specified above, and the settings found in the *default values* file are removed from the normal configuration file:

```
asf_mapready configuration file

[General]
default values = cis.defaults
batch file = cis.batch
prefix = test
suffix = lcc
```

In this case there are only two parameters that *need* to be defined, the *default values* file (as described in the previous section) and the *batch file*. Optionally, a *prefix* as well as a *suffix* can be defined for the output names. With these naming schemes the user can prevent the tool from overwriting results, e.g. when running the same data sets through the processing flow with different map projection parameters. The batch file merely contains the basenames (only) of all the data sets to be processed, one basename per line as shown below:

```
R153253303G3S007
R153253303G4S013
...
```

Overview of the individual command line tools

A number of other command-line tools are included in the MapReady tool suite, however each tool's functionality is generally available through the MapReady GUI or the `ASF_mapready` command-line tool. All of the tools generally only work with ASF Internal format files as input (except `ASF_import`), and as output (except `ASF_export`).

Each tool has a `--help` option that can be used to give detailed usage information. Here we provide a brief overview of each tool's functionality, and how it fits into the overall tool suite.

`ASF_import`

The `ASF_import` tool is used to 'import' data from its original format to the internal format used by the ASF tools (MapReady package, the SAR Training Processor, etc). This program must be used on any data before any of the other command line tools can be used with that data.

When importing users can apply the antenna pattern on SAR data that has the antenna calibration coefficients available by using the `-sigma`, `-beta`, or `-gamma` options. Doing so will apply the antenna pattern to the data in the given β_0 , γ_0 or σ_0 projection. The product will be in the power scale. If it is preferred to have the data in the decibel scale, the `-db` flag can be used.

`ASF_terrcorr`

The `ASF_terrcorr` program terrain corrects or 'orthorectifies' the SAR data from its original side looking time based geometry (radar) to an orthogonal nadir view so that it aligns nicely with photographic images. It takes a SAR image and a digital elevation model (DEM) as input. A simulated SAR image is created based on the DEM using the satellite's orbit information (state vectors). The SAR and simulated SAR are then coregistered (matched). Based on that coregistration the values of each of the SAR pixels are 'painted' in the location of the corresponding pixel of the original DEM.

This utility performs the functionality available in the "Terrain Correction" tab of MapReady, and the [Terrain correction] section of `ASF_mapready`.

`ASF_geocode`

The program `ASF_geocode` takes a map projected or, more commonly, an unprojected (e.g., a ground range) image and geocodes it, i.e., maps it to a specified map projection, such as UTM or Polar Stereographic.


The geocoding process works by first mapping the edges of the original image into the output coordinate system, and from those finding the extents of the input image in the output projection space. Then, each pixel in the output is reverse-mapped to find its corresponding pixel in the input coordinate system, which is then placed in the output image. Since, in general, the output pixel won't correspond exactly with a single pixel in the input image, some kind of resampling (or, interpolating) has to be performed.

This utility performs the functionality available on the “Geocode” tab of MapReady, and the [Geocode] section of `ASFMapReady`.

`ASFMapReady`

The `ASFMapReady` program converts an image in ASF Internal Format, and converts it to the desired output format, such as GeoTIFF or JPEG.

An important capability of `ASFMapReady`, not available through MapReady, is the ability to apply a color look up table to grayscale data that is being exported to a color-capable format. The `-lut` option applies a look up table to the image while exporting. Some look up table files are in the `look_up_tables` subdirectory in the `ASFMapReady` share directory. For the terrain correction mask there is a `layover_mask.lut` defined that color codes the terrain correction mask for further analysis.

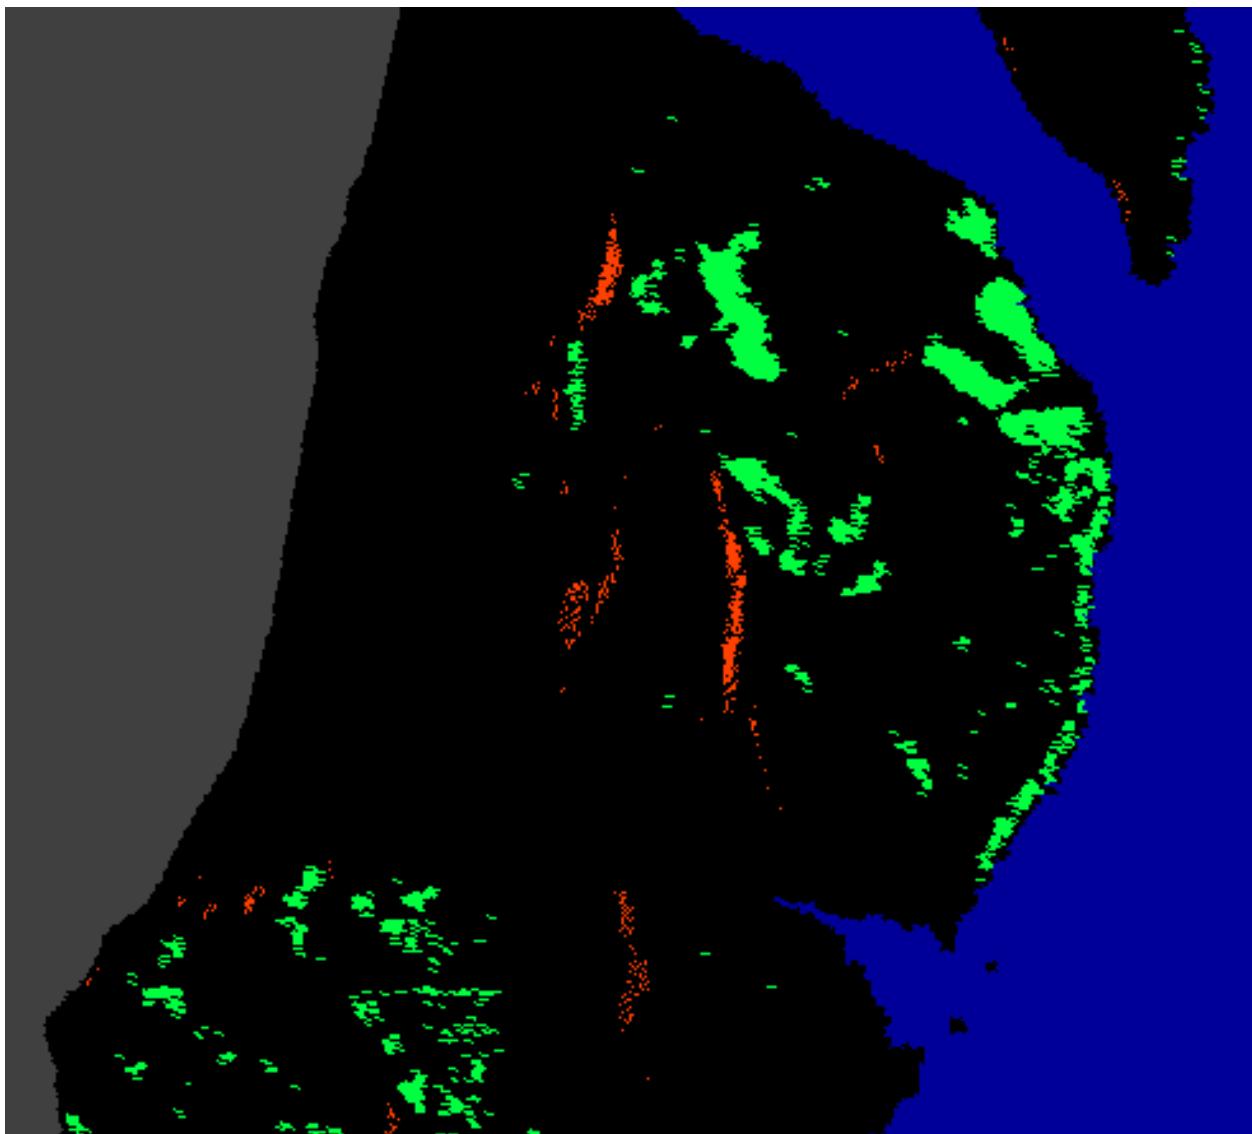

Layover mask of a terrain corrected image

akdem_grab

The akdem_grab program is a helper program for asf_terrcorr. If a user has a SAR image that needs to be terrain corrected, but does not have a DEM, akdem_grab can be used to get that DEM. It retrieves the requested DEM from the USGS seamless server (<http://seamless.usgs.gov>) given the latitude and longitude boundaries of the image.

convert2vector

The convert2vector program is a useful tool for dealing with vector data, whereas the remainder of the ASF MapReady tool suite is generally works only on raster data.

For example, this program can be used to convert a metadata file into a vector format, such as a shapefile, or a kml file. The resulting file, when loaded into a program such as ArcGIS (for shapefiles), or Google Earth (kml files), is a polygon which represents the bounding box of the image.

This program is used in MapReady and ASF View to implement the Google Earth buttons. An example of convert2vector in action is in [Appendix B](#).

deskew

Deskew is used by terrain correction to ‘square up’ an image for co-registration once it has been converted to slant range. It uses the squint angle of an image along with the look angle to determine the amount of parallelogram shift skew that has been introduced in an image due to the Doppler centroid chosen during image processing. It then remaps the image (using bi-linear interpolation) to remove this.

fill_holes

This program is used to smooth over missing data values in DEMs. SRTM DEMs frequently contain a number of missing data regions, this program can be used to fill in those holes with bilinearly interpolated values. The interpolation is done by taking a weighted average of the four nearest (in each of the up, down, left and right directions) DEM values to the missing point.

This is used by MapReady to implement the “Fill DEM holes with interpolated values” checkbox in the Terrain Correction tab.

meta2envi

ENVI is capable of reading the flat binary .img files used in the ASF Internal Format, however the metadata file is different. This program converts an ASF metadata file (which has a .meta extension) to an ENVI metadata file (which has a .hdr extension). At that point, the .hdr file can be paired with the .img file (which doesn’t need to be changed) and loaded into ENVI.

By default, MapReady will produce .hdr files for all intermediate files produced during the processing. So, if you have saved intermediate files, these intermediate files may

be loaded directly into ENVI using the generated .hdr files, together with their associated .img files.

metadata

This program is a command-line implementation of the CEOS Metadata Viewer – it retrieves and displays the ceos information from the CEOS leader files.

mosaic

The mosaic program mosaicks the given input files together, producing an output image that is the union of all the given input images. It also requires that you specify a map projection for the output images – and all input images will be geocoded to that projection while being mosaicked.

The asf_geocode program is a wrapper for this program for the special case where only one image is being mosaicked.

refine_geolocation

Part of the terrain correction process is to eliminate any offsets between the SAR image and a SAR image that is simulated from a DEM, by adjusting the SAR image's metadata. With an accurate DEM, this can improve the geolocation of the SAR image to sub-pixel accuracy.

The refine_geolocation program performs only this part of the terrain correction process – improving the geolocation of the image, but not actually applying the terrain correction.

This is used by MapReady (and asf_mapready) to do the “refine geolocation only” option of terrain correction.

resample

This program provides simple resampling functionality – allowing one to convert an image with one pixel size to another. This gets used by MapReady (and asf_mapready) a number of different times, primarily in the terrain correction processing when getting the SAR image and simulated SAR images to the same pixel size.

shift_geolocation

This program enables users to adjust the geolocation of an image manually. It adjusts the time_shift and slant_shift values in the metadata, to produce geolocations shifted by the given amounts. The x-shift and y-shift values are in units of pixels or meters. If the image is already geocoded, then the startX and startY values are adjusted by the specified amounts, instead of the time and slant shift values.

This program could be used in cases where you are trying to use refine_geolocation to improve the geolocation of an image, but the co-registration process of refine_geolocation fails to produce a good match, and hence produces poor offsets, or

no offsets at all. In this situation, you could measure the offset manually, and use shift_geolocation to apply the measured offset.

sr2gr

The sr2gr program remaps a slant range into ground range. This isn't used directly by MapReady or asf_mapready.

to_sr

The to_sr program converts an image to slant range. It replaces the old gr2sr utility, which only worked on ground range images – to_sr can convert projected images to slant range as well.

This is used by terrain correction during the co-registration process, which is done in slant range.

trim

The trim program cuts out a rectangular portion of an image (where the edges of the rectangle are parallel to the edges of the original image). It works on slant, ground, and projected images, in the ASF Internal format.

This is used in ASF View by the “Save Subset” capability.

Handling multi-band files with the command line tools

The asf_import, asf_geocode and asf_export tools all have a *-band* option that allows the user to apply their respective functionality to a single band if the passed band identifier can be found in the multi-band image.

Command line:

```
asf_import -band 4 ALAV2A037283110-01B2G_U bahamas
```

Importing: ALAV2A037283110-01B2G_U

Data format: CEOS

```
File: IMG-04-ALAV2A037283110-01B2G_U  
Input data type: level two data  
Output data type: geocoded amplitude image  
Input band: 04
```

Processed 8480 of 8480 lines.

Import complete.

In this example, we are just interested in band 4 of an ALOS AVNIR image and only import this particular band.

Appendix A – Configuration File Example

This is an example of a complete configuration with full descriptions of each individual parameter.

```
ASF MapReady configuration file

[General]

# This parameter looks for the basename of the input file
input file = e2_3919_290

# This parameter looks for the basename of the output file
output file = e2_3919_290_tc

# The import flag indicates whether the data needs to be run through
# 'ASF_import' (1 for running it, 0 for leaving out the import step).
# For example, setting the import switch to zero assumes that all the data
# is already in the ASF internal format.
# Running ASF_mapready with the -create option and the import flag
# switched on will generate an [Import] section where you can define further
# parameters.

import = 1

# The polarimetry flag indicates whether the polarimetric parameters,
# decompositions or classifications are applied (1 for applying, 0 for leave out
# the polarimetry).
polarimetry = 0

# The terrain correction flag indicates whether the data needs be run
# through 'ASF_terrcorr' (1 for running it, 0 for leaving out the terrain
# correction step).
# Running ASF_mapready with the -create option and the terrain correction
# flag switched on will generate an [Terrain correction] section where you
# can define further parameters.

terrain correction = 1

# The geocoding flag indicates whether the data needs to be run through
# 'ASF_geocode' (1 for running it, 0 for leaving out the geocoding step).
# Running ASF_mapready with the -create option and the geocoding flag
# switched on will generate an [Geocoding] section where you can define further
# parameters.

geocoding = 1

# The export flag indicates whether the data needs to be run through
# 'ASF_export' (1 for running it, 0 for leaving out the export step).
# Running ASF_mapready with the -create option and the export flag
# switched on will generate an [Export] section where you can define further
# parameters.
```

```
export = 1

# The default values file is used to define the user's preferred parameter
# settings. In most cases, you will work on a study where your area of interest is
# geographically well defined. You want the data for the entire project in the same
# projection, with the same pixel spacing and the same output format.

# A sample of a default values file can be located in
# /export/asf_tools/share/asf_tools/asf_mapready.

default values = /data/asf_mapready.defaults

# The intermediates flag indicates whether the intermediate processing
# results are kept (1 for keeping them, 0 for deleting them at the end of the
# processing).

intermediates = 0

# The short configuration file flag allows the experienced user to
# generate configuration files without the verbose comments that explain all
# entries for the parameters in the configuration file (1 for a configuration
# without comments, 0 for a configuration file with verbose comments)

short configuration file = 0

# If you would like to view intermediate imagery, you may wish to turn this
# option on – it dumps an ENVI-compatible .hdr file, that will allow ENVI to view
# ASF Internal format .img files. These files are not used by the ASF Tools.

dump envi header = 1

# The tmp dir is where temporary files used during processing will
# be kept until processing is completed. Then the entire directory and its
# contents will be deleted.

tmp dir =

[Import]

# The recognized import formats are: ASF, CEOS and STF.
# Defining ASF, being the internal format, as the import format is
# just another way of actually skipping the import step.

format = CEOS

# The radiometry can be one of the following: AMPLITUDE_IMAGE,
# POWER_IMAGE, SIGMA_IMAGE, GAMMA_IMAGE and BETA_IMAGE.
# The amplitude image is the regularly processed SAR image. The power image
# represents the magnitude (square of the amplitude) of the SAR image.
# The sigma, gamma and beta image are different representations of calibrated
# SAR images. Their values are in power scale.

radiometry = AMPLITUDE_IMAGE
```

```
# The look up table option is primarily used by the Canadian Ice
# Service (CIS) and scales the amplitude values in range direction. The file
# parsed in to the import tool is expected to have two columns, the first one
# indicating the look angle with the corresponding scale factor as the second
# column.

look up table =

# The latitude constraints (lat begin and lat end) can only be used
# when importing level zero swath data (STF). This is the most convenient way
# to cut a subset out of a long image swath.

lat begin = -99.00
lat end = -99.00

# The precise option, currently under development, will allow the use
# of ERS precision state vector from DLR as a replacement of the restituted
# state vectors that are provided from the European Space Agency. The parameter
# required here defines the location of the precision state vectors.

precise =

# When the output db flag is non-zero, the calibrated image
# is output in decibels. It only applies when the radiometry is sigma,
# gamma or beta.

output db = 0

# When the complex SLC flag is non-zero, single look complex data is stored in I/Q
# values. Otherwise SLC data will be stored as amplitude/phase.

Complex SLC = 0

# When the multilook SLC flag is non-zero, single look complex data is stored as
# amplitude/phase is being multilooked.

multilook SLC = 0

[Terrain correction]

# This parameter defines the output size of the terrain corrected
# image. If set to -99 this parameter will be ignored and the 'ASF_TERRCORR' will
# deal with the issues that might occur when using different pixel spacings in
# the SAR image and the reference DEM

pixel spacing = -99.00

# The heights of the reference DEM are used to correct the SAR image
# for terrain effects. The quality and resolution of the reference DEM determines
# the quality of the resulting terrain corrected product

digital elevation model = /data/delta_dem.img

# In some cases parts of the images are known to be moving (e.g. water,
# glaciers etc.). This can cause severe problems in matching the SAR image with
```

```
# the simulated SAR image derived from the reference. Providing a mask defines the
# areas that are stable and can be used for the matching process.

mask =

# Instead of creating a mask, you can have terrain correction
# automatically generate a mask for you, based on the DEM, which attempts to mask
# the regions of your scene that are water (these regions provide a poor match).
# Specifically, all DEM values <1m are masked, unless a different height cutoff
# is specified with the 'water height cutoff' option, described next.

auto mask water = 0

# When creating a mask automatically with the previous flag,
# you may specify use a value other than 1m as the height cutoff.
# This value is ignored when 'auto mask water' is 0.

water height cutoff = 1.000000

# When applying a mask during terrain correction, you can choose
# how the regions covered by the mask are filled in the final terrain corrected
# result. You can either specify a (non-negative) value of your choosing, or
# if you'd like the SAR data to be kept then use -1 as the fill value.

fill value = 0

# Normally during terrain correction, only geometric terrain is
# applied. This option will also turn on radiometric terrain correction.
# This option is still experimental. Currently, terrain corrected pixel
# values are scaled using the formula: 1 - .7*pow(cos(li),u), where li is
# the local incidence angle.

do radiometric = 0

# Even if you don't want to change the image via terrain correction,
# you may still wish to use the DEM to refine the geolocation of the SAR image.
# If this flag is set, terrain correction is NOT performed.

refine geolocation only = 0

# Layover/shadow regions can either be left black (resulting in better
# image statistics in the remainder of the image), or they may be interpolated over
# (resulting in a nicer-looking image). Setting this parameter to 1 indicates that
# these regions should be interpolated over.

interpolate = 1

# The DEM that is provided is clipped to match the scene. Normally this
# clipped DEM is removed along with the other temporary files, however if you are
# interested you can turn this option on (set it to 1), which will keep the clipped
# DEM, as well as geocode (if you've elected to geocode) and export it (if you've
# elected to export, though the DEM is always exported as floating point data even
# when you exporting your SAR data as bytes). The clipped DEM will be slightly
# larger than the SAR image, usually, since a larger region must be clipped to
# allow for the height variations.
```

```
save terrcorr dem = 0
```

```
# This option determines if a file marking the regions of layover and  
# shadow should be created along with the output image. It is geocoded using the  
# the same parameters as your SAR image, and exported as byte data.
```

```
save terrcorr layover mask = 1
```

[Geocoding]

```
# The geocoding tool currently supports five different map projections:  
# Universal Transverse Mercator (UTM), Polar Stereographic, Albers Equal Area  
# Conic, Lambert Conformal Conic and Lambert Azimuthal Equal Area.  
# For all these map projections a large number of projection parameter files  
# have been predefined for various parts of the world.  
# The projection parameter files are located in  
# /export/asf_tools/share/asf_tools/projections.
```

```
projection = /export/asf_tools/share/asf_tools/projections/utm/utm.proj
```

```
# The pixel spacing determines the pixel size used for the resulting  
# geocoded image and, therefore, the size of the output image.
```

```
pixel spacing = -99.00
```

```
# An average height can be defined for the image that is taken into  
# account and adjusted for during the geocoding process.
```

```
height = 0.0
```

```
# A vertical datum can be defined for geocoded image. WGS84 is the  
# only currently supported datum. However, NAD27 and NAD83 are planned to be  
# appropriate alternatives.
```

```
datum = WGS84
```

```
# Three different resampling methods have been implemented as part  
# of the geocoding: NEAREST NEIGHBOR, BILINEAR and BICUBIC. The bilinear  
# resampling method is the default.
```

```
resampling = BILINEAR
```

```
# After geocoding, a fill value is required for the regions outside  
# of the geocoded image. By default this value is 0, but may be set to a  
# different value here.
```

```
background = 0.00
```

```
# In order to ensure the proper use of projection parameter files,  
# we have implemented a number of checks that verify whether the map  
# projection parameters are reasonable for the area that is covered by the  
# data. For example, applying a projection parameter file that is defined for  
# South America for a data set that is covering Alaska would lead to huge  
# distortions. These checks can be overwritten by setting the force option.
```

```
force = 0
```

[Export]

```
# The following format are considered valid format: ASF, TIFF, GEOTIFF  
# JPEG and PGM.  
# In the same way as for the import block, ASF as an export option results in  
# skipping the export step entirely. All other formats, with the exception of  
# GeoTIFF, require the scaling of the internal ASF format from floating point  
# to byte. The GeoTIFF supports byte as well as floating point data.
```

```
format = GEOTIFF
```

```
# The byte conversion options are SIGMA, MINMAX, TRUNCATE or  
# HISTOGRAM_EQUALIZE. They scale the floating point values to byte values.
```

```
byte conversion = SIGMA
```

```
# If you have more than one band available in your data, you can  
# create the exported file using the different bands for the R, G, and B  
# channels in the output image. List the R, G, and B channels in that order,  
# separated by commas. E.g. HH,HV,VV. Note that no contrast expansion or  
# other modification of the data will be applied.
```

```
rgb banding =
```

```
# If you have 3+ bands available in your optical data,  
# you can create the exported file using a standard selection of bands for  
# the R, G, and B channels in the output image. By setting the truecolor  
# flag, band assignments will be R = 3, G = 2, and B = 1 and each band  
# will individually be contrast-expanded using a 2-sigma remapping for improved  
# visualization (use rgb banding if you desire raw assignments.)
```

```
truecolor = 0
```

```
# If you have 4+ bands available in your optical data,  
# you can create the exported file using a standard selection of bands for  
# the R, G, and B channels in the output image. By setting the falsecolor  
# flag, band assignments will be R = 4, G = 3, and B = 2 and each band  
# will individually be contrast-expanded using a 2-sigma remapping for improved  
# visualization (use rgb banding if you desire raw assignments.)
```

```
falsecolor = 0
```

```
# If you wish to export a single band from the list of  
# available bands, e.g. HH, HV, VH, VV ...enter VV to export just  
# the VV band (alone.)
```

```
Band =
```

Appendix B – Generating a Mask for Terrain Correction

This appendix describes the procedure how to generate a geocoded mask saved in GeoTIFF format that can be used during the terrain correction as part of the `asf_mapready` tool. It uses functionality provided within the ArcGIS software package.

Defining an Area of interest

In a first step, we need to determine our study area by defining the area of interest. This can be achieved in various ways.

If we have a well defined area of interest, e.g. a glacier, the boundary is known in its entirety with some detail. In this case, a shapefile either already exists or can be generated by digitizing the boundary within ArcGIS.

In other cases, e.g. a land/water boundary defined by the coast line, needs to be treated differently. We typically use four corner coordinates for which we have geographic coordinates, i.e. latitude and longitude, to define our area of interest. More points can be used, if so desired, but this is generally not required. The corner coordinates are stored in a tab delimited file with three columns: point ID, latitude, longitude. Any text editor or an Excel spreadsheet can be used for this step.


This polygon file is then converted into a shapefile using the `convert2vector` tool. The command line would look like this

```
convert2vector point shape cook_inlet.csv cook_inlet
```

Generating a vector mask

For our water body example we now need to clip the coast line to only cover our previously defined area of interest.

The clipping function is part of the 'Extract' functions of the analysis tool within the ArcToolbox. As shown in the example on the right, a coast line polygon (1:63,360 scale) is the input feature. The previously defined boundary file serves as clip feature.

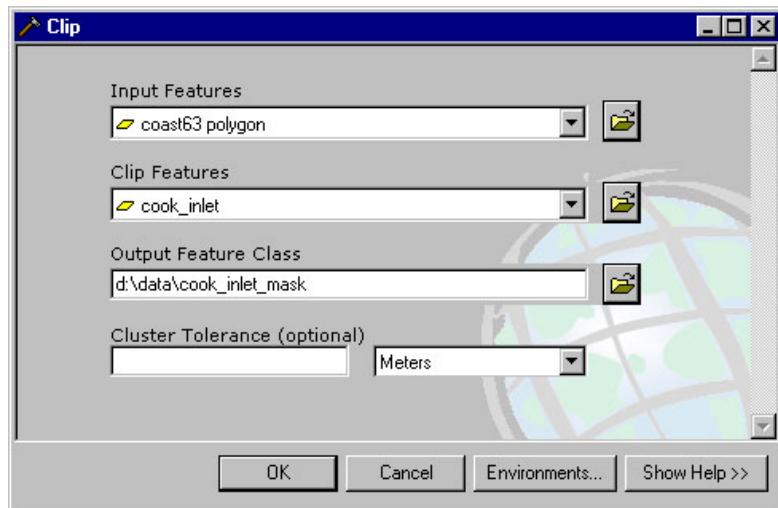

Note that the resulting vector mask inherits the map projection information from the input feature. If you want to use a different projection during the terrain correction process, reproject the input feature into this projection before clipping the area of interest.

In case of a fully defined boundary, e.g. our glacier example, this step is obviously not required.


Attributes of cook_inlet_mask							
FID	Shape*	AREA	PERIMETER	COAST63_	COAST63_ID	FEATURE	mask
0	Polygon	331379.548688	3497.356452	1104	1105		1
1	Polygon	472062.511946	3809.247179	1105	1106		1
2	Polygon	163152.161229	3503.013277	1106	1107		1
3	Polygon	7294.814214	338.580510	1107	1108		1
4	Polygon	3960887.82872	9508.166072	1108	1109		1
5	Polygon	11493.269080	549.902863	1109	1110		1
6	Polygon	62634.973343	1905.490636	1110	1111		1
7	Polygon	665230.747909	3981.430737	1111	1112		1
8	Polygon	1403.575385	158.357118	1116	1117		1
9	Polygon	180424.259962	3006.453561	1118	1119		1
10	Polygon	20067.664811	829.306408	1127	1128		1
11	Polygon	2481.929600	186.111683	1131	1132		1
12	Polygon	725.564120	105.040143	1132	1133		1
13	Polygon	875.677243	122.986046	1134	1135		1
14	Polvaon	807.144583	107.903890	1135	1136		1


In the next step, add a new mask field to the attribute table (type: short integer) and set the mask attribute to 1. This is effectively done using 'Find and replace' in the options menu, once the table is in editing mode.

Generating a raster mask

In order to use the vector mask in the terrain correction process, it needs to be converted to a raster format.

For that we convert the vector mask using the newly defined mask field into a raster format. In this step it is important to define the output cell size. The cell size should be same as the pixel size that we intend to use during the terrain correction. In the resulting raster mask image all pixels that are included in the area of interest are set to 1. All other pixels are set to 0.

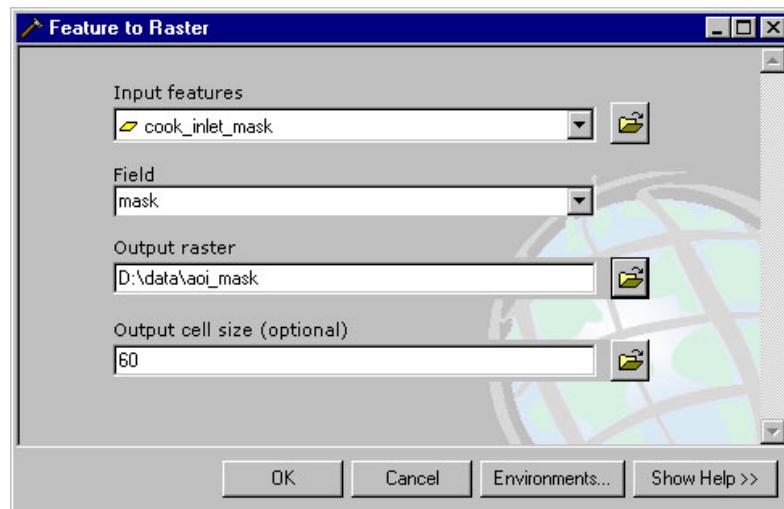

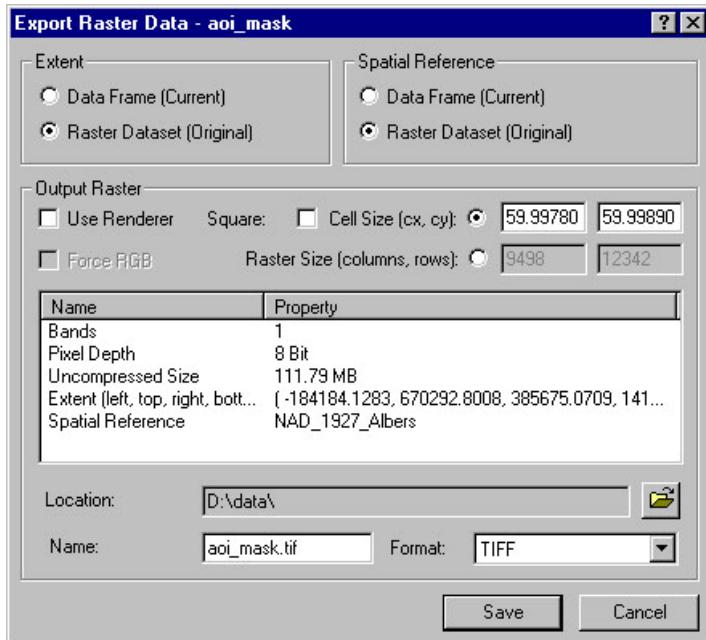

By converting the raster mask image into the GeoTIFF format the mask can be used for the terrain correction of radar images within ASF's MapReady software.

Note that this step preserves the map projection information introduced earlier.