# Using the Rocket motor test Stand.

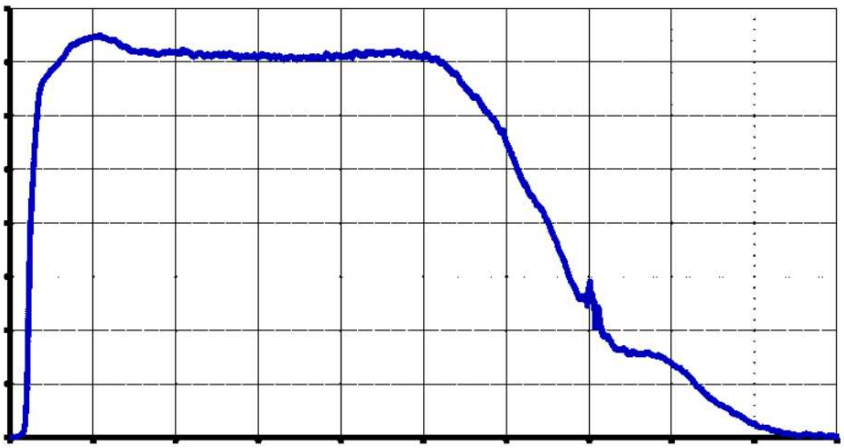

| Version | date | Author | Comments |
|---|---|---|---|
| 0.1 | 10/11/2021 | Boris du Reau | Initial version |
| 0.2 | 08/11/2022 | Boris du Reau | Added version 2 of the board |
| 0.3 | 19/08/2022 | Boris du Reau | Added trouble shooting |
| 0.4 | 23/11/2022 | Boris du Reau | Updating with latest design of the app |

**Rocket Type**

| Micro-max | Model Rocket | Mid power | High power |
|---|---|---|---|
| yes | yes | yes | yes |

**Category**

| Construction technic | Ground Support | Electronic | Other |
|---|---|---|---|
| | | **X** | X |

 Copyright © Boris du Reau 2012-2022

 Copyright © Boris du Reau 2012-2022

Objectives ..... 4
Test stand characteristics ..... 5
Where to find the latest code? ..... 6
How does it work? ..... 6
Step 1 – Building a test stand ..... 7
Step 2 – Building the acquisition board ..... 8
Step 2.1 wiring the sensors ..... 9
Step 3 – Building or installing the acquisition board firmware ..... 10
Step 4 –Installing the Android app ..... 11
Step 5 – Flashing the board firmware ..... 11
Step 6– Configure the Bluetooth or 3DR modules ..... 12
Step 7 – Pairing the Bluetooth device ..... 14
Step 8– Configure the test Stand board ..... 14
Step 9– Calibrate the test stand board ..... 14
Step 10 – Configure the test Stand application ..... 15
Step 11 – Connect the test stand with your launch controller ..... 15
Step 12 – Record some thrust curve. ..... 16
Step 13 – Manage thrust Curves ..... 16
Step 14 – Export and use thrust Curves ..... 16
Step 15 - Using the telemetry ..... 18
Step 16 - Board status ..... 18
The sensors ..... 19
Gauge sensor ..... 19
Pressure transducer (board V2 only) ..... 20
Trouble shooting ..... 21
Low battery ..... 21
Data quality issues ..... 21
Pressure sensor issues (V2 board only) ..... 21
Curve not recorded or partially recorded ..... 22

 Copyright © Boris du Reau 2012-2022 

## Objectives

The following document will explain how to use the Rocket motor test stand, configure it and use the Android software to read and export thrust curves.

At the time of writing this document, the test stand board can be built using an ATMega 328 or an STM32 with an HC break out board. The STM32 board should be a lot faster than the ATMega 328 board.

2 versions of the test stand board are available

- one that can only record thrust (green board)

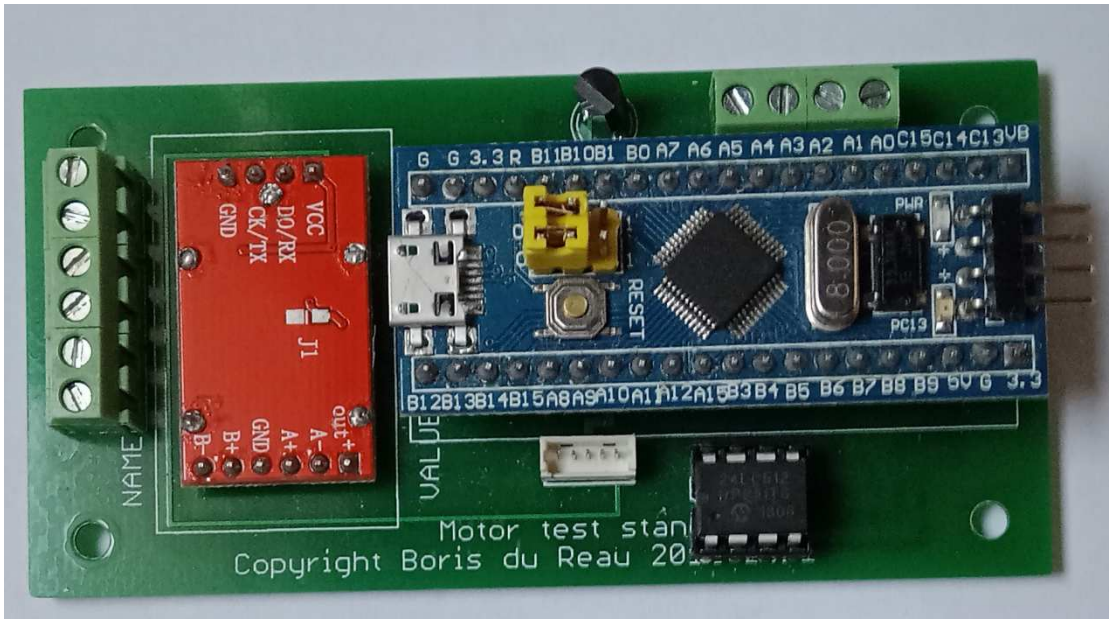


and another one that can also record pressure (black board)

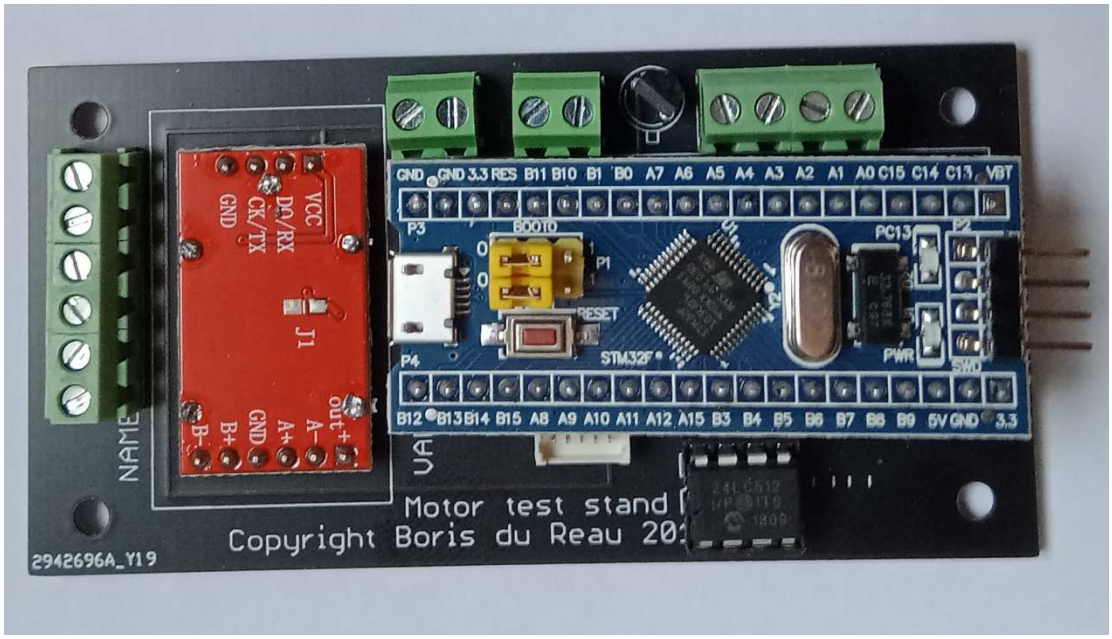


 Copyright © Boris du Reau 2012-2022

The application can be installed on pretty much any Android device starting from version 5.x of the Android OS.

The application can be either compiled from source code or can be installed from the Android play store.

Should you have any questions please send an email to boris.dureau@neuf.fr.

## Test stand characteristics

- Use any gauge sensor, it calibrate itself using a known weight
- Trigger recording from your launch controller
- Can record from 10 to 40 measures per second
- Can record up to 25 thrust curves and pressure curves on the V2
- Ability to set the recording time
- Telemetry
- Multi languages, so far can do French and English but can be translated in other languages
- Graphical front end using an Android device
- Connect to Android using Bluetooth or 3DR module to do long range telemetry
- Ability to export to a CSV file or a RASP file
- Ability to flash the firmware from your Android device
- Application is available on the Android App store
- On line help for each screen

 Copyright © Boris du Reau 2012-2022

## Where to find the latest code?

The latest code can be found on github

For the board firmware

https://github.com/bdureau/MotorTestStand

For the Android front end

https://github.com/bdureau/RocketMotorTestStandConsole

## How does it work?

The test stand currently only measure thrust using a gauge sensor. The analogue signal from the sensor is converted and stored in the test stand board eeprom. Using an Android device you can connect to the test stand board using a Bluetooth module or a 3DR radio module to do long range telemetry.

 Copyright © Boris du Reau 2012-2022 

## Step 1 – Building a test stand

The test stand will need to be strong enough to hold the motor while you are firing it. It will be where you have all your various gauge sensors.

This is an example of a build.

 Copyright © Boris du Reau 2012-2022 

## Step 2 – Building the acquisition board

The acquisition board is pretty simple; it consists of a signal amplifier module and a micro controller.

It also has an entry that can be linked to your launch controller so that it triggers the recording of the motor thrust when the motor is fired.

The schematic look like this

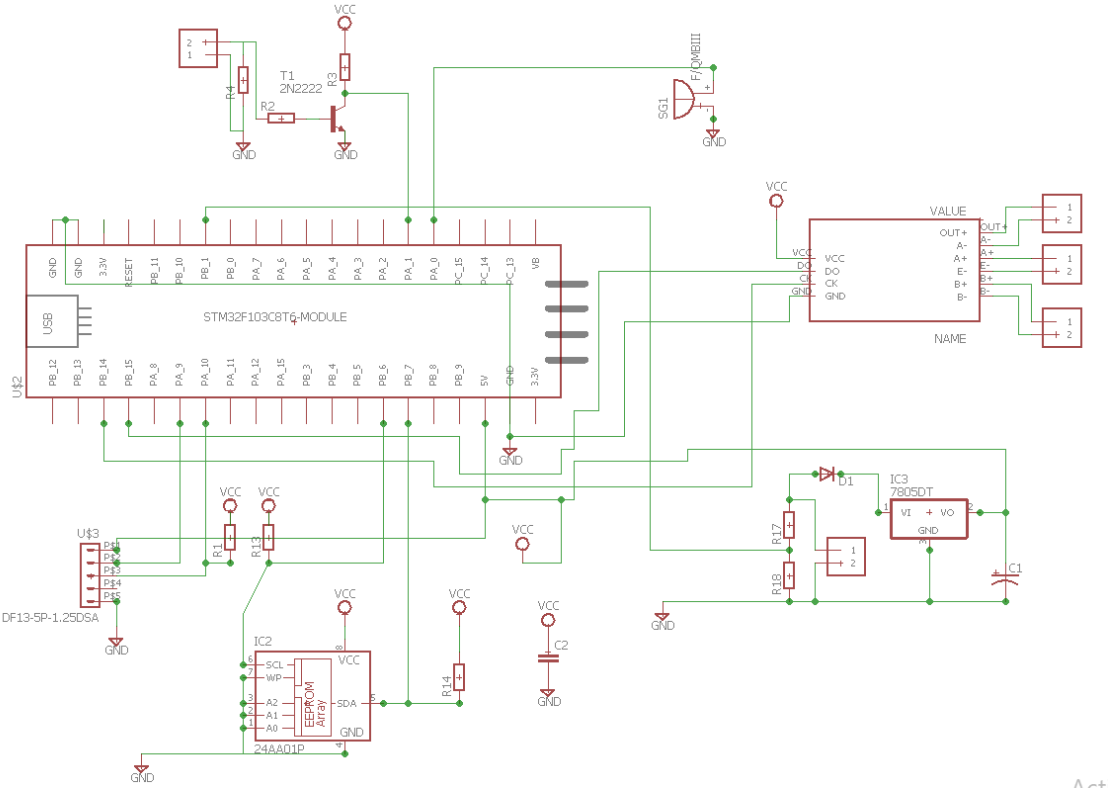


 Copyright © Boris du Reau 2012-2022 

The board PCB looks like the one below. Note that this showing a 3DR module for long range telemetry.

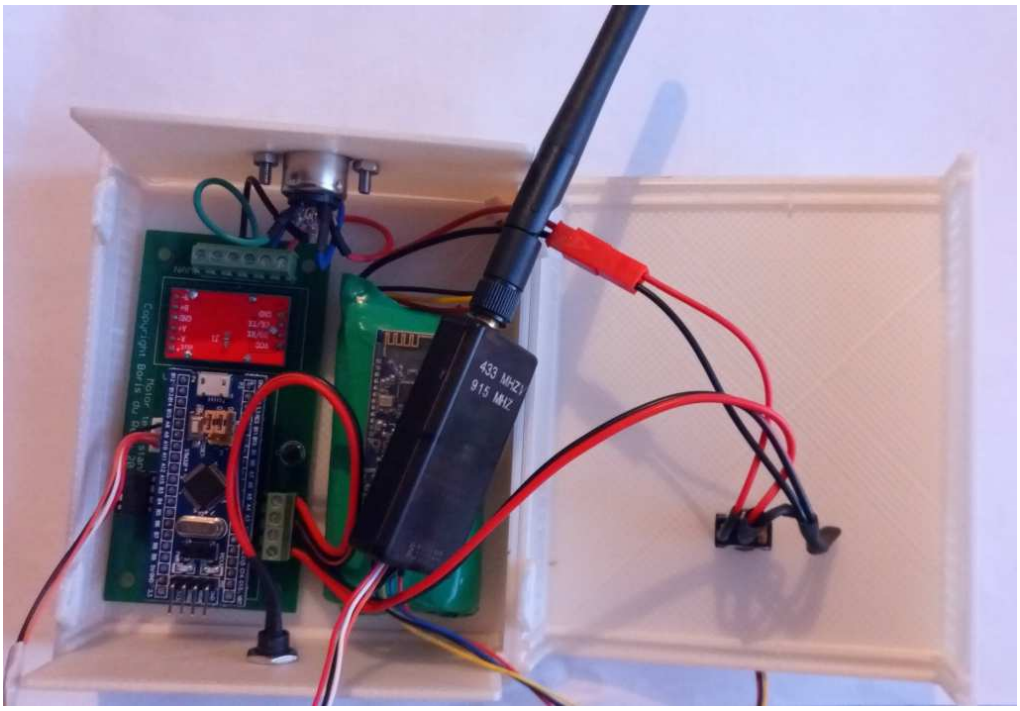


The gauge sensor is attached using a DIN connector. The launch controller is connected to the test stand using a jack.

## Step 2.1 wiring the sensors

For version 1 of the board

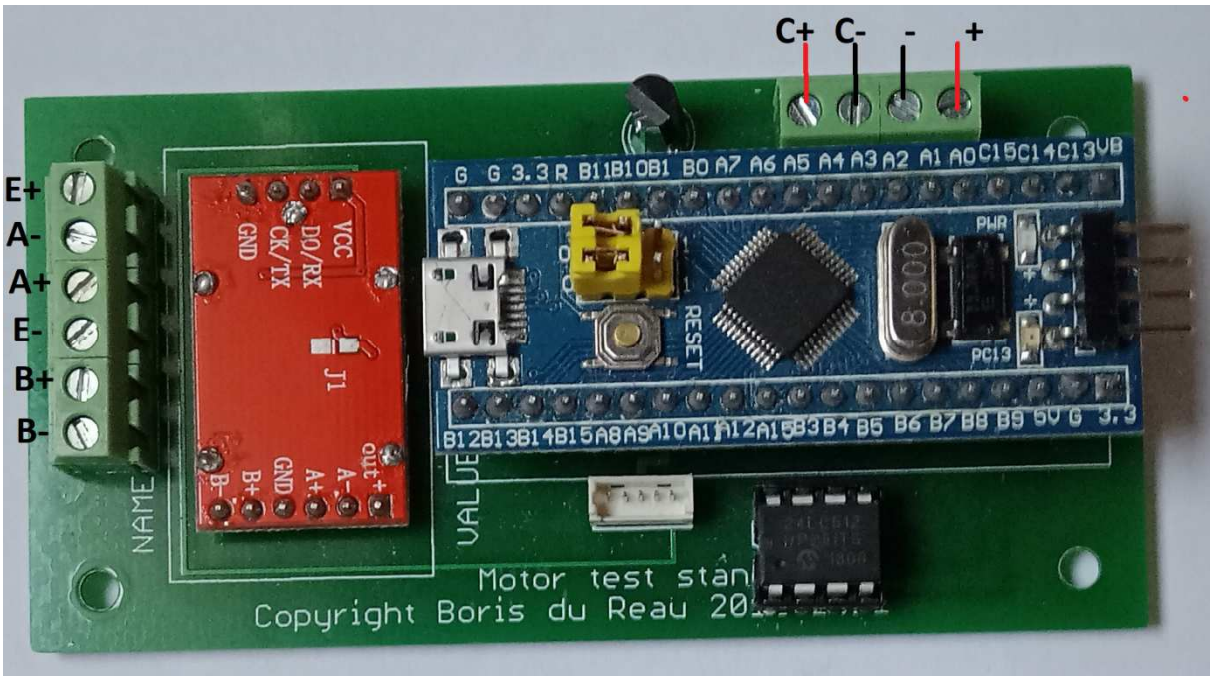

For version 2 of the board

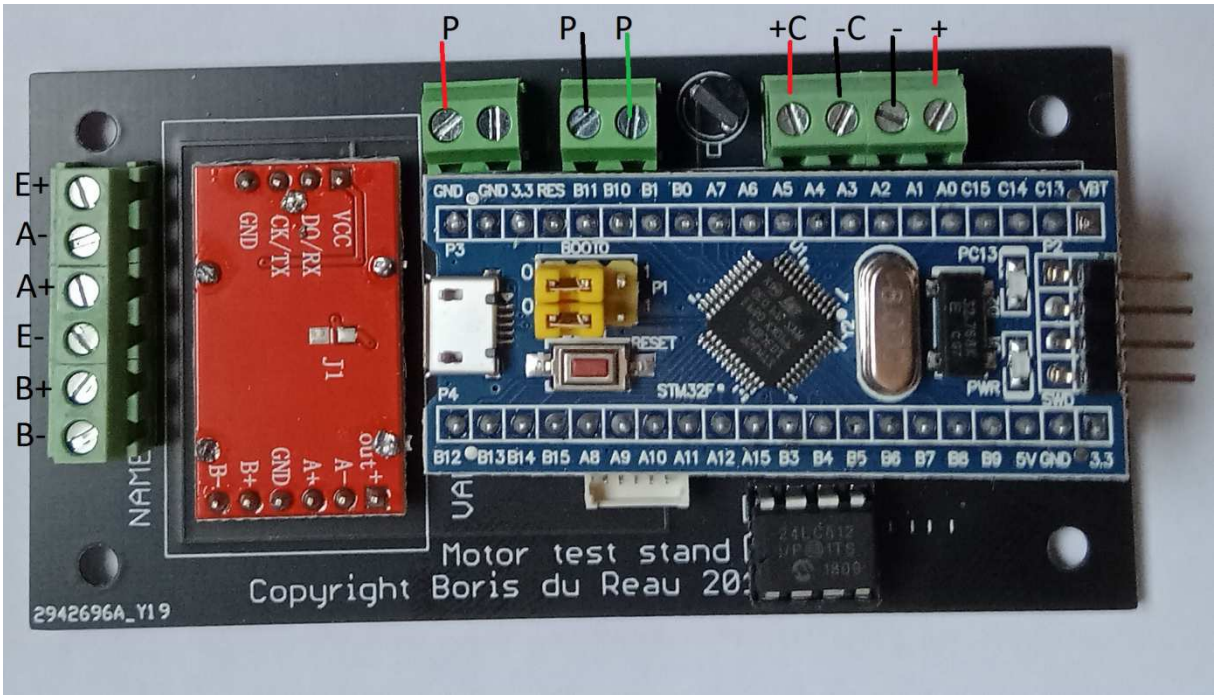


The gauge wire to E+(Red) , A-(white), A+(green), E-(black), B+ and B-

The pressure sensor wire to the P. The colors should be the same has the wire of the sensor

C+ and C- are wired in parallel to the ematch make sure that C- is wire to the ground of the launch controller.

+ and – are wired to a 2S or 9V battery.

## Step 3 – Building or installing the acquisition board firmware

The acquisition board firmware has been written using the Arduino environment but if you are not a developer you can flash the board firmware from the Android app using a cable. More on that later.

There are currently 2 options for the firmware, either compile it for an ATMega 328 board or compile it for an STM32F03 board.

Note that the STM32 based board are faster and will allow more measure per second.

 Copyright © Boris du Reau 2012-2022 

## Step 4 –Installing the Android app

The Android app can be compiled from source our installed from the Android play store. If you want to compile it from source you will need to download and install Android studio on your PC or Mac.

It has a simple main screen from which you can access all functionalities

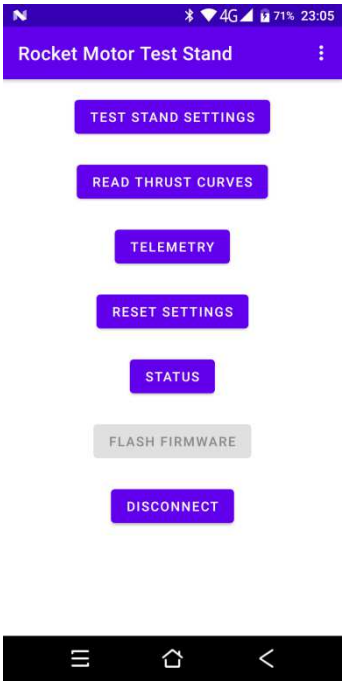


## Step 5 – Flashing the board firmware

Using a ttl cable you can connect the test stand board to your Android device and update the firmware. Just click the flash firmware button, select your board firmware and follow the on line instructions on the console to flash it (in particular make sure that you move the jumper and press the reset button).

This will insure that the board firmware you are using is compatible with the console application that you are using.

When updating the application from the store please make sure that flash your board firmware.

 Copyright © Boris du Reau 2012-2022

## Step 6– Configure the Bluetooth or 3DR modules

**Note that you will have not to do that step unless you want to rename your Bluetooth module or use another module than the one was provided.**

In order to have the Bluetooth or 3DR modules communicating at the same speed as the test stand board you will need to set their speed.

By default the board can communicate at 38400 bauds so that you will have to set the speed of the 3DR and Bluetooth module to 38400 bauds.

This can be done by accessing the configuration in the menu and following the on line instructions.

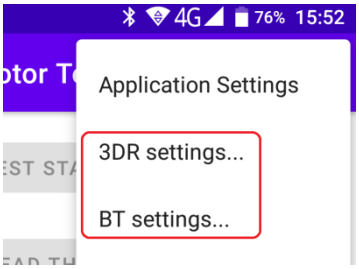


To connect the modules to you phone you will need a ttl cable and micro USB or USB type C adapter.

 Copyright © Boris du Reau 2012-2022 

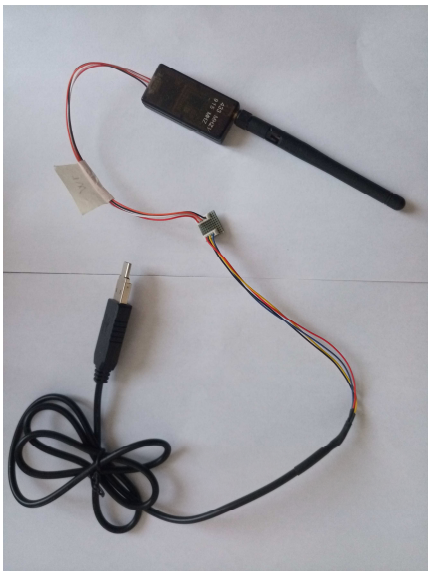

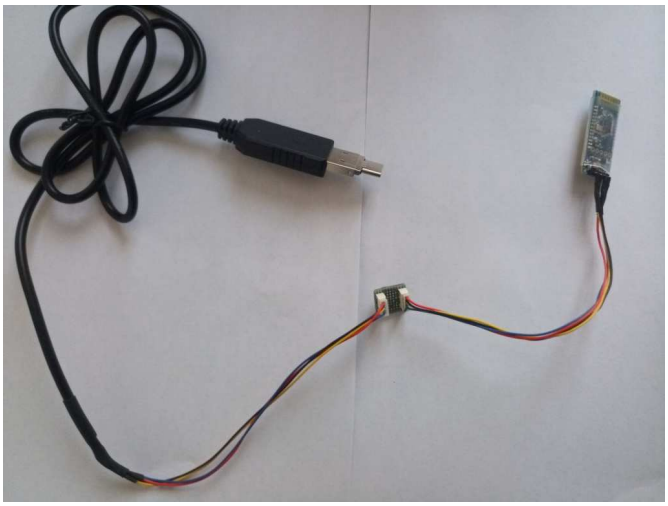

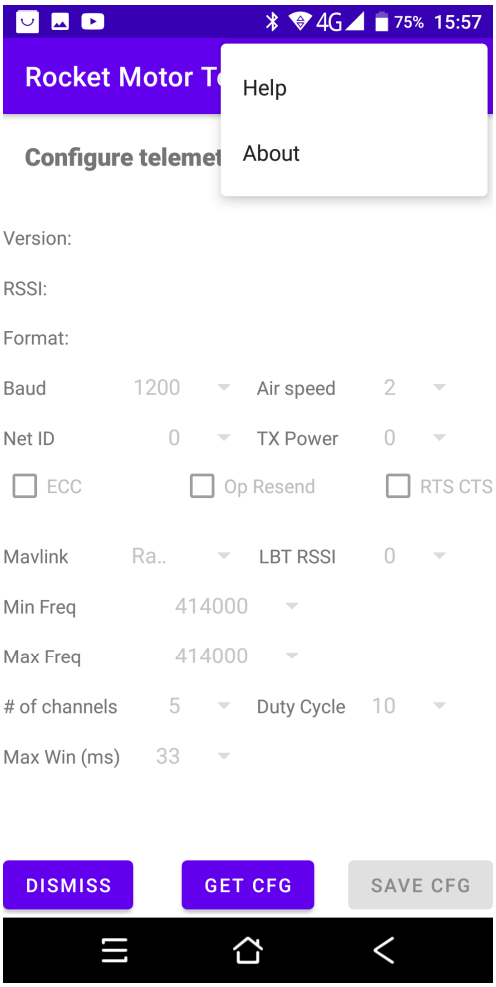


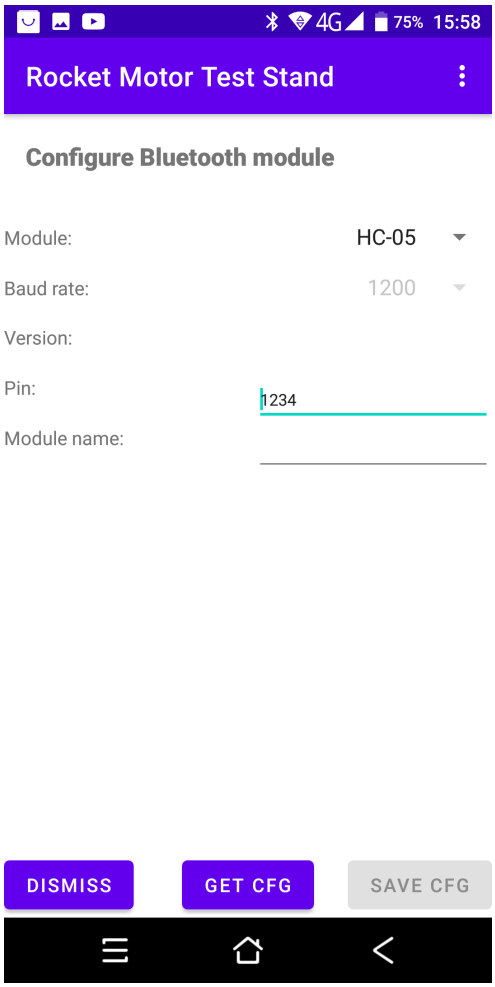


 Copyright © Boris du Reau 2012-2022

## Step 7 – Pairing the Bluetooth device

You will need to pair the test stand Bluetooth module with your Android device before you can connect to it. First make sure that your module has been setup to communicate at 38400 baud (You can configure the Bluetooth module using the app refer to previous step).

The module name used by the test Stand could be HC05, HC06 or any other flavor (You can also have a custom name if you have configured the Bluetooth module). Click on it and enter the default pairing code which is **1234**. Note that the pairing code can also be customized.

## Step 8– Configure the test Stand board

First turn on the test stand board and connect to it using the Android app and the Bluetooth module, a ttl cable or the 3DR telemetry module. Note that it is not advisable to configure the board using the 3DR module because it is not as reliable as Bluetooth or a ttl cable.

Go to the configuration menu. Select the unit, the sensor resolution (allow to record from 10 to 40 sample per second). The recording duration, the battery type and calibrate the sensor. The battery type is important so that it trigger an alarm when the battery is too low. Recommended battery is 2S.

## Step 9– Calibrate the test stand board

The board should be able to use any gauge sensor. When using a new sensor you need to calibrate it using a known weight, save the calibration and restart it.

To calibrate it do the following

- Turn the board on with a plugged sensor
- Put a known weight
- Go to the configuration section, enter the known weight in kg and click on calibrate
- When calibration is completed save the config and remove the weight.
- Restart the test stand
- Go to the status section and put a known weight, the displayed weight should be the known weight.

 Copyright © Boris du Reau 2012-2022 

**Note that if you use version 2 of the board and a pressure sensor there is no need to calibrate it. Just select the type of sensor you are using from the config.**

## Step 10 – Configure the test Stand application

From the menu you can configure the look and feel of your application. You can also change the default units.

## Step 11 – Connect the test stand with your launch controller

The recording will be triggered from your launch controler. You need to connect the launch controller to your test stand. Note that you need check the polarity when connecting them together. The launch controller ground should be connected to the ground of the test stand.

Use a jack to make sure that the polarity is correct when connecting them.

 Copyright © Boris du Reau 2012-2022 

## Step 12 – Record some thrust curve.

Plug the test stand board to the gauge sensor. The sensor will be tarred when the board is powered on so make sure that you put your motor before you switch the test stand one.

Then connect the test stand to your launch controller and turn everything on. Depending of the type of motor you are using you will have to set your recording time. Do not do less than 5 seconds.

Fire your motor. This will trigger the recording of the thrust.

## Step 13 – Manage thrust Curves

You need ne to click on retrieve thrust curves to view your thrust curves. You then click on the thrust curve to display it. By sliding to the right you will be able to display the motor spec and export the curves.

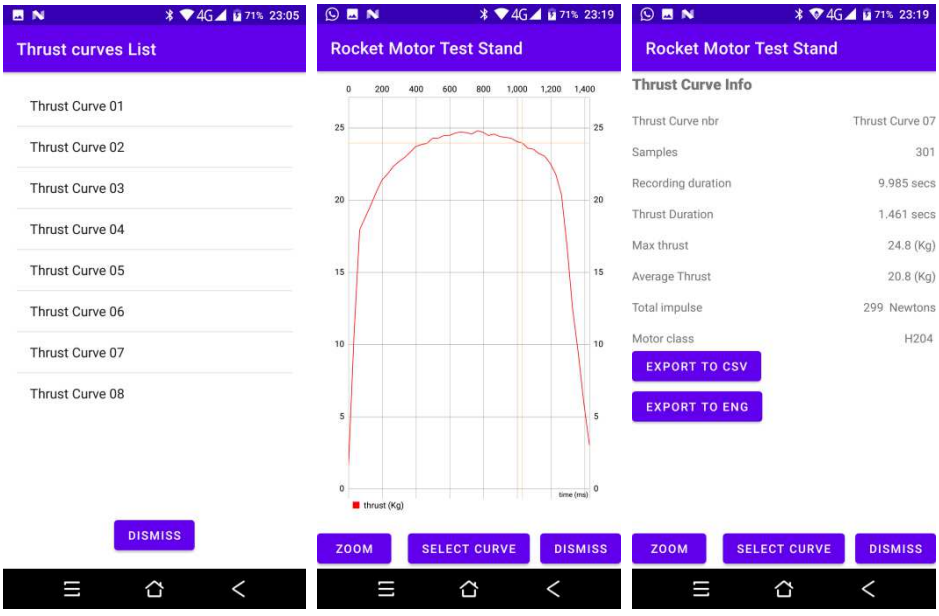


You can delete the last curve or all of them by going to the [RESET SETTINGS] section.

Note that the eeprom can store a maximum of 25 flights.

## Step 14 – Export and use thrust Curves

 Copyright © Boris du Reau 2012-2022

Each thrust curve can be exported as a CSV file so that you can plot it in Excel or can be exported as a RAST file so that you can use it with OpenRocket or Rocksim.

EXPORT TO CSV

EXPORT TO ENG

The files will be exported under the download directory.

Note that when exporting to RASP you will need to edit the file to enter the motor diameter, propellant and casing weight and casing length.

 Copyright © Boris du Reau 2012-2022

## Step 15 - Using the telemetry

If you want to have real time data you will need to use a 3DR telemetry module which is widely available and used by the drone community. You will need to replace the Bluetooth module with the 3DR module and configure the application so that it used USB rather than Bluetooth. Then click on the telemetry button from the main menu.

## Step 16 - Board status

If at any time you want to check that the sensor is properly calibrated or the memory using or the battery then you need to go to the status menu.

 Copyright © Boris du Reau 2012-2022 

## The sensors

### Gauge sensor

Any gauge sensor can be used however you will have to make sure that sensor measurement range is adequate for the motor you need to test. If the motor thrust exceed the sensor range it will break the sensor.  If the sensor is over sized the measurement will be not be as precise. It might be a good idea to use different sensor with different ranges and recalibrate the test stand.

You can find the gauges on Aliexpress or ebay

S shape gauge sensors seem to be better.

Classic gauge sensor

 Copyright © Boris du Reau 2012-2022 

## Pressure transducer (board V2 only)

A simple oil analog sensor can be used.  Make sure that you make a filter with steel wool before you use it and that you clean it with W40 after use. It might be a good idea to fill it with oil so that it does not get damaged by the corrosive gas from the motor.

Unless you are testing motors with low pressure you most likely get a sensor in the 1000psi 1600psi.

You will also need some right angle connector and a copper tube to cool the hot gases.

 Copyright © Boris du Reau 2012-2022 

# Trouble shooting

## Low battery

If you hear a buzzer alarm every 10 seconds this is because something is wrong. This could be a low battery. Check the testStand status and if the battery is low, remove it and charge it.

Make sure that you use a 2S lithium battery, those will last longer.

## Data quality issues

If you see bad recording and incorrect data it could be an issue with the eeprom. Those have limited number of write cycles and will not record properly over time.

If you see curves such as the one bellow this means that the memory is no longer good.

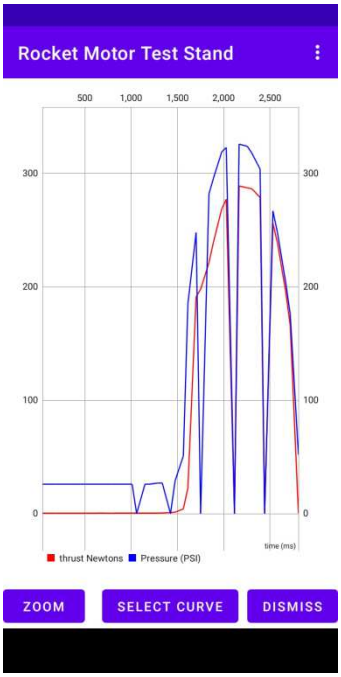


You can get new memory from ebay or aliexpress but sometime the product will not last long or the memory size will be smaller than the one advertised. It could be also that the eeprom you are using is not fast enough. Some functionality will be added in the future to the testStand to double check the eeprom.

## Pressure sensor issues (V2 board only)

Before you start any measurement make sure that the pressure is greater than 0 and less than 100 PSI. Do it by checking the status. If you have 0 PSI or a very high value that means that your pressure sensor is damaged. You might be able to clean it with some W40 and/or an air compressor. A buzzer warning will be added in the future.

 Copyright © Boris du Reau 2012-2022

## Curve not recorded or partially recorded

This could be that the memory is full. Remember that you can have a maximum of 25 curves but that number could be reduced if you have long duration recording with high resolution.

Lastly it could also be due to the memory no longer working

 Copyright © Boris du Reau 2012-2022 