ENGT 520 Standard Operation Procedure

Doc. No:

Date: Aug. 6. 2012

Revision:1.16

Page: 9 Grade:

0Rev	Modified Chapters	Modification Description	Issued Dept.	Issued by	Revised Date
1.00		First release	GRMA	Ariel_wang	May.24.2011
1.01		Add new P/N(C1CQQ5-B01)	GRMA	Ariel_wang	May.24.2011
1.02		Add new P/N(C1CQQA-A01)	GRMA	Ariel_wang	Jul.8.2011
1.03		Add new P/N(C1CQQF-A01)	GRMA	Ariel_wang	Jul.8.2011
1.04		Add new P/N(C1CRC5-A01)	GRMA	Ariel_wang	Aug.10.2011
1.05		Add new P/N(C1CQQK-A01)	GRMA	Ariel_wang	Aug.10.2011
1.06		Add new PCBA(C1CQQ0-Y01)	GRMA	Ariel_wang	Aug.10.2011
1.07		Add new P/N(YV0150-A01)	GRMA	Ariel_wang	Qct.14.2011
1.08		Add new P/N(YV0151-A01)	GRMA	Ariel_wang	Qct.25.2011
1.09		Add new P/N(YV0152-A02)	GRMA	Ariel_wang	Nov.8.2011
1.10		Add new PCBA(YV0150-A11)	GRMA	Ariel_wang	Jan.4.2012
1.11		Add new PCBA(YV0151-A13)	GRMA	Ariel_wang	Jan.4.2012
1.12		Add new P/N(YV0153-A02)	GRMA	Ariel_wang	Feb.8.2012
1.13		Add new P/N(YV0156-A02)	GRMA	Ariel_wang	Mar.6.2012
1.14		Add new PCBA(YV0153-A12)	GRMA	Ariel_wang	May.4.2012
1.15		Add new PCBA(YV0156-A12)	GRMA	Ariel_wang	Jul.31.2012
1.16		Add new PCBA(YV015A-A01)	GRMA	Ariel_wang	Aug.6.2012

Authorize by	Review by		Originator By	Ariel_wang
-----------------	-----------	--	------------------	------------

Form No: T2-009-01 Rev.01

ASUSTEK COMPUTER INC ENGT 520 Date: Aug. 6. 2012 Standard Operation Procedure Rev.: 1.16 Page: 1

1. Objectives

Create test procedure.

2.Scope

Model: ENGT 520

PN: C1CQQ0(B01&Y01)C1CQQ5(B01)C1CQQA(A01)C1CQQF(A01) C1CRC5(A01)C1CQQK(A01)YV0150(A01&A11)YV0151(A01&A13)YV0152(A01) YV0153(A02&A12) YV0156(A02&A12) YV015A(A01)

3.Test Item

- 3.1 Diagnostic test in Linux system
- 3.2 3DMark03(contain HDMI&DVI test)
- 3.3 Temperature test

4. Relevant Document

None.

5.Definition: 1. If the model name contains P, please test HDCP function.

Ex: EAH***/HTDP/512M/A

- 2. If you test HDMI already, it's unnecessary to test HDCP. The HDMI contains HDCP function.
- 3. Please use platform (P7H55-M/USB3) to test in LINUX or Windows.

Note: this model Linux system DVI Port test must use a DVI (M)-DVI(F)+VGA(F) cable to the D-SUB of LCD,thanks.(For YV0150(A01))



ASUSTEK COMPUTER INC ENGT 520 Date: Aug. 6. 2012 Standard Operation Procedure Rev.: 1.16 Page: 2

6. Operation Procedures:

6.1 Attention

- 6.1.1 To avoid damaging devices or M/B, please turn off A/C power then unplug VGA card.
- 6.1.2 While unplugging the card, do it in upright direction to avoid damaging slot & golden finger.
- 6.1.3 If any problem happens, please inform test supervisor. Base on ATX power specification, +5V standby voltage is existed while AC power is connecting. For safety reason, please turn off main power during break time or idling test.
- 6.1.4 Some test items should be tested under Windows environment. (Please install windows 7 test environment by yourself).

ENGT 520 Standard Operation Procedure Rev.: 1.16 Page: 3

Doc. No:

Date: Aug. 6. 2012

6.2 Fixture connect

6.2.1 Install Intel P5 CPU & CPU Fan.

6.2.2 Install DDR2 667/800 2GB Memory to DIMM1~4.

6.2.3 Plug PS2 Mouse and PS/2 Keyboard into P7H55-M/USB3 Motherboard.

6.2.4 Plug VGA Card ENGT 520 into PCIEX16.


6.2.5 Connect power con of VGA card & Power supply via bundled power cable.



6.2.6 Connect SATA HDD with SATA CON.



- 6.2.7 Plug 4PIN 12V (1200W) power cable into CON12V.
- 6.2.8 Plug ATX Power (1200W) on Power Connector.

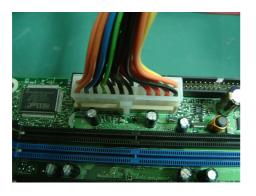


ENGT 520 Standard Operation Procedure | Rev.: 1.16 Page: 4

Doc. No: Date: Aug. 6. 2012

6.3 Diagnostic test in linux system

6.3.1Please connect LCD monitor & card's D-SUB CON via a D-SUB cable.

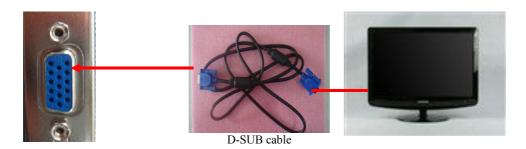

- 6.3.2 Press Power Switch then turn on power button.
- 6.3.3 Press "Del" to enter CMOS setup menu while boot screen is displaying.

EXIT -> Load Setup Defaults. Advanced Power



6.3.4 System will reboot, select linux to run test program.

Path:ENGT520\c1cqq0b0.sh or c1cqq5b0.sh or c1cqqaa0.sh or c1cqqfa0.sh or c1crc5a0.sh or c1cqqka0.sh or c1cqq0y0.sh

Path:ENGT5201\vv0150a0.sh or vv0151a0.sh or vv0152a0.sh

Path:ENGT5202\yv0150a1.sh or yv0151a1.sh or yv0153a0.sh or yv0156a0.sh or vv0153a1.sh or vv0156a1.sh or vv015aa0.sh

Run the test program refer to the prompt.

6.3.5 Memory test

If you want to test memory, please run ./mats.

Path: ENGT520\ Path:ENGT5201\

Path: ENGT5202\

6.3.6 BIOS flash

Please use the following command to flash bios and notice the size of character.

Path:ENGT520\ Path: ENGT5201\ Path:ENGT5202\

Command:./nvflash xxx.rom -4 -5 -6 -A -y

Notice:

ENGT 520 Standard Operation Procedure | Rev.: 1.16 Page: 5

Doc. No:

Date: Aug. 6. 2012

If you can not flash bios because of the bios locked, please use ./nvflash.exe /r to unlock bios. And then, please use ./nvflash.exe /w to lock bios after updating latest bios.

6.3.7 After finish linux testing, please enter Windows 7 environment to test 3DMark.


6.4 3DMark test(contain HDMI test)

- 6.4.1 Please install 3DMark program by yourself.
- 6.4.2 Please connect VGA card to LCD via HDMI cable.



HDMI CON

- 6.4.3 Please install VGA card driver in Windows(You must use individual driver of this
- 6.4.4 Please run 3DMark03 base on this card (please test 1 cycle).
- 6.4.5 Press "Select" to enter Select test menu. You can choose "GT1" for default setting.

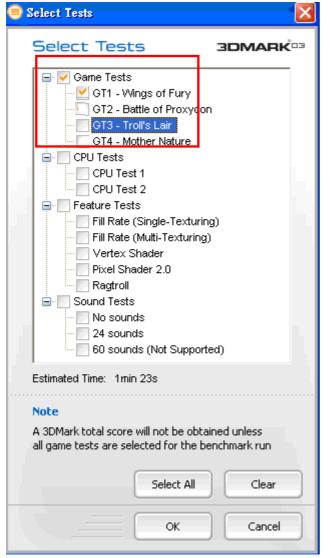


ENGT 520 Standard Operation Procedure Rev.: 1.16 Page: 6

Doc. No:

Date: Aug. 6. 2012

6.4.6 Press "Demo" to enter Demo menu. You can choose "Sounds" for default setting.

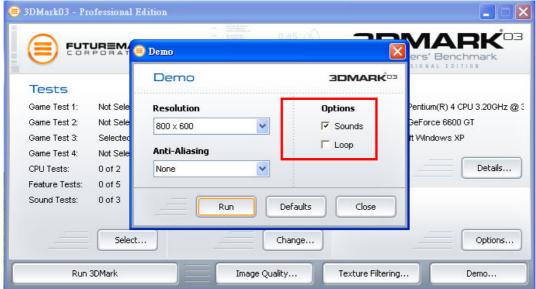

- 6.4.7 Please pay attention to check if there is flickering, discolor, crash and so on. If there's no problem, it can be judged OK!
- 6.4.8 Please listen to voice carefully to check whether it outputs sounds. If not, HDMI test fail.



6.4.9 Please connect LCD monitor & card's DVI CON via a DVI cable. (Please refer to step 6.4.4&6.4.5&6.4.6&6.4.7&6.4.8)



6. 4.10 If test OK, please test **Temperature test**.

ENGT 520 Date: Aug. 6. 2012 Standard Operation Procedure Rev.: 1.16 Page: 7


Doc. No:
Date: Aug. 6. 2012

6.5 Temperature test


- 6.5.1 Please copy Thermaltool(1.0.05) to Windows by yourself.
- 6.5.2 Please run ThermalTest.exe.



6.5.3 If test ok, show pass.

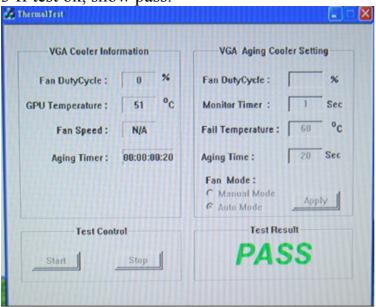

6.5.4 If test fail, show fail.

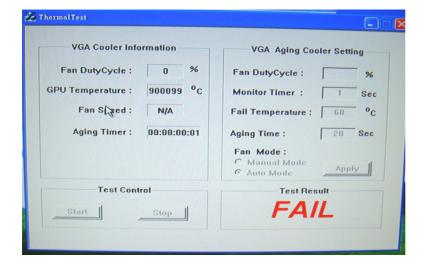

6.5.5 If test OK, NTF test.

ENGT 520 Standard Operation Procedure Rev.: 1.16 Page: 8

Doc. No:

Date: Aug. 6. 2012

7 Appendix

NO#	Equipment Description	ASUS Part#	Supplier	Quantity	Remarks
1	SAMSUNG 2232MW			1	
2	USB MOUSE			1	
3	PS/2 KEYBOARD			1	
4	ATX POWER SUPPLY(1200W)			1	
5	Intel CPU Intel(R) Core(TM)2 CPU		local	1	E1100
6	Heat sink + FAN	22-240000160	local	1	
7	DDR3 1333 2G	20-TT2605618	local	4	
8	SATA HDD			1	
9	SATA HDD Cable	14-000107070		1	
10	PCIEX16 VGA CARD			1	
11	D-SUB extend cable (Buying a local D-SUB cable by yourself)			1	
12	Dual link DVI cable (Buying a local DVI cable by yourself)			1	O
13	HDMI extend cable (Buying a local HDMI cable by yourself)			1	
14	TV extend cable (Buying a local TV cable by yourself)			1	
15	DVI-HDMI	04G460002400 /04G460002450		1	
16	LCD "Y" Cable	14-010230000		1	
17	P7H55-M/USB3	80-MIBBKA-G0*	ASUS	1	