


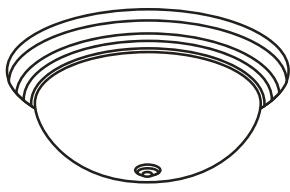

LED

PN: B3311CC15WXXXX

damp
location+ triac
dimmable

BRIGHT33™ CLASSIC LED CEILING LIGHT

INSTALLATION INSTRUCTIONS

1-800-316-2532

www.bright33.com

Please follow the following steps for installation.

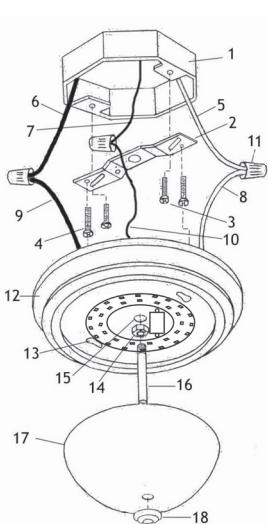


Figure 1

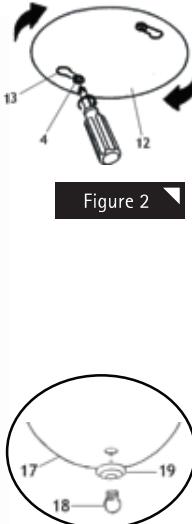


Figure 3

1. OUTLET BOX (NOT INCLUDED)
 2. MOUNTING BRACKET
 3. MOUNTING SCREW
 4. FIXTURE SCREW
 5. WHITE SUPPLY WIRE
 6. BLACK SUPPLY WIRE
 7. HOUSE GROUND WIRE
 8. WHITE FIXTURE WIRE
 9. BLACK FIXTURE WIRE
 10. FIXTURE GROUND WIRE
 11. WIRE NUTS
 12. FIXTURE PAN
 13. KEY HOLE SLOT
 14. HEX NUT
 15. BUSHING
 16. NIPPLE
 17. GLASS SHADE
 18. FINIAL KNOB
 19. CAP

5-YEAR LIMITED WARRANTY

LIMITED WARRANTY: Bright33™ Light Fixtures are warranted to be free and clear of defects in materials and workmanship for a period of five years from the date of purchase based on three hours of average usage per day for seven days a week. This warranty covers defects in manufacturing discovered while using the product as recommended by the manufacturer and does not apply to failures caused by acts of God or as a result of any abuse, misuse, abnormal use, or use in violation of any applicable standard, code, or instructions for use in installations.

If a Light Fixture fails due to a defect covered by this warranty, Stream33 Products LLC will either replace the product. To make a warranty claim, retain the failed products and send with proof of purchase, register receipt, your name and address to the following address within thirty (30) days of the failure.

Bright33 is a subsidiary of
 Stream33 Products LLC
 350 Courtney Road
 Sebring, Ohio 44672 USA



WARNINGS:



Turn power off before installation, inspection, or removal.
 Use all necessary precautions while performing this procedure.



Consult a qualified electrician to ensure correct branch circuit conductor.
 Min 90°C supply conductors.



Properly ground electrical enclosure. IT IS IMPERATIVE THAT THE OUTLET BOX BE PROPERLY GROUNDED.



DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, OTHERWISE SAFETY WILL BE COMPROMISED.



This Integrated LED Fixture™ has no lamp/bulb to replace.

GENERAL: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, contact and obtain the services of a qualified electrician. Use UL or IEC approved wire only for input/output connections.

Remove fixture and mounting components from the box, and make sure that no parts are missing, by referencing the illustration in the illustration instructions.

DIMMING: This product is compatible with most common residential type dimmers. Dimming performance will depend upon dimmer, dimmer settings (dimmers with adjustments to brightness range), wiring method, and number of LED modules. For best results, set dimmer position at maximum before adjusting to a lower light level.

1 SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!

2 Remove contents from box. Ensure that no parts are missing. Reference the illustration included with this instruction manual.

3 Before installing, preset the NIPPLE(16) length:

4 Thread the HEX NUT(14) onto the NIPPLE(16), and screw the NIPPLE(16) into the BUSHING(15) on the FIXTURE PAN(12) a minimum of four turns.

5 Place the center holes of the GLASS SHADE(17) over the NIPPLE(16) and adjust the NIPPLE(16) so that it protrudes out of the GLASS SHADE(17) or CAP(19) $\frac{1}{4}$ ". Remove the GLASS SHADE(17) and secure the NIPPLE(16) in place by tightening the HEX NUT(14).

6 Pull the SUPPLY WIRES(5 & 6) and the HOUSE GROUND WIRE(7) out from the OUTLET BOX(1) and attach the MOUNTING BRACKET(2) to the OUTLET BOX(1) using the slotted holes on the MOUNTING BRACKET(2) and the MOUNTING SCREWS(3) provided.

7 Thread the FIXTURE SCREWS(4) two full turns into the appropriate threaded holes in the MOUNTING BRACKET(2). (Check the MOUNTING BRACKET(2) against the fixture KEY HOLE SLOTS(13) to ensure proper fit.)

8 Make the following wire connections (Fig.1), using the provided WIRE NUTS(11):
 WHITE (-) SUPPLY WIRE (5) TO WHITE FIXTURE WIRE (8)
 BLACK (+) SUPPLY WIRE (6) TO BLACK FIXTURE WIRE (8)
 SUPPLY GROUND WIRE (7) TO FIXTURE GROUND WIRE (10)
 If necessary, wrap all wire connections in electrical tape to ensure a secure connection.

9 Carefully tuck all wiring back into the OUTLET BOX(1).

10 Locate the FIXTURE PAN(12) over the OUTLET BOX(1), positioning the FIXTURE SCREWS(4) heads through the large openings of the KEY HOLE SLOTS(13). Rotate the FIXTURE PAN(12) to seat the screws, and tighten securely. (See Fig. 2).

11 SHADE INSTALLATION:
(See markings and/or labels on the fixture for maximum wattages – DO NOT OVER-LAMP).
 Place the center hole of the GLASS SHADE(17) over the NIPPLE(16) and secure the GLASS SHADE(17) with the FINIAL KNOB(18) or secure the GLASS SHADE(17) and CAP(19) with the FINIAL KNOB(18) (See Fig. 3).

12 Restore power at fuse box/circuit breaker. Check operation of Integrated LED Fixture™.

13 Installation complete.