uHeartMonitor

Generated by Doxygen 1.9.8

1 Bug List	1
2 Topic Index	2
2.1 Topics	. 2
3 Data Structure Index	2
3.1 Data Structures	. 2
4 File Index	3
4.1 File List	. 3
5 Topic Documentation	4
5.1 Application Software	
5.1.1 Detailed Description	
5.1.2 Data Acquisition (DAQ)	
5.1.3 Liquid Crystal Display (LCD)	. 10
5.1.4 QRS Detector	. 17
5.2 Common	. 23
5.2.1 Detailed Description	. 24
5.2.2 Function Documentation	. 24
5.2.3 FIFO Buffers	. 24
5.2.4 NewAssert	. 30
5.3 Device Drivers	. 30
5.3.1 Detailed Description	. 31
5.3.2 Analog-to-Digital Conversion (ADC)	
5.3.3 General-Purpose Input/Output (GPIO)	
5.3.4 Phase-Locked Loop (PLL)	
5.3.5 Serial Peripheral Interface (SPI)	
5.3.6 System Tick (SysTick)	
5.3.7 Timer	
5.3.8 Universal Asynchronous Receiver/Transmitter (UART)	
5.3.9 Interrupt Service Routines	
5.4 Middleware	
5.4.1 Detailed Description	. 56
5.4.2 Debug	. 56
5.4.3 ILI9341	. 59
5.4.4 LED	. 70
5.5 Main	. 73
5.5.1 Detailed Description	. 74
5.5.2 Enumeration Type Documentation	. 74
5.5.3 Function Documentation	. 75
6 Data Structure Documentation	79
6.1 Fifo it Struct Reference	. 79
V. L. DOV. L. OHUGE LIGHTED CO	. , , , ,

	6.2 GpioPort_t Struct Reference	80
	6.3 Led_t Struct Reference	80
	6.4 Timer_t Struct Reference	81
	6.5 Uart_t Struct Reference	81
7 F	ile Documentation	81
	7.1 DAQ.c File Reference	81
	7.1.1 Detailed Description	83
	7.2 DAQ.h File Reference	83
	7.2.1 Detailed Description	84
	7.3 DAQ_lookup.c File Reference	84
	7.3.1 Detailed Description	85
	7.4 LCD.c File Reference	85
	7.4.1 Detailed Description	87
	7.5 LCD.h File Reference	87
	7.5.1 Detailed Description	89
	7.6 QRS.c File Reference	89
	7.6.1 Detailed Description	91
	7.7 QRS.h File Reference	92
	7.7.1 Detailed Description	93
	7.8 Fifo.c File Reference	93
	7.8.1 Detailed Description	94
	7.9 Fifo.h File Reference	95
	7.9.1 Detailed Description	96
	7.10 NewAssert.c File Reference	96
	7.10.1 Detailed Description	97
	7.11 NewAssert.h File Reference	97
	7.11.1 Detailed Description	98
	7.12 ADC.c File Reference	98
	7.12.1 Detailed Description	99
	7.13 ADC.h File Reference	99
	7.13.1 Detailed Description	99
	7.14 GPIO.c File Reference	100
	7.14.1 Detailed Description	102
	7.14.2 Function Documentation	102
	7.14.3 Variable Documentation	110
	7.15 GPIO.h File Reference	110
	7.15.1 Detailed Description	113
	7.15.2 Function Documentation	113
	7.16 ISR.c File Reference	119
	7.16.1 Detailed Description	120
	7 17 ISB h File Reference	121

1 Bug List

Index		145
	7.33.1 Detailed Description	144
	Led.h File Reference	
	7.32.1 Detailed Description	
	Led.c File Reference	
	7.31.1 Detailed Description	
	ILI9341.h File Reference	
	7.30.1 Detailed Description	
	ILI9341.c File Reference	
	7.29.1 Detailed Description	
	Debug.h File Reference	
	7.28.1 Detailed Description	
	main.c File Reference	
	7.27.1 Detailed Description	
	UART.h File Reference	
	7.26.1 Detailed Description	
7.26	UART.c File Reference	132
	7.25.1 Detailed Description	131
	Timer.h File Reference	
	7.24.1 Detailed Description	
7.24	Timer.c File Reference	128
	7.23.1 Detailed Description	128
7.23	SysTick.h File Reference	127
	7.22.1 Detailed Description	127
7.22	SysTick.c File Reference	126
	7.21.1 Detailed Description	126
7.21	SPI.h File Reference	125
	7.20.1 Detailed Description	125
7.20	SPI.c File Reference	123
	7.19.1 Detailed Description	123
7.19	PLL.h File Reference	123
	7.18.1 Detailed Description	122
7.18	PLL.c File Reference	122
	7.17.1 Detailed Description	122

1 Bug List

Global FIFO_Get (volatile Fifo_t fifo)

To use floats (AKA float32_t), type-punning is necessary.

Global FIFO_Put (volatile Fifo_t fifo, const uint32_t val)

To use floats (AKA $float32_t$), type-punning is necessary.

2 Topic Index

2.1 Topics

Here is a list of all topics with brief descriptions:

ΑĮ	oplication Software	4
	Data Acquisition (DAQ)	5
	Liquid Crystal Display (LCD)	10
	QRS Detector	17
C	ommon	23
	FIFO Buffers	24
	NewAssert	30
De	evice Drivers	30
	Analog-to-Digital Conversion (ADC)	32
	General-Purpose Input/Output (GPIO)	33
	Phase-Locked Loop (PLL)	33
	Serial Peripheral Interface (SPI)	34
	System Tick (SysTick)	37
	Timer	38
	Universal Asynchronous Receiver/Transmitter (UART)	47
	Interrupt Service Routines	51
М	iddleware	55
	Debug	56
	IL19341	59
	LED	70
M	ain	73

3 Data Structure Index

3.1 Data Structures

Here are the data structures with brief descriptions:

Fifo_t	79
GpioPort_t	80

4 File Index 3

Led_t	80
Timer_t	81
Uart_t	81
4 File Index	
4.1 File List	
Here is a list of all documented files with brief descriptions:	
DAQ.c Source code for DAQ module	81
DAQ.h Application software for handling data acquision (DAQ) functions	83
DAQ_lookup.c Source code for DAQ module's lookup table	84
LCD.c Source code for LCD module	85
LCD.h Header file for LCD module	87
QRS.c Source code for QRS detection module	89
QRS.h Header file for QRS detection module	92
Fifo.c Source code for FIFO buffer module	93
Fifo.h Header file for FIFO buffer implementation	95
NewAssert.c Source code for custom assert implementation	96
NewAssert.h Header file for custom assert implementation	97
ADC.c Source code ffor analog-to-digital conversion (ADC) module	98
ADC.h Header file for analog-to-digital conversion (ADC) module	99
GPIO.c Source code for GPIO module	100
GPIO.h Header file for general-purpose input/output (GPIO) device driver	110


Source code for interrupt service routine (ISR) configuration module	119
ISR.h	
Header file for interrupt service routine (ISR) configuration module	121
PLL.c Implementation details for phase-lock-loop (PLL) functions	122
	122
PLL.h Driver module for activating the phase-locked-loop (PLL)	123
SPI.c	
Source code for serial peripheral interface (SPI) module	123
SPI.h	405
Header file for serial peripheral interface (SPI) module	125
SysTick.c Implementation details for SysTick functions	126
SysTick.h	107
Driver module for using SysTick-based timing and/or interrupts	127
Timer.c Source code for Timer module	128
Timer.h Device driver for general-purpose timer modules	130
	130
Source code for UART module	132
UART.h	400
Driver module for serial communication via UART0 and UART 1	133
main.c Main program file	135
Debug.h	400
Functions to output debugging information to a serial port via UART	136
ILI9341.c Source code for ILI9341 module	138
ILI9341.h	
Driver module for interfacing with an ILI9341 LCD driver	139
Led.c	
Source code for LED module	142
Led.h	140
Interface for LED module	143

5 Topic Documentation

5.1 Application Software

Application-specific software modules.

Collaboration diagram for Application Software:

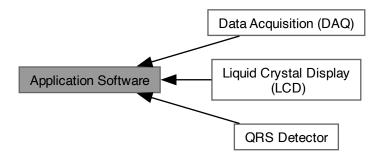

Modules

- Data Acquisition (DAQ)
- Liquid Crystal Display (LCD)
- QRS Detector

5.1.1 Detailed Description

Application-specific software modules.

These modules contain functions built specifically for this project's purposes.

5.1.2 Data Acquisition (DAQ)

Collaboration diagram for Data Acquisition (DAQ):



Files

• file DAQ.c

Source code for DAQ module.

• file DAQ.h

Application software for handling data acquision (DAQ) functions.

• file DAQ_lookup.c

Source code for DAQ module's lookup table.

Macros

#define SAMPLING_PERIOD_MS 5

sampling period in ms ($T_s = 1/f_s$)

- #define DAQ_LOOKUP_MAX ((float32_t) 5.5f)
- #define DAQ_LOOKUP_MIN ((float32_t) (-5.5f))

Variables

static const float32 t DAQ LOOKUP_TABLE [4096]

Lookup table for converting ADC data from unsigned 12-bit integer values to 32-bit floating point values.

Digital Filters

• enum {

NUM_STAGES_NOTCH = 6, NUM_COEFFS_NOTCH = NUM_STAGES_NOTCH * 5, STATE_BUFF_ \hookleftarrow SIZE_NOTCH = NUM_STAGES_NOTCH * 4, NUM_STAGES_BANDPASS = 4, NUM_COEFFS_DAQ_BANDPASS = NUM_STAGES_BANDPASS * 5, STATE_BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4}

- typedef arm biquad casd df1 inst f32 Filter_t
- static const float32 t COEFFS NOTCH [NUM COEFFS NOTCH]
- static const float32_t COEFFS_BANDPASS [NUM_COEFFS_DAQ_BANDPASS]
- static float32_t stateBuffer_Notch [STATE_BUFF_SIZE_NOTCH]
- static const Filter_t notchFiltStruct = { NUM_STAGES_NOTCH, stateBuffer_Notch, COEFFS_NOTCH }
- static const Filter_t *const notchFilter = ¬chFiltStruct
- static float32_t **stateBuffer_Bandpass** [STATE_BUFF_SIZE_BANDPASS]
- static const Filter_t bandpassFiltStruct
- static const Filter_t *const bandpassFilter = &bandpassFiltStruct

Initialization

void DAQ_Init (void)

Initialize the data acquisition (DAQ) module.

Reading Input Data

uint16_t DAQ_readSample (void)

Read a sample from the ADC.

void DAQ_acknowledgeInterrupt (void)

Acknowledge the ADC interrupt.

float32_t DAQ_convertToMilliVolts (uint16_t sample)

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

Digital Filtering Functions

float32_t DAQ_NotchFilter (volatile float32_t xn)

Apply a 60 [Hz] notch filter to an input sample.

• float32_t DAQ_BandpassFilter (volatile float32_t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

5.1.2.1 Detailed Description

Module for managing data acquisition (DAQ) functions.

5.1.2.2 Function Documentation

DAQ_Init()

```
void DAQ_Init (
     void )
```

Initialize the data acquisition (DAQ) module.

Postcondition

The ADC and Timer are initialized, and the DAQ module has access to its lookup table (LUT).

DAQ_readSample()

Read a sample from the ADC.

Precondition

Initialize the DAQ module.

This should be used in an interrupt handler and/or at a consistent rate (i.e. the sampling frequency).

Parameters

```
out sample 12-bit sample in range [0x000, 0xFFF]
```

Postcondition

The sample can now be converted to millivolts.

See also

DAQ_convertToMilliVolts()

DAQ_NotchFilter()

```
float32_t DAQ_NotchFilter ( volatile \ float32\_t \ \textit{xn} \ )
```

Apply a 60 [Hz] notch filter to an input sample.

Precondition

Read a sample from the ADC and convert it to millivolts.

Parameters

in	xn	Raw input sample
out	yn	Filtered output sample

Postcondition

y[n] is ready for analysis and/or further processing.

See also

DAQ_BandpassFilter()

DAQ_BandpassFilter()

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

Precondition

Read a sample from the ADC and convert it to millivolts.

Parameters

in	xn	Input sample
out	yn	Filtered output sample

Postcondition

y[n] is ready for analysis and/or further processing.

See also

DAQ_NotchFilter()

DAQ_convertToMilliVolts()

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

Precondition

Read a sample from the ADC.

Parameters

in	sample	12-bit sample in range [0x000, 0xFFF]
out	xn	Voltage value in range $[-5.5, 5.5)[mV]$

Postcondition

The sample x[n] is ready for filtering.

See also

DAQ_readSample()

5.1.2.3 Variable Documentation

COEFFS_NOTCH

```
const float32_t COEFFS_NOTCH[NUM_COEFFS_NOTCH] [static]
```

Initial value:

```
0.8856732845306396f, 0.5476464033126831f, 0.8856732845306396f,
-0.5850160717964172f, -0.9409302473068237f,

1.0f, 0.6183391213417053f, 1.0f,
-0.615153431892395f, -0.9412328004837036f,

1.0f, 0.6183391213417053f, 1.0f,
-0.5631667971611023f, -0.9562366008758545f,

1.0f, 0.6183391213417053f, 1.0f,
-0.6460562348365784f, -0.9568508863449097f,

1.0f, 0.6183391213417053f, 1.0f,
-0.5554963946342468f, -0.9837208390235901f,

1.0f, 0.6183391213417053f, 1.0f,
-0.6700929999351501f, -0.9840363264083862f,
}
```

COEFFS_BANDPASS

```
const float32_t COEFFS_BANDPASS[NUM_COEFFS_DAQ_BANDPASS] [static]
```

Initial value:

```
0.3240305185317993f, 0.3665695786476135f, 0.3240305185317993f, -0.20968256890773773f, -0.1729172021150589f,

1.0f, -0.4715292155742645f, 1.0f, 0.5868059992790222f, -0.7193671464920044f,

1.0f, -1.9999638795852661f, 1.0f, 1.9863483905792236f, -0.986438512802124f,

1.0f, -1.9997893571853638f, 1.0f, 1.994096040725708f, -0.9943605065345764f,
```

bandpassFiltStruct

5.1.3 Liquid Crystal Display (LCD)

Collaboration diagram for Liquid Crystal Display (LCD):



Files

• file LCD.c

Source code for LCD module.

• file LCD.h

Header file for LCD module.

Macros

• #define CONVERT_INT_TO_ASCII(X) ((unsigned char) (X + 0x30))

Functions

- static void LCD_drawLine (uint16_t center, uint16_t lineWidth, bool is_horizontal) Helper function for drawing straight lines.
- static void LCD_updateCursor (void)

Update the cursor for after writing text on the display.

• static void LCD_plotSample (uint16_t x, uint16_t y, LCD_Color_t color)

Plot a sample at coordinates (x, y).

Variables

```
• struct {
        uint16_t x1
           starting x-value in range [0, x2]
        uint16 t x2
           ending x-value in range [0, NUM_ROWS)
        uint16 t y1
           starting y-value in range [0, y2]
        uint16_t y2
           ending x-value in range [0, NUM_COLS)
        uint16 t lineNum
        uint16 t colNum
        uint8_t R_val
          5 or 6-bit R value
        uint8_t G_val
           6-bit G value
        uint8 t B val
           5 or 6-bit B value
        bool islnit
          if true, LCD has been initialized
      \}  lcd = \{ 0 \}
    • const uint8_t *const FONT_ARRAY [128]
Init./Config. Functions

    enum { LCD_X_MAX = ILI9341_NUM_ROWS - 1 , LCD_Y_MAX = ILI9341_NUM_COLS - 1 }

    • enum LCD Color t {
      LCD\_BLACK = \sim (0x00) \& 0x07, LCD\_RED = \sim (0x04) \& 0x07, LCD\_GREEN = \sim (0x02) \& 0x07, LCD\_\leftarrow (0x02) \& 0x07
      BLUE = \sim(0x01) & 0x07,
      LCD YELLOW = \sim (0x06) \& 0x07, LCD CYAN = \sim (0x03) \& 0x07, LCD PURPLE = \sim (0x05) \& 0x07,
      LCD_WHITE = \sim(0x07) & 0x07 }

    void LCD_Init (void)

          Initialize the LCD.

    void LCD_setOutputMode (bool isOn)

          Toggle display output ON or OFF (OFF by default).
    void LCD_setX (uint16_t x1, uint16_t x2)
          Set new x-coordinates to be written to. 0 <= x1 <= x2 <= X_{MAX}.
    void LCD_setY (uint16_t y1, uint16_t y2)
          Set new y-coordinates to be written to. 0 \le y1 \le y2 \le Y_{MAX}.

    void LCD_setColor (LCD_Color_t color)

          Set the color value.
Writing Functions
    enum { HEIGHT_CHAR = 8, LEN_CHAR = 5, NUM_LINES = 30, NUM_COLS = 64 }

    void LCD setCursor (uint16 t lineNum, uint16 t colNum)

          Set the cursor to line x, column y.
```

```
    void LCD_writeChar (unsigned char inputChar)

    void LCD_writeStr (void *asciiString)

    void LCD_writeInt (int32 t num)

    void LCD_writeFloat (float num)
```

Drawing Functions

```
• void LCD_Draw (void)
```

Draw on the LCD.

void LCD_Fill (void)

Fill the display with a single color.

• void LCD_drawHoriLine (uint16_t yCenter, uint16_t lineWidth)

Draw a horizontal line across the entire display.

void LCD_drawVertLine (uint16_t xCenter, uint16_t lineWidth)

Draw a vertical line across the entire display.

• void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool isFilled)

Draw a rectangle of size $dx \times dy$ onto the display. The bottom-left corner will be located at (x1, y1).

5.1.3.1 Detailed Description

Module for displaying graphs on an LCD via the ILI9341 module.

5.1.3.2 Function Documentation

LCD_drawLine()

Helper function for drawing straight lines.

Parameters

center	Row or column that the line is centered on. center is increased or decreased if the line to be written would have gone out of bounds.	
lineWidth	neWidth Width of the line. Should be a positive, odd number.	
is_row true for horizontal line, false for vertical line		

LCD_Init()

```
void LCD_Init (
     void )
```

Initialize the LCD.

Postcondition

The display will be ready to accept commands, but output will be off.

LCD_setOutputMode()

```
void LCD_setOutputMode ( bool \ isOn \ )
```

Toggle display output \mathtt{ON} or \mathtt{OFF} (\mathtt{OFF} by default).

Parameters

ſ	in	isOn	true to turn display output ON, false to turn OFF
---	----	------	---

Postcondition

When OFF, the display is cleared. When ON, the IC writes pixel data from its memory to the display.

LCD_setX()

Set new x-coordinates to be written to. $0 \le x1 \le x2 \le X_{MAX}$.

Parameters

in	x1	left-most x-coordinate
in	x2	right-most x-coordinate

See also

```
LCD_setY()
```

LCD_setY()

```
void LCD_setY ( \label{eq:local_local_problem} \mbox{uint16\_t } y1, \\ \mbox{uint16\_t } y2 \mbox{ )}
```

Set new y-coordinates to be written to. $0 <= y1 <= y2 <= Y_{MAX}$.

Parameters

in	y1	lowest y-coordinate
in	y2	highest y-coordinate

See also

```
LCD_setX()
```

LCD_setColor()

Set the color value.

Parameters

```
in color Color to use.
```

Postcondition

Outgoing pixel data will use the selected color.

LCD_Draw()

```
void LCD_Draw (
     void )
```

Draw on the LCD.

Precondition

Set the drawable area and the color to use for that area.

Postcondition

The selected areas of the display will be drawn onto with the selected color.

See also

```
LCD_setX(), LCD_setY(), LCD_setColor()
```

LCD_Fill()

```
void LCD_Fill (
     void )
```

Fill the display with a single color.

Precondition

Select the desired color to fill the display with.

See also

LCD_setColor()

LCD_drawHoriLine()

Draw a horizontal line across the entire display.

Precondition

Select the desired color to use for the line.

Parameters

in	yCenter	y-coordinate to center the line on
in	lineWidth	width of the line; should be a positive, odd number

See also

LCD_drawVertLine, LCD_drawRectangle()

LCD_drawVertLine()

Draw a vertical line across the entire display.

Precondition

Select the desired color to use for the line.

Parameters

in	xCenter	x-coordinate to center the line on
in	lineWidth	width of the line; should be a positive, odd number

See also

LCD_drawHoriLine, LCD_drawRectangle()

LCD_drawRectangle()

```
void LCD_drawRectangle ( \label{eq:lcd_lcd} \mbox{uint16\_t } x1, \\ \mbox{uint16\_t } dx, \\
```

```
uint16_t y1,
uint16_t dy,
bool isFilled )
```

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

Precondition

Select the desired color to use for the rectangle.

Parameters

in	x1	lowest (left-most) x-coordinate
in	dx	length (horizontal distance) of the rectangle
in	y1	lowest (bottom-most) y-coordinate
in	dy	height (vertical distance) of the rectangle
in	isFilled	true to fill the rectangle, false to leave it unfilled

See also

LCD_Draw(), LCD_Fill(), LCD_drawHoriLine(), LCD_drawVertLine()

LCD_plotSample()

Plot a sample at coordinates (x, y).

Parameters

in	X	x-coordinate (i.e. sample number) in range [0, X_MAX]
in	У	y-coordinate (i.e. amplitude) in range [0, Y_MAX]
in	color	Color to use

See also

LCD_setX(), LCD_setY(), LCD_setColor(), LCD_Draw()

LCD_setCursor()

Set the cursor to line x, column y.

Parameters

in	lineNum	Line number to place characters. Should be in range [0, 30).
in	colNum	Column number to place characters. Should be in range [0,	64).

5.1.4 QRS Detector

Collaboration diagram for QRS Detector:



Files

• file QRS.c

Source code for QRS detection module.

• file QRS.h

Header file for QRS detection module.

Macros

- #define QRS_NUM_FID_MARKS 40
- #define FLOAT_COMPARE_TOLERANCE (float32 t)(1E-5f)
- #define IS_GREATER(X, Y) (bool) ((X Y) > FLOAT_COMPARE_TOLERANCE)
- #define IS_PEAK(X_MINUS_1, X, X_PLUS_1) (bool) (IS_GREATER(X, X_MINUS_1) && IS_GREATER(X, X_PLUS_1))
- #define QRS_SAMP_FREQ ((uint32_t) 200)
- #define QRS SAMP PERIOD SEC ((float32 t) 0.005f)
- #define QRS_NUM_SAMP ((uint16_t) (1 << 11))

Variables

```
    struct {
        bool isCalibrated
        float32_t signalLevel
            estimated signal level
        float32_t noiseLevel
            estimated noise level
        float32_t threshold
            amplitude threshold
        uint16_t fidMarkArray [QRS_NUM_FID_MARKS]
        float32_t utilityBuffer1 [QRS_NUM_FID_MARKS]
            array to hold fidMark indices
        float32_t utilityBuffer2 [QRS_NUM_FID_MARKS]
    } Detector = { false, 0.0f, 0.0f, 0.0f, { 0 }, { 0 }, { 0 }}
```

Digital Filters

enum {

```
NUM_STAGES_BANDPASS = 4 , NUM_COEFF_HIGHPASS = NUM_STAGES_BANDPASS * 5 , STATE ← BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4 , NUM_COEFF_DERFILT = 5 , BLOCK_SIZE_DERFILT = 1 , STATE_BUFF_SIZE_DERFILT = NUM_COEFF_DERFILT + BLOCK_SIZE ← DERFILT - 1 , BLOCK_SIZE_MOVAVG = 1 , NUM_COEFF_MOVAVG = 10 , STATE_BUFF_SIZE_MOVAVG = NUM_COEFF_MOVAVG + BLOCK_SIZE_MOVAVG - 1 }
```

- typedef arm_biquad_casd_df1_inst_f32 IIR_Filt_t
- typedef arm fir instance f32 FIR Filt t
- static const float32 t COEFF BANDPASS [NUM COEFF HIGHPASS]
- static const float32_t COEFF_DERFILT [NUM_COEFF_DERFILT]
- static const float32 t COEFF MOVAVG [NUM COEFF MOVAVG]
- static float32 t stateBuffer bandPass [STATE BUFF SIZE BANDPASS] = { 0 }
- static const IIR_Filt_t bandpassFiltStruct = { NUM_STAGES_BANDPASS, stateBuffer_bandPass, COEFF
 BANDPASS }
- static const IIR_Filt_t *const bandpassFilter = &bandpassFiltStruct
- static float32_t stateBuffer_DerFilt [STATE_BUFF_SIZE_DERFILT] = { 0 }
- static const FIR_Filt_t derivativeFiltStruct = { NUM_COEFF_DERFILT, stateBuffer_DerFilt, COEFF_←
 DERFILT }
- static const FIR Filt t *const derivativeFilter = &derivativeFiltStruct
- static float32 t stateBuffer MovingAvg [STATE BUFF SIZE MOVAVG] = { 0 }
- static const FIR_Filt_t movingAvgFiltStruct = { NUM_COEFF_MOVAVG, stateBuffer_MovingAvg, COEFF
 _MOVAVG }
- static const FIR_Filt_t *const movingAverageFilter = &movingAvgFiltStruct

Implementation-specific Functions

- static uint8_t QRS_findFiducialMarks (const float32_t yn[], uint16_t fidMarkArray[])
 - Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").
- static void QRS initLevels (const float32 t yn[], float32 t *sigLvIPtr, float32 t *noiseLvIPtr)

Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.

- static float32_t QRS_updateLevel (const float32_t peakAmplitude, float32_t level)
 - Update the signal level (if a fiducial mark is a confirmed peak) or the noise level (if a fiducial mark is rejected).
- static float32_t QRS_updateThreshold (const float32_t signalLevel, const float32_t noiseLevel)

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

Interface Functions

void QRS_Init (void)

Initialize the QRS detector.

void QRS_Preprocess (const float32_t xn[], float32_t yn[])

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

float32 t QRS applyDecisionRules (const float32 t yn[])

Calculate the average heart rate (HR) using predetermined decision rules.

float32_t QRS_runDetection (const float32_t xn[], float32_t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

5.1.4.1 Detailed Description

Module for analyzing ECG data to determine heart rate.

5.1.4.2 Function Documentation

QRS_findFiducialMarks()

Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").

Parameters

in	yn	Array containing the preprocessed ECG signal $y[n]$
in	fidMarkArray	Array to place the fiducial mark's sample indices into.
out	numMarks	Number of identified fiducial marks

Postcondition

fidMarkArray will hold the values of the fiducial marks.

The fiducial marks must be spaced apart by at least 200 [ms] (40 samples @ fs = 200 [Hz]). If a peak is found within this range, the one with the largest amplitude is taken to be the correct peak and the other is ignored.

QRS_initLevels()

Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.

Parameters

in	yn	Array containing the preprocessed ECG signal $y[n]$
in	sigLvlPtr	Pointer to variable holding the signal level value.
in	noiseLvIPtr	Pointer to variable holding the noise level value.

Postcondition

The signal and noise levels are initialized.

QRS_updateLevel()

Update the signal level (if a fiducial mark is a confirmed peak) or the noise level (if a fiducial mark is rejected).

Parameters

in	pea	kAmplitude	Amplitude of the fiducial mark in signal $y[n]$
in	leve	1	The current value of the signal level or noise level
ou	it newLevel		The updated value of the signal level or noise level

```
signalLevel_1 = f(peakAmplitude, signalLevel_0) = \frac{1}{8}peakAmplitude + \frac{7}{8}signalLevel_0 noiseLevel_1 = f(peakAmplitude, noiseLevel_0) = \frac{1}{8}peakAmplitude + \frac{7}{8}noiseLevel_0
```

QRS_updateThreshold()

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

Parameters

in	signalLevel	Current signal level.
in	noiseLevel	Current noise level.
out	threshold	New threshold to use for next comparison.

See also

QRS_updateLevel(), QRS_applyDecisionRules

```
threshold = f(signalLevel, noiseLevel) = noiseLevel + 0.25(signalLevel - noiseLevel)
```

QRS_Init()

```
void QRS_Init (
     void )
```

Initialize the QRS detector.

Warning

This function isn't necessary anymore, but I'm keeping it here just in case.

This function originally initialized the filter structs but now does nothing since those have been made const and their initialization functions have been removed entirely.

QRS_Preprocess()

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

Precondition

Fill input buffer xn with raw or lightly preprocessed ECG data.

Parameters

in	xn	Array of raw ECG signal values.
in	yn	Array used to store preprocessed ECG signal values.


Postcondition

The preprocessed signal data y[n] is stored in yn and is ready to be analyzed to calculate the heart rate in [bpm].

See also

QRS_applyDecisionRules()

This function uses the same overall preprocessing pipeline as the original Pan-Tompkins algorithm, but the high-pass and low-pass filters have been replaced with ones generated using Scipy.



QRS_applyDecisionRules()

```
float32_t QRS_applyDecisionRules ( {\tt const\ float32\_t\ yn[]\ )}
```

Calculate the average heart rate (HR) using predetermined decision rules.

Precondition

Preprocess the raw ECG data.

Parameters

in	yn	Array of preprocessed ECG signal values.	
out	heartRate	Average heart rate in [bpm].	

Postcondition

Certain information (signal/noise levels, thresholds, etc.) is retained between calls and used to improve further detection.

Warning

The current implementation only processes one block at a time and discards the data immediately after, so peaks that are cut off between one block and another might not be being counted.

See also

QRS_Preprocess()

QRS_runDetection()

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

This function simply combines the preprocessing and decision rules functions into a single function.

Parameters

in	xn	Array of raw ECG signal values.
in	yn Array used to hold preprocessed ECG signa	
out	heartRate	Average heart rate in [bpm].

Postcondition

yn will contain the preprocessed data.

Certain information (signal/noise levels, thresholds, etc.) is retained between calls.

See also

QRS Preprocess(), QRS applyDecisionRules()

5.1.4.3 Variable Documentation

COEFF_BANDPASS

```
const float32_t COEFF_BANDPASS[NUM_COEFF_HIGHPASS] [static]

Initial value:
= {
      0.002937758108600974f, 0.005875516217201948f, 0.002937758108600974f,
      1.0485996007919312f, -0.2961403429508209f,

      1.0f, 2.0f, 1.0f,
      1.3876197338104248f, -0.492422878742218f,

      1.0f, -2.0f, 1.0f,
      1.3209134340286255f, -0.6327387690544128f,

      1.0f, -2.0f, 1.0f,
      1.6299355030059814f, -0.7530401945114136f,
```

5.2 Common 23

COEFF_DERFILT

```
const float32_t COEFF_DERFILT[NUM_COEFF_DERFILT] [static]

Initial value:
= {
     -0.125f, -0.25f, 0.0f, 0.25f, 0.125f
}
```

COEFF_MOVAVG


```
const float32_t COEFF_MOVAVG[NUM_COEFF_MOVAVG] [static]
```

Initial value:

```
{
    0.10000000149011612f, 0.10000000149011612f, 0.10000000149011612f,
    0.10000000149011612f, 0.10000000149011612f, 0.10000000149011612f,
    0.10000000149011612f, 0.10000000149011612f, 0.10000000149011612f,
}
```

5.2 Common

Collaboration diagram for Common:

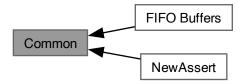

Modules

- FIFO Buffers
- NewAssert

Files

• file NewAssert.c

Source code for custom assert implementation.

· file NewAssert.h

Header file for custom assert implementation.

Functions

· void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

5.2.1 Detailed Description

Modules that are used by multiple layers and/or don't fit into any one layer.

5.2.2 Function Documentation

Assert()

```
void Assert (
          bool condition )
```

Custom assert implementation that is more lightweight than the one from newlib.

Parameters

Postcondition

```
If condition == true, the function simply returns.
If condition == false, a breakpoint is initiated.
```

5.2.3 FIFO Buffers

Collaboration diagram for FIFO Buffers:



Files

• file Fifo.c

Source code for FIFO buffer module.

• file Fifo.h

Header file for FIFO buffer implementation.

Data Structures

struct Fifo_t

5.2 Common 25

Macros

#define FIFO_POOL_SIZE 5

Functions

Fifo_t FIFO_Init (volatile uint32_t buffer[], const uint32_t N)
 Initialize a FIFO buffer of length N.

Variables

```
    static FifoStruct_t fifoPool [FIFO_POOL_SIZE] = { 0 }
        pre-allocated pool
```

• static uint8_t numFreeFifos = FIFO_POOL_SIZE

Basic Operations

void FIFO_Put (volatile Fifo_t fifo, const uint32_t val)

Add a value to the end of the buffer.

• uint32_t FIFO_Get (volatile Fifo_t fifo)

Remove the first value of the buffer.

void FIFO_TransferOne (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer a value from one FIFO buffer to another.

Bulk Removal

• void FIFO_Flush (volatile Fifo_t fifo, uint32_t outputBuffer[])

Empty the FIFO buffer's contents into an array.

• void FIFO_Reset (volatile Fifo_t fifo)

Reset the FIFO buffer.

void FIFO_TransferAll (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer the contents of one FIFO buffer to another.

Peeking

uint32_t FIFO_PeekOne (volatile Fifo_t fifo)

See the first element in the FIFO without removing it.

void FIFO_PeekAll (volatile Fifo_t fifo, uint32_t outputBuffer[])

See the FIFO buffer's contents without removing them.

Status Checks

bool FIFO_isFull (volatile Fifo_t fifo)

Check if the FIFO buffer is full.

bool FIFO_isEmpty (volatile Fifo_t fifo)

Check if the FIFO buffer is empty.

• uint32_t FIFO_getCurrSize (volatile Fifo_t fifo)

Get the current size of the FIFO buffer.

5.2.3.1 Detailed Description

Module for using the "first-in first-out (FIFO) buffer" data structure.

5.2.3.2 Function Documentation

FIFO_Init()

Initialize a FIFO buffer of length N.

Parameters

in	in buffer Array of size N to be used as FIFO buff		
in N		Length of buffer. Usable length is ${\tt N}-{\tt 1}.$	
out fifo pointer to the FIFO buffe		pointer to the FIFO buffer	

Postcondition

The number of available FIFO buffers is reduced by 1.

TODO: Add details

FIFO_Put()

Add a value to the end of the buffer.

Parameters

Ī	in	fifo	Pointer to FIFO object
ſ	in	val	Value to add to the buffer.

Postcondition

If the FIFO is not full, val is placed in the buffer. If the FIFO is full, nothing happens.

Bug To use floats (AKA float32_t), type-punning is necessary.

```
// type-punning example
float num = 4.252603;
FIFO_Put(fifo, *((uint32_t *) &num));
```

5.2 Common 27

FIFO_Get()

Remove the first value of the buffer.

Parameters

in	fifo	Pointer to FIFO object
out	val	First sample in the FIFO.

Postcondition

If the FIFO is not empty, the next value is return If the FIFO is empty, 0 is returned.

Bug To use floats (AKA $float32_t$), type-punning is necessary.

```
// type-punning example
float num;
*((uint32_t *) &num) = FIFO_Get(fifo);
```

FIFO_TransferOne()

Transfer a value from one FIFO buffer to another.

Precondition

Initialize both FIFO buffers.

Parameters

in <i>srcFifo</i>		Pointer to source FIFO buffer.	
in	destFifo	Pointer to destination FIFO buffer.	

Postcondition

A value is removed from srcFifo and placed in destFifo.

FIFO_Flush()

Empty the FIFO buffer's contents into an array.

Parameters

in	fifo	Pointer to source FIFO buffer.
in	outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.

Postcondition

The FIFO buffer's contents are transferred to the output buffer.

FIFO_Reset()

Reset the FIFO buffer.

Parameters

in fi	fo	Pointer to	FIFO buffer.
-------	----	------------	--------------

Postcondition

The FIFO is now considered empty. The underlying buffer's contents are not affected.

FIFO_TransferAll()

Transfer the contents of one FIFO buffer to another.

Parameters

in <i>srcFifo</i>		Pointer to source FIFO buffer.	
in	destFifo	Pointer to destination FIFO buffer.	

FIFO_PeekOne()

See the first element in the FIFO without removing it.

Parameters

in	fifo	Pointer to FIFO object
out	val	First sample in the FIFO.

5.2 Common 29

FIFO_PeekAll()

See the FIFO buffer's contents without removing them.

Parameters

in	fifo	Pointer to source FIFO buffer.
in	outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.

Postcondition

The FIFO buffer's contents are copied to the output buffer.

FIFO_isFull()

Check if the FIFO buffer is full.

Parameters

in	fifo	Pointer to the FIFO buffer.
out	true	The FIFO buffer is full.
out	false	The FIFO buffer is not full.

FIFO_isEmpty()

Check if the FIFO buffer is empty.

Parameters

in	fifo	Pointer to the FIFO buffer.
out	true	The FIFO buffer is empty.
out	false	The FIFO buffer is not empty.

FIFO_getCurrSize()

Get the current size of the FIFO buffer.

Parameters

in	fifo	Pointer to the FIFO buffer.
out	size	Current number of values in the FIFO buffer.

5.2.4 NewAssert

Collaboration diagram for NewAssert:




 $\label{eq:module for using a custom} \ \texttt{assert implementation}.$

5.3 Device Drivers

Low level device driver modules.

5.3 Device Drivers 31

Collaboration diagram for Device Drivers:

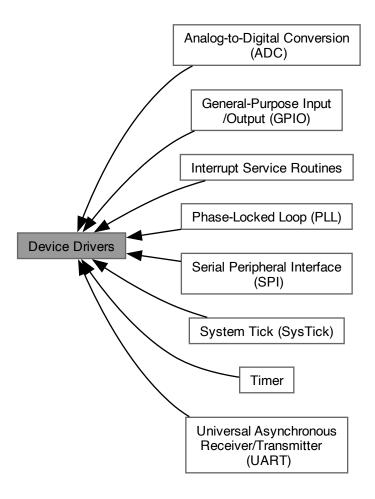

Modules

- Analog-to-Digital Conversion (ADC)
- General-Purpose Input/Output (GPIO)
- Phase-Locked Loop (PLL)
- Serial Peripheral Interface (SPI)
- System Tick (SysTick)
- Timer
- Universal Asynchronous Receiver/Transmitter (UART)
- Interrupt Service Routines

5.3.1 Detailed Description

Low level device driver modules.

These modules contain functions for interfacing with the TM4C123 microcontroller's built-in peripherals.

5.3.2 Analog-to-Digital Conversion (ADC)

Collaboration diagram for Analog-to-Digital Conversion (ADC):



Files

• file ADC.c

Source code ffor analog-to-digital conversion (ADC) module.

• file ADC.h

Header file for analog-to-digital conversion (ADC) module.

Functions

void ADC_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

5.3.2.1 Detailed Description

Functions for differential-input analog-to-digital conversion.

5.3.2.2 Function Documentation

ADC_Init()

```
void ADC_Init (
     void )
```

Initialize ADC0 as a single-input analog-to-digital converter.

Postcondition

Analog input 8 (Ain8) – AKA GPIO pin PE5 – captures samples when triggered by one of the hardware timers, and initiates an interrupt once sample capture is complete.

5.3 Device Drivers 33

5.3.3 General-Purpose Input/Output (GPIO)

Collaboration diagram for General-Purpose Input/Output (GPIO):



Functions for using general-purpose input/output (GPIO) ports.

5.3.4 Phase-Locked Loop (PLL)

Collaboration diagram for Phase-Locked Loop (PLL):



Files

- file PLL.c
 - Implementation details for phase-lock-loop (PLL) functions.
- file PLL.h

Driver module for activating the phase-locked-loop (PLL).

Functions

• void PLL_Init (void)

Initialize the phase-locked-loop to change the bus frequency.

5.3.4.1 Detailed Description

Function for initializing the phase-locked loop.

5.3.4.2 Function Documentation

PLL_Init()

```
void PLL_Init (
     void )
```

Initialize the phase-locked-loop to change the bus frequency.

Postcondition

The bus frequency is now running at 80 [MHz].

5.3.5 Serial Peripheral Interface (SPI)

Collaboration diagram for Serial Peripheral Interface (SPI):



Files

• file SPI.c

Source code for serial peripheral interface (SPI) module.

• file SPI.h

Header file for serial peripheral interface (SPI) module.

Macros

- #define SPI_SET_DC() (GPIO_PORTA_DATA_R |= 0x40)
- #define $SPI_CLEAR_DC()$ (GPIO_PORTA_DATA_R &= \sim (0x40))
- #define **SPI_IS_BUSY** (SSI0_SR_R & 0x10)
- #define SPI_TX_ISNOTFULL (SSI0_SR_R & 0x02)
- #define SPI_CLEAR_RESET() (GPIO_PORTA_DATA_R &= ~(0x80))
- #define **SPI_SET_RESET**() (GPIO_PORTA_DATA_R |= 0x80)

Enumerations

• enum {

 ${\bf SPI_CLK_PIN} = {\bf GPIO_PIN2} \;, \; {\bf SPI_CS_PIN} = {\bf GPIO_PIN3} \;, \; {\bf SPI_RX_PIN} = {\bf GPIO_PIN4} \;, \; {\bf SPI_TX_PIN} = {\bf GPIO_PIN5} \;,$

$$\begin{split} \textbf{SPI_DC_PIN} &= \texttt{GPIO_PIN6} \;, \; \textbf{SPI_RESET_PIN} = \texttt{GPIO_PIN7} \;, \; \textbf{SPI_SSI0_PINS} = (\texttt{SPI_CLK_PIN} \mid \texttt{SPI_} \leftrightarrow \texttt{CS_PIN} \mid \texttt{SPI_RX_PIN} \mid \texttt{SPI_TX_PIN}) \;, \; \textbf{SPI_GPIO_PINS} = (\texttt{SPI_DC_PIN} \mid \texttt{SPI_RESET_PIN}) \;, \\ \textbf{SPI_ALL_PINS} &= (\texttt{SPI_SSI0_PINS} \mid \texttt{SPI_GPIO_PINS}) \; \end{split}$$

Functions

void SPI_Init (void)

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

uint8_t SPI_Read (void)

Read data from the serial port.

void SPI_WriteCmd (uint8_t cmd)

Write a command to the serial port.

void SPI_WriteData (uint8_t data)

Write data to the serial port.

5.3.5.1 Detailed Description

Functions for SPI-based communication via SSI0 peripheral.

5.3.5.2 Macro Definition Documentation

SPI_SET_DC

 $\#define SPI_SET_DC() (GPIO_PORTA_DATA_R = 0x40)$

TM4C Pin	Function	ILI9341 Pin	Description
PA2	SSI0Clk	CLK	Serial clock signal
PA3	SSI0Fss	CS	Chip select signal
PA4	SSI0Rx	MISO	TM4C (M) input, LCD (S) output
PA5	SSI0Tx	MOSI	TM4C (M) output, LCD (S) input
PA6	GPIO	D/C	Data = 1, Command = 0
PA7	GPIO	RESET	Reset the display (negative logic/active LOW)

```
Clk. Polarity = steady state low (0)
Clk. Phase = rising clock edge (0)
```

5.3.5.3 Function Documentation

SPI_Init()

```
void SPI_Init (
     void )
```

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

The bit rate BR is set using the (positive, even-numbered) clock prescale divisor CPSDVSR and the SCR field in the SSI Control 0 (CR0) register:

$$BR = f_{bus}/(CPSDVSR * (1 + SCR))$$

The ILI9341 driver has a min. read cycle of 150 [ns] and a min. write cycle of 100 [ns], so the bit rate BR is set to be equal to the bus frequency ($f_{bus}=80[MHz]$) divided by 8, allowing a bit rate of 10 [MHz], or a period of 100 [ns].

SPI_Read()

```
uint8_t SPI_Read (
     void )
```

Read data from the serial port.

Precondition

Initialize the SPI module.

Parameters

out	data	8-bit data received from the hardware's receive FIFO.
-----	------	---

SPI_WriteCmd()

Write a command to the serial port.

Precondition

Initialize the SPI module.

Parameters

in	cmd	8-bit command to write.
----	-----	-------------------------

Postcondition

The D/C pin is cleared.

The data is added to the hardware's transmit FIFO.

SPI_WriteData()

Write data to the serial port.

Precondition

Initialize the SPI module.

Parameters

in data 8-bit da	ata to write.
------------------	---------------


Postcondition

The D/C pin is set.

The data is added to the hardware's transmit FIFO.

5.3.6 System Tick (SysTick)

Collaboration diagram for System Tick (SysTick):



Files

• file SysTick.c

Implementation details for SysTick functions.

file SysTick.h

Driver module for using SysTick-based timing and/or interrupts.

Functions

• void SysTick_Timer_Init (void)

Initialize SysTick for timing purposes.

void SysTick_Wait1ms (uint32_t delay_ms)

Delay for specified amount of time in [ms]. Assumes $f_bus = 80[MHz]$.

void SysTick_Interrupt_Init (uint32_t time_ms)

Initialize SysTick for interrupts.

5.3.6.1 Detailed Description

Functions for timing and periodic interrupts via SysTick.

5.3.6.2 Function Documentation

SysTick_Interrupt_Init()

Initialize SysTick for interrupts.

Parameters

```
time_ms Time in [ms] between interrupts. Cannot be more than 200[ms].
```

5.3.7 Timer

Collaboration diagram for Timer:



Files

• file Timer.c

Source code for Timer module.

· file Timer.h

Device driver for general-purpose timer modules.

Data Structures

• struct Timer_t

Enumerations

```
    enum {
        TIMERO_BASE = 0x40030000 , TIMER1_BASE = 0x40031000 , TIMER2_BASE = 0x40032000 , TIMER3
        __BASE = 0x40033000 ,
        TIMER4_BASE = 0x40034000 , TIMER5_BASE = 0x40035000 }
        enum REGISTER_OFFSETS {
            CONFIG = 0x00 , MODE = 0x04 , CTRL = 0x0C , INT_MASK = 0x18 ,
            INT_CLEAR = 0x24 , INTERVAL = 0x28 , VALUE = 0x054 }
        enum timerName_t {
            TIMER0 , TIMER1 , TIMER2 , TIMER3 ,
            TIMER4 , TIMER5 }
        enum timerMode_t { ONESHOT , PERIODIC }
        enum timerDirection_t { UP , DOWN }
```

Functions

Timer_t Timer_Init (timerName_t timerName)

Initialize a hardware timer.

void Timer_Deinit (Timer_t timer)

De-initialize a hardware timer.

• timerName_t Timer_getName (Timer_t timer)

Get the name of a timer object.

bool Timer_isInit (Timer_t timer)

Check if a timer object is initialized.

• void Timer_setMode (Timer_t timer, timerMode_t timerMode, timerDirection_t timerDirection)

Set the mode for the timer.

void Timer_enableAdcTrigger (Timer_t timer)

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

void Timer disableAdcTrigger (Timer t timer)

Disable ADC sample capture on timeout.

void Timer_enableInterruptOnTimeout (Timer_t timer)

Set the timer to trigger an interrupt on timeout.

void Timer disableInterruptOnTimeout (Timer t timer)

Stop the timer from triggering interrupts on timeout.

void Timer_clearInterruptFlag (Timer_t timer)

Clear the timer's interrupt flag to acknowledge the interrupt.

void Timer_setInterval_ms (Timer_t timer, uint32_t time_ms)

Set the interval to use.

- uint32_t Timer_getCurrentValue (Timer_t timer)
- void Timer_Start (Timer_t timer)

Start the timer.

void Timer_Stop (Timer_t timer)

Stop the timer.

bool Timer_isCounting (Timer_t timer)

Check if the timer is currently counting.

void Timer_Wait1ms (Timer_t timer, uint32_t time_ms)

Initiate a time delay.

Variables

static TimerStruct_t TIMER_POOL [6]

5.3.7.1 Detailed Description

Functions for timing and periodic interrupts via general-purpose timer modules (GPTM).

5.3.7.2 Enumeration Type Documentation

timerMode t

enum timerMode_t

Enumerator

ONESHOT	the timer runs once, then stops
PERIODIC	the timer runs continuously once started

timerDirection_t

```
enum timerDirection_t
```

Enumerator

UP	the timer starts and 0 and counts to the reload value
DOWN	the timer starts at its reload value and counts down

5.3.7.3 Function Documentation

Timer_Init()

Initialize a hardware timer.

Parameters

in	timerName	Name of the hardware timer to use.
out	timer	Pointer to timer object.

Postcondition

The timer is ready to be configured and used.

See also

```
Timer_isInit(), Timer_Deinit()
```

Timer_Deinit()

De-initialize a hardware timer.

Parameters

in	timerName	Name of the hardware timer to use.
----	-----------	------------------------------------

Postcondition

The hardware timer is no longer initialized or receiving power.

See also

```
Timer_Init(), Timer_isInit()
```

Timer_getName()

Get the name of a timer object.

Parameters

in	timer	Pointer to timer object.
out	timer⇔	Name of the hardware timer being used.
	Name_t	

Timer_isInit()

Check if a timer object is initialized.

Parameters

in	timer	Pointer to timer object.
out	true	The timer is initialized.
out	false	The timer is not initialized.

See also

```
Timer_Init(), Timer_Deinit()
```

Timer_setMode()

Set the mode for the timer.

Parameters

in	timer	Pointer to timer object.
in	timerMode	Mode for hardware timer to use.
in	timerDirection	Direction to count towards.

Timer_enableAdcTrigger()

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

Precondition

Initialize and configure an ADC module to be timer-triggered.

Parameters

in	timer	Pointer to timer object.
----	-------	--------------------------

Postcondition

A timeout event triggers ADC sample capture.

See also

Timer_disableAdcTrigger()

Timer_disableAdcTrigger()

Disable ADC sample capture on timeout.

Precondition

Initialize and configure an ADC module to be timer-triggered.

Parameters

in	timer	Pointer to timer object.

Postcondition

A timeout event no longer triggers ADC sample capture.

See also

Timer_enableAdcTrigger()

Timer_enableInterruptOnTimeout()

Set the timer to trigger an interrupt on timeout.

Precondition

Configure the interrupt service routine using the ISR module.

Parameters

in <i>timer</i>	Pointer to timer object.
-----------------	--------------------------

Postcondition

Upon timeout, an interrupt is triggered.

See also

Timer_disableInterruptOnTimeout()

Timer_disableInterruptOnTimeout()

```
void Timer_disableInterruptOnTimeout ( {\tt Timer\_t\ \it timer}\ )
```

Stop the timer from triggering interrupts on timeout.

Parameters

in	timer	Pointer to timer object.
----	-------	--------------------------

Postcondition

Timeout no longer triggers ADC sample capture.

See also

Timer_enableInterruptOnTimeout()

Timer_clearInterruptFlag()

Clear the timer's interrupt flag to acknowledge the interrupt.

Precondition

Call this during a timer's interrupt service routine (ISR).

Parameters

i	Ĺn	timer	Pointer to timer object.
---	----	-------	--------------------------

Timer_setInterval_ms()

Set the interval to use.

Precondition

Initialize and configure the timer.

Parameters

in	timer	Pointer to timer object.
in	time_ms	Time in [ms].

Postcondition

Upon starting, the Timer counts down from or up to this value.

See also

Timer_Init(), Timer_setMode()

Timer_Start()

Start the timer.

Precondition

Initialize and configure the timer.

Parameters

in timer Pointer to time	ner object.
--------------------------	-------------

Postcondition

The timer is counting.

See also

Timer_Stop(), Timer_isCounting()

Timer_Stop()

Stop the timer.

Precondition

Start the timer.

Parameters

in timer Pointer to timer object.

Postcondition

The timer is no longer counting.

See also

Timer_Start(), Timer_isCounting()

Timer_isCounting()

Check if the timer is currently counting.

Parameters

in	timer	Pointer to timer object.
out	true	The timer is counting.
out	false	The timer is not counting.

See also

```
Timer_Start(), Timer_Stop()
```

Timer_Wait1ms()

Initiate a time delay.

Precondition

Initialize and configure the timer.

Parameters

in	timer	Pointer to timer object.
in	time_ms	Time in [ms] to wait for.

Postcondition

The program is delayed for the desired time.

5.3.7.4 Variable Documentation

TIMER_POOL

```
TimerStruct_t TIMER_POOL[6] [static]
```

Initial value:

```
{
    { TIMERO, TIMERO_BASE, (register_t) (TIMERO_BASE + CTRL), (register_t) (TIMERO_BASE + INTERVAL),
        (register_t) (TIMERO_BASE + INT_CLEAR), false },
    { TIMER1, TIMER1_BASE, (register_t) (TIMER1_BASE + CTRL), (register_t) (TIMER1_BASE + INTERVAL),
        (register_t) (TIMER1_BASE + INT_CLEAR), false },
    { TIMER2, TIMER2_BASE, (register_t) (TIMER2_BASE + CTRL), (register_t) (TIMER2_BASE + INTERVAL),
        (register_t) (TIMER2_BASE + INT_CLEAR), false },
    { TIMER3, TIMER3_BASE, (register_t) (TIMER3_BASE + CTRL), (register_t) (TIMER3_BASE + INTERVAL),
        (register_t) (TIMER3_BASE + INT_CLEAR), false },
    { TIMER4, TIMER4_BASE, (register_t) (TIMER4_BASE + CTRL), (register_t) (TIMER4_BASE + INTERVAL),
        (register_t) (TIMER4_BASE + INT_CLEAR), false },
    { TIMER5, TIMER5_BASE, (register_t) (TIMER5_BASE + CTRL), (register_t) (TIMER5_BASE + INTERVAL),
        (register_t) (TIMER5_BASE + INT_CLEAR), false },
```

5.3.8 Universal Asynchronous Receiver/Transmitter (UART)

Collaboration diagram for Universal Asynchronous Receiver/Transmitter (UART):



Files

file UART.c

Source code for UART module.

• file UART.h

Driver module for serial communication via UART0 and UART 1.

Data Structures

struct Uart_t

Macros

#define ASCII CONVERSION 0x30

Enumerations

```
enum GPIO BASE ADDRESSES {
      GPIO_PORTA_BASE = (uint32_t) 0x40004000 , GPIO_PORTB_BASE = (uint32_t) 0x40005000 , GPIO_←
      PORTC_BASE = (uint32_t) 0x40006000, GPIO_PORTD_BASE = (uint32_t) 0x40007000,
      GPIO_PORTE_BASE = (uint32_t) 0x40024000 , GPIO_PORTF_BASE = (uint32_t) 0x40025000 }
• enum UART_BASE_ADDRESSES {
      UART0_BASE = (uint32_t) 0x4000C000 , UART1_BASE = (uint32_t) 0x4000D000 , UART2_BASE =
      (uint32 t) 0x4000E000, UART3 BASE = (uint32 t) 0x4000F000,
      UART4 BASE = (uint32 t) 0x40010000 , UART5 BASE = (uint32 t) 0x40011000 , UART6 BASE =
      (uint32_t) 0x40012000 , UART7_BASE = (uint32_t) 0x40013000 }
enum UART REG OFFSETS {
      \textbf{UART\_FR\_R\_OFFSET} = (uint32\_t) \ 0x18 \ , \ \textbf{IBRD\_R\_OFFSET} = (uint32\_t) \ 0x24 \ , \ \textbf{FBRD\_R\_OFFSET} = (uint32\_t) \ 0x24 \ , \ \textbf{CAUTA\_R\_OFFSET} = (uint32\_t) \ 0x24 \ , \ \textbf{CAUTA\_R\_OFFSET
      (uint32_t) 0x28 , LCRH_R_OFFSET = (uint32_t) 0x2C ,
      CTL_R_OFFSET = (uint32_t) 0x30 , CC_R_OFFSET = (uint32_t) 0xFC8 }
enum uartNum t {
      UARTO, UART1, UART2, UART3,
      UART4, UART5, UART6, UART7 }
```

Functions

• Uart_t UART_Init (GpioPort_t port, uartNum_t uartNum)

Initialize the specified UART peripheral.

bool UART_isInit (Uart_t uart)

Check if the UART object is initialized.

• unsigned char UART_ReadChar (Uart_t uart)

Read a single ASCII character from the UART.

• void UART_WriteChar (Uart_t uart, unsigned char inputChar)

Write a single character to the UART.

• void UART_WriteStr (Uart_t uart, void *inputStr)

Write a C string to the UART.

void UART_WriteInt (Uart_t uart, int32_t n)

Write a 32-bit unsigned integer the UART.

• void UART_WriteFloat (Uart_t uart, double n, uint8_t numDecimals)

Write a floating-point number the UART.

Variables

static UartStruct_t UART_ARR [8]

5.3.8.1 Detailed Description

Functions for UART-based communication.

5.3.8.2 Function Documentation

UART_Init()

Initialize the specified UART peripheral.

Parameters

in	port	GPIO port to use.	
in	uartNum	UART number. Should be either one of the enumerated constants or an int in range [
out	uart	(Pointer to) initialized UART peripheral.	

Given the bus frequency (f_bus) and desired baud rate (BR), the baud rate divisor (BRD) can be calculated: $BRD = f_{bus}/(16*BR)$

The integer BRD (IBRD) is simply the integer part of the BRD: IBRD = int(BRD)

The fractional BRD (FBRD) is calculated using the fractional part (mod (BRD, 1)) of the BRD: FBRD = int((mod(BRD,1)*64)+0.5)

UART_isInit()

Check if the UART object is initialized.

Parameters

in	uart	UART to check.
out	true	The UART object is initialized.
out	false	The UART object is not initialized.

UART_ReadChar()

Read a single ASCII character from the UART.

Parameters

ſ	in	uart	UART to read from.
	out	unsigned	char ASCII character from sender.

UART_WriteChar()

Write a single character to the UART.

Parameters

in	uart	UART to write to.
in	input_char	ASCII character to send.

UART_WriteStr()

Write a C string to the UART.

Parameters

in	uart	UART to write to.
in	input_str	Array of ASCII characters.

UART_WriteInt()

Write a 32-bit unsigned integer the UART.

Parameters

in	uart	UART to write to.
in	n	Unsigned 32-bit int to be converted and transmitted.

UART_WriteFloat()

Write a floating-point number the UART.

Parameters

	in	uart	UART to write to.
	in	n	Floating-point number to be converted and transmitted.
Ī	in	num_decimals	Number of digits after the decimal point to include.

5.3.8.3 Variable Documentation

UART_ARR

```
UartStruct_t UART_ARR[8] [static]
```

Initial value:

```
{
    { UARTO_BASE, ((register_t) (UARTO_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false },
    { UART1_BASE, ((register_t) (UART1_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false },
    { UART2_BASE, ((register_t) (UART2_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN6, GPIO_PIN7, false },
    { UART3_BASE, ((register_t) (UART3_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN6, GPIO_PIN7, false },
    { UART4_BASE, ((register_t) (UART4_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false },
    { UART5_BASE, ((register_t) (UART5_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false },
    { UART6_BASE, ((register_t) (UART6_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false },
    { UART7_BASE, ((register_t) (UART7_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false }
}
```

5.3.9 Interrupt Service Routines

Collaboration diagram for Interrupt Service Routines:



Files

• file ISR.c

Source code for interrupt service routine (ISR) configuration module.

· file ISR.h

Header file for interrupt service routine (ISR) configuration module.

Macros

- #define VECTOR TABLE BASE ADDR ((uint32 t) 0x00000000)
- #define VECTOR_TABLE_SIZE ((uint32_t) 155)
- #define VECTOR_TABLE_ALIGNMENT ((uint32_t) (1 << 10))
- #define NVIC_EN_BASE_ADDR ((uint32_t) 0xE000E100)
- #define NVIC_DIS_BASE_ADDR ((uint32_t) 0xE000E180)
- #define NVIC_PRI_BASE_ADDR ((uint32_t) 0xE000E400)
- #define NVIC_UNPEND_BASE_ADDR ((uint32_t) 0xE000E280)

Typedefs

typedef void(* ISR_t) (void)

Type definition for function pointers representing ISRs.

Functions

- static void ISR_setStatus (const uint8_t vectorNum, const bool isEnabled)
- void ISR_GlobalDisable (void)

Disable all interrupts globally.

void ISR_GlobalEnable (void)

Enable all interrupts globally.

- static ISR_t newVectorTable[VECTOR_TABLE_SIZE] __attribute__ ((aligned(VECTOR_TABLE_← ALIGNMENT)))
- void ISR_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR addToIntTable (ISR t isr, const uint8 t vectorNum)

Add an ISR to the interrupt table.

void ISR_setPriority (const uint8_t vectorNum, const uint8_t priority)

Set the priority for an interrupt.

void ISR_Enable (const uint8_t vectorNum)

Enable an interrupt in the NVIC.

void ISR_Disable (const uint8_t vectorNum)

Disable an interrupt in the NVIC.

void ISR_triggerInterrupt (const uint8_t vectorNum)

Generate a software-generated interrupt (SGI).

Variables

- static bool interruptsAreEnabled = true
- void(*const interruptVectorTable [])(void)
- static bool isTableCopiedToRam = false

5.3.9.1 Detailed Description

Functions for manipulating the interrupt vector table and setting up interrupt handlers via the NVIC.

5.3.9.2 Function Documentation

ISR_GlobalDisable()

Disable all interrupts globally.

See also

ISR_GlobalEnable()

ISR_GlobalEnable()

Enable all interrupts globally.

See also

ISR GlobalDisable()

ISR_InitNewTableInRam()

Relocate the vector table to RAM.

Precondition

Disable interrupts globally before calling this.

Postcondition

The vector table is now located in RAM, allowing the ISRs listed in the startup file to be replaced.

See also

```
ISR_GlobalDisable(), ISR_addToIntTable()
```

ISR_addToIntTable()

Add an ISR to the interrupt table.

Precondition

Initialize a new vector table in RAM before calling this function.

Parameters

in	isr	Name of the ISR to add.	
in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16,	154].

Postcondition

The ISR is now added to the vector table and available to be called.

See also

ISR_InitNewTableInRam()

ISR_setPriority()

Set the priority for an interrupt.

Precondition

Disable the interrupt before adjusting its priority.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16,	
in	priority	Priority to assign. Highest priority is 0, lowest is 7.	

Postcondition

The interrupt's priority has now been changed in the NVIC.

See also

ISR_Disable()

ISR_Enable()

Enable an interrupt in the NVIC.

Precondition

If needed, add the interrupt to the vector table.

If needed, set the interrupt's priority (default 0, or highest priority) before calling this.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154].	
----	-----------	--	--

Postcondition

The interrupt is now enabled in the NVIC.

See also

```
ISR_addToIntTable(), ISR_setPriority(), ISR_Disable()
```

ISR_Disable()

Disable an interrupt in the NVIC.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154]	.]
----	-----------	---	-----

Postcondition

The interrupt is now disabled in the NVIC.

See also

ISR_Enable()

ISR_triggerInterrupt()

Generate a software-generated interrupt (SGI).

Precondition

Enable the ISR (and set priority as needed).

Enable all interrupts.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range $[16, 154]$.	
----	-----------	---	--

Postcondition

The ISR should trigger once any higher priority ISRs return.


See also

ISR_clearPending()

5.4 Middleware

High-level device driver modules.

Collaboration diagram for Middleware:

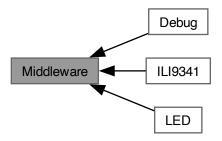

Modules

- Debug
- ILI9341
- LED

5.4.1 Detailed Description

High-level device driver modules.

These modules contain functions for interfacing with external devices/peripherals via the use of low-level drivers.

5.4.2 **Debug**

Collaboration diagram for Debug:



Files

• file Debug.h

Functions to output debugging information to a serial port via UART.

Serial Output

- enum Msg_t { DEBUG_DAQ_INIT , DEBUG_QRS_INIT , DEBUG_LCD_INIT , DEBUG_QRS_START }
- void Debug_SendMsg (void *message)

Send a message to the serial port.

void Debug_SendFromList (Msg_t msg)

Send a message from the message list.

void Debug_WriteFloat (double value)

Write a floating-point value to the serial port.

Initialization

void Debug_Init (Uart_t uart)
 Initialize the Debug module.

Assertions

void Debug_Assert (bool condition)

Stops program if condition is true. Useful for bug detection during debugging.

5.4.2.1 Detailed Description

Module for debugging functions, including serial output and assertions.

5.4.2.2 Function Documentation

Debug_Init()

Initialize the Debug module.

Parameters

in	uart	UART to use for serial output.

Postcondition

An initialization message is sent to the serial port.

Debug_SendMsg()

Send a message to the serial port.

Precondition

Initialize the Debug module.

Parameters

```
message (Pointer to) array of ASCII characters.
```

Postcondition

A floating point value is written to the serial port.

See also

Debug_SendMsg()

Debug_SendFromList()

Send a message from the message list.

Precondition

Initialize the Debug module.

Parameters

in	msg	An entry from the enumeration.
----	-----	--------------------------------

Postcondition

The corresponding message is sent to the serial port.

See also

Debug_SendMsg()

Debug_WriteFloat()

Write a floating-point value to the serial port.

Precondition

Initialize the Debug module.

Parameters

Postcondition

A floating point value is written to the serial port.

See also

Debug_SendMsg()

Debug_Assert()

```
void Debug_Assert (
          bool condition )
```

Stops program if condition is true. Useful for bug detection during debugging.

Precondition

Initialize the Debug module.

Parameters

in	condition	Conditional statement to evaluate.
----	-----------	------------------------------------

Postcondition

If condition == true, the program continues normally. If condition == false, a message is sent and a breakpoint is activated.

5.4.3 ILI9341

Collaboration diagram for ILI9341:



Files

• file ILI9341.c

Source code for ILI9341 module.

file ILI9341.h

Driver module for interfacing with an ILI9341 LCD driver.

Enumerations

```
enum { ILI9341_NUM_COLS = 240 , ILI9341_NUM_ROWS = 320 }
enum Cmd_t {
    NOP = 0x00 , SWRESET = 0x01 , SPLIN = 0x10 , SPLOUT = 0x11 ,
    PTLON = 0x12 , NORON = 0x13 , DINVOFF = 0x20 , DINVON = 0x21 ,
    CASET = 0x2A , PASET = 0x2B , RAMWR = 0x2C , DISPOFF = 0x28 ,
    DISPON = 0x29 , PLTAR = 0x30 , VSCRDEF = 0x33 , MADCTL = 0x36 ,
    VSCRSADD = 0x37 , IDMOFF = 0x38 , IDMON = 0x39 , PIXSET = 0x3A ,
    FRMCTR1 = 0xB1 , FRMCTR2 = 0xB2 , FRMCTR3 = 0xB3 , PRCTR = 0xB5 ,
    IFCTL = 0xF6 }
enum sleepMode_t { SLEEP_ON = SPLIN , SLEEP_OFF = SPLOUT }
enum displayArea_t { NORMAL_AREA = NORON , PARTIAL_AREA = PTLON }
enum colorExpr_t { FULL_COLORS = IDMOFF , PARTIAL_COLORS = IDMON }
enum invertMode_t { INVERT_ON = DINVON , INVERT_OFF = DINVOFF }
enum outputMode_t { OUTPUT_ON = DISPON , OUTPUT_OFF = DISPOFF }
enum colorDepth t { COLORDEPTH 16BIT = 0x55 , COLORDEPTH 18BIT = 0x66 }
```

Functions

- static void ILI9341_setMode (uint8_t param)
- static void ILI9341_setAddress (uint16_t start_address, uint16_t end_address, bool is_row)
- static void ILI9341_sendParams (Cmd_t cmd)

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

• void ILI9341 Init (Timer t timer)

Initialize the LCD driver and the SPI module.

void ILI9341_setInterface (void)

Sets the interface for the ILI9341.

void ILI9341_resetHard (Timer_t timer)

Perform a hardware reset of the LCD driver.

• void ILI9341_resetSoft (Timer_t timer)

Perform a software reset of the LCD driver.

void ILI9341_setSleepMode (sleepMode_t sleepMode, Timer_t timer)

Enter or exit sleep mode (ON by default).

void ILI9341 setDisplayArea (displayArea t displayArea)

Set the display area.

void ILI9341_setColorExpression (colorExpr_t colorExpr)

Set the color expression (FULL COLORS by default).

void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

Set the display area for partial mode. Call before activating partial mode.

void ILI9341_setDispInversion (invertMode_t invertMode)

Toggle display inversion (OFF by default).

void ILI9341_setDispOutput (outputMode_t outputMode)

Change whether the IC is outputting to the display for not.

void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols
 — Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341 setColorDepth (colorDepth t colorDepth)

Set the color depth for the display.

void ILI9341_setFrameRate (uint8_t divisionRatio, uint8_t clocksPerLine)

TODO: Write brief.

void ILI9341 setRowAddress (uint16 t startRow, uint16 t endRow)

Sets the start/end rows to be written to.

void ILI9341_setColAddress (uint16_t startCol, uint16_t endCol)

Sets the start/end columns to be written to.

void ILI9341_writeMemCmd (void)

Signal to the driver that pixel data is incoming and should be written to memory.

void ILI9341_writePixel (uint8_t red, uint8_t green, uint8_t blue)

Write a single pixel to frame memory.

Variables

```
• static uint32 t ILI9341_Buffer [8]
```

- static Fifo_t ILI9341_Fifo
- struct {

```
sleepMode_t sleepMode
displayArea_t displayArea
colorExpr_t colorExpression
invertMode_t invertMode
outputMode_t outputMode
colorDepth_t colorDepth
bool isInit
```

} ili9341 = { SLEEP_ON, NORMAL_AREA, FULL_COLORS, INVERT_OFF, OUTPUT_ON, COLORDEPTH_16BIT, false }

5.4.3.1 Detailed Description

Functions for interfacing an ILI9341-based 240RGBx320 LCD via Serial Peripheral Interface (SPI).

5.4.3.2 Enumeration Type Documentation

anonymous enum

anonymous enum

Enumerator

ILI9341_NUM_COLS	5.4.3.3	of columns available on the display
ILI9341_NUM_ROWS	5.4.3.4	of rows available on the display

Cmd_t

enum Cmd_t

Enumerator

No Operation.
Software Reset.
Enter Sleep Mode.
Sleep Out (i.e. Exit Sleep Mode)
Partial Display Mode ON.
Normal Display Mode ON.
Display Inversion OFF.
Display Inversion ON.
Column Address Set.
Page Address Set.
Memory Write.
Display OFF.
Display ON.
Partial Area.
Vertical Scrolling Definition.
Memory Access Control.
Vertical Scrolling Start Address.
Idle Mode OFF.
Idle Mode ON.
Pixel Format Set.
Frame Rate Control Set (Normal Mode)
Frame Rate Control Set (Idle Mode)
Frame Rate Control Set (Partial Mode)
Blanking Porch Control.
Interface Control.

5.4.3.5 Function Documentation

ILI9341_setMode()

This function simply groups each of the configuration functions into one to reduce code duplication. $\,$

ILI9341_setAddress()

```
uint16_t end_address,
bool is_row ) [static]
```

This function implements the "Column Address Set" (CASET) and "Page Address Set" (PASET) commands from p. 110-113 of the ILI9341 datasheet.

The input parameters represent the first and last addresses to be written to when ILI9341_writePixel() is called.

To work correctly, startAddress must be no greater than endAddress, and endAddress cannot be greater than the max number of rows/columns.

ILI9341_sendParams()

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

Parameters

in	cmd	Command to send.
----	-----	------------------

ILI9341_Init()

Initialize the LCD driver and the SPI module.

Currently unused commands #define RDDST (uint8_t) 0x09 /// Read Display Status #define RDDMADCTL (uint8-c) 0x08 /// Read Display MADCTL #define RDDCOLMOD (uint8_t) 0x0C /// Read Display Pixel Format #define RGBSET (uint8_t) 0x2D /// Color Set #define RAMRD (uint8_t) 0x2E /// Memory Read #define WRITE_MEMORY-cONTINUE (uint8_t) 0x3C /// Write_Memory_Continue #define READ_MEMORY_CONTINUE (uint8_t) 0x3E /// Read_Memory_Continue #define WRDISBV (uint8_t) 0x51 /// Write Display Brightness #define RDDISBV (uint8_t) 0x52 /// Read Display Brightness #define IFMODE (uint8_t) 0x80 /// RGB Interface Signal Control (i.e. Interface Mode Control) #define INVTR (uint8_t) 0x84 /// Display Inversion Control

Parameters

```
in timer Hardware timer to use during initialization.
```

ILI9341_setInterface()

Sets the interface for the ILI9341.

The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

This function implements the "Interface Control" (IFCTL) command from p. 192-194 of the ILI9341 datasheet, which controls how the LCD driver handles 16-bit data and what interfaces (internal or external) are used.

Name	Bit #	Param #	Effect when set = 1
MY_EOR	7		flips value of corresponding MADCTL bit
MX_EOR	6		flips value of corresponding MADCTL bit
MV_EOR	5	0	flips value of corresponding MADCTL bit
BGR_EOR	3		flips value of corresponding MADCTL bit
WEMODE	0		overflowing pixel data is not ignored
EPF[1:0]	5:4	1	controls 16 to 18-bit pixel data conversion
MDT[1:0]	1:0	1	controls display data transfer method
ENDIAN	5		host sends LSB first
DM[1:0]	3:2	2	selects display operation mode
RM	1	_	selects GRAM interface mode
RIM	0		specifies RGB interface-specific details

The first param's bits are cleared so that the corresponding MADCTL bits (ILI9341_setMemoryAccessCtrl()) are unaffected and overflowing pixel data is ignored. The EPF bits are cleared so that the LSB of the R and B values is copied from the MSB when using 16-bit color depth. The TM4C123 sends the MSB first, so the ENDIAN bit is cleared. The other bits are cleared and/or irrelevant since the RGB and VSYNC interfaces aren't used.

ILI9341_resetHard()

Perform a hardware reset of the LCD driver.

Parameters

in	timer	Hardware timer to use during reset.
----	-------	-------------------------------------

The LCD driver's RESET pin requires a negative logic (i.e. active LOW) signal for >= 10 [us] and an additional 5 [ms] before further commands can be sent.

ILI9341_resetSoft()

Perform a software reset of the LCD driver.

Parameters

in	timer	Hardware timer to use during reset.

the driver needs 5 [ms] before another command

ILI9341_setSleepMode()

Enter or exit sleep mode (ON by default).

Parameters

in	sleepMode	SLEEP_ON or SLEEP_OFF
in	timer	Hardware timer to use for a slight delay after the mode change.

Postcondition

The IC will be in or out of sleep mode depending on the value of sleepMode.

The MCU must wait >= 5 [ms] before sending further commands regardless of the selected mode.

It's also necessary to wait 120 [ms] before sending SPLOUT after sending SPLIN or a reset, so this function waits 120 [ms] regardless of the preceding event.

ILI9341_setDisplayArea()

Set the display area.

Precondition

If using partial mode, set the partial area first.

Parameters

in	displayArea	NORMAL_AREA or PARTIAL_AREA
----	-------------	-----------------------------

See also

ILI9341_setPartialArea()

ILI9341_setColorExpression()

Set the color expression (FULL_COLORS by default).

Parameters

in <i>colorExpr</i>	FULL_COLORS or PARTIAL_COLORS
---------------------	-------------------------------

Postcondition

With partial color expression, the display only uses 8 colors. Otherwise, the color depth determines the number of colors available.

ILI9341_setPartialArea()

Set the display area for partial mode. Call before activating partial mode.

Parameters

in	rowStart	
in	rowEnd	

See also

ILI9341_setDisplayArea()

ILI9341_setDispInversion()

Toggle display inversion (OFF by default).

Parameters

ſ	in	invertMode	INVERT_ON or INVERT_OFF

Postcondition

When inversion is ON, the display colors are inverted. (e.g. BLACK -> WHITE, GREEN -> PURPLE)

ILI9341_setDispOutput()

Change whether the IC is outputting to the display for not.

Parameters

in	outputMode	OUTPUT_	_ON or OUTPUT_	_OFF
----	------------	---------	----------------	------

Postcondition

If ON, the IC outputs data from its memory to the display. If OFF, the display is cleared and the IC stops outputting data.

TODO: Write description

ILI9341_setMemAccessCtrl()

Set how data is converted from memory to display.

Parameters

in	areRowsFlipped	
in	areColsFlipped	
in	areRowsAndColsSwitched	
in	isVertRefreshFlipped	
in	in <i>isColorOrderFlipped</i>	
in	isHorRefreshFlipped	

This function implements the "Memory Access Control" (MADCTL) command from p. 127-128 of the ILI9341 datasheet, which controls how the LCD driver displays data upon writing to memory.

Name	Bit #	Effect when set = 1	
MY	7	flip row (AKA "page") addresses	
MX	6	flip column addresses	
MV	5	exchange rows and column addresses	
ML	4	reverse horizontal refresh order	
BGR	3	reverse color input order (RGB -> BGR)	
MH	2	reverse vertical refresh order	

All bits are clear after powering on or ${\tt HWRESET}.$

ILI9341_setColorDepth()

Set the color depth for the display.

Parameters

```
in colorDepth COLORDEPTH_16BIT or COLORDEPTH_18BIT
```

Postcondition

16BIT mode allows for \sim 65K (2 $^{\wedge}$ 16) colors and requires 2 transfers. 18BIT mode allows for \sim 262K (2 $^{\wedge}$ 18) colors but requires 3 transfers.

ILI9341_setFrameRate()

TODO: Write brief.

TODO: Write description

ILI9341_setRowAddress()

Sets the start/end rows to be written to.

Parameters



0 <= startRow <= endRow</pre>

Parameters



startRow<=endRow` < 240

See also

ILI9341_setRowAddress, ILI9341_writePixel()

This function is simply an interface to ILI9341_setAddress(). To work correctly, start_row must be no greater than end_row, and end_row cannot be greater than the max row number (default 320).

ILI9341_setColAddress()

Sets the start/end columns to be written to.

Parameters

```
in
```

0 <= startCol <= endCol</pre>

Parameters



startCol<=endCol` < 240

See also

ILI9341_setColAddress, ILI9341_writePixel()

This function is simply an interface to ILI9341_setAddress(). To work correctly, start_col must be no greater than end_col, and end_col cannot be greater than the max column number (default 240).

ILI9341_writeMemCmd()

```
void ILI9341_writeMemCmd ( void \ \ )
```

Signal to the driver that pixel data is incoming and should be written to memory.

Precondition

Set the row and/or column addresses.

Postcondition

The LCD driver is ready to accept pixel data.

See also

ILI9341_setRowAddress, ILI9341_setColAddress(), ILI9341_writePixel()

ILI9341_writePixel()

```
void ILI9341_writePixel (
          uint8_t red,
          uint8_t green,
          uint8_t blue )
```

Write a single pixel to frame memory.

Precondition

Send the "Write Memory" command.

Set the desired color depth for the display.

Parameters

i	n	red	5 or 6-bit R value
i	n	green	5 or 6-bit G value
i	n	blue	5 or 6-bit B value

See also

ILI9341_setColorDepth, ILI9341_writeMemCmd(), ILI9341_writePixel()

This function sends one pixel to the display. Because the serial interface (SPI) is used, each pixel requires 2 transfers in 16-bit mode and 3 transfers in 18-bit mode.

The following table (adapted from p. 63 of the datasheet) visualizes how the RGB data is sent to the display when using 16-bit color depth.

Transfer	1										2	2				
Bit #	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Value	R4	R3	R2	R1	R0	G5	G4	G3	G2	G1	G0	В4	В3	B2	B1	B0

The following table (adapted from p. 64 of the datasheet) visualizes how the RGB data is sent to the display when using 18-bit color depth.

Transfer		1								2	
Bit #	7	6	5	4	3	2	1	0	7	6	
Value	R5	R4	R3	R2	R1	R0	0/1	0/1	G5	G4	

5.4.4 LED

Collaboration diagram for LED:



Files

• file Led.c

Source code for LED module.

• file Led.h

Interface for LED module.

Data Structures

struct Led_t

5.4 Middleware 71

Macros

• #define LED_POOL_SIZE 1

Functions

```
    Led_t Led_Init (GpioPort_t gpioPort, GPIO_Pin_t pin)
    Initialize a light-emitting diode (LED) as an Led_t.
```

- bool Led_isInit (Led_t led)
- GpioPort_t Led_GetPort (Led_t led)

Get the GPIO port associated with the LED.

• GPIO_Pin_t Led_GetPin (Led_t led)

Get the GPIO pin associated with the LED.

• bool Led_isOn (Led_t led)

Check the LED's status.

void Led_TurnOn (Led_t led)

Turn the LED ON.

• void Led_TurnOff (Led_t led)

Turn the LED OFF.

void Led_Toggle (Led_t led)

Toggle the LED (i.e. $OFF \rightarrow ON \text{ or } ON \rightarrow OFF$).

Variables

```
    static LedStruct_t Led_ObjPool [LED_POOL_SIZE] = { 0 }
```

static uint8_t num_free_leds = LED_POOL_SIZE

5.4.4.1 Detailed Description

Functions for driving light-emitting diodes (LEDs) via General-Purpose Input/Output (GPIO).

5.4.4.2 Function Documentation

Led_Init()

Initialize a light-emitting diode (LED) as an Led_t.

Parameters

in	gpioPort	Pointer to a struct representing a GPIO port.
in	pin	GPIO pin to use.
out	Led_t*	Pointer to LED data structure.

Led_GetPort()

Get the GPIO port associated with the LED.

Parameters

in	led	Pointer to LED data structure.
out	GPIO_Port⇔	Pointer to a GPIO port data structure.
	_t*	

Led_GetPin()

Get the GPIO pin associated with the LED.

Parameters

l	in	led	Pointer to LED data structure.
	out	<i>GPIO</i> _⇔	GPIO pin associated with the LED.
		Pin_t	

Led_isOn()

```
bool Led_isOn (
          Led_t led )
```

Check the LED's status.

Parameters

in	led	Pointer to LED data structure.
out	true	the LED is ON.
out	false	the LED is OFF.

Led_TurnOn()

Turn the LED $\ensuremath{\mathsf{ON}}.$

5.5 Main 73

Parameters

in <i>led</i>	Pointer to LED data structure.
---------------	--------------------------------

Led_TurnOff()

Turn the LED OFF.

Parameters

in led Pointer to LED	data structure.
-----------------------	-----------------

Led_Toggle()

Toggle the LED (i.e. $OFF \rightarrow ON \text{ or } ON \rightarrow OFF$).

Parameters

in	led	Pointer to LED data structure.
----	-----	--------------------------------

5.5 Main

Files

• file main.c

Main program file.

Enumerations

```
    enum { DAQ_VECTOR_NUM = INT_ADC0SS3 , PROC_VECTOR_NUM = INT_CAN0 , LCD_VECTOR_
        NUM = INT_TIMER1A }
    enum {
```

```
DAQ_FIFO_CAP = 3 , DAQ_ARRAY_LEN = DAQ_FIFO_CAP + 1 , QRS_FIFO_CAP = QRS_NUM_SAMP , QRS_ARRAY_LEN = QRS_FIFO_CAP + 1 , LCD_FIFO_1_CAP = DAQ_FIFO_CAP , LCD_ARRAY_1_LEN = LCD_FIFO_1_CAP + 1 , LCD_FIFO_2_CAP = 1 , LCD_ARRAY_2_LEN = LCD_FIFO_2_CAP + 1 }
```

```
    enum {
        LCD_TOP_LINE = (LCD_Y_MAX - 24) , LCD_WAVE_NUM_Y = LCD_TOP_LINE , LCD_WAVE_X_OFFSET
        = 0 , LCD_WAVE_Y_MIN = (0 + LCD_WAVE_X_OFFSET) ,
        LCD_WAVE_Y_MAX = (LCD_WAVE_NUM_Y + LCD_WAVE_X_OFFSET) }
```

Functions

static void DAQ_Handler (void)

Reads ADC output, converts to raw voltage sample, and sends to next FIFO.

• static void Processing_Handler (void)

Removes baseline drift and PLI from a sample, and moves it to the QRS/LCD FIFOs.

• static void LCD_Handler (void)

Applies a 0.5-40 [Hz] bandpass filter and plots the sample to the waveform.

• int main (void)

Main function for the project.

Variables

- static volatile Fifo_t **DAQ_Fifo** = 0
- static volatile uint32_t **DAQ_fifoBuffer** [DAQ_ARRAY_LEN] = { 0 }
- static volatile Fifo t QRS_Fifo = 0
- static volatile uint32_t QRS_fifoBuffer [QRS_ARRAY_LEN] = { 0 }
- static volatile bool QRS_bufferIsFull = false
- static volatile Fifo t LCD_Fifo1 = 0
- static volatile uint32_t LCD_fifoBuffer1 [LCD_ARRAY_1_LEN] = { 0 }
- static volatile Fifo t LCD Fifo2 = 0
- static volatile uint32_t LCD_fifoBuffer2 [LCD_ARRAY_2_LEN] = { 0 }
- static volatile bool LCD_heartRateIsReady = false
- static float32_t QRS_processingBuffer [QRS_ARRAY_LEN] = { 0 }
- static uint16_t LCD_prevSampleBuffer [LCD_X_MAX] = { 0 }

5.5.1 Detailed Description

5.5.2 Enumeration Type Documentation

anonymous enum

anonymous enum

Enumerator

DAQ_FIFO_CAP	capacity of DAQ's FIFO buffer
DAQ_ARRAY_LEN	actual size of underlying array
QRS_FIFO_CAP	capacity of QRS detector's FIFO buffer
QRS_ARRAY_LEN	actual size of underlying array
LCD_FIFO_1_CAP	capacity of LCD's waveform FIFO buffer
LCD_ARRAY_1_LEN	actual size of underlying array
LCD_FIFO_2_CAP	capacity of LCD's heart rate FIFO buffer
LCD_ARRAY_2_LEN	actual size of underlying array

anonymous enum

anonymous enum

5.5 Main 75

Enumerator

LCD_TOP_LINE	separates wavefrom from text
LCD_WAVE_NUM	num. of y-vals available for plotting waveform
_`	′

5.5.3 Function Documentation

DAQ_Handler()

```
static void DAQ_Handler ( void \ ) \ [static] \\
```

Reads ADC output, converts to raw voltage sample, and sends to next FIFO.

This ISR has a priority level of 1, is triggered when the ADC has finished capturing a sample, and also triggers the intermediate processing handler.

Precondition


Initialize the DAQ module.

Postcondition

The converted sample is placed in the DAQ FIFO, and the DAQ ISR is triggered.

See also

DAQ_Init(), Processing_Handler()

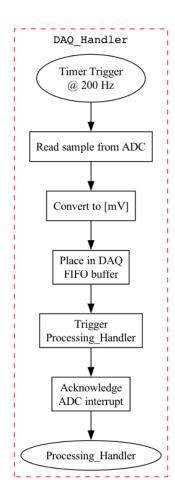

Processing_Handler()

Removes baseline drift and PLI from a sample, and moves it to the QRS/LCD FIFOs.


This ISR has a priority level of 1, is triggered by the DAQ ISR, and triggers the LCD Handler. It also notifies the superloop in main() when the QRS buffer is full.

Postcondition

The converted sample is placed in the DAQ FIFO, and the DAQ ISR is triggered.

See also

DAQ Handler(), main(), LCD Handler()

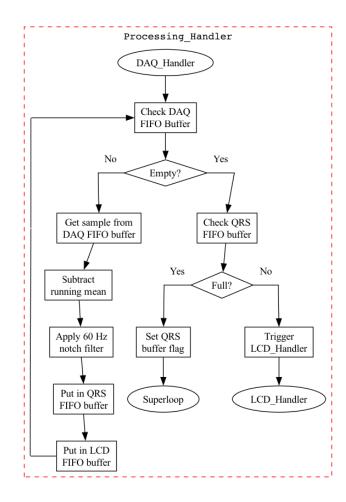

LCD_Handler()

Applies a 0.5-40 [Hz] bandpass filter and plots the sample to the waveform.

This ISR has a priority level of 1 and is triggered by the Processing ISR.

5.5 Main 77

Precondition

Initialize the LCD module.

Postcondition

The bandpass-filtered sample is plotted to the LCD.

See also

```
LCD_Init(), Processing_Handler()
```

main()

```
int main (
     void )
```

Main function for the project.

Moves the interrupt vector table to RAM; configures and enables the ISRs; initializes all modules and static variables; and performs QRS detection once the buffer has been filled.




Figure 1 Flowchart for the initialization phase.


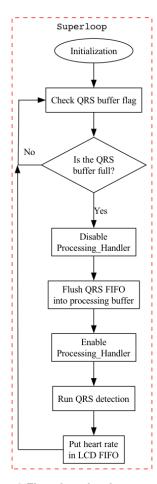


Figure 2 Flowchart for the superloop.

Here is the call graph for this function:

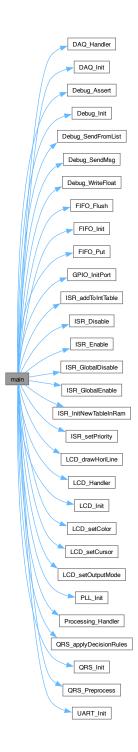

6 Data Structure Documentation

6.1 Fifo_t Struct Reference

Data Fields

volatile uint32_t * buffer

(pointer to) array to use as FIFO buffer

volatile uint32_t N

length of buffer

volatile uint32_t frontldx

idx of front of FIFO

volatile uint32_t backldx

idx of back of FIFO

The documentation for this struct was generated from the following file:

• Fifo.c

6.2 GpioPort_t Struct Reference

Data Fields

- const uint32_t BASE_ADDRESS
- const uint32_t DATA_REGISTER
- bool islnit

The documentation for this struct was generated from the following file:

• GPIO.c

6.3 Led_t Struct Reference

Data Fields

• GpioPort_t GPIO_PORT_PTR

pointer to GPIO port data structure

GPIO_Pin_t GPIO_PIN

GPIO pin number.

bool is_ON

state indicator

• bool islnit

The documentation for this struct was generated from the following file:

· Led.c

6.4 Timer_t Struct Reference

Data Fields

- const timerName_t NAME
- const uint32_t BASE_ADDR
- register_t controlRegister
- register_t intervalLoadRegister
- register_t interruptClearRegister
- · bool islnit

The documentation for this struct was generated from the following file:

• Timer.c

6.5 Uart_t Struct Reference

Data Fields

- const uint32 t BASE ADDRESS
- register_t const FLAG_R_ADDRESS
- GpioPort_t GPIO_PORT

pointer to GPIO port data structure

• GPIO_Pin_t RX_PIN_NUM

GPIO pin number.

GPIO_Pin_t TX_PIN_NUM

GPIO pin number.

· bool islnit

The documentation for this struct was generated from the following file:

• UART.c

7 File Documentation

7.1 DAQ.c File Reference

Source code for DAQ module.

```
#include "DAQ.h"
#include "ADC.h"
#include "Timer.h"
#include "NewAssert.h"
#include "arm_math_types.h"
#include "dsp/filtering_functions.h"
#include "tm4c123gh6pm.h"
#include <math.h>
#include <stdbool.h>
```

#include <stdint.h>

Include dependency graph for DAQ.c:



Macros

• #define SAMPLING PERIOD MS 5

sampling period in ms ($T_s=1/f_s$)

Functions

Initialization

void DAQ_Init (void)
 Initialize the data acquisition (DAQ) module.

Reading Input Data

uint16_t DAQ_readSample (void)

Read a sample from the ADC.

void DAQ_acknowledgeInterrupt (void)

Acknowledge the ADC interrupt.

Digital Filtering Functions

• float32 t DAQ NotchFilter (volatile float32 t xn)

Apply a 60 [Hz] notch filter to an input sample.

float32_t DAQ_BandpassFilter (volatile float32_t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

Digital Filters

• enum {

 $\label{eq:notch} \begin{subarray}{ll} NUM_STAGES_NOTCH = 0, & NUM_COEFFS_NOTCH = NUM_STAGES_NOTCH * 5, & STATE_BUFF_ $
 SIZE_NOTCH = NUM_STAGES_NOTCH * 4, & NUM_STAGES_BANDPASS = 4, & NUM_COEFFS_DAQ_BANDPASS = NUM_STAGES_BANDPASS * 5, & STATE_BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4 $
 \end{subarray}$

- typedef arm_biquad_casd_df1_inst_f32 Filter_t
- static const float32 t COEFFS NOTCH [NUM COEFFS NOTCH]
- static const float32_t COEFFS_BANDPASS [NUM_COEFFS_DAQ_BANDPASS]
- static float32_t stateBuffer_Notch [STATE_BUFF_SIZE_NOTCH]
- static const Filter_t notchFiltStruct = { NUM_STAGES_NOTCH, stateBuffer_Notch, COEFFS_NOTCH }
- static const Filter t *const notchFilter = ¬chFiltStruct
- static float32_t stateBuffer_Bandpass [STATE_BUFF_SIZE_BANDPASS]
- static const Filter t bandpassFiltStruct
- static const Filter_t *const bandpassFilter = &bandpassFiltStruct

7.2 DAQ.h File Reference 83

7.1.1 Detailed Description

Source code for DAQ module.


Author

Bryan McElvy


7.2 DAQ.h File Reference

Application software for handling data acquision (DAQ) functions.

```
#include "arm_math_types.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for DAQ.h:
```



This graph shows which files directly or indirectly include this file:



Macros

- #define DAQ_LOOKUP_MAX ((float32_t) 5.5f)
- #define DAQ_LOOKUP_MIN ((float32_t) (-5.5f))

Functions

Initialization

void DAQ_Init (void)
 Initialize the data acquisition (DAQ) module.

Reading Input Data

• uint16_t DAQ_readSample (void)

Read a sample from the ADC.

float32_t DAQ_convertToMilliVolts (uint16_t sample)

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

void DAQ_acknowledgeInterrupt (void)

Acknowledge the ADC interrupt.

Digital Filtering Functions

• float32 t DAQ NotchFilter (volatile float32 t xn)

Apply a 60 [Hz] notch filter to an input sample.

float32_t DAQ_BandpassFilter (volatile float32_t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

7.2.1 Detailed Description

Application software for handling data acquision (DAQ) functions.


Author

Bryan McElvy

7.3 DAQ_lookup.c File Reference

Source code for DAQ module's lookup table.

```
#include "DAQ.h"
#include "NewAssert.h"
#include "arm_math_types.h"
Include dependency graph for DAQ_lookup.c:
```

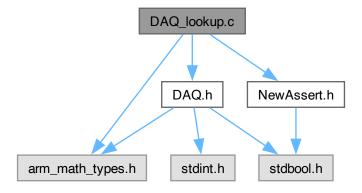

7.4 LCD.c File Reference 85

Functions

Reading Input Data

float32_t DAQ_convertToMilliVolts (uint16_t sample)
 Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

Variables

static const float32_t DAQ_LOOKUP_TABLE [4096]
 Lookup table for converting ADC data from unsigned 12-bit integer values to 32-bit floating point values.

7.3.1 Detailed Description

Source code for DAQ module's lookup table.

Author


Bryan McElvy

7.4 LCD.c File Reference

Source code for LCD module.

```
#include "LCD.h"
#include "ILI9341.h"
#include "Timer.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
```

Include dependency graph for LCD.c:

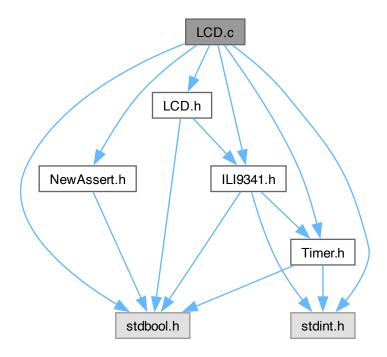

Macros

• #define CONVERT_INT_TO_ASCII(X) ((unsigned char) (X + 0x30))

Functions

```
• static void LCD_drawLine (uint16_t center, uint16_t lineWidth, bool is_horizontal)
```

Helper function for drawing straight lines.

· static void LCD_updateCursor (void)

Update the cursor for after writing text on the display.

• static void LCD_plotSample (uint16_t x, uint16_t y, LCD_Color_t color)

Plot a sample at coordinates (x, y).

Init./Config. Functions

```
    void LCD Init (void)
```

Initialize the LCD.

void LCD_setOutputMode (bool isOn)

Toggle display output ON or OFF (OFF by default).

void LCD_setX (uint16_t x1, uint16_t x2)

Set new x-coordinates to be written to. $0 \le x1 \le x2 \le X_{MAX}$.

void LCD_setY (uint16_t y1, uint16_t y2)

Set new y-coordinates to be written to. $0 \le y1 \le y2 \le Y_{MAX}$.

• void LCD_setColor (LCD_Color_t color)

Set the color value.

Drawing Functions

void LCD_Draw (void)

Draw on the LCD.

• void LCD_Fill (void)

Fill the display with a single color.

void LCD drawHoriLine (uint16 t yCenter, uint16 t lineWidth)

Draw a horizontal line across the entire display.

void LCD drawVertLine (uint16 t xCenter, uint16 t lineWidth)

Draw a vertical line across the entire display.

void LCD drawRectangle (uint16 t x1, uint16 t dx, uint16 t y1, uint16 t dy, bool isFilled)

Draw a rectangle of size $dx \times dy$ onto the display. The bottom-left corner will be located at (x1, y1).

Writing Functions

void LCD setCursor (uint16 t lineNum, uint16 t colNum)

Set the cursor to line x, column y.

- void LCD_writeChar (unsigned char inputChar)
- void LCD_writeStr (void *asciiString)
- void LCD_writeInt (int32 t num)
- void LCD_writeFloat (float num)

7.5 LCD.h File Reference 87

Variables

```
• struct {
    uint16_t x1
      starting x-value in range [0, x2]
    uint16_t x2
      ending x-value in range [0, NUM_ROWS)
    uint16 t y1
      starting y-value in range [0, y2]
    uint16_t y2
      ending x-value in range [0, NUM_COLS)
    uint16 t lineNum
    uint16_t colNum
    uint8_t R_val
      5 or 6-bit R value
    uint8_t G_val
      6-bit G value
    uint8_t B_val
      5 or 6-bit B value
    bool islnit
      if true, LCD has been initialized
  \} \ \text{lcd} = \{ \ 0 \ \}
```

• const uint8_t *const FONT_ARRAY [128]

7.4.1 Detailed Description

Source code for LCD module.

Author


Bryan McElvy

7.5 LCD.h File Reference


Header file for LCD module.

```
#include "ILI9341.h"
#include <stdbool.h>
```

Include dependency graph for LCD.h:

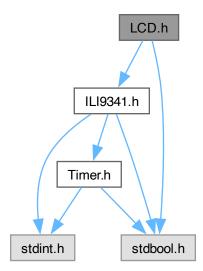

This graph shows which files directly or indirectly include this file:



Functions

Drawing Functions

- void LCD_Draw (void)
 - Draw on the LCD.
- void LCD_Fill (void)

Fill the display with a single color.

- void LCD_drawHoriLine (uint16_t yCenter, uint16_t lineWidth)
 - Draw a horizontal line across the entire display.
- void LCD_drawVertLine (uint16_t xCenter, uint16_t lineWidth)

Draw a vertical line across the entire display.

- void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool isFilled)
 - Draw a rectangle of size $dx \times dy$ onto the display. The bottom-left corner will be located at (x1, y1).
- static void **LCD_plotSample** (uint16_t x, uint16_t y, LCD_Color_t color)

7.6 QRS.c File Reference 89

Init./Config. Functions

```
• enum { LCD_X_MAX = ILI9341_NUM_ROWS - 1 , LCD_Y_MAX = ILI9341_NUM_COLS - 1 }
• enum LCD Color t {
 LCD\_BLACK = \sim (0x00) \& 0x07, LCD\_RED = \sim (0x04) \& 0x07, LCD\_GREEN = \sim (0x02) \& 0x07, LCD\_ \leftrightarrow (0x02) \& 0x07
  BLUE = \sim(0x01) & 0x07,
 LCD YELLOW = \sim (0x06) \& 0x07, LCD CYAN = \sim (0x03) \& 0x07, LCD PURPLE = \sim (0x05) \& 0x07,
 LCD_WHITE = \sim(0x07) & 0x07}

    void LCD Init (void)

     Initialize the LCD.

    void LCD_setOutputMode (bool isOn)

     Toggle display output ON or OFF (OFF by default).
void LCD_setX (uint16_t x1, uint16_t x2)
     Set new x-coordinates to be written to. 0 <= x1 <= x2 <= X_{MAX}.
void LCD_setY (uint16_t y1, uint16_t y2)
     Set new y-coordinates to be written to. 0 \le y1 \le y2 \le Y_{MAX}.

    void LCD_setColor (LCD_Color_t color)

     Set the color value.
```

Writing Functions

```
    enum { HEIGHT_CHAR = 8 , LEN_CHAR = 5 , NUM_LINES = 30 , NUM_COLS = 64 }
    void LCD_setCursor (uint16_t lineNum, uint16_t colNum)
```

Set the cursor to line x, column y.

- void LCD_writeChar (unsigned char inputChar)
- void LCD writeStr (void *asciiString)
- void LCD_writeInt (int32 t num)
- void LCD_writeFloat (float num)

7.5.1 Detailed Description

Header file for LCD module.

Author

Bryan McElvy

This module is essentially a higher-level interface to the ILI9341 module.


7.6 QRS.c File Reference

Source code for QRS detection module.

```
#include "QRS.h"
#include "arm_math_types.h"
#include "dsp/filtering_functions.h"
#include "dsp/statistics_functions.h"
#include <stdbool.h>
```

#include <stdint.h>

Include dependency graph for QRS.c:

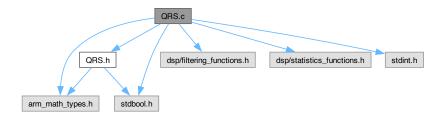

Macros

- #define QRS NUM FID MARKS 40
- #define FLOAT_COMPARE_TOLERANCE (float32_t)(1E-5f)
- #define **IS_GREATER**(X, Y) (bool) ((X Y) > FLOAT_COMPARE_TOLERANCE)
- #define IS_PEAK(X_MINUS_1, X, X_PLUS_1) (bool) (IS_GREATER(X, X_MINUS_1) && IS_GREATER(X, X_PLUS_1))

Functions

Implementation-specific Functions

- static uint8_t QRS_findFiducialMarks (const float32_t yn[], uint16_t fidMarkArray[])
 Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").
- static void QRS_initLevels (const float32_t yn[], float32_t *sigLvIPtr, float32_t *noiseLvIPtr)

 Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.
- static float32_t QRS_updateLevel (const float32_t peakAmplitude, float32_t level)

 Update the signal level (if a fiducial mark is a confirmed peak) or the noise level (if a fiducial mark is rejected).
- static float32_t QRS_updateThreshold (const float32_t signalLevel, const float32_t noiseLevel)

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

Interface Functions

void QRS_Init (void)

Initialize the QRS detector.

void QRS_Preprocess (const float32_t xn[], float32_t yn[])

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

- float32_t QRS_applyDecisionRules (const float32_t yn[])
 - Calculate the average heart rate (HR) using predetermined decision rules.
- float32_t QRS_runDetection (const float32_t xn[], float32_t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

7.6 QRS.c File Reference 91

Variables

```
    struct {
        bool isCalibrated
        float32_t signalLevel
            estimated signal level
        float32_t noiseLevel
        estimated noise level
        float32_t threshold
        amplitude threshold
        uint16_t fidMarkArray [QRS_NUM_FID_MARKS]
        float32_t utilityBuffer1 [QRS_NUM_FID_MARKS]
        array to hold fidMark indices
        float32_t utilityBuffer2 [QRS_NUM_FID_MARKS]
    } Detector = { false, 0.0f, 0.0f, 0.0f, { 0 }, { 0 }, { 0 }}
```

Digital Filters

• enum {

```
NUM_STAGES_BANDPASS = 4 , NUM_COEFF_HIGHPASS = NUM_STAGES_BANDPASS * 5 , STATE ← BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4 , NUM_COEFF_DERFILT = 5 ,

BLOCK_SIZE_DERFILT = 1 , STATE_BUFF_SIZE_DERFILT = NUM_COEFF_DERFILT + BLOCK_SIZE ← DERFILT - 1 , BLOCK_SIZE_MOVAVG = 1 , NUM_COEFF_MOVAVG = 10 ,

STATE_BUFF_SIZE_MOVAVG = NUM_COEFF_MOVAVG + BLOCK_SIZE_MOVAVG - 1 }
```

- typedef arm_biquad_casd_df1_inst_f32 IIR_Filt_t
- typedef arm_fir_instance_f32 FIR_Filt_t
- static const float32 t COEFF BANDPASS [NUM COEFF HIGHPASS]
- static const float32 t COEFF DERFILT [NUM COEFF DERFILT]
- static const float32_t COEFF_MOVAVG [NUM_COEFF_MOVAVG]
- static float32_t stateBuffer_bandPass [STATE_BUFF_SIZE_BANDPASS] = { 0 }
- static const IIR_Filt_t bandpassFiltStruct = { NUM_STAGES_BANDPASS, stateBuffer_bandPass, COEFF ← BANDPASS }
- static const IIR Filt t *const bandpassFilter = &bandpassFiltStruct
- static float32 t stateBuffer DerFilt [STATE BUFF SIZE DERFILT] = { 0 }
- static const FIR_Filt_t derivativeFiltStruct = { NUM_COEFF_DERFILT, stateBuffer_DerFilt, COEFF_
 DERFILT }
- static const FIR_Filt_t *const derivativeFilter = &derivativeFiltStruct
- static float32_t stateBuffer_MovingAvg [STATE_BUFF_SIZE_MOVAVG] = { 0 }
- static const FIR_Filt_t movingAvgFiltStruct = { NUM_COEFF_MOVAVG, stateBuffer_MovingAvg, COEFF← MOVAVG }
- static const FIR_Filt_t *const movingAverageFilter = &movingAvgFiltStruct

7.6.1 Detailed Description

Source code for QRS detection module.

Author


Bryan McElvy

The algorithm used in this file is a simplified version of the Pan-Tompkins algorithm. Specifically, this version currently only uses the integrated signal for the thresholding, and also completely omits the searchback and T wave discrimination parts of the original.


7.7 QRS.h File Reference

Header file for QRS detection module.

```
#include "arm_math_types.h"
#include <stdbool.h>
Include dependency graph for QRS.h:
```



This graph shows which files directly or indirectly include this file:



Macros

- #define QRS SAMP_FREQ ((uint32 t) 200)
- #define QRS_SAMP_PERIOD_SEC ((float32_t) 0.005f)
- #define QRS_NUM_SAMP ((uint16_t) (1 << 11))

Functions

Interface Functions

- void QRS Init (void)
 - Initialize the QRS detector.
- void QRS_Preprocess (const float32_t xn[], float32_t yn[])
 - Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.
- float32_t QRS_applyDecisionRules (const float32_t yn[])
 - Calculate the average heart rate (HR) using predetermined decision rules.
- float32_t QRS_runDetection (const float32_t xn[], float32_t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

7.8 Fifo.c File Reference 93

7.7.1 Detailed Description

Header file for QRS detection module.


Author

Bryan McElvy

7.8 Fifo.c File Reference

Source code for FIFO buffer module.

```
#include "FIFO.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Fifo.c:
```

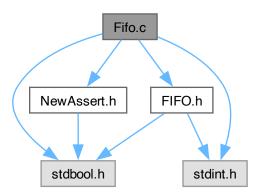

Data Structures

• struct Fifo t

Functions

Fifo_t FIFO_Init (volatile uint32_t buffer[], const uint32_t N)
 Initialize a FIFO buffer of length N.

Basic Operations

- void FIFO_Put (volatile Fifo_t fifo, const uint32_t val)
 Add a value to the end of the buffer.
- uint32_t FIFO_Get (volatile Fifo_t fifo)

 Remove the first value of the buffer.

void FIFO_TransferOne (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)
 Transfer a value from one FIFO buffer to another.

Bulk Removal

• void FIFO_Flush (volatile Fifo_t fifo, uint32_t outputBuffer[])

Empty the FIFO buffer's contents into an array.

void FIFO Reset (volatile Fifo t fifo)

Reset the FIFO buffer.

void FIFO_TransferAll (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer the contents of one FIFO buffer to another.

Peeking

• uint32_t FIFO_PeekOne (volatile Fifo_t fifo)

See the first element in the FIFO without removing it.

void FIFO_PeekAll (volatile Fifo_t fifo, uint32_t outputBuffer[])

See the FIFO buffer's contents without removing them.

Status Checks

• bool FIFO_isFull (volatile Fifo_t fifo)

Check if the FIFO buffer is full.

• bool FIFO_isEmpty (volatile Fifo_t fifo)

Check if the FIFO buffer is empty.

uint32_t FIFO_getCurrSize (volatile Fifo_t fifo)

Get the current size of the FIFO buffer.

Variables

```
• static FifoStruct_t fifoPool [FIFO_POOL_SIZE] = { 0 }
```

pre-allocated pool

• static uint8_t numFreeFifos = FIFO_POOL_SIZE

7.8.1 Detailed Description

Source code for FIFO buffer module.

Author


Bryan McElvy

7.9 Fifo.h File Reference 95


7.9 Fifo.h File Reference

Header file for FIFO buffer implementation.

```
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Fifo.h:
```

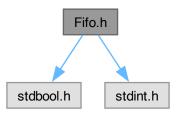

This graph shows which files directly or indirectly include this file:

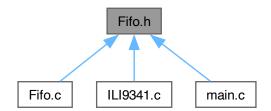

Macros

• #define FIFO_POOL_SIZE 5

Functions

Fifo_t FIFO_Init (volatile uint32_t buffer[], const uint32_t N)
 Initialize a FIFO buffer of length N.

Basic Operations

- void FIFO_Put (volatile Fifo_t fifo, const uint32_t val)

 Add a value to the end of the buffer.
- uint32_t FIFO_Get (volatile Fifo_t fifo)

Remove the first value of the buffer.

• void FIFO_TransferOne (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer a value from one FIFO buffer to another.

Bulk Removal

• void FIFO_Flush (volatile Fifo_t fifo, uint32_t outputBuffer[])

Empty the FIFO buffer's contents into an array.

void FIFO Reset (volatile Fifo t fifo)

Reset the FIFO buffer.

• void FIFO_TransferAll (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer the contents of one FIFO buffer to another.

Peeking

• uint32_t FIFO_PeekOne (volatile Fifo_t fifo)

See the first element in the FIFO without removing it.

void FIFO_PeekAll (volatile Fifo_t fifo, uint32_t outputBuffer[])

See the FIFO buffer's contents without removing them.

Status Checks

• bool FIFO_isFull (volatile Fifo_t fifo)

Check if the FIFO buffer is full.

• bool FIFO_isEmpty (volatile Fifo_t fifo)

Check if the FIFO buffer is empty.

uint32_t FIFO_getCurrSize (volatile Fifo_t fifo)

Get the current size of the FIFO buffer.

7.9.1 Detailed Description

Header file for FIFO buffer implementation.

Author


Bryan McElvy

7.10 NewAssert.c File Reference

Source code for custom ${\tt assert}$ implementation.

```
#include "NewAssert.h"
#include <stdbool.h>
Include dopped graph for NewAssert
```

Include dependency graph for NewAssert.c:

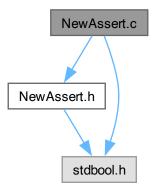

Functions

• void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

7.10.1 Detailed Description

Source code for custom ${\tt assert}$ implementation.

Author


Bryan McElvy

7.11 NewAssert.h File Reference

 $\label{thm:lementation} \textbf{Header file for custom} \ \texttt{assert implementation}.$

#include <stdbool.h>

Include dependency graph for NewAssert.h:

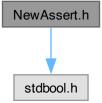

This graph shows which files directly or indirectly include this file:



Functions

· void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

7.11.1 Detailed Description

Header file for custom assert implementation.


Author

Bryan McElvy

7.12 ADC.c File Reference

Source code ffor analog-to-digital conversion (ADC) module.

```
#include "ADC.h"
#include "GPIO.h"
#include "tm4c123gh6pm.h"
Include dependency graph for ADC.c:
```

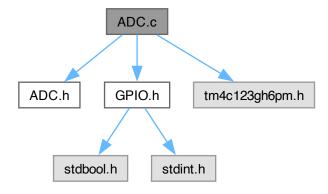

Functions

• void ADC_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

7.12.1 Detailed Description

Source code ffor analog-to-digital conversion (ADC) module.


Author

Bryan McElvy

7.13 ADC.h File Reference

Header file for analog-to-digital conversion (ADC) module.

This graph shows which files directly or indirectly include this file:



Functions

• void ADC_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

7.13.1 Detailed Description

Header file for analog-to-digital conversion (ADC) module.


Author

Bryan McElvy

7.14 GPIO.c File Reference

Source code for GPIO module.

```
#include "GPIO.h"
#include <NewAssert.h>
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for GPIO.c:
```

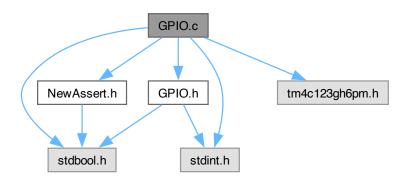

Data Structures

struct GpioPort_t

Macros

• #define GPIO NUM PORTS 6

Enumerations

- enum {
 - $$\label{eq:gpio_porta_base_address} \begin{split} & \textbf{GPIO_PORTA_BASE_ADDRESS} = (\textbf{uint}32_\textbf{t}) \ 0x40004000 \ , \ & \textbf{GPIO_PORTB_BASE_ADDRESS} = (\textbf{uint}32_\textbf{t}) \ 0x40006000 \ , \ & \textbf{GPIO_PORTD_BASE_} \\ & \textbf{ADDRESS} = (\textbf{uint}32_\textbf{t}) \ 0x40007000 \ , \ \end{split}$$
 - $\label{eq:gpio_porte_base_address} \textbf{GPIO_PORTF_BASE_ADDRESS} = (uint32_t) \ 0x40024000 \ , \ \textbf{GPIO_PORTF_BASE_ADDRESS} = (uint32_t) \ 0x40025000 \ \}$
- enum {
 - $\begin{aligned} &\textbf{GPIO_DATA}_\textbf{R_OFFSET} = (uint32_t) \ 0x03FC \ , \ &\textbf{GPIO_DIR}_\textbf{R_OFFSET} = (uint32_t) \ 0x0400 \ , \ &\textbf{GPIO_IS}_\textbf{R} \hookleftarrow \\ &\textbf{_OFFSET} = (uint32_t) \ 0x0404 \ , \ &\textbf{GPIO_IBE}_\textbf{R_OFFSET} = (uint32_t) \ 0x0408 \ , \end{aligned}$
 - $\label{eq:gpio_lev_r_offset} \begin{aligned} & \textbf{GPIO_IEV}_\textbf{R_OFFSET} = (uint32_t) \ 0x0410 \ , \ & \textbf{GPIO_ICR}_\textbf{R}_ \longleftrightarrow \\ & \textbf{OFFSET} = (uint32_t) \ 0x0410 \ , \ & \textbf{GPIO_AFSEL}_\textbf{R_OFFSET} = (uint32_t) \ 0x0420 \ , \end{aligned}$
 - $\begin{aligned} & \textbf{GPIO_DR2R_R_OFFSET} = (uint32_t) \ 0x0500 \ , \ & \textbf{GPIO_DR4R_R_OFFSET} = (uint32_t) \ 0x0504 \ , \ & \textbf{GPIO_} \\ & \textbf{DR8R_R_OFFSET} = (uint32_t) \ 0x0508 \ , \ & \textbf{GPIO_PUR_R_OFFSET} = (uint32_t) \ 0x0510 \ , \end{aligned}$
 - $\label{eq:gpio_pdr_roffset} \begin{aligned} & \textbf{GPIO_PDR_R_OFFSET} = (uint32_t) \ 0x0518 \ , \ & \textbf{GPIO_DEN_R_OFFSET} = (uint32_t) \ 0x051C \ , \ & \textbf{GPIO_} \\ & \textbf{LOCK_R_OFFSET} = (uint32_t) \ 0x0520 \ , \ & \textbf{GPIO_COMMIT_R_OFFSET} = (uint32_t) \ 0x0524 \ , \end{aligned}$
 - $\textbf{GPIO_AMSEL_R_OFFSET} = (uint32_t) \ 0x0528 \ , \ \textbf{GPIO_PCTL_R_OFFSET} = (uint32_t) \ 0x052C \ \}$

Functions

GpioPort_t GPIO_InitPort (GPIO_PortName_t portName)

Initialize a GPIO Port and return a pointer to its struct.

bool GPIO_isPortInit (GpioPort_t gpioPort)

Check if the GPIO port is initialized.

uint32_t GPIO_getBaseAddr (GpioPort_t gpioPort)

Get the base address of a GPIO port.

• void GPIO_ConfigDirOutput (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

void GPIO_ConfigDirInput (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

void GPIO_ConfigPullUp (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Activate the specified pins' internal pull-up resistors.

void GPIO_ConfigPullDown (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Activate the specified pins' internal pull-down resistors.

void GPIO ConfigDriveStrength (GpioPort t gpioPort, GPIO Pin t pinMask, uint8 t drive mA)

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

void GPIO EnableDigital (GpioPort t gpioPort, GPIO Pin t pinMask)

Enable digital I/O for the specified pins.

void GPIO_DisableDigital (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Disable digital I/O for the specified pins.

• void GPIO_ConfigInterrupts_Edge (GpioPort_t gpioPort, GPIO_Pin_t pinMask, bool risingEdge)

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

• void GPIO_ConfigInterrupts_BothEdges (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

void GPIO_ConfigInterrupts_LevelTrig (GpioPort_t gpioPort, GPIO_Pin_t pinMask, bool highLevel)

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

· void GPIO ConfigNVIC (GpioPort t gpioPort, uint8 t priority)

Configure interrupts for the selected port in the NVIC.

uint32_t GPIO_getDataRegister (GpioPort_t gpioPort)

Get the address of a GPIO port's data register.

• uint8_t GPIO_ReadPins (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Read from the specified GPIO pin.

void GPIO_WriteHigh (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Write a 1 to the specified GPIO pins.

· void GPIO WriteLow (GpioPort t gpioPort, GPIO Pin t pinMask)

Write a 0 to the specified GPIO pins.

void GPIO_Toggle (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Toggle the specified GPIO pins.

• void GPIO_ConfigAltMode (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Activate the alternate mode for the specified pins.

• void GPIO_ConfigPortCtrl (GpioPort_t gpioPort, GPIO_Pin_t pinMask, uint8_t fieldEncoding)

Specify the alternate mode to use for the specified pins.

void GPIO ConfigAnalog (GpioPort t gpioPort, GPIO Pin t pinMask)

Activate analog mode for the specified GPIO pins.

Variables

• static GpioPortStruct_t GPIO_PTR_ARR [6]

7.14.1 Detailed Description

Source code for GPIO module.

Author

Bryan McElvy

7.14.2 Function Documentation

GPIO_InitPort()

Initialize a GPIO Port and return a pointer to its struct.

Parameters

in	portName	Name of the chosen port.
----	----------	--------------------------

Returns

GPIO_Port_t* Pointer to the GPIO port's struct.

GPIO_isPortInit()

Check if the GPIO port is initialized.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
out	true	The GPIO port is initialized.
out	false	The GPIO port has not been initialized.

GPIO_getBaseAddr()

Get the base address of a GPIO port.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
out	baseAddress	Base address of the GPIO port.

GPIO_ConfigDirOutput()

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

Parameters

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	bitMask	Bit mask corresponding to the intended OUTPUT pin(s).

GPIO_ConfigDirInput()

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended INPUT pin(s).

GPIO_ConfigPullUp()

Activate the specified pins' internal pull-up resistors.

Parameters

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigPullDown()

Activate the specified pins' internal pull-down resistors.

Parameters

ir	gpioPort	Pointer to the specified GPIO port.
ir	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigDriveStrength()

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	drive_mA	Drive strength in [mA]. Should be 2, 4, or 8 [mA].

GPIO_EnableDigital()

Enable digital I/O for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_DisableDigital()

Disable digital I/O for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigInterrupts_Edge()

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	risingEdge	true for rising edge, false for falling edge

GPIO_ConfigInterrupts_BothEdges()

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigInterrupts_LevelTrig()

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	highLevel	true for high level, false for low level

GPIO_ConfigNVIC()

Configure interrupts for the selected port in the NVIC.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	priority	Priority number between 0 (highest) and 7 (lowest).

GPIO_getDataRegister()

Get the address of a GPIO port's data register.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
out	dataRegister	Address of the GPIO port's data register.

GPIO_ReadPins()

Read from the specified GPIO pin.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_WriteHigh()

Write a 1 to the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_WriteLow()

Write a $\ 0$ to the specified GPIO pins.

Parameters

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_Toggle()

Toggle the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigAltMode()

Activate the alternate mode for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigPortCtrl()

Specify the alternate mode to use for the specified pins.

Parameters

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).
Ī	in	fieldEncoding	Number corresponding to intended alternate mode.

GPIO_ConfigAnalog()

Activate analog mode for the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

7.14.3 Variable Documentation

GPIO_PTR_ARR


```
GpioPortStruct_t GPIO_PTR_ARR[6] [static]
```

Initial value:


7.15 GPIO.h File Reference

Header file for general-purpose input/output (GPIO) device driver.

```
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for GPIO.h:
```



This graph shows which files directly or indirectly include this file:

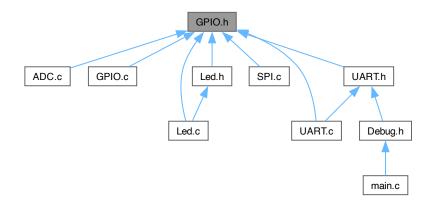

Enumerations

```
enum GPIO_PortName_t {
        A , B , C , D ,
        E , F }
enum GPIO_Pin_t {
        GPIO_PIN0 = ((uint8_t) 1) , GPIO_PIN1 = ((uint8_t) (1 << 1)) , GPIO_PIN2 = ((uint8_t) (1 << 2)) , GPIO 
        __PIN3 = ((uint8_t) (1 << 3)) ,
        GPIO_PIN4 = ((uint8_t) (1 << 4)) , GPIO_PIN5 = ((uint8_t) (1 << 5)) , GPIO_PIN6 = ((uint8_t) (1 << 6)) ,
        GPIO_PIN7 = ((uint8_t) (1 << 7)) ,
        GPIO_ALL_PINS = ((uint8_t) (0xFF)) }</li>
enum {
        LED_RED = GPIO_PIN1 , LED_GREEN = GPIO_PIN3 , LED_BLUE = GPIO_PIN2 , LED_YELLOW = (LED_RED + LED_GREEN) ,
        LED_CYAN = (LED_BLUE + LED_GREEN) , LED_PURPLE = (LED_RED + LED_BLUE) , LED_WHITE = (LED_RED + LED_BLUE + LED_GREEN) }
```

Functions

GpioPort_t GPIO_InitPort (GPIO_PortName_t portName)

Initialize a GPIO Port and return a pointer to its struct.

uint32_t GPIO_getBaseAddr (GpioPort_t gpioPort)

Get the base address of a GPIO port.

• bool GPIO_isPortInit (GpioPort_t gpioPort)

Check if the GPIO port is initialized.

• void GPIO ConfigDirOutput (GpioPort t gpioPort, GPIO Pin t pinMask)

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

void GPIO_ConfigDirInput (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

void GPIO_ConfigPullUp (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Activate the specified pins' internal pull-up resistors.

• void GPIO_ConfigPullDown (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Activate the specified pins' internal pull-down resistors.

void GPIO ConfigDriveStrength (GpioPort t gpioPort, GPIO Pin t pinMask, uint8 t drive mA)

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

• void GPIO EnableDigital (GpioPort t gpioPort, GPIO Pin t pinMask)

Enable digital I/O for the specified pins.

void GPIO_DisableDigital (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Disable digital I/O for the specified pins.

void GPIO_ConfigInterrupts_Edge (GpioPort_t gpioPort, GPIO_Pin_t pinMask, bool risingEdge)

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

• void GPIO_ConfigInterrupts_BothEdges (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

void GPIO ConfigInterrupts LevelTrig (GpioPort t gpioPort, GPIO Pin t pinMask, bool highLevel)

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

• void GPIO_ConfigNVIC (GpioPort_t gpioPort, uint8_t priority)

Configure interrupts for the selected port in the NVIC.

uint32_t GPIO_getDataRegister (GpioPort_t gpioPort)

Get the address of a GPIO port's data register.

• uint8_t GPIO_ReadPins (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Read from the specified GPIO pin.

void GPIO_WriteHigh (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Write a 1 to the specified GPIO pins.

• void GPIO WriteLow (GpioPort t gpioPort, GPIO Pin t pinMask)

Write a 0 to the specified GPIO pins.

void GPIO_Toggle (GpioPort_t gpioPort, GPIO_Pin_t pinMask)

Toggle the specified GPIO pins.

void GPIO ConfigAltMode (GpioPort t gpioPort, GPIO Pin t pinMask)

Activate the alternate mode for the specified pins.

• void GPIO_ConfigPortCtrl (GpioPort_t gpioPort, GPIO_Pin_t pinMask, uint8_t fieldEncoding)

Specify the alternate mode to use for the specified pins.

void GPIO ConfigAnalog (GpioPort t gpioPort, GPIO Pin t pinMask)

Activate analog mode for the specified GPIO pins.

7.15.1 Detailed Description

Header file for general-purpose input/output (GPIO) device driver.

Author

Bryan McElvy

7.15.2 Function Documentation

GPIO_InitPort()

Initialize a GPIO Port and return a pointer to its struct.

Parameters

	in	portName	Name of the chosen port.
--	----	----------	--------------------------

Returns

GPIO_Port_t* Pointer to the GPIO port's struct.

GPIO_getBaseAddr()

Get the base address of a GPIO port.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
out	baseAddress	Base address of the GPIO port.

GPIO_isPortInit()

Check if the GPIO port is initialized.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
out	true	The GPIO port is initialized.
out	false	The GPIO port has not been initialized.

Generated by Doxygen

GPIO_ConfigDirOutput()

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended OUTPUT pin(s).

GPIO_ConfigDirInput()

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended INPUT pin(s).

GPIO_ConfigPullUp()

Activate the specified pins' internal pull-up resistors.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigPullDown()

Activate the specified pins' internal pull-down resistors.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigDriveStrength()

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	drive_mA	Drive strength in [mA]. Should be 2, 4, or 8 [mA].

GPIO_EnableDigital()

Enable digital I/O for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_DisableDigital()

Disable digital I/O for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigInterrupts_Edge()

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	risingEdge	true for rising edge, false for falling edge

GPIO_ConfigInterrupts_BothEdges()

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

Parameters

in	gpioPort	Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).	

GPIO_ConfigInterrupts_LevelTrig()

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

Parameters

in	gpioPort	Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).	
in	highLevel	true for high level, false for low level	

GPIO_ConfigNVIC()

Configure interrupts for the selected port in the NVIC.

Parameters

in	n gpioPort Pointer to the specified GPIO port.	
in	priority	Priority number between 0 (highest) and 7 (lowest).

GPIO_getDataRegister()

Get the address of a GPIO port's data register.

Parameters

	in <i>gpioPort</i>		Pointer to the specified GPIO port.	
ſ	out	dataRegister	Address of the GPIO port's data register.	

GPIO_ReadPins()

Read from the specified GPIO pin.

Parameters

in	gpioPort	oPort Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).	

GPIO_WriteHigh()

Write a 1 to the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_WriteLow()

Write a 0 to the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_Toggle()

Toggle the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigAltMode()

Activate the alternate mode for the specified pins.

Parameters

in	gpioPort Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigPortCtrl()

Specify the alternate mode to use for the specified pins.

7.16 ISR.c File Reference 119

Parameters

ſ	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).
Ī	in	fieldEncoding	Number corresponding to intended alternate mode.

GPIO_ConfigAnalog()

Activate analog mode for the specified GPIO pins.

Parameters


in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

7.16 ISR.c File Reference

Source code for interrupt service routine (ISR) configuration module.

```
#include "ISR.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Include dependency graph for ISR.c:

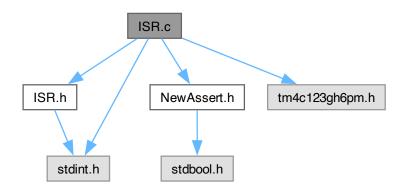

Macros

- #define VECTOR_TABLE_BASE_ADDR ((uint32_t) 0x00000000)
- #define VECTOR_TABLE_SIZE ((uint32_t) 155)
- #define VECTOR_TABLE_ALIGNMENT ((uint32 t) (1 << 10))
- #define NVIC_EN_BASE_ADDR ((uint32_t) 0xE000E100)
- #define NVIC DIS BASE ADDR ((uint32 t) 0xE000E180)
- #define NVIC_PRI_BASE_ADDR ((uint32_t) 0xE000E400)
- #define NVIC_UNPEND_BASE_ADDR ((uint32_t) 0xE000E280)

Functions

- static void ISR_setStatus (const uint8_t vectorNum, const bool isEnabled)
- void ISR GlobalDisable (void)

Disable all interrupts globally.

void ISR GlobalEnable (void)

Enable all interrupts globally.

- static ISR_t newVectorTable[VECTOR_TABLE_SIZE] __attribute__ ((aligned(VECTOR_TABLE_← ALIGNMENT)))
- void ISR_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR addToIntTable (ISR t isr, const uint8 t vectorNum)

Add an ISR to the interrupt table.

void ISR_setPriority (const uint8_t vectorNum, const uint8_t priority)

Set the priority for an interrupt.

• void ISR Enable (const uint8 t vectorNum)

Enable an interrupt in the NVIC.

void ISR_Disable (const uint8_t vectorNum)

Disable an interrupt in the NVIC.

void ISR_triggerInterrupt (const uint8_t vectorNum)

Generate a software-generated interrupt (SGI).

Variables

- static bool interruptsAreEnabled = true
- void(*const interruptVectorTable [])(void)
- static bool isTableCopiedToRam = false

7.16.1 Detailed Description

Source code for interrupt service routine (ISR) configuration module.

Author

Bryan McElvy

7.17 ISR.h File Reference 121


7.17 ISR.h File Reference

Header file for interrupt service routine (ISR) configuration module.

#include <stdint.h>
Include dependency graph for ISR.h:



This graph shows which files directly or indirectly include this file:



Typedefs

typedef void(* ISR_t) (void)

Type definition for function pointers representing ISRs.

Functions

• void ISR_GlobalDisable (void)

Disable all interrupts globally.

void ISR_GlobalEnable (void)

Enable all interrupts globally.

void ISR InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR_addToIntTable (ISR_t isr, const uint8_t vectorNum)

Add an ISR to the interrupt table.

void ISR_setPriority (const uint8_t vectorNum, const uint8_t priority)

Set the priority for an interrupt.

void ISR_Enable (const uint8_t vectorNum)

Enable an interrupt in the NVIC.

void ISR_Disable (const uint8_t vectorNum)

Disable an interrupt in the NVIC.

void ISR_triggerInterrupt (const uint8_t vectorNum)

Generate a software-generated interrupt (SGI).

7.17.1 Detailed Description

Header file for interrupt service routine (ISR) configuration module.


Author

Bryan McElvy

7.18 PLL.c File Reference

Implementation details for phase-lock-loop (PLL) functions.

```
#include "PLL.h"
#include "tm4c123gh6pm.h"
Include dependency graph for PLL.c:
```



Functions

void PLL_Init (void)

Initialize the phase-locked-loop to change the bus frequency.

7.18.1 Detailed Description

Implementation details for phase-lock-loop (PLL) functions.

Author


Bryan McElvy

7.19 PLL.h File Reference 123

7.19 PLL.h File Reference

Driver module for activating the phase-locked-loop (PLL).

This graph shows which files directly or indirectly include this file:

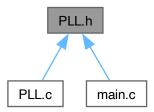

Functions

void PLL_Init (void)
 Initialize the phase-locked-loop to change the bus frequency.

7.19.1 Detailed Description

Driver module for activating the phase-locked-loop (PLL).

Author


Bryan McElvy

7.20 SPI.c File Reference

Source code for serial peripheral interface (SPI) module.

```
#include "SPI.h"
#include "GPIO.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
```

#include <stdint.h>
Include dependency graph for SPI.c:

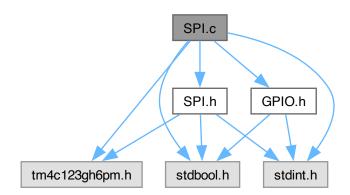

Macros

- #define SPI_SET_DC() (GPIO_PORTA_DATA_R |= 0x40)
- #define **SPI CLEAR DC**() (GPIO PORTA DATA R $\&=\sim(0x40)$)
- #define SPI_IS_BUSY (SSI0_SR_R & 0x10)
- #define SPI_TX_ISNOTFULL (SSI0_SR_R & 0x02)

Enumerations

• enum {

 $SPI_CLK_PIN = GPIO_PIN2$, $SPI_CS_PIN = GPIO_PIN3$, $SPI_RX_PIN = GPIO_PIN4$, $SPI_TX_PIN = GPIO_PIN5$,

$$\label{eq:spi_def} \begin{split} & \textbf{SPI_DC_PIN} = \texttt{GPIO_PIN6} \;,\; \textbf{SPI_RESET_PIN} = \texttt{GPIO_PIN7} \;,\; \textbf{SPI_SSI0_PINS} = \texttt{(SPI_CLK_PIN} \mid \texttt{SPI}_\leftrightarrow \texttt{CS_PIN} \mid \texttt{SPI_RX_PIN} \mid \texttt{SPI_TX_PIN)} \;,\; \textbf{SPI_GPIO_PINS} = \texttt{(SPI_DC_PIN} \mid \texttt{SPI_RESET_PIN)} \;,\; \textbf{SPI_ALL_PINS} = \texttt{(SPI_SSI0_PINS} \mid \texttt{SPI_GPIO_PINS)} \; \end{split}$$

Functions

void SPI_Init (void)

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

• uint8 t SPI Read (void)

Read data from the serial port.

void SPI_WriteCmd (uint8_t cmd)

Write a command to the serial port.

void SPI_WriteData (uint8_t data)

Write data to the serial port.

7.21 SPI.h File Reference 125

7.20.1 Detailed Description

Source code for serial peripheral interface (SPI) module.


Author

Bryan McElvy


7.21 SPI.h File Reference

Header file for serial peripheral interface (SPI) module.

```
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for SPI.h:
```



This graph shows which files directly or indirectly include this file:



Macros

- #define **SPI_CLEAR_RESET**() (GPIO_PORTA_DATA_R &= \sim (0x80))
- #define **SPI_SET_RESET**() (GPIO_PORTA_DATA_R |= 0x80)

Functions

```
    void SPI_Init (void)
```

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

uint8_t SPI_Read (void)

Read data from the serial port.

void SPI_WriteCmd (uint8_t cmd)

Write a command to the serial port.

void SPI_WriteData (uint8_t data)

Write data to the serial port.

7.21.1 Detailed Description

Header file for serial peripheral interface (SPI) module.

Author


Bryan McElvy

7.22 SysTick.c File Reference

Implementation details for SysTick functions.

```
#include "SysTick.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Include dependency graph for SysTick.c:

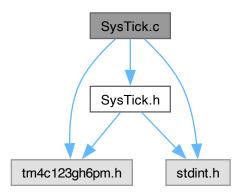

Functions

• void SysTick_Timer_Init (void)

Initialize SysTick for timing purposes.

void SysTick_Wait1ms (uint32_t delay_ms)

Delay for specified amount of time in [ms]. Assumes f_bus = 80[MHz].

void SysTick_Interrupt_Init (uint32_t time_ms)

Initialize SysTick for interrupts.

7.22.1 Detailed Description

Implementation details for SysTick functions.


Author

Bryan McElvy


7.23 SysTick.h File Reference

Driver module for using SysTick-based timing and/or interrupts.

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for SysTick.h:
```

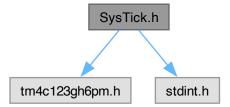

This graph shows which files directly or indirectly include this file:



Functions

- void SysTick_Timer_Init (void)
 - Initialize SysTick for timing purposes.
- void SysTick_Wait1ms (uint32_t delay_ms)

Delay for specified amount of time in [ms]. Assumes f_bus = 80[MHz].

void SysTick_Interrupt_Init (uint32_t time_ms)

Initialize SysTick for interrupts.

7.23.1 Detailed Description

Driver module for using SysTick-based timing and/or interrupts.


Author

Bryan McElvy

7.24 Timer.c File Reference

Source code for Timer module.

```
#include "Timer.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Timer.c:
```

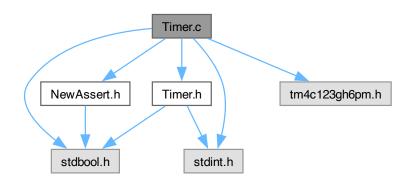

Data Structures

struct Timer_t

Enumerations

```
    enum {
        TIMERO_BASE = 0x40030000 , TIMER1_BASE = 0x40031000 , TIMER2_BASE = 0x40032000 , TIMER3
        __BASE = 0x40033000 ,
        TIMER4_BASE = 0x40034000 , TIMER5_BASE = 0x40035000 }
        enum REGISTER_OFFSETS {
            CONFIG = 0x00 , MODE = 0x04 , CTRL = 0x0C , INT_MASK = 0x18 ,
            INT_CLEAR = 0x24 , INTERVAL = 0x28 , VALUE = 0x054 }
```

Functions

Timer_t Timer_Init (timerName_t timerName)

Initialize a hardware timer.

void Timer_Deinit (Timer_t timer)

De-initialize a hardware timer.

timerName_t Timer_getName (Timer_t timer)

Get the name of a timer object.

bool Timer_isInit (Timer_t timer)

Check if a timer object is initialized.

• void Timer_setMode (Timer_t timer, timerMode_t timerMode, timerDirection_t timerDirection)

Set the mode for the timer.

void Timer_enableAdcTrigger (Timer_t timer)

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

void Timer_disableAdcTrigger (Timer_t timer)

Disable ADC sample capture on timeout.

void Timer_enableInterruptOnTimeout (Timer_t timer)

Set the timer to trigger an interrupt on timeout.

void Timer disableInterruptOnTimeout (Timer t timer)

Stop the timer from triggering interrupts on timeout.

void Timer_clearInterruptFlag (Timer_t timer)

Clear the timer's interrupt flag to acknowledge the interrupt.

void Timer_setInterval_ms (Timer_t timer, uint32_t time_ms)

Set the interval to use.

- uint32_t Timer_getCurrentValue (Timer_t timer)
- void Timer_Start (Timer_t timer)

Start the timer.

void Timer_Stop (Timer_t timer)

Stop the timer.

• bool Timer_isCounting (Timer_t timer)

Check if the timer is currently counting.

void Timer_Wait1ms (Timer_t timer, uint32_t time_ms)

Initiate a time delay.

Variables

• static TimerStruct t TIMER POOL [6]

7.24.1 Detailed Description

Source code for Timer module.


Author

Bryan McElvy


7.25 Timer.h File Reference

Device driver for general-purpose timer modules.

```
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Timer.h:
```



This graph shows which files directly or indirectly include this file:

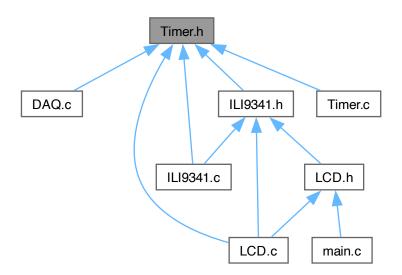

Enumerations

- enum timerName_t {TIMER0 , TIMER1 , TIMER2 , TIMER3 ,TIMER4 , TIMER5 }
- enum timerMode_t { ONESHOT , PERIODIC }
- enum timerDirection_t { UP , DOWN }

Functions

Timer_t Timer_Init (timerName_t timerName)

Initialize a hardware timer.

void Timer_Deinit (Timer_t timer)

De-initialize a hardware timer.

timerName_t Timer_getName (Timer_t timer)

Get the name of a timer object.

bool Timer_isInit (Timer_t timer)

Check if a timer object is initialized.

• void Timer_setMode (Timer_t timer, timerMode_t timerMode, timerDirection_t timerDirection)

Set the mode for the timer.

void Timer_enableAdcTrigger (Timer_t timer)

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

void Timer_disableAdcTrigger (Timer_t timer)

Disable ADC sample capture on timeout.

void Timer_enableInterruptOnTimeout (Timer_t timer)

Set the timer to trigger an interrupt on timeout.

void Timer disableInterruptOnTimeout (Timer t timer)

Stop the timer from triggering interrupts on timeout.

void Timer_clearInterruptFlag (Timer_t timer)

Clear the timer's interrupt flag to acknowledge the interrupt.

void Timer_setInterval_ms (Timer_t timer, uint32_t time_ms)

Set the interval to use.

- uint32_t Timer_getCurrentValue (Timer_t timer)
- void Timer_Start (Timer_t timer)

Start the timer.

void Timer_Stop (Timer_t timer)

Stop the timer.

• bool Timer_isCounting (Timer_t timer)

Check if the timer is currently counting.

void Timer_Wait1ms (Timer_t timer, uint32_t time_ms)

Initiate a time delay.

7.25.1 Detailed Description

Device driver for general-purpose timer modules.


Author

Bryan McElvy

7.26 UART.c File Reference

Source code for UART module.

```
#include "UART.h"
#include "GPIO.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for UART.c:
```

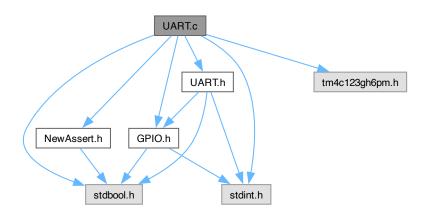

Data Structures

struct Uart_t

Macros

• #define ASCII_CONVERSION 0x30

Enumerations

- enum GPIO_BASE_ADDRESSES {
 GPIO_PORTA_BASE = (uint32_t) 0x40004000 , GPIO_PORTB_BASE = (uint32_t) 0x40005000 , GPIO_
 PORTC_BASE = (uint32_t) 0x40006000 , GPIO_PORTD_BASE = (uint32_t) 0x40007000 ,
 GPIO_PORTE_BASE = (uint32_t) 0x40024000 , GPIO_PORTF_BASE = (uint32_t) 0x40025000 }
- enum UART_BASE_ADDRESSES {
 UART0_BASE = (uint32_t) 0x4000C000 , UART1_BASE = (uint32_t) 0x4000D000 , UART2_BASE = (uint32_t) 0x4000E000 , UART3_BASE = (uint32_t) 0x4000F000 ,
 UART4_BASE = (uint32_t) 0x40010000 , UART5_BASE = (uint32_t) 0x40011000 , UART6_BASE = (uint32_t) 0x40012000 , UART7_BASE = (uint32_t) 0x40013000 }
- enum UART_REG_OFFSETS {
 UART_FR_R_OFFSET = (uint32_t) 0x18 , IBRD_R_OFFSET = (uint32_t) 0x24 , FBRD_R_OFFSET = (uint32_t) 0x28 , LCRH_R_OFFSET = (uint32_t) 0x2C ,
 CTL_R_OFFSET = (uint32_t) 0x30 , CC_R_OFFSET = (uint32_t) 0xFC8 }

Functions

• Uart_t UART_Init (GpioPort_t port, uartNum_t uartNum)

Initialize the specified UART peripheral.

bool UART_isInit (Uart_t uart)

Check if the UART object is initialized.

• unsigned char UART_ReadChar (Uart_t uart)

Read a single ASCII character from the UART.

void UART_WriteChar (Uart_t uart, unsigned char inputChar)

Write a single character to the UART.

• void UART_WriteStr (Uart_t uart, void *inputStr)

Write a C string to the UART.

• void UART_WriteInt (Uart_t uart, int32_t n)

Write a 32-bit unsigned integer the UART.

• void UART_WriteFloat (Uart_t uart, double n, uint8_t numDecimals)

Write a floating-point number the UART.

Variables

• static UartStruct_t UART_ARR [8]

7.26.1 Detailed Description

Source code for UART module.

Author


Bryan McElvy

7.27 UART.h File Reference


Driver module for serial communication via UART0 and UART 1.

```
#include "GPIO.h"
#include <stdbool.h>
#include <stdint.h>
```

Include dependency graph for UART.h:

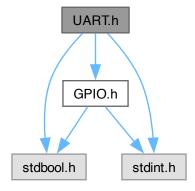

This graph shows which files directly or indirectly include this file:

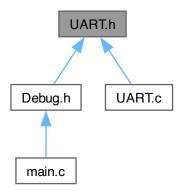

Enumerations

```
    enum uartNum_t {
    UART0 , UART1 , UART2 , UART3 ,
    UART4 , UART5 , UART6 , UART7 }
```

Functions

Uart_t UART_Init (GpioPort_t port, uartNum_t uartNum)

Initialize the specified UART peripheral.

bool UART_isInit (Uart_t uart)

Check if the UART object is initialized.

unsigned char UART ReadChar (Uart t uart)

Read a single ASCII character from the UART.

· void UART_WriteChar (Uart_t uart, unsigned char inputChar)

Write a single character to the UART.

• void UART_WriteStr (Uart_t uart, void *inputStr)

Write a C string to the UART.

• void UART_WriteInt (Uart_t uart, int32_t n)

Write a 32-bit unsigned integer the UART.

• void UART_WriteFloat (Uart_t uart, double n, uint8_t numDecimals)

Write a floating-point number the UART.

7.27.1 Detailed Description

Driver module for serial communication via UART0 and UART 1.

Author


Bryan McElvy

```
UARTO uses PAO and PA1, which are not broken out but can connect to a PC's serial port via USB.  
UART1 uses PBO (Rx) and PB1 (Tx), which are broken out but do not connect to a serial port.
```

7.28 main.c File Reference

Main program file.

```
#include "DAQ.h"
#include "Debug.h"
#include "LCD.h"
#include "QRS.h"
#include "FIFO.h"
#include "ISR.h"
#include "PLL.h"
#include "arm_math_types.h"
#include <math.h>
#include <stdbool.h>
#include dependency graph for main.c:
```

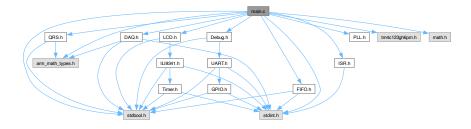

Enumerations

```
• enum { DAQ\_VECTOR\_NUM = INT\_ADCOSS3 , PROC\_VECTOR\_NUM = INT\_CANO , LCD\_VECTOR\_ \leftrightarrow NUM = INT\_TIMER1A }
```

```
    enum {
        DAQ_FIFO_CAP = 3 , DAQ_ARRAY_LEN = DAQ_FIFO_CAP + 1 , QRS_FIFO_CAP = QRS_NUM_SAMP ,
        QRS_ARRAY_LEN = QRS_FIFO_CAP + 1 ,
        LCD_FIFO_1_CAP = DAQ_FIFO_CAP , LCD_ARRAY_1_LEN = LCD_FIFO_1_CAP + 1 , LCD_FIFO_2_CAP
        = 1 , LCD_ARRAY_2_LEN = LCD_FIFO_2_CAP + 1 }
```

enum {
 LCD_TOP_LINE = (LCD_Y_MAX - 24) , LCD_WAVE_NUM_Y = LCD_TOP_LINE , LCD_WAVE_X_OFFSET
 = 0 , LCD_WAVE_Y_MIN = (0 + LCD_WAVE_X_OFFSET) ,
 LCD_WAVE_Y_MAX = (LCD_WAVE_NUM_Y + LCD_WAVE_X_OFFSET) }

Functions

static void DAQ_Handler (void)

Reads ADC output, converts to raw voltage sample, and sends to next FIFO.

• static void Processing_Handler (void)

Removes baseline drift and PLI from a sample, and moves it to the QRS/LCD FIFOs.

static void LCD_Handler (void)

Applies a 0.5-40 [Hz] bandpass filter and plots the sample to the waveform.

• int main (void)

Main function for the project.

Variables

- static volatile Fifo_t **DAQ_Fifo** = 0
- static volatile uint32_t **DAQ_fifoBuffer** [DAQ_ARRAY_LEN] = { 0 }
- static volatile Fifo_t QRS_Fifo = 0
- static volatile uint32 t QRS_fifoBuffer [QRS_ARRAY_LEN] = { 0 }
- static volatile bool QRS_bufferIsFull = false
- static volatile Fifo_t LCD_Fifo1 = 0
- static volatile uint32_t LCD_fifoBuffer1 [LCD_ARRAY_1_LEN] = { 0 }
- static volatile Fifo_t LCD_Fifo2 = 0
- static volatile uint32_t LCD_fifoBuffer2 [LCD_ARRAY_2_LEN] = { 0 }
- static volatile bool LCD_heartRateIsReady = false
- static float32 t QRS_processingBuffer [QRS_ARRAY_LEN] = { 0 }
- static uint16_t LCD_prevSampleBuffer [LCD_X_MAX] = { 0 }

7.28.1 Detailed Description

Main program file.

Author


Bryan McElvy

7.29 Debug.h File Reference


Functions to output debugging information to a serial port via UART.

```
#include "UART.h"
#include <stdbool.h>
```

Include dependency graph for Debug.h:

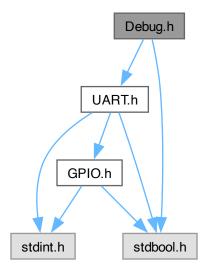

This graph shows which files directly or indirectly include this file:

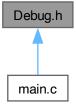

Functions

Initialization

void Debug_Init (Uart_t uart)
 Initialize the Debug module.

Assertions

void Debug_Assert (bool condition)
 Stops program if condition is true. Useful for bug detection during debugging.

Serial Output

- enum Msg_t { DEBUG_DAQ_INIT , DEBUG_QRS_INIT , DEBUG_LCD_INIT , DEBUG_QRS_START }
- void Debug_SendMsg (void *message)

Send a message to the serial port.

• void Debug_SendFromList (Msg_t msg)

Send a message from the message list.

• void Debug_WriteFloat (double value)

Write a floating-point value to the serial port.

7.29.1 Detailed Description

Functions to output debugging information to a serial port via UART.

Author


Bryan McElvy

7.30 ILI9341.c File Reference

Source code for ILI9341 module.

```
#include "ILI9341.h"
#include "SPI.h"
#include "Timer.h"
#include "FIFO.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
```

Include dependency graph for ILI9341.c:

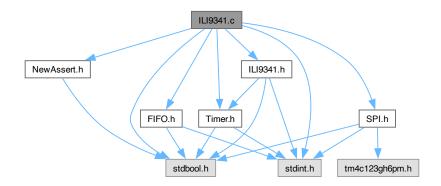

Functions

- static void ILI9341_setMode (uint8_t param)
- static void ILI9341_setAddress (uint16_t start_address, uint16_t end_address, bool is_row)
- static void ILI9341_sendParams (Cmd_t cmd)

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

void ILI9341 Init (Timer t timer)

Initialize the LCD driver and the SPI module.

• void ILI9341_setInterface (void)

Sets the interface for the ILI9341.

• void ILI9341_resetHard (Timer_t timer)

Perform a hardware reset of the LCD driver.

• void ILI9341 resetSoft (Timer t timer)

Perform a software reset of the LCD driver.

• void ILI9341_setSleepMode (sleepMode_t sleepMode, Timer_t timer)

Enter or exit sleep mode (ON by default).

void ILI9341 setDisplayArea (displayArea t displayArea)

Set the display area.

void ILI9341_setColorExpression (colorExpr_t colorExpr)

Set the color expression (FULL_COLORS by default).

void ILI9341 setPartialArea (uint16 t rowStart, uint16 t rowEnd)

Set the display area for partial mode. Call before activating partial mode.

void ILI9341_setDispInversion (invertMode_t invertMode)

Toggle display inversion (OFF by default).

void ILI9341_setDispOutput (outputMode_t outputMode)

Change whether the IC is outputting to the display for not.

void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols
 — Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341_setColorDepth (colorDepth_t colorDepth)

Set the color depth for the display.

• void ILI9341_setFrameRate (uint8_t divisionRatio, uint8_t clocksPerLine)

TODO: Write brief.

• void ILI9341_setRowAddress (uint16_t startRow, uint16_t endRow)

Sets the start/end rows to be written to.

void ILI9341_setColAddress (uint16_t startCol, uint16_t endCol)

Sets the start/end columns to be written to.

void ILI9341_writeMemCmd (void)

• static uint32_t ILI9341_Buffer [8]

outputMode_t outputMode colorDepth_t colorDepth

Signal to the driver that pixel data is incoming and should be written to memory.

void ILI9341_writePixel (uint8_t red, uint8_t green, uint8_t blue)

Write a single pixel to frame memory.

Variables

```
    static Fifo_t ILI9341_Fifo
    struct {
        sleepMode_t sleepMode
        displayArea_t displayArea
        colorExpr_t colorExpression
        invertMode t invertMode
```

} ili9341 = { SLEEP ON, NORMAL AREA, FULL COLORS, INVERT OFF, OUTPUT ON, COLORDEPTH 16BIT, false }

7.30.1 Detailed Description

bool islnit

Source code for ILI9341 module.

Author


Bryan McElvy

7.31 ILI9341.h File Reference


Driver module for interfacing with an ILI9341 LCD driver.

```
#include "Timer.h"
#include <stdbool.h>
```

```
#include <stdint.h>
Include dependency graph for ILI9341.h:
```

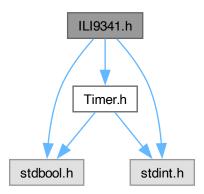

This graph shows which files directly or indirectly include this file:

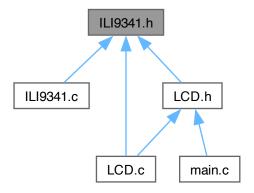

Enumerations

```
    enum { ILI9341_NUM_COLS = 240 , ILI9341_NUM_ROWS = 320 }
    enum Cmd_t {
        NOP = 0x00 , SWRESET = 0x01 , SPLIN = 0x10 , SPLOUT = 0x11 ,
        PTLON = 0x12 , NORON = 0x13 , DINVOFF = 0x20 , DINVON = 0x21 ,
        CASET = 0x2A , PASET = 0x2B , RAMWR = 0x2C , DISPOFF = 0x28 ,
        DISPON = 0x29 , PLTAR = 0x30 , VSCRDEF = 0x33 , MADCTL = 0x36 ,
        VSCRSADD = 0x37 , IDMOFF = 0x38 , IDMON = 0x39 , PIXSET = 0x3A ,
        FRMCTR1 = 0xB1 , FRMCTR2 = 0xB2 , FRMCTR3 = 0xB3 , PRCTR = 0xB5 ,
        IFCTL = 0xF6 }
```

• enum sleepMode_t { SLEEP_ON = SPLIN , SLEEP_OFF = SPLOUT }

- enum displayArea_t { NORMAL_AREA = NORON , PARTIAL_AREA = PTLON }
- enum colorExpr_t { FULL_COLORS = IDMOFF , PARTIAL_COLORS = IDMON }
- enum invertMode_t { INVERT_ON = DINVON , INVERT_OFF = DINVOFF }
- enum outputMode t { OUTPUT ON = DISPON , OUTPUT OFF = DISPOFF }
- enum colorDepth_t { COLORDEPTH_16BIT = 0x55 , COLORDEPTH_18BIT = 0x66 }

Functions

void ILI9341 Init (Timer t timer)

Initialize the LCD driver and the SPI module.

· void ILI9341_setInterface (void)

Sets the interface for the ILI9341.

void ILI9341_resetHard (Timer_t timer)

Perform a hardware reset of the LCD driver.

void ILI9341 resetSoft (Timer t timer)

Perform a software reset of the LCD driver.

void ILI9341_setSleepMode (sleepMode_t sleepMode, Timer_t timer)

Enter or exit sleep mode (ON by default).

void ILI9341_setDisplayArea (displayArea_t displayArea)

Set the display area.

void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

Set the display area for partial mode. Call before activating partial mode.

void ILI9341 setColorExpression (colorExpr t colorExpr)

Set the color expression (FULL_COLORS by default).

void ILI9341 setDispInversion (invertMode t invertMode)

Toggle display inversion (OFF by default).

void ILI9341 setDispOutput (outputMode t outputMode)

Change whether the IC is outputting to the display for not.

Set how data is converted from memory to display.

void ILI9341 setColorDepth (colorDepth t colorDepth)

Set the color depth for the display.

• void ILI9341 setFrameRate (uint8 t divisionRatio, uint8 t clocksPerLine)

TODO: Write brief.

void ILI9341 setRowAddress (uint16 t startRow, uint16 t endRow)

Sets the start/end rows to be written to.

void ILI9341_setColAddress (uint16_t startCol, uint16_t endCol)

Sets the start/end columns to be written to.

void ILI9341_writeMemCmd (void)

Signal to the driver that pixel data is incoming and should be written to memory.

• void ILI9341 writePixel (uint8 t red, uint8 t green, uint8 t blue)

Write a single pixel to frame memory.

7.31.1 Detailed Description

Driver module for interfacing with an ILI9341 LCD driver.

Author


Bryan McElvy

This module contains functions for initializing and outputting graphical data to a 240RGBx320 resolution, 262K color-depth liquid crystal display (LCD). The module interfaces the LaunchPad (or any other board featuring the TM4C123GH6PM microcontroller) with an ILI9341 LCD driver chip via the serial peripheral interface (SPI) protocol.

7.32 Led.c File Reference

Source code for LED module.

```
#include "Led.h"
#include "GPIO.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Led.c:
```

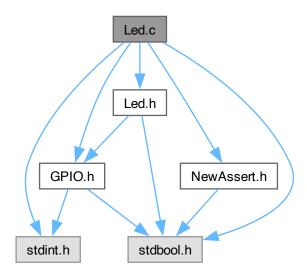

Data Structures

• struct Led_t

Functions

- Led_t Led_Init (GpioPort_t gpioPort, GPIO_Pin_t pin)
 Initialize a light-emitting diode (LED) as an Led_t.
- bool Led_isInit (Led_t led)
- GpioPort_t Led_GetPort (Led_t led)

Get the GPIO port associated with the LED.

• GPIO_Pin_t Led_GetPin (Led_t led)

Get the GPIO pin associated with the LED.

bool Led_isOn (Led_t led)

Check the LED's status.

void Led_TurnOn (Led_t led)

Turn the LED ON.

void Led_TurnOff (Led_t led)

Turn the LED OFF.

void Led_Toggle (Led_t led)

Toggle the LED (i.e. $OFF \rightarrow ON \text{ or } ON \rightarrow OFF$).

7.33 Led.h File Reference 143

Variables

- static LedStruct_t Led_ObjPool [LED_POOL_SIZE] = { 0 }
- static uint8_t num_free_leds = LED_POOL_SIZE

7.32.1 Detailed Description

Source code for LED module.


Author

Bryan McElvy


7.33 Led.h File Reference

Interface for LED module.

#include "GPIO.h"
#include <stdbool.h>
Include dependency graph for Led.h:

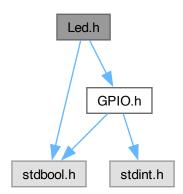

This graph shows which files directly or indirectly include this file:



Macros

• #define LED_POOL_SIZE 1

Functions

- Led_t Led_Init (GpioPort_t gpioPort, GPIO_Pin_t pin)

 Initialize a light-emitting diode (LED) as an Led_t.
- bool Led_isInit (Led_t led)
- GpioPort_t Led_GetPort (Led_t led)

Get the GPIO port associated with the LED.

• GPIO_Pin_t Led_GetPin (Led_t led)

Get the GPIO pin associated with the LED.

• bool Led_isOn (Led_t led)

Check the LED's status.

void Led_TurnOn (Led_t led)

Turn the LED ON.

void Led_TurnOff (Led_t led)

Turn the LED OFF.

void Led_Toggle (Led_t led)

Toggle the LED (i.e. $OFF \rightarrow ON \text{ or } ON \rightarrow OFF$).

7.33.1 Detailed Description

Interface for LED module.

Author

Bryan McElvy

Index

ADC.c, 98	DAQ_Init, 7
ADC.h, 99	DAQ_NotchFilter, 7
ADC_Init	DAQ_readSample, 7
Analog-to-Digital Conversion (ADC), 32	Debug, 56
Analog-to-Digital Conversion (ADC), 32	Debug_Assert, 59
ADC_Init, 32	Debug_Init, 57
Application Software, 4	Debug_SendFromList, 58
Assert	Debug_SendMsg, 57
Common, 24	Debug_WriteFloat, 58
	Debug.h, 136
bandpassFiltStruct	Debug_Assert
Data Acquisition (DAQ), 9	Debug, 59
Bug List, 1	Debug_Init
	Debug, 57
CASET	Debug_SendFromList
ILI9341, 62	Debug, 58
Cmd_t	Debug_SendMsg
ILI9341, 62	Debug, 57
COEFF_BANDPASS	Debug_WriteFloat
QRS Detector, 22	Debug, 58
COEFF_DERFILT	Device Drivers, 30
QRS Detector, 22	DINVOFF
COEFF_MOVAVG	ILI9341, 62
QRS Detector, 23	DINVON
COEFFS_BANDPASS	ILI9341, 62
Data Acquisition (DAQ), 9	DISPOFF
COEFFS_NOTCH	ILI9341, 62
Data Acquisition (DAQ), 9	DISPON
Common, 23	ILI9341, 62
Assert, 24	DOWN
	Timer, 40
DAQ.c, 81	,,
DAQ.h, 83	FIFO Buffers, 24
DAQ_ARRAY_LEN	FIFO_Flush, 27
Main, 74	FIFO_Get, 26
DAQ_BandpassFilter	FIFO_getCurrSize, 29
Data Acquisition (DAQ), 8	FIFO_Init, 26
DAQ_convertToMilliVolts	FIFO_isEmpty, 29
Data Acquisition (DAQ), 8	FIFO_isFull, 29
DAQ_FIFO_CAP	FIFO_PeekAll, 29
Main, 74	FIFO_PeekOne, 28
DAQ_Handler	FIFO_Put, 26
Main, 75	FIFO_Reset, 28
DAQ_Init	FIFO TransferAll, 28
Data Acquisition (DAQ), 7	FIFO TransferOne, 27
DAQ_lookup.c, 84	Fifo.c, 93
DAQ_NotchFilter	Fifo.h, 95
Data Acquisition (DAQ), 7	FIFO Flush
DAQ_readSample	FIFO Buffers, 27
Data Acquisition (DAQ), 7	FIFO Get
Data Acquisition (DAQ), 5	FIFO Buffers, 26
bandpassFiltStruct, 9	FIFO_getCurrSize
COEFFS_BANDPASS, 9	FIFO Buffers, 29
COEFFS_NOTCH, 9	FIFO_Init
DAQ_BandpassFilter, 8	FIFO Buffers, 26
DAQ_convertToMilliVolts, 8	5 255.6, 25

FIFO_isEmpty	GPIO_ConfigPortCtrl, 118
FIFO Buffers, 29	GPIO ConfigPullDown, 114
FIFO_isFull	GPIO_ConfigPullUp, 114
FIFO Buffers, 29	GPIO DisableDigital, 115
FIFO_PeekAll	GPIO_EnableDigital, 115
FIFO Buffers, 29	GPIO_getBaseAddr, 113
FIFO PeekOne	GPIO_getDataRegister, 117
_	GPIO InitPort, 113
FIFO Buffers, 28	-
FIFO_Put	GPIO_isPortInit, 113
FIFO Buffers, 26	GPIO_ReadPins, 117
FIFO_Reset	GPIO_Toggle, 118
FIFO Buffers, 28	GPIO_WriteHigh, 117
Fifo_t, 79	GPIO_WriteLow, 117
FIFO_TransferAll	GPIO_ConfigAltMode
FIFO Buffers, 28	GPIO.c, 109
FIFO_TransferOne	GPIO.h, 118
FIFO Buffers, 27	GPIO_ConfigAnalog
FRMCTR1	GPIO.c, 110
ILI9341, 62	GPIO.h, 119
FRMCTR2	GPIO_ConfigDirInput
ILI9341, 62	GPIO.c, 104
FRMCTR3	GPIO.h, 114
ILI9341, 62	GPIO_ConfigDirOutput
1219041, 02	GPIO.c, 104
General-Purpose Input/Output (GPIO), 33	
GPIO.c, 100	GPIO.h, 114
GPIO_ConfigAltMode, 109	GPIO_ConfigDriveStrength
GPIO_ConfigAnalog, 110	GPIO.c, 105
	GPIO.h, 115
GPIO_ConfigDirInput, 104	GPIO_ConfigInterrupts_BothEdges
GPIO_ConfigDirOutput, 104	GPIO.c, 107
GPIO_ConfigDriveStrength, 105	GPIO.h, 116
GPIO_ConfigInterrupts_BothEdges, 107	GPIO_ConfigInterrupts_Edge
GPIO_ConfigInterrupts_Edge, 107	GPIO.c, 107
GPIO_ConfigInterrupts_LevelTrig, 107	GPIO.h, 115
GPIO_ConfigNVIC, 108	GPIO_ConfigInterrupts_LevelTrig
GPIO_ConfigPortCtrl, 109	GPIO.c, 107
GPIO_ConfigPullDown, 104	GPIO.h, 116
GPIO_ConfigPullUp, 104	GPIO_ConfigNVIC
GPIO_DisableDigital, 105	GPIO.c, 108
GPIO_EnableDigital, 105	
GPIO getBaseAddr, 102	GPIO.h, 116
GPIO getDataRegister, 108	GPIO_configPortCtrl
GPIO InitPort, 102	GPIO.c, 109
GPIO isPortInit, 102	GPIO.h, 118
— · · · · · · · · · · · · · · · · · · ·	GPIO_ConfigPullDown
GPIO_PTR_ARR, 110	GPIO.c, 104
GPIO_ReadPins, 108	GPIO.h, 114
GPIO_Toggle, 109	GPIO_ConfigPullUp
GPIO_WriteHigh, 108	GPIO.c, 104
GPIO_WriteLow, 109	GPIO.h, 114
GPIO.h, 110	GPIO_DisableDigital
GPIO_ConfigAltMode, 118	GPIO.c, 105
GPIO_ConfigAnalog, 119	GPIO.h, 115
GPIO_ConfigDirInput, 114	GPIO_EnableDigital
GPIO_ConfigDirOutput, 114	GPIO.c, 105
GPIO_ConfigDriveStrength, 115	GPIO.h, 115
GPIO_ConfigInterrupts_BothEdges, 116	GPIO_getBaseAddr
GPIO_ConfigInterrupts_Edge, 115	GPIO.c, 102
GPIO_ConfigInterrupts_LevelTrig, 116	GPIO.b, 113
GPIO_ConfigNVIC, 116	GEIO.II, 113

GPIO getDataRegister	ILI9341 setMemAccessCtrl, 67
GPIO.c, 108	ILI9341 setMode, 62
GPIO.h, 117	ILI9341_setPartialArea, 66
GPIO_InitPort	ILI9341_setRowAddress, 68
GPIO.c, 102	ILI9341_setSleepMode, 65
GPIO.h, 113	ILI9341_writeMemCmd, 69
GPIO_isPortInit	ILI9341_writePixel, 69
GPIO.c, 102	MADCTL, 62
GPIO.h, 113	NOP, 62
GPIO_PTR_ARR	NORON, 62
GPIO.c, 110	PASET, 62
GPIO_ReadPins	PIXSET, 62
GPIO.c, 108	PLTAR, 62
GPIO.h, 117	PRCTR, 62
GPIO_Toggle	PTLON, 62
GPIO.c, 109	RAMWR, 62
GPIO.h, 118	SPLIN, 62
GPIO_WriteHigh	SPLOUT, 62
GPIO.c, 108	SWRESET, 62
GPIO.h, 117	VSCRDEF, 62
GPIO_WriteLow	VSCRSADD, 62
GPIO.c, 109	ILI9341.c, 138
GPIO.h, 117	ILI9341.h, 139
GpioPort_t, 80	ILI9341_Init
IDMOFF	ILI9341, 63
ILI9341, 62	ILI9341_NUM_COLS
IDMON	ILI9341, 61
ILI9341, 62	ILI9341_NUM_ROWS
IFCTL	ILI9341, 61
ILI9341, 62	ILI9341_resetHard
ILI9341, 59	ILI9341, 64
CASET, 62	ILI9341_resetSoft
Cmd_t, 62	ILI9341, 64
DINVOFF, 62	ILI9341_sendParams
DINVON, 62	ILI9341, 63
DISPOFF, 62	ILI9341_setAddress
DISPON, 62	ILI9341, 62
FRMCTR1, 62	ILI9341_setColAddress
FRMCTR2, 62	ILI9341, 68
FRMCTR3, 62	ILI9341_setColorDepth
IDMOFF, 62	ILI9341, 67 ILI9341_setColorExpression
IDMON, 62	ILI9341, 65
IFCTL, 62	ILI9341, 65 ILI9341_setDispInversion
ILI9341_Init, 63	ILI9341, 66
ILI9341_NUM_COLS, 61	ILI9341, 60 ILI9341_setDisplayArea
ILI9341_NUM_ROWS, 61	ILI9341, 65
ILI9341_resetHard, 64	ILI9341 setDispOutput
ILI9341_resetSoft, 64	ILI9341, 66
ILI9341_sendParams, 63	ILI9341, 60 ILI9341_setFrameRate
ILI9341_setAddress, 62	ILI9341, 68
ILI9341_setColAddress, 68	ILI9341 setInterface
ILI9341_setColorDepth, 67	ILI9341, 63
ILI9341_setColorExpression, 65	ILI9341 setMemAccessCtrl
ILI9341_setDispInversion, 66	ILI9341, 67
ILI9341_setDisplayArea, 65	ILI9341 setMode
ILI9341_setDispOutput, 66	ILI9341, 62
ILI9341_setFrameRate, 68	ILI9341 setPartialArea
ILI9341_setInterface, 63	

ILI9341, 66	LCD_Handler
ILI9341_setRowAddress	Main, 76
ILI9341, 68	LCD_Init
ILI9341_setSleepMode	Liquid Crystal Display (LCD), 12
ILI9341, 65	LCD_plotSample
ILI9341_writeMemCmd	Liquid Crystal Display (LCD), 16
ILI9341, 69	LCD_setColor
ILI9341_writePixel	Liquid Crystal Display (LCD), 14
ILI9341, 69	LCD_setCursor
Interrupt Service Routines, 51	Liquid Crystal Display (LCD), 16
ISR_addToIntTable, 53	LCD_setOutputMode
ISR_Disable, 54	Liquid Crystal Display (LCD), 12
ISR_Enable, 54	LCD_setX
ISR_GlobalDisable, 52	Liquid Crystal Display (LCD), 13
ISR_GlobalEnable, 52	LCD_setY
ISR_InitNewTableInRam, 52	Liquid Crystal Display (LCD), 13
ISR_setPriority, 53	LCD_TOP_LINE
ISR_triggerInterrupt, 55	Main, 75
ISR.c, 119	LCD_WAVE_NUM_Y
ISR.h, 121	Main, 75
ISR_addToIntTable	LED, 70
Interrupt Service Routines, 53	Led_GetPin, 72
ISR_Disable	Led_GetPort, 71
Interrupt Service Routines, 54	Led_Init, 71
ISR_Enable	Led_isOn, 72
Interrupt Service Routines, 54	Led_Toggle, 73
ISR_GlobalDisable	Led_TurnOff, 73
Interrupt Service Routines, 52	Led_TurnOn, 72
ISR_GlobalEnable	Led.c, 142
Interrupt Service Routines, 52	Led.h, 143
ISR_InitNewTableInRam	Led_GetPin
Interrupt Service Routines, 52	LED, 72
ISR_setPriority	Led_GetPort
Interrupt Service Routines, 53	LED, 71
ISR_triggerInterrupt	Led_Init
Interrupt Service Routines, 55	LED, 71
LCD.c, 85	Led_isOn
LCD.h, 87	LED, 72
LCD ARRAY 1 LEN	Led_t, 80
Main, 74	Led_Toggle
LCD_ARRAY_2_LEN	LED, 73
Main, 74	Led_TurnOff
LCD Draw	LED, 73
Liquid Crystal Display (LCD), 14	Led_TurnOn
LCD drawHoriLine	LED, 72
Liquid Crystal Display (LCD), 14	Liquid Crystal Display (LCD), 10
LCD drawLine	LCD_Draw, 14
Liquid Crystal Display (LCD), 12	LCD_drawHoriLine, 14
LCD_drawRectangle	LCD_drawLine, 12
Liquid Crystal Display (LCD), 15	LCD_drawRectangle, 15
LCD drawVertLine	LCD_drawVertLine, 15
Liquid Crystal Display (LCD), 15	LCD_Fill, 14
LCD_FIFO_1_CAP	LCD_Init, 12
Main, 74	LCD_plotSample, 16
LCD_FIFO_2_CAP	LCD_setColor, 14
Main, 74	LCD_setCursor, 16
LCD_Fill	LCD_setOutputMode, 12
Liquid Crystal Display (LCD), 14	LCD_setX, 13

LCD_setY, 13	COEFF_MOVAVG, 23
	QRS_applyDecisionRules, 21
MADCTL	QRS_findFiducialMarks, 19
ILI9341, 62	QRS_Init, 20
Main, 73	QRS initLevels, 19
DAQ_ARRAY_LEN, 74	QRS_Preprocess, 20
DAQ FIFO CAP, 74	QRS runDetection, 22
DAQ Handler, 75	QRS_updateLevel, 19
LCD ARRAY 1 LEN, 74	QRS_updateThreshold, 20
LCD_ARRAY_2_LEN, 74	QRS.c, 89
LCD_FIFO_1_CAP, 74	
LCD FIFO 2 CAP, 74	QRS.h, 92
LCD_Handler, 76	QRS_applyDecisionRules
LCD_TOP_LINE, 75	QRS Detector, 21
LCD_WAVE_NUM_Y, 75	QRS_ARRAY_LEN
	Main, 74
main, 77	QRS_FIFO_CAP
Processing_Handler, 75	Main, 74
QRS_ARRAY_LEN, 74	QRS_findFiducialMarks
QRS_FIFO_CAP, 74	QRS Detector, 19
main	QRS_Init
Main, 77	QRS Detector, 20
main.c, 135	QRS_initLevels
Middleware, 55	QRS Detector, 19
	QRS_Preprocess
NewAssert, 30	QRS Detector, 20
NewAssert.c, 96	QRS runDetection
NewAssert.h, 97	QRS Detector, 22
NOP	QRS_updateLevel
ILI9341, 62	QRS Detector, 19
NORON	QRS_updateThreshold
II 10241 62	
ILI9341, 62	QRS Detector 20
1119341, 62	QRS Detector, 20
ONESHOT	
,	RAMWR
ONESHOT Timer, 40	
ONESHOT	RAMWR ILI9341, 62
ONESHOT Timer, 40 PASET IL19341, 62	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34
ONESHOT Timer, 40 PASET	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC Timer, 40	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC Timer, 40	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET IL19341, 62 PLL.c, 122 PLL.h, 123 PLL_Init	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET IL19341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34	RAMWR IL19341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI_C, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC
ONESHOT Timer, 40 PASET IL19341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET IL19341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR IL19341, 62	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd
ONESHOT	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR ILI9341, 62 Processing_Handler	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36 SPI_WriteData
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR ILI9341, 62 Processing_Handler Main, 75	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR ILI9341, 62 Processing_Handler Main, 75 PTLON	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36 SPI_WriteData
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR ILI9341, 62 Processing_Handler Main, 75	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR ILI9341, 62 Processing_Handler Main, 75 PTLON ILI9341, 62	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPLIN
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR ILI9341, 62 Processing_Handler Main, 75 PTLON ILI9341, 62 QRS Detector, 17	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPLIN ILI9341, 62
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR ILI9341, 62 Processing_Handler Main, 75 PTLON ILI9341, 62 QRS Detector, 17 COEFF_BANDPASS, 22	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPLIN ILI9341, 62 SPLOUT
ONESHOT Timer, 40 PASET ILI9341, 62 PERIODIC Timer, 40 Phase-Locked Loop (PLL), 33 PLL_Init, 34 PIXSET ILI9341, 62 PLL.c, 122 PLL.h, 123 PLL_Init Phase-Locked Loop (PLL), 34 PLTAR ILI9341, 62 PRCTR ILI9341, 62 Processing_Handler Main, 75 PTLON ILI9341, 62 QRS Detector, 17	RAMWR ILI9341, 62 Serial Peripheral Interface (SPI), 34 SPI_Init, 35 SPI_Read, 35 SPI_SET_DC, 35 SPI_WriteCmd, 36 SPI_WriteData, 36 SPI.c, 123 SPI.h, 125 SPI_Init Serial Peripheral Interface (SPI), 35 SPI_Read Serial Peripheral Interface (SPI), 35 SPI_SET_DC Serial Peripheral Interface (SPI), 35 SPI_WriteCmd Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPI_WriteData Serial Peripheral Interface (SPI), 36 SPLIN ILI9341, 62 SPLOUT ILI9341, 62

System Tick (SysTick), 37	Timer, 44
SysTick_Interrupt_Init, 37	Timer_Stop
SysTick.c, 126	Timer, 45
SysTick.h, 127	Timer_t, 81
SysTick_Interrupt_Init	Timer_Wait1ms
System Tick (SysTick), 37	Timer, 46
	timerDirection_t
Timer, 38	Timer, 40
DOWN, 40	timerMode t
ONESHOT, 40	Timer, 39
PERIODIC, 40	,
Timer_clearInterruptFlag, 44	UART.c, 132
Timer_Deinit, 40	UART.h, 133
Timer_disableAdcTrigger, 42	UART ARR
Timer_disableInterruptOnTimeout, 43	Universal Asynchronous Receiver/Transmitter
Timer_enableAdcTrigger, 42	(UART), 50
Timer_enableInterruptOnTimeout, 43	UART_Init
Timer_getName, 41	Universal Asynchronous Receiver/Transmitter
Timer Init, 40	(UART), 48
Timer_isCounting, 45	UART islnit
Timer islnit, 41	Universal Asynchronous Receiver/Transmitter
TIMER POOL, 46	(UART), 48
Timer_setInterval_ms, 44	UART_ReadChar
Timer_setMode, 41	Universal Asynchronous Receiver/Transmitter
Timer_Start, 44	
Timer_Stop, 45	(UART), 49
Timer_Stop, 45 Timer_Wait1ms, 46	Uart_t, 81
	UART_WriteChar
timerDirection_t, 40	Universal Asynchronous Receiver/Transmitter
timerMode_t, 39	(UART), 49
UP, 40	UART_WriteFloat
Timer.c, 128	Universal Asynchronous Receiver/Transmitter
Timer.h, 130	(UART), 50
Timer_clearInterruptFlag	UART_WriteInt
Timer, 44	Universal Asynchronous Receiver/Transmitter
Timer_Deinit	(UART), 50
Timer, 40	UART_WriteStr
Timer_disableAdcTrigger	Universal Asynchronous Receiver/Transmitter
Timer, 42	(UART), 49
Timer_disableInterruptOnTimeout	Universal Asynchronous Receiver/Transmitter (UART),
Timer, 43	47
Timer_enableAdcTrigger	UART_ARR, 50
Timer, 42	UART_Init, 48
Timer_enableInterruptOnTimeout	UART_isInit, 48
Timer, 43	UART_ReadChar, 49
Timer_getName	UART_WriteChar, 49
Timer, 41	UART WriteFloat, 50
Timer_Init	UART WriteInt, 50
Timer, 40	UART_WriteStr, 49
Timer_isCounting	UP
Timer, 45	Timer, 40
Timer_isInit	
Timer, 41	VSCRDEF
TIMER_POOL	ILI9341, 62
Timer, 46	VSCRSADD
Timer_setInterval_ms	ILI9341, 62
Timer, 44	,
Timer_setMode	
Timer, 41	
Timer_Start	
1	