ECG-HRM

Generated by Doxygen 1.9.8

5.5 UART_t Struct Reference	 72
6 File Documentation	72
6.1 DAQ.c File Reference	 72
6.1.1 Detailed Description	 73
6.2 DAQ.h File Reference	 74
6.2.1 Detailed Description	 74
6.3 LCD.c File Reference	 74
6.3.1 Detailed Description	 76
6.4 LCD.h File Reference	 76
6.4.1 Detailed Description	 78
6.5 lookup.c File Reference	 78
6.5.1 Detailed Description	 78
6.6 lookup.h File Reference	 78
6.6.1 Detailed Description	 79
6.7 QRS.c File Reference	 79
6.7.1 Detailed Description	 80
6.8 QRS.h File Reference	 81
6.8.1 Detailed Description	 81
6.9 Fifo.c File Reference	 81
6.9.1 Detailed Description	 83
6.10 Fifo.h File Reference	 83
6.10.1 Detailed Description	 84
6.11 NewAssert.c File Reference	 84
6.11.1 Detailed Description	 84
6.12 NewAssert.h File Reference	 84
6.12.1 Detailed Description	 84
6.13 ADC.c File Reference	 85
6.13.1 Detailed Description	 85
6.14 ADC.h File Reference	 85
6.14.1 Detailed Description	 86
6.15 GPIO.c File Reference	 86
6.15.1 Detailed Description	 88
6.15.2 Function Documentation	 88
6.15.3 Variable Documentation	 94
6.16 GPIO.h File Reference	 94
6.16.1 Detailed Description	 95
6.16.2 Function Documentation	 96
6.17 ISR.c File Reference	 101
6.17.1 Detailed Description	 103
6.18 ISR.h File Reference	 103
6.18.1 Detailed Description	 103

6.19 PLL.c File Reference
6.19.1 Detailed Description
6.20 PLL.h File Reference
6.20.1 Detailed Description
6.21 SPI.c File Reference
6.21.1 Detailed Description
6.22 SPI.h File Reference
6.22.1 Detailed Description
6.23 SysTick.c File Reference
6.23.1 Detailed Description
6.24 SysTick.h File Reference
6.24.1 Detailed Description
6.25 Timer.c File Reference
6.25.1 Detailed Description
6.26 Timer.h File Reference
6.26.1 Detailed Description
6.27 UART.c File Reference
6.27.1 Detailed Description
6.28 UART.h File Reference
6.28.1 Detailed Description
6.29 main.c File Reference
6.29.1 Detailed Description
6.30 Debug.h File Reference
6.30.1 Detailed Description
6.31 ILI9341.c File Reference
6.31.1 Detailed Description
6.32 ILI9341.h File Reference
6.32.1 Detailed Description
6.33 Led.c File Reference
6.33.1 Detailed Description
6.34 Led.h File Reference
6.34.1 Detailed Description
6.35 test_adc.c File Reference
6.35.1 Detailed Description
6.36 test_daq.c File Reference
6.36.1 Detailed Description
6.37 test_debug.c File Reference
6.37.1 Detailed Description
6.38 test_fifo.c File Reference
6.38.1 Detailed Description
6.39 test_lcd_image.c File Reference
6.39.1 Detailed Description

1 Topic Index

6.40 test_pll.c File Reference	122
6.40.1 Detailed Description	122
6.41 test_qrs.c File Reference	123
6.41.1 Detailed Description	123
6.42 test_spi.c File Reference	123
6.42.1 Detailed Description	124
6.43 test_systick_int.c File Reference	124
6.43.1 Detailed Description	124
6.44 test_timer1_int.c File Reference	124
6.44.1 Detailed Description	125
6.45 test_uart_la.c File Reference	125
6.45.1 Detailed Description	125
6.46 test_uart_write.c File Reference	126
6.46.1 Detailed Description	126
6.47 test_userctrl.c File Reference	126
6.47.1 Detailed Description	126
Index	127
1 Topic Index	
1.1 Topics	
Here is a list of all topics with brief descriptions:	
Device Drivers	5
Analog-to-Digital Conversion (ADC)	6
GPIO	7
Phase-Locked Loop (PLL)	7

8

10

11

13

16

21

22

33

36

Serial Peripheral Interface (SPI)

Universal Asynchronous Receiver/Transmitter (UART)

System Tick (SysTick)

Interrupt Service Routines

Timer

Middleware

LED

ILI9341

Application Software

Data Acquisition (DAQ)	36
Debug	41
LCD	44
QRS	53
Common	58
FIFO	59
NewAssert	65
Main	65
2 Data Structure Index	
2.1 Data Structures	
2.1 Data Officiality	
Here are the data structures with brief descriptions:	
Fifo_t	70
GPIO_Port_t	71
Led_t	71
Timer_t	71
UART_t	72
O. File Index	
3 File Index	
3.1 File List	
Here is a list of all documented files with brief descriptions:	
DAQ.c Source code for DAQ module	72
DAQ.h Application software for handling data acquision (DAQ) functions	74
LCD.c Source code for LCD module	74
LCD.h Header file for LCD module	76
lookup.c Source code for DAQ module's lookup table	78
lookup.h Lookup table for DAQ module	78

3.1 File List 3

QRS.c Source code for QRS module	79
QRS.h QRS detection algorithm functions	81
Fifo.c Source code for FIFO buffer module	81
Fifo.h FIFO buffer data structure	83
NewAssert.c Source code for custom assert implementation	84
NewAssert.h Header file for custom assert implementation	84
ADC.c Source code for ADC module	85
ADC.h Driver module for analog-to-digital conversion (ADC)	85
GPIO.c Source code for GPIO module	86
GPIO.h Header file for general-purpose input/output (GPIO) device driver	94
ISR.c Source code for interrupt vector handling module	101
ISR.h Module for configuring interrupt service routines (ISRs)	103
PLL.c Implementation details for phase-lock-loop (PLL) functions	104
PLL.h Driver module for activating the phase-locked-loop (PLL)	104
SPI.c Source code for SPI module	105
SPI.h Driver module for using the serial peripheral interface (SPI) protocol	106
SysTick.c Implementation details for SysTick functions	106
SysTick.h Driver module for using SysTick-based timing and/or interrupts	107
Timer.c Source code for Timer module	107
Timer.h Device driver for general-purpose timer modules	108
UART.c Source code for UART module	109


UART.h Driver module for serial communication via UART0 and UART 1	111
main.c Main program file	112
Debug.h Functions to output debugging information to a serial port via UART	113
ILI9341.c Source code for ILI9341 module	114
ILI9341.h Driver module for interfacing with an ILI9341 LCD driver	115
Led.c Source code for LED module	117
Led.h Interface for LED module	118
test_adc.c Test script for analog-to-digital conversion (ADC) module	118
test_daq.c Test script for the data acquisition (DAQ) module	119
test_debug.c Test script for Debug module	120
test_fifo.c Test script for FIFO buffer	121
test_lcd_image.c Test script for writing images onto the display	121
test_pll.c Test script for the PLL module	122
test_qrs.c QRS detector test script	123
test_spi.c Test script for initializing SSI0 and writing data/commands via SPI	123
test_systick_int.c Test script for SysTick interrupts	124
test_timer1_int.c Test script for relocating the vector table to RAM	124
test_uart_la.c Test script for using a USB logic analyzer to decode UART signals	125
test_uart_write.c Test script for writing to serial port via UART0	126
test_userctrl.c Test file for GPIO/UserCtrl modules and GPIO interrupts	126

4 Topic Documentation

4.1 Device Drivers

Low level device driver modules.

Collaboration diagram for Device Drivers:

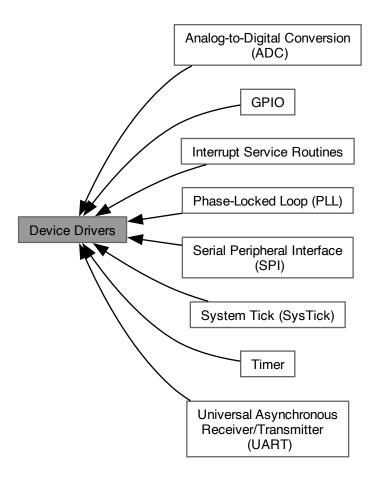

Modules

- Analog-to-Digital Conversion (ADC)
- GPIO
- Phase-Locked Loop (PLL)
- Serial Peripheral Interface (SPI)
- System Tick (SysTick)
- Timei
- Universal Asynchronous Receiver/Transmitter (UART)
- Interrupt Service Routines

4.1.1 Detailed Description

Low level device driver modules.

These modules contain functions for interfacing with peripherals available on the TM4C123GH6PM microcontroller.

4.1.2 Analog-to-Digital Conversion (ADC)

Collaboration diagram for Analog-to-Digital Conversion (ADC):



Files

• file ADC.c

Source code for ADC module.

• file ADC.h

Driver module for analog-to-digital conversion (ADC).

Functions

void ADC_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

void ADC_InterruptEnable (void)

Enable the ADC interrupt.

• void ADC_InterruptDisable (void)

Disable the ADC interrupt.

void ADC_InterruptAcknowledge (void)

Acknowledge the ADC interrupt, clearing the flag.

4.1.2.1 Detailed Description

Functions for differential-input analog-to-digital conversion.

4.1.3 GPIO

Collaboration diagram for GPIO:



Functions for using general-purpose input/output (GPIO) ports.

4.1.4 Phase-Locked Loop (PLL)

Collaboration diagram for Phase-Locked Loop (PLL):



Files

• file PLL.c

Implementation details for phase-lock-loop (PLL) functions.

• file PLL.h

Driver module for activating the phase-locked-loop (PLL).

Functions

• void PLL_Init (void)

Initializes the phase-locked-loop (PLL), allowing a bus frequency of 80[MHz].

4.1.4.1 Detailed Description

Function for initializing the phase-locked loop.

4.1.5 Serial Peripheral Interface (SPI)

Collaboration diagram for Serial Peripheral Interface (SPI):



Files

• file SPI.c

Source code for SPI module.

• file SPI.h

Driver module for using the serial peripheral interface (SPI) protocol.

Macros

- #define SPI SET DC() (GPIO PORTA DATA R |= 0x40)
- #define **SPI_CLEAR_DC**() (GPIO_PORTA_DATA_R &= \sim (0x40))
- #define SPI_IS_BUSY (SSI0_SR_R & 0x10)
- #define SPI_TX_ISNOTFULL (SSI0_SR_R & 0x02)

Enumerations

enum {

```
 \begin{split} & \textbf{SPI\_CLK\_PIN} = \texttt{GPIO\_PIN2} \;, \; \textbf{SPI\_CS\_PIN} = \texttt{GPIO\_PIN3} \;, \; \textbf{SPI\_RX\_PIN} = \texttt{GPIO\_PIN4} \;, \; \textbf{SPI\_TX\_PIN} = \texttt{GPIO\_PIN5} \;, \\ & \textbf{SPI\_DC\_PIN} = \texttt{GPIO\_PIN6} \;, \; \textbf{SPI\_RESET\_PIN} = \texttt{GPIO\_PIN7} \;, \; \textbf{SPI\_SSI0\_PINS} = (\texttt{SPI\_CLK\_PIN} \mid \texttt{SPI\_CLK\_PIN} \mid \texttt{SPI\_CLK\_PIN} \mid \texttt{SPI\_TX\_PIN} \;, \\ & \textbf{SPI\_ALL\_PINS} = (\texttt{SPI\_SSI0\_PINS} \mid \texttt{SPI\_GPIO\_PINS} \;) \; \end{split}
```

Functions

• void SPI_Init (void)

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

• uint8_t SPI_Read (void)

Read data from the peripheral.

· void SPI WriteCmd (uint8 t cmd)

Write an 8-bit command to the peripheral.

void SPI_WriteData (uint8_t data)

Write 8-bit data to the peripheral.

4.1.5.1 Detailed Description

Functions for SPI-based communication via SSI0 peripheral.

4.1.5.2 Macro Definition Documentation

SPI_SET_DC

#define SPI_SET_DC() (GPIO_PORTA_DATA_R \mid = 0x40)

TM4C Pin	Function	ILI9341 Pin	Description
PA2	SSI0Clk	CLK	Serial clock signal
PA3	SSI0Fss	CS	Chip select signal
PA4	SSI0Rx	MISO	TM4C (M) input, LCD (S) output
PA5	SSI0Tx	MOSI	TM4C (M) output, LCD (S) input
PA6	GPIO	D/C	Data = 1, Command = 0
PA7	GPIO	RESET	Reset the display (negative logic/active LOW)

```
Clk. Polarity = steady state low (0)
Clk. Phase = rising clock edge (0)
```

4.1.5.3 Function Documentation

SPI_Init()

```
void SPI_Init (
     void )
```

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

The bit rate BR is set using the (positive, even-numbered) clock prescale divisor CPSDVSR and the SCR field in the SSI Control 0 (CR0) register:

$$BR = f_{bus}/(CPSDVSR * (1 + SCR))$$

The ILI9341 driver has a min. read cycle of 150 [ns] and a min. write cycle of 100 [ns], so the bit rate BR is set to be equal to the bus frequency ($f_{bus}=80[MHz]$) divided by 8, allowing a bit rate of 10 [MHz], or a period of 100 [ns].

SPI_Read()

Read data from the peripheral.

Returns

uint8_t

SPI_WriteCmd()

Write an 8-bit command to the peripheral.

Parameters

```
cmd command for peripheral
```

SPI_WriteData()

Write 8-bit data to the peripheral.

Parameters

data input data for peripheral

4.1.6 System Tick (SysTick)

Collaboration diagram for System Tick (SysTick):



Files

• file SysTick.c

Implementation details for SysTick functions.

file SysTick.h

Driver module for using SysTick-based timing and/or interrupts.

Functions

void SysTick_Timer_Init (void)

Initialize SysTick for timing purposes.

void SysTick_Wait1ms (uint32_t delay_ms)

Delay for specified amount of time in [ms]. Assumes $f_bus = 80[MHz]$.

void SysTick_Interrupt_Init (uint32_t time_ms)

Initialize SysTick for interrupts.

4.1.6.1 Detailed Description

Functions for timing and periodic interrupts via SysTick.

4.1.6.2 Function Documentation

SysTick_Interrupt_Init()

Initialize SysTick for interrupts.

Parameters

time_ms | Time in [ms] between interrupts. Cannot be more than 200[ms].

4.1.7 Timer

Collaboration diagram for Timer:



Files

• file Timer.c

Source code for Timer module.

• file Timer.h

Device driver for general-purpose timer modules.

Data Structures

struct Timer_t

Typedefs

- typedef volatile uint32_t * register_t

Enumerations

Functions

- Timer t Timer Init (timerName t timerName)
- timerName_t Timer_getName (Timer_t timer)
- void Timer setMode (Timer t timer, timerMode t timerMode, bool isCountingUp)
- void Timer_enableAdcTrigger (Timer_t timer)
- void Timer_disableAdcTrigger (Timer_t timer)
- void Timer_enableInterruptOnTimeout (Timer_t timer, uint8_t priority)
- void Timer_disableInterruptOnTimeout (Timer_t timer)
- void Timer clearInterruptFlag (Timer t timer)
- void Timer_setInterval_ms (Timer t timer, uint32 t time ms)
- uint32 t Timer getCurrentValue (Timer t timer)
- · void Timer Start (Timer t timer)
- void Timer_Stop (Timer_t timer)
- bool Timer_isCounting (Timer_t timer)
- void Timer_Wait1ms (Timer_t timer, uint32_t time_ms)

Variables

static TimerStruct_t TIMER_POOL [6]

4.1.7.1 Detailed Description

Functions for timing and periodic interrupts via general-purpose timer modules (GPTM).

4.1.7.2 Variable Documentation

TIMER POOL

```
TimerStruct_t TIMER_POOL[6] [static]
```

Initial value:

4.1.8 Universal Asynchronous Receiver/Transmitter (UART)

Collaboration diagram for Universal Asynchronous Receiver/Transmitter (UART):



Files

• file UART.c

Source code for UART module.

file UART.h

Driver module for serial communication via UART0 and UART 1.

Data Structures

struct UART t

Macros

• #define ASCII_CONVERSION 0x30

Typedefs

typedef volatile uint32_t * register_t

Enumerations

```
enum GPIO BASE ADDRESSES {
 GPIO PORTA BASE = (uint32 t) 0x40004000 , GPIO PORTB BASE = (uint32 t) 0x40005000 , GPIO ←
 PORTC BASE = (uint32 t) 0x40006000, GPIO PORTD BASE = (uint32 t) 0x40007000,
 GPIO PORTE BASE = (uint32 t) 0x40024000 , GPIO PORTF BASE = (uint32 t) 0x40025000 }
enum UART BASE ADDRESSES {
 UART0_BASE = (uint32_t) 0x4000C000 , UART1_BASE = (uint32_t) 0x4000D000 , UART2_BASE =
 (uint32_t) 0x4000E000 , UART3_BASE = (uint32_t) 0x4000F000 ,
 UART4_BASE = (uint32_t) 0x40010000 , UART5_BASE = (uint32_t) 0x40011000 , UART6_BASE =
 (uint32_t) 0x40012000, UART7_BASE = (uint32_t) 0x40013000}
enum UART REG OFFSETS {
 UART FR R OFFSET = (uint32 t) 0x18 , IBRD R OFFSET = (uint32 t) 0x24 , FBRD R OFFSET =
 (uint32_t) 0x28, LCRH_R_OFFSET = (uint32_t) 0x2C,
 CTL_R_OFFSET = (uint32_t) 0x30 , CC_R_OFFSET = (uint32_t) 0xFC8 }
• enum UART Num t {
 UARTO, UART1, UART2, UART3,
 UART4, UART5, UART6, UART7}
```

Functions

```
    UART_t * UART_Init (GPIO_Port_t *port, UART_Num_t uartNum)
```

Initialize the specified UART peripheral.

• unsigned char UART_ReadChar (UART_t *uart)

Read a single ASCII character from the UART.

• void UART_WriteChar (UART_t *uart, unsigned char input_char)

Write a single character to the UART.

void UART_WriteStr (UART_t *uart, void *input_str)

Write a C string to the UART.

• void UART_WriteInt (UART_t *uart, int32_t n)

Write a 32-bit unsigned integer the UART.

void UART_WriteFloat (UART_t *uart, double n, uint8_t num_decimals)

Write a floating-point number the UART.

Variables

• static UART_t UART_ARR [8]

4.1.8.1 Detailed Description

Functions for UART-based communication.

4.1.8.2 Function Documentation

UART_Init()

Initialize the specified UART peripheral.

Parameters

in	port	GPIO port to use.	
in	uartNum	UART number. Should be either one of the enumerated constants or an int in range [0, 7].	
out	UART⊷	(Pointer to) initialized UART peripheral.	
	_ <i>t</i> *		

Given the bus frequency (f_bus) and desired baud rate (BR), the baud rate divisor (BRD) can be calculated: $BRD = f_{bus}/(16*BR)$

The integer BRD (IBRD) is simply the integer part of the BRD: IBRD = int(BRD)

The fractional BRD (FBRD) is calculated using the fractional part (mod (BRD, 1)) of the BRD: FBRD = int((mod(BRD,1)*64)+0.5)

UART_ReadChar()

Read a single ASCII character from the UART.

Parameters

in	uart	UART to read from.
out	unsigned	char ASCII character from sender.

UART_WriteChar()

Write a single character to the UART.

Parameters

in	uart	UART to read from.
in	input_char	ASCII character to send.

UART_WriteStr()

Write a C string to the UART.

Parameters

in	uart	UART to read from.
in	input_str	Array of ASCII characters.

UART_WriteInt()

Write a 32-bit unsigned integer the UART.

Parameters

in	uart	UART to read from.
in	n	Unsigned 32-bit int to be converted and transmitted.

UART_WriteFloat()

Write a floating-point number the UART.

Parameters

in	uart	UART to read from.
in	n	Floating-point number to be converted and transmitted.
in	num_decimals	Number of digits after the decimal point to include.

4.1.8.3 Variable Documentation

UART_ARR

```
UART_t UART_ARR[8] [static]
```

Initial value:

```
{ UARTO_BASE, ((register_t) (UARTO_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false }, { UART1_BASE, ((register_t) (UART1_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false }, { UART2_BASE, ((register_t) (UART2_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN6, GPIO_PIN7, false }, { UART3_BASE, ((register_t) (UART3_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN6, GPIO_PIN7, false }, { UART4_BASE, ((register_t) (UART4_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false }, { UART5_BASE, ((register_t) (UART5_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false }, { UART6_BASE, ((register_t) (UART6_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false }, { UART7_BASE, ((register_t) (UART7_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN1, false }
```

4.1.9 Interrupt Service Routines

Collaboration diagram for Interrupt Service Routines:



Files

• file ISR.c

Source code for interrupt vector handling module.

· file ISR.h

Module for configuring interrupt service routines (ISRs).

Macros

- #define VECTOR TABLE BASE ADDR (uint32 t) 0x00000000
- #define VECTOR_TABLE_SIZE (uint32_t) 155
- #define VECTOR_TABLE_ALIGNMENT (uint32_t)(1 << 10)
- #define NVIC EN BASE ADDR (uint32 t) 0xE000E100
- #define NVIC_DIS_BASE_ADDR (uint32_t) 0xE000E180
- #define NVIC PRI BASE ADDR (uint32 t) 0xE000E400
- #define NVIC_UNPEND_BASE_ADDR (uint32_t) 0xE000E280

Typedefs

- typedef volatile uint32_t * register_t
- typedef void(* ISR_t) (void)

Type definition for function pointers representing ISRs.

Functions

- static void ISR_setStatus (const uint8_t vectorNum, const bool isEnabled)
- void ISR_GlobalDisable (void)

Disable all interrupts globally.

• void ISR_GlobalEnable (void)

Enable all interrupts globally.

- static ISR_t newVectorTable[VECTOR_TABLE_SIZE] $_$ attribute $_$ ((aligned(VECTOR_TABLE $_$ \hookrightarrow ALIGNMENT)))
- void ISR_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR addToIntTable (ISR t isr, const uint8 t vectorNum)

Add an ISR to the interrupt table.

void ISR_setPriority (const uint8_t vectorNum, const uint8_t priority)

Set the priority for an interrupt.

void ISR Enable (const uint8 t vectorNum)

Enable an interrupt in the NVIC.

void ISR_Disable (const uint8_t vectorNum)

Disable an interrupt in the NVIC.

void ISR triggerInterrupt (const uint8 t vectorNum)

Generate a software-generated interrupt (SGI).

void ISR_clearPending (const uint8_t vectorNum)

Clear an ISR's pending bit.

Variables

- static bool interruptsAreEnabled = true
- void(*const interruptVectorTable [])(void)
- static bool isTableCopiedToRam = false

4.1.9.1 Detailed Description

Functions for manipulating the interrupt vector table and setting up interrupt handlers via the NVIC.

4.1.9.2 Function Documentation

ISR_GlobalDisable()

Disable all interrupts globally.

See also

ISR_GlobalEnable()

ISR_GlobalEnable()

```
void ISR_GlobalEnable (
     void )
```

Enable all interrupts globally.

See also

ISR_GlobalDisable()

ISR_InitNewTableInRam()

Relocate the vector table to RAM.

Precondition

Call this after disabling interrupts globally.

Postcondition

The vector table is now located in RAM, allowing the ISRs listed in the startup file to be replaced.

See also

ISR_GlobalDisable(), ISR_addToIntTable()

ISR_addToIntTable()

Add an ISR to the interrupt table.

Precondition

Initialize a new vector table in RAM before calling this function.

Parameters

in	isr	Name of the ISR to add.	
in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range $[16,$	154].

Postcondition

The ISR is now added to the vector table and available to be called.

See also

ISR_InitNewTableInRam()

ISR_setPriority()

Set the priority for an interrupt.

Precondition

Disable the interrupt before adjusting its priority.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154].
in	priority	Priority to assign. Highest priority is 0, lowest is 7.	

Postcondition

The interrupt's priority has now been changed in the NVIC.

See also

ISR_Disable()

ISR_Enable()

Enable an interrupt in the NVIC.

Precondition

If needed, set the interrupt's priority (default 0, or highest priority) before calling this.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154].
----	-----------	--

Postcondition

The interrupt is now enabled in the NVIC.

See also

```
ISR_setPriority(), ISR_Disable()
```

ISR_Disable()

Disable an interrupt in the NVIC.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154]	
----	-----------	---	--

Postcondition

The interrupt is now enabled in the NVIC.

See also

ISR_Enable()

ISR_triggerInterrupt()

Generate a software-generated interrupt (SGI).

4.2 Middleware 21

Precondition

Enable the ISR (and set priority as needed) for calling this.

Enable all interrupts before calling this.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range $[16, 154]$.	
----	-----------	---	--

Postcondition

The ISR should trigger once any higher priority ISRs return.

See also

ISR_clearPending()

ISR_clearPending()

Clear an ISR's pending bit.

Precondition

This should be called during the ISR for an SGI.

Parameters

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154].
----	-----------	--	----

Postcondition

The ISR should not trigger again until re-activated.


See also

ISR_triggerInterrupt()

4.2 Middleware

High-level device driver modules.

Collaboration diagram for Middleware:

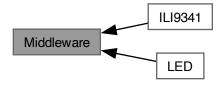

Modules

- ILI9341
- LED

4.2.1 Detailed Description

High-level device driver modules.

These modules contain functions for interfacing with external devices/peripherals via the use of low-level drivers.

4.2.2 ILI9341

Collaboration diagram for ILI9341:



Files

• file ILI9341.c

Source code for ILI9341 module.

· file ILI9341.h

Driver module for interfacing with an ILI9341 LCD driver.

4.2 Middleware 23

Enumerations

```
    enum Cmd_t {
        NOP = 0x00 , SWRESET = 0x01 , SPLIN = 0x10 , SPLOUT = 0x11 ,
        PTLON = 0x12 , NORON = 0x13 , DINVOFF = 0x20 , DINVON = 0x21 ,
        CASET = 0x2A , PASET = 0x2B , RAMWR = 0x2C , DISPOFF = 0x28 ,
        DISPON = 0x29 , PLTAR = 0x30 , VSCRDEF = 0x33 , MADCTL = 0x36 ,
        VSCRSADD = 0x37 , IDMOFF = 0x38 , IDMON = 0x39 , PIXSET = 0x3A ,
        FRMCTR1 = 0xB1 , FRMCTR2 = 0xB2 , FRMCTR3 = 0xB3 , PRCTR = 0xB5 ,
        IFCTL = 0xF6 }
    enum { ILI9341_NUM_COLS = 240 , ILI9341_NUM_ROWS = 320 }
    enum { ON = true , OFF = false }
    enum colorDepth_t { ILI9341_COLORDEPTH_16BIT = 0x55 , ILI9341_COLORDEPTH_18BIT = 0x66 }
```

Functions

- static void ILI9341 setAddress (uint16 t start address, uint16 t end address, bool is row)
- static void ILI9341_sendParams (Cmd_t cmd)

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

void ILI9341 Init (Timer t timer)

Initialize the LCD driver and the SPI module.

void ILI9341 resetHard (Timer t timer)

Perform a hardware reset of the LCD driver.

void ILI9341_resetSoft (Timer_t timer)

Perform a software reset of the LCD driver.

void ILI9341_setSleepMode (bool isSleeping, Timer_t timer)

Enter or exit sleep mode.

void ILI9341_setDispMode (bool isNormal, bool isFullColors)

Set the display area and color expression.

void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

Set the partial display area for partial mode. Call before activating partial mode via ILI9341_setDisplayMode().

void ILI9341_setDispInversion (bool is_ON)

Toggle display inversion (OFF by default).

void ILI9341_setDispOutput (bool is_ON)

Change whether the IC is outputting to the display for not.

void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols
 — Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341_setColorDepth (colorDepth_t colorDepth)

Set the pixel format to be 16-bit (65K colors) or 18-bit (262K colors).

void ILI9341 setFrameRateNorm (uint8 t divisionRatio, uint8 t clocksPerLine)

TODO: Write brief

• void ILI9341 setFrameRateIdle (uint8 t divisionRatio, uint8 t clocksPerLine)

TODO: Write brief.

void ILI9341_setInterface (void)

Sets the interface for the ILI9341. The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

void ILI9341_setRowAddress (uint16_t startRow, uint16_t endRow)

not using backlight, so these aren't necessary

void ILI9341_setColAddress (uint16_t startCol, uint16_t endCol)

Sets the start/end rows to be written to.

void ILI9341_writeMemCmd (void)

Signal to the driver that pixel data is incoming and should be written to memory.

• void ILI9341 writePixel (uint8 t red, uint8 t green, uint8 t blue, bool is 16bit)

Write a single pixel to frame memory.

Variables

- static uint32_t ILI9341_Buffer [8]
- static Fifo_t ILI9341_Fifo

4.2.2.1 Detailed Description

Functions for interfacing an ILI9341-based 240RGBx320 LCD via Serial Peripheral Interface (SPI).

4.2.2.2 Enumeration Type Documentation

Cmd_t

enum Cmd_t

Enumerator

SWRESET	No Operation.
SPLIN	Software Reset.
SPLOUT	Enter Sleep Mode.
PTLON	Sleep Out (i.e. Exit Sleep Mode)
NORON	Partial Display Mode ON.
DINVOFF	Normal Display Mode ON.
DINVON	Display Inversion OFF.
CASET	Display Inversion ON.
PASET	Column Address Set.
RAMWR	Page Address Set.
DISPOFF	Memory Write.
DISPON	Display OFF.
PLTAR	Display ON.
VSCRDEF	Partial Area.
MADCTL	Vertical Scrolling Definition.
VSCRSADD	Memory Access Control.
IDMOFF	Vertical Scrolling Start Address.
IDMON	Idle Mode OFF.
PIXSET	Idle Mode ON.
FRMCTR1	Pixel Format Set.
FRMCTR2	Frame Rate Control Set (Normal Mode)
FRMCTR3	Frame Rate Control Set (Idle Mode)
PRCTR	Frame Rate Control Set (Partial Mode)
IFCTL	Blanking Porch Control.

colorDepth_t

enum colorDepth_t

4.2 Middleware 25

Enumerator

ILI9341_COLORDEPTH_16BIT	16-bit color depth
ILI9341_COLORDEPTH_18BIT	18-bit color depth

4.2.2.3 Function Documentation

ILI9341 setAddress()

Currently unused commands #define RDDST (uint8_t) 0x09 /// Read Display Status #define RDDMADCTL (uint8 -_t) 0x08 /// Read Display MADCTL #define RDDCOLMOD (uint8_t) 0x0C /// Read Display Pixel Format #define
RGBSET (uint8_t) 0x2D /// Color Set #define RAMRD (uint8_t) 0x2E /// Memory Read #define WRITE_MEMORY -_CONTINUE (uint8_t) 0x3C /// Write_Memory_Continue #define READ_MEMORY_CONTINUE (uint8_t) 0x3E ///
Read_Memory_Continue #define WRDISBV (uint8_t) 0x51 /// Write Display Brightness #define RDDISBV (uint8_t)
0x52 /// Read Display Brightness #define IFMODE (uint8_t) 0x80 /// RGB Interface Signal Control (i.e. Interface
Mode Control) #define INVTR (uint8_t) 0x84 /// Display Inversion Control This function implements the "Column
Address Set" (CASET) and "Page Address Set" (PASET) commands from p. 110-113 of the ILI9341 datasheet.

The input parameters represent the first and last addresses to be written to when ILI9341_writePixel() is called.

To work correctly, startAddress must be no greater than endAddress, and endAddress cannot be greater than the max number of rows/columns.

ILI9341_sendParams()

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

Parameters

in	cmd	Command to send.

ILI9341_Init()

Initialize the LCD driver and the SPI module.

Parameters

in timer Hardware timer to use during initialization
--

ILI9341_resetHard()

```
void ILI9341_resetHard ( {\tt Timer\_t~\it timer}~)
```

Perform a hardware reset of the LCD driver.

Parameters

	in	timer	Hardware timer to use during reset.]
--	----	-------	-------------------------------------	---

The LCD driver's RESET pin requires a negative logic (i.e. active LOW) signal for >= 10 [us] and an additional 5 [ms] before further commands can be sent.

ILI9341_resetSoft()

```
void ILI9341_resetSoft ( {\tt Timer\_t~\it timer}~)
```

Perform a software reset of the LCD driver.

Parameters

in	timer	Hardware timer to use during reset.
----	-------	-------------------------------------

the driver needs 5 [ms] before another command

ILI9341_setSleepMode()

```
void ILI9341_setSleepMode (
          bool isSleeping,
          Timer_t timer )
```

Enter or exit sleep mode.

Parameters

in	isSleeping	true to enter sleep mode, false to exit
in	timer	Hardware timer to use after mode change.

This function turns sleep mode ON or OFF depending on the value of $is_sleeping$. Either way, the MCU must wait >= 5 [ms] before sending further commands.

4.2 Middleware 27

It's also necessary to wait 120 [ms] before sending SPLOUT after sending SPLIN or a reset, so this function waits 120 [ms] regardless of the preceding event.

ILI9341_setDispMode()

```
void ILI9341_setDispMode (
                bool isNormal,
                bool isFullColors )
```

Set the display area and color expression.

```
Normal mode is the default and allows output to the full display area. Partial mode should be activated after calling 'ILI9341_setPartialArea()'.

Setting 'isFullColors' to 'false' restricts the color expression to 8 colors, determined by the MSB of the R/G/B values.
```

Parameters

isNormal	true for normal mode, false for partial mode
isFullColors	true for full colors, false for 8 colors

ILI9341_setPartialArea()

Set the partial display area for partial mode. Call before activating partial mode via ILI9341_setDisplayMode().

Parameters


rowStart	
rowEnd	

ILI9341_setDispInversion()

```
void ILI9341_setDispInversion ( bool \ is\_ON \ )
```

Toggle display inversion (OFF by default).

Parameters

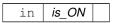

Postcondition

Display colors are either inverted (ON) or not inverted (OFF).

TODO: Write description

ILI9341_setDispOutput()

```
void ILI9341_setDispOutput ( bool is\_ON )
```

Change whether the IC is outputting to the display for not.

Parameters

```
in is_ON
```

Postcondition

If ON, the IC outputs data from its memory to the display. If OFF, the display is cleared and the IC stops outputting data.

TODO: Write description

ILI9341_setMemAccessCtrl()

```
void ILI9341_setMemAccessCtrl (
    bool areRowsFlipped,
    bool areColsFlipped,
    bool areRowsAndColsSwitched,
    bool isVertRefreshFlipped,
    bool isColorOrderFlipped,
    bool isHorRefreshFlipped)
```

Set how data is converted from memory to display.

Parameters

in	areRowsFlipped	
in	areColsFlipped	
in	areRowsAndColsSwitched	
in	isVertRefreshFlipped	
in	isColorOrderFlipped	
in	isHorRefreshFlipped	

This function implements the "Memory Access Control" (MADCTL) command from p. 127-128 of the ILI9341 datasheet, which controls how the LCD driver displays data upon writing to memory.

Name	Bit #	Effect when set = 1
MY	7	flip row (AKA "page") addresses

4.2 Middleware 29

Name	Bit #	Effect when set = 1
MX	6	flip column addresses
MV	5	exchange rows and column addresses
ML	4	reverse horizontal refresh order
BGR	3	reverse color input order (RGB -> BGR)
МН	2	reverse vertical refresh order

All bits are clear after powering on or HWRESET.

ILI9341_setColorDepth()

Set the pixel format to be 16-bit (65K colors) or 18-bit (262K colors).

Parameters

```
in colorDepth
```

Postcondition

16BIT mode allows for \sim 65K (2 $^{\wedge}$ 16) colors and requires 2 transfers. 18BIT mode allows for \sim 262K (2 $^{\wedge}$ 18) colors but requires 3 transfers.

ILI9341_setFrameRateNorm()

TODO: Write brief.

TODO: Write description

ILI9341_setFrameRateIdle()

TODO: Write brief.

TODO: Write description

ILI9341_setInterface()

Sets the interface for the ILI9341. The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

This function implements the "Interface Control" IFCTL command from p. 192-194 of the ILI9341 datasheet, which controls how the LCD driver handles 16-bit data and what interfaces (internal or external) are used.

Name	Bit #	Param #	Effect when set = 1				
MY_EOR	7		flips value of corresponding MADCTL bit				
MX_EOR	6		flips value of corresponding MADCTL bit				
MV_EOR	5	0	flips value of corresponding MADCTL bit				
BGR_EOR	3		flips value of corresponding MADCTL bit				
WEMODE	0		overflowing pixel data is not ignored				
EPF[1:0]	5:4	1	controls 16 to 18-bit pixel data conversion				
MDT[1:0]	1:0	'	controls display data transfer method				
ENDIAN	5		host sends LSB first				
DM[1:0]	3:2	selects display operation mode					
RM	1	_	selects GRAM interface mode				
RIM	0		specifies RGB interface-specific details				

The first param's bits are cleared so that the corresponding MADCTL bits (ILl9341_setMemoryAccessCtrl()) are unaffected and overflowing pixel data is ignored. The EPF bits are cleared so that the LSB of the R and B values is copied from the MSB when using 16-bit color depth. The TM4C123 sends the MSB first, so the ENDIAN bit is cleared. The other bits are cleared and/or irrelevant since the RGB and VSYNC interfaces aren't used.

ILI9341_setRowAddress()

not using backlight, so these aren't necessary

Sets the start/end rows to be written to.

Parameters



0 <= startRow <= endRow</pre>

Parameters



startRow<=endRow` < 240

See also

ILI9341_setRowAddress, ILI9341_writePixel()

This function is simply an interface to ILI9341_setAddress(). To work correctly, start_row must be no greater than end_row, and end_row cannot be greater than the max row number (default 320).

4.2 Middleware 31

ILI9341_setColAddress()

Sets the start/end rows to be written to.

Parameters



0 <= startCol <= endCol</pre>

Parameters



startCol<=endCol` < 240

See also

ILI9341_setRowAddress, ILI9341_writePixel()

This function is simply an interface to ILI9341_setAddress(). To work correctly, $start_col$ must be no greater than end_col, and end_col cannot be greater than the max column number (default 240).

ILI9341_writeMemCmd()

```
void ILI9341_writeMemCmd ( void \ \ )
```

Signal to the driver that pixel data is incoming and should be written to memory.

Precondition

Set the row and/or column addresses.

Postcondition

The LCD driver is ready to accept pixel data.

See also

ILI9341_setRowAddress, ILI9341_setColAddress(), ILI9341_writePixel()

ILI9341_writePixel()

Write a single pixel to frame memory.

Precondition

Send the "Write Memory" command.

Set the desired color depth for the display.

Parameters

in	red	5 or 6-bit R value
in	green	5 or 6-bit G value
in	blue	5 or 6-bit B value
in	is_16bit	true for 16-bit (65K colors, 2 transfers) color depth, false for 18-bit (262K colors, 3 transfer) color depth

See also

ILI9341_setColorDepth, ILI9341_writeMemCmd(), ILI9341_writePixel()

This function sends one pixel to the display. Because the serial interface (SPI) is used, each pixel requires 2 transfers in 16-bit mode and 3 transfers in 18-bit mode.

The following table (adapted from p. 63 of the datasheet) visualizes how the RGB data is sent to the display when using 16-bit color depth.

Transfer	1									2						
Bit #	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Value	R4	R3	R2	R1	R0	G5	G4	G3	G2	G1	G0	B4	В3	B2	B1	B0

The following table (adapted from p. 64 of the datasheet) visualizes how the RGB data is sent to the display when using 18-bit color depth.

Transfer		1									
Bit #	7	6	5	4	3	2	1	0	7	6	
Value	R5	R4	R3	R2	R1	R0	0/1	0/1	G5	G4	

4.2 Middleware 33

4.2.3 LED

Collaboration diagram for LED:



Files

• file Led.c

Source code for LED module.

• file Led.h

Interface for LED module.

Data Structures

• struct Led_t

Macros

• #define LED_POOL_SIZE 3

Functions

```
• Led_t * Led_Init (GPIO_Port_t *gpioPort, GPIO_Pin_t pin)
```

Initialize a light-emitting diode (LED) as an Led_t.

• GPIO_Port_t * Led_GetPort (Led_t *led)

Get the GPIO port associated with the LED.

• GPIO_Pin_t Led_GetPin (Led_t *led)

Get the GPIO pin associated with the LED.

bool Led_isOn (Led_t *led)

Check the LED's status.

void Led_TurnOn (Led_t *led)

Turn the LED ON.

void Led_TurnOff (Led_t *led)

Turn the LED OFF.

void Led_Toggle (Led_t *led)

Toggle the LED (i.e. $OFF \rightarrow ON \text{ or } ON \rightarrow OFF$).

Variables

- static Led_t Led_ObjPool [LED_POOL_SIZE] = { 0 }
- static uint8_t num_free_leds = LED_POOL_SIZE

4.2.3.1 Detailed Description

Functions for driving light-emitting diodes (LEDs) via GPIO.

4.2.3.2 Function Documentation

Led_Init()

Initialize a light-emitting diode (LED) as an Led_t.

Parameters

in	gpioPort	Pointer to a struct representing a GPIO port.	
in	pin	GPIO pin to use.	
out	Led_t*	Pointer to LED data structure.	

Led_GetPort()

Get the GPIO port associated with the LED.

Parameters

in	led	Pointer to LED data structure.
out	GPIO_Port⇔	Pointer to a GPIO port data structure.
	_ <i>t</i> *	

Led_GetPin()

Get the GPIO pin associated with the LED.

Parameters

in	led	Pointer to LED data structure.
out	GPIO_←	GPIO pin associated with the LED.
	Pin_t	

4.2 Middleware 35

Led_isOn()

```
bool Led_isOn ( \label{led_t*led} \begin{tabular}{ll} $\operatorname{Led_t} * \operatorname{led} \end{tabular}
```

Check the LED's status.

Parameters

in	led	Pointer to LED data structure.
out	true	the LED is ON.
out	false	the LED is OFF.

Led_TurnOn()

Turn the LED $\mbox{ON}.$

Parameters

in	led	Pointer to LED data structure.
----	-----	--------------------------------

Led_TurnOff()

Turn the LED OFF.

Parameters

in	led	Pointer to LED data structure.
----	-----	--------------------------------

Led_Toggle()

Toggle the LED (i.e. \mbox{OFF} -> \mbox{ON} or \mbox{ON} -> \mbox{OFF}).


Parameters

in	led	Pointer to LED data structure.
----	-----	--------------------------------

4.3 Application Software

Application-specific software modules.

Collaboration diagram for Application Software:

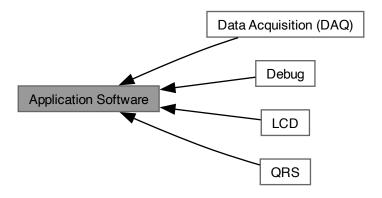

Modules

- Data Acquisition (DAQ)
- Debug
- LCD
- QRS

4.3.1 Detailed Description

Application-specific software modules.

These modules contain functions specifically built for this project's purposes.

4.3.2 Data Acquisition (DAQ)

Collaboration diagram for Data Acquisition (DAQ):



Files

• file DAQ.c

Source code for DAQ module.

• file DAQ.h

Application software for handling data acquision (DAQ) functions.

· file lookup.c

Source code for DAQ module's lookup table.

· file lookup.h

Lookup table for DAQ module.

Macros

#define SAMPLING_PERIOD_MS 5

```
sampling period in ms ( T_s = 1/f_s)
```

- #define LOOKUP_DAQ_MAX (float32_t) 5.5
- #define LOOKUP_DAQ_MIN (float32_t)(-5.5)

Typedefs

typedef arm_biquad_casd_df1_inst_f32 Filter_t

Enumerations

enum {

```
\label{eq:notch} \begin{split} & \text{NUM\_STAGES\_NOTCH} = 6 \text{ , } \\ & \text{NUM\_COEFFS\_NOTCH} = \text{NUM\_STAGES\_NOTCH} * 5 \text{ , } \\ & \text{SIZE\_NOTCH} = \text{NUM\_STAGES\_NOTCH} * 4 \text{ , } \\ & \text{NUM\_STAGES\_BANDPASS} = 4 \text{ , } \\ & \text{NUM\_COEFFS\_DAQ\_BANDPASS} = \text{NUM\_STAGES\_BANDPASS} * 5 \text{ , } \\ & \text{STATE\_BUFF\_SIZE\_BANDPASS} = \text{NUM\_STAGES\_BANDPASS} * 4 \text{ } \\ & \text{NUM\_STAGES\_BANDPASS} * 4 \text{ } \end{split}
```

Functions

const float32_t * Lookup_GetPtr (void)

Return a pointer to the DAQ lookup table.

Variables

- static const float32 t * DAQ LOOKUP TABLE = 0
- static const float32 t COEFFS NOTCH [NUM COEFFS NOTCH]
- static const float32_t COEFFS_BANDPASS [NUM_COEFFS_DAQ_BANDPASS]
- static float32_t stateBuffer_Notch [STATE_BUFF_SIZE_NOTCH]
- static const Filter_t notchFiltStruct = { NUM_STAGES_NOTCH, stateBuffer_Notch, COEFFS_NOTCH }
- static const Filter_t *const notchFilter = ¬chFiltStruct
- static float32_t stateBuffer_Bandpass [STATE_BUFF_SIZE_BANDPASS]
- · static const Filter_t bandpassFiltStruct
- static const Filter_t *const bandpassFilter = &bandpassFiltStruct
- static const float32_t LOOKUP_DAQ_TABLE [4096]

Lookup table for converting ADC data from unsigned 12-bit integer values to 32-bit floating point values.

Initialization

void DAQ_Init (void)
 Initialize the data acquisition (DAQ) module.

Reading Input Data

uint16_t DAQ_readSample (void)

Read a sample from the ADC.

float32 t DAQ convertToMilliVolts (uint16 t sample)

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

Digital Filtering Functions

float32 t DAQ NotchFilter (volatile float32 t xn)

Apply a 60 [Hz] notch filter to an input sample.

• float32_t DAQ_BandpassFilter (volatile float32_t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

4.3.2.1 Detailed Description

Module for managing data acquisition (DAQ) functions.

4.3.2.2 Function Documentation

DAQ_Init()

```
void DAQ_Init (
     void )
```

Initialize the data acquisition (DAQ) module.

Postcondition

The ADC and Timer are initialized, and the DAQ module has access to its lookup table (LUT).

DAQ_readSample()

Read a sample from the ADC.

Precondition

Initialize the DAQ module.

This should be used in an interrupt handler and/or at a consistent rate (i.e. the sampling frequency).

Parameters

out	sample	12-bit sample in range	[0x000,	0xFFF]
-----	--------	------------------------	---------	--------

Postcondition

The sample can now be converted to millivolts.

See also

DAQ_convertToMilliVolts()

DAQ_convertToMilliVolts()

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

Precondition

Read a sample from the ADC.

Parameters

in	sample	12-bit sample in range [0x000, 0xFFF]
out	xn	Voltage value in range $[-5.5, 5.5)[mV]$

Postcondition

The sample x[n] is ready for filtering.

See also

DAQ_readSample()

DAQ_NotchFilter()

```
float32_t DAQ_NotchFilter ( volatile \ float32\_t \ xn \ )
```

Apply a 60 [Hz] notch filter to an input sample.

Precondition

Read a sample from the ADC and convert it to millivolts.

Parameters

in	xn	Raw input sample
out	yn	Filtered output sample

Postcondition

y[n] is ready for analysis and/or further processing.

See also

DAQ_BandpassFilter()

DAQ_BandpassFilter()

```
float32_t DAQ_BandpassFilter ( volatile \ float32\_t \ xn \ )
```

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

Precondition

Read a sample from the ADC and convert it to millivolts.

Parameters

	in	xn	Input sample
ſ	out	yn	Filtered output sample

Postcondition

y[n] is ready for analysis and/or further processing.

See also

DAQ_NotchFilter()

Lookup_GetPtr()

Return a pointer to the DAQ lookup table.

Returns

const float32_t*

4.3.2.3 Variable Documentation

COEFFS_NOTCH

COEFFS_BANDPASS

```
const float32_t COEFFS_BANDPASS[NUM_COEFFS_DAQ_BANDPASS] [static]
```

Initial value:

```
0.3240305185317993f, 0.3665695786476135f, 0.3240305185317993f, -0.20968256890773773f, -0.1729172021150589f,

1.0f, -0.4715292155742645f, 1.0f, 0.5868059992790222f, -0.7193671464920044f,

1.0f, -1.9999638795852661f, 1.0f, 1.9863483905792236f, -0.986438512802124f,

1.0f, -1.9997893571853638f, 1.0f, 1.994096040725708f, -0.9943605065345764f,
```

bandpassFiltStruct

4.3.3 Debug

Collaboration diagram for Debug:



Files

· file Debug.h

Functions to output debugging information to a serial port via UART.

Serial Output

- enum Msg_t { DEBUG_DAQ_INIT , DEBUG_QRS_INIT , DEBUG_LCD_INIT , DEBUG_QRS_START }
- void Debug_SendMsg (void *message)

Send a message to the serial port.

void Debug_SendFromList (Msg_t msg)

Send a message from the message list.

• void Debug_WriteFloat (double value)

Write a floating-point value to the serial port.

Initialization

void Debug_Init (void)
 Initialize the Debug module.

Assertions

• void Debug_Assert (bool condition)

Stops program if condition is true. Useful for bug detection during debugging.

4.3.3.1 Detailed Description

Module for debugging functions, including serial output and assertion.

4.3.3.2 Function Documentation

Debug_Init()

Initialize the Debug module.

Postcondition

An initialization message is sent to the serial port (UART0).

Debug_SendMsg()

Send a message to the serial port.

Precondition

Initialize the Debug module.

Parameters

message	(Pointer to) array of ASCII characters.
---------	---

Postcondition

A floating point value is written to the serial port.

See also

Debug_SendMsg()

Debug_SendFromList()

Send a message from the message list.

Precondition

Initialize the Debug module.

Parameters

	in	msg	An entry from the enumeration.
--	----	-----	--------------------------------

Postcondition

The corresponding message is sent to the serial port.

See also

Debug_SendMsg()

Debug_WriteFloat()

Write a floating-point value to the serial port.

Precondition

Initialize the Debug module.

Parameters

in value Floating-point value

Postcondition

A floating point value is written to the serial port.

See also

Debug_SendMsg()

Debug_Assert()

```
void Debug_Assert (
          bool condition )
```

Stops program if condition is true. Useful for bug detection during debugging.

Precondition

Initialize the Debug module.

Parameters


in	condition	Conditional statement to evaluate.
----	-----------	------------------------------------

Postcondition

If condition == true, the program continues normally. If condition == false, a message is sent and a breakpoint is activated.

4.3.4 LCD

Collaboration diagram for LCD:

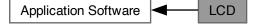

Files

```
• file LCD.c
```

Source code for LCD module.

• file LCD.h

Header file for LCD module.

Enumerations

```
enum { LCD_X_MAX = ILI9341_NUM_ROWS , LCD_Y_MAX = ILI9341_NUM_COLS }
```

Functions

static void LCD_updateNumPixels (void)

Updates lcd's numPixels parameter after changing rows/columns.

• static void LCD setDim (uint16 t d1, uint16 t d2, bool is x, bool update num pixels)

Set new x or y parameters, and optionally update numPixels.

static void LCD_drawLine (uint16_t center, uint16_t lineWidth, bool is_horizontal)

Helper function for drawing straight lines.

Variables

```
struct {
   uint16 t x1
      starting x-value in range [0, x2]
    uint16 t x2
      ending x-value in range [0, NUM_ROWS)
    uint16_t y1
      starting y-value in range [0, y2]
    uint16 t y2
      ending x-value in range [0, NUM_COLS)
    uint32_t numPixels
      num. of pixels to write; = (x2-x1 \ 1) * (y2-y1+1)
    uint8 t R val
      5 or 6-bit R value
    uint8 t G val
      6-bit G value
   uint8 t B val
      5 or 6-bit B value
   bool isOutputOn
      if true, LCD driver writes from its memory to display
   bool isInverted
      if true, the display's colors are inverted
    bool using16bitColors
      true for 16-bit color depth, false for 18-bit
    bool islnit
      if true, LCD has been initialized
 } lcd
```

Color Setting Functions

• enum {

```
 \begin{split} & \textbf{LCD\_BLACK} = 0x00 \text{ , } \textbf{LCD\_RED} = 0x04 \text{ , } \textbf{LCD\_GREEN} = 0x02 \text{ , } \textbf{LCD\_BLUE} = 0x01 \text{ , } \\ & \textbf{LCD\_YELLOW} = 0x06 \text{ , } \textbf{LCD\_CYAN} = 0x03 \text{ , } \textbf{LCD\_PURPLE} = 0x05 \text{ , } \textbf{LCD\_WHITE} = 0x07 \text{ , } \\ & \textbf{LCD\_BLACK\_INV} = \textbf{LCD\_WHITE} \text{ , } \textbf{LCD\_RED\_INV} = \textbf{LCD\_CYAN} \text{ , } \textbf{LCD\_GREEN\_INV} = \textbf{LCD\_PURPLE} \text{ , } \\ & \textbf{LCD\_BLUE\_INV} = \textbf{LCD\_YELLOW} \text{ , } \\ & \textbf{LCD\_YELLOW\_INV} = \textbf{LCD\_BLUE} \text{ , } \textbf{LCD\_CYAN\_INV} = \textbf{LCD\_RED} \text{ , } \textbf{LCD\_PURPLE\_INV} = \textbf{LCD\_GREEN} \text{ , } \\ & \textbf{LCD\_WHITE\_INV} = \textbf{LCD\_BLACK} \text{ } \end{split}
```

void LCD setColor (uint8 t R val, uint8 t G val, uint8 t B val)

Set the current color value for the display. Only the first 5-6 bits of each inputted value are used.

void LCD setColor 3bit (uint8 t color code)

Set the color value via a 3-bit code.

Init./Config. Functions

· void LCD_Init (void)

Initialize the LCD.

void LCD_setOutputMode (bool isOn)

Toggle display output ON or OFF (OFF by default). Turning output OFF stops the LCD driver chip from writing to the display, and also blanks out the display completely.

void LCD_toggleOutput (void)

Toggle display output ON or OFF (OFF by default).

void LCD_setColorInversionMode (bool isOn)

Turn color inversion ON or OFF (OFF by default).

void LCD_toggleColorInversion (void)

Toggle color inversion ON or OFF (OFF by default).

void LCD_setColorDepth (bool is_16bit)

Set the color depth to 16-bit or 18-bit. 16-bit color depth allows for only \sim 65K colors, but only needs 2 data transfers. 18-bit color depth allows for \sim 262K colors, but requires 3 transfers.

void LCD toggleColorDepth (void)

Toggle 16-bit or 18-bit color depth (16-bit by default).

Drawing Area Definition Functions

void LCD_setArea (uint16_t x1_new, uint16_t x2_new, uint16_t y1_new, uint16_t y2_new)

Set the area of the display to be written to. $0 \le x1 \le x2 \le X_MAX$ $0 \le y1 \le y2 \le Y_MAX$.

void LCD_setX (uint16_t x1_new, uint16_t x2_new)

Set only new x-coordinates to be written to. $0 \le x1 \le x2 \le X_MAX$.

void LCD_setY (uint16_t y1_new, uint16_t y2_new)

Set only new y-coordinates to be written to. $0 \le y1 \le y2 \le Y_MAX$.

Drawing Functions

void LCD_Draw (void)

Draw on the LCD display.

• void LCD_Fill (void)

Fill the display with a single color.

void LCD_drawHoriLine (uint16_t yCenter, uint16_t lineWidth)

Draw a horizontal line across the entire display.

void LCD_drawVertLine (uint16_t xCenter, uint16_t lineWidth)

Draw a vertical line across the entire display.

void LCD drawRectangle (uint16 t x1, uint16 t dx, uint16 t y1, uint16 t dy, bool isFilled)

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

4.3.4.1 Detailed Description

Module for displaying graphs on an LCD via the ILI9341 module.

4.3.4.2 Function Documentation

LCD_setDim()

Set new x or y parameters, and optionally update numPixels.

Parameters

d1	start index of selected dimension	
d2	end index of selected dimension	
is_x	true if dimension is x, false if y	
update_num_pixels	true to update lcd.numPixels, false if not	

LCD_drawLine()

Helper function for drawing straight lines.

Parameters

center	Row or column that the line is centered on. center is increased or decreased if the line to be written would have gone out of bounds.	
lineWidth	Width Width of the line. Should be a positive, odd number.	
is_row true for horizontal line, false for vertical line		

LCD_Init()

```
void LCD_Init (
     void )
```

Initialize the LCD.

Postcondition

The display will be ready to accept commands, but output will be off.

LCD_setOutputMode()

```
void LCD_setOutputMode ( bool isOn )
```

Toggle display output ON or OFF (OFF by default). Turning output OFF stops the LCD driver chip from writing to the display, and also blanks out the display completely.

Parameters

```
in isOn true to turn display output ON, false to turn OFF
```

See also

LCD_toggleOutput()

LCD_toggleOutput()

Toggle display output ON or OFF (OFF by default).

See also

LCD_setOutputMode()

LCD_setColorInversionMode()

Turn color inversion ON or OFF (OFF by default).

Parameters

in	isOn	true to invert colors, false to use regular colors

See also

 $LCD_toggleColorInversion(),\ LCD_setColor(),\ LCD_setColor_3bit()$

LCD_toggleColorInversion()

Toggle color inversion ON or OFF (OFF by default).

See also

LCD_setColorInversionMode(), LCD_setColor(), LCD_setColor_3bit()

LCD_setColorDepth()

```
void LCD_setColorDepth ( bool \ is\_16bit \ )
```

Set the color depth to 16-bit or 18-bit. 16-bit color depth allows for only \sim 65K colors, but only needs 2 data transfers. 18-bit color depth allows for \sim 262K colors, but requires 3 transfers.

Parameters

```
in is_16bit true for 16-bit, false for 18b-bit
```

See also

```
LCD_toggleColorDepth(), LCD_setColor(), LCD_setColor_3bit()
```

LCD_toggleColorDepth()

Toggle 16-bit or 18-bit color depth (16-bit by default).

See also

```
LCD_setColorDepth(), LCD_setColor(), LCD_setColor_3bit()
```

LCD_setArea()

Set the area of the display to be written to. $0 \le x1 \le x2 \le X_MAX$ $0 \le y1 \le y2 \le Y_MAX$.

Parameters

x1_new	left-most x-coordinate	
x2_new	right-most x-coordinate	
y1_new	lowest y-coordinate	
y2_new	highest y-coordinate	

See also

```
LCD_setX(), LCD_setY()
```

LCD_setX()

Set only new x-coordinates to be written to. $0 \le x1 \le x2 \le X_MAX$.

Parameters

x1_new	left-most x-coordinate
x2_new	right-most x-coordinate

See also

```
LCD_setY(), LCD_setArea()
```

LCD_setY()

```
void LCD_setY ( \label{lcd_lcd_lcd_lcd} \mbox{uint16\_t} \ y1\_new, \\ \mbox{uint16\_t} \ y2\_new \ )
```

Set only new y-coordinates to be written to. $0 \le y1 \le y2 \le Y_MAX$.

Parameters

y1_new	lowest y-coordinate	
y2_new	highest y-coordinate	

See also

```
LCD_setX(), LCD_setArea()
```

LCD_setColor()

Set the current color value for the display. Only the first 5-6 bits of each inputted value are used.

Parameters

R_val	5-bit ($[0-31]$) R value; 6-bit ($[0-63]$) if color depth is 18-bit		
G_val	6-bit ([0-63]) G value		
B_val	5-bit ($[0-31]$) B value; 6-bit ($[0-63]$) if color depth is 18-bit		

See also

LCD_setColorDepth(), LCD_toggleColorDepth(), LCD_setColor_3bit()

LCD_setColor_3bit()

Set the color value via a 3-bit code.

Parameters

color_code	3-bit color value to use. Bits 2, 1, 0 correspond to R, G, and B values, respectively.
------------	--

See also

```
LCD_setColorDepth(), LCD_toggleColorDepth(), LCD_setColor()
```

This is simply a convenience function for setting the color using the enum values defined in the header file. The ones with the _INV suffix should be used when the display colors are inverted.

hex	binary	macro
0x00	000	LCD_BLACK
0x01	001	LCD_BLUE
0x02	010	LCD_GREEN
0x03	011	LCD_CYAN
0x04	100	LCD_RED
0x05	101	LCD_PURPLE
0x06	110	LCD_YELLOW
0x07	111	LCD_WHITE

LCD_Draw()

```
void LCD_Draw (
     void )
```

Draw on the LCD display.

Precondition

Set the drawable area and the color to use for that area.

Postcondition

The selected areas of the display will be drawn onto with the selected color.

See also

```
LCD_setArea(), LCD_setX(), LCD_setY()
```

LCD_drawHoriLine()

Draw a horizontal line across the entire display.

Parameters

yCenter	y-coordinate to center the line on
lineWidth	width of the line; should be a positive, odd number

See also

LCD_drawVertLine, LCD_drawRectangle()

LCD_drawVertLine()

Draw a vertical line across the entire display.

Parameters

xCenter	x-coordinate to center the line on
lineWidth	width of the line; should be a positive, odd number

See also

LCD_drawHoriLine, LCD_drawRectangle()

LCD_drawRectangle()

```
void LCD_drawRectangle ( \label{eq:lcd_lcd} \mbox{uint16\_t } x1, \\ \mbox{uint16\_t } dx, \\
```

```
uint16_t y1,
uint16_t dy,
bool isFilled )
```

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

Parameters

x1	lowest (left-most) x-coordinate
dx	length (horizontal distance) of the rectangle
y1	lowest (bottom-most) y-coordinate
dy	height (vertical distance) of the rectangle
isFilled	true to fill the rectangle, false to leave it unfilled

4.3.5 QRS

Collaboration diagram for QRS:



Files

- file QRS.c
 - Source code for QRS module.
- file QRS.h

QRS detection algorithm functions.

Macros

- #define QRS_NUM_FID_MARKS 20
- #define FLOAT_COMPARE_TOLERANCE (float32_t)(1E-5f)
- #define **IS_GREATER**(X, Y) (bool) ((X Y) > FLOAT_COMPARE_TOLERANCE)
- #define IS_LESSER(X, Y) (bool) ((Y X) > FLOAT_COMPARE_TOLERANCE)
- #define IS_PEAK(X_MINUS_1, X, X_PLUS_1) (bool) (IS_GREATER(X, X_MINUS_1) && IS_GREATER(X, X_PLUS_1))
- #define QRS_SAMP_FREQ ((uint32_t) 200)
- #define QRS SAMP PERIOD SEC ((float32 t) 0.005f)
- #define QRS_NUM_SAMP ((uint16_t) (1200))

Typedefs

- typedef arm_biquad_casd_df1_inst_f32 IIR_Filt_t
- typedef arm_fir_instance_f32 FIR_Filt_t

Enumerations

• enum {

```
NUM_STAGES_BANDPASS = 4 , NUM_COEFF_HIGHPASS = NUM_STAGES_BANDPASS * 5 , STATE ← BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4 , NUM_COEFF_DERFILT = 5 , STATE_BUFF_SIZE_DERFILT = NUM_COEFF_DERFILT + QRS_NUM_SAMP - 1 , NUM_COEFF_← MOVAVG = 10 , STATE_BUFF_SIZE_MOVAVG = NUM_COEFF_MOVAVG + QRS_NUM_SAMP - 1 }
```

Functions

• static uint8_t QRS_findFiducialMarks (float32_t yn[], uint16_t fidMarkArray[])

Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").

static void QRS initLevels (const float32 t yn[])

Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.

static float32_t QRS_updateLevel (float32_t peakAmplitude, float32_t level)

Update signal or noise level based on a confirmed peak's amplitude.

static float32 t QRS updateThreshold (void)

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

void QRS_Init (void)

Initialize the QRS detector.

void QRS_Preprocess (const float32_t xn[], float32_t yn[])

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

float32_t QRS_applyDecisionRules (const float32_t yn[])

Calculate the average heart rate (HR) using predetermined decision rules.

float32 t QRS runDetection (const float32 t xn[], float32 t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

Variables

```
    struct {
        bool isCalibrated
        float32_t signalLevel
        float32_t noiseLevel
        float32_t threshold
        uint16_t fidMarkArray [QRS_NUM_FID_MARKS]
        float32_t utilityBuffer1 [QRS_NUM_FID_MARKS]
        array to hold fidMark indices
        float32_t utilityBuffer2 [QRS_NUM_FID_MARKS]
    } Detector = { false, 0.0f, 0.0f, 0.0f, { 0 }, { 0 }, { 0 }}
```

- static const float32_t COEFF_BANDPASS [NUM_COEFF_HIGHPASS]
- static const float32_t **COEFF_DERFILT** [NUM_COEFF_DERFILT] = { -0.125f, -0.25f, 0.0f, 0.25f, 0.125f }
- static const float32 t COEFF MOVAVG [NUM COEFF MOVAVG]
- static float32 t stateBuffer_bandPass [STATE BUFF SIZE BANDPASS] = { 0 }
- static const IIR_Filt_t bandpassFiltStruct = { NUM_STAGES_BANDPASS, stateBuffer_bandPass, COEFF
 —BANDPASS }
- static const IIR_Filt_t *const bandpassFilter = &bandpassFiltStruct
- static float32 t stateBuffer DerFilt [STATE BUFF SIZE DERFILT] = { 0 }
- static const FIR_Filt_t derivativeFiltStruct = { NUM_COEFF_DERFILT, stateBuffer_DerFilt, COEFF_←
 DERFILT }
- static const FIR Filt t *const derivativeFilter = &derivativeFiltStruct
- static float32_t stateBuffer_MovingAvg [STATE_BUFF_SIZE_MOVAVG] = { 0 }
- static const FIR_Filt_t movingAvgFiltStruct = { NUM_COEFF_MOVAVG, stateBuffer_MovingAvg, COEFF → MOVAVG }
- static const FIR_Filt_t *const **movingAverageFilter** = &movingAvgFiltStruct

4.3.5.1 Detailed Description

Module for analyzing ECG data to determine heart rate.

4.3.5.2 Function Documentation

QRS_findFiducialMarks()

Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").

Parameters

in	yn	Array containing the preprocessed ECG signal $\boldsymbol{y}[\boldsymbol{n}]$
in	fidMarkArray	Array to place the fiducial mark's sample indices into.
out	uint8_t	Number of identified fiducial marks

The fiducial marks must be spaced apart by at least 200 [ms] (40 samples @ fs = 200 [Hz]). If a peak is found within this range, the one with the largest amplitude is taken to be the correct peak and the other is ignored.

QRS_initLevels()

Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.

Parameters

	in	yn	Array containing the preprocessed ECG signal $y[n]$
--	----	----	---

Postcondition

The detector's signal and noise levels are initialized.

QRS_updateLevel()

Update signal or noise level based on a confirmed peak's amplitude.

Parameters

	in peakAmplitude in level out newLevel		Amplitude of the peak in signal $y[n]$
			The current value of the signal level or noise level
			The updated value of the signal level or noise level

QRS_updateThreshold()

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

Parameters

out	threshold	New threshold to use for next comparison.	1
-----	-----------	---	---

threshold = f(signalLevel, noiseLevel) = noiseLevel + 0.25(signalLevel - noiseLevel)

QRS_Preprocess()

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

Precondition

Fill inputBuffer with raw or lightly preprocessed ECG data.

Parameters

in	xn	Array of raw ECG signal values.
in	yn	Array used to hold preprocessed ECG signal values.

Postcondition

yn will contain the preprocessed data, which is ready to be analyzed to calculate HR.

See also

QRS_applyDecisionRules()

This function uses the same overall preprocessing pipeline as the original Pan-Tompkins algorithm, but the high-pass and low-pass filters have been replaced with ones generated using Scipy.

QRS_applyDecisionRules()

```
float32_t QRS_applyDecisionRules ( {\tt const\ float32\_t\ yn[]\ )}
```

Calculate the average heart rate (HR) using predetermined decision rules.

Precondition

Preprocess the raw ECG data.

Parameters

in	yn	Array of preprocessed ECG signal values.
out	heartRate	Average heart rate in [bpm].

Postcondition

Certain information (signal/noise levels, thresholds, etc.) is retained between calls.

See also

QRS_Preprocess()

QRS_runDetection()

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

This function simply combines the preprocessing and decision rules functions into a single function.

Parameters

in	xn	Array of raw ECG signal values.
in	yn	Array used to hold preprocessed ECG signal values.
out	heartRate	Average heart rate in [bpm].

Postcondition

yn will contain the preprocessed data.

Certain information (signal/noise levels, thresholds, etc.) is retained between calls.

See also

QRS_Preprocess(), QRS_applyDecisionRules()

4.3.5.3 Variable Documentation

COEFF BANDPASS

```
const float32_t COEFF_BANDPASS[NUM_COEFF_HIGHPASS] [static]

Initial value:
= {
      0.002937758108600974f, 0.005875516217201948f, 0.002937758108600974f,
      1.0485996007919312f, -0.2961403429508209f,

      1.0f, 2.0f, 1.0f,
      1.3876197338104248f, -0.492422878742218f,

      1.0f, -2.0f, 1.0f,
      1.3209134340286255f, -0.6327387690544128f,

      1.0f, -2.0f, 1.0f,
      1.6299355030059814f, -0.7530401945114136f,
}
```


COEFF_MOVAVG

```
const float32_t COEFF_MOVAVG[NUM_COEFF_MOVAVG] [static]
```

Initial value:

4.4 Common

Collaboration diagram for Common:

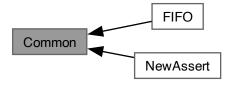

Modules

- FIFO
- NewAssert

4.4 Common 59

Files

· file NewAssert.c

Source code for custom assert implementation.

· file NewAssert.h

Header file for custom assert implementation.

Functions

· void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

4.4.1 Detailed Description

Modules that are used by multiple layers and/or don't fit into any one layer.

4.4.2 Function Documentation

Assert()

```
void Assert (
          bool condition )
```

Custom assert implementation that is more lightweight than the one from newlib.

Parameters

in	condition	Conditional to test. Causes an infinite loop if false.

4.4.3 FIFO

Collaboration diagram for FIFO:



Files

• file Fifo.c

Source code for FIFO buffer module.

• file Fifo.h

FIFO buffer data structure.

Data Structures

struct Fifo_t

Macros

• #define FIFO_POOL_SIZE 5

Functions

Fifo_t FIFO_Init (volatile uint32_t buffer[], const uint32_t N)
 Initialize a FIFO buffer of length N.

Variables

```
    static FifoStruct_t buffer_pool [FIFO_POOL_SIZE] = { 0 }
        pre-allocated pool
    static uint8_t free_buffers = FIFO_POOL_SIZE
```

Basic Operations

void FIFO_Put (volatile Fifo_t fifo, const uint32_t val)

Add a value to the end of the buffer.

• uint32_t FIFO_Get (volatile Fifo_t fifo)

no. of remaining buffers

Remove the first value of the buffer.

• void FIFO_TransferOne (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer a value from one FIFO buffer to another.

Bulk Removal

• void FIFO_Flush (volatile Fifo_t fifo, uint32_t outputBuffer[])

Empty the FIFO buffer's contents into an array.

void FIFO_Reset (volatile Fifo_t fifo)

Reset the FIFO buffer.

void FIFO_TransferAll (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer the contents of one FIFO buffer to another.

Peeking

• uint32_t FIFO_PeekOne (volatile Fifo_t fifo)

See the first element in the FIFO without removing it.

• void FIFO_PeekAll (volatile Fifo_t fifo, uint32_t outputBuffer[])

See the FIFO buffer's contents without removing them.

4.4 Common 61

Status Checks

```
• bool FIFO_isFull (volatile Fifo_t fifo)
```

Check if the FIFO buffer is full.

• bool FIFO_isEmpty (volatile Fifo_t fifo)

Check if the FIFO buffer is empty.

• uint32_t FIFO_getCurrSize (volatile Fifo_t fifo)

Get the current size of the FIFO buffer.

4.4.3.1 Detailed Description

Module for using the "first-in first-out (FIFO) buffer" data structure.

4.4.3.2 Function Documentation

FIFO_Init()

Initialize a FIFO buffer of length N.

Parameters

buffer	Array of size $\ensuremath{\mathbb{N}}$ to be used as FIFO buffer
Ν	Length of buffer. Usable length is ${\tt N}-{\tt 1}.$

Returns

pointer to the FIFO buffer

TODO: Add details

FIFO_Put()

Add a value to the end of the buffer.

Parameters

fifo	Pointer to FIFO object
val	last value in the buffer

FIFO_Get()

Remove the first value of the buffer.

Parameters

```
fifo Pointer to FIFO object
```

Returns

First sample in the FIFO.

FIFO_TransferOne()

Transfer a value from one FIFO buffer to another.

Parameters

srcFifo	Pointer to source FIFO buffer.
destFifo	Pointer to destination FIFO buffer.

FIFO_Flush()

Empty the FIFO buffer's contents into an array.

Parameters

fifo	Pointer to source FIFO buffer.
outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.

FIFO_Reset()

Reset the FIFO buffer.

4.4 Common 63

Parameters

in fifo Pointer to FIFO bu	uffer.
--------------------------------	--------

FIFO_TransferAll()

Transfer the contents of one FIFO buffer to another.

Parameters

srcFifo	Pointer to source FIFO buffer.
destFifo	Pointer to destination FIFO buffer.

FIFO_PeekOne()

See the first element in the FIFO without removing it.

Parameters

fifo	Pointer to FIFO object
------	------------------------

Returns

First sample in the FIFO.

FIFO_PeekAll()

See the FIFO buffer's contents without removing them.

Parameters

fifo	Pointer to FIFO object
outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.

FIFO_isFull()

Check if the FIFO buffer is full.

Parameters

fifo Pointer to the	FIFO buffer.
---------------------	--------------

Return values

true	The buffer is full.
false	The buffer is not full.

FIFO_isEmpty()

Check if the FIFO buffer is empty.

Parameters

fifo	Pointer to the FIFO buffer.
------	-----------------------------

Return values

true	The buffer is empty.
false	The buffer is not empty.

FIFO_getCurrSize()

Get the current size of the FIFO buffer.

Parameters

fifa	Pointer to the FIFO buffer.
IIIO	Folliter to the FIFO buller.

4.5 Main 65

4.4.4 NewAssert

Collaboration diagram for NewAssert:



Module for using a custom assert implementation.

4.5 Main

Files

· file main.c

Main program file.

Enumerations

- enum {

```
DAQ_BUFFER_CAPACITY = 3 , DAQ_BUFFER_SIZE = DAQ_BUFFER_CAPACITY + 1 , QRS_BUFFER ← SIZE = QRS_NUM_SAMP + 1 , LCD_BUFFER_CAPACITY = DAQ_BUFFER_CAPACITY , LCD_BUFFER_SIZE = LCD_BUFFER_CAPACITY + 1 }
```

• enum {

```
 \begin{split} & \textbf{LCD\_TOP\_LINE} = (LCD\_Y\_MAX - 48) \text{ , } \textbf{LCD\_WAVE\_NUM\_Y} = 128 \text{ , } \textbf{LCD\_WAVE\_X\_OFFSET} = 0 \text{ , } \textbf{LCD} \\ & \_\textbf{WAVE\_Y\_MIN} = (0 + LCD\_WAVE\_X\_OFFSET) \text{ , } \\ & \textbf{LCD\_WAVE\_Y\_MAX} = (LCD\_WAVE\_NUM\_Y + LCD\_WAVE\_X\_OFFSET) \text{ } \end{split}
```

Functions

• static void DAQ Handler (void)

Reads ADC output, converts to raw voltage sample, and sends to next FIFO.

• static void Processing_Handler (void)

Removes noise from the signal and sends it to the QRS and LCD FIFO buffers.

· static void LCD Handler (void)

Applies a 0.5-40 [Hz] bandpass filter and plots the sample to the waveform.

- static void **LCD_plotNewSample** (uint16_t x, volatile const float32_t sample)
- int main (void)

Main function for the project.

Variables

- static volatile Fifo_t **DAQ_Fifo** = 0
- static volatile uint32_t **DAQ_Buffer** [DAQ_BUFFER_SIZE] = { 0 }
- static volatile Fifo t QRS_Fifo = 0
- static volatile uint32_t QRS_FifoBuffer [QRS_BUFFER_SIZE] = { 0 }
- static volatile bool QRS_bufferIsFull = false
- static volatile Fifo_t **LCD_Fifo** = 0
- static volatile uint32_t LCD_FifoBuffer [LCD_BUFFER_SIZE] = { 0 }
- static volatile float32_t QRS_Buffer [QRS_BUFFER_SIZE] = { 0 }

4.5.1 Detailed Description

4.5.2 Function Documentation

DAQ_Handler()

Reads ADC output, converts to raw voltage sample, and sends to next FIFO.

This ISR has a priority level of 1, is triggered when the ADC has finished capturing a sample, and also triggers the intermediate processing handler.

Precondition

Initialize the DAQ module.

Postcondition


The converted sample is placed in the DAQ FIFO, and the DAQ ISR is triggered.

4.5 Main 67

See also

DAQ_Init(), Processing_Handler()

Here is the call graph for this function:

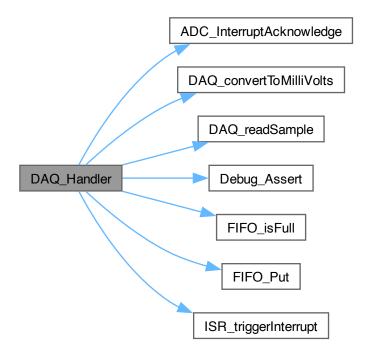

Processing_Handler()

Removes noise from the signal and sends it to the QRS and LCD FIFO buffers.

This ISR has a priority level of 1, is triggered by the DAQ ISR, and triggers the LCD Handler. It also notifies the superloop in main() that the QRS buffer is full.


Postcondition

The converted sample is placed in the DAQ FIFO, and the DAQ ISR is triggered.

See also

```
DAQ_Handler(), main(), LCD_Handler()
```

Here is the call graph for this function:

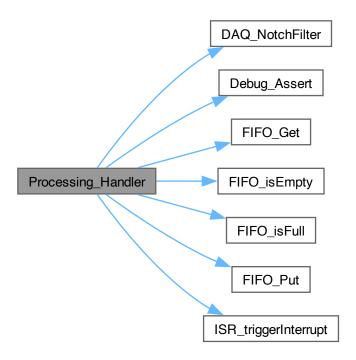

LCD_Handler()

Applies a 0.5-40 [Hz] bandpass filter and plots the sample to the waveform.

This ISR has a priority level of 1 and is triggered by the Processing ISR. This ISR also plots an intermediate sample to the display to make the waveform look more continuous.

Precondition

Initialize the LCD module.

Postcondition


The bandpass-filtered sample is plotted to the LCD.

4.5 Main 69

See also

LCD_Init(), Processing_Handler()

Here is the call graph for this function:

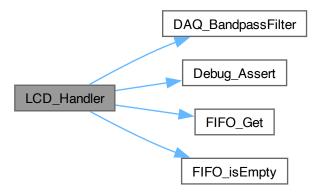


main()

```
int main (
     void )
```

Main function for the project.

Moves the interrupt vector table to RAM; configures and enables the ISRs; initializes all modules and static variables;

and performs QRS detection once the buffer has been filled. Here is the call graph for this function:

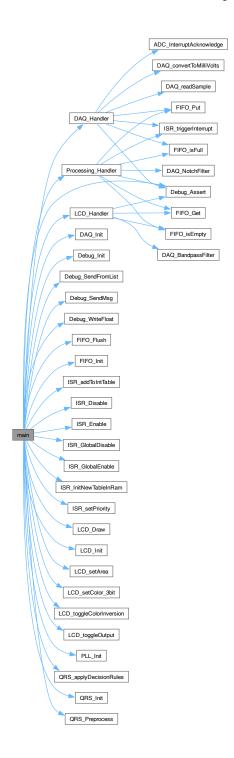

5 Data Structure Documentation

5.1 Fifo_t Struct Reference

Data Fields

volatile uint32_t * buffer

(pointer to) array to use as FIFO buffer

volatile uint32_t N

length of buffer

volatile uint32_t front_idx

idx of front of FIFO

volatile uint32_t back_idx

idx of back of FIFO

The documentation for this struct was generated from the following file:

• Fifo.c

5.2 GPIO_Port_t Struct Reference

Data Fields

- const uint32_t BASE_ADDRESS
- const uint32_t DATA_REGISTER
- · bool islnit

The documentation for this struct was generated from the following file:

• GPIO.c

5.3 Led_t Struct Reference

Data Fields

• GPIO_Port_t * GPIO_PORT_PTR

pointer to GPIO port data structure

• GPIO_Pin_t GPIO_PIN

GPIO pin number.

bool is_ON

state indicator

The documentation for this struct was generated from the following file:

Led.c

5.4 Timer_t Struct Reference

Data Fields

- const timerName_t NAME
- const uint32_t BASE_ADDR
- register_t controlRegister
- register_t intervalLoadRegister
- register_t interruptClearRegister
- bool islnit

The documentation for this struct was generated from the following file:

• Timer.c

5.5 UART_t Struct Reference

Data Fields

```
    const uint32_t BASE_ADDRESS
    register_t const FLAG_R_ADDRESS
    GPIO_Port_t * GPIO_PORT
        pointer to GPIO port data structure

    GPIO_Pin_t RX_PIN_NUM
        GPIO_pin number.

    GPIO_Pin_t TX_PIN_NUM
        GPIO_pin number.
```

bool isInit

The documentation for this struct was generated from the following file:

• UART.c

6 File Documentation

6.1 DAQ.c File Reference

Source code for DAQ module.

```
#include "DAQ.h"
#include "lookup.h"
#include "ADC.h"
#include "Timer.h"
#include "NewAssert.h"
#include "arm_math_types.h"
#include "dsp/filtering_functions.h"
#include "tm4c123gh6pm.h"
#include <math.h>
#include <stdbool.h>
#include <stdint.h>
```

Macros

• #define **SAMPLING_PERIOD_MS** 5 sampling period in ms $(T_s = 1/f_s)$

Typedefs

• typedef arm_biquad_casd_df1_inst_f32 Filter_t

6.1 DAQ.c File Reference 73

Enumerations

• enum {

NUM_STAGES_NOTCH = 6, NUM_COEFFS_NOTCH = NUM_STAGES_NOTCH * 5, STATE_BUFF_ \leftarrow SIZE_NOTCH = NUM_STAGES_NOTCH * 4, NUM_STAGES_BANDPASS = 4, NUM_COEFFS_DAQ_BANDPASS = NUM_STAGES_BANDPASS * 5, STATE_BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4}

Functions

Initialization

void DAQ Init (void)

Initialize the data acquisition (DAQ) module.

Reading Input Data

• uint16_t DAQ_readSample (void)

Read a sample from the ADC.

float32 t DAQ convertToMilliVolts (uint16 t sample)

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

Digital Filtering Functions

float32 t DAQ NotchFilter (volatile float32 t xn)

Apply a 60 [Hz] notch filter to an input sample.

float32_t DAQ_BandpassFilter (volatile float32_t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

Variables

- static const float32_t * DAQ_LOOKUP_TABLE = 0
- static const float32_t COEFFS_NOTCH [NUM_COEFFS_NOTCH]
- static const float32_t COEFFS_BANDPASS [NUM_COEFFS_DAQ_BANDPASS]
- static float32_t stateBuffer_Notch [STATE_BUFF_SIZE_NOTCH]
- static const Filter_t notchFiltStruct = { NUM_STAGES_NOTCH, stateBuffer_Notch, COEFFS_NOTCH }
- static const Filter t *const notchFilter = ¬chFiltStruct
- static float32_t stateBuffer_Bandpass [STATE_BUFF_SIZE_BANDPASS]
- · static const Filter_t bandpassFiltStruct
- static const Filter_t *const bandpassFilter = &bandpassFiltStruct

6.1.1 Detailed Description

Source code for DAQ module.

Author

Bryan McElvy

6.2 DAQ.h File Reference

Application software for handling data acquision (DAQ) functions.

```
#include "lookup.h"
#include "ADC.h"
#include "Timer.h"
#include "NewAssert.h"
#include "arm_math_types.h"
#include "dsp/filtering_functions.h"
#include "tm4c123gh6pm.h"
#include <math.h>
#include <stdbool.h>
#include <stdint.h>
```

Functions

Initialization

void DAQ_Init (void)
 Initialize the data acquisition (DAQ) module.

Reading Input Data

uint16_t DAQ_readSample (void)
 Read a sample from the ADC.
 float32_t DAQ_convertToMilliVolts (uint16_t sample)
 Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

Digital Filtering Functions

```
    float32_t DAQ_NotchFilter (volatile float32_t xn)
        Apply a 60 [Hz] notch filter to an input sample.

    float32_t DAQ_BandpassFilter (volatile float32_t xn)
        Apply a 0.5-40 [Hz] bandpass filter to an input sample.
```

6.2.1 Detailed Description

Application software for handling data acquision (DAQ) functions.

Author

Bryan McElvy

6.3 LCD.c File Reference

Source code for LCD module.

```
#include "LCD.h"
#include "ILI9341.h"
#include "SPI.h"
#include "Timer.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

6.3 LCD.c File Reference 75

Functions

static void LCD_updateNumPixels (void)

Updates lcd's numPixels parameter after changing rows/columns.

static void LCD setDim (uint16 t d1, uint16 t d2, bool is x, bool update num pixels)

Set new x or y parameters, and optionally update numPixels.

static void LCD_drawLine (uint16_t center, uint16_t lineWidth, bool is_horizontal)

Helper function for drawing straight lines.

Init./Config. Functions

void LCD Init (void)

Initialize the LCD.

void LCD_setOutputMode (bool isOn)

Toggle display output ON or OFF (OFF by default). Turning output OFF stops the LCD driver chip from writing to the display, and also blanks out the display completely.

void LCD toggleOutput (void)

Toggle display output ON or OFF (OFF by default).

void LCD_setColorInversionMode (bool isOn)

Turn color inversion ON or OFF (OFF by default).

void LCD_toggleColorInversion (void)

Toggle color inversion ON or OFF (OFF by default).

void LCD_setColorDepth (bool is_16bit)

Set the color depth to 16-bit or 18-bit. 16-bit color depth allows for only \sim 65K colors, but only needs 2 data transfers. 18-bit color depth allows for \sim 262K colors, but requires 3 transfers.

void LCD_toggleColorDepth (void)

Toggle 16-bit or 18-bit color depth (16-bit by default).

Drawing Area Definition Functions

```
    void LCD_setArea (uint16_t x1_new, uint16_t x2_new, uint16_t y1_new, uint16_t y2_new)
```

Set the area of the display to be written to. $0 \le x1 \le x2 \le X_MAX$ $0 \le y1 \le y2 \le Y_MAX$.

void LCD_setX (uint16_t x1_new, uint16_t x2_new)

Set only new x-coordinates to be written to. $0 \le x1 \le x2 \le X_M AX$.

void LCD_setY (uint16_t y1_new, uint16_t y2_new)

Set only new y-coordinates to be written to. $0 \le y1 \le y2 \le Y_MAX$.

Color Setting Functions

• void LCD setColor (uint8 t R val, uint8 t G val, uint8 t B val)

Set the current color value for the display. Only the first 5-6 bits of each inputted value are used.

void LCD_setColor_3bit (uint8_t color_code)

Set the color value via a 3-bit code.

Drawing Functions

void LCD_Draw (void)

Draw on the LCD display.

void LCD Fill (void)

Fill the display with a single color.

void LCD drawHoriLine (uint16 t yCenter, uint16 t lineWidth)

Draw a horizontal line across the entire display.

void LCD_drawVertLine (uint16_t xCenter, uint16_t lineWidth)

Draw a vertical line across the entire display.

void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool isFilled)

Draw a rectangle of size $dx \times dy$ onto the display. The bottom-left corner will be located at (x1, y1).

Variables

```
struct {
   uint16_t x1
      starting x-value in range [0, x2]
    uint16_t x2
      ending x-value in range [0, NUM_ROWS)
    uint16_t y1
      starting y-value in range [0, y2]
   uint16_t y2
      ending x-value in range [0, NUM_COLS)
   uint32_t numPixels
      num. of pixels to write; = (x2-x1 \ 1) * (y2-y1+1)
    uint8 t R val
      5 or 6-bit R value
    uint8_t G_val
      6-bit G value
   uint8 t B val
      5 or 6-bit B value
    bool isOutputOn
      if true, LCD driver writes from its memory to display
    bool isInverted
      if true, the display's colors are inverted
    bool using16bitColors
      true for 16-bit color depth, false for 18-bit
   bool islnit
      if true, LCD has been initialized
 } lcd
```

6.3.1 Detailed Description

Source code for LCD module.

Author

Bryan McElvy

6.4 LCD.h File Reference

Header file for LCD module.

```
#include "ILI9341.h"
#include "SPI.h"
#include "Timer.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Enumerations

enum { LCD_X_MAX = ILI9341_NUM_ROWS , LCD_Y_MAX = ILI9341_NUM_COLS }

6.4 LCD.h File Reference 77

Functions

Init./Config. Functions

void LCD_Init (void)

Initialize the LCD.

• void LCD_setOutputMode (bool isOn)

Toggle display output ON or OFF (OFF by default). Turning output OFF stops the LCD driver chip from writing to the display, and also blanks out the display completely.

void LCD toggleOutput (void)

Toggle display output ON or OFF (OFF by default).

void LCD_setColorInversionMode (bool isOn)

Turn color inversion ON or OFF (OFF by default).

void LCD_toggleColorInversion (void)

Toggle color inversion ON or OFF (OFF by default).

void LCD_setColorDepth (bool is_16bit)

Set the color depth to 16-bit or 18-bit. 16-bit color depth allows for only \sim 65K colors, but only needs 2 data transfers. 18-bit color depth allows for \sim 262K colors, but requires 3 transfers.

void LCD_toggleColorDepth (void)

Toggle 16-bit or 18-bit color depth (16-bit by default).

Drawing Area Definition Functions

void LCD_setArea (uint16_t x1_new, uint16_t x2_new, uint16_t y1_new, uint16_t y2_new)

Set the area of the display to be written to. $0 \le x1 \le x2 \le X_MAX$ $0 \le y1 \le y2 \le Y_MAX$.

void LCD_setX (uint16_t x1_new, uint16_t x2_new)

Set only new x-coordinates to be written to. $0 \le x1 \le x2 \le X_MAX$.

void LCD_setY (uint16_t y1_new, uint16_t y2_new)

Set only new y-coordinates to be written to. $0 \le y1 \le y2 \le Y_MAX$.

Drawing Functions

void LCD Draw (void)

Draw on the LCD display.

void LCD_Fill (void)

Fill the display with a single color.

• void LCD_drawHoriLine (uint16_t yCenter, uint16_t lineWidth)

Draw a horizontal line across the entire display.

void LCD_drawVertLine (uint16_t xCenter, uint16_t lineWidth)

Draw a vertical line across the entire display.

• void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool isFilled)

Draw a rectangle of size $dx \times dy$ onto the display. The bottom-left corner will be located at (x1, y1).

Color Setting Functions

```
• enum {
```

```
 \begin{array}{l} \textbf{LCD\_BLACK} = 0x00 \text{ , } \textbf{LCD\_RED} = 0x04 \text{ , } \textbf{LCD\_GREEN} = 0x02 \text{ , } \textbf{LCD\_BLUE} = 0x01 \text{ , } \\ \textbf{LCD\_YELLOW} = 0x06 \text{ , } \textbf{LCD\_CYAN} = 0x03 \text{ , } \textbf{LCD\_PURPLE} = 0x05 \text{ , } \textbf{LCD\_WHITE} = 0x07 \text{ , } \\ \textbf{LCD\_BLACK\_INV} = \textbf{LCD\_WHITE} \text{ , } \textbf{LCD\_RED\_INV} = \textbf{LCD\_CYAN} \text{ , } \textbf{LCD\_GREEN\_INV} = \textbf{LCD\_PURPLE} \text{ , } \\ \textbf{LCD\_BLUE\_INV} = \textbf{LCD\_YELLOW} \text{ , } \\ \textbf{LCD\_YELLOW\_INV} = \textbf{LCD\_BLUE} \text{ , } \textbf{LCD\_CYAN\_INV} = \textbf{LCD\_RED} \text{ , } \textbf{LCD\_PURPLE\_INV} = \textbf{LCD\_GREEN} \text{ , } \\ \textbf{LCD\_WHITE\_INV} = \textbf{LCD\_BLACK} \end{array}
```

void LCD_setColor (uint8_t R_val, uint8_t G_val, uint8_t B_val)

Set the current color value for the display. Only the first 5-6 bits of each inputted value are used.

void LCD_setColor_3bit (uint8_t color_code)

Set the color value via a 3-bit code.

6.4.1 Detailed Description

Header file for LCD module.

Author

Bryan McElvy

This module is essentially a higher-level interface to the ILI9341 module.

6.5 lookup.c File Reference

Source code for DAQ module's lookup table.

```
#include "lookup.h"
#include "arm_math_types.h"
```

Functions

const float32_t * Lookup_GetPtr (void)
 Return a pointer to the DAQ lookup table.

Variables

static const float32_t LOOKUP_DAQ_TABLE [4096]
 Lookup table for converting ADC data from unsigned 12-bit integer values to 32-bit floating point values.

6.5.1 Detailed Description

Source code for DAQ module's lookup table.

Author

Bryan McElvy

6.6 lookup.h File Reference

Lookup table for DAQ module.

```
#include "arm_math_types.h"
```

Macros

- #define LOOKUP_DAQ_MAX (float32_t) 5.5
- #define LOOKUP_DAQ_MIN (float32_t)(-5.5)

6.7 QRS.c File Reference 79

Functions

const float32_t * Lookup_GetPtr (void)
 Return a pointer to the DAQ lookup table.

6.6.1 Detailed Description

Lookup table for DAQ module.

Author

Bryan McElvy

6.7 QRS.c File Reference

Source code for QRS module.

```
#include "QRS.h"
#include "arm_math_types.h"
#include "dsp/filtering_functions.h"
#include "dsp/statistics_functions.h"
#include <stdbool.h>
#include <stdint.h>
```

Macros

- #define QRS_NUM_FID_MARKS 20
- #define FLOAT COMPARE TOLERANCE (float32 t)(1E-5f)
- #define IS_GREATER(X, Y) (bool) ((X Y) > FLOAT_COMPARE_TOLERANCE)
- #define IS LESSER(X, Y) (bool) ((Y X) > FLOAT COMPARE TOLERANCE)
- #define IS_PEAK(X_MINUS_1, X, X_PLUS_1) (bool) (IS_GREATER(X, X_MINUS_1) && IS_GREATER(X, X_PLUS_1))

Typedefs

- typedef arm_biquad_casd_df1_inst_f32 IIR_Filt_t
- typedef arm_fir_instance_f32 FIR_Filt_t

Enumerations

enum {
 NUM_STAGES_BANDPASS = 4 , NUM_COEFF_HIGHPASS = NUM_STAGES_BANDPASS * 5 , STATE ←
 _BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4 , NUM_COEFF_DERFILT = 5 ,
 STATE_BUFF_SIZE_DERFILT = NUM_COEFF_DERFILT + QRS_NUM_SAMP - 1 , NUM_COEFF_←
 MOVAVG = 10 , STATE_BUFF_SIZE_MOVAVG = NUM_COEFF_MOVAVG + QRS_NUM_SAMP - 1 }

Functions

- static uint8 t QRS findFiducialMarks (float32 t yn[], uint16 t fidMarkArray[])
 - Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").
- static void QRS_initLevels (const float32_t yn[])
 - Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.
- static float32_t QRS_updateLevel (float32_t peakAmplitude, float32_t level)
 - Update signal or noise level based on a confirmed peak's amplitude.
- static float32_t QRS_updateThreshold (void)
 - Update the amplitude threshold used to identify peaks based on the signal and noise levels.
- void QRS_Init (void)
 - Initialize the QRS detector.
- void QRS_Preprocess (const float32_t xn[], float32_t yn[])
 - Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.
- float32_t QRS_applyDecisionRules (const float32_t yn[])
 - Calculate the average heart rate (HR) using predetermined decision rules.
- float32_t QRS_runDetection (const float32_t xn[], float32_t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

Variables

```
    struct {
        bool isCalibrated
        float32_t signalLevel
        float32_t noiseLevel
        float32_t threshold
        uint16_t fidMarkArray [QRS_NUM_FID_MARKS]
        float32_t utilityBuffer1 [QRS_NUM_FID_MARKS]
        array to hold fidMark indices
        float32_t utilityBuffer2 [QRS_NUM_FID_MARKS]
    } Detector = { false, 0.0f, 0.0f, 0.0f, { 0 }, { 0 }, { 0 }}
```

- static const float32_t COEFF_BANDPASS [NUM_COEFF_HIGHPASS]
- static const float32_t COEFF_DERFILT [NUM_COEFF_DERFILT] = { -0.125f, -0.25f, 0.0f, 0.25f, 0.125f }
- static const float32 t COEFF MOVAVG [NUM COEFF MOVAVG]
- static float32_t stateBuffer_bandPass [STATE_BUFF_SIZE_BANDPASS] = { 0 }
- static const IIR_Filt_t bandpassFiltStruct = { NUM_STAGES_BANDPASS, stateBuffer_bandPass, COEFF
 —BANDPASS }
- static const IIR Filt t *const bandpassFilter = &bandpassFiltStruct
- static float32 t stateBuffer DerFilt [STATE BUFF SIZE DERFILT] = { 0 }
- static const FIR_Filt_t derivativeFiltStruct = { NUM_COEFF_DERFILT, stateBuffer_DerFilt, COEFF_
 DERFILT }
- static const FIR_Filt_t *const derivativeFilter = &derivativeFiltStruct
- static float32 t stateBuffer_MovingAvg [STATE BUFF SIZE MOVAVG] = { 0 }
- static const FIR_Filt_t movingAvgFiltStruct = { NUM_COEFF_MOVAVG, stateBuffer_MovingAvg, COEFF
 _MOVAVG }
- static const FIR Filt t *const movingAverageFilter = &movingAvgFiltStruct

6.7.1 Detailed Description

Source code for QRS module.

Author

Bryan McElvy

6.8 QRS.h File Reference 81

6.8 QRS.h File Reference

QRS detection algorithm functions.

```
#include "arm_math_types.h"
#include "dsp/filtering_functions.h"
#include "dsp/statistics_functions.h"
#include <stdbool.h>
#include <stdint.h>
```

Macros

- #define QRS_SAMP_FREQ ((uint32_t) 200)
- #define QRS SAMP PERIOD SEC ((float32 t) 0.005f)
- #define QRS_NUM_SAMP ((uint16_t) (1200))

Functions

· void QRS_Init (void)

Initialize the QRS detector.

void QRS_Preprocess (const float32_t xn[], float32_t yn[])

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

float32_t QRS_applyDecisionRules (const float32_t yn[])

Calculate the average heart rate (HR) using predetermined decision rules.

float32_t QRS_runDetection (const float32_t xn[], float32_t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

6.8.1 Detailed Description

QRS detection algorithm functions.

Author

Bryan McElvy

```
This module contains functions for detecting heart rate ('HR') using a simplified version of the Pan-Tompkins algorithm.
```

6.9 Fifo.c File Reference

Source code for FIFO buffer module.

```
#include "FIFO.h"
#include "NewAssert.h"
#include <stdint.h>
#include <stdbool.h>
```

Data Structures

struct Fifo_t

Functions

Fifo_t FIFO_Init (volatile uint32_t buffer[], const uint32_t N)
 Initialize a FIFO buffer of length N.

Basic Operations

· void FIFO_Put (volatile Fifo_t fifo, const uint32_t val)

Add a value to the end of the buffer.

uint32_t FIFO_Get (volatile Fifo_t fifo)

Remove the first value of the buffer.

void FIFO_TransferOne (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer a value from one FIFO buffer to another.

Bulk Removal

void FIFO_Flush (volatile Fifo_t fifo, uint32_t outputBuffer[])

Empty the FIFO buffer's contents into an array.

• void FIFO Reset (volatile Fifo t fifo)

Reset the FIFO buffer.

void FIFO_TransferAll (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer the contents of one FIFO buffer to another.

Peeking

uint32 t FIFO PeekOne (volatile Fifo t fifo)

See the first element in the FIFO without removing it.

void FIFO_PeekAll (volatile Fifo_t fifo, uint32_t outputBuffer[])

See the FIFO buffer's contents without removing them.

Status Checks

• bool FIFO_isFull (volatile Fifo_t fifo)

Check if the FIFO buffer is full.

bool FIFO_isEmpty (volatile Fifo_t fifo)

Check if the FIFO buffer is empty.

uint32_t FIFO_getCurrSize (volatile Fifo_t fifo)

Get the current size of the FIFO buffer.

Variables

static FifoStruct_t buffer_pool [FIFO_POOL_SIZE] = { 0 }

pre-allocated pool

• static uint8_t free_buffers = FIFO_POOL_SIZE

no. of remaining buffers

6.9.1 Detailed Description

Source code for FIFO buffer module.

Author

Bryan McElvy

6.10 Fifo.h File Reference

FIFO buffer data structure.

```
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
```

Macros

• #define FIFO_POOL_SIZE 5

Functions

Fifo_t FIFO_Init (volatile uint32_t buffer[], const uint32_t N)
 Initialize a FIFO buffer of length N.

Basic Operations

- · void FIFO_Put (volatile Fifo_t fifo, const uint32_t val)
 - Add a value to the end of the buffer.
- uint32_t FIFO_Get (volatile Fifo_t fifo)

Remove the first value of the buffer.

• void FIFO_TransferOne (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer a value from one FIFO buffer to another.

Bulk Removal

- void FIFO Flush (volatile Fifo t fifo, uint32 t outputBuffer[])
 - Empty the FIFO buffer's contents into an array.
- void FIFO_Reset (volatile Fifo_t fifo)

Reset the FIFO buffer.

void FIFO_TransferAll (volatile Fifo_t srcFifo, volatile Fifo_t destFifo)

Transfer the contents of one FIFO buffer to another.

Peeking

uint32_t FIFO_PeekOne (volatile Fifo_t fifo)

See the first element in the FIFO without removing it.

void FIFO_PeekAll (volatile Fifo_t fifo, uint32_t outputBuffer[])

See the FIFO buffer's contents without removing them.

Status Checks

bool FIFO_isFull (volatile Fifo_t fifo)

Check if the FIFO buffer is full.

bool FIFO_isEmpty (volatile Fifo_t fifo)

Check if the FIFO buffer is empty.

uint32_t FIFO_getCurrSize (volatile Fifo_t fifo)

Get the current size of the FIFO buffer.

6.10.1 Detailed Description

FIFO buffer data structure.

Author

Bryan McElvy

6.11 NewAssert.c File Reference

Source code for custom assert implementation.

```
#include "NewAssert.h"
#include <stdbool.h>
```

Functions

• void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

6.11.1 Detailed Description

Source code for custom ${\tt assert}$ implementation.

Author

Bryan McElvy

6.12 NewAssert.h File Reference

Header file for custom assert implementation.

```
#include <stdbool.h>
```

Functions

• void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

6.12.1 Detailed Description

Header file for custom assert implementation.

Author

Bryan McElvy

6.13 ADC.c File Reference

Source code for ADC module.

```
#include "ADC.h"
#include "GPIO.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Functions

• void ADC_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

void ADC_InterruptEnable (void)

Enable the ADC interrupt.

void ADC_InterruptDisable (void)

Disable the ADC interrupt.

void ADC_InterruptAcknowledge (void)

Acknowledge the ADC interrupt, clearing the flag.

6.13.1 Detailed Description

Source code for ADC module.

Author

Bryan McElvy

6.14 ADC.h File Reference

Driver module for analog-to-digital conversion (ADC).

```
#include "GPIO.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Functions

void ADC_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

• void ADC_InterruptEnable (void)

Enable the ADC interrupt.

• void ADC_InterruptDisable (void)

Disable the ADC interrupt.

void ADC_InterruptAcknowledge (void)

Acknowledge the ADC interrupt, clearing the flag.

6.14.1 Detailed Description

Driver module for analog-to-digital conversion (ADC).

Author

Bryan McElvy

6.15 GPIO.c File Reference

Source code for GPIO module.

```
#include "GPIO.h"
#include <NewAssert.h>
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Data Structures

struct GPIO Port t

Macros

• #define GPIO_NUM_PORTS 6

Typedefs

typedef volatile uint32 t * register_t

Enumerations

```
• enum {
```

GPIO_PORTA_BASE_ADDRESS = (uint32_t) 0x40004000 , GPIO_PORTB_BASE_ADDRESS = (uint32 ← _t) 0x40005000 , GPIO_PORTC_BASE_ADDRESS = (uint32_t) 0x40006000 , GPIO_PORTD_BASE_← ADDRESS = (uint32_t) 0x40007000 ,

 $\label{eq:gpio_porte_base_address} \textbf{GPIO_PORTE_BASE_ADDRESS} = (uint32_t) \ 0x40024000 \ , \ \textbf{GPIO_PORTF_BASE_ADDRESS} = (uint32_t) \ 0x40025000 \ \}$

• enum {

GPIO_DATA_R_OFFSET = (uint32_t) 0x03FC , GPIO_DIR_R_OFFSET = (uint32_t) 0x0400 , GPIO_IS_R \leftarrow _OFFSET = (uint32_t) 0x0404 , GPIO_IBE_R_OFFSET = (uint32_t) 0x0408 , GPIO_IEV_R_OFFSET = (uint32_t) 0x040C , GPIO_IM_R_OFFSET = (uint32_t) 0x0410 , GPIO_ICR_R_ \leftarrow OFFSET = (uint32_t) 0x041C , GPIO_AFSEL_R_OFFSET = (uint32_t) 0x0420 , GPIO_DR2R_R_OFFSET = (uint32_t) 0x0500 , GPIO_DR4R_R_OFFSET = (uint32_t) 0x0504 , GPIO_ \leftarrow DR8R_R_OFFSET = (uint32_t) 0x0508 , GPIO_PUR_R_OFFSET = (uint32_t) 0x0510 , GPIO_PDR_R_OFFSET = (uint32_t) 0x051C , GPIO_ \leftarrow LOCK_R_OFFSET = (uint32_t) 0x0520 , GPIO_COMMIT_R_OFFSET = (uint32_t) 0x0524 , GPIO_AMSEL_R_OFFSET = (uint32_t) 0x052C }

Functions

• GPIO_Port_t * GPIO_InitPort (GPIO_PortName_t portName)

Initialize a GPIO Port and return a pointer to its struct.

bool GPIO_isPortInit (GPIO_Port_t *gpioPort)

Check if the GPIO port is initialized.

- uint32_t GPIO_getBaseAddr (GPIO_Port_t *gpioPort)
- void GPIO ConfigDirOutput (GPIO Port t *gpioPort, GPIO Pin t pinMask)

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

void GPIO ConfigDirInput (GPIO Port t *gpioPort, GPIO Pin t pinMask)

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

void GPIO ConfigPullUp (GPIO Port t *gpioPort, GPIO Pin t pinMask)

Activate the specified pins' internal pull-up resistors.

void GPIO_ConfigPullDown (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Activate the specified pins' internal pull-down resistors.

void GPIO ConfigDriveStrength (GPIO Port t *gpioPort, GPIO Pin t pinMask, uint8 t drive mA)

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

void GPIO_EnableDigital (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Enable digital I/O for the specified pins.

void GPIO_DisableDigital (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Disable digital I/O for the specified pins.

void GPIO_ConfigInterrupts_Edge (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask, bool risingEdge)

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

void GPIO_ConfigInterrupts_BothEdges (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

• void GPIO_ConfigInterrupts_LevelTrig (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask, bool highLevel)

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

void GPIO_ConfigNVIC (GPIO_Port_t *gpioPort, uint8_t priority)

Configure interrupts for the selected port in the NVIC.

uint8_t GPIO_ReadPins (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Read from the specified GPIO pin.

void GPIO_WriteHigh (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Write a 1 to the specified GPIO pins.

void GPIO WriteLow (GPIO Port t *gpioPort, GPIO Pin t pinMask)

Write a 0 to the specified GPIO pins.

• void GPIO_Toggle (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Toggle the specified GPIO pins.

void GPIO ConfigAltMode (GPIO Port t *gpioPort, GPIO Pin t pinMask)

Activate the alternate mode for the specified pins.

void GPIO_ConfigPortCtrl (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask, uint8_t fieldEncoding)

Specify the alternate mode to use for the specified pins.

void GPIO_ConfigAnalog (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Activate analog mode for the specified GPIO pins.

Variables

static GPIO_Port_t GPIO_PTR_ARR [6]

6.15.1 Detailed Description

Source code for GPIO module.

Author

Bryan McElvy

6.15.2 Function Documentation

GPIO_InitPort()

Initialize a GPIO Port and return a pointer to its struct.

Parameters

	in	portName	Name of the chosen port.
--	----	----------	--------------------------

Returns

GPIO_Port_t* Pointer to the GPIO port's struct.

GPIO_isPortInit()

Check if the GPIO port is initialized.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
out	true	The GPIO port is initialized.
out	false	The GPIO port has not been initialized.

GPIO_ConfigDirOutput()

Configure the direction of the specified GPIO pins. All pins are configured to ${\tt INPUT}$ by default, so this function should only be called to specify ${\tt OUTPUT}$ pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended OUTPUT pin(s).

GPIO_ConfigDirInput()

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended INPUT pin(s).

GPIO_ConfigPullUp()

Activate the specified pins' internal pull-up resistors.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigPullDown()

Activate the specified pins' internal pull-down resistors.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigDriveStrength()

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	drive_mA	Drive strength in [mA]. Should be 2, 4, or 8 [mA].

GPIO_EnableDigital()

Enable digital I/O for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_DisableDigital()

Disable digital I/O for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigInterrupts_Edge()

```
GPIO_Pin_t pinMask,
bool risingEdge )
```

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	risingEdge	true for rising edge, false for falling edge

GPIO_ConfigInterrupts_BothEdges()

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigInterrupts_LevelTrig()

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	highLevel	true for high level, false for low level

GPIO_ConfigNVIC()

Configure interrupts for the selected port in the NVIC.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	priority	Priority number between 0 (highest) and 7 (lowest).

GPIO_ReadPins()

Read from the specified GPIO pin.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_WriteHigh()

Write a $\ensuremath{\mathbb{1}}$ to the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_WriteLow()

Write a $\ 0$ to the specified GPIO pins.

Parameters

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_Toggle()

Toggle the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigAltMode()

Activate the alternate mode for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigPortCtrl()

Specify the alternate mode to use for the specified pins.

Parameters

	in	gpioPort	Pointer to the specified GPIO port.
Ī	in	pinMask	Bit mask corresponding to the intended pin(s).
ſ	in	fieldEncoding	Number corresponding to intended alternate mode.

GPIO_ConfigAnalog()

Activate analog mode for the specified GPIO pins.

Parameters

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).

6.15.3 Variable Documentation

GPIO PTR ARR

6.16 GPIO.h File Reference

Header file for general-purpose input/output (GPIO) device driver.

```
#include <NewAssert.h>
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Enumerations

```
enum GPIO_Pin_t {
    GPIO_PIN0 = ((uint8_t) 1) , GPIO_PIN1 = ((uint8_t) (1 << 1)) , GPIO_PIN2 = ((uint8_t) (1 << 2)) , GPIO ←
    _PIN3 = ((uint8_t) (1 << 3)) ,
    GPIO_PIN4 = ((uint8_t) (1 << 4)) , GPIO_PIN5 = ((uint8_t) (1 << 5)) , GPIO_PIN6 = ((uint8_t) (1 << 6)) ,
    GPIO_PIN7 = ((uint8_t) (1 << 7)) ,
    GPIO_ALL_PINS = ((uint8_t) (0xFF)) }
</li>
enum {
    LED_RED = GPIO_PIN1 , LED_GREEN = GPIO_PIN3 , LED_BLUE = GPIO_PIN2 , LED_YELLOW =
    (LED_RED + LED_GREEN) ,
    LED_CYAN = (LED_BLUE + LED_GREEN) , LED_PURPLE = (LED_RED + LED_BLUE) , LED_WHITE =
    (LED_RED + LED_BLUE + LED_GREEN) }

enum GPIO_PortName_t {
        A , B , C , D ,
        E , F }
```

Functions

• GPIO Port t * GPIO InitPort (GPIO PortName t portName)

Initialize a GPIO Port and return a pointer to its struct.

- uint32_t GPIO_getBaseAddr (GPIO_Port_t *gpioPort)
- bool GPIO_isPortInit (GPIO_Port_t *gpioPort)

Check if the GPIO port is initialized.

void GPIO_ConfigDirOutput (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

void GPIO_ConfigDirInput (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

• void GPIO_ConfigPullUp (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Activate the specified pins' internal pull-up resistors.

void GPIO_ConfigPullDown (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Activate the specified pins' internal pull-down resistors.

• void GPIO ConfigDriveStrength (GPIO Port t *gpioPort, GPIO Pin t pinMask, uint8 t drive mA)

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

void GPIO_EnableDigital (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Enable digital I/O for the specified pins.

void GPIO_DisableDigital (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Disable digital I/O for the specified pins.

void GPIO_ConfigInterrupts_Edge (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask, bool risingEdge)

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

void GPIO_ConfigInterrupts_BothEdges (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

void GPIO_ConfigInterrupts_LevelTrig (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask, bool highLevel)

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

void GPIO_ConfigNVIC (GPIO_Port_t *gpioPort, uint8_t priority)

Configure interrupts for the selected port in the NVIC.

uint8_t GPIO_ReadPins (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Read from the specified GPIO pin.

void GPIO_WriteHigh (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Write a 1 to the specified GPIO pins.

void GPIO_WriteLow (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Write a 0 to the specified GPIO pins.

• void GPIO_Toggle (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Toggle the specified GPIO pins.

void GPIO_ConfigAltMode (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Activate the alternate mode for the specified pins.

• void GPIO_ConfigPortCtrl (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask, uint8_t fieldEncoding)

Specify the alternate mode to use for the specified pins.

void GPIO_ConfigAnalog (GPIO_Port_t *gpioPort, GPIO_Pin_t pinMask)

Activate analog mode for the specified GPIO pins.

6.16.1 Detailed Description

Header file for general-purpose input/output (GPIO) device driver.

Author

Bryan McElvy

6.16.2 Function Documentation

GPIO_InitPort()

Initialize a GPIO Port and return a pointer to its struct.

Parameters

in	portName	Name of the chosen port.
----	----------	--------------------------

Returns

GPIO_Port_t* Pointer to the GPIO port's struct.

GPIO_isPortInit()

Check if the GPIO port is initialized.

Parameters

in <i>gpioPort</i>		Pointer to the specified GPIO port.	
out <i>true</i>		The GPIO port is initialized.	
out	false	The GPIO port has not been initialized.	

GPIO_ConfigDirOutput()

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended OUTPUT pin(s).

GPIO_ConfigDirInput()

```
{\tt void\ GPIO\_ConfigDirInput\ (}
```

```
GPIO_Port_t * gpioPort,
GPIO_Pin_t pinMask )
```

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

Parameters

	in	gpioPort	Pointer to the specified GPIO port.
ĺ	in	bitMask	Bit mask corresponding to the intended INPUT pin(s).

GPIO_ConfigPullUp()

Activate the specified pins' internal pull-up resistors.

Parameters

ſ	in	gpioPort	Pointer to the specified GPIO port.
Ī	in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigPullDown()

Activate the specified pins' internal pull-down resistors.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigDriveStrength()

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	drive_mA	Drive strength in [mA]. Should be 2, 4, or 8 [mA].

GPIO_EnableDigital()

Enable digital I/O for the specified pins.

Parameters

i	in	gpioPort	Pointer to the specified GPIO port.
i	in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_DisableDigital()

Disable digital I/O for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigInterrupts_Edge()

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	risingEdge	true for rising edge, false for falling edge

GPIO_ConfigInterrupts_BothEdges()

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigInterrupts_LevelTrig()

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	highLevel	true for high level, false for low level

GPIO_ConfigNVIC()

Configure interrupts for the selected port in the NVIC.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	priority	Priority number between 0 (highest) and 7 (lowest).

GPIO_ReadPins()

Read from the specified GPIO pin.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_WriteHigh()

Write a $\ensuremath{\mathbb{1}}$ to the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_WriteLow()

Write a $\ 0$ to the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_Toggle()

Toggle the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

6.17 ISR.c File Reference 101

GPIO_ConfigAltMode()

Activate the alternate mode for the specified pins.

Parameters

ir	gpioPort	Pointer to the specified GPIO port.
ir	pinMask	Bit mask corresponding to the intended pin(s).

GPIO_ConfigPortCtrl()

Specify the alternate mode to use for the specified pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	fieldEncoding	Number corresponding to intended alternate mode.

GPIO_ConfigAnalog()

Activate analog mode for the specified GPIO pins.

Parameters

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

6.17 ISR.c File Reference

Source code for interrupt vector handling module.

```
#include "ISR.h"
#include "NewAssert.h"
```

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Macros

- #define VECTOR_TABLE_BASE_ADDR (uint32_t) 0x00000000
- #define VECTOR TABLE SIZE (uint32 t) 155
- #define VECTOR_TABLE_ALIGNMENT (uint32_t)(1 << 10)
- #define NVIC EN BASE ADDR (uint32 t) 0xE000E100
- #define NVIC_DIS_BASE_ADDR (uint32_t) 0xE000E180
- #define NVIC_PRI_BASE_ADDR (uint32_t) 0xE000E400
- #define NVIC_UNPEND_BASE_ADDR (uint32_t) 0xE000E280

Typedefs

typedef volatile uint32_t * register_t

Functions

- static void ISR_setStatus (const uint8_t vectorNum, const bool isEnabled)
- · void ISR GlobalDisable (void)

Disable all interrupts globally.

void ISR_GlobalEnable (void)

Enable all interrupts globally.

- static ISR_t newVectorTable[VECTOR_TABLE_SIZE] __attribute__ ((aligned(VECTOR_TABLE_← ALIGNMENT)))
- void ISR_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR_addToIntTable (ISR_t isr, const uint8_t vectorNum)

Add an ISR to the interrupt table.

void ISR_setPriority (const uint8_t vectorNum, const uint8_t priority)

Set the priority for an interrupt.

void ISR_Enable (const uint8_t vectorNum)

Enable an interrupt in the NVIC.

void ISR_Disable (const uint8_t vectorNum)

Disable an interrupt in the NVIC.

void ISR_triggerInterrupt (const uint8_t vectorNum)

Generate a software-generated interrupt (SGI).

void ISR_clearPending (const uint8_t vectorNum)

Clear an ISR's pending bit.

Variables

- static bool interruptsAreEnabled = true
- void(*const interruptVectorTable [])(void)
- static bool isTableCopiedToRam = false

6.18 ISR.h File Reference 103

6.17.1 Detailed Description

Source code for interrupt vector handling module.

Author

Bryan McElvy

6.18 ISR.h File Reference

Module for configuring interrupt service routines (ISRs).

```
#include <stdint.h>
```

Typedefs

typedef void(* ISR_t) (void)

Type definition for function pointers representing ISRs.

Functions

• void ISR_GlobalDisable (void)

Disable all interrupts globally.

void ISR_GlobalEnable (void)

Enable all interrupts globally.

void ISR_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR_addToIntTable (ISR_t isr, const uint8_t vectorNum)

Add an ISR to the interrupt table.

void ISR_setPriority (const uint8_t vectorNum, const uint8_t priority)

Set the priority for an interrupt.

void ISR_Enable (const uint8_t vectorNum)

Enable an interrupt in the NVIC.

• void ISR_Disable (const uint8_t vectorNum)

Disable an interrupt in the NVIC.

void ISR_triggerInterrupt (const uint8_t vectorNum)

Generate a software-generated interrupt (SGI).

void ISR_clearPending (const uint8_t vectorNum)

Clear an ISR's pending bit.

6.18.1 Detailed Description

Module for configuring interrupt service routines (ISRs).

Author

Bryan McElvy

6.19 PLL.c File Reference

Implementation details for phase-lock-loop (PLL) functions.

```
#include "PLL.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Functions

void PLL_Init (void)

Initializes the phase-locked-loop (PLL), allowing a bus frequency of 80[MHz].

6.19.1 Detailed Description

Implementation details for phase-lock-loop (PLL) functions.

Author

Bryan McElvy

6.20 PLL.h File Reference

Driver module for activating the phase-locked-loop (PLL).

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Functions

• void PLL_Init (void)

Initializes the phase-locked-loop (PLL), allowing a bus frequency of 80[MHz].

6.20.1 Detailed Description

Driver module for activating the phase-locked-loop (PLL).

Author

Bryan McElvy

6.21 SPI.c File Reference 105

6.21 SPI.c File Reference

Source code for SPI module.

```
#include "SPI.h"
#include "GPIO.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Macros

- #define SPI_SET_DC() (GPIO_PORTA_DATA_R |= 0x40)
- #define **SPI CLEAR DC**() (GPIO PORTA DATA R &= \sim (0x40))
- #define SPI_IS_BUSY (SSI0_SR_R & 0x10)
- #define SPI_TX_ISNOTFULL (SSI0_SR_R & 0x02)

Enumerations

```
    enum {
    SPI_CLK_PIN = GPIO_PIN2 , SPI_CS_PIN = GPIO_PIN3 , SPI_RX_PIN = GPIO_PIN4 , SPI_TX_PIN = GPIO_PIN5 ,
    SPI_DC_PIN = GPIO_PIN6 , SPI_RESET_PIN = GPIO_PIN7 , SPI_SSIO_PINS = (SPI_CLK_PIN | SPI_CS_PIN | SPI_RX_PIN | SPI_TX_PIN) , SPI_GPIO_PINS = (SPI_DC_PIN | SPI_RESET_PIN) ,
    SPI_ALL_PINS = (SPI_SSIO_PINS | SPI_GPIO_PINS) }
```

Functions

```
    void SPI Init (void)
```

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

uint8_t SPI_Read (void)

Read data from the peripheral.

void SPI_WriteCmd (uint8_t cmd)

Write an 8-bit command to the peripheral.

• void SPI_WriteData (uint8_t data)

Write 8-bit data to the peripheral.

6.21.1 Detailed Description

Source code for SPI module.

Author

6.22 SPI.h File Reference

Driver module for using the serial peripheral interface (SPI) protocol.

```
#include "GPIO.h"
#include "FIFO.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Functions

```
    void SPI_Init (void)
        Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

    uint8_t SPI_Read (void)
        Read data from the peripheral.

    void SPI_WriteCmd (uint8_t cmd)
        Write an 8-bit command to the peripheral.

    void SPI_WriteData (uint8_t data)
```

6.22.1 Detailed Description

Write 8-bit data to the peripheral.

Driver module for using the serial peripheral interface (SPI) protocol.

Author

Bryan McElvy

6.23 SysTick.c File Reference

Implementation details for SysTick functions.

```
#include "SysTick.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Functions

```
    void SysTick_Timer_Init (void)
        Initialize SysTick for timing purposes.

    void SysTick_Wait1ms (uint32_t delay_ms)
        Delay for specified amount of time in [ms]. Assumes f_bus = 80[MHz].

    void SysTick_Interrupt_Init (uint32_t time_ms)
        Initialize SysTick for interrupts.
```

6.23.1 Detailed Description

Implementation details for SysTick functions.

Author

Bryan McElvy

6.24 SysTick.h File Reference

Driver module for using SysTick-based timing and/or interrupts.

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Functions

```
• void SysTick_Timer_Init (void)
```

Initialize SysTick for timing purposes.

void SysTick_Wait1ms (uint32_t delay_ms)

Delay for specified amount of time in [ms]. Assumes f_bus = 80[MHz].

void SysTick_Interrupt_Init (uint32_t time_ms)

Initialize SysTick for interrupts.

6.24.1 Detailed Description

Driver module for using SysTick-based timing and/or interrupts.

Author

Bryan McElvy

6.25 Timer.c File Reference

Source code for Timer module.

```
#include "Timer.h"
#include "ISR.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Data Structures

• struct Timer_t

Typedefs

typedef volatile uint32_t * register_t

Enumerations

```
    enum {
        TIMERO_BASE = 0x40030000 , TIMER1_BASE = 0x40031000 , TIMER2_BASE = 0x40032000 , TIMER3
        _BASE = 0x40033000 ,
        TIMER4_BASE = 0x40034000 , TIMER5_BASE = 0x40035000 }
        enum REGISTER_OFFSETS {
            CONFIG = 0x00 , MODE = 0x04 , CTRL = 0x0C , INT_MASK = 0x18 ,
            INT_CLEAR = 0x24 , INTERVAL = 0x28 , VALUE = 0x054 }
```

Functions

- Timer_t Timer_Init (timerName_t timerName)
- timerName_t Timer_getName (Timer_t timer)
- void Timer_setMode (Timer_t timer, timerMode_t timerMode, bool isCountingUp)
- void Timer_enableAdcTrigger (Timer_t timer)
- void Timer_disableAdcTrigger (Timer_t timer)
- void Timer_enableInterruptOnTimeout (Timer_t timer, uint8_t priority)
- void Timer_disableInterruptOnTimeout (Timer_t timer)
- void Timer_clearInterruptFlag (Timer_t timer)
- void Timer_setInterval_ms (Timer_t timer, uint32_t time_ms)
- uint32 t Timer getCurrentValue (Timer t timer)
- void Timer_Start (Timer_t timer)
- void Timer_Stop (Timer_t timer)
- bool **Timer_isCounting** (Timer_t timer)
- void Timer_Wait1ms (Timer_t timer, uint32_t time_ms)

Variables

static TimerStruct t TIMER POOL [6]

6.25.1 Detailed Description

Source code for Timer module.

Author

Bryan McElvy

6.26 Timer.h File Reference

Device driver for general-purpose timer modules.

```
#include "ISR.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Enumerations

```
    enum timerName_t {
        TIMER0 , TIMER1 , TIMER2 , TIMER3 ,
        TIMER4 , TIMER5 }
    enum timerMode_t { ONESHOT , PERIODIC }
    enum { UP = true , DOWN = false }
```

Functions

- Timer_t Timer_Init (timerName_t timerName)
- timerName_t Timer_getName (Timer_t timer)
- void Timer_setMode (Timer_t timer, timerMode_t timerMode, bool isCountingUp)
- void Timer_enableAdcTrigger (Timer_t timer)
- void Timer disableAdcTrigger (Timer t timer)
- void Timer_enableInterruptOnTimeout (Timer t timer, uint8 t priority)
- void Timer_disableInterruptOnTimeout (Timer t timer)
- void Timer_clearInterruptFlag (Timer_t timer)
- void Timer_setInterval_ms (Timer_t timer, uint32_t time_ms)
- uint32_t Timer_getCurrentValue (Timer_t timer)
- void Timer_Start (Timer t timer)
- void Timer_Stop (Timer_t timer)
- bool Timer_isCounting (Timer_t timer)
- void Timer_Wait1ms (Timer_t timer, uint32_t time_ms)

6.26.1 Detailed Description

Device driver for general-purpose timer modules.

Author

Bryan McElvy

6.27 UART.c File Reference

Source code for UART module.

```
#include "UART.h"
#include "GPIO.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Data Structures

struct UART t

Macros

#define ASCII CONVERSION 0x30

Typedefs

typedef volatile uint32_t * register_t

Enumerations

Functions

```
    UART t * UART Init (GPIO Port t *port, UART Num t uartNum)
```

Initialize the specified UART peripheral.

unsigned char UART_ReadChar (UART_t *uart)

Read a single ASCII character from the UART.

void UART WriteChar (UART t *uart, unsigned char input char)

Write a single character to the UART.

void UART_WriteStr (UART_t *uart, void *input_str)

Write a C string to the UART.

void UART_WriteInt (UART_t *uart, int32_t n)

Write a 32-bit unsigned integer the UART.

• void UART_WriteFloat (UART_t *uart, double n, uint8_t num_decimals)

Write a floating-point number the UART.

Variables

static UART_t UART_ARR [8]

6.27.1 Detailed Description

Source code for UART module.

Author

6.28 UART.h File Reference

Driver module for serial communication via UART0 and UART 1.

```
#include "GPIO.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Enumerations

```
enum UART_Num_t {UART0 , UART1 , UART2 , UART3 ,UART4 , UART5 , UART6 , UART7 }
```

Functions

```
    UART_t * UART_Init (GPIO_Port_t *port, UART_Num_t uartNum)
```

Initialize the specified UART peripheral.

unsigned char UART_ReadChar (UART_t *uart)

Read a single ASCII character from the UART.

void UART_WriteChar (UART_t *uart, unsigned char input_char)

Write a single character to the UART.

void UART_WriteStr (UART_t *uart, void *input_str)

Write a C string to the UART.

void UART_WriteInt (UART_t *uart, int32_t n)

Write a 32-bit unsigned integer the UART.

void UART_WriteFloat (UART_t *uart, double n, uint8_t num_decimals)

Write a floating-point number the UART.

6.28.1 Detailed Description

Driver module for serial communication via UART0 and UART 1.

Author

```
UARTO uses PAO and PAI, which are not broken out but can connect to a PC's serial port via USB.  
UART1 uses PBO (Rx) and PB1 (Tx), which are broken out but do not connect to a serial port.
```

6.29 main.c File Reference

Main program file.

```
#include "DAQ.h"
#include "Debug.h"
#include "LCD.h"
#include "QRS.h"
#include "FIFO.h"
#include "ISR.h"
#include "PLL.h"
#include "arm_math_types.h"
#include "tm4c123gh6pm.h"
#include <math.h>
#include <stdbool.h>
#include <stdint.h>
```

Enumerations

```
    enum { DAQ_VECTOR_NUM = INT_ADCOSS3 , PROC_VECTOR_NUM = INT_CANO , LCD_VECTOR_
        NUM = INT_TIMER1A }
    enum {
        DAQ_BUFFER_CAPACITY = 3 , DAQ_BUFFER_SIZE = DAQ_BUFFER_CAPACITY + 1 , QRS_BUFFER 
        _SIZE = QRS_NUM_SAMP + 1 , LCD_BUFFER_CAPACITY = DAQ_BUFFER_CAPACITY ,
        LCD_BUFFER_SIZE = LCD_BUFFER_CAPACITY + 1 }
    enum {
        LCD_TOP_LINE = (LCD_Y_MAX - 48) , LCD_WAVE_NUM_Y = 128 , LCD_WAVE_X_OFFSET = 0 , LCD 
        _WAVE_Y_MIN = (0 + LCD_WAVE_X_OFFSET) ,
        LCD_WAVE_Y_MAX = (LCD_WAVE_NUM_Y + LCD_WAVE_X_OFFSET) }
```

Functions

• static void DAQ Handler (void)

Reads ADC output, converts to raw voltage sample, and sends to next FIFO.

static void Processing_Handler (void)

Removes noise from the signal and sends it to the QRS and LCD FIFO buffers.

• static void LCD_Handler (void)

Applies a 0.5-40 [Hz] bandpass filter and plots the sample to the waveform.

- static void **LCD_plotNewSample** (uint16 t x, volatile const float32 t sample)
- · int main (void)

Main function for the project.

Variables

- static volatile Fifo t DAQ_Fifo = 0
- static volatile uint32_t **DAQ_Buffer** [DAQ_BUFFER_SIZE] = { 0 }
- static volatile Fifo t QRS_Fifo = 0
- static volatile uint32 t QRS_FifoBuffer [QRS_BUFFER_SIZE] = { 0 }
- static volatile bool QRS_bufferIsFull = false
- static volatile Fifo t LCD_Fifo = 0
- static volatile uint32_t LCD_FifoBuffer [LCD_BUFFER_SIZE] = { 0 }
- static volatile float32_t QRS_Buffer [QRS_BUFFER_SIZE] = { 0 }

6.29.1 Detailed Description

Main program file.

Author

Bryan McElvy

6.30 Debug.h File Reference

Functions to output debugging information to a serial port via UART.

```
#include "UART.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Functions

Initialization

void Debug_Init (void)
 Initialize the Debug module.

Assertions

• void Debug_Assert (bool condition)

Stops program if condition is true. Useful for bug detection during debugging.

Serial Output

- enum Msg_t { DEBUG_DAQ_INIT , DEBUG_QRS_INIT , DEBUG_LCD_INIT , DEBUG_QRS_START }
- void Debug_SendMsg (void *message)

Send a message to the serial port.

• void Debug_SendFromList (Msg_t msg)

Send a message from the message list.

void Debug_WriteFloat (double value)

Write a floating-point value to the serial port.

6.30.1 Detailed Description

Functions to output debugging information to a serial port via UART.

Author

6.31 ILI9341.c File Reference

Source code for ILI9341 module.

```
#include "ILI9341.h"
#include "SPI.h"
#include "Timer.h"
#include "FIFO.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Enumerations

```
    enum Cmd_t {
    NOP = 0x00 , SWRESET = 0x01 , SPLIN = 0x10 , SPLOUT = 0x11 ,
    PTLON = 0x12 , NORON = 0x13 , DINVOFF = 0x20 , DINVON = 0x21 ,
    CASET = 0x2A , PASET = 0x2B , RAMWR = 0x2C , DISPOFF = 0x28 ,
    DISPON = 0x29 , PLTAR = 0x30 , VSCRDEF = 0x33 , MADCTL = 0x36 ,
    VSCRSADD = 0x37 , IDMOFF = 0x38 , IDMON = 0x39 , PIXSET = 0x3A ,
    FRMCTR1 = 0xB1 , FRMCTR2 = 0xB2 , FRMCTR3 = 0xB3 , PRCTR = 0xB5 ,
    IFCTL = 0xF6 }
```

Functions

- static void ILI9341_setAddress (uint16_t start_address, uint16_t end_address, bool is_row)
- static void ILI9341_sendParams (Cmd_t cmd)

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

• void ILI9341 Init (Timer t timer)

Initialize the LCD driver and the SPI module.

void ILI9341_resetHard (Timer_t timer)

Perform a hardware reset of the LCD driver.

void ILI9341_resetSoft (Timer_t timer)

Perform a software reset of the LCD driver.

void ILI9341_setSleepMode (bool isSleeping, Timer_t timer)

Enter or exit sleep mode.

void ILI9341 setDispMode (bool isNormal, bool isFullColors)

Set the display area and color expression.

void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

Set the partial display area for partial mode. Call before activating partial mode via ILI9341_setDisplayMode().

void ILI9341 setDispInversion (bool is ON)

Toggle display inversion (OFF by default).

void ILI9341_setDispOutput (bool is_ON)

Change whether the IC is outputting to the display for not.

void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols
 — Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341 setColorDepth (colorDepth t colorDepth)

Set the pixel format to be 16-bit (65K colors) or 18-bit (262K colors).

void ILI9341_setFrameRateNorm (uint8_t divisionRatio, uint8_t clocksPerLine)

TODO: Write brief.

• void ILI9341_setFrameRateIdle (uint8_t divisionRatio, uint8_t clocksPerLine)

TODO: Write brief.

• void ILI9341_setInterface (void)

Sets the interface for the ILI9341. The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

void ILI9341_setRowAddress (uint16_t startRow, uint16_t endRow)

not using backlight, so these aren't necessary

void ILI9341_setColAddress (uint16_t startCol, uint16_t endCol)

Sets the start/end rows to be written to.

void ILI9341_writeMemCmd (void)

Signal to the driver that pixel data is incoming and should be written to memory.

void ILI9341_writePixel (uint8_t red, uint8_t green, uint8_t blue, bool is_16bit)

Write a single pixel to frame memory.

Variables

- static uint32_t ILI9341_Buffer [8]
- static Fifo_t ILI9341_Fifo

6.31.1 Detailed Description

Source code for ILI9341 module.

Author

Bryan McElvy

6.32 ILI9341.h File Reference

Driver module for interfacing with an ILI9341 LCD driver.

```
#include "SPI.h"
#include "Timer.h"
#include "FIFO.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Enumerations

```
enum { ILI9341_NUM_COLS = 240 , ILI9341_NUM_ROWS = 320 }
```

```
• enum \{ ON = true , OFF = false \}
```

```
enum colorDepth_t { ILI9341_COLORDEPTH_16BIT = 0x55 , ILI9341_COLORDEPTH_18BIT = 0x66 }
```

Functions

void ILI9341_Init (Timer_t timer)

Initialize the LCD driver and the SPI module.

void ILI9341_resetHard (Timer_t timer)

Perform a hardware reset of the LCD driver.

void ILI9341_resetSoft (Timer_t timer)

Perform a software reset of the LCD driver.

void ILI9341_setSleepMode (bool isSleeping, Timer_t timer)

Enter or exit sleep mode.

• void ILI9341_setDispMode (bool isNormal, bool isFullColors)

Set the display area and color expression.

void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

Set the partial display area for partial mode. Call before activating partial mode via ILI9341_setDisplayMode().

void ILI9341 setDispInversion (bool is ON)

Toggle display inversion (OFF by default).

void ILI9341 setDispOutput (bool is ON)

Change whether the IC is outputting to the display for not.

void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols
 — Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341_setColorDepth (colorDepth_t colorDepth)

Set the pixel format to be 16-bit (65K colors) or 18-bit (262K colors).

void ILI9341_setFrameRateNorm (uint8_t divisionRatio, uint8_t clocksPerLine)

TODO: Write brief.

void ILI9341_setFrameRateIdle (uint8_t divisionRatio, uint8_t clocksPerLine)

TODO: Write brief.

void ILI9341_setInterface (void)

Sets the interface for the ILI9341. The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

void ILI9341 setRowAddress (uint16 t startRow, uint16 t endRow)

not using backlight, so these aren't necessary

void ILI9341_setColAddress (uint16_t startCol, uint16_t endCol)

Sets the start/end rows to be written to.

void ILI9341 writeMemCmd (void)

Signal to the driver that pixel data is incoming and should be written to memory.

void ILI9341_writePixel (uint8_t red, uint8_t green, uint8_t blue, bool is_16bit)

Write a single pixel to frame memory.

6.32.1 Detailed Description

Driver module for interfacing with an ILI9341 LCD driver.

Author

Bryan McElvy

This module contains functions for initializing and outputting graphical data to a 240RGBx320 resolution, 262K color-depth liquid crystal display (LCD). The module interfaces the LaunchPad (or any other board featuring the TM4C123GH6PM microcontroller) with an ILI9341 LCD driver chip via the SPI (serial peripheral interface) protocol.

6.33 Led.c File Reference 117

6.33 Led.c File Reference

Source code for LED module.

```
#include "Led.h"
#include "GPIO.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
```

Data Structures

• struct Led t

Functions

Variables

```
    static Led_t Led_ObjPool [LED_POOL_SIZE] = { 0 }
    static uint8_t num_free_leds = LED_POOL_SIZE
```

6.33.1 Detailed Description

Source code for LED module.

Author

6.34 Led.h File Reference

Interface for LED module.

```
#include "GPIO.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
```

Macros

• #define LED_POOL_SIZE 3

Functions

6.34.1 Detailed Description

Interface for LED module.

Author

Bryan McElvy

6.35 test adc.c File Reference

Test script for analog-to-digital conversion (ADC) module.

```
#include "ADC.h"
#include "PLL.h"
#include "GPIO.h"
#include "Timer.h"
#include "FIFO.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Macros

- #define LED_PINS (GPIO_Pin_t)(GPIO_PIN1 | GPIO_PIN2 | GPIO_PIN3)
- #define SAMPLING_PERIOD_MS (uint32_t) 5
- #define NUM_SAMPLES (uint32_t) 1000

Functions

- int main (void)
- void ADC0_SS3_Handler (void)

Variables

- volatile bool buffer_is_full = false
- volatile Fifo t fifo ptr = 0
- · volatile uint32_t fifo_buffer [NUM_SAMPLES]

6.35.1 Detailed Description

Test script for analog-to-digital conversion (ADC) module.

Author

Bryan McElvy

6.36 test_daq.c File Reference

Test script for the data acquisition (DAQ) module.

```
#include "DAQ.h"
#include "Debug.h"
#include "LCD.h"
#include "ADC.h"
#include "PLL.h"
#include "FIFO.h"
#include "ISR.h"
#include "lookup.h"
#include "arm_math_types.h"
#include <stdbool.h>
#include <stdint.h>
```

Macros

- #define DAQ_BUFFER_SIZE 128
- #define LCD_TOP_LINE (LCD_Y_MAX 48)
- #define LCD_NUM_Y_VALS 128
- #define LCD_X_AXIS_OFFSET 32
- #define LCD_Y_MIN (0 + LCD_X_AXIS_OFFSET)
- #define LCD_Y_MAX (LCD_NUM_Y_VALS + LCD_X_AXIS_OFFSET)

Functions

- void **LCD_plotNewSample** (uint16_t x, volatile const float32_t sample)
- int main (void)
- void ADC0 SS3 Handler (void)

Variables

- volatile Fifo_t inputFifo = 0
- volatile uint32_t inputBuffer [DAQ_BUFFER_SIZE] = { 0 }
- volatile bool sampleReady = false

6.36.1 Detailed Description

Test script for the data acquisition (DAQ) module.

Author

Bryan McElvy

6.37 test_debug.c File Reference

Test script for Debug module.

```
#include "Debug.h"
#include "GPIO.h"
#include "PLL.h"
#include "Timer.h"
#include <stdint.h>
```

Functions

• int main (void)

6.37.1 Detailed Description

Test script for Debug module.

Author

6.38 test_fifo.c File Reference

Test script for FIFO buffer.

```
#include "FIFO.h"
#include "PLL.h"
#include "UART.h"
#include "GPIO.h"
#include "Timer.h"
#include <stdbool.h>
#include <stdint.h>
#include <stdlib.h>
```

Macros

- #define FIFO_LEN 10
- #define LED_PINS (GPIO_Pin_t)(GPIO_PIN1 | GPIO_PIN2 | GPIO_PIN3)

Functions

- void FIFO_reportStatus (Fifo_t fifo_ptr)
- int main (void)

Variables

UART_t * uart

6.38.1 Detailed Description

Test script for FIFO buffer.

Author

Bryan McElvy

6.39 test_lcd_image.c File Reference

Test script for writing images onto the display.

```
#include "LCD.h"
#include "GPIO.h"
#include "PLL.h"
#include "Timer.h"
#include "ILI9341.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
#include <stdbool.h>
```

Macros

- #define **X_OFFSET** (uint16_t) 0
- #define **SIZE** (uint16_t) 4
- #define LED_PINS (GPIO_Pin_t)(GPIO_PIN1 | GPIO_PIN2 | GPIO_PIN3)

Functions

• int main (void)

Variables

- const uint8_t COLOR_ARR [6] = { LCD_RED, LCD_YELLOW, LCD_GREEN, LCD_CYAN, LCD_BLUE, LCD_PURPLE }
- uint8_t color_idx

6.39.1 Detailed Description

Test script for writing images onto the display.

Author

Bryan McElvy

6.40 test_pll.c File Reference

Test script for the PLL module.

```
#include "PLL.h"
#include "SysTick.h"
#include "tm4c123gh6pm.h"
```

Macros

- #define RED (uint8_t) 0x02
- #define **BLUE** (uint8_t) 0x04
- #define GREEN (uint8 t) 0x08

Functions

- void GPIO_PortF_Init (void)
- int main ()

6.40.1 Detailed Description

Test script for the PLL module.

Author

6.41 test_qrs.c File Reference

QRS detector test script.

```
#include "DAQ.h"
#include "Debug.h"
#include "QRS.h"
#include "PLL.h"
#include "FIFO.h"
#include "ISR.h"
#include "arm_math_types.h"
#include <math.h>
#include <stdbool.h>
#include <stdint.h>
```

Enumerations

- enum { ADC_VECTOR_NUM = INT_ADC0SS3 , DAQ_VECTOR_NUM = INT_CAN0 }
- enum { DAQ_BUFFER_CAPACITY = 8 , DAQ_BUFFER_SIZE = DAQ_BUFFER_CAPACITY + 1 , QRS_←
 BUFFER_SIZE = QRS_NUM_SAMP + 1 }

Functions

- · static void ADC_Handler (void)
- static void DAQ_Handler (void)
- int main (void)

Variables

- static volatile Fifo_t **DAQ_Fifo** = 0
- static volatile uint32_t **DAQ_Buffer** [DAQ_BUFFER_SIZE] = { 0 }
- static volatile Fifo_t QRS_Fifo = 0
- static volatile uint32_t QRS_FifoBuffer [QRS_BUFFER_SIZE] = { 0 }
- static volatile bool QRS_bufferIsFull = false
- volatile float32 t QRS_InputBuffer [QRS_BUFFER_SIZE] = { 0 }
- volatile float32_t QRS_OutputBuffer [QRS_BUFFER_SIZE] = { 0 }

6.41.1 Detailed Description

QRS detector test script.

Author

Bryan McElvy

6.42 test_spi.c File Reference

Test script for initializing SSI0 and writing data/commands via SPI.

```
#include "PLL.h"
#include "SPI.h"
```

Functions

• int main ()

6.42.1 Detailed Description

Test script for initializing SSI0 and writing data/commands via SPI.

Author

Bryan McElvy

6.43 test_systick_int.c File Reference

Test script for SysTick interrupts.

```
#include "PLL.h"
#include "SysTick.h"
#include "tm4c123gh6pm.h"
```

Functions

- void GPIO_PortF_Init (void)
- int main ()
- void SysTick_Handler (void)

Variables

```
    const uint8_t color_table [6] = { 0x02, 0x06, 0x04, 0x0C, 0x08, 0x0A }
    volatile uint8_t color_idx = 0
    volatile uint8_t led_is_on = 0
```

6.43.1 Detailed Description

Test script for SysTick interrupts.

Author

Bryan McElvy

6.44 test_timer1_int.c File Reference

Test script for relocating the vector table to RAM.

```
#include "GPIO.h"
#include "PLL.h"
#include "Timer.h"
#include "ISR.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
```

Macros

• #define LED_PINS (GPIO_Pin_t)(GPIO_PIN1 | GPIO_PIN2 | GPIO_PIN3)

Functions

- int main (void)
- void Timer1A_Handler (void)

Variables

```
    GPIO_Port_t * portF = 0
    Timer_t timer1 = 0
    bool isLedOn = false
```

6.44.1 Detailed Description

Test script for relocating the vector table to RAM.

Test script for Timer1A interrupts.

Author

Bryan McElvy

6.45 test_uart_la.c File Reference

Test script for using a USB logic analyzer to decode UART signals.

```
#include "PLL.h"
#include "GPIO.h"
#include "Timer.h"
#include "UART.h"
```

Functions

• int main (void)

6.45.1 Detailed Description

Test script for using a USB logic analyzer to decode UART signals.

Author

6.46 test_uart_write.c File Reference

Test script for writing to serial port via UART0.

```
#include "PLL.h"
#include "GPIO.h"
#include "Led.h"
#include "UART.h"
```

Functions

• int main (void)

Variables

- volatile unsigned char in_char
- uint32_t counter

6.46.1 Detailed Description

Test script for writing to serial port via UART0.

Author

Bryan McElvy

6.47 test_userctrl.c File Reference

Test file for GPIO/UserCtrl modules and GPIO interrupts.

```
#include "UserCtrl.h"
```

Functions

• int main ()

6.47.1 Detailed Description

Test file for GPIO/UserCtrl modules and GPIO interrupts.

Author

Index

ADC.c, 85	Debug_WriteFloat, 43
ADC.h, 85	Debug.h, 113
	G .
Analog-to-Digital Conversion (ADC), 6	Debug_Assert
Application Software, 36	Debug, 44
Assert	Debug Init
Common, 59	Debug, 42
Common, 55	_
	Debug_SendFromList
bandpassFiltStruct	Debug, 43
Data Acquisition (DAQ), 41	Debug SendMsg
	Debug, 42
CASET	_
ILI9341, 24	Debug_WriteFloat
•	Debug, 43
Cmd_t	Device Drivers, 5
ILI9341, 24	DINVOFF
COEFF BANDPASS	
QRS, 58	ILI9341, 24
•	DINVON
COEFF_MOVAVG	ILI9341, 24
QRS, 58	DISPOFF
COEFFS BANDPASS	
Data Acquisition (DAQ), 41	ILI9341, 24
	DISPON
COEFFS_NOTCH	ILI9341, 24
Data Acquisition (DAQ), 41	
colorDepth t	FIFO, 59
ILI9341, 24	
	FIFO_Flush, 62
Common, 58	FIFO_Get, 61
Assert, 59	FIFO_getCurrSize, 64
	FIFO Init, 61
DAQ.c, 72	- :
DAQ.h, 74	FIFO_isEmpty, 64
	FIFO_isFull, 63
DAQ_BandpassFilter	FIFO PeekAll, 63
Data Acquisition (DAQ), 40	FIFO PeekOne, 63
DAQ convertToMilliVolts	
Data Acquisition (DAQ), 39	FIFO_Put, 61
	FIFO_Reset, 62
DAQ_Handler	FIFO_TransferAll, 63
Main, 66	FIFO TransferOne, 62
DAQ_Init	-
Data Acquisition (DAQ), 38	Fifo.c, 81
	Fifo.h, 83
DAQ_NotchFilter	FIFO_Flush
Data Acquisition (DAQ), 39	FIFO, 62
DAQ readSample	FIFO_Get
Data Acquisition (DAQ), 38	
Data Acquisition (DAQ), 36	FIFO, 61
. , , , , , , , , , , , , , , , , , , ,	FIFO_getCurrSize
bandpassFiltStruct, 41	FIFO, 64
COEFFS_BANDPASS, 41	FIFO Init
COEFFS NOTCH, 41	-
DAQ_BandpassFilter, 40	FIFO, 61
	FIFO_isEmpty
DAQ_convertToMilliVolts, 39	FIFO, 64
DAQ_Init, 38	FIFO isFull
DAQ_NotchFilter, 39	-
DAQ_readSample, 38	FIFO, 63
_ ·	FIFO_PeekAll
Lookup_GetPtr, 40	FIFO, 63
Debug, 41	FIFO PeekOne
Debug_Assert, 44	-
Debug_Init, 42	FIFO, 63
	FIFO_Put
Debug_SendFromList, 43	FIFO, 61
Debug_SendMsg, 42	

FIFO_Reset	GPIO.c, 93
FIFO, 62	GPIO.h, 100
Fifo_t, 70	GPIO_ConfigAnalog
FIFO_TransferAll	GPIO.c, 93
FIFO, 63	GPIO.h, 101
FIFO TransferOne	GPIO_ConfigDirInput
FIFO, 62	GPIO.c, 89
FRMCTR1	GPIO.h, 96
ILI9341, 24	GPIO_ConfigDirOutput
FRMCTR2	GPIO.c, 88
ILI9341, 24	GPIO.h, 96
FRMCTR3	GPIO_ConfigDriveStrength
ILI9341, 24	GPIO.c, 89
CDIO 7	GPIO.h, 97
GPIO, 7	GPIO_ConfigInterrupts_BothEdges
GPIO.c, 86	GPIO.c, 91
GPIO_ConfigAltMode, 93	GPIO.h, 99
GPIO_ConfigAnalog, 93	GPIO_ConfigInterrupts_Edge
GPIO_ConfigDirInput, 89	GPIO.c, 90
GPIO_ConfigDirOutput, 88	GPIO.h, 98
GPIO_ConfigDriveStrength, 89	GPIO_ConfigInterrupts_LevelTrig
GPIO_ConfigInterrupts_BothEdges, 91	GPIO.c, 91
GPIO_ConfigInterrupts_Edge, 90	GPIO.h, 99
GPIO_ConfigInterrupts_LevelTrig, 91	GPIO_ConfigNVIC
GPIO ConfigNVIC, 91	GPIO.c, 91
GPIO_ConfigPortCtrl, 93	GPIO.h, 99
GPIO_ConfigPullDown, 89	
GPIO_ConfigPullUp, 89	GPIO_ConfigPortCtrl
GPIO_DisableDigital, 90	GPIO.c, 93
GPIO_EnableDigital, 90	GPIO.h, 101
GPIO InitPort, 88	GPIO_ConfigPullDown
-	GPIO.c, 89
GPIO_isPortInit, 88	GPIO.h, 97
GPIO_PTR_ARR, 94	GPIO_ConfigPullUp
GPIO_ReadPins, 92	GPIO.c, 89
GPIO_Toggle, 92	GPIO.h, 97
GPIO_WriteHigh, 92	GPIO_DisableDigital
GPIO_WriteLow, 92	GPIO.c, 90
GPIO.h, 94	GPIO.h, 98
GPIO_ConfigAltMode, 100	GPIO_EnableDigital
GPIO_ConfigAnalog, 101	GPIO.c, 90
GPIO_ConfigDirInput, 96	GPIO.h, 98
GPIO_ConfigDirOutput, 96	GPIO_InitPort
GPIO_ConfigDriveStrength, 97	GPIO.c, 88
GPIO_ConfigInterrupts_BothEdges, 99	GPIO.h, 96
GPIO_ConfigInterrupts_Edge, 98	GPIO isPortInit
GPIO_ConfigInterrupts_LevelTrig, 99	GPIO.c, 88
GPIO_ConfigNVIC, 99	GPIO.b, 96
GPIO_ConfigPortCtrl, 101	
GPIO_ConfigPullDown, 97	GPIO_Port_t, 71
GPIO_ConfigPullUp, 97	GPIO_PTR_ARR
GPIO_DisableDigital, 98	GPIO.c, 94
GPIO_bisableDigital, 98	GPIO_ReadPins
_ •	GPIO.c, 92
GPIO_InitPort, 96	GPIO.h, 99
GPIO_isPortInit, 96	GPIO_Toggle
GPIO_ReadPins, 99	GPIO.c, 92
GPIO_Toggle, 100	GPIO.h, 100
GPIO_WriteHigh, 100	GPIO_WriteHigh
GPIO_WriteLow, 100	GPIO.c, 92
GPIO_ConfigAltMode	

GPIO.h, 100	ILI9341.c, 114
GPIO_WriteLow	ILI9341.h, 115
GPIO.c, 92	ILI9341_COLORDEPTH_16BIT
GPIO.h, 100	ILI9341, 25
	ILI9341_COLORDEPTH_18BIT
IDMOFF	ILI9341, 25
ILI9341, <mark>24</mark>	ILI9341 Init
IDMON	ILI9341, 25
ILI9341, 24	ILI9341 resetHard
IFCTL	ILI9341, 26
ILI9341, 24	ILI9341 resetSoft
ILI9341, 22	ILI9341, 26
CASET, 24	ILI9341_sendParams
Cmd t, 24	ILI9341, 25
colorDepth_t, 24	ILI9341_setAddress
DINVOFF, 24	
DINVON, 24	ILI9341, 25
DISPOFF, 24	ILI9341_setColAddress
DISPON, 24	ILI9341, 30
FRMCTR1, 24	ILI9341_setColorDepth
FRMCTR2, 24	ILI9341, 29
FRMCTR3, 24	ILI9341_setDispInversion
•	ILI9341, 27
IDMOFF, 24 IDMON, 24	ILI9341_setDispMode
•	ILI9341, <mark>27</mark>
IFCTL, 24	ILI9341_setDispOutput
ILI9341_COLORDEPTH_16BIT, 25	ILI9341, <mark>28</mark>
ILI9341_COLORDEPTH_18BIT, 25	ILI9341_setFrameRateIdle
ILI9341_Init, 25	ILI9341, 29
ILI9341_resetHard, 26	ILI9341_setFrameRateNorm
ILI9341_resetSoft, 26	ILI9341, 29
ILI9341_sendParams, 25	ILI9341_setInterface
ILI9341_setAddress, 25	ILI9341, 29
ILI9341_setColAddress, 30	ILI9341_setMemAccessCtrl
ILI9341_setColorDepth, 29	ILI9341, <mark>28</mark>
ILI9341_setDispInversion, 27	ILI9341 setPartialArea
ILI9341_setDispMode, 27	ILI9341, <mark>27</mark>
ILI9341_setDispOutput, 28	ILI9341_setRowAddress
ILI9341_setFrameRateIdle, 29	ILI9341, 30
ILI9341_setFrameRateNorm, 29	ILI9341_setSleepMode
ILI9341_setInterface, 29	ILI9341, 26
ILI9341_setMemAccessCtrl, 28	ILI9341_writeMemCmd
ILI9341_setPartialArea, 27	ILI9341, 31
ILI9341_setRowAddress, 30	ILI9341 writePixel
ILI9341_setSleepMode, 26	ILI9341, 31
ILI9341_writeMemCmd, 31	Interrupt Service Routines, 16
ILI9341_writePixel, 31	ISR_addToIntTable, 18
MADCTL, 24	ISR_clearPending, 21
NORON, 24	ISR Disable, 20
PASET, 24	_ ·
PIXSET, 24	ISR_Enable, 19
PLTAR, 24	ISR_GlobalDisable, 18
PRCTR, 24	ISR_GlobalEnable, 18
PTLON, 24	ISR_InitNewTableInRam, 18
RAMWR, 24	ISR_setPriority, 19
SPLIN, 24	ISR_triggerInterrupt, 20
SPLOUT, 24	ISR.c, 101
	ISR.h, 103
SWRESET, 24	ISR_addToIntTable
VSCRDEF, 24	Interrupt Service Routines, 18
VSCRSADD, 24	

ISR_clearPending	LCD, 49
Interrupt Service Routines, 21	LCD_setColorInversionMode
ISR_Disable	LCD, 48
Interrupt Service Routines, 20	LCD_setDim
ISR_Enable	LCD, 47
Interrupt Service Routines, 19	LCD_setOutputMode
ISR_GlobalDisable	LCD, 47
Interrupt Service Routines, 18	LCD_setX
ISR_GlobalEnable	LCD, 50
Interrupt Service Routines, 18	LCD_setY
ISR_InitNewTableInRam	LCD, 50
Interrupt Service Routines, 18	LCD_toggleColorDepth
ISR_setPriority	LCD, 49
Interrupt Service Routines, 19	LCD_toggleColorInversion
ISR_triggerInterrupt	LCD, 48
Interrupt Service Routines, 20	LCD_toggleOutput
LCD, 44	LCD, 48
LCD_Draw, 51	LED, 33
LCD_drawHoriLine, 52	Led_GetPin, 34
LCD drawLine, 47	Led_GetPort, 34
LCD_drawRectangle, 52	Led_Init, 34
LCD drawVertLine, 52	Led_isOn, 34
LCD_Init, 47	Led_Toggle, 35
LCD_setArea, 49	Led_TurnOff, 35
LCD_setColor, 50	Led_TurnOn, 35 Led.c, 117
LCD_setColor_3bit, 51	
LCD_setColorDepth, 49	Led.h, 118 Led GetPin
LCD_setColorInversionMode, 48	-
LCD_setDim, 47	LED, 34
LCD_setOutputMode, 47	Led_GetPort
LCD_setX, 50	LED, 34
LCD_setY, 50	Led_Init
LCD toggleColorDepth, 49	LED, 34
LCD toggleColorInversion, 48	Led_isOn
LCD_toggleOutput, 48	LED, 34
LCD.c, 74	Led_t, 71
LCD.h, 76	Led_Toggle
LCD Draw	LED, 35 Led_TurnOff
LCD, 51	LED, 35
LCD_drawHoriLine	
LCD, 52	Led_TurnOn LED, 35
LCD drawLine	lookup.c, 78
 LCD, 47	lookup.h, 78
LCD_drawRectangle	Lookup_GetPtr
 LCD, 52	Data Acquisition (DAQ), 40
LCD drawVertLine	Data Acquisition (DAQ), 40
 LCD, <u>5</u> 2	MADCTL
LCD Handler	ILI9341, 24
Main, 68	Main, 65
LCD Init	DAQ_Handler, 66
LCD, 47	LCD_Handler, 68
LCD setArea	main, 69
LCD, 49	Processing_Handler, 67
LCD_setColor	main
LCD, 50	Main, 69
LCD_setColor_3bit	main.c, 112
LCD, 51	Middleware, 21
LCD_setColorDepth	
= ::::: : :I::	

NewAssert, 65	SPI.h, 106
NewAssert., 84	SPI Init
NewAssert.h, 84	Serial Peripheral Interface (SPI), 9
NORON	SPI Read
ILI9341, 24	Serial Peripheral Interface (SPI), 9
1613541, 24	SPI_SET_DC
PASET	
ILI9341, 24	Serial Peripheral Interface (SPI), 9 SPI WriteCmd
Phase-Locked Loop (PLL), 7	_
PIXSET	Serial Peripheral Interface (SPI), 9
ILI9341, 24	SPI_WriteData
PLL.c, 104	Serial Peripheral Interface (SPI), 10
PLL.h, 104	SPLIN
PLTAR	ILI9341, 24
	SPLOUT
ILI9341, 24	ILI9341, 24
PRCTR	SWRESET
ILI9341, 24	ILI9341, 24
Processing_Handler	System Tick (SysTick), 10
Main, 67	SysTick_Interrupt_Init, 11
PTLON	SysTick.c, 106
ILI9341, 24	SysTick.h, 107
	SysTick_Interrupt_Init
QRS, 53	System Tick (SysTick), 11
COEFF_BANDPASS, 58	-, (-, ,,
COEFF_MOVAVG, 58	test_adc.c, 118
QRS_applyDecisionRules, 56	test_daq.c, 119
QRS_findFiducialMarks, 55	test_debug.c, 120
QRS_initLevels, 55	test_fifo.c, 121
QRS_Preprocess, 56	test_lcd_image.c, 121
QRS_runDetection, 57	
QRS_updateLevel, 55	test_pll.c, 122
QRS_updateThreshold, 56	test_qrs.c, 123
QRS.c, 79	test_spi.c, 123
	test_systick_int.c, 124
QRS.h, 81	test_timer1_int.c, 124
QRS_applyDecisionRules	test_uart_la.c, 125
QRS, 56	test_uart_write.c, 126
QRS_findFiducialMarks	test_userctrl.c, 126
QRS, 55	Timer, 11
QRS_initLevels	TIMER_POOL, 12
QRS, 55	Timer.c, 107
QRS_Preprocess	Timer.h, 108
QRS, 56	TIMER_POOL
QRS_runDetection	Timer, 12
QRS, 57	Timer t, 71
QRS_updateLevel	
QRS, 55	UART.c, 109
QRS_updateThreshold	UART.h, 111
QRS, 56	UART ARR
	Universal Asynchronous Receiver/Transmitte
RAMWR	(UART), 16
ILI9341, 24	
	UART_Init
Serial Peripheral Interface (SPI), 8	Universal Asynchronous Receiver/Transmitte
SPI_Init, 9	(UART), 14
SPI_Read, 9	UART_ReadChar
	Universal Asynchronous Receiver/Transmitte
SPI_SET_DC, 9	(UART), 14
SPI_WriteDate 10	UART_t, 72
SPI_WriteData, 10	UART_WriteChar
SPI.c, 105	

```
Universal Asynchronous
                               Receiver/Transmitter
         (UART), 15
UART_WriteFloat
    Universal Asynchronous
                               Receiver/Transmitter
        (UART), 16
UART WriteInt
    Universal
               Asynchronous
                               Receiver/Transmitter
         (UART), 15
UART WriteStr
    Universal
               Asynchronous
                               Receiver/Transmitter
         (UART), 15
Universal Asynchronous Receiver/Transmitter (UART),
        13
    UART_ARR, 16
    UART_Init, 14
    UART_ReadChar, 14
    UART_WriteChar, 15
    UART_WriteFloat, 16
    UART_WriteInt, 15
    UART_WriteStr, 15
VSCRDEF
    ILI9341, 24
VSCRSADD
    ILI9341, 24
```