uHeartMonitor: An ECG-based Heart Rate Monitor

Generated by Doxygen 1.9.8

1 Overview 1

# 1 Overview

HeartMonitor is a personal project that I made to increase my experience in embedded software engineering and apply my previous coursework in biomedical engineering. Essentially, it's a fully-functional, ECG-based heart rate monitor that runs on the popular Tiva LaunchPad evaluation kit for the TM4C123 microcontroller.

Github Repository Link: https://github.com/bryanmcelvy/microHeartMonitor

Introduction: Link

# 2 Introduction

### 2.1 Background

**Electrocardiography** (or **ECG**) is a diagnostic technique in which the electrical activity of a patient's heart is captured as time series data (AKA the ECG signal) and analyzed to assess cardiovascular health. Specifically, the ECG signal can be analyzed to detect biomarkers for cardiovascular diseases like arrhythmia, myocardial infarction, etc. which manifest as abnormalities in the ECG waveform. In clinical environments, ECG is performed using machines that implement the required hardware and software to acquire, process, and analyze the ECG signal. This must be done in such a way that preserves the important information within the signal (specifically the shape of the ECG waveform) while also maintaining the safety of the patient [1].

The ECG waveform consists of 5 smaller "waves" – the P, Q, R, S, and T waves – that each give information on a patient's cardiac health both individually and collectively. The term *QRS complex* refers to the part of the ECG waveform that is generally taken to be the heart "beat". Thus, ECG-based heart rate monitors commonly use a category of algorithms called *QRS detectors* to determine the locations of the R-peaks within a block of ECG signal data and calculate the time period between each adjacent peak (i.e. the *RR interval*) [2]. The RR interval is related to the heart rate by this equation:

$$RR = \frac{60}{HR}$$

...where RR is the time in [s] between two adjacent R peaks, and HR is the heart rate in [bpm] (beats per minute).

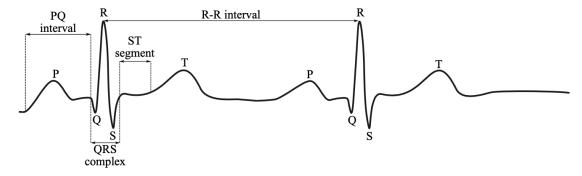


Figure 3. Sample ECG curve.

The uHeartMonitor is an embedded system that implements the Pan-Tompkins algorithm for QRS detection. The system consists of both hardware and software that cooperate to achieve this task while also visually outputting the ECG waveform and heart rate to a liquid crystal display (LCD). The text below and the contents of this repository reflect the current progress made, but the end goal is to have the full system mounted on 1-2 printed circuit boards (PCBs) situated inside an insulated enclosure.

#### 2.2 Motivation

My primary motivations for doing this project are:

- Learning more about and gaining exposure to the many different concepts, tools, and challenges involved in embedded systems engineering
- · Applying the skills and knowledge I gained from previous coursework, including but not limited to:
  - BIOE 4315: Bioinstrumentation
  - BIOE 4342: Biomedical Signal Processing
  - COSC 2306: Data Programming
  - Embedded Systems Shape the World
- Showing tangible proof of qualification for junior-level embedded software engineering roles to potential employers

I also hope that anyone interested in any of the fields of knowledge relevant to this project (biomedical/electrical/computer/software engineering) will find this helpful to look at or even use in their own projects.

#### 2.3 Disclaimer

This project is neither a product nor a medical device (by any legal definition, anyway), and is not intended to be either or both of things now or in the future. It is simply a passion project.


# 2.4 Key Terms

- · Electrocardiogram/Electrocardiography (ECG)
- Heart rate
- · Heart rate monitor
- · QRS complex
- QRS detector
- RR interval

3 Materials & Methods


# 3 Materials & Methods

# 3.1 Hardware Design

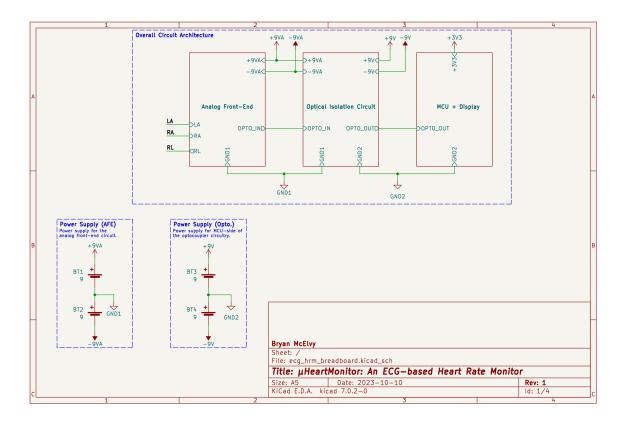


The hardware is divided into three modules: the analog-front end (AFE), the optical isolation circuit, and the micro-controller/display circuit.

#### **Analog-Front End**

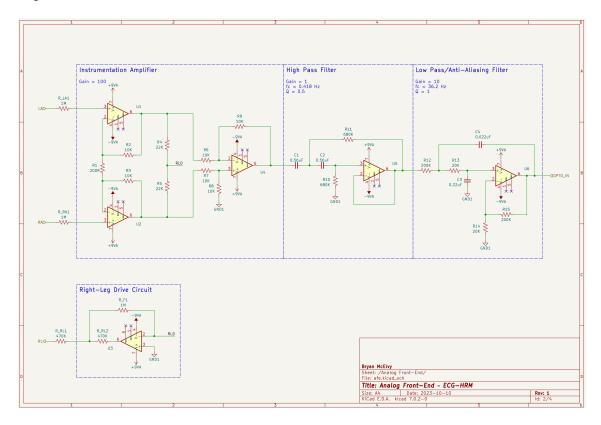

The AFE consists of an instrumentation amplifier with a gain of 100; a 2nd-order Sallen-Key high-pass filter with a gain of 1 and a cutoff frequency of  $\sim 0.5~Hz$ ; and a 2nd-order Sallen-Key low-pass filter with a passband gain of 11 and a cutoff frequency of  $\sim 40~Hz$ . The overall gain is 1100

# **Optical Isolation Circuitry**

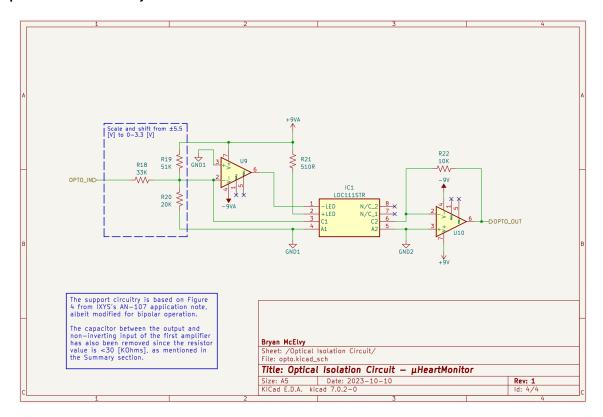


3.2 Software Architecture 5

The optical isolation circuit uses a linear optocoupler to transmit the ECG signal from the analog-front end circuit to the microcontroller circuit. This circuitry serves as a safety measure against power surges and other potential hazards that can occur as a result of connecting someone directly to mains power (for example, death).

It also has three resistors on the AFE-side that effectively shift the signal from the projected output range of  $\pm$  5.5 V to the range [0,3.5) V, which is necessary for both the optocoupler and the microcontroller's built-in analog-to-digital converter (ADC) circuitry.


#### **Microcontroller Circuit**

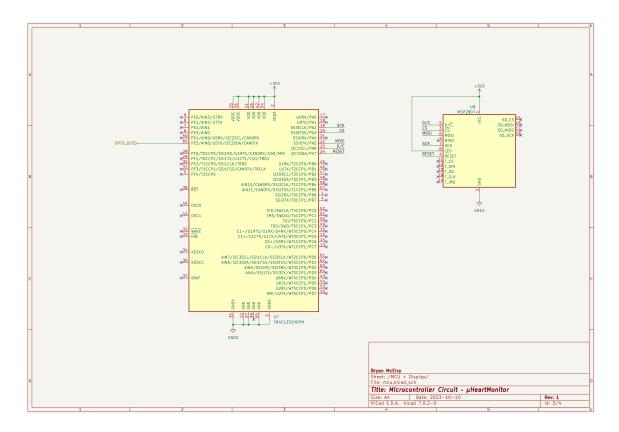

The microcontroller circuit currently consists of a TM4C123 microcontroller mounted on a LaunchPad evaluation kit, and an MSP2807 liquid crystal display (LCD).


#### 3.2 Software Architecture

The software has a total of 14 modules, 11 of which are (somewhat loosely) divided into three layers: application-specific software, middleware, and device drivers. The call graph and data flow graph visually represent the software architecture.

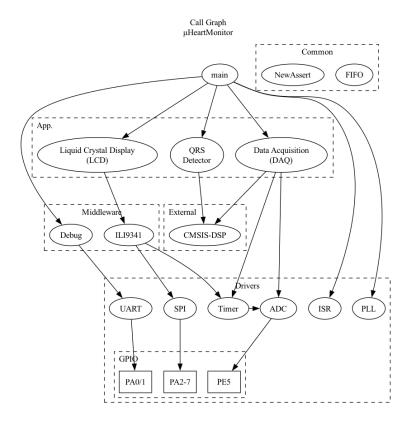

This graph shows which modules communicate with (or "call") each other. Each arrow points from the "caller" to the "callee".

It also somewhat doubles as an #include dependency graph.

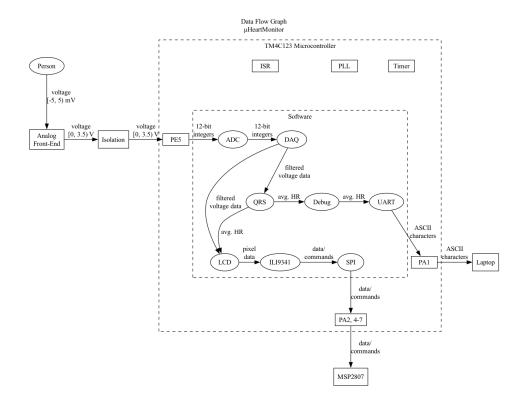

This graph shows the flow of information from the patient to the LCD (and also the laptop).

3.3 Build Instructions 7

#### **Device Drivers**

The device driver layer consists of software modules that interface directly with the microcontroller's built-in peripheral devices.

See also

**Device Drivers** 

#### Middleware

The middleware layer consists of higher-level device drivers that interface with some hardware connected to one of the built-in peripherals (i.e. the Debug module connects to UART and the ILI9341 module primarily uses SPI).

See also

Middleware

#### **Application Software**

The application software layer has modules that are at least partially, if not completely built for this project. This layer includes the data acquisition module, whose functions handle receiving raw input samples and denoising them; the QRS detector, which analyzes the filtered signal to determine the average heart rate; and the LCD module, which plots the ECG waveform and displays the heart rate.

See also

**Application Software** 

#### **External**

This "layer" includes modules/libraries/files that were not written (or at least heavily altered) by me. It currently only contains portions of ARM's CMSIS-Core and CMSIS-DSP libraries.

#### Common

The "common" modules are general-purpose modules that don't necessarily fit into the above categories/layers. This category includes the "Fifo" module, which contains a ring buffer-based implementation of the FIFO buffer (AKA "queue") data structure; and "NewAssert", which is essentially just an implementation of the assert macro that causes a breakpoint (and also doesn't use up as much RAM as the standard implementation does).

See also

Common

#### 3.3 Build Instructions

#### 3.3.1 Hardware

**WIP** 

#### 3.3.2 Software

WIP

# 4 Results

#### 4.1 Current Results

Video Demonstration: YouTube Link

The project is currently implemented using 2 breadboards and a Tiva C LaunchPad development board. The manual tests I've been running use a clone of the JDS6600 signal generator, which I loaded a sample ECG waveform from the MIT-BIH arrhythmia database onto using scripts in the corresponding folder in the /tools directory. As can be seen in the video demonstration, the calculated heart rate isn't 100% correct at the moment, but still gets relatively close.

#### 4.2 To-do

#### 4.2.1 Hardware

- · Design a custom PCB
  - Replace most of the AFE circuitry with an AFE IC (e.g. AD8232)
  - Add electrostatic discharge (ESD) protection
  - Add decoupling capacitors

#### 4.2.2 Software

· Expand the automated test suite

Note

See the other Todo List section for other software-related todos.

# 5 References

- [1] J. Pan and W. J. Tompkins, "A Real-Time QRS Detection Algorithm," IEEE Trans. Biomed. Eng., vol. BME-32, no. 3, pp. 230–236, Mar. 1985, doi: 10.1109/TBME.1985.325532.
- [2] R. Martinek et al., "Advanced Bioelectrical Signal Processing Methods: Past, Present and Future Approach—
  Part I: Cardiac Signals," Sensors, vol. 21, no. 15, p. 5186, Jul. 2021, doi: 10.3390/s21155186.
- [3] C. Ünsalan, M. E. Yücel, and H. D. Gürhan, Digital Signal Processing using Arm Cortex-M based Microcontrollers: Theory and Practice. Cambridge: ARM Education Media, 2018.
- [4] B. B. Winter and J. G. Webster, "Driven-right-leg circuit design," IEEE Trans Biomed Eng, vol. 30, no. 1, pp. 62–66, Jan. 1983, doi: 10.1109/tbme.1983.325168.
- [5] J. Valvano, Embedded Systems: Introduction to ARM Cortex-M Microcontrollers, 5th edition. Jonathan Valvano, 2013.
- [6] S. W. Smith, The Scientist and Engineer's Guide to Digital Signal Processing, 2nd edition. San Diego, Calif: California technical Publishin, 1999.

6 Todo List

# 6 Todo List

#### Module adc

Refactor to be more general.

#### Module gpio

Remove statically-allocated data structures for unused GPIO ports.

#### Module qrs

Add heart rate variability (HRV) calculation.

#### File QRS.c

Add thresholding for bandpass filtered signal.

Add searchback procedure via RR intervals.

Add T-wave discrimination.

# Global QRS\_applyDecisionRules (const float32\_t yn[])

Write implementation explanation

#### **Module timer**

Remove statically-allocated data structures for unused timers.

#### Module uart

Remove statically-allocated data structures for unused UARTs.

# 7 Bug List

# Global QRS\_applyDecisionRules (const float32\_t yn[])

The current implementation processes one block of data at a time and discards the entire block immediately after. As a result, QRS complexes that are cutoff between one block and another are not being counted.

# 8 Topic Index

#### 8.1 Topics

Here is a list of all topics with brief descriptions:

??
??
??
??
??
??
??
??
??

Debug	??
IL19341	??
LED	??
Device Drivers	??
Analog-to-Digital Conversion (ADC)	??
General-Purpose Input/Output (GPIO)	??
Interrupt Service Routines	??
Phase-Locked Loop (PLL)	??
Serial Peripheral Interface (SPI)	??
Timer	??
Universal Asynchronous Receiver/Transmitter (UART)	??
9 Data Structure Index	
9.1 Data Structures	
Here are the data structures with brief descriptions:	
Fifo_t	??
GpioPort_t	??
Led_t	??
Spi_t	??
Timer_t	??
Uart_t	??
10 File Index	
10.1 File List	
Here is a list of all documented files with brief descriptions:	
DAQ.c Source code for DAQ module	??
DAQ.h Application software for handling data acquision (DAQ) functions	??
DAQ_lookup.c Source code for DAQ module's lookup table	??

10.1 File List 11

Font.c	
Contains bitmaps for a selection of ASCII characters	??
LCD.c	
Source code for LCD module	??
LCD.h Header file for LCD module	??
QRS.c Source code for QRS detection module	??
QRS.h Header file for QRS detection module	??
Fifo.c Source code for FIFO buffer module	??
Fifo.h Header file for FIFO buffer implementation	??
NewAssert.c Source code for custom assert implementation	??
NewAssert.h Header file for custom assert implementation	??
ADC.c Source code for analog-to-digital conversion (ADC) module	??
ADC.h  Header file for analog-to-digital conversion (ADC) module	??
GPIO.c Source code for GPIO module	??
GPIO.h  Header file for general-purpose input/output (GPIO) device driver	??
ISR.c Source code for interrupt service routine (ISR) configuration module	??
ISR.h Header file for interrupt service routine (ISR) configuration module	??
PLL.c Implementation details for phase-lock-loop (PLL) functions	??
PLL.h Driver module for activating the phase-locked-loop (PLL)	??
SPI.c Source code for serial peripheral interface (SPI) module	??
SPI.h  Header file for serial peripheral interface (SPI) module	??
Timer.c Source code for Timer module	??
Timer.h  Device driver for general-purpose timer modules	??


UART.c	
Source code for UART module	??
UART.h	
Driver module for serial communication via UART0 and UART 1	??
main.c	
Main program file	??
Debug.c	
Source code for Debug module	??
Debug.h	
Header file for Debug module	??
ILI9341.c	
Source code for ILI9341 module	??
ILI9341.h	
Driver module for interfacing with an ILI9341 LCD driver	??
Led.c	
Source code for LED module	??
Led.h	
Interface for LED module	??

# 11 Topic Documentation

# 11.1 Application Software

Application-specific software modules.

Collaboration diagram for Application Software:

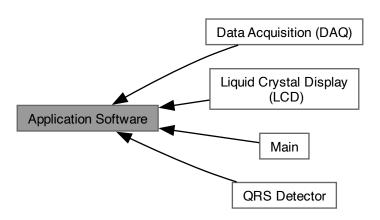

#### **Modules**

Data Acquisition (DAQ)

Module for managing data acquisition (DAQ) functions.

Liquid Crystal Display (LCD)

Module for displaying graphs on an LCD via the ILI9341 module.

· QRS Detector

Module for analyzing ECG data to determine heart rate.

Main

Main program file.

#### 11.1.1 Detailed Description

Application-specific software modules.

These modules contain functions built specifically for this project's purposes.

# 11.1.2 Data Acquisition (DAQ)

Module for managing data acquisition (DAQ) functions.

#### **Files**

• file DAQ.c

Source code for DAQ module.

file DAQ.h

Application software for handling data acquision (DAQ) functions.

· file DAQ lookup.c

Source code for DAQ module's lookup table.

#### **Macros**

• #define SAMPLING\_PERIOD\_MS 5

sampling period in ms ( $T_s = \frac{1}{f}$ )

#define DAQ\_LOOKUP\_MAX ((float32\_t) 5.5f)

maximum lookup table value

#define DAQ\_LOOKUP\_MIN ((float32\_t) (-5.5f))

minimum lookup table value

#### **Variables**

• static const float32\_t DAQ\_LOOKUP\_TABLE [4096]

Lookup table for converting ADC data from unsigned 12-bit integer values to 32-bit floating point values.

#### **Digital Filters**

• enum {

NUM\_STAGES\_NOTCH = 6, NUM\_COEFFS\_NOTCH = NUM\_STAGES\_NOTCH \* 5, STATE\_BUFF\_ $\leftarrow$  SIZE\_NOTCH = NUM\_STAGES\_NOTCH \* 4, NUM\_STAGES\_BANDPASS = 4, NUM\_COEFFS\_DAQ\_BANDPASS = NUM\_STAGES\_BANDPASS \* 5, STATE\_BUFF\_SIZE\_BANDPASS = NUM\_STAGES\_BANDPASS \* 4}

- typedef arm\_biquad\_casd\_df1\_inst\_f32 Filter\_t
- static const float32 t COEFFS NOTCH [NUM COEFFS NOTCH]

Coefficients of the 60 [Hz] notch filter in biquad (AKA second-order section, or "sos") form.

• static const float32\_t COEFFS\_BANDPASS [NUM\_COEFFS\_DAQ\_BANDPASS]

Coefficients of the bandpass filter in biquad (AKA second-order section, or "sos") form.

- static float32\_t stateBuffer\_Notch [STATE\_BUFF\_SIZE\_NOTCH]
- static const Filter\_t notchFiltStruct = { NUM\_STAGES\_NOTCH, stateBuffer\_Notch, COEFFS\_NOTCH }
- static const Filter\_t \*const notchFilter = &notchFiltStruct
- static float32 t stateBuffer Bandpass [STATE BUFF SIZE BANDPASS]
- static const Filter t bandpassFiltStruct
- static const Filter\_t \*const bandpassFilter = &bandpassFiltStruct

#### Initialization

void DAQ Init (void)

Initialize the data acquisition (DAQ) module.

#### **Reading Input Data**

uint16\_t DAQ\_readSample (void)

Read a sample from the ADC.

void DAQ\_acknowledgeInterrupt (void)

Acknowledge the ADC interrupt.

float32\_t DAQ\_convertToMilliVolts (uint16\_t sample)

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

#### **Digital Filtering Functions**

float32\_t DAQ\_NotchFilter (volatile float32\_t xn)

Apply a 60 [Hz] notch filter to an input sample.

float32\_t DAQ\_BandpassFilter (volatile float32\_t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

# 11.1.2.1 Detailed Description

Module for managing data acquisition (DAQ) functions.

#### 11.1.2.2 Function Documentation

#### DAQ\_Init()

```
void DAQ_Init (
     void )
```

Initialize the data acquisition (DAQ) module.

#### Postcondition

The analog-to-digital converter (ADC) is initialized and configured for timer-triggered sample capture.

The timer is initialized in PERIODIC mode and triggers the ADC every 5ms (i.e. sampling frequency  $f_s=200Hz$ ).

The DAQ module has access to its lookup table (LUT).

#### DAQ\_readSample()

Read a sample from the ADC.

#### Precondition

Initialize the DAQ module.

This should be used in an interrupt handler and/or at a consistent rate (i.e. the sampling frequency).

#### **Parameters**

```
out sample | 12-bit sample in range [0x000, 0xFFF]
```

#### Postcondition

The sample can now be converted to millivolts.

#### See also

DAQ\_convertToMilliVolts()

# DAQ\_acknowledgeInterrupt()

Acknowledge the ADC interrupt.

#### Precondition

This should be used within an interrupt handler.

#### DAQ\_NotchFilter()

```
float32_t DAQ_NotchFilter ( volatile \ float32\_t \ \textit{xn} \ )
```

Apply a 60 [Hz] notch filter to an input sample.

#### Precondition

Read a sample from the ADC and convert it to millivolts.

#### **Parameters**

in	xn	Raw input sample
out	yn	Filtered output sample

#### Postcondition

y[n] is ready for analysis and/or further processing.

#### See also

#### DAQ\_BandpassFilter()

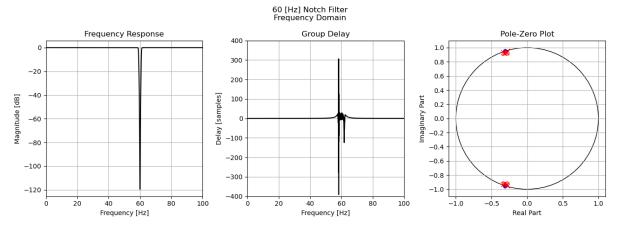


Figure 1 Frequency domain parameters for the notch filter.

# DAQ\_BandpassFilter()

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

# Precondition

Read a sample from the ADC and convert it to millivolts.

#### **Parameters**

in	xn	Input sample
out	yn	Filtered output sample

#### Postcondition

y[n] is ready for analysis and/or further processing.

#### See also

# DAQ\_NotchFilter()

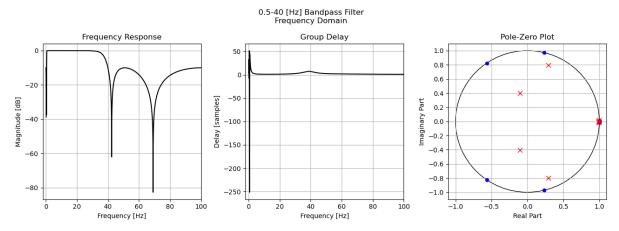


Figure 2 Frequency domain parameters for the bandpass filter.

# DAQ\_convertToMilliVolts()

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

# Precondition

Read a sample from the ADC.

#### **Parameters**

in	sample	12-bit sample in range $[0x000, 0xFFF]$
out	xn	Voltage value in range $[-5.5, 5.5)[mV]$

### Postcondition

The sample x[n] is ready for filtering.

#### See also

DAQ\_readSample()

#### Note

Defined in DAQ\_lookup.c rather than DAQ.c.

#### 11.1.2.3 Variable Documentation

#### COEFFS\_NOTCH

```
const float32_t COEFFS_NOTCH[NUM_COEFFS_NOTCH] [static]
```

#### Initial value:

```
0.8856732845306396f, 0.5476464033126831f, 0.8856732845306396f, -0.5850160717964172f, -0.9409302473068237f,

1.0f, 0.6183391213417053f, 1.0f, -0.615153431892395f, -0.9412328004837036f,

1.0f, 0.6183391213417053f, 1.0f, -0.5631667971611023f, -0.9562366008758545f,

1.0f, 0.6183391213417053f, 1.0f, -0.6460562348365784f, -0.9568508863449097f,

1.0f, 0.6183391213417053f, 1.0f, -0.5554963946342468f, -0.9837208390235901f,

1.0f, 0.6183391213417053f, 1.0f, -0.6700929999351501f, -0.9840363264083862f,
```

Coefficients of the 60 [Hz] notch filter in biquad (AKA second-order section, or "sos") form.

These coefficients were generated with the following Python code:


```
import numpy as np
from scipy import signal

fs = 200

sos_notch = signal.iirfilter(N=6, Wn=[59, 61], btype='bandstop', output='sos', fs=fs)
```

#### Note

CMSIS-DSP and Scipy use different formats for biquad filters. To convert the output to CMSIS-DSP format, the  $a_0$  coefficients were removed from each section, and the other denominator coefficients were negated.

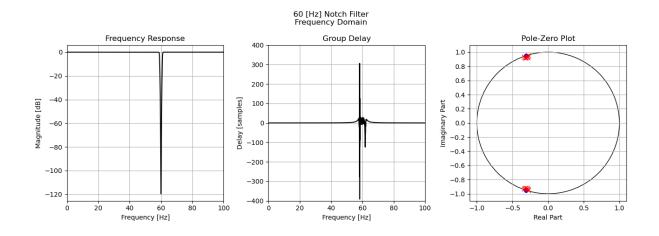

#### COEFFS\_BANDPASS

```
const float32_t COEFFS_BANDPASS[NUM_COEFFS_DAQ_BANDPASS] [static]
```

#### Initial value:

```
0.3240305185317993f, 0.3665695786476135f, 0.3240305185317993f, -0.20968256890773773f, -0.1729172021150589f,

1.0f, -0.4715292155742645f, 1.0f, 0.5868059992790222f, -0.7193671464920044f,

1.0f, -1.9999638795852661f, 1.0f, 1.9863483905792236f, -0.986438512802124f,

1.0f, -1.9997893571853638f, 1.0f, 1.994096040725708f, -0.9943605065345764f,
```

Coefficients of the bandpass filter in biquad (AKA second-order section, or "sos") form.

These coefficients were generated with the following Python code:

```
import numpy as np
from scipy import signal

fs = 200

sos_high = signal.iirfilter(N=4, Wn=0.5, btype="highpass", rs=10, ftype='cheby2', fs=fs, output='sos')
z_high, p_high, k_high = signal.sos2zpk(sos_high)


sos_low = signal.iirfilter(N=4, Wn=40, btype="lowpass", rs=10, ftype='cheby2', fs=fs, output='sos')
z_low, p_low, k_low = signal.sos2zpk(sos_low)

z_bandpass = np.concatenate([z_high, z_low])
p_bandpass = np.concatenate([p_high, p_low])
k_bandpass = k_high * k_low

sos_bandpass = signal.zpk2sos(z_bandpass, p_bandpass, k_bandpass)
```

#### Note

CMSIS-DSP and Scipy use different formats for biquad filters. To convert the output to CMSIS-DSP format, the  $a_0$  coefficients were removed from each section, and the other denominator coefficients were negated.

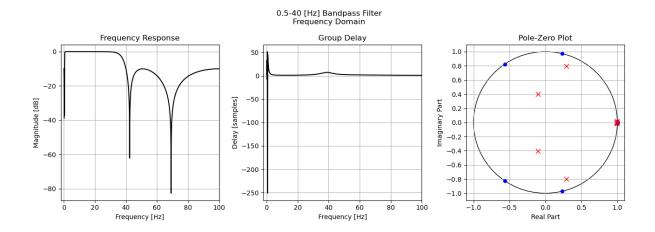

#### bandpassFiltStruct

```
const Filter_t bandpassFiltStruct [static]
Initial value:
```

#### 11.1.3 Liquid Crystal Display (LCD)

Module for displaying graphs on an LCD via the ILI9341 module.

#### **Files**

```
    file Font.c
        Contains bitmaps for a selection of ASCII characters.
    file LCD.c
        Source code for LCD module.
    file LCD.h
```

Header file for LCD module.

#### Macros

• #define CONVERT\_INT\_TO\_ASCII(X) ((unsigned char) (X + 0x30))

#### **Variables**

```
    const uint8_t *const FONT_ARRAY [128]

struct {
   uint16_t x1
      starting x-value in range [0, x2]
    uint16 t x2
      ending x-value in range [0, NUM_ROWS)
    uint16_t y1
      starting y-value in range [0, y2]
    uint16 t y2
      ending x-value in range [0, NUM_COLS)
    uint16 t lineNum
      line number for text; in range [0, NUM_LINES)
    uint16 t colNum
      column number for text; in range [0, NUM_COLS)
    uint8 t color
   bool islnit
      if true, LCD has been initialized
 \} lcd = \{ 0 \}

    const uint8_t *const FONT_ARRAY [128]
```

#### **Initialization & Configuration**

```
enum LCD_PLOT_INFO { LCD_X_MAX = ILI9341_NUM_ROWS - 1 , LCD_Y_MAX = ILI9341_NUM_COLS - 1 }
enum LCD_COLORS {
    LCD_BLACK = 0x00 ^ 0x07 , LCD_RED = 0x04 ^ 0x07 , LCD_GREEN = 0x02 ^ 0x07 , LCD_BLUE = 0x01 ^ 0x07 ,
    LCD_YELLOW = 0x06 ^ 0x07 , LCD_CYAN = 0x03 ^ 0x07 , LCD_PURPLE = 0x05 ^ 0x07 , LCD_WHITE = 0x07 ^ 0x07 }
void LCD_Init (void)
    Initialize the LCD.
void LCD_setOutputMode (bool isOn)
```

#### Writing

```
    enum LCD_WRITING_INFO { HEIGHT_CHAR = 8 , LEN_CHAR = 5 , NUM_LINES = 30 , NUM_COLS = 64 }
    void LCD_setCursor (uint16_t lineNum, uint16_t colNum)
        Set the cursor to line x, column y.
    void LCD_writeChar (unsigned char inputChar)
    void LCD_writeStr (void *asciiString)
    void LCD_writeInt (int32_t num)
    void LCD_writeFloat (float num)
```

# **ASCII Characters (Punctuation)**

```
static const uint8_t FONT_SPACE [8]
static const uint8_t FONT_PERIOD [8]
static const uint8_t FONT_COLON [8]
```

# **ASCII Characters (Numbers)**

```
static const uint8_t FONT_0 [8]
static const uint8_t FONT_1 [8]
static const uint8_t FONT_2 [8]
static const uint8_t FONT_3 [8]
static const uint8_t FONT_4 [8]
static const uint8_t FONT_5 [8]
static const uint8_t FONT_6 [8]
static const uint8_t FONT_7 [8]
static const uint8_t FONT_8 [8]
static const uint8_t FONT_9 [8]
```

# **ASCII Characters (Uppercase Letters)**

```
static const uint8_t FONT_UPPER_A [8]
static const uint8_t FONT_UPPER_B [8]
static const uint8_t FONT_UPPER_C [8]
static const uint8_t FONT_UPPER_D [8]
static const uint8_t FONT_UPPER_E [8]
static const uint8_t FONT_UPPER_F [8]
static const uint8_t FONT_UPPER_G [8]
static const uint8_t FONT_UPPER_H [8]
static const uint8_t FONT_UPPER_H [8]
static const uint8_t FONT_UPPER_J [8]
static const uint8_t FONT_UPPER_J [8]
static const uint8_t FONT_UPPER_J [8]
static const uint8_t FONT_UPPER_K [8]
```

- static const uint8\_t FONT\_UPPER\_L [8]
- static const uint8\_t FONT\_UPPER\_M [8]
- static const uint8\_t FONT\_UPPER\_N [8]
- static const uint8\_t FONT\_UPPER\_O [8]
- static const uint8\_t FONT\_UPPER\_P [8]
- static const uint8\_t FONT\_UPPER\_Q [8]
- static const uint8\_t FONT\_UPPER\_R [8]
- static const uint8\_t FONT\_UPPER\_S [8]
- static const uint8\_t FONT\_UPPER\_T [8]
- static const uint8\_t FONT\_UPPER\_U [8]
- static const uint8 t FONT UPPER V [8]
- static const uint8\_t FONT\_UPPER\_W [8]
- static const uint8\_t FONT\_UPPER\_X [8]
- static const uint8\_t FONT\_UPPER\_Y [8]
- static const uint8\_t FONT\_UPPER\_Z [8]

#### **ASCII Characters (Lowercase Letters)**

- static const uint8\_t FONT\_LOWER\_A [8]
- static const uint8 t FONT LOWER B [8]
- static const uint8\_t FONT\_LOWER\_C [8]
- static const uint8\_t FONT\_LOWER\_D [8]
- static const uint8 t FONT LOWER E [8]
- static const uint8\_t FONT\_LOWER\_F [8]
- static const uint8 t FONT LOWER G [8]
- static const uint8\_t FONT\_LOWER\_H [8]
- static const uint8 t FONT LOWER I [8]
- static const uint8 t FONT LOWER J [8]
- static const uint8\_t FONT\_LOWER\_K [8]
- static const uint8 t FONT LOWER L [8]
- static const uint8 t FONT LOWER M [8]
- static const uint8\_t FONT\_LOWER\_N [8]
- static const uint8\_t FONT\_LOWER\_O [8]
- static const uint8\_t FONT\_LOWER\_P [8]
- static const uint8 t FONT LOWER Q [8]
- static const uint8\_t FONT\_LOWER\_R [8]
- static const uint8\_t FONT\_LOWER\_S [8]
- static const uint8 t FONT LOWER T [8]
- static const uint8\_t FONT\_LOWER\_U [8]
- static const uint8\_t FONT\_LOWER\_V [8]
- static const uint8\_t FONT\_LOWER\_W [8]
- static const uint8 t FONT LOWER X [8]
- static const uint8\_t FONT\_LOWER\_Y [8]
- static const uint8\_t FONT\_LOWER\_Z [8]

#### **Helper Functions**

- static void LCD\_drawLine (uint16\_t center, uint16\_t lineWidth, bool is\_horizontal)
- static void LCD updateCursor (void)

Helper function for drawing straight lines.

Update the cursor for after writing text on the display.

#### **Drawing**

```
• void LCD_Draw (void)
```

Draw on the LCD.

void LCD\_Fill (void)

Fill the display with a single color.

void LCD\_drawHoriLine (uint16\_t yCenter, uint16\_t lineWidth)

Draw a horizontal line across the entire display.

void LCD\_drawVertLine (uint16\_t xCenter, uint16\_t lineWidth)

Draw a vertical line across the entire display.

• void LCD\_drawRectangle (uint16\_t x1, uint16\_t dx, uint16\_t y1, uint16\_t dy)

Draw a rectangle of size  $dx \times dy$  onto the display. The bottom-left corner will be located at (x1, y1).

void LCD\_plotSample (uint16\_t x, uint16\_t y, uint8\_t color)

Plot a sample at coordinates (x, y).

#### 11.1.3.1 Detailed Description

Module for displaying graphs on an LCD via the ILI9341 module.

#### 11.1.3.2 Function Documentation

#### LCD drawLine()

Helper function for drawing straight lines.

#### **Parameters**

center	Row or column that the line is centered on. center is increased or decreased if the line to be written would have gone out of bounds.	
lineWidth	Width of the line. Should be a positive, odd number.	
is_row	true for horizontal line, false for vertical line	

# LCD\_Init()

Initialize the LCD.

#### Postcondition

The display will be ready to accept commands, but output will be off.

# LCD\_setOutputMode()

```
void LCD_setOutputMode ( bool \ \textit{isOn} \ )
```

Toggle display output  $\mathtt{ON}$  or  $\mathtt{OFF}$  ( $\mathtt{OFF}$  by default).

#### **Parameters**

in <i>isOn</i>	true to turn display output ON, false to turn OFF
----------------	---

#### Postcondition

When OFF, the display is cleared. When ON, the IC writes pixel data from its memory to the display.

# LCD\_setX()

Set new x-coordinates to be written to.  $0 <= x1 <= x2 <= X_{MAX}$ .

#### **Parameters**

in	x1	left-most x-coordinate
in	x2	right-most x-coordinate

#### See also

```
LCD_setY()
```

# LCD\_setY()

```
void LCD_setY ( \label{eq:local_local_local} \mbox{uint16\_t } y1, \\ \mbox{uint16\_t } y2 \mbox{ )}
```

Set new y-coordinates to be written to.  $0 <= y1 <= y2 <= Y_{MAX}$ .

#### **Parameters**

in	y1	lowest y-coordinate
in	y2	highest y-coordinate

See also

```
LCD_setX()
```

# LCD\_setColor()

Set the color value.

#### **Parameters**

in	color	Color to use.
----	-------	---------------

#### Postcondition

Outgoing pixel data will use the selected color.

# LCD\_Draw()

```
void LCD_Draw (
          void )
```

Draw on the LCD.

### Precondition

Set the drawable area and the color to use for that area.

#### Postcondition

The selected areas of the display will be drawn onto with the selected color.

See also

```
LCD\_setX(),\,LCD\_setY(),\,LCD\_setColor()
```

References ILI9341\_writeMemCmd(), and ILI9341\_writePixel().

#### LCD\_Fill()

```
void LCD_Fill (
     void )
```

Fill the display with a single color.

#### Precondition

Select the desired color to fill the display with.

See also

```
LCD_setColor()
```

#### LCD\_drawHoriLine()

Draw a horizontal line across the entire display.

#### Precondition

Select the desired color to use for the line.

#### **Parameters**

i	n	yCenter	y-coordinate to center the line on
i	n	lineWidth	width of the line; should be a positive, odd number

#### See also

LCD\_drawVertLine, LCD\_drawRectangle()

# LCD\_drawVertLine()

Draw a vertical line across the entire display.

#### Precondition

Select the desired color to use for the line.

#### **Parameters**

in	xCenter	x-coordinate to center the line on
in	lineWidth	width of the line; should be a positive, odd number

#### See also

LCD\_drawHoriLine, LCD\_drawRectangle()

# LCD\_drawRectangle()

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

#### Precondition

Select the desired color to use for the rectangle.

# **Parameters**

in	x1	lowest (left-most) x-coordinate
in	dx	length (horizontal distance) of the rectangle
in	y1	lowest (bottom-most) y-coordinate
in	dy	height (vertical distance) of the rectangle

#### See also

```
LCD_Draw(), LCD_Fill(), LCD_drawHoriLine(), LCD_drawVertLine()
```

# LCD\_plotSample()

Plot a sample at coordinates (x, y).

#### **Parameters**

j	Ln	X	x-coordinate (i.e. sample number) in range [0, X_MAX]
i	Ln	У	y-coordinate (i.e. amplitude) in range [0, Y_MAX]
j	Ĺn	color	Color to use

#### See also

```
LCD_setX(), LCD_setY(), LCD_setColor(), LCD_Draw()
```

# LCD\_setCursor()

Set the cursor to line  $\boldsymbol{x},$  column  $\boldsymbol{y}.$ 

#### **Parameters**

in	lineNum	Line number to place characters. Should be in range [0, 30	).
in	colNum	Column number to place characters. Should be in range [0,	64).

# 11.1.3.3 Variable Documentation

# FONT\_SPACE

# FONT\_PERIOD

```
const uint8_t FONT_PERIOD[8] [static]
```

#### Initial value:

# FONT\_COLON

```
const uint8_t FONT_COLON[8] [static]
```

#### Initial value:

```
0x00,
0x04,
0x00,
0x00,
0x00,
0x04,
0x00,
0x00
```

# FONT\_0

```
const uint8_t FONT_0[8] [static]
```

# FONT\_1

# FONT\_3

```
const uint8_t FONT_3[8] [static]
```

#### Initial value:

```
0x0E,
0x11,
0x01,
0x06,
0x01,
0x11,
0x11,
0x0E
```

# FONT\_4

```
const uint8_t FONT_4[8] [static]
```

# FONT\_5

# FONT\_6

```
const uint8_t FONT_6[8] [static]
```

#### Initial value:

# FONT\_7

```
const uint8_t FONT_7[8] [static]
```

# Initial value:

# FONT\_8

```
const uint8_t FONT_8[8] [static]
```

# FONT\_9

```
const uint8_t FONT_9[8] [static]

Initial value:
= {
     0x0E,
     0x11,
     0x0I,
     0x0I,
     0x01,
     0x01,
     0x01,
     0x11,
     0x0E
```

# FONT\_UPPER\_A

```
const uint8_t FONT_UPPER_A[8] [static]
```

#### Initial value:

```
0x0E,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
```

# FONT\_UPPER\_B

```
const uint8_t FONT_UPPER_B[8] [static]
```

#### Initial value:

```
0x1E,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
```

# FONT\_UPPER\_C

```
const uint8_t FONT_UPPER_C[8] [static]
```

# FONT\_UPPER\_D

# FONT\_UPPER\_E

```
const uint8_t FONT_UPPER_E[8] [static]
```

#### Initial value:

# FONT\_UPPER\_F

```
const uint8_t FONT_UPPER_F[8] [static]
```

#### Initial value:

# FONT\_UPPER\_G

```
const uint8_t FONT_UPPER_G[8] [static]
```

# FONT\_UPPER\_H

# FONT\_UPPER\_I

```
const uint8_t FONT_UPPER_I[8] [static]
```

#### Initial value:

# FONT\_UPPER\_J

```
const uint8_t FONT_UPPER_J[8] [static]
```

#### Initial value:

# FONT\_UPPER\_K

```
const uint8_t FONT_UPPER_K[8] [static]
```

# FONT\_UPPER\_L

# FONT\_UPPER\_M

```
const uint8_t FONT_UPPER_M[8] [static]
```

#### Initial value:

# FONT\_UPPER\_N

```
const uint8_t FONT_UPPER_N[8] [static]
```

#### Initial value:

# FONT\_UPPER\_O

```
const uint8_t FONT_UPPER_O[8] [static]
```

# FONT\_UPPER\_P

# FONT\_UPPER\_Q

```
const uint8_t FONT_UPPER_Q[8] [static]
```

#### Initial value:

```
0x0E,
0x11,
0x11,
0x11,
0x15,
0x19,
0x16,
0x0D
```

# FONT\_UPPER\_R

```
const uint8_t FONT_UPPER_R[8] [static]
```

#### Initial value:

```
0x1E,
0x11,
0x11,
0x11,
0x11,
0x18,
0x14,
0x12,
0x11
```

# FONT\_UPPER\_S

```
const uint8_t FONT_UPPER_S[8] [static]
```

# FONT\_UPPER\_T

# FONT\_UPPER\_U

```
const uint8_t FONT_UPPER_U[8] [static]
```

### Initial value:

# FONT\_UPPER\_V

```
const uint8_t FONT_UPPER_V[8] [static]
```

### Initial value:

# FONT\_UPPER\_W

```
const uint8_t FONT_UPPER_W[8] [static]
```

```
0x11,
0x11,
0x11,
0x15,
0x15,
0x15,
0x18,
0x11,
```

# FONT\_UPPER\_X

# FONT\_UPPER\_Y

```
const uint8_t FONT_UPPER_Y[8] [static]
```

### Initial value:

# FONT\_UPPER\_Z

```
const uint8_t FONT_UPPER_Z[8] [static]
```

### Initial value:

# FONT\_LOWER\_A

```
const uint8_t FONT_LOWER_A[8] [static]
```

# FONT\_LOWER\_B

# FONT\_LOWER\_C

```
const uint8_t FONT_LOWER_C[8] [static]
```

### Initial value:

# FONT\_LOWER\_D

```
const uint8_t FONT_LOWER_D[8] [static]
```

### Initial value:

```
0x01,
0x01,
0x0F,
0x11,
0x11,
0x11,
0x0F,
0x00
```

# FONT\_LOWER\_E

```
const uint8_t FONT_LOWER_E[8] [static]
```

# FONT\_LOWER\_F

# FONT\_LOWER\_G

```
const uint8_t FONT_LOWER_G[8] [static]
```

### Initial value:

# FONT\_LOWER\_H

```
const uint8_t FONT_LOWER_H[8] [static]
```

### Initial value:

```
0x10,
0x10,
0x10,
0x1E,
0x11,
0x11,
0x11,
0x01
```

# FONT\_LOWER\_I

```
const uint8_t FONT_LOWER_I[8] [static]
```

# FONT\_LOWER\_J

# FONT\_LOWER\_K

```
const uint8_t FONT_LOWER_K[8] [static]
```

### Initial value:

```
0x10,
0x10,
0x10,
0x12,
0x14,
0x18,
0x14,
0x12,
0x00
```

# FONT\_LOWER\_L

```
const uint8_t FONT_LOWER_L[8] [static]
```

### Initial value:

# FONT\_LOWER\_M

```
const uint8_t FONT_LOWER_M[8] [static]
```

# FONT\_LOWER\_N

# FONT\_LOWER\_O

```
const uint8_t FONT_LOWER_O[8] [static]
```

### Initial value:

```
0x00,
0x00,
0x0E,
0x11,
0x11,
0x11,
0x0E,
0x00
```

# FONT\_LOWER\_P

```
const uint8_t FONT_LOWER_P[8] [static]
```

### Initial value:

# FONT\_LOWER\_Q

```
const uint8_t FONT_LOWER_Q[8] [static]
```

# FONT\_LOWER\_R

# FONT\_LOWER\_S

```
const uint8_t FONT_LOWER_S[8] [static]
```

### Initial value:

# FONT\_LOWER\_T

```
const uint8_t FONT_LOWER_T[8] [static]
```

### Initial value:

```
0x04,
0x04,
0x06,
0x04,
0x04,
0x04,
0x02,
0x00
```

# FONT\_LOWER\_U

```
const uint8_t FONT_LOWER_U[8] [static]
```

# FONT\_LOWER\_V

```
const uint8_t FONT_LOWER_V[8] [static]

Initial value:
= {
          0x00,
          0x11,
          0x11,
          0x11,
          0x00,
          0x04,
          0x004,
          0x000
}
```

# FONT\_LOWER\_W

```
const uint8_t FONT_LOWER_W[8] [static]
```

### Initial value:

```
0x00,
0x00,
0x11,
0x11,
0x15,
0x15,
0x0A,
0x00
```

# FONT\_LOWER\_X

```
const uint8_t FONT_LOWER_X[8] [static]
```

### Initial value:

# FONT\_LOWER\_Y

```
const uint8_t FONT_LOWER_Y[8] [static]
```

### FONT\_LOWER\_Z

#### 11.1.4 QRS Detector

Module for analyzing ECG data to determine heart rate.

#### **Files**

• file QRS.c

Source code for QRS detection module.

• file QRS.h

Header file for QRS detection module.

# Macros

- #define QRS\_NUM\_FID\_MARKS 40
- #define FLOAT\_COMPARE\_TOLERANCE (float32\_t)(1E-5f)
- #define IS\_GREATER(X, Y) (bool) ((X Y) > FLOAT\_COMPARE\_TOLERANCE)
- #define QRS\_SAMP\_FREQ ((uint32\_t) 200)
- #define QRS SAMP PERIOD SEC ((float32 t) 0.005f)
- #define QRS\_NUM\_SAMP ((uint16\_t) (1 << 11))

### **Variables**

```
    struct {
        bool isCalibrated
        float32_t signalLevel
            estimated signal level
        float32_t noiseLevel
        estimated noise level
        float32_t threshold
        amplitude threshold
        uint16_t fidMarkArray [QRS_NUM_FID_MARKS]
        float32_t utilityBuffer1 [QRS_NUM_FID_MARKS]
        array to hold fidMark indices
        float32_t utilityBuffer2 [QRS_NUM_FID_MARKS]
    } Detector = { false, 0.0f, 0.0f, 0.0f, { 0 }, { 0 }, { 0 }}
```

#### **Digital Filter Variables**

- enum DIGITAL\_FILTER\_PARAMS {
   NUM\_STAGES\_BANDPASS = 4 , NUM\_COEFF\_BANDPASS = NUM\_STAGES\_BANDPASS \* 5 , STATE ←
   \_BUFF\_SIZE\_BANDPASS = NUM\_STAGES\_BANDPASS \* 4 , NUM\_COEFF\_DERFILT = 5 ,
   BLOCK\_SIZE\_DERFILT = (1 << 8) , STATE\_BUFF\_SIZE\_DERFILT = NUM\_COEFF\_DERFILT + BLOCK ←</li>
   \_SIZE\_DERFILT 1 , NUM\_COEFF\_MOVAVG = 10 , BLOCK\_SIZE\_MOVAVG = BLOCK\_SIZE\_DERFILT ,
   STATE\_BUFF\_SIZE\_MOVAVG = NUM\_COEFF\_MOVAVG + BLOCK\_SIZE\_MOVAVG 1 }
- typedef arm\_biquad\_casd\_df1\_inst\_f32 IIR\_Filt\_t
- typedef arm fir instance f32 FIR Filt t
- static const float32 t COEFF BANDPASS [NUM COEFF BANDPASS]

Coefficients of the bandpass filter in biguad (AKA second-order section, or "sos") form.

static const float32 t COEFF DERFILT [NUM COEFF DERFILT]

Coefficients of the derivative filter, written in time-reversed order.

• static const float32\_t COEFF\_MOVAVG [NUM\_COEFF\_MOVAVG]

Coefficients of the moving average (AKA moving-window integration) filter.

- static float32\_t stateBuffer\_bandPass [STATE\_BUFF\_SIZE\_BANDPASS] = { 0 }
- static const IIR\_Filt\_t bandpassFiltStruct = { NUM\_STAGES\_BANDPASS, stateBuffer\_bandPass, COEFF\_BANDPASS}
- static const IIR Filt t \*const bandpassFilter = &bandpassFiltStruct
- static float32 t stateBuffer DerFilt [STATE BUFF SIZE DERFILT] = { 0 }
- static const FIR\_Filt\_t derivativeFiltStruct = { NUM\_COEFF\_DERFILT, stateBuffer\_DerFilt, COEFF\_DERFILT }
- static const FIR Filt t \*const derivativeFilter = &derivativeFiltStruct
- static float32 t stateBuffer MovingAvg [STATE BUFF SIZE MOVAVG] = { 0 }
- static const FIR\_Filt\_t movingAvgFiltStruct = { NUM\_COEFF\_MOVAVG, stateBuffer\_MovingAvg, COEFF\_MOVAVG}
- static const FIR Filt t \*const movingAverageFilter = &movingAvgFiltStruct

#### Implementation-specific Functions

- static uint8\_t findFiducialMarks (const float32\_t yn[], uint16\_t fidMarkArray[])
  - Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").
- static void initLevels (const float32\_t yn[], float32\_t \*sigLvlPtr, float32\_t \*noiseLvlPtr)

Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.

• static float32\_t updateLevel (const float32\_t peakAmplitude, float32\_t level)

Update the signal level (if a fiducial mark is a confirmed peak) or the noise level (if a fiducial mark is rejected).

• static float32\_t updateThreshold (const float32\_t signalLevel, const float32\_t noiseLevel)

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

### **Interface Functions**

void QRS Init (void)

Initialize the QRS detector.

void QRS\_Preprocess (const float32\_t xn[], float32\_t yn[])

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

float32\_t QRS\_applyDecisionRules (const float32\_t yn[])

Calculate the average heart rate (HR) using predetermined decision rules.

#### 11.1.4.1 Detailed Description

Module for analyzing ECG data to determine heart rate.

**Todo** Add heart rate variability (HRV) calculation.

#### 11.1.4.2 Function Documentation

#### findFiducialMarks()

Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").

#### **Parameters**

in	yn Array containing the preprocessed ECG signal $y[n]$	
in	fidMarkArray Array to place the fiducial mark's sample indices	
out	numMarks	Number of identified fiducial marks

#### Postcondition

fidMarkArray will hold the values of the fiducial marks.

The fiducial marks must be spaced apart by at least 200 [ms] (40 samples @ fs = 200 [Hz]). If a peak is found within this range, the one with the largest amplitude is taken to be the correct peak and the other is ignored.

### initLevels()

Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.

#### **Parameters**

	in	yn	Array containing the preprocessed ECG signal $y[\boldsymbol{n}]$	
Ī	in	sigLvlPtr Pointer to variable holding the signal level value		
Ī	in	n noiseLvIPtr Pointer to variable holding the noise level value		

#### Postcondition

The signal and noise levels are initialized.

### updateLevel()

Update the signal level (if a fiducial mark is a confirmed peak) or the noise level (if a fiducial mark is rejected).

#### **Parameters**

	in	peakAmplitude	Amplitude of the fiducial mark in signal $y[n]$
ſ	in	level	The current value of the signal level or noise level
ſ	out	newLevel	The updated value of the signal level or noise level

This function updates the signal level or noise level using the amplitude of a peak that was marked as a QRS candidate via the following equations:

```
signalLevel_1 = f(peakAmplitude, signalLevel_0) = \frac{1}{8}peakAmplitude + \frac{7}{8}signalLevel_0 noiseLevel_1 = f(peakAmplitude, noiseLevel_0) = \frac{1}{8}peakAmplitude + \frac{7}{8}noiseLevel_0
```

### updateThreshold()

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

#### **Parameters**

in	signalLevel	Current signal level.
in	noiseLevel	Current noise level.
out	threshold	New threshold to use for next comparison.

#### See also

```
QRS_updateLevel(), QRS_applyDecisionRules
```

```
threshold = f(signalLevel, noiseLevel) = noiseLevel + 0.25(signalLevel - noiseLevel)
```

#### QRS\_Init()

```
void QRS_Init (
     void )
```

Initialize the QRS detector.

Note

This function isn't necessary anymore, but I'm keeping it here just in case.

This function originally initialized the filter structs but now does nothing since those have been made const and their initialization functions have been removed entirely.

# QRS\_Preprocess()

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

### Precondition

Fill input buffer xn with raw or lightly preprocessed ECG data.

#### **Parameters**

in	xn	Array of raw ECG signal values.
in	yn	Array used to store preprocessed ECG signal values.


#### Postcondition


The preprocessed signal data y[n] is stored in yn and is ready to be analyzed to calculate the heart rate in [bpm].

### See also

### QRS\_applyDecisionRules()

This function uses the same overall preprocessing pipeline as the original Pan-Tompkins algorithm, but the high-pass and low-pass filters have been replaced with ones generated using Scipy.

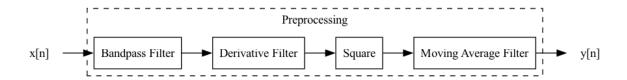

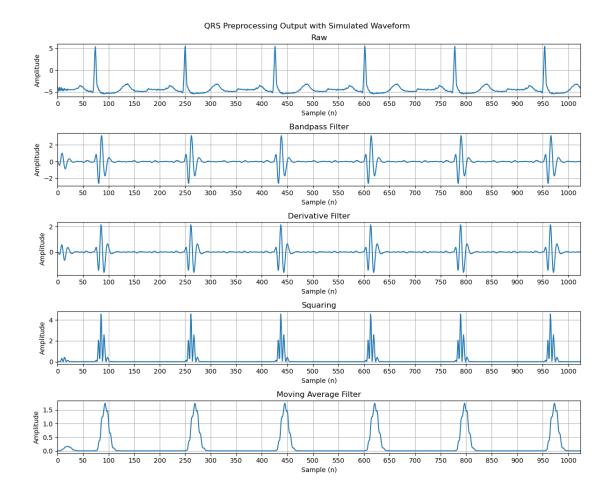

#### Note

The FIR filters are applied in blocks to decrease the amount of memory needed for their state buffers.

# QRS\_applyDecisionRules()

```
float32_t QRS_applyDecisionRules ( {\tt const\ float32\_t\ yn[]\ )}
```

Calculate the average heart rate (HR) using predetermined decision rules.

# Precondition

Preprocess the raw ECG data.

### **Parameters**

in	yn	Array of preprocessed ECG signal values.
out	heartRate	Average heart rate in [bpm].

#### Postcondition

Certain information (signal/noise levels, thresholds, etc.) is retained between calls and used to improve further detection.

**Bug** The current implementation processes one block of data at a time and discards the entire block immediately after. As a result, QRS complexes that are cutoff between one block and another are not being counted.

#### See also

```
QRS_Preprocess()
```

Todo Write implementation explanation

#### 11.1.4.3 Variable Documentation

### COEFF\_BANDPASS

```
const float32_t COEFF_BANDPASS[NUM_COEFF_BANDPASS] [static]

Initial value:
= {
      0.002937758108600974f, 0.005875516217201948f, 0.002937758108600974f,
      1.0485996007919312f, -0.2961403429508209f,

      1.0f, 2.0f, 1.0f,
      1.3876197338104248f, -0.492422878742218f,

      1.0f, -2.0f, 1.0f,
      1.3209134340286255f, -0.6327387690544128f,

      1.0f, -2.0f, 1.0f,
      1.6299355030059814f, -0.7530401945114136f,
```

Coefficients of the bandpass filter in biquad (AKA second-order section, or "sos") form.

These coefficients were generated with the following Python code:

```
import numpy as np
from scipy import signal

fs = 200

sos_high = signal.iirfilter(N=4, Wn=12, btype='highpass', output='sos', fs=fs)
z_high, p_high, k_high = signal.sos2zpk(sos_high)


sos_low = signal.iirfilter(N=4, Wn=20, btype='lowpass', output='sos', fs=fs)
z_low, p_low, k_low = signal.sos2zpk(sos_low)

z_bpf = np.concatenate([z_high, z_low])
p_bpf = np.concatenate([p_high, p_low])
k_bpf = k_high * k_low

sos_bpf = signal.zpk2sos(z_bpf, p_bpf, k_bpf)
```

Note

CMSIS-DSP and Scipy use different formats for biquad filters. To convert output variable  $sos\_bpf$  to CMSIS-DSP format, the  $a_0$  coefficients were removed from each section, and the other denominator coefficients were negated.

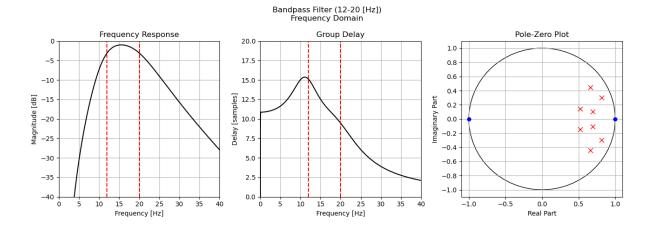


### COEFF DERFILT

```
const float32_t COEFF_DERFILT[NUM_COEFF_DERFILT] [static]
```

### Initial value:

```
= {
    -0.125f, -0.25f, 0.0f, 0.25f, 0.125f
```

Coefficients of the derivative filter, written in time-reversed order.

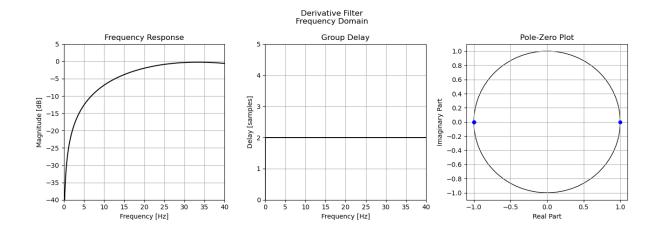


### COEFF\_MOVAVG

```
const float32_t COEFF_MOVAVG[NUM_COEFF_MOVAVG] [static]
```

#### Initial value:

Coefficients of the moving average (AKA moving-window integration) filter.

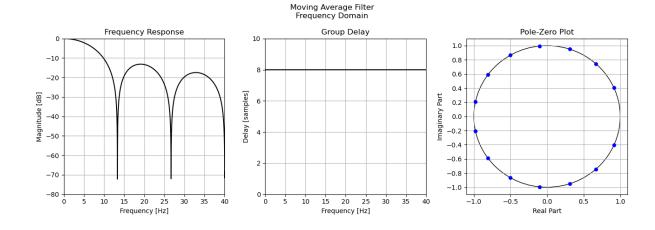

#### 11.1.5 Main

Main program file.

### Files

• file main.c

Main program file.

#### **Enumerations**

- enum ISR\_VECTOR\_NUMS { DAQ\_VECTOR\_NUM = INT\_ADC0SS3 , PROC\_VECTOR\_NUM = INT\_CAN0 , LCD VECTOR NUM = INT TIMER1A }
- enum FIFO\_INFO {
   DAQ\_FIFO\_CAP = 3 , DAQ\_ARRAY\_LEN = DAQ\_FIFO\_CAP + 1 , QRS\_FIFO\_CAP = QRS\_NUM\_SAMP ,
   QRS\_ARRAY\_LEN = QRS\_FIFO\_CAP + 1 ,
   LCD\_FIFO\_1\_CAP = DAQ\_FIFO\_CAP , LCD\_ARRAY\_1\_LEN = LCD\_FIFO\_1\_CAP + 1 , LCD\_FIFO\_2\_CAP
   = 1 , LCD\_ARRAY\_2\_LEN = LCD\_FIFO\_2\_CAP + 1 }
- enum LCD\_INFO {
   LCD\_TOP\_LINE = (LCD\_Y\_MAX 24) , LCD\_WAVE\_NUM\_Y = LCD\_TOP\_LINE , LCD\_WAVE\_X\_OFFSET
   = 0 , LCD\_WAVE\_Y\_MIN = (0 + LCD\_WAVE\_X\_OFFSET) ,
   LCD\_WAVE\_Y\_MAX = (LCD\_WAVE\_NUM\_Y + LCD\_WAVE\_X\_OFFSET) , LCD\_TEXT\_LINE\_NUM = 28 ,
   LCD\_TEXT\_COL\_NUM = 24 }

#### **Functions**

static void DAQ\_Handler (void)

ISR for the data acquisition system.

static void Processing\_Handler (void)

ISR for intermediate processing of the input data.

• static void LCD\_Handler (void)

ISR for plotting the waveform and outputting the heart rate to the LCD.

• int main (void)

Main function for the project.

#### **Variables**

- static volatile Fifo\_t DAQ\_Fifo = 0
- static volatile uint32\_t **DAQ\_fifoBuffer** [DAQ\_ARRAY\_LEN] = { 0 }
- static volatile Fifo t QRS\_Fifo = 0
- static volatile uint32\_t QRS\_fifoBuffer [QRS\_ARRAY\_LEN] = { 0 }
- static volatile Fifo\_t LCD\_Fifo1 = 0
- static volatile uint32\_t LCD\_fifoBuffer1 [LCD\_ARRAY\_1\_LEN] = { 0 }
- static volatile Fifo\_t LCD\_Fifo2 = 0
- static volatile uint32\_t LCD\_fifoBuffer2 [LCD\_ARRAY\_2\_LEN] = { 0 }
- static volatile bool qrsBufferIsFuII = false

flag for QRS detection to start

static volatile bool heartRateIsReady = false

flag for LCD to output heart rate

- static float32\_t QRS\_processingBuffer [QRS\_ARRAY\_LEN] = { 0 }
- static uint16\_t LCD\_prevSampleBuffer [LCD\_X\_MAX] = { 0 }

# 11.1.5.1 Detailed Description

Main program file.

## 11.1.5.2 Enumeration Type Documentation

### ISR\_VECTOR\_NUMS

enum ISR\_VECTOR\_NUMS

#### **Enumerator**

DAQ_VECTOR_NUM	vector number for the DAQ_Handler()	
PROC_VECTOR_NUM	vector number for the Processing_Handler()	
LCD_VECTOR_NUM	vector number for the LCD_Handler()	

### FIFO\_INFO

enum FIFO\_INFO

#### Enumerator

DAQ_FIFO_CAP	capacity of DAQ's FIFO buffer
DAQ_ARRAY_LEN	actual size of underlying array
QRS_FIFO_CAP	capacity of QRS detector's FIFO buffer
QRS_ARRAY_LEN	actual size of underlying array
LCD_FIFO_1_CAP	capacity of LCD's waveform FIFO buffer
LCD_ARRAY_1_LEN	actual size of underlying array
LCD_FIFO_2_CAP	capacity of LCD's heart rate FIFO buffer
LCD_ARRAY_2_LEN	actual size of underlying array

# LCD\_INFO

```
enum LCD_INFO
```

#### Enumerator

LCD_TOP_LINE	separates wavefrom from text
LCD_WAVE_NUM_Y	num. of y-vals available for plotting waveform
LCD_WAVE_X_OFFSET	waveform's offset from X axis
LCD_WAVE_Y_MIN	waveform's min y-value
LCD_WAVE_Y_MAX	waveform's max y-value
LCD_TEXT_LINE_NUM	line num. of text
LCD_TEXT_COL_NUM	starting col. num. for heart rate

# 11.1.5.3 Function Documentation

### DAQ\_Handler()

ISR for the data acquisition system.

This ISR has a priority level of 1, is triggered when the ADC has finished capturing a sample, and also triggers the intermediate processing handler. It reads the 12-bit ADC output, converts it from an integer to a raw voltage sample, and sends it to the processing ISR via the DAQ\_Fifo.

#### Precondition

Initialize the DAQ module.

### Postcondition

The converted sample is placed in the DAQ FIFO, and the processing ISR is triggered.

See also

DAQ\_Init(), Processing\_Handler()

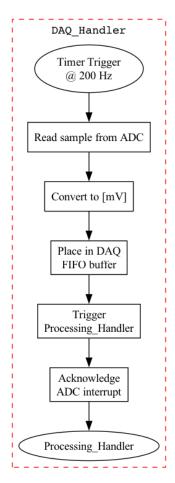


Figure 3 Flowchart for the DAQ handler.

### Processing\_Handler()

ISR for intermediate processing of the input data.

This ISR has a priority level of 1, is triggered by the DAQ ISR, and triggers the LCD handler. It removes baseline drift and power line interference (PLI) from a sample, and then moves it to the QRS\_Fifo and the LCD\_Fifo. It also notifies the superloop in main() when the QRS buffer is full.

### Postcondition

The converted sample is placed in the LCD FIFO, and the LCD ISR is triggered.

The converted sample is placed in the QRS FIFO, and the flag is set.

#### See also

# DAQ\_Handler(), main(), LCD\_Handler()

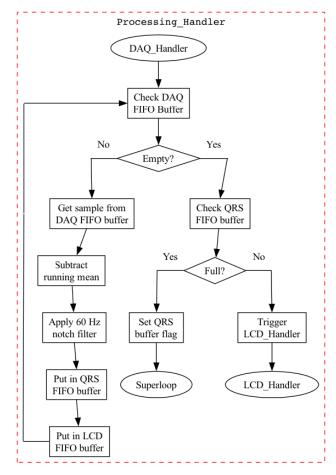


Figure 4 Flowchart for the processing handler.

### LCD\_Handler()

ISR for plotting the waveform and outputting the heart rate to the LCD.

This ISR has a priority level of 1 and is triggered by the Processing ISR. It applies a 0.5-40 [Hz] bandpass filter to the sample and plots it. It also outputs the heart rate.

#### Precondition

Initialize the LCD module.

# Postcondition

The bandpass-filtered sample is plotted to the LCD.

The heart rate is updated after each block is analyzed.

See also

LCD\_Init(), Processing\_Handler(), main()

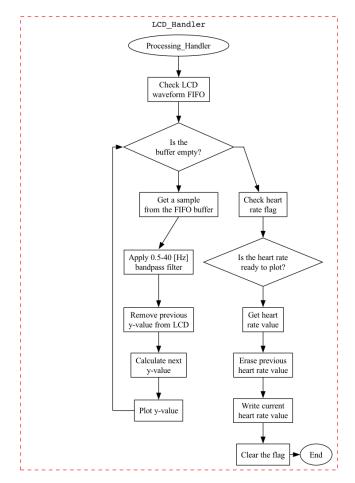


Figure 5 Flowchart for the LCD handler.

### main()

```
int main (
     void )
```

Main function for the project.

Moves the interrupt vector table to RAM; configures and enables the ISRs; initializes all modules and static variables; and performs QRS detection once the buffer has been filled.




Figure 6 Flowchart for the initialization phase.


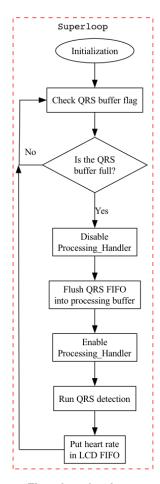


Figure 7 Flowchart for the superloop.

Here is the call graph for this function:

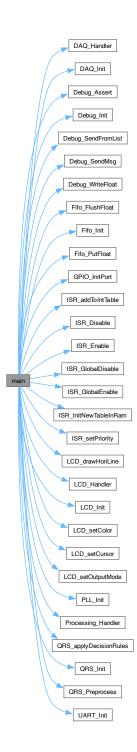


# 11.2 Common

Modules that are used by multiple layers and/or don't fit into any one layer.

11.2 Common 61

Collaboration diagram for Common:



#### **Modules**

• FIFO Buffers

Module for using the "first-in first-out (FIFO) buffer" data structure.

NewAssert

Module for using a custom assert implementation.

#### **Files**

• file NewAssert.c

Source code for custom assert implementation.

• file NewAssert.h

Header file for custom assert implementation.

#### **Functions**

• void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

# 11.2.1 Detailed Description

Modules that are used by multiple layers and/or don't fit into any one layer.

#### 11.2.2 Function Documentation

### Assert()

```
void Assert (
          bool condition )
```

Custom assert implementation that is more lightweight than the one from newlib.

#### **Parameters**

in condition	Conditional to test.
--------------	----------------------

### Postcondition

```
If condition == true, the function simply returns.
If condition == false, a breakpoint is initiated.
```

#### 11.2.3 FIFO Buffers

Module for using the "first-in first-out (FIFO) buffer" data structure.

### Files

• file Fifo.c

Source code for FIFO buffer module.

• file Fifo.h

Header file for FIFO buffer implementation.

### **Data Structures**

• struct Fifo\_t

## Macros

• #define FIFO\_POOL\_SIZE 5

### **Functions**

```
    Fifo_t Fifo_Init (volatile uint32_t buffer[], const uint32_t N)
    Initialize a FIFO buffer of length N.
```

• void Fifo\_Reset (volatile Fifo\_t fifo)

Reset the FIFO buffer.

### **Variables**

```
    static FifoStruct_t fifoPool [FIFO_POOL_SIZE] = { 0 }
    pre-allocated pool
```

• static uint8\_t numFreeFifos = FIFO\_POOL\_SIZE

11.2 Common 63

### **Basic Operations**

```
    void Fifo_Put (volatile Fifo_t fifo, const uint32_t val)
```

Add a value to the end of the buffer.

uint32\_t Fifo\_Get (volatile Fifo\_t fifo)

Remove the first value of the buffer.

void Fifo\_Flush (volatile Fifo\_t fifo, uint32\_t outputBuffer[])

Empty the FIFO buffer's contents into an array.

void Fifo\_PutFloat (volatile Fifo\_t fifo, const float val)

Add a floating-point value to the end of the buffer.

• float Fifo\_GetFloat (volatile Fifo\_t fifo)

Remove the first value of the buffer, and cast it to float.

void Fifo\_FlushFloat (volatile Fifo\_t fifo, float outputBuffer[])

Empty the FIFO buffer into an array of floating-point values.

#### **Peeking**

• uint32\_t Fifo\_PeekOne (volatile Fifo\_t fifo)

See the first element in the FIFO without removing it.

void Fifo\_PeekAll (volatile Fifo\_t fifo, uint32\_t outputBuffer[])

See the FIFO buffer's contents without removing them.

#### **Status Checks**

• bool Fifo\_isFull (volatile Fifo\_t fifo)

Check if the FIFO buffer is full.

bool Fifo\_isEmpty (volatile Fifo\_t fifo)

Check if the FIFO buffer is empty.

• uint32\_t Fifo\_getCurrSize (volatile Fifo\_t fifo)

Get the current size of the FIFO buffer.

## 11.2.3.1 Detailed Description

Module for using the "first-in first-out (FIFO) buffer" data structure.

#### 11.2.3.2 Function Documentation

### Fifo\_Init()

Initialize a FIFO buffer of length N.

#### **Parameters**

in	buffer	Array of size ${\tt N}$ to be used as FIFO buffer
in	N	Length of buffer. Usable length is ${\tt N}-{\tt 1}.$
Generated b	y Doxygen	pointer to the FIFO buffer

### Postcondition

The number of available FIFO buffers is reduced by 1.

# Fifo\_Reset()

Reset the FIFO buffer.

### **Parameters**

in	fifo	Pointer to FIFO buffer.
711	1110	i diritor to i ii O bullor.

### Postcondition

The FIFO is now considered empty. The underlying buffer's contents are not affected.

# Fifo\_Put()

Add a value to the end of the buffer.

#### **Parameters**

in	fifo	Pointer to FIFO object
in	val	Value to add to the buffer.

### Postcondition

If the FIFO is not full, val is placed in the buffer. If the FIFO is full, nothing happens.

## See also

Fifo\_PutFloat()

# Fifo\_Get()

Remove the first value of the buffer.

11.2 Common 65

#### **Parameters**

in	fifo	Pointer to FIFO object
out	val	First sample in the FIFO.

### Postcondition

If the FIFO is not empty, the next value is returned. If the FIFO is empty, 0 is returned.

### See also

Fifo\_GetFloat()

### Fifo\_Flush()

Empty the FIFO buffer's contents into an array.

#### **Parameters**

in	fifo	Pointer to source FIFO buffer.
in	outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.

## Postcondition

The FIFO buffer's contents are transferred to the output buffer.

### See also

Fifo\_FlushFloat()

# Fifo\_PutFloat()

Add a floating-point value to the end of the buffer.

#### **Parameters**

in	fifo	Pointer to FIFO object
in	val	Value to add to the buffer.

### Postcondition

If the FIFO is not full, val is placed in the buffer. If the FIFO is full, nothing happens.

#### Note

This was added to avoid needing to type-pun floating-point values.

```
// type-punning example
float num = 4.252603;
Fifo_Put(fifo, *((uint32_t *) &num));
Fifo_PutFloat(fifo, num); // same thing, but cleaner
```

#### See also

```
Fifo_Put()
```

#### Remarks

To properly use floating-point values, type-punning is necessary.

# Fifo\_GetFloat()

Remove the first value of the buffer, and cast it to float.

#### **Parameters**

in	fifo	Pointer to FIFO object
out	val	First sample in the FIFO.

### Postcondition

If the FIFO is not empty, the next value is returned. If the FIFO is empty, 0 is returned.

#### Note

This was added to avoid needing to type-pun floating-point values.

```
// type-punning example
float num;
*((uint32_t *) &num) = Fifo_Get(fifo);
num = Fifo_GetFloat(fifo);
```

#### See also

```
Fifo_Get()
```

### Remarks

To properly use floating-point values, type-punning is necessary.

11.2 Common 67

#### Fifo\_FlushFloat()

Empty the FIFO buffer into an array of floating-point values.

#### **Parameters**

in	fifo	Pointer to source FIFO buffer.
in	outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.

#### Postcondition

The FIFO buffer's contents are transferred to the output buffer.

#### Note

This was added to avoid needing to type-pun floating-point values.

```
// type-punning example
Fifo_Flush(fifo, (uint32_t *) outputBuffer);
Fifo_FlushFloat(fifo, outputBuffer); // same thing, but cleaner
```

#### See also

```
Fifo_Flush()
```

# Fifo\_PeekOne()

See the first element in the FIFO without removing it.

#### **Parameters**

in	fifo	Pointer to FIFO object
out	val	First sample in the FIFO.

# Fifo\_PeekAll()

See the FIFO buffer's contents without removing them.

### **Parameters**

in	fifo	Pointer to source FIFO buffer.
in	outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.

# Postcondition

The FIFO buffer's contents are copied to the output buffer.

# Fifo\_isFull()

Check if the FIFO buffer is full.

#### **Parameters**

in	fifo	Pointer to the FIFO buffer.
out	true	The FIFO buffer is full.
out	false	The FIFO buffer is not full.

# Fifo\_isEmpty()

Check if the FIFO buffer is empty.

# **Parameters**

in	fifo	Pointer to the FIFO buffer.
out	true	The FIFO buffer is empty.
out	false	The FIFO buffer is not empty.

# Fifo\_getCurrSize()

Get the current size of the FIFO buffer.

### **Parameters**

in	fifo	Pointer to the FIFO buffer.
out	size	Current number of values in the FIFO buffer.

11.3 Middleware 69

#### 11.2.4 NewAssert


 $\label{eq:module for using a custom} \ \texttt{assert implementation}.$ 

Module for using a custom assert implementation.

# 11.3 Middleware

High-level device driver modules.

Collaboration diagram for Middleware:

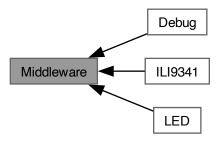

# Modules

Debug

Module for debugging functions, including serial output and assertions.

• ILI9341

Functions for interfacing an ILI9341-based 240RGBx320 LCD via Serial Peripheral Interface (SPI).

• LED

Functions for driving light-emitting diodes (LEDs) via General-Purpose Input/Output (GPIO).

### 11.3.1 Detailed Description

High-level device driver modules.

These modules contain functions for interfacing with external devices/peripherals using low-level drivers.

## 11.3.2 Debug

Module for debugging functions, including serial output and assertions.

#### **Files**

· file Debug.c

Source code for Debug module.

· file Debug.h

Header file for Debug module.

#### **Variables**

• static Uart\_t debugUart = 0

### **Serial Output**

- enum Msg\_t { DEBUG\_DAQ\_INIT , DEBUG\_QRS\_INIT , DEBUG\_LCD\_INIT , DEBUG\_QRS\_START }
- void Debug\_SendMsg (void \*message)

Send a message to the serial port.

• void Debug\_SendFromList (Msg\_t msg)

Send a message from the message list.

void Debug\_WriteFloat (double value)

Write a floating-point value to the serial port.

#### Initialization

void Debug\_Init (Uart\_t uart)
 Initialize the Debug module.

#### **Assertions**

void Debug\_Assert (bool condition)

Stops program if condition is true. Useful for bug detection during debugging.

# 11.3.2.1 Detailed Description

Module for debugging functions, including serial output and assertions.

#### 11.3.2.2 Function Documentation

### Debug\_Init()

Initialize the Debug module.

### Precondition

Initialize the UART.

11.3 Middleware 71

#### **Parameters**

in uart UART to use for serial output.
--

### Postcondition

An initialization message is sent to the serial port.

See also

```
UART_Init()
```

# Debug\_SendMsg()

```
void Debug_SendMsg (
     void * message )
```

Send a message to the serial port.

# Precondition

Initialize the Debug module.

#### **Parameters**

```
message (Pointer to) array of ASCII characters.
```

#### Postcondition

A floating point value is written to the serial port.

See also

Debug\_SendMsg()

# Debug\_SendFromList()

Send a message from the message list.

## Precondition

Initialize the Debug module.

## **Parameters**

in <i>msg</i> An entry from the	enumeration.
---------------------------------	--------------

## Postcondition

The corresponding message is sent to the serial port.

#### See also

Debug\_SendMsg()

# Debug\_WriteFloat()

Write a floating-point value to the serial port.

# Precondition

Initialize the Debug module.

#### **Parameters**

in	value	Floating-point value.
----	-------	-----------------------

## Postcondition

A floating point value is written to the serial port.

#### See also

Debug\_SendMsg()

# Debug\_Assert()

```
void Debug_Assert (
          bool condition )
```

Stops program if condition is true. Useful for bug detection during debugging.

## Precondition

Initialize the Debug module.

#### **Parameters**

in	condition	Conditional statement to evaluate.	
----	-----------	------------------------------------	--

#### **Postcondition**

If condition == true, the program continues normally. If condition == false, a message is sent and a breakpoint is activated.

#### 11.3.3 ILI9341

Functions for interfacing an ILI9341-based 240RGBx320 LCD via Serial Peripheral Interface (SPI).

#### **Files**

file ILI9341.c

Source code for ILI9341 module.

file ILI9341.h

Driver module for interfacing with an ILI9341 LCD driver.

#### **Enumerations**

```
enum { ILI9341_NUM_COLS = 240 , ILI9341_NUM_ROWS = 320 }
enum Cmd_t {
    NOP = 0x00 , SWRESET = 0x01 , SPLIN = 0x10 , SPLOUT = 0x11 ,
    PTLON = 0x12 , NORON = 0x13 , DINVOFF = 0x20 , DINVON = 0x21 ,
    CASET = 0x2A , PASET = 0x2B , RAMWR = 0x2C , DISPOFF = 0x28 ,
    DISPON = 0x29 , PLTAR = 0x30 , VSCRDEF = 0x33 , MADCTL = 0x36 ,
    VSCRSADD = 0x37 , IDMOFF = 0x38 , IDMON = 0x39 , PIXSET = 0x3A ,
    FRMCTR1 = 0xB1 , FRMCTR2 = 0xB2 , FRMCTR3 = 0xB3 , PRCTR = 0xB5 ,
    IFCTL = 0xF6 }
enum sleepMode_t { SLEEP_ON = SPLIN , SLEEP_OFF = SPLOUT }
enum displayArea_t { NORMAL_AREA = NORON , PARTIAL_AREA = PTLON }
enum colorExpr_t { FULL_COLORS = IDMOFF , PARTIAL_COLORS = IDMON }
enum invertMode_t { INVERT_ON = DINVON , INVERT_OFF = DINVOFF }
enum outputMode_t { OUTPUT_ON = DISPON , OUTPUT_OFF = DISPOFF }
enum colorDepth t { COLORDEPTH_16BIT = 0x55 , COLORDEPTH_18BIT = 0x66 }
```

# **Functions**

```
    static void ILI9341_setMode (uint8_t param)
```

- static void ILI9341\_setAddress (uint16\_t start\_address, uint16\_t end\_address, bool is\_row)
- static void ILI9341\_sendParams (Cmd\_t cmd)

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

void ILI9341\_Init (GpioPort\_t resetPinPort, GpioPin\_t resetPin, Spi\_t spi, Timer\_t timer)

Initialize the LCD driver.

· void ILI9341 setInterface (void)

Sets the interface for the ILI9341.

void ILI9341\_resetHard (Timer\_t timer)

```
Perform a hardware reset of the LCD driver.

    void ILI9341 resetSoft (Timer t timer)

     Perform a software reset of the LCD driver.

    void ILI9341 setSleepMode (sleepMode t sleepMode, Timer t timer)

     Enter or exit sleep mode (ON by default).

    void ILI9341_setDisplayArea (displayArea_t displayArea)

     Set the display area.

    void ILI9341_setColorExpression (colorExpr_t colorExpr)

      Set the color expression (FULL_COLORS by default).

    void ILI9341_setPartialArea (uint16_t rowStart, uint16_t rowEnd)

      Set the display area for partial mode. Call before activating partial mode.

    void ILI9341 setDispInversion (invertMode t invertMode)

      Toggle display inversion (OFF by default).

    void ILI9341 setDispOutput (outputMode t outputMode)

      Change whether the IC is outputting to the display for not.

    void ILI9341_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols

  Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)
     Set how data is converted from memory to display.
• void ILI9341_setColorDepth (colorDepth_t colorDepth)
      Set the color depth for the display.

    void ILI9341 setFrameRate (uint8 t divisionRatio, uint8 t clocksPerLine)

      TODO: Write brief.

    void ILI9341 setRowAddress (uint16 t startRow, uint16 t endRow)

     Sets the start/end rows to be written to.

    void ILI9341_setColAddress (uint16_t startCol, uint16_t endCol)

     Sets the start/end columns to be written to.

    void ILI9341_writeMemCmd (void)

      Signal to the driver that pixel data is incoming and should be written to memory.
• void ILI9341 writePixel (uint8 t red, uint8 t green, uint8 t blue)
     Write a single pixel to frame memory.
• static uint32 t ILI9341 Buffer [8]
```

# **Variables**

```
· static Fifo t ILI9341 Fifo
struct {
    sleepMode t sleepMode
    displayArea t displayArea
   colorExpr_t colorExpression
   invertMode_t invertMode
    outputMode t outputMode
   colorDepth t colorDepth
   volatile uint32 t * resetPinDataRegister
    GpioPin t resetPin
    Spi t spi
    bool islnit
 } ili9341
```

# 11.3.3.1 Detailed Description

Functions for interfacing an ILI9341-based 240RGBx320 LCD via Serial Peripheral Interface (SPI).

# 11.3.3.2 Enumeration Type Documentation

# anonymous enum

anonymous enum

# Enumerator

ILI9341_NUM_COLS		
	11.3.3.3	of columns available on the display
ILI9341_NUM_ROWS		
	11.3.3.4	of rows available on the display

# $Cmd\_t$

enum Cmd\_t

# Enumerator

NOP	No Operation.	
SWRESET	Software Reset.	
SPLIN	Enter Sleep Mode.	
SPLOUT	Sleep Out (i.e. Exit Sleep Mode)	
PTLON	Partial Display Mode ON.	
NORON	Normal Display Mode ON.	
DINVOFF	Display Inversion OFF.	
DINVON	Display Inversion ON.	
CASET	Column Address Set.	
PASET	Page Address Set.	
RAMWR	Memory Write.	
DISPOFF	Display OFF.	
DISPON	Display ON.	
PLTAR	Partial Area.	
VSCRDEF	Vertical Scrolling Definition.	
MADCTL	Memory Access Control.	
VSCRSADD	Vertical Scrolling Start Address.	
IDMOFF	Idle Mode OFF.	
IDMON	Idle Mode ON.	
PIXSET	Pixel Format Set.	
FRMCTR1	Frame Rate Control Set (Normal Mode)	
FRMCTR2	Frame Rate Control Set (Idle Mode)	
FRMCTR3	Frame Rate Control Set (Partial Mode)	
PRCTR	Blanking Porch Control.	
IFCTL	Interface Control.	

#### 11.3.3.5 Function Documentation

#### ILI9341 setMode()

This function simply groups each of the configuration functions into one to reduce code duplication.

#### ILI9341\_setAddress()

This function implements the "Column Address Set" (CASET) and "Page Address Set" (PASET) commands from p. 110-113 of the ILI9341 datasheet.

The input parameters represent the first and last addresses to be written to when  ${\tt ILI9341\_writePixel}$  () is called.

To work correctly, startAddress must be no greater than endAddress, and endAddress cannot be greater than the max number of rows/columns.

# ILI9341\_sendParams()

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

#### **Parameters**

```
in cmd Command to send.
```

## ILI9341\_Init()

Initialize the LCD driver.

# Precondition

Initialize the GPIO port.

Initialize the SPI module.

Initialize the Timer.

#### **Parameters**

in	resetPinPort	The GPIO port that the ${\tt RESET}$ pin belongs to.		
in	resetPin	The GPIO pin used as the RESET pin.		
in	spi	The SPI module to use for communication.		
in	timer	The hardware timer to use during initialization.		

## Postcondition

The RESET is configured as a digital OUTPUT pin.

The SPI is configured and enabled.

The LCD driver is initialized and ready to accept commands.

#### See also

```
GPIO_InitPort(), SPI_Init(), Timer_Init()
```

# ILI9341\_setInterface()

Sets the interface for the ILI9341.

The parameters for this command are hard-coded, so it only needs to be called once upon initialization.

This function implements the "Interface Control" (IFCTL) command from p. 192-194 of the ILI9341 datasheet, which controls how the LCD driver handles 16-bit data and what interfaces (internal or external) are used.

Name	Bit #	Param #	Param # Effect when set = 1		
MY_EOR	7		flips value of corresponding MADCTL bit		
MX_EOR	6		flips value of corresponding MADCTL bit		
MV_EOR	5	0	flips value of corresponding MADCTL bit		
BGR_EOR	3		flips value of corresponding MADCTL bit		
WEMODE	0		overflowing pixel data is not ignored		
EPF[1:0]	5:4	1	controls 16 to 18-bit pixel data conversion		
MDT[1:0]	1:0	<b>'</b>	controls display data transfer method		
ENDIAN	5		host sends LSB first		
DM[1:0]	3:2	2	selects display operation mode		
RM	1	_	selects GRAM interface mode		
RIM	0		specifies RGB interface-specific details		

The first param's bits are cleared so that the corresponding MADCTL bits (ILI9341\_setMemoryAccessCtrl()) are unaffected and overflowing pixel data is ignored. The EPF bits are cleared so that the LSB of the R and B values is copied from the MSB when using 16-bit color depth. The TM4C123 sends the MSB first, so the ENDIAN bit is cleared. The other bits are cleared and/or irrelevant since the RGB and VSYNC interfaces aren't used.

#### ILI9341\_resetHard()

```
void ILI9341_resetHard ( {\tt Timer\_t~\it timer}~)
```

Perform a hardware reset of the LCD driver.

#### **Parameters**

in <i>timer</i>	Hardware timer to use during reset.
-----------------	-------------------------------------

The LCD driver's RESET pin requires a negative logic (i.e. active LOW) signal for >= 10 [us] and an additional 5 [ms] before further commands can be sent.

#### ILI9341\_resetSoft()

```
void ILI9341_resetSoft ( {\tt Timer\_t~\it timer}~)
```

Perform a software reset of the LCD driver.

#### **Parameters**

in <i>timer</i>	Hardware timer to use during reset.
-----------------	-------------------------------------

the driver needs 5 [ms] before another command

## ILI9341\_setSleepMode()

Enter or exit sleep mode (ON by default).

## **Parameters**

in	sleepMode	SLEEP_ON or SLEEP_OFF	
in	timer	Hardware timer to use for a slight delay after the mode change.	

#### Postcondition

The IC will be in or out of sleep mode depending on the value of sleepMode.

The MCU must wait >= 5 [ms] before sending further commands regardless of the selected mode.

It's also necessary to wait 120 [ms] before sending SPLOUT after sending SPLIN or a reset, so this function waits 120 [ms] regardless of the preceding event.

## ILI9341\_setDisplayArea()

Set the display area.

## Precondition

If using partial mode, set the partial area first.

#### **Parameters**

in <i>displayArea</i>	NORMAL_AREA or PARTIAL_AREA
-----------------------	-----------------------------

#### See also

ILI9341\_setPartialArea()

# ILI9341\_setColorExpression()

Set the color expression (FULL\_COLORS by default).

#### **Parameters**

in	colorExpr	FULL (	COLORS	or PARTIAL_	COLORS
711	COIOLEXPI	т отт_	COTOV2	OI FARTIAL_	_сопока

## Postcondition

With partial color expression, the display only uses 8 colors. Otherwise, the color depth determines the number of colors available.

## ILI9341\_setPartialArea()

Set the display area for partial mode. Call before activating partial mode.

in	rowStart	
in	rowEnd	

#### See also

```
ILI9341_setDisplayArea()
```

#### ILI9341\_setDispInversion()

Toggle display inversion (OFF by default).

#### **Parameters**

```
in invertMode INVERT_ON or INVERT_OFF
```

#### Postcondition

When inversion is ON, the display colors are inverted. (e.g. BLACK -> WHITE, GREEN -> PURPLE)

## ILI9341\_setDispOutput()

Change whether the IC is outputting to the display for not.

#### **Parameters**

```
in outputMode OUTPUT_ON or OUTPUT_OFF
```

#### Postcondition

If ON, the IC outputs data from its memory to the display. If OFF, the display is cleared and the IC stops outputting data.

TODO: Write description

#### ILI9341\_setMemAccessCtrl()

```
void ILI9341_setMemAccessCtrl (
    bool areRowsFlipped,
    bool areColsFlipped,
    bool areRowsAndColsSwitched,
    bool isVertRefreshFlipped,
    bool isColorOrderFlipped,
    bool isHorRefreshFlipped)
```

Set how data is converted from memory to display.

#### **Parameters**

in	areRowsFlipped	
in	areColsFlipped	
in	areRowsAndColsSwitched	
in	isVertRefreshFlipped	
in	isColorOrderFlipped	
in	isHorRefreshFlipped	

This function implements the "Memory Access Control" (MADCTL) command from p. 127-128 of the ILI9341 datasheet, which controls how the LCD driver displays data upon writing to memory.

Name	Bit #	Effect when set = 1
MY	7	flip row (AKA "page") addresses
MX	6	flip column addresses
MV	5	exchange rows and column addresses
ML	4	reverse horizontal refresh order
BGR	3	reverse color input order (RGB -> BGR)
МН	2	reverse vertical refresh order

All bits are clear after powering on or HWRESET.

# ILI9341\_setColorDepth()

Set the color depth for the display.

### **Parameters**

in colorDept	COLORDEPTH	_16BIT or COLORDEPTH_	_18BIT
In ColorDepti	( COTORDELIH	_10B11 <b>01</b> COTOKDE51H <sup>-</sup>	TABII

#### Postcondition

16BIT mode allows for  $\sim$ 65K (2^16) colors and requires 2 transfers. 18BIT mode allows for  $\sim$ 262K (2^18) colors but requires 3 transfers.

# ILI9341\_setFrameRate()

TODO: Write brief.

TODO: Write description

# ILI9341\_setRowAddress()

Sets the start/end rows to be written to.

#### **Parameters**



0 <= startRow <= endRow</pre>

#### **Parameters**



startRow<=endRow` < 240

See also

ILI9341\_setRowAddress, ILI9341\_writePixel()

This function is simply an interface to ILI9341\_setAddress(). To work correctly, start\_row must be no greater than end\_row, and end\_row cannot be greater than the max row number (default 320).

# ILI9341\_setColAddress()

Sets the start/end columns to be written to.

#### **Parameters**



0 <= startCol <= endCol</pre>

## **Parameters**



startCol <= endCol `< 240

See also

ILI9341\_setColAddress, ILI9341\_writePixel()

This function is simply an interface to ILI9341\_setAddress(). To work correctly, start\_col must be no greater than end\_col, and end\_col cannot be greater than the max column number (default 240).

## ILI9341\_writeMemCmd()

```
void ILI9341_writeMemCmd ( void )
```

Signal to the driver that pixel data is incoming and should be written to memory.

#### Precondition

Set the row and/or column addresses.

#### Postcondition

The LCD driver is ready to accept pixel data.

#### See also

ILI9341\_setRowAddress, ILI9341\_setColAddress(), ILI9341\_writePixel()

#### ILI9341\_writePixel()

```
void ILI9341_writePixel (
          uint8_t red,
          uint8_t green,
          uint8_t blue )
```

Write a single pixel to frame memory.

## Precondition

Send the "Write Memory" command.

Set the desired color depth for the display.

#### **Parameters**

in	red	5 or 6-bit R value
in	green	5 or 6-bit G value
in	blue	5 or 6-bit B value

#### See also

```
ILI9341_setColorDepth, ILI9341_writeMemCmd(), ILI9341_writePixel()
```

This function sends one pixel to the display. Because the serial interface (SPI) is used, each pixel requires 2 transfers in 16-bit mode and 3 transfers in 18-bit mode.

The following table (adapted from p. 63 of the datasheet) visualizes how the RGB data is sent to the display when using 16-bit color depth.

						Tra	nsfer	1	2							
Bit #	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Value	R4	R3	R2	R1	R0	G5	G4	G3	G2	G1	G0	B4	В3	B2	B1	B0

The following table (adapted from p. 64 of the datasheet) visualizes how the RGB data is sent to the display when using 18-bit color depth.

			•	Transf	ier	1	2					
Bit #	7	6	5	4	3	2		1	0	7	6	
Value	R5	R4	R3	R2	R1	R0		0/1	0/1	G5	G4	

#### 11.3.3.6 Variable Documentation

#### [struct]

## 11.3.4 LED

Functions for driving light-emitting diodes (LEDs) via General-Purpose Input/Output (GPIO).

#### **Files**

• file Led.c

Source code for LED module.

file Led.h

Interface for LED module.

#### **Data Structures**

• struct Led\_t

#### **Macros**

• #define LED\_POOL\_SIZE 1

### **Variables**

- static LedStruct\_t Led\_ObjPool [LED\_POOL\_SIZE] = { 0 }
- static uint8\_t num\_free\_leds = LED\_POOL\_SIZE

## **Initialization & Configuration**

```
    Led_t Led_Init (GpioPort_t gpioPort, GpioPin_t pin)
    Initialize a light-emitting diode (LED) as an Led_t.
```

GpioPort\_t Led\_GetPort (Led\_t led)

Get the GPIO port associated with the LED.

• GpioPin\_t Led\_GetPin (Led\_t led)

Get the GPIO pin associated with the LED.

# **Status Checking**

```
    bool Led_isInit (Led_t led)
    Check if an LED is initialized.
```

bool Led\_isOn (Led\_t led)

Check the LED's status.

## **Operations**

```
    void Led_TurnOn (Led_t led)
    Turn an LED ON.
```

• void Led\_TurnOff (Led\_t led)

Turn an LED OFF.

void Led\_Toggle (Led\_t led)

Toggle an LED.

## 11.3.4.1 Detailed Description

Functions for driving light-emitting diodes (LEDs) via General-Purpose Input/Output (GPIO).

## 11.3.4.2 Function Documentation

## Led\_Init()

Initialize a light-emitting diode (LED) as an Led\_t.

in	gpioPort	Pointer to a struct representing a GPIO port.
in	pin	GPIO pin to use.
out	led	Pointer to LED data structure.

# Led\_GetPort()

Get the GPIO port associated with the LED.

# Precondition

Initialize the LED.

#### **Parameters**

in	led	Pointer to LED data structure.
out	gpioPort	Pointer to a GPIO port data structure.

## See also

```
Led_Init(), Led_GetPin()
```

# Led\_GetPin()

Get the GPIO pin associated with the LED.

# Precondition

Initialize the LED.

## **Parameters**

in	led	Pointer to LED data structure.
out	pin	GPIO pin associated with the LED.

#### See also

```
Led_Init(), Led_GetPort()
```

# Led\_isInit()

Check if an LED is initialized.

# **Parameters**

in	led	Pointer to LED data structure.
out	true	The LED is initialized.
out	false	The LED is not initialized.

## See also

Led\_Init()

# Led\_isOn()

```
bool Led_isOn (
          Led_t led )
```

Check the LED's status.

# Precondition

Initialize the LED.

## **Parameters**

in	led	Pointer to LED data structure.
out	true	the LED is ON.
out	false	the LED is OFF.

# See also

Led\_TurnOn(), Led\_TurnOff(), Led\_Toggle()

# Led\_TurnOn()

Turn an LED ON.

# Precondition

Initialize the LED.

in	led	Pointer to LED data structure.

# Postcondition

The LED is turned ON.

See also

```
Led_TurnOff(), Led_Toggle()
```

# Led\_TurnOff()

Turn an LED OFF.

Precondition

Initialize the LED.

# **Parameters**

in <i>led</i>	Pointer to LED data structure.
---------------	--------------------------------

# Postcondition

The LED is turned OFF.

See also

```
Led_TurnOn(), Led_Toggle()
```

# Led\_Toggle()

Toggle an LED.

Precondition

Initialize the LED.

in	led	Pointer to LED data structure.
----	-----	--------------------------------

Postcondition

The LED's state is flipped (i.e. ON -> OFF or OFF -> ON).


See also

Led\_TurnOn(), Led\_TurnOff()

## 11.4 Device Drivers

Low level device driver modules.

Collaboration diagram for Device Drivers:

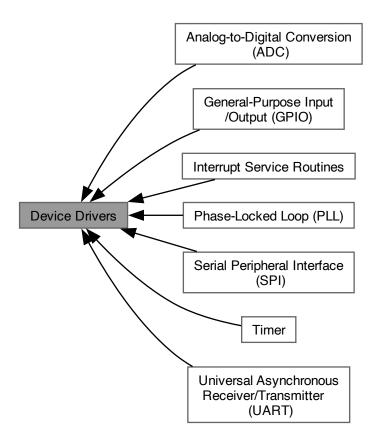

## **Modules**

- Analog-to-Digital Conversion (ADC)
   Functions for analog-to-digital conversion.
- General-Purpose Input/Output (GPIO)

  Functions for using GPIO ports.
- Interrupt Service Routines

Functions for manipulating the interrupt vector table and setting up interrupt handlers via the NVIC.

Phase-Locked Loop (PLL)

Function for initializing the phase-locked loop.

Serial Peripheral Interface (SPI)

Functions for SPI-based communication via the SSI peripheral.

Timer

Functions for using hardware timers.

Universal Asynchronous Receiver/Transmitter (UART)

Functions for serial communication via the UART peripheral.

#### 11.4.1 Detailed Description

Low level device driver modules.

These modules contain functions for interfacing with the TM4C123 microcontroller's built-in peripherals.

## 11.4.2 Analog-to-Digital Conversion (ADC)

Functions for analog-to-digital conversion.

## **Files**

• file ADC.c

Source code for analog-to-digital conversion (ADC) module.

file ADC.h

Header file for analog-to-digital conversion (ADC) module.

#### **Functions**

• void ADC\_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

#### 11.4.2.1 Detailed Description

Functions for analog-to-digital conversion.

Todo Refactor to be more general.

# 11.4.2.2 Function Documentation

#### ADC Init()

```
void ADC_Init (
     void )
```

Initialize ADC0 as a single-input analog-to-digital converter.

#### Postcondition

Analog input 8 (Ain8) – AKA GPIO pin PE5 – captures samples when triggered by one of the hardware timers, and initiates an interrupt once sample capture is complete.

#### 11.4.3 General-Purpose Input/Output (GPIO)

Functions for using GPIO ports.

#### **Files**

• file GPIO.c

Source code for GPIO module.

· file GPIO.h

Header file for general-purpose input/output (GPIO) device driver.

# **Data Structures**

struct GpioPort t

#### **Macros**

• #define GPIO NUM PORTS 6

#### **Enumerations**

```
enum GPIO PORT BASE ADDRESSES {
 GPIO PORTA BASE ADDRESS = (uint32 t) 0x40004000 , GPIO PORTB BASE ADDRESS = (uint32 ↔
  _t) 0x40005000 , GPIO_PORTC_BASE_ADDRESS = (uint32_t) 0x40006000 , GPIO_PORTD_BASE_~
 ADDRESS = (uint32 t) 0x40007000,
 GPIO PORTE BASE ADDRESS = (uint32 t) 0x40024000 , GPIO PORTF BASE ADDRESS = (uint32 t)
 0x40025000 }

    enum GPIO REGISTER OFFSETS {

 GPIO_DATA_R_OFFSET = (uint32_t) 0x03FC, GPIO_DIR_R_OFFSET = (uint32_t) 0x0400, GPIO_IS_R_OFFSET
 = (uint32_t) 0x0404, GPIO_IBE_R_OFFSET = (uint32_t) 0x0408,
 GPIO IEV R OFFSET = (uint32 t) 0x040C, GPIO IM R OFFSET = (uint32 t) 0x0410, GPIO ICR R OFFSET
 = (uint32_t) 0x041C, GPIO_AFSEL_R_OFFSET = (uint32_t) 0x0420,
 GPIO_DR2R_R_OFFSET = (uint32_t) 0x0500 , GPIO_DR4R_R_OFFSET = (uint32_t) 0x0504 ,
 \label{eq:gpio_draw} \begin{aligned} & \mathsf{GPIO\_DR8R\_R\_OFFSET} = (\mathsf{uint32\_t}) \ 0 \\ & \mathsf{x0508} \ , \ & \mathsf{GPIO\_PUR\_R\_OFFSET} = (\mathsf{uint32\_t}) \ 0 \\ & \mathsf{x0510} \ , \end{aligned}
 GPIO PDR R OFFSET = (uint32 t) 0x0518, GPIO DEN R OFFSET = (uint32 t) 0x051C, GPIO LOCK R OFFSET
 = (uint32 t) 0x0520, GPIO COMMIT R OFFSET = (uint32 t) 0x0524,
 GPIO AMSEL R OFFSET = (uint32 t) 0x0528, GPIO PCTL R OFFSET = (uint32 t) 0x052C }
```

#### **Variables**

static GpioPortStruct\_t GPIO\_PTR\_ARR [6]

#### Initialization

```
enum GPIO_PortName_t {
    GPIO_PORT_A, GPIO_PORT_B, GPIO_PORT_C, GPIO_PORT_D,
    GPIO_PORT_E, GPIO_PORT_F, A = GPIO_PORT_A, B = GPIO_PORT_B,
    C = GPIO_PORT_C, D = GPIO_PORT_D, E = GPIO_PORT_E, F = GPIO_PORT_F}
GpioPort_t GPIO_InitPort (GPIO_PortName_t portName)
    Initialize a GPIO Port and return a pointer to its struct.
bool GPIO_isPortInit (GpioPort_t gpioPort)
    Check if the GPIO port is initialized.
uint32 t GPIO_getBaseAddr (GpioPort_t gpioPort)
```

Get the base address of a GPIO port.

#### Configuration (Digital I/O)

enum GpioPin\_t { **GPIO\_PIN0** =  $((uint8_t) \ 1)$ , **GPIO\_PIN1** =  $((uint8_t) \ (1 << 1))$ , **GPIO\_PIN2** =  $((uint8_t) \ (1 << 2))$ , **GPIO\_PIN2 PIN3** = ((uint8 t) (1 << 3)), **GPIO** PIN4 =  $((uint8\ t)\ (1 << 4))$ , **GPIO** PIN5 =  $((uint8\ t)\ (1 << 5))$ , **GPIO** PIN6 =  $((uint8\ t)\ (1 << 6))$ , **GPIO\_PIN7** = ((uint8 t) (1 << 7)), **GPIO** ALL **PINS** = ((uint8 t) (0xFF))• enum GPIO LAUNCHPAD LEDS { LED\_RED = GPIO\_PIN1 , LED\_GREEN = GPIO\_PIN3 , LED\_BLUE = GPIO\_PIN2 , LED\_YELLOW = (LED RED + LED GREEN), LED\_CYAN = (LED\_BLUE + LED\_GREEN) , LED\_PURPLE = (LED\_RED + LED\_BLUE) , LED\_WHITE = (LED\_RED + LED\_BLUE + LED\_GREEN) }

- enum gpioDir t { GPIO INPUT , GPIO OUTPUT }
- enum gpioResistor\_t { PULLUP , PULLDOWN }
- void GPIO configDirection (GpioPort t gpioPort, GpioPin t pinMask, gpioDir t direction)

Configure the direction of the specified GPIO pins.

• void GPIO\_configResistor (GpioPort\_t gpioPort, GpioPin\_t pinMask, gpioResistor\_t resistor)

Activate the specified pins' internal pull-up or pull-down resistors.

void GPIO ConfigDriveStrength (GpioPort t gpioPort, GpioPin t pinMask, uint8 t drive mA)

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

void GPIO EnableDigital (GpioPort t gpioPort, GpioPin t pinMask)

Enable digital I/O for the specified pins.

void GPIO DisableDigital (GpioPort t gpioPort, GpioPin t pinMask)

Disable digital I/O for the specified pins.

#### **Configuration (Interrupts)**

• void GPIO\_ConfigInterrupts\_Edge (GpioPort\_t gpioPort, GpioPin\_t pinMask, bool risingEdge)

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

• void GPIO ConfigInterrupts BothEdges (GpioPort t gpioPort, GpioPin t pinMask)

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

void GPIO\_ConfigInterrupts\_LevelTrig (GpioPort\_t gpioPort, GpioPin\_t pinMask, bool highLevel)

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

void GPIO\_ConfigNVIC (GpioPort\_t gpioPort, uint8\_t priority)

Configure interrupts for the selected port in the NVIC.

#### Basic Functions (Digital I/O)

volatile uint32\_t \* GPIO\_getDataRegister (GpioPort\_t gpioPort)

Get the address of a GPIO port's data register.

uint8\_t GPIO\_ReadPins (GpioPort\_t gpioPort, GpioPin\_t pinMask)

Read from the specified GPIO pin.

void GPIO\_WriteHigh (GpioPort\_t gpioPort, GpioPin\_t pinMask)

Write a 1 to the specified GPIO pins.

void GPIO\_WriteLow (GpioPort\_t gpioPort, GpioPin\_t pinMask)

Write a 0 to the specified GPIO pins.

void GPIO Toggle (GpioPort t gpioPort, GpioPin t pinMask)

Toggle the specified GPIO pins.

# Configuration (Alternate/Analog Modes)

• void GPIO\_ConfigAltMode (GpioPort\_t gpioPort, GpioPin\_t pinMask)

Activate the alternate mode for the specified pins.

• void GPIO\_ConfigPortCtrl (GpioPort\_t gpioPort, GpioPin\_t pinMask, uint8\_t fieldEncoding)

Specify the alternate mode to use for the specified pins.

• void GPIO\_ConfigAnalog (GpioPort\_t gpioPort, GpioPin\_t pinMask)

Activate analog mode for the specified GPIO pins.

# 11.4.3.1 Detailed Description

Functions for using GPIO ports.

**Todo** Remove statically-allocated data structures for unused GPIO ports.

## 11.4.3.2 Enumeration Type Documentation

# GPIO\_REGISTER\_OFFSETS

enum GPIO\_REGISTER\_OFFSETS

#### Enumerator

GPIO_DATA_R_OFFSET	data
GPIO_DIR_R_OFFSET	direction
GPIO_IS_R_OFFSET	interrupt sense
GPIO_IBE_R_OFFSET	interrupt both edges
GPIO_IEV_R_OFFSET	interrupt event
GPIO_IM_R_OFFSET	interrupt mask
GPIO_ICR_R_OFFSET	interrupt clear
GPIO_AFSEL_R_OFFSET	alternate function select
GPIO_DR2R_R_OFFSET	drive strength (2 [ma])
GPIO_DR4R_R_OFFSET	drive strength (4 [ma])
GPIO_DR8R_R_OFFSET	drive strength (8 [ma])
GPIO_PUR_R_OFFSET	pull-up resistor
GPIO_PDR_R_OFFSET	pull-down resistor
GPIO_DEN_R_OFFSET	digital enable
GPIO_LOCK_R_OFFSET	lock
GPIO_COMMIT_R_OFFSET	commit
GPIO_AMSEL_R_OFFSET	alternate mode select
GPIO_PCTL_R_OFFSET	port control

# GPIO\_LAUNCHPAD\_LEDS

enum GPIO\_LAUNCHPAD\_LEDS

## Enumerator

LED_RED	PF1.
LED_GREEN	PF3.
LED_BLUE	PF2.

# 11.4.3.3 Function Documentation

# GPIO\_InitPort()

Initialize a GPIO Port and return a pointer to its struct.

## **Parameters**

in	portName	Name of the chosen port.
out	gpioPort	Pointer to the specified GPIO port.

# GPIO\_isPortInit()

Check if the GPIO port is initialized.

# **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
out	true	The GPIO port is initialized.
out	false	The GPIO port has not been initialized.

# GPIO\_getBaseAddr()

Get the base address of a GPIO port.

in	gpioPort	Pointer to the specified GPIO port.
out	baseAddress	Base address of the GPIO port.

# GPIO\_configDirection()

Configure the direction of the specified GPIO pins.

## Precondition

Initialize the GPIO port.

#### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
	in	pinMask	Bit mask corresponding to the intended pin(s).
Ī	in	direction	The direction for the intended pin(s).

#### Postcondition

The specified GPIO pins are now configured as inputs or outputs.

#### See also

```
GPIO_InitPort()
```

# GPIO\_configResistor()

Activate the specified pins' internal pull-up or pull-down resistors.

# Precondition

Initialize the GPIO port.

	in	gpioPort	Pointer to the specified GPIO port.
	in	pinMask	Bit mask corresponding to the intended pin(s).
Ī	in	resistor	The type of resistor to use.

## Postcondition

The pull-up/pull-down resistor(s) are now activated.

#### See also

```
GPIO_InitPort()
```

# **GPIO\_ConfigDriveStrength()**

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	drive_mA	Drive strength in [mA]. Should be 2, 4, or 8 [mA].

# GPIO\_EnableDigital()

Enable digital I/O for the specified pins.

#### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
ĺ	in	pinMask	Bit mask corresponding to the intended pin(s).

# GPIO\_DisableDigital()

Disable digital I/O for the specified pins.

in	gpioPort	Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).	]

## GPIO\_ConfigInterrupts\_Edge()

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	risingEdge	true for rising edge, false for falling edge

# GPIO\_ConfigInterrupts\_BothEdges()

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

# **GPIO\_ConfigInterrupts\_LevelTrig()**

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	highLevel	true for high level, false for low level

# GPIO\_ConfigNVIC()

Configure interrupts for the selected port in the NVIC.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	priority	Priority number between 0 (highest) and 7 (lowest).

# GPIO\_getDataRegister()

```
volatile uint32_t * GPIO_getDataRegister ( {\tt GpioPort\_t} \ gpioPort \ )
```

Get the address of a GPIO port's data register.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
out	dataRegister	Address of the GPIO port's data register.

# GPIO\_ReadPins()

Read from the specified GPIO pin.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

# GPIO\_WriteHigh()

Write a 1 to the specified GPIO pins.

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

# GPIO\_WriteLow()

Write a 0 to the specified GPIO pins.

## **Parameters**

iı	n	gpioPort	Pointer to the specified GPIO port.
iı	n	pinMask	Bit mask corresponding to the intended pin(s).

# GPIO\_Toggle()

Toggle the specified GPIO pins.

# **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

## GPIO\_ConfigAltMode()

Activate the alternate mode for the specified pins.

## **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
Ī	in	pinMask	Bit mask corresponding to the intended pin(s).

# GPIO\_ConfigPortCtrl()

Specify the alternate mode to use for the specified pins.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	fieldEncoding	Number corresponding to intended alternate mode.

## GPIO\_ConfigAnalog()

Activate analog mode for the specified GPIO pins.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).	

#### 11.4.3.4 Variable Documentation

# GPIO\_PTR\_ARR

```
GpioPortStruct_t GPIO_PTR_ARR[6] [static]
```

## Initial value:

```
{
    { GPIO_PORTA_BASE_ADDRESS, (GPIO_PORTA_BASE_ADDRESS + GPIO_DATA_R_OFFSET), false },
    { GPIO_PORTB_BASE_ADDRESS, (GPIO_PORTB_BASE_ADDRESS + GPIO_DATA_R_OFFSET), false },
    { GPIO_PORTC_BASE_ADDRESS, (GPIO_PORTC_BASE_ADDRESS + GPIO_DATA_R_OFFSET), false },
    { GPIO_PORTD_BASE_ADDRESS, (GPIO_PORTD_BASE_ADDRESS + GPIO_DATA_R_OFFSET), false },
    { GPIO_PORTE_BASE_ADDRESS, (GPIO_PORTE_BASE_ADDRESS + GPIO_DATA_R_OFFSET), false },
    { GPIO_PORTF_BASE_ADDRESS, (GPIO_PORTF_BASE_ADDRESS + GPIO_DATA_R_OFFSET), false },
}
```

## 11.4.4 Interrupt Service Routines

Functions for manipulating the interrupt vector table and setting up interrupt handlers via the NVIC.

#### **Files**

• file ISR.c

Source code for interrupt service routine (ISR) configuration module.

• file ISR.h

Header file for interrupt service routine (ISR) configuration module.

#### **Macros**

- #define VECTOR\_TABLE\_BASE\_ADDR ((uint32\_t) 0x00000000)
- #define VECTOR\_TABLE\_SIZE ((uint32\_t) 155)
- #define VECTOR\_TABLE\_ALIGNMENT ((uint32 t) (1 << 10))
- #define NVIC\_EN\_BASE\_ADDR ((uint32\_t) 0xE000E100)
- #define NVIC DIS BASE ADDR ((uint32 t) 0xE000E180)
- #define NVIC\_PRI\_BASE\_ADDR ((uint32\_t) 0xE000E400)
- #define NVIC\_UNPEND\_BASE\_ADDR ((uint32\_t) 0xE000E280)

#### **Functions**

• static void ISR\_setStatus (const uint8\_t vectorNum, const bool isEnabled)

#### **Variables**

- static bool interruptsAreEnabled = true
- void(\*const interruptVectorTable [])(void)
- static ISR\_t newVectorTable [VECTOR\_TABLE\_SIZE]
- static bool isTableCopiedToRam = false

## **Interrupt Vector Table Configuration**

typedef void(\* ISR\_t) (void)

Interrupt service routine (ISR) function pointers.

void ISR\_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR\_addToIntTable (ISR\_t isr, const uint8\_t vectorNum)

Add an ISR to the interrupt table.

# **Global Interrupt Configuration**

void ISR\_GlobalDisable (void)

Disable all interrupts globally.

void ISR\_GlobalEnable (void)

Enable all interrupts globally.

#### **Individual Interrupt Configuration**

void ISR\_setPriority (const uint8\_t vectorNum, const uint8\_t priority)

Set the priority for an interrupt.

• void ISR\_Enable (const uint8\_t vectorNum)

Enable an interrupt in the NVIC.

void ISR\_Disable (const uint8\_t vectorNum)

Disable an interrupt in the NVIC.

void ISR triggerInterrupt (const uint8 t vectorNum)

Generate a software-generated interrupt (SGI).

## 11.4.4.1 Detailed Description

Functions for manipulating the interrupt vector table and setting up interrupt handlers via the NVIC.

#### 11.4.4.2 Function Documentation

## ISR\_GlobalDisable()

Disable all interrupts globally.

Note

Does not affect Reset, NMI, or hard faults.

See also

ISR\_GlobalEnable()

## ISR\_GlobalEnable()

Enable all interrupts globally.

Note

Does not affect Reset, NMI, or hard faults.

See also

ISR\_GlobalDisable()

## ISR\_InitNewTableInRam()

Relocate the vector table to RAM.

Precondition

Disable interrupts globally before calling this.

Postcondition

The vector table is now located in RAM, allowing the ISRs listed in the startup file to be replaced.

See also

ISR\_GlobalDisable(), ISR\_addToIntTable()

# ISR\_addToIntTable()

Add an ISR to the interrupt table.

#### Precondition

Initialize a new vector table in RAM before calling this function.

#### **Parameters**

in	isr	Name of the ISR to add.	
in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16,	154].

## Postcondition

The ISR is now added to the vector table and available to be called.

#### See also

ISR\_InitNewTableInRam()

# ISR\_setPriority()

Set the priority for an interrupt.

## Precondition

Disable the interrupt before adjusting its priority.

# **Parameters**

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 1	L54].
in	priority	Priority to assign. Highest priority is 0, lowest is 7.	

## Postcondition

The interrupt's priority has now been changed in the NVIC.

#### See also

ISR\_Disable()

## ISR\_Enable()

Enable an interrupt in the NVIC.

# Precondition

If needed, add the interrupt to the vector table.

If needed, set the interrupt's priority (default 0, or highest priority) before calling this.

#### **Parameters**

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154]	41 l
T11	Vectorivarii	isit's vector number (i.e. onset from the top of the table). Should be in range [10, 15]	4 ] ·

#### Postcondition

The interrupt is now enabled in the NVIC.

## See also

```
ISR_addToIntTable(), ISR_setPriority(), ISR_Disable()
```

## ISR\_Disable()

Disable an interrupt in the NVIC.

#### **Parameters**

in vectorNum ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154].

## Postcondition

The interrupt is now disabled in the NVIC.

#### See also

ISR\_Enable()

# ISR\_triggerInterrupt()

Generate a software-generated interrupt (SGI).

## Precondition

Enable the ISR (and set priority as needed).

Enable all interrupts.

#### **Parameters**

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range $[16,$	154].
----	-----------	--	-------

#### Postcondition

The ISR should trigger once any higher priority ISRs return.

#### See also

ISR\_clearPending()

# 11.4.5 Phase-Locked Loop (PLL)

Function for initializing the phase-locked loop.

#### **Files**

• file PLL.c

Implementation details for phase-lock-loop (PLL) functions.

• file PLL.h

Driver module for activating the phase-locked-loop (PLL).

## **Functions**

• void PLL\_Init (void)

Initialize the phase-locked-loop to change the bus frequency.

## 11.4.5.1 Detailed Description

Function for initializing the phase-locked loop.

## 11.4.5.2 Function Documentation

# PLL\_Init()

```
void PLL_Init (
     void )
```

Initialize the phase-locked-loop to change the bus frequency.

## Postcondition

The bus frequency is now running at 80 [MHz].

#### 11.4.6 Serial Peripheral Interface (SPI)

Functions for SPI-based communication via the SSI peripheral.

#### **Files**

file SPI.c

Source code for serial peripheral interface (SPI) module.

• file SPI.h

Header file for serial peripheral interface (SPI) module.

#### **Data Structures**

struct Spi\_t

#### **Enumerations**

enum GPIO\_PORT\_BASE\_ADDRESSES {

$$\label{eq:gpio_porta_base_address} \begin{split} & \textbf{GPIO\_PORTA\_BASE\_ADDRESS} = (uint32\_t) \ 0x40004000 \ , \ & \textbf{GPIO\_PORTB\_BASE\_ADDRESS} = (uint32\_t) \ 0x40006000 \ , \ & \textbf{GPIO\_PORTD\_BASE\_} \\ & \textbf{ADDRESS} = (uint32\_t) \ 0x40007000 \ , \ \end{split}$$

 $\label{eq:gpio_porte_base_address} \textbf{GPIO_PORTE\_BASE\_ADDRESS} = (uint32\_t) \ 0x40024000 \ , \ \textbf{GPIO\_PORTF\_BASE\_ADDRESS} = (uint32\_t) \ 0x40025000 \ \}$ 

- enum SSI\_BASE\_ADDRESSES { SSI0\_BASE\_ADDR = (uint32\_t) 0x40008000 , SSI1\_BASE\_ADDR = (uint32\_t) 0x40009000 , SSI2\_BASE\_ADDR = (uint32\_t) 0x4000A000 , SSI3\_BASE\_ADDR = (uint32\_t) 0x4000B000 }
- enum SSI\_REGISTER\_OFFSETS {

 $\textbf{CTRL0\_OFFSET} = (uint32\_t) \ 0 \ , \ \textbf{CTRL1\_OFFSET} = (uint32\_t) \ 0x004 \ , \ \textbf{DATA\_OFFSET} = (uint32\_t) \ 0x008 \ , \\ \textbf{STATUS\_OFFSET} = (uint32\_t) \ 0x00C \ ,$ 

 $\label{eq:clk_prescale_offset} \textbf{CLK_PRESCALE\_OFFSET} = (uint32\_t) \ 0x010 \ , \ \textbf{INT\_MASK\_OFFSET} = (uint32\_t) \ 0x014 \ , \ \textbf{RAW\_INT\_} \\ \textbf{STATUS\_OFFSET} = (uint32\_t) \ 0x018 \ , \ \textbf{MASKED\_INT\_STATUS\_OFFSET} = (uint32\_t) \ 0x01C \ , \\ \textbf{INT\_CLEAR\_OFFSET} = (uint32\_t) \ 0x020 \ \}$ 

- enum SsiNum\_t { SSI0 , SSI1 , SSI2 , SSI3 }
- enum SpiClockPhase\_t { SPI\_RISING\_EDGE , SPI\_FALLING\_EDGE }
- enum SpiClockPolarity\_t { SPI\_STEADY\_STATE\_LOW , SPI\_STEADY\_STATE\_HIGH }

#### **Functions**

Spi\_t SPI\_Init (GpioPort\_t gpioPort, GpioPin\_t dcPin, SsiNum\_t ssiNum)

Initialize an SSI as an SPI controller.

• bool SPI\_isInit (Spi\_t spi)

Check if a given SPI is initialized.

void SPI configClock (Spi t spi, SpiClockPhase t clockPhase, SpiClockPolarity t clockPolarity)

Configure an SPI's clock settings.

- void SPI\_setDataSize (Spi\_t spi, uint8\_t dataSize)
- void SPI Enable (Spi t spi)

Enable an SPI.

• void SPI\_Disable (Spi\_t spi)

Disable an SPI.

uint16\_t SPI\_Read (Spi\_t spi)

Read data from the serial port.

void SPI\_WriteCmd (Spi\_t spi, uint16\_t cmd)

Write a command to the serial port.

void SPI\_WriteData (Spi\_t spi, uint16\_t data)

Write data to the serial port.

## **Variables**

• static SpiStruct\_t SPI\_ARR [4]

## 11.4.6.1 Detailed Description

Functions for SPI-based communication via the SSI peripheral.

## 11.4.6.2 Function Documentation

## SPI\_Init()

Initialize an SSI as an SPI controller.

#### **Parameters**

in	gpioPort	GPIO port to use.
in	dcPin	GPIO pin to use.
in	ssiNum	SSI to use.
out	Spi_t	(Pointer to) initialized SPI peripheral.

## SPI\_isInit()

Check if a given SPI is initialized.

#### **Parameters**

in	spi	SPI to check.
out	true	The SPI is initialized.
out	false	The SPI is not initialized.

# SPI\_configClock()

Configure an SPI's clock settings.

11.4 Device Drivers 109

# Precondition

Initialize the SPI.

Disable the SPI.

### **Parameters**

in	spi	SPI to configure.
in	clockPhase	
in	clockPolarity	

# SPI\_setDataSize()

## Precondition

Initialize the SPI.

Disable the SPI.

#### **Parameters**

in	spi	
in	dataSize	

# SPI\_Enable()

Enable an SPI.

## Precondition

Initialize the SPI.

#### **Parameters**

in	spi	SPI to enable.	l
T11	δρι	Si i to enable.	

### Postcondition

The SPI is enable.

See also

SPI\_Disable()

# SPI\_Disable()

Disable an SPI.

### Precondition

Initialize the SPI.

### **Parameters**

in	spi	SPI to disable.
----	-----	-----------------

### Postcondition

The SPI is disabled.

## See also

SPI\_Enable()

# SPI\_Read()

Read data from the serial port.

### Precondition

Initialize the SPI.

Enable the SPI.

### **Parameters**

in	spi	SPI to read from.
out	data	8-bit data received from the hardware's receive FIFO.

# SPI\_WriteCmd()

```
void SPI\_WriteCmd (
```

11.4 Device Drivers 111

```
Spi_t spi,
uint16_t cmd )
```

Write a command to the serial port.

#### Precondition

Initialize the SPI.

Enable the SPI.

#### **Parameters**

in	spi	SPI to write to.
in	cmd	Command to write.

#### Postcondition

The D/C pin is cleared.

The command is added to the hardware's transmit FIFO.

## SPI\_WriteData()

Write data to the serial port.

#### Precondition

Initialize the SPI.

Enable the SPI.

## Parameters

in	spi	SPI to write to.
in	data	Data to write.

### Postcondition

The D/C pin is set.

The data is added to the hardware's transmit FIFO.

## 11.4.6.3 Variable Documentation

## SPI\_ARR

```
SpiStruct_t SPI_ARR[4] [static]
```

#### Initial value:

#### 11.4.7 Timer

Functions for using hardware timers.

#### **Files**

· file Timer.c

Source code for Timer module.

· file Timer.h

Device driver for general-purpose timer modules.

#### **Data Structures**

struct Timer t

#### **Enumerations**

```
enum {
    TIMERO_BASE = 0x40030000 , TIMER1_BASE = 0x40031000 , TIMER2_BASE = 0x40032000 , TIMER3
    __BASE = 0x40033000 ,
    TIMER4_BASE = 0x40034000 , TIMER5_BASE = 0x40035000 }

enum REGISTER_OFFSETS {
    CONFIG = 0x00 , MODE = 0x04 , CTRL = 0x0C , INT_MASK = 0x18 ,
    INT_CLEAR = 0x24 , INTERVAL = 0x28 , VALUE = 0x054 }

enum timerName_t {
    TIMER0 , TIMER1 , TIMER2 , TIMER3 ,
    TIMER4 , TIMER5 }

enum timerMode_t { ONESHOT , PERIODIC }

enum timerDirection_t { UP , DOWN }
```

#### **Functions**

• Timer\_t Timer\_Init (timerName\_t timerName)

Initialize a hardware timer.

• void Timer Deinit (Timer t timer)

De-initialize a hardware timer.

timerName\_t Timer\_getName (Timer\_t timer)

Get the name of a timer object.

· bool Timer isInit (Timer t timer)

Check if a timer object is initialized.

void Timer\_setMode (Timer\_t timer, timerMode\_t timerMode, timerDirection\_t timerDirection)

11.4 Device Drivers 113

Set the mode for the timer.

void Timer\_enableAdcTrigger (Timer\_t timer)

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

void Timer\_disableAdcTrigger (Timer\_t timer)

Disable ADC sample capture on timeout.

void Timer\_enableInterruptOnTimeout (Timer\_t timer)

Set the timer to trigger an interrupt on timeout.

void Timer\_disableInterruptOnTimeout (Timer\_t timer)

Stop the timer from triggering interrupts on timeout.

void Timer\_clearInterruptFlag (Timer\_t timer)

Clear the timer's interrupt flag to acknowledge the interrupt.

void Timer\_setInterval\_ms (Timer\_t timer, uint32\_t time\_ms)

Set the interval to use.

- uint32 t Timer\_getCurrentValue (Timer t timer)
- void Timer\_Start (Timer\_t timer)

Start the timer.

void Timer\_Stop (Timer\_t timer)

Stop the timer.

• bool Timer\_isCounting (Timer\_t timer)

Check if the timer is currently counting.

void Timer\_Wait1ms (Timer\_t timer, uint32\_t time\_ms)

Initiate a time delay.

### **Variables**

static TimerStruct t TIMER POOL [6]

#### 11.4.7.1 Detailed Description

Functions for using hardware timers.

Todo Remove statically-allocated data structures for unused timers.

### 11.4.7.2 Enumeration Type Documentation

## timerMode\_t

enum timerMode\_t

#### Enumerator

ONESHOT	the timer runs once, then stops
PERIODIC	the timer runs continuously once started

# timerDirection\_t

```
enum timerDirection_t
```

#### Enumerator

UP	the timer starts and 0 and counts to the reload value
DOWN	the timer starts at its reload value and counts down

### 11.4.7.3 Function Documentation

# Timer\_Init()

Initialize a hardware timer.

## **Parameters**

in	timerName	Name of the hardware timer to use.
out	timer	Pointer to timer object.

## Postcondition

The timer is ready to be configured and used.

### See also

Timer\_isInit(), Timer\_Deinit()

# Timer\_Deinit()

De-initialize a hardware timer.

## **Parameters**

in	timerName	Name of the hardware timer to use.
----	-----------	------------------------------------

## Postcondition

The hardware timer is no longer initialized or receiving power.

11.4 Device Drivers 115

### See also

```
Timer_Init(), Timer_isInit()
```

## Timer\_getName()

Get the name of a timer object.

#### **Parameters**

in	timer	Pointer to timer object.
out	timer←	Name of the hardware timer being used.
	Name_t	

# Timer\_isInit()

Check if a timer object is initialized.

#### **Parameters**

in	timer	Pointer to timer object.
out	true	The timer is initialized.
out	false	The timer is not initialized.

### See also

```
Timer_Init(), Timer_Deinit()
```

# Timer\_setMode()

Set the mode for the timer.

# **Parameters**

in	timer	Pointer to timer object.
in	timerMode	Mode for hardware timer to use.
in	timerDirection	Direction to count towards.

## Timer\_enableAdcTrigger()

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

### Precondition

Initialize and configure an ADC module to be timer-triggered.

#### **Parameters**

in	timer	Pointer to timer object.
----	-------	--------------------------

### Postcondition

A timeout event triggers ADC sample capture.

#### See also

Timer\_disableAdcTrigger()

## Timer\_disableAdcTrigger()

Disable ADC sample capture on timeout.

#### Precondition

Initialize and configure an ADC module to be timer-triggered.

### **Parameters**

		T. T	
in	timer	Pointer to timer object.	

### Postcondition

A timeout event no longer triggers ADC sample capture.

### See also

Timer\_enableAdcTrigger()

11.4 Device Drivers 117

## Timer\_enableInterruptOnTimeout()

```
void Timer_enableInterruptOnTimeout ( {\tt Timer\_t~\it timer}~)
```

Set the timer to trigger an interrupt on timeout.

### Precondition

Configure the interrupt service routine using the ISR module.

#### **Parameters**

in	timer	Pointer to timer object.
----	-------	--------------------------

### Postcondition

Upon timeout, an interrupt is triggered.

#### See also

Timer\_disableInterruptOnTimeout()

## Timer\_disableInterruptOnTimeout()

Stop the timer from triggering interrupts on timeout.

### **Parameters**

in	timer	Pointer to timer object.
----	-------	--------------------------

#### Postcondition

Timeout no longer triggers ADC sample capture.

## See also

Timer\_enableInterruptOnTimeout()

### Timer\_clearInterruptFlag()

```
void Timer_clearInterruptFlag ( {\tt Timer\_t\ \it timer}\ )
```

Clear the timer's interrupt flag to acknowledge the interrupt.

## Precondition

Call this during a timer's interrupt service routine (ISR).

## **Parameters**

in	timer	Pointer to timer object.
----	-------	--------------------------

## Timer\_setInterval\_ms()

Set the interval to use.

#### Precondition

Initialize and configure the timer.

#### **Parameters**

in	timer	Pointer to timer object.
in	time_ms	Time in [ms].

## Postcondition

Upon starting, the Timer counts down from or up to this value.

### See also

```
Timer_Init(), Timer_setMode()
```

# Timer\_Start()

Start the timer.

### Precondition

Initialize and configure the timer.

### **Parameters**

in	timer	Pointer to timer object.

11.4 Device Drivers 119

## Postcondition

The timer is counting.

#### See also

```
Timer_Stop(), Timer_isCounting()
```

# Timer\_Stop()

Stop the timer.

#### Precondition

Start the timer.

#### **Parameters**

in timer Pointer to timer obje	ct.
--------------------------------	-----

#### Postcondition

The timer is no longer counting.

### See also

```
Timer_Start(), Timer_isCounting()
```

## Timer\_isCounting()

Check if the timer is currently counting.

### **Parameters**

in	timer	Pointer to timer object.	
out	true	The timer is counting.	
out	false	The timer is not counting.	

## See also

Timer\_Start(), Timer\_Stop()

#### Timer\_Wait1ms()

Initiate a time delay.

#### Precondition

Initialize and configure the timer.

#### **Parameters**

	in <i>timer</i>		Pointer to timer object.		
Ī	in	time_ms	Time in [ms] to wait for.		

#### Postcondition

The program is delayed for the desired time.

#### 11.4.7.4 Variable Documentation

#### TIMER\_POOL

```
TimerStruct_t TIMER_POOL[6] [static]
```

#### Initial value:

# 11.4.8 Universal Asynchronous Receiver/Transmitter (UART)

Functions for serial communication via the UART peripheral.

### **Files**

• file UART.c

Source code for UART module.

• file UART.h

Driver module for serial communication via UART0 and UART 1.

11.4 Device Drivers 121

#### **Data Structures**

struct Uart\_t

#### **Macros**

#define ASCII\_CONVERSION 0x30

#### **Enumerations**

```
enum GPIO_BASE_ADDRESSES {
 GPIO PORTA BASE = (uint32 t) 0x40004000 , GPIO PORTB BASE = (uint32 t) 0x40005000 , GPIO ←
 \label{eq:portc_base} \textbf{PORTC\_BASE} = (uint32\_t) \ 0x40006000 \ , \ \textbf{GPIO\_PORTD\_BASE} = (uint32\_t) \ 0x40007000 \ ,
 GPIO_PORTE_BASE = (uint32_t) 0x40024000 , GPIO_PORTF_BASE = (uint32_t) 0x40025000 }
enum UART BASE ADDRESSES {
 UART0_BASE = (uint32_t) 0x4000C000 , UART1_BASE = (uint32_t) 0x4000D000 , UART2_BASE =
 (uint32_t) 0x4000E000 , UART3_BASE = (uint32_t) 0x4000F000 ,
 UART4 BASE = (uint32 t) 0x40010000 , UART5 BASE = (uint32 t) 0x40011000 , UART6 BASE =
 (uint32_t) 0x40012000 , UART7_BASE = (uint32_t) 0x40013000 }
enum UART_REG_OFFSETS {
 UART_FR_R_OFFSET = (uint32_t) 0x18 , IBRD_R_OFFSET = (uint32_t) 0x24 , FBRD_R_OFFSET =
 (uint32_t) 0x28, LCRH_R_OFFSET = (uint32_t) 0x2C,
 CTL_R_OFFSET = (uint32_t) 0x30 , CC_R_OFFSET = (uint32_t) 0xFC8 }
enum uartNum t {
 UARTO, UART1, UART2, UART3,
 UART4, UART5, UART6, UART7}
```

#### **Functions**

Uart\_t UART\_Init (GpioPort\_t port, uartNum\_t uartNum)

Initialize the specified UART peripheral.

bool UART\_isInit (Uart\_t uart)

Check if the UART object is initialized.

unsigned char UART\_ReadChar (Uart\_t uart)

Read a single ASCII character from the UART.

void UART\_WriteChar (Uart\_t uart, unsigned char inputChar)

Write a single character to the UART.

• void UART\_WriteStr (Uart\_t uart, void \*inputStr)

Write a C string to the UART.

• void UART\_WriteInt (Uart\_t uart, int32\_t n)

Write a 32-bit unsigned integer the UART.

void UART\_WriteFloat (Uart\_t uart, double n, uint8\_t numDecimals)

Write a floating-point number the UART.

#### **Variables**

static UartStruct\_t UART\_ARR [8]

#### 11.4.8.1 Detailed Description

Functions for serial communication via the UART peripheral.

**Todo** Remove statically-allocated data structures for unused UARTs.

#### 11.4.8.2 Function Documentation

#### UART Init()

Initialize the specified UART peripheral.

#### **Parameters**

in	port	GPIO port to use.	
in uartNum UART number. Should be either one of the enumerated constants or an int in range		UART number. Should be either one of the enumerated constants or an int in range [0, 7].	
out	uart	(Pointer to) initialized UART peripheral.	

Given the bus frequency (f\_bus) and desired baud rate (BR), the baud rate divisor (BRD) can be calculated:  $BRD = f_{bus}/(16*BR)$ 

The integer BRD (IBRD) is simply the integer part of the BRD: IBRD = int(BRD)

The fractional BRD (FBRD) is calculated using the fractional part (mod (BRD, 1)) of the BRD: FBRD = int((mod(BRD,1)\*64)+0.5)

## UART\_isInit()

Check if the UART object is initialized.

## **Parameters**

in	uart	UART to check.	
out	true The UART object is initialized.		
out	false	The UART object is not initialized	

### UART\_ReadChar()

11.4 Device Drivers 123 Read a single ASCII character from the UART.

### **Parameters**

in	uart	UART to read from.
out	unsigned	char ASCII character from sender.

# UART\_WriteChar()

Write a single character to the UART.

#### **Parameters**

I	in	uart	UART to write to.	
	in input_char		ASCII character to send.	

# UART\_WriteStr()

Write a C string to the UART.

### **Parameters**

in	uart	UART to write to.	
in input_str		Array of ASCII characters.	

# UART\_WriteInt()

Write a 32-bit unsigned integer the UART.

#### **Parameters**

in	uart	UART to write to.
in	n	Unsigned 32-bit int to be converted and transmitted.

#### **UART\_WriteFloat()**

Write a floating-point number the UART.

#### **Parameters**

	in	uart	UART to write to.		
Ī	in	n	Floating-point number to be converted and transmitted.		
Ī	in	num_decimals	Number of digits after the decimal point to include.		

#### 11.4.8.3 Variable Documentation

## UART\_ARR

```
UartStruct_t UART_ARR[8] [static]
```

#### Initial value:

```
{ UARTO_BASE, ((register_t) (UARTO_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false }, { UART1_BASE, ((register_t) (UART1_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false }, { UART2_BASE, ((register_t) (UART2_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN6, GPIO_PIN7, false }, { UART3_BASE, ((register_t) (UART3_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN6, GPIO_PIN7, false }, { UART4_BASE, ((register_t) (UART4_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false }, { UART5_BASE, ((register_t) (UART5_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false }, { UART6_BASE, ((register_t) (UART6_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false }, { UART7_BASE, ((register_t) (UART7_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false }, { UART7_BASE, ((register_t) (UART7_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN1, false }
```

## 12 Data Structure Documentation

### 12.1 Fifo\_t Struct Reference

### **Data Fields**

volatile uint32\_t \* buffer

(pointer to) array to use as FIFO buffer

· volatile uint32\_t N

length of buffer

volatile uint32\_t frontldx

idx of front of FIFO

volatile uint32\_t backldx

idx of back of FIFO

The documentation for this struct was generated from the following file:

• Fifo.c

# 12.2 GpioPort\_t Struct Reference

#### **Data Fields**

- const uint32\_t BASE\_ADDRESS
- const uint32\_t DATA\_REGISTER
- · bool islnit

The documentation for this struct was generated from the following file:

• GPIO.c

## 12.3 Led\_t Struct Reference

### **Data Fields**

- GpioPort\_t GPIO\_PORT\_PTR
  - pointer to GPIO port data structure
- GpioPin\_t GPIO\_PIN

GPIO pin number.

- volatile uint32\_t \* gpioDataRegister
- bool isOn

state indicator

• bool islnit

The documentation for this struct was generated from the following file:

· Led.c

## 12.4 Spi\_t Struct Reference

### **Data Fields**

- const uint32\_t BASE\_ADDRESS
- volatile uint32\_t \*const DATA\_REGISTER
- volatile uint32\_t \*const **STATUS\_REGISTER**
- volatile uint32\_t \* gpioDataRegister
- GpioPin\_t gpioDataCommPin
- uint8 t dataSize
- · bool isEnabled
- bool islnit

The documentation for this struct was generated from the following file:

• SPI.c

# 12.5 Timer\_t Struct Reference

#### **Data Fields**

- const timerName\_t NAME
- const uint32\_t BASE\_ADDR
- register\_t controlRegister
- register\_t intervalLoadRegister
- register\_t interruptClearRegister
- · bool islnit

The documentation for this struct was generated from the following file:

• Timer.c

# 12.6 Uart\_t Struct Reference

#### **Data Fields**

- const uint32\_t BASE\_ADDRESS
- register\_t FLAG\_R\_ADDRESS
- GpioPort\_t GPIO\_PORT

pointer to GPIO port data structure

• GpioPin\_t RX\_PIN\_NUM

GPIO pin number.

GpioPin\_t TX\_PIN\_NUM

GPIO pin number.

· bool islnit

The documentation for this struct was generated from the following file:

• UART.c

## 13 File Documentation

## 13.1 DAQ.c File Reference

Source code for DAQ module.


Include dependency graph for DAQ.c:




# 13.2 DAQ.h File Reference

Application software for handling data acquision (DAQ) functions.

Include dependency graph for DAQ.h:



This graph shows which files directly or indirectly include this file:

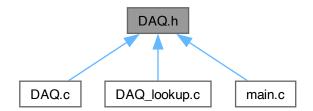


# 13.3 DAQ\_lookup.c File Reference

Source code for DAQ module's lookup table.

13.4 Font.c File Reference 129


Include dependency graph for DAQ\_lookup.c:

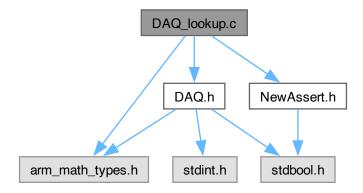

## 13.4 Font.c File Reference

Contains bitmaps for a selection of ASCII characters.


Include dependency graph for Font.c:

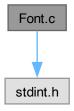

# 13.5 LCD.c File Reference

Source code for LCD module.


Include dependency graph for LCD.c:

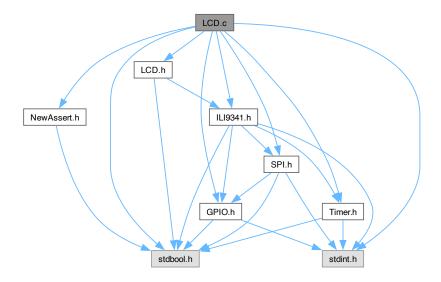

# 13.6 LCD.h File Reference


Header file for LCD module.

Include dependency graph for LCD.h:

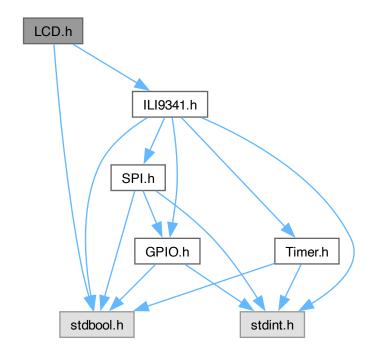

13.7 QRS.c File Reference 131

This graph shows which files directly or indirectly include this file:



# 13.7 QRS.c File Reference

Source code for QRS detection module.


Include dependency graph for QRS.c:




## 13.8 QRS.h File Reference

Header file for QRS detection module.

Include dependency graph for QRS.h:




This graph shows which files directly or indirectly include this file:



# 13.9 Fifo.c File Reference

Source code for FIFO buffer module.


Include dependency graph for Fifo.c:

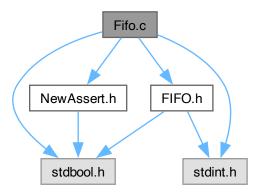


# 13.10 Fifo.h File Reference

Header file for FIFO buffer implementation.

Include dependency graph for Fifo.h:

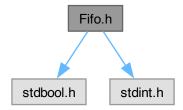


This graph shows which files directly or indirectly include this file:



## 13.11 NewAssert.c File Reference

Source code for custom  ${\tt assert}$  implementation.


Include dependency graph for NewAssert.c:

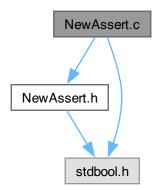

## 13.12 NewAssert.h File Reference

Header file for custom assert implementation.

Include dependency graph for NewAssert.h:




This graph shows which files directly or indirectly include this file:



# 13.13 ADC.c File Reference

Source code for analog-to-digital conversion (ADC) module.


Include dependency graph for ADC.c:

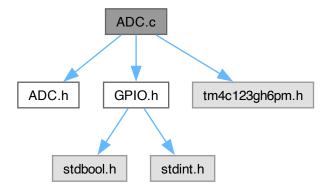

# 13.14 ADC.h File Reference

Header file for analog-to-digital conversion (ADC) module.


This graph shows which files directly or indirectly include this file:

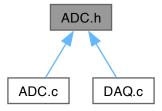

# 13.15 GPIO.c File Reference

Source code for GPIO module.


Include dependency graph for GPIO.c:

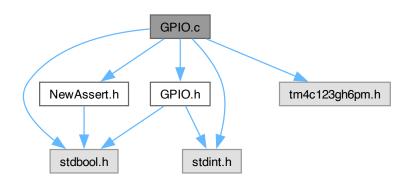


### 13.16 GPIO.h File Reference

Header file for general-purpose input/output (GPIO) device driver.

Include dependency graph for GPIO.h:

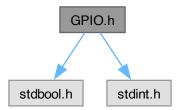


This graph shows which files directly or indirectly include this file:

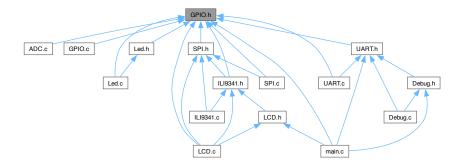

## 13.17 ISR.c File Reference

Source code for interrupt service routine (ISR) configuration module.


Include dependency graph for ISR.c:

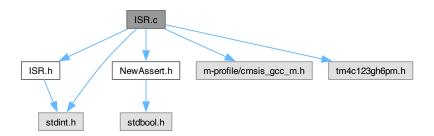


# 13.18 ISR.h File Reference

Header file for interrupt service routine (ISR) configuration module.

Include dependency graph for ISR.h:




This graph shows which files directly or indirectly include this file:

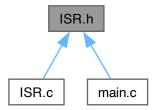

## 13.19 PLL.c File Reference

Implementation details for phase-lock-loop (PLL) functions.


Include dependency graph for PLL.c:

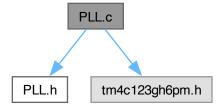

# 13.20 PLL.h File Reference

Driver module for activating the phase-locked-loop (PLL).


This graph shows which files directly or indirectly include this file:

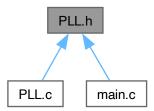

# 13.21 SPI.c File Reference

Source code for serial peripheral interface (SPI) module.


Include dependency graph for SPI.c:

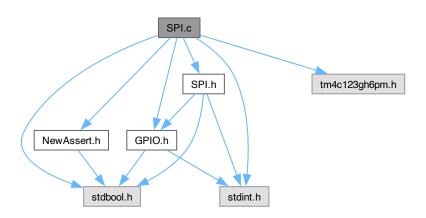


## 13.22 SPI.h File Reference

Header file for serial peripheral interface (SPI) module.

Include dependency graph for SPI.h:

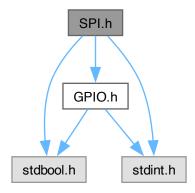


This graph shows which files directly or indirectly include this file:

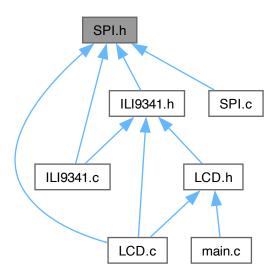

# 13.23 Timer.c File Reference

Source code for Timer module.


Include dependency graph for Timer.c:

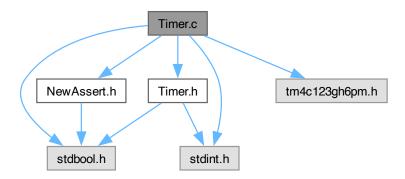


# 13.24 Timer.h File Reference

Device driver for general-purpose timer modules.

Include dependency graph for Timer.h:

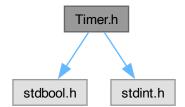


This graph shows which files directly or indirectly include this file:

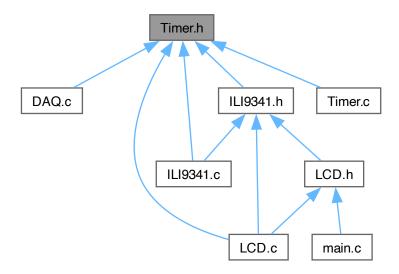

## 13.25 UART.c File Reference

Source code for UART module.


Include dependency graph for UART.c:

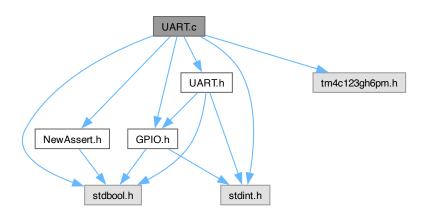


## 13.26 UART.h File Reference

Driver module for serial communication via UART0 and UART 1.

Include dependency graph for UART.h:

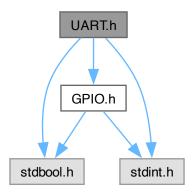


This graph shows which files directly or indirectly include this file:

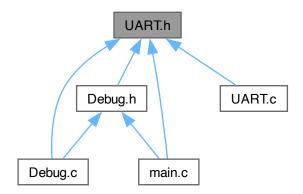

# 13.27 main.c File Reference

Main program file.


Include dependency graph for main.c:

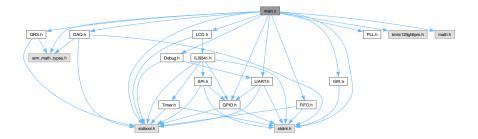

# 13.28 Debug.c File Reference

Source code for Debug module.


Include dependency graph for Debug.c:

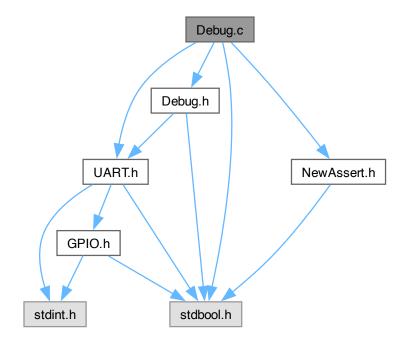


# 13.29 Debug.h File Reference

Header file for Debug module.

Include dependency graph for Debug.h:

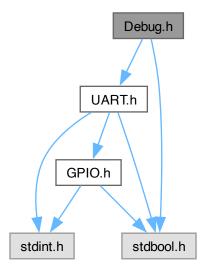


This graph shows which files directly or indirectly include this file:



# 13.30 ILI9341.c File Reference

Source code for ILI9341 module.


Include dependency graph for ILI9341.c:

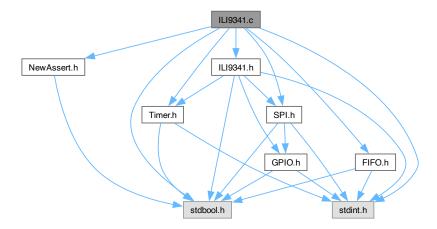


## 13.31 ILI9341.h File Reference

Driver module for interfacing with an ILI9341 LCD driver.

Include dependency graph for ILI9341.h:

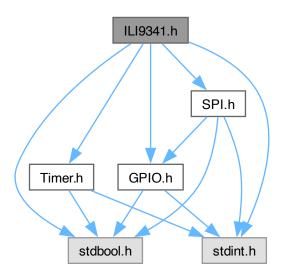


This graph shows which files directly or indirectly include this file:

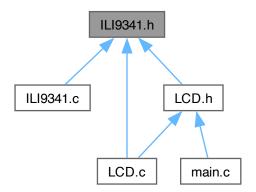

# 13.32 Led.c File Reference

Source code for LED module.


Include dependency graph for Led.c:

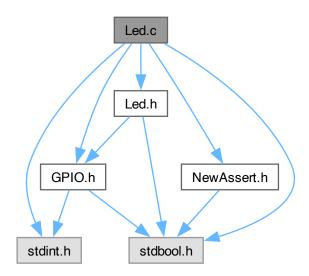

# 13.33 Led.h File Reference

Interface for LED module.

Include dependency graph for Led.h:

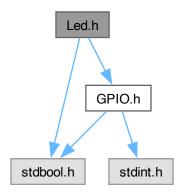

This graph shows which files directly or indirectly include this file:

