uHeartMonitor

Generated by Doxygen 1.9.8

1	Bug List	1
2	Topic Index	2
	2.1 Topics	2
3	Data Structure Index	2
	3.1 Data Structures	2
4	File Index	3
	4.1 File List	3
	Tanta Bassassatatian	_
5	Topic Documentation	5
	5.1 Application Software	
	5.1.1 Detailed Description	
	5.1.2 Data Acquisition (DAQ)	
	5.1.3 Liquid Crystal Display (LCD)	
	5.1.4 QRS Detector	36
	5.2 Common	43
	5.2.1 Detailed Description	44
	5.2.2 Function Documentation	44
	5.2.3 FIFO Buffers	44
	5.2.4 NewAssert	50
	5.3 Device Drivers	50
	5.3.1 Detailed Description	
	5.3.2 Analog-to-Digital Conversion (ADC)	
	5.3.3 General-Purpose Input/Output (GPIO)	
	5.3.4 Phase-Locked Loop (PLL)	
	5.3.5 Serial Peripheral Interface (SPI)	
	5.3.6 System Tick (SysTick)	
	5.3.7 Timer	
	5.3.8 Universal Asynchronous Receiver/Transmitter (UART)	
	5.3.9 Interrupt Service Routines	
	5.4 Middleware	
	5.4.1 Detailed Description	76
	5.4.2 Debug	76
	5.4.3 ILI9341	79
	5.4.4 LED	90
	5.5 Main	95
	5.5.1 Detailed Description	96
	5.5.2 Enumeration Type Documentation	96
	5.5.3 Function Documentation	97
		• ~ ~
6	Data Structure Documentation	102
	6.1 Fifo_t Struct Reference	102

	6.2 GpioPort_t Struct Reference	103
	6.3 Led_t Struct Reference	103
	6.4 Timer_t Struct Reference	104
	6.5 Uart_t Struct Reference	104
7 1	File Documentation	104
′ '		104
	7.1.1 Detailed Description	_
	7.2 DAQ.h File Reference	
	7.2.1 Detailed Description	
	7.3 DAQ_lookup.c File Reference	
	7.3.1 Detailed Description	
	7.4 Font.c File Reference	
	7.4.1 Detailed Description	
	7.5 LCD.c File Reference	
	7.5.1 Detailed Description	
	7.6 LCD.h File Reference	
	7.6.1 Detailed Description	
	7.7 QRS.c File Reference	
	7.7.1 Detailed Description	
	7.8 QRS.h File Reference	
	7.8.1 Detailed Description	
	7.9 Fifo.c File Reference	
	7.9.1 Detailed Description	
	7.10 Fifo.h File Reference	
	7.10 File.11 Pile Reference	
	7.11 NewAssert.c File Reference	
	7.11.1 Detailed Description	122
	7.12 NewAssert.h File Reference	
	7.12.1 Detailed Description	
		123
	•	124
	7.14 ADC.h File Reference	124
	7.14.1 Detailed Description	124
		125
	7.15.1 Detailed Description	127
	7.15.2 Function Documentation	127
	7.15.3 Variable Documentation	134
	7.16 GPIO.h File Reference	134
	•	137
	**	137
	7.16.3 Function Documentation	137

1 Bug List 1

	7.17 ISR.c File Reference	144
	7.17.1 Detailed Description	146
	7.18 ISR.h File Reference	146
	7.18.1 Detailed Description	147
	7.19 PLL.c File Reference	147
	7.19.1 Detailed Description	148
	7.20 PLL.h File Reference	148
	7.20.1 Detailed Description	148
	7.21 SPI.c File Reference	149
	7.21.1 Detailed Description	150
	7.22 SPI.h File Reference	150
	7.22.1 Detailed Description	151
	7.23 SysTick.c File Reference	151
	7.23.1 Detailed Description	152
	7.24 SysTick.h File Reference	152
	7.24.1 Detailed Description	153
	7.25 Timer.c File Reference	153
	7.25.1 Detailed Description	154
	7.26 Timer.h File Reference	155
	7.26.1 Detailed Description	156
	7.27 UART.c File Reference	157
	7.27.1 Detailed Description	158
	7.28 UART.h File Reference	158
	7.28.1 Detailed Description	159
	7.29 main.c File Reference	160
	7.29.1 Detailed Description	161
	7.30 Debug.h File Reference	161
	7.30.1 Detailed Description	162
	7.31 ILI9341.c File Reference	163
	7.31.1 Detailed Description	164
	7.32 ILI9341.h File Reference	164
	7.32.1 Detailed Description	166
	7.33 Led.c File Reference	167
	7.33.1 Detailed Description	168
	7.34 Led.h File Reference	168
	7.34.1 Detailed Description	169
led	lov	174
Ind	ICX	171

# 1 Bug List

## Global FIFO\_Get (volatile Fifo\_t fifo)

To use floats (AKA float32\_t), type-punning is necessary.

## Global FIFO\_Put (volatile Fifo\_t fifo, const uint32\_t val)

To use floats (AKA float32\_t), type-punning is necessary.

# 2 Topic Index

## 2.1 Topics

Here is a list of all topics with brief descriptions:

Α	pplication Software	5
	Data Acquisition (DAQ)	5
	Liquid Crystal Display (LCD)	11
	QRS Detector	36
С	ommon	43
	FIFO Buffers	44
	NewAssert	50
D	evice Drivers	<b>5</b> 0
	Analog-to-Digital Conversion (ADC)	<b>52</b>
	General-Purpose Input/Output (GPIO)	53
	Phase-Locked Loop (PLL)	53
	Serial Peripheral Interface (SPI)	54
	System Tick (SysTick)	57
	Timer	58
	Universal Asynchronous Receiver/Transmitter (UART)	67
	Interrupt Service Routines	71
M	iddleware	75
	Debug	76
	ILI9341	79
	LED	90
М	ain	95

## 3 Data Structure Index

### 3.1 Data Structures

Here are the data structures with brief descriptions:

4 File Index 3

	Fifo_t	102
	GpioPort_t	103
	Led_t	103
	Timer_t	104
	Uart_t	104
4	File Index	
4.	1 File List	
He	ere is a list of all documented files with brief descriptions:	
	DAQ.c Source code for DAQ module	104
	DAQ.h Application software for handling data acquision (DAQ) functions	106
	DAQ_lookup.c Source code for DAQ module's lookup table	107
	Font.c Contains bitmaps for a selection of ASCII characters	108
	LCD.c Source code for LCD module	110
	LCD.h Header file for LCD module	113
	QRS.c Source code for QRS detection module	115
	QRS.h Header file for QRS detection module	117
	Fifo.c Source code for FIFO buffer module	118
	Fifo.h Header file for FIFO buffer implementation	120
	NewAssert.c Source code for custom assert implementation	121
	NewAssert.h Header file for custom assert implementation	122
	ADC.c Source code ffor analog-to-digital conversion (ADC) module	123
	ADC.h Header file for analog-to-digital conversion (ADC) module	124


GPIO.c Source code for GPIO module	125
GPIO.h  Header file for general-purpose input/output (GPIO) device driver	134
ISR.c	144
Source code for interrupt service routine (ISR) configuration module	144
ISR.h Header file for interrupt service routine (ISR) configuration module	146
PLL.c Implementation details for phase-lock-loop (PLL) functions	147
	147
PLL.h  Driver module for activating the phase-locked-loop (PLL)	148
SPI.c Source code for serial peripheral interface (SPI) module	149
	143
SPI.h  Header file for serial peripheral interface (SPI) module	150
SysTick.c Implementation details for SysTick functions	151
SysTick.h Driver module for using SysTick-based timing and/or interrupts	152
Timer.c Source code for Timer module	153
Timer.h  Device driver for general-purpose timer modules	155
UART.c Source code for UART module	157
UART.h  Driver module for serial communication via UART0 and UART 1	158
main.c  Main program file	160
Debug.h Functions to output debugging information to a serial port via UART	161
ILI9341.c Source code for ILI9341 module	163
ILI9341.h	
Driver module for interfacing with an ILI9341 LCD driver	164
Led.c Source code for LED module	167
Led.h Interface for LED module	168
	168

## 5 Topic Documentation

### 5.1 Application Software

Application-specific software modules.

Collaboration diagram for Application Software:

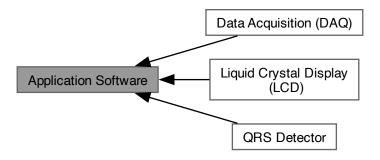

### **Modules**

- Data Acquisition (DAQ)
- Liquid Crystal Display (LCD)
- QRS Detector

## 5.1.1 Detailed Description

Application-specific software modules.

These modules contain functions built specifically for this project's purposes.

### 5.1.2 Data Acquisition (DAQ)

Collaboration diagram for Data Acquisition (DAQ):



#### **Files**

• file DAQ.c

Source code for DAQ module.

• file DAQ.h

Application software for handling data acquision (DAQ) functions.

file DAQ lookup.c

Source code for DAQ module's lookup table.

#### **Macros**

#define SAMPLING PERIOD MS 5

sampling period in ms (  $T_s = 1/f_s$ )

- #define DAQ\_LOOKUP\_MAX ((float32\_t) 5.5f)
- #define DAQ\_LOOKUP\_MIN ((float32\_t) (-5.5f))

#### **Variables**

• static const float32 t DAQ\_LOOKUP\_TABLE [4096]

Lookup table for converting ADC data from unsigned 12-bit integer values to 32-bit floating point values.

### **Digital Filters**

enum {

NUM\_STAGES\_NOTCH = 6, NUM\_COEFFS\_NOTCH = NUM\_STAGES\_NOTCH \* 5, STATE\_BUFF\_ $\leftarrow$  SIZE\_NOTCH = NUM\_STAGES\_NOTCH \* 4, NUM\_STAGES\_BANDPASS = 4, NUM\_COEFFS\_DAQ\_BANDPASS = NUM\_STAGES\_BANDPASS \* 5, STATE\_BUFF\_SIZE\_BANDPASS = NUM\_STAGES\_BANDPASS \* 4}

- typedef arm\_biquad\_casd\_df1\_inst\_f32 Filter\_t
- static const float32\_t COEFFS\_NOTCH [NUM\_COEFFS\_NOTCH]
- static const float32 t COEFFS BANDPASS [NUM COEFFS DAQ BANDPASS]
- static float32\_t stateBuffer\_Notch [STATE\_BUFF\_SIZE\_NOTCH]
- static const Filter\_t notchFiltStruct = { NUM\_STAGES\_NOTCH, stateBuffer\_Notch, COEFFS\_NOTCH }
- static const Filter t \*const **notchFilter** = &notchFiltStruct
- static float32\_t stateBuffer\_Bandpass [STATE\_BUFF\_SIZE\_BANDPASS]
- static const Filter\_t bandpassFiltStruct
- static const Filter\_t \*const bandpassFilter = &bandpassFiltStruct

#### Initialization

• void DAQ\_Init (void)

Initialize the data acquisition (DAQ) module.

### **Reading Input Data**

uint16 t DAQ readSample (void)

Read a sample from the ADC.

void DAQ\_acknowledgeInterrupt (void)

Acknowledge the ADC interrupt.

float32\_t DAQ\_convertToMilliVolts (uint16\_t sample)

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

### **Digital Filtering Functions**

- float32\_t DAQ\_NotchFilter (volatile float32\_t xn)
  - Apply a 60 [Hz] notch filter to an input sample.
- float32\_t DAQ\_BandpassFilter (volatile float32\_t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

#### 5.1.2.1 Detailed Description

Module for managing data acquisition (DAQ) functions.

### 5.1.2.2 Function Documentation

### DAQ\_Init()

```
void DAQ_Init (
     void )
```

Initialize the data acquisition (DAQ) module.

#### Postcondition

The analog-to-digital converter (ADC) is initialized and configured for timer-triggered sample capture.

The timer is initialized in PERIODIC mode and triggers the ADC every 5ms (i.e. sampling frequency  $f_s=200Hz$ ).

The DAQ module has access to its lookup table (LUT).

### DAQ\_readSample()

Read a sample from the ADC.

#### Precondition

Initialize the DAQ module.

This should be used in an interrupt handler and/or at a consistent rate (i.e. the sampling frequency).

#### **Parameters**

```
out sample 12-bit sample in range [0x000, 0xFFF]
```

#### Postcondition

The sample can now be converted to millivolts.

DAQ\_convertToMilliVolts()

## DAQ\_acknowledgeInterrupt()

```
void DAQ_acknowledgeInterrupt ( \label{eq:partial_partial} \mbox{void} \ \ \mbox{)}
```

Acknowledge the ADC interrupt.

### Precondition

This should be used within an interrupt handler.

### DAQ\_NotchFilter()

```
float32_t DAQ_NotchFilter ( {\tt volatile~float32\_t~\it xn~)}
```

Apply a 60 [Hz] notch filter to an input sample.

### Precondition

Read a sample from the ADC and convert it to millivolts.

### **Parameters**

in	xn	Raw input sample
out	yn	Filtered output sample

### Postcondition

y[n] is ready for analysis and/or further processing.

## DAQ\_BandpassFilter()

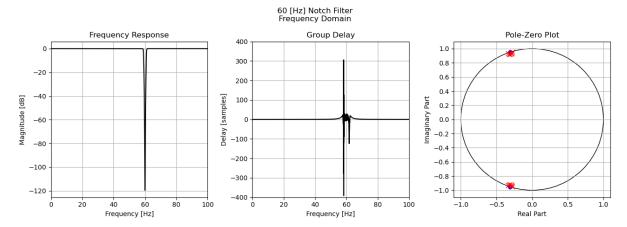


Figure 1 Frequency domain parameters for the notch filter.

### DAQ\_BandpassFilter()

```
float32_t DAQ_BandpassFilter ( volatile \ float32\_t \ xn \ )
```

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

#### Precondition

Read a sample from the ADC and convert it to millivolts.

#### **Parameters**

in	xn	Input sample
out	yn	Filtered output sample

#### Postcondition

y[n] is ready for analysis and/or further processing.

### DAQ\_NotchFilter()

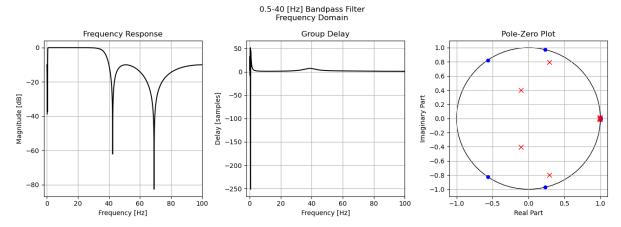


Figure 2 Frequency domain parameters for the bandpass filter.

### DAQ\_convertToMilliVolts()

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

#### Precondition

Read a sample from the ADC.

#### **Parameters**

iı	n	sample	12-bit sample in range [0x000, 0xFFF]
01	ut	xn	Voltage value in range $[-5.5, 5.5)[mV]$

### Postcondition

The sample x[n] is ready for filtering.

### See also

DAQ\_readSample()

### Note

Defined in DAQ\_lookup.c rather than DAQ.c.

#### 5.1.2.3 Variable Documentation

#### COEFFS\_NOTCH

### COEFFS\_BANDPASS

### bandpassFiltStruct

## 5.1.3 Liquid Crystal Display (LCD)

Collaboration diagram for Liquid Crystal Display (LCD):

1.994096040725708f, -0.9943605065345764f,



#### **Files**

```
• file Font.c

Contains bitmaps for a selection of ASCII characters.
```

• file LCD.c

Source code for LCD module.

• file LCD.h

Header file for LCD module.

### Macros

• #define CONVERT\_INT\_TO\_ASCII(X) ((unsigned char) (X + 0x30))

#### **Functions**

static void LCD\_plotSample (uint16\_t x, uint16\_t y, LCD\_Color\_t color)
 Plot a sample at coordinates (x, y).

#### **Variables**

```
• const uint8_t *const FONT_ARRAY [128]
struct {
    uint16_t x1
      starting x-value in range [0, x2]
    uint16_t x2
      ending x-value in range [0, NUM ROWS)
   uint16_t y1
      starting y-value in range [0, y2]
   uint16 t y2
      ending x-value in range [0, NUM COLS)
   uint16_t lineNum
      line number for text; in range [0, NUM_LINES)
    uint16 t colNum
      column number for text; in range [0, NUM_COLS)
    uint8_t R_val
      5 R value
    uint8 t G val
      6-bit G value
    uint8_t B_val
      5 B value
    bool islnit
      if true, LCD has been initialized
 \} \ \text{lcd} = \{ \ 0 \ \}
```

• const uint8\_t \*const FONT\_ARRAY [128]

#### **Initialization & Configuration**

```
enum LCD_PLOT_INFO { LCD_X_MAX = ILI9341_NUM_ROWS - 1 , LCD_Y_MAX = ILI9341_NUM_COLS
  - 1 }
enum LCD_Color_t {
  LCD\_BLACK = \sim (0x00) \& 0x07, LCD\_RED = \sim (0x04) \& 0x07, LCD\_GREEN = \sim (0x02) \& 0x07, LCD\_ \leftrightarrow (0x00) \& 0x07
  BLUE = \sim(0x01) & 0x07,
 LCD\_YELLOW = \sim (0x06) \& 0x07, LCD\_CYAN = \sim (0x03) \& 0x07, LCD\_PURPLE = \sim (0x05) \& 0x07,
 LCD_WHITE = \sim(0x07) & 0x07}

    void LCD_Init (void)

     Initialize the LCD.

    void LCD_setOutputMode (bool isOn)

     Toggle display output ON or OFF (OFF by default).
void LCD_setX (uint16_t x1, uint16_t x2)
     Set new x-coordinates to be written to. 0 <= x1 <= x2 <= X_{MAX}.
void LCD_setY (uint16_t y1, uint16_t y2)
     Set new y-coordinates to be written to. 0 \le y1 \le y2 \le Y_{MAX}.

    void LCD_setColor (LCD_Color_t color)

     Set the color value.
```

#### Writing

```
    enum LCD_WRITING_INFO { HEIGHT_CHAR = 8 , LEN_CHAR = 5 , NUM_LINES = 30 , NUM_COLS = 64 }
    void LCD_setCursor (uint16_t lineNum, uint16_t colNum)
        Set the cursor to line x, column y.
    void LCD_writeChar (unsigned char inputChar)
    void LCD_writeStr (void *asciiString)
    void LCD_writeFloat (float num)
```

#### **ASCII Characters (Punctuation)**

```
static const uint8_t FONT_SPACE [8]
static const uint8_t FONT_PERIOD [8]
static const uint8_t FONT_COLON [8]
```

#### **ASCII Characters (Numbers)**

```
static const uint8_t FONT_0 [8]
static const uint8_t FONT_1 [8]
static const uint8_t FONT_2 [8]
static const uint8_t FONT_3 [8]
static const uint8_t FONT_4 [8]
static const uint8_t FONT_5 [8]
static const uint8_t FONT_6 [8]
static const uint8_t FONT_7 [8]
static const uint8_t FONT_8 [8]
static const uint8_t FONT_9 [8]
```

### **ASCII Characters (Uppercase Letters)**

- static const uint8 t FONT UPPER A [8]
- static const uint8 t FONT UPPER B [8]
- static const uint8\_t FONT\_UPPER\_C [8]
- static const uint8 t FONT UPPER D [8]
- static const uint8\_t FONT\_UPPER\_E [8]
- static const uint8\_t FONT\_UPPER\_F [8]
- static const uint8 t FONT UPPER G [8]
- static const uint8\_t FONT\_UPPER\_H [8]
- static const uint8 t FONT UPPER I [8]
- static const uint8\_t FONT\_UPPER\_J [8]
- static const uint8 t FONT UPPER K [8]
- static const uint8\_t FONT\_UPPER\_L [8]
- static const uint8\_t FONT\_UPPER\_M [8]
- static const uint8\_t FONT\_UPPER\_N [8]
- static const uint8\_t FONT\_UPPER\_O [8]
- static const uint8\_t FONT\_UPPER\_P [8]
- static const uint8\_t FONT\_UPPER\_Q [8]
- static const uint8\_t FONT\_UPPER\_R [8]
   static const uint8\_t FONT\_UPPER\_R [8]
- static const uint8\_t FONT\_UPPER\_S [8]
- static const uint8\_t FONT\_UPPER\_T [8]
   static const uint8\_t FONT\_UPPER\_H [8]
- static const uint8\_t FONT\_UPPER\_U [8]
   static const uint8 t FONT\_UPPER\_V [8]
- static const uint8\_t FONT\_UPPER\_W [8]
- static const uint8 t FONT UPPER X [8]
- static const uint8 t FONT UPPER Y [8]
- static const uint8 t FONT UPPER Z [8]

### **ASCII Characters (Lowercase Letters)**

- static const uint8\_t FONT\_LOWER\_A [8]
- static const uint8 t FONT LOWER B [8]
- static const uint8\_t FONT\_LOWER\_C [8]
- static const uint8 t FONT LOWER D [8]
- static const uint8\_t FONT\_LOWER\_E [8]
- static const uint8\_t FONT\_LOWER\_F [8]
- static const uint8 t FONT LOWER G [8]
- static const uint8\_t FONT\_LOWER\_H [8]
- static const uint8\_t FONT\_LOWER\_I [8]
- static const uint8\_t FONT\_LOWER\_J [8]
- static const uint8\_t FONT\_LOWER\_K [8]
- static const uint8\_t FONT\_LOWER\_L [8]
- static const uint8\_t FONT\_LOWER\_M [8]
- static const uint8\_t FONT\_LOWER\_N [8]
- static const uint8\_t FONT\_LOWER\_O [8]
- static const uint8\_t FONT\_LOWER\_P [8]
- static const uint8\_t FONT\_LOWER\_Q [8]
- static const uint8\_t FONT\_LOWER\_R [8]
- static const uint8 t FONT LOWER S [8]
- static const uint8\_t FONT\_LOWER\_T [8]
- static const uint8\_t FONT\_LOWER\_U [8]
- static const uint8\_t FONT\_LOWER\_V [8]
- static const uint8\_t FONT\_LOWER\_W [8]
- static const uint8 t FONT LOWER X [8]
- static const uint8\_t FONT\_LOWER\_Y [8]
- static const uint8\_t FONT\_LOWER\_Z [8]

### **Helper Functions**

• static void LCD\_drawLine (uint16\_t center, uint16\_t lineWidth, bool is\_horizontal)

Helper function for drawing straight lines.

static void LCD\_updateCursor (void)

Update the cursor for after writing text on the display.

#### **Drawing**

```
    void LCD Draw (void)
```

Draw on the LCD.

void LCD\_Fill (void)

Fill the display with a single color.

void LCD\_drawHoriLine (uint16\_t yCenter, uint16\_t lineWidth)

Draw a horizontal line across the entire display.

void LCD\_drawVertLine (uint16\_t xCenter, uint16\_t lineWidth)

Draw a vertical line across the entire display.

• void LCD\_drawRectangle (uint16\_t x1, uint16\_t dx, uint16\_t y1, uint16\_t dy, bool isFilled)

Draw a rectangle of size  $dx \times dy$  onto the display. The bottom-left corner will be located at (x1, y1).

### 5.1.3.1 Detailed Description

Module for displaying graphs on an LCD via the ILI9341 module.

#### 5.1.3.2 Function Documentation

### LCD\_drawLine()

Helper function for drawing straight lines.

#### **Parameters**

center	Row or column that the line is centered on. center is increased or decreased if the line to be written would have gone out of bounds.
lineWidth	Width of the line. Should be a positive, odd number.
is_row true for horizontal line, false for vertical line	

#### LCD\_Init()

```
void LCD_Init (
     void )
```

Initialize the LCD.

### Postcondition

The display will be ready to accept commands, but output will be off.

### LCD\_setOutputMode()

```
void LCD_setOutputMode ( bool \ \textit{isOn} \ )
```

Toggle display output  $\mathtt{ON}$  or  $\mathtt{OFF}$  ( $\mathtt{OFF}$  by default).

#### **Parameters**

in	isOn	true to turn display output ON, false to turn OFF
----	------	---

#### Postcondition

When OFF, the display is cleared. When ON, the IC writes pixel data from its memory to the display.

### LCD\_setX()

Set new x-coordinates to be written to.  $0 \le x1 \le x2 \le X_{MAX}$ .

#### **Parameters**

in	x1	left-most x-coordinate
in	x2	right-most x-coordinate

### See also

```
LCD_setY()
```

## LCD\_setY()

Set new y-coordinates to be written to.  $0 <= y1 <= y2 <= Y_{MAX}$ .

#### **Parameters**

in	y1	lowest y-coordinate
in	y2	highest y-coordinate

```
LCD_setX()
```

### LCD\_setColor()

Set the color value.

#### **Parameters**

```
in color Color to use.
```

#### Postcondition

Outgoing pixel data will use the selected color.

### LCD\_Draw()

```
void LCD_Draw (
     void )
```

Draw on the LCD.

#### Precondition

Set the drawable area and the color to use for that area.

### Postcondition

The selected areas of the display will be drawn onto with the selected color.

### See also

```
LCD_setX(), LCD_setColor()
```

### LCD\_Fill()

```
void LCD_Fill (
     void )
```

Fill the display with a single color.

### Precondition

Select the desired color to fill the display with.

#### See also

LCD\_setColor()

## LCD\_drawHoriLine()

Draw a horizontal line across the entire display.

### Precondition

Select the desired color to use for the line.

#### **Parameters**

in	yCenter	y-coordinate to center the line on
in	lineWidth	width of the line; should be a positive, odd number

#### See also

LCD\_drawVertLine, LCD\_drawRectangle()

## LCD\_drawVertLine()

Draw a vertical line across the entire display.

#### Precondition

Select the desired color to use for the line.

#### **Parameters**

in	xCenter	x-coordinate to center the line on
in	lineWidth	width of the line; should be a positive, odd number

### See also

LCD\_drawHoriLine, LCD\_drawRectangle()

### LCD\_drawRectangle()

```
void LCD_drawRectangle ( \label{eq:lcd_lcd} \mbox{uint16\_t } x1, \\ \mbox{uint16\_t } dx, \\
```

```
uint16_t y1,
uint16_t dy,
bool isFilled )
```

Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).

### Precondition

Select the desired color to use for the rectangle.

#### **Parameters**

in	x1	lowest (left-most) x-coordinate
in	dx	length (horizontal distance) of the rectangle
in	y1	lowest (bottom-most) y-coordinate
in	dy	height (vertical distance) of the rectangle
in	isFilled	true to fill the rectangle, false to leave it unfilled

#### See also

LCD\_Draw(), LCD\_Fill(), LCD\_drawHoriLine(), LCD\_drawVertLine()

### LCD\_plotSample()

Plot a sample at coordinates (x, y).

#### **Parameters**

in	X	x-coordinate (i.e. sample number) in range [0, X_MAX]
in	У	y-coordinate (i.e. amplitude) in range [0, Y_MAX]
in	color	Color to use

### See also

```
LCD_setX(), LCD_setY(), LCD_setColor(), LCD_Draw()
```

### LCD\_setCursor()

Set the cursor to line x, column y.

## **Parameters**

in	lineNum	Line number to place characters. Should be in range [0, 30).
in	colNum	Column number to place characters. Should be in range [0, 64).

### 5.1.3.3 Variable Documentation

### FONT\_SPACE

```
const uint8_t FONT_SPACE[8] [static]

Initial value:
= {
     0x00,
     0x00
```

## FONT\_PERIOD

```
const uint8_t FONT_PERIOD[8] [static]
```

### Initial value:

## FONT\_COLON

```
const uint8_t FONT_COLON[8] [static]
```

```
FONT_0
const uint8_t FONT_0[8] [static]
Initial value:
    0x0E,
    0x11,
    0x13,
    0x15,
0x19,
    0x11,
    0x0E
FONT_1
const uint8_t FONT_1[8] [static]
Initial value:
    0x06,
    0x0E,
    0x16,
0x06,
```

## FONT\_2

0x06, 0x06, 0x06, 0x1F

```
const uint8_t FONT_2[8] [static]
```

### Initial value:

```
0x0E,
    0x11,
0x01,
    0x06,
     0x08,
     0x10,
    0x11,
     0x1F
```

### FONT\_3

```
const uint8_t FONT_3[8] [static]
```

```
0x11,
0x01,
    0x06,
    0x01,
    0x11,
    0x11,
0x0E
```

### FONT\_4

## FONT\_5

```
const uint8_t FONT_5[8] [static]
```

### Initial value:

## FONT\_6

```
const uint8_t FONT_6[8] [static]
```

### Initial value:

### FONT\_7

```
const uint8_t FONT_7[8] [static]
```

### FONT\_8

## FONT\_9

```
const uint8_t FONT_9[8] [static]
```

### Initial value:

```
0x0E,
0x11,
0x11,
0x0F,
0x01,
0x01,
0x11,
0x0E
```

## FONT\_UPPER\_A

```
const uint8_t FONT_UPPER_A[8] [static]
```

### Initial value:

```
0x0E,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
```

### FONT\_UPPER\_B

```
const uint8_t FONT_UPPER_B[8] [static]
```

## FONT\_UPPER\_C

## FONT\_UPPER\_D

```
const uint8_t FONT_UPPER_D[8] [static]
```

### Initial value:

```
0x1E,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11
```

## FONT\_UPPER\_E

```
const uint8_t FONT_UPPER_E[8] [static]
```

### Initial value:

### FONT\_UPPER\_F

```
const uint8_t FONT_UPPER_F[8] [static]
```

## FONT\_UPPER\_G

## FONT\_UPPER\_H

```
const uint8_t FONT_UPPER_H[8] [static]
```

### Initial value:

## FONT\_UPPER\_I

```
const uint8_t FONT_UPPER_I[8] [static]
```

### Initial value:

### FONT\_UPPER\_J

```
const uint8_t FONT_UPPER_J[8] [static]
```

## FONT\_UPPER\_K

## FONT\_UPPER\_L

```
const uint8_t FONT_UPPER_L[8] [static]
```

### Initial value:

## FONT\_UPPER\_M

```
const uint8_t FONT_UPPER_M[8] [static]
```

### Initial value:

### FONT\_UPPER\_N

```
const uint8_t FONT_UPPER_N[8] [static]
```

## FONT\_UPPER\_O

```
const uint8_t FONT_UPPER_O[8] [static]

Initial value:
= {
          0x0E,
          0x11,
          0x0E
}
```

## FONT\_UPPER\_P

```
const uint8_t FONT_UPPER_P[8] [static]
```

### Initial value:

```
0x1E,
0x11,
0x11,
0x11,
0x10,
0x10,
0x10,
0x10,
0x10
```

## FONT\_UPPER\_Q

```
const uint8_t FONT_UPPER_Q[8] [static]
```

### Initial value:

### FONT\_UPPER\_R

```
const uint8_t FONT_UPPER_R[8] [static]
```

## FONT\_UPPER\_S

## FONT\_UPPER\_T

```
const uint8_t FONT_UPPER_T[8] [static]
```

### Initial value:

```
0x1F,
0x04,
0x04,
0x04,
0x04,
0x04,
0x04,
0x04,
```

## FONT\_UPPER\_U

```
const uint8_t FONT_UPPER_U[8] [static]
```

### Initial value:

```
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
0x11,
```

### FONT\_UPPER\_V

```
const uint8_t FONT_UPPER_V[8] [static]
```

## FONT\_UPPER\_W

## FONT\_UPPER\_X

```
const uint8_t FONT_UPPER_X[8] [static]
```

### Initial value:

## FONT\_UPPER\_Y

```
const uint8_t FONT_UPPER_Y[8] [static]
```

### Initial value:

```
0x11,
0x11,
0x11,
0x04,
0x04,
0x04,
0x04,
0x04,
```

### FONT\_UPPER\_Z

```
const uint8_t FONT_UPPER_Z[8] [static]
```

## FONT\_LOWER\_A

## FONT\_LOWER\_B

```
const uint8_t FONT_LOWER_B[8] [static]
```

### Initial value:

## FONT\_LOWER\_C

```
const uint8_t FONT_LOWER_C[8] [static]
```

### Initial value:

## FONT\_LOWER\_D

```
const uint8_t FONT_LOWER_D[8] [static]
```

## FONT\_LOWER\_E

## FONT\_LOWER\_F

```
const uint8_t FONT_LOWER_F[8] [static]
```

### Initial value:

## FONT\_LOWER\_G

```
const uint8_t FONT_LOWER_G[8] [static]
```

### Initial value:

### FONT\_LOWER\_H

```
const uint8_t FONT_LOWER_H[8] [static]
```

```
0x10,
0x10,
0x10,
0x1E,
0x11,
0x11,
0x11,
0x00
```

## FONT\_LOWER\_I

## FONT\_LOWER\_J

```
const uint8_t FONT_LOWER_J[8] [static]
```

### Initial value:

```
0x02,
0x00,
0x00,
0x06,
0x02,
0x02,
0x12,
0x12,
0x0C
```

## FONT\_LOWER\_K

```
const uint8_t FONT_LOWER_K[8] [static]
```

### Initial value:

```
0x10,
0x10,
0x10,
0x12,
0x14,
0x18,
0x14,
0x12,
0x00
```

### FONT\_LOWER\_L

```
const uint8_t FONT_LOWER_L[8] [static]
```

## FONT\_LOWER\_M

## FONT\_LOWER\_N

```
const uint8_t FONT_LOWER_N[8] [static]
```

### Initial value:

```
0x00,
0x00,
0x10,
0x11,
0x11,
0x11,
0x11,
0x00
```

## FONT\_LOWER\_O

```
const uint8_t FONT_LOWER_O[8] [static]
```

### Initial value:

### FONT\_LOWER\_P

```
const uint8_t FONT_LOWER_P[8] [static]
```

# FONT\_LOWER\_Q

# FONT\_LOWER\_R

```
const uint8_t FONT_LOWER_R[8] [static]
```

## Initial value:

# FONT\_LOWER\_S

```
const uint8_t FONT_LOWER_S[8] [static]
```

### Initial value:

```
0x00,
0x00,
0x00,
0x0E,
0x10,
0x0E,
0x01,
0x0E,
```

## FONT\_LOWER\_T

```
const uint8_t FONT_LOWER_T[8] [static]
```

## Initial value:

# FONT\_LOWER\_U

# FONT\_LOWER\_V

```
const uint8_t FONT_LOWER_V[8] [static]
```

## Initial value:

```
0x00,
0x00,
0x11,
0x11,
0x11,
0x0A,
0x04,
0x00
```

# FONT\_LOWER\_W

```
const uint8_t FONT_LOWER_W[8] [static]
```

### Initial value:

## FONT\_LOWER\_X

```
const uint8_t FONT_LOWER_X[8] [static]
```

## Initial value:

# FONT\_LOWER\_Y

# FONT\_LOWER\_Z

```
const uint8_t FONT_LOWER_Z[8] [static]
```

### Initial value:

```
0x00,
0x00,
0x1F,
0x02,
0x04,
0x08,
0x1F,
0x00
```

## 5.1.4 QRS Detector

Collaboration diagram for QRS Detector:



#### **Files**

• file QRS.c

Source code for QRS detection module.

• file QRS.h

Header file for QRS detection module.

#### Macros

- #define QRS\_NUM\_FID\_MARKS 40
- #define FLOAT\_COMPARE\_TOLERANCE (float32\_t)(1E-5f)
- #define IS\_GREATER(X, Y) (bool) ((X Y) > FLOAT\_COMPARE\_TOLERANCE)
- #define IS\_PEAK(X\_MINUS\_1, X, X\_PLUS\_1) (bool) (IS\_GREATER(X, X\_MINUS\_1) && IS\_GREATER(X, X\_PLUS\_1))
- #define QRS\_SAMP\_FREQ ((uint32\_t) 200)
- #define QRS SAMP PERIOD SEC ((float32 t) 0.005f)
- #define QRS\_NUM\_SAMP ((uint16 t) (1 << 11))

#### **Variables**

```
    struct {
        bool isCalibrated
        float32_t signalLevel
            estimated signal level
        float32_t noiseLevel
            estimated noise level
        float32_t threshold
            amplitude threshold
        uint16_t fidMarkArray [QRS_NUM_FID_MARKS]
        float32_t utilityBuffer1 [QRS_NUM_FID_MARKS]
            array to hold fidMark indices
        float32_t utilityBuffer2 [QRS_NUM_FID_MARKS]
    } Detector = { false, 0.0f, 0.0f, 0.0f, { 0 }, { 0 }, { 0 }, { 0 }}
```

# **Digital Filters**

• enum {

```
NUM_STAGES_BANDPASS = 4 , NUM_COEFF_HIGHPASS = NUM_STAGES_BANDPASS * 5 , STATE ← BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4 , NUM_COEFF_DERFILT = 5 , BLOCK_SIZE_DERFILT = 1 , STATE_BUFF_SIZE_DERFILT = NUM_COEFF_DERFILT + BLOCK_SIZE ← DERFILT - 1 , BLOCK_SIZE_MOVAVG = 1 , NUM_COEFF_MOVAVG = 10 , STATE_BUFF_SIZE_MOVAVG = NUM_COEFF_MOVAVG + BLOCK_SIZE_MOVAVG - 1 }
```

- typedef arm biguad casd df1 inst f32 IIR Filt t
- typedef arm\_fir\_instance\_f32 FIR\_Filt\_t
- static const float32 t COEFF BANDPASS [NUM COEFF HIGHPASS]
- static const float32 t COEFF DERFILT [NUM COEFF DERFILT]
- static const float32\_t COEFF\_MOVAVG [NUM\_COEFF\_MOVAVG]
- static float32 t stateBuffer\_bandPass [STATE\_BUFF\_SIZE\_BANDPASS] = { 0 }
- static const IIR\_Filt\_t bandpassFiltStruct = { NUM\_STAGES\_BANDPASS, stateBuffer\_bandPass, COEFF
   —BANDPASS }
- static const IIR\_Filt\_t \*const bandpassFilter = &bandpassFiltStruct
- static float32\_t stateBuffer\_DerFilt [STATE\_BUFF\_SIZE\_DERFILT] = { 0 }
- static const FIR\_Filt\_t derivativeFiltStruct = { NUM\_COEFF\_DERFILT, stateBuffer\_DerFilt, COEFF\_
   DERFILT }
- static const FIR\_Filt\_t \*const derivativeFilter = &derivativeFiltStruct
- static float32\_t stateBuffer\_MovingAvg [STATE\_BUFF\_SIZE\_MOVAVG] = { 0 }
- static const FIR\_Filt\_t movingAvgFiltStruct = { NUM\_COEFF\_MOVAVG, stateBuffer\_MovingAvg, COEFF ← MOVAVG }
- static const FIR Filt t \*const movingAverageFilter = &movingAvgFiltStruct

#### Implementation-specific Functions

- static uint8\_t QRS\_findFiducialMarks (const float32\_t yn[], uint16\_t fidMarkArray[])
   Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").
- static void QRS\_initLevels (const float32\_t yn[], float32\_t \*sigLvlPtr, float32\_t \*noiseLvlPtr)

  Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.
- static float32\_t QRS\_updateLevel (const float32\_t peakAmplitude, float32\_t level)

Update the signal level (if a fiducial mark is a confirmed peak) or the noise level (if a fiducial mark is rejected).

static float32\_t QRS\_updateThreshold (const float32\_t signalLevel, const float32\_t noiseLevel)

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

#### **Interface Functions**

void QRS\_Init (void)

Initialize the QRS detector.

void QRS\_Preprocess (const float32\_t xn[], float32\_t yn[])

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

• float32\_t QRS\_applyDecisionRules (const float32\_t yn[])

Calculate the average heart rate (HR) using predetermined decision rules.

float32\_t QRS\_runDetection (const float32\_t xn[], float32\_t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

#### 5.1.4.1 Detailed Description

Module for analyzing ECG data to determine heart rate.

#### 5.1.4.2 Function Documentation

# QRS\_findFiducialMarks()

Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").

#### **Parameters**

in	yn	Array containing the preprocessed ECG signal $y[n]$
in	fidMarkArray	Array to place the fiducial mark's sample indices into.
out	numMarks	Number of identified fiducial marks

#### Postcondition

fidMarkArray will hold the values of the fiducial marks.

The fiducial marks must be spaced apart by at least 200 [ms] (40 samples @ fs = 200 [Hz]). If a peak is found within this range, the one with the largest amplitude is taken to be the correct peak and the other is ignored.

#### QRS\_initLevels()

Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.

## **Parameters**

in	yn	Array containing the preprocessed ECG signal $y[n]$
in	sigLvlPtr	Pointer to variable holding the signal level value.
in	noiseLvlPtr	Pointer to variable holding the noise level value.

#### Postcondition

The signal and noise levels are initialized.

### QRS\_updateLevel()

Update the signal level (if a fiducial mark is a confirmed peak) or the noise level (if a fiducial mark is rejected).

### **Parameters**

in	peakAmplitude	Amplitude of the fiducial mark in signal $y[n]$
in	level	The current value of the signal level or noise level
out	newLevel	The updated value of the signal level or noise level

```
signalLevel_1 = f(peakAmplitude, signalLevel_0) = \frac{1}{8}peakAmplitude + \frac{7}{8}signalLevel_0 noiseLevel_1 = f(peakAmplitude, noiseLevel_0) = \frac{1}{8}peakAmplitude + \frac{7}{8}noiseLevel_0
```

### QRS\_updateThreshold()

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

## **Parameters**

in	signalLevel	Current signal level.
in	noiseLevel	Current noise level.
out	threshold	New threshold to use for next comparison.

#### See also

QRS\_updateLevel(), QRS\_applyDecisionRules

threshold = f(signalLevel, noiseLevel) = noiseLevel + 0.25(signalLevel - noiseLevel)

## QRS\_Init()

```
void QRS_Init (
     void )
```

Initialize the QRS detector.

#### Note

This function isn't necessary anymore, but I'm keeping it here just in case.

This function originally initialized the filter structs but now does nothing since those have been made const and their initialization functions have been removed entirely.

### QRS\_Preprocess()

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

#### Precondition

Fill input buffer xn with raw or lightly preprocessed ECG data.

## Parameters

in	xn	Array of raw ECG signal values.	
in	yn	Array used to store preprocessed ECG signal values.	


#### Postcondition

The preprocessed signal data y[n] is stored in yn and is ready to be analyzed to calculate the heart rate in [bpm].

## See also

QRS\_applyDecisionRules()

This function uses the same overall preprocessing pipeline as the original Pan-Tompkins algorithm, but the high-pass and low-pass filters have been replaced with ones generated using Scipy.

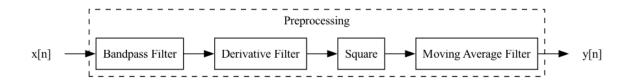

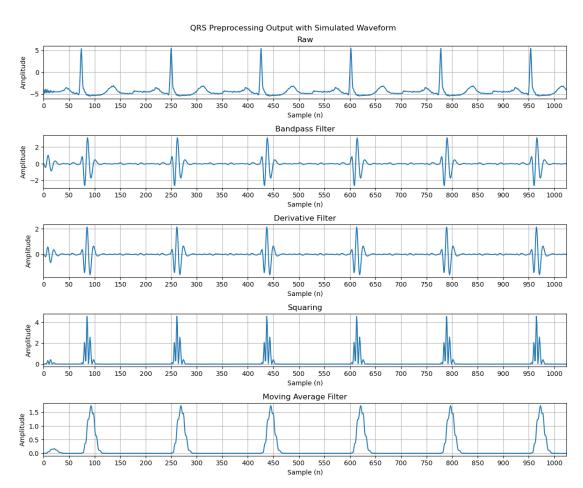


Figure 3 Output of each preprocessing step.

### QRS\_applyDecisionRules()

```
float32_t QRS_applyDecisionRules ( {\tt const\ float32\_t\ yn[]\ )}
```

Calculate the average heart rate (HR) using predetermined decision rules.

## Precondition

Preprocess the raw ECG data.

#### **Parameters**

in	yn	Array of preprocessed ECG signal values.
out	heartRate	Average heart rate in [bpm].

### Postcondition

Certain information (signal/noise levels, thresholds, etc.) is retained between calls and used to improve further detection.

### Warning

The current implementation only processes one block at a time and discards the data immediately after, so peaks that are cut off between one block and another might not be being counted.

#### See also

QRS\_Preprocess()

### QRS\_runDetection()

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

This function simply combines the preprocessing and decision rules functions into a single function.

#### **Parameters**

in	xn	Array of raw ECG signal values.
in	yn	Array used to hold preprocessed ECG signal values.
out	heartRate	Average heart rate in [bpm].

#### Postcondition

yn will contain the preprocessed data.

Certain information (signal/noise levels, thresholds, etc.) is retained between calls.

#### See also

QRS\_Preprocess(), QRS\_applyDecisionRules()

1.0485996007919312f, -0.2961403429508209f,

## 5.1.4.3 Variable Documentation

## COEFF\_BANDPASS

```
const float32_t COEFF_BANDPASS[NUM_COEFF_HIGHPASS] [static]

Initial value:
= {
     0.002937758108600974f, 0.005875516217201948f, 0.002937758108600974f,
```

5.2 Common 43

```
1.0f, 2.0f, 1.0f,

1.3876197338104248f, -0.492422878742218f,

1.0f, -2.0f, 1.0f,

1.3209134340286255f, -0.6327387690544128f,

1.0f, -2.0f, 1.0f,

1.6299355030059814f, -0.7530401945114136f,
```

# COEFF\_DERFILT

```
const float32_t COEFF_DERFILT[NUM_COEFF_DERFILT] [static]
Initial value:
= {
    -0.125f, -0.25f, 0.0f, 0.25f, 0.125f
```


### COEFF\_MOVAVG

```
const float32_t COEFF_MOVAVG[NUM_COEFF_MOVAVG] [static]
```

#### Initial value:

#### 5.2 Common

Collaboration diagram for Common:

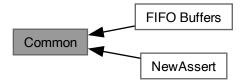

### Modules

- FIFO Buffers
- NewAssert

# **Files**

· file NewAssert.c

Source code for custom assert implementation.

• file NewAssert.h

 ${\it Header file for custom} \ {\it assert implementation}.$ 

### **Functions**

· void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

### 5.2.1 Detailed Description

Modules that are used by multiple layers and/or don't fit into any one layer.

#### 5.2.2 Function Documentation

#### Assert()

```
void Assert (
          bool condition )
```

Custom assert implementation that is more lightweight than the one from newlib.

#### **Parameters**

in <i>condition</i>	Conditional to test.
---------------------	----------------------

## Postcondition

```
If condition == true, the function simply returns.
If condition == false, a breakpoint is initiated.
```

### 5.2.3 FIFO Buffers

Collaboration diagram for FIFO Buffers:



## Files

• file Fifo.c

Source code for FIFO buffer module.

• file Fifo.h

Header file for FIFO buffer implementation.

5.2 Common 45

#### **Data Structures**

struct Fifo\_t

#### **Macros**

#define FIFO\_POOL\_SIZE 5

#### **Functions**

Fifo\_t FIFO\_Init (volatile uint32\_t buffer[], const uint32\_t N)
 Initialize a FIFO buffer of length N.

#### **Variables**

- static FifoStruct\_t fifoPool [FIFO\_POOL\_SIZE] = { 0 }
   pre-allocated pool
- static uint8\_t numFreeFifos = FIFO\_POOL\_SIZE

### **Basic Operations**

- void FIFO\_Put (volatile Fifo\_t fifo, const uint32\_t val)
  - Add a value to the end of the buffer.
- uint32\_t FIFO\_Get (volatile Fifo\_t fifo)

Remove the first value of the buffer.

void FIFO\_TransferOne (volatile Fifo\_t srcFifo, volatile Fifo\_t destFifo)

Transfer a value from one FIFO buffer to another.

## **Bulk Removal**

- void FIFO\_Flush (volatile Fifo\_t fifo, uint32\_t outputBuffer[])
  - Empty the FIFO buffer's contents into an array.
- void FIFO\_Reset (volatile Fifo\_t fifo)

Reset the FIFO buffer.

• void FIFO\_TransferAll (volatile Fifo\_t srcFifo, volatile Fifo\_t destFifo)

Transfer the contents of one FIFO buffer to another.

### **Peeking**

uint32\_t FIFO\_PeekOne (volatile Fifo\_t fifo)

See the first element in the FIFO without removing it.

void FIFO\_PeekAll (volatile Fifo\_t fifo, uint32\_t outputBuffer[])

See the FIFO buffer's contents without removing them.

### **Status Checks**

```
• bool FIFO_isFull (volatile Fifo_t fifo)
```

Check if the FIFO buffer is full.

• bool FIFO\_isEmpty (volatile Fifo\_t fifo)

Check if the FIFO buffer is empty.

• uint32\_t FIFO\_getCurrSize (volatile Fifo\_t fifo)

Get the current size of the FIFO buffer.

## 5.2.3.1 Detailed Description

Module for using the "first-in first-out (FIFO) buffer" data structure.

### 5.2.3.2 Function Documentation

### FIFO\_Init()

Initialize a FIFO buffer of length N.

#### **Parameters**

in	buffer	Array of size ${\tt N}$ to be used as FIFO buffer
in	Ν	Length of buffer. Usable length is ${\tt N}-{\tt 1}.$
out	fifo	pointer to the FIFO buffer

### Postcondition

The number of available FIFO buffers is reduced by 1.

TODO: Add details

### FIFO\_Put()

Add a value to the end of the buffer.

# **Parameters**

in	fifo	Pointer to FIFO object
in	val	Value to add to the buffer.

5.2 Common 47

### Postcondition

If the FIFO is not full, val is placed in the buffer. If the FIFO is full, nothing happens.

Bug To use floats (AKA float32\_t), type-punning is necessary.

```
// type-punning example
float num = 4.252603;
FIFO_Put(fifo, *((uint32_t *) &num));
```

### FIFO\_Get()

Remove the first value of the buffer.

#### **Parameters**

in	fifo	Pointer to FIFO object
out	val	First sample in the FIFO.

### Postcondition

If the FIFO is not empty, the next value is return If the FIFO is empty, 0 is returned.

Bug To use floats (AKA float32\_t), type-punning is necessary.

```
// type-punning example
float num;
*((uint32_t *) &num) = FIFO_Get(fifo);
```

## FIFO\_TransferOne()

Transfer a value from one FIFO buffer to another.

#### Precondition

Initialize both FIFO buffers.

## **Parameters**

i	n	srcFifo	Pointer to source FIFO buffer.
i	n	destFifo	Pointer to destination FIFO buffer.

#### Postcondition

A value is removed from srcFifo and placed in destFifo.

# FIFO\_Flush()

Empty the FIFO buffer's contents into an array.

### **Parameters**

in	fifo	Pointer to source FIFO buffer.	
in	outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.	

#### Postcondition

The FIFO buffer's contents are transferred to the output buffer.

## FIFO\_Reset()

Reset the FIFO buffer.

### **Parameters**

in fifo Pointer to FIFO buffer.
---------------------------------

#### Postcondition

The FIFO is now considered empty. The underlying buffer's contents are not affected.

# FIFO\_TransferAll()

Transfer the contents of one FIFO buffer to another.

#### **Parameters**

	in <i>srcFifo</i>		Pointer to source FIFO buffer.	
ſ	in	destFifo	Pointer to destination FIFO buffer.	

5.2 Common 49

## FIFO\_PeekOne()

See the first element in the FIFO without removing it.

### **Parameters**

in	fifo	Pointer to FIFO object
out	val	First sample in the FIFO.

## FIFO\_PeekAll()

See the FIFO buffer's contents without removing them.

#### **Parameters**

in	fifo	Pointer to source FIFO buffer.	
in	outputBuffer	Array to output values to. Should be the same length as the FIFO buffer.	

### Postcondition

The FIFO buffer's contents are copied to the output buffer.

## FIFO\_isFull()

Check if the FIFO buffer is full.

#### **Parameters**

in	fifo	Pointer to the FIFO buffer.
out	true	The FIFO buffer is full.
out	false	The FIFO buffer is not full.

# FIFO\_isEmpty()

Check if the FIFO buffer is empty.

## **Parameters**

in	fifo	Pointer to the FIFO buffer.
out	true	The FIFO buffer is empty.
out	false	The FIFO buffer is not empty.

# FIFO\_getCurrSize()


Get the current size of the FIFO buffer.

### **Parameters**

in	fifo	Pointer to the FIFO buffer.
out	size	Current number of values in the FIFO buffer.

# 5.2.4 NewAssert

Collaboration diagram for NewAssert:

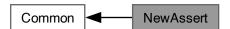


 $\label{eq:module for using a custom} \ \texttt{assert implementation}.$ 

## 5.3 Device Drivers

Low level device driver modules.

Collaboration diagram for Device Drivers:

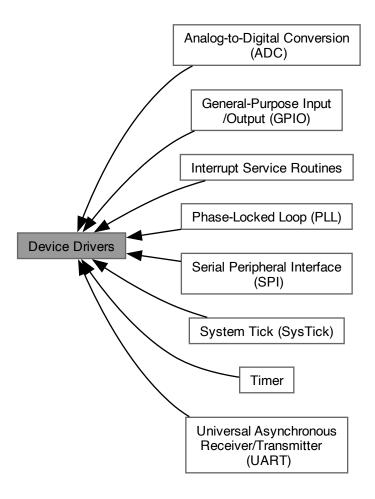

### Modules

- Analog-to-Digital Conversion (ADC)
- General-Purpose Input/Output (GPIO)
- Phase-Locked Loop (PLL)
- Serial Peripheral Interface (SPI)
- System Tick (SysTick)
- Timei
- Universal Asynchronous Receiver/Transmitter (UART)
- Interrupt Service Routines

## 5.3.1 Detailed Description

Low level device driver modules.

These modules contain functions for interfacing with the TM4C123 microcontroller's built-in peripherals.

## 5.3.2 Analog-to-Digital Conversion (ADC)

Collaboration diagram for Analog-to-Digital Conversion (ADC):



#### **Files**

• file ADC.c

Source code ffor analog-to-digital conversion (ADC) module.

• file ADC.h

Header file for analog-to-digital conversion (ADC) module.

#### **Functions**

void ADC\_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

## 5.3.2.1 Detailed Description

Functions for differential-input analog-to-digital conversion.

#### 5.3.2.2 Function Documentation

## ADC\_Init()

```
void ADC_Init (
     void )
```

Initialize ADC0 as a single-input analog-to-digital converter.

## Postcondition

Analog input 8 (Ain8) – AKA GPIO pin PE5 – captures samples when triggered by one of the hardware timers, and initiates an interrupt once sample capture is complete.

## 5.3.3 General-Purpose Input/Output (GPIO)

Collaboration diagram for General-Purpose Input/Output (GPIO):



Functions for using general-purpose input/output (GPIO) ports.

## 5.3.4 Phase-Locked Loop (PLL)

Collaboration diagram for Phase-Locked Loop (PLL):



### **Files**

- file PLL.c
  - Implementation details for phase-lock-loop (PLL) functions.
- file PLL.h

Driver module for activating the phase-locked-loop (PLL).

#### **Functions**

void PLL\_Init (void)

Initialize the phase-locked-loop to change the bus frequency.

# 5.3.4.1 Detailed Description

Function for initializing the phase-locked loop.

#### 5.3.4.2 Function Documentation

### PLL\_Init()

```
void PLL_Init (
     void )
```

Initialize the phase-locked-loop to change the bus frequency.

#### Postcondition

The bus frequency is now running at 80 [MHz].

## 5.3.5 Serial Peripheral Interface (SPI)

Collaboration diagram for Serial Peripheral Interface (SPI):



#### **Files**

• file SPI.c

Source code for serial peripheral interface (SPI) module.

• file SPI.h

Header file for serial peripheral interface (SPI) module.

## Macros

- #define SPI\_SET\_DC() (GPIO\_PORTA\_DATA\_R |= 0x40)
- #define  $SPI\_CLEAR\_DC()$  (GPIO\_PORTA\_DATA\_R &=  $\sim$ (0x40))
- #define SPI IS BUSY (SSI0 SR R & 0x10)
- #define SPI\_TX\_ISNOTFULL (SSI0\_SR\_R & 0x02)
- #define SPI\_CLEAR\_RESET() (GPIO\_PORTA\_DATA\_R &= ~(0x80))
- #define **SPI\_SET\_RESET**() (GPIO\_PORTA\_DATA\_R |= 0x80)

#### **Enumerations**

• enum {

 ${\bf SPI\_CLK\_PIN} = {\bf GPIO\_PIN2} \;, \; {\bf SPI\_CS\_PIN} = {\bf GPIO\_PIN3} \;, \; {\bf SPI\_RX\_PIN} = {\bf GPIO\_PIN4} \;, \; {\bf SPI\_TX\_PIN} = {\bf GPIO\_PIN5} \;, \\ {\bf GPIO\_PIN5} \;, \; {\bf SPI\_CS\_PIN} = {\bf GPIO\_PIN5} \;, \\ {\bf SPI\_CS\_PIN5} = {\bf GPIO\_PIN5} \;, \\$ 

$$\begin{split} \textbf{SPI\_DC\_PIN} &= \texttt{GPIO\_PIN6} \;, \; \textbf{SPI\_RESET\_PIN} = \texttt{GPIO\_PIN7} \;, \; \textbf{SPI\_SSI0\_PINS} = (\texttt{SPI\_CLK\_PIN} \mid \texttt{SPI\_} \leftrightarrow \texttt{CS\_PIN} \mid \texttt{SPI\_RX\_PIN} \mid \texttt{SPI\_TX\_PIN}) \;, \; \textbf{SPI\_GPIO\_PINS} = (\texttt{SPI\_DC\_PIN} \mid \texttt{SPI\_RESET\_PIN}) \;, \\ \textbf{SPI\_ALL\_PINS} &= (\texttt{SPI\_SSI0\_PINS} \mid \texttt{SPI\_GPIO\_PINS}) \; \end{split}$$

#### **Functions**

void SPI\_Init (void)

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

uint8\_t SPI\_Read (void)

Read data from the serial port.

void SPI\_WriteCmd (uint8\_t cmd)

Write a command to the serial port.

void SPI\_WriteData (uint8\_t data)

Write data to the serial port.

#### 5.3.5.1 Detailed Description

Functions for SPI-based communication via SSI0 peripheral.

#### 5.3.5.2 Macro Definition Documentation

#### SPI\_SET\_DC

 $\#define SPI\_SET\_DC() (GPIO\_PORTA\_DATA_R = 0x40)$ 

TM4C Pin	Function	ILI9341 Pin	Description
PA2	SSI0Clk	CLK	Serial clock signal
PA3	SSI0Fss	CS	Chip select signal
PA4	SSI0Rx	MISO	TM4C (M) input, LCD (S) output
PA5	SSI0Tx	MOSI	TM4C (M) output, LCD (S) input
PA6	GPIO	D/C	Data = 1, Command = 0
PA7	GPIO	RESET	Reset the display (negative logic/active LOW)

```
Clk. Polarity = steady state low (0)
Clk. Phase = rising clock edge (0)
```

### 5.3.5.3 Function Documentation

#### SPI\_Init()

```
void SPI_Init (
     void )
```

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

The bit rate BR is set using the (positive, even-numbered) clock prescale divisor CPSDVSR and the SCR field in the SSI Control 0 (CR0) register:

$$BR = f_{bus}/(CPSDVSR * (1 + SCR))$$

The ILI9341 driver has a min. read cycle of 150 [ns] and a min. write cycle of 100 [ns], so the bit rate BR is set to be equal to the bus frequency (  $f_{bus}=80[MHz]$ ) divided by 8, allowing a bit rate of 10 [MHz], or a period of 100 [ns].

# SPI\_Read()

```
uint8_t SPI_Read (
     void )
```

Read data from the serial port.

## Precondition

Initialize the SPI module.

#### **Parameters**

out data 8-bit data received from the hardware	e's receive FIFO.
--	-------------------

# SPI\_WriteCmd()

Write a command to the serial port.

## Precondition

Initialize the SPI module.

### **Parameters**

```
in cmd 8-bit command to write.
```

## Postcondition

The D/C pin is cleared.

The data is added to the hardware's transmit FIFO.

# SPI\_WriteData()

Write data to the serial port.

# Precondition

Initialize the SPI module.

#### **Parameters**

in data 8-bit data to write.
------------------------------


#### Postcondition

The D/C pin is set.

The data is added to the hardware's transmit FIFO.

### 5.3.6 System Tick (SysTick)

Collaboration diagram for System Tick (SysTick):

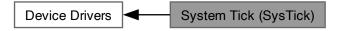

### **Files**

• file SysTick.c

Implementation details for SysTick functions.

file SysTick.h

Driver module for using SysTick-based timing and/or interrupts.

# **Functions**

• void SysTick\_Timer\_Init (void)

Initialize SysTick for timing purposes.

• void SysTick\_Wait1ms (uint32\_t delay\_ms)

Delay for specified amount of time in [ms]. Assumes f\_bus = 80[MHz].

void SysTick\_Interrupt\_Init (uint32\_t time\_ms)

Initialize SysTick for interrupts.

#### 5.3.6.1 Detailed Description

Functions for timing and periodic interrupts via SysTick.

### 5.3.6.2 Function Documentation

### SysTick\_Interrupt\_Init()

Initialize SysTick for interrupts.

#### **Parameters**

```
time_ms Time in [ms] between interrupts. Cannot be more than 200[ms].
```

#### 5.3.7 Timer

Collaboration diagram for Timer:



#### **Files**

• file Timer.c

Source code for Timer module.

· file Timer.h

Device driver for general-purpose timer modules.

### **Data Structures**

• struct Timer\_t

### **Enumerations**

```
    enum {
        TIMERO_BASE = 0x40030000 , TIMER1_BASE = 0x40031000 , TIMER2_BASE = 0x40032000 , TIMER3
        __BASE = 0x40033000 ,
        TIMER4_BASE = 0x40034000 , TIMER5_BASE = 0x40035000 }
        enum REGISTER_OFFSETS {
            CONFIG = 0x00 , MODE = 0x04 , CTRL = 0x0C , INT_MASK = 0x18 ,
            INT_CLEAR = 0x24 , INTERVAL = 0x28 , VALUE = 0x054 }
        enum timerName_t {
            TIMER0 , TIMER1 , TIMER2 , TIMER3 ,
            TIMER4 , TIMER5 }
        enum timerMode_t { ONESHOT , PERIODIC }
        enum timerDirection_t { UP , DOWN }
            | Enum
```

#### **Functions**

Timer\_t Timer\_Init (timerName\_t timerName)

Initialize a hardware timer.

void Timer\_Deinit (Timer\_t timer)

De-initialize a hardware timer.

• timerName\_t Timer\_getName (Timer\_t timer)

Get the name of a timer object.

bool Timer\_isInit (Timer\_t timer)

Check if a timer object is initialized.

• void Timer\_setMode (Timer\_t timer, timerMode\_t timerMode, timerDirection\_t timerDirection)

Set the mode for the timer.

void Timer\_enableAdcTrigger (Timer\_t timer)

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

void Timer disableAdcTrigger (Timer t timer)

Disable ADC sample capture on timeout.

void Timer\_enableInterruptOnTimeout (Timer\_t timer)

Set the timer to trigger an interrupt on timeout.

void Timer disableInterruptOnTimeout (Timer t timer)

Stop the timer from triggering interrupts on timeout.

void Timer\_clearInterruptFlag (Timer\_t timer)

Clear the timer's interrupt flag to acknowledge the interrupt.

void Timer\_setInterval\_ms (Timer\_t timer, uint32\_t time\_ms)

Set the interval to use.

- uint32\_t Timer\_getCurrentValue (Timer\_t timer)
- void Timer\_Start (Timer\_t timer)

Start the timer.

void Timer\_Stop (Timer\_t timer)

Stop the timer.

bool Timer\_isCounting (Timer\_t timer)

Check if the timer is currently counting.

void Timer\_Wait1ms (Timer\_t timer, uint32\_t time\_ms)

Initiate a time delay.

#### Variables

static TimerStruct\_t TIMER\_POOL [6]

#### 5.3.7.1 Detailed Description

Functions for timing and periodic interrupts via general-purpose timer modules (GPTM).

## 5.3.7.2 Enumeration Type Documentation

#### timerMode t

enum timerMode\_t

## Enumerator

ONESHOT	the timer runs once, then stops
PERIODIC	the timer runs continuously once started

# $timer Direction\_t$

```
enum timerDirection_t
```

#### Enumerator

UP	the timer starts and 0 and counts to the reload value
DOWN	the timer starts at its reload value and counts down

### 5.3.7.3 Function Documentation

# Timer\_Init()

Initialize a hardware timer.

### **Parameters**

in	timerName	Name of the hardware timer to use.
out	timer	Pointer to timer object.

## Postcondition

The timer is ready to be configured and used.

#### See also

```
Timer_isInit(), Timer_Deinit()
```

# Timer\_Deinit()

De-initialize a hardware timer.

## **Parameters**

in timerName Name of the hardware timer to u	ıse.
--	------

### Postcondition

The hardware timer is no longer initialized or receiving power.

#### See also

```
Timer_Init(), Timer_isInit()
```

## Timer\_getName()

Get the name of a timer object.

#### **Parameters**

in	timer	Pointer to timer object.
out	timer←	Name of the hardware timer being used.
	Name_t	

## Timer\_isInit()

Check if a timer object is initialized.

# **Parameters**

in	timer	Pointer to timer object.
out	true	The timer is initialized.
out	false	The timer is not initialized.

### See also

```
Timer_Init(), Timer_Deinit()
```

# Timer\_setMode()

Set the mode for the timer.

#### **Parameters**

in	timer	Pointer to timer object.
in	timerMode	Mode for hardware timer to use.
in	timerDirection	Direction to count towards.

## Timer\_enableAdcTrigger()

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

## Precondition

Initialize and configure an ADC module to be timer-triggered.

#### **Parameters**

in	timer	Pointer to timer object.
----	-------	--------------------------

## Postcondition

A timeout event triggers ADC sample capture.

#### See also

Timer\_disableAdcTrigger()

## Timer\_disableAdcTrigger()

Disable ADC sample capture on timeout.

### Precondition

Initialize and configure an ADC module to be timer-triggered.

#### **Parameters**

in	timer	Pointer to timer object.

### Postcondition

A timeout event no longer triggers ADC sample capture.

#### See also

Timer\_enableAdcTrigger()

## Timer\_enableInterruptOnTimeout()

Set the timer to trigger an interrupt on timeout.

#### Precondition

Configure the interrupt service routine using the ISR module.

### **Parameters**

in	timer	Pointer to timer object.
----	-------	--------------------------

## Postcondition

Upon timeout, an interrupt is triggered.

## See also

Timer\_disableInterruptOnTimeout()

# Timer\_disableInterruptOnTimeout()

```
void Timer_disableInterruptOnTimeout ( {\tt Timer\_t\ \it timer}\ )
```

Stop the timer from triggering interrupts on timeout.

#### **Parameters**

in	timer	Pointer to timer object.
----	-------	--------------------------

#### Postcondition

Timeout no longer triggers ADC sample capture.

### See also

Timer\_enableInterruptOnTimeout()

## Timer\_clearInterruptFlag()

Clear the timer's interrupt flag to acknowledge the interrupt.

### Precondition

Call this during a timer's interrupt service routine (ISR).

#### **Parameters**

in <i>timer</i>	Pointer to timer object.
-----------------	--------------------------

### Timer\_setInterval\_ms()

Set the interval to use.

## Precondition

Initialize and configure the timer.

### **Parameters**

in	timer	Pointer to timer object.
in	time_ms	Time in [ms].

### Postcondition

Upon starting, the Timer counts down from or up to this value.

### See also

Timer\_Init(), Timer\_setMode()

## Timer\_Start()

Start the timer.

### Precondition

Initialize and configure the timer.

### **Parameters**

in timer Pointer to tin	ner object.
-------------------------	-------------

### Postcondition

The timer is counting.

## See also

Timer\_Stop(), Timer\_isCounting()

## Timer\_Stop()

Stop the timer.

## Precondition

Start the timer.

# **Parameters**

in timer Pointer to timer object
----------------------------------

#### Postcondition

The timer is no longer counting.

### See also

Timer\_Start(), Timer\_isCounting()

# Timer\_isCounting()

Check if the timer is currently counting.

#### **Parameters**

in	timer	Pointer to timer object.
out	true	The timer is counting.
out	false	The timer is not counting.

#### See also

```
Timer_Start(), Timer_Stop()
```

## Timer\_Wait1ms()

Initiate a time delay.

#### Precondition

Initialize and configure the timer.

#### **Parameters**

in	timer	Pointer to timer object.
in	time_ms	Time in [ms] to wait for.

#### Postcondition

The program is delayed for the desired time.

#### 5.3.7.4 Variable Documentation

## TIMER\_POOL

```
TimerStruct_t TIMER_POOL[6] [static]
```

#### Initial value:

```
{
    { TIMERO, TIMERO_BASE, (register_t) (TIMERO_BASE + CTRL), (register_t) (TIMERO_BASE + INTERVAL),
        (register_t) (TIMERO_BASE + INT_CLEAR), false },
    { TIMER1, TIMER1_BASE, (register_t) (TIMER1_BASE + CTRL), (register_t) (TIMER1_BASE + INTERVAL),
        (register_t) (TIMER2_BASE + INT_CLEAR), false },
    { TIMER2, TIMER2_BASE, (register_t) (TIMER2_BASE + CTRL), (register_t) (TIMER2_BASE + INTERVAL),
        (register_t) (TIMER2_BASE + INT_CLEAR), false },
    { TIMER3, TIMER3_BASE, (register_t) (TIMER3_BASE + CTRL), (register_t) (TIMER3_BASE + INTERVAL),
        (register_t) (TIMER3_BASE + INT_CLEAR), false },
    { TIMER4, TIMER4_BASE, (register_t) (TIMER4_BASE + CTRL), (register_t) (TIMER4_BASE + INTERVAL),
        (register_t) (TIMER4_BASE + INT_CLEAR), false },
    { TIMER5, TIMER5_BASE, (register_t) (TIMER5_BASE + CTRL), (register_t) (TIMER5_BASE + INTERVAL),
        (register_t) (TIMER5_BASE + INT_CLEAR), false },
```

#### 5.3.8 Universal Asynchronous Receiver/Transmitter (UART)

Collaboration diagram for Universal Asynchronous Receiver/Transmitter (UART):



#### **Files**

file UART.c

Source code for UART module.

• file UART.h

Driver module for serial communication via UART0 and UART 1.

#### **Data Structures**

struct Uart\_t

#### Macros

#define ASCII CONVERSION 0x30

#### **Enumerations**

```
enum GPIO BASE ADDRESSES {
      GPIO_PORTA_BASE = (uint32_t) 0x40004000 , GPIO_PORTB_BASE = (uint32_t) 0x40005000 , GPIO_←
      PORTC_BASE = (uint32_t) 0x40006000, GPIO_PORTD_BASE = (uint32_t) 0x40007000,
      GPIO_PORTE_BASE = (uint32_t) 0x40024000 , GPIO_PORTF_BASE = (uint32_t) 0x40025000 }
• enum UART_BASE_ADDRESSES {
      UART0_BASE = (uint32_t) 0x4000C000 , UART1_BASE = (uint32_t) 0x4000D000 , UART2_BASE =
      (uint32 t) 0x4000E000, UART3 BASE = (uint32 t) 0x4000F000,
      UART4 BASE = (uint32 t) 0x40010000 , UART5 BASE = (uint32 t) 0x40011000 , UART6 BASE =
      (uint32_t) 0x40012000 , UART7_BASE = (uint32_t) 0x40013000 }
enum UART REG OFFSETS {
      \textbf{UART\_FR\_R\_OFFSET} = (uint32\_t) \ 0x18 \ , \ \textbf{IBRD\_R\_OFFSET} = (uint32\_t) \ 0x24 \ , \ \textbf{FBRD\_R\_OFFSET} = (uint32\_t) \ 0x24 \ , \ \textbf{CAUTA\_R\_OFFSET} = (uint32\_t) \ 0x24 \ , \ \textbf{CAUTA\_R\_OFFSET
      (uint32_t) 0x28 , LCRH_R_OFFSET = (uint32_t) 0x2C ,
      CTL_R_OFFSET = (uint32_t) 0x30 , CC_R_OFFSET = (uint32_t) 0xFC8 }
enum uartNum t {
      UARTO, UART1, UART2, UART3,
      UART4, UART5, UART6, UART7 }
```

#### **Functions**

• Uart\_t UART\_Init (GpioPort\_t port, uartNum\_t uartNum)

Initialize the specified UART peripheral.

bool UART\_isInit (Uart\_t uart)

Check if the UART object is initialized.

• unsigned char UART\_ReadChar (Uart\_t uart)

Read a single ASCII character from the UART.

• void UART\_WriteChar (Uart\_t uart, unsigned char inputChar)

Write a single character to the UART.

• void UART\_WriteStr (Uart\_t uart, void \*inputStr)

Write a C string to the UART.

void UART\_WriteInt (Uart\_t uart, int32\_t n)

Write a 32-bit unsigned integer the UART.

• void UART\_WriteFloat (Uart\_t uart, double n, uint8\_t numDecimals)

Write a floating-point number the UART.

#### **Variables**

static UartStruct\_t UART\_ARR [8]

#### 5.3.8.1 Detailed Description

Functions for UART-based communication.

#### 5.3.8.2 Function Documentation

#### UART\_Init()

Initialize the specified UART peripheral.

### **Parameters**

in	port	GPIO port to use.	
in	uartNum	UART number. Should be either one of the enumerated constants or an int in range [0, 7].	
out uart (Pointer to) initialized UART peripheral.			

Given the bus frequency (f\_bus) and desired baud rate (BR), the baud rate divisor (BRD) can be calculated:  $BRD = f_{bus}/(16*BR)$ 

The integer BRD (IBRD) is simply the integer part of the BRD: IBRD = int(BRD)

The fractional BRD (FBRD) is calculated using the fractional part (mod (BRD, 1)) of the BRD: FBRD = int((mod(BRD,1)\*64)+0.5)

# UART\_isInit()

Check if the UART object is initialized.

### **Parameters**

in	uart	UART to check.	
out	true	The UART object is initialized.	
out	false	The UART object is not initialize	

# UART\_ReadChar()

Read a single ASCII character from the UART.

#### **Parameters**

in	uart	UART to read from.
out	unsigned	char ASCII character from sender.

# UART\_WriteChar()

Write a single character to the UART.

### **Parameters**

in	uart	UART to write to.
in	input_char	ASCII character to send.

# UART\_WriteStr()

Write a C string to the UART.

#### **Parameters**

in	uart	UART to write to.
in	input_str	Array of ASCII characters.

#### UART\_WriteInt()

Write a 32-bit unsigned integer the UART.

#### **Parameters**

in	uart UART to write to.	
in	n	Unsigned 32-bit int to be converted and transmitted.

## UART\_WriteFloat()

Write a floating-point number the UART.

#### **Parameters**

	in	uart	UART to write to.
	in	n	Floating-point number to be converted and transmitted.
Ī	in	num_decimals	Number of digits after the decimal point to include.

## 5.3.8.3 Variable Documentation

#### UART\_ARR

```
UartStruct_t UART_ARR[8] [static]
```

#### Initial value:

```
{
    { UARTO_BASE, ((register_t) (UARTO_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false },
    { UART1_BASE, ((register_t) (UART1_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN0, GPIO_PIN1, false },
    { UART2_BASE, ((register_t) (UART2_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN6, GPIO_PIN7, false },
    { UART3_BASE, ((register_t) (UART3_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN6, GPIO_PIN7, false },
    { UART4_BASE, ((register_t) (UART4_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false },
    { UART5_BASE, ((register_t) (UART5_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false },
    { UART6_BASE, ((register_t) (UART6_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN5, false },
    { UART7_BASE, ((register_t) (UART6_BASE + UART_FR_R_OFFSET)), 0, GPIO_PIN4, GPIO_PIN1, false },
}
```

5.3 Device Drivers 71

#### 5.3.9 Interrupt Service Routines

Collaboration diagram for Interrupt Service Routines:



#### **Files**

• file ISR.c

Source code for interrupt service routine (ISR) configuration module.

· file ISR.h

Header file for interrupt service routine (ISR) configuration module.

#### **Macros**

- #define VECTOR TABLE BASE ADDR ((uint32 t) 0x00000000)
- #define VECTOR\_TABLE\_SIZE ((uint32\_t) 155)
- #define VECTOR\_TABLE\_ALIGNMENT ((uint32\_t) (1 << 10))</li>
- #define NVIC\_EN\_BASE\_ADDR ((uint32\_t) 0xE000E100)
- #define NVIC\_DIS\_BASE\_ADDR ((uint32\_t) 0xE000E180)
- #define NVIC\_PRI\_BASE\_ADDR ((uint32\_t) 0xE000E400)
- #define NVIC\_UNPEND\_BASE\_ADDR ((uint32\_t) 0xE000E280)

## **Typedefs**

• typedef void(\* ISR\_t) (void)

Type definition for function pointers representing ISRs.

## **Functions**

- static void ISR\_setStatus (const uint8\_t vectorNum, const bool isEnabled)
- · void ISR\_GlobalDisable (void)

Disable all interrupts globally.

void ISR\_GlobalEnable (void)

Enable all interrupts globally.

- static ISR\_t newVectorTable[VECTOR\_TABLE\_SIZE] \_\_attribute\_ ((aligned(VECTOR\_TABLE\_← ALIGNMENT)))
- void ISR\_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR addToIntTable (ISR t isr, const uint8 t vectorNum)

Add an ISR to the interrupt table.

void ISR\_setPriority (const uint8\_t vectorNum, const uint8\_t priority)

Set the priority for an interrupt.

• void ISR\_Enable (const uint8\_t vectorNum)

Enable an interrupt in the NVIC.

void ISR\_Disable (const uint8\_t vectorNum)

Disable an interrupt in the NVIC.

void ISR\_triggerInterrupt (const uint8\_t vectorNum)

Generate a software-generated interrupt (SGI).

#### **Variables**

- static bool interruptsAreEnabled = true
- void(\*const interruptVectorTable [])(void)
- static bool isTableCopiedToRam = false

## 5.3.9.1 Detailed Description

Functions for manipulating the interrupt vector table and setting up interrupt handlers via the NVIC.

#### 5.3.9.2 Function Documentation

## ISR\_GlobalDisable()

Disable all interrupts globally.

See also

ISR\_GlobalEnable()

## ISR\_GlobalEnable()

```
void ISR_GlobalEnable (
     void )
```

Enable all interrupts globally.

See also

ISR GlobalDisable()

5.3 Device Drivers 73

# ISR\_InitNewTableInRam()

Relocate the vector table to RAM.

#### Precondition

Disable interrupts globally before calling this.

## Postcondition

The vector table is now located in RAM, allowing the ISRs listed in the startup file to be replaced.

#### See also

```
ISR_GlobalDisable(), ISR_addToIntTable()
```

# ISR\_addToIntTable()

Add an ISR to the interrupt table.

#### Precondition

Initialize a new vector table in RAM before calling this function.

## **Parameters**

in	isr	Name of the ISR to add.	
in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154].	. ]

#### Postcondition

The ISR is now added to the vector table and available to be called.

#### See also

ISR\_InitNewTableInRam()

## ISR\_setPriority()

Set the priority for an interrupt.

## Precondition

Disable the interrupt before adjusting its priority.

## **Parameters**

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 1	
in	priority	Priority to assign. Highest priority is 0, lowest is 7.	

## Postcondition

The interrupt's priority has now been changed in the NVIC.

#### See also

ISR\_Disable()

## ISR\_Enable()

Enable an interrupt in the NVIC.

#### Precondition

If needed, add the interrupt to the vector table.

If needed, set the interrupt's priority (default 0, or highest priority) before calling this.

#### **Parameters**

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154].	
----	-----------	--	--

# Postcondition

The interrupt is now enabled in the NVIC.

#### See also

```
ISR_addToIntTable(), ISR_setPriority(), ISR_Disable()
```

# ISR\_Disable()

Disable an interrupt in the NVIC.

## **Parameters**

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154].	٦
----	-----------	--	---

## Postcondition

The interrupt is now disabled in the NVIC.

#### See also

ISR\_Enable()

# ISR\_triggerInterrupt()

Generate a software-generated interrupt (SGI).

# Precondition

Enable the ISR (and set priority as needed).

Enable all interrupts.

#### **Parameters**

in	vectorNum	ISR's vector number (i.e. offset from the top of the table). Should be in range [16, 154]	
----	-----------	---	--

### Postcondition

The ISR should trigger once any higher priority ISRs return.


## See also

ISR\_clearPending()

# 5.4 Middleware

High-level device driver modules.

Collaboration diagram for Middleware:

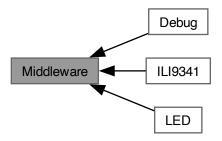

#### **Modules**

- Debug
- ILI9341
- LED

# 5.4.1 Detailed Description

High-level device driver modules.

These modules contain functions for interfacing with external devices/peripherals via the use of low-level drivers.

## 5.4.2 **Debug**

Collaboration diagram for Debug:



# Files

• file Debug.h

Functions to output debugging information to a serial port via UART.

## **Serial Output**

- enum Msg\_t { DEBUG\_DAQ\_INIT , DEBUG\_QRS\_INIT , DEBUG\_LCD\_INIT , DEBUG\_QRS\_START }
- void Debug\_SendMsg (void \*message)

Send a message to the serial port.

void Debug\_SendFromList (Msg\_t msg)

Send a message from the message list.

void Debug\_WriteFloat (double value)

Write a floating-point value to the serial port.

#### Initialization

void Debug\_Init (Uart\_t uart)
 Initialize the Debug module.

#### **Assertions**

void Debug\_Assert (bool condition)

Stops program if condition is true. Useful for bug detection during debugging.

## 5.4.2.1 Detailed Description

Module for debugging functions, including serial output and assertions.

#### 5.4.2.2 Function Documentation

## Debug\_Init()

Initialize the Debug module.

## Parameters

in	uart	UART to use for serial output.

# Postcondition

An initialization message is sent to the serial port.

# Debug\_SendMsg()

Send a message to the serial port.

## Precondition

Initialize the Debug module.

## **Parameters**

```
message (Pointer to) array of ASCII characters.
```

#### Postcondition

A floating point value is written to the serial port.

## See also

Debug\_SendMsg()

# Debug\_SendFromList()

Send a message from the message list.

## Precondition

Initialize the Debug module.

#### **Parameters**

in	msg	An entry from the enumeration.
----	-----	--------------------------------

## Postcondition

The corresponding message is sent to the serial port.

# See also

Debug\_SendMsg()

## Debug\_WriteFloat()

Write a floating-point value to the serial port.

## Precondition

Initialize the Debug module.

#### **Parameters**

in value Floating-point value	
-------------------------------	--

## Postcondition

A floating point value is written to the serial port.

#### See also

Debug\_SendMsg()

# Debug\_Assert()

```
void Debug_Assert (
          bool condition )
```

Stops program if condition is true. Useful for bug detection during debugging.

# Precondition

Initialize the Debug module.

### **Parameters**

in	condition	Conditional statement to evaluate.
----	-----------	------------------------------------

## Postcondition

If condition == true, the program continues normally. If condition == false, a message is sent and a breakpoint is activated.

#### 5.4.3 ILI9341

Collaboration diagram for ILI9341:



#### **Files**

• file ILI9341.c

Source code for ILI9341 module.

file ILI9341.h

Driver module for interfacing with an ILI9341 LCD driver.

#### **Enumerations**

```
enum { ILI9341_NUM_COLS = 240 , ILI9341_NUM_ROWS = 320 }
enum Cmd_t {
    NOP = 0x00 , SWRESET = 0x01 , SPLIN = 0x10 , SPLOUT = 0x11 ,
    PTLON = 0x12 , NORON = 0x13 , DINVOFF = 0x20 , DINVON = 0x21 ,
    CASET = 0x2A , PASET = 0x2B , RAMWR = 0x2C , DISPOFF = 0x28 ,
    DISPON = 0x29 , PLTAR = 0x30 , VSCRDEF = 0x33 , MADCTL = 0x36 ,
    VSCRSADD = 0x37 , IDMOFF = 0x38 , IDMON = 0x39 , PIXSET = 0x3A ,
    FRMCTR1 = 0xB1 , FRMCTR2 = 0xB2 , FRMCTR3 = 0xB3 , PRCTR = 0xB5 ,
    IFCTL = 0xF6 }
enum sleepMode_t { SLEEP_ON = SPLIN , SLEEP_OFF = SPLOUT }
enum displayArea_t { NORMAL_AREA = NORON , PARTIAL_AREA = PTLON }
enum colorExpr_t { FULL_COLORS = IDMOFF , PARTIAL_COLORS = IDMON }
enum invertMode_t { INVERT_ON = DINVON , INVERT_OFF = DINVOFF }
enum outputMode_t { OUTPUT_ON = DISPON , OUTPUT_OFF = DISPOFF }
enum colorDepth t { COLORDEPTH 16BIT = 0x55 , COLORDEPTH 18BIT = 0x66 }
```

#### **Functions**

- static void ILI9341 setMode (uint8 t param)
- static void ILI9341\_setAddress (uint16\_t start\_address, uint16\_t end\_address, bool is\_row)
- static void ILI9341\_sendParams (Cmd\_t cmd)

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

• void ILI9341 Init (Timer t timer)

Initialize the LCD driver and the SPI module.

void ILI9341\_setInterface (void)

Sets the interface for the ILI9341.

void ILI9341\_resetHard (Timer\_t timer)

Perform a hardware reset of the LCD driver.

• void ILI9341\_resetSoft (Timer\_t timer)

Perform a software reset of the LCD driver.

void ILI9341\_setSleepMode (sleepMode\_t sleepMode, Timer\_t timer)

Enter or exit sleep mode (ON by default).

void ILI9341 setDisplayArea (displayArea t displayArea)

Set the display area.

void ILI9341\_setColorExpression (colorExpr\_t colorExpr)

Set the color expression (FULL COLORS by default).

void ILI9341\_setPartialArea (uint16\_t rowStart, uint16\_t rowEnd)

Set the display area for partial mode. Call before activating partial mode.

void ILI9341\_setDispInversion (invertMode\_t invertMode)

Toggle display inversion (OFF by default).

void ILI9341\_setDispOutput (outputMode\_t outputMode)

Change whether the IC is outputting to the display for not.

void ILI9341\_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols
 — Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341\_setColorDepth (colorDepth\_t colorDepth)

Set the color depth for the display.

void ILI9341\_setFrameRate (uint8\_t divisionRatio, uint8\_t clocksPerLine)

TODO: Write brief.

void ILI9341 setRowAddress (uint16 t startRow, uint16 t endRow)

Sets the start/end rows to be written to.

void ILI9341\_setColAddress (uint16\_t startCol, uint16\_t endCol)

Sets the start/end columns to be written to.

void ILI9341\_writeMemCmd (void)

Signal to the driver that pixel data is incoming and should be written to memory.

void ILI9341\_writePixel (uint8\_t red, uint8\_t green, uint8\_t blue)

Write a single pixel to frame memory.

#### **Variables**

```
• static uint32 t ILI9341_Buffer [8]
```

- static Fifo\_t ILI9341\_Fifo
- struct {

```
sleepMode_t sleepMode
displayArea_t displayArea
colorExpr_t colorExpression
invertMode_t invertMode
outputMode_t outputMode
colorDepth t colorDepth
```

} ili9341 = { SLEEP\_ON, NORMAL\_AREA, FULL\_COLORS, INVERT\_OFF, OUTPUT\_ON, COLORDEPTH\_16BIT, false }

#### 5.4.3.1 Detailed Description

bool islnit

Functions for interfacing an ILI9341-based 240RGBx320 LCD via Serial Peripheral Interface (SPI).

#### 5.4.3.2 Enumeration Type Documentation

#### anonymous enum

anonymous enum

#### **Enumerator**

ILI9341_NUM_COLS	5.4.3.3	of columns available on the display
ILI9341_NUM_ROWS	5.4.3.4	of rows available on the display

# $Cmd_t$

enum Cmd\_t

#### Enumerator

No Operation.	
Software Reset.	
Enter Sleep Mode.	
Sleep Out (i.e. Exit Sleep Mode)	
Partial Display Mode ON.	
Normal Display Mode ON.	
Display Inversion OFF.	
Display Inversion ON.	
Column Address Set.	
Page Address Set.	
Memory Write.	
Display OFF.	
Display ON.	
Partial Area.	
Vertical Scrolling Definition.	
Memory Access Control.	
Vertical Scrolling Start Address.	
Idle Mode OFF.	
Idle Mode ON.	
Pixel Format Set.	
Frame Rate Control Set (Normal Mode)	
Frame Rate Control Set (Idle Mode)	
Frame Rate Control Set (Partial Mode)	
Blanking Porch Control.	
Interface Control.	

# 5.4.3.5 Function Documentation

# ILI9341\_setMode()

This function simply groups each of the configuration functions into one to reduce code duplication.  $\,$ 

# ILI9341\_setAddress()

```
uint16_t end_address,
bool is_row ) [static]
```

This function implements the "Column Address Set" (CASET) and "Page Address Set" (PASET) commands from p. 110-113 of the ILI9341 datasheet.

The input parameters represent the first and last addresses to be written to when ILI9341\_writePixel() is called.

To work correctly, startAddress must be no greater than endAddress, and endAddress cannot be greater than the max number of rows/columns.

## ILI9341\_sendParams()

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

#### **Parameters**

in	cmd	Command to send.
----	-----	------------------

## ILI9341\_Init()

Initialize the LCD driver and the SPI module.

#### **Parameters**

in	timer	Hardware timer to use during initialization.
----	-------	--

## ILI9341\_setInterface()

Sets the interface for the ILI9341.

```
The parameters for this command are hard-coded, so it only needs to be called once upon initialization.
```

This function implements the "Interface Control" (IFCTL) command from p. 192-194 of the ILI9341 datasheet, which controls how the LCD driver handles 16-bit data and what interfaces (internal or external) are used.

Name	Bit #	Param #	Effect when set = 1
MY_EOR	7		flips value of corresponding MADCTL bit
MX_EOR	6		flips value of corresponding MADCTL bit
MV_EOR	5	0	flips value of corresponding MADCTL bit
BGR_EOR	3		flips value of corresponding MADCTL bit
WEMODE	0		overflowing pixel data is not ignored
EPF[1:0]	5:4	1	controls 16 to 18-bit pixel data conversion
MDT[1:0]	1:0	'	controls display data transfer method
ENDIAN	5		host sends LSB first
DM[1:0]	3:2	2	selects display operation mode
RM	1	_	selects GRAM interface mode
RIM	0		specifies RGB interface-specific details

The first param's bits are cleared so that the corresponding MADCTL bits (ILl9341\_setMemoryAccessCtrl()) are unaffected and overflowing pixel data is ignored. The EPF bits are cleared so that the LSB of the R and B values is copied from the MSB when using 16-bit color depth. The TM4C123 sends the MSB first, so the ENDIAN bit is cleared. The other bits are cleared and/or irrelevant since the RGB and VSYNC interfaces aren't used.

## ILI9341\_resetHard()

```
void ILI9341_resetHard ( {\tt Timer\_t~\it timer}~)
```

Perform a hardware reset of the LCD driver.

#### **Parameters**

in	timer	Hardware timer to use during reset.

The LCD driver's RESET pin requires a negative logic (i.e. active LOW) signal for  $\geq$ = 10 [us] and an additional 5 [ms] before further commands can be sent.

## ILI9341\_resetSoft()

```
void ILI9341_resetSoft ( {\tt Timer\_t\ \it timer}\ )
```

Perform a software reset of the LCD driver.

#### **Parameters**

in	timer	Hardware timer to use during reset.

the driver needs 5 [ms] before another command

#### ILI9341\_setSleepMode()

```
void ILI9341\_setSleepMode (
```

```
sleepMode_t sleepMode,
Timer_t timer )
```

Enter or exit sleep mode (ON by default).

#### **Parameters**

in	sleepMode	SLEEP_ON or SLEEP_OFF
in	timer	Hardware timer to use for a slight delay after the mode change.

## Postcondition

The IC will be in or out of sleep mode depending on the value of sleepMode.

The MCU must wait  $\geq$ = 5 [ms] before sending further commands regardless of the selected mode.

It's also necessary to wait 120 [ms] before sending SPLOUT after sending SPLIN or a reset, so this function waits 120 [ms] regardless of the preceding event.

## ILI9341\_setDisplayArea()

Set the display area.

#### Precondition

If using partial mode, set the partial area first.

## **Parameters**

in	displayArea	NORMAL_AREA or PARTIAL_AREA
----	-------------	-----------------------------

#### See also

ILI9341\_setPartialArea()

#### ILI9341\_setColorExpression()

Set the color expression (FULL\_COLORS by default).

#### **Parameters**

in	colorExpr	FULL_	_COLORS	or PARTIAL_	_COLORS

## Postcondition

With partial color expression, the display only uses 8 colors. Otherwise, the color depth determines the number of colors available.

#### ILI9341\_setPartialArea()

Set the display area for partial mode. Call before activating partial mode.

#### **Parameters**

in	rowStart	
in	rowEnd	

#### See also

ILI9341\_setDisplayArea()

# ILI9341\_setDispInversion()

Toggle display inversion (OFF by default).

#### **Parameters**

in	invertMode	INVERT_ON or INVERT_OFF
----	------------	-------------------------

#### Postcondition

When inversion is ON, the display colors are inverted. (e.g. BLACK -> WHITE, GREEN -> PURPLE)

# ILI9341\_setDispOutput()

Change whether the IC is outputting to the display for not.

## **Parameters**

in	outputMode	OUTPUT_ON or OUTPUT_OFF
----	------------	-------------------------

## Postcondition

If ON, the IC outputs data from its memory to the display. If OFF, the display is cleared and the IC stops outputting data.

TODO: Write description

## ILI9341\_setMemAccessCtrl()

```
void ILI9341_setMemAccessCtrl (
    bool areRowsFlipped,
    bool areColsFlipped,
    bool areRowsAndColsSwitched,
    bool isVertRefreshFlipped,
    bool isColorOrderFlipped,
    bool isHorRefreshFlipped)
```

Set how data is converted from memory to display.

#### **Parameters**

in	areRowsFlipped	
in	areColsFlipped	
in	areRowsAndColsSwitched	
in	isVertRefreshFlipped	
in	isColorOrderFlipped	
in	isHorRefreshFlipped	

This function implements the "Memory Access Control" (MADCTL) command from p. 127-128 of the ILI9341 datasheet, which controls how the LCD driver displays data upon writing to memory.

Name	Bit #	Effect when set = 1
MY	7	flip row (AKA "page") addresses
MX	6	flip column addresses
MV	5	exchange rows and column addresses
ML	4	reverse horizontal refresh order
BGR	3	reverse color input order (RGB -> BGR)
МН	2	reverse vertical refresh order

All bits are clear after powering on or HWRESET.

## ILI9341\_setColorDepth()

Set the color depth for the display.

#### **Parameters**

## Postcondition

16BIT mode allows for  $\sim$ 65K (2 $^{\wedge}$ 16) colors and requires 2 transfers. 18BIT mode allows for  $\sim$ 262K (2 $^{\wedge}$ 18) colors but requires 3 transfers.

# ILI9341\_setFrameRate()

TODO: Write brief.

TODO: Write description

## ILI9341\_setRowAddress()

Sets the start/end rows to be written to.

#### **Parameters**



 $0 \le \text{startRow} \le \text{endRow}$ 

## **Parameters**



startRow<=endRow` < 240

## See also

ILI9341\_setRowAddress, ILI9341\_writePixel()

This function is simply an interface to ILI9341\_setAddress(). To work correctly, start\_row must be no greater than end\_row, and end\_row cannot be greater than the max row number (default 320).

#### ILI9341\_setColAddress()

Sets the start/end columns to be written to.

#### **Parameters**

```
in
```

0 <= startCol <= endCol</pre>

## **Parameters**



startCol<=endCol` < 240

See also

ILI9341\_setColAddress, ILI9341\_writePixel()

This function is simply an interface to ILI9341\_setAddress(). To work correctly, start\_col must be no greater than end\_col, and end\_col cannot be greater than the max column number (default 240).

#### ILI9341\_writeMemCmd()

```
void ILI9341_writeMemCmd ( void \ \ )
```

Signal to the driver that pixel data is incoming and should be written to memory.

Precondition

Set the row and/or column addresses.

Postcondition

The LCD driver is ready to accept pixel data.

See also

ILI9341\_setRowAddress, ILI9341\_setColAddress(), ILI9341\_writePixel()

## ILI9341\_writePixel()

```
void ILI9341_writePixel (
          uint8_t red,
          uint8_t green,
          uint8_t blue )
```

Write a single pixel to frame memory.

Precondition

Send the "Write Memory" command.

Set the desired color depth for the display.

#### **Parameters**

in	red	5 or 6-bit R value
in	green	5 or 6-bit G value
in	blue	5 or 6-bit B value

#### See also

ILI9341\_setColorDepth, ILI9341\_writeMemCmd(), ILI9341\_writePixel()

This function sends one pixel to the display. Because the serial interface (SPI) is used, each pixel requires 2 transfers in 16-bit mode and 3 transfers in 18-bit mode.

The following table (adapted from p. 63 of the datasheet) visualizes how the RGB data is sent to the display when using 16-bit color depth.

Transfer		1										2	2			
Bit #	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Value	R4	R3	R2	R1	R0	G5	G4	G3	G2	G1	G0	B4	В3	B2	B1	B0

The following table (adapted from p. 64 of the datasheet) visualizes how the RGB data is sent to the display when using 18-bit color depth.

Transfer		1								2	
Bit #	7	6	5	4	3	2	1	0	7	6	
Value	R5	R4	R3	R2	R1	R0	0/1	0/1	G5	G4	

# 5.4.4 LED

Collaboration diagram for LED:



## **Files**

• file Led.c

Source code for LED module.

• file Led.h

Interface for LED module.

## **Data Structures**

struct Led\_t

#### **Macros**

• #define LED\_POOL\_SIZE 1

#### **Variables**

```
    static LedStruct_t Led_ObjPool [LED_POOL_SIZE] = { 0 }
    static uint8_t num_free_leds = LED_POOL_SIZE
```

## **Initialization & Configuration**

```
    Led_t Led_Init (GpioPort_t gpioPort, GPIO_Pin_t pin)
        Initialize a light-emitting diode (LED) as an Led_t.
    GpioPort_t Led_GetPort (Led_t led)
        Get the GPIO port associated with the LED.
    GPIO_Pin_t Led_GetPin (Led_t led)
        Get the GPIO pin associated with the LED.
```

# **Status Checking**

```
    bool Led_isInit (Led_t led)
        Check if an LED is initialized.

    bool Led_isOn (Led_t led)
        Check the LED's status.
```

## **Operations**

```
    void Led_TurnOn (Led_t led)
        Turn an LED ON.
    void Led_TurnOff (Led_t led)
        Turn an LED OFF.
    void Led_Toggle (Led_t led)
        Toggle an LED.
```

## 5.4.4.1 Detailed Description

Functions for driving light-emitting diodes (LEDs) via General-Purpose Input/Output (GPIO).

## 5.4.4.2 Function Documentation

# Led\_Init()

Initialize a light-emitting diode (LED) as an Led\_t.

# **Parameters**

in	gpioPort	Pointer to a struct representing a GPIO port.
in	pin	GPIO pin to use.
out	led	Pointer to LED data structure.

# Led\_GetPort()

Get the GPIO port associated with the LED.

## Precondition

Initialize the LED.

#### **Parameters**

in	led	Pointer to LED data structure.	
out	gpioPort	Pointer to a GPIO port data structure.	

## See also

Led\_Init(), Led\_GetPin()

# Led\_GetPin()

Get the GPIO pin associated with the LED.

## Precondition

Initialize the LED.

# **Parameters**

in	led	Pointer to LED data structure.
out	pin	GPIO pin associated with the LED.

#### See also

Led\_Init(), Led\_GetPort()

# Led\_isInit()

Check if an LED is initialized.

# **Parameters**

in	led	Pointer to LED data structure.
out	true	The LED is initialized.
out	false	The LED is not initialized.

See also

Led\_Init()

# Led\_isOn()

```
bool Led_isOn (
          Led_t led )
```

Check the LED's status.

Precondition

Initialize the LED.

## **Parameters**

in	led	Pointer to LED data structure.
out	true	the LED is ON.
out	false	the LED is OFF.

See also

```
Led_TurnOn(), Led_TurnOff(), Led_Toggle()
```

# Led\_TurnOn()

Turn an LED ON.

Precondition

Initialize the LED.

## **Parameters**

in <i>led</i>	Pointer to LED data structure.
---------------	--------------------------------

# Postcondition

The LED is turned ON.

#### See also

```
Led_TurnOff(), Led_Toggle()
```

# Led\_TurnOff()

Turn an LED OFF.

## Precondition

Initialize the LED.

## **Parameters**

in	led	Pointer to LED data structure.
----	-----	--------------------------------

## Postcondition

The LED is turned OFF.

## See also

```
Led_TurnOn(), Led_Toggle()
```

# Led\_Toggle()

Toggle an LED.

# Precondition

Initialize the LED.

5.5 Main 95

#### **Parameters**

in   led   Pointer to LED data struc	ture.
--------------------------------------	-------

## Postcondition

The LED's state is flipped (i.e. ON -> OFF or OFF -> ON).

See also

Led\_TurnOn(), Led\_TurnOff()

#### 5.5 Main

#### **Files**

• file main.c

Main program file.

#### **Enumerations**

- enum ISR\_VECTOR\_NUMS { DAQ\_VECTOR\_NUM = INT\_ADC0SS3 , PROC\_VECTOR\_NUM = INT\_CAN0 , LCD\_VECTOR\_NUM = INT\_TIMER1A }
- enum FIFO\_INFO { DAQ\_FIFO\_CAP = 3 , DAQ\_ARRAY

DAQ\_FIFO\_CAP = 3, DAQ\_ARRAY\_LEN = DAQ\_FIFO\_CAP + 1, QRS\_FIFO\_CAP = QRS\_NUM\_SAMP, QRS\_ARRAY\_LEN = QRS\_FIFO\_CAP + 1, LCD\_FIFO\_1\_CAP = DAQ\_FIFO\_CAP\_LCD\_ARRAY\_1\_LEN = LCD\_FIFO\_1\_CAP + 1\_LCD\_FIFO\_2\_CAP\_LCD\_ARRAY\_1\_LEN = LCD\_FIFO\_1\_CAP\_LCD\_FIFO\_2\_CAP\_LCD\_ARRAY\_1\_LEN = LCD\_FIFO\_1\_CAP\_LCD\_FIFO\_2\_CAP\_LCD\_ARRAY\_1\_LEN = LCD\_FIFO\_1\_CAP\_LCD\_FIFO\_2\_CAP\_LCD\_FIFO\_2\_CAP\_LCD\_FIFO\_1\_CAP\_LCD\_FIFO\_2\_CAP\_LCD\_FIFO\_2\_CAP\_LCD\_FIFO\_1\_CAP\_LCD\_FIFO\_2\_CA

LCD\_FIFO\_1\_CAP = DAQ\_FIFO\_CAP, LCD\_ARRAY\_1\_LEN = LCD\_FIFO\_1\_CAP + 1, LCD\_FIFO\_2\_CAP = 1, LCD\_ARRAY\_2\_LEN = LCD\_FIFO\_2\_CAP + 1}

• enum LCD\_INFO {

LCD\_TOP\_LINE = (LCD\_Y\_MAX - 24), LCD\_WAVE\_NUM\_Y = LCD\_TOP\_LINE, LCD\_WAVE\_X\_OFFSET = 0, LCD\_WAVE\_Y\_MIN = (0 + LCD\_WAVE\_X\_OFFSET),

LCD\_WAVE\_Y\_MAX = (LCD\_WAVE\_NUM\_Y + LCD\_WAVE\_X\_OFFSET) , LCD\_TEXT\_LINE\_NUM = 28 , LCD\_TEXT\_COL\_NUM = 24 }

#### **Functions**

static void DAQ Handler (void)

ISR for the data acquisition system.

• static void Processing\_Handler (void)

ISR for intermediate processing of the input data.

· static void LCD\_Handler (void)

ISR for plotting the waveform and outputting the heart rate to the LCD.

• int main (void)

Main function for the project.

## **Variables**

- static volatile Fifo\_t **DAQ\_Fifo** = 0
- static volatile uint32\_t **DAQ\_fifoBuffer** [DAQ\_ARRAY\_LEN] = { 0 }
- static volatile Fifo t QRS\_Fifo = 0
- static volatile uint32\_t QRS\_fifoBuffer [QRS\_ARRAY\_LEN] = { 0 }
- static volatile Fifo\_t **LCD\_Fifo1** = 0
- static volatile uint32\_t LCD\_fifoBuffer1 [LCD\_ARRAY\_1\_LEN] = { 0 }
- static volatile Fifo\_t LCD\_Fifo2 = 0
- static volatile uint32\_t LCD\_fifoBuffer2 [LCD\_ARRAY\_2\_LEN] = { 0 }
- static volatile bool qrsBufferIsFuII = false

flag for QRS detection to start

• static volatile bool heartRateIsReady = false

flag for LCD to output heart rate

- static float32\_t QRS\_processingBuffer [QRS\_ARRAY\_LEN] = { 0 }
- static uint16\_t LCD\_prevSampleBuffer [LCD\_X\_MAX] = { 0 }

# 5.5.1 Detailed Description

## 5.5.2 Enumeration Type Documentation

## ISR\_VECTOR\_NUMS

enum ISR\_VECTOR\_NUMS

## Enumerator

DAQ_VECTOR_NUM	vector number for the DAQ_Handler()
PROC_VECTOR_NUM	vector number for the Processing_Handler()
LCD_VECTOR_NUM	vector number for the LCD_Handler()

# FIFO\_INFO

enum FIFO\_INFO

# Enumerator

DAQ_FIFO_CAP	capacity of DAQ's FIFO buffer
DAQ_ARRAY_LEN	actual size of underlying array
QRS_FIFO_CAP	capacity of QRS detector's FIFO buffer
QRS_ARRAY_LEN	actual size of underlying array
LCD_FIFO_1_CAP	capacity of LCD's waveform FIFO buffer
LCD_ARRAY_1_LEN	actual size of underlying array
LCD_FIFO_2_CAP	capacity of LCD's heart rate FIFO buffer
LCD_ARRAY_2_LEN	actual size of underlying array

5.5 Main 97

# LCD\_INFO

```
enum LCD_INFO
```

#### Enumerator

LCD_TOP_LINE	separates wavefrom from text
LCD_WAVE_NUM_Y	num. of y-vals available for plotting waveform
LCD_WAVE_X_OFFSET	waveform's offset from X axis
LCD_WAVE_Y_MIN	waveform's min y-value
LCD_WAVE_Y_MAX	waveform's max y-value
LCD_TEXT_LINE_NUM	line num. of text
LCD_TEXT_COL_NUM	starting col. num. for heart rate

## 5.5.3 Function Documentation

## DAQ\_Handler()

ISR for the data acquisition system.

This ISR has a priority level of 1, is triggered when the ADC has finished capturing a sample, and also triggers the intermediate processing handler. It reads the 12-bit ADC output, converts it from an integer to a raw voltage sample, and sends it to the processing ISR via the DAQ\_Fifo.

#### Precondition

Initialize the DAQ module.

#### Postcondition

The converted sample is placed in the DAQ FIFO, and the processing ISR is triggered.

#### See also

DAQ\_Init(), Processing\_Handler()

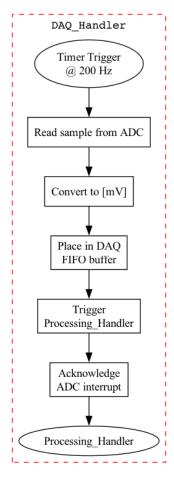


Figure 4 Flowchart for the DAQ handler.

## Processing\_Handler()

ISR for intermediate processing of the input data.

This ISR has a priority level of 1, is triggered by the DAQ ISR, and triggers the LCD handler. It removes baseline drift and power line interference (PLI) from a sample, and then moves it to the QRS\_Fifo and the LCD\_Fifo. It also notifies the superloop in main() when the QRS buffer is full.

## Postcondition

The converted sample is placed in the LCD FIFO, and the LCD ISR is triggered.

The converted sample is placed in the QRS FIFO, and the flag is set.

5.5 Main 99

## See also

# DAQ\_Handler(), main(), LCD\_Handler()

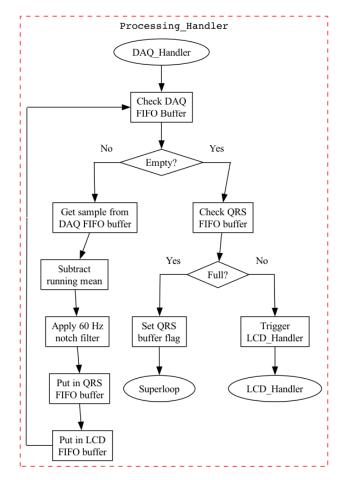


Figure 5 Flowchart for the processing handler.

# LCD\_Handler()

ISR for plotting the waveform and outputting the heart rate to the LCD.

This ISR has a priority level of 1 and is triggered by the Processing ISR. It applies a 0.5-40 [Hz] bandpass filter to the sample and plots it. It also outputs the heart rate.

#### Precondition

Initialize the LCD module.

## Postcondition

The bandpass-filtered sample is plotted to the LCD.

The heart rate is updated after each block is analyzed.

#### See also

LCD\_Init(), Processing\_Handler(), main()

# main()

```
int main (
     void )
```

Main function for the project.

Moves the interrupt vector table to RAM; configures and enables the ISRs; initializes all modules and static variables; and performs QRS detection once the buffer has been filled.

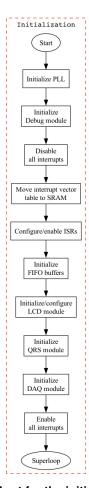


Figure 6 Flowchart for the initialization phase.

5.5 Main 101


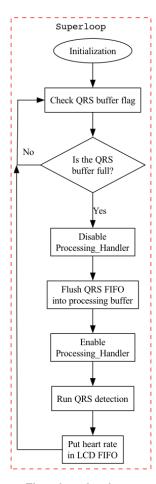


Figure 7 Flowchart for the superloop.

Here is the call graph for this function:

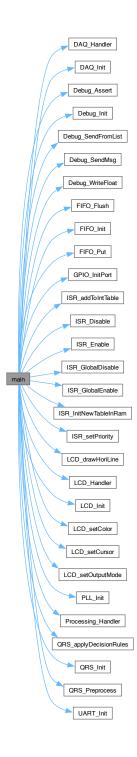

# 6 Data Structure Documentation

# 6.1 Fifo\_t Struct Reference

# **Data Fields**

volatile uint32\_t \* buffer

(pointer to) array to use as FIFO buffer

volatile uint32\_t N

length of buffer

volatile uint32\_t frontldx

idx of front of FIFO

volatile uint32\_t backldx

idx of back of FIFO

The documentation for this struct was generated from the following file:

· Fifo.c

# 6.2 GpioPort\_t Struct Reference

## **Data Fields**

- const uint32\_t BASE\_ADDRESS
- const uint32\_t DATA\_REGISTER
- · bool islnit

The documentation for this struct was generated from the following file:

• GPIO.c

# 6.3 Led\_t Struct Reference

#### **Data Fields**

• GpioPort\_t GPIO\_PORT\_PTR

pointer to GPIO port data structure

GPIO\_Pin\_t GPIO\_PIN

GPIO pin number.

• bool isOn

state indicator

• bool islnit

The documentation for this struct was generated from the following file:

· Led.c

# 6.4 Timer\_t Struct Reference

#### **Data Fields**

- const timerName\_t NAME
- const uint32\_t BASE\_ADDR
- register\_t controlRegister
- register\_t intervalLoadRegister
- register\_t interruptClearRegister
- · bool islnit

The documentation for this struct was generated from the following file:

• Timer.c

# 6.5 Uart\_t Struct Reference

#### **Data Fields**

- const uint32 t BASE ADDRESS
- register\_t const FLAG\_R\_ADDRESS
- GpioPort\_t GPIO\_PORT

pointer to GPIO port data structure

• GPIO\_Pin\_t RX\_PIN\_NUM

GPIO pin number.

GPIO\_Pin\_t TX\_PIN\_NUM

GPIO pin number.

· bool islnit

The documentation for this struct was generated from the following file:

• UART.c

# 7 File Documentation

## 7.1 DAQ.c File Reference

Source code for DAQ module.

```
#include "DAQ.h"
#include "ADC.h"
#include "Timer.h"
#include "NewAssert.h"
#include "arm_math_types.h"
#include "dsp/filtering_functions.h"
#include "tm4c123gh6pm.h"
#include <math.h>
#include <stdbool.h>
```

7.1 DAQ.c File Reference 105

#include <stdint.h>

Include dependency graph for DAQ.c:



#### **Macros**

#define SAMPLING PERIOD MS 5

sampling period in ms (  $T_s=1/f_s$  )

#### **Functions**

#### Initialization

void DAQ\_Init (void)
 Initialize the data acquisition (DAQ) module.

#### **Reading Input Data**

uint16\_t DAQ\_readSample (void)

Read a sample from the ADC.

void DAQ\_acknowledgeInterrupt (void)

Acknowledge the ADC interrupt.

#### **Digital Filtering Functions**

• float32 t DAQ NotchFilter (volatile float32 t xn)

Apply a 60 [Hz] notch filter to an input sample.

• float32\_t DAQ\_BandpassFilter (volatile float32\_t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

# **Digital Filters**

• enum {

NUM\_STAGES\_NOTCH = 6, NUM\_COEFFS\_NOTCH = NUM\_STAGES\_NOTCH \* 5, STATE\_BUFF\_ $\leftarrow$  SIZE\_NOTCH = NUM\_STAGES\_NOTCH \* 4, NUM\_STAGES\_BANDPASS = 4, NUM\_COEFFS\_DAQ\_BANDPASS = NUM\_STAGES\_BANDPASS \* 5, STATE\_BUFF\_SIZE\_BANDPASS = NUM\_STAGES\_BANDPASS \* 4}

- typedef arm\_biquad\_casd\_df1\_inst\_f32 Filter\_t
- static const float32\_t COEFFS\_NOTCH [NUM\_COEFFS\_NOTCH]
- static const float32\_t COEFFS\_BANDPASS [NUM\_COEFFS\_DAQ\_BANDPASS]
- static float32\_t stateBuffer\_Notch [STATE\_BUFF\_SIZE\_NOTCH]
- static const Filter\_t notchFiltStruct = { NUM\_STAGES\_NOTCH, stateBuffer\_Notch, COEFFS\_NOTCH }
- static const Filter t \*const **notchFilter** = &notchFiltStruct
- static float32\_t stateBuffer\_Bandpass [STATE\_BUFF\_SIZE\_BANDPASS]
- static const Filter\_t bandpassFiltStruct
- static const Filter\_t \*const bandpassFilter = &bandpassFiltStruct

## 7.1.1 Detailed Description

Source code for DAQ module.


**Author** 

Bryan McElvy


### 7.2 DAQ.h File Reference

Application software for handling data acquision (DAQ) functions.

```
#include "arm_math_types.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for DAQ.h:
```

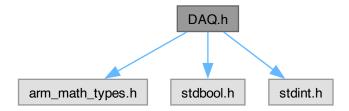

This graph shows which files directly or indirectly include this file:

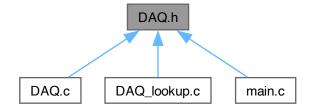

### Macros

- #define DAQ\_LOOKUP\_MAX ((float32\_t) 5.5f)
- #define DAQ\_LOOKUP\_MIN ((float32\_t) (-5.5f))

#### **Functions**

### Initialization

void DAQ\_Init (void)
 Initialize the data acquisition (DAQ) module.

### **Reading Input Data**

uint16\_t DAQ\_readSample (void)

Read a sample from the ADC.

float32\_t DAQ\_convertToMilliVolts (uint16\_t sample)

Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

void DAQ\_acknowledgeInterrupt (void)

Acknowledge the ADC interrupt.

## **Digital Filtering Functions**

• float32 t DAQ NotchFilter (volatile float32 t xn)

Apply a 60 [Hz] notch filter to an input sample.

float32 t DAQ BandpassFilter (volatile float32 t xn)

Apply a 0.5-40 [Hz] bandpass filter to an input sample.

### 7.2.1 Detailed Description

Application software for handling data acquision (DAQ) functions.


Author

Bryan McElvy

# 7.3 DAQ\_lookup.c File Reference

Source code for DAQ module's lookup table.

```
#include "DAQ.h"
#include "NewAssert.h"
#include "arm_math_types.h"
Include dependency graph for DAQ_lookup.c:
```

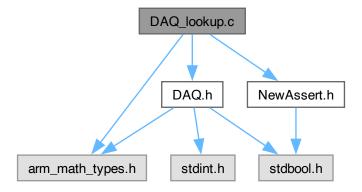

### **Functions**

## **Reading Input Data**

float32\_t DAQ\_convertToMilliVolts (uint16\_t sample)
 Convert a 12-bit ADC sample to a floating-point voltage value via LUT.

### **Variables**

• static const float32\_t DAQ\_LOOKUP\_TABLE [4096]

Lookup table for converting ADC data from unsigned 12-bit integer values to 32-bit floating point values.

## 7.3.1 Detailed Description

Source code for DAQ module's lookup table.


Author

Bryan McElvy

## 7.4 Font.c File Reference

Contains bitmaps for a selection of ASCII characters.

#include <stdint.h>
Include dependency graph for Font.c:

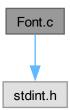

7.4 Font.c File Reference 109

#### **Variables**

const uint8\_t \*const FONT\_ARRAY [128]

#### **ASCII Characters (Punctuation)**

- static const uint8\_t FONT\_SPACE [8]
- static const uint8\_t FONT\_PERIOD [8]
- static const uint8\_t FONT\_COLON [8]

### **ASCII Characters (Numbers)**

- static const uint8 t FONT 0 [8]
- static const uint8\_t FONT\_1 [8]
- static const uint8\_t FONT\_2 [8]
- static const uint8 t FONT 3 [8]
- static const uint8\_t FONT\_4 [8]
- static const uint8\_t FONT\_5 [8]
- static const uint8\_t FONT\_6 [8]
- static const uint8\_t FONT\_7 [8]static const uint8\_t FONT\_8 [8]
- static const uint8\_t FONT\_9 [8]

### **ASCII Characters (Uppercase Letters)**

- static const uint8\_t FONT\_UPPER\_A [8]
- static const uint8\_t FONT\_UPPER\_B [8]
- static const uint8\_t FONT\_UPPER\_C [8]
- static const uint8\_t FONT\_UPPER\_D [8]
- static const uint8\_t FONT\_UPPER\_E [8]
- static const uint8 t FONT UPPER F [8]
- static const uint8 t FONT UPPER G [8]
- static const uint8 t FONT UPPER H [8]
- static const uint8\_t FONT\_UPPER\_I [8]
- static const uint8\_t FONT\_UPPER\_J [8]
- static const uint8\_t FONT\_UPPER\_K [8]
- static const unito\_t FONT\_UPPER\_L [8]
   static const uint8\_t FONT\_UPPER\_L [8]
- static const uint8\_t FONT\_UPPER\_M [8]
- static const uinto\_t r ONT\_UIDDED\_N [0]
- static const uint8\_t FONT\_UPPER\_N [8]
- static const uint8\_t FONT\_UPPER\_O [8]
   static const uint8\_t FONT\_UPPER\_P [8]
- static const uint8\_t FONT\_UPPER\_Q [8]
- static const uint8\_t FONT\_UPPER\_R [8]
- static const uint8\_t FONT\_UPPER\_S [8]
- static const uints\_t FONT\_UPPER\_T [8]
- static const uint8\_t FONT\_UPPER\_U [8]
- static const uint8 t FONT UPPER V [8]
- static const uint8 t FONT UPPER W [8]
- static const dinto\_t r ONT\_OFF ET\_W [0
- static const uint8\_t FONT\_UPPER\_X [8]
- static const uint8\_t FONT\_UPPER\_Y [8]
- static const uint8\_t FONT\_UPPER\_Z [8]

### **ASCII Characters (Lowercase Letters)**

- static const uint8\_t FONT\_LOWER\_A [8]
- static const uint8\_t FONT\_LOWER\_B [8]
- static const uint8\_t FONT\_LOWER\_C [8]
- static const uint8\_t FONT\_LOWER\_D [8]
- static const uint8\_t FONT\_LOWER\_E [8]
- static const uint8\_t FONT\_LOWER\_F [8]

```
• static const uint8_t FONT_LOWER_G [8]
• static const uint8_t FONT_LOWER_H [8]
• static const uint8_t FONT_LOWER_I [8]
• static const uint8_t FONT_LOWER_J [8]
• static const uint8_t FONT_LOWER_K [8]
• static const uint8_t FONT_LOWER_L [8]
• static const uint8 t FONT LOWER M [8]

    static const uint8 t FONT LOWER N [8]

• static const uint8 t FONT LOWER O [8]
• static const uint8 t FONT LOWER P [8]
• static const uint8_t FONT_LOWER_Q [8]
• static const uint8_t FONT_LOWER_R [8]
• static const uint8_t FONT_LOWER_S [8]
• static const uint8_t FONT_LOWER_T [8]
• static const uint8_t FONT_LOWER_U [8]
• static const uint8_t FONT_LOWER_V [8]
• static const uint8_t FONT_LOWER_W [8]
• static const uint8_t FONT_LOWER_X [8]

    static const uint8_t FONT_LOWER_Y [8]

    static const uint8_t FONT_LOWER_Z [8]
```

### 7.4.1 Detailed Description

Contains bitmaps for a selection of ASCII characters.

**Author** 

Bryan McElvy

These bitmaps were mostly generated by ChatGPT. The @ref FONT\_ARRAY variable is global to allow a non-clunky way for the @ref lcd "LCD module" to access it.


### 7.5 LCD.c File Reference

Source code for LCD module.

```
#include "LCD.h"
#include "ILI9341.h"
#include "Timer.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
```

7.5 LCD.c File Reference 111

Include dependency graph for LCD.c:

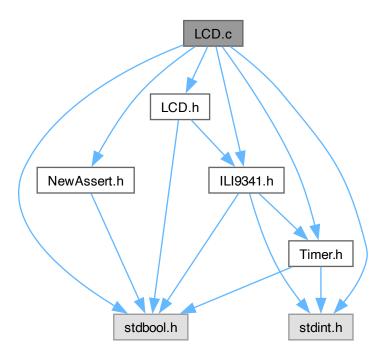

### **Macros**

• #define CONVERT\_INT\_TO\_ASCII(X) ((unsigned char) (X + 0x30))

## **Functions**

• static void LCD\_plotSample (uint16\_t x, uint16\_t y, LCD\_Color\_t color)

Plot a sample at coordinates (x, y).

## **Helper Functions**

- static void LCD\_drawLine (uint16\_t center, uint16\_t lineWidth, bool is\_horizontal) Helper function for drawing straight lines.
- static void LCD\_updateCursor (void)

Update the cursor for after writing text on the display.

### **Initialization & Configuration**

- void LCD\_Init (void)
  - Initialize the LCD.
- void LCD\_setOutputMode (bool isOn)

Toggle display output ON or OFF (OFF by default).

void LCD\_setX (uint16\_t x1, uint16\_t x2)

Set new x-coordinates to be written to.  $0 \le x1 \le x2 \le X_{MAX}$ .

```
• void LCD_setY (uint16_t y1, uint16_t y2) 
 Set new y-coordinates to be written to. 0 <= y1 <= y2 <= Y_{MAX}.
• void LCD_setColor (LCD_Color_t color) 
 Set the color value.
```

#### **Drawing**

```
    void LCD_Draw (void)
        Draw on the LCD.
    void LCD_Fill (void)
        Fill the display with a single color.
    void LCD_drawHoriLine (uint16_t yCenter, uint16_t lineWidth)
        Draw a horizontal line across the entire display.
    void LCD_drawVertLine (uint16_t xCenter, uint16_t lineWidth)
        Draw a vertical line across the entire display.
    void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool isFilled)
        Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).
```

### Writing

```
    void LCD_setCursor (uint16_t lineNum, uint16_t colNum)
        Set the cursor to line x, column y.
    void LCD_writeChar (unsigned char inputChar)
    void LCD_writeStr (void *asciiString)
    void LCD_writeInt (int32_t num)
    void LCD_writeFloat (float num)
```

# **Variables**

```
struct {
    uint16 t x1
      starting x-value in range [0, x2]
    uint16 t x2
      ending x-value in range [0, NUM_ROWS)
    uint16_t y1
      starting y-value in range [0, y2]
    uint16_t y2
      ending x-value in range [0, NUM_COLS)
    uint16 t lineNum
      line number for text; in range [0, NUM LINES]
    uint16 t colNum
      column number for text; in range [0, NUM_COLS)
    uint8_t R_val
      5 R value
    uint8 t G val
      6-bit G value
    uint8 t B val
      5 B value
    bool islnit
      if true, LCD has been initialized
 \} lcd = \{ 0 \}
```

const uint8\_t \*const FONT\_ARRAY [128]

7.6 LCD.h File Reference 113

## 7.5.1 Detailed Description

Source code for LCD module.


**Author** 

Bryan McElvy


## 7.6 LCD.h File Reference

Header file for LCD module.

#include "ILI9341.h"
#include <stdbool.h>
Include dependency graph for LCD.h:

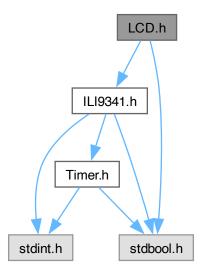

This graph shows which files directly or indirectly include this file:

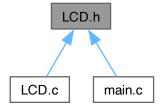

#### **Functions**

#### **Drawing**

```
    void LCD_Draw (void)
        Draw on the LCD.
    void LCD_Fill (void)
        Fill the display with a single color.
    void LCD_drawHoriLine (uint16_t yCenter, uint16_t lineWidth)
        Draw a horizontal line across the entire display.
    void LCD_drawVertLine (uint16_t xCenter, uint16_t lineWidth)
        Draw a vertical line across the entire display.
    void LCD_drawRectangle (uint16_t x1, uint16_t dx, uint16_t y1, uint16_t dy, bool isFilled)
        Draw a rectangle of size dx x dy onto the display. The bottom-left corner will be located at (x1, y1).
    static void LCD_plotSample (uint16_t x, uint16_t y, LCD_Color_t color)
```

### **Initialization & Configuration**

```
• enum LCD PLOT INFO { LCD X MAX = ILI9341 NUM ROWS - 1 , LCD Y MAX = ILI9341 NUM COLS
  -1}
enum LCD Color t {
  LCD BLACK = \sim(0x00) & 0x07, LCD RED = \sim(0x04) & 0x07, LCD GREEN = \sim(0x02) & 0x07, LCD \leftrightarrow
  BLUE = \sim(0x01) & 0x07.
  LCD\_YELLOW = \sim (0x06) \& 0x07, LCD\_CYAN = \sim (0x03) \& 0x07, LCD\_PURPLE = \sim (0x05) \& 0x07,
  LCD_WHITE = \sim(0x07) & 0x07 }

    void LCD Init (void)

     Initialize the LCD.

    void LCD_setOutputMode (bool isOn)

      Toggle display output ON or OFF (OFF by default).
void LCD_setX (uint16_t x1, uint16_t x2)
     Set new x-coordinates to be written to. 0 \le x1 \le x2 \le X_{MAX}.

    void LCD setY (uint16 t y1, uint16 t y2)

     Set new y-coordinates to be written to. 0 \le y1 \le y2 \le Y_{MAX}.

    void LCD_setColor (LCD_Color_t color)

     Set the color value.
```

#### Writing

```
    enum LCD_WRITING_INFO { HEIGHT_CHAR = 8 , LEN_CHAR = 5 , NUM_LINES = 30 , NUM_COLS = 64 }
    void LCD_setCursor (uint16_t lineNum, uint16_t colNum)
        Set the cursor to line x, column y.
    void LCD_writeChar (unsigned char inputChar)
    void LCD_writeStr (void *asciiString)
    void LCD_writeFloat (float num)
```

## 7.6.1 Detailed Description

Header file for LCD module.

**Author** 

Bryan McElvy

This module is essentially a higher-level interface to the ILI9341 module.


7.7 QRS.c File Reference 115

### 7.7 QRS.c File Reference

Source code for QRS detection module.

```
#include "QRS.h"
#include "arm_math_types.h"
#include "dsp/filtering_functions.h"
#include "dsp/statistics_functions.h"
#include <stdbool.h>
#include <stdint.h>
```

Include dependency graph for QRS.c:

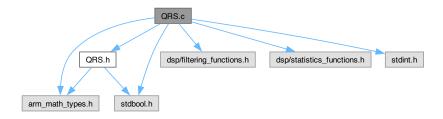

#### **Macros**

- #define QRS NUM FID MARKS 40
- #define FLOAT\_COMPARE\_TOLERANCE (float32\_t)(1E-5f)
- #define IS\_GREATER(X, Y) (bool) ((X Y) > FLOAT\_COMPARE\_TOLERANCE)
- #define IS\_PEAK(X\_MINUS\_1, X, X\_PLUS\_1) (bool) (IS\_GREATER(X, X\_MINUS\_1) && IS\_GREATER(X, X\_PLUS\_1))

### **Functions**

### Implementation-specific Functions

- static uint8\_t QRS\_findFiducialMarks (const float32\_t yn[], uint16\_t fidMarkArray[])
   Mark local peaks in the input signal y as potential candidates for QRS complexes (AKA "fiducial marks").
- static void QRS\_initLevels (const float32\_t yn[], float32\_t \*sigLvlPtr, float32\_t \*noiseLvlPtr)
   Initialize the signal and noise levels for the QRS detector using the initial block of input signal data.
- static float32\_t QRS\_updateLevel (const float32\_t peakAmplitude, float32\_t level)

Update the signal level (if a fiducial mark is a confirmed peak) or the noise level (if a fiducial mark is rejected).

static float32\_t QRS\_updateThreshold (const float32\_t signalLevel, const float32\_t noiseLevel)

Update the amplitude threshold used to identify peaks based on the signal and noise levels.

### **Interface Functions**

- void QRS Init (void)
  - Initialize the QRS detector.
- void QRS Preprocess (const float32 t xn[], float32 t yn[])

Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.

- float32\_t QRS\_applyDecisionRules (const float32\_t yn[])
  - Calculate the average heart rate (HR) using predetermined decision rules.
- float32\_t QRS\_runDetection (const float32\_t xn[], float32\_t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

#### **Variables**

```
    struct {
        bool isCalibrated
        float32_t signalLevel
            estimated signal level
        float32_t noiseLevel
        estimated noise level
        float32_t threshold
        amplitude threshold
        uint16_t fidMarkArray [QRS_NUM_FID_MARKS]
        float32_t utilityBuffer1 [QRS_NUM_FID_MARKS]
        array to hold fidMark indices
        float32_t utilityBuffer2 [QRS_NUM_FID_MARKS]
    } Detector = { false, 0.0f, 0.0f, 0.0f, { 0 }, { 0 }, { 0 }}
```

### **Digital Filters**

• enum {

```
NUM_STAGES_BANDPASS = 4 , NUM_COEFF_HIGHPASS = NUM_STAGES_BANDPASS * 5 , STATE ← BUFF_SIZE_BANDPASS = NUM_STAGES_BANDPASS * 4 , NUM_COEFF_DERFILT = 5 ,

BLOCK_SIZE_DERFILT = 1 , STATE_BUFF_SIZE_DERFILT = NUM_COEFF_DERFILT + BLOCK_SIZE ← DERFILT - 1 , BLOCK_SIZE_MOVAVG = 1 , NUM_COEFF_MOVAVG = 10 ,

STATE_BUFF_SIZE_MOVAVG = NUM_COEFF_MOVAVG + BLOCK_SIZE_MOVAVG - 1 }
```

- typedef arm\_biquad\_casd\_df1\_inst\_f32 IIR\_Filt\_t
- typedef arm\_fir\_instance\_f32 FIR\_Filt\_t
- static const float32 t COEFF BANDPASS [NUM COEFF HIGHPASS]
- static const float32 t COEFF DERFILT [NUM COEFF DERFILT]
- static const float32\_t COEFF\_MOVAVG [NUM\_COEFF\_MOVAVG]
- static float32\_t stateBuffer\_bandPass [STATE\_BUFF\_SIZE\_BANDPASS] = { 0 }
- static const IIR\_Filt\_t bandpassFiltStruct = { NUM\_STAGES\_BANDPASS, stateBuffer\_bandPass, COEFF
   —BANDPASS }
- static const IIR Filt t \*const bandpassFilter = &bandpassFiltStruct
- static float32 t stateBuffer DerFilt [STATE BUFF SIZE DERFILT] = { 0 }
- static const FIR\_Filt\_t derivativeFiltStruct = { NUM\_COEFF\_DERFILT, stateBuffer\_DerFilt, COEFF\_
   DERFILT }
- static const FIR\_Filt\_t \*const derivativeFilter = &derivativeFiltStruct
- static float32\_t stateBuffer\_MovingAvg [STATE\_BUFF\_SIZE\_MOVAVG] = { 0 }
- static const FIR\_Filt\_t movingAvgFiltStruct = { NUM\_COEFF\_MOVAVG, stateBuffer\_MovingAvg, COEFF← MOVAVG }
- static const FIR\_Filt\_t \*const movingAverageFilter = &movingAvgFiltStruct

## 7.7.1 Detailed Description

Source code for QRS detection module.

#### Author

### Bryan McElvy


The algorithm used in this file is a simplified version of the Pan-Tompkins algorithm. Specifically, this version currently only uses the integrated signal for the thresholding, and also completely omits the searchback and T wave discrimination parts of the original.

7.8 QRS.h File Reference 117


### 7.8 QRS.h File Reference

Header file for QRS detection module.

```
#include "arm_math_types.h"
#include <stdbool.h>
Include dependency graph for QRS.h:
```

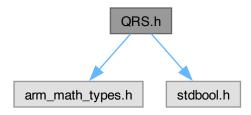

This graph shows which files directly or indirectly include this file:

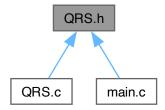

### **Macros**

- #define QRS SAMP FREQ ((uint32 t) 200)
- #define QRS\_SAMP\_PERIOD\_SEC ((float32\_t) 0.005f)
- #define QRS\_NUM\_SAMP ((uint16\_t) (1 << 11))

### **Functions**

### Interface Functions

- void QRS Init (void)
  - Initialize the QRS detector.
- void QRS\_Preprocess (const float32\_t xn[], float32\_t yn[])
  - Preprocess the ECG data to remove noise and/or exaggerate the signal characteristic(s) of interest.
- float32\_t QRS\_applyDecisionRules (const float32\_t yn[])
  - Calculate the average heart rate (HR) using predetermined decision rules.
- float32\_t QRS\_runDetection (const float32\_t xn[], float32\_t yn[])

Run the full algorithm (preprocessing and decision rules) on the inputted ECG data.

### 7.8.1 Detailed Description

Header file for QRS detection module.


**Author** 

Bryan McElvy

### 7.9 Fifo.c File Reference

Source code for FIFO buffer module.

```
#include "FIFO.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Fifo.c:
```

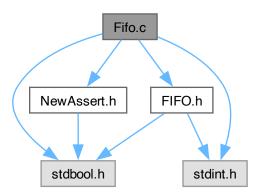

## **Data Structures**

• struct Fifo\_t

## **Functions**

Fifo\_t FIFO\_Init (volatile uint32\_t buffer[], const uint32\_t N)
 Initialize a FIFO buffer of length N.

## **Basic Operations**

- void FIFO\_Put (volatile Fifo\_t fifo, const uint32\_t val)
   Add a value to the end of the buffer.
- uint32\_t FIFO\_Get (volatile Fifo\_t fifo)

  Remove the first value of the buffer.

7.9 Fifo.c File Reference 119

void FIFO\_TransferOne (volatile Fifo\_t srcFifo, volatile Fifo\_t destFifo)
 Transfer a value from one FIFO buffer to another.

### **Bulk Removal**

void FIFO\_Flush (volatile Fifo\_t fifo, uint32\_t outputBuffer[])

Empty the FIFO buffer's contents into an array.

void FIFO Reset (volatile Fifo t fifo)

Reset the FIFO buffer.

void FIFO\_TransferAll (volatile Fifo\_t srcFifo, volatile Fifo\_t destFifo)

Transfer the contents of one FIFO buffer to another.

### **Peeking**

• uint32\_t FIFO\_PeekOne (volatile Fifo\_t fifo)

See the first element in the FIFO without removing it.

• void FIFO\_PeekAll (volatile Fifo\_t fifo, uint32\_t outputBuffer[])

See the FIFO buffer's contents without removing them.

### **Status Checks**

• bool FIFO\_isFull (volatile Fifo\_t fifo)

Check if the FIFO buffer is full.

bool FIFO\_isEmpty (volatile Fifo\_t fifo)

Check if the FIFO buffer is empty.

uint32\_t FIFO\_getCurrSize (volatile Fifo\_t fifo)

Get the current size of the FIFO buffer.

### **Variables**

```
• static FifoStruct_t fifoPool [FIFO_POOL_SIZE] = { 0 }
```

pre-allocated pool

• static uint8\_t numFreeFifos = FIFO\_POOL\_SIZE

### 7.9.1 Detailed Description

Source code for FIFO buffer module.


**Author** 

Bryan McElvy


## 7.10 Fifo.h File Reference

Header file for FIFO buffer implementation.

```
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Fifo.h:
```

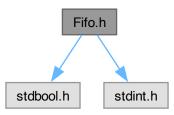

This graph shows which files directly or indirectly include this file:

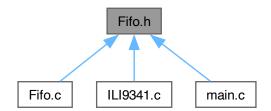

### **Macros**

• #define FIFO\_POOL\_SIZE 5

## **Functions**

Fifo\_t FIFO\_Init (volatile uint32\_t buffer[], const uint32\_t N)
 Initialize a FIFO buffer of length N.

# **Basic Operations**

- void FIFO\_Put (volatile Fifo\_t fifo, const uint32\_t val)

  Add a value to the end of the buffer.
- uint32\_t FIFO\_Get (volatile Fifo\_t fifo)

Remove the first value of the buffer.

void FIFO\_TransferOne (volatile Fifo\_t srcFifo, volatile Fifo\_t destFifo)

Transfer a value from one FIFO buffer to another.

### **Bulk Removal**

• void FIFO\_Flush (volatile Fifo\_t fifo, uint32\_t outputBuffer[])

Empty the FIFO buffer's contents into an array.

void FIFO Reset (volatile Fifo t fifo)

Reset the FIFO buffer.

• void FIFO\_TransferAll (volatile Fifo\_t srcFifo, volatile Fifo\_t destFifo)

Transfer the contents of one FIFO buffer to another.

### **Peeking**

• uint32\_t FIFO\_PeekOne (volatile Fifo\_t fifo)

See the first element in the FIFO without removing it.

void FIFO\_PeekAll (volatile Fifo\_t fifo, uint32\_t outputBuffer[])

See the FIFO buffer's contents without removing them.

### **Status Checks**

• bool FIFO\_isFull (volatile Fifo\_t fifo)

Check if the FIFO buffer is full.

• bool FIFO\_isEmpty (volatile Fifo\_t fifo)

Check if the FIFO buffer is empty.

• uint32\_t FIFO\_getCurrSize (volatile Fifo\_t fifo)

Get the current size of the FIFO buffer.

### 7.10.1 Detailed Description

Header file for FIFO buffer implementation.

Author


Bryan McElvy

## 7.11 NewAssert.c File Reference

Source code for custom  ${\tt assert}$  implementation.

```
#include "NewAssert.h"
#include <stdbool.h>
```

Include dependency graph for NewAssert.c:

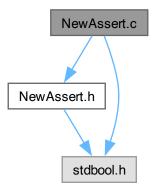

### **Functions**

• void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

# 7.11.1 Detailed Description

Source code for custom  ${\tt assert}$  implementation.

Author


Bryan McElvy

### 7.12 NewAssert.h File Reference

 $\label{thm:lementation} \textbf{Header file for custom} \ \texttt{assert implementation}.$ 

#include <stdbool.h>

Include dependency graph for NewAssert.h:

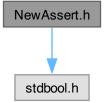

7.13 ADC.c File Reference 123

This graph shows which files directly or indirectly include this file:



#### **Functions**

· void Assert (bool condition)

Custom assert implementation that is more lightweight than the one from newlib.

## 7.12.1 Detailed Description

Header file for custom assert implementation.


**Author** 

Bryan McElvy

## 7.13 ADC.c File Reference

Source code ffor analog-to-digital conversion (ADC) module.

```
#include "ADC.h"
#include "GPIO.h"
#include "tm4c123gh6pm.h"
Include dependency graph for ADC.c:
```

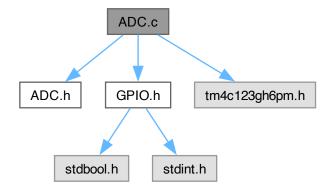

## **Functions**

• void ADC\_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

## 7.13.1 Detailed Description

Source code ffor analog-to-digital conversion (ADC) module.


**Author** 

Bryan McElvy

## 7.14 ADC.h File Reference

Header file for analog-to-digital conversion (ADC) module.

This graph shows which files directly or indirectly include this file:

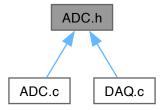

### **Functions**

• void ADC\_Init (void)

Initialize ADC0 as a single-input analog-to-digital converter.

## 7.14.1 Detailed Description

Header file for analog-to-digital conversion (ADC) module.


**Author** 

Bryan McElvy

### 7.15 GPIO.c File Reference

Source code for GPIO module.

```
#include "GPIO.h"
#include <NewAssert.h>
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for GPIO.c:
```

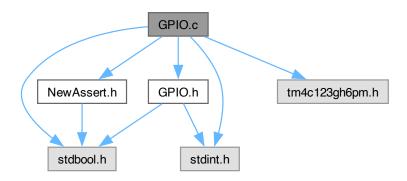

### **Data Structures**

struct GpioPort\_t

#### **Macros**

• #define GPIO NUM PORTS 6

### **Enumerations**

enum {

 $\begin{array}{l} \textbf{GPIO\_PORTA\_BASE\_ADDRESS} = (uint32\_t) \ 0x40004000 \ , \ \textbf{GPIO\_PORTB\_BASE\_ADDRESS} = (uint32 \hookleftarrow 0x40005000 \ , \ \textbf{GPIO\_PORTC\_BASE\_ADDRESS} = (uint32\_t) \ 0x40006000 \ , \ \textbf{GPIO\_PORTD\_BASE\_} \\ \textbf{ADDRESS} = (uint32\_t) \ 0x40007000 \ , \end{array}$ 

**GPIO\_PORTE\_BASE\_ADDRESS** = (uint32\_t) 0x40024000 , **GPIO\_PORTF\_BASE\_ADDRESS** = (uint32\_t) 0x40025000 }

• enum {

GPIO\_DATA\_R\_OFFSET = (uint32\_t) 0x03FC , GPIO\_DIR\_R\_OFFSET = (uint32\_t) 0x0400 , GPIO\_IS\_R ← OFFSET = (uint32\_t) 0x0404 , GPIO\_IBE\_R\_OFFSET = (uint32\_t) 0x0408 ,

 $\label{eq:gpio_int} \begin{aligned} & \textbf{GPIO\_IEV}\_\textbf{R\_OFFSET} = (uint32\_t) \ 0x0410 \ , \ & \textbf{GPIO\_ICR}\_\textbf{R}\_ \\ & \textbf{OFFSET} = (uint32\_t) \ 0x0410 \ , \ & \textbf{GPIO\_AFSEL}\_\textbf{R\_OFFSET} = (uint32\_t) \ 0x0420 \ , \end{aligned}$ 

 $\label{eq:gpio_draft} \begin{aligned} & \textbf{GPIO\_DR2R\_R\_OFFSET} = (uint32\_t) \ 0x0500 \ , \ & \textbf{GPIO\_DR4R\_R\_OFFSET} = (uint32\_t) \ 0x0504 \ , \ & \textbf{GPIO\_} \\ & \textbf{DR8R\_R\_OFFSET} = (uint32\_t) \ 0x0508 \ , \ & \textbf{GPIO\_PUR\_R\_OFFSET} = (uint32\_t) \ 0x0510 \ , \end{aligned}$ 

 $\label{eq:gpio_pdr_roffset} \begin{aligned} & \textbf{GPIO\_PDR\_R\_OFFSET} = (uint32\_t) \ 0x0518 \ , \ & \textbf{GPIO\_DEN\_R\_OFFSET} = (uint32\_t) \ 0x051C \ , \ & \textbf{GPIO\_} \\ & \textbf{LOCK\_R\_OFFSET} = (uint32\_t) \ 0x0520 \ , \ & \textbf{GPIO\_COMMIT\_R\_OFFSET} = (uint32\_t) \ 0x0524 \ , \end{aligned}$ 

 $\textbf{GPIO\_AMSEL\_R\_OFFSET} = (uint32\_t) \ 0x0528 \ , \ \textbf{GPIO\_PCTL\_R\_OFFSET} = (uint32\_t) \ 0x052C \ \}$ 

#### **Functions**

• GpioPort\_t GPIO\_InitPort (GPIO\_PortName\_t portName)

Initialize a GPIO Port and return a pointer to its struct.

bool GPIO\_isPortInit (GpioPort\_t gpioPort)

Check if the GPIO port is initialized.

uint32\_t GPIO\_getBaseAddr (GpioPort\_t gpioPort)

Get the base address of a GPIO port.

• void GPIO ConfigDirOutput (GpioPort t gpioPort, GPIO Pin t pinMask)

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

void GPIO\_ConfigDirInput (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

void GPIO\_ConfigPullUp (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Activate the specified pins' internal pull-up resistors.

void GPIO\_ConfigPullDown (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Activate the specified pins' internal pull-down resistors.

void GPIO ConfigDriveStrength (GpioPort t gpioPort, GPIO Pin t pinMask, uint8 t drive mA)

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

• void GPIO EnableDigital (GpioPort t gpioPort, GPIO Pin t pinMask)

Enable digital I/O for the specified pins.

void GPIO\_DisableDigital (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Disable digital I/O for the specified pins.

void GPIO\_ConfigInterrupts\_Edge (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask, bool risingEdge)

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

• void GPIO\_ConfigInterrupts\_BothEdges (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

void GPIO ConfigInterrupts LevelTrig (GpioPort t gpioPort, GPIO Pin t pinMask, bool highLevel)

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

· void GPIO ConfigNVIC (GpioPort t gpioPort, uint8 t priority)

Configure interrupts for the selected port in the NVIC.

• uint32\_t GPIO\_getDataRegister (GpioPort\_t gpioPort)

Get the address of a GPIO port's data register.

• uint8 t GPIO ReadPins (GpioPort t gpioPort, GPIO Pin t pinMask)

Read from the specified GPIO pin.

void GPIO\_WriteHigh (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Write a 1 to the specified GPIO pins.

· void GPIO WriteLow (GpioPort t gpioPort, GPIO Pin t pinMask)

Write a 0 to the specified GPIO pins.

void GPIO\_Toggle (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Toggle the specified GPIO pins.

void GPIO ConfigAltMode (GpioPort t gpioPort, GPIO Pin t pinMask)

Activate the alternate mode for the specified pins.

• void GPIO\_ConfigPortCtrl (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask, uint8\_t fieldEncoding)

Specify the alternate mode to use for the specified pins.

void GPIO ConfigAnalog (GpioPort t gpioPort, GPIO Pin t pinMask)

Activate analog mode for the specified GPIO pins.

### **Variables**

• static GpioPortStruct\_t GPIO\_PTR\_ARR [6]

### 7.15.1 Detailed Description

Source code for GPIO module.

**Author** 

Bryan McElvy

# 7.15.2 Function Documentation

## GPIO\_InitPort()

Initialize a GPIO Port and return a pointer to its struct.

### **Parameters**

in	portName	Name of the chosen port.
out	gpioPort	Pointer to the specified GPIO port.

## GPIO\_isPortInit()

Check if the GPIO port is initialized.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
out	true	The GPIO port is initialized.
out	false	The GPIO port has not been initialized.

### GPIO\_getBaseAddr()

Get the base address of a GPIO port.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
out	baseAddress	Base address of the GPIO port.

## **GPIO\_ConfigDirOutput()**

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended OUTPUT pin(s).

## **GPIO\_ConfigDirInput()**

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended INPUT pin(s).

# GPIO\_ConfigPullUp()

Activate the specified pins' internal pull-up resistors.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

## GPIO\_ConfigPullDown()

Activate the specified pins' internal pull-down resistors.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

### **GPIO\_ConfigDriveStrength()**

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	drive_mA	Drive strength in [mA]. Should be 2, 4, or 8 [mA].

### GPIO\_EnableDigital()

Enable digital I/O for the specified pins.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

## GPIO\_DisableDigital()

Disable digital I/O for the specified pins.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

## **GPIO\_ConfigInterrupts\_Edge()**

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	risingEdge	true for rising edge, false for falling edge

## GPIO\_ConfigInterrupts\_BothEdges()

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

## **GPIO\_ConfigInterrupts\_LevelTrig()**

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

### **Parameters**

in	gpioPort Pointer to the specified GPIO port.	
in	pinMask Bit mask corresponding to the intended pin(s	
in	n highLevel true for high level, false for low level	

# GPIO\_ConfigNVIC()

Configure interrupts for the selected port in the NVIC.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in <i>priority</i>		Priority number between 0 (highest) and 7 (lowest).

## GPIO\_getDataRegister()

Get the address of a GPIO port's data register.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
out	dataRegister	Address of the GPIO port's data register.

## GPIO\_ReadPins()

Read from the specified GPIO pin.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

## GPIO\_WriteHigh()

Write a  $\ensuremath{\mathbb{1}}$  to the specified GPIO pins.

### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in <i>pinMask</i>		Bit mask corresponding to the intended pin(s).

# GPIO\_WriteLow()

Write a  $\ 0$  to the specified GPIO pins.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

## GPIO\_Toggle()

Toggle the specified GPIO pins.

# **Parameters**

	in	gpioPort	Port Pointer to the specified GPIO port.	
Ī	in	pinMask	Bit mask corresponding to the intended pin(s).	

## **GPIO\_ConfigAltMode()**

Activate the alternate mode for the specified pins.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask Bit mask corresponding to the intended	

### GPIO\_ConfigPortCtrl()

Specify the alternate mode to use for the specified pins.

#### **Parameters**

in <i>gpioPort</i> Pointer to		gpioPort	Pointer to the specified GPIO port.
ſ	in <i>pinMask</i>		Bit mask corresponding to the intended pin(s).
Ī	in fieldEncoding		Number corresponding to intended alternate mode.

## GPIO\_ConfigAnalog()

Activate analog mode for the specified GPIO pins.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

### 7.15.3 Variable Documentation

### GPIO\_PTR\_ARR


```
GpioPortStruct_t GPIO_PTR_ARR[6] [static]
```

#### Initial value:


## 7.16 GPIO.h File Reference

Header file for general-purpose input/output (GPIO) device driver.

```
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for GPIO.h:
```

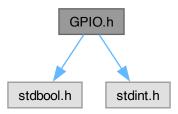

This graph shows which files directly or indirectly include this file:

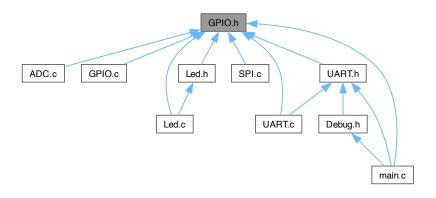

## **Enumerations**

```
enum GPIO_PortName_t {
    GPIO_PORT_A , GPIO_PORT_B , GPIO_PORT_C , GPIO_PORT_D ,
    GPIO_PORT_E , GPIO_PORT_F , A = GPIO_PORT_A , B = GPIO_PORT_B ,
    C = GPIO_PORT_C , D = GPIO_PORT_D , E = GPIO_PORT_E , F = GPIO_PORT_F }

enum GPIO_Pin_t {
    GPIO_PIN0 = ((uint8_t) 1) , GPIO_PIN1 = ((uint8_t) (1 << 1)) , GPIO_PIN2 = ((uint8_t) (1 << 2)) , GPIO_PIN3 = ((uint8_t) (1 << 3)) ,
    GPIO_PIN4 = ((uint8_t) (1 << 4)) , GPIO_PIN5 = ((uint8_t) (1 << 5)) , GPIO_PIN6 = ((uint8_t) (1 << 6)) ,
    GPIO_PIN7 = ((uint8_t) (1 << 7)) ,
    GPIO_ALL_PINS = ((uint8_t) (0xFF)) }
</li>
enum GPIO_LAUNCHPAD_LEDS {
    LED_RED = GPIO_PIN1 , LED_GREEN = GPIO_PIN3 , LED_BLUE = GPIO_PIN2 , LED_YELLOW = (LED_RED + LED_GREEN) ,
    LED_CYAN = (LED_BLUE + LED_GREEN) , LED_PURPLE = (LED_RED + LED_BLUE) , LED_WHITE = (LED_RED + LED_BLUE + LED_GREEN) }
```

#### **Functions**

• GpioPort\_t GPIO\_InitPort (GPIO\_PortName\_t portName)

Initialize a GPIO Port and return a pointer to its struct.

uint32\_t GPIO\_getBaseAddr (GpioPort\_t gpioPort)

Get the base address of a GPIO port.

• bool GPIO\_isPortInit (GpioPort\_t gpioPort)

Check if the GPIO port is initialized.

• void GPIO ConfigDirOutput (GpioPort t gpioPort, GPIO Pin t pinMask)

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

void GPIO\_ConfigDirInput (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

void GPIO\_ConfigPullUp (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Activate the specified pins' internal pull-up resistors.

void GPIO\_ConfigPullDown (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Activate the specified pins' internal pull-down resistors.

void GPIO ConfigDriveStrength (GpioPort t gpioPort, GPIO Pin t pinMask, uint8 t drive mA)

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

• void GPIO EnableDigital (GpioPort t gpioPort, GPIO Pin t pinMask)

Enable digital I/O for the specified pins.

void GPIO\_DisableDigital (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Disable digital I/O for the specified pins.

void GPIO\_ConfigInterrupts\_Edge (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask, bool risingEdge)

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

• void GPIO\_ConfigInterrupts\_BothEdges (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

void GPIO ConfigInterrupts LevelTrig (GpioPort t gpioPort, GPIO Pin t pinMask, bool highLevel)

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

• void GPIO\_ConfigNVIC (GpioPort\_t gpioPort, uint8\_t priority)

Configure interrupts for the selected port in the NVIC.

uint32\_t GPIO\_getDataRegister (GpioPort\_t gpioPort)

Get the address of a GPIO port's data register.

• uint8 t GPIO ReadPins (GpioPort t gpioPort, GPIO Pin t pinMask)

Read from the specified GPIO pin.

void GPIO\_WriteHigh (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Write a 1 to the specified GPIO pins.

· void GPIO WriteLow (GpioPort t gpioPort, GPIO Pin t pinMask)

Write a 0 to the specified GPIO pins.

void GPIO\_Toggle (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask)

Toggle the specified GPIO pins.

void GPIO ConfigAltMode (GpioPort t gpioPort, GPIO Pin t pinMask)

Activate the alternate mode for the specified pins.

• void GPIO\_ConfigPortCtrl (GpioPort\_t gpioPort, GPIO\_Pin\_t pinMask, uint8\_t fieldEncoding)

Specify the alternate mode to use for the specified pins.

void GPIO ConfigAnalog (GpioPort t gpioPort, GPIO Pin t pinMask)

Activate analog mode for the specified GPIO pins.

## 7.16.1 Detailed Description

Header file for general-purpose input/output (GPIO) device driver.

Author

Bryan McElvy

## 7.16.2 Enumeration Type Documentation

## GPIO\_LAUNCHPAD\_LEDS

```
enum GPIO_LAUNCHPAD_LEDS
```

#### Enumerator

LED_RED	PF1.
LED_GREEN	PF3.
LED_BLUE	PF2.

### 7.16.3 Function Documentation

# GPIO\_InitPort()

Initialize a GPIO Port and return a pointer to its struct.

### **Parameters**

in	portName	Name of the chosen port.
out	gpioPort	Pointer to the specified GPIO port.

# GPIO\_getBaseAddr()

Get the base address of a GPIO port.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
out	baseAddress	Base address of the GPIO port.

### GPIO\_isPortInit()

Check if the GPIO port is initialized.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
out	true	The GPIO port is initialized.
out	false	The GPIO port has not been initialized.

### GPIO ConfigDirOutput()

Configure the direction of the specified GPIO pins. All pins are configured to INPUT by default, so this function should only be called to specify OUTPUT pins.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended OUTPUT pin(s).

## **GPIO\_ConfigDirInput()**

Configure the specified GPIO pins as INPUT pins. All pins are configured to INPUT by default, so this function is technically unnecessary, but useful for code readability.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	bitMask	Bit mask corresponding to the intended INPUT pin(s).

# GPIO\_ConfigPullUp()

Activate the specified pins' internal pull-up resistors.

### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).

## GPIO\_ConfigPullDown()

Activate the specified pins' internal pull-down resistors.

### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).

## **GPIO\_ConfigDriveStrength()**

Configure the specified pins' drive strength. Pins are initialized with 2[mA] drive strength, so this is only needed for a drive strength of 4[mA] or 8[mA].

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).
in	drive_mA	Drive strength in [mA]. Should be 2, 4, or 8 [mA].

## GPIO\_EnableDigital()

Enable digital I/O for the specified pins.

### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
Γ	in	pinMask	Bit mask corresponding to the intended pin(s).

### GPIO\_DisableDigital()

Disable digital I/O for the specified pins.

### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
ſ	in	pinMask	Bit mask corresponding to the intended pin(s).

### **GPIO\_ConfigInterrupts\_Edge()**

Configure the specified GPIO pins to trigger an interrupt on the rising or falling edge of an input.

#### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.
	in	pinMask	Bit mask corresponding to the intended pin(s).
ſ	in	risingEdge	true for rising edge, false for falling edge

## **GPIO\_ConfigInterrupts\_BothEdges()**

Configure the specified GPIO pins to trigger an interrupt on both edges of an input.

## **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended $pin(s)$ .

## **GPIO\_ConfigInterrupts\_LevelTrig()**

Configure the specified GPIO pins to trigger an interrupt on a high level or low level pulse.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).	
in	highLevel true for high level, false for low level		

## GPIO\_ConfigNVIC()

Configure interrupts for the selected port in the NVIC.

## **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	priority	Priority number between 0 (highest) and 7 (lowest).

### GPIO\_getDataRegister()

Get the address of a GPIO port's data register.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.	
out	dataRegister	Address of the GPIO port's data register.	

## GPIO\_ReadPins()

Read from the specified GPIO pin.

#### **Parameters**

Ī	in	gpioPort	Pointer to the specified GPIO port.
	in	pinMask	Bit mask corresponding to the intended pin(s).

## GPIO\_WriteHigh()

Write a  $\ensuremath{\mathbb{1}}$  to the specified GPIO pins.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

### GPIO\_WriteLow()

Write a 0 to the specified GPIO pins.

#### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.
in	pinMask	Bit mask corresponding to the intended pin(s).

### GPIO\_Toggle()

Toggle the specified GPIO pins.

### **Parameters**

in	gpioPort Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).

## GPIO\_ConfigAltMode()

Activate the alternate mode for the specified pins.

#### **Parameters**

in	gpioPort	Port Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).	

## GPIO\_ConfigPortCtrl()

Specify the alternate mode to use for the specified pins.

#### **Parameters**

	in	gpioPort	Pointer to the specified GPIO port.	
	in	pinMask Bit mask corresponding to the intended pin(s).		
Ī	in	fieldEncoding	Number corresponding to intended alternate mode.	

## GPIO\_ConfigAnalog()

Activate analog mode for the specified GPIO pins.

### **Parameters**

in	gpioPort	Pointer to the specified GPIO port.	
in	pinMask	Bit mask corresponding to the intended pin(s).	


## 7.17 ISR.c File Reference

Source code for interrupt service routine (ISR) configuration module.

```
#include "ISR.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

7.17 ISR.c File Reference 145

Include dependency graph for ISR.c:

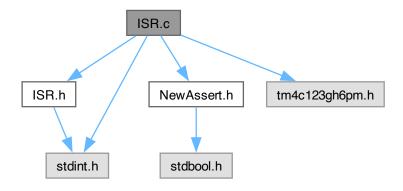

#### **Macros**

- #define VECTOR\_TABLE\_BASE\_ADDR ((uint32\_t) 0x00000000)
- #define VECTOR\_TABLE\_SIZE ((uint32\_t) 155)
- #define VECTOR\_TABLE\_ALIGNMENT ((uint32\_t) (1 << 10))</li>
- #define NVIC\_EN\_BASE\_ADDR ((uint32\_t) 0xE000E100)
- #define NVIC\_DIS\_BASE\_ADDR ((uint32\_t) 0xE000E180)
- #define NVIC PRI BASE ADDR ((uint32 t) 0xE000E400)
- #define NVIC UNPEND BASE ADDR ((uint32 t) 0xE000E280)

#### **Functions**

- static void ISR\_setStatus (const uint8\_t vectorNum, const bool isEnabled)
- void ISR\_GlobalDisable (void)

Disable all interrupts globally.

• void ISR\_GlobalEnable (void)

Enable all interrupts globally.

- static ISR\_t newVectorTable[VECTOR\_TABLE\_SIZE] \_\_attribute\_\_ ((aligned(VECTOR\_TABLE\_← ALIGNMENT)))
- void ISR\_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR\_addToIntTable (ISR\_t isr, const uint8\_t vectorNum)

Add an ISR to the interrupt table.

void ISR\_setPriority (const uint8\_t vectorNum, const uint8\_t priority)

Set the priority for an interrupt.

void ISR\_Enable (const uint8\_t vectorNum)

Enable an interrupt in the NVIC.

void ISR\_Disable (const uint8\_t vectorNum)

Disable an interrupt in the NVIC.

void ISR\_triggerInterrupt (const uint8\_t vectorNum)

Generate a software-generated interrupt (SGI).

## **Variables**

- static bool interruptsAreEnabled = true
- void(\*const interruptVectorTable [])(void)
- static bool isTableCopiedToRam = false

## 7.17.1 Detailed Description

Source code for interrupt service routine (ISR) configuration module.


**Author** 

Bryan McElvy


## 7.18 ISR.h File Reference

Header file for interrupt service routine (ISR) configuration module.

#include <stdint.h>
Include dependency graph for ISR.h:

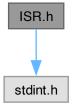

This graph shows which files directly or indirectly include this file:

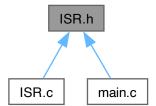

7.19 PLL.c File Reference 147

#### **Typedefs**

typedef void(\* ISR\_t) (void)

Type definition for function pointers representing ISRs.

#### **Functions**

• void ISR\_GlobalDisable (void)

Disable all interrupts globally.

void ISR\_GlobalEnable (void)

Enable all interrupts globally.

• void ISR\_InitNewTableInRam (void)

Relocate the vector table to RAM.

void ISR\_addToIntTable (ISR\_t isr, const uint8\_t vectorNum)

Add an ISR to the interrupt table.

void ISR\_setPriority (const uint8\_t vectorNum, const uint8\_t priority)

Set the priority for an interrupt.

void ISR\_Enable (const uint8\_t vectorNum)

Enable an interrupt in the NVIC.

void ISR\_Disable (const uint8\_t vectorNum)

Disable an interrupt in the NVIC.

void ISR\_triggerInterrupt (const uint8\_t vectorNum)

Generate a software-generated interrupt (SGI).

### 7.18.1 Detailed Description

Header file for interrupt service routine (ISR) configuration module.


**Author** 

Bryan McElvy

#### 7.19 PLL.c File Reference

Implementation details for phase-lock-loop (PLL) functions.

```
#include "PLL.h"
#include "tm4c123gh6pm.h"
Include dependency graph for PLL.c:
```

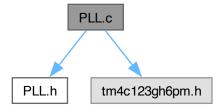

## **Functions**

void PLL\_Init (void)
 Initialize the phase-locked-loop to change the bus frequency.

## 7.19.1 Detailed Description

Implementation details for phase-lock-loop (PLL) functions.


**Author** 

Bryan McElvy

## 7.20 PLL.h File Reference

Driver module for activating the phase-locked-loop (PLL).

This graph shows which files directly or indirectly include this file:

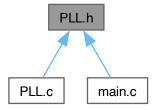

### **Functions**

• void PLL\_Init (void)

Initialize the phase-locked-loop to change the bus frequency.

## 7.20.1 Detailed Description

Driver module for activating the phase-locked-loop (PLL).

**Author** 


Bryan McElvy

7.21 SPI.c File Reference 149

### 7.21 SPI.c File Reference

Source code for serial peripheral interface (SPI) module.

```
#include "SPI.h"
#include "GPIO.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for SPI.c:
```

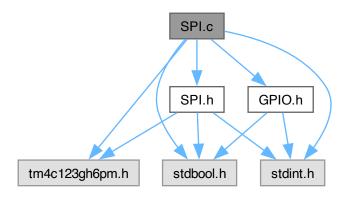

#### **Macros**

- #define SPI\_SET\_DC() (GPIO\_PORTA\_DATA\_R |= 0x40)
- #define **SPI CLEAR DC**() (GPIO PORTA DATA R  $\&=\sim$ (0x40))
- #define SPI\_IS\_BUSY (SSI0\_SR\_R & 0x10)
- #define SPI\_TX\_ISNOTFULL (SSI0\_SR\_R & 0x02)

#### **Enumerations**

• enum {

SPI\_CLK\_PIN = GPIO\_PIN2 , SPI\_CS\_PIN = GPIO\_PIN3 , SPI\_RX\_PIN = GPIO\_PIN4 , SPI\_TX\_PIN = GPIO\_PIN5 , SPI\_RX\_PIN = GPIO\_PI

$$\begin{split} \textbf{SPI\_DC\_PIN} &= \texttt{GPIO\_PIN6} \;, \; \textbf{SPI\_RESET\_PIN} = \texttt{GPIO\_PIN7} \;, \; \textbf{SPI\_SSI0\_PINS} = (\texttt{SPI\_CLK\_PIN} \mid \texttt{SPI\_} \leftarrow \texttt{CS\_PIN} \mid \texttt{SPI\_RX\_PIN} \mid \texttt{SPI\_TX\_PIN}) \;, \; \textbf{SPI\_GPIO\_PINS} = (\texttt{SPI\_DC\_PIN} \mid \texttt{SPI\_RESET\_PIN}) \;, \; \textbf{SPI\_ALL\_PINS} = (\texttt{SPI\_SSI0\_PINS} \mid \texttt{SPI\_GPIO\_PINS}) \; \} \end{split}$$

### **Functions**

• void SPI\_Init (void)

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

uint8\_t SPI\_Read (void)

Read data from the serial port.

void SPI\_WriteCmd (uint8\_t cmd)

Write a command to the serial port.

void SPI\_WriteData (uint8\_t data)

Write data to the serial port.

## 7.21.1 Detailed Description

Source code for serial peripheral interface (SPI) module.


Author

Bryan McElvy


### 7.22 SPI.h File Reference

Header file for serial peripheral interface (SPI) module.

```
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for SPI.h:
```

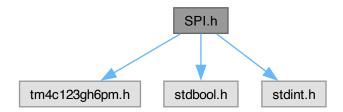

This graph shows which files directly or indirectly include this file:

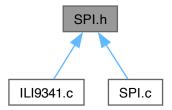

### **Macros**

- #define **SPI\_CLEAR\_RESET**() (GPIO\_PORTA\_DATA\_R &=  $\sim$ (0x80))
- #define  $SPI\_SET\_RESET()$  (GPIO\_PORTA\_DATA\_R |= 0x80)

#### **Functions**

```
    void SPI_Init (void)
```

Initialize SSI0 to act as an SPI Controller (AKA Master) in mode 0.

uint8\_t SPI\_Read (void)

Read data from the serial port.

void SPI\_WriteCmd (uint8\_t cmd)

Write a command to the serial port.

void SPI\_WriteData (uint8\_t data)

Write data to the serial port.

#### 7.22.1 Detailed Description

Header file for serial peripheral interface (SPI) module.

**Author** 


Bryan McElvy

### 7.23 SysTick.c File Reference

Implementation details for SysTick functions.

```
#include "SysTick.h"
#include "tm4c123gh6pm.h"
#include <stdint.h>
```

Include dependency graph for SysTick.c:

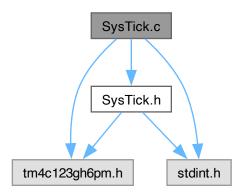

### **Functions**

• void SysTick\_Timer\_Init (void)

Initialize SysTick for timing purposes.

void SysTick\_Wait1ms (uint32\_t delay\_ms)

Delay for specified amount of time in [ms]. Assumes f\_bus = 80[MHz].

void SysTick\_Interrupt\_Init (uint32\_t time\_ms)

Initialize SysTick for interrupts.

### 7.23.1 Detailed Description

Implementation details for SysTick functions.


**Author** 

Bryan McElvy


## 7.24 SysTick.h File Reference

Driver module for using SysTick-based timing and/or interrupts.

```
#include "tm4c123gh6pm.h"
#include <stdint.h>
Include dependency graph for SysTick.h:
```

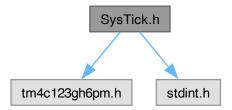

This graph shows which files directly or indirectly include this file:

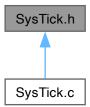

### **Functions**

• void SysTick\_Timer\_Init (void)

Initialize SysTick for timing purposes.

void SysTick\_Wait1ms (uint32\_t delay\_ms)

Delay for specified amount of time in [ms]. Assumes f\_bus = 80[MHz].

void SysTick\_Interrupt\_Init (uint32\_t time\_ms)

Initialize SysTick for interrupts.

### 7.24.1 Detailed Description

Driver module for using SysTick-based timing and/or interrupts.


Author

Bryan McElvy

### 7.25 Timer.c File Reference

Source code for Timer module.

```
#include "Timer.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Timer.c:
```

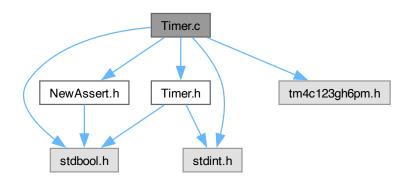

#### **Data Structures**

struct Timer\_t

## **Enumerations**

```
    enum {
        TIMERO_BASE = 0x40030000 , TIMER1_BASE = 0x40031000 , TIMER2_BASE = 0x40032000 , TIMER3
        __BASE = 0x40033000 ,
        TIMER4_BASE = 0x40034000 , TIMER5_BASE = 0x40035000 }
        enum REGISTER_OFFSETS {
            CONFIG = 0x00 , MODE = 0x04 , CTRL = 0x0C , INT_MASK = 0x18 ,
            INT_CLEAR = 0x24 , INTERVAL = 0x28 , VALUE = 0x054 }
```

#### **Functions**

Timer\_t Timer\_Init (timerName\_t timerName)

Initialize a hardware timer.

void Timer\_Deinit (Timer\_t timer)

De-initialize a hardware timer.

timerName\_t Timer\_getName (Timer\_t timer)

Get the name of a timer object.

bool Timer\_isInit (Timer\_t timer)

Check if a timer object is initialized.

• void Timer\_setMode (Timer\_t timer, timerMode\_t timerMode, timerDirection\_t timerDirection)

Set the mode for the timer.

void Timer\_enableAdcTrigger (Timer\_t timer)

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

void Timer\_disableAdcTrigger (Timer\_t timer)

Disable ADC sample capture on timeout.

void Timer enableInterruptOnTimeout (Timer t timer)

Set the timer to trigger an interrupt on timeout.

void Timer disableInterruptOnTimeout (Timer t timer)

Stop the timer from triggering interrupts on timeout.

void Timer\_clearInterruptFlag (Timer\_t timer)

Clear the timer's interrupt flag to acknowledge the interrupt.

void Timer\_setInterval\_ms (Timer\_t timer, uint32\_t time\_ms)

Set the interval to use.

- uint32\_t Timer\_getCurrentValue (Timer\_t timer)
- void Timer Start (Timer t timer)

Start the timer.

void Timer\_Stop (Timer\_t timer)

Stop the timer.

• bool Timer\_isCounting (Timer\_t timer)

Check if the timer is currently counting.

void Timer\_Wait1ms (Timer\_t timer, uint32\_t time\_ms)

Initiate a time delay.

#### **Variables**

• static TimerStruct t TIMER POOL [6]

#### 7.25.1 Detailed Description

Source code for Timer module.


**Author** 

Bryan McElvy


## 7.26 Timer.h File Reference

Device driver for general-purpose timer modules.

```
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Timer.h:
```

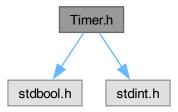

This graph shows which files directly or indirectly include this file:

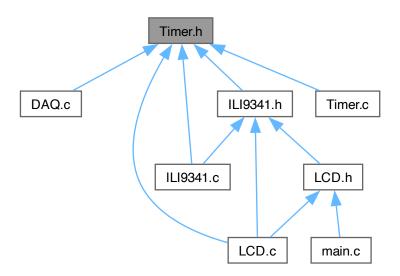

### **Enumerations**

- enum timerName\_t {
   TIMER0 , TIMER1 , TIMER2 , TIMER3 ,
   TIMER4 , TIMER5 }
- enum timerMode\_t { ONESHOT , PERIODIC }
- enum timerDirection\_t { UP , DOWN }

#### **Functions**

• Timer\_t Timer\_Init (timerName\_t timerName)

Initialize a hardware timer.

void Timer\_Deinit (Timer\_t timer)

De-initialize a hardware timer.

timerName\_t Timer\_getName (Timer\_t timer)

Get the name of a timer object.

bool Timer\_isInit (Timer\_t timer)

Check if a timer object is initialized.

• void Timer\_setMode (Timer\_t timer, timerMode\_t timerMode, timerDirection\_t timerDirection)

Set the mode for the timer.

void Timer\_enableAdcTrigger (Timer\_t timer)

Set the timer to trigger ADC sample capture once it reaches timeout (i.e. down to 0 or up to its reload value).

void Timer\_disableAdcTrigger (Timer\_t timer)

Disable ADC sample capture on timeout.

void Timer enableInterruptOnTimeout (Timer t timer)

Set the timer to trigger an interrupt on timeout.

void Timer disableInterruptOnTimeout (Timer t timer)

Stop the timer from triggering interrupts on timeout.

void Timer\_clearInterruptFlag (Timer\_t timer)

Clear the timer's interrupt flag to acknowledge the interrupt.

void Timer\_setInterval\_ms (Timer\_t timer, uint32\_t time\_ms)

Set the interval to use.

- uint32\_t Timer\_getCurrentValue (Timer\_t timer)
- void Timer Start (Timer t timer)

Start the timer.

void Timer\_Stop (Timer\_t timer)

Stop the timer.

• bool Timer\_isCounting (Timer\_t timer)

Check if the timer is currently counting.

void Timer\_Wait1ms (Timer\_t timer, uint32\_t time\_ms)

Initiate a time delay.

### 7.26.1 Detailed Description

Device driver for general-purpose timer modules.


Author

Bryan McElvy

### 7.27 UART.c File Reference

Source code for UART module.

```
#include "UART.h"
#include "GPIO.h"
#include "NewAssert.h"
#include "tm4c123gh6pm.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for UART.c:
```

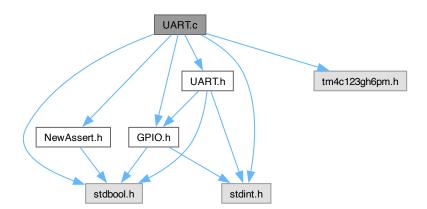

#### **Data Structures**

struct Uart\_t

#### Macros

#define ASCII\_CONVERSION 0x30

#### **Enumerations**

- enum UART\_BASE\_ADDRESSES {
   UART0\_BASE = (uint32\_t) 0x4000C000 , UART1\_BASE = (uint32\_t) 0x4000D000 , UART2\_BASE = (uint32\_t) 0x4000E000 , UART3\_BASE = (uint32\_t) 0x4000F000 ,
   UART4\_BASE = (uint32\_t) 0x40010000 , UART5\_BASE = (uint32\_t) 0x40011000 , UART6\_BASE = (uint32\_t) 0x40012000 , UART7\_BASE = (uint32\_t) 0x40013000 }
- enum UART\_REG\_OFFSETS {
   UART\_FR\_R\_OFFSET = (uint32\_t) 0x18 , IBRD\_R\_OFFSET = (uint32\_t) 0x24 , FBRD\_R\_OFFSET = (uint32\_t) 0x28 , LCRH\_R\_OFFSET = (uint32\_t) 0x2C ,
   CTL\_R\_OFFSET = (uint32\_t) 0x30 , CC\_R\_OFFSET = (uint32\_t) 0xFC8 }

#### **Functions**

• Uart\_t UART\_Init (GpioPort\_t port, uartNum\_t uartNum)

Initialize the specified UART peripheral.

bool UART\_isInit (Uart\_t uart)

Check if the UART object is initialized.

• unsigned char UART\_ReadChar (Uart\_t uart)

Read a single ASCII character from the UART.

void UART\_WriteChar (Uart\_t uart, unsigned char inputChar)

Write a single character to the UART.

• void UART\_WriteStr (Uart\_t uart, void \*inputStr)

Write a C string to the UART.

• void UART\_WriteInt (Uart\_t uart, int32\_t n)

Write a 32-bit unsigned integer the UART.

void UART\_WriteFloat (Uart\_t uart, double n, uint8\_t numDecimals)

Write a floating-point number the UART.

#### **Variables**

• static UartStruct\_t UART\_ARR [8]

## 7.27.1 Detailed Description

Source code for UART module.

**Author** 


Bryan McElvy

## 7.28 UART.h File Reference


Driver module for serial communication via UART0 and UART 1.

```
#include "GPIO.h"
#include <stdbool.h>
#include <stdint.h>
```

Include dependency graph for UART.h:

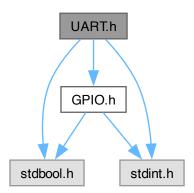

This graph shows which files directly or indirectly include this file:

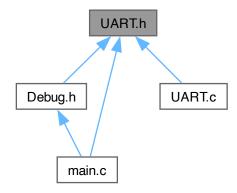

#### **Enumerations**

```
    enum uartNum_t {
    UART0 , UART1 , UART2 , UART3 ,
    UART4 , UART5 , UART6 , UART7 }
```

#### **Functions**

Uart\_t UART\_Init (GpioPort\_t port, uartNum\_t uartNum)

Initialize the specified UART peripheral.

bool UART\_isInit (Uart\_t uart)

Check if the UART object is initialized.

unsigned char UART\_ReadChar (Uart\_t uart)

Read a single ASCII character from the UART.

· void UART\_WriteChar (Uart\_t uart, unsigned char inputChar)

Write a single character to the UART.

• void UART\_WriteStr (Uart\_t uart, void \*inputStr)

Write a C string to the UART.

• void UART\_WriteInt (Uart\_t uart, int32\_t n)

Write a 32-bit unsigned integer the UART.

• void UART\_WriteFloat (Uart\_t uart, double n, uint8\_t numDecimals)

Write a floating-point number the UART.

#### 7.28.1 Detailed Description

Driver module for serial communication via UART0 and UART 1.

#### **Author**


#### Bryan McElvy

```
UARTO uses PAO and PAI, which are not broken out but can connect to a PC's serial port via USB.  
UART1 uses PBO (Rx) and PB1 (Tx), which are broken out but do not connect to a serial port.
```

#### 7.29 main.c File Reference

#### Main program file.

```
#include "DAQ.h"
#include "LCD.h"
#include "QRS.h"
#include "Debug.h"
#include "FIFO.h"
#include "GPIO.h"
#include "ISR.h"
#include "PLL.h"
#include "UART.h"
#include "arm_math_types.h"
#include <math.h>
#include <stdbool.h>
#include dependency graph for main.c:
```

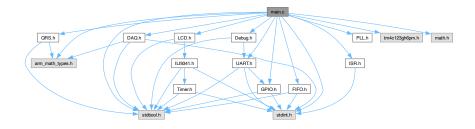

#### **Enumerations**

- enum ISR\_VECTOR\_NUMS { DAQ\_VECTOR\_NUM = INT\_ADC0SS3 , PROC\_VECTOR\_NUM = INT\_CAN0 , LCD\_VECTOR\_NUM = INT\_TIMER1A }
- enum FIFO\_INFO {
   DAQ\_FIFO\_CAP = 3 , DAQ\_ARRAY\_LEN = DAQ\_FIFO\_CAP + 1 , QRS\_FIFO\_CAP = QRS\_NUM\_SAMP ,
   QRS\_ARRAY\_LEN = QRS\_FIFO\_CAP + 1 ,
   LCD\_FIFO\_1\_CAP = DAQ\_FIFO\_CAP , LCD\_ARRAY\_1\_LEN = LCD\_FIFO\_1\_CAP + 1 , LCD\_FIFO\_2\_CAP
   = 1 , LCD\_ARRAY\_2\_LEN = LCD\_FIFO\_2\_CAP + 1 }
- enum LCD\_INFO {
   LCD\_TOP\_LINE = (LCD\_Y\_MAX 24) , LCD\_WAVE\_NUM\_Y = LCD\_TOP\_LINE , LCD\_WAVE\_X\_OFFSET
   = 0 , LCD\_WAVE\_Y\_MIN = (0 + LCD\_WAVE\_X\_OFFSET) ,
   LCD\_WAVE\_Y\_MAX = (LCD\_WAVE\_NUM\_Y + LCD\_WAVE\_X\_OFFSET) , LCD\_TEXT\_LINE\_NUM = 28 ,
   LCD\_TEXT\_COL\_NUM = 24 }

#### **Functions**

- static void DAQ\_Handler (void)
  - ISR for the data acquisition system.
- static void Processing\_Handler (void)
  - ISR for intermediate processing of the input data.
- static void LCD Handler (void)
  - ISR for plotting the waveform and outputting the heart rate to the LCD.
- int main (void)

Main function for the project.

#### **Variables**

- static volatile Fifo\_t **DAQ\_Fifo** = 0
- static volatile uint32\_t **DAQ\_fifoBuffer** [DAQ\_ARRAY\_LEN] = { 0 }
- static volatile Fifo\_t QRS\_Fifo = 0
- static volatile uint32\_t QRS\_fifoBuffer [QRS\_ARRAY\_LEN] = { 0 }
- static volatile Fifo\_t LCD\_Fifo1 = 0
- static volatile uint32\_t LCD\_fifoBuffer1 [LCD\_ARRAY\_1\_LEN] = { 0 }
- static volatile Fifo\_t LCD\_Fifo2 = 0
- static volatile uint32\_t LCD\_fifoBuffer2 [LCD\_ARRAY\_2\_LEN] = { 0 }
- static volatile bool qrsBufferIsFuII = false

flag for QRS detection to start

• static volatile bool heartRateIsReady = false

flag for LCD to output heart rate

- static float32\_t QRS\_processingBuffer [QRS\_ARRAY\_LEN] = { 0 }
- static uint16\_t LCD\_prevSampleBuffer [LCD\_X\_MAX] = { 0 }

### 7.29.1 Detailed Description

Main program file.

**Author** 


Bryan McElvy

### 7.30 Debug.h File Reference


Functions to output debugging information to a serial port via UART.

```
#include "UART.h"
#include <stdbool.h>
```

Include dependency graph for Debug.h:

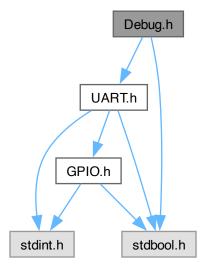

This graph shows which files directly or indirectly include this file:

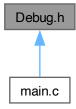

### **Functions**

### Initialization

void Debug\_Init (Uart\_t uart)
 Initialize the Debug module.

#### **Assertions**

• void Debug\_Assert (bool condition)

Stops program if condition is true. Useful for bug detection during debugging.

## **Serial Output**

- enum Msg\_t { DEBUG\_DAQ\_INIT , DEBUG\_QRS\_INIT , DEBUG\_LCD\_INIT , DEBUG\_QRS\_START }
- void Debug\_SendMsg (void \*message)

Send a message to the serial port.

• void Debug\_SendFromList (Msg\_t msg)

Send a message from the message list.

• void Debug\_WriteFloat (double value)

Write a floating-point value to the serial port.

### 7.30.1 Detailed Description

Functions to output debugging information to a serial port via UART.

Author


Bryan McElvy

### 7.31 ILI9341.c File Reference

Source code for ILI9341 module.

```
#include "ILI9341.h"
#include "SPI.h"
#include "Timer.h"
#include "FIFO.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
```

Include dependency graph for ILI9341.c:

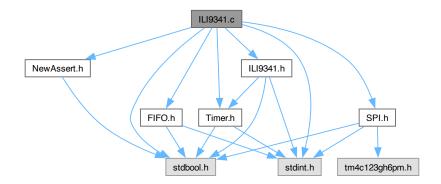

#### **Functions**

- static void ILI9341\_setMode (uint8\_t param)
- static void ILI9341\_setAddress (uint16\_t start\_address, uint16\_t end\_address, bool is\_row)
- static void ILI9341\_sendParams (Cmd\_t cmd)

Send a command and/or the data within the FIFO buffer. A command is only sent when cmd != NOP (where NOP = 0). Data is only sent if the FIFO buffer is not empty.

void ILI9341 Init (Timer t timer)

Initialize the LCD driver and the SPI module.

• void ILI9341\_setInterface (void)

Sets the interface for the ILI9341.

void ILI9341\_resetHard (Timer\_t timer)

Perform a hardware reset of the LCD driver.

• void ILI9341\_resetSoft (Timer\_t timer)

Perform a software reset of the LCD driver.

void ILI9341\_setSleepMode (sleepMode\_t sleepMode, Timer\_t timer)

Enter or exit sleep mode (ON by default).

void ILI9341 setDisplayArea (displayArea t displayArea)

Set the display area.

void ILI9341\_setColorExpression (colorExpr\_t colorExpr)

Set the color expression (FULL\_COLORS by default).

void ILI9341 setPartialArea (uint16 t rowStart, uint16 t rowEnd)

Set the display area for partial mode. Call before activating partial mode.

void ILI9341\_setDispInversion (invertMode\_t invertMode)

Toggle display inversion (OFF by default).

void ILI9341\_setDispOutput (outputMode\_t outputMode)

Change whether the IC is outputting to the display for not.

void ILI9341\_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols
 — Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341\_setColorDepth (colorDepth\_t colorDepth)

Set the color depth for the display.

• void ILI9341\_setFrameRate (uint8\_t divisionRatio, uint8\_t clocksPerLine)

TODO: Write brief.

• void ILI9341 setRowAddress (uint16 t startRow, uint16 t endRow)

Sets the start/end rows to be written to.

void ILI9341\_setColAddress (uint16\_t startCol, uint16\_t endCol)

Sets the start/end columns to be written to.

void ILI9341 writeMemCmd (void)

Signal to the driver that pixel data is incoming and should be written to memory.

• void ILI9341\_writePixel (uint8\_t red, uint8\_t green, uint8\_t blue)

Write a single pixel to frame memory.

#### **Variables**

```
• static uint32_t ILI9341_Buffer [8]
```

• static Fifo\_t ILI9341\_Fifo

struct {

sleepMode\_t sleepMode
displayArea\_t displayArea
colorExpr\_t colorExpression
invertMode\_t invertMode
outputMode\_t outputMode
colorDepth\_t colorDepth
bool isInit

} ili9341 = { SLEEP\_ON, NORMAL\_AREA, FULL\_COLORS, INVERT\_OFF, OUTPUT\_ON, COLORDEPTH\_16BIT, false }

## 7.31.1 Detailed Description

Source code for ILI9341 module.

Author


Bryan McElvy

### 7.32 ILI9341.h File Reference


Driver module for interfacing with an ILI9341 LCD driver.

```
#include "Timer.h"
#include <stdbool.h>
```

#include <stdint.h>
Include dependency graph for ILI9341.h:

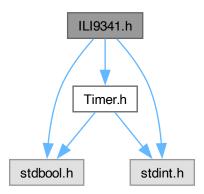

This graph shows which files directly or indirectly include this file:

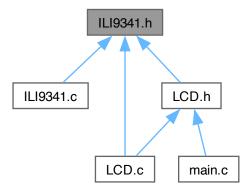

### **Enumerations**

```
    enum { ILI9341_NUM_COLS = 240 , ILI9341_NUM_ROWS = 320 }
    enum Cmd_t {
        NOP = 0x00 , SWRESET = 0x01 , SPLIN = 0x10 , SPLOUT = 0x11 ,
        PTLON = 0x12 , NORON = 0x13 , DINVOFF = 0x20 , DINVON = 0x21 ,
        CASET = 0x2A , PASET = 0x2B , RAMWR = 0x2C , DISPOFF = 0x28 ,
        DISPON = 0x29 , PLTAR = 0x30 , VSCRDEF = 0x33 , MADCTL = 0x36 ,
        VSCRSADD = 0x37 , IDMOFF = 0x38 , IDMON = 0x39 , PIXSET = 0x3A ,
        FRMCTR1 = 0xB1 , FRMCTR2 = 0xB2 , FRMCTR3 = 0xB3 , PRCTR = 0xB5 ,
        IFCTL = 0xF6 }
```

- enum  $sleepMode\_t$  {  $SLEEP\_ON = SPLIN$  ,  $SLEEP\_OFF = SPLOUT$  }

- enum displayArea\_t { NORMAL\_AREA = NORON , PARTIAL\_AREA = PTLON }
- enum colorExpr t { FULL COLORS = IDMOFF , PARTIAL COLORS = IDMON }
- enum invertMode\_t { INVERT\_ON = DINVON , INVERT\_OFF = DINVOFF }
- enum outputMode t { OUTPUT ON = DISPON , OUTPUT OFF = DISPOFF }
- enum colorDepth\_t { COLORDEPTH\_16BIT = 0x55 , COLORDEPTH\_18BIT = 0x66 }

#### **Functions**

void ILI9341 Init (Timer t timer)

Initialize the LCD driver and the SPI module.

• void ILI9341\_setInterface (void)

Sets the interface for the ILI9341.

• void ILI9341\_resetHard (Timer\_t timer)

Perform a hardware reset of the LCD driver.

void ILI9341 resetSoft (Timer t timer)

Perform a software reset of the LCD driver.

void ILI9341 setSleepMode (sleepMode t sleepMode, Timer t timer)

Enter or exit sleep mode (ON by default).

void ILI9341\_setDisplayArea (displayArea\_t displayArea)

Set the display area.

void ILI9341\_setPartialArea (uint16\_t rowStart, uint16\_t rowEnd)

Set the display area for partial mode. Call before activating partial mode.

void ILI9341\_setColorExpression (colorExpr\_t colorExpr)

Set the color expression (FULL\_COLORS by default).

void ILI9341\_setDispInversion (invertMode\_t invertMode)

Toggle display inversion (OFF by default).

void ILI9341\_setDispOutput (outputMode\_t outputMode)

Change whether the IC is outputting to the display for not.

void ILI9341\_setMemAccessCtrl (bool areRowsFlipped, bool areColsFlipped, bool areRowsAndCols
 — Switched, bool isVertRefreshFlipped, bool isColorOrderFlipped, bool isHorRefreshFlipped)

Set how data is converted from memory to display.

void ILI9341 setColorDepth (colorDepth t colorDepth)

Set the color depth for the display.

• void ILI9341 setFrameRate (uint8 t divisionRatio, uint8 t clocksPerLine)

TODO: Write brief.

void ILI9341 setRowAddress (uint16 t startRow, uint16 t endRow)

Sets the start/end rows to be written to.

• void ILI9341\_setColAddress (uint16\_t startCol, uint16\_t endCol)

Sets the start/end columns to be written to.

void ILI9341\_writeMemCmd (void)

Signal to the driver that pixel data is incoming and should be written to memory.

void ILI9341 writePixel (uint8 t red, uint8 t green, uint8 t blue)

Write a single pixel to frame memory.

## 7.32.1 Detailed Description

Driver module for interfacing with an ILI9341 LCD driver.

Author

Bryan McElvy


This module contains functions for initializing and outputting graphical data to a 240RGBx320 resolution, 262K color-depth liquid crystal display (LCD). The module interfaces the LaunchPad (or any other board featuring the TM4C123GH6PM microcontroller) with an ILI9341 LCD driver chip via the serial peripheral interface (SPI) protocol.

7.33 Led.c File Reference 167

### 7.33 Led.c File Reference

Source code for LED module.

```
#include "Led.h"
#include "GPIO.h"
#include "NewAssert.h"
#include <stdbool.h>
#include <stdint.h>
Include dependency graph for Led.c:
```

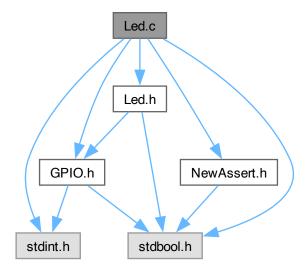

### **Data Structures**

• struct Led\_t

#### **Functions**

## Initialization & Configuration

- Led\_t Led\_Init (GpioPort\_t gpioPort, GPIO\_Pin\_t pin)

  Initialize a light-emitting diode (LED) as an Led\_t.
- GpioPort\_t Led\_GetPort (Led\_t led)

Get the GPIO port associated with the LED.

GPIO\_Pin\_t Led\_GetPin (Led\_t led)
 Get the GPIO pin associated with the LED.

## **Status Checking**

- bool Led\_isInit (Led\_t led)

  Check if an LED is initialized.
- bool Led\_isOn (Led\_t led)

Check the LED's status.

### **Operations**

```
    void Led_TurnOn (Led_t led)
        Turn an LED ON.

    void Led_TurnOff (Led_t led)
```

Turn an LED OFF.
• void Led\_Toggle (Led\_t led)
Toggle an LED.

## Variables

- static LedStruct\_t Led\_ObjPool [LED\_POOL\_SIZE] = { 0 }
- static uint8\_t num\_free\_leds = LED\_POOL\_SIZE

## 7.33.1 Detailed Description

Source code for LED module.


Author

Bryan McElvy

## 7.34 Led.h File Reference


Interface for LED module.

#include "GPIO.h"
#include <stdbool.h>
Include dependency graph for Led.h:

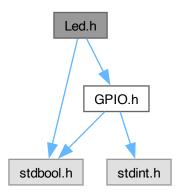

7.34 Led.h File Reference 169

This graph shows which files directly or indirectly include this file:

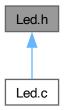

#### Macros

• #define LED\_POOL\_SIZE 1

## **Functions**

### **Initialization & Configuration**

- Led\_t Led\_Init (GpioPort\_t gpioPort, GPIO\_Pin\_t pin)
   Initialize a light-emitting diode (LED) as an Led\_t.
- GpioPort\_t Led\_GetPort (Led\_t led)

Get the GPIO port associated with the LED.

GPIO\_Pin\_t Led\_GetPin (Led\_t led)
 Get the GPIO pin associated with the LED.

### **Status Checking**

- bool Led\_isInit (Led\_t led)
  - Check if an LED is initialized.
- bool Led\_isOn (Led\_t led)

Check the LED's status.

## **Operations**

- void Led\_TurnOn (Led\_t led)
  - Turn an LED ON.
- void Led\_TurnOff (Led\_t led)

Turn an LED OFF.

void Led\_Toggle (Led\_t led)
 Toggle an LED.

### 7.34.1 Detailed Description

Interface for LED module.

Author

Bryan McElvy

# Index

ADC.c, 123	COEFFS_BANDPASS, 11
ADC.h, 124	COEFFS_NOTCH, 11
ADC_Init	DAQ_acknowledgeInterrupt, 8
Analog-to-Digital Conversion (ADC), 52	DAQ_BandpassFilter, 9
Analog-to-Digital Conversion (ADC), 52	DAQ_convertToMilliVolts, 10
ADC_Init, 52	DAQ_Init, 7
Application Software, 5	DAQ_NotchFilter, 8
Assert	DAQ_readSample, 7
Common, 44	Debug, 76
	Debug_Assert, 79
bandpassFiltStruct	Debug_Init, 77
Data Acquisition (DAQ), 11	Debug_SendFromList, 78
Bug List, 1	Debug_SendMsg, 77
- 19 - 10 · 1	Debug_WriteFloat, 78
CASET	Debug.h, 161
ILI9341, 82	<del>-</del>
Cmd t	Debug_Assert
ILI9341, 82	Debug, 79
COEFF BANDPASS	Debug_Init
QRS Detector, 42	Debug, 77
COEFF DERFILT	Debug_SendFromList
_	Debug, 78
QRS Detector, 43	Debug_SendMsg
COEFF_MOVAVG	Debug, 77
QRS Detector, 43	Debug_WriteFloat
COEFFS_BANDPASS	Debug, 78
Data Acquisition (DAQ), 11	Device Drivers, 50
COEFFS_NOTCH	DINVOFF
Data Acquisition (DAQ), 11	ILI9341, 82
Common, 43	DINVON
Assert, 44	ILI9341, <mark>82</mark>
	DISPOFF
DAQ.c, 104	ILI9341, 82
DAQ.h, 106	DISPON
DAQ_acknowledgeInterrupt	ILI9341, 82
Data Acquisition (DAQ), 8	DOWN
DAQ_ARRAY_LEN	
Main, 96	Timer, 60
DAQ_BandpassFilter	FIFO Buffers, 44
Data Acquisition (DAQ), 9	
DAQ convertToMilliVolts	FIFO_Flush, 47
Data Acquisition (DAQ), 10	FIFO_Get, 47
DAQ_FIFO_CAP	FIFO_getCurrSize, 50
Main, 96	FIFO_Init, 46
DAQ Handler	FIFO_isEmpty, 49
Main, 97	FIFO_isFull, 49
	FIFO_PeekAll, 49
DAQ_Init	FIFO_PeekOne, 48
Data Acquisition (DAQ), 7	FIFO_Put, 46
DAQ_lookup.c, 107	FIFO_Reset, 48
DAQ_NotchFilter	FIFO_TransferAll, 48
Data Acquisition (DAQ), 8	FIFO TransferOne, 47
DAQ_readSample	Fifo.c, 118
Data Acquisition (DAQ), 7	Fifo.h, 120
DAQ_VECTOR_NUM	FIFO Flush
Main, 96	FIFO Buffers, 47
Data Acquisition (DAQ), 5	FIFO_Get
bandpassFiltStruct 11	I II O_GEL

FIFO Buffers, 47	Liquid Crystal Display (LCD), 31
FIFO_getCurrSize	FONT_LOWER_G
FIFO Buffers, 50	Liquid Crystal Display (LCD), 31
FIFO_INFO	FONT_LOWER_H
Main, 96	Liquid Crystal Display (LCD), 31
FIFO_Init	FONT_LOWER_I
FIFO Buffers, 46	Liquid Crystal Display (LCD), 31
FIFO_isEmpty	FONT_LOWER_J
FIFO Buffers, 49 FIFO isFull	Liquid Crystal Display (LCD), 32 FONT LOWER K
FIFO Buffers, 49	Liquid Crystal Display (LCD), 32
FIFO_PeekAll	FONT LOWER L
FIFO Buffers, 49	Liquid Crystal Display (LCD), 32
FIFO PeekOne	FONT LOWER M
FIFO Buffers, 48	Liquid Crystal Display (LCD), 32
FIFO Put	FONT LOWER N
FIFO Buffers, 46	Liquid Crystal Display (LCD), 33
FIFO Reset	FONT LOWER O
FIFO Buffers, 48	Liquid Crystal Display (LCD), 33
Fifo t, 102	FONT LOWER P
FIFO_TransferAll	Liquid Crystal Display (LCD), 33
FIFO Buffers, 48	FONT LOWER Q
FIFO_TransferOne	Liquid Crystal Display (LCD), 33
FIFO Buffers, 47	FONT_LOWER_R
Font.c, 108	Liquid Crystal Display (LCD), 34
FONT_0	FONT_LOWER_S
Liquid Crystal Display (LCD), 20	Liquid Crystal Display (LCD), 34
FONT_1	FONT_LOWER_T
Liquid Crystal Display (LCD), 21	Liquid Crystal Display (LCD), 34
FONT_2	FONT_LOWER_U
Liquid Crystal Display (LCD), 21	Liquid Crystal Display (LCD), 34
FONT_3	FONT_LOWER_V
Liquid Crystal Display (LCD), 21	Liquid Crystal Display (LCD), 35
FONT_4	FONT_LOWER_W
Liquid Crystal Display (LCD), 21	Liquid Crystal Display (LCD), 35
FONT_5	FONT_LOWER_X
Liquid Crystal Display (LCD), 22	Liquid Crystal Display (LCD), 35
FONT_6 Liquid Crystal Display (LCD), 22	FONT_LOWER_Y Liquid Crystal Display (LCD), 35
FONT 7	FONT LOWER Z
Liquid Crystal Display (LCD), 22	Liquid Crystal Display (LCD), 36
FONT 8	FONT PERIOD
Liquid Crystal Display (LCD), 22	Liquid Crystal Display (LCD), 20
FONT 9	FONT SPACE
Liquid Crystal Display (LCD), 23	Liquid Crystal Display (LCD), 20
FONT COLON	FONT_UPPER_A
Liquid Crystal Display (LCD), 20	Liquid Crystal Display (LCD), 23
FONT_LOWER_A	FONT_UPPER_B
Liquid Crystal Display (LCD), 29	Liquid Crystal Display (LCD), 23
FONT_LOWER_B	FONT_UPPER_C
Liquid Crystal Display (LCD), 30	Liquid Crystal Display (LCD), 23
FONT_LOWER_C	FONT_UPPER_D
Liquid Crystal Display (LCD), 30	Liquid Crystal Display (LCD), 24
FONT_LOWER_D	FONT_UPPER_E
Liquid Crystal Display (LCD), 30	Liquid Crystal Display (LCD), 24
FONT_LOWER_E	FONT_UPPER_F
1: :10 110: 1 (100) 00	
Liquid Crystal Display (LCD), 30 FONT LOWER F	Liquid Crystal Display (LCD), 24 FONT UPPER G

Liquid Crystal Display (LCD), 24	GPIO_ConfigPullUp, 128
FONT_UPPER_H	GPIO_DisableDigital, 129
Liquid Crystal Display (LCD), 25	GPIO_EnableDigital, 129
FONT_UPPER_I	GPIO_getBaseAddr, 127
Liquid Crystal Display (LCD), 25 FONT UPPER J	GPIO_getDataRegister, 132 GPIO_InitPort, 127
Liquid Crystal Display (LCD), 25	GPIO_initroit, 127 GPIO_isPortInit, 127
FONT UPPER K	GPIO_PTR_ARR, 134
Liquid Crystal Display (LCD), 25	GPIO_ReadPins, 132
FONT UPPER L	GPIO_Toggle, 133
Liquid Crystal Display (LCD), 26	GPIO_WriteHigh, 132
FONT UPPER M	GPIO_WriteLow, 133
Liquid Crystal Display (LCD), 26	GPIO.h, 134
FONT_UPPER_N	GPIO_ConfigAltMode, 143
Liquid Crystal Display (LCD), 26	GPIO_ConfigAnalog, 144
FONT_UPPER_O	GPIO_ConfigDirInput, 138
Liquid Crystal Display (LCD), 26	GPIO_ConfigDirOutput, 138
FONT_UPPER_P	GPIO_ConfigDriveStrength, 139
Liquid Crystal Display (LCD), 27	GPIO_ConfigInterrupts_BothEdges, 140
FONT_UPPER_Q	GPIO_ConfigInterrupts_Edge, 140
Liquid Crystal Display (LCD), 27	GPIO_ConfigInterrupts_LevelTrig, 140
FONT_UPPER_R	GPIO_ConfigNVIC, 142
Liquid Crystal Display (LCD), 27	GPIO_ConfigPortCtrl, 144
FONT_UPPER_S	GPIO_ConfigPullDown, 139
Liquid Crystal Display (LCD), 27	GPIO_ConfigPullUp, 138
FONT_UPPER_T	GPIO_DisableDigital, 139
Liquid Crystal Display (LCD), 28	GPIO_EnableDigital, 139
FONT_UPPER_U	GPIO_getBaseAddr, 137
Liquid Crystal Display (LCD), 28 FONT UPPER V	GPIO_getDataRegister, 142 GPIO InitPort, 137
Liquid Crystal Display (LCD), 28	GPIO_initPort, 137 GPIO_isPortInit, 137
FONT UPPER W	GPIO_LAUNCHPAD_LEDS, 137
Liquid Crystal Display (LCD), 28	GPIO_ReadPins, 142
FONT UPPER X	GPIO_Toggle, 143
Liquid Crystal Display (LCD), 29	GPIO_WriteHigh, 142
FONT UPPER Y	GPIO_WriteLow, 143
Liquid Crystal Display (LCD), 29	LED_BLUE, 137
FONT_UPPER_Z	LED_GREEN, 137
Liquid Crystal Display (LCD), 29	LED_RED, 137
FRMCTR1	GPIO_ConfigAltMode
ILI9341, 82	GPIO.c, 133
FRMCTR2	GPIO.h, 143
ILI9341, 82	GPIO_ConfigAnalog
FRMCTR3	GPIO.c, 134
ILI9341, 82	GPIO.h, 144
Conoral Burnosa Input/Output (CRIO) 53	GPIO_ConfigDirInput
General-Purpose Input/Output (GPIO), 53 GPIO.c, 125	GPIO.c, 128
GPIO_ConfigAltMode, 133	GPIO.h, 138
GPIO_ConfigAnalog, 134	GPIO_ConfigDirOutput
GPIO_ConfigDirInput, 128	GPIO.c, 128
GPIO_ConfigDirOutput, 128	GPIO.h, 138
GPIO_ConfigDriveStrength, 129	GPIO_configDriveStrength
GPIO_ConfigInterrupts_BothEdges, 131	GPIO.c, 129
GPIO_ConfigInterrupts_Edge, 131	GPIO Configuratorrupte RothEdges
GPIO_ConfigInterrupts_LevelTrig, 131	GPIO_ConfigInterrupts_BothEdges GPIO.c, 131
GPIO_ConfigNVIC, 132	GPIO.6, 131 GPIO.h, 140
GPIO_ConfigPortCtrl, 133	GPIO_ConfigInterrupts_Edge
GPIO ConfigPullDown, 128	or 10_00miginterrupts_cuge

GPIO.c, 131	ILI9341, 79
GPIO.h, 140	CASET, 82
GPIO_configInterrupts_LevelTrig	Cmd_t, 82
GPIO.c, 131 GPIO.h, 140	DINVON, 82
GPIO_ConfigNVIC	DINVON, 82 DISPOFF, 82
GPIO.c, 132	DISPON, 82
GPIO.h, 142	FRMCTR1, 82
GPIO_ConfigPortCtrl	FRMCTR2, 82
GPIO.c, 133	FRMCTR3, 82
GPIO.h, 144	IDMOFF, 82
GPIO_ConfigPullDown	IDMON, 82
GPIO.c, 128	IFCTL, 82
GPIO.h, 139	ILI9341_Init, 83
GPIO_ConfigPullUp	ILI9341_NUM_COLS, 81
GPIO.c, 128	ILI9341_NUM_ROWS, 81
GPIO.h, 138	ILI9341_resetHard, 84
GPIO_DisableDigital	ILI9341_resetSoft, 84
GPIO.c, 129	ILI9341_sendParams, 83
GPIO.h, 139	ILI9341_setAddress, 82
GPIO_EnableDigital GPIO.c, 129	ILI9341_setColAddress, 88 ILI9341 setColorDepth, 87
GPIO.h, 139	ILI9341 setColorExpression, 85
GPIO getBaseAddr	ILI9341_setDispInversion, 86
GPIO.c, 127	ILI9341_setDisplayArea, 85
GPIO.h, 137	ILI9341_setDispOutput, 86
GPIO_getDataRegister	ILI9341 setFrameRate, 88
GPIO.c, 132	ILI9341_setInterface, 83
GPIO.h, 142	ILI9341_setMemAccessCtrl, 87
GPIO_InitPort	ILI9341_setMode, 82
GPIO.c, 127	ILI9341_setPartialArea, 86
GPIO.h, 137	ILI9341_setRowAddress, 88
GPIO_isPortInit	ILI9341_setSleepMode, 84
GPIO.c, 127	ILI9341_writeMemCmd, 89
GPIO.h, 137	ILI9341_writePixel, 89
GPIO_LAUNCHPAD_LEDS	MADCTL, 82
GPIO.h, 137 GPIO PTR ARR	NOP, 82 NORON, 82
GPIO.c, 134	PASET, 82
GPIO ReadPins	PIXSET, 82
GPIO.c, 132	PLTAR, 82
GPIO.h, 142	PRCTR, 82
GPIO_Toggle	PTLON, 82
GPIO.c, 133	RAMWR, 82
GPIO.h, 143	SPLIN, 82
GPIO_WriteHigh	SPLOUT, 82
GPIO.c, 132	SWRESET, 82
GPIO.h, 142	VSCRDEF, 82
GPIO_WriteLow	VSCRSADD, 82
GPIO.c, 133	ILI9341.c, 163
GPIO.h, 143	ILI9341.h, 164
GpioPort_t, 103	ILI9341_Init
IDMOFF	ILI9341, 83
ILI9341, 82	ILI9341_NUM_COLS ILI9341, 81
IDMON	ILI9341, 01 ILI9341_NUM_ROWS
ILI9341, 82	ILI9341, 81
IFCTL	ILI9341_resetHard
ILI9341, 82	<del>-</del>

ILI9341, 84	ISR InitNewTableInRam
ILI9341_resetSoft	Interrupt Service Routines, 72
ILI9341, 84	ISR_setPriority
ILI9341_sendParams	Interrupt Service Routines, 73
ILI9341, 83	ISR_triggerInterrupt
ILI9341 setAddress	Interrupt Service Routines, 75
ILI9341, 82	ISR_VECTOR_NUMS
ILI9341, 62 ILI9341_setColAddress	Main, 96
	Main, 96
ILI9341, 88	LCD.c, 110
ILI9341_setColorDepth	LCD.h, 113
ILI9341, 87	LCD_ARRAY_1_LEN
ILI9341_setColorExpression	Main, 96
ILI9341, 85	LCD_ARRAY_2_LEN
ILI9341_setDispInversion	Main, 96
ILI9341, 86	LCD Draw
ILI9341_setDisplayArea	<del>_</del>
ILI9341, 85	Liquid Crystal Display (LCD), 17
ILI9341_setDispOutput	LCD_drawHoriLine
ILI9341, 86	Liquid Crystal Display (LCD), 17
ILI9341_setFrameRate	LCD_drawLine
ILI9341, 88	Liquid Crystal Display (LCD), 15
ILI9341_setInterface	LCD_drawRectangle
ILI9341, 83	Liquid Crystal Display (LCD), 18
ILI9341_setMemAccessCtrl	LCD_drawVertLine
ILI9341, 87	Liquid Crystal Display (LCD), 18
ILI9341_setMode	LCD_FIFO_1_CAP
ILI9341, 82	Main, 96
ILI9341_setPartialArea	LCD_FIFO_2_CAP
ILI9341, 86	Main, 96
ILI9341_setRowAddress	LCD_Fill
ILI9341, 88	Liquid Crystal Display (LCD), 17
ILI9341_setSleepMode	LCD Handler
ILI9341, 84	Main, 99
	LCD_INFO
ILI9341_writeMemCmd	Main, 96
ILI9341, 89	LCD Init
ILI9341_writePixel	Liquid Crystal Display (LCD), 15
ILI9341, 89	LCD_plotSample
Interrupt Service Routines, 71	Liquid Crystal Display (LCD), 19
ISR_addToIntTable, 73	LCD setColor
ISR_Disable, 74	Liquid Crystal Display (LCD), 17
ISR_Enable, 74	LCD setCursor
ISR_GlobalDisable, 72	<del>_</del>
ISR_GlobalEnable, 72	Liquid Crystal Display (LCD), 19
ISR_InitNewTableInRam, 72	LCD_setOutputMode
ISR_setPriority, 73	Liquid Crystal Display (LCD), 16
ISR_triggerInterrupt, 75	LCD_setX
ISR.c, 144	Liquid Crystal Display (LCD), 16
ISR.h, 146	LCD_setY
ISR_addToIntTable	Liquid Crystal Display (LCD), 16
Interrupt Service Routines, 73	LCD_TEXT_COL_NUM
ISR Disable	Main, 97
Interrupt Service Routines, 74	LCD_TEXT_LINE_NUM
ISR Enable	Main, 97
Interrupt Service Routines, 74	LCD_TOP_LINE
ISR_GlobalDisable	Main, 97
Interrupt Service Routines, 72	LCD_VECTOR_NUM
ISR GlobalEnable	Main, 96
Interrupt Service Routines, 72	LCD_WAVE_NUM_Y
	Main, 97

LCD_WAVE_X_OFFSET	FONT_LOWER_G, 31
Main, 97	FONT LOWER H, 31
LCD_WAVE_Y_MAX	FONT_LOWER_I, 31
Main, 97	FONT_LOWER_J, 32
LCD_WAVE_Y_MIN	FONT_LOWER_K, 32
Main, 97	FONT LOWER L, 32
LED, 90	FONT LOWER M, 32
Led_GetPin, 92	FONT_LOWER_N, 33
Led_GetPort, 92	FONT_LOWER_O, 33
Led Init, 91	FONT LOWER P, 33
Led islnit, 92	FONT LOWER Q, 33
Led_isOn, 93	FONT_LOWER_R, 34
Led_Toggle, 94	FONT_LOWER_S, 34
Led_TurnOff, 94	FONT_LOWER_T, 34
Led TurnOn, 93	FONT LOWER U, 34
Led.c, 167	FONT LOWER V, 35
Led.h, 168	FONT_LOWER_W, 35
LED_BLUE	FONT_LOWER_X, 35
GPIO.h, 137	FONT LOWER Y, 35
Led GetPin	FONT LOWER Z, 36
<del>-</del>	
LED, 92	FONT_PERIOD, 20
Led_GetPort	FONT_SPACE, 20
LED, 92	FONT_UPPER_A, 23
LED GREEN	FONT UPPER B, 23
GPIO.h, 137	FONT UPPER C, 23
Led_Init	FONT_UPPER_D, 24
LED, 91	FONT_UPPER_E, 24
Led islnit	FONT UPPER F, 24
 LED, 92	FONT UPPER G, 24
Led_isOn	FONT_UPPER_H, 25
LED, 93	FONT_UPPER_I, 25
LED_RED	FONT_UPPER_J, 25
GPIO.h, 137	FONT UPPER K, 25
Led_t, 103	FONT UPPER L, 26
Led_Toggle	FONT_UPPER_M, 26
LED, 94	FONT_UPPER_N, 26
Led TurnOff	FONT UPPER O, 26
LED, 94	FONT_UPPER_P, 27
Led_TurnOn	FONT_UPPER_Q, 27
LED, 93	FONT_UPPER_R, 27
Liquid Crystal Display (LCD), 11	FONT_UPPER_S, 27
FONT_0, 20	FONT UPPER T, 28
FONT_1, 21	FONT UPPER U, 28
FONT_2, 21	FONT_UPPER_V, 28
FONT_3, 21	FONT UPPER W, 28
FONT 4 04	1 0111_01 1 11_11, 20
FUNT 4, 21	
FONT_4, 21 FONT_5_22	FONT_UPPER_X, 29
FONT_5, 22	FONT_UPPER_X, 29 FONT_UPPER_Y, 29
FONT_5, 22 FONT_6, 22	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29
FONT_5, 22	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17
FONT_5, 22 FONT_6, 22	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23 FONT_COLON, 20	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15 LCD_drawRectangle, 18
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23 FONT_COLON, 20 FONT_LOWER_A, 29	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15 LCD_drawRectangle, 18 LCD_drawVertLine, 18
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23 FONT_COLON, 20	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15 LCD_drawRectangle, 18 LCD_drawVertLine, 18 LCD_Fill, 17
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23 FONT_COLON, 20 FONT_LOWER_A, 29	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15 LCD_drawRectangle, 18 LCD_drawVertLine, 18
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23 FONT_COLON, 20 FONT_LOWER_A, 29 FONT_LOWER_B, 30 FONT_LOWER_C, 30	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15 LCD_drawRectangle, 18 LCD_drawVertLine, 18 LCD_Fill, 17 LCD_Init, 15
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23 FONT_COLON, 20 FONT_LOWER_A, 29 FONT_LOWER_B, 30 FONT_LOWER_C, 30 FONT_LOWER_D, 30	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15 LCD_drawVertLine, 18 LCD_Fill, 17 LCD_Init, 15 LCD_plotSample, 19
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23 FONT_COLON, 20 FONT_LOWER_A, 29 FONT_LOWER_B, 30 FONT_LOWER_C, 30 FONT_LOWER_D, 30 FONT_LOWER_D, 30 FONT_LOWER_E, 30	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15 LCD_drawVertLine, 18 LCD_Fill, 17 LCD_Init, 15 LCD_plotSample, 19 LCD_setColor, 17
FONT_5, 22 FONT_6, 22 FONT_7, 22 FONT_8, 22 FONT_9, 23 FONT_COLON, 20 FONT_LOWER_A, 29 FONT_LOWER_B, 30 FONT_LOWER_C, 30 FONT_LOWER_D, 30	FONT_UPPER_X, 29 FONT_UPPER_Y, 29 FONT_UPPER_Z, 29 LCD_Draw, 17 LCD_drawHoriLine, 17 LCD_drawLine, 15 LCD_drawVertLine, 18 LCD_Fill, 17 LCD_Init, 15 LCD_plotSample, 19

LCD_setOutputMode, 16	Phase-Locked Loop (PLL), 54
LCD setX, 16	PLTAR
LCD_setY, 16	ILI9341, 82
	PRCTR
MADCTL	ILI9341, 82
ILI9341, 82	PROC_VECTOR_NUM
Main, 95	
DAQ ARRAY LEN, 96	Main, 96
DAQ_FIFO_CAP, 96	Processing_Handler
	Main, 98
DAQ_Handler, 97	PTLON
DAQ_VECTOR_NUM, 96	ILI9341, <mark>82</mark>
FIFO_INFO, 96	
ISR_VECTOR_NUMS, 96	QRS Detector, 36
LCD_ARRAY_1_LEN, 96	COEFF_BANDPASS, 42
LCD_ARRAY_2_LEN, 96	COEFF_DERFILT, 43
LCD_FIFO_1_CAP, 96	COEFF_MOVAVG, 43
LCD_FIFO_2_CAP, 96	QRS_applyDecisionRules, 41
LCD Handler, 99	QRS findFiducialMarks, 38
LCD INFO, 96	QRS_Init, 40
LCD TEXT COL NUM, 97	QRS_initLevels, 38
LCD_TEXT_LINE_NUM, 97	QRS Preprocess, 40
LCD_TOP_LINE, 97	QRS runDetection, 42
LCD VECTOR NUM, 96	QRS updateLevel, 39
	QRS_updateThreshold, 39
LCD_WAVE_NUM_Y, 97	— ·
LCD_WAVE_X_OFFSET, 97	QRS.c, 115
LCD_WAVE_Y_MAX, 97	QRS.h, 117
LCD_WAVE_Y_MIN, 97	QRS_applyDecisionRules
main, 99	QRS Detector, 41
PROC_VECTOR_NUM, 96	QRS_ARRAY_LEN
Processing_Handler, 98	Main, 96
QRS_ARRAY_LEN, 96	QRS_FIFO_CAP
QRS_FIFO_CAP, 96	Main, 96
main	QRS_findFiducialMarks
Main, 99	QRS Detector, 38
main.c, 160	QRS_Init
Middleware, 75	QRS Detector, 40
	QRS_initLevels
NewAssert, 50	QRS Detector, 38
NewAssert.c, 121	QRS_Preprocess
NewAssert.h, 122	QRS Detector, 40
NOP	QRS_runDetection
ILI9341, 82	QRS Detector, 42
NORON	QRS updateLevel
ILI9341, 82	QRS Detector, 39
, -	QRS_updateThreshold
ONESHOT	_ ·
Timer, 60	QRS Detector, 39
-,	RAMWR
PASET	ILI9341, 82
ILI9341, 82	1619341, 62
PERIODIC	Serial Peripheral Interface (SPI), 54
Timer, 60	SPI Init, 55
Phase-Locked Loop (PLL), 53	SPI_IIII, 55 SPI_Read, 55
PLL_Init, 54	<del>-</del>
PIXSET	SPI_SET_DC, 55
	SPI_WriteCmd, 56
ILI9341, 82 PLL.c, 147	SPI_WriteData, 56
	SPI.c, 149
PLL.h, 148	SPI.h, 150
PLL_Init	SPI_Init

Serial Peripheral Interface (SPI), 55	Timer_getName
SPI_Read	Timer, 61
Serial Peripheral Interface (SPI), 55	Timer_Init
SPI_SET_DC	Timer, 60
Serial Peripheral Interface (SPI), 55	Timer_isCounting
SPI_WriteCmd	Timer, 65
Serial Peripheral Interface (SPI), 56	Timer_isInit
SPI WriteData	Timer, 61
Serial Peripheral Interface (SPI), 56	TIMER_POOL
SPLIN	Timer, 66
ILI9341, 82	Timer setInterval ms
SPLOUT	Timer, 64
ILI9341, 82	Timer_setMode
SWRESET	Timer, 61
ILI9341, 82	Timer_Start
System Tick (SysTick), 57	Timer, 64
SysTick_Interrupt_Init, 57	Timer_Stop
SysTick.c, 151	Timer, 65
SysTick.h, 152	Timer_t, 104
SysTick Interrupt Init	Timer Wait1ms
· - · -	<del>-</del>
System Tick (SysTick), 57	Timer, 66
Timer, 58	timerDirection_t
DOWN, 60	Timer, 60
ONESHOT, 60	timerMode_t
PERIODIC, 60	Timer, 59
Timer_clearInterruptFlag, 64	UART.c, 157
Timer_Deinit, 60	UART.h, 158
Timer_disableAdcTrigger, 62	UART ARR
Timer_disableAdd frigger, 02  Timer_disableInterruptOnTimeout, 63	<del>-</del>
_ ·	•
Timer_enableAdcTrigger, 62	(UART), 70
Timer_enableInterruptOnTimeout, 63	UART_Init
Timer_getName, 61	Universal Asynchronous Receiver/Transmitter
Timer_Init, 60	(UART), 68
Timer_isCounting, 65	UART_isInit
Timer_isInit, 61	Universal Asynchronous Receiver/Transmitter
TIMER_POOL, 66	(UART), 68
Timer_setInterval_ms, 64	UART_ReadChar
Timer_setMode, 61	Universal Asynchronous Receiver/Transmitter
Timer_Start, 64	(UART), 69
Timer_Stop, 65	Uart_t, 104
Timer_Wait1ms, 66	UART_WriteChar
timerDirection_t, 60	Universal Asynchronous Receiver/Transmitter
timerMode_t, 59	(UART), 69
UP, 60	UART_WriteFloat
Timer.c, 153	Universal Asynchronous Receiver/Transmitter
Timer.h, 155	(UART), 70
Timer_clearInterruptFlag	UART_WriteInt
Timer, 64	Universal Asynchronous Receiver/Transmitter
Timer_Deinit	(UART), 70
Timer, 60	UART_WriteStr
Timer_disableAdcTrigger	Universal Asynchronous Receiver/Transmitter
Timer, 62	(UART), 69
Timer_disableInterruptOnTimeout	Universal Asynchronous Receiver/Transmitter (UART),
Timer, 63	67
Timer_enableAdcTrigger	UART_ARR, 70
Timer, 62	UART_Init, 68
Timer_enableInterruptOnTimeout	UART_isInit, 68
Timer, 63	UART_ReadChar, 69

```
UART_WriteChar, 69
UART_WriteFloat, 70
UART_WriteInt, 70
UART_WriteStr, 69
UP
Timer, 60

VSCRDEF
ILI9341, 82

VSCRSADD
ILI9341, 82
```