




28 to 24 pin kernal ROM adapter and switcher for C64 longboard


User Guide

Introduction

Maybe you just need a 24-28 adapter, or you want four kernal ROMs in one chip. The Switchless Kernal Switcher (SKS64) is just what you need. There are two boards, one for long motherboards, and one for short.

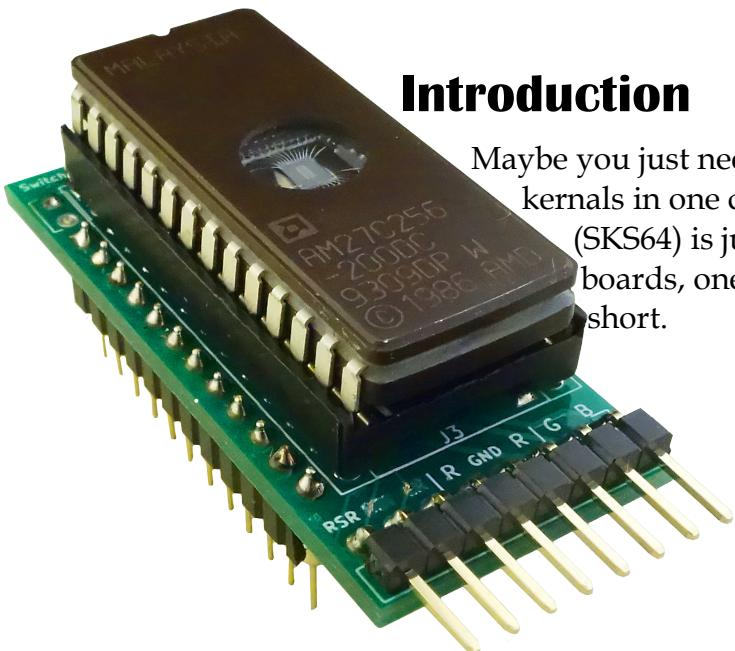

Board overview

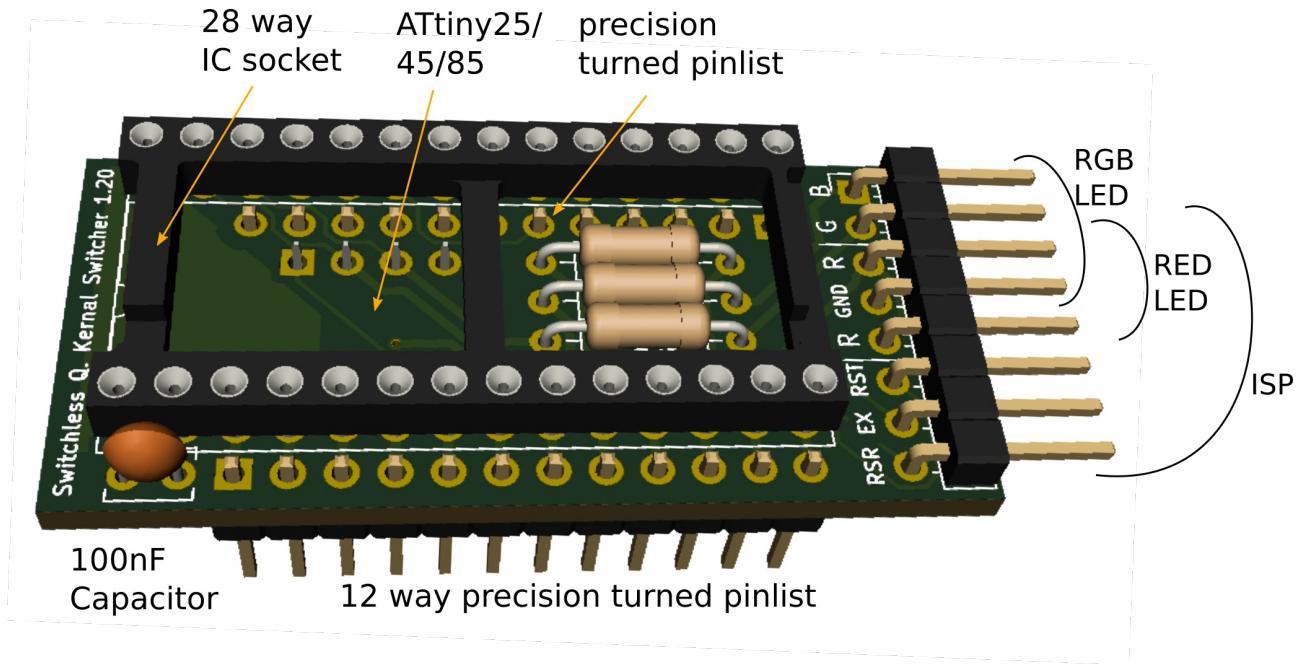

Switching Kernels

The selection mode is entered by holding RESTORE for two seconds, and is indicated with a slight flash of RED on the RGB LED. Be quick and continue to tap RESTORE until the desired colour on the LED is shown. The computer reset after two seconds of no activity.

The timing can be changed in the source code:

```
#define PRESSTIME 20
#define MENUTIMEOUT 20
```

The RESTORE key still works as a normal for short presses. The C64 cannot read long RESTORE key presses anyway.

RESET

Hold the RESTORE key for two seconds. Wait two seconds for the reset.

EXROM RESET




Hold the RESTORE key for five seconds. Some machine language programs change the way the computer returns after a reset. In that case the only way to reset to basic is to turn the machine off. By controlling both RESET and EXROM it is possible to "cold start" the machine. Note: EXROM reset is only available when the ATtiny's RESET pin is disabled (fuse bit #RSTDISBL). This can only be done with HV-programmers (like TL866).

Board Assembly

Because the board is so convoluted, the components need to be soldered in a special order to be able to reach all the solder pads. Start with the smallest parts first: R1, R2, R3, C1, and U2. Solder the IC sockets and pinlists in the order shown below to save time. Finally solder the right angle pin header J4.


Soldering order:

- 1. Solder U1 8pin IC Socket
- 2. Solder J2 bottom left pinlist
- 3. Flush cut soldering on top side
- 4. Solder J3 28pin IC Socket
- 5 Insert the last pinlist into a dummy IC socket, and place the adapter into the socket.
- 6. Solder J1 top left pinlist

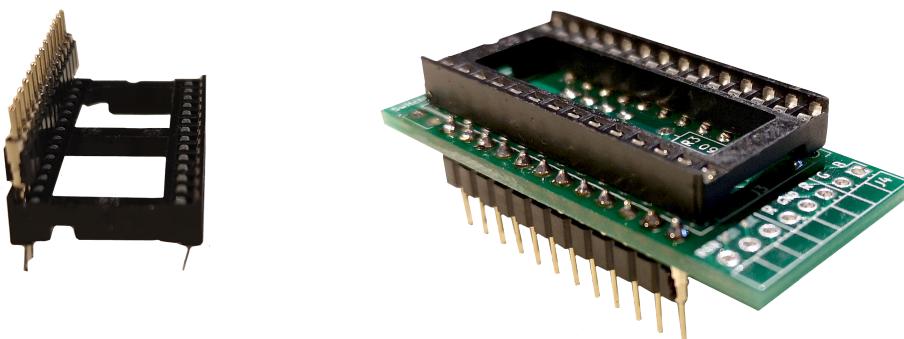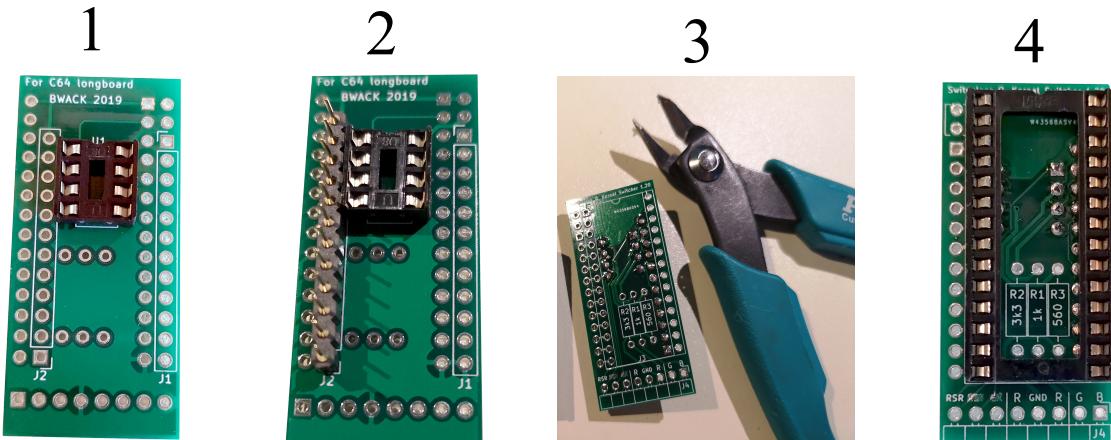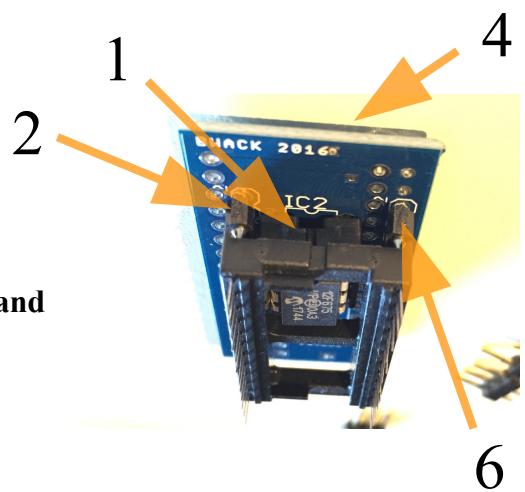

Installation and Wiring

Desolder the KERNEL IC and replace it with an IC socket or precision turned socket lists. Pin headers should fit into the C64 vias connected to RESTORE, RESET and EXROM. The via locations varies between the motherboard revisions.

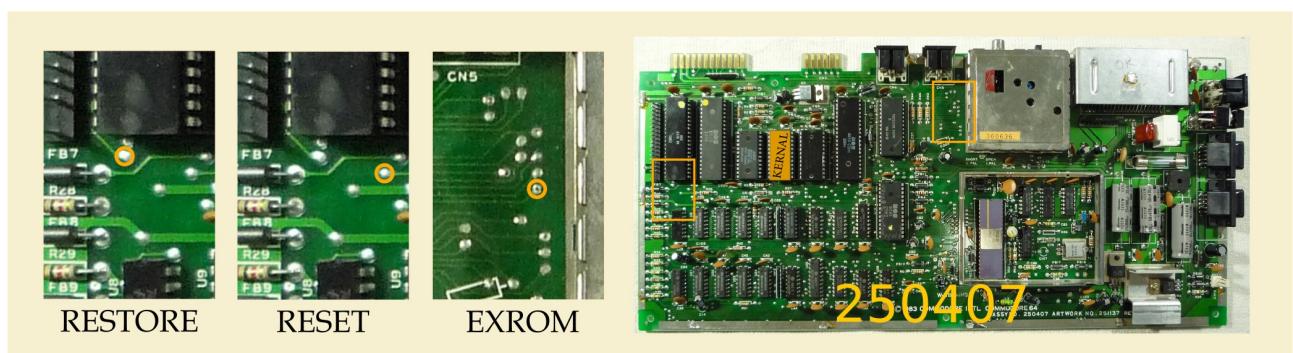




Programming

The microcontroller used is ATTiny25/45/85. This enables Arduino development workflow. To work with the Arduino IDE you need to install the ATTinyCore libraries¹.

Arduino as ISP

Upload the ArduinoISP sketch to your Arduino UNO. It is located in the Arduino IDE in the drop down menu File/ Examples/ 11.ArduinoISP/ ArduinoISP. Open the SKS64_SKETCH.ino file, and select: **Board** ATtiny25/45/85. **Processor** ATtiny85, and **Clock** Internal 1 MHz, **Programmer** Arduino as ISP. Connect all cables. If you power the SKS64 with Arduino 5V, you must not connect the SKS64 to the C64. Click **Burn Bootloader**! This will write to the fuse bits, and there is no Arduino bootloader for the ATTiny family. Finally click **upload sketch**! The firmware gives a long flash and two short flashes on the RED LED if the fuse bits wasn't programmed.

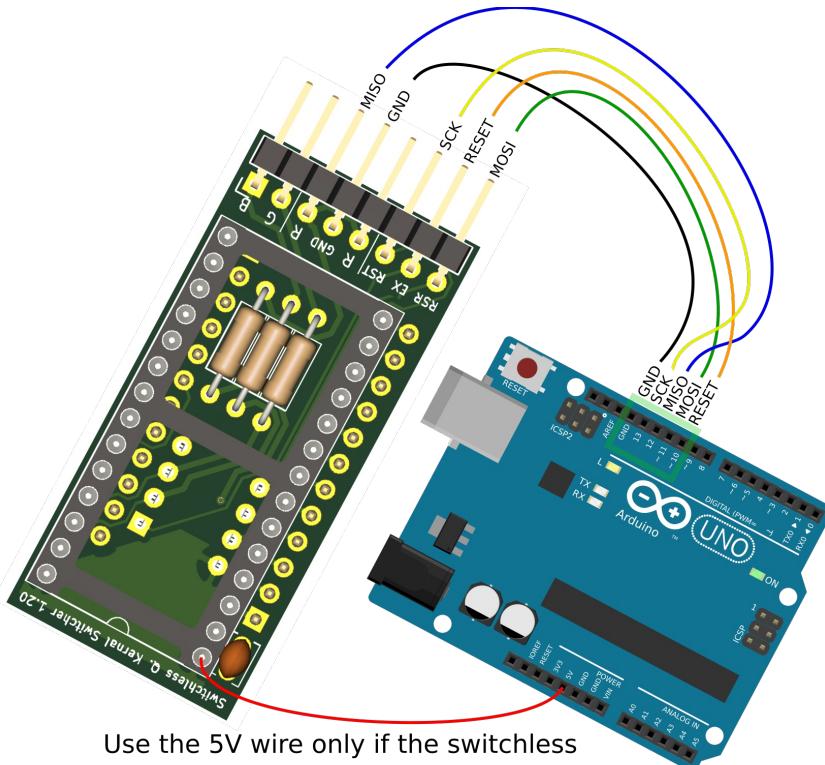

USBasp as ISP

Similar workflow as Arduino as ISP. Select programmer: USBasp.

¹ ATTiny library Installation instructions <https://github.com/SpenceKonde/ATTinyCore>


High Voltage programmer

The MCU must be popped out of the SKS64 and into the ZIF socket if using a HV programmer like for example a TL866CS/A. The programmer is loaded with the "hex-file", and fuse bits are set. Unlike ISP programmers, HV programmers do not need MCU RESET. Activating #DISBLRST in the fuse bits will free up the last I/O of the ATtiny. The downside of #DISBLRST is that if you intend to further develop the firmware and program using ISP, you will need to use the HV programmer first to re-enable RESET!

The hex-file can be found in the output of the Arduino IDE. Turn on File/Preferences → Settings → Show Verbose output during: "compilation" and "upload". Click compile, and look for the line that says something like:

"C:\Users\hada\AppData\Local\Temp\arduino_build_581768". Here you will find the hex-file.

Note: At power on, the SKS64 firmware reads the #DISBLRST fuse bit. If reset is disabled, the firmware will drive the EXROM signal. If reset IS enabled, the EXROM reset feature is disabled.

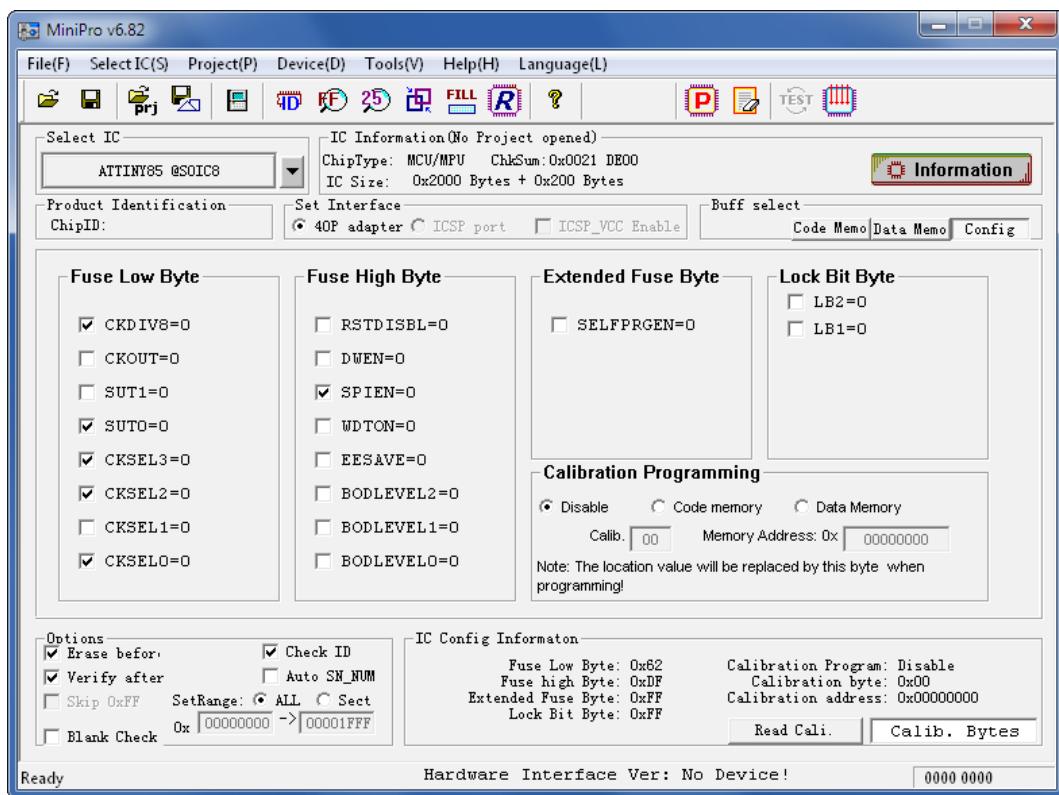

Make sure that Fuse Low Byte, high byte are 0x62 and 0xDF if reset is enabled, or 0x62 and 0x5F if disabled.

Pitfall: In MiniPro if you are in the Config window like above, and you try to load a hex file with File/Open, you will get an error message, but the fuse bits will be mangled.

Writing the wrong fuse bits can lock you out of an ISP programmer.

Setup

After installing the firmware in the SKS64, and installing it in the computer you can enter the setup menu by holding RESTORE while powering on the machine. Continue to hold RESTORE until the LED flashes white. Tap RESTORE to rotate through all the four possible setups. Two flashes, short or long, can be seen periodically. They indicate the selected setup where the first flash is the motherboard form factor, and the second flash is related to the size of the EEPROM used.


| | |
|---------------|----------------------|
| LONG - SHORT | longboard, 4 banks |
| LONG - LONG | longboard, 8 banks |
| SHORT - SHORT | shortboard, 4 banks |
| SHORT - LONG | shortboard, 8 banks. |

Hold RESTORE again for 5s to store setup in the ATtiny's EEPROM, and the main program starts.

Developing

While it is possible to program the SKS64 installed in the C64 using an ISP, the LEDs have to be removed before programming. This is exhaustive. Putting the SKS64 on a breadboard and hooking it up to an ISP (Arduino as ISP here), you can attach LEDs and a button to test the functionality of the switcher. The wiring below looks chaotic, but bear in mind it is the same circuit as shown in "Arduino as ISP" section, but with wires going from the SKS64 to the breadboard first, and then from the breadboard to the ISP.

The two LEDs to the left are connected to A14 and A13. Those LEDs have internal resistors! The next two LEDs are connected such that they light up when EXROM or INTRST (C64 reset) go low. The anode goes to +5V through resistor, and the cathode goes to the I/O. Note: The SKS64 pins R, G and B are already current limited, but if you don't use an additional resistor, you will swamp the programming signals MISO, MOSI or SCK and Arduino IDE will just fail and say "MCU id 0x0000000" or "0xffffffff". Use a resistor. The RGB LEDs are incredibly sensitive and you can still get enough light even at 20k Ohm. Same for the RED Power LED. Finally attach a switch to GND, and to the RESTORE input. Now you have a development setup. Attach power, the USB cable, and you should be able to upload programs to the SKS64 without rearranging the cabling for each program iteration!



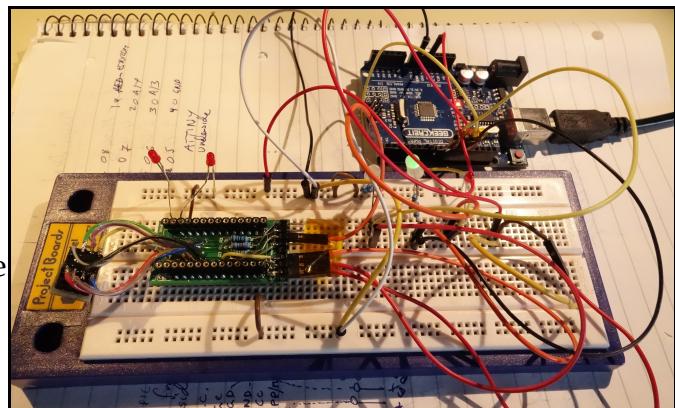


The RGB LED Cable Assembly

The current selected kernal ROM image is indicated with an RGB LED. RED, GREEN, BLUE and CYAN. It must be a common cathode type*. Use the LED pinout diagram as shown below to locate the negative, red green and blue LED connections. Attach wires and use heat shrink tubing. You can see an excellent realization of this in the pictures below done by [@thilographie_de](#). Thank you for letting me use your pictures.


The other end of the cable goes into a 2x3 female pin header. The connections for R, G and B in the PCB are noted on the silk-screen (the white text on the PCB). You can solder the wires directly onto the pcb if you like, but it is nice to be able to separate top enclosure where RGB LED is clipped into from the rest of the computer.

- A common cathode means that all cathodes are joined together. The cathode is the "negative" side of the LED. I bought it on eBay, and the product title was: "4PIN 5mm RGB LED - Tri-Colour 3 in 1 - Frosted Diffused Common Cathode".

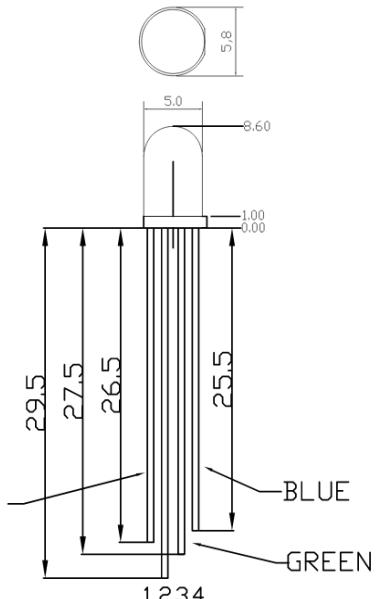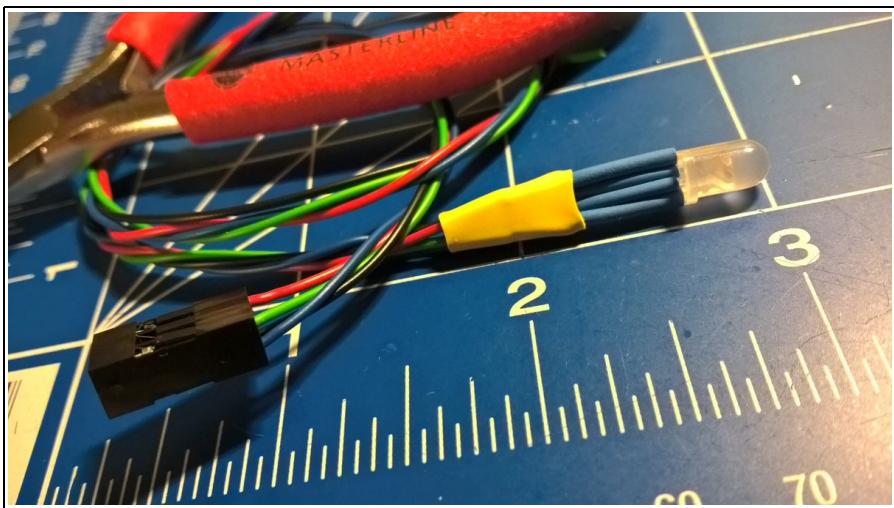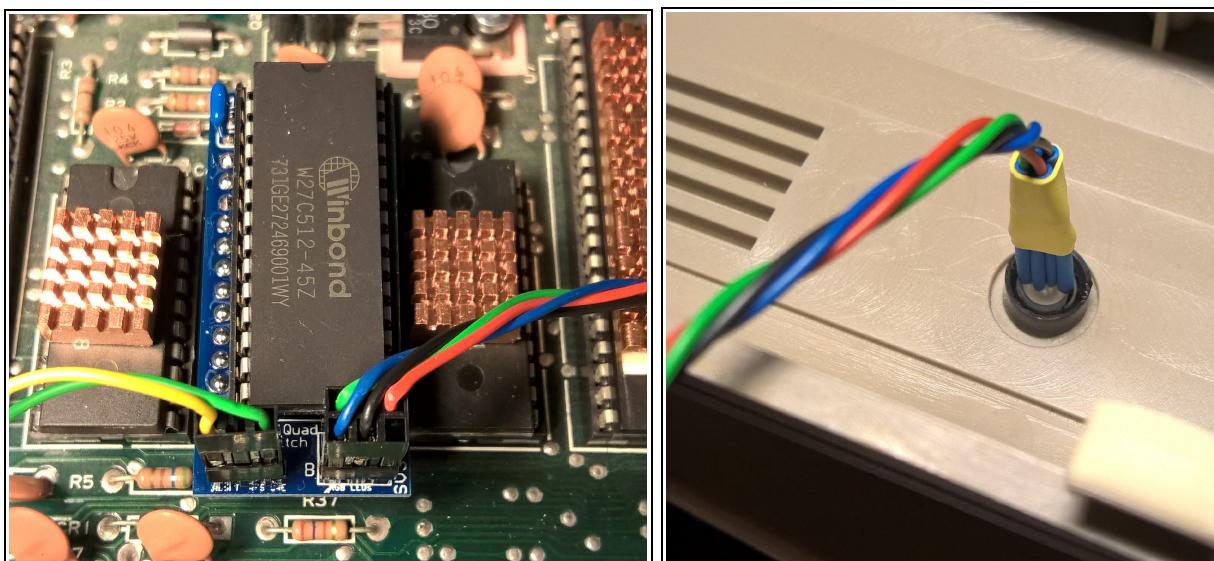


Schematics

SKS64 longboard 1.21

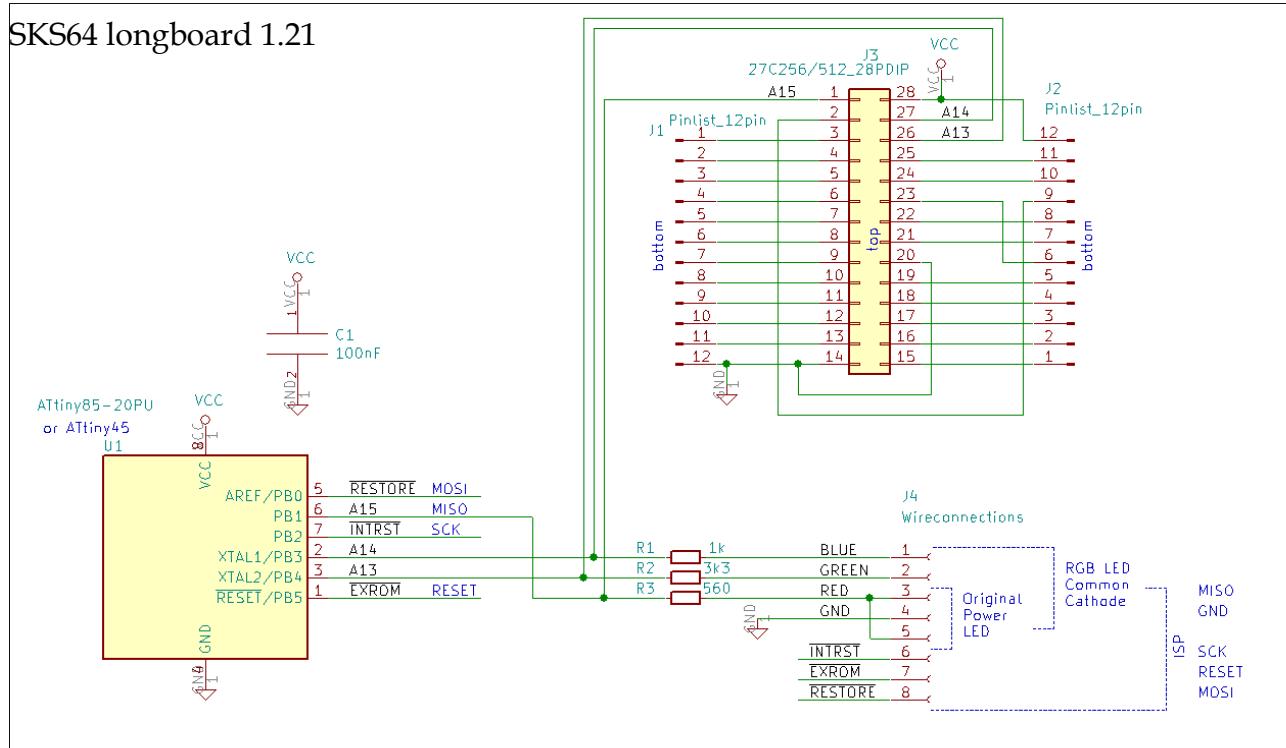

SKS64 shortboard 1.0

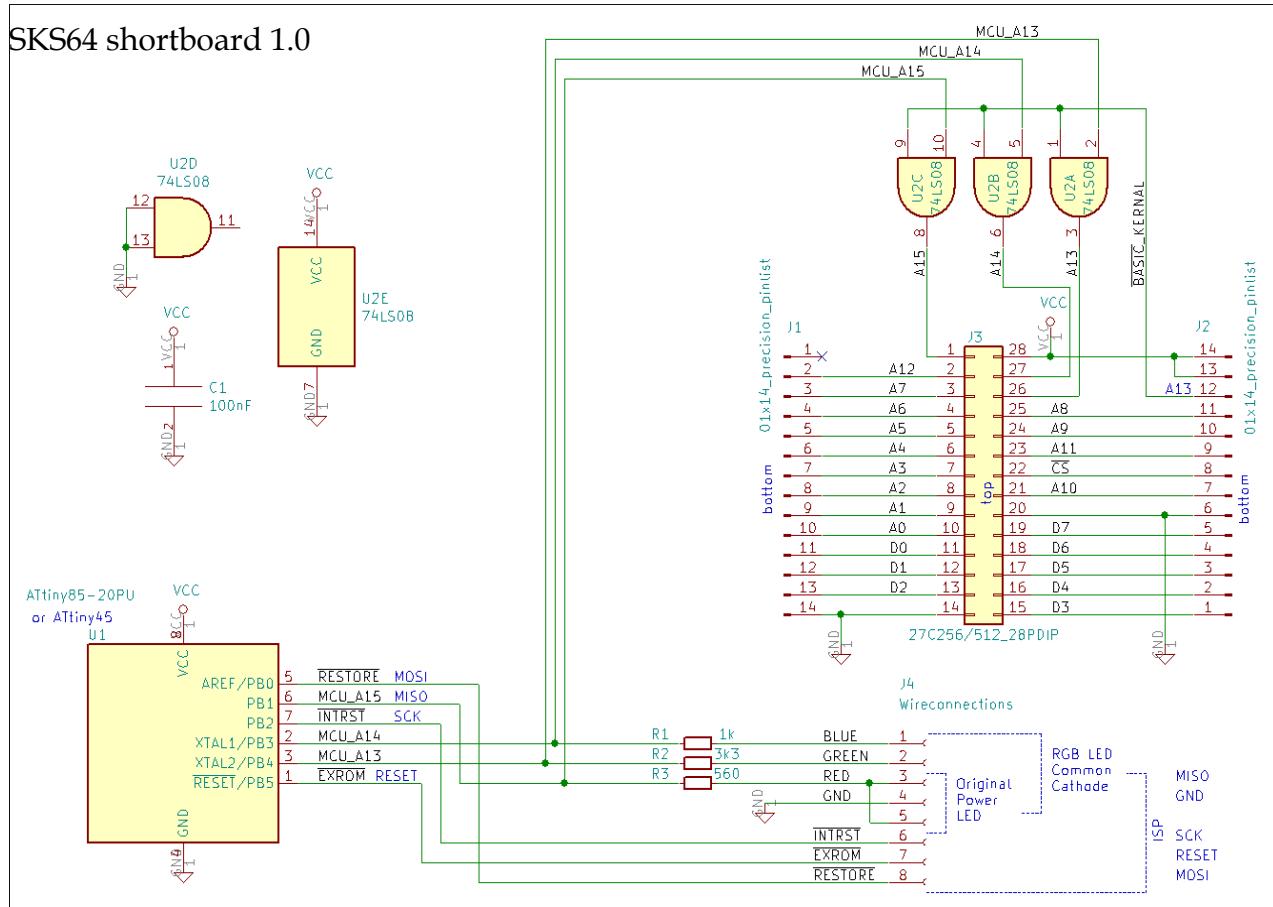

BOM

| Ref | Qty | Description / Value | Mouser No. |
|-------|-----|--|----------------------|
| C1 | 1 | Cap THT DISC 3.9 W2.6 P2.50 | 594-K104M15X7RF53L2 |
| J1 J2 | 2 | Pinlist precision turned - 2.54mm 1x12 vertical | ? |
| J3 | 1 | IC Socket DIP-28 W15.24mm | 575-199628 / 2x ? |
| J4 | 1 | Pin header 2.54mm 1x8 right angle | 538-22-28-8083 |
| R1 | 1 | Resistor 1k THT axial DIN0207 6.3 x 2.5 x 10.16mm | 603-MFR-25FRF521K |
| R2 | 1 | Resistor 3k3 THT axial DIN0207 6.3 x 2.5 x 10.16mm | 603-MFR-25FRF52-3K3 |
| R3 | 1 | Resistor 560 THT axial DIN0207 6.3 x 2.5 x 10.16mm | 603-MFR-25FRF52-560R |
| U1 | 1 | Microcontroller Atmel ATTiny85-20PU PDIP | 556-ATTINY85-20PU |
| U1 | 1 | IC Socket DIP-8 W7.62mm (optional) | ? |
| PCB | 1 | SKS64 PCB order from JLCPCB, PCBWAY, or other. | |

Female Contacts and ic sockets:

SKS64: J3 socket strips and C64:24pin socket:

SS-112-TT-1C / 200-SS112TT1C (lead dia 0.64, total length 11.5, pin length 6.60)

SS-112-TT-2 / 200-SS112TT2 (lead dia 0.51, total length 7.62, pin 3.18mm)

TS-112-T-AA / 200-TS112TAA

TS-112-T-A / 200-TS112TA

kjøp alle. TT-2 virker som ikke bygger så mye høyde.

kjøper også attiny 25 45 og 5x 85.

kjøper diverse ic socket DIP-8.

Diverse pin header list 538-22-28-8083

Wiring BOM

| Ref | Qty | Description / Value | Mouser No. |
|-----|-----|---|--|
| 1 | 1 | LED 5mm Diffused RGB Common Cathode | 604-WP154A4SUREQBFZW 743-HV-5RGB25 743-HV-5RGB60 |
| 2 | 6 | Molex Pre-Crimped Lead SL Female-to-SL Female, 300mm, 22 AWG | 538-79758-0011 |
| 3 | 1 | Molex SL Crimp Housing, Single Row, Version A, Non-polarized, 4 Circuits, Black | 538-50-57-9004 |

C64 Switchless Kernal Switcher V1.20 - User Guide

| | | | |
|---|---|---|----------------------|
| 4 | 1 | Molex SL Crimp Housing, Single Row, Version A, Non-polarized, 3 Circuits, Black | 538-50-57-9003 |
| 5 | 1 | Heat Shrink Tubing and Sleeves 3/64", Black, Stick Price Per Foot | 650-RNF-100-3/640STK |
| 6 | 1 | Heat Shrink Tubing and Sleeves 1/4 6IN 20PC BAG BLACK | 562-Q2Z14-6N20 |
| 7 | 1 | Headers & Wire Housings 3P AMPMODU II STIFT LEI (breakaway pinlist) | 571-826648-3 |
| | | | |
| | | | |
| | | | |

300 mm 24-30AWG dupont female-female