Virtual Power Plant server technical documentation

Ubbe Welling ubbe@eng.au.dk

July 4, 2016

Contents

1	Overview			
	1.1	Purpose	2	
	1.2	Functionality	2	
2	Configuration			
	2.1	Main configuration file	4	
	2.2	Data provider: measurements from FTP	6	
	2.3	Data provider: measurements from RabbitMQ	10	
3	How to run			
	3.1	Installation	12	
	3.2	Scripts	12	
4	Database design 14			
	4.1	Tables	16	
	4.2	CIM compliance	17	
5	Application design 18			
	5.1	Static structure	18	
	5.2	Runtime behavior	22	

Overview

This report provides technical documentation of the VPP software located in https://github.com/comsyslab/vpp. To use the software, read chapters 1, 2 and 3. To modify/extend the software, read chapters 4 and 5 as well.

1.1 Purpose

The purpose of the Virtual Power Plant (VPP) platform is to:

- receive measurements from sensors deployed in a building.
- receive current and forecast information from external sources on grid load, electricity price and more.
- process measurements and external information to make decisions on power usage.
- actuate devices deployed in a building to implement above mentioned decisions.

In the current state, only the two first bullets (i.e. data collection) have been implemented. In the design document located in https://github.com/comsyslab/vpp/blob/master/documentation/design_doc/main.pdf, the original ideas and visions for further extensions to the system are documented. Note that the technical information in the design document is not up-to-date. The present document is intended to provide a comprehensive description of the software in its current state (May 31, 2016).

1.2 Functionality

The system can receive measurement and prediction data from data providers via FTP, SFTP and RabbitMQ. There is thus no direct connection to physical sensors.

Received data is stored in a local database which employs a *Rolling Window* scheme: Data is put into subtables according to timestamp (one subtable for e.g. every 24 hours), and when a subtables ages beyond the configured time limit (e.g. 5 days), the contents of it is transferred to the external data warehouse database and the table is deleted. This enables deployment of the VPP software on machines with limited disk size.

Configuration

2.1 Main configuration file

The main configuration file is vpp/vpp_server/resources/config.ini. In the repository, a config.ini.default is provided. It is shown and explained below:

```
[DB]
user=[FILL IN]
password=[FILL IN]
host=[external address of localhost]
database=vpp
measurement_partition_period_hours=24
rolling_window_length_days=7

[DB-DW]
enabled=False
user=[FILL IN]
password=[FILL IN]
host=[host.sub.domain.dk]
database=vpp_dw

[LOG]
level=DEBUG
```

2.1.1 Section [DB]

Section [DB] specifies how to connect to the Rolling Window DB that is intended to run on the same machine as the VPP application. Note that it is perfectly possible to run the database on a different machine if desired.

host This should be the external address (hostname or IP) of the machine running the database - usually the same as is running the application. While

writing localhost is sufficient for the application to access the DB, this address is also used by the data warehouse to extract data for export, and therefore it must be the machine's actual network address. Port 5432 (the PostgreSQL default) is assumed. Note that this port must be accessible from the data warehouse machine, as the data export SQL is sent to and executed in the data warehouse DB, connecting back to the main DB.

database The name of the database to connect to.

measurement_partition_period_hours Incoming measurements and predictions will be stored in subtables covering time intervals of the number of hours specified here. Should be a divisor of 24 (e.g 24, 12, 6). Behavior with other values has not been tested. The partitioning happens with respect to UTC, not the local time of the server.

rolling_window_length_days The number of days to retain subtables with measurements and predictions before exporting the data to data warehouse and deleting the tables. The current day is not counted, meaning that a value of 1 will cause data received during June 10th to be exported sometime during June 12th, since the last data of June 10th will at that time be at least 24 hours old. Behavior with value 0 has not been tested.

2.1.2 Section [DB-DW]

enabled If true, data export to data warehouse and subsequent local deletion will be performed. If false, data will be retained in the local database forever. In this case, configuration of user, password, host and database name may be omitted, and the rolling_window_length_days value above is irrelevant. Values are not case sensitive.

2.1.3 Section [LOG]

level Specifies the level of logging that will be output in vpp_server/logs/console.log. Valid values (case sensitive): DEBUG, INFO, WARNING, ERROR, FATAL, CRITICAL (the last two are equal) and integer values. DEBUG is level 10. Setting value 9 will add messages on files skipped when fetching from FTP servers. The log level can be changed while the application is running and should take effect within 5 seconds.

No file rotation is performed, which can cause log file to grow very large if the log level is set to INFO or lower and a high volume of messages is received. It is recommended to set level WARNING, in which case any problems will be reported, but nothing else.

Note that the log file is cleared on application startup.

2.2 Data provider: measurements from FTP

The retrieval of data is configured by placing a .ini file for each data source in folder vpp_server/resources/data_providers.

File ftp_energinet_online.ini:

```
[data_provider]
adapter = vpp.data_acquisition.adapter.ftp_adapter.FTPAdapter
interpreter = vpp.data_acquisition.interpreter.energinet_online_interpreter.
processor = vpp.data_acquisition.processing_strategy.DefaultMeasurementProce
id_prefix = energinet
[fetch]
interval = 600
adapter_date_strategy = vpp.data_acquisition.adapter.adapter_date_strategy.D
last_fetch_adapter = 2016-05-27T00:00:00
fetch_again_when_date_equal = True
last_fetch_interpreter = 2016-05-27T14:55:00
[ftp]
host = 194.239.2.256
username = ftp000123
password = ...
port = 21
remote_dir = Onlinedata
file_pattern = ([0-9]{4})([0-1][0-9])([0-3][0-9])_onlinedata \txt
encoding = iso-8859-1
[averaging]
enable = True
id_patterns = energinet_1; energinet_2; energinet_3; energinet_\%
intervals = 900; 1800; 3600; 7200
```

2.2.1 Section [data_provider]

This section configures the protocol for obtaining data, and how they should be interpreted and stored. The adapters, interpreters and processors (listed below) can be combined in any way, but the interpreter obviously must be matched to the data fetched/received by the data provider. It also would be pointless to combine a PredictionProcessingStrategy with a data source and interpreter that provides measurements.

adapter This specifies which data adapter to use for retrieving data from the provider. Available adapters:

```
vpp.data_acquisition.adapter.ftp_adapter.FTPAdapter
[...].ftp_adapter.SFTPAdapter
```

[...].rabbit_mq_adapter.RabbitMQAdapter

The adapter will handle communication with the provider and extract a raw text body and pass it to the data interpreter.

interpreter This specifies which data interpreter to use for parsing the received raw text messages and transforming them to an internal data format that is then passed to the processor responsible for storing measurements (or predictions) in the database. Available interpreters:

- [...].energinet_co2_interpreter.EnerginetCO2Interpreter
- [...].nordpoolspot_interpreter.NordpoolspotInterpreter
- [...].thor_interpreter.ThorInterpreter
- [...].nrgi_abs_interpreter.NrgiAbsInterpreter
- [...].nrgi_delta_interpreter.NrgiDeltaInterpreter
- [...].grundfos_data_interpreter.GrundfosDataInterpreter
- $[\ldots]. {\tt smartamm_data_interpreter.SmartAmmDataInterpreter}$

processor Responsible for storing measurements or predictions in the database.
Available processors:

vpp.data_acquisition.processing_strategy.DefaultMeasurementProcessingStrategy
vpp.data_acquisition.processing_strategy.DefaultPredictionProcessingStrategy

id_prefix Among the data received will be sensors (logical sources of measurements) and endpoints (logical sources of predictions). The id_prefix specifies a prefix for the database ID of the sensors and endpoints which makes it easier to distinguish them and their measurements/predictions in the database.

2.2.2 Section [fetch]

Since the FTPAdapter must actively fetch data, this section is required.

interval In seconds. Every time this interval passes, the FTPAdapter will connect and fetch data which is then processed and stored. The time to next fetch is measured from launch, not finish, meaning that the interval will be maintained precisely as long as the fetch and processing completes before the next launch.

adapter_date_strategy Strategy for deciding whether a file should be fetched, based on the date extracted from the file name. Available strategies:

vpp.data_acquisition.adapter.adapter_date_strategy.DefaultAdapterFileDateStrategy
vpp.data_acquisition.adapter.adapter_date_strategy.C02FileDateStrategy

The DefaultAdapterFileDateStrategy will fetch a file if the date is later (or equal to, depending on the value of fetch_again_when_date_equal) than the value of last_fetch_adapter.

CO2FileDateStrategy will fetch if the date extracted from the filename is in the future compared to the time of execution. This is useful for the CO2 predictions from Energinet.

fetch_again_when_date_equal Specifies whether files with timestamp identical to the value of last_fetch_adapter should be fetched. Setting this to True will enable repeated retrieval of the same file(s), which can be useful if file contents are updated.

last_fetch_adapter Updated by the data adapter when fetching files to the latest timestamp extracted from the fetched filenames. If configuring a new data provider, set this to a value close to the current time to avoid fetching many old files.

last_fetch_interpreter Updated by the data interpreter to the timestamp of the latest processed measurement/prediction. This is relevant in the case the same file is continuously updated with new data.

2.2.3 Section [ftp]

host, username, password and port should be self-explanatory.

remote_dir is the subdirectory to access on the FTP server. Use forward slashes.

file_pattern This should be a Python regex containing up to four groups which will match year, month, day and hour (in that order). Only year is required - the others are optional. Only files matching this pattern will be considered for fetching. The extracted timestamp is compared against the value of last_fetch_adapter to determine if the file should be fetched.

encoding Specifies the encoding of the files to be fetched. Tested values are utf-8, ascii and iso-8859-1.

2.2.4 Section [averaging]

enable If True or true, data transferred to data warehouse will be averaged over the intervals specified below in order to reduce data size in data warehouse. If not, entries will be bulk copied as-is.

id_patterns List of patterns of sensor/endpoint IDs to perform averaging for. Patterns are used in a PostgreSQL LIKE comparison. The wildcard % must be written twice due to Python's string parsing. Thus, to match all sensors starting with prefix energinet, write energinet%. Patterns should be separated with semicolon; Every pattern should have a corresponding interval in the

intervals list below. The patterns are processed in order, so it makes sense to add a catch-all pattern at the end of the list.

intervals Semicolon-separated list of time intervals in seconds, each interval corresponding to the pattern with the same position in the list above.

2.3 Data provider: measurements from RabbitMQ

```
File rabbitmq_ecosense_smartamm.ini:
[data_provider]
adapter =
vpp.data_acquisition.adapter.rabbit_mq_adapter.RabbitMQAdapter
interpreter =
\verb"vpp.data_acquisition.interpreter.smartamm_data_interpreter.SmartAmmDataInterpreter.smartamm_data_interpreter.SmartAmmDataInterpreter.smartamm_data_interpreter.SmartAmmDataInterpreter.smartamm_data_interpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmDataInterpreter.SmartAmmD
processor =
vpp.data_acquisition.processing_strategy.DefaultMeasurementProcessingStrateg
id_prefix = smartamm
[exchange]
username = user123
password = 12345
serverAddressList = ecosensemq02.cs.au.dk
port = 5672
sslConnection = False
exchangeName = ecosense-exchange
exchangeDurable = True
exchangeType = topic
[queue]
name = vpp-listener-queue-new
routingKeys = smartamm.#
durable = False
exclusive = False
autoDelete = True
[ssl_options]
cacerts = /etc/rabbitmq/ssl/tesca/cacert.pem
certfile = /etc/rabbitmq/ssl/client/cert.pem
keyfile = /etc/rabbitmq/ssl/client/key.pem
cert_reqs = verify_peer
fail_if_no_peer_cert = True
[averaging]
enable = False
id_patterns = smartamm%%RMSCurrent%%; smartamm%%ActivePower%%;
intervals = 60; 120
```

2.3.1 Section [exchange]

serverAddressList The RabbitMQ exchange server to connect to. The "List" is misleading. Only a single host should be specified.

 ${\tt sslConnection}$. If ${\tt True},$ the Pika library will enable SSL when connecting. Not tested.

For the remaining configuration, look at https://www.rabbitmq.com/getstarted. html to understand how RabbitMQ works.

2.3.2 Section [queue]

Specifies the RabbitMQ queue to connect to in the exchange with various parameters. Again: Look at https://www.rabbitmq.com/getstarted.html to understand how RabbitMQ works.

2.3.3 Section [ssl_options]

This section is not parsed, regardless of sslConnection seeting above.

How to run

3.1 Installation

- Install python 2.7.11
- Setup postgresql DB. Create VPP DB with suitable user access
- Clone from https://github.com/comsyslab/vpp.git
- Windows:
 - Install http://www.microsoft.com/en-us/download/details.aspx? id=44266 (required for pip install)
 - Install pip
 - Install Psycopg2 manually for windows with exe from https://github.com/nwcell/psycopg2-windows
 - Install win32con from http://sourceforge.net/projects/pywin32/files/pywin32/Build%20220/
- Linux: pip install -r vpp_server/resources/requirements_psycopg2.txt
- pip install -r vpp_server/resources/requirements.txt

3.2 Scripts

The various scripts are placed in vpp_server/run and explained below. All scripts exist in a Linux (.sh) and Windows (.bat) version.

clear_db.sh Use with care. Connects to the database specified in the [DB] section of config.ini and drops and recreates the entire database schema without prompting for confirmation. This can be used to initialize a new database.

clear_db_dw.sh Use with care. Identical to clear_db.sh above, but connects
to the database specified in the [DB-DW] section of config.ini. Note that this
may contain data accumulated over a long time.

start_server.sh Launches the VPP server.
Logging is output in vpp_server/logs/console.log.

stop_server.sh Stops a running server. This is implemented in a very primitive fashion: The script creates a file named stop which the running server scans for every 5 seconds.

Database design

The database should reside in a PostgreSQL DBMS. The schema is shown in figure 4.1 and explained in the following:

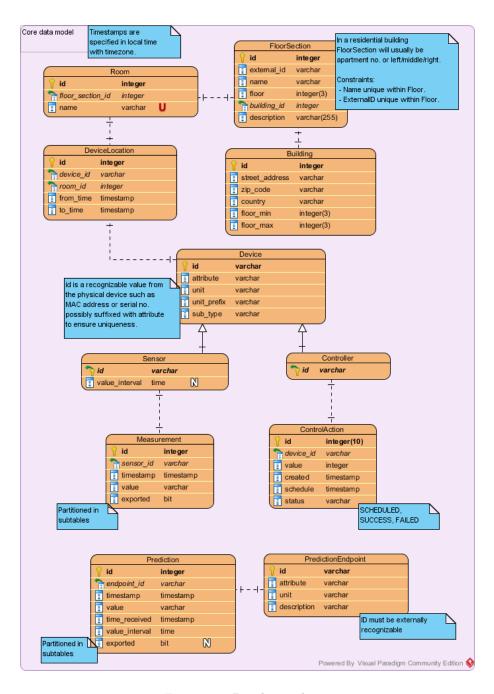


Figure 4.1: Database schema

4.1 Tables

4.1.1 Devices and measurements

Device Entries in Device correspond to physical control and sensor devices, with the modification that we store one logical device for each function of the physical device. Whether a device is a sensor or a controller is specified by its presence in table Controller or Sensor. Columns Attribute, Unit and UnitPrefix (such as milli) are for sensors specification of the incoming measurement values, while they for controllers specify the format of values to send to the controller when actuating it.

Sensor Table **Sensor** specifies an optional property **ValueInterval** which is used when measurement values are aggregated over a limited time interval (such as 15 minutes).

Measurement Contains a row for each measurement received from a sensor. It simply consists of a value, a timestamp and a sensor_id, which enables interpretation of the value. Column exported indicates whether a row has been exported to data warehouse or not.

The Measurement table is partitioned into subtables for each e.g. 24 hours. Querying the Measurement table will automatically retrieve data from all its subtables, while insertion must happen directly to the correct subtable. Each subtable has a constraint on the timestamp, preventing measurements from being entered in the wrong subtable.

ControlAction Table ControlAction is intended to contain scheduled and past commands for controllers. An action is simply specified by a value which can be interpreted via the reference into table Controller and Device. Column schedule specifies the time for carrying out the action, and status indicates if execution is still pending or has been completed. Partitioning this table in the same way as table Measurement could be considered. In the current implementation of the VPP software, the Controller and ControlAction tables will always be empty.

Building, FloorSection, Room The physical properties of a building are modeled in these tables. A building consists of an integer range of floors. Each floor consists of FloorSections which in most cases will be equivalent to apartments. The generalized term FloorSection is intended to support other types of buildings where designations such as "South wing" or other may be desired. Finally, a floor consists of named Rooms. We do not expect to obtain device locations with a higher degree of accuracy than individual rooms.

DeviceLocation This table maps Devices to Rooms for specific time periods, indicating that devices may be moved around over time.

4.1.2 Predictions

While the data stored for predictions is quite similar to those for measurements, we have chosen to store them separately because of the fundamentally different semantics.

PredictionEndpoint A logical source of predictions of one type. Specifies the attribute and unit of the incoming values and provides an optional description.

Prediction Actual prediction values. timestamp indicates the time for which the value applies, while time_received indicates when the prediction was received from the provider. This is relevant since multiple predictions for the same future point in time may be received over time. Some values actually cover an interval (for instance predicted power consumption for a given day of 24 hours), which is specified in column value_interval. This table is partitioned in same way as table Measurement.

4.2 CIM compliance

Units, unit prefixes, timestamps and time durations are formatted to agree with CIM

Application design

The VPP application is implemented in object-oriented Python. The static structure and runtime behavior is det

5.1 Static structure

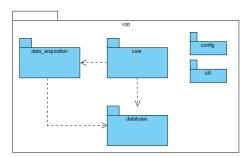


Figure 5.1: Overview of packages

The application is roughly structured in a layered architecture with the database as the bottom layer and the core and data_acquisition packages as the domain layer. A service package could be added as the top layer, providing an external interface. The packages are explained in detail below.

Package vpp.core

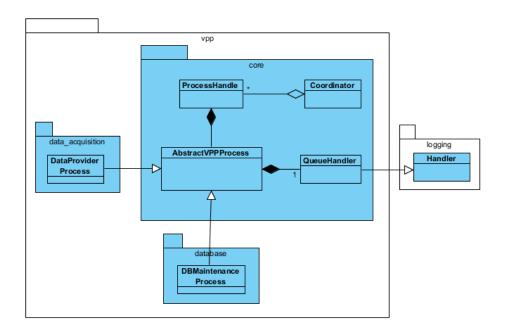


Figure 5.2: Package core

Coordinator is called by start_server.sh and launches the entire application. Mainly, it instantiates the DataProviderProcess and the DBMaintenanceProcess. The processes are each wrapped in a ProcessHandle which handles process launch and termination and receives log messages from the underlying AbstractVPPProcess. That is, all log messages are communicated (using Python interprocess message queues) to the main process which outputs to logs/console.log.

${\bf Package} \ {\tt vpp.data_acquisition}$

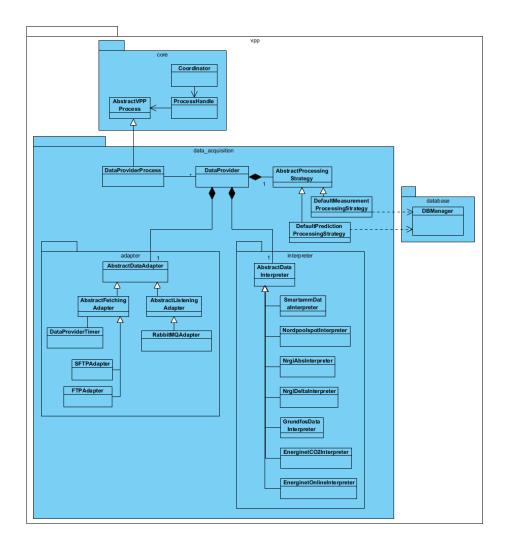


Figure 5.3: Package data_acquisition

This package contains the framework for connecting to sources of measurement and prediction data. The DataProviderProcess launches a DataProvider for each configured .ini-file as described in 2.2. Each DataProvider instance employs a suitable DataAdapter. The FetchingAdapters employ a DataProviderTimer that will wake up according to configuration and execute data retrieval and processing. The ListeningAdapter will launch a thread that continuously listens for messages and processes them as they are received. Thus, each data provider does all processing in its own thread.

The DataAdapters handle communication with the data source and extract a raw string that is then passed to the configured DataInterpreter. The interpreter parses the string and outputs data as Python dictionaries to the ProcessingStrategy which interacts with a DBManager to store the data.

Package vpp.database

This package contains the code that interfaces directly with the database.

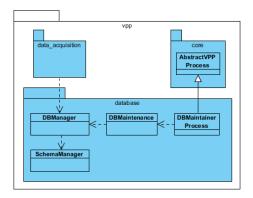


Figure 5.4: Package database

DBMaintainerProcess wakes up in accordance with the period specified in config.ini and instantiates DBMaintenance that runs maintenance on the database, implementing the Rolling Window strategy.

DBManager provides an interface to the database. It relies on SchemaManager which implements initialization of the database schema as well as creation and lookup of subtables for the Rolling Window scheme. The measurement and prediction tables and their subtables are implemented directly in SQL, but the rest of the schema is implemented using the object-relational mapper (ORM) framework SQLAlchemy.

5.2 Runtime behavior

Separate Python processes are deployed to enable concurrent processing. Using processes instead of threads is necessary to fully utilize multiple cores, since Python employs a *Global Interpreter Lock* which prevents threads within the same Python interpreter from executing concurrently. Using processes mitigates this as each process will run with its own interpreter. For this prototype, the multiprocessing could probably have been omitted in favor of simpler multithreading since CPU load has not been an issue at all.

The runtime creation of processes within the main server application is shown below:

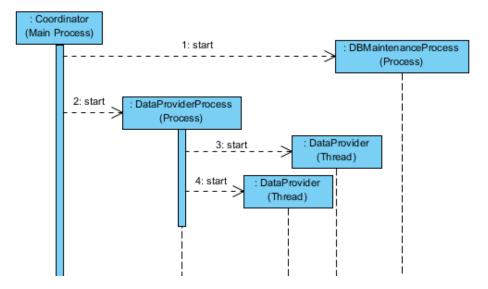


Figure 5.5: Simplified sequence diagram of process and thread creation

In the diagram above, the ProcessHandle class is omitted for clarity.

5.2.1 Data acquisition

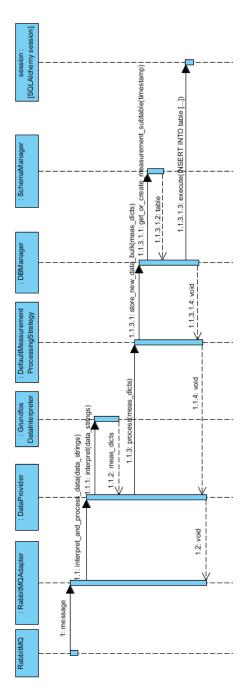


Figure 5.6: Sequence diagram of receiving measurements from a RabbitMQ