
WICED WFA Sigma DUT Endpoint

Requirements

A possible setup for a Sigma test bed that includes WICED is shown below. Note that this is a simplified diagram and that IP addresses may change depending on the scripts from Wi-Fi..

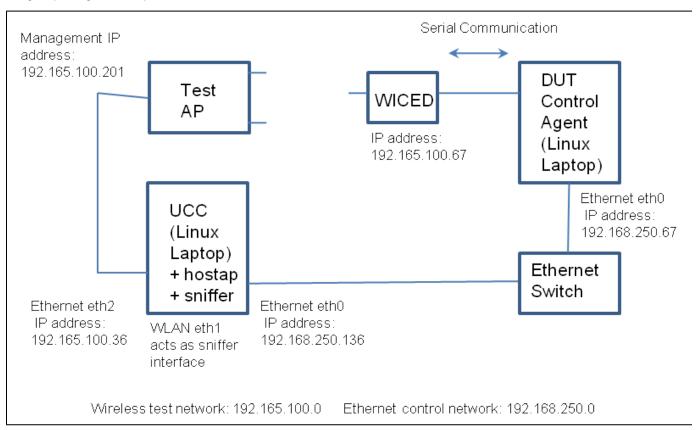

Components of the WICED Sigma DUT Endpoint

The WICED Sigma DUT Endpoint consists of:

- WICED board
- The sigma_dut application that runs on the WICED board (see the apps/test/sigma_dut directory)
- Ubuntu controller laptop that connects to the Wi-Fi test control network via Ethernet and to WICED via USB
- dut_ca.py script that runs on the controller laptop and which relays commands from Wi-Fi's UCC (overall test manager) to WICED and relays responses from WICED back to the UCC. This script can be found in the apps/test/sigma_dut/dut_ca_scripts directory.

Installing the WICED Sigma DUT Endpoint

These steps have been tested with Ubuntu 11.x. There is a shell script in the apps/test/sigma_dut/dut_ca_scripts directory that includes these steps.

1. Configure the laptop Ethernet port for the test control network (assuming that 192.168.250.40 is the address of the DUT laptop on the control network):

```
$ sudo ifconfig eth0 down
$ sudo ifconfig eth0 192.168.250.40 netmask 255.255.0.0 up
```



2. Before plugging the WICED board into the USB port of the Ubuntu laptop check which USB ports are already initialised:

```
$ sudo ls -l /dev/ttyUSB*
```

3. Then plug the WICED board into the laptop and load the ftdi_sio driver using modprobe with the Broadcom vendor ID and WICED product ID:

```
$ sudo modprobe ftdi_sio vendor=0xa5c product=0x43fa
```

4. dmesg, or Is -I /dev/ttyUSB*, may be used to find which two ttyUSB ports have been assigned to WICED:

```
$ dmesg

[789.529180] usb 2-1: Detected FT2232H

[789.529183] usb 2-1: Number of endpoints 2

[789.529185] usb 2-1: Endpoint 1 MaxPacketSize 512

[789.529187] usb 2-1: Endpoint 2 MaxPacketSize 512

[789.529189] usb 2-1: Setting MaxPacketSize 512

[789.529690] usb 2-1: FTDI USB Serial Device converter now attached to ttyUSB1

[789.529719] usbcore: registered new interface driver ftdi_sio

[789.529721] ftdi_sio: v1.6.0:USB FTDI Serial Converters Driver
```

If there were no USB ports prior to loading the driver then WICED will be assigned /dev/ttyUSB0 and /dev/ttyUSB1. The second port will be used by the dut_ca.py script.

Orienting Your WICED Endpoint

To get the best performance from your WICED board, orient the long axis of the board at right angles to the AP antenna array:



Maintain 1.5 to 2m distance between the AP and WICED.

Test in an anechoic shielded room if possible.

Running the WICED Sigma DUT Endpoint Script

- 1. Copy the dut_ca.py script to a convenient directory
- 2. Run the script with the --help option to see the help menu:



```
lab@lab-Vostro-1520:~/dev/Wifi-Cert/wiced_dut_ca$ ./dut_ca.py --help
Usage:
    ./dut_ca.py -l <IP address of local interface> -p <port number> -t <terminal> [-b
<baud>] [-h] [--help]
        -l <interface IP address> The IP address of a specific netwrok interface
                                   The port number to listen on
        -p <port number>
        -t <terminal>
                                    Path to a uart terminal device for connecting to
the user UART.
        -b <baud>
                                    Optional bit rate parameter for configuring the
serial port.
       - i
                                     Interactive mode. Use this mode with console
applications.
                                    No timestamping of screen output occurs in this
mode. File output can be timestamped.
                                    Optional output file.
        -o, --output=FILE
                                    Overwrite output file if it already exists.
        -r
                                    Append to output file if it already exists.
        -f[h|f|i|d|b|n]
                                    Format of timestamp: human, float, integer, diff,
float+diff(b), none.
                                    Don't prepend output with a brief banner.
        --help | -h
                                    This help message.
```

3. Run the script specifying only the serial port, leaving the other parameters as defaults (or modify them as required):

```
lab@lab-Vostro-1520:~/dev/Wifi-Cert/wiced_dut_ca$ ./dut_ca.py -t /dev/ttyUSB1 ======== Dec 21 10:26:32 ==========
```

4. Start a test script on the UCC for example:

```
> 11nTest.bat N-5.2.3
```

5. Check that the UCC has connected to the WICED Sigma DUT Endpoint and that the test is running:

```
______
Connection from ('192.168.250.10', 3948)
_____
From UCC> ca_get_version
To UCC< status, RUNNING
To UCC< status, COMPLETE, version, 4.2
From UCC > device_get_info
To UCC< status, RUNNING
To WICED< device_get_info
device_get_info
status, COMPLETE, vendor, Broadcom, model, BCM94319WICED1, version, 1
To UCC< status, COMPLETE, vendor, Broadcom, model, BCM94319WICED1, version, 1
From UCC> device_list_interfaces,interfaceType,802.11
To UCC< status, RUNNING
To WICED< device_list_interfaces,interfaceType,802.11
From WICED> device_list_interfaces,interfaceType,802.11
status, COMPLETE, interfaceType, 802.11, interfaceID, wlan0
To UCC< status, COMPLETE, interfaceType, 802.11, interfaceID, wlan0
From UCC> sta_preset_testparameters,interface,wlan0,supplicant,ZeroConfig
```



BROADCOM CONFIDENTIAL INFORMATION

To UCC< status, RUNNING To WICED< sta_preset_testparameters,interface,wlan0,supplicant,ZeroConfig From WICED> sta_preset_testparameters,interface,wlan0,supplicant,ZeroConfig status, COMPLETE To UCC< status, COMPLETE From UCC> sta_get_info,interface,wlan0 To UCC< status, RUNNING To WICED< sta_get_info,interface,wlan0 From WICED> sta_get_info,interface,wlan0 status, COMPLETE, vendor, Broadcom, model, BCM94319WICED1, version, 1, firmware, 1.1. DEVELOPMEN T, mac, 70:F3:95:8D:4F:DF To UCC< status, COMPLETE, vendor, Broadcom, model, BCM94319WICED1, version, 1, firmware, 1.1. DEVELOPMEN T.mac.70:F3:95:8D:4F:DF From UCC> sta_set_psk,interface,wlan0,ssid,wpa2,passphrase,12345678,encpType,aes-ccmp,keymgmttyp To UCC< status, RUNNING To WICED< $sta_set_psk, interface, wlan0, ssid, wpa2, passphrase, 12345678, encpType, aes-ccmp, keymgmttyp, according to the stauth of th$ From WICED> sta_set_psk,interface,wlan0,ssid,wpa2,passphrase,12345678,encpType,aes-ccmp,keymgmttyp e,wpa2 status, COMPLETE To UCC< status, COMPLETE From UCC> sta_set_ip_config,interface,wlan0,dhcp,0,ip,192.165.100.40,mask,255.255.0.0 To UCC< status, RUNNING To WICED< sta_set_ip_config,interface,wlan0,dhcp,0,ip,192.165.100.40,mask,255.255.0.0 sta_set_ip_config,interface,wlan0,dhcp,0,ip,192.165.100.40,mask,255.255.0.0 status, COMPLETE To UCC< status, COMPLETE From UCC> sta_associate,interface,wlan0,ssid,wpa2 To UCC< status, RUNNING To WICED< sta_associate,interface,wlan0,ssid,wpa2 From WICED> sta_associate,interface,wlan0,ssid,wpa2 status, COMPLETE



BROADCOM CONFIDENTIAL INFORMATION

```
To UCC< status, COMPLETE
... etc ...
```

6. After the test has completed, and if the test has failed, the WICED board can be reset by pressing the white reset button.

