

# Controller assembly instructions

C.Y. TAN

12/31/15


# License

**Copyright 2015 C.Y. Tan**


**This document is licensed under Creative Commons Attribution-ShareAlike 3.0 Unported License. To view a copy of this license, visit**

**<http://creativecommons.org/licenses/by-sa/3.0/>**

# Controller board

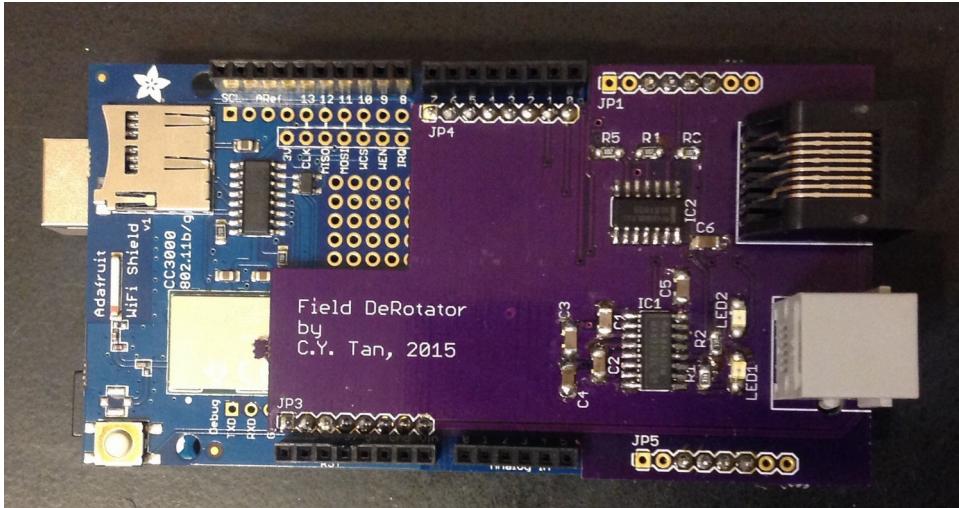


The controller board is soldered onto the WiFishield and inserted into the MEGA2560 board.

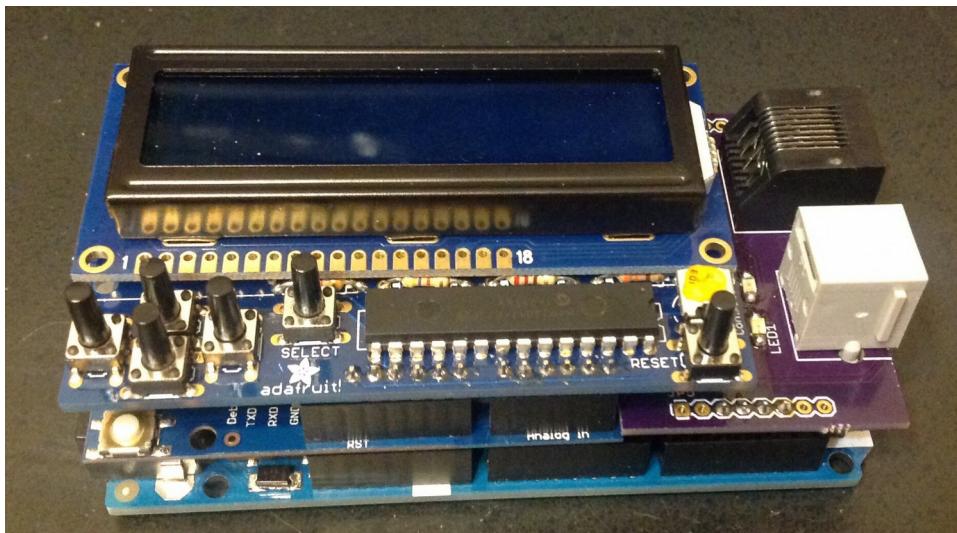

Then the LCD shield is inserted above the WiFishield


# Hall switch

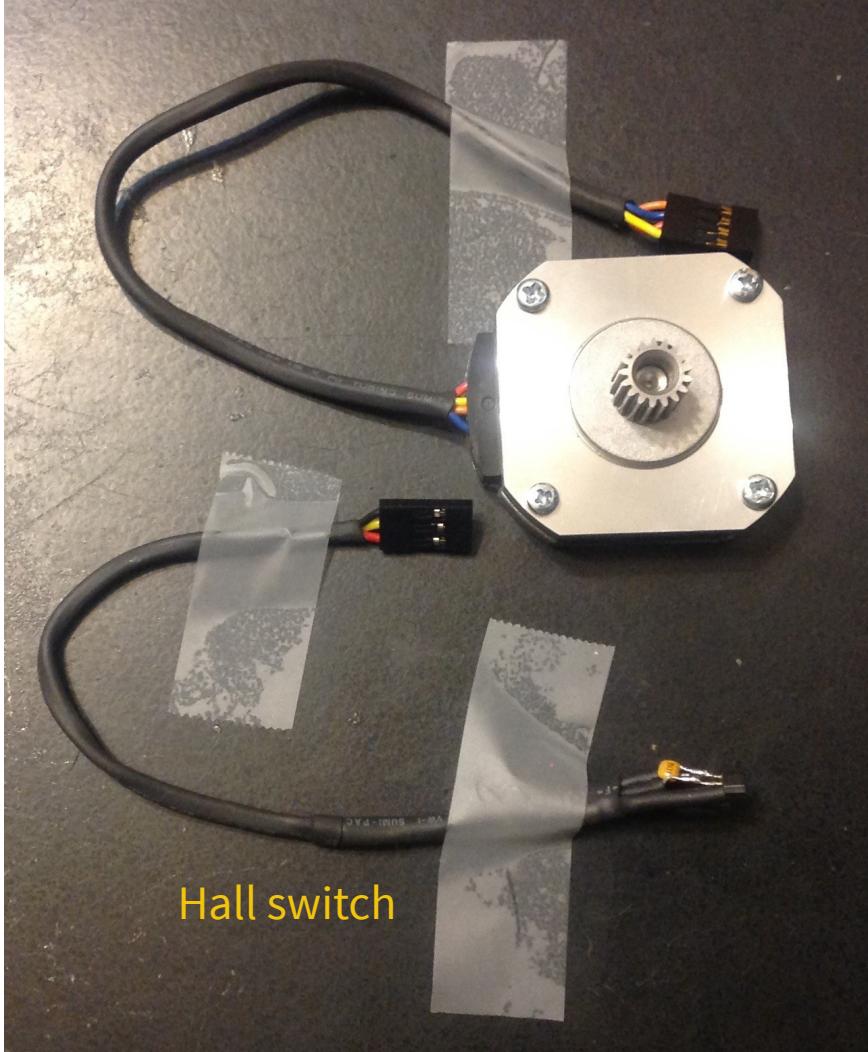

The Hall switch is soldered to wires and socketed.


A decoupling capacitor 0.1 uF is soldered directly to pins 1 and 2 of the Hall switch.

# Hall switch taped to the cover

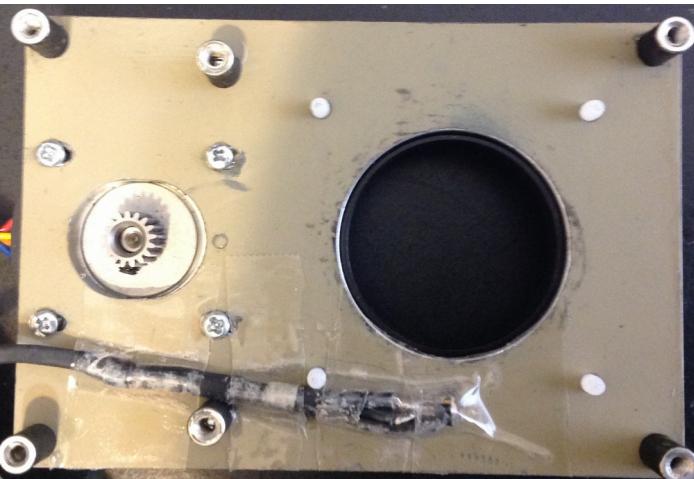


Gorilla tape is used to tape the Hall switch on the cover. Since it is transparent, you can see the orientation of the Hall switch and its location.

The cable from the Hall switch is slipped through the other cover's slot.

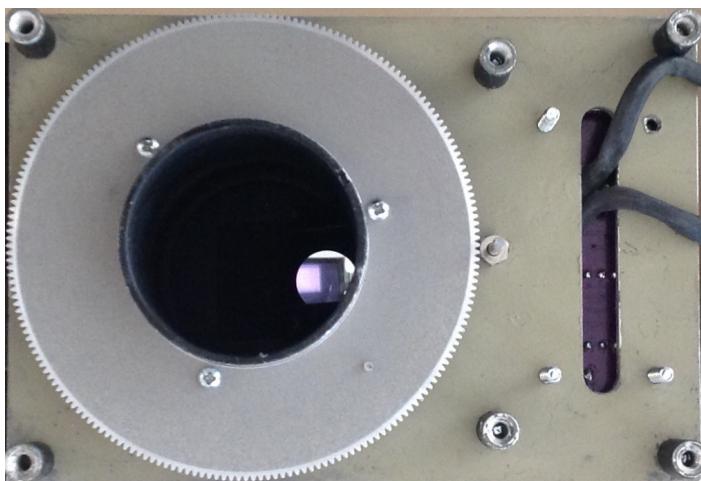


# Taping the Hall switch to the shell

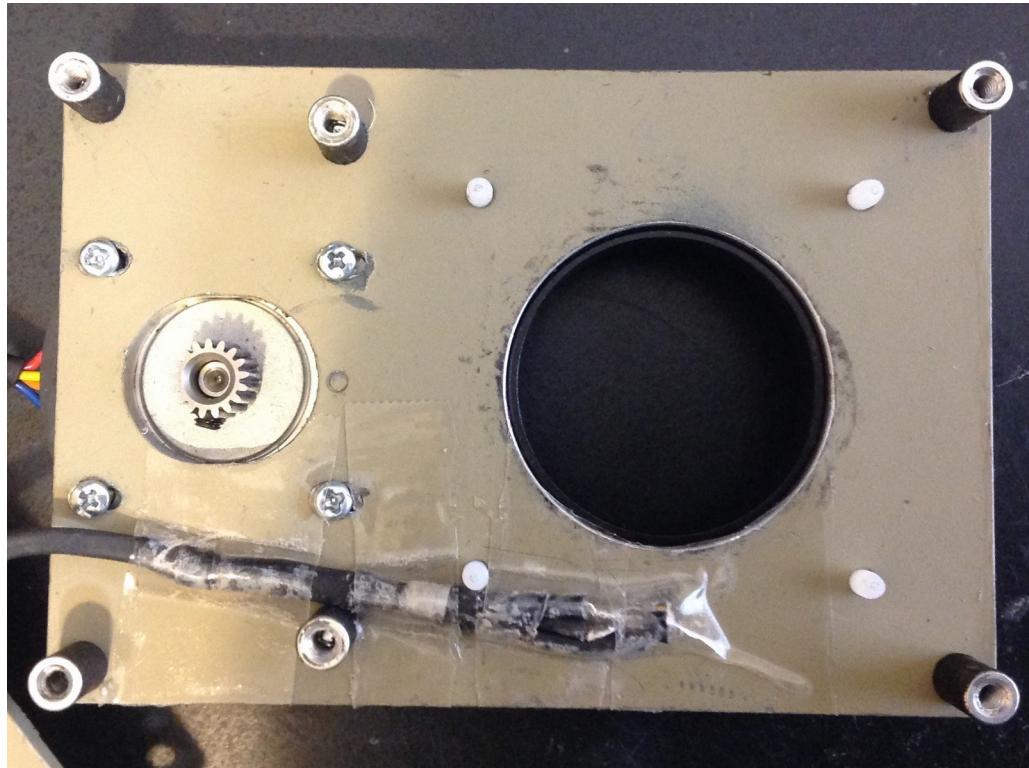

Only gorilla clear tape is strong enough to hold the Hall switch and cables in the correct orientation. The picture shows the residue of the other tapes like duct tape. The clear tape helps to place the Hall switch at the correct location that I have marked on the shell.

# Assembling the slice case

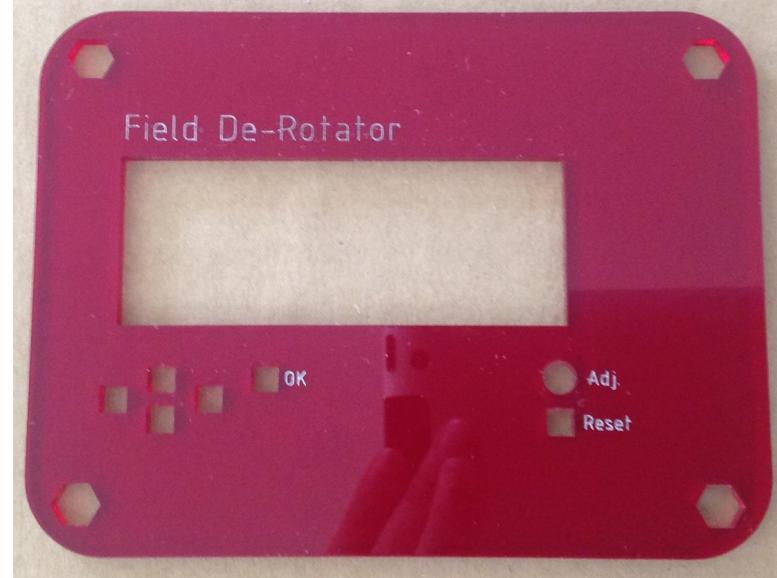

The front cover of the sliced case has letterings that have to be brought out by filling in the grooves with silver leaf rubbing compound. Some of silver leaf is smeared onto the letterings and then wiped off. A little bit of acetone helps with the wipe off.


# Making the push button switches



Pushbuttons on the controller are made by supergluing two cubes with holes together. These cubes with holes come from the same plastic that was laser cut with the other case parts.

This assembly is then superglued to the push button stems. Good thing is that the push button stems rotate, so that they can be easily aligned to the square holes on the case cover.

# Building the case

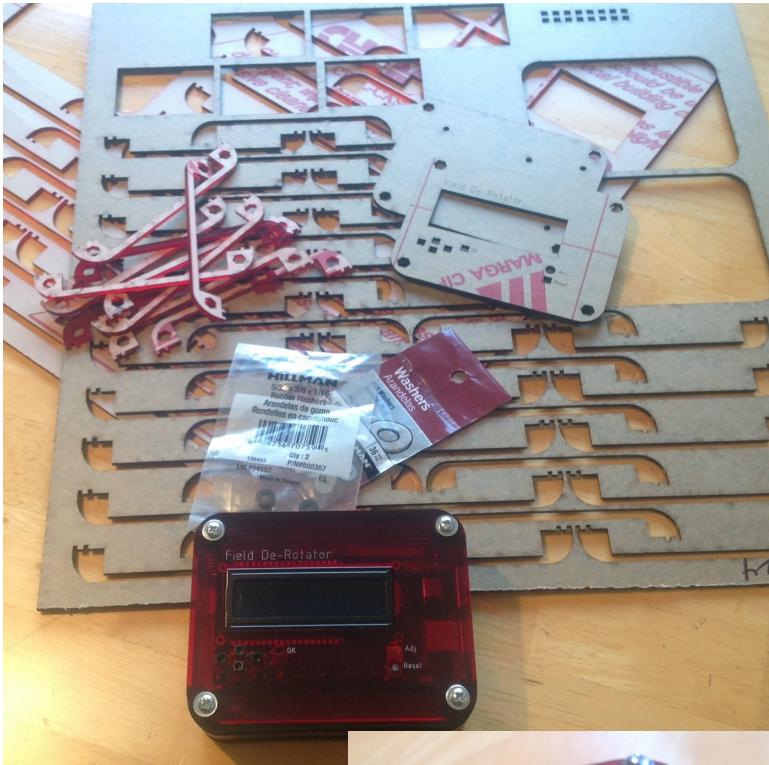


The slice case is assembled with alternating flat and thin slices. The side panels of the case are chosen from 1 of 3 options, each having a different height.

The slices are held together with 4 hex standoffs.

The small excess height of the top cover is made flush to the LCD using 4 rubber washers inserted between the last slice and the top cover.

# Making the driver

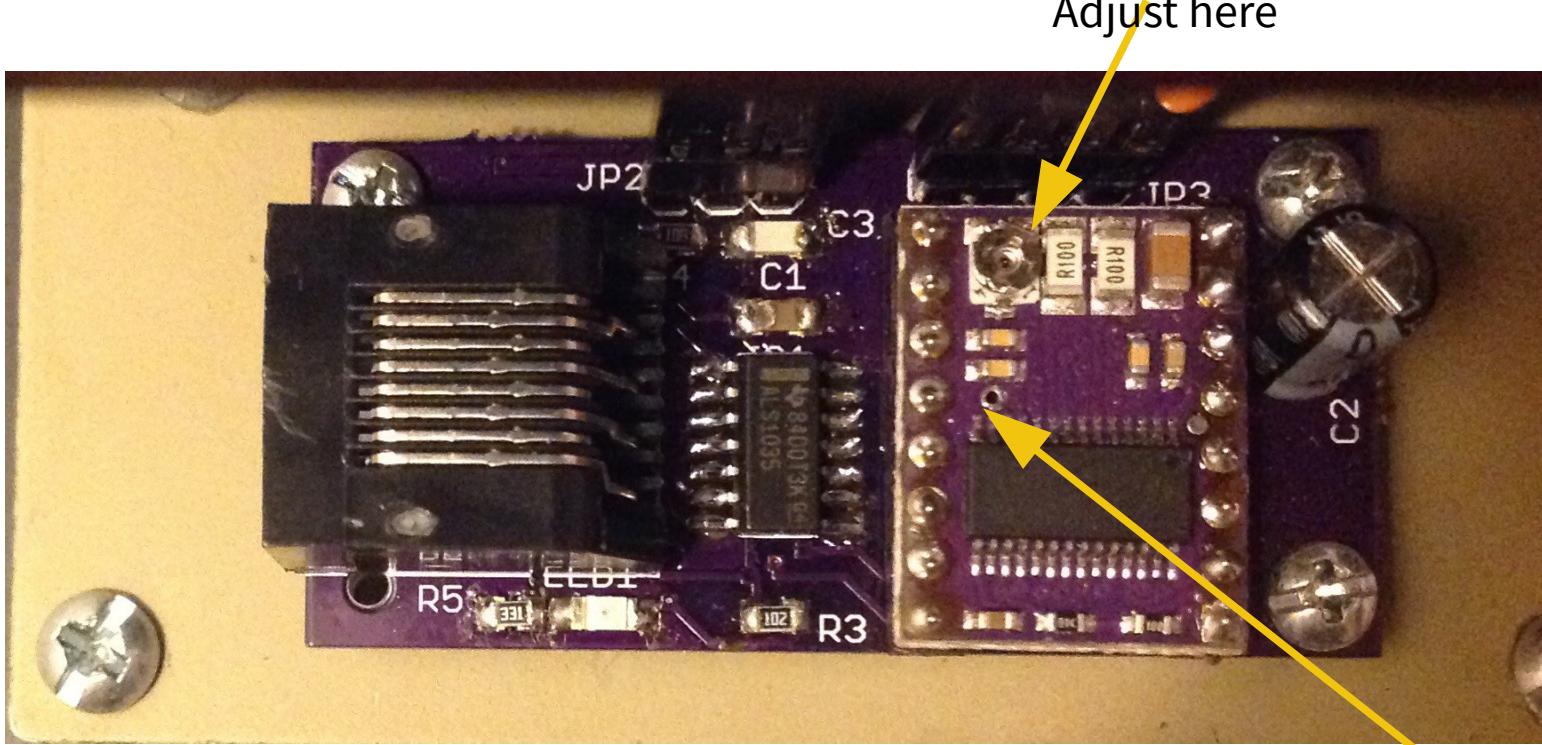

The voltage on the stepper motor driver must be adjusted with the pot. The Pancake Sanyo motor doesn't like 1A max setting. It gets hot and whines a lot. So it has been set to 600 mA max. This corresponds to 0.3 V at the test point. See also <https://www.pololu.com/product/2133>

Measure voltage  
here.

# Done!

The controller is assembled and it is programmed using a USB cable connect to a computer, and the Arduino JAVA GUI. The controller can now be connected to the derotator. See

- [Installing the Field DeRotator](#)
- [Field DeRotator Controller User's Guide](#)

# Adding an LED light

I found that I couldn't see the pushbutton switches during operations, because there's no light :) So, in order to fix this problem I added a red LED light to the enclosure. The circuit is trivial (see below). Power to the red LED comes from the left most pin (GND) and the pin next to it (+5V) on the LED display. And voilà, there is enough light to see the pushbuttons.

